WARNING

Servicing a vehicle can be dangerous. If you have not received service-related training, the risks of injury, property damage, and failure of servicing increase. The recommended servicing procedures for the vehicle in this workshop manual were developed with Mazda-trained technicians in mind. This manual may be useful to non-Mazda trained technicians, but a technician with our service-related training and experience will be at less risk when performing service operations. However, all users of this manual are expected to at least know general safety procedures.

This manual contains "Warnings" and "Cautions" applicable to risks not normally encountered in a general technician's experience. They should be followed to reduce the risk of injury and the risk that improper service or repair may damage the vehicle or render it unsafe. It is also important to understand that the "Warnings" and "Cautions" are not exhaustive. It is impossible to warn of all the hazardous consequences that might result from failure to follow the procedures.

The procedures recommended and described in this manual are effective methods of performing service and repair. Some require tools specifically designed for a specific purpose. Persons using procedures and tools which are not recommended by Mazda Motor Corporation must satisfy themselves thoroughly that neither personal safety nor safety of the vehicle will be jeopardized.

The contents of this manual, including drawings and specifications, are the latest available at the time of printing, and Mazda Motor Corporation reserves the right to change the vehicle designs and alter the contents of this manual without notice and without incurring obligation.

Parts should be replaced with genuine Mazda replacement parts or with parts which match the quality of genuine Mazda replacement parts. Persons using replacement parts of lesser quality than that of genuine Mazda replacement parts must satisfy themselves thoroughly that neither personal safety nor safety of the vehicle will be jeopardized.

Mazda Motor Corporation is not responsible for any problems which may arise from the use of this manual. The cause of such problems includes but is not limited to insufficient service-related training, use of improper tools, use of replacement parts of lesser quality than that of genuine Mazda replacement parts, or not being aware of any revision of this manual.

2007
Mazda CX-9
Wiring Diagram

FOREWORD

This wiring diagram incorporates the wiring schematics of the Mazda CX-9 and available optional equipment. Actual vehicle wiring may vary slightly depending on optional equipment or local specifications, or both.

For proper repair and maintenance, a thorough familiarization with this manual is important, and it should always be kept in a handy place for quick and easy reference.

All the contents of this manual, including drawings and specifications, are the latest available at the time of printing.
As modifications affecting repair or maintenance occur, relevant information supplementary to this volume will be made available at Mazda dealers. This manual should be kept up-to-date.

Mazda Motor Corporation reserves the right to alter the specifications and contents of this manual without obligation or advance notice.

All rights reserved. No part of this book may be reproduced or used in any form or by any means, electronic or mechanical-including photocopying and recording and the use of any kind of information storage and retrieval system-without permission in writing.

Mazda Motor Corporation
HIROSHIMA, JAPAN

APPLICATION:
This manual is applicable to vehicles beginning with the Vehicle Identification Numbers (VIN) shown on the following page.

CONTENTS

TITLE	SECTION
GENERAL INFORMATION	00
ENGINE	01
SUSPENSION	02
DRIVELINE/AXLE	03
BRAKES	04
TRANSMISSION/ TRANSAXLE	05
STEERING	06
HEATER, VENTILATION & AIR CONDITIONING (HVAC)	07
RESTRAINTS	08
BODY & ACCESSORIES	09
ALPHABETICAL INDEX	AI

©2006 Mazda Motor Corporation
PRINTED IN U.S.A., NOVEMBER 2006
Form No. 5681-1U-06K
Part No. 9999-95-009G-07

VEHICLE IDENTIFICATION NUMBERS (VIN)
(CHASSIS NUMBERS)

JM3 TB28C*7# 100001-
JM3 TB28Y*7# 100001-
JM3 TB38C*7# 100001-
JM3 TB38Y*7# 100001-

SYSTEM INDEX

00 GENERAL INFORMATION

R READING WIRING DIAGRAMS
VEHICLE IDENTIFICATION NUMBER (VIN) CODE 2
VEHICLE IDENTIFICATION NUMBERS (VIN) 3
CONTENTS OF WIRING DIAGRAMS 4
GROUND POINTS 5
SYSTEM CIRCUIT DIAGRAM/CONNECTOR DIAGRAM 6
ROUTING DIAGRAM 8
HARNESS SYMBOLS 9
WIRING COLOR CODE 9
SYMBOLS 9
SERVICE WARNING AND CAUTION FOR VEHICLES WITH SRS AIR BAG SYSTEM 12
SERVICE WARNING FOR VEHICLES WITH DISCHARGE HEADLIGHTS 12
ABBREVIATIONS USED IN THIS MANUAL 12
P ELECTRICAL SYSTEM GENERAL PROCEDURES 14

POWER, GROUND & COMMON CONNECTOR

E ELECTRICAL WIRING SCHEMATIC 18
F FUSE BOX 20
C COMMON CONNECTOR LIST 24
G GROUND POINT 34

DATA LINK CONNECTOR

D DATA LINK CONNECTOR 38

01 ENGINE

12 COOLING SYSTEM
WITHOUT TOWING PACKAGE 42
WITH TOWING PACKAGE 46
14 FUEL SYSTEM 50
17 CHARGING SYSTEM 52
19 STARTING SYSTEM 54
20 CRUISE CONTROL SYSTEM 56
40 CONTROL SYSTEM 58

03 DRIVELINE/AXLE

18 4-WHEEL DRIVE
ELECTRONIC AWD CONTROL SYSTEM 84

04 BRAKES

18 DYNAMIC STABILITY CONTROL/ ROLL STABILITY CONTROL 86

05 TRANSMISSION/TRANSAXLE

17 AUTOMATIC TRANSAXLE
EC-AT CONTROL SYSTEM 90

07 HEATER, VENTILATION & AIR CONDITIONING (HVAC)

40 CONTROL SYSTEM
HEATER AND AIR CONDITIONER SYSTEM 94
A/C COMPRESSOR CONTROL 108

08 RESTRAINTS

10 AIR BAG SYSTEM
AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION) 110

09 BODY & ACCESSORIES


12 GLASS/WINDOWS/MIRRORS
REAR WINDOW DEFROSTER (INCLUDES HEATED OUTER MIRROR INFORMATION) 120
POWER WINDOW SYSTEM 122
POWER OUTER MIRROR 134
13 SEATS
SEAT WARMER 136
MEMORY POWER SEAT 138
POWER SEAT 150
LUMBAR SUPPORT SYSTEM 154
14 SECURITY AND LOCKS
POWER LIFTGATE (PLG) SYSTEM 156
IMMOBILIZER SYSTEM 166
KEYLESS ENTRY SYSTEM
WITHOUT ADVANCED KEYLESS SYSTEM 168
WITH ADVANCED KEYLESS SYSTEM 170
15 SUNROOF 180
18 LIGHTING SYSTEMS
HEADLIGHT 182
LICENSE PLATE LIGHT 196
PARKING LIGHT 196
SIDE MARKER LIGHT 196
TAILLIGHT 196
FRONT FOG LIGHT 200
BRAKE LIGHT 202
HIGH-MOUNT BRAKE LIGHT 202
ILLUMINATION LIGHT 204
HEADLIGHT LEVELING SYSTEM 212
BACK-UP LIGHT 214
19 WIPER/WASHER SYSTEM
WINDSHIELD WIPER AND WASHER
WITHOUT AUTO WIPER SYSTEM 216
WITH AUTO WIPER SYSTEM 218
20 ENTERTAINMENT
ACCESSORY SOCKET 224
AUDIO SYSTEM
EXCEPT Bose® TYPE AUDIO 226
Bose® TYPE AUDIO 236
CAR-NAVIGATION SYSTEM 260
REAR ENTERTAINMENT SYSTEM 270
INVERTER 276
22 INSTRUMENTATION/DRIVER INFO.
INSTRUMENT CLUSTER 278
HORN 292
INFORMATION DISPLAY 294
40 CONTROL SYSTEM
BCM (BODY CONTROL MODULE) 298

AI ALPHABETICAL INDEX

ALPHABETICAL INDEX 336

Two digits (section ID) indicated in front of each title are commonly used with the Workshop Manual.

VEHICLE IDENTIFICATION NUMBER (VIN) CODE

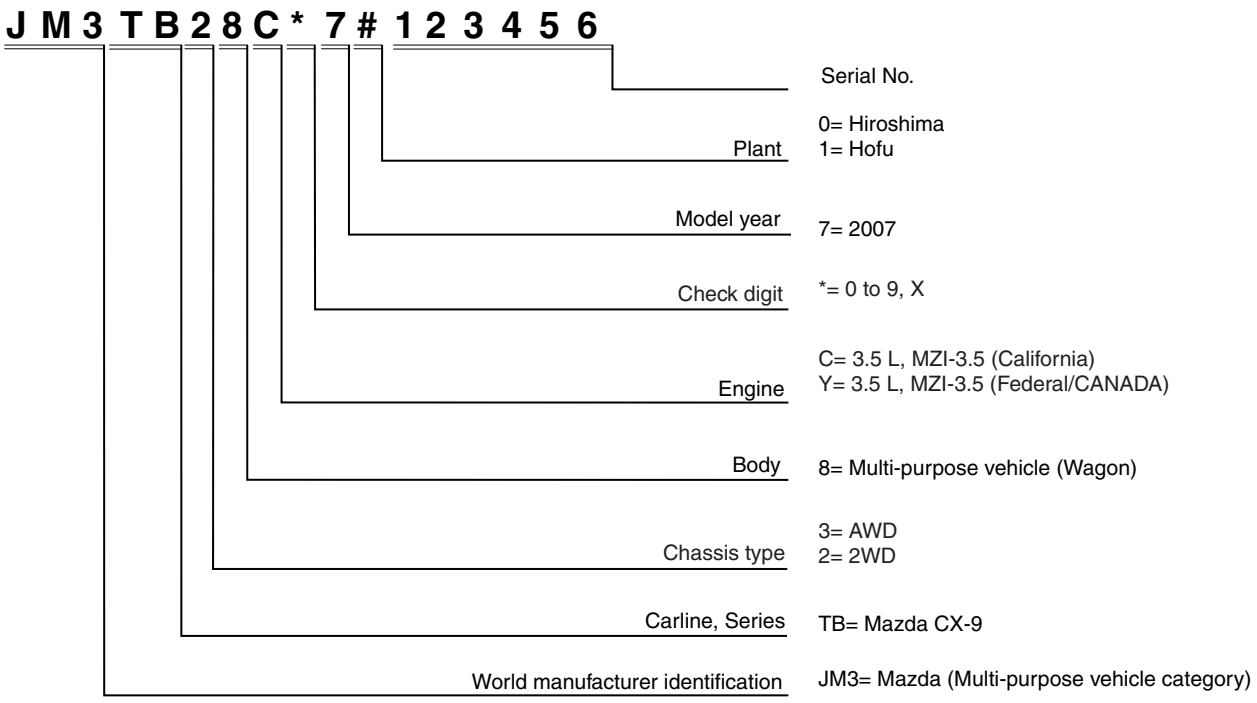


VEHICLE IDENTIFICATION NUMBERS (VIN)

JM3 TB28C*7# 100001-
JM3 TB28Y*7# 100001-
JM3 TB38C*7# 100001-
JM3 TB38Y*7# 100001-

CONTENTS OF WIRING DIAGRAMS

- This manual comprises the sections shown below.

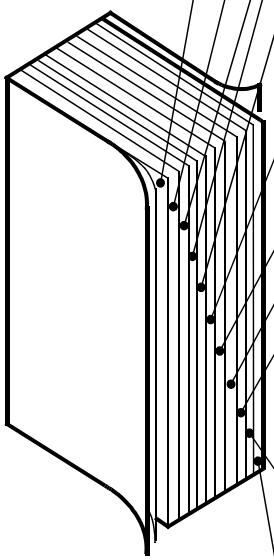


GENERAL INFORMATION	00	R	Reading wiring diagrams	A how-to on using and reading wiring diagrams, using test equipment, checking harness and connectors, and finding trouble spots
		P	Electrical system general procedures	
		E	Electrical wiring schematic	Shows main fuses and other fuses for each system
		F	Fuse box complete wiring system	Shows internal circuits and connectors
		J	Joint box/Junction box complete wiring system	
		C	Common connector list	Shows connectors common throughout system
		G	Ground point	Ground routes from and to the battery
		D	Data link connector	Shows circuit and connector diagrams and component and connector location diagrams
ENGINE	01	12	Cooling system	
		14	Fuel system	
		17	Charging system	
		18	Ignition system	
		19	Starting system	
		20	Cruise control system	
		40	Control system	
SUSPENSION	02	12	Wheel and tires	
DRIVELINE/AXLE	03	18	4-Wheel drive	
BRAKES	04	13	Antilock brake system	
		14	Traction control system	
		15	Dynamic stability control	
		18	Dynamic stability control/ Roll stability control	
TRANSMISSION/TRANSAXLE	05	13	Automatic transmission	
		14	Automatic transmission shift mechanism	
		17	Automatic transaxle	
		18	Automatic transaxle shift mechanism	
STEERING	06	13	Electric power steering (EPS)	
		14	Power steering	
HEATER, VENTILATION & AIR CONDITIONING (HVAC)	07	40	Control system	
RESTRAINTS	08	10	Air bag system	
		11	Seat belt	
BODY & ACCESSORIES	09	12	Glass/Windows/Mirrors	
		13	Seats	
		14	Security and locks	
		15	Sunroof	
		16	Exterior trim	
		18	Lighting systems	
		19	Wiper/Washer system	
		20	Entertainment	
		21	Power systems	
		22	Instrumentation/Driver info.	
		40	Control system	
AI			Alphabetical Index	Gives page number of circuit diagram for each component



Depending on the vehicle model, the actual sections may be different.

GROUND POINTS

- This shows ground points of the harness.

GROUND POINT 00G-a

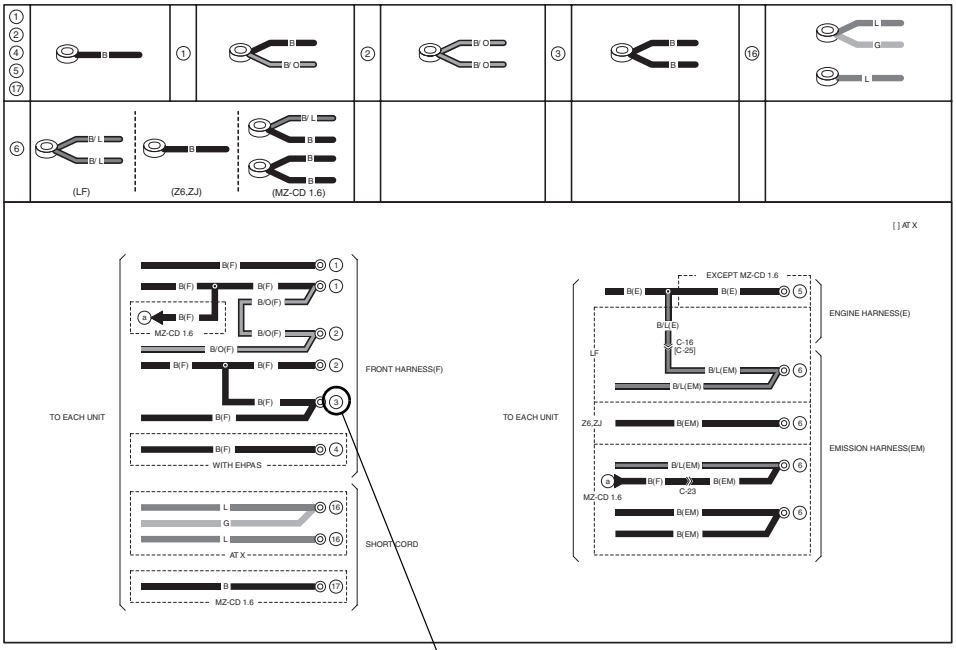


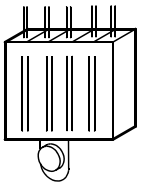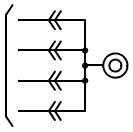Ground indication	
On vehide	Indication
	To circuit 


On circuit diagrams and ground points

The ground connection numbers in system circuit diagrams correspond to those in the ground point diagram.

COOLING SYSTEM 0112

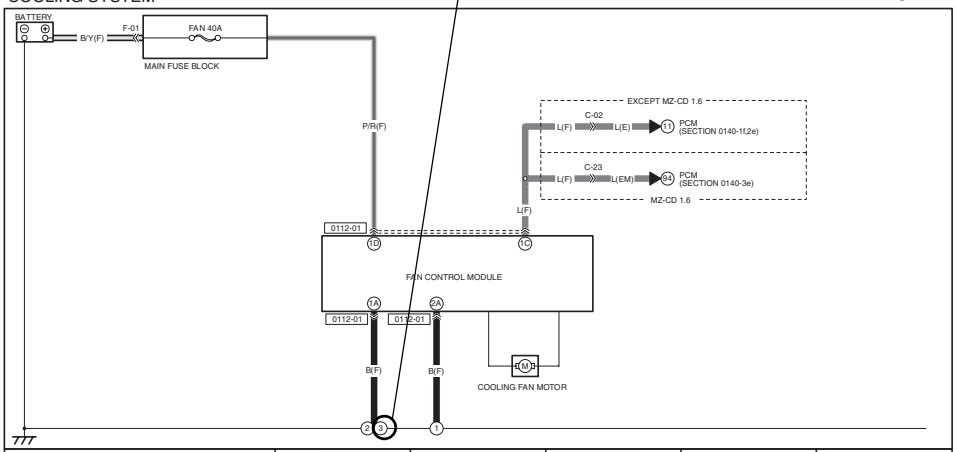

0112-01
FAN CONTROL MODULE



SYSTEM CIRCUIT DIAGRAM/CONNECTOR DIAGRAM

- These diagrams show the circuits for each system, from the power supply to the ground. The power supply side is on the upper part of the page, the ground side on the lower part. The diagrams describe circuits with the ignition switch off.

  Below is an explanation of the various points in the diagram.

System name

CONTROL SYSTEM (MZ-CD 1.6)


Multiplex communication


Indicates communication with connected parts. Signals are transmitted back and forth between connected parts.

Connector code

The prefix letter indicates the system in which the connector is used.

- **F**: Fuse box connectors
- **J**: Joint box/Junction box connectors
- **C**: Common connectors
- **G**: Ground point connectors
- **D**: Data link connector
- **0112**: Cooling system connectors
- **0114**: Fuel system connectors
- **0117**: Charging system connectors
- **0118**: Ignition system connectors
- **0119**: Starting system connectors
- **0120**: Cruise control system connectors
- **0140**: Engine control system connectors
- **0212**: Wheel and tires connectors
- **0318**: 4-Wheel drive connectors
- **0413**: Antilock brake system connectors
- **0414**: Traction control system connectors
- **0415**: Dynamic stability control connectors
- **0418**: Dynamic stability control/Roll stability control connectors
- **0513**: Automatic transmission connectors
- **0514**: Automatic transmission shift mechanism connectors
- **0517**: Automatic transaxle connectors
- **0518**: Automatic transaxle shift mechanism connectors
- **0613**: Electric power steering (EPS) connectors
- **0614**: Power steering connectors
- **0740**: Heater, ventilation & air conditioning (HVAC) control system connectors
- **0810**: Air bag system connectors
- **0811**: Seat belt connectors
- **0912**: Glass/Windows/Mirrors connectors
- **0913**: Seats connectors
- **0914**: Security and locks connectors
- **0915**: Sunroof connectors
- **0916**: Exterior trim connectors
- **0918**: Lighting systems connectors
- **0919**: Wiper/Washer system connectors
- **0920**: Entertainment connectors
- **0921**: Power systems
- **0922**: Instrumentation/Driver info. Connectors
- **0940**: Control system

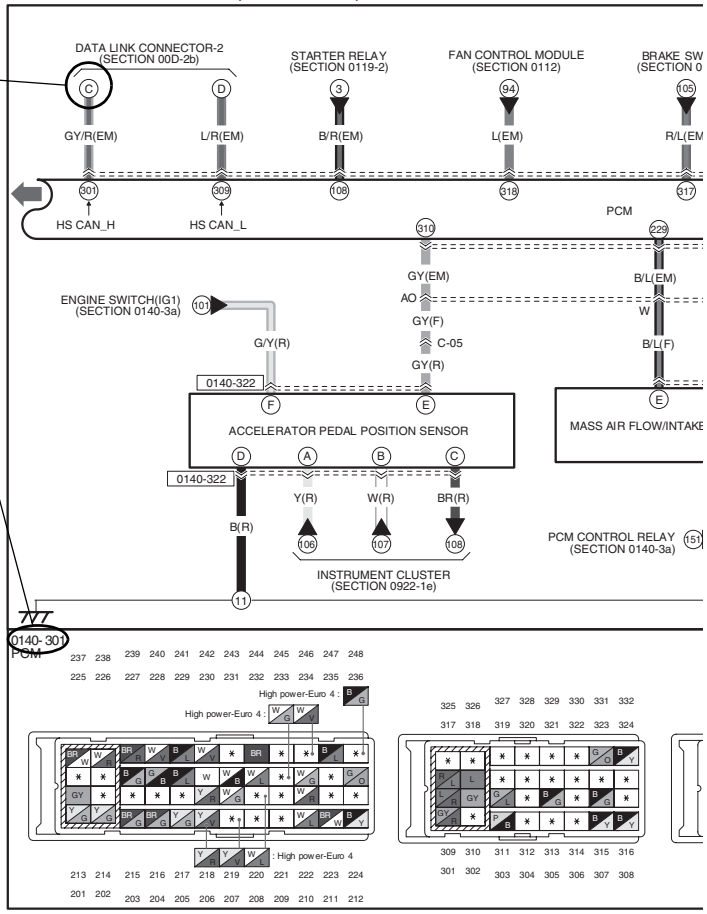

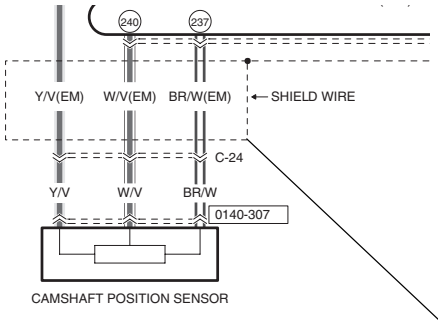

Indicates shielded wire.*

* Shielded wire :
Prevents signal disturbances from electrical interference.
Wire is covered by a metal meshing for grounding.

The number indicates that the circuit continues to the related system diagram.

Current symbol

Current flows in the direction of the arrow.


System code

0140-3e


Wire color code (harness symbol)

- Two-color wires are indicated by a two-letter symbol.The first indicates the base color of the wire, the second the color of the stripe.
  For example:
  W/R is a white wire with a red strip
  BR/Y is a brown wire with a yellow strip

Symbol
(Example)




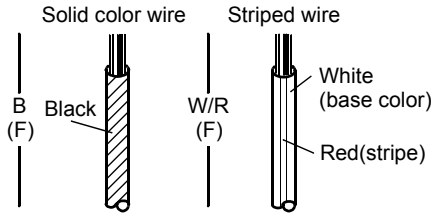


- The harness symbol is in ( ) following the harness symbols (refer to P-9.).

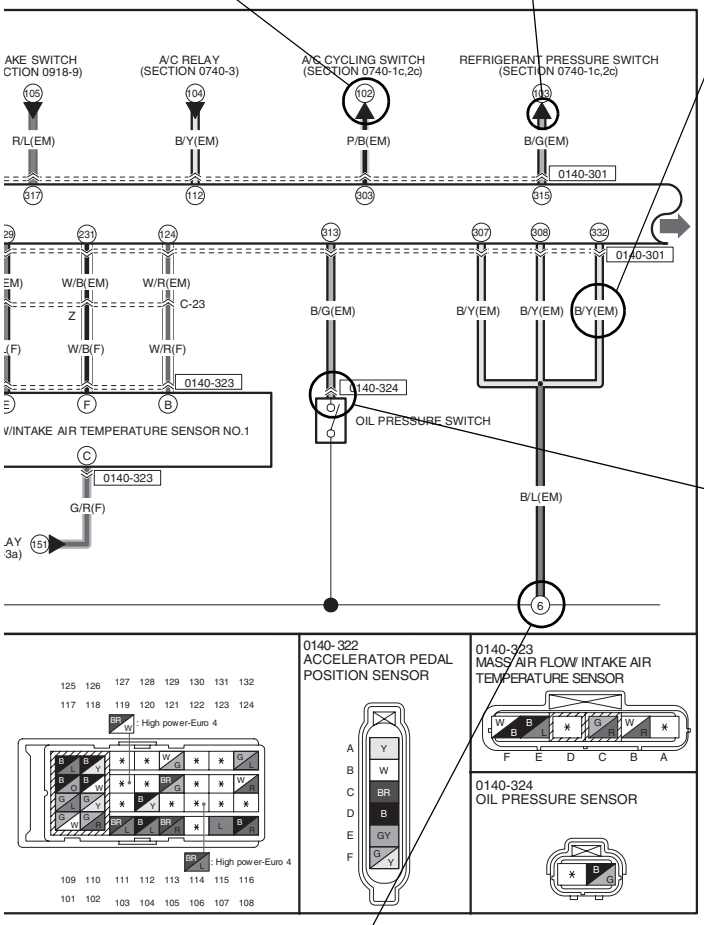


Connector symbols

- Male and female connectors are represented as follows in the circuit and connector diagrams.

		Circuit diagram symbol	Connector diagram symbol
Male			
Female			

- Like connectors are linked by dashed lines between the connector symbols.
- Connector diagrams show connectors on the harness side. The terminal indicates the view from the harness side.





(Example)

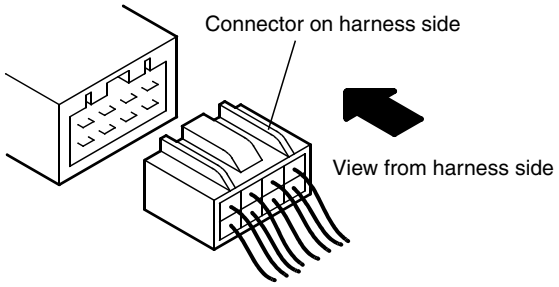

- Colors for connectors except white are given in locations.
- Unused terminals are indicated by ∗.

Ground numbers

A harness ground is represented differently than a unit ground.

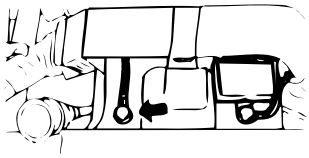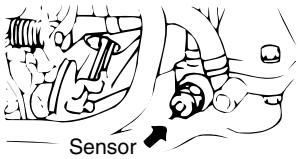Types of grounds	Symbol
Harness 	
Unit 	

ROUTING DIAGRAM

- The routing diagram shows where electrical components are on the system circuit diagram by call out line and connector symbols.

Connector symbol

Shows the system that uses the connector.

(Example)

Connector	Symbol
Common connectors	C-02
System connectors	0922-05


Component name

Shows the names of components in routing diagrams.

Ground symbol

Shows the ground in system diagrams.

BRAKE LIGHT/HIGH-MOUNT BRAKE LIGHT 0918-9

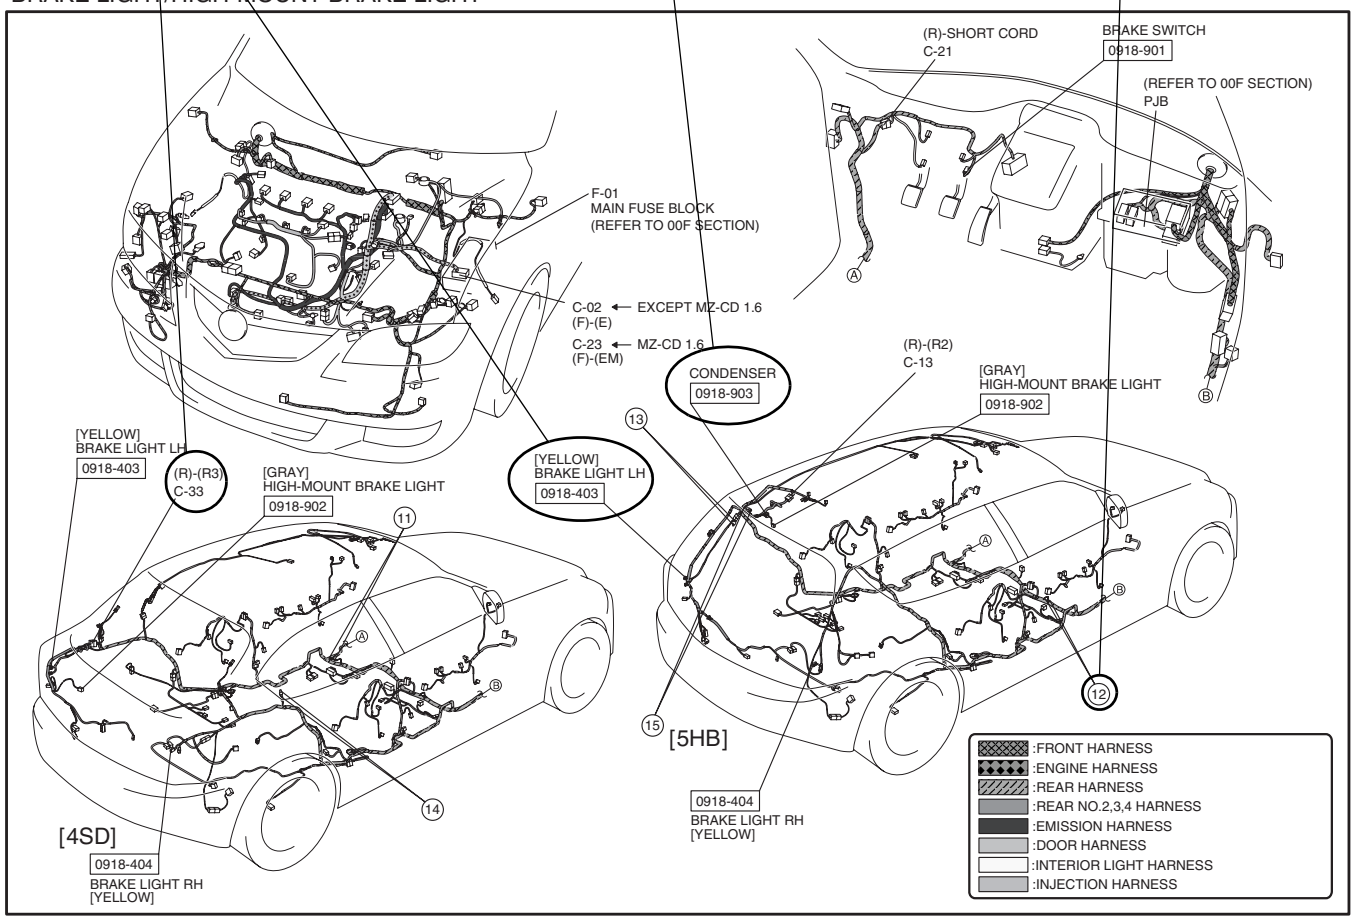







HARNESS SYMBOLS

DESCRIPTION OF HARNESS	SYMBOL		DESCRIPTION OF HARNESS	SYMBOL	
FRONT HARNESS	(F)		DOOR No. 1 HARNESS	(DR1)	
FRONT No. 2 HARNESS	(F2)		DOOR No. 2 HARNESS	(DR2)	—
ENGINE HARNESS	(E)		DOOR No. 3 HARNESS	(DR3)	
DASH HARNESS	(D)		DOOR No. 4 HARNESS	(DR4)	
REAR HARNESS	(R)		FLOOR HARNESS	(FR)	—
REAR No. 2 HARNESS	(R2)		INTERIOR LIGHT HARNESS	(IN)	—
REAR No. 3 HARNESS	(R3)		A/C HARNESS	(AC)	—
INSTRUMENT PANEL HARNESS	(I)	—	INJECTION HARNESS	(INJ)	—
EMISSION HARNESS	(EM)		HAND BRAKE HARNESS	(HB)	—
EMISSION No. 2 HARNESS	(EM2)	—			
EMISSION No. 3 HARNESS	(EM3)				















WIRING COLOR CODE








COLOR	CODE	COLOR	CODE
BLACK	B	ORANGE	O
BLUE	L	PINK	P
BROWN	BR	RED	R
DARK BLUE	DL	SKY BLUE	SB
DARK GREEN	DG	TAN	T
GRAY	GY	VIOLET	V
GREEN	G	WHITE	W
LIGHT BLUE	LB	YELLOW	Y
LIGHT GREEN	LG		









SYMBOLS




Symbol	Meaning	Symbol	Meaning
Battery 	• Generates electricity through chemical reaction. • Supplies direct current to circuits.	Light  	• Emits light and generates heat when current flows through filament.
Ground (1) 	• Connecting point to vehicle body or other ground wire where current flows from positive to negative terminal of battery. • Ground (1) indicates a ground point to body through wire harness. • Ground (2) indicates point where component is grounded directly to body. Remarks • Current will not flow through a circuit if ground is faulty.		
Ground (2) 		Resistance 	• A resistor with a constant value. • Mainly used to protect electrical components in circuits by maintaining rated voltage.
Ground (3) 		Motor 	• Converts electrical energy into mechanical energy.

Reading Wiring Diagrams

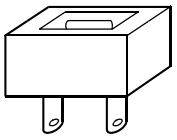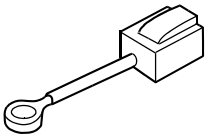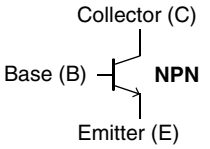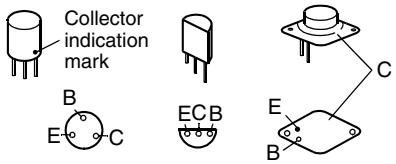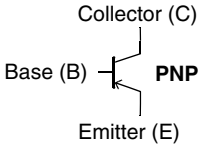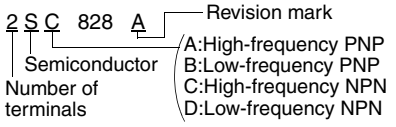Symbol	Meaning
Fuse 	• Melts when current flow exceeds that specified for circuit, interrupts current flow. Precautions • Do not replace with fuses exceeding specified capacity. <Blade type>  <Tube type> 
Fuse (For high current fuse)/ Fusible link 	<Cartridge type>  <Fusible link> 
Transistor (1) 	• Electrical switching component. • Turns on when voltage is applied to the base (B). 
Transistor (2) 	• Reading code. 
Switch (1)  Normally open	• Allows or breaks current flow by opening and closing curcuits.
Switch (2)  Normally closed	
Autostop switch 	• Automatically shuts off circuit when certain conditions are met.
Relay (1)  Normally open	• Current flowing through coil produces electromagnetic force causing contact to open or close. No current to coil  Current to coil 

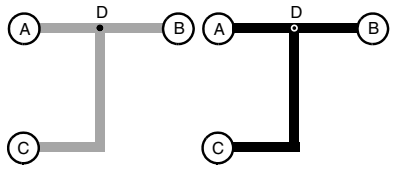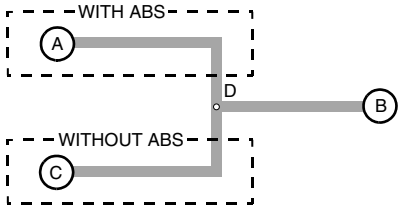Symbol	Meaning
Pump 	• Pulls in and discharges gases and liquids.
Cigarette lighter 	• Electrical coil that generates heat.
Accessory socket 	• Interior power supply.
Horn 	• Generates sound when current flows.
Speaker 	
Heater 	• Generates heat when current flows.
Ignition switch 	• Turning ignition key switches circuit to operate various component. (NOTE) Ignition switch is called engine switch on diesel vehicles.
Harness **Connection**  When circuit C-D is connected to circuit A-B, the connection D is indicated by a black dot. **Selection**  Diversion point D for the different circuits according to the vehicle's specification is indicated by a white dot.	 For vehicles with ABS, use the A-B circuit.  For vehicles without ABS, use the C-B circuit.

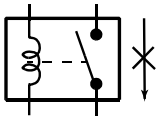Symbol	Meaning	Symbol	Meaning
Relay (2)  Normally closed	• Current flowing through coil produces electromagnetic force causing contact to close. No current to coil  Flow Current to coil  No flow		
Sensor (1) 	• Detects characteristics such as intake manifold vacuum and airflow amount according to resistance variation.	Solenoid 	• Current flowing through coil generates electromagnetic force to operate plungers.
Sensor (2) 	• Detects resistance variation according to operation of other parts.	Diode 	• Known as a semiconductor rectifier, the diode allows current flow in one direction only. Cathode(K) Anode(A) Flow of electric current 
Sensor (3) 	• A resistor whose resistance variation according to temperature variation. • When temperature increases, resistance decreases.		
Sensor (4) 	• Detects pulse signals from rotating object.	Light-emitting diode (LED) 	• A diode that lights when current flows. • Unlike ordinary bulbs, the diode does not generate heat when lit. Cathode(K) Anode(A)  Cathode(K) Anode(A) Flow of current
Sensor (5) 	• Generates potential difference when tension or pressure is applied.		
Capacitor 	• Component that temporarily stores electrical charge.	Reference diode (Zener diode) 	• Allows current to flow in one direction up to a certain voltage; allows current to flow in the other direction once that voltage is exceeded.

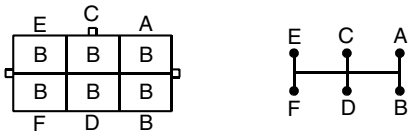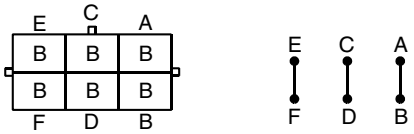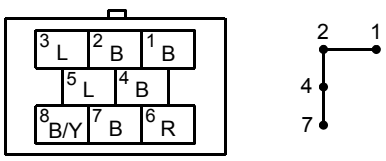Symbol	Meaning
Extent of the change in the wiring position (1) 	• The wiring position can be exchanged freely within the connector.
Extent of the change in the wiring position (2) 	• The wiring position can be exchanged according to the following combinations only. Between A and B, Between C and D, Between E and F
Extent of the change in the wiring position (3) 	• The wiring position can be exchanged according to the following combinations only. Between 1, 2, 4 and 7. • The wiring positions may be indicated by numbers for some connectors.

SERVICE WARNING AND CAUTION FOR VEHICLES WITH SRS AIR BAG SYSTEM

If the SRS air bag system inspection is not performed correctly in accordance with the workshop manual procedures it could cause the system to operate (deploy) accidentally, resulting in injury.

Always follow the service warnings and cautions in the workshop manual when performing the SRS air bag system-related inspection or servicing.

SERVICE WARNING FOR VEHICLES WITH DISCHARGE HEADLIGHTS

If the discharge headlight inspection and servicing is not done using the correct procedures in the workshop manual, it could result in electrical shock.

Always follow the service warnings and cautions in the workshop manual when performing the discharge headlight-related inspection or servicing.

ABBREVIATIONS USED IN THIS MANUAL

3GR	THIRD GEAR
4GR	FOURTH GEAR
A	AMPERE
A/C	AIR CONDITIONING
A/F	AIR FUEL
AAS	AUTO ADJUSTING SUSPENSION
ABS	ANTILOCK BRAKE SYSTEM
ACC	ACCESSORIES
ACV	AIR CONTROL VALVE
ADD	ADDITIONAL
AIS	AIR INJECTION SYSTEM
ALL	AUTOMATIC LOAD LEVELING
AM	AMPLITUDE MODULATION
AMP	AMPLIFIER
ANT	ANTENNA
ASV	AIR SUPPLY VALVE
AT	AUTOMATIC TRANSMISSION
ATX	AUTOMATIC TRANSAXLE
B+	BATTERY POSITIVE VOLTAGE
BAC	BYPASS AIR CONTROL
CAN	CONTROLLER AREA NETWORK
CIGAR	CIGARETTE
CIS	CONTINUOUS FUEL INJECTION SYSTEM
CKP	CRANKSHAFT POSITION SENSOR
CM	CONTROL MODULE
CMP	CAMSHAFT POSITION SENSOR
COMBI	COMBINATION
CON	CONDITIONER
CONT	CONTROL
CPU	CENTRAL PROCESSING UNIT
DEF	DEFROSTER
DI	DISTRIBUTOR IGNITION
DLC	DATA LINK CONNECTOR
DLI	DISTRIBUTORLESS IGNITION
DOHC	DOUBLE-OVERHEAD CAMSHAFT
DRL	DAYTIME RUNNING LIGHT
DSC	DYNAMIC STABILITY CONTROL
DTC	DIAGNOSTIC TROUBLE CODE(S)
DTM	DIAGNOSTIC TEST MODE
ECPS	ELECTRONICALLY CONTROLLED POWER STEERING
ECT	ENGINE CONTROL TEMPERATURE
EGR	EXHAUST GAS RECIRCULATION
EHPAS	ELECTRO HYDRAULIC POWER ASSIST STEERING
EI	ELECTRONIC IGNITION
ELEC	ELECTRIC
ELR	EMERGENCY LOCKING RETRACTOR
ET	ELECTRONIC THROTTLE
EPS	ELECTRIC POWER STEERING
EVAP	EVAPORATIVE EMISSION
F	FRONT
F/I	FUEL INJECTOR
FICB	FAST-IDLE CAM BREAKER
FM	FREQUENCY MODULATION
FP	FUEL PUMP
FPR	FUEL PUMP RELAY
GEN	GENERATOR
GND	GROUND
H/D	HEATER/DEFROSTER
HEAT	HEATER
HI	HIGH
HO2S	HEATED OXYGEN SENSOR
HS	HIGH SPEED
HU	HYDRAULIC UNIT
IAC	IDLE AIR CONTROL
IAT	INTAKE AIR TEMPERATURE
IG	IGNITION
ILLUMI	ILLUMINATION
INT	INTERMITTENT
JB	JOINT BOX
KS	KNOCK SENSOR
LCD	LIQUID CRYSTAL DISPLAY
LF	LEFT FRONT
LH	LEFT HAND
LO	LOW
LR	LEFT REAR

M	MOTOR
MAF	MASS AIR FLOW
MAP	MANIFOLD ABSOLUTE PRESSURE
MFI	MULTIPORT FUEL INJECTION
MID	MIDDLE
MIL	MALFUNCTION INDICATOR LAMP
MIN	MINUTE
MIX	MIXTURE
MPX	MULTIPLEX
MS	MIDDLE SPEED
MT	MANUAL TRANSMISSION
MTX	MANUAL TRANSAXLE
N	NEUTRAL
NC	NORMALLY CLOSED
NO	NORMALLY OPEN
O2S	OXYGEN SENSOR
OBD	ON-BOARD DIAGNOSTIC
O/D	OVER DRIVE
OFF	SWITCH OFF
ON	SWITCH ON
OSC	OSCILLATOR
P	POWER
P/S	POWER STEERING
PCM	POWERTRAIN CONTROL MODULE
PJB	PASSENGER JUNCTION BOX
PNP	PARK/NEUTRAL POSITION
PRC	PRESSURE REGULATOR CONTROL
PRG	PURGE SOLENOID VALVE
PSP	POWER STEERING PRESSURE
PTC	POSITIVE TEMPERATURE COEFFICIENT HEATER
PWM	PULSE WIDTH MODULATION
QSS	QUICK-START SYSTEM
R	REAR
REC	RECIRCULATION
RES	REAR ENTERTAINMENT SYSTEM
RF	RIGHT FRONT
RH	RIGHT HAND
RPM	REVOLUTIONS PER MINUTE
RR	RIGHT REAR
RSC	ROLL STABILITY CONTROL
SAS	SOPHISTICATED AIR BAG SENSOR
SFI	SEQUENTIAL MULTIPOINT FUEL INJECTION
SOL	SOLENOID
SPV	SPILL VALVE
ST	START
SW	SWITCH


TC	TURBOCHARGER
TCC	TORQUE CONVERTER CLUTCH
TCM	TRANSMISSION(TRANSAXLE) CONTROL MODULE
TCS	TRACTION CONTROL SYSTEM
TEMP	TEMPERATURE
TFT	TRANSAXLE FLUID TEMPERATURE
TICS	TRIPLE INDUCTION CONTROL SYSTEM
TNS	TAIL NUMBER SIDE LIGHTS
TP	THROTTLE POSITION SENSOR
TR	TRANSMISSION(TRANSAXLE) RANGE
TWS	TOTAL WIRING SYSTEM
V	VOLT
VAF	VOLUME AIR FLOW SENSOR
VENT	VENTILATION
VICS	VARIABLE INERTIA CHARGING SYSTEM
VOL	VOLUME
VR	VOLTAGE REGULATOR
VRIS	VARIABLE RESONANCE INDUCTION SYSTEM
VSS	VEHICLE SPEED SENSOR
VTCS	VARIABLE TUMBLE CONTROL SYSTEM
W	WATT(S)
WOT	WIDE OPEN THROTTLE

ELECTRICAL PARTS

B6U000000006W03

Battery Cable


- Before disconnecting connectors or removing electrical parts, disconnect the negative battery cable.

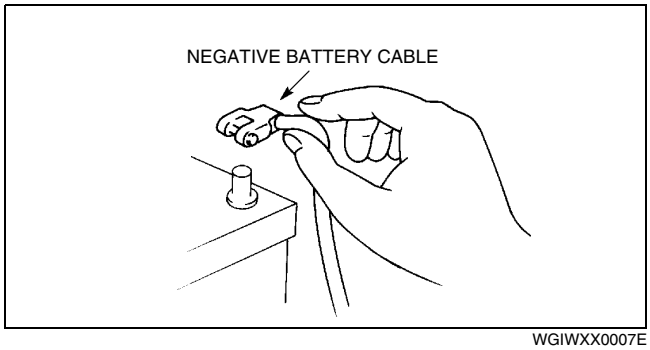

WGIWXX0007E

Wiring Harness


- To remove the wiring harness from the clip in the engine room, pry up the hook of the clip using a flathead screwdriver.

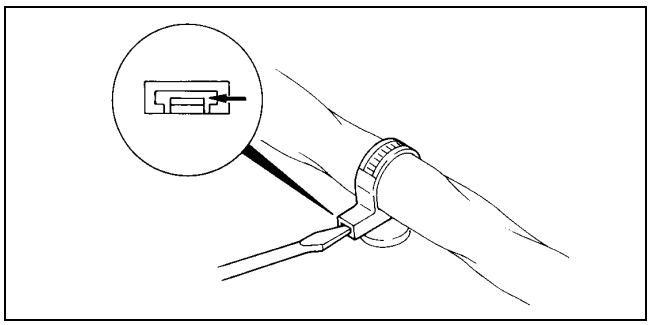

WGIWXX0039E

Caution

- **Do not remove the Harness protective tape. Otherwise, the wires could rub against the body, which could result in water penetration and electrical shorting.**

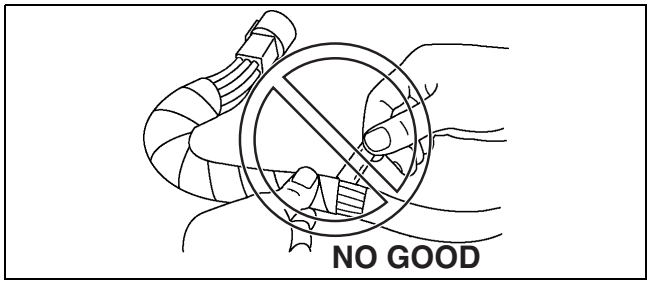

WGIWXX0040E


CONNECTORS

Data Link Connector

- Insert the probe into the terminal when connecting a jumper wire to the data link connector.

Caution


- **Inserting a jumper wire probe into the data link connector terminal may damage the terminal.**

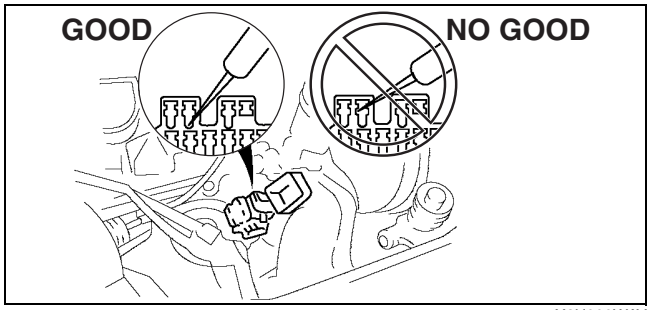

X3U000WAY


Disconnecting Connectors

- When disconnecting connector, grasp the connectors, not the wires.

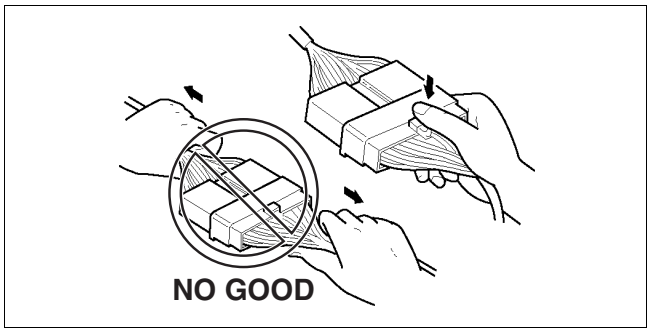

WGIWXX0041E


- Connectors can be disconnected by pressing or pulling the lock lever as shown.

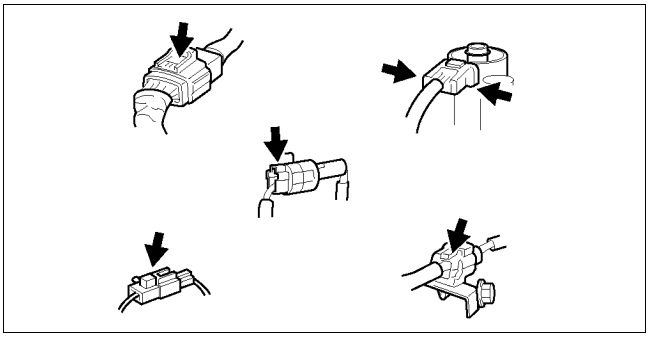

WGIWXX0042E

Locking Connector


- When locking connectors, listen for a click indicating they are securely locked.

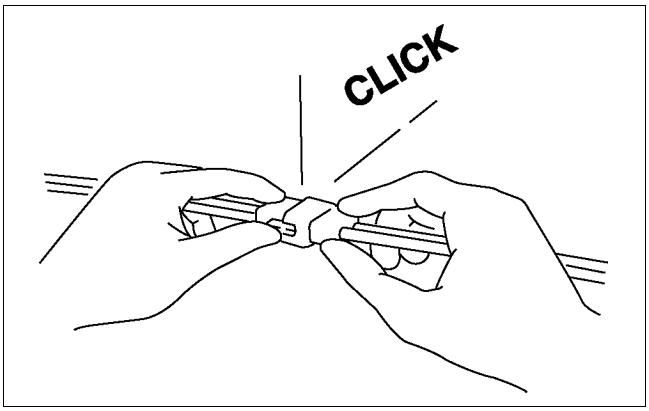

X3U000WB1

Inspection


- When a tester is used to inspect for continuity or measuring voltage, insert the tester probe from the wiring harness side.

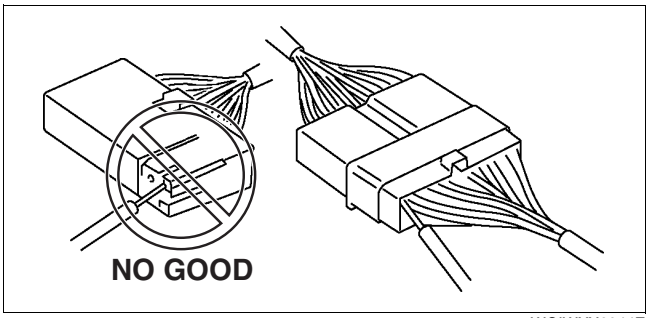

WGIWXX0044E

- Inspect the terminals of waterproof connectors from the connector side since they cannot be accessed from the wiring harness side.

  Caution
  - **To prevent damage to the terminal, wrap a thin wire around the tester probe before inserting into terminal.**

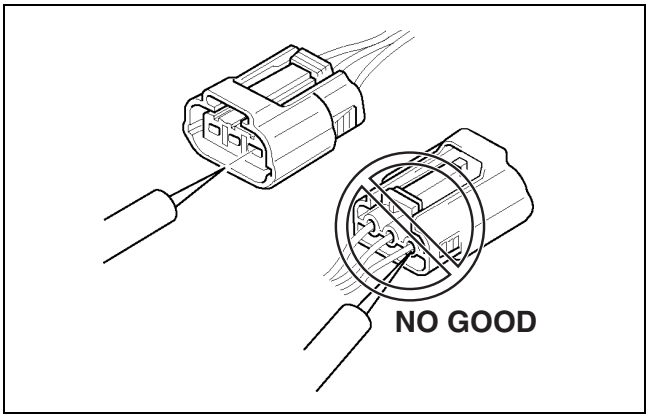


WGIWXX0045E

Terminals

Inspection


- Pull lightly on individual wires to verify that they are secured in the terminal.

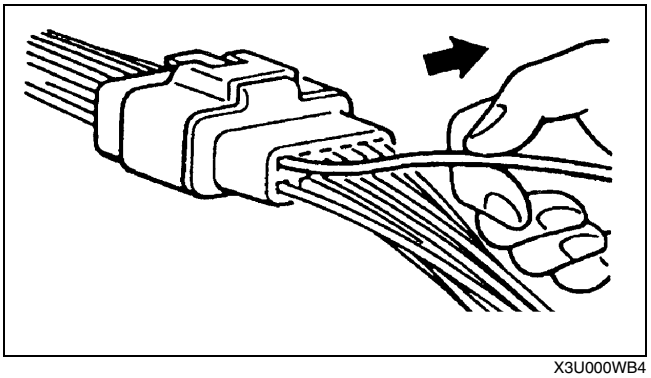

X3U000WB4

Replacement


- Use the appropriate tools to remove a terminal as shown. When installing a terminal, be sure to insert it until it locks securely.
- Insert a thin piece of metal from the terminal side of the connector and with the terminal locking tab pressed down, pull the terminal out from the connector.

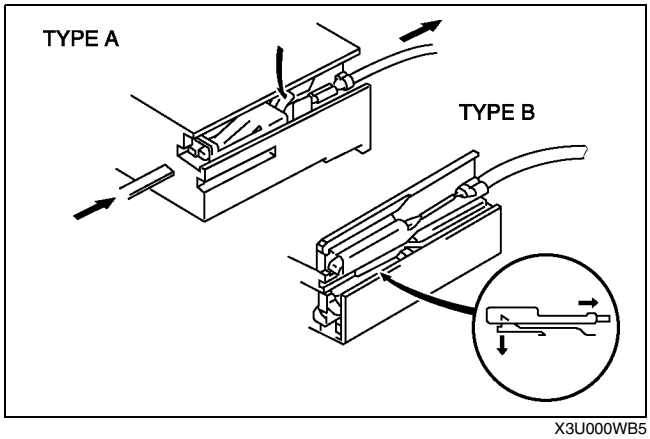

X3U000WB5

Sensors, Switches, And Relays

- Handle sensors, switches, and relays carefully. Do not drop them or strike them against other objects.

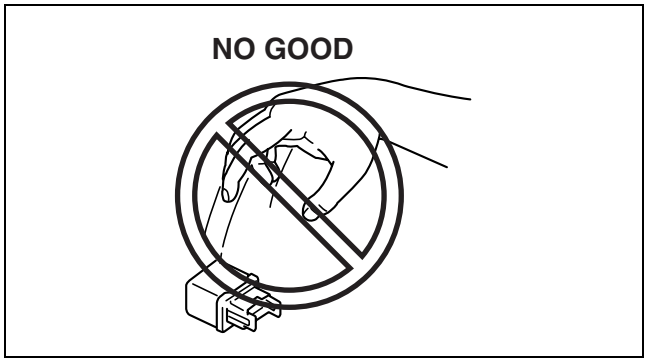


X3U000WB6

Fuse


Replacement

- When replacing a fuse, be sure to replace it with one of the same capacity. If a fuse fails again, the circuit probably has a short and the wiring should be inspected.
- Be sure the negative battery terminal is disconnected before replacing a main fuse.

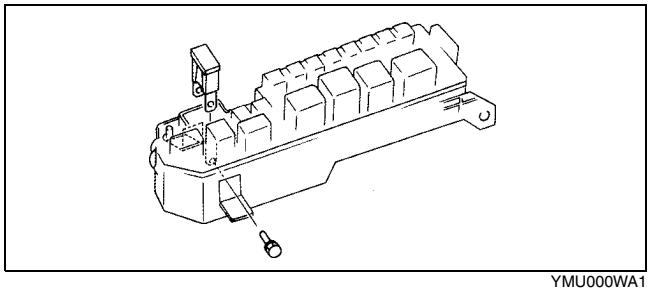

YMU000WA1

- When replacing a pullout fuse, use the fuse puller.

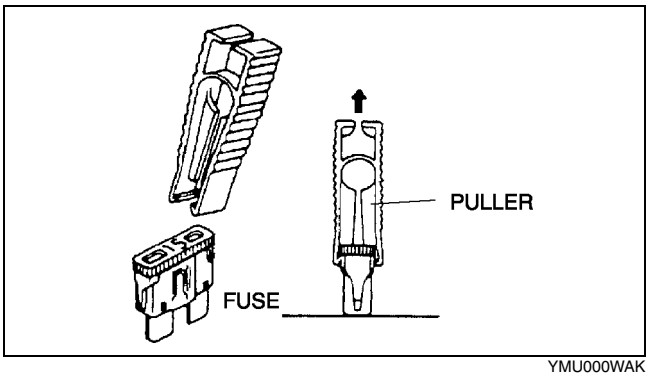

YMU000WAK


ELECTRICAL TROUBLESHOOTING TOOLS

Jumper Wire

- A jumper wire is used to create a temporary circuit. Connect the jumper wire between the terminals of a circuit to bypass a switch.


Caution

- **Do not connect a jumper wire from the power source line to a body ground. This may cause burning or other damage to wiring harnesses or electronic components.**

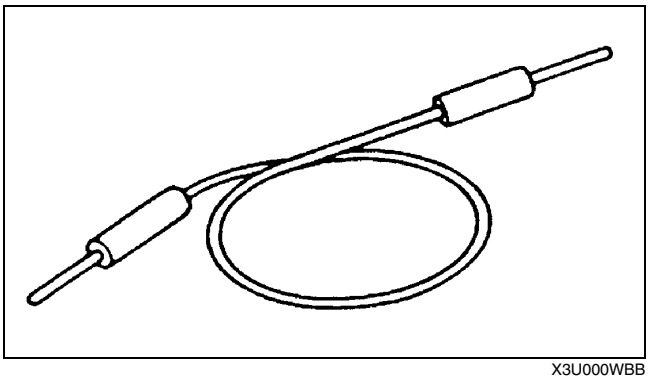
X3U000WBB

Voltmeter

- The DC voltmeter is used to measure circuit voltage. A voltmeter with a range of **15 V or more** is used by connecting the positive (+) probe (red lead wire) to the point where voltage will be measured and the negative (-) probe (black lead wire) to a body ground.

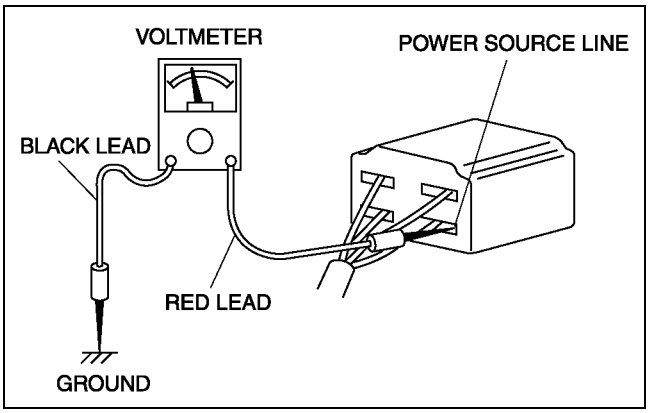


X3U000WBC

Ohmmeter


- The ohmmeter is used to measure the resistance between two points in a circuit and to inspect for continuity and short circuits.


Caution

- **Do not connect the ohmmeter to any circuit where voltage is applied. This will damage the ohmmeter.**

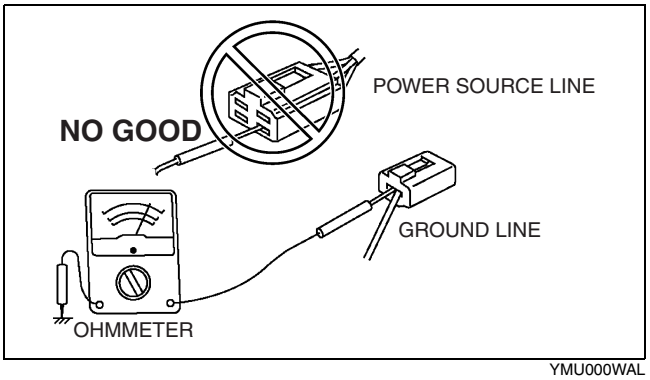


YMU000WAL

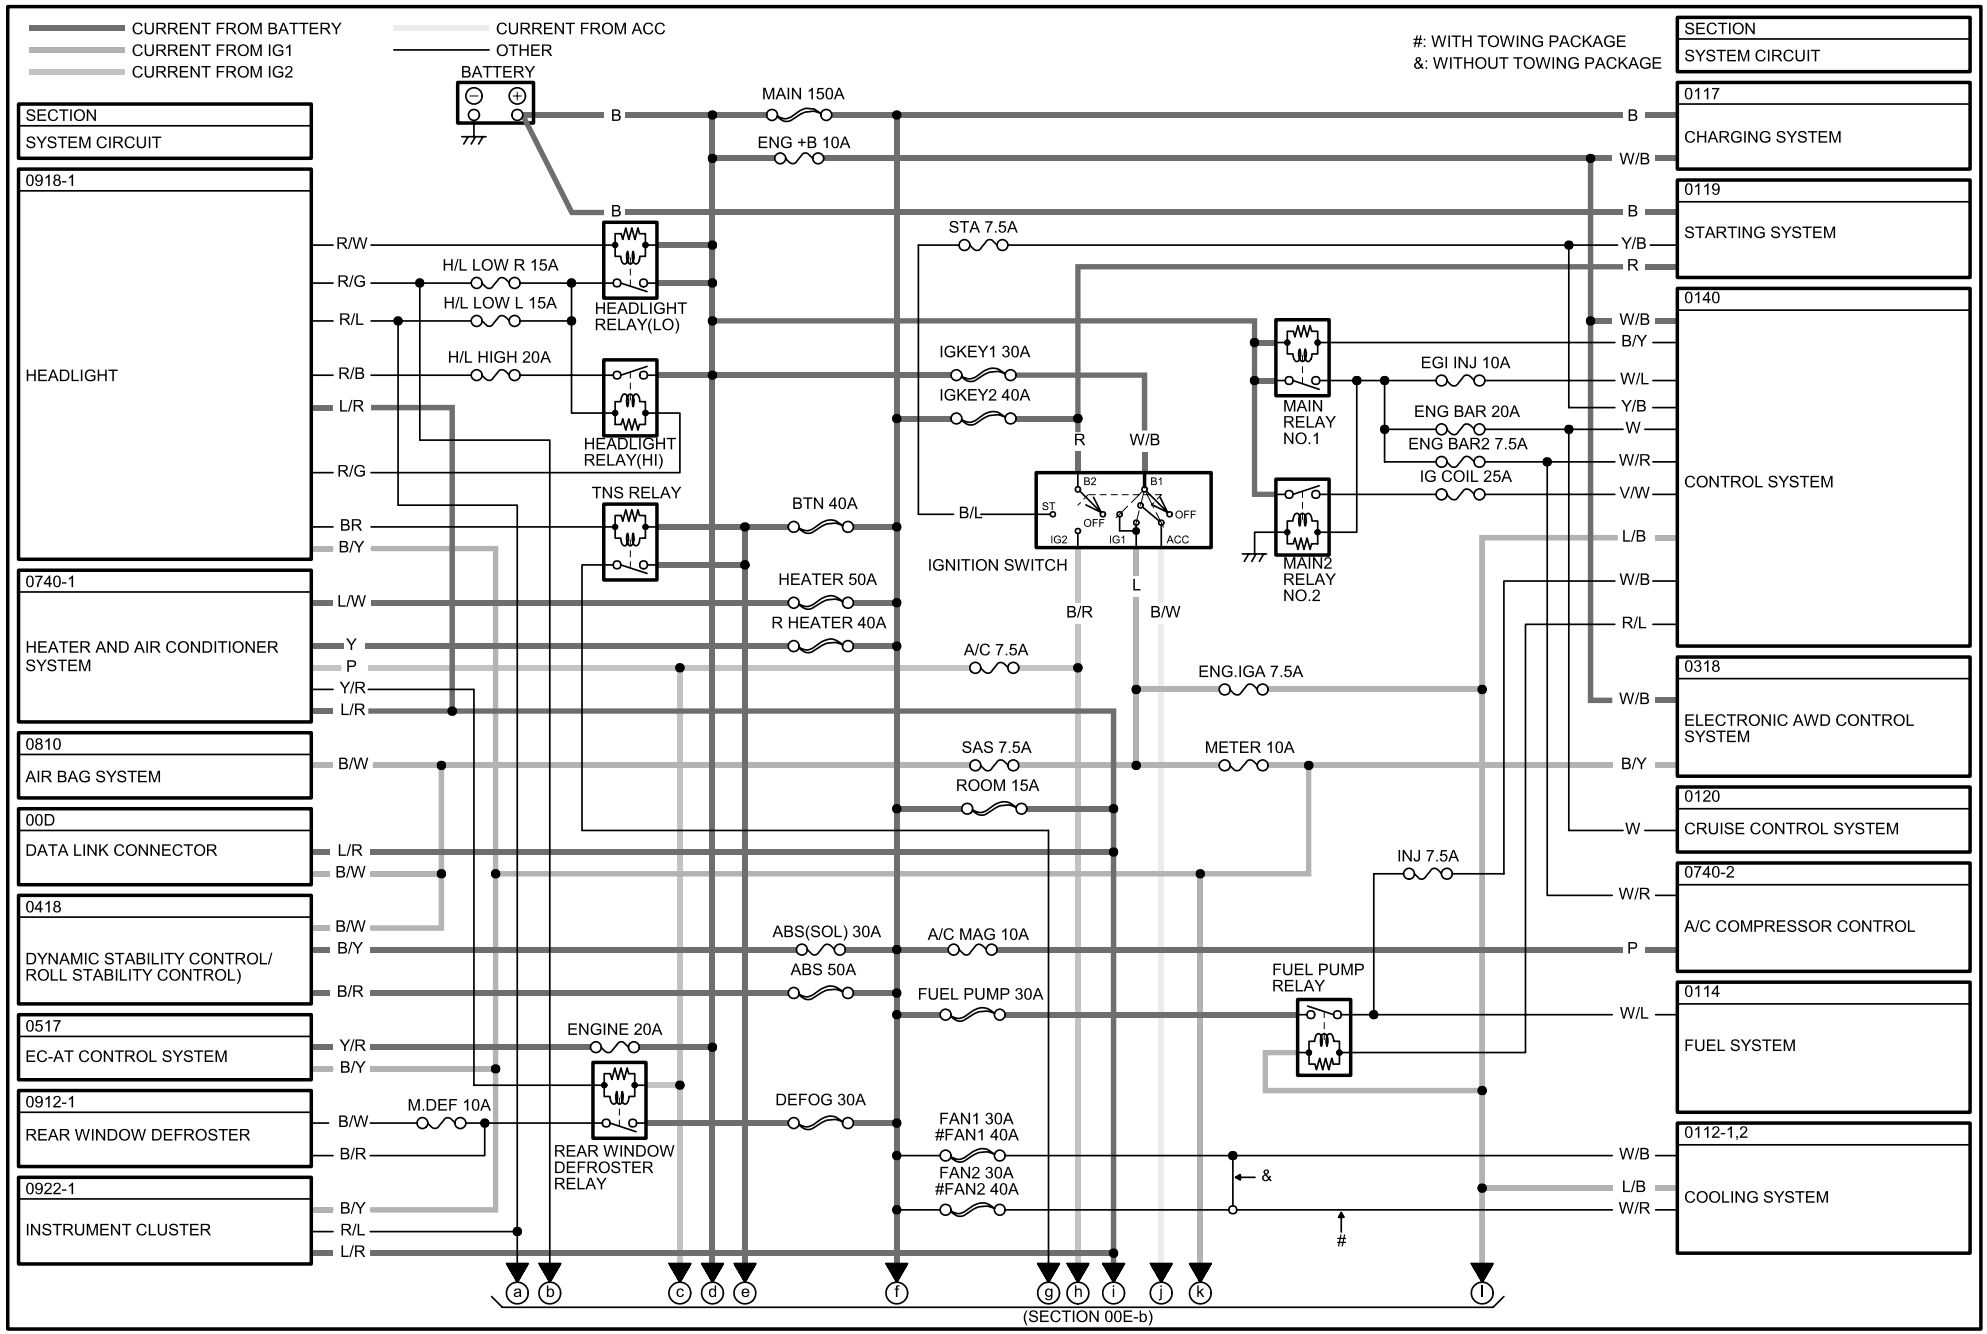
CURRENT FROM BATTERY
CURRENT FROM IG1
CURRENT FROM IG2
CURRENT FROM ACC
OTHER
#: WITH TOWING PACKAGE
&: WITHOUT TOWING PACKAGE
BATTERY
MAIN 150A
ENG +B 10A
STA 7.5A
IGKEY1 30A
IGKEY2 40A
IGNITION SWITCH
MAIN RELAY NO.1
MAIN2 RELAY NO.2
EGI INJ 10A
ENG BAR 20A
ENG BAR2 7.5A
IG COIL 25A
H/L LOW R 15A
H/L LOW L 15A
HEADLIGHT RELAY(LO)
H/L HIGH 20A
HEADLIGHT RELAY(HI)
TNS RELAY
BTN 40A
HEATER 50A
R HEATER 40A
A/C 7.5A
ENG.IGA 7.5A
SAS 7.5A
METER 10A
ROOM 15A
INJ 7.5A
ABS(SOL) 30A
A/C MAG 10A
ABS 50A
FUEL PUMP 30A
FUEL PUMP RELAY
ENGINE 20A
M.DEF 10A
DEFOG 30A
REAR WINDOW DEFROSTER RELAY
FAN1 30A
#FAN1 40A
FAN2 30A
#FAN2 40A
(SECTION 00E-b)
SECTION
SYSTEM CIRCUIT
0918-1
HEADLIGHT
0740-1
HEATER AND AIR CONDITIONER SYSTEM
0810
AIR BAG SYSTEM
00D
DATA LINK CONNECTOR
0418
DYNAMIC STABILITY CONTROL/ ROLL STABILITY CONTROL)
0517
EC-AT CONTROL SYSTEM
0912-1
REAR WINDOW DEFROSTER
0922-1
INSTRUMENT CLUSTER
0117
CHARGING SYSTEM
0119
STARTING SYSTEM
0140
CONTROL SYSTEM
0318
ELECTRONIC AWD CONTROL SYSTEM
0120
CRUISE CONTROL SYSTEM
0740-2
A/C COMPRESSOR CONTROL
0114
FUEL SYSTEM
0112-1,2
COOLING SYSTEM

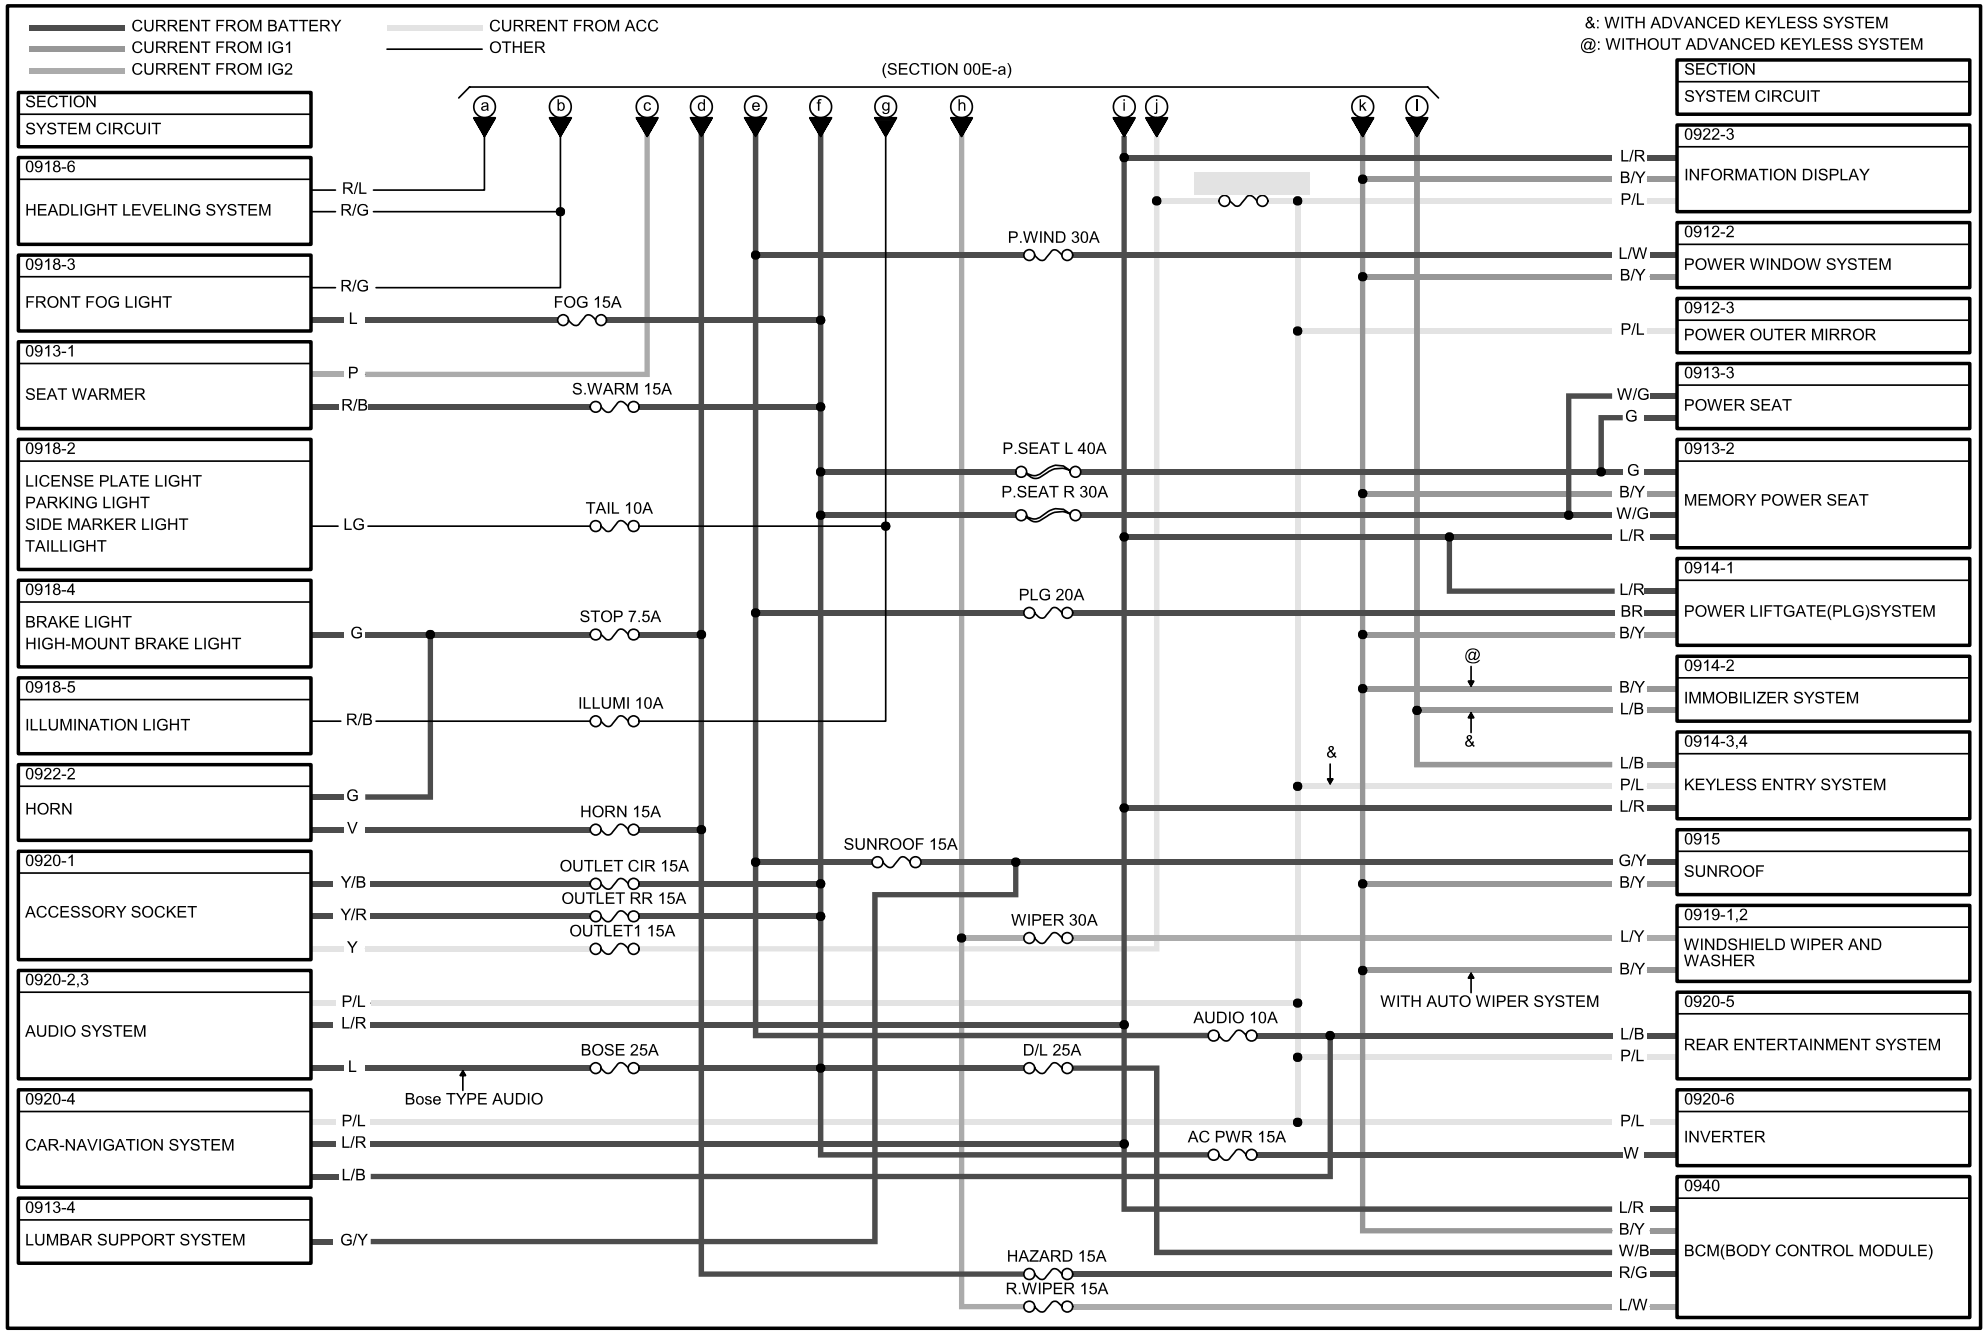
CURRENT FROM BATTERY
CURRENT FROM IG1
CURRENT FROM IG2
CURRENT FROM ACC
OTHER
&: WITH ADVANCED KEYLESS SYSTEM
@: WITHOUT ADVANCED KEYLESS SYSTEM
(SECTION 00E-a)
SECTION
SYSTEM CIRCUIT
0918-6
HEADLIGHT LEVELING SYSTEM
R/L
R/G
0918-3
FRONT FOG LIGHT
R/G
L
FOG 15A
0913-1
SEAT WARMER
P
R/B
S.WARM 15A
0918-2
LICENSE PLATE LIGHT
PARKING LIGHT
SIDE MARKER LIGHT
TAILLIGHT
LG
TAIL 10A
0918-4
BRAKE LIGHT
HIGH-MOUNT BRAKE LIGHT
G
STOP 7.5A
0918-5
ILLUMINATION LIGHT
R/B
ILLUMI 10A
0922-2
HORN
G
V
HORN 15A
0920-1
ACCESSORY SOCKET
Y/B
Y/R
Y
OUTLET CIR 15A
OUTLET RR 15A
OUTLET1 15A
0920-2,3
AUDIO SYSTEM
P/L
L/R
L
BOSE 25A
Bose TYPE AUDIO
0920-4
CAR-NAVIGATION SYSTEM
P/L
L/R
L/B
0913-4
LUMBAR SUPPORT SYSTEM
G/Y
P.WIND 30A
P.SEAT L 40A
P.SEAT R 30A
PLG 20A
SUNROOF 15A
WIPER 30A
AUDIO 10A
D/L 25A
AC PWR 15A
HAZARD 15A
R.WIPER 15A
WITH AUTO WIPER SYSTEM
SECTION
SYSTEM CIRCUIT
0922-3
INFORMATION DISPLAY
L/R
B/Y
P/L
0912-2
POWER WINDOW SYSTEM
L/W
B/Y
0912-3
POWER OUTER MIRROR
P/L
0913-3
POWER SEAT
W/G
G
0913-2
MEMORY POWER SEAT
G
B/Y
W/G
L/R
0914-1
POWER LIFTGATE(PLG)SYSTEM
L/R
BR
B/Y
0914-2
IMMOBILIZER SYSTEM
B/Y
L/B
0914-3,4
KEYLESS ENTRY SYSTEM
L/B
P/L
L/R
0915
SUNROOF
G/Y
B/Y
0919-1,2
WINDSHIELD WIPER AND WASHER
L/Y
B/Y
0920-5
REAR ENTERTAINMENT SYSTEM
L/B
P/L
0920-6
INVERTER
P/L
W
0940
BCM(BODY CONTROL MODULE)
L/R
B/Y
W/B
R/G
L/W

F-01 MAIN FUSE BLOCK


{ } NAME INDICATED ON FUSE BOX COVER #: WITH TOWING PACKAGE
[ ] IF EQUIPPED

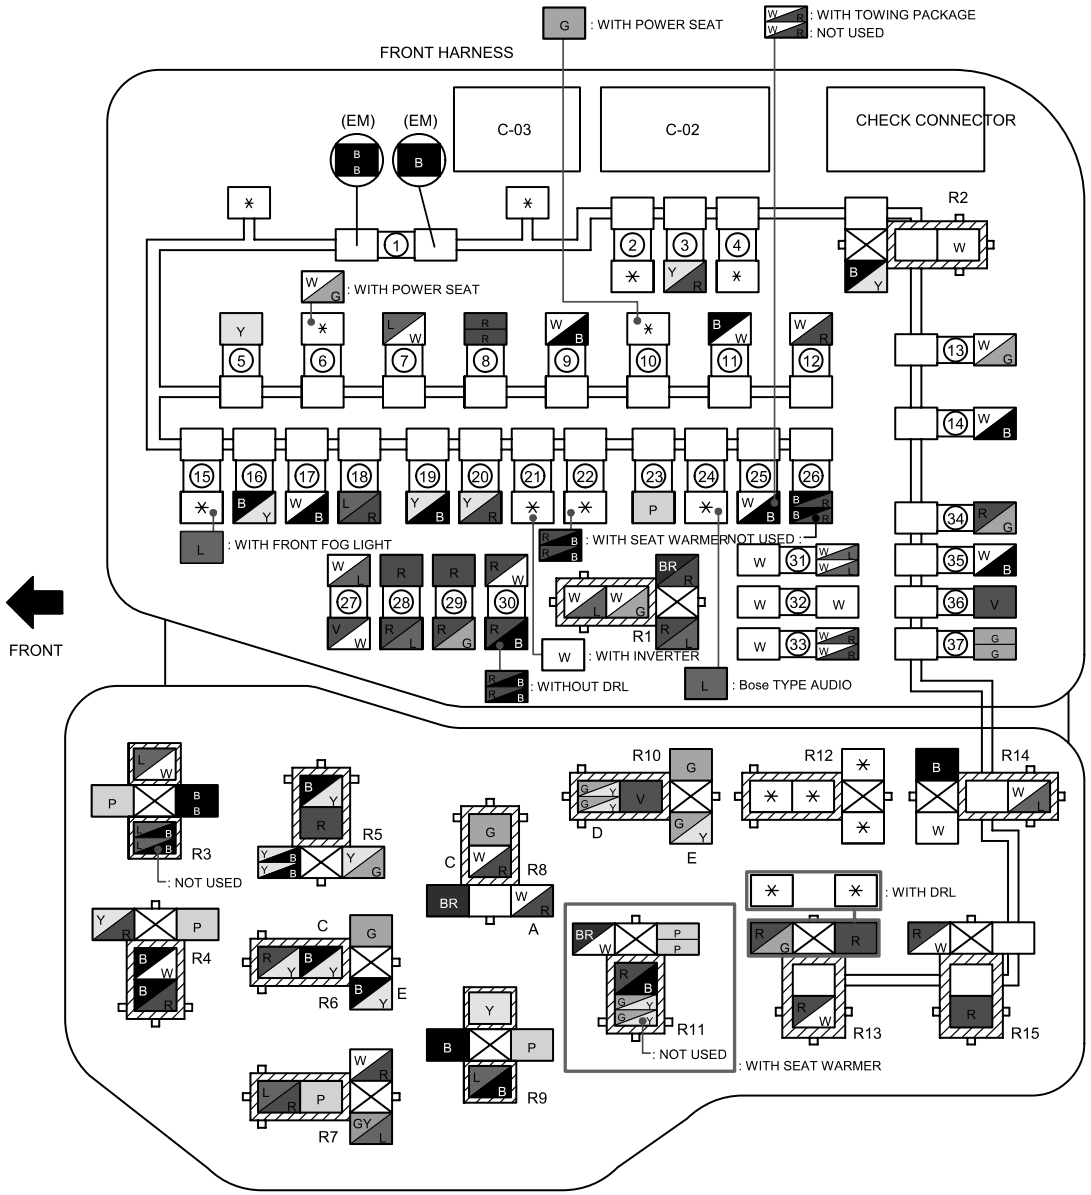

1	MAIN 150A	20	OUTLET RR 15A
2	*	21	[AC PWR 15A]
3	ENGINE 20A	22	[S.WARM 15A]
4	*	23	A/C MAG 10A
5	R HEATER 40A	24	[BOSE 25A]
6	[P.SEAT R 30A]	25	FAN2 30A #FAN2 40A
7	HEATER 50A	26	ABS 50A
8	IGKEY2 40A	27	IG COIL 25A
9	FAN1 30A #FAN1 40A	28	H/L LOW L 15A
10	[P.SEAT L 40A]	29	H/L LOW R 15A
11	DEFOG 30A	30	H/L HIGH 20A
12	BTN 40A	31	EGI INJ 10A
13	FUEL PUMP 30A	32	ENG BAR 20A
14	IGKEY1 30A	33	ENG BAR2 7.5A
15	[FOG 15A]	34	HAZARD 15A
16	ABS(SOL) 30A	35	ENG +B 10A
17	D/L 25A	36	HORN 15A
18	ROOM 15A	37	STOP 7.5A
19	OUTLET CIR 15A		

NO.	RELAY NAME	NO.	RELAY NAME
R1	FUEL PUMP RELAY {CIRCUIT RELAY}	R9	REAR BLOWER RELAY {R.BLOWER RELAY}
R2	MAIN RELAY NO.1 {EGI MAIN RELAY}	R10	HORN RELAY {HORN RELAY}
R3	FRONT BLOWER RELAY {F.BLOWER RELAY}	R11	[SEAT WARMER RELAY RH {S.WARM R RELAY}]
R4	REAR WINDOW DEFROSTER RELAY {DEF RELAY}	R12	*
R5	STARTER RELAY {ST RELAY}	R13	HEADLIGHT RELAY(HI) {H/L HIGH RELAY}
R6	BACK-UP LIGHT RELAY {REV LAMP RELAY}	R14	MAIN RELAY NO.2 {EGI MAIN2 RELAY}
R7	A/C RELAY {A/C RELAY}	R15	HEADLIGHT RELAY(LO) {H/L LOW RELAY}
R8	TNS RELAY {TNS RELAY}		

F-02 FUSE BLOCK

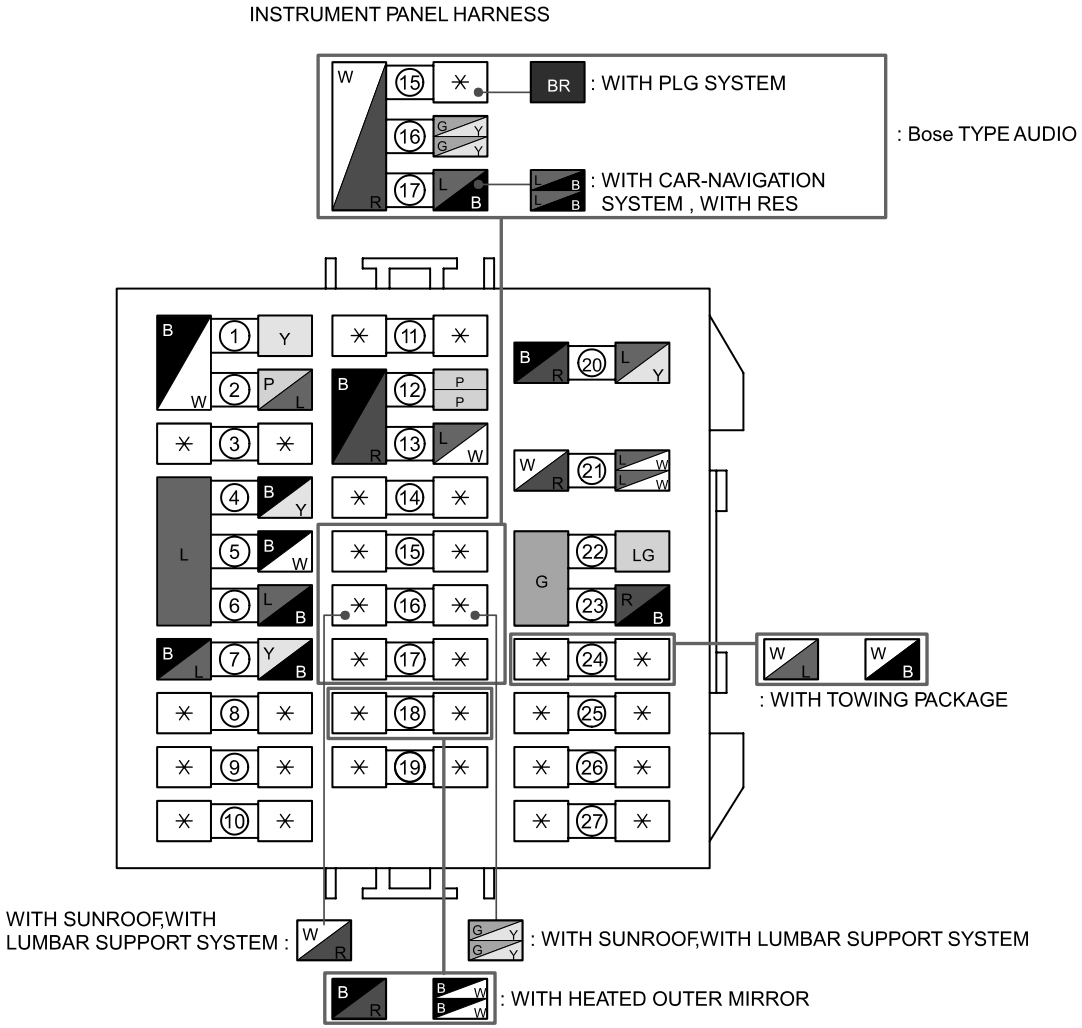


1	OUTLET1 15A	10	*	19	*
2	MIRROR 7.5A	11	*	20	WIPER 30A
3	*	12	A/C 7.5A	21	P.WIND 30A
4	METER 10A	13	R.WIPER 15A	22	TAIL 10A
5	SAS 7.5A	14	*	23	ILLUMI 10A
6	ENGIGA 7.5A	15	[PLG 20A]	24	[INJ 7.5A]
7	STA 7.5A	16	[SUNROOF 15A]	25	*
8	*	17	[AUDIO 10A]	26	*
9	*	18	[M.DEF 10A]	27	*

[ ] IF EQUIPPED

F-03
FUSE AND RELAY BOX ← WITHOUT TOWING PACKAGE
RELAY BOX ← WITH TOWING PACKAGE

FRONT HARNESS

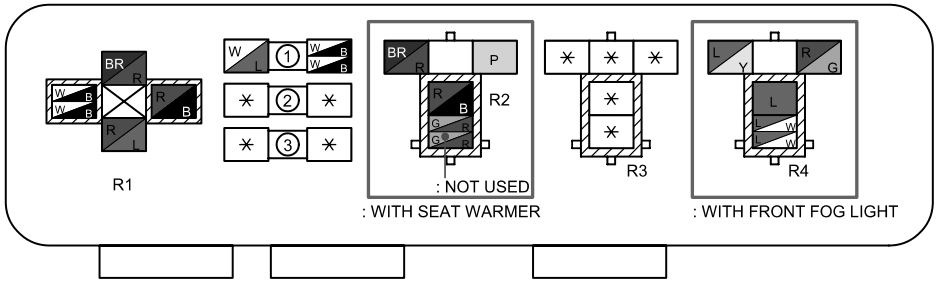

FRONT


NOTE:SEEN FROM TERMINAL SIDE

R1	FAN RELAY {FAN}	(1)	INJ 7.5A
R2	SEAT WARMER RELAY LH {S.WARM L}	(2)	*
R3	*	(3)	*
R4	FRONT FOG LIGHT RELAY {F.FOG}		

{ } NAME INDICATED ON FUSE BOX COVER

(WITHOUT TOWING PACKAGE)

FRONT HARNESS

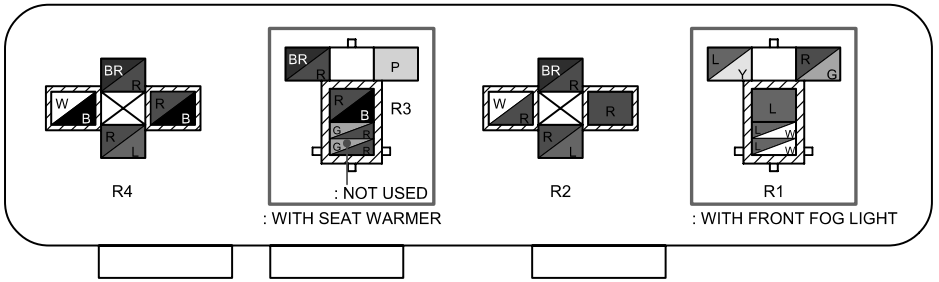

FRONT


NOTE:SEEN FROM TERMINAL SIDE

R1	FRONT FOG LIGHT RELAY {F.FOG}
R2	COOLING FAN RELAY NO.2 {FAN2}
R3	SEAT WARMER RELAY LH {S.WARM L}
R4	COOLING FAN RELAY NO.1 {FAN1}

{ } NAME INDICATED ON FUSE BOX COVER


(WITH TOWING PACKAGE)

C-01 IGNITION SWITCH

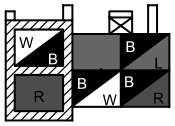


C-02 FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

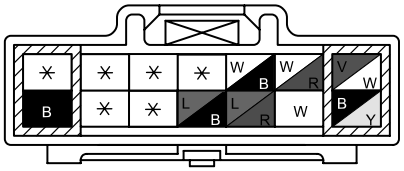


EMISSION HARNESS

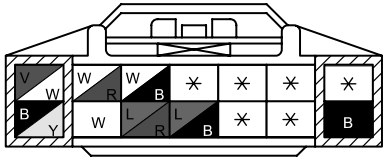


C-03 FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

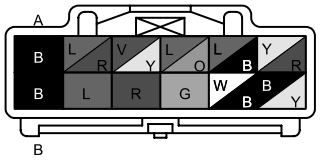

EMISSION HARNESS

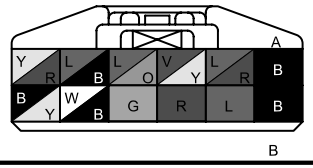

C-05 FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

WITH ADVANCED KEYLESS SYSTEM :




: WITH HEATED OUTER MIRROR



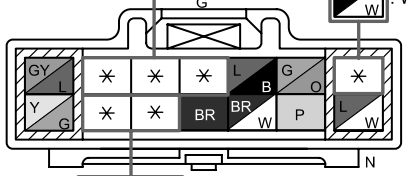

: WITH INDIRECT ILLUMINATION




INSTRUMENT PANEL HARNESS

WITH HEATED OUTER MIRROR :




: WITH ADVANCED KEYLESS SYSTEM



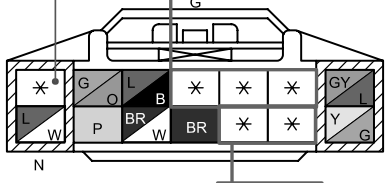


: WITH INDIRECT ILLUMINATION



C-06 FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

WITH AUTO LIGHT-OF SYSTEM/WITH DRL :



: WITH FRONT FOG LIGHT



: WITHOUT DRL




: WITH ADVANCED KEYLESS SYSTEM



: DISCHARGE TYPE



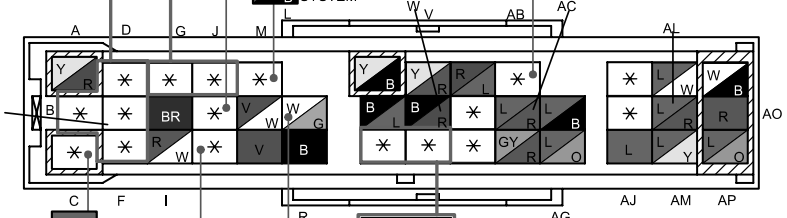

Bose TYPE AUDIO :



: NOT USED

: DISCHARGE TYPE







: WITH SEAT WARMER

INSTRUMENT PANEL HARNESS

WITH FRONT FOG LIGHT :




: WITH AUTO LIGHT-OFF SYSTEM/WITH DRL




DISCHARGE TYPE :

WITH ADVANCED KEYLESS SYSTEM :



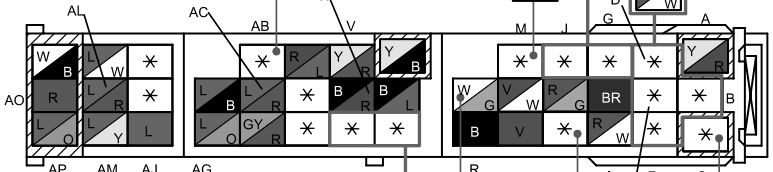

WITH SEAT WARMER :



: NOT USED

: DISCHARGE TYPE






: Bose TYPE AUDIO

C-07 FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

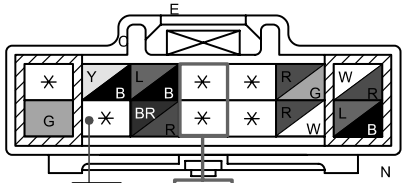

WITH HEATED OUTER MIRROR : B R

W L / W B : WITH TOWING PACKAGE

INSTRUMENT PANEL HARNESS

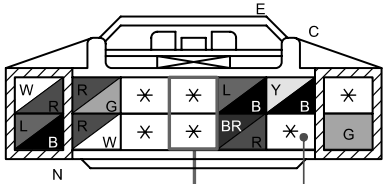


WITH TOWING PACKAGE : W L / W B


B R : WITH HEATED OUTER MIRROR

C-08 FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

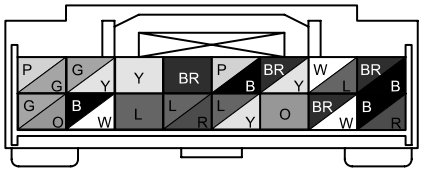

INSTRUMENT PANEL HARNESS

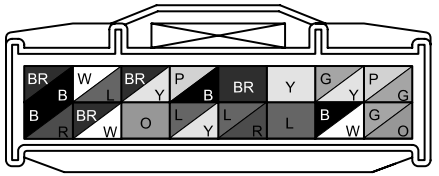


C-09 FRONT HARNESS-REAR HARNESS

FRONT HARNESS

WITH SEAT WARMER : G Y / G R

B Y : WITH MEMORY POWER SEAT

WITH POWER SEAT : W G

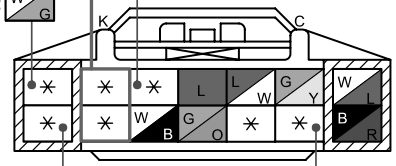

G : WITH POWER SEAT


W : WITH INVERTER

REAR HARNESS

WITH MEMORY POWER SEAT: B Y

G Y / G R : WITH SEAT WARMER

W G : WITH POWER SEAT

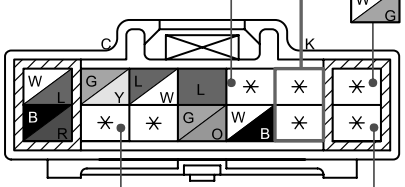

W : WITH INVERTER


G : WITH POWER SEAT

C-10 FRONT HARNESS-REAR HARNESS

FRONT HARNESS


LG LG B : WITH PLG SYSTEM

G : NOT USED

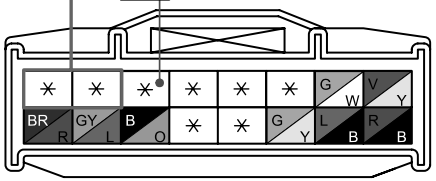


REAR HARNESS

WITH PLG SYSTEM : LG B LG

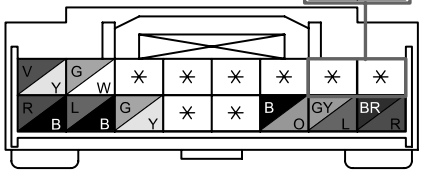


C-11 INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

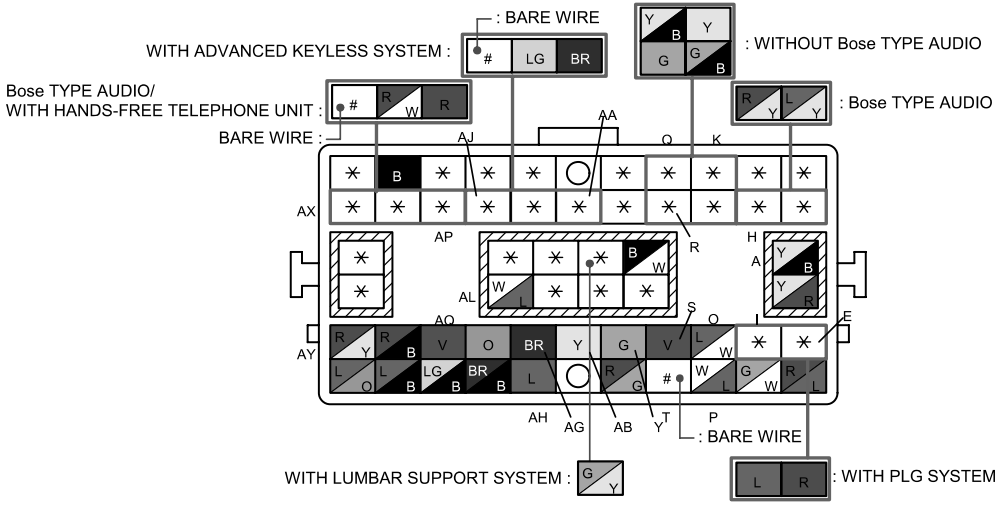


REAR HARNESS

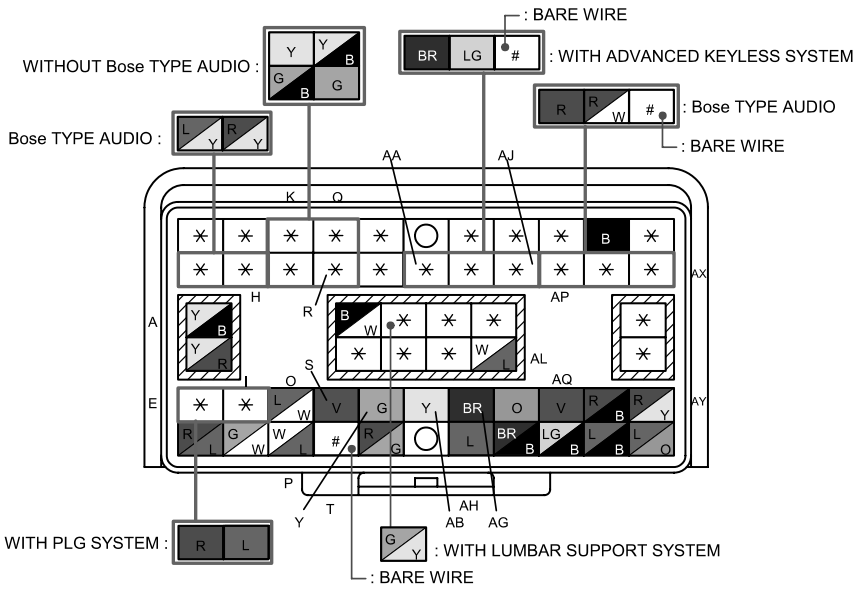


C-12 INSTRUMENT PANEL HARNESS-DOOR NO.1 HARNESS


INSTRUMENT PANEL HARNESS

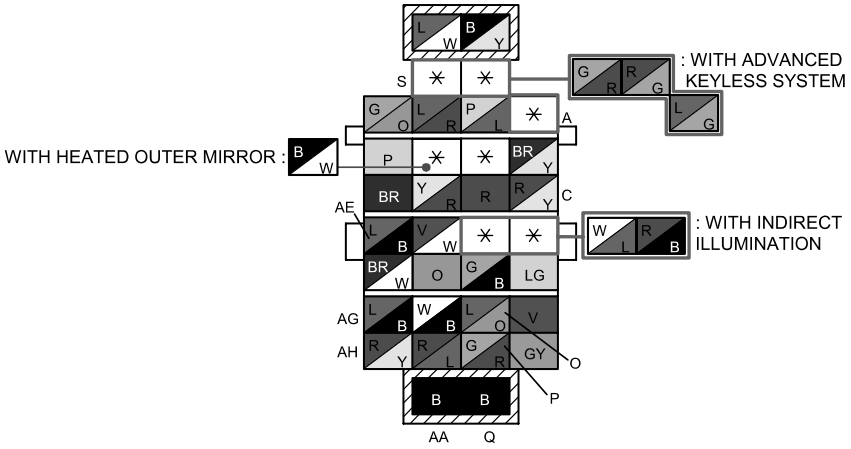


DOOR NO.1 HARNESS

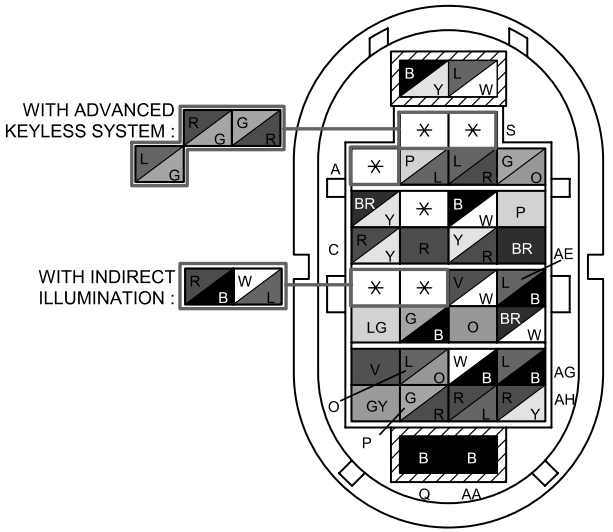


C-13 FRONT HARNESS-DOOR NO.2 HARNESS

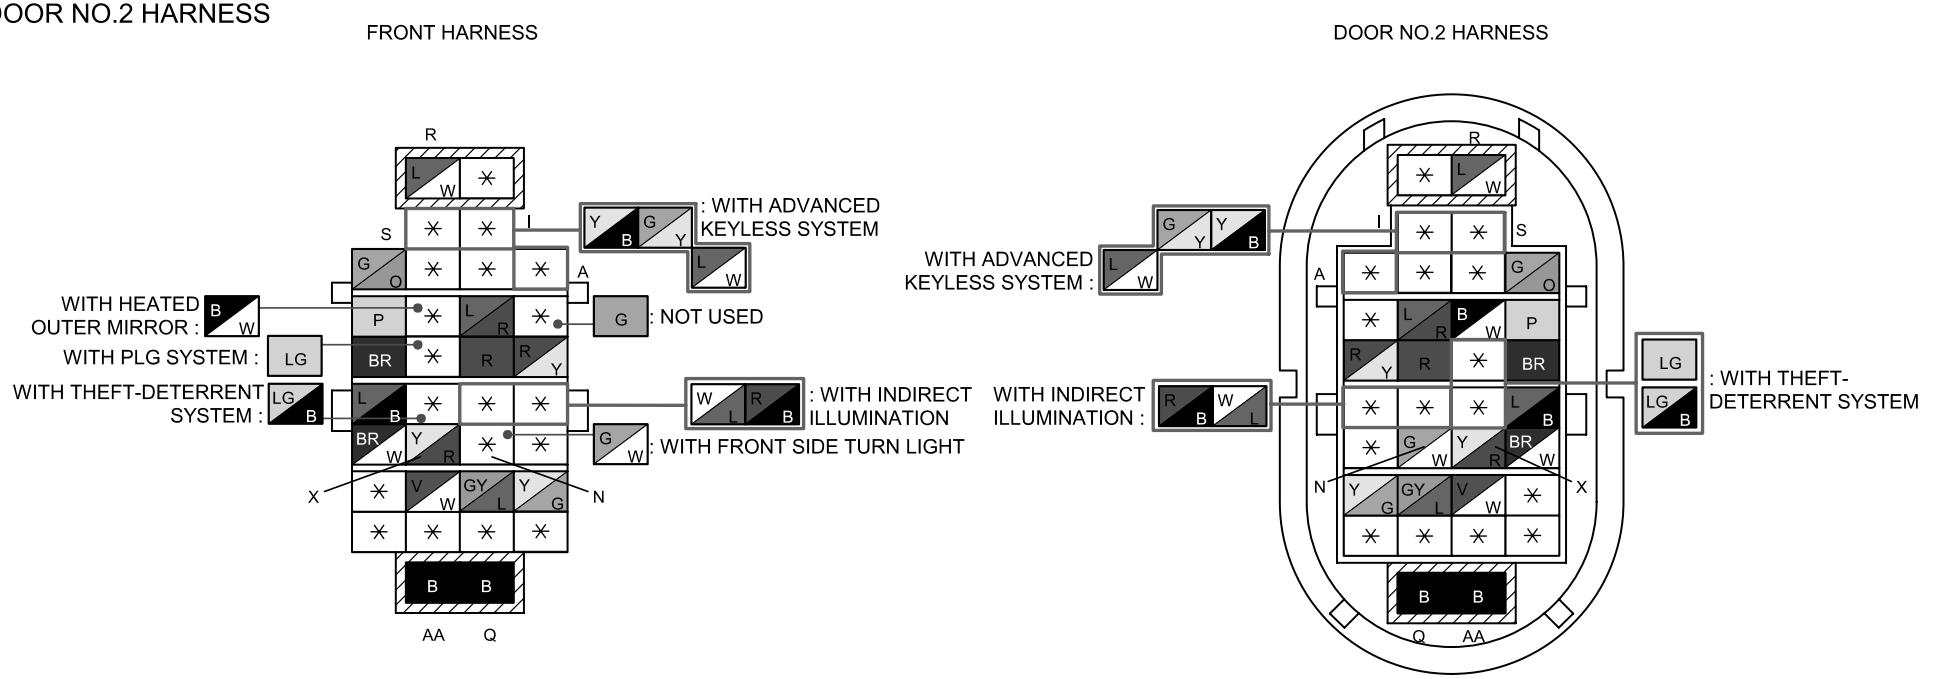


C-14 REAR HARNESS-DOOR NO.3 HARNESS

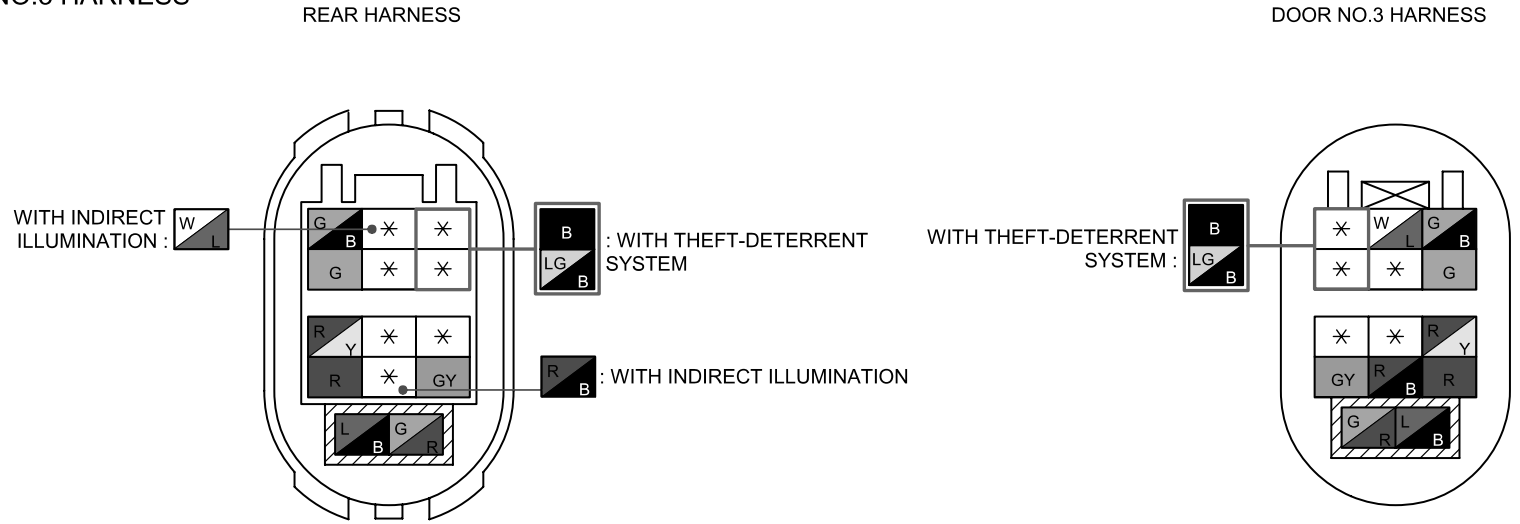

C-15 REAR HARNESS-DOOR NO.4 HARNESS

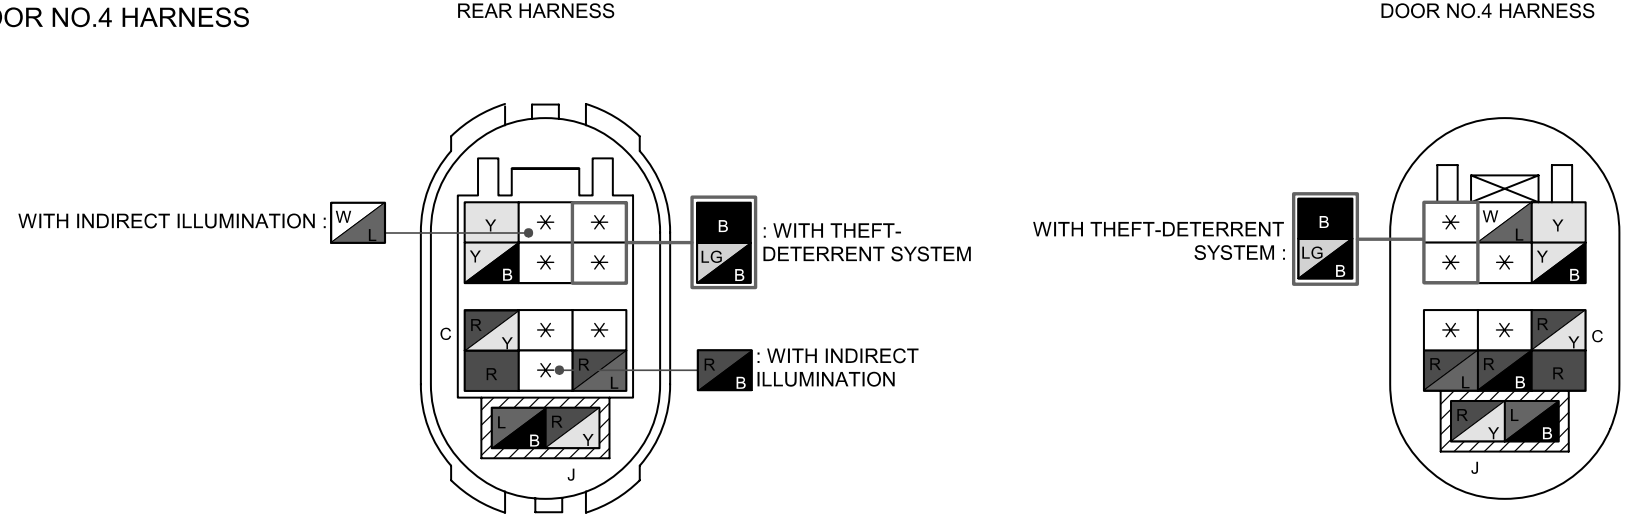


C-16 INSTRUMENT PANEL HARNESS-REAR HARNESS

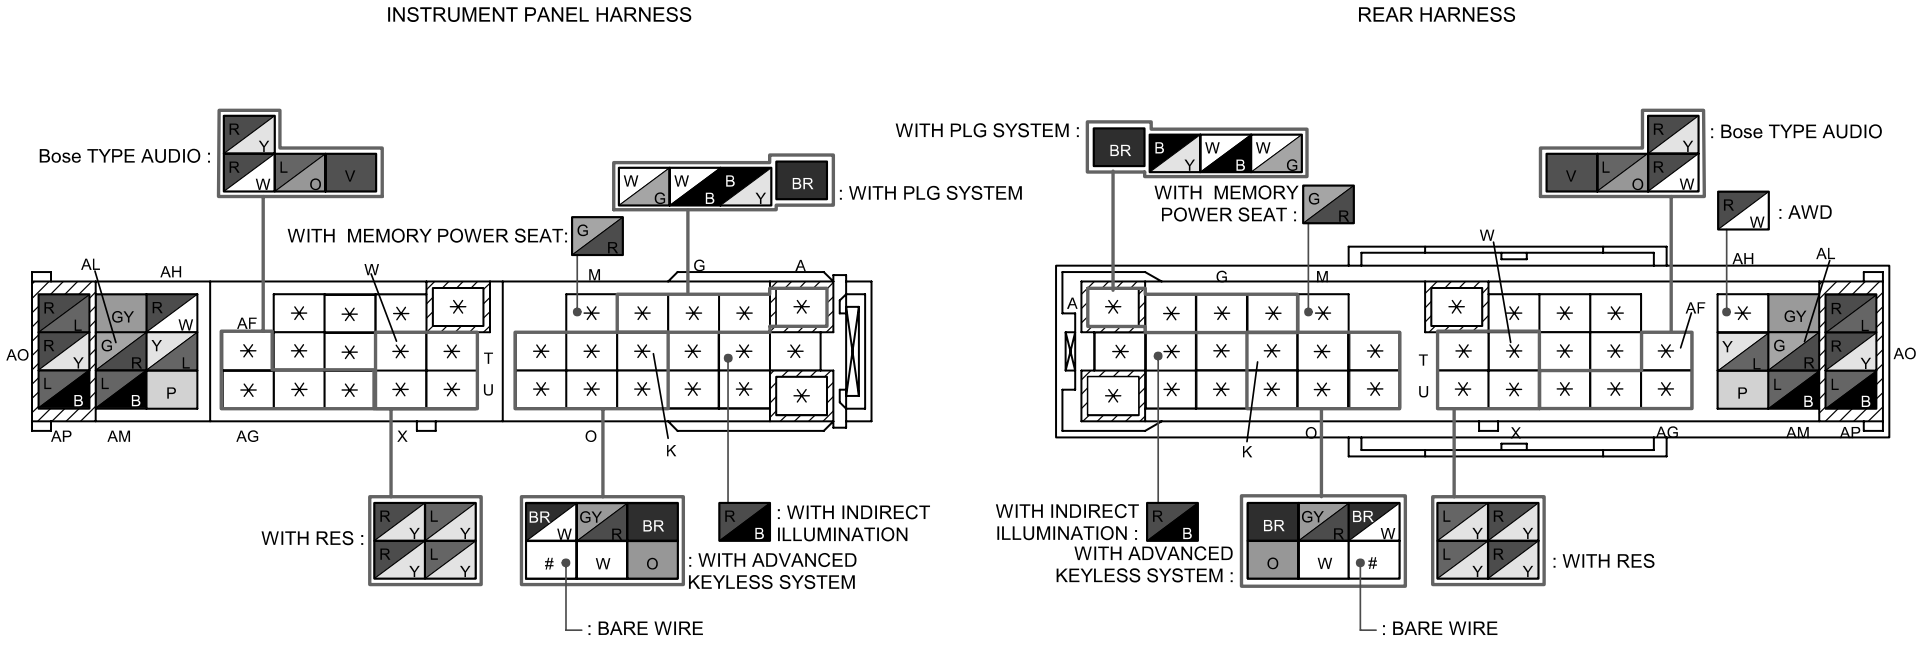


C-17 INSTRUMENT PANEL HARNESS-INTERIOR LIGHT NO.2 HARNESS

INSTRUMENT PANEL HARNESS

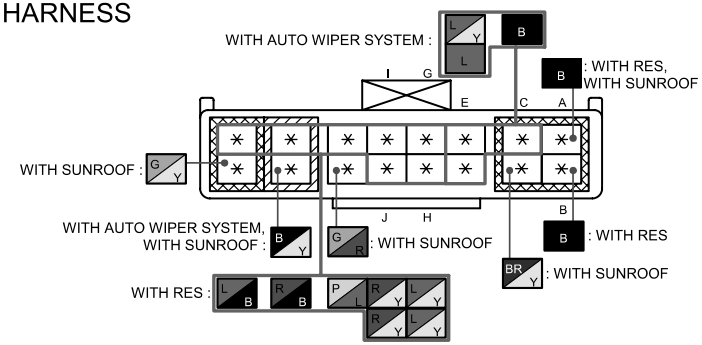


INTERIOR LIGHT NO.2 HARNESS

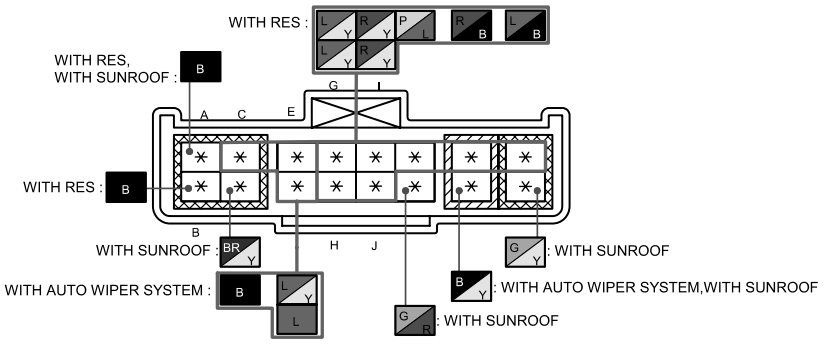


C-18 INSTRUMENT PANEL HARNESS-INTERIOR LIGHT NO.2 HARNESS

INSTRUMENT PANEL HARNESS

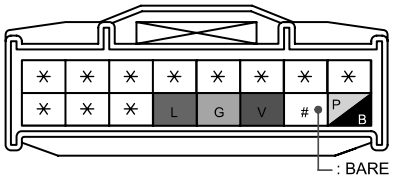


INTERIOR LIGHT NO.2 HARNESS

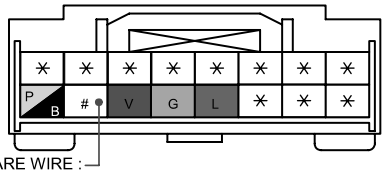


(WITH HANDS-FREE TELEPHONE UNIT)

C-19 REAR HARNESS-SHORT CORD

REAR HARNESS

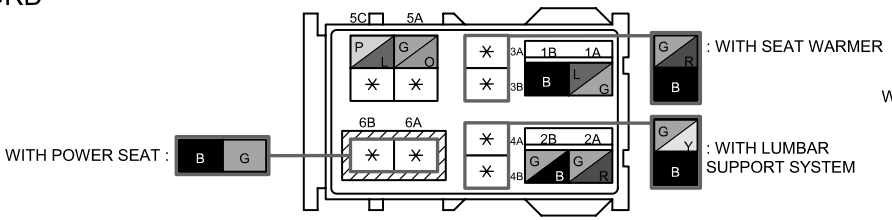


SHORT CORD

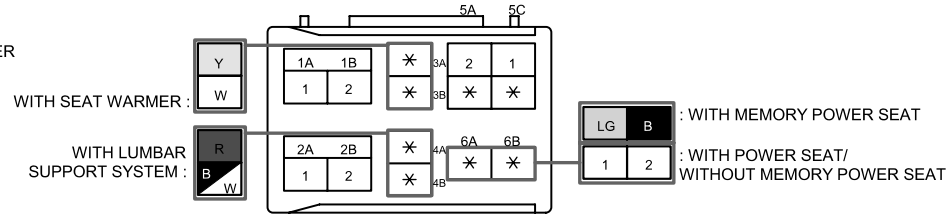


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

C-20 REAR HARNESS-SHORT CORD

REAR HARNESS

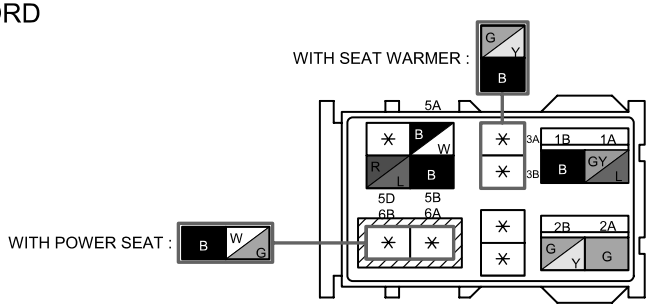


SHORT CORD

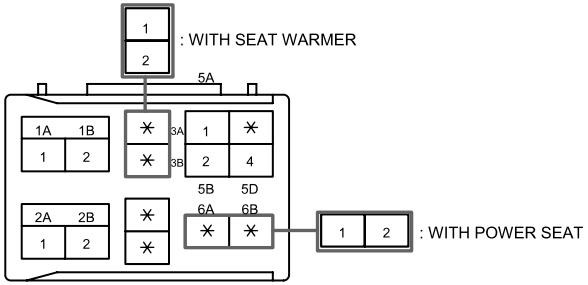


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

C-21 REAR HARNESS-REAR NO.2 HARNESS

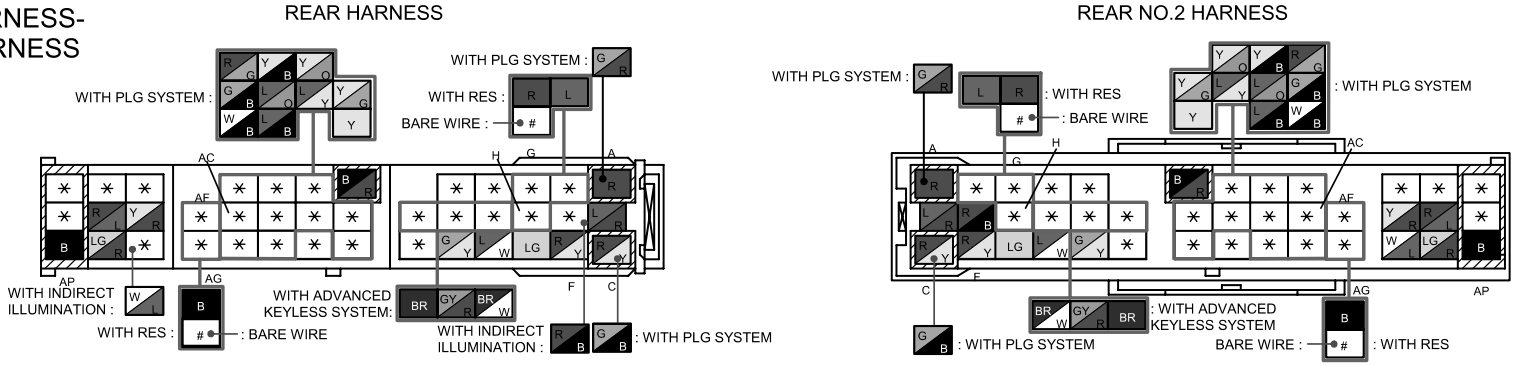


C-23 REAR HARNESS-REAR NO.2 HARNESS

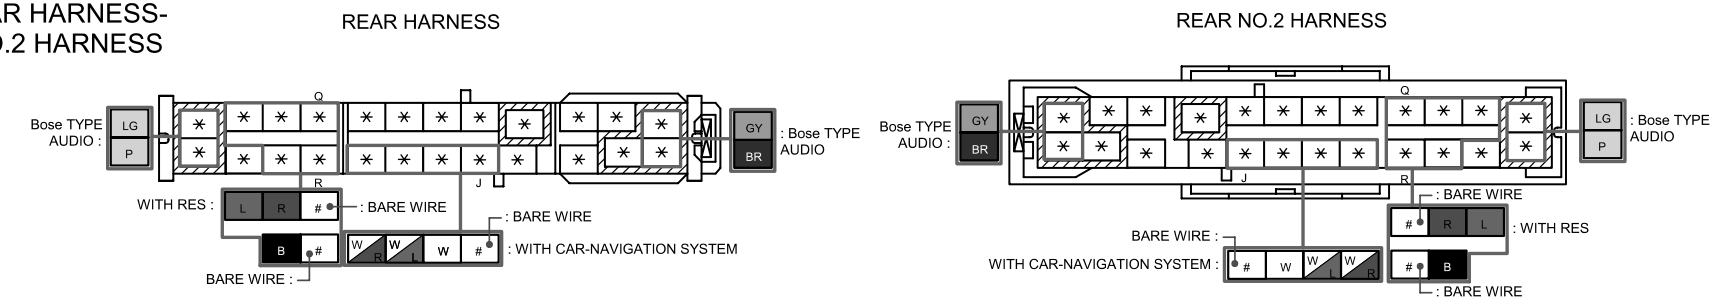

C-24 REAR HARNESS-SHORT CORD




C-25 INSTRUMENT PANEL HARNESS-REAR HARNESS

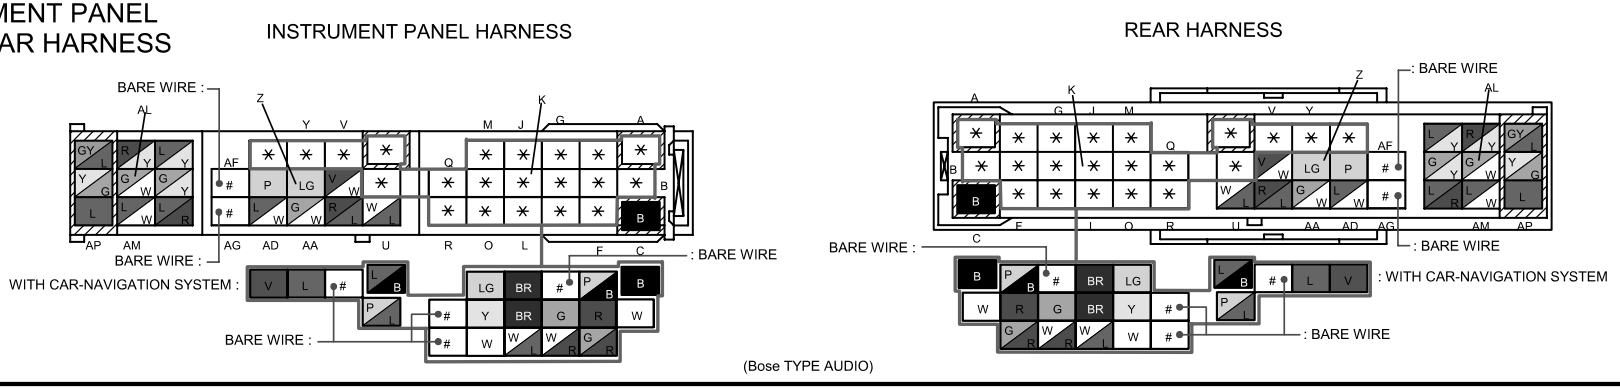


C-26 REAR NO.2 HARNESS-REAR NO.3 HARNESS

REAR NO.2 HARNESS

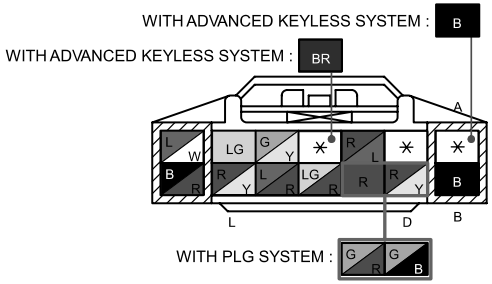


REAR NO.3 HARNESS

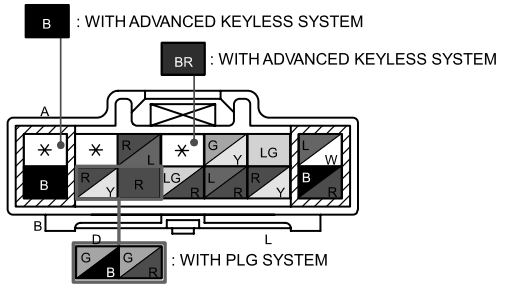


C-27 REAR NO.2 HARNESS-REAR NO.3 HARNESS

REAR NO.2 HARNESS

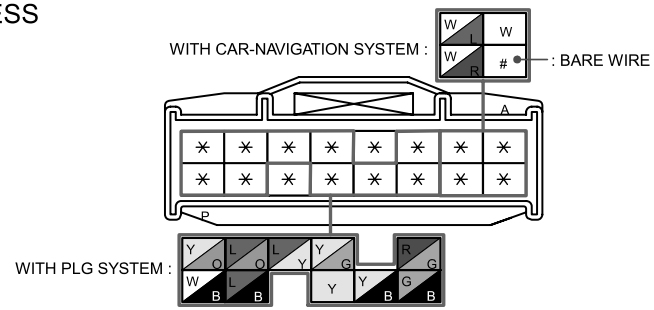


REAR NO.3 HARNESS

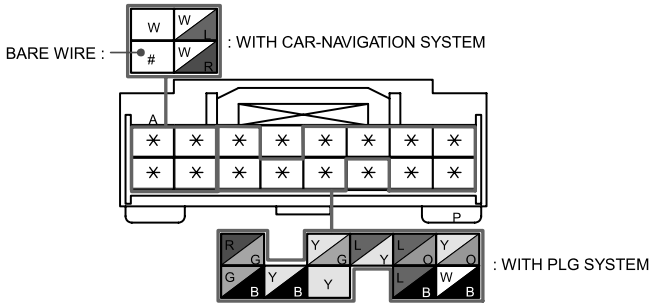


C-28 REAR NO.2 HARNESS-INTERIOR LIGHT HARNESS

REAR NO.2 HARNESS




INTERIOR LIGHT HARNESS

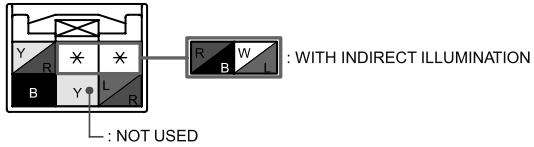


C-32 DOOR NO.3 HARNESS-SHORT CORD

DOOR NO.3 HARNESS

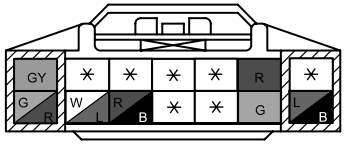


SHORT CORD

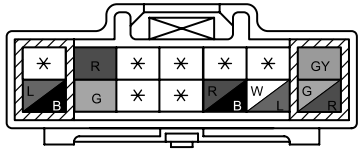


C-33 DOOR NO.4 HARNESS-SHORT CORD

DOOR NO.4 HARNESS

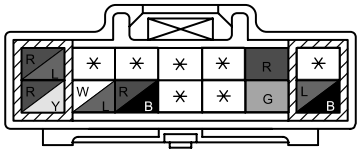


SHORT CORD

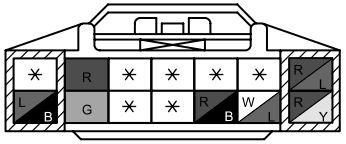


C-34 EMISSION HARNESS-INJECTION HARNESS

EMISSION HARNESS

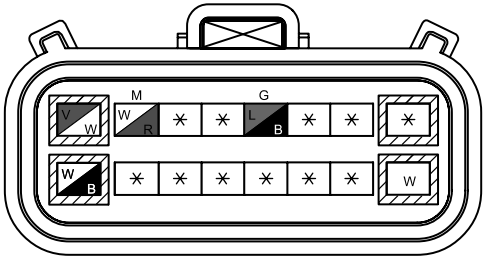


INJECTION HARNESS

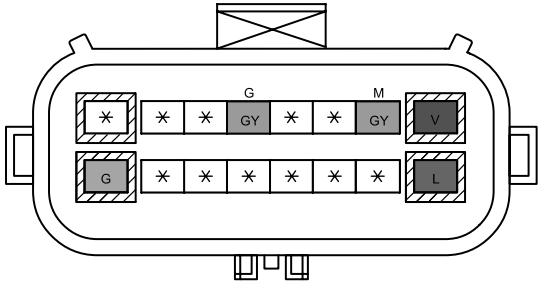


C-35 EMISSION HARNESS-INJECTION HARNESS


EMISSION HARNESS

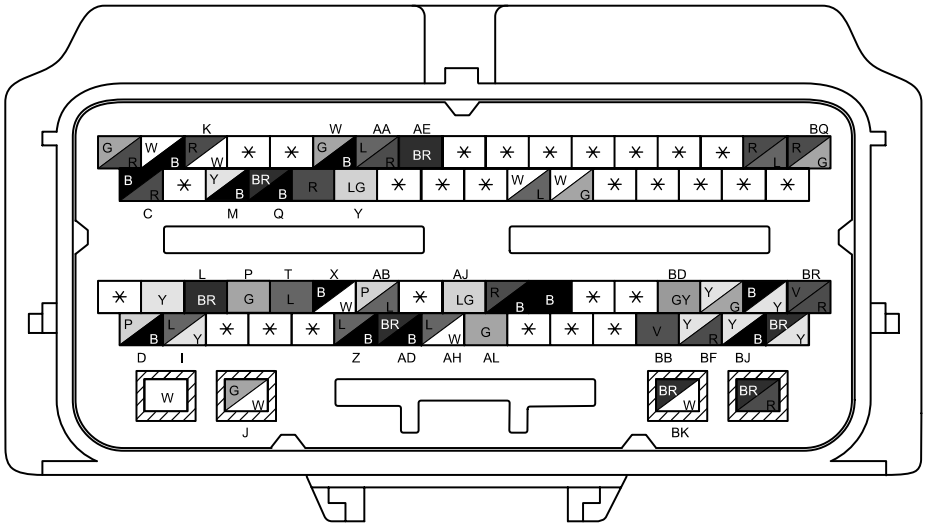


INJECTION HARNESS

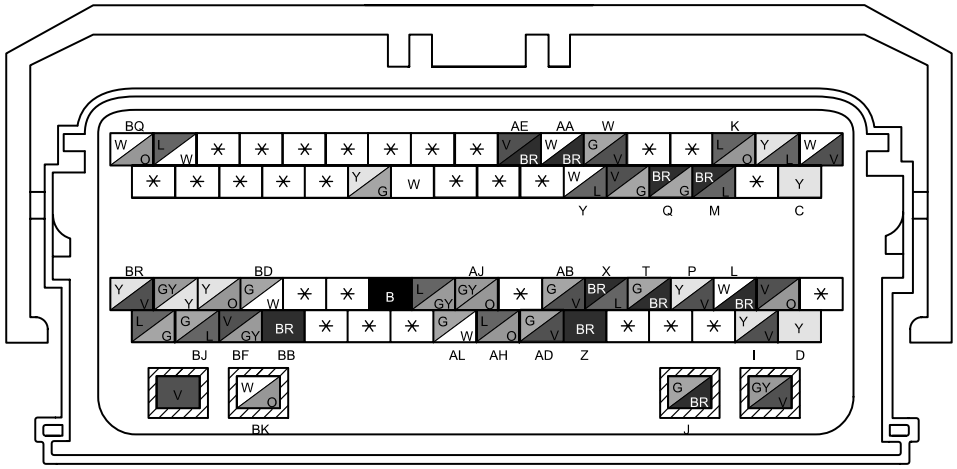


C-36
JOINT CONNECTOR

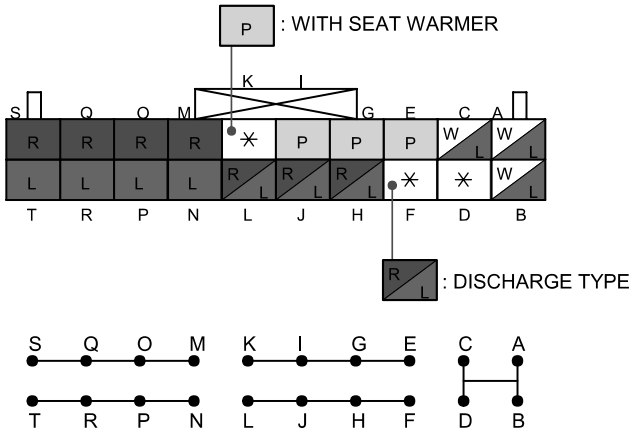

C-37
JOINT CONNECTOR

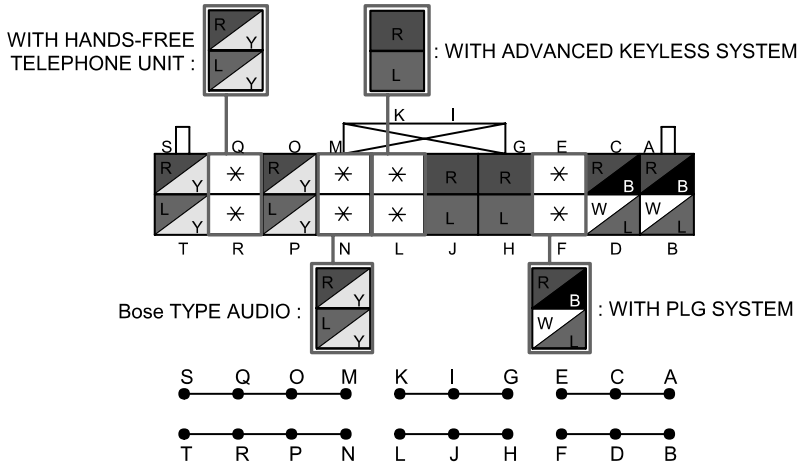

C-38
JOINT CONNECTOR

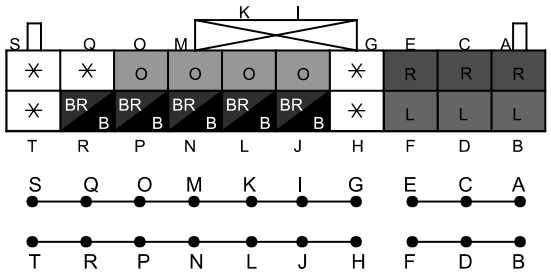


C-39
INSTRUMENT PANEL HARNESS-SHORT CORD




C-40
REAR HARNESS-SHORT CORD




(WITH MEMORY POWER SEAT)

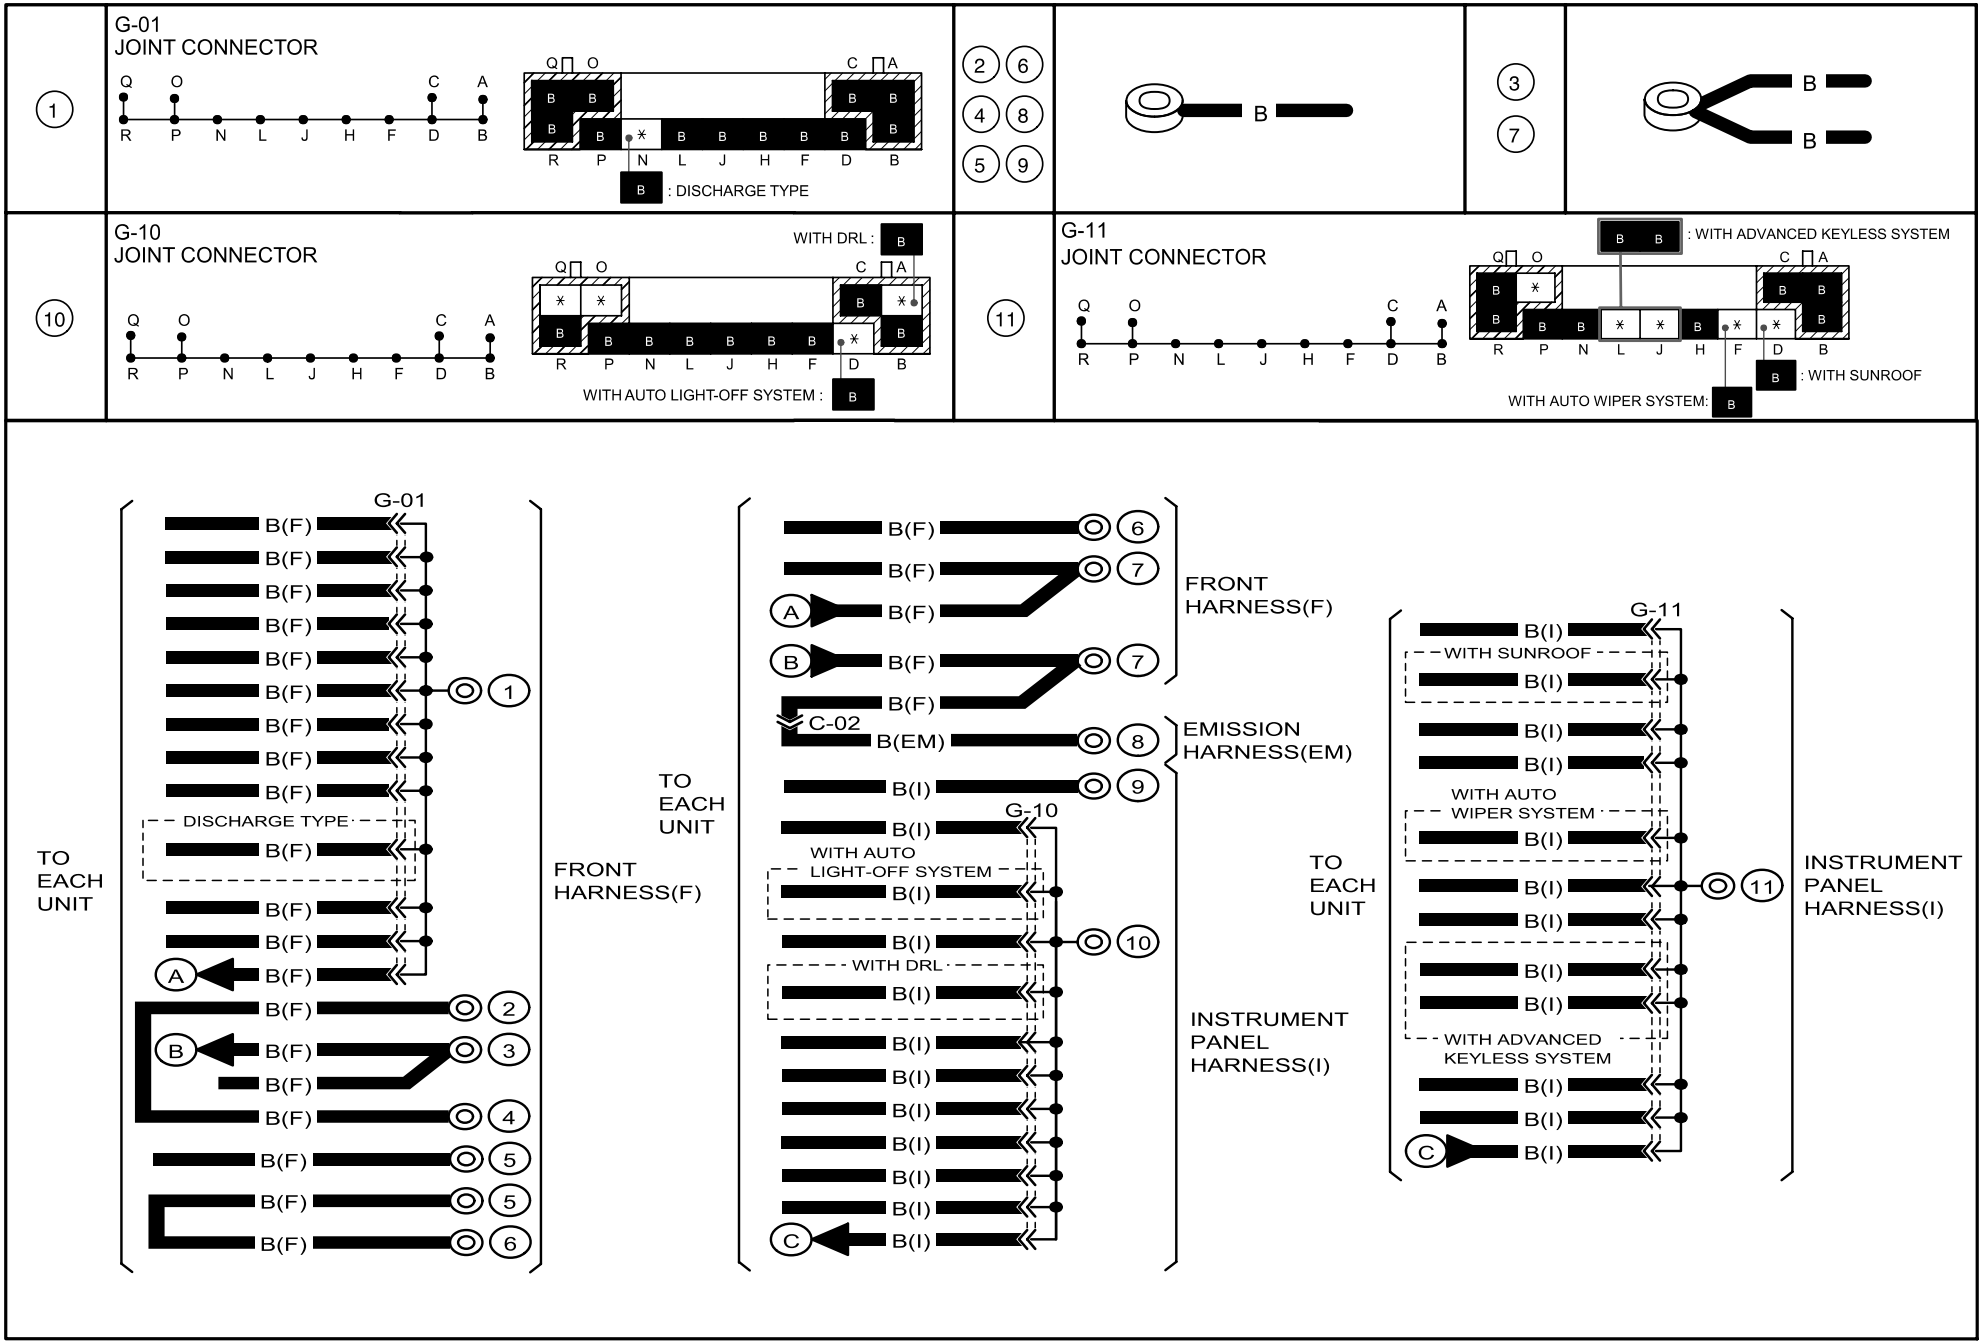

1
G-01
JOINT CONNECTOR
Q O C A
R P N L J H F D B
: DISCHARGE TYPE
2 6
4 8
5 9
B
3 7
B
B
10
G-10
JOINT CONNECTOR
WITH DRL : B
WITH AUTO LIGHT-OFF SYSTEM : B
11
G-11
JOINT CONNECTOR
: WITH ADVANCED KEYLESS SYSTEM
: WITH SUNROOF
WITH AUTO WIPER SYSTEM: B
TO EACH UNIT
G-01
B(F)
DISCHARGE TYPE
FRONT HARNESS(F)
TO EACH UNIT
G-10
WITH AUTO LIGHT-OFF SYSTEM
WITH DRL
C-02
B(EM)
B(I)
FRONT HARNESS(F)
EMISSION HARNESS(EM)
INSTRUMENT PANEL HARNESS(I)
TO EACH UNIT
G-11
WITH SUNROOF
WITH AUTO WIPER SYSTEM
WITH ADVANCED KEYLESS SYSTEM
INSTRUMENT PANEL HARNESS(I)

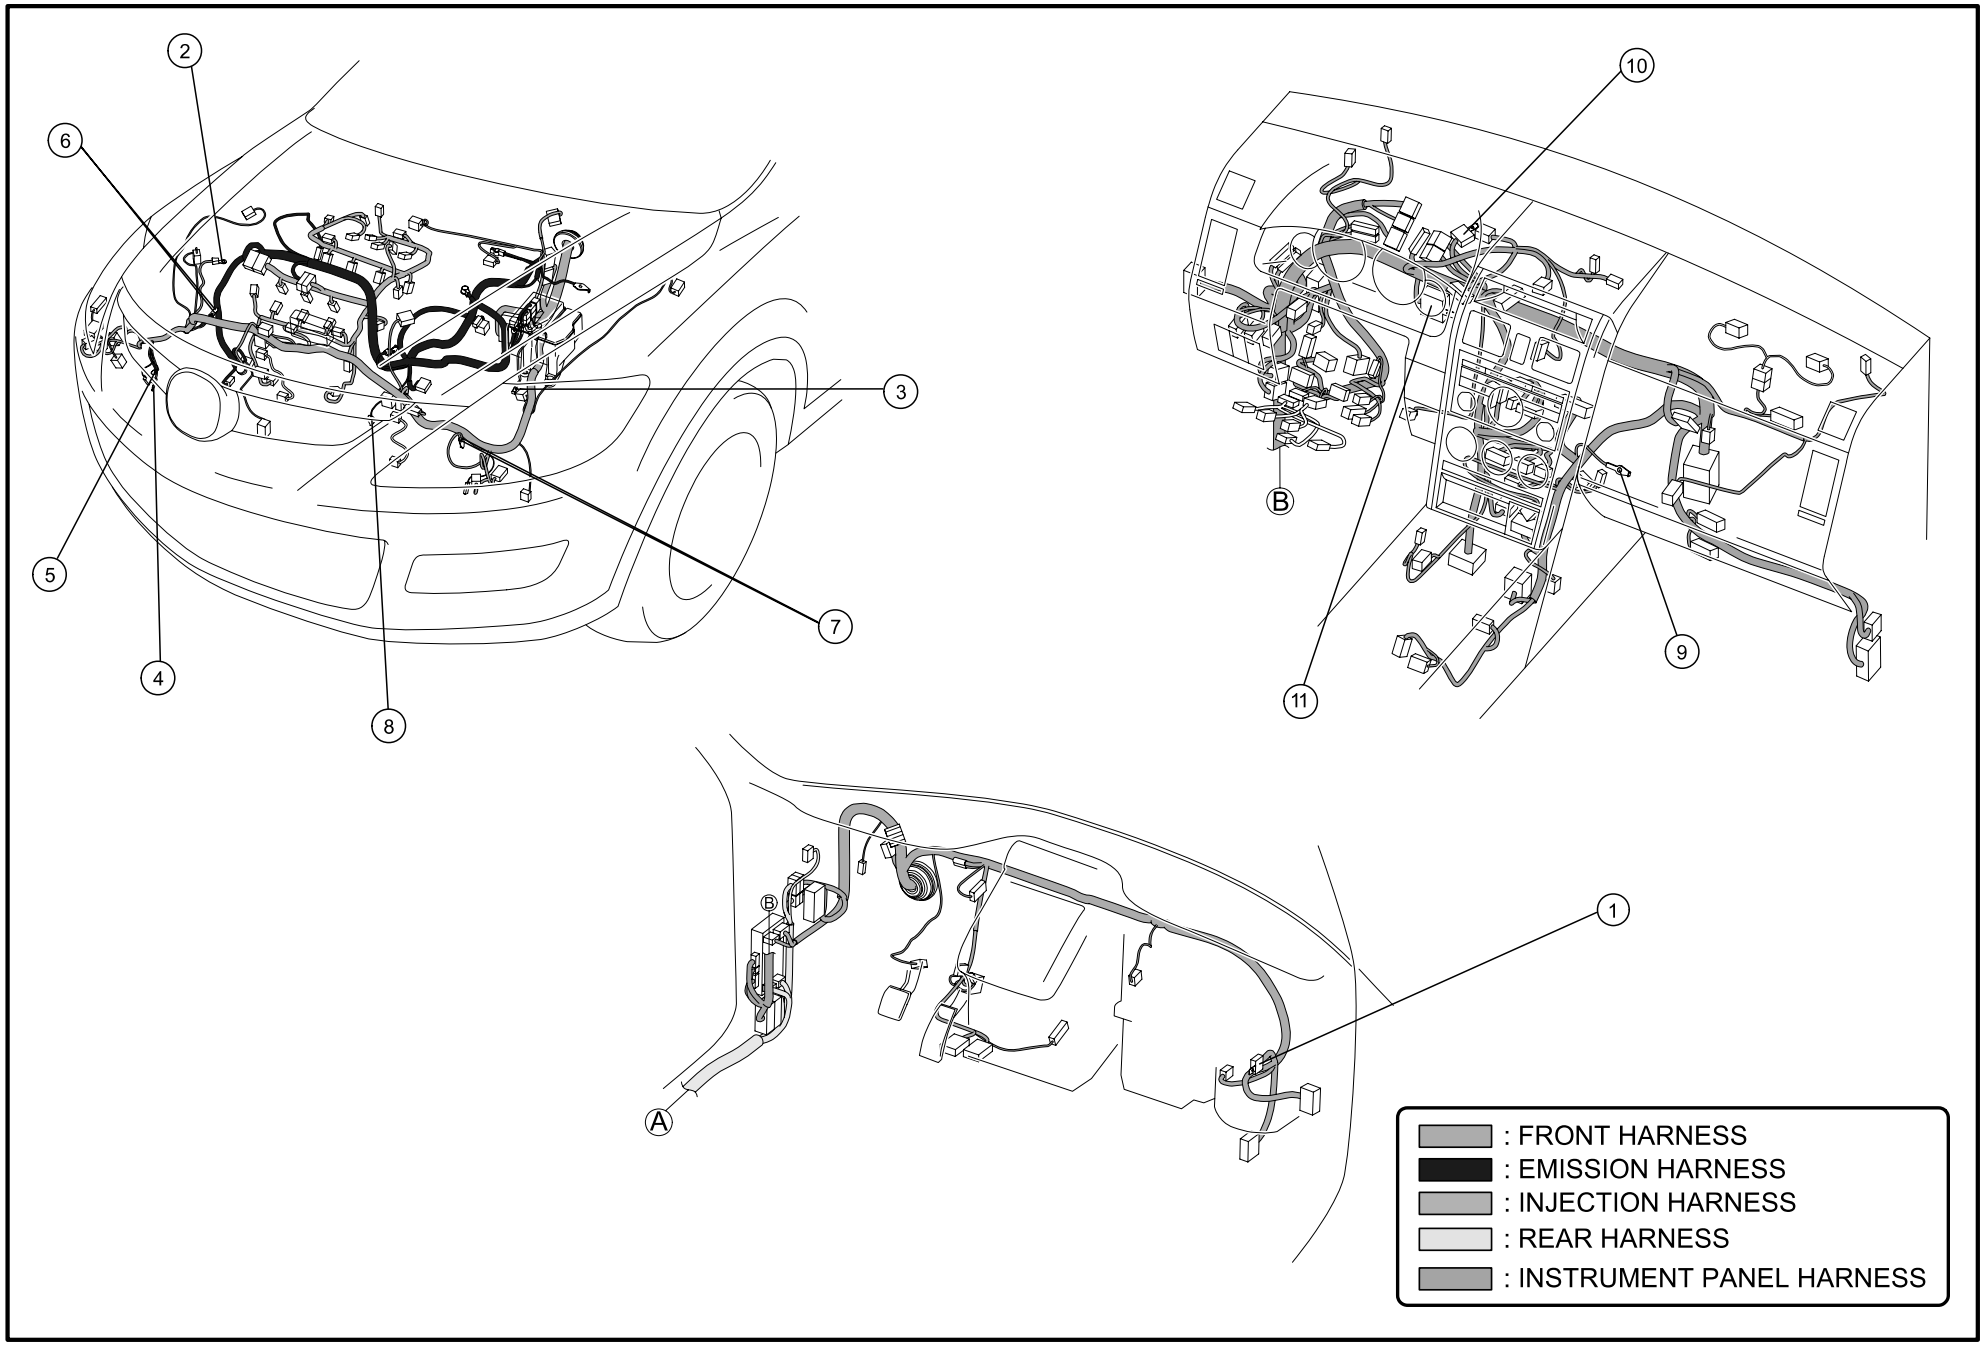
2
6
3
5
7
4
8
10
B
11
9
B
A
1
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

(12)


G-12
JOINT CONNECTOR




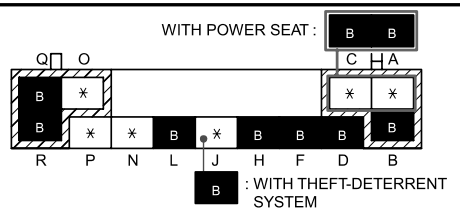


(13)

G-13
JOINT CONNECTOR



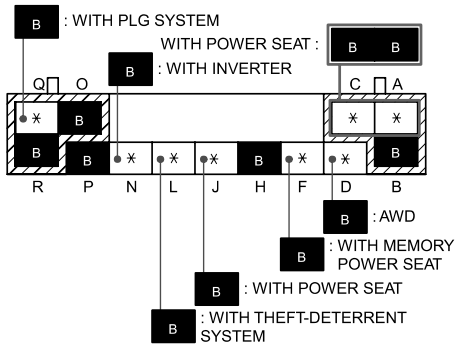



(14)

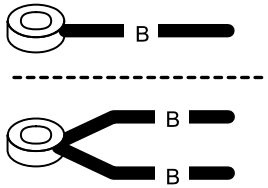



(15)



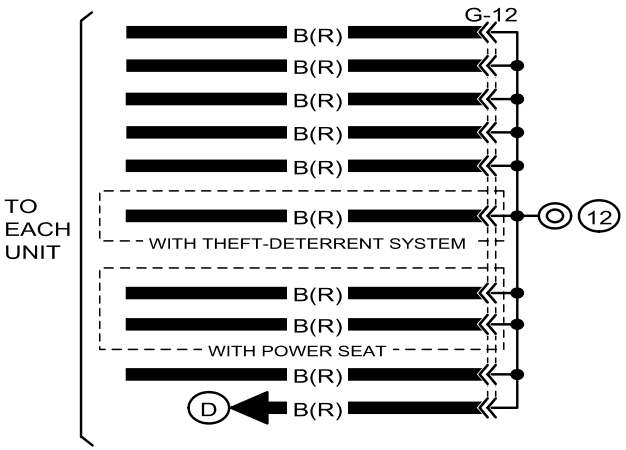


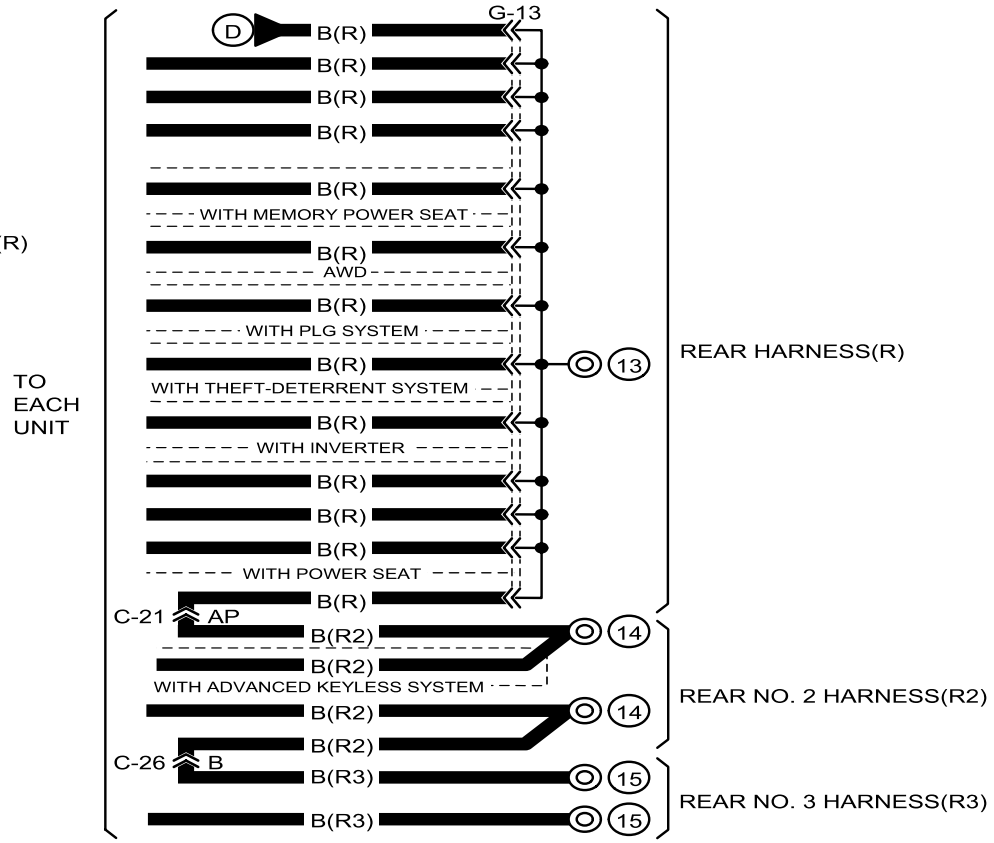

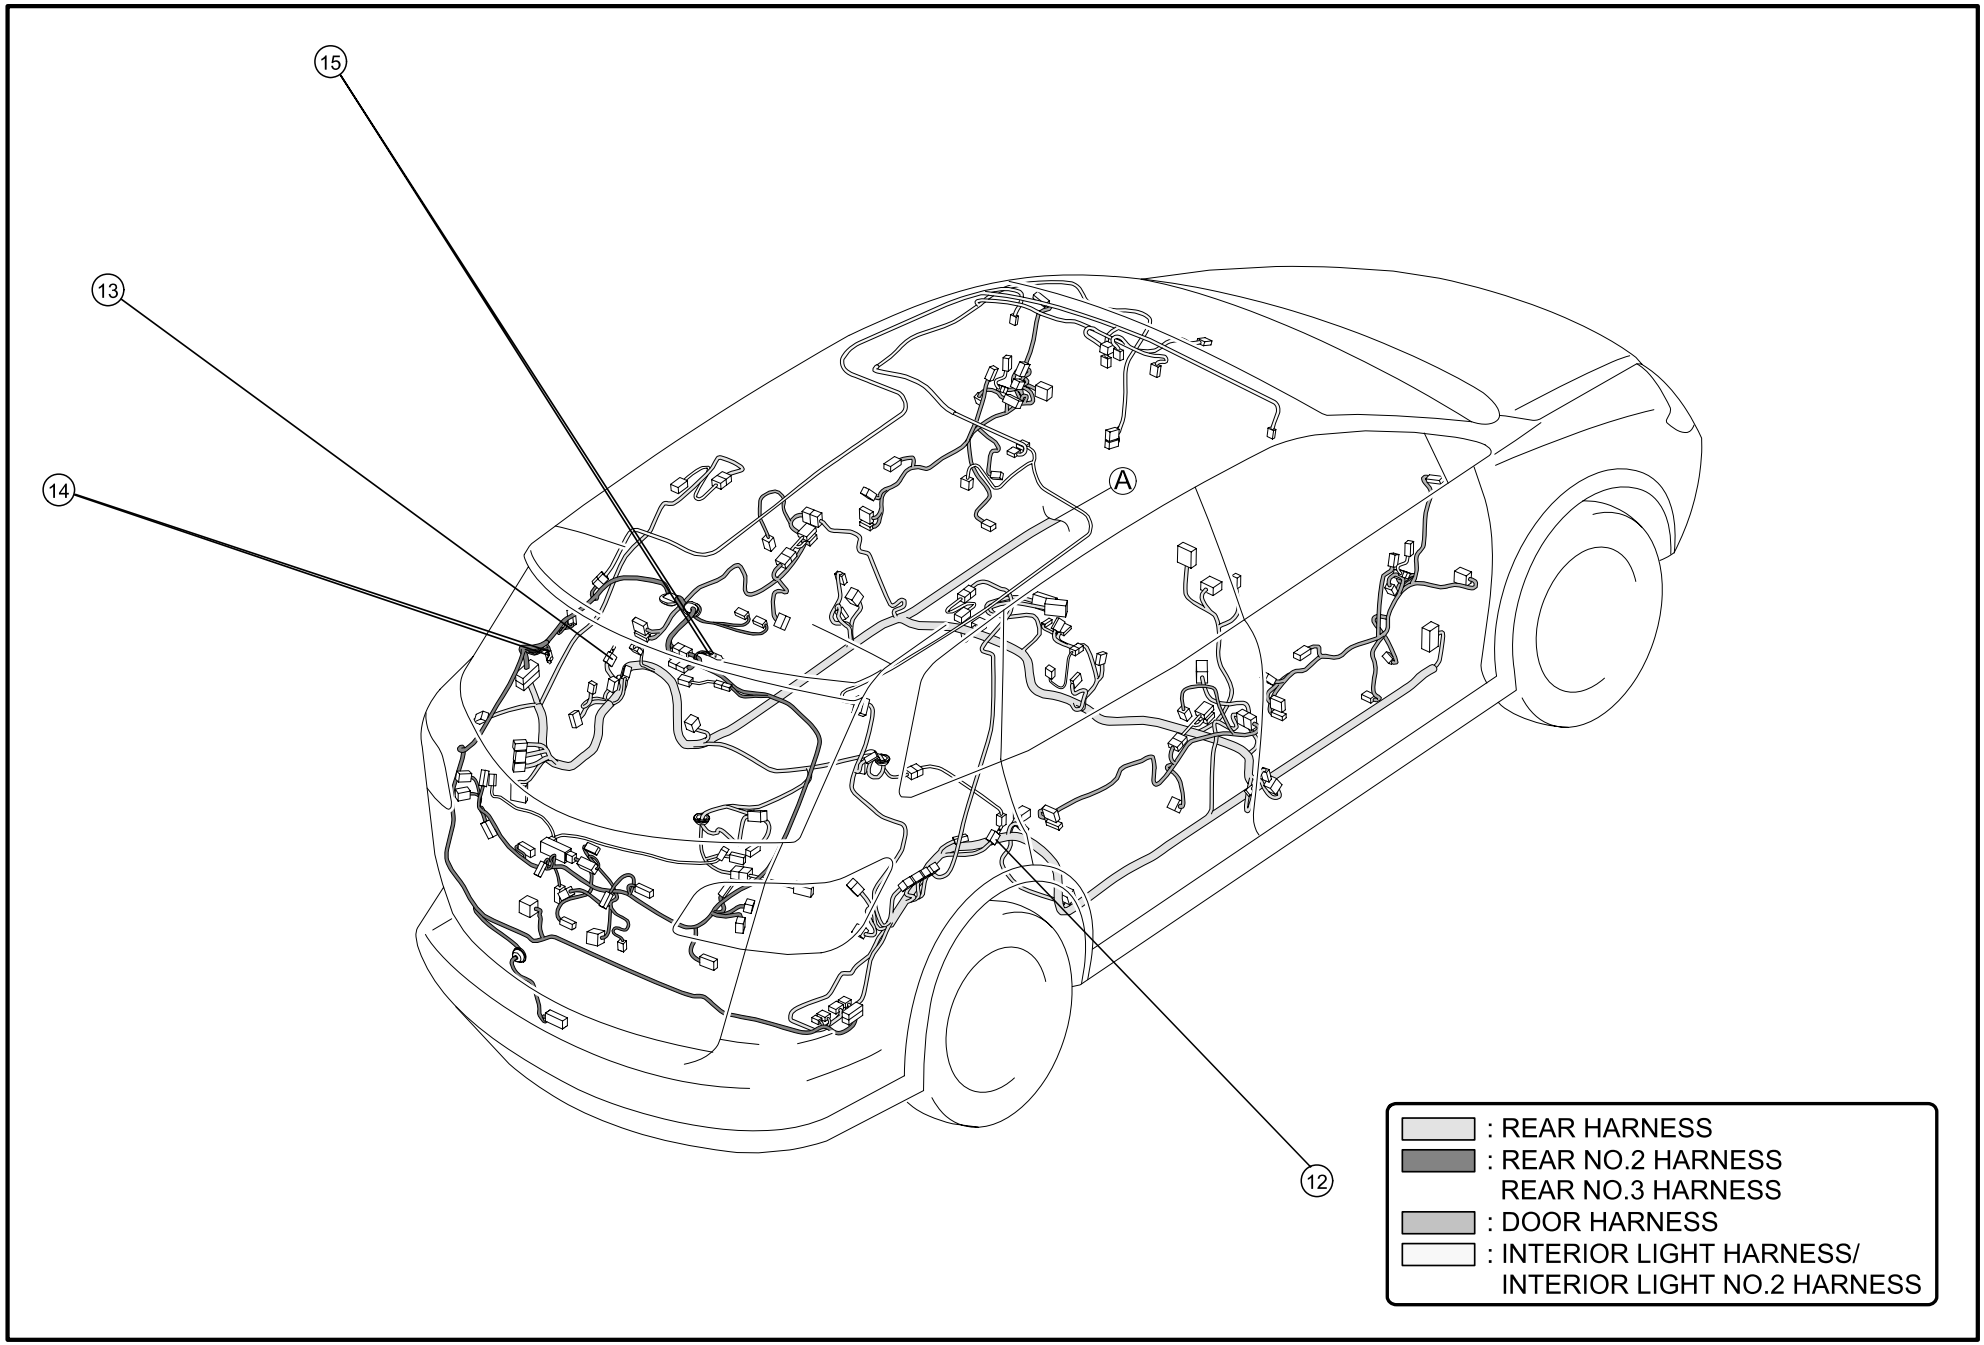
15
13
14
A
12
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

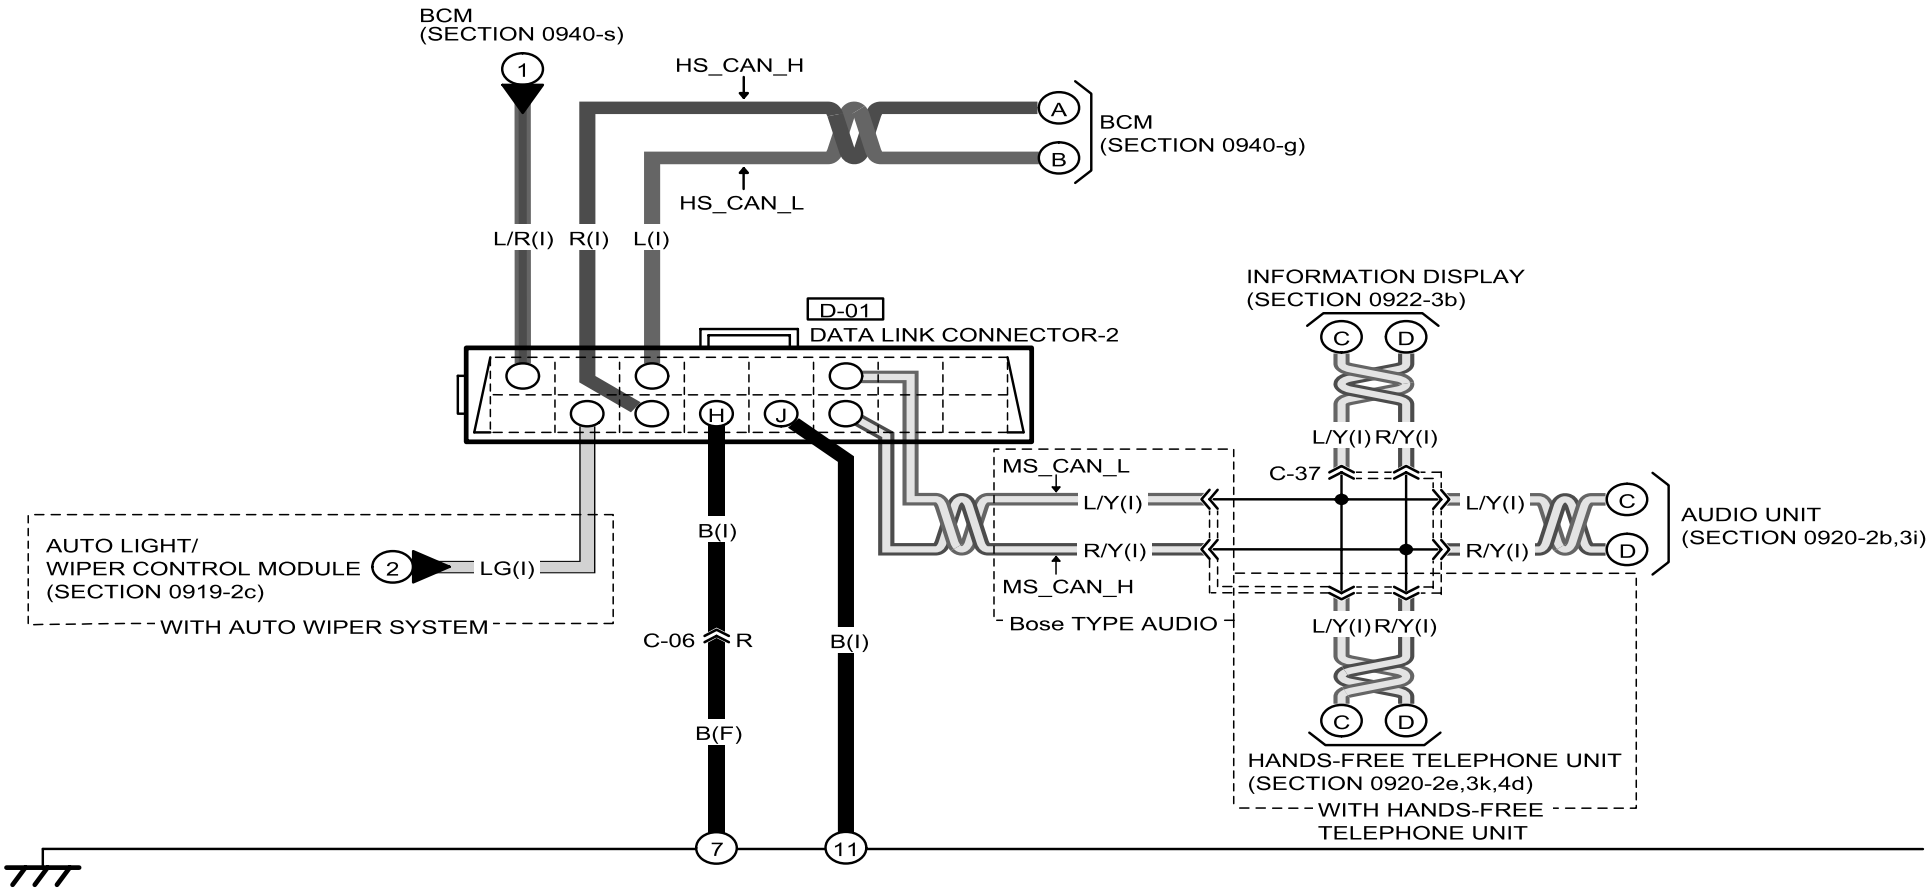



D-01
DATA LINK CONNECTOR-2

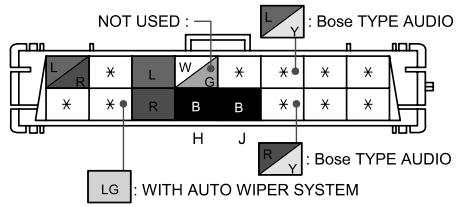


NOTE:SEEN FROM TERMINAL SIDE

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

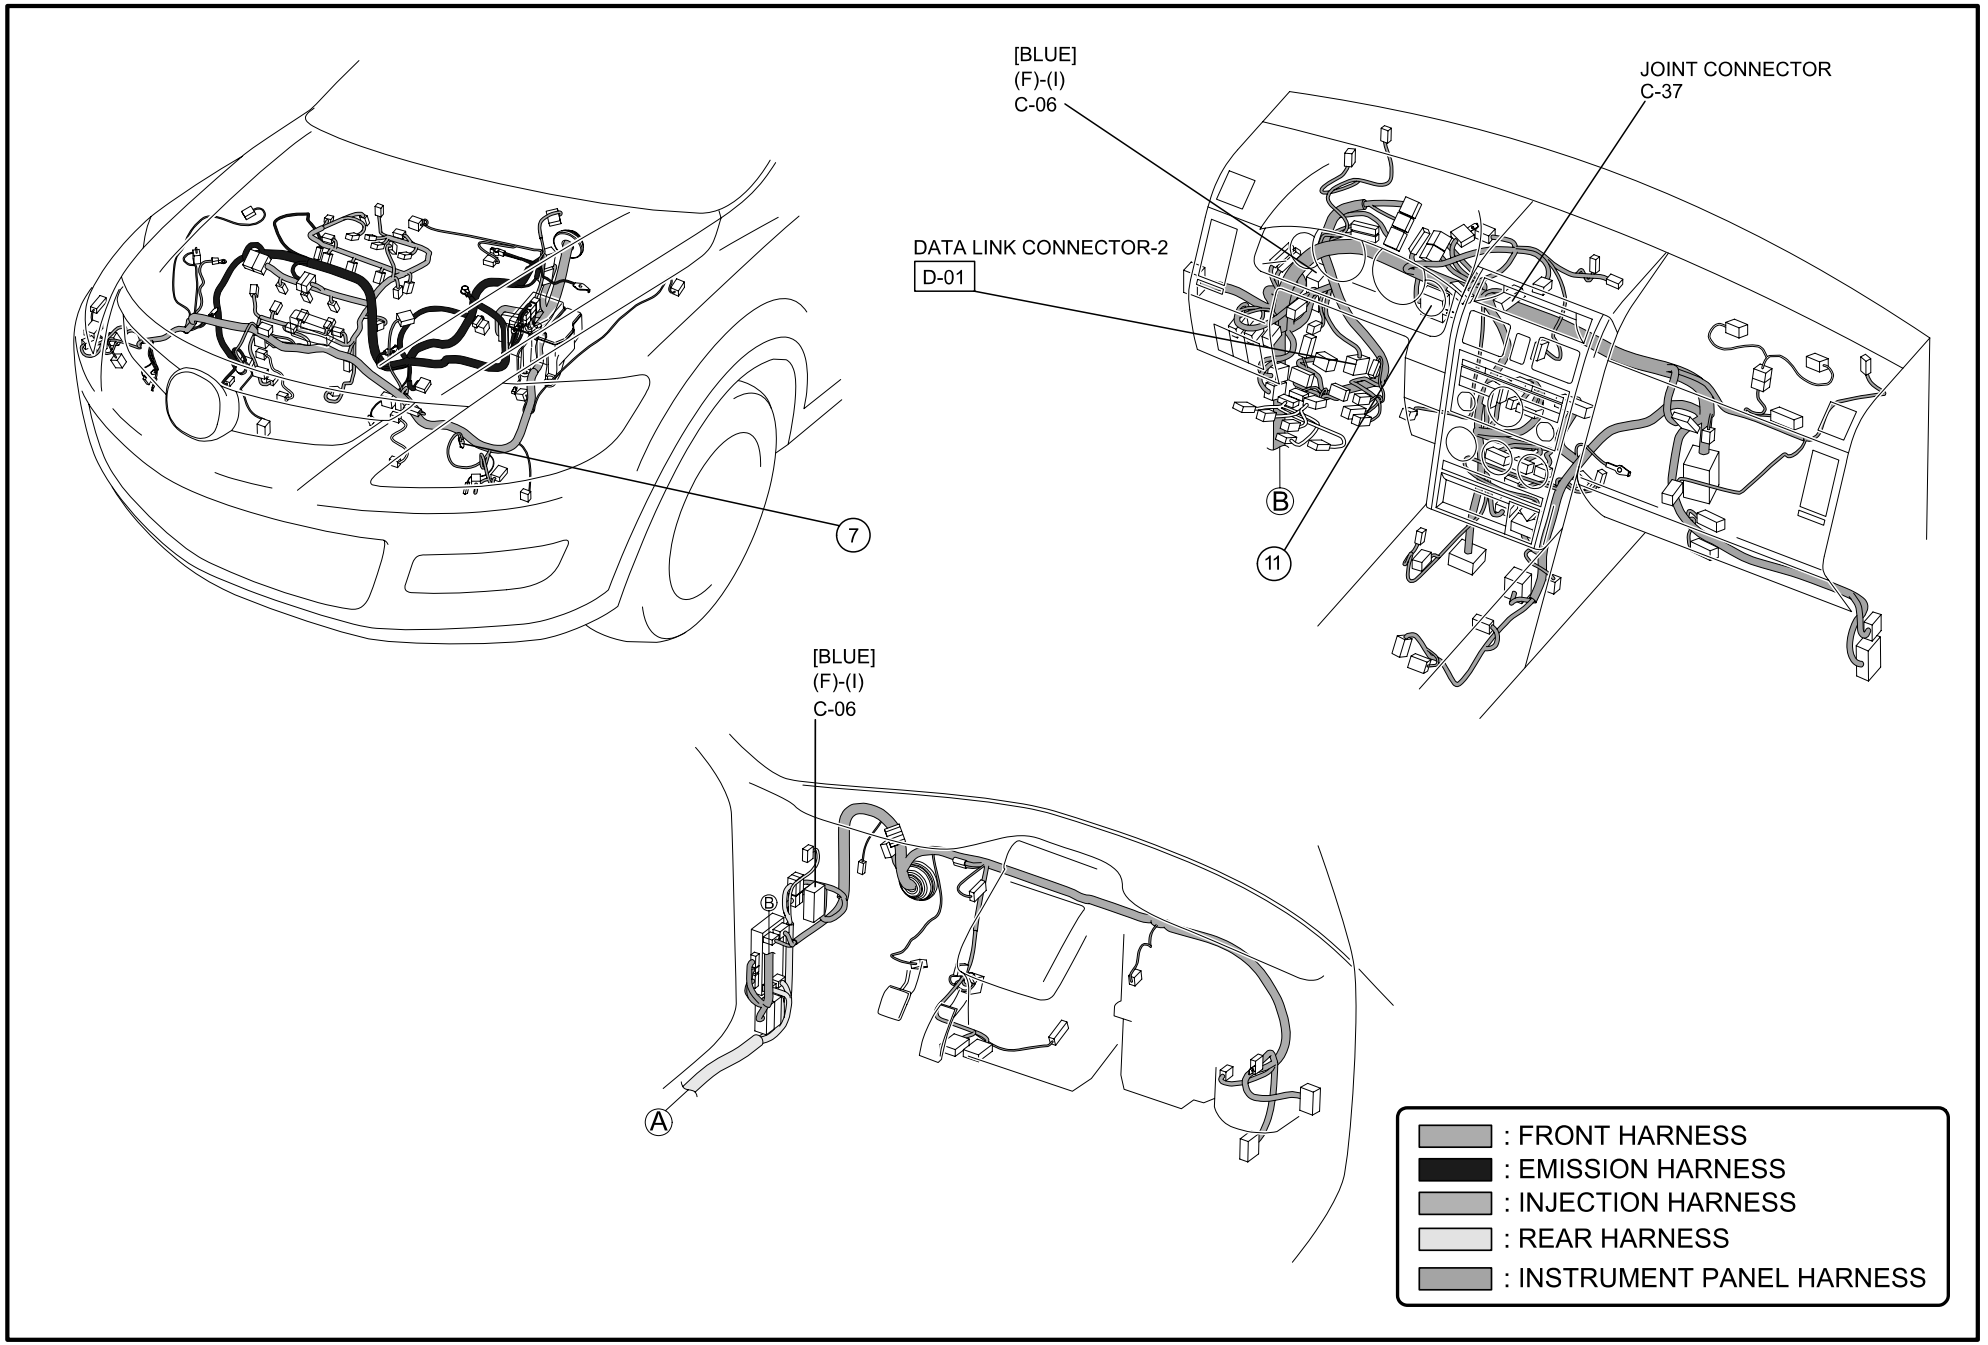
[BLUE]
(F)-(I)
C-06
JOINT CONNECTOR
C-37
DATA LINK CONNECTOR-2
D-01
7
B
11
[BLUE]
(F)-(I)
C-06
B
A
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

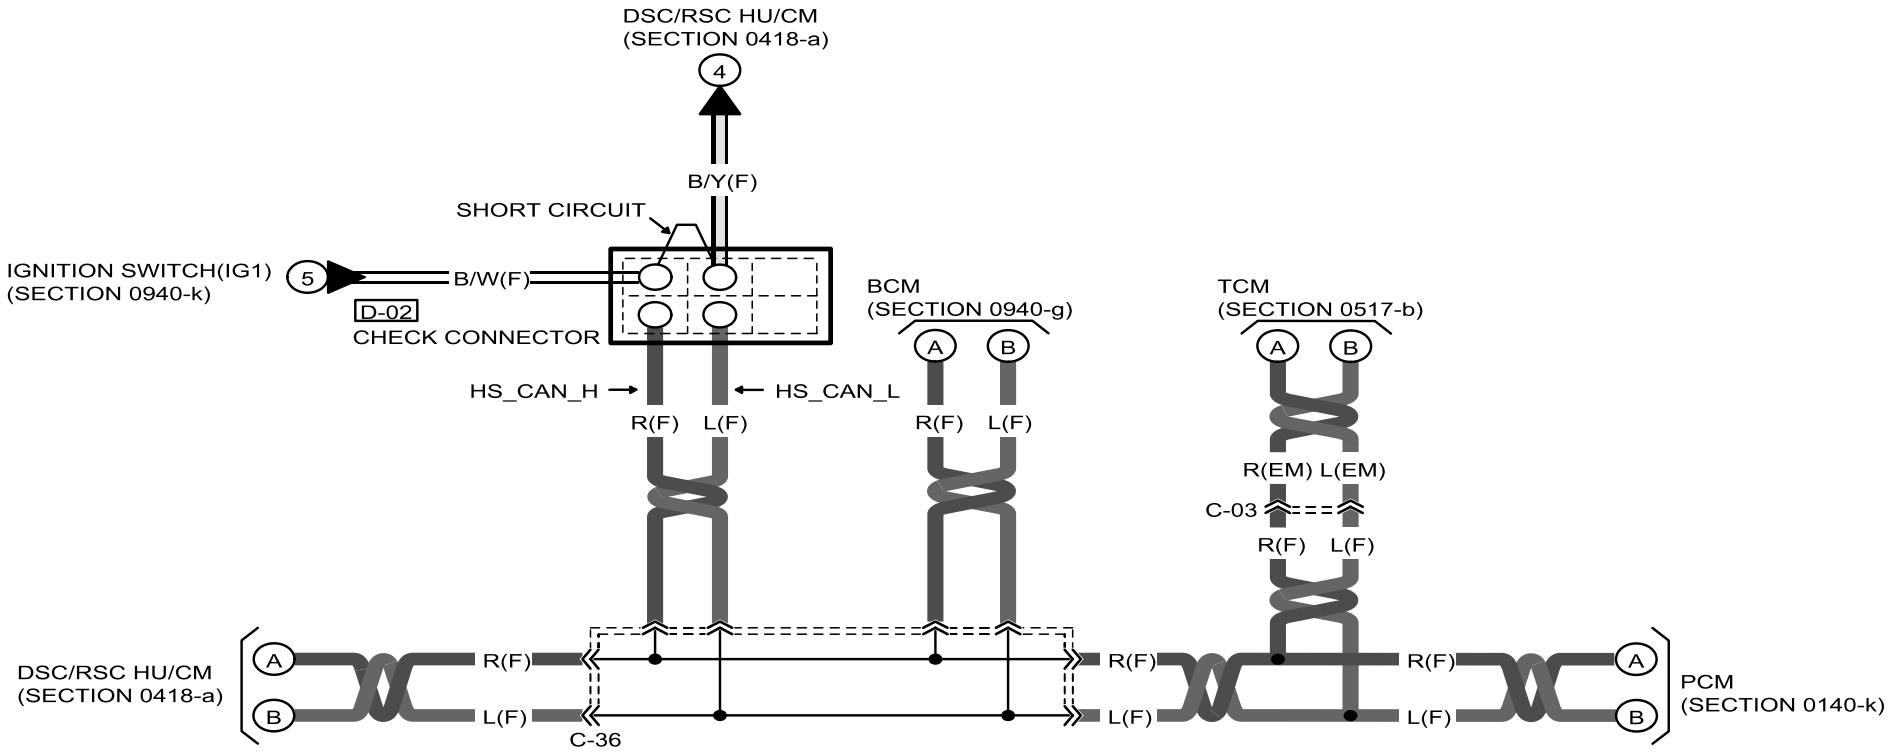



D-02
CHECK CONNECTOR




NOTE:SEEN FROM TERMINAL SIDE

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

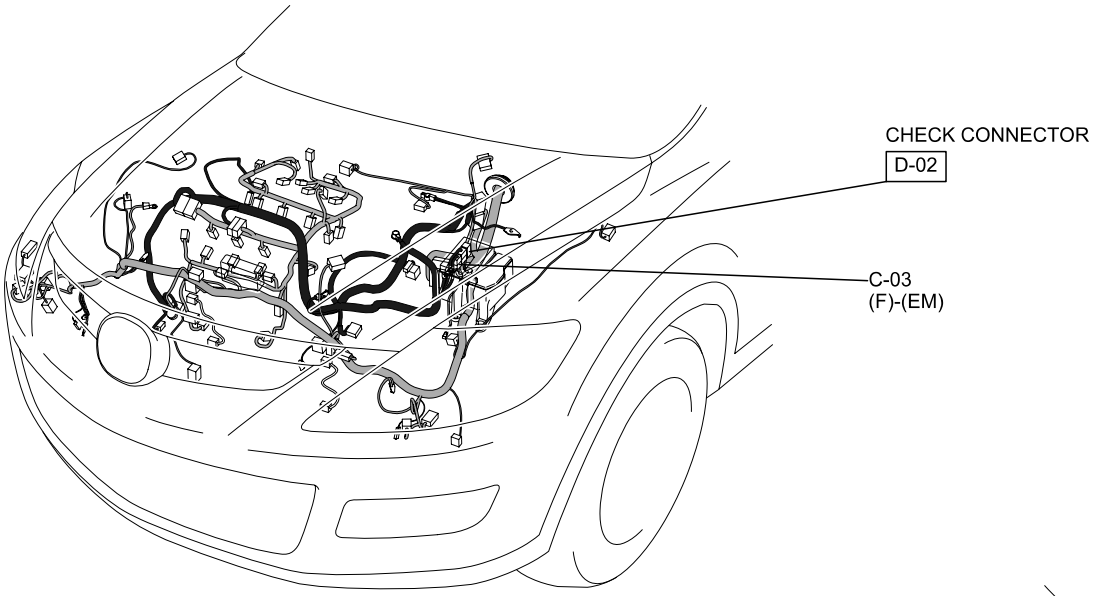

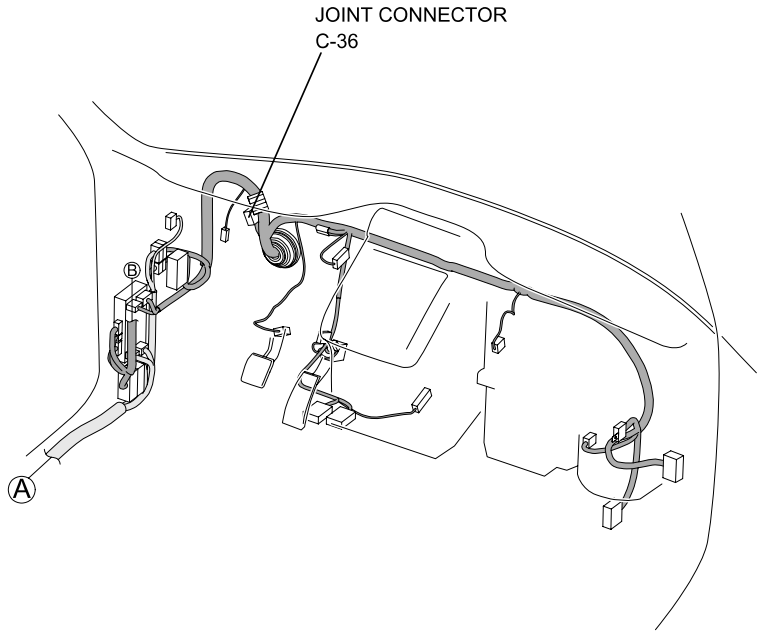


: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

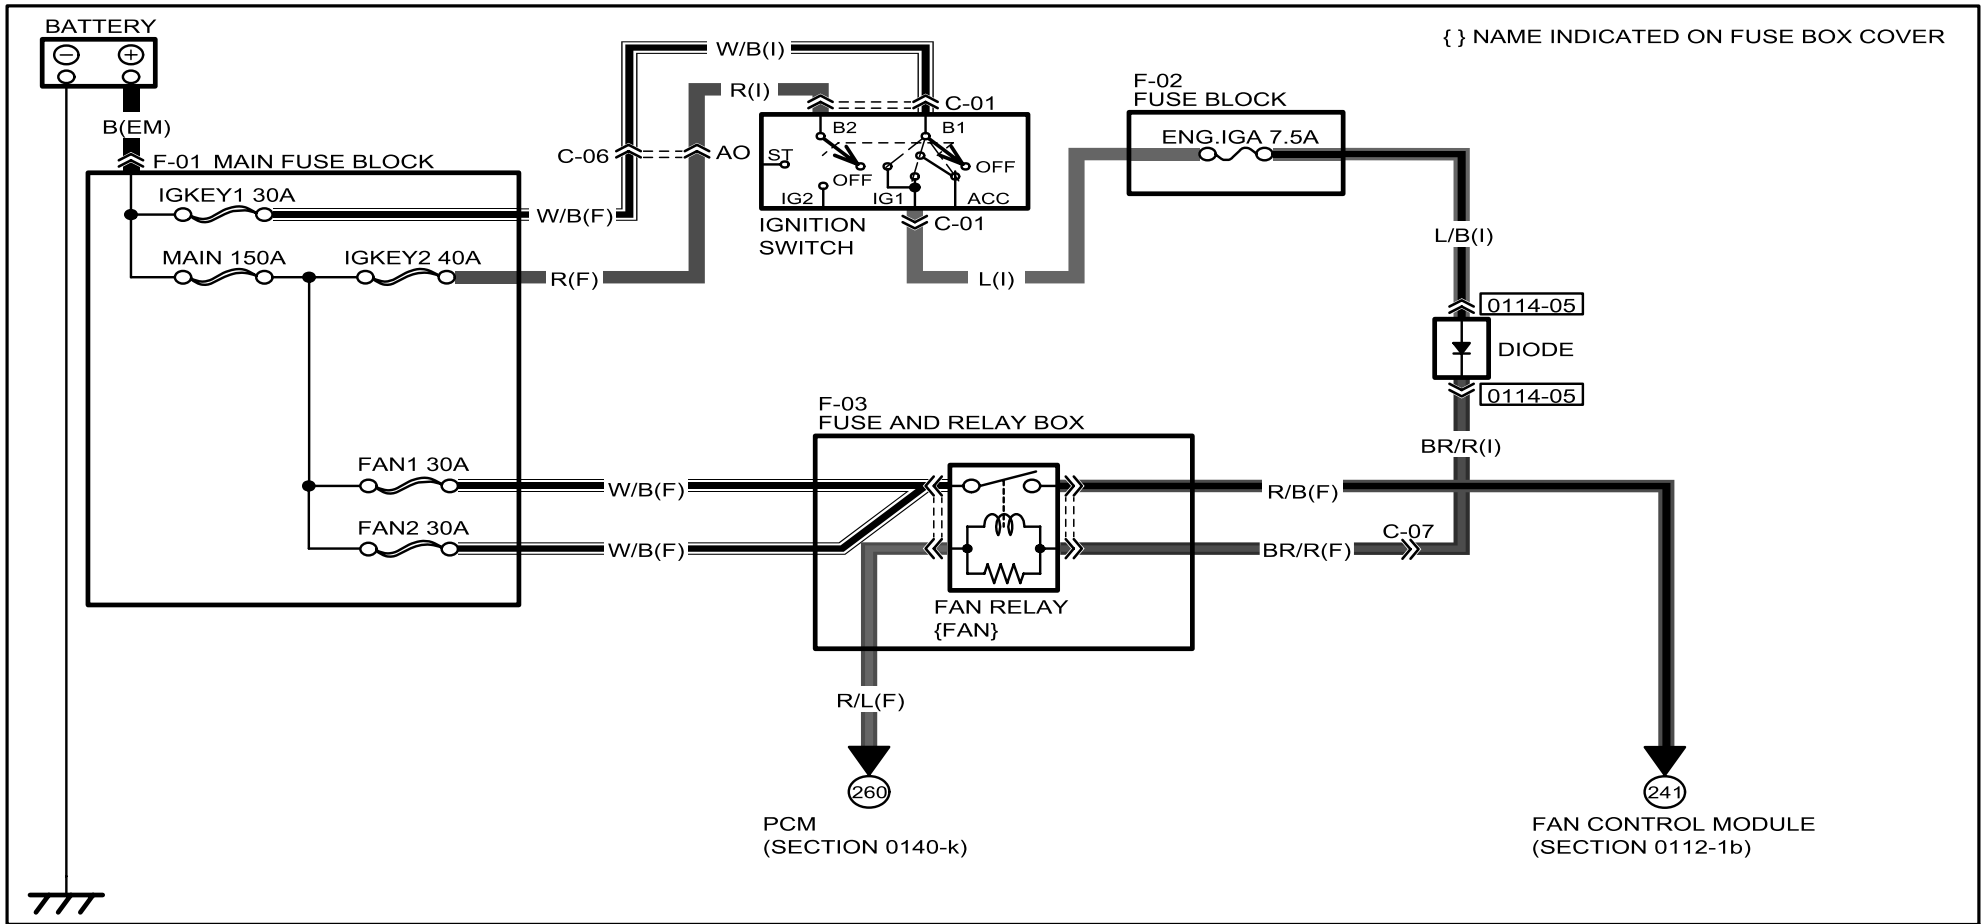


0114-05
DIODE




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

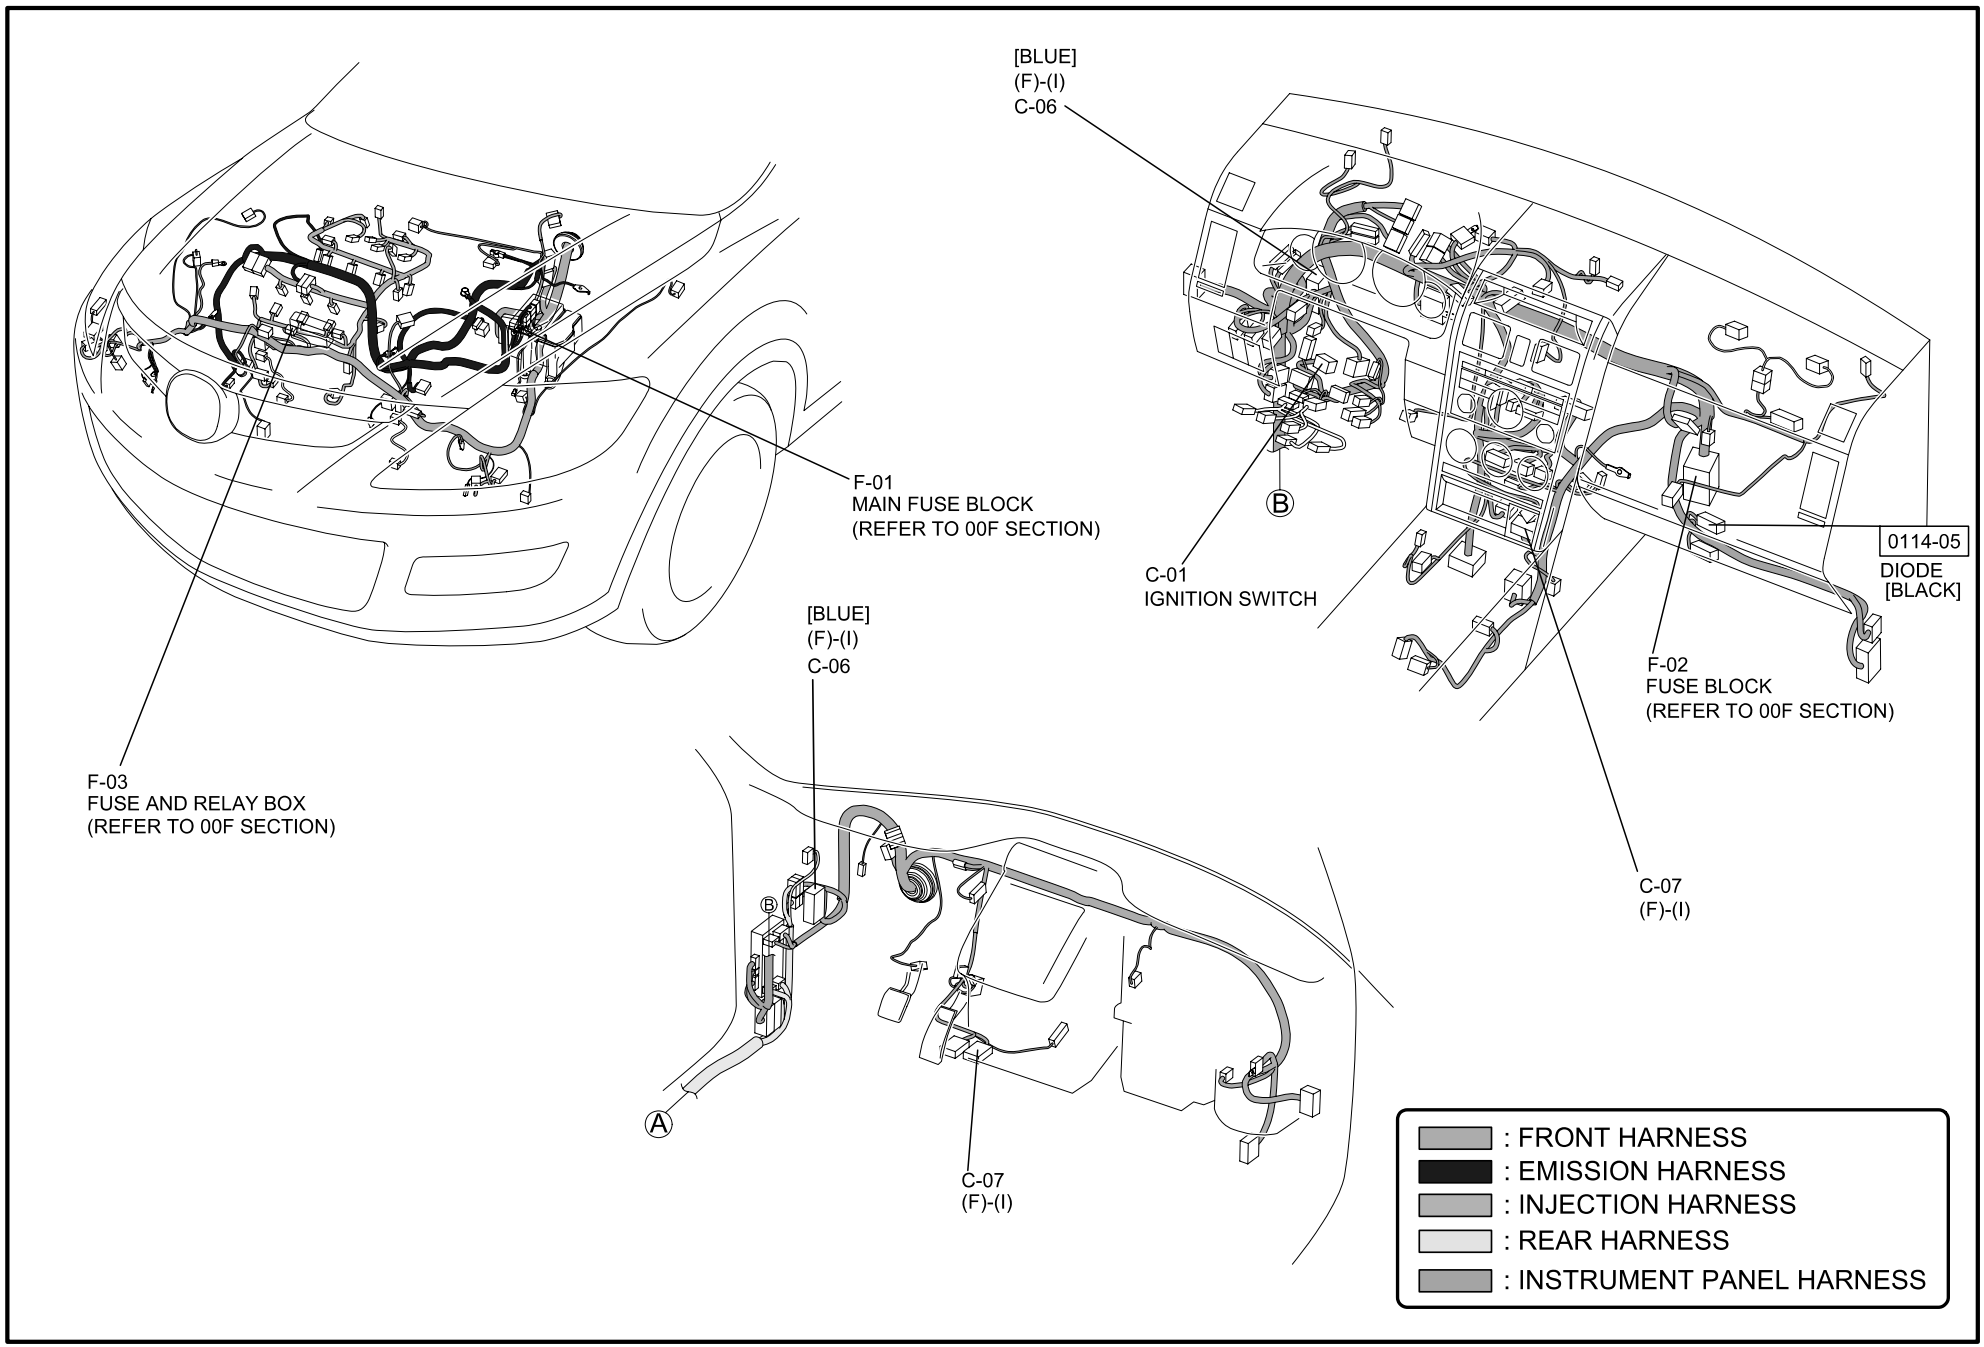

[BLUE]
(F)-(I)
C-06
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
F-03
FUSE AND RELAY BOX
(REFER TO 00F SECTION)
B
C-01
IGNITION SWITCH
0114-05
DIODE
[BLACK]
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
[BLUE]
(F)-(I)
C-06
C-07
(F)-(I)
B
A
C-07
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

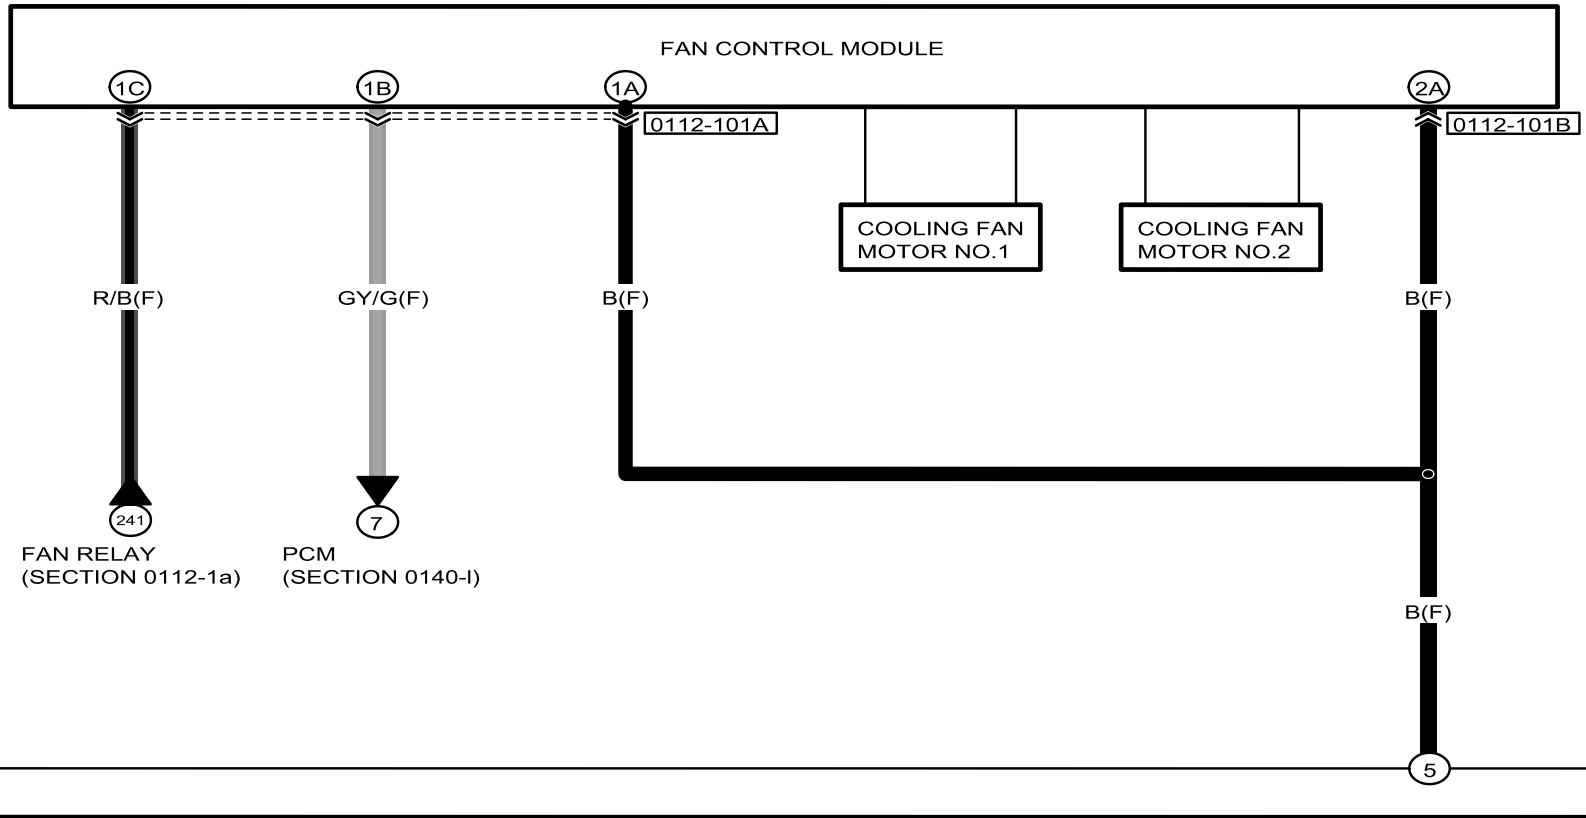


0112-101A
FAN CONTROL MODULE

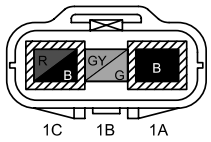

0112-101B
FAN CONTROL MODULE




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

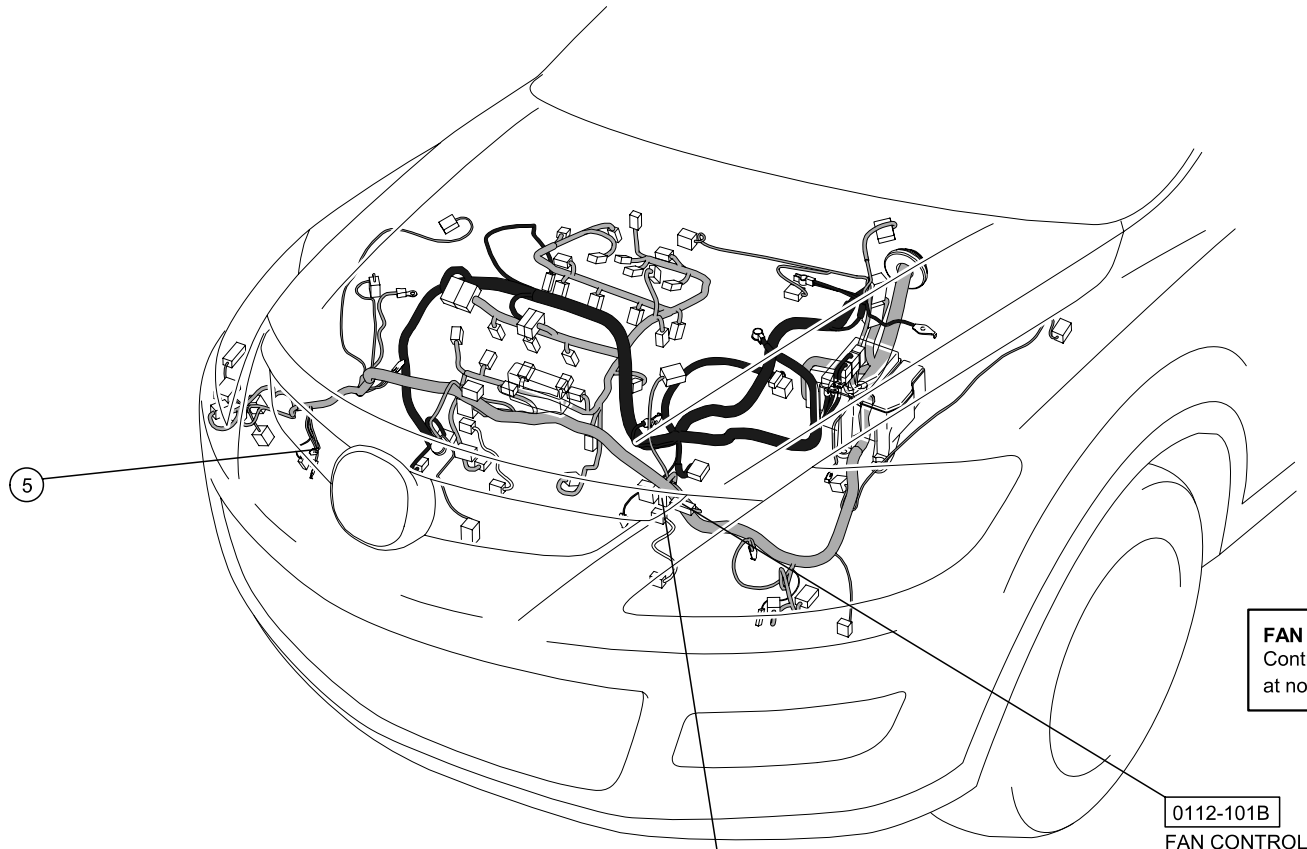

FAN CONTROL MODULE
Controls the number of cooling fan rotations at non-stage according to the PCM.


: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

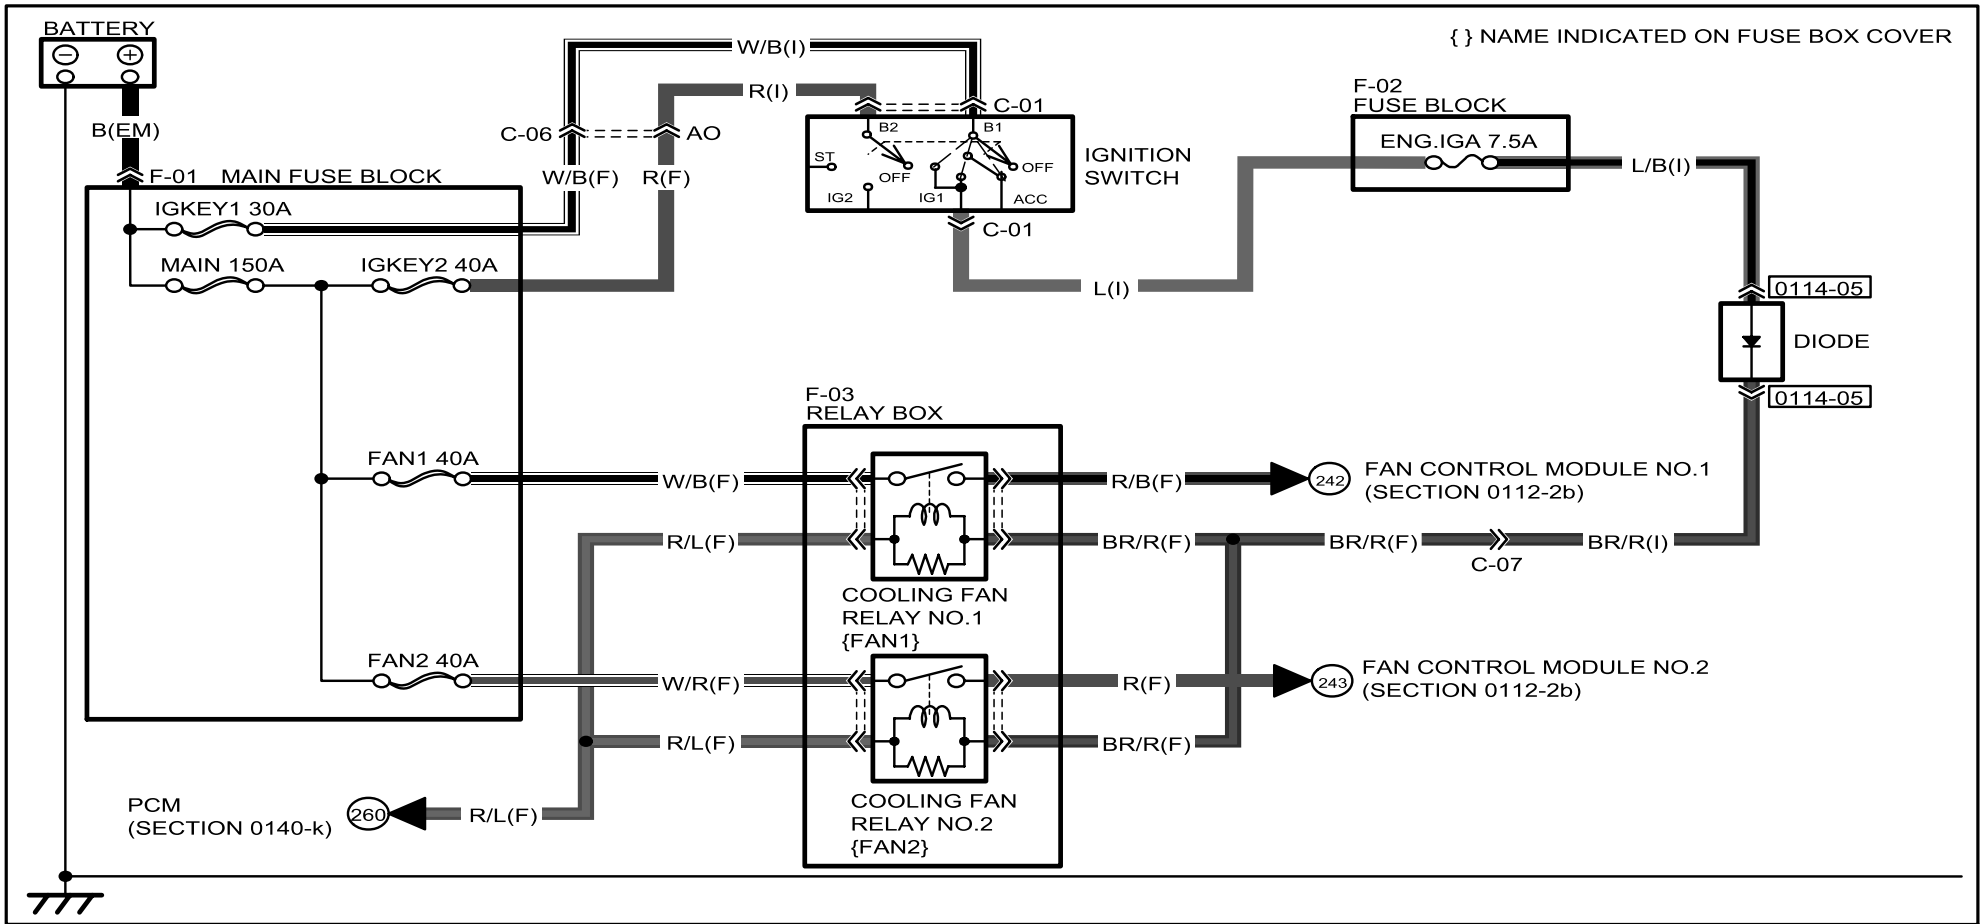


0114-05
DIODE







Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

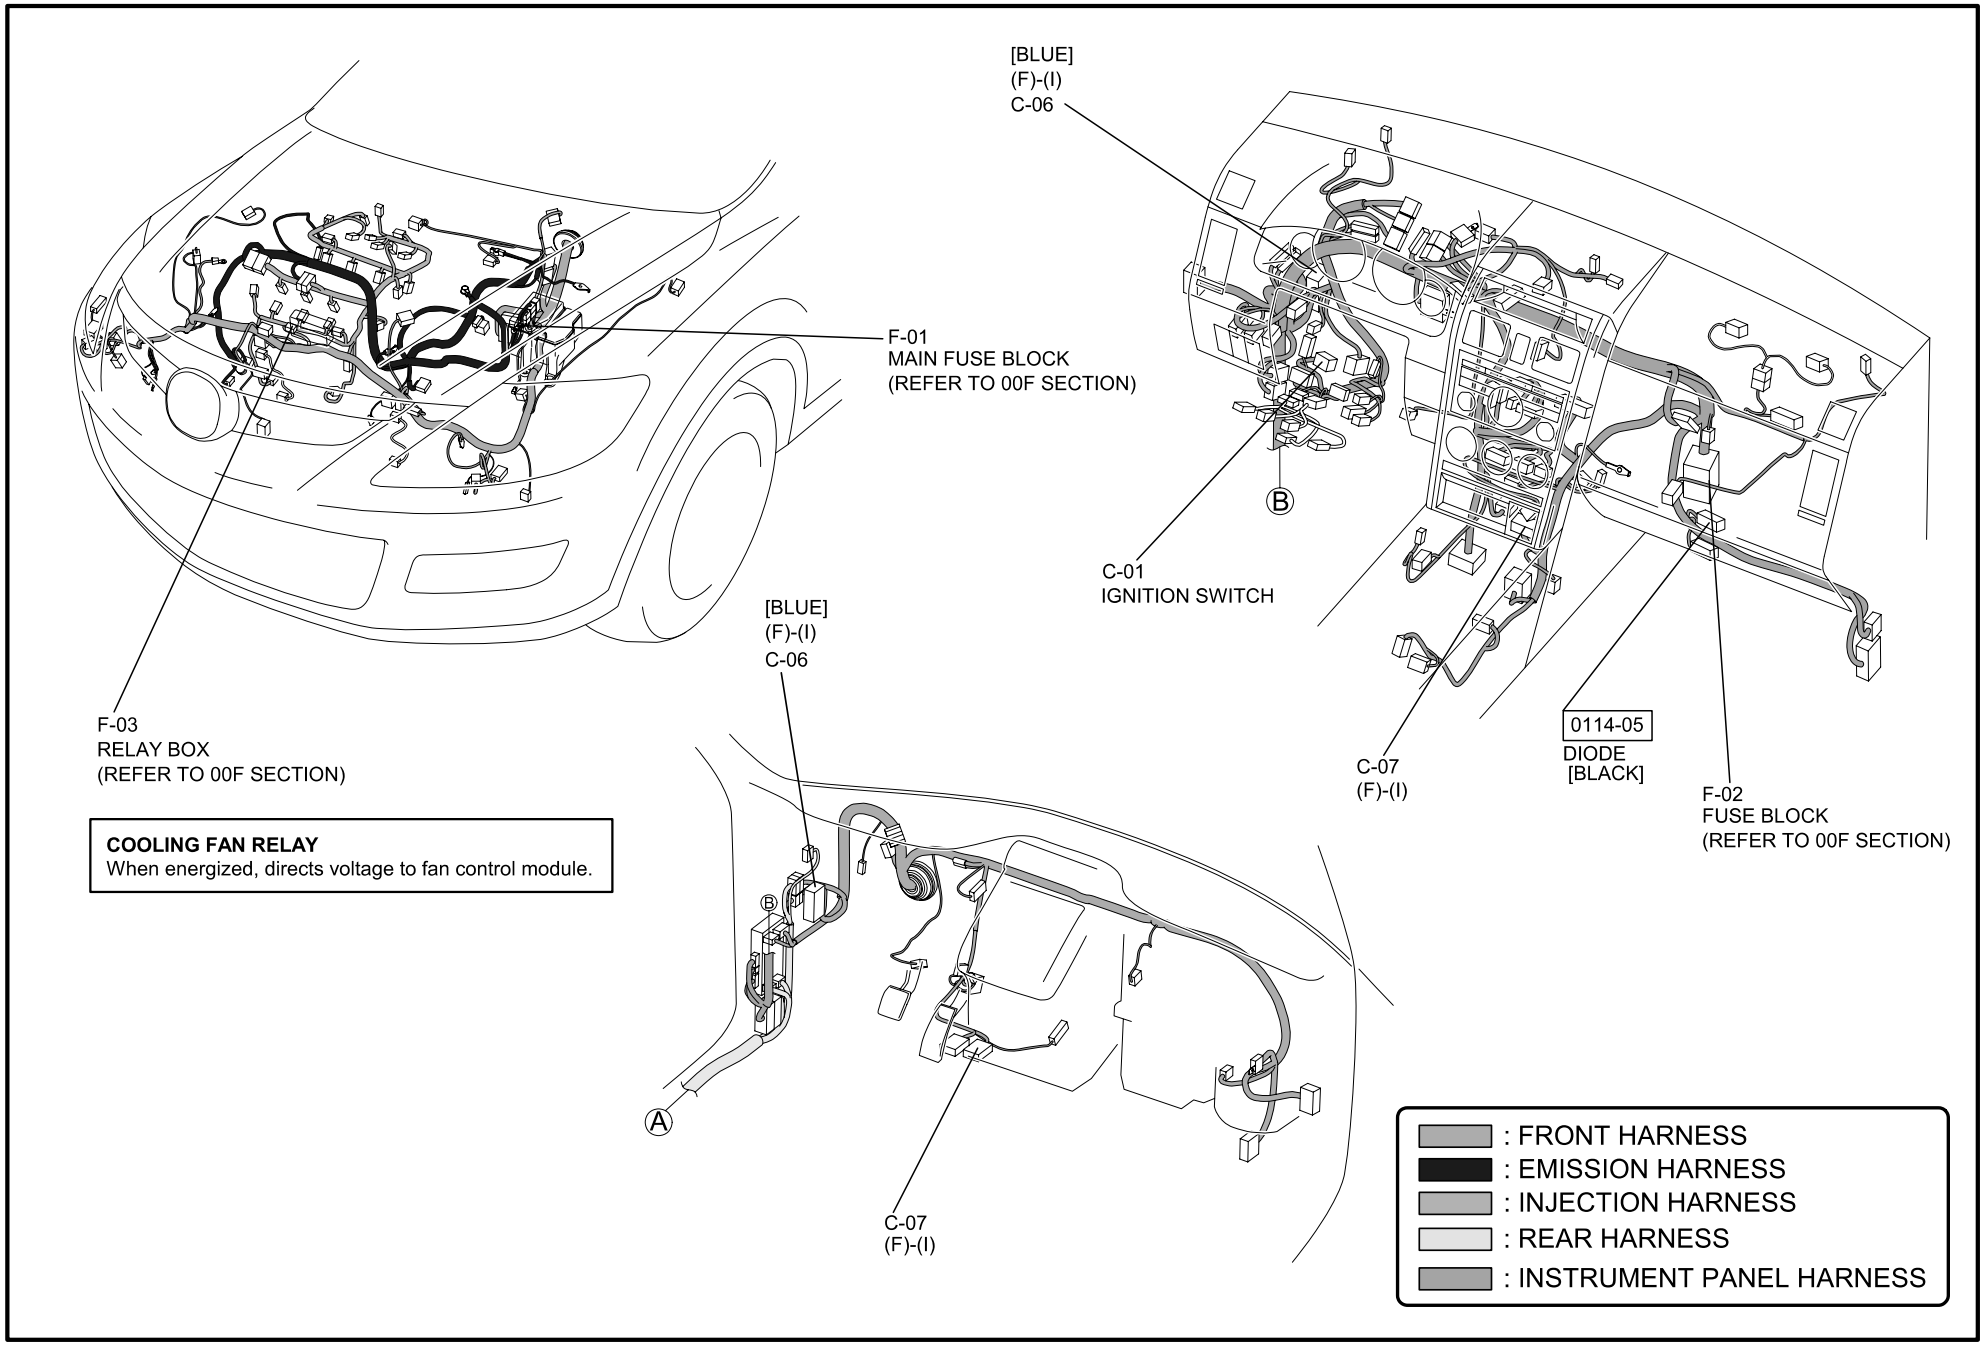


COOLING FAN RELAY
When energized, directs voltage to fan control module.

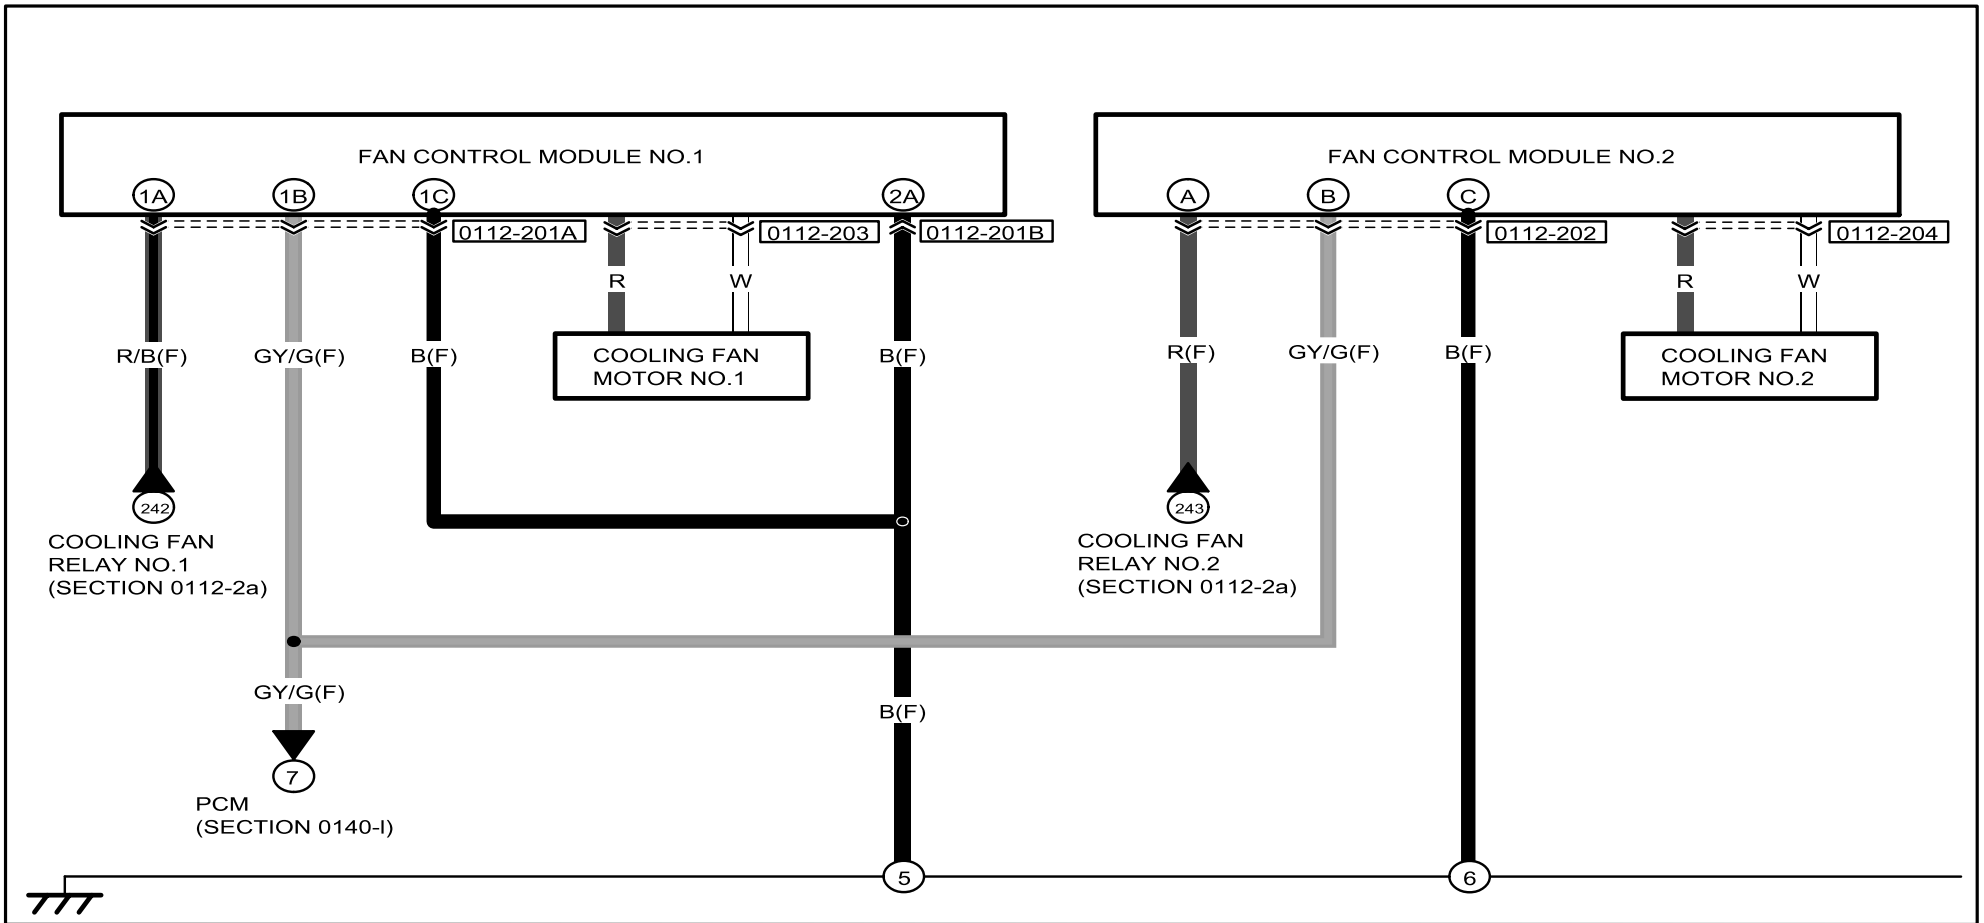

0112-201A FAN CONTROL MODULE NO.1  	0112-201B FAN CONTROL MODULE NO.1  	0112-202 FAN CONTROL MODULE NO.2  	
0112-203 COOLING FAN MOTOR NO.1  	0112-204 COOLING FAN MOTOR NO.2  		

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

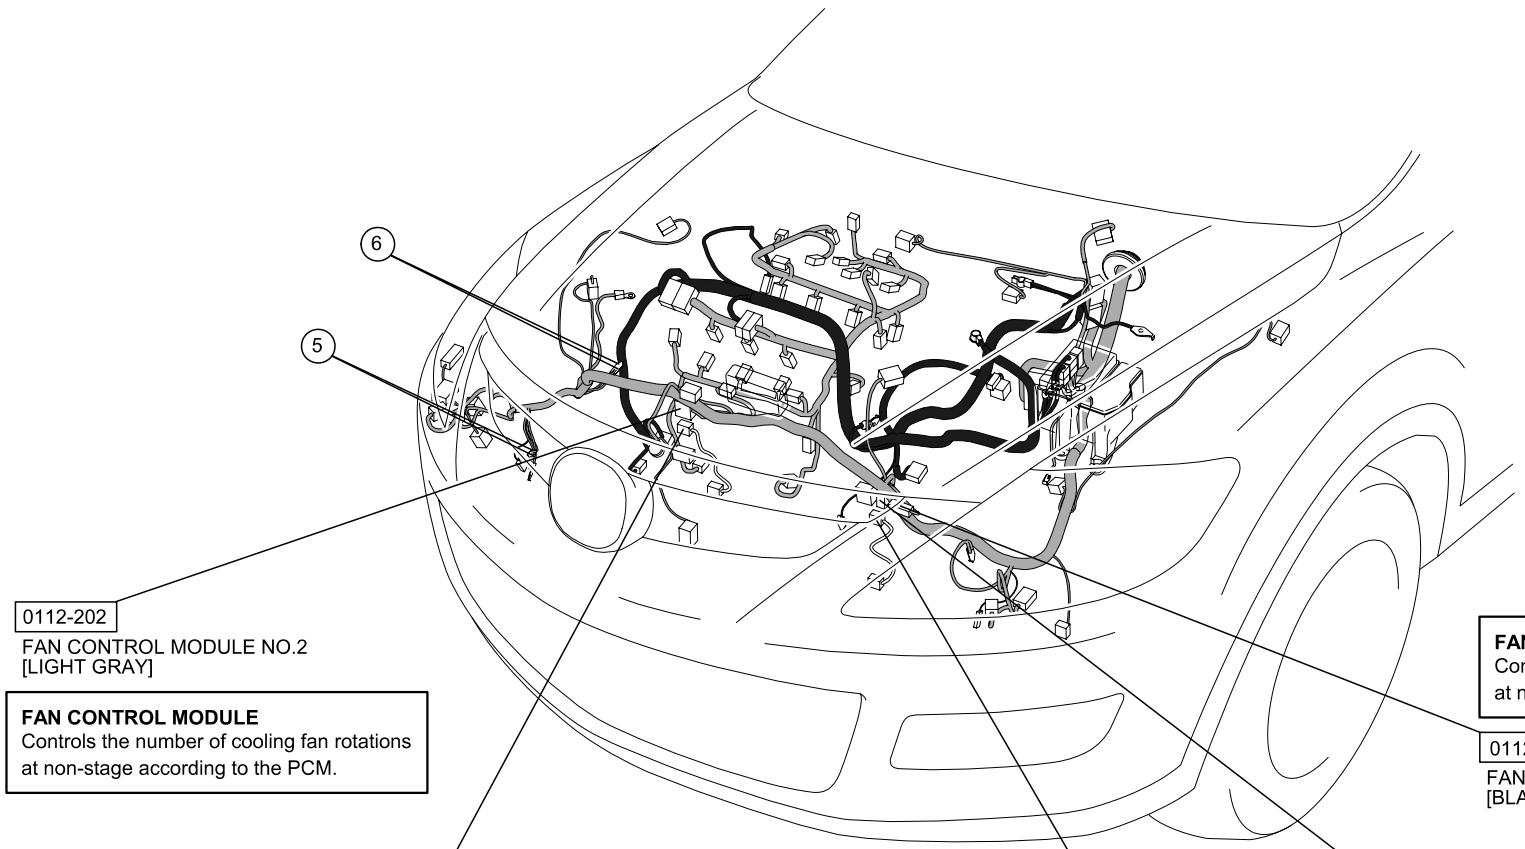

0112-202
FAN CONTROL MODULE NO.2
[LIGHT GRAY]

FAN CONTROL MODULE
Controls the number of cooling fan rotations at non-stage according to the PCM.

0112-204
COOLING FAN MOTOR NO.2

COOLING FAN MOTOR
Operates when PCM determines fan operation depending on Crankshaft Position, Engine Coolant Temperature, Vehicle Speed, Intake Air Temperature sensors and A/C switch, Refrigerant pressure switch inputs.


0112-203
COOLING FAN MOTOR NO.1

FAN CONTROL MODULE
Controls the number of cooling fan rotations at non-stage according to the PCM.

0112-201B
FAN CONTROL MODULE NO.1
[BLACK]

0112-201A
FAN CONTROL MODULE NO.1
[LIGHT GRAY]


: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

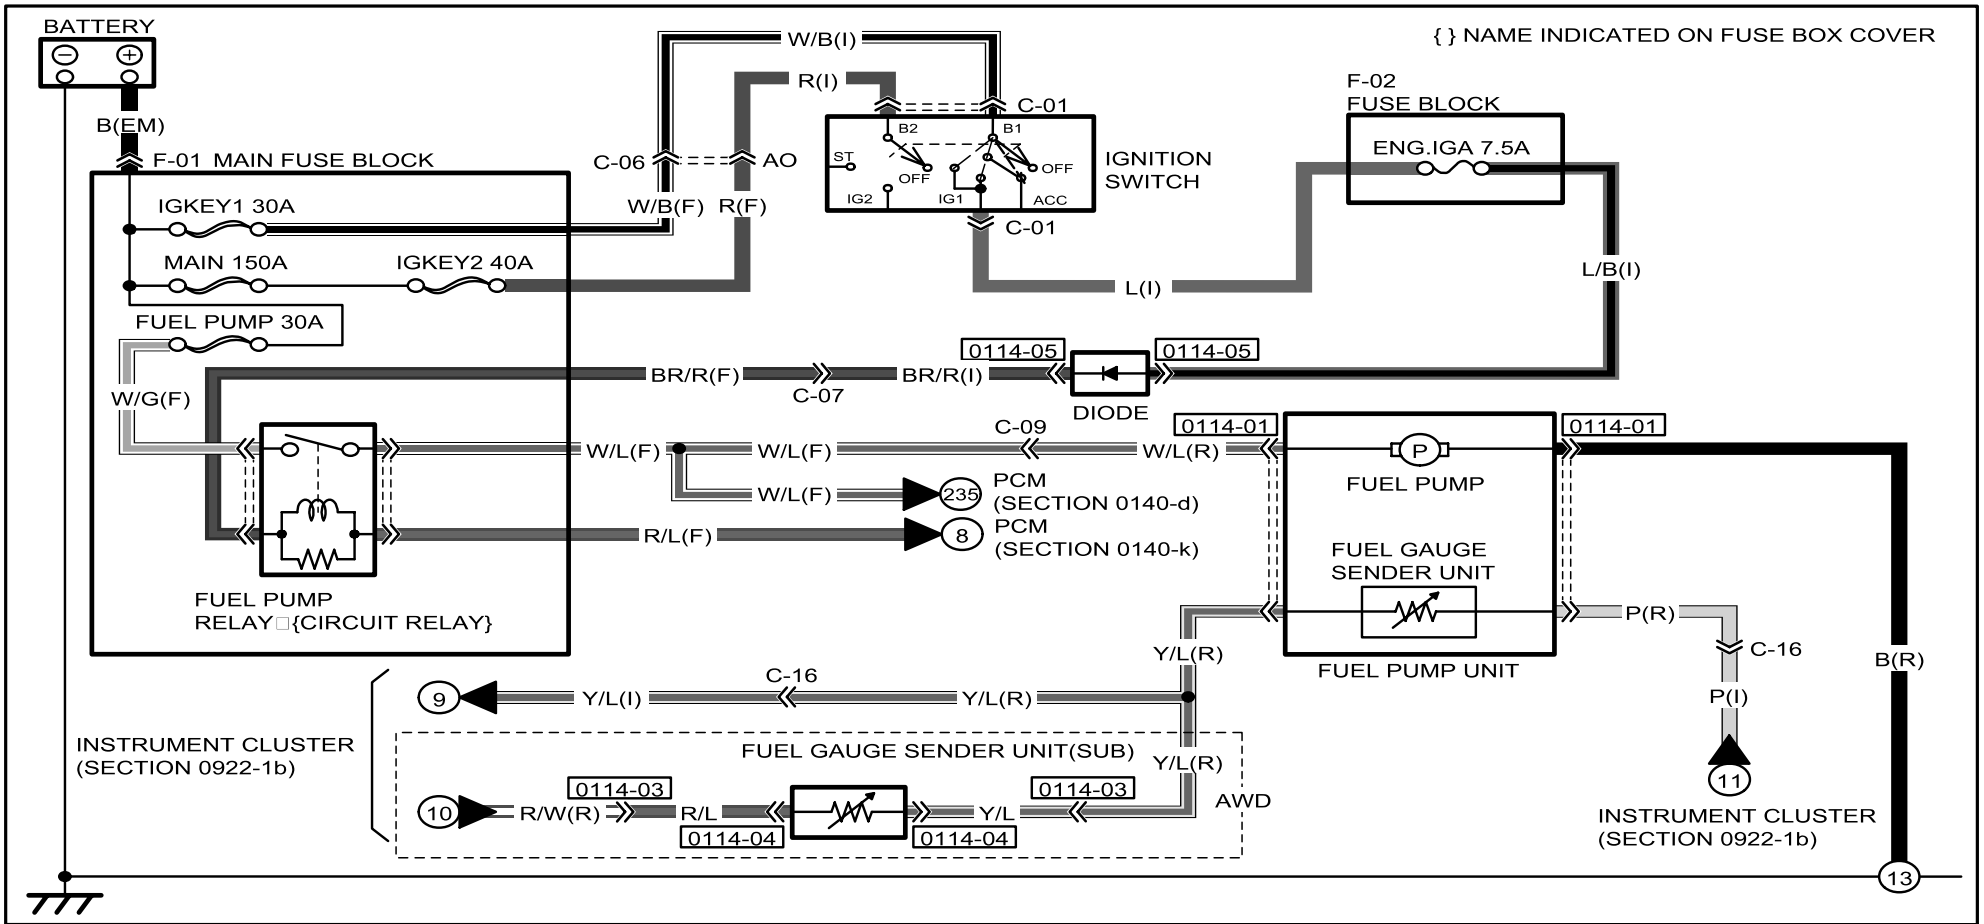


{ } NAME INDICATED ON FUSE BOX COVER


0114-01 FUEL PUMP UNIT	0114-03 REAR HARNESS-SHORT CORD REAR HARNESS SHORT CORD		0114-04 FUEL GAUGE SENDER UNIT(SUB)	
0114-05 DIODE				

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

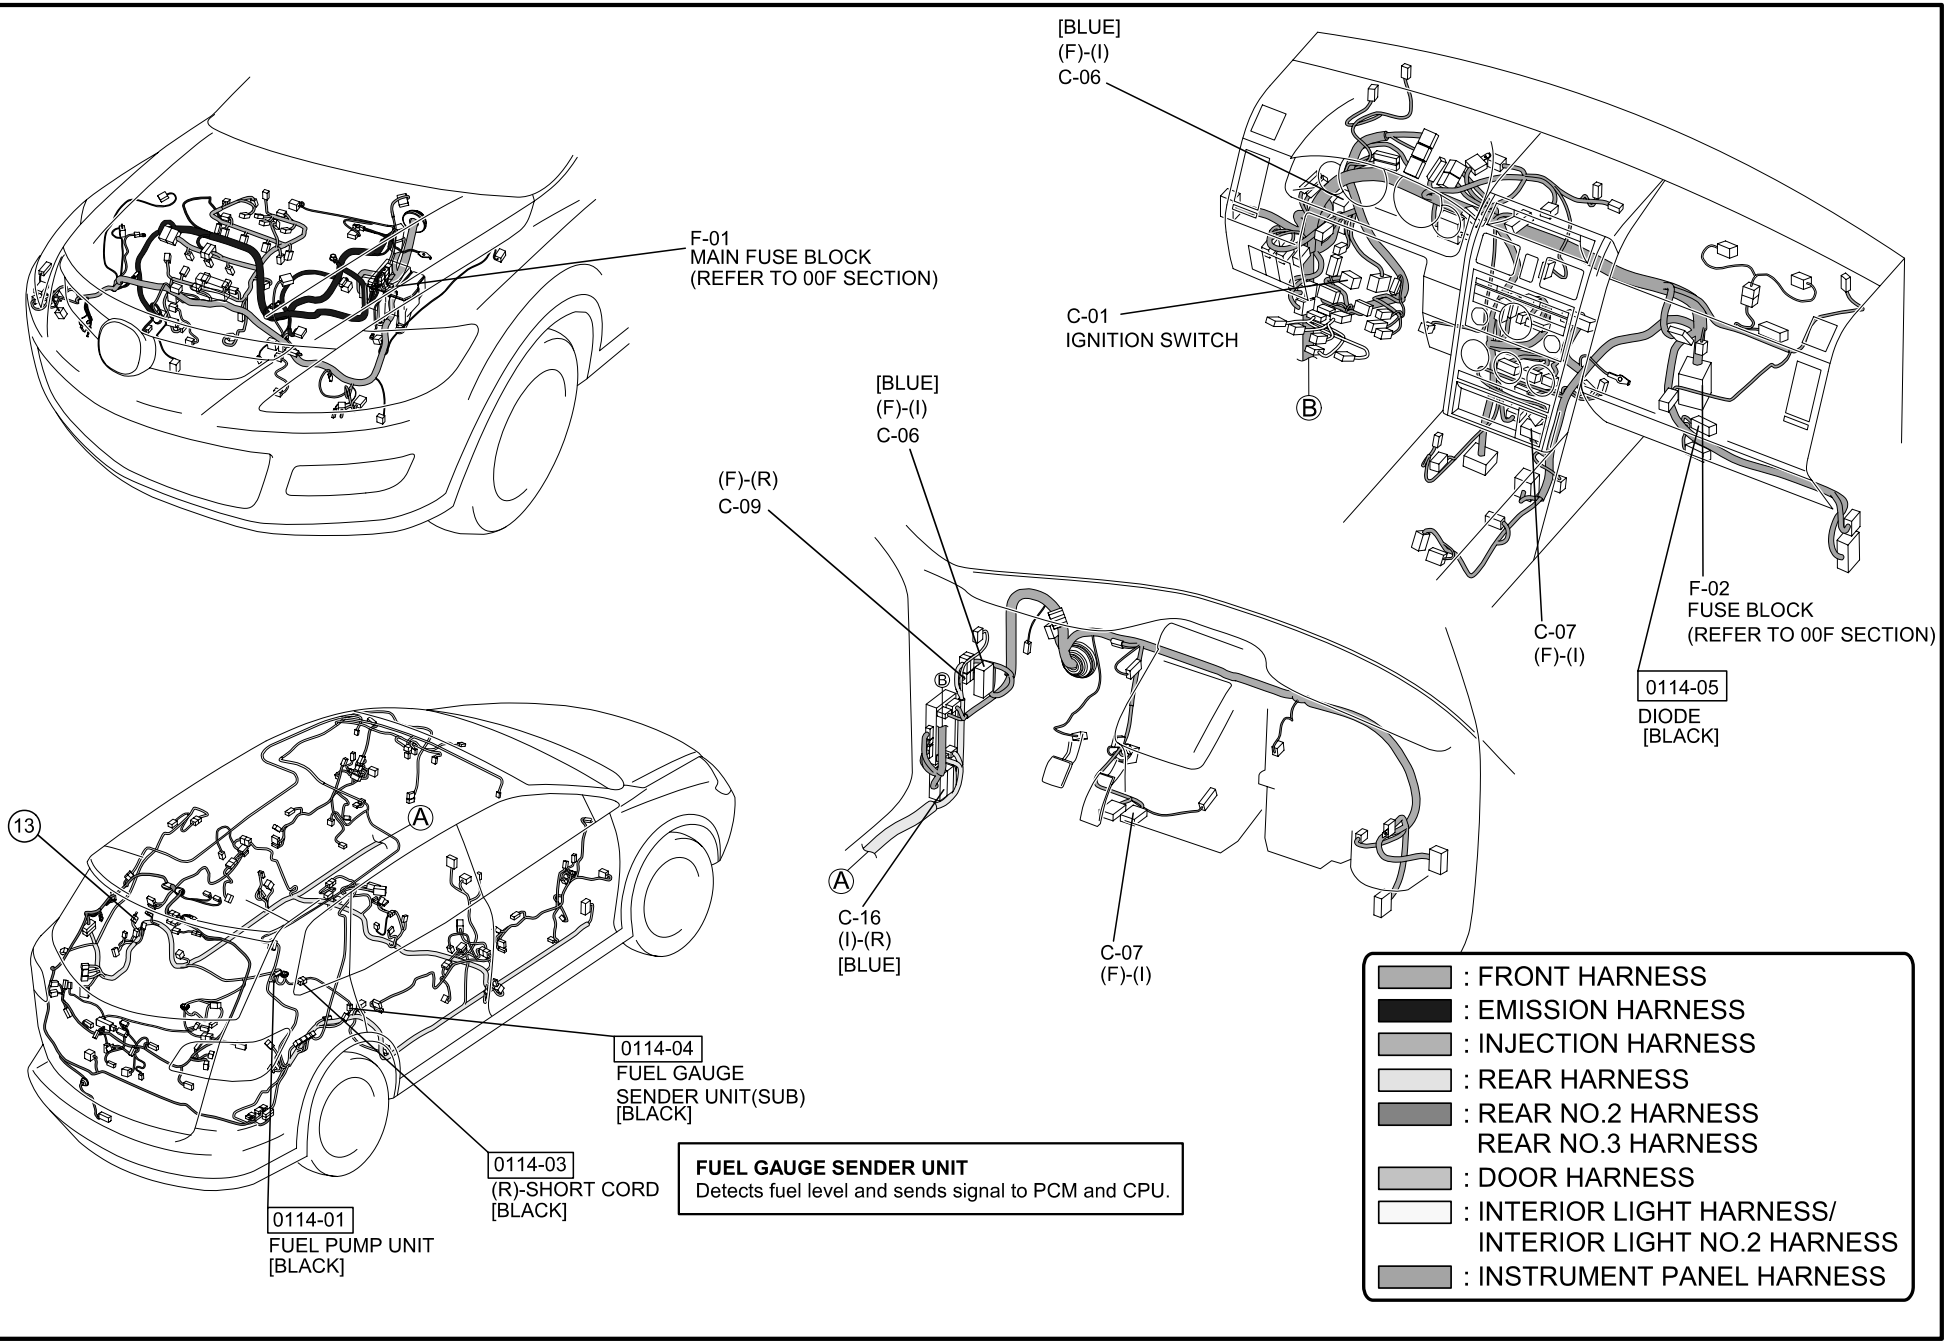

[BLUE]
(F)-(I)
C-06
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-01
IGNITION SWITCH
B
[BLUE]
(F)-(I)
C-06
(F)-(R)
C-09
C-07
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
0114-05
DIODE
[BLACK]
13
A
A
C-16
(I)-(R)
[BLUE]
C-07
(F)-(I)
0114-04
FUEL GAUGE
SENDER UNIT(SUB)
[BLACK]
0114-03
(R)-SHORT CORD
[BLACK]
0114-01
FUEL PUMP UNIT
[BLACK]
FUEL GAUGE SENDER UNIT
Detects fuel level and sends signal to PCM and CPU.
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

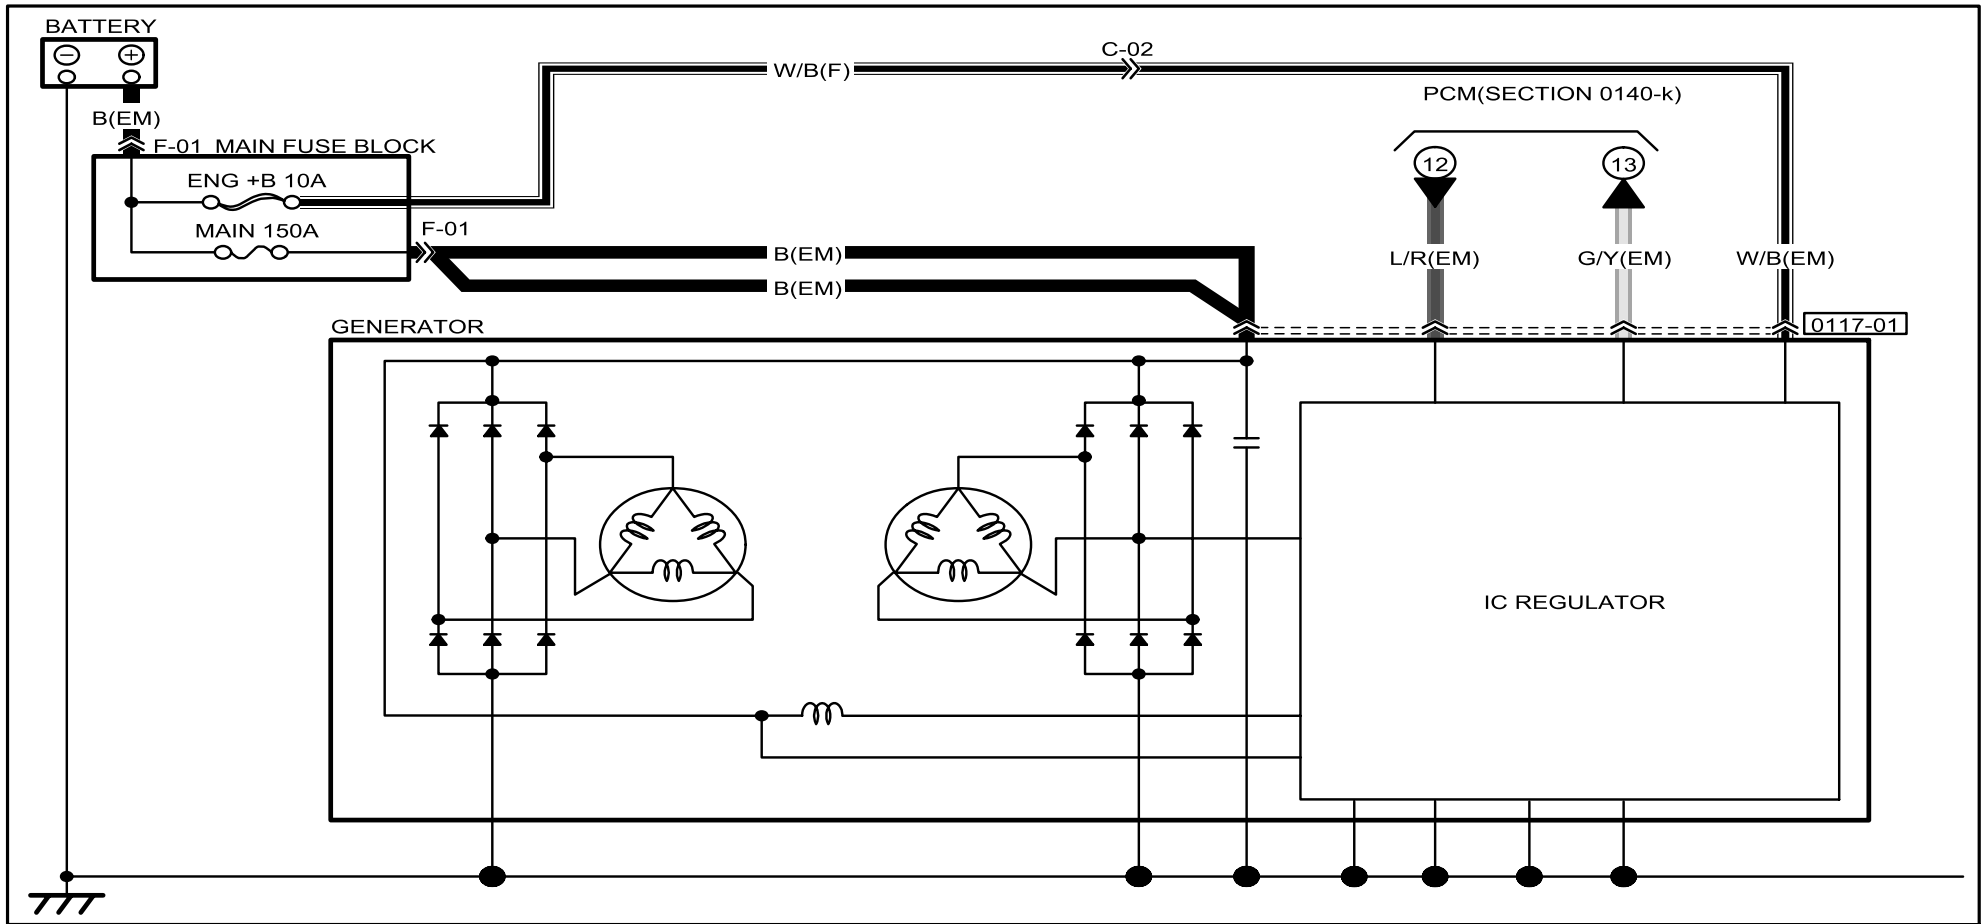

0117-01
GENERATOR

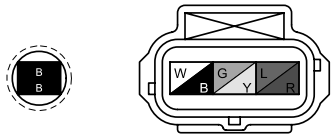


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

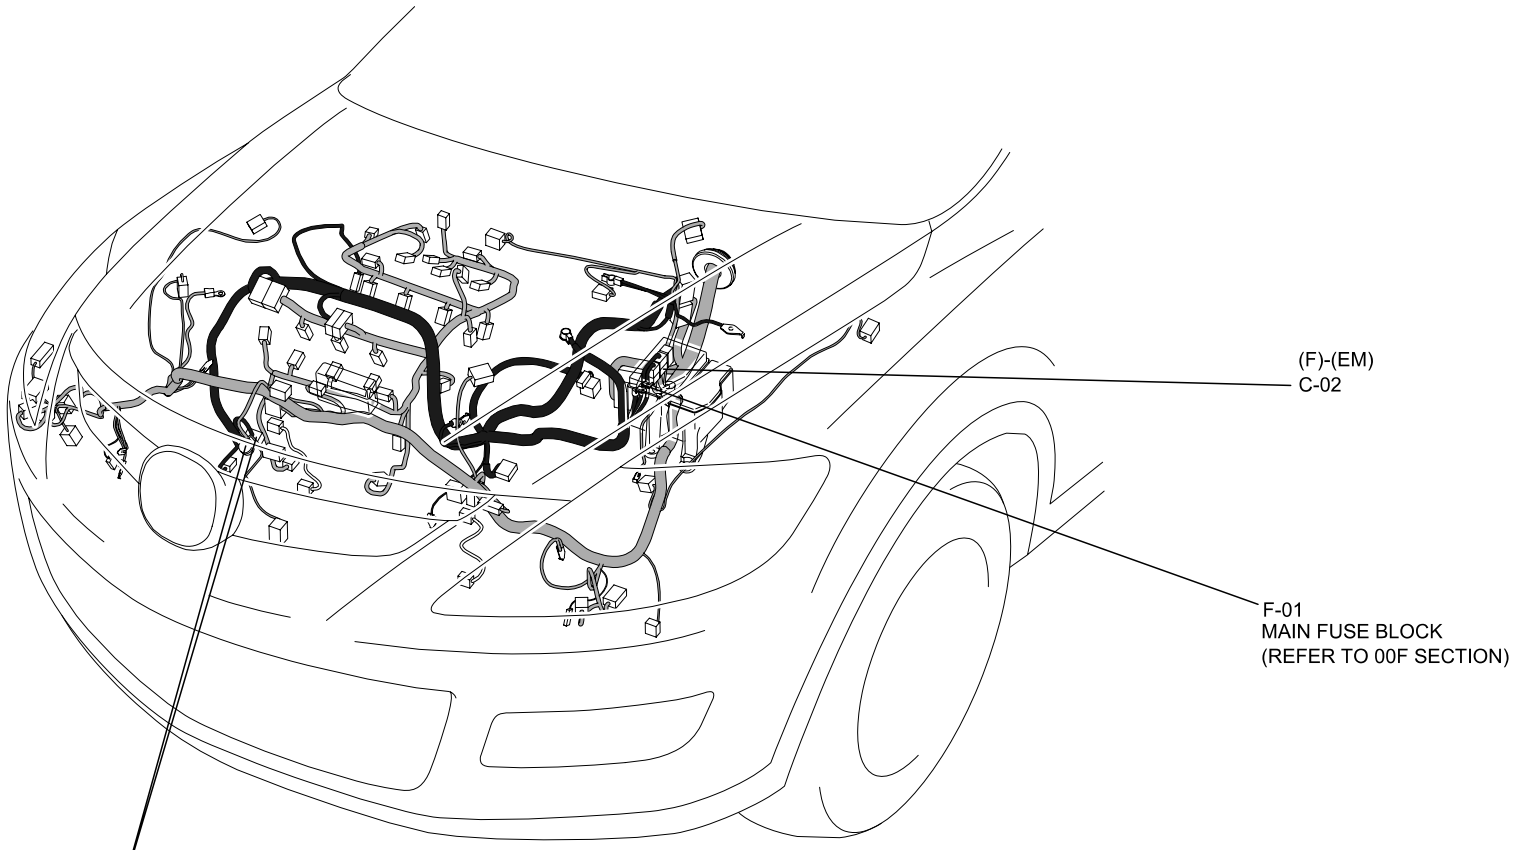


GENERATOR
Generates power to keep battery fully charged and to operate vehicle's electrical system. Output is variable and depends on speed at which generator rotor spins, as well as amount of current passing through rotor winding.


: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

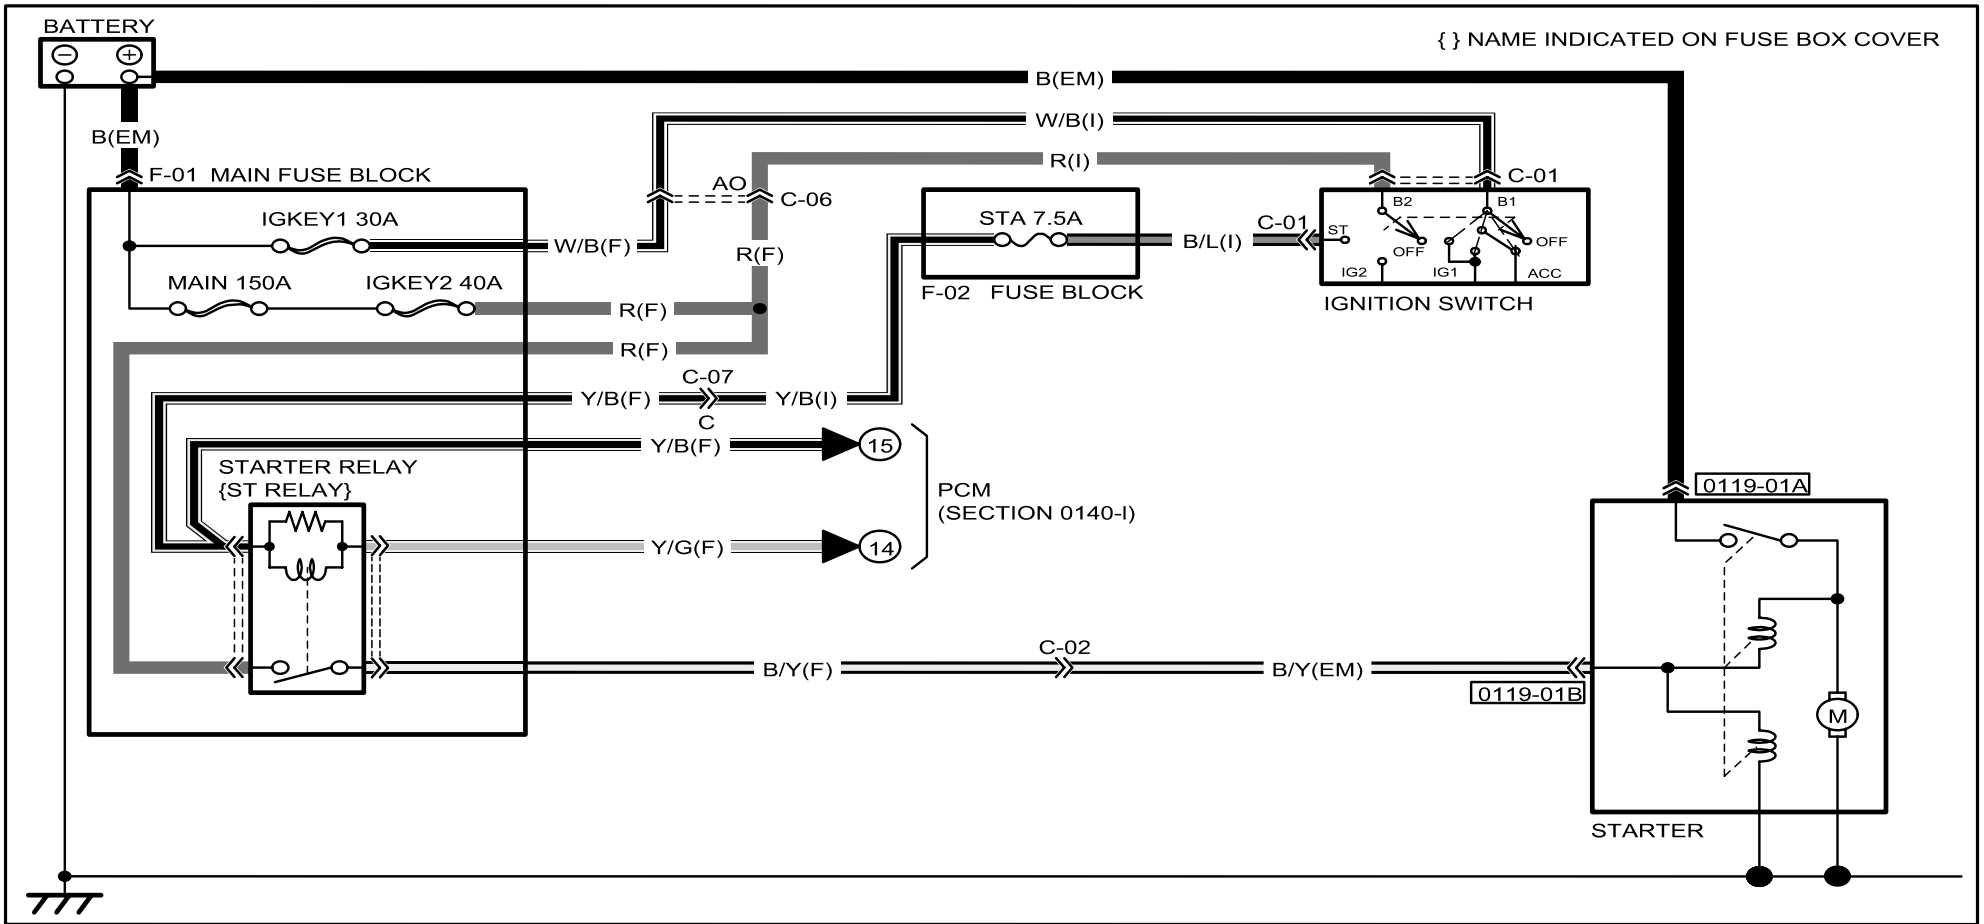


0119-01A STARTER	0119-01B STARTER					


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

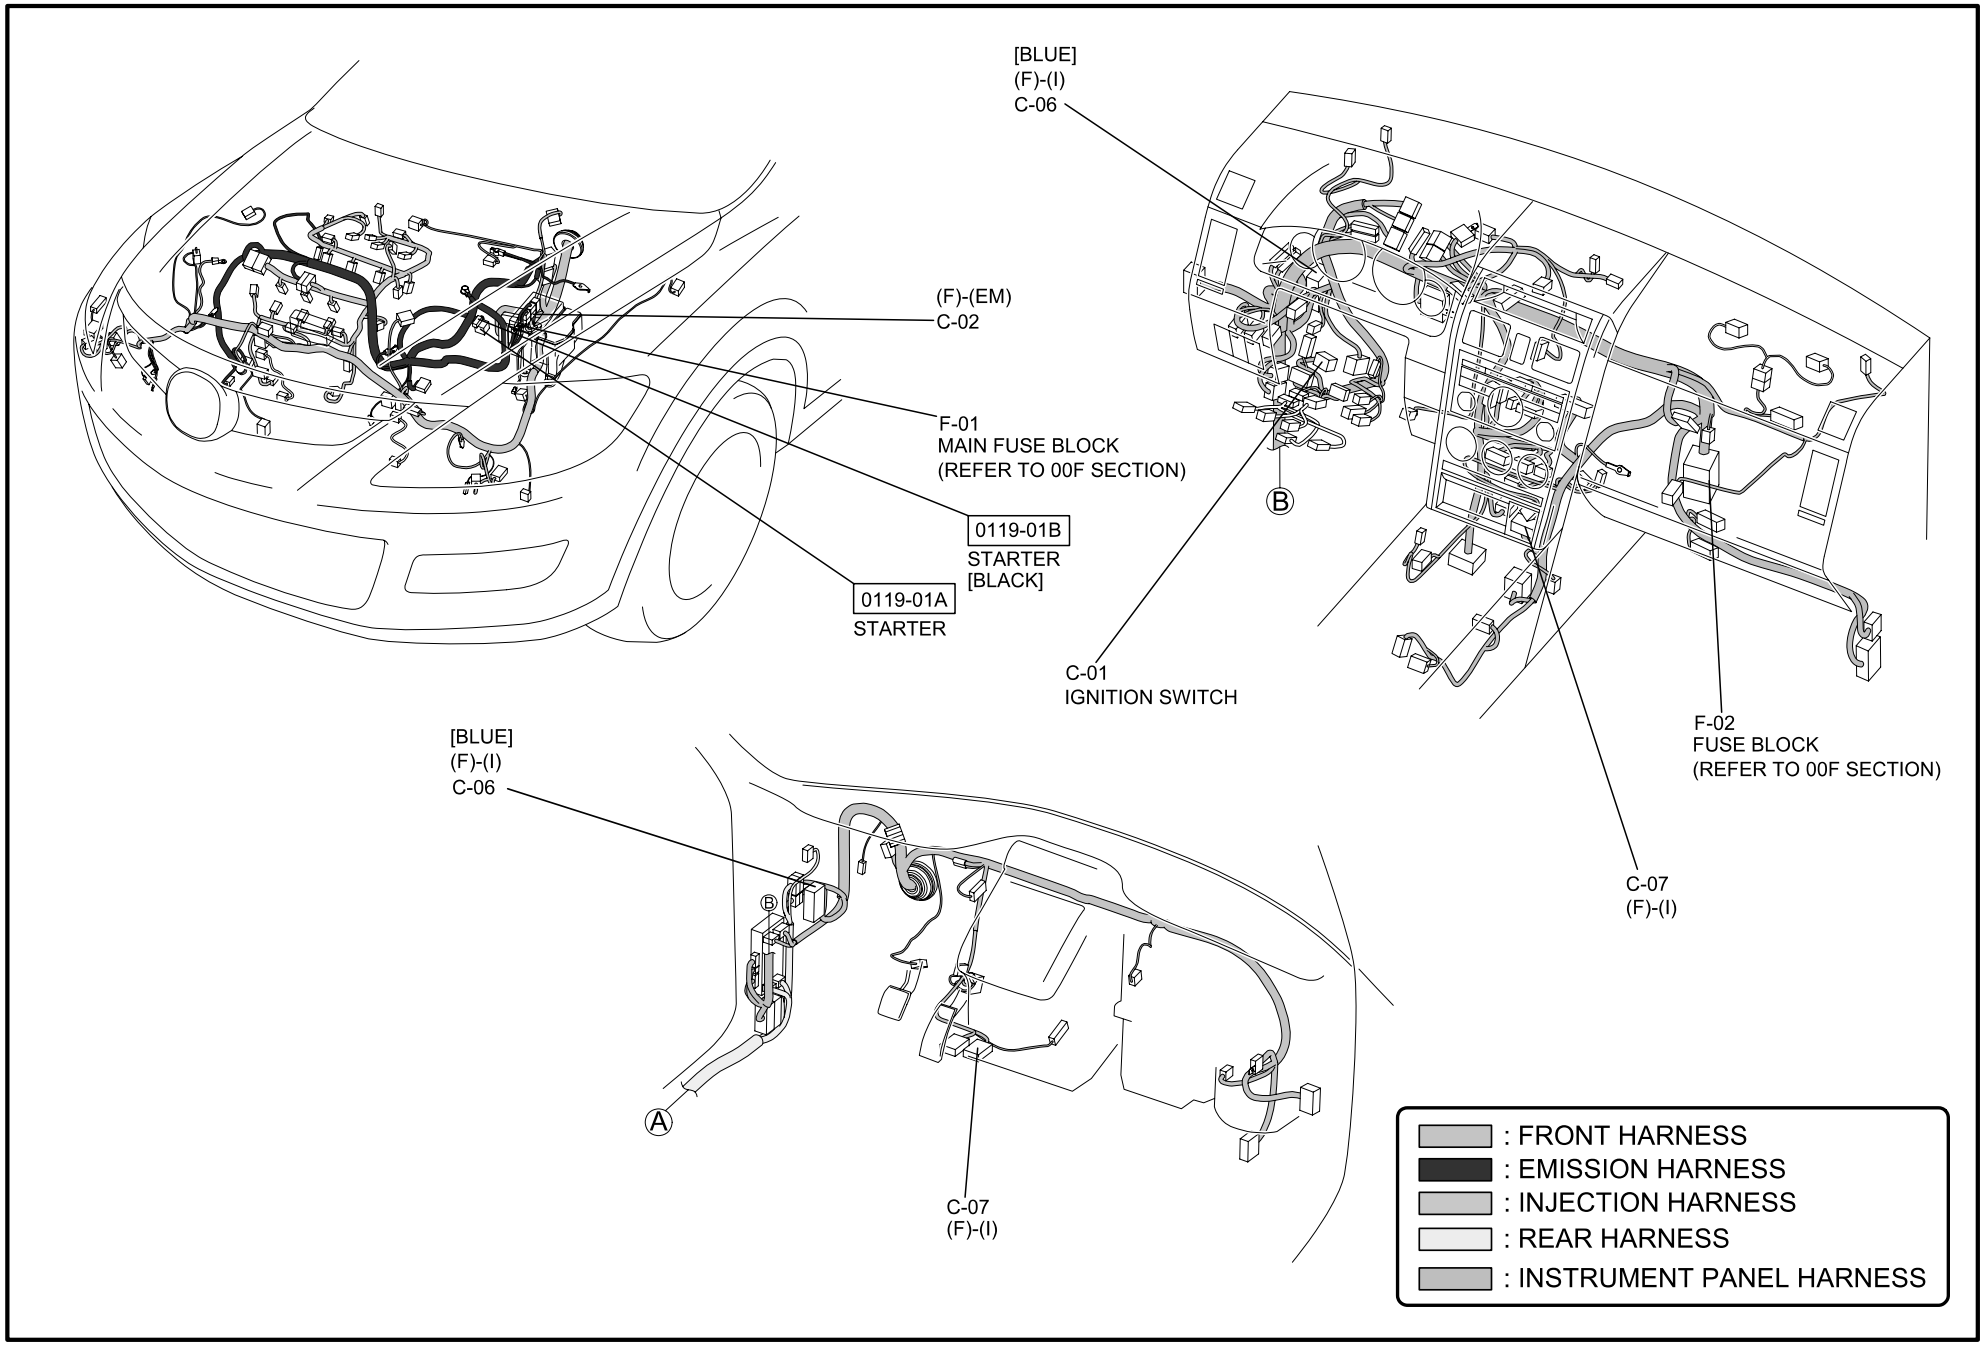
[BLUE]
(F)-(I)
C-06
(F)-(EM)
C-02
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0119-01B
STARTER
[BLACK]
0119-01A
STARTER
B
C-01
IGNITION SWITCH
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
C-07
(F)-(I)
[BLUE]
(F)-(I)
C-06
B
A
C-07
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

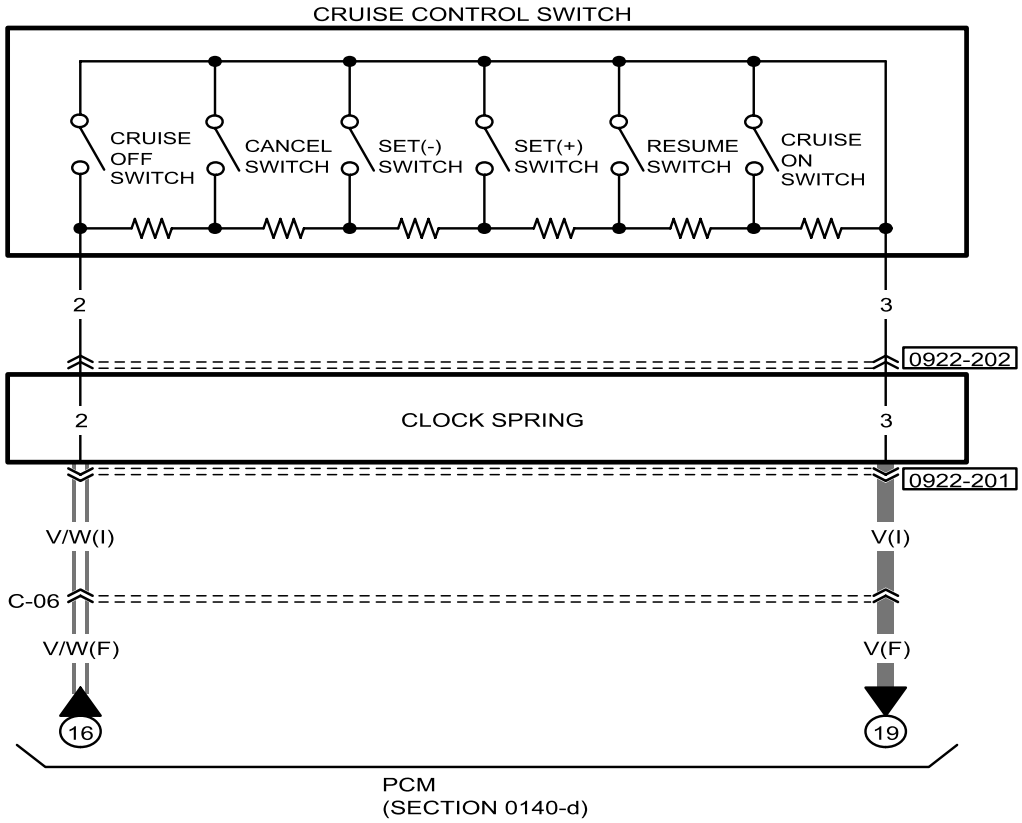


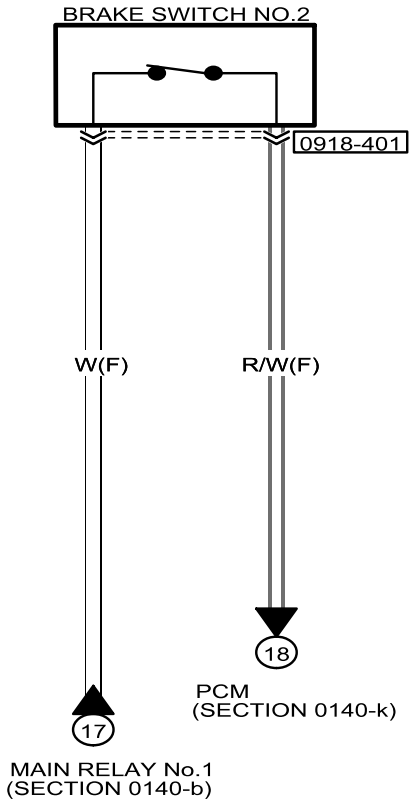


0918-401
BRAKE SWITCH NO.1 /
BRAKE SWITCH NO.2



0922-201
CLOCK SPRING

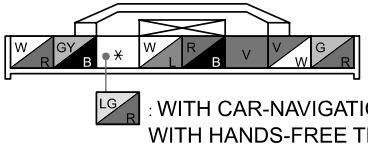


0922-202
CRUISE CONTROL SWITCH /AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION/
CRUISE CONTROL SWITCH ILLUMINATION /CLOCK SPRING

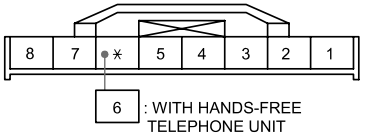

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

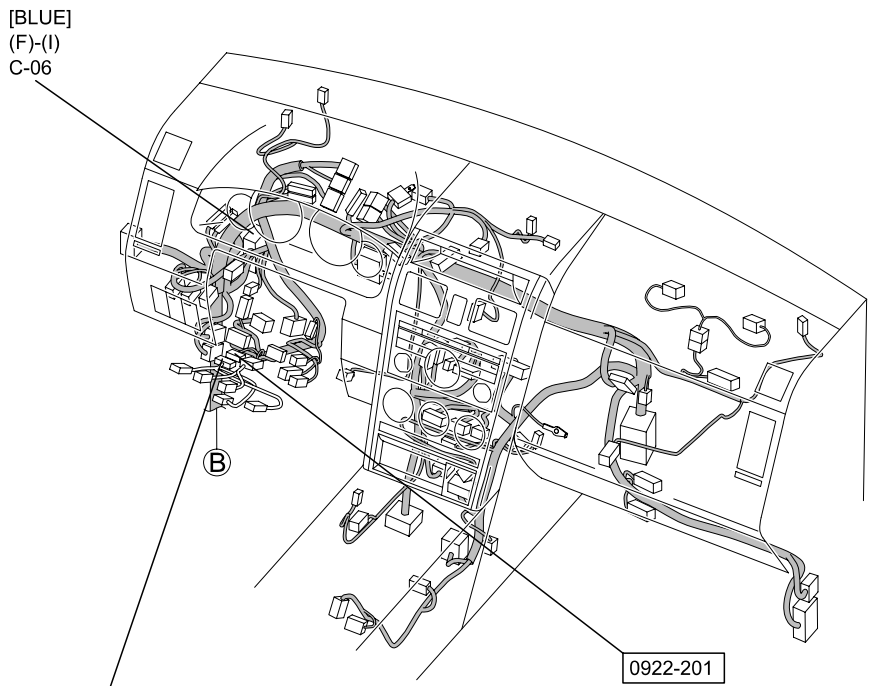


0922-202
CRUISE CONTROL SWITCH /
AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
CLOCK SPRING

CRUISE CONTROL SWITCH
Controls signals to turn system on or off, set and hold vehicle speed, accelerate or coast.

0922-201
CLOCK SPRING


CLOCK SPRING
Electrically connects steering wheel and air bag to body harness.

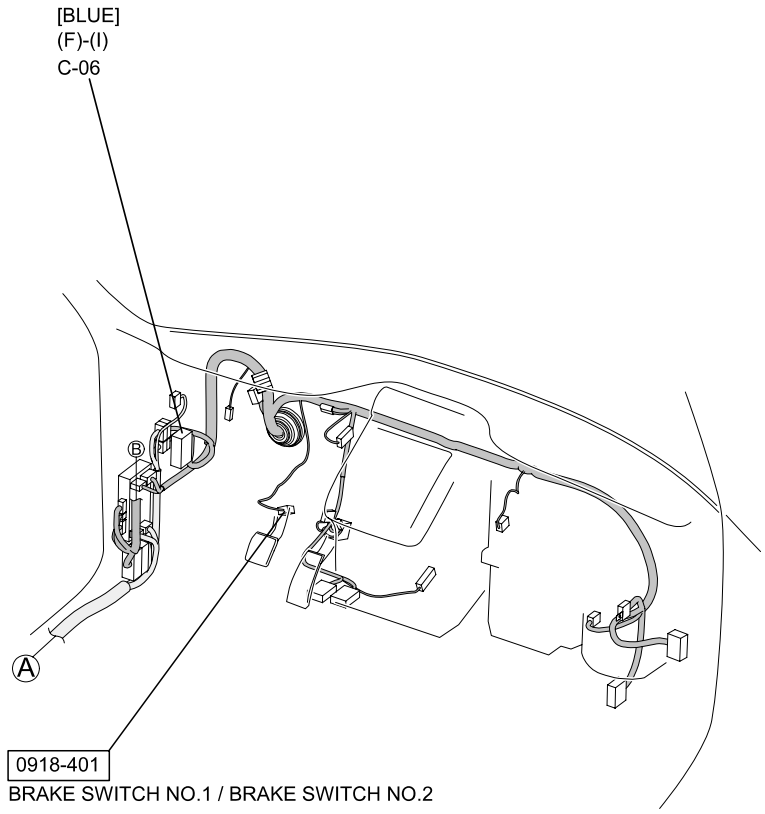


0918-401
BRAKE SWITCH NO.1 / BRAKE SWITCH NO.2

BRAKE SWITCH
Closed with brake pedal depressed.
Sends signal to related control module.


: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

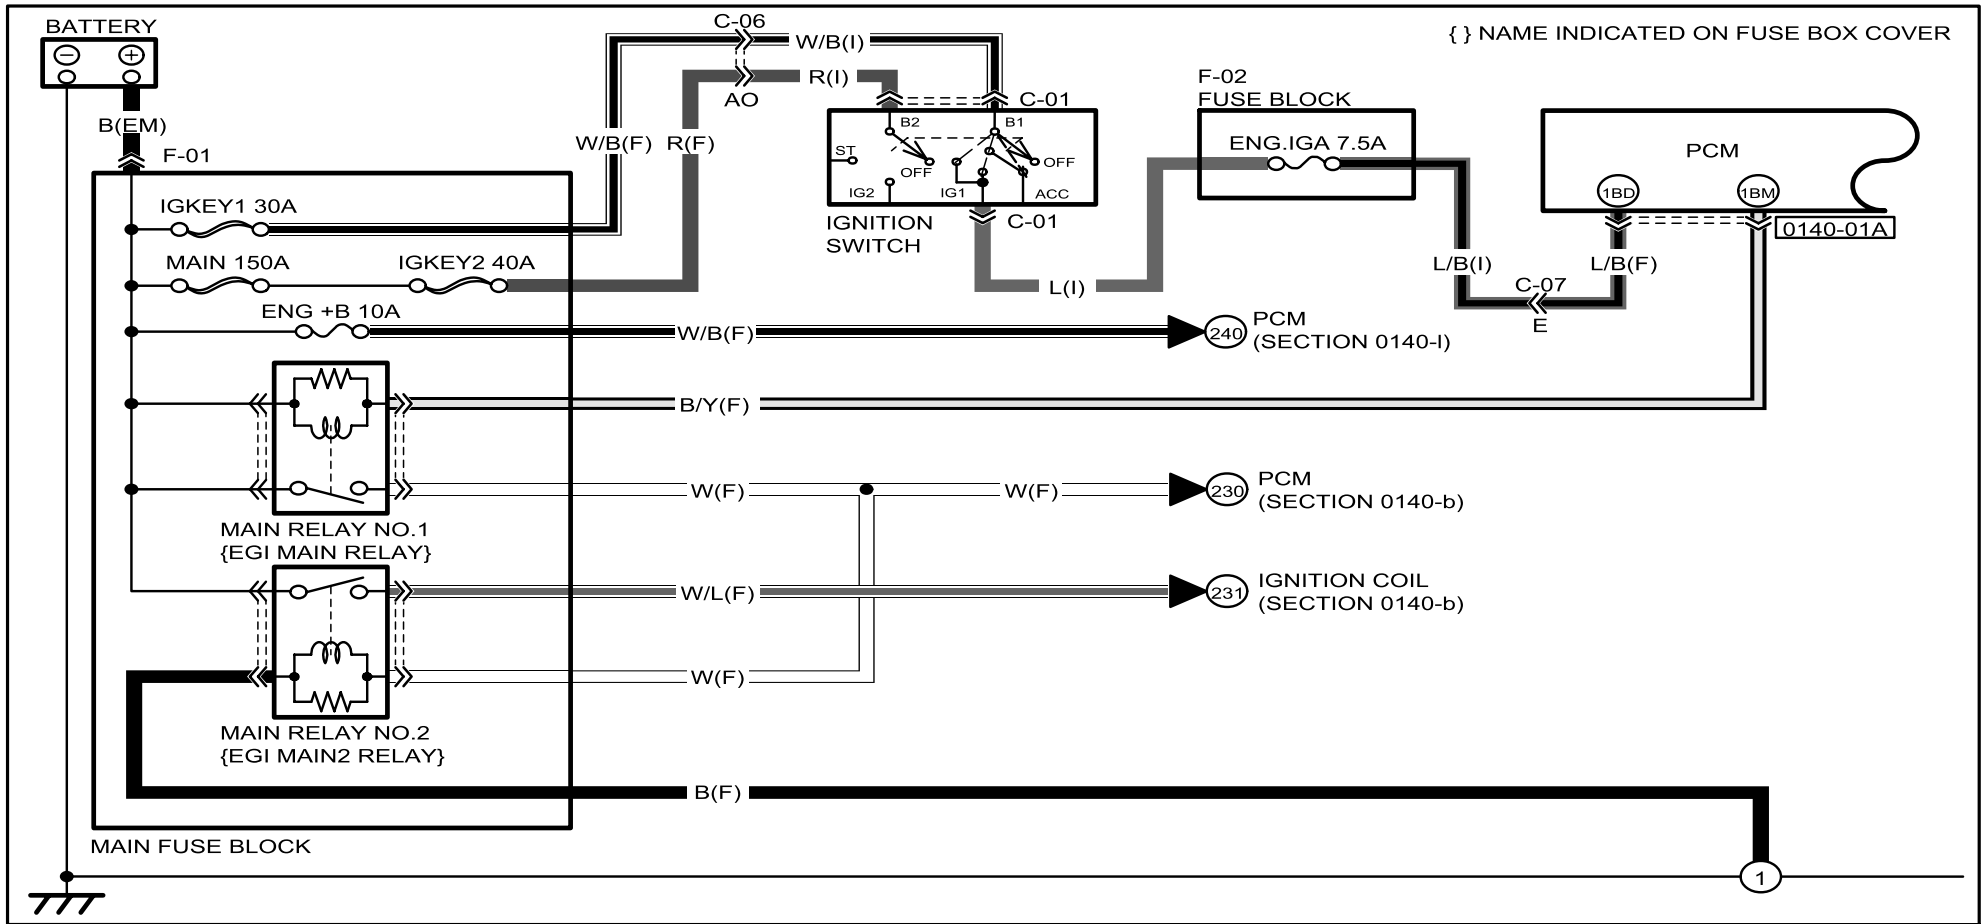


0140-01A
PCM

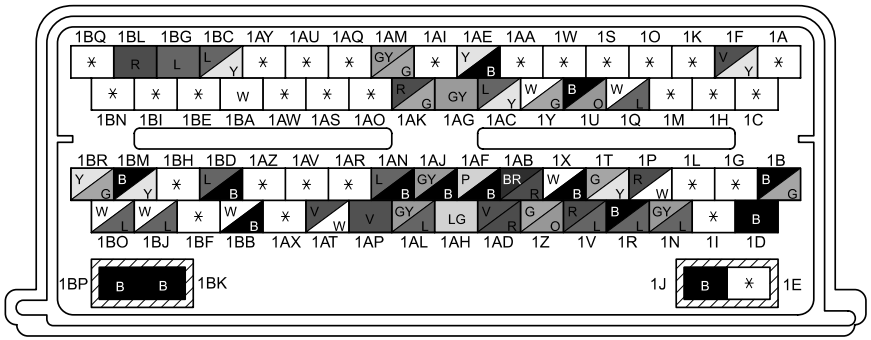


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

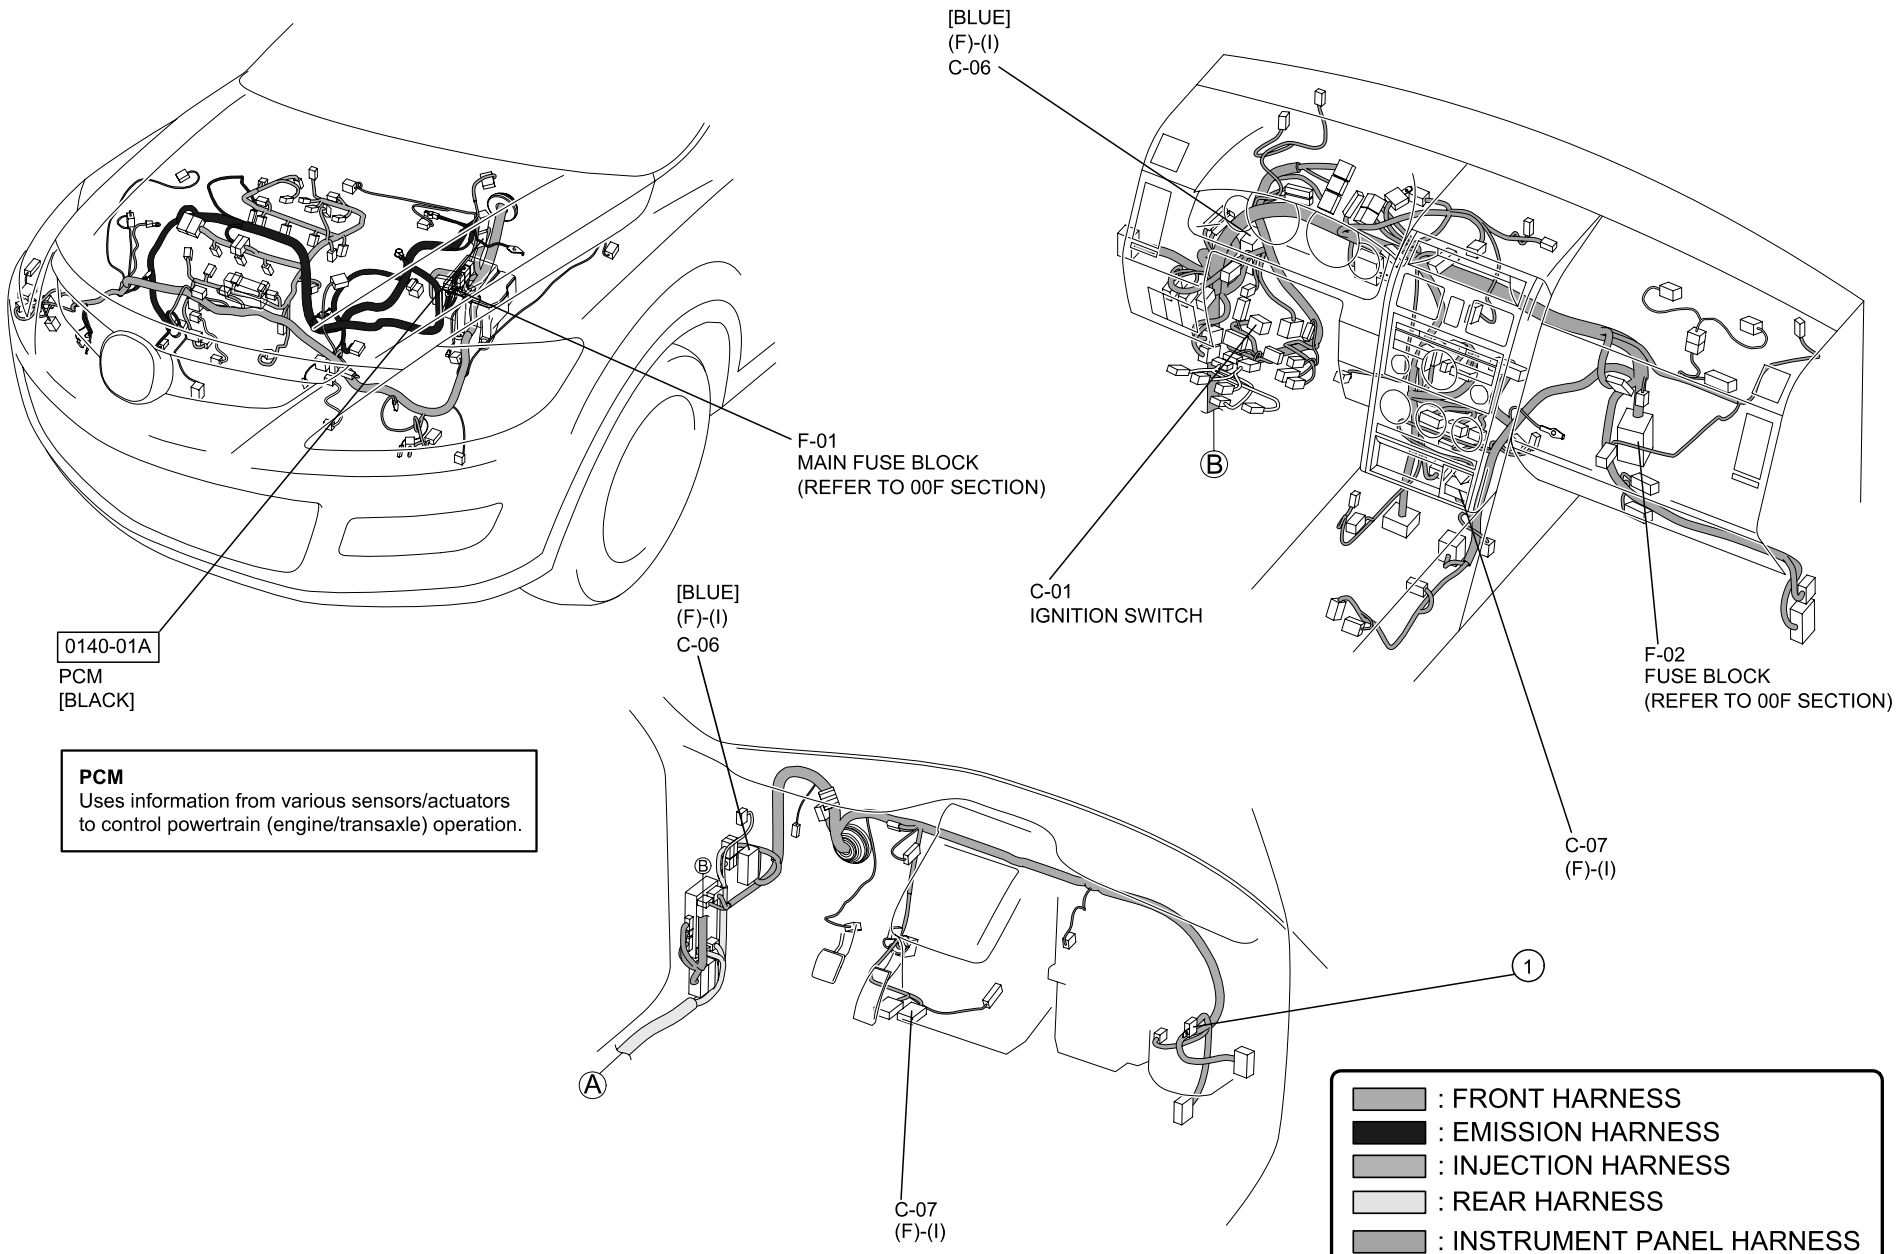


PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.

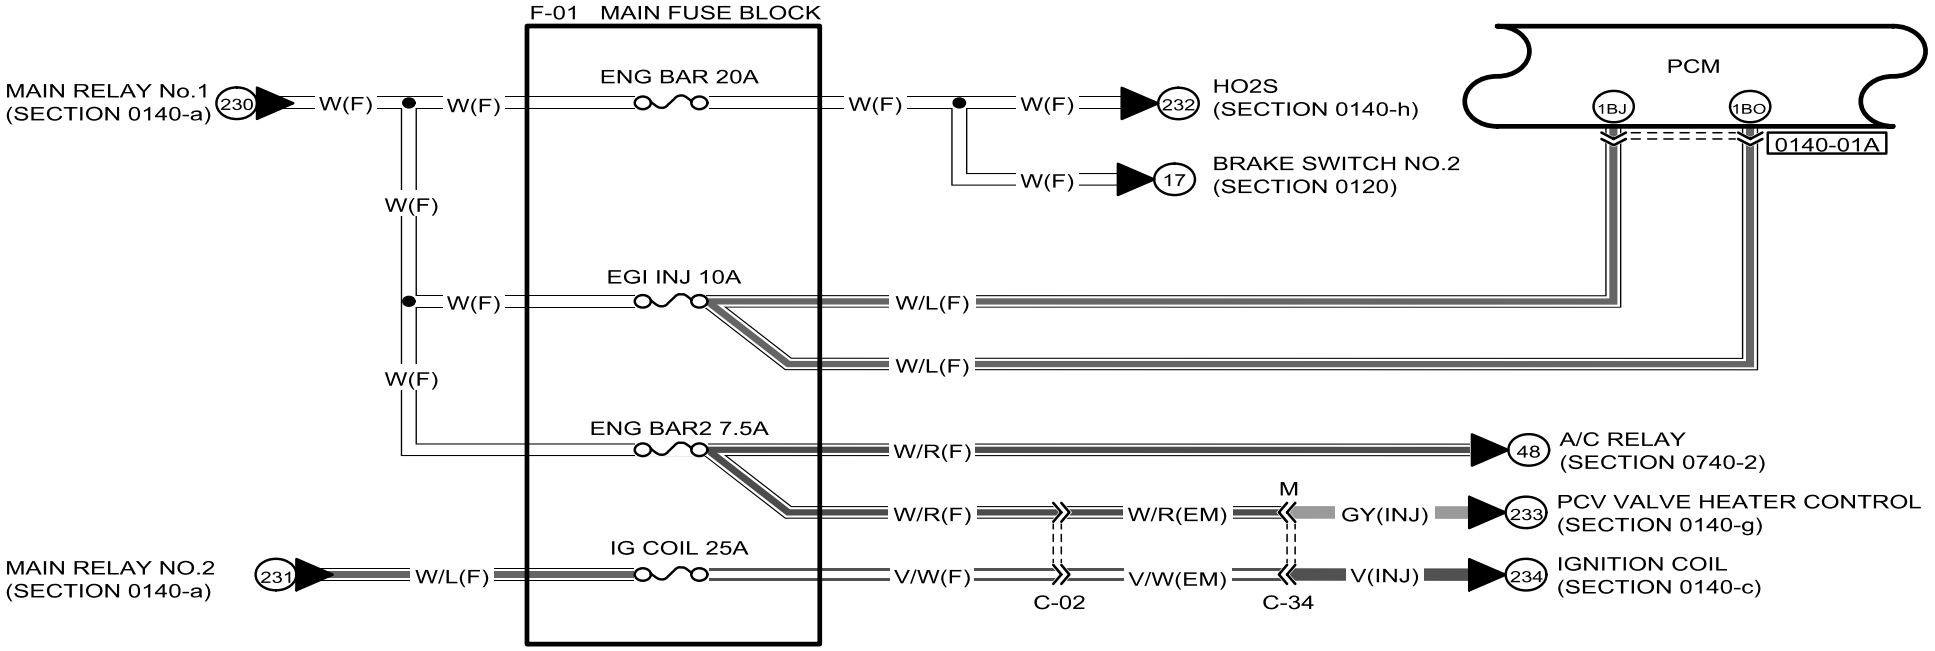


0140-01A
PCM

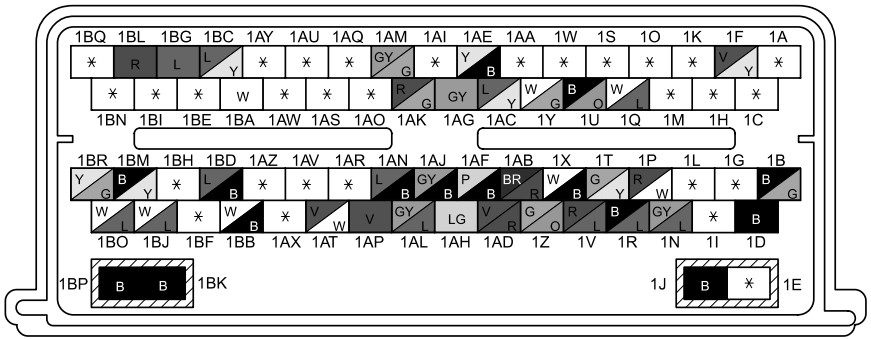


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

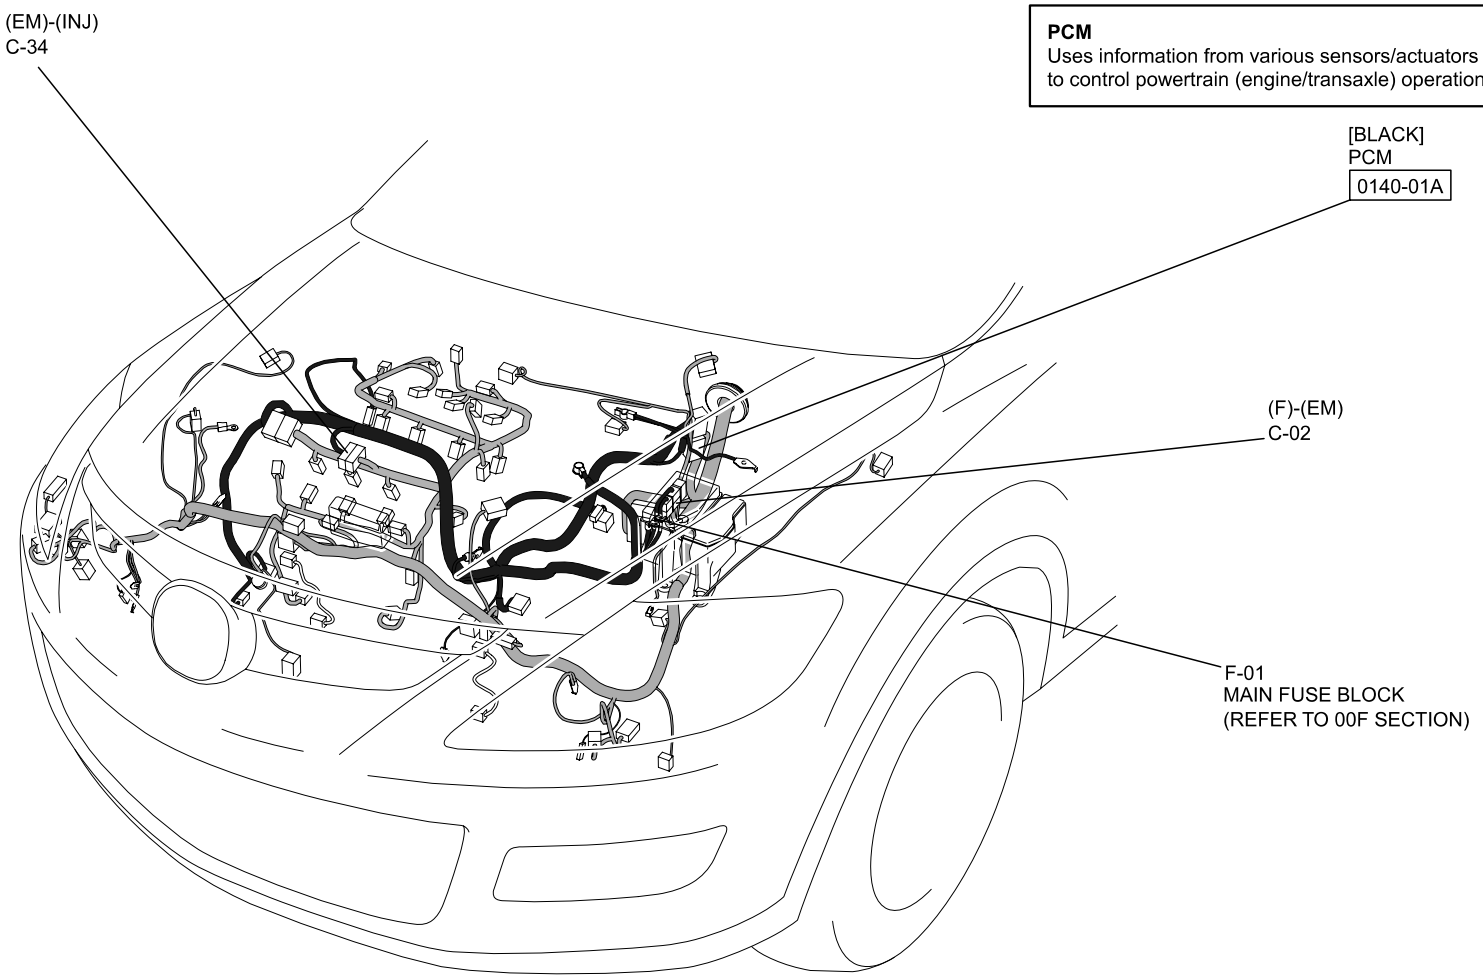

(EM)-(INJ)
C-34
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
[BLACK]
PCM
0140-01A
(F)-(EM)
C-02
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

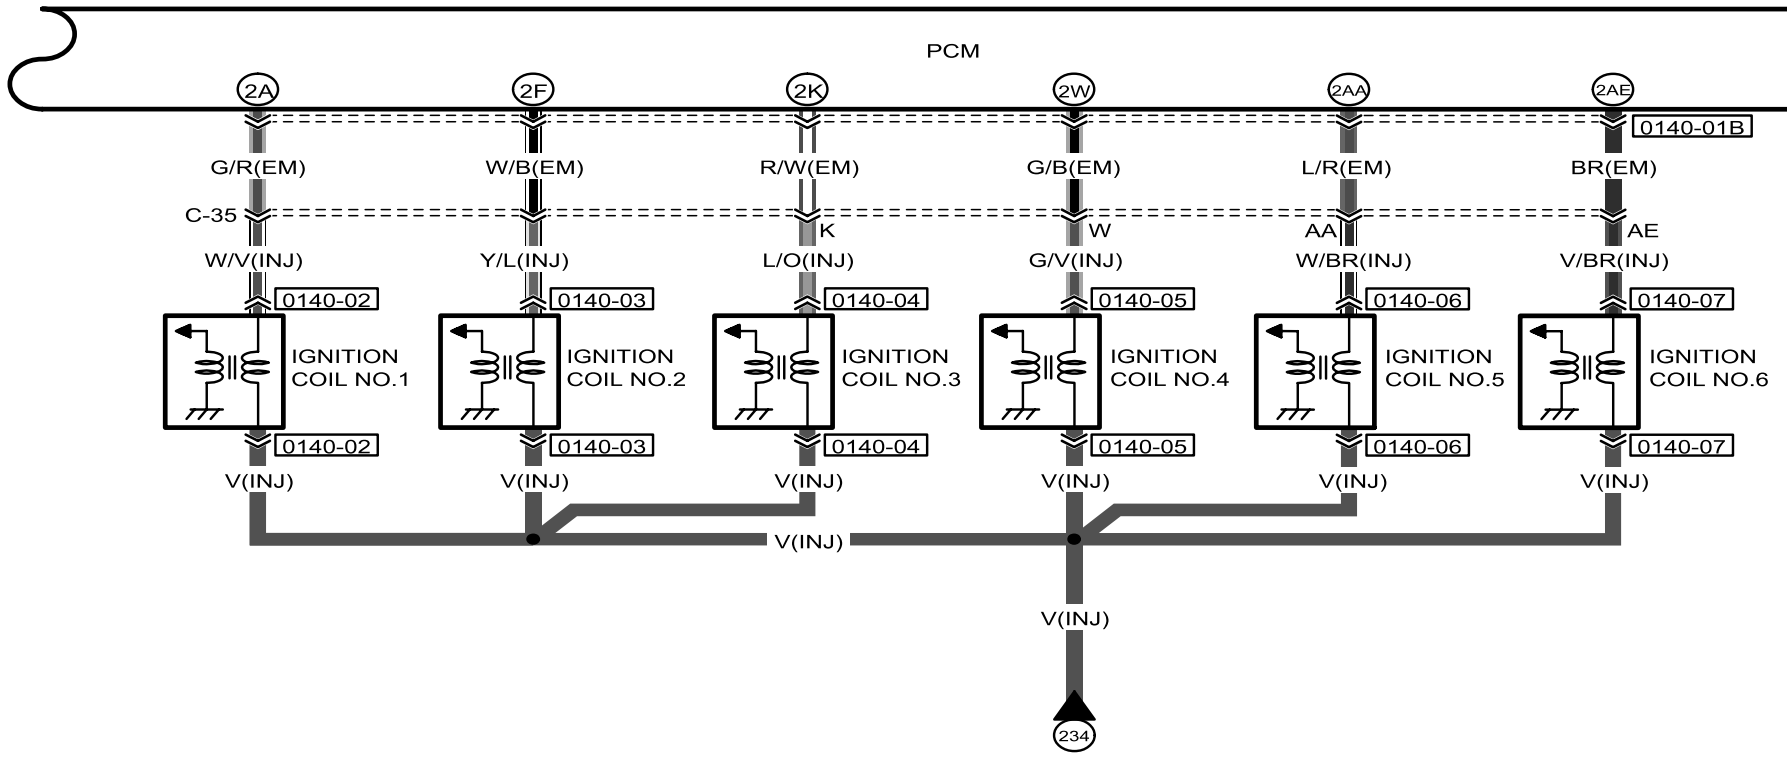


0140-01B
PCM

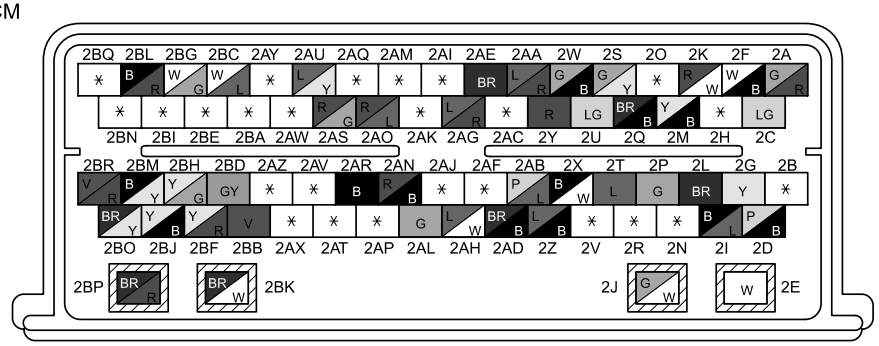


0140-02
IGNITION COIL NO.1




0140-04
IGNITION COIL NO.3




0140-06
IGNITION COIL NO.5




0140-03
IGNITION COIL NO.2




0140-05
IGNITION COIL NO.4




0140-07
IGNITION COIL NO.6




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

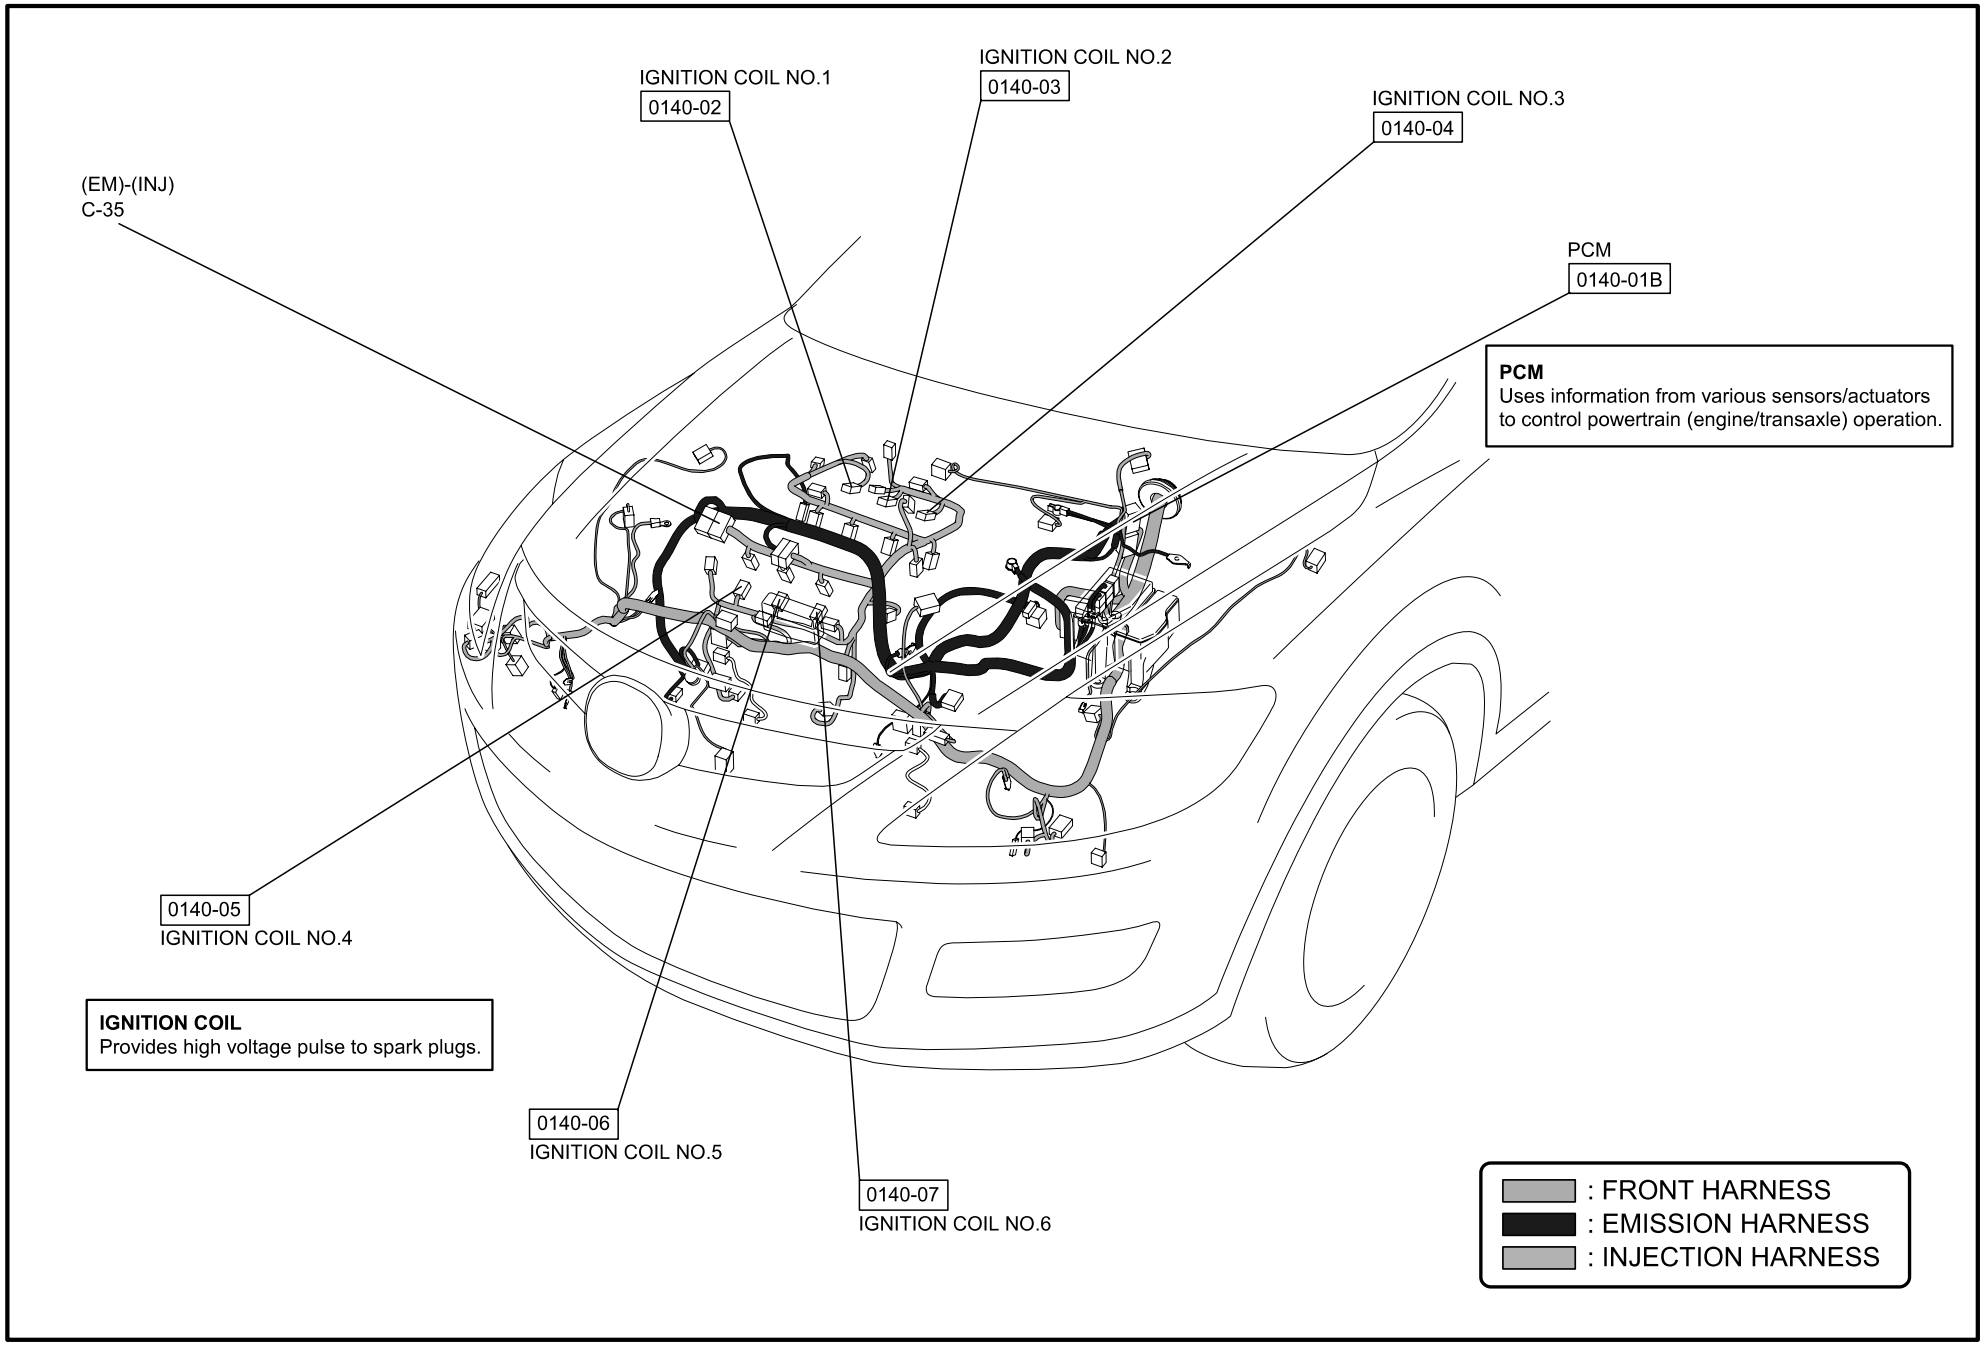

IGNITION COIL NO.1
0140-02
IGNITION COIL NO.2
0140-03
IGNITION COIL NO.3
0140-04
(EM)-(INJ)
C-35
PCM
0140-01B
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
0140-05
IGNITION COIL NO.4
IGNITION COIL
Provides high voltage pulse to spark plugs.
0140-06
IGNITION COIL NO.5
0140-07
IGNITION COIL NO.6
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

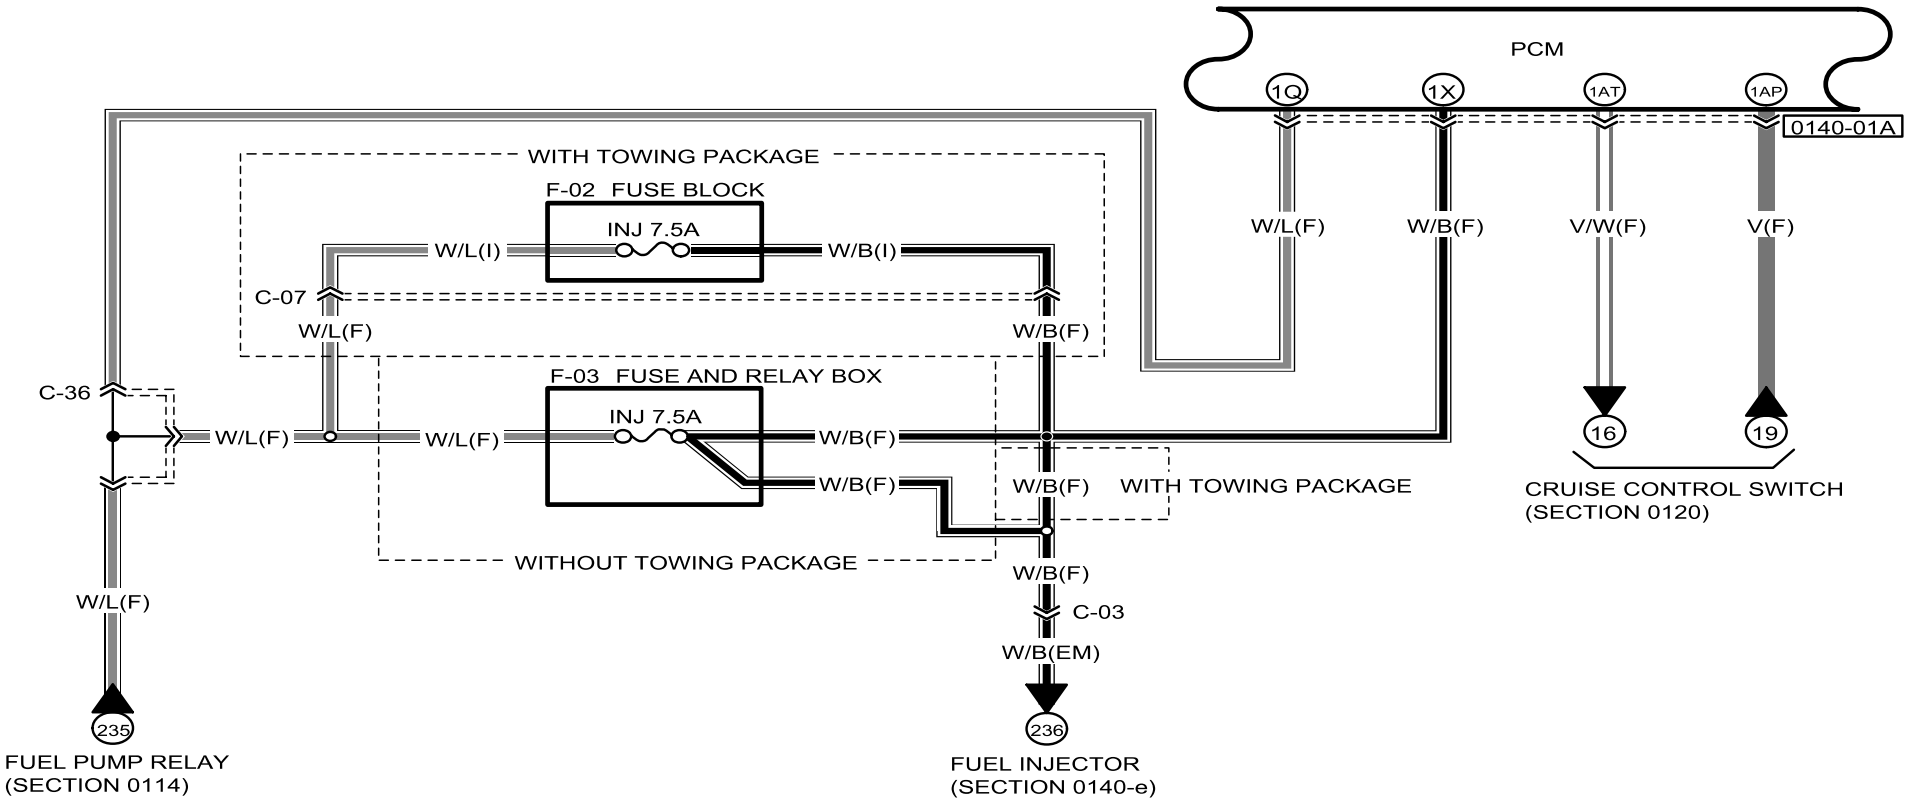


0140-01A
PCM

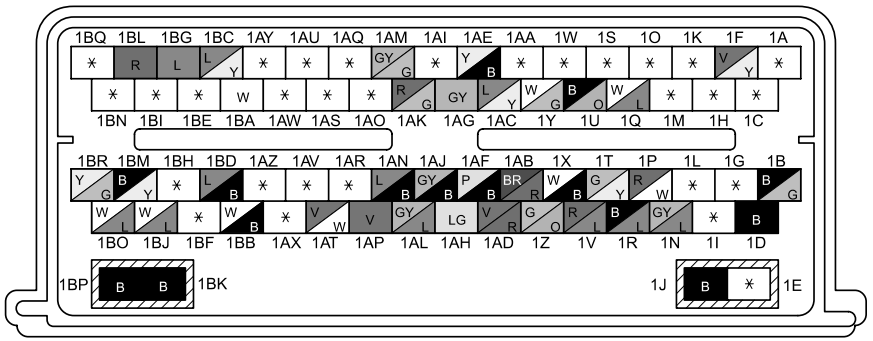


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

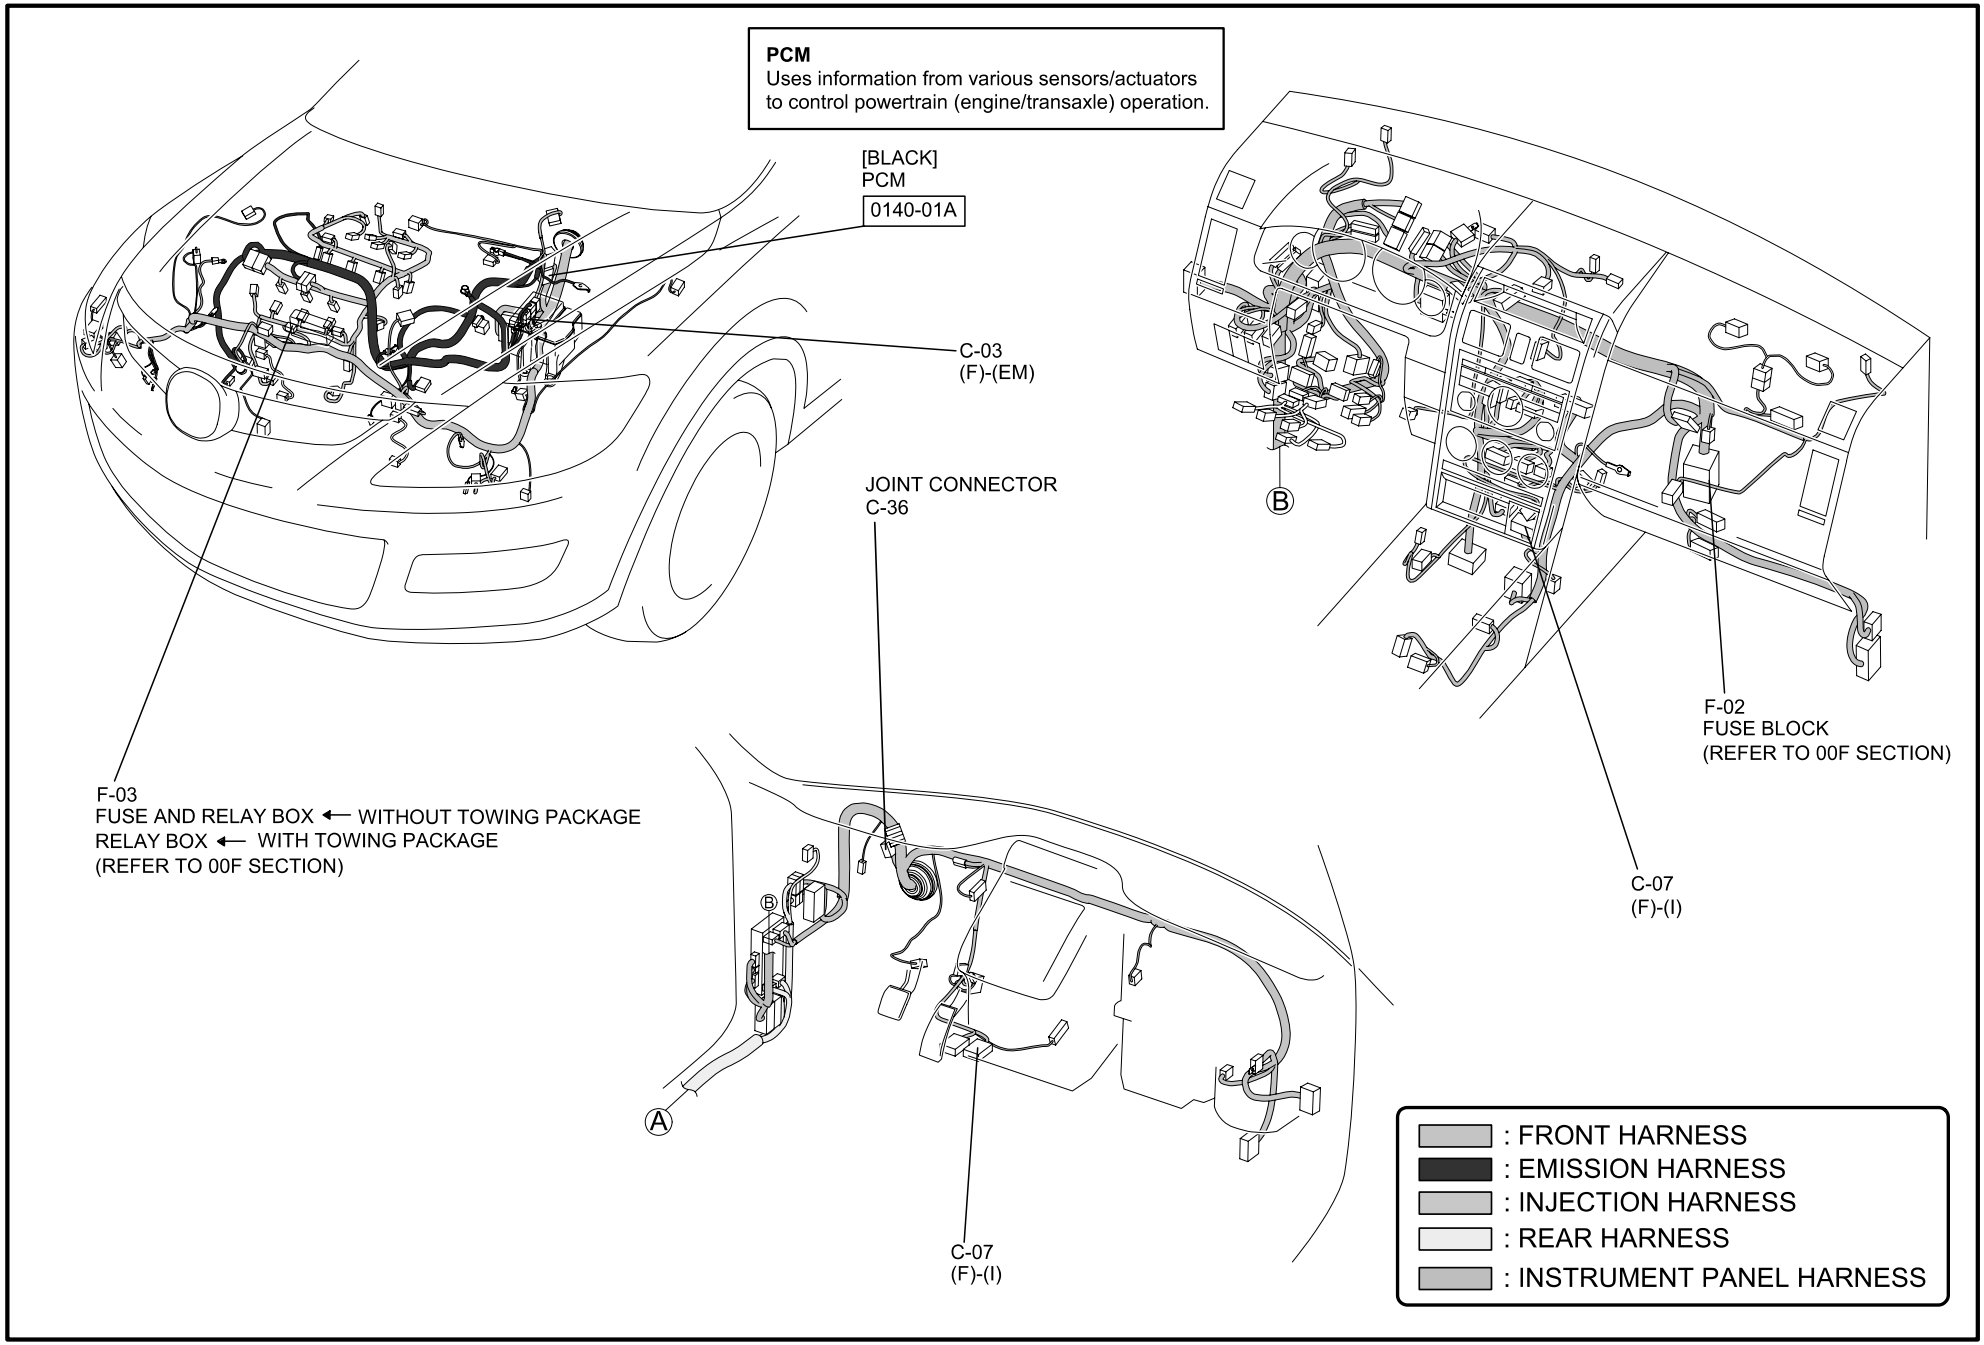
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
[BLACK]
PCM
0140-01A
C-03
(F)-(EM)
JOINT CONNECTOR
C-36
B
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
F-03
FUSE AND RELAY BOX ← WITHOUT TOWING PACKAGE
RELAY BOX ← WITH TOWING PACKAGE
(REFER TO 00F SECTION)
C-07
(F)-(I)
B
A
C-07
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

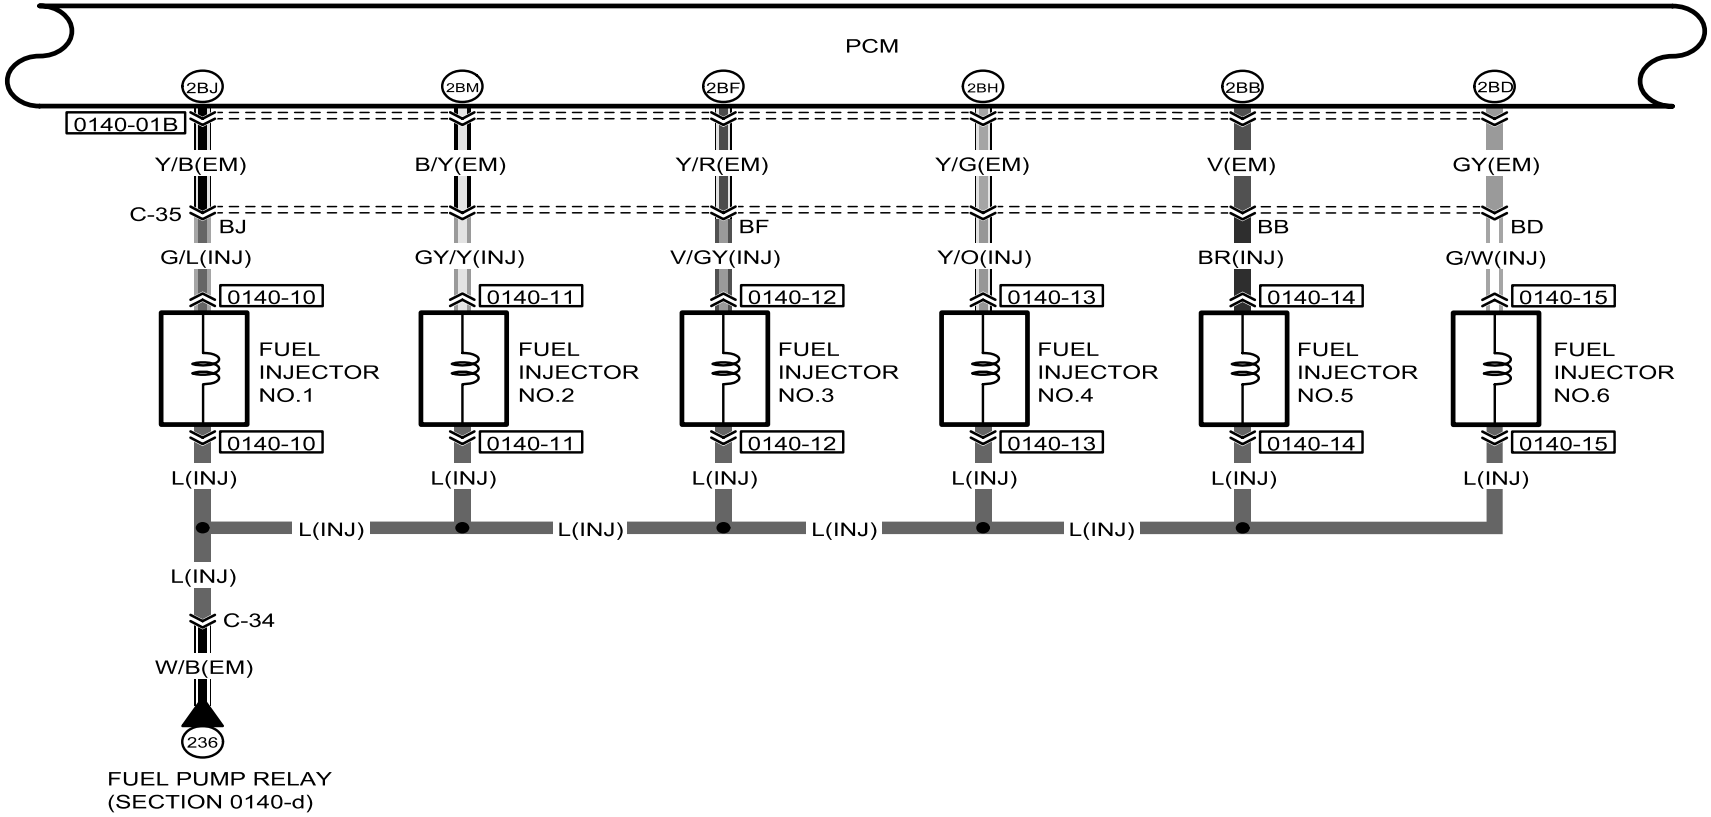

0140-01B
PCM

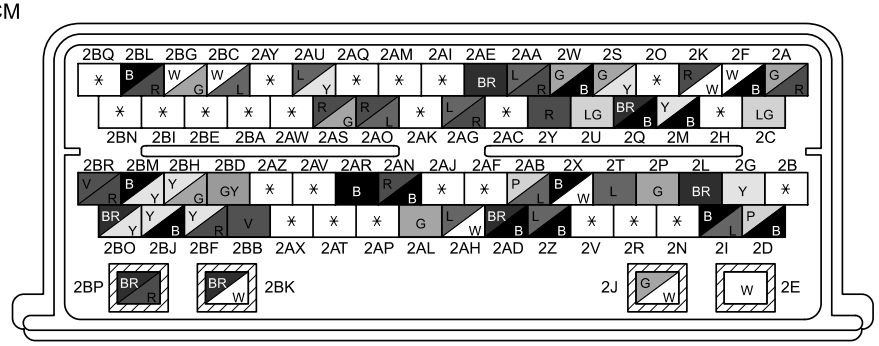

0140-10
FUEL INJECTOR NO.1



0140-12
FUEL INJECTOR NO.3



0140-14
FUEL INJECTOR NO.5



0140-11
FUEL INJECTOR NO.2




0140-13
FUEL INJECTOR NO.4




0140-15
FUEL INJECTOR NO.6




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

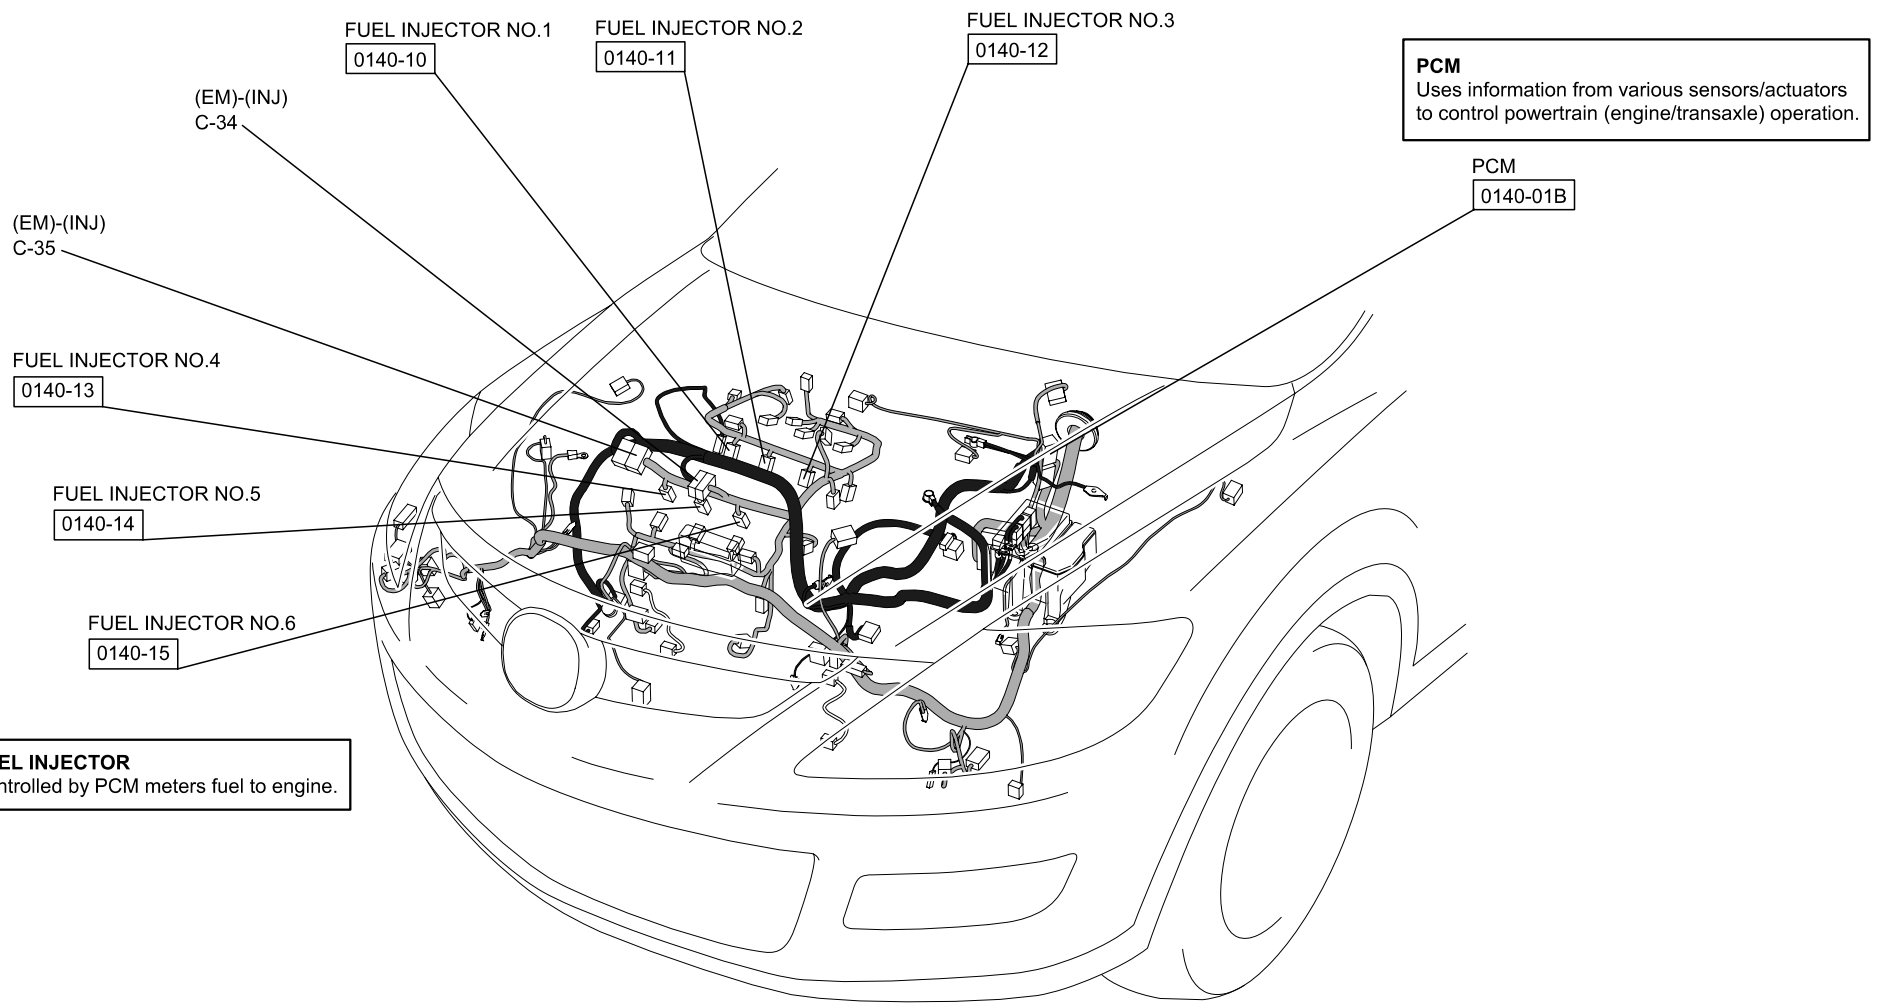
FUEL INJECTOR NO.1
0140-10
FUEL INJECTOR NO.2
0140-11
FUEL INJECTOR NO.3
0140-12
(EM)-(INJ)
C-34
(EM)-(INJ)
C-35
FUEL INJECTOR NO.4
0140-13
FUEL INJECTOR NO.5
0140-14
FUEL INJECTOR NO.6
0140-15
PCM
0140-01B
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
FUEL INJECTOR
Controlled by PCM meters fuel to engine.
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

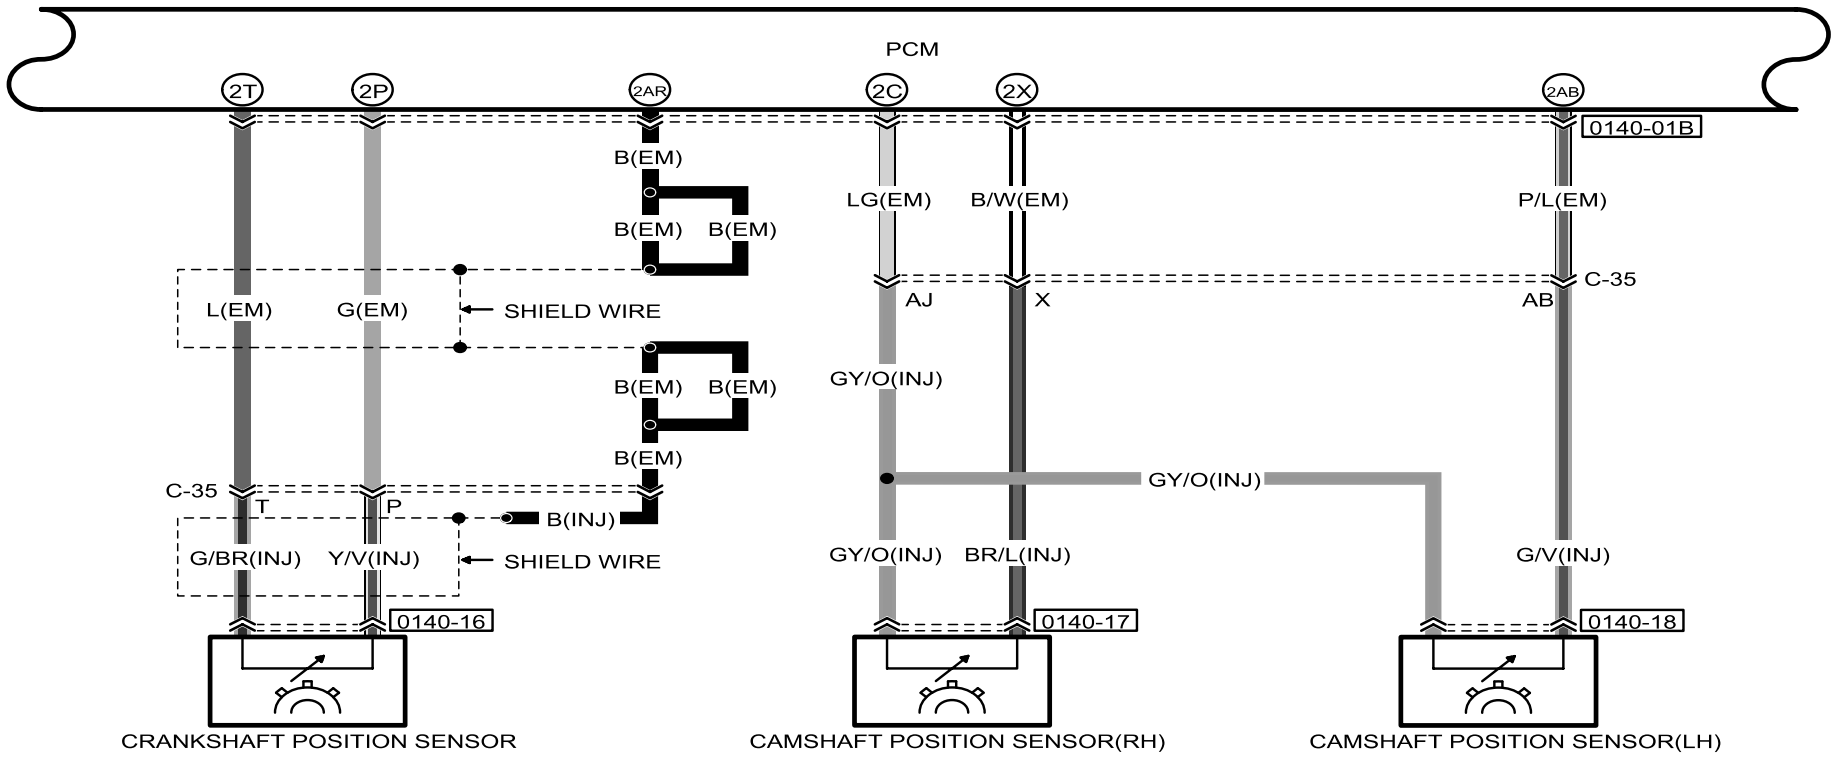

0140-01B
PCM

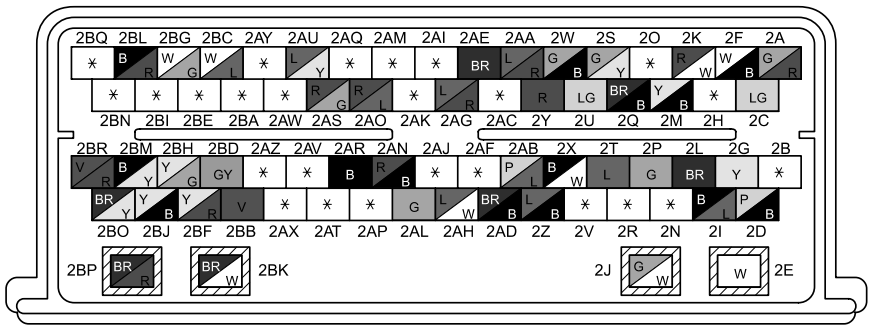

0140-16
CRANKSHAFT POSITION SENSOR




0140-18
CAMSHAFT POSITION SENSOR(LH)




0140-17
CAMSHAFT POSITION SENSOR(RH)




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

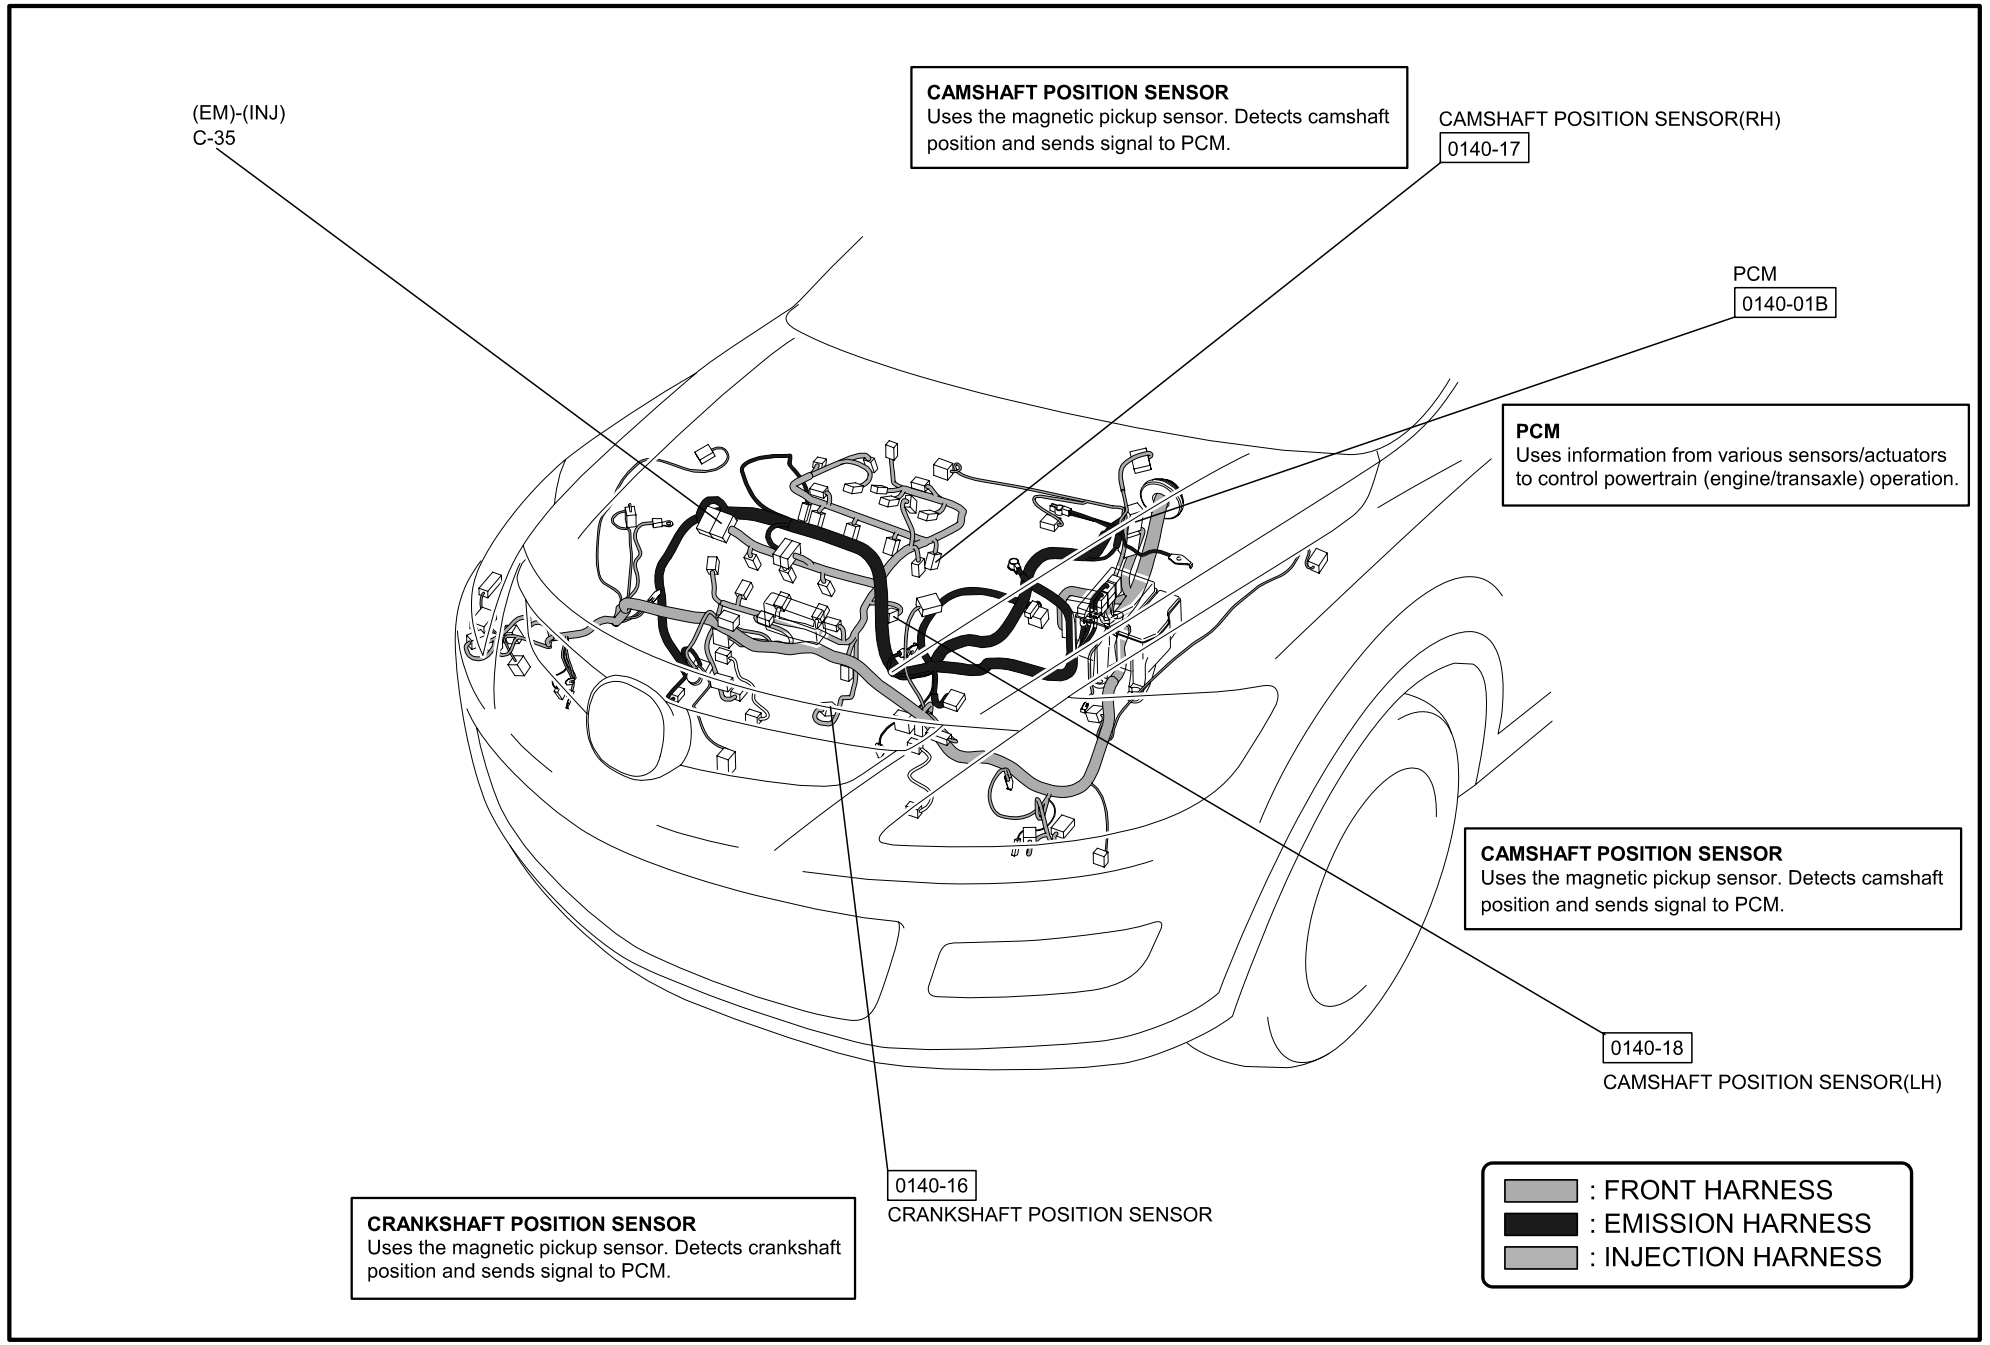

(EM)-(INJ)
C-35
CAMSHAFT POSITION SENSOR
Uses the magnetic pickup sensor. Detects camshaft position and sends signal to PCM.
CAMSHAFT POSITION SENSOR(RH)
0140-17
PCM
0140-01B
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
CAMSHAFT POSITION SENSOR
Uses the magnetic pickup sensor. Detects camshaft position and sends signal to PCM.
0140-18
CAMSHAFT POSITION SENSOR(LH)
0140-16
CRANKSHAFT POSITION SENSOR
CRANKSHAFT POSITION SENSOR
Uses the magnetic pickup sensor. Detects crankshaft position and sends signal to PCM.
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

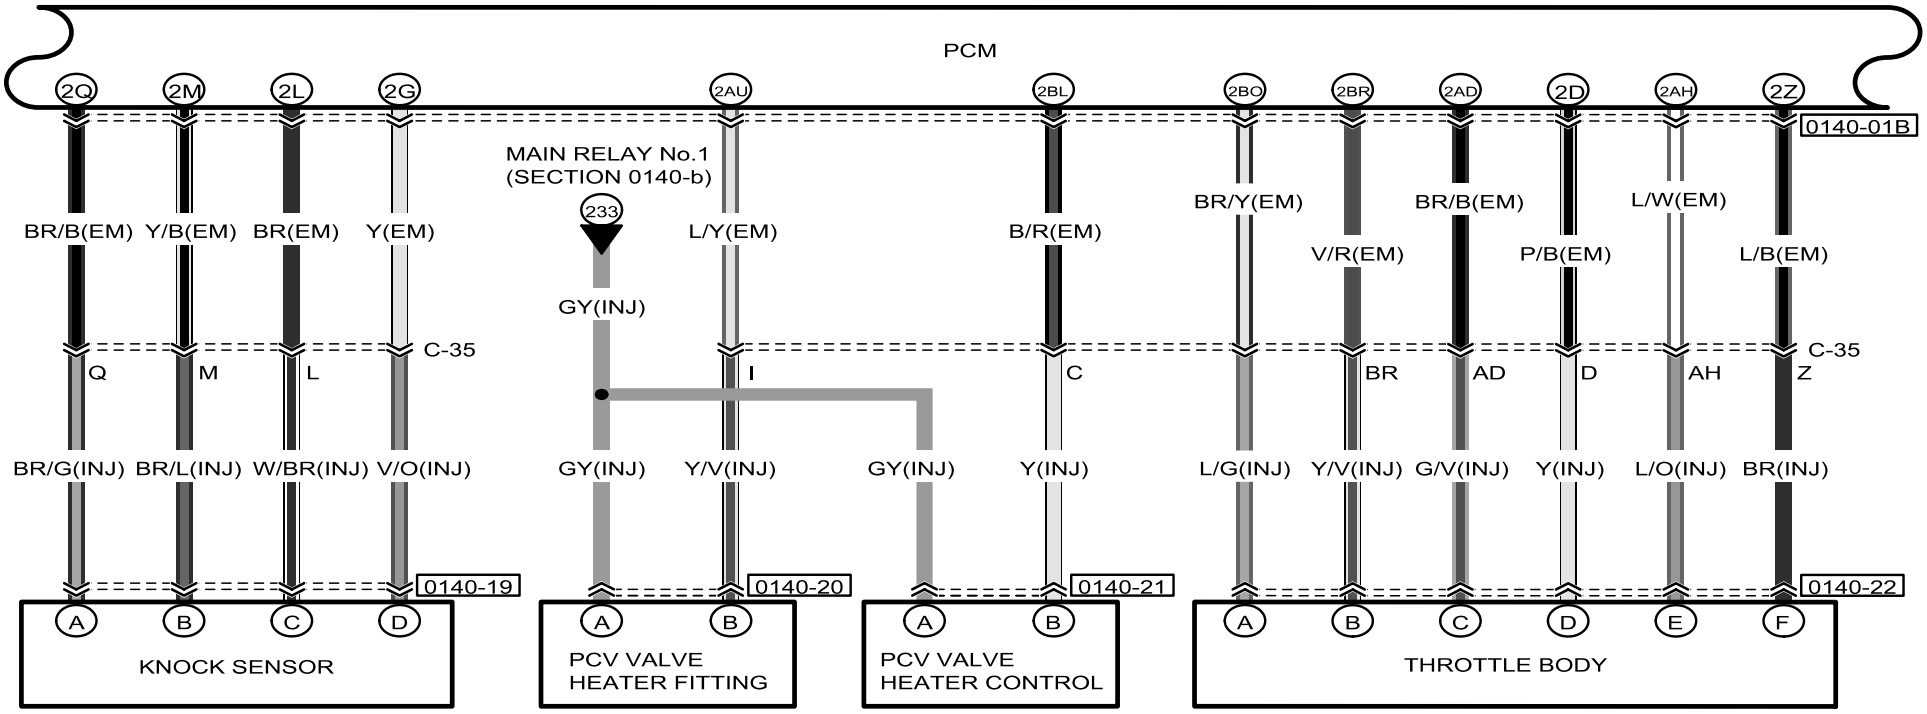


0140-01B
PCM

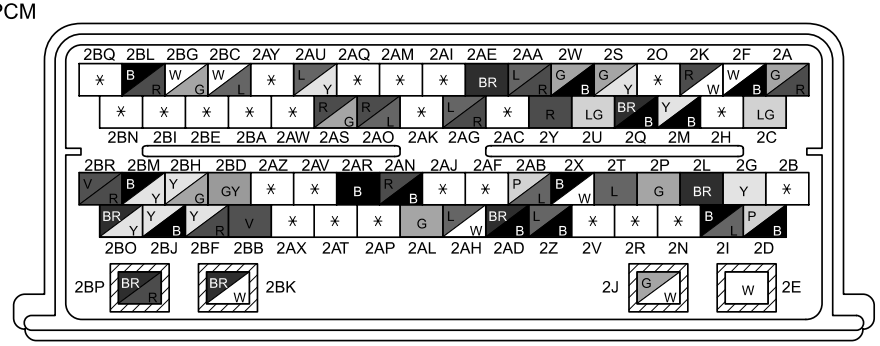


0140-19
KNOCK SENSOR

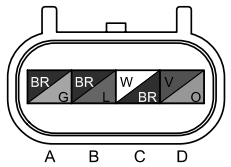


0140-22
THROTTLE BODY

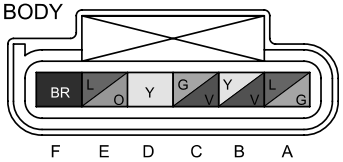


0140-20
PCV VALVE HEATER
FITTING

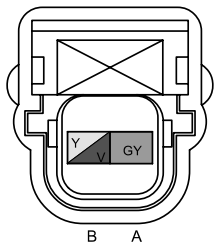


0140-21
PCV VALVE HEATER
CONTROL

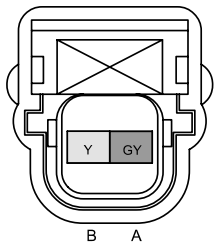


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

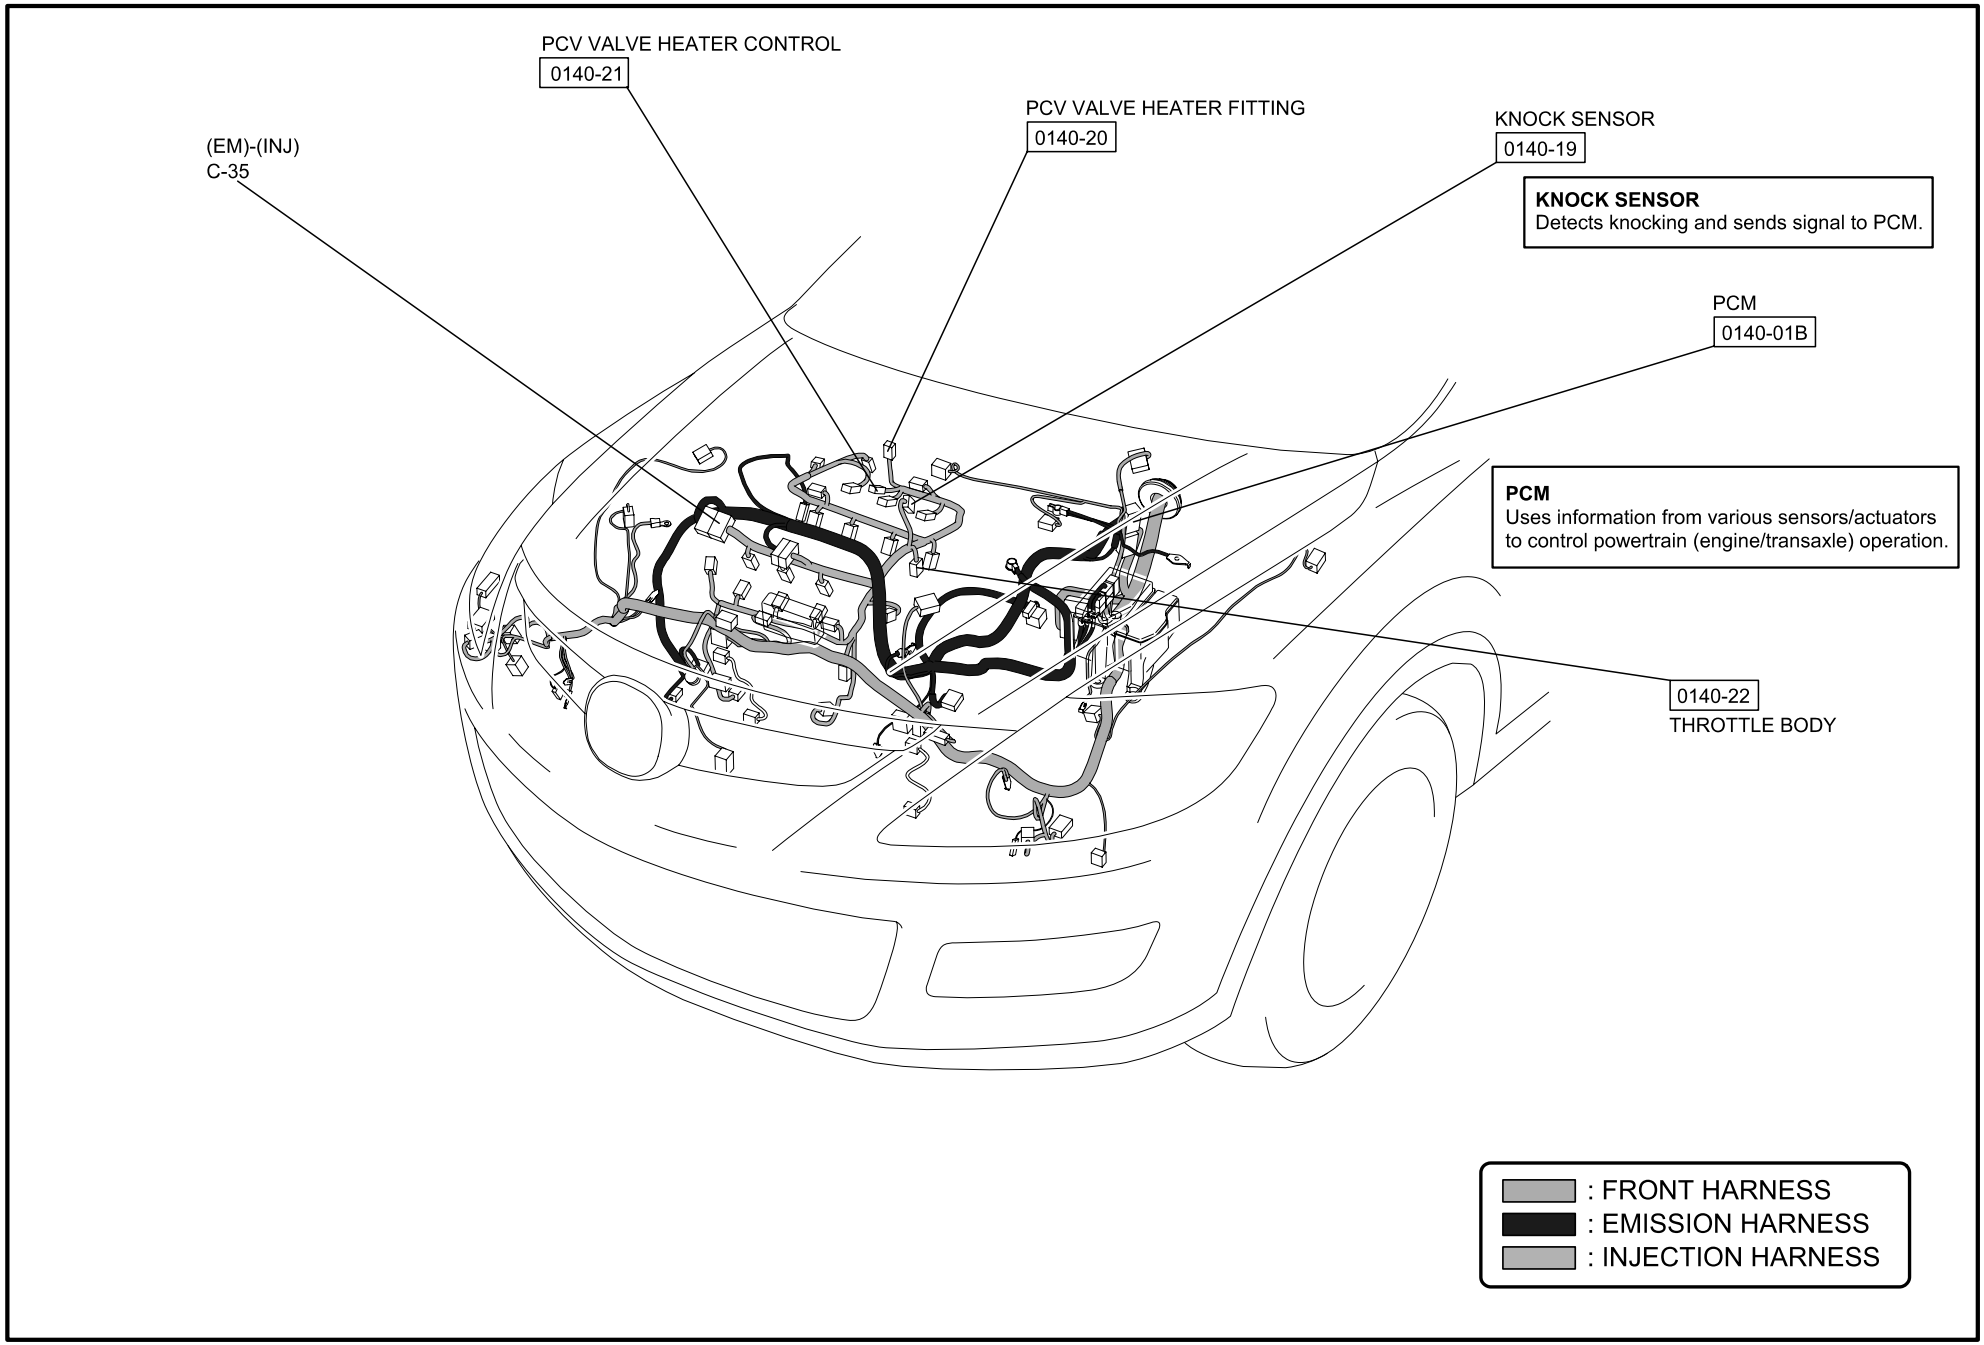

PCV VALVE HEATER CONTROL
0140-21
PCV VALVE HEATER FITTING
0140-20
KNOCK SENSOR
0140-19
(EM)-(INJ)
C-35
KNOCK SENSOR
Detects knocking and sends signal to PCM.
PCM
0140-01B
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
0140-22
THROTTLE BODY
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

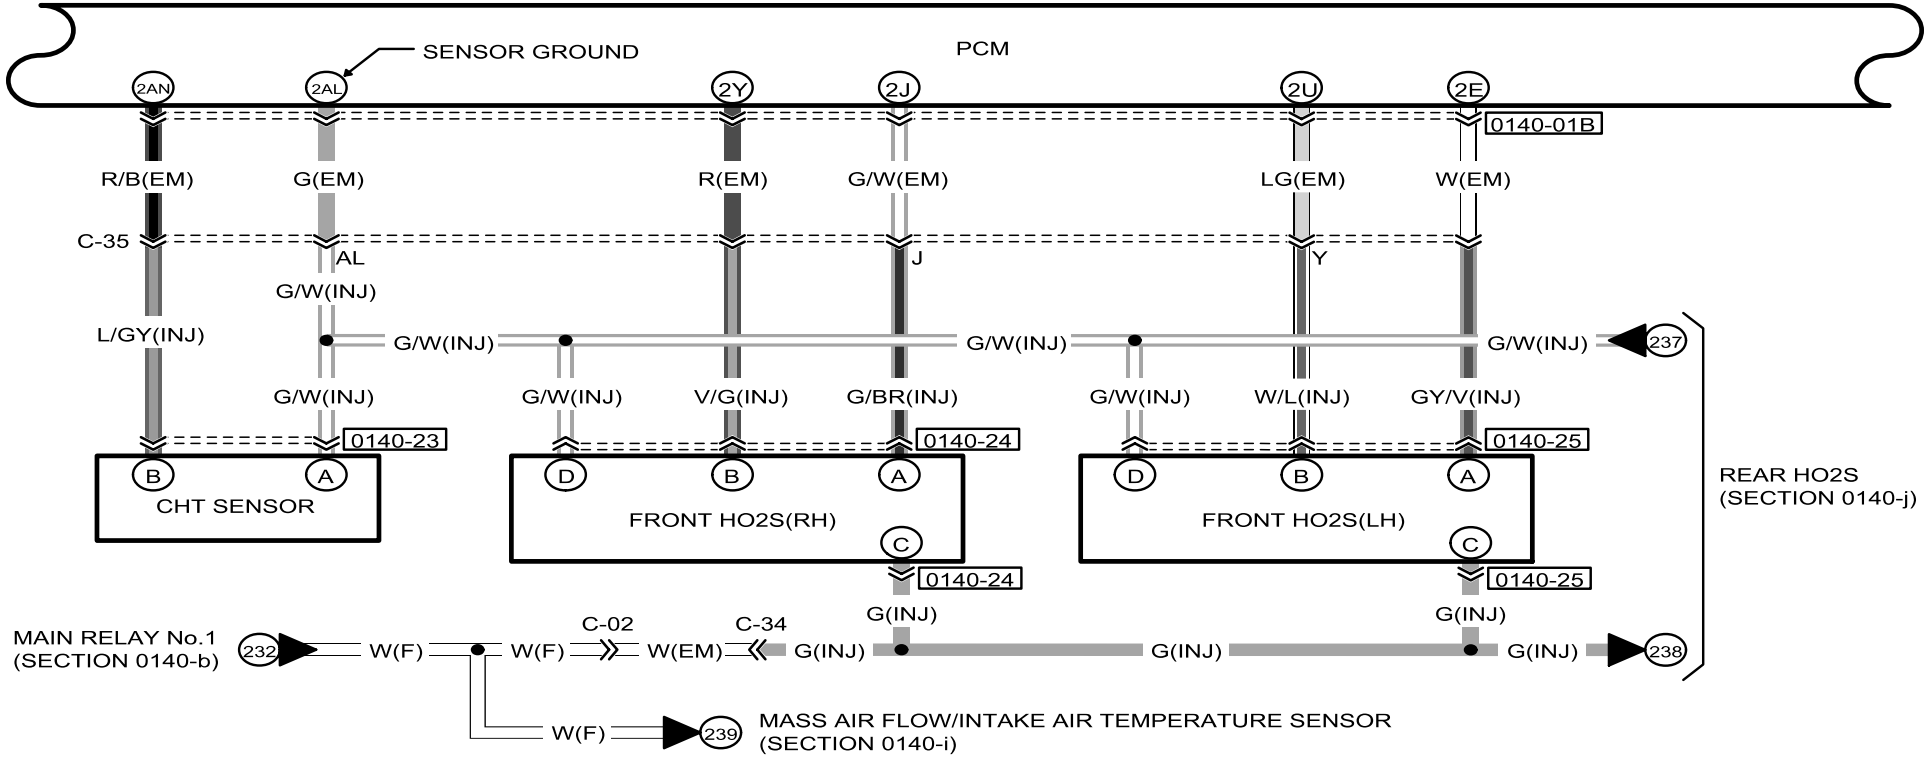


0140-01B
PCM

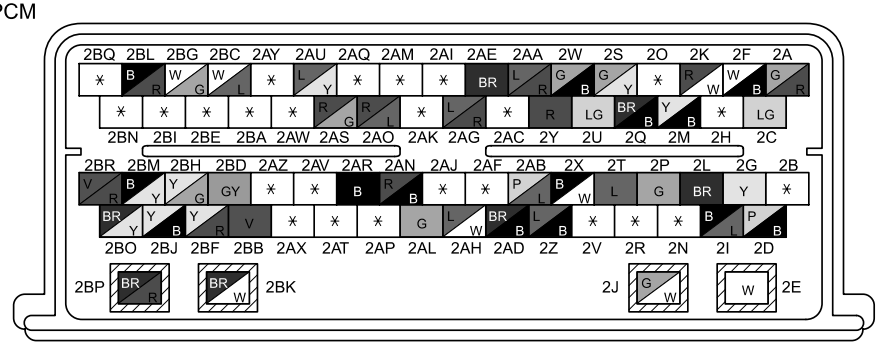


0140-23
CHT SENSOR

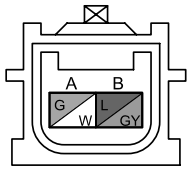


0140-24
FRONT HO2S(RH)

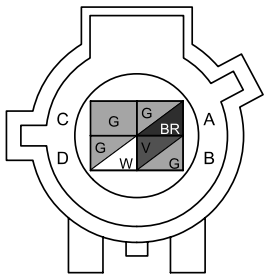


0140-25
FRONT HO2S(LH)

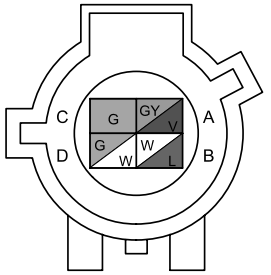


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

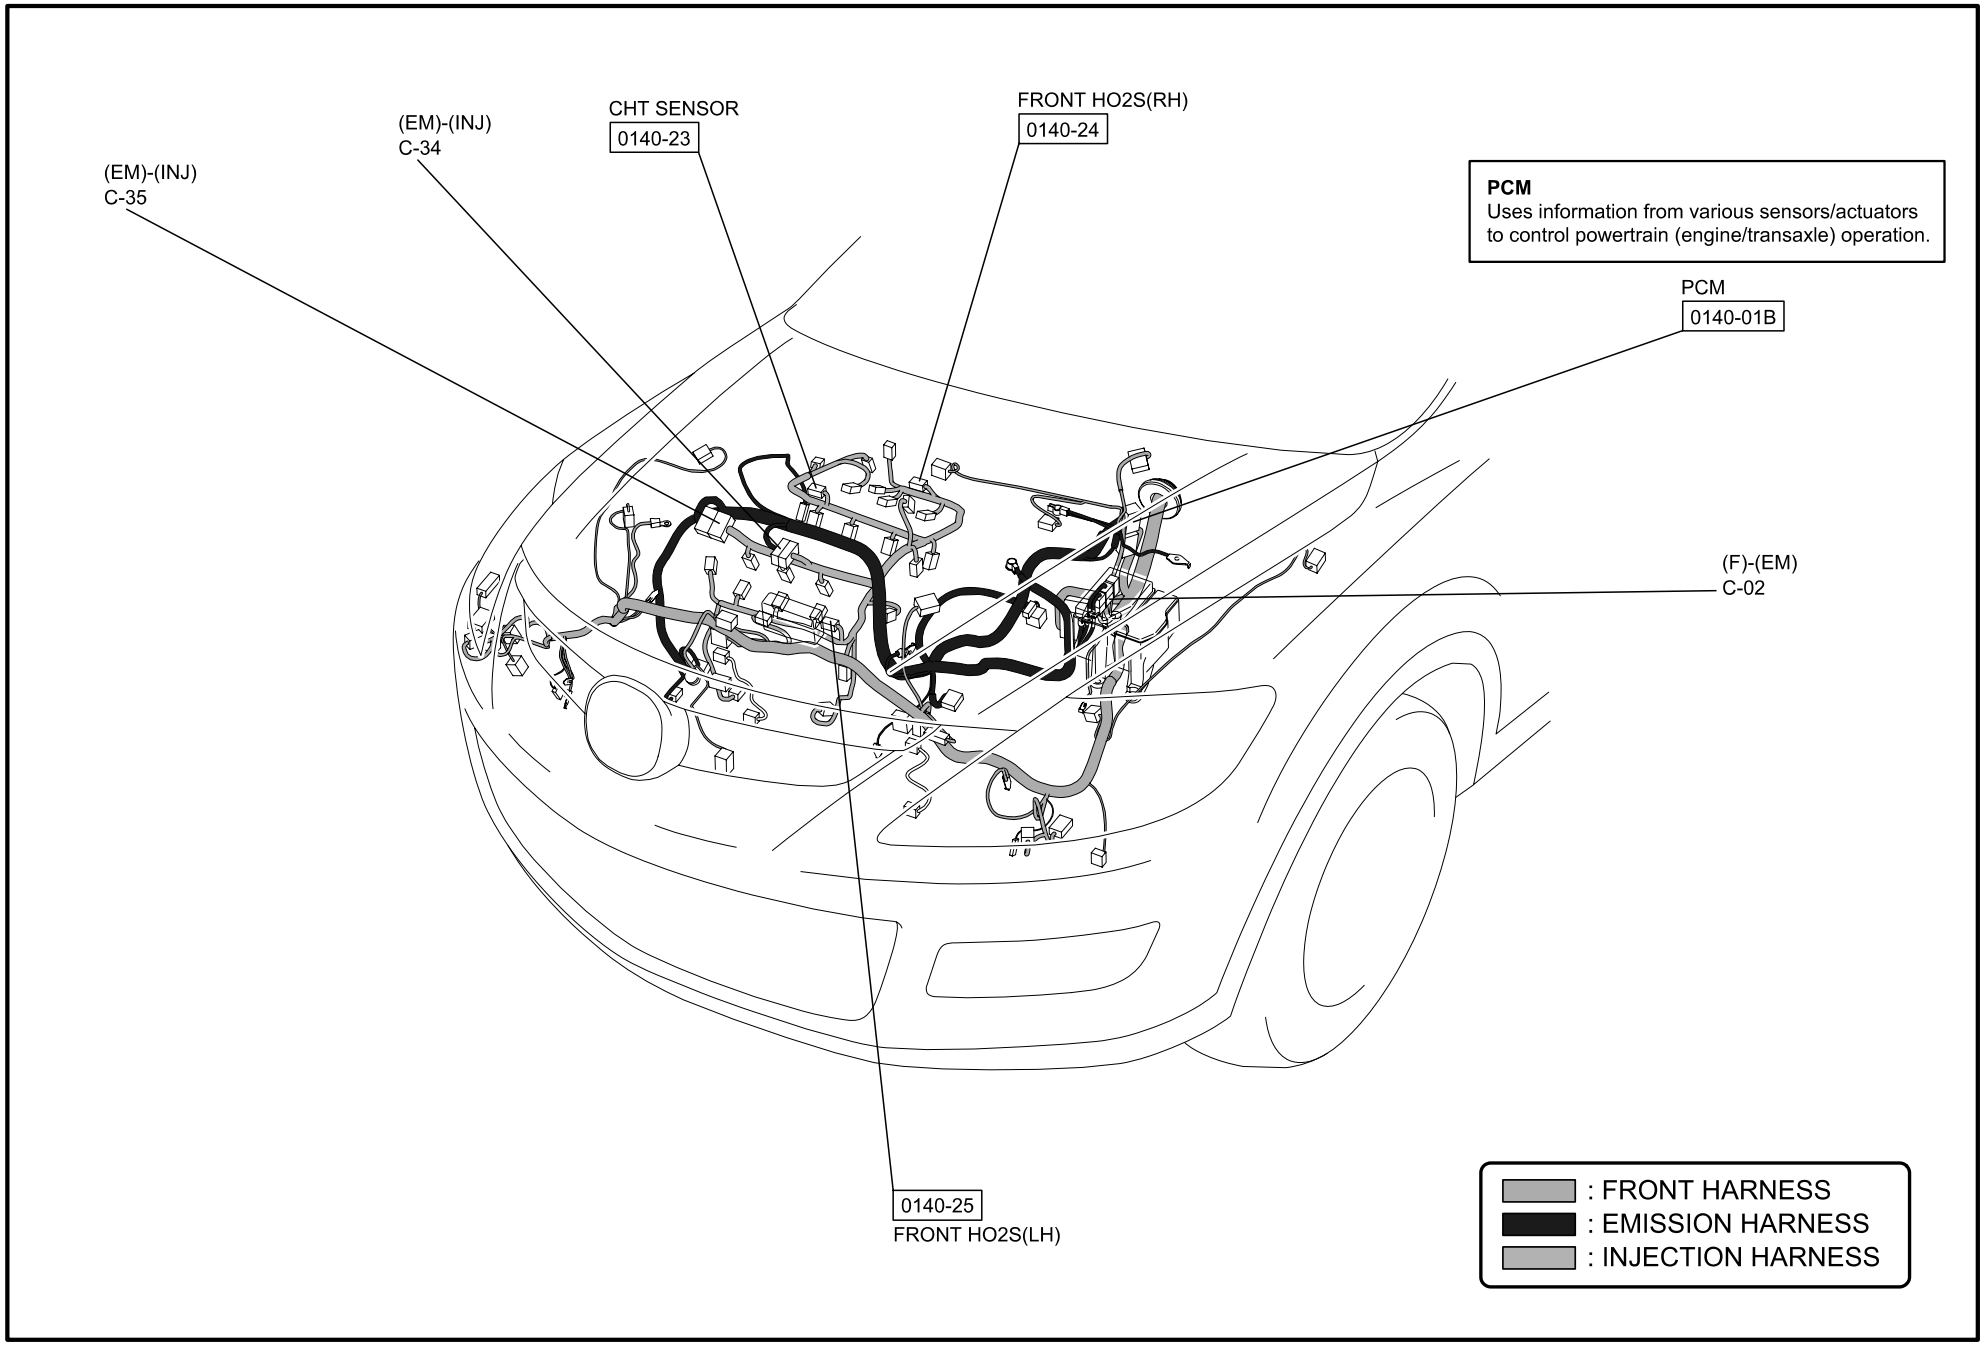

(EM)-(INJ)
C-35
(EM)-(INJ)
C-34
CHT SENSOR
0140-23
FRONT HO2S(RH)
0140-24
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
PCM
0140-01B
(F)-(EM)
C-02
0140-25
FRONT HO2S(LH)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

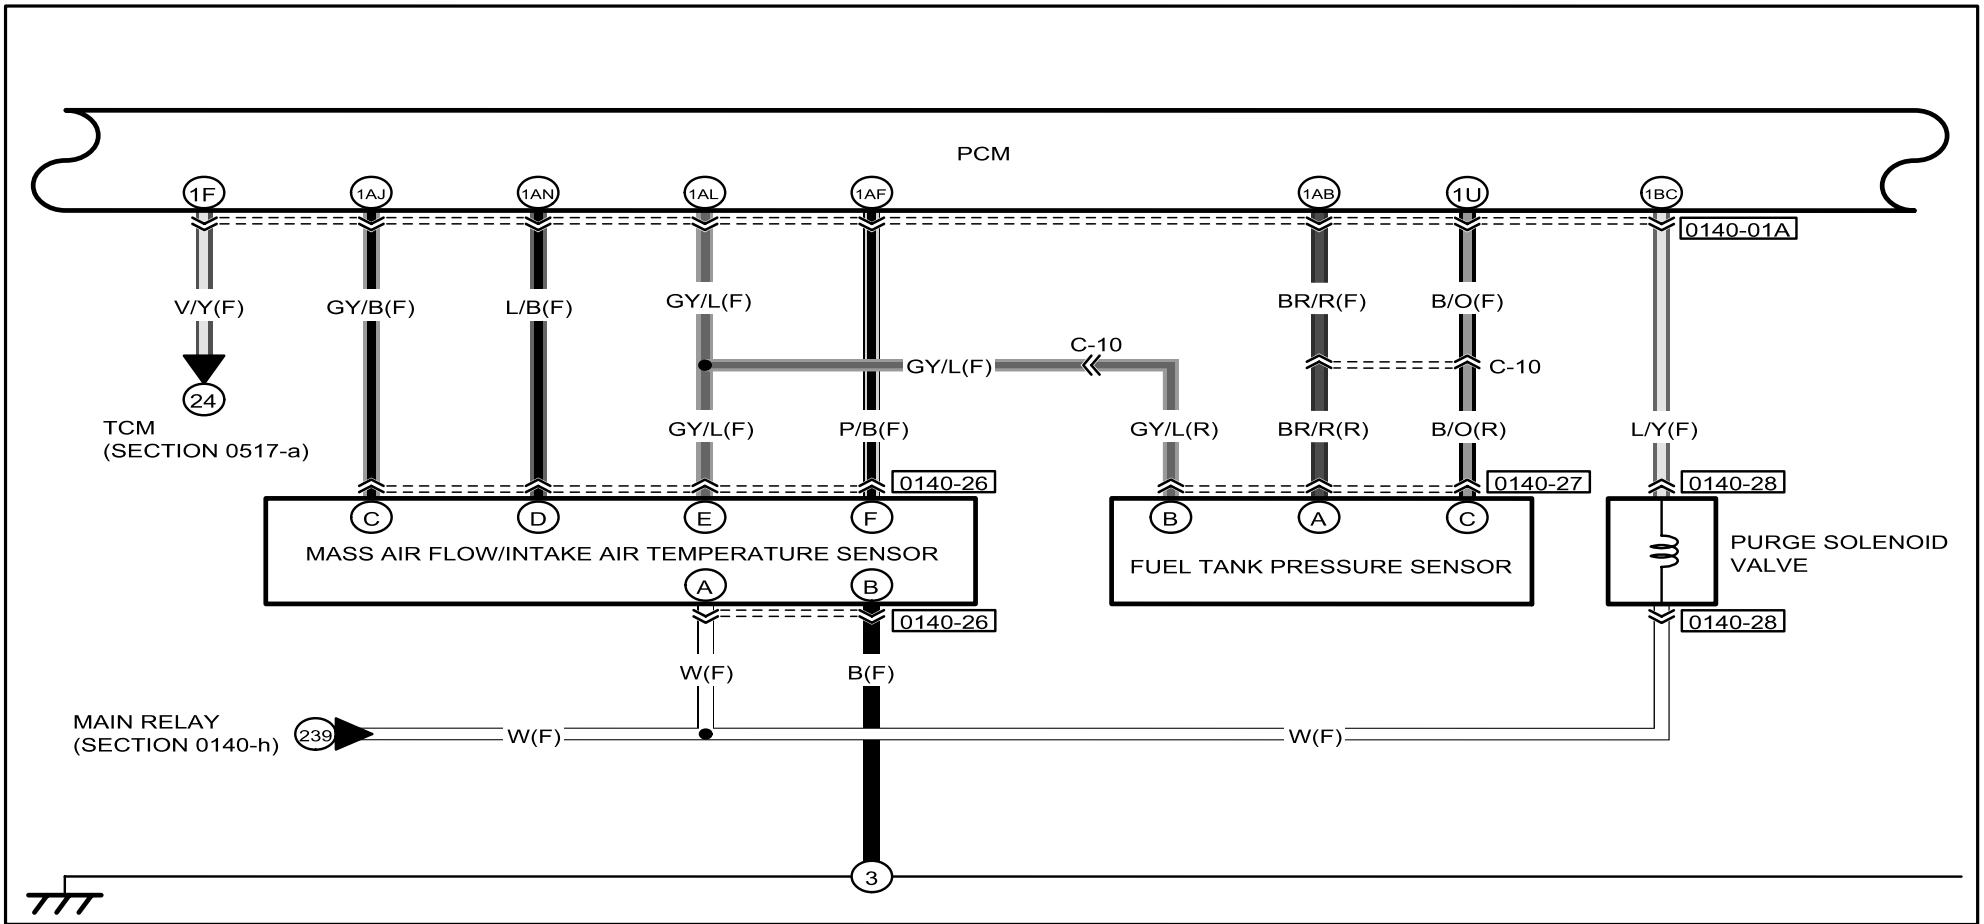


0140-01A
PCM

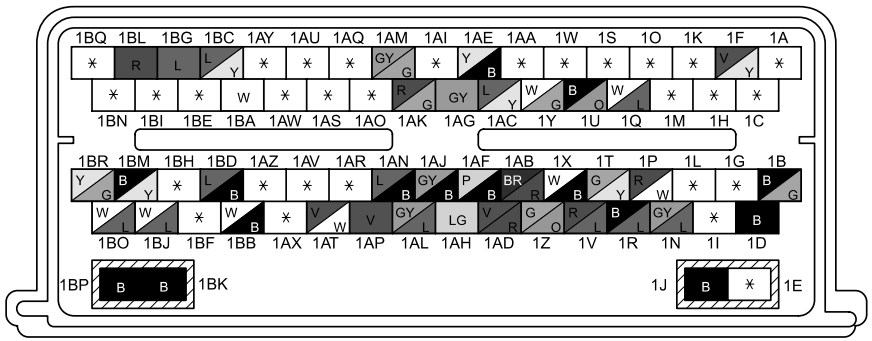

0140-26
MASS AIR FLOW/
INTAKE AIR TEMPERATURE SENSOR

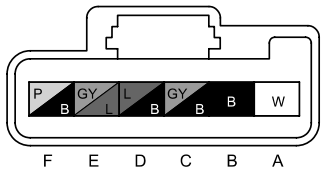


0140-27
FUEL TANK PRESSURE SENSOR

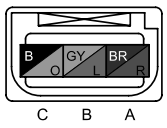


0140-28
PURGE SOLENOID VALVE




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

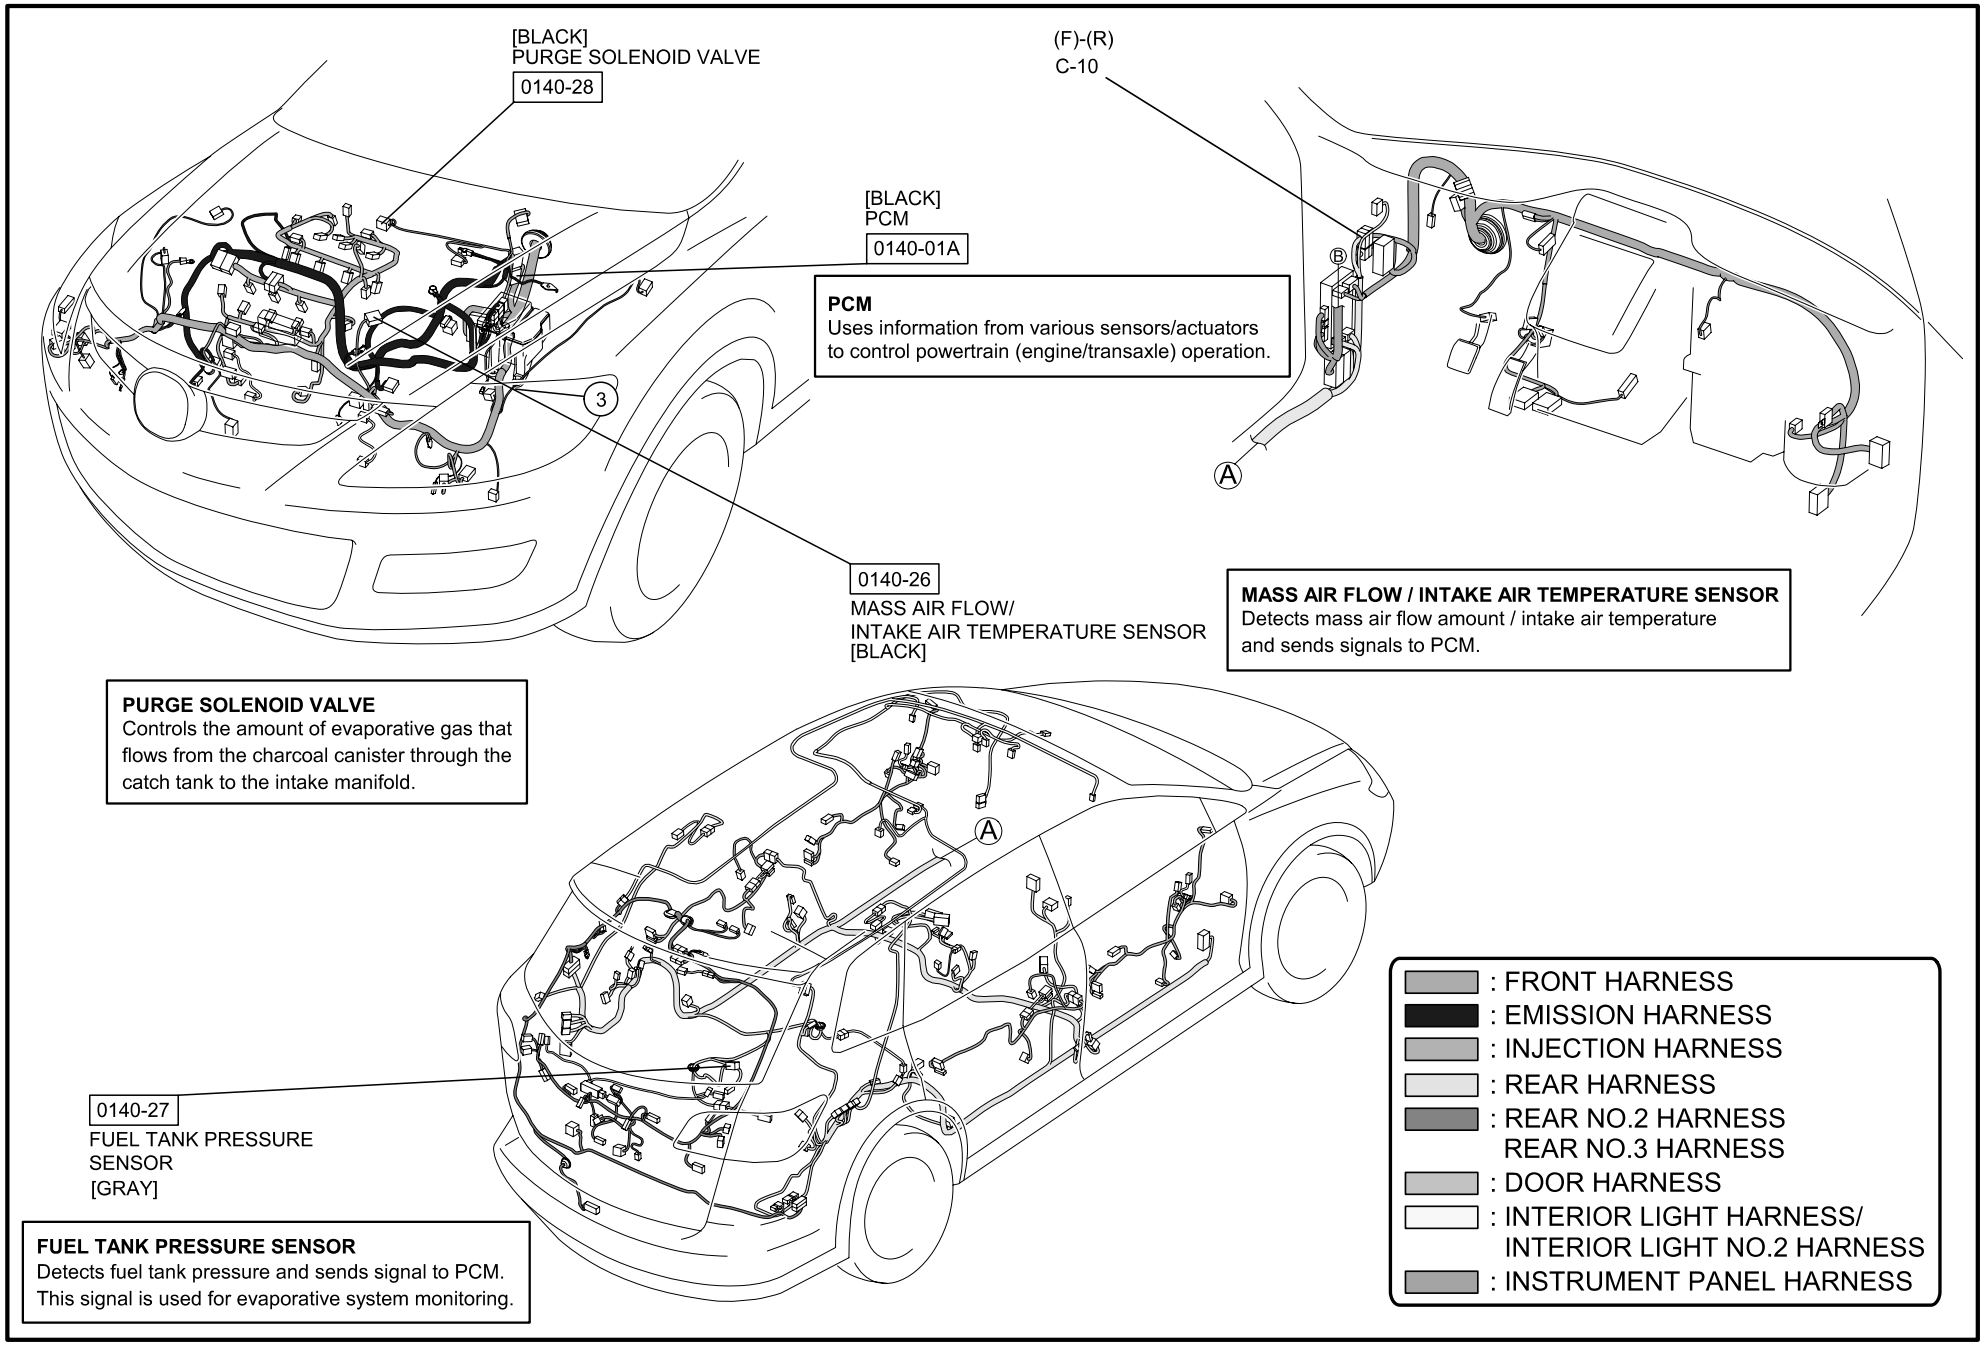

[BLACK]
PURGE SOLENOID VALVE
0140-28
(F)-(R)
C-10
[BLACK]
PCM
0140-01A
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
3
B
A
0140-26
MASS AIR FLOW/
INTAKE AIR TEMPERATURE SENSOR
[BLACK]
MASS AIR FLOW / INTAKE AIR TEMPERATURE SENSOR
Detects mass air flow amount / intake air temperature and sends signals to PCM.
PURGE SOLENOID VALVE
Controls the amount of evaporative gas that flows from the charcoal canister through the catch tank to the intake manifold.
A
0140-27
FUEL TANK PRESSURE
SENSOR
[GRAY]
FUEL TANK PRESSURE SENSOR
Detects fuel tank pressure and sends signal to PCM.
This signal is used for evaporative system monitoring.
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

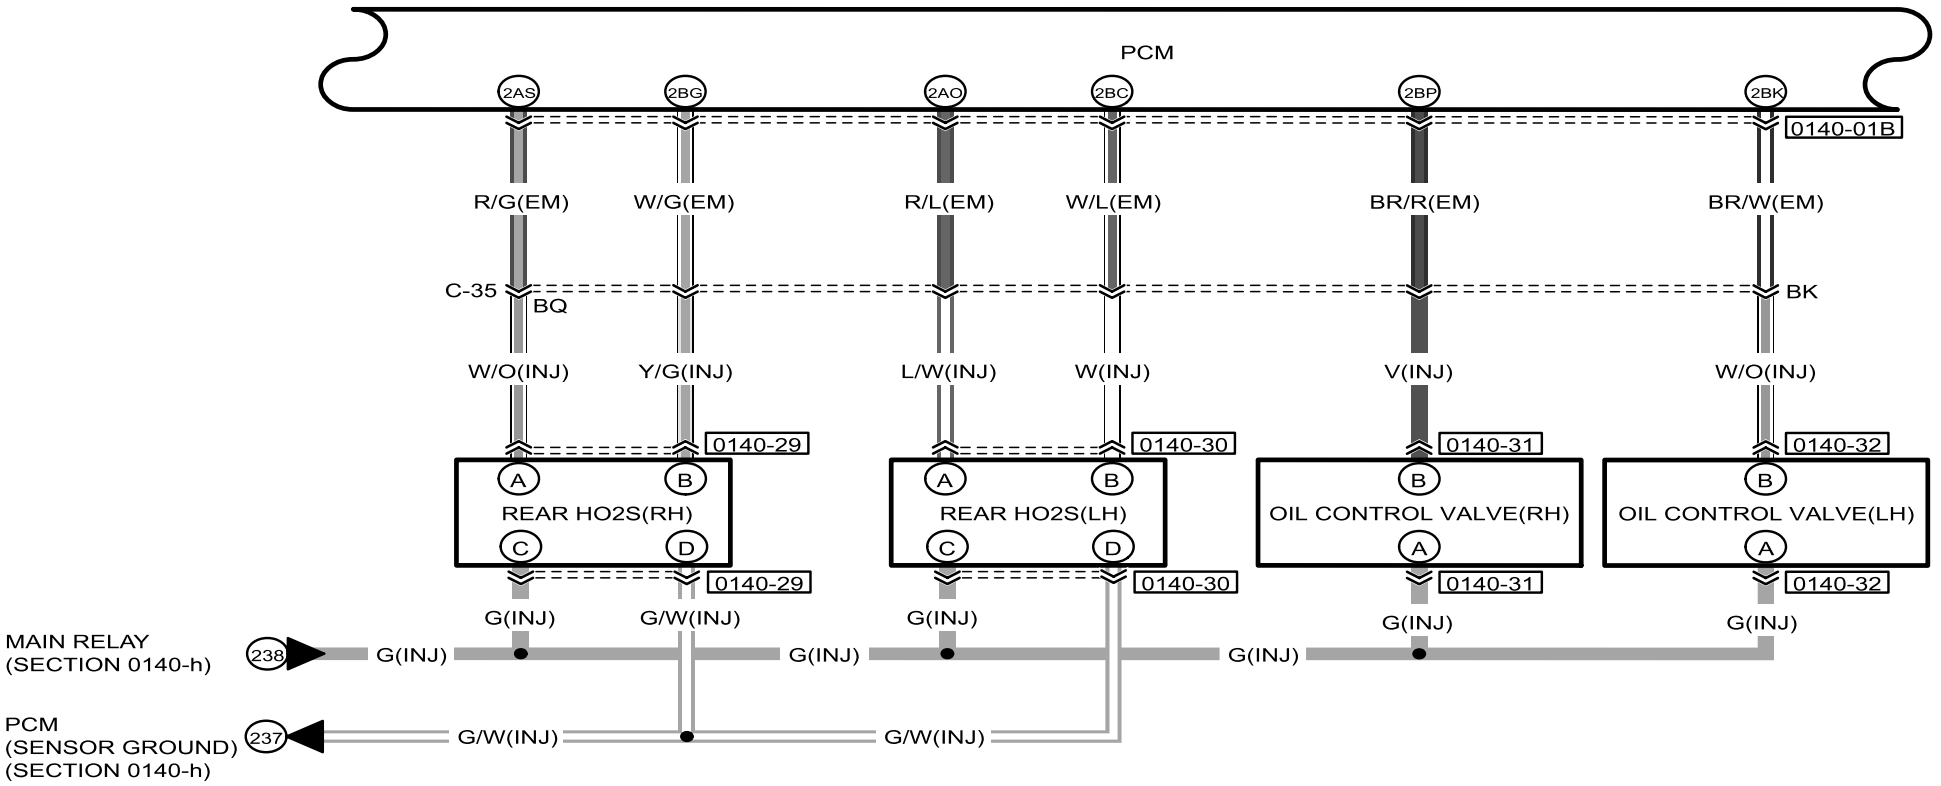


0140-01B
PCM

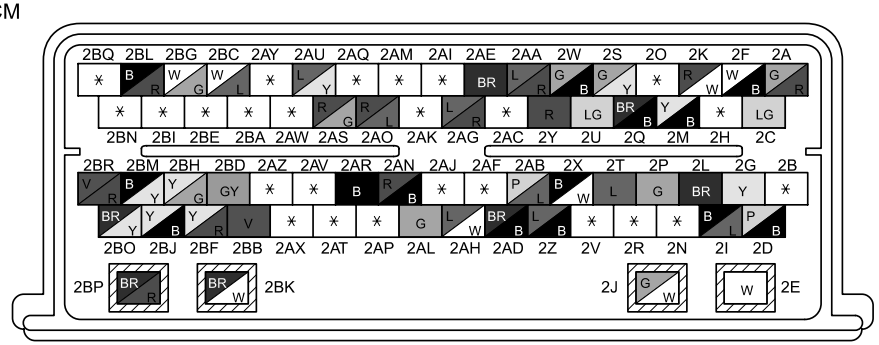


0140-29
REAR HO2S(RH)

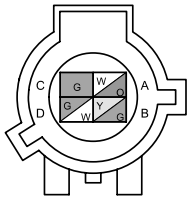


0140-30
REAR HO2S(LH)

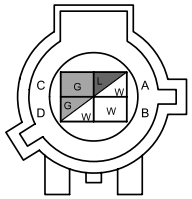


0140-31
OIL CONTROL VALVE(RH)

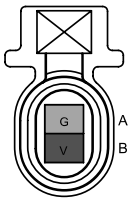


0140-32
OIL CONTROL VALVE(LH)

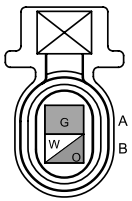


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

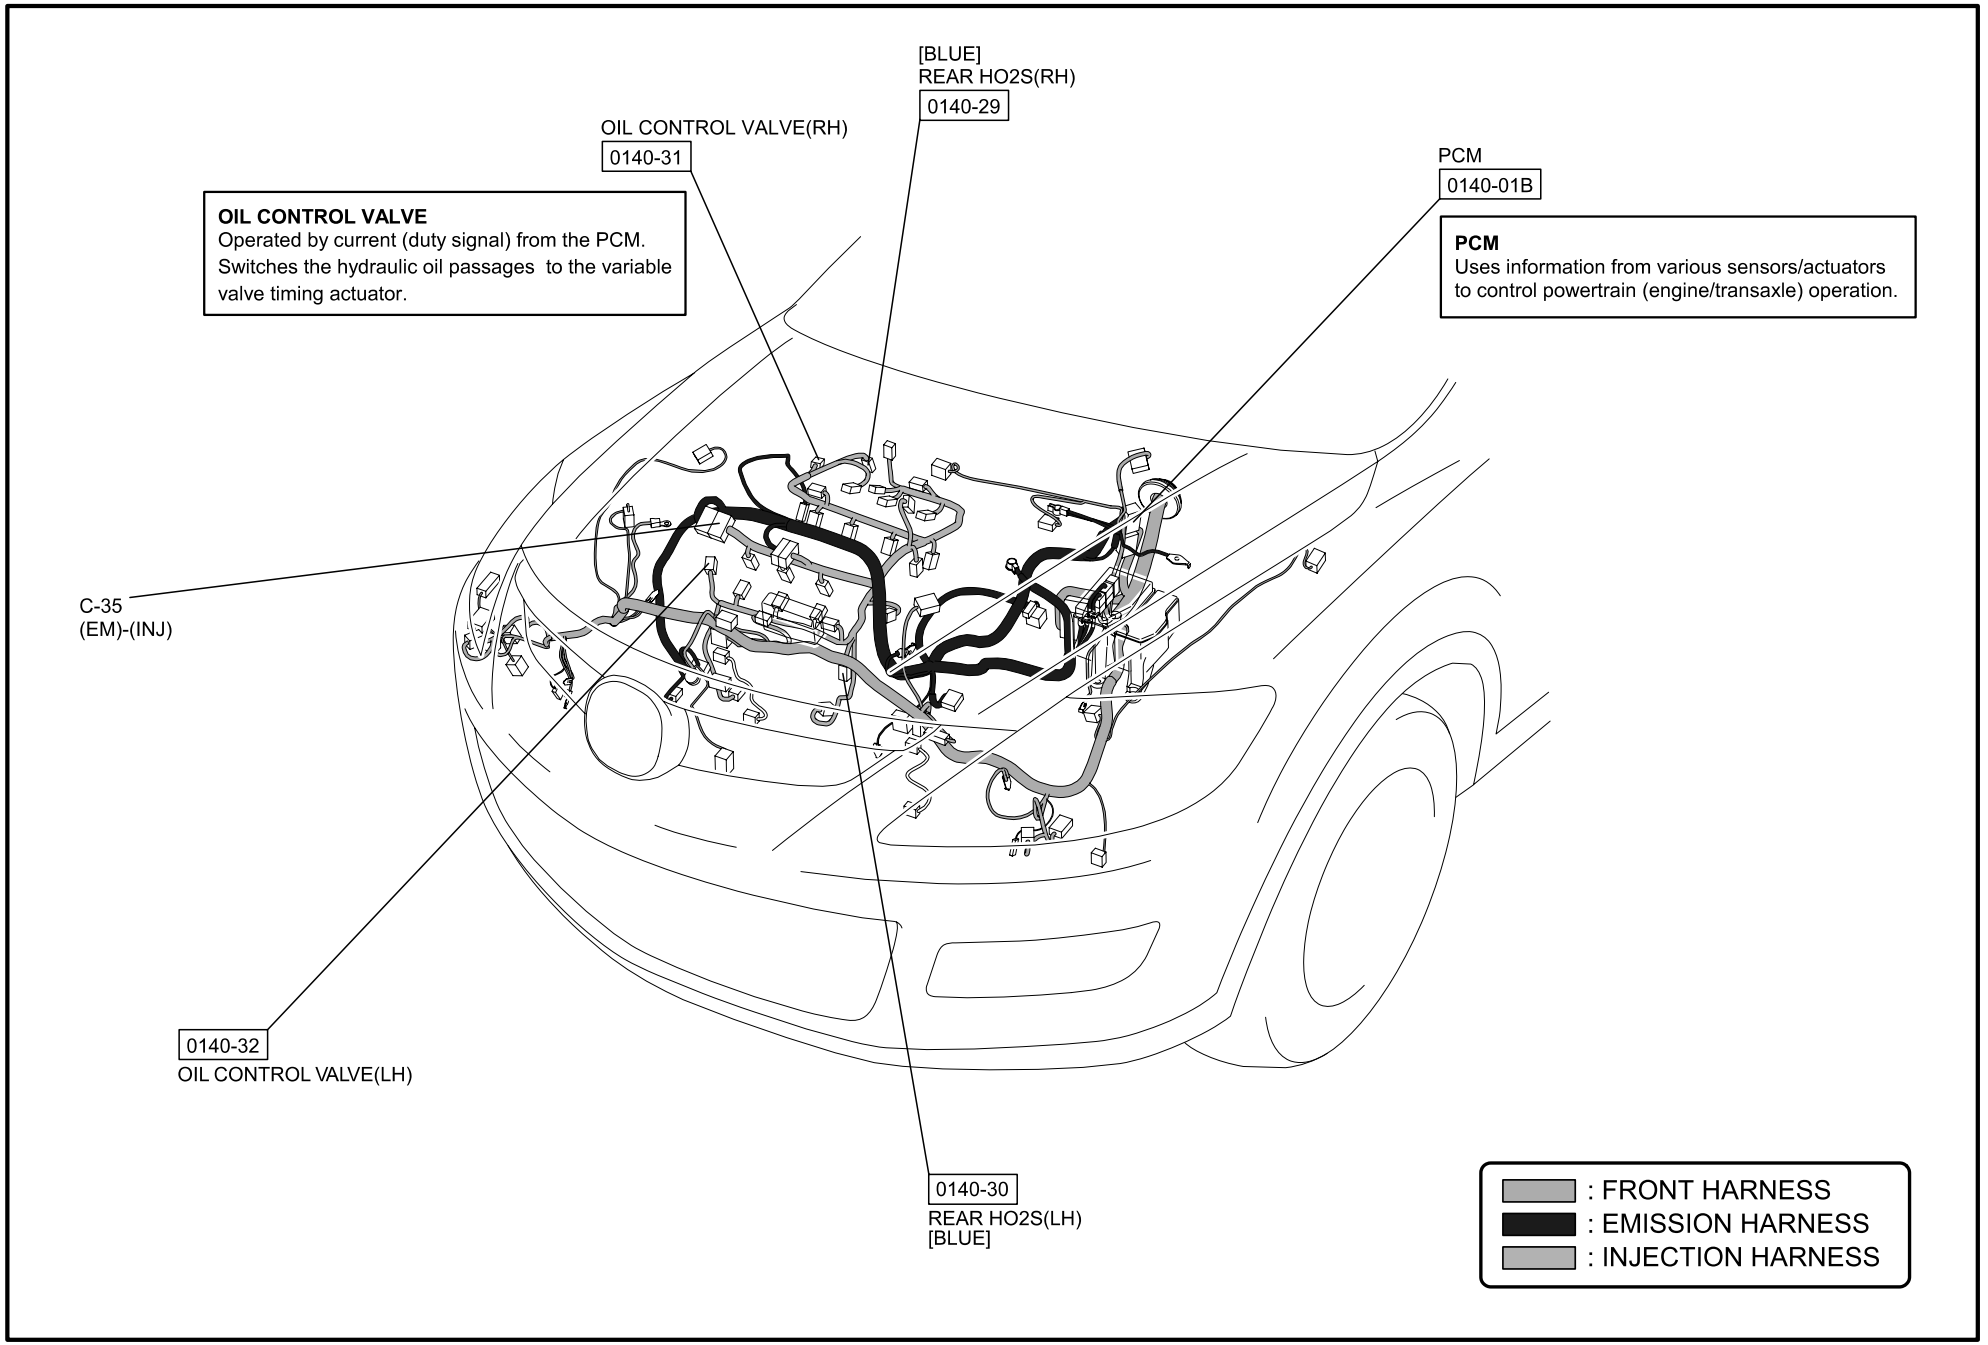

[BLUE]
REAR HO2S(RH)
0140-29
OIL CONTROL VALVE(RH)
0140-31
PCM
0140-01B
OIL CONTROL VALVE
Operated by current (duty signal) from the PCM.
Switches the hydraulic oil passages to the variable valve timing actuator.
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
C-35
(EM)-(INJ)
0140-32
OIL CONTROL VALVE(LH)
0140-30
REAR HO2S(LH)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

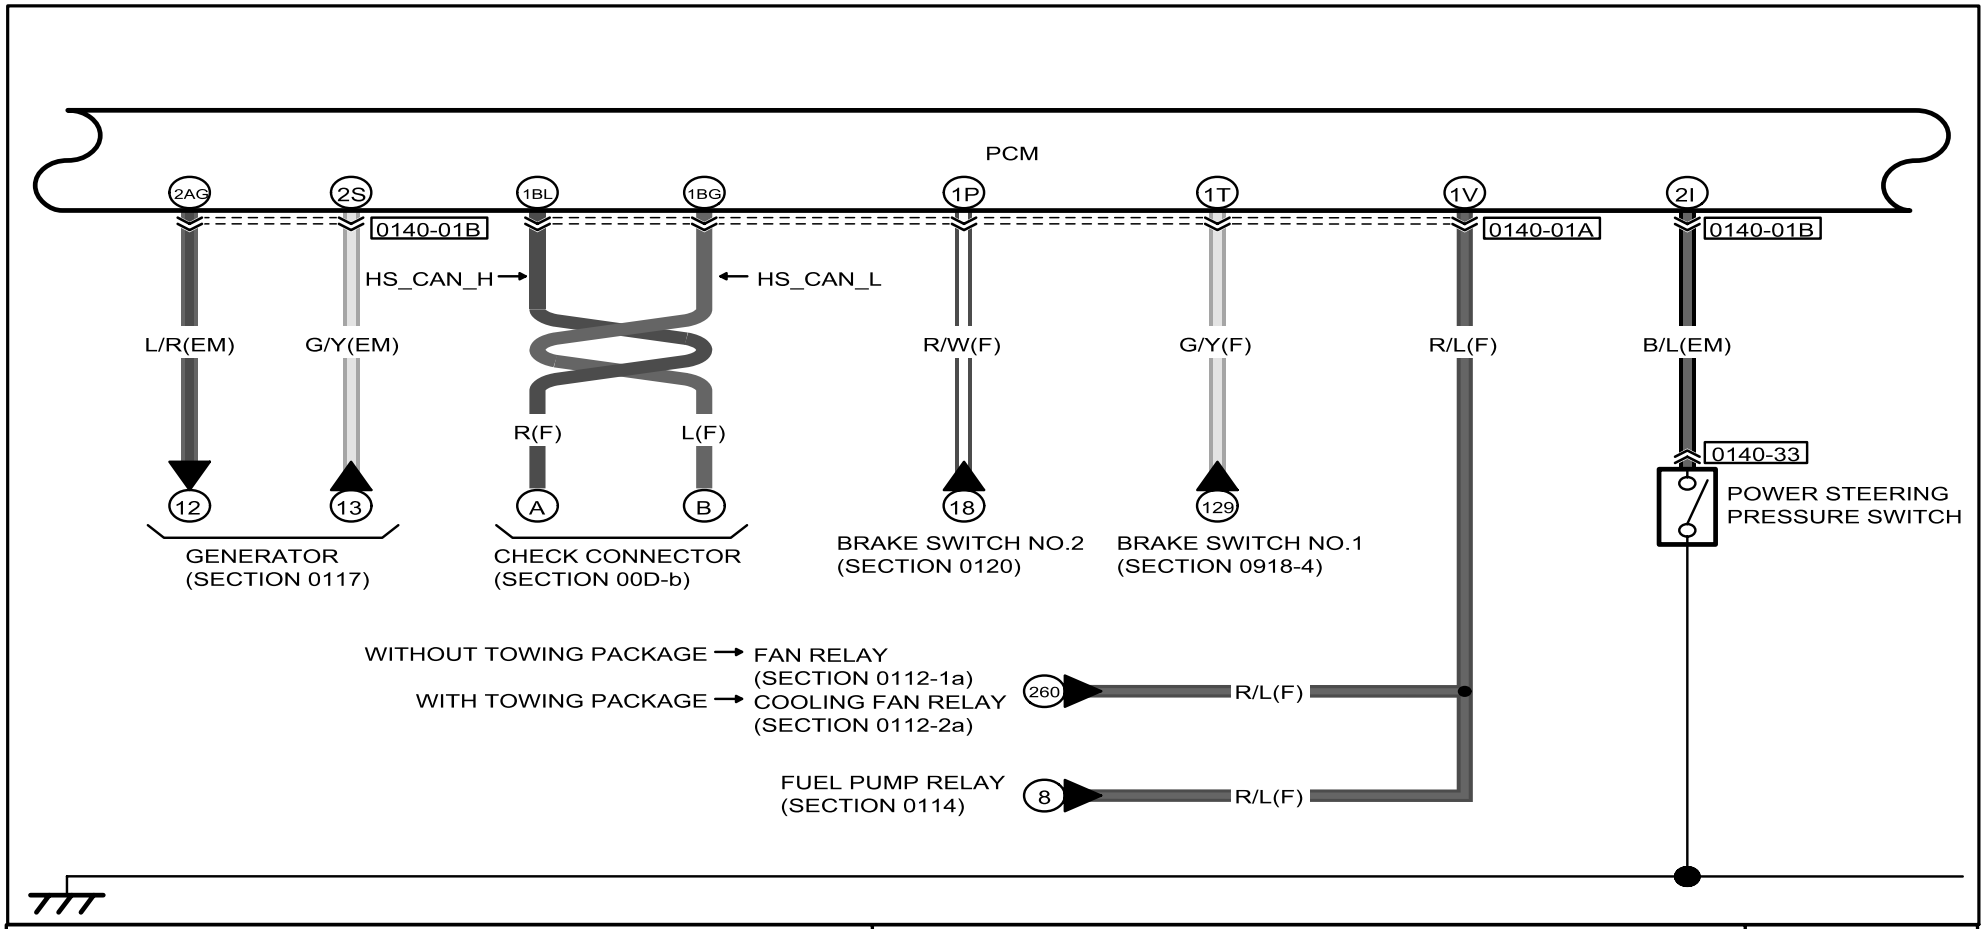

0140-01A
PCM

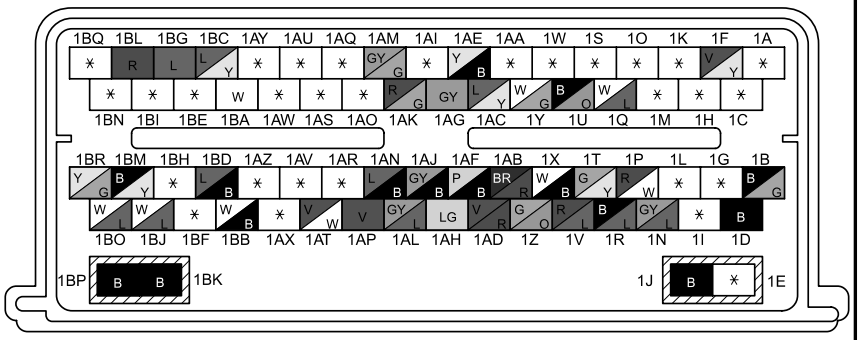


0140-01B
PCM

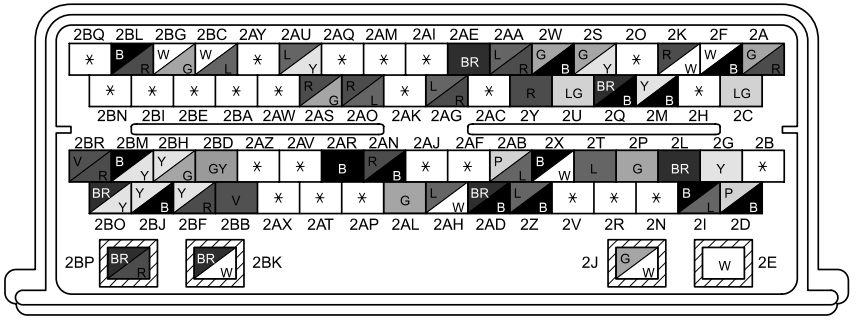


0140-33
POWER STEERING PRESSURE SWITCH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

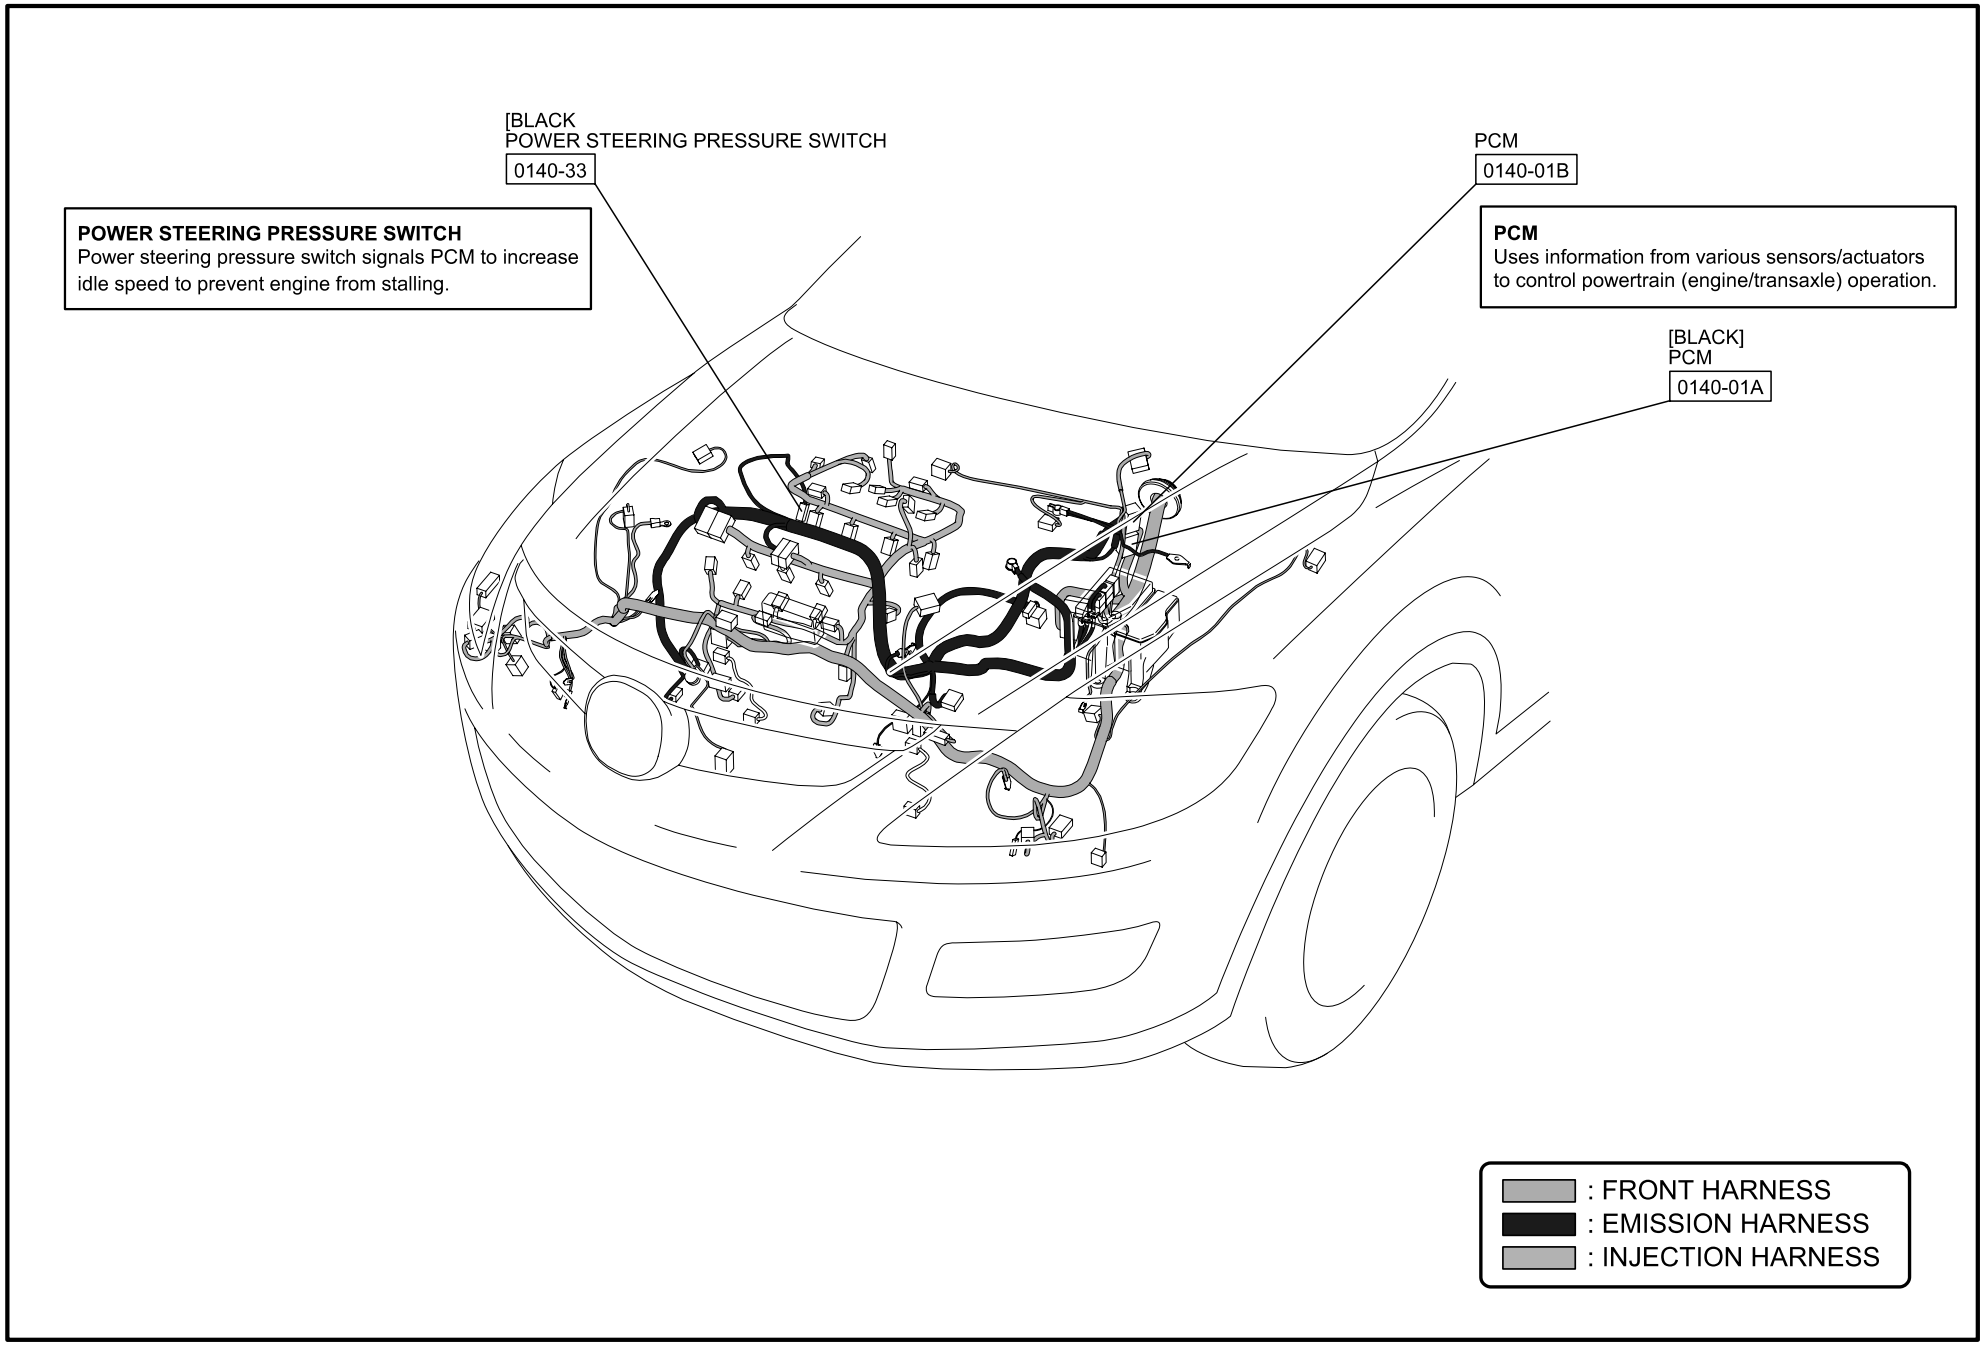

[BLACK
POWER STEERING PRESSURE SWITCH
0140-33
PCM
0140-01B
POWER STEERING PRESSURE SWITCH
Power steering pressure switch signals PCM to increase idle speed to prevent engine from stalling.
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
[BLACK]
PCM
0140-01A
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

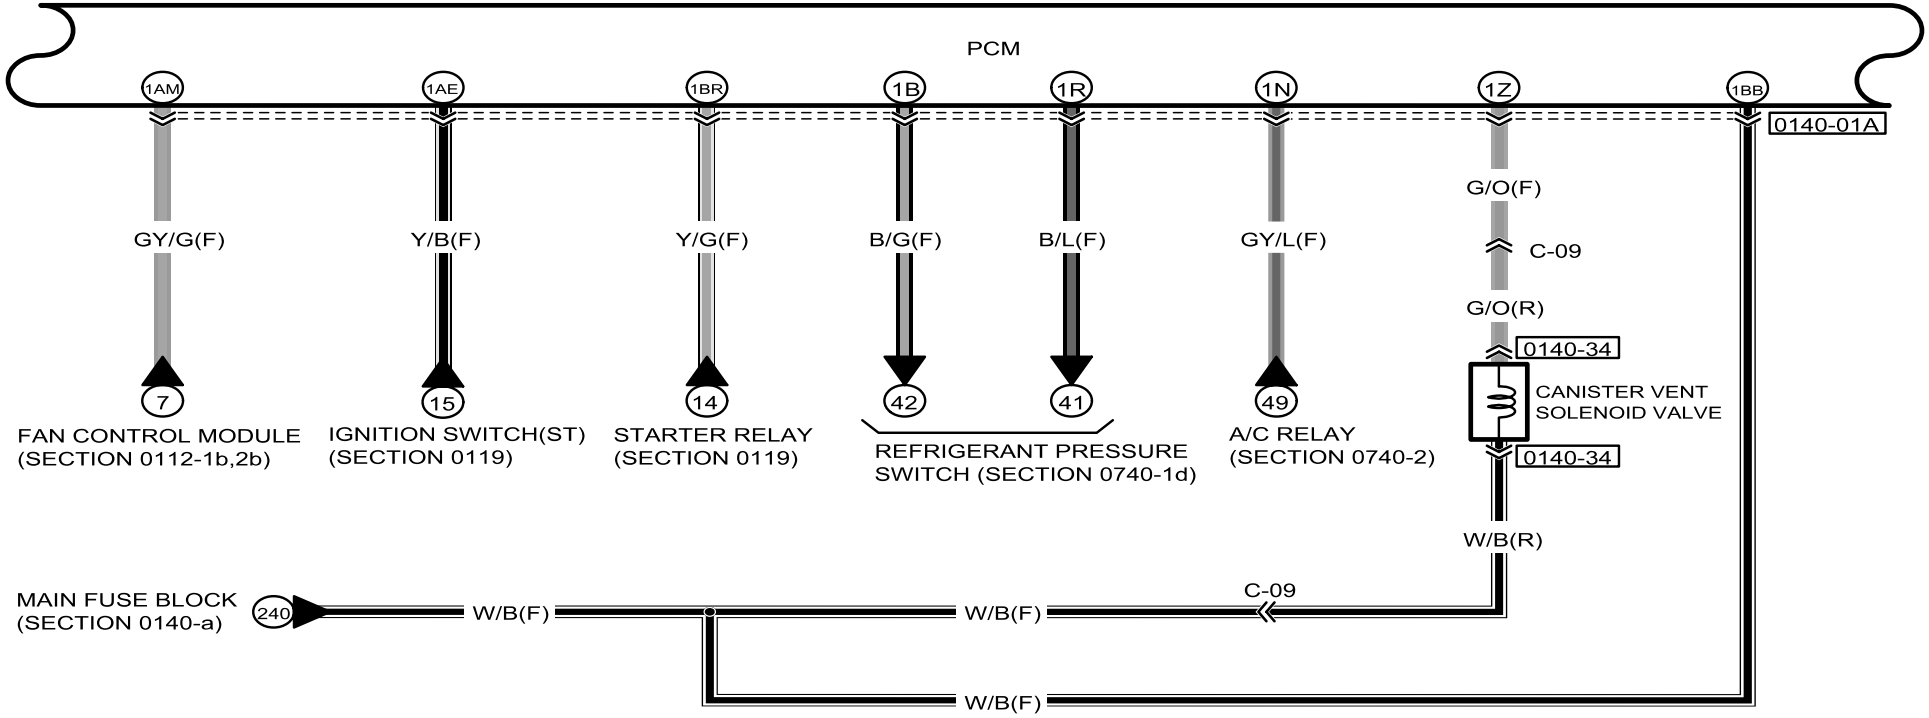


0140-01A
PCM

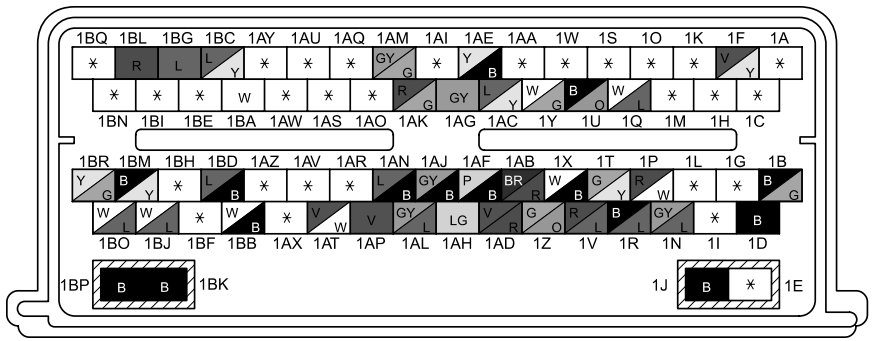


0140-34
CANISTER VENT SOLENOID VALVE




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

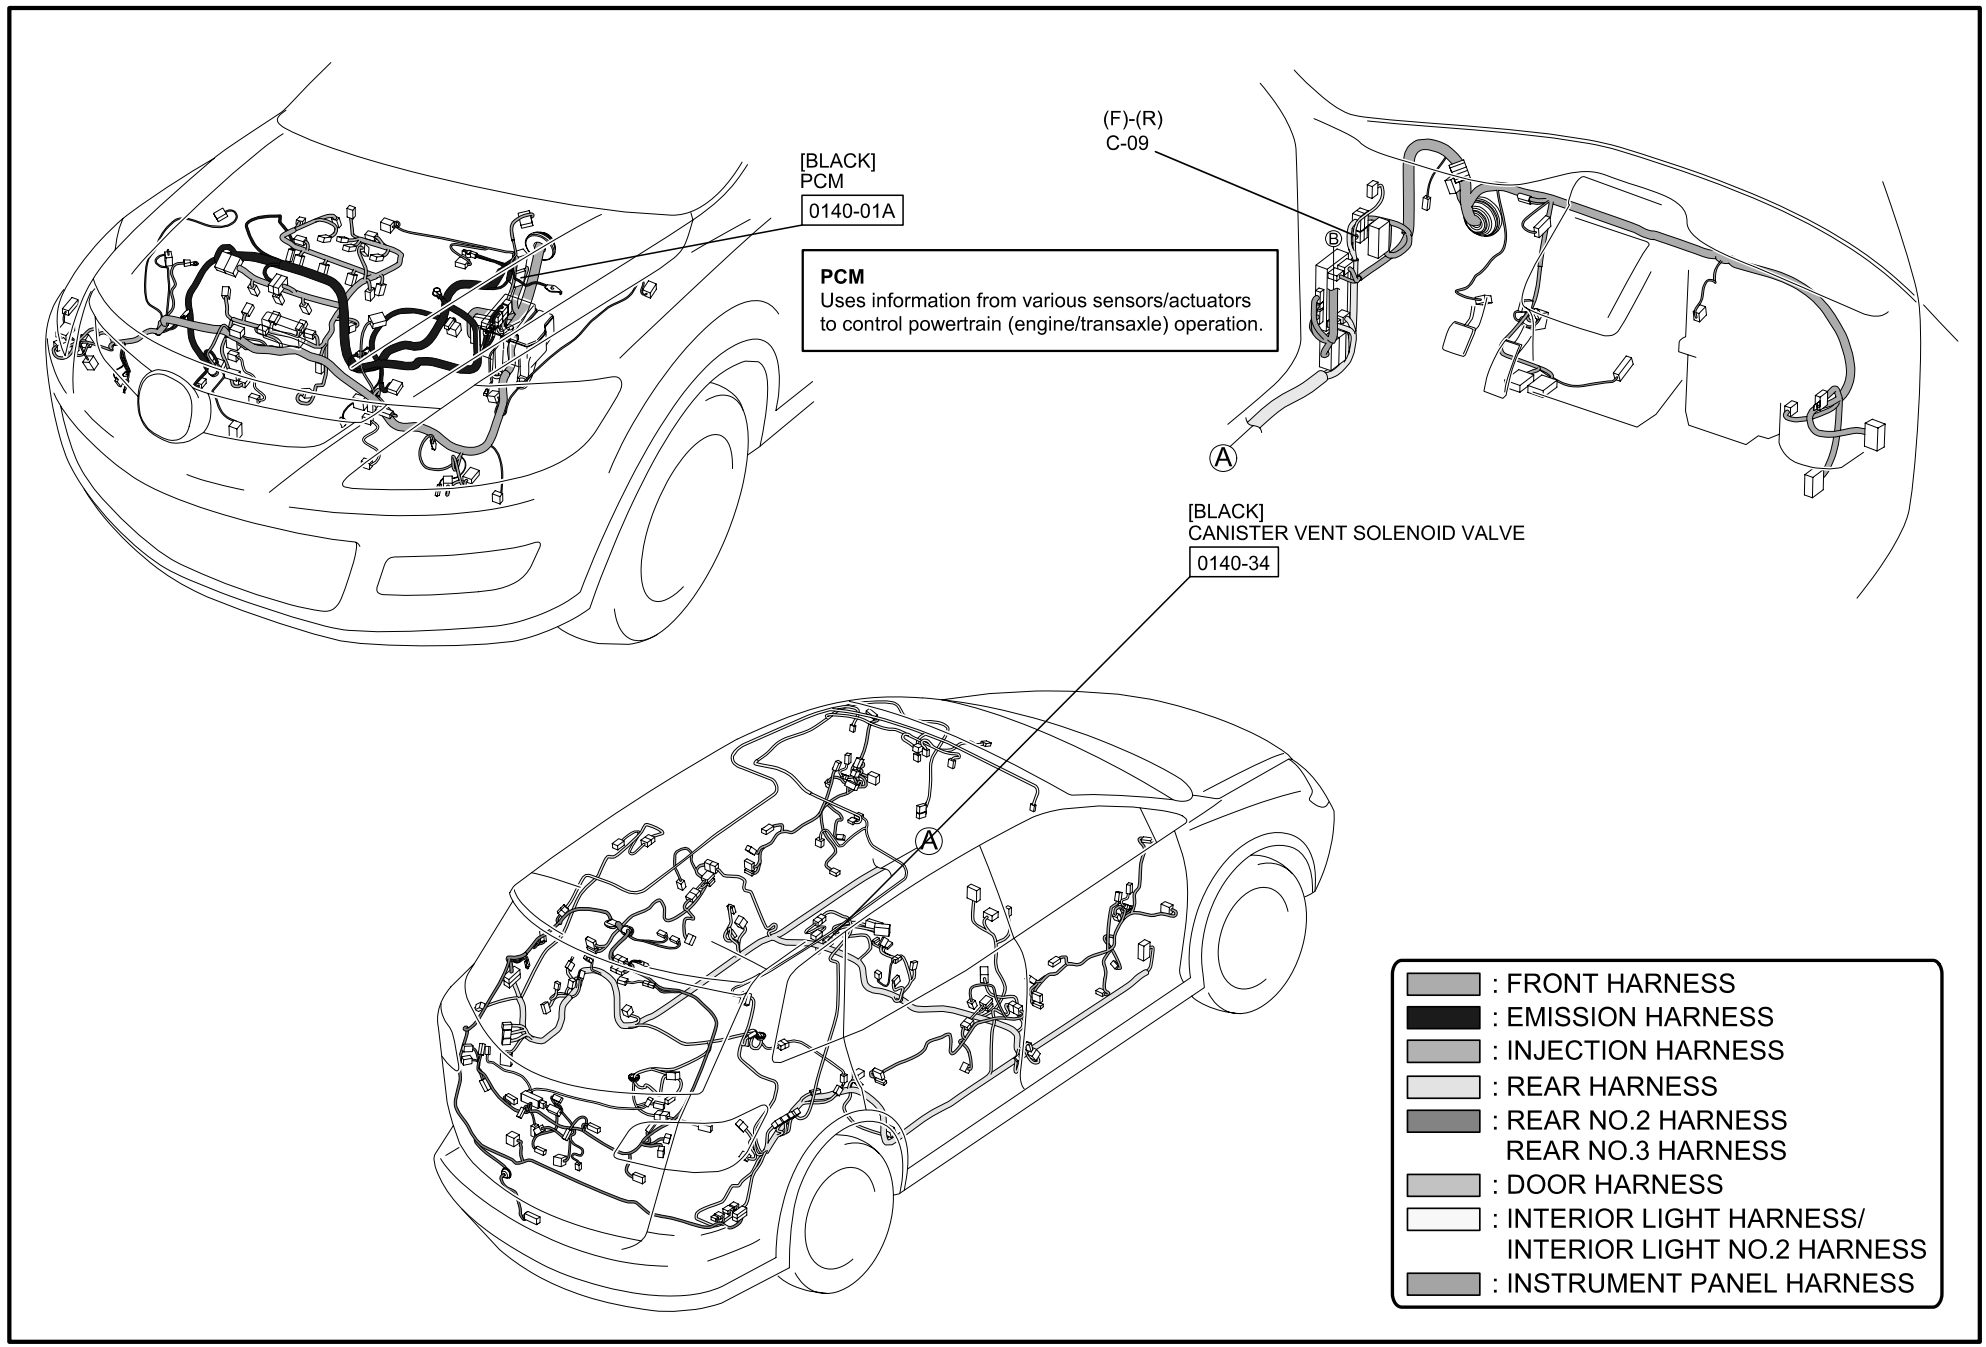

[BLACK]
PCM
0140-01A
PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.
(F)-(R)
C-09
B
A
[BLACK]
CANISTER VENT SOLENOID VALVE
0140-34
A
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

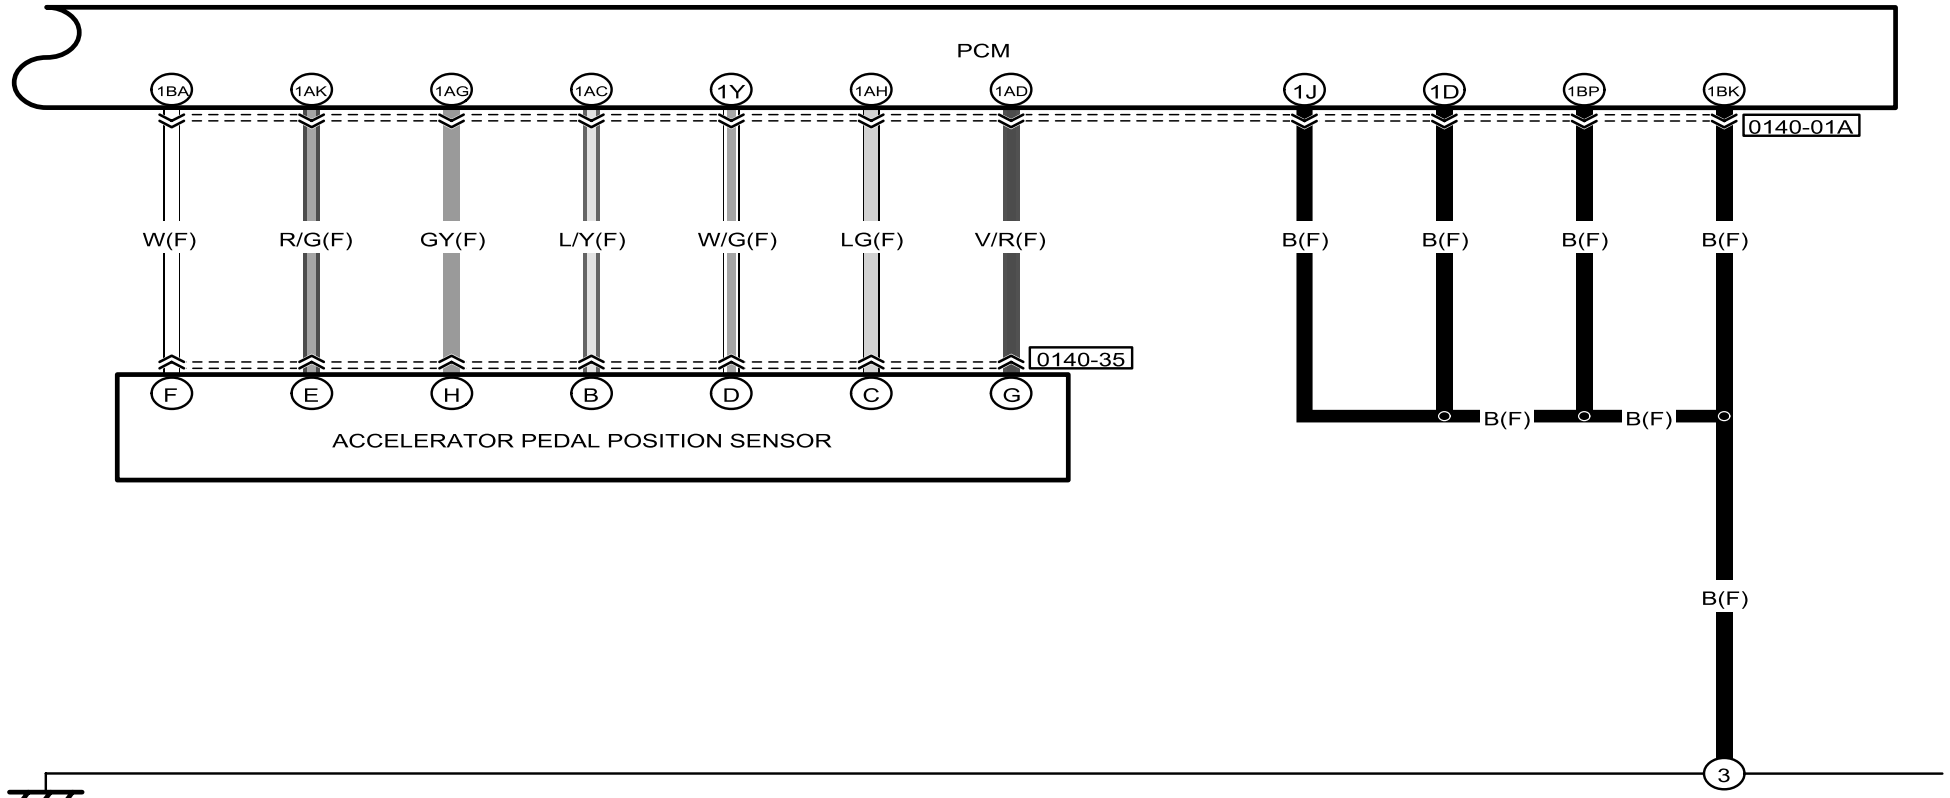


0140-01A
PCM

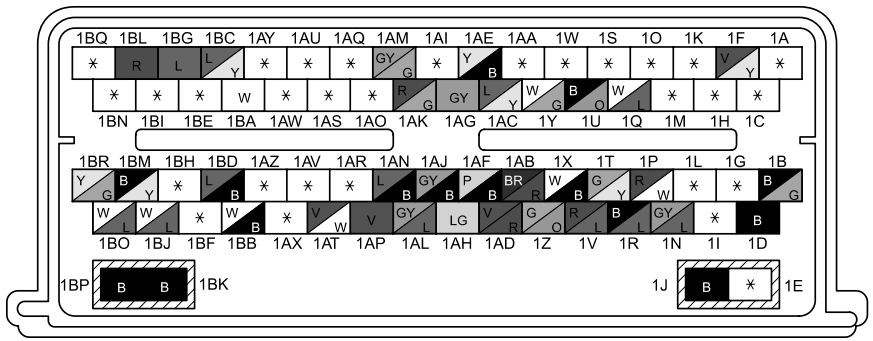

0140-35
ACCELERATOR PEDAL POSITION SENSOR

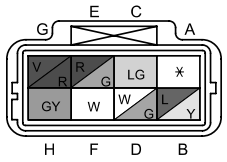


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

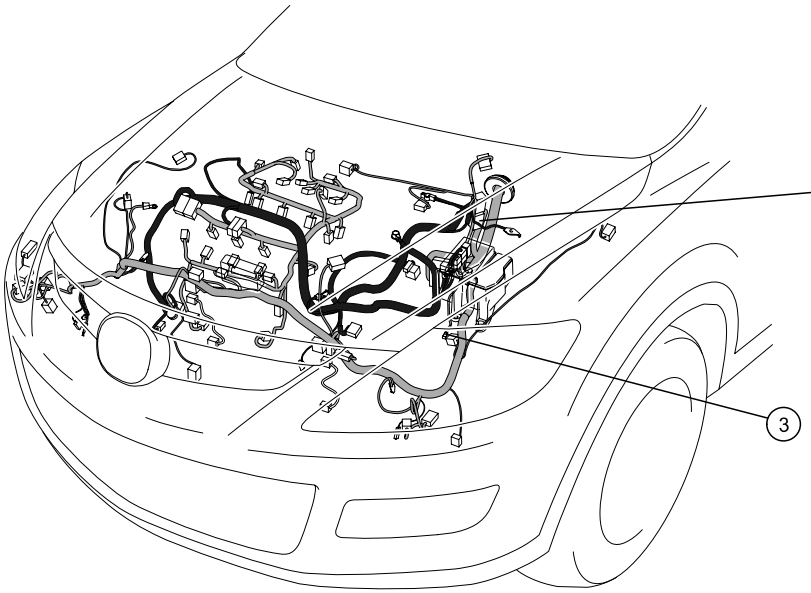


[BLACK]
PCM
0140-01A

PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.


[DARK GRAY]
ACCELERATOR PEDAL POSITION SENSOR
0140-35

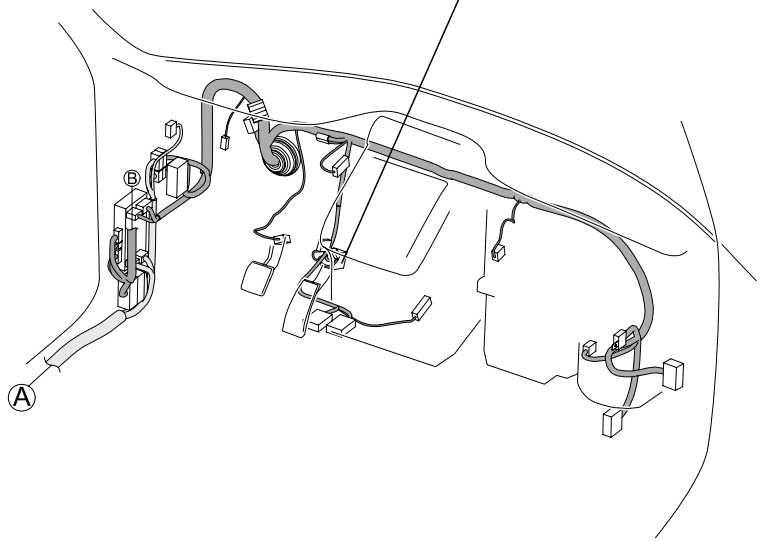


: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

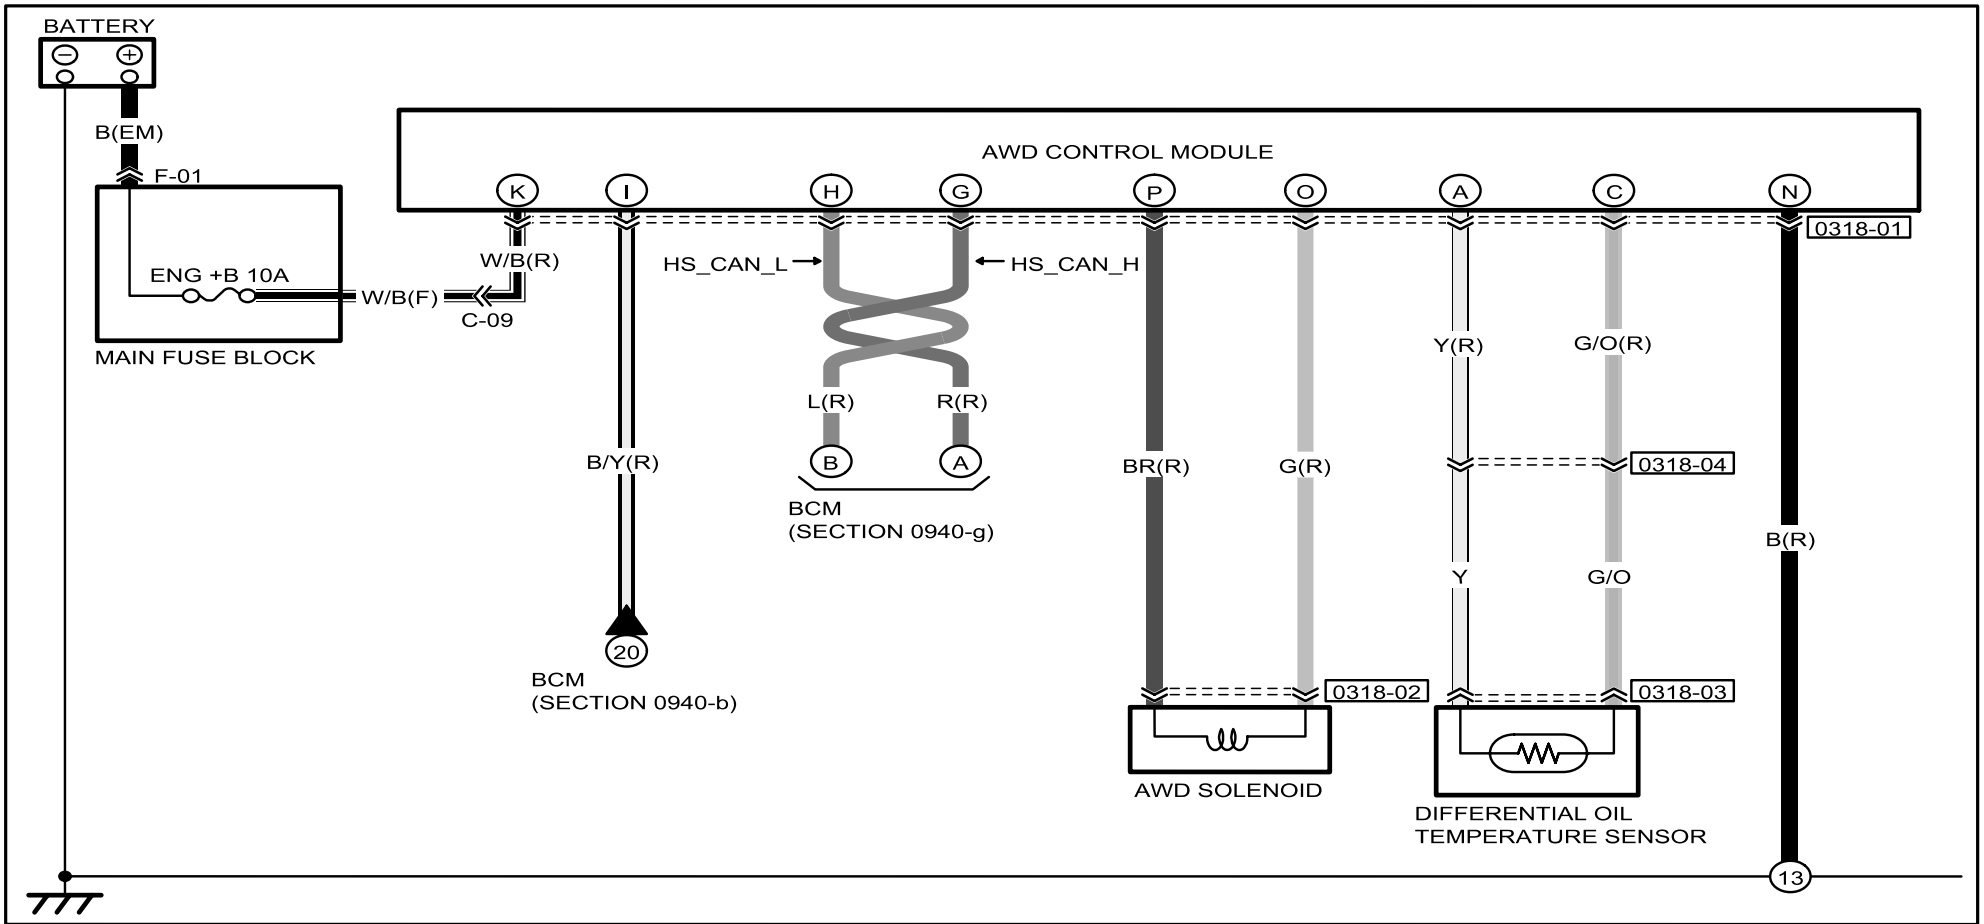


0318-01
AWD CONTROL MODULE

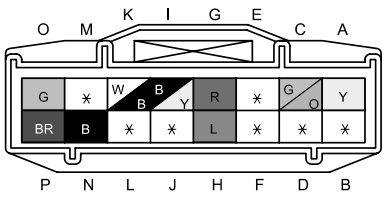


0318-02
AWD SOLENOID




0318-03
DIFFERENTIAL OIL TEMPERATURE SENSOR




0318-04
REAR HARNESS-SHORT CORD

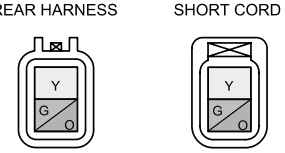


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

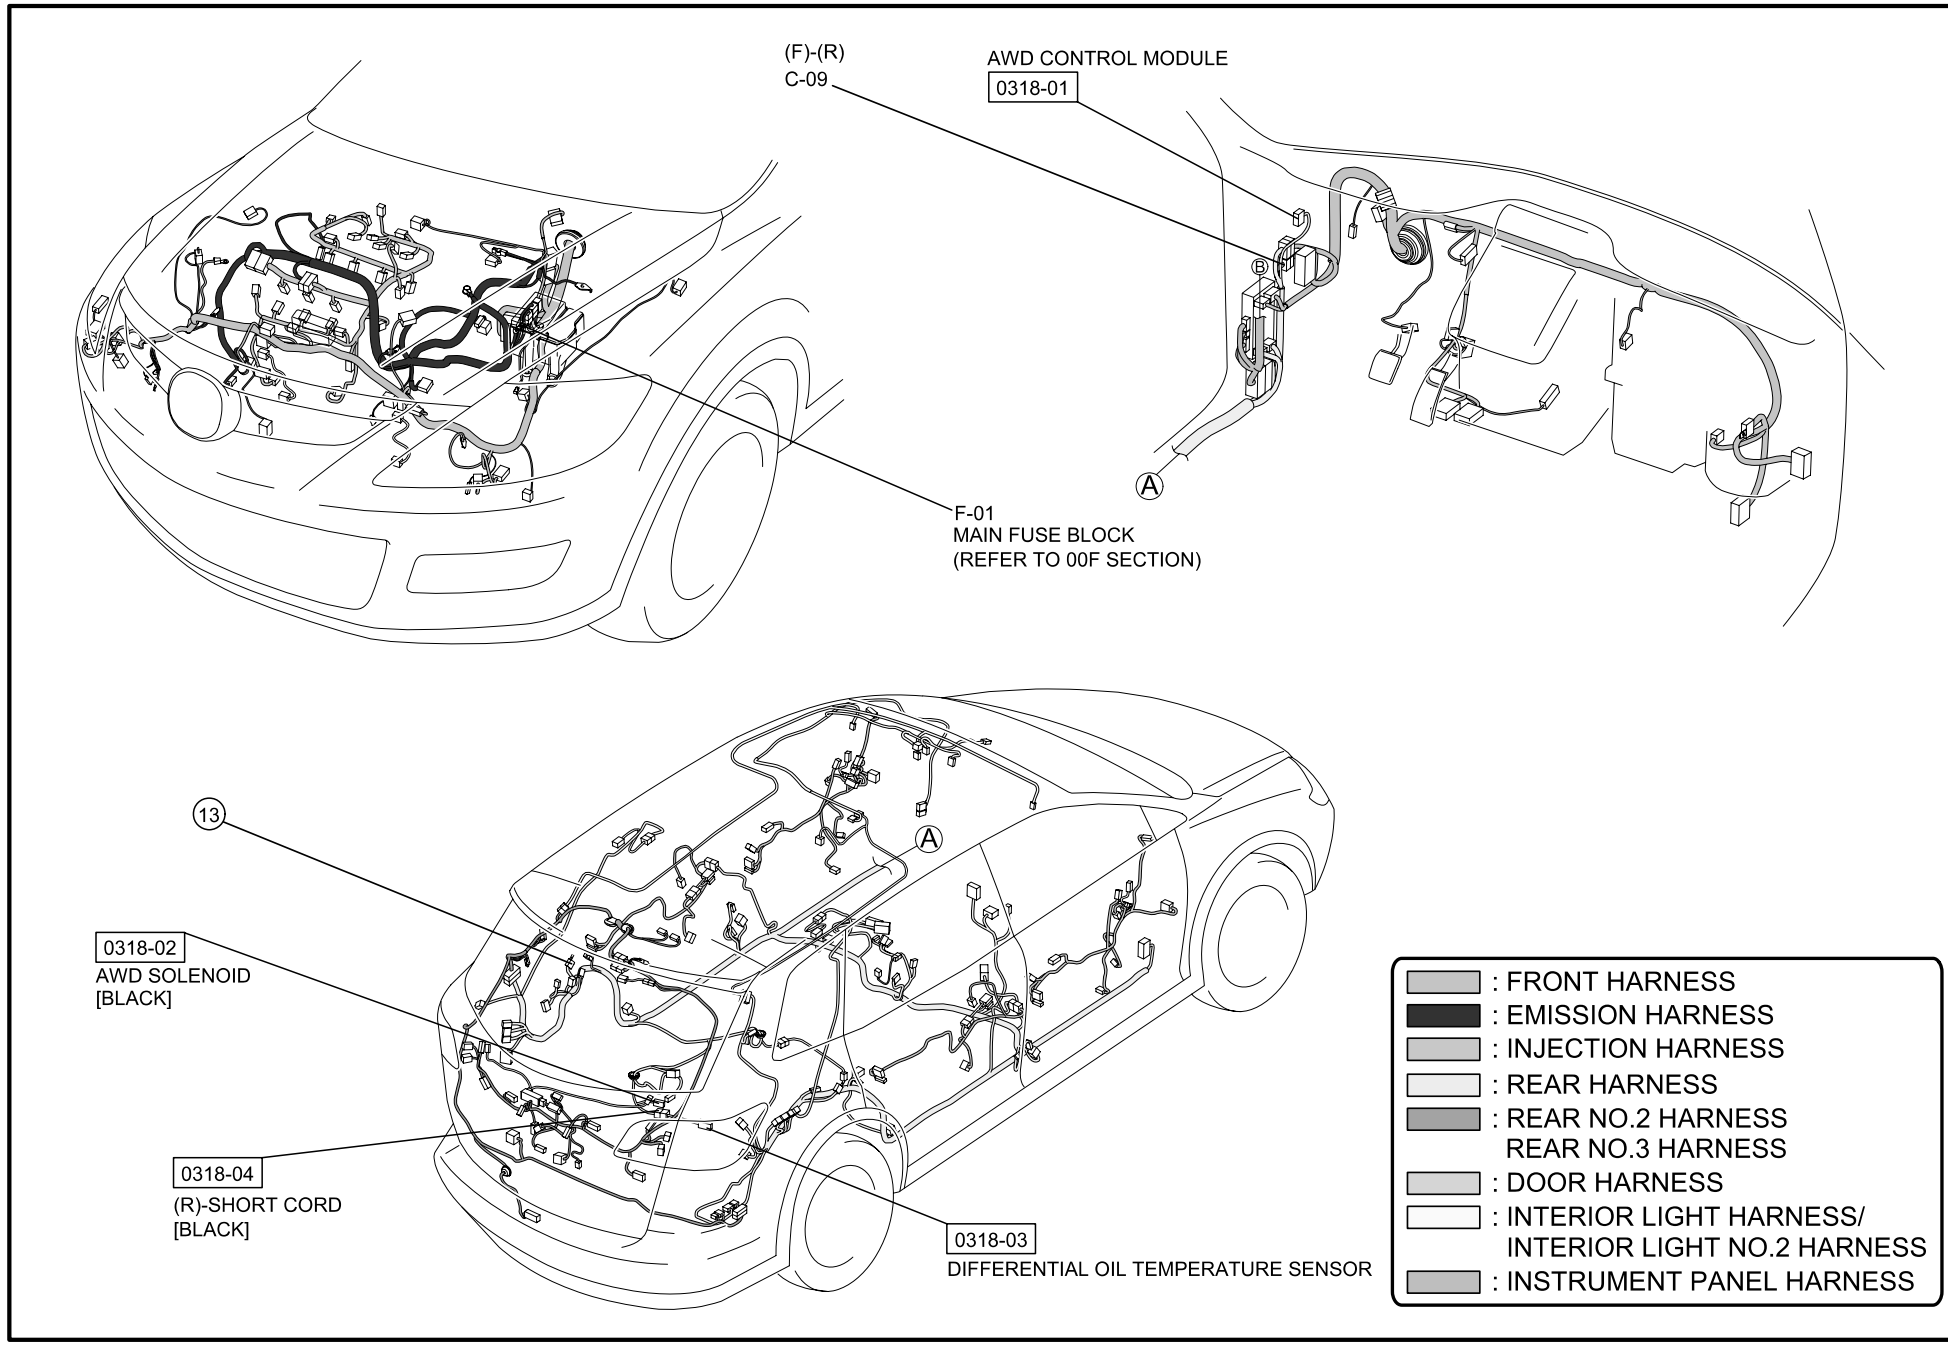

(F)-(R)
C-09
AWD CONTROL MODULE
0318-01
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
13
0318-02
AWD SOLENOID
[BLACK]
0318-04
(R)-SHORT CORD
[BLACK]
0318-03
DIFFERENTIAL OIL TEMPERATURE SENSOR
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

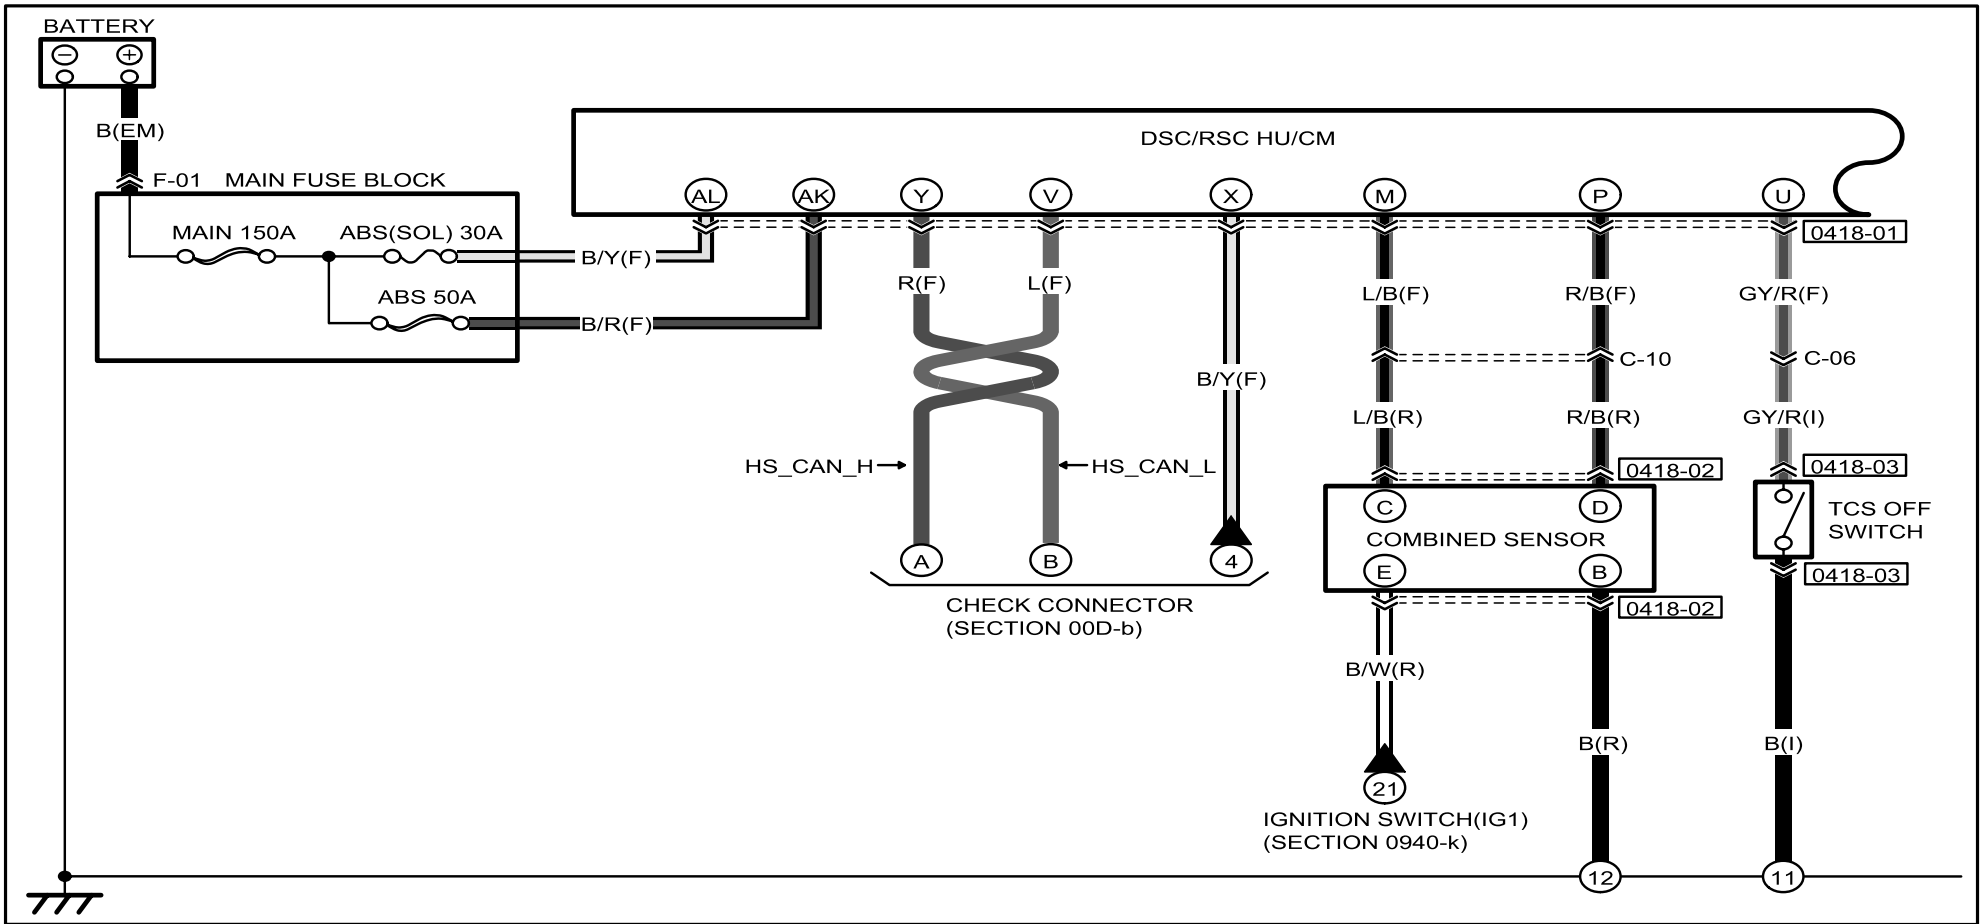


0418-01
DSC/RSC HU/CM

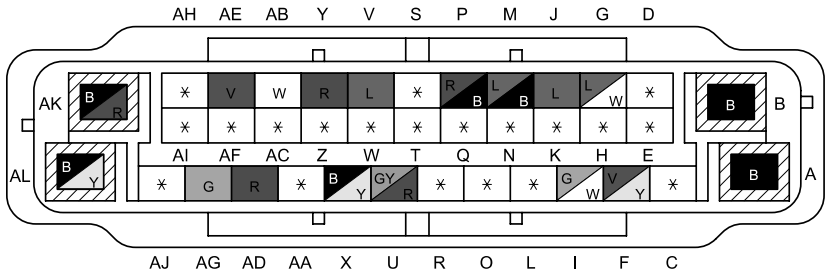


0418-02
COMBINED SENSOR

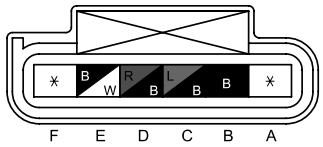


0418-03
TCS OFF SWITCH /
TCS OFF SWITCH ILLUMINATION




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

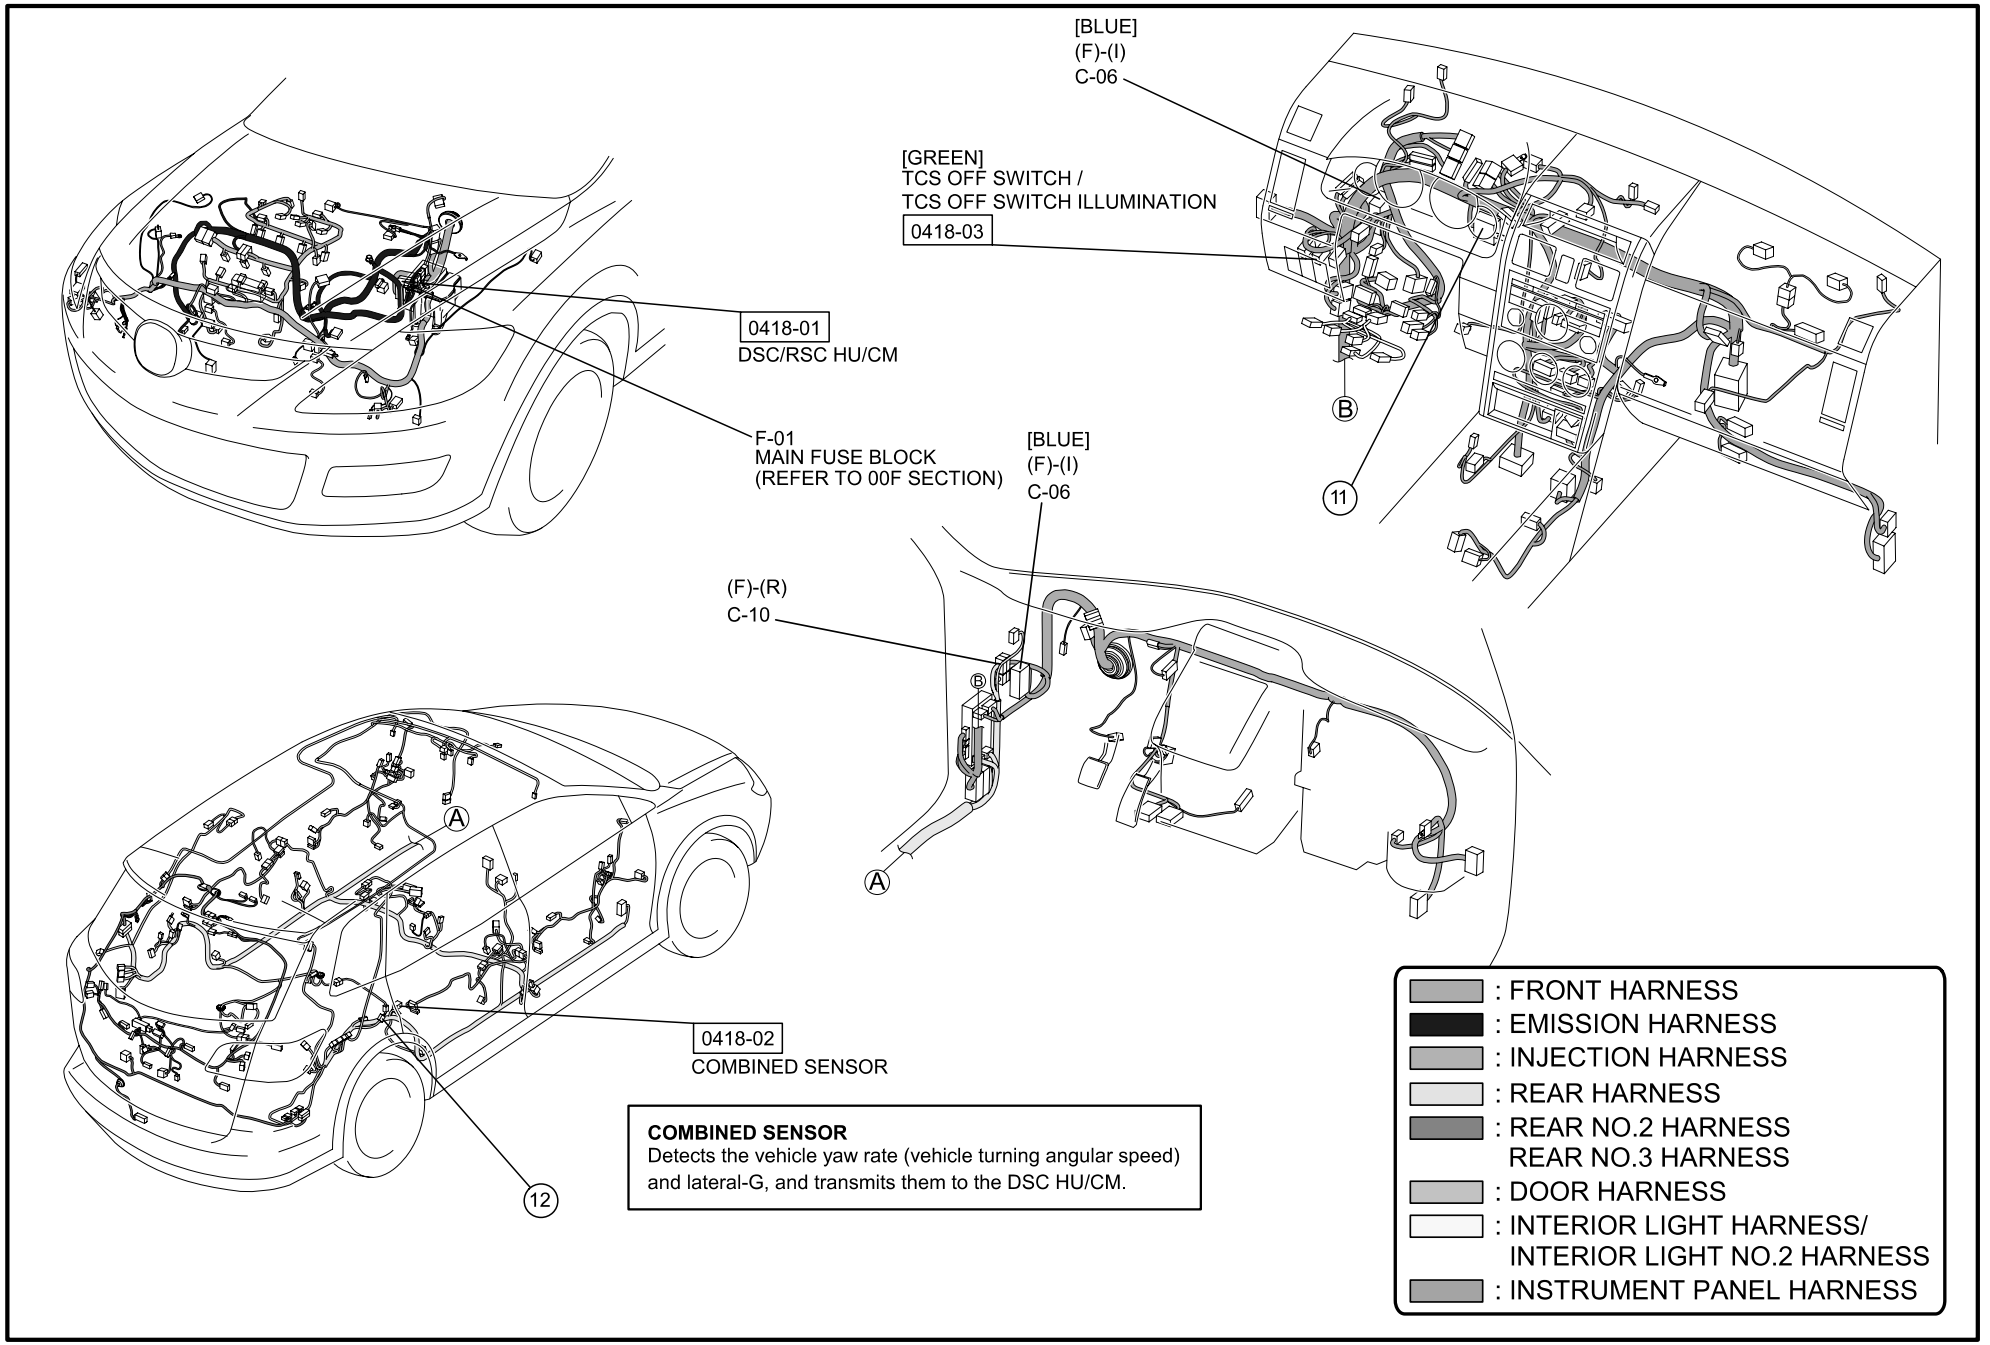


COMBINED SENSOR
Detects the vehicle yaw rate (vehicle turning angular speed) and lateral-G, and transmits them to the DSC HU/CM.

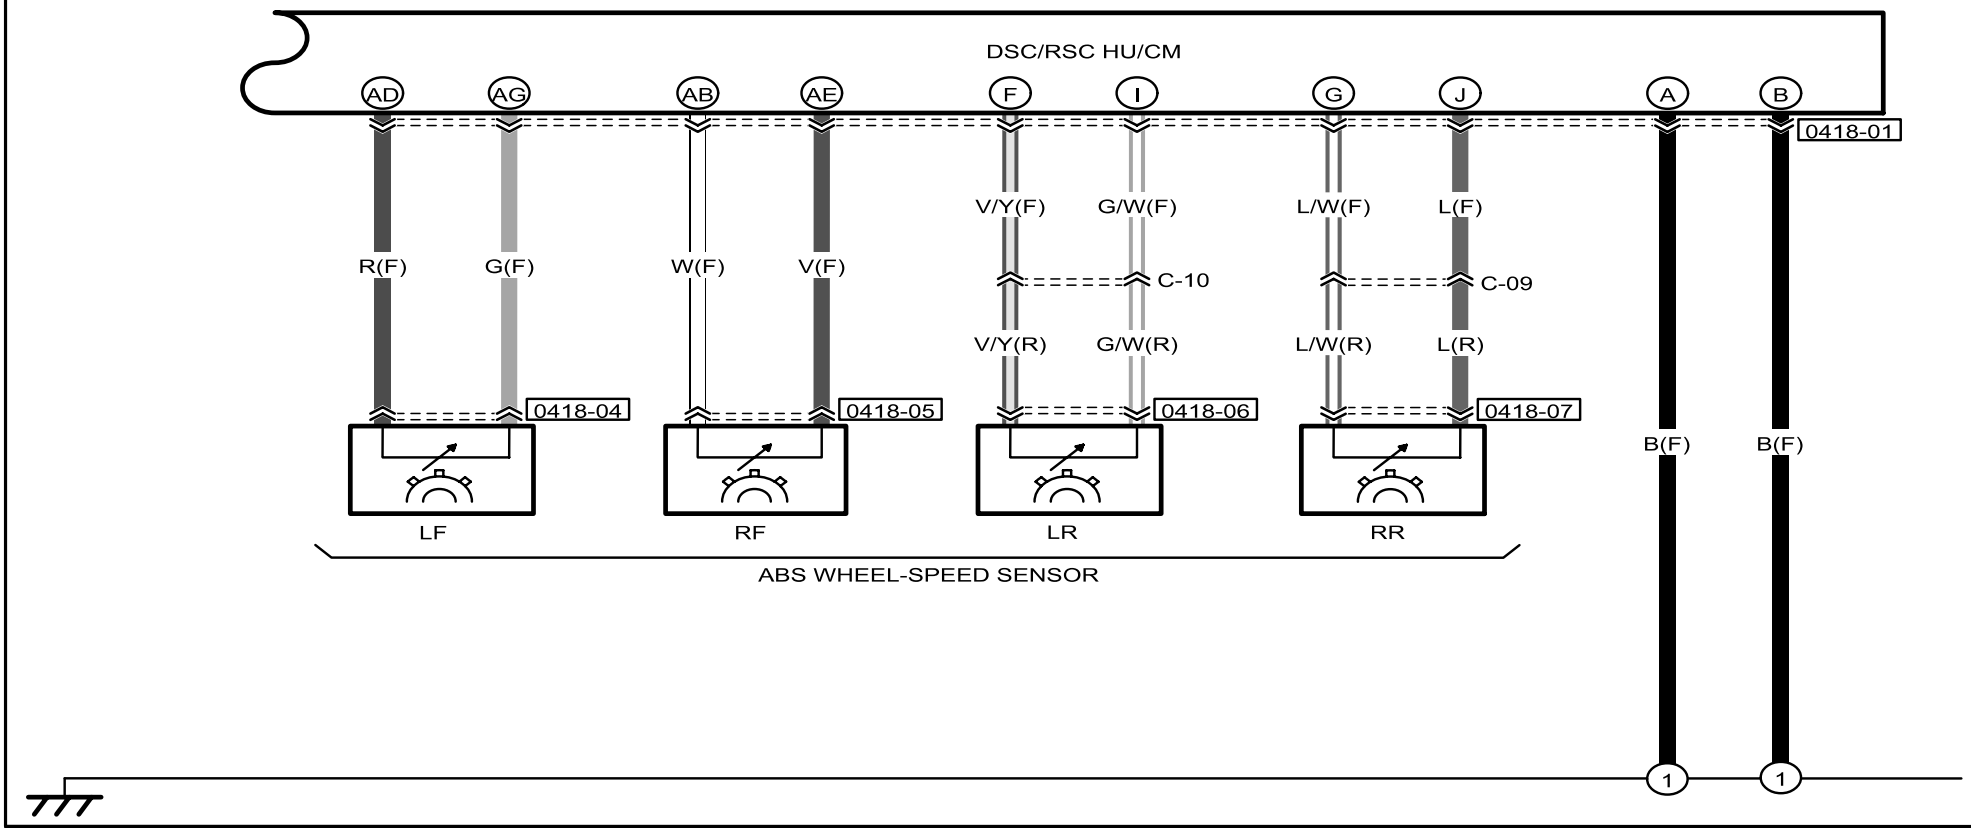


0418-01
DSC/RSC HU/CM

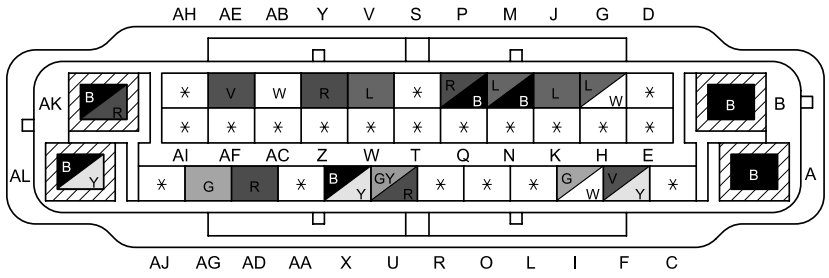


0418-04
ABS WHEEL-SPEED SENSOR LF




0418-05
ABS WHEEL-SPEED SENSOR RF




0418-06
ABS WHEEL-SPEED SENSOR LR




0418-07
ABS WHEEL-SPEED SENSOR RR




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

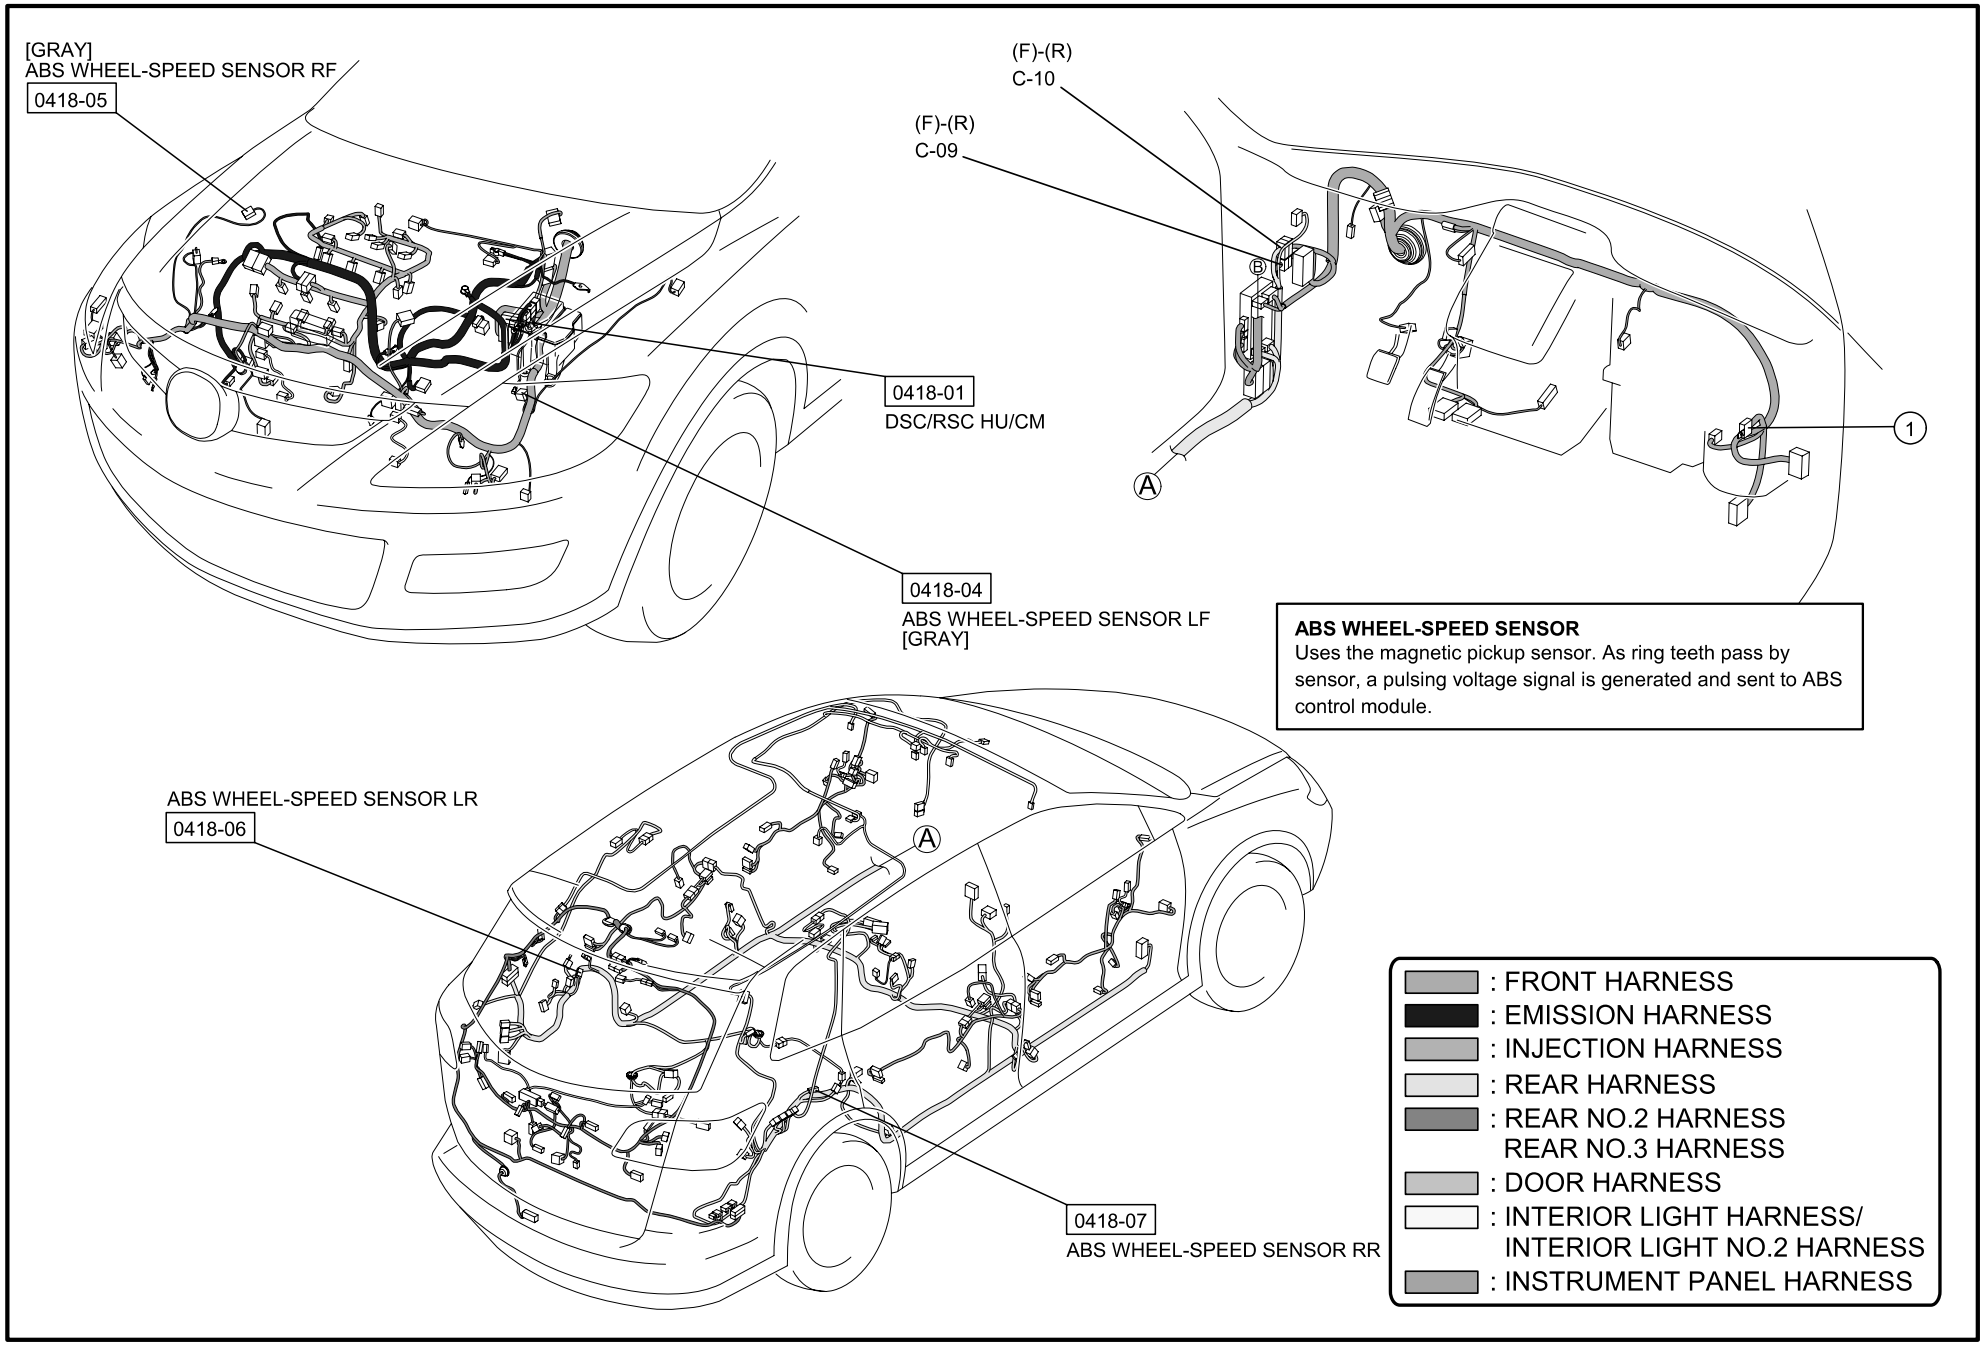


ABS WHEEL-SPEED SENSOR
Uses the magnetic pickup sensor. As ring teeth pass by sensor, a pulsing voltage signal is generated and sent to ABS control module.

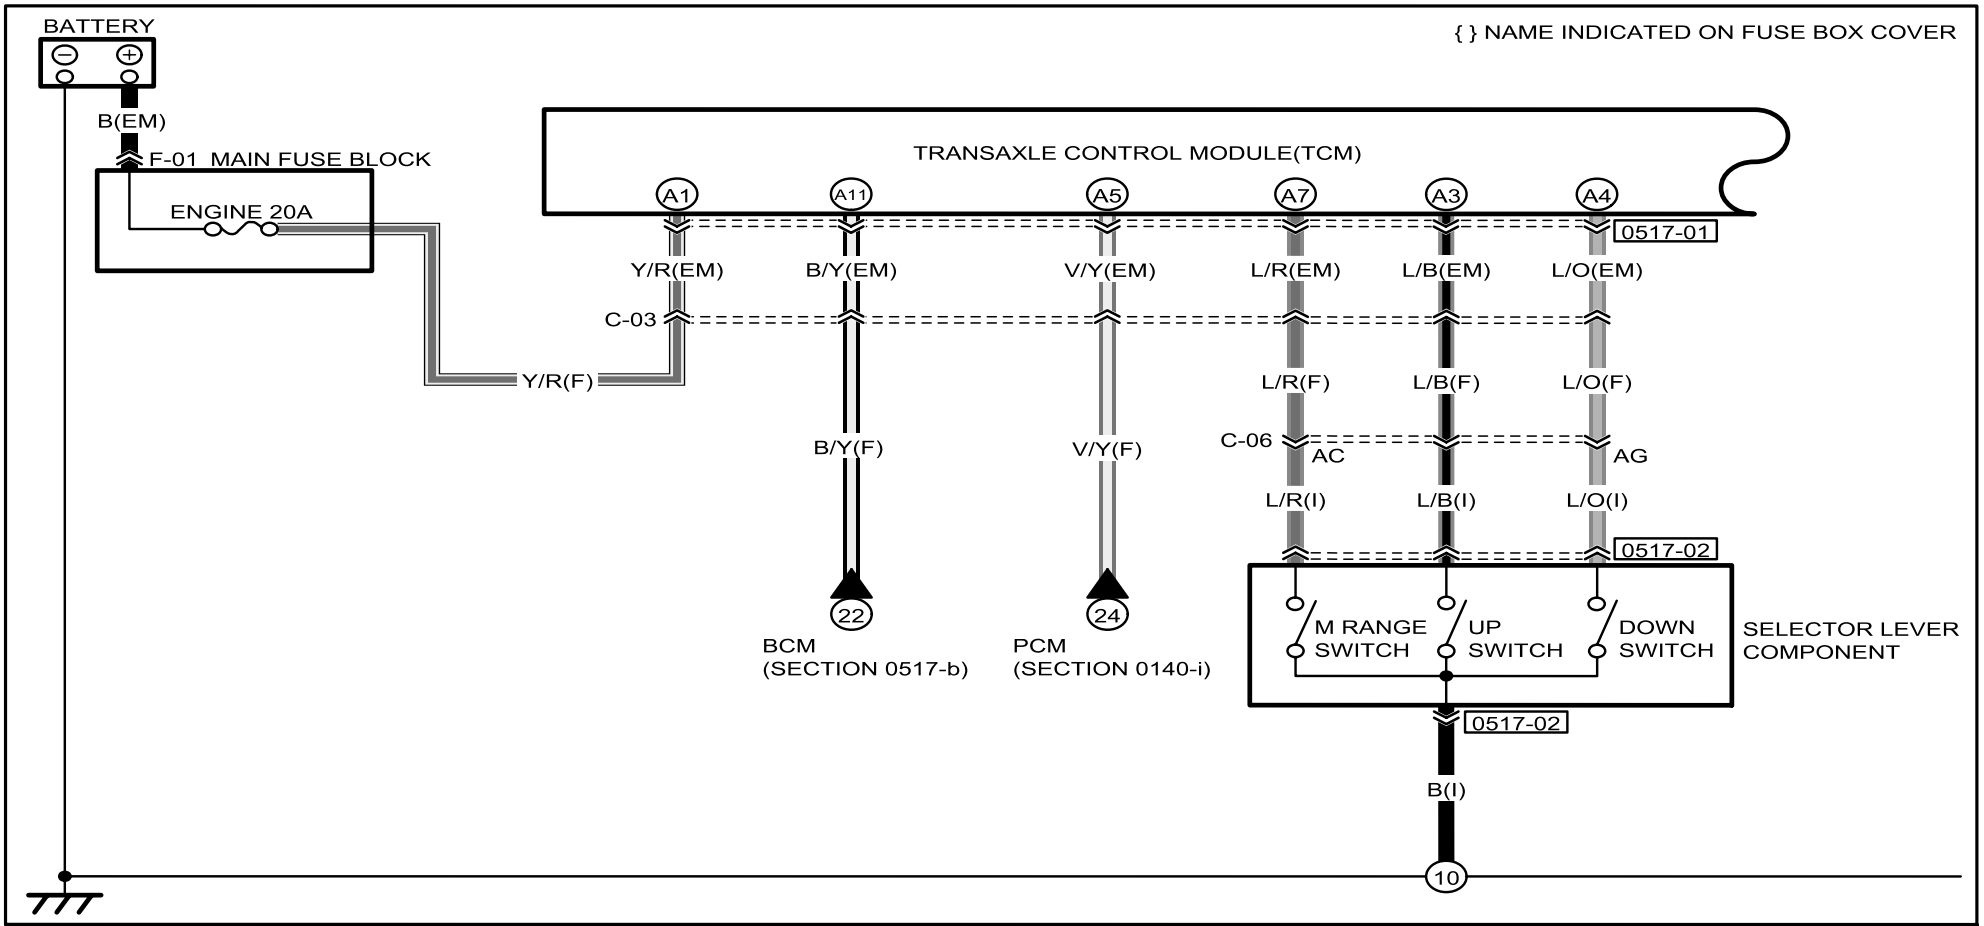


0517-01
TCM

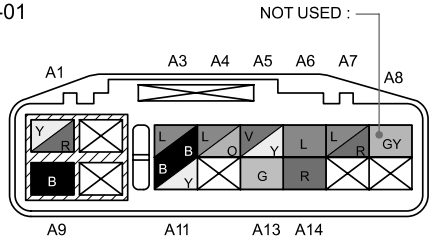

0517-02
SELECTOR LEVER COMPONENT




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

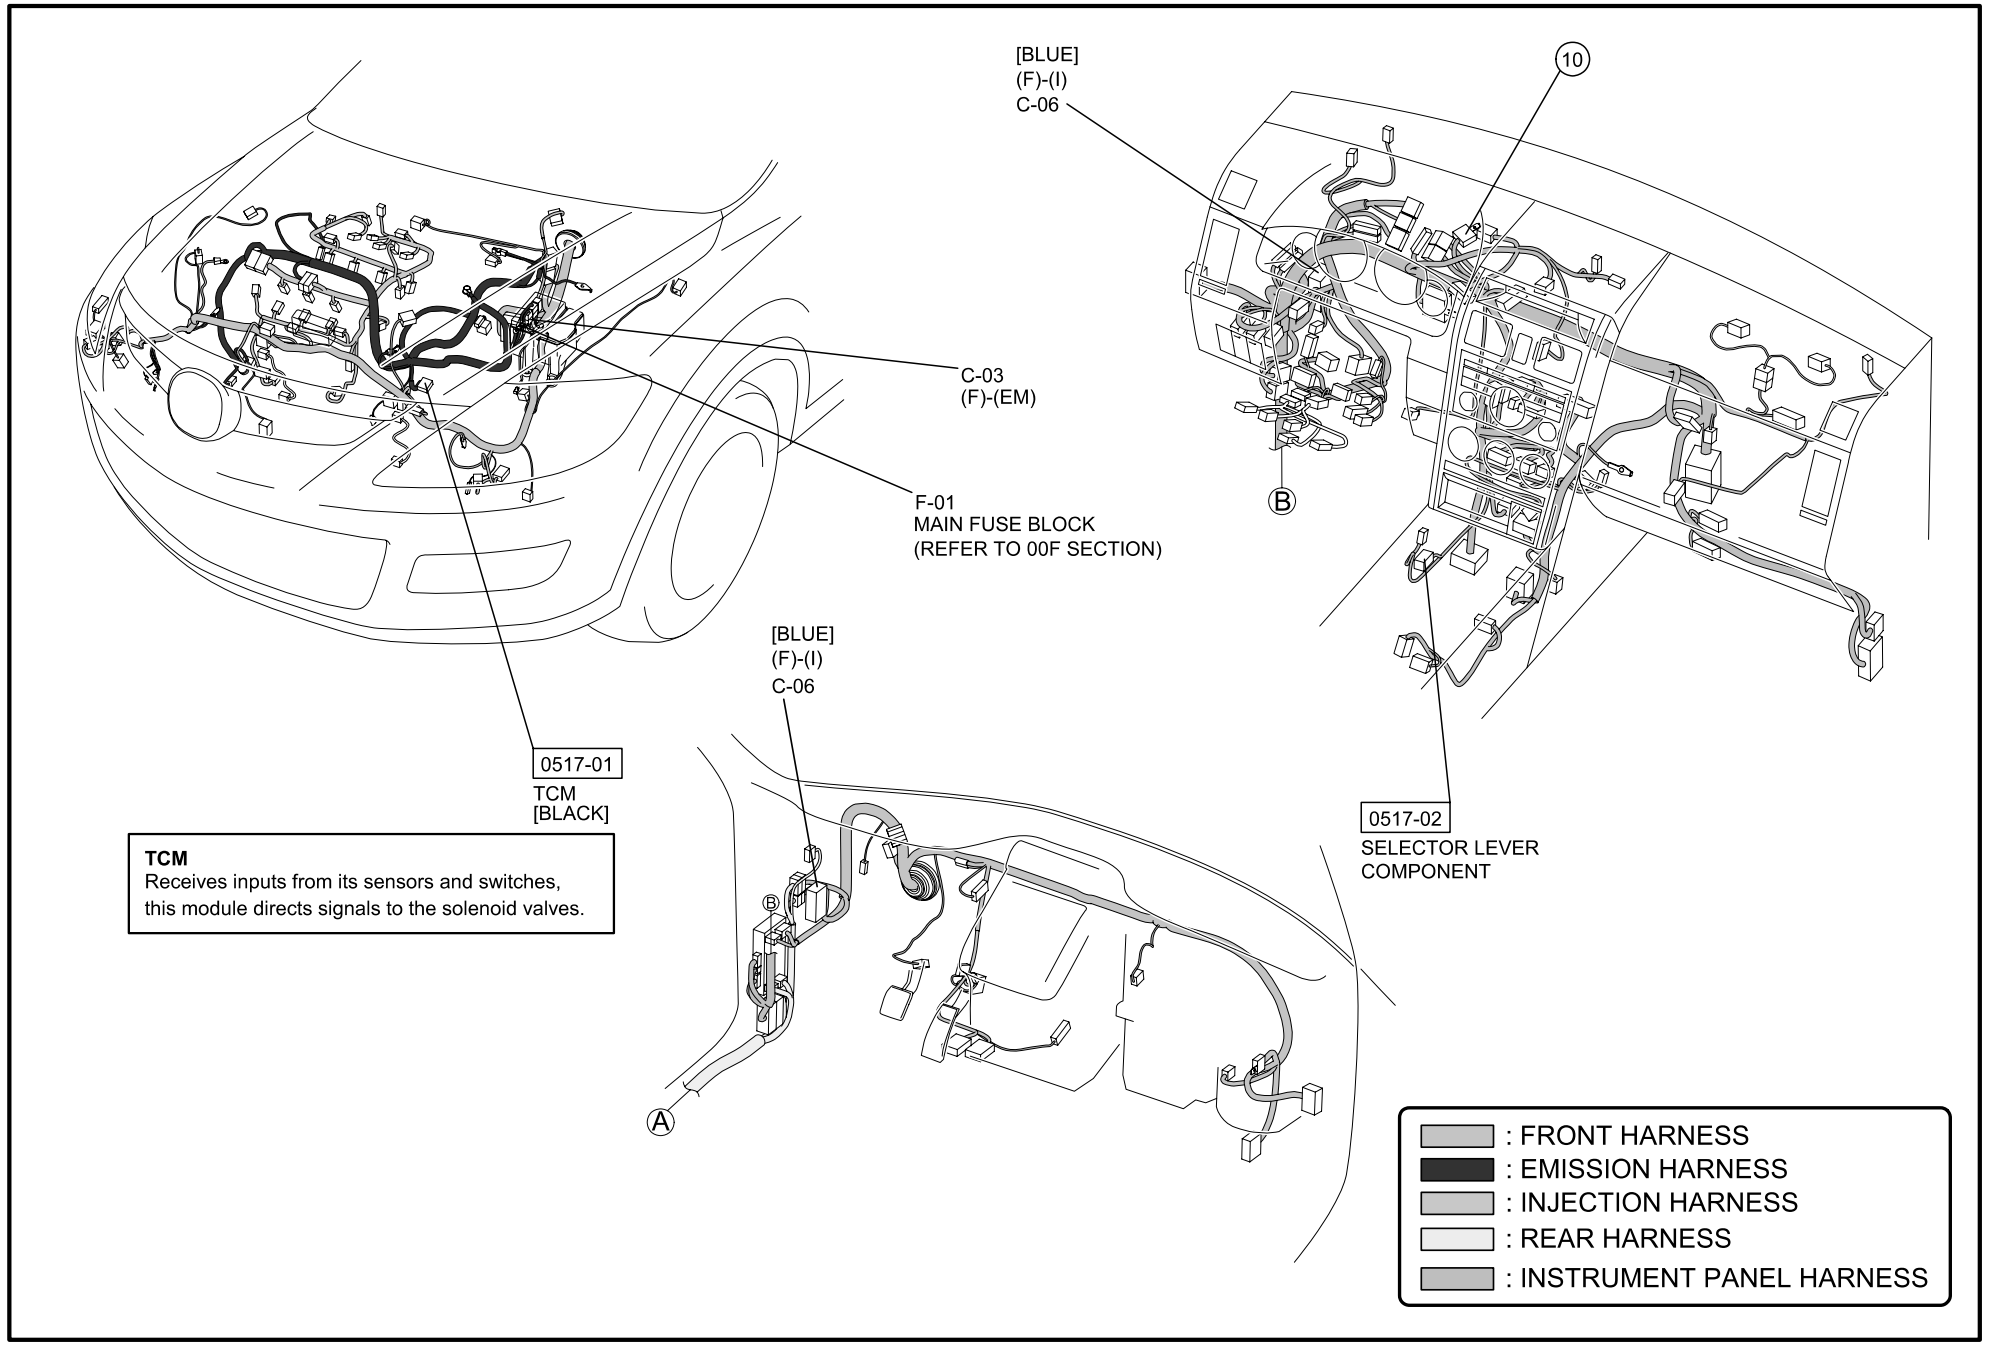


TCM
Receives inputs from its sensors and switches, this module directs signals to the solenoid valves.


{ } NAME INDICATED ON FUSE BOX COVER

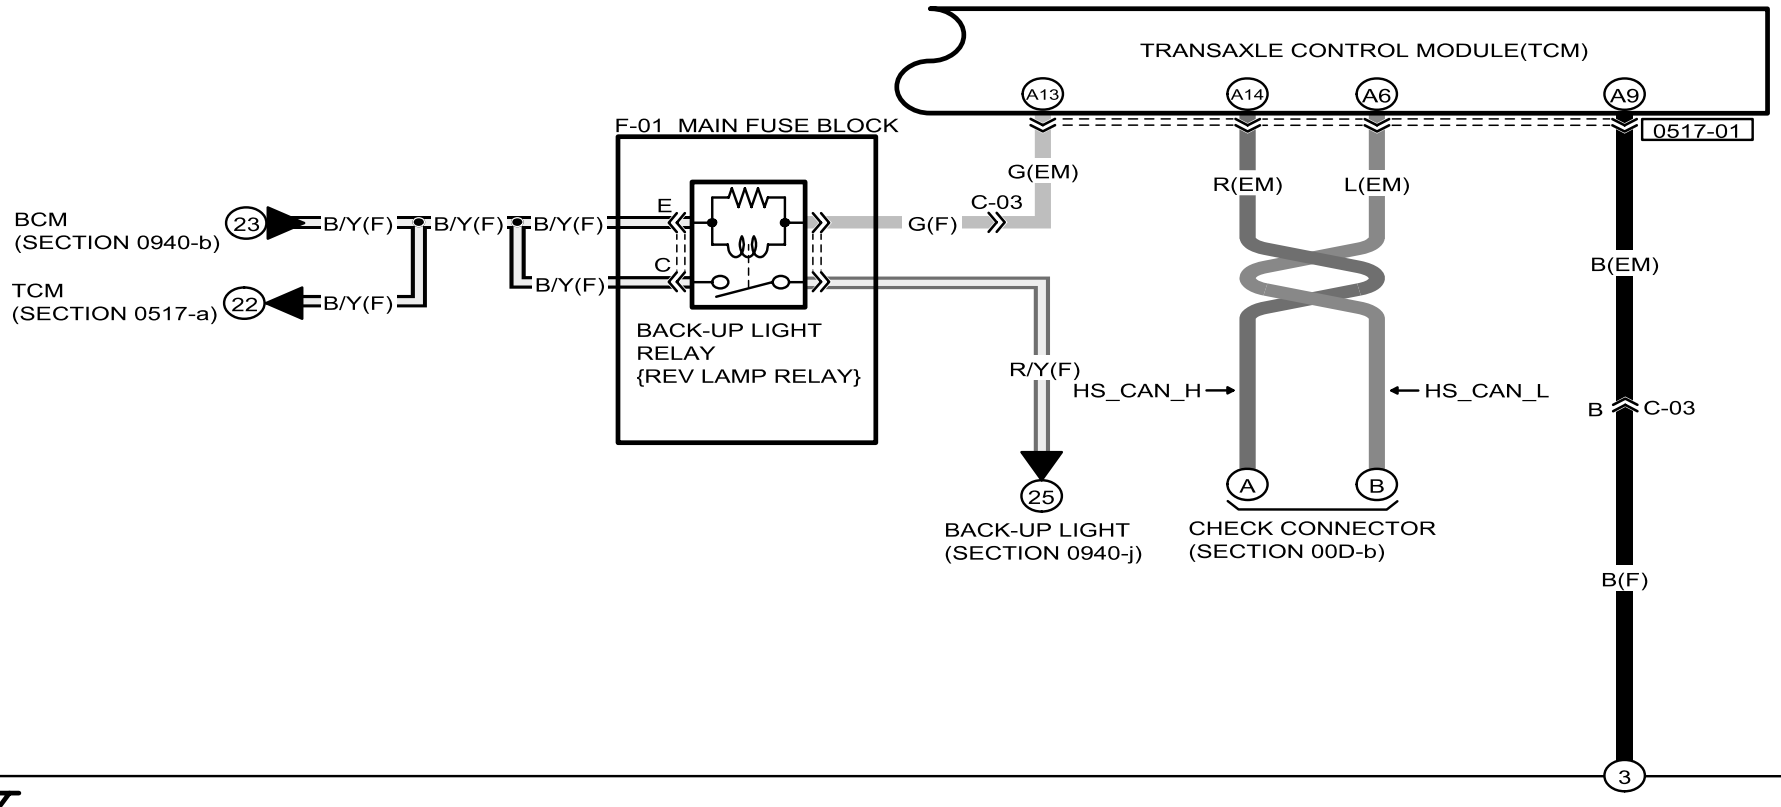


0517-01
TCM

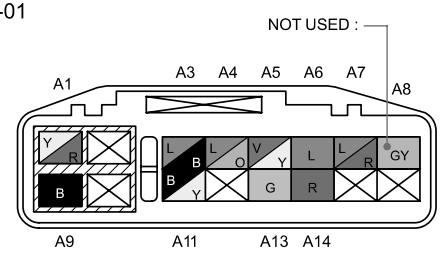


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

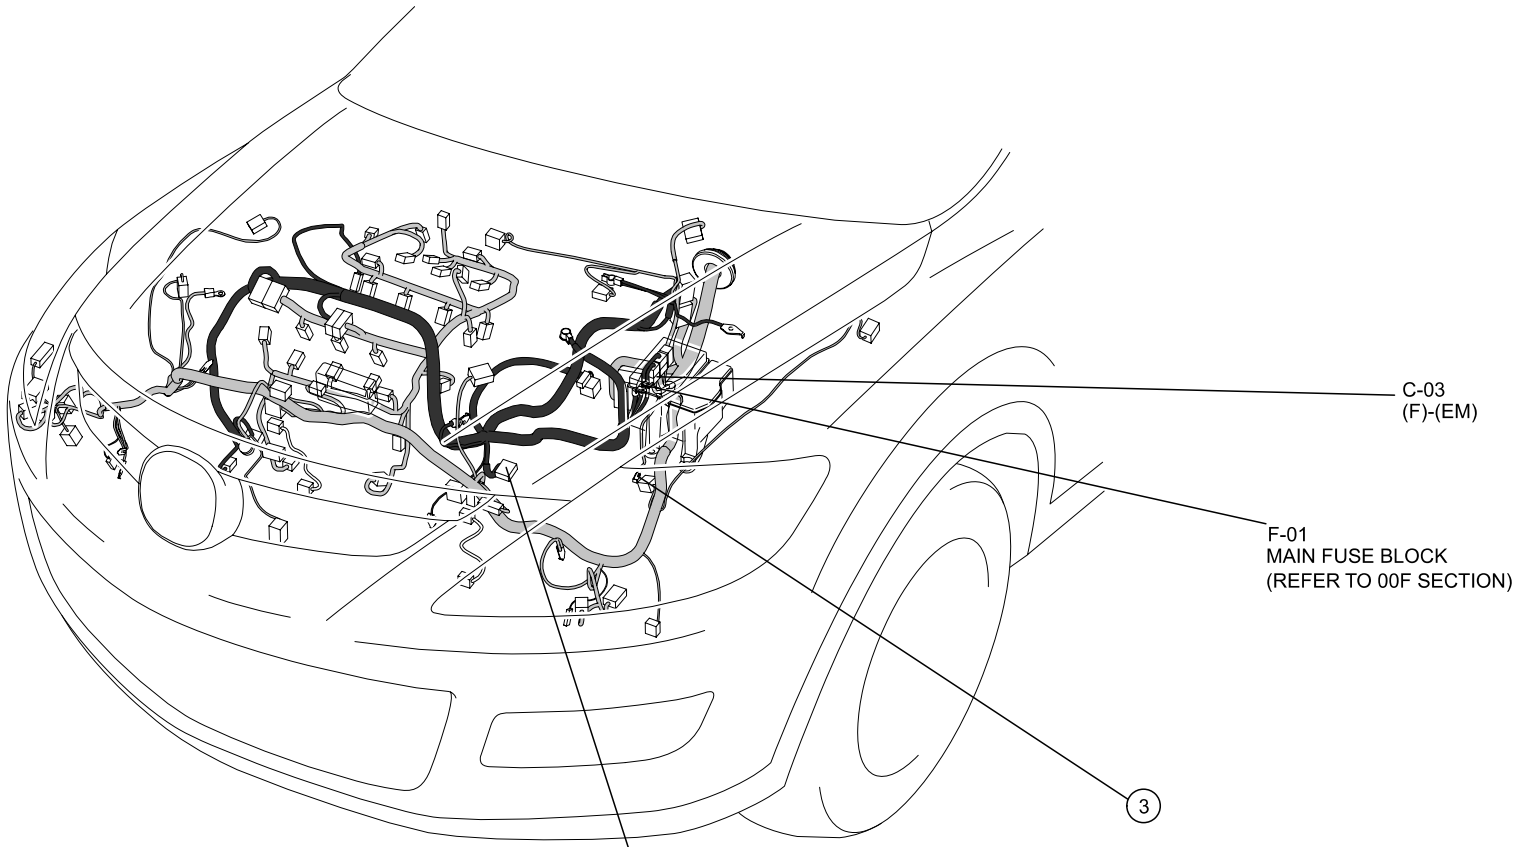

TCM
Receives inputs from its sensors and switches, this module directs signals to the solenoid valves.

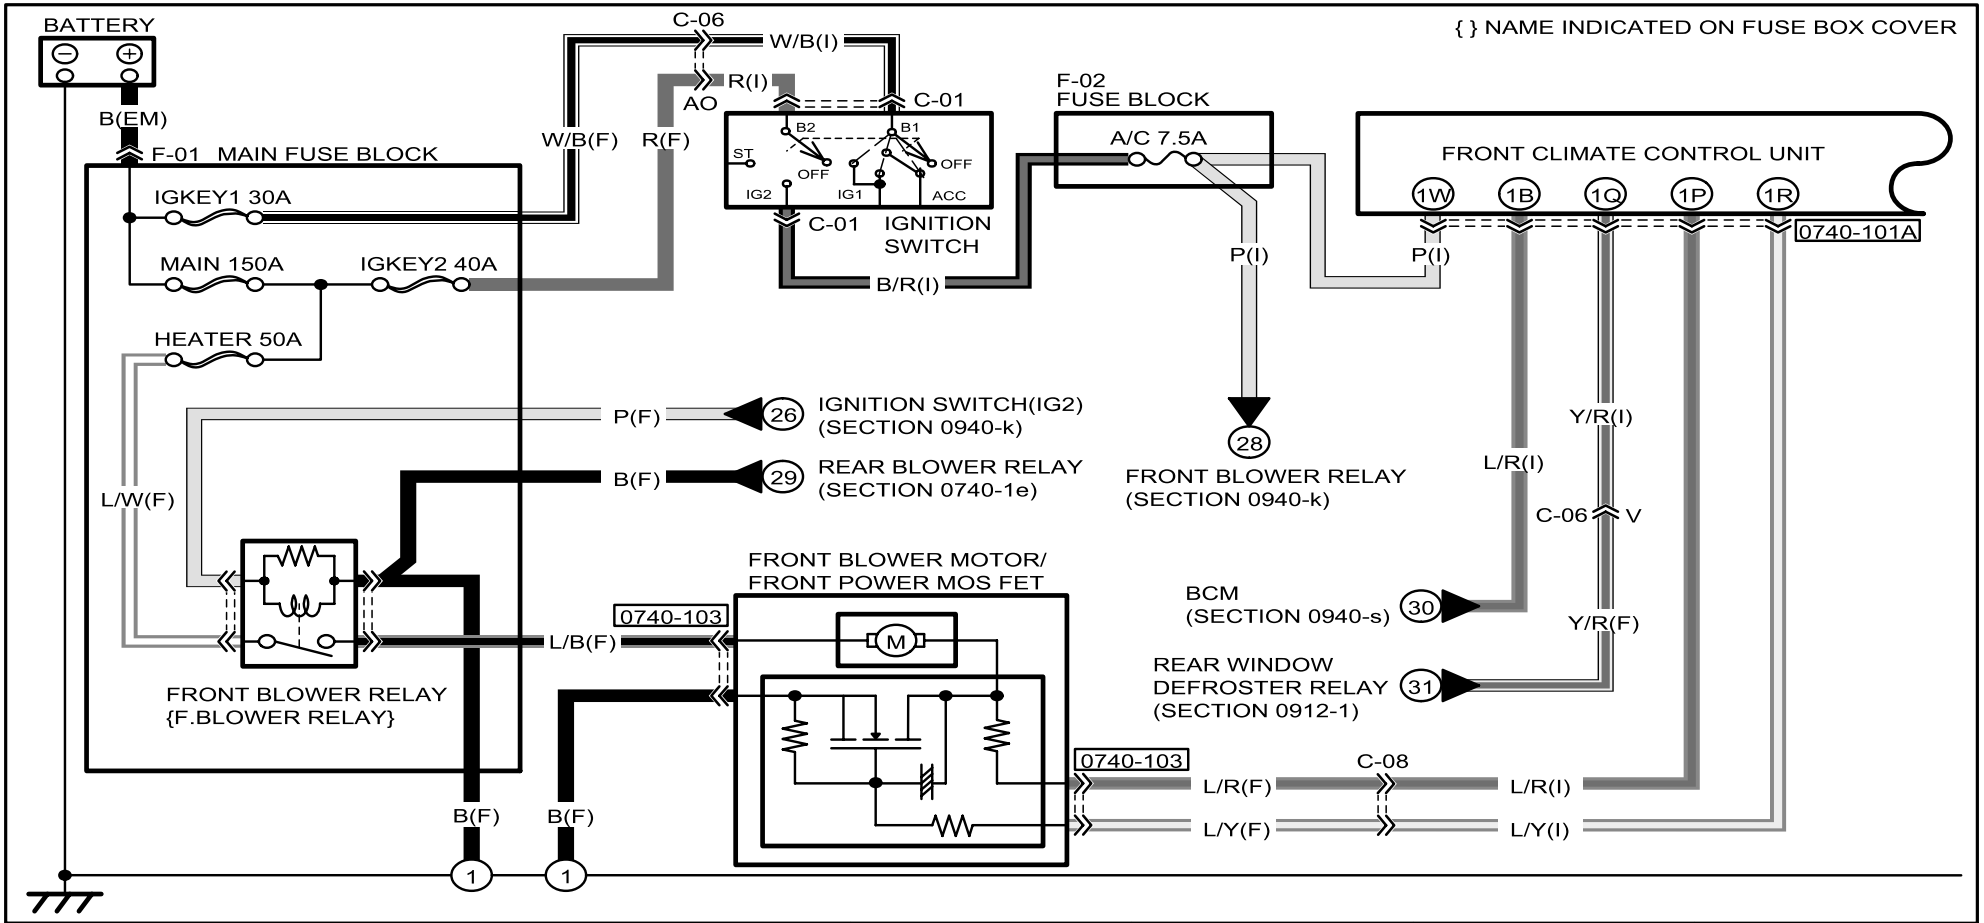


0740-101A
FRONT CLIMATE CONTROL UNIT

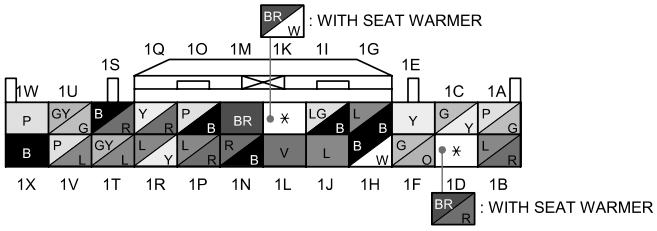


0740-103
FRONT BLOWER MOTOR/
FRONT POWER MOS FET




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

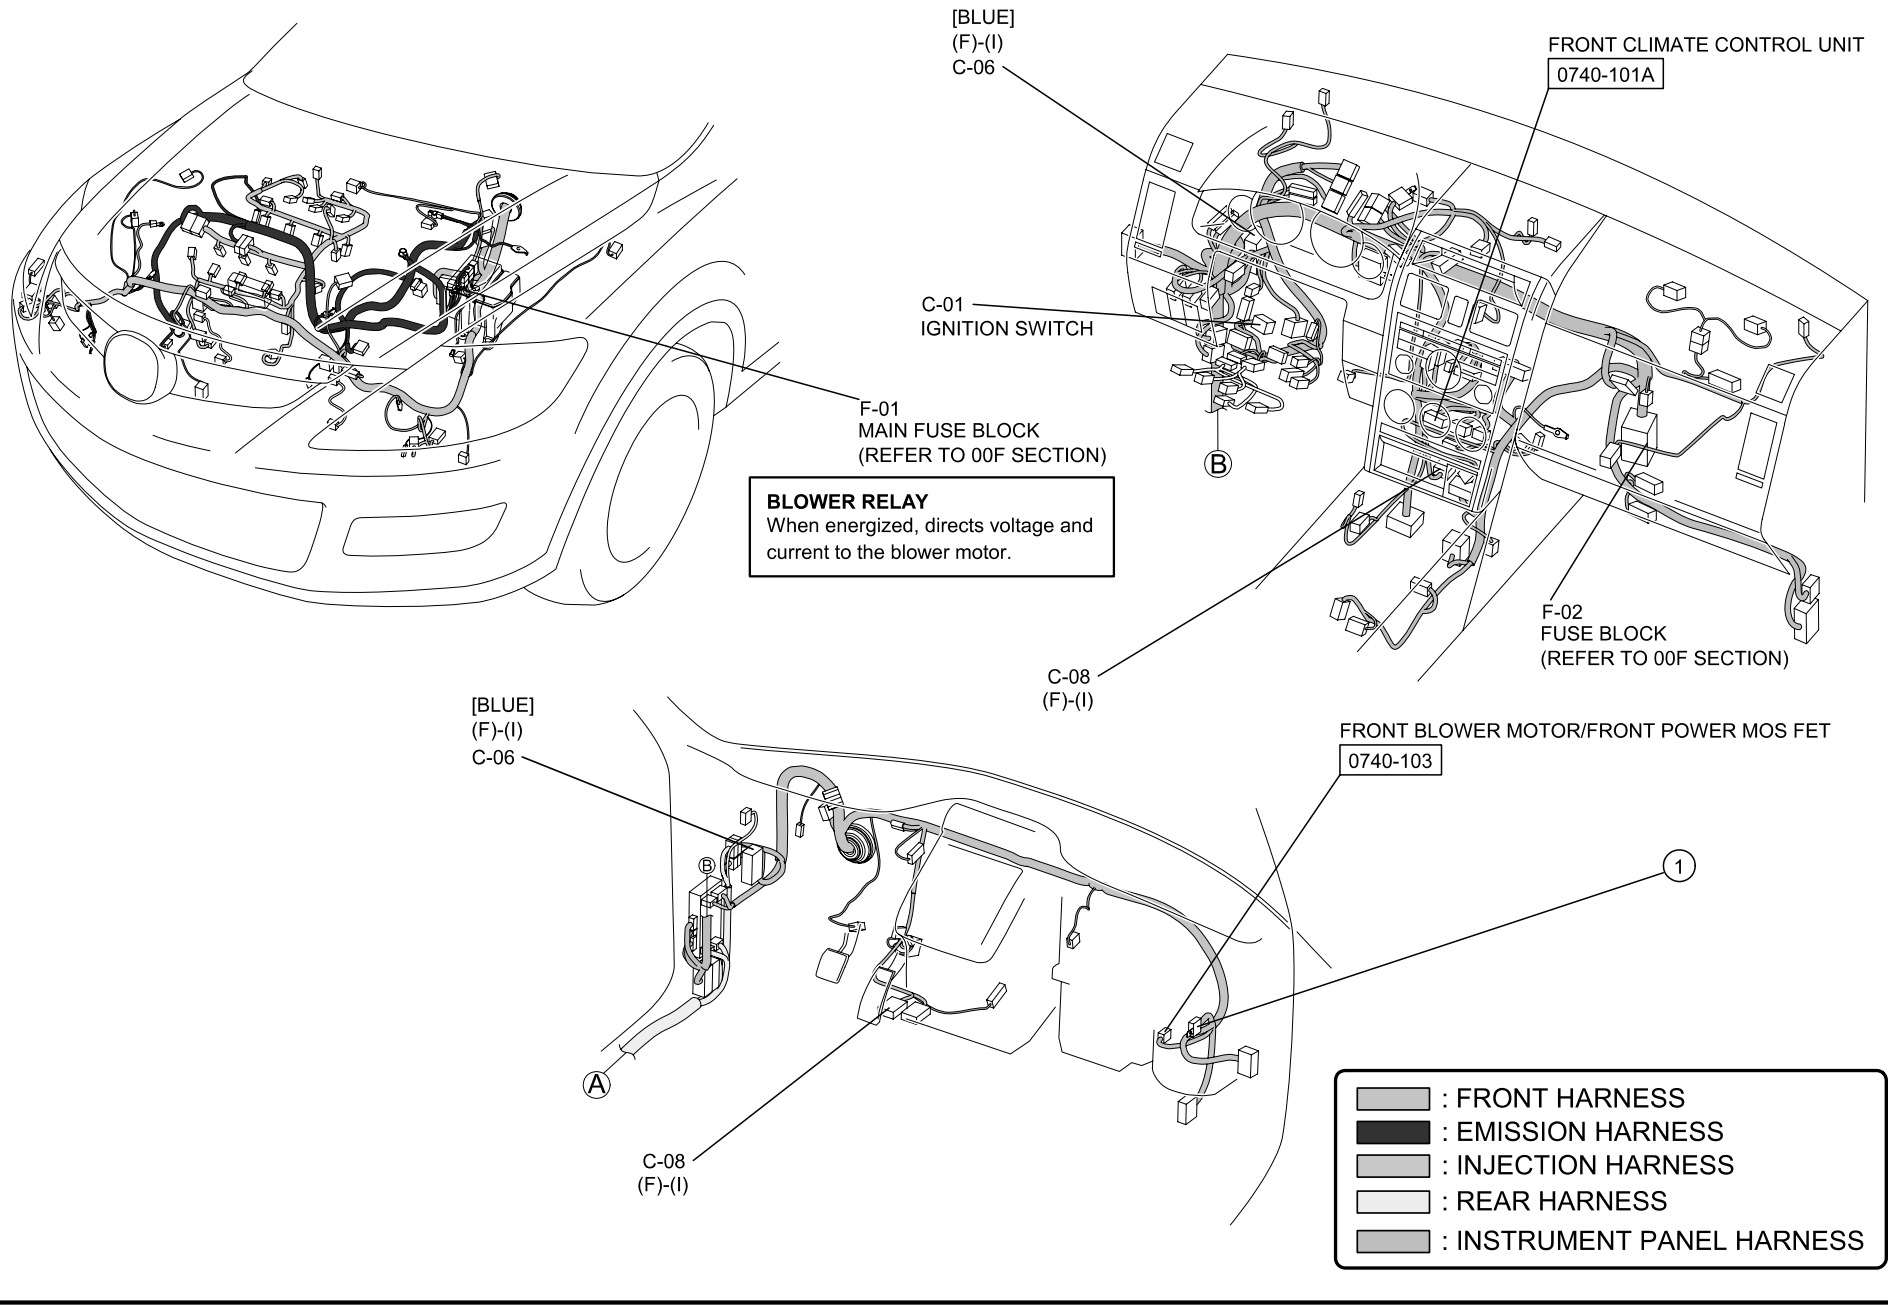

[BLUE]
(F)-(I)
C-06
FRONT CLIMATE CONTROL UNIT
0740-101A
C-01
IGNITION SWITCH
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
BLOWER RELAY
When energized, directs voltage and current to the blower motor.
B
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
C-08
(F)-(I)
[BLUE]
(F)-(I)
C-06
FRONT BLOWER MOTOR/FRONT POWER MOS FET
0740-103
1
A
C-08
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

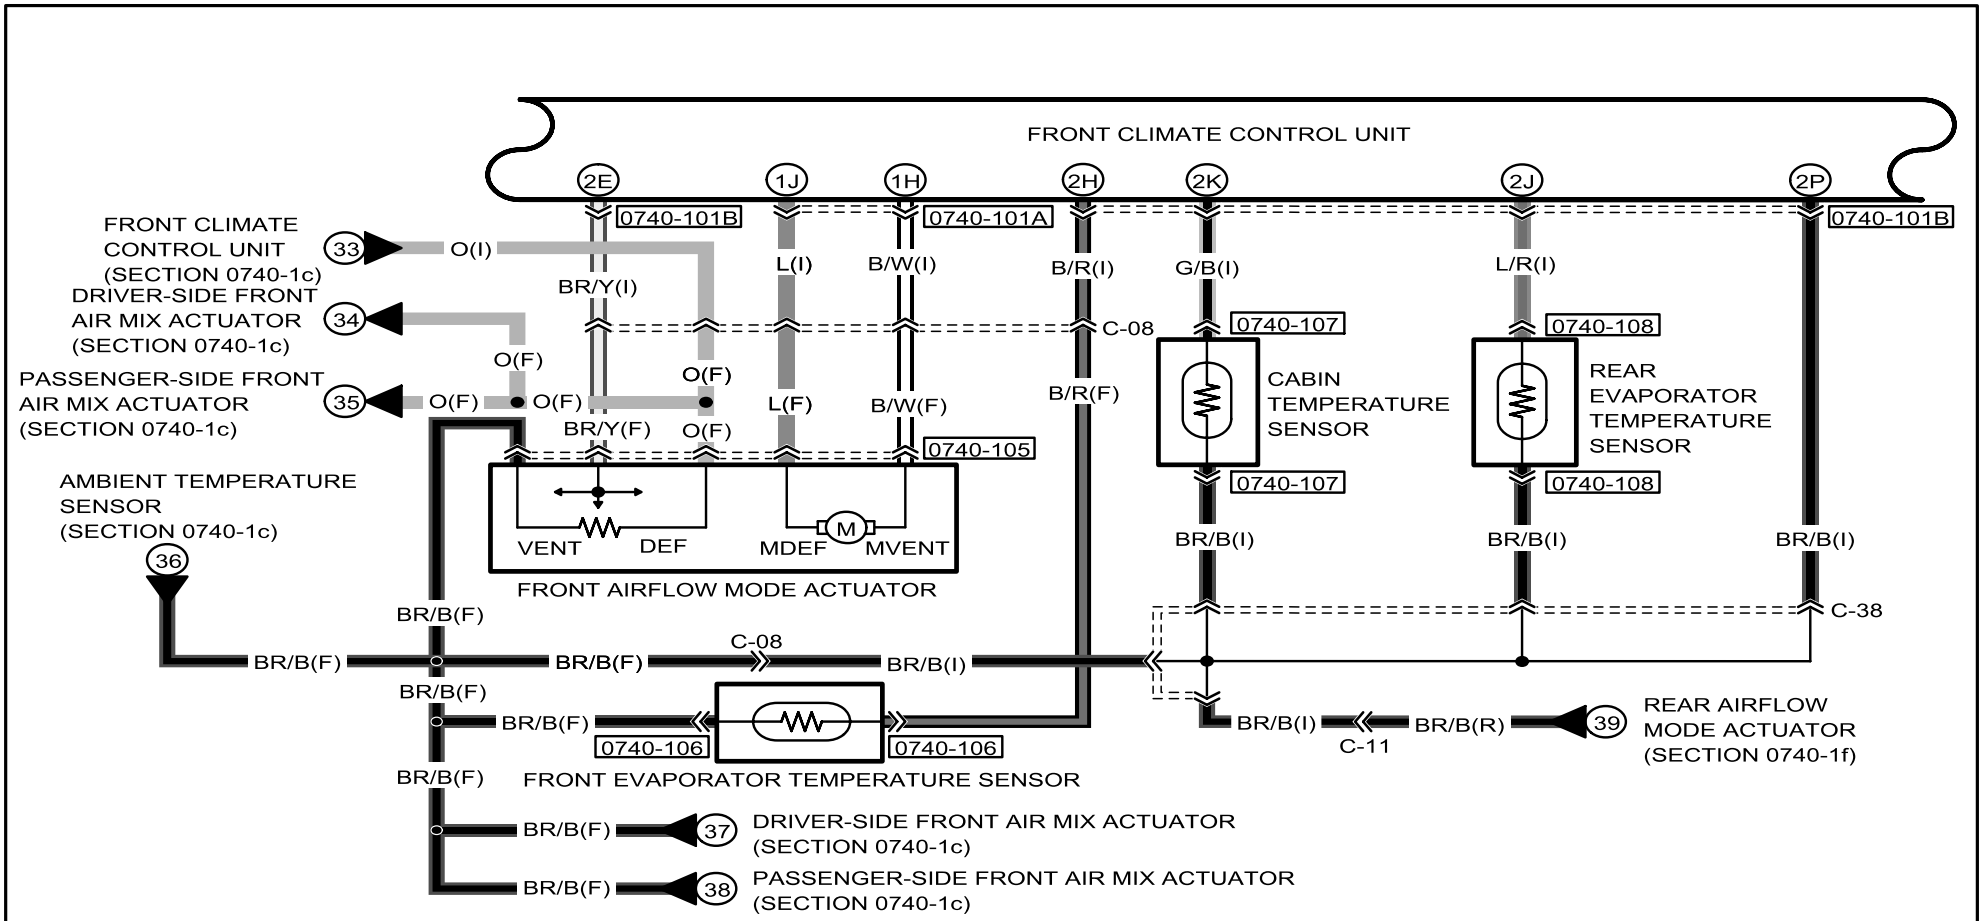


0740-101A
FRONT CLIMATE CONTROL UNIT

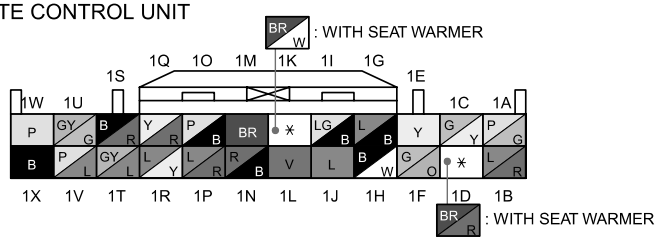

0740-101B
FRONT CLIMATE CONTROL UNIT

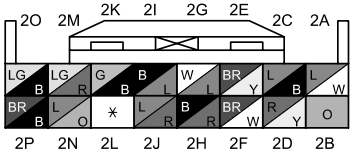


0740-105
FRONT AIRFLOW MODE ACTUATOR



0740-106
FRONT EVAPORATOR TEMPERATURE SENSOR




0740-107
CABIN TEMPERATURE SENSOR




0740-108
REAR EVAPORATOR TEMPERATURE SENSOR




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

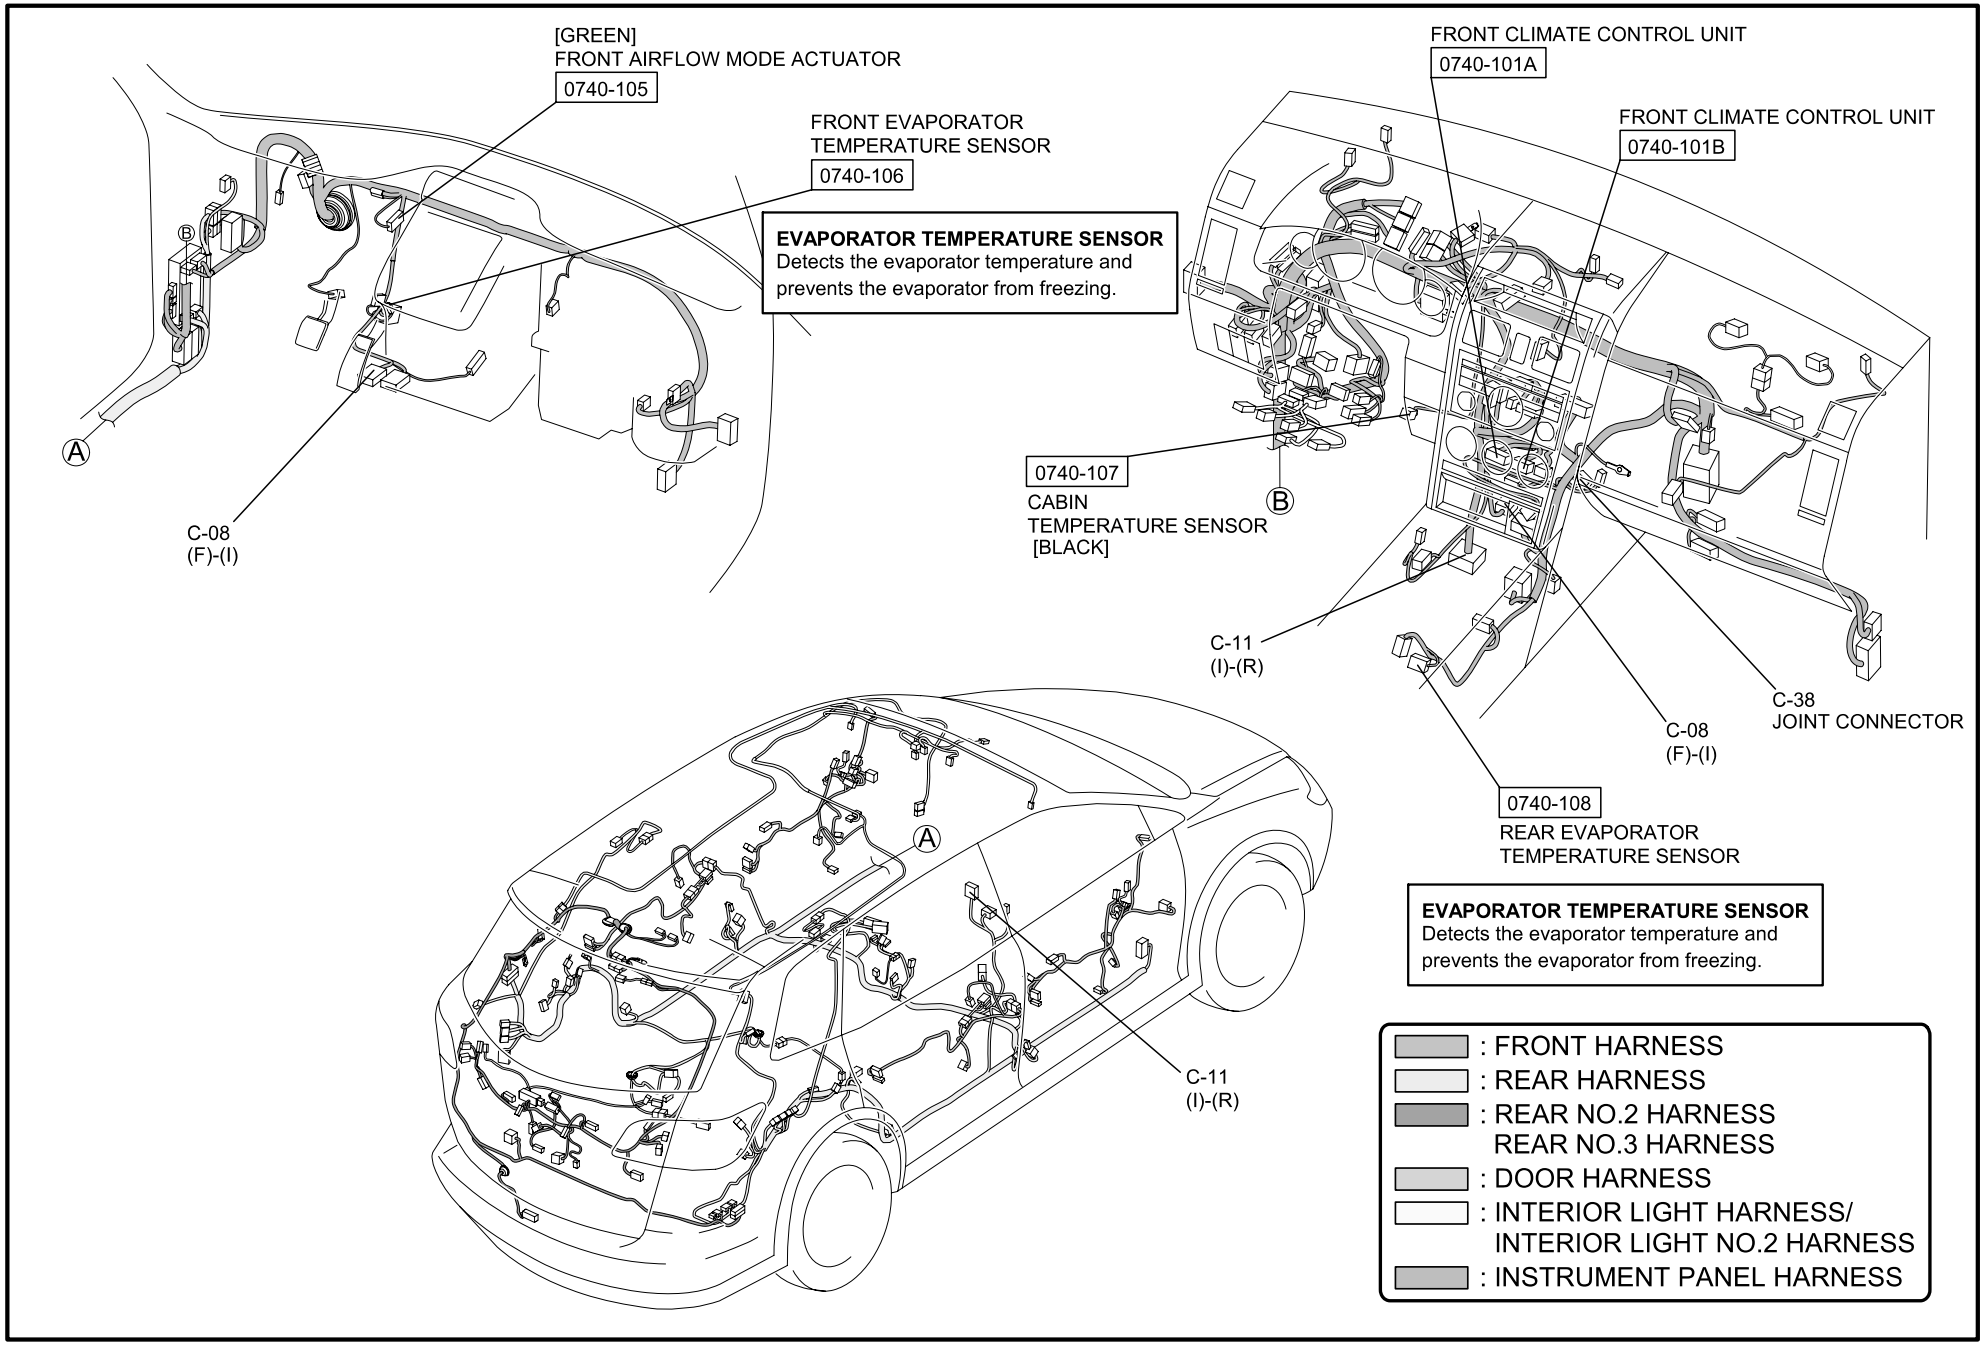

[GREEN]
FRONT AIRFLOW MODE ACTUATOR
0740-105
FRONT EVAPORATOR
TEMPERATURE SENSOR
0740-106
EVAPORATOR TEMPERATURE SENSOR
Detects the evaporator temperature and prevents the evaporator from freezing.
C-08
(F)-(I)
FRONT CLIMATE CONTROL UNIT
0740-101A
FRONT CLIMATE CONTROL UNIT
0740-101B
0740-107
CABIN
TEMPERATURE SENSOR
[BLACK]
C-11
(I)-(R)
C-38
JOINT CONNECTOR
C-08
(F)-(I)
0740-108
REAR EVAPORATOR
TEMPERATURE SENSOR
EVAPORATOR TEMPERATURE SENSOR
Detects the evaporator temperature and prevents the evaporator from freezing.
C-11
(I)-(R)
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

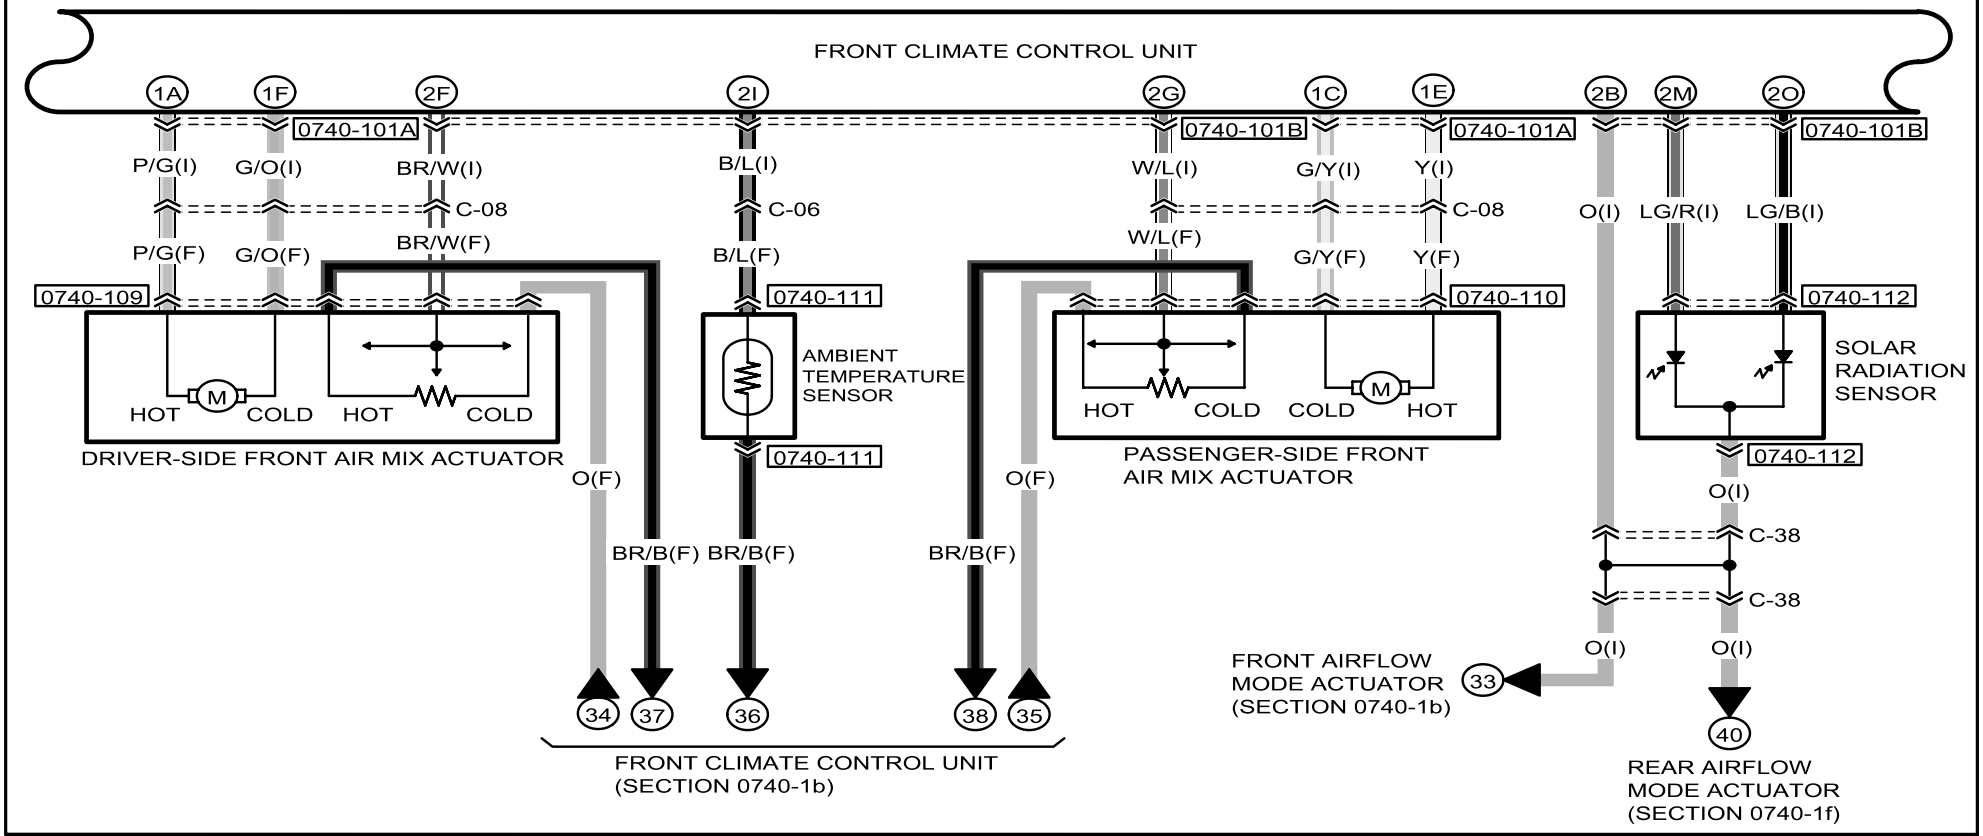


0740-101A
FRONT CLIMATE CONTROL UNIT

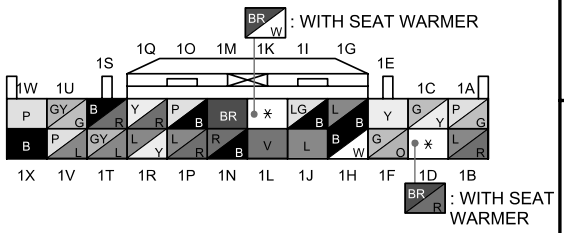


0740-101B
FRONT CLIMATE CONTROL UNIT

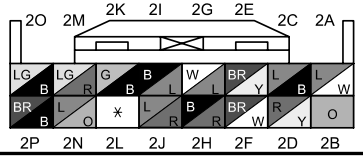


0740-109
DRIVER-SIDE FRONT AIR MIX ACTUATOR



0740-110
PASSENGER-SIDE FRONT AIR MIX ACTUATOR




0740-112
SOLAR RADIATION SENSOR




0740-111
AMBIENT TEMPERATURE SENSOR



Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

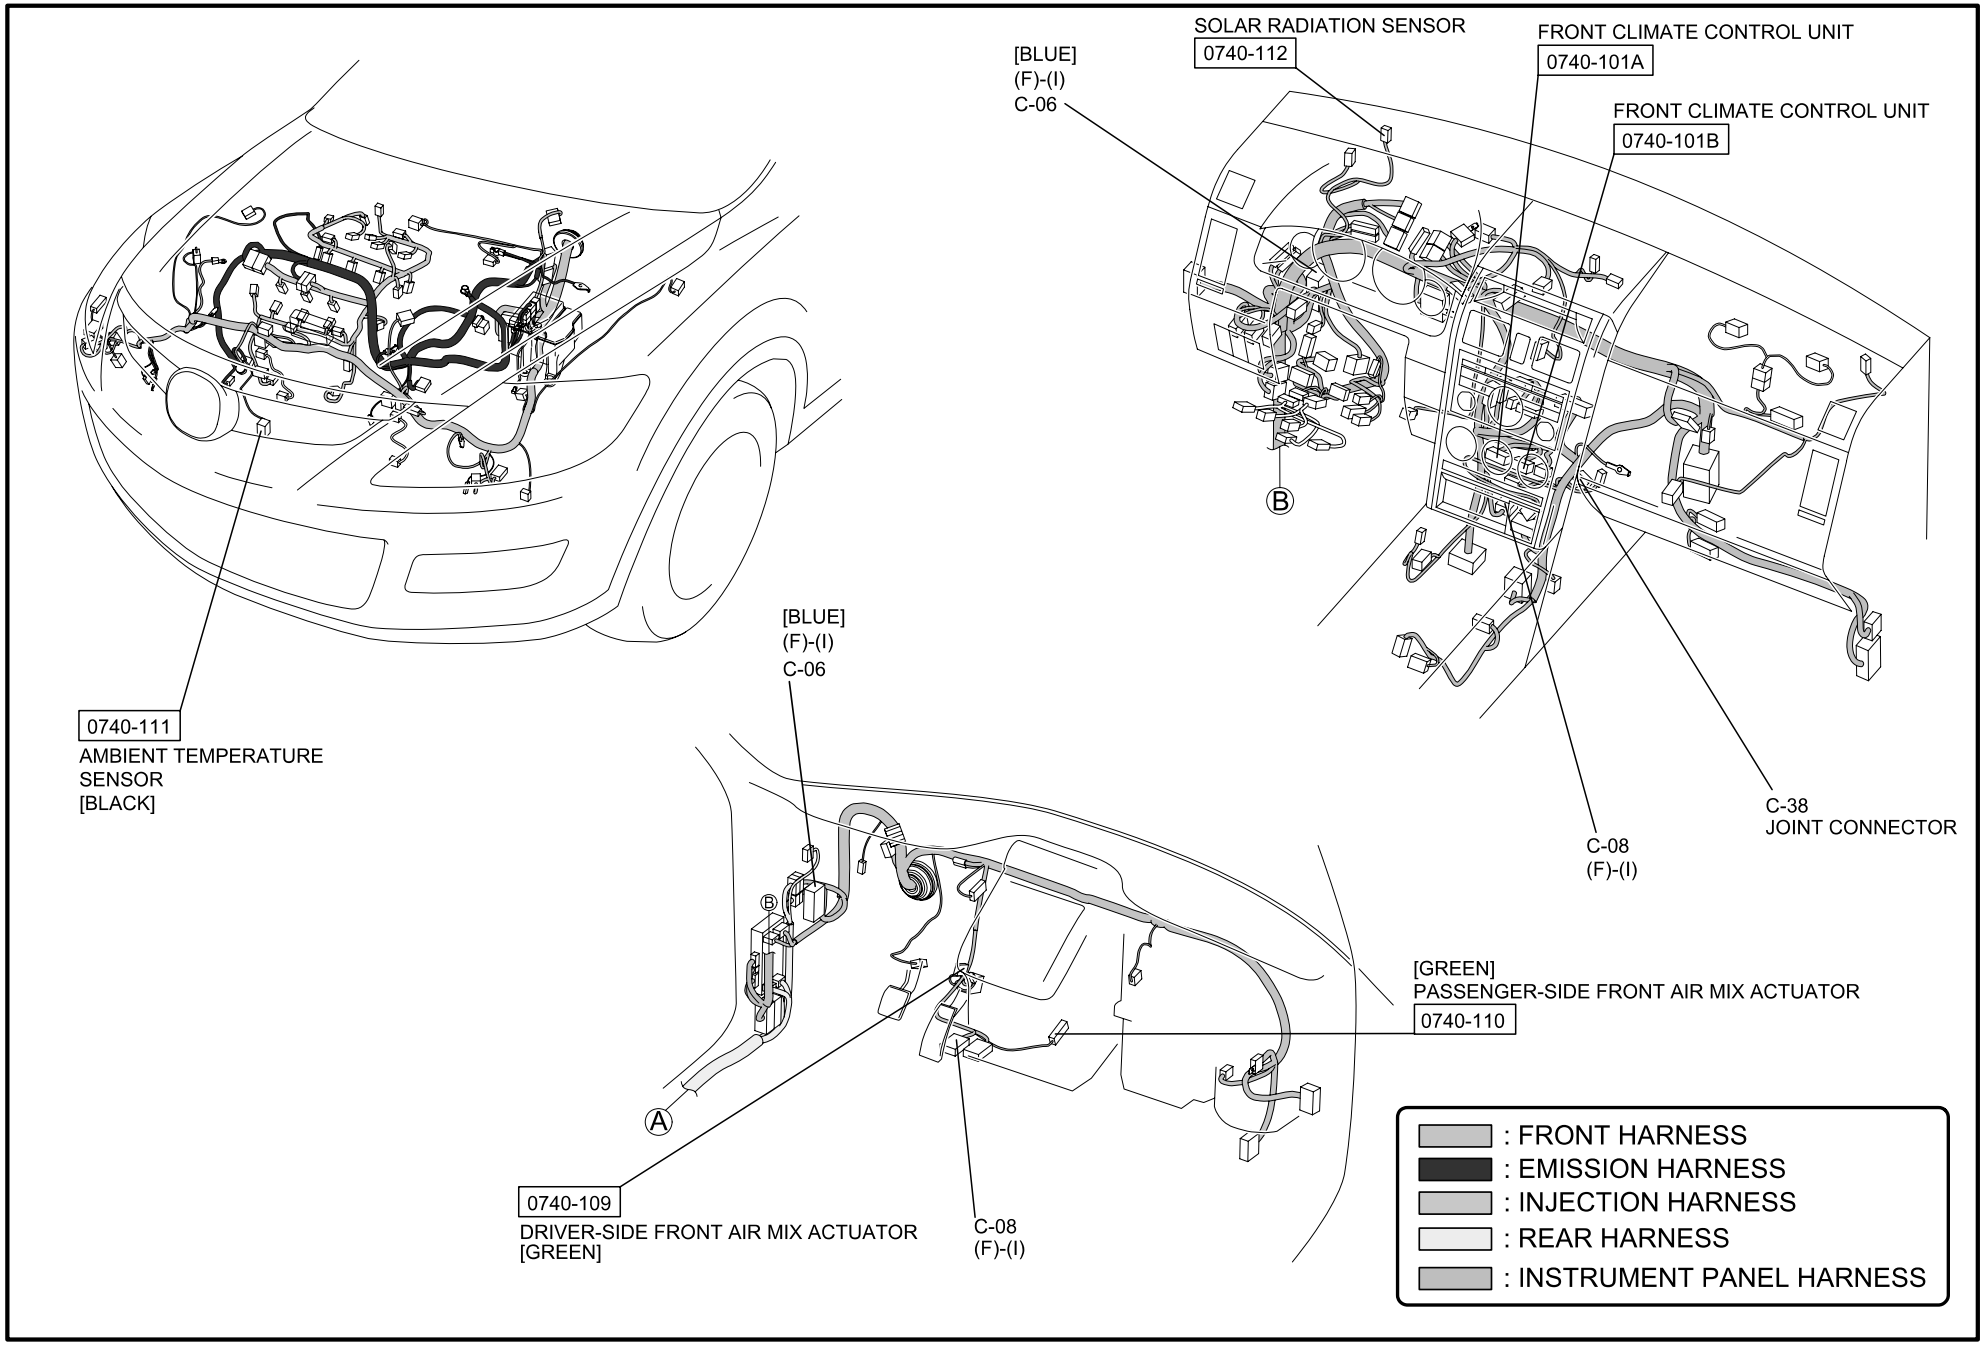
SOLAR RADIATION SENSOR
0740-112
FRONT CLIMATE CONTROL UNIT
0740-101A
FRONT CLIMATE CONTROL UNIT
0740-101B
[BLUE]
(F)-(I)
C-06
B
0740-111
AMBIENT TEMPERATURE
SENSOR
[BLACK]
[BLUE]
(F)-(I)
C-06
C-38
JOINT CONNECTOR
C-08
(F)-(I)
B
[GREEN]
PASSENGER-SIDE FRONT AIR MIX ACTUATOR
0740-110
A
0740-109
DRIVER-SIDE FRONT AIR MIX ACTUATOR
[GREEN]
C-08
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

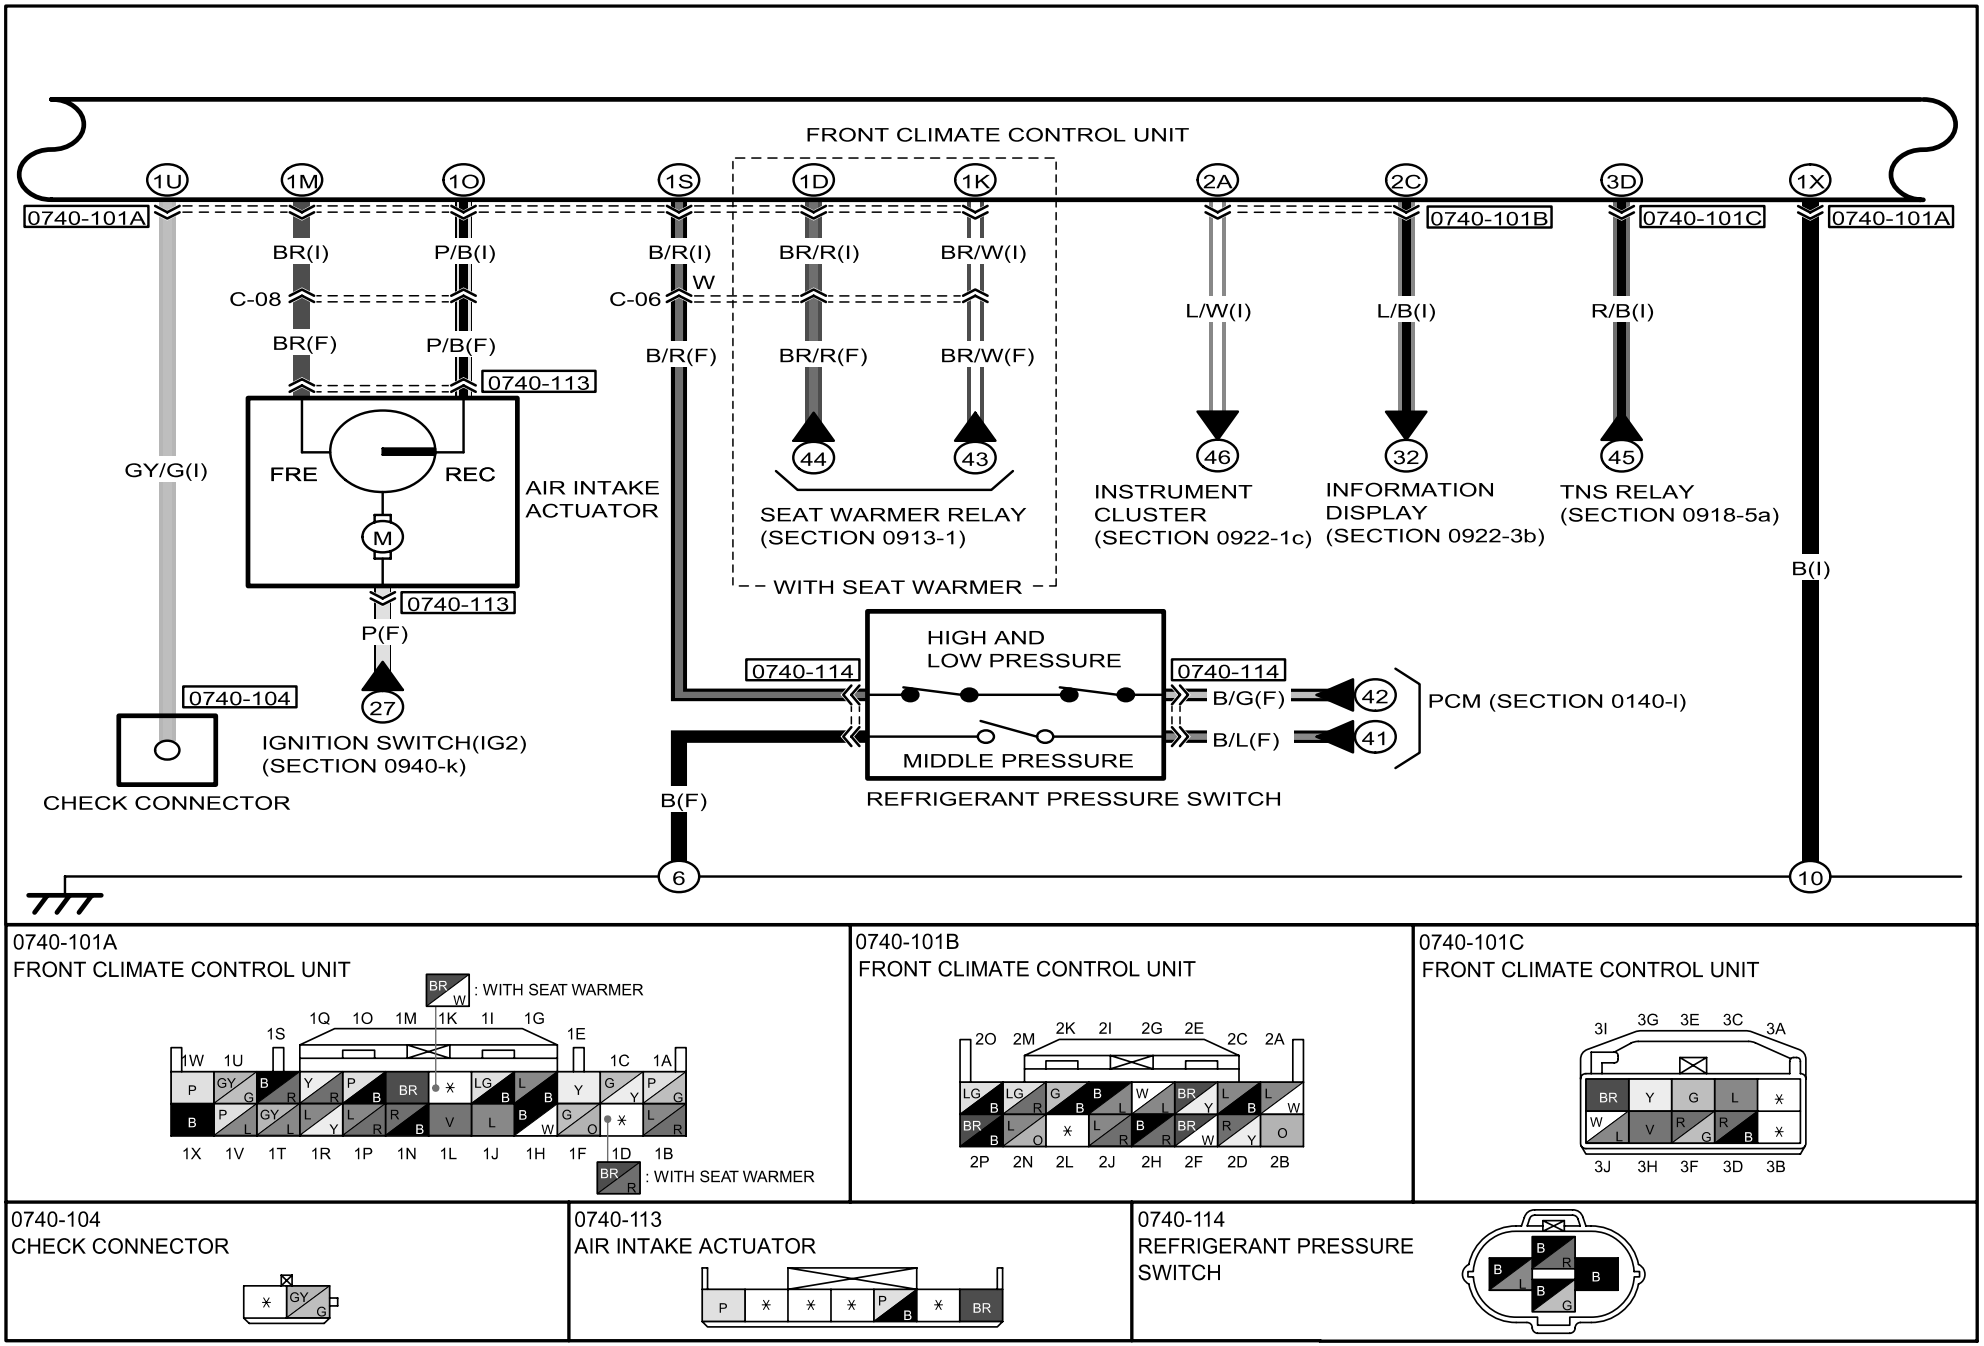

0740-101A
FRONT CLIMATE CONTROL UNIT

0740-101B
FRONT CLIMATE CONTROL UNIT


0740-101C
FRONT CLIMATE CONTROL UNIT

0740-104
CHECK CONNECTOR


0740-113
AIR INTAKE ACTUATOR

0740-114
REFRIGERANT PRESSURE SWITCH


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

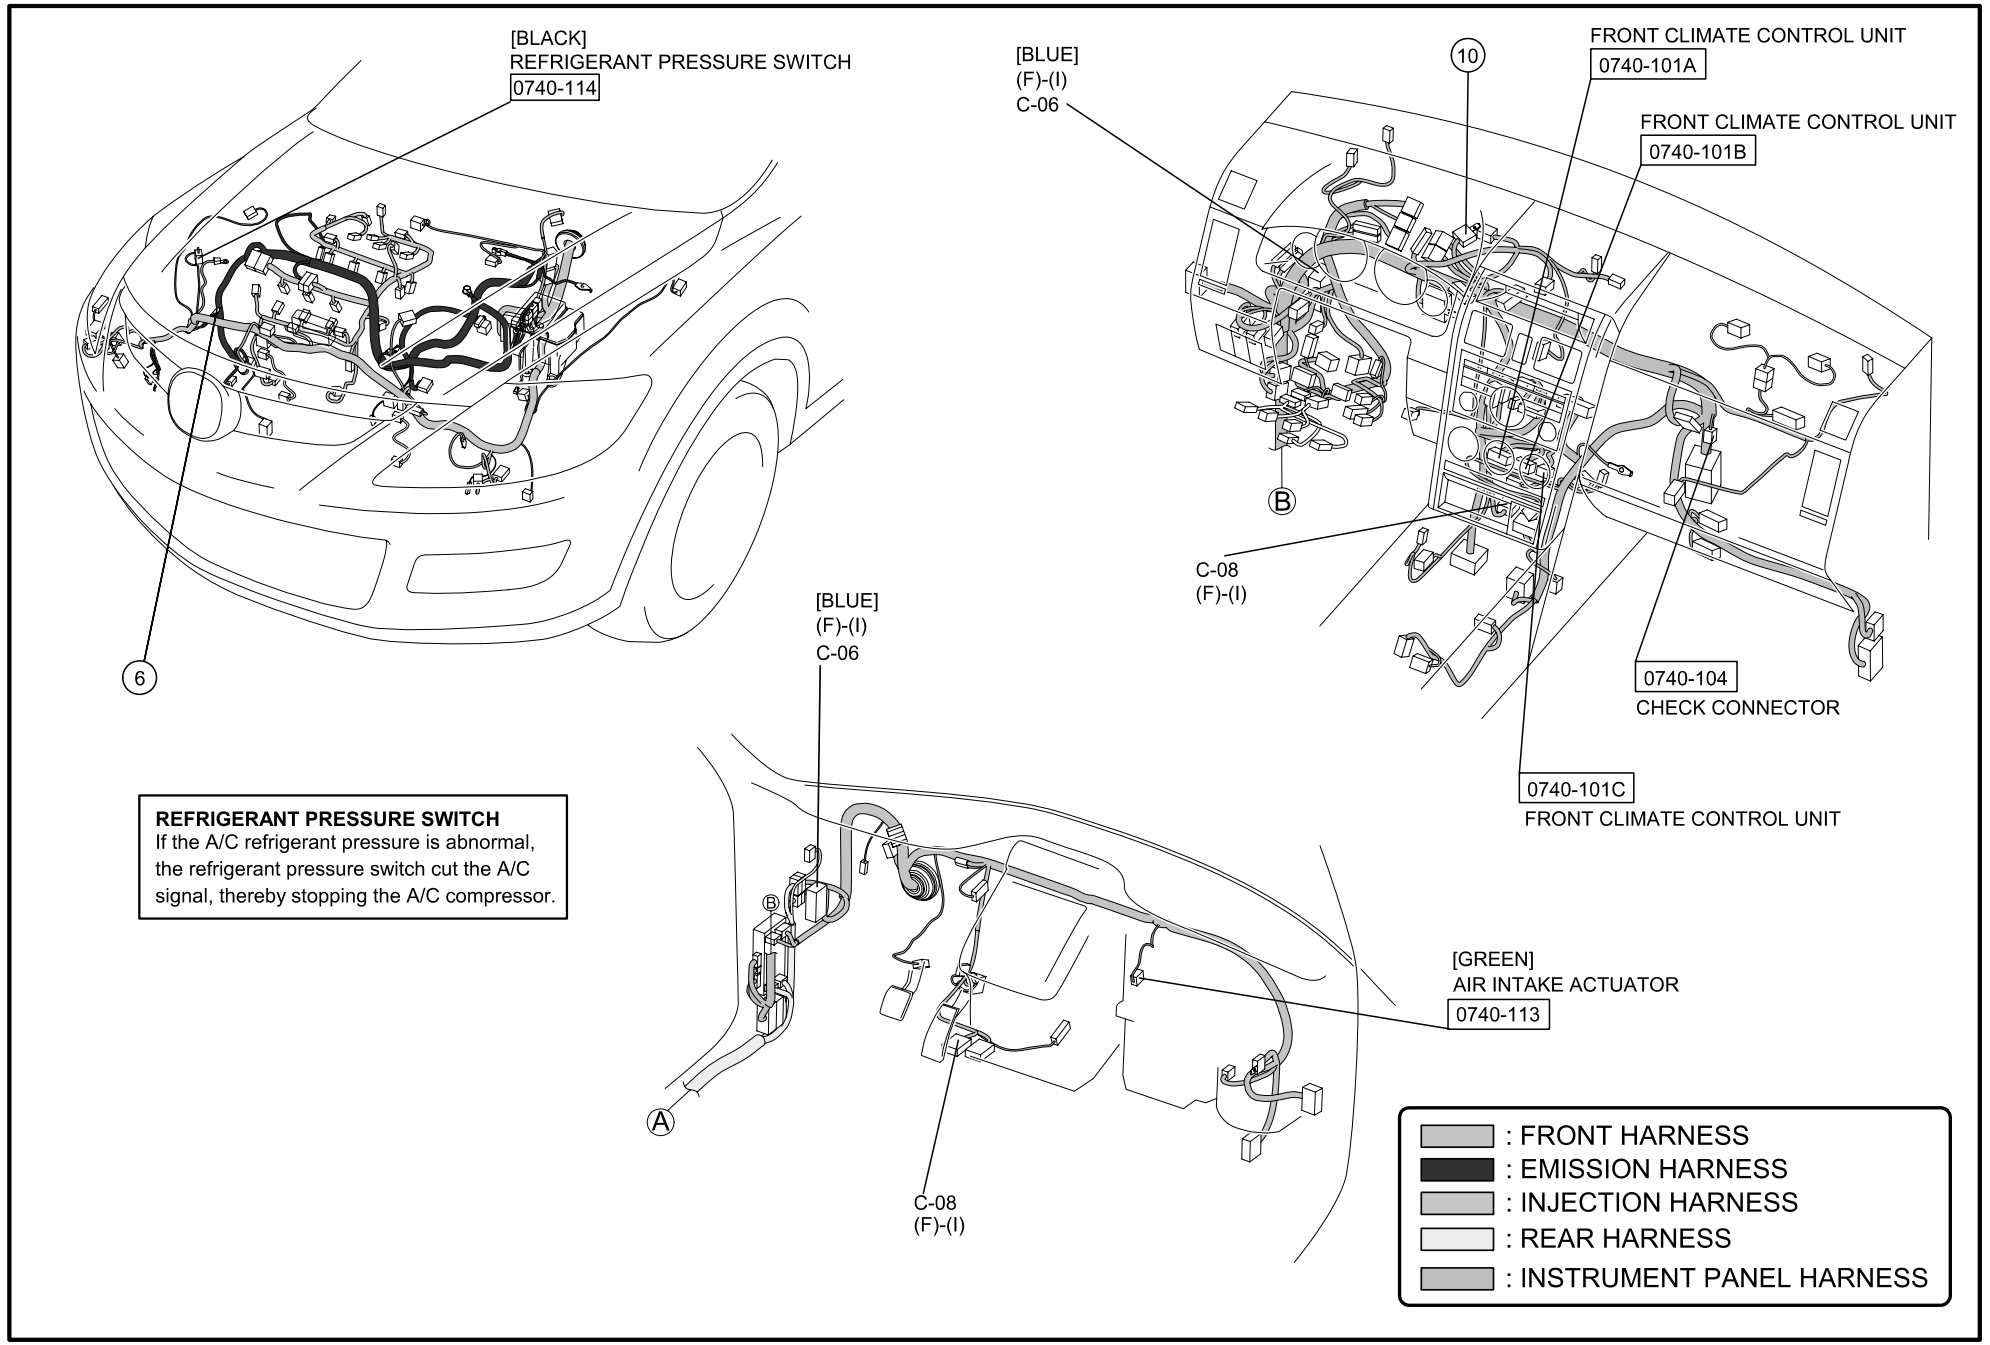


REFRIGERANT PRESSURE SWITCH
If the A/C refrigerant pressure is abnormal, the refrigerant pressure switch cut the A/C signal, thereby stopping the A/C compressor.

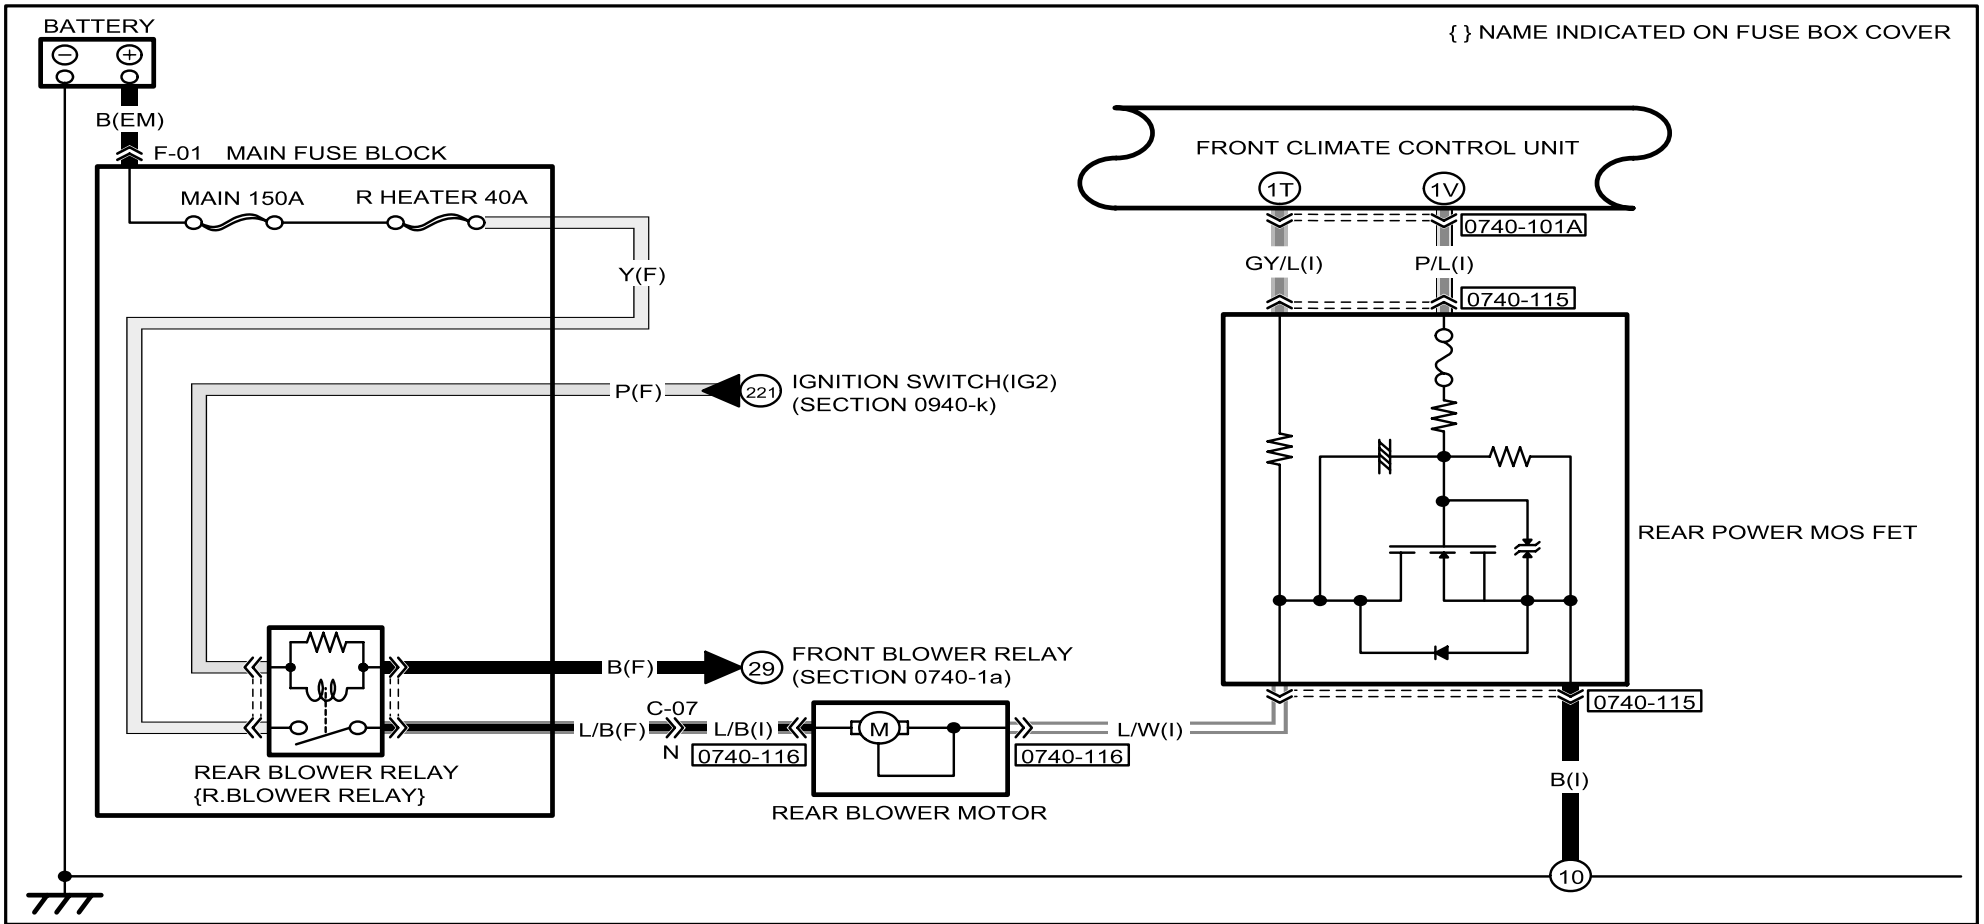


0740-101A
FRONT CLIMATE CONTROL UNIT

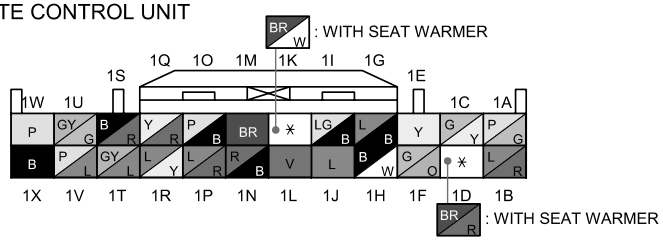


0740-115
REAR POWER MOS FET




0740-116
REAR BLOWER MOTOR




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

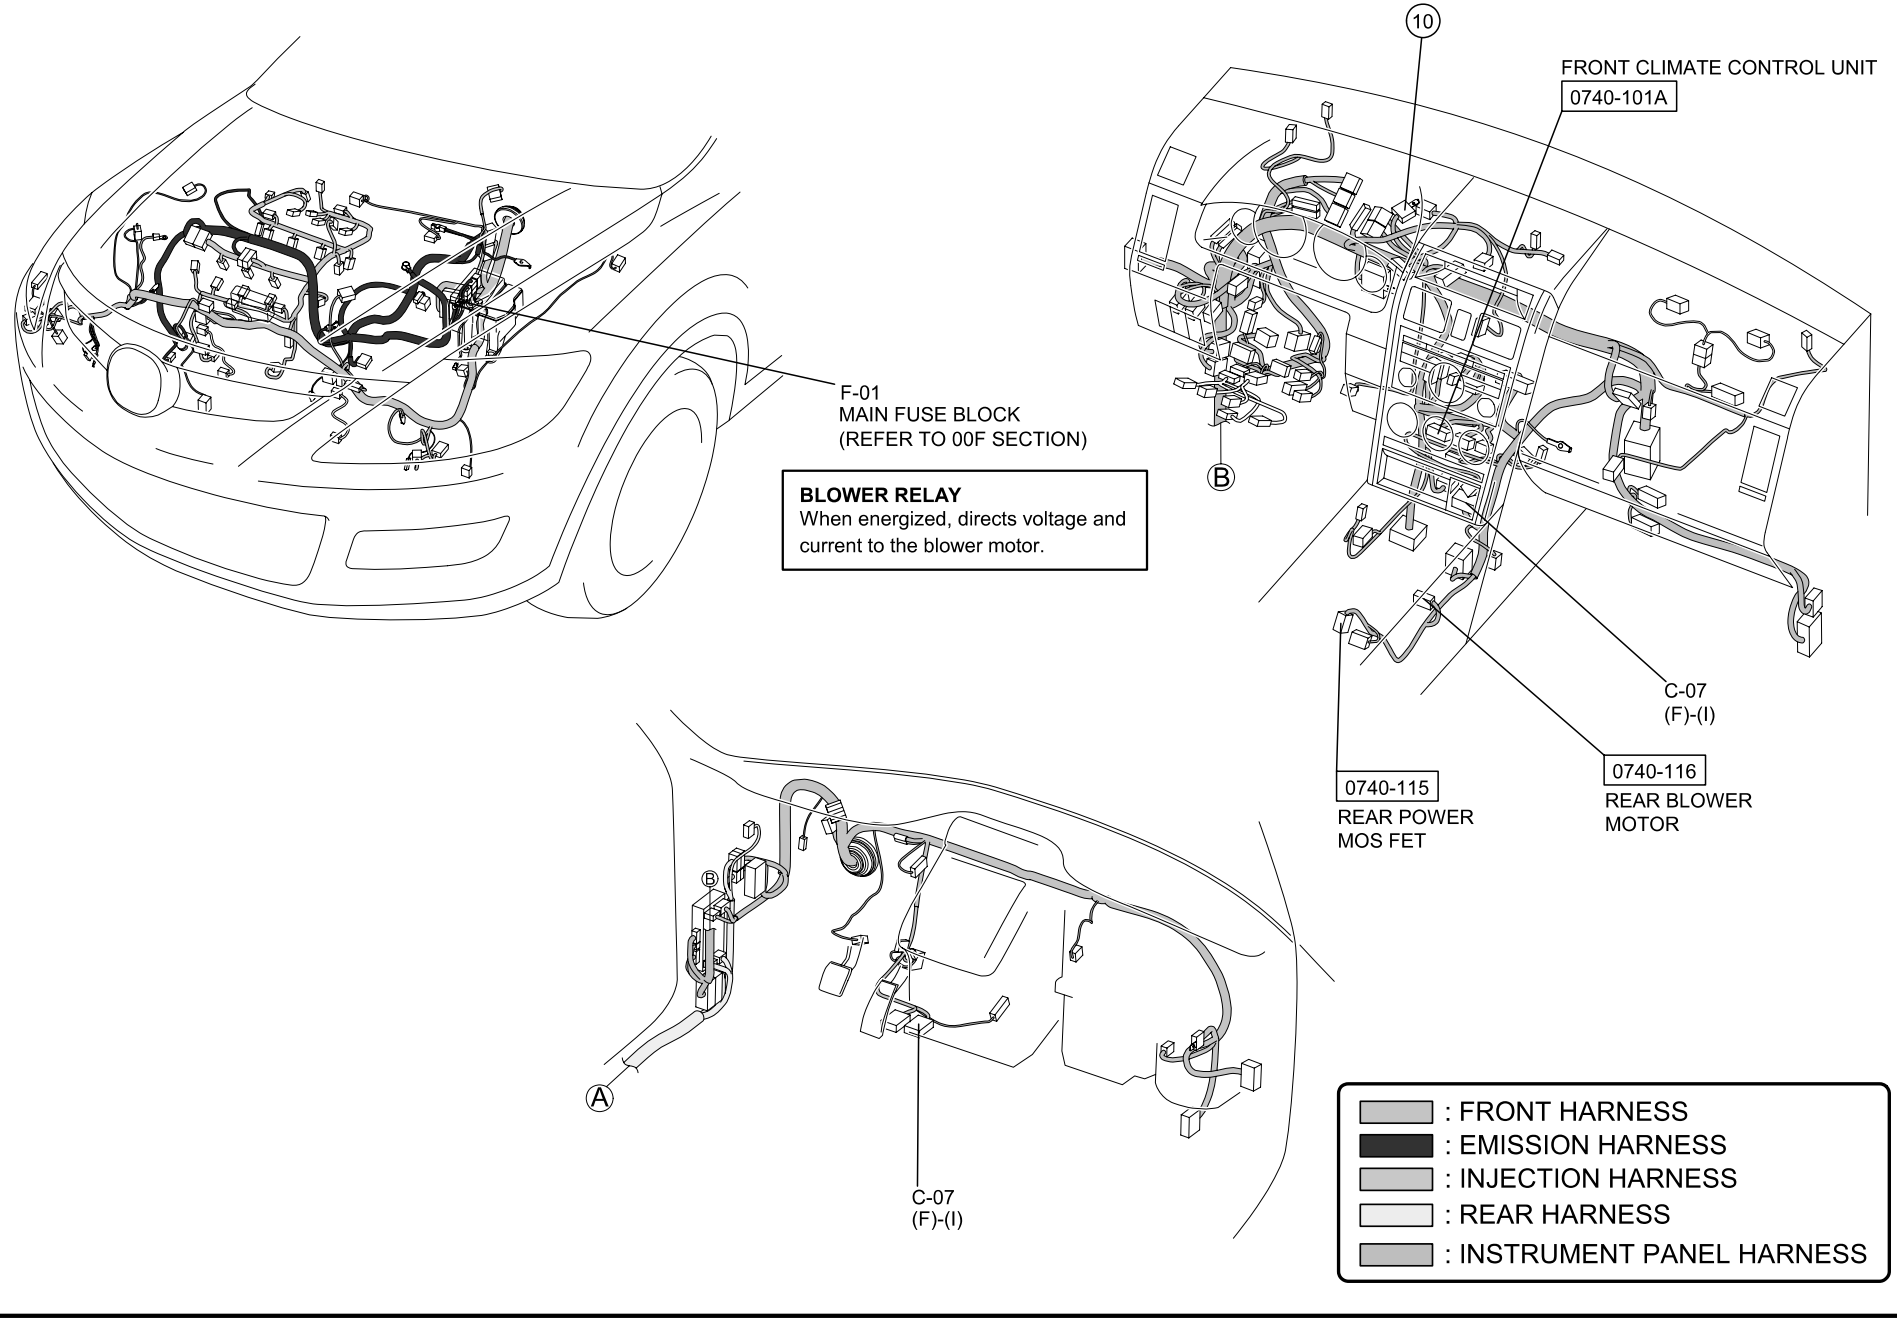

10
FRONT CLIMATE CONTROL UNIT
0740-101A
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
BLOWER RELAY
When energized, directs voltage and current to the blower motor.
C-07
(F)-(I)
0740-115
REAR POWER MOS FET
0740-116
REAR BLOWER MOTOR
A
B
C-07
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

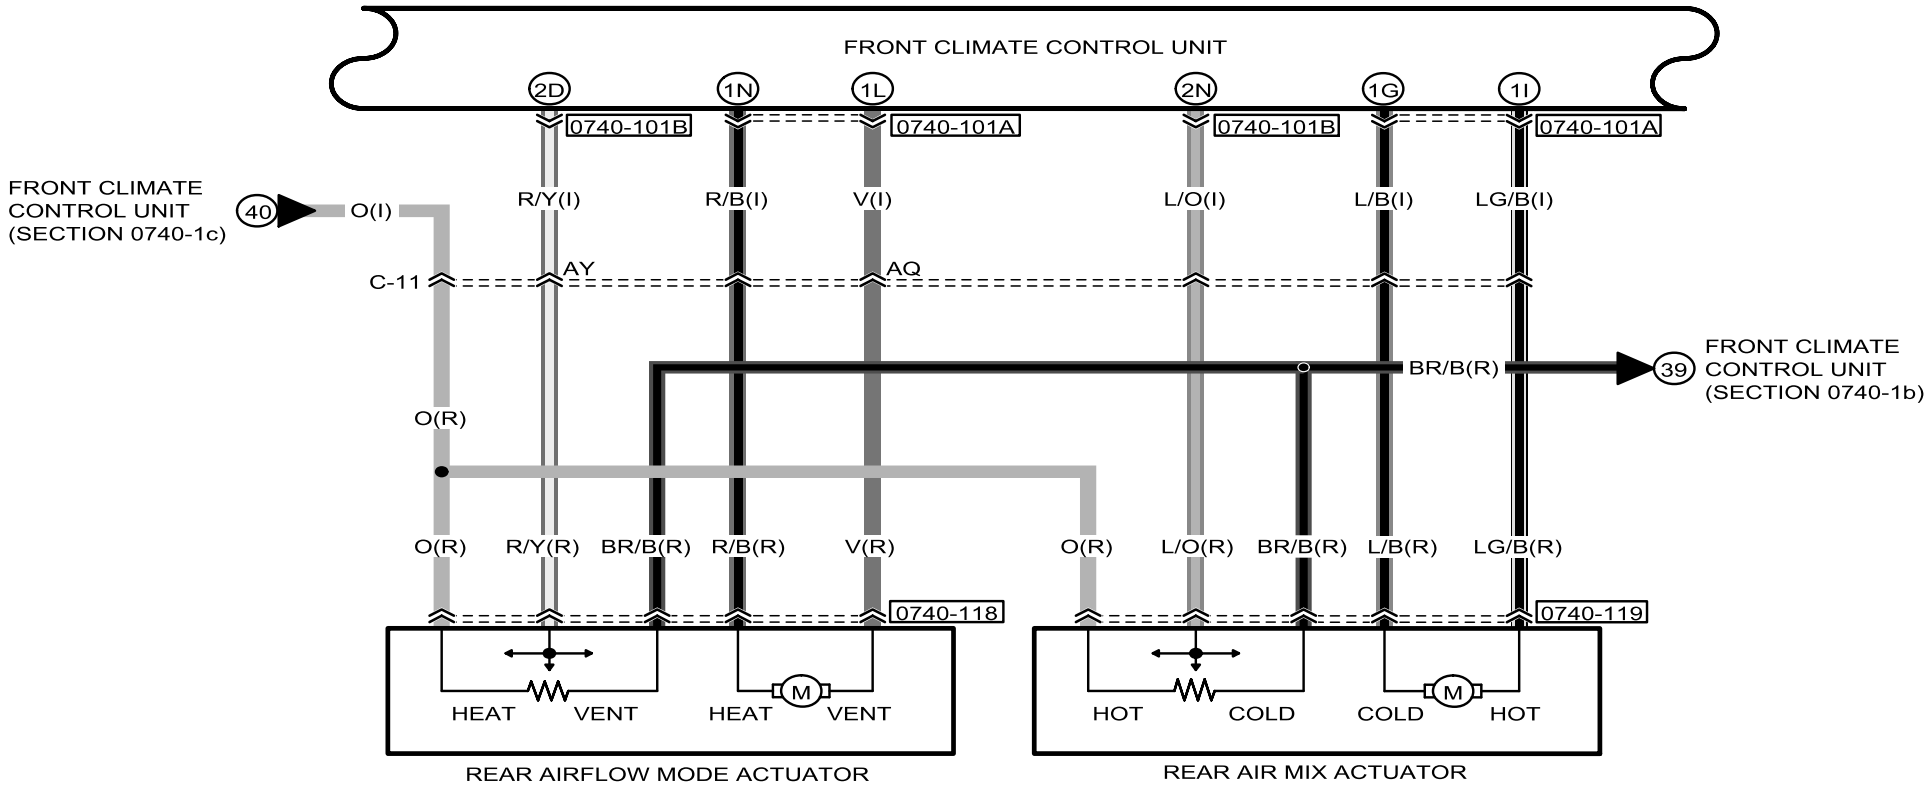


0740-101A
FRONT CLIMATE CONTROL UNIT

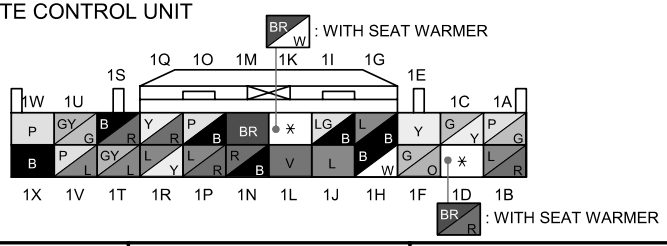


0740-101B
FRONT CLIMATE CONTROL UNIT

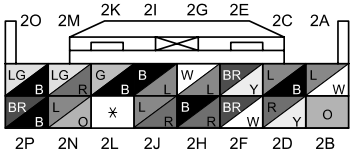


0740-118
REAR AIRFLOW MODE ACTUATOR




0740-119
REAR AIR MIX ACTUATOR




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

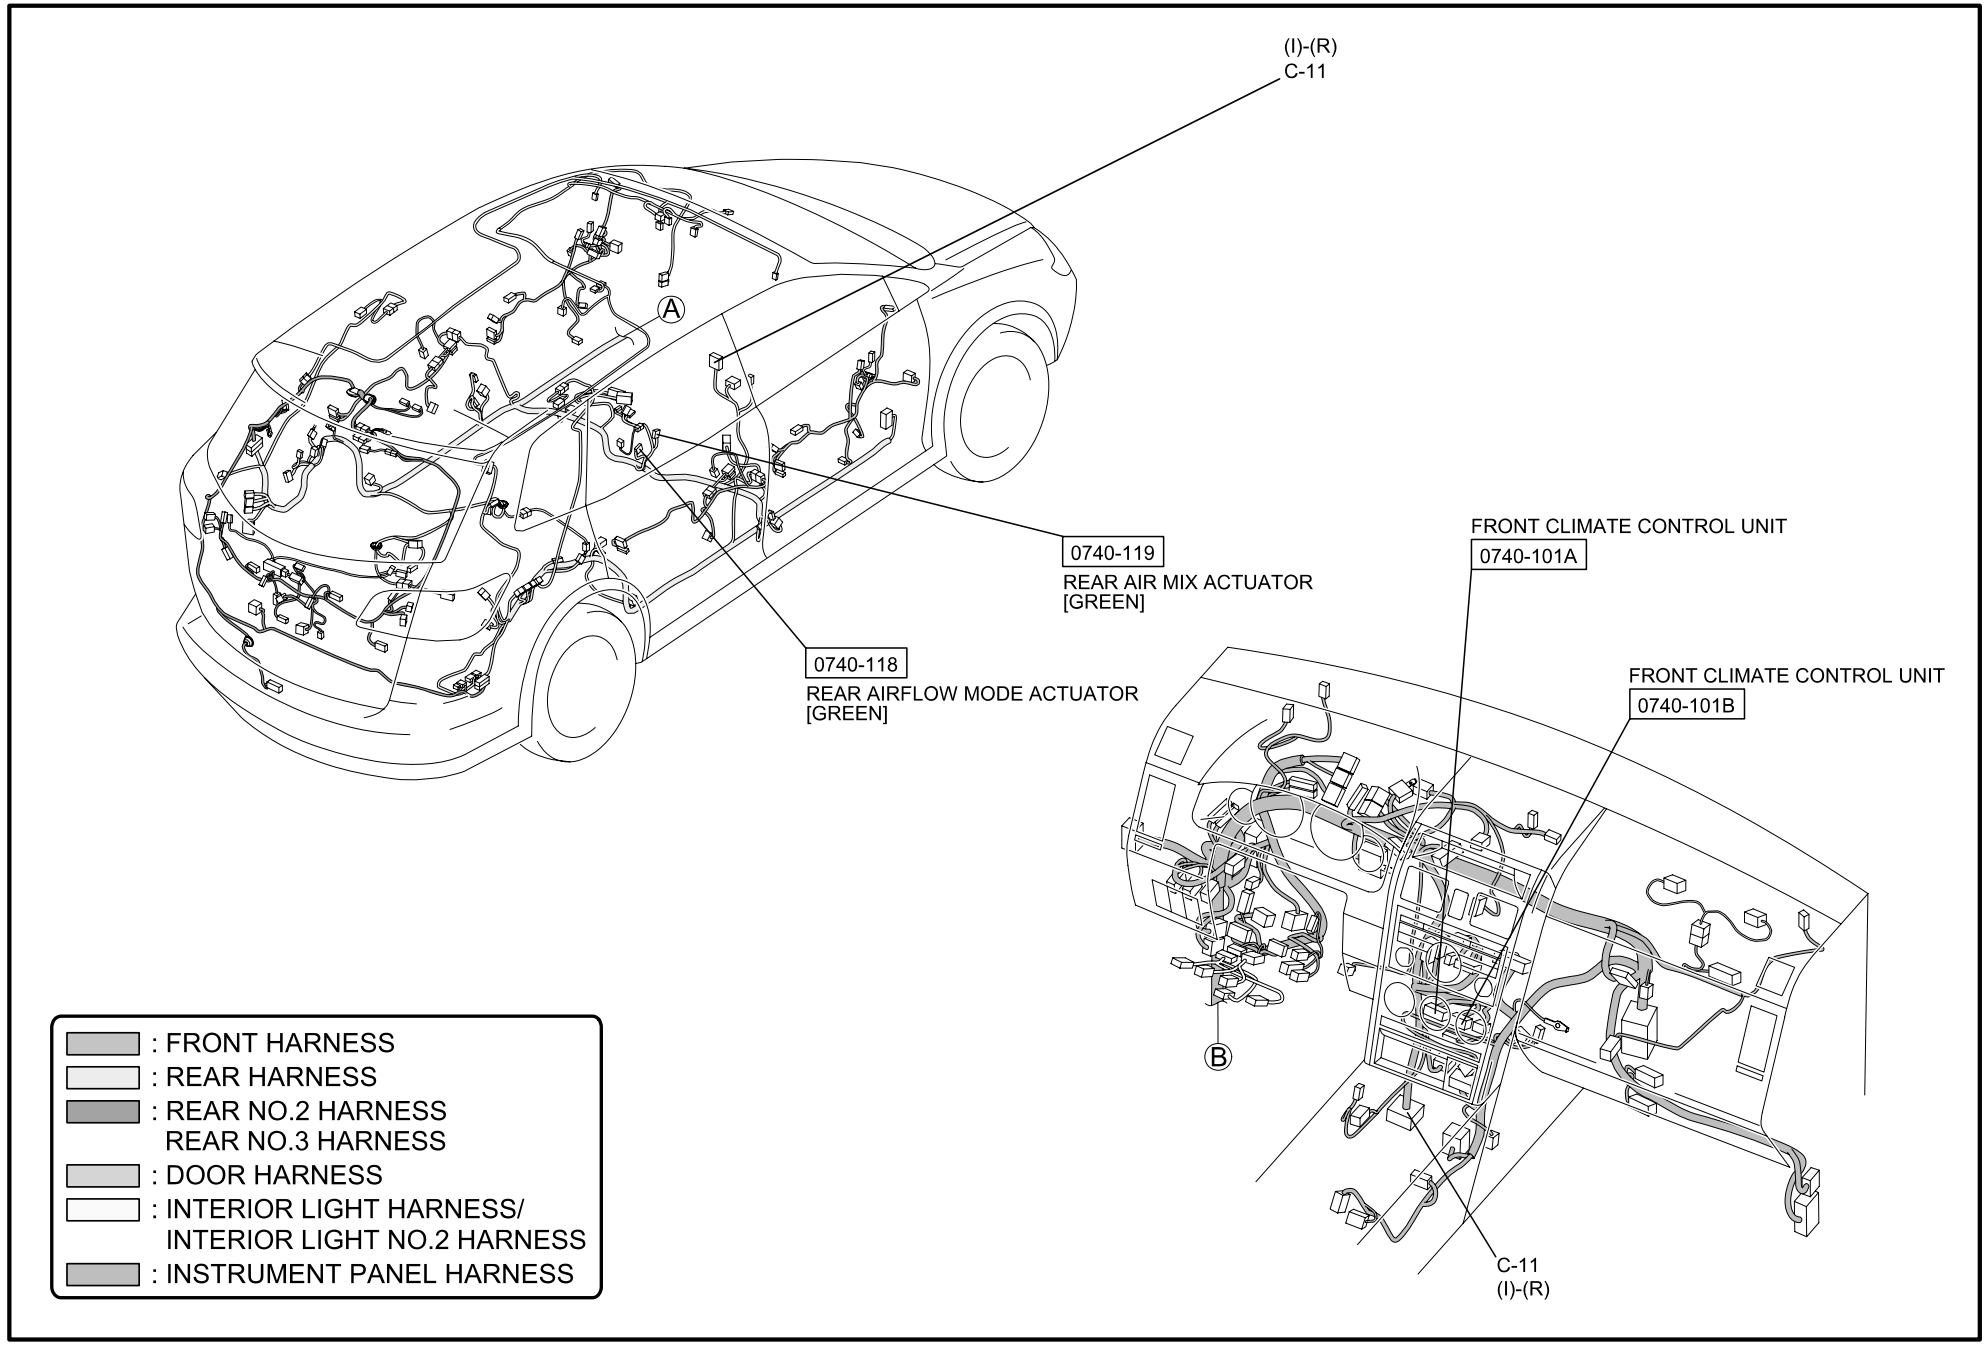
(I)-(R)
C-11
A
0740-119
REAR AIR MIX ACTUATOR
[GREEN]
0740-118
REAR AIRFLOW MODE ACTUATOR
[GREEN]
FRONT CLIMATE CONTROL UNIT
0740-101A
FRONT CLIMATE CONTROL UNIT
0740-101B
B
C-11
(I)-(R)
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

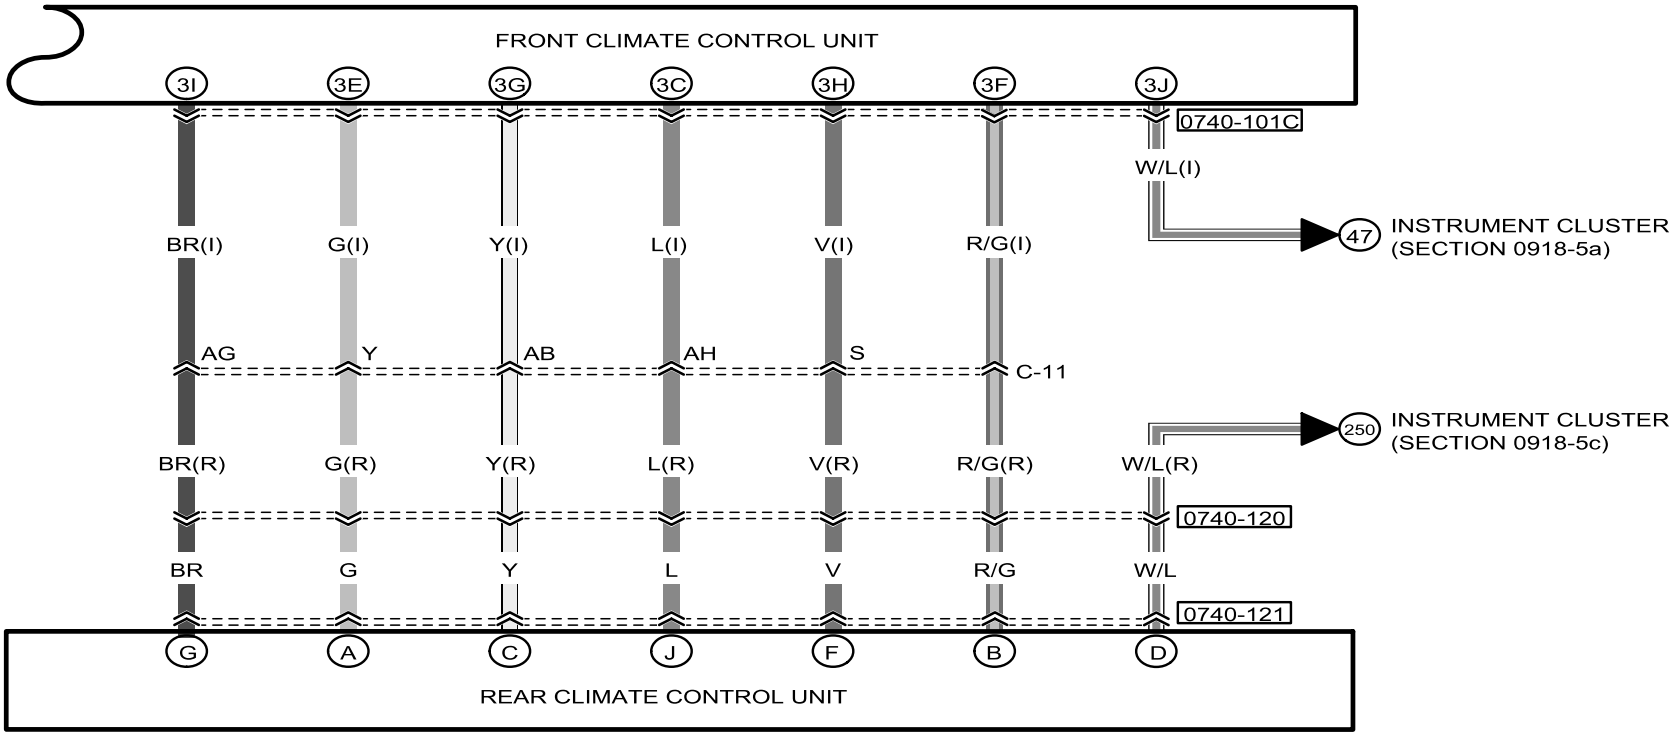


106

0740-101C
FRONT CLIMATE CONTROL UNIT

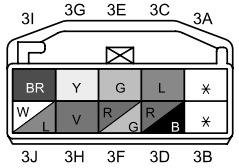


0740-120
REAR HARNESS-SHORT CORD


REAR HARNESS

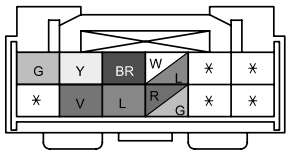


SHORT CORD

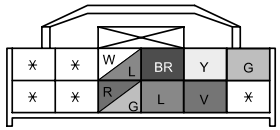


0740-121
REAR CLIMATE CONTROL UNIT

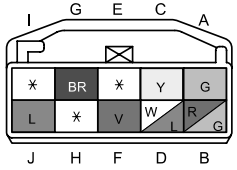


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

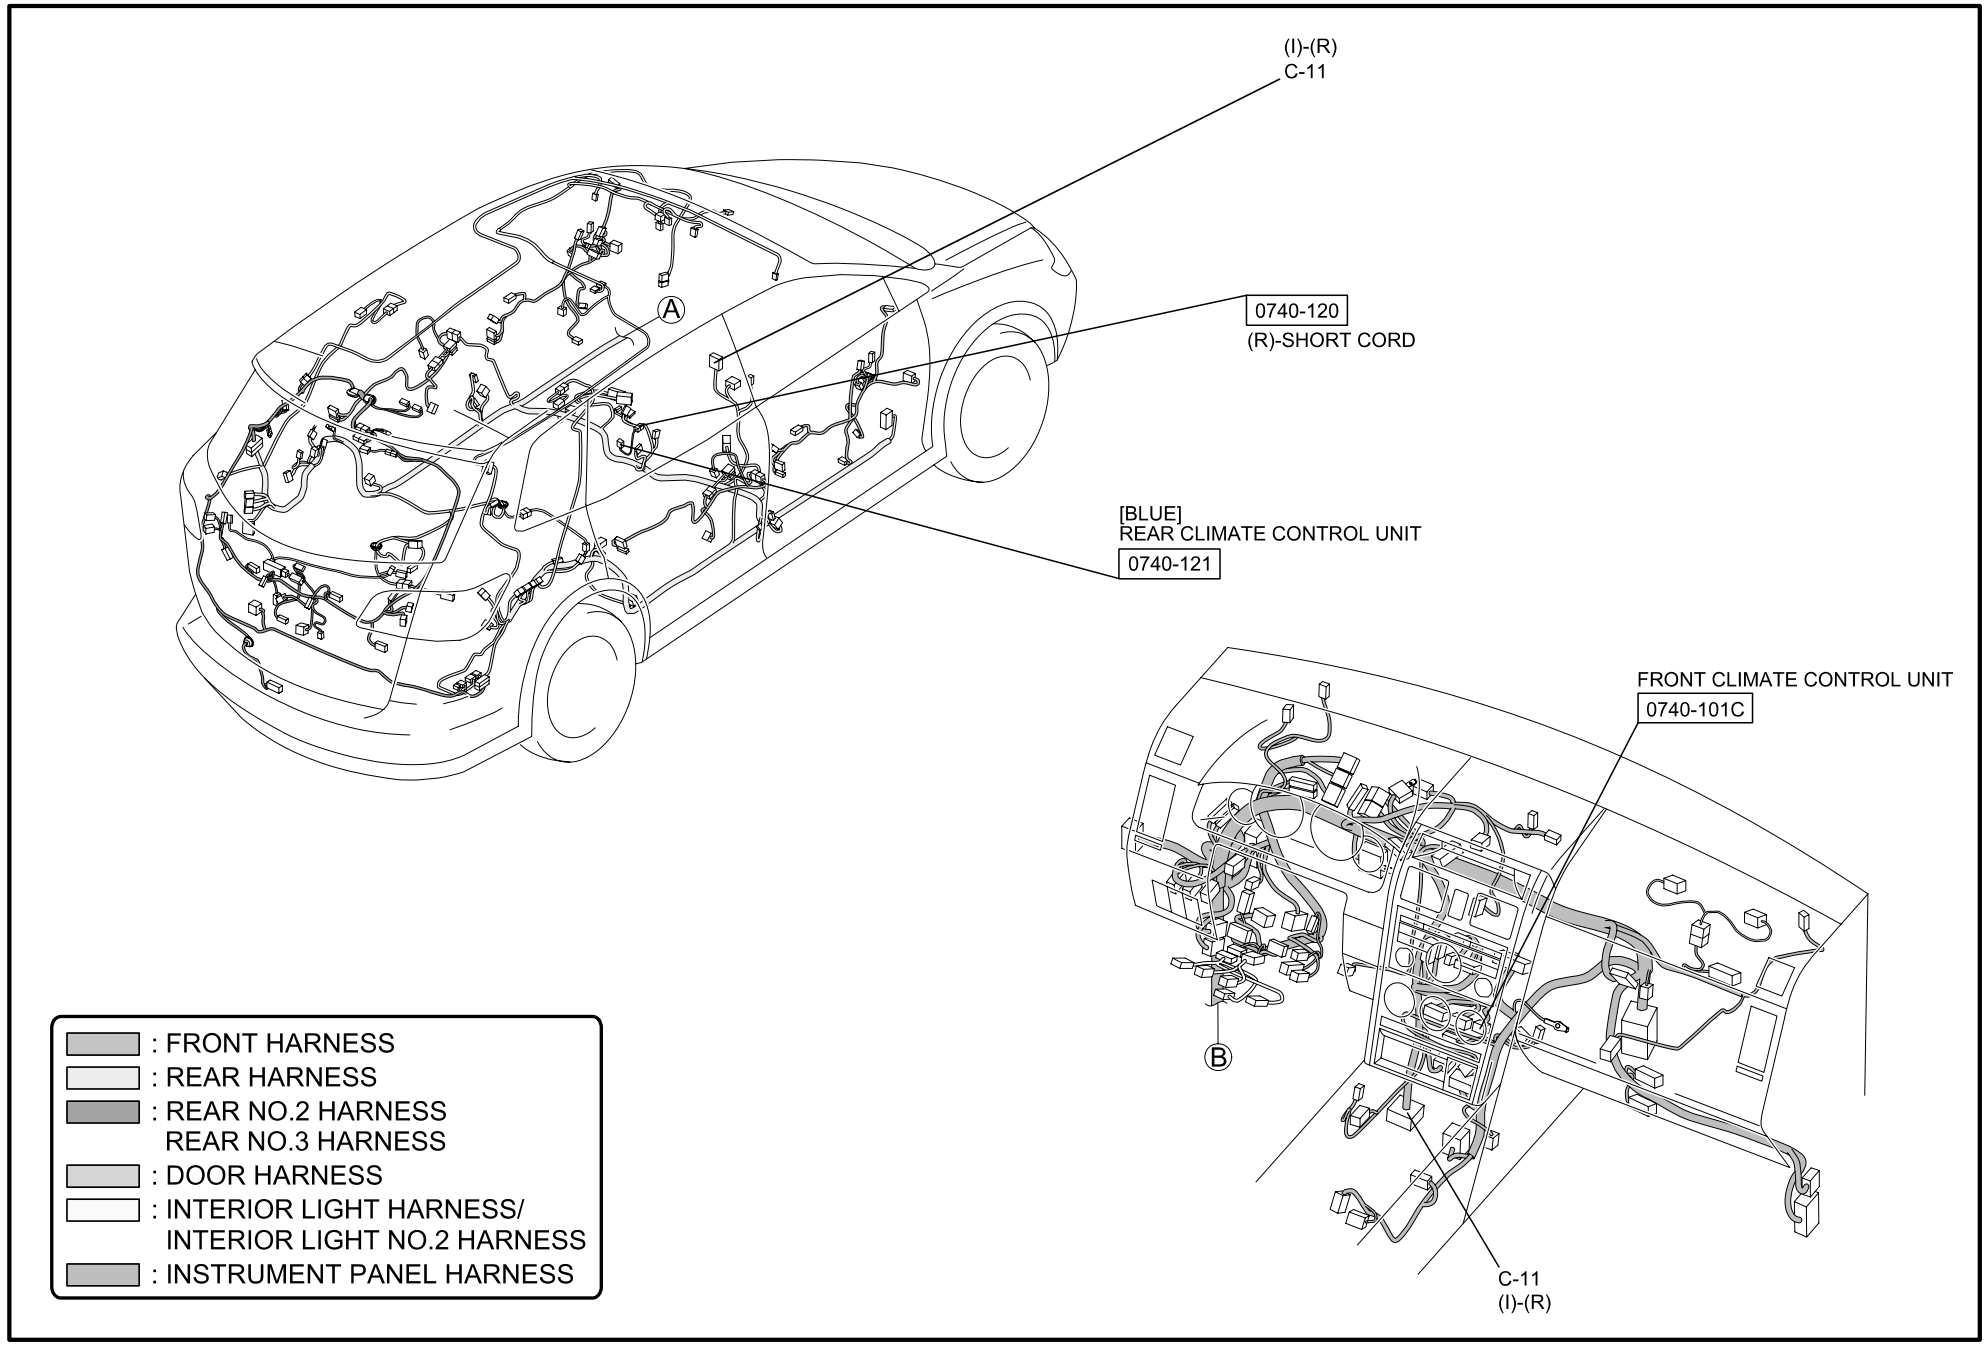

(I)-(R)
C-11
0740-120
(R)-SHORT CORD
[BLUE]
REAR CLIMATE CONTROL UNIT
0740-121
A
FRONT CLIMATE CONTROL UNIT
0740-101C
B
C-11
(I)-(R)
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

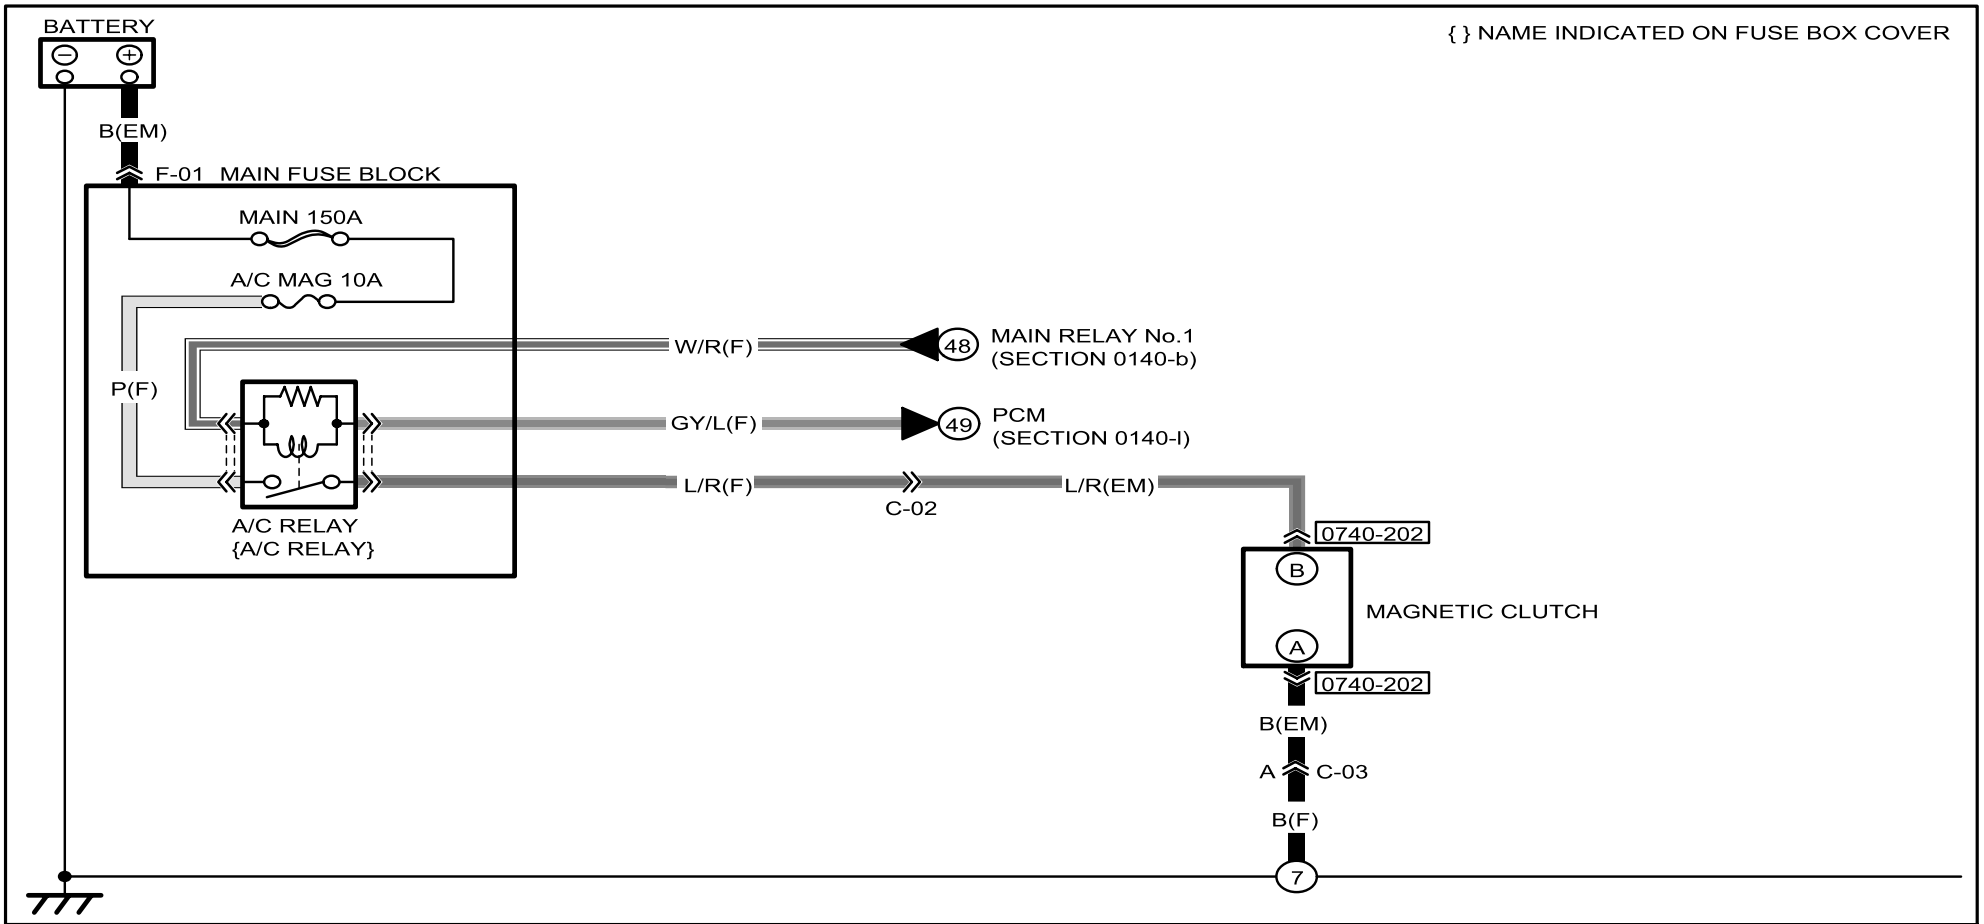


0740-202
MAGNETIC CLUTCH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

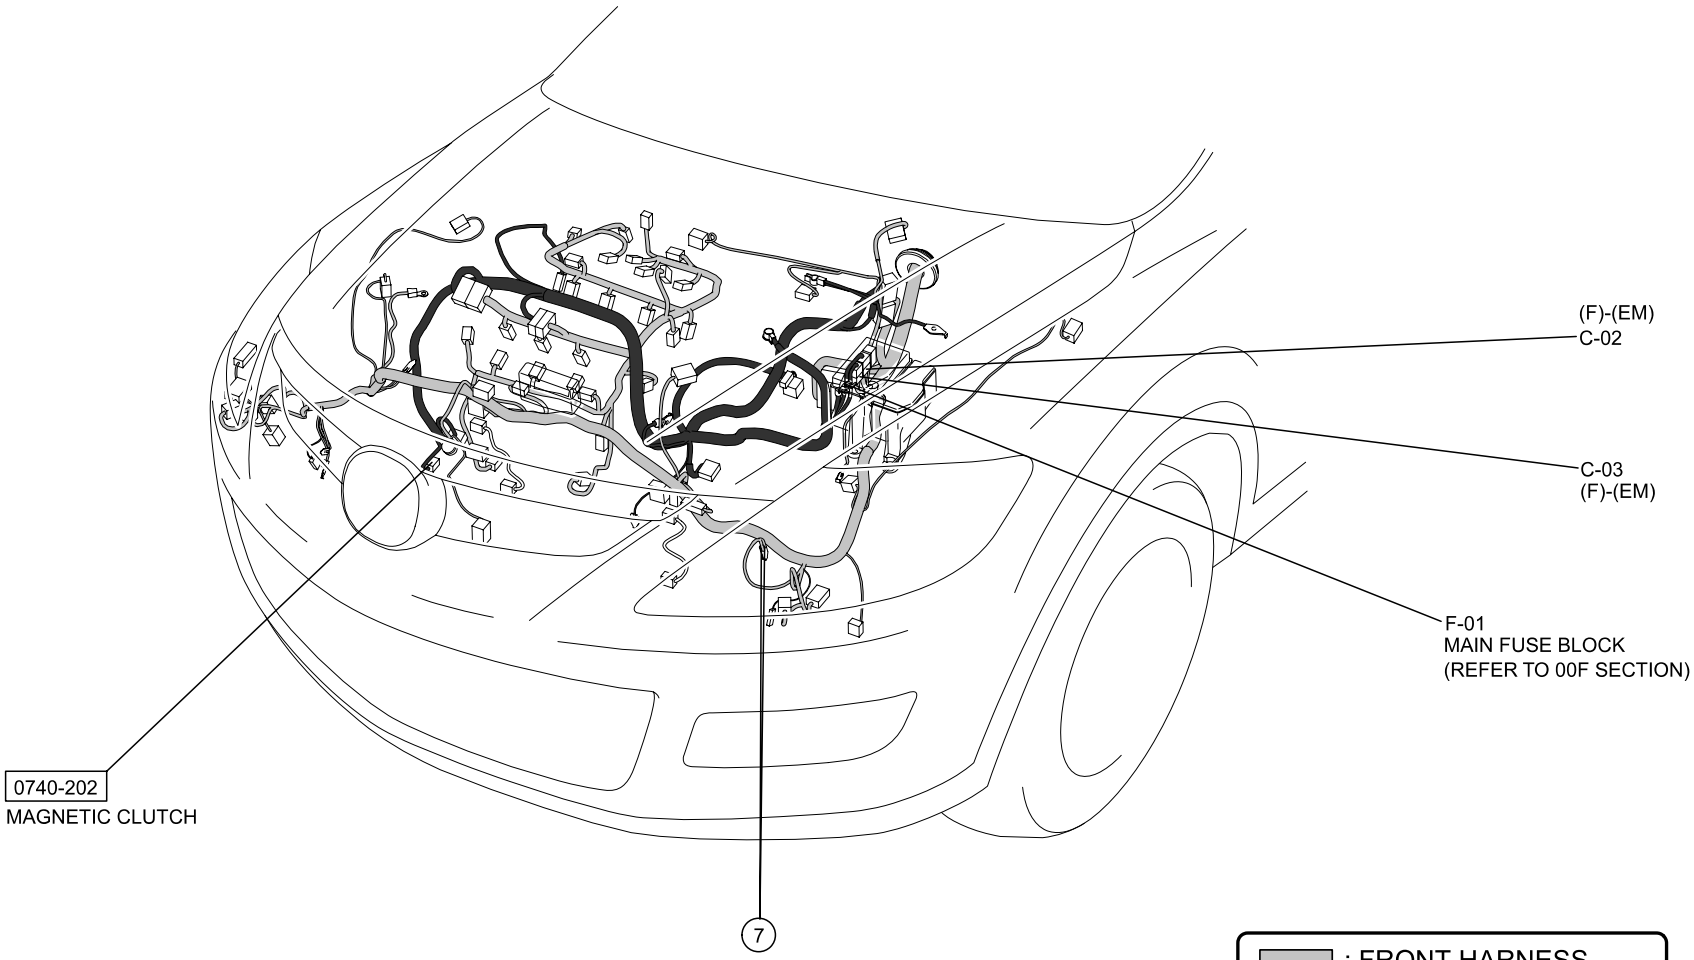

(F)-(EM)
C-02
C-03
(F)-(EM)
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0740-202
MAGNETIC CLUTCH
7
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS

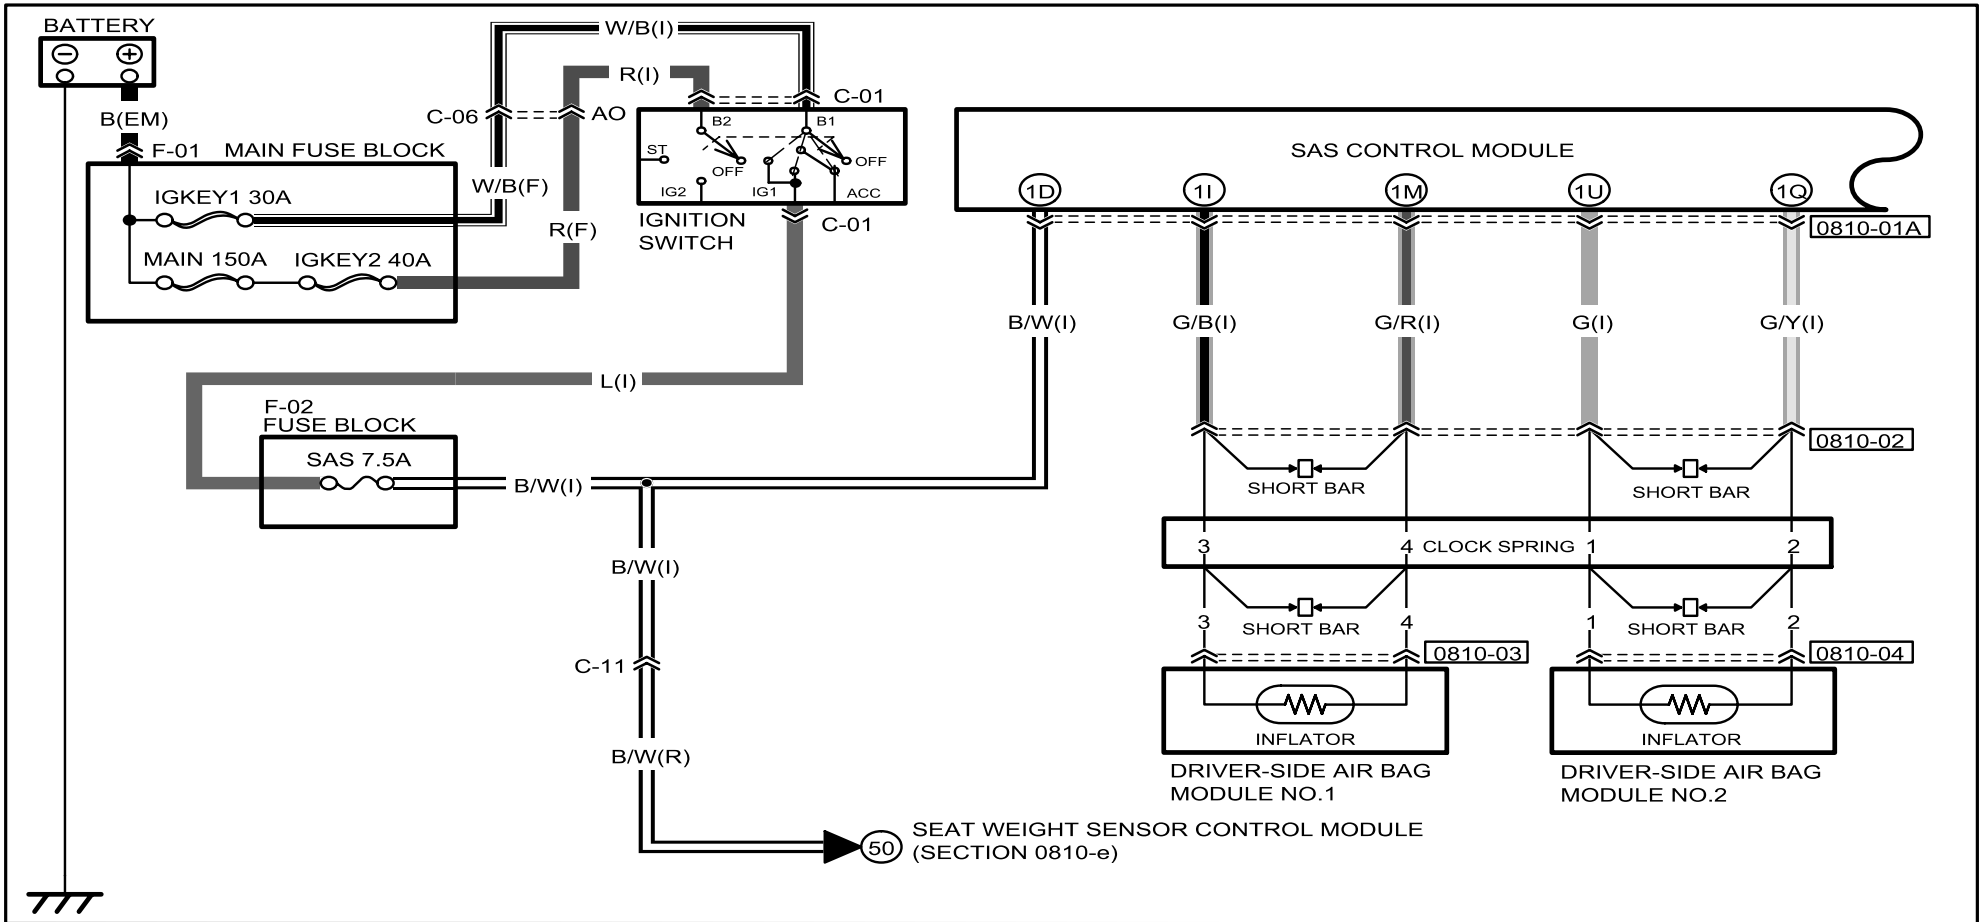

0810-01A
SAS CONTROL MODULE

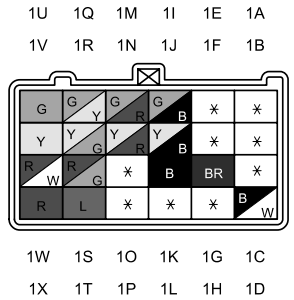


0810-02
INSTRUMENT PANEL HARNESS-CLOCK SPRING

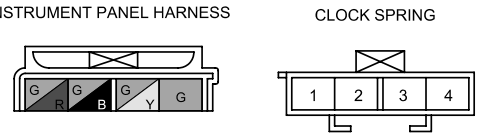


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-03
DRIVER-SIDE AIR BAG MODULE NO.1




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-04
DRIVER-SIDE AIR BAG MODULE NO.2



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

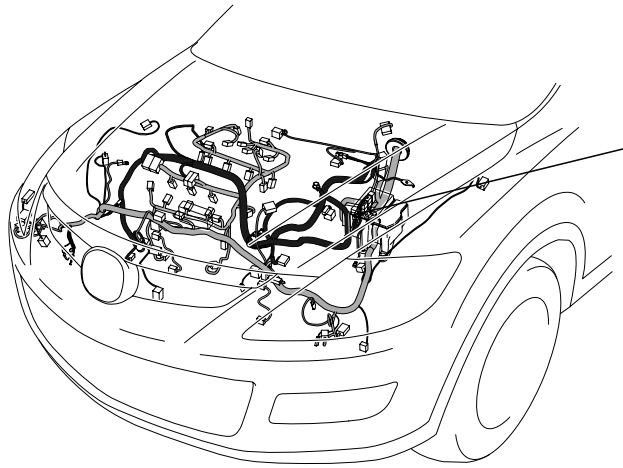

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)


[BLUE]
(F)-(I)
C-06

IGNITION SWITCH
C-01

[ORANGE]
DRIVER-SIDE AIR
BAG MODULE NO.2
0810-04

0810-03
DRIVER-SIDE AIR
BAG MODULE NO.1
[YELLOW]


0810-02
(I)-CLOCK SPRING
[YELLOW]

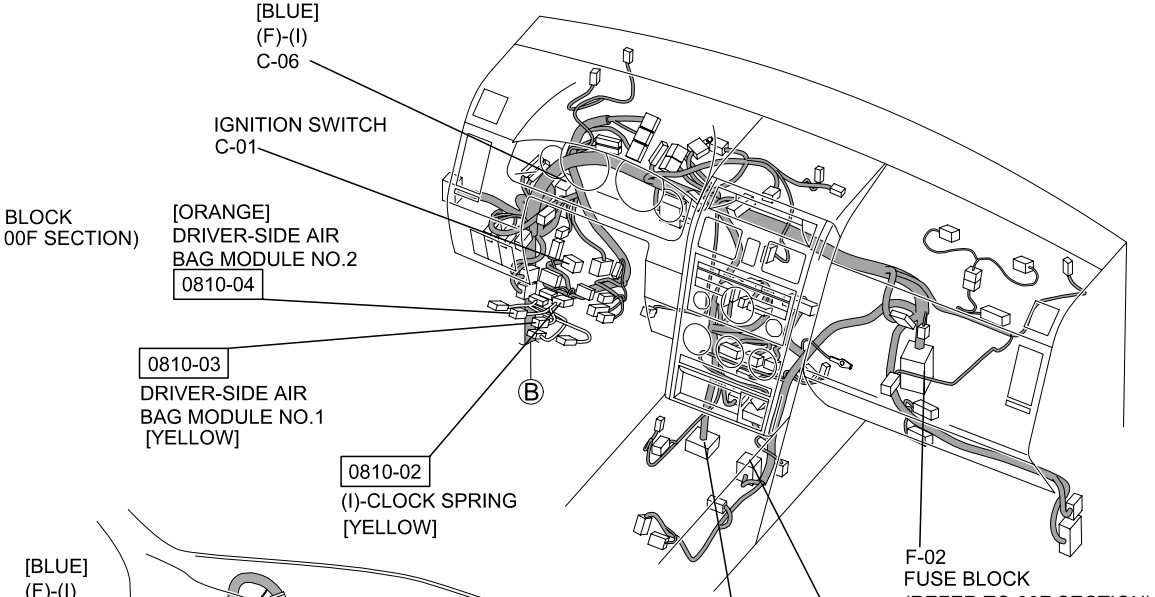

F-02
FUSE BLOCK
(REFER TO 00F SECTION)


C-11
(I)-(R)

0810-01A
SAS CONTROL MODULE

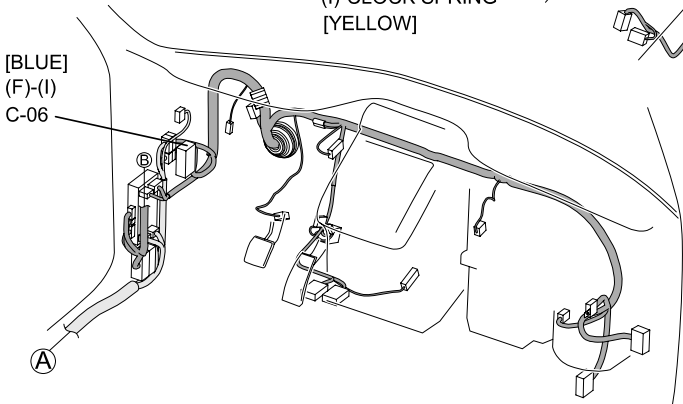


[BLUE]
(F)-(I)
C-06

(I)-(R)
C-11

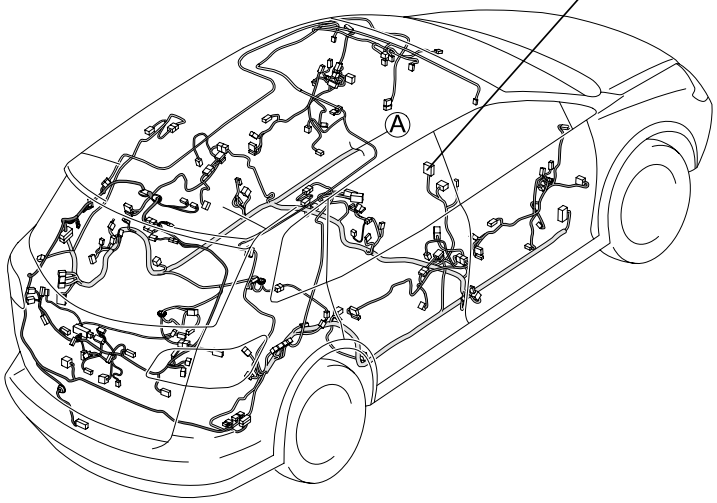


SAS CONTROL MODULE
Monitors shock level when collisions occur. Also, monitors air bag electrical system components and connections to prevent mis-operation or no operation of the air bag.


: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

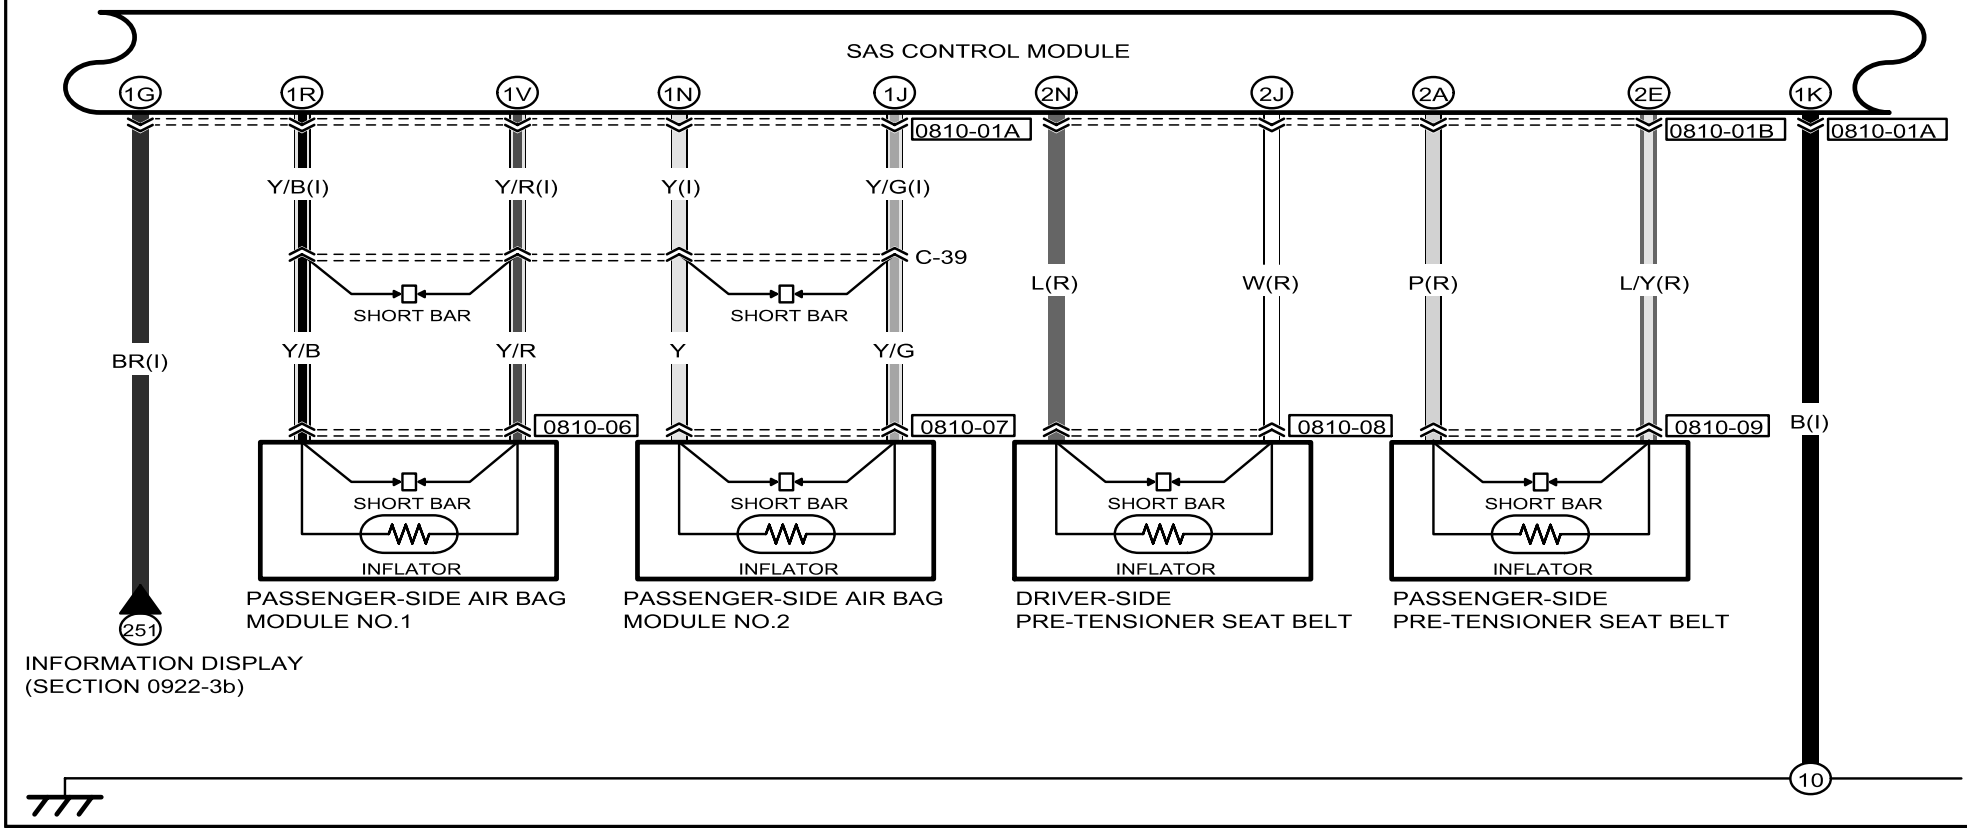


0810-01A
SAS CONTROL MODULE

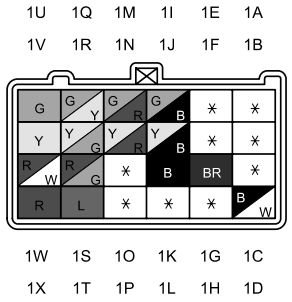


0810-01B
SAS CONTROL MODULE

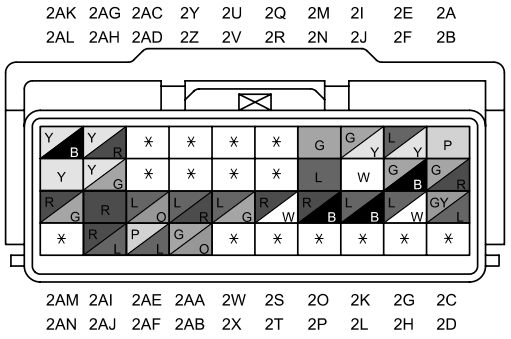


0810-06
PASSENGER-SIDE
AIR BAG MODULE NO.1




0810-07
PASSENGER-SIDE
AIR BAG MODULE NO.2




0810-08
DRIVER-SIDE
PRE-TENSIONER SEAT BELT




0810-09
PASSENGER-SIDE
PRE-TENSIONER SEAT BELT




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

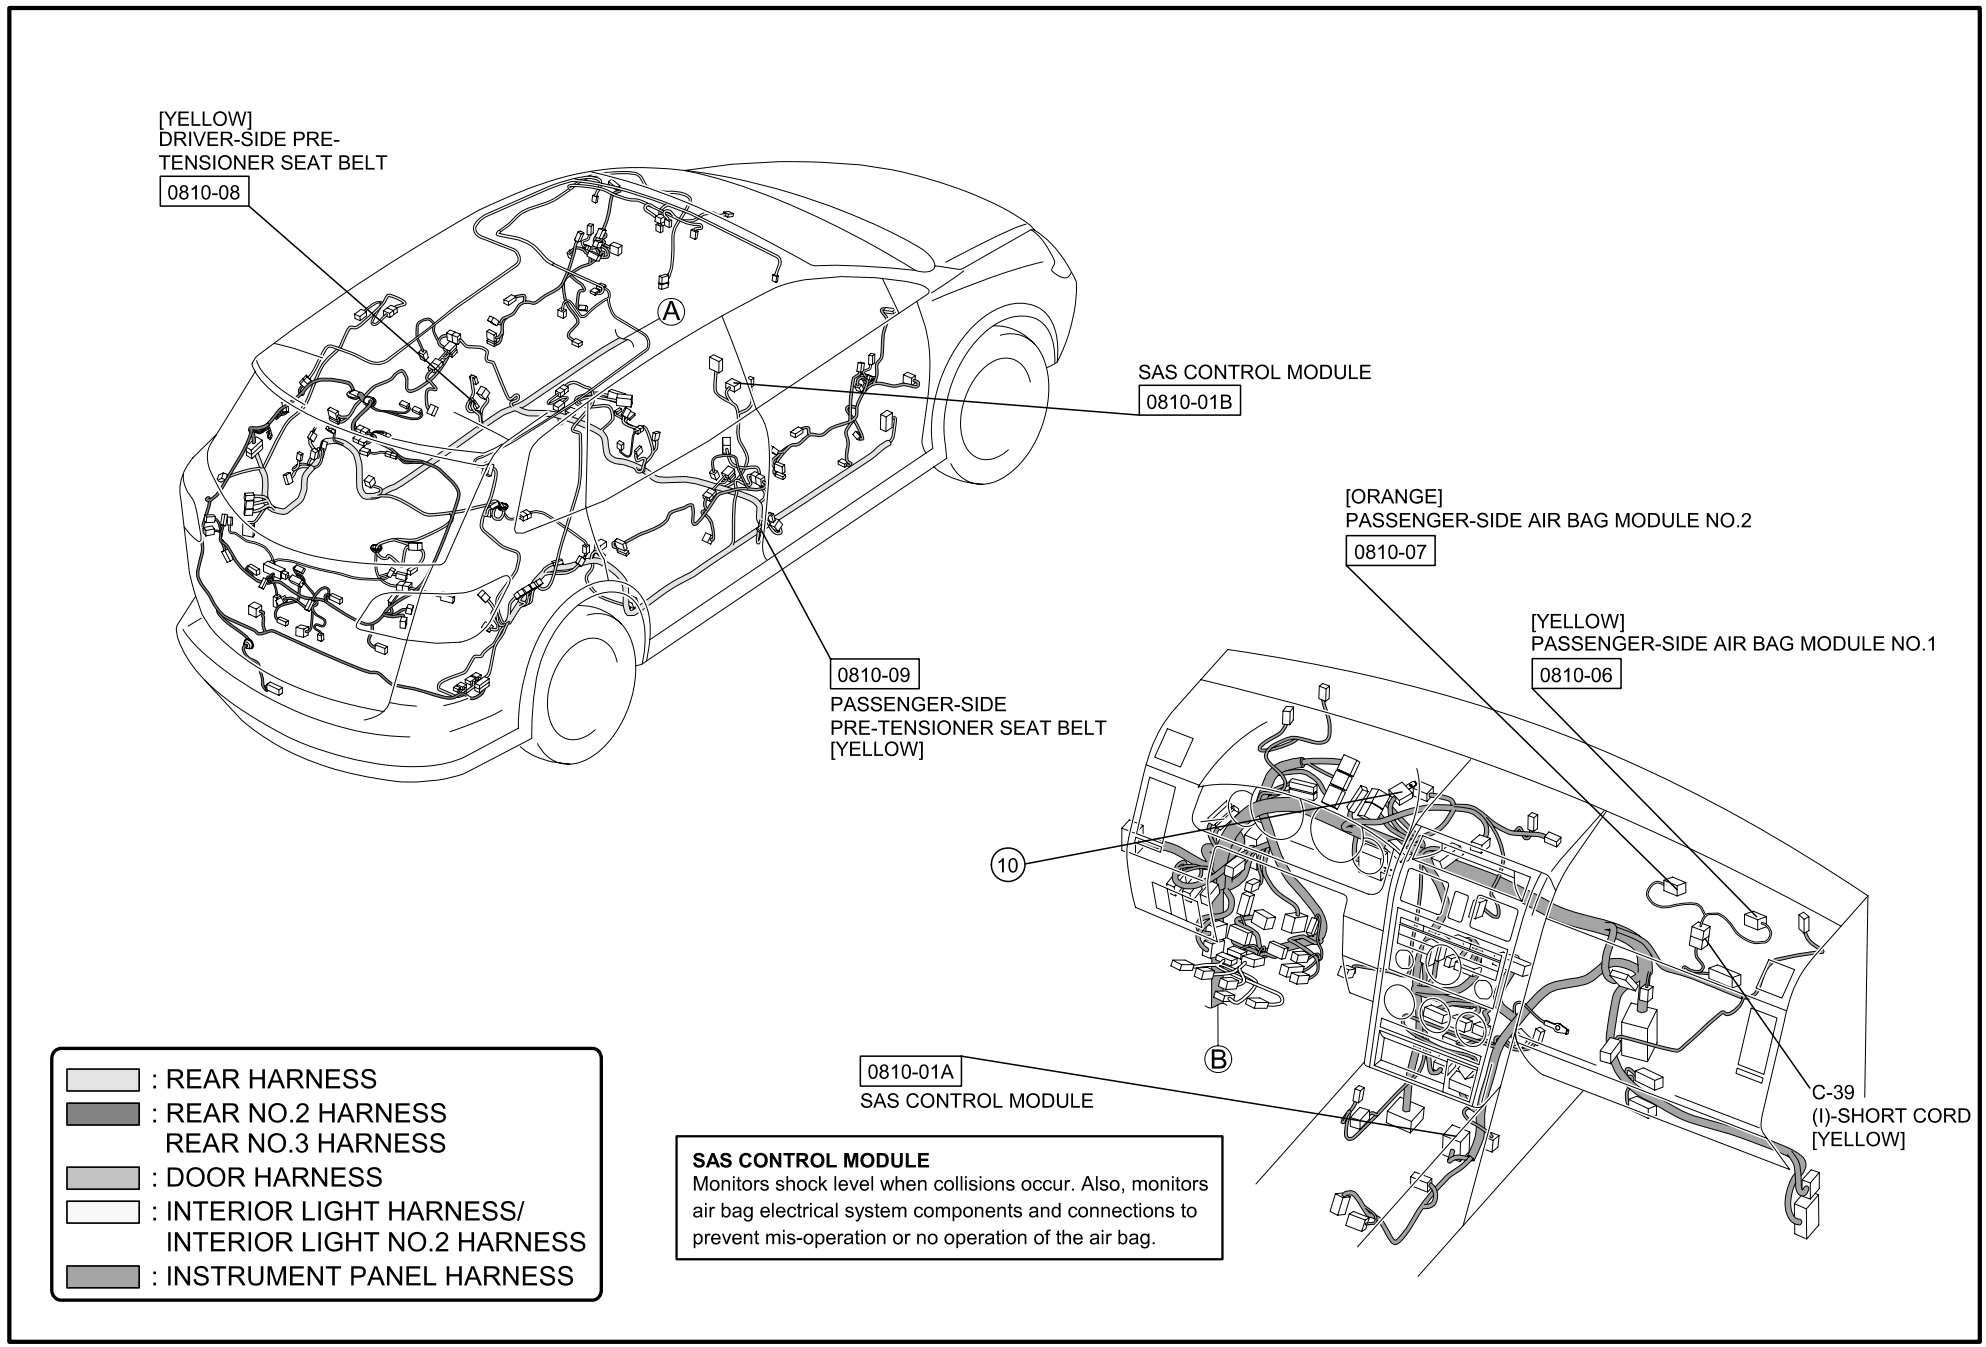

[YELLOW]
DRIVER-SIDE PRE-
TENSIONER SEAT BELT
0810-08
A
SAS CONTROL MODULE
0810-01B
0810-09
PASSENGER-SIDE
PRE-TENSIONER SEAT BELT
[YELLOW]
[ORANGE]
PASSENGER-SIDE AIR BAG MODULE NO.2
0810-07
[YELLOW]
PASSENGER-SIDE AIR BAG MODULE NO.1
0810-06
10
B
0810-01A
SAS CONTROL MODULE
C-39
(I)-SHORT CORD
[YELLOW]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS
SAS CONTROL MODULE
Monitors shock level when collisions occur. Also, monitors air bag electrical system components and connections to prevent mis-operation or no operation of the air bag.

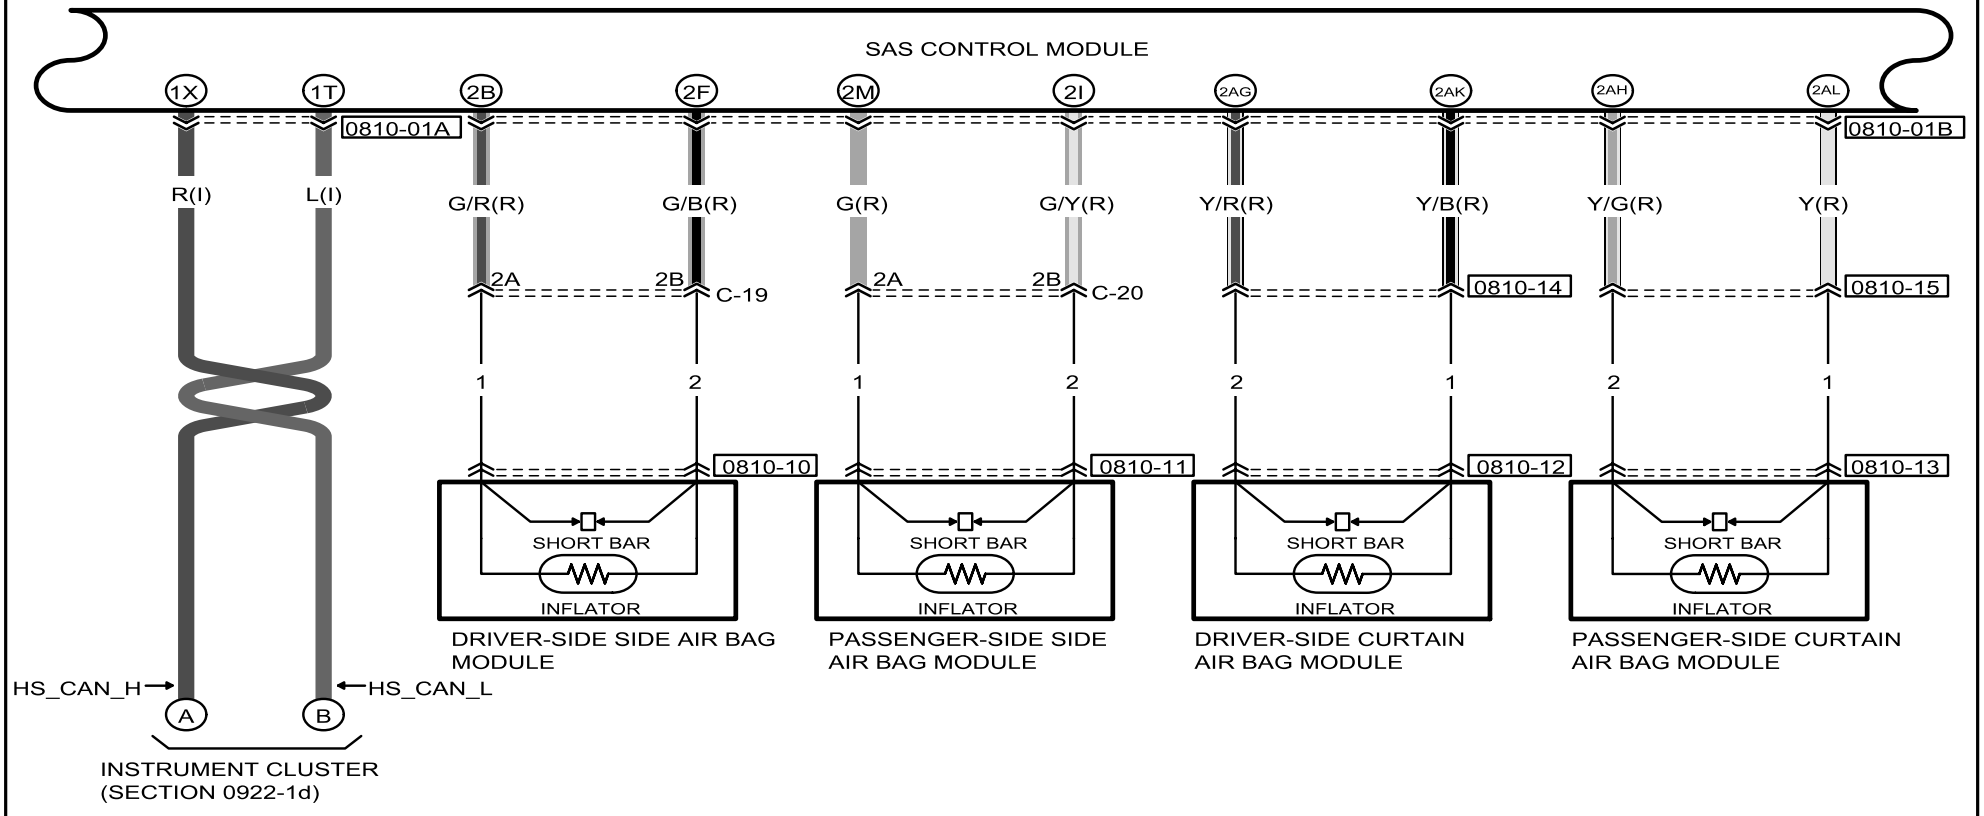


0810-01A
SAS CONTROL MODULE

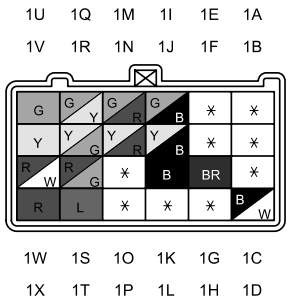

0810-01B
SAS CONTROL MODULE

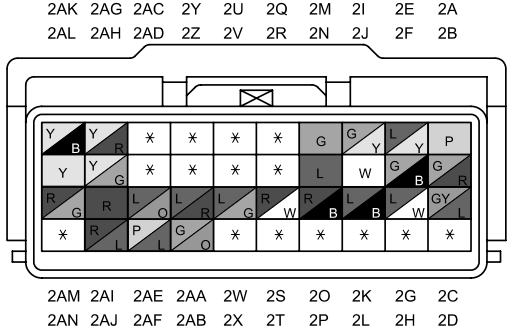


0810-10
DRIVER-SIDE SIDE AIR BAG MODULE



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-12
DRIVER-SIDE CURTAIN AIR BAG MODULE




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-14
REAR HARNESS-SHORT CORD




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-11
PASSENGER-SIDE SIDE AIR BAG MODULE



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-13
PASSENGER-SIDE CURTAIN AIR BAG MODULE




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0810-15
REAR HARNESS-SHORT CORD




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

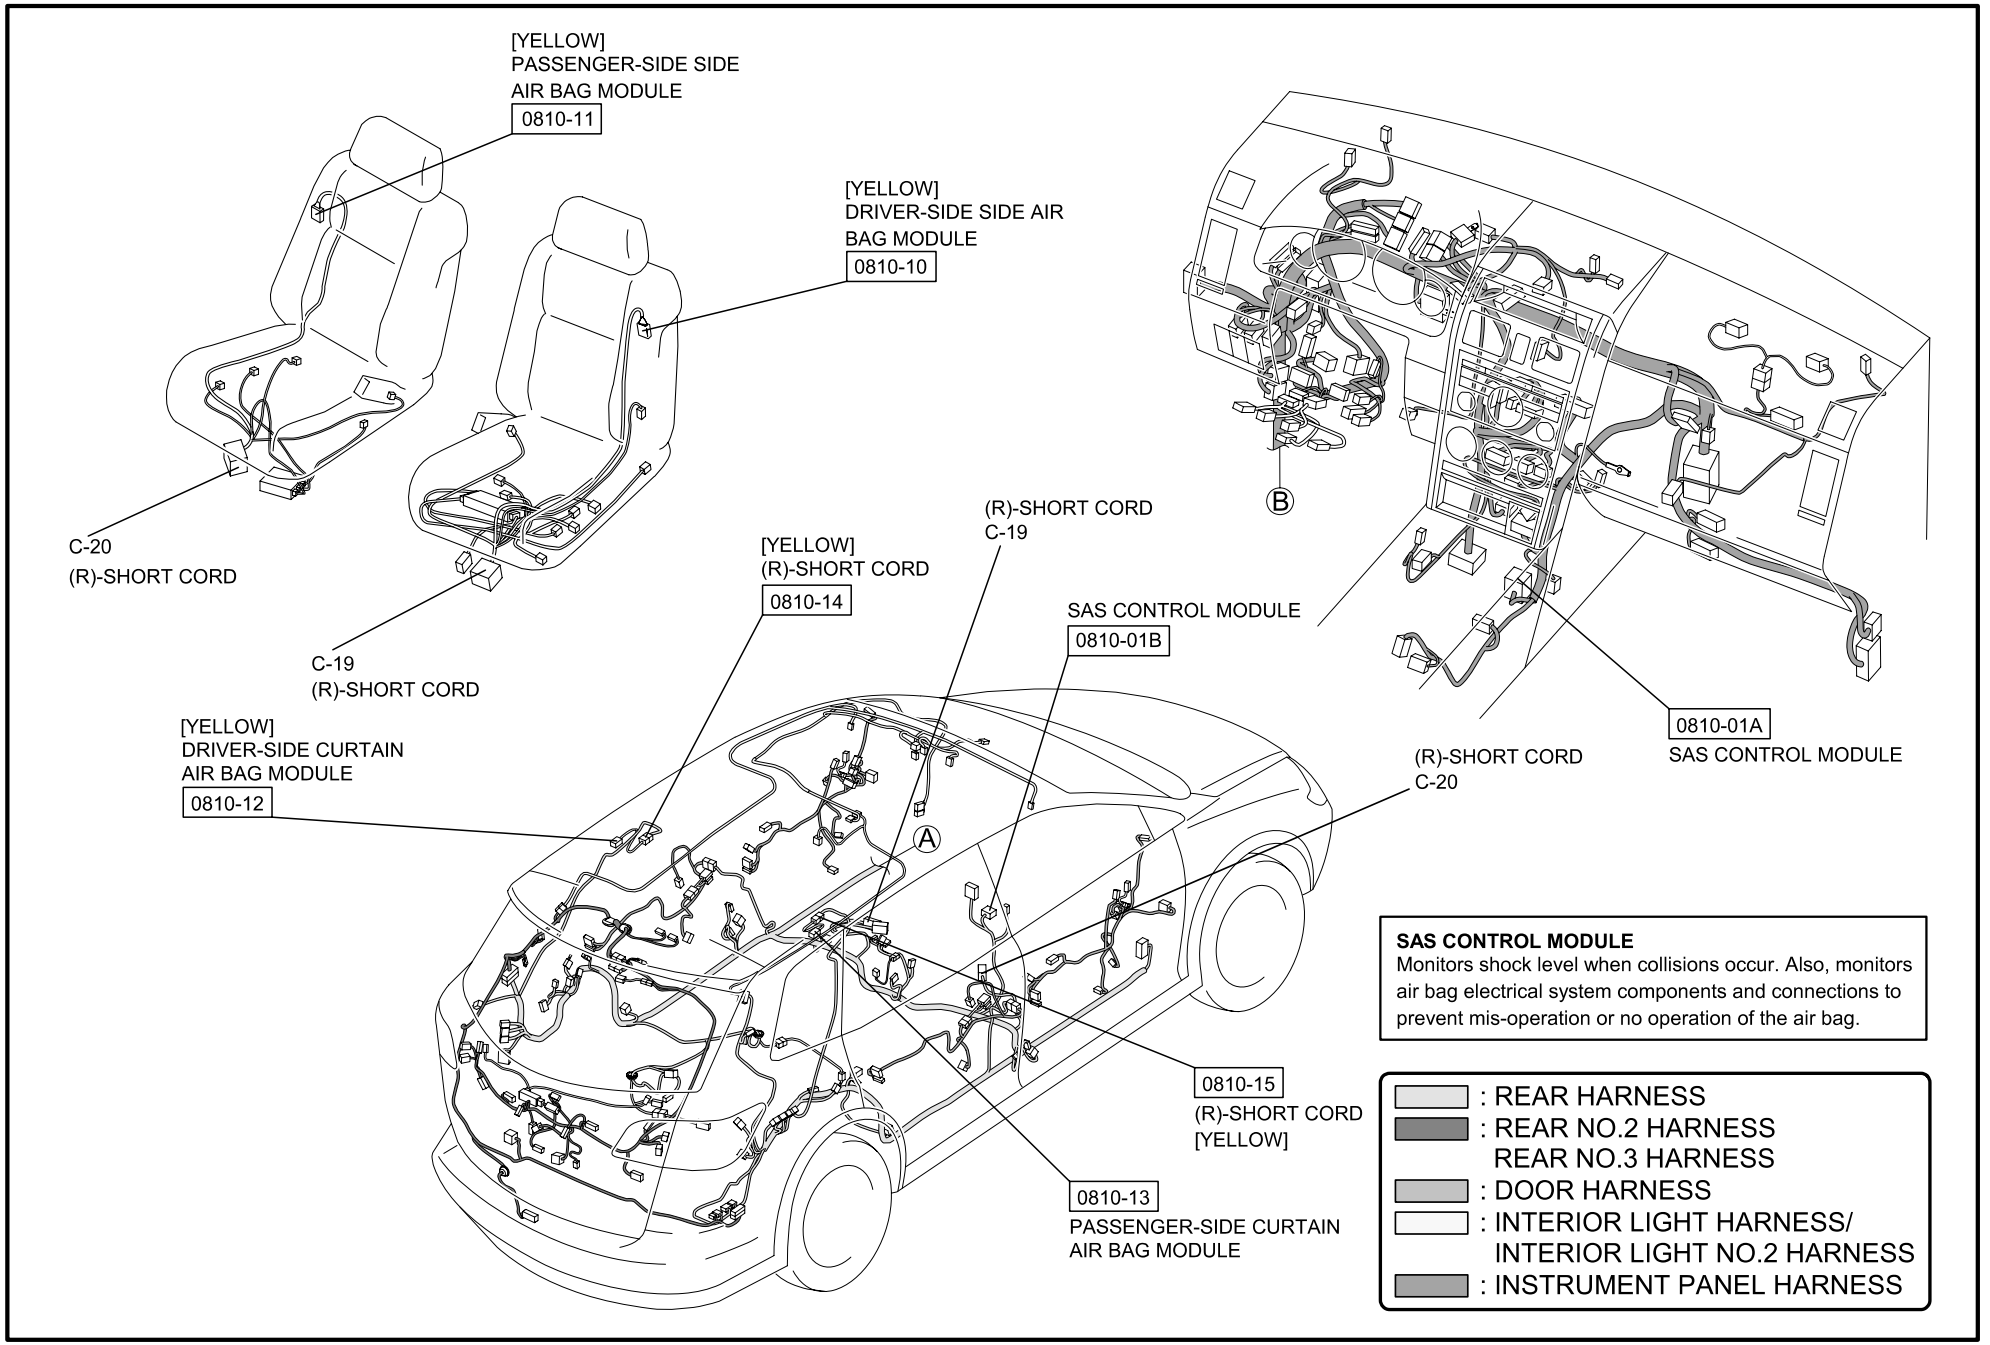

[YELLOW]
PASSENGER-SIDE SIDE
AIR BAG MODULE
0810-11
[YELLOW]
DRIVER-SIDE SIDE AIR
BAG MODULE
0810-10
C-20
(R)-SHORT CORD
C-19
(R)-SHORT CORD
[YELLOW]
(R)-SHORT CORD
0810-14
(R)-SHORT CORD
C-19
SAS CONTROL MODULE
0810-01B
[YELLOW]
DRIVER-SIDE CURTAIN
AIR BAG MODULE
0810-12
B
A
0810-01A
SAS CONTROL MODULE
(R)-SHORT CORD
C-20
0810-15
(R)-SHORT CORD
[YELLOW]
0810-13
PASSENGER-SIDE CURTAIN
AIR BAG MODULE
SAS CONTROL MODULE
Monitors shock level when collisions occur. Also, monitors air bag electrical system components and connections to prevent mis-operation or no operation of the air bag.
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

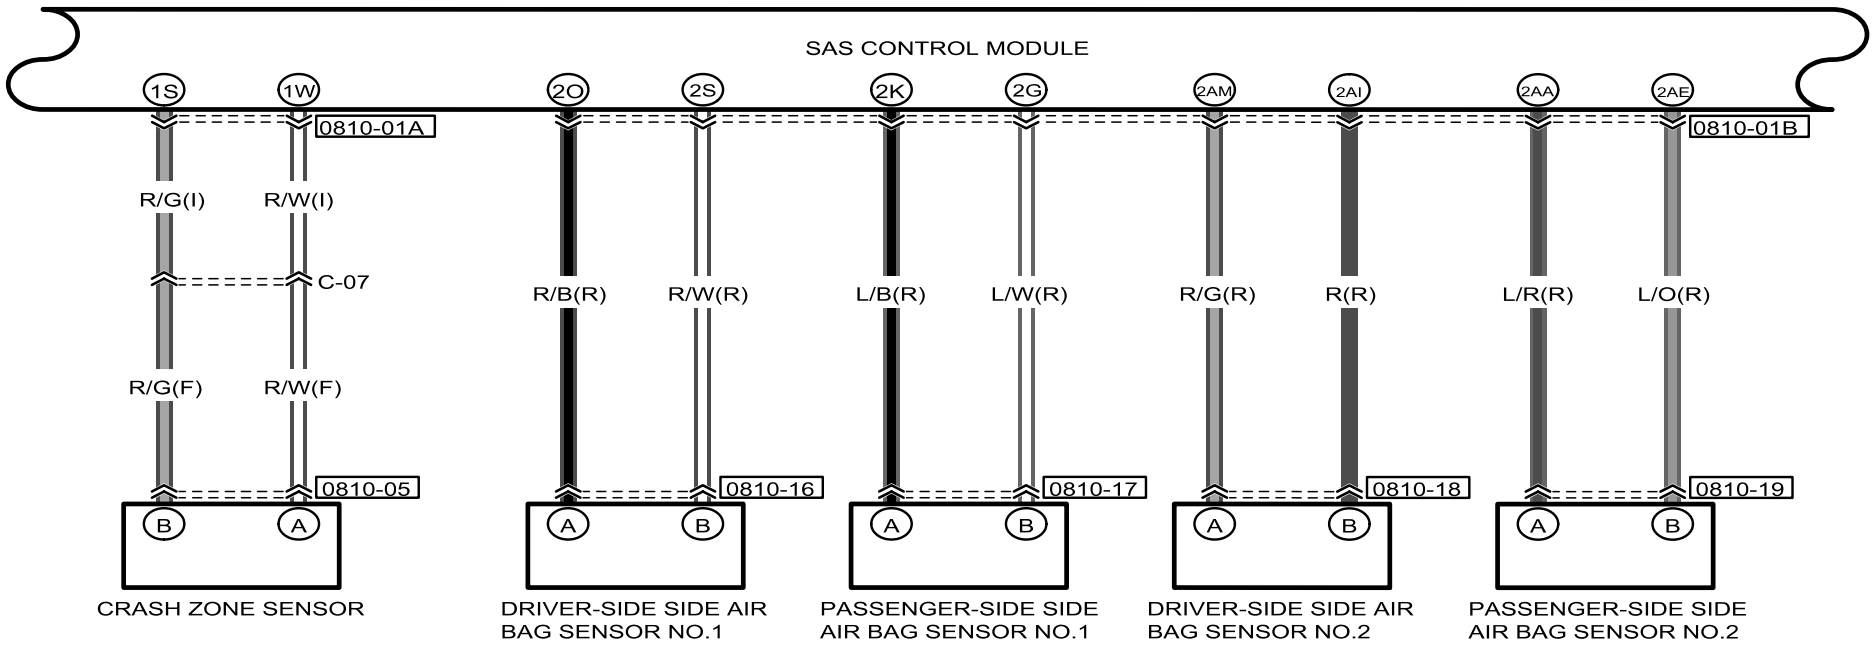


0810-01A
SAS CONTROL MODULE

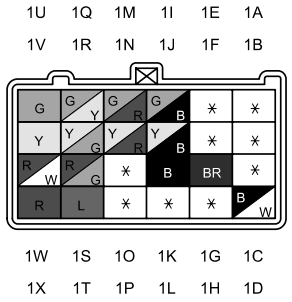


0810-01B
SAS CONTROL MODULE

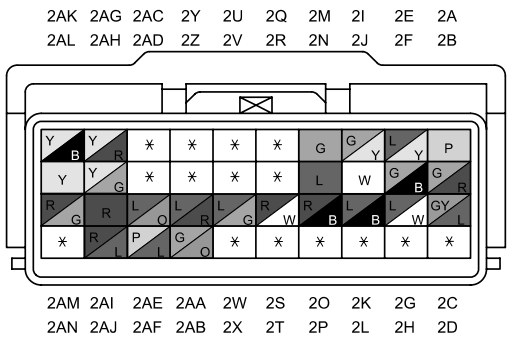


0810-05
CRASH ZONE SENSOR




0810-16
DRIVER-SIDE SIDE AIR BAG SENSOR NO.1

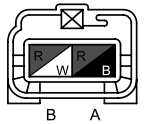


0810-17
PASSENGER-SIDE SIDE AIR BAG SENSOR NO.1

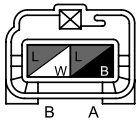


0810-18
DRIVER-SIDE SIDE AIR BAG SENSOR NO.2

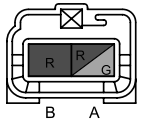

0810-19
PASSENGER-SIDE SIDE AIR BAG SENSOR NO.2

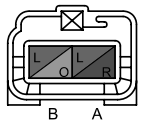


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

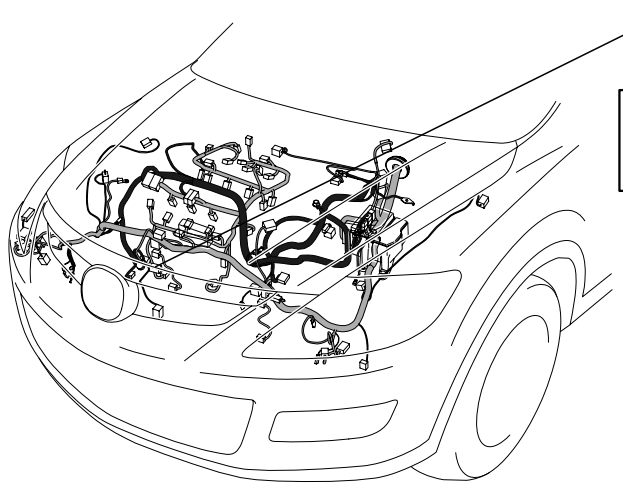

0810-05
CRASH ZONE SENSOR
[BLACK]

CRASH ZONE SENSOR
Detects degree of impact, converts to an electrical signal, and sends the signal to the SAS control module.

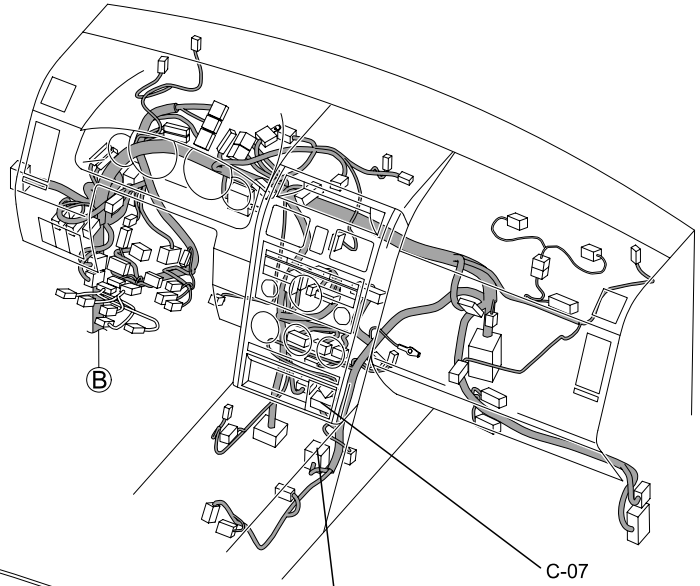



C-07
(F)-(I)

0810-01A
SAS CONTROL MODULE

[BLACK]
DRIVER-SIDE SIDE AIR
BAG SENSOR NO.1
0810-16

[BLACK]
DRIVER-SIDE SIDE AIR
BAG SENSOR NO.2
0810-18

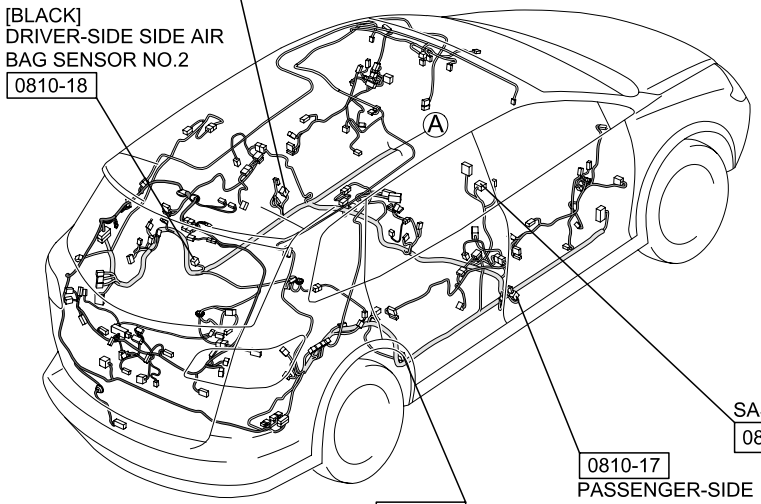

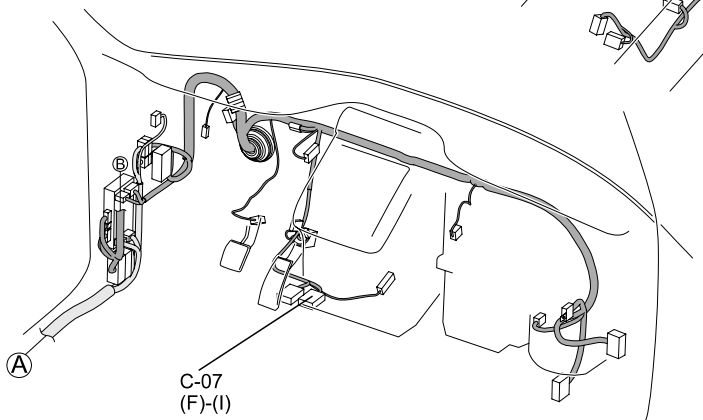

C-07
(F)-(I)


SAS CONTROL MODULE
Monitors shock level when collisions occur. Also, monitors air bag electrical system components and connections to prevent mis-operation or no operation of the air bag.

SAS CONTROL MODULE
0810-01B

0810-17
PASSENGER-SIDE
SIDE AIR BAG SENSOR NO.1
[BLACK]


0810-19
PASSENGER-SIDE
SIDE AIR BAG
SENSOR NO.2
[BLACK]

- : FRONT HARNESS
- : EMISSION HARNESS
- : INJECTION HARNESS
- : REAR HARNESS
- : REAR NO.2 HARNESS
  REAR NO.3 HARNESS
- : DOOR HARNESS
- : INTERIOR LIGHT HARNESS/
  INTERIOR LIGHT NO.2 HARNESS
- : INSTRUMENT PANEL HARNESS

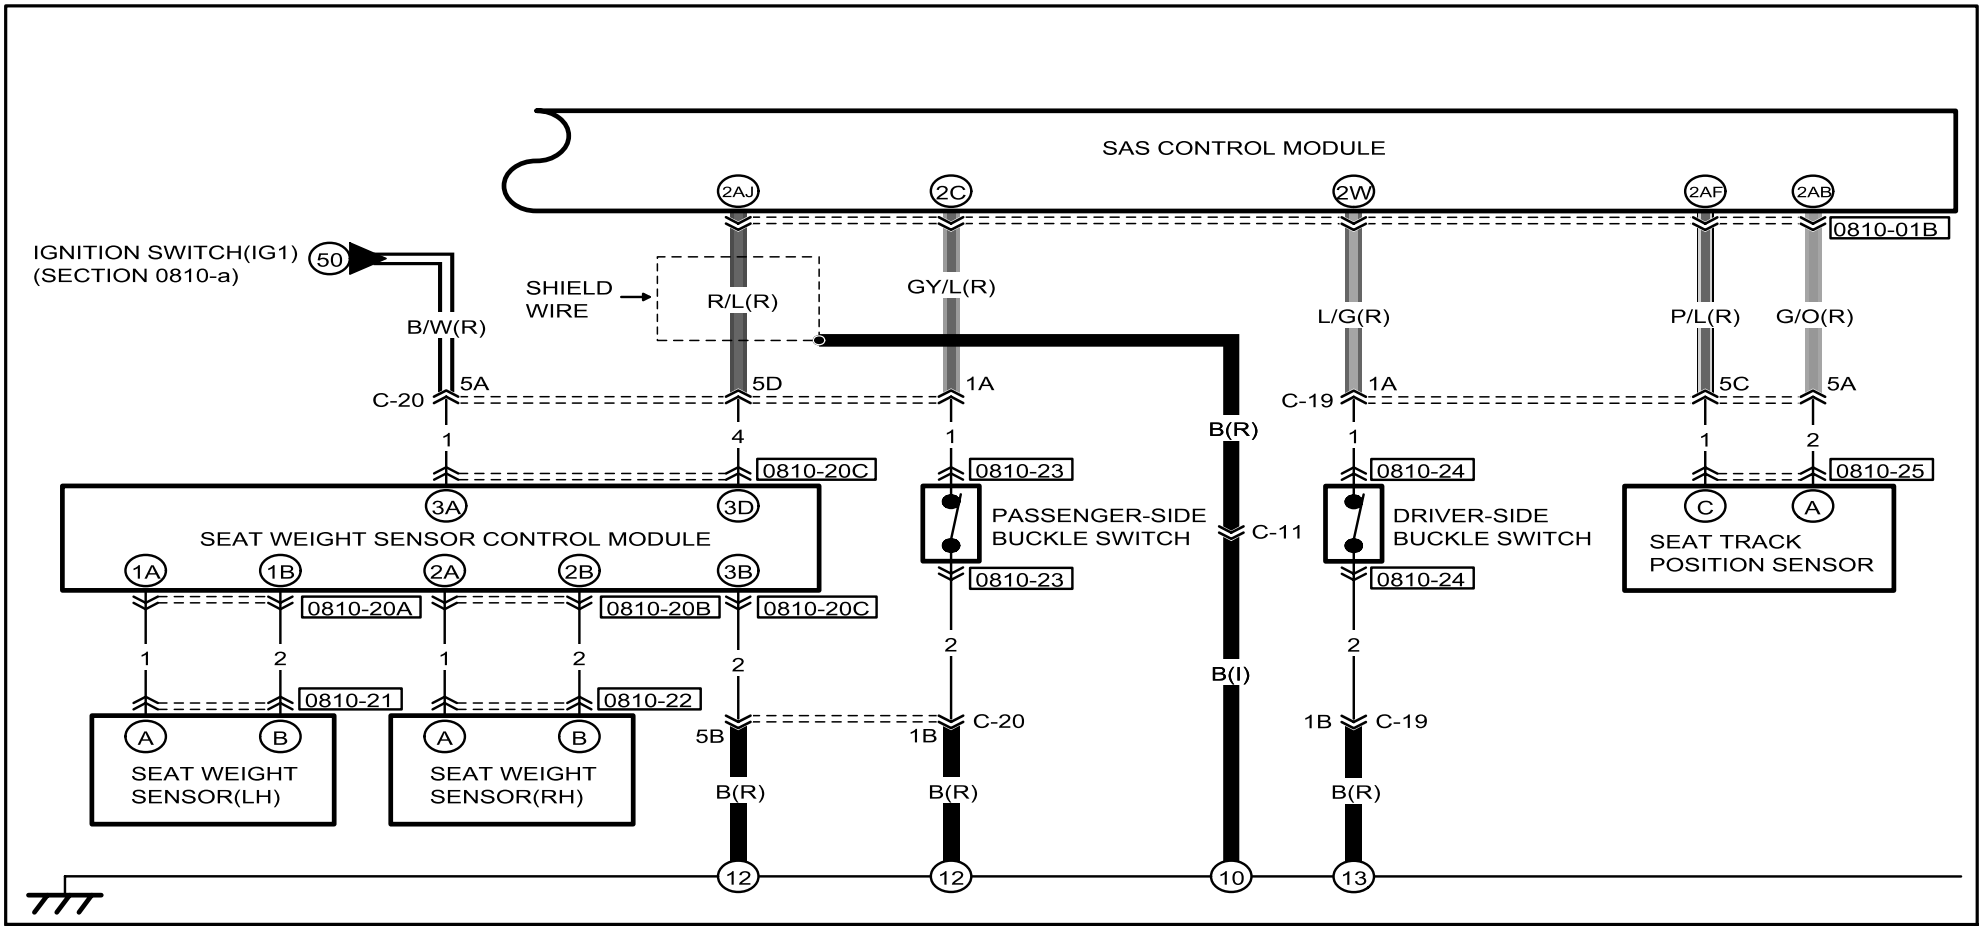

118

0810-01B
SAS CONTROL MODULE

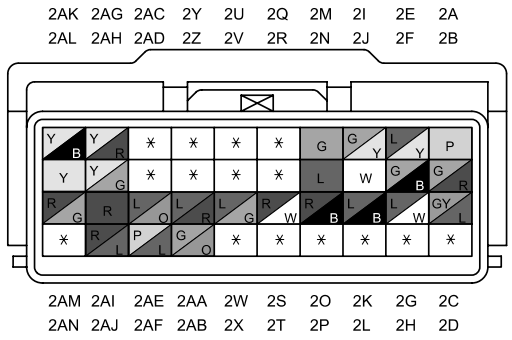

0810-20A
SEAT WEIGHT SENSOR CONTROL MODULE




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-20B
SEAT WEIGHT SENSOR CONTROL MODULE



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-20C
SEAT WEIGHT SENSOR CONTROL MODULE



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-21
SEAT WEIGHT SENSOR(LH)



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-22
SEAT WEIGHT SENSOR(RH)




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-23
PASSENGER-SIDE BUCKLE SWITCH




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-24
DRIVER-SIDE BUCKLE SWITCH




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-25
SEAT TRACK POSITION SENSOR




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

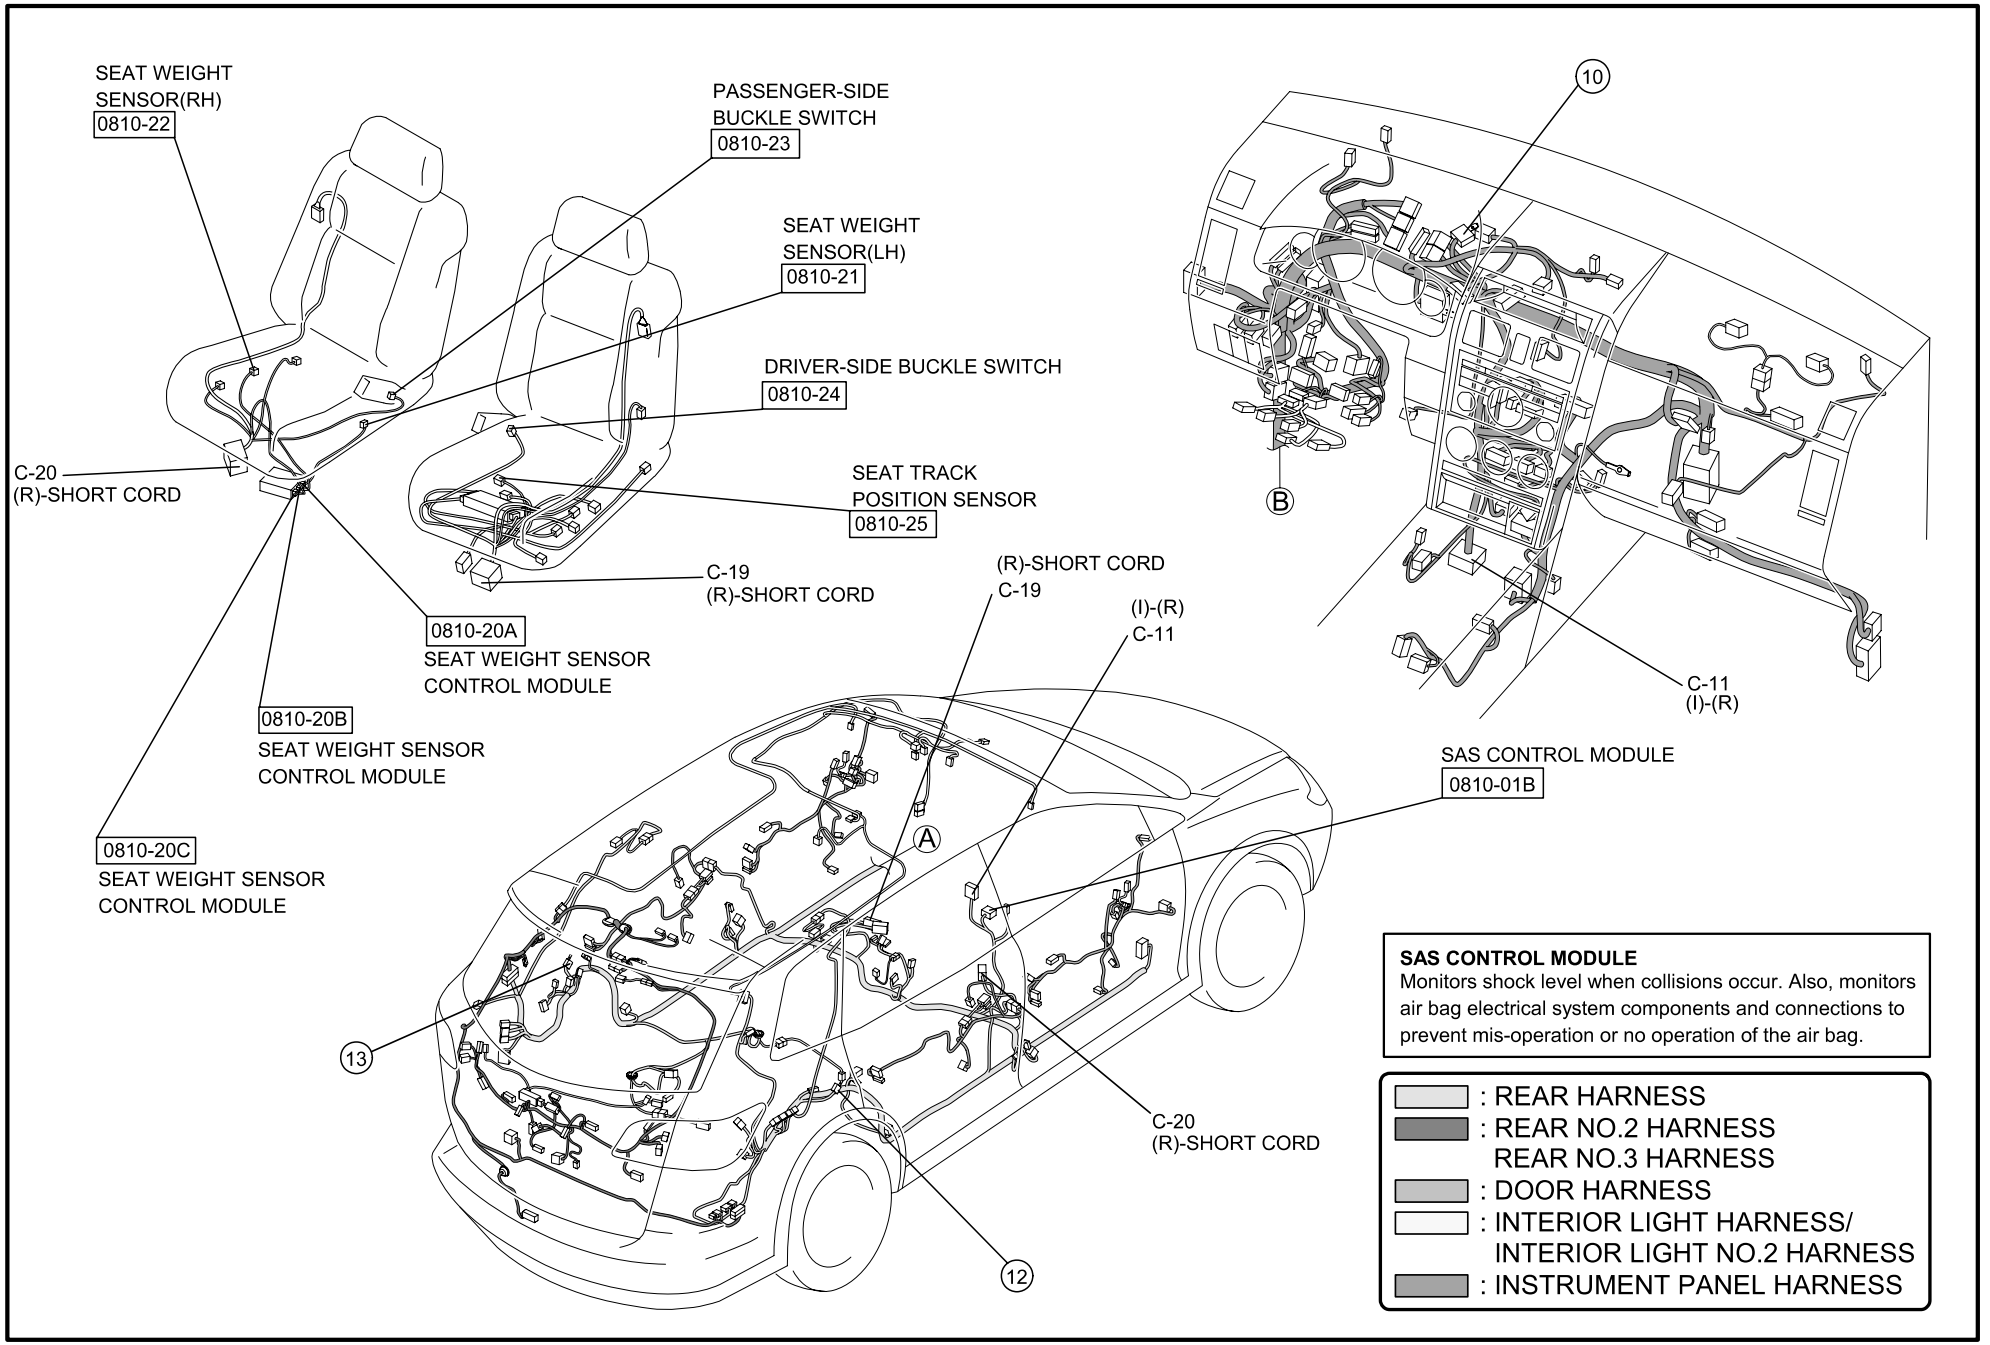


SAS CONTROL MODULE
Monitors shock level when collisions occur. Also, monitors air bag electrical system components and connections to prevent mis-operation or no operation of the air bag.

: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

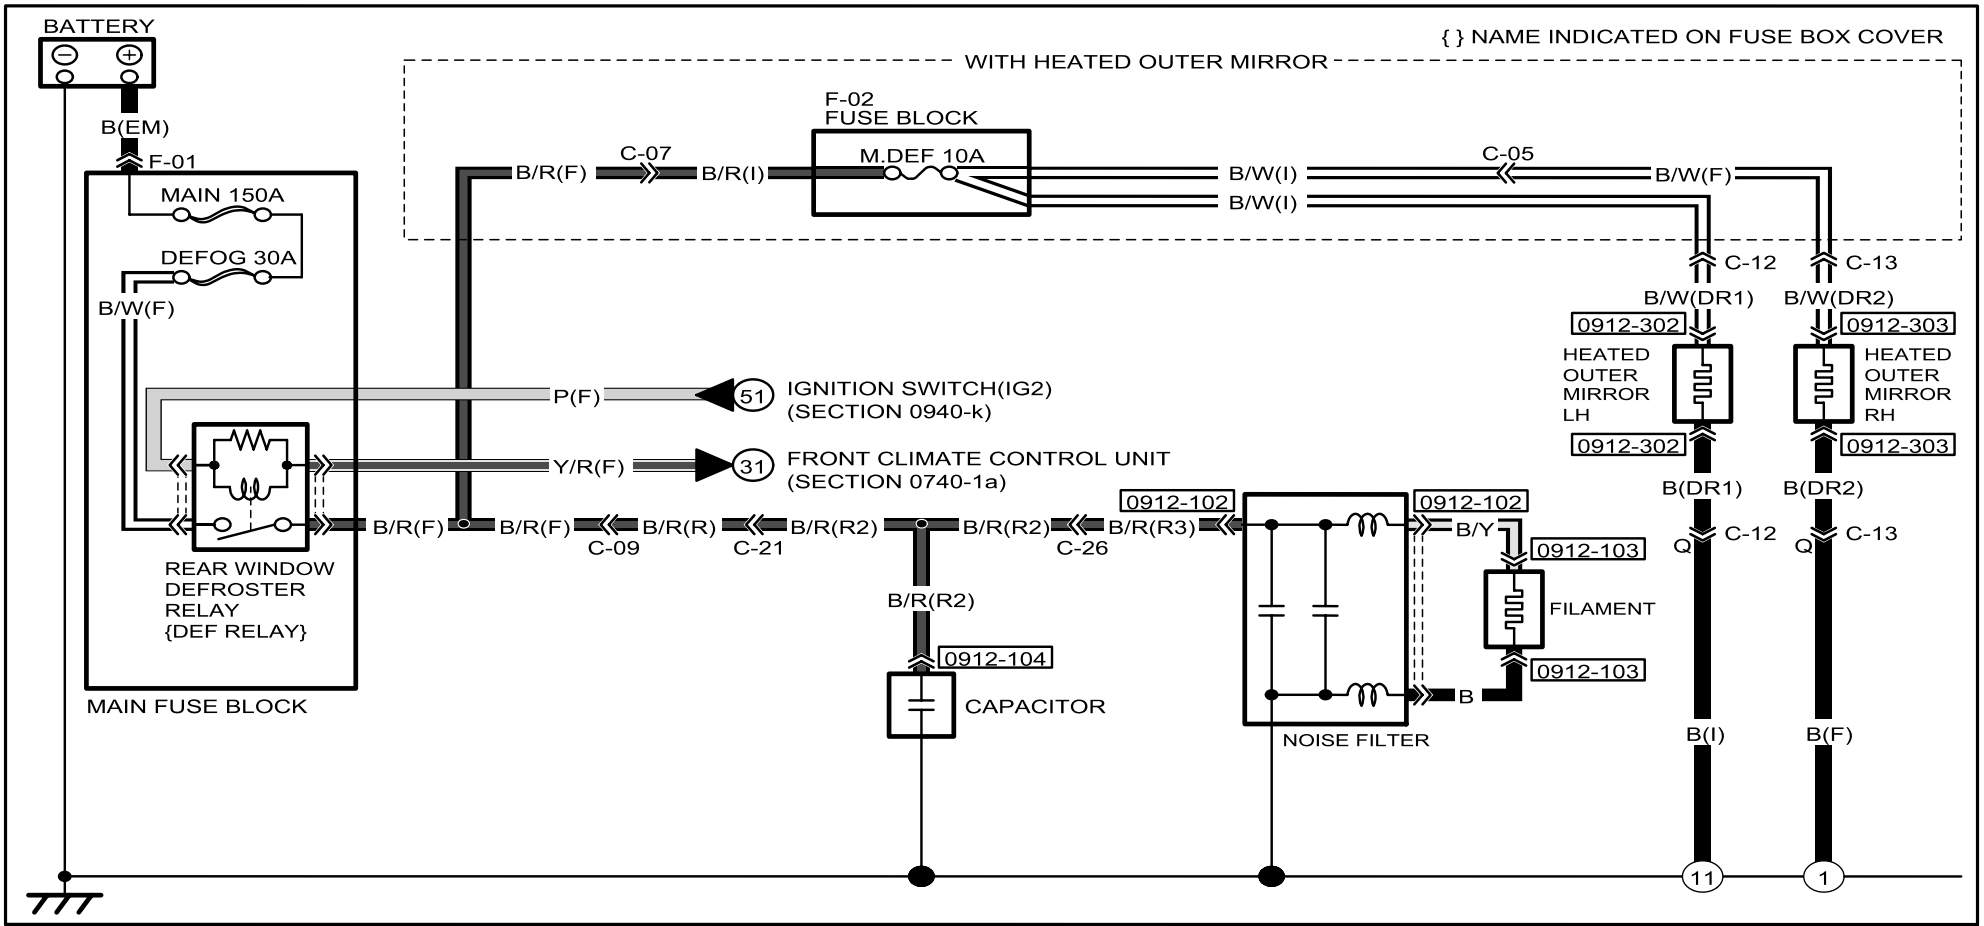


0912-102
NOISE FILTER

REAR NO.3 HARNESS




SHORT CORD




0912-104
CAPACITOR



0912-302
HEATED OUTER MIRROR LH /
POWER OUTER MIRROR LH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)LH

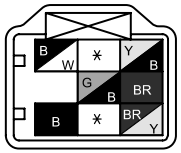


0912-303
HEATED OUTER MIRROR RH/
POWER OUTER MIRROR RH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)RH

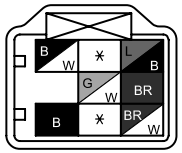


0912-103
FILAMENT




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

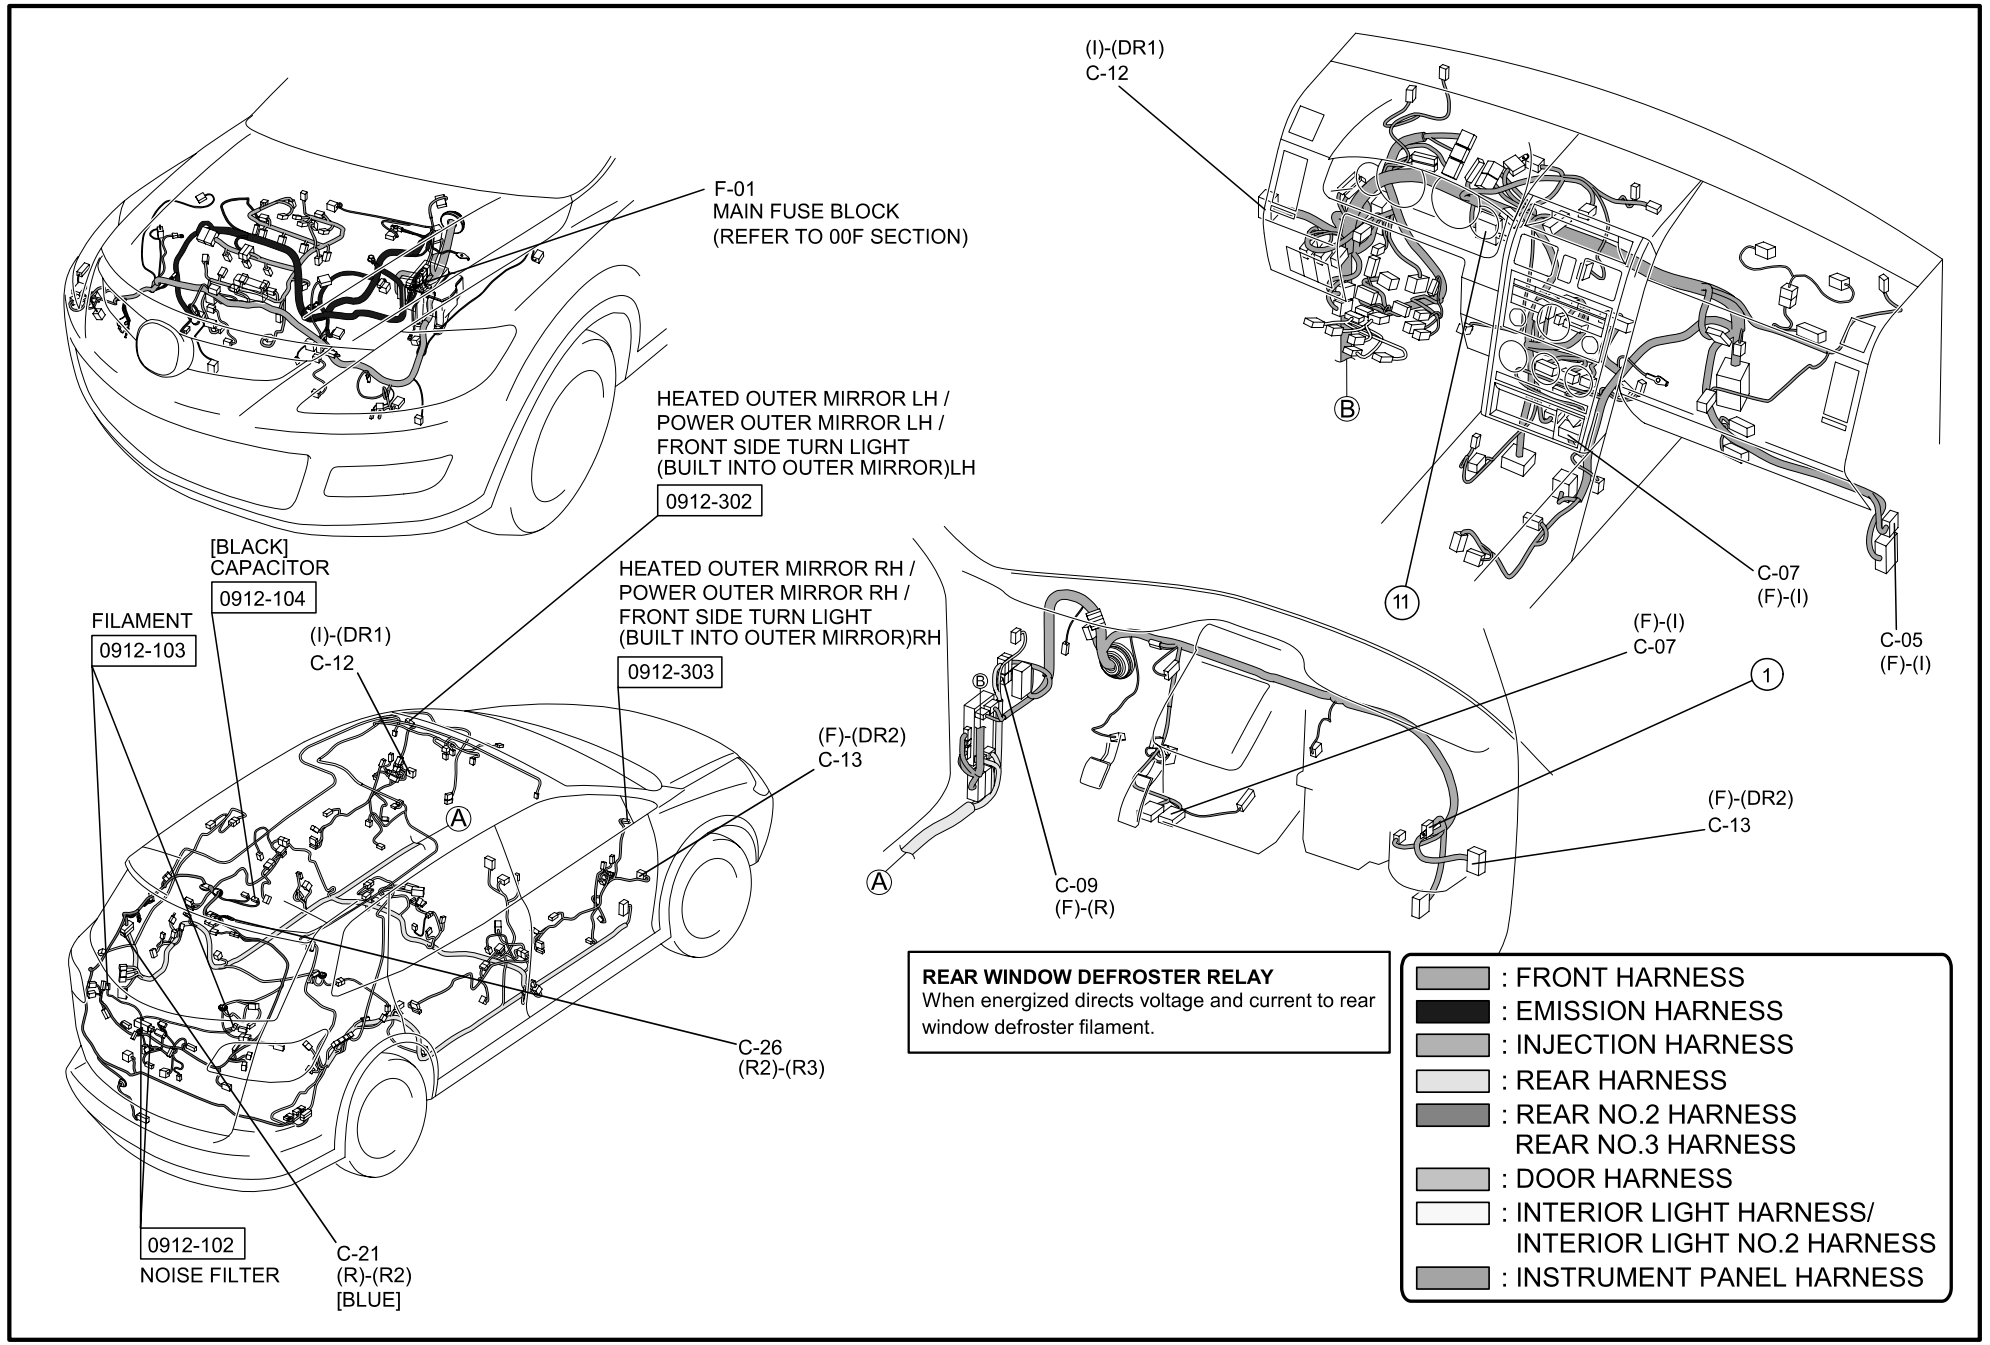

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
(I)-(DR1)
C-12
HEATED OUTER MIRROR LH /
POWER OUTER MIRROR LH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)LH
0912-302
[BLACK]
CAPACITOR
0912-104
FILAMENT
0912-103
(I)-(DR1)
C-12
HEATED OUTER MIRROR RH /
POWER OUTER MIRROR RH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)RH
0912-303
(F)-(DR2)
C-13
C-26
(R2)-(R3)
0912-102
NOISE FILTER
C-21
(R)-(R2)
[BLUE]
B
11
C-07
(F)-(I)
C-05
(F)-(I)
(F)-(I)
C-07
1
(F)-(DR2)
C-13
A
C-09
(F)-(R)
REAR WINDOW DEFROSTER RELAY
When energized directs voltage and current to rear window defroster filament.
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

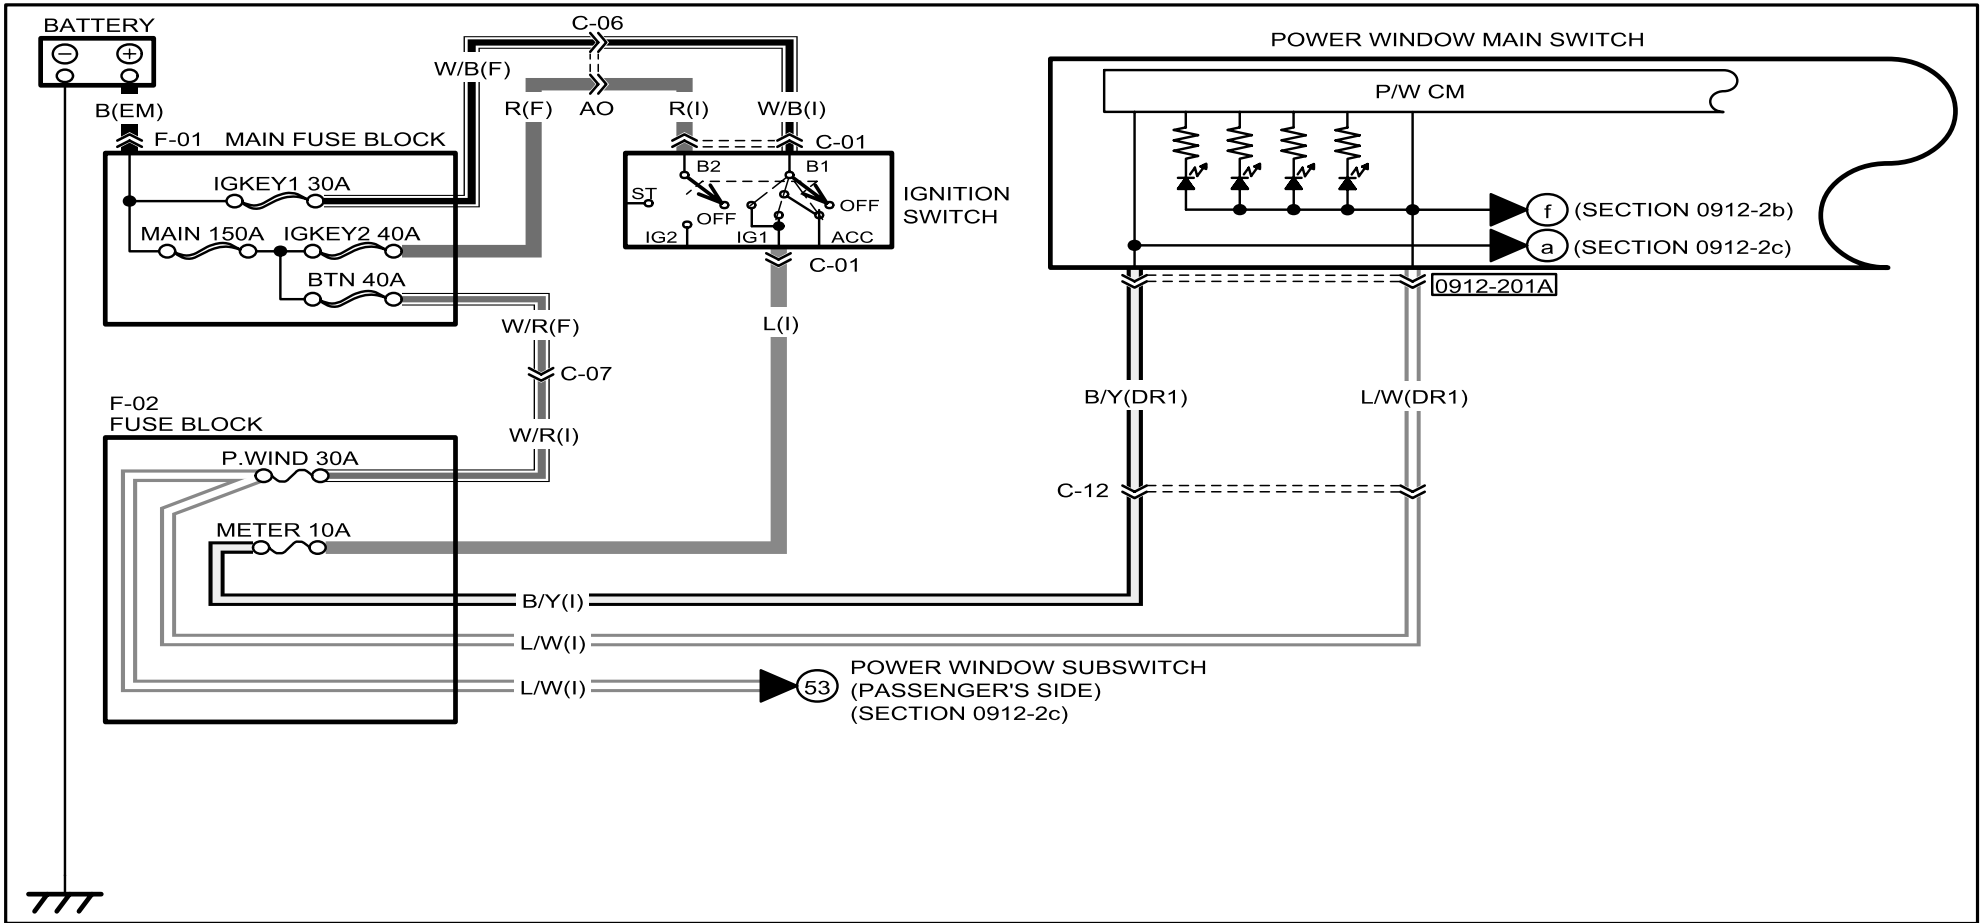


0912-201A
POWER WINDOW MAIN SWITCH

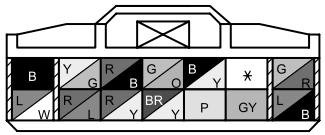


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

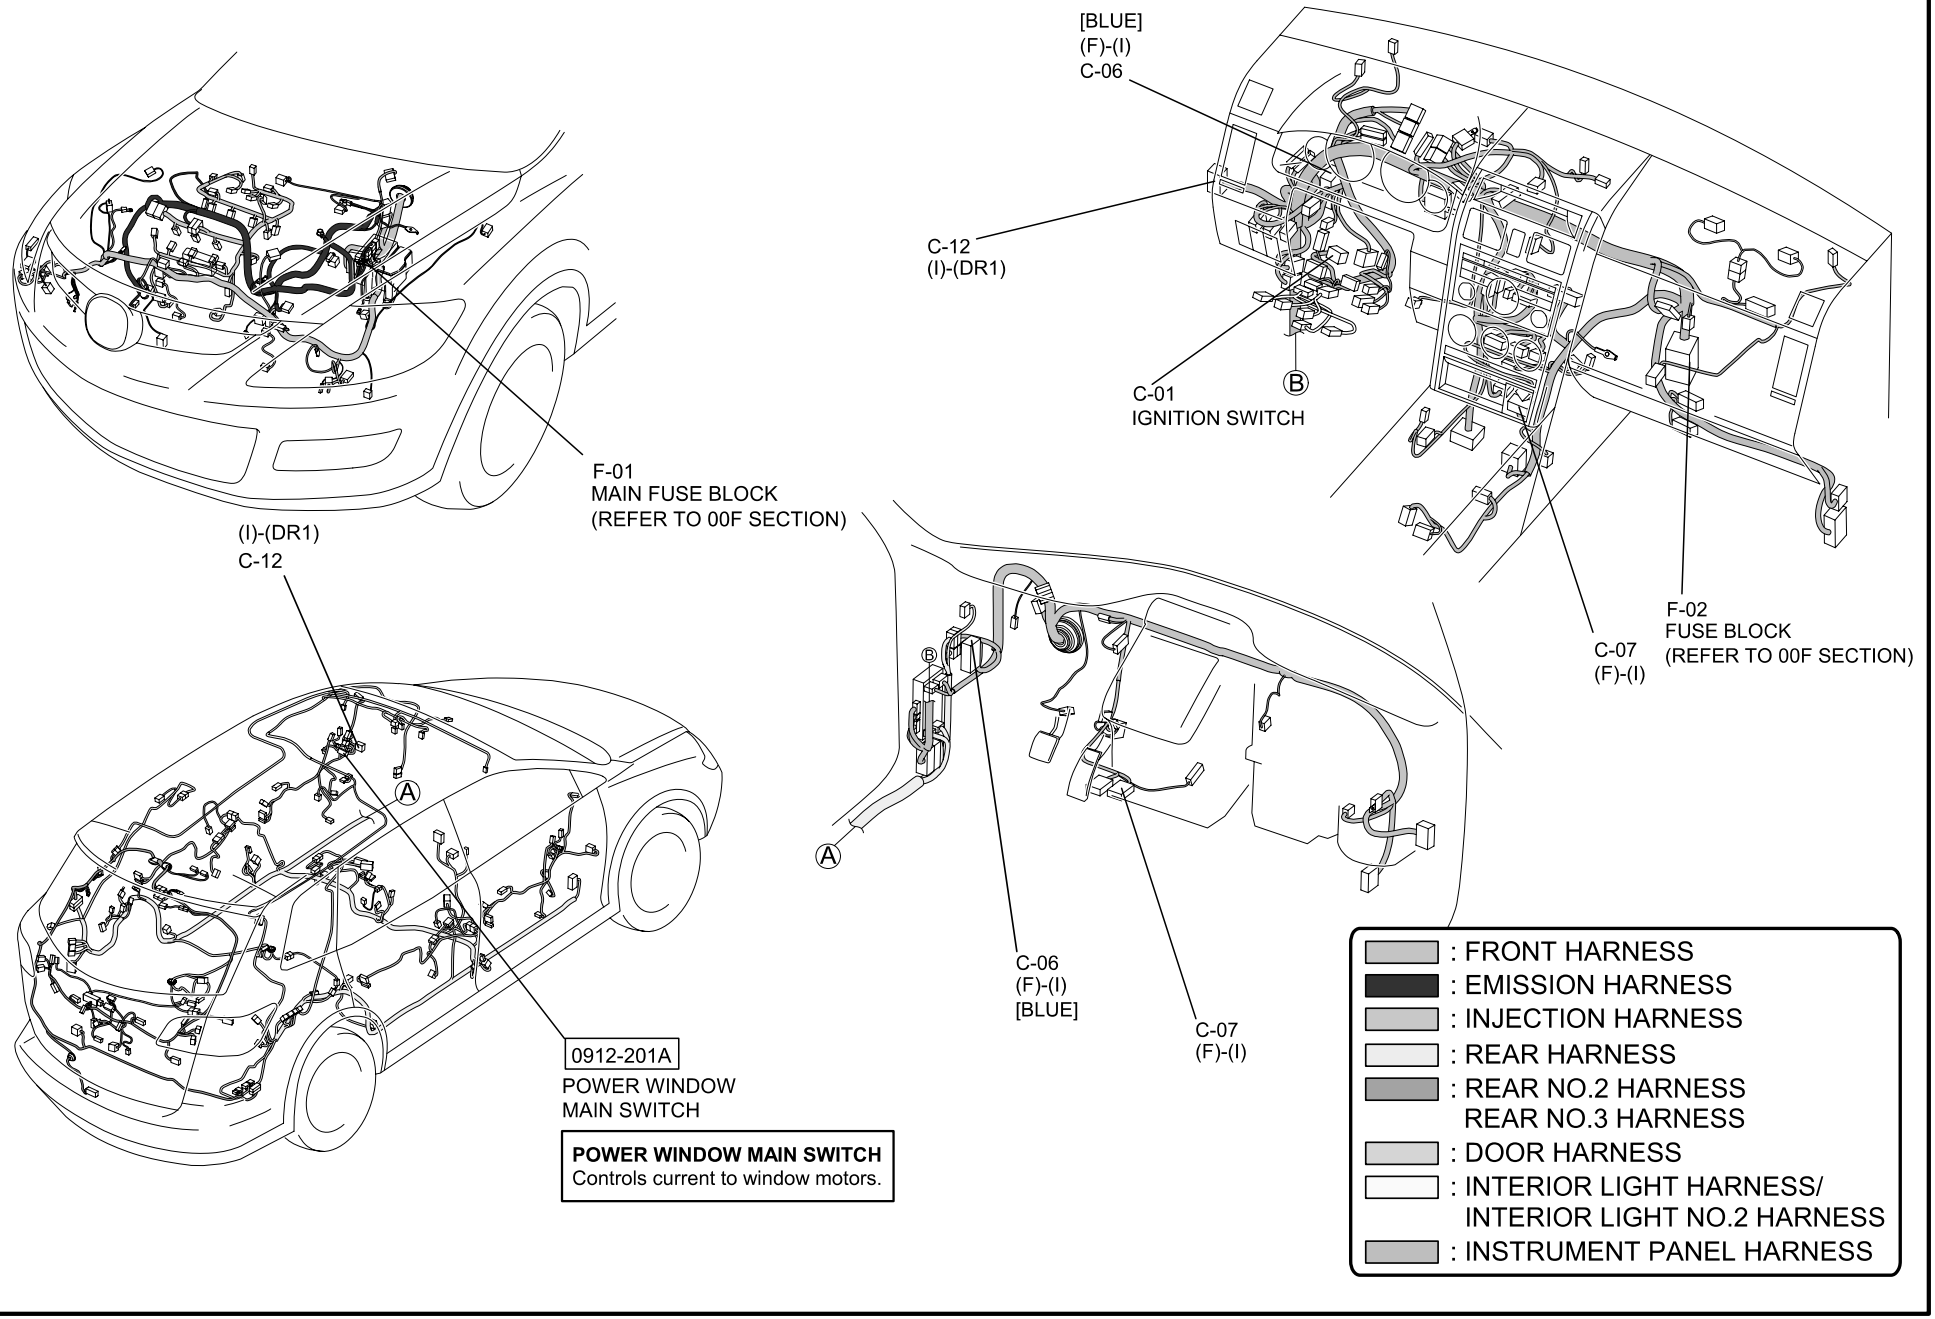

[BLUE]
(F)-(I)
C-06
C-12
(I)-(DR1)
C-01
IGNITION SWITCH
B
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
C-07
(F)-(I)
(I)-(DR1)
C-12
A
B
A
C-06
(F)-(I)
[BLUE]
C-07
(F)-(I)
0912-201A
POWER WINDOW
MAIN SWITCH
POWER WINDOW MAIN SWITCH
Controls current to window motors.
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

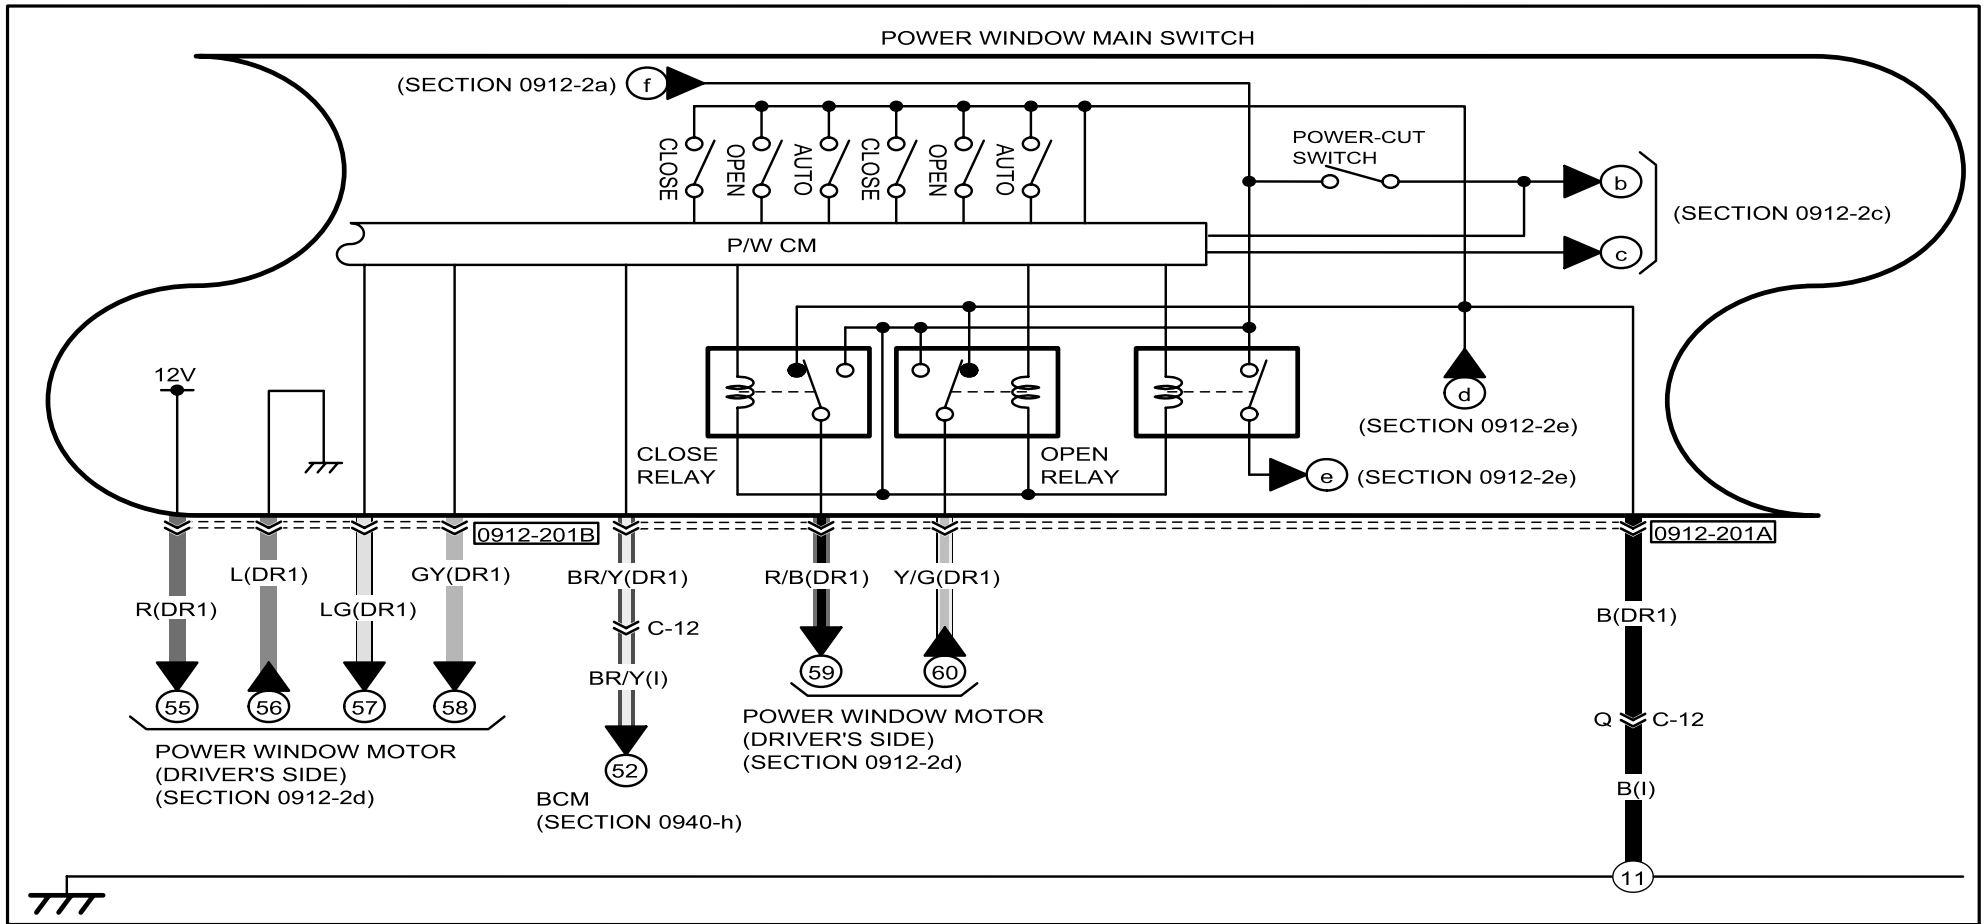


0912-201A
POWER WINDOW MAIN SWITCH

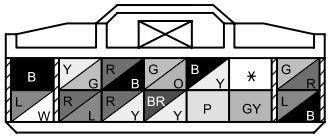

0912-201B
POWER WINDOW MAIN SWITCH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

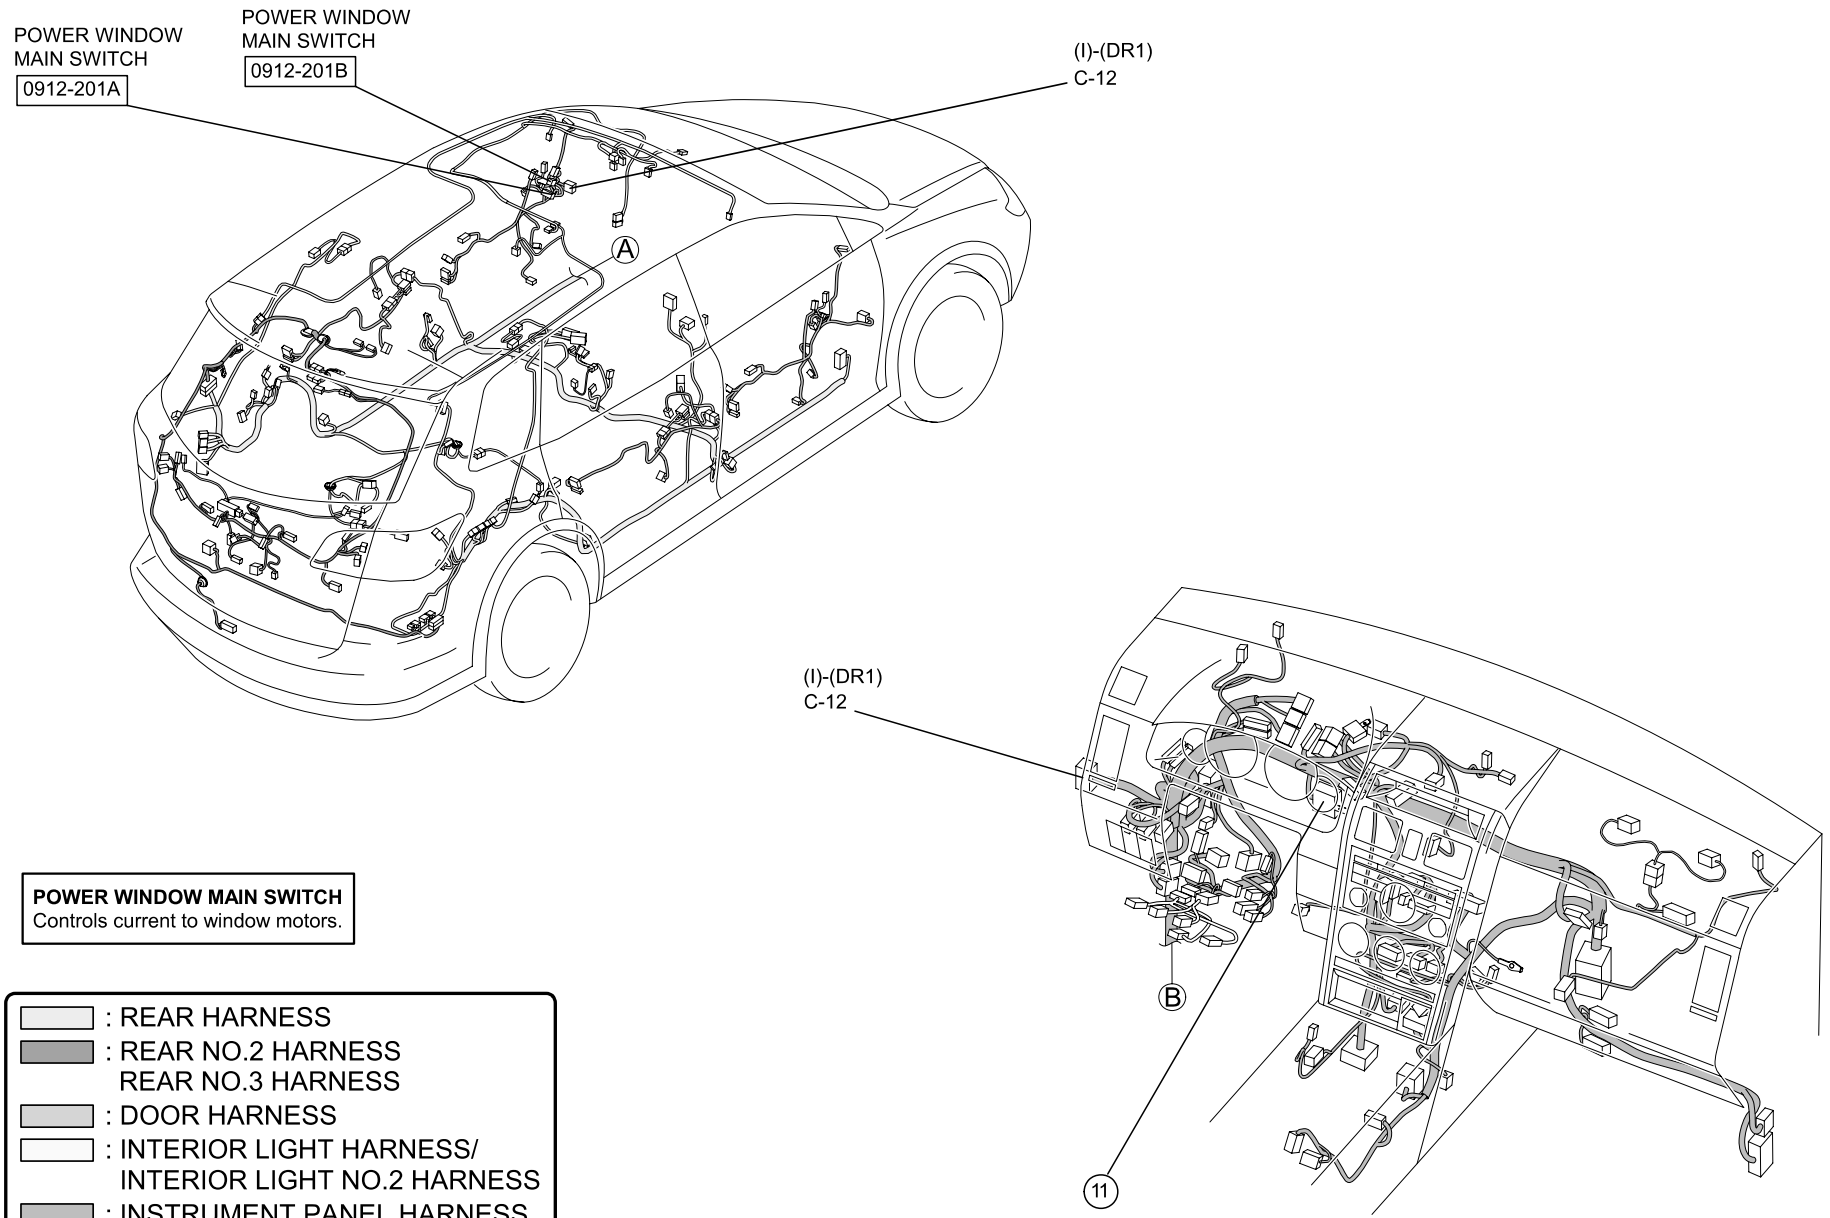


POWER WINDOW MAIN SWITCH
Controls current to window motors.


: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

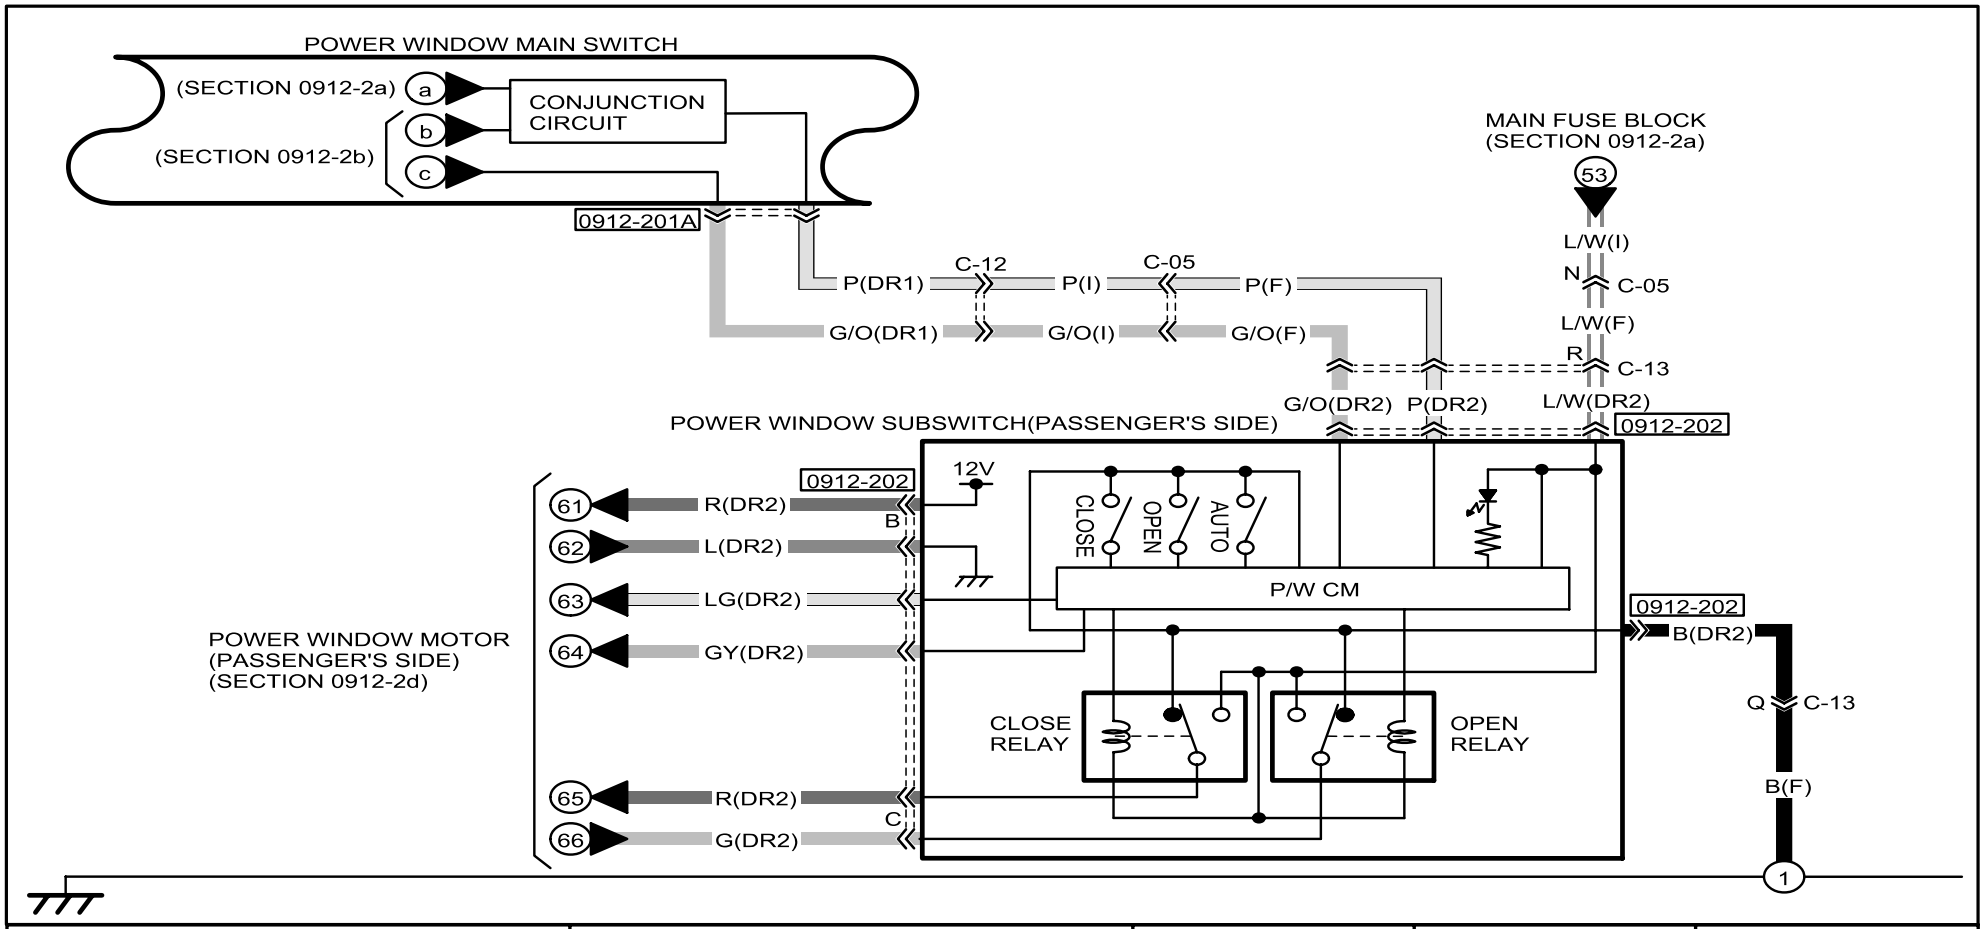


0912-201A
POWER WINDOW MAIN SWITCH

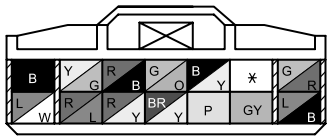


0912-202
POWER WINDOW SUBSWITCH
(PASSENGER'S SIDE)

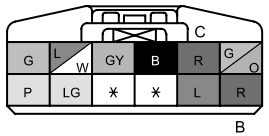


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

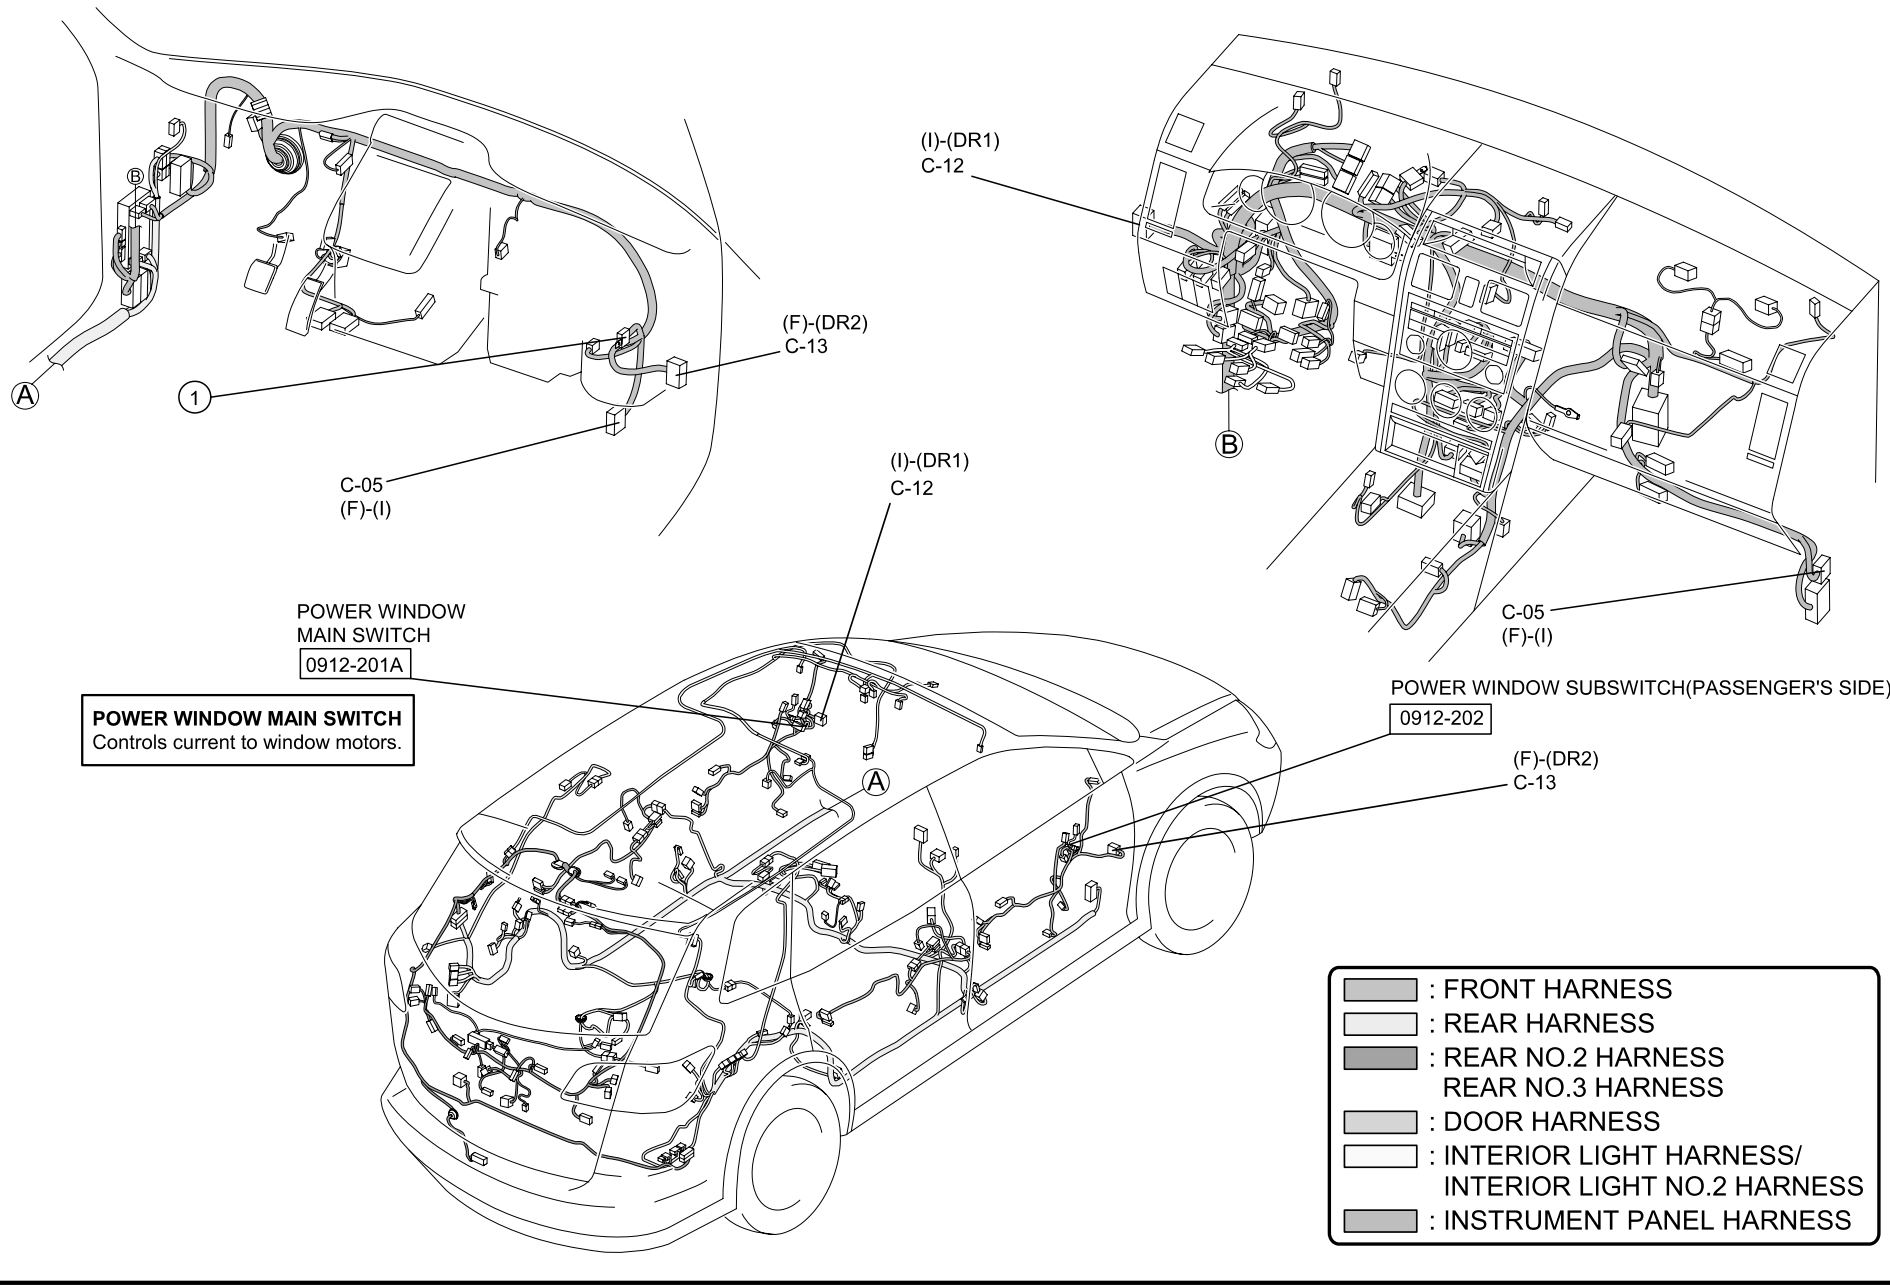

(I)-(DR1)
C-12
(F)-(DR2)
C-13
C-05
(F)-(I)
(I)-(DR1)
C-12
POWER WINDOW
MAIN SWITCH
0912-201A
POWER WINDOW MAIN SWITCH
Controls current to window motors.
POWER WINDOW SUBSWITCH(PASSENGER'S SIDE)
0912-202
(F)-(DR2)
C-13
C-05
(F)-(I)
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

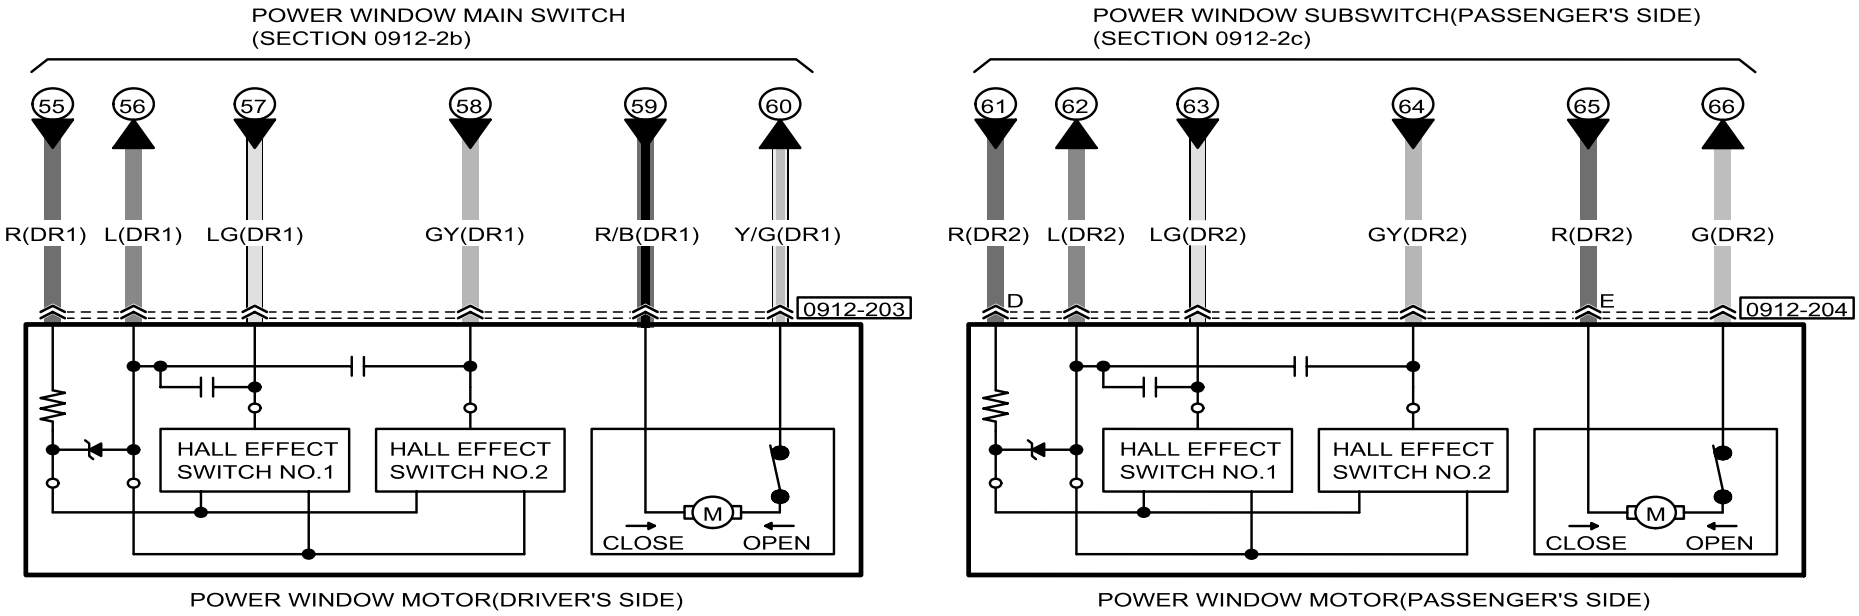


0912-203
POWER WINDOW MOTOR
(DRIVER'S SIDE)




0912-204
POWER WINDOW MOTOR
(PASSENGER'S SIDE)

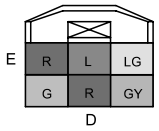


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

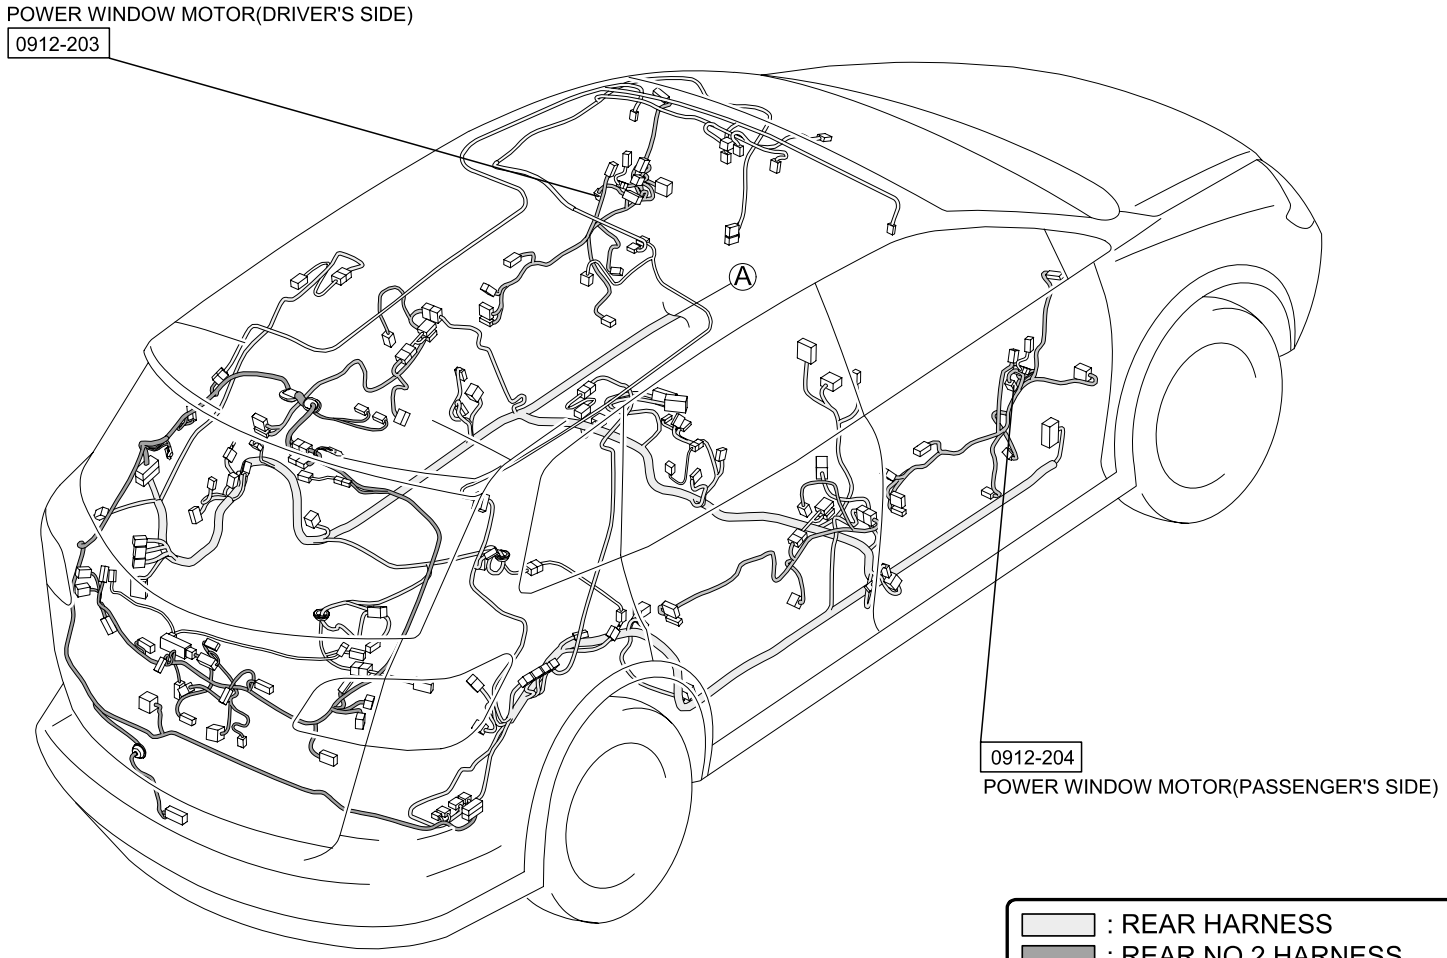

POWER WINDOW MOTOR(DRIVER'S SIDE)
0912-203
A
0912-204
POWER WINDOW MOTOR(PASSENGER'S SIDE)
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

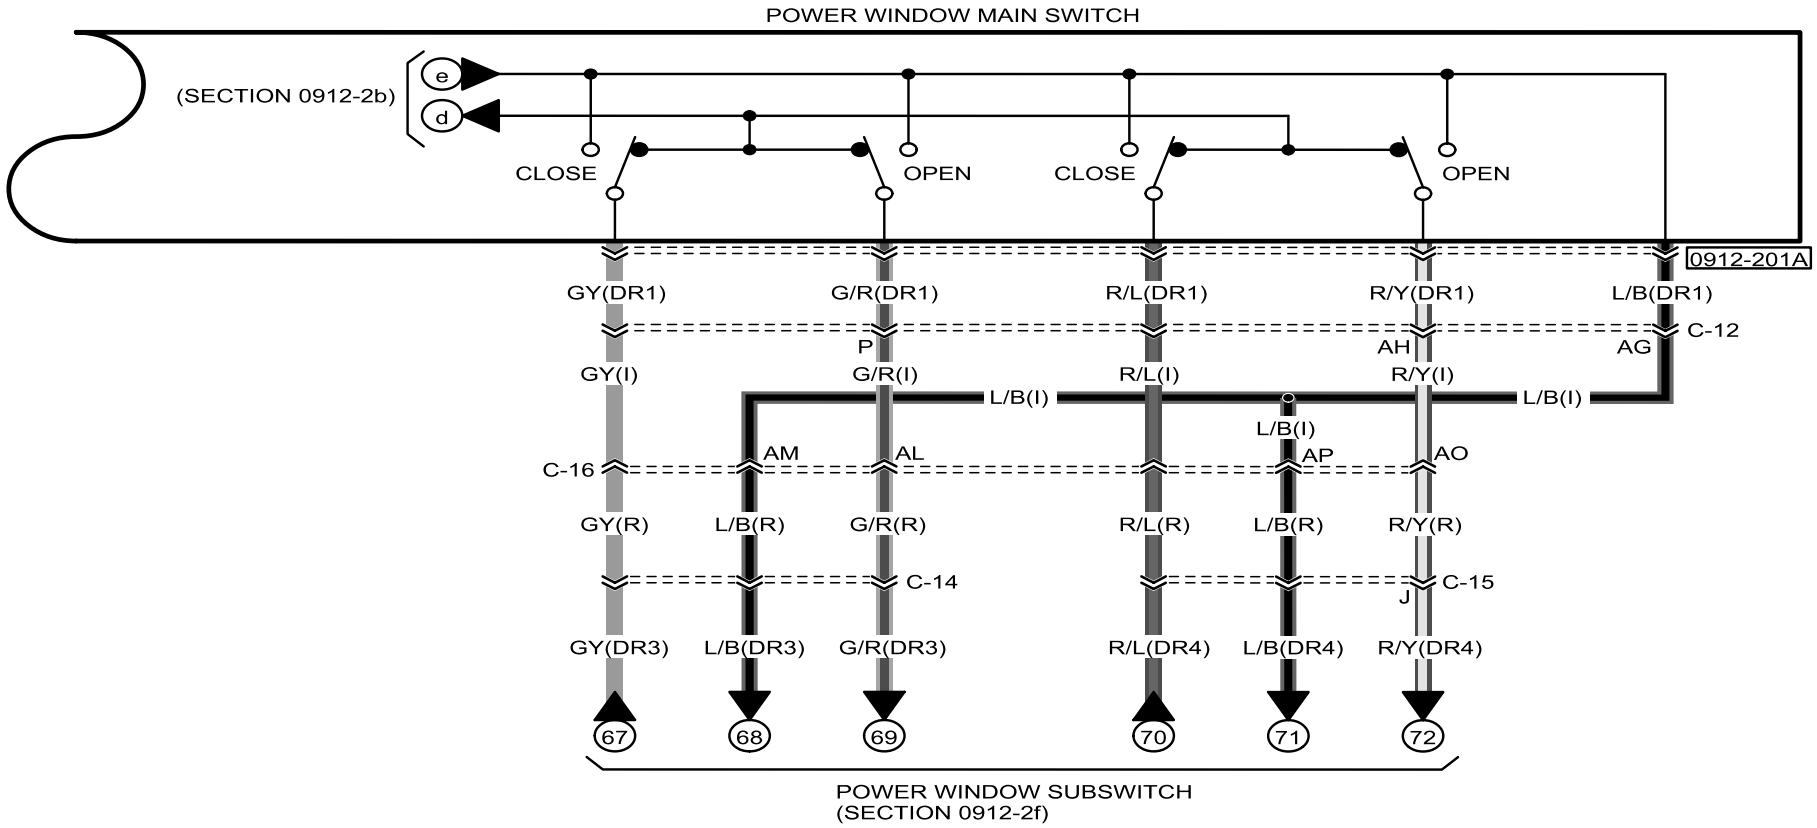


0912-201A
POWER WINDOW MAIN SWITCH

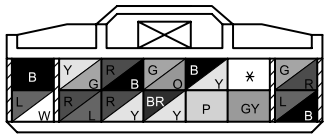


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

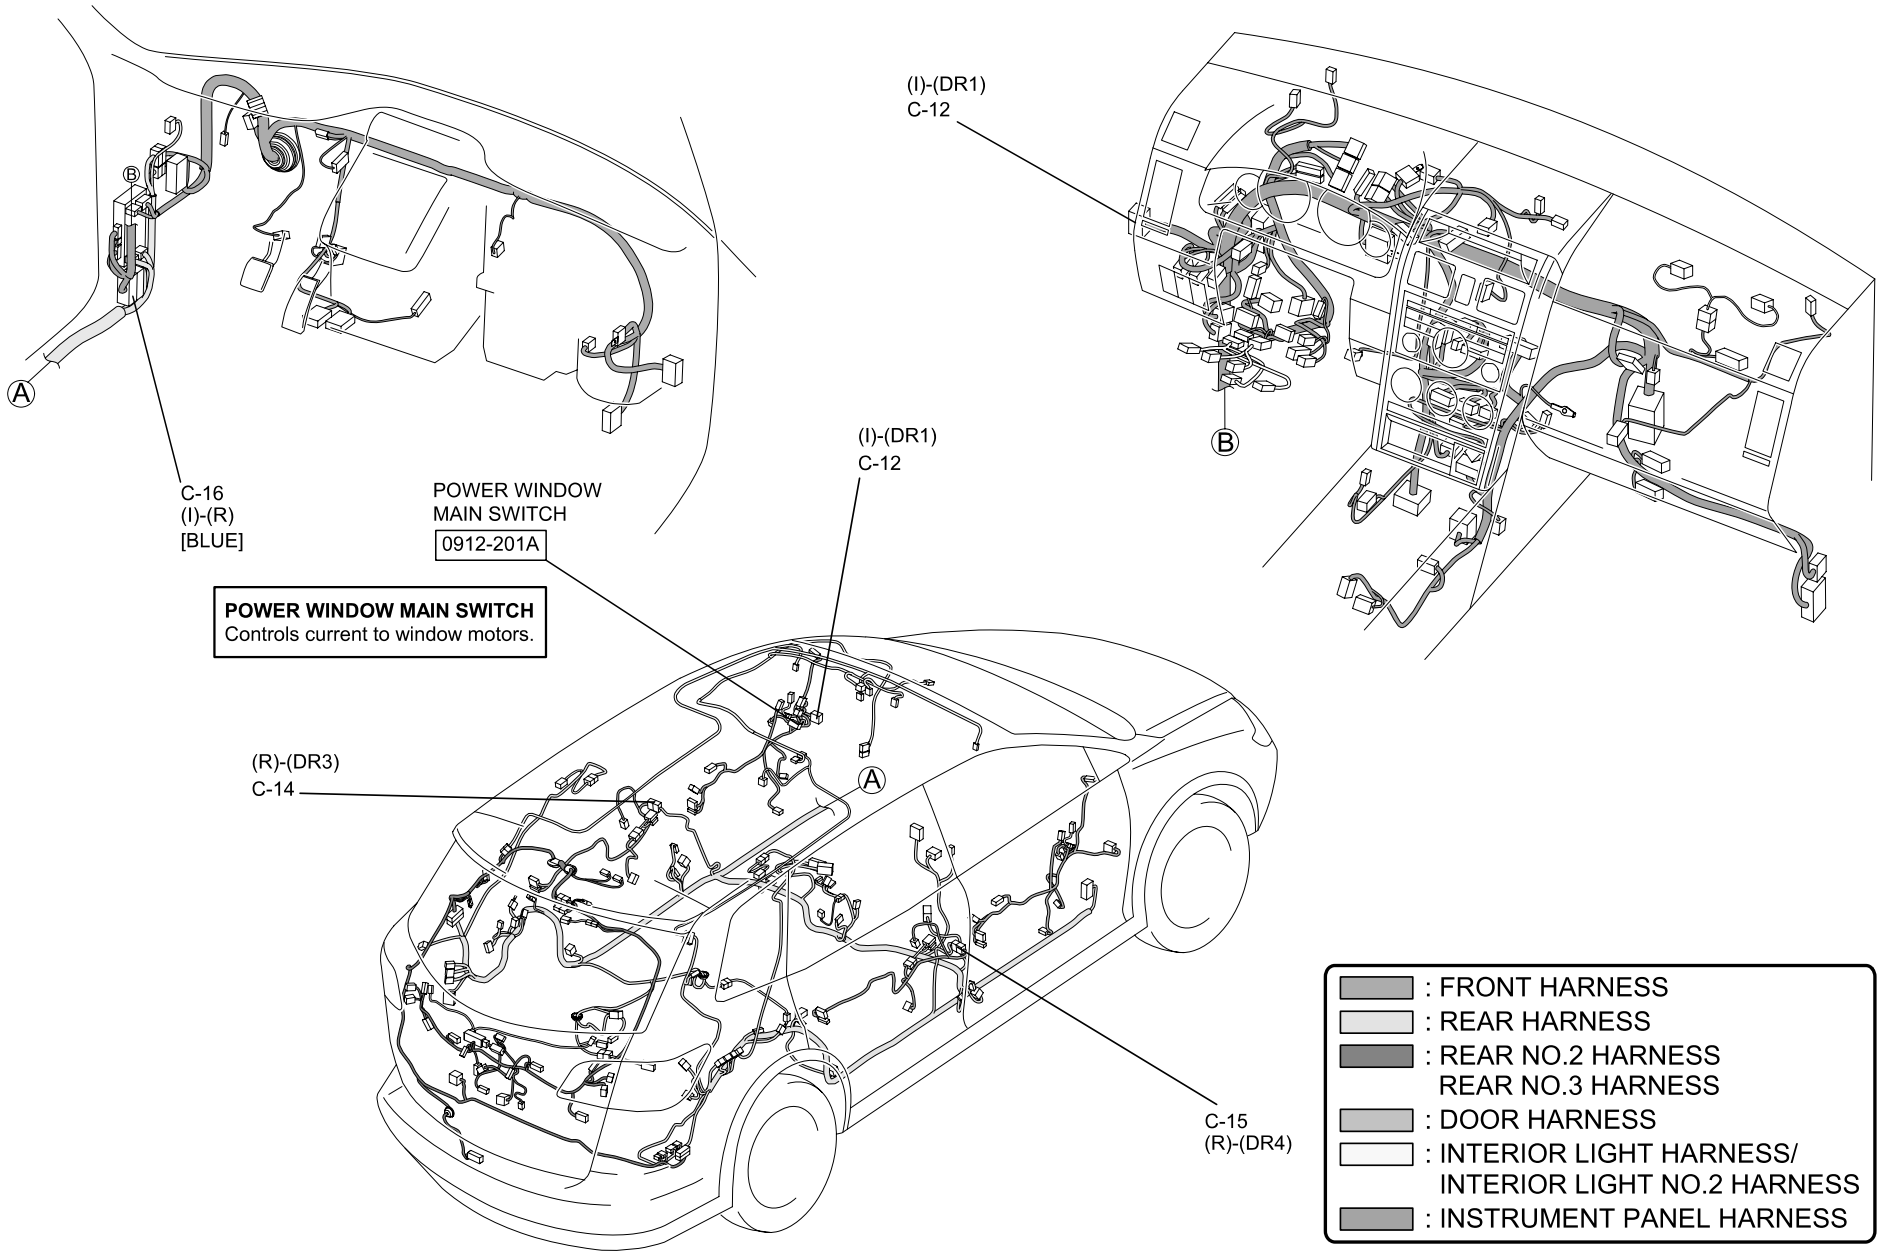

(I)-(DR1)
C-12
C-16
(I)-(R)
[BLUE]
POWER WINDOW
MAIN SWITCH
0912-201A
(I)-(DR1)
C-12
POWER WINDOW MAIN SWITCH
Controls current to window motors.
(R)-(DR3)
C-14
C-15
(R)-(DR4)
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

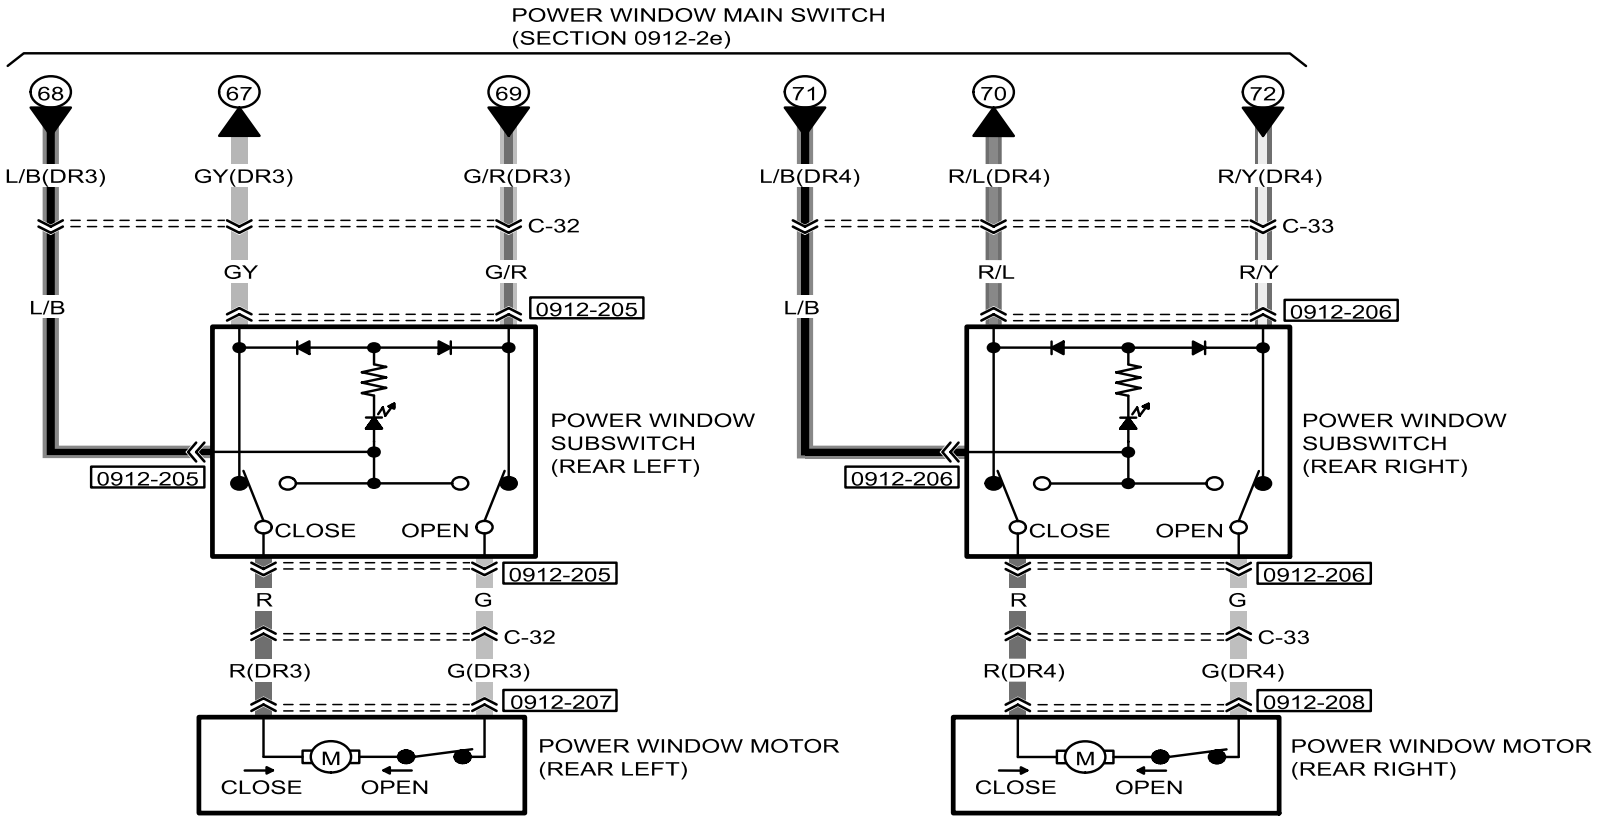


0912-205 POWER WINDOW SUBSWITCH(REAR LEFT)	0912-206 POWER WINDOW SUBSWITCH (REAR RIGHT)	0912-207 POWER WINDOW MOTOR(REAR LEFT)	0912-208 POWER WINDOW MOTOR(REAR RIGHT)	


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

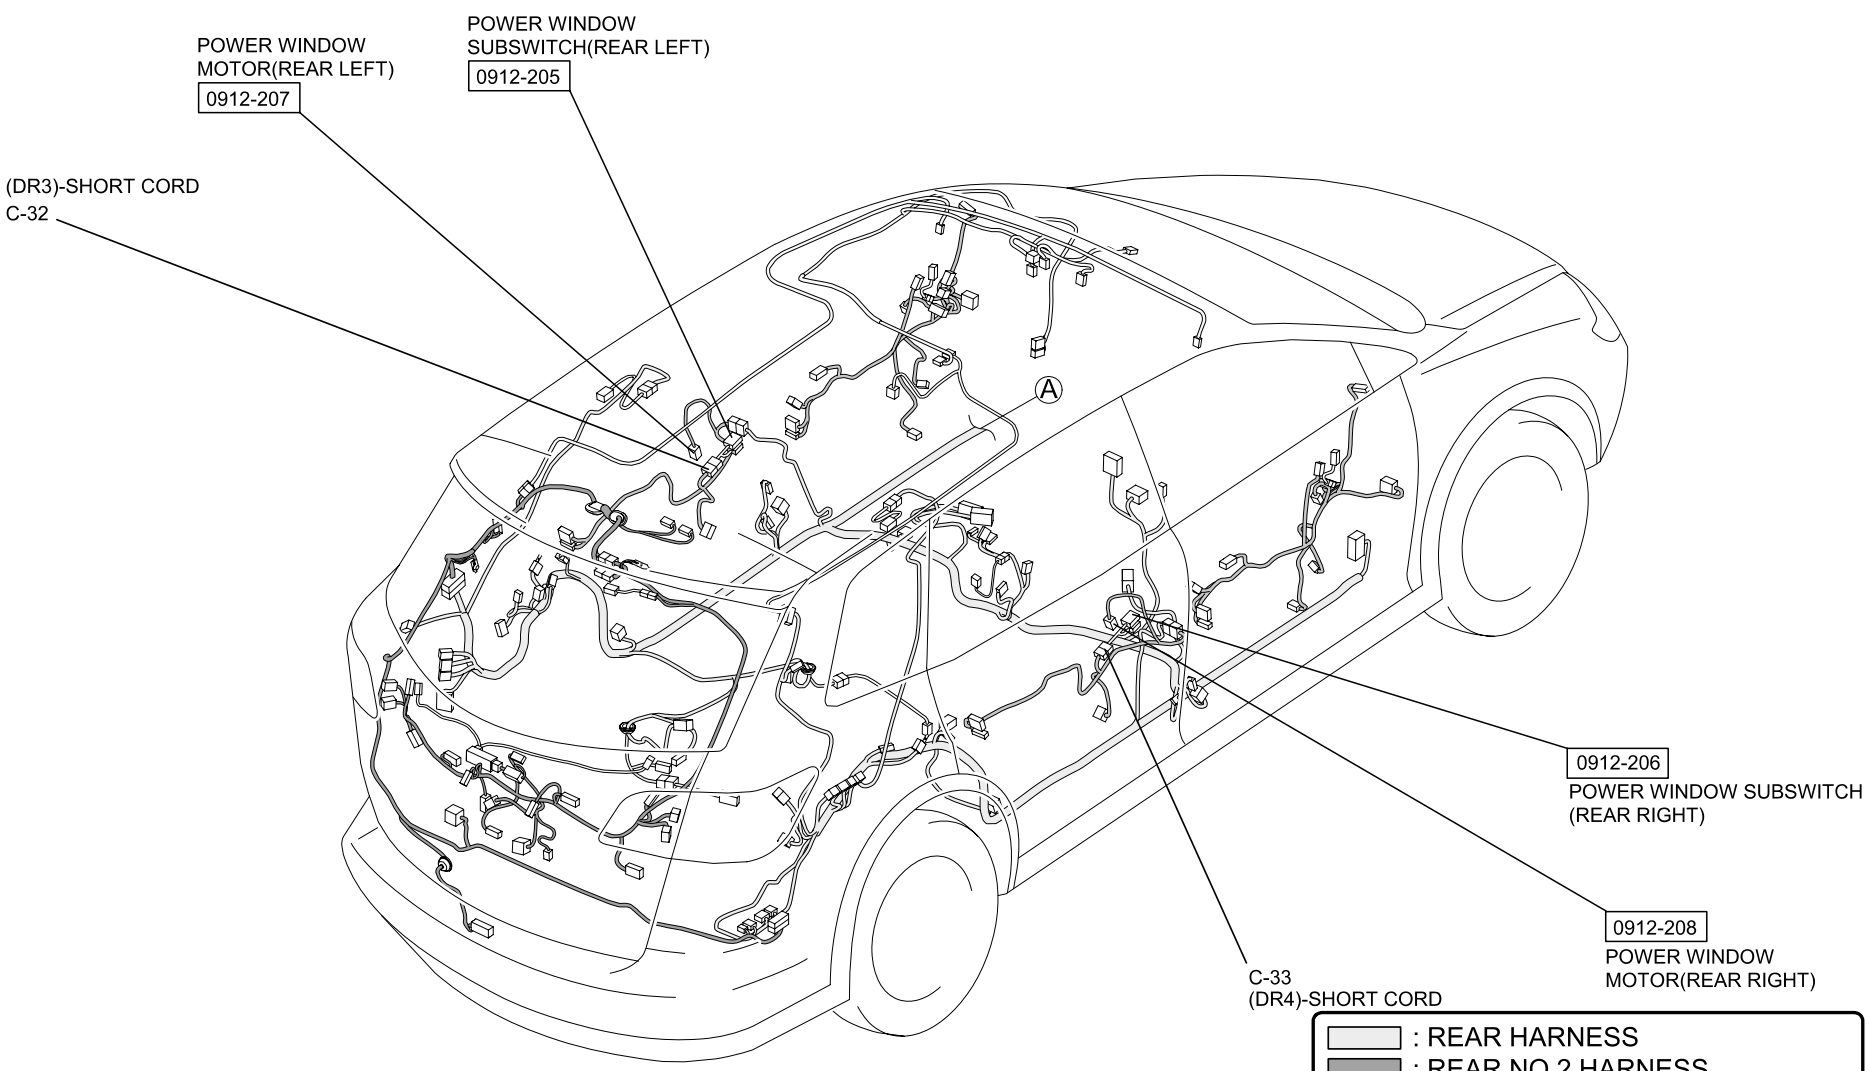

POWER WINDOW
MOTOR(REAR LEFT)
0912-207
POWER WINDOW
SUBSWITCH(REAR LEFT)
0912-205
(DR3)-SHORT CORD
C-32
A
0912-206
POWER WINDOW SUBSWITCH
(REAR RIGHT)
0912-208
POWER WINDOW
MOTOR(REAR RIGHT)
C-33
(DR4)-SHORT CORD
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

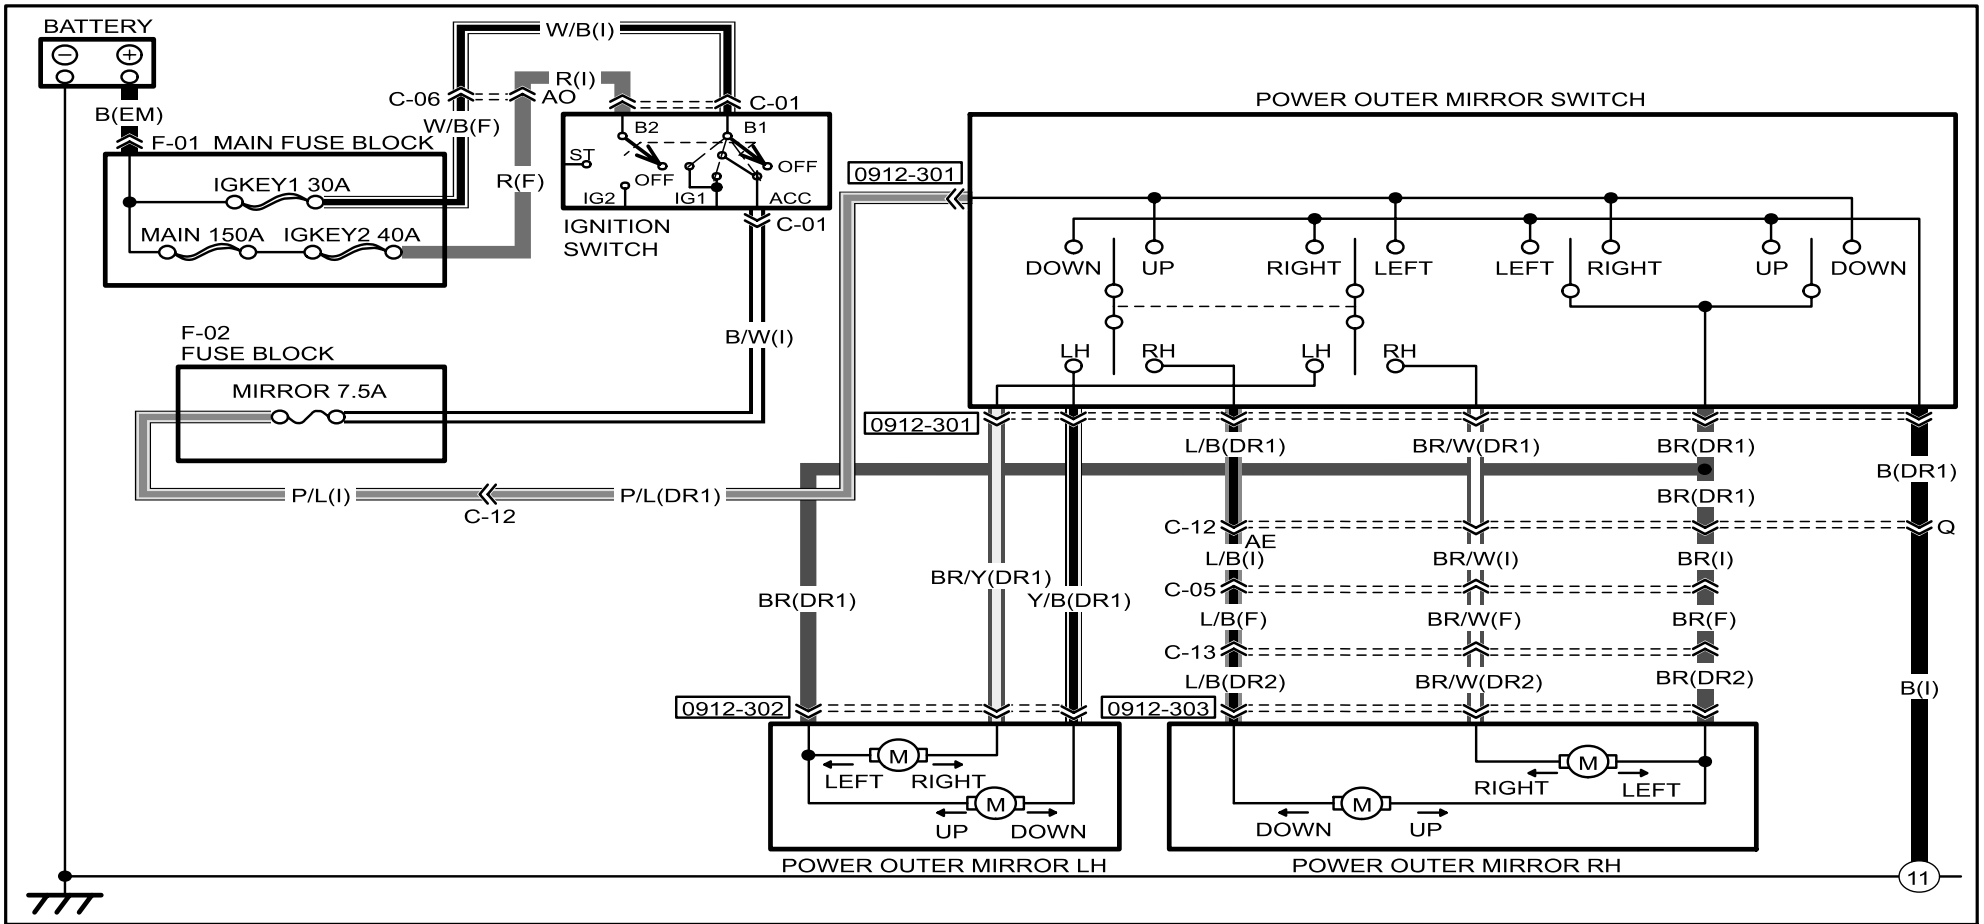


0912-301	0912-302	0912-303	
POWER OUTER MIRROR SWITCH	HEATED OUTER MIRROR LH / POWER OUTER MIRROR LH / FRONT SIDE TURN LIGHT (BUILT INTO OUTER MIRROR)LH	HEATED OUTER MIRROR RH/ POWER OUTER MIRROR RH / FRONT SIDE TURN LIGHT (BUILT INTO OUTER MIRROR)RH	




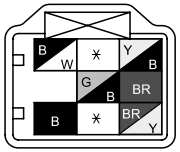

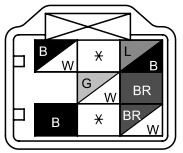


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

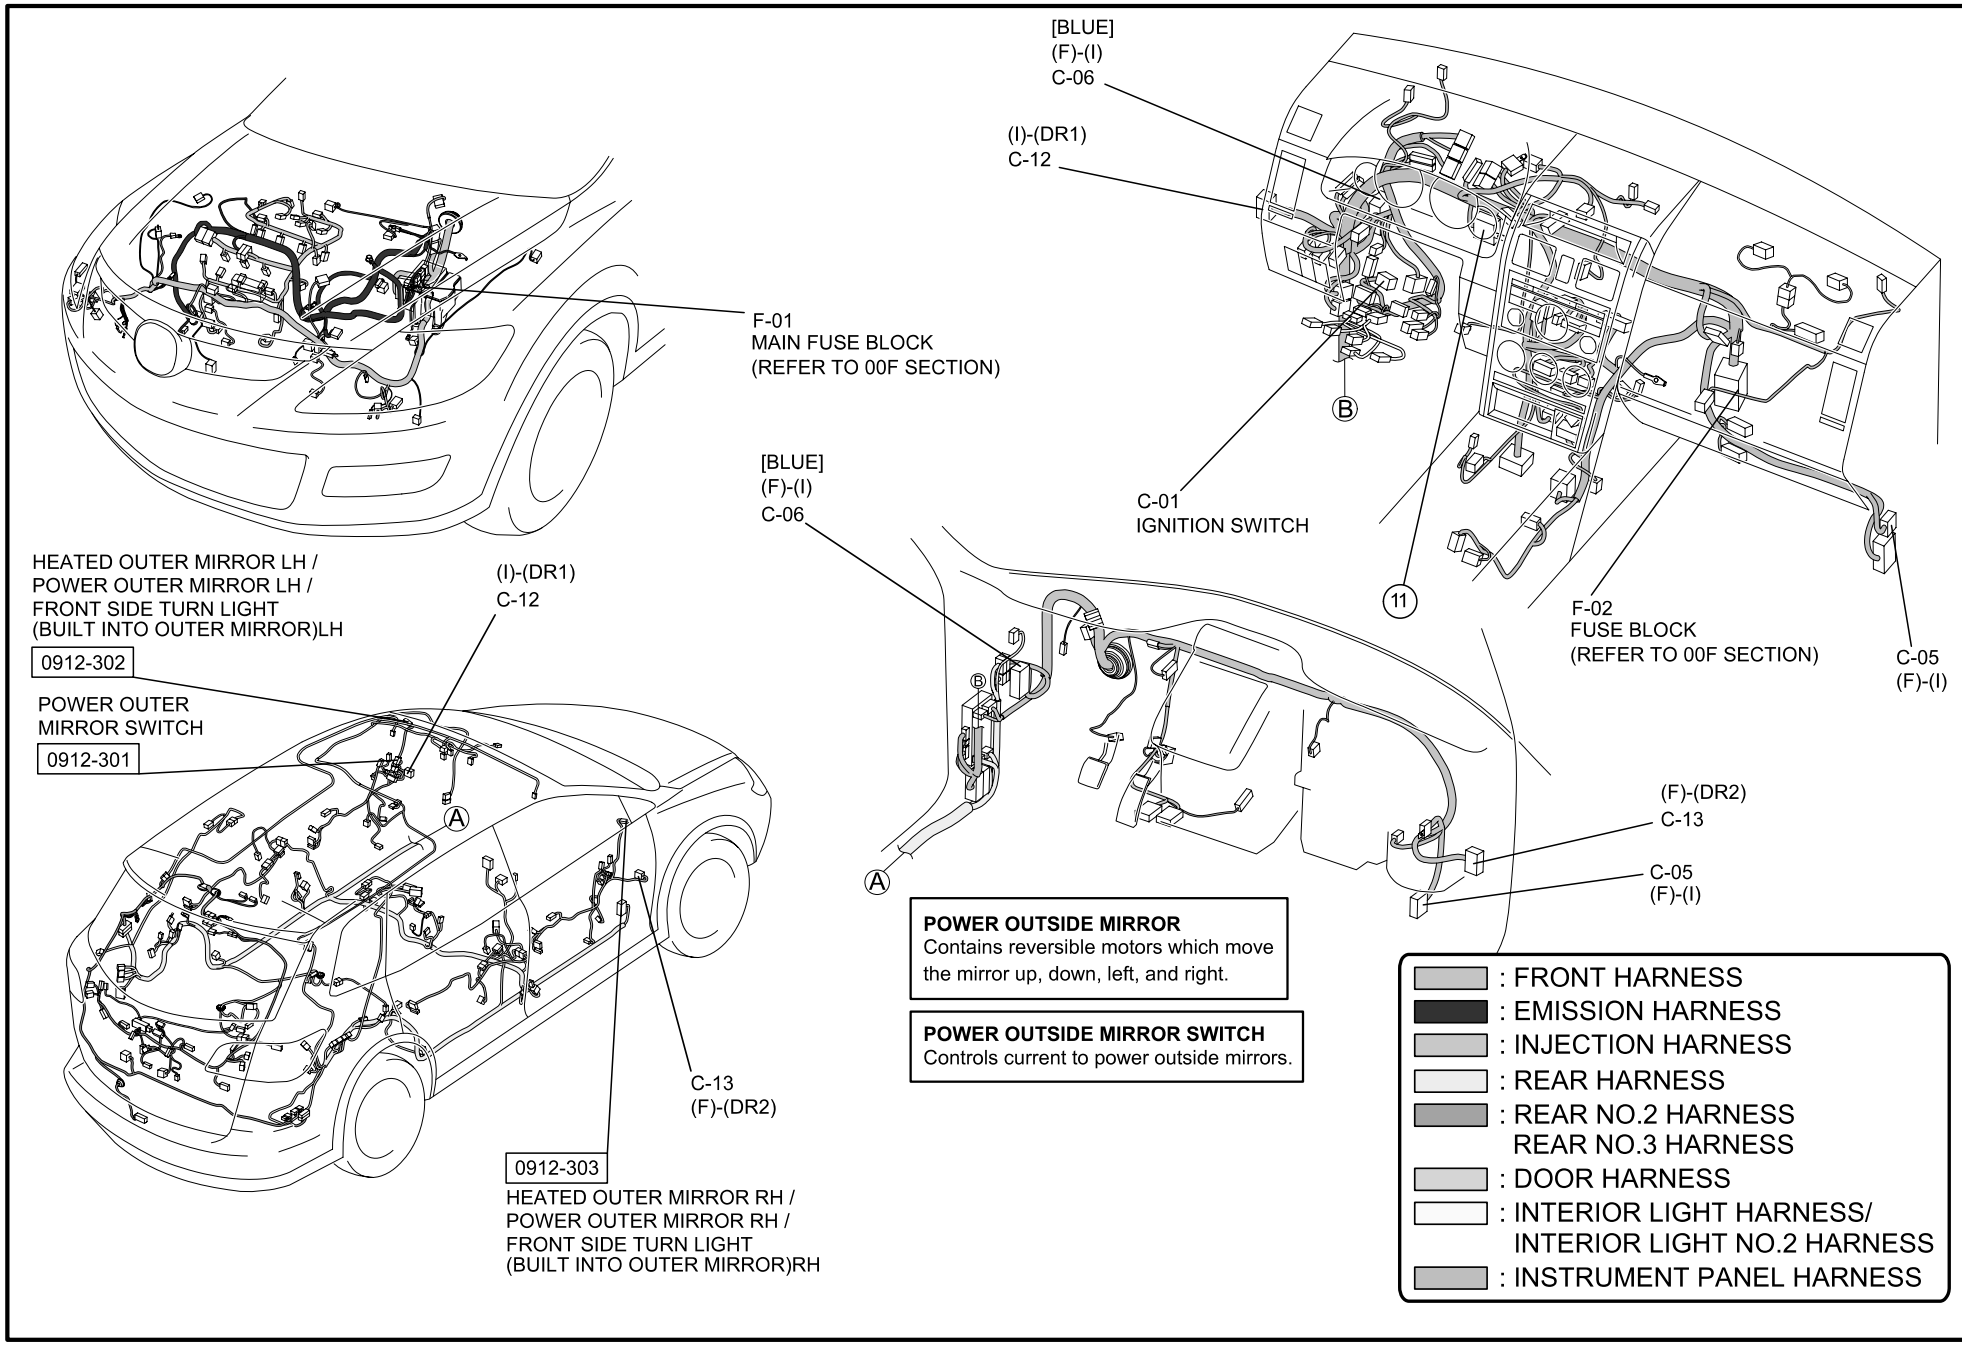

[BLUE]
(F)-(I)
C-06
(I)-(DR1)
C-12
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
C-01
IGNITION SWITCH
11
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
C-05
(F)-(I)
[BLUE]
(F)-(I)
C-06
HEATED OUTER MIRROR LH /
POWER OUTER MIRROR LH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)LH
0912-302
(I)-(DR1)
C-12
POWER OUTER
MIRROR SWITCH
0912-301
A
B
A
(F)-(DR2)
C-13
C-05
(F)-(I)
C-13
(F)-(DR2)
0912-303
HEATED OUTER MIRROR RH /
POWER OUTER MIRROR RH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)RH
POWER OUTSIDE MIRROR
Contains reversible motors which move the mirror up, down, left, and right.
POWER OUTSIDE MIRROR SWITCH
Controls current to power outside mirrors.
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

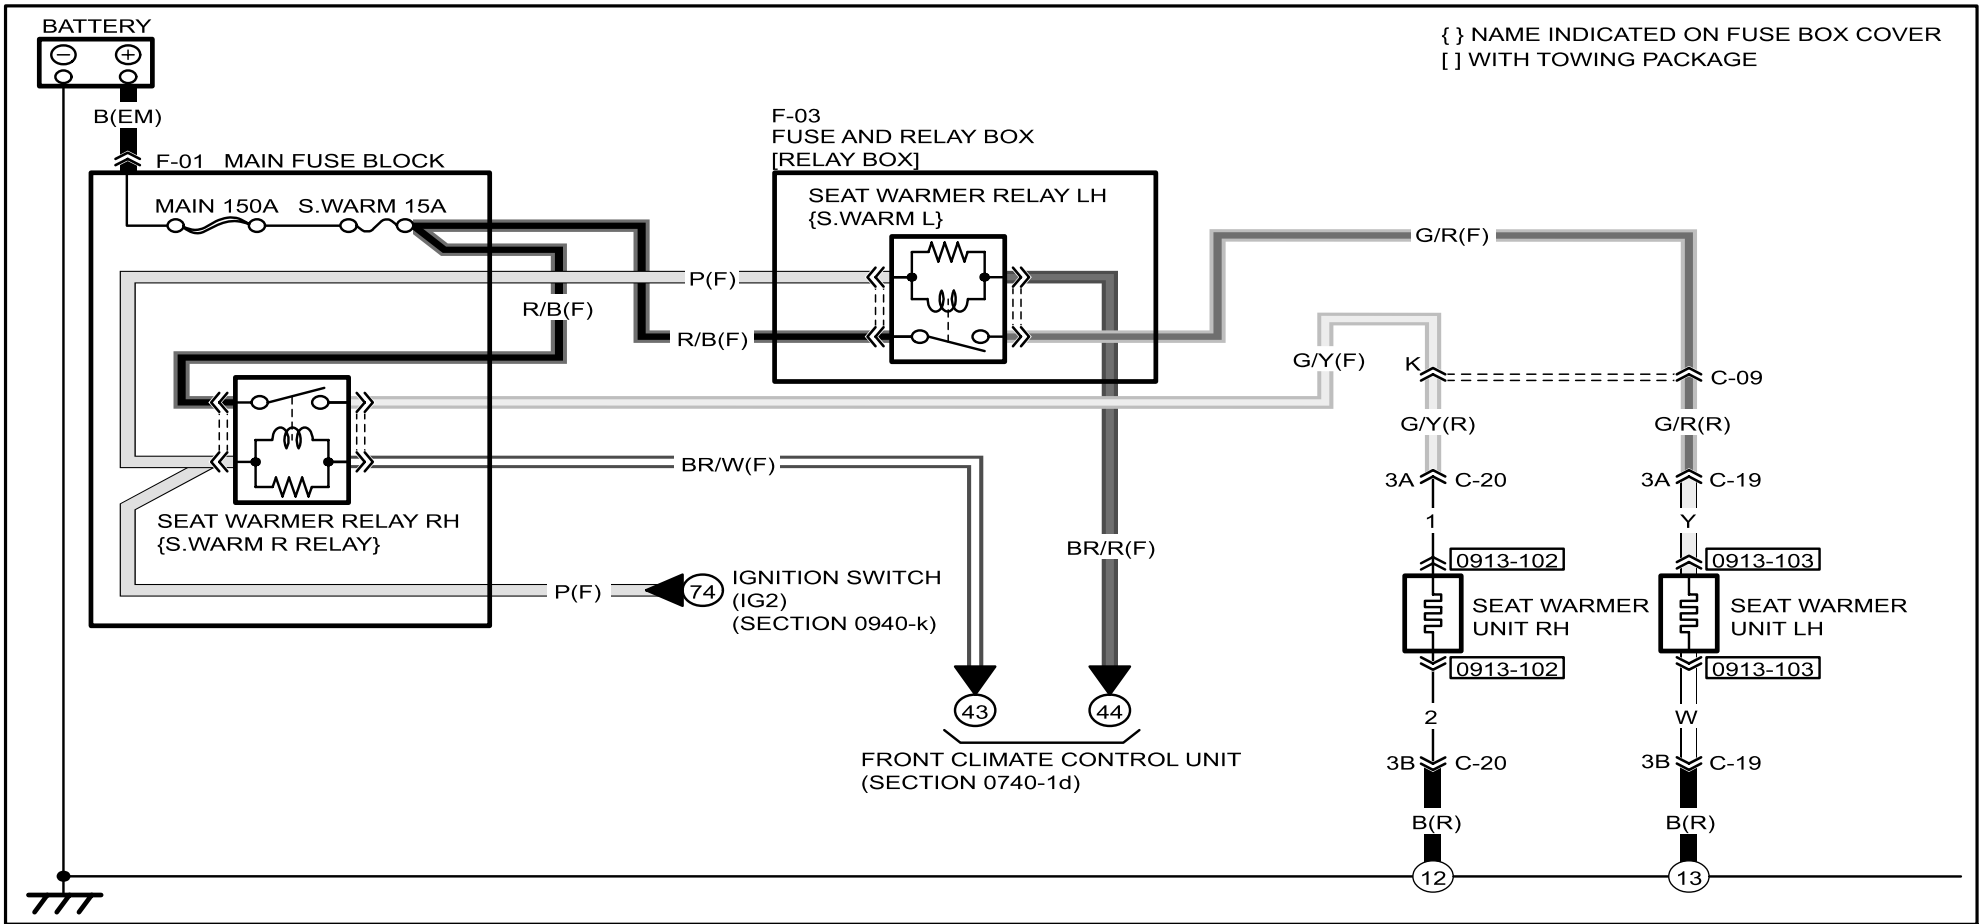


0913-102 SEAT WARMER UNIT RH	0913-103 SEAT WARMER UNIT LH					
 TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.						

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

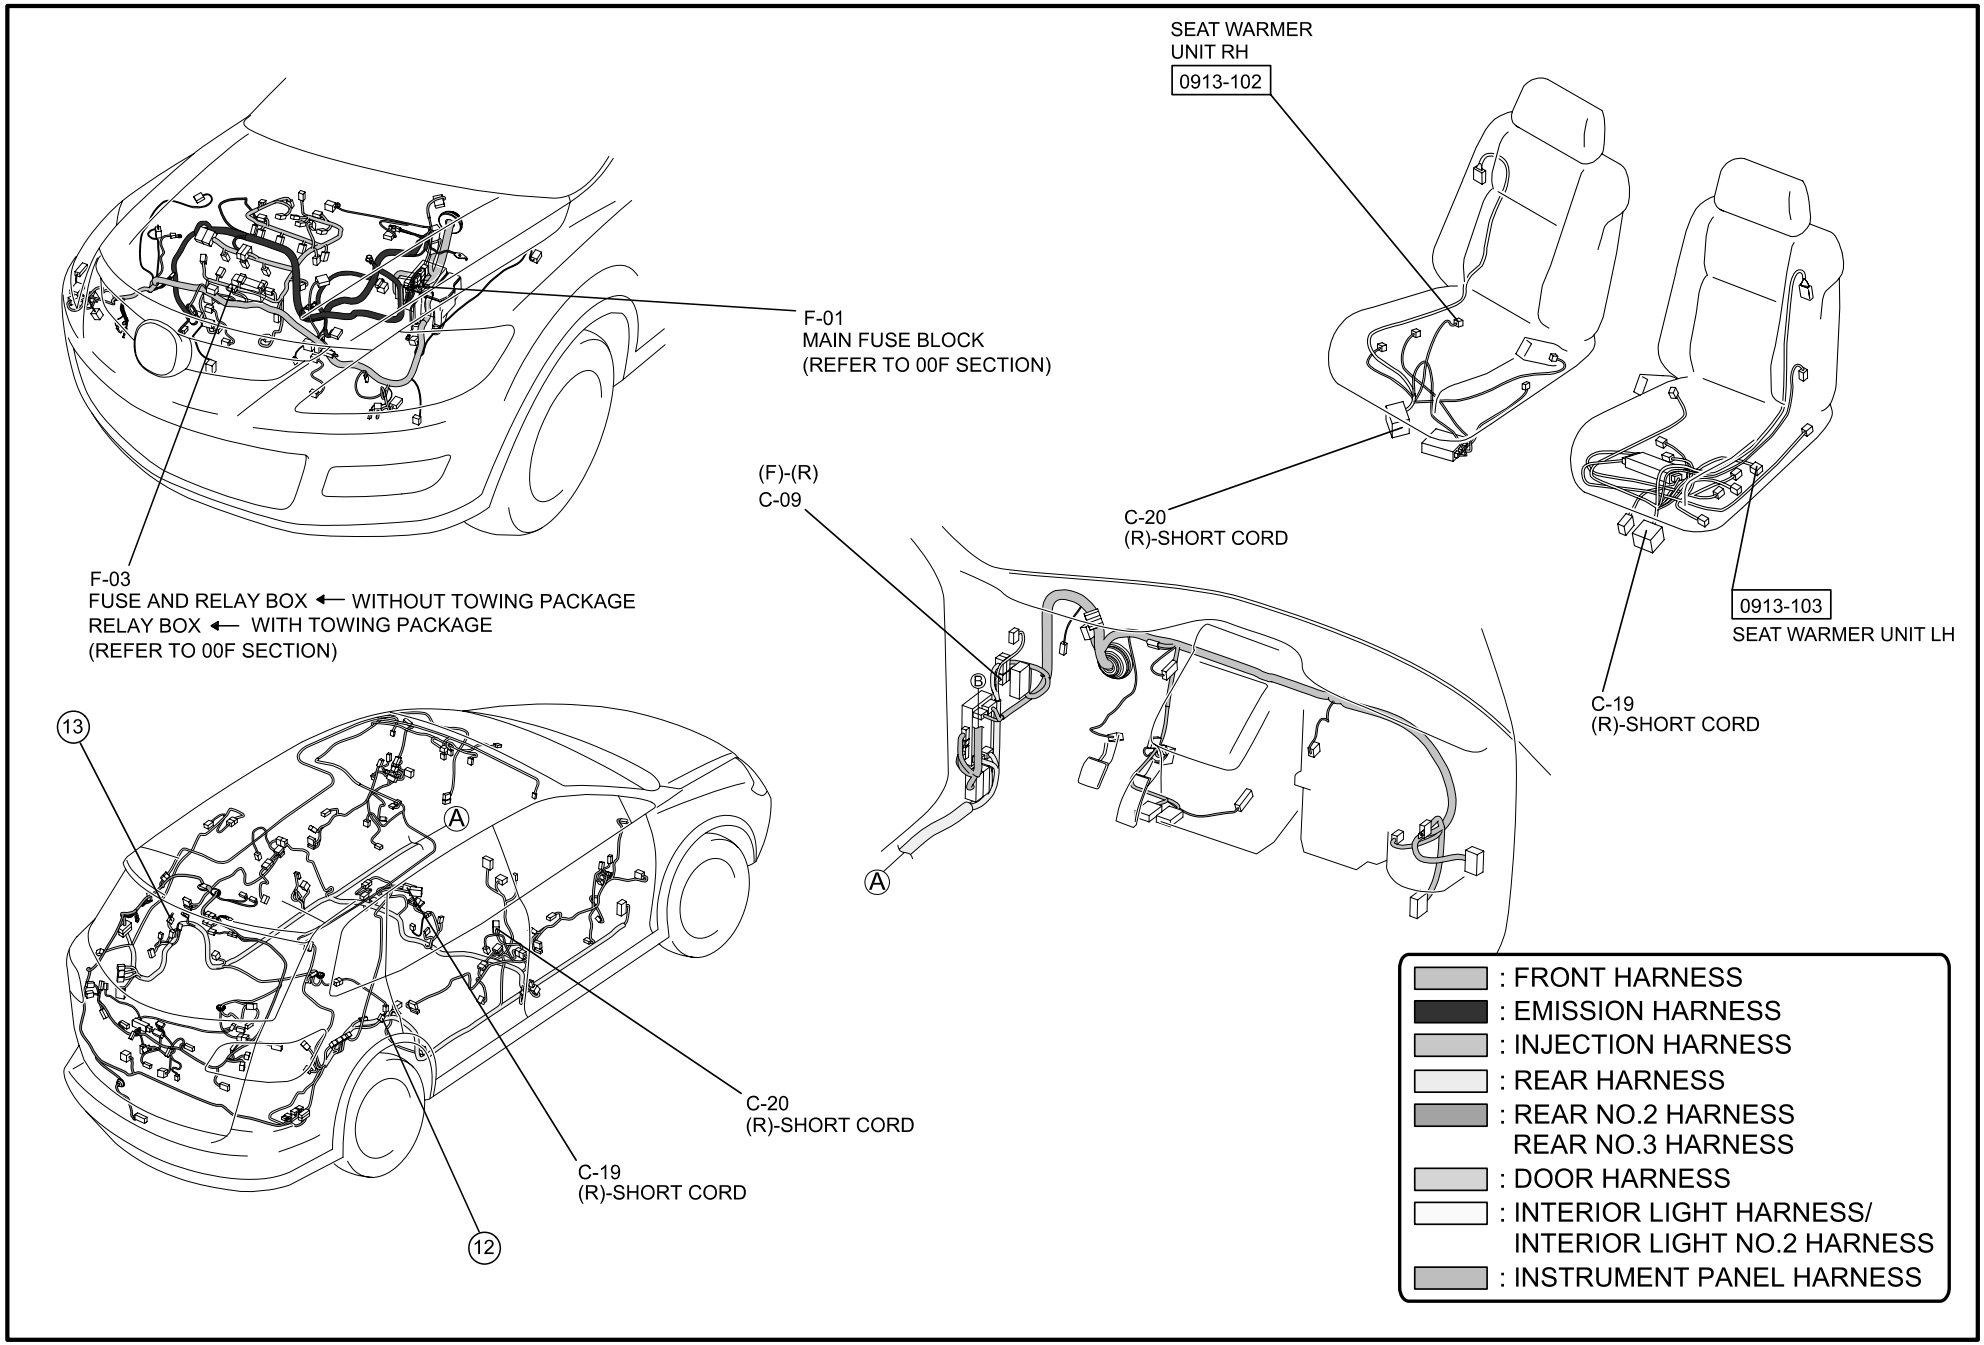

SEAT WARMER
UNIT RH
0913-102
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
F-03
FUSE AND RELAY BOX ← WITHOUT TOWING PACKAGE
RELAY BOX ← WITH TOWING PACKAGE
(REFER TO 00F SECTION)
(F)-(R)
C-09
C-20
(R)-SHORT CORD
0913-103
SEAT WARMER UNIT LH
C-19
(R)-SHORT CORD
13
A
B
A
C-20
(R)-SHORT CORD
C-19
(R)-SHORT CORD
12
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

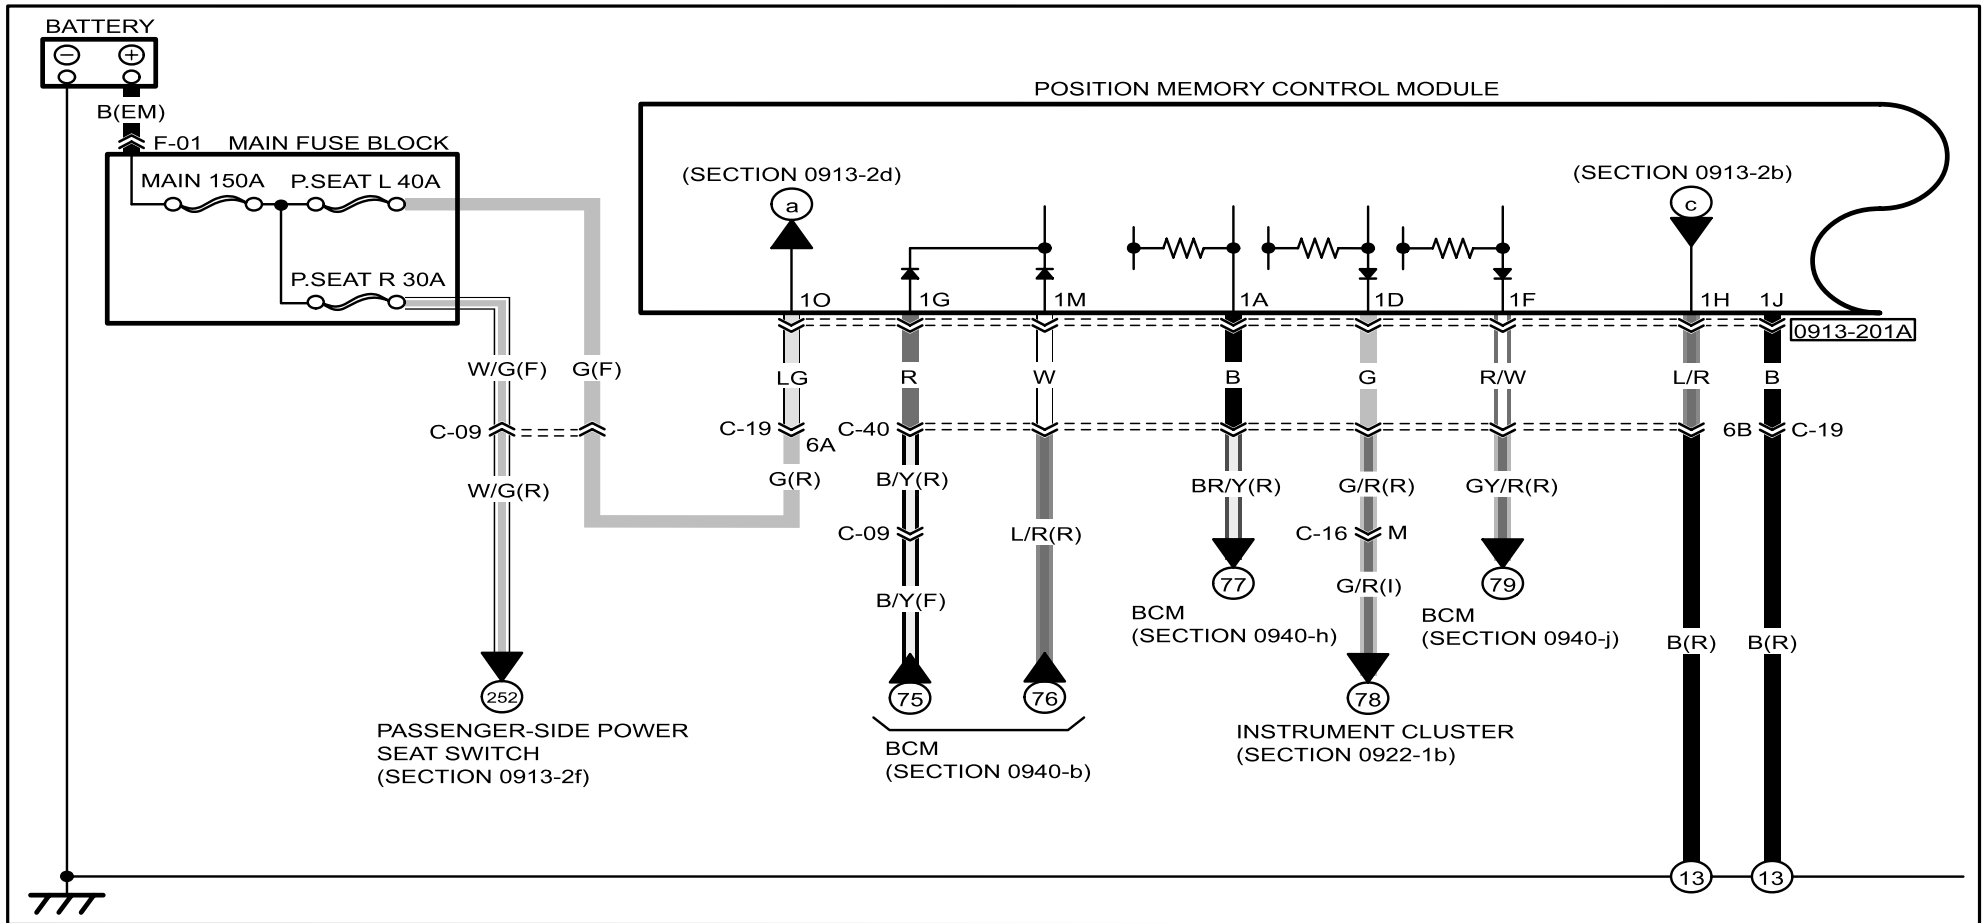


0913-201A
POSITION MEMORY CONTROL MODULE

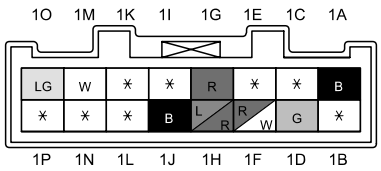


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

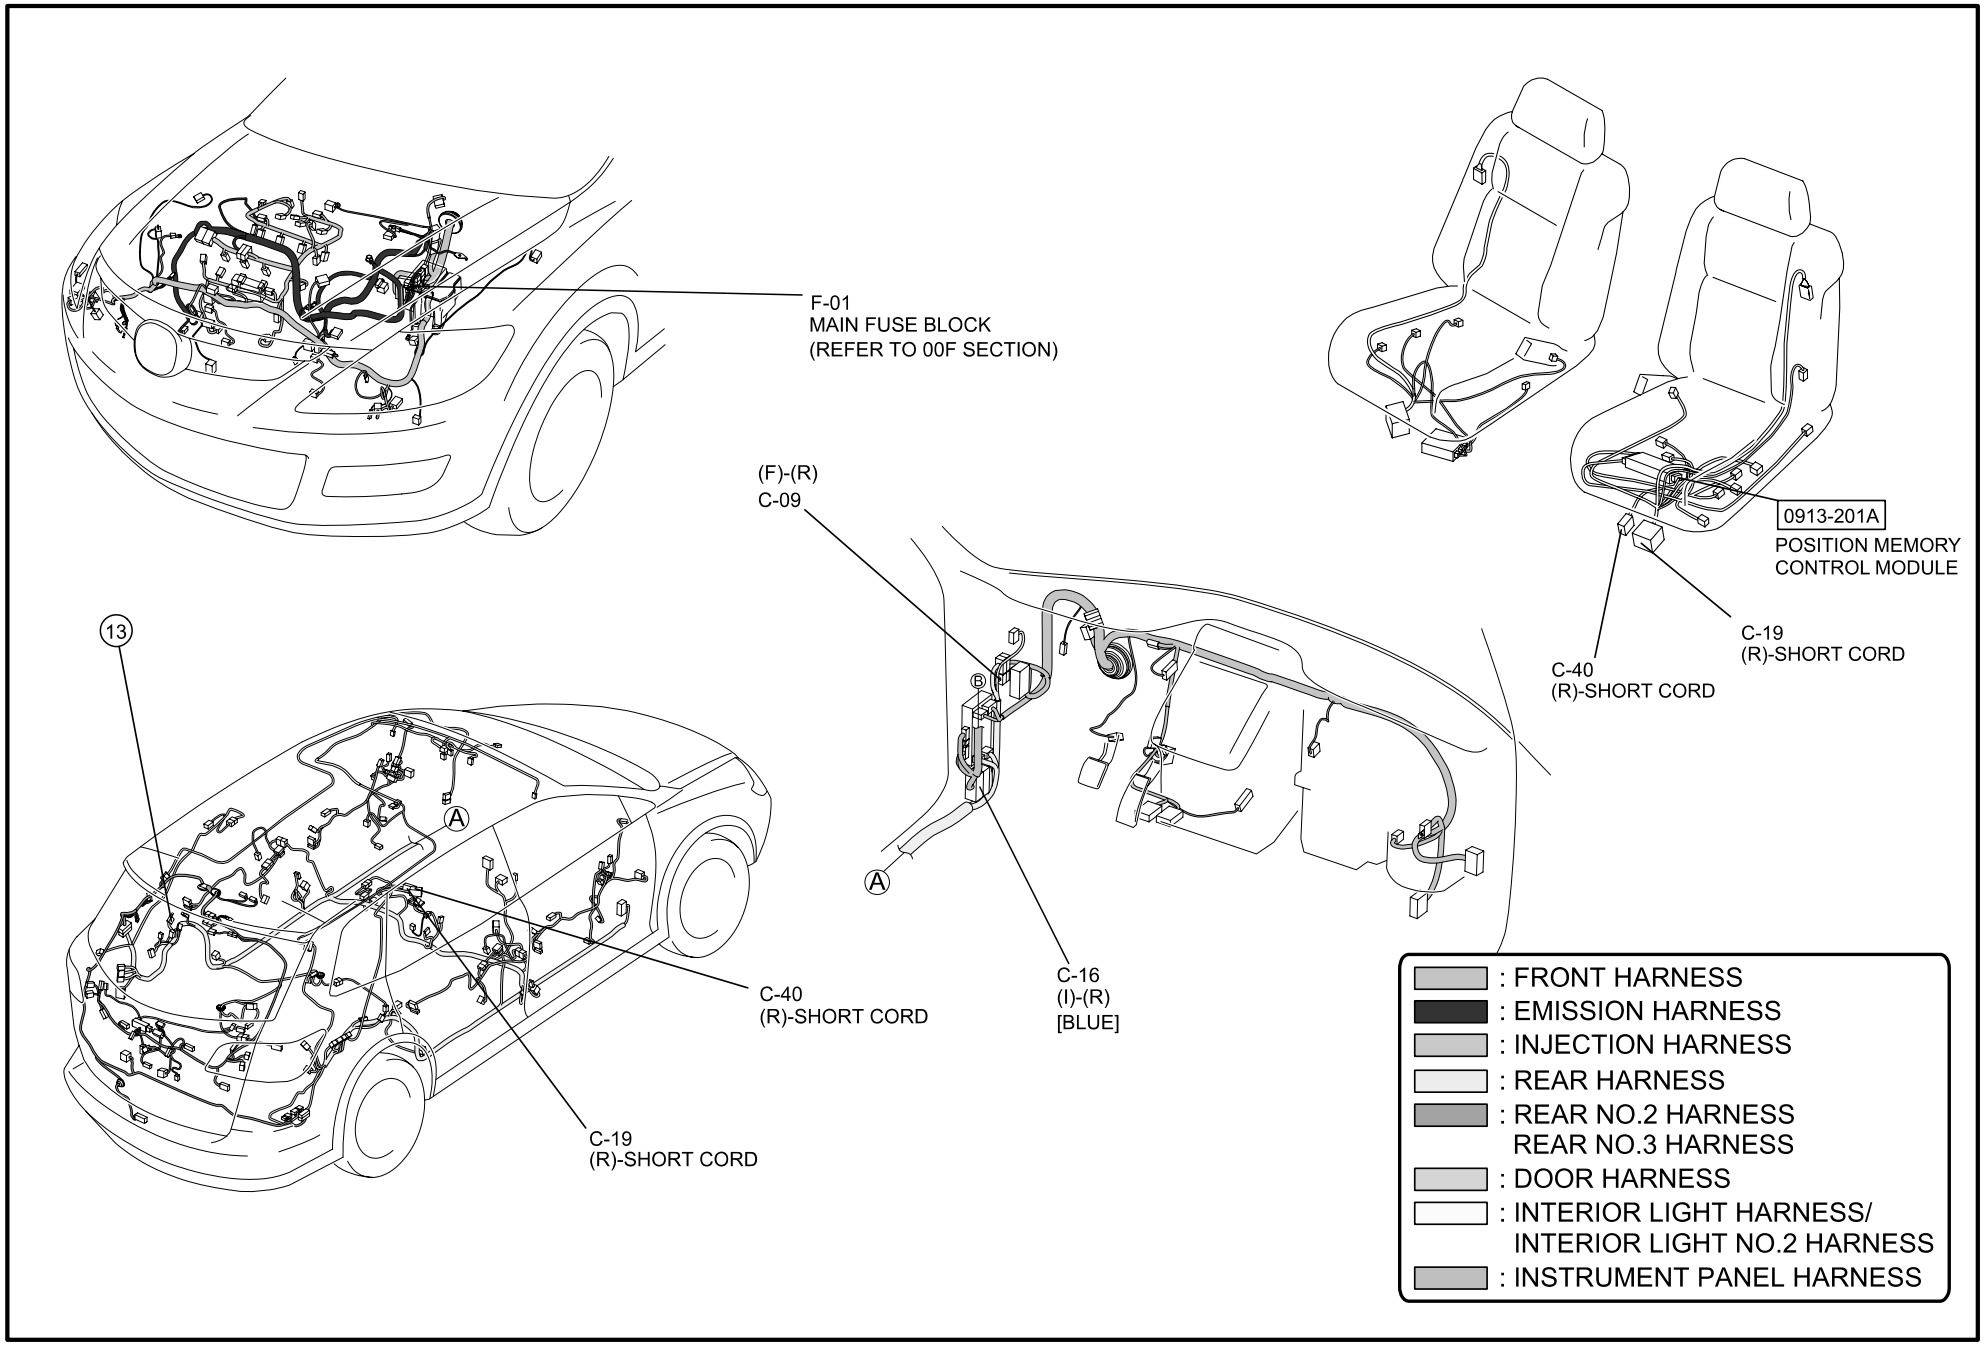

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
(F)-(R)
C-09
0913-201A
POSITION MEMORY
CONTROL MODULE
C-19
(R)-SHORT CORD
C-40
(R)-SHORT CORD
13
A
B
C-40
(R)-SHORT CORD
C-19
(R)-SHORT CORD
C-16
(I)-(R)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

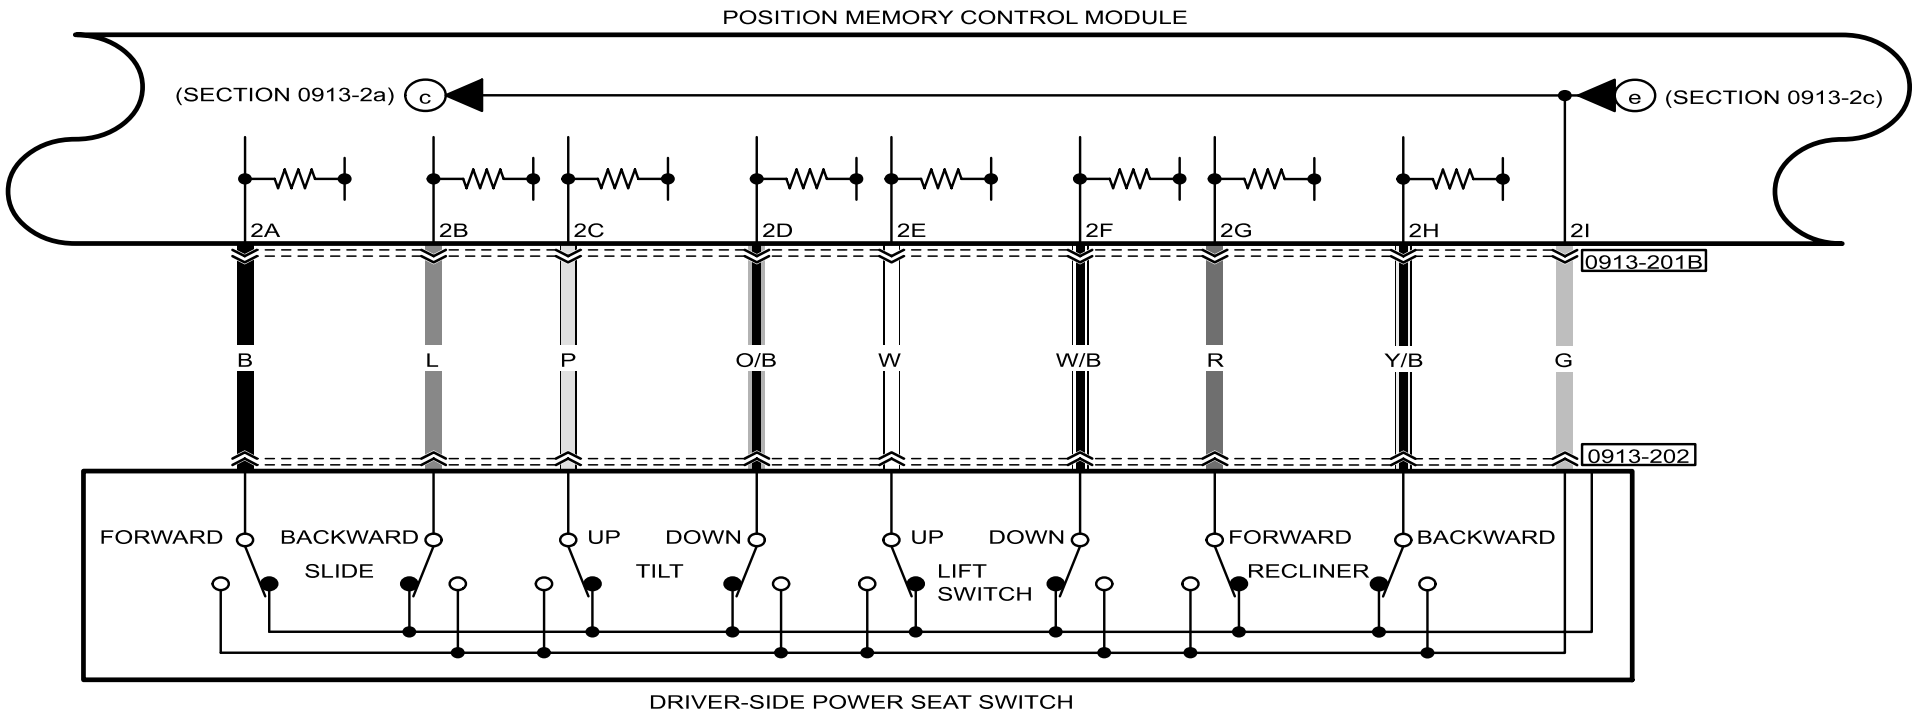


0913-201B
POSITION MEMORY CONTROL MODULE

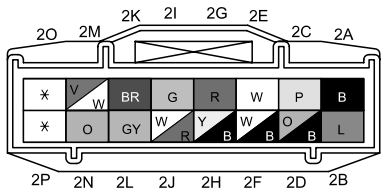


0913-202
DRIVER-SIDE POWER SEAT SWITCH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

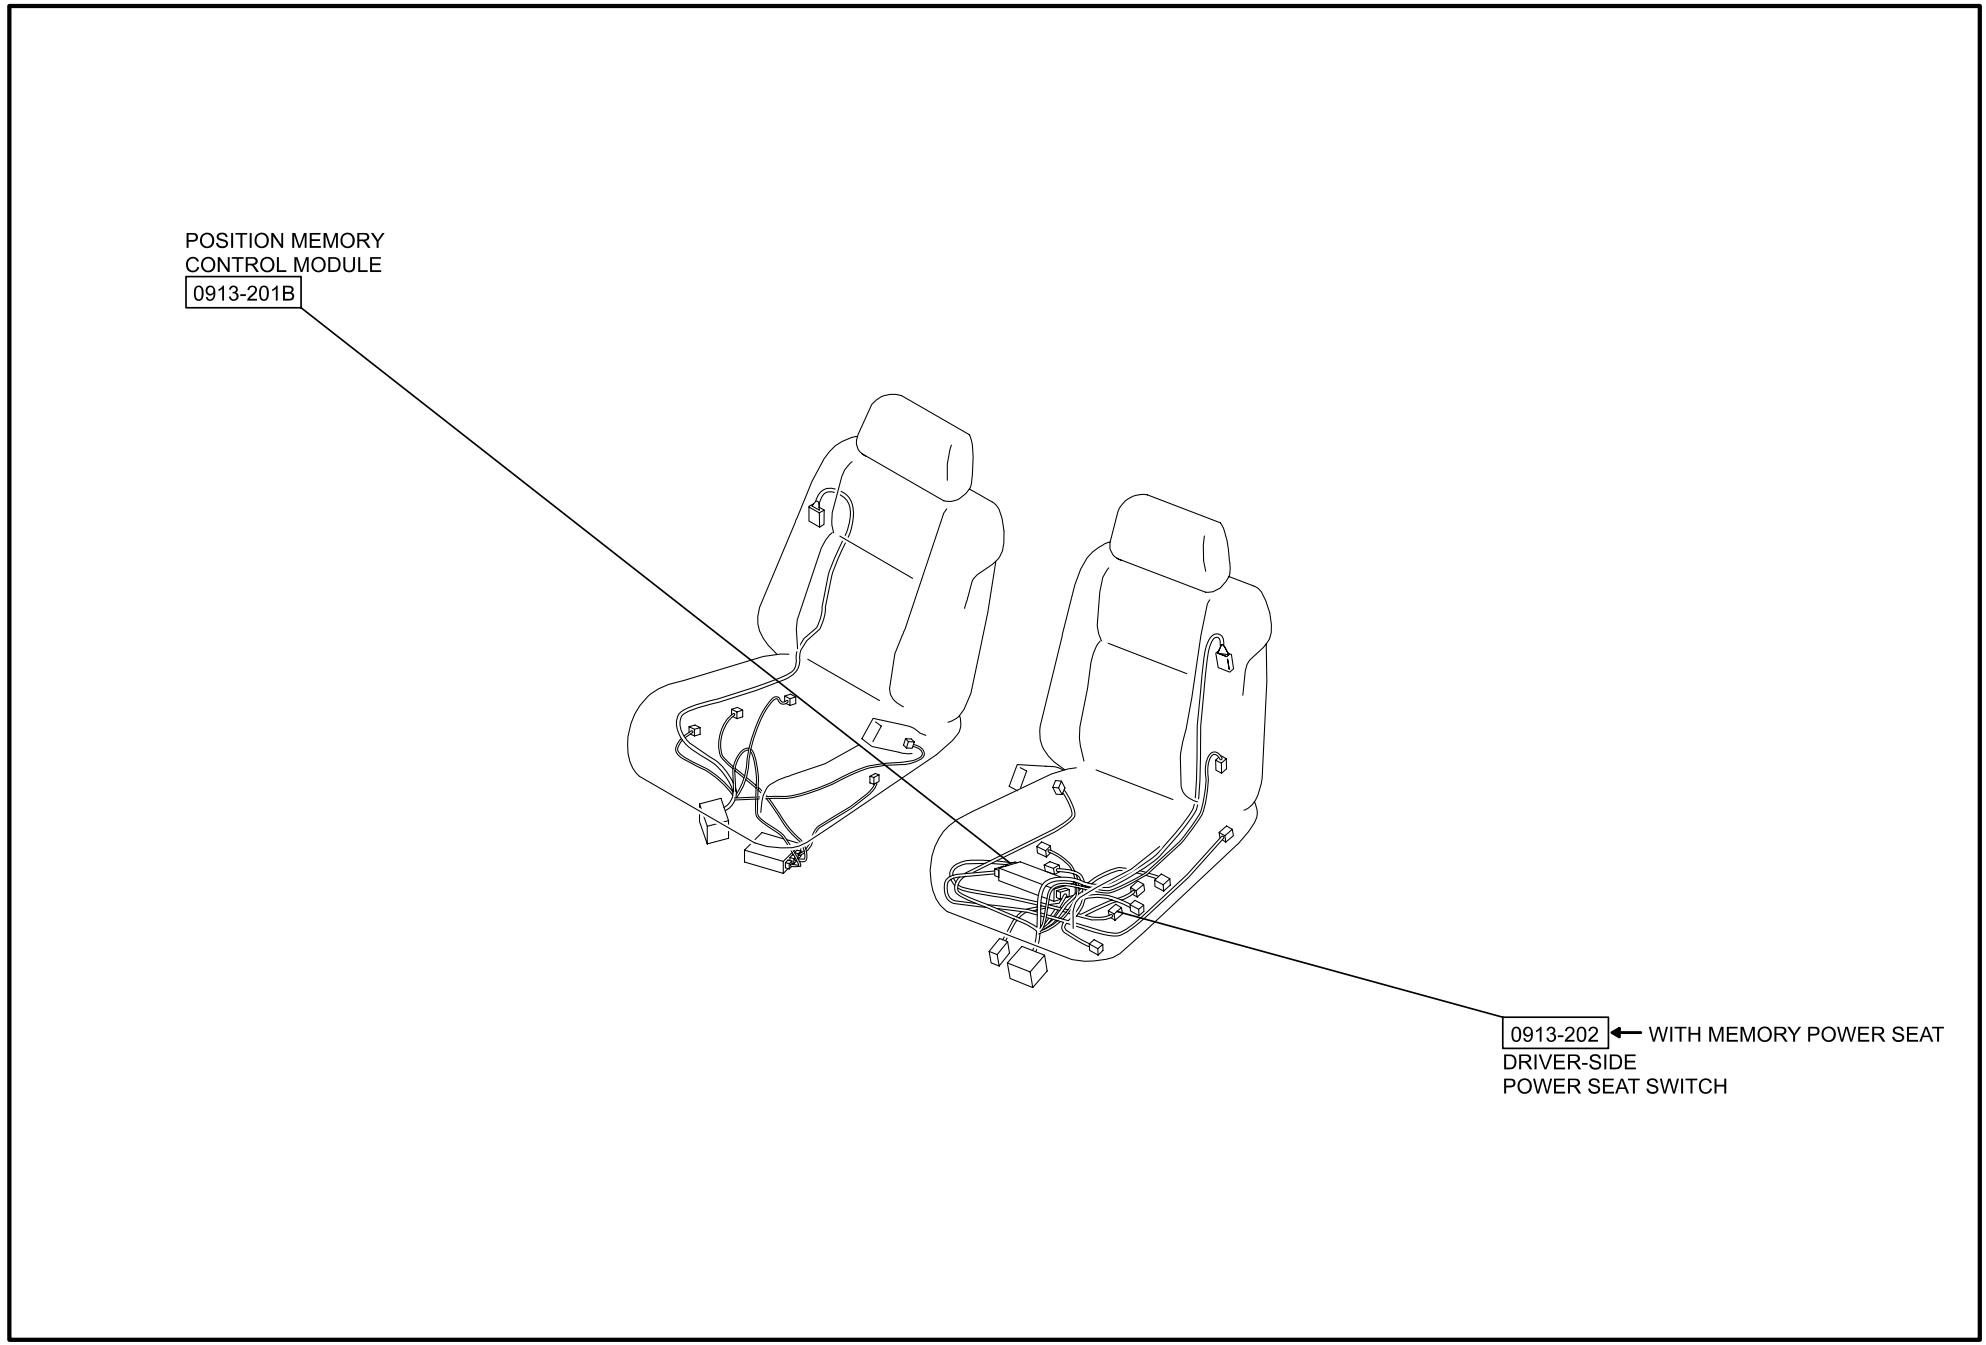
POSITION MEMORY
CONTROL MODULE
0913-201B
0913-202
WITH MEMORY POWER SEAT
DRIVER-SIDE
POWER SEAT SWITCH

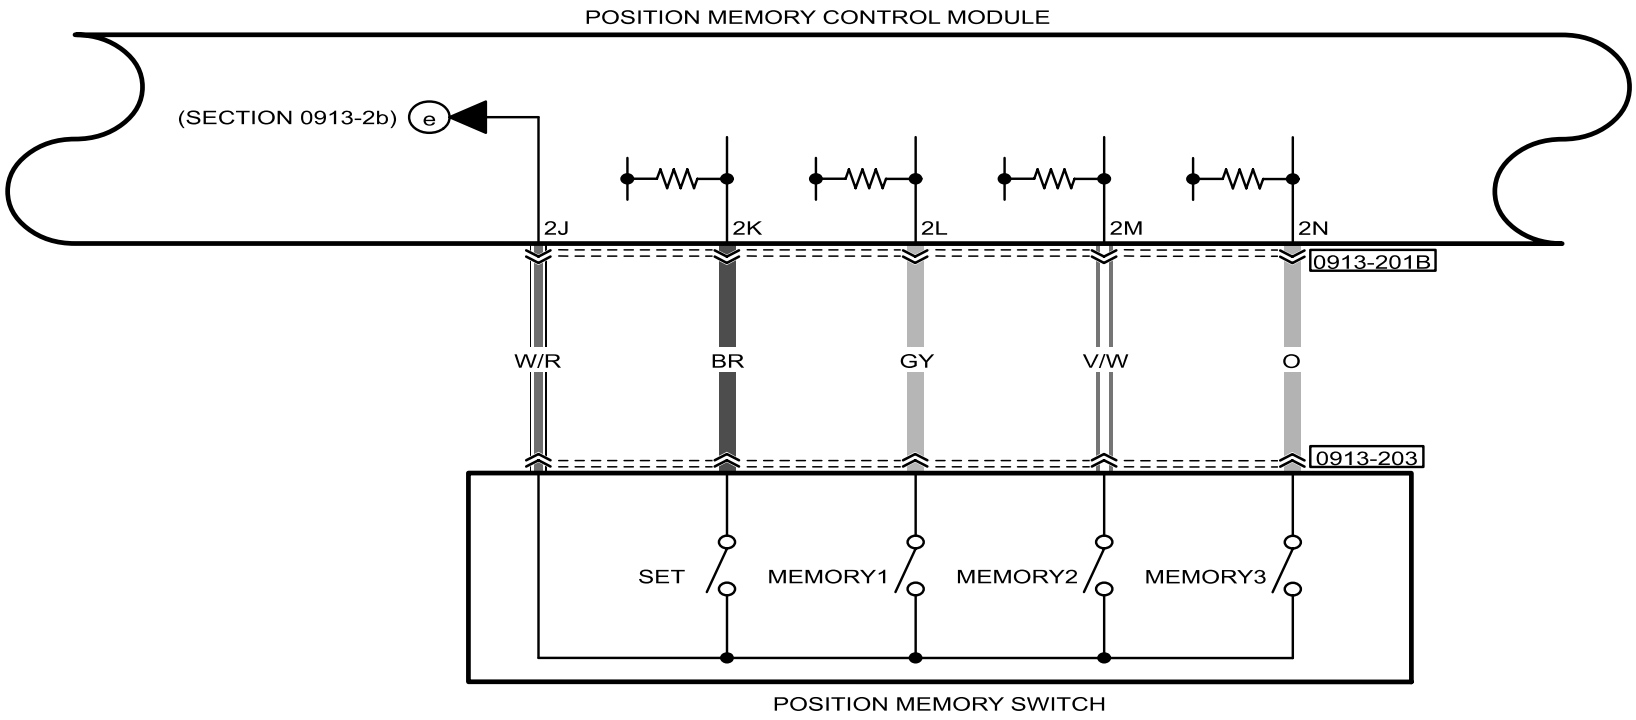


0913-201B
POSITION MEMORY CONTROL MODULE

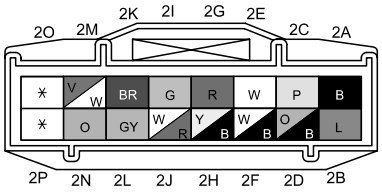


0913-203
POSITION MEMORY SWITCH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

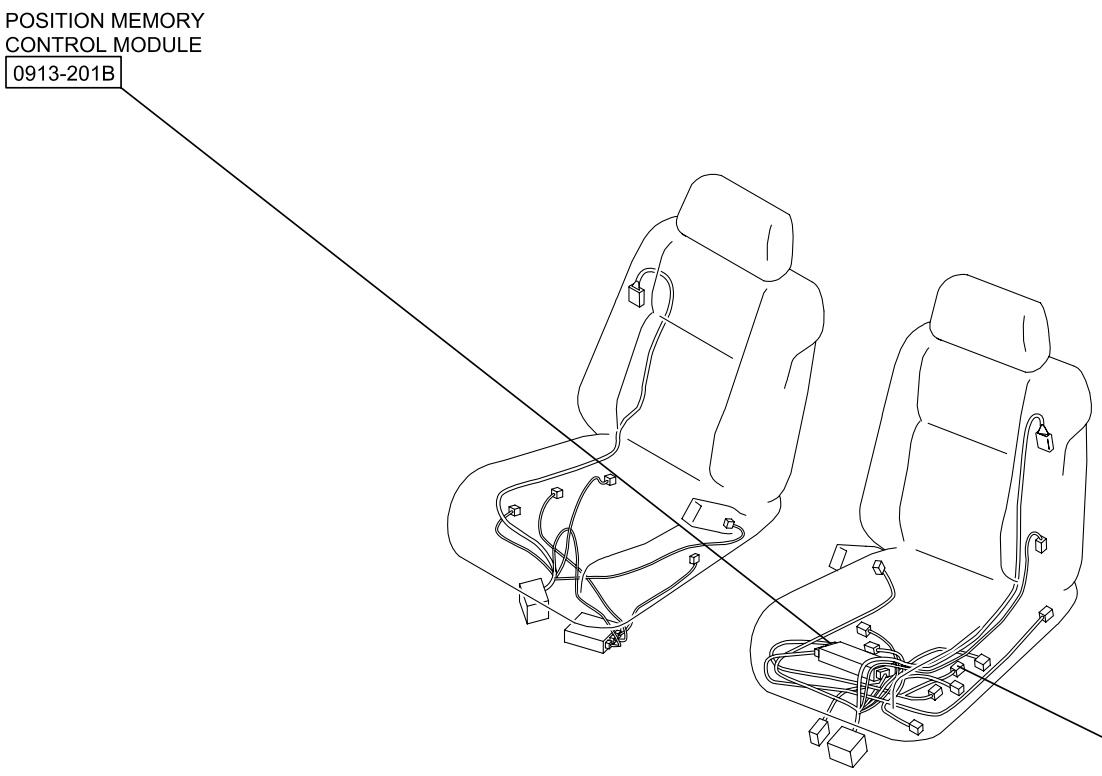
POSITION MEMORY
CONTROL MODULE
0913-201B
0913-203
POSITION MEMORY SWITCH

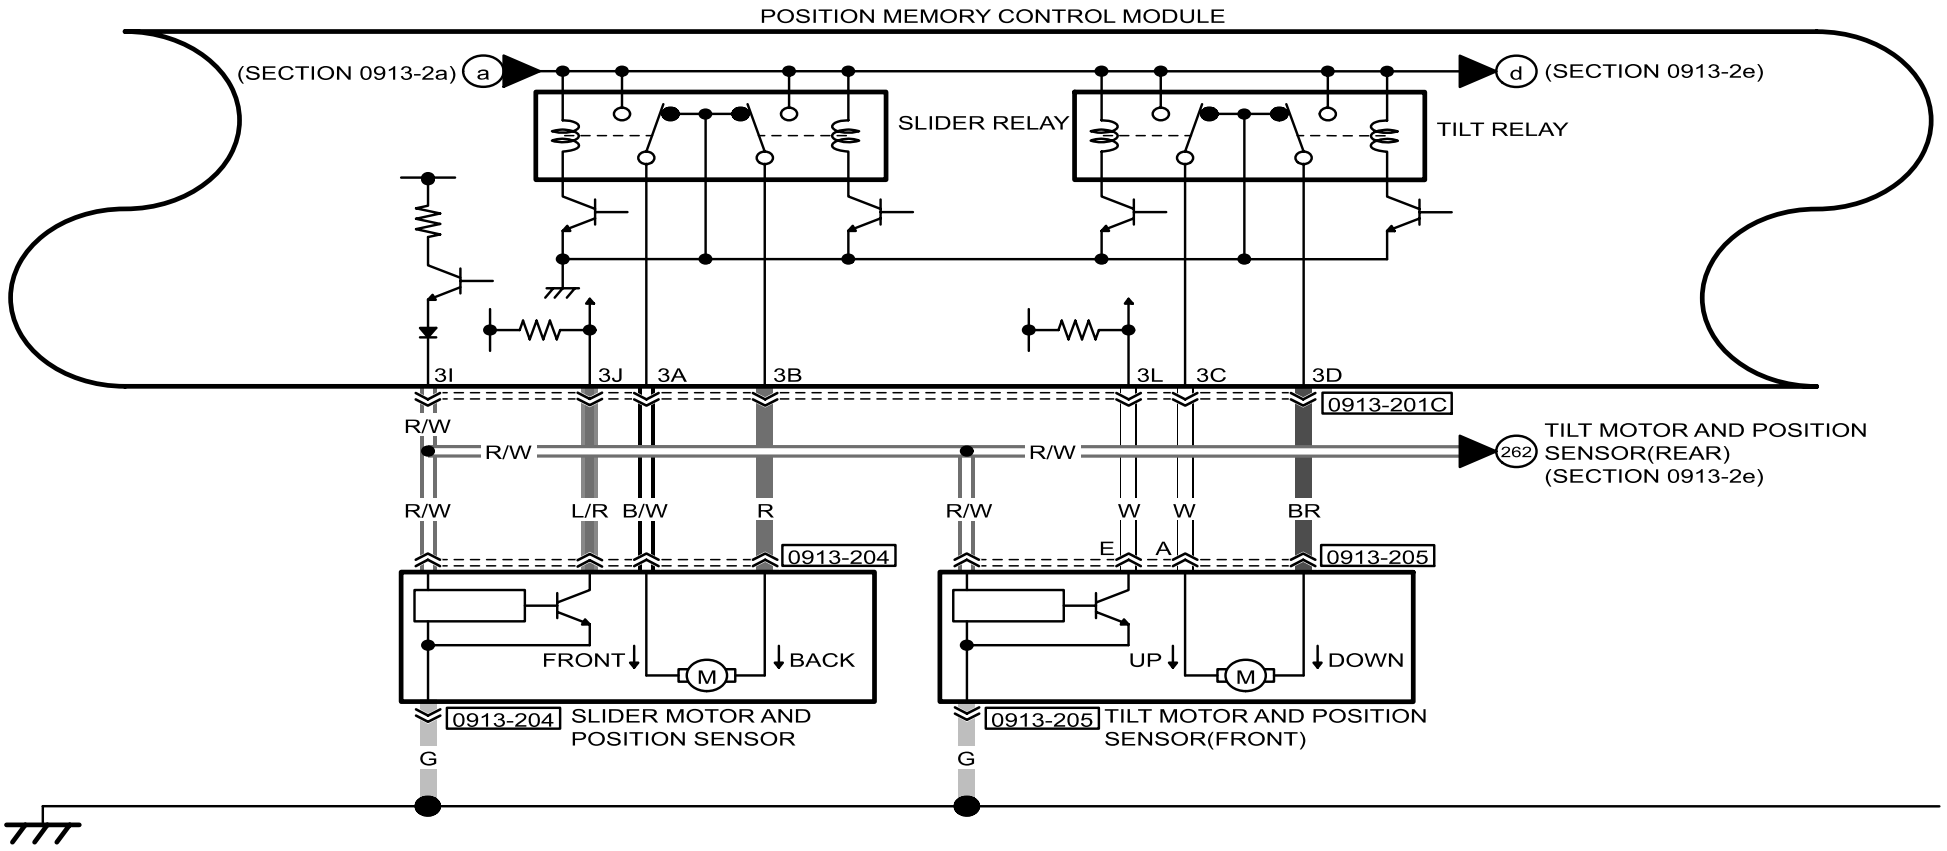


0913-201C
POSITION MEMORY CONTROL MODULE

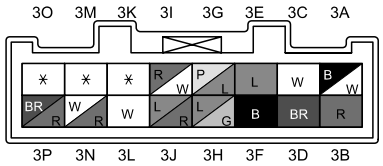


0913-204
SLIDER MOTOR AND POSITION SENSOR




0913-205
TILT MOTOR AND POSITION SENSOR (FRONT)




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

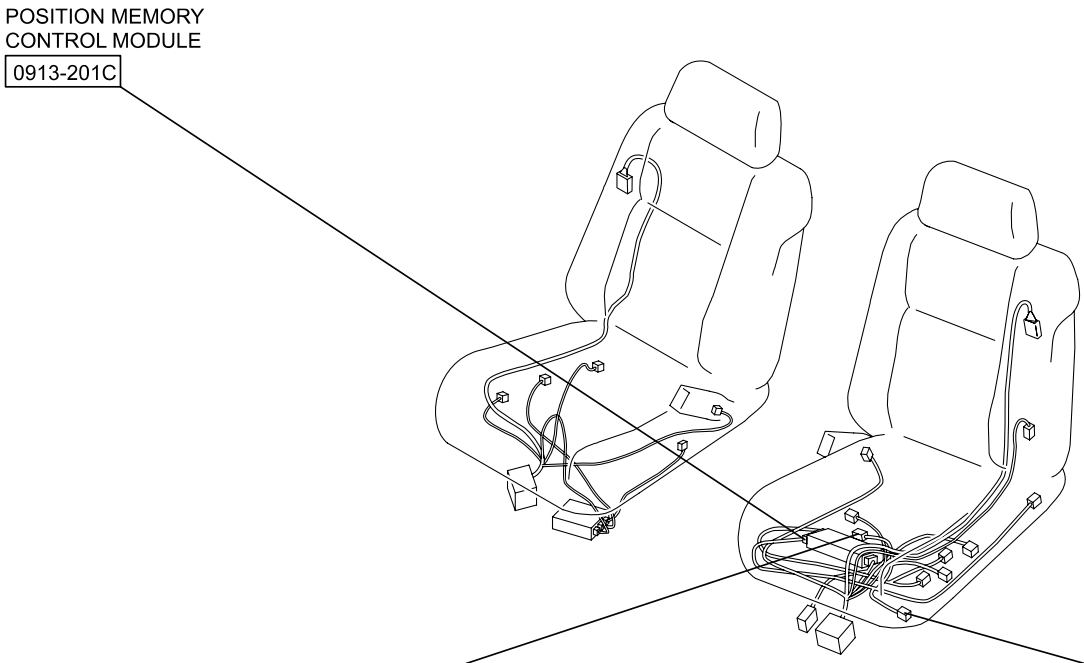
POSITION MEMORY
CONTROL MODULE
0913-201C
0913-205
TILT MOTOR AND POSITION
SENSOR(FRONT)
0913-204
SLIDER MOTOR
AND POSITION SENSOR

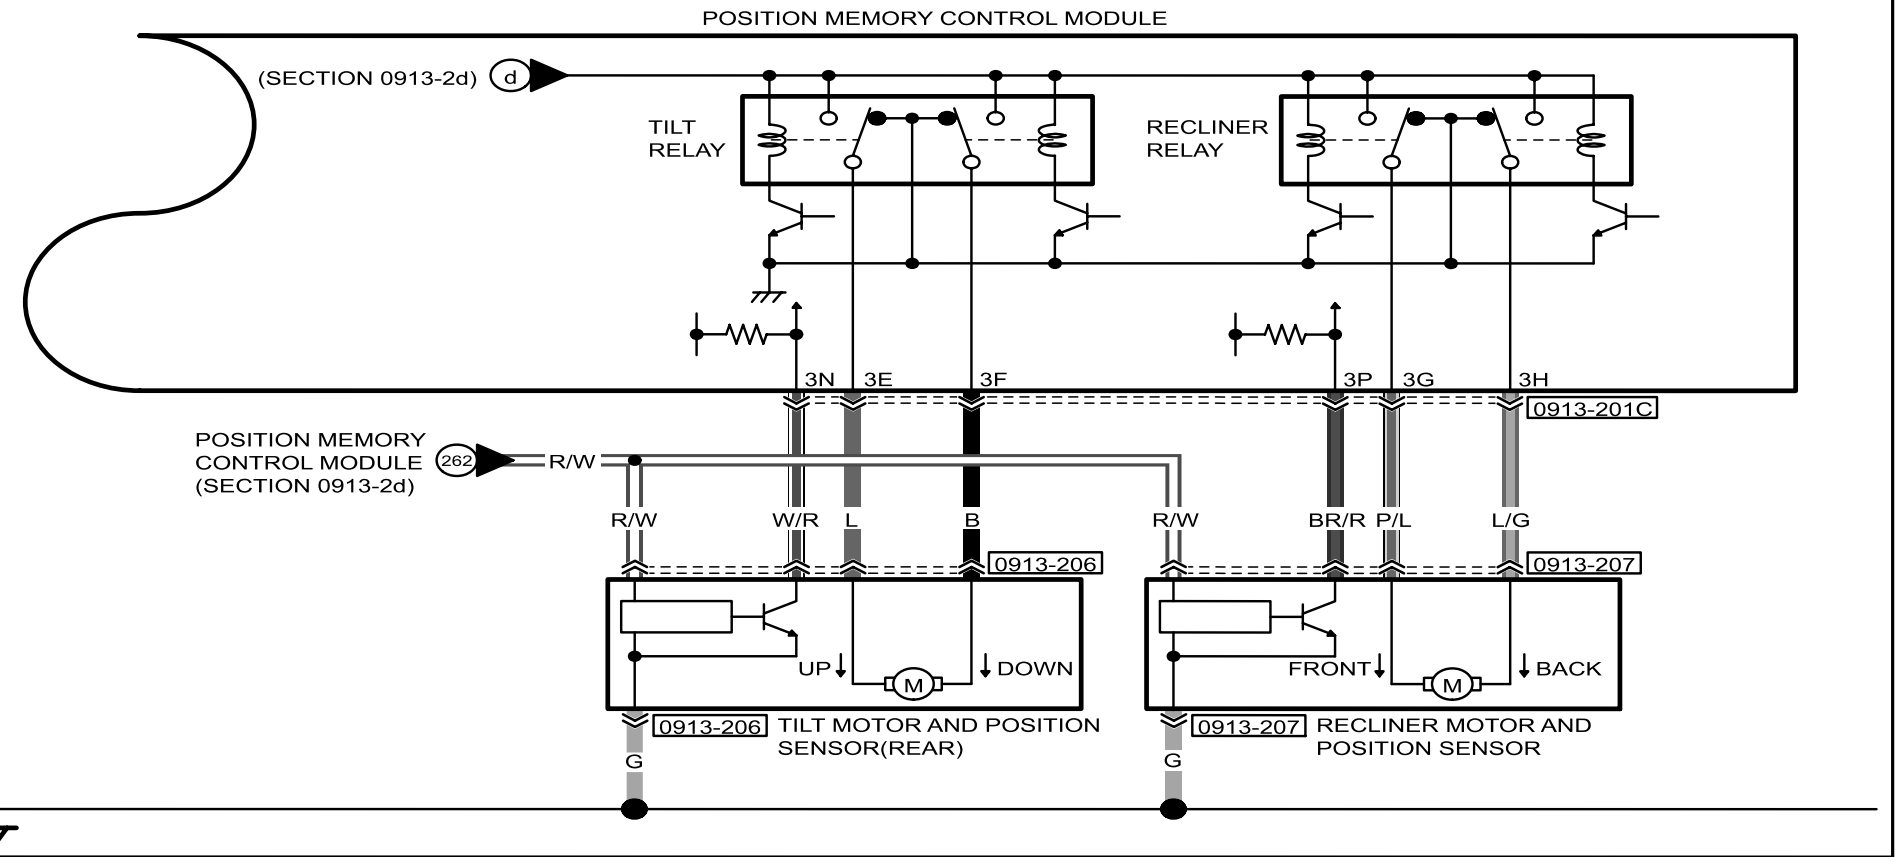


0913-201C
POSITION MEMORY CONTROL MODULE

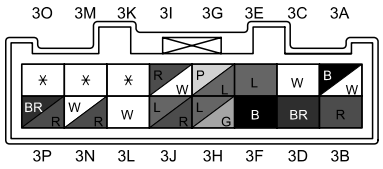


0913-206
TILT MOTOR AND POSITION SENSOR(REAR)




0913-207
RECLINER MOTOR AND POSITION SENSOR



Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

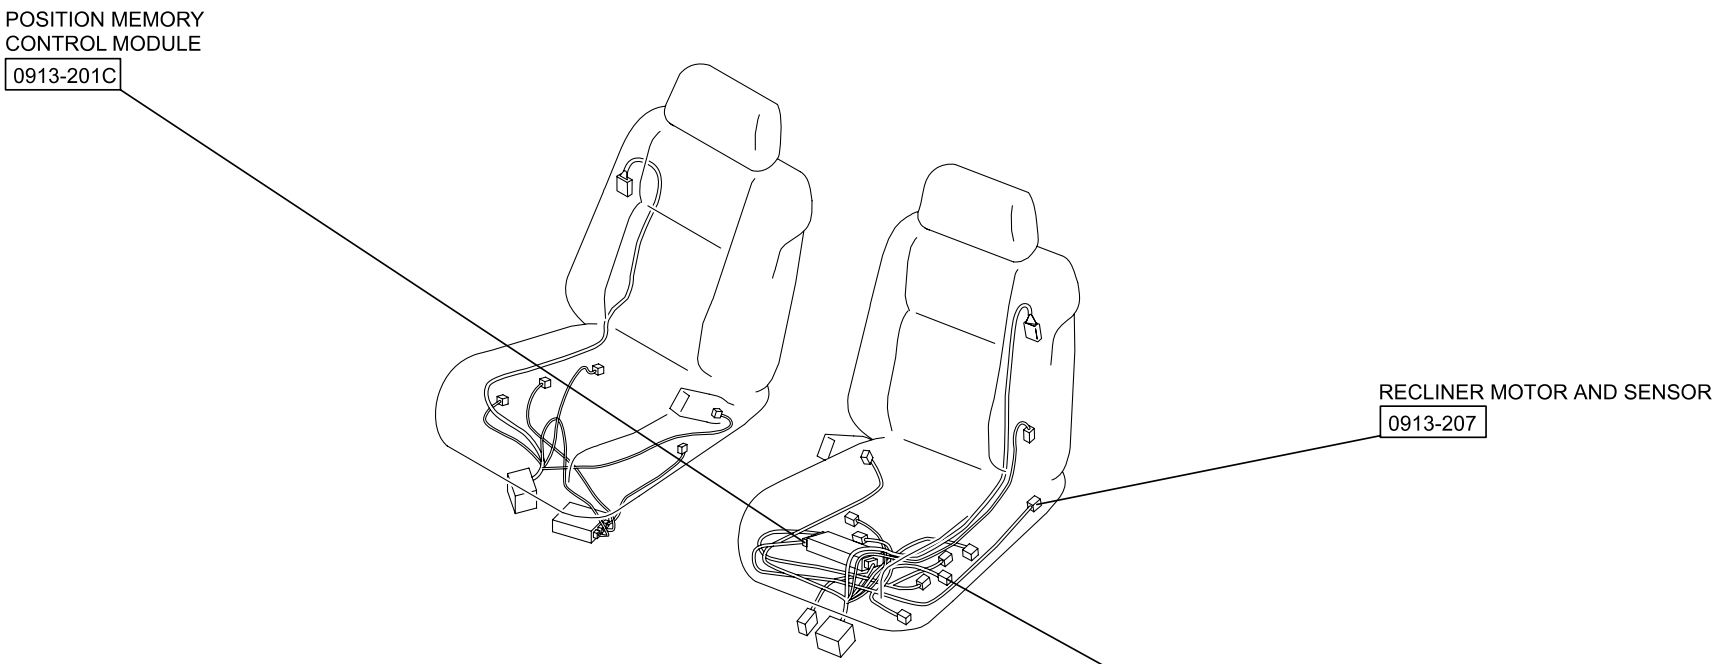
POSITION MEMORY
CONTROL MODULE
0913-201C
RECLINER MOTOR AND SENSOR
0913-207
0913-206
LIFT MOTOR AND SENSOR

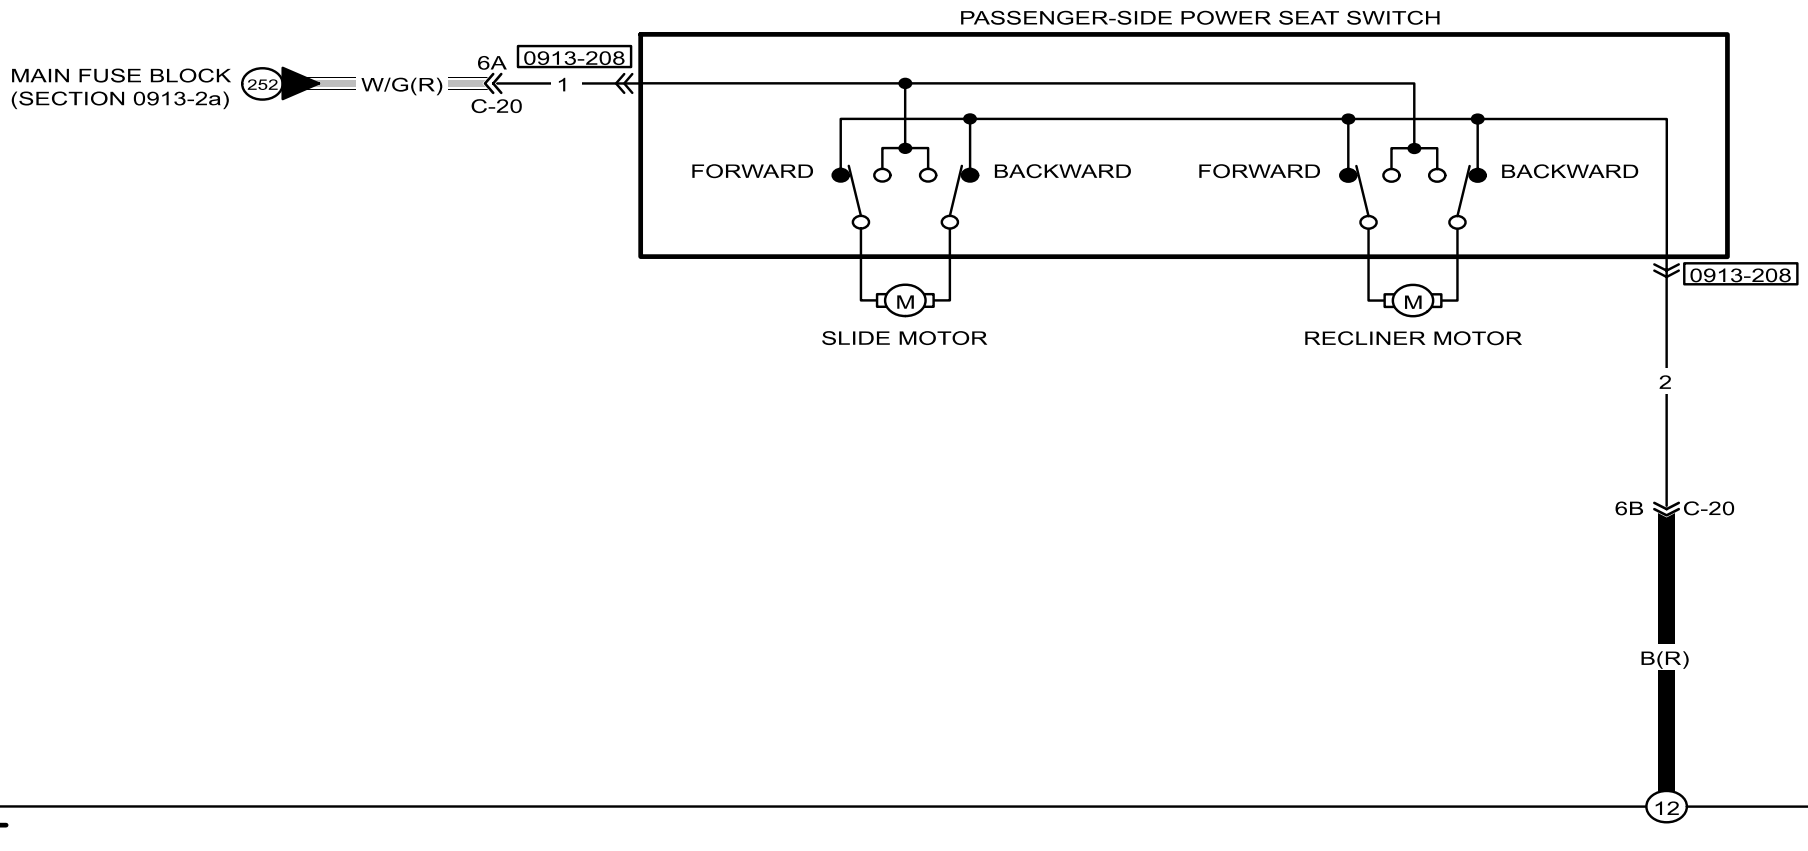



0913-208
PASSENGER-SIDE POWER SEAT SWITCH



TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

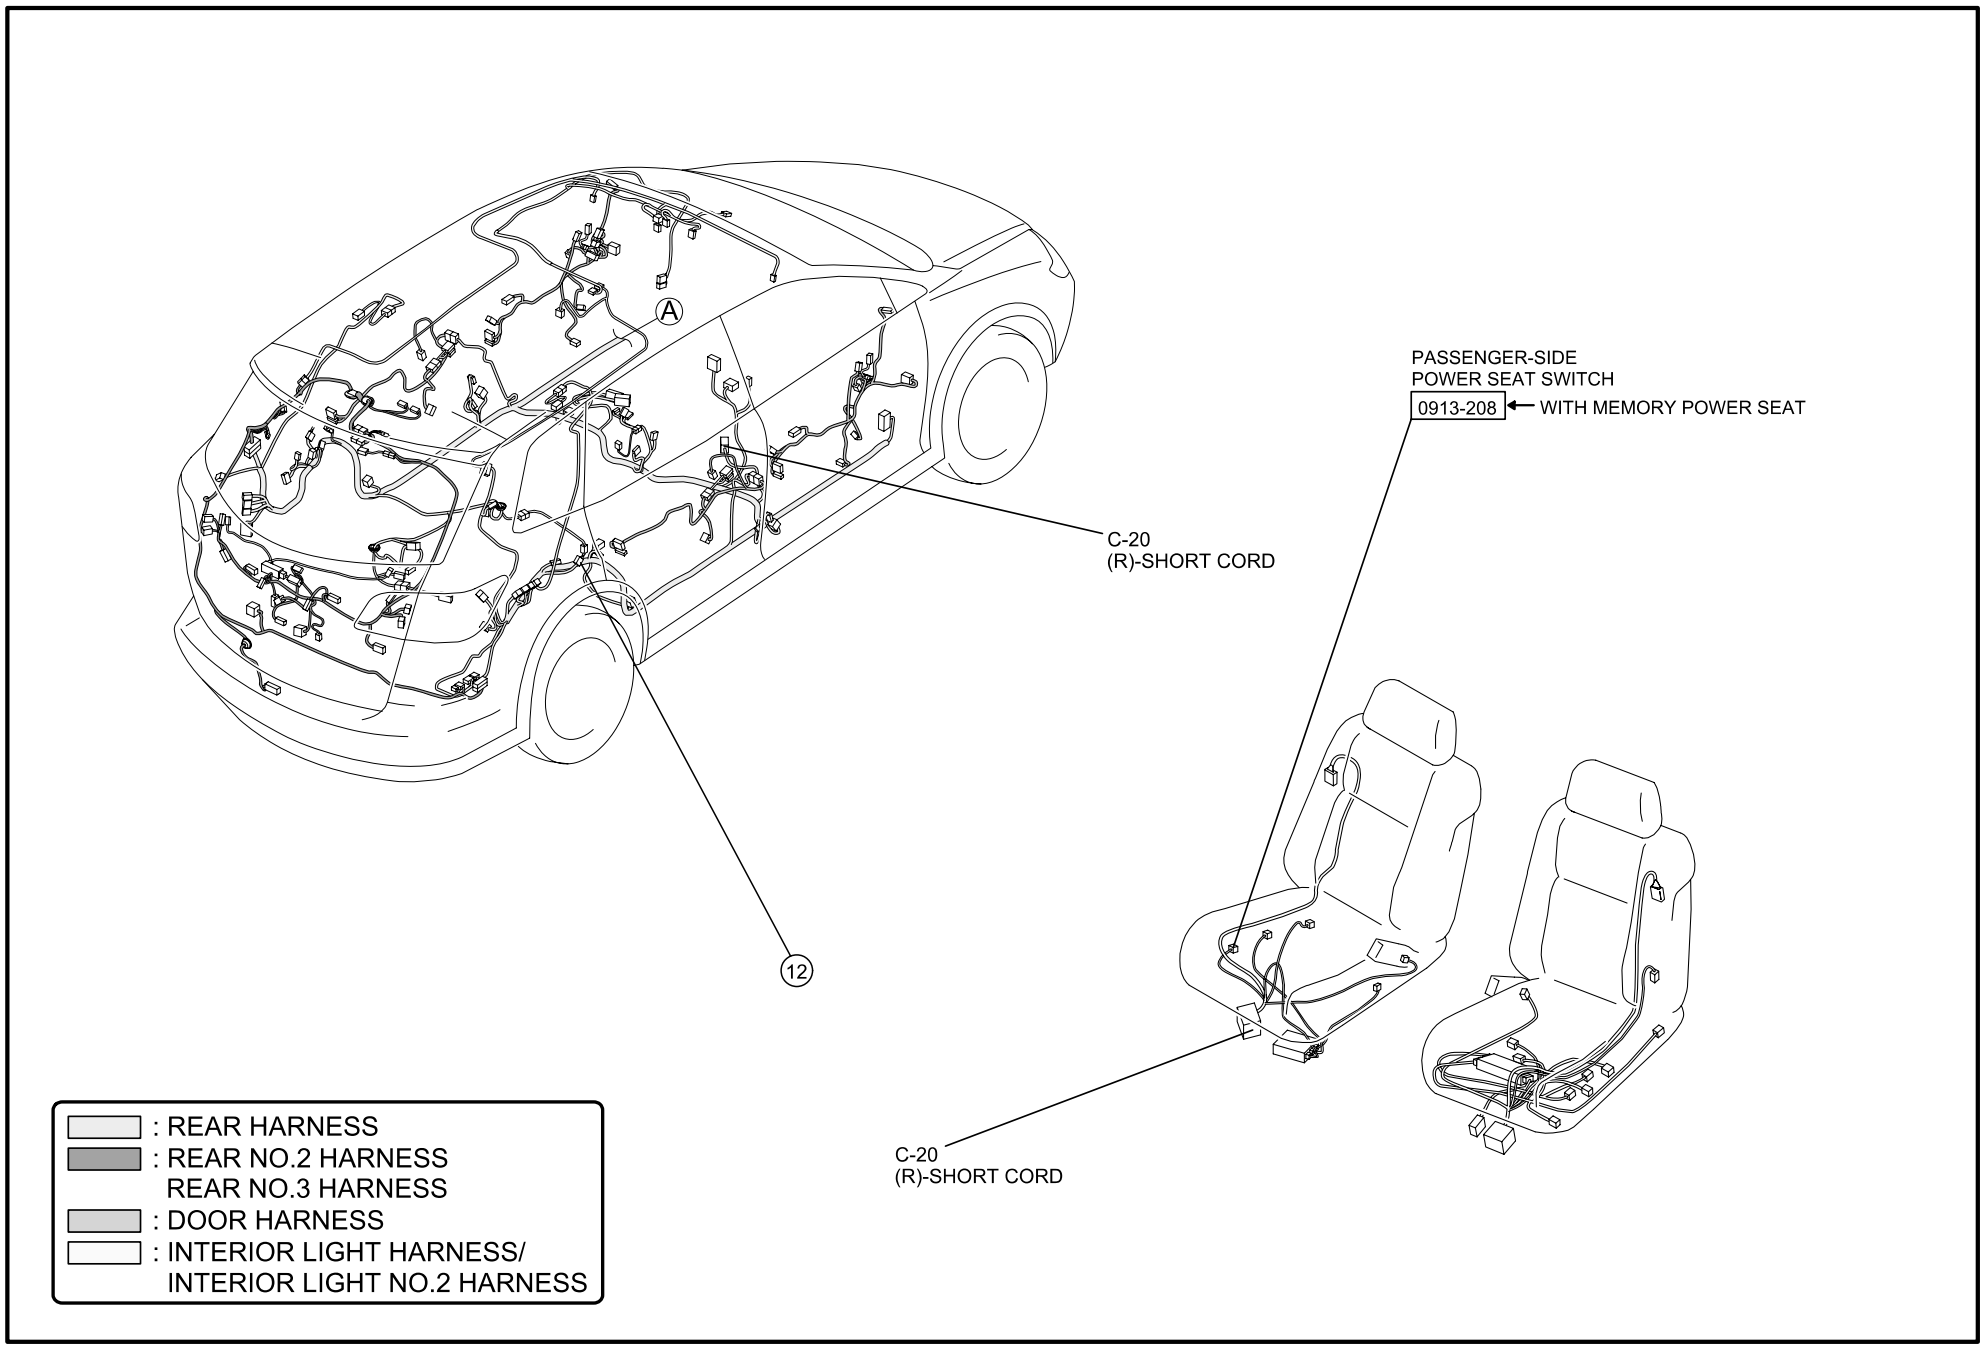
A
C-20
(R)-SHORT CORD
12
PASSENGER-SIDE
POWER SEAT SWITCH
0913-208
WITH MEMORY POWER SEAT
C-20
(R)-SHORT CORD
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

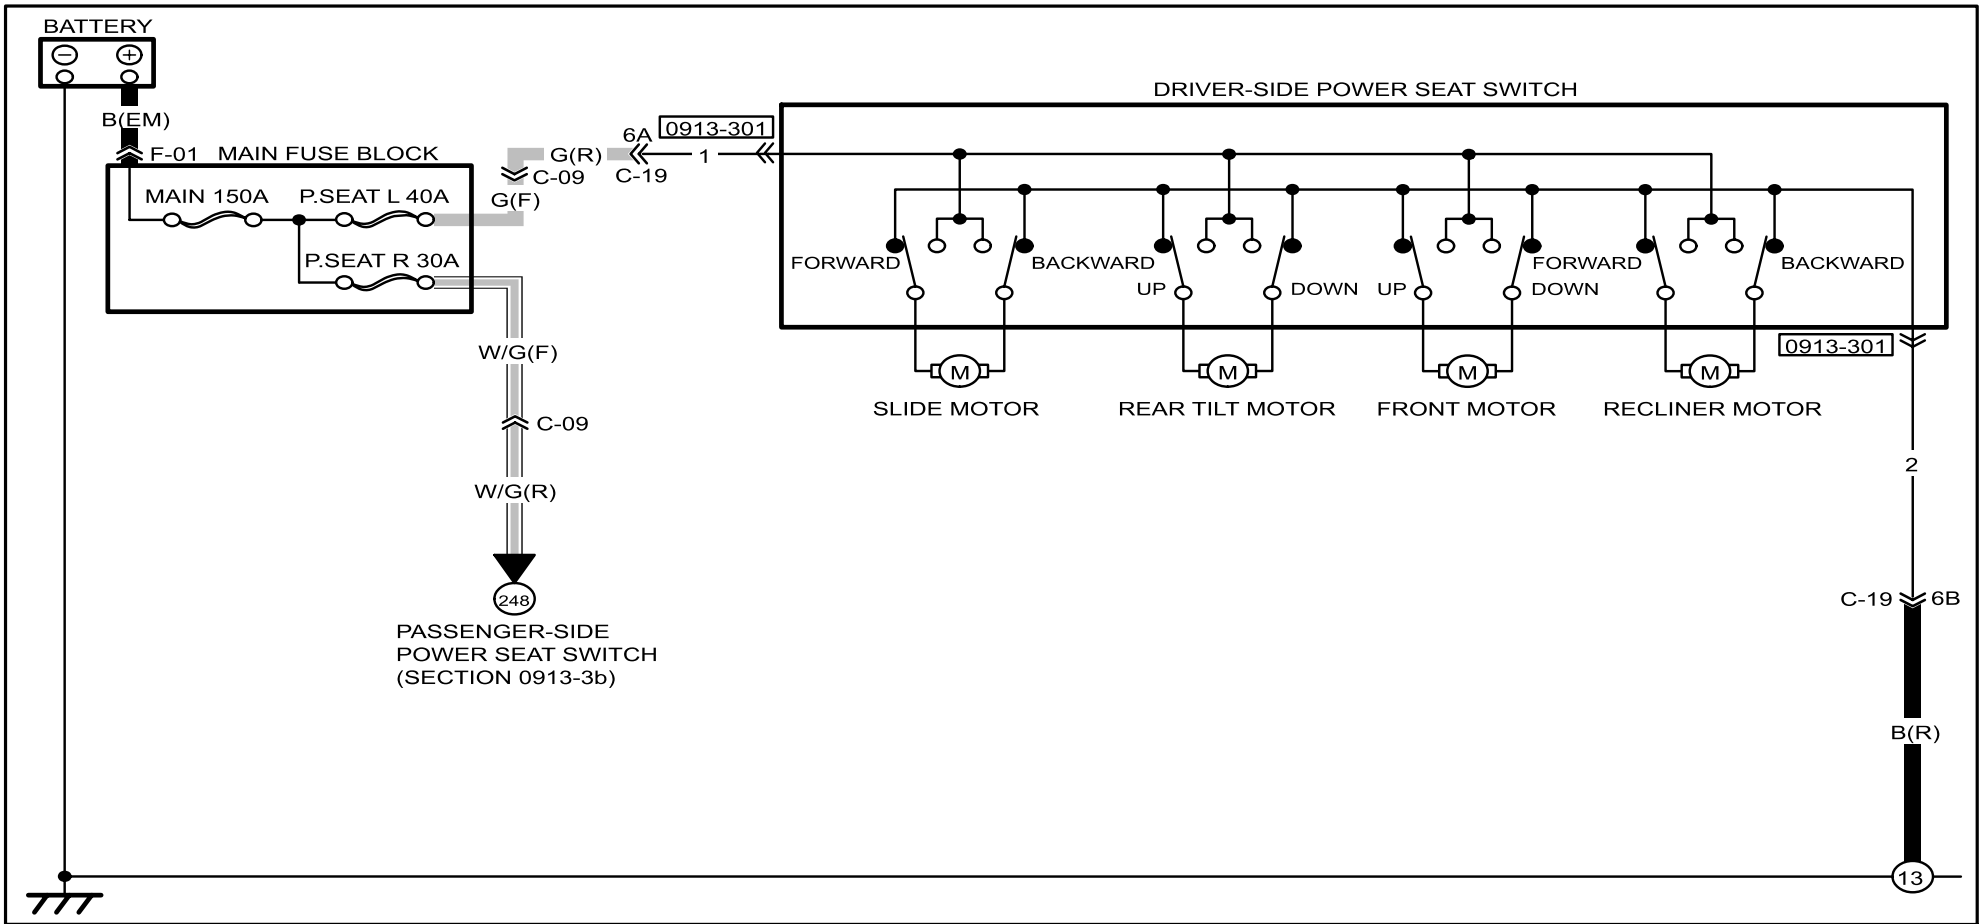



0913-301
DRIVER-SIDE POWER SEAT SWITCH



TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

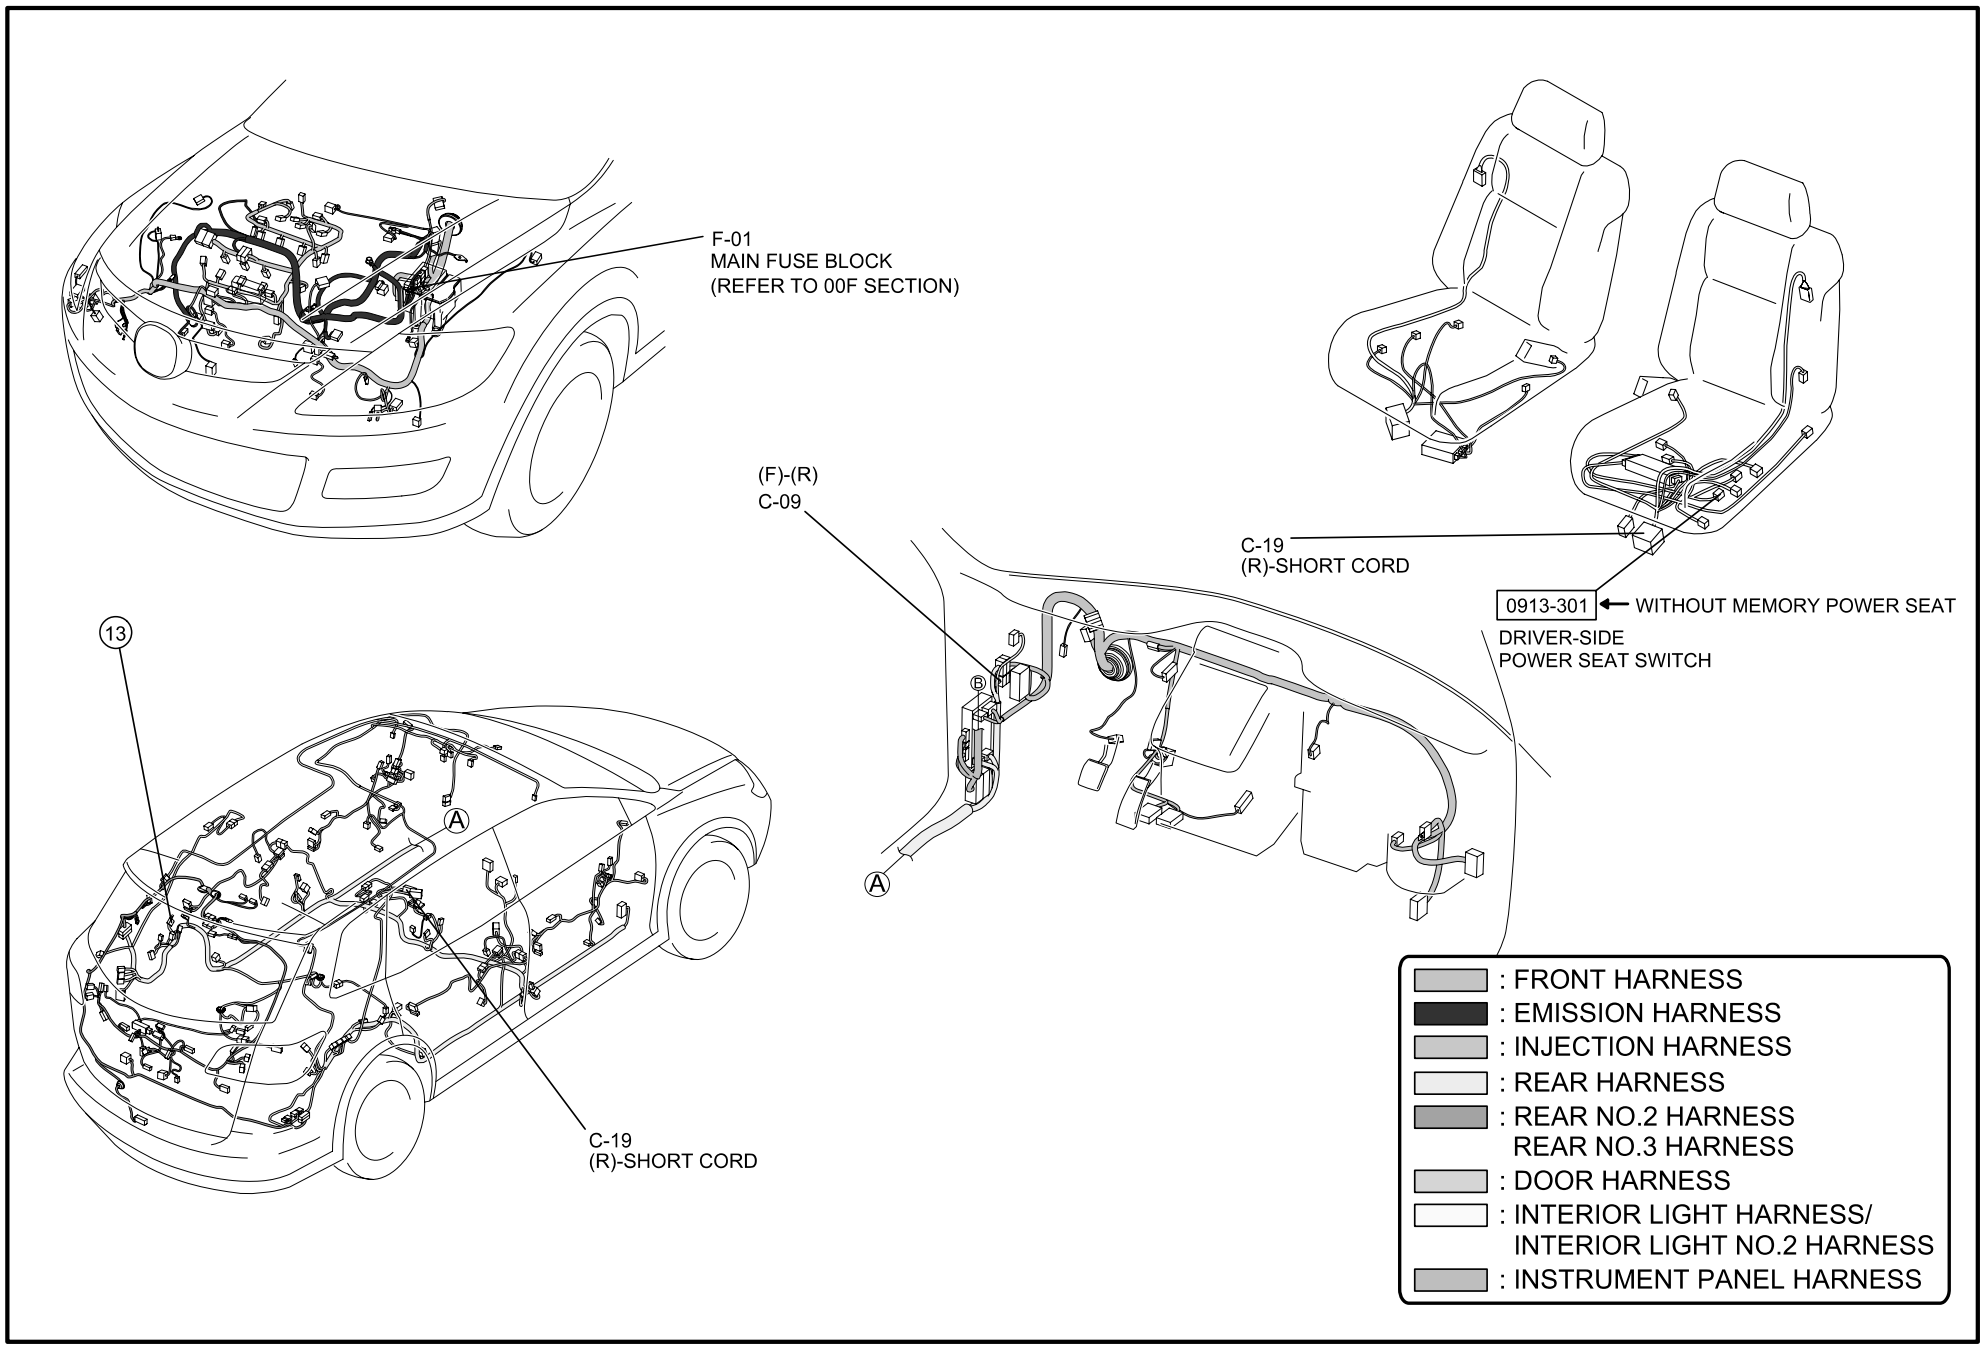
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
(F)-(R)
C-09
C-19
(R)-SHORT CORD
0913-301
WITHOUT MEMORY POWER SEAT
DRIVER-SIDE
POWER SEAT SWITCH
13
A
B
C-19
(R)-SHORT CORD
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

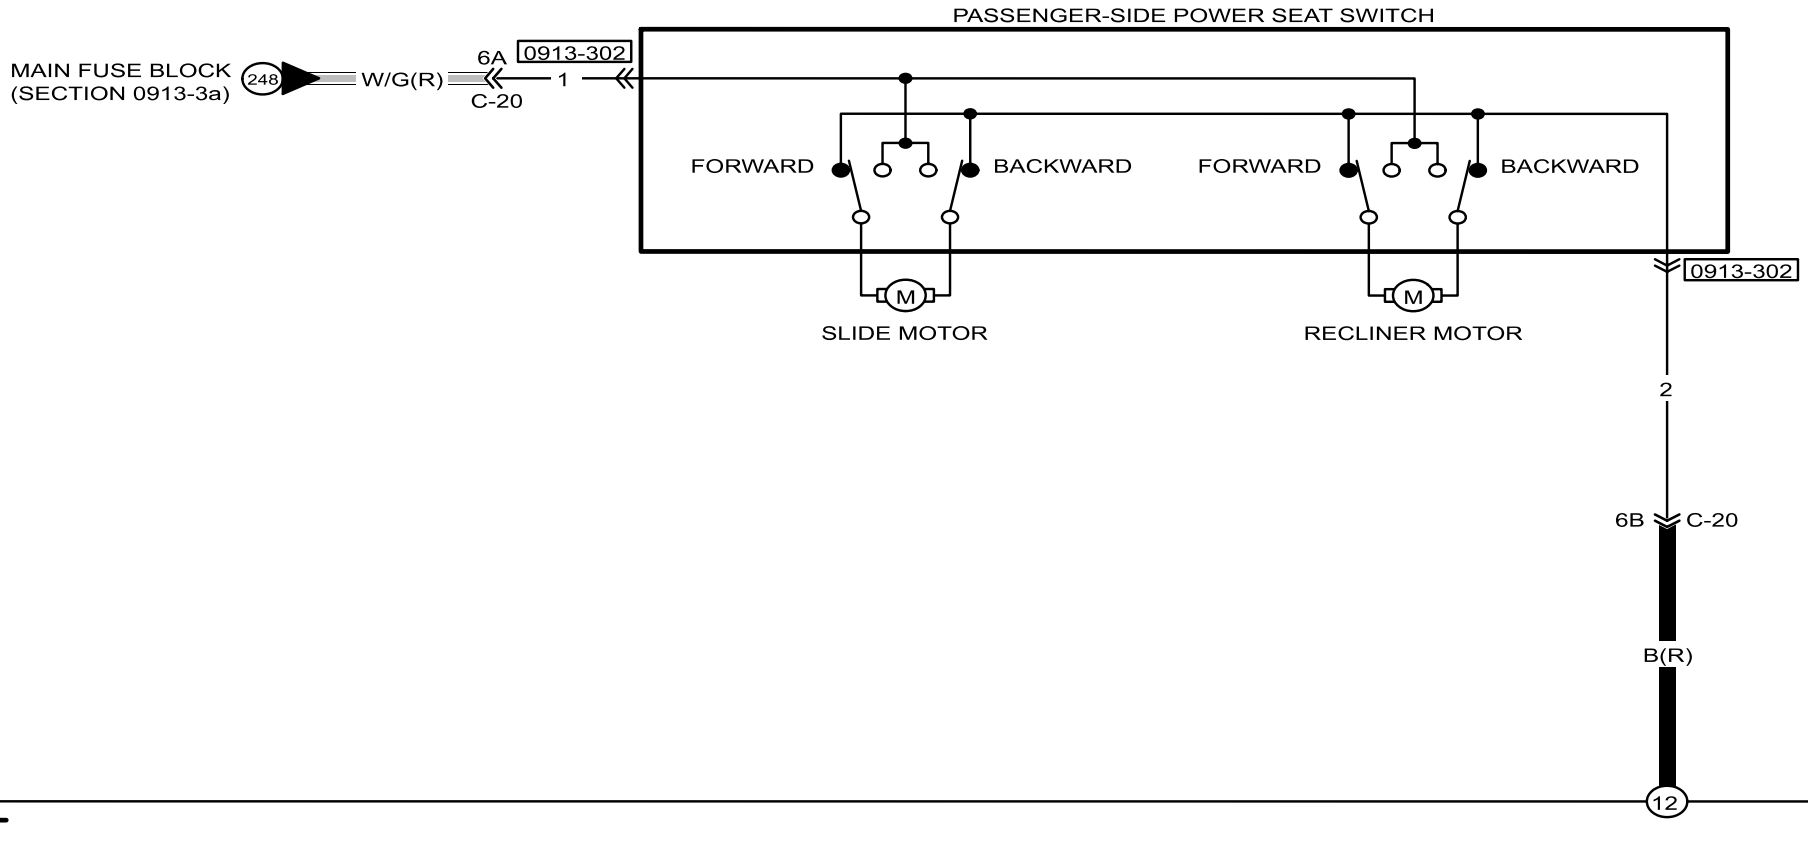



0913-302
PASSENGER-SIDE POWER SEAT SWITCH



TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

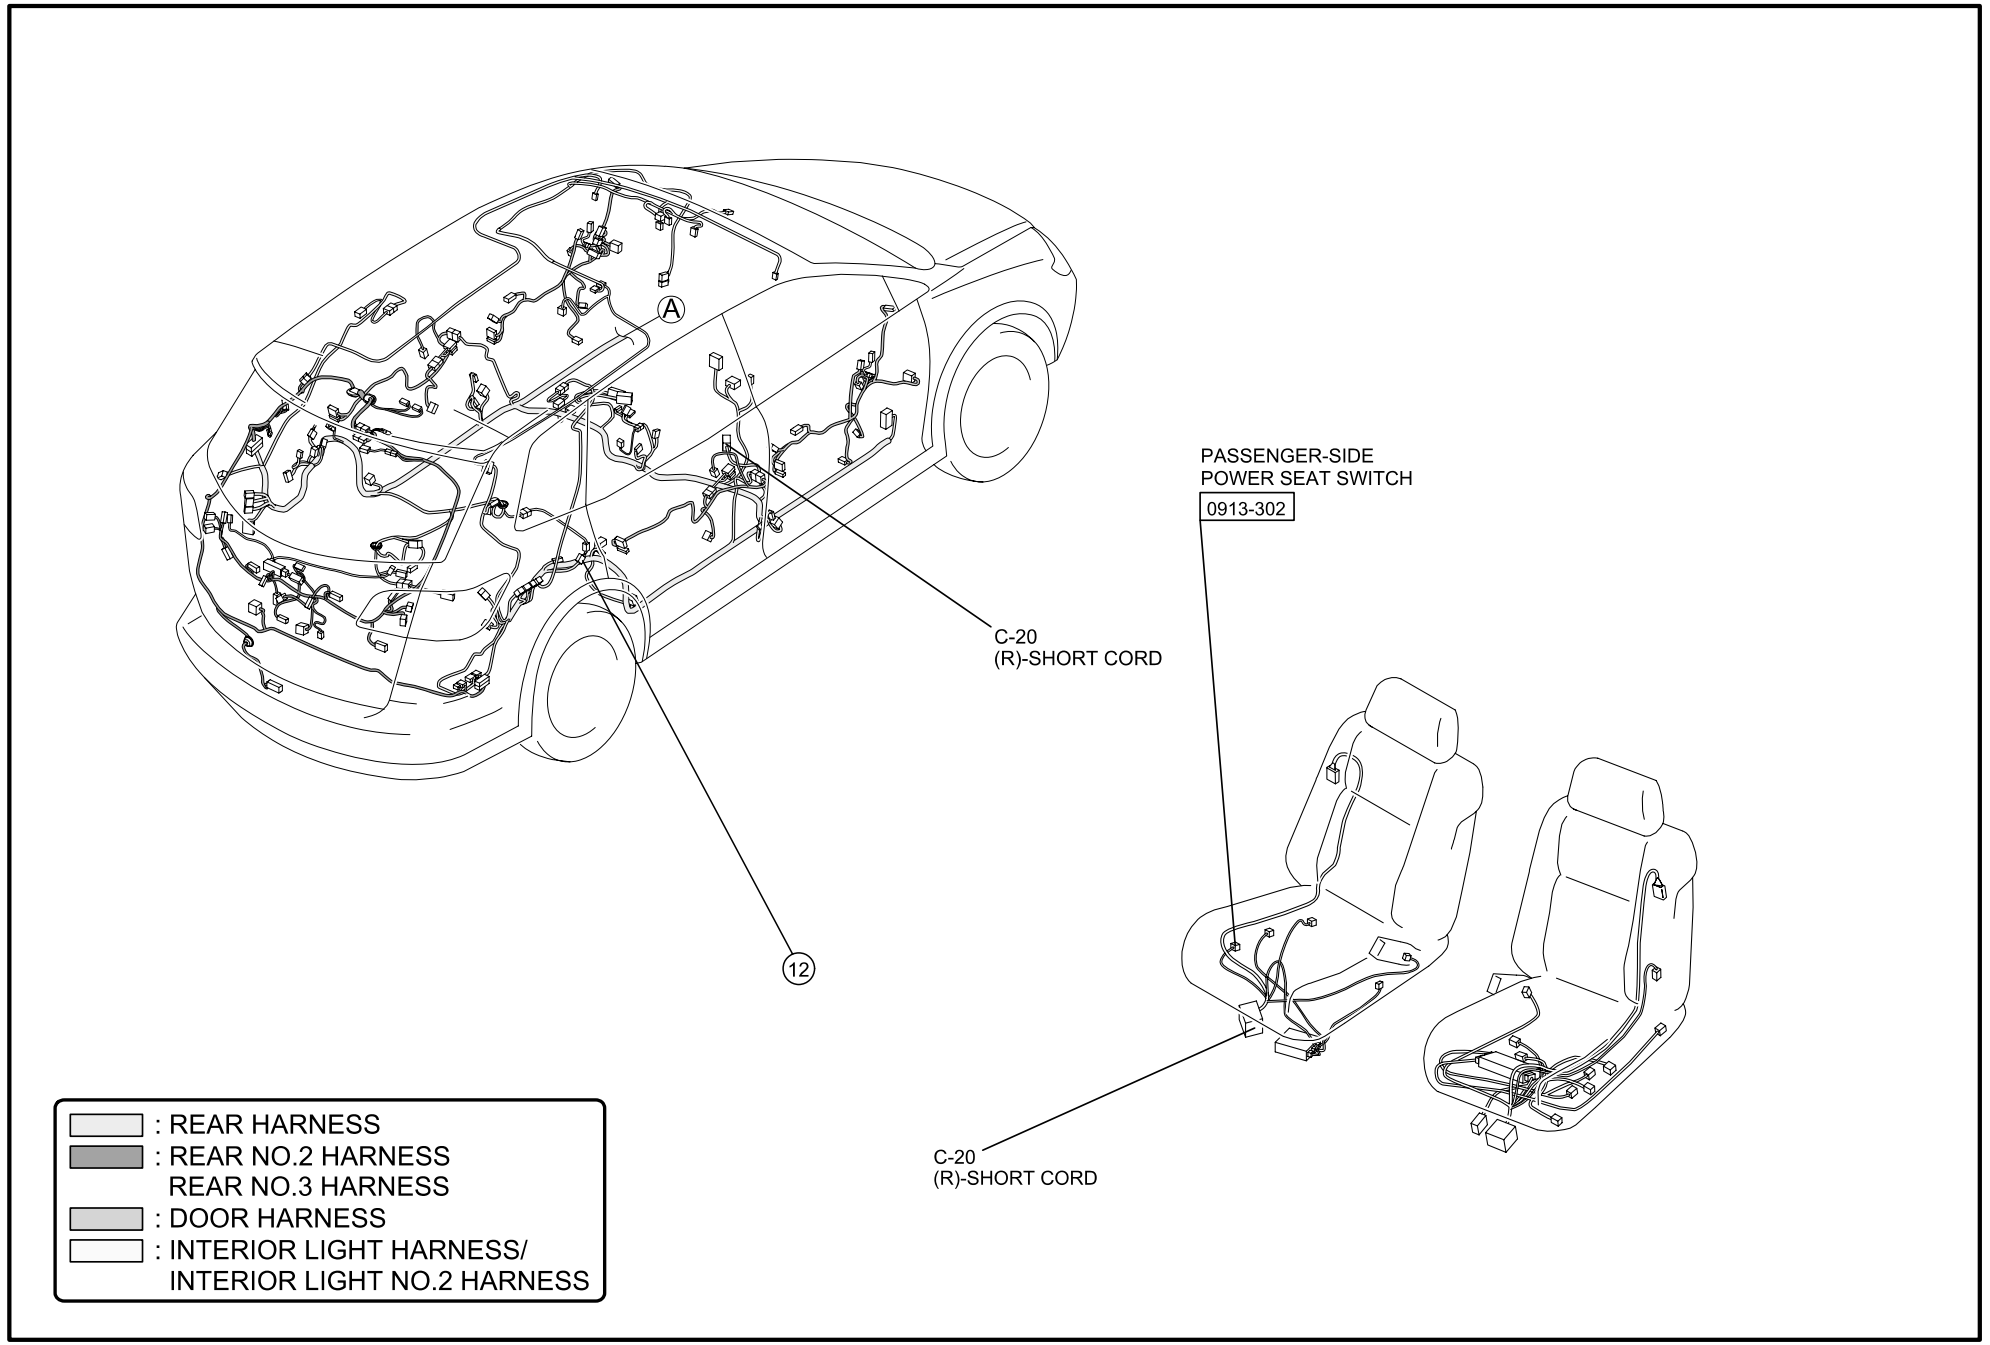

A
12
C-20
(R)-SHORT CORD
PASSENGER-SIDE
POWER SEAT SWITCH
0913-302
C-20
(R)-SHORT CORD
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

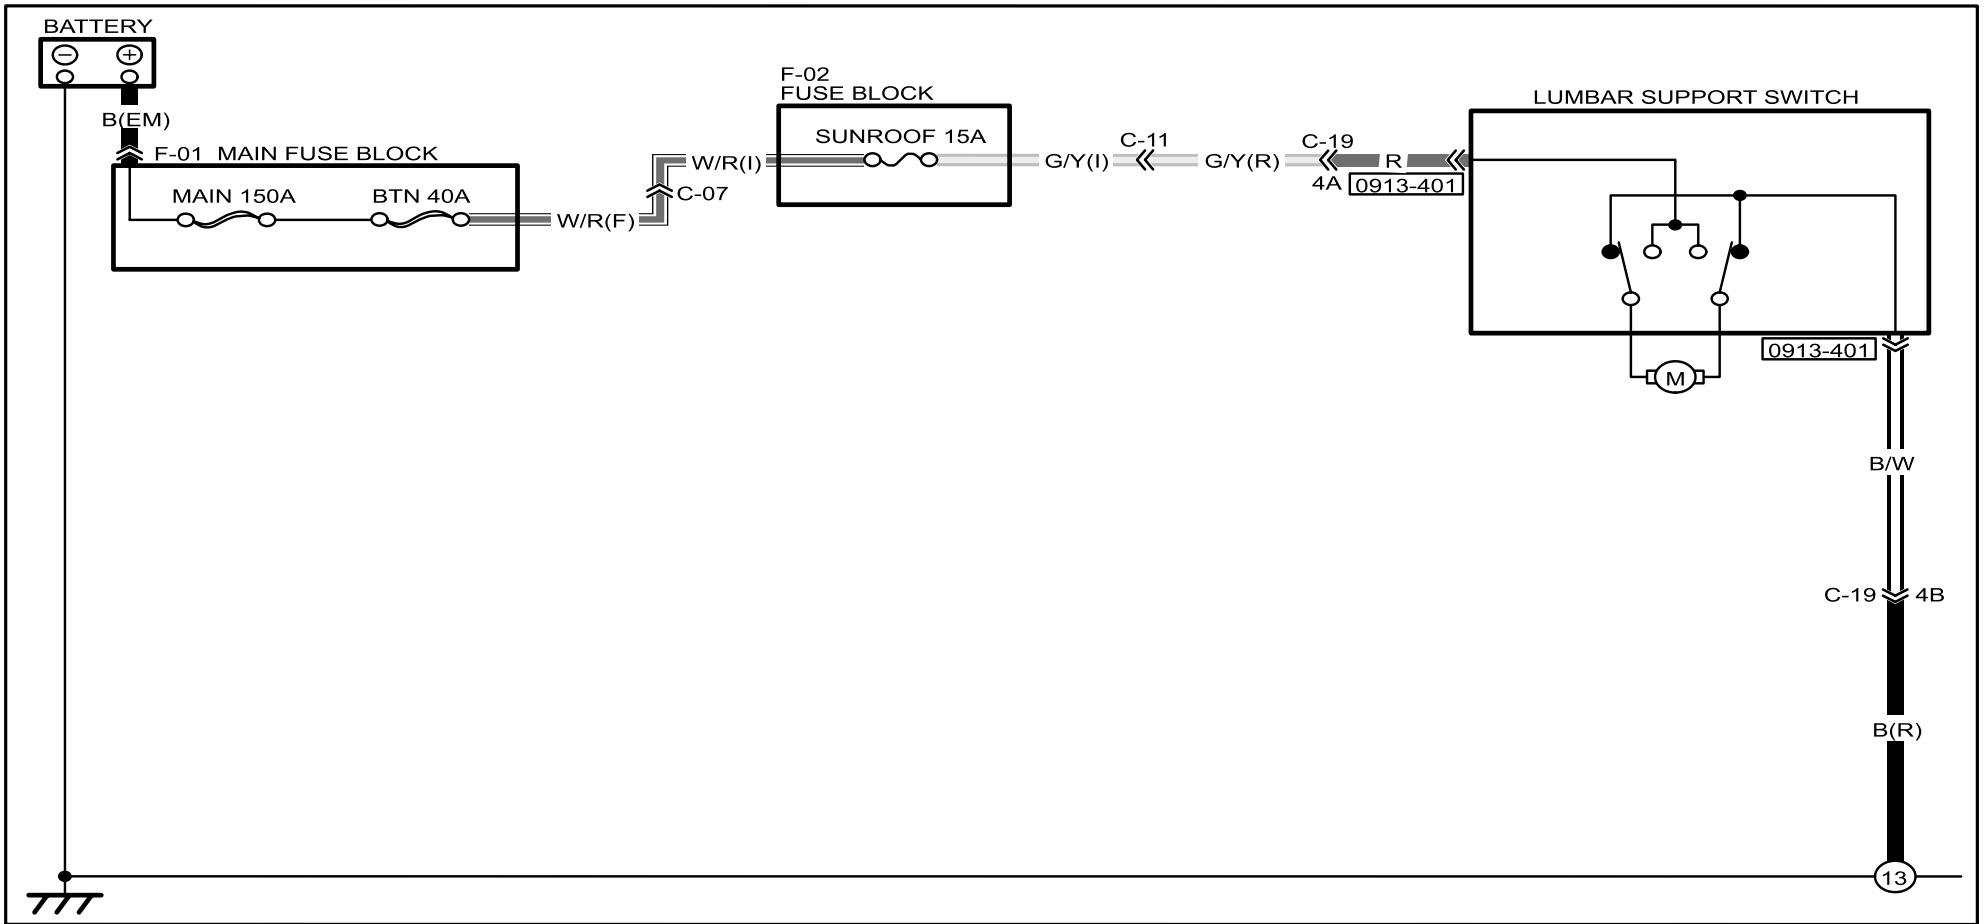


0913-401 LUMBAR SUPPORT SWITCH B W R						

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

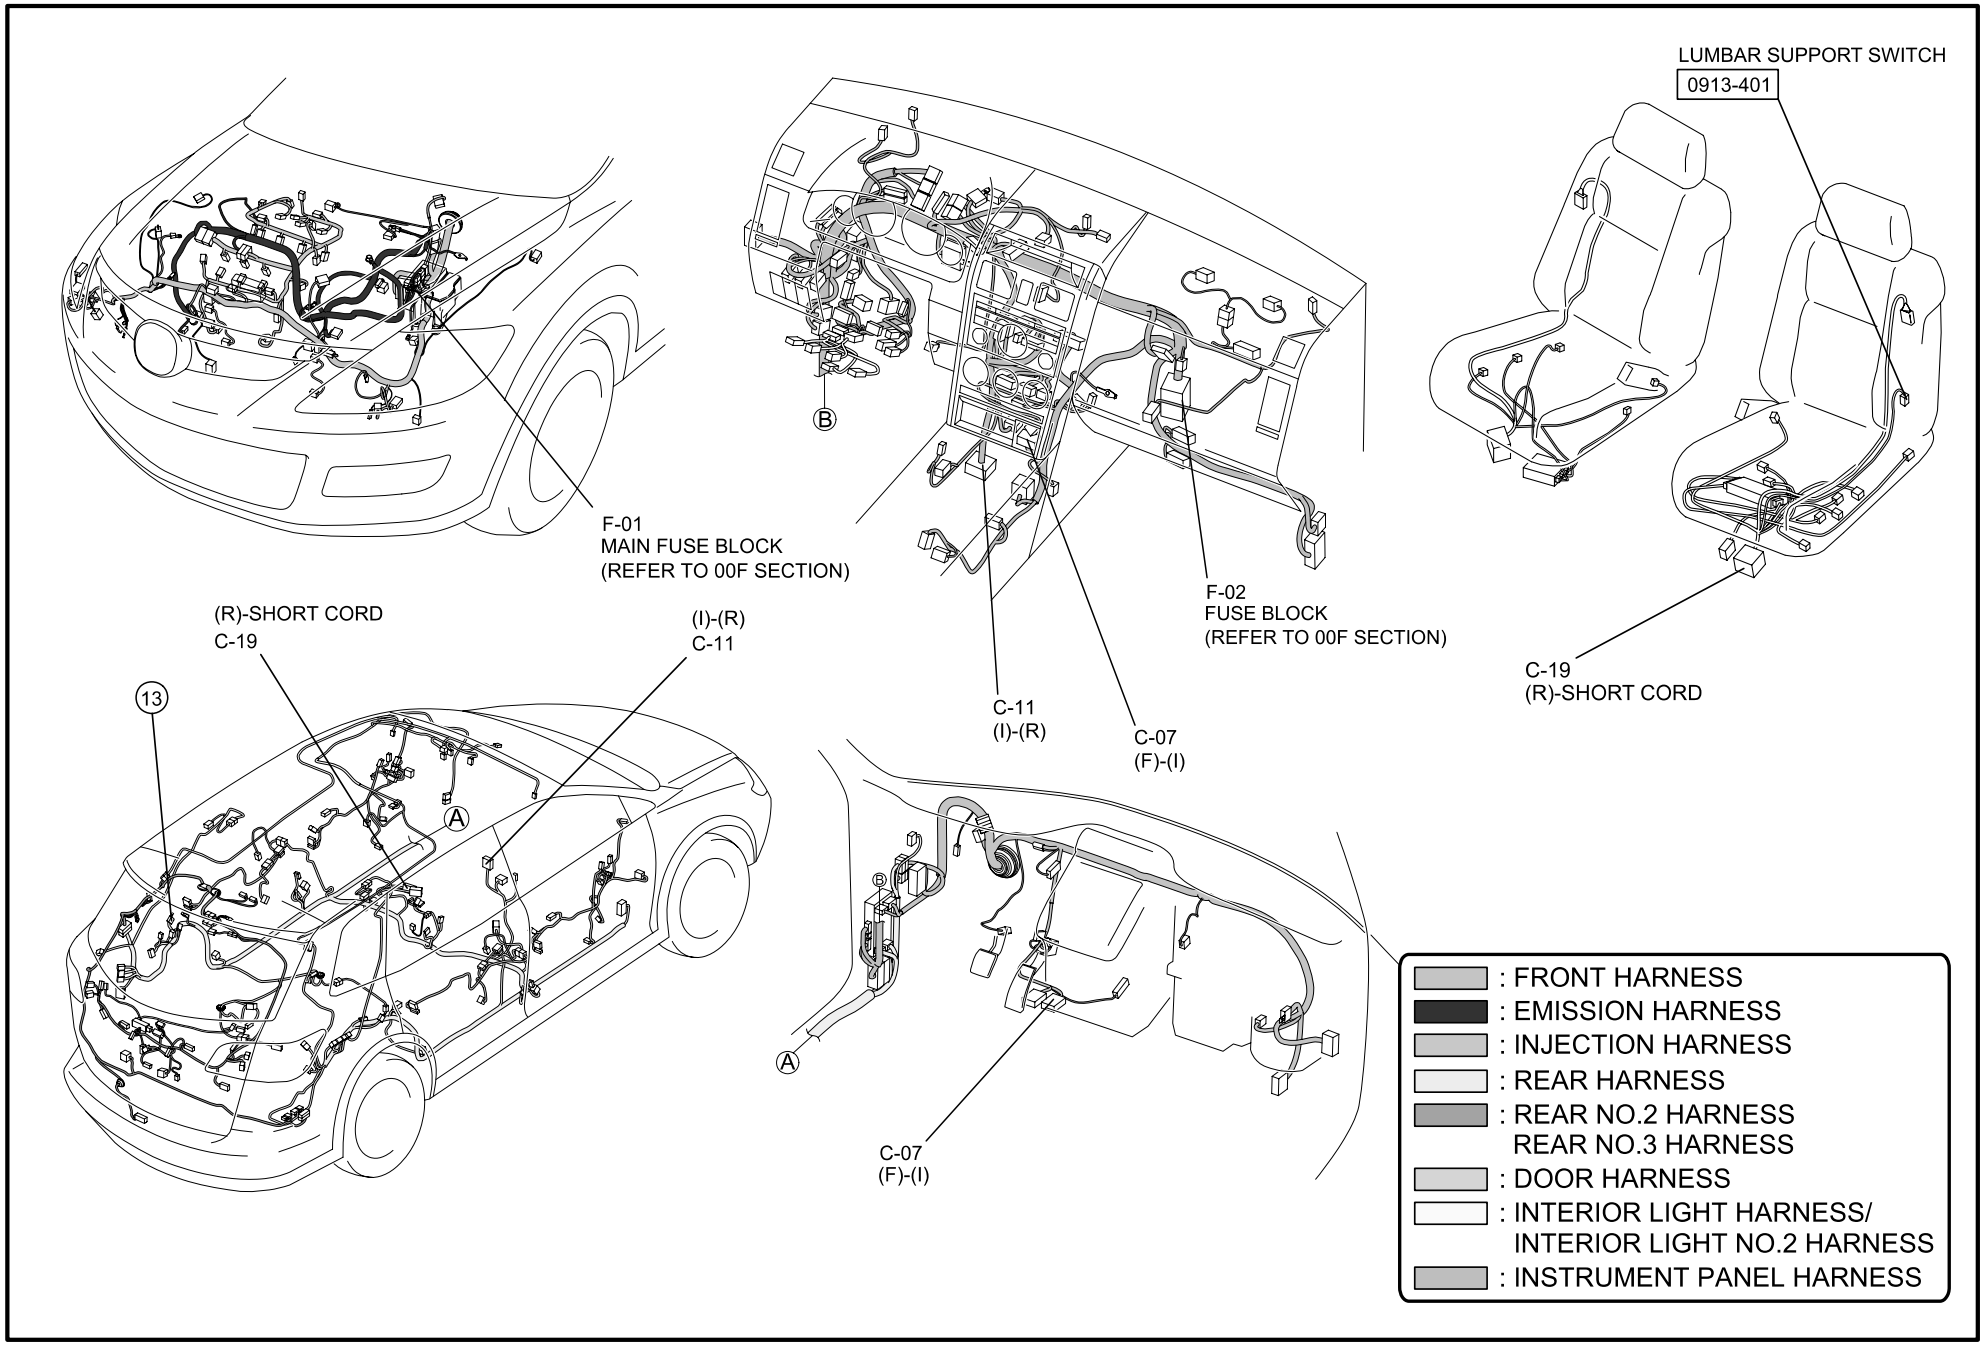

LUMBAR SUPPORT SWITCH
0913-401
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
C-19
(R)-SHORT CORD
(R)-SHORT CORD
C-19
(I)-(R)
C-11
13
A
B
C-11
(I)-(R)
C-07
(F)-(I)
C-07
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

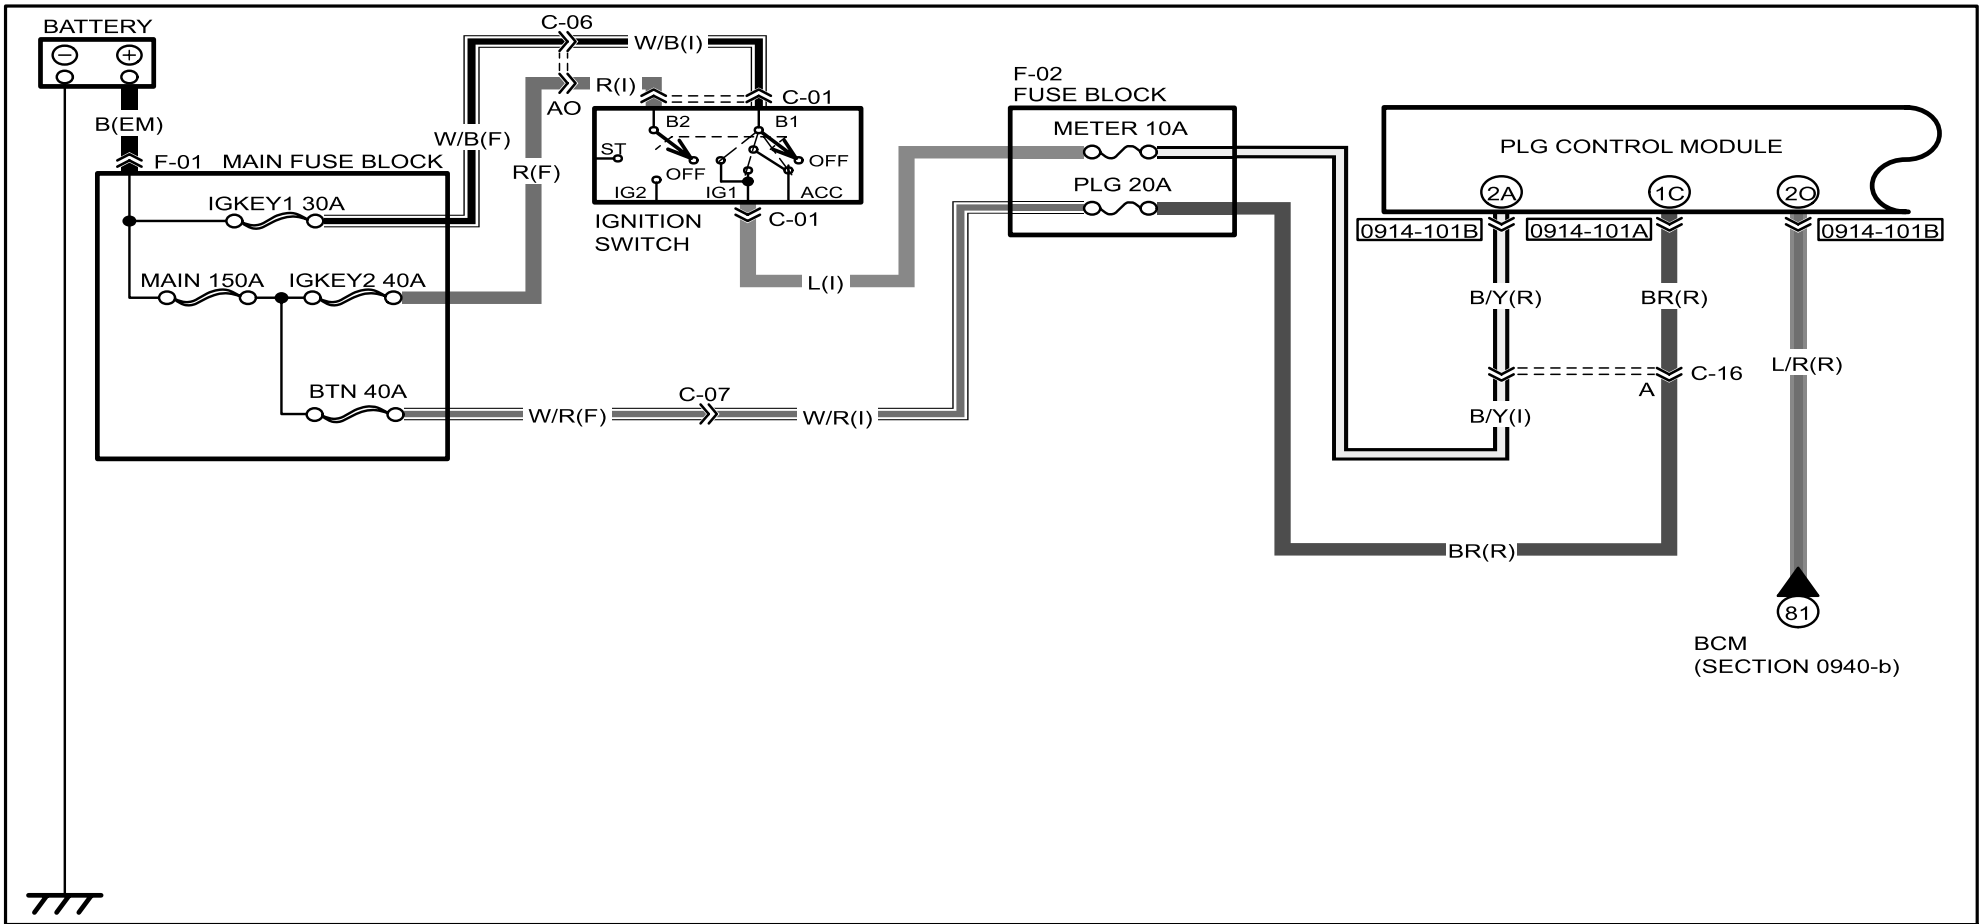


0914-101A
PLG CONTROL MODULE

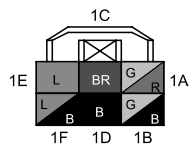


0914-101B
PLG CONTROL MODULE

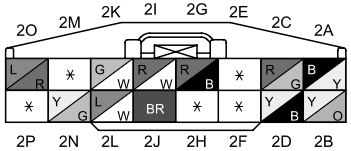


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

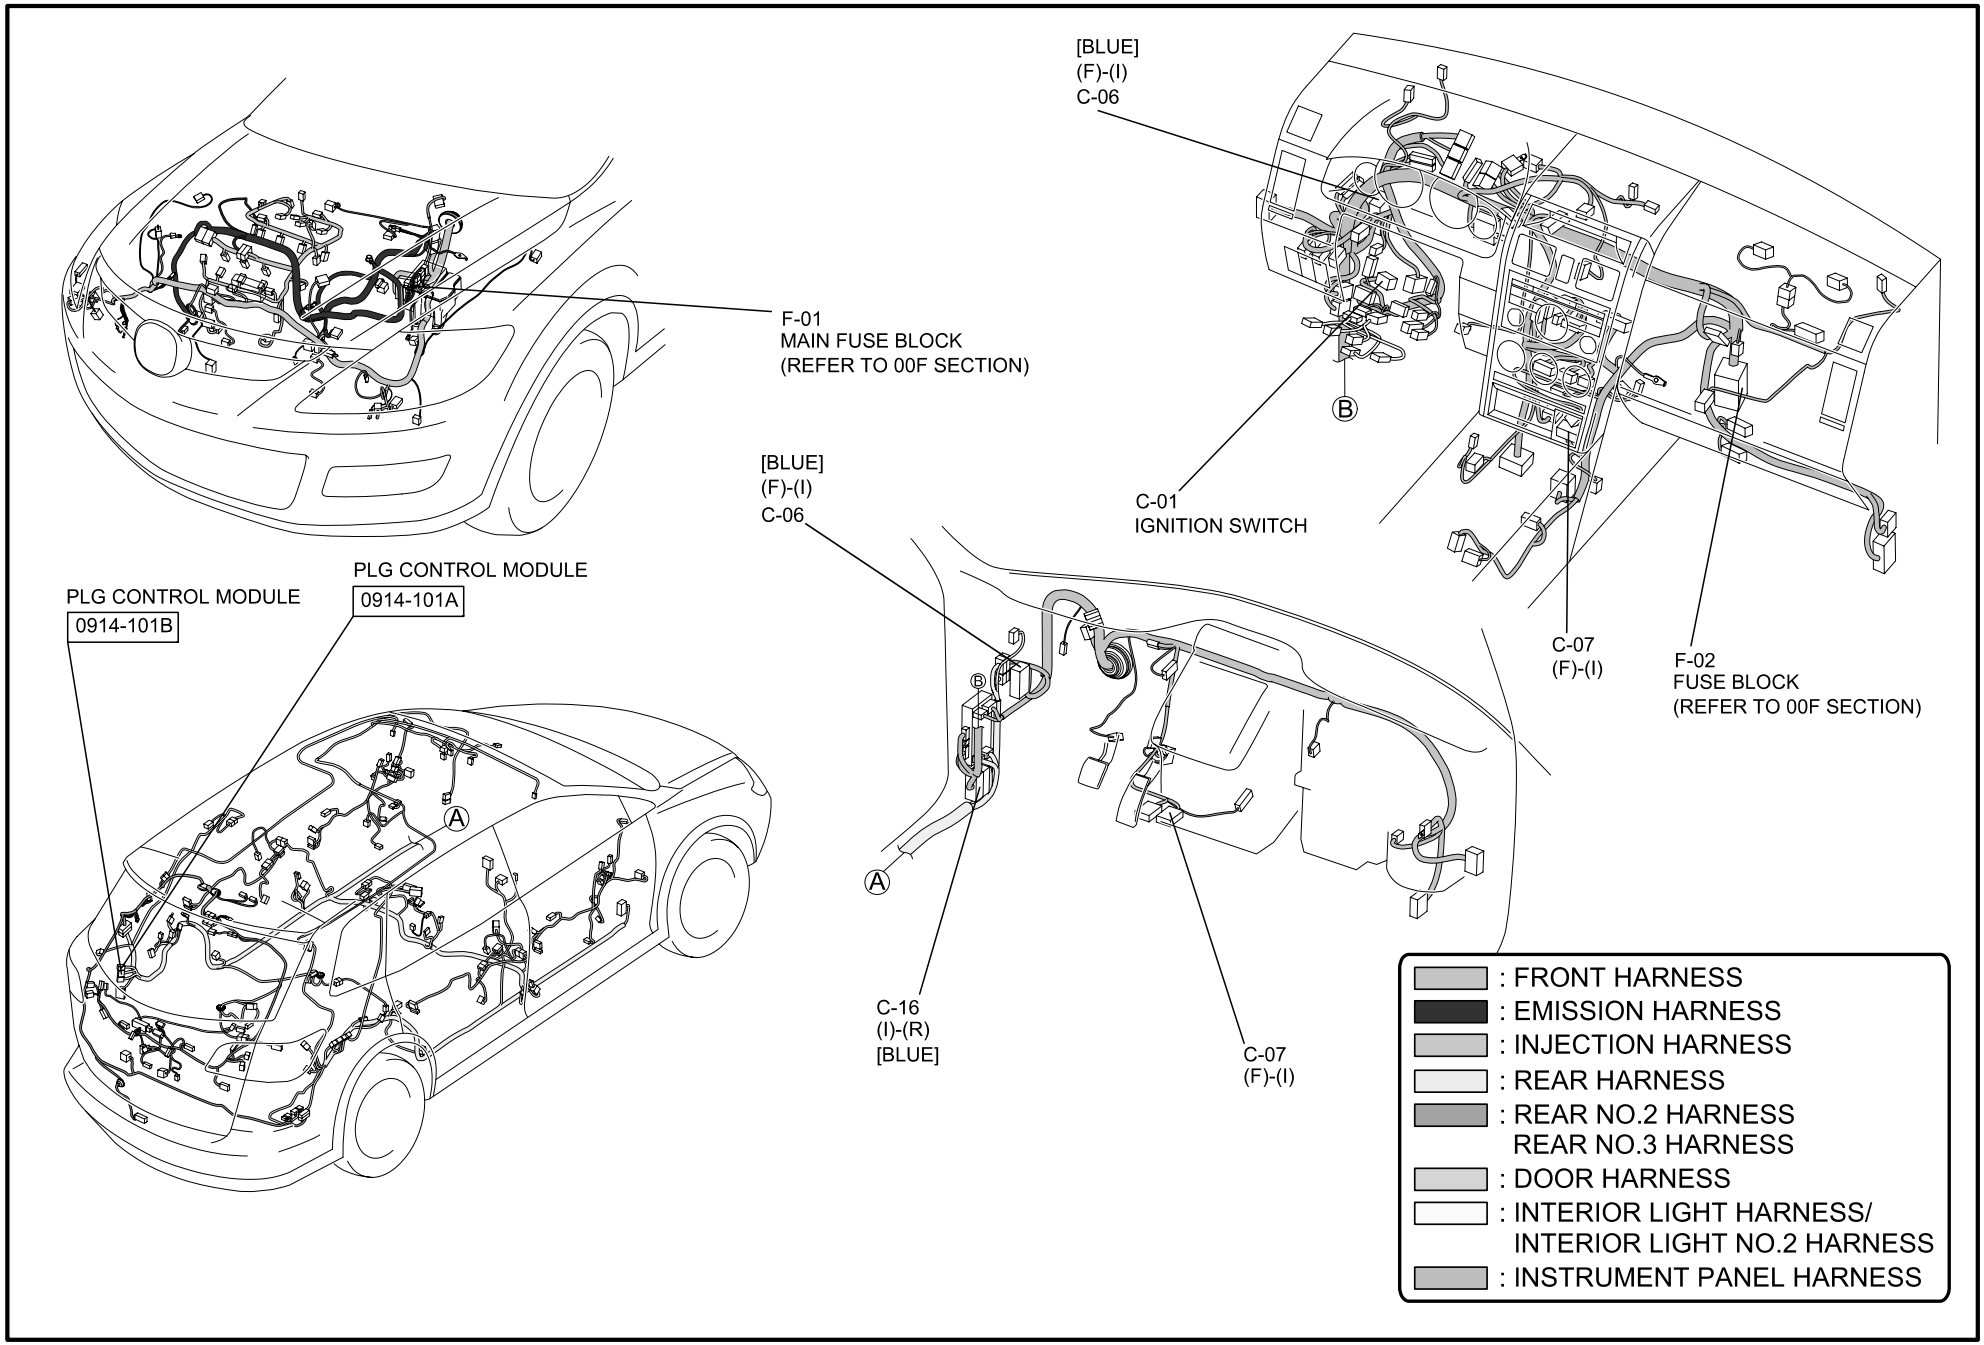
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
[BLUE]
(F)-(I)
C-06
C-01
IGNITION SWITCH
B
C-07
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
PLG CONTROL MODULE
0914-101B
PLG CONTROL MODULE
0914-101A
A
[BLUE]
(F)-(I)
C-06
B
A
C-16
(I)-(R)
[BLUE]
C-07
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

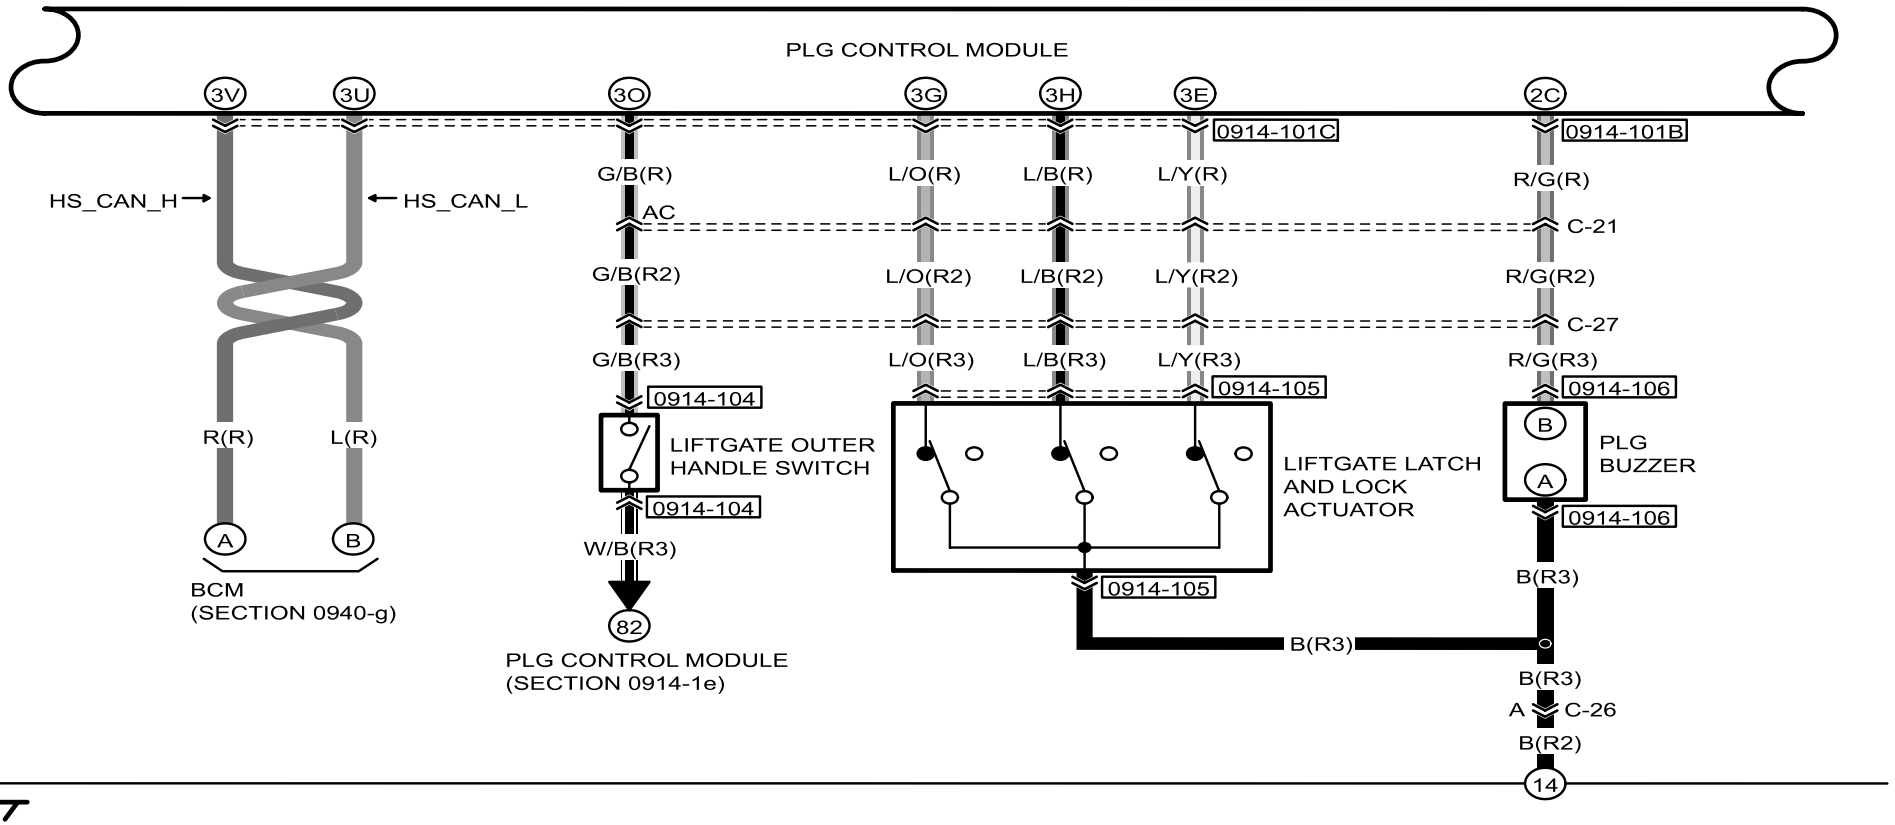


158


0914-101B
PLG CONTROL MODULE

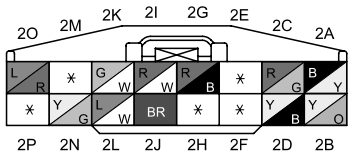


0914-101C
PLG CONTROL MODULE

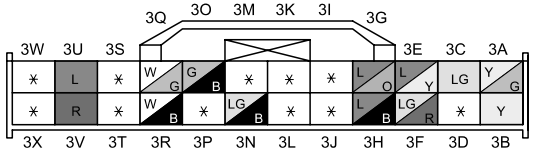


0914-105
LIFTGATE LATCH AND LOCK ACTUATOR

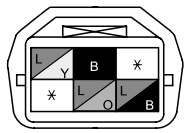


0914-106
PLG BUZZER




0914-104
LIFTGATE OUTER HANDLE SWITCH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

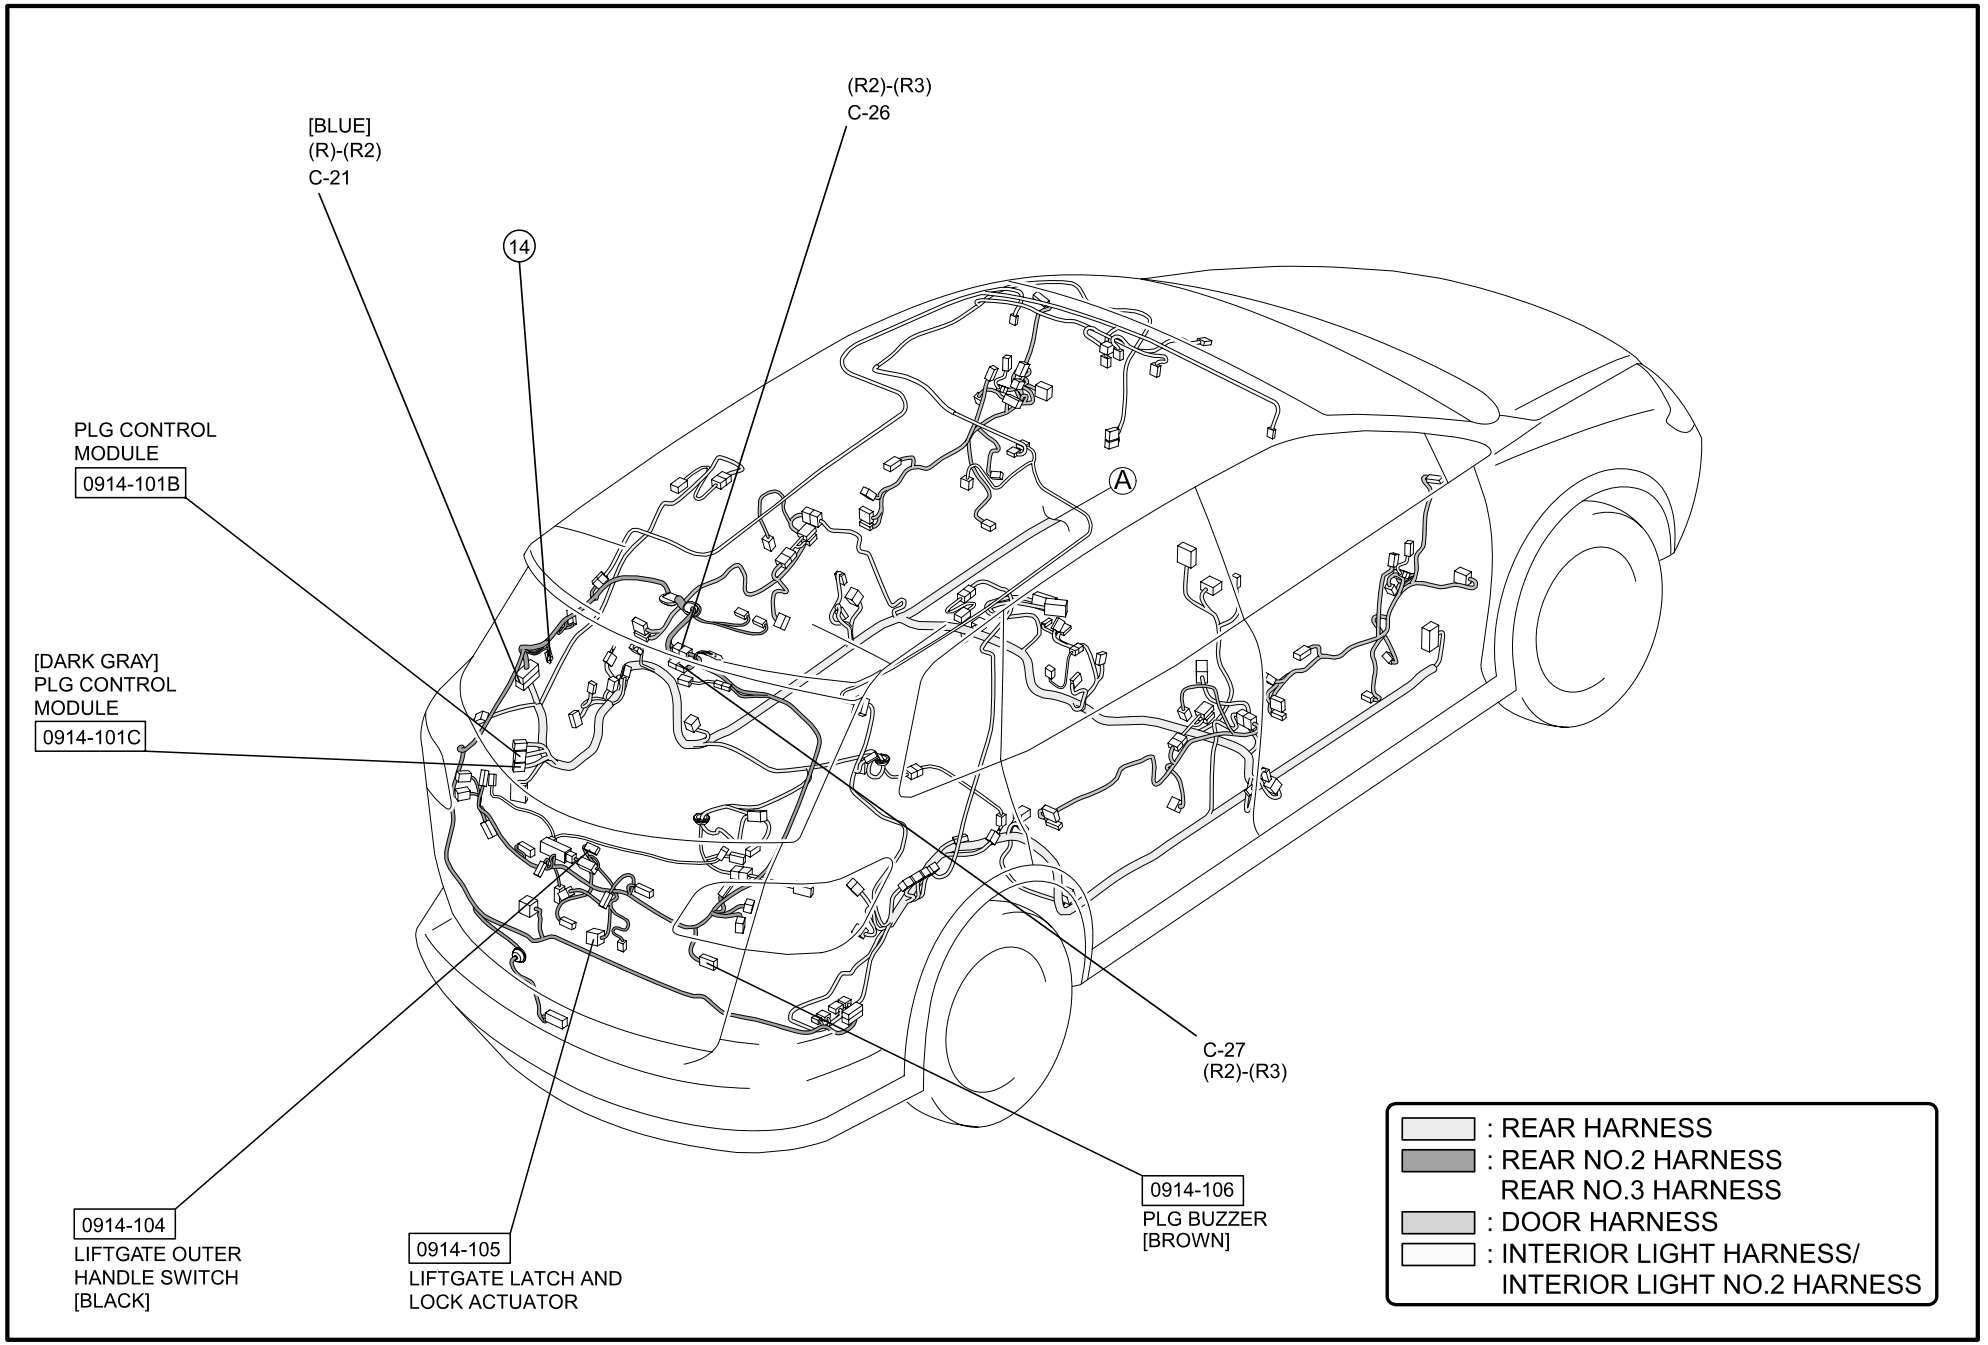

[BLUE]
(R)-(R2)
C-21
(R2)-(R3)
C-26
14
A
PLG CONTROL
MODULE
0914-101B
[DARK GRAY]
PLG CONTROL
MODULE
0914-101C
C-27
(R2)-(R3)
0914-104
LIFTGATE OUTER
HANDLE SWITCH
[BLACK]
0914-105
LIFTGATE LATCH AND
LOCK ACTUATOR
0914-106
PLG BUZZER
[BROWN]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

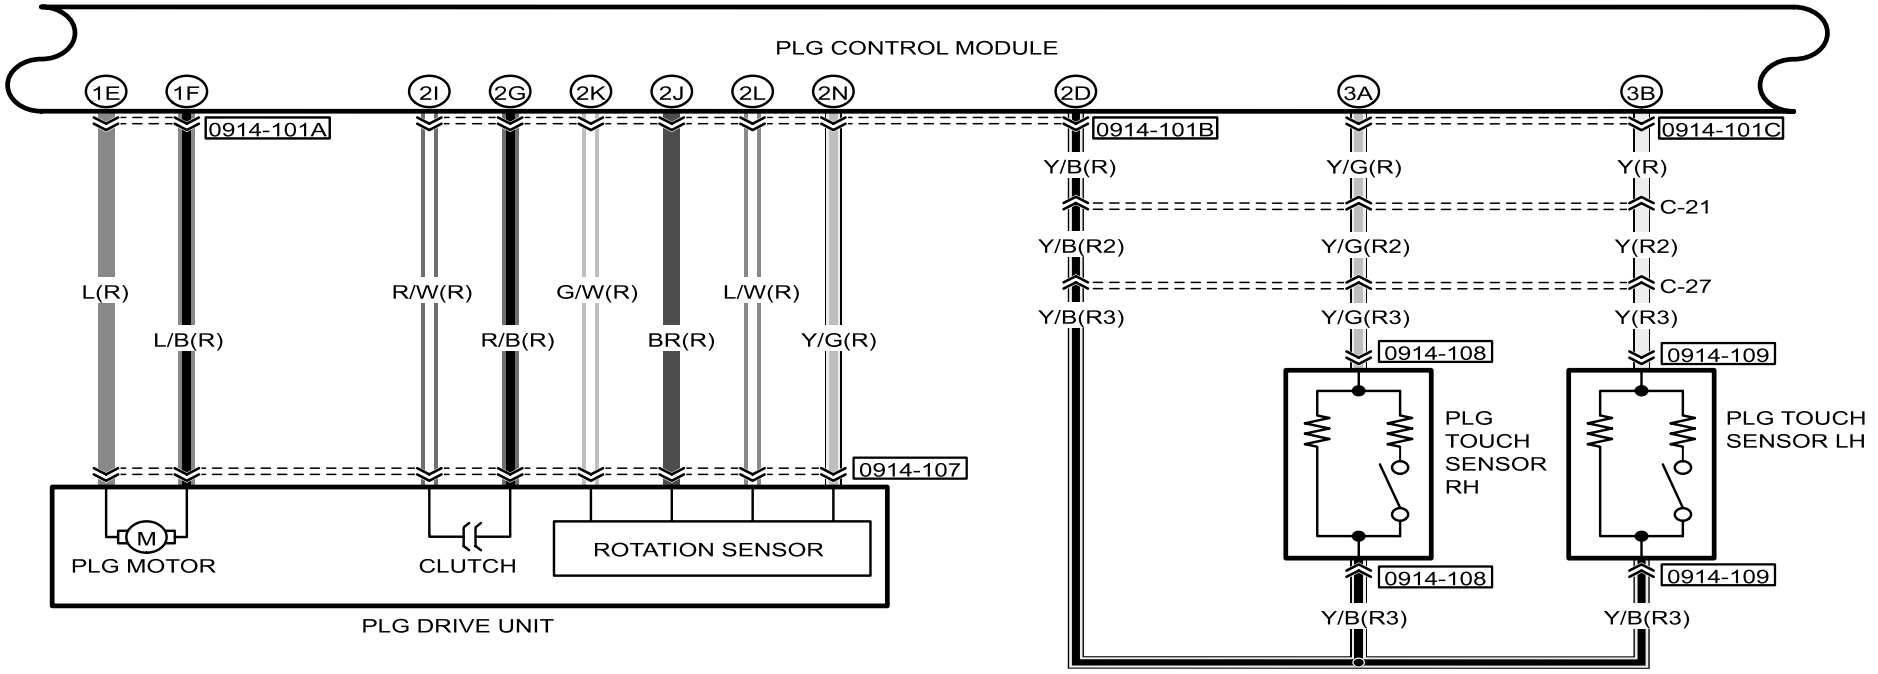


0914-101A
PLG CONTROL MODULE

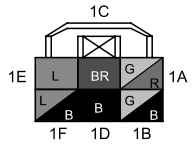


0914-101B
PLG CONTROL MODULE

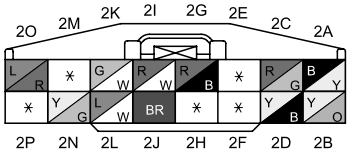


0914-101C
PLG CONTROL MODULE

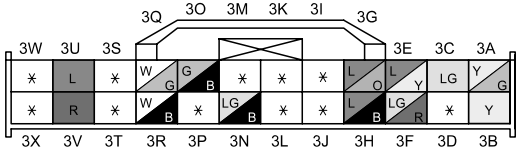


0914-107
PLG DRIVE UNIT

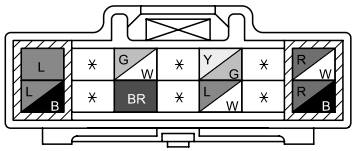


0914-108
PLG TOUCH SENSOR RH




0914-109
PLG TOUCH SENSOR LH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

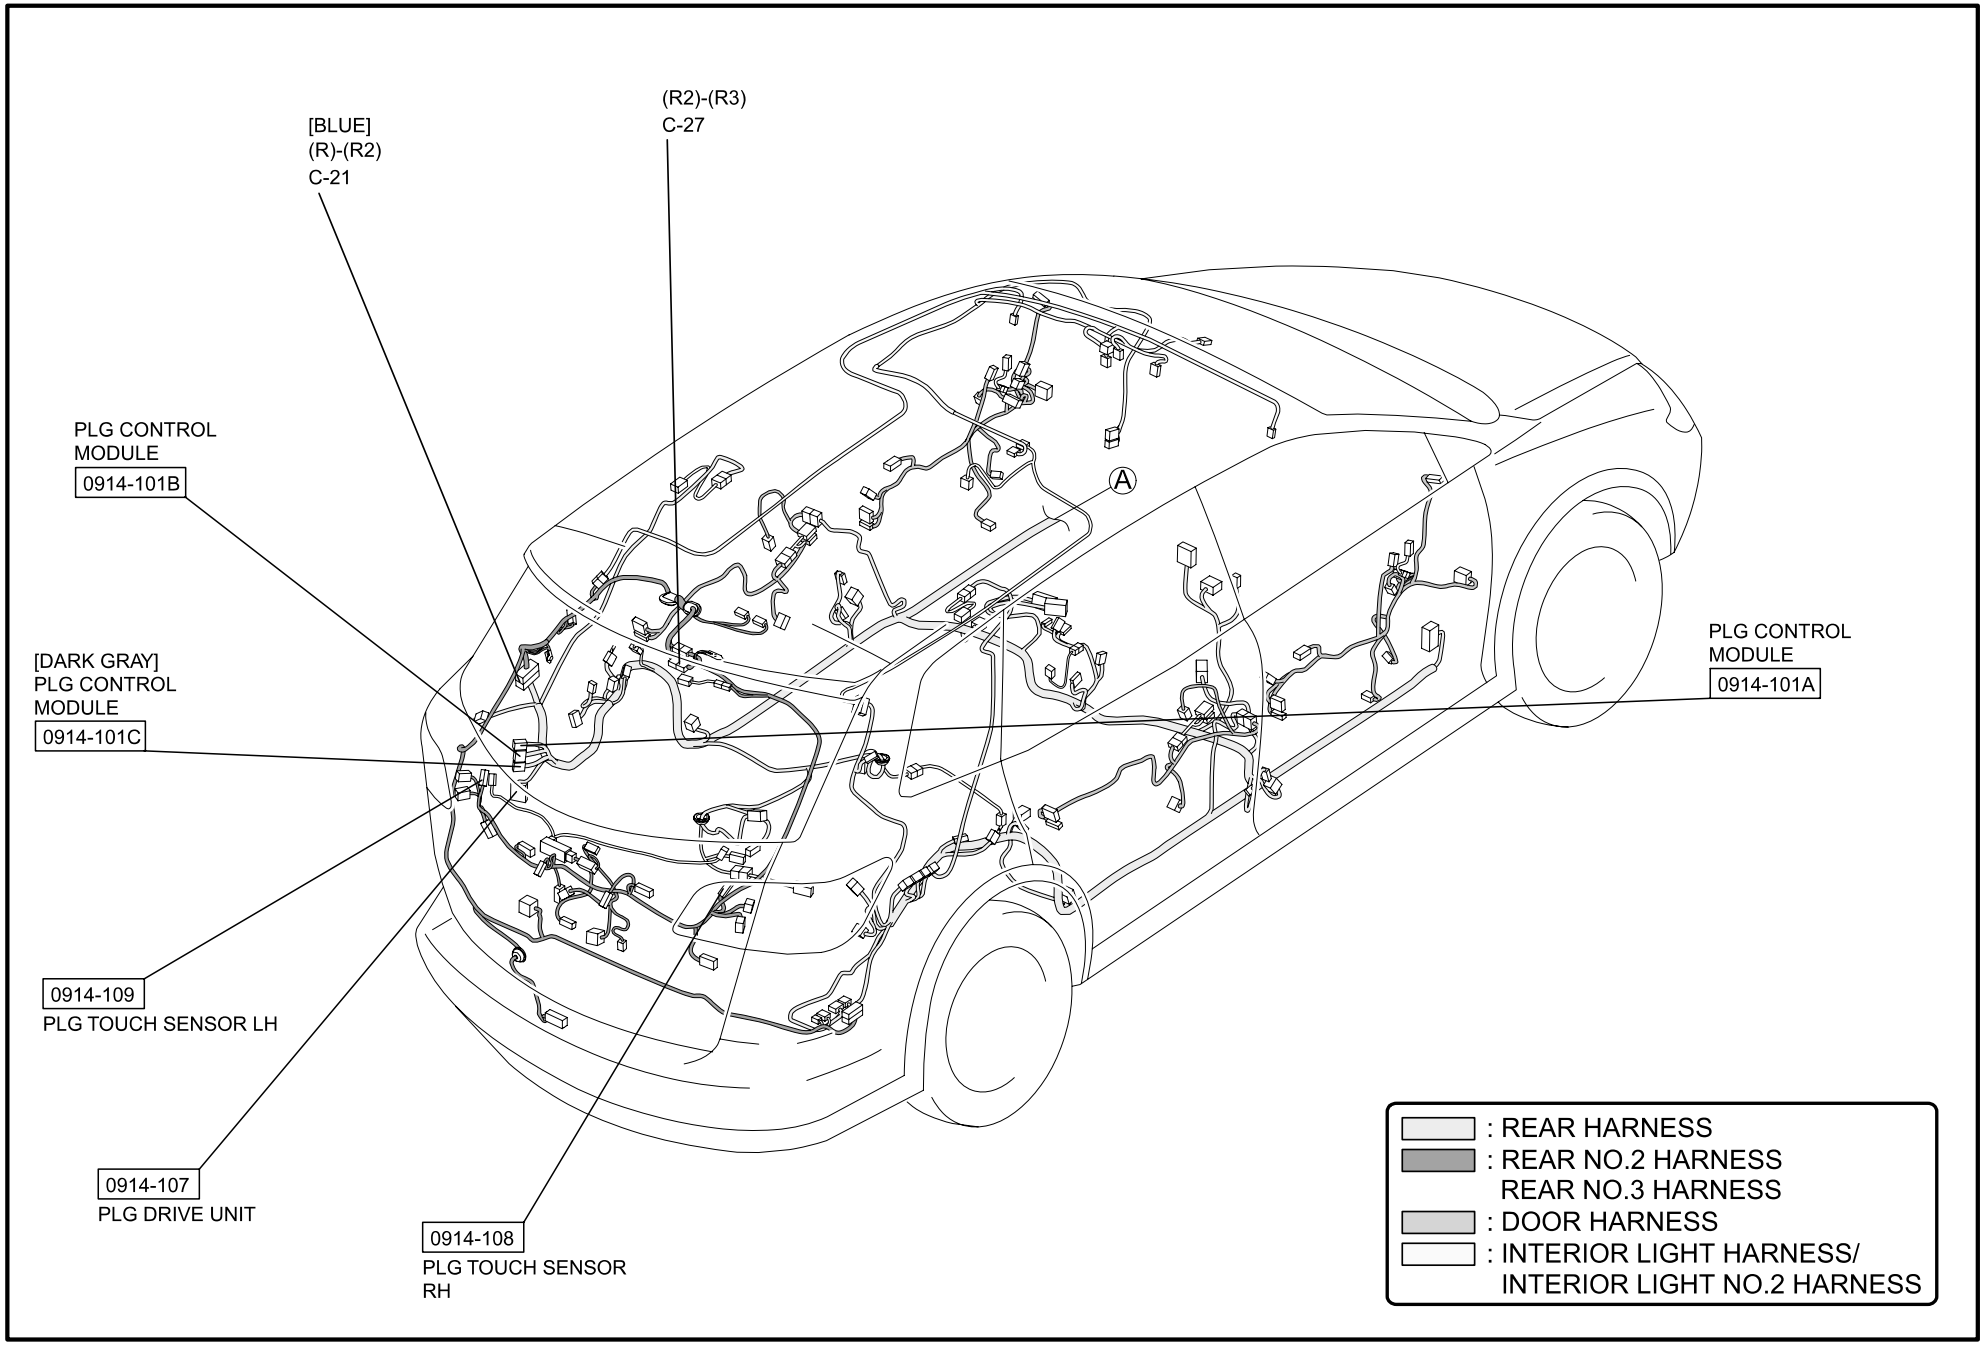

[BLUE]
(R)-(R2)
C-21
(R2)-(R3)
C-27
PLG CONTROL
MODULE
0914-101B
[DARK GRAY]
PLG CONTROL
MODULE
0914-101C
PLG CONTROL
MODULE
0914-101A
A
0914-109
PLG TOUCH SENSOR LH
0914-107
PLG DRIVE UNIT
0914-108
PLG TOUCH SENSOR
RH
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

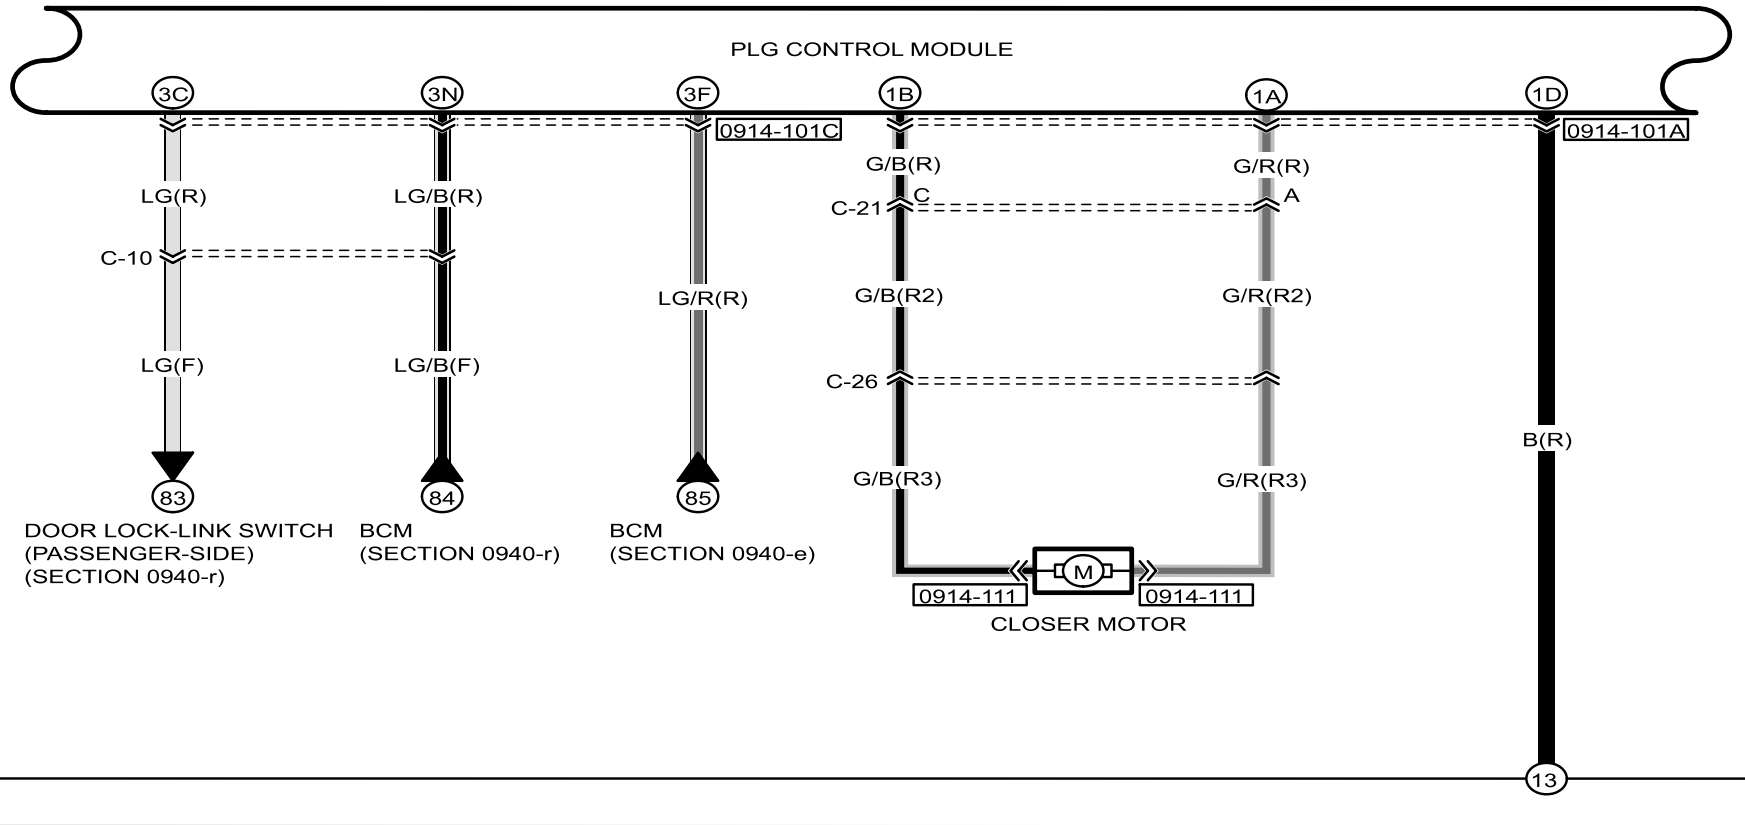

0914-101A
PLG CONTROL MODULE

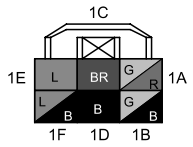


0914-101C
PLG CONTROL MODULE

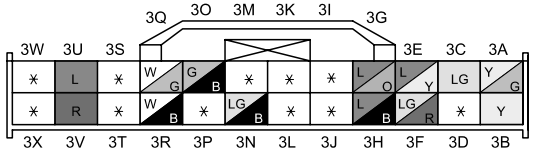


0914-111
CLOSER MOTOR




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

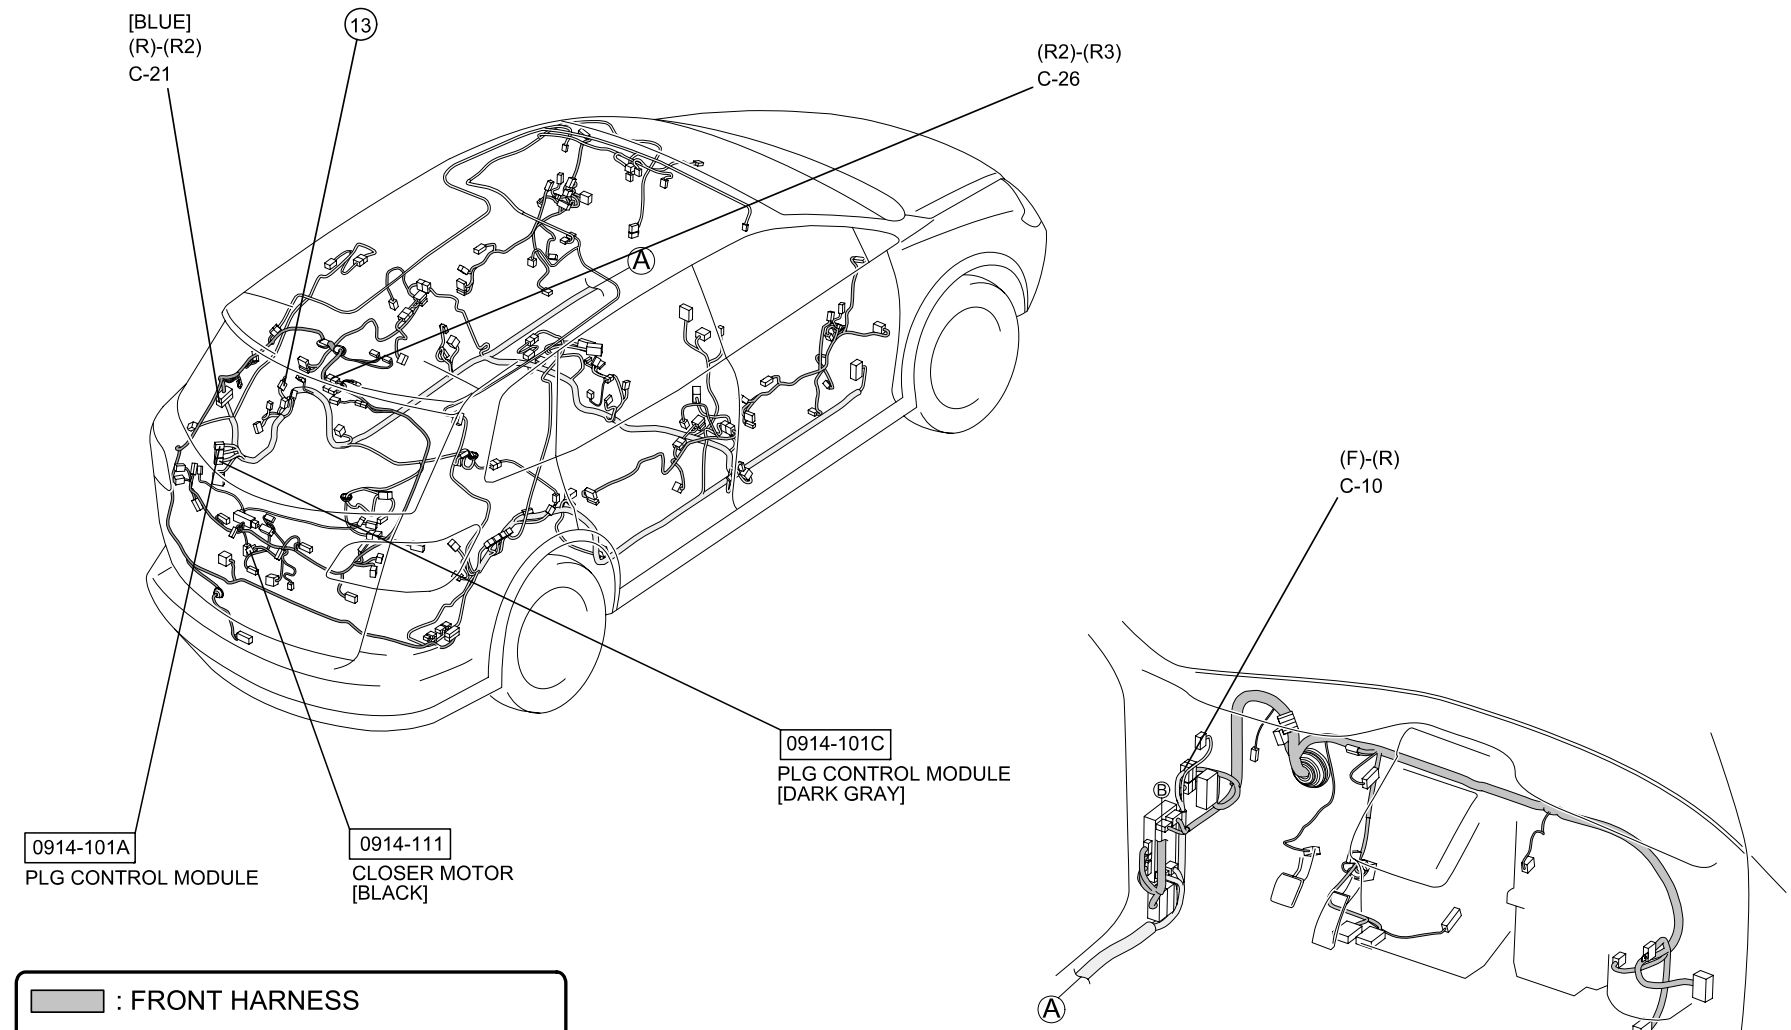

[BLUE]
(R)-(R2)
C-21
13
(R2)-(R3)
C-26
A
0914-101C
PLG CONTROL MODULE
[DARK GRAY]
0914-101A
PLG CONTROL MODULE
0914-111
CLOSER MOTOR
[BLACK]
(F)-(R)
C-10
B
A
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

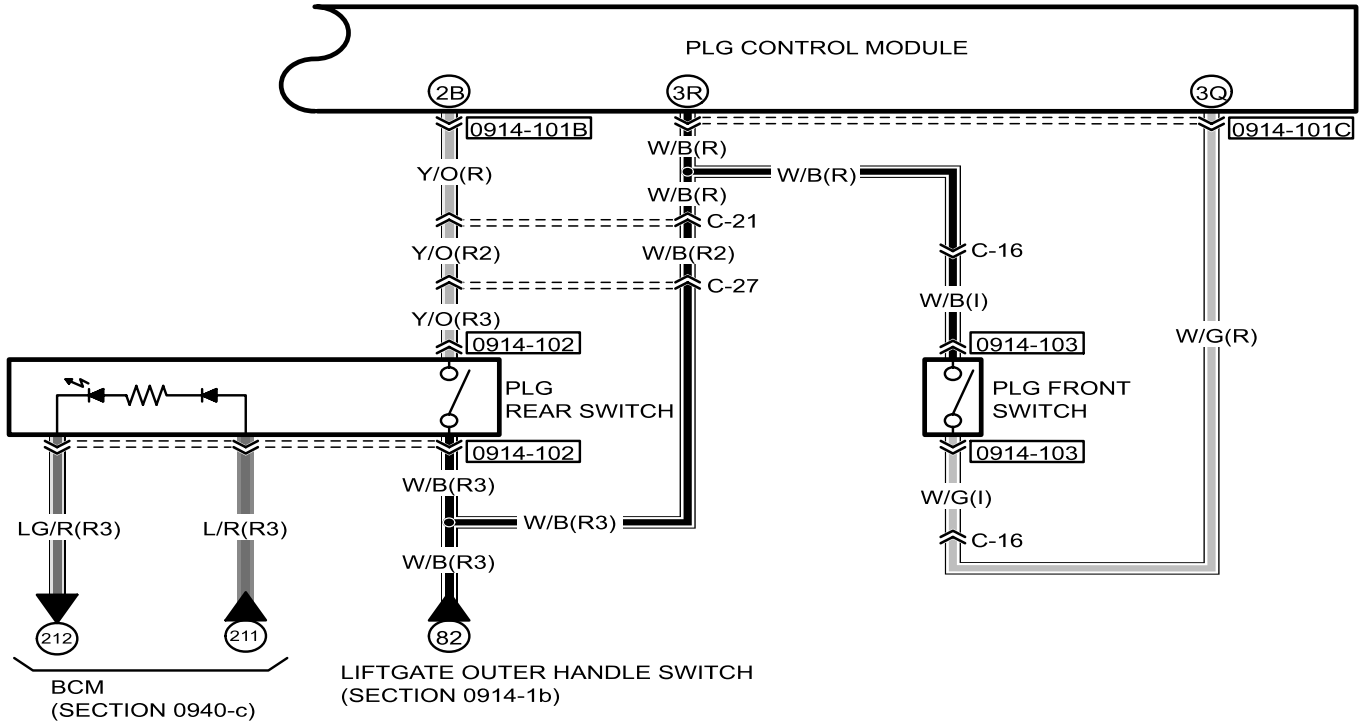


0914-101B
PLG CONTROL MODULE

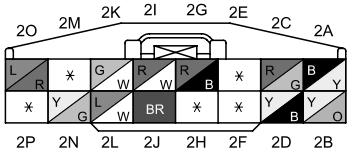


0914-101C
PLG CONTROL MODULE

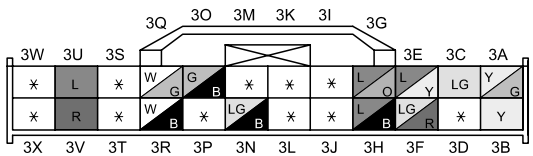


0914-102
PLG REAR SWITCH




0914-103
PLG FRONT SWITCH /
PLG FRONT SWITCH ILLUMINATION




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

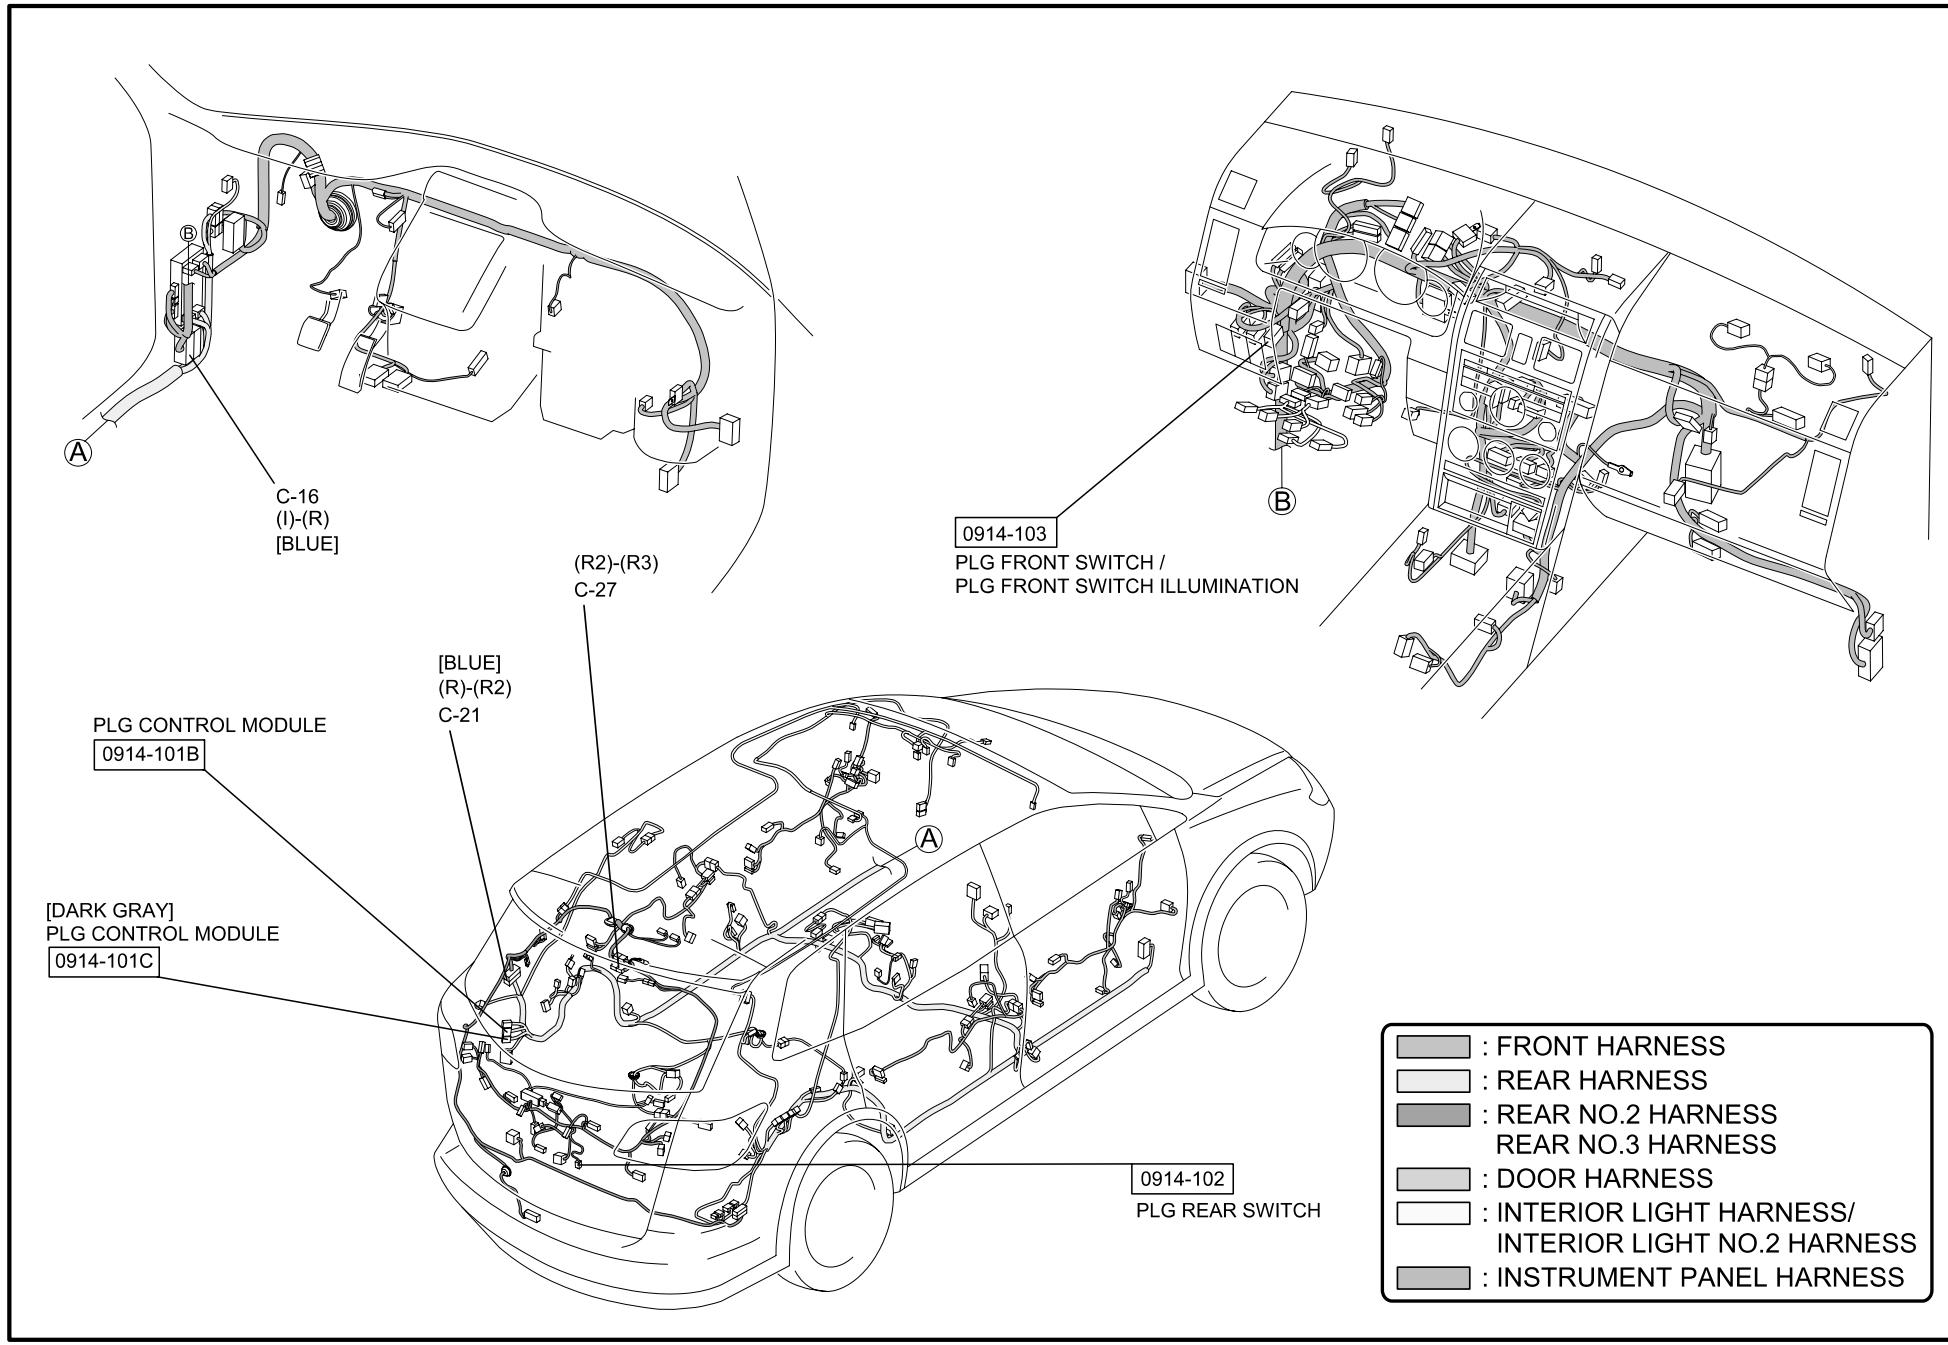

A
B
C-16
(I)-(R)
[BLUE]
0914-103
PLG FRONT SWITCH /
PLG FRONT SWITCH ILLUMINATION
(R2)-(R3)
C-27
[BLUE]
(R)-(R2)
C-21
PLG CONTROL MODULE
0914-101B
[DARK GRAY]
PLG CONTROL MODULE
0914-101C
0914-102
PLG REAR SWITCH
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

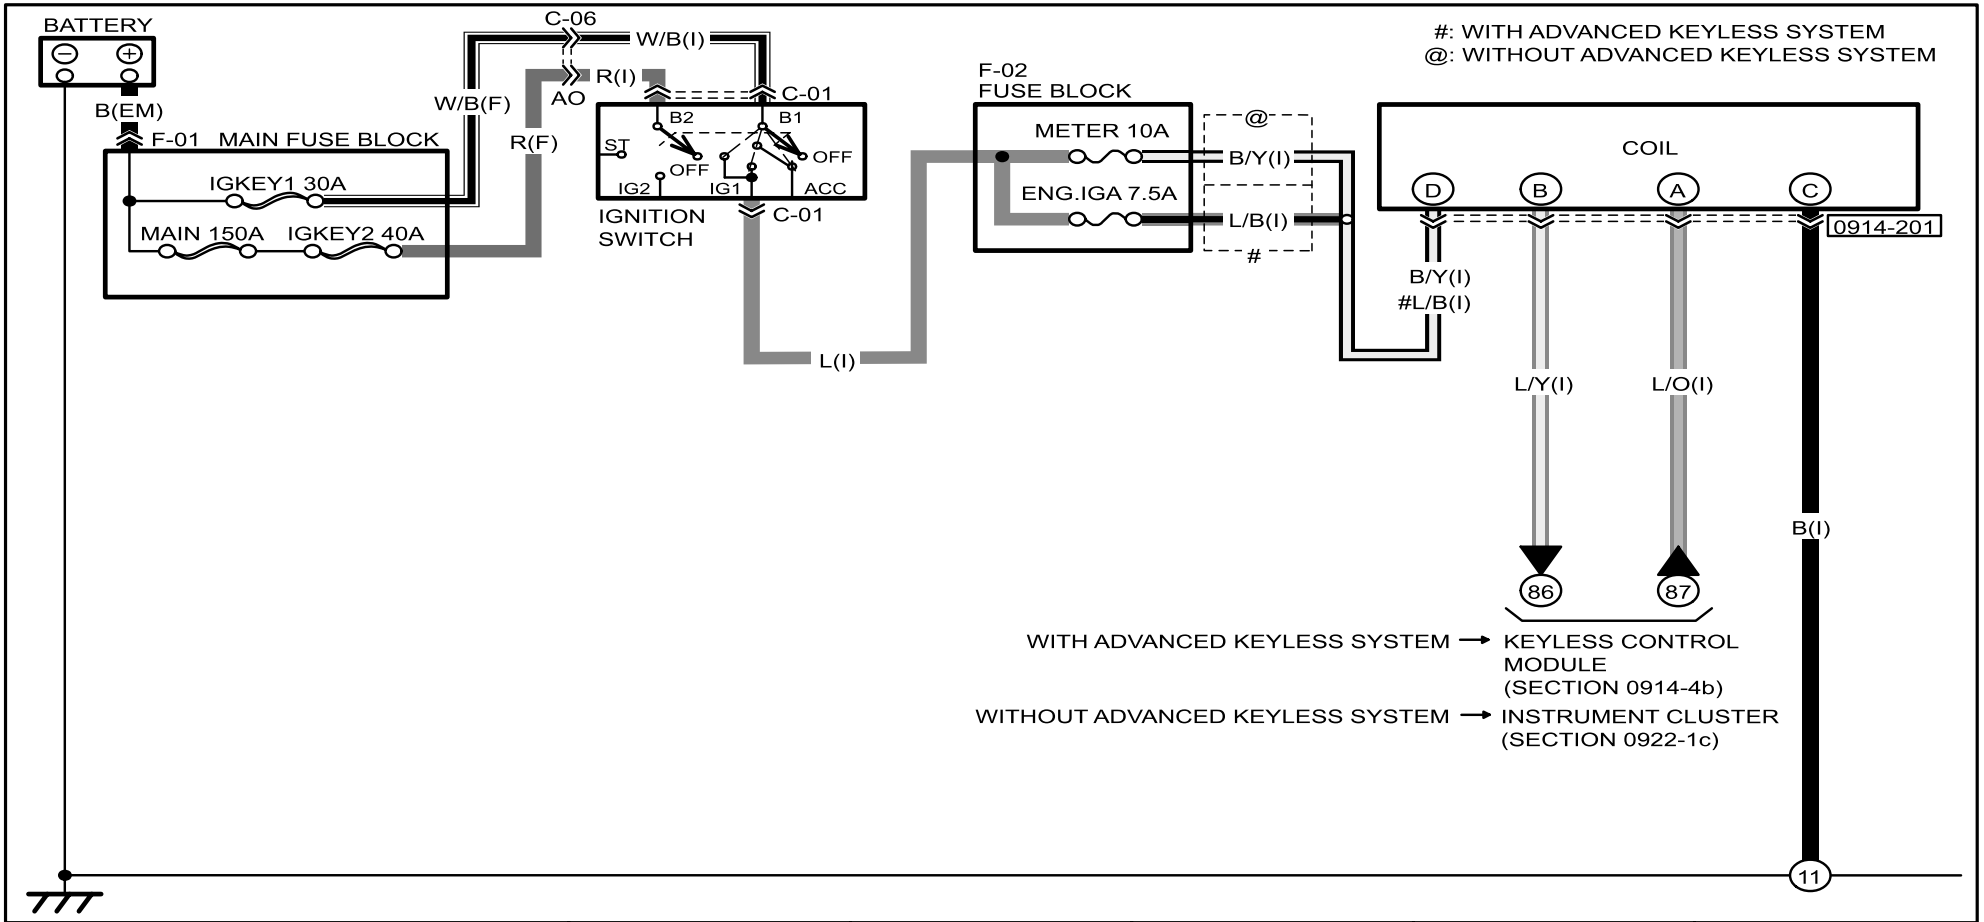


0914-201
COIL

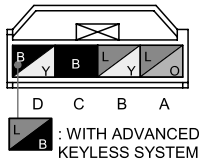


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

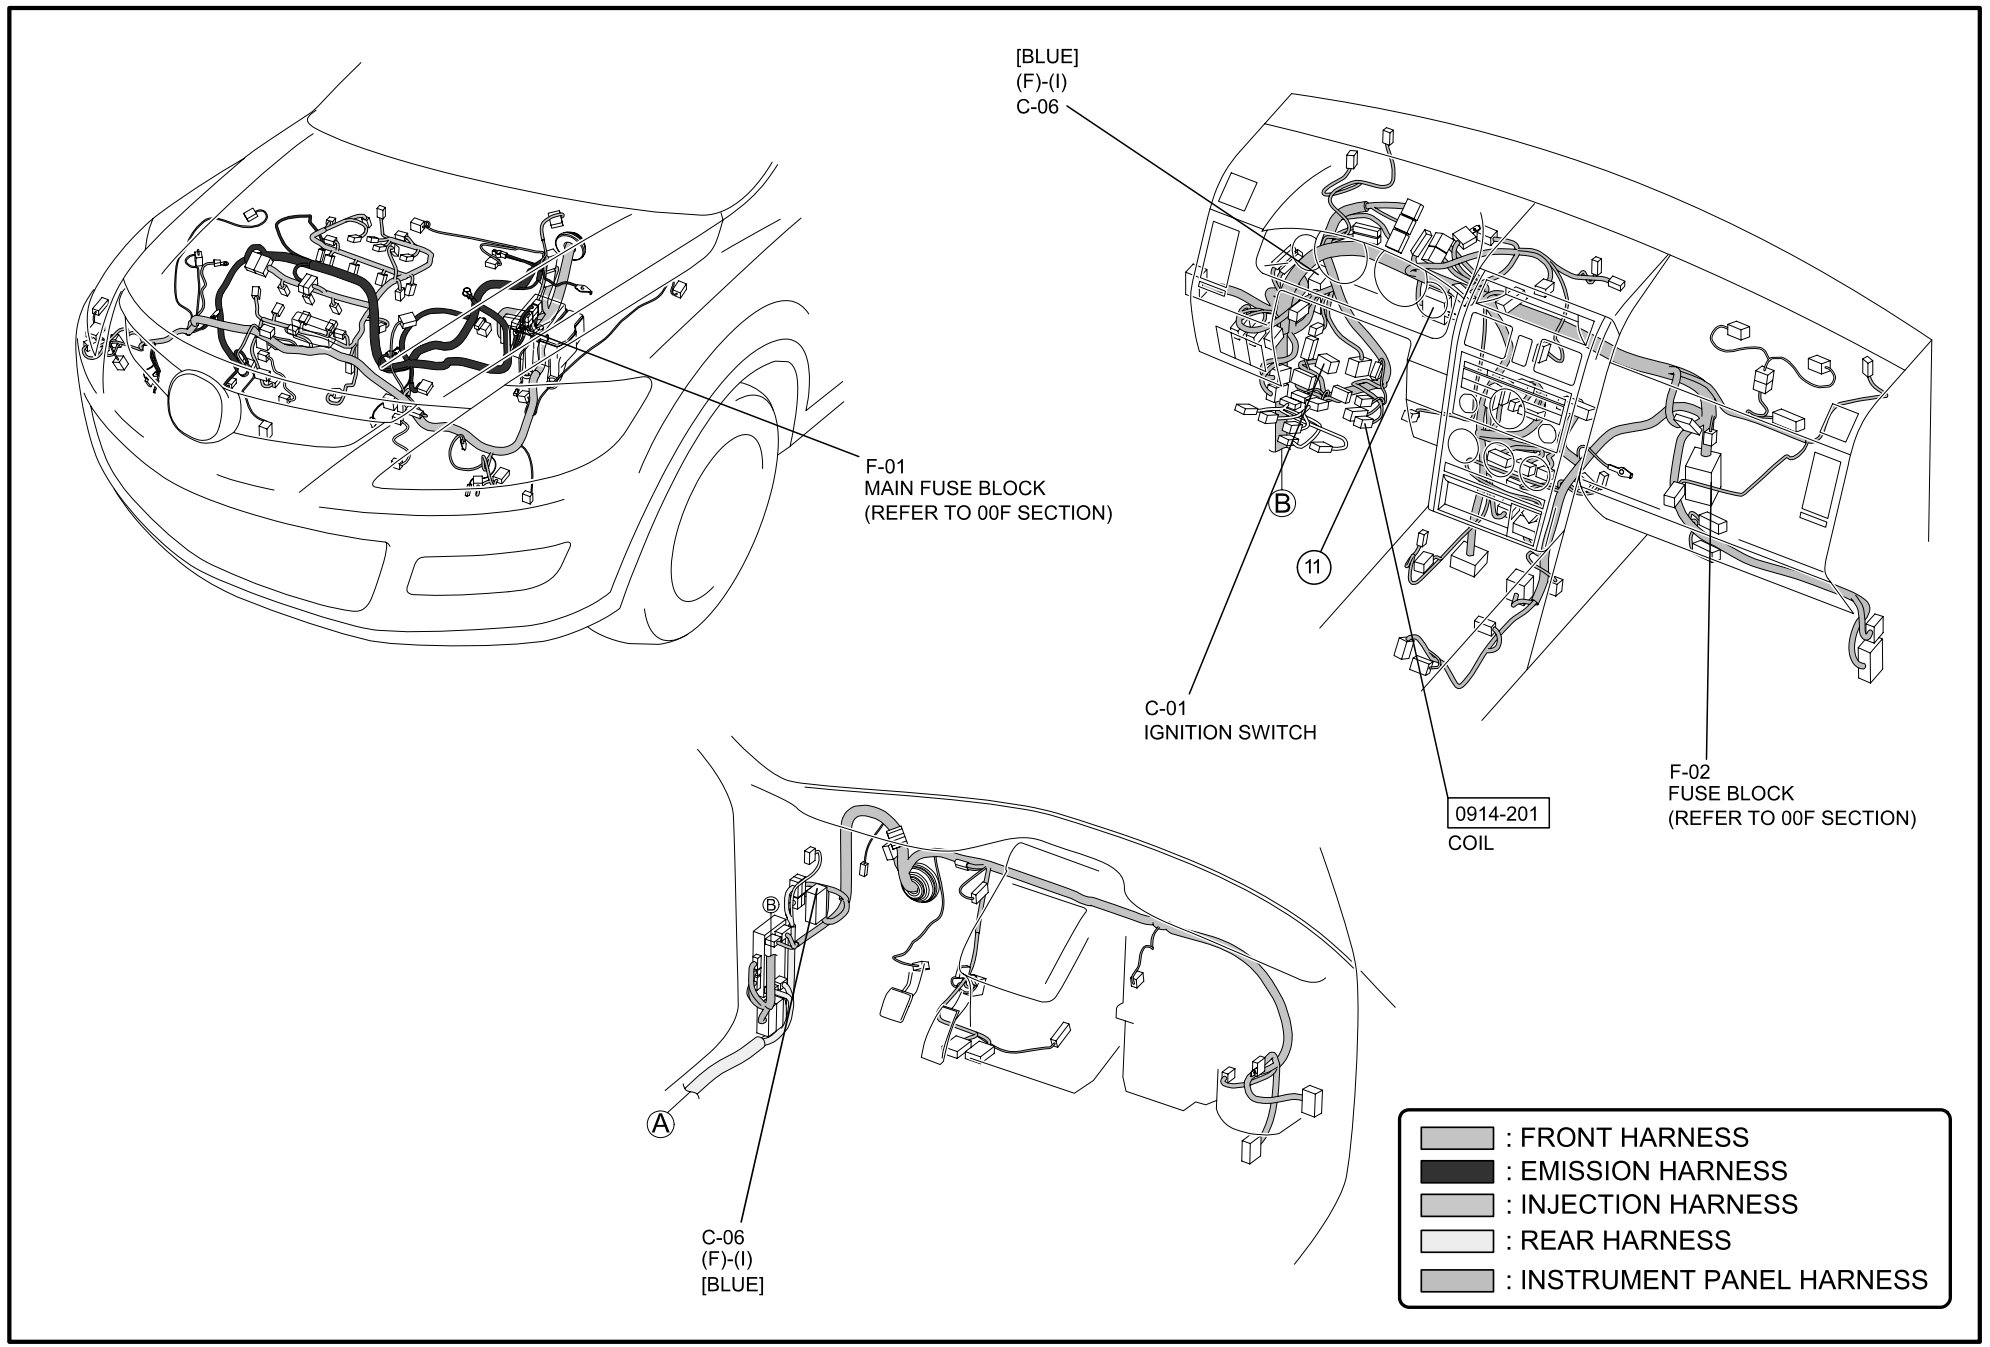
[BLUE]
(F)-(I)
C-06
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
11
C-01
IGNITION SWITCH
0914-201
COIL
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
B
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

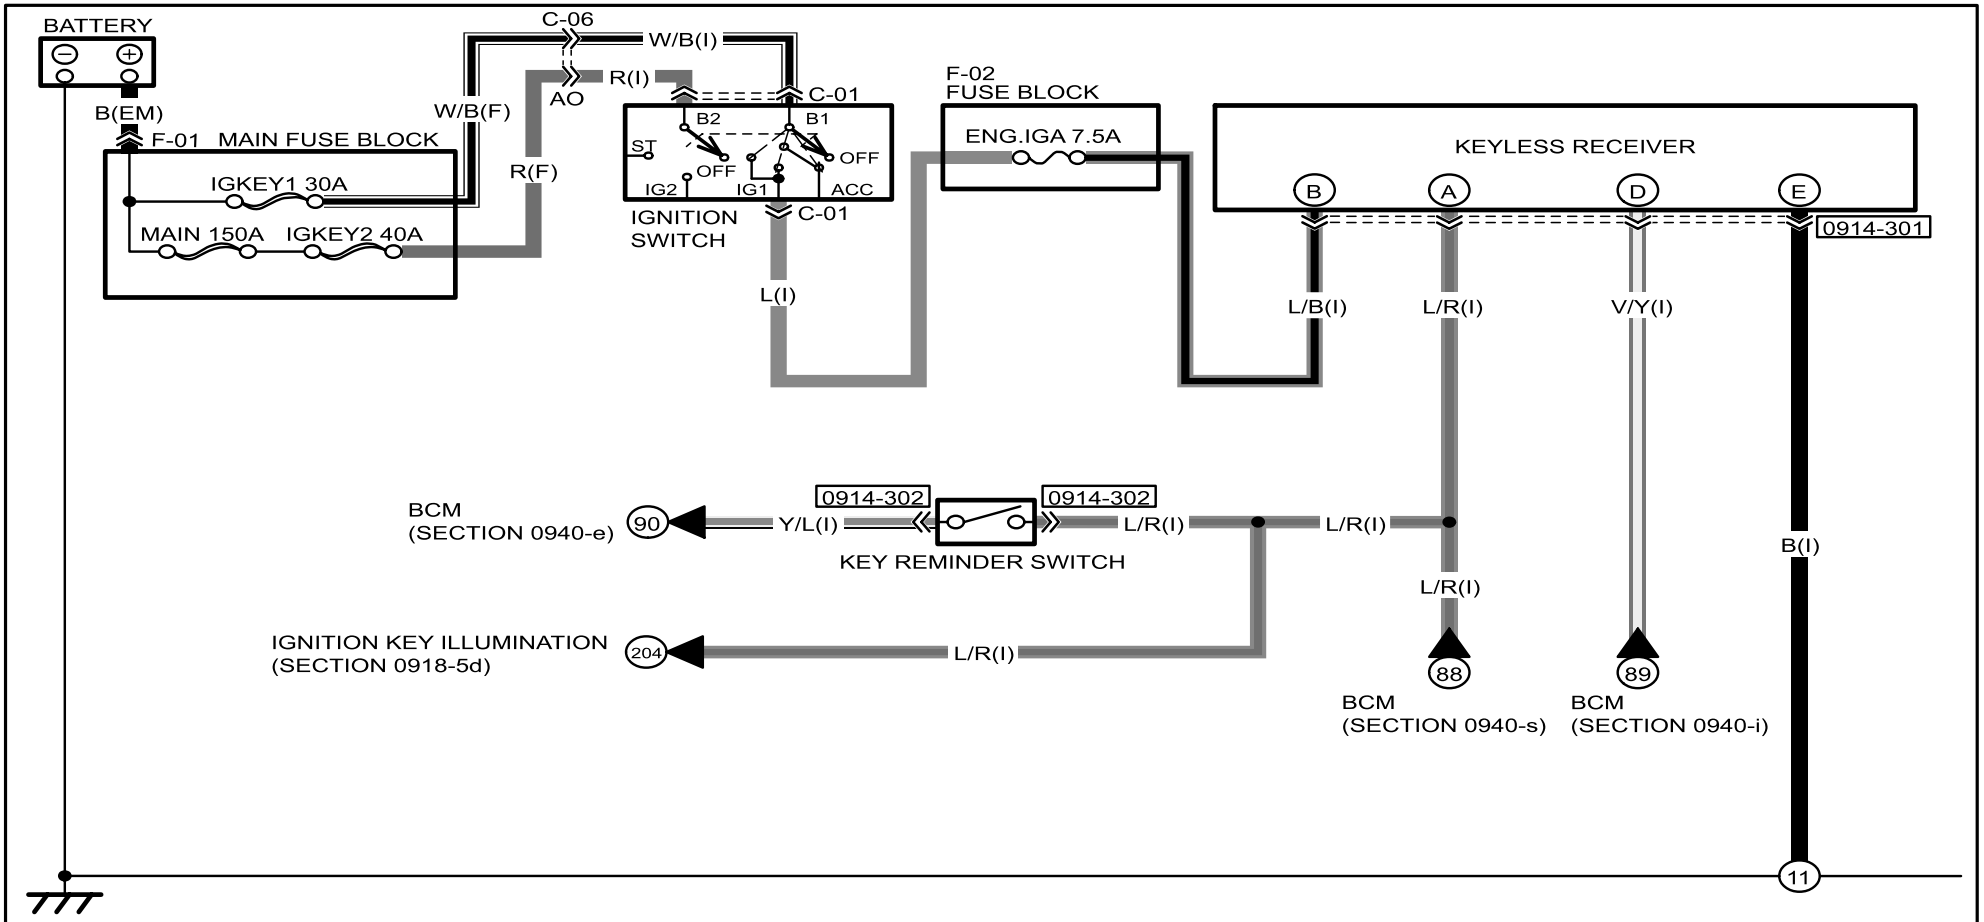


0914-301
KEYLESS RECEIVER




0914-302
KEY REMINDER SWITCH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

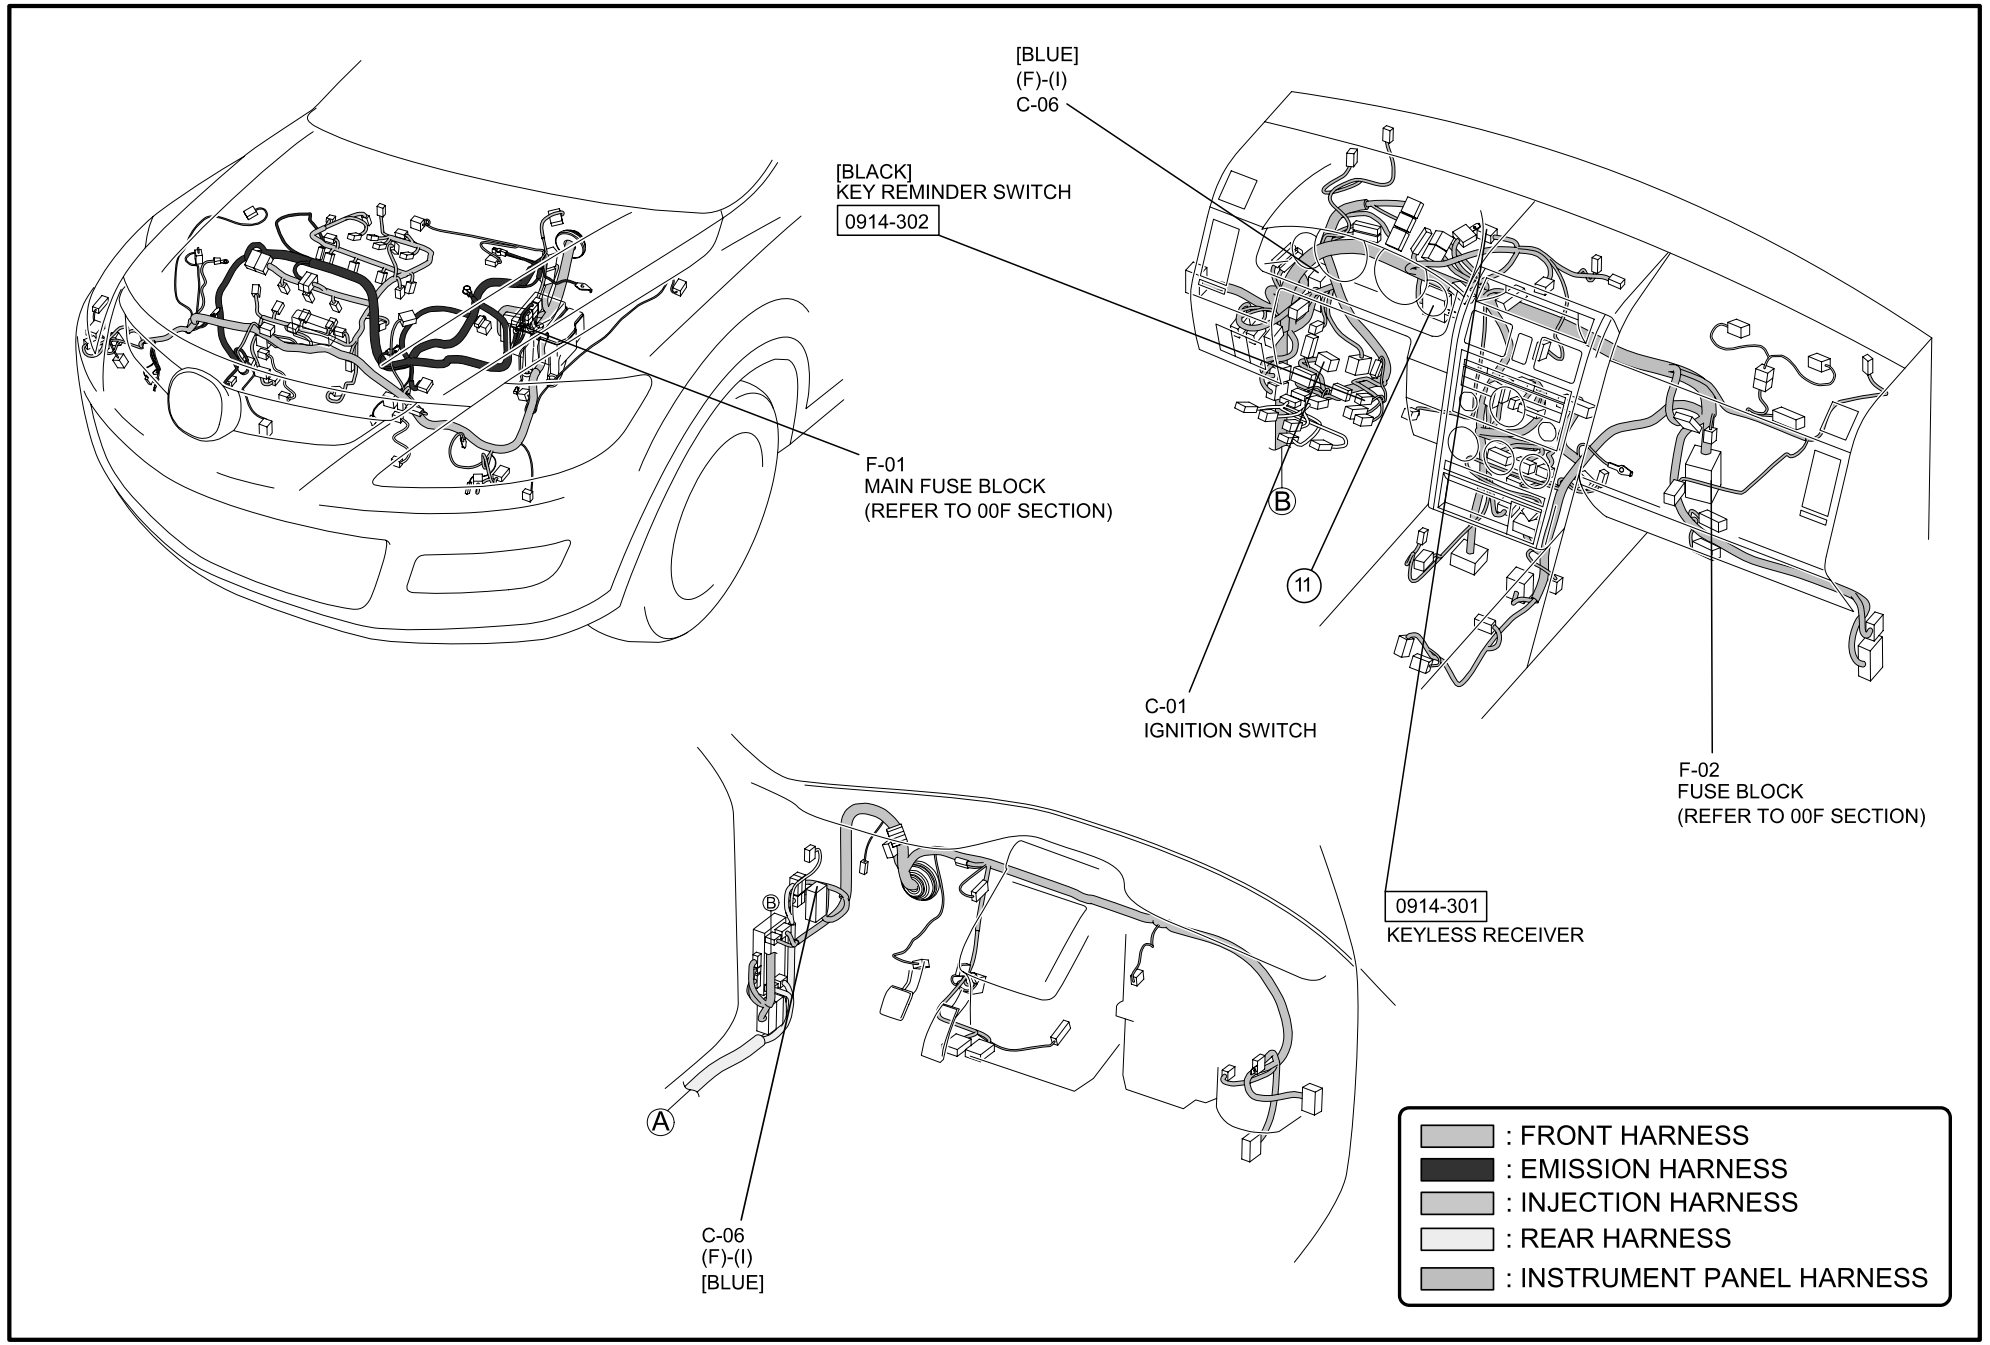

[BLUE]
(F)-(I)
C-06
[BLACK]
KEY REMINDER SWITCH
0914-302
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
11
C-01
IGNITION SWITCH
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
0914-301
KEYLESS RECEIVER
A
B
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

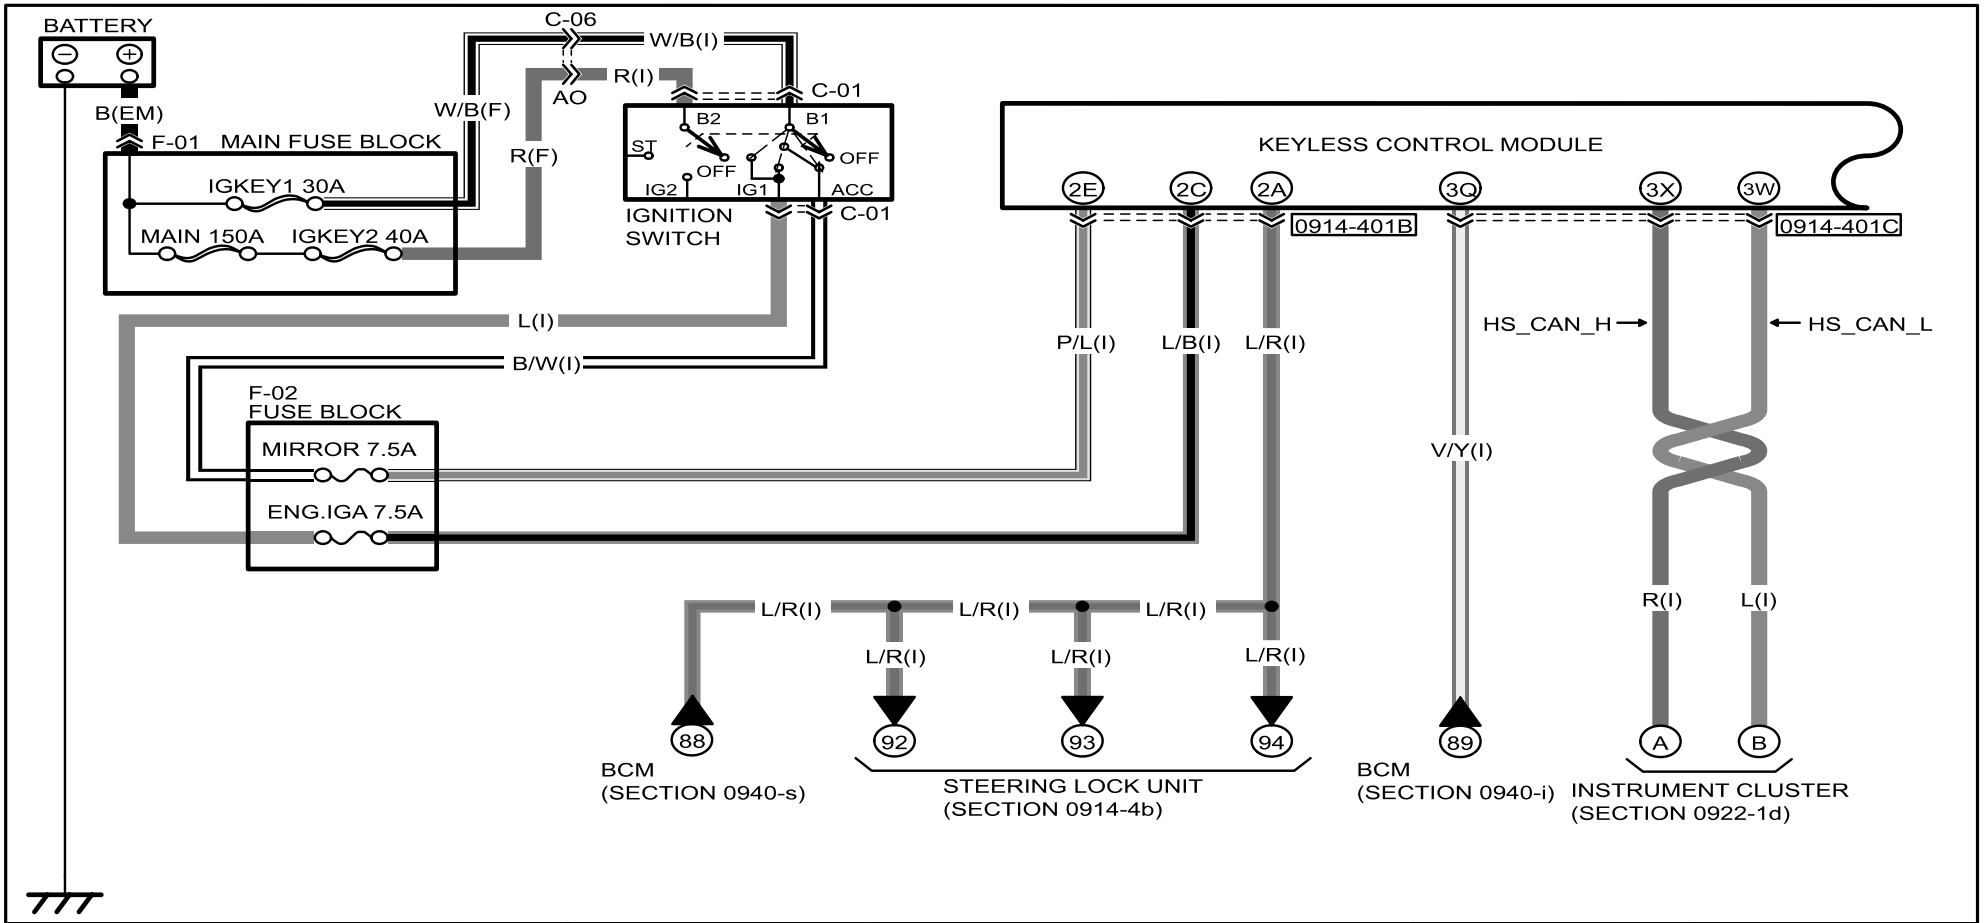


0914-401B
KEYLESS CONTROL MODULE

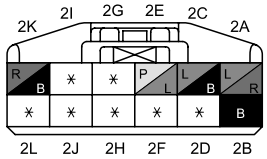


0914-401C
KEYLESS CONTROL MODULE

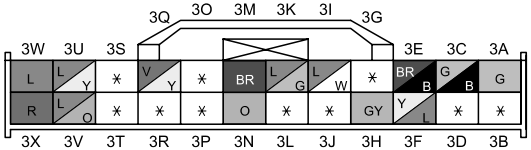


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

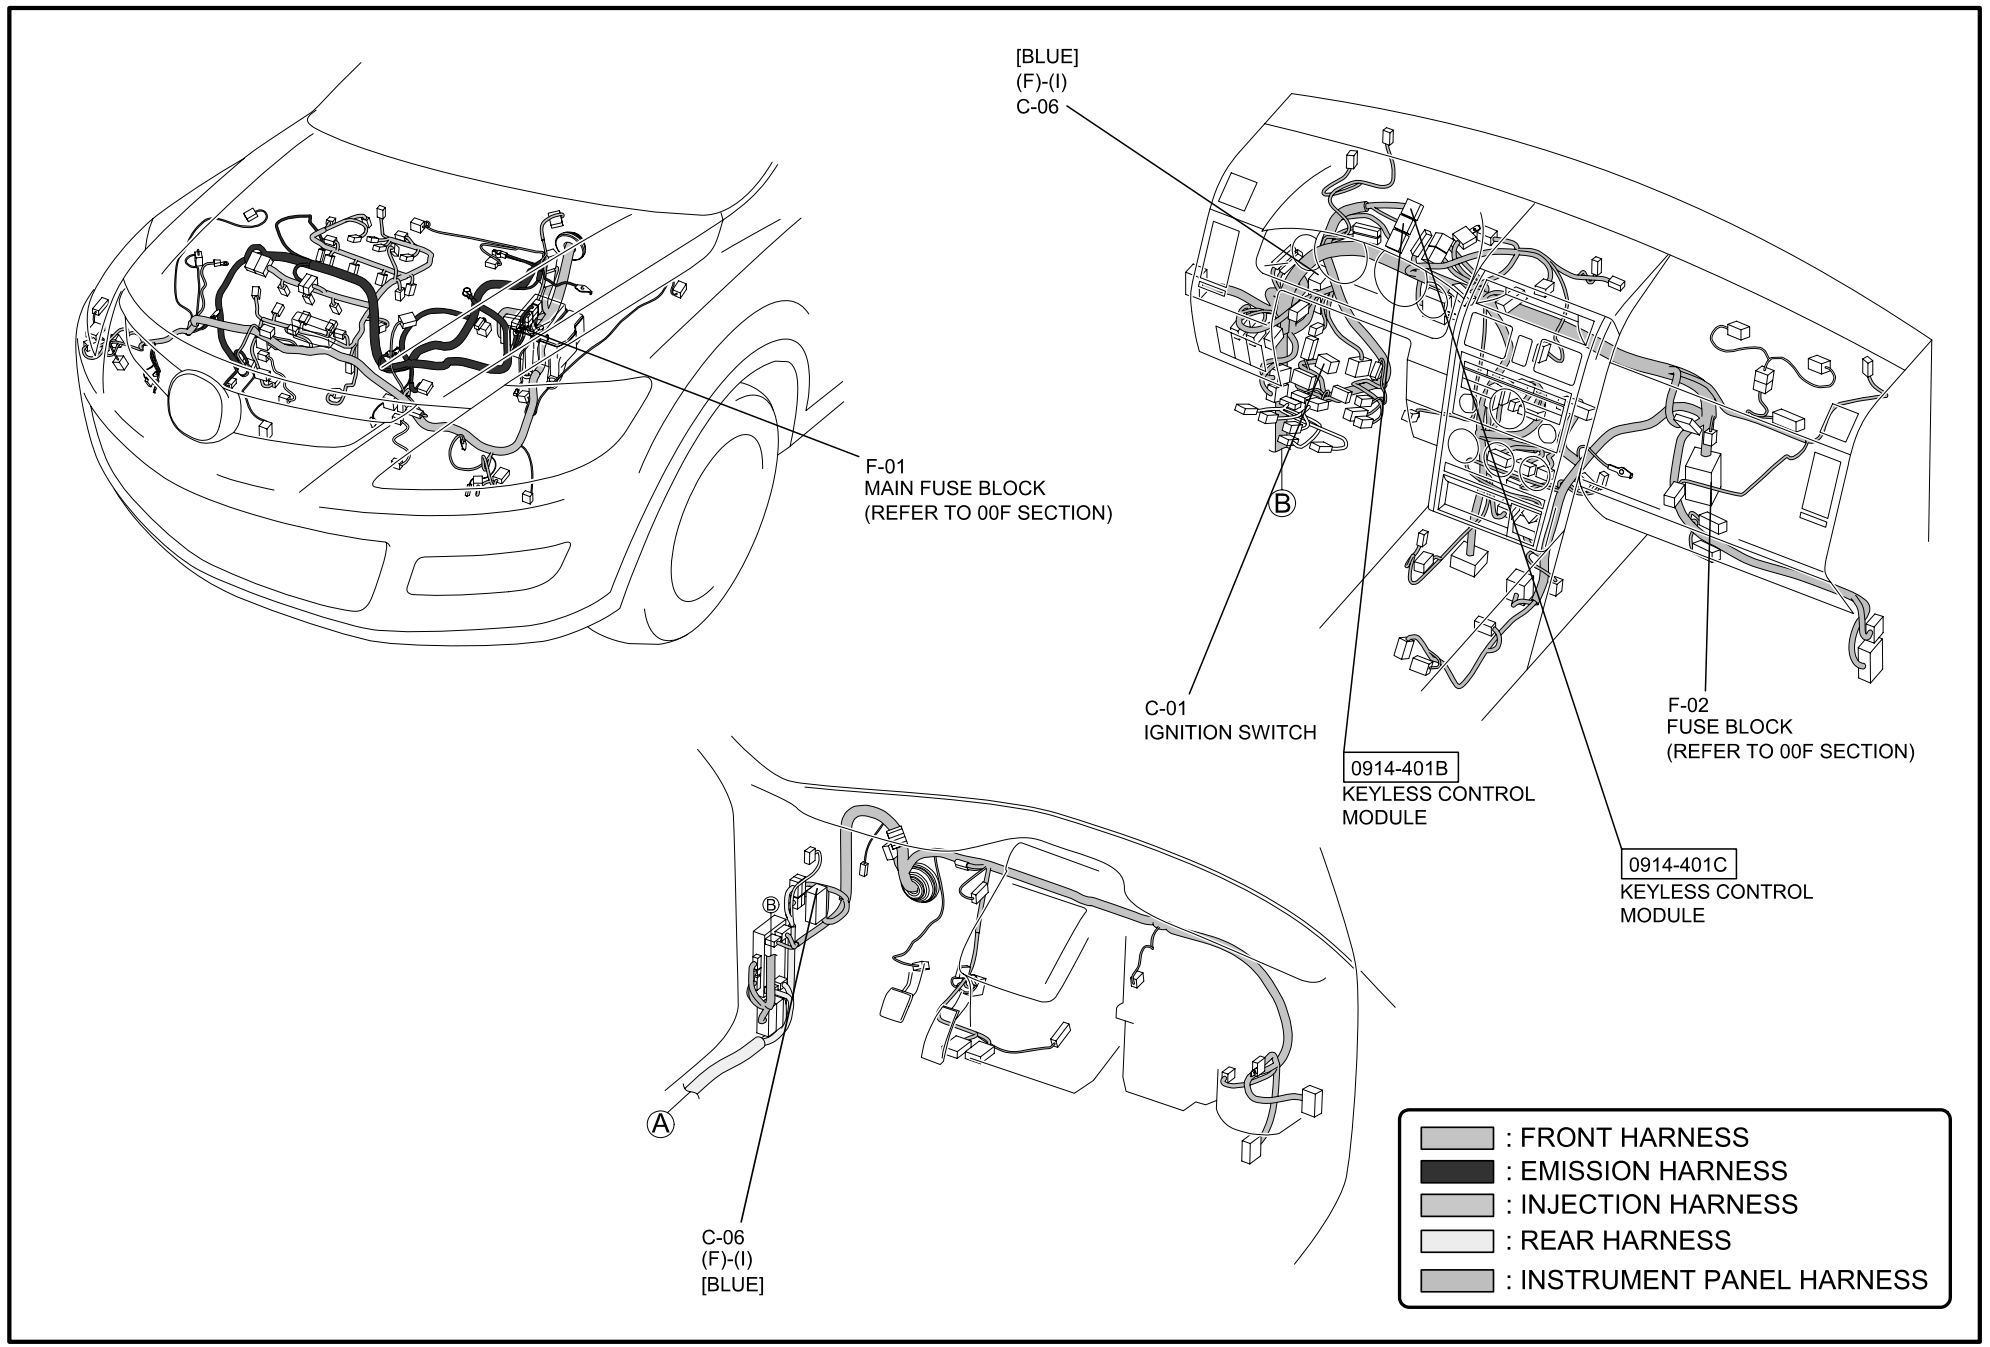

[BLUE]
(F)-(I)
C-06
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
C-01
IGNITION SWITCH
0914-401B
KEYLESS CONTROL
MODULE
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
0914-401C
KEYLESS CONTROL
MODULE
B
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

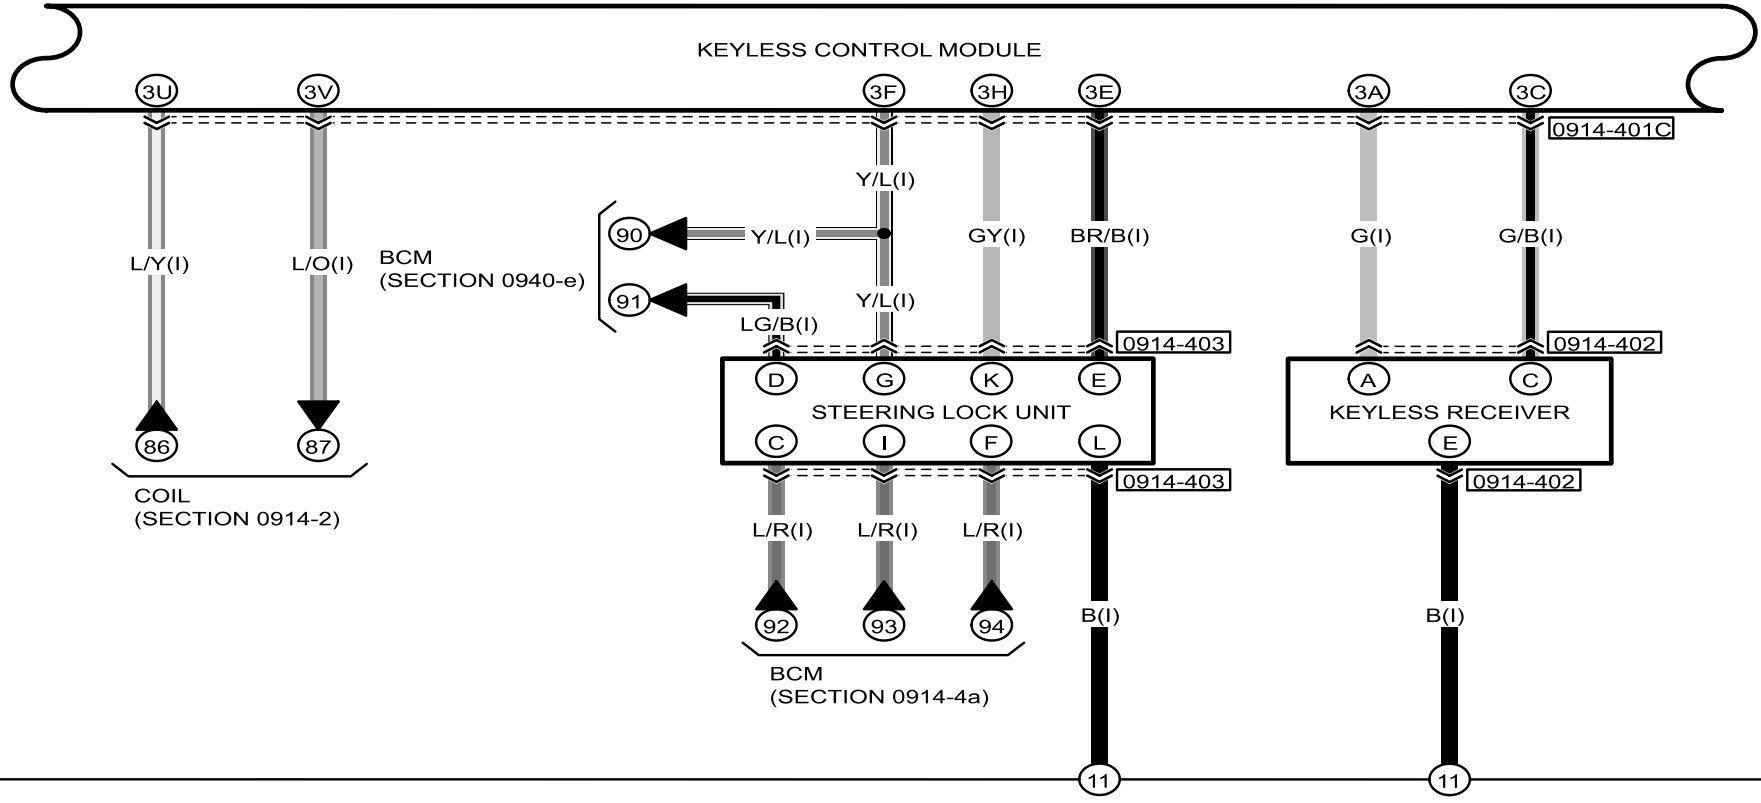


0914-401C
KEYLESS CONTROL MODULE

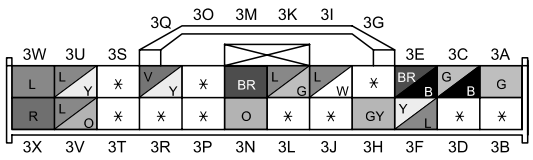


0914-402
KEYLESS RECEIVER




0914-403
STEERING LOCK UNIT

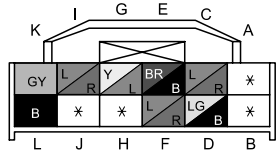

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

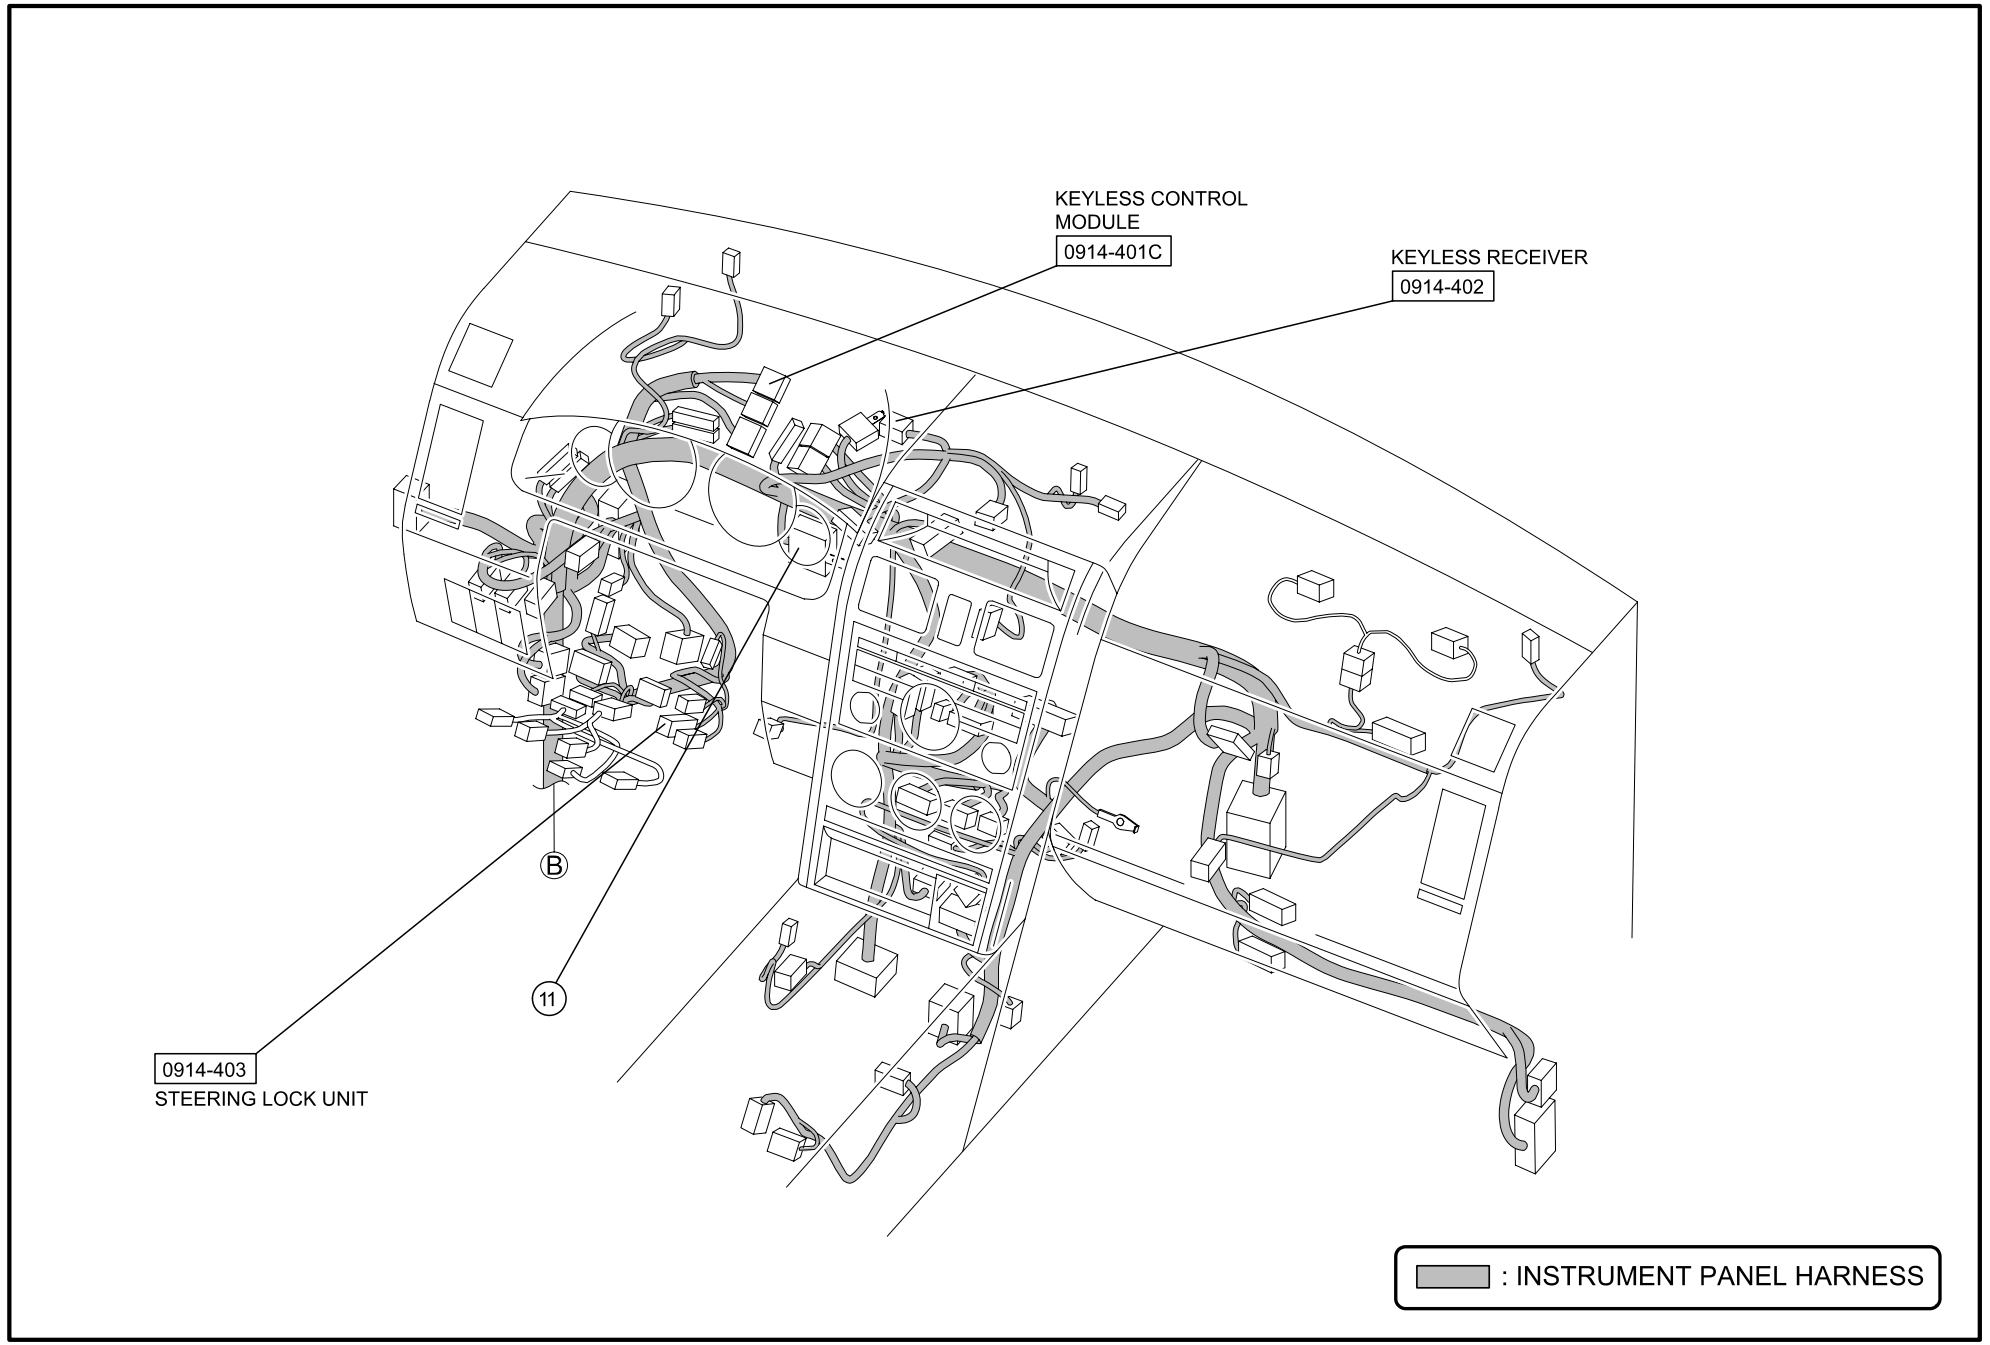
KEYLESS CONTROL MODULE
0914-401C
KEYLESS RECEIVER
0914-402
B
11
0914-403
STEERING LOCK UNIT
: INSTRUMENT PANEL HARNESS

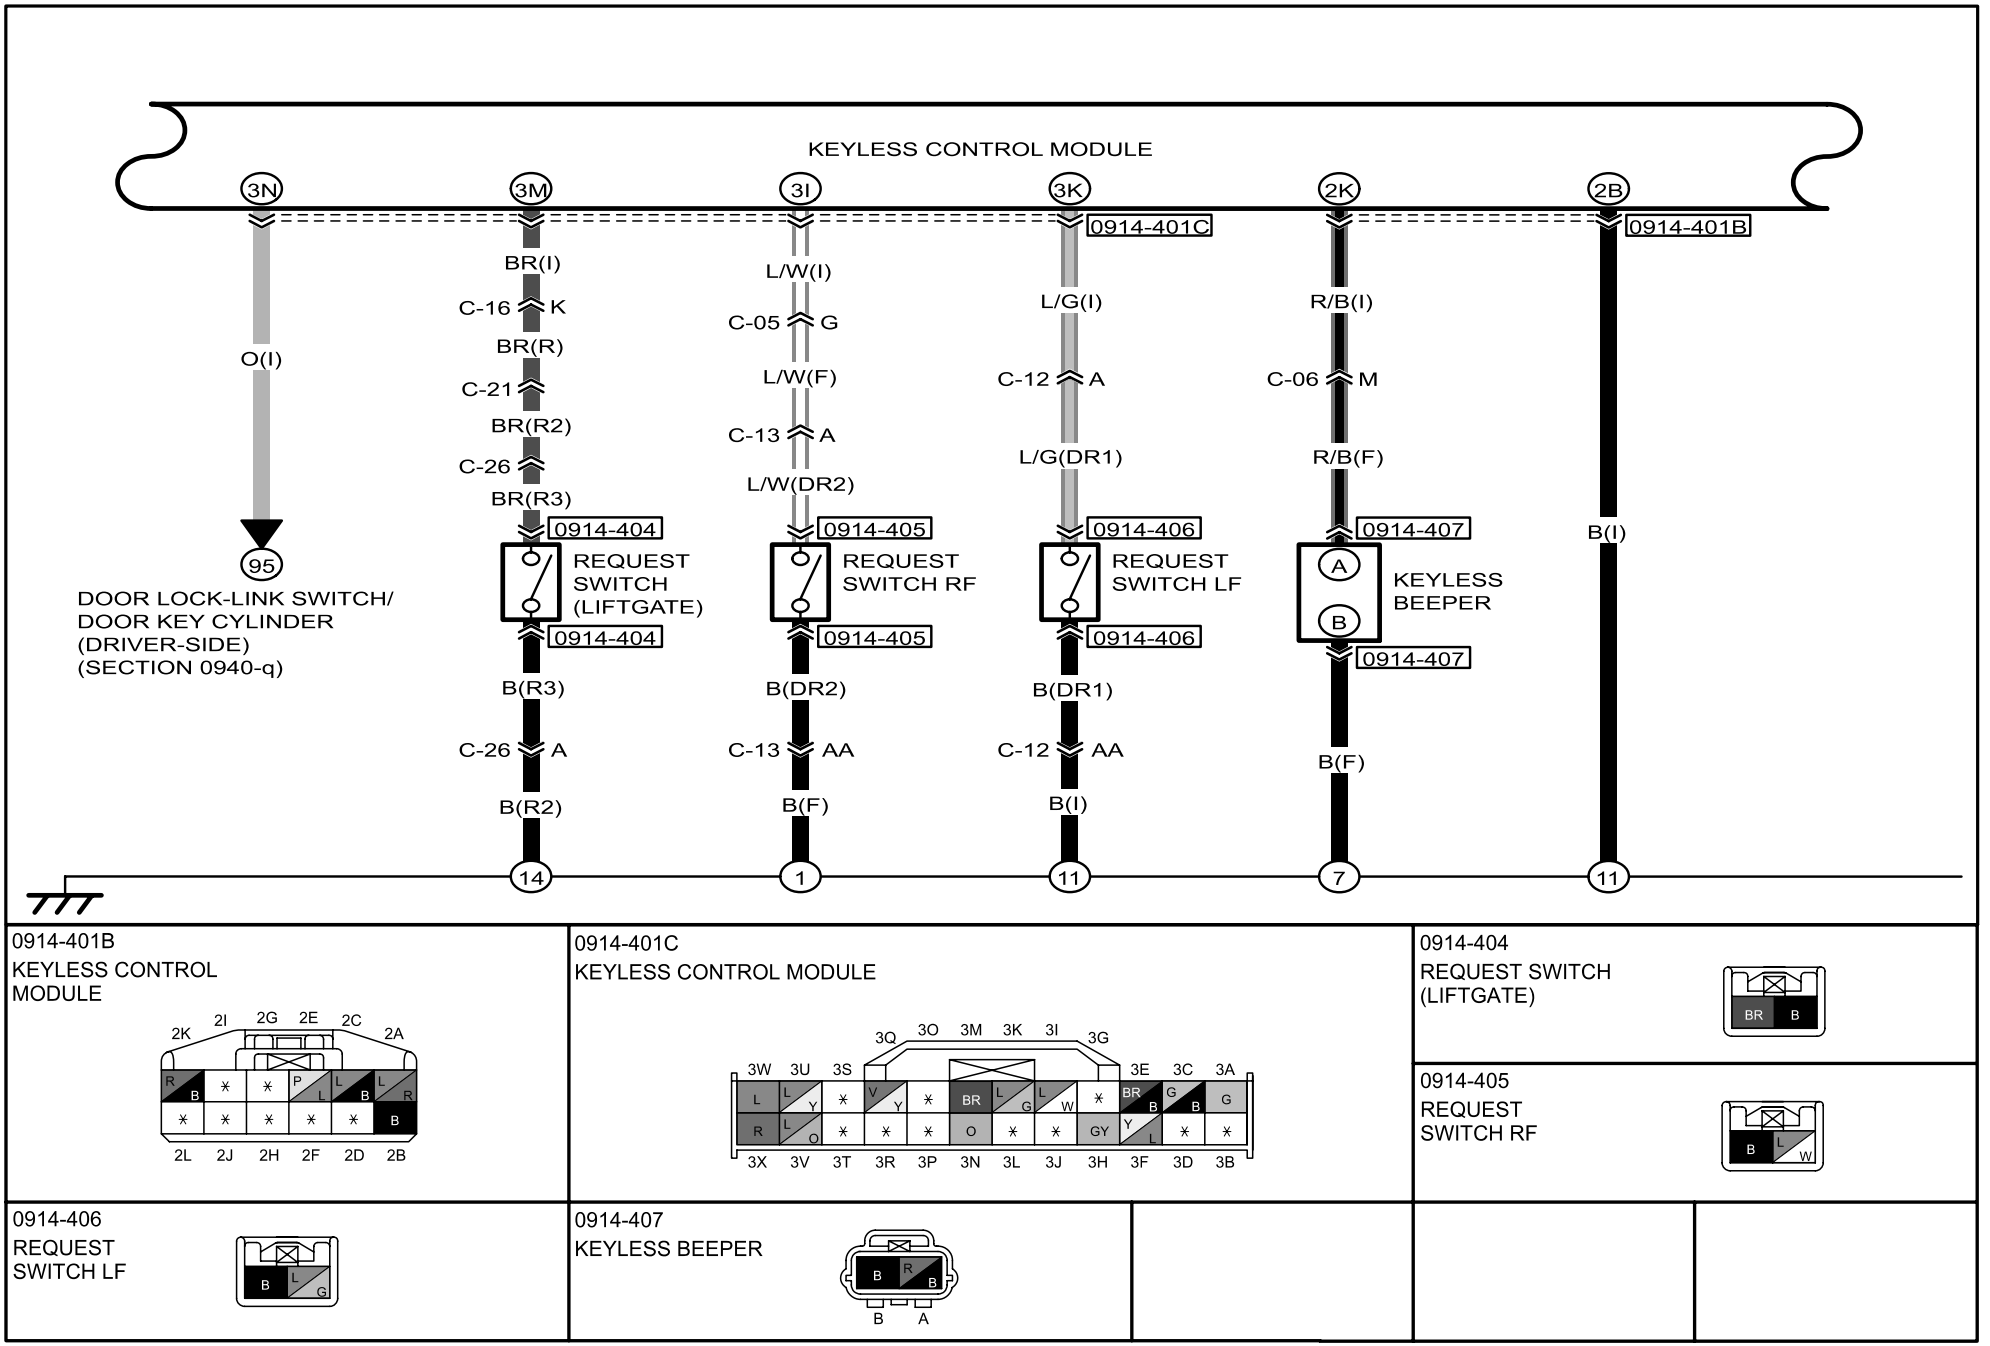

0914-401B
KEYLESS CONTROL MODULE

0914-401C
KEYLESS CONTROL MODULE


0914-404
REQUEST SWITCH
(LIFTGATE)


0914-405
REQUEST
SWITCH RF

0914-406
REQUEST
SWITCH LF


0914-407
KEYLESS BEEPER

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

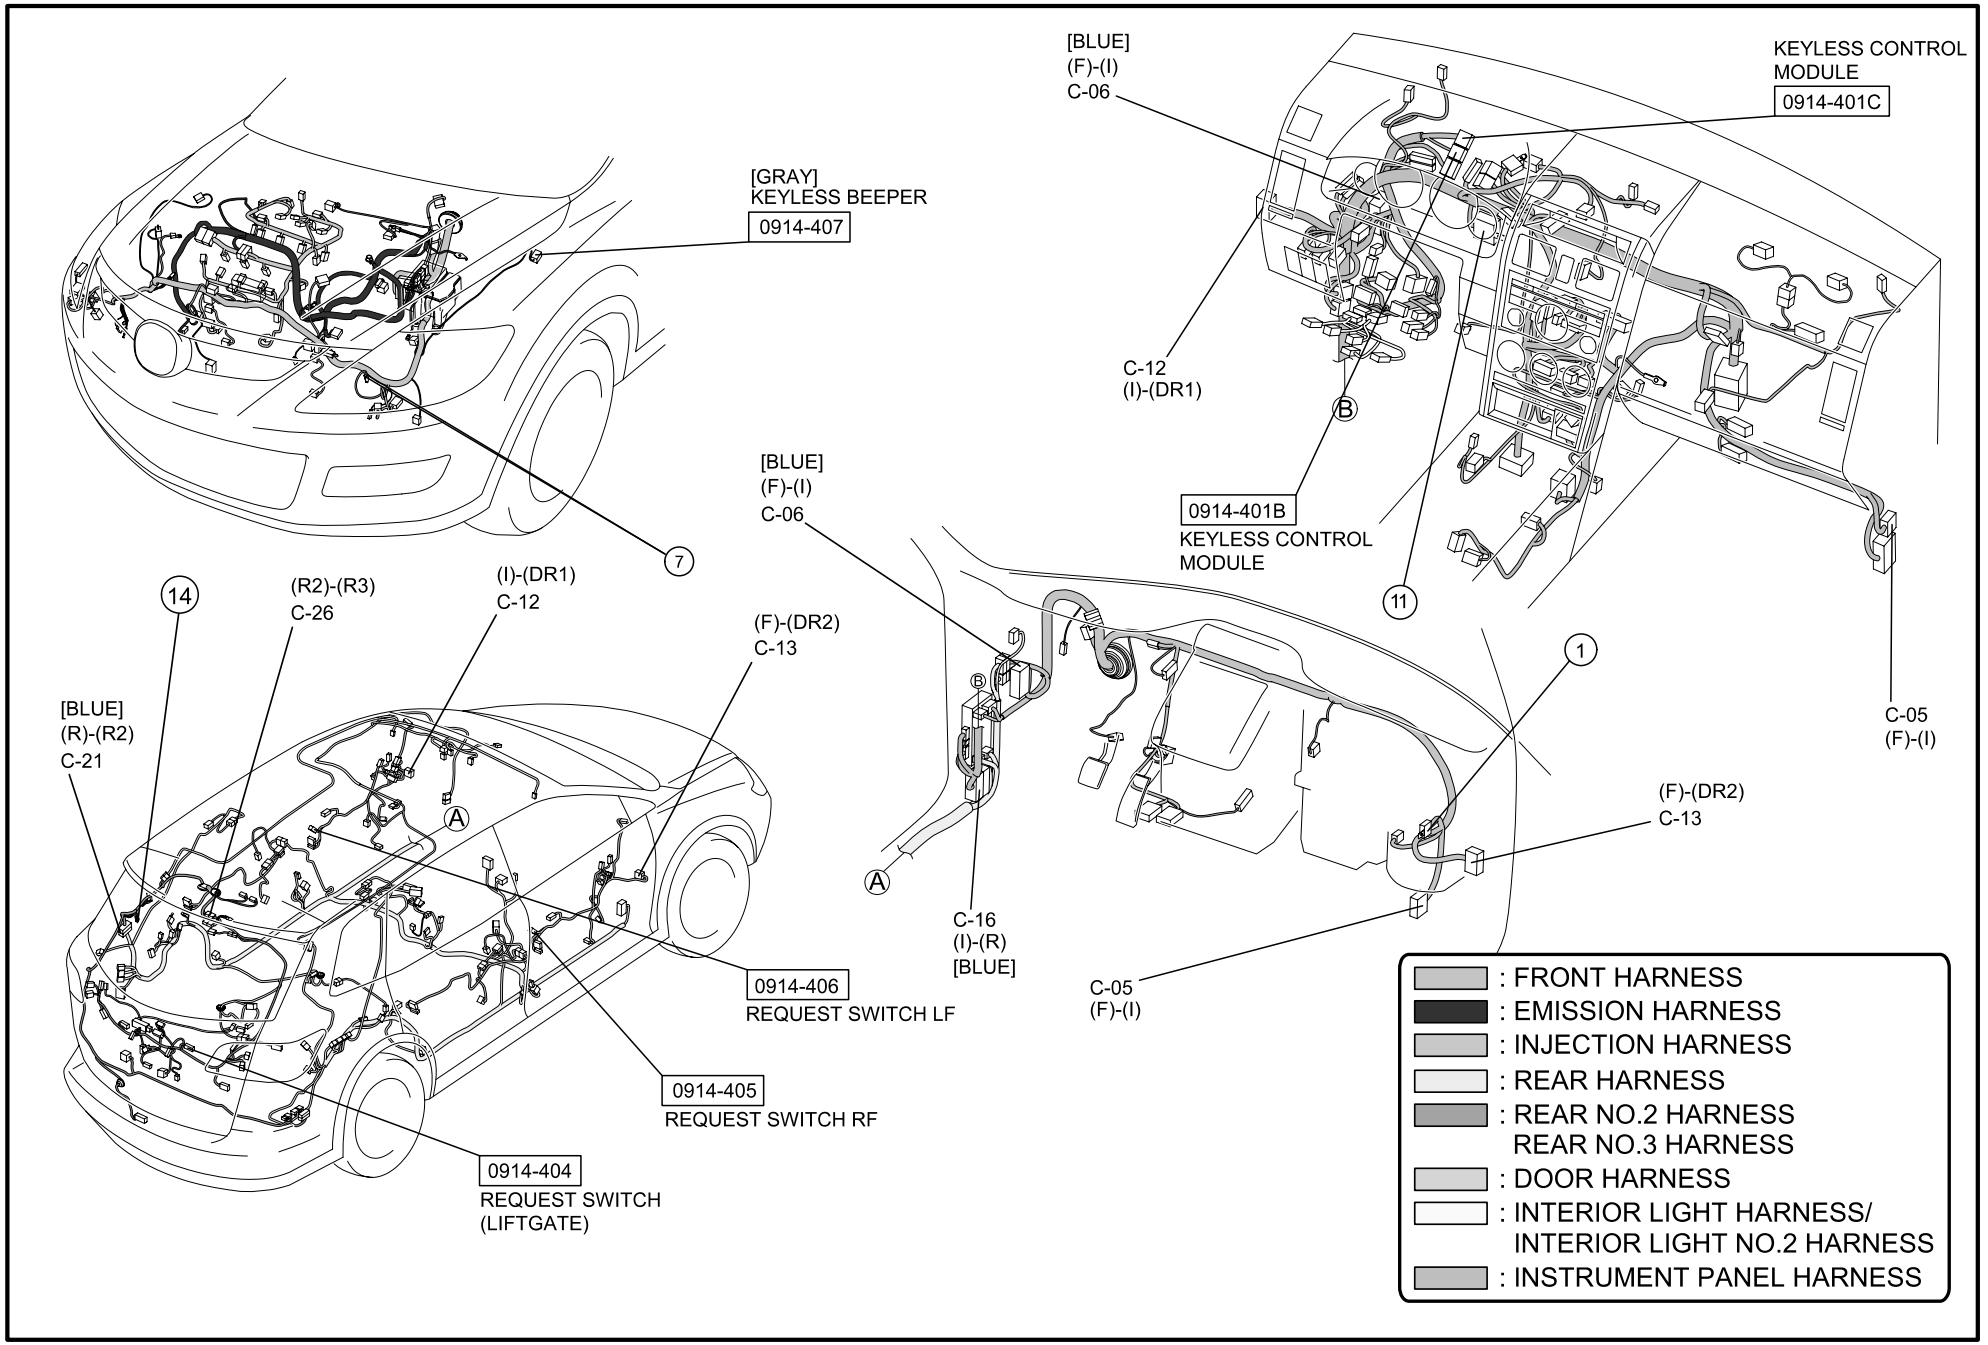

[BLUE]
(F)-(I)
C-06
KEYLESS CONTROL
MODULE
0914-401C
[GRAY]
KEYLESS BEEPER
0914-407
C-12
(I)-(DR1)
B
0914-401B
KEYLESS CONTROL
MODULE
[BLUE]
(F)-(I)
C-06
7
11
1
C-05
(F)-(I)
14
(R2)-(R3)
C-26
(I)-(DR1)
C-12
(F)-(DR2)
C-13
[BLUE]
(R)-(R2)
C-21
A
B
A
C-16
(I)-(R)
[BLUE]
(F)-(DR2)
C-13
C-05
(F)-(I)
0914-406
REQUEST SWITCH LF
0914-405
REQUEST SWITCH RF
0914-404
REQUEST SWITCH
(LIFTGATE)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

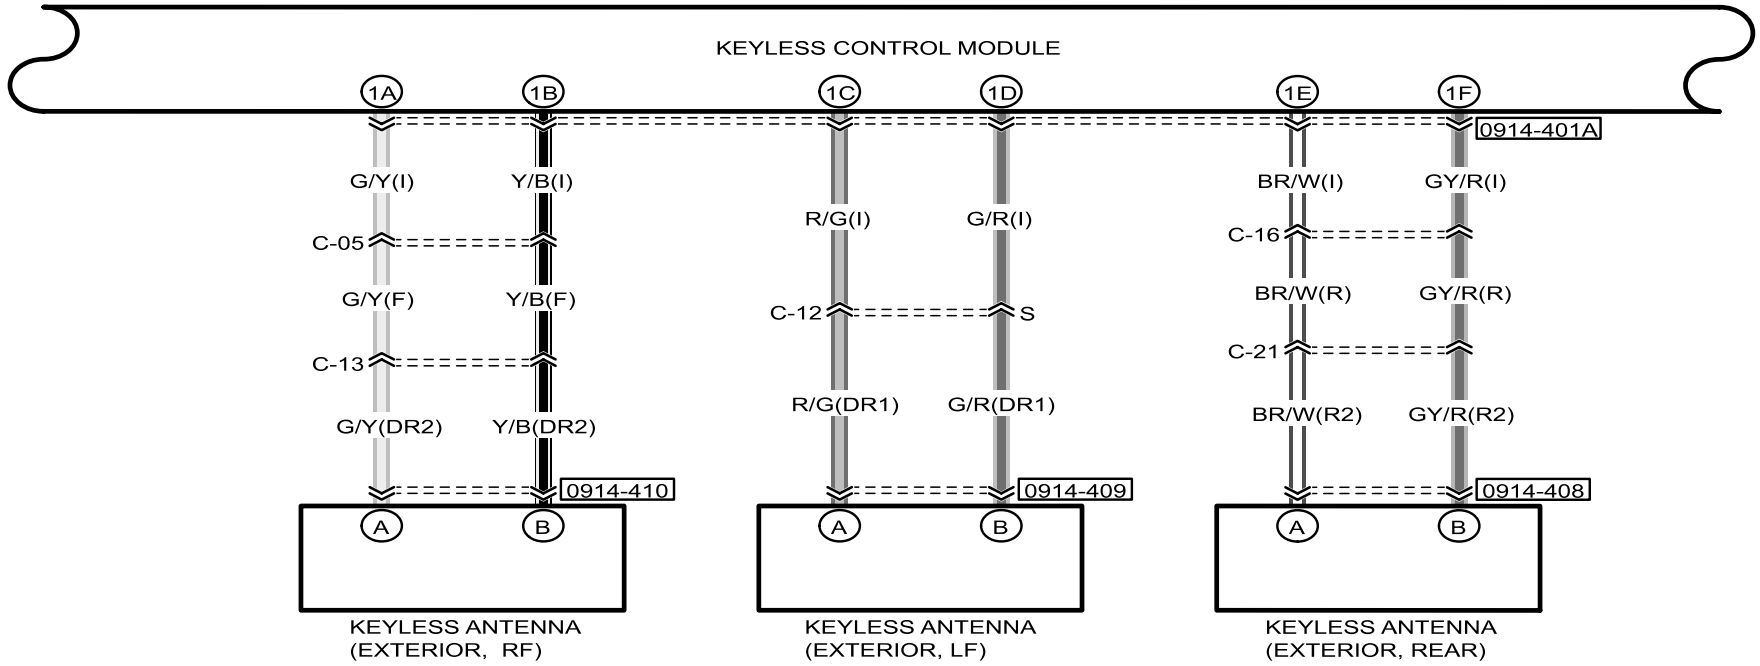


0914-401A
KEYLESS CONTROL MODULE

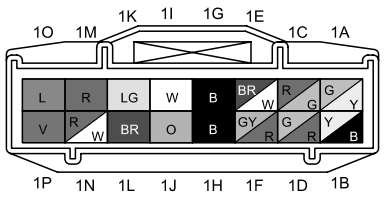


0914-408
KEYLESS ANTENNA (EXTERIOR, REAR)




0914-409
KEYLESS ANTENNA(EXTERIOR, LF)




0914-410
KEYLESS ANTENNA(EXTERIOR, RF)




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

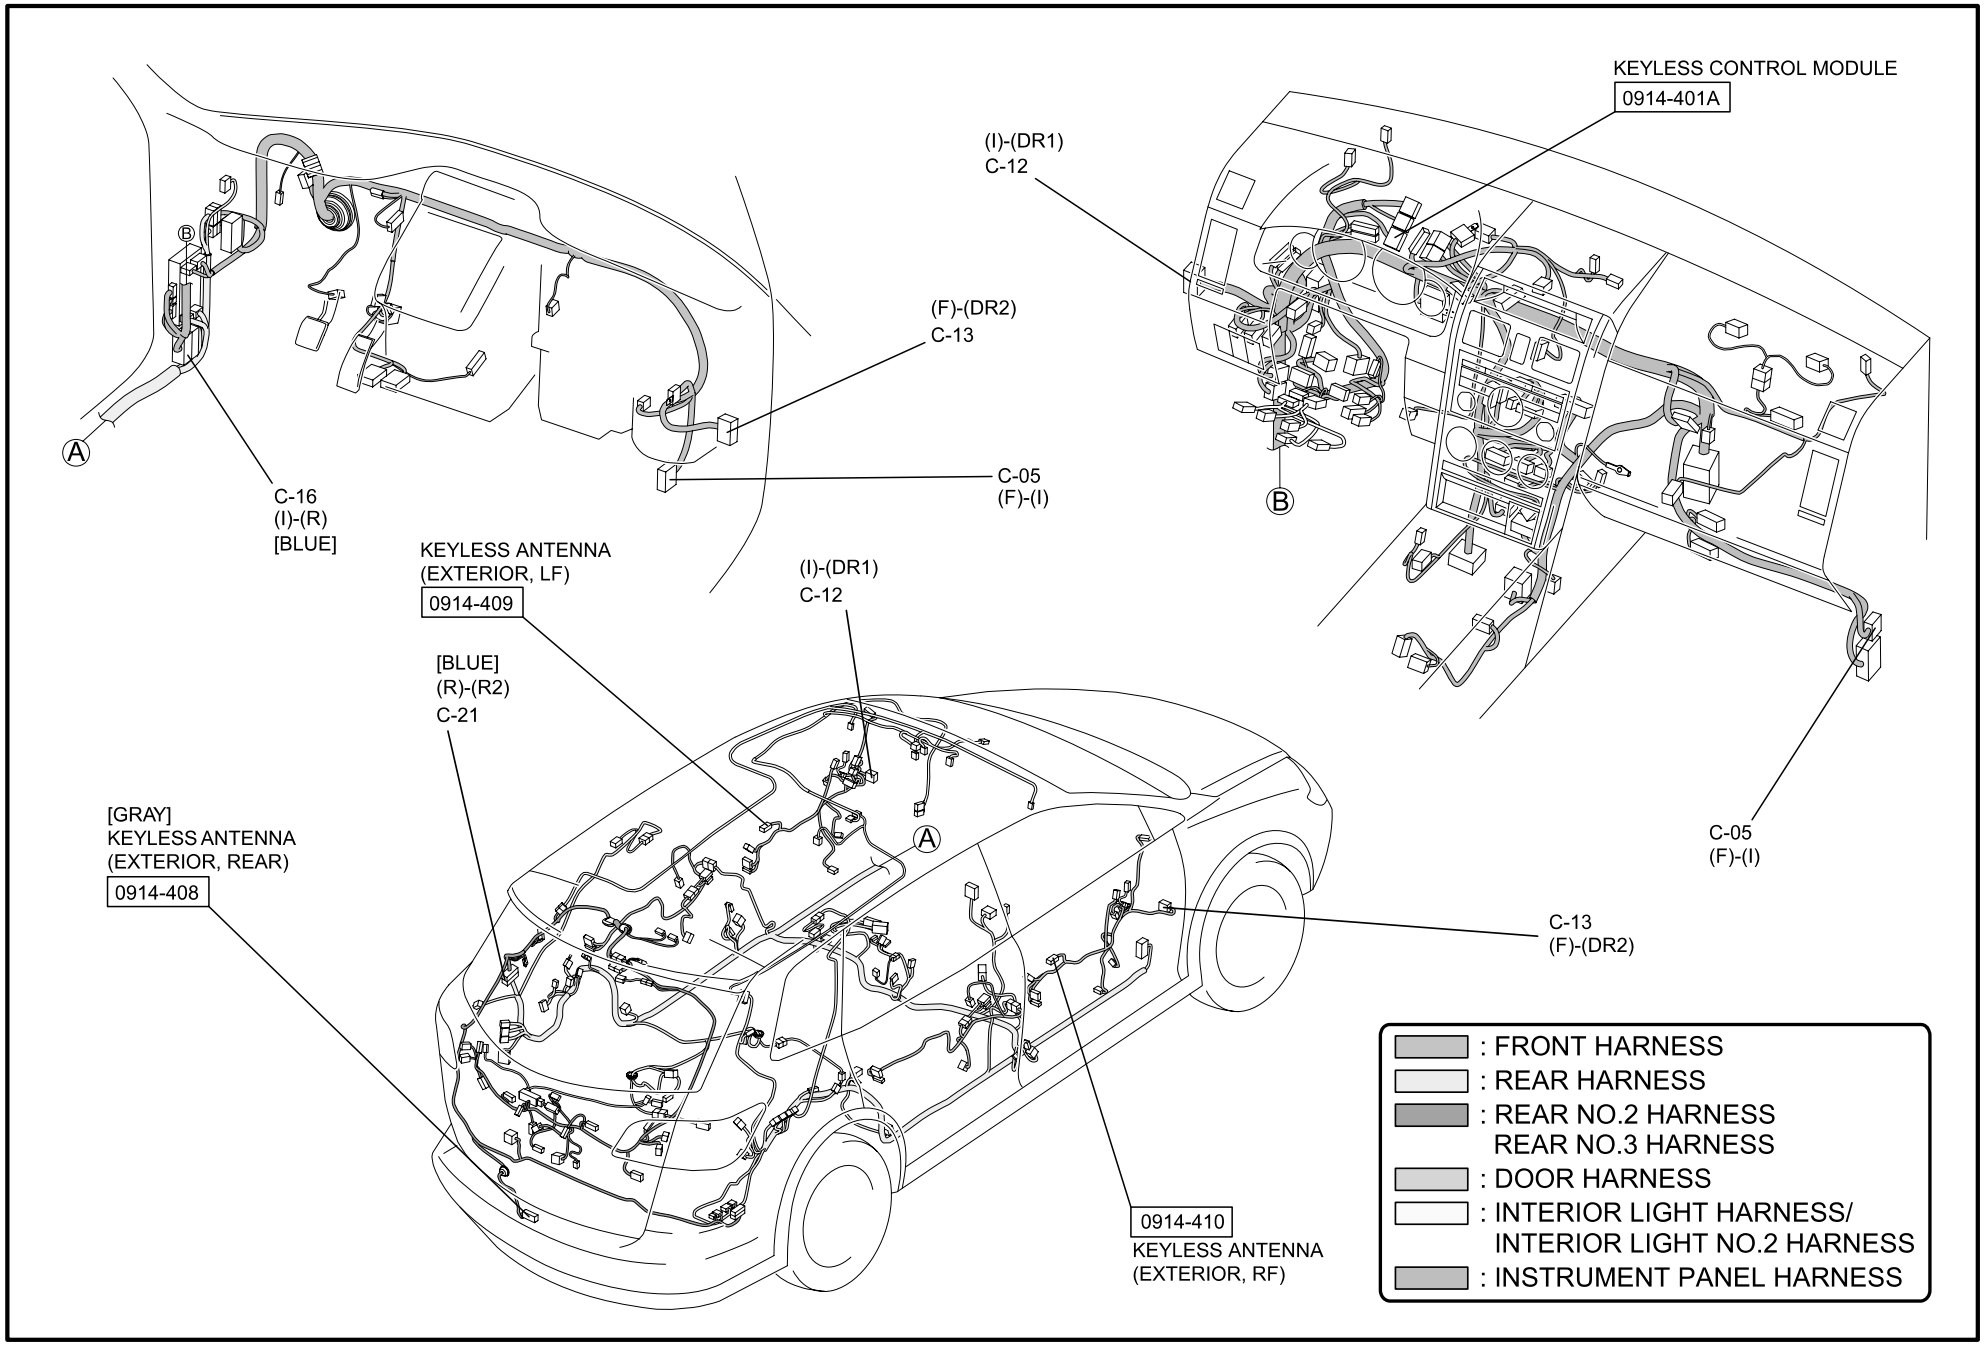
KEYLESS CONTROL MODULE
0914-401A
(I)-(DR1)
C-12
(F)-(DR2)
C-13
C-05
(F)-(I)
C-16
(I)-(R)
[BLUE]
KEYLESS ANTENNA
(EXTERIOR, LF)
0914-409
(I)-(DR1)
C-12
[BLUE]
(R)-(R2)
C-21
[GRAY]
KEYLESS ANTENNA
(EXTERIOR, REAR)
0914-408
C-13
(F)-(DR2)
C-05
(F)-(I)
0914-410
KEYLESS ANTENNA
(EXTERIOR, RF)
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

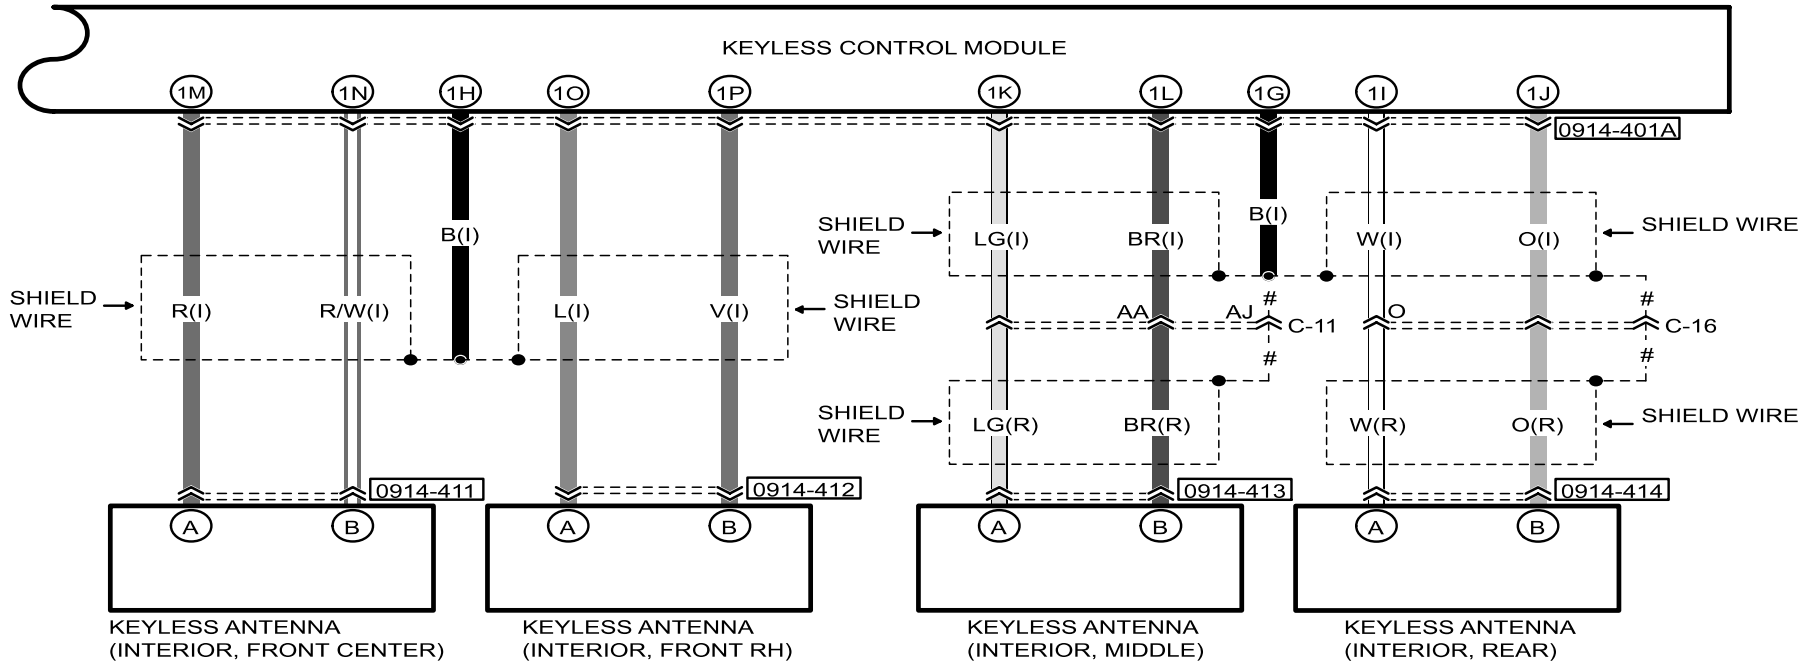


0914-401A
KEYLESS CONTROL MODULE

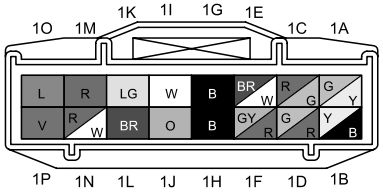


0914-411
KEYLESS ANTENNA
(INTERIOR, FRONT CENTER)




0914-412
KEYLESS ANTENNA
(INTERIOR, FRONT RH)




0914-413
KEYLESS ANTENNA
(INTERIOR, MIDDLE)




0914-414
KEYLESS ANTENNA
(INTERIOR, REAR)




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

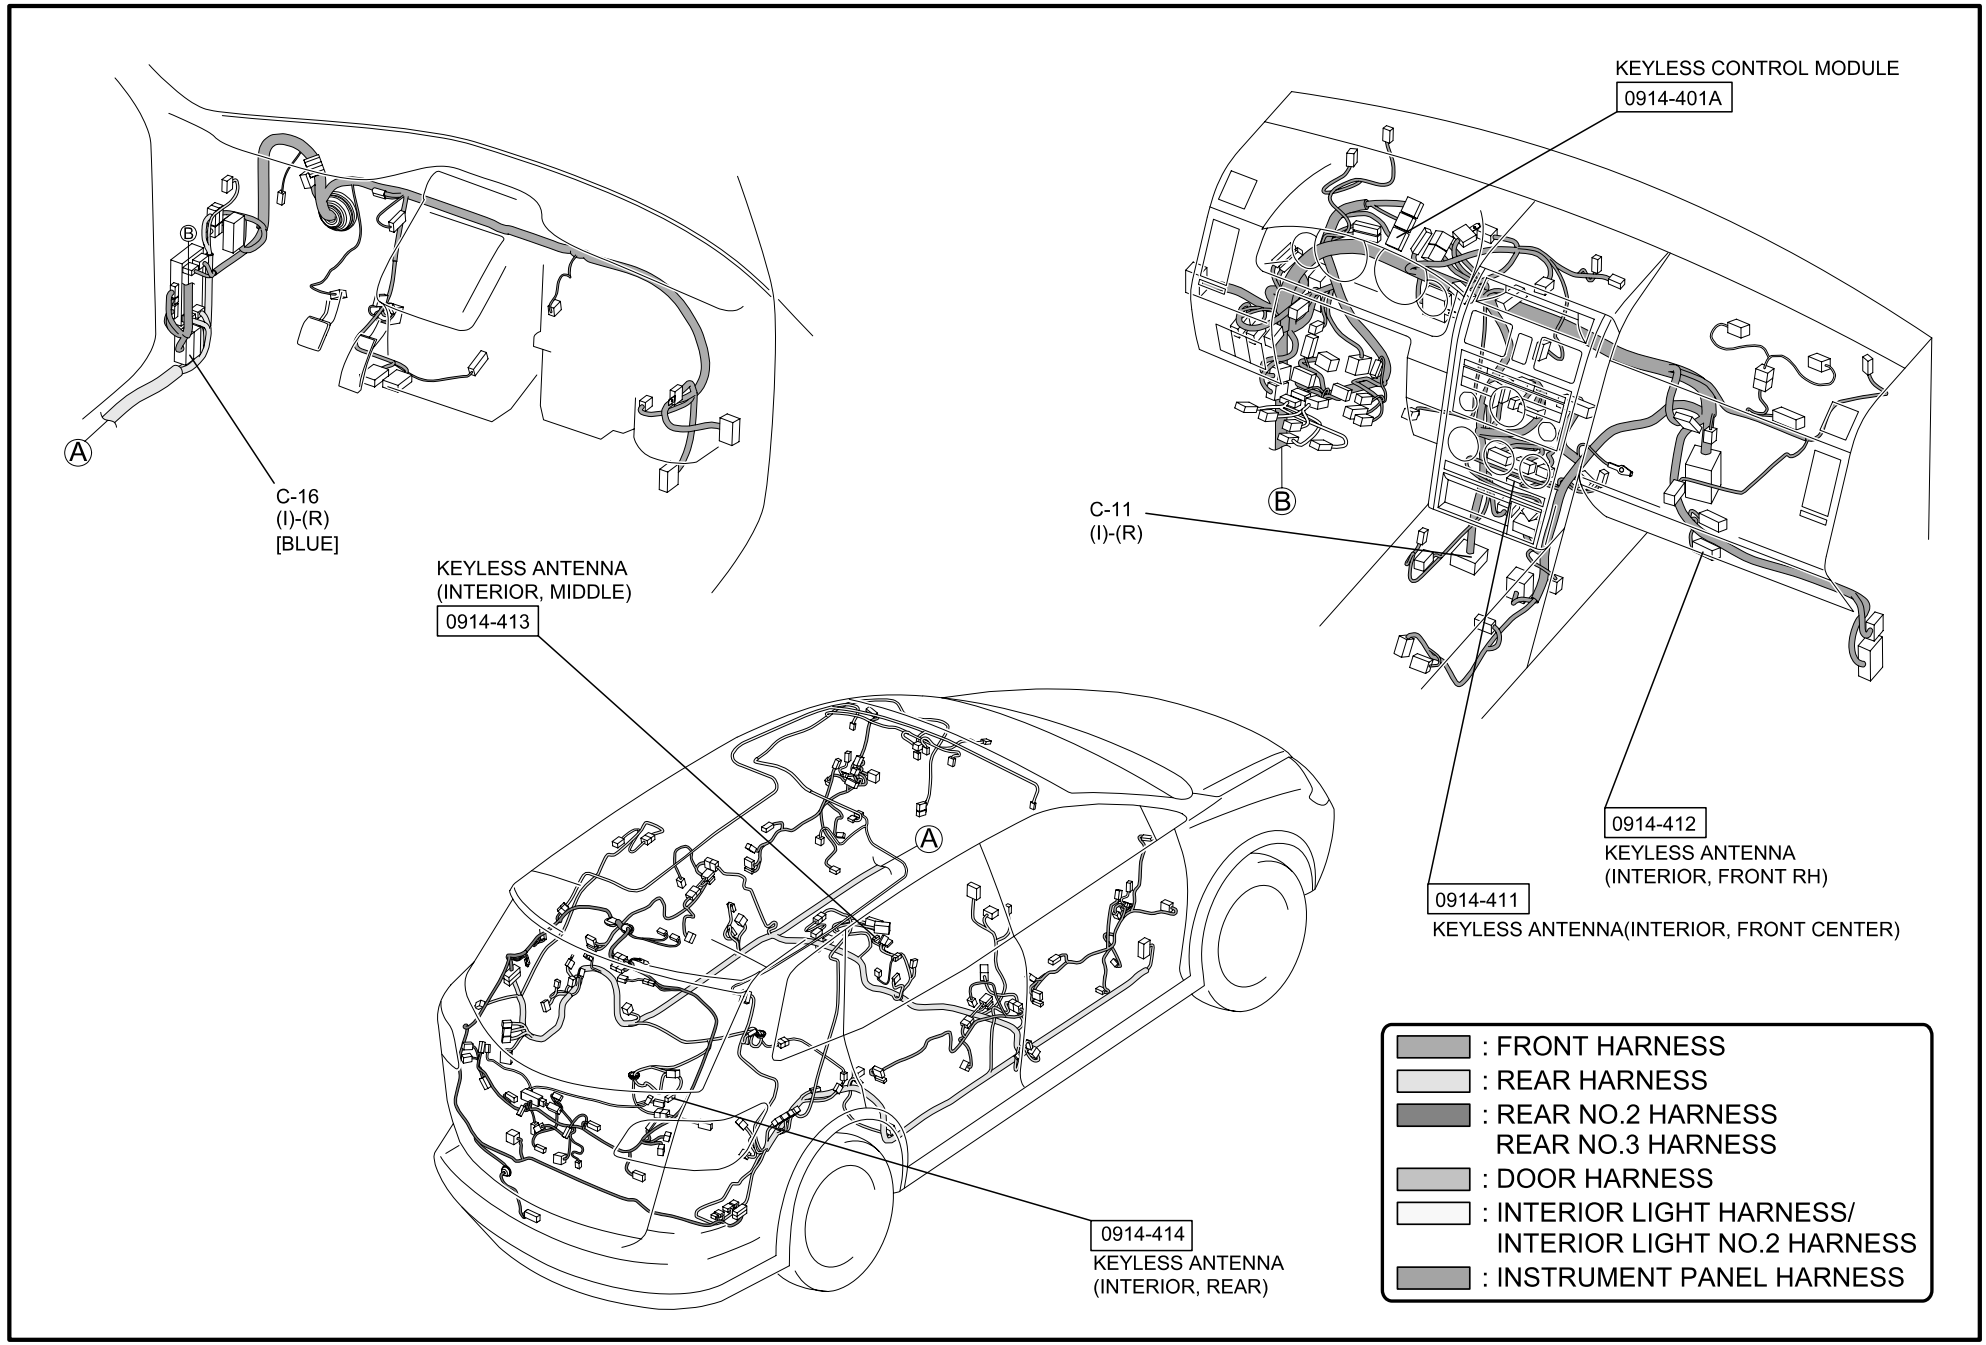
KEYLESS CONTROL MODULE
0914-401A
C-16
(I)-(R)
[BLUE]
C-11
(I)-(R)
KEYLESS ANTENNA
(INTERIOR, MIDDLE)
0914-413
0914-412
KEYLESS ANTENNA
(INTERIOR, FRONT RH)
0914-411
KEYLESS ANTENNA(INTERIOR, FRONT CENTER)
0914-414
KEYLESS ANTENNA
(INTERIOR, REAR)
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

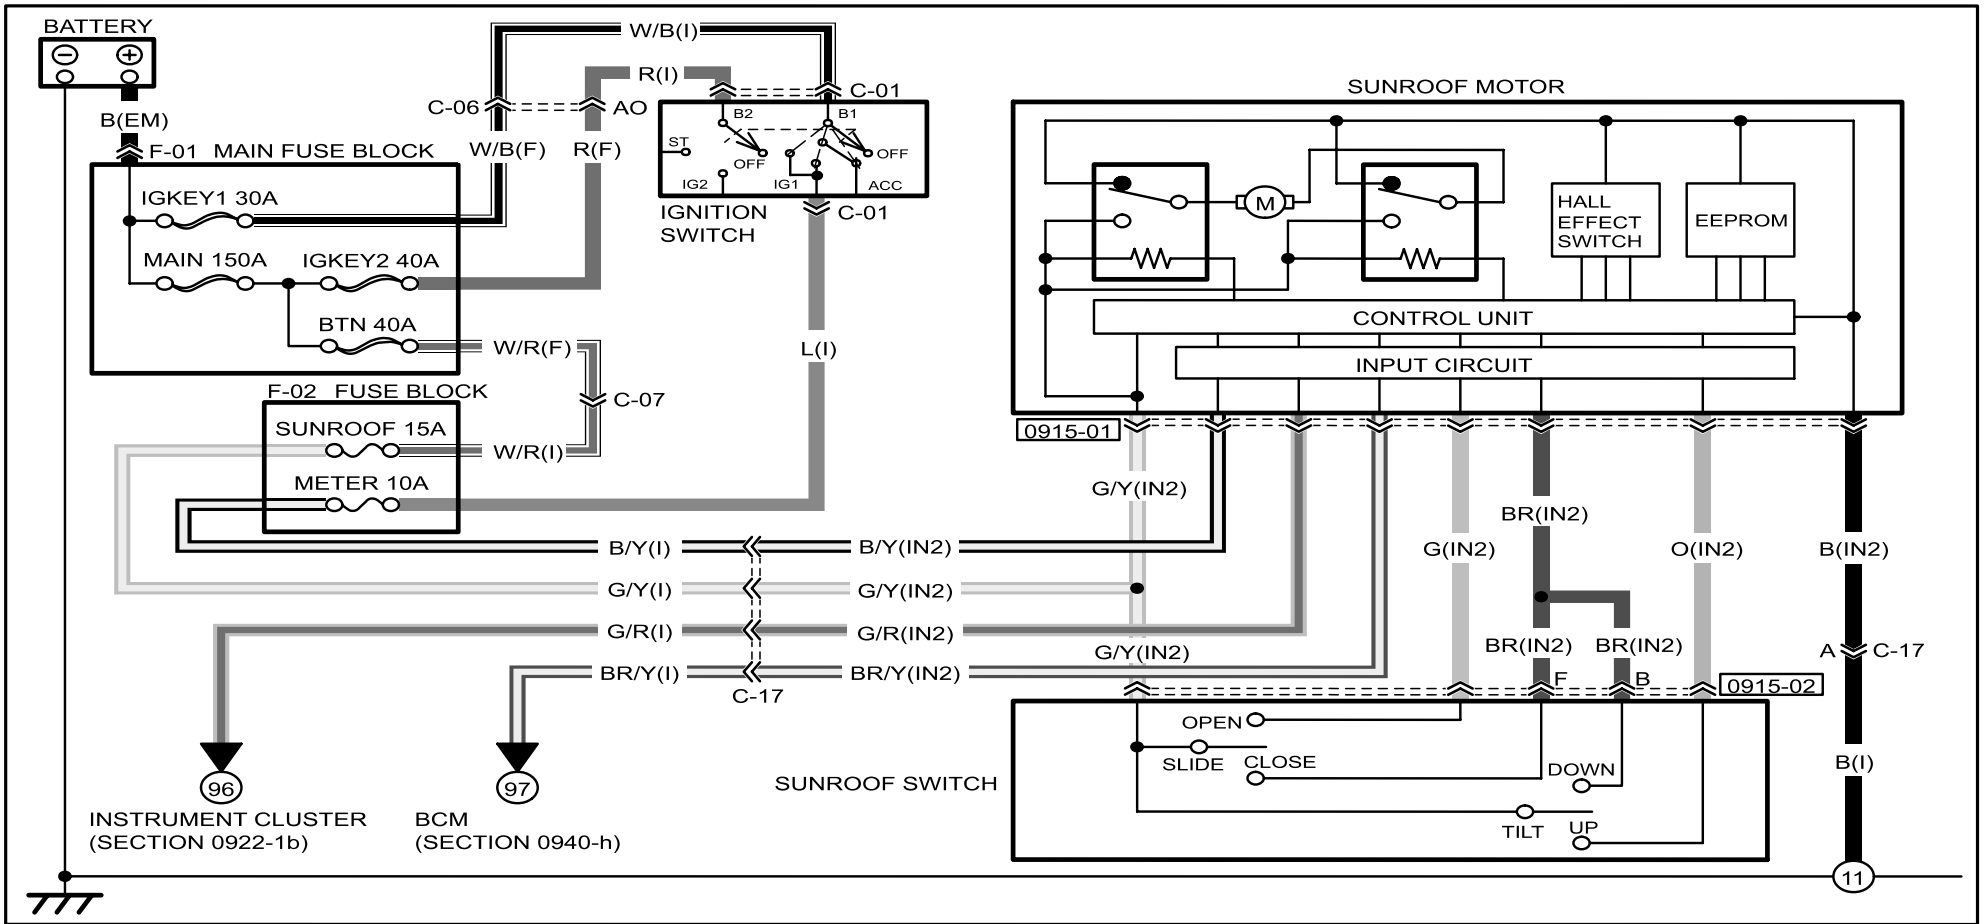

0915-01 SUNROOF MOTOR	0915-02 SUNROOF SWITCH			


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

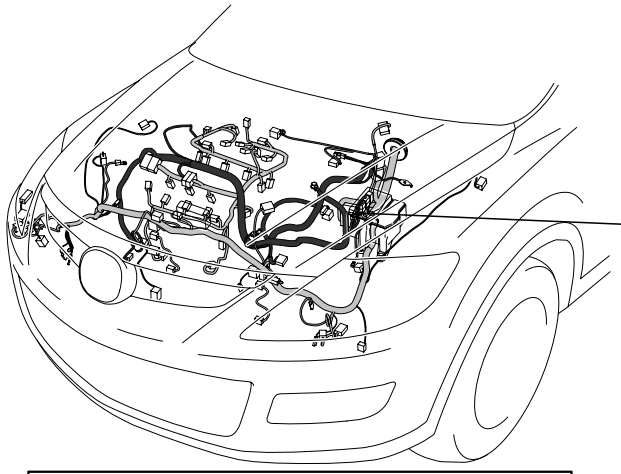

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

SUNROOF MOTOR
Contains a reversible motor which opens/closes or tilts up/tilts down sunroof according to direction of current flow.

SUNROOF
MOTOR
0915-01

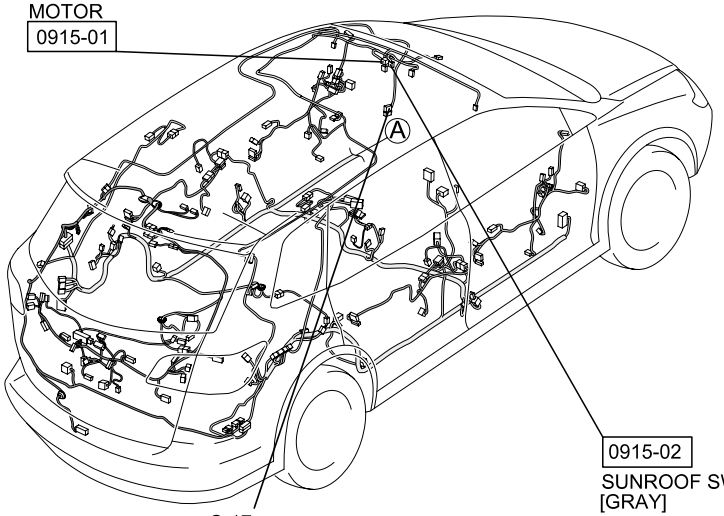


C-17
(I)-(IN2)

0915-02
SUNROOF SWITCH
[GRAY]

SUNROOF SWITCH
Controls sunroof position.

[BLUE]
(F)-(I)
C-06

(I)-(IN2)
C-17

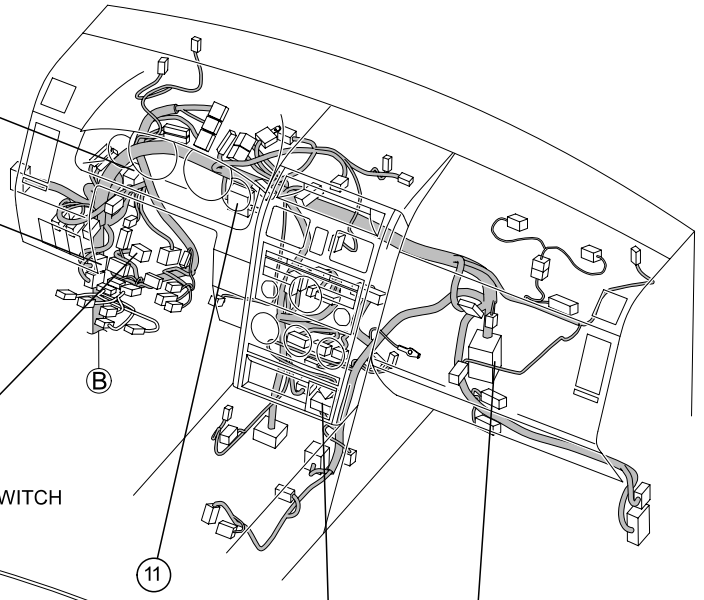


C-01
IGNITION SWITCH

C-07
(F)-(I)


F-02
FUSE BLOCK
(REFER TO 00F SECTION)

[BLUE]
(F)-(I)
C-06

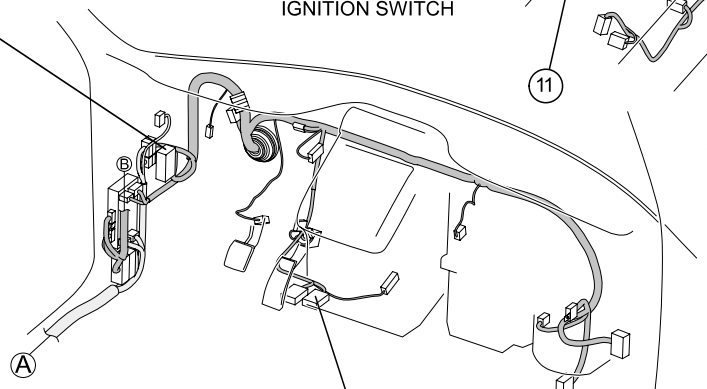



C-07
(F)-(I)

: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

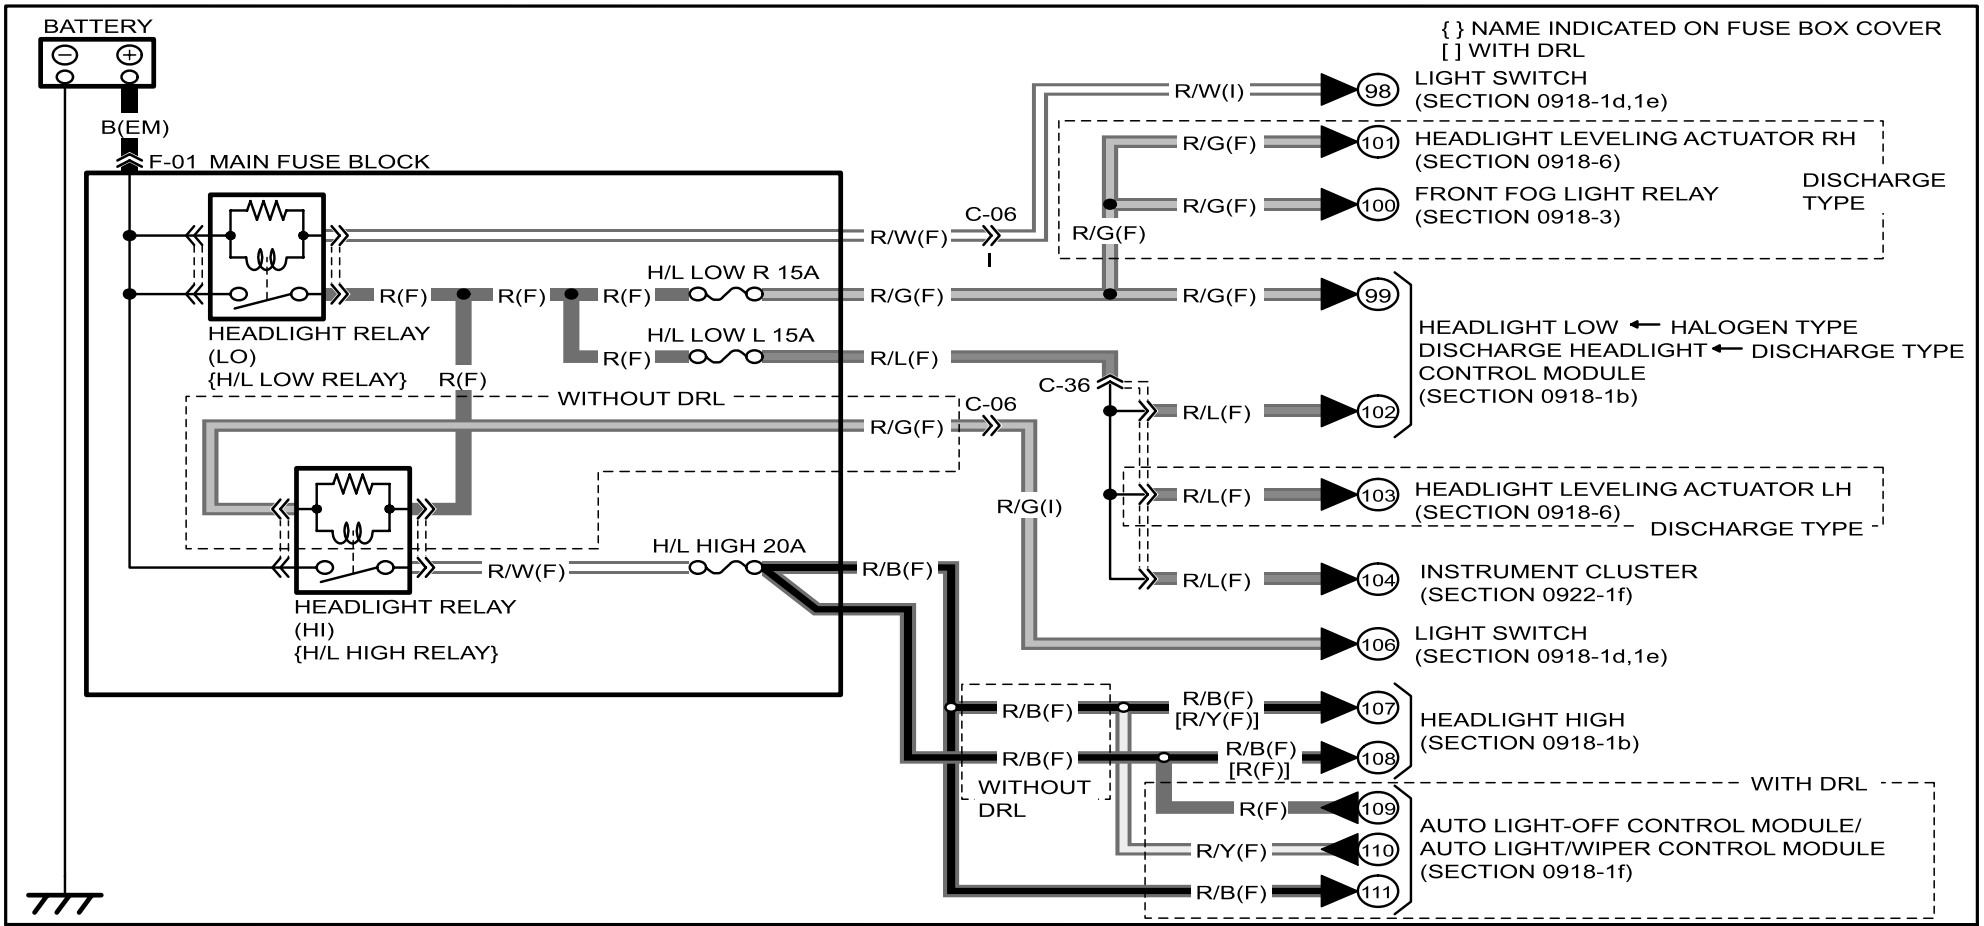


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

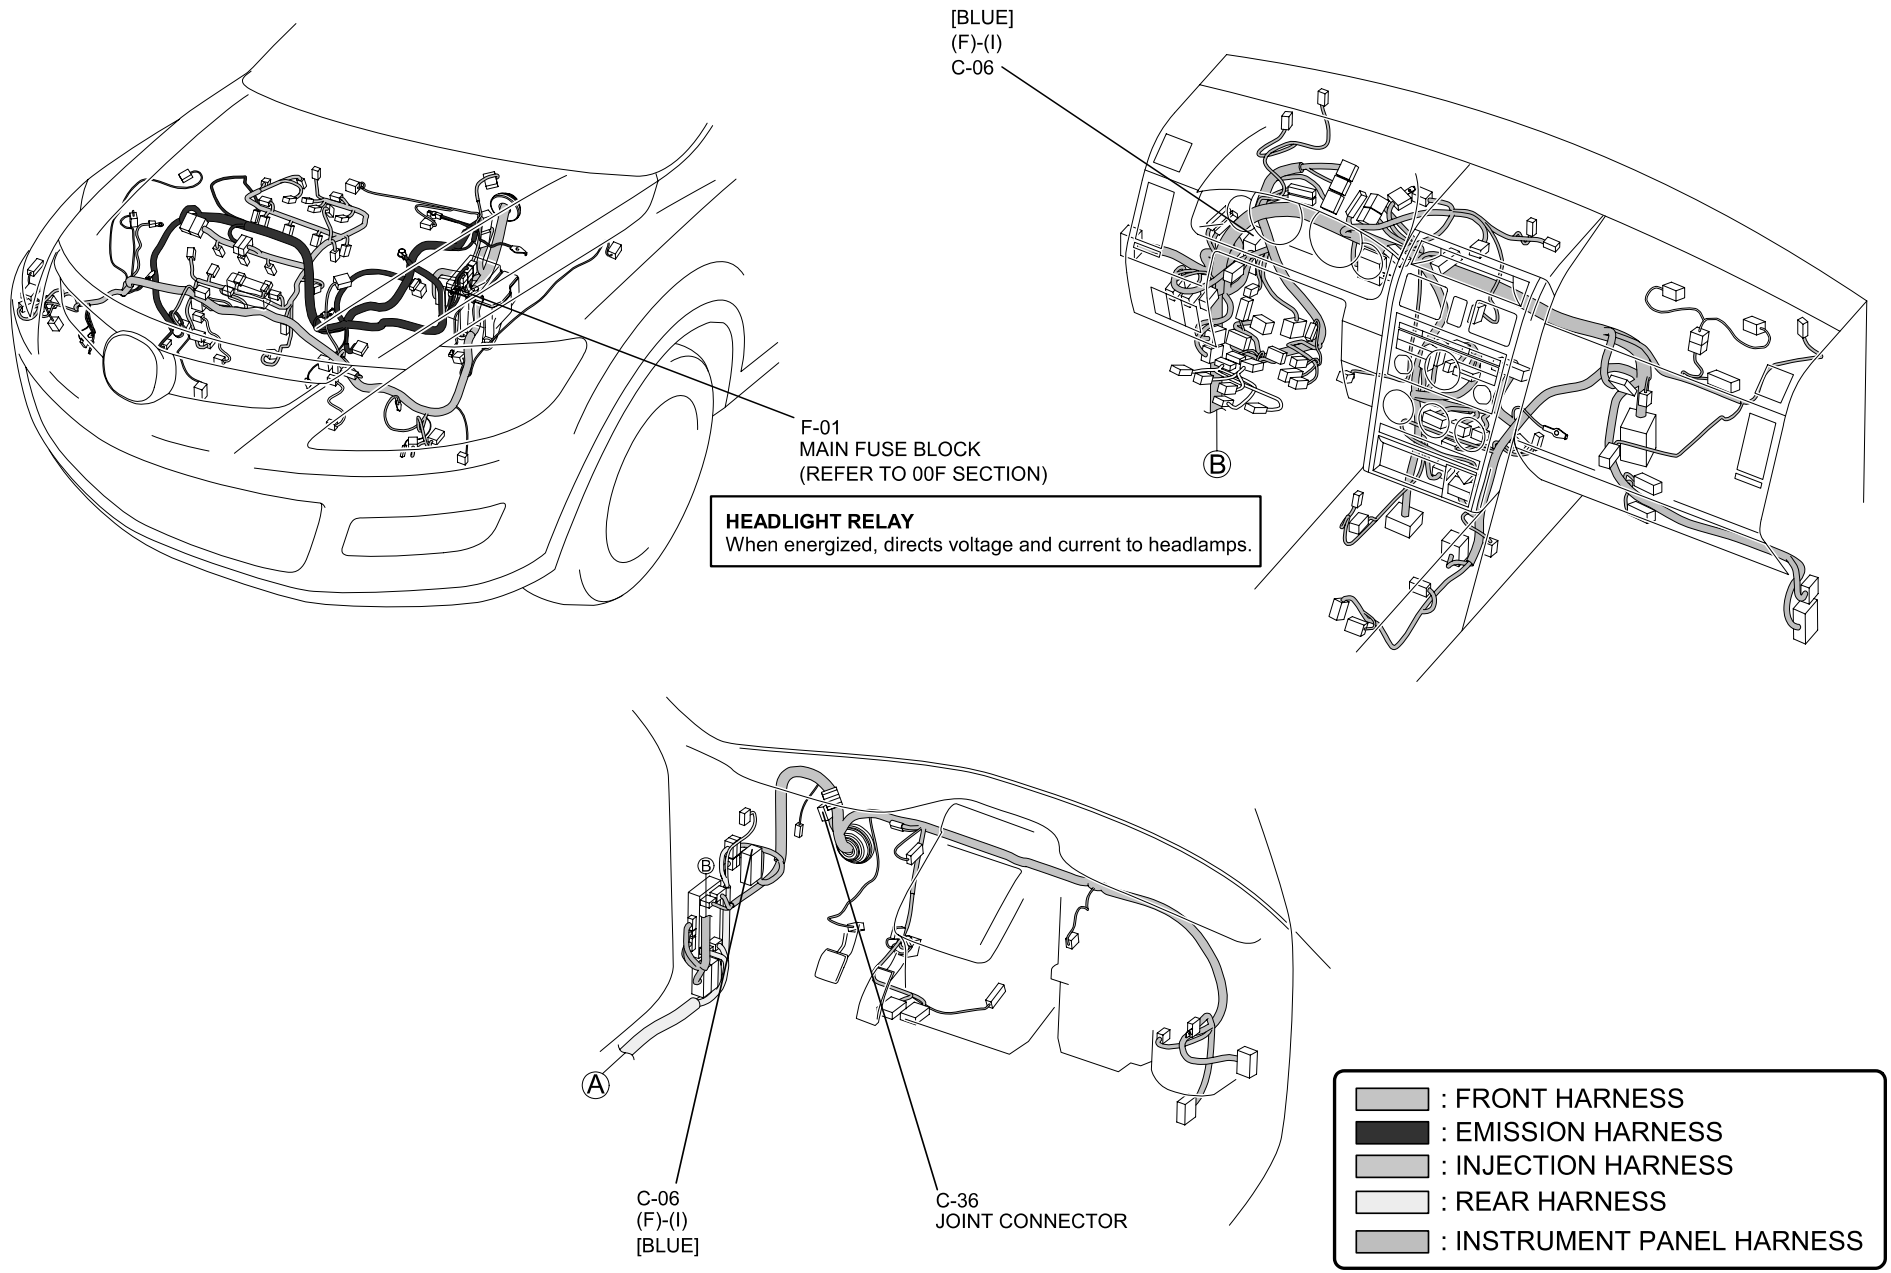

[BLUE]
(F)-(I)
C-06
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
HEADLIGHT RELAY
When energized, directs voltage and current to headlamps.
A
B
C-06
(F)-(I)
[BLUE]
C-36
JOINT CONNECTOR
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

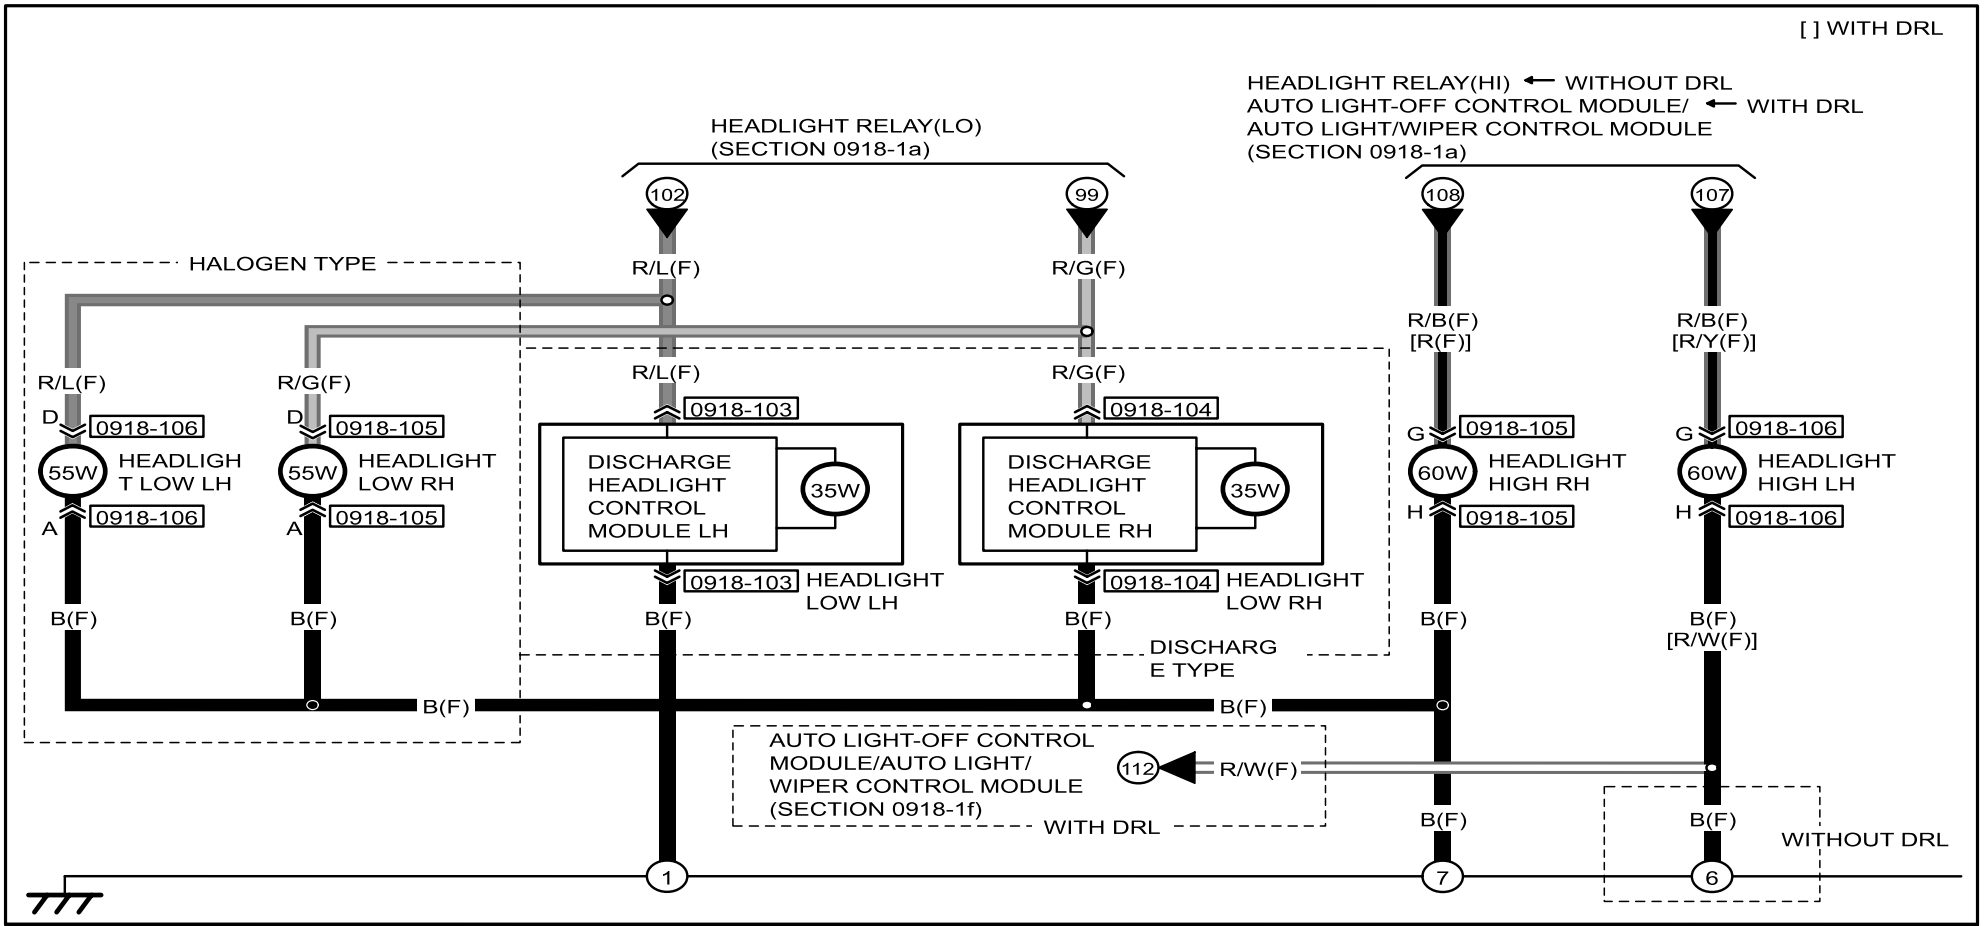


0918-103
HEADLIGHT LOW LH




0918-104
HEADLIGHT LOW RH




0918-105
HEADLIGHT HIGH RH/HEADLIGHT LOW RH/
FRONT SIDE MARKER LIGHT RH/
PARKING LIGHT RH/HEADLIGHT LEVELING
ACTUATOR RH/FRONT TURN LIGHT RH

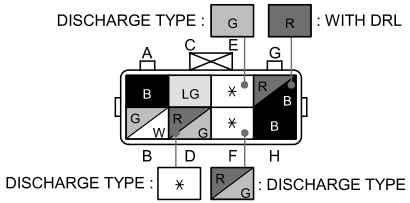


0918-106
HEADLIGHT HIGH LH/ HEADLIGHT LOW LH/
FRONT SIDE MARKER LIGHT LH/
PARKING LIGHT LH/HEADLIGHT LEVELING
ACTUATOR LH/FRONT TURN LIGHT LH

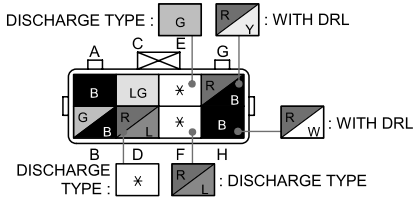



Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

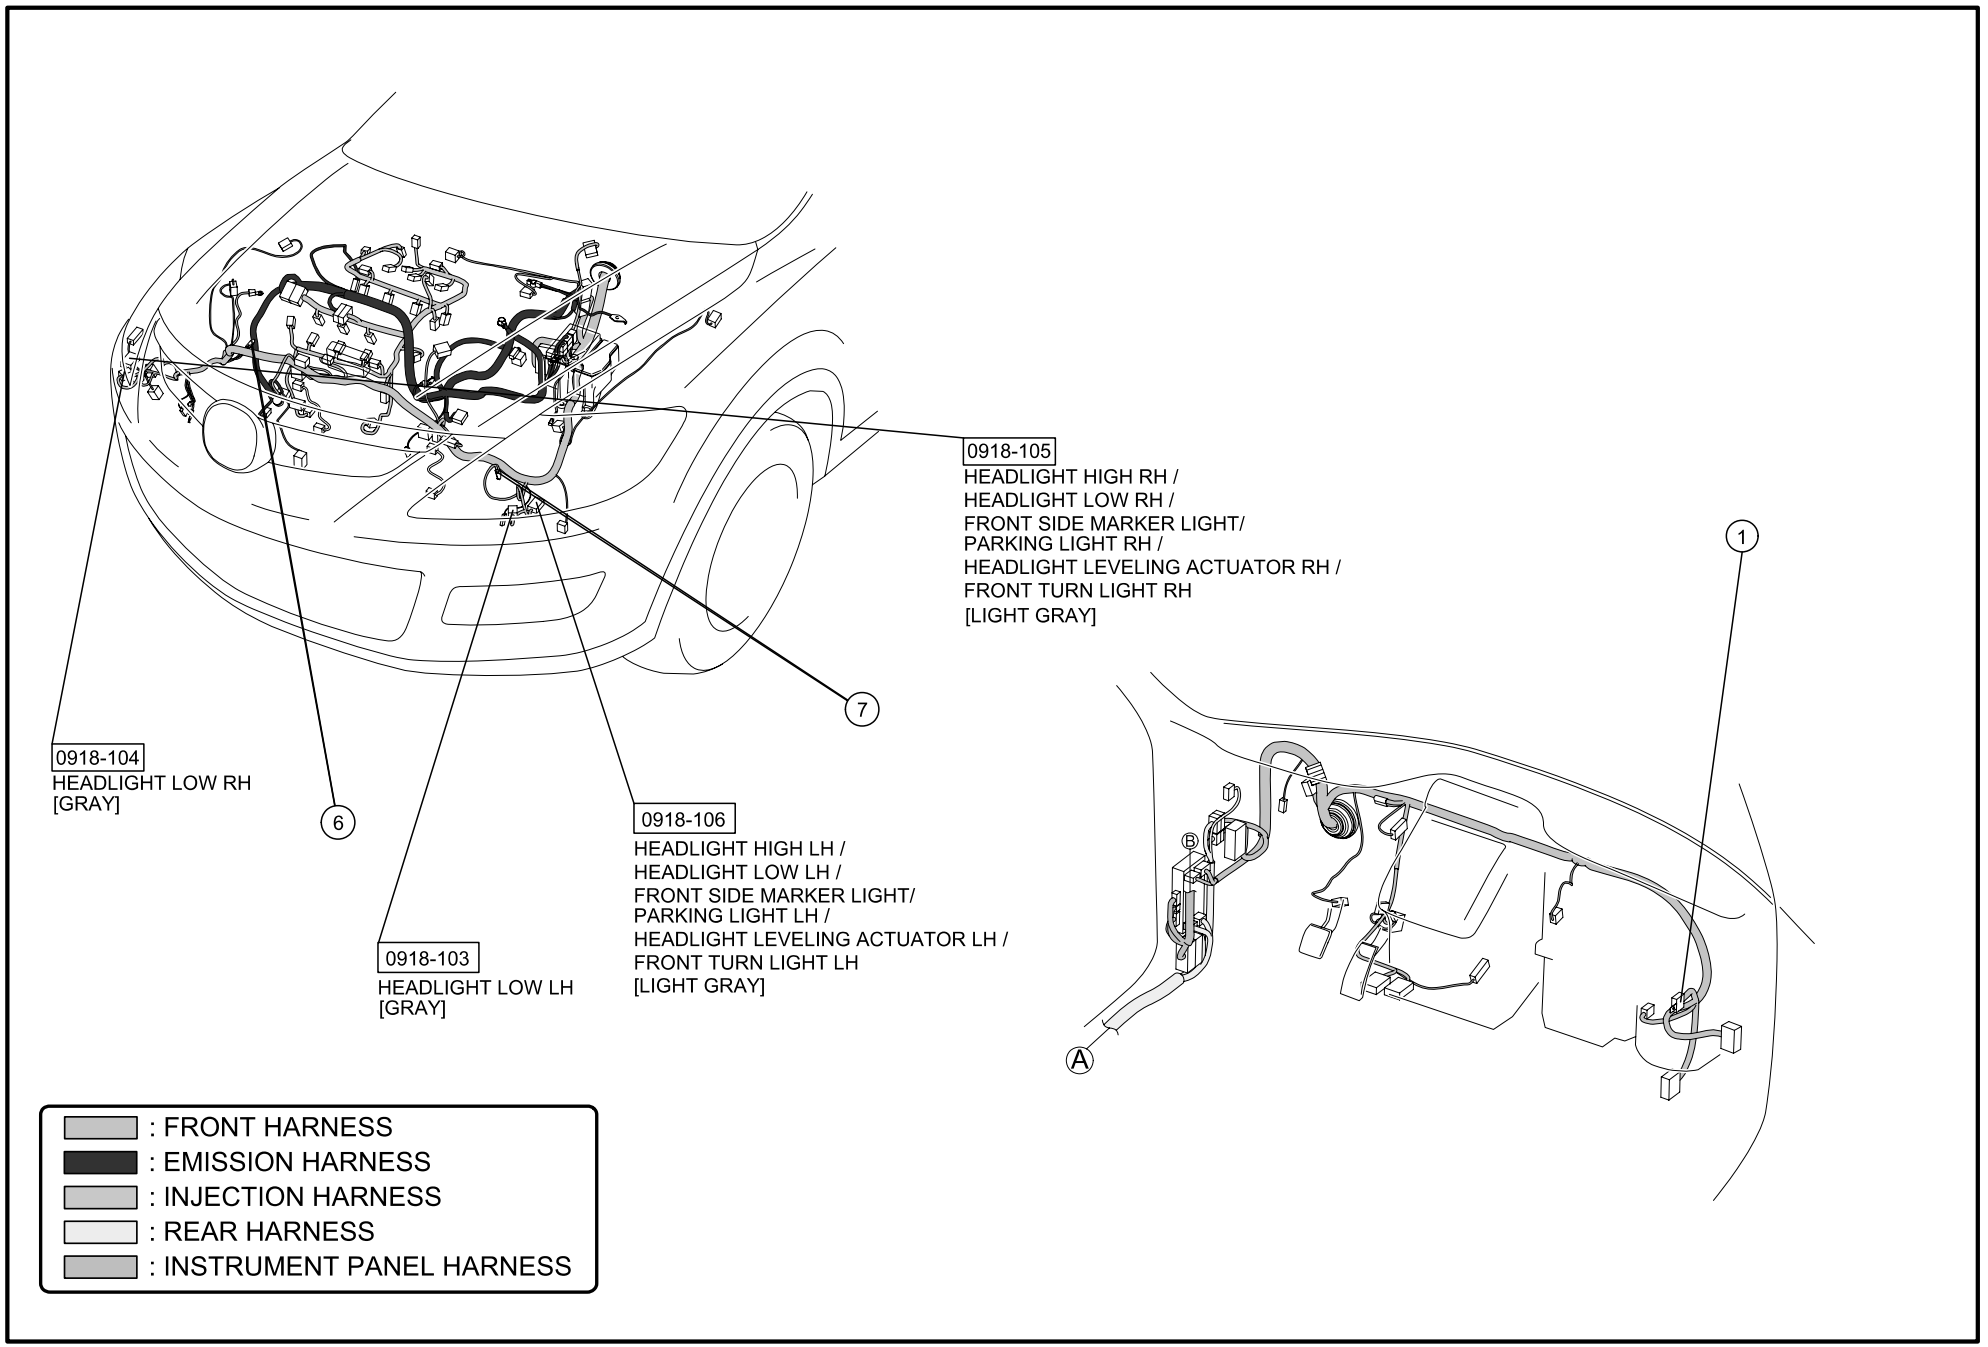
0918-105
HEADLIGHT HIGH RH /
HEADLIGHT LOW RH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT RH /
HEADLIGHT LEVELING ACTUATOR RH /
FRONT TURN LIGHT RH
[LIGHT GRAY]
0918-104
HEADLIGHT LOW RH
[GRAY]
0918-103
HEADLIGHT LOW LH
[GRAY]
0918-106
HEADLIGHT HIGH LH /
HEADLIGHT LOW LH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT LH /
HEADLIGHT LEVELING ACTUATOR LH /
FRONT TURN LIGHT LH
[LIGHT GRAY]
1
6
7
A
B
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

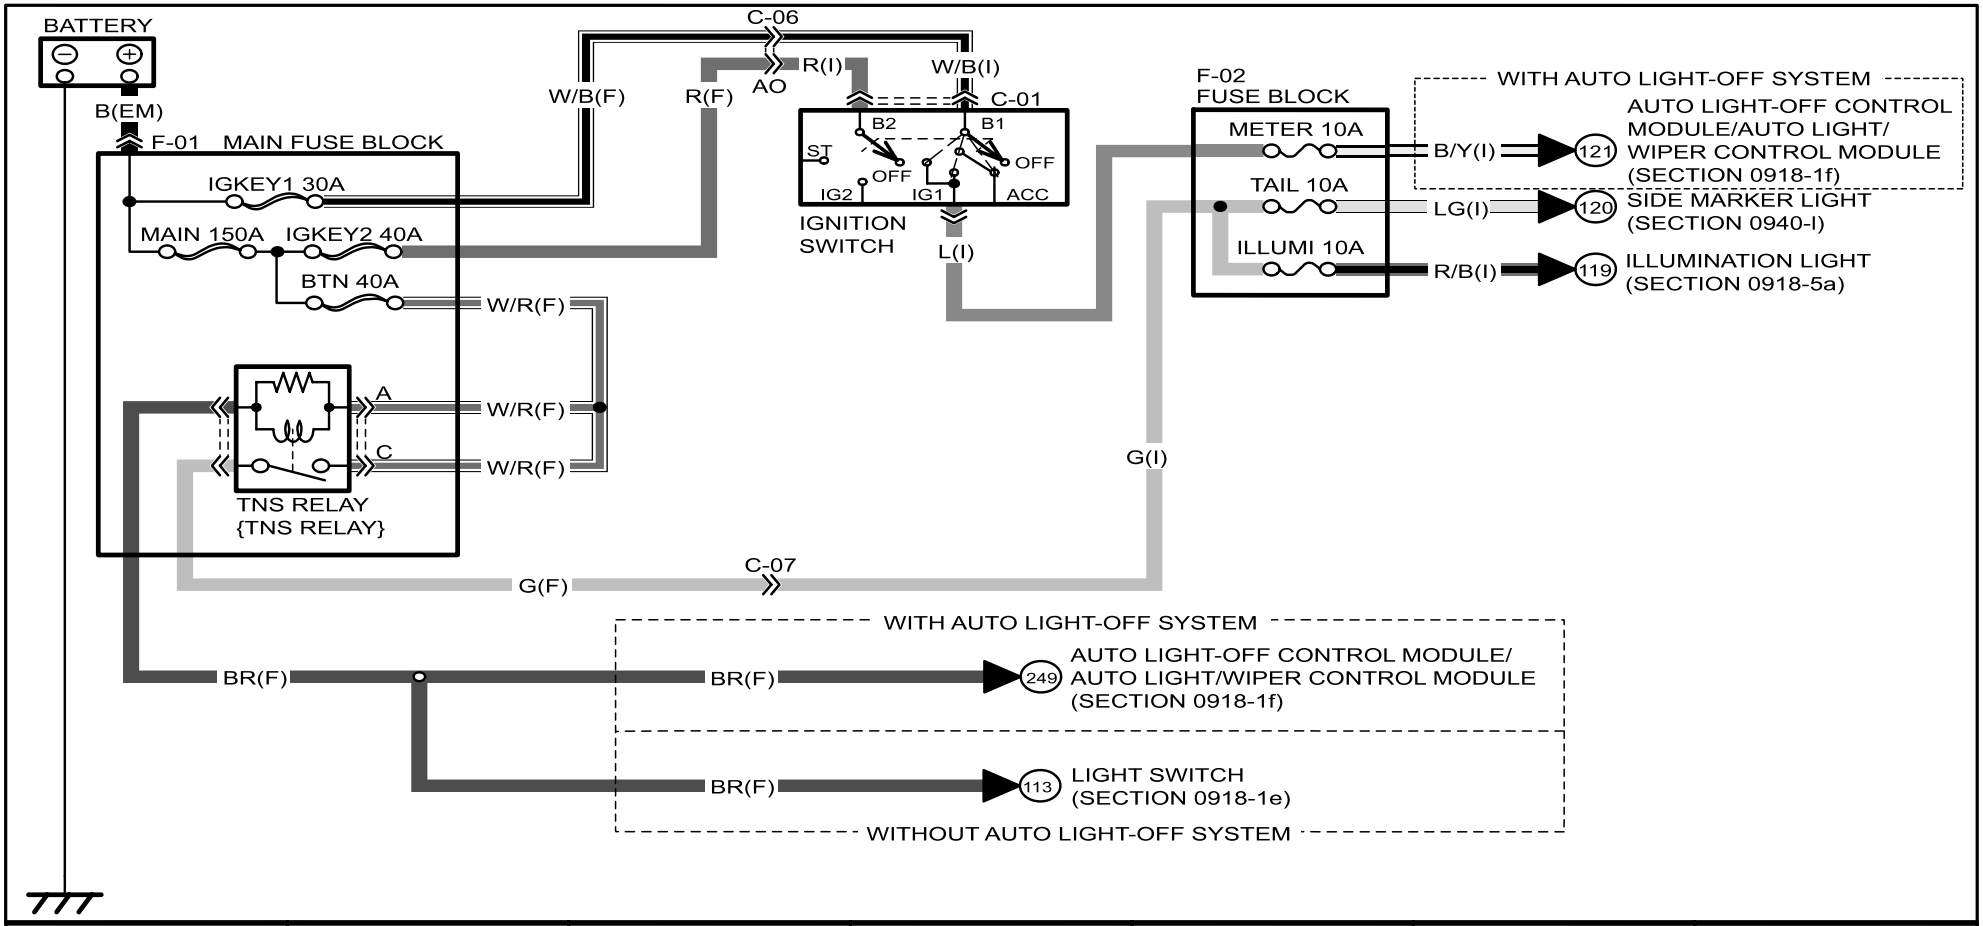


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

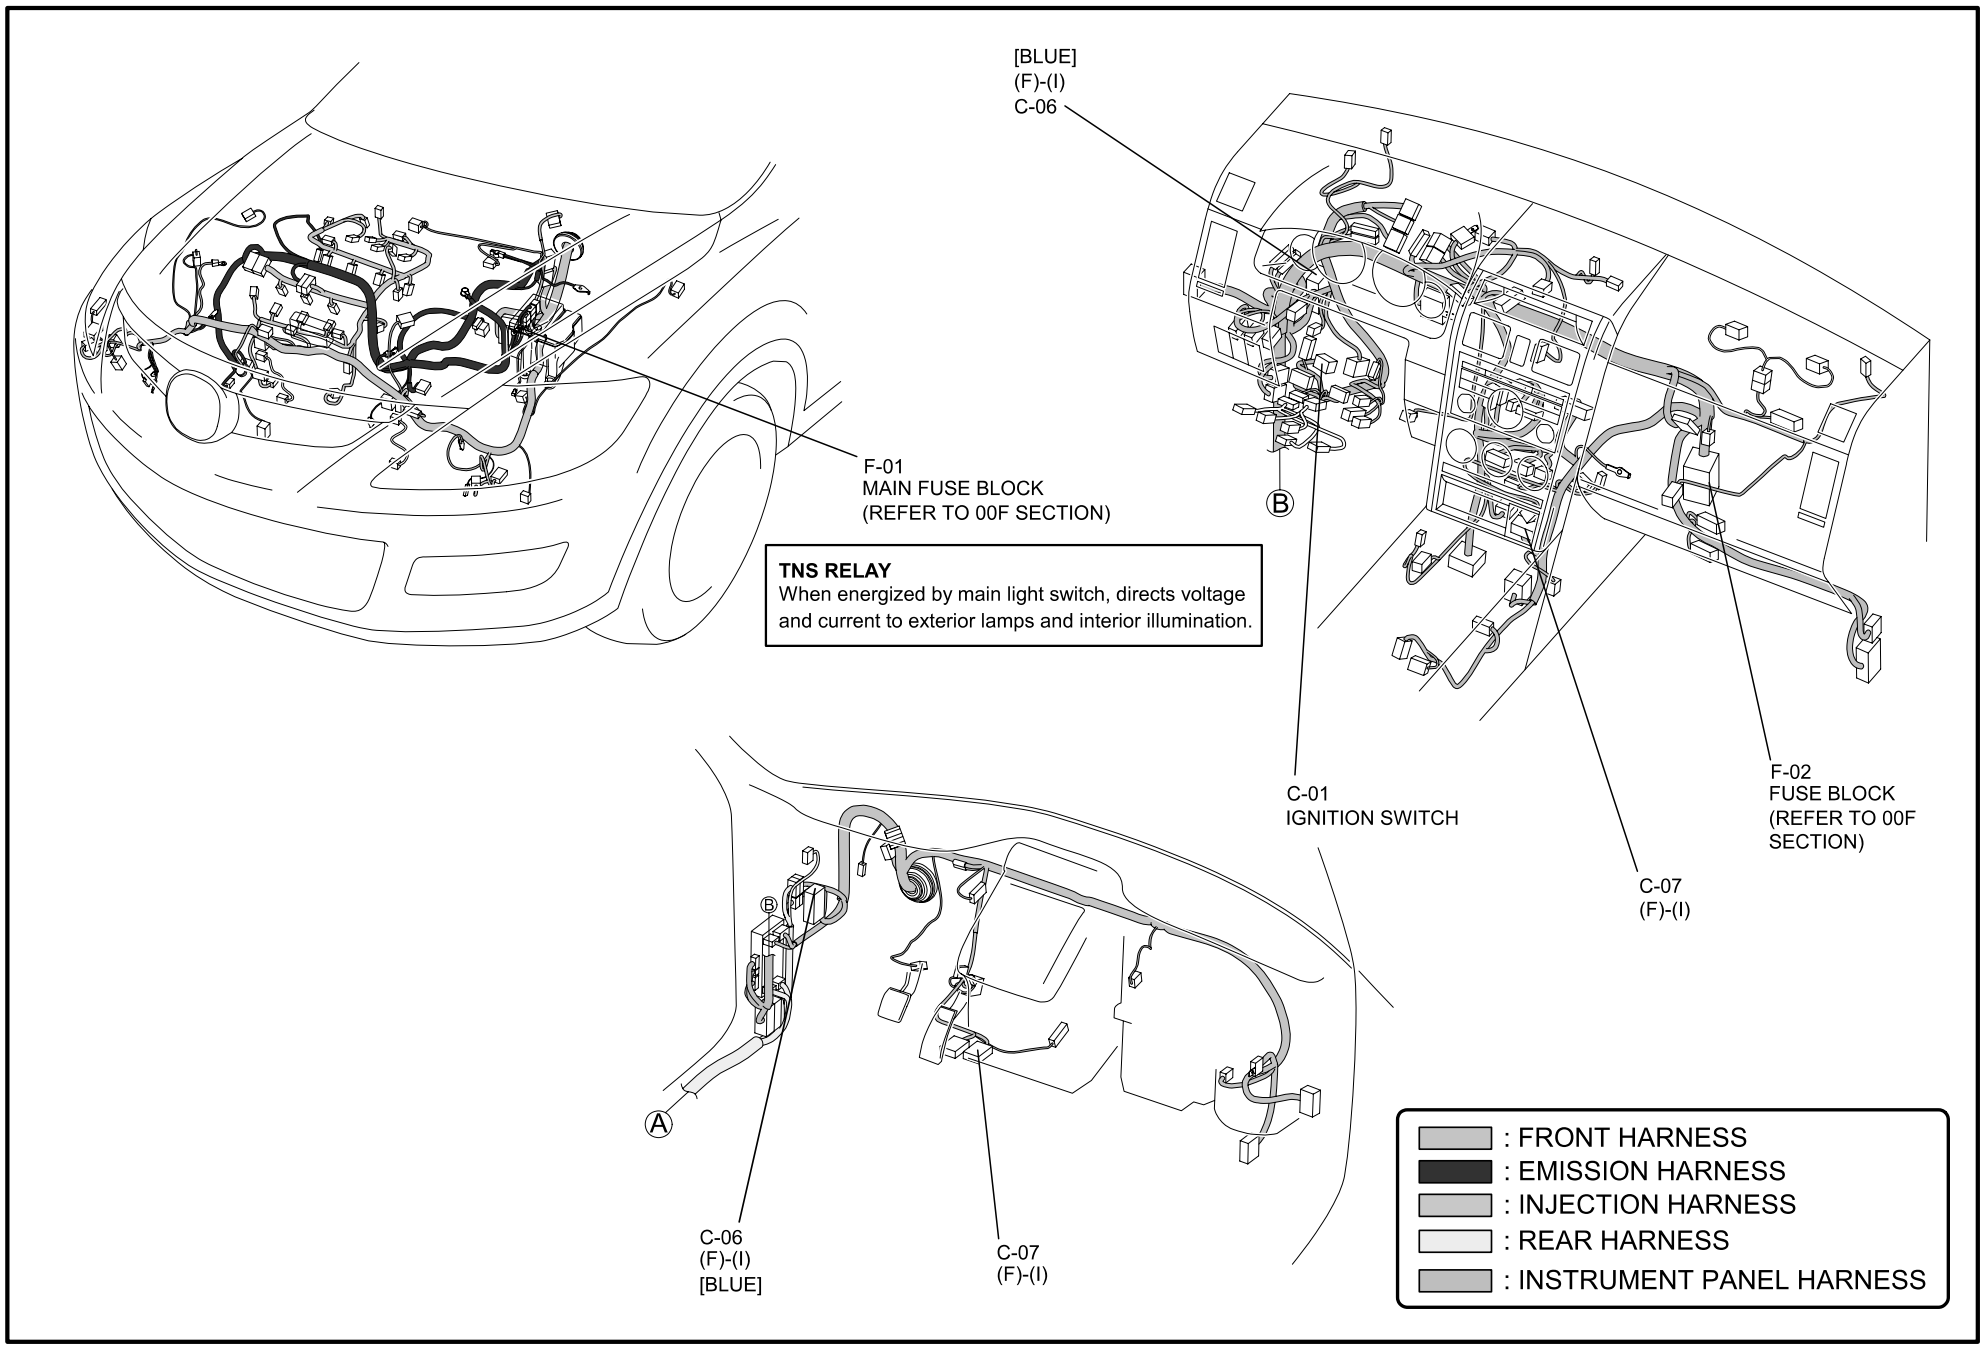

[BLUE]
(F)-(I)
C-06
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
TNS RELAY
When energized by main light switch, directs voltage and current to exterior lamps and interior illumination.
B
C-01
IGNITION SWITCH
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
C-07
(F)-(I)
A
B
C-06
(F)-(I)
[BLUE]
C-07
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

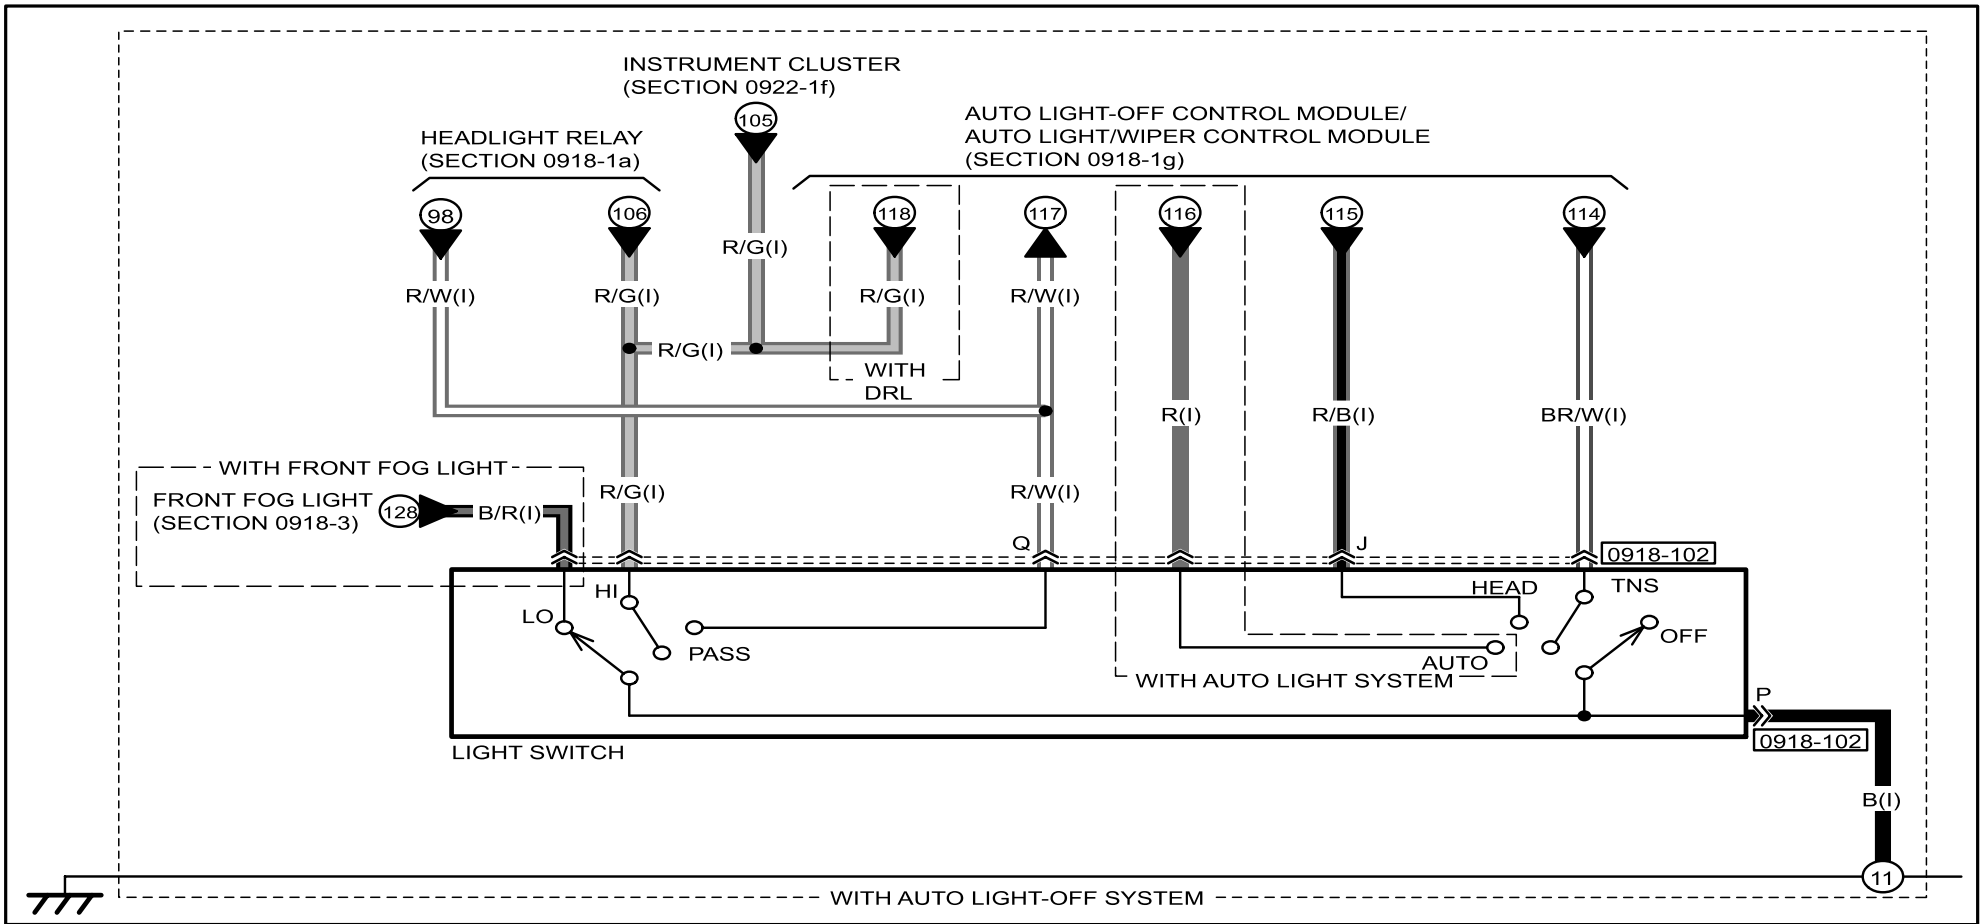


0918-102
LIGHT SWITCH / TURN SWITCH /
FRONT FOG LIGHT SWITCH

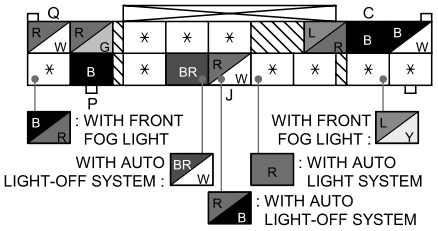


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

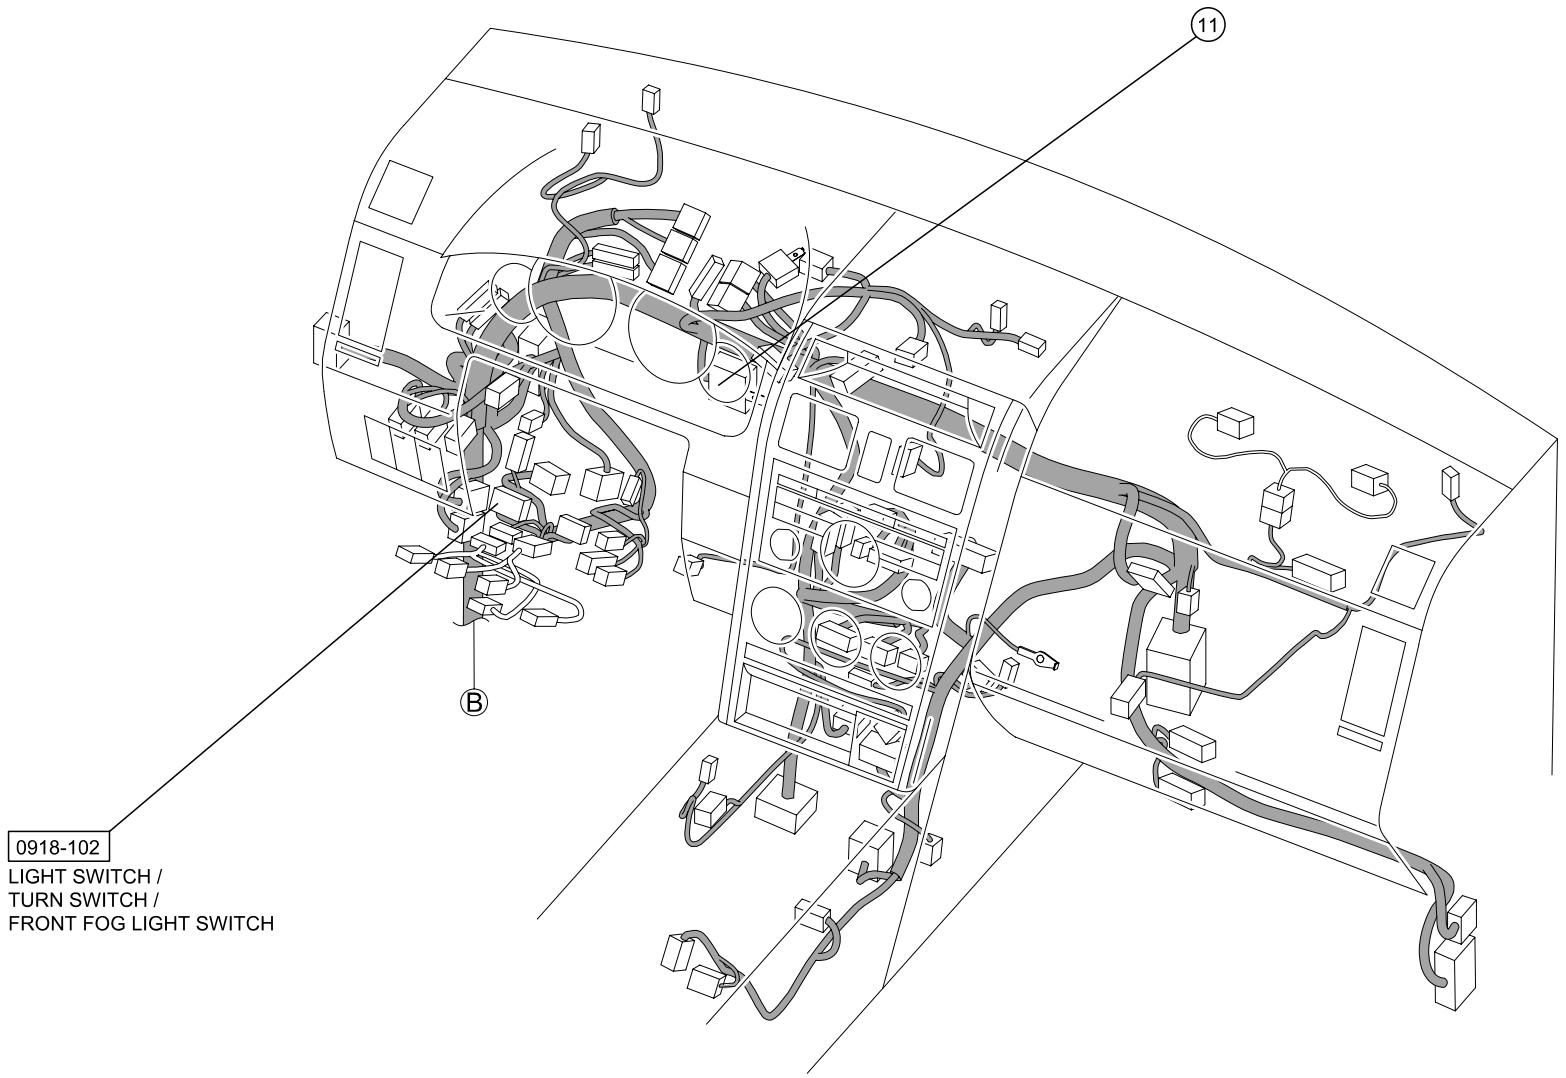

11
B
0918-102
LIGHT SWITCH /
TURN SWITCH /
FRONT FOG LIGHT SWITCH
: INSTRUMENT PANEL HARNESS

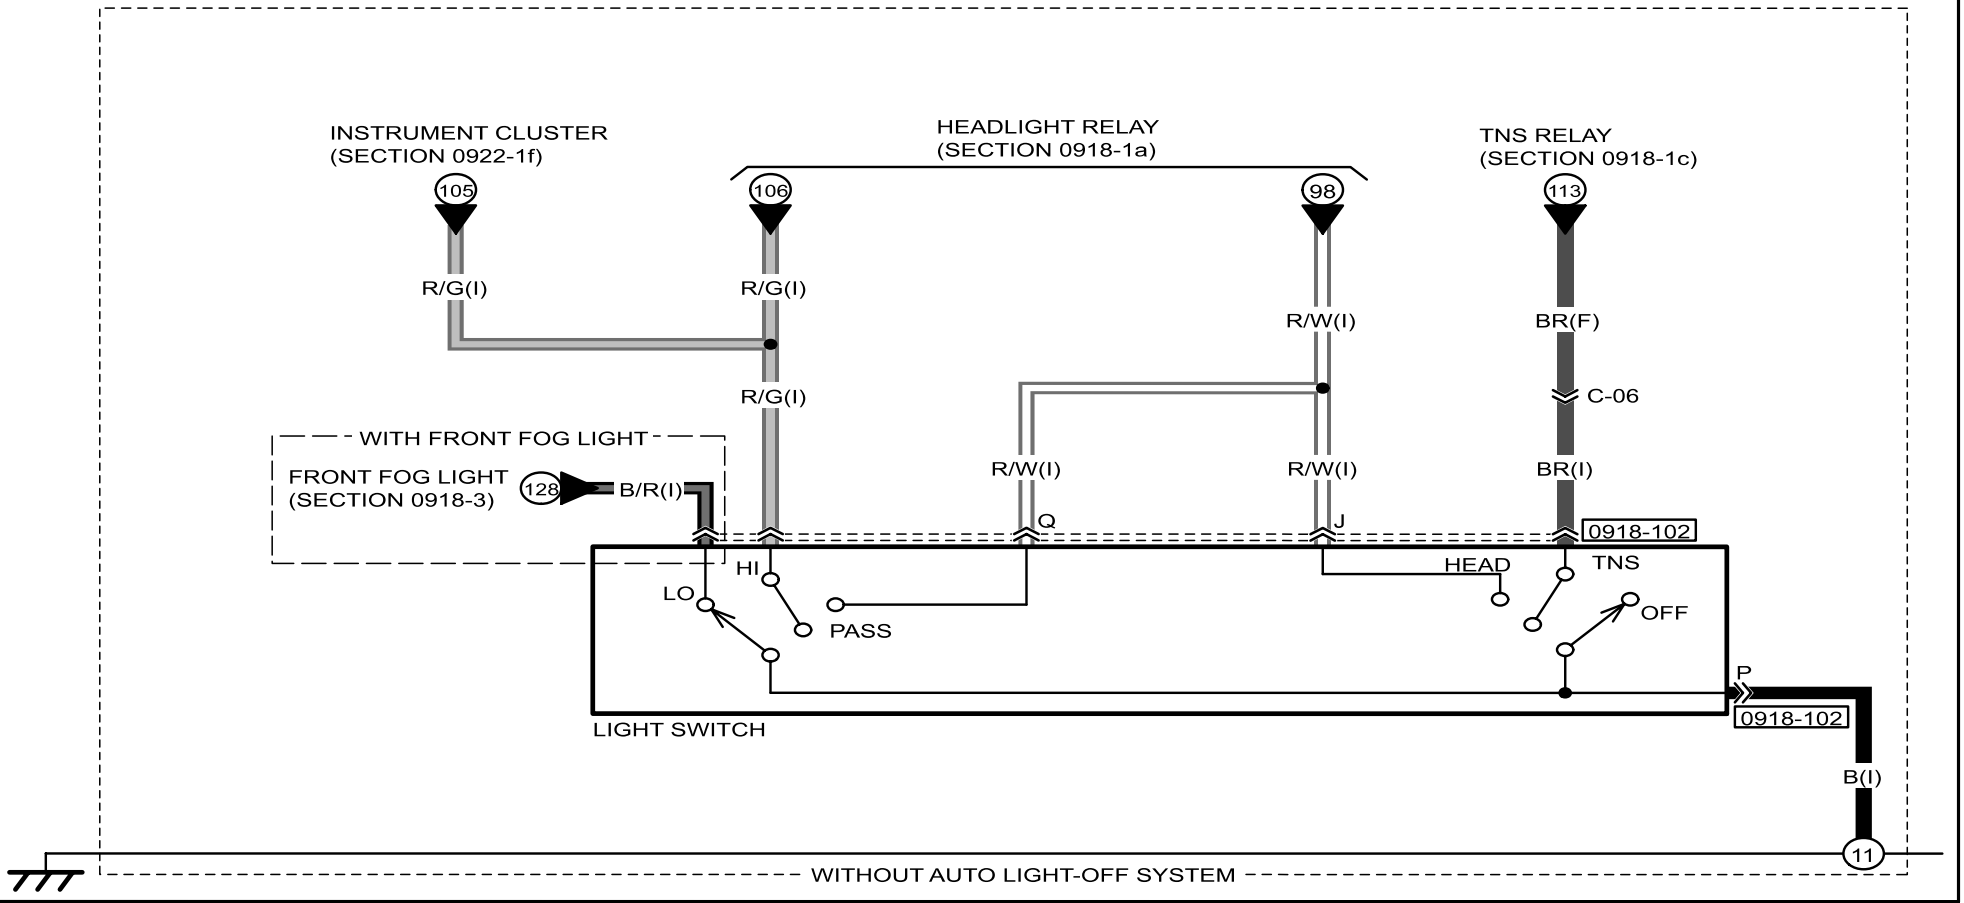


0918-102
LIGHT SWITCH / TURN SWITCH /
FRONT FOG LIGHT SWITCH

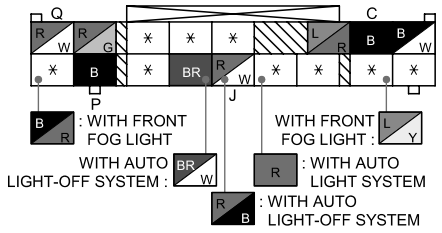


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

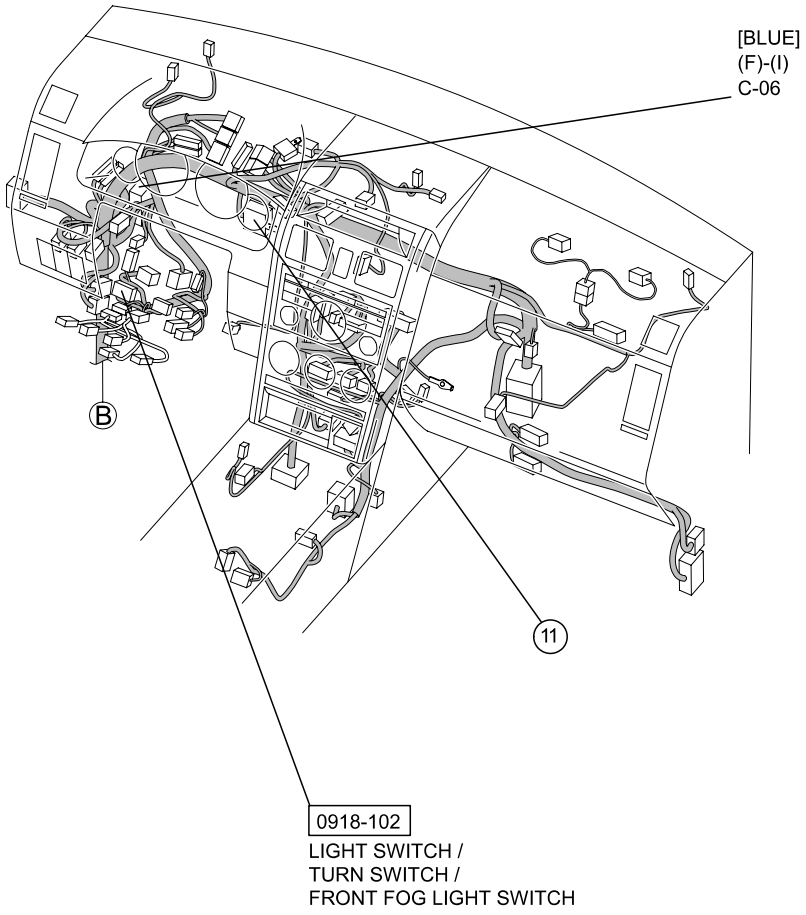


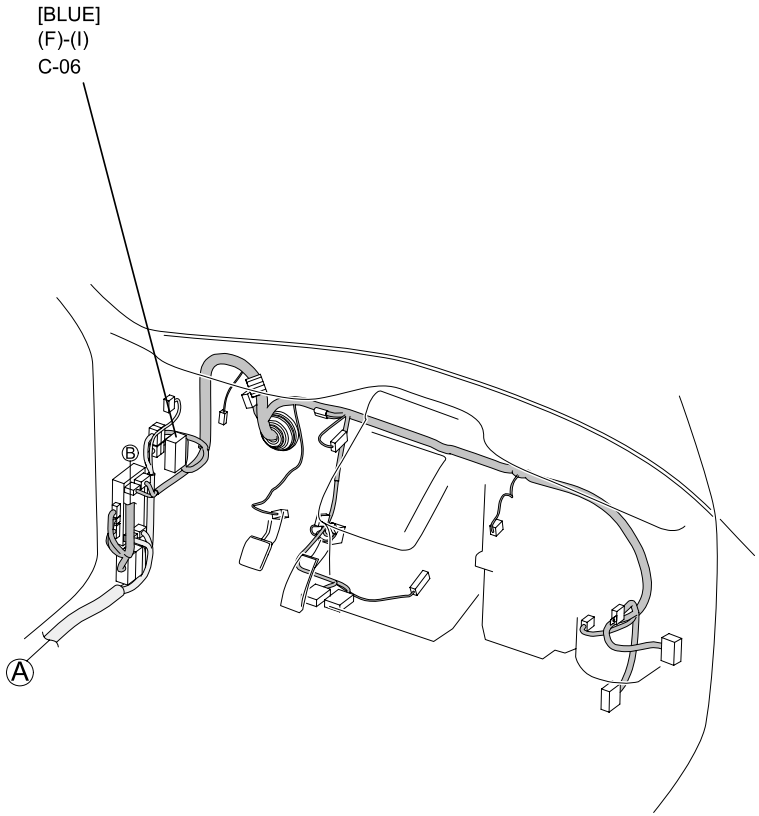


: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

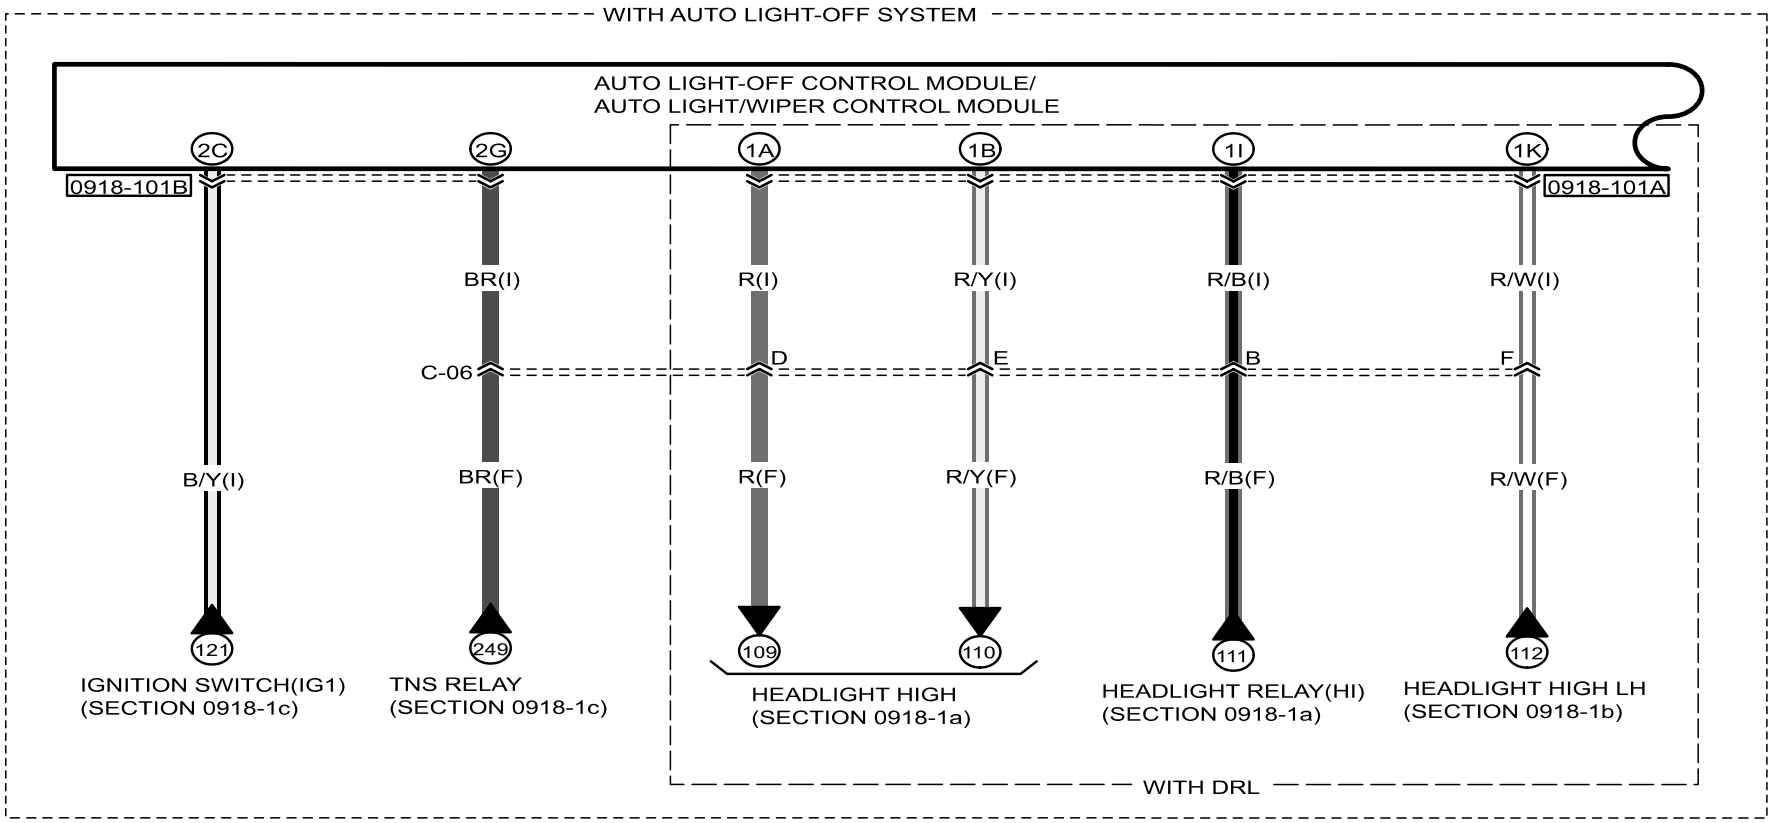


0918-101A
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE

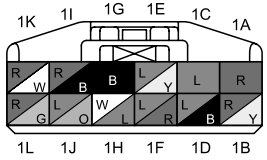


0918-101B
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE

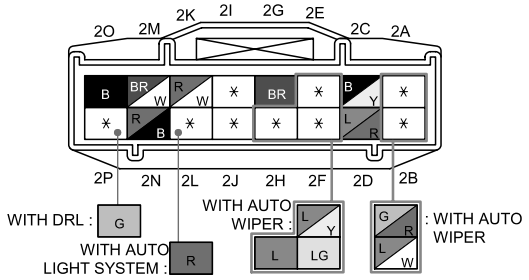


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

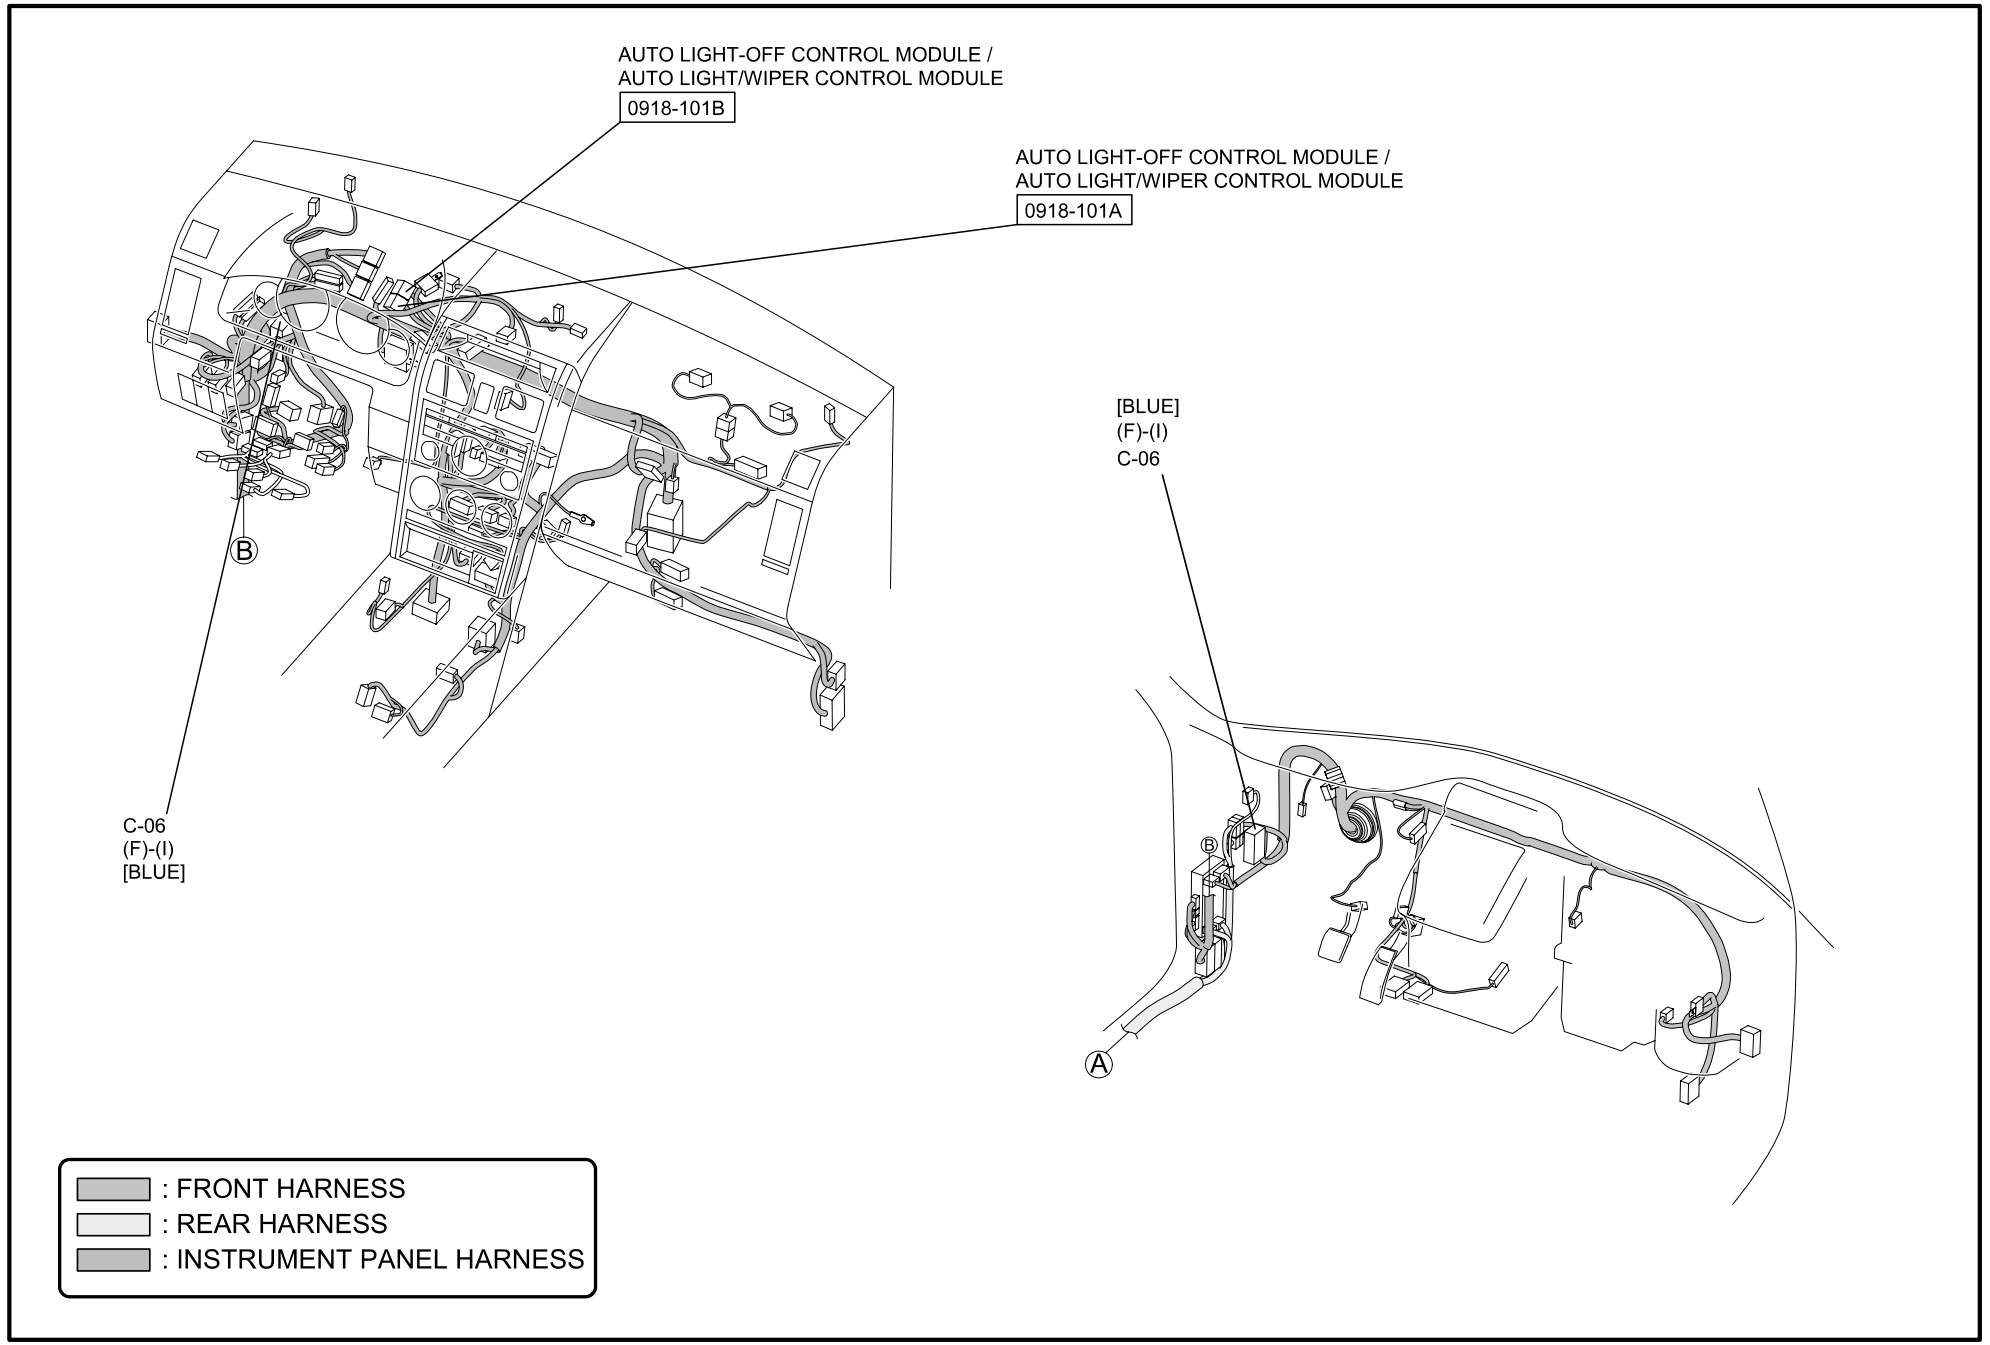

AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE
0918-101B
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE
0918-101A
[BLUE]
(F)-(I)
C-06
B
C-06
(F)-(I)
[BLUE]
B
A
: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

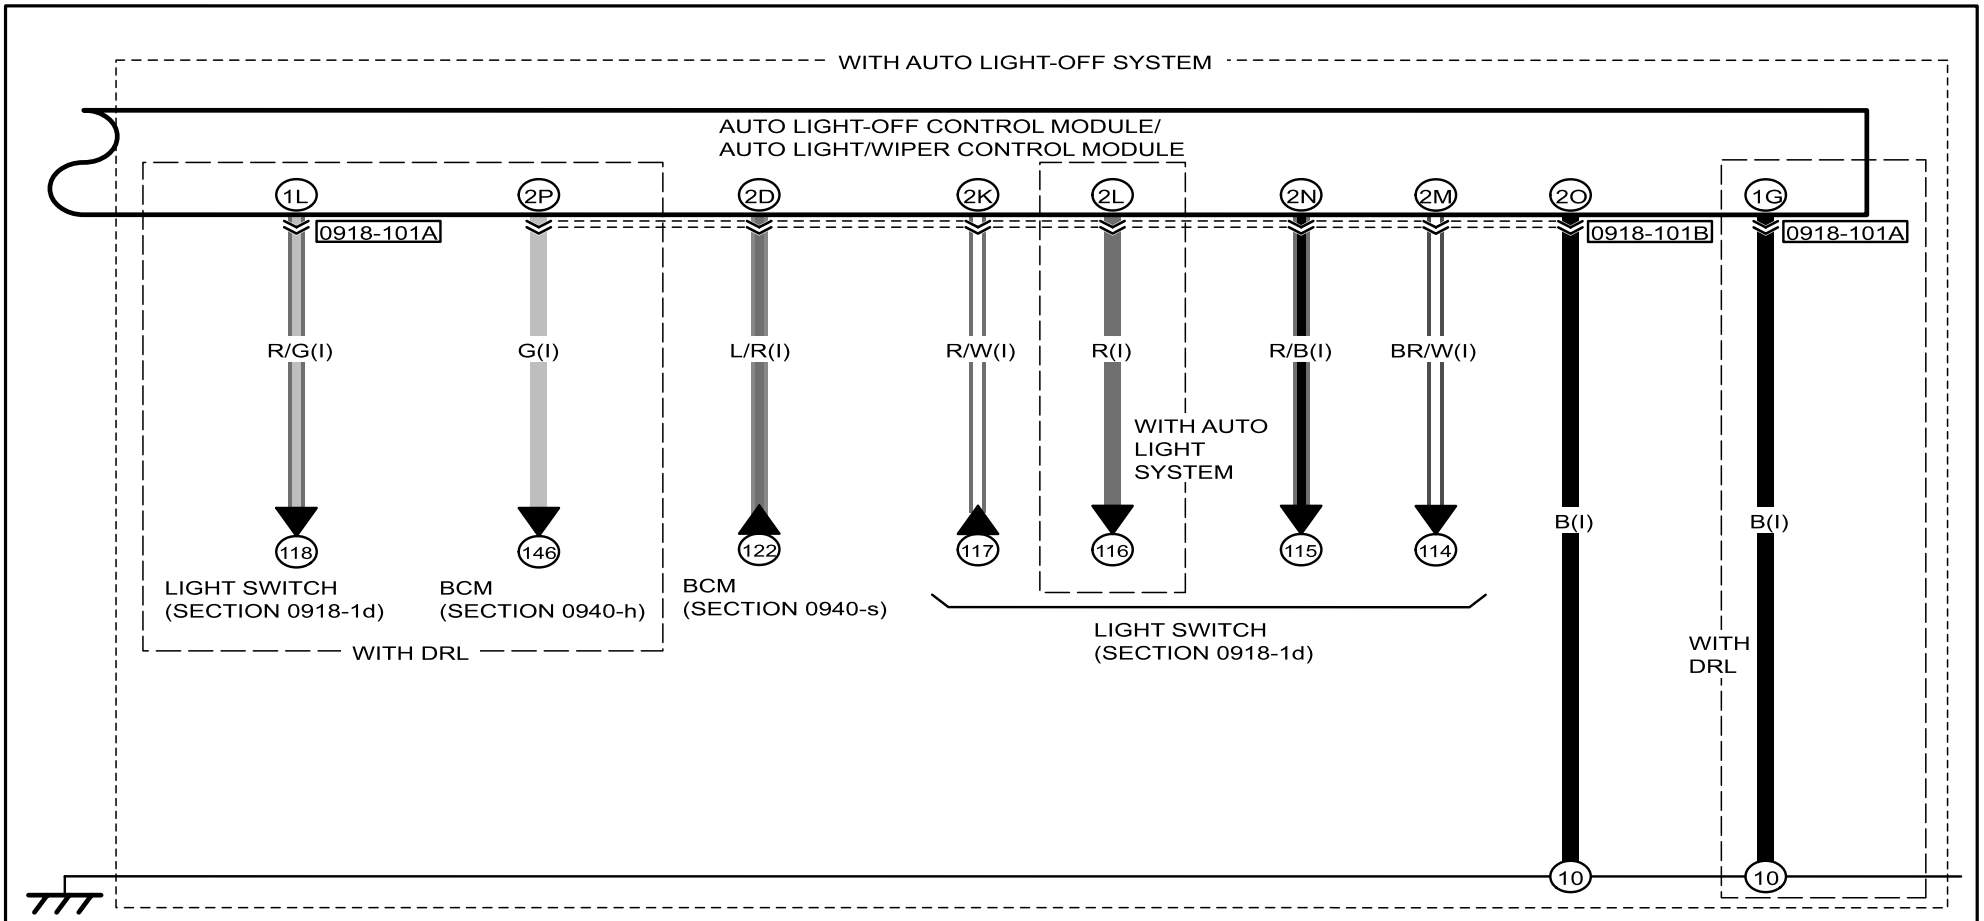


0918-101A
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE

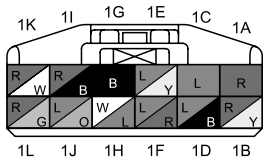


0918-101B
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE

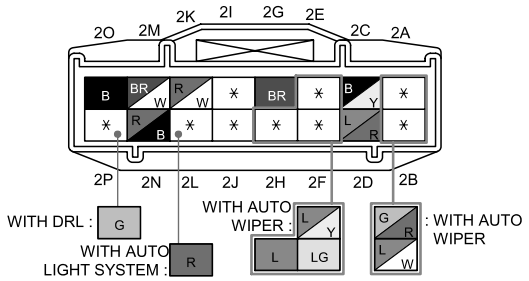


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

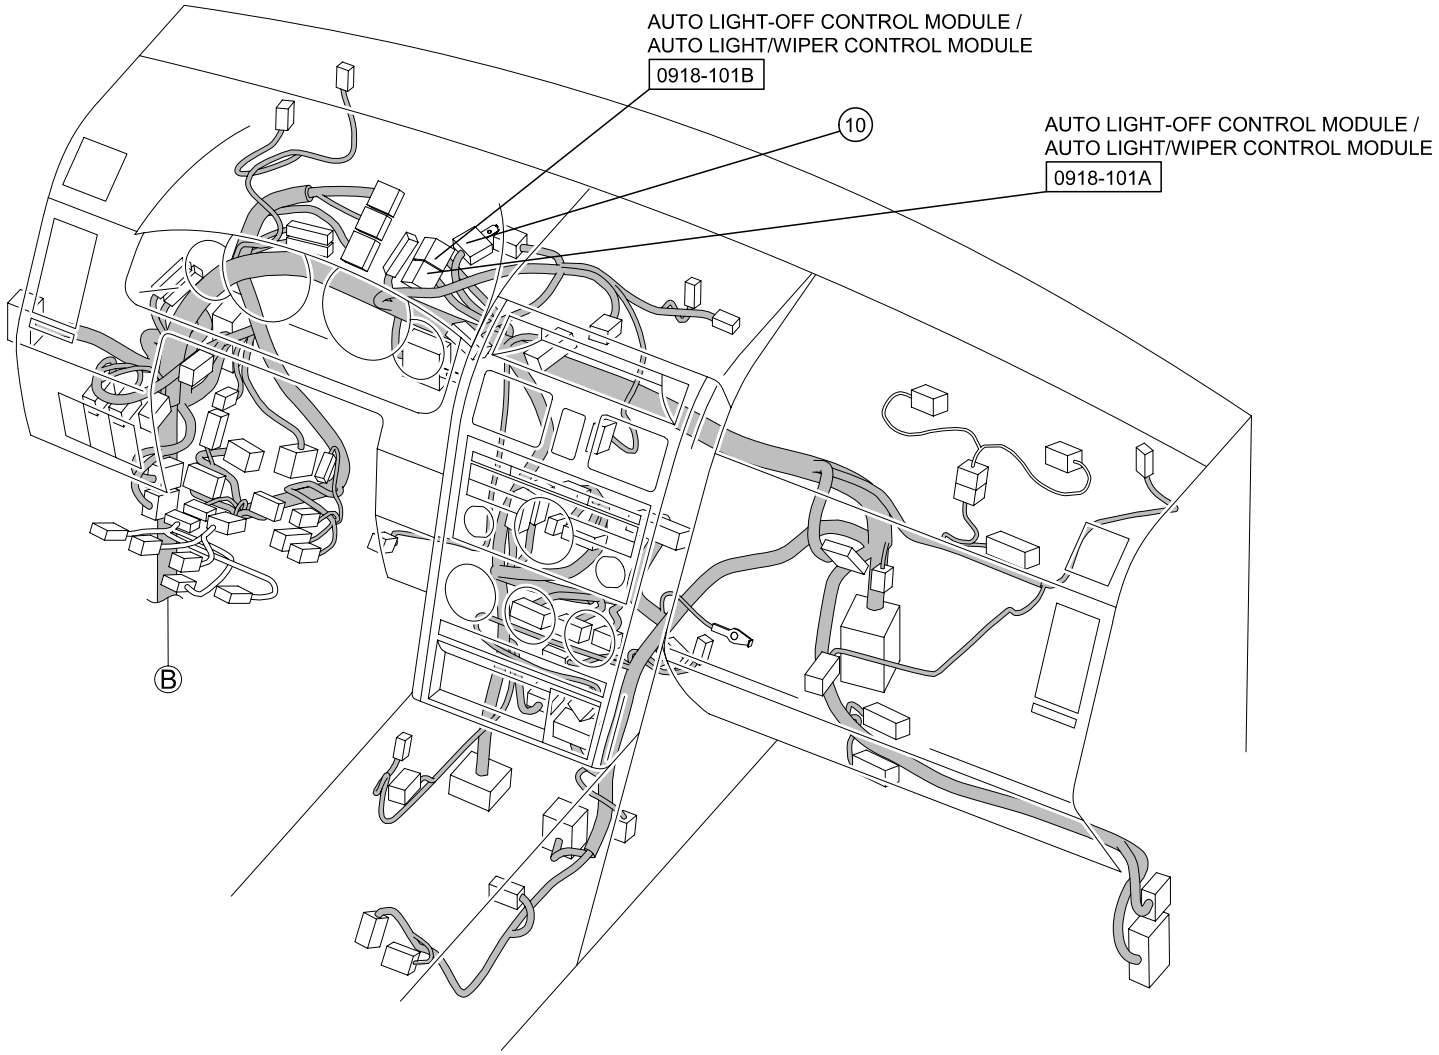

AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE
0918-101B
10
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE
0918-101A
B
: INSTRUMENT PANEL HARNESS

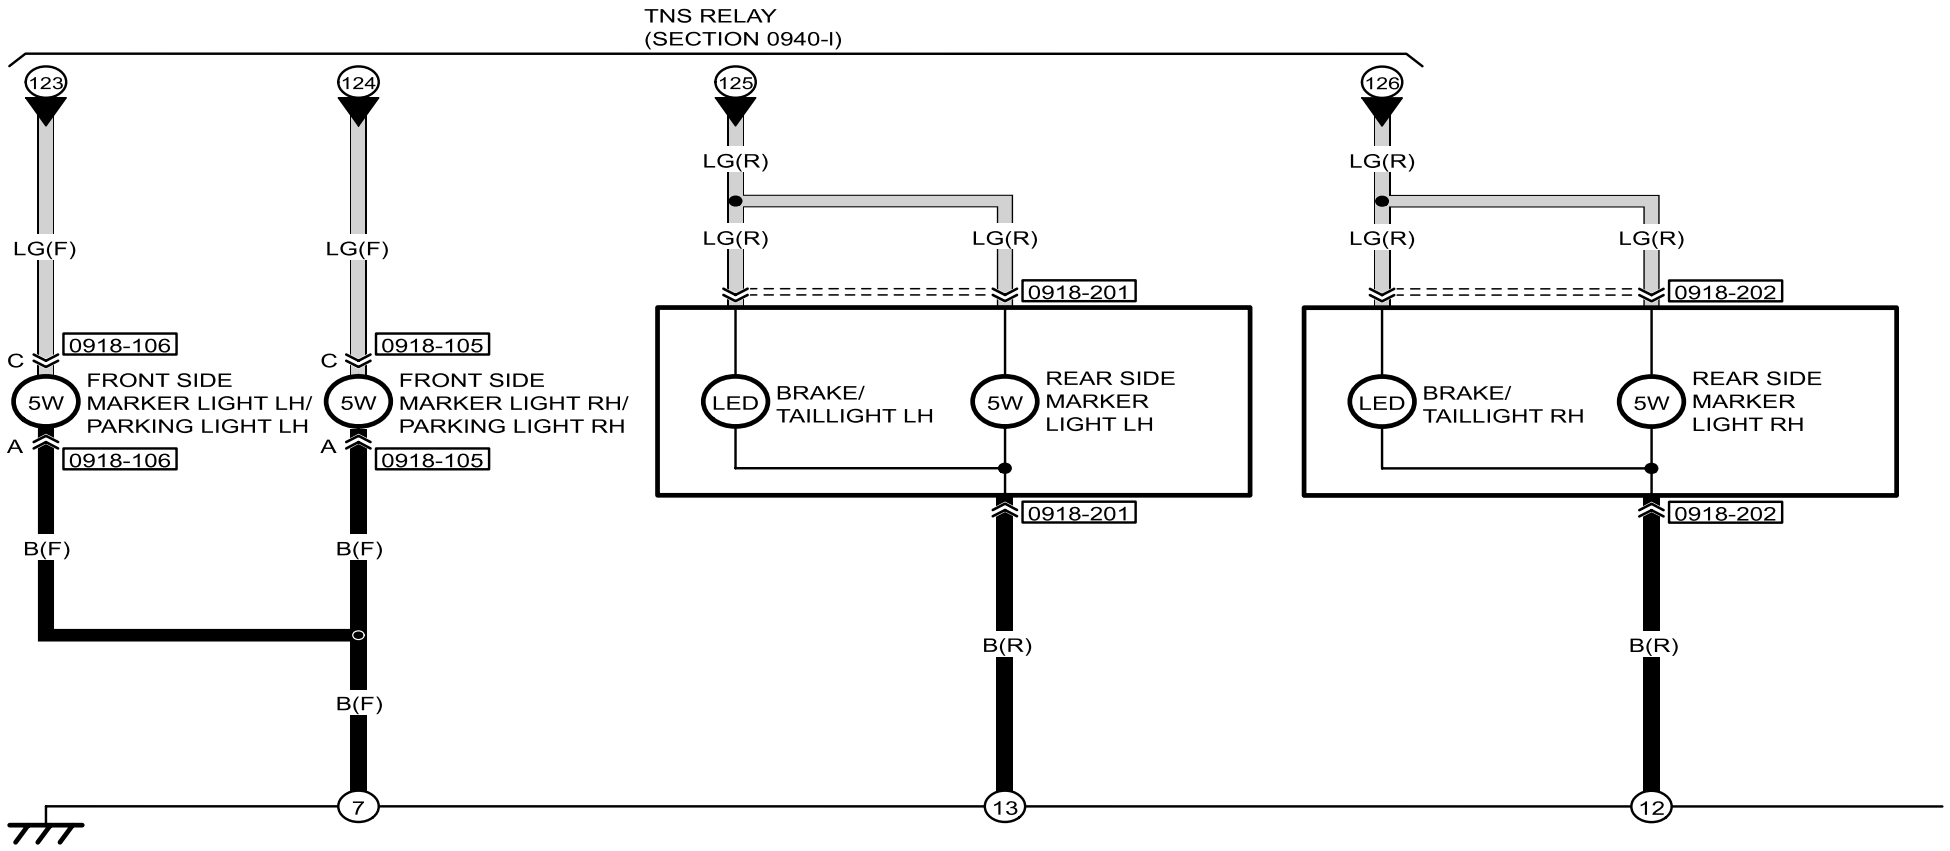


0918-105
HEADLIGHT HIGH RH/HEADLIGHT LOW RH/
FRONT SIDE MARKER LIGHT RH/
PARKING LIGHT RH/HEADLIGHT LEVELING
ACTUATOR RH/FRONT TURN LIGHT RH

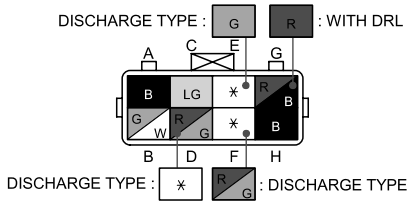


0918-106
HEADLIGHT HIGH LH/HEADLIGHT LOW LH/
FRONT SIDE MARKER LIGHT LH/
PARKING LIGHT LH/HEADLIGHT LEVELING
ACTUATOR LH/FRONT TURN LIGHT LH

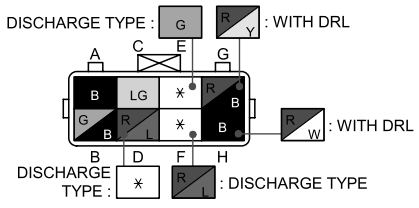


0918-201
BRAKE/
TAILLIGHT LH/
REAR SIDE MARKER LIGHT LH/
REAR TURN LIGHT LH

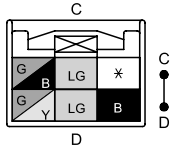




0918-202
BRAKE/
TAILLIGHT RH/
REAR SIDE MARKER LIGHT RH/
REAR TURN LIGHT RH

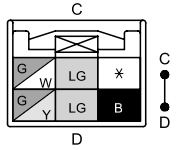


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

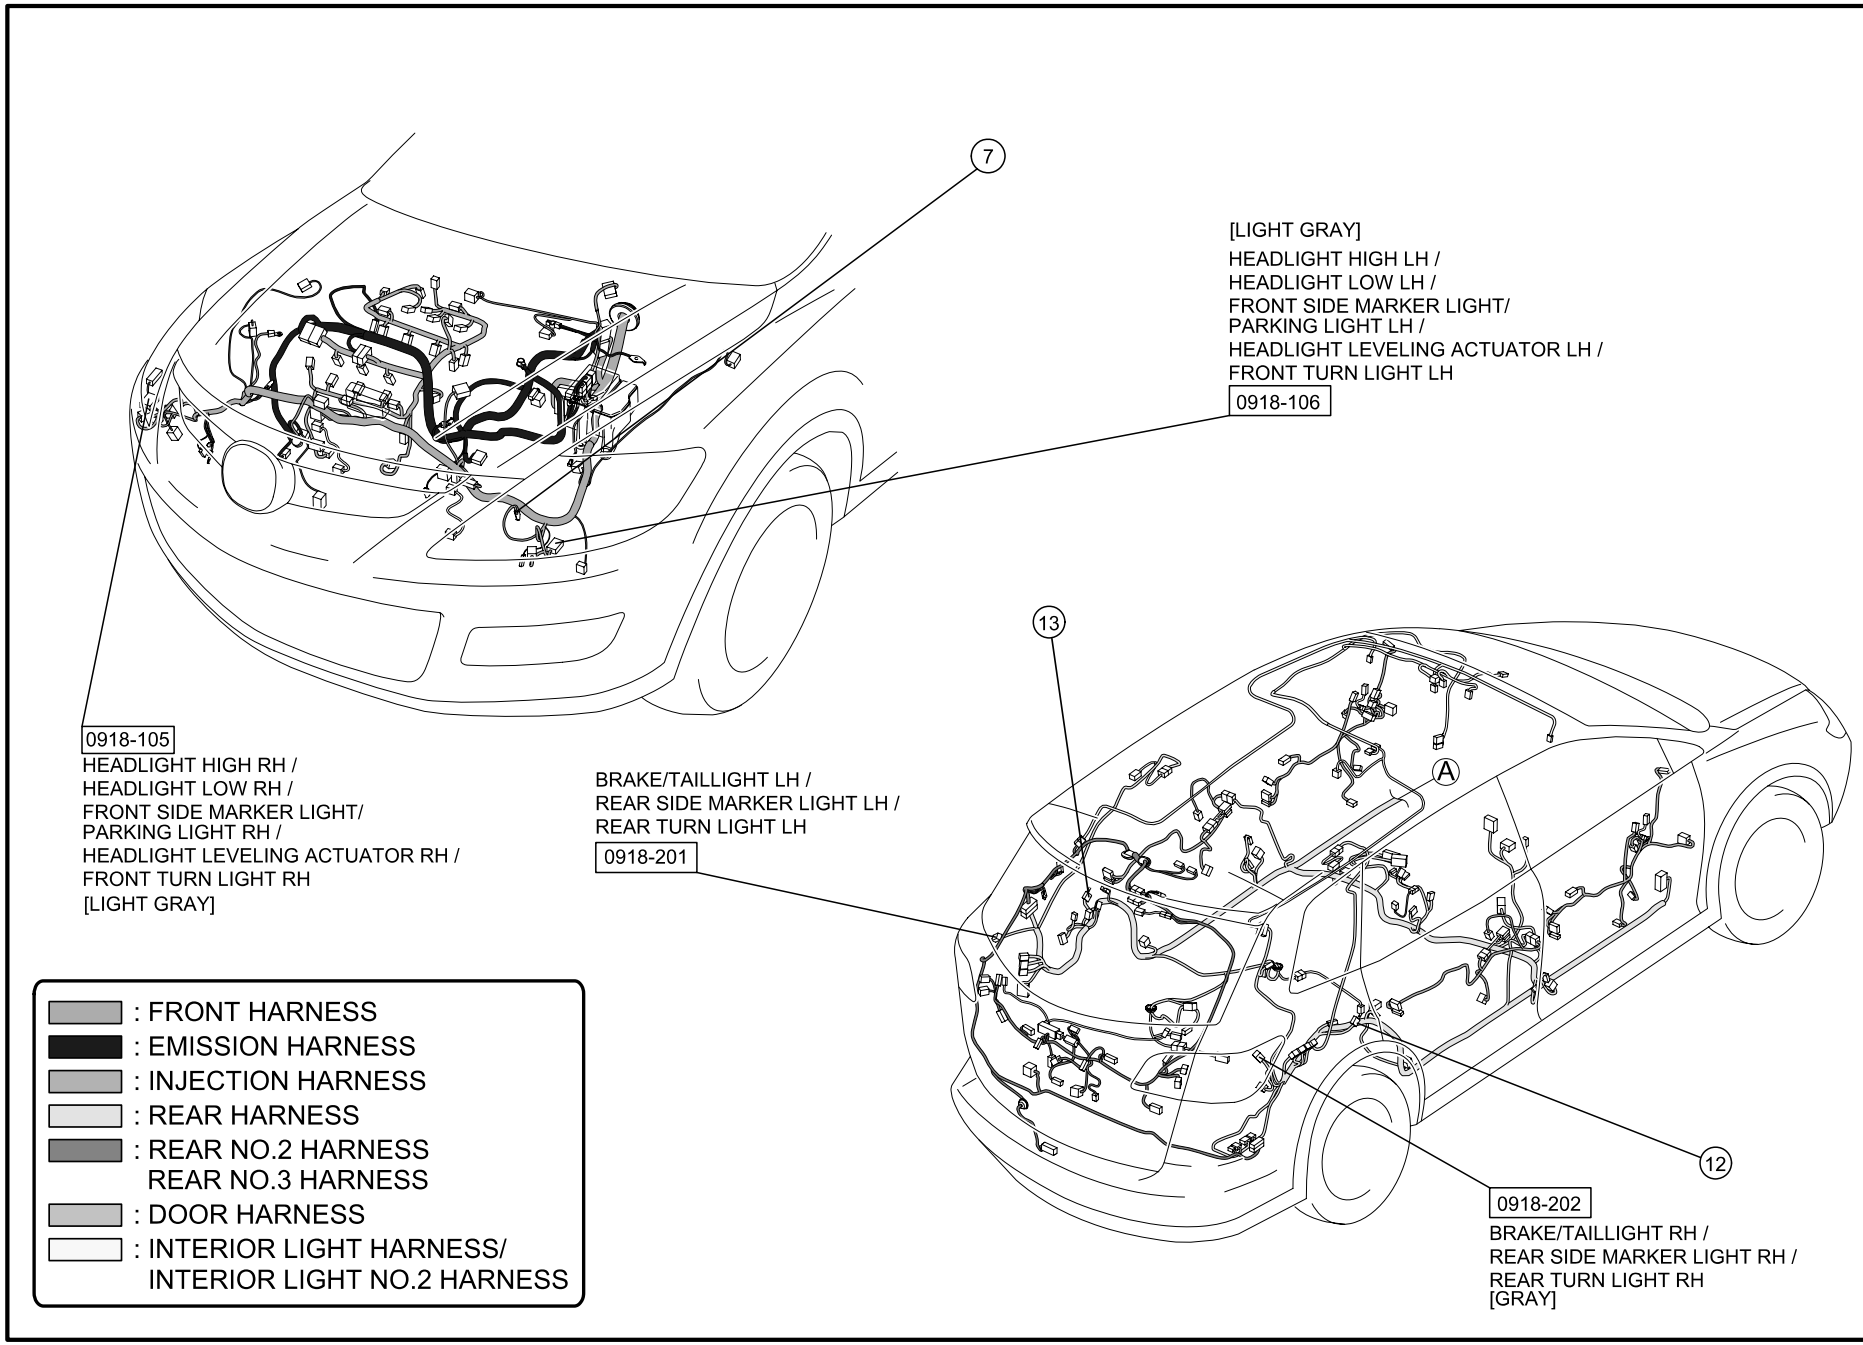

7
[LIGHT GRAY]
HEADLIGHT HIGH LH /
HEADLIGHT LOW LH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT LH /
HEADLIGHT LEVELING ACTUATOR LH /
FRONT TURN LIGHT LH
0918-106
0918-105
HEADLIGHT HIGH RH /
HEADLIGHT LOW RH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT RH /
HEADLIGHT LEVELING ACTUATOR RH /
FRONT TURN LIGHT RH
[LIGHT GRAY]
13
A
BRAKE/TAILLIGHT LH /
REAR SIDE MARKER LIGHT LH /
REAR TURN LIGHT LH
0918-201
12
0918-202
BRAKE/TAILLIGHT RH /
REAR SIDE MARKER LIGHT RH /
REAR TURN LIGHT RH
[GRAY]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

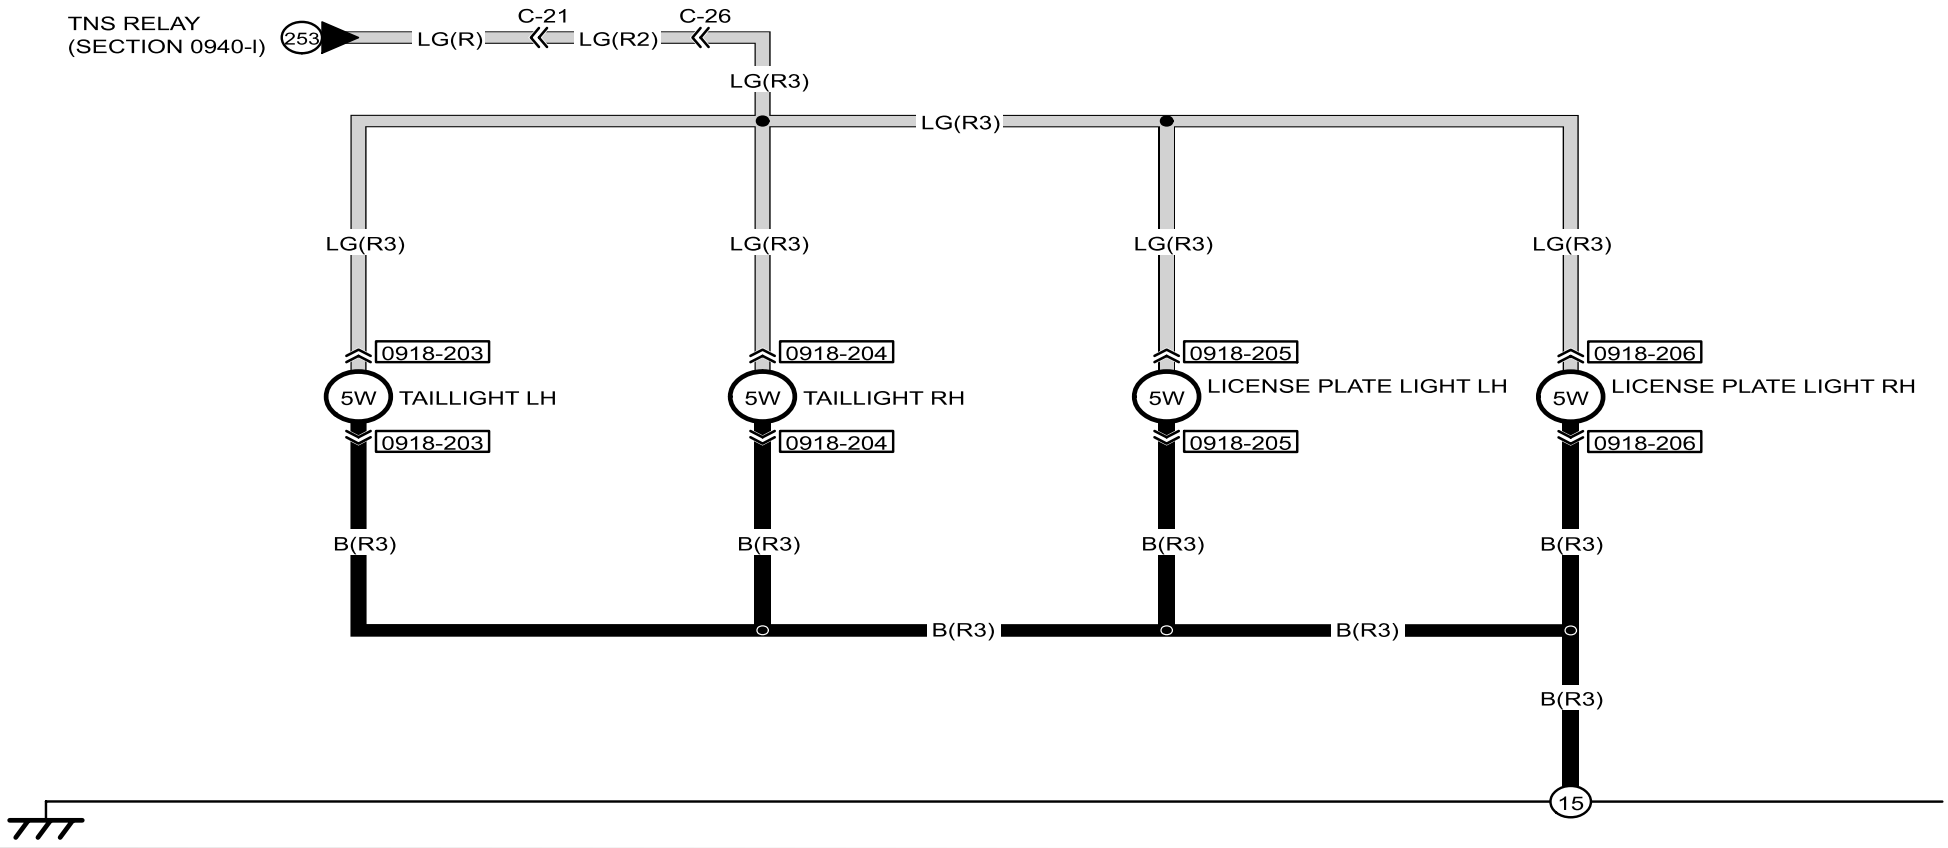


0918-203 TAILLIGHT LH	0918-204 TAILLIGHT RH	0918-205 LICENSE PLATE LIGHT LH	0918-206 LICENSE PLATE LIGHT RH	
				

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

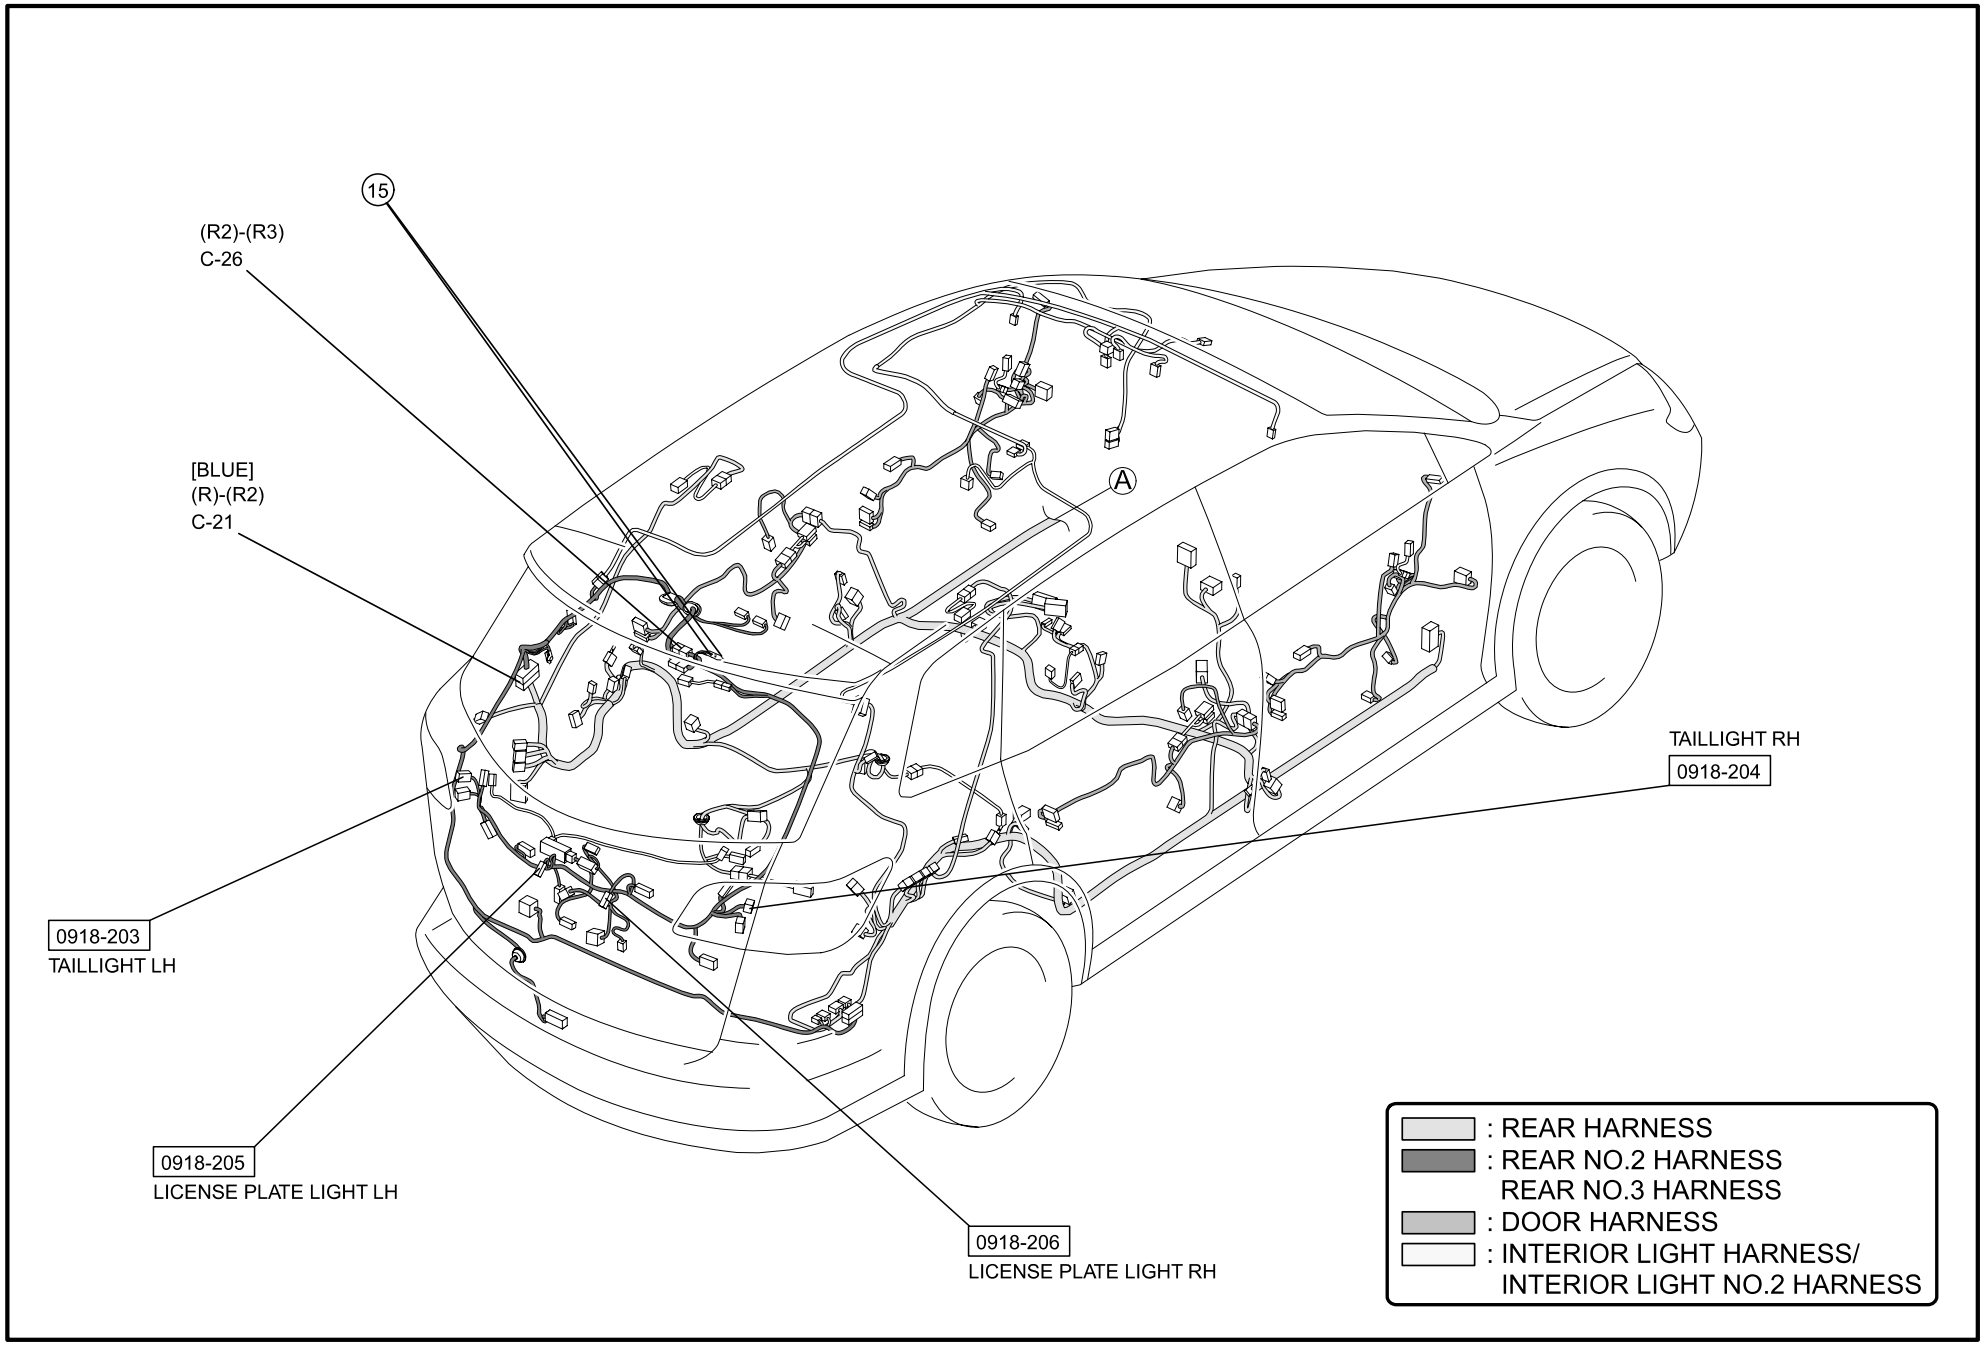

15
(R2)-(R3)
C-26
[BLUE]
(R)-(R2)
C-21
A
TAILLIGHT RH
0918-204
0918-203
TAILLIGHT LH
0918-205
LICENSE PLATE LIGHT LH
0918-206
LICENSE PLATE LIGHT RH
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

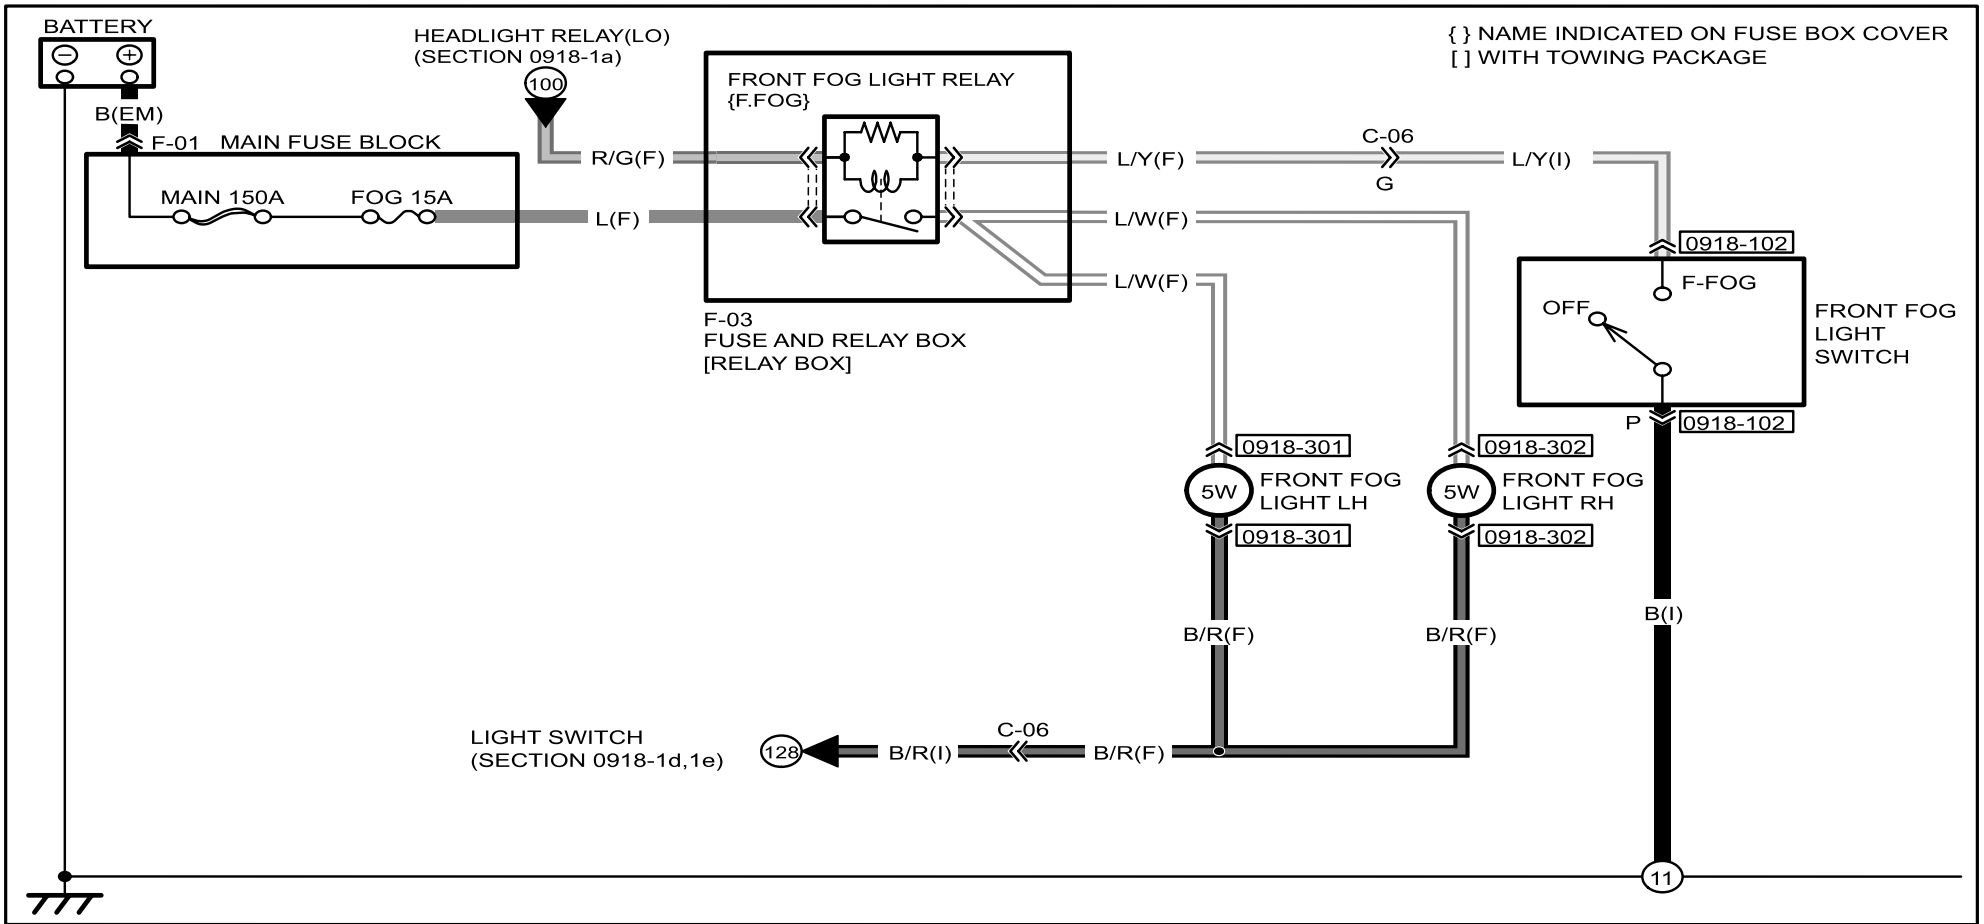


0918-102
LIGHT SWITCH / TURN SWITCH /
FRONT FOG LIGHT SWITCH

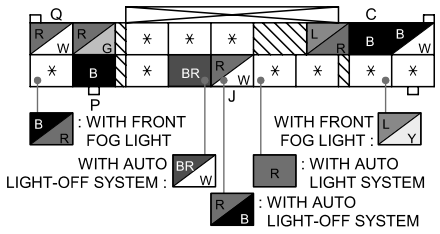


0918-301
FRONT FOG LIGHT LH




0918-302
FRONT FOG LIGHT RH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

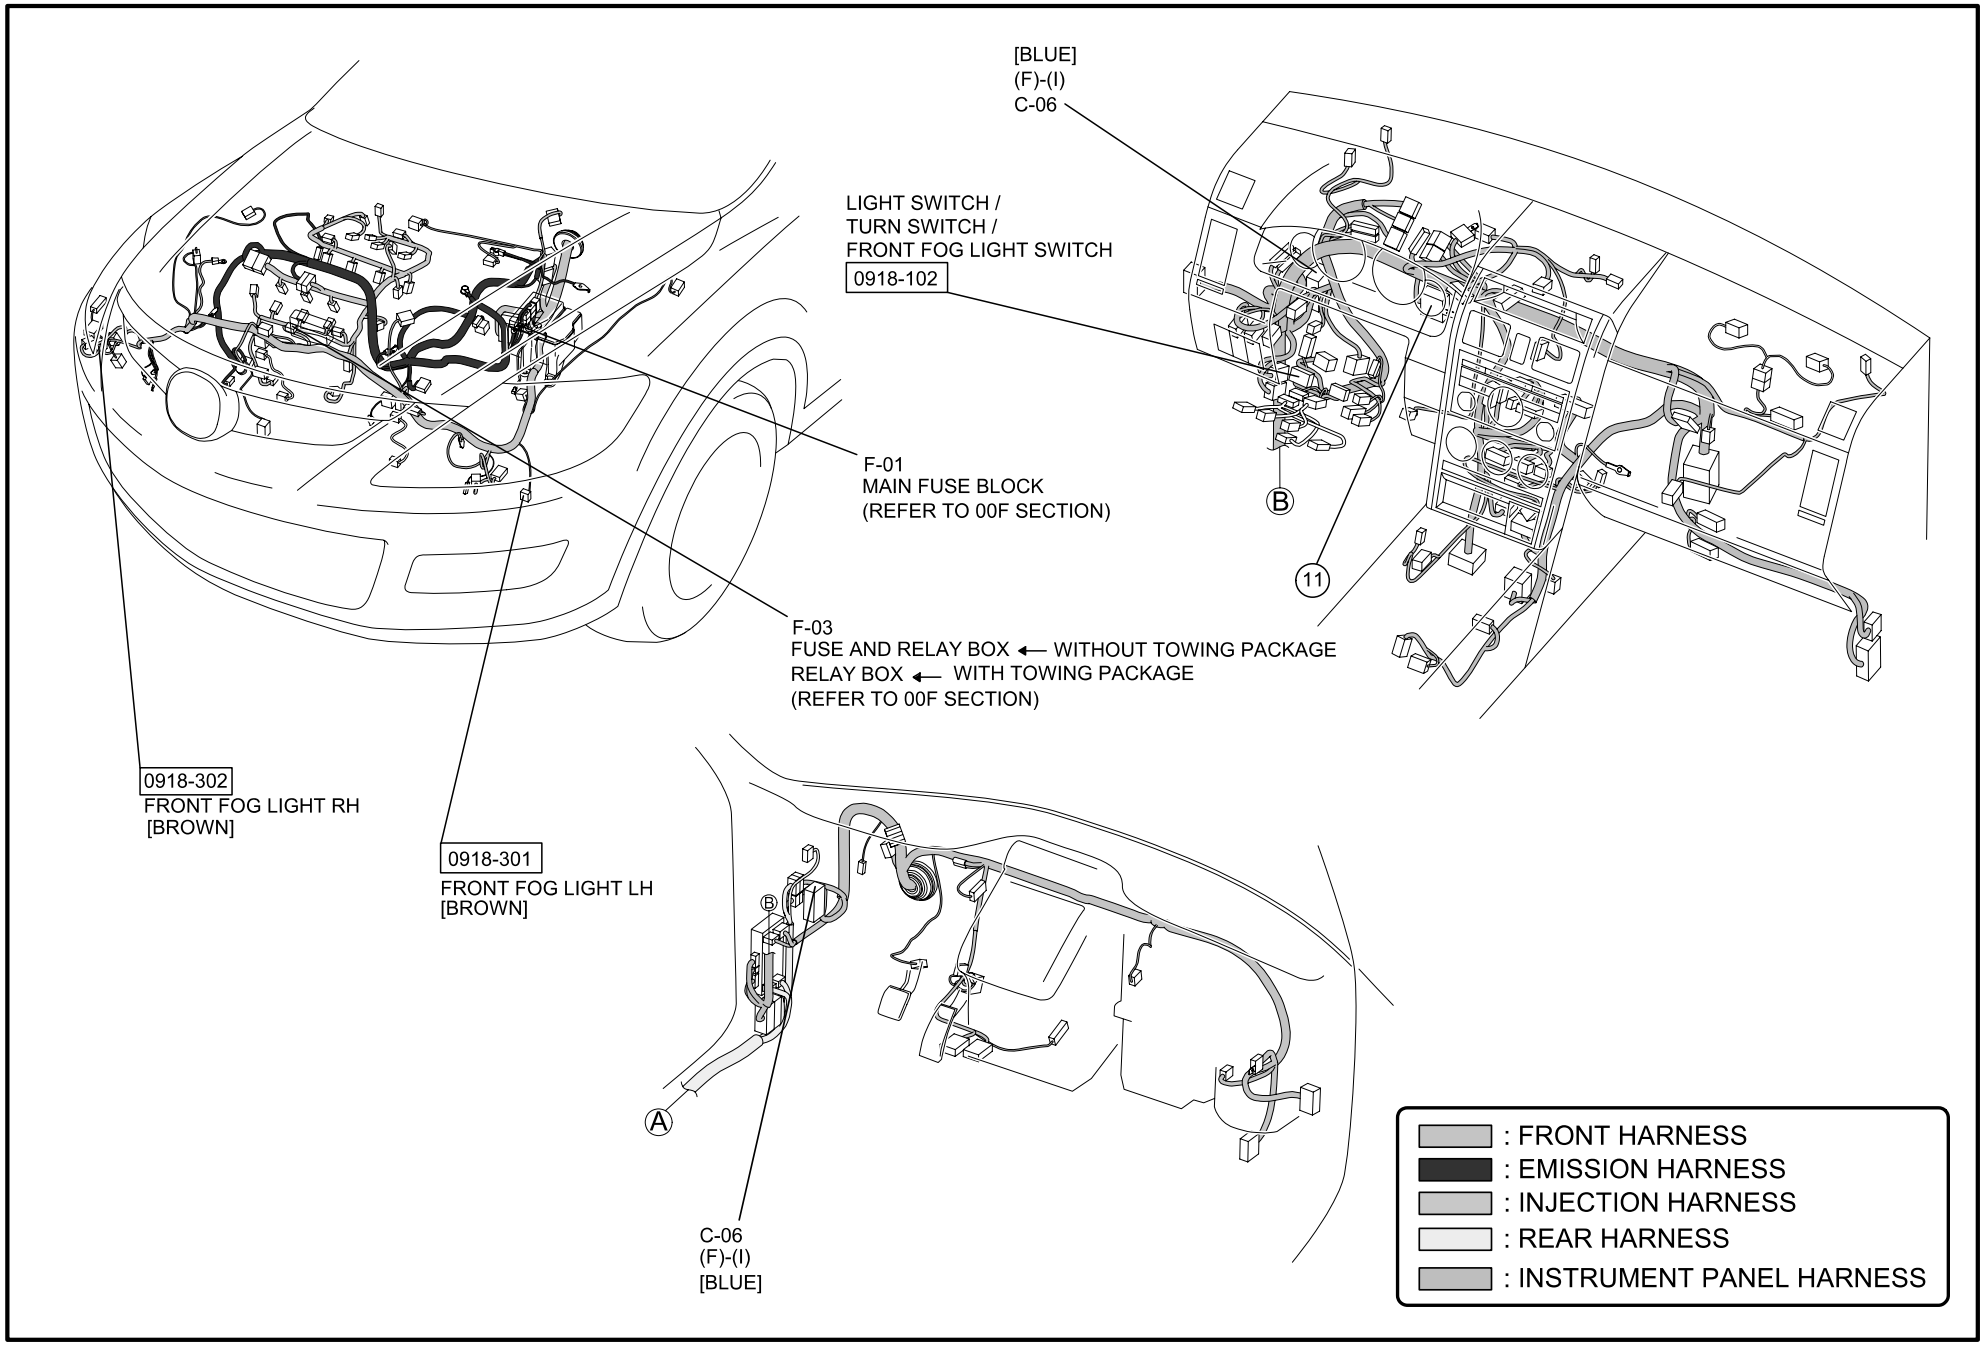

[BLUE]
(F)-(I)
C-06
LIGHT SWITCH /
TURN SWITCH /
FRONT FOG LIGHT SWITCH
0918-102
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
F-03
FUSE AND RELAY BOX ← WITHOUT TOWING PACKAGE
RELAY BOX ← WITH TOWING PACKAGE
(REFER TO 00F SECTION)
0918-302
FRONT FOG LIGHT RH
[BROWN]
0918-301
FRONT FOG LIGHT LH
[BROWN]
B
11
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

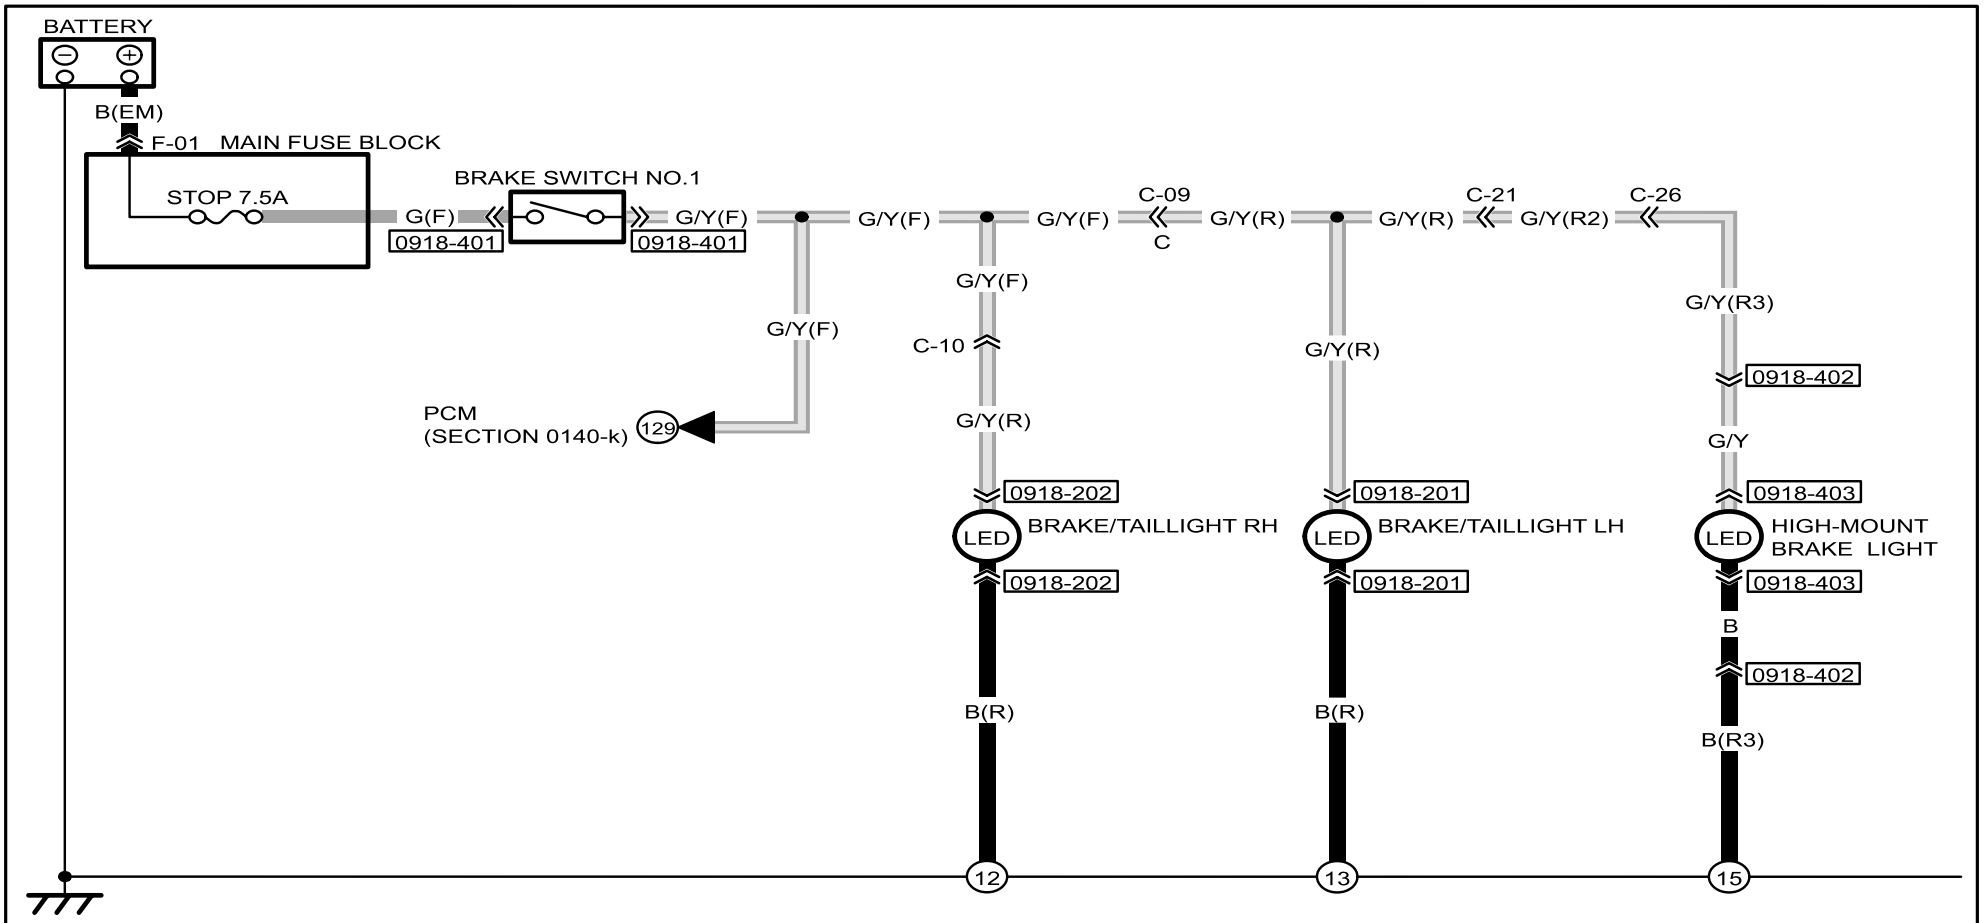


0918-201
BRAKE/TAILLIGHT LH /
REAR SIDE MARKER LIGHT LH /
BRAKE LIGHT LH /
REAR TURN LIGHT LH

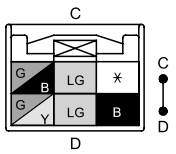

0918-202
BRAKE/TAILLIGHT RH /
REAR SIDE MARKER LIGHT RH /
BRAKE LIGHT RH /
REAR TURN LIGHT RH

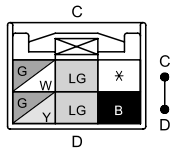

0918-401
BRAKE SWITCH NO.1 /
BRAKE SWITCH NO.2




0918-402
REAR NO.3 HARNESS-SHORT CORD




0918-403
HIGH-MOUNT
BRAKE LIGHT




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

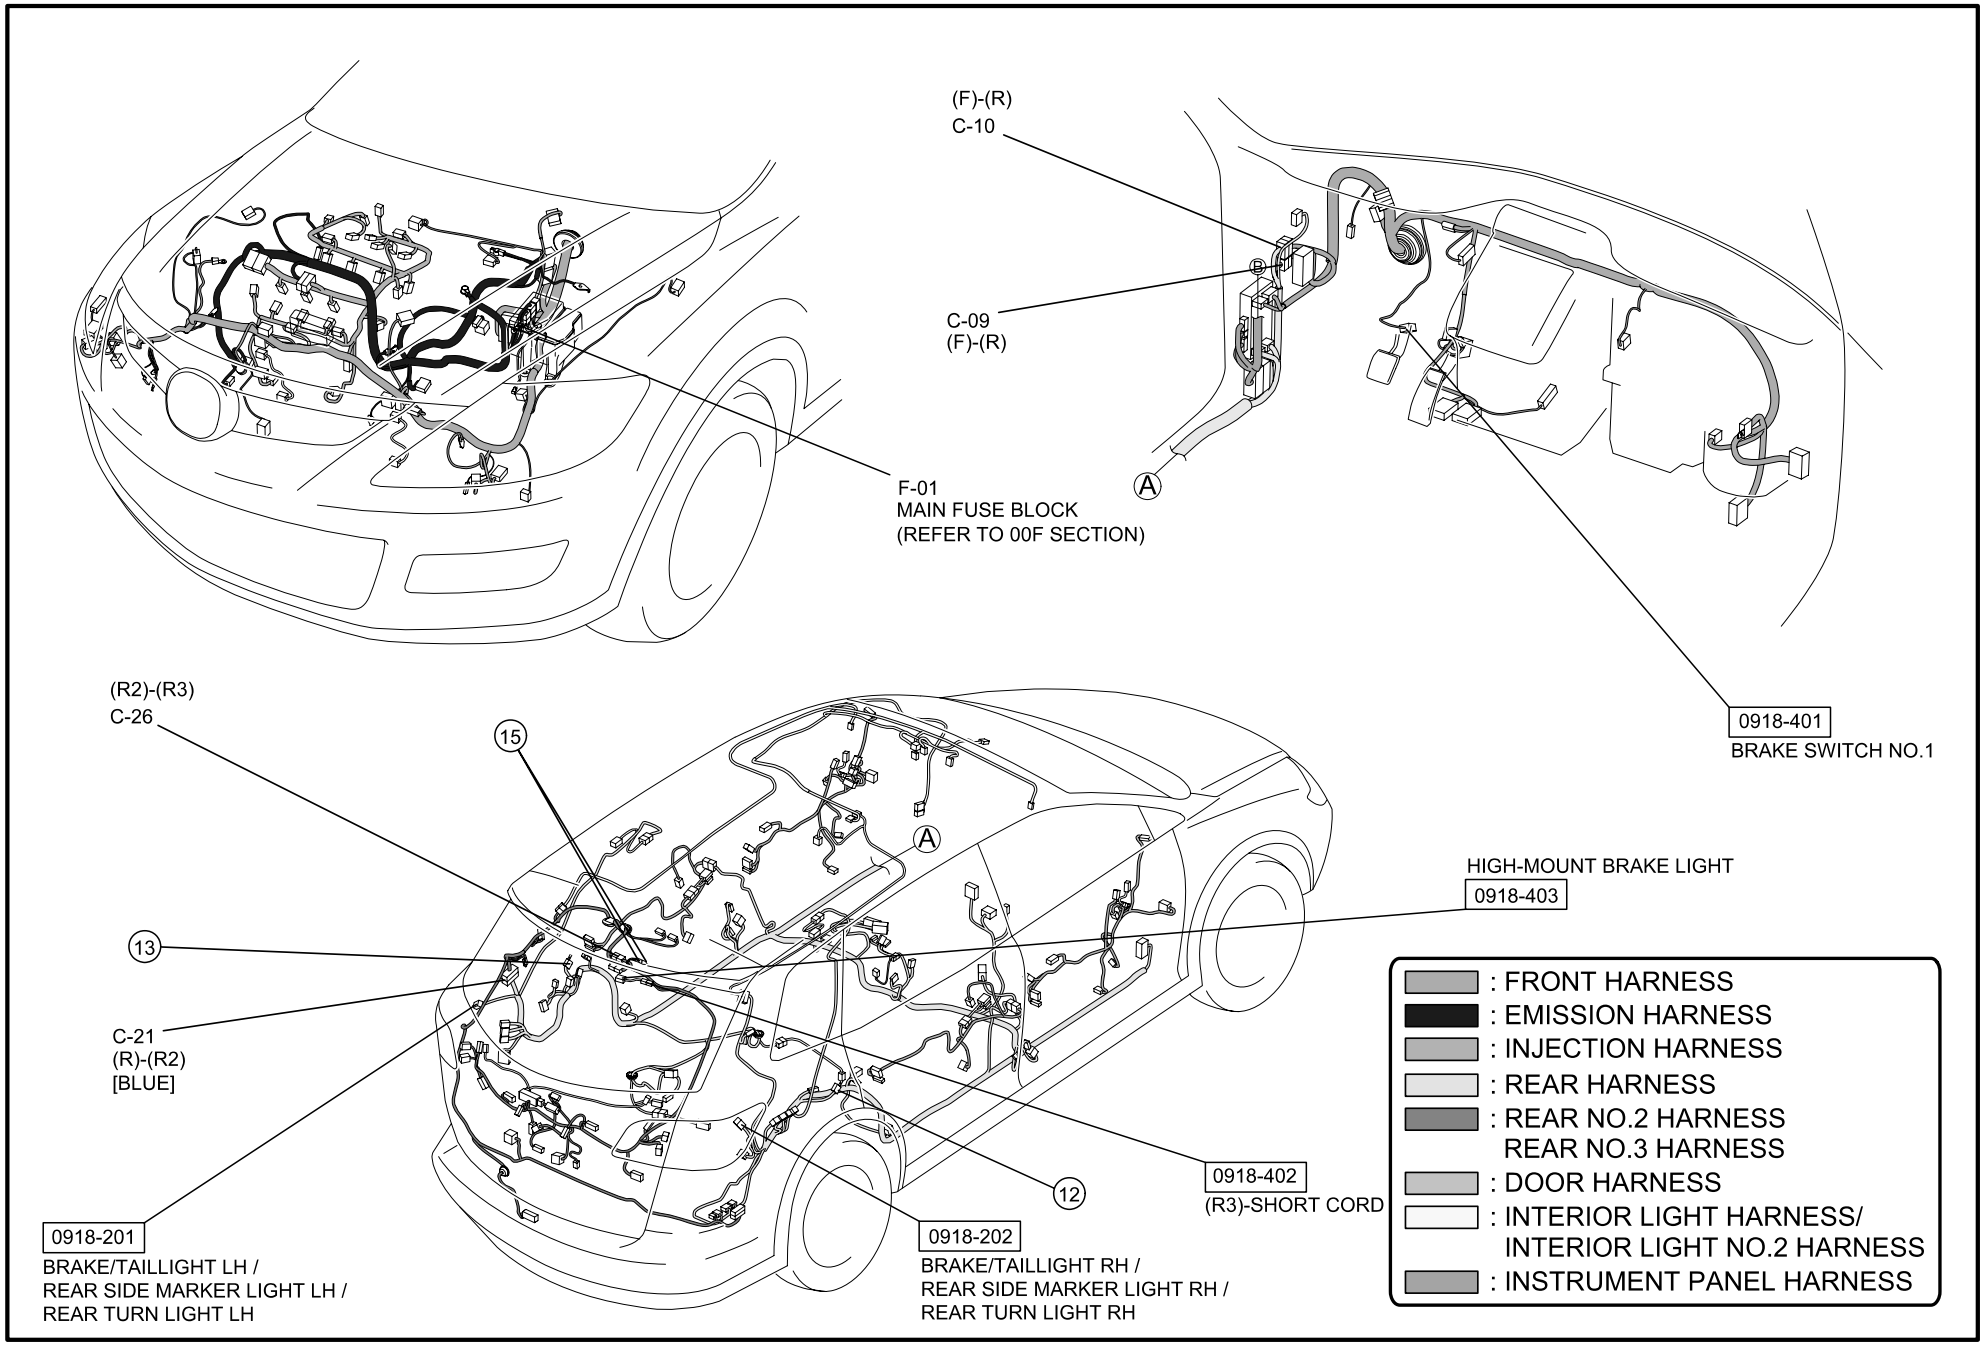

(F)-(R)
C-10
C-09
(F)-(R)
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
A
0918-401
BRAKE SWITCH NO.1
(R2)-(R3)
C-26
15
A
HIGH-MOUNT BRAKE LIGHT
0918-403
13
C-21
(R)-(R2)
[BLUE]
12
0918-402
(R3)-SHORT CORD
0918-201
BRAKE/TAILLIGHT LH /
REAR SIDE MARKER LIGHT LH /
REAR TURN LIGHT LH
0918-202
BRAKE/TAILLIGHT RH /
REAR SIDE MARKER LIGHT RH /
REAR TURN LIGHT RH
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

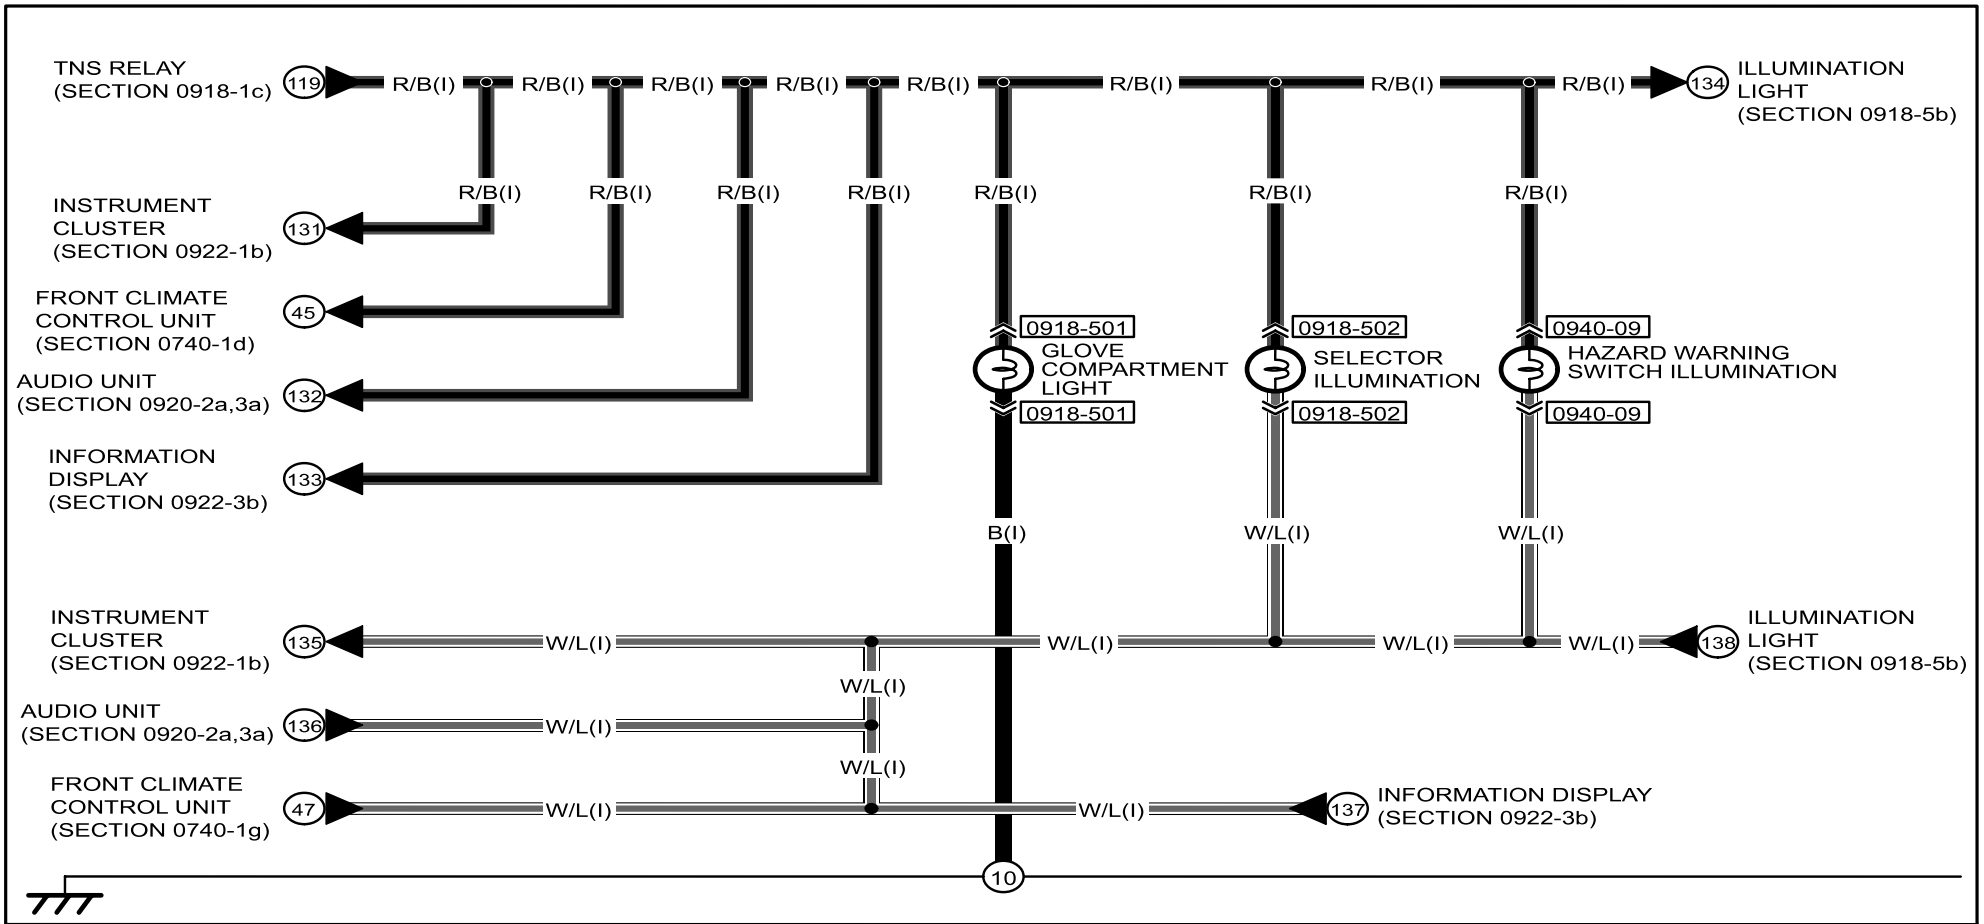


0918-501
GLOVE COMPARTMENT LIGHT

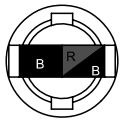


0918-502
SELECTOR ILLUMINATION




0940-09
HAZARD WARNING SWITCH ILLUMINATION /
HAZARD WARNING SWITCH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

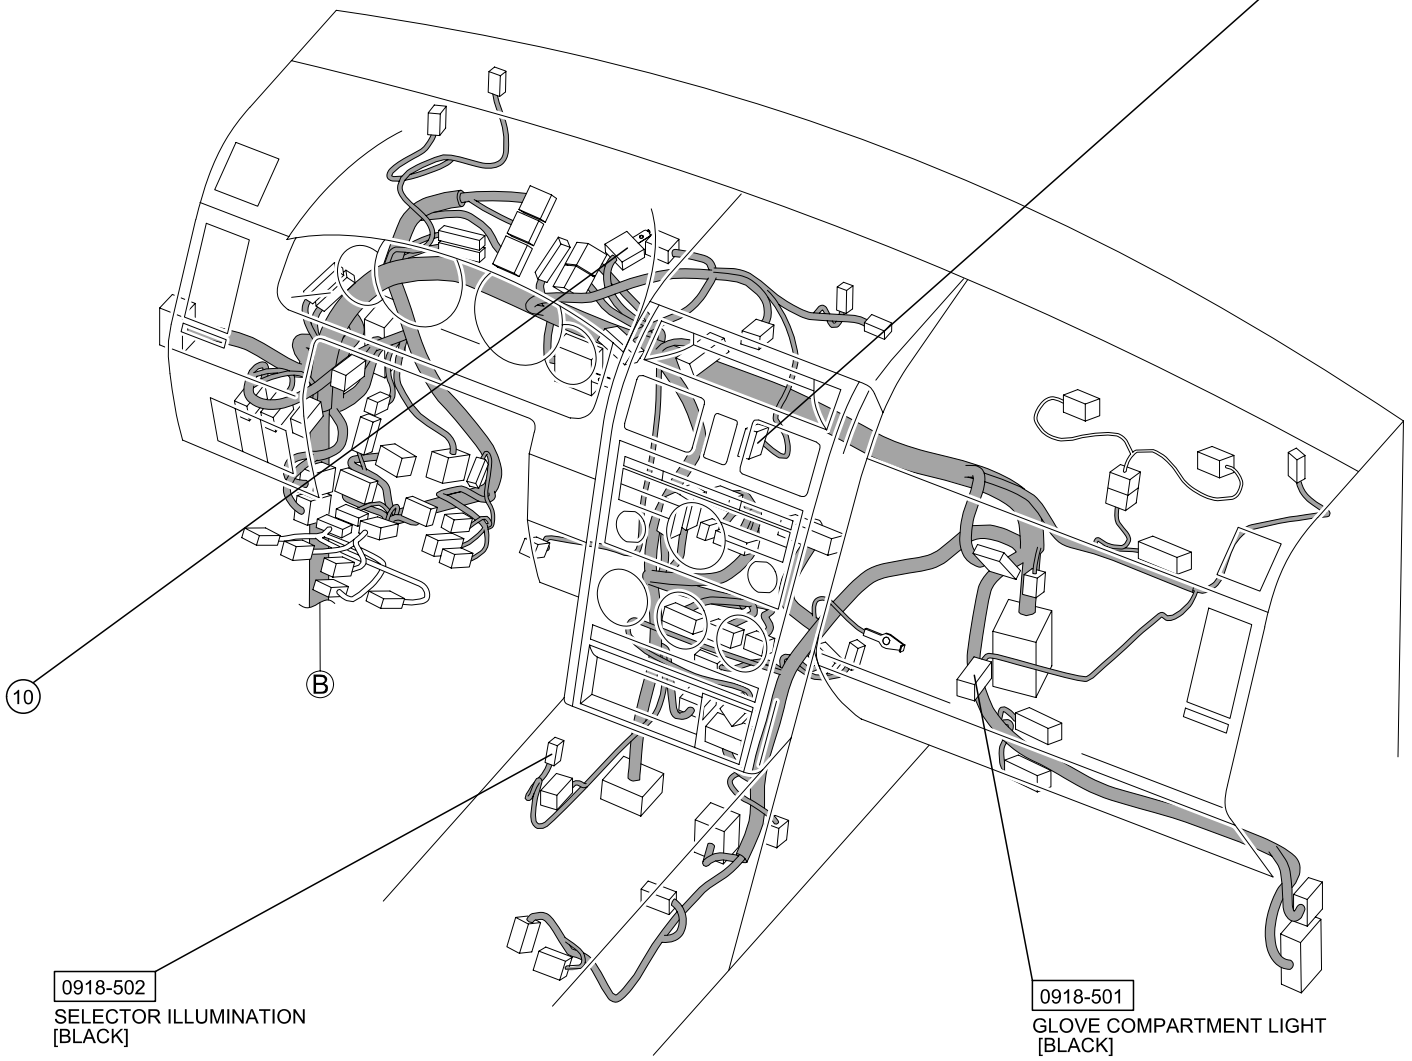

HAZARD WARNING SWITCH
ILLUMINATION /
HAZARD WARNING SWITCH
0940-09
10
B
0918-502
SELECTOR ILLUMINATION
[BLACK]
0918-501
GLOVE COMPARTMENT LIGHT
[BLACK]
: INSTRUMENT PANEL HARNESS

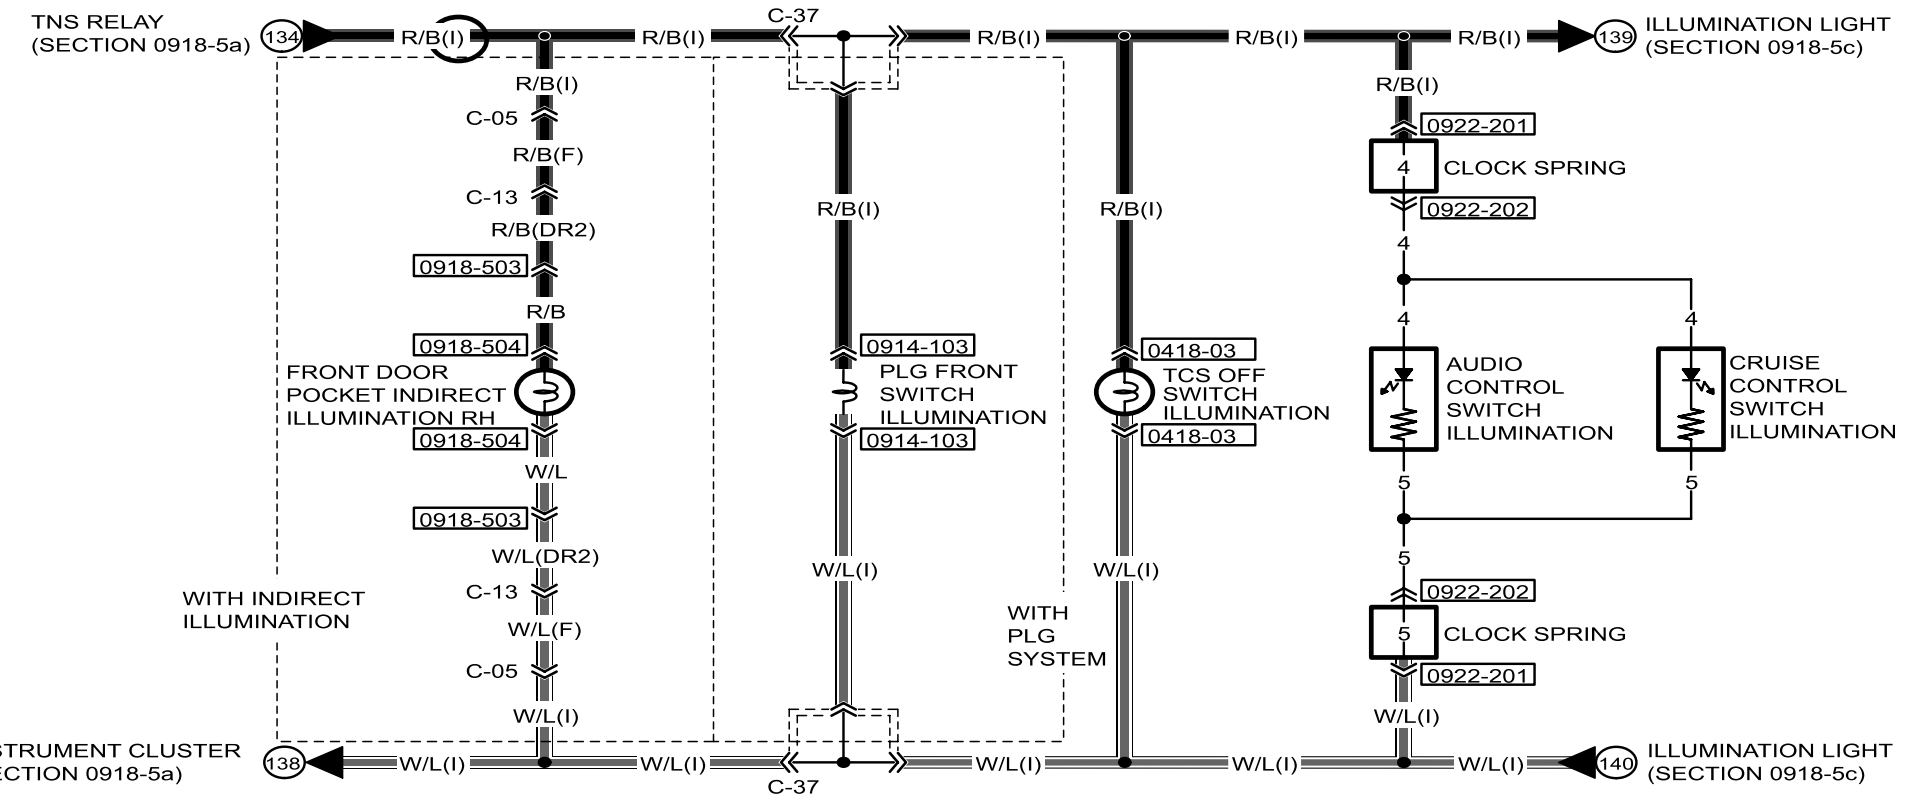


0418-03
TCS OFF SWITCH /
TCS OFF SWITCH
ILLUMINATION



0914-103
PLG FRONT SWITCH /
PLG FRONT SWITCH
ILLUMINATION




0922-201
CLOCK SPRING



LG : WITH CAR-NAVIGATION SYSTEM, WITH HANDS-FREE TELEPHONE UNIT

0922-202
CRUISE CONTROL SWITCH /
AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION/
CRUISE CONTROL SWITCH ILLUMINATION /
CLOCK SPRING




6 : WITH HANDS-FREE TELEPHONE UNIT
TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0918-504
FRONT DOOR POCKET
INDIRECT ILLUMINATION RH




0918-503
DOOR NO.2
HARNESS-
SHORT CORD


DOOR NO.2 HARNESS




SHORT CORD




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

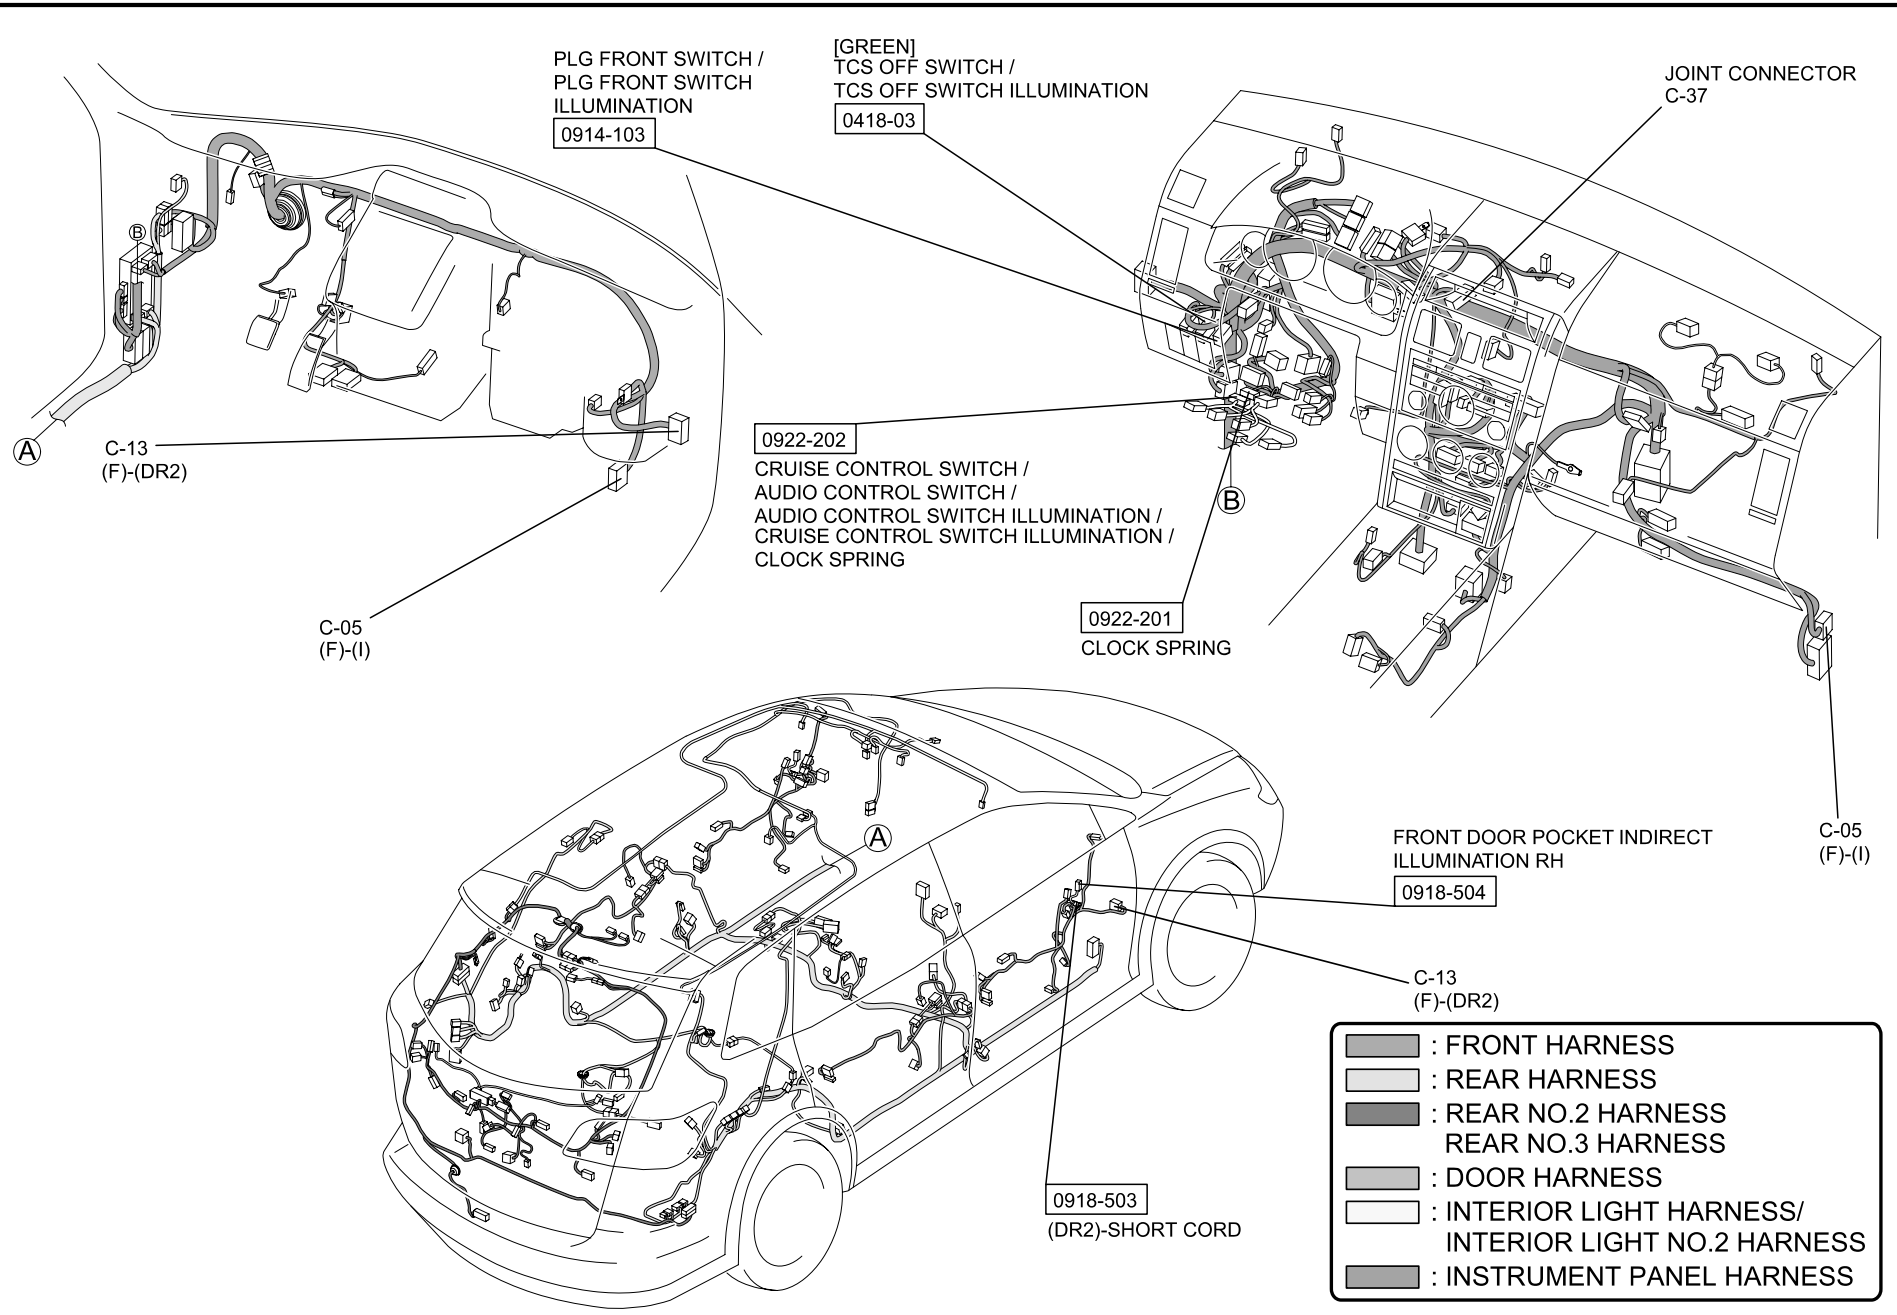
PLG FRONT SWITCH /
PLG FRONT SWITCH
ILLUMINATION
0914-103
[GREEN]
TCS OFF SWITCH /
TCS OFF SWITCH ILLUMINATION
0418-03
JOINT CONNECTOR
C-37
A
C-13
(F)-(DR2)
C-05
(F)-(I)
0922-202
CRUISE CONTROL SWITCH /
AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
CLOCK SPRING
B
0922-201
CLOCK SPRING
FRONT DOOR POCKET INDIRECT
ILLUMINATION RH
0918-504
C-05
(F)-(I)
C-13
(F)-(DR2)
0918-503
(DR2)-SHORT CORD
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

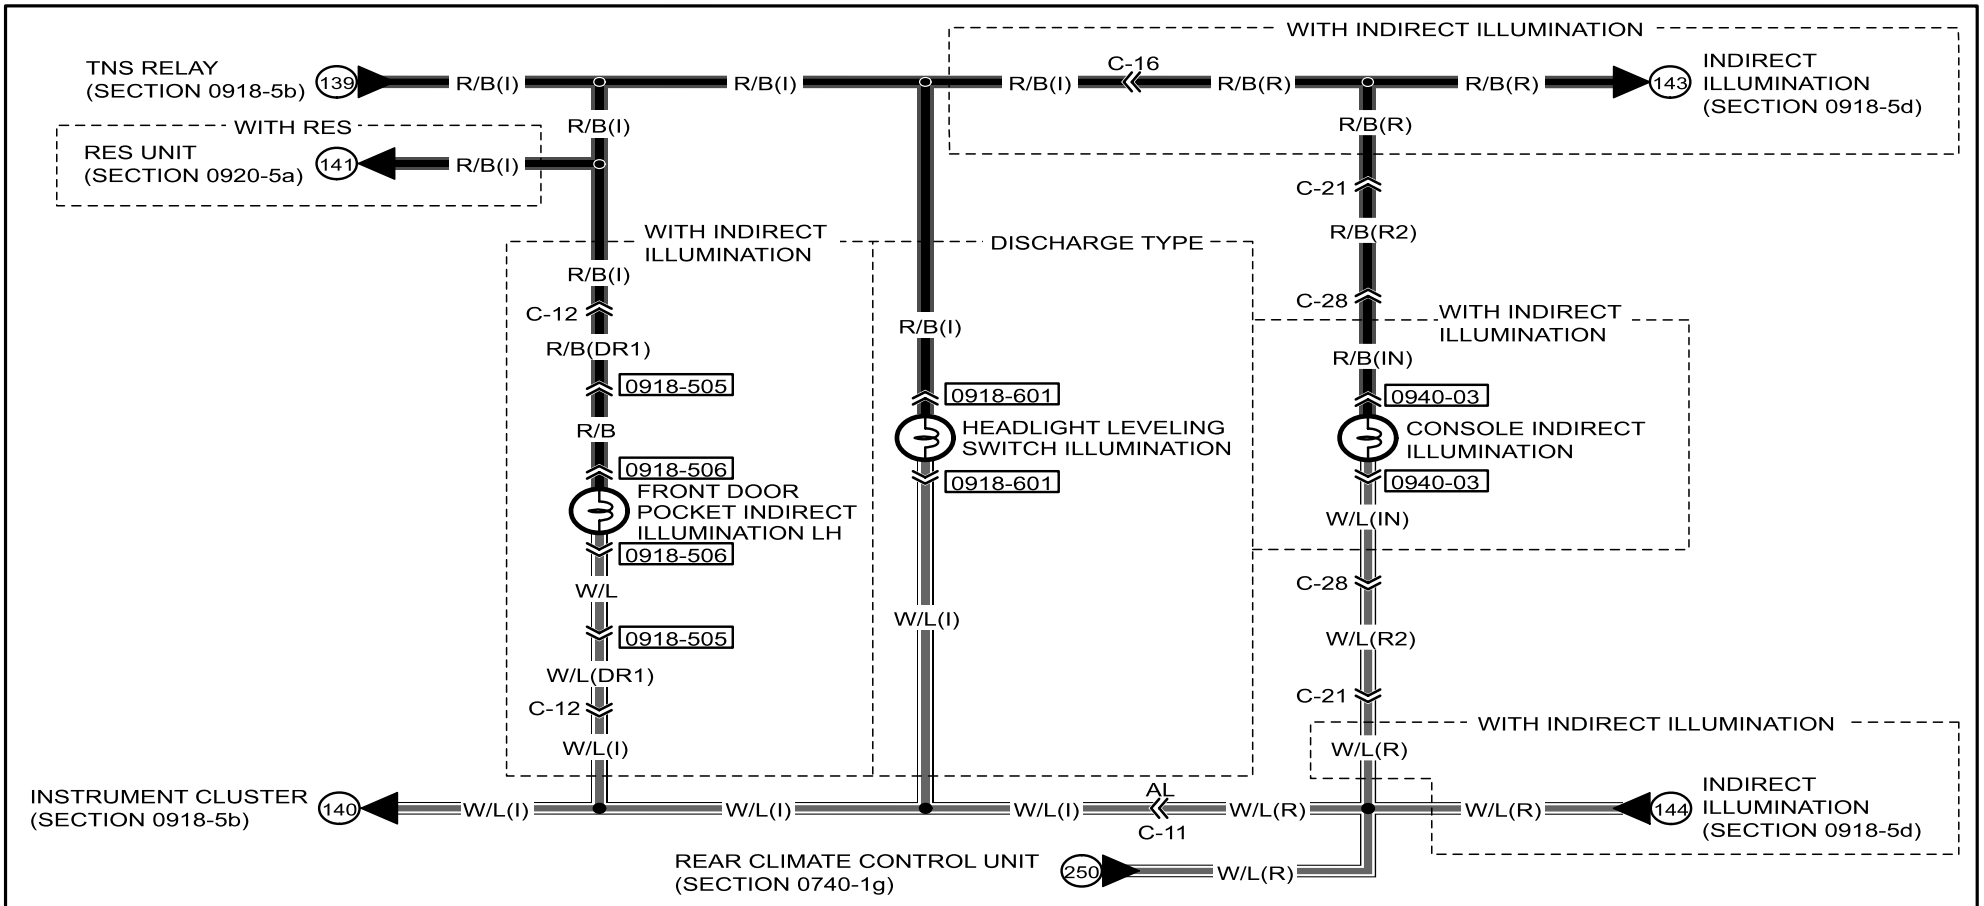


0918-505
DOOR NO.1 HARNESS-SHORT CORD

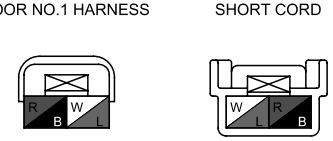


0918-506
FRONT DOOR POCKET INDIRECT ILLUMINATION LH




0918-601
HEADLIGHT LEVELING SWITCH/ HEADLIGHT LEVELING SWITCH ILLUMINATION

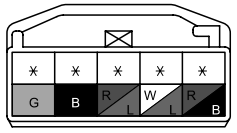


0940-03
CONSOLE INDIRECT ILLUMINATION/ FRONT MAP LIGHT

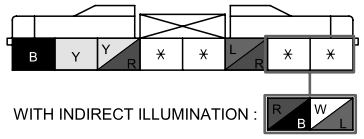


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

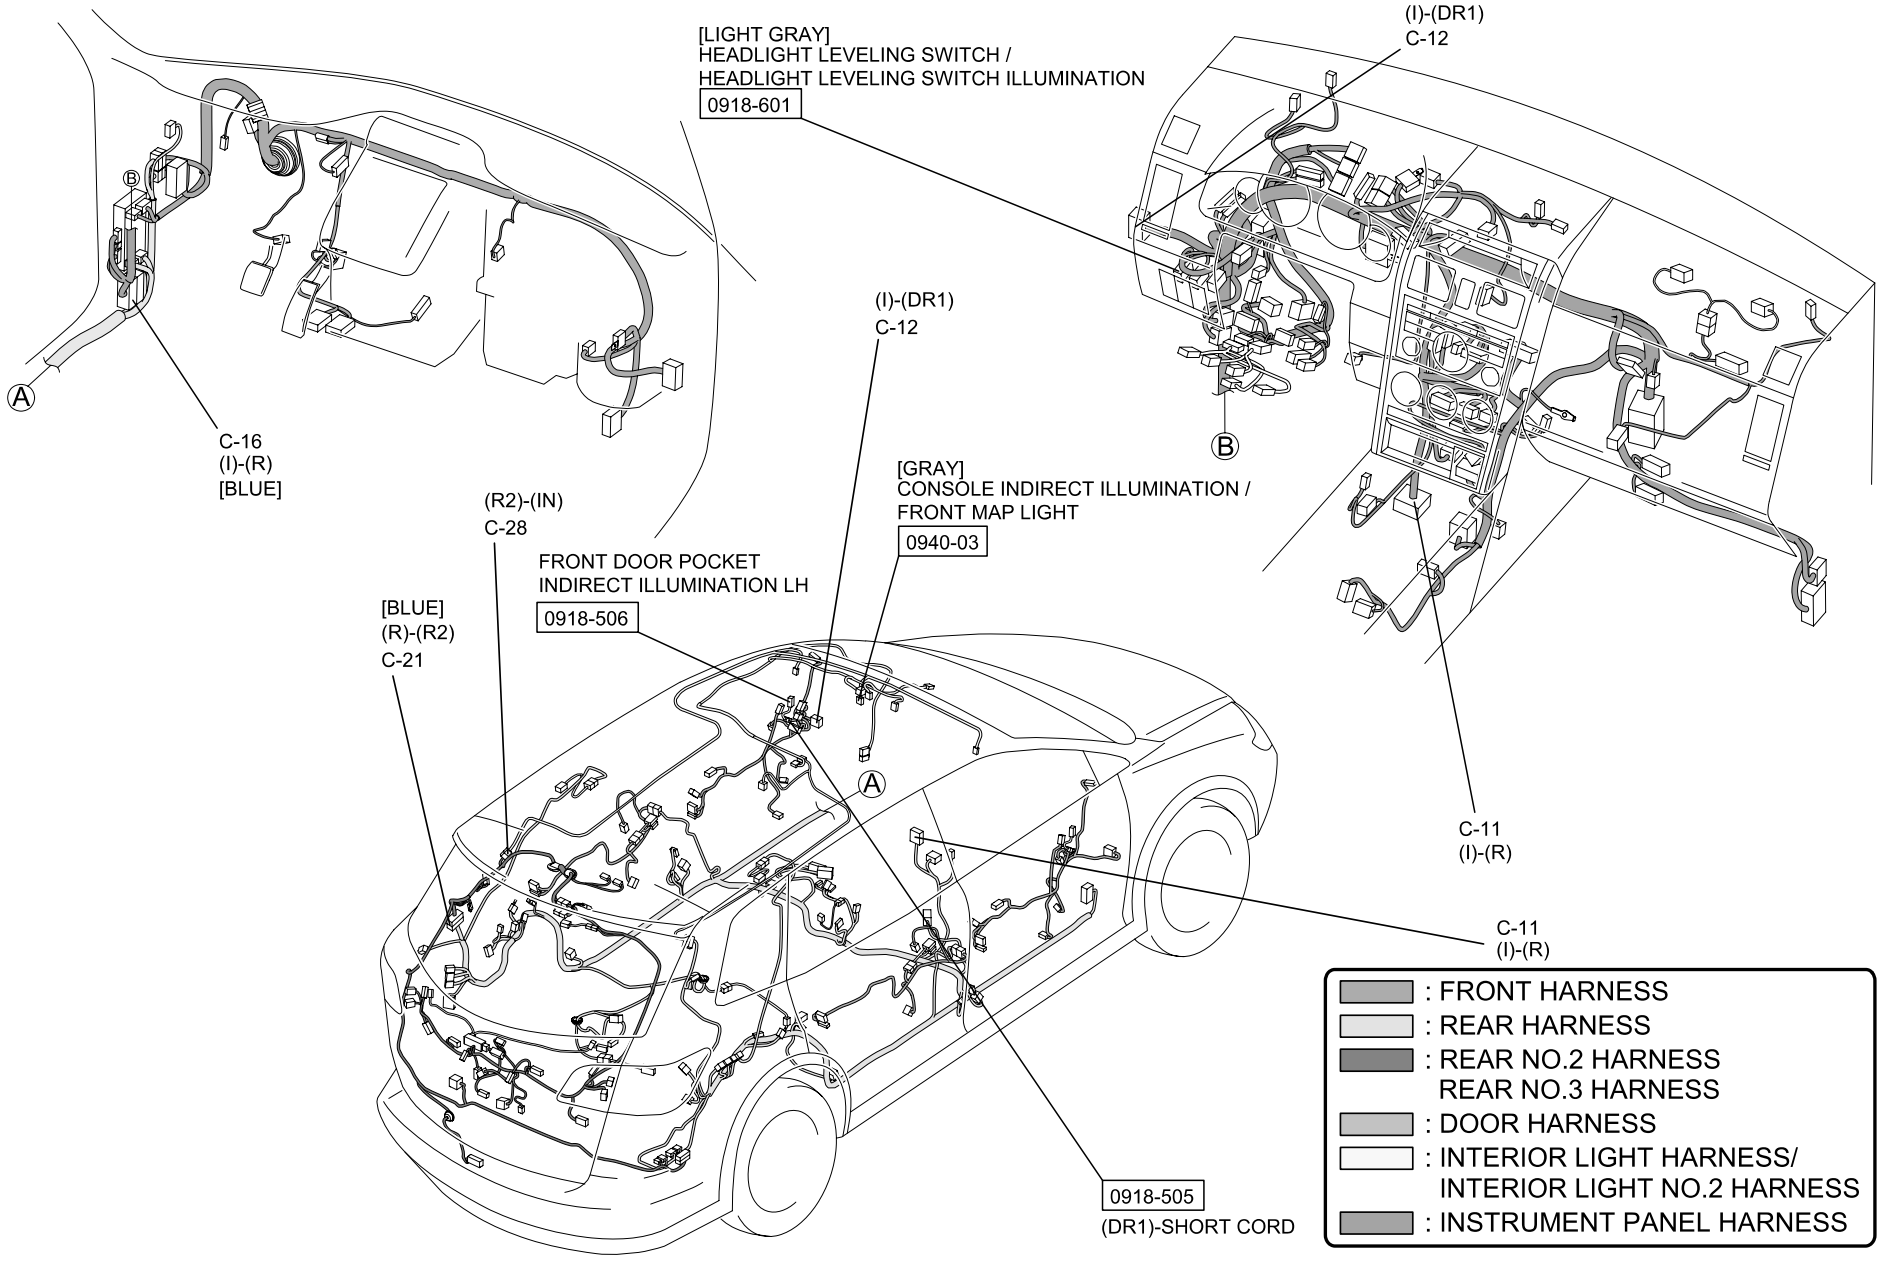

[LIGHT GRAY]
HEADLIGHT LEVELING SWITCH /
HEADLIGHT LEVELING SWITCH ILLUMINATION
0918-601
(I)-(DR1)
C-12
(I)-(DR1)
C-12
C-16
(I)-(R)
[BLUE]
(R2)-(IN)
C-28
[GRAY]
CONSOLE INDIRECT ILLUMINATION /
FRONT MAP LIGHT
0940-03
FRONT DOOR POCKET
INDIRECT ILLUMINATION LH
0918-506
[BLUE]
(R)-(R2)
C-21
C-11
(I)-(R)
C-11
(I)-(R)
0918-505
(DR1)-SHORT CORD
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

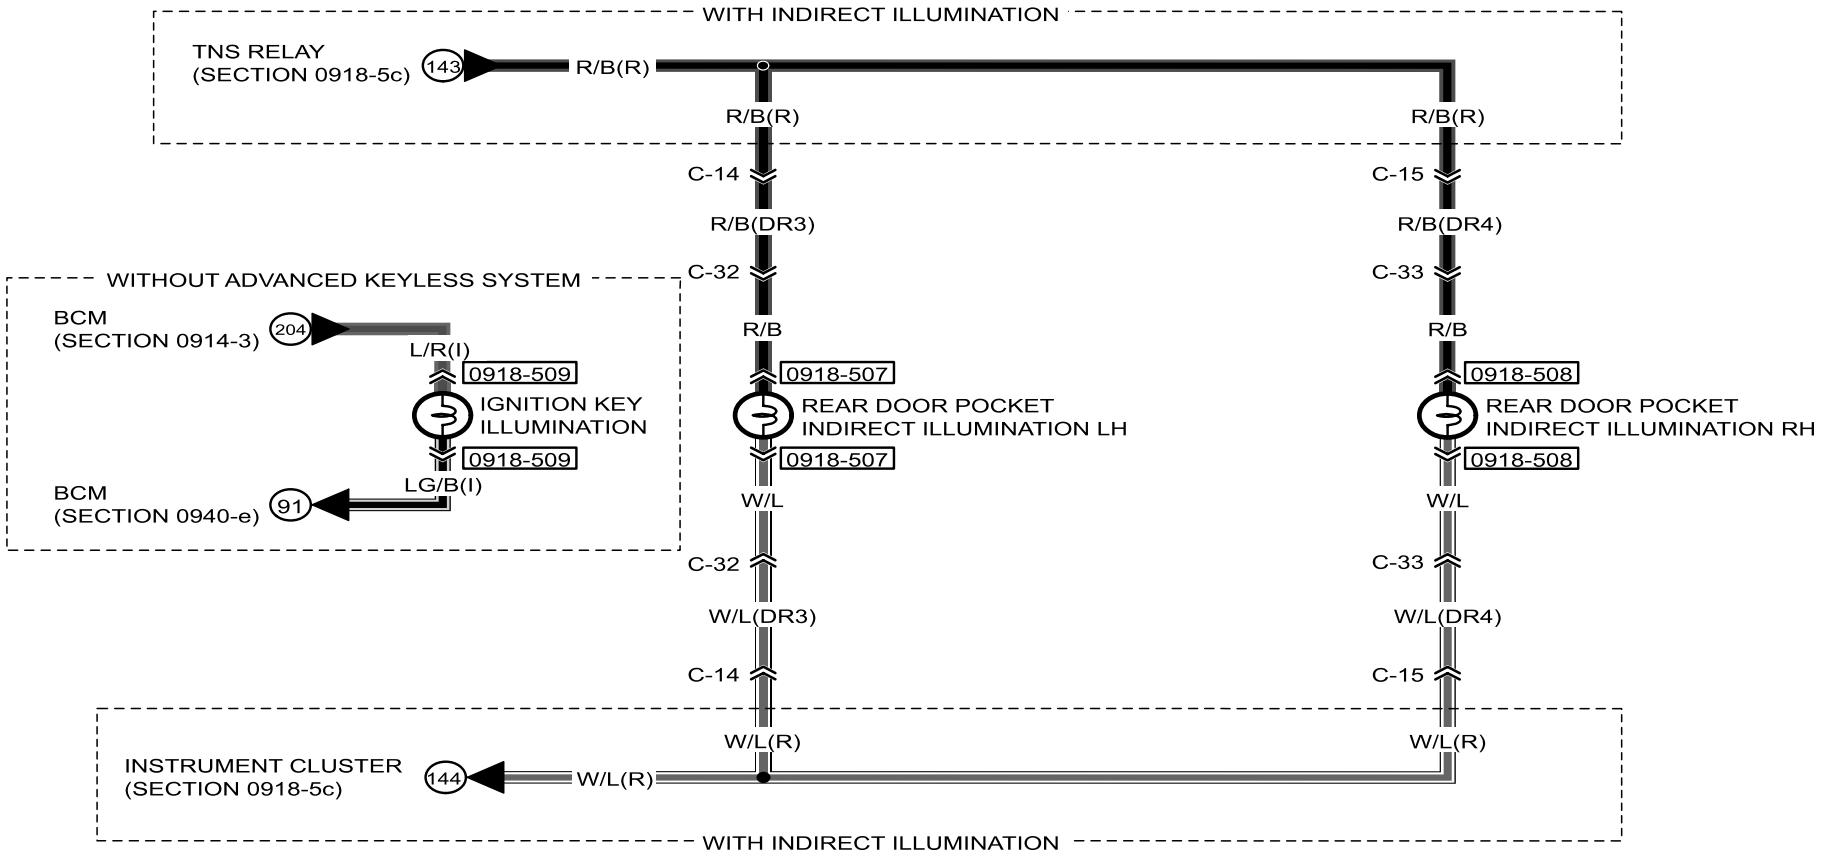


0918-507 REAR DOOR POCKET INDIRECT ILLUMINATION LH	0918-508 REAR DOOR POCKET INDIRECT ILLUMINATION RH	0918-509 IGNITION KEY ILLUMINATION		

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

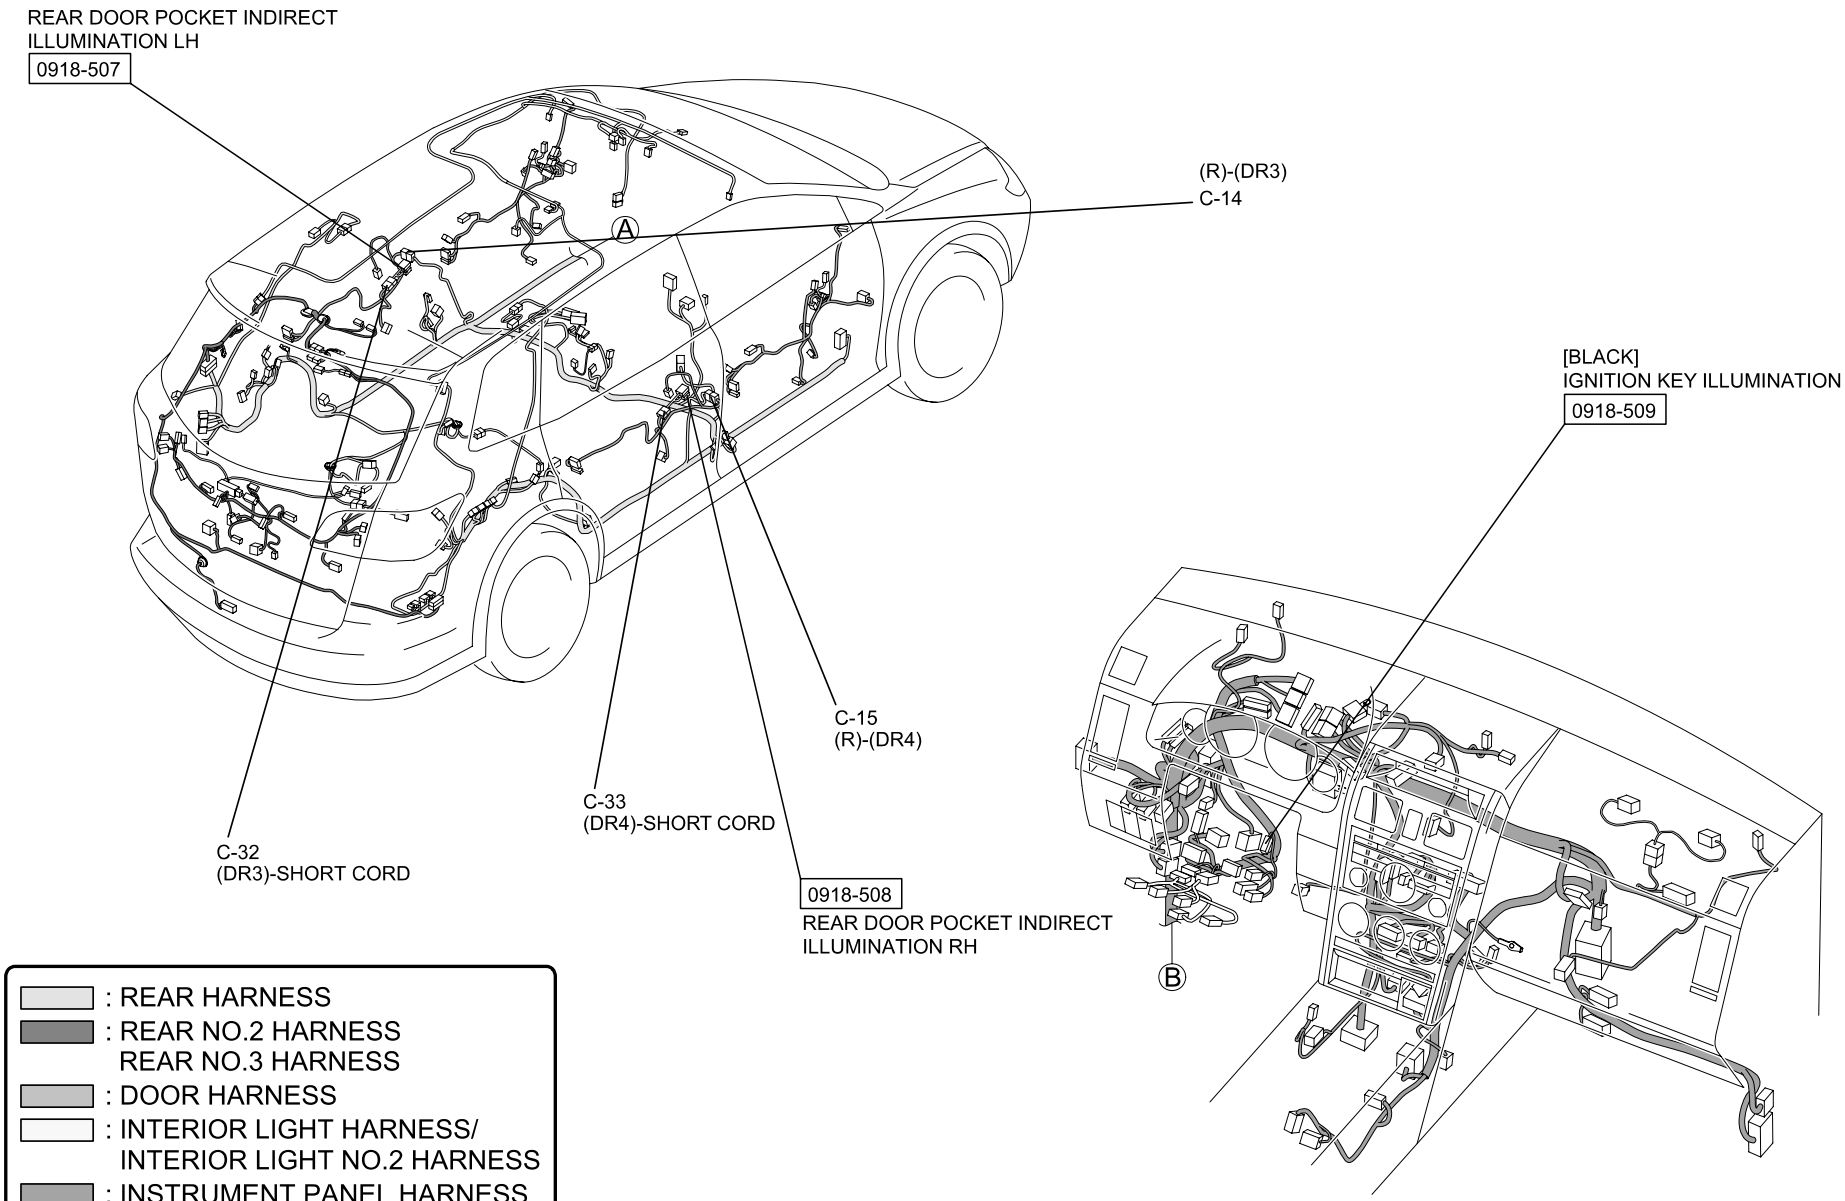

REAR DOOR POCKET INDIRECT
ILLUMINATION LH
0918-507
(R)-(DR3)
C-14
A
[BLACK]
IGNITION KEY ILLUMINATION
0918-509
C-15
(R)-(DR4)
C-33
(DR4)-SHORT CORD
C-32
(DR3)-SHORT CORD
0918-508
REAR DOOR POCKET INDIRECT
ILLUMINATION RH
B
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

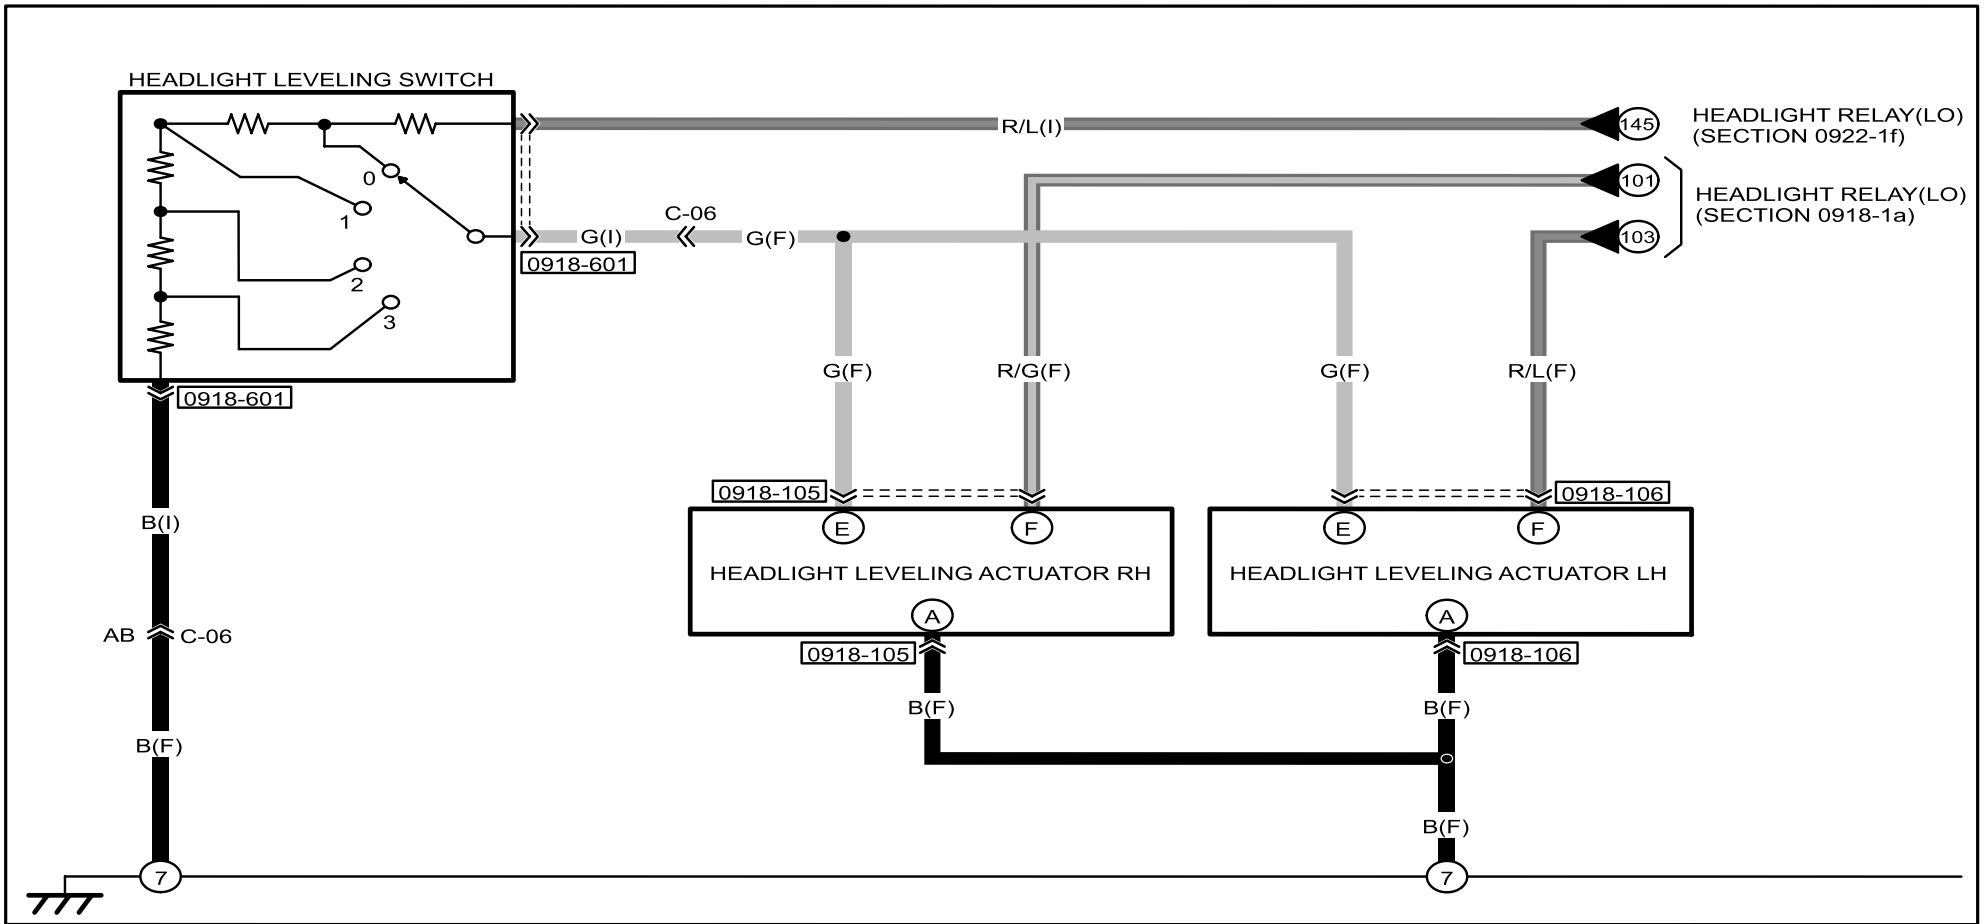


0918-105
HEADLIGHT HIGH RH / HEADLIGHT LOW RH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT RH / HEADLIGHT LEVELING
ACTUATOR RH / FRONT TURN LIGHT RH

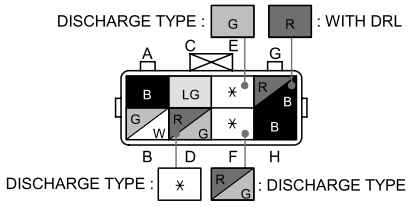


0918-106
HEADLIGHT HIGH LH / HEADLIGHT LOW LH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT LH / HEADLIGHT LEVELING
ACTUATOR LH / FRONT TURN LIGHT LH

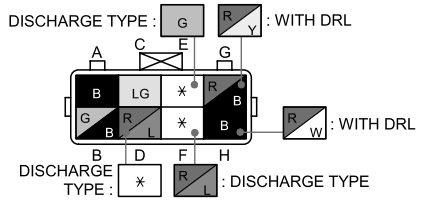


0918-601
HEADLIGHT LEVELING SWITCH/
HEADLIGHT LEVELING
SWITCH ILLUMINATION

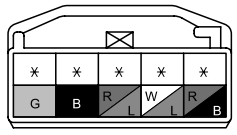


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

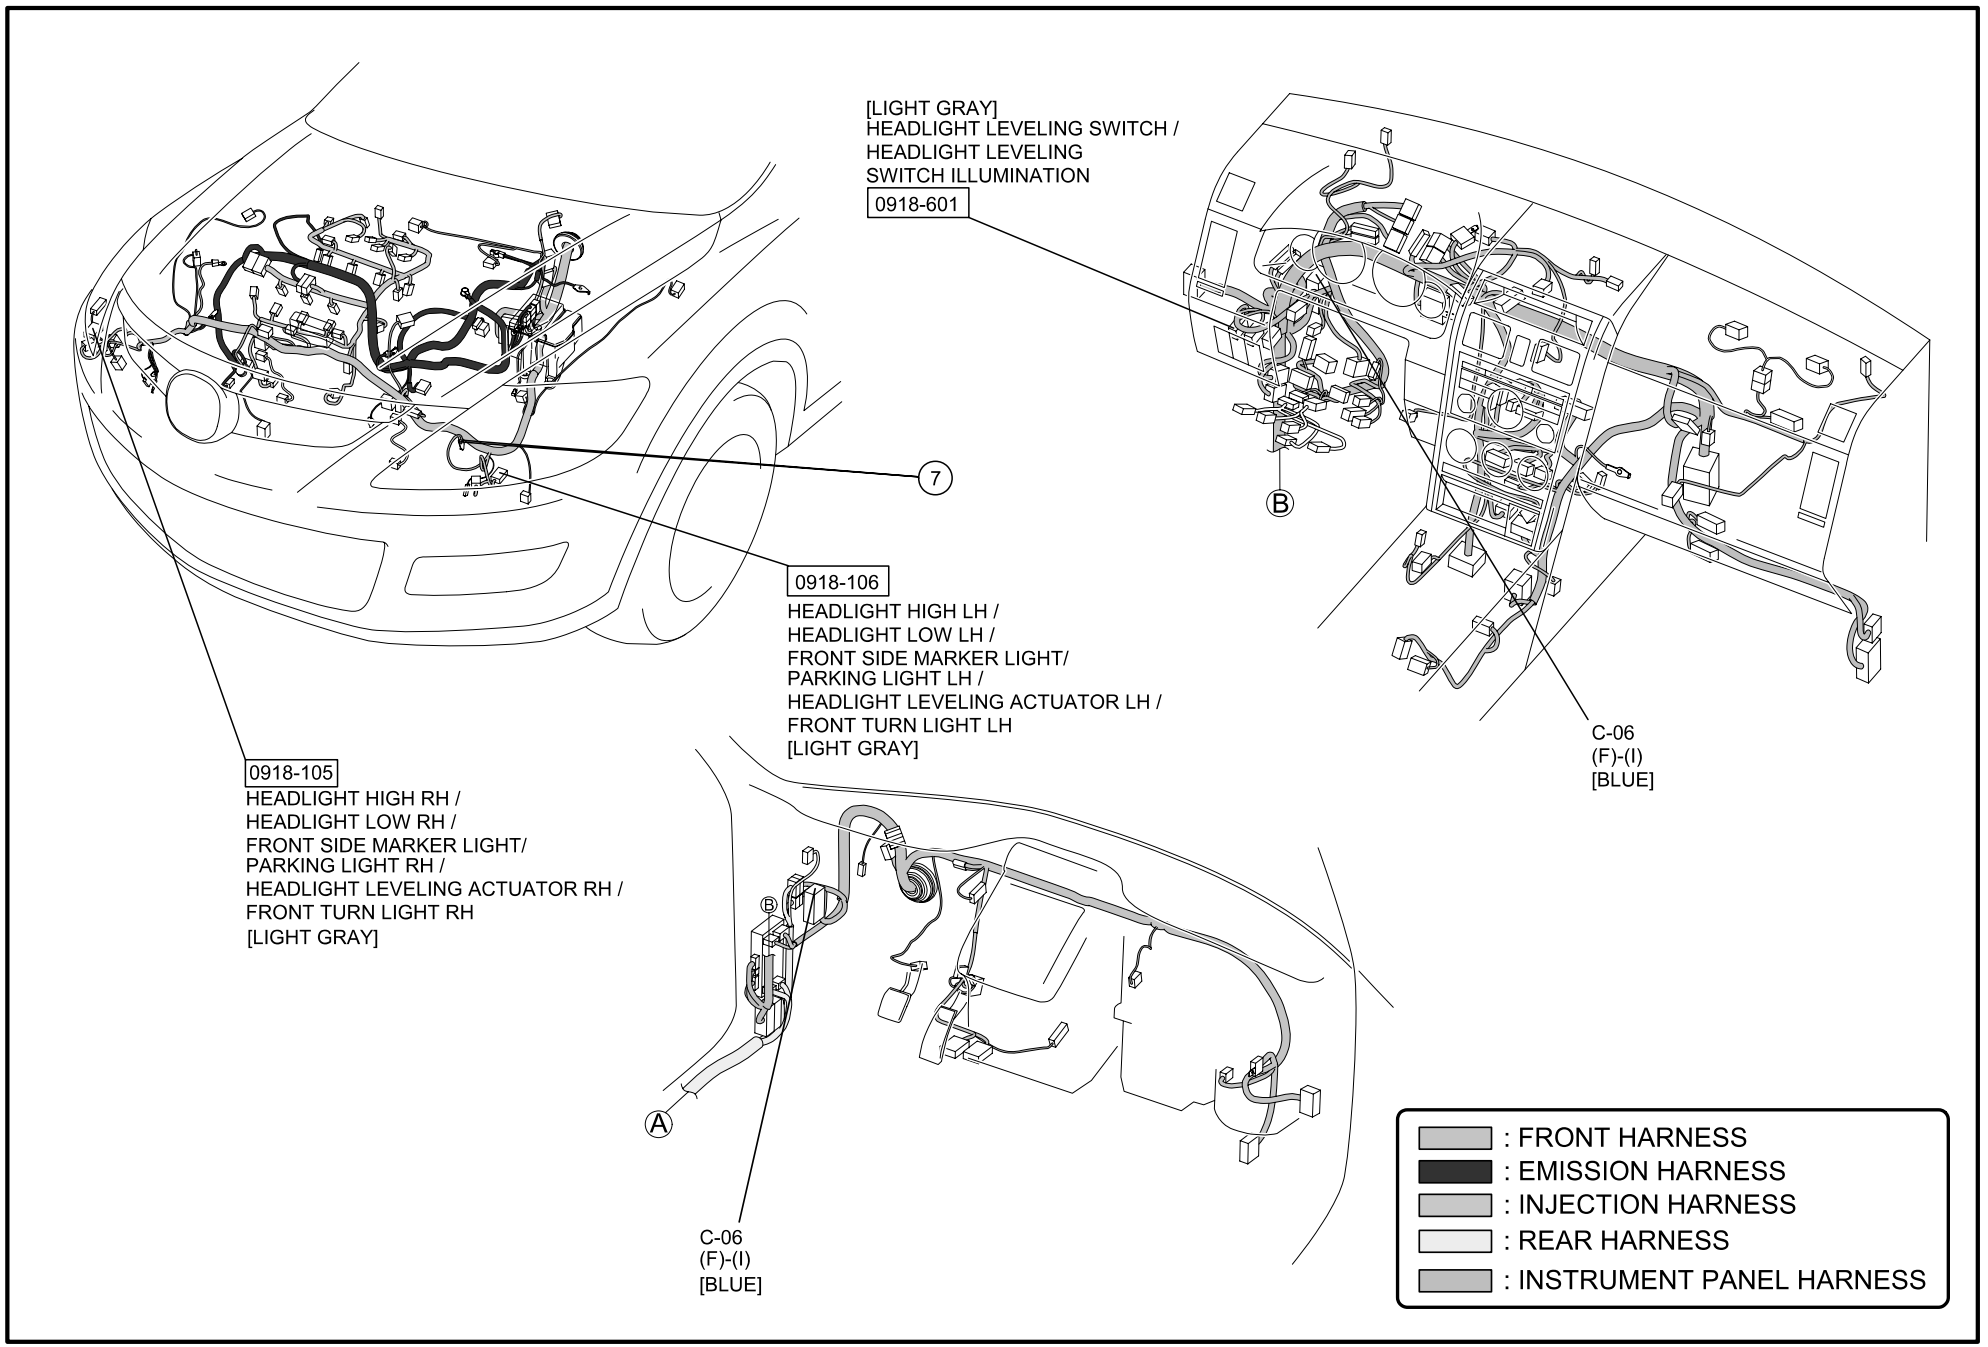

[LIGHT GRAY]
HEADLIGHT LEVELING SWITCH /
HEADLIGHT LEVELING
SWITCH ILLUMINATION
0918-601
7
0918-106
HEADLIGHT HIGH LH /
HEADLIGHT LOW LH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT LH /
HEADLIGHT LEVELING ACTUATOR LH /
FRONT TURN LIGHT LH
[LIGHT GRAY]
B
C-06
(F)-(I)
[BLUE]
0918-105
HEADLIGHT HIGH RH /
HEADLIGHT LOW RH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT RH /
HEADLIGHT LEVELING ACTUATOR RH /
FRONT TURN LIGHT RH
[LIGHT GRAY]
B
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

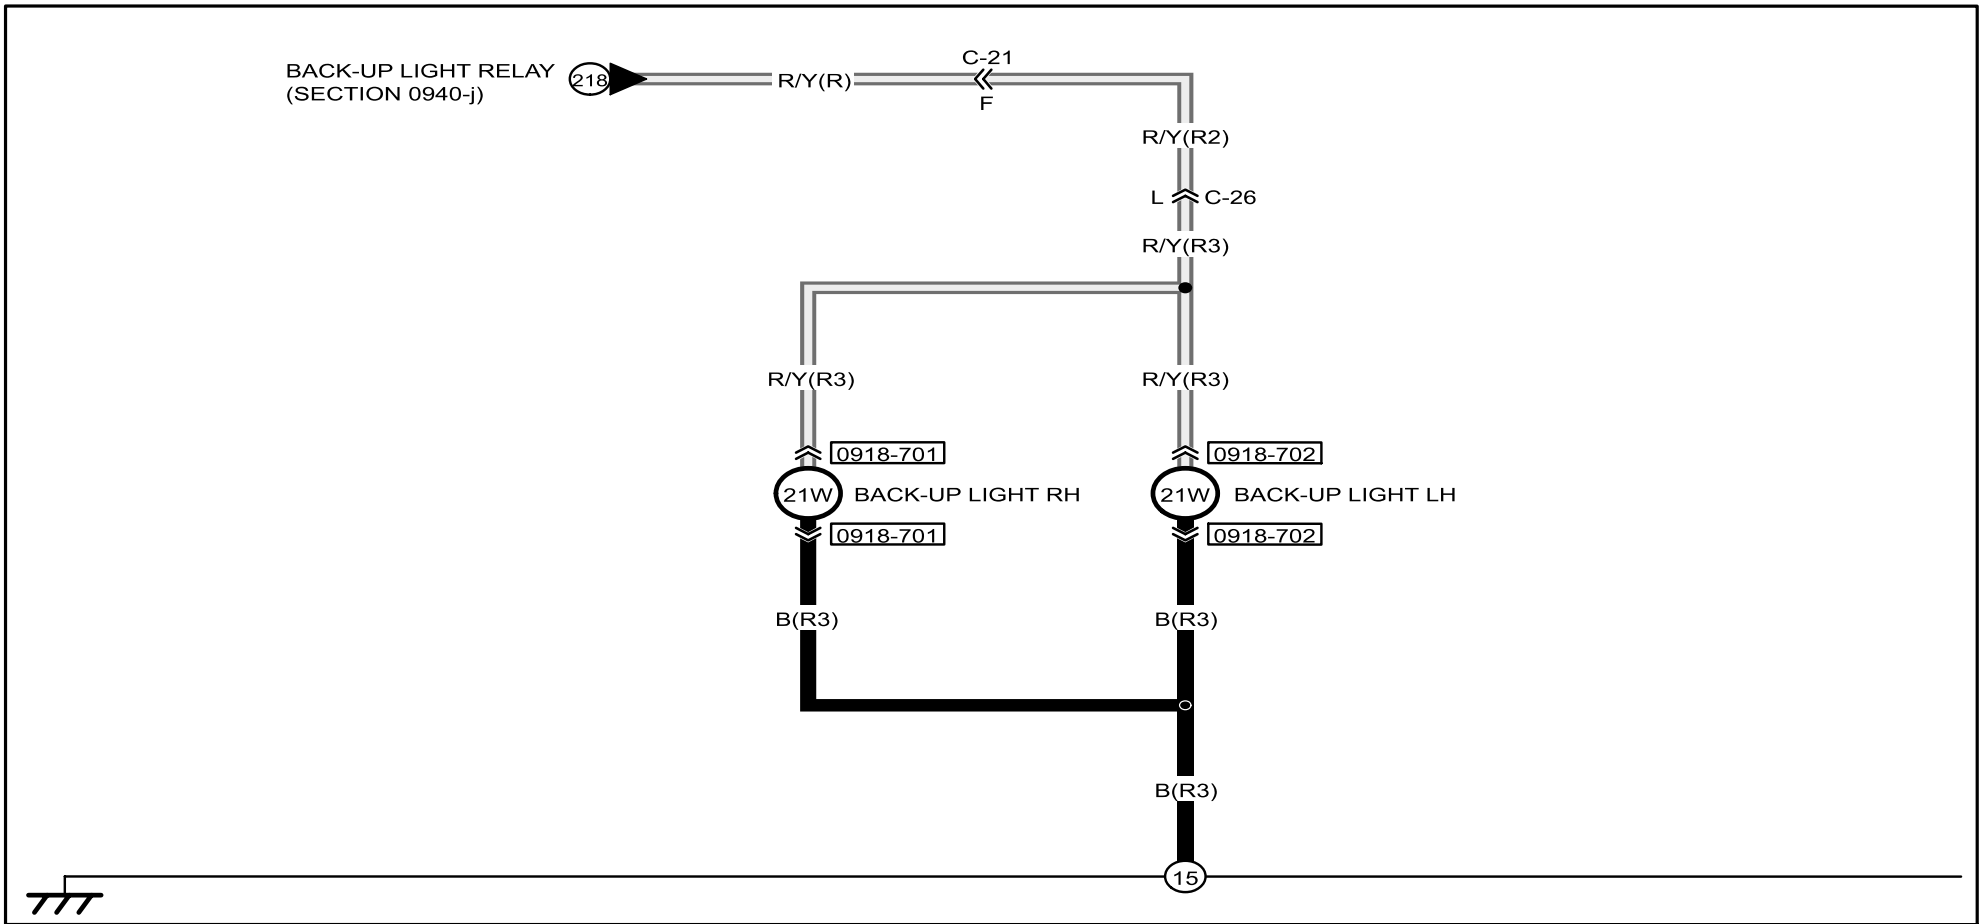


0918-701 BACK-UP LIGHT RH	0918-702 BACK-UP LIGHT LH			

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

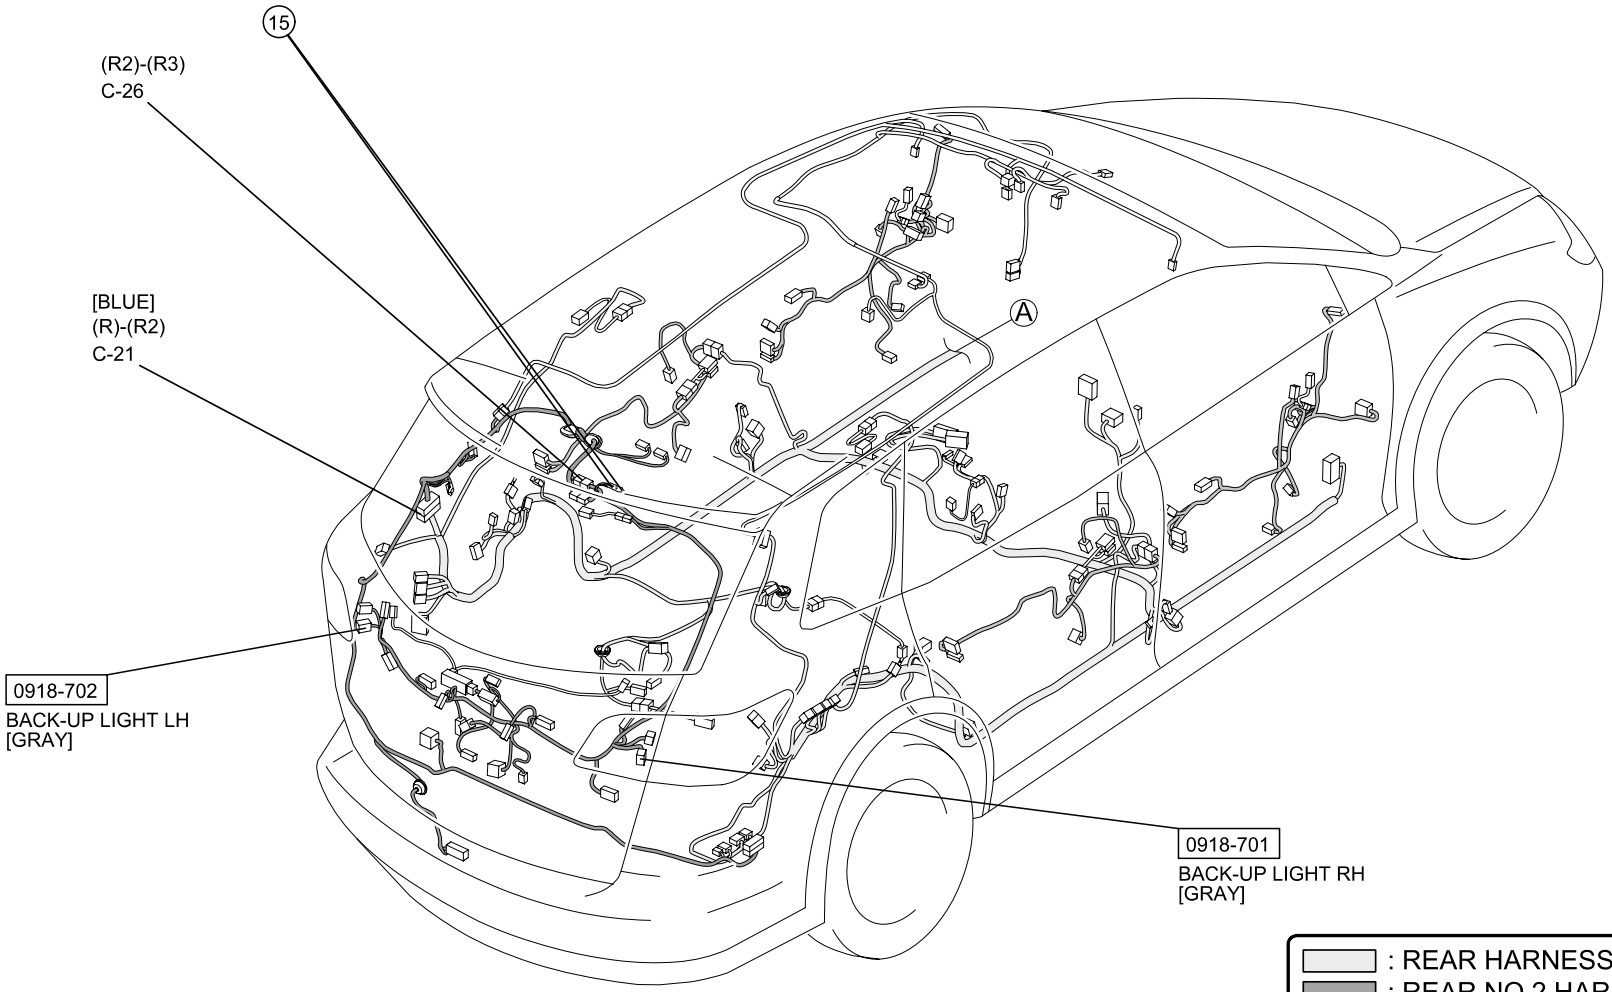

15
(R2)-(R3)
C-26
[BLUE]
(R)-(R2)
C-21
A
0918-702
BACK-UP LIGHT LH
[GRAY]
0918-701
BACK-UP LIGHT RH
[GRAY]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

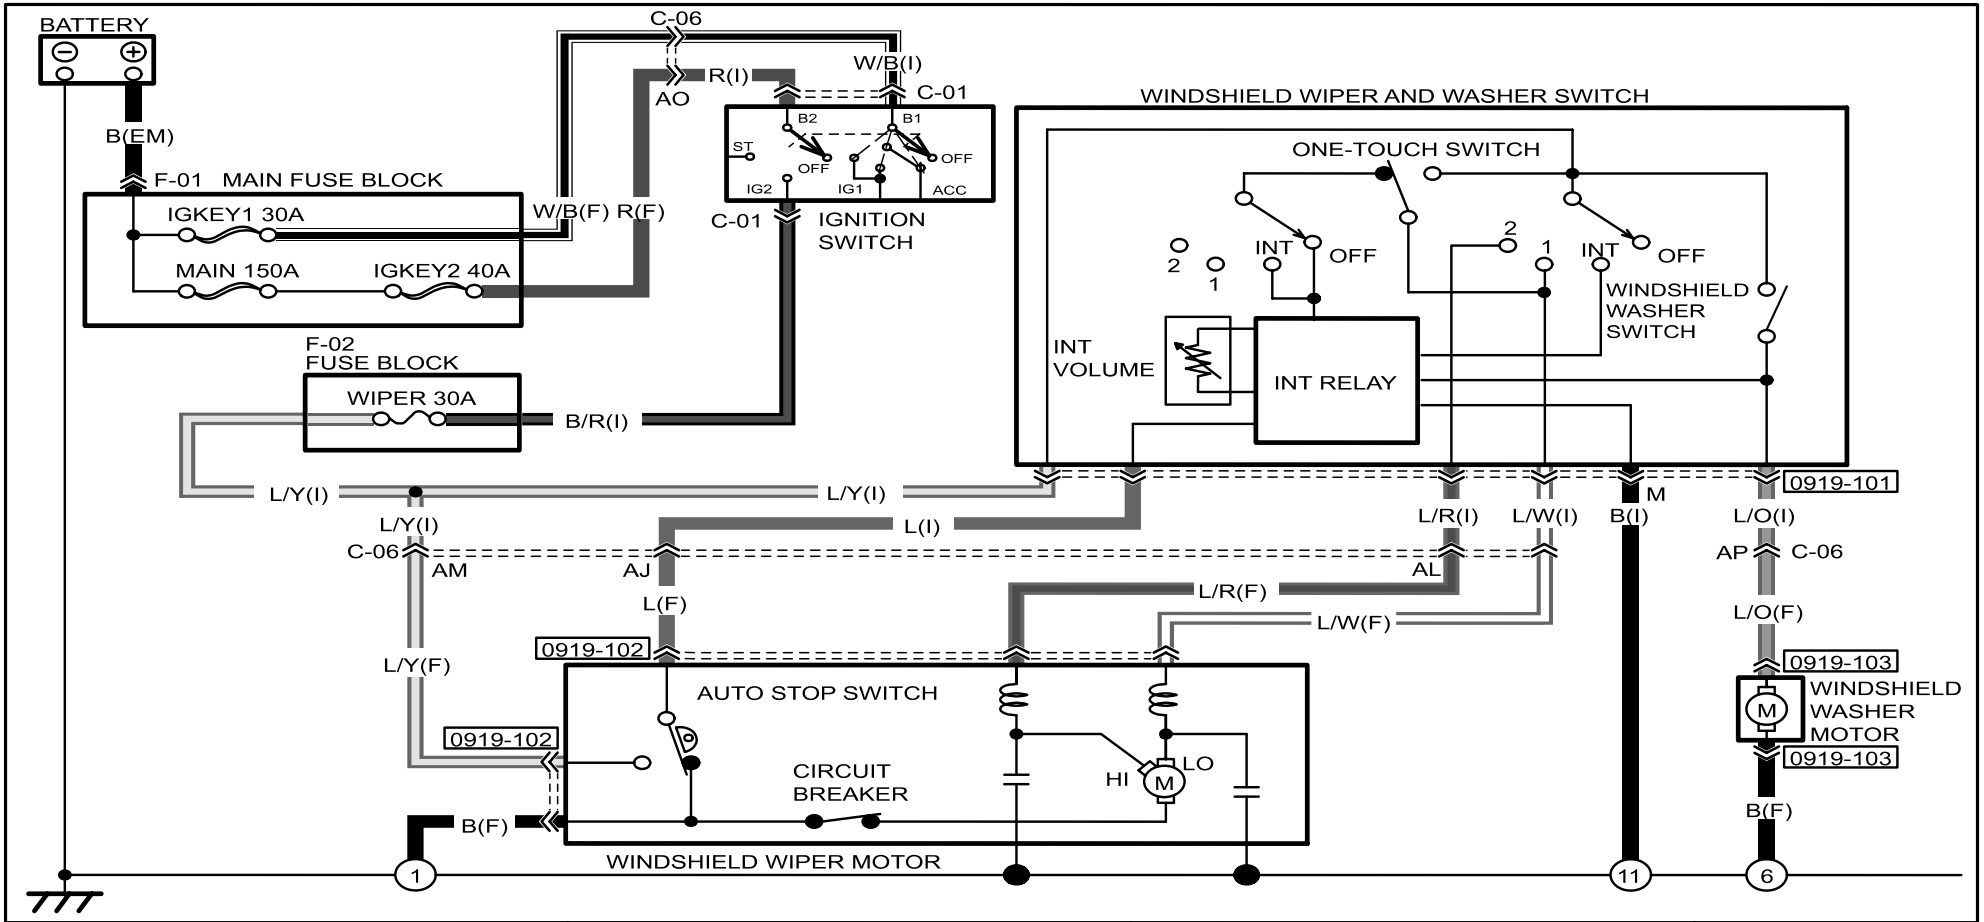


0919-101
WINDSHIELD WIPER AND WASHER SWITCH / REAR WIPER AND WASHER SWITCH




0919-102
WINDSHIELD WIPER MOTOR

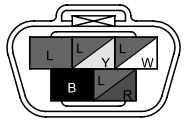


0919-103
WINDSHIELD WASHER MOTOR




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

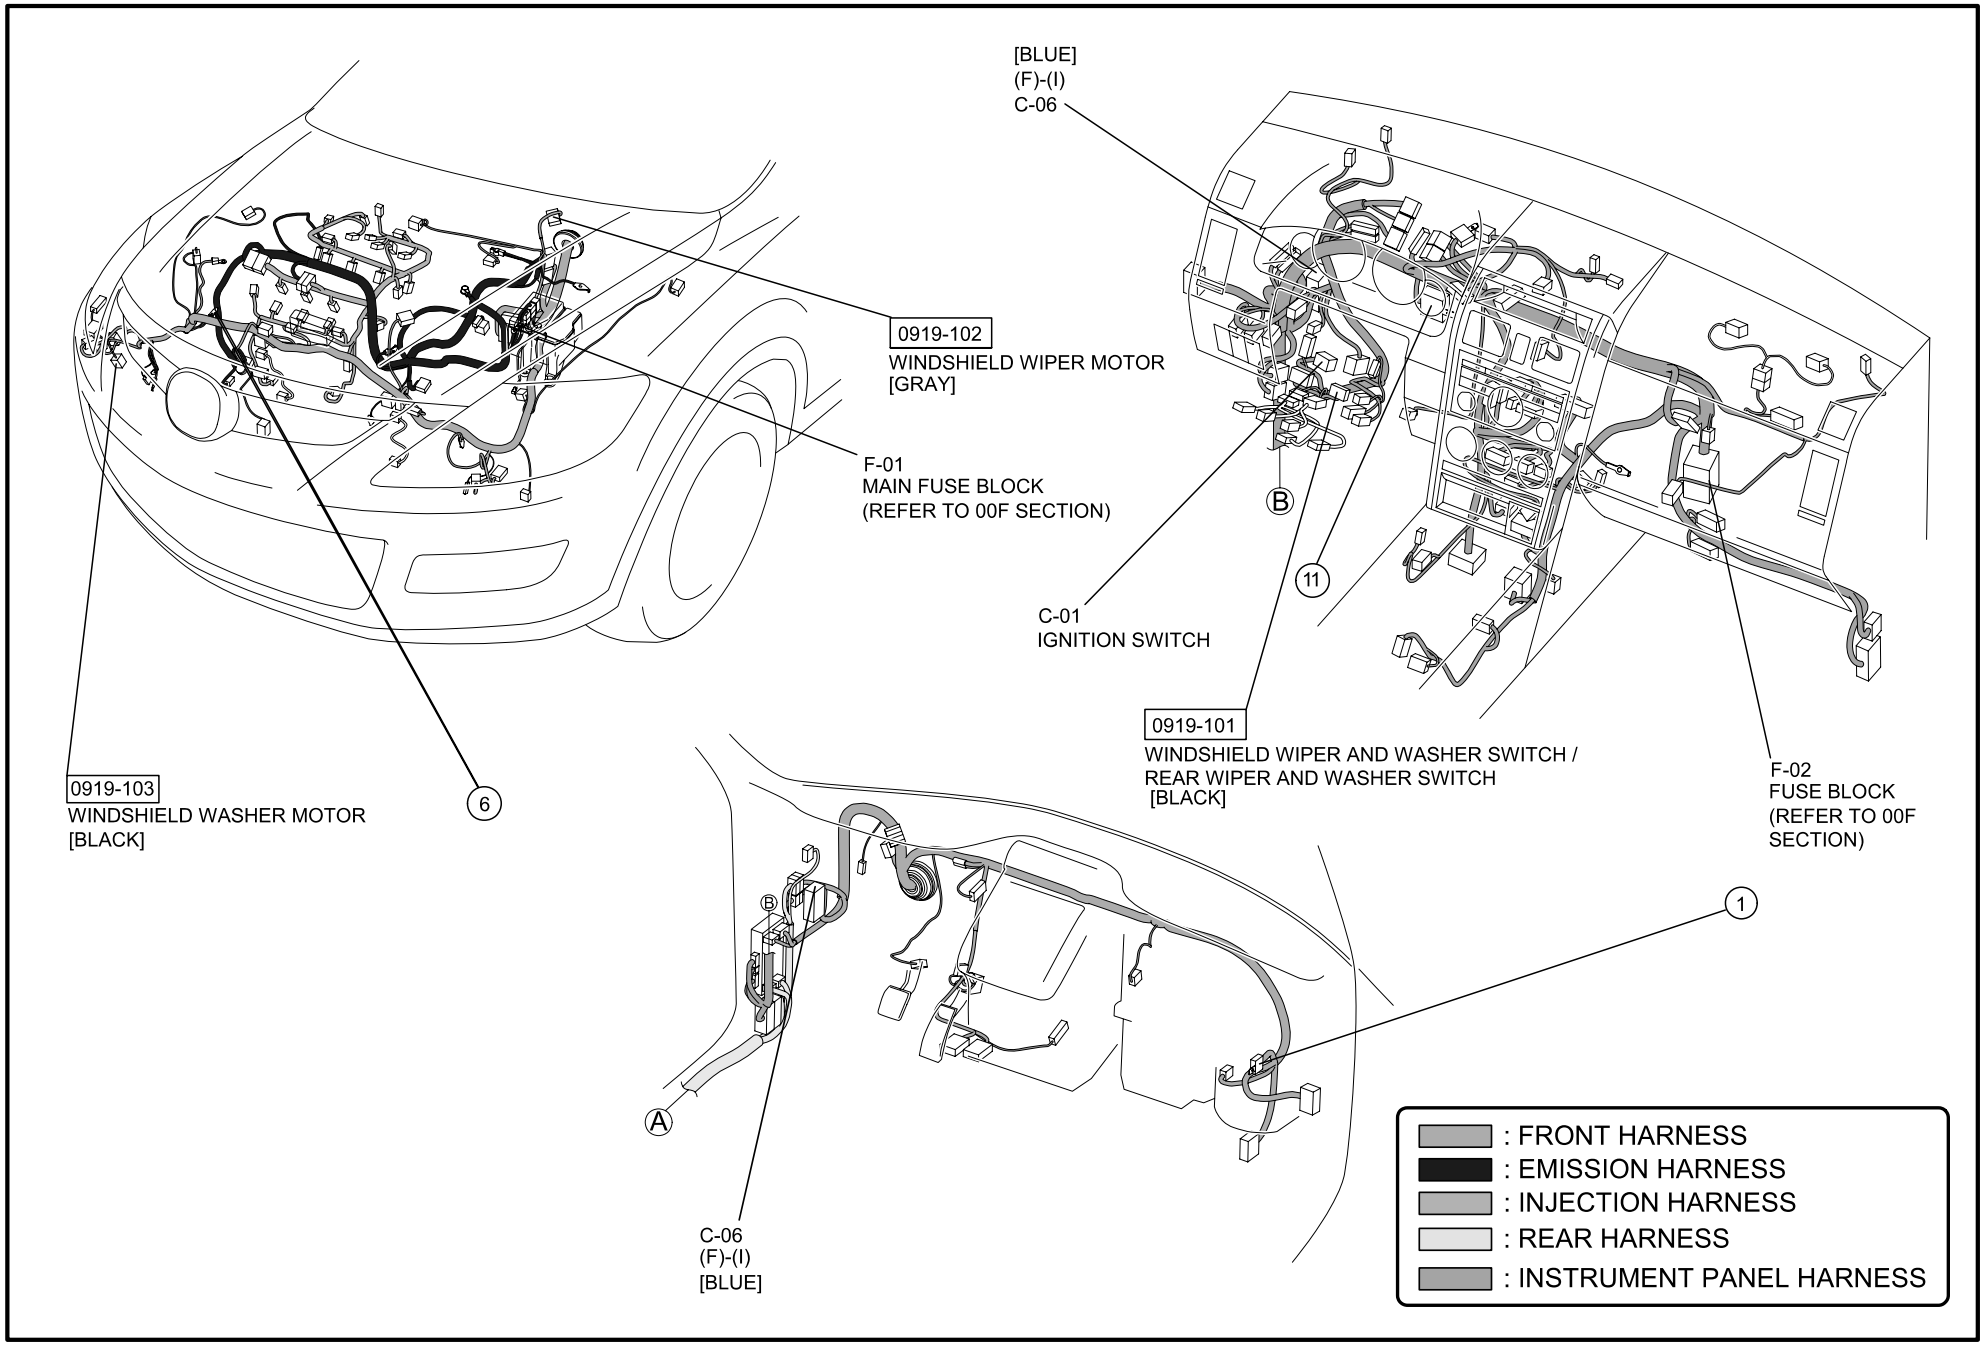

[BLUE]
(F)-(I)
C-06
0919-102
WINDSHIELD WIPER MOTOR
[GRAY]
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
11
C-01
IGNITION SWITCH
0919-101
WINDSHIELD WIPER AND WASHER SWITCH /
REAR WIPER AND WASHER SWITCH
[BLACK]
F-02
FUSE BLOCK
(REFER TO 00F
SECTION)
0919-103
WINDSHIELD WASHER MOTOR
[BLACK]
6
1
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

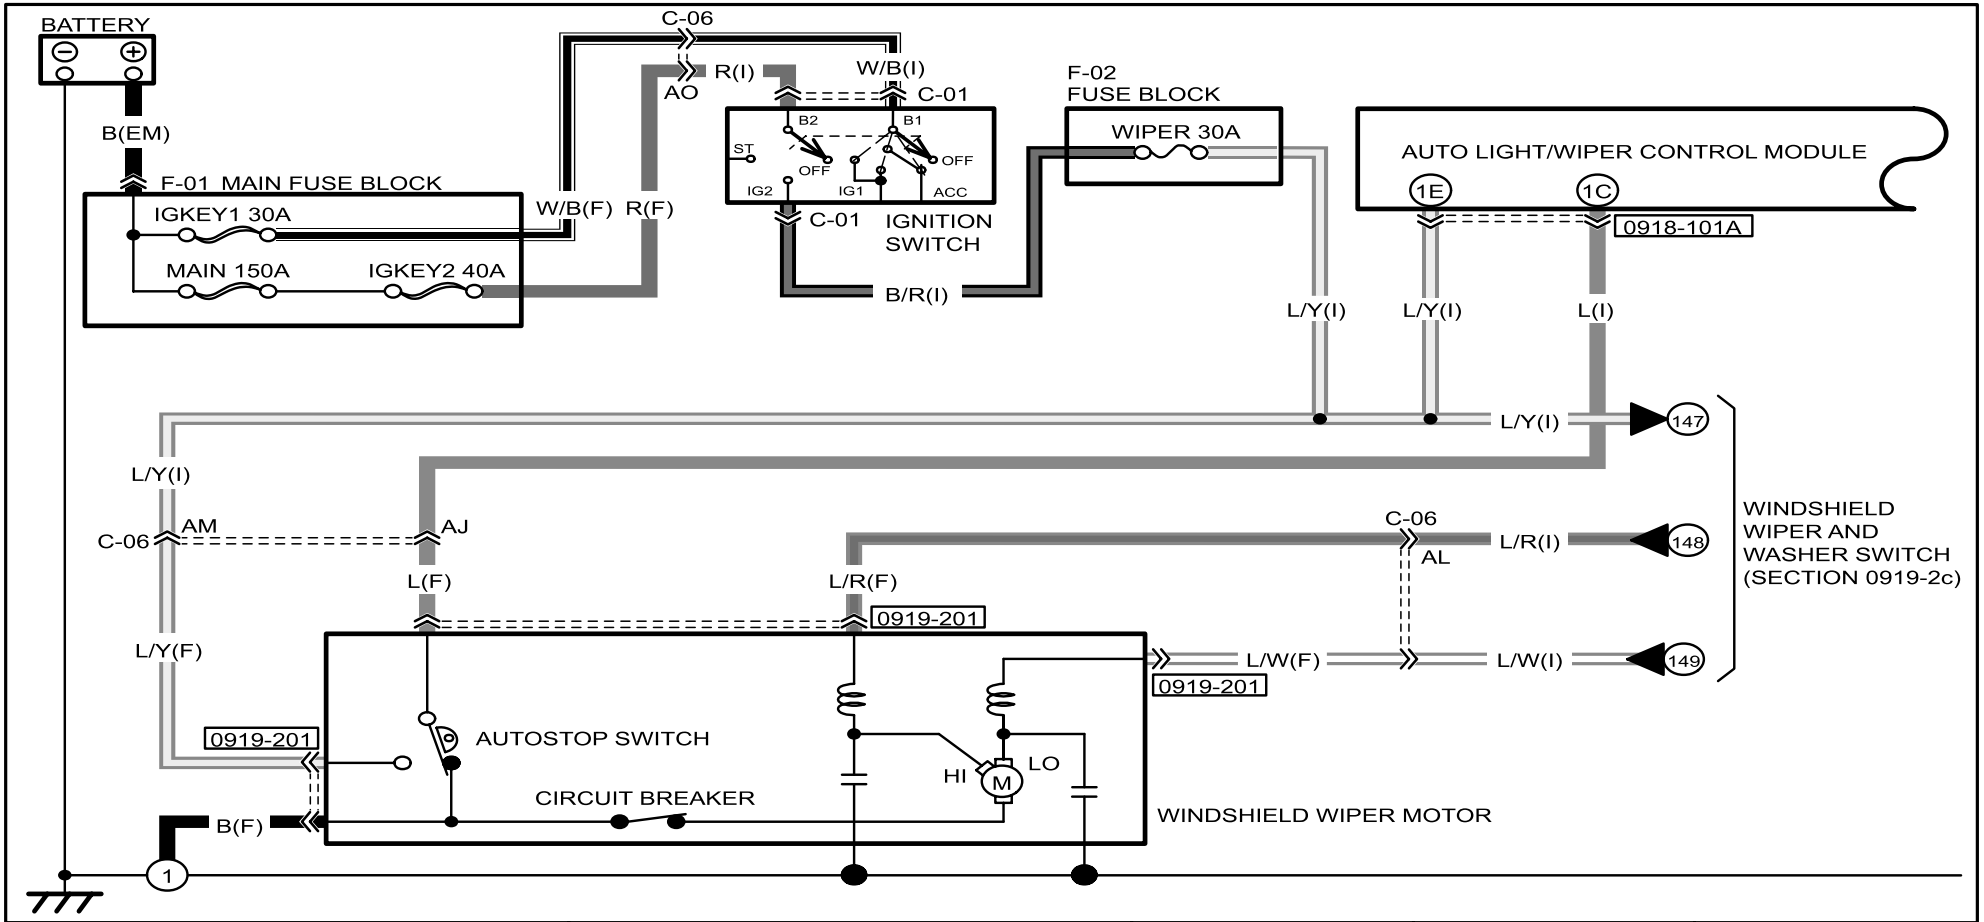


0918-101A
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE

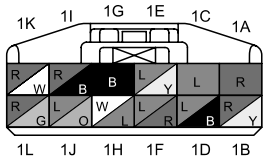


0919-201
WINDSHIELD WIPER MOTOR

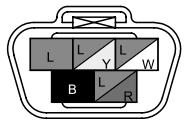


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

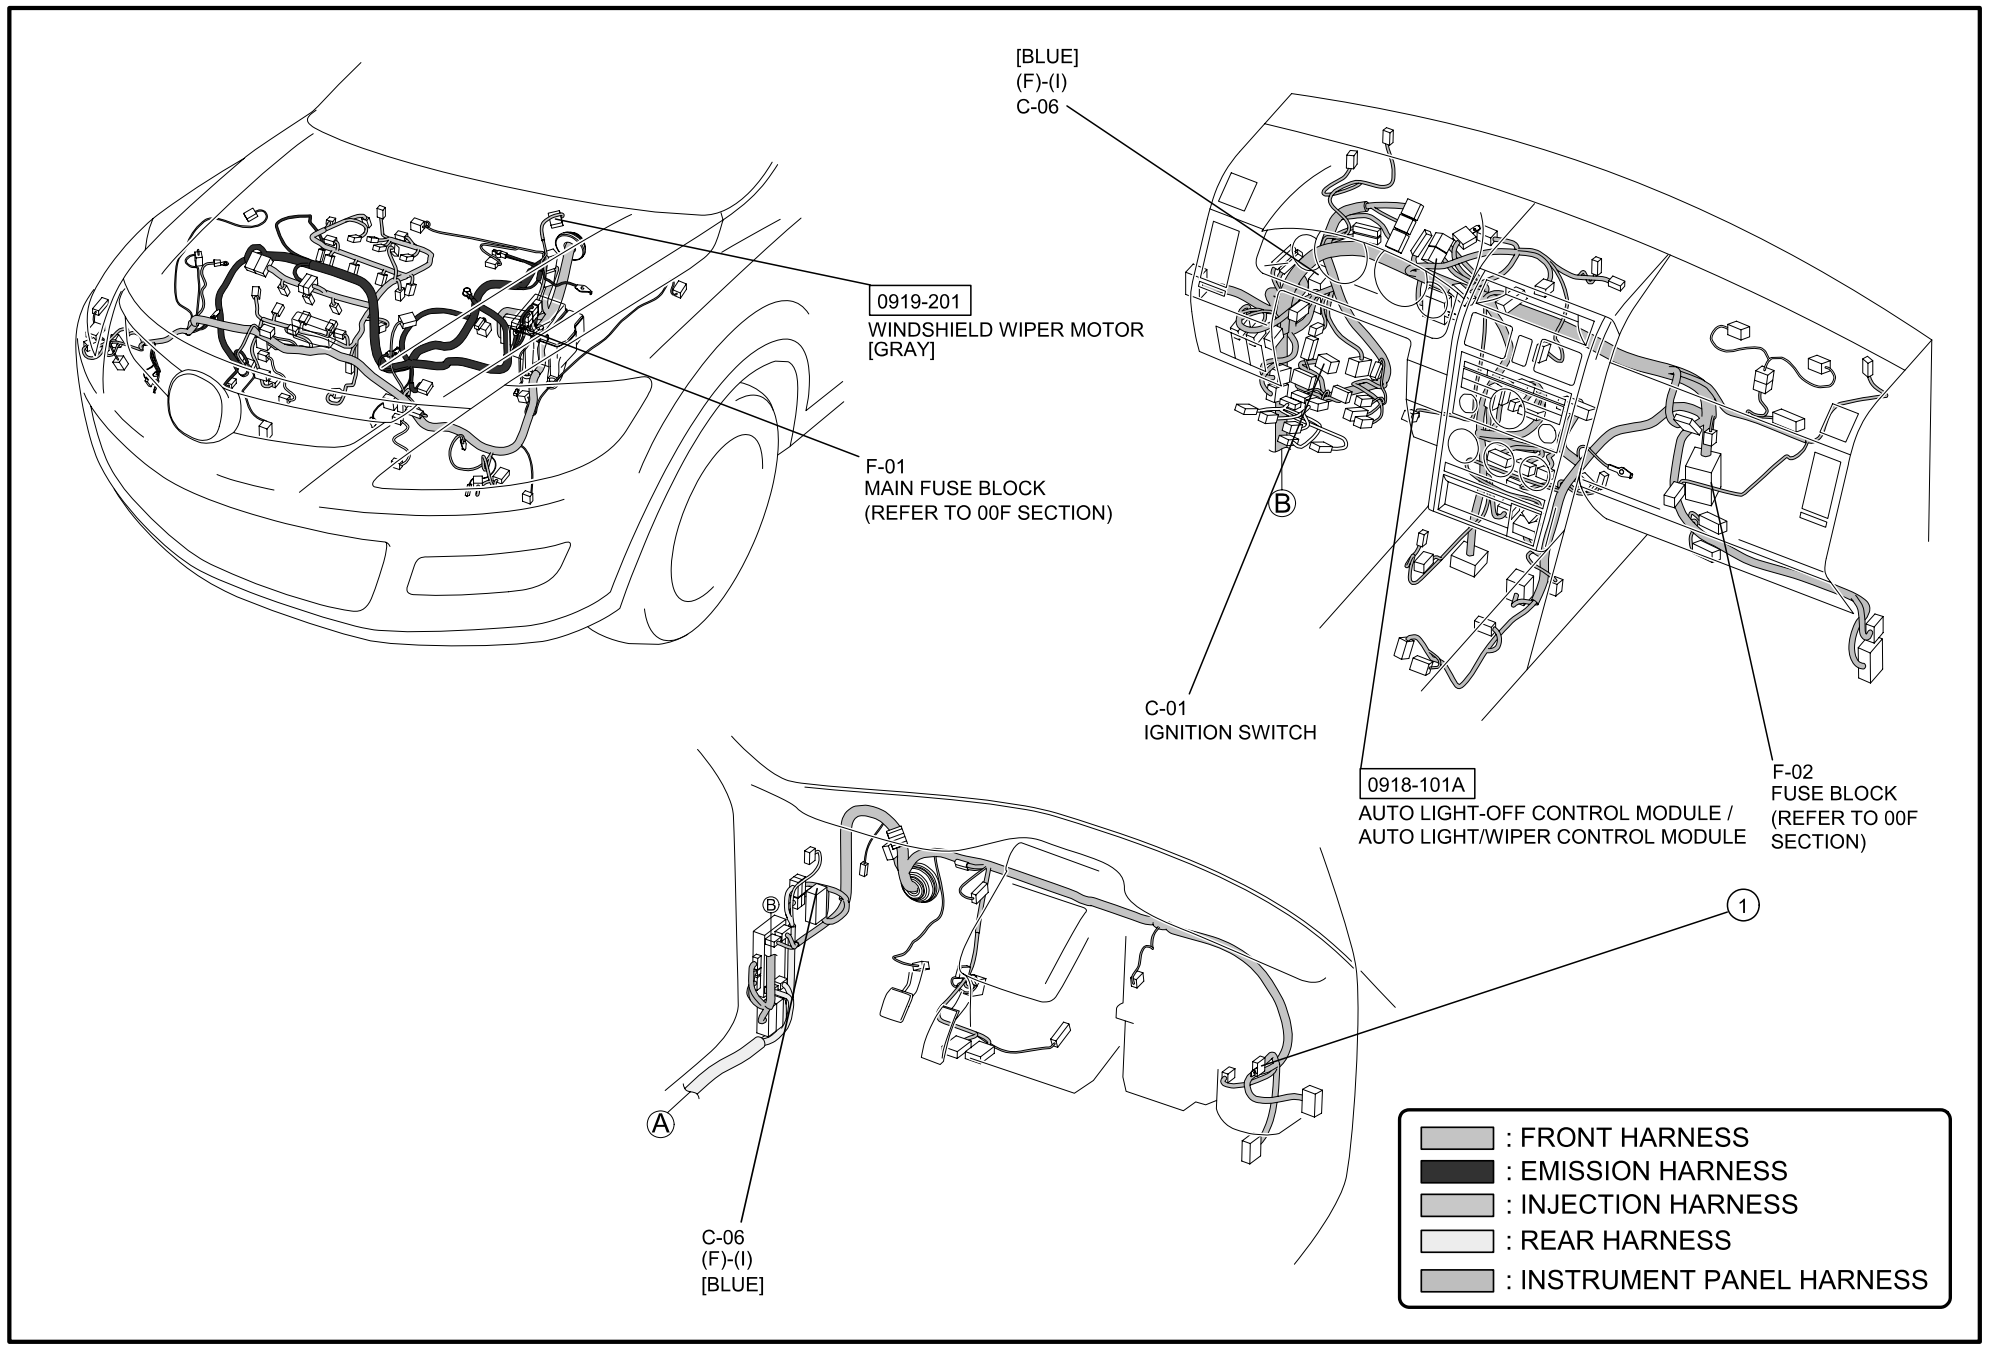

[BLUE]
(F)-(I)
C-06
0919-201
WINDSHIELD WIPER MOTOR
[GRAY]
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
C-01
IGNITION SWITCH
0918-101A
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE
F-02
FUSE BLOCK
(REFER TO 00F
SECTION)
1
B
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

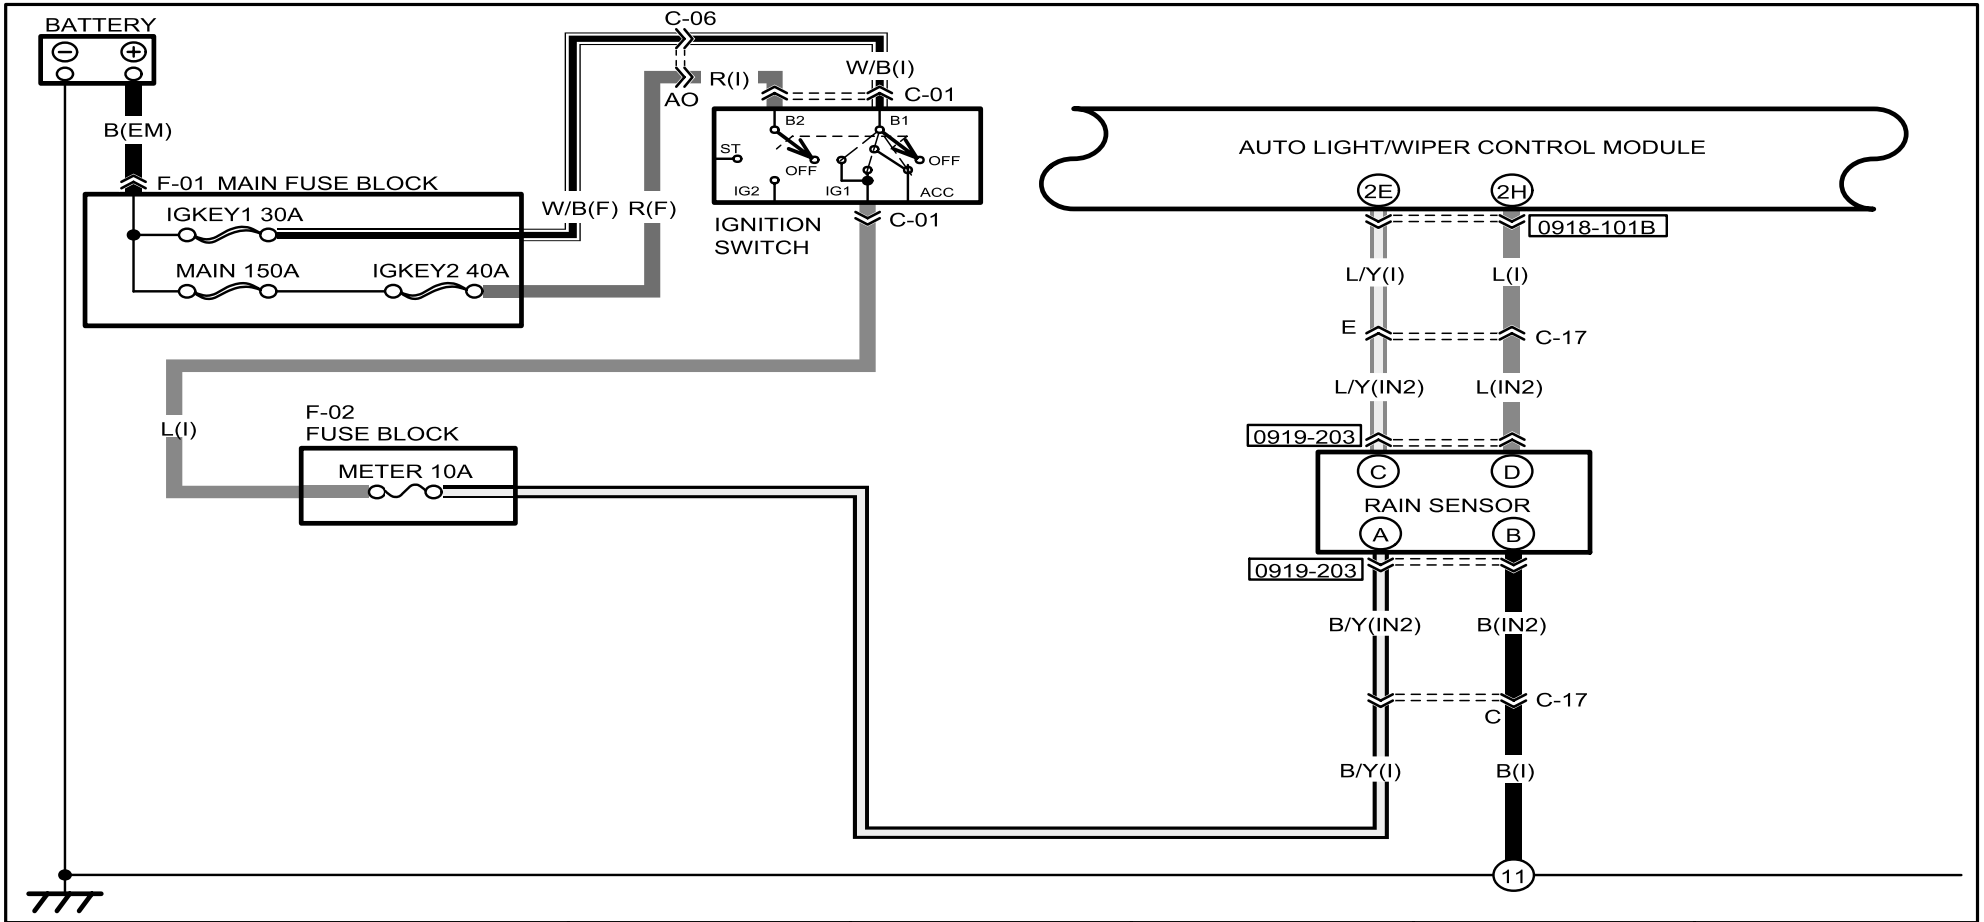


0918-101B
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE

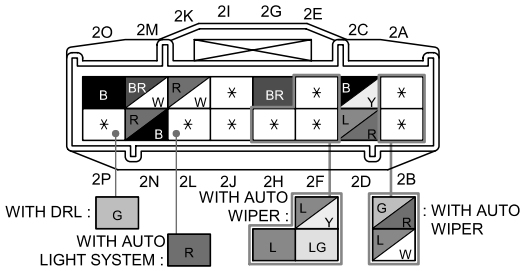


0919-203
RAIN SENSOR

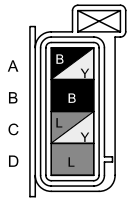


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

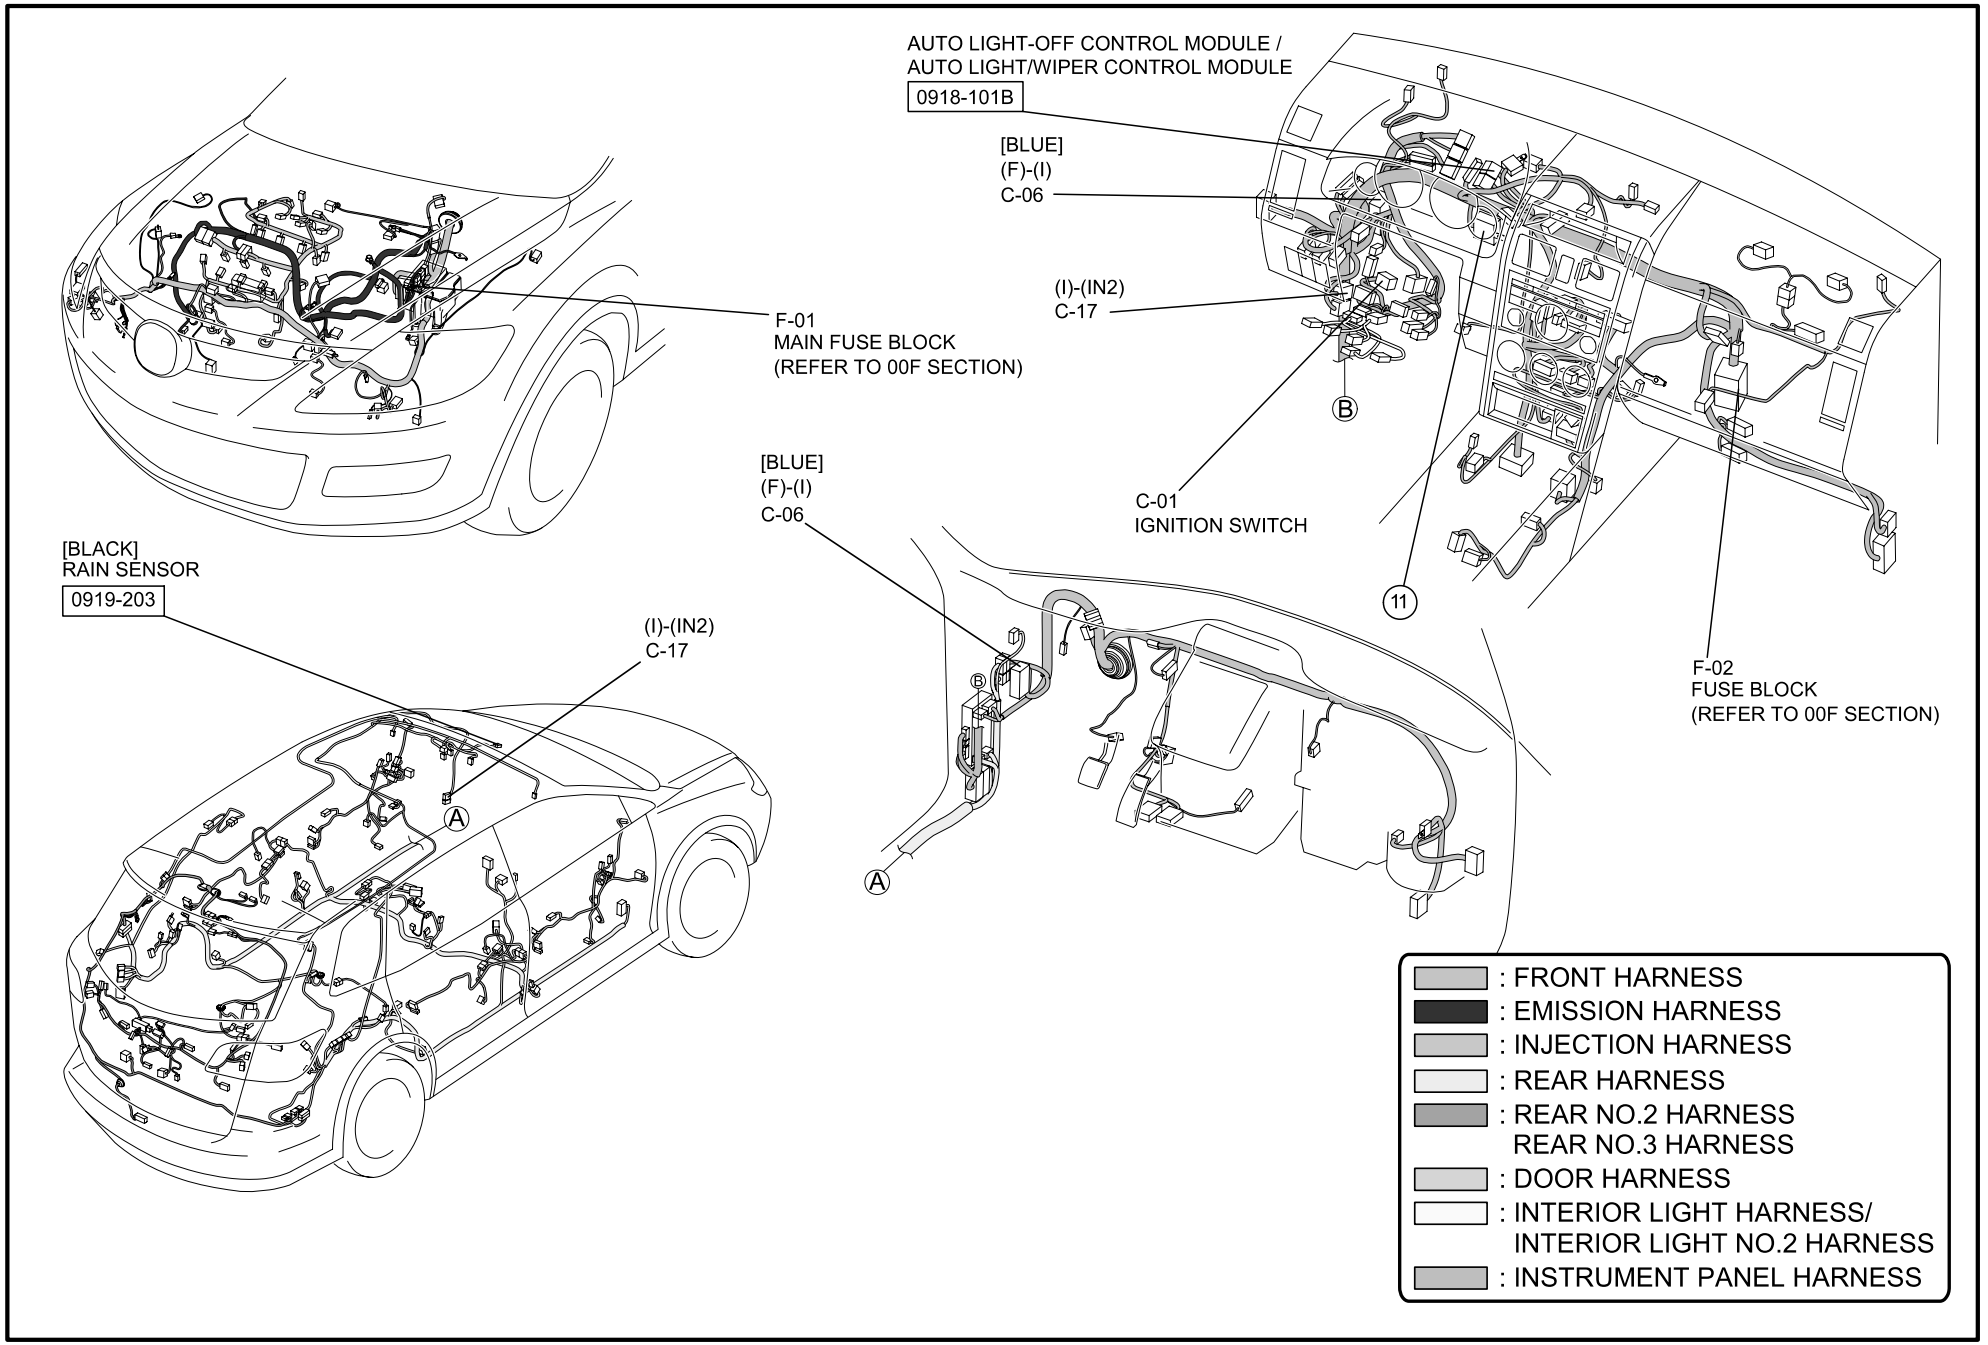

AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE
0918-101B
[BLUE]
(F)-(I)
C-06
(I)-(IN2)
C-17
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
[BLUE]
(F)-(I)
C-06
C-01
IGNITION SWITCH
11
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
[BLACK]
RAIN SENSOR
0919-203
(I)-(IN2)
C-17
A
B
A
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

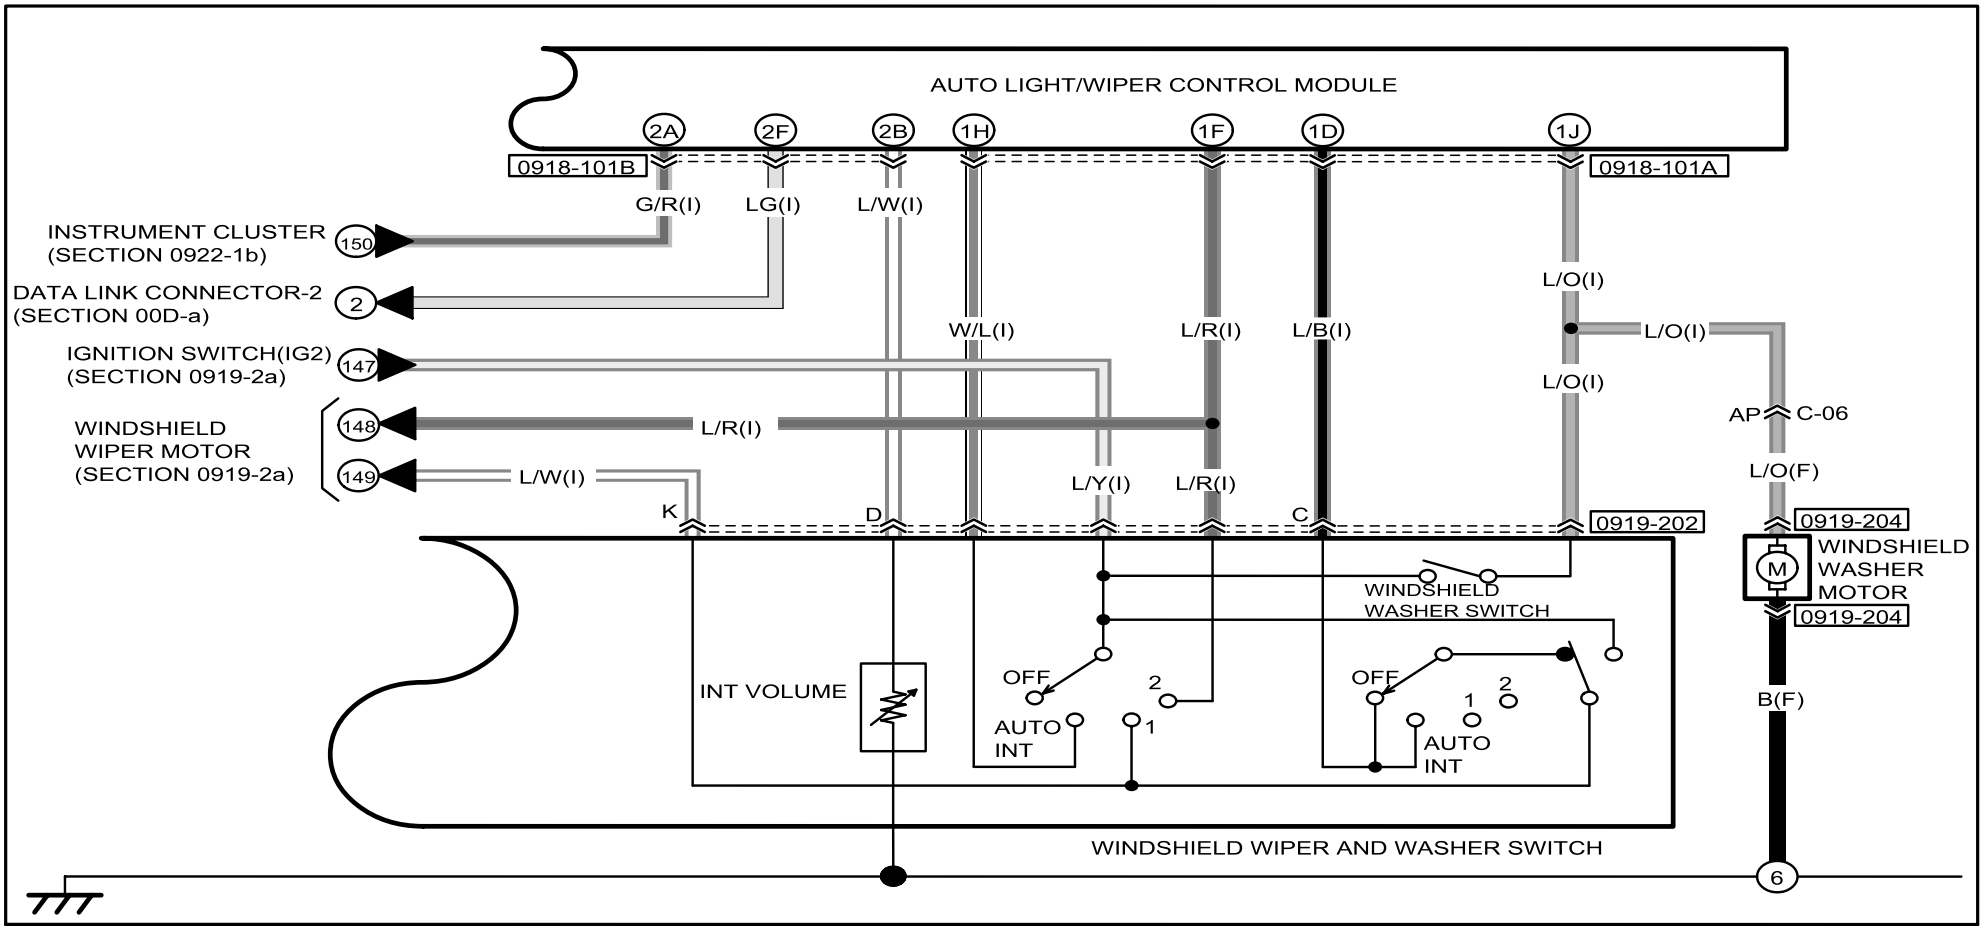


0918-101A
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE

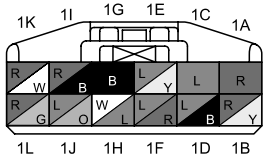


0918-101B
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE

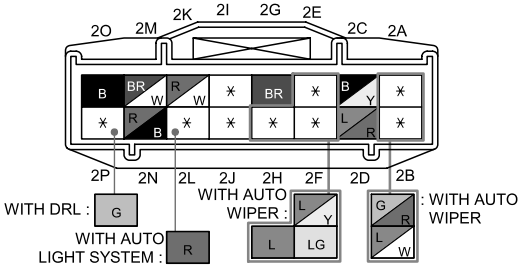


0919-202
WINDSHIELD WIPER AND
WASHER SWITCH /
REAR WIPER AND WASHER SWITCH

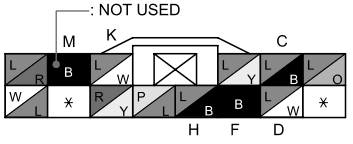


0919-204
WINDSHIELD
WASHER MOTOR




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

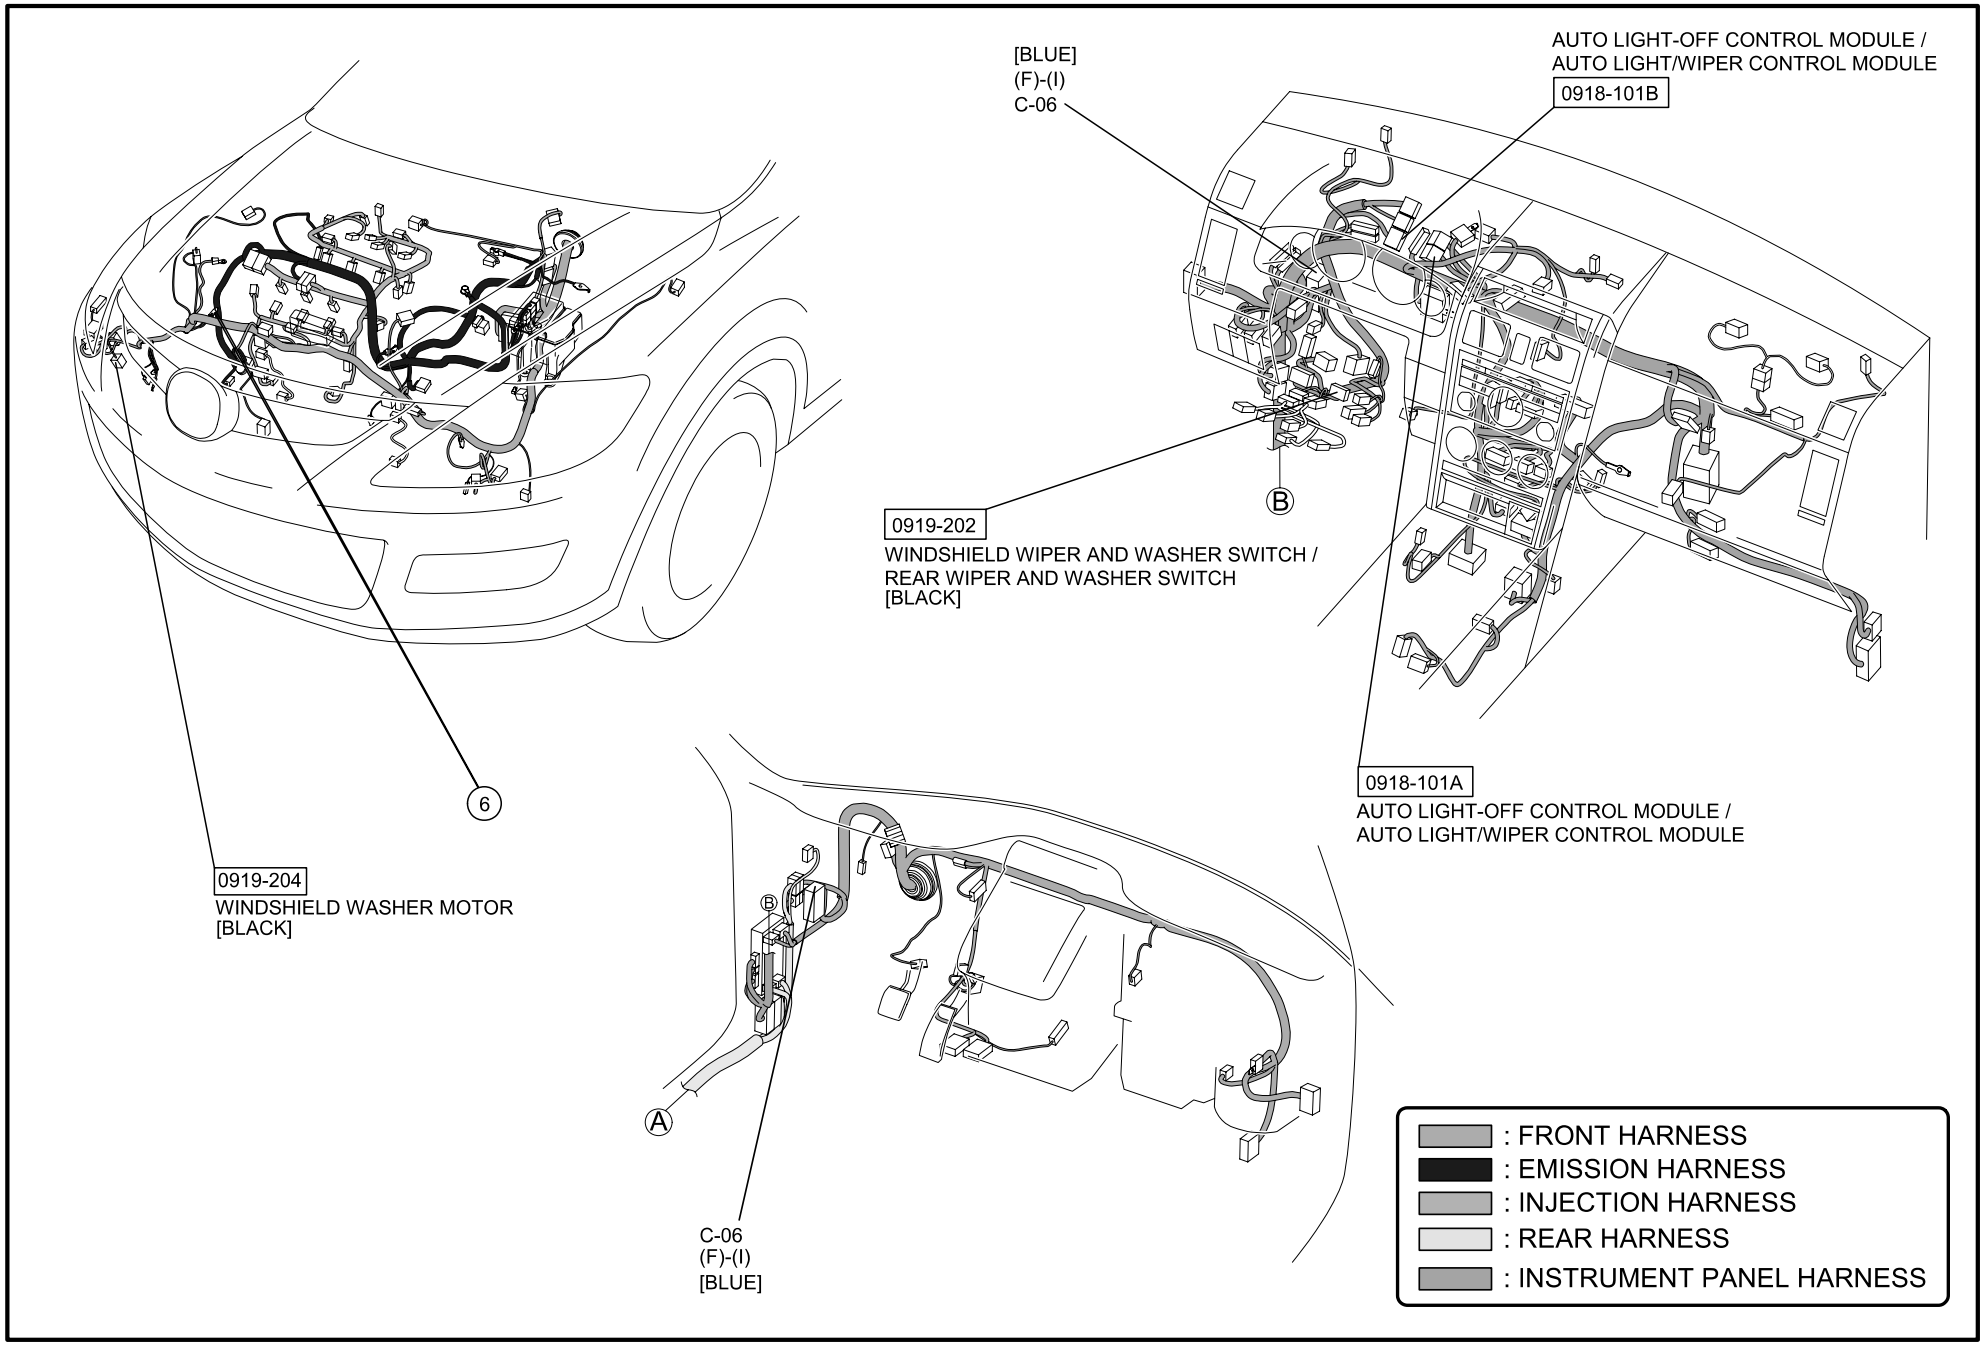

[BLUE]
(F)-(I)
C-06
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE
0918-101B
B
0919-202
WINDSHIELD WIPER AND WASHER SWITCH /
REAR WIPER AND WASHER SWITCH
[BLACK]
0918-101A
AUTO LIGHT-OFF CONTROL MODULE /
AUTO LIGHT/WIPER CONTROL MODULE
6
0919-204
WINDSHIELD WASHER MOTOR
[BLACK]
B
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

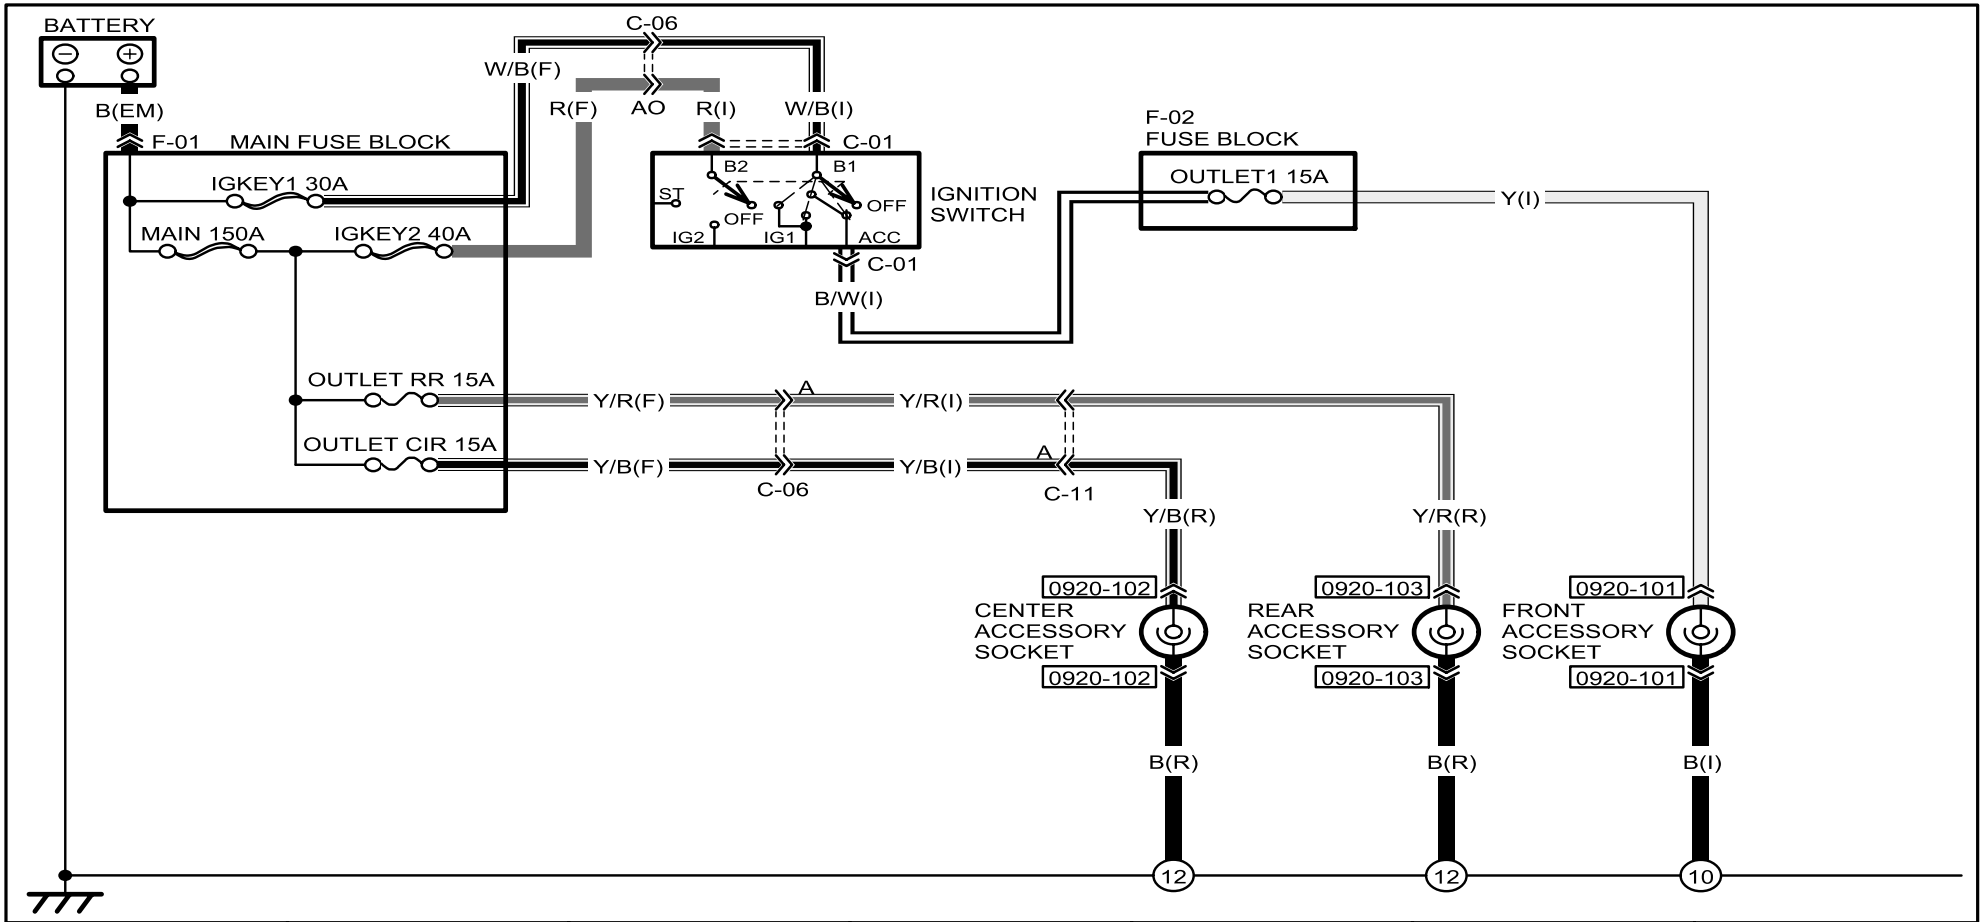


0920-101 FRONT ACCESSORY SOCKET	0920-102 CENTER ACCESSORY SOCKET	0920-103 REAR ACCESSORY SOCKET				
						

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

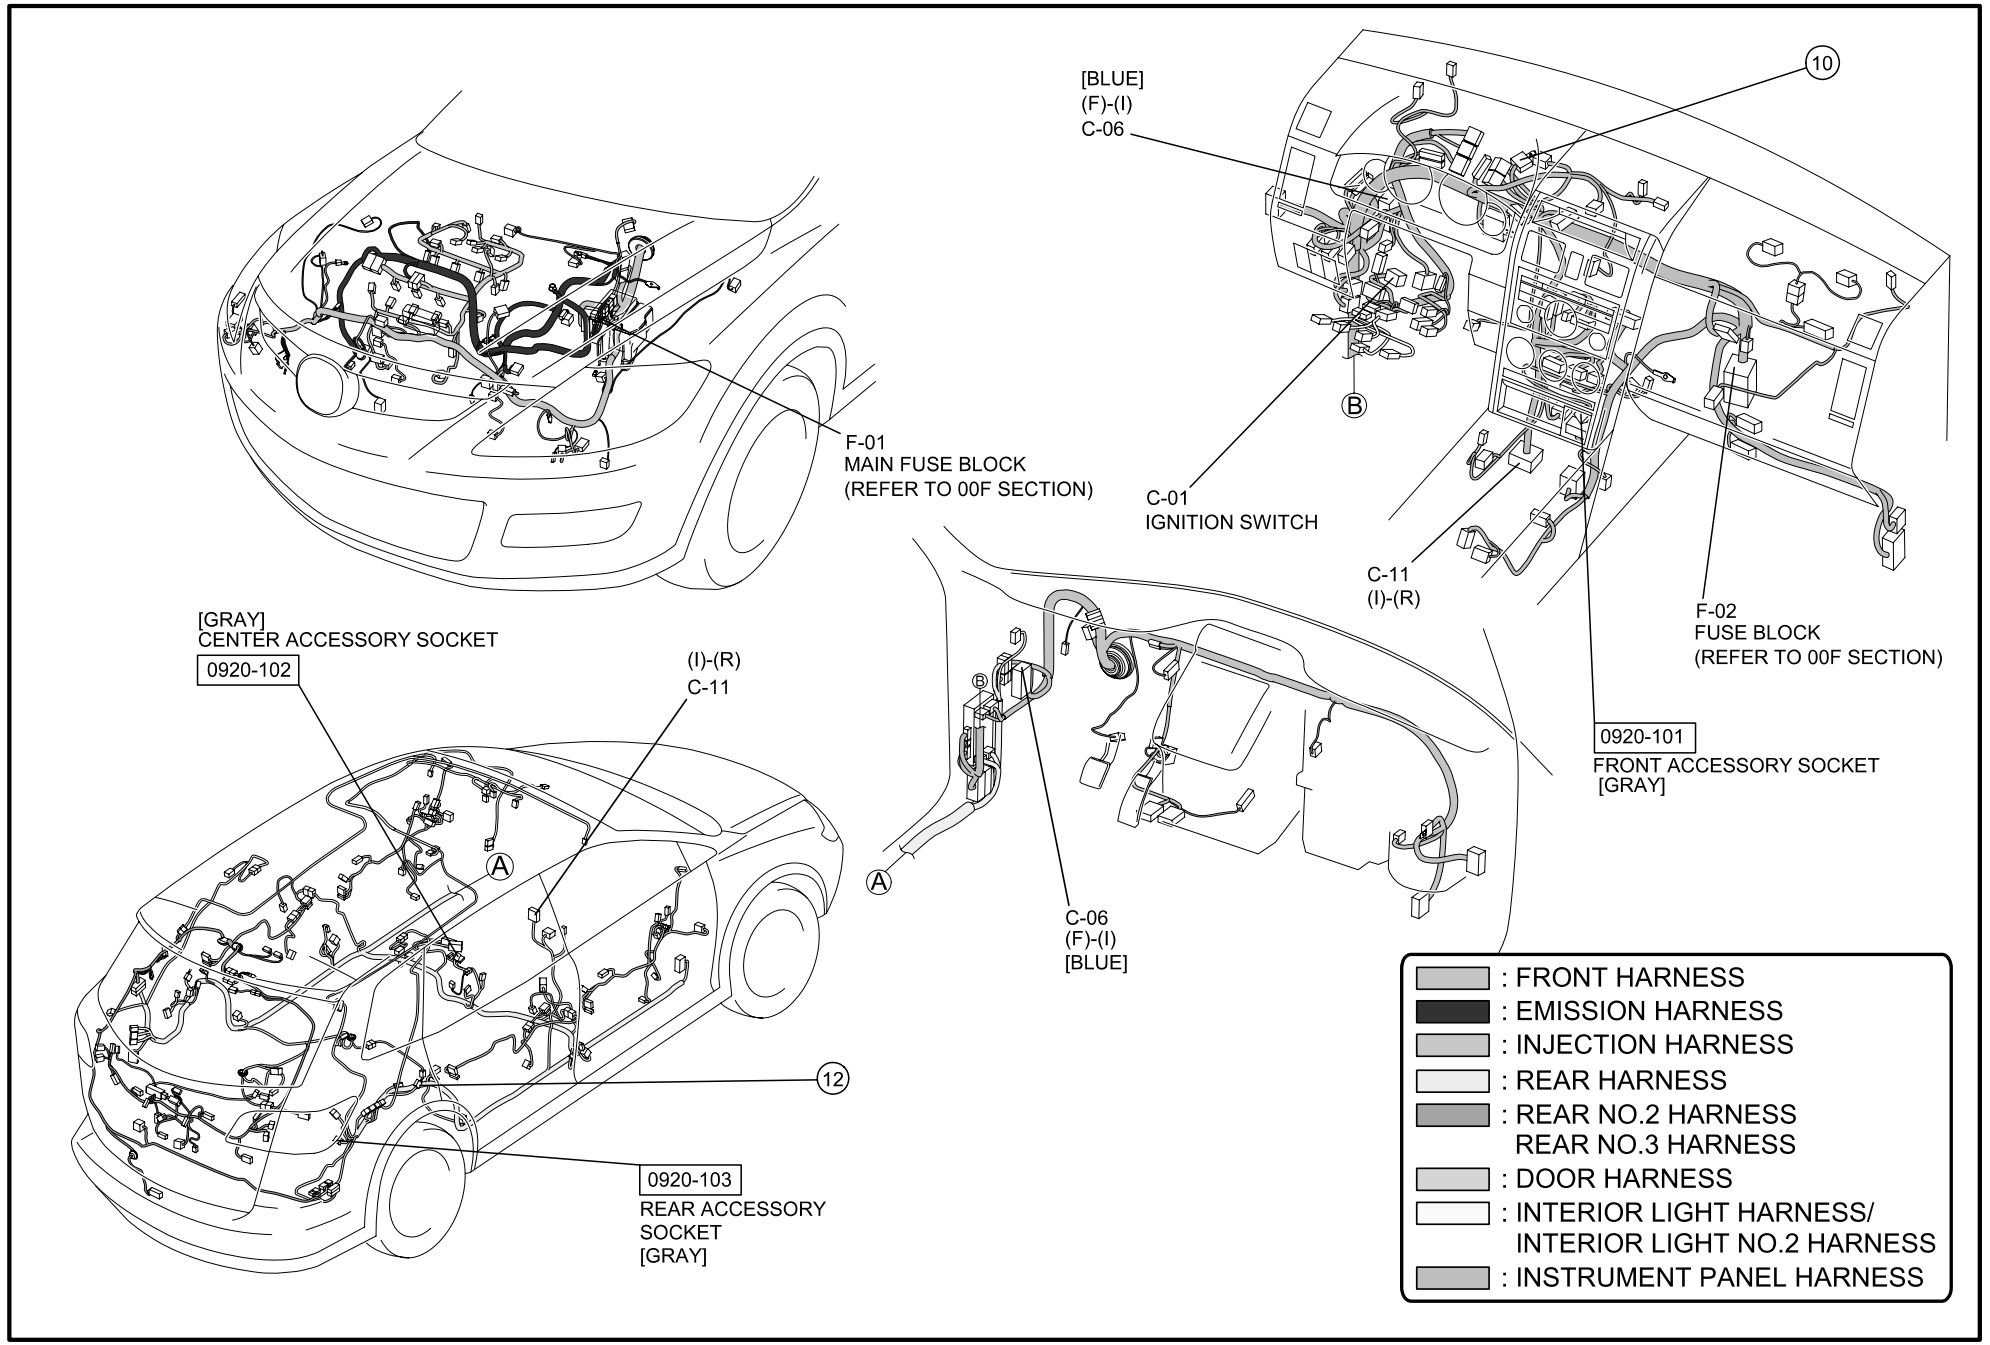

[BLUE]
(F)-(I)
C-06
10
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
C-01
IGNITION SWITCH
C-11
(I)-(R)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
[GRAY]
CENTER ACCESSORY SOCKET
0920-102
(I)-(R)
C-11
0920-101
FRONT ACCESSORY SOCKET
[GRAY]
A
A
C-06
(F)-(I)
[BLUE]
12
0920-103
REAR ACCESSORY
SOCKET
[GRAY]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

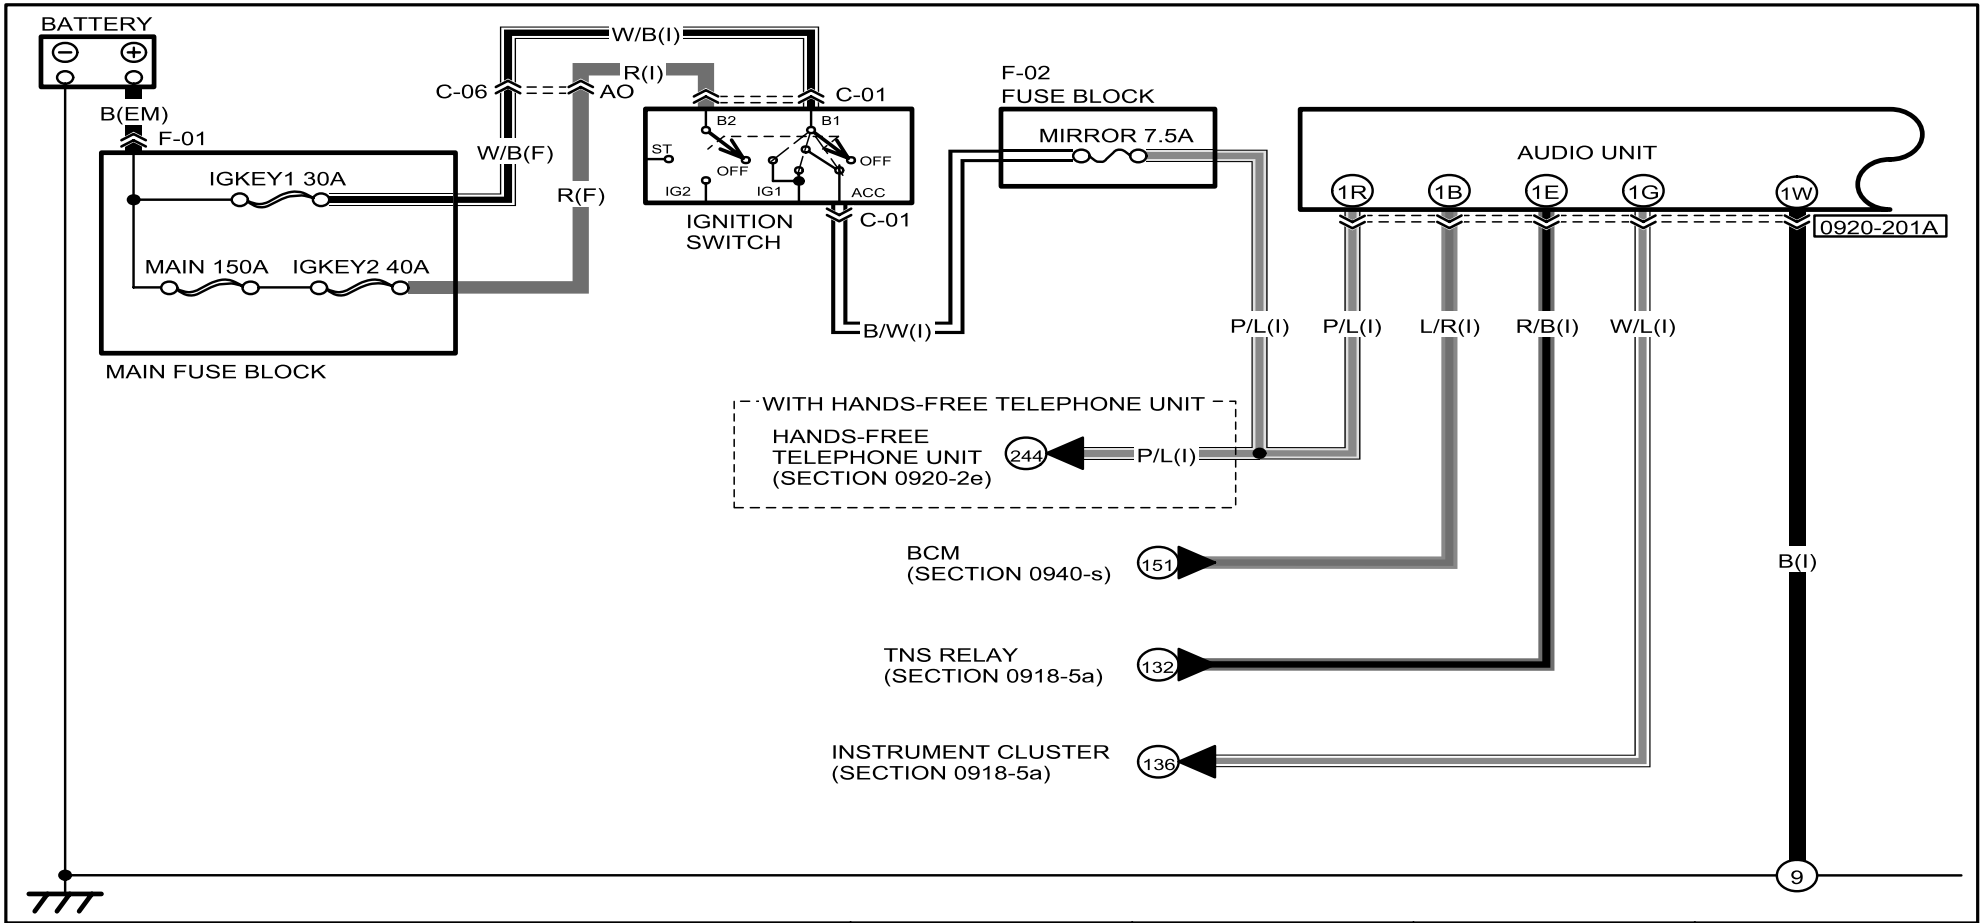


0920-201A
AUDIO UNIT

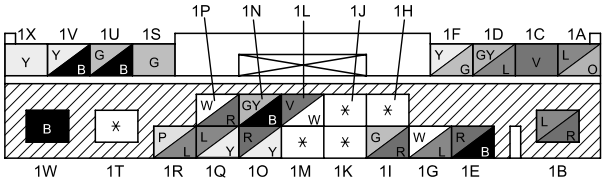


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

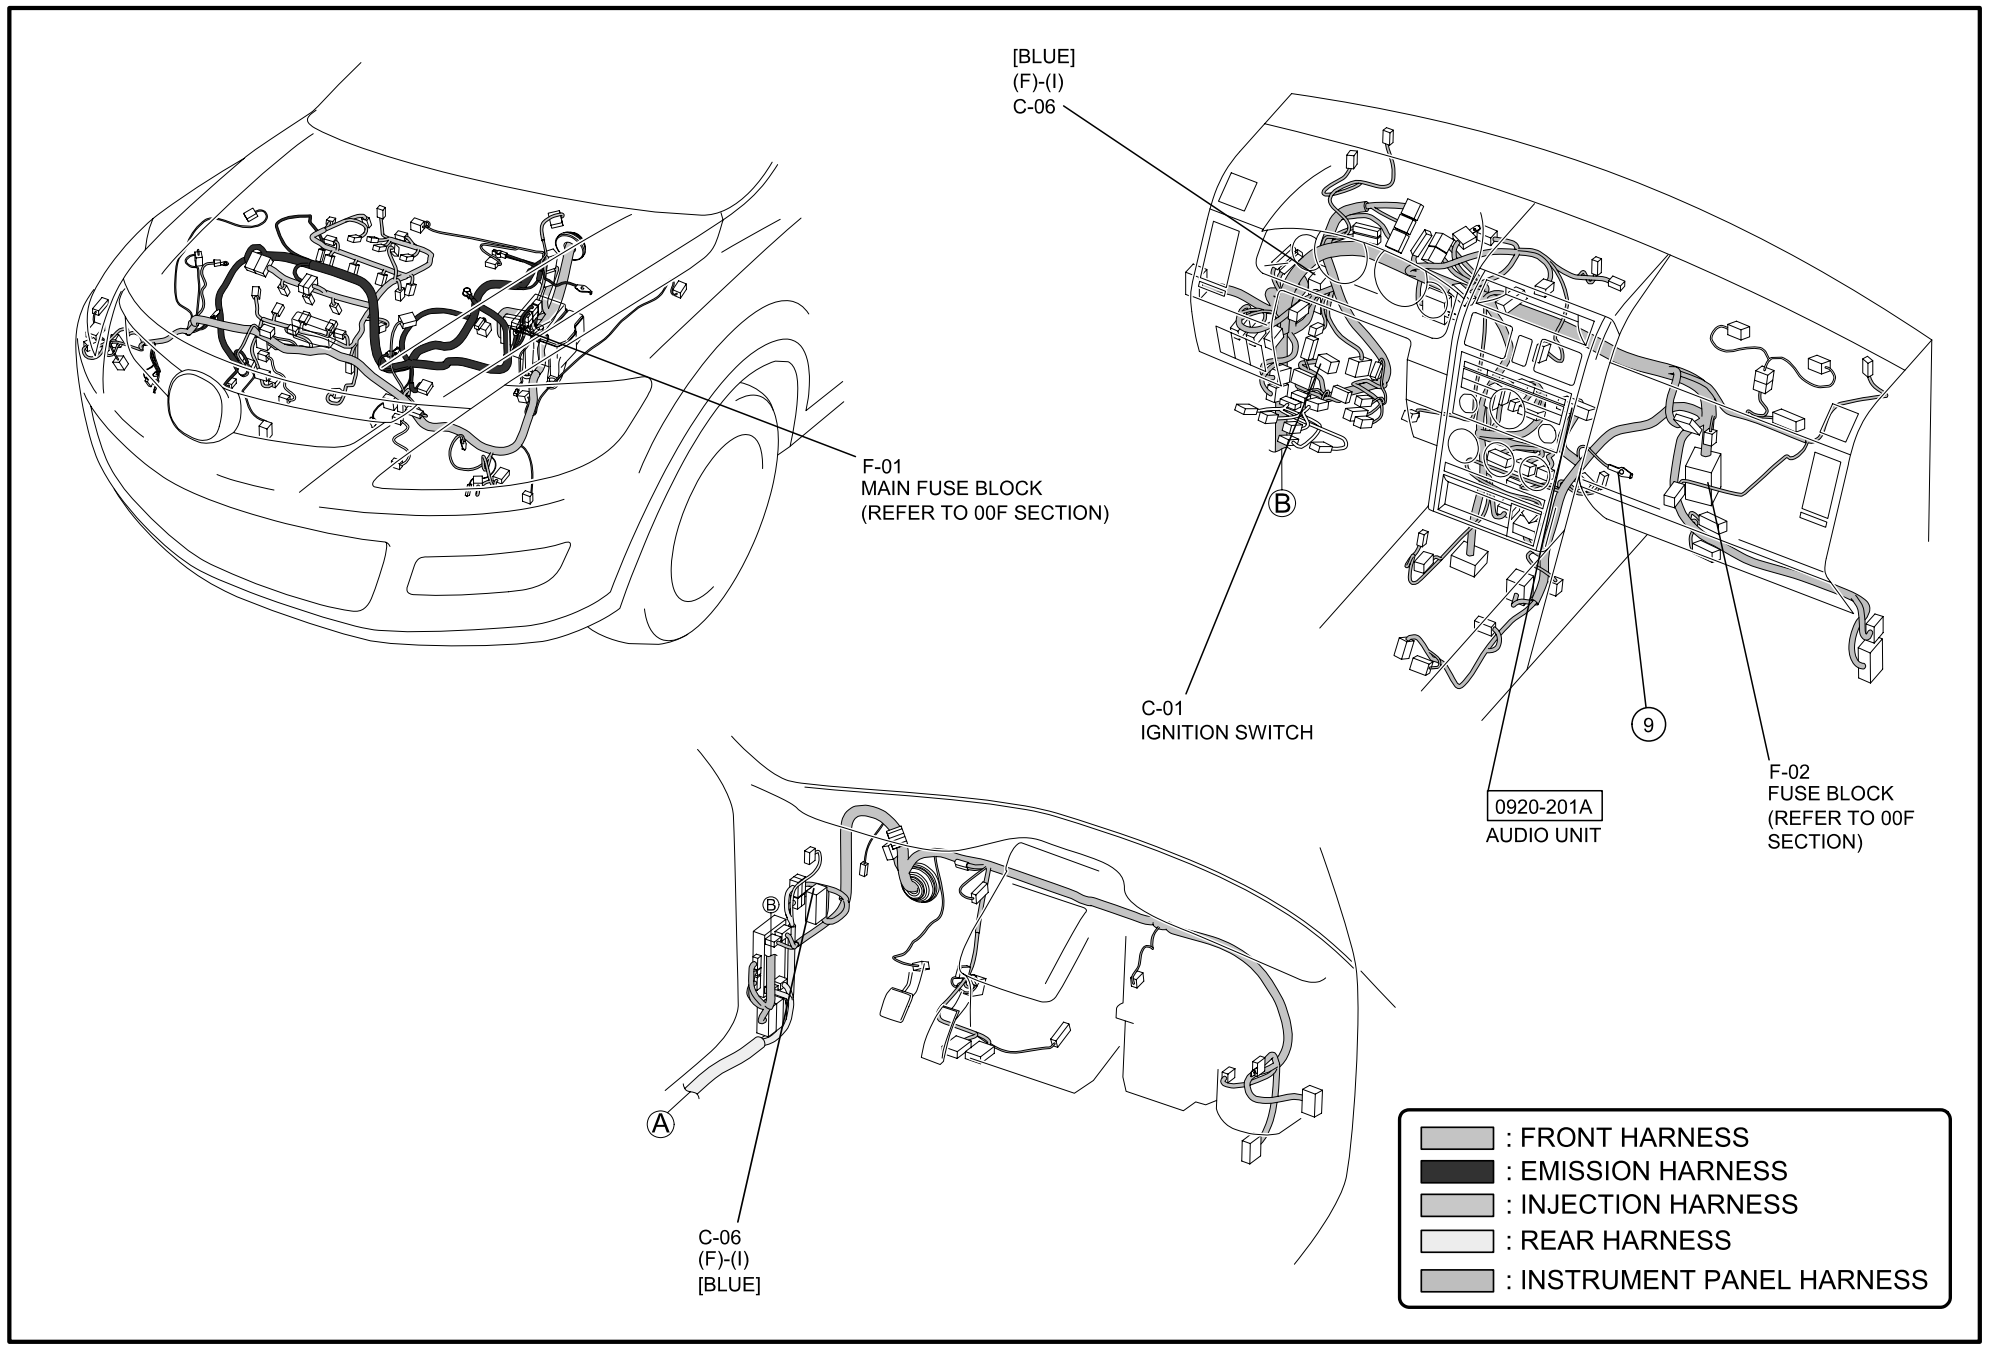
[BLUE]
(F)-(I)
C-06
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
C-01
IGNITION SWITCH
9
0920-201A
AUDIO UNIT
F-02
FUSE BLOCK
(REFER TO 00F
SECTION)
B
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS


[ ] WITH VOICE

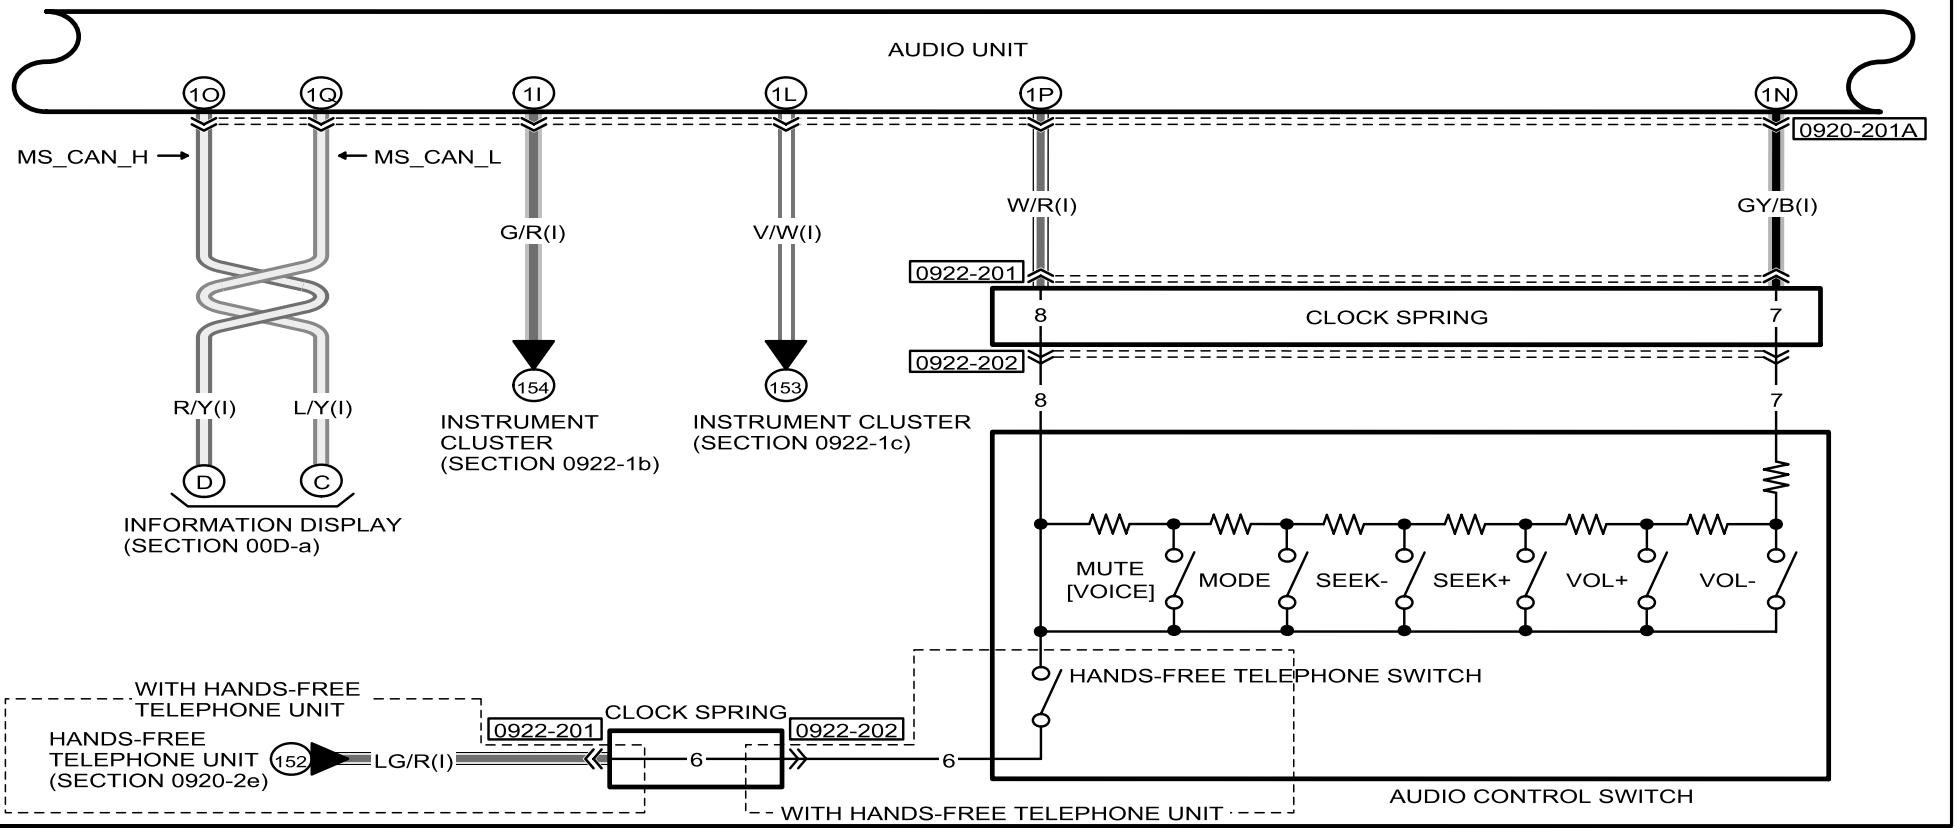

0920-201A
AUDIO UNIT

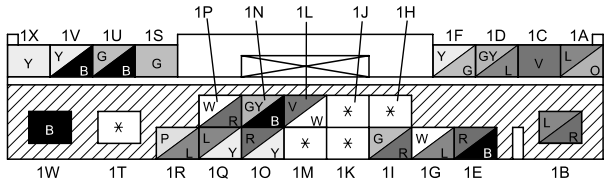

0922-201
CLOCK SPRING

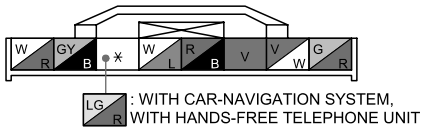



0922-202
CRUISE CONTROL SWITCH /
AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION/
CRUISE CONTROL SWITCH
ILLUMINATION / CLOCK SPRING




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

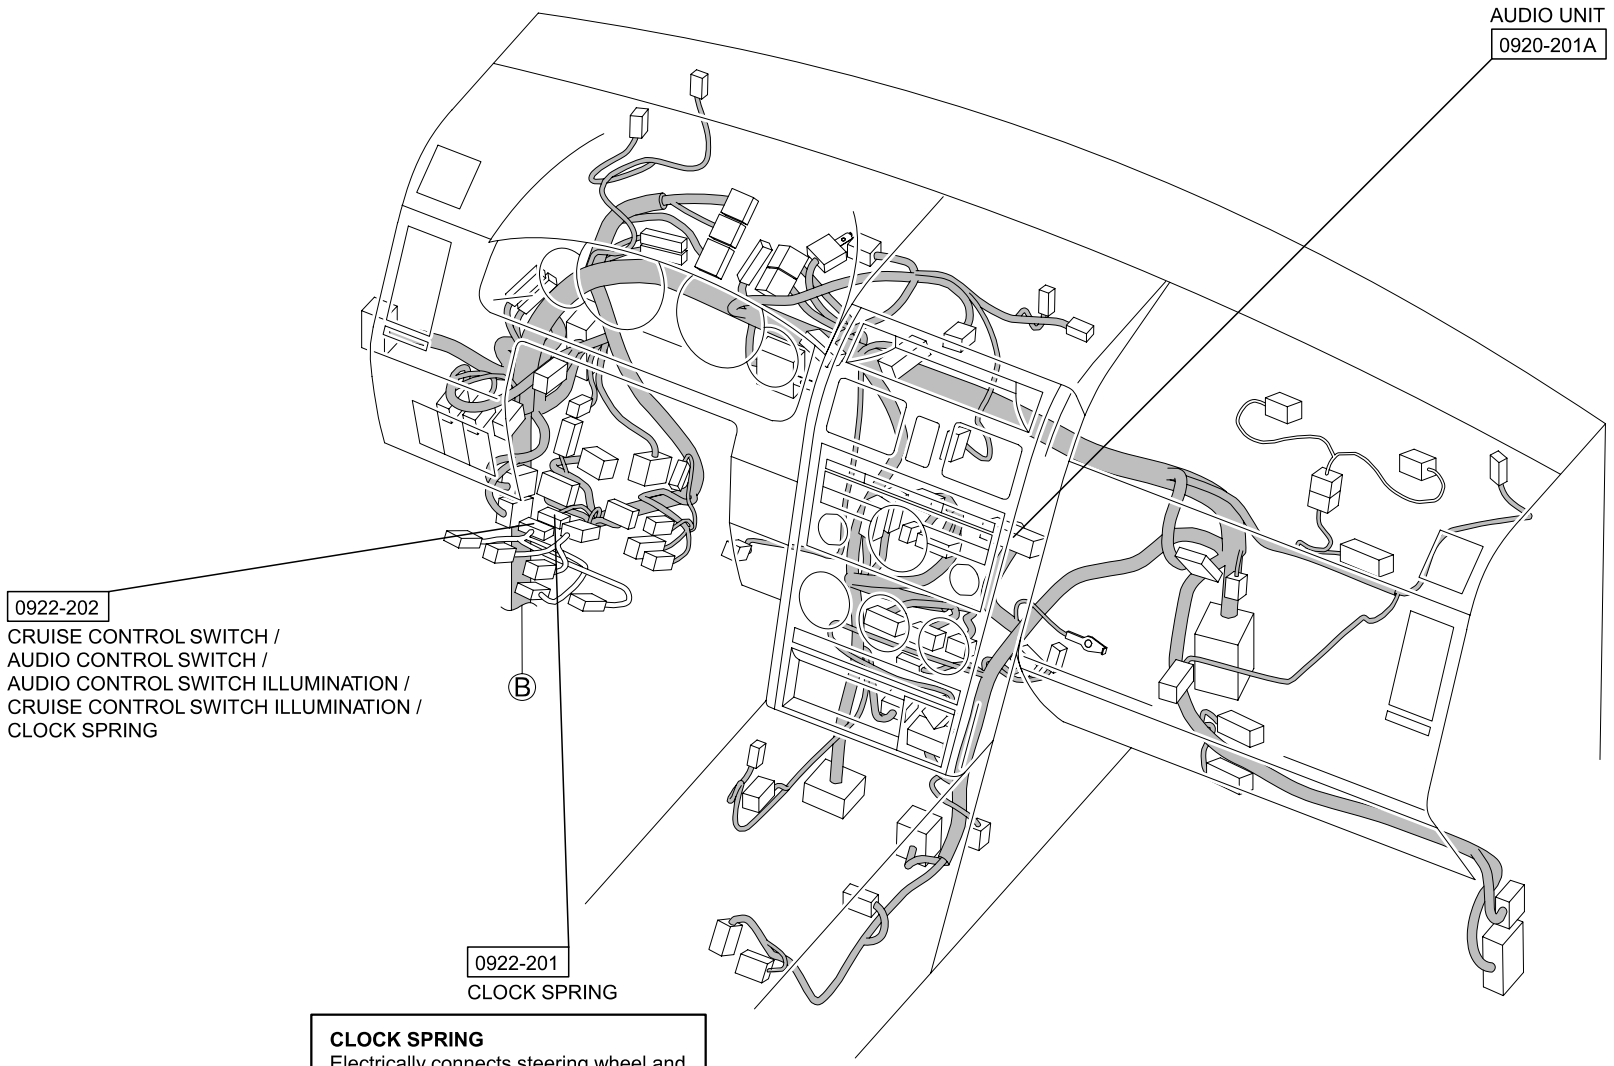

AUDIO UNIT
0920-201A
0922-202
CRUISE CONTROL SWITCH /
AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
CLOCK SPRING
B
0922-201
CLOCK SPRING
CLOCK SPRING
Electrically connects steering wheel and air bag to body harness.
: INSTRUMENT PANEL HARNESS

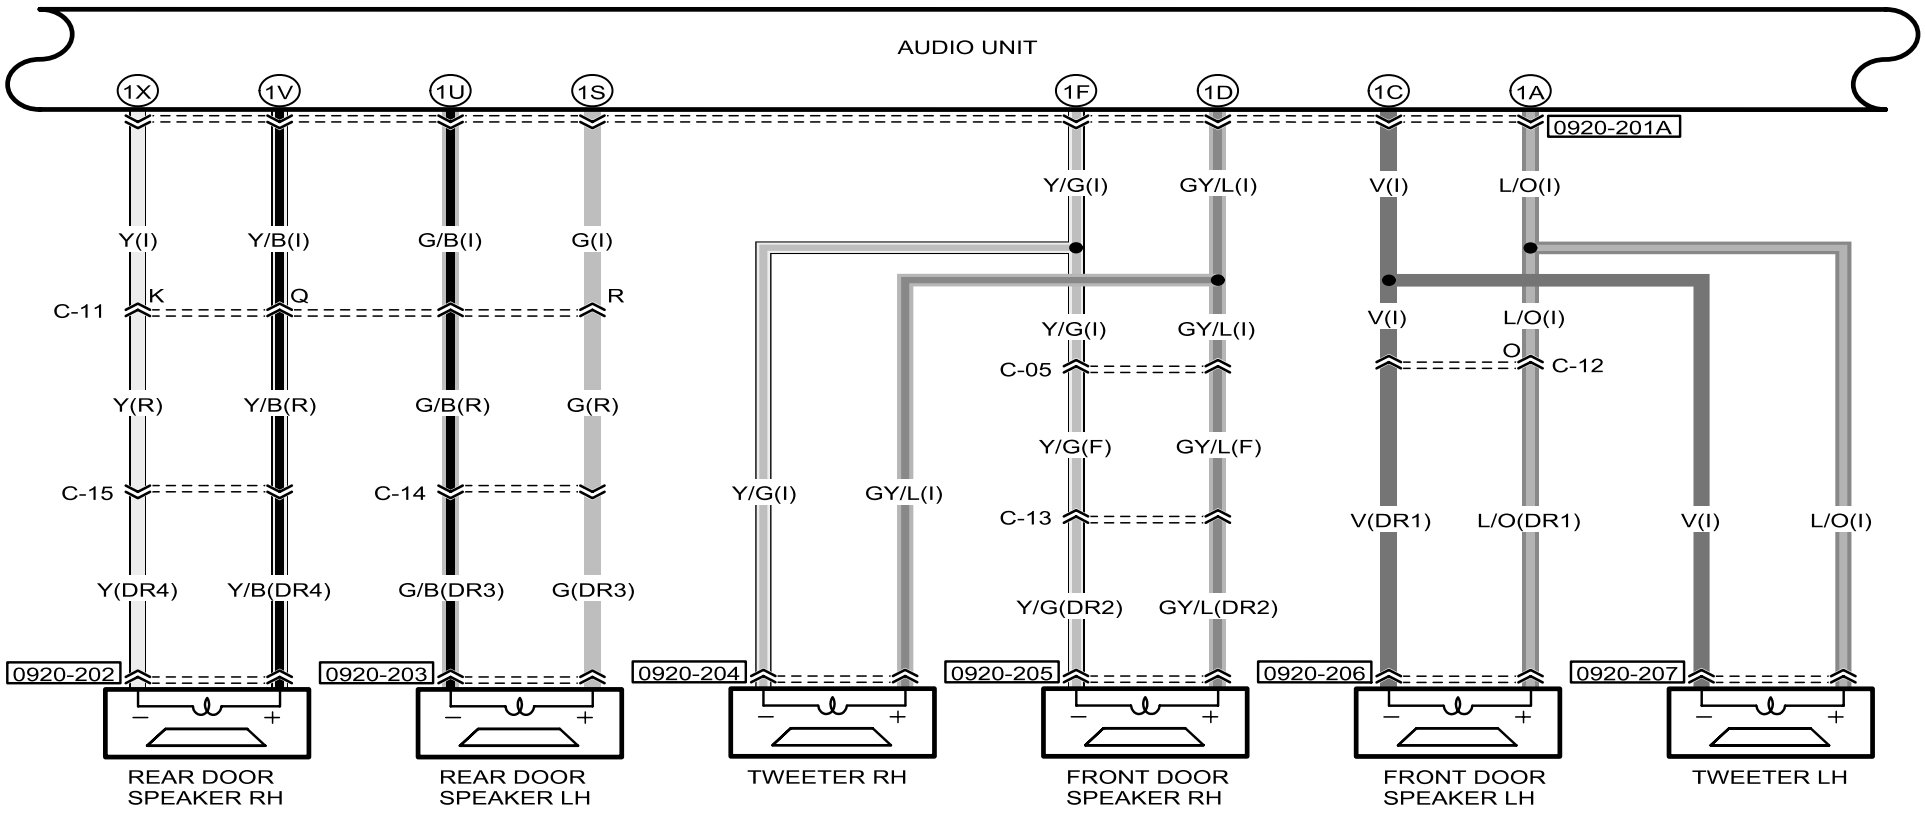


0920-201A
AUDIO UNIT

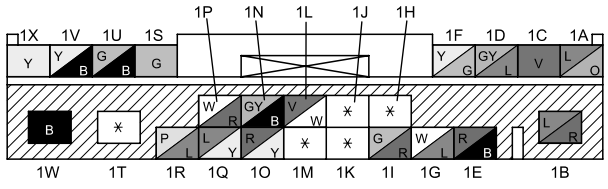

0920-202
REAR DOOR SPEAKER RH




0920-203
REAR DOOR SPEAKER LH



0920-205
FRONT DOOR SPEAKER RH



0920-206
FRONT DOOR SPEAKER LH




0920-204
TWEETER RH




0920-207
TWEETER LH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

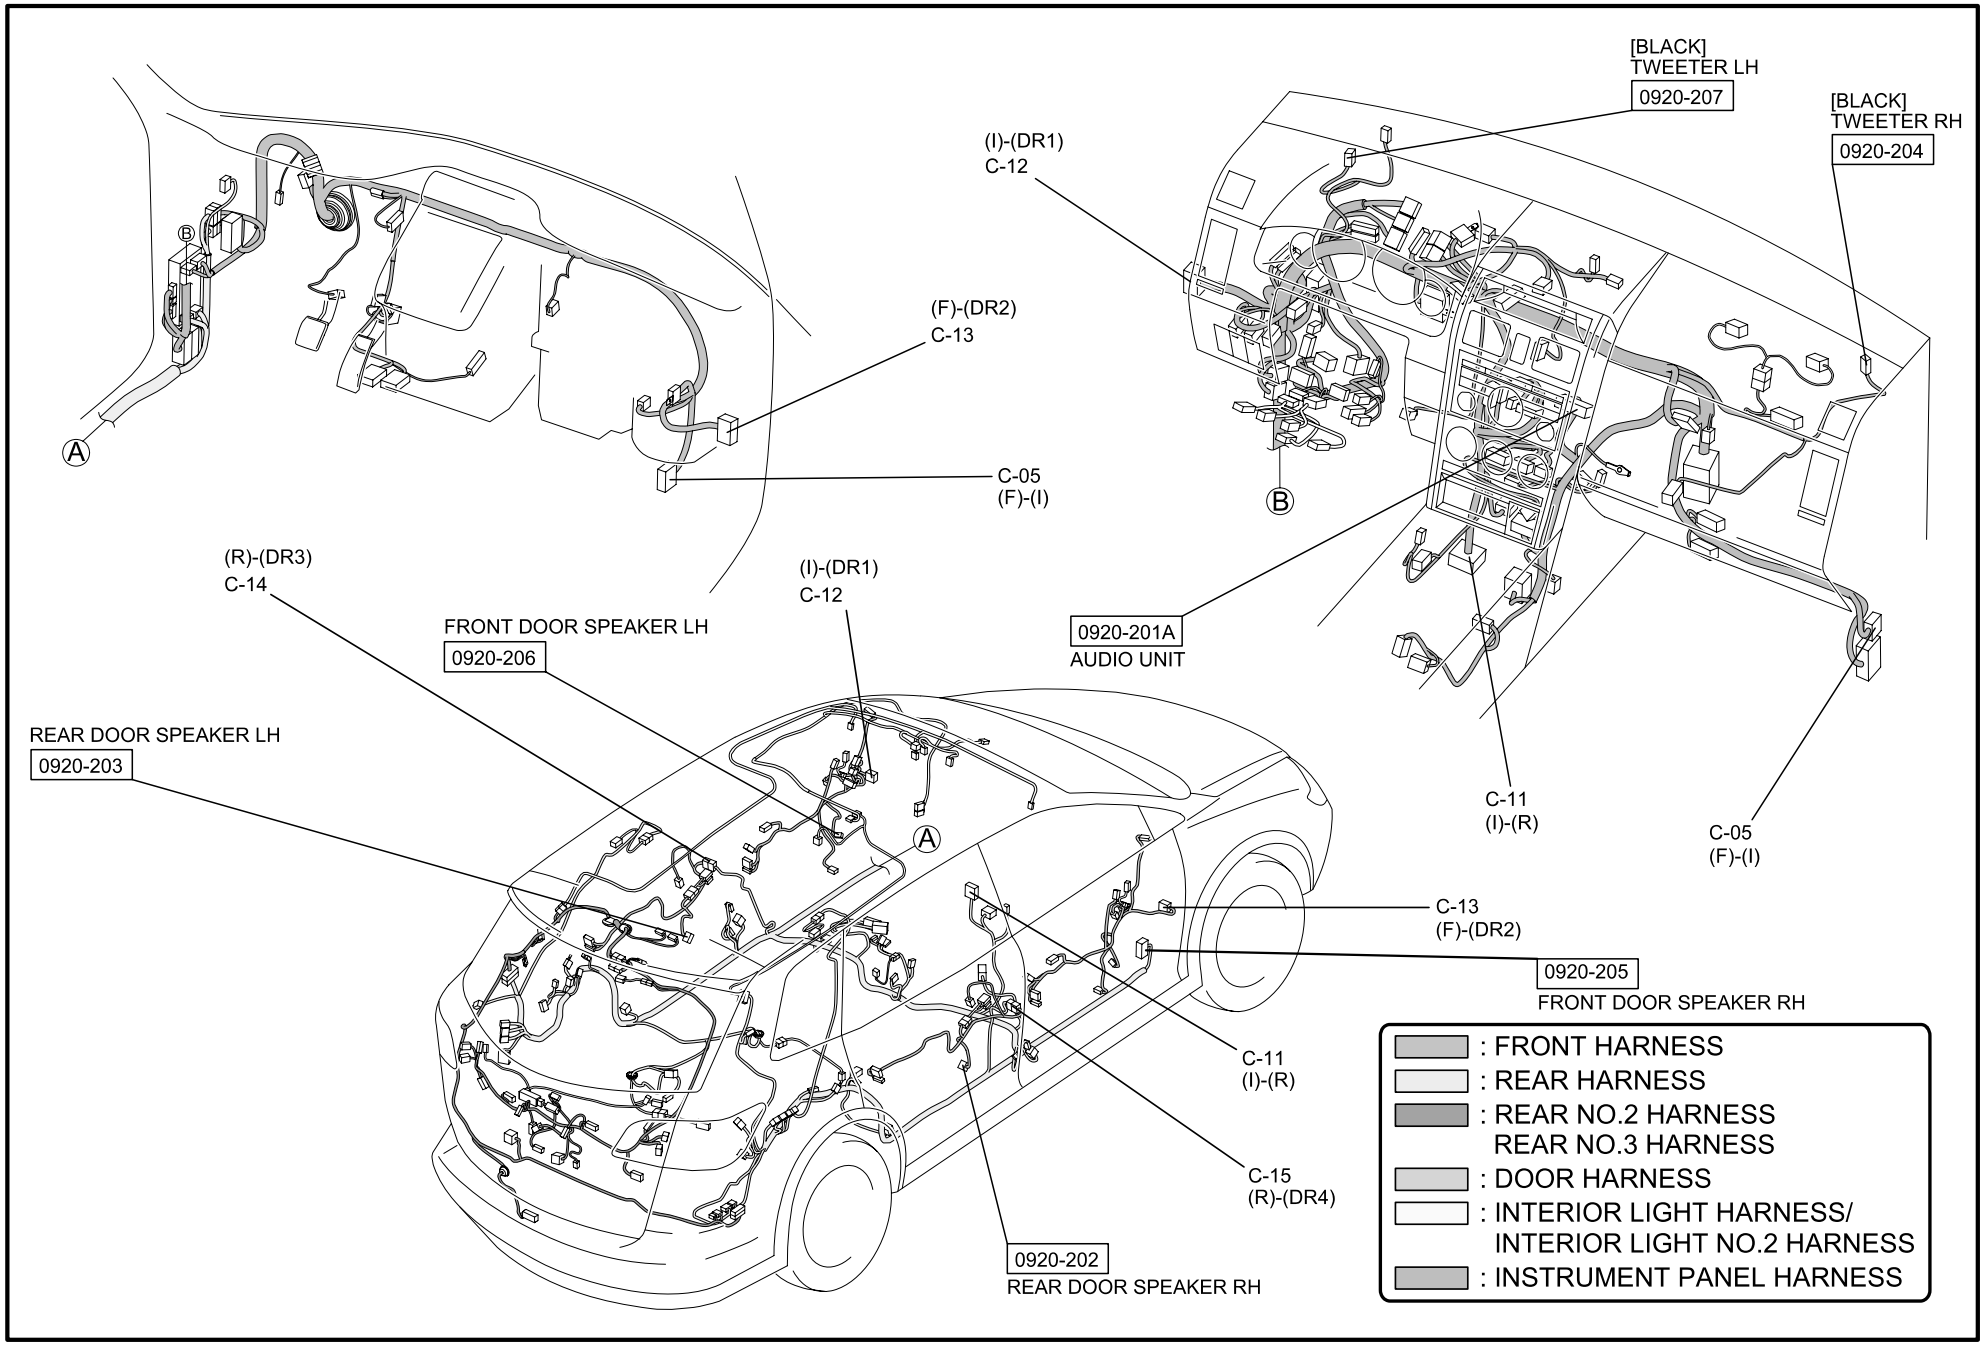
[BLACK]
TWEETER LH
0920-207
[BLACK]
TWEETER RH
0920-204
(I)-(DR1)
C-12
(F)-(DR2)
C-13
C-05
(F)-(I)
(R)-(DR3)
C-14
(I)-(DR1)
C-12
FRONT DOOR SPEAKER LH
0920-206
0920-201A
AUDIO UNIT
REAR DOOR SPEAKER LH
0920-203
C-11
(I)-(R)
C-05
(F)-(I)
C-13
(F)-(DR2)
0920-205
FRONT DOOR SPEAKER RH
C-11
(I)-(R)
C-15
(R)-(DR4)
0920-202
REAR DOOR SPEAKER RH
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

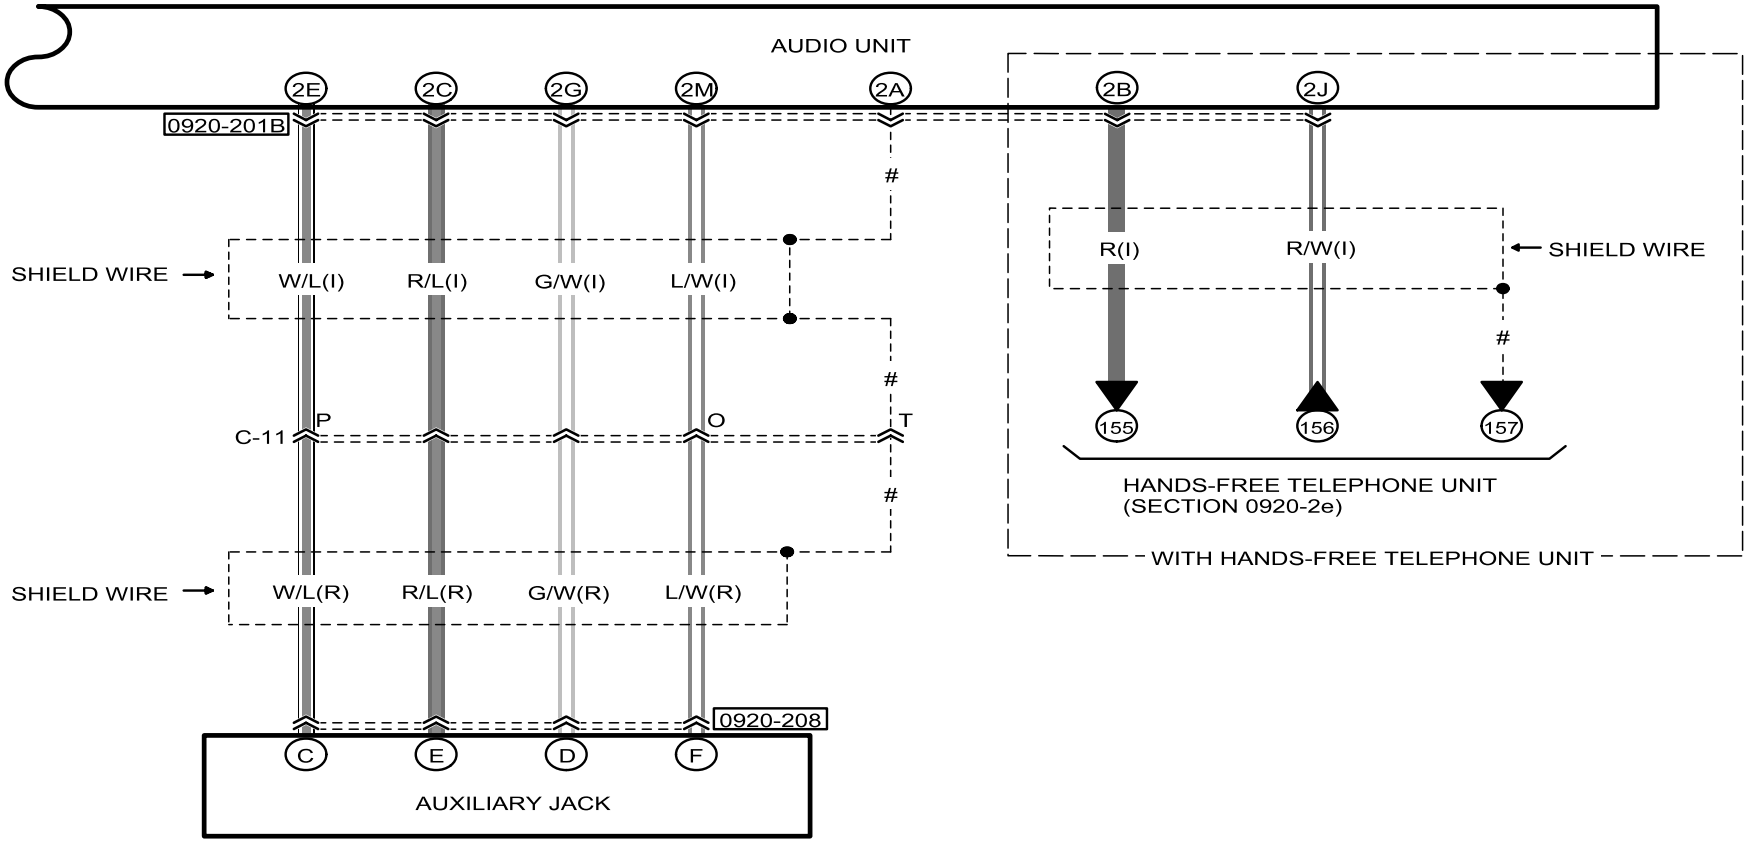


0920-201B
AUDIO UNIT

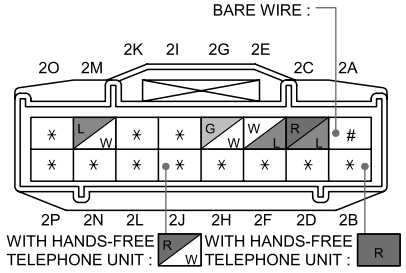


0920-208
AUXILIARY JACK




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

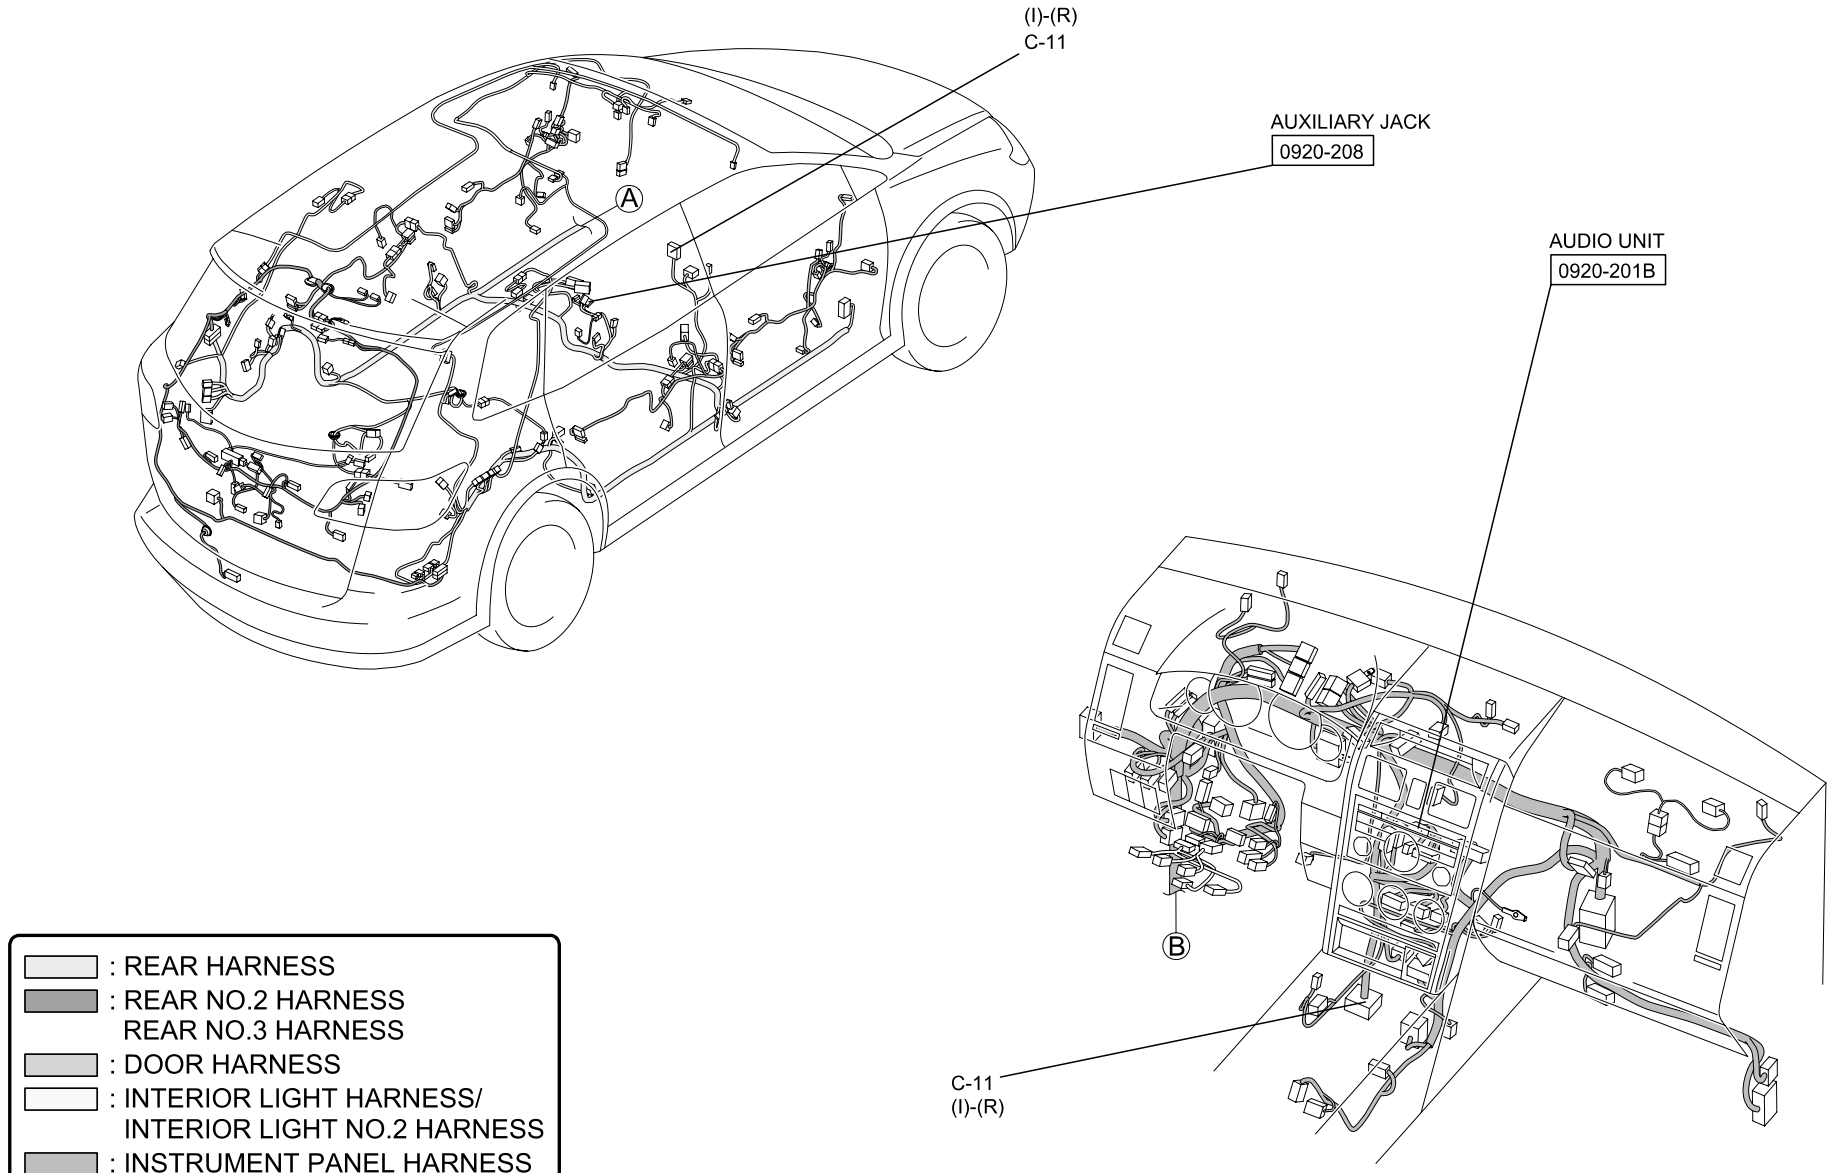

(I)-(R)
C-11
AUXILIARY JACK
0920-208
AUDIO UNIT
0920-201B
A
B
C-11
(I)-(R)
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

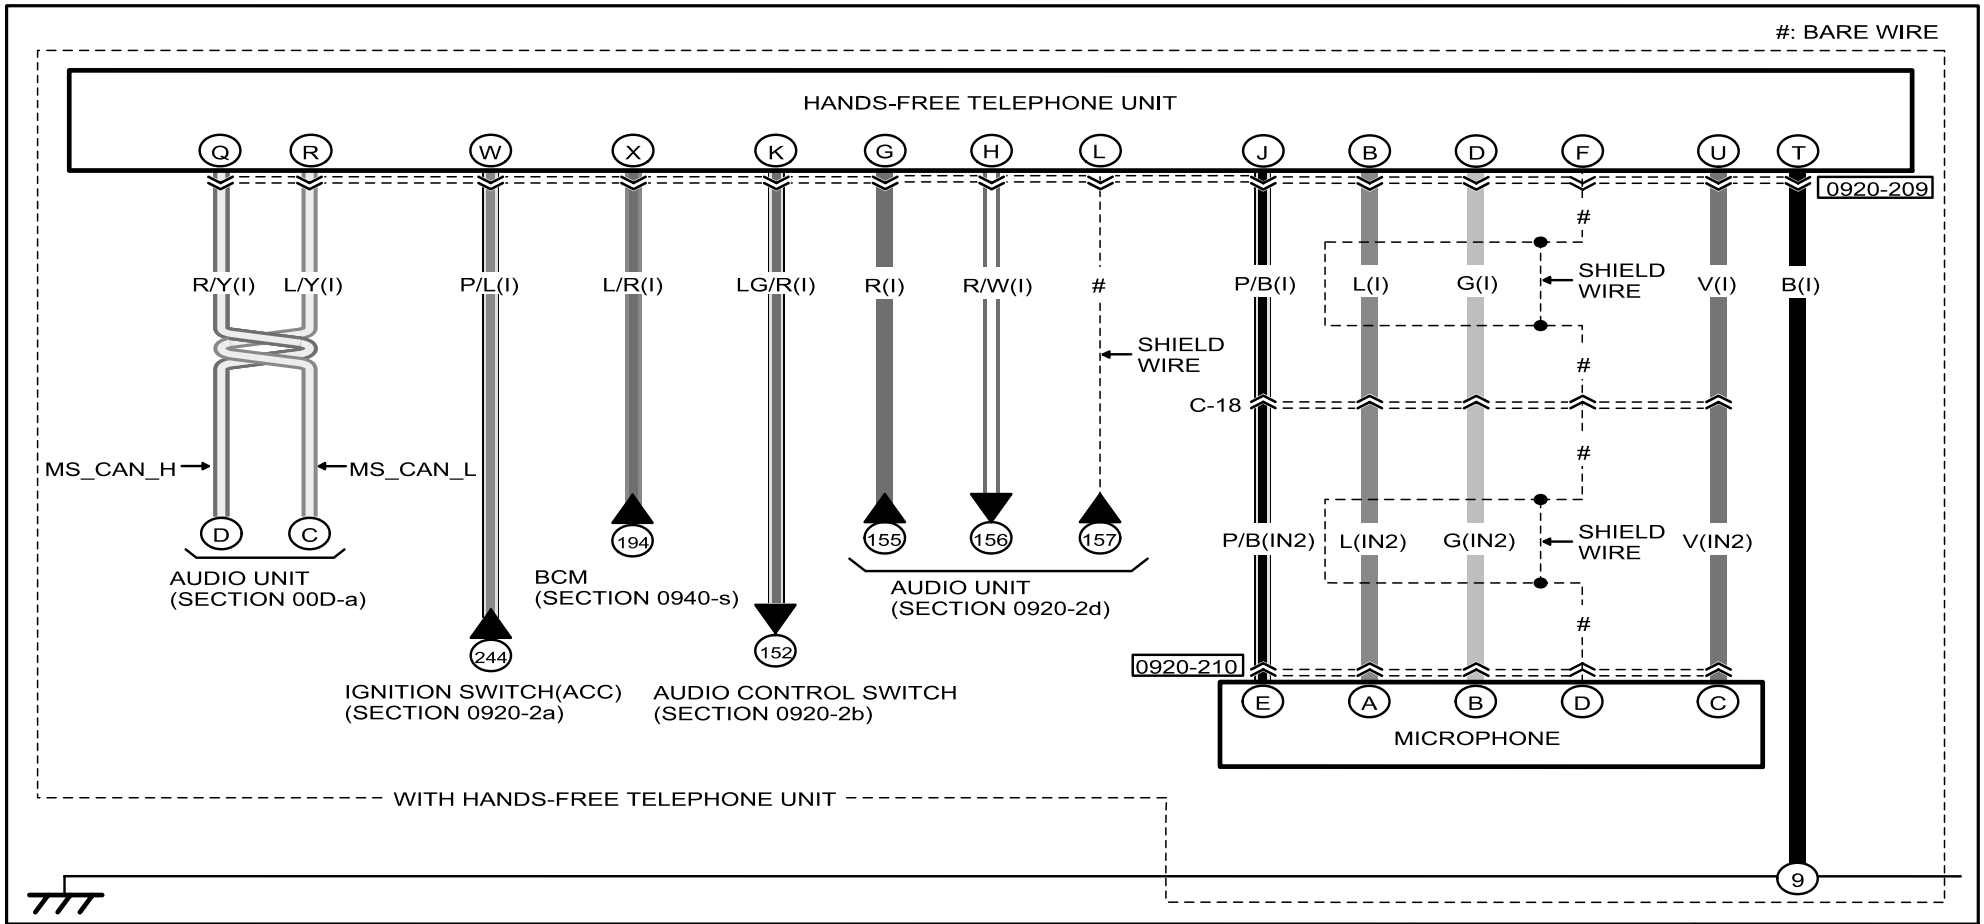


0920-209
HANDS-FREE TELEPHONE UNIT

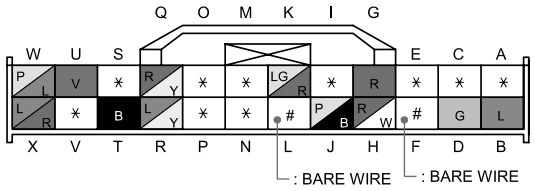


0920-210
MICROPHONE

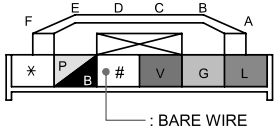


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

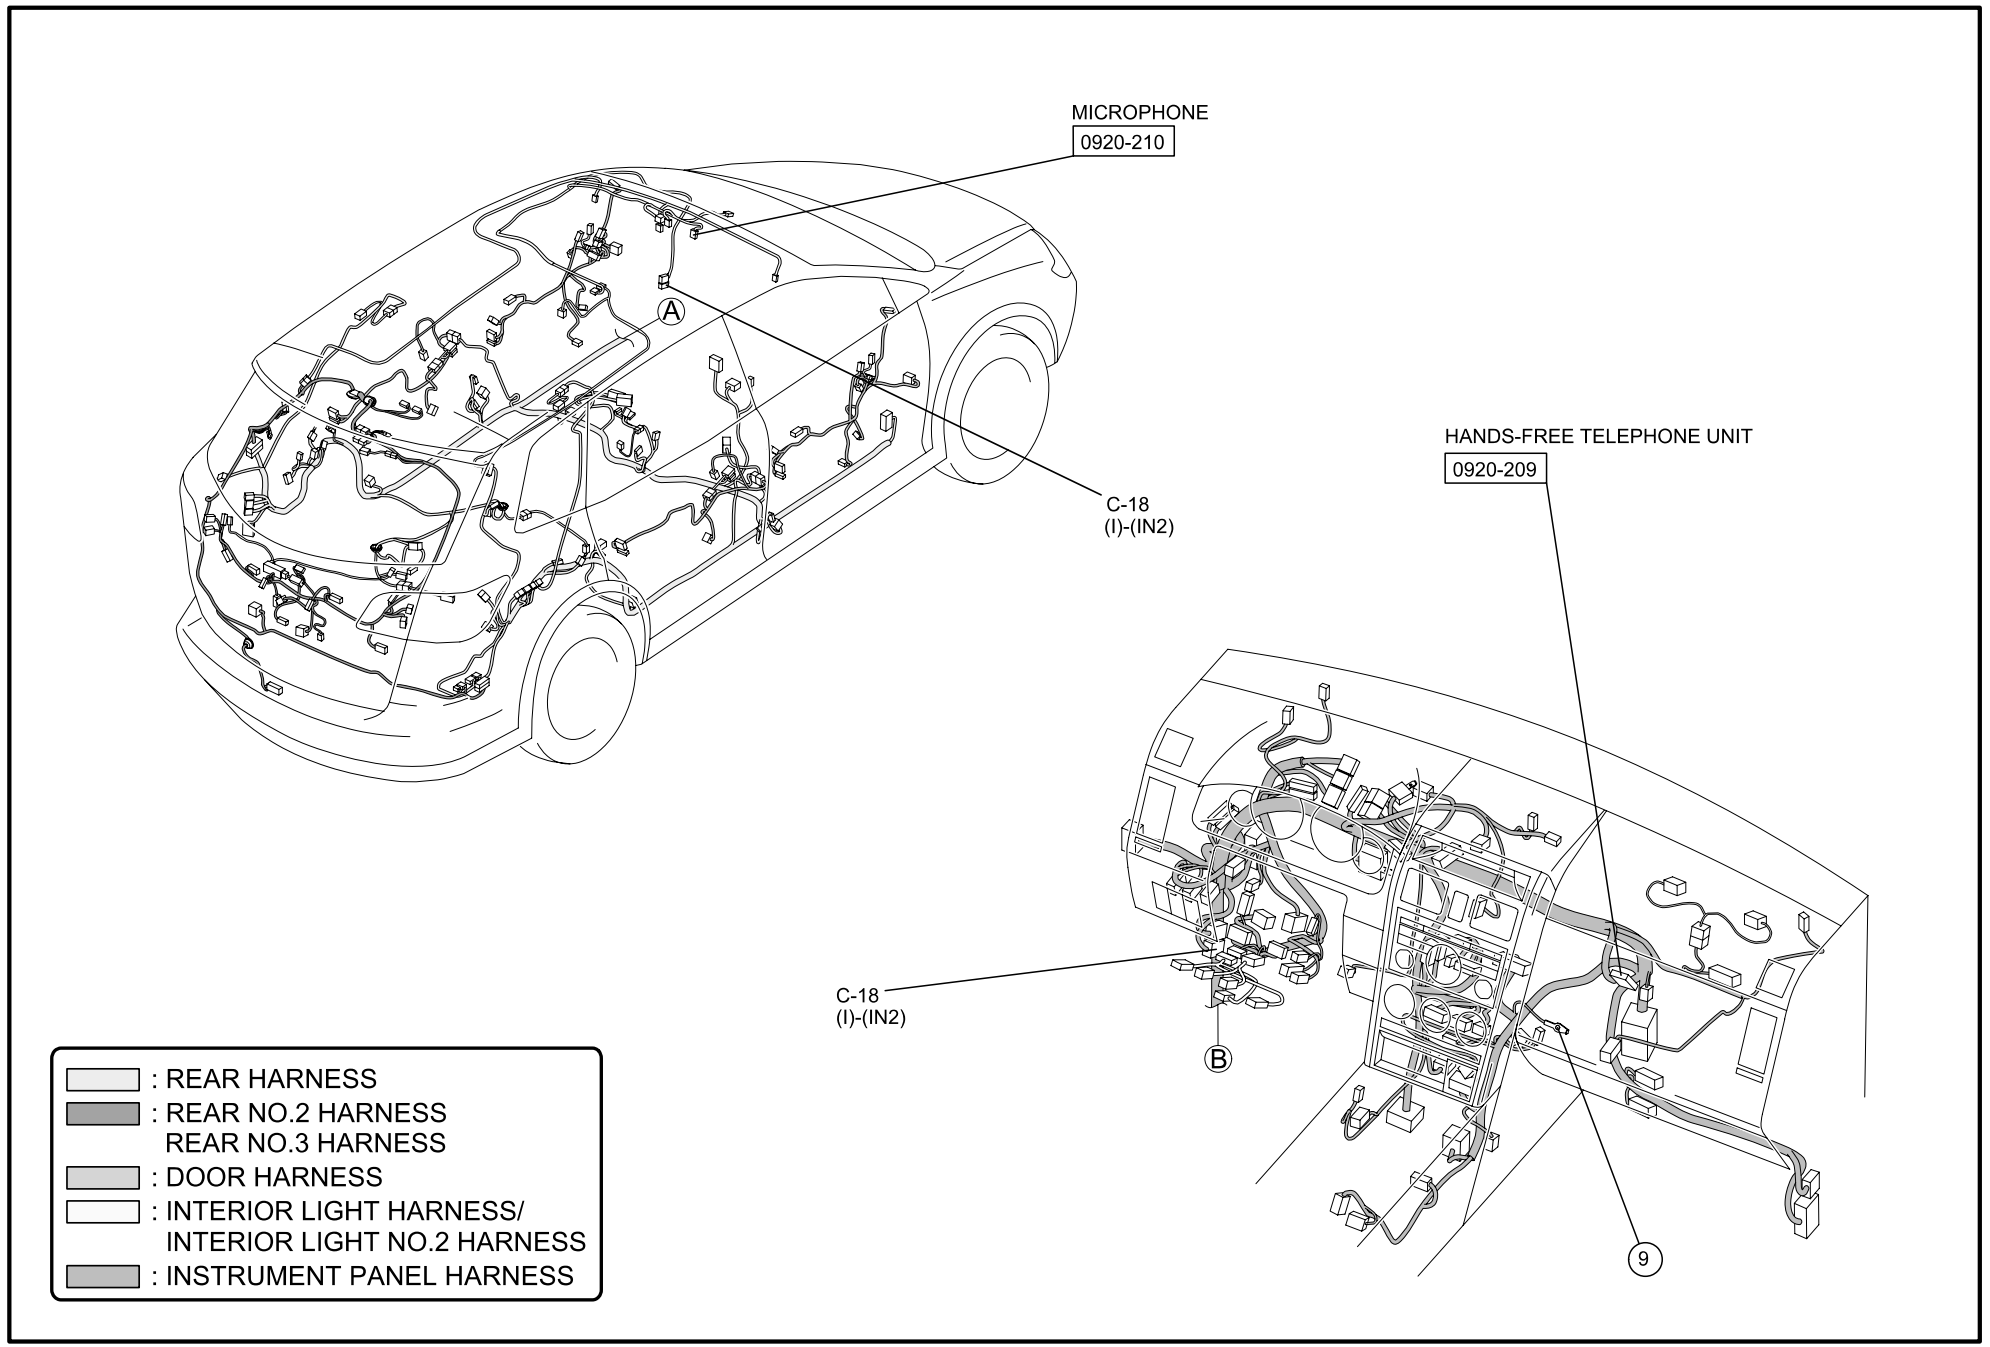

MICROPHONE
0920-210
A
C-18
(I)-(IN2)
HANDS-FREE TELEPHONE UNIT
0920-209
C-18
(I)-(IN2)
B
9
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

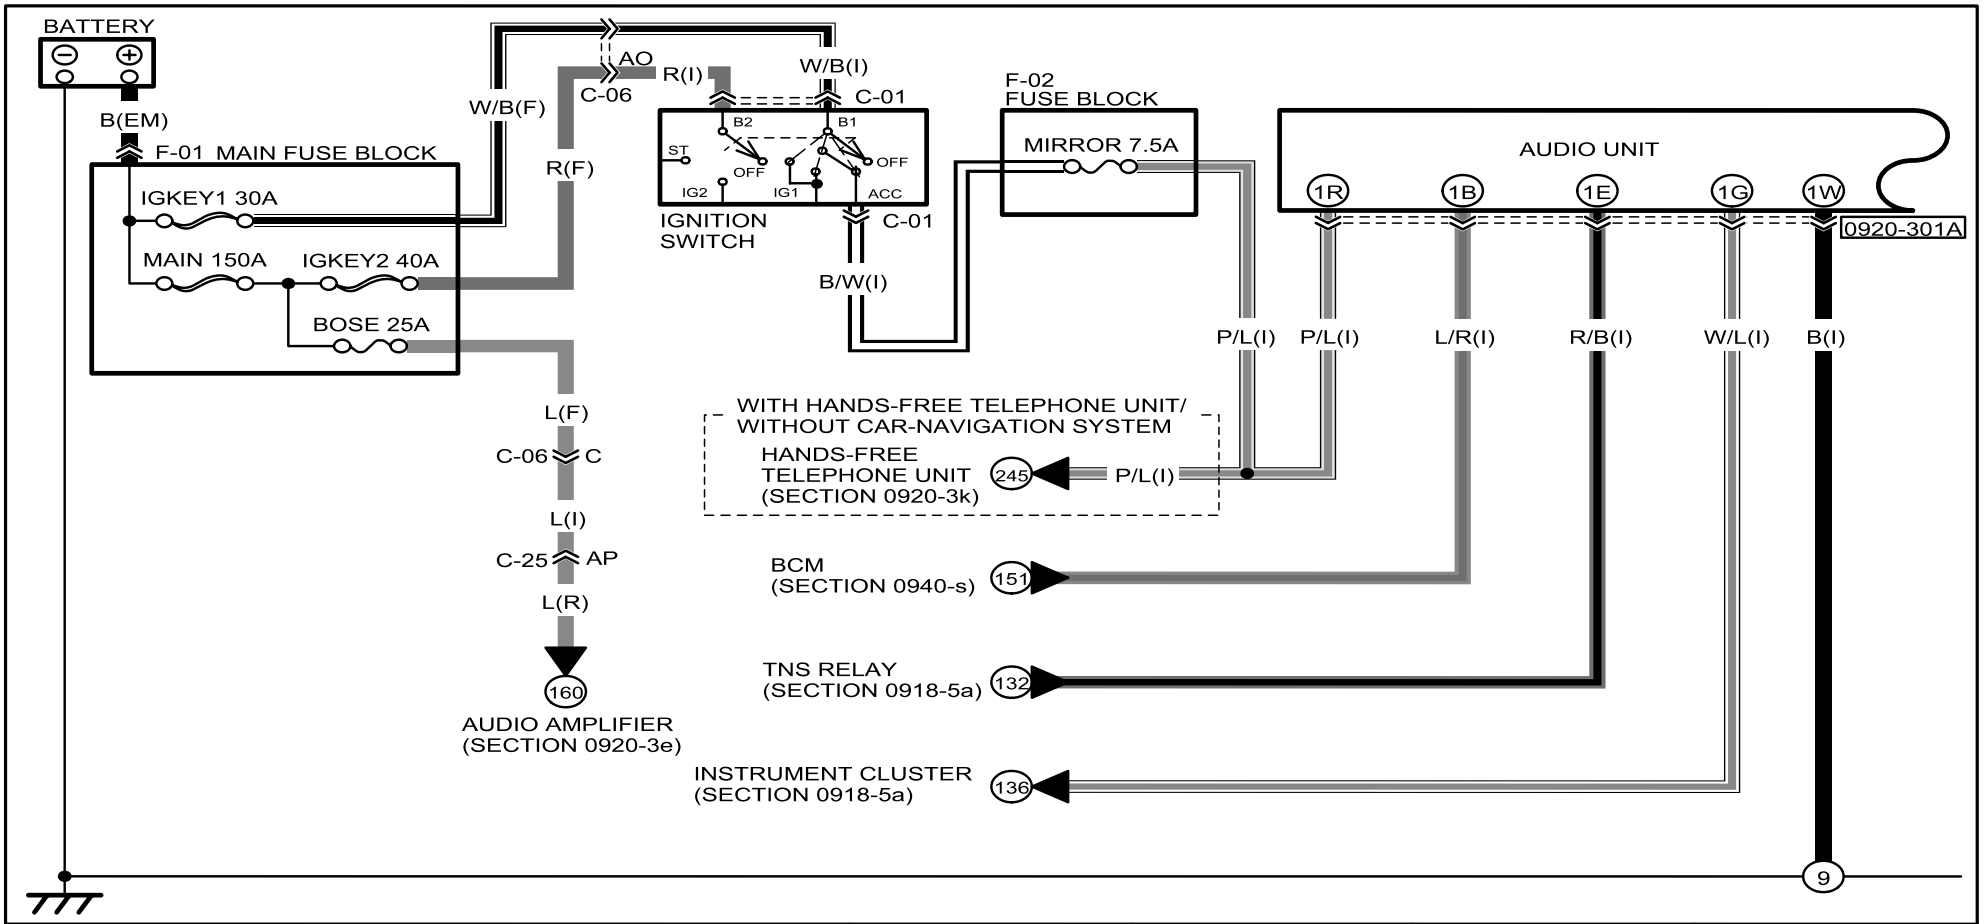


0920-301A
AUDIO UNIT

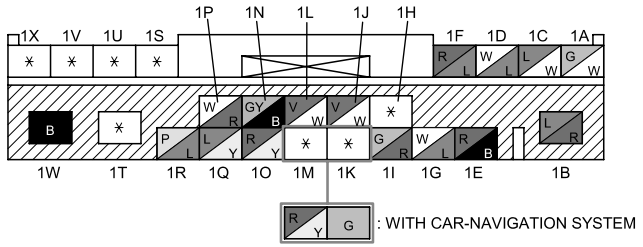


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

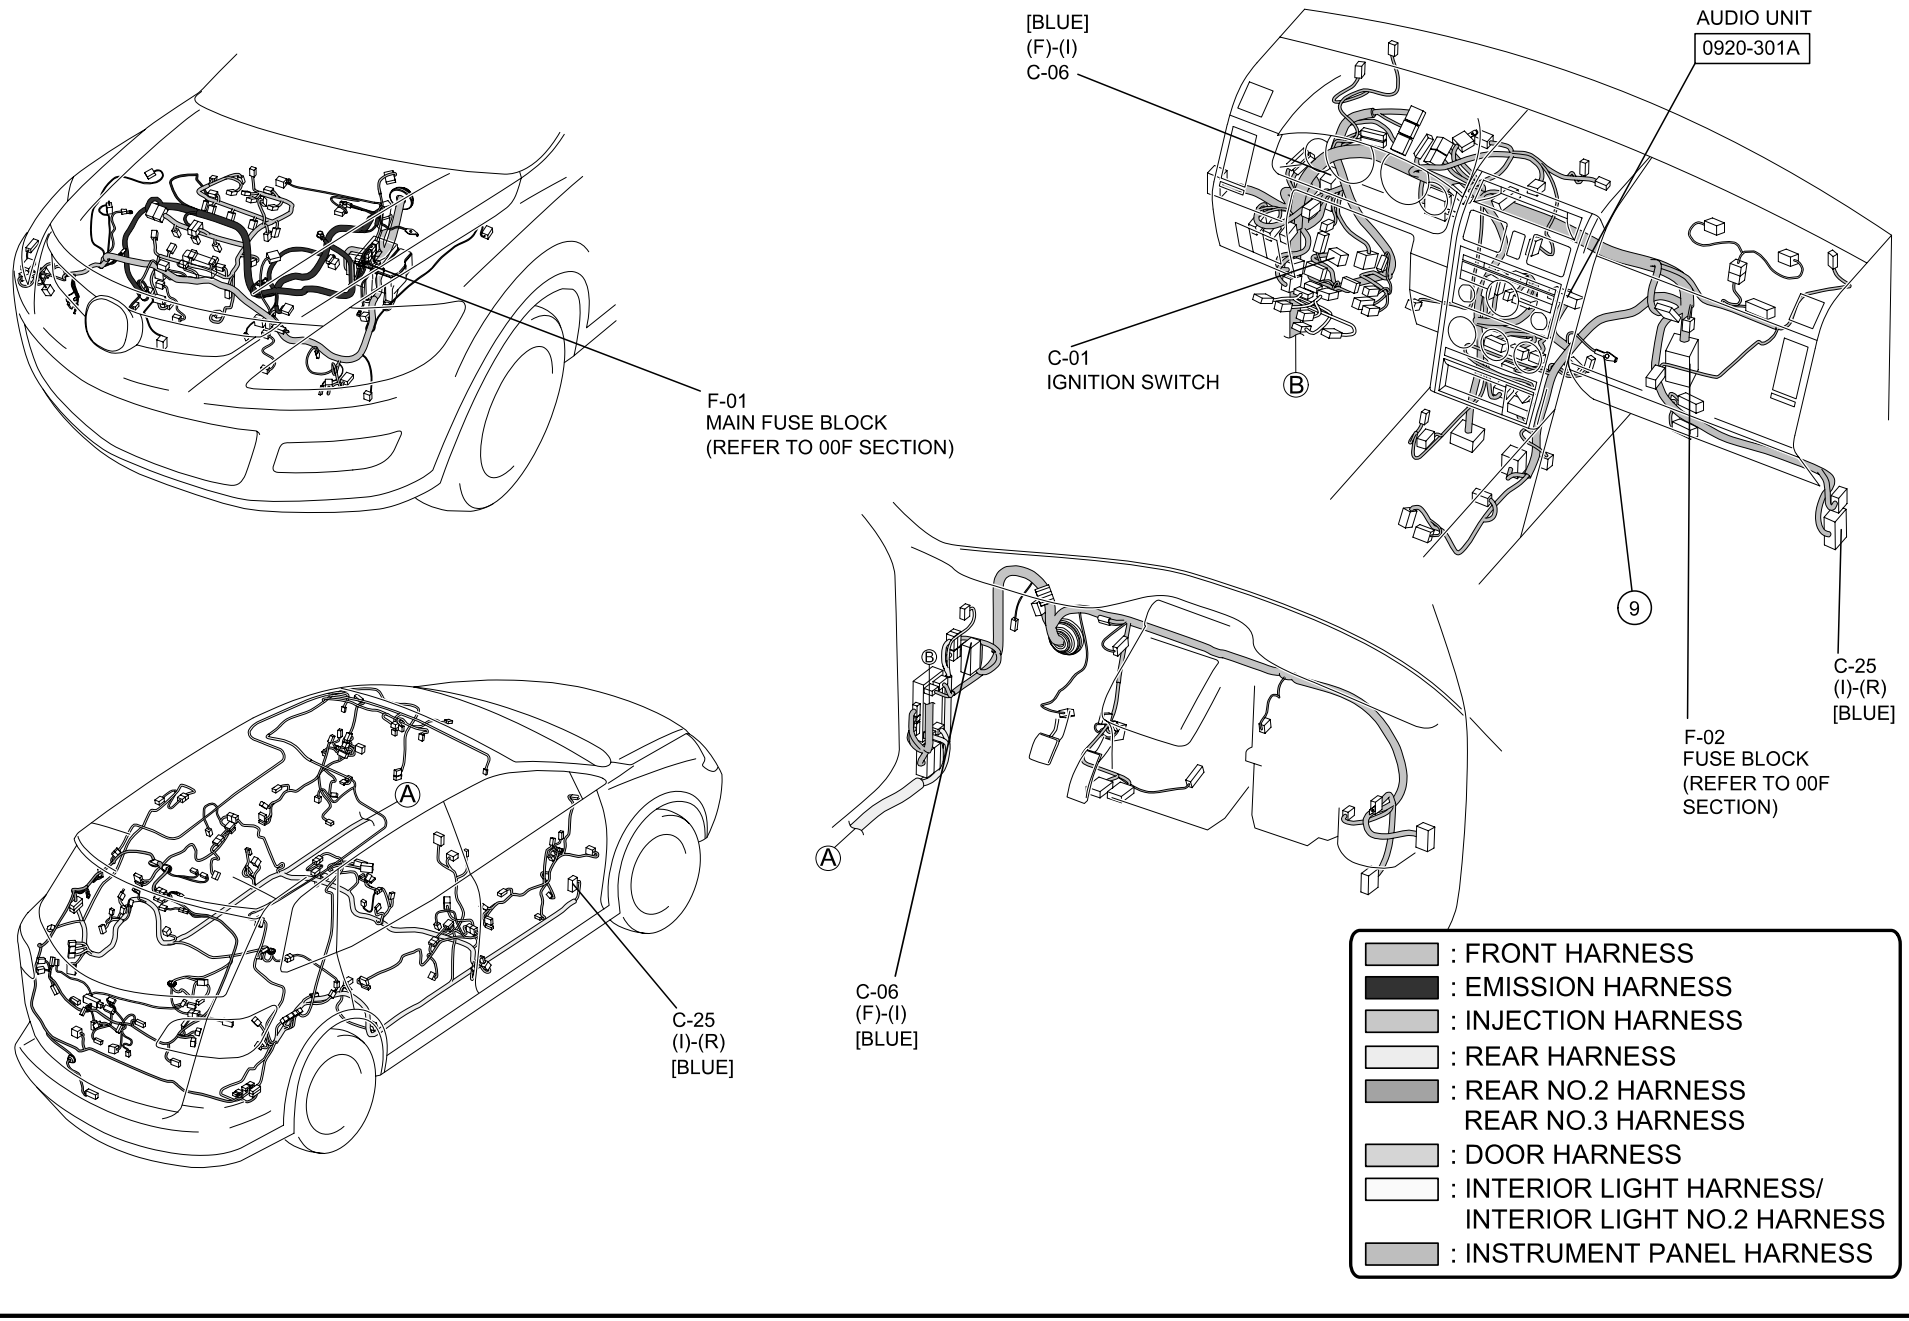
[BLUE]
(F)-(I)
C-06
AUDIO UNIT
0920-301A
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-01
IGNITION SWITCH
B
9
C-25
(I)-(R)
[BLUE]
F-02
FUSE BLOCK
(REFER TO 00F
SECTION)
A
C-06
(F)-(I)
[BLUE]
C-25
(I)-(R)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


[ ] WITH VOICE

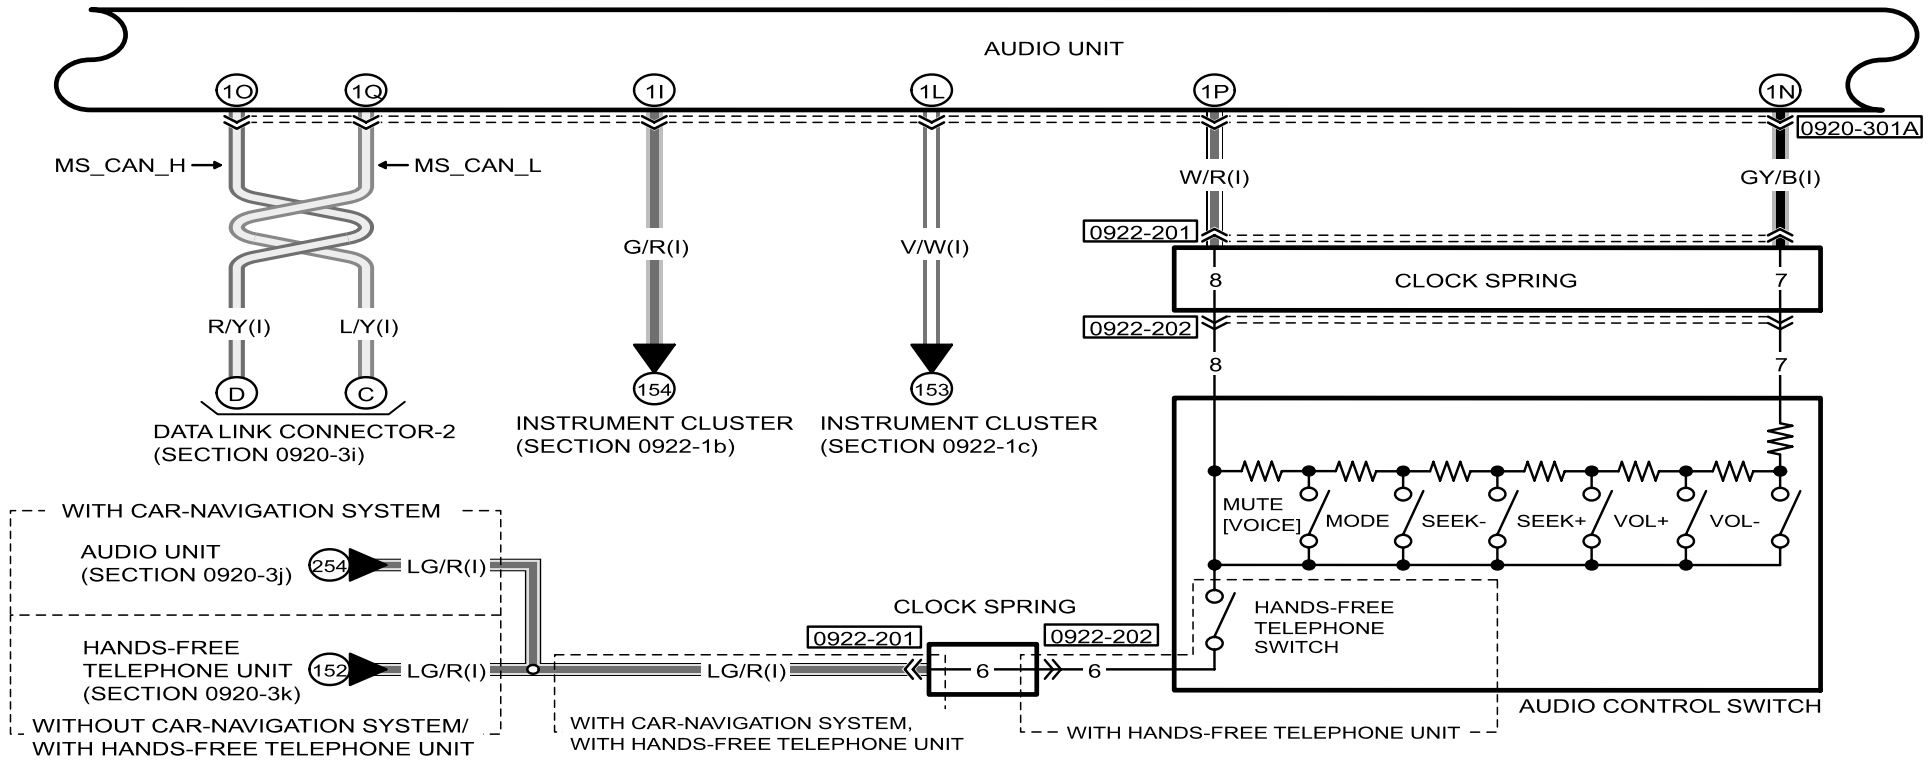


0922-201
CLOCK SPRING

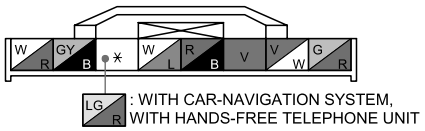


0922-202
CRUISE CONTROL SWITCH /
AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION/
CRUISE CONTROL SWITCH
ILLUMINATION / CLOCK SPRING

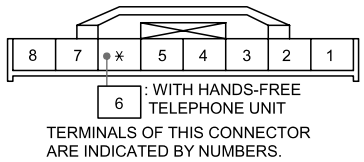


0920-301A
AUDIO UNIT

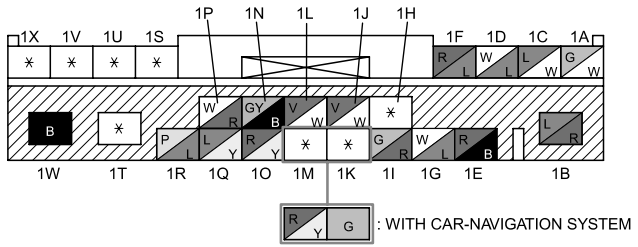


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

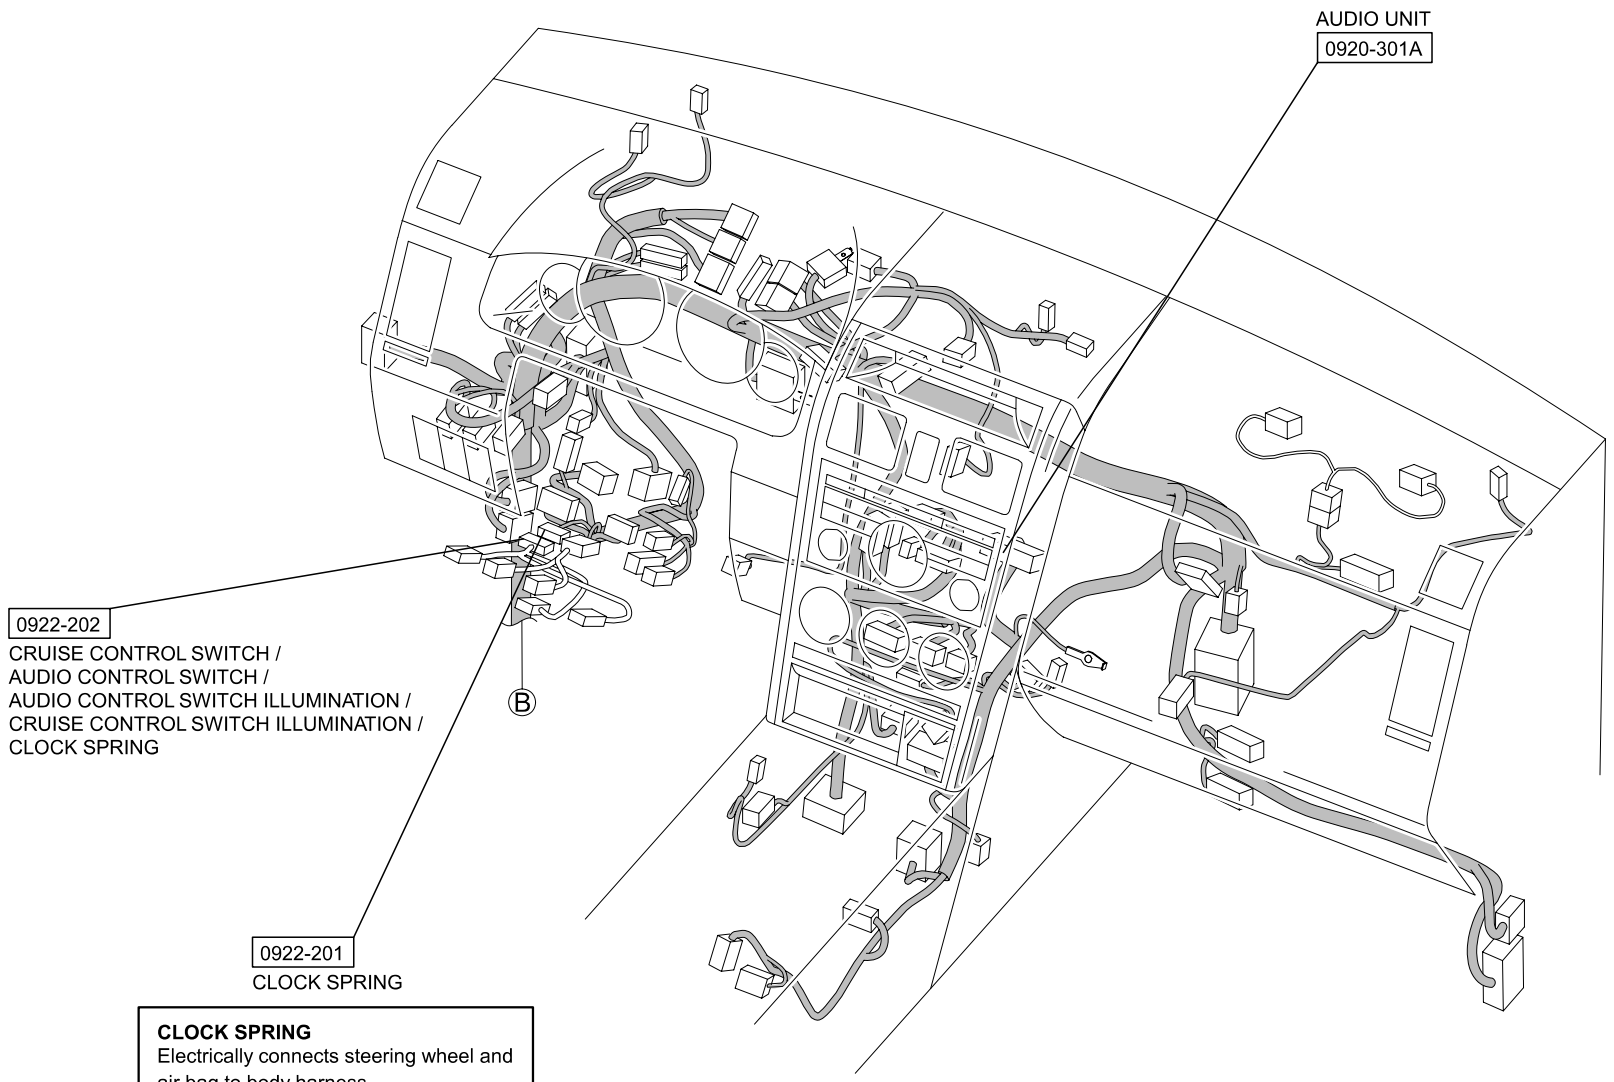
AUDIO UNIT
0920-301A
0922-202
CRUISE CONTROL SWITCH /
AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
CLOCK SPRING
B
0922-201
CLOCK SPRING
CLOCK SPRING
Electrically connects steering wheel and air bag to body harness.
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

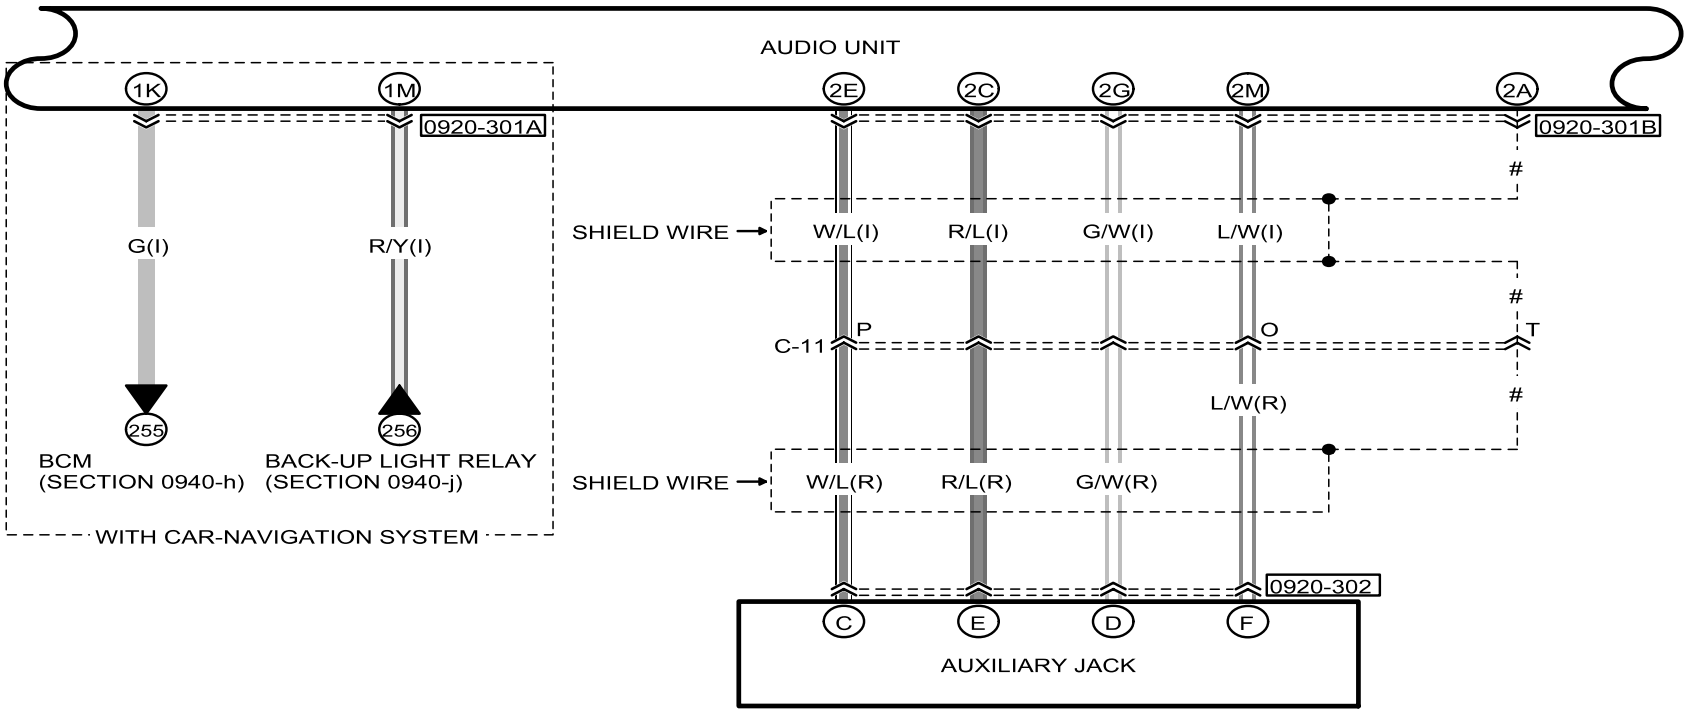


0920-301A
AUDIO UNIT

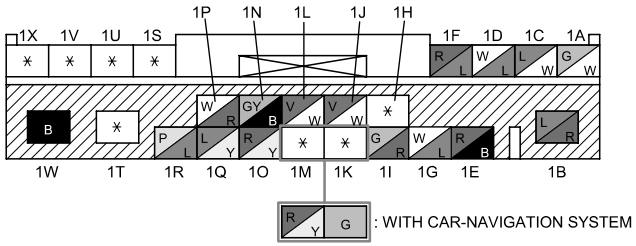


0920-301B
AUDIO UNIT

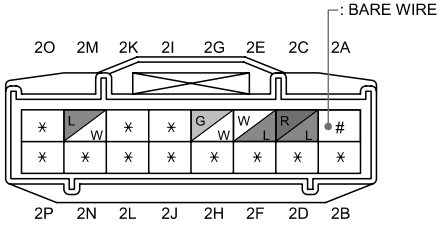


0920-302
AUXILIARY JACK




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

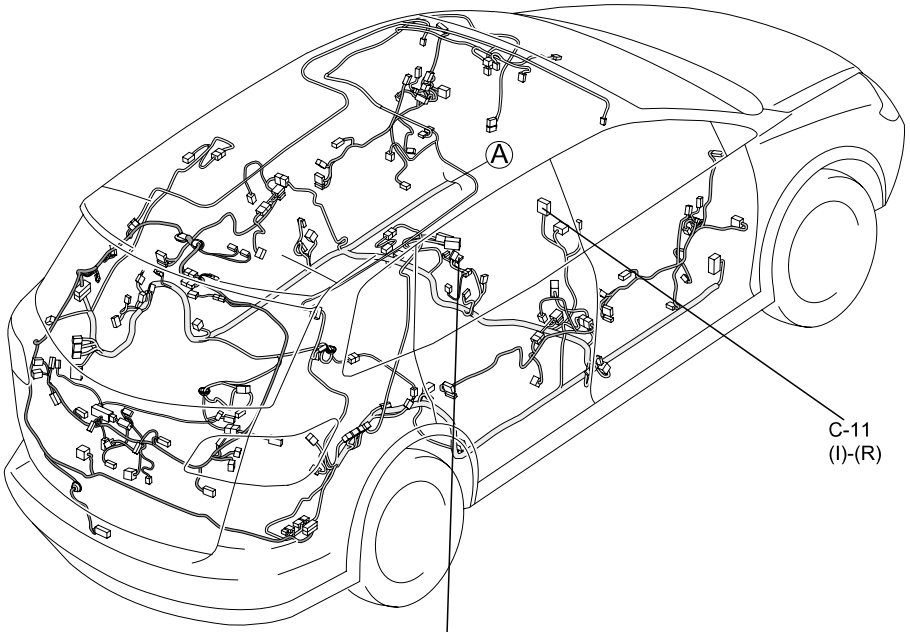

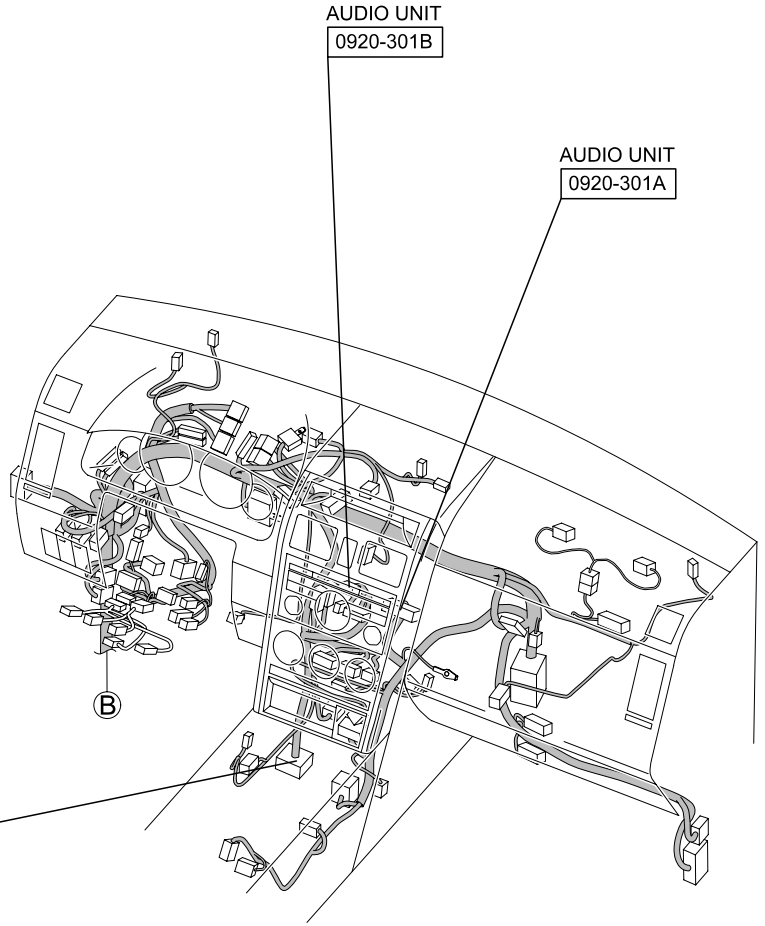


: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

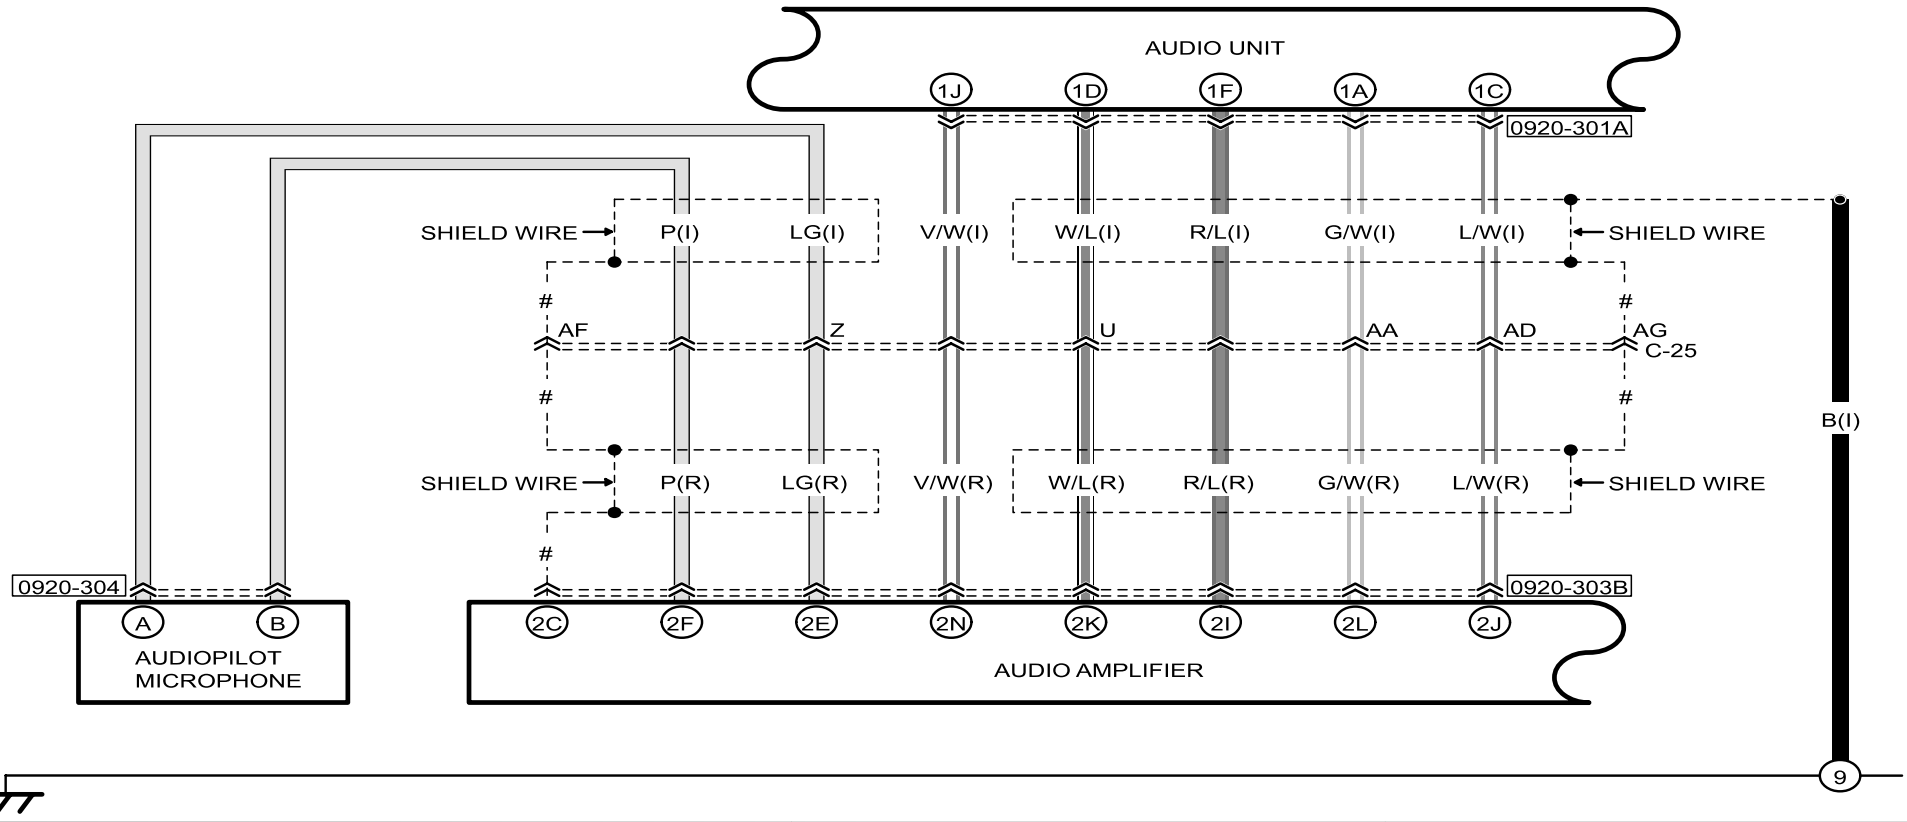


0920-301A
AUDIO UNIT

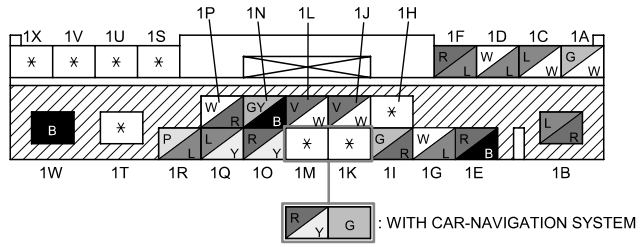


0920-303B
AUDIO AMPLIFIER

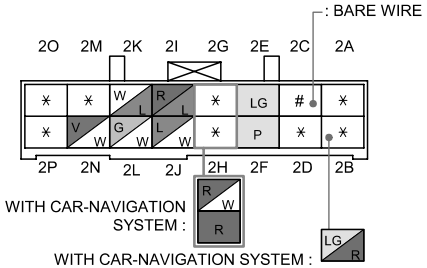


0920-304
AUDIOPILOT MICROPHONE




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

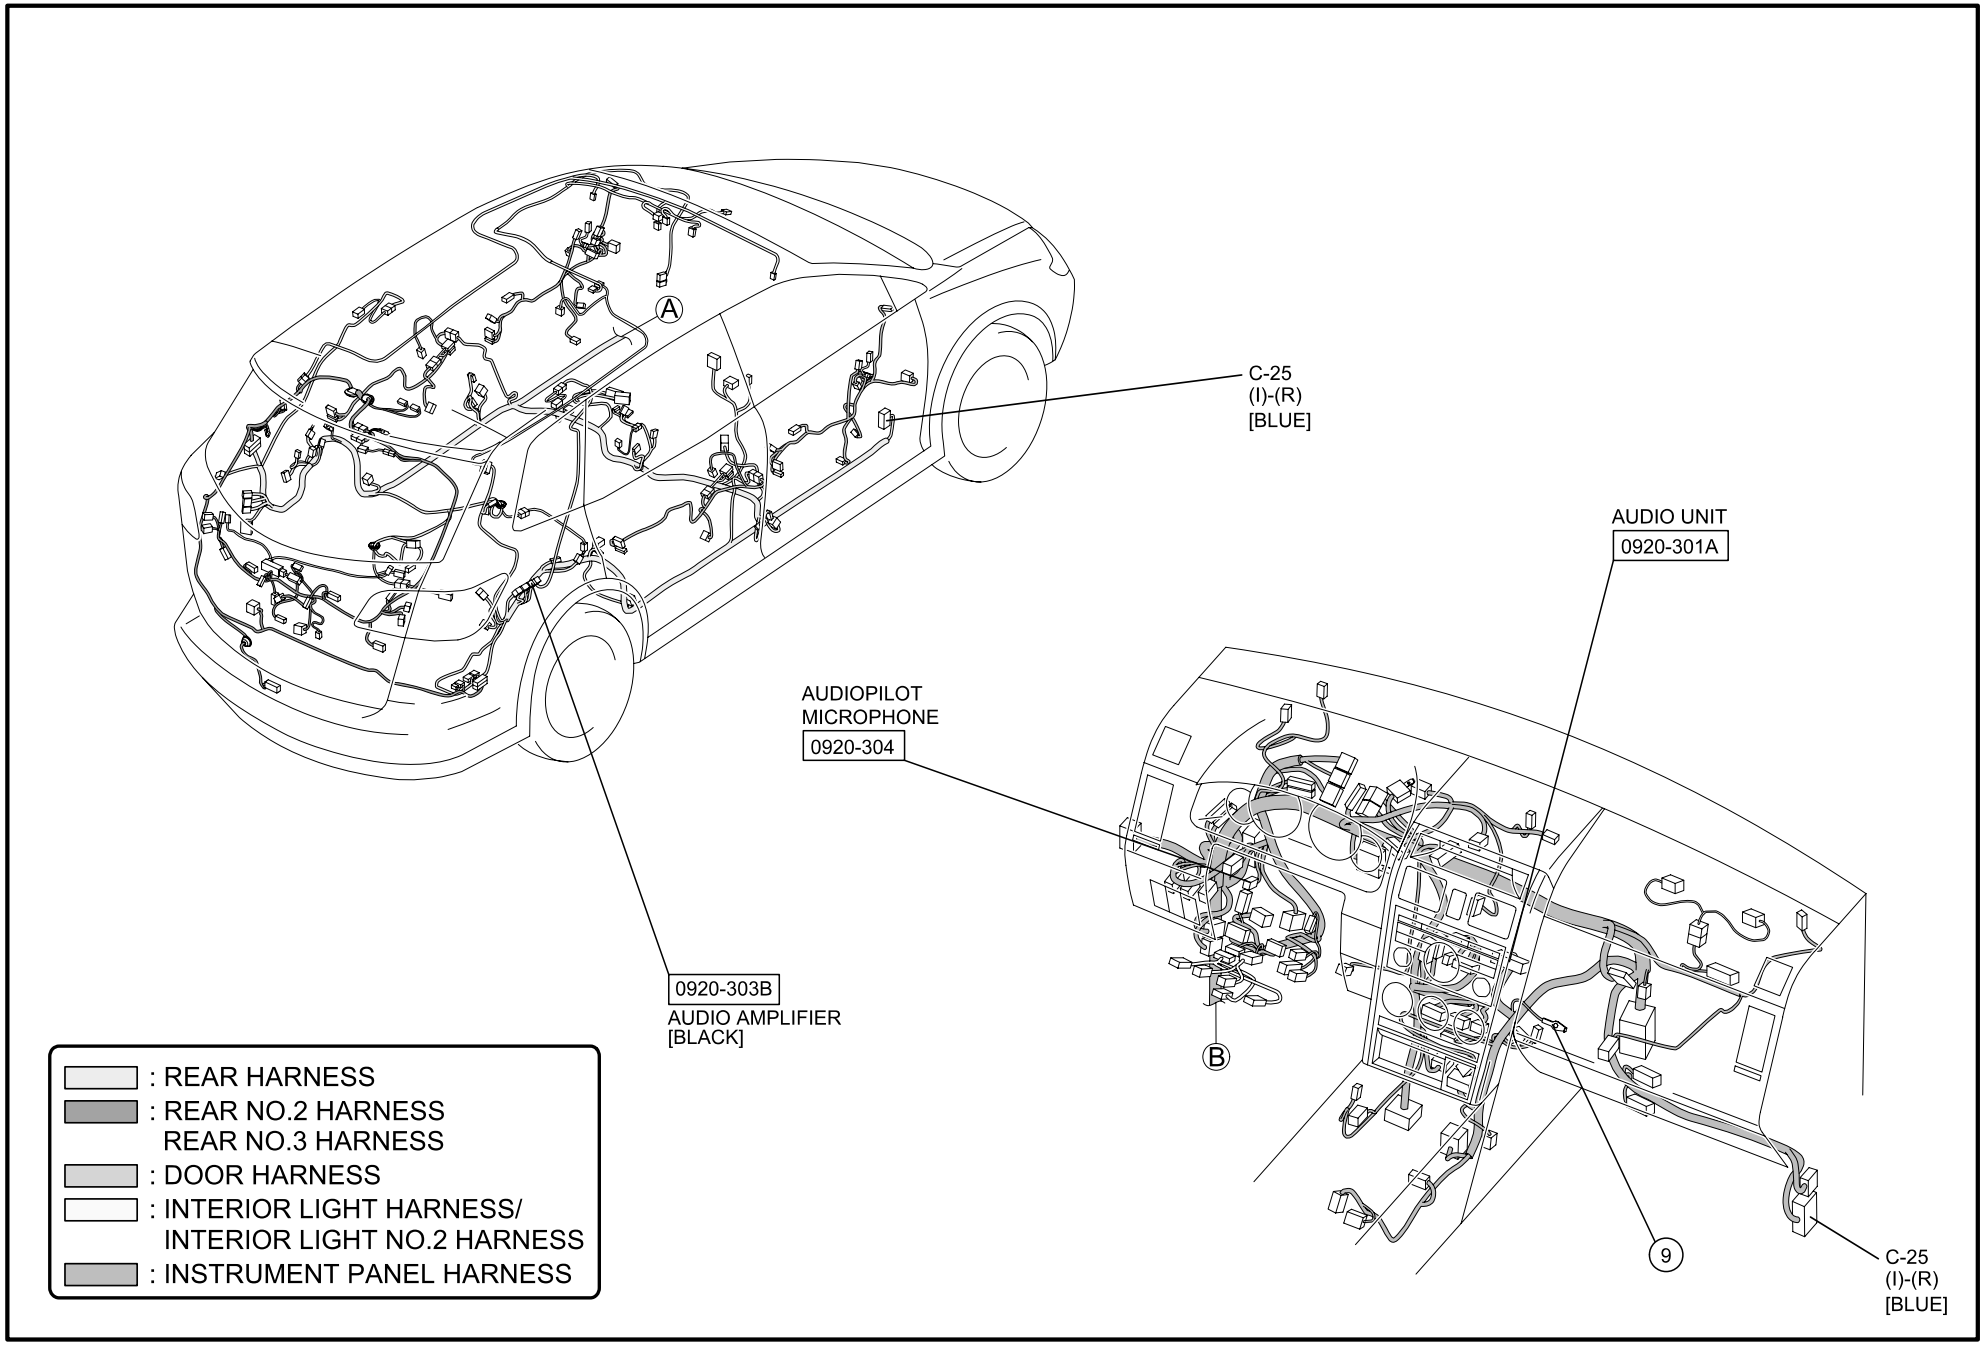

A
C-25
(I)-(R)
[BLUE]
AUDIO UNIT
0920-301A
AUDIOPILOT
MICROPHONE
0920-304
0920-303B
AUDIO AMPLIFIER
[BLACK]
B
9
C-25
(I)-(R)
[BLUE]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

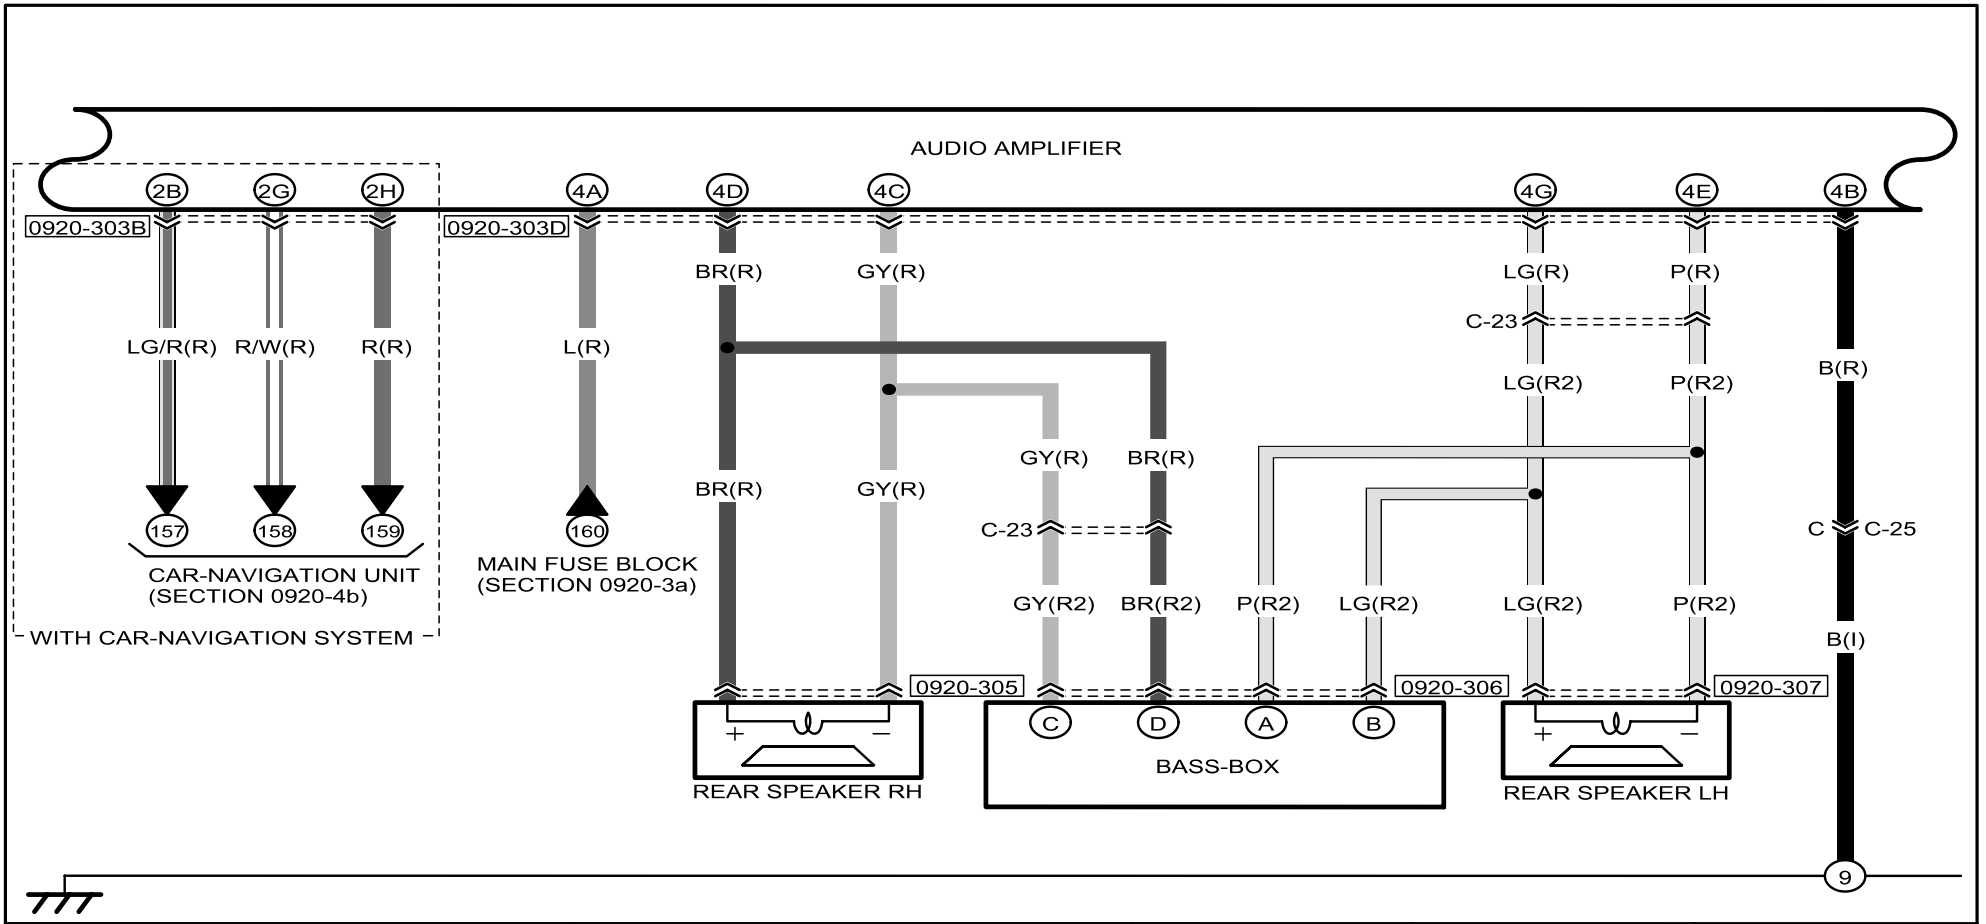

0920-303B
AUDIO AMPLIFIER

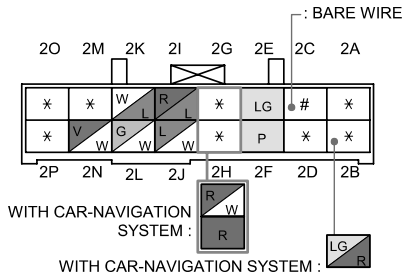


0920-303D
AUDIO AMPLIFIER

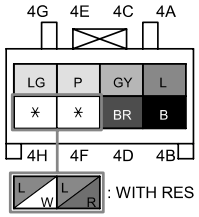


0920-305
REAR SPEAKER RH




0920-306
BASS-BOX

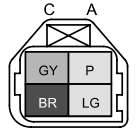


0920-307
REAR SPEAKER LH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

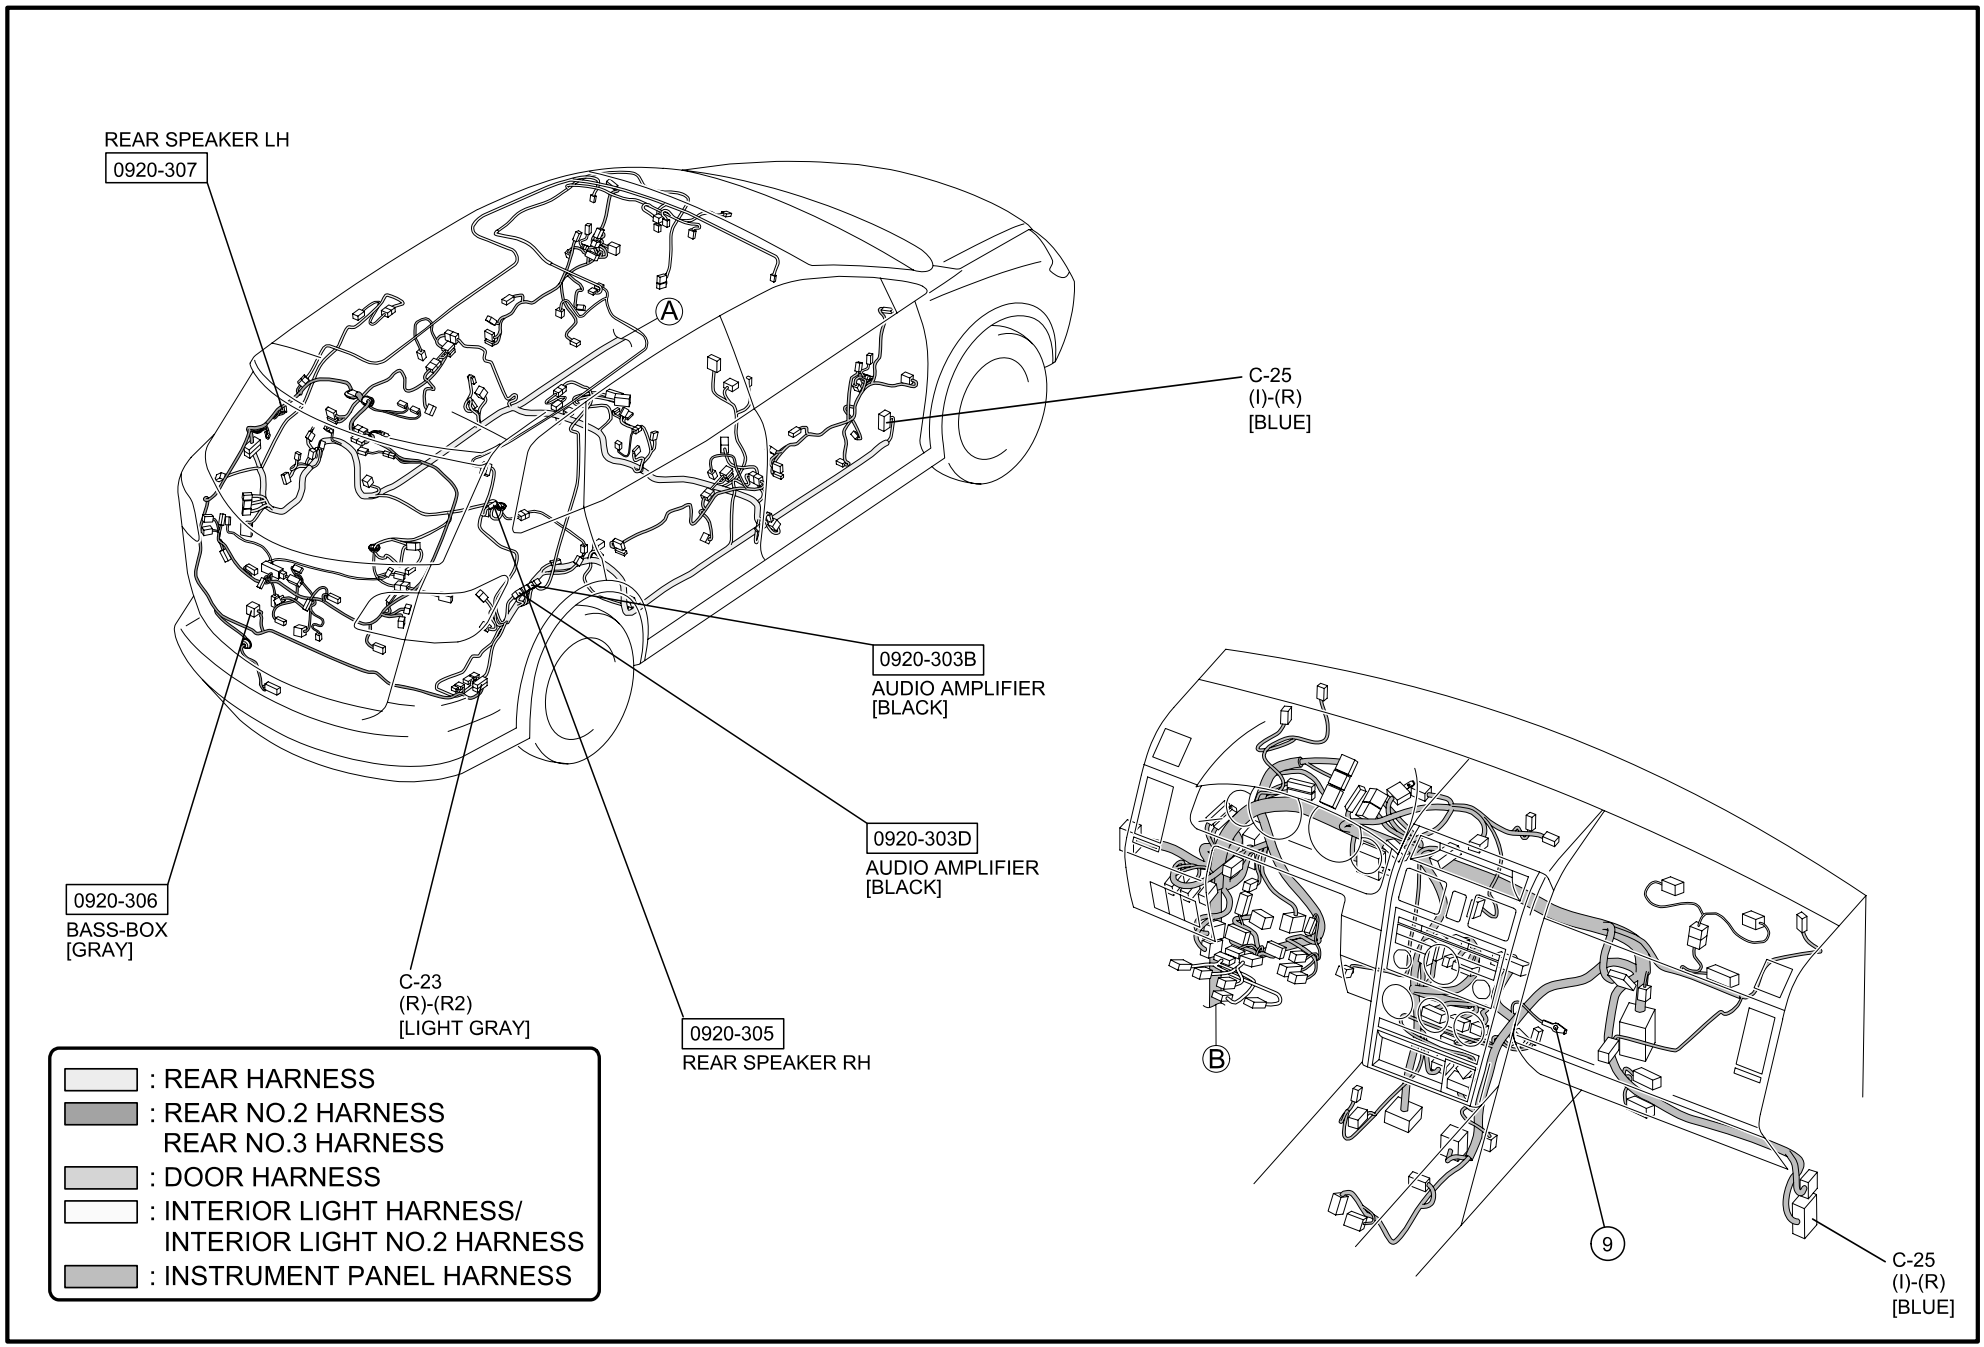
REAR SPEAKER LH
0920-307
A
C-25
(I)-(R)
[BLUE]
0920-303B
AUDIO AMPLIFIER
[BLACK]
0920-303D
AUDIO AMPLIFIER
[BLACK]
0920-306
BASS-BOX
[GRAY]
C-23
(R)-(R2)
[LIGHT GRAY]
0920-305
REAR SPEAKER RH
B
9
C-25
(I)-(R)
[BLUE]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

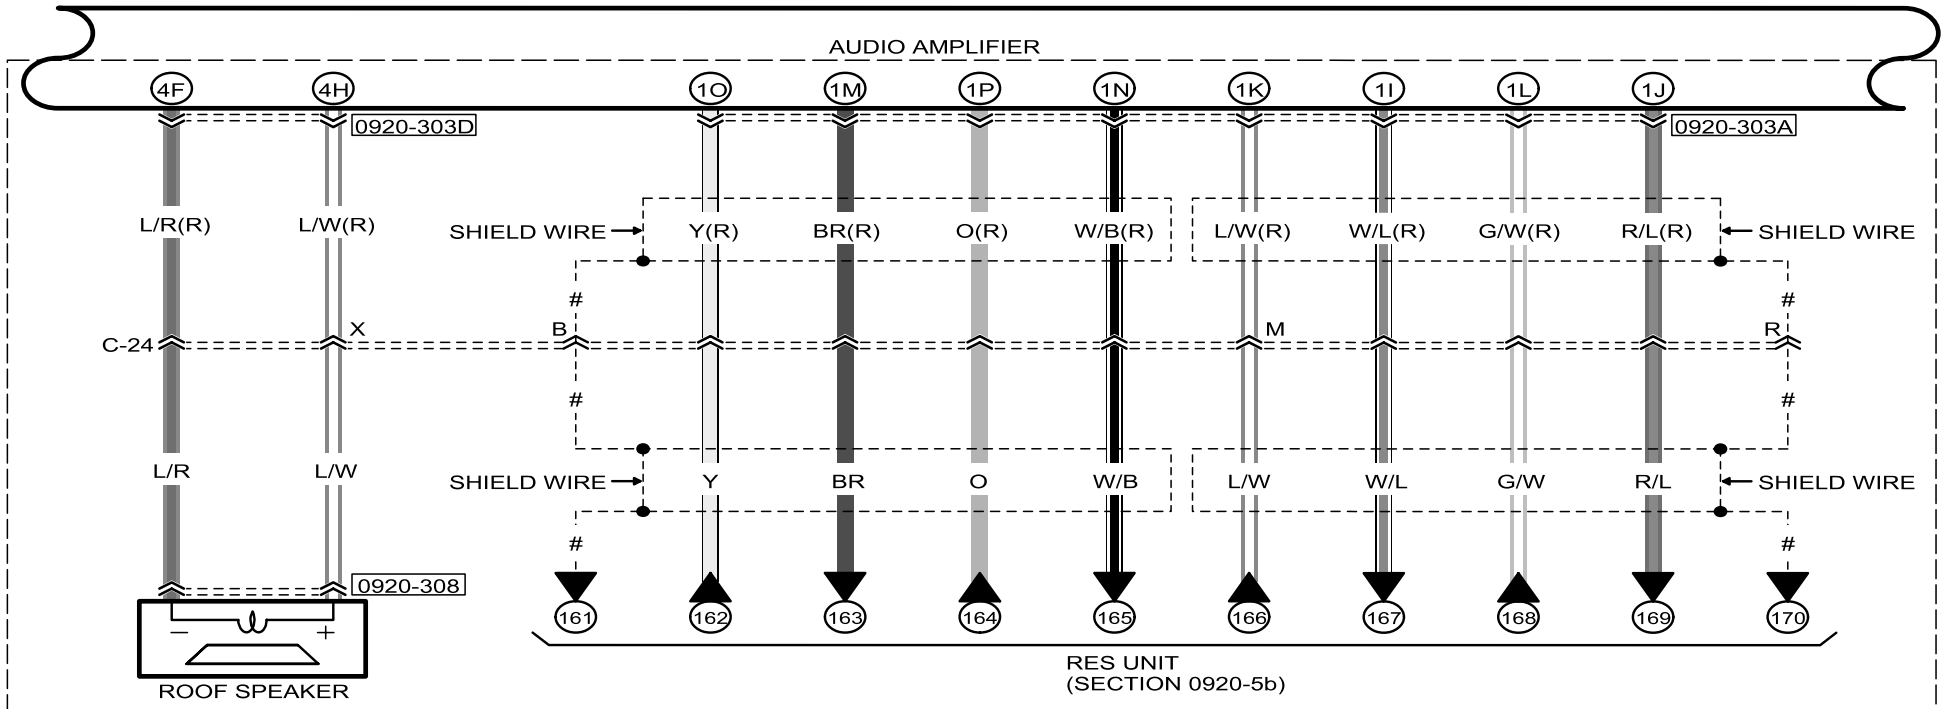

0920-303A
AUDIO AMPLIFIER

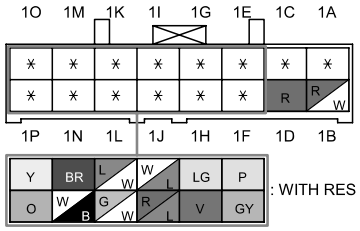


0920-303D
AUDIO AMPLIFIER

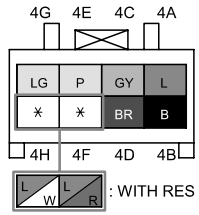


0920-308
ROOF SPEAKER




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

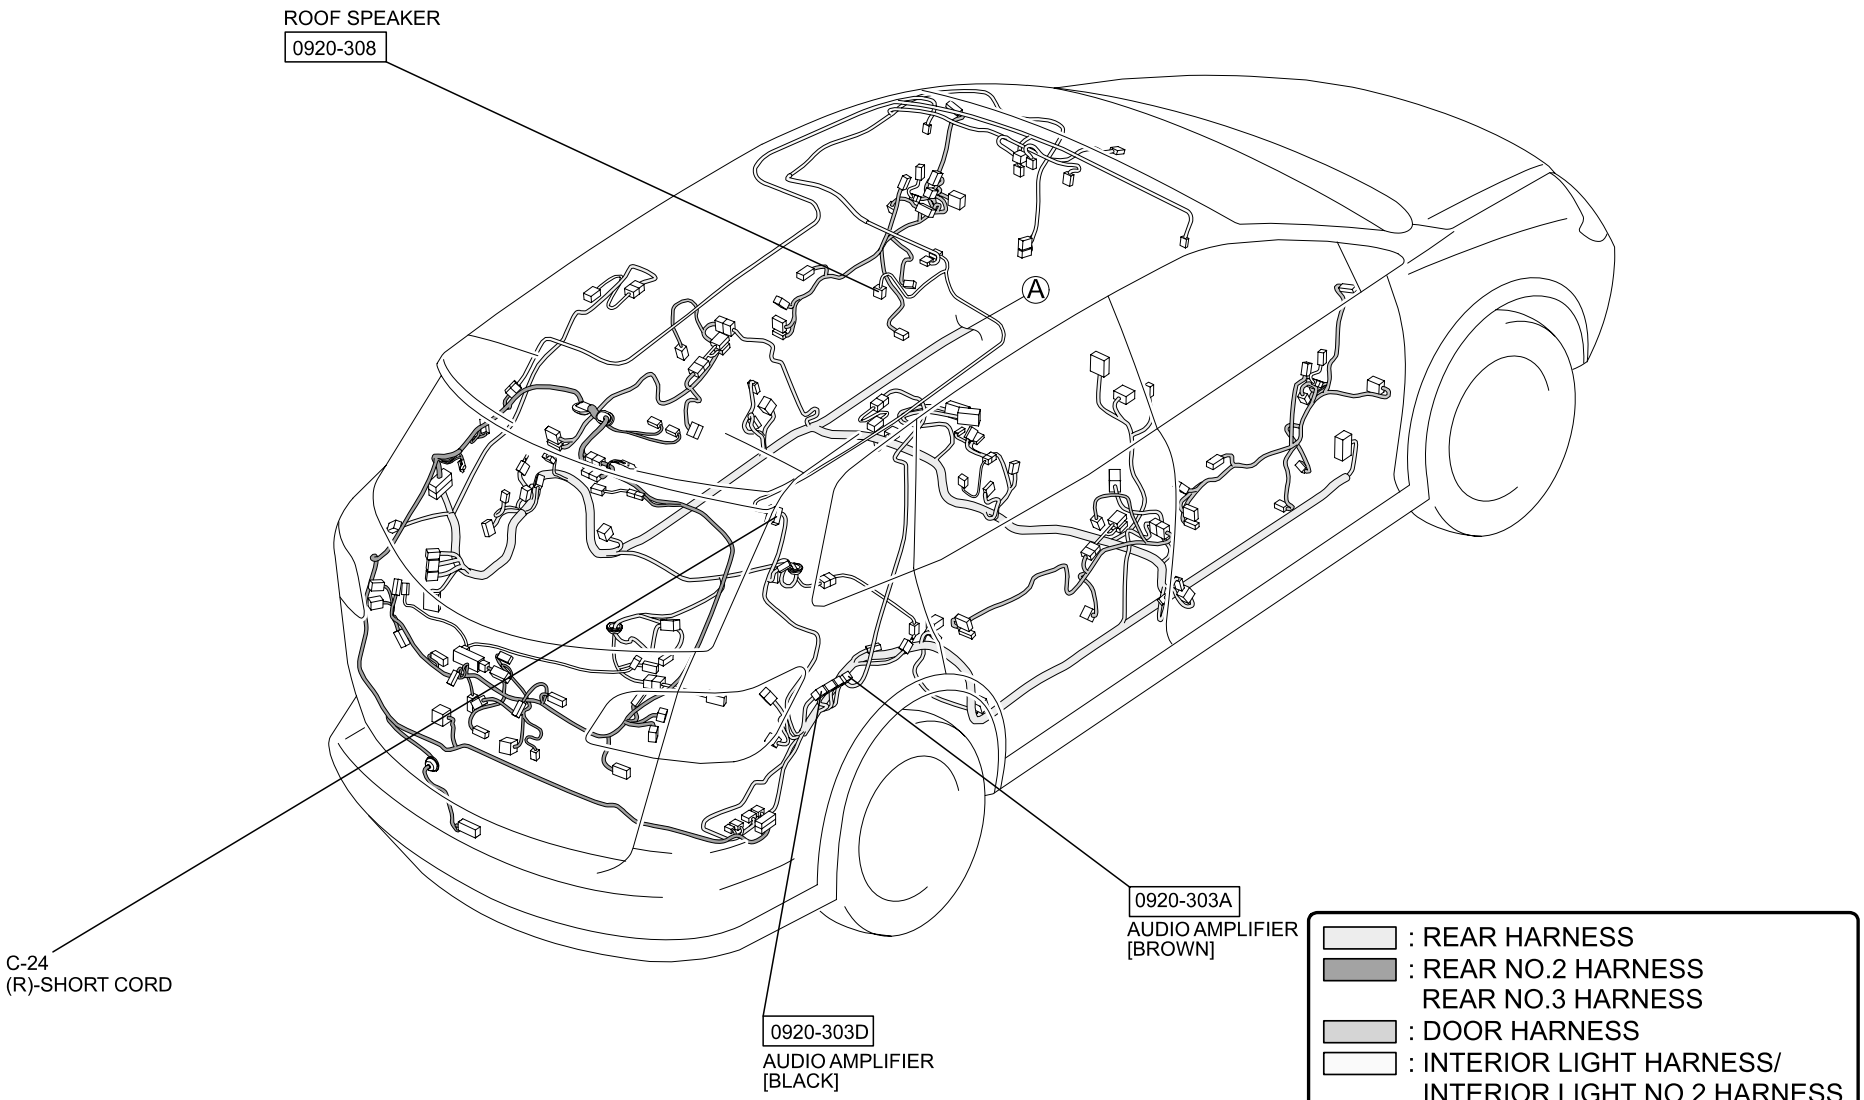
ROOF SPEAKER
0920-308
A
C-24
(R)-SHORT CORD
0920-303D
AUDIO AMPLIFIER
[BLACK]
0920-303A
AUDIO AMPLIFIER
[BROWN]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS


#: BARE WIRE

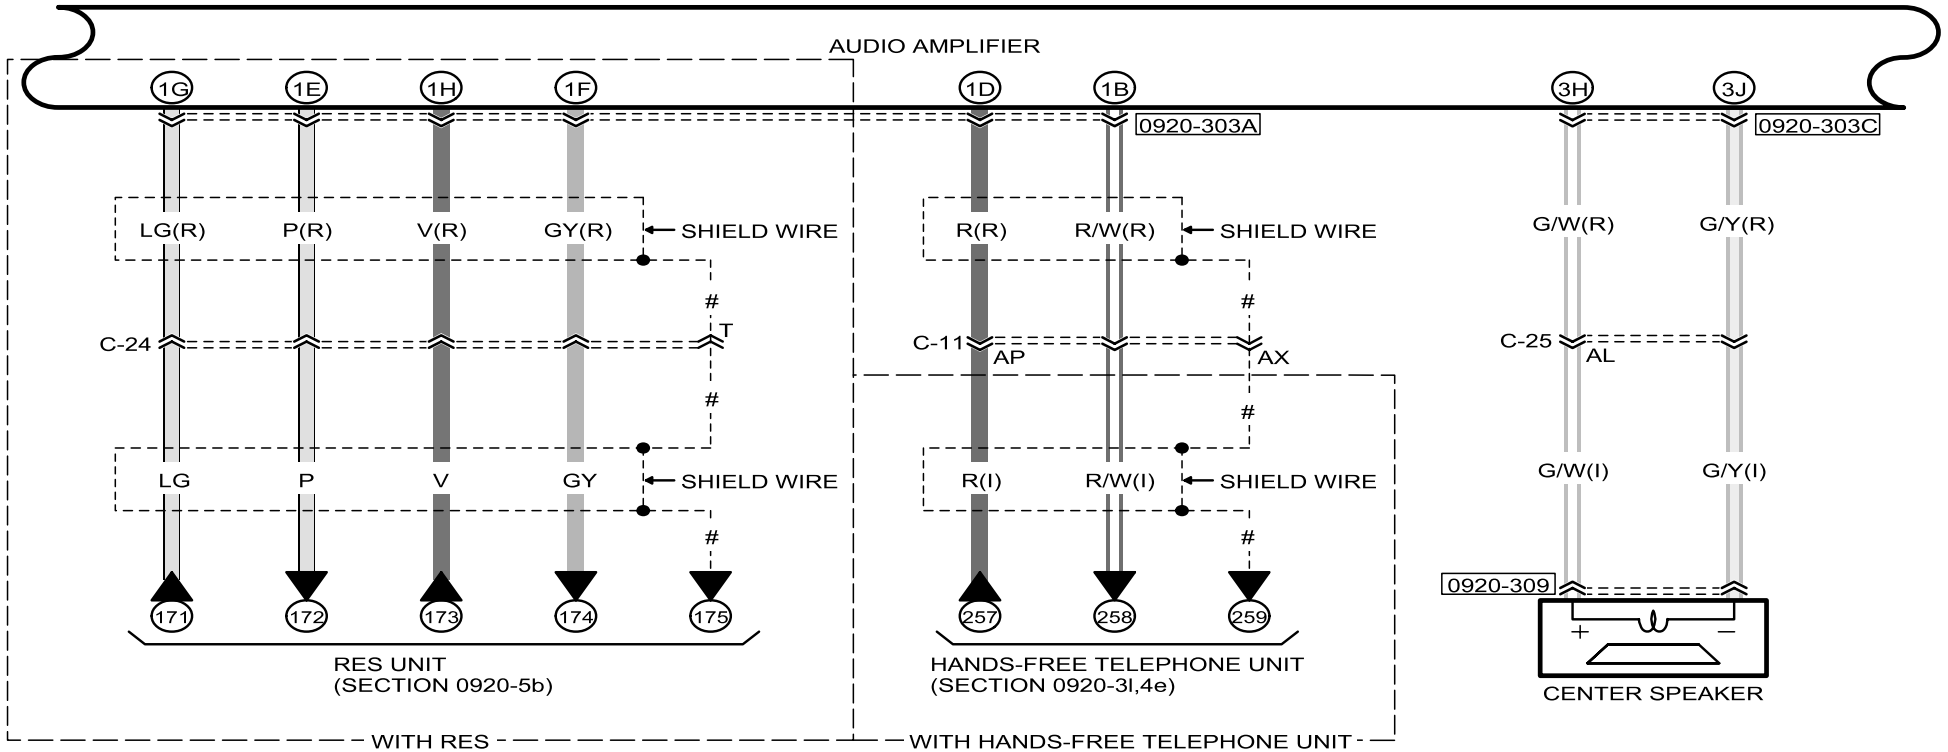


0920-303A
AUDIO AMPLIFIER

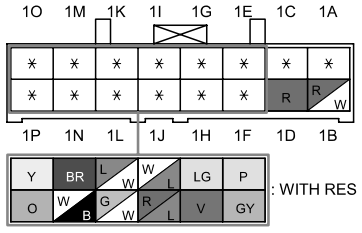


0920-303C
AUDIO AMPLIFIER

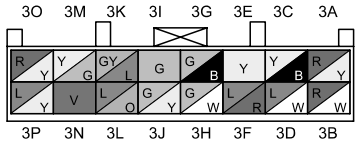


0920-309
CENTER SPEAKER




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

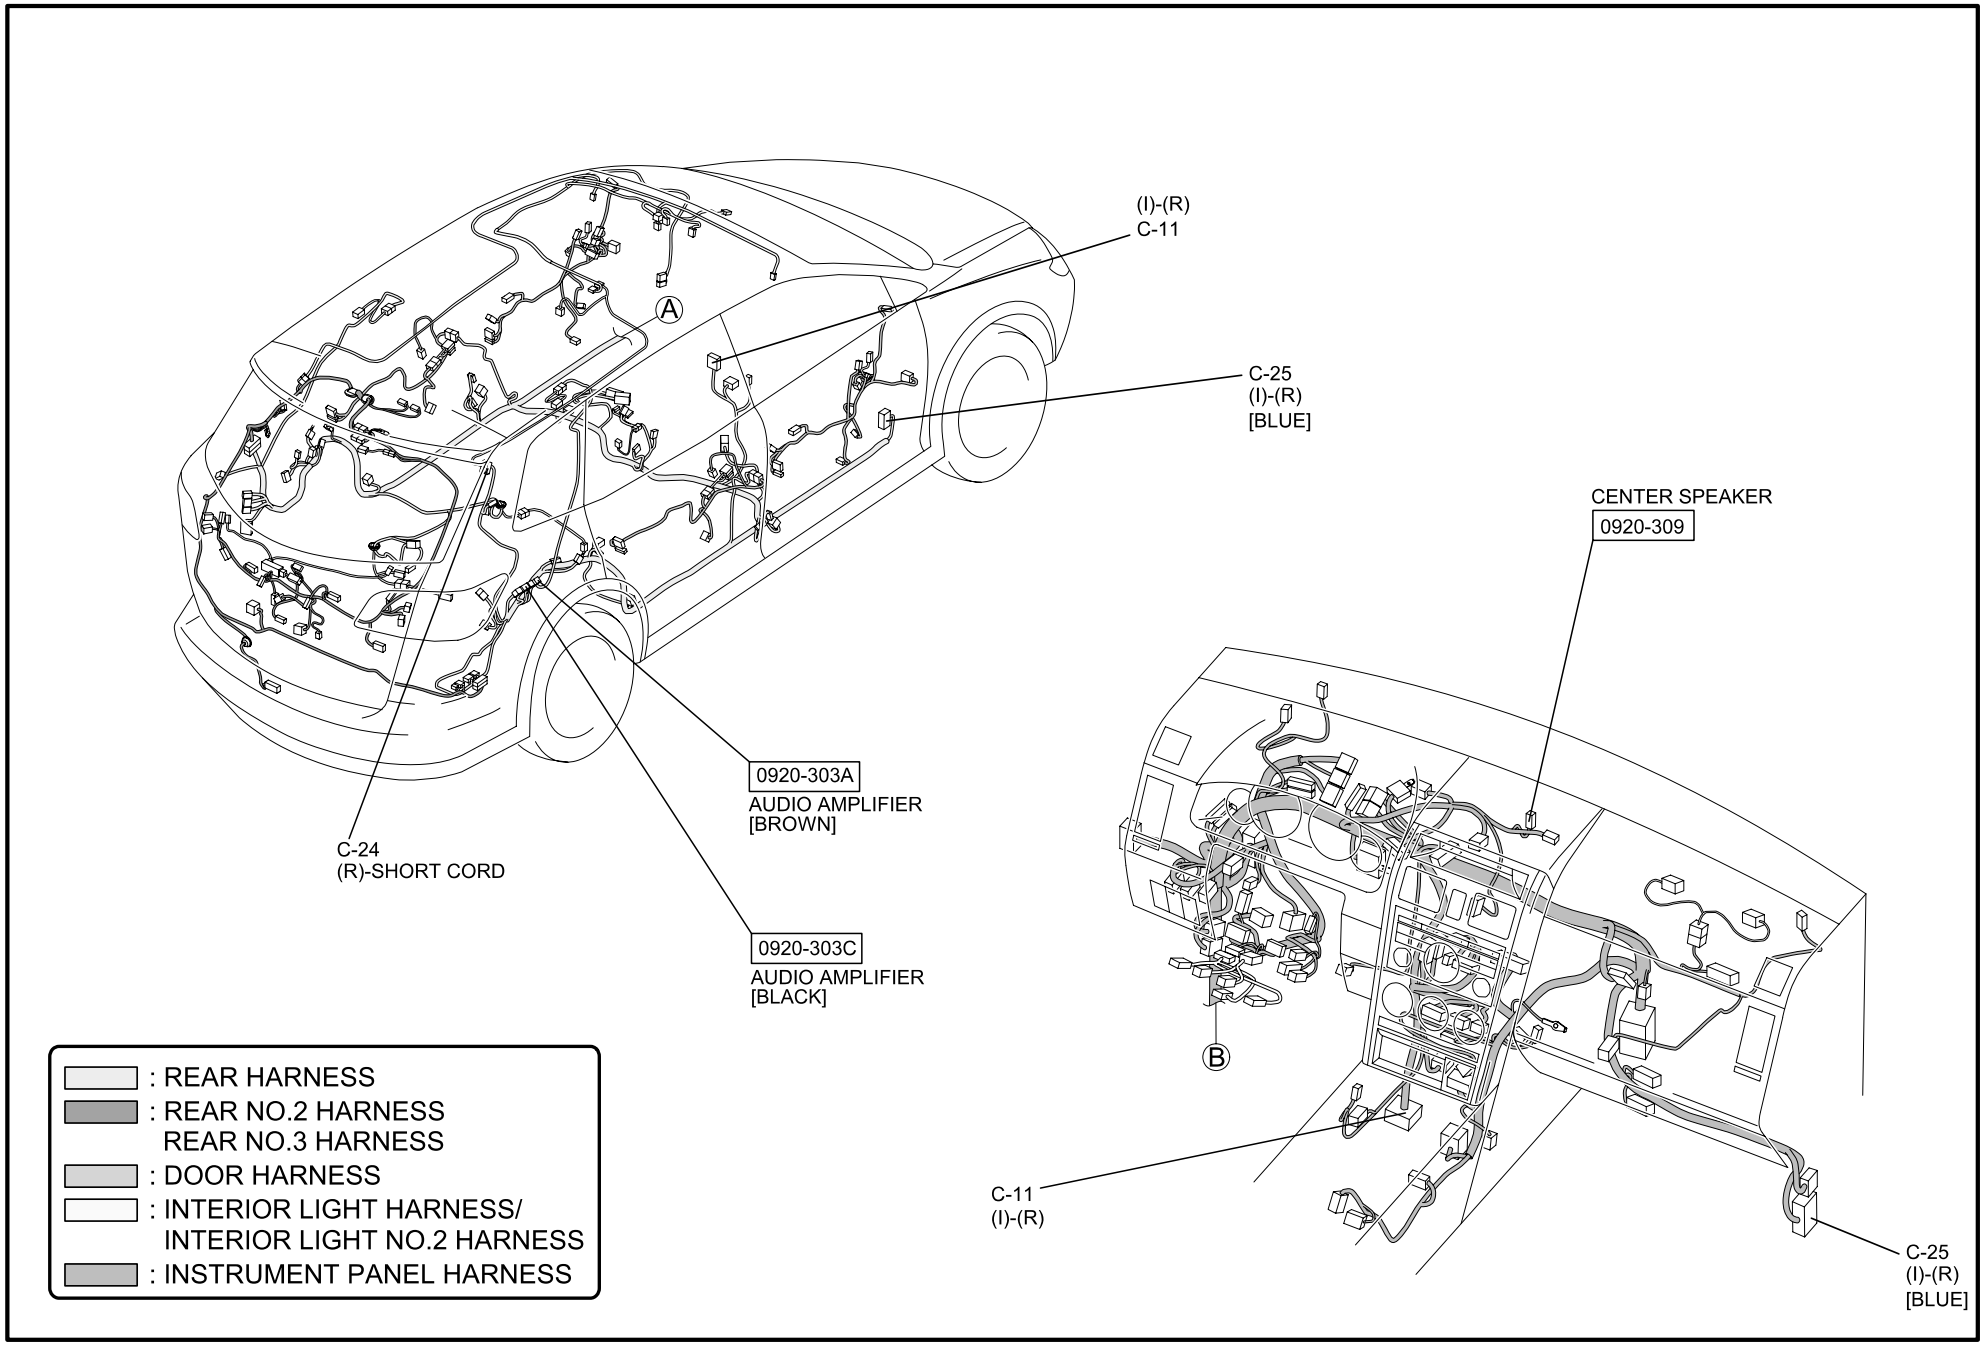

(I)-(R)
C-11
C-25
(I)-(R)
[BLUE]
A
CENTER SPEAKER
0920-309
0920-303A
AUDIO AMPLIFIER
[BROWN]
C-24
(R)-SHORT CORD
0920-303C
AUDIO AMPLIFIER
[BLACK]
B
C-11
(I)-(R)
C-25
(I)-(R)
[BLUE]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

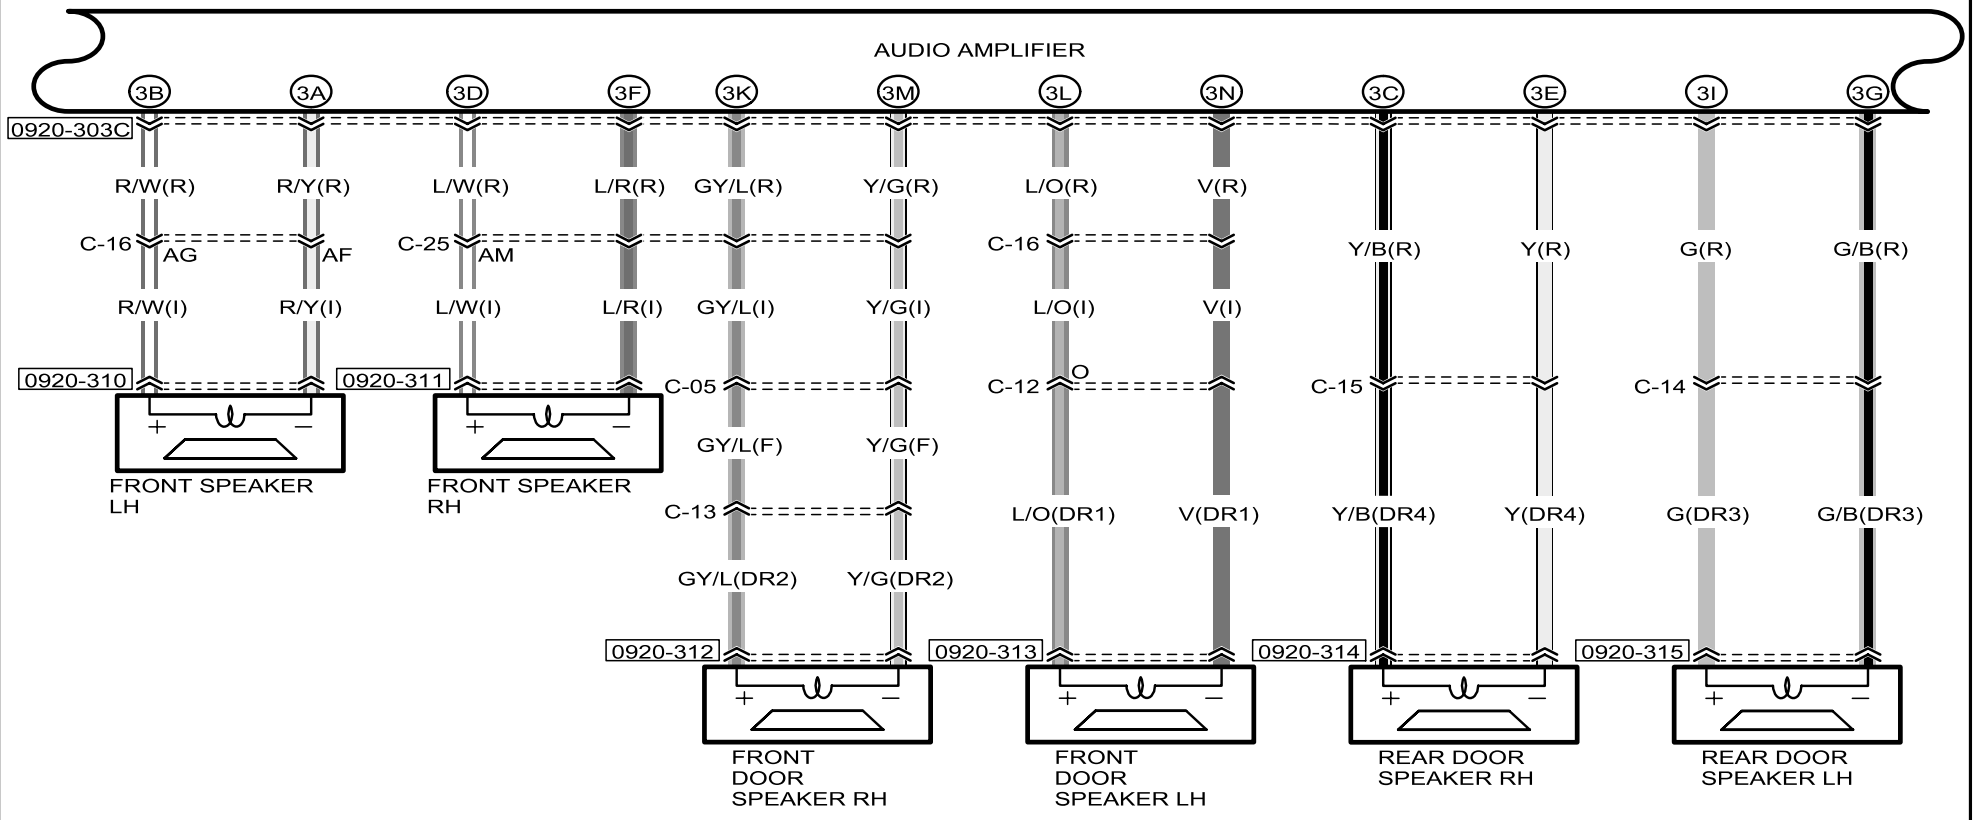

0920-303C
AUDIO AMPLIFIER

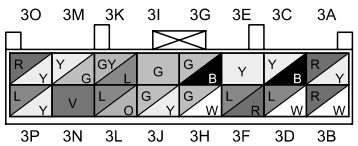

0920-310
FRONT SPEAKER LH




0920-311
FRONT SPEAKER RH




0920-312
FRONT DOOR SPEAKER RH




0920-313
FRONT DOOR SPEAKER LH




0920-314
REAR DOOR SPEAKER RH




0920-315
REAR DOOR SPEAKER LH




Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

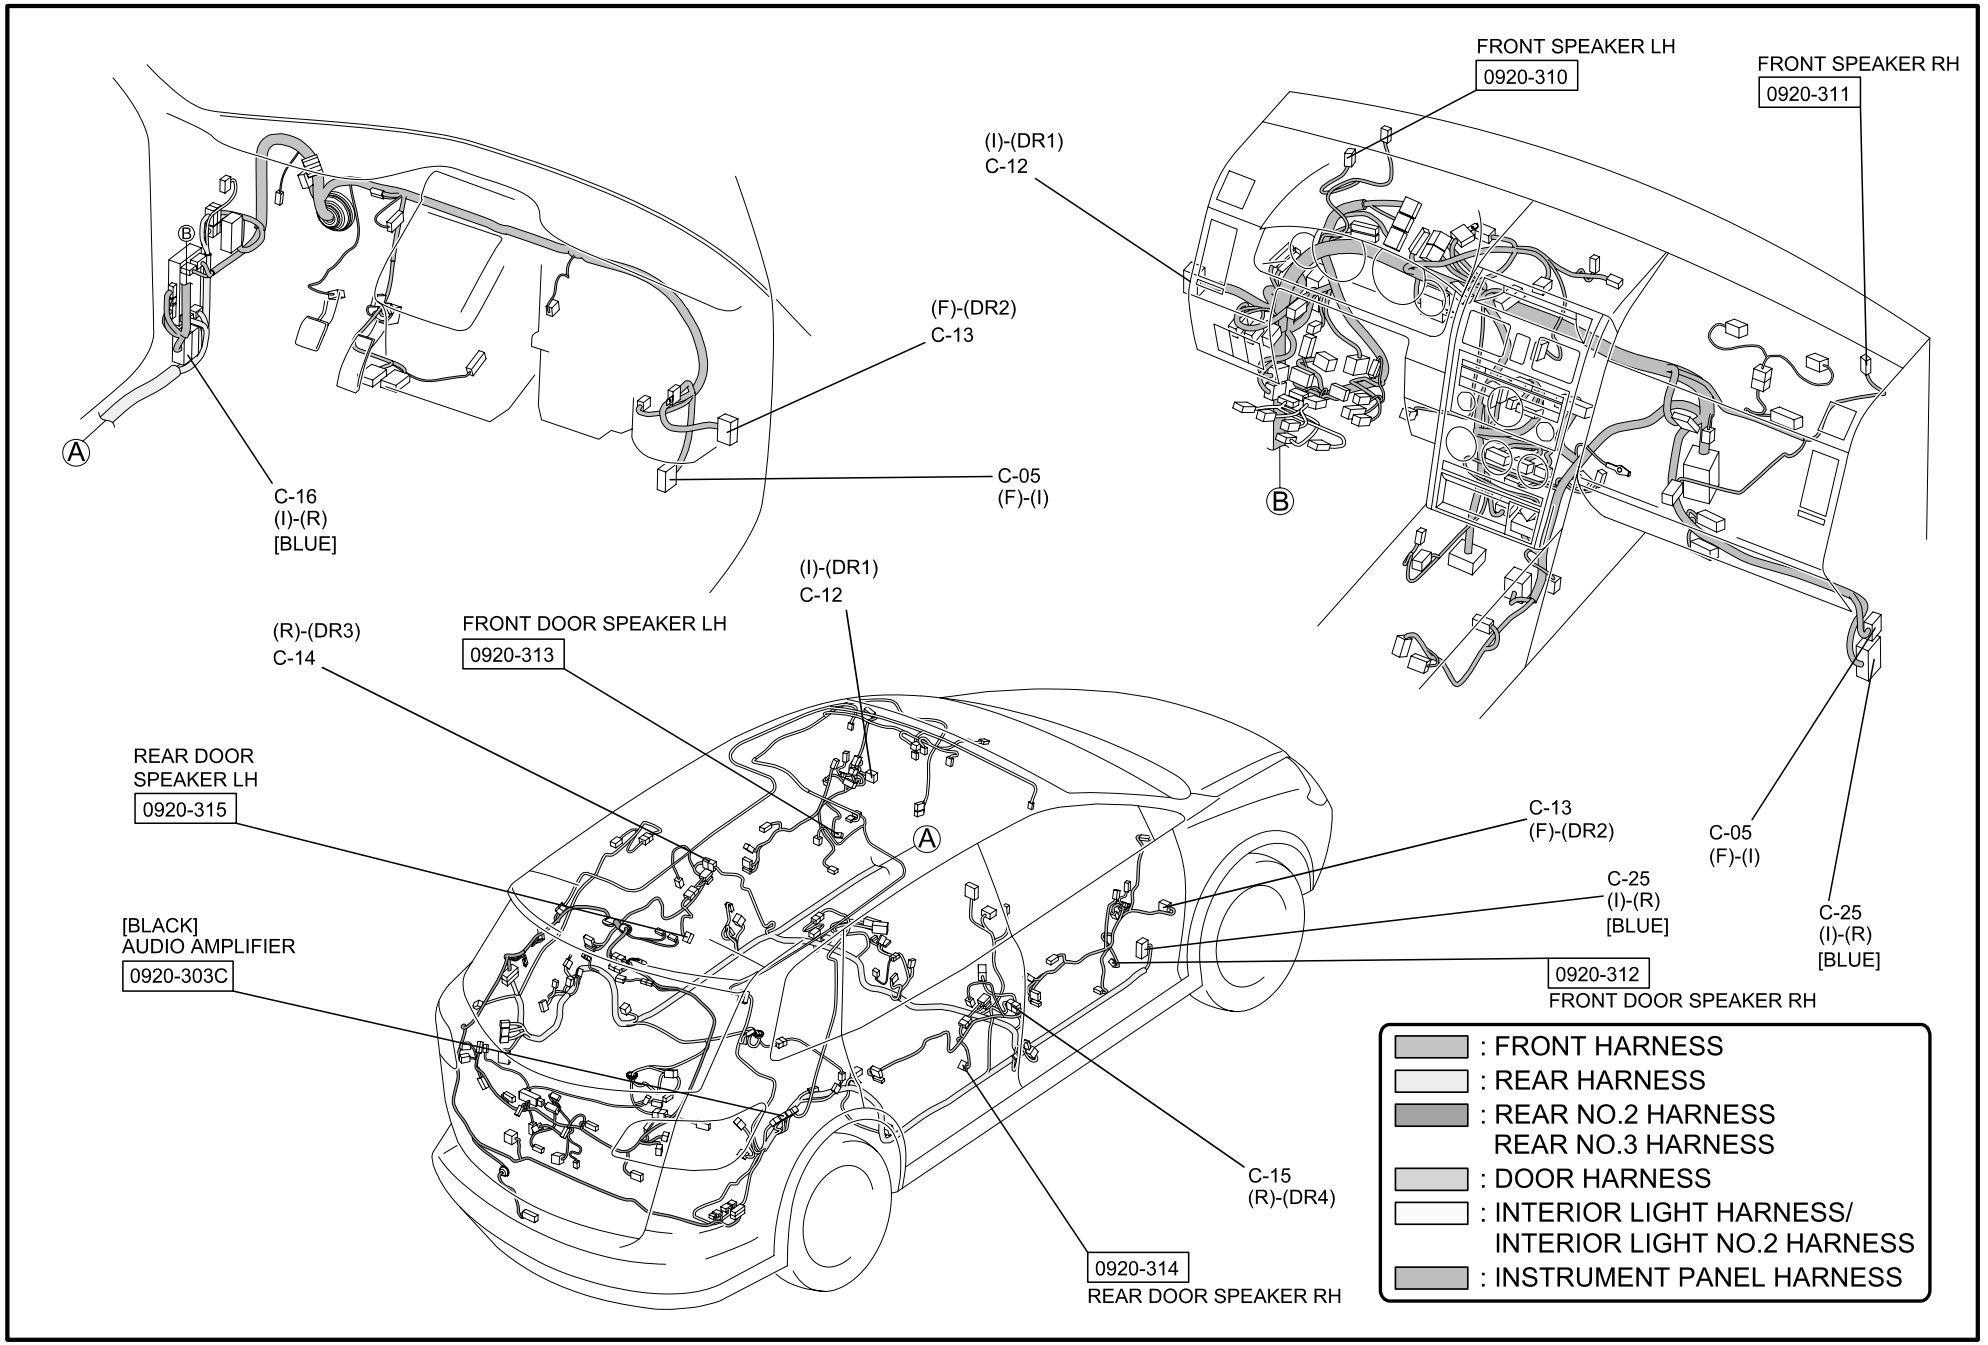

FRONT SPEAKER LH
0920-310
FRONT SPEAKER RH
0920-311
(I)-(DR1)
C-12
(F)-(DR2)
C-13
C-05
(F)-(I)
C-16
(I)-(R)
[BLUE]
(I)-(DR1)
C-12
(R)-(DR3)
C-14
FRONT DOOR SPEAKER LH
0920-313
REAR DOOR
SPEAKER LH
0920-315
[BLACK]
AUDIO AMPLIFIER
0920-303C
C-13
(F)-(DR2)
C-05
(F)-(I)
C-25
(I)-(R)
[BLUE]
C-25
(I)-(R)
[BLUE]
0920-312
FRONT DOOR SPEAKER RH
C-15
(R)-(DR4)
0920-314
REAR DOOR SPEAKER RH
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

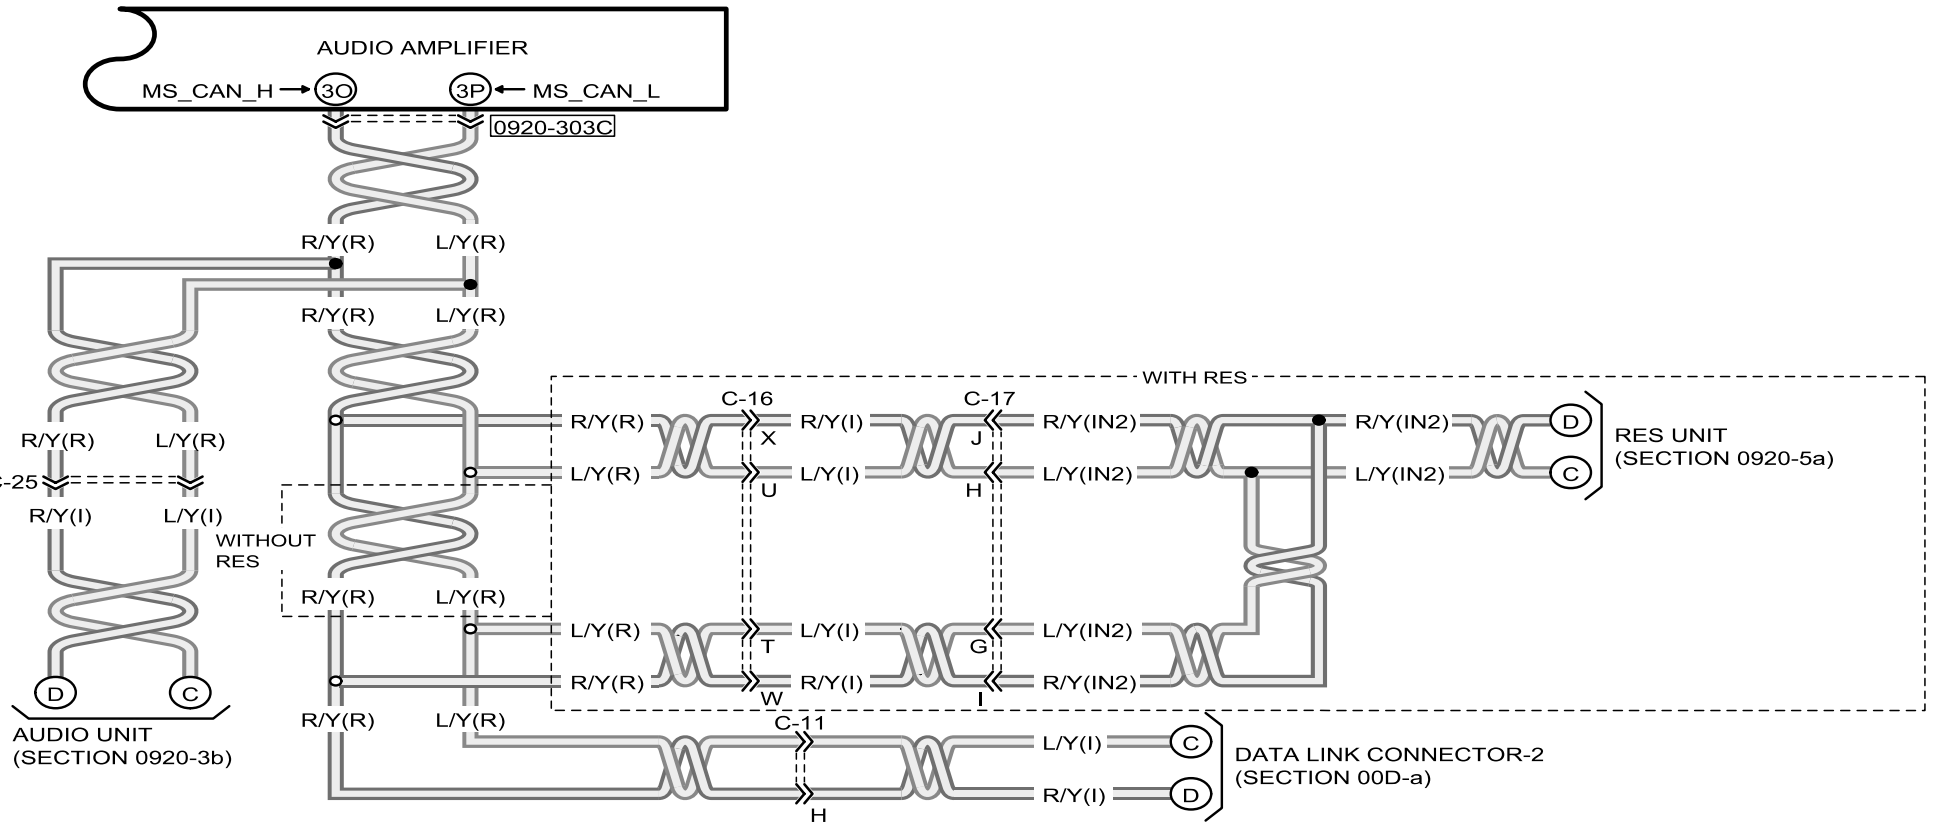


0920-303C
AUDIO AMPLIFIER

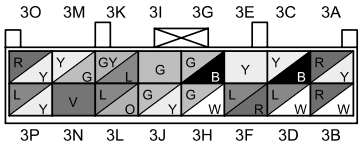


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

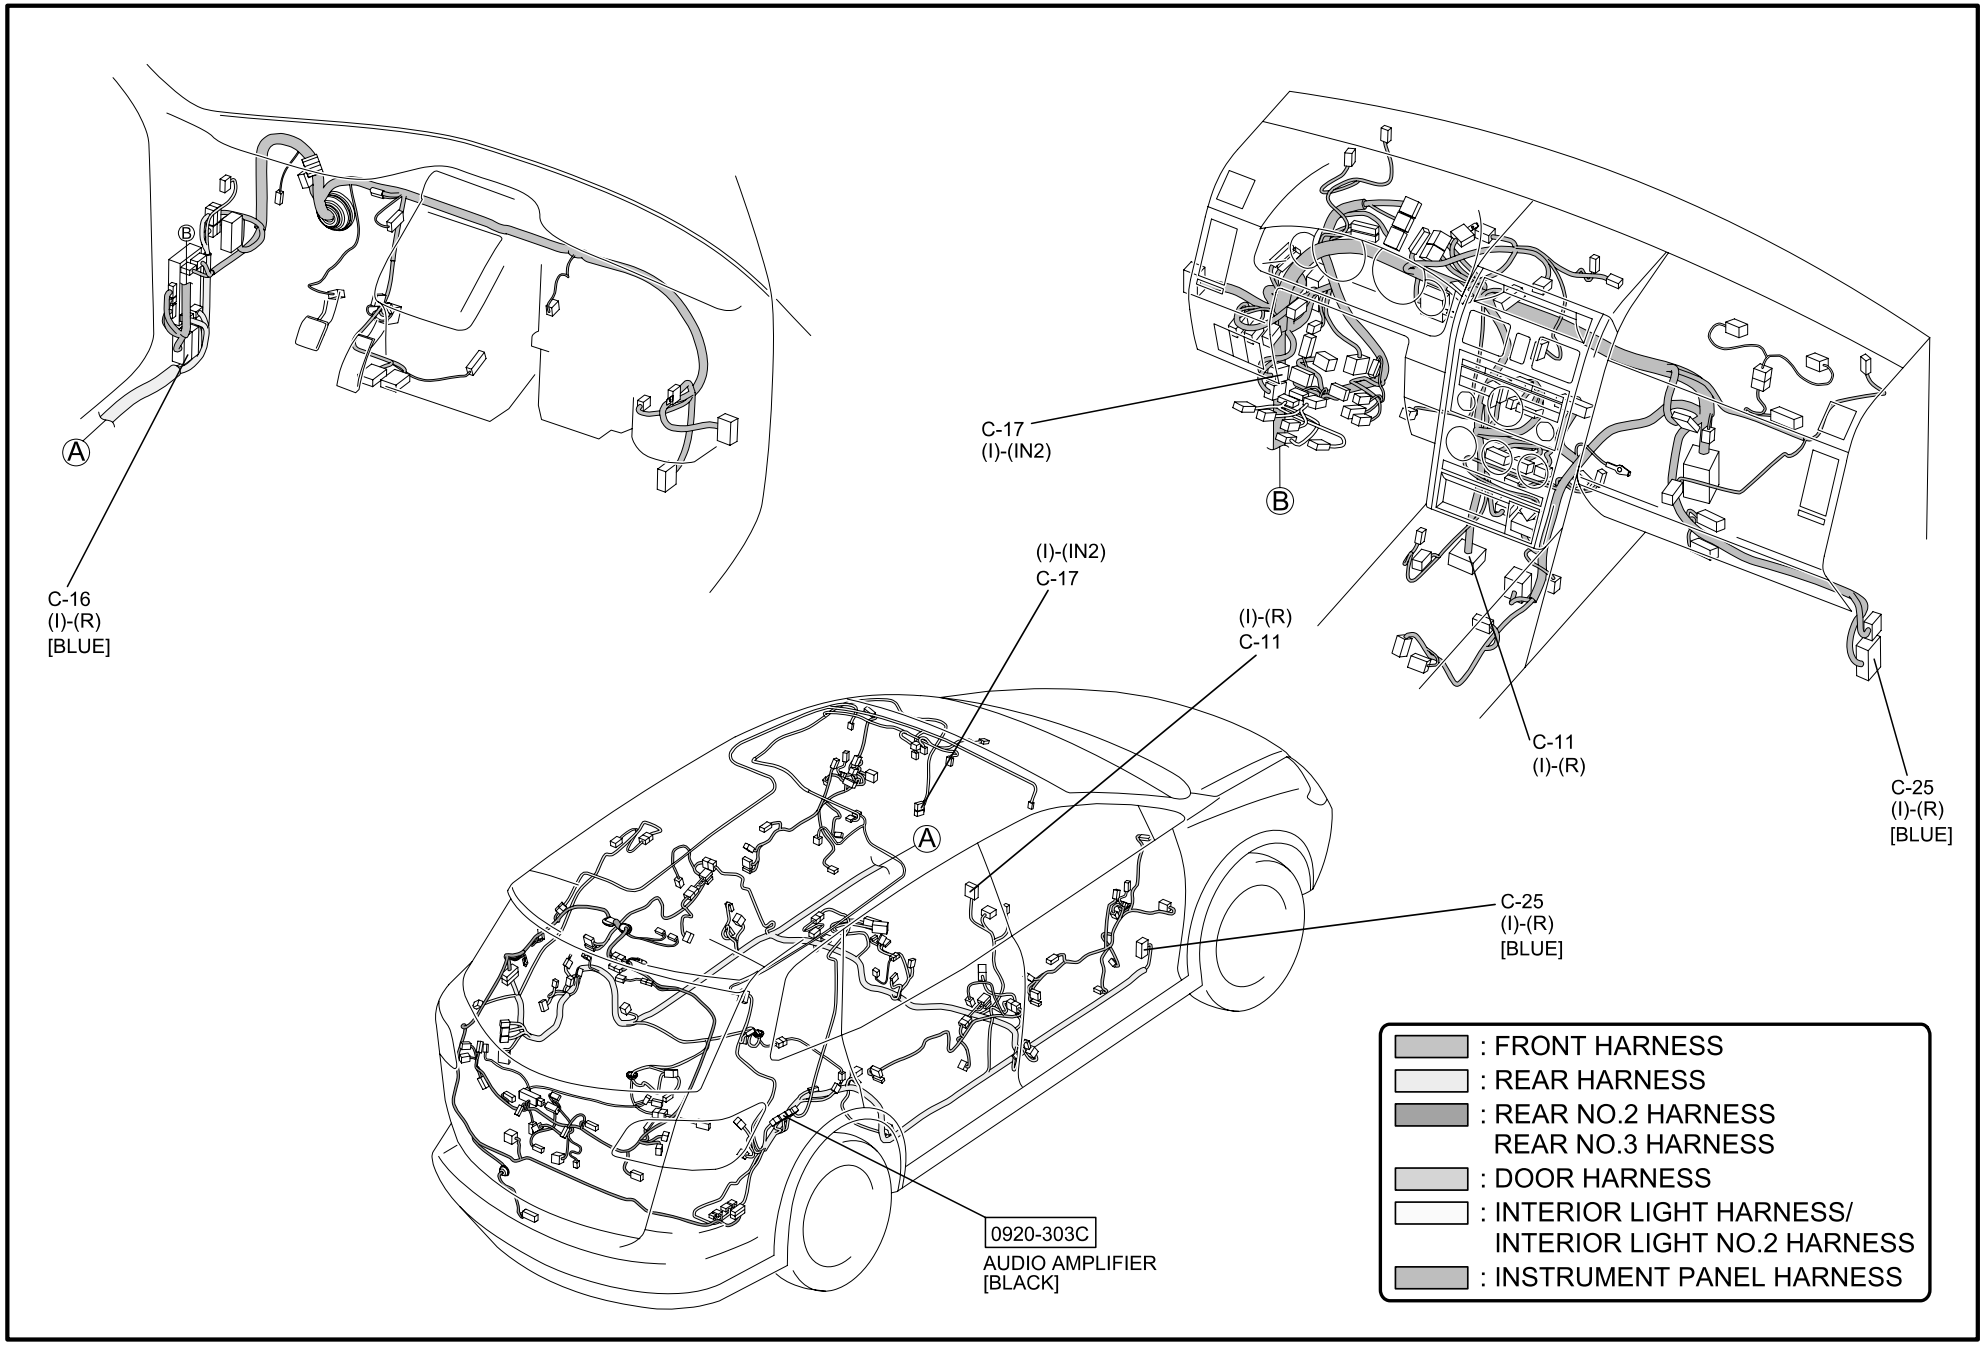
C-16
(I)-(R)
[BLUE]
C-17
(I)-(IN2)
(I)-(IN2)
C-17
(I)-(R)
C-11
C-11
(I)-(R)
C-25
(I)-(R)
[BLUE]
C-25
(I)-(R)
[BLUE]
0920-303C
AUDIO AMPLIFIER
[BLACK]
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

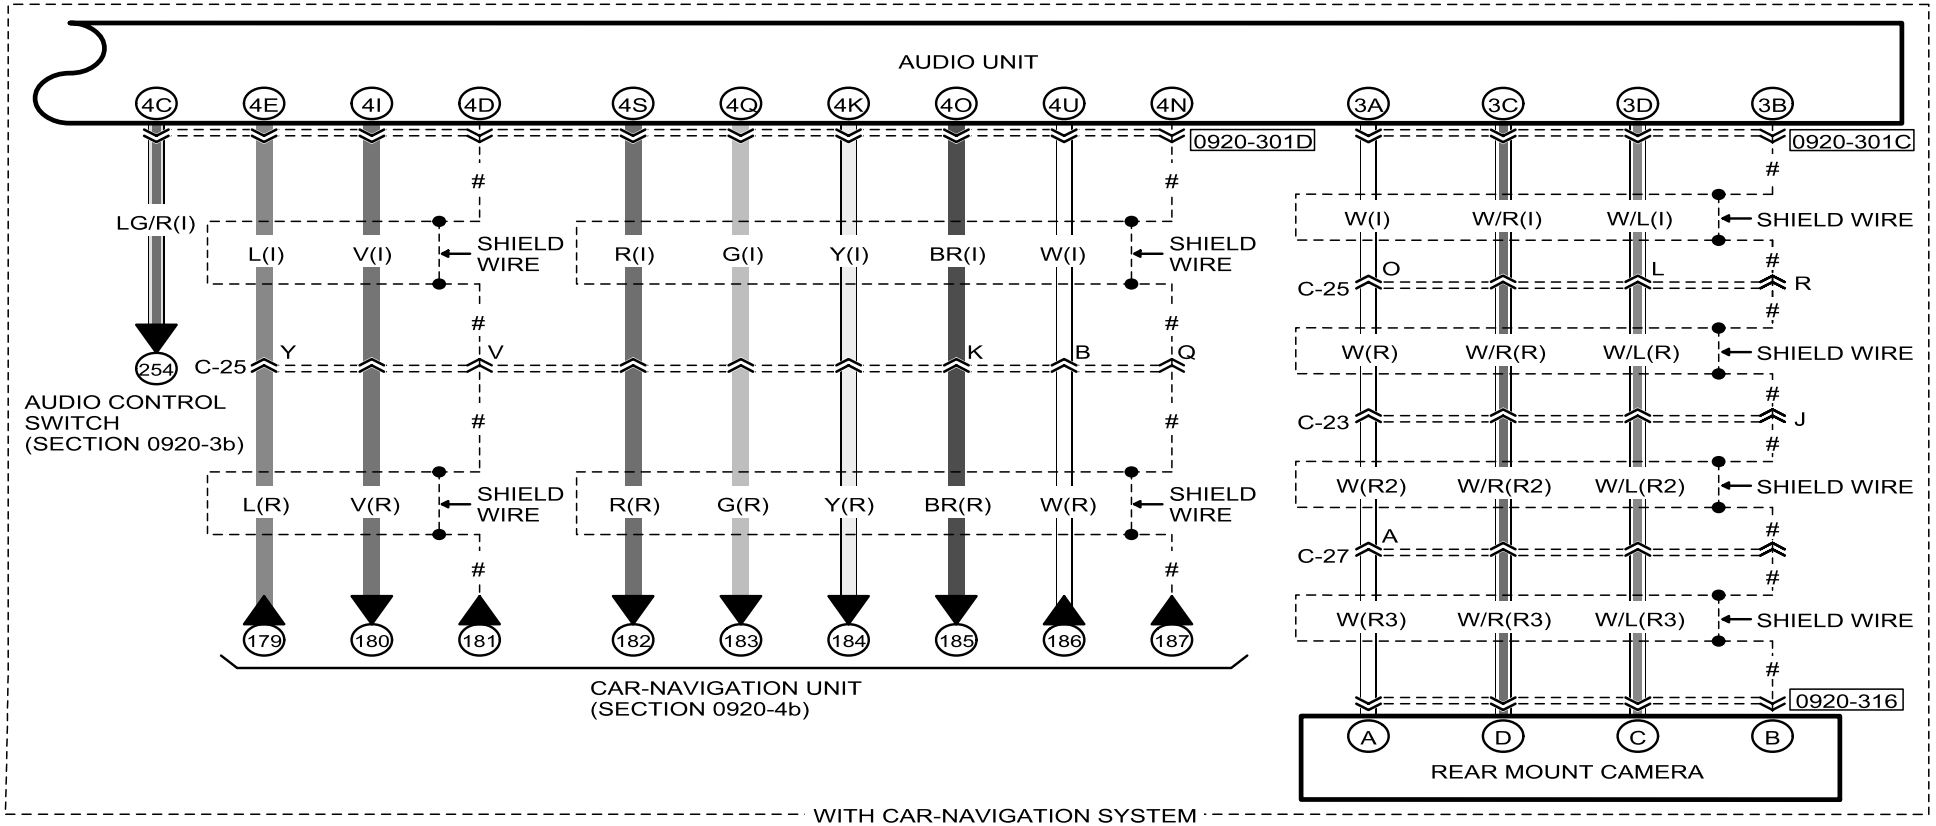


0920-301C
AUDIO UNIT

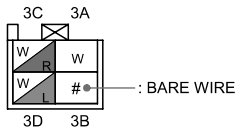


0920-301D
AUDIO UNIT

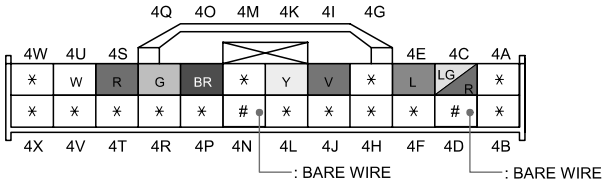


0920-316
REAR MOUNT CAMERA

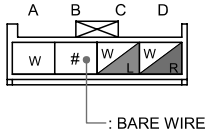


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

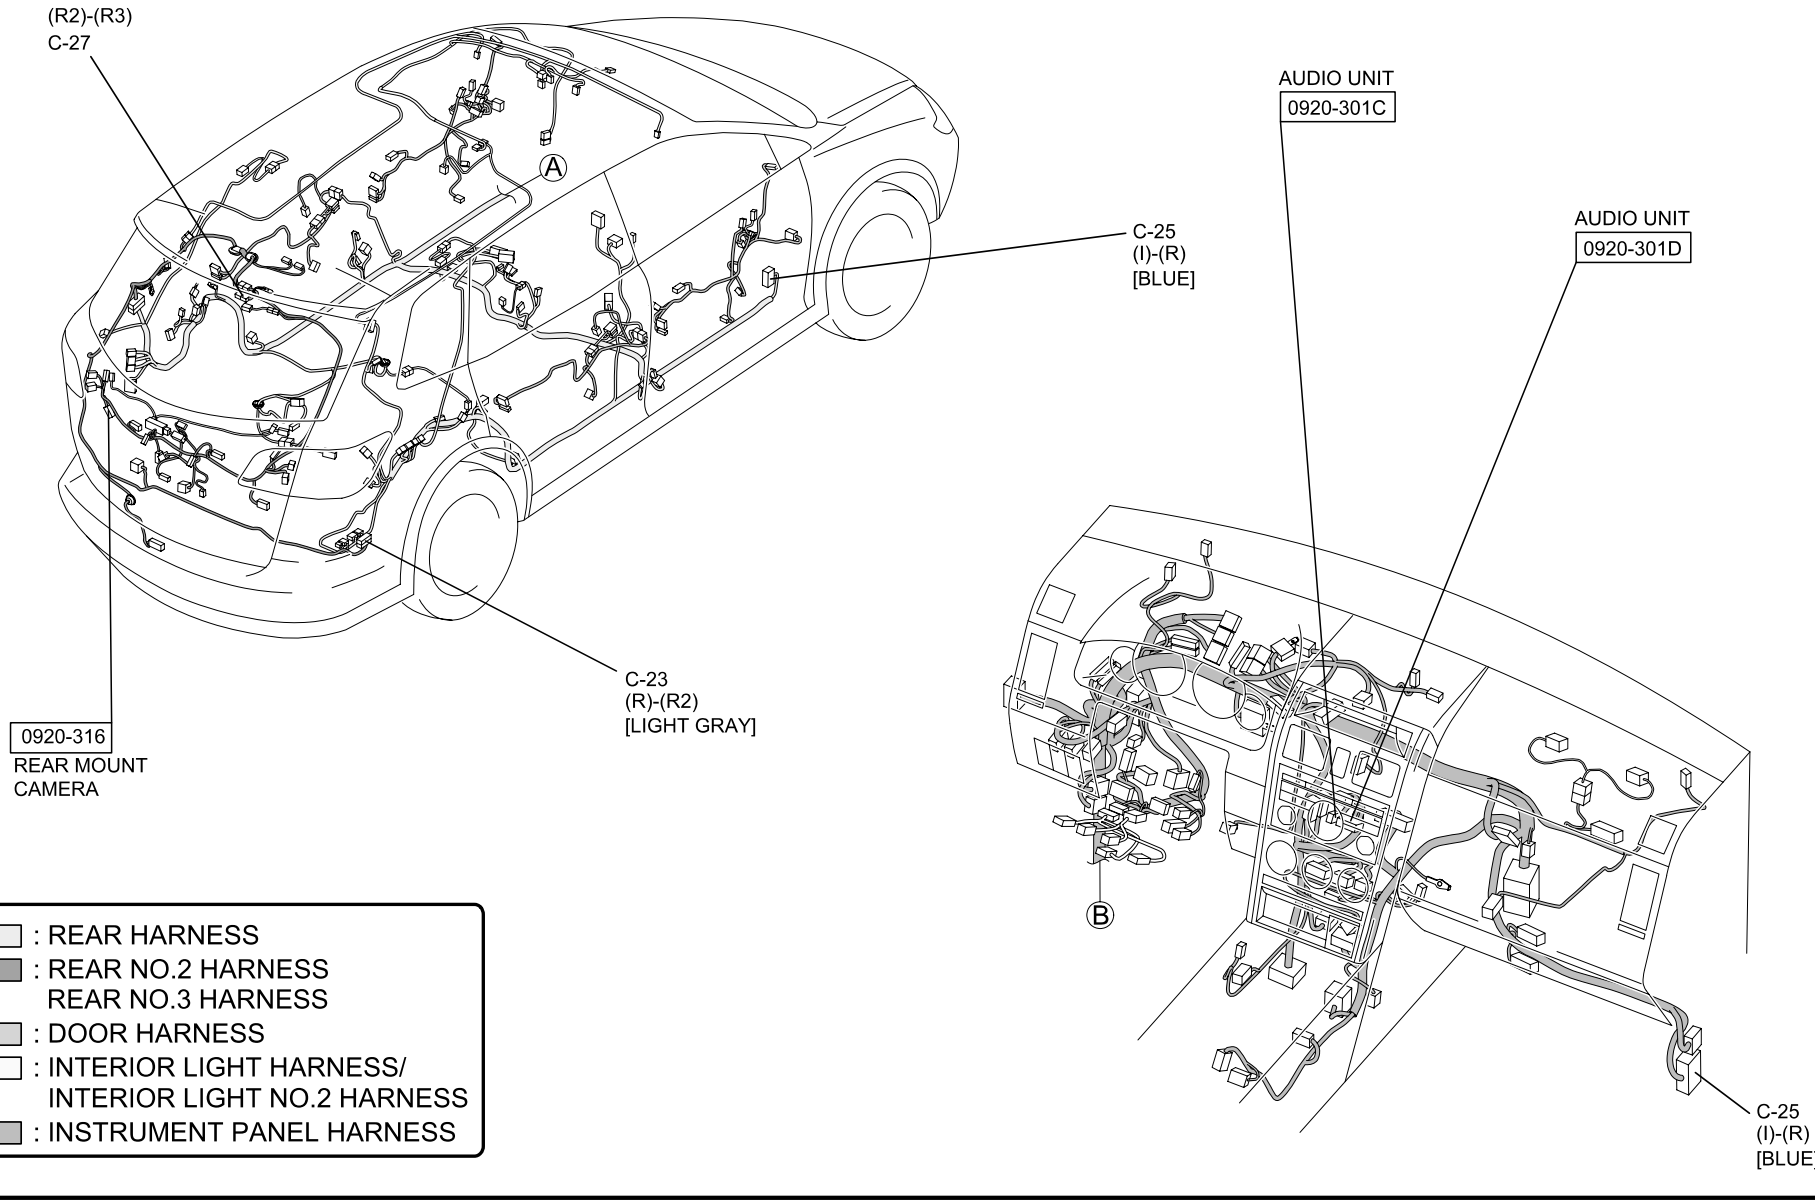

(R2)-(R3)
C-27
A
C-25
(I)-(R)
[BLUE]
C-23
(R)-(R2)
[LIGHT GRAY]
0920-316
REAR MOUNT
CAMERA
AUDIO UNIT
0920-301C
AUDIO UNIT
0920-301D
B
C-25
(I)-(R)
[BLUE]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

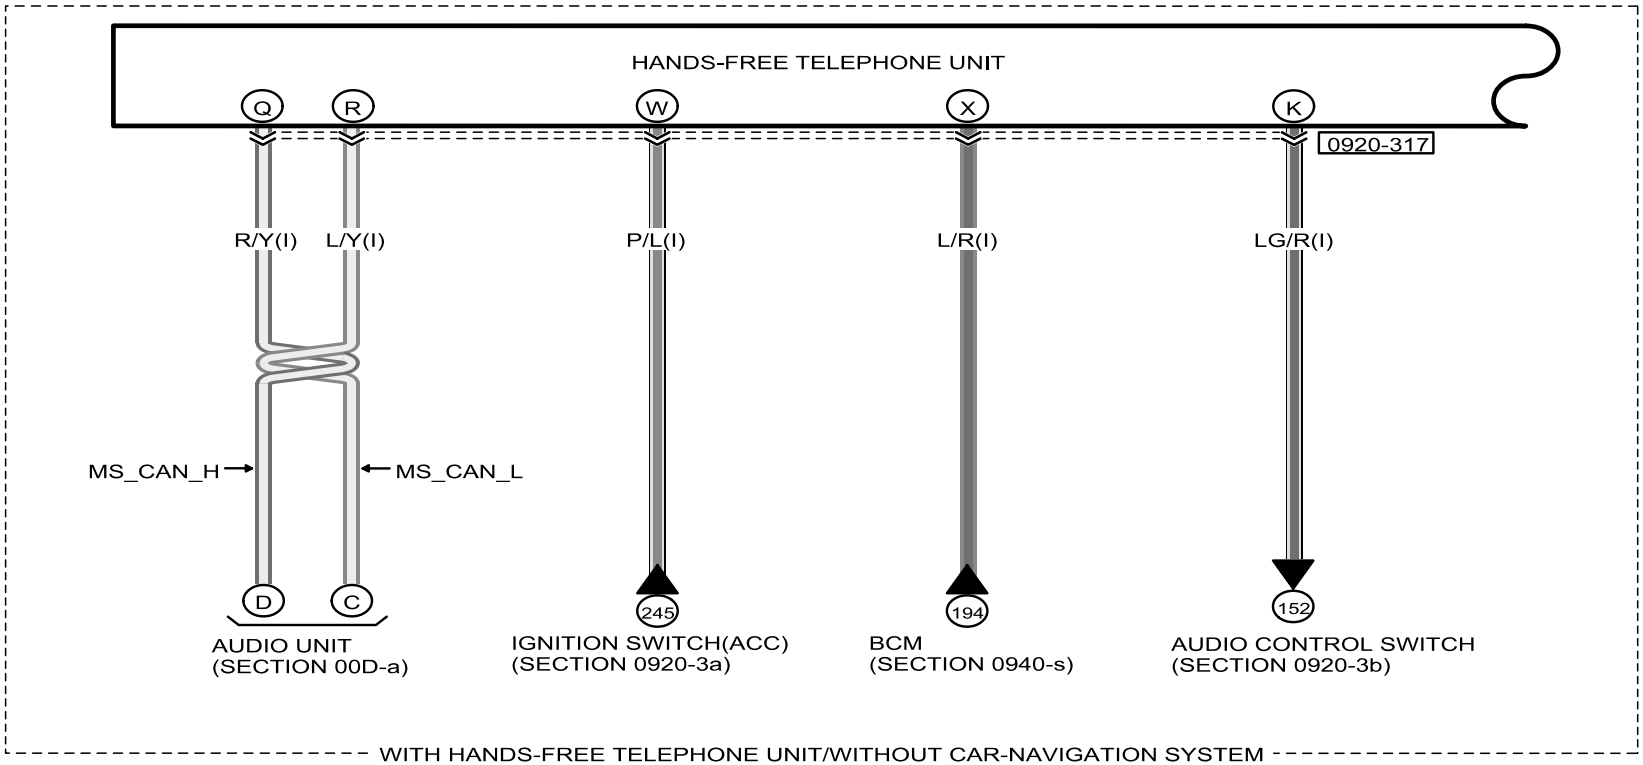


0920-317
HANDS-FREE TELEPHONE UNIT

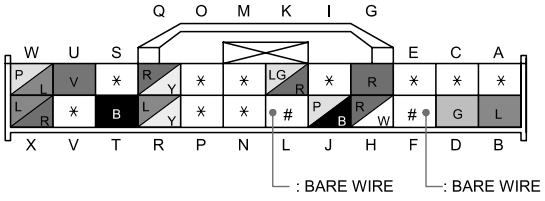


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

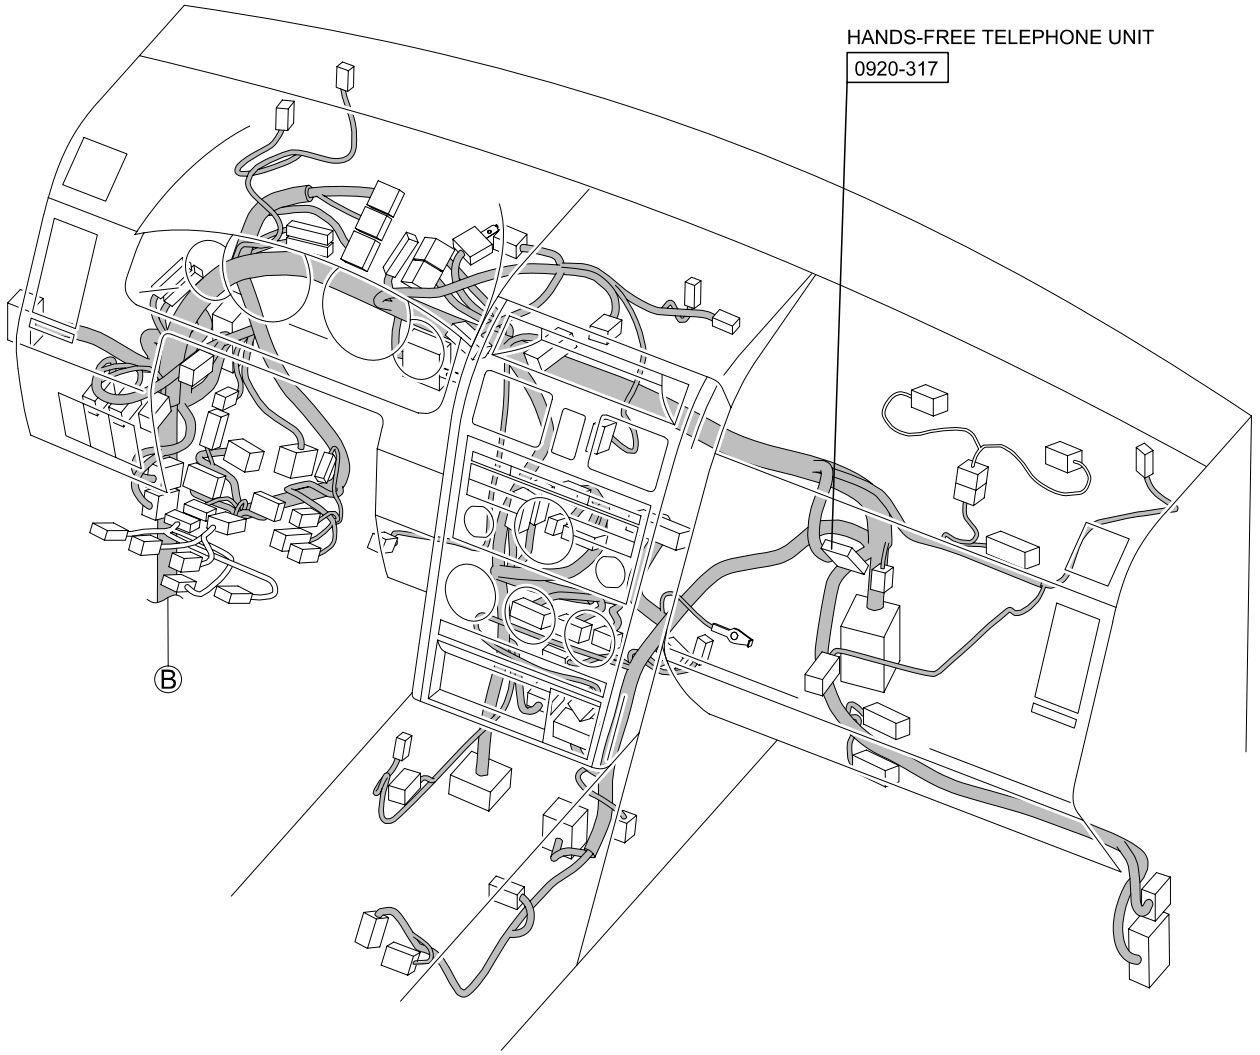
HANDS-FREE TELEPHONE UNIT
0920-317
B
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

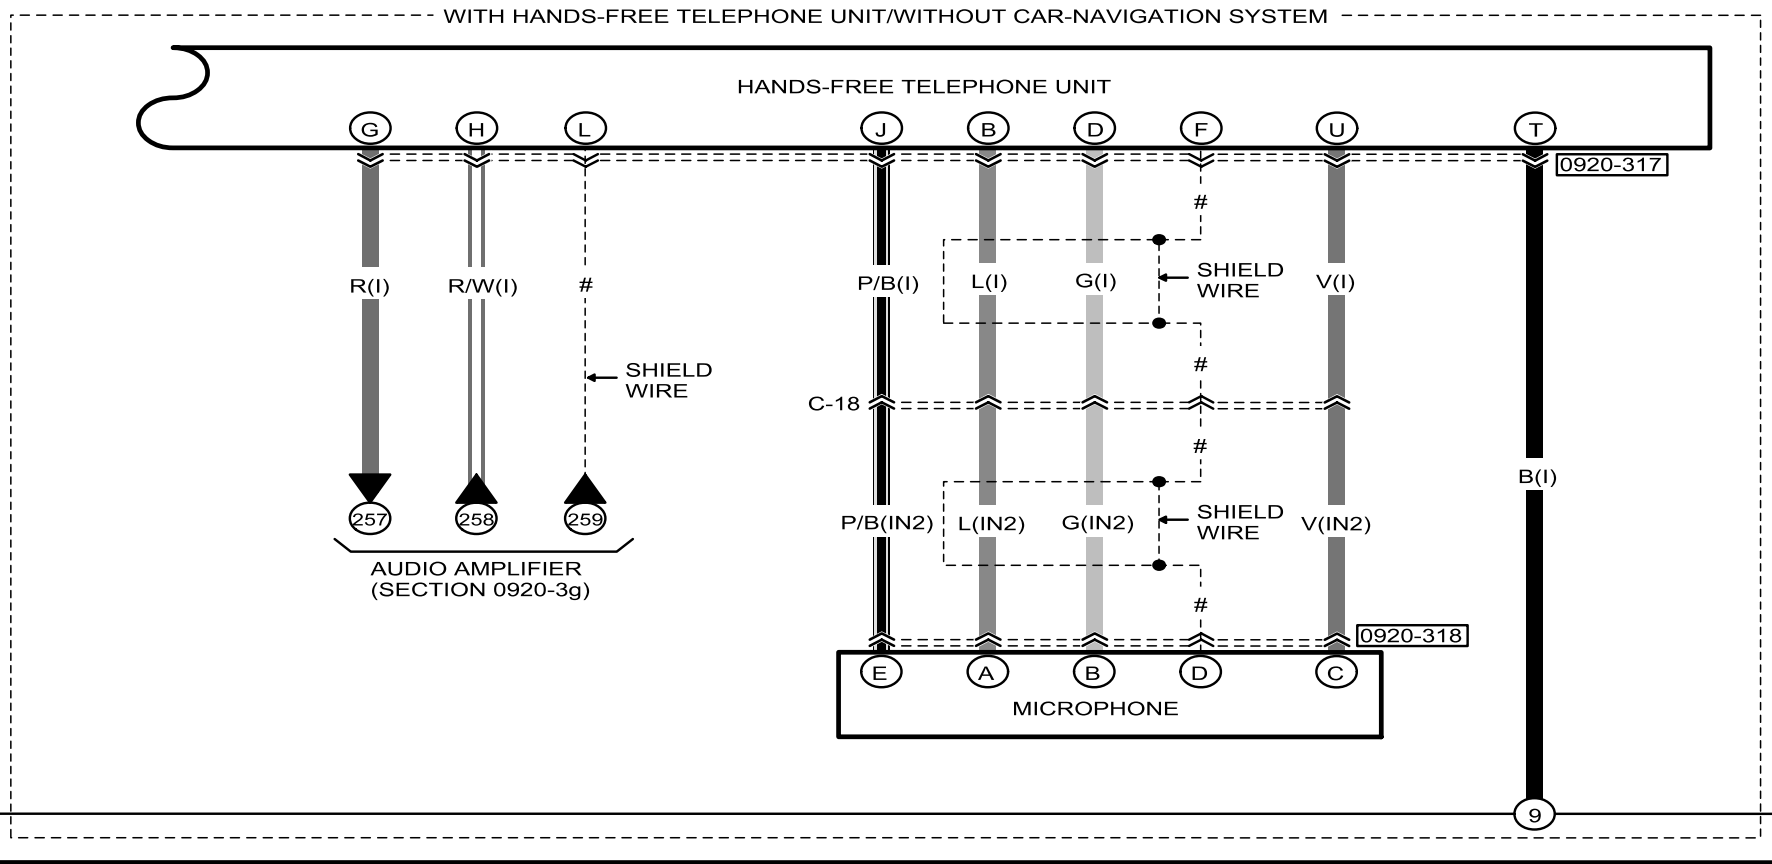


0920-317
HANDS-FREE TELEPHONE UNIT

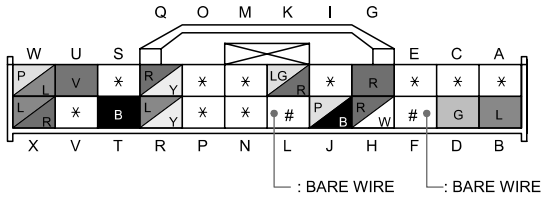


0920-318
MICROPHONE

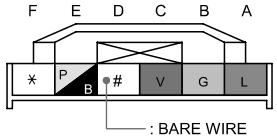


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

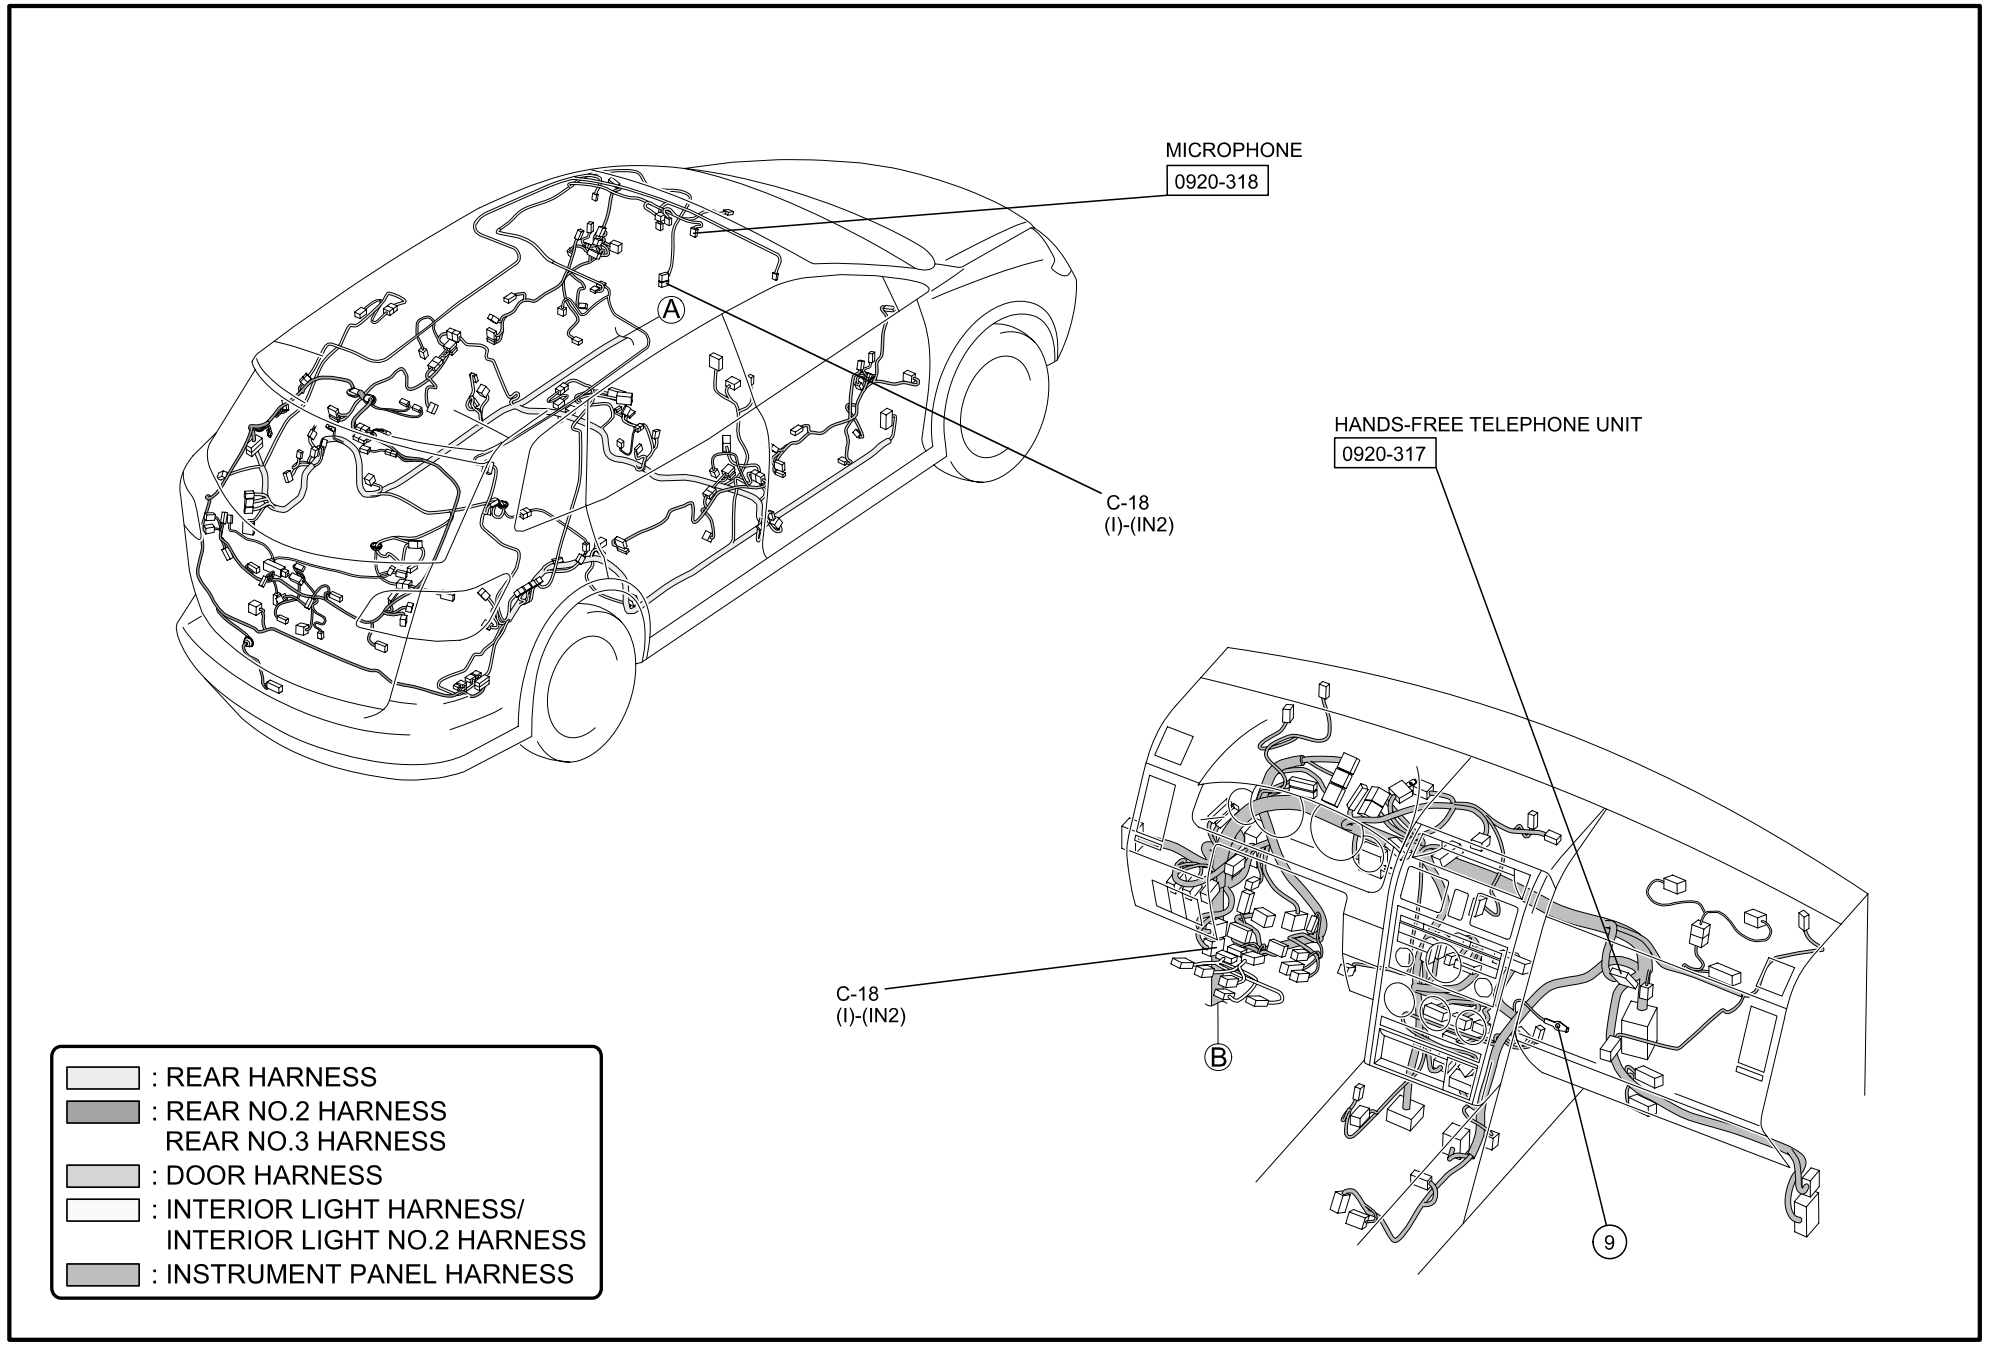

MICROPHONE
0920-318
A
C-18
(I)-(IN2)
HANDS-FREE TELEPHONE UNIT
0920-317
C-18
(I)-(IN2)
B
9
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

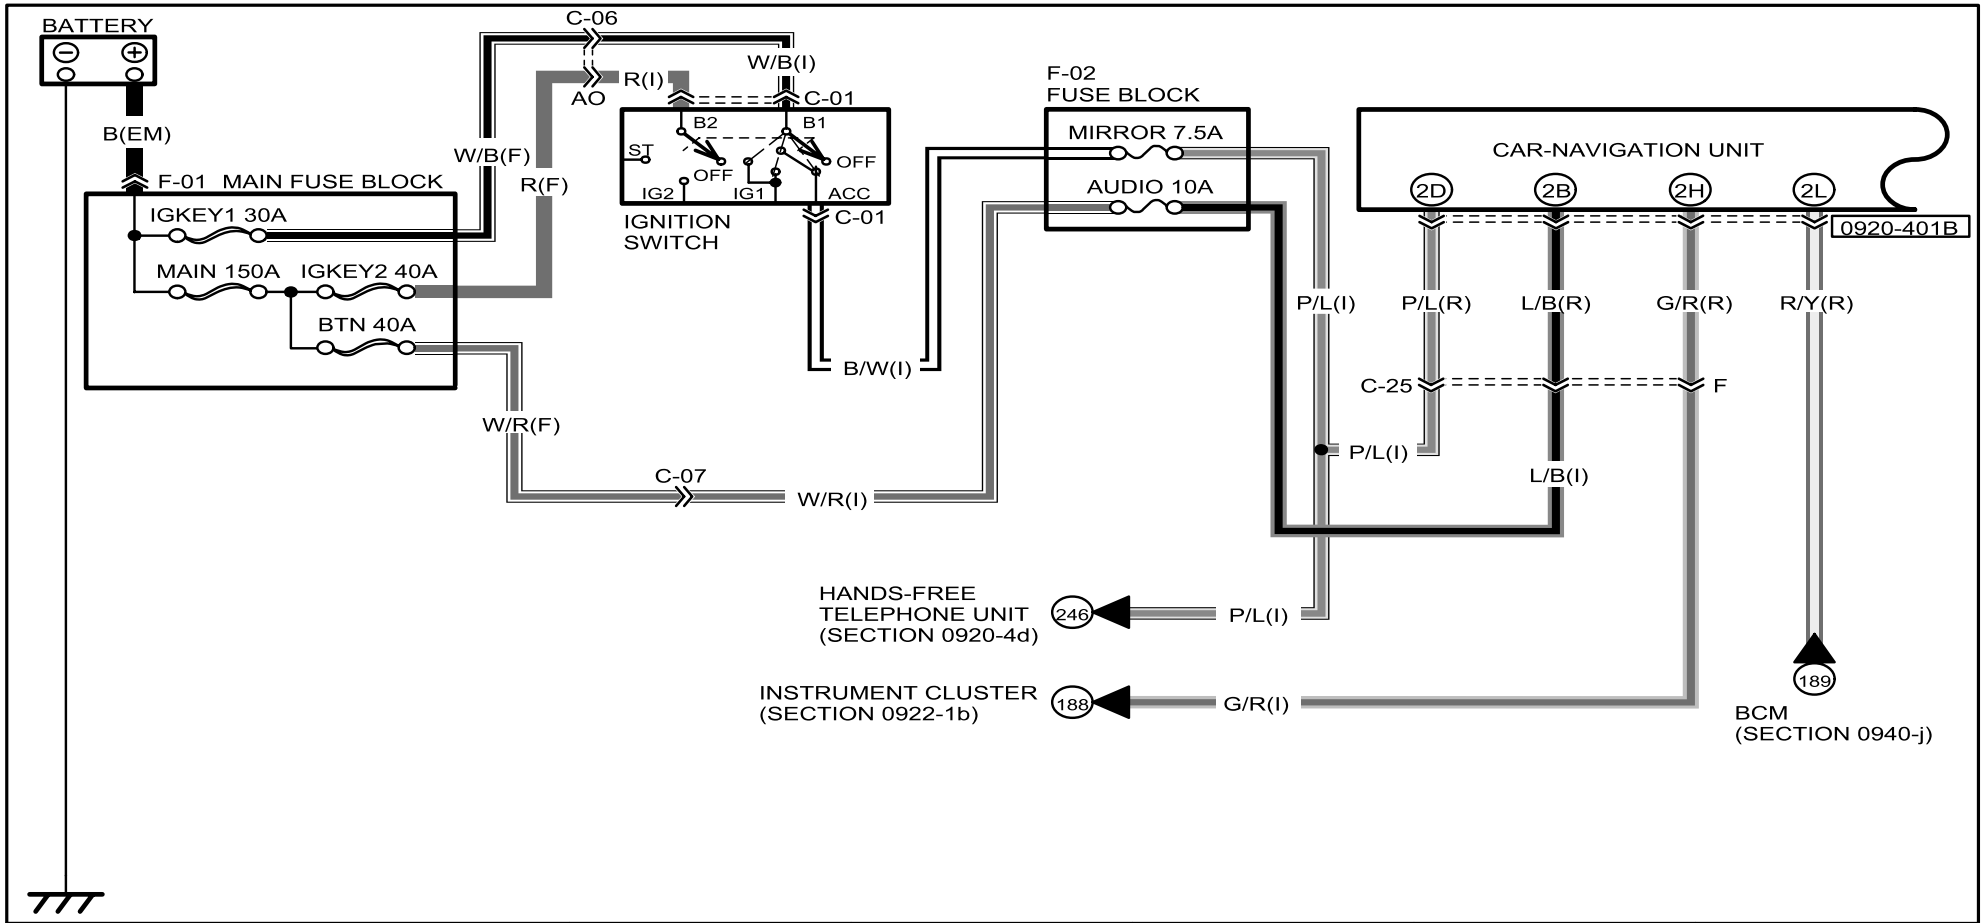


0920-401B
CAR-NAVIGATION UNIT

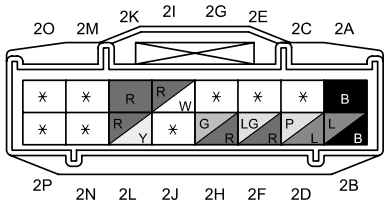


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

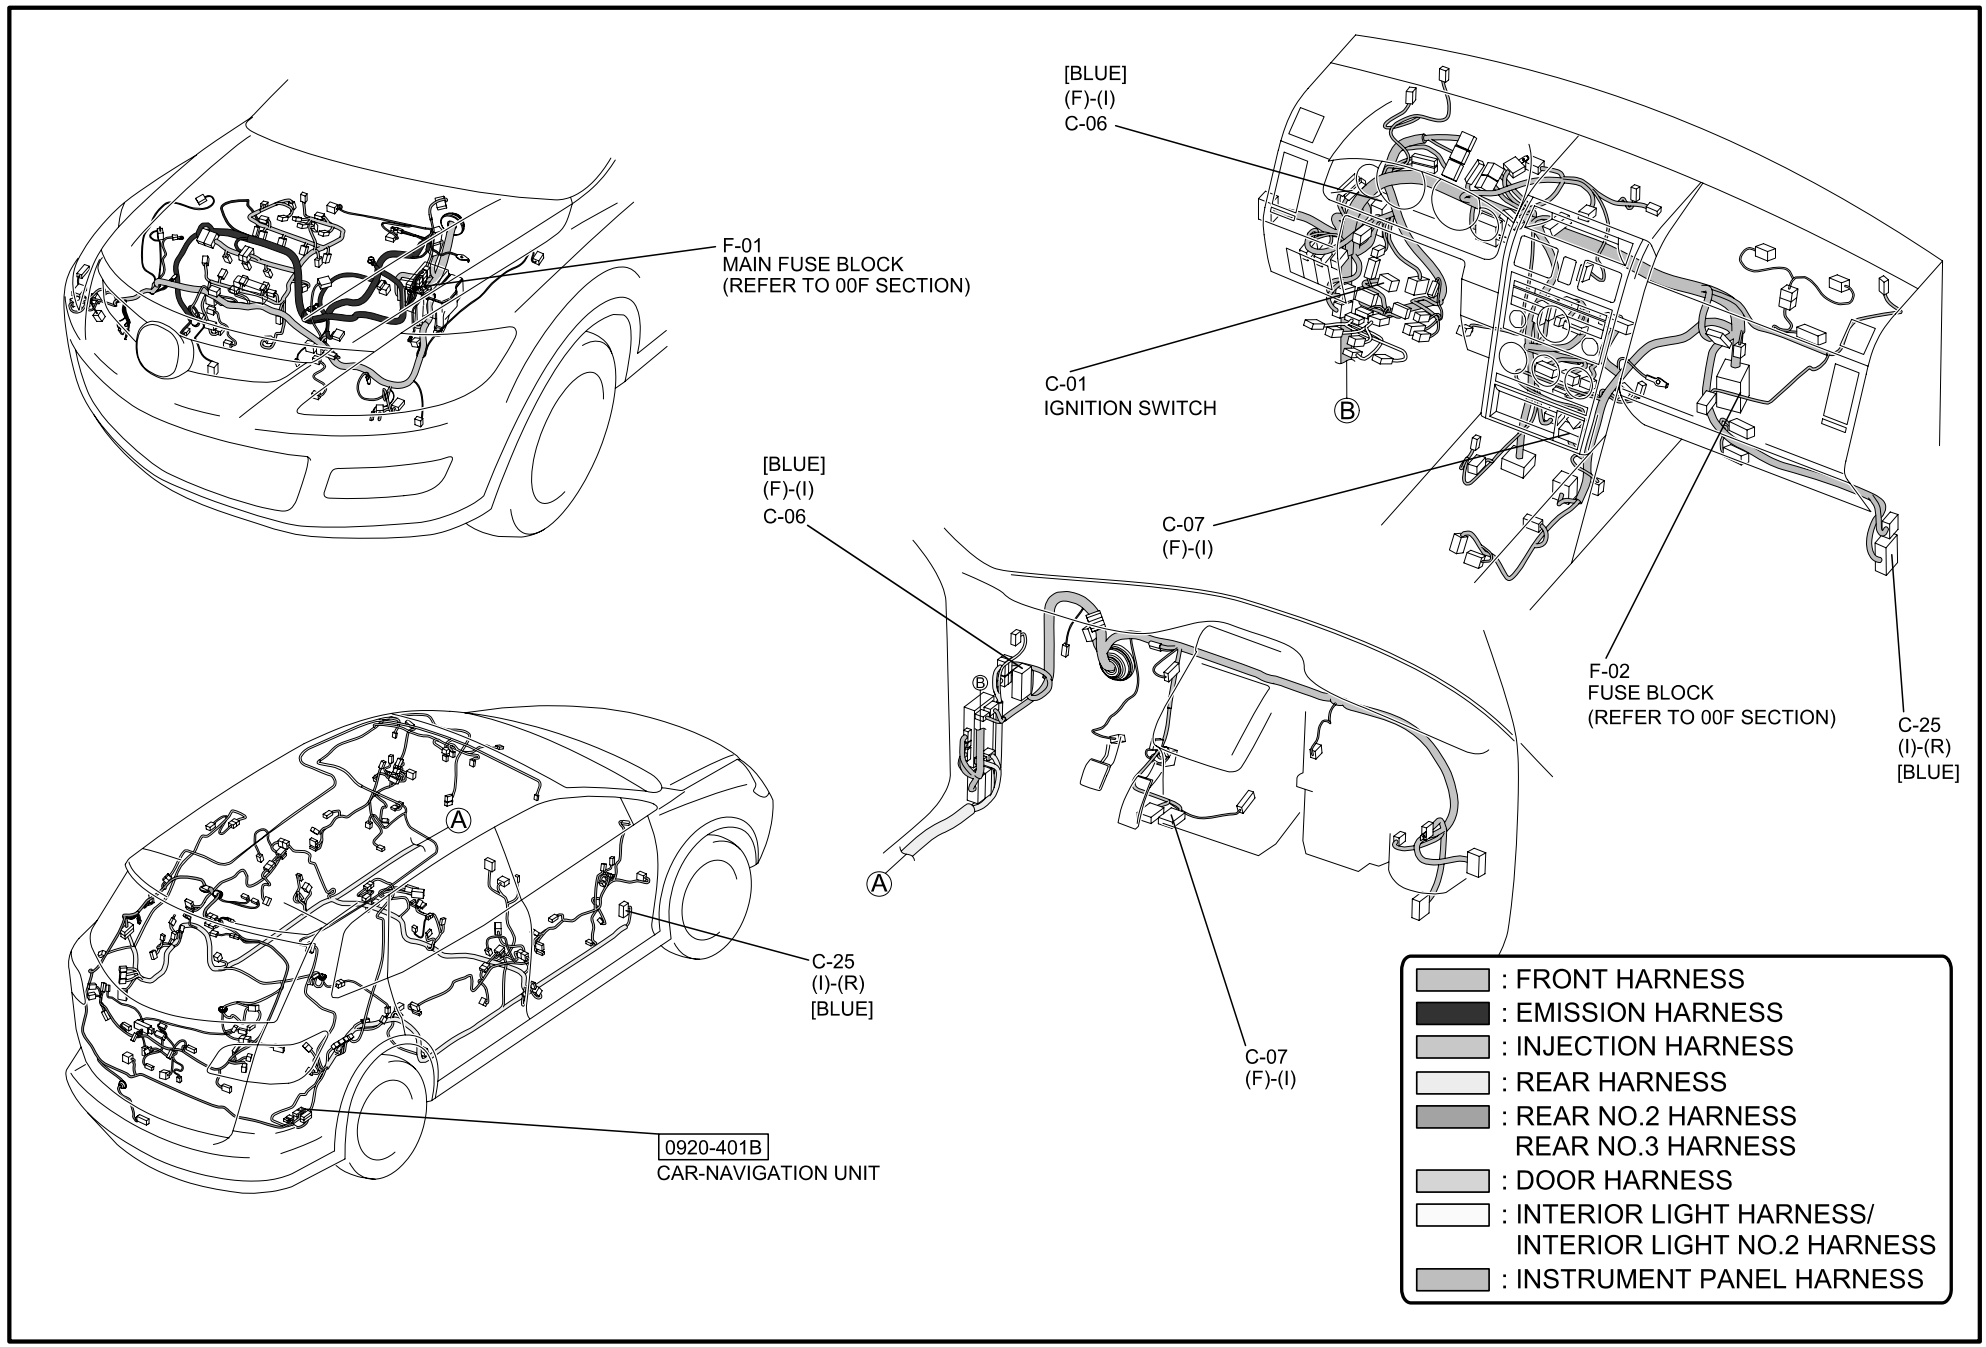
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
[BLUE]
(F)-(I)
C-06
C-01
IGNITION SWITCH
B
C-07
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
C-25
(I)-(R)
[BLUE]
[BLUE]
(F)-(I)
C-06
B
A
A
C-25
(I)-(R)
[BLUE]
C-07
(F)-(I)
0920-401B
CAR-NAVIGATION UNIT
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

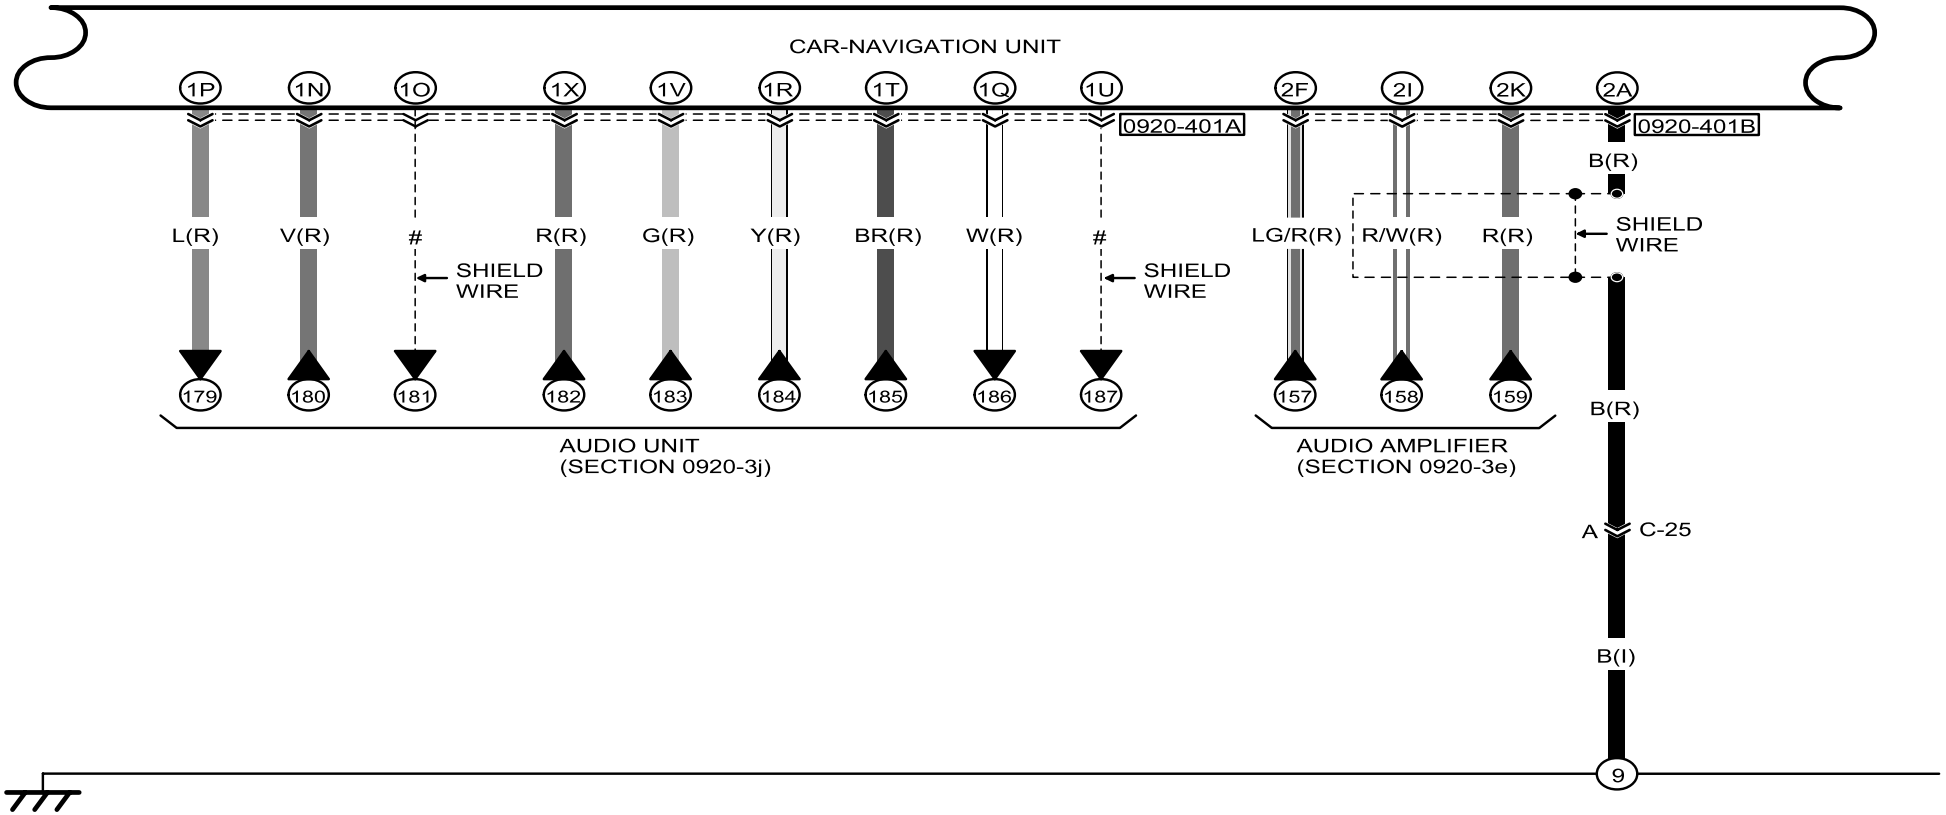


0920-401A
CAR-NAVIGATION UNIT

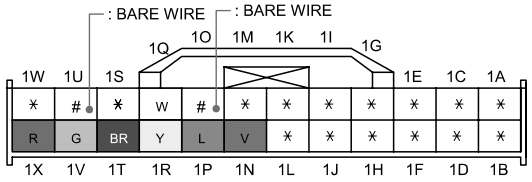


0920-401B
CAR-NAVIGATION UNIT

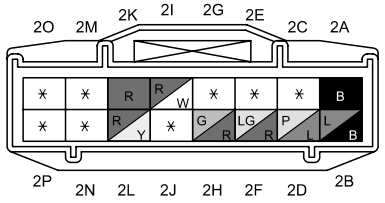


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

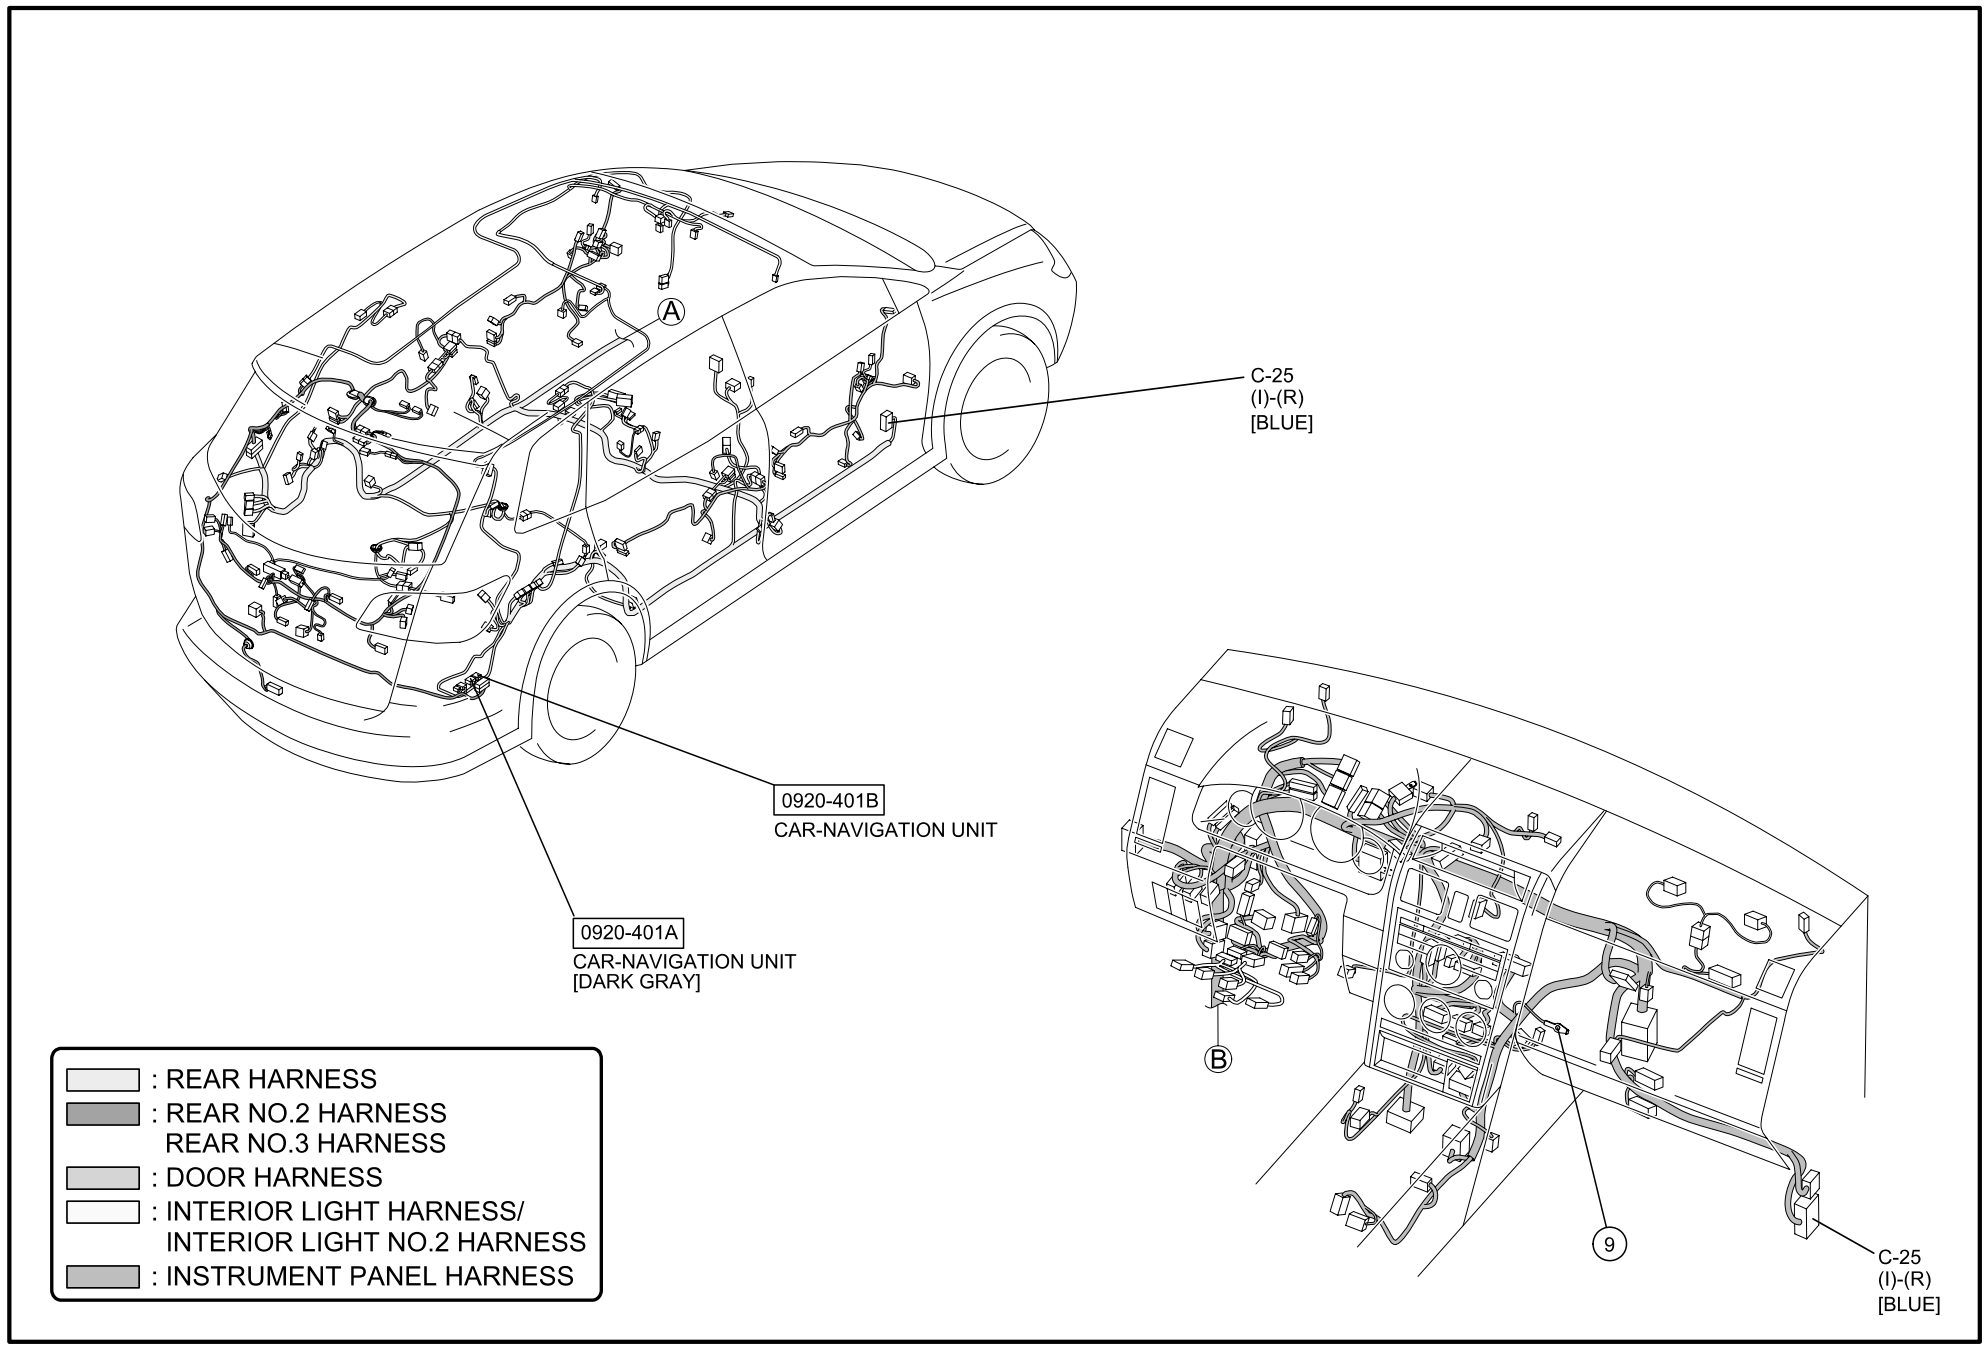
A
C-25
(I)-(R)
[BLUE]
0920-401B
CAR-NAVIGATION UNIT
0920-401A
CAR-NAVIGATION UNIT
[DARK GRAY]
B
9
C-25
(I)-(R)
[BLUE]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

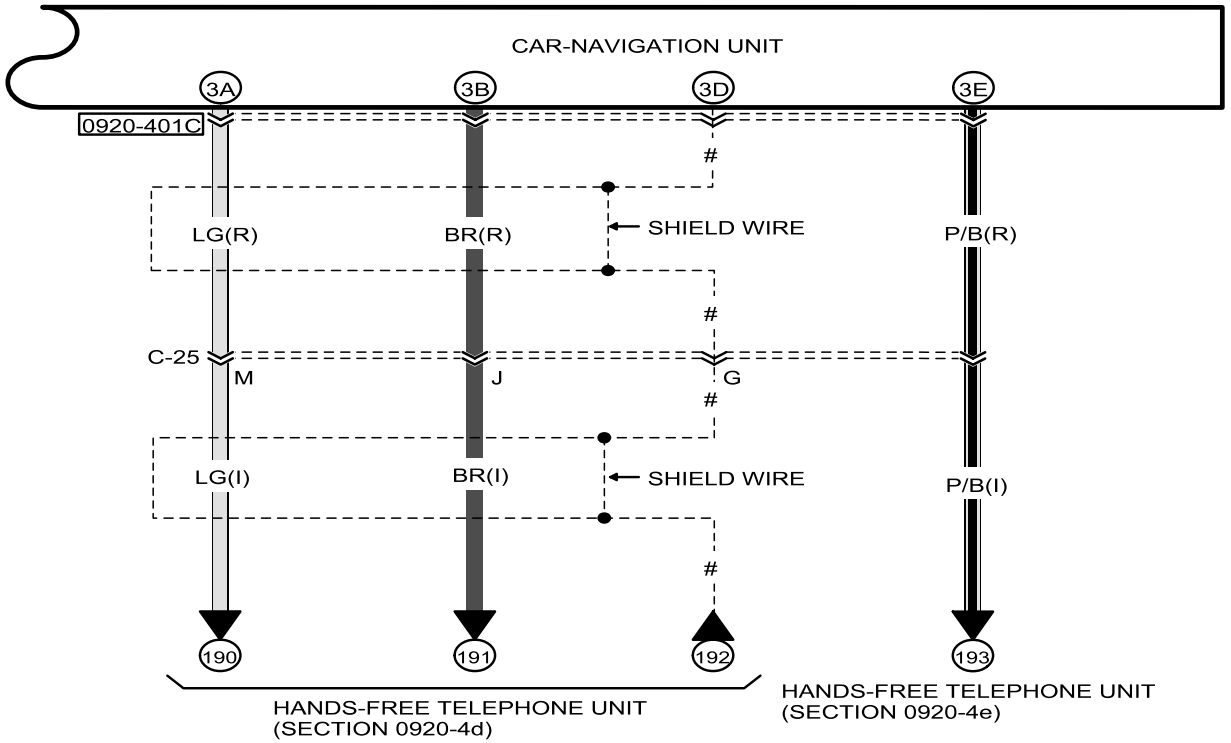


0920-401C
CAR-NAVIGATION UNIT

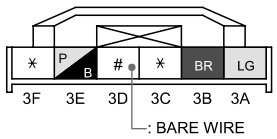


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

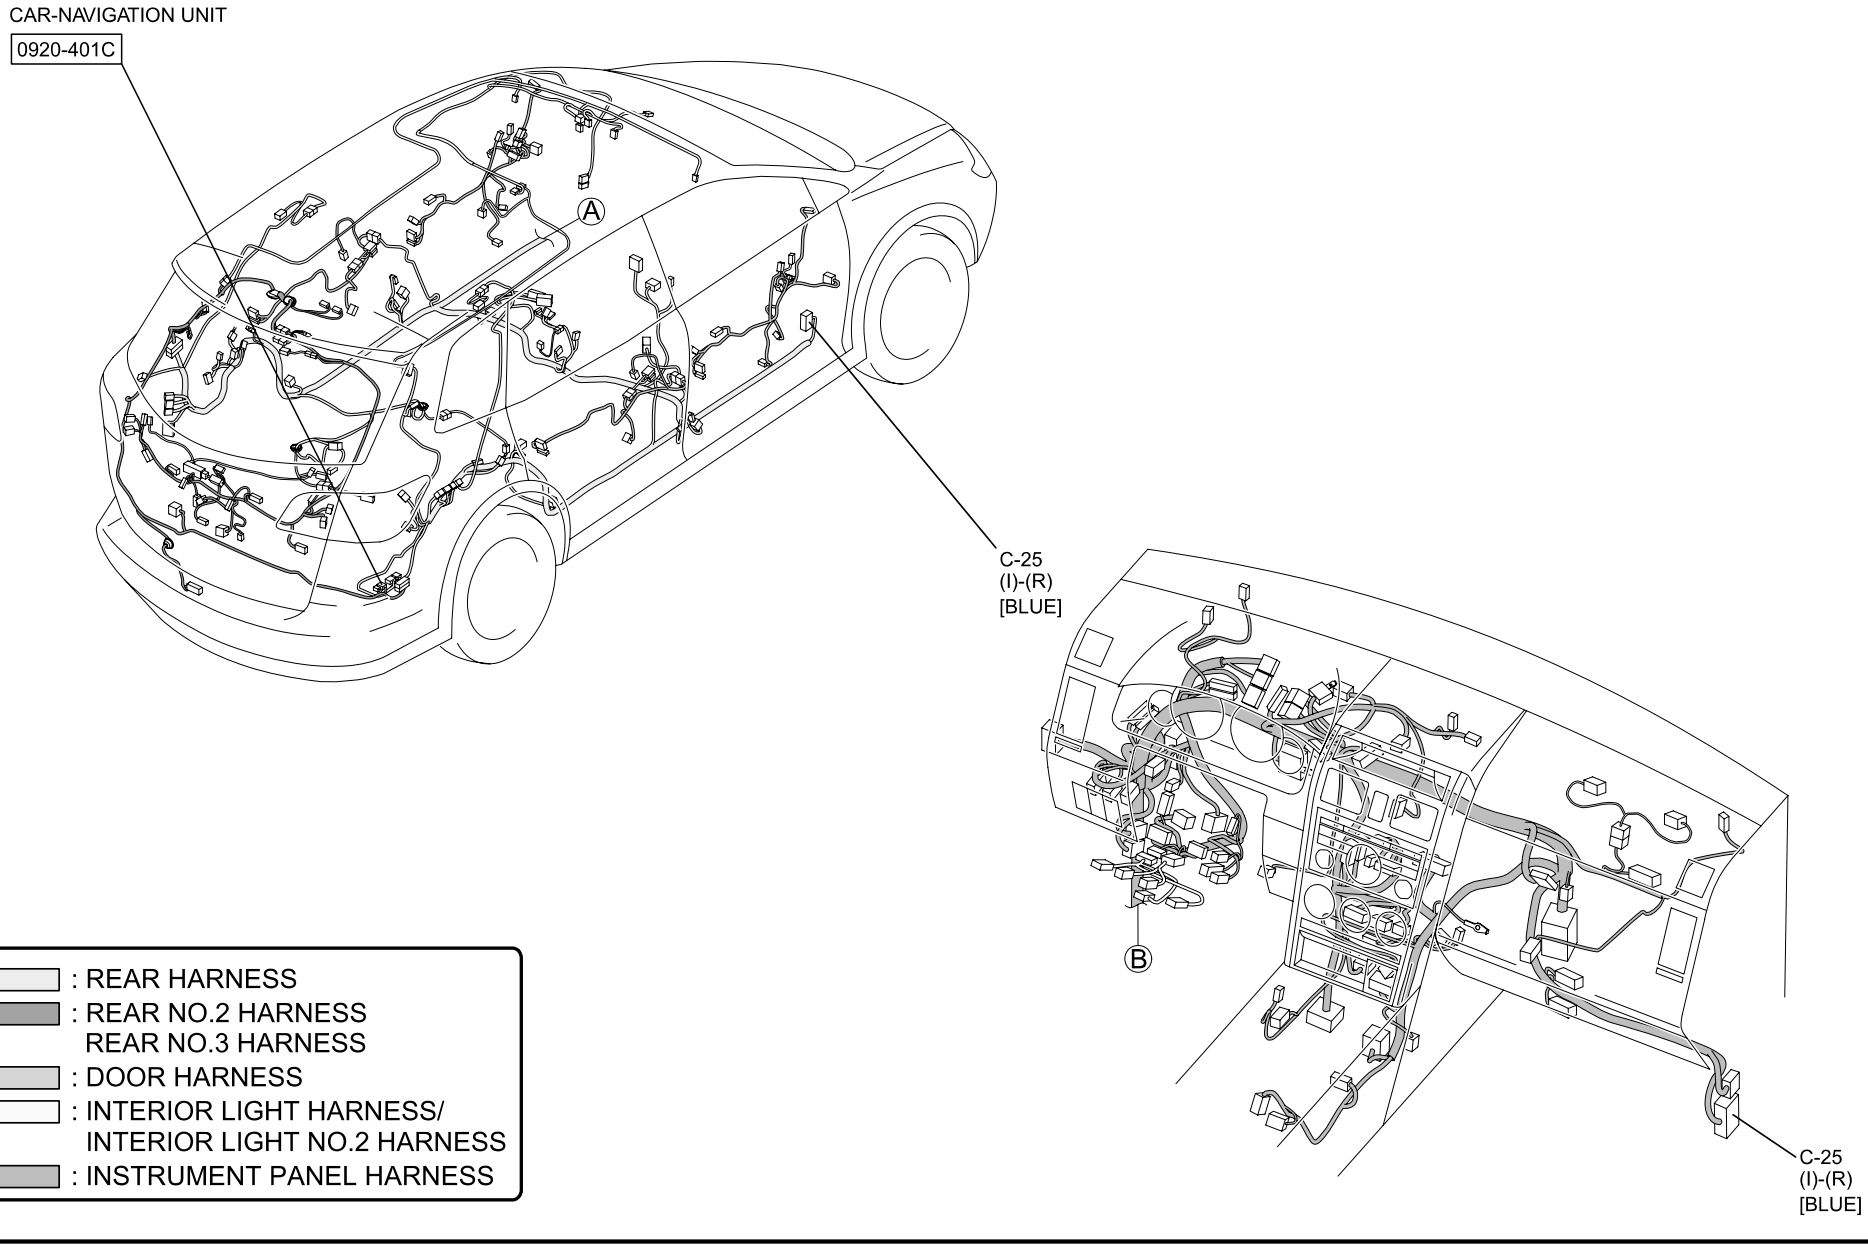
CAR-NAVIGATION UNIT
0920-401C
A
C-25
(I)-(R)
[BLUE]
B
C-25
(I)-(R)
[BLUE]
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

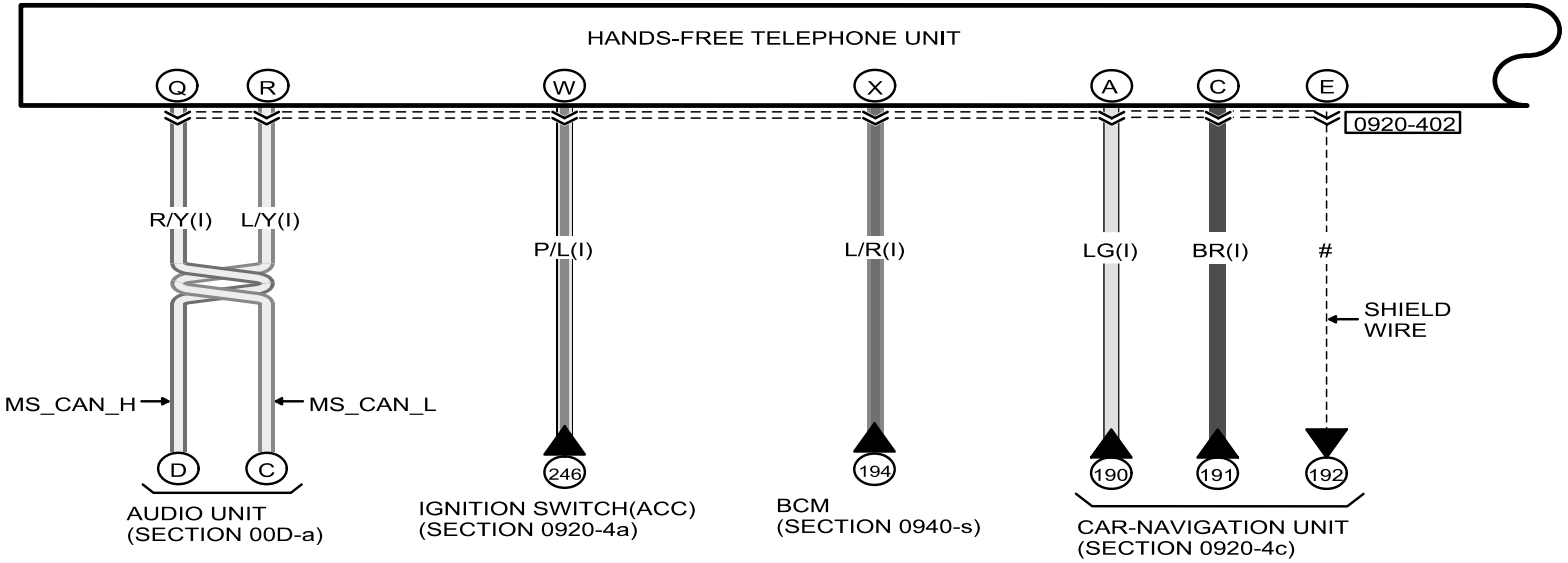


0920-402
HANDS-FREE TELEPHONE UNIT

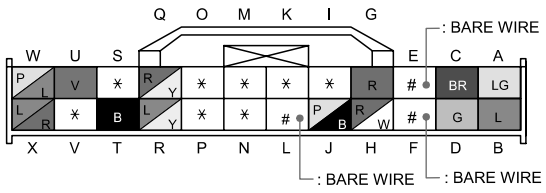


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

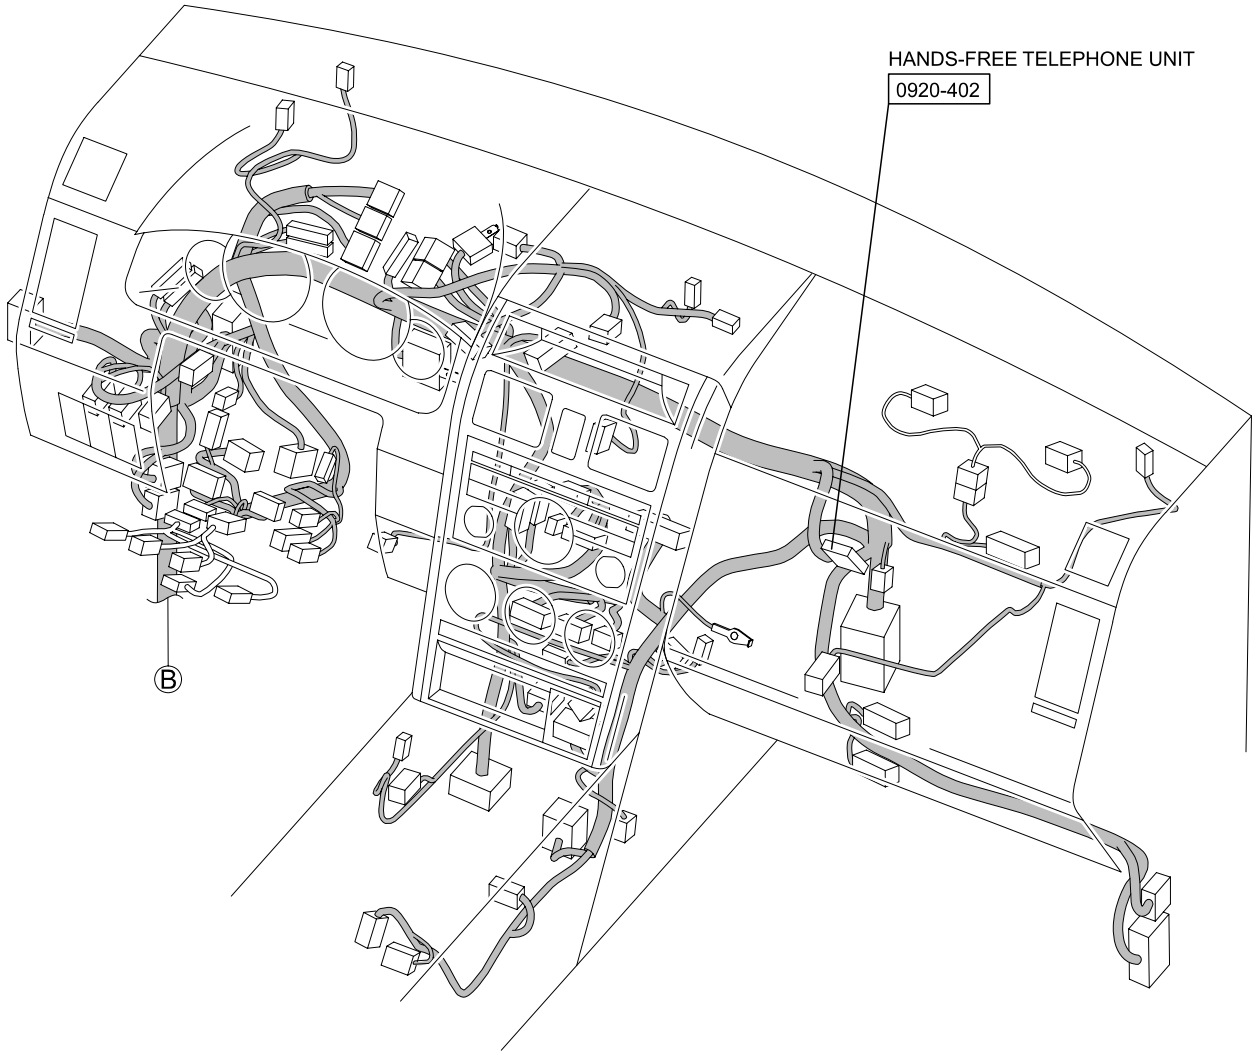
HANDS-FREE TELEPHONE UNIT
0920-402
B
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

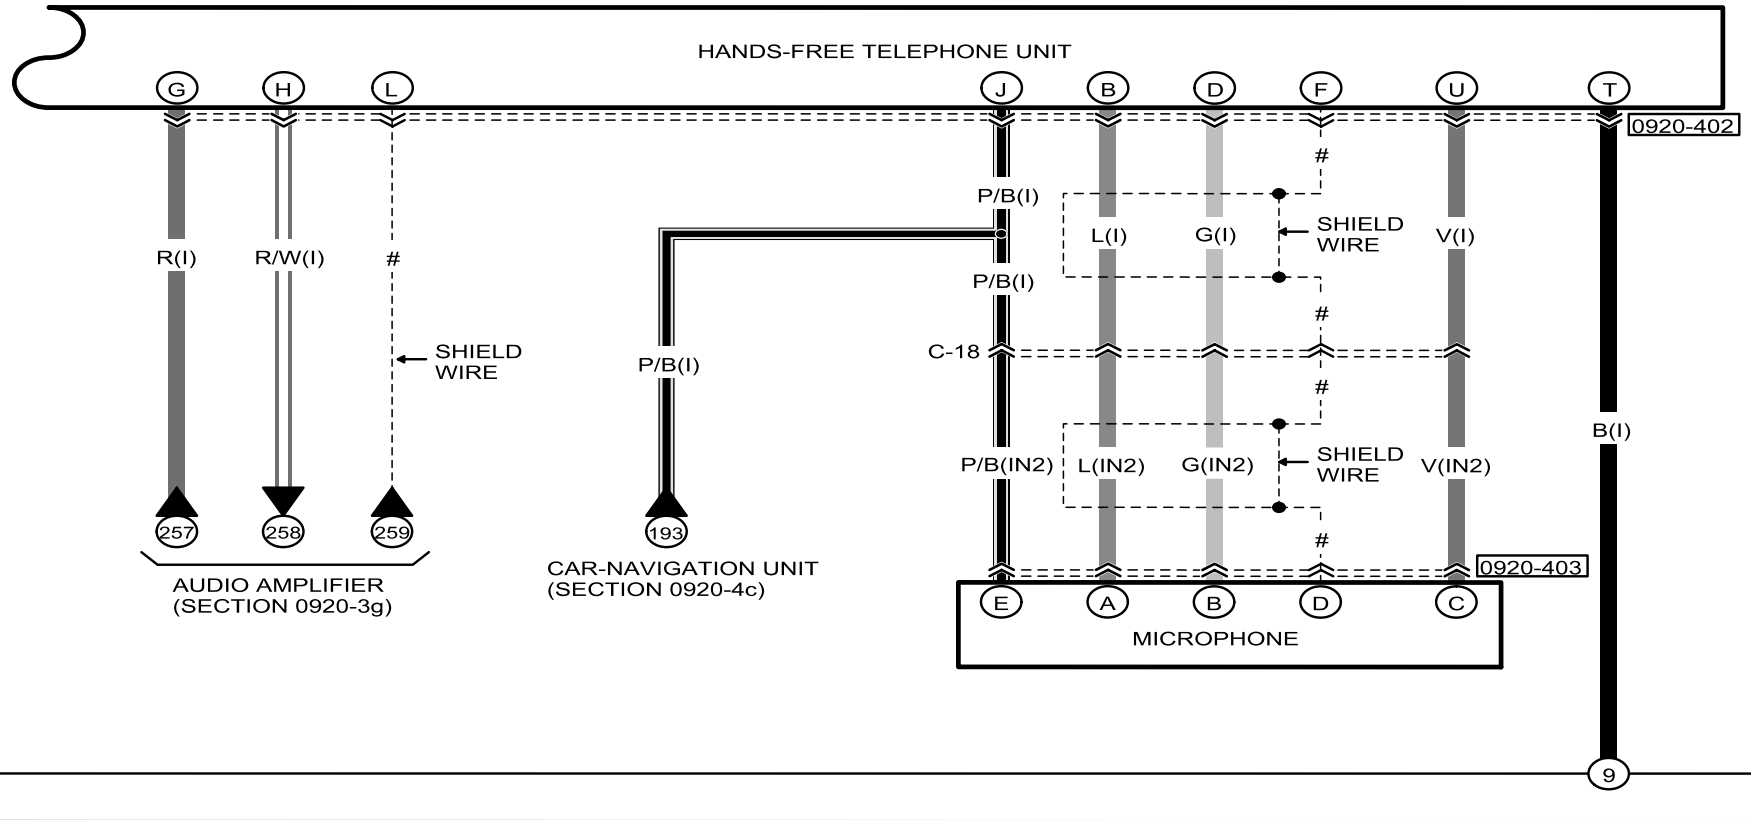


0920-402
HANDS-FREE TELEPHONE UNIT

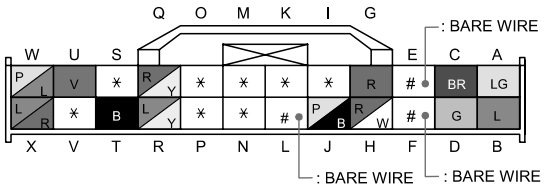


0920-403
MICROPHONE

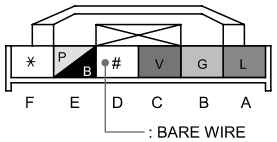


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

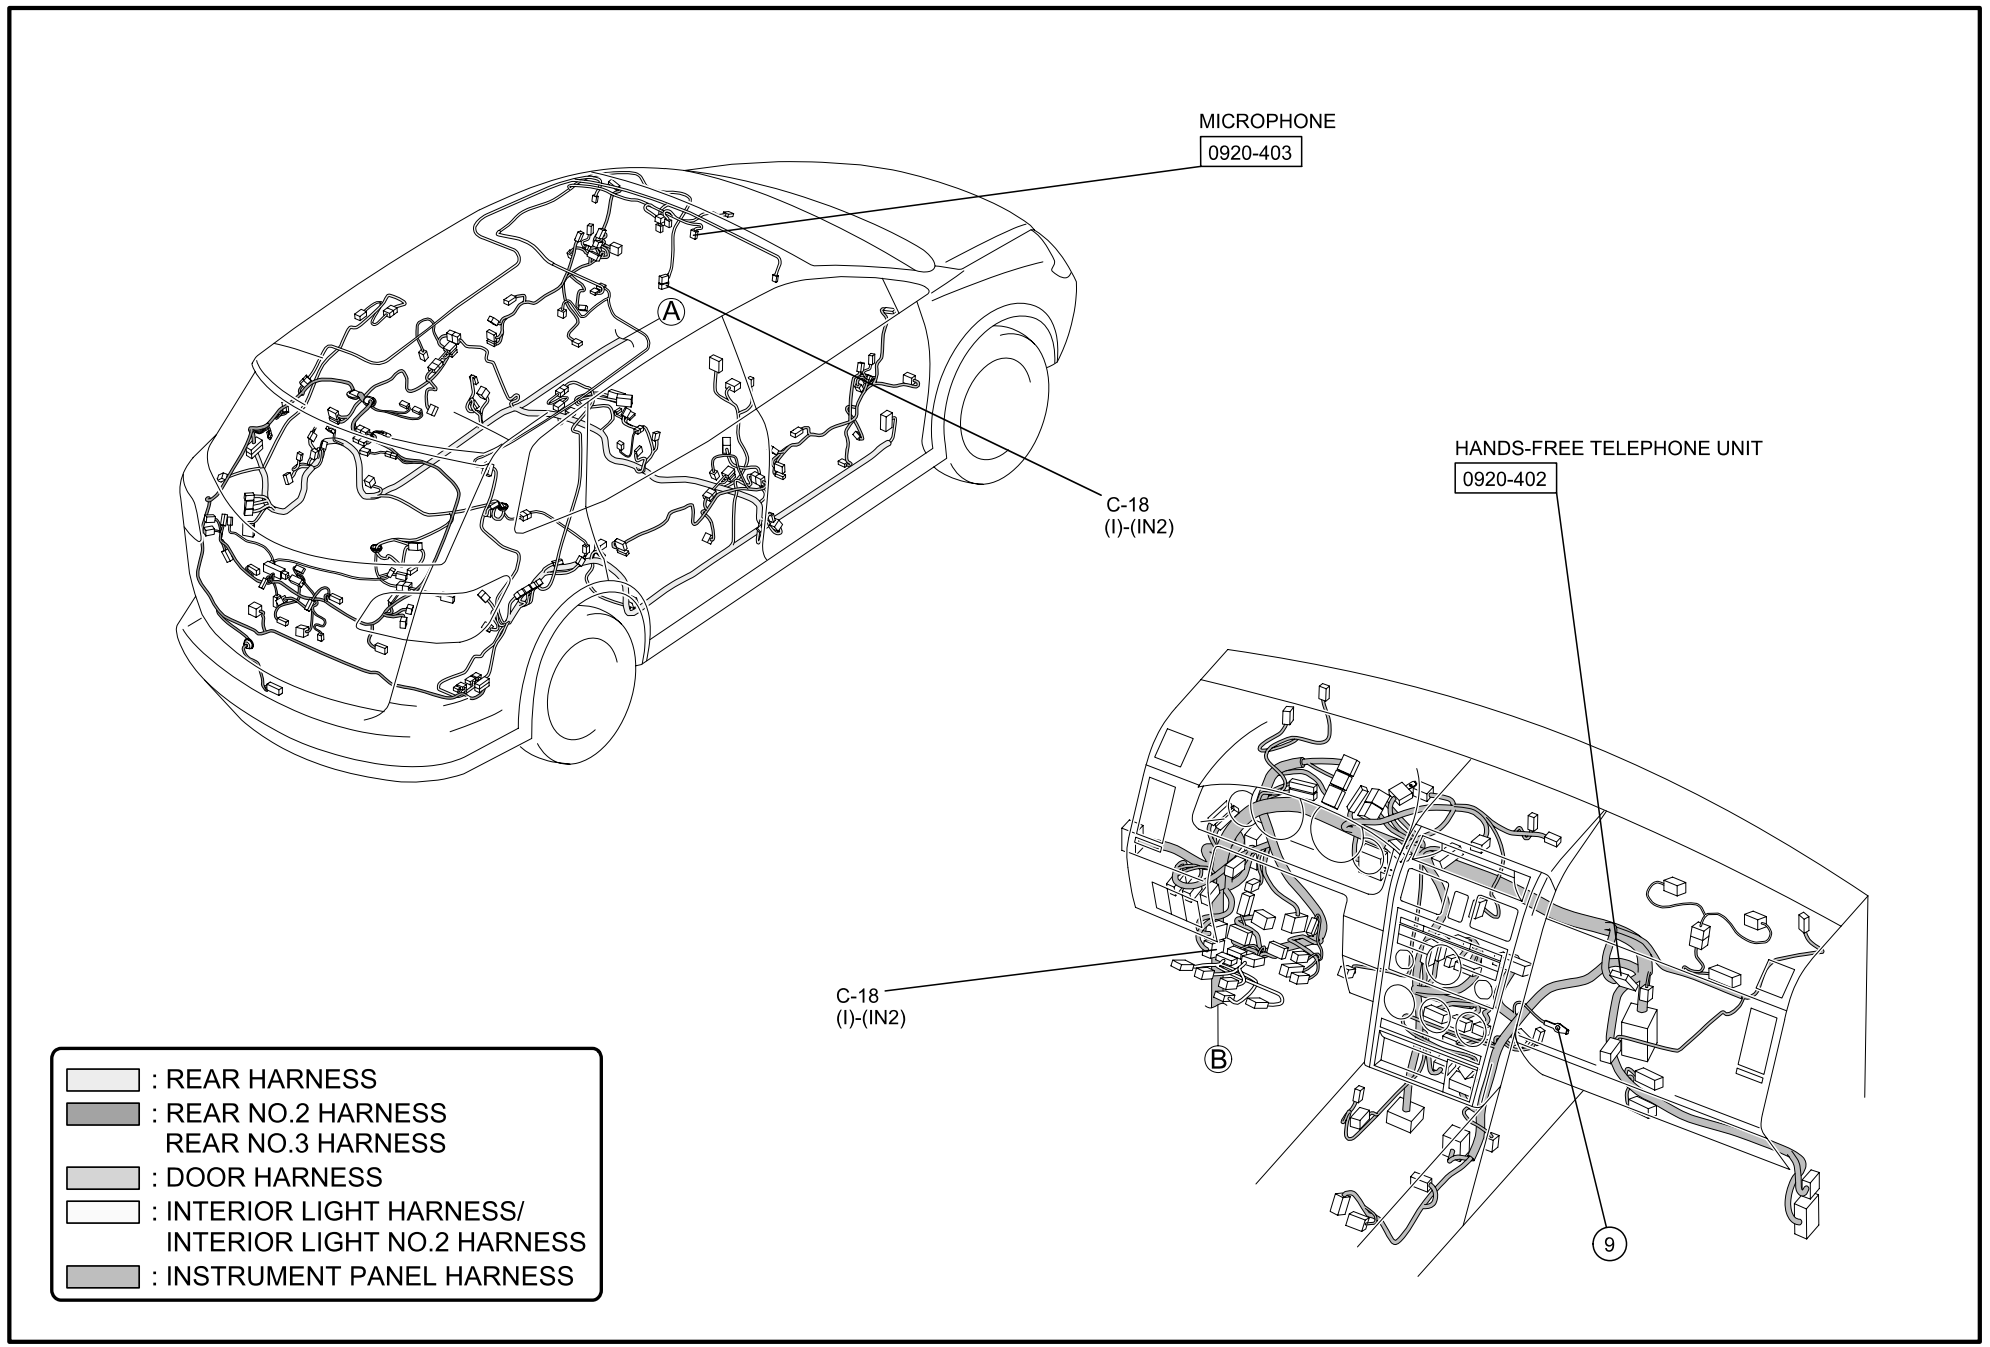

MICROPHONE
0920-403
A
C-18
(I)-(IN2)
HANDS-FREE TELEPHONE UNIT
0920-402
C-18
(I)-(IN2)
B
9
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

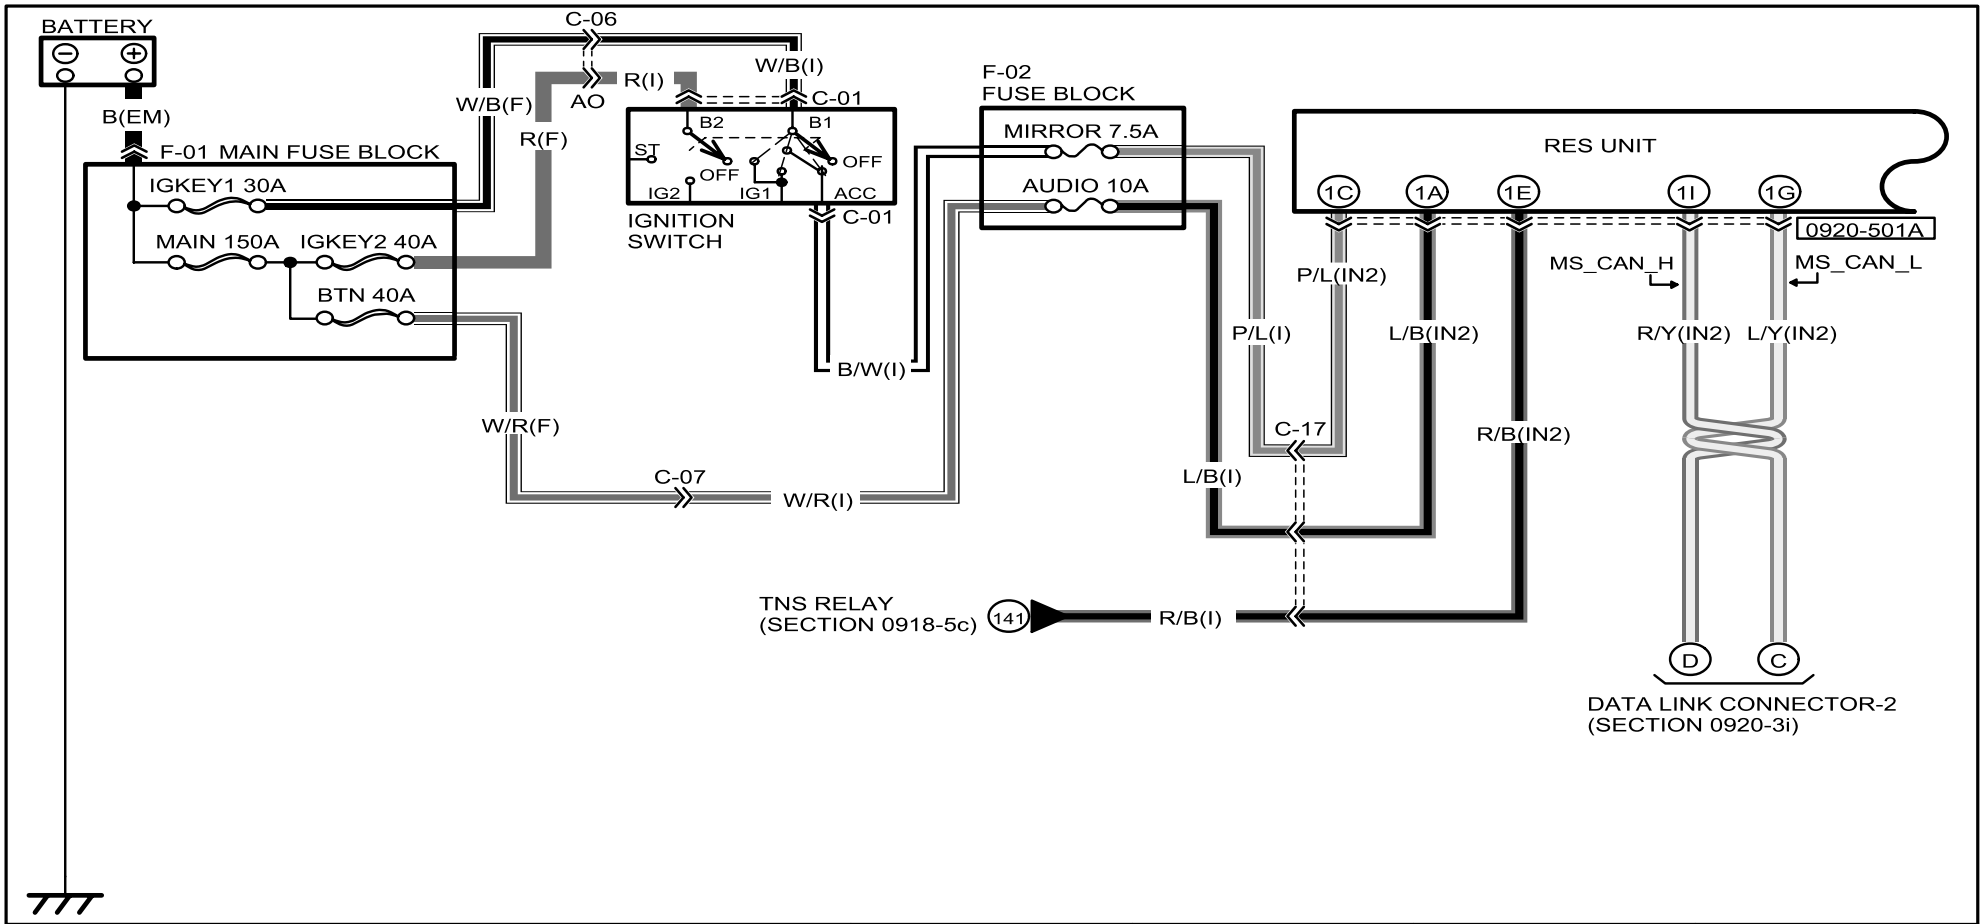


0920-501A
RES UNIT

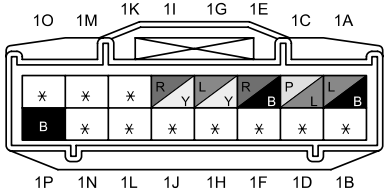


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

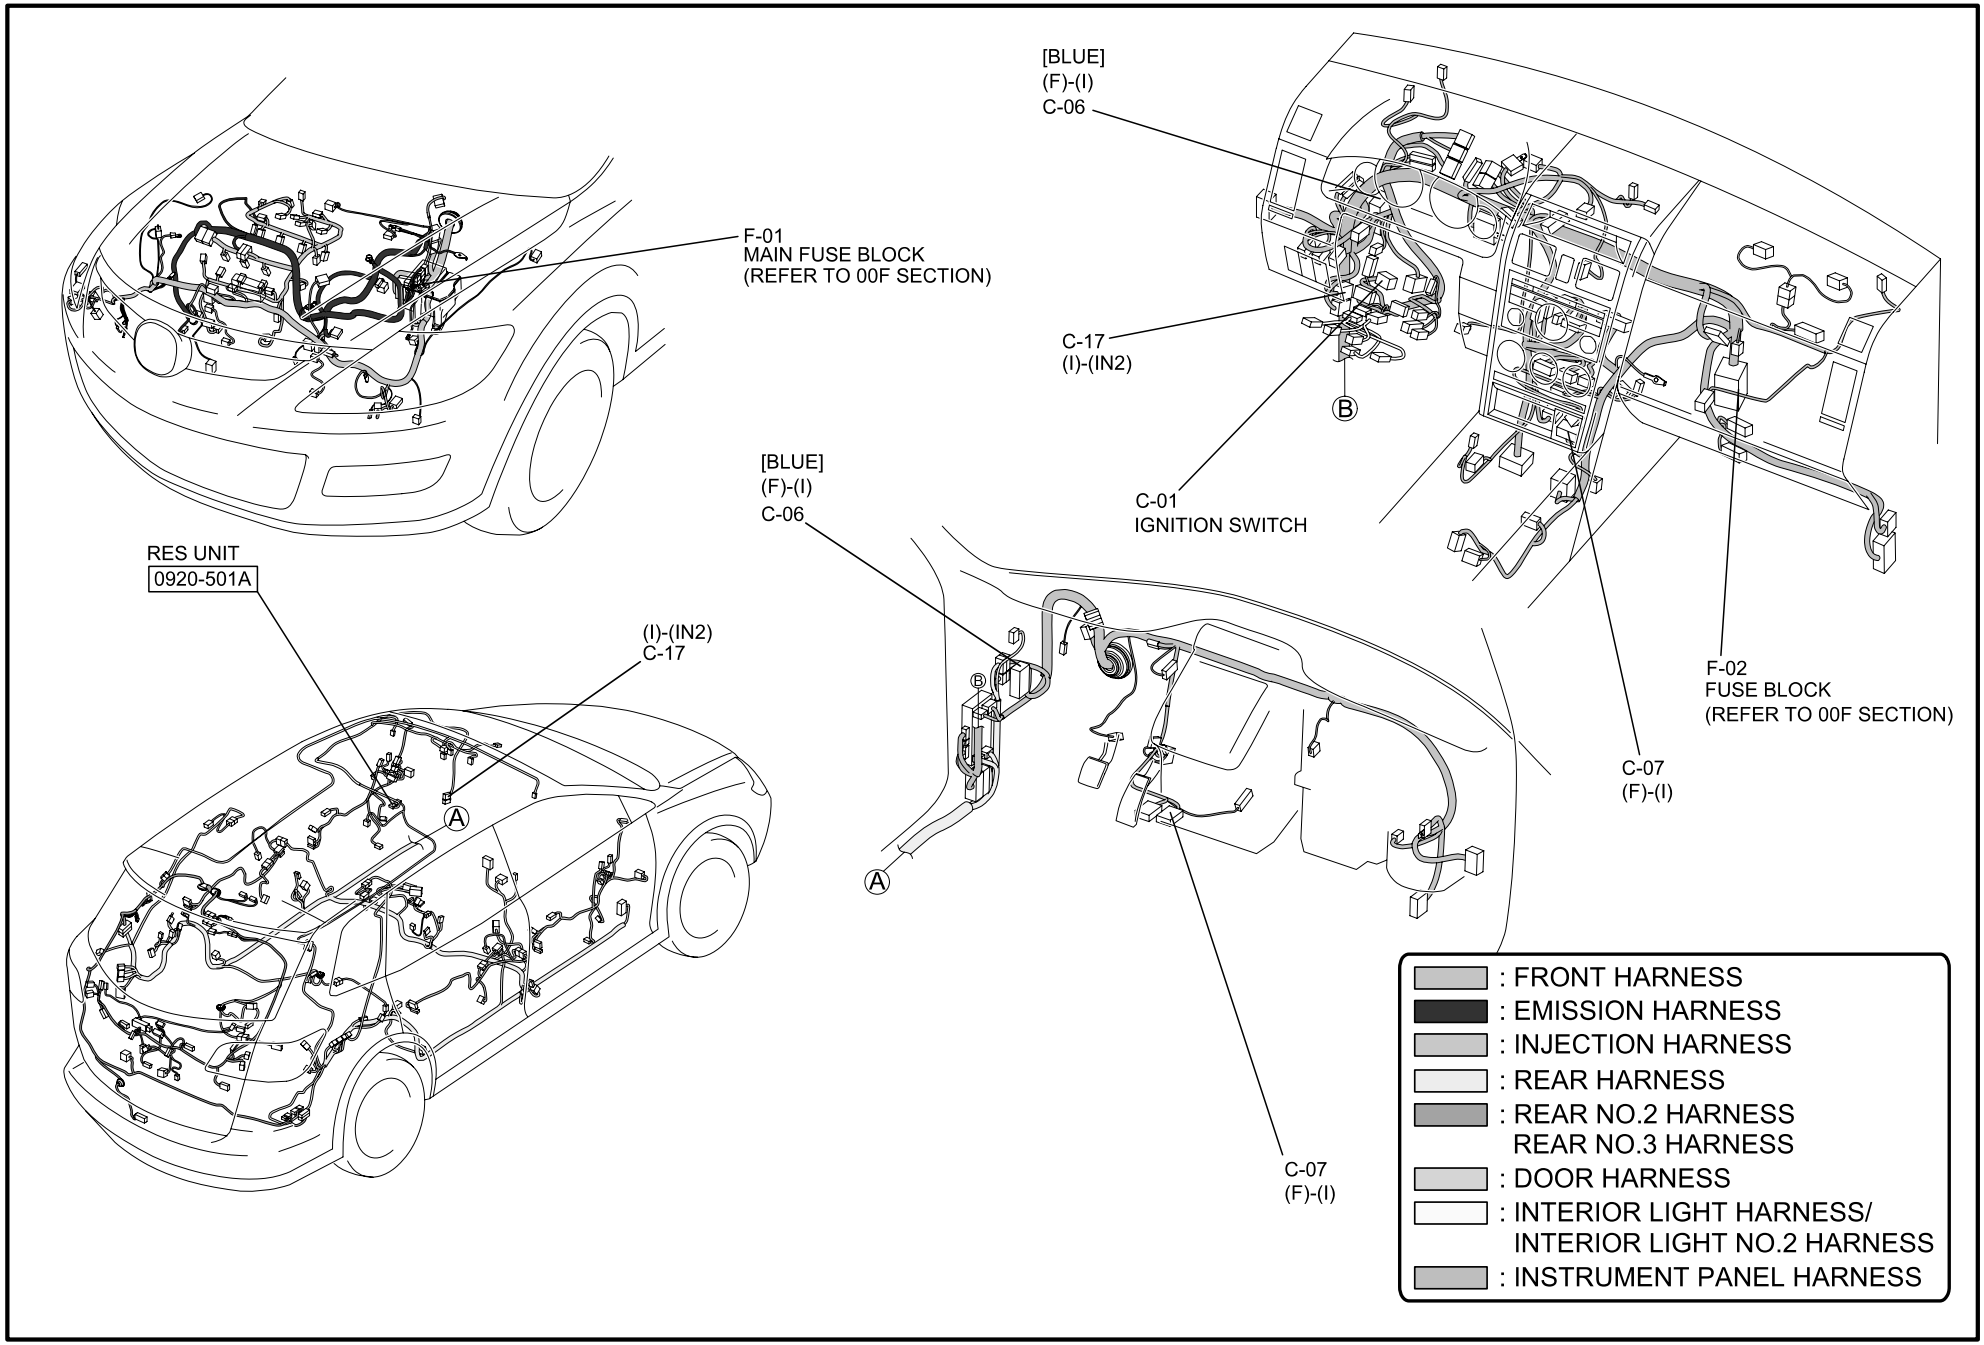
[BLUE]
(F)-(I)
C-06
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-17
(I)-(IN2)
B
C-01
IGNITION SWITCH
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
[BLUE]
(F)-(I)
C-06
RES UNIT
0920-501A
(I)-(IN2)
C-17
A
B
A
C-07
(F)-(I)
C-07
(F)-(I)
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


#: BARE WIRE

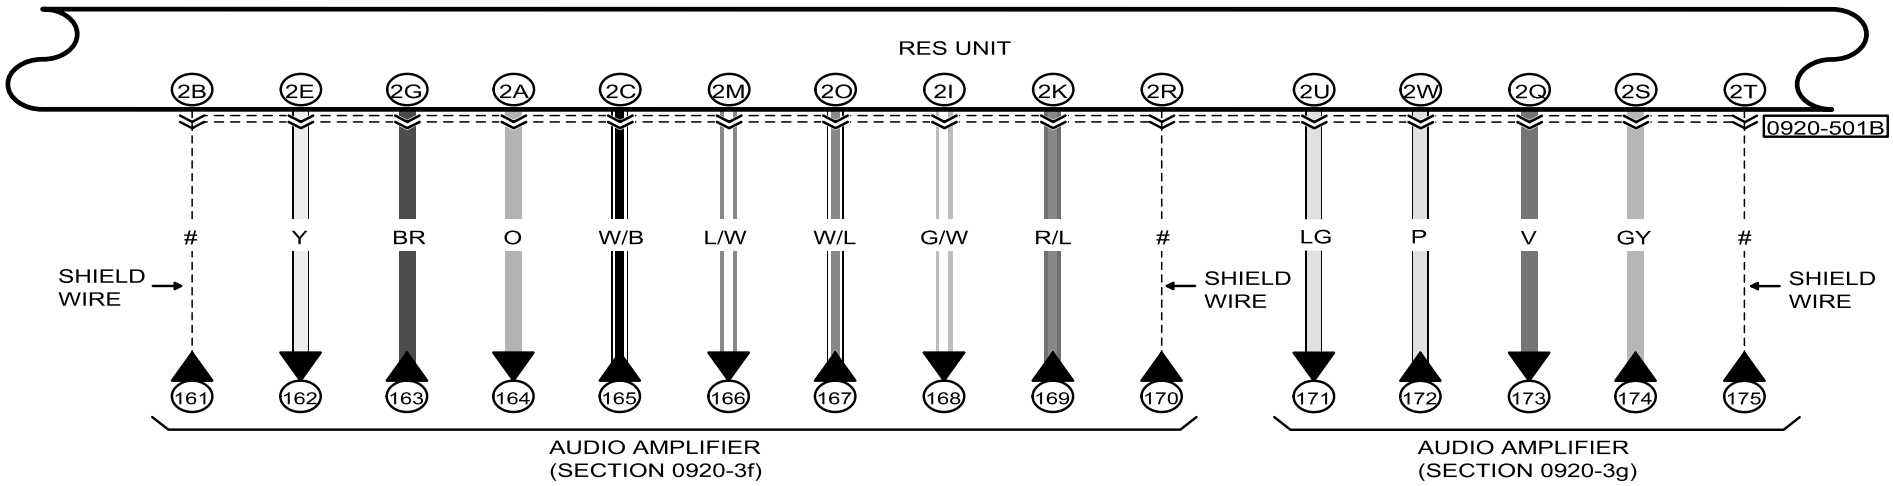


0920-501B
RES UNIT

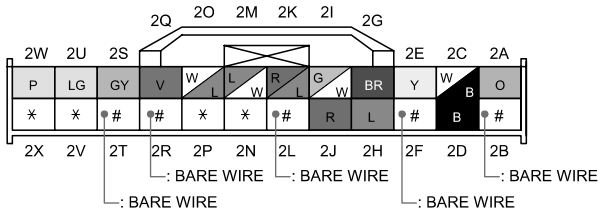

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

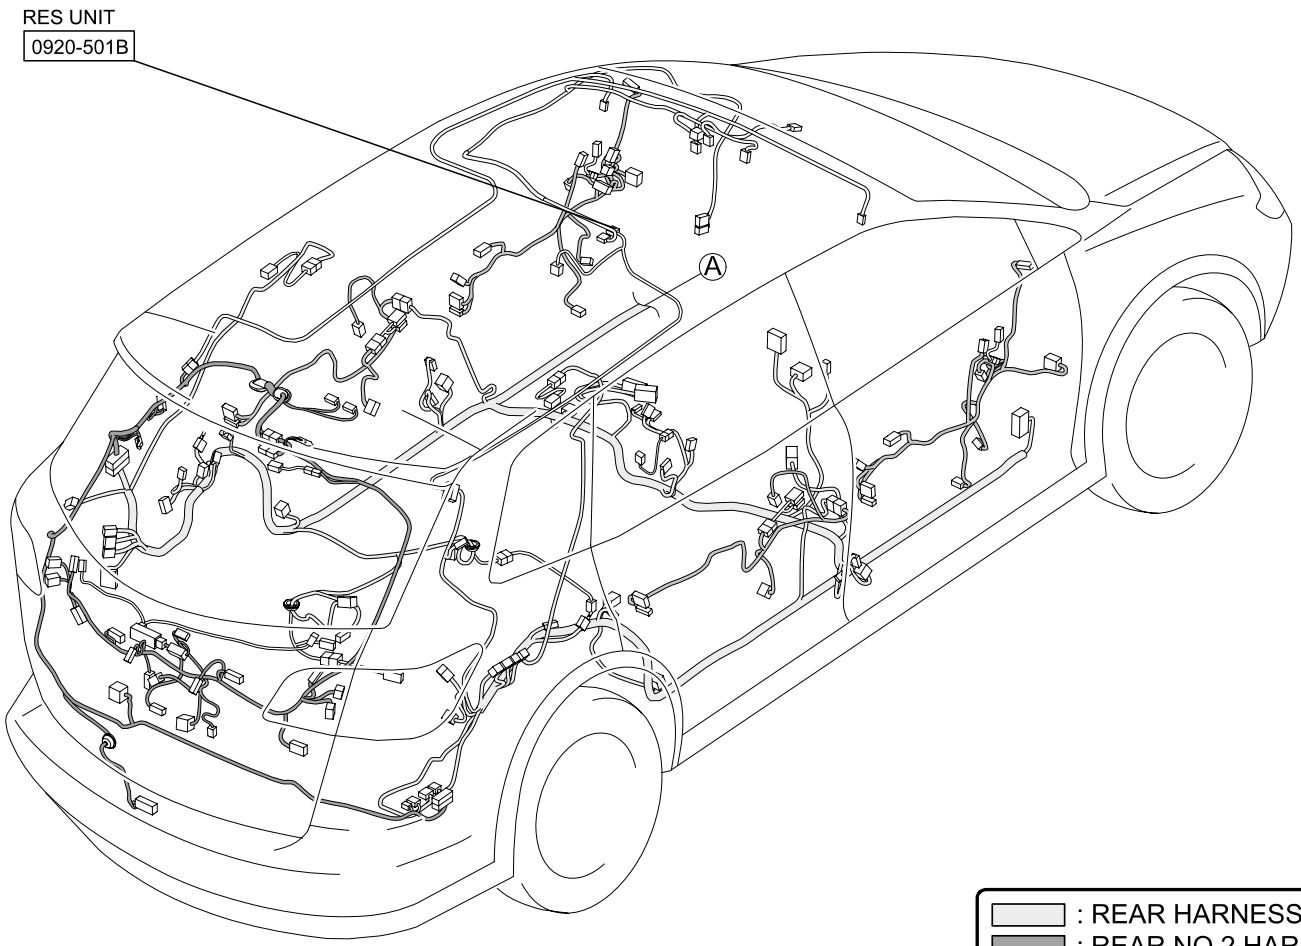

RES UNIT
0920-501B
A
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

#: BARE WIRE

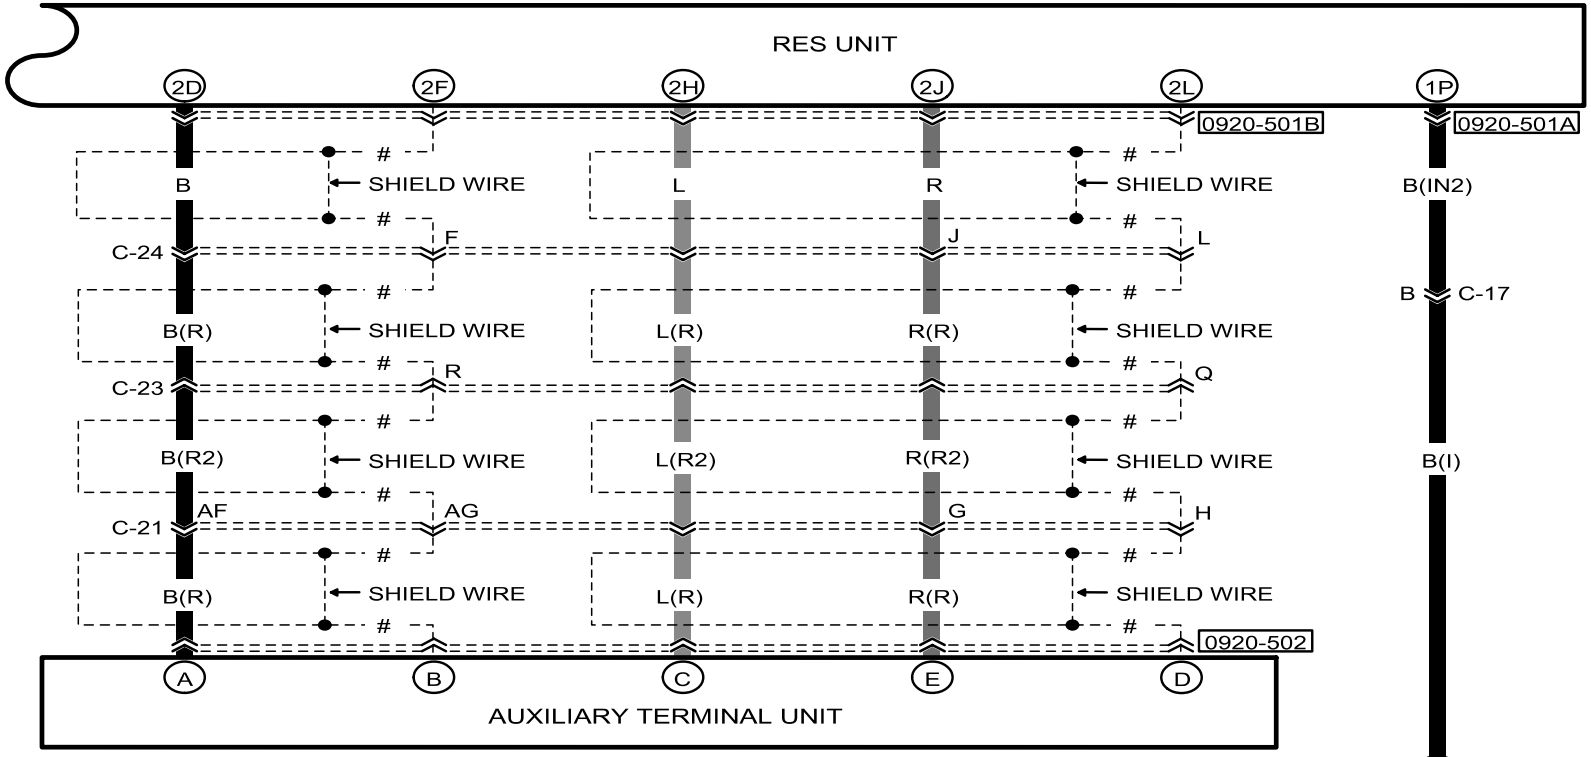


274


0920-501A
RES UNIT

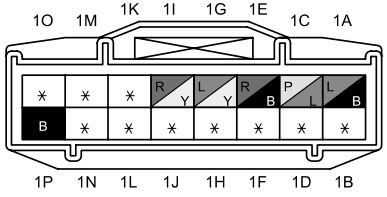


0920-501B
RES UNIT

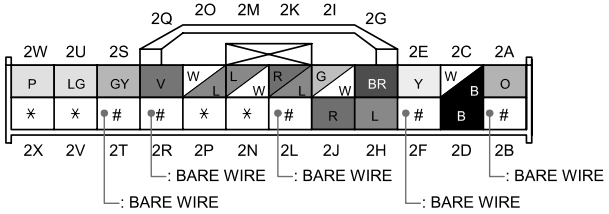


0920-502
AUXILIARY TERMINAL UNIT

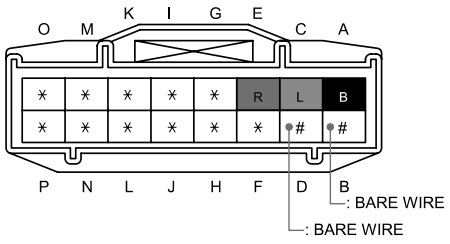


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

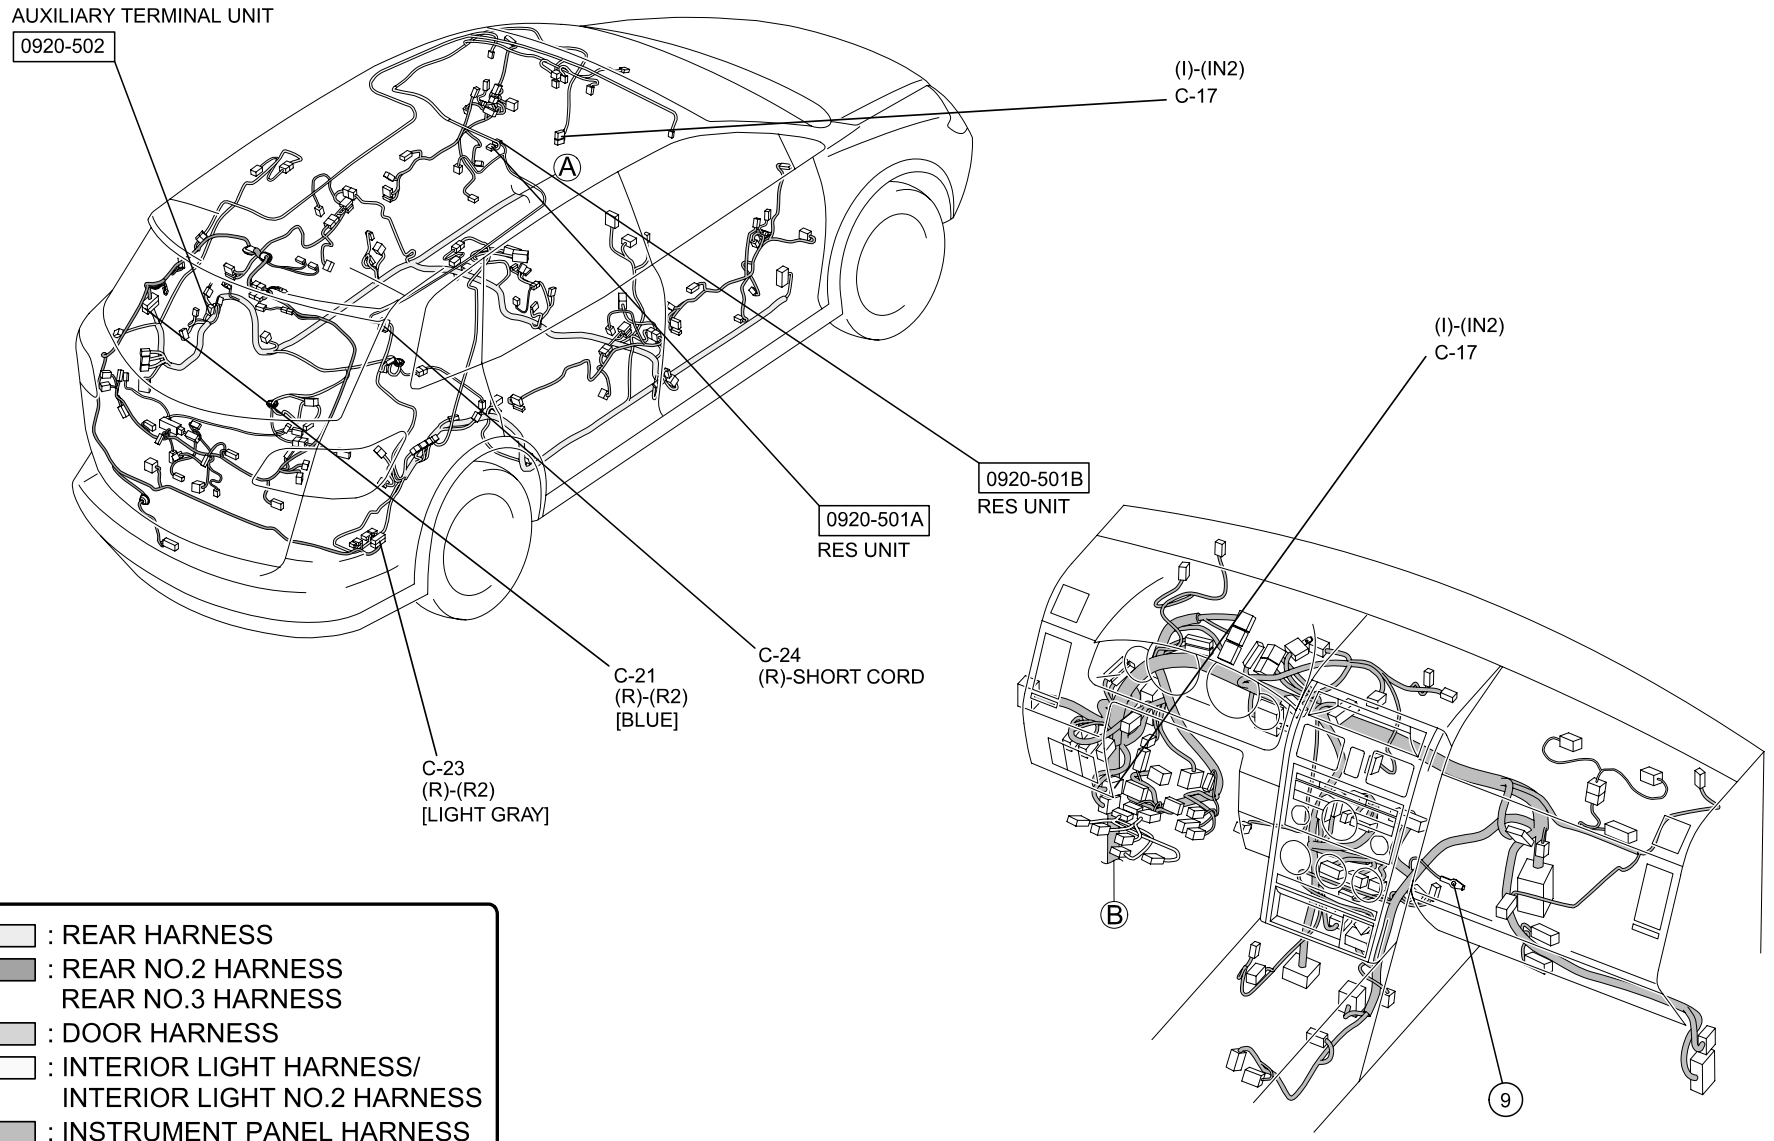

AUXILIARY TERMINAL UNIT
0920-502
(I)-(IN2)
C-17
A
0920-501B
RES UNIT
0920-501A
RES UNIT
C-24
(R)-SHORT CORD
C-21
(R)-(R2)
[BLUE]
C-23
(R)-(R2)
[LIGHT GRAY]
(I)-(IN2)
C-17
B
9
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

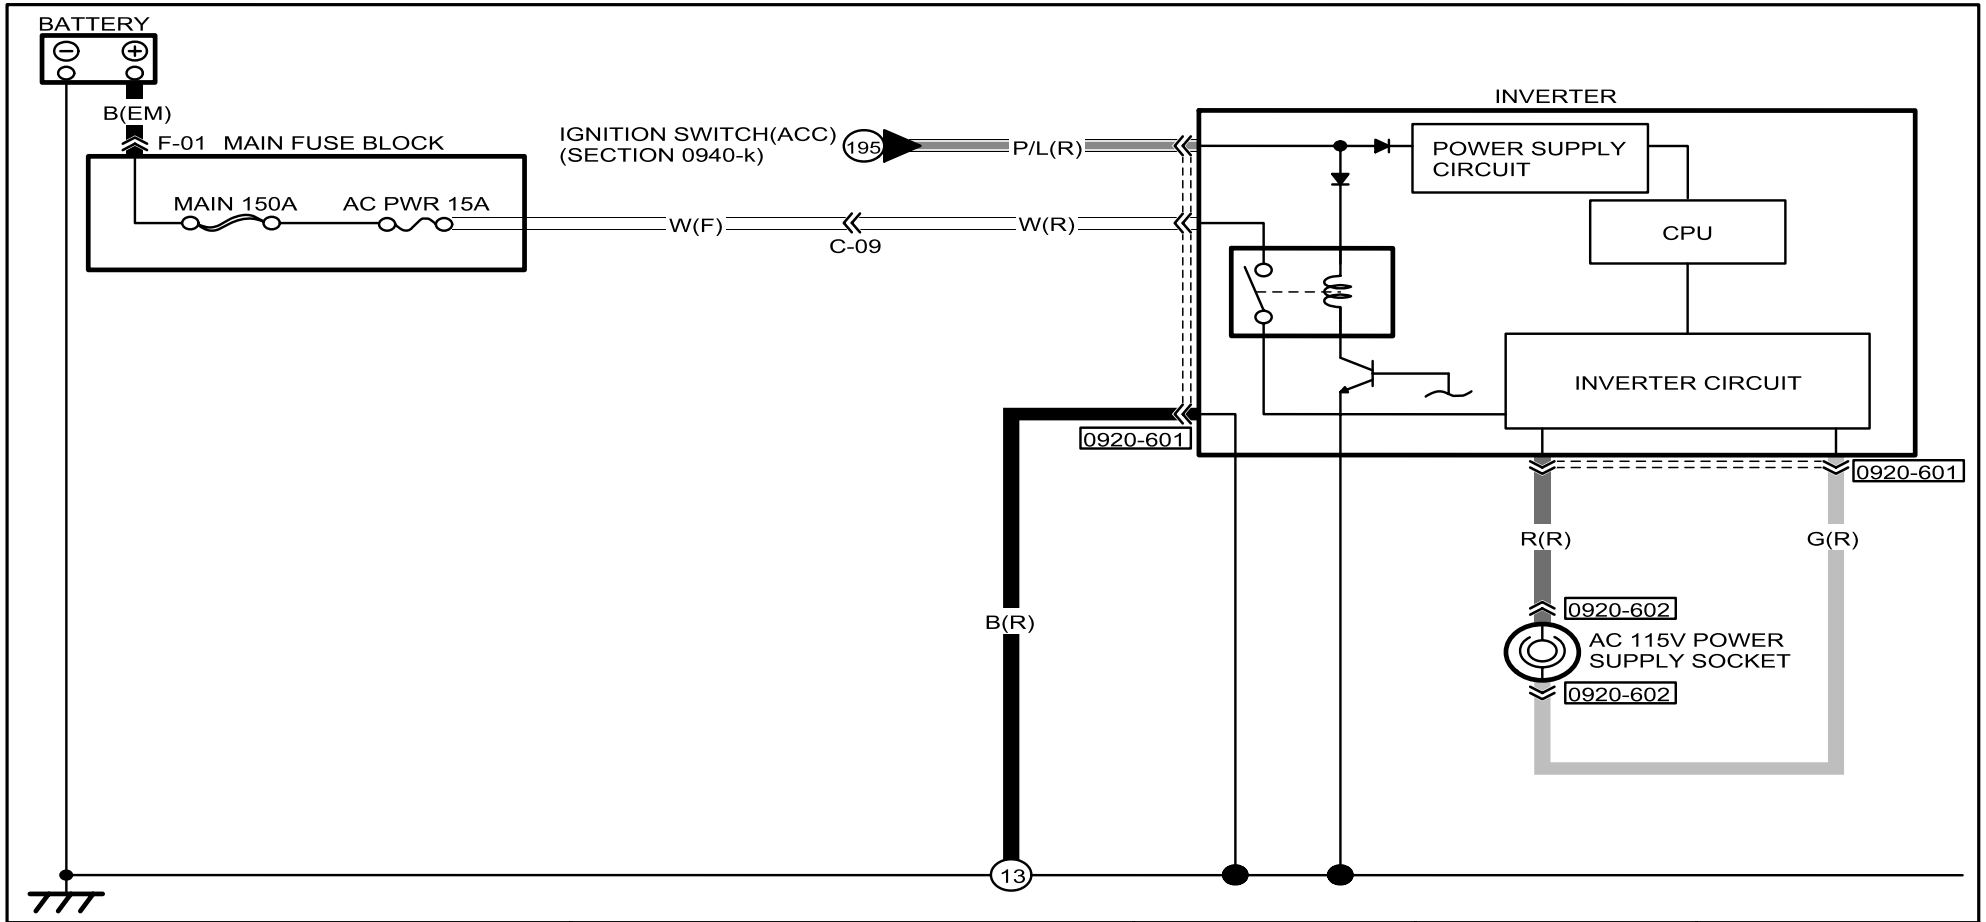


0920-601 INVERTER	0920-602 AC 115V POWER SUPPLY SOCKET			

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

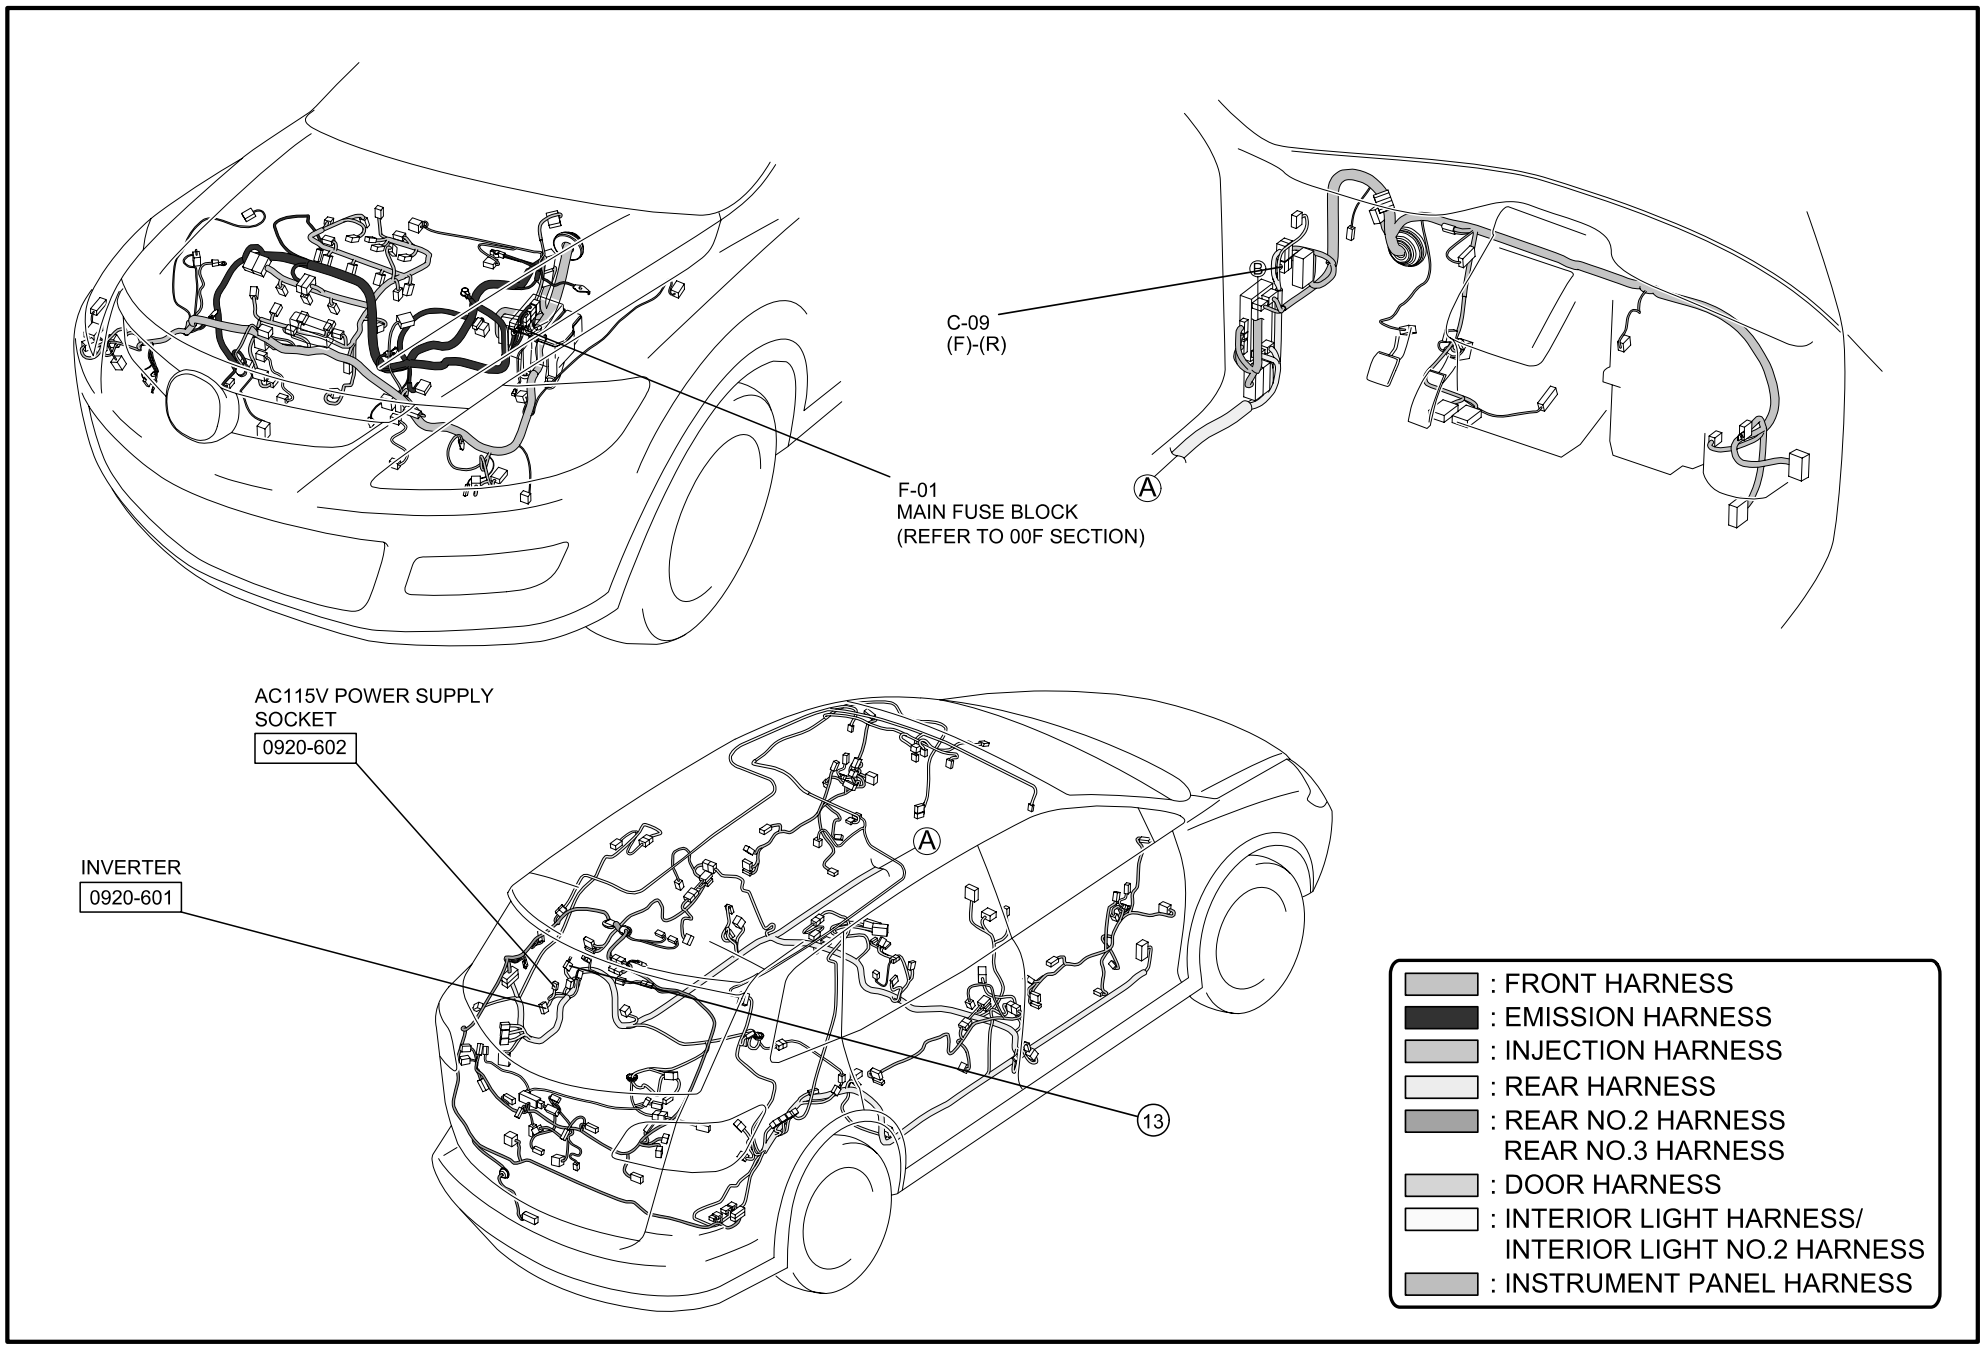

C-09
(F)-(R)
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
A
AC115V POWER SUPPLY
SOCKET
0920-602
INVERTER
0920-601
A
13
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

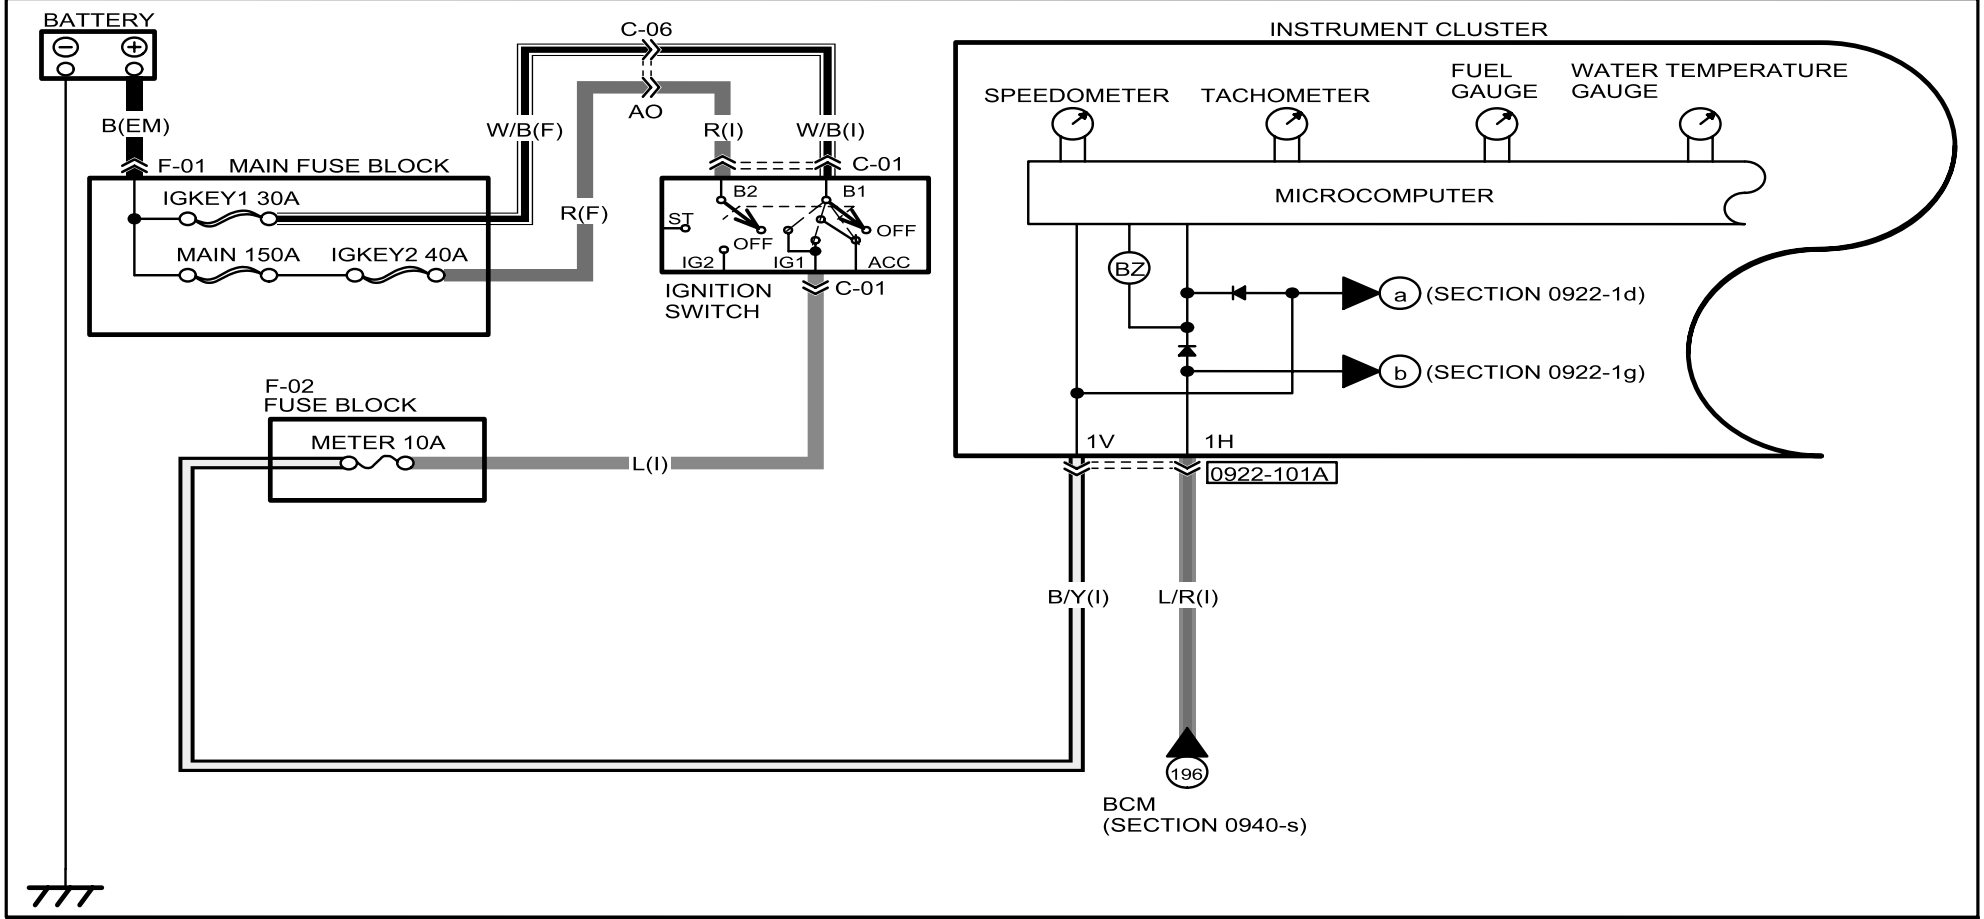


0922-101A
INSTRUMENT CLUSTER

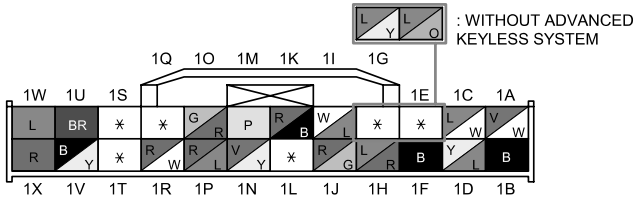


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

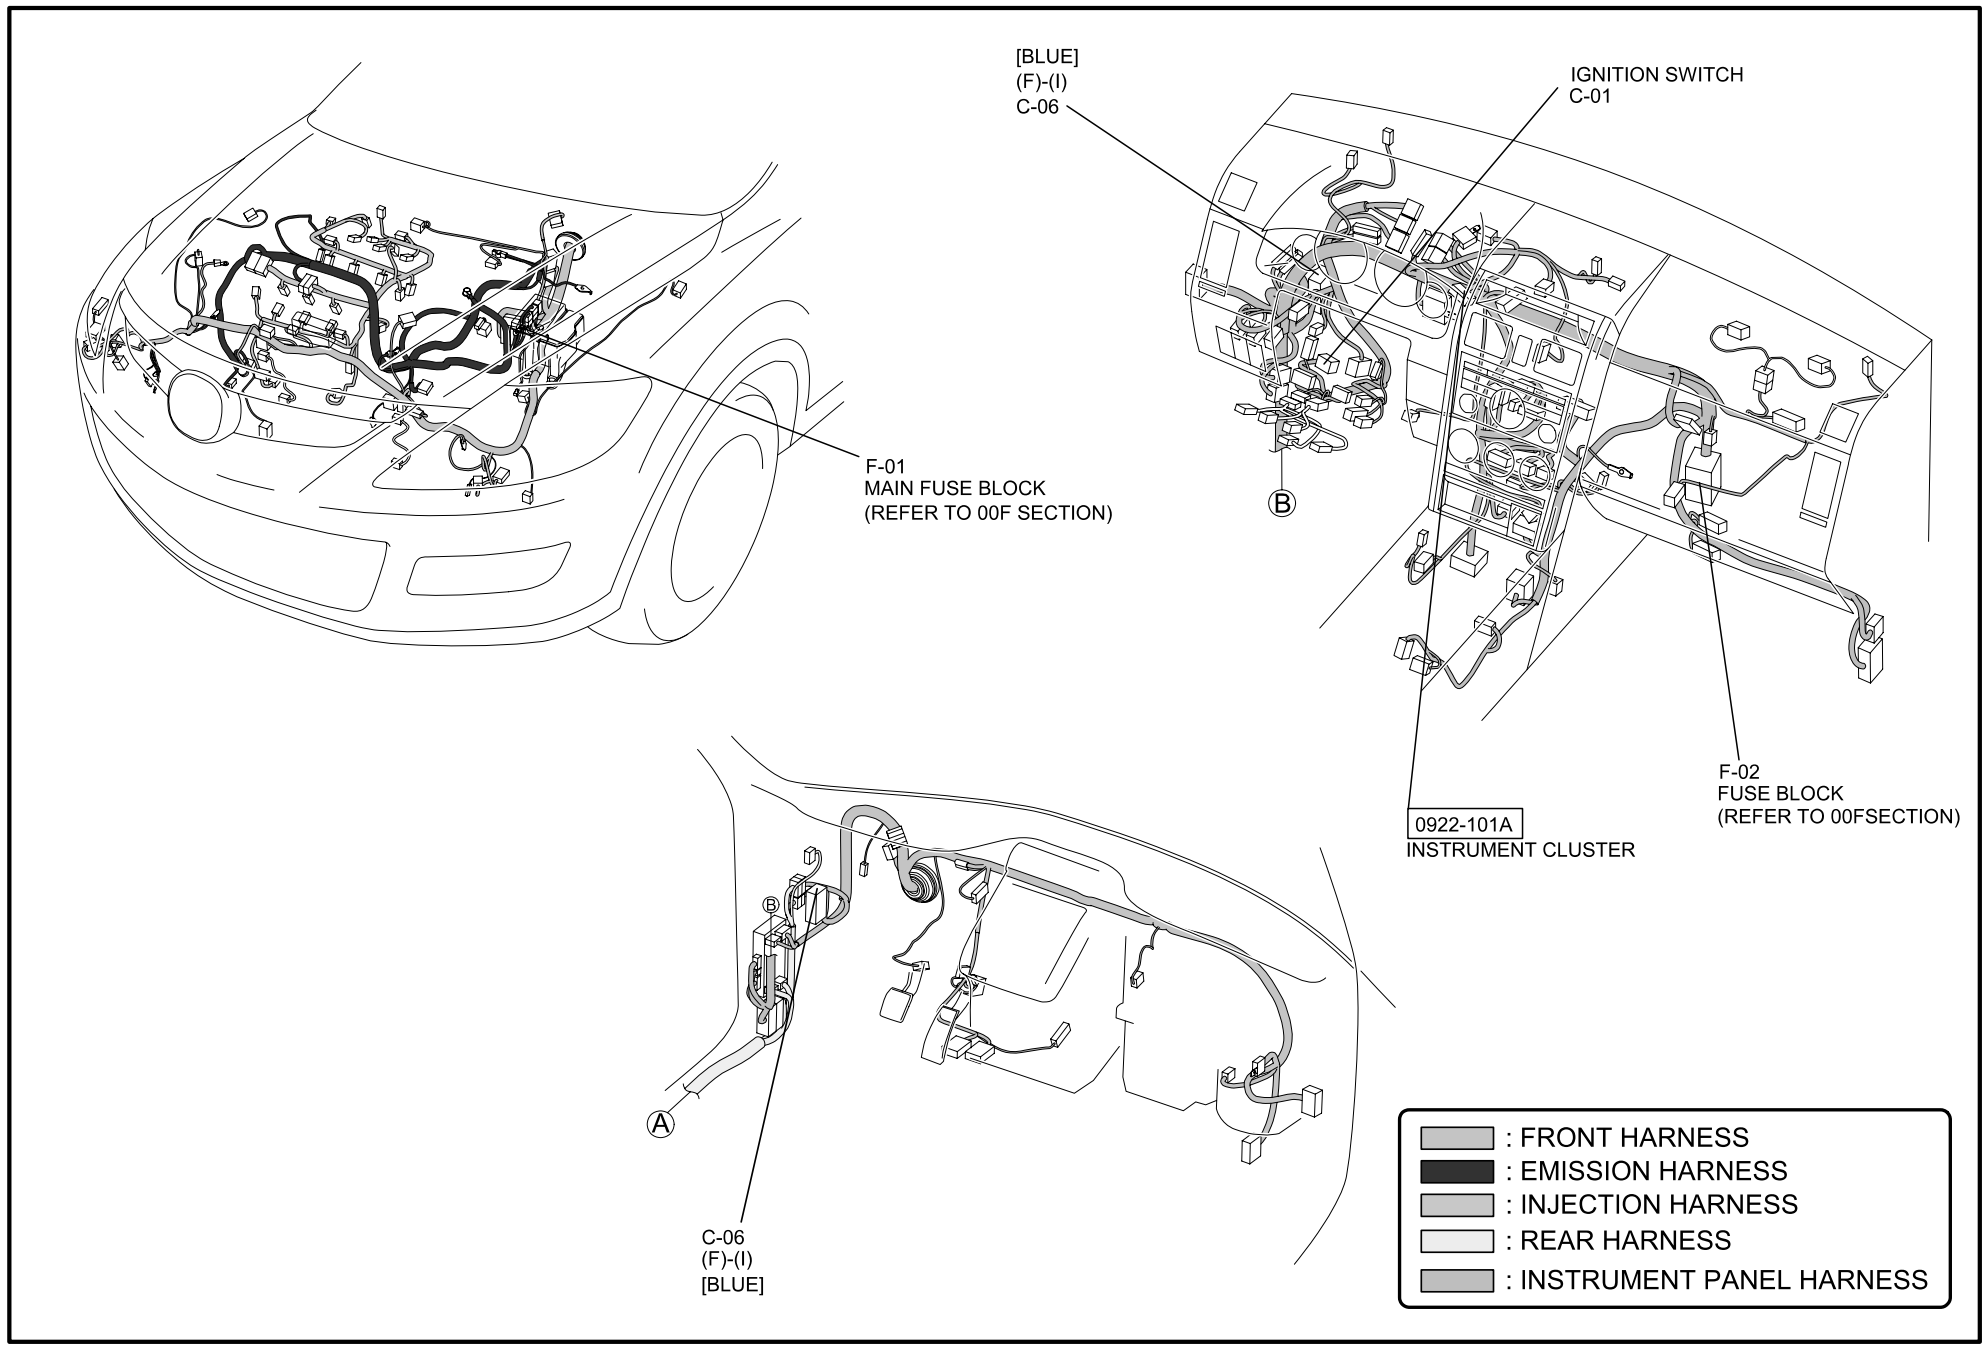

[BLUE]
(F)-(I)
C-06
IGNITION SWITCH
C-01
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
F-02
FUSE BLOCK
(REFER TO 00FSECTION)
0922-101A
INSTRUMENT CLUSTER
B
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

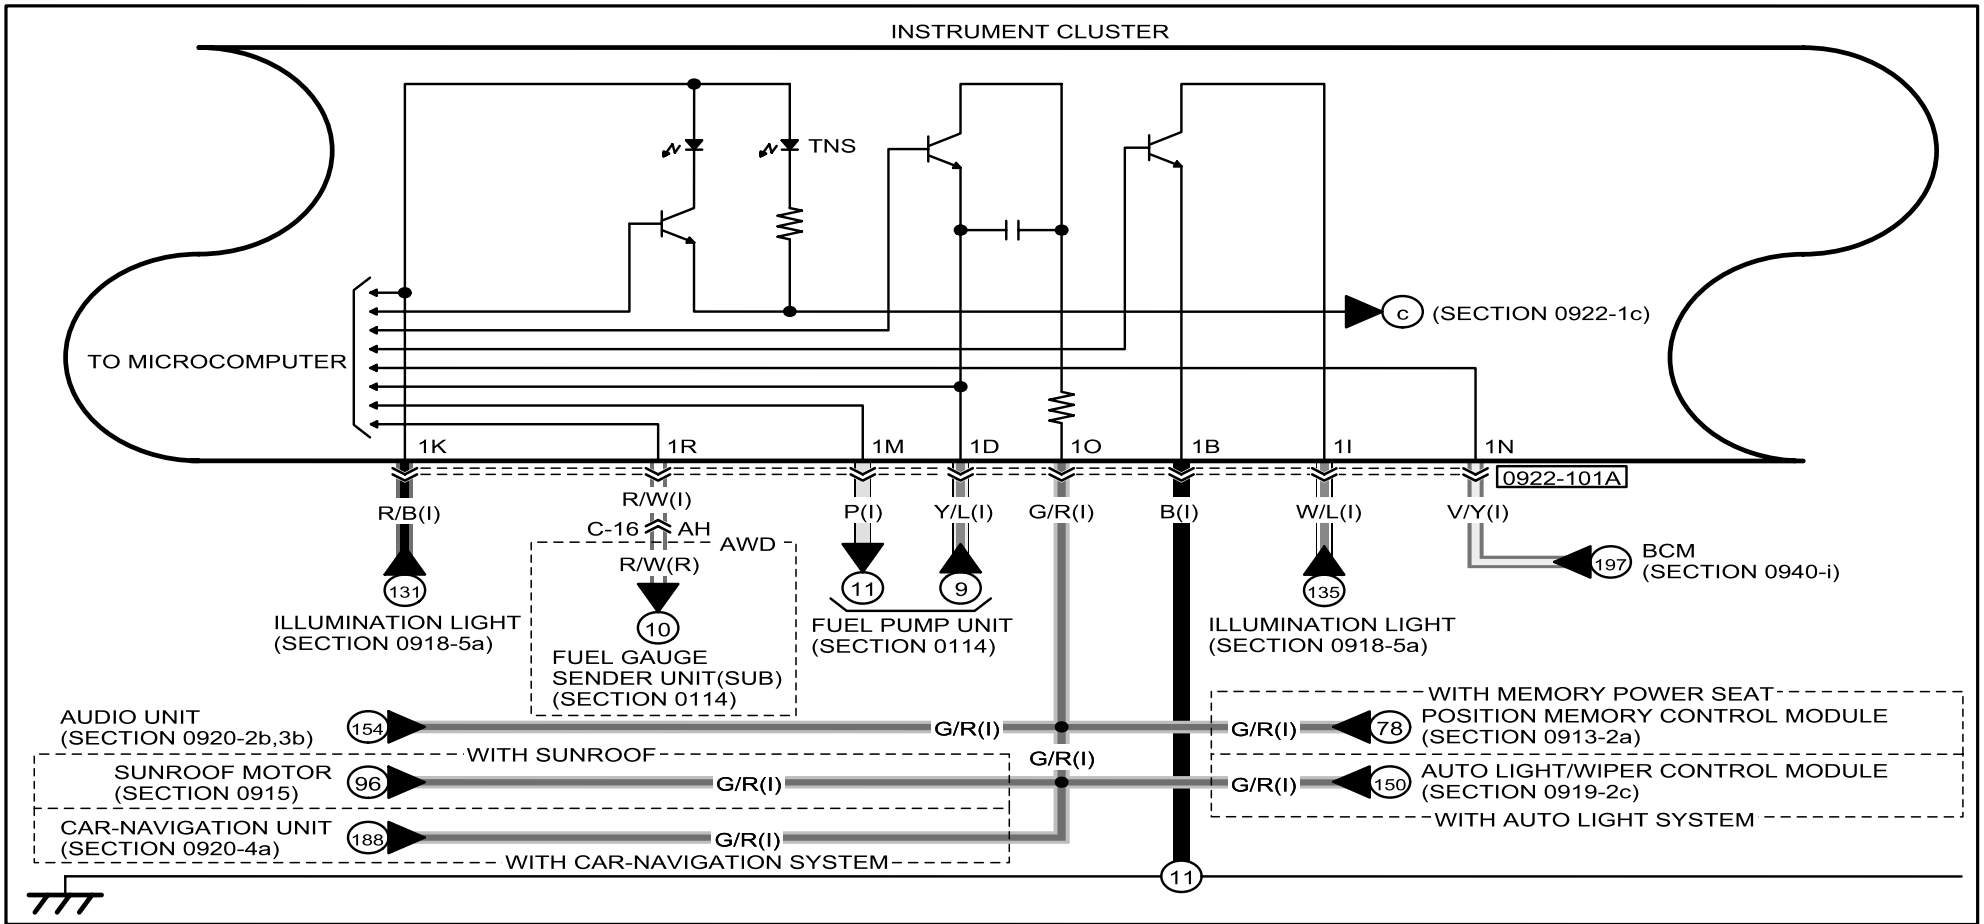


0922-101A
INSTRUMENT CLUSTER

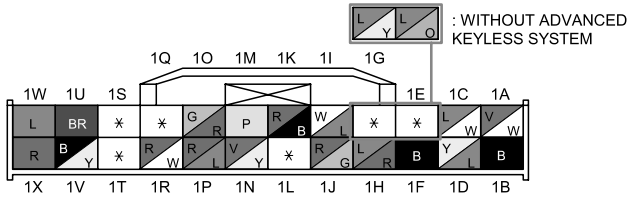


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

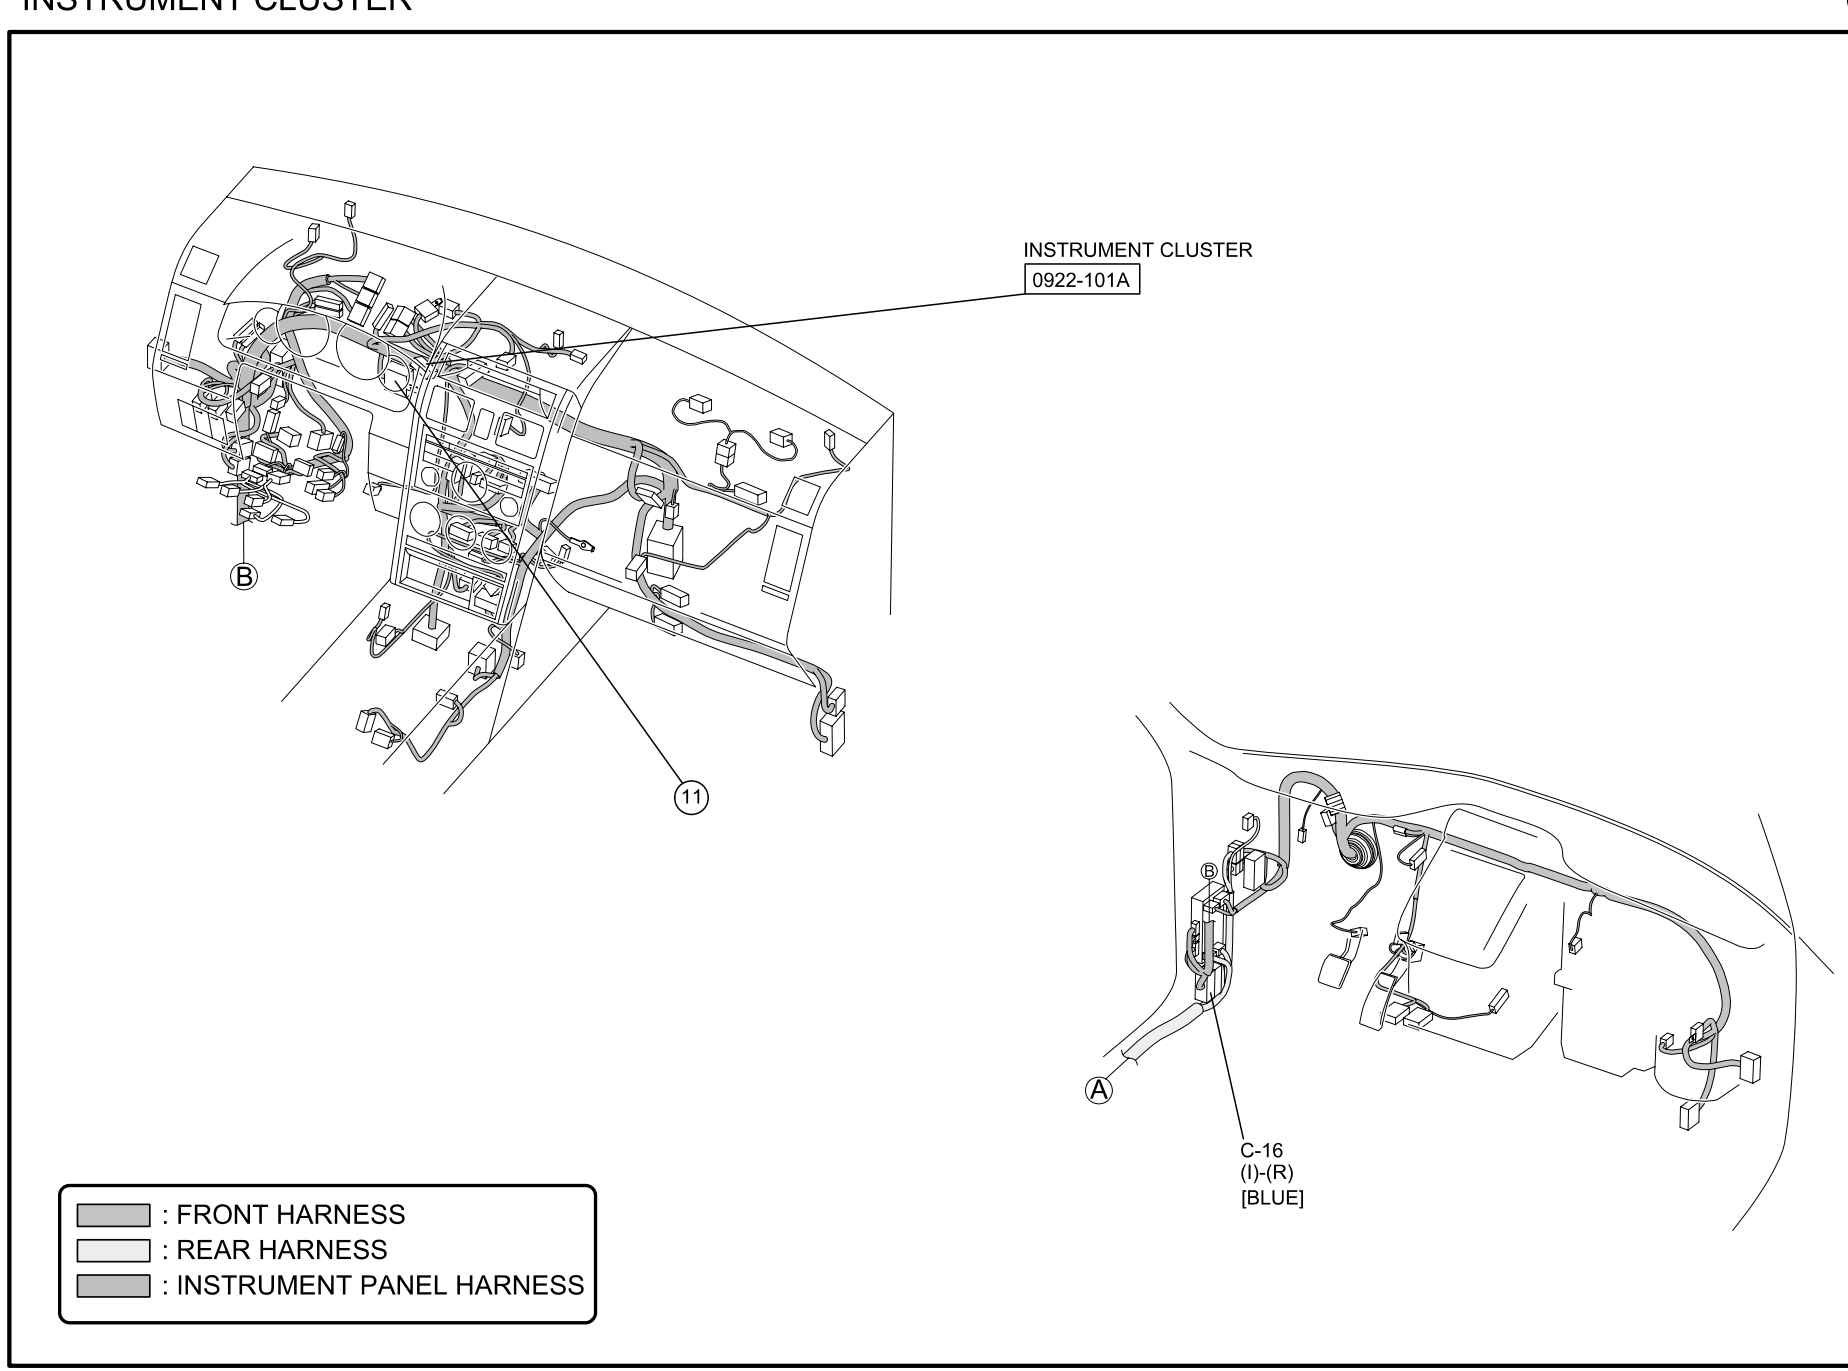

INSTRUMENT CLUSTER
0922-101A
B
11
B
A
C-16
(I)-(R)
[BLUE]
: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

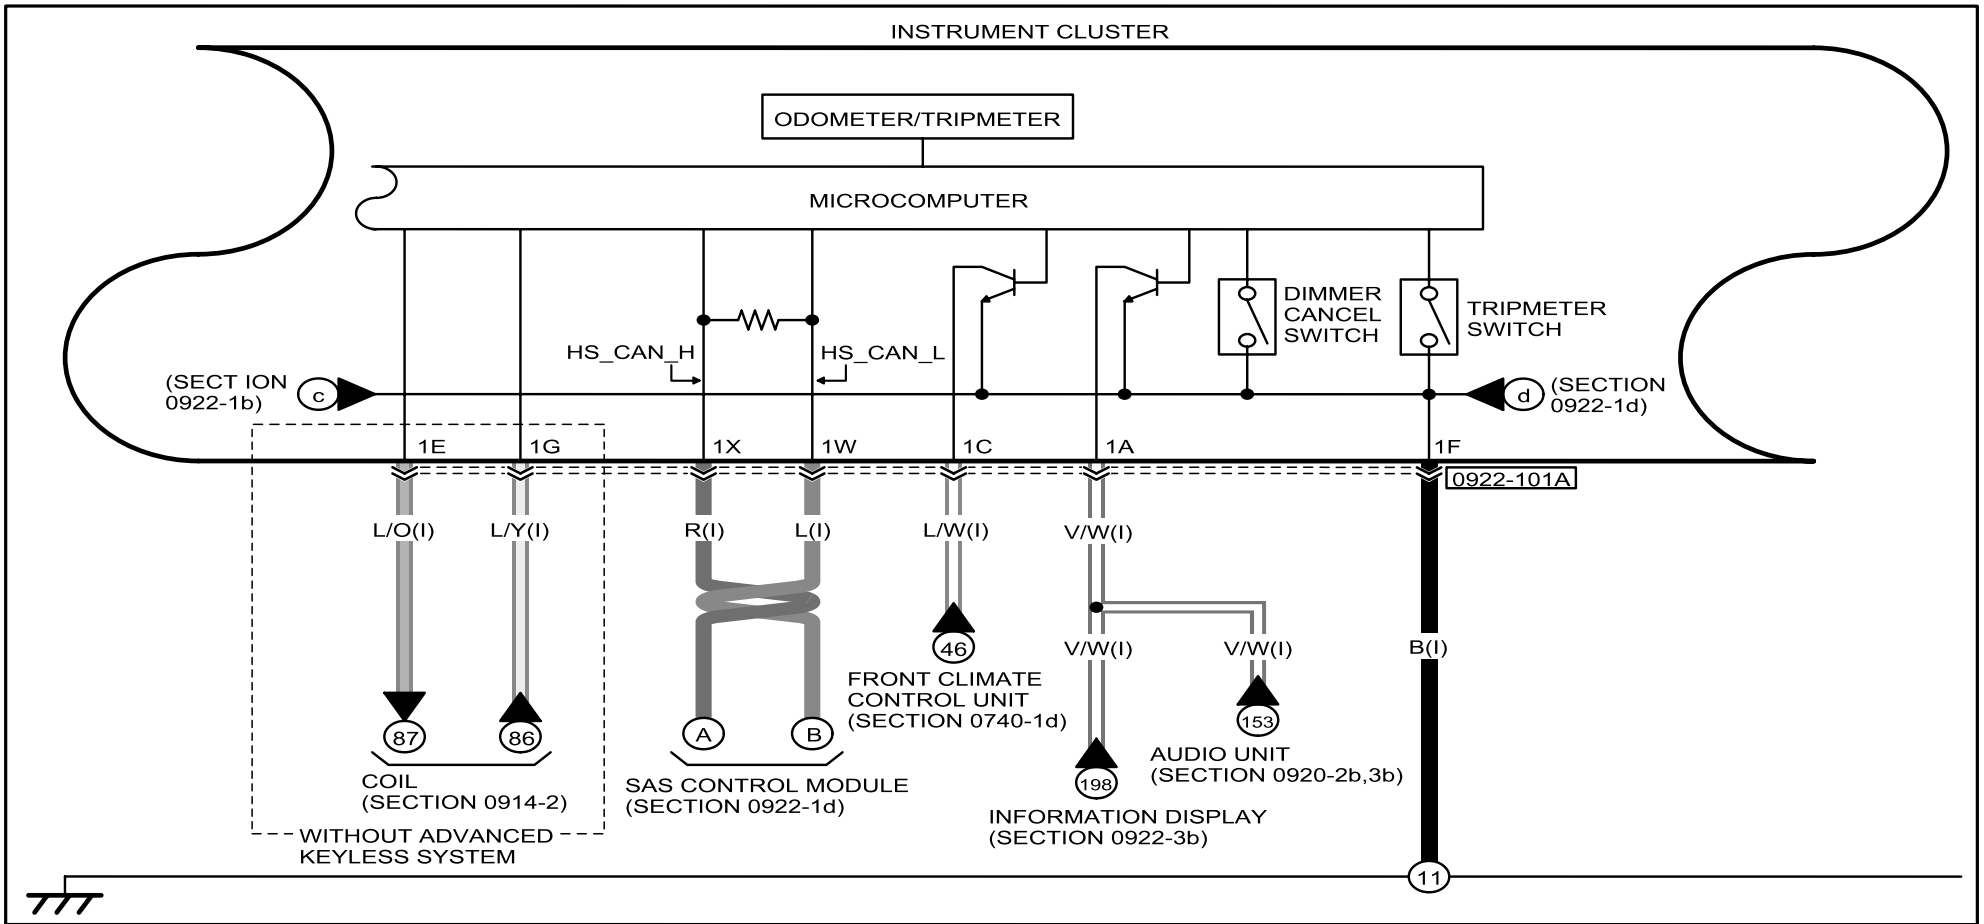


0922-101A
INSTRUMENT CLUSTER

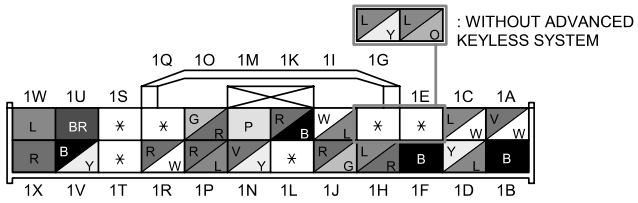



Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

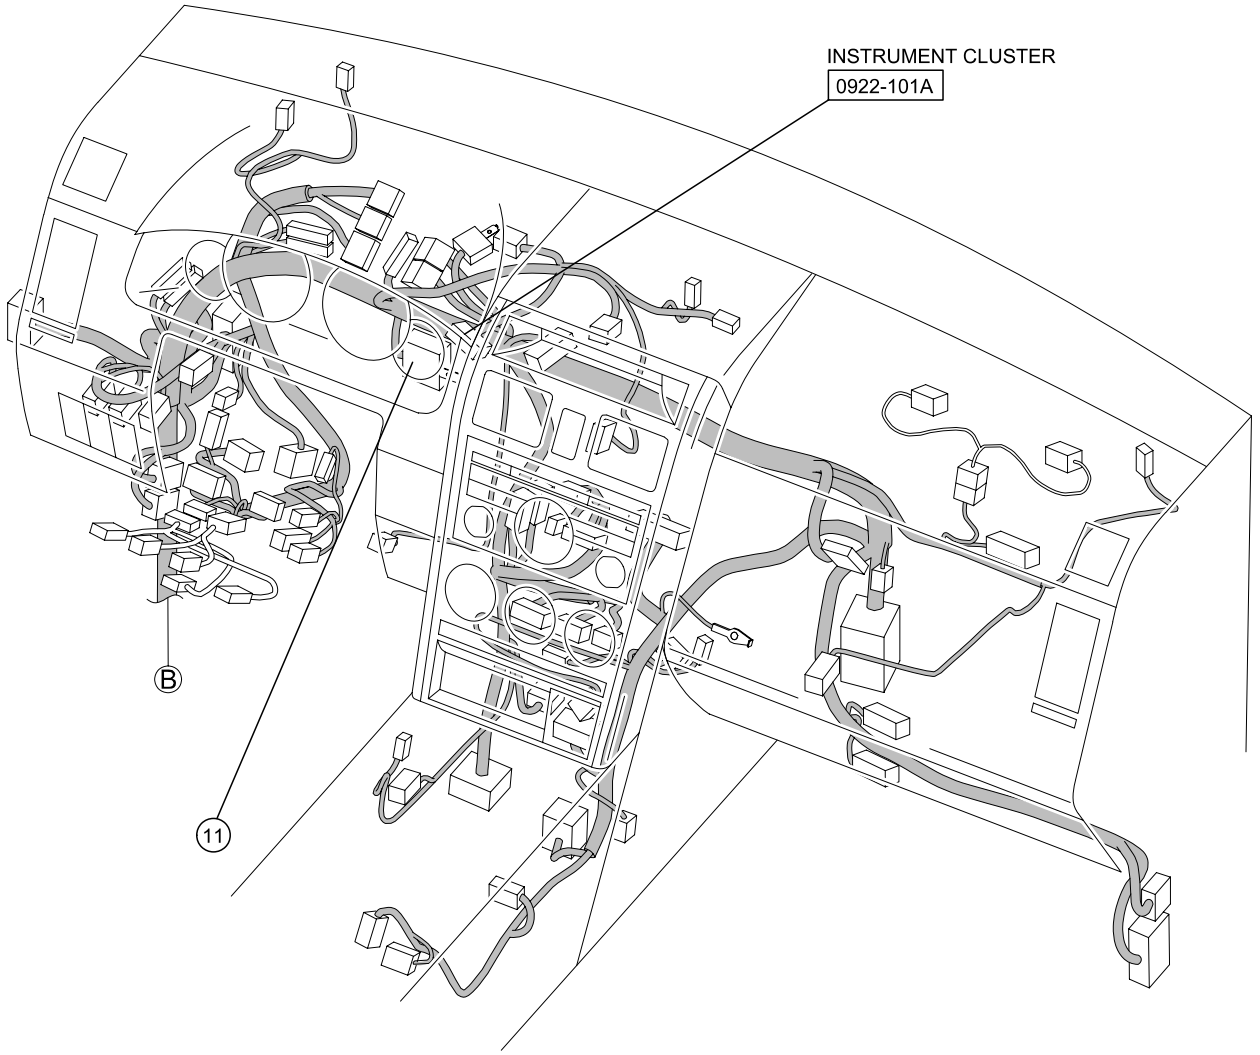
INSTRUMENT CLUSTER
0922-101A
B
11
: INSTRUMENT PANEL HARNESS

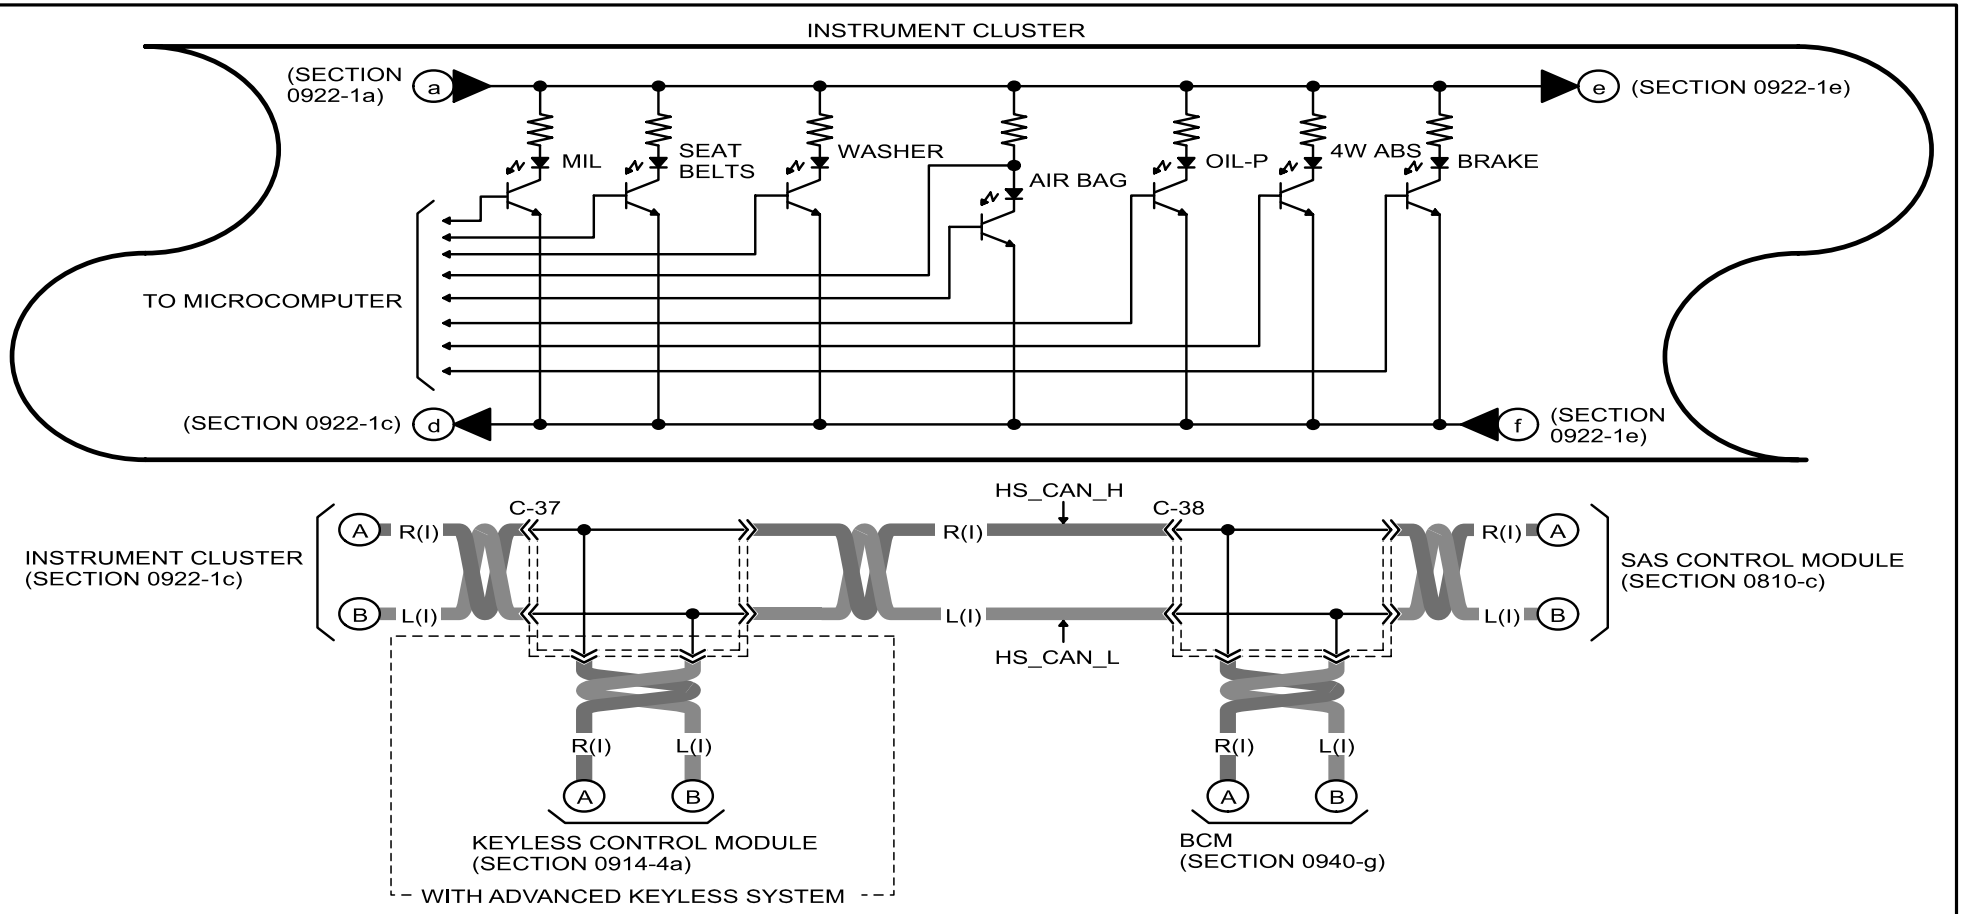


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

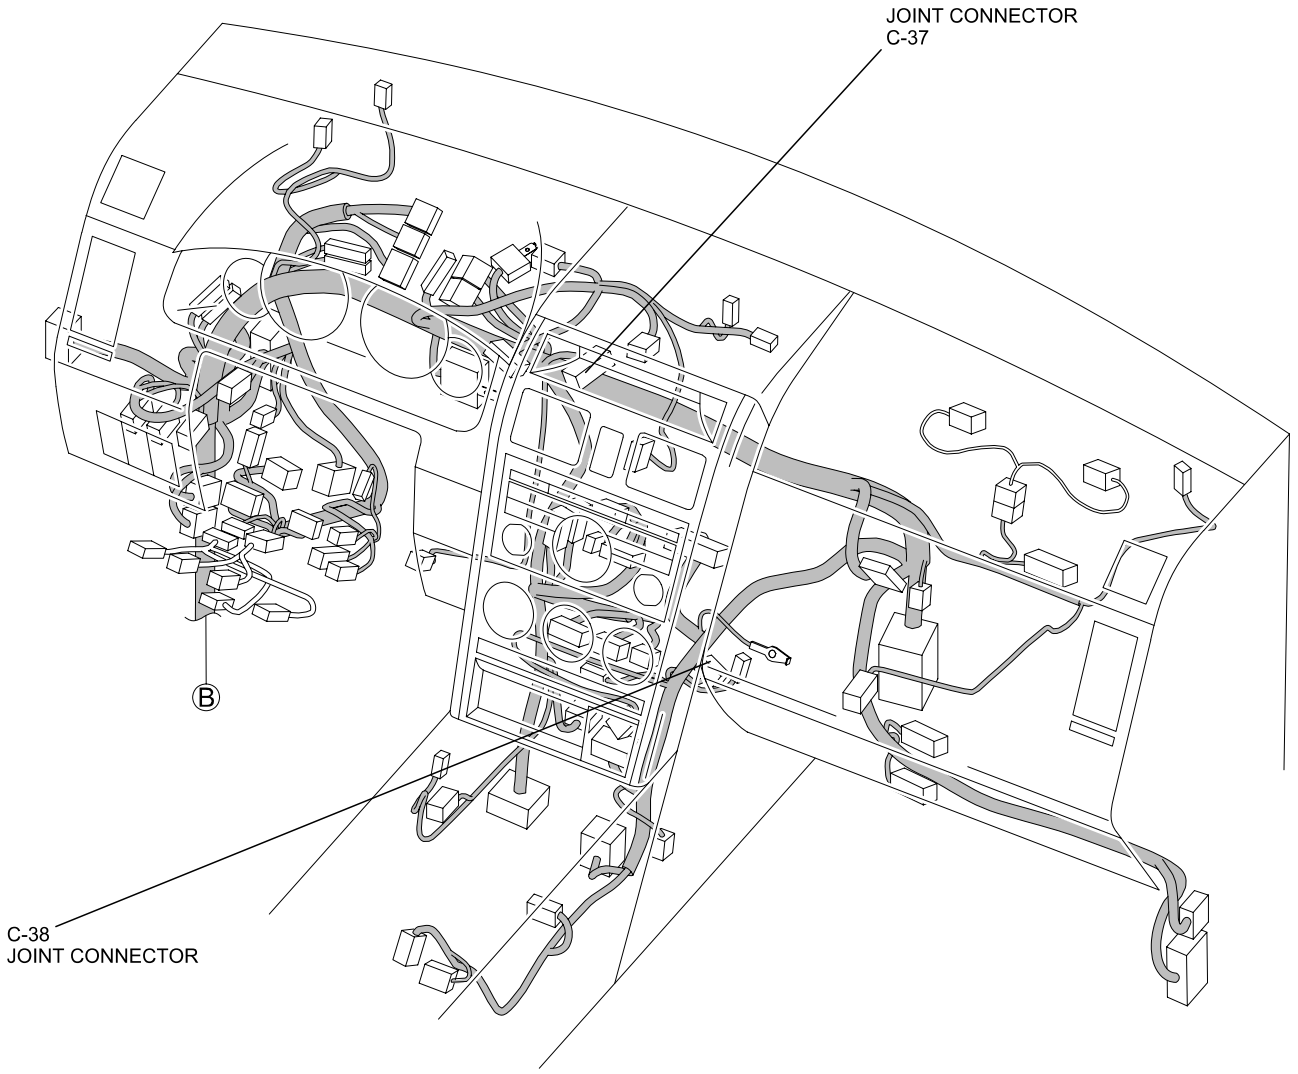

JOINT CONNECTOR
C-37
B
C-38
JOINT CONNECTOR
: INSTRUMENT PANEL HARNESS

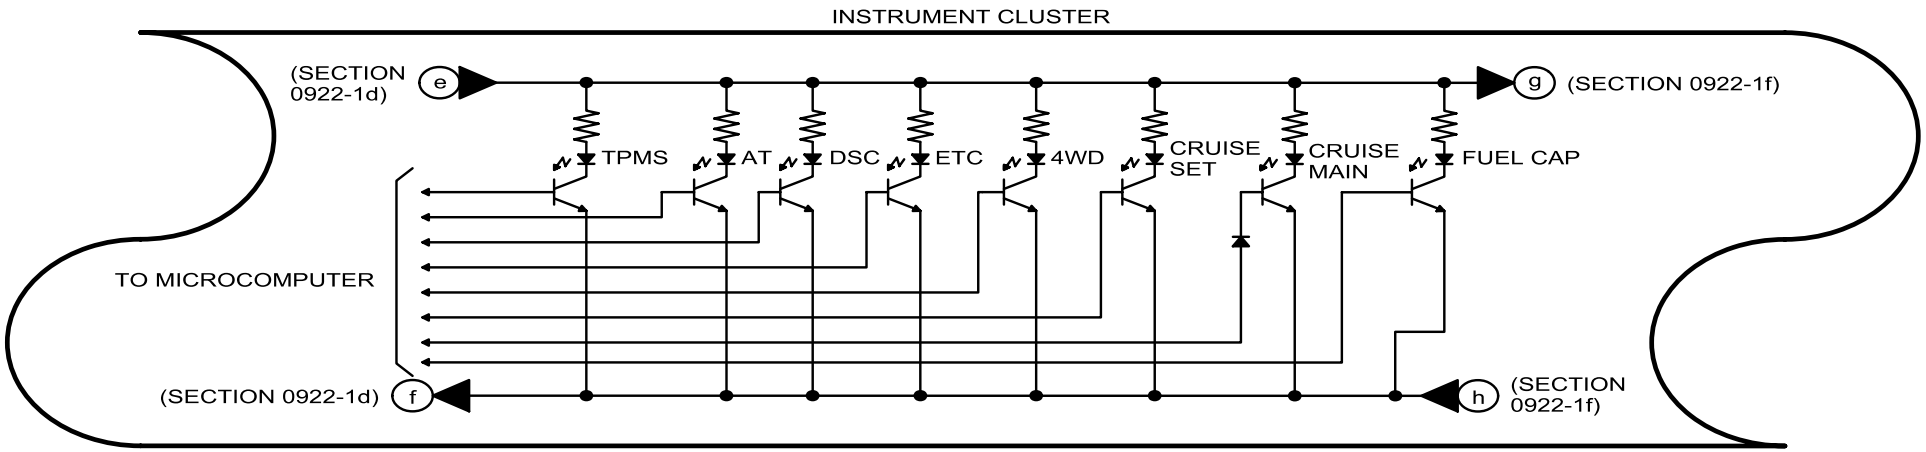


0922-101A
INSTRUMENT CLUSTER

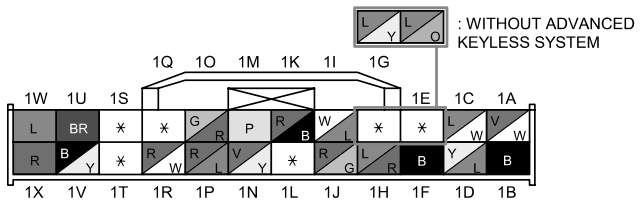


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

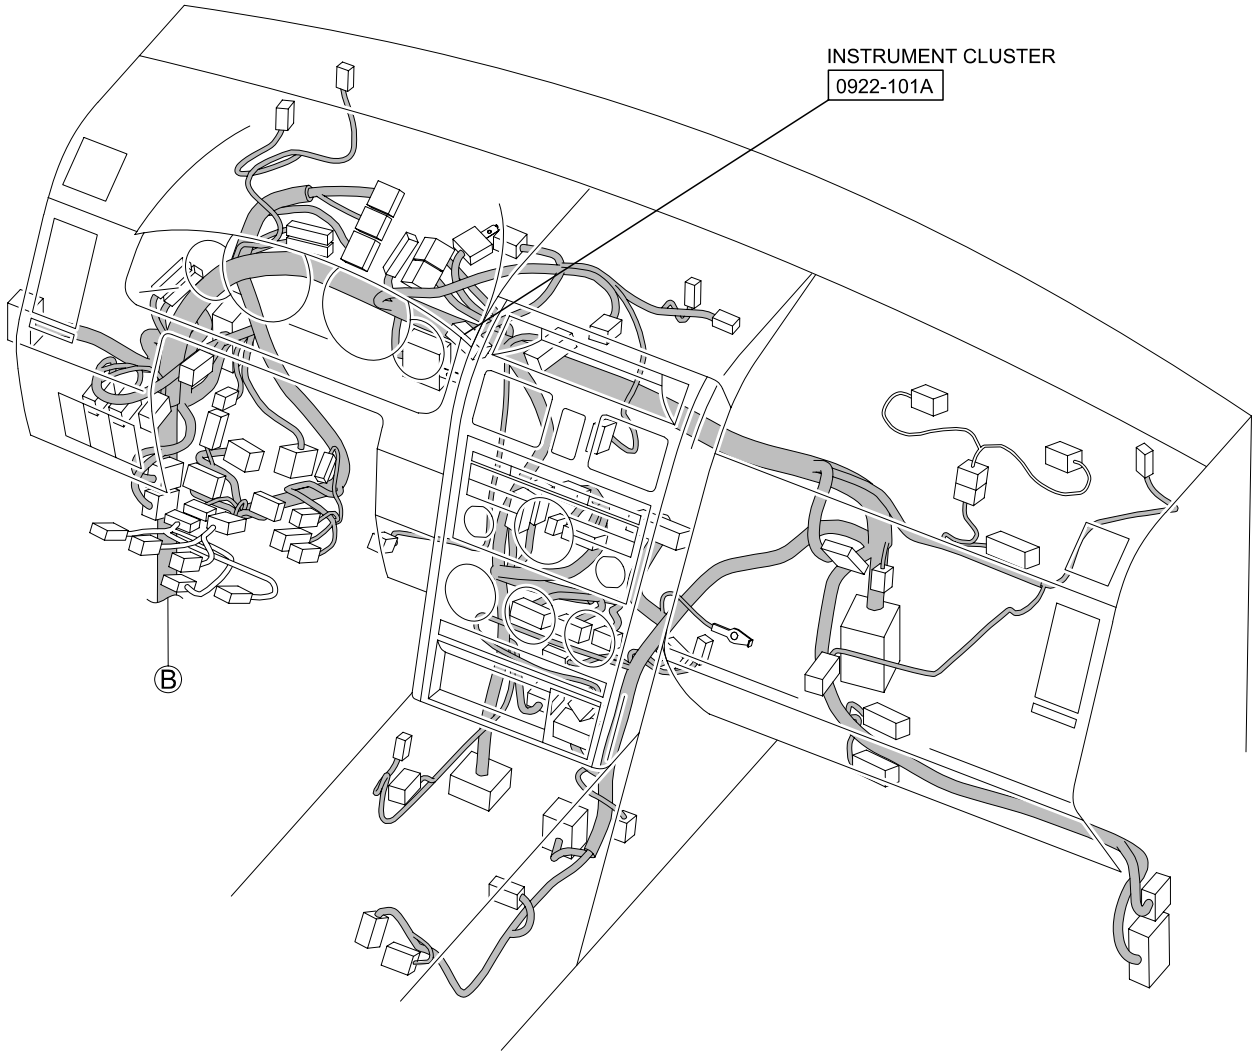

INSTRUMENT CLUSTER
0922-101A
B
: INSTRUMENT PANEL HARNESS

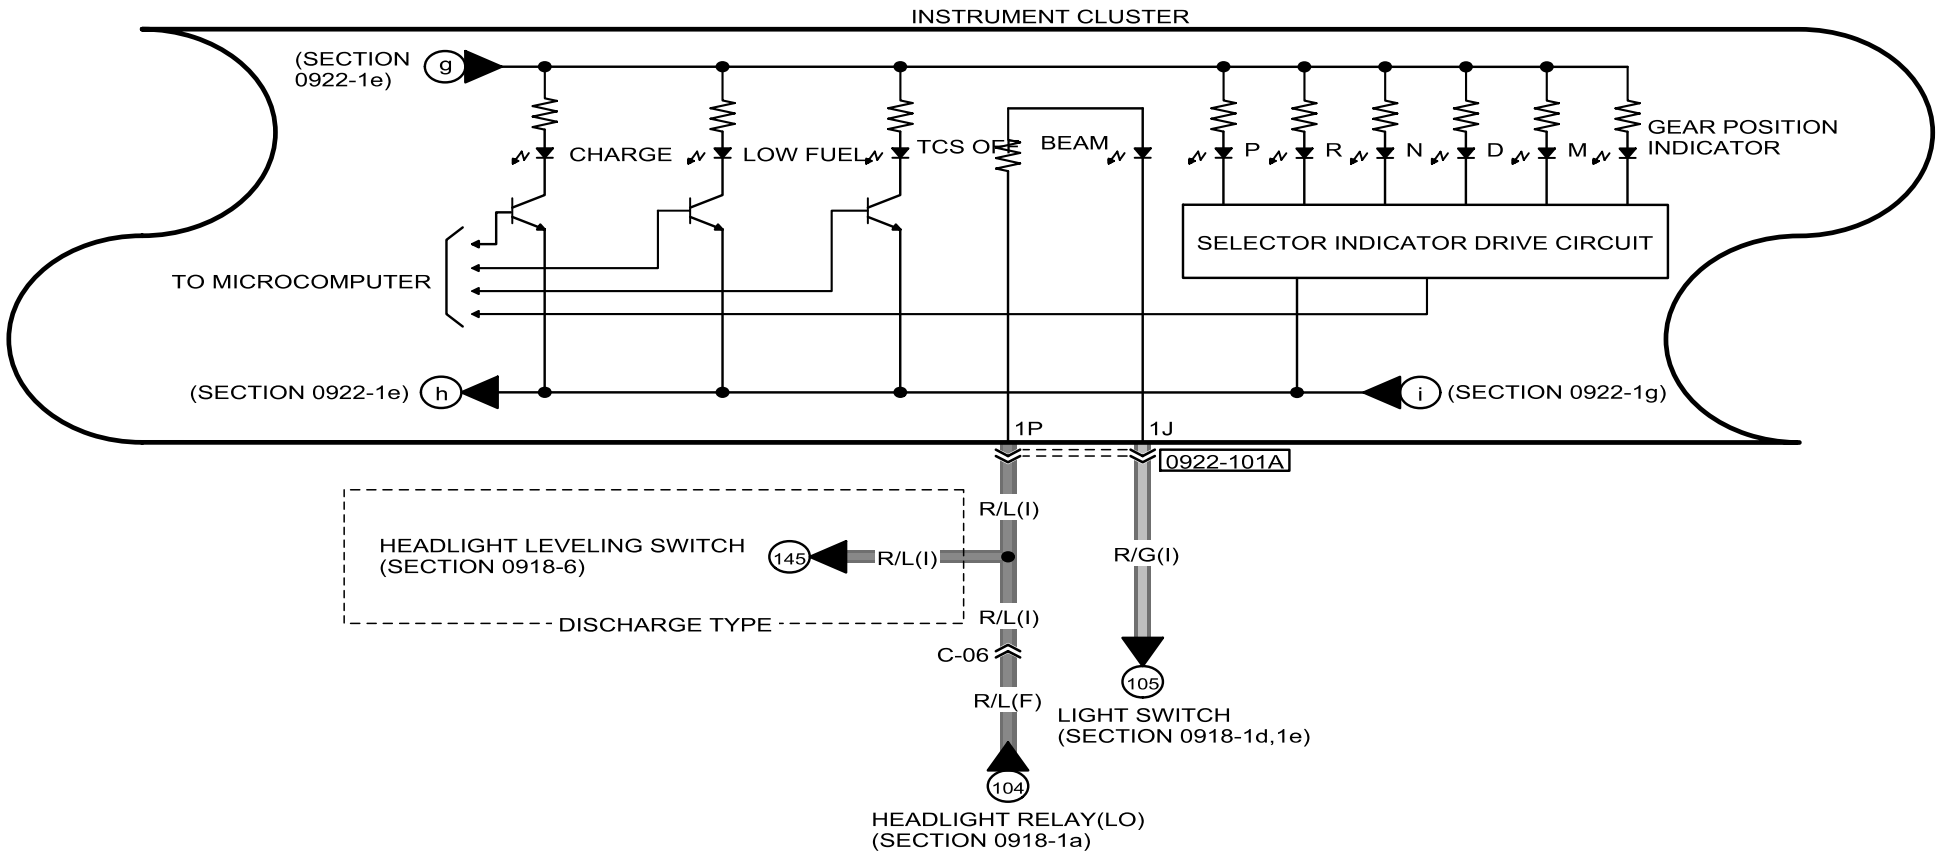


0922-101A
INSTRUMENT CLUSTER

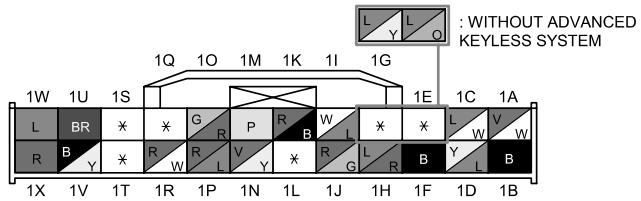


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

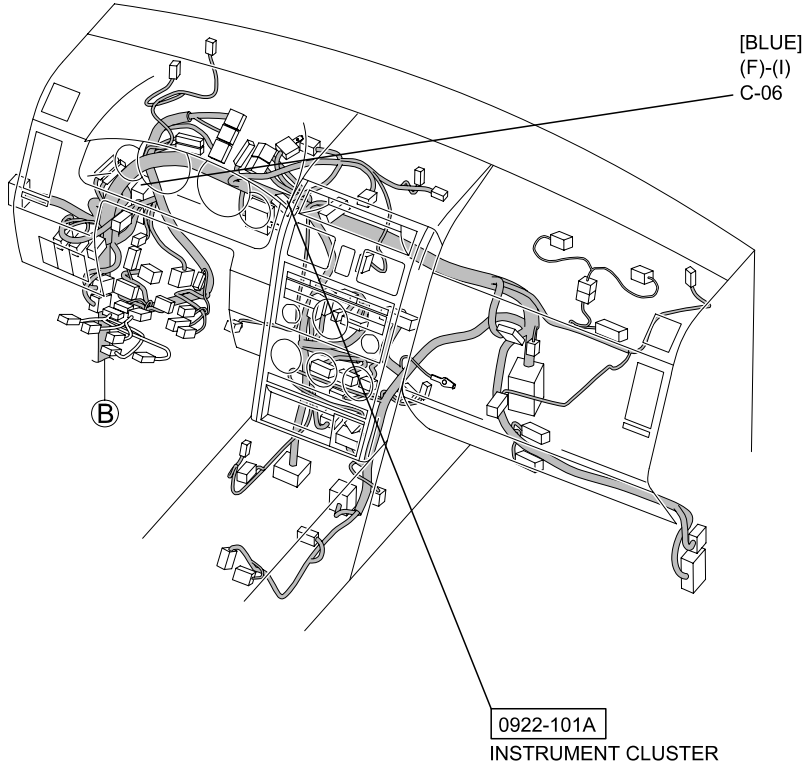


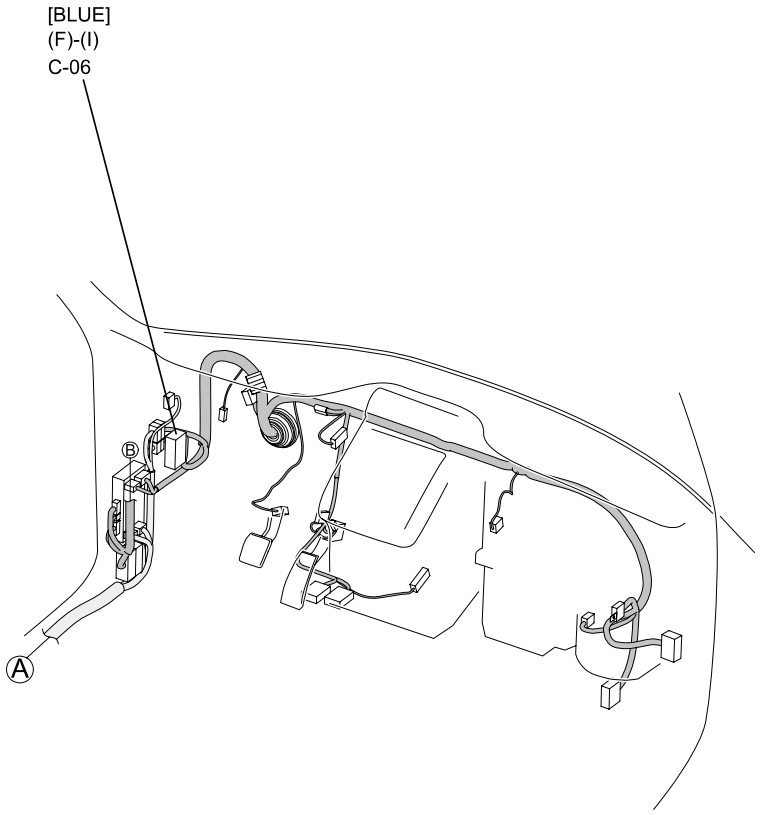


: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

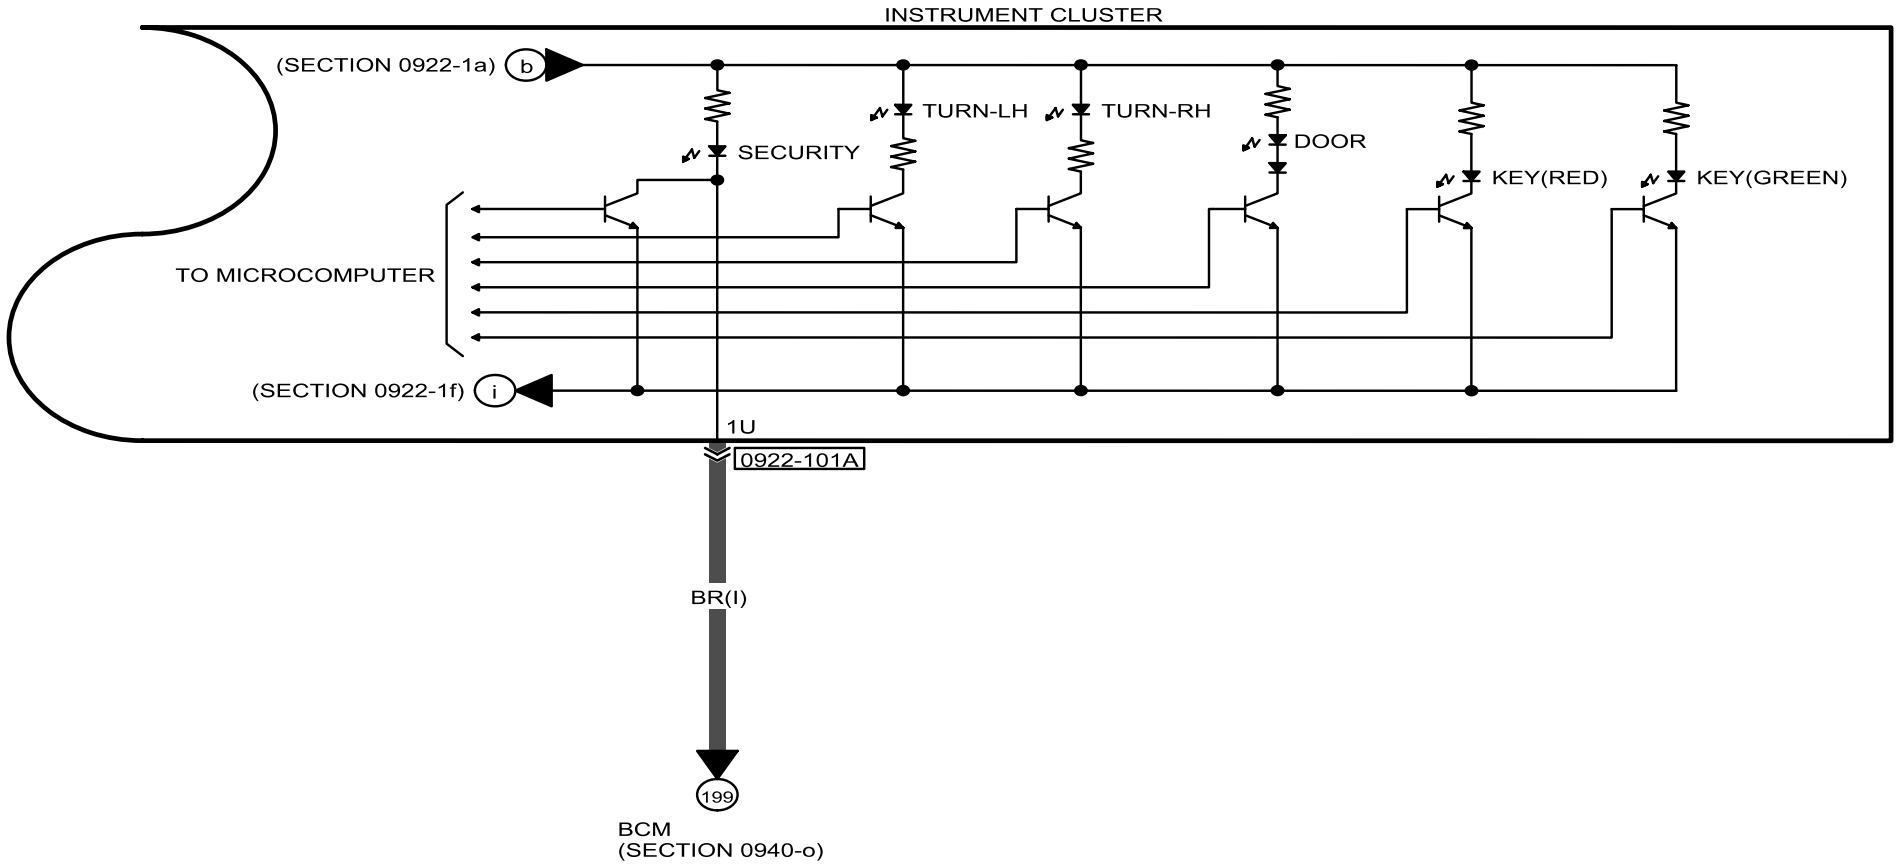


0922-101A
INSTRUMENT CLUSTER

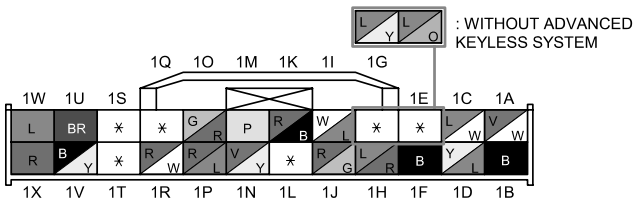


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

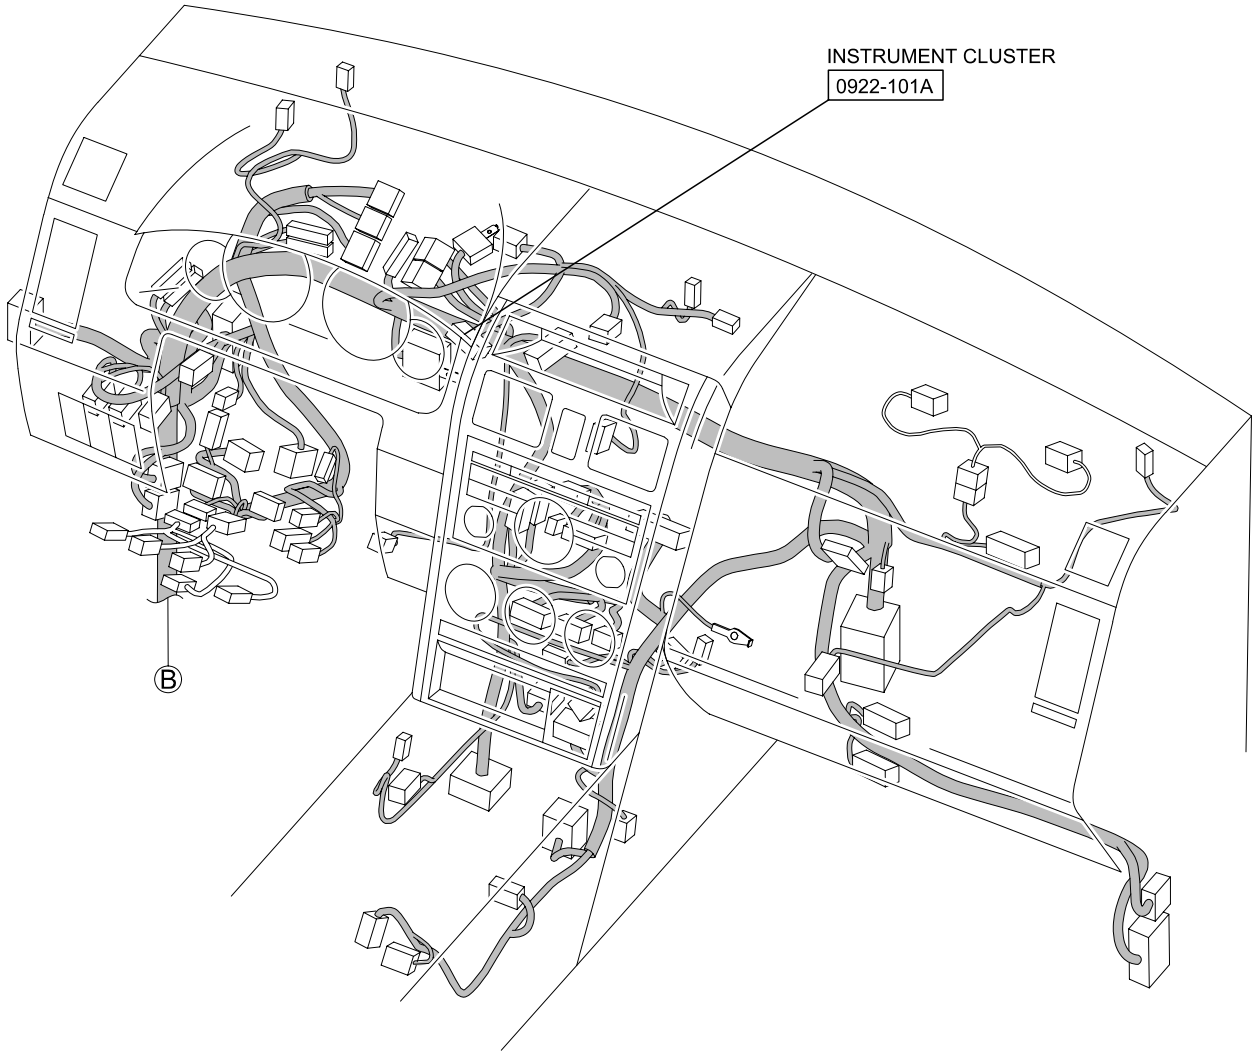
INSTRUMENT CLUSTER
0922-101A
B
: INSTRUMENT PANEL HARNESS

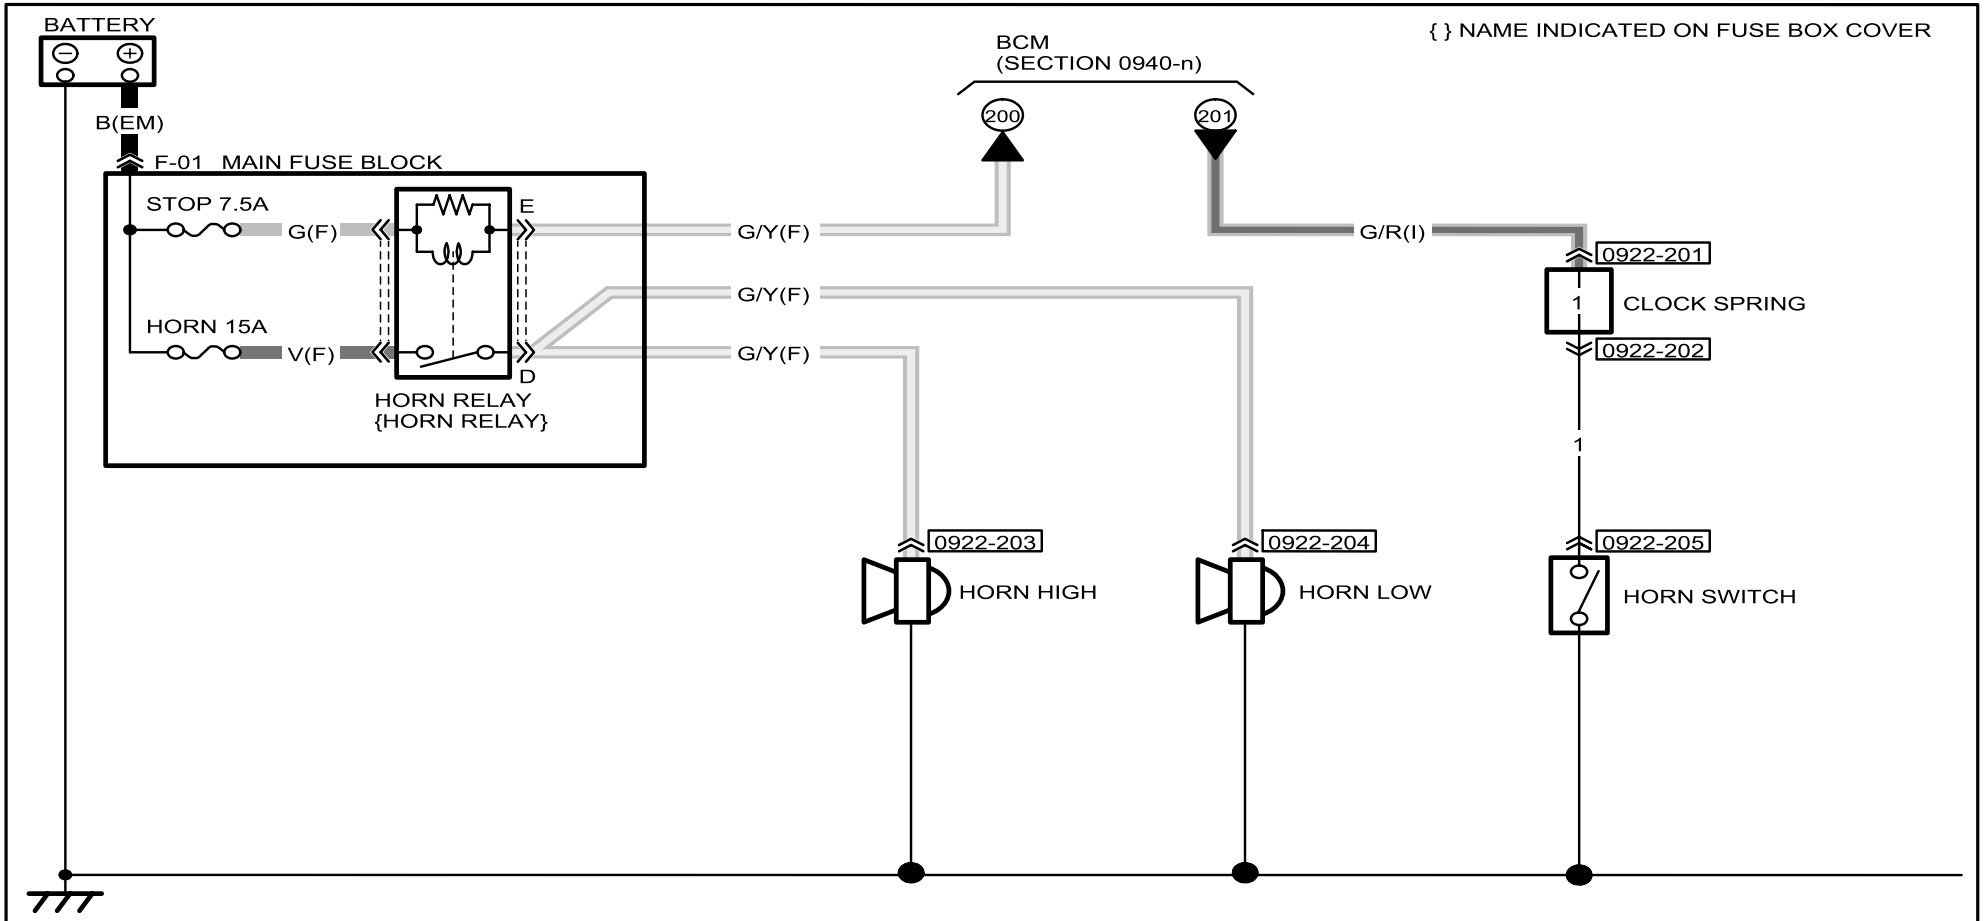

0922-201	0922-202	0922-203	0922-204	0922-205
CLOCK SPRING	CRUISE CONTROL SWITCH / AUDIO CONTROL SWITCH / AUDIO CONTROL SWITCH ILLUMINATION/ CRUISE CONTROL SWITCH ILLUMINATION / CLOCK SPRING	HORN HIGH	HORN LOW	HORN SWITCH
W R GY B * W L R B V V W G R LG R : WITH CAR-NAVIGATION SYSTEM, WITH HANDS-FREE TELEPHONE UNIT	8 7 * 5 4 3 2 1 6 : WITH HANDS-FREE TELEPHONE UNIT TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.	G Y	G Y	* 1 TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

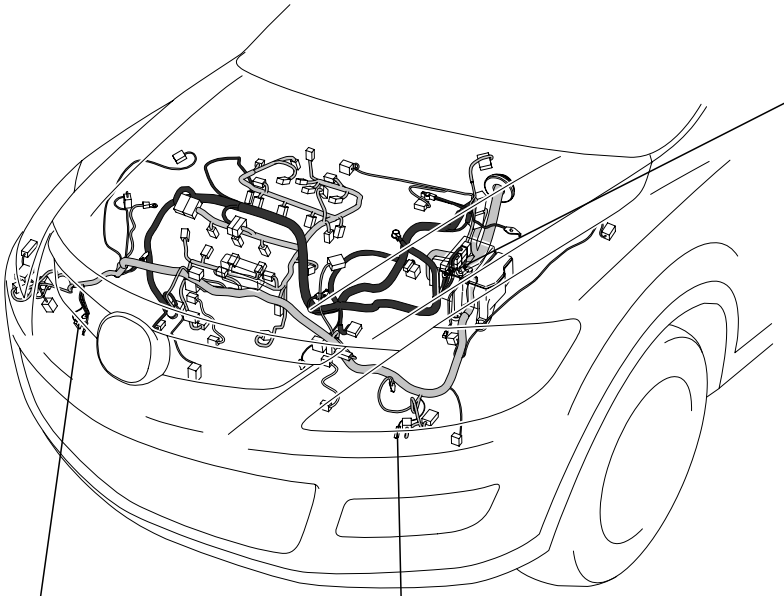


F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

HORN RELAY
When energized, directs voltage and current to the horns.

HORN SWITCH
When pushed, provides ground to coil of horn relay.

HORN SWITCH
0922-205

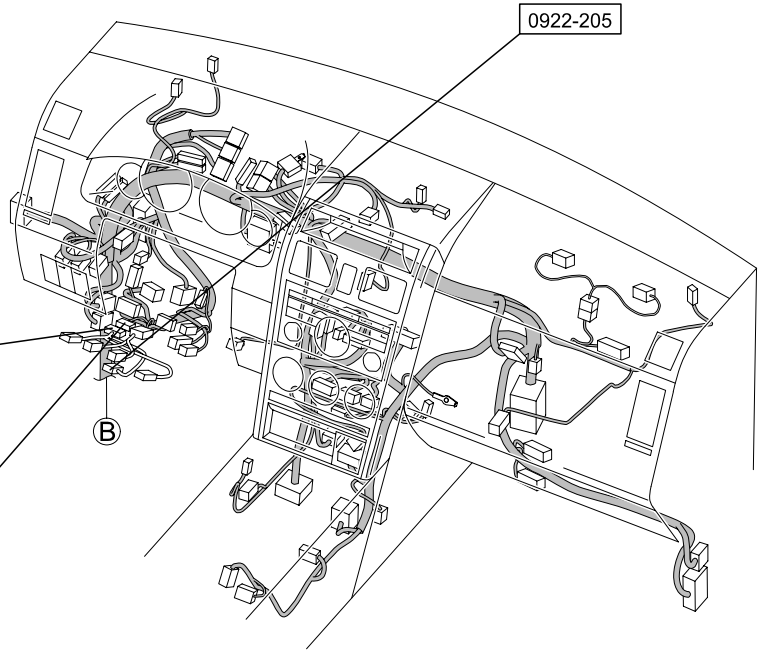

0922-204
HORN LOW
[BLACK]


0922-203
HORN HIGH
[BLACK]

0922-202
CRUISE CONTROL SWITCH /
AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
CLOCK SPRING


: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: INSTRUMENT PANEL HARNESS

0922-201
CLOCK SPRING


CLOCK SPRING
Electrically connects steering wheel and air bag to body harness.

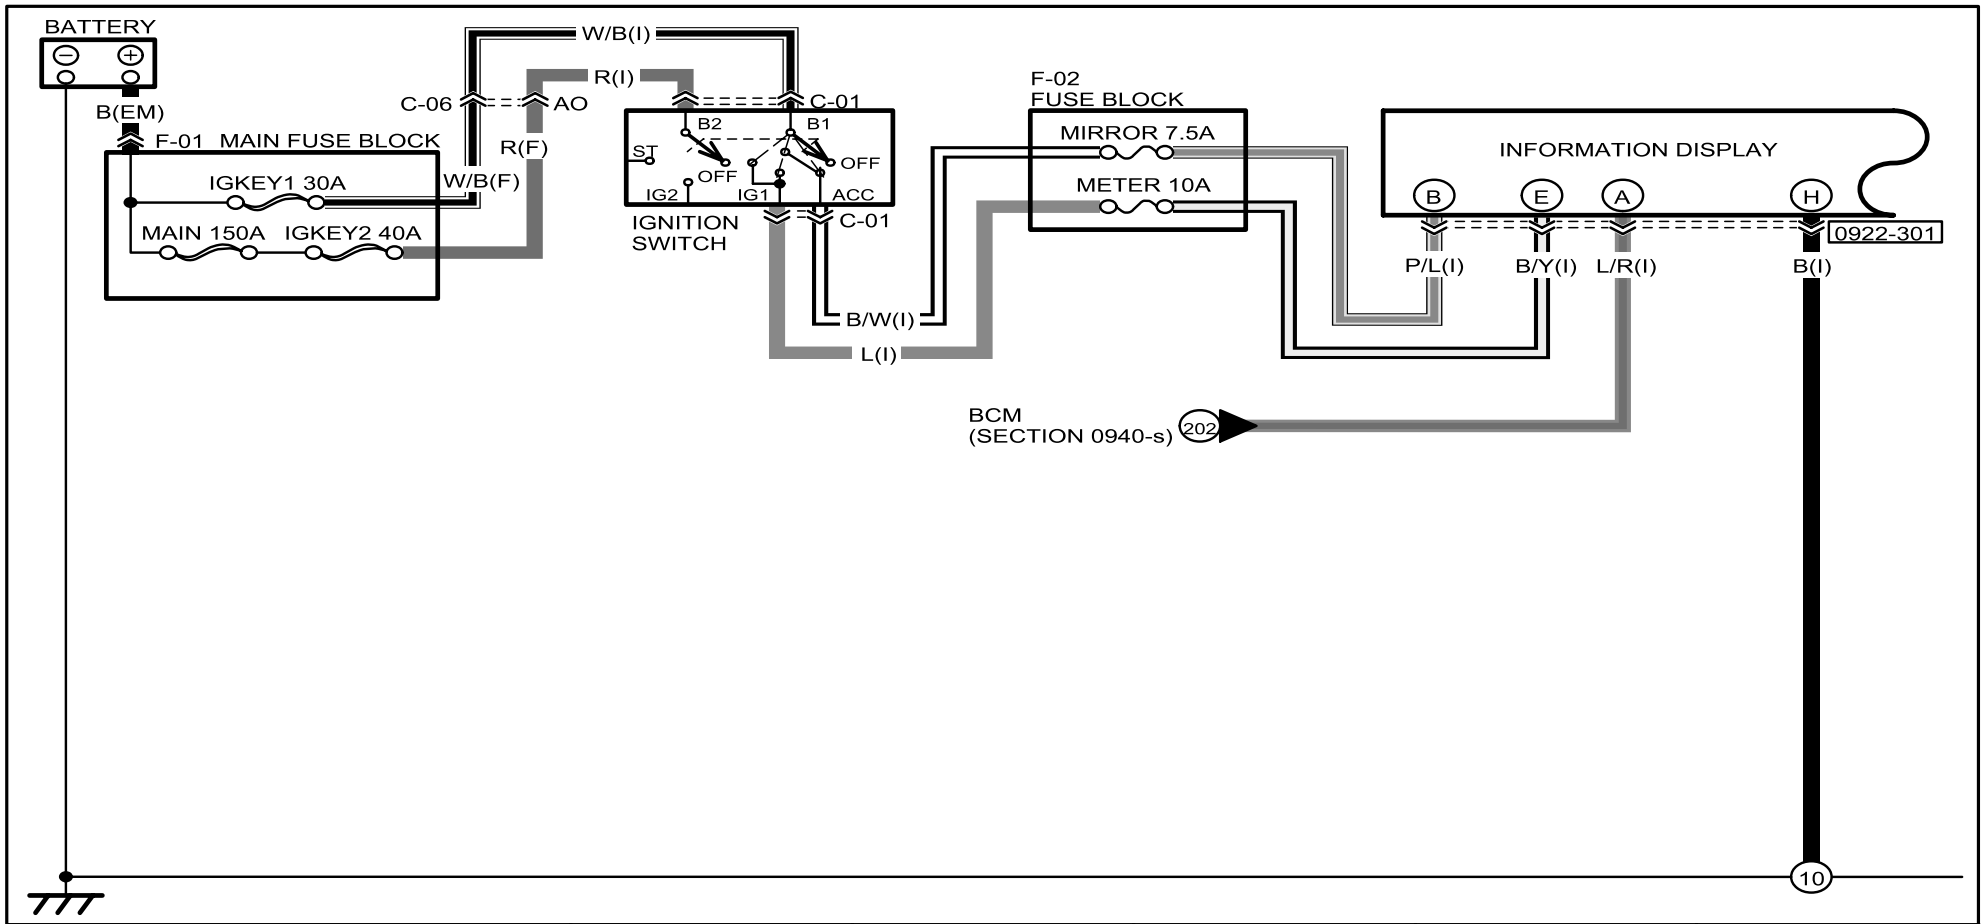


0922-301
INFORMATION DISPLAY

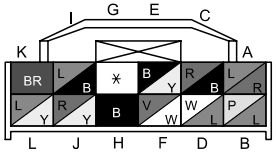


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

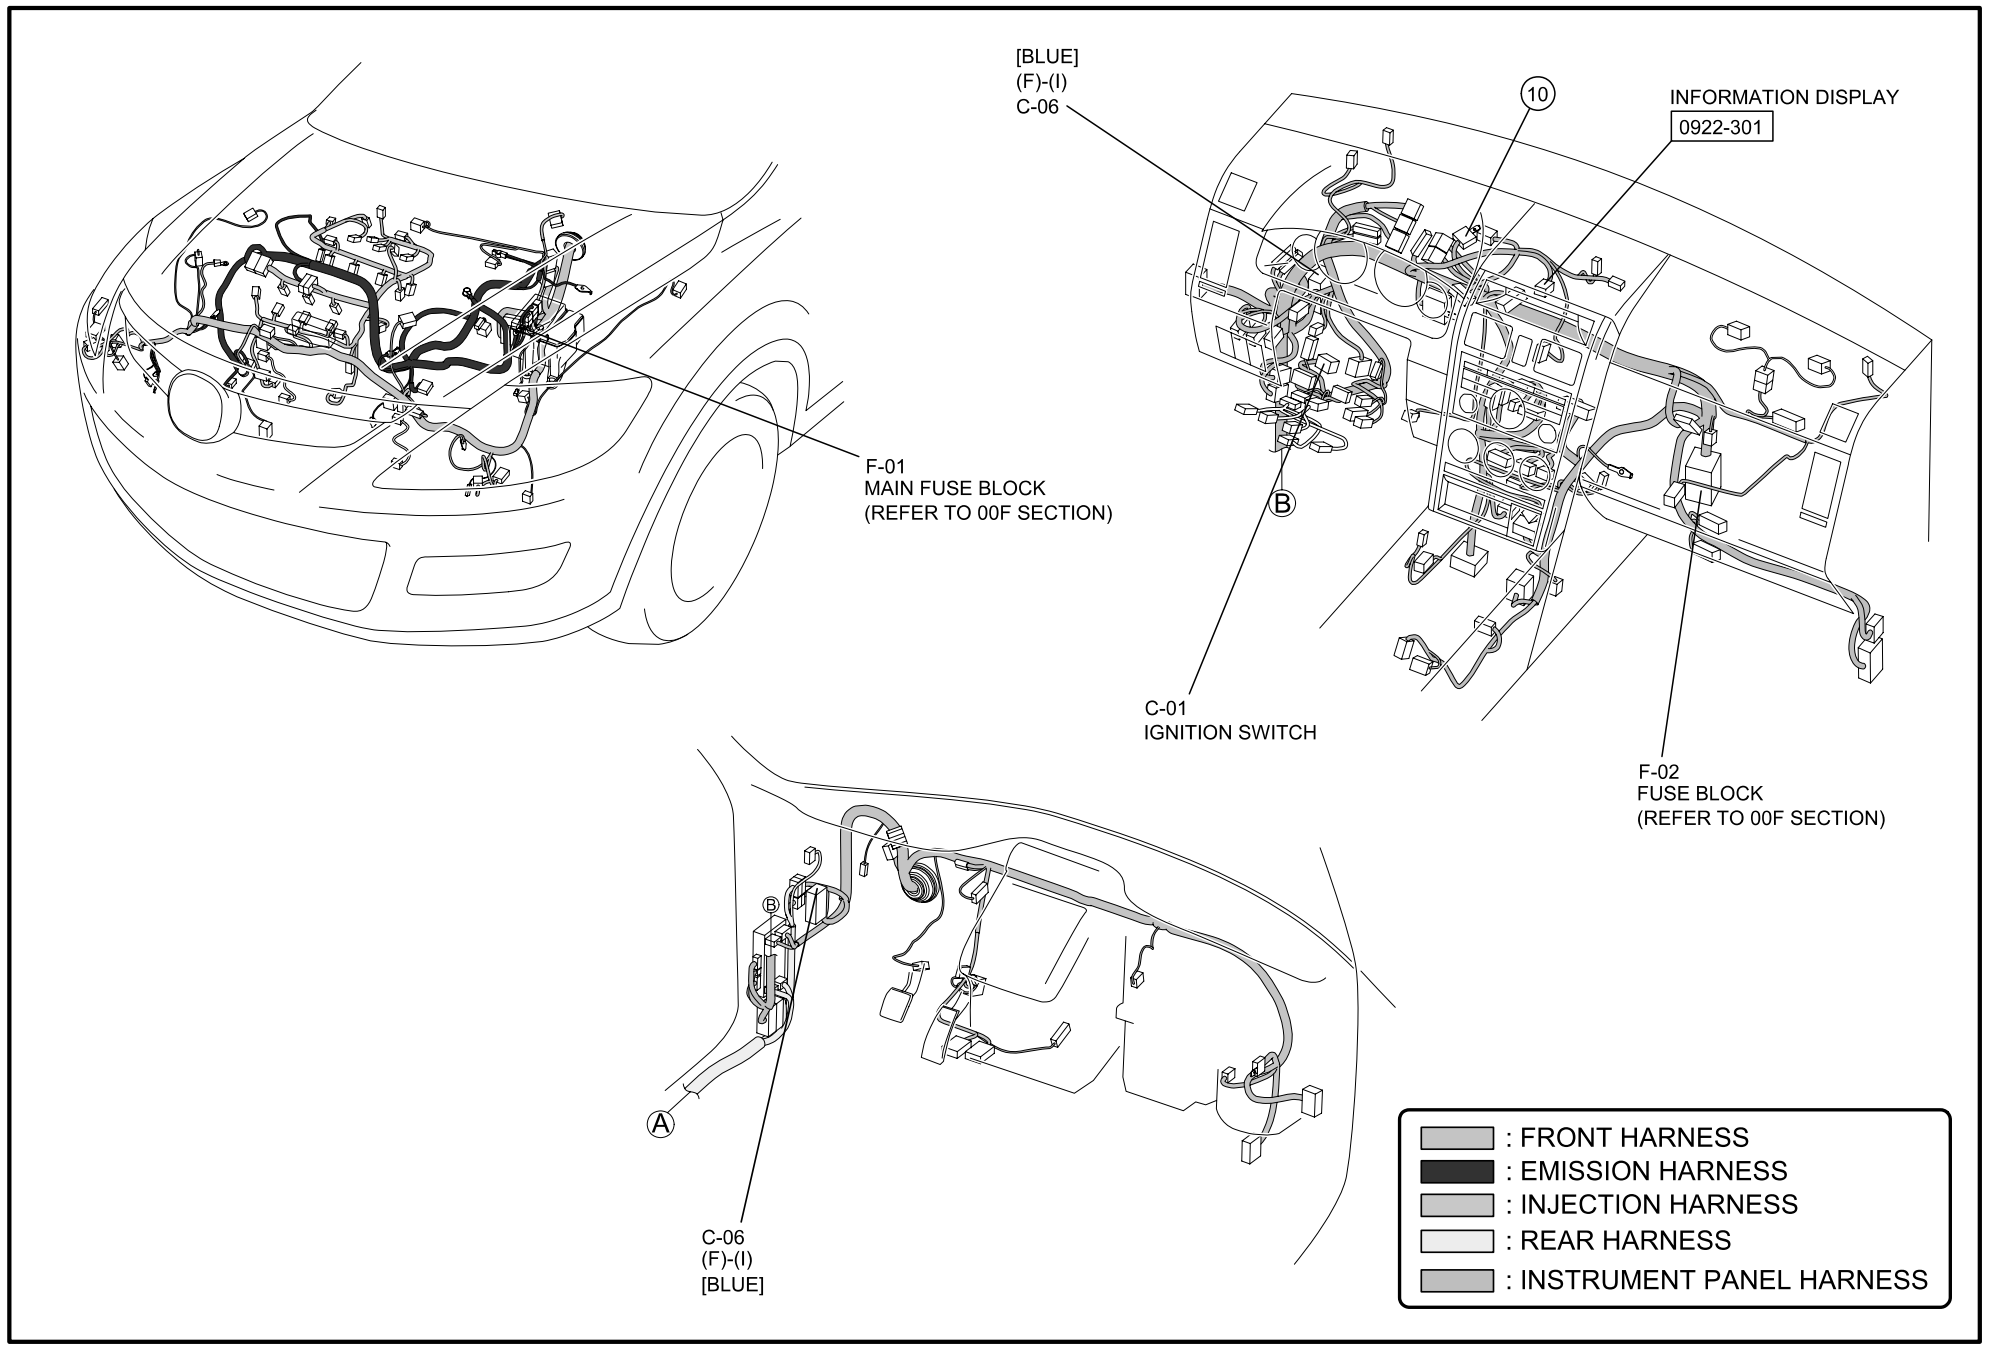

[BLUE]
(F)-(I)
C-06
10
INFORMATION DISPLAY
0922-301
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
C-01
IGNITION SWITCH
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
B
A
C-06
(F)-(I)
[BLUE]
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

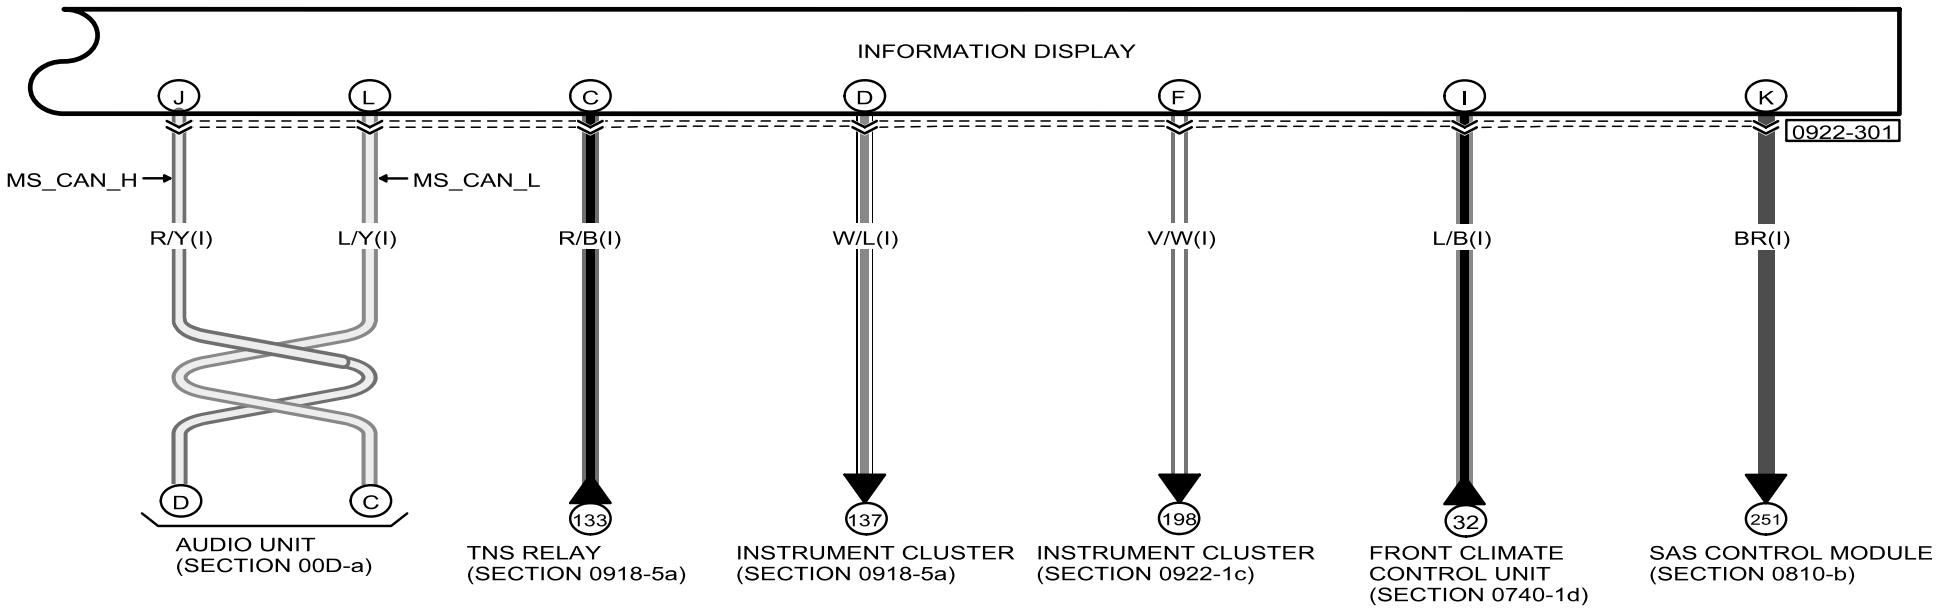


0922-301
INFORMATION DISPLAY

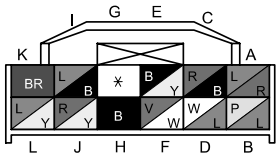


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

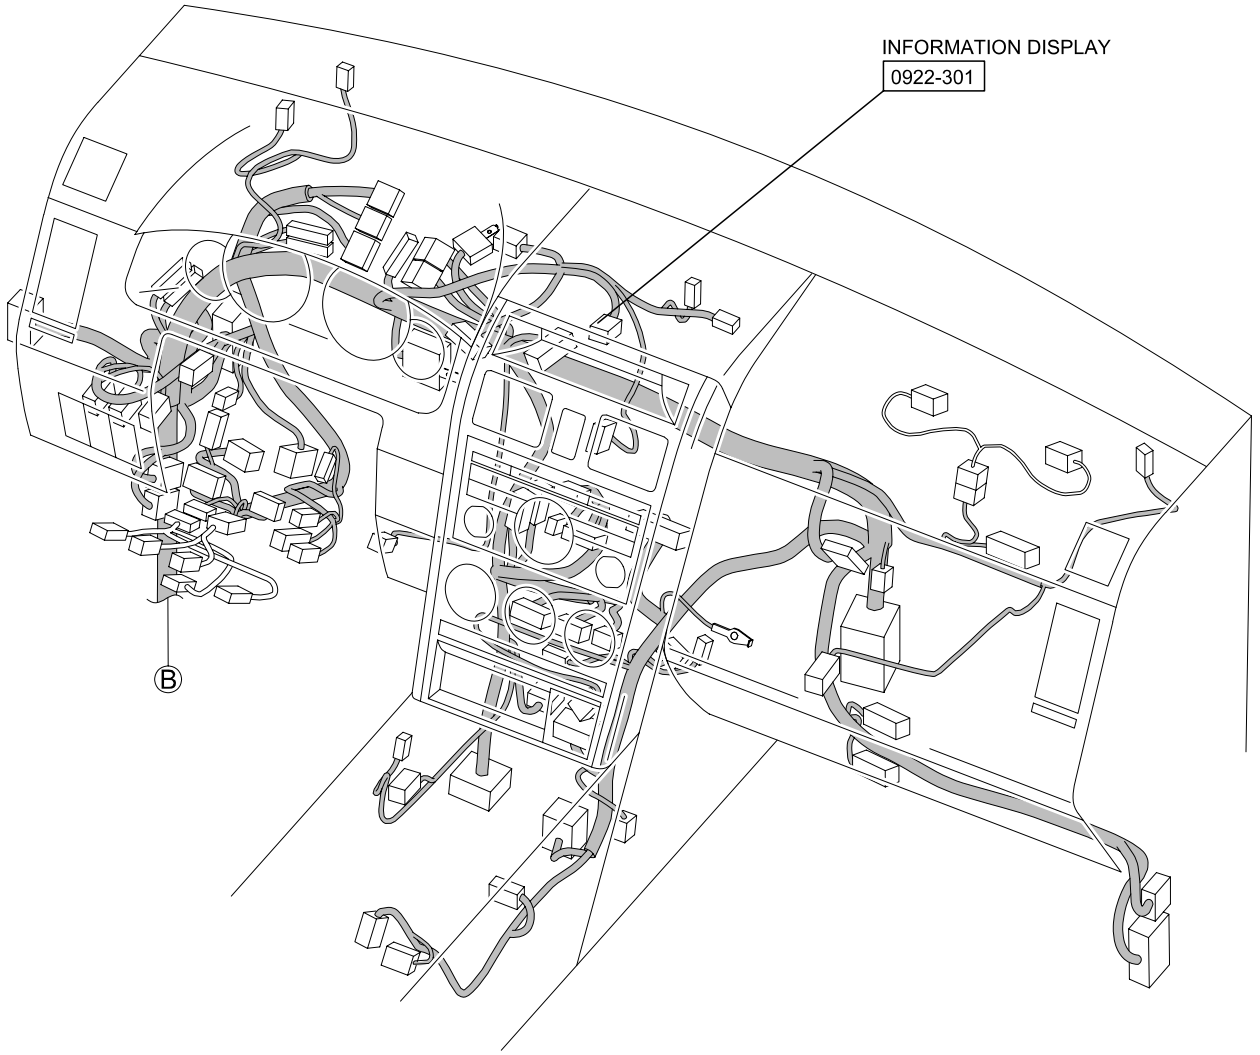

INFORMATION DISPLAY
0922-301
B
: INSTRUMENT PANEL HARNESS

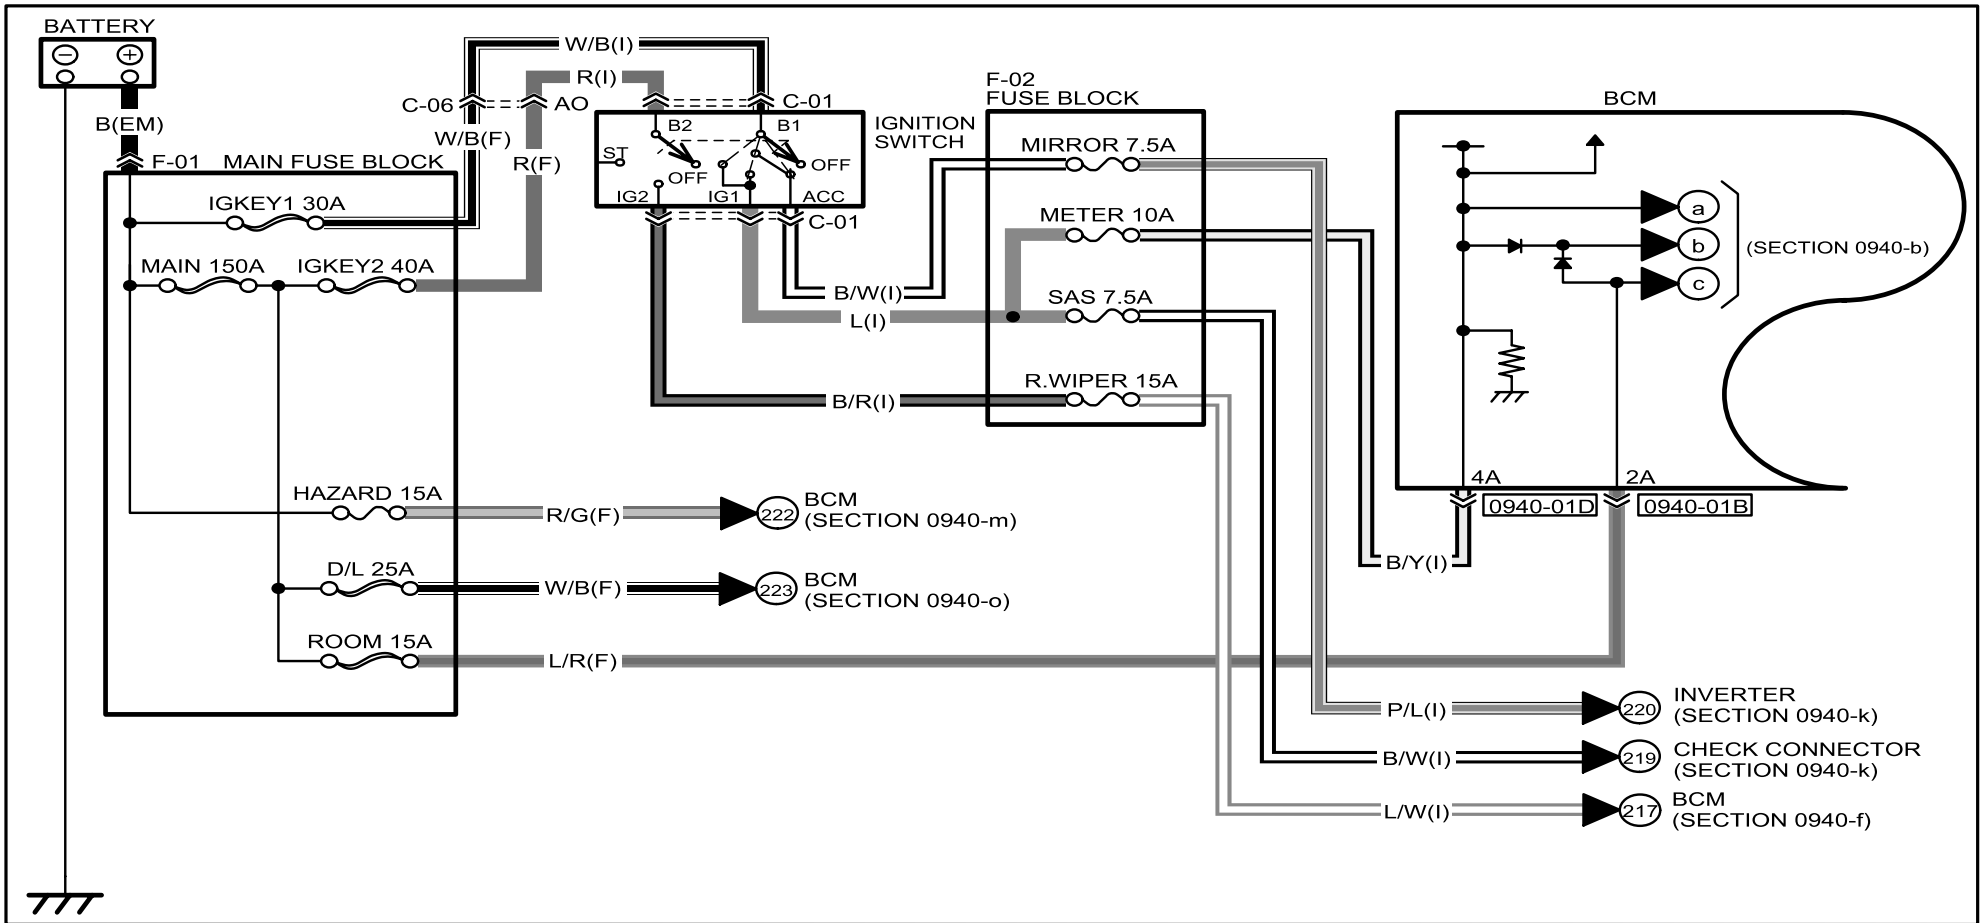


0940-01B
BCM

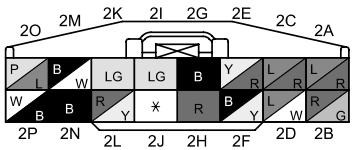


0940-01D
BCM

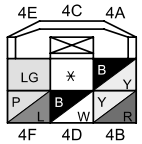


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

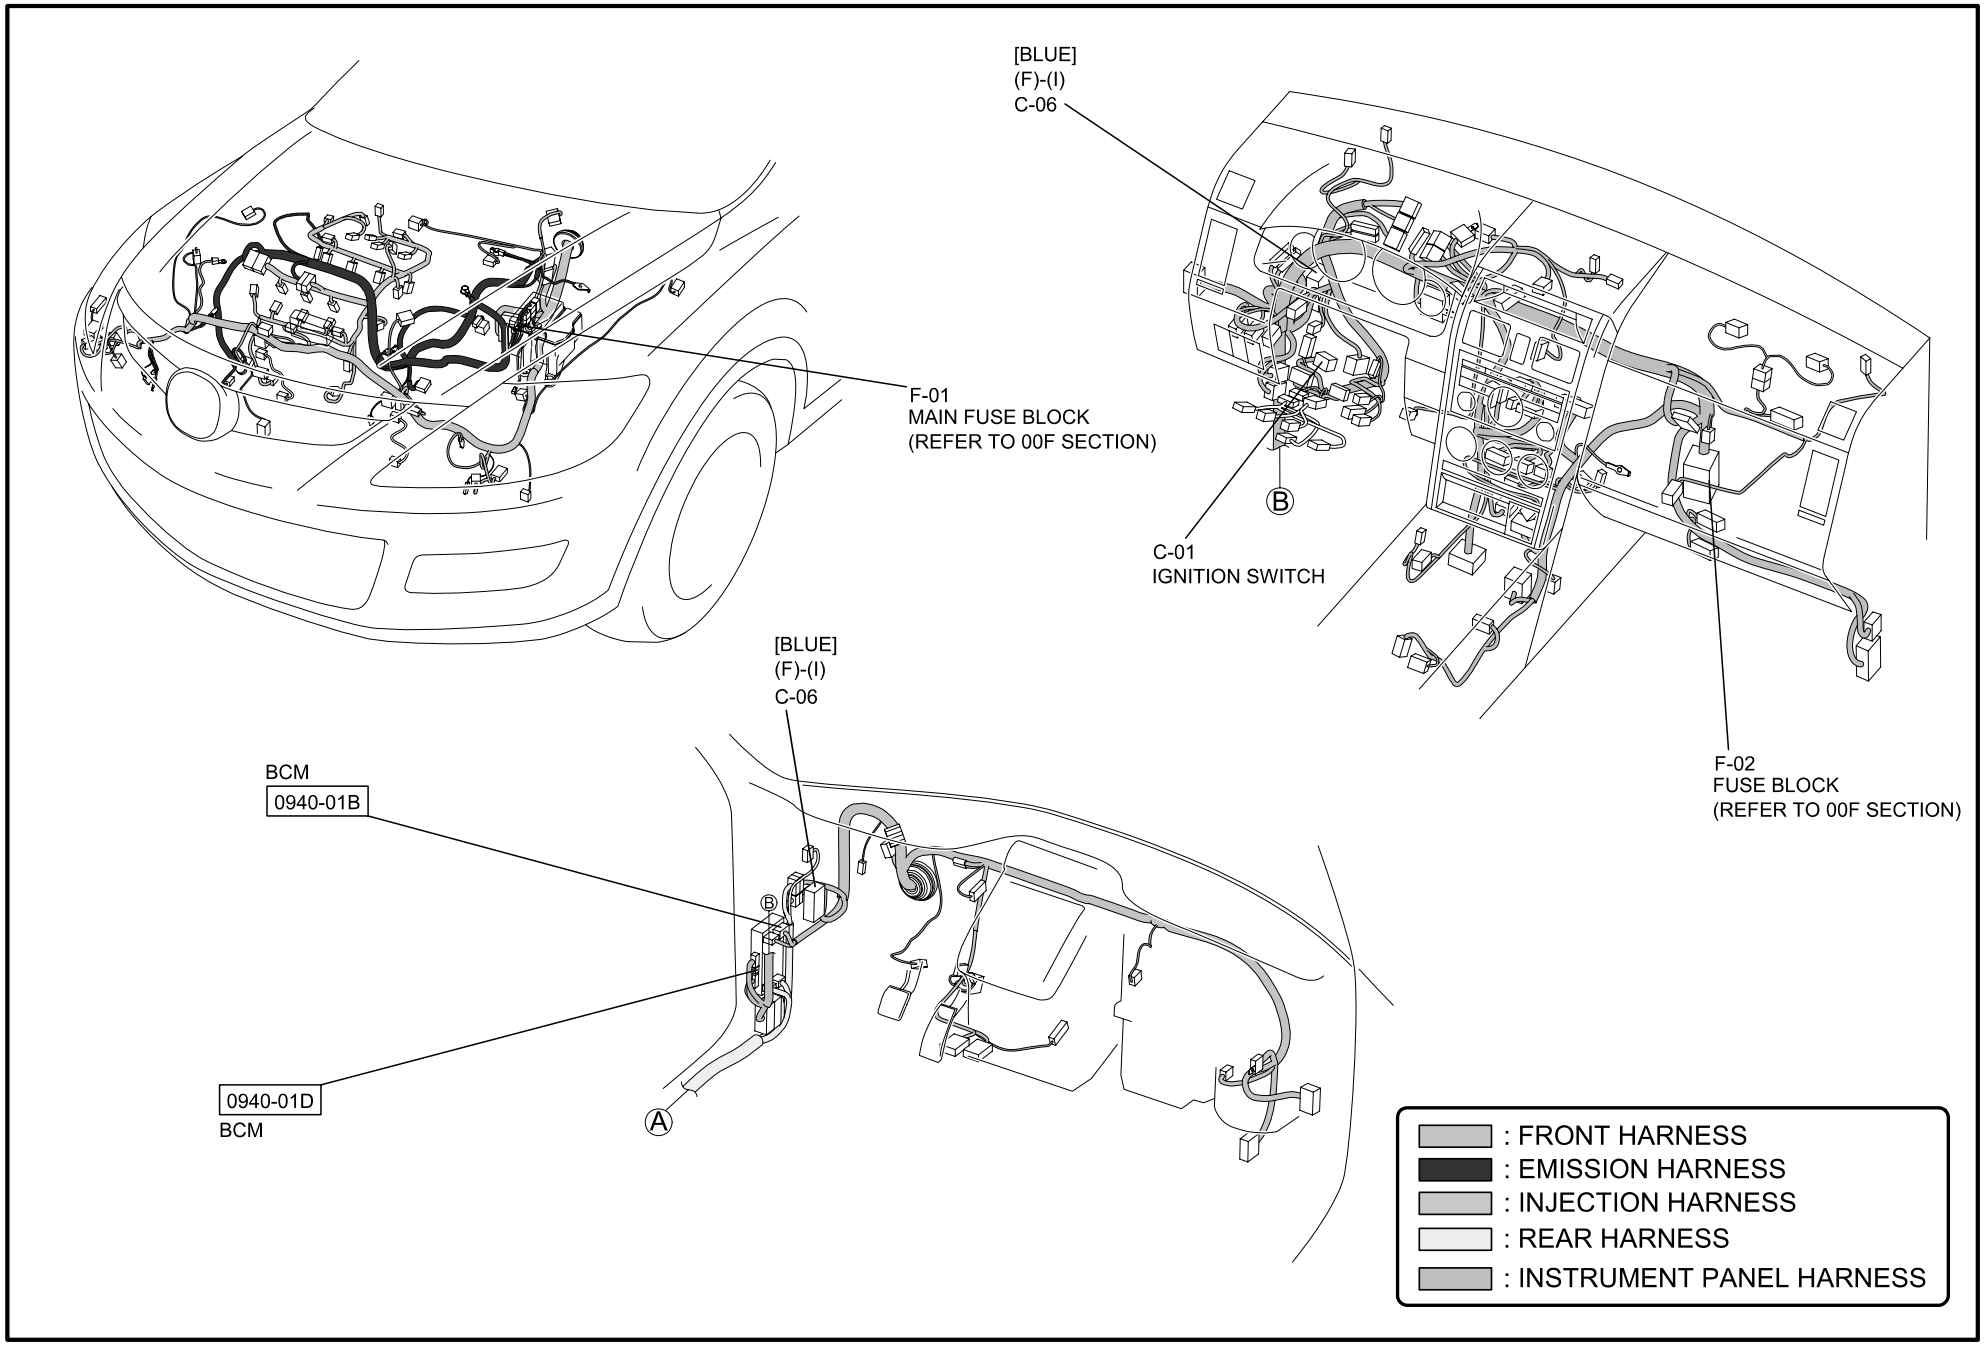

[BLUE]
(F)-(I)
C-06
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
B
C-01
IGNITION SWITCH
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
[BLUE]
(F)-(I)
C-06
BCM
0940-01B
B
0940-01D
BCM
A
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

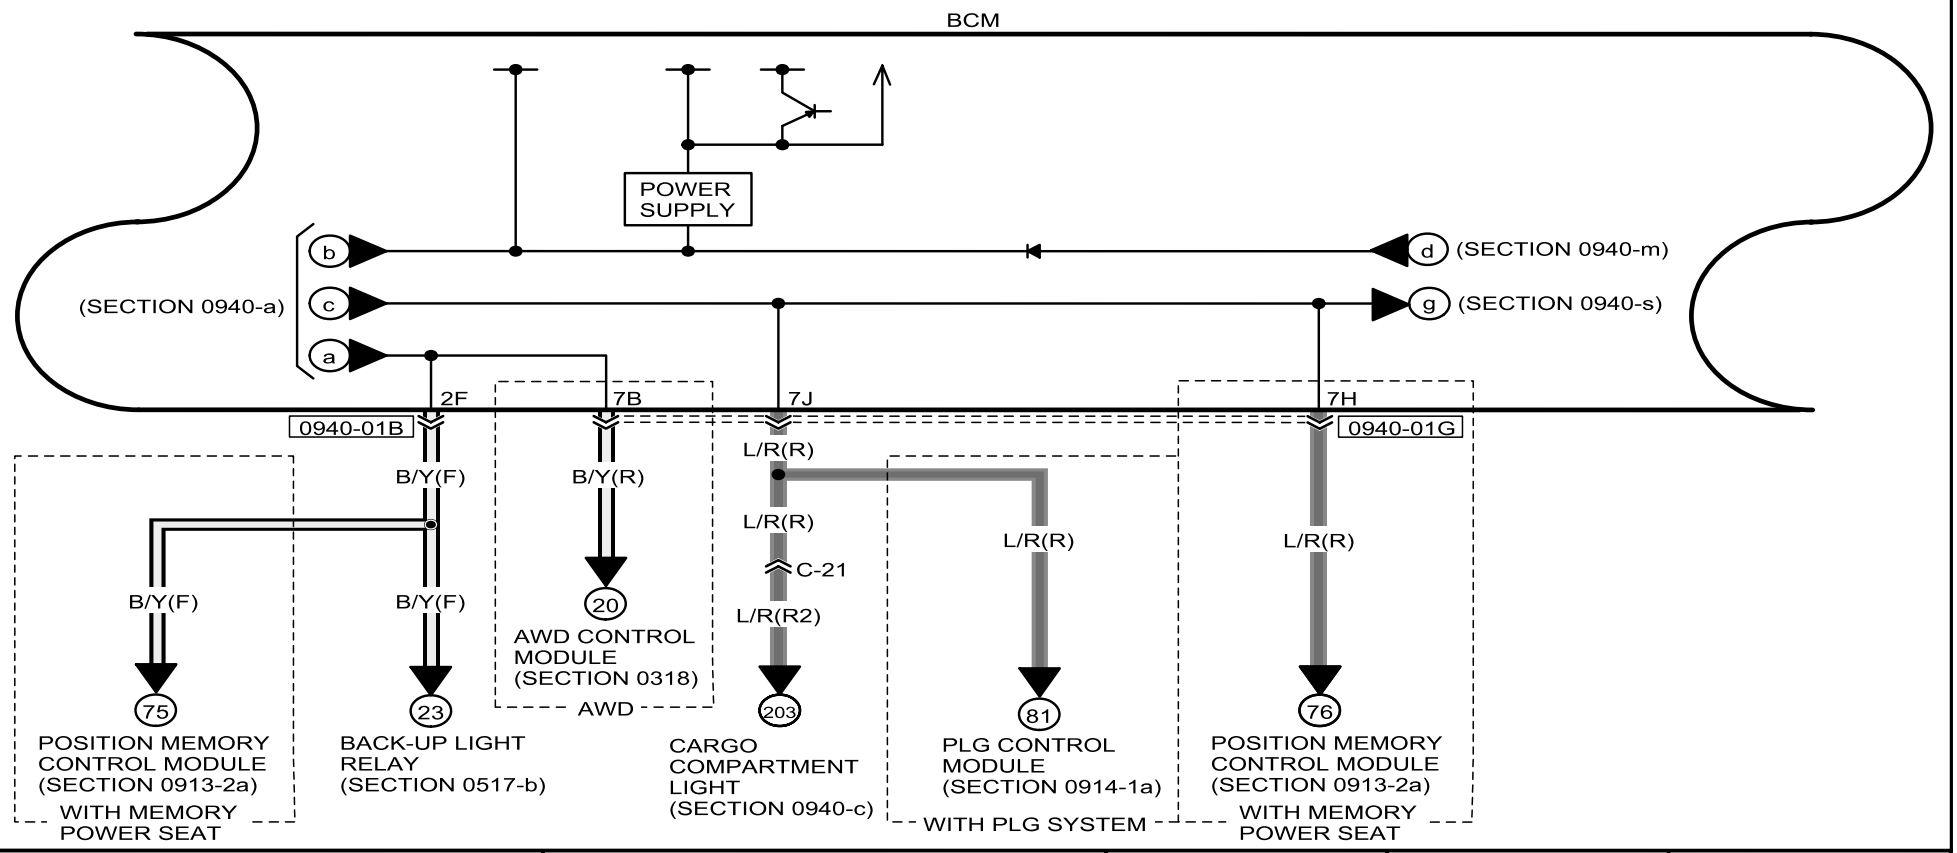


0940-01B
BCM

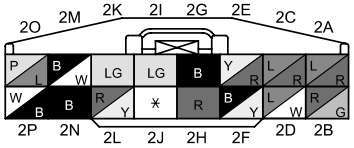


0940-01G
BCM

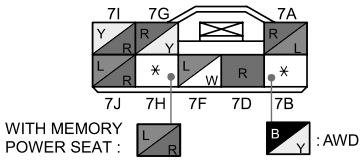


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

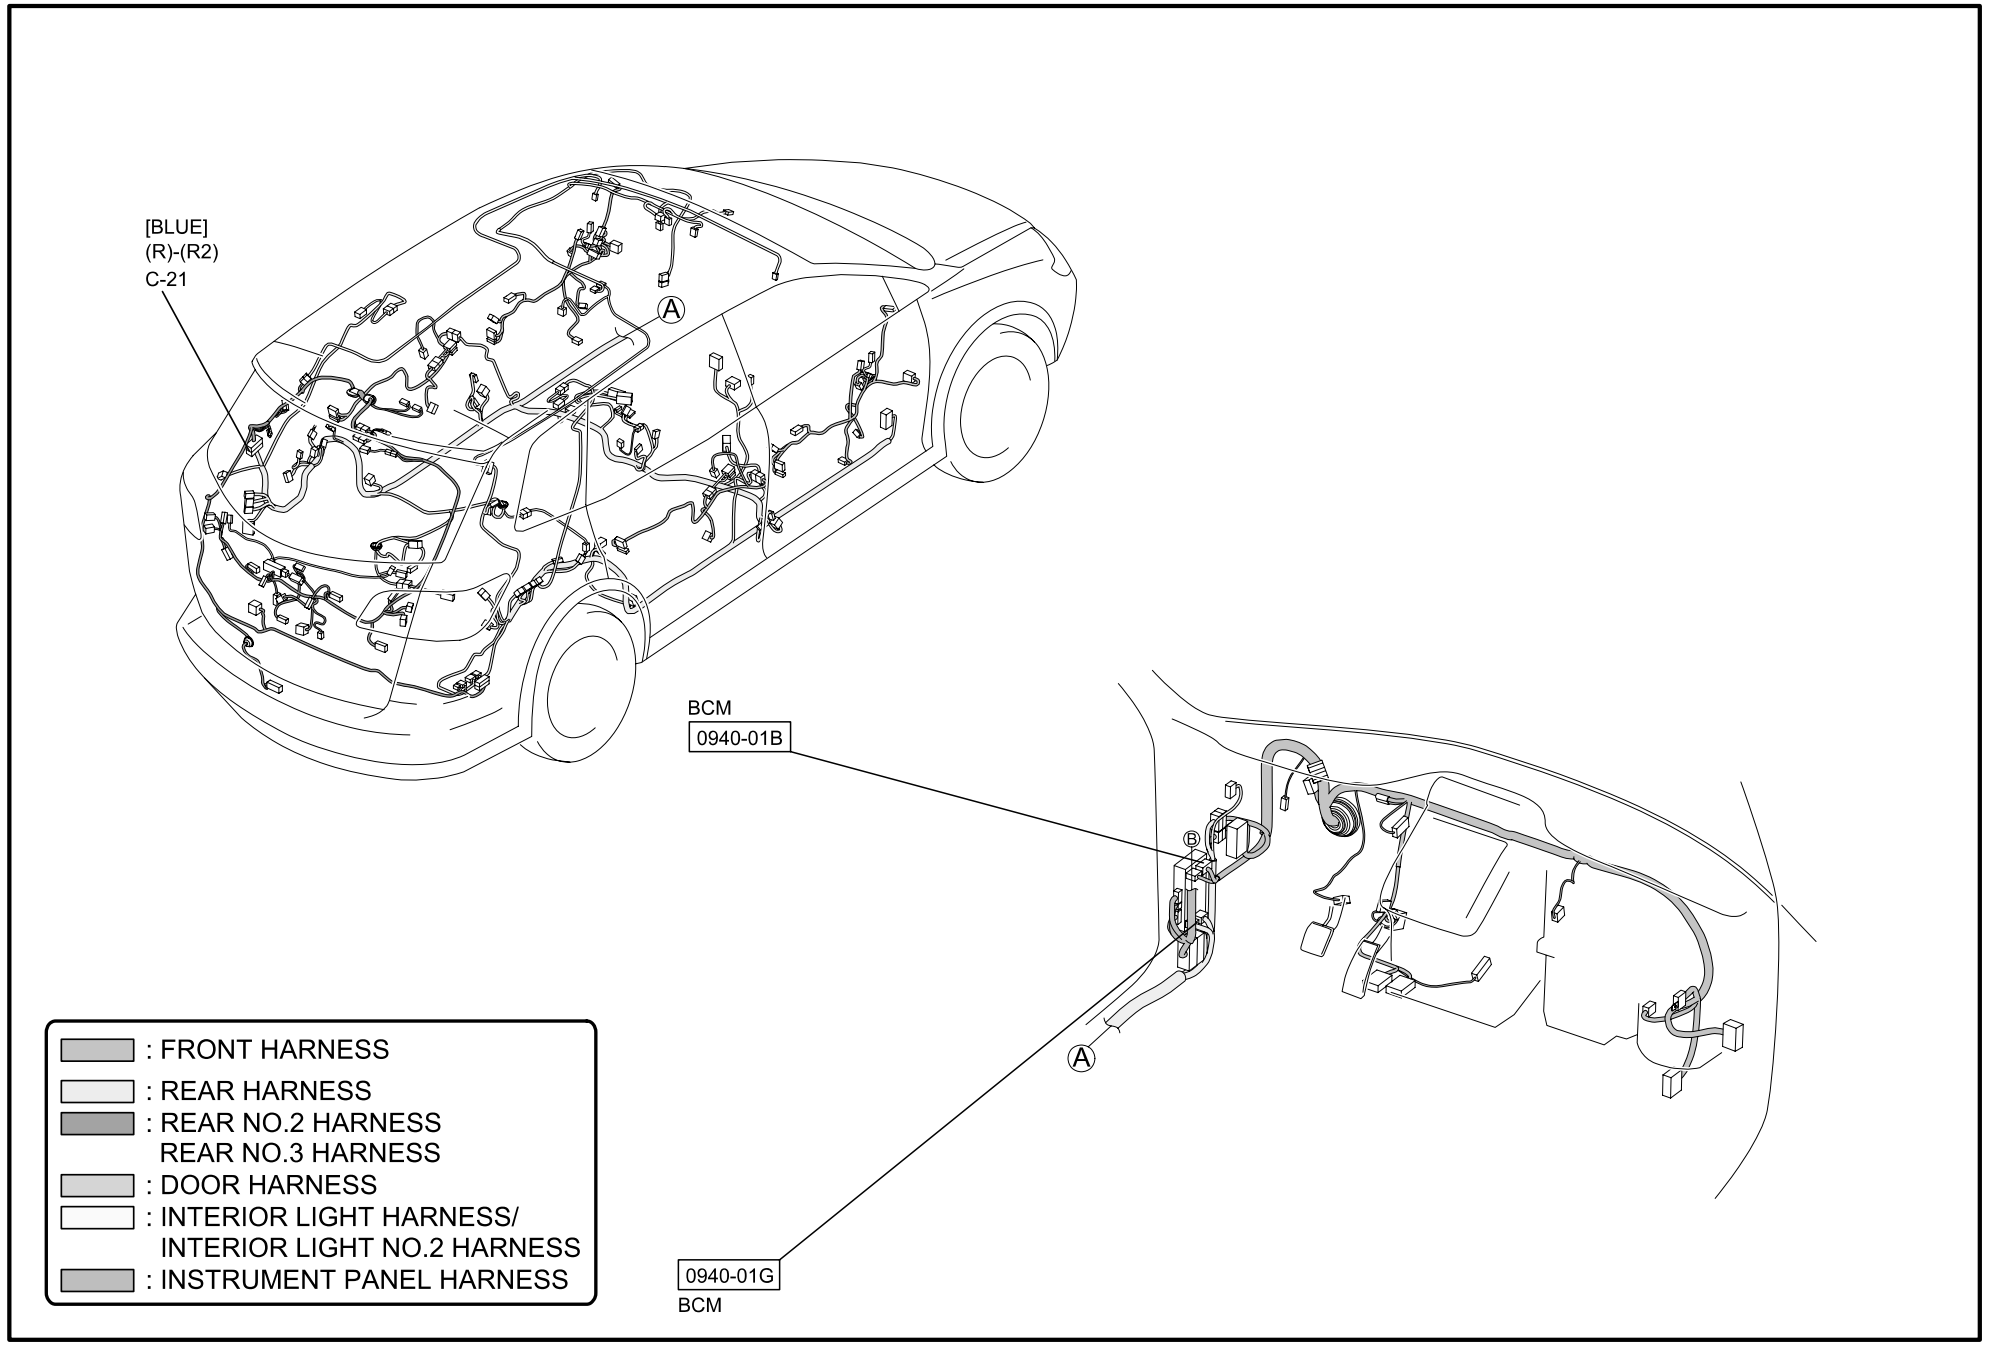

[BLUE]
(R)-(R2)
C-21
A
BCM
0940-01B
B
A
0940-01G
BCM
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS


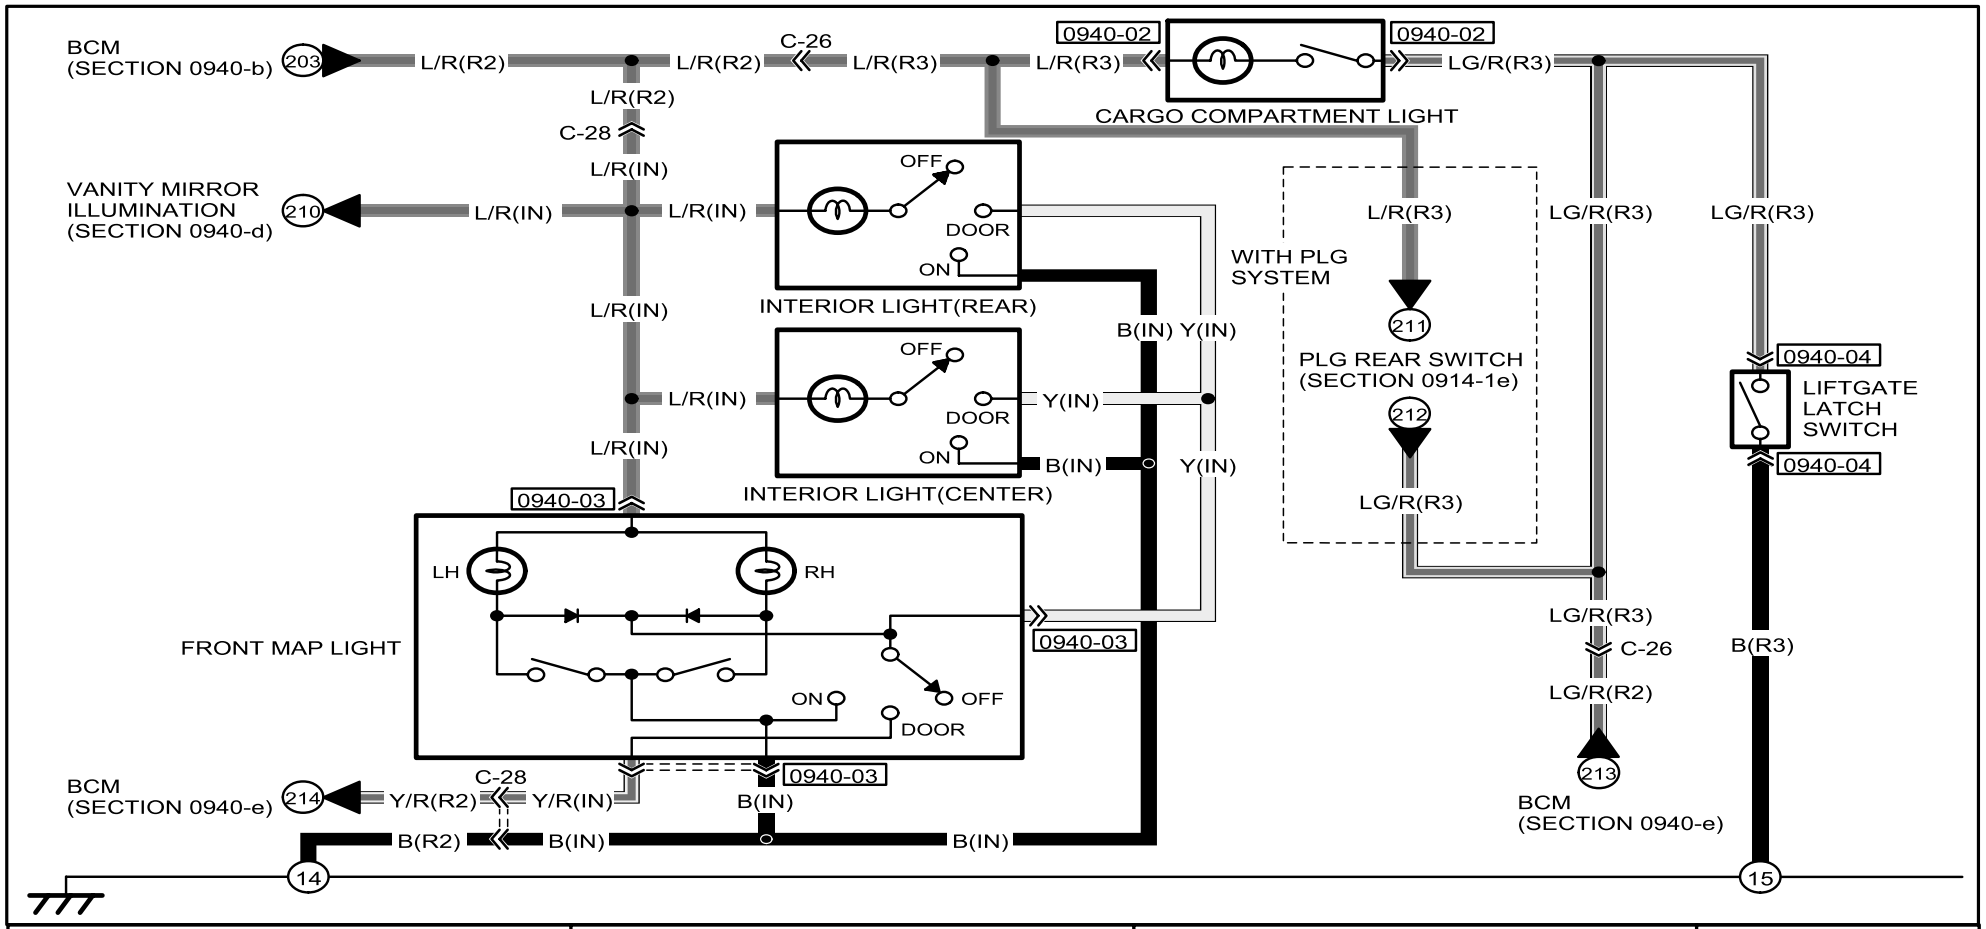


0940-02		0940-03		0940-04		
CARGO COMPARTMENT LIGHT		CONSOLE INDIRECT ILLUMINATION/ FRONT MAP LIGHT		LIFTGATE LATCH SWITCH		


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

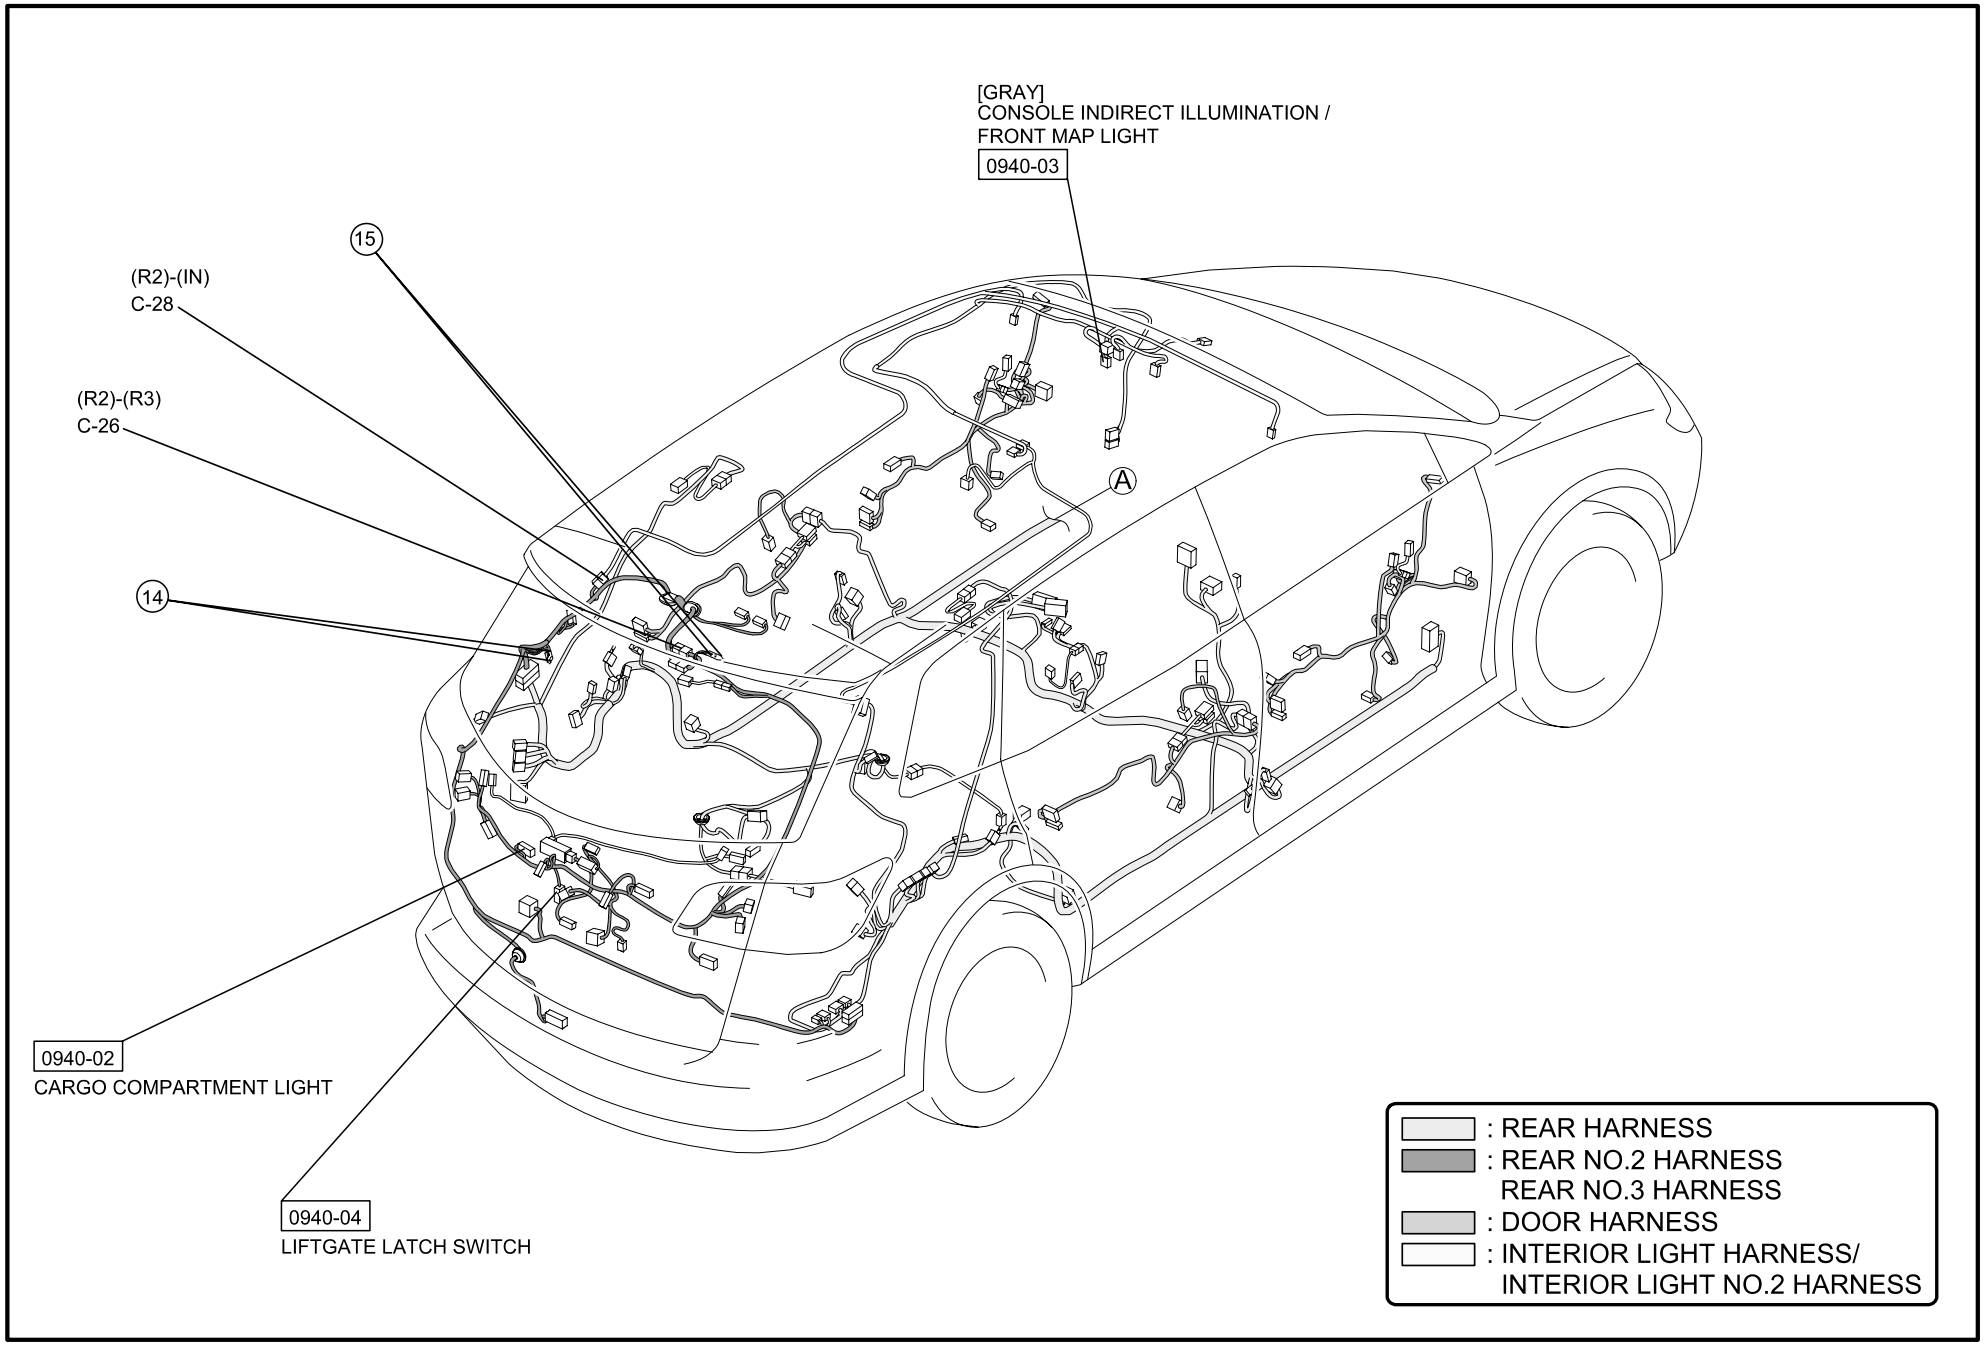

[GRAY]
CONSOLE INDIRECT ILLUMINATION /
FRONT MAP LIGHT
0940-03
15
(R2)-(IN)
C-28
(R2)-(R3)
C-26
14
A
0940-02
CARGO COMPARTMENT LIGHT
0940-04
LIFTGATE LATCH SWITCH
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS

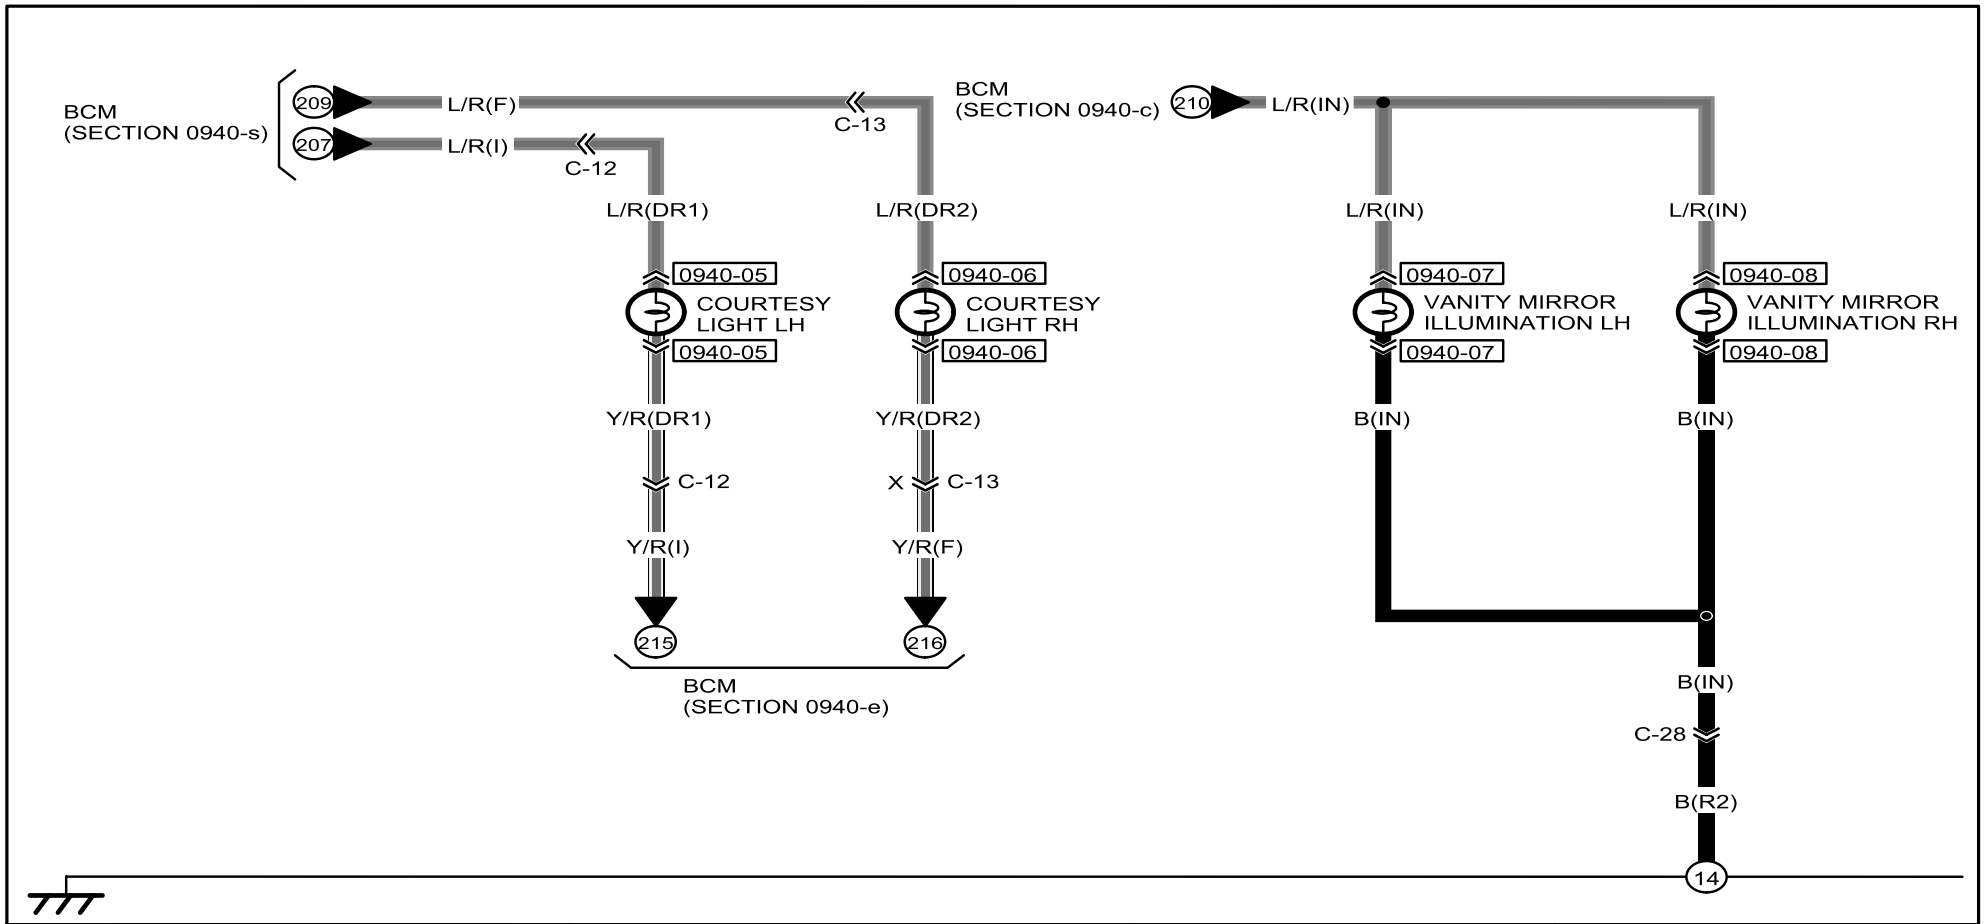

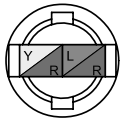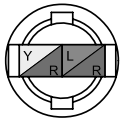
0940-05 COURTESY LIGHT LH	0940-06 COURTESY LIGHT RH	0940-07 VANITY MIRROR ILLUMINATION LH	0940-08 VANITY MIRROR ILLUMINATION RH
			


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

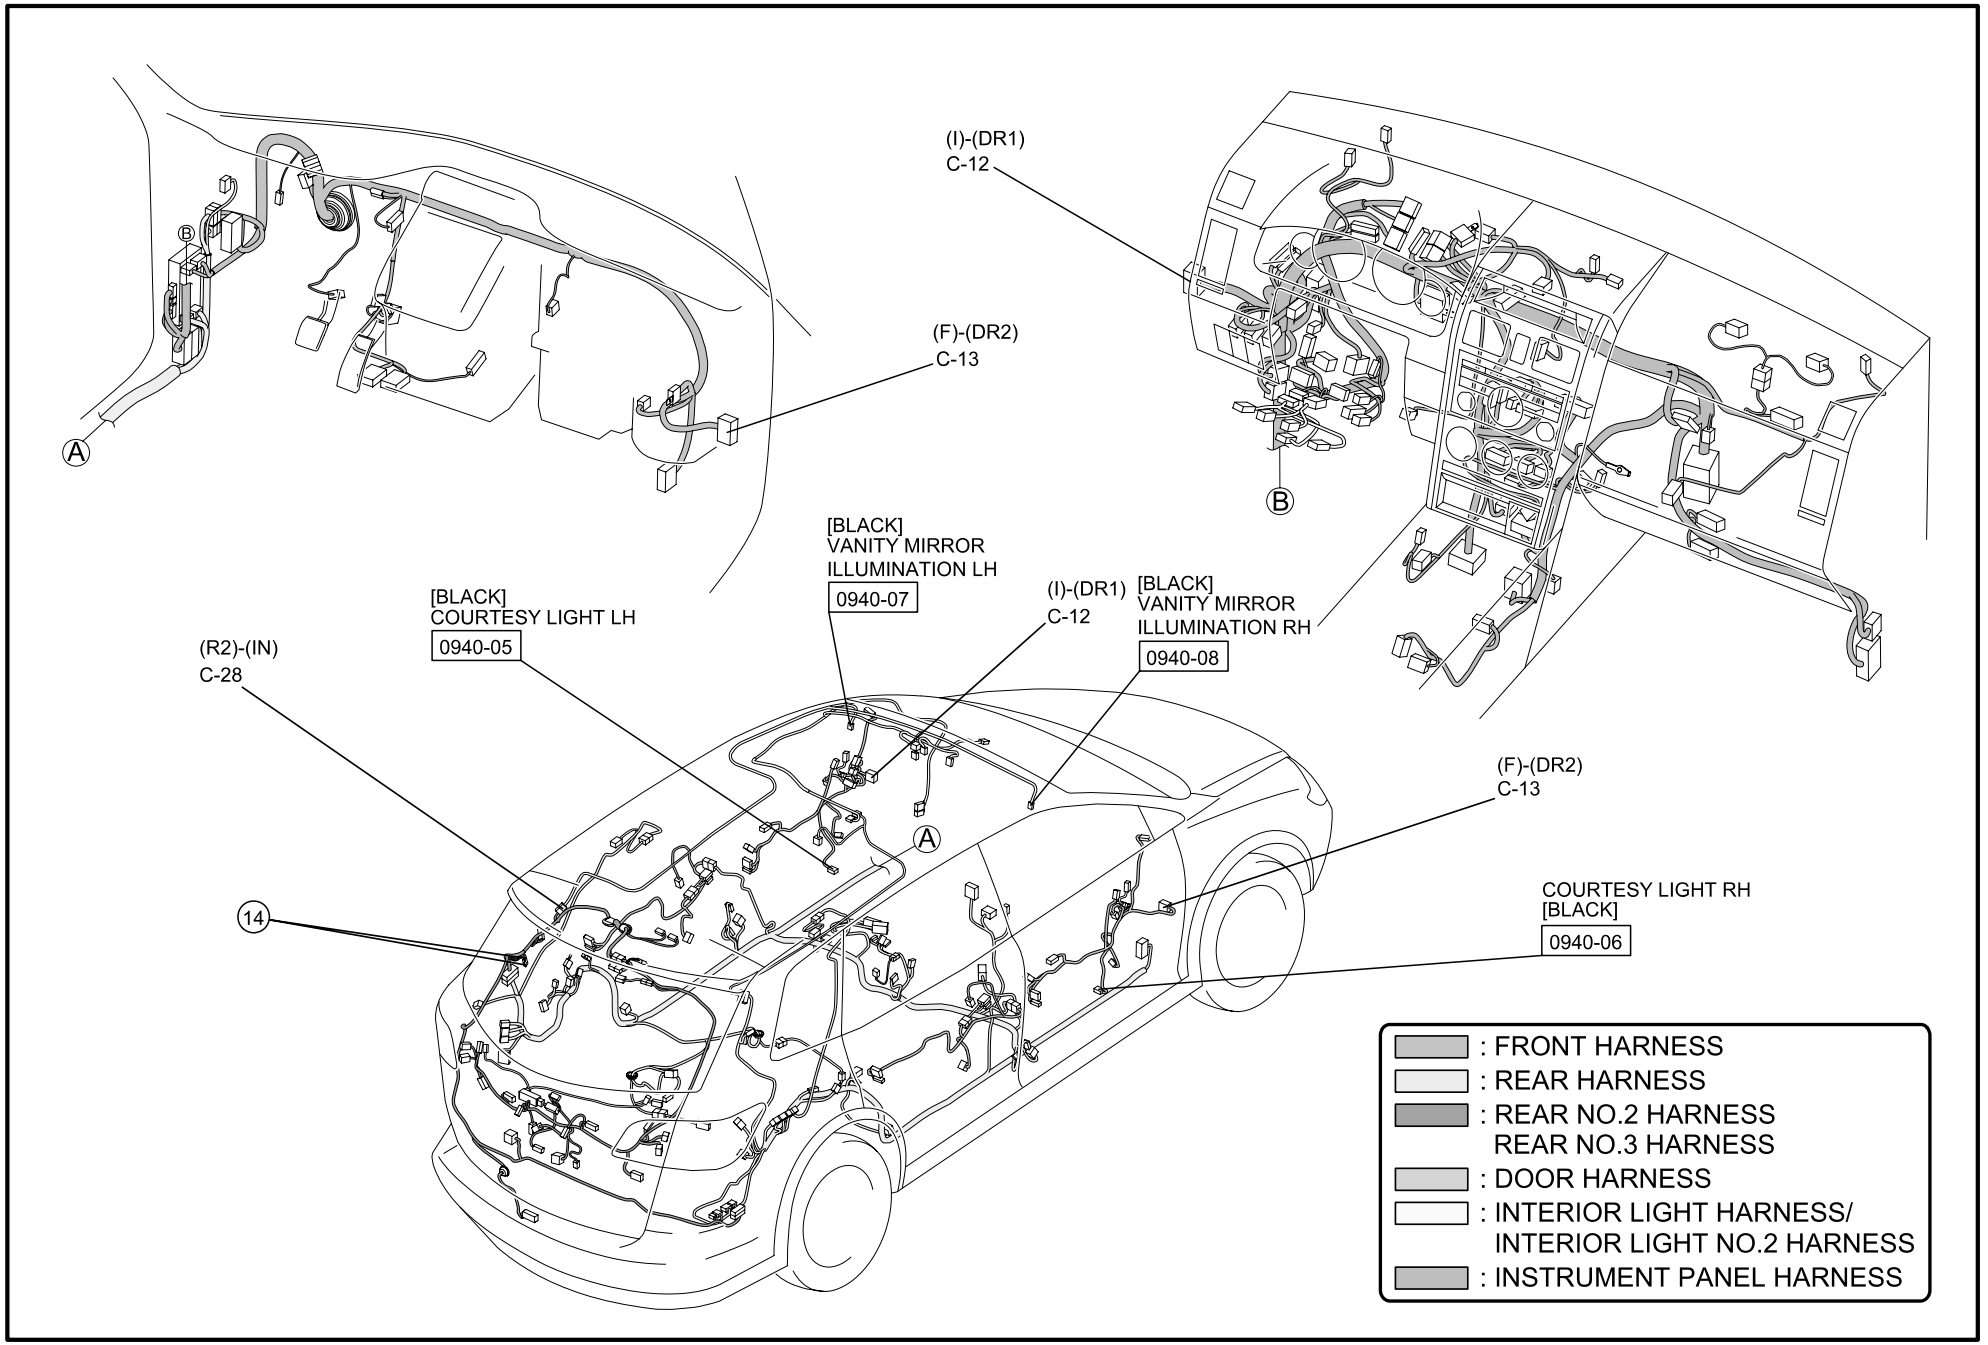
(I)-(DR1)
C-12
(F)-(DR2)
C-13
A
B
[BLACK]
VANITY MIRROR
ILLUMINATION LH
0940-07
[BLACK]
COURTESY LIGHT LH
0940-05
(I)-(DR1)
C-12
[BLACK]
VANITY MIRROR
ILLUMINATION RH
0940-08
(R2)-(IN)
C-28
14
(F)-(DR2)
C-13
COURTESY LIGHT RH
[BLACK]
0940-06
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

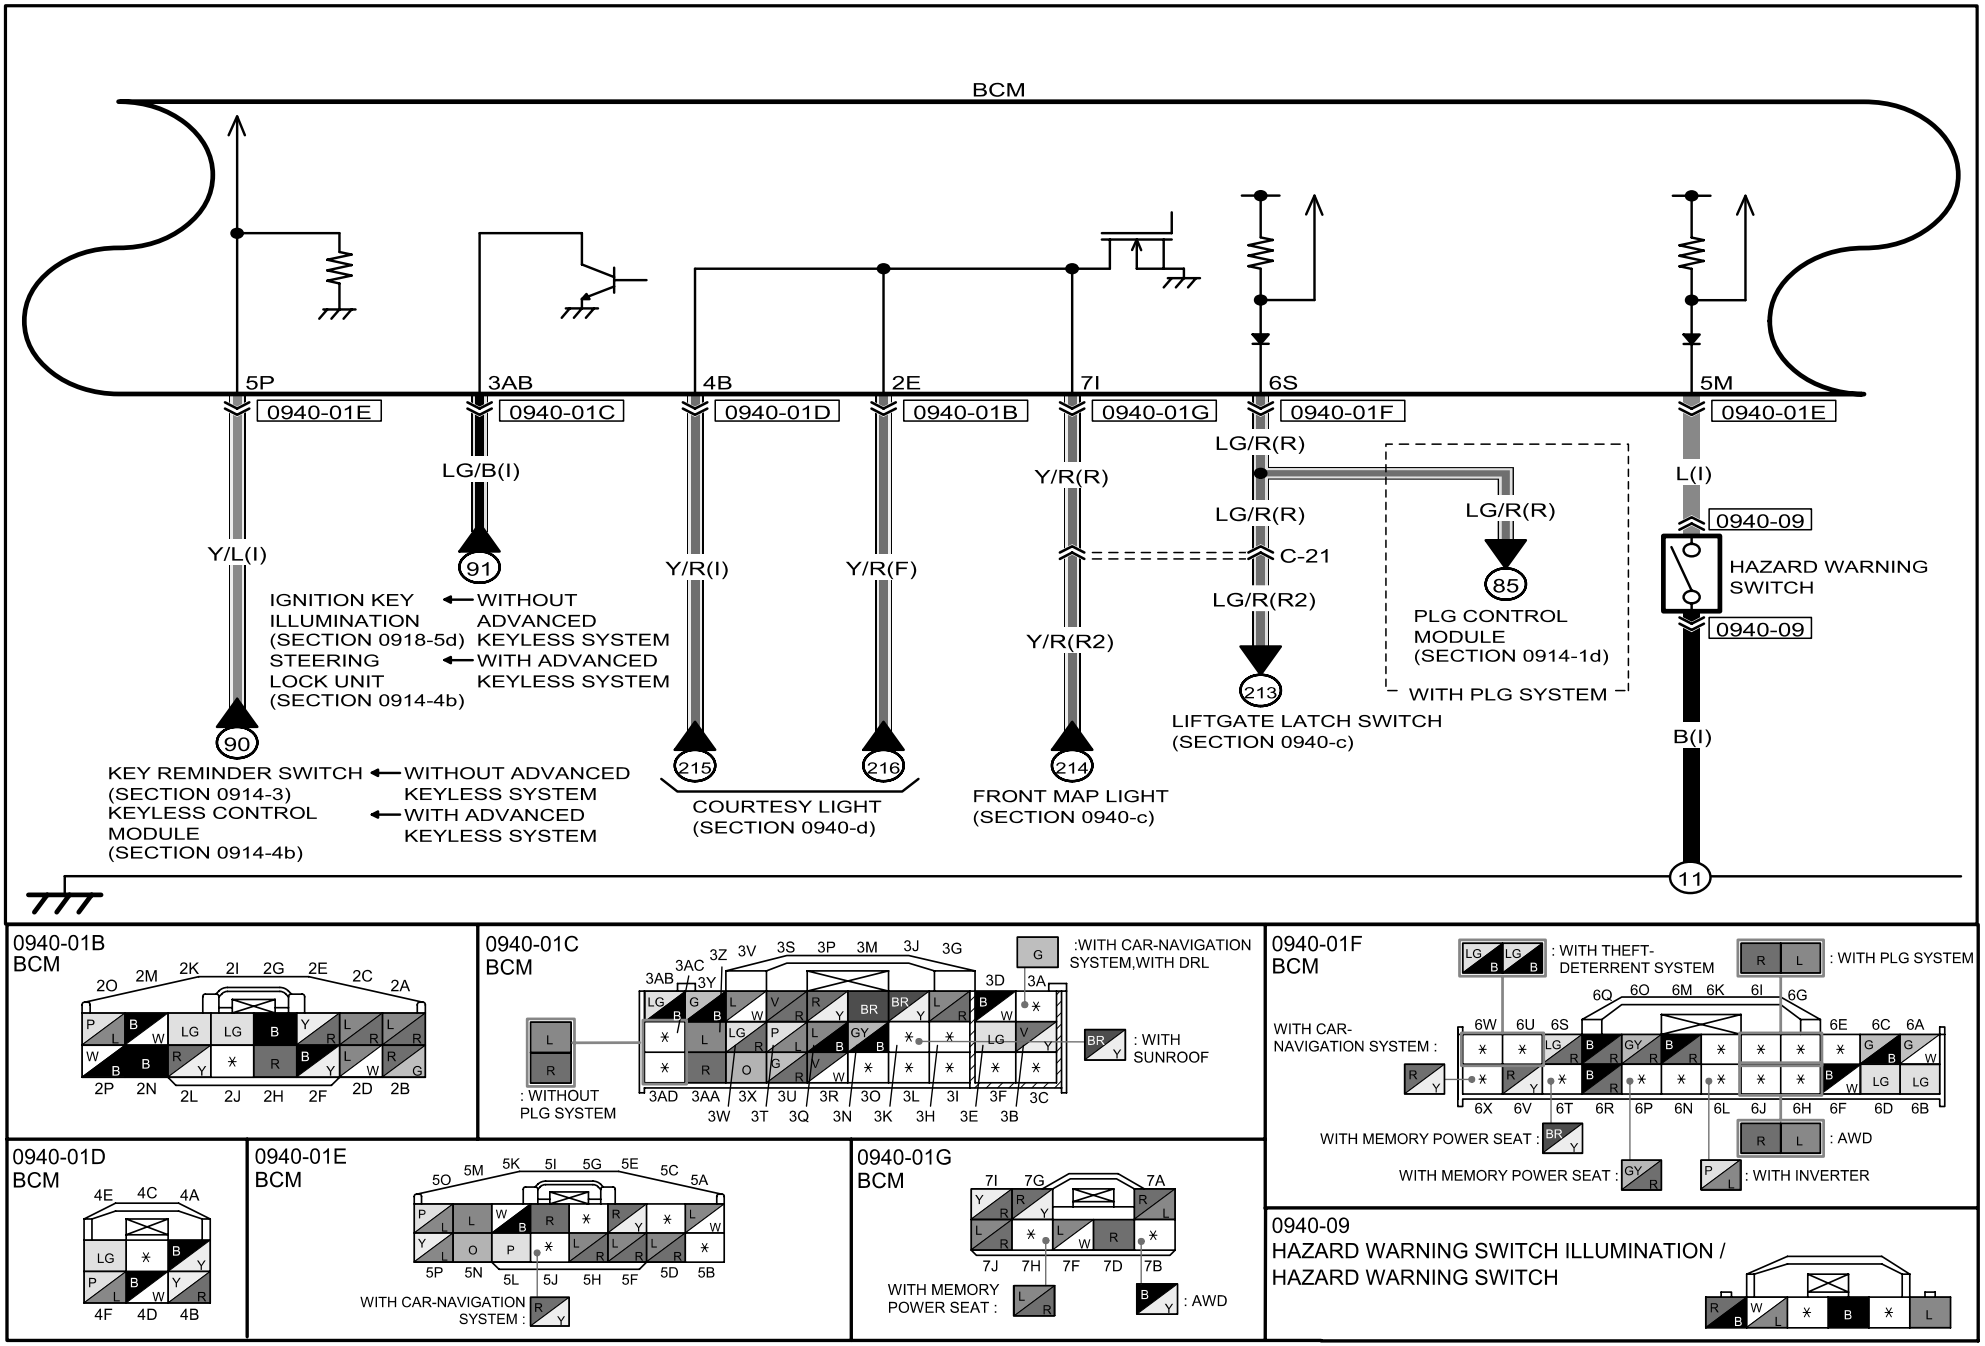

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

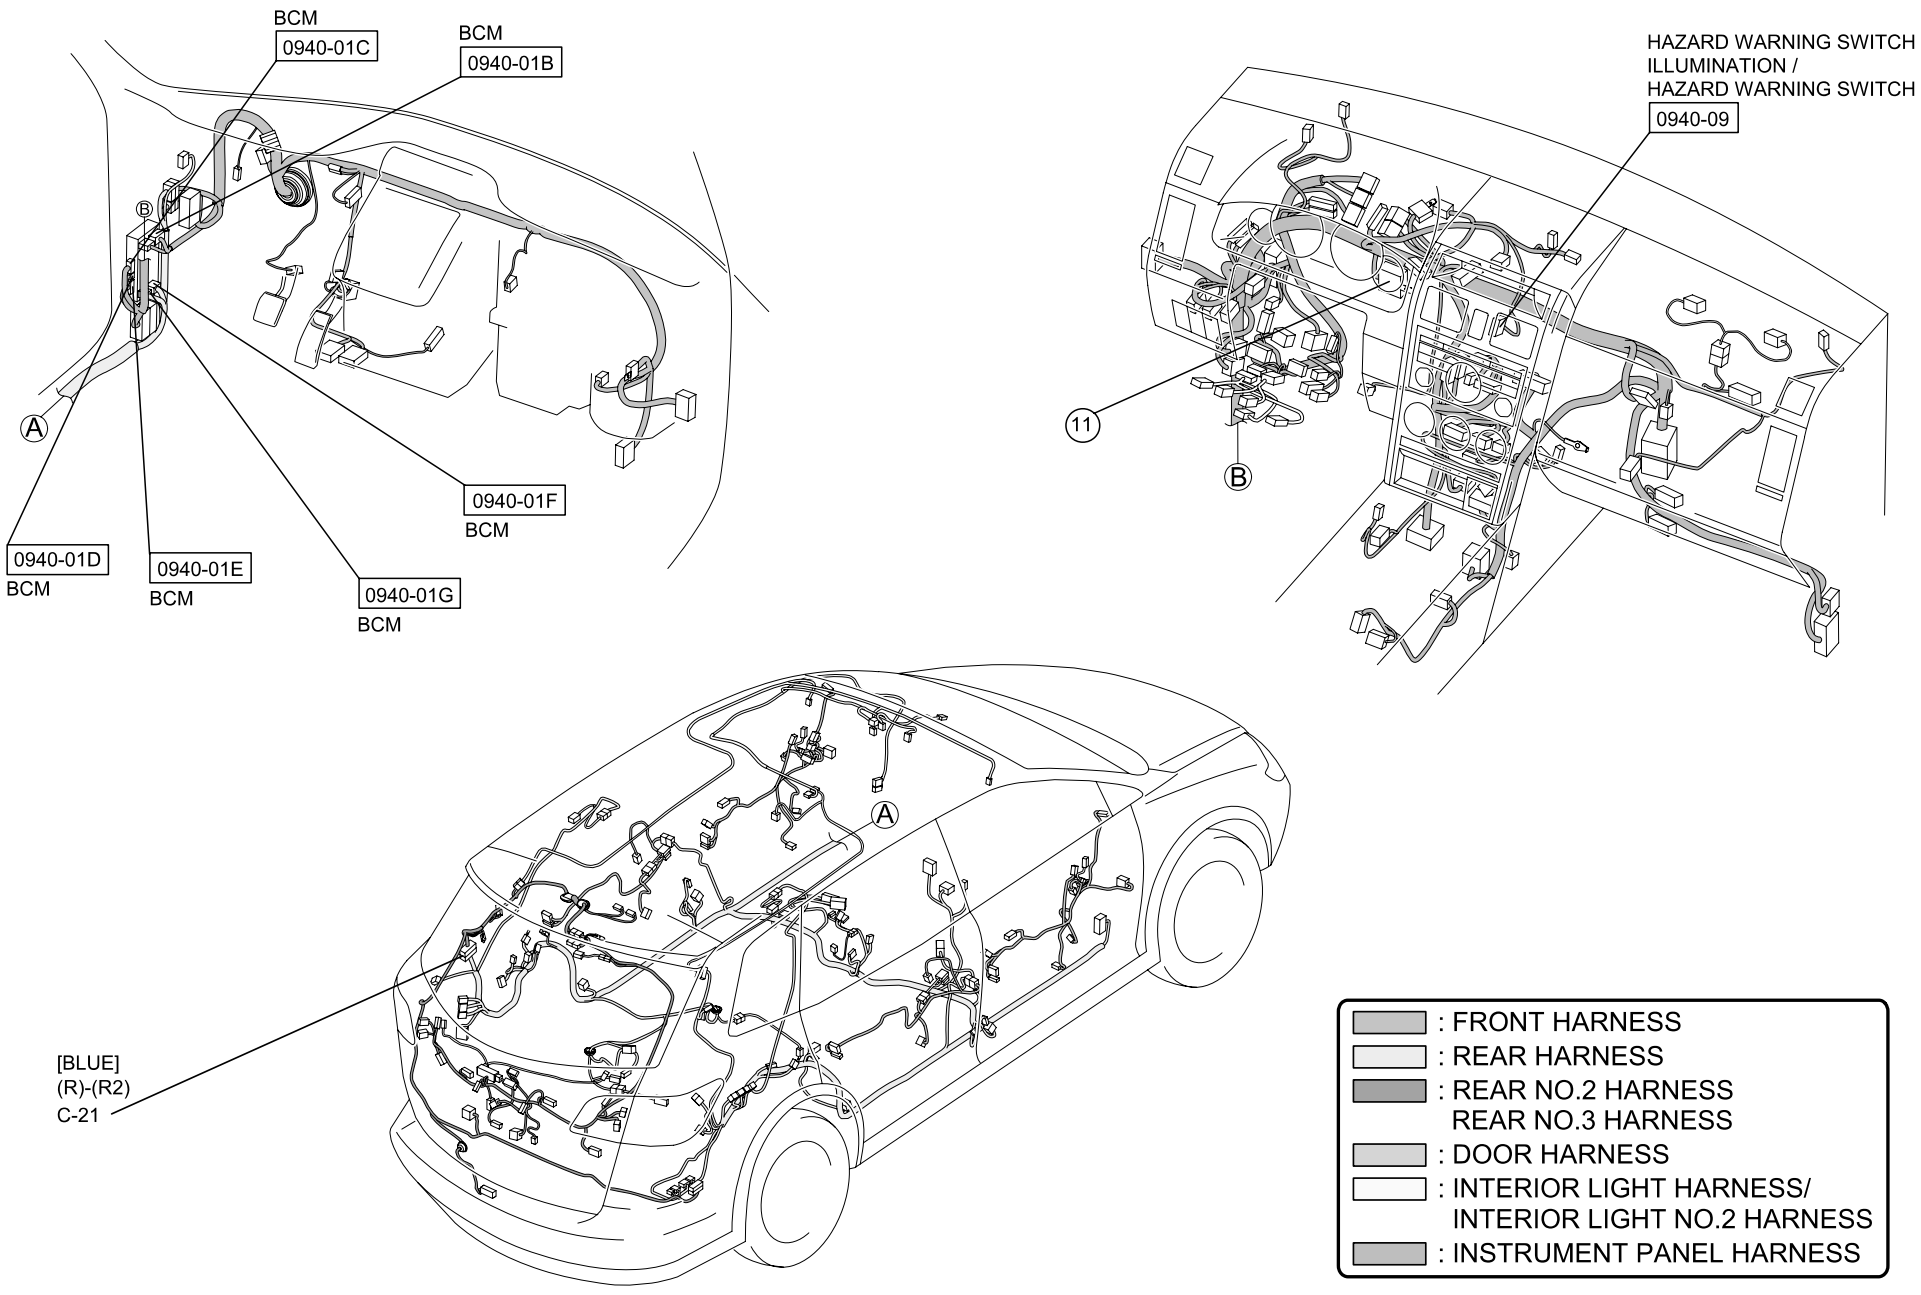
BCM
0940-01C
BCM
0940-01B
Ⓑ
Ⓐ
0940-01F
BCM
0940-01D
BCM
0940-01E
BCM
0940-01G
BCM
HAZARD WARNING SWITCH
ILLUMINATION /
HAZARD WARNING SWITCH
0940-09
11
Ⓑ
Ⓐ
[BLUE]
(R)-(R2)
C-21
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

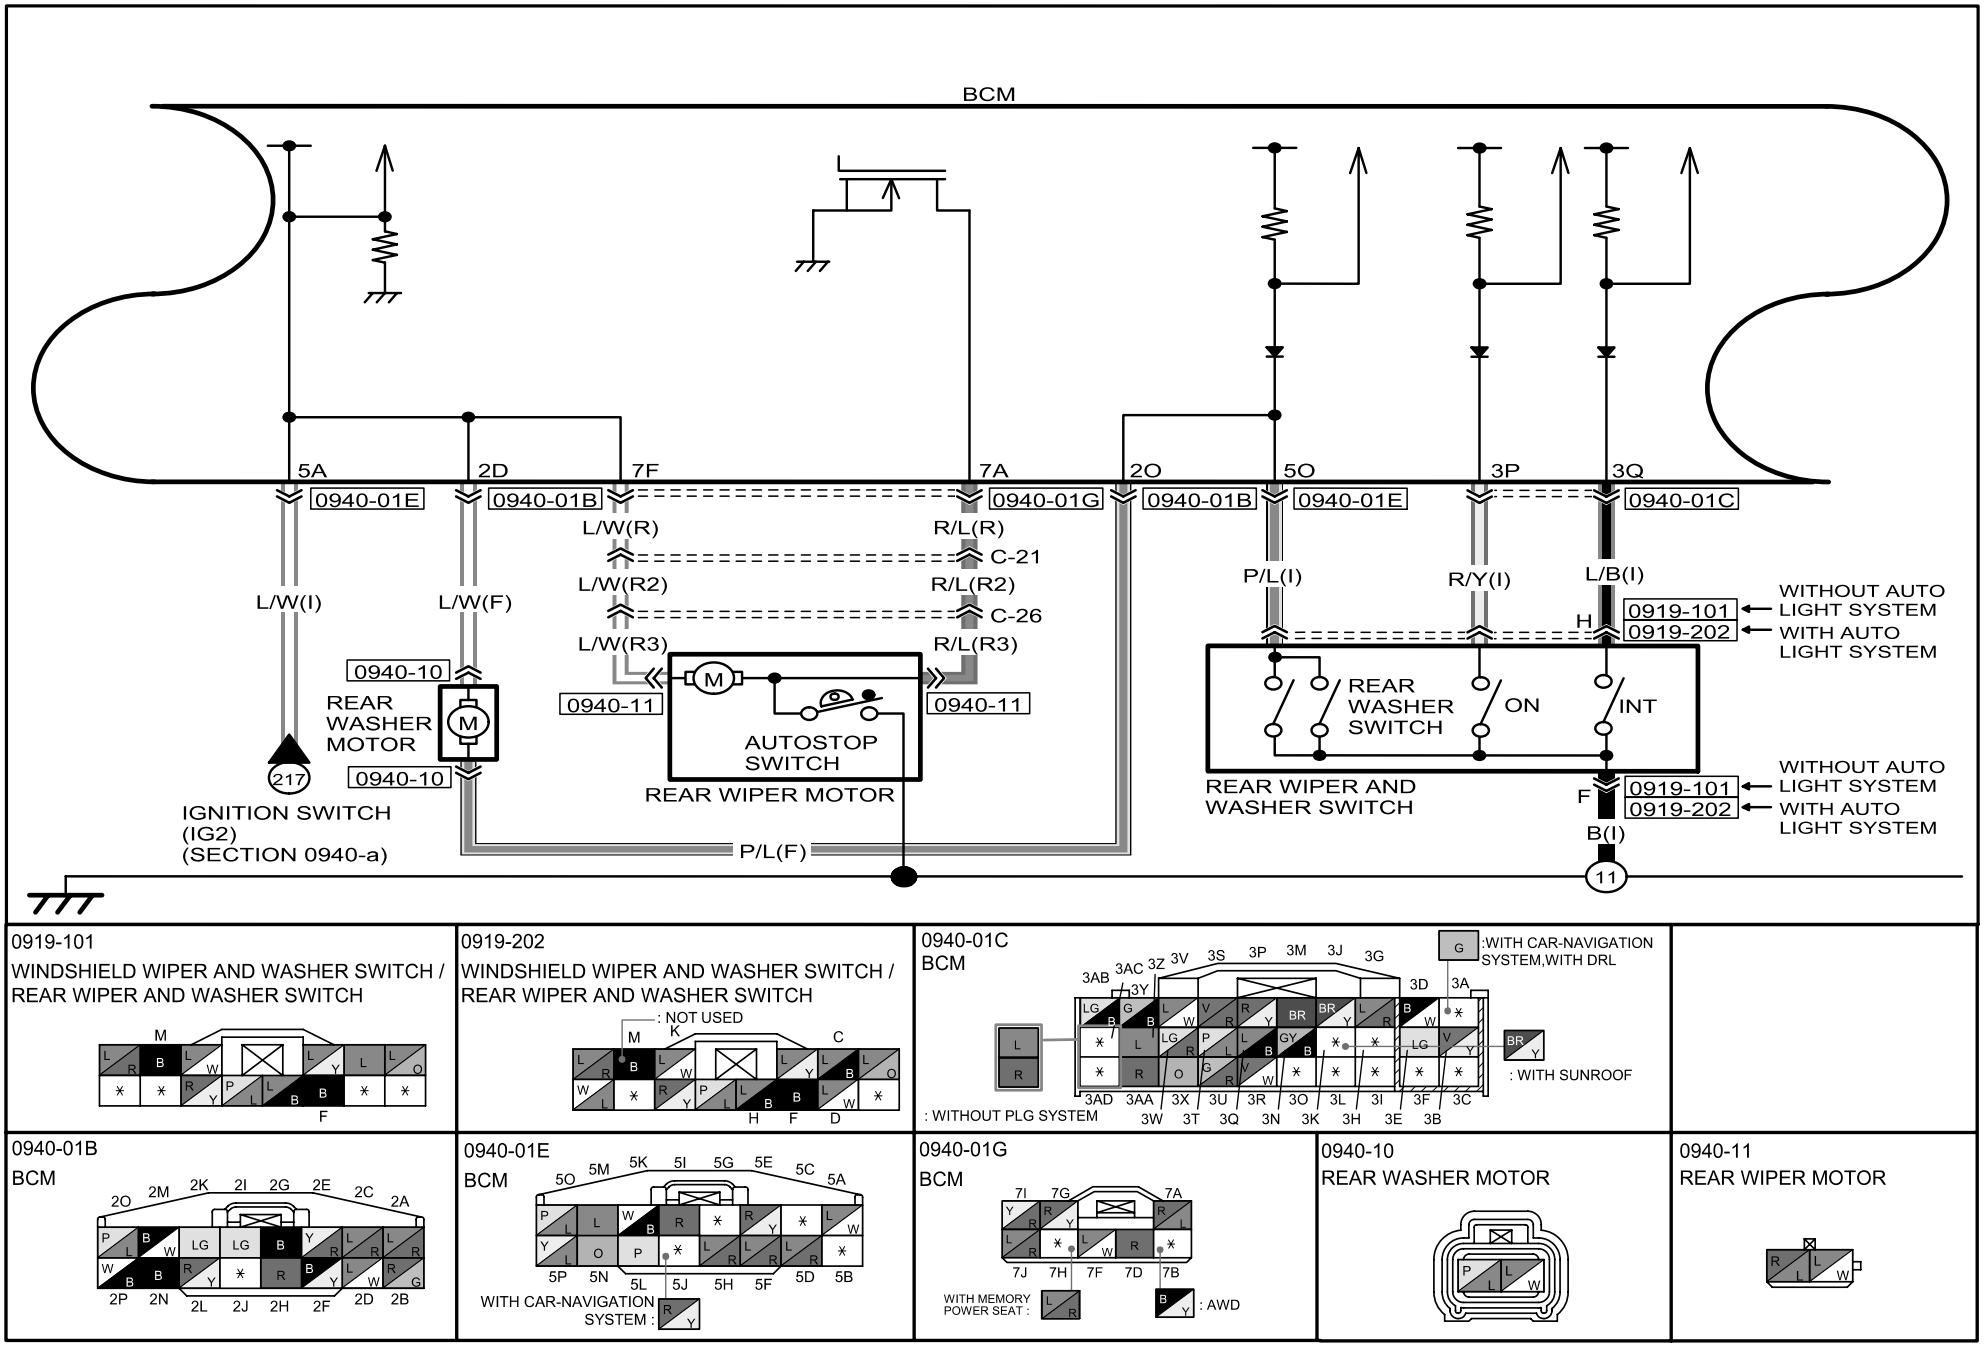

0919-101
WINDSHIELD WIPER AND WASHER SWITCH / REAR WIPER AND WASHER SWITCH

0919-202
WINDSHIELD WIPER AND WASHER SWITCH / REAR WIPER AND WASHER SWITCH

0940-01C
BCM

0940-01B
BCM


0940-01E
BCM


0940-01G
BCM

0940-10
REAR WASHER MOTOR


0940-11
REAR WIPER MOTOR


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

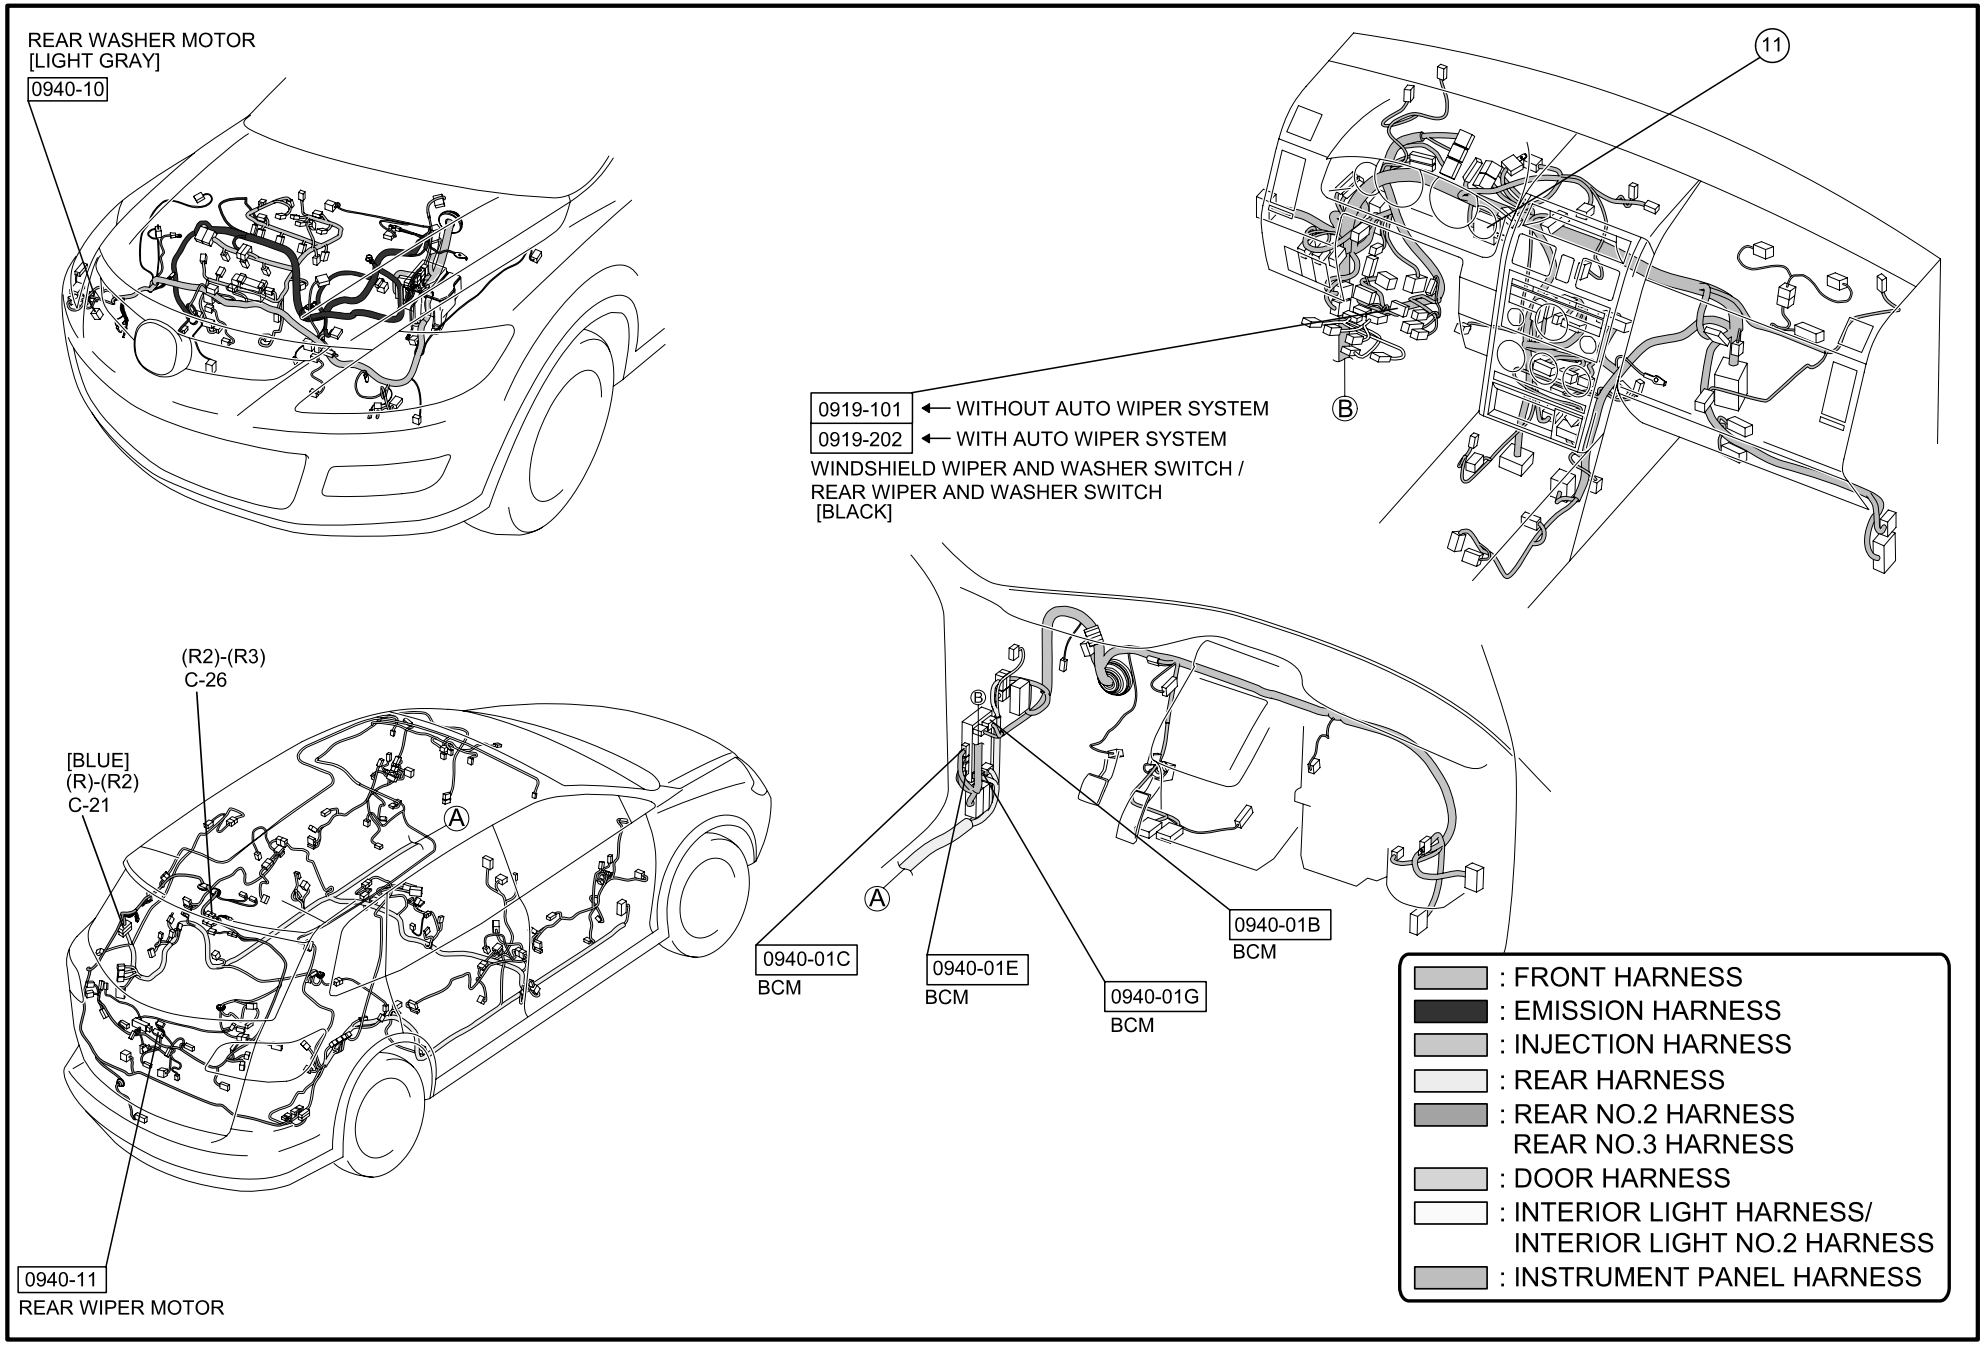
REAR WASHER MOTOR
[LIGHT GRAY]
0940-10
11
B
0919-101 ← WITHOUT AUTO WIPER SYSTEM
0919-202 ← WITH AUTO WIPER SYSTEM
WINDSHIELD WIPER AND WASHER SWITCH /
REAR WIPER AND WASHER SWITCH
[BLACK]
(R2)-(R3)
C-26
[BLUE]
(R)-(R2)
C-21
A
0940-11
REAR WIPER MOTOR
0940-01C
BCM
0940-01E
BCM
0940-01G
BCM
0940-01B
BCM
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

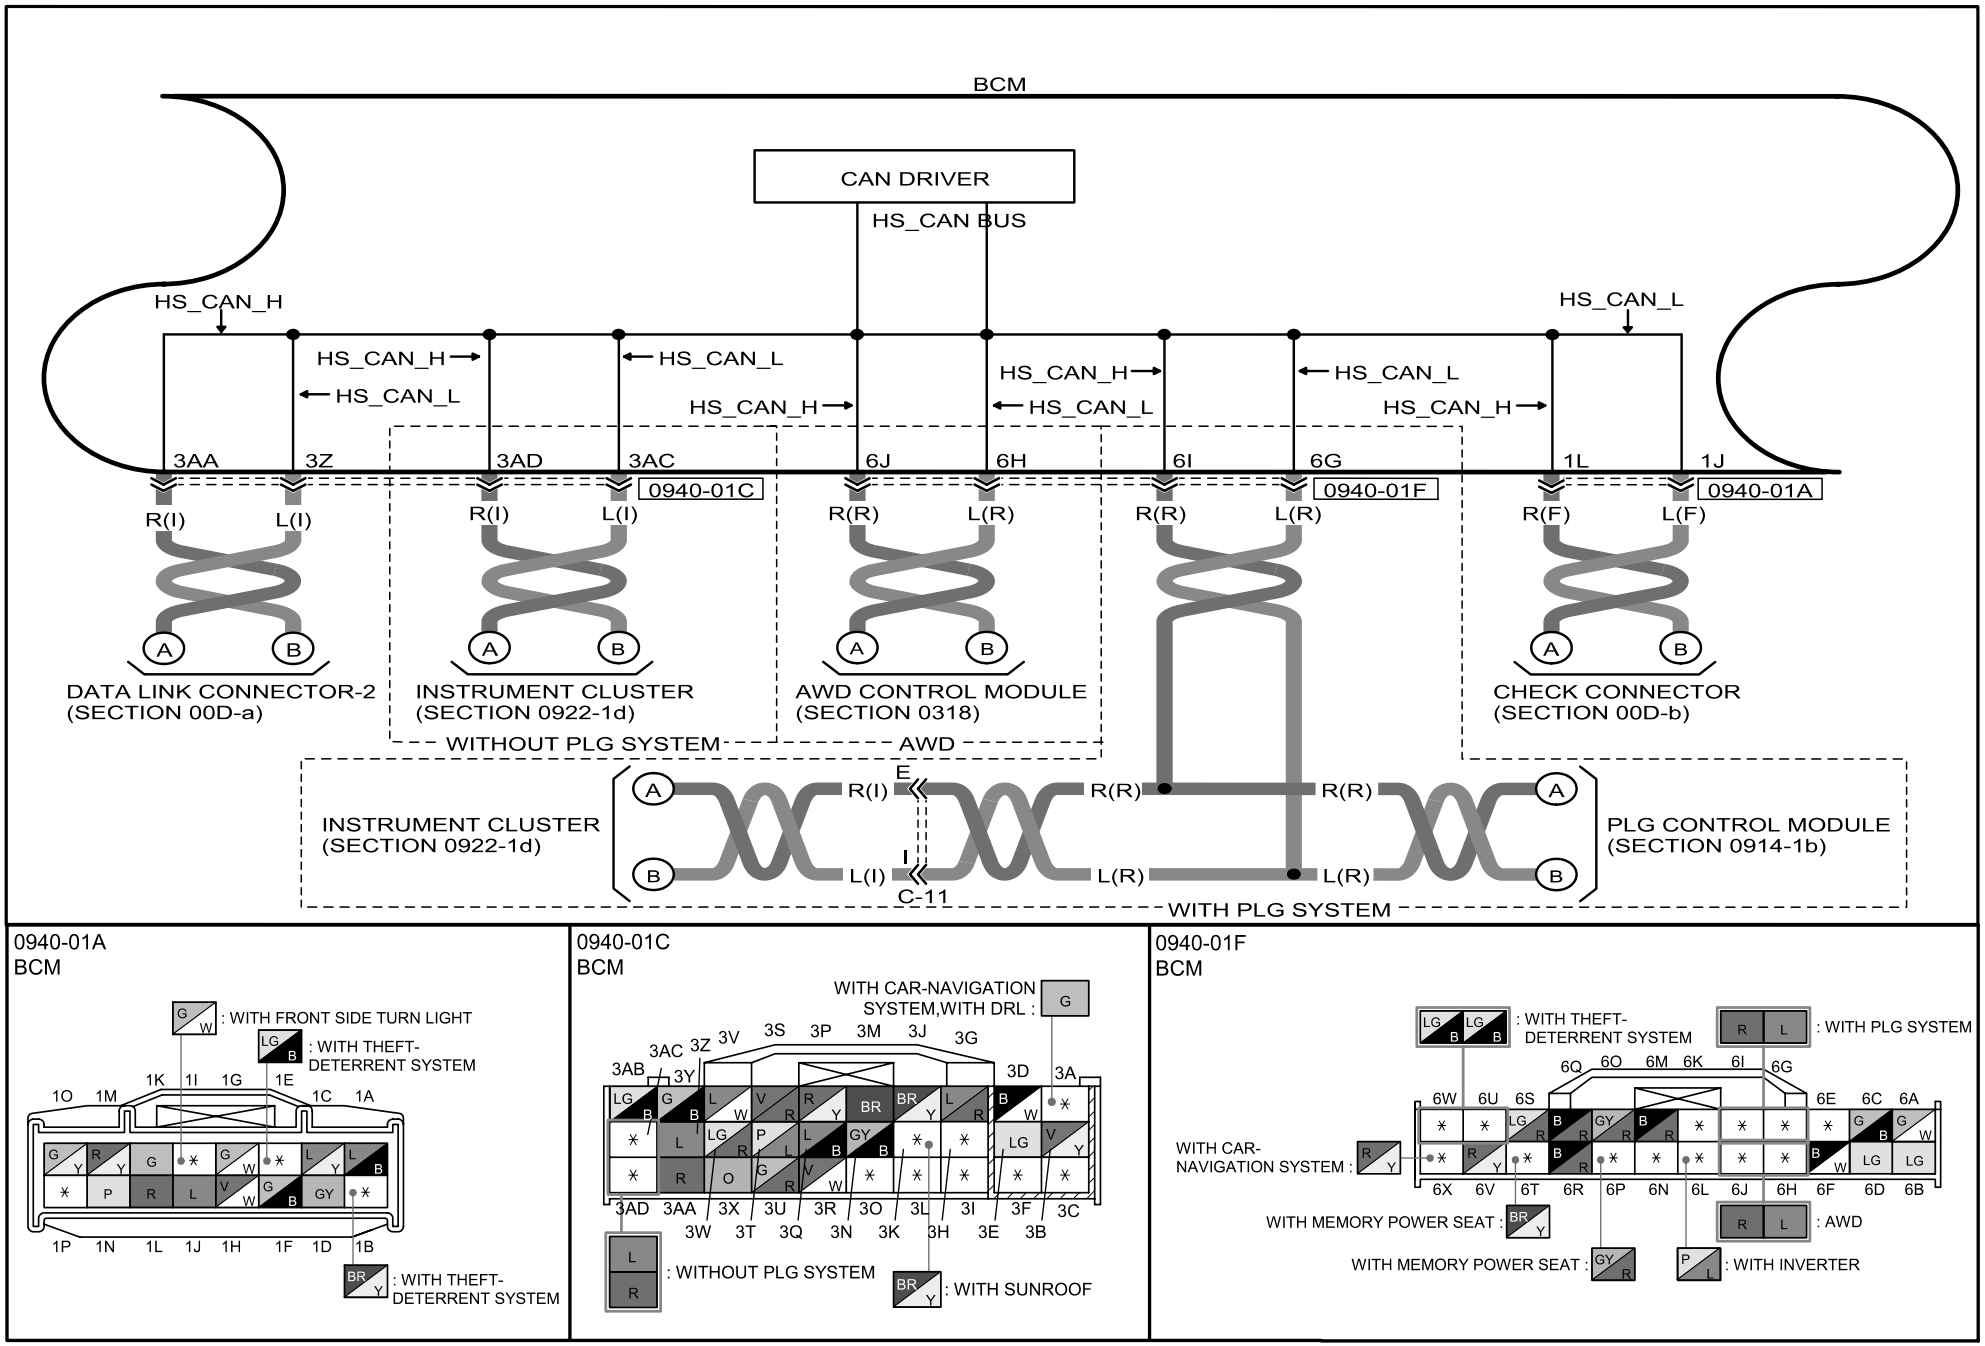



Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

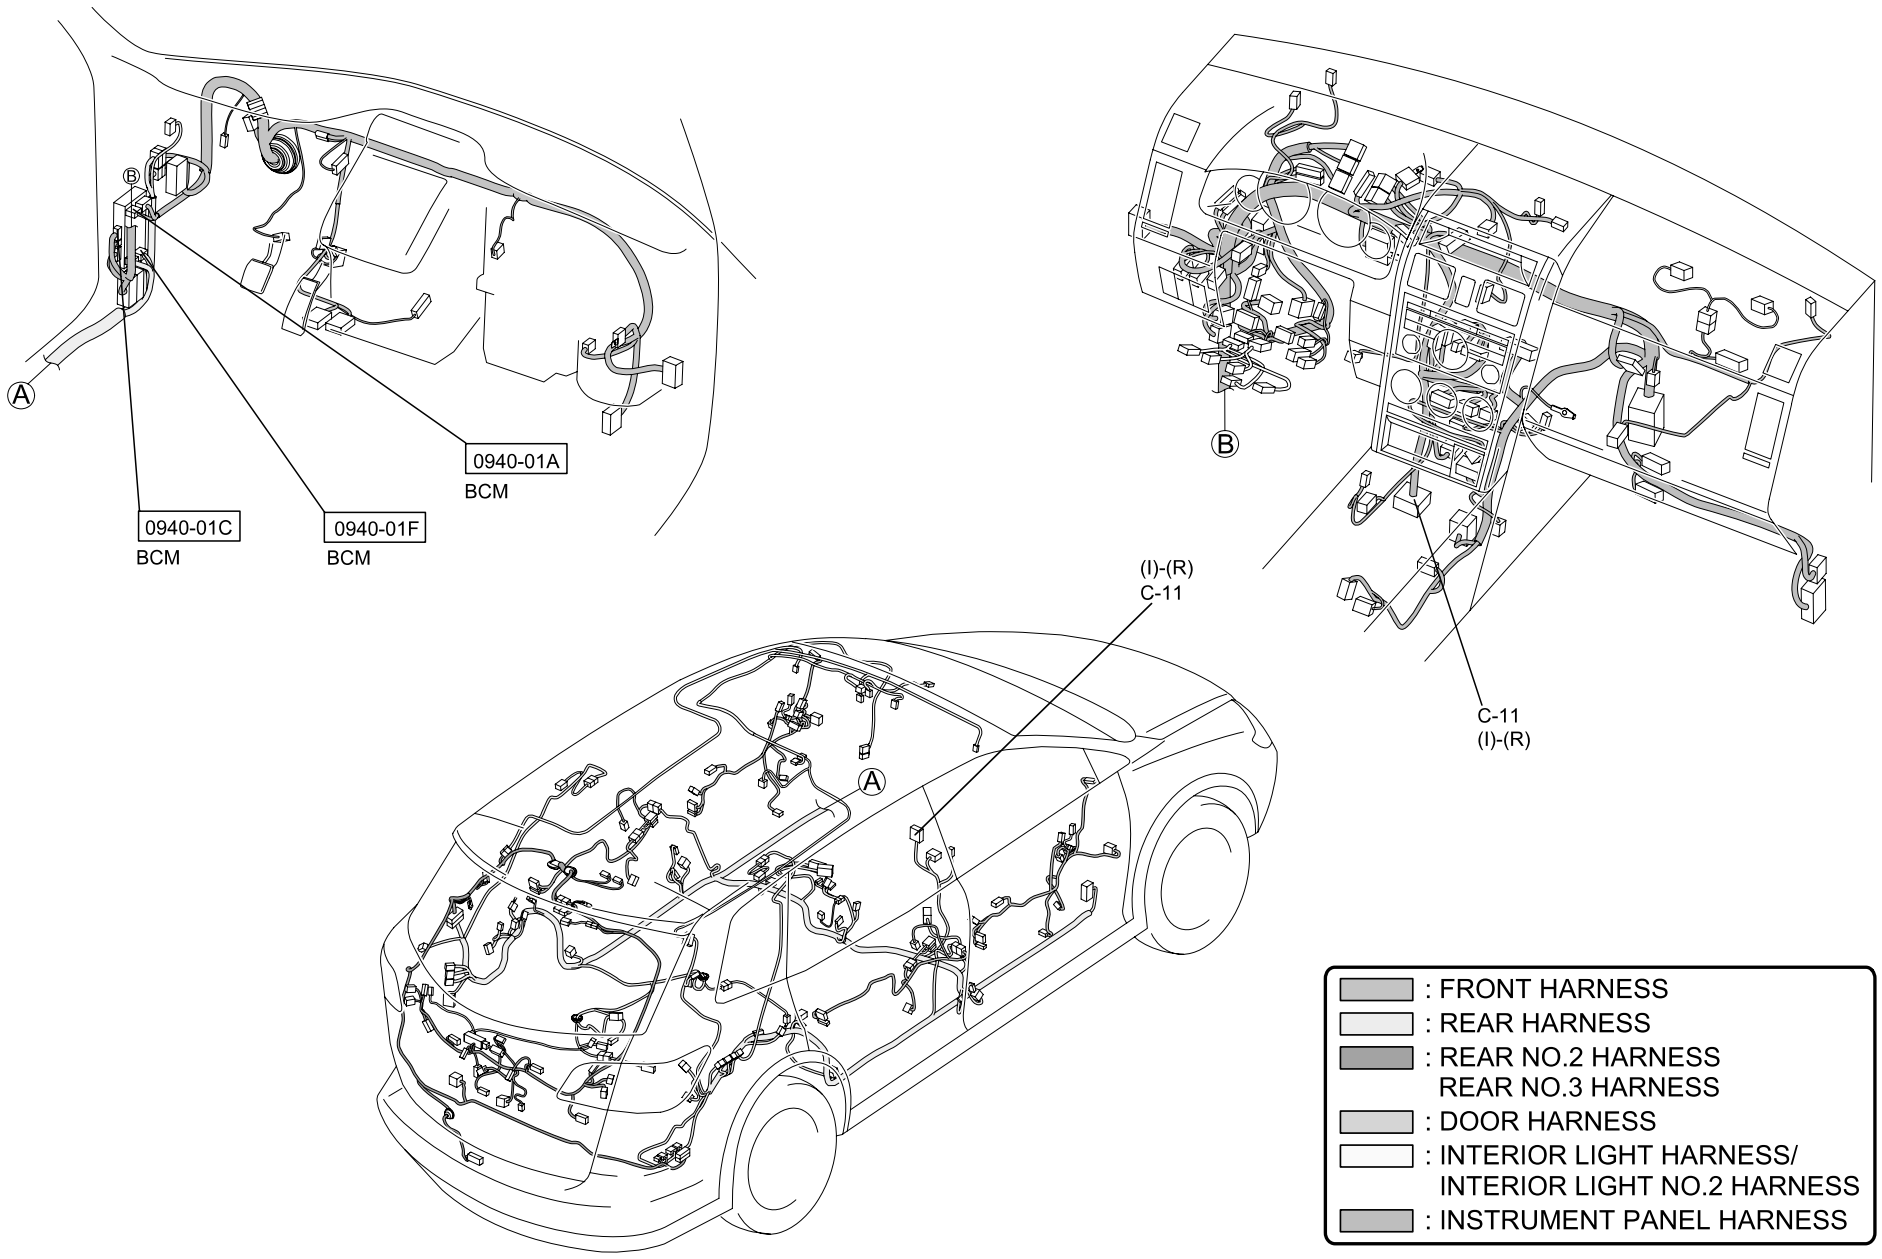
A
B
0940-01A
BCM
0940-01C
BCM
0940-01F
BCM
B
(I)-(R)
C-11
C-11
(I)-(R)
A
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

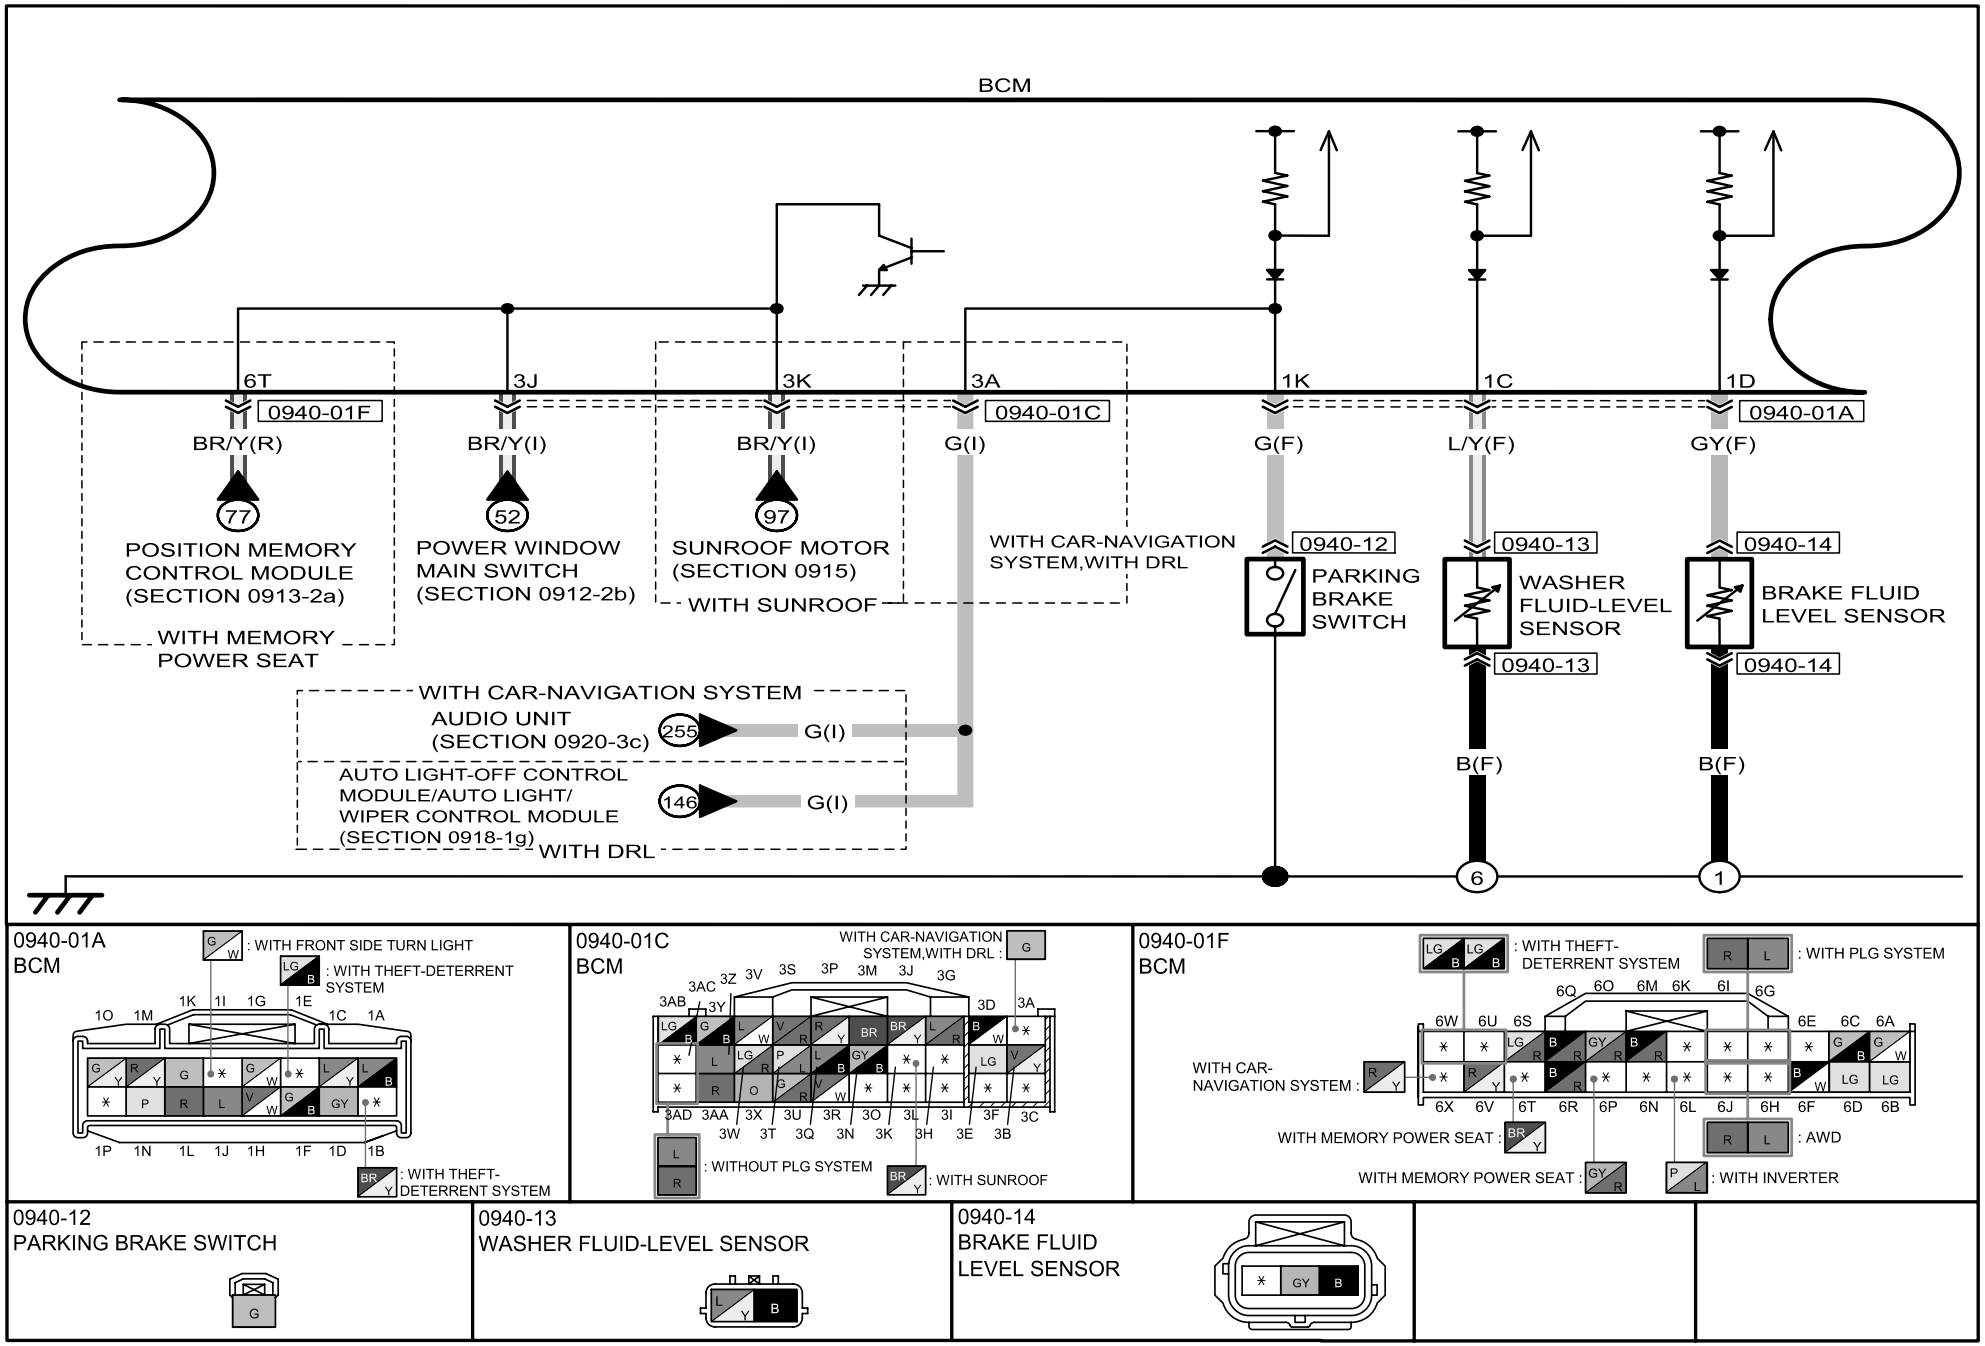


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

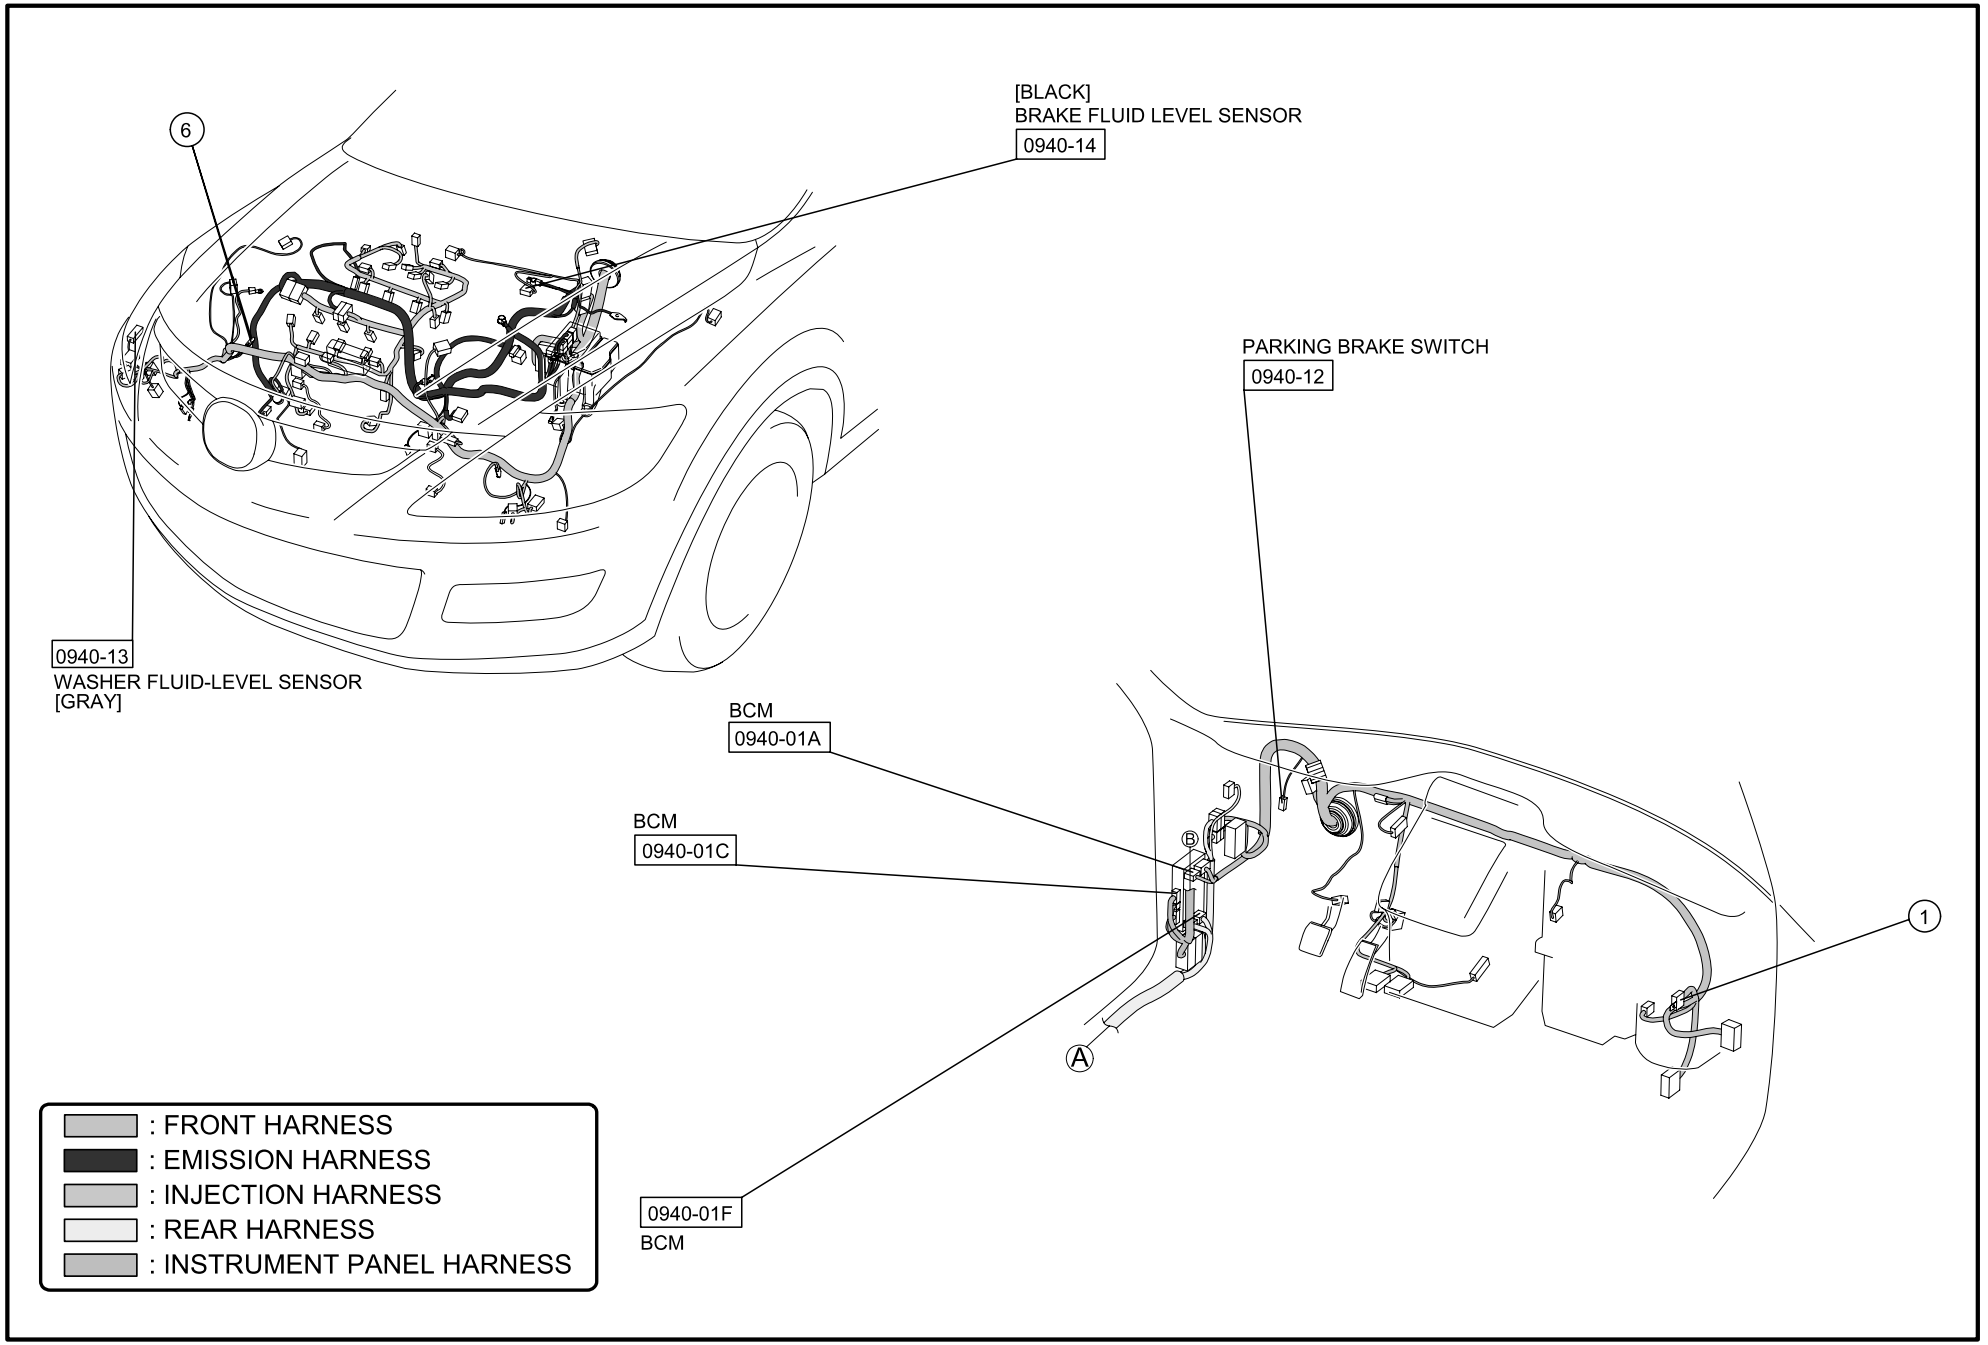

6
[BLACK]
BRAKE FLUID LEVEL SENSOR
0940-14
PARKING BRAKE SWITCH
0940-12
0940-13
WASHER FLUID-LEVEL SENSOR
[GRAY]
BCM
0940-01A
BCM
0940-01C
B
A
1
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS
0940-01F
BCM

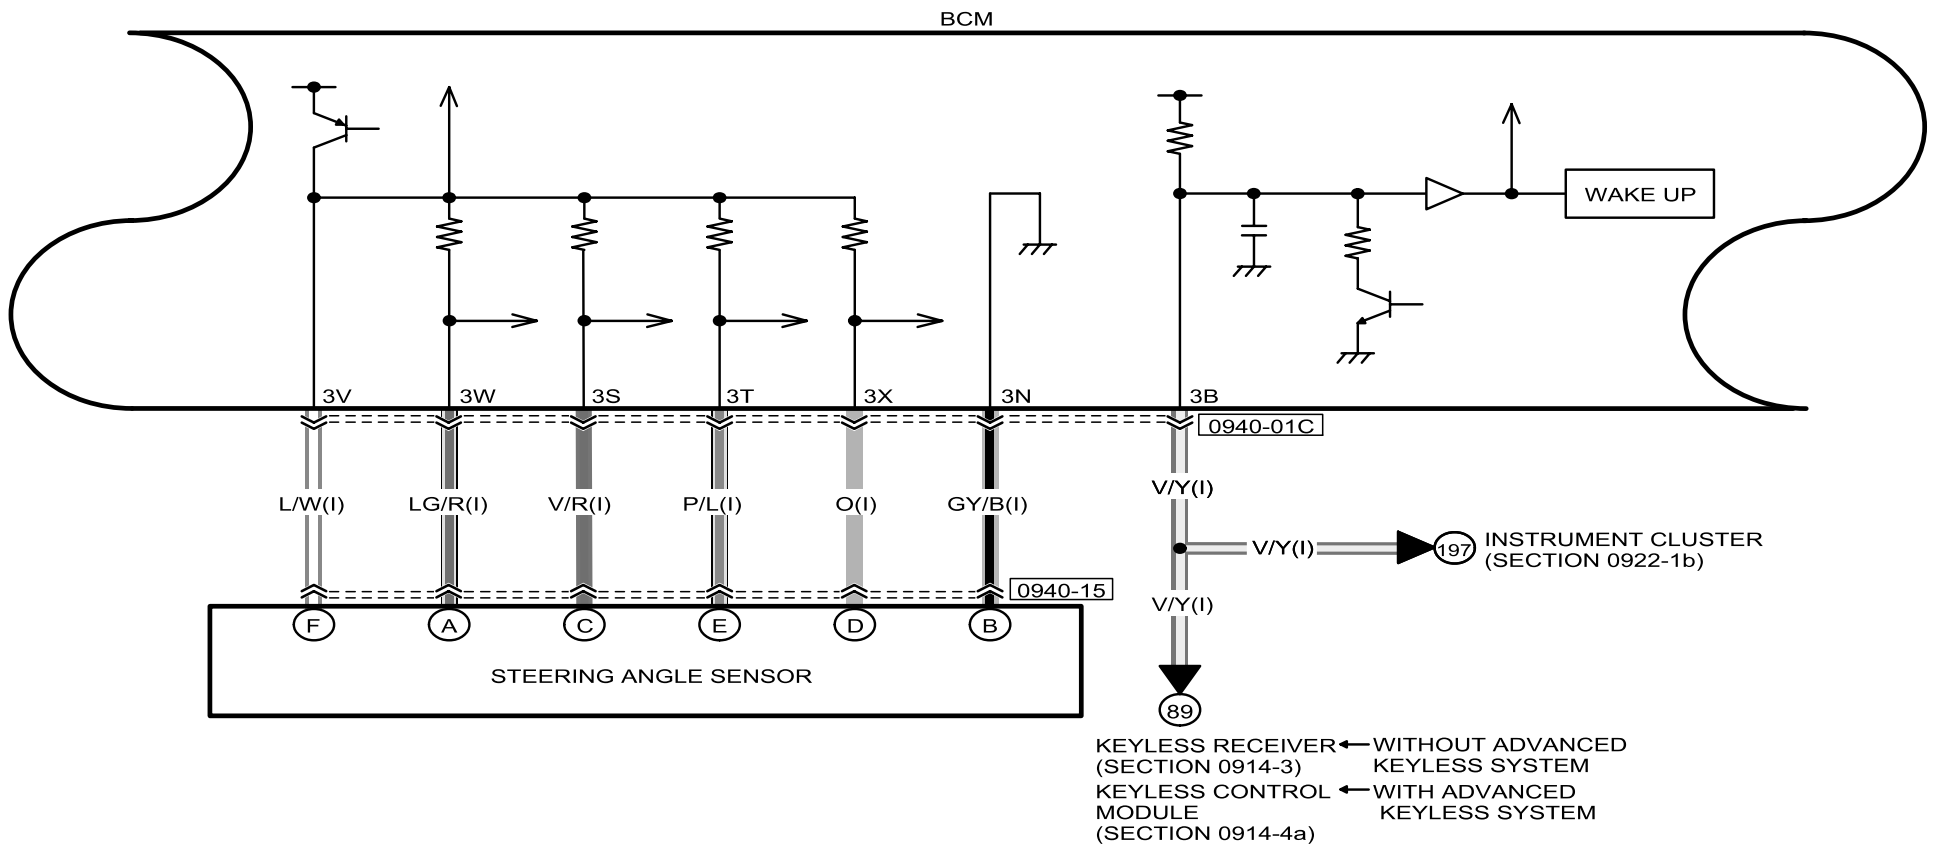


0940-01C
BCM

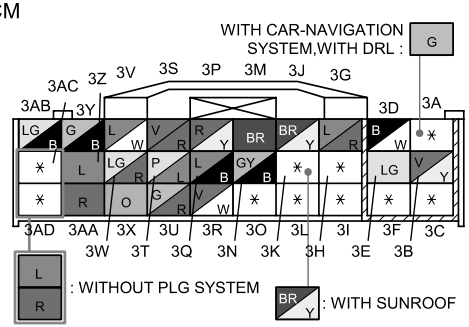


0940-15
STEERING ANGLE SENSOR

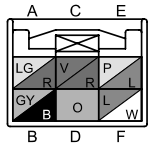

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

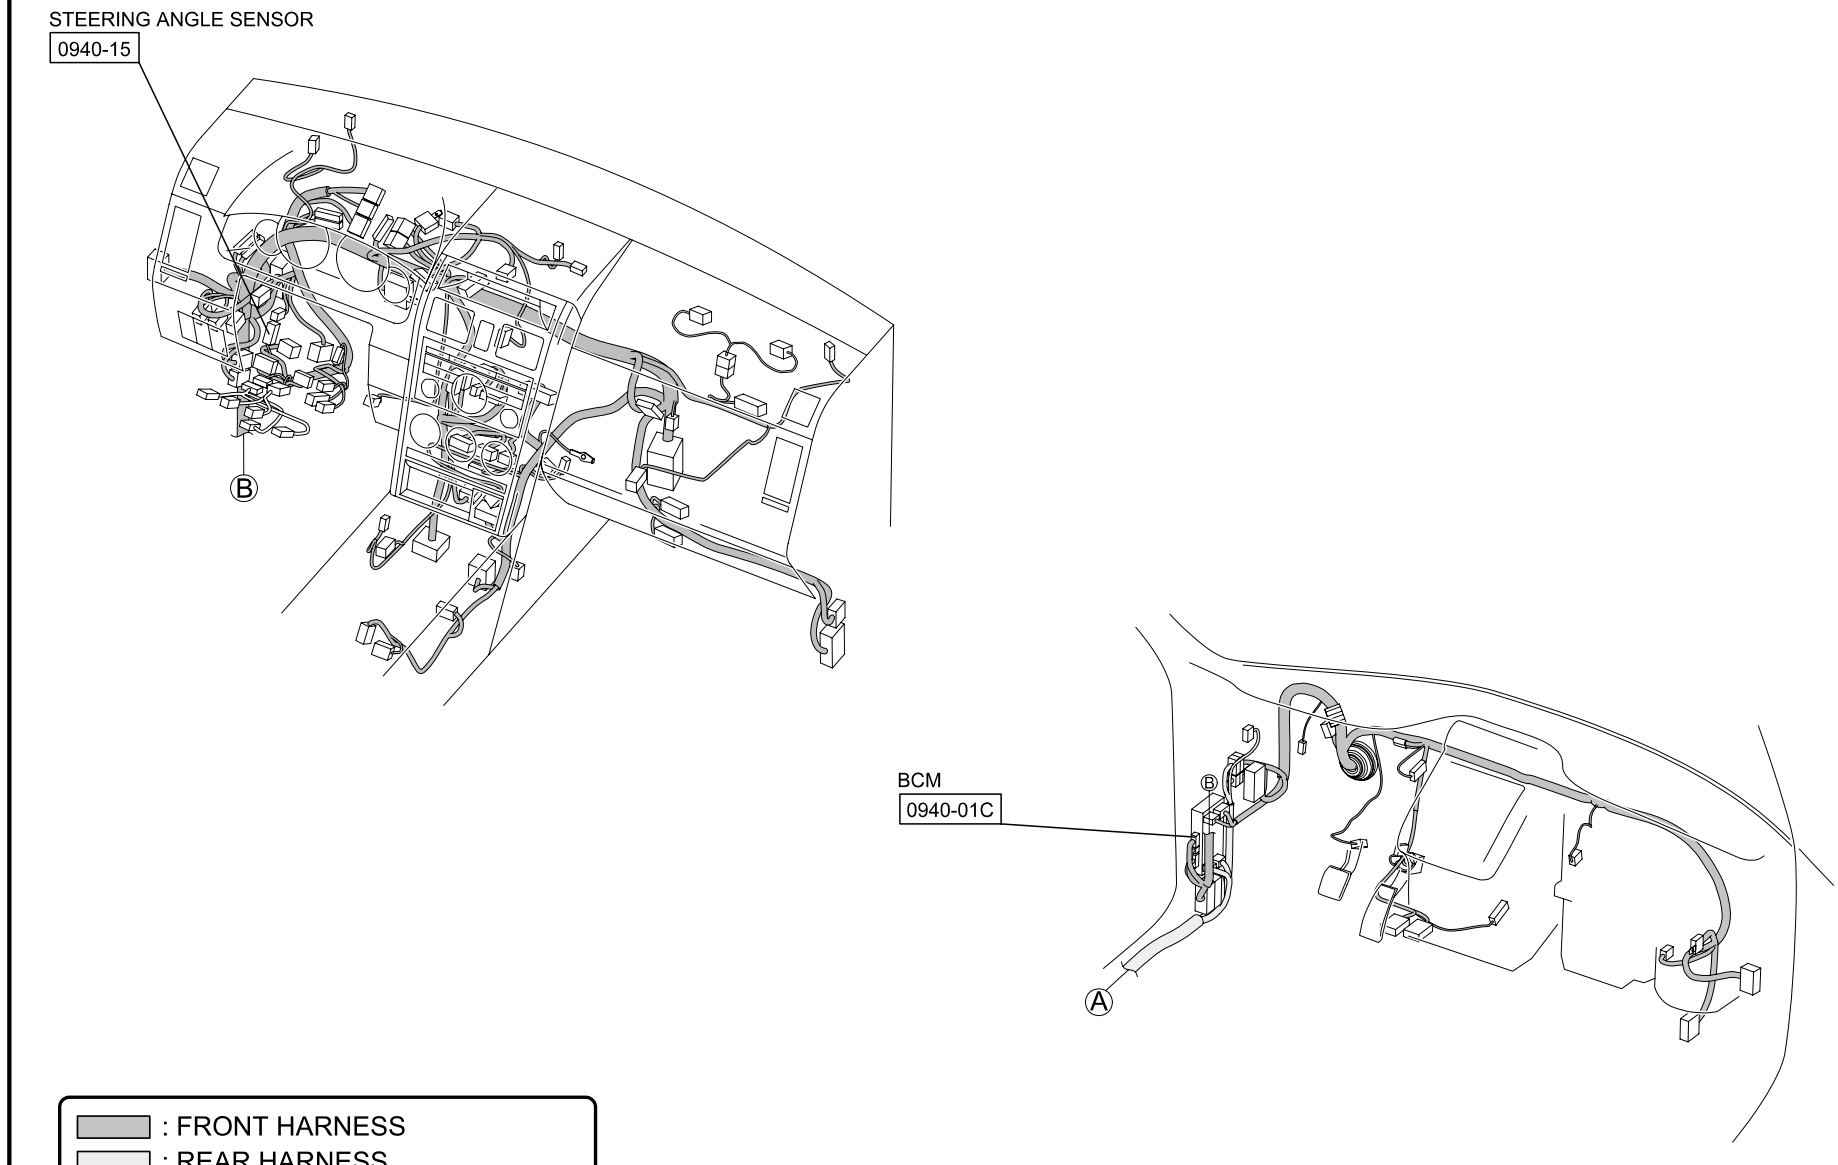
STEERING ANGLE SENSOR
0940-15
B
BCM
0940-01C
A
: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

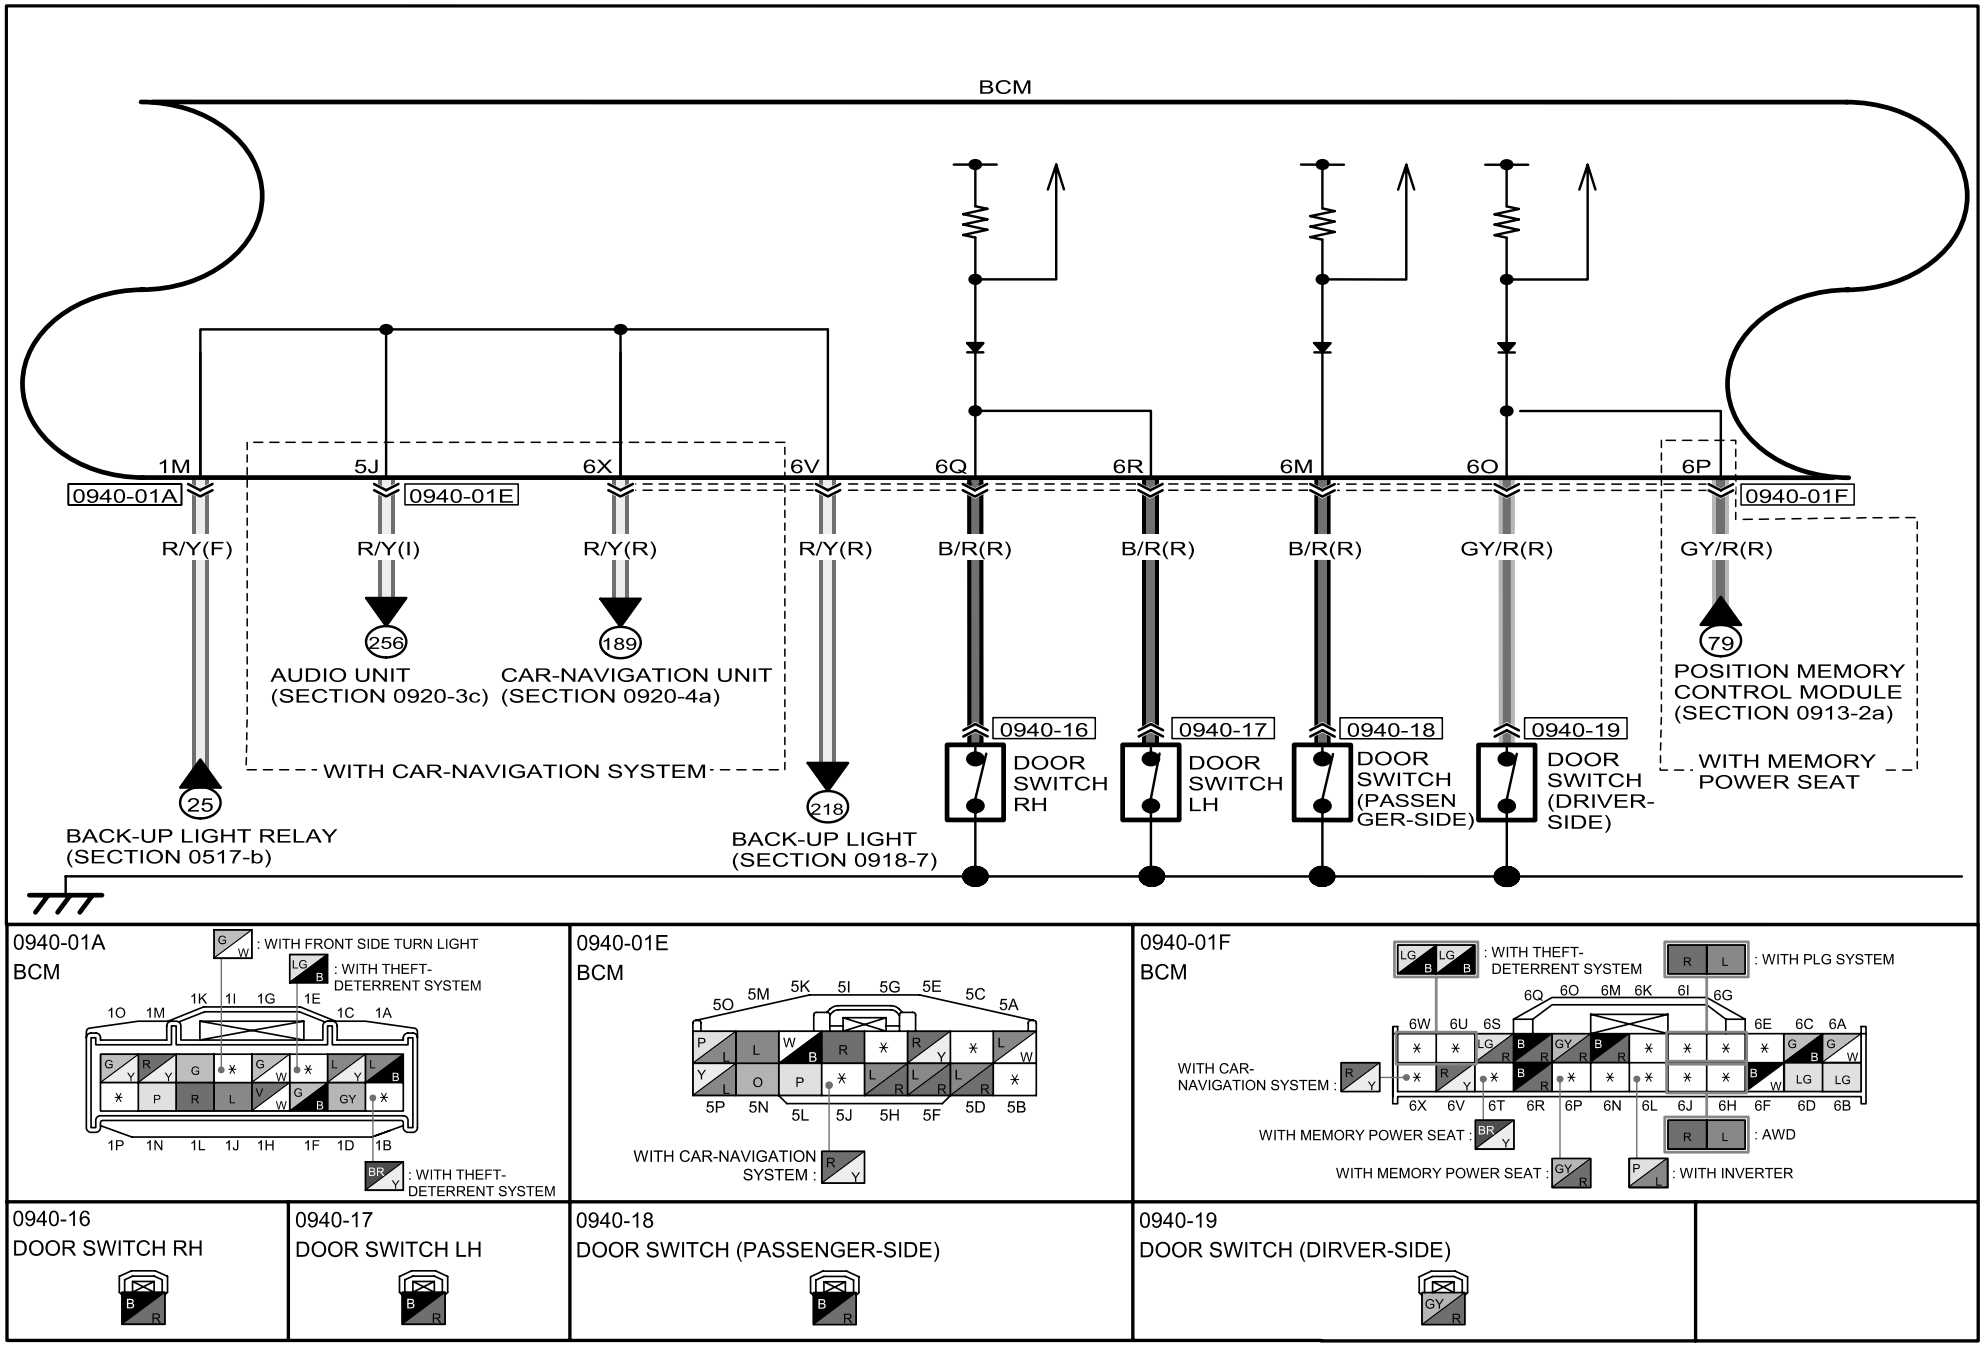

0940-01A
BCM

0940-01E
BCM

0940-01F
BCM


0940-16
DOOR SWITCH RH


0940-17
DOOR SWITCH LH

0940-18
DOOR SWITCH (PASSENGER-SIDE)


0940-19
DOOR SWITCH (DIRVER-SIDE)


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

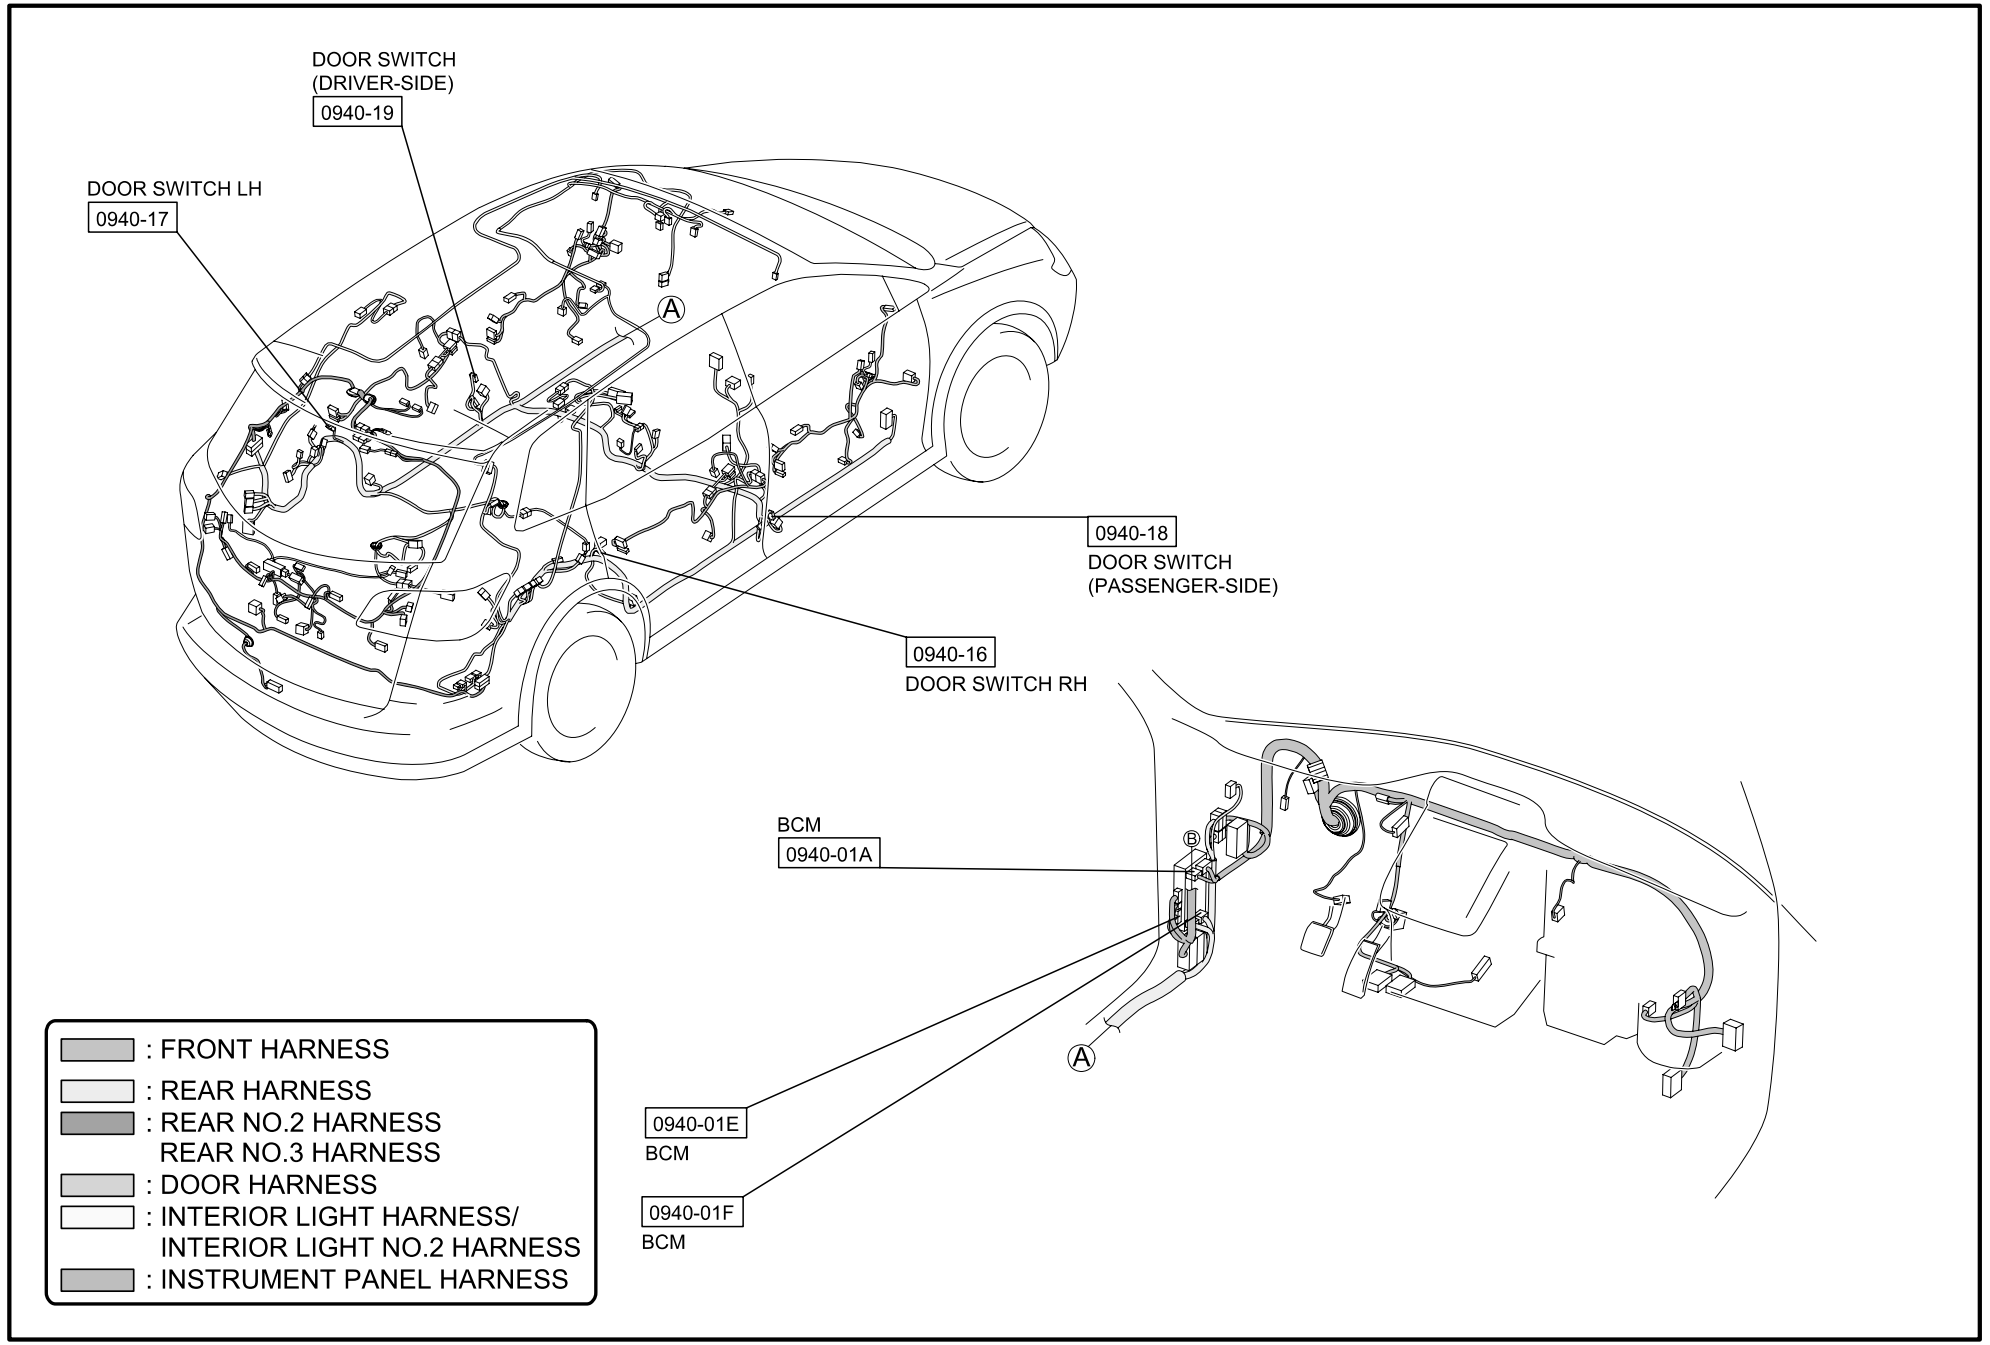
DOOR SWITCH
(DRIVER-SIDE)
0940-19
DOOR SWITCH LH
0940-17
A
0940-18
DOOR SWITCH
(PASSENGER-SIDE)
0940-16
DOOR SWITCH RH
BCM
0940-01A
B
A
0940-01E
BCM
0940-01F
BCM
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

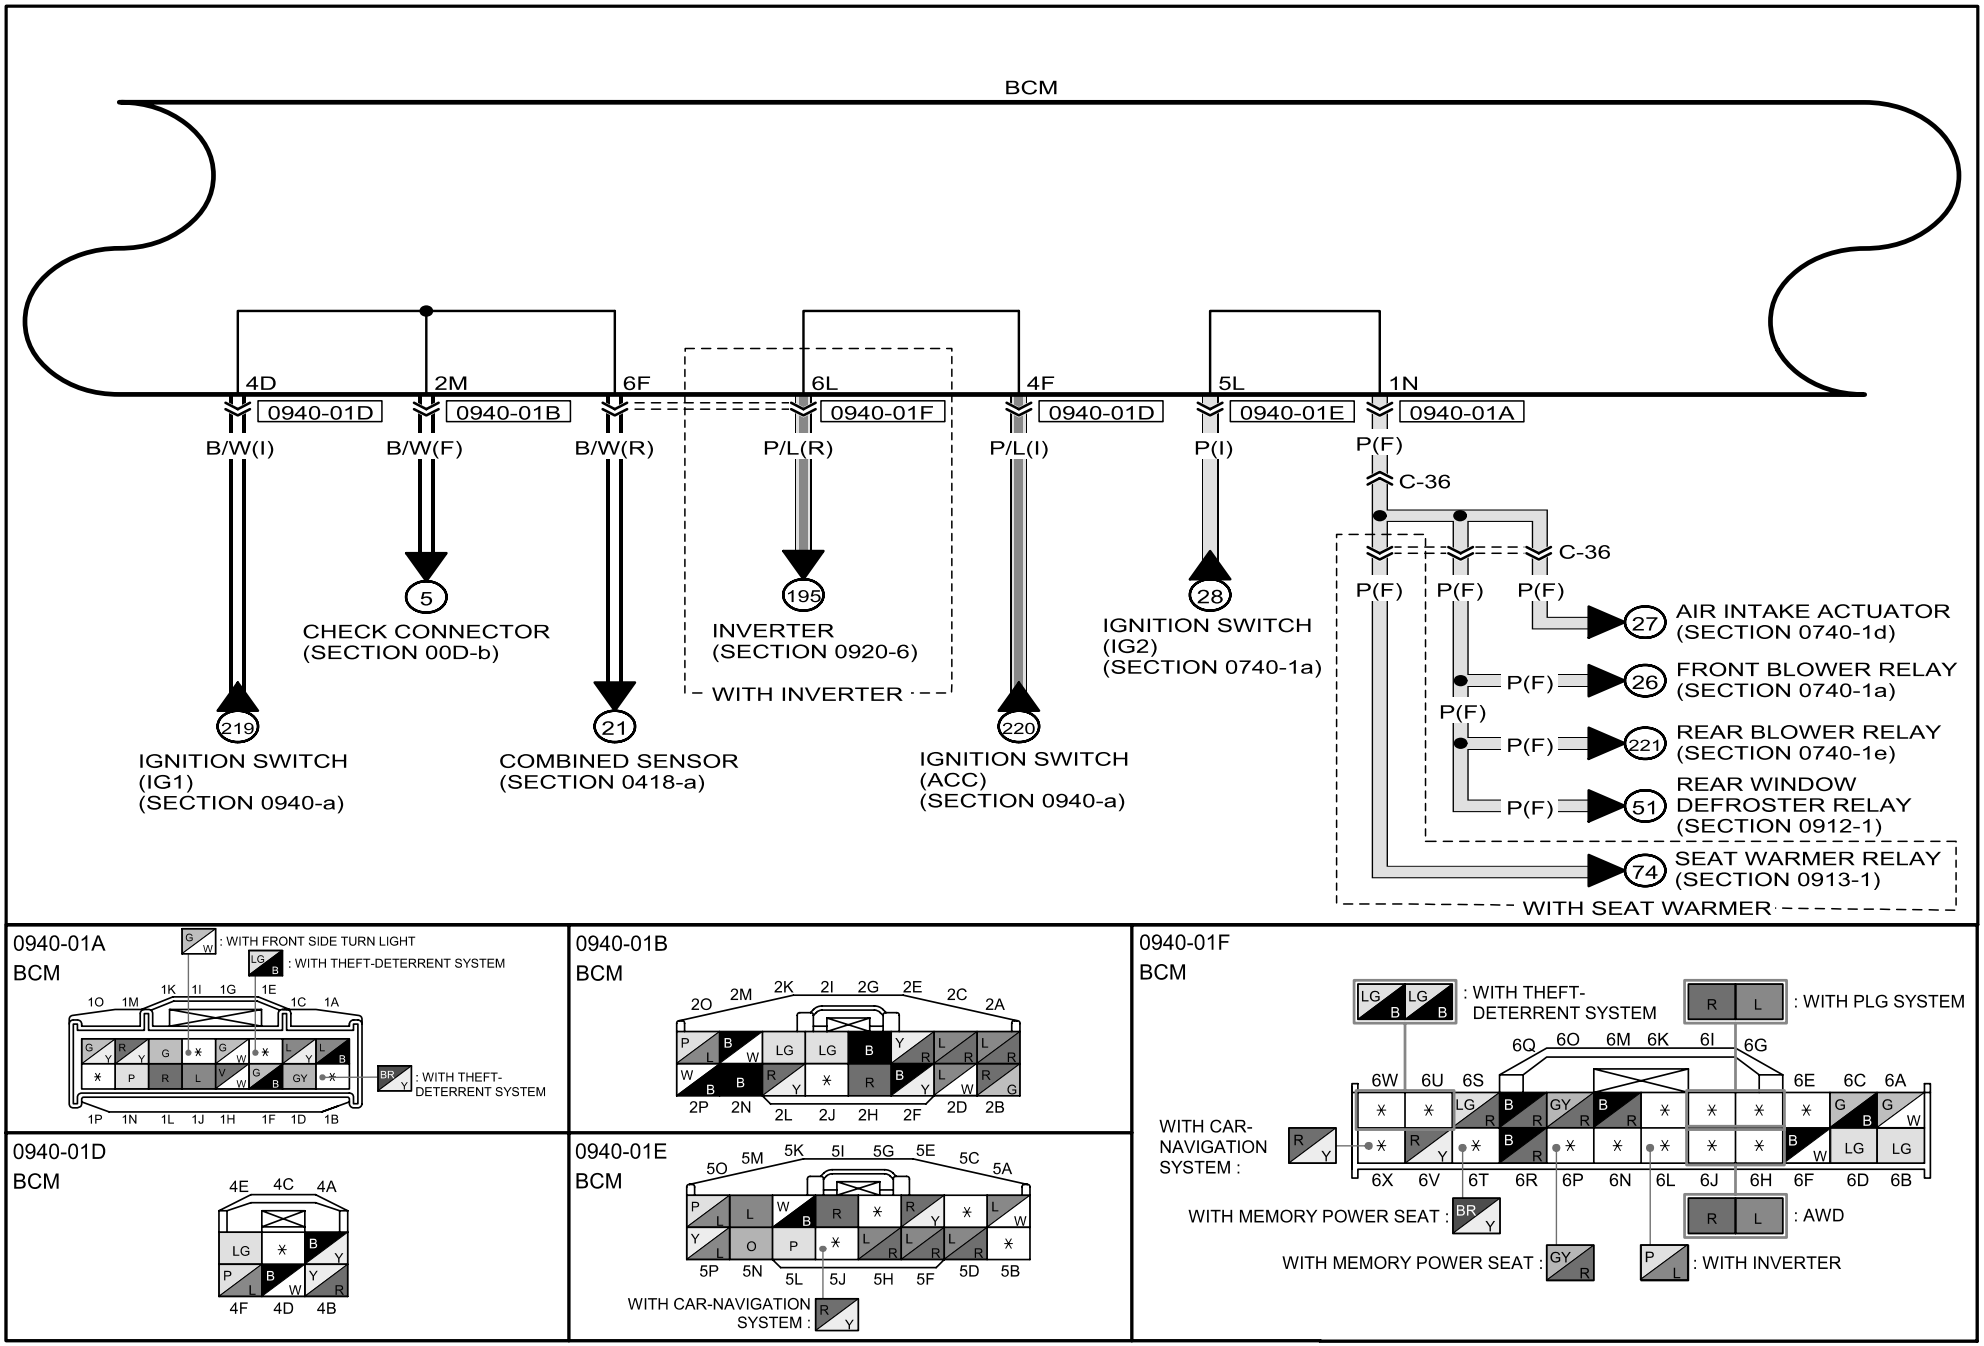



Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

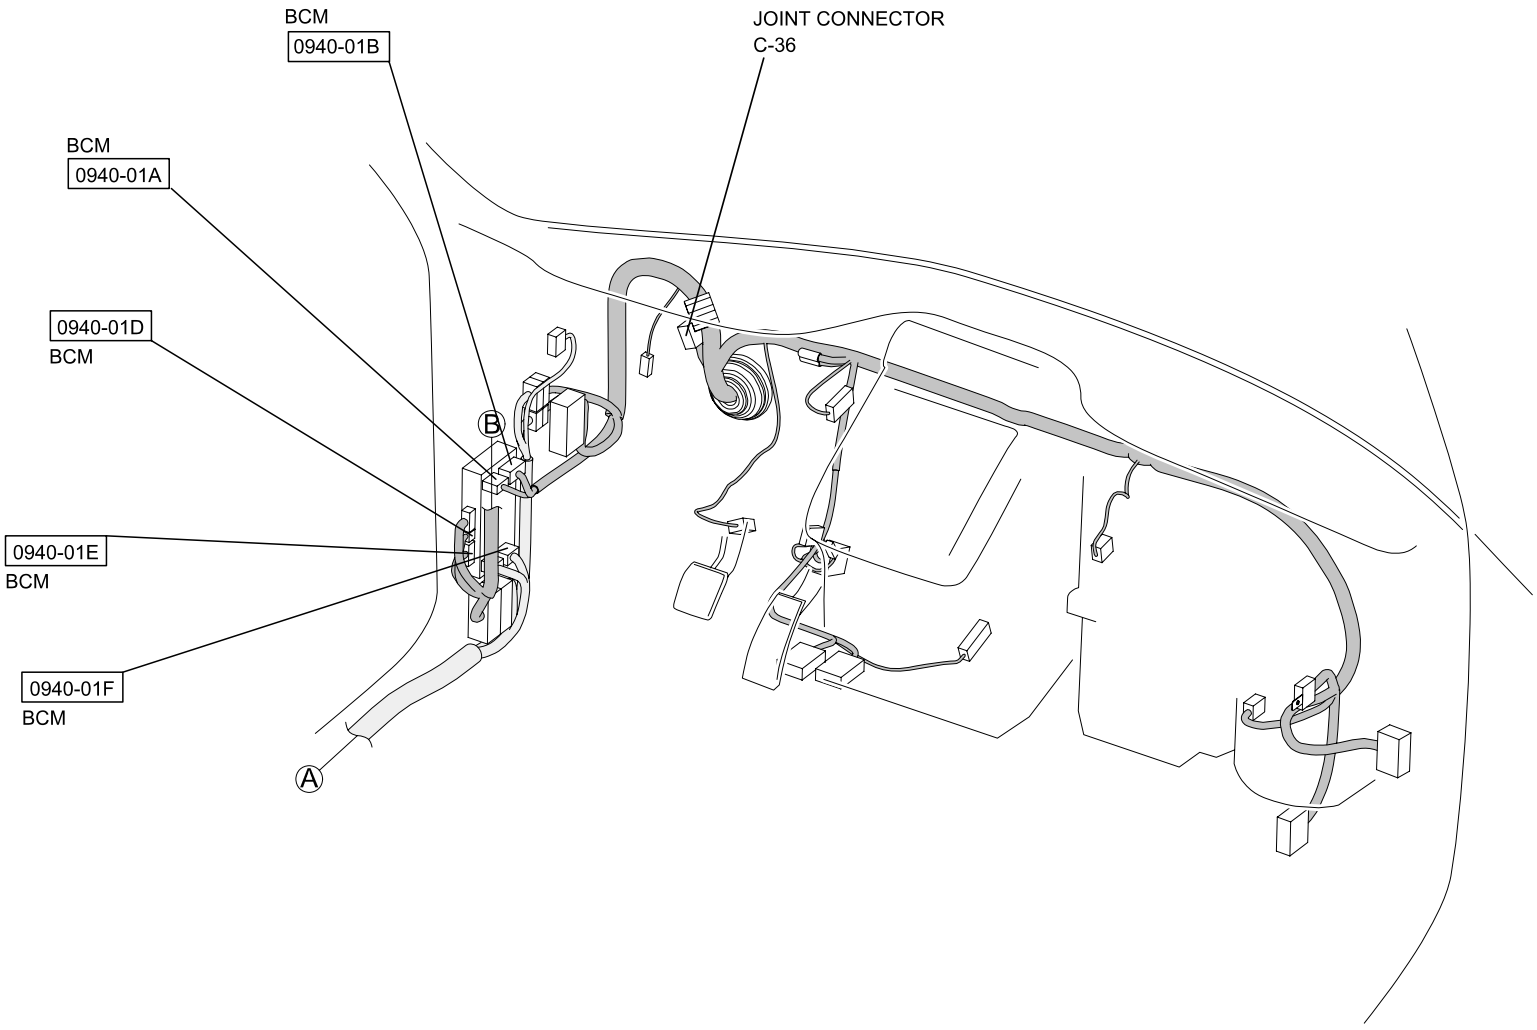
BCM
0940-01B
JOINT CONNECTOR
C-36
BCM
0940-01A
0940-01D
BCM
0940-01E
BCM
0940-01F
BCM
B
A
: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

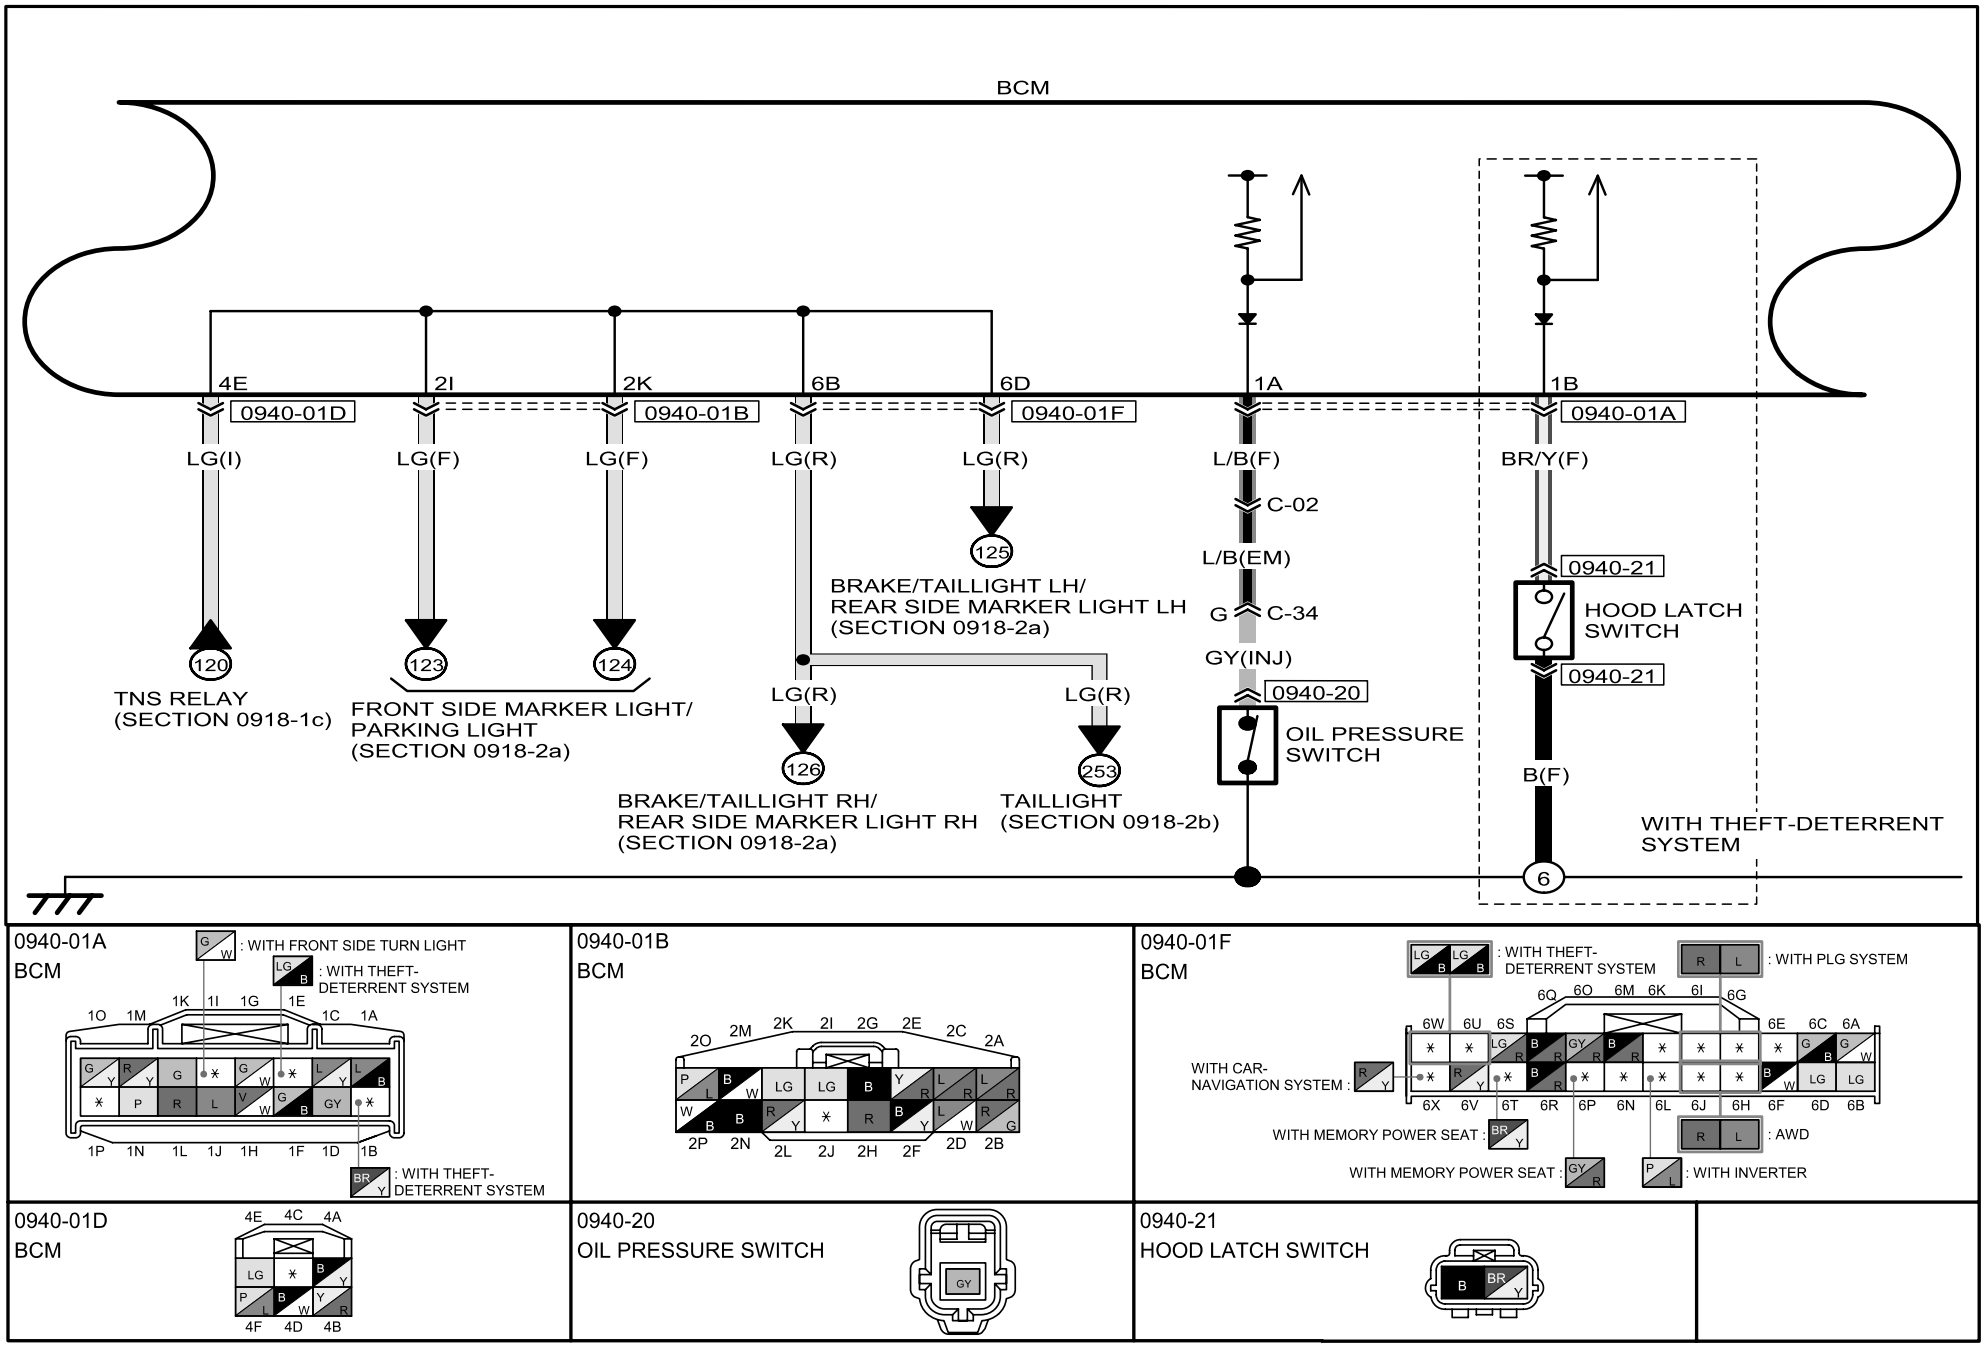

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

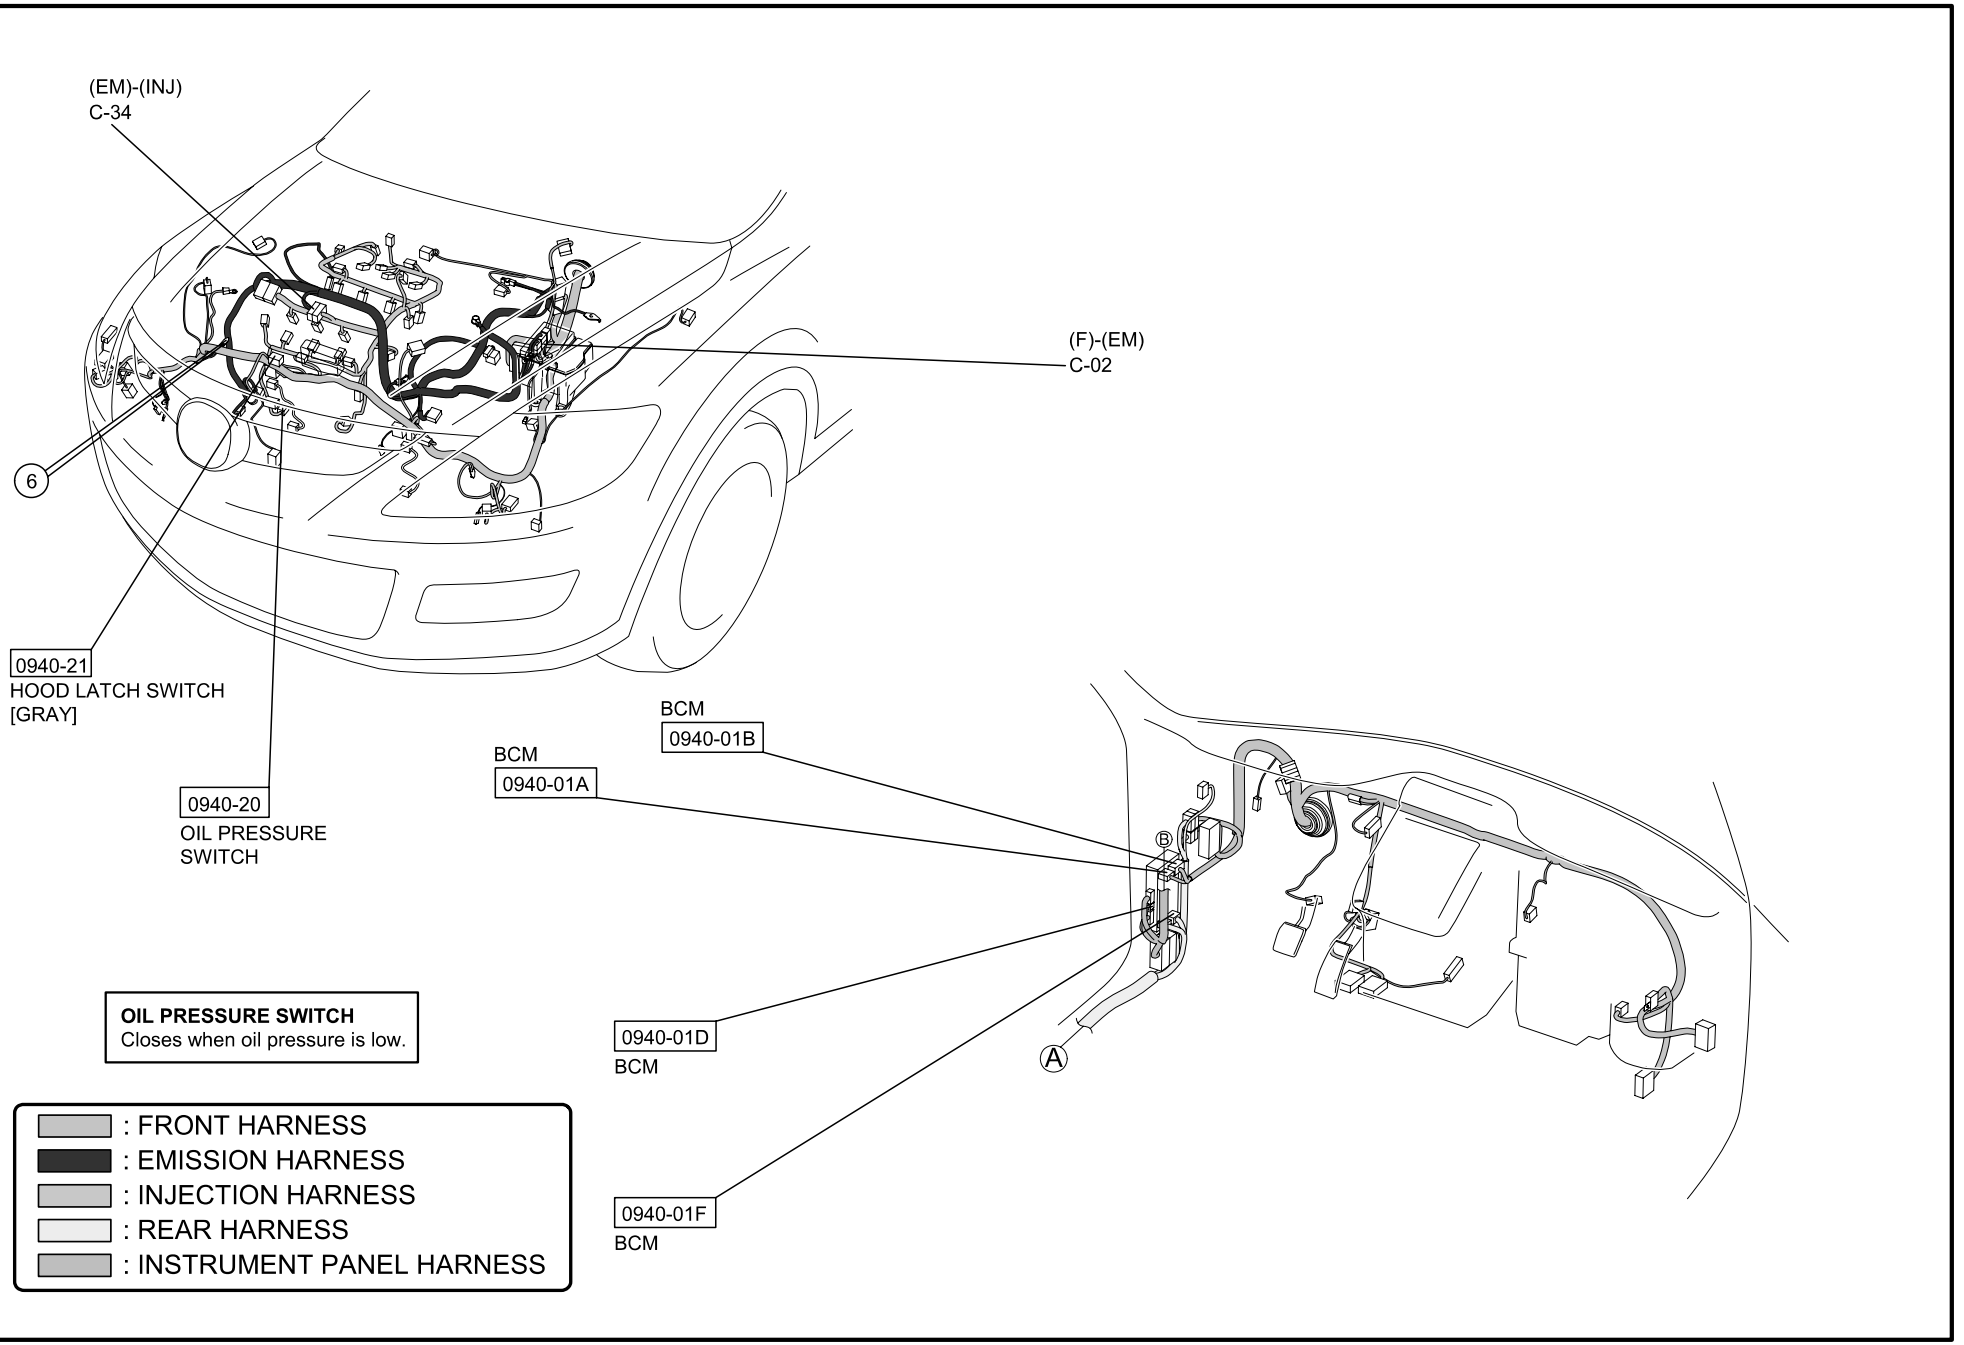
(EM)-(INJ)
C-34
(F)-(EM)
C-02
6
0940-21
HOOD LATCH SWITCH
[GRAY]
0940-20
OIL PRESSURE
SWITCH
BCM
0940-01B
BCM
0940-01A
B
A
0940-01D
BCM
0940-01F
BCM
OIL PRESSURE SWITCH
Closes when oil pressure is low.
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

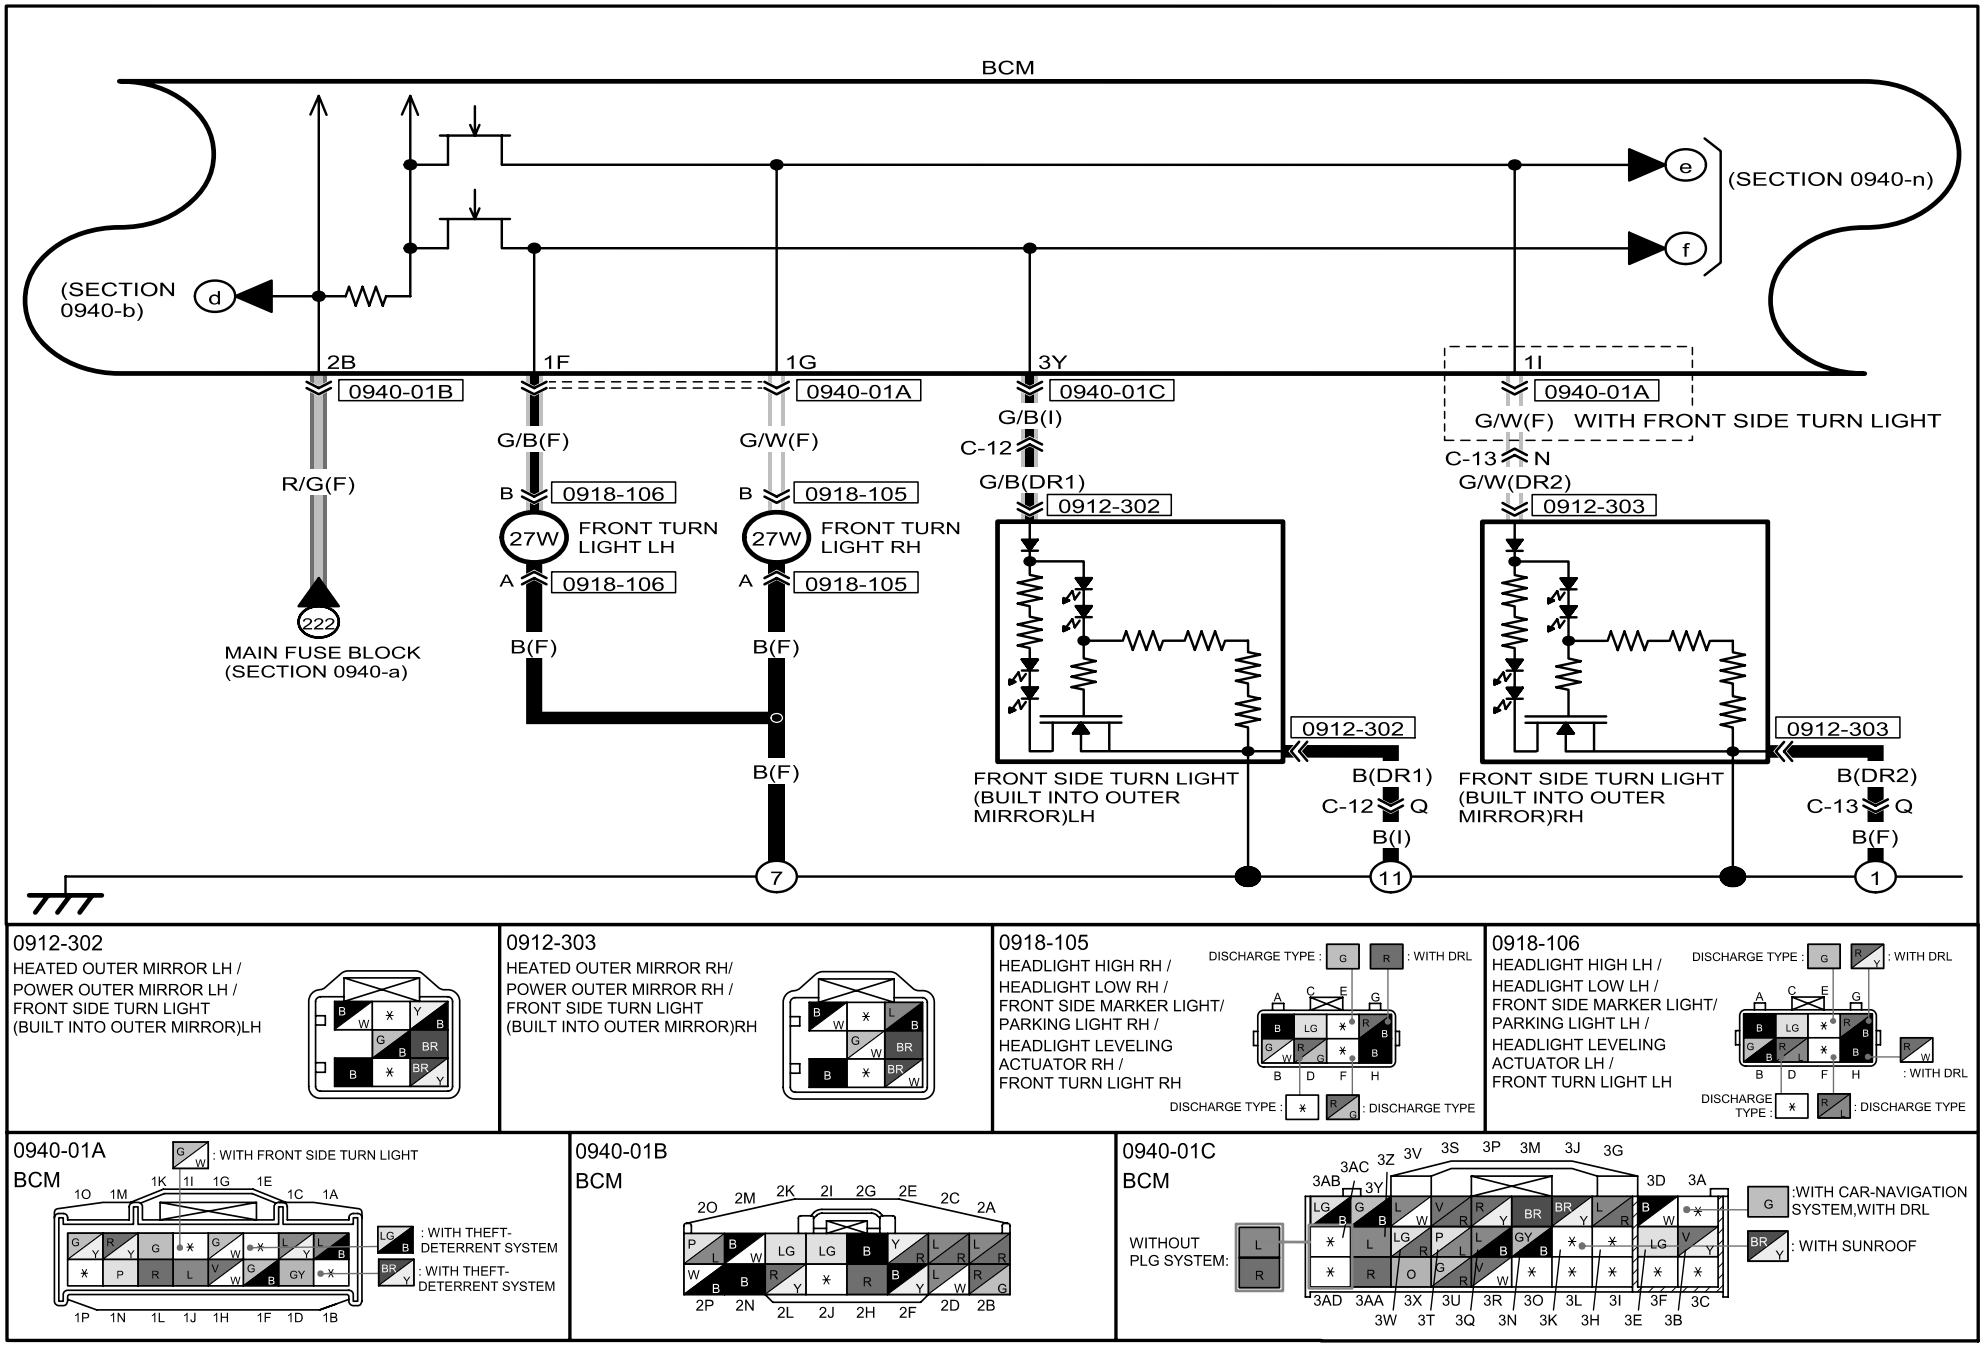

0912-302
HEATED OUTER MIRROR LH /
POWER OUTER MIRROR LH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)LH

0912-303
HEATED OUTER MIRROR RH/
POWER OUTER MIRROR RH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)RH

0918-105
HEADLIGHT HIGH RH /
HEADLIGHT LOW RH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT RH /
HEADLIGHT LEVELING
ACTUATOR RH /
FRONT TURN LIGHT RH


0918-106
HEADLIGHT HIGH LH /
HEADLIGHT LOW LH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT LH /
HEADLIGHT LEVELING
ACTUATOR LH /
FRONT TURN LIGHT LH


0940-01A
BCM


0940-01B
BCM

0940-01C
BCM


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

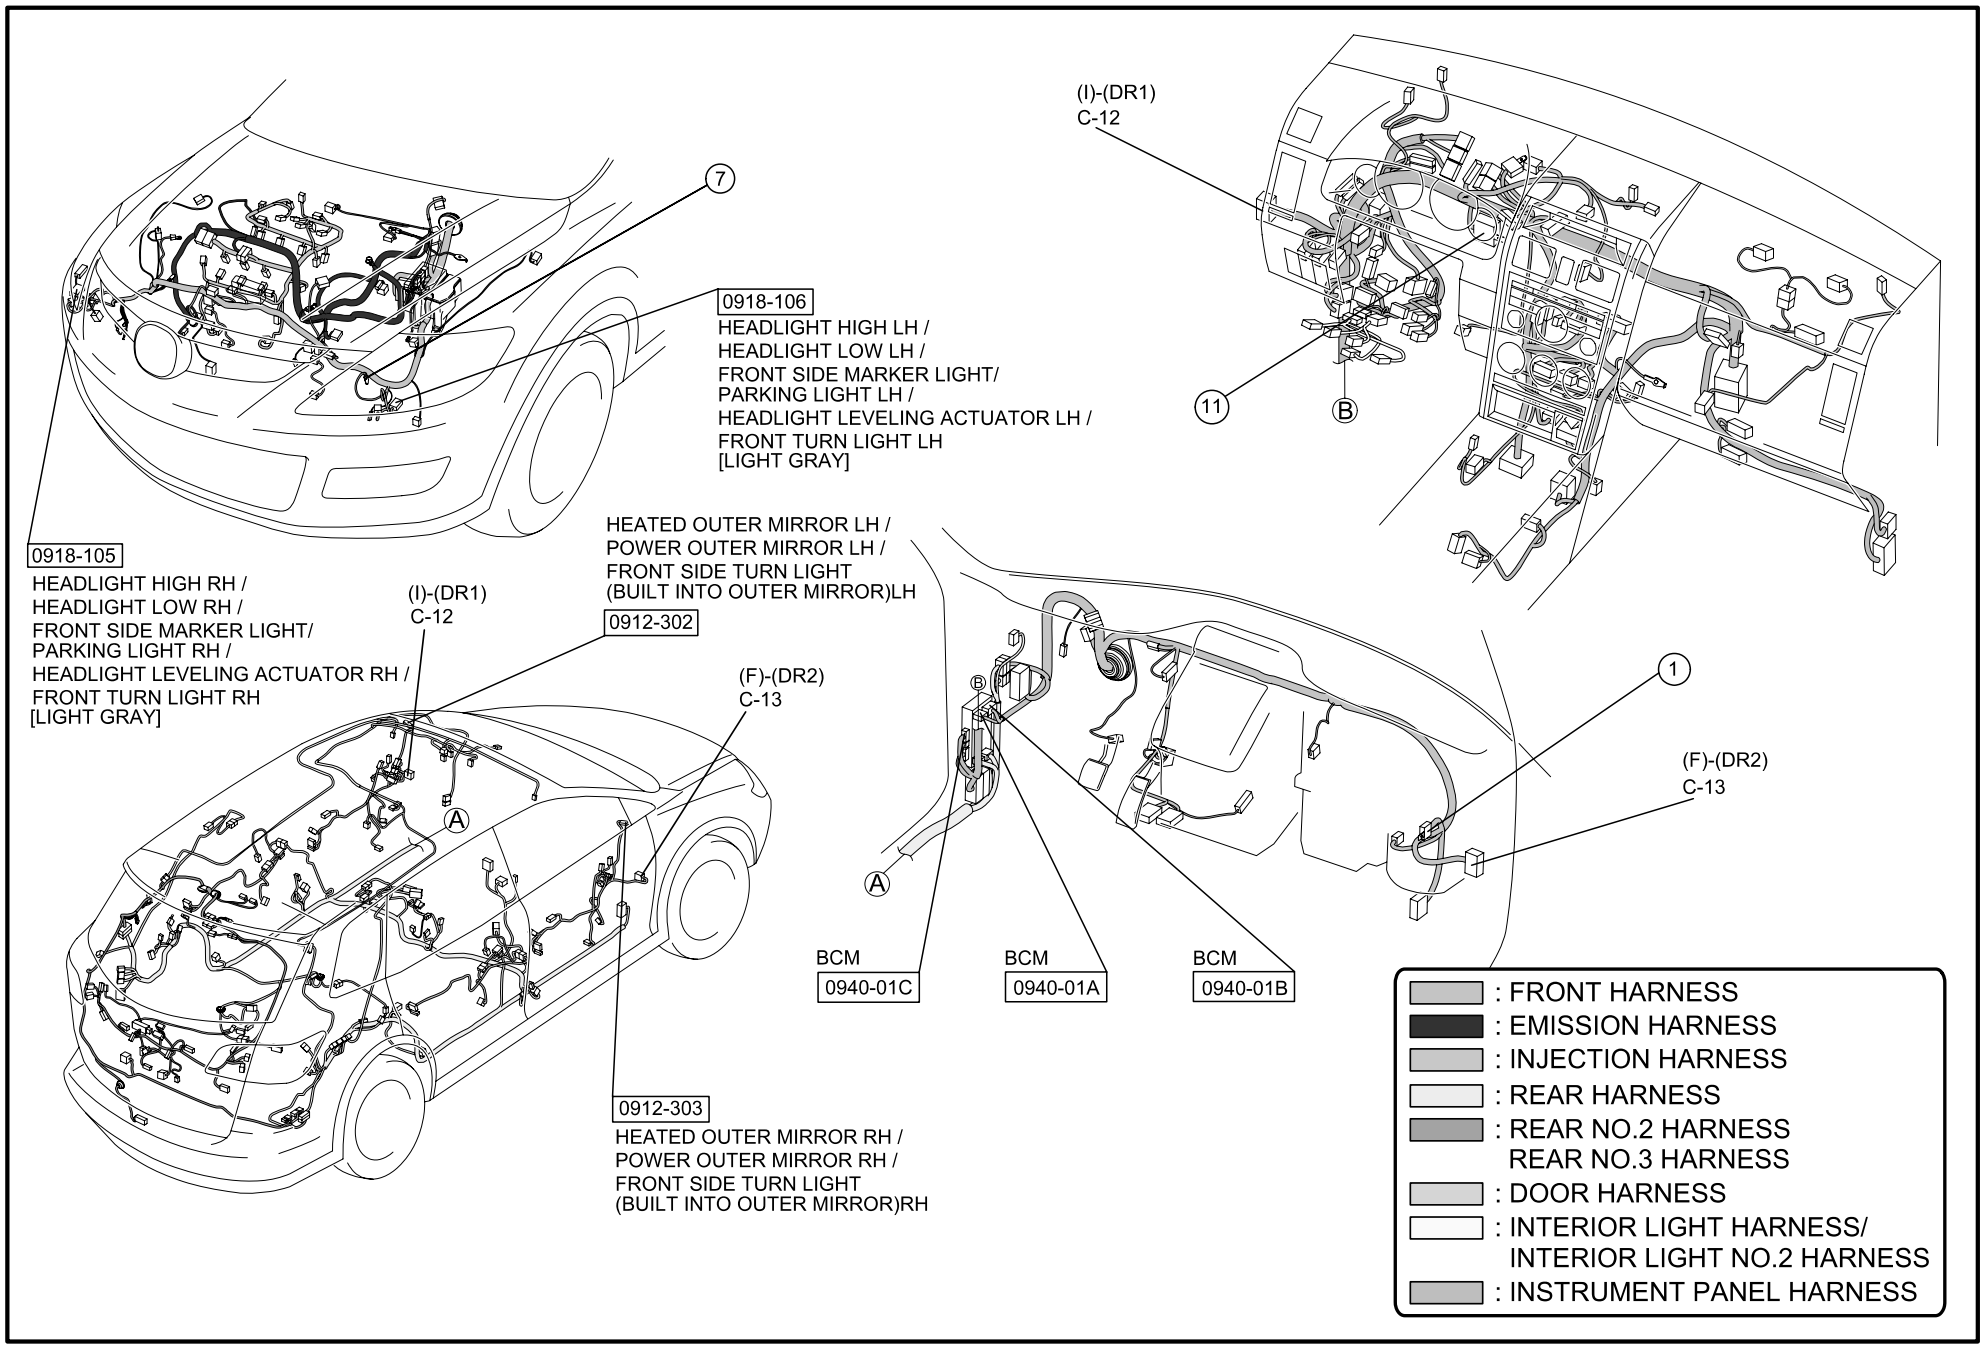

7
0918-106
HEADLIGHT HIGH LH /
HEADLIGHT LOW LH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT LH /
HEADLIGHT LEVELING ACTUATOR LH /
FRONT TURN LIGHT LH
[LIGHT GRAY]
(I)-(DR1)
C-12
11
B
0918-105
HEADLIGHT HIGH RH /
HEADLIGHT LOW RH /
FRONT SIDE MARKER LIGHT/
PARKING LIGHT RH /
HEADLIGHT LEVELING ACTUATOR RH /
FRONT TURN LIGHT RH
[LIGHT GRAY]
(I)-(DR1)
C-12
0912-302
HEATED OUTER MIRROR LH /
POWER OUTER MIRROR LH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)LH
(F)-(DR2)
C-13
A
B
1
(F)-(DR2)
C-13
BCM
0940-01C
BCM
0940-01A
BCM
0940-01B
0912-303
HEATED OUTER MIRROR RH /
POWER OUTER MIRROR RH /
FRONT SIDE TURN LIGHT
(BUILT INTO OUTER MIRROR)RH
: FRONT HARNESS
: EMISSION HARNESS
: INJECTION HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

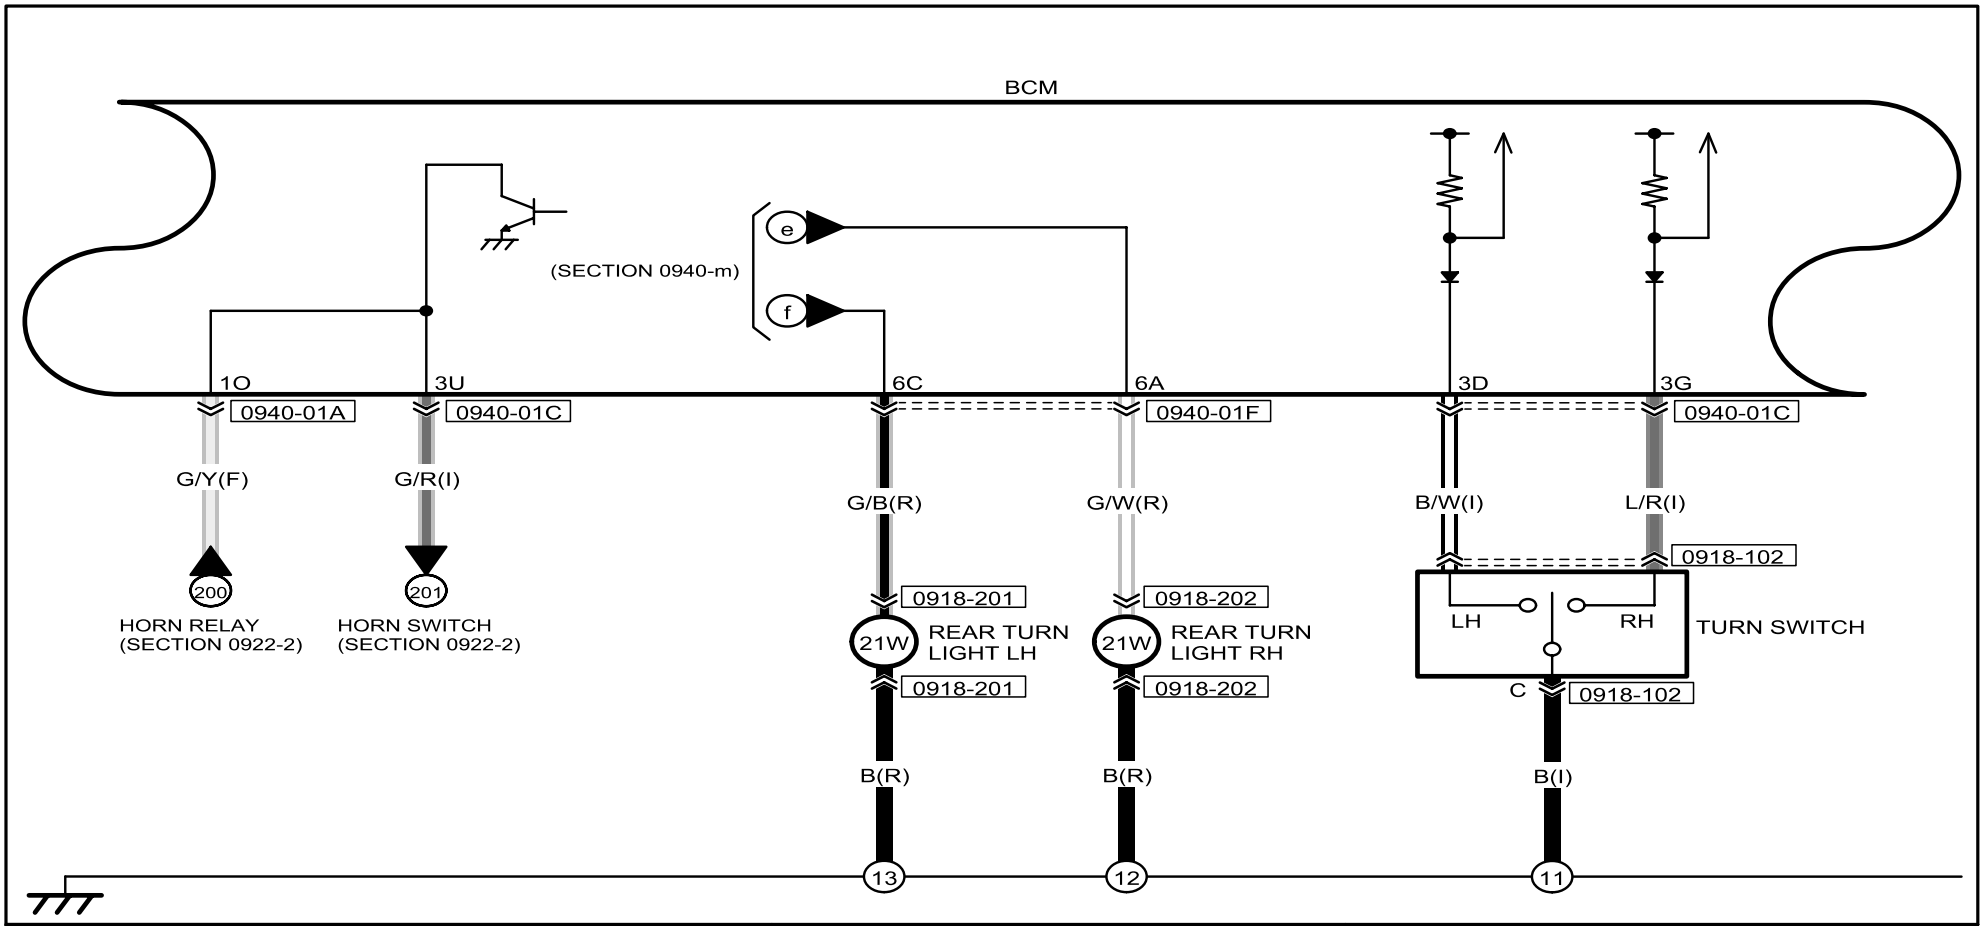


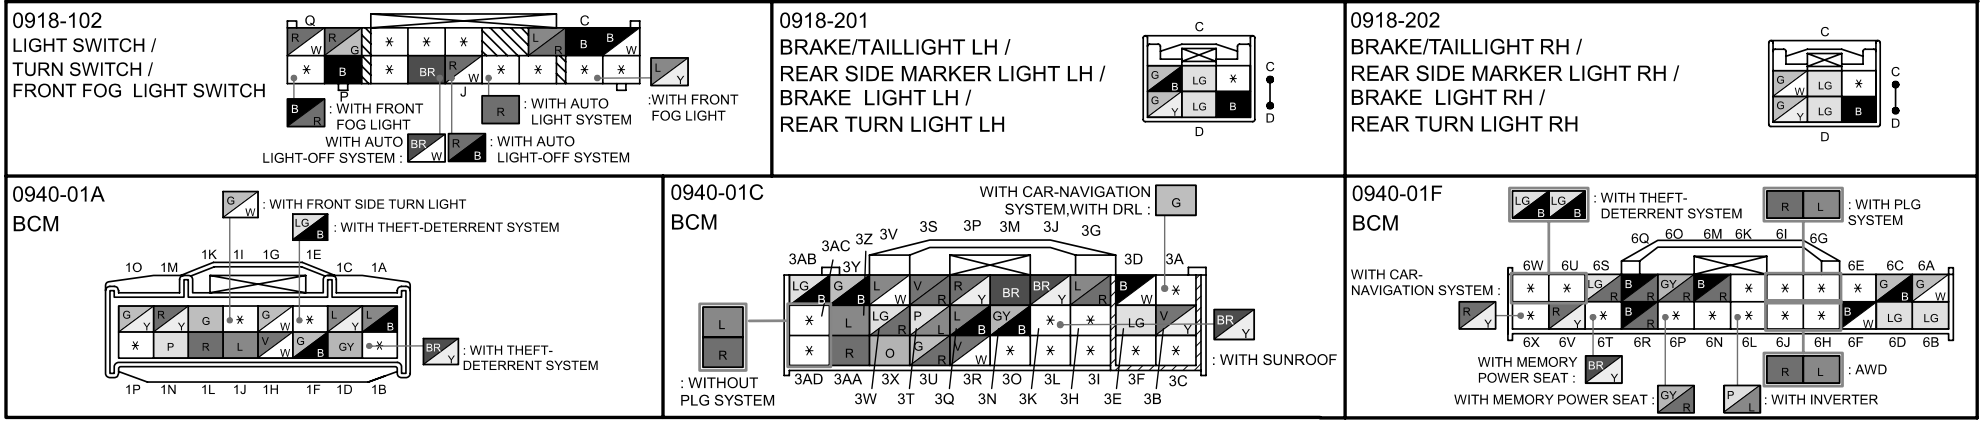


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

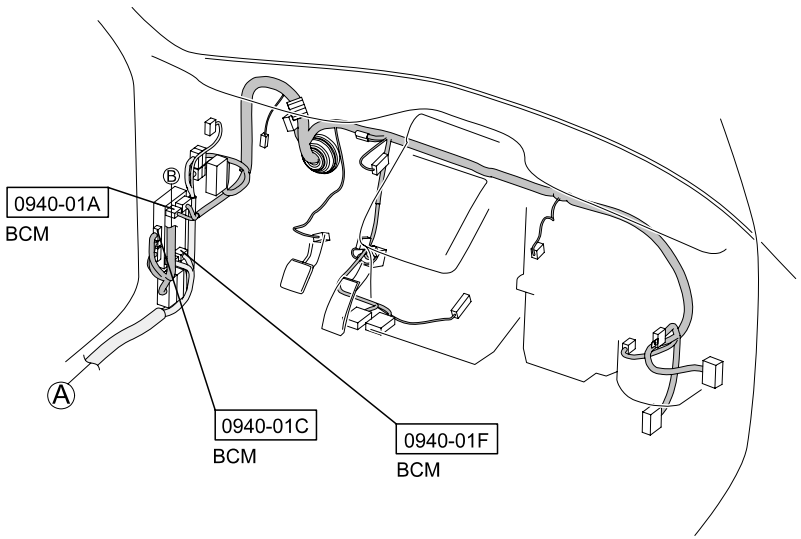

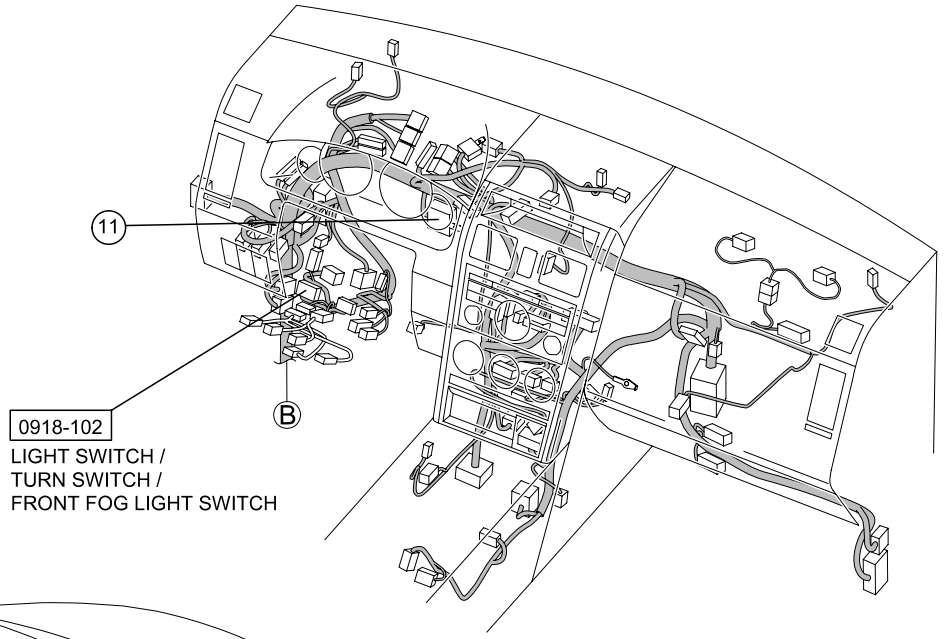


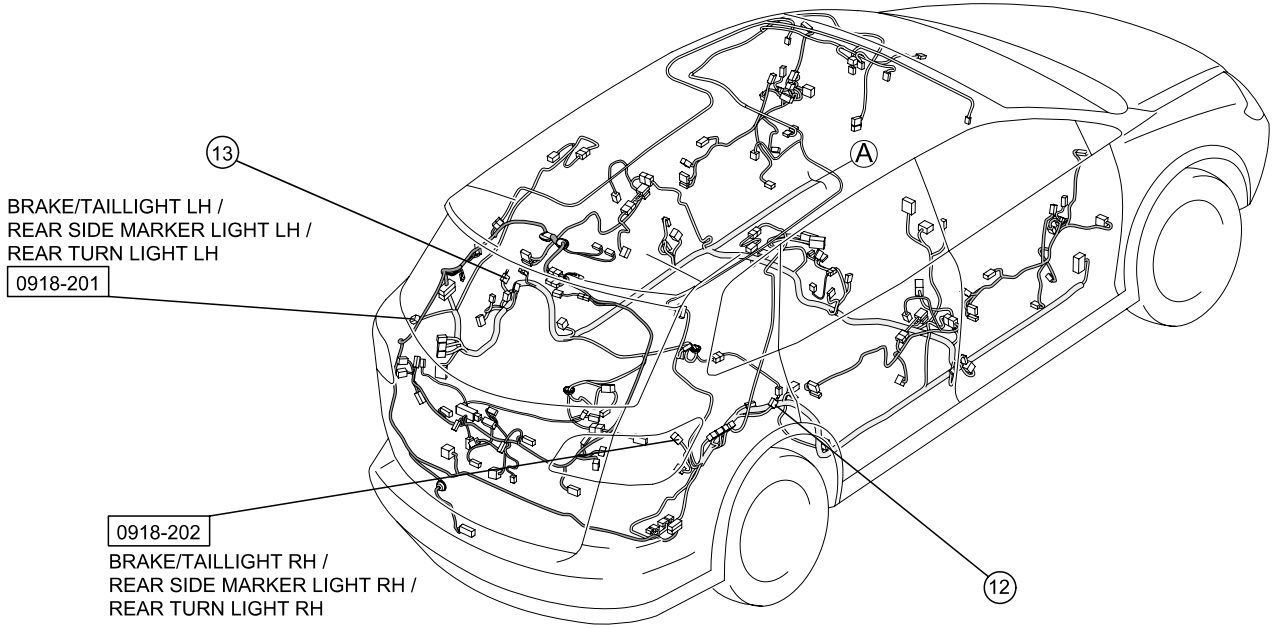


: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

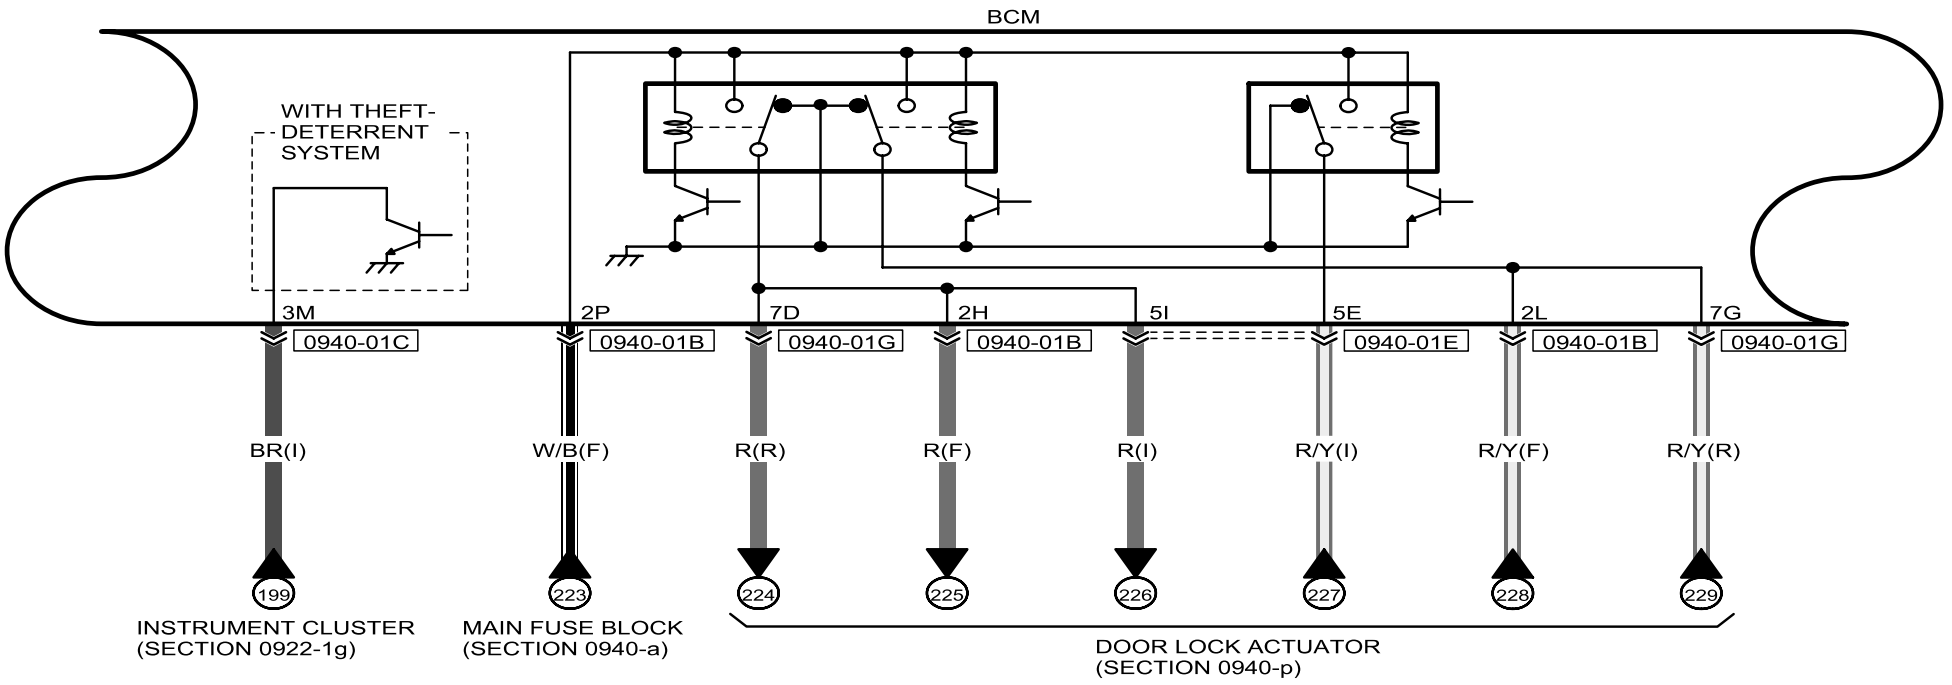


0940-01B
BCM

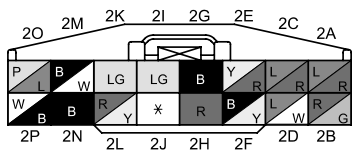


0940-01C
BCM

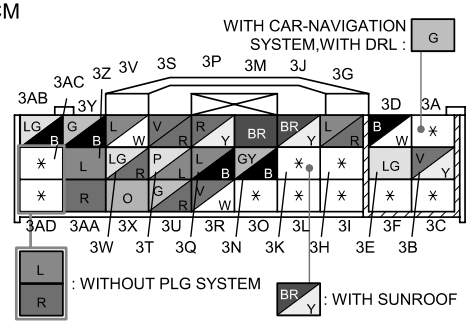


0940-01E
BCM

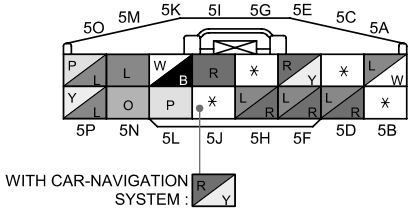


0940-01G
BCM

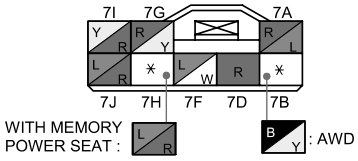


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

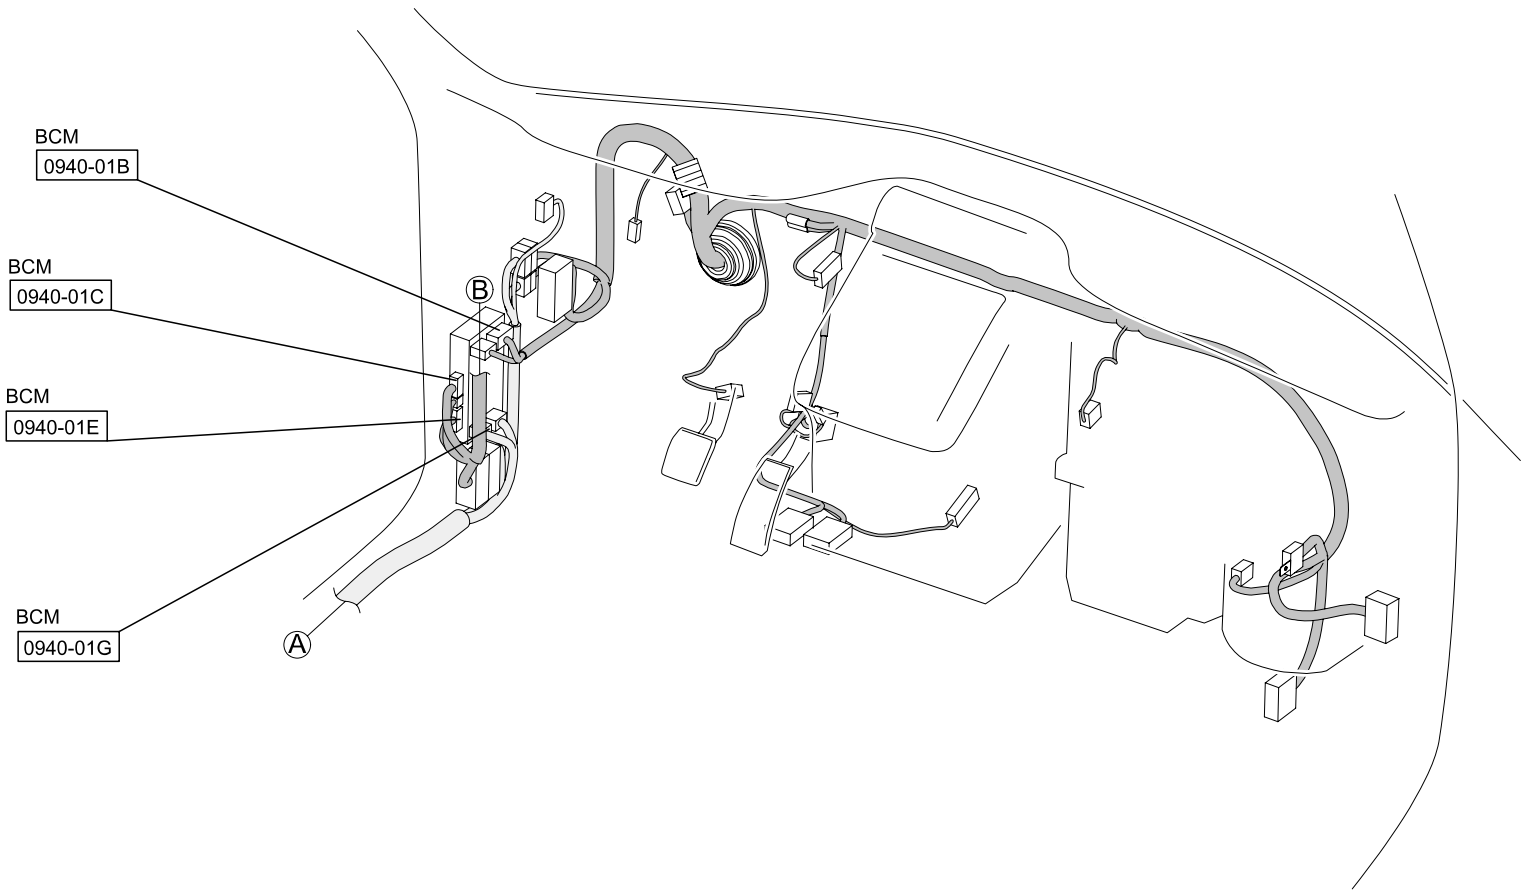

BCM
0940-01B
BCM
0940-01C
BCM
0940-01E
BCM
0940-01G
B
A
: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

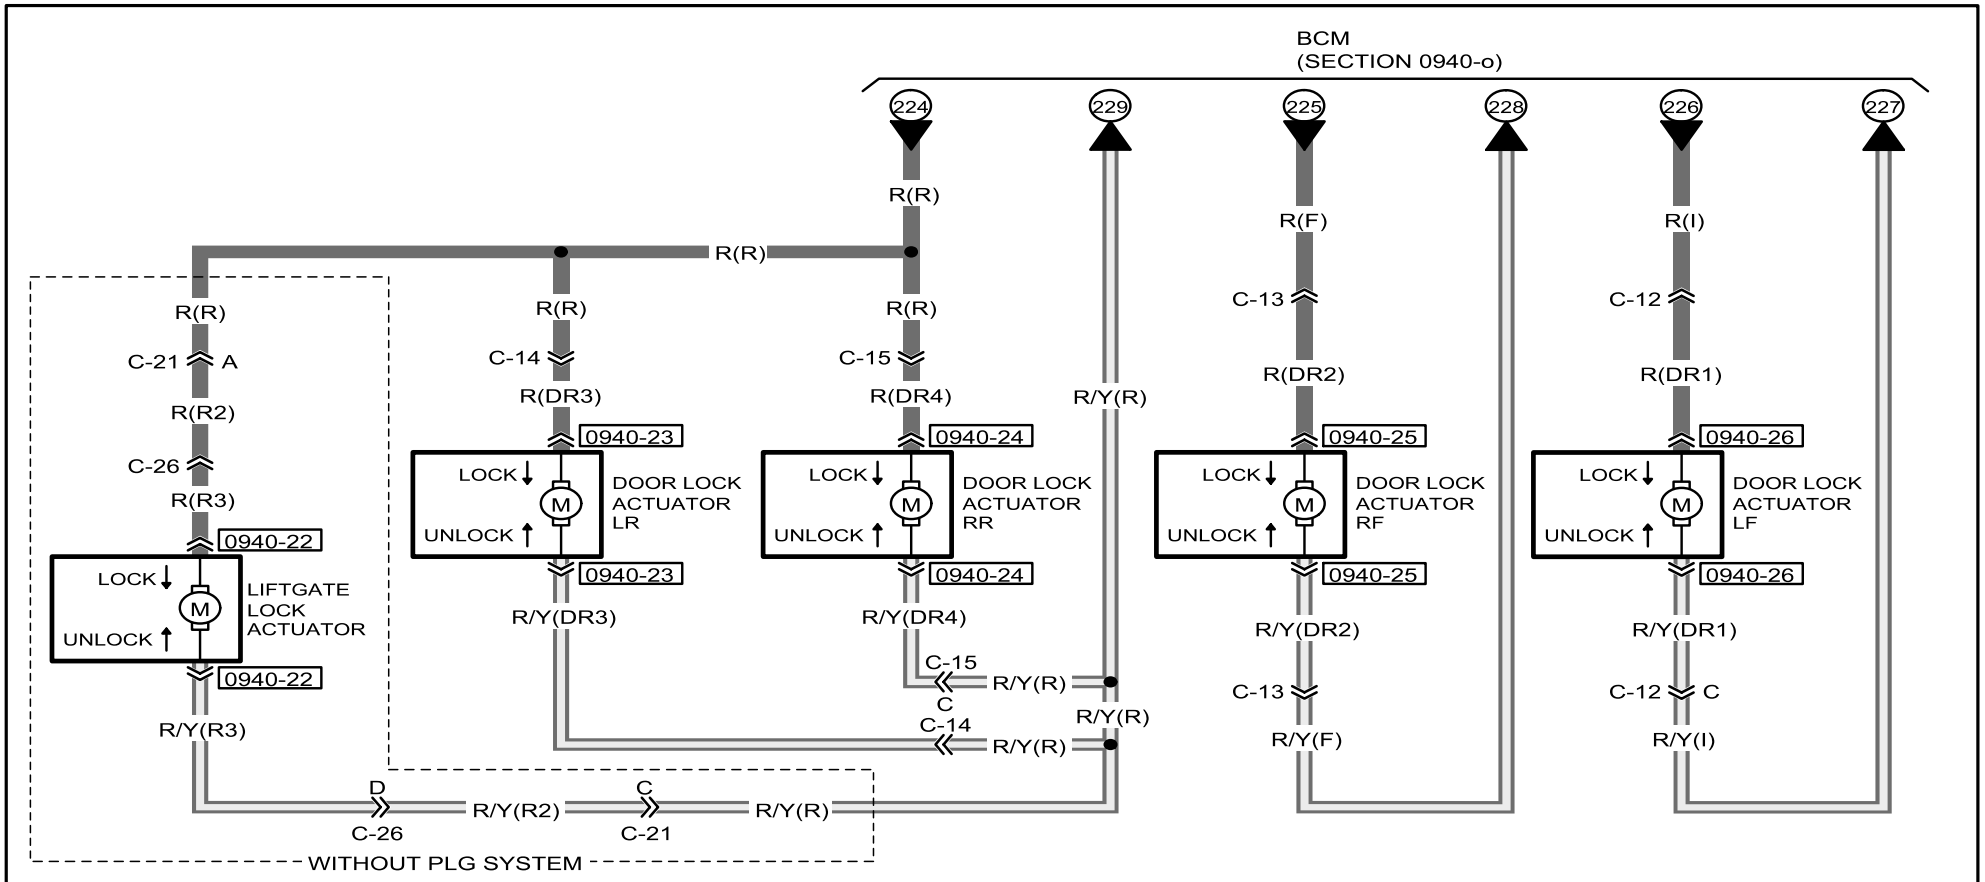


0940-22 LIFTGATE LOCK ACTUATOR	0940-23 DOOR LOCK ACTUATOR LR	0940-24 DOOR LOCK ACTUATOR RR	
0940-25 DOOR LOCK ACTUATOR RF	0940-26 DOOR LOCK ACTUATOR LF		

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

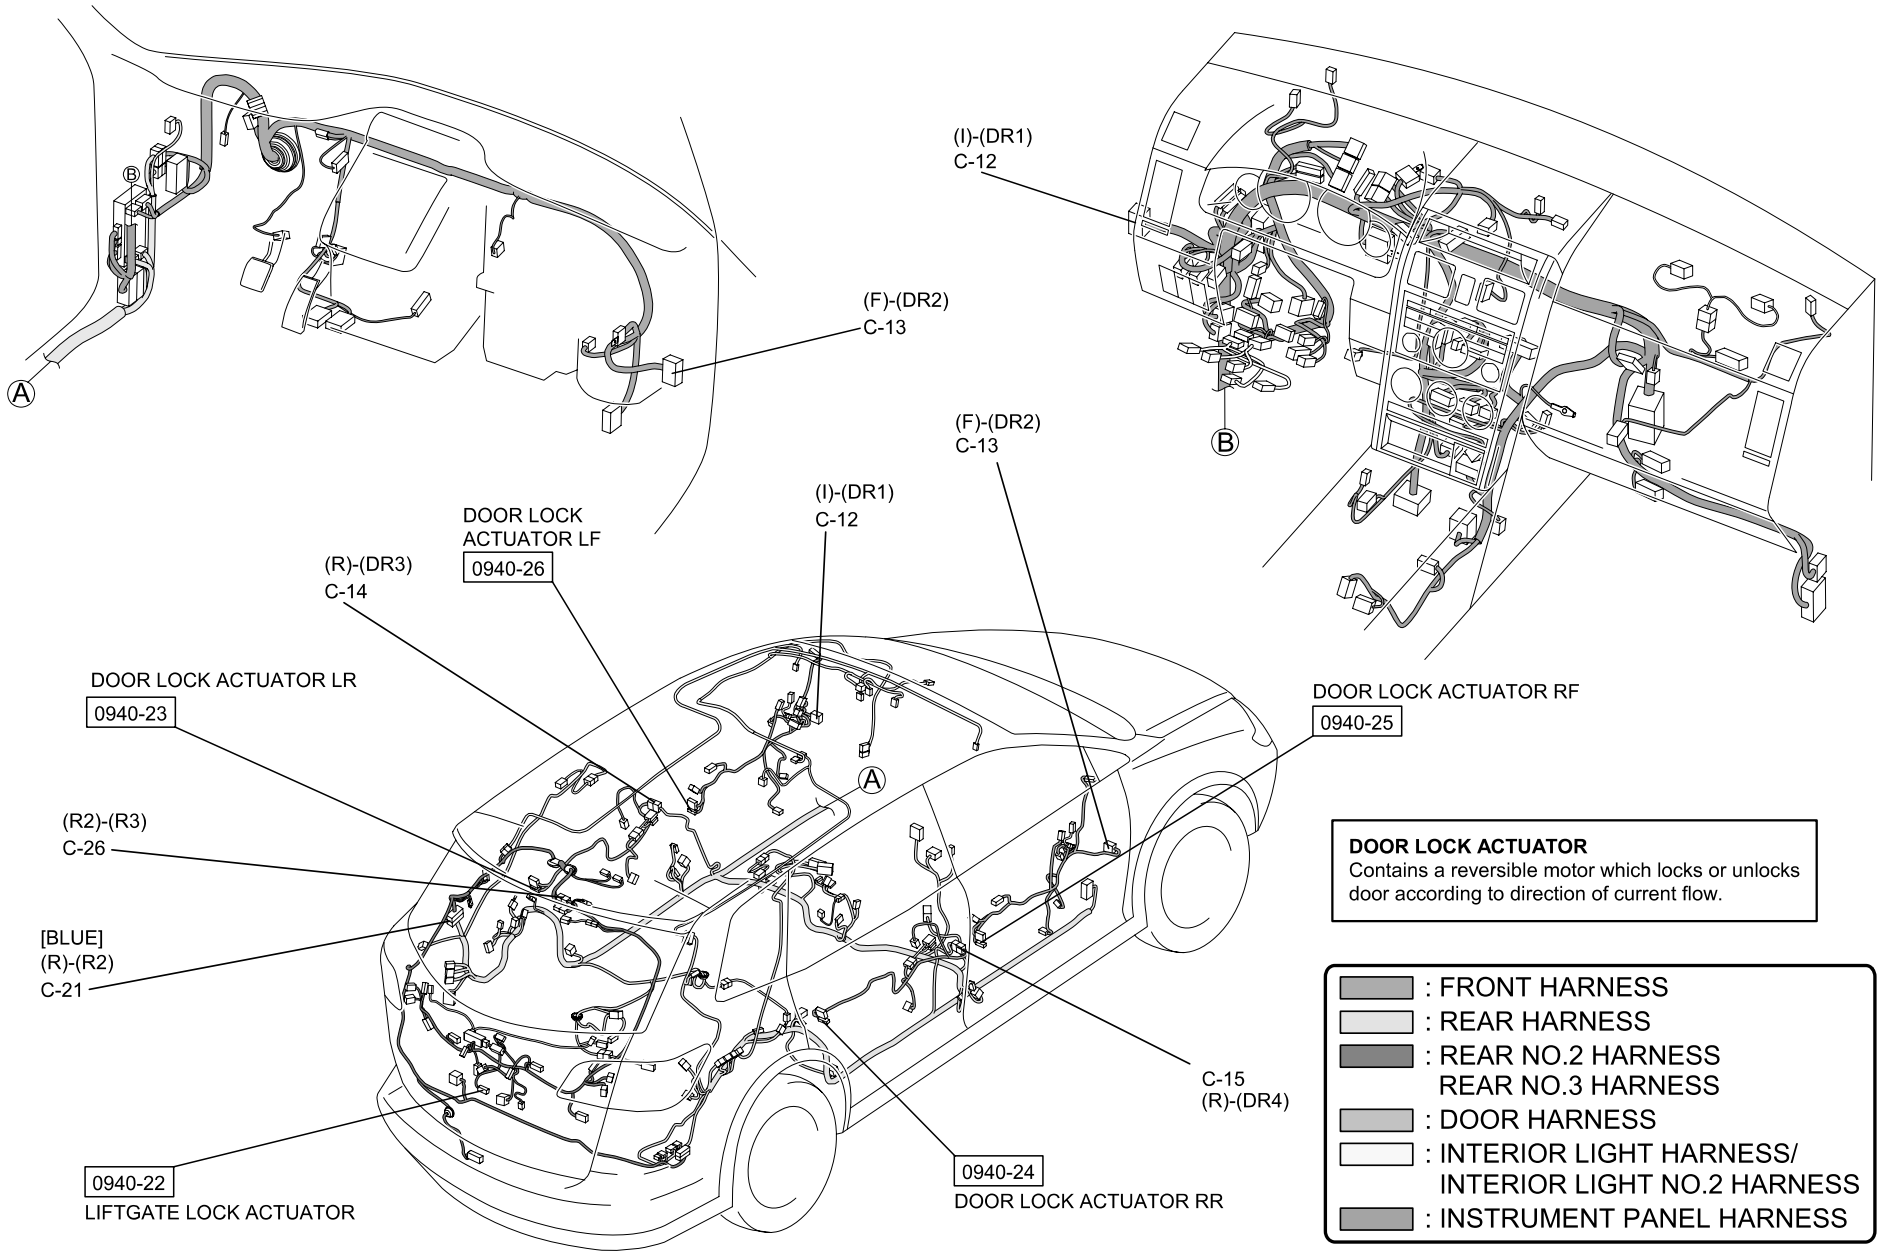
(I)-(DR1)
C-12
(F)-(DR2)
C-13
(F)-(DR2)
C-13
(I)-(DR1)
C-12
DOOR LOCK
ACTUATOR LF
0940-26
(R)-(DR3)
C-14
DOOR LOCK ACTUATOR LR
0940-23
DOOR LOCK ACTUATOR RF
0940-25
(R2)-(R3)
C-26
[BLUE]
(R)-(R2)
C-21
C-15
(R)-(DR4)
0940-22
LIFTGATE LOCK ACTUATOR
0940-24
DOOR LOCK ACTUATOR RR
DOOR LOCK ACTUATOR
Contains a reversible motor which locks or unlocks door according to direction of current flow.
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

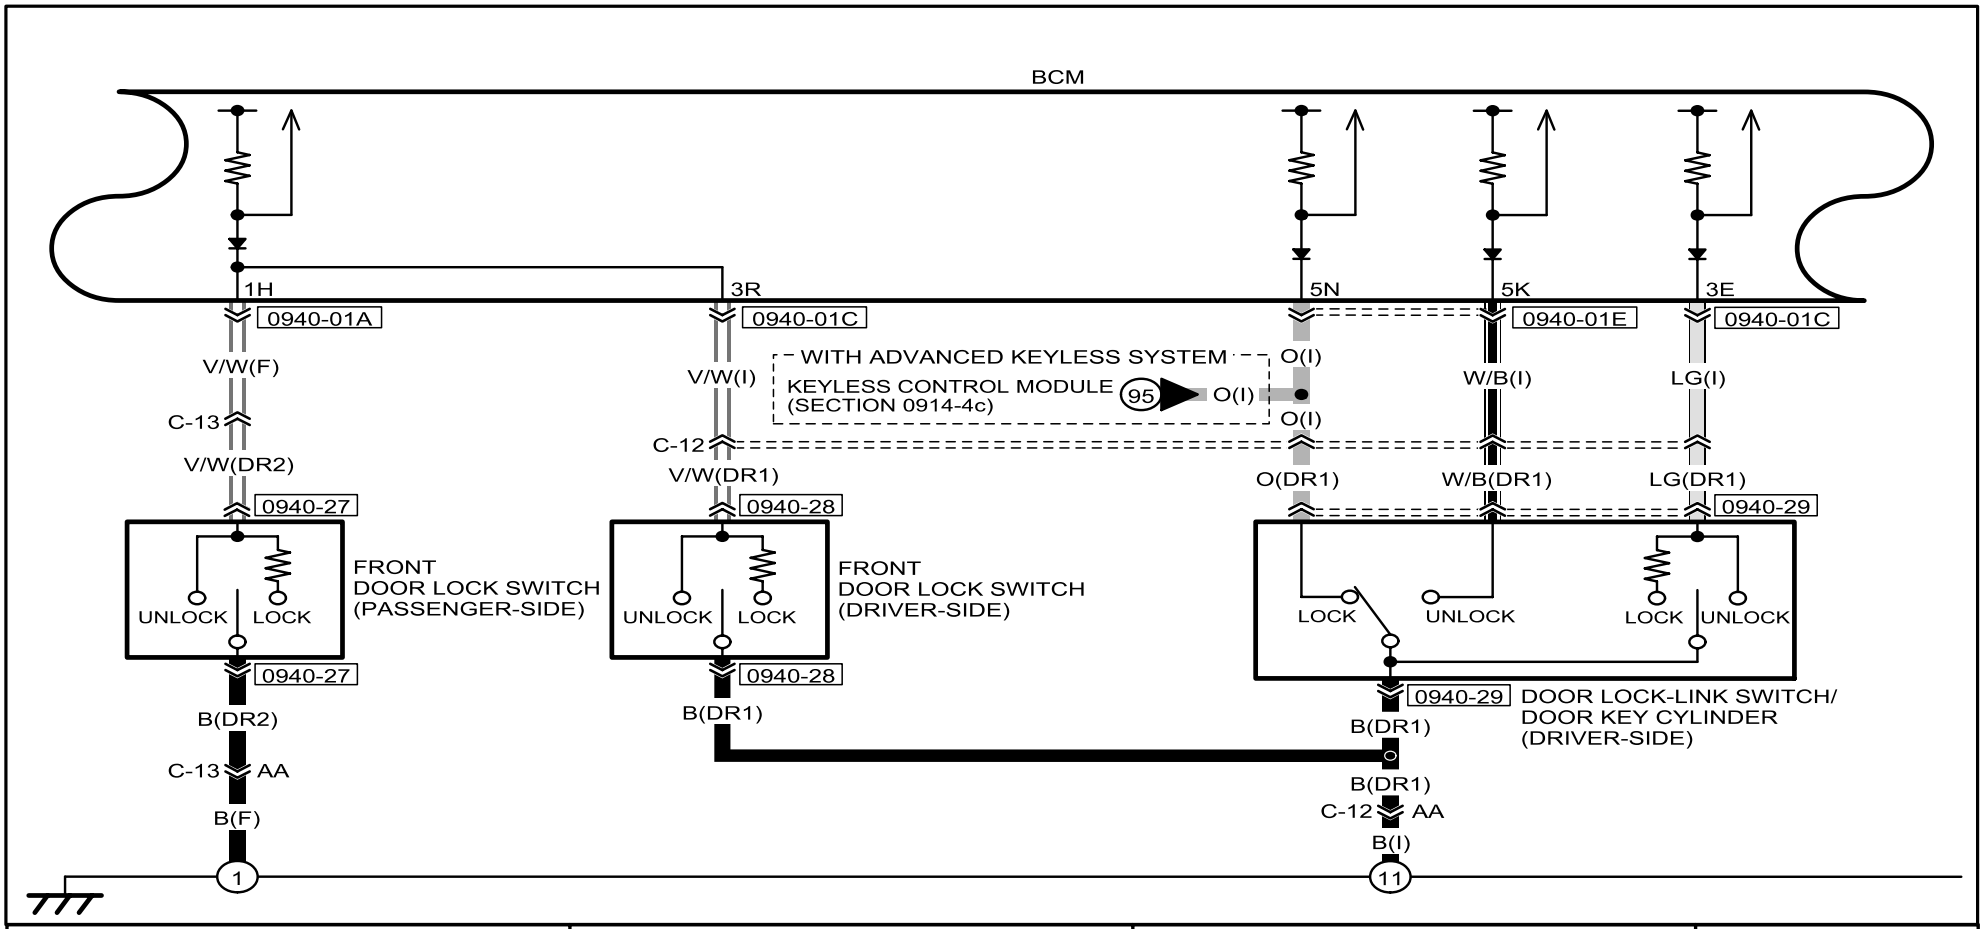



Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

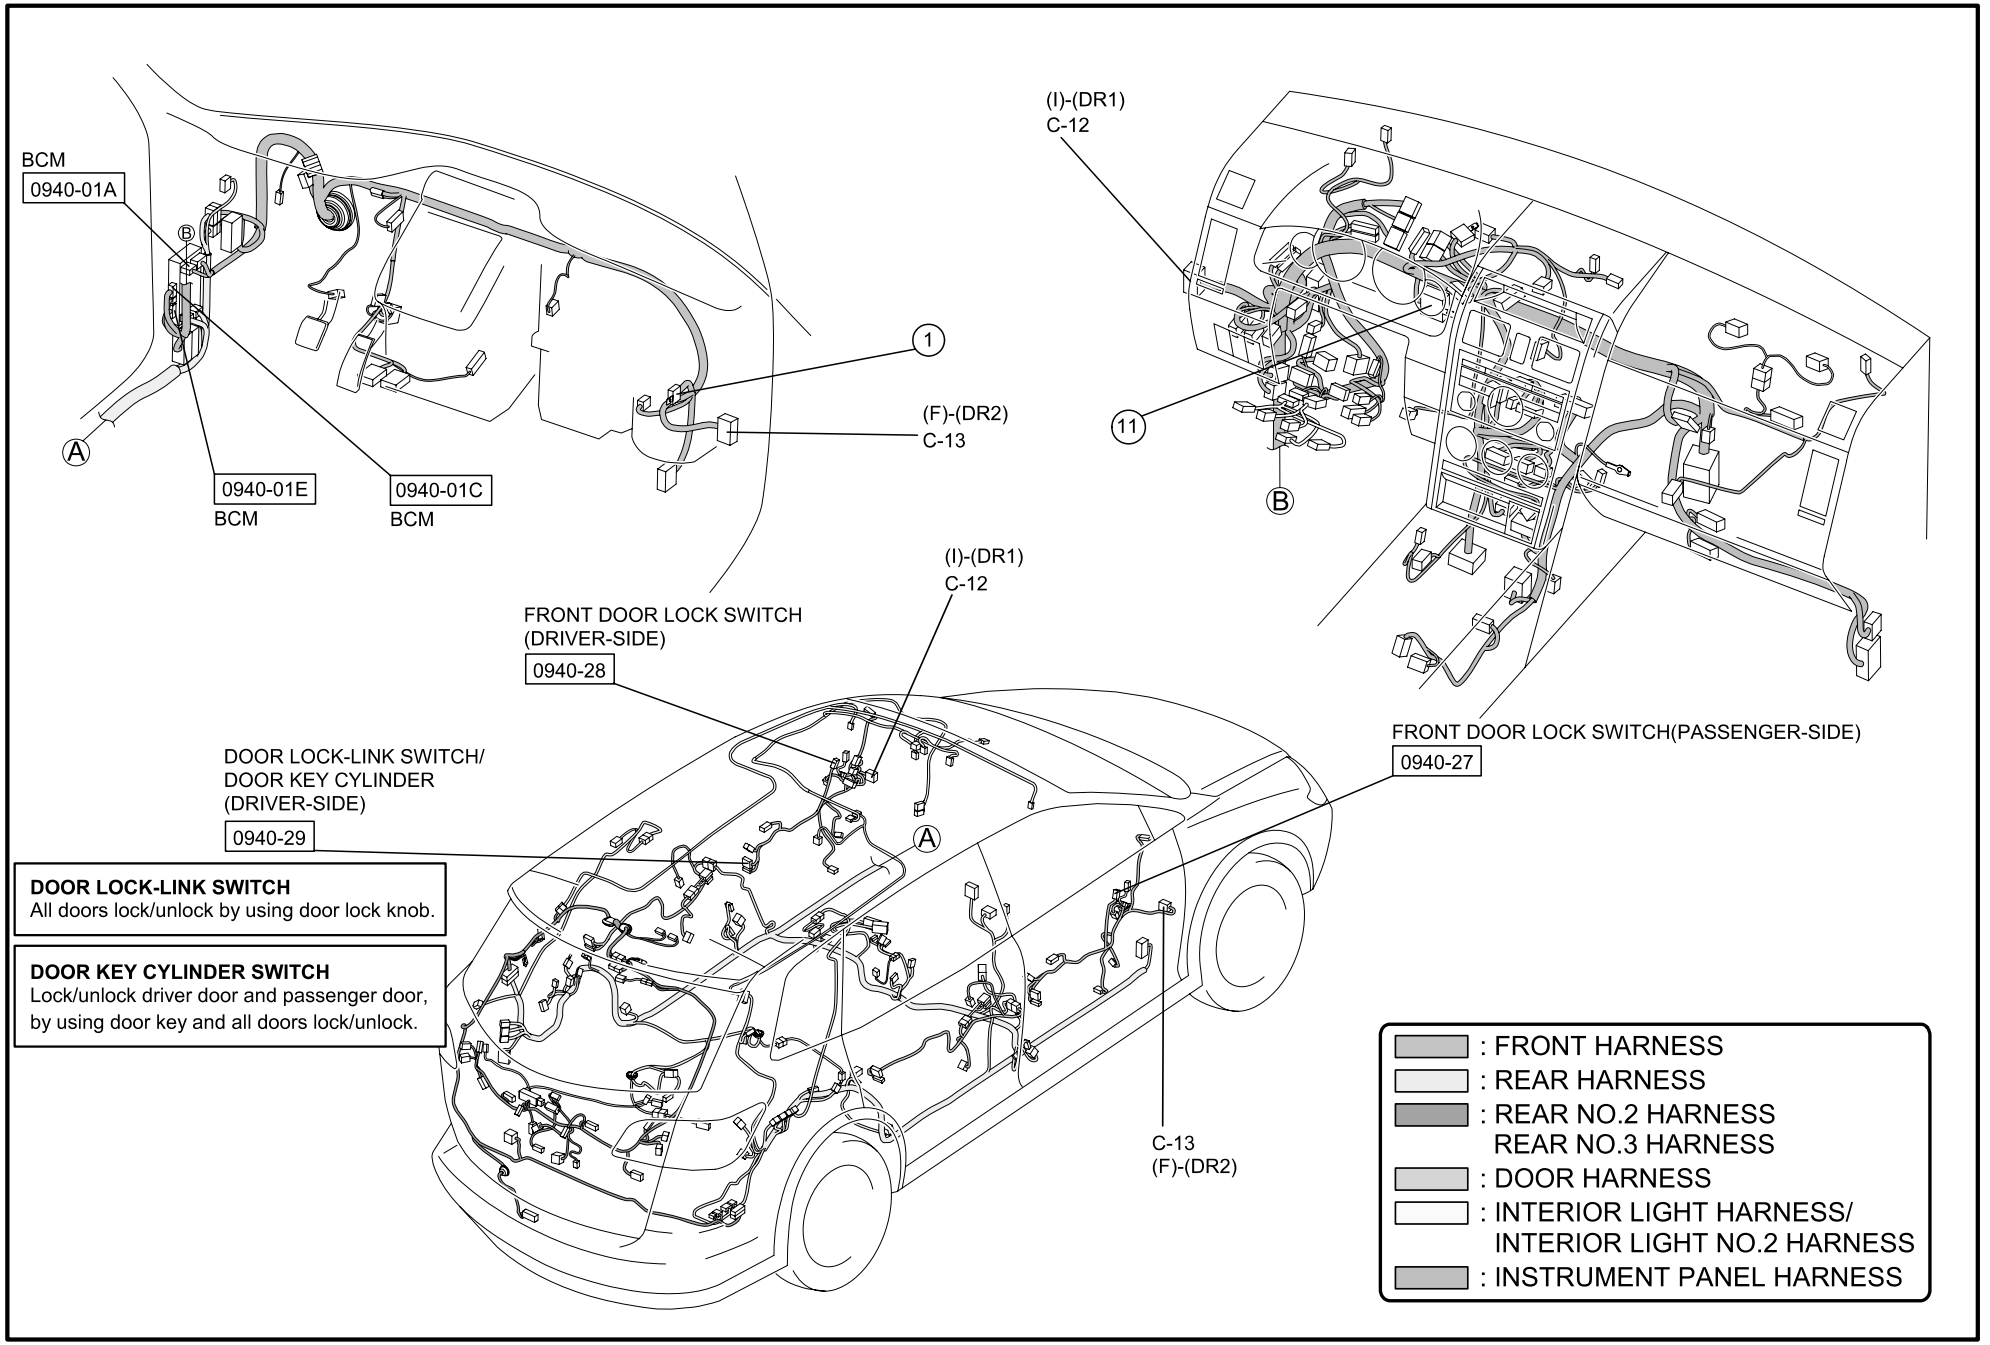


DOOR LOCK-LINK SWITCH
All doors lock/unlock by using door lock knob.


DOOR KEY CYLINDER SWITCH
Lock/unlock driver door and passenger door, by using door key and all doors lock/unlock.

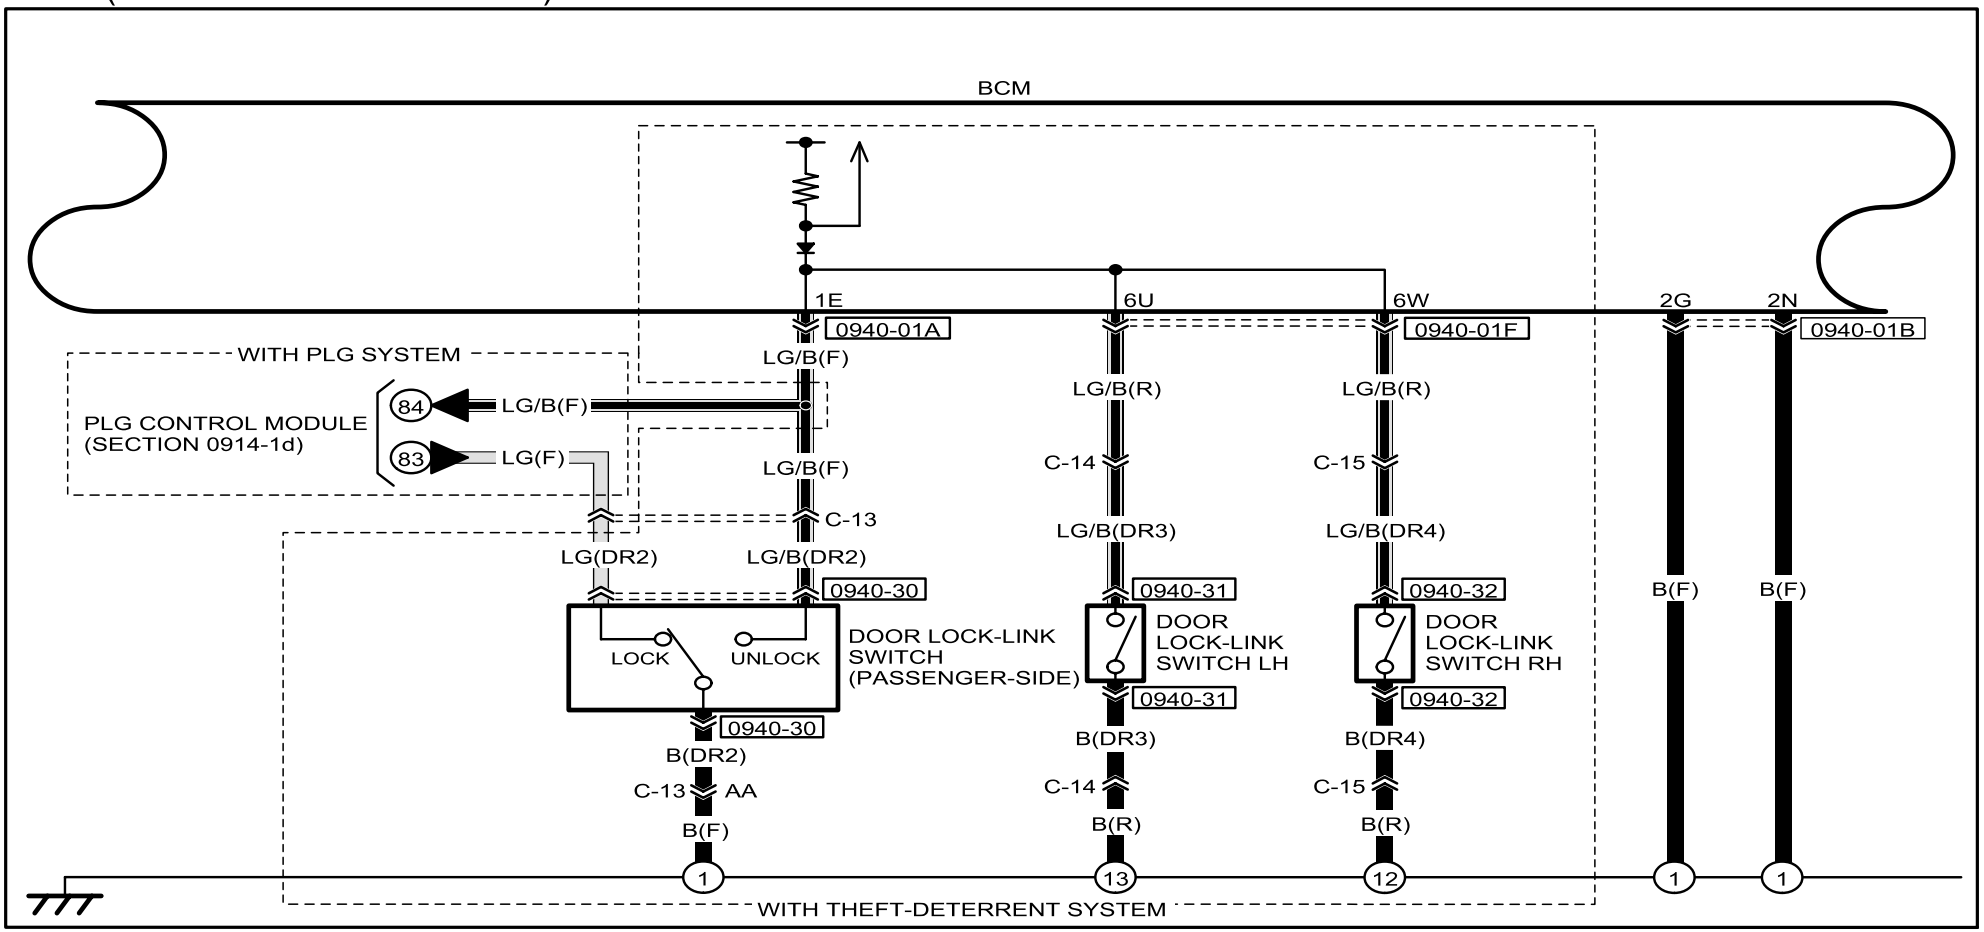

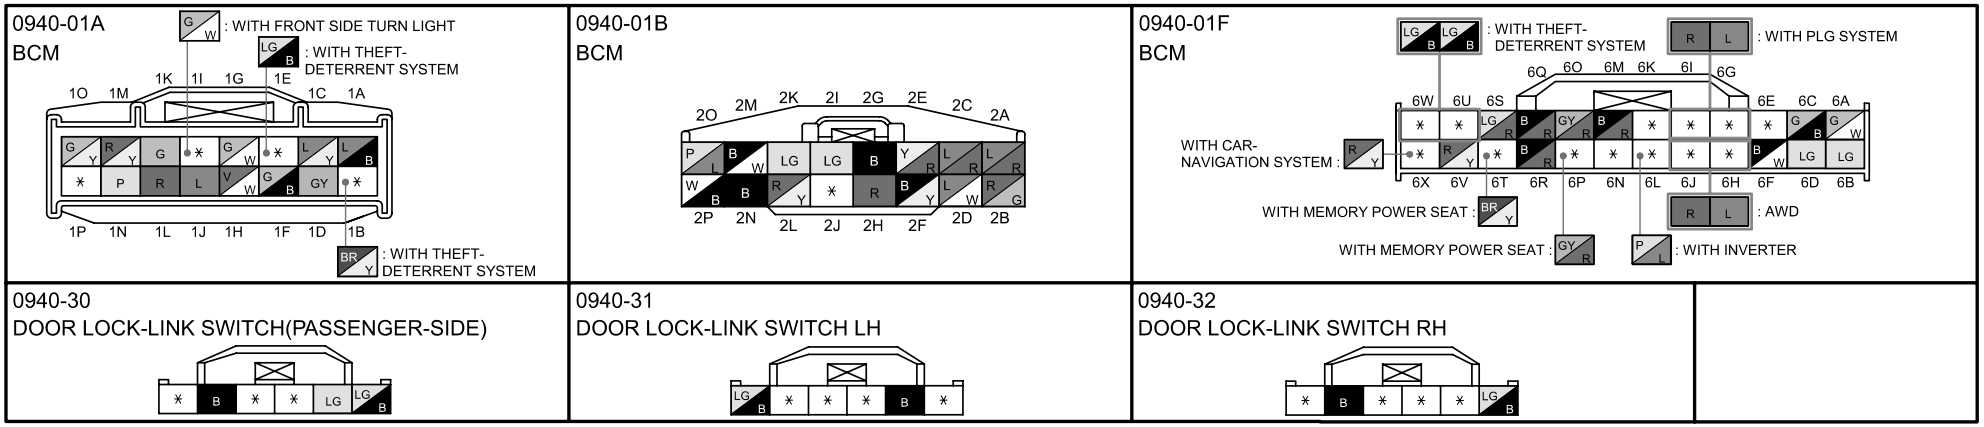


Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

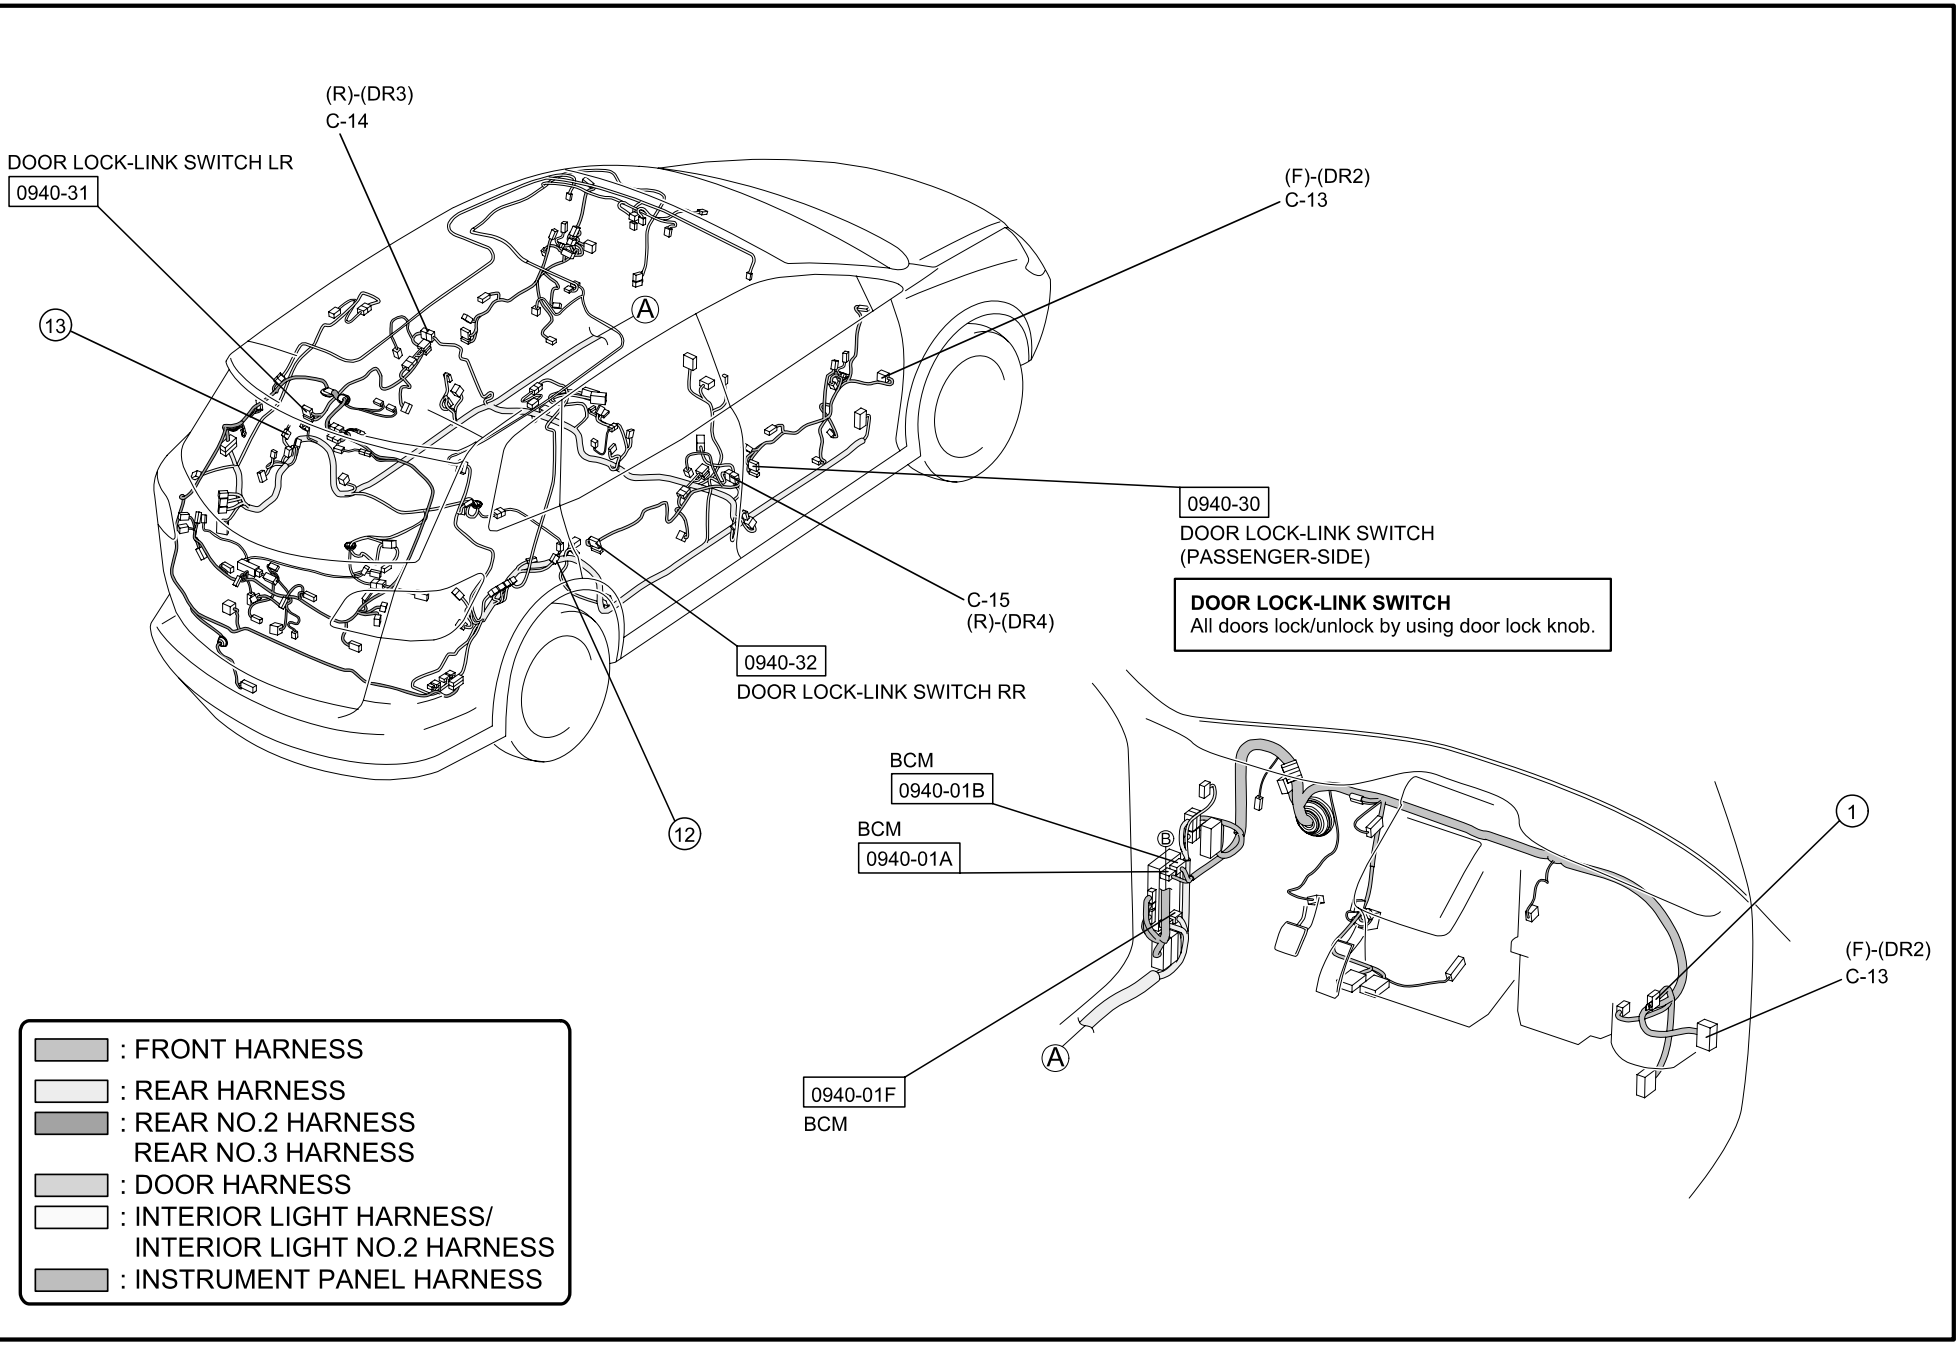

(R)-(DR3)
C-14
DOOR LOCK-LINK SWITCH LR
0940-31
13
(F)-(DR2)
C-13
A
0940-30
DOOR LOCK-LINK SWITCH
(PASSENGER-SIDE)
C-15
(R)-(DR4)
0940-32
DOOR LOCK-LINK SWITCH RR
12
DOOR LOCK-LINK SWITCH
All doors lock/unlock by using door lock knob.
BCM
0940-01B
BCM
0940-01A
B
1
(F)-(DR2)
C-13
A
0940-01F
BCM
: FRONT HARNESS
: REAR HARNESS
: REAR NO.2 HARNESS
REAR NO.3 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS/
INTERIOR LIGHT NO.2 HARNESS
: INSTRUMENT PANEL HARNESS

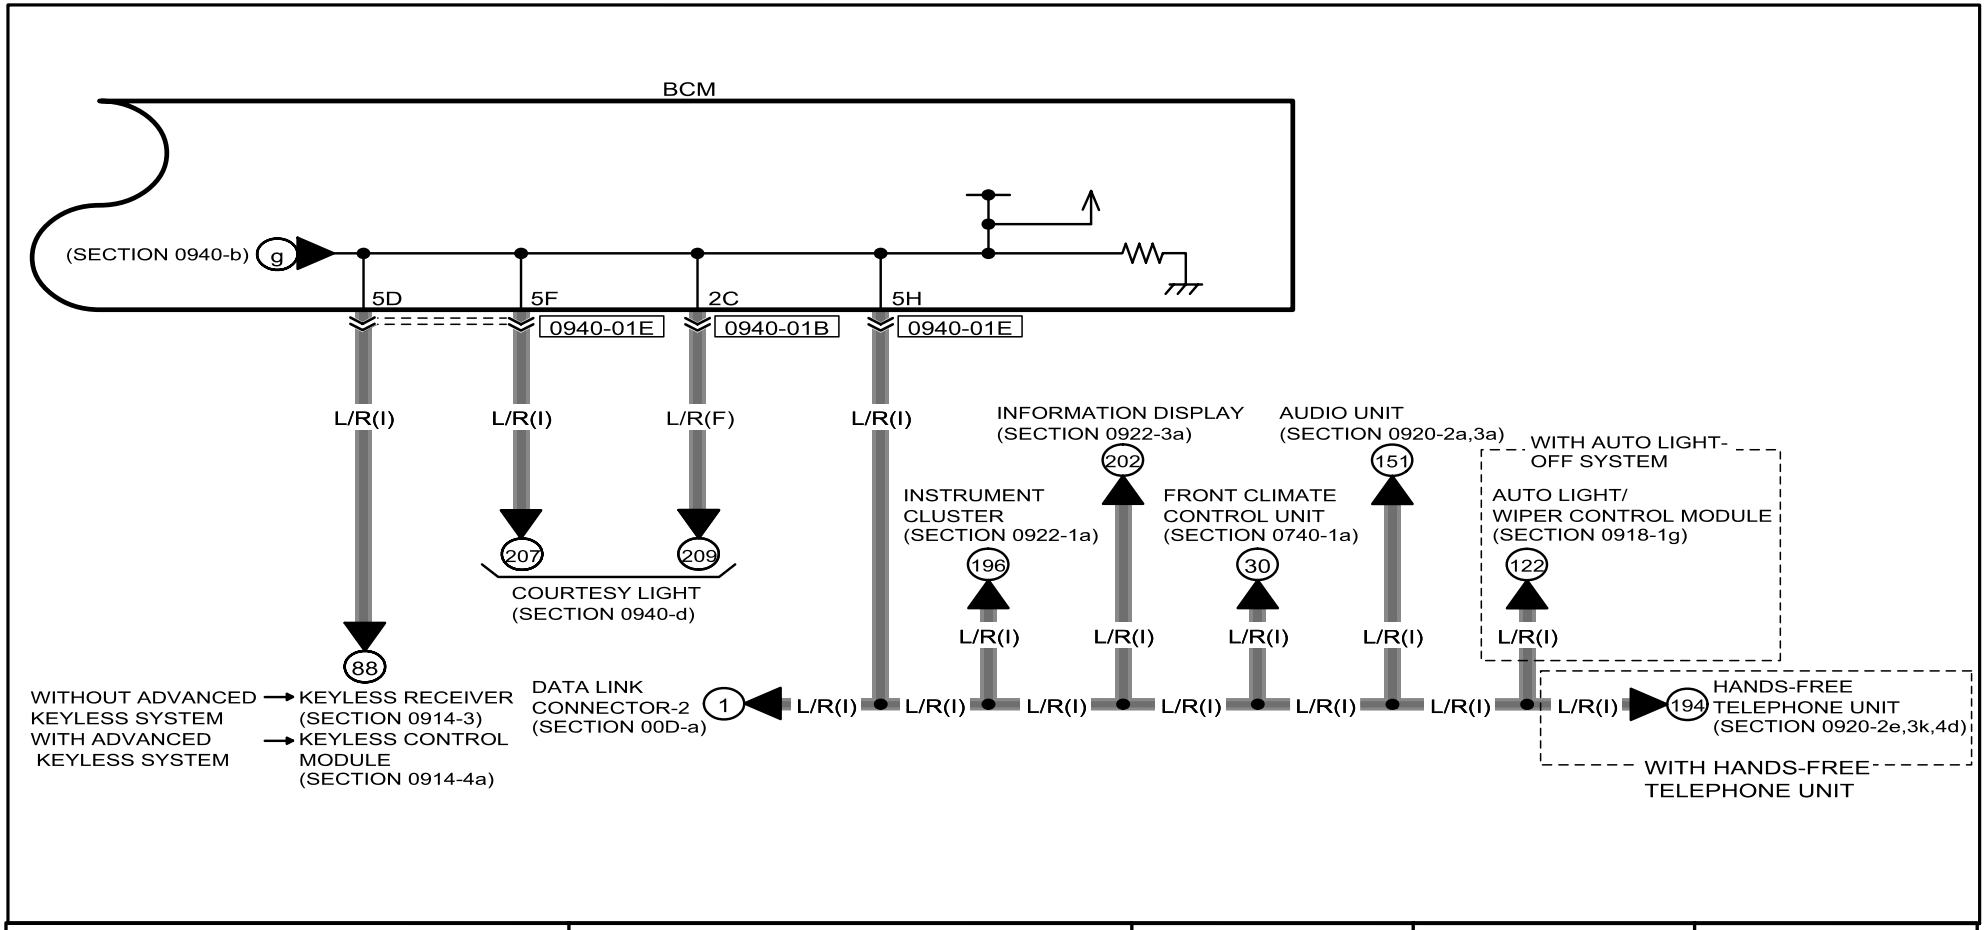


0940-01B
BCM

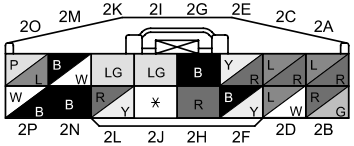

0940-01E
BCM

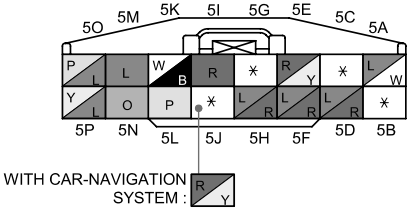

Refer to 00F section and 00C section for FUSE BOX and COMMON CONNECTOR LIST.

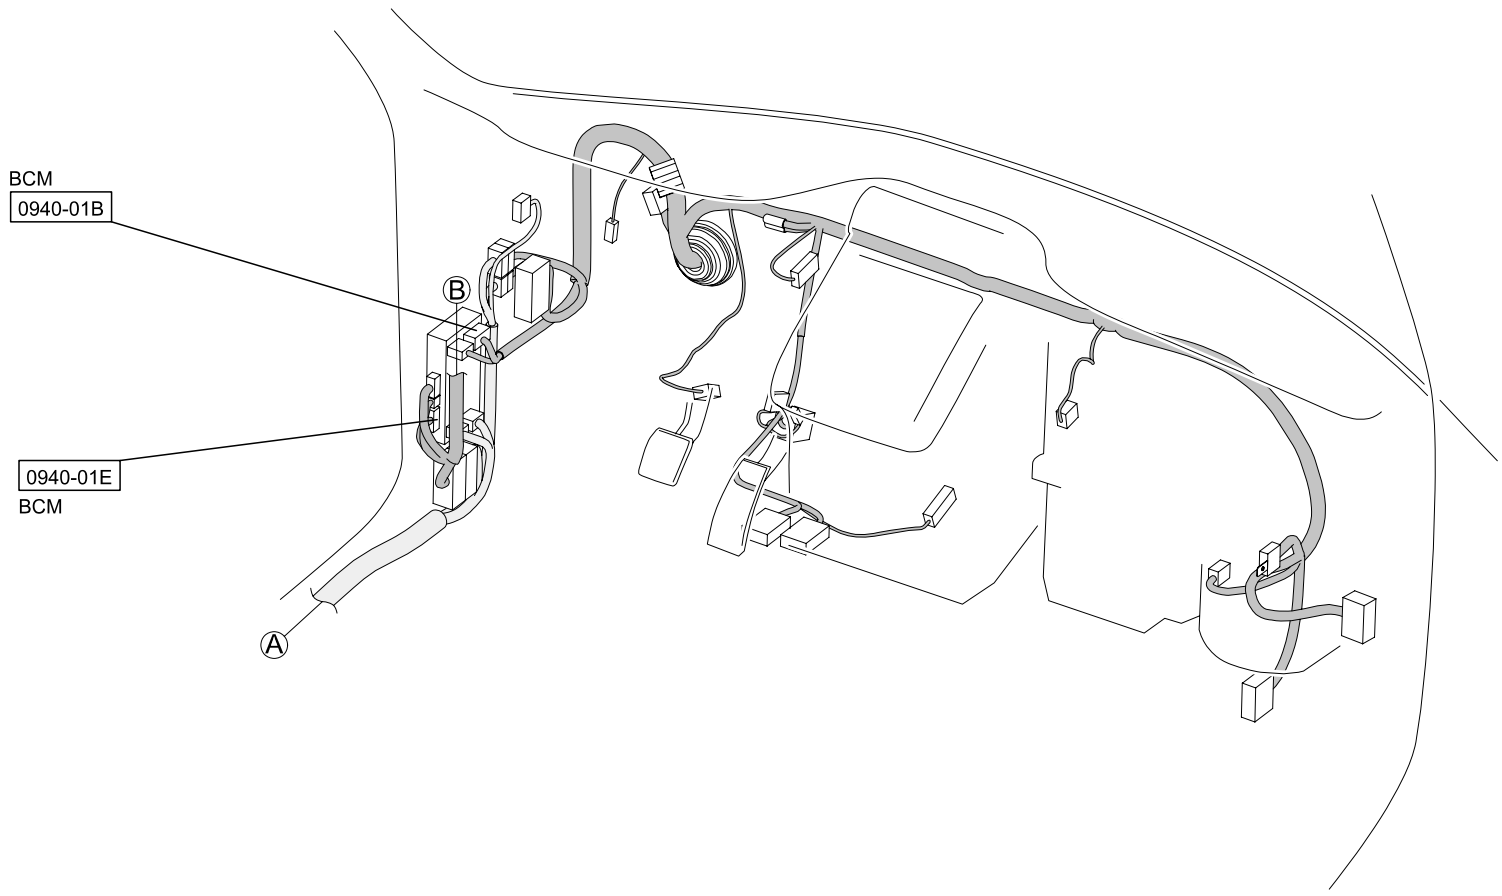

: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS

ALPHABETICAL INDEX

A

A/C RELAY 20,108
ABBREVIATIONS 12
ABS WHEEL-SPEED SENSOR 88
AC 115V POWER SUPPLY SOCKET 276
ACCELERATOR PEDAL POSITION SENSOR 82
ACCESSORY SOCKET 224
AIR BAG MODULE
(DRIVER-SIDE) 110
(PASSENGER-SIDE) 112
AIR INTAKE ACTUATOR 100
AIR MIX ACTUATOR 98,104
AIRFLOW MODE ACTUATOR
(FRONT) 96
(REAR) 104
AMBIENT TEMPERATURE SENSOR 98
AUDIO AMPLIFIER 242
AUDIO CONTROL SWITCH 228,238
AUDIO UNIT 226,236
AUDIOPILOT MICROPHONE 242
AUTO LIGHT/WIPER CONTROL MODULE 192,218
AUTO LIGHT-OFF CONTROL MODULE 192
AUXILIARY JACK 232,240
AUXILIARY TERMINAL UNIT 274
AWD CONTROL MODULE 84
AWD SOLENOID 84

B

BACK-UP LIGHT 214
BACK-UP LIGHT RELAY 20,92
BASS-BOX 244
BCM 298
BLOWER MOTOR
(FRONT) 94
(REAR) 102
BLOWER RELAY
(FRONT) 20,94
(REAR) 20,102
BRAKE FLUID LEVEL SENSOR 312
BRAKE LIGHT 196,202
BRAKE SWITCH 56,202
BRAKE/TAILLIGHT 196,202
BUCKLE SWITCH 118

C

CABIN TEMPERATURE SENSOR 96
CAMSHAFT POSITION SENSOR 68
CANISTER VENT SOLENOID VALVE 80
CAPACITOR 120
CARGO COMPARTMENT LIGHT 302
CAR-NAVIGATION UNIT 260
CENTER ACCESSORY SOCKET 224
CENTER SPEAKER 248
CHECK CONNECTOR 20,40,100
CHT SENSOR 72
CLIMATE CONTROL UNIT
(FRONT) 94
(REAR) 106
CLOSER MOTOR 162
COIL 166
COMBINED SENSOR 86
COMMON CONNECTOR LIST 24
COOLING FAN MOTOR 44,48
COOLING FAN RELAY 22,46
COURTESY LIGHT 304
CRANKSHAFT POSITION SENSOR 68
CRASH ZONE SENSOR 116
CRUISE CONTROL SWITCH 56
CURTAIN AIR BAG MODULE 114

D

DATA LINK CONNECTOR-2 38
DIFFERENTIAL OIL TEMPERATURE SENSOR 84
DIODE 42,46,50
DISCHARGE HEADLIGHT CONTROL MODULE 184
DOOR KEY CYLINDER 330
DOOR LOCK ACTUATOR 328
DOOR LOCK SWITCH 330
DOOR LOCK-LINK SWITCH 330
DOOR SPEAKER 230,250
DOOR SWITCH 316
DRIVER-SIDE AIR BAG MODULE 110
DRIVER-SIDE BUCKLE SWITCH 118
DRIVER-SIDE CURTAIN AIR BAG MODULE 114
DRIVER-SIDE FRONT AIR MIX ACTUATOR 98
DRIVER-SIDE POWER SEAT SWITCH 140,150
DRIVER-SIDE PRE-TENSIONER SEAT BELT 112
DRIVER-SIDE SIDE AIR BAG MODULE 114
DRIVER-SIDE SIDE AIR BAG SENSOR 116
DSC/RSC HU/CM 86

E

ELECTRICAL WIRING SCHEMATIC 18
EVAPORATOR TEMPERATURE SENSOR 96

F

FAN CONTROL MODULE 44,48
FAN RELAY 22,42
FILAMENT 120
FOG LIGHT 200
FOG LIGHT RELAY 22,200
FOG LIGHT SWITCH 200
FRONT ACCESSORY SOCKET 224
FRONT AIR MIX ACTUATOR 98
FRONT AIRFLOW MODE ACTUATOR 96
FRONT BLOWER MOTOR 94
FRONT BLOWER RELAY 20,94
FRONT CLIMATE CONTROL UNIT 94
FRONT DOOR LOCK SWITCH 330
FRONT DOOR SPEAKER 230,250
FRONT EVAPORATOR TEMPERATURE SENSOR 96
FRONT FOG LIGHT 200
FRONT FOG LIGHT RELAY 22,200
FRONT FOG LIGHT SWITCH 200
FRONT HO2S 72
FRONT MAP LIGHT 302
FRONT POWER MOS FET 94
FRONT SIDE MARKER LIGHT 196
FRONT SIDE TURN LIGHT 322
FRONT SPEAKER 250
FRONT TURN LIGHT 322
FUEL GAUGE SENDER UNIT 50
FUEL INJECTOR 66
FUEL PUMP 50
FUEL PUMP RELAY 20,50
FUEL PUMP UNIT 50
FUEL TANK PRESSURE SENSOR 74
FUSE BOX 20

G

GENERAL INFORMATION 4
GENERATOR 52
GLOVE COMPARTMENT LIGHT 204
GROUND POINT 34

H

HANDS-FREE TELEPHONE SWITCH 228,238
HANDS-FREE TELEPHONE UNIT 234,256,266
HAZARD WARNING SWITCH 306
HEADLIGHT 184
HEADLIGHT LEVELING ACTUATOR 212
HEADLIGHT LEVELING SWITCH 212

ALPHABETICAL INDEX

HEADLIGHT RELAY....20,182
HEATED OUTER MIRROR....120
HIGH-MOUNT BRAKE LIGHT....202
HO2S
(FRONT)....72
(REAR)....76
HOOD LATCH SWITCH....320
HORN....292
HORN RELAY....20,292
HORN SWITCH....292

I

IGNITION COIL....62
ILLUMINATION LIGHT
AUDIO CONTROL SWITCH....206
CONSOLE INDIRECT....208
CRUISE CONTROL SWITCH....206
FRONT DOOR POCKET INDIRECT....206
HAZARD WARNING SWITCH....204
HEADLIGHT LEVELING SWITCH....208
IGNITION KEY....210
PLG FRONT SWITCH....206
REAR DOOR POCKET INDIRECT....210
SELECTOR....204
TCS OFF SWITCH....206
VANITY MIRROR....304
INFORMATION DISPLAY....294
INSTRUMENT CLUSTER....278
INTERIOR LIGHT....302
INVERTER....276

K

KEY REMINDER SWITCH....168
KEYLESS ANTENNA....176
KEYLESS BEEPER....174
KEYLESS CONTROL MODULE....170
KEYLESS RECEIVER....168,172
KNOCK SENSOR....70

L

LICENSE PLATE LIGHT....198
LIFTGATE LATCH AND LOCK ACTUATOR....158
LIFTGATE LATCH SWITCH....302
LIFTGATE LOCK ACTUATOR....328
LIFTGATE OUTER HANDLE SWITCH....158
LIGHT SWITCH....188
LUMBAR SUPPORT SWITCH....154

M

MAGNETIC CLUTCH....108
MAIN RELAY....20,58
MAP LIGHT....302
MASS AIR FLOW/
INTAKE AIR TEMPERATURE SENSOR....74
MICROPHONE....234,258,268
MOUNT CAMERA....254

N

NOISE FILTER....120

O

OIL CONTROL VALVE....76
OIL PRESSURE SWITCH....320

P

PARKING BRAKE SWITCH....312
PARKING LIGHT....196
PASSENGER-SIDE AIR BAG MODULE....112
PASSENGER-SIDE BUCKLE SWITCH....118
PASSENGER-SIDE CURTAIN AIR BAG MODULE....114
PASSENGER-SIDE FRONT AIR MIX ACTUATOR....98
PASSENGER-SIDE POWER SEAT SWITCH....148,152
PASSENGER-SIDE PRE-TENSIONER SEAT BELT....112
PASSENGER-SIDE SIDE AIR BAG MODULE....114
PASSENGER-SIDE SIDE AIR BAG SENSOR....116
PCM....58
PCV VALVE HEATER CONTROL....70
PCV VALVE HEATER FITTING....70
PLG BUZZER....158
PLG CONTROL MODULE....156
PLG DRIVE UNIT....160
PLG FRONT SWITCH....164
PLG REAR SWITCH....164
PLG TOUCH SENSOR....160
POSITION MEMORY CONTROL MODULE....138
POSITION MEMORY SWITCH....142
POWER MOS FET
(FRONT)....94
(REAR)....102
POWER OUTER MIRROR....134
POWER OUTER MIRROR SWITCH....134
POWER SEAT SWITCH
(DRIVER-SIDE)....140,150
(PASSENGER-SIDE)....148,152
POWER STEERING PRESSURE SWITCH....78
POWER WINDOW MAIN SWITCH....122
POWER WINDOW MOTOR....128
POWER WINDOW SUBSWITCH....126
PRE-TENSIONER SEAT BELT....112
PURGE SOLENOID VALVE....74

R

RAIN SENSOR....220
REAR ACCESSORY SOCKET....224
REAR AIR MIX ACTUATOR....104
REAR AIRFLOW MODE ACTUATOR....104
REAR BLOWER MOTOR....102
REAR BLOWER RELAY....20,102
REAR CLIMATE CONTROL UNIT....106
REAR DOOR SPEAKER....230,250
REAR EVAPORATOR TEMPERATURE SENSOR....96
REAR HO2S....76
REAR MOUNT CAMERA....254
REAR POWER MOS FET....102
REAR SIDE MARKER LIGHT....196
REAR SPEAKER....244
REAR TURN LIGHT....324
REAR WASHER MOTOR....308
REAR WINDOW DEFROSTER RELAY....20,120
REAR WIPER AND WASHER SWITCH....308
REAR WIPER MOTOR....308
RECLINER MOTOR AND POSITION SENSOR....146
REFRIGERANT PRESSURE SWITCH....100
REQUEST SWITCH....174
RES UNIT....270
ROOF SPEAKER....246

S

SAS CONTROL MODULE....110
SEAT TRACK POSITION SENSOR....118
SEAT WARMER RELAY....20,22,136
SEAT WARMER UNIT....136
SEAT WEIGHT SENSOR....118
SEAT WEIGHT SENSOR CONTROL MODULE....118
SELECTOR LEVER COMPONENT....90
SIDE AIR BAG MODULE....114
SIDE AIR BAG SENSOR....116
SIDE MARKER LIGHT....196
SIDE TURN LIGHT....322
SLIDER MOTOR AND POSITION SENSOR....144
SOLAR RADIATION SENSOR....98
SPEAKER
(FRONT)....250
(REAR)....244
STARTER....54

ALPHABETICAL INDEX

STARTER RELAY 20,54
STEERING ANGLE SENSOR 314
STEERING LOCK UNIT 172
SUNROOF MOTOR 180
SUNROOF SWITCH 180

T

TAILLIGHT 196,202
TCM 90
TCS OFF SWITCH 86
THROTTLE BODY 70
TILT MOTOR AND POSITION SENSOR 144
TNS RELAY 20,186
TURN LIGHT
(FRONT) 322
(REAR) 324
TURN SWITCH 324
TWEETER 230

V

VEHICLE IDENTIFICATION NUMBERS (VIN) 3

W

WASHER FLUID-LEVEL SENSOR 312
WASHER MOTOR
(WINDSHIELD) 216,222
(REAR) 308
WINDSHIELD WASHER MOTOR 216,222
WINDSHIELD WIPER AND WASHER SWITCH 216,222
WINDSHIELD WIPER MOTOR 216,218
WIPER AND WASHER SWITCH
(WINDSHIELD) 216,222
(REAR) 308
WIPER MOTOR
(WINDSHIELD) 216,218
(REAR) 308
WIRING COLOR CODE 9