Chrysler Crossfire 2004 – 2008 fuse box diagram

Engine Compartment Fuse Box (No.1)

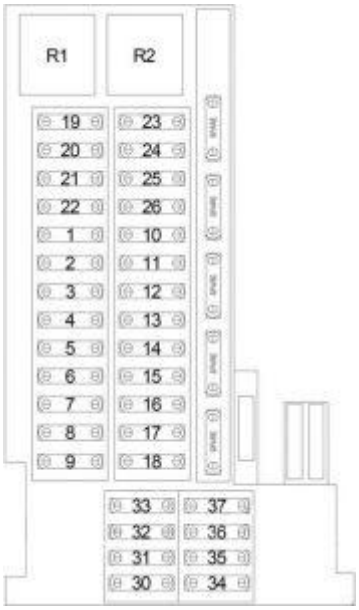

Chrysler Crossfire – fuse box diagram – engine compartment

No.	A	Protected Component
1	5	Stop Lamp Switch, Garage Door Opener (Europe), Universal Garage Door Opener, Tire Pressure Monitor, Heated Seat Module
2	5	Occupant Restraint Controller, Passenger Seat Occupant Simulator, Left/Right Side Impact Sensor
3	5	Instrument Cluster, Airbag Off Indicator Lamp
4	7.5	Power Mirror
5	15	Radio
	25	Convertible: Power Top Control Module

6	5	Power Mirror Switch
	40	Convertible: Power Top Hydraulic Assembly
7	5	Body Control Module, Automatic Day/Night Mirror, Intrusion Sensor
8	15	Radio
9	10	Dome Lamp, Cargo Lamp, Siren, Anti-Theft Tow Sensor, Intrusion Sensor, Body Control Module, Universal Garage Door Opener, Tire Pressure Monitor
10	5	Speed Control Switch
11	15	Ignition Coils, Noise Suppressor
12	10	Heated Washer Nozzles
13	10	SRT: Charge Air Cooler Circulation Pump
14	10	Data Link Connector, Steering Angle Sensor
15	5	Coolant Circulation Pump, Coolant Circulation Valve
16	10	Body Control Module
17	40	ABS
18	40	ABS
19	40	Body Control Module

20	40	Body Control Module
21	30	RHD: Driver Power Seat
	30	LHD: Passenger Power Seat
22	30	RHD: Passenger Power Seat
	30	LHD: Driver Power Seat
23	15	Power Amplifier
24	30	Heated Seat Module
25	20	Central Locking Pump/Security System Module
26	20	Central Locking Pump/Security System Module
30	15	Convertible: Radio
31	15	Cigar Lighter, Glove Box Lamp
32	15	Multi-Function Switch
33	5	A/C Heater Control Module
34	30	Convertible: Blower Motor
35	15	Instrument Cluster, Remote Keyless Entry Relay, Console Switch Group, Key-In Ignition Switch, Sentry Key Remote Entry Module, A/C Heater Control Module

36	30	Blower Motor
	5	Convertible: Power Mirror Switch
37	5	A/C Heater Control Module, Recirculated Air Switchover Valve, Sentry Key Remote Entry Module, Instrument Cluster, Illumination Control Module, Ash Receiver Lamp, Power Window Switch, Power Top Switch, Console Switch Group, Radio
Relay		
R1	Stop Lamp	
R2	Remote Keyless Entry	

Passenger Compartment Fuse Box

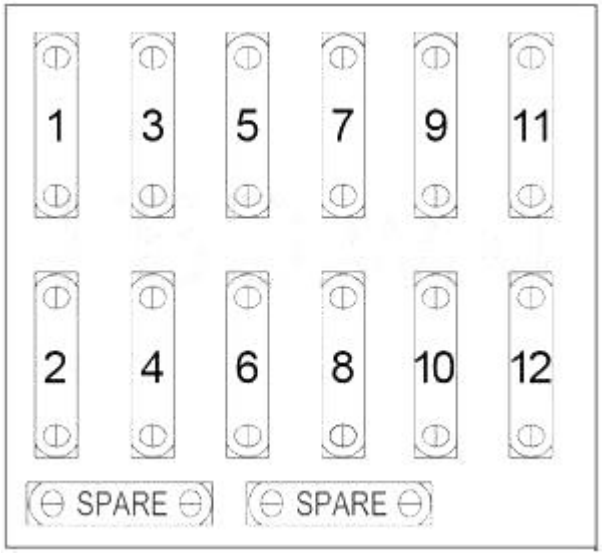

Chrysler Crossfire – fuse box diagram – passenger compartment

No.	A	Protected Component
1	–	–

2	15	Stop Lamp Switch, ABS, Stop Lamp Relay
3	7.5	Right High Beam, High Beam Indicator Lamp
4	15	Back-Up Lamp, Turn Signal Lamp, Automatic Day/Night Mirror, Radio
5	7.5	Left High Beam
6	15	Right Low Beam
7	7.5	Front Right Parking Light, Right Side Marker, Right Taillamp
8	15	Left Low Beam
9	15	Front Fog Lamp
10	7.5	Front Left Parking Light, Left Side Marker, Left Taillamp
11	7.5	License Lamp, Instrument Cluster, Ash Receiver
12	7.5	Rear Fog Lamp

Engine Compartment Fuse Box (No.2)

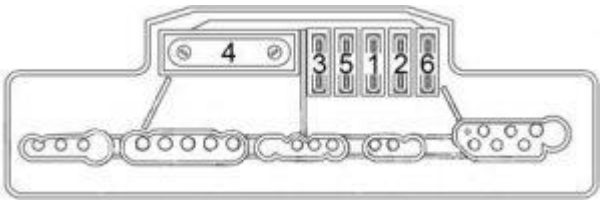

Chrysler Crossfire – fuse box diagram – engine compartment

No.	A	Protected Component

1	15	Traction System Relay
2	15	Oxygen Sensors, Air Pump Relay, EVAP Purge Solenoid, Charcoal Canister Shutoff Valve, Air Pump Switchover Solenoid, EGR Solenoid (except SRT), Supercharger Clutch (SRT), Short Runner Valve Solenoid (except SRT)
3	15	Powertrain Control Module, Fuel Injectors, Camshaft Position Sensor, Fuel Pump Relay
4	40	Air Pump Relay
5	15	Fuel Pump Relay
6	15	Horn Relay

Fusible Link Block

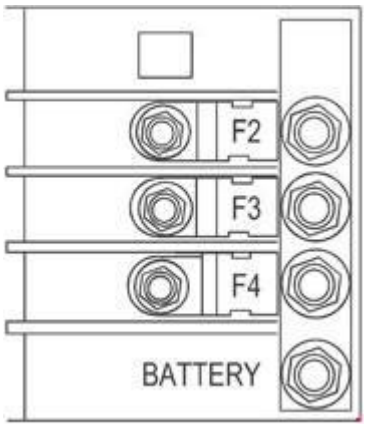

Chrysler Crossfire – fuse box diagram – fusible link block

No.	A	Protected Component
F2	50	Radiator Fan Control Module
F3	50	ABS, Pulse Module

F4	200	Main