
61 13 ... Butt connector for repairing a plug connection

Special tools required:

- 61 0 300
- 61 4 340
- 61 0 240

Important!


1. Identify cause of damage (e.g. sharp-edged body components, faulty electrical loads, jammed mechanisms, corrosion caused by ingress of water, etc.).
2. Read out fault memory
3. Eliminate cause of damage.
4. Disconnect battery negative terminal
5. Make sure that no safety-related system according to circuit diagram (e.g. antilock braking system, active rear-axle kinematics, airbags, etc.) are influenced. Otherwise replace faulty wiring harness or use repair cable (sourcing reference: BMW Parts Department)
6. Carry out function test and read out fault memories again
7. Eliminate new faults if applicable and clear fault memories

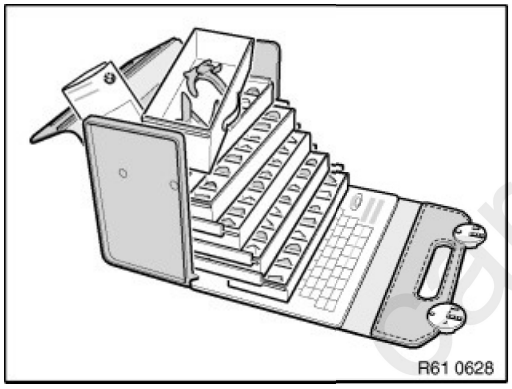

Note:
The repair range IV for vehicle electrical system contained the required special tools and individual parts for retrofitting and repair work with the aid of fan connectors.

The case can no longer be ordered. Order individual parts for wiring harness repair through BMW Parts Department.


- Refer to Service Information:
  SI 02 04 07 341

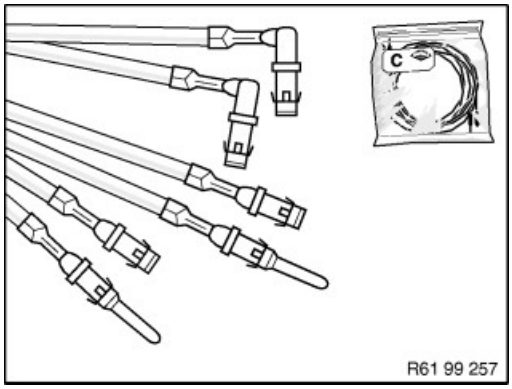

Choose repair kit.

Example: Repair kit, circular connector system D 2.5.

cardiagn.com

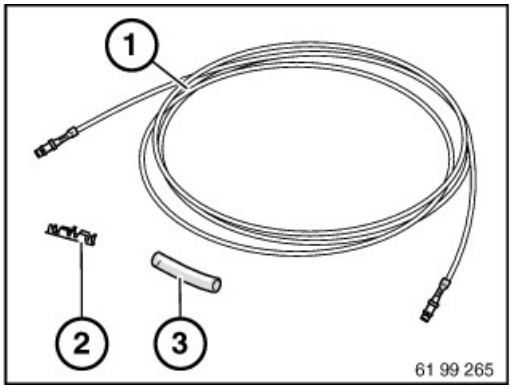


Remove following parts:

(1) Pre-packaged end of cable with requisite wire cross-section

(2) Crimp connector for selected wire cross-section


(3) Shrink-fit hose

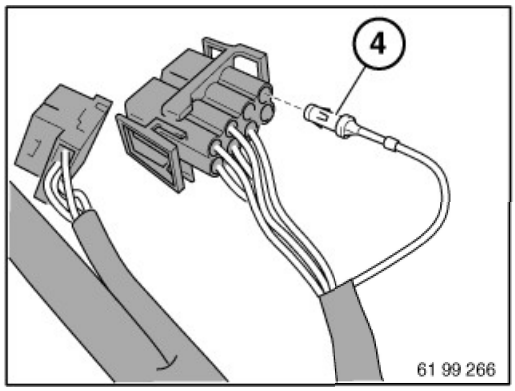

Open secondary lock on housing.

Mark damaged contact (4) with socket number of housing and press it out of housing using appropriate special tool contained in special tool set 61 0 300).

See repair instructions
Notes for opening contacts and locks of different plug contact systems.

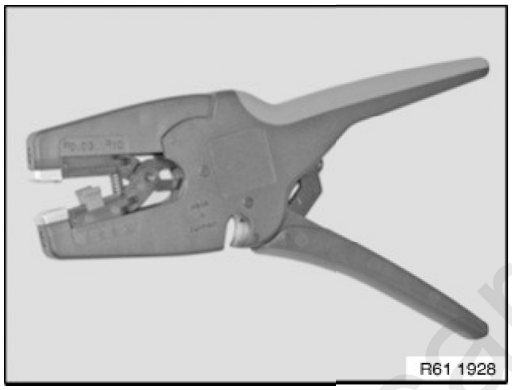


Important!

- Check maximum length of repair cable
- If more than one wire is to be repaired, the individual interfaces must be offset so that the wiring harness is not too thick at the repaired point.

Adhere to following procedure:

- Cut off wire with faulty contact at point which is easily accessible
- Strip insulation from end of wire at wiring harness end
- Cut preassembled wire end to length and strip insulation

Refer also to repair instruction:
Cutting to length and stripping insulation from cables

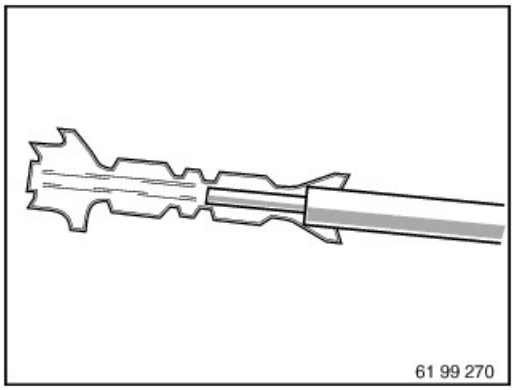


Crimp butt connector on preassembled wire end.

Special tools:


- 61 4 340 (0.35 - 2.5 sq mm)
- 61 0 240 (4.0 - 6.0 sq mm)

See repair instructions
Crimping on stop parts


cardiagn.com

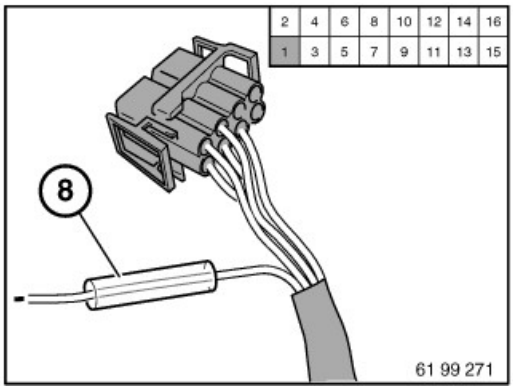


Push shrink-fit hose (8) onto free wire end.

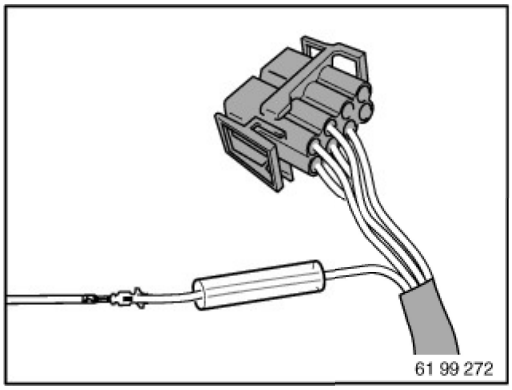

Crimp unused wire end to butt connector.

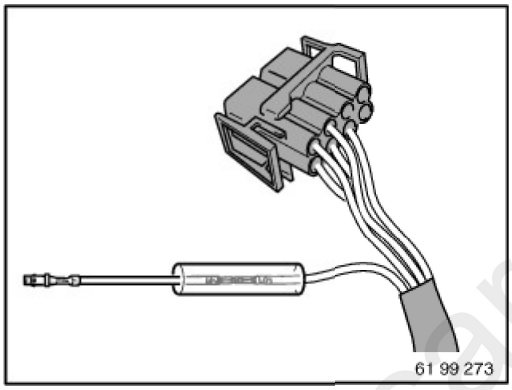

Pull shrink-on sleeve over butt connector.

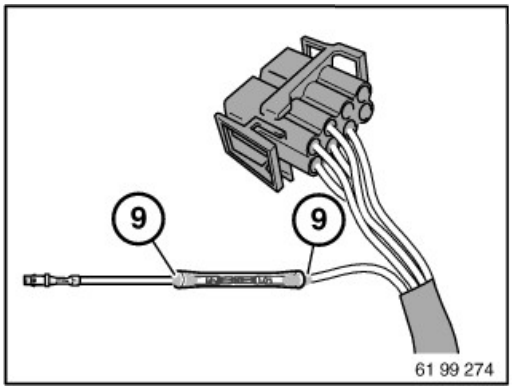

Important!

Do not burn shrink-on sleeve.

With hot air blower, shrink the shrink-on sleeve on both sides (9) of shrink-fit hose until glue emerges uniformly all round.

Insert contact in housing.


Close secondary lock on housing.

cardiagn.com

61 13 ... Circular connector, 13-pin, system D2.5


Special tools required:

- 61 0 303

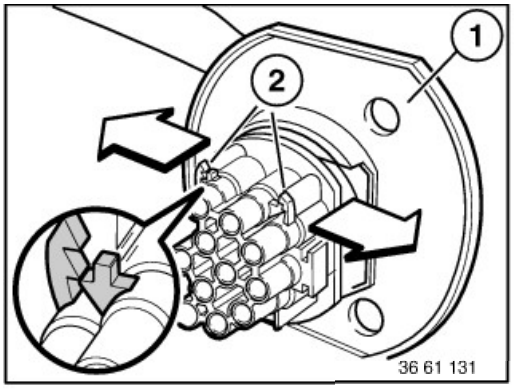


Pull off rubber grommet (1).

Carefully pull out lock (2) in direction of arrow.

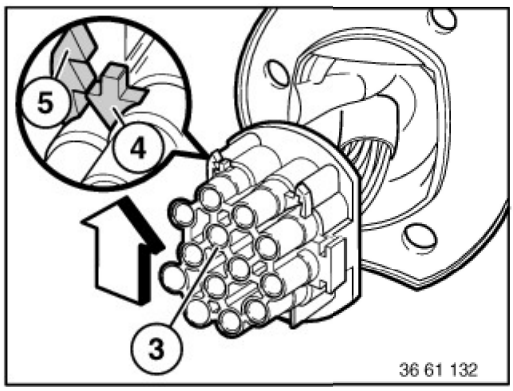

Move lower section of connector (3) in direction of arrow until retaining lugs (4) snap into release groove (5).

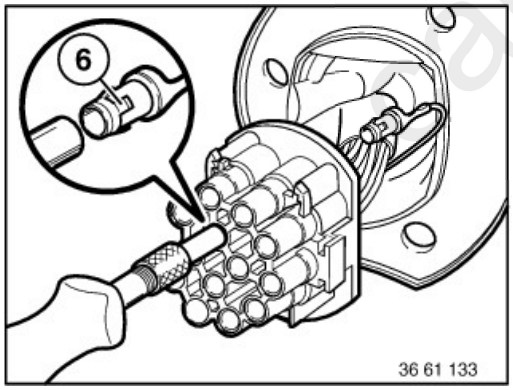


With special tool 61 0 303 , press down retaining lugs (6) of corresponding contact and pull out cable.

cardiagn.com


61 13 ... Circular connector, 20-pin, system D2.5

Special tools required:


- 61 0 303

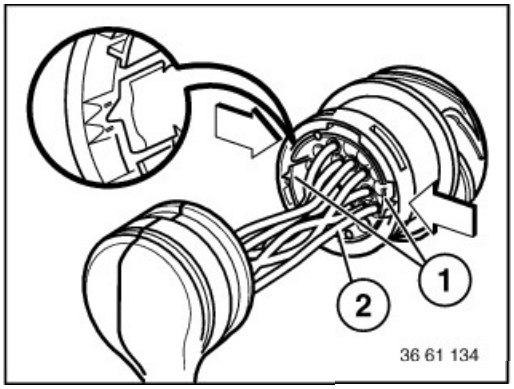

Carefully press back retaining tabs (1) of internal connector (2).

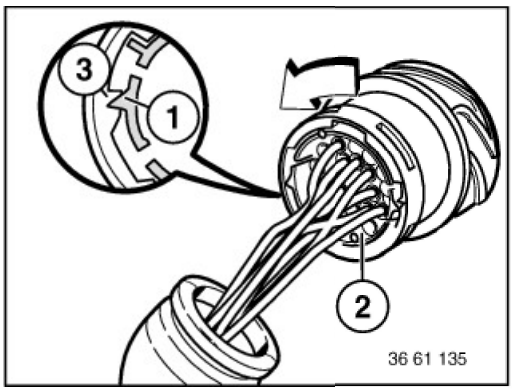

Turn internal connector (2) until retaining lugs (1) snap into release groove (3).

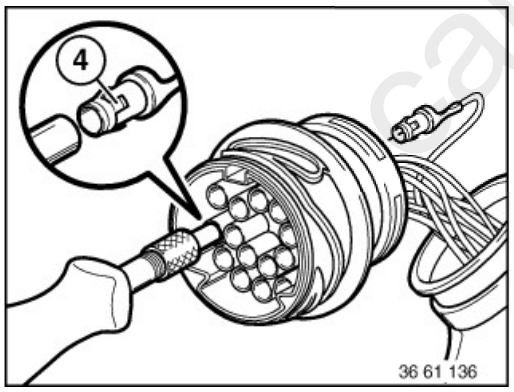


With special tool 61 0 303 press down retaining hook (4) of corresponding contact and pull out cable.

cardiagn.com

61 13 ... Circular connector, 7-pin, 8-pin, system D2.5


Special tools required:

- 61 0 303

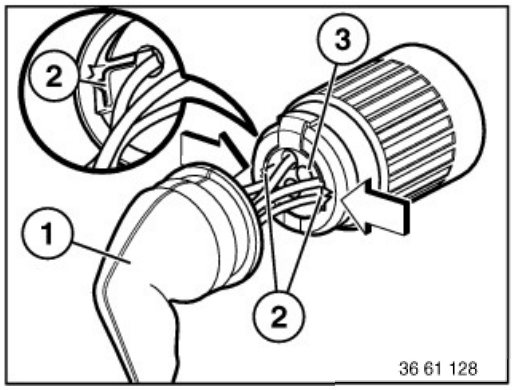


Carefully pull off rubber grommet (1).

Carefully press back retaining tabs (2) of internal connector (3).

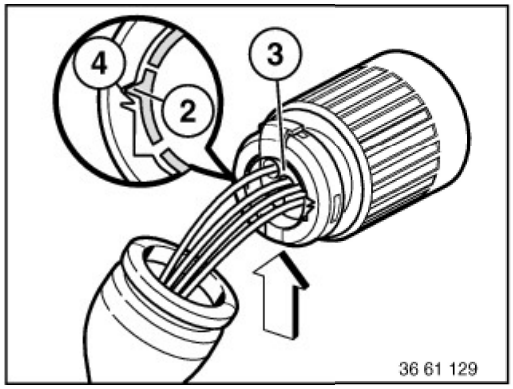

Slide internal connector (3) in direction of arrow until retaining tabs (2) lock into locking groove (4).

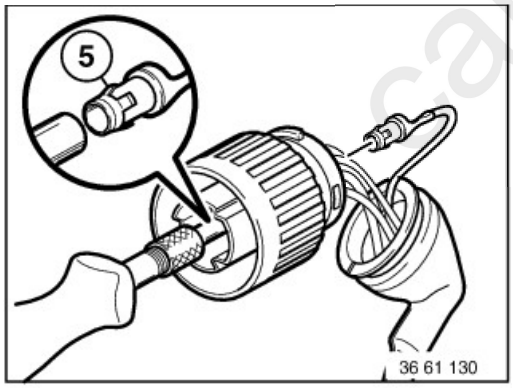


Use special tool 61 0 303 (61 1 132) to press back retaining hook (5) of corresponding contact and pull out cable with contact.

cardiagn.com


61 13 ... Circular plugs, 4-, 7-, 10- 12-, 25-pin, System D1.5/D2.5

Special tools required:

- 61 0 303

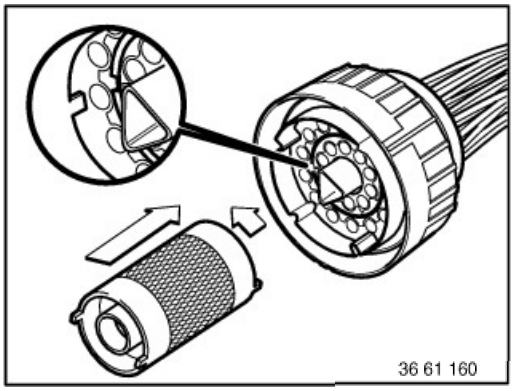


Insert special tool with suitable connection side in connector and twist approx. 3° anticlockwise.

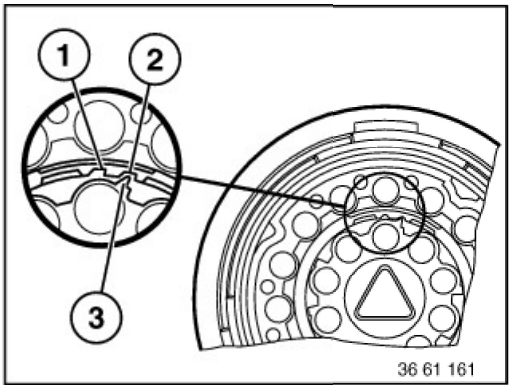

The connector is locked down if retaining lug (3) is located in locking groove (2).

1. Unlocking groove
2. Locking groove
3. Retaining lug

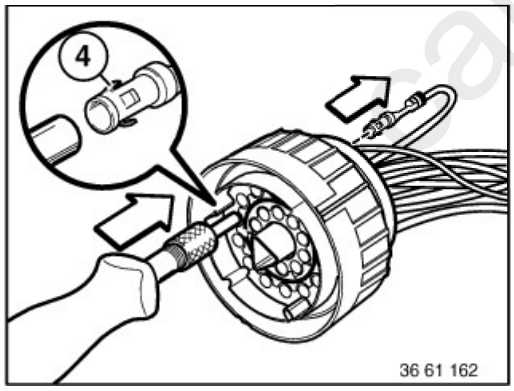


With special tool 61 0 303 press back retaining hook(4) of corresponding contact and pull out cable with contact.

cardiagn.com


61 13 ... Connector housing, LCC contact (load current contact)

Special tools required:


- 61 0 317

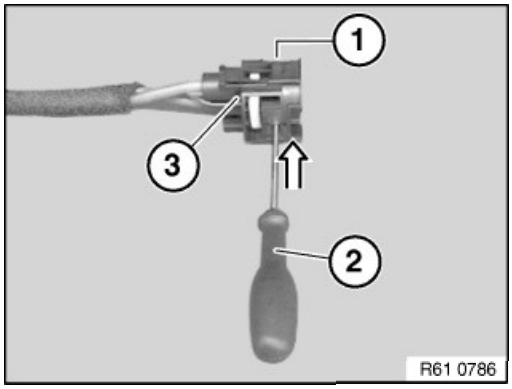

Socket housing:
Press lock (1) with suitable tool (2) in direction of arrow out of socket housing (3).

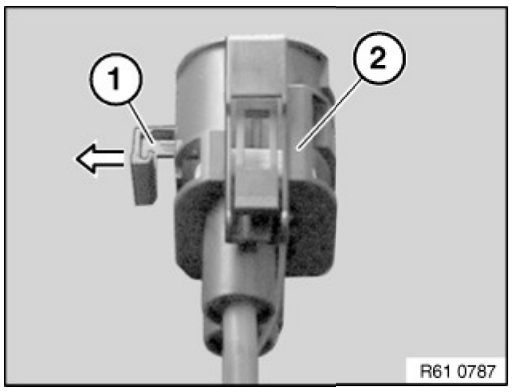


Pull lock (1) out of socket housing (2).

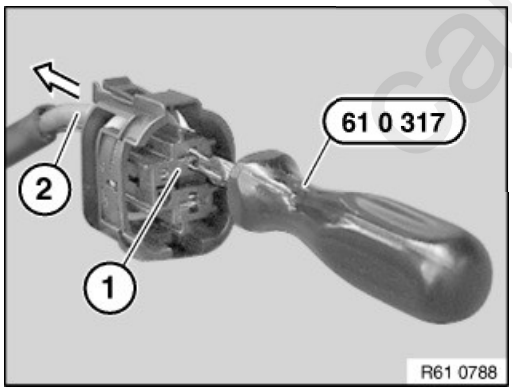


Insert special tool 61 0 317 into socket housing (1) and pull out wiring with LCC contact (2) in direction of arrow.

cardiagn.com

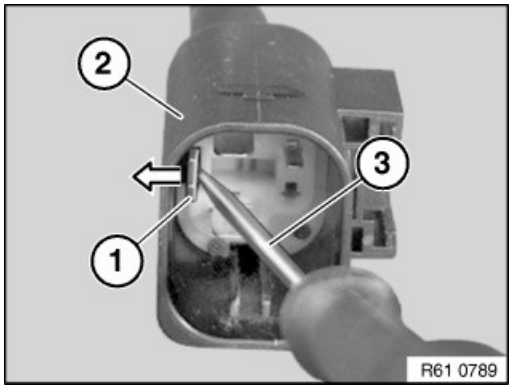

Pin housing:
Unlock locking slide (1) of pin housing (2) with suitable tool (3) in direction of arrow.

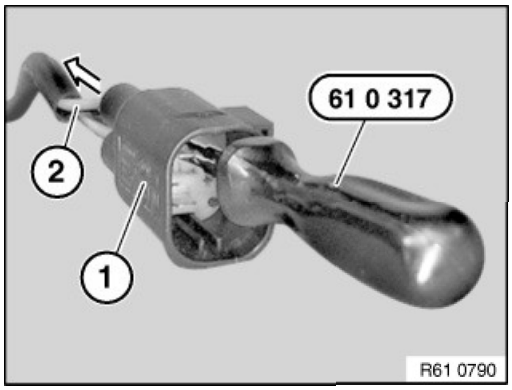


Insert special tool 61 0 317 into pin housing (1) and pull out wiring with LCC contact (2) in direction of arrow.

cardiagn.com

61 13 ... Control unit plugs, 25-, 35-, 55-, 83-, 88-pin


Special tools required:

- 61 0 312
- 61 0 314
- 61 0 315
- 61 0 323

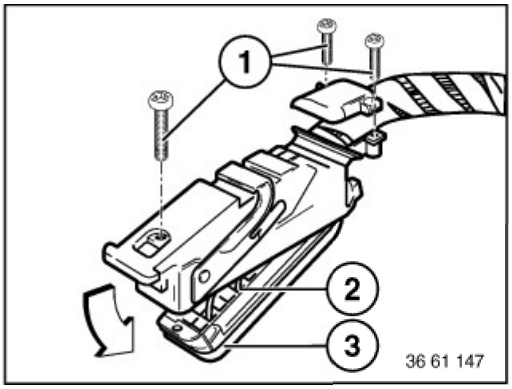


Release screws (1).

Lever out pin sensor (2) with gasket (3) in direction of arrow.

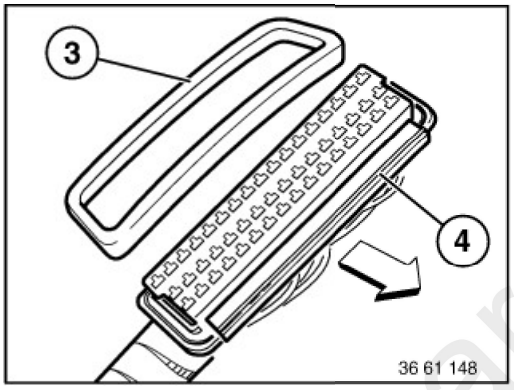

Remove gasket (3).

Pull out housing lock (4) in direction of arrow and unlock.

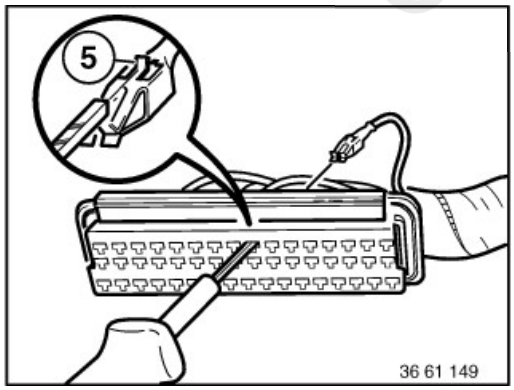


Press down retaining hook (5) of corresponding contact and pull out cable with contact.


Special tool 61 0 312 (61 1 134) for mini flat spring contacts.

Special tool 61 0 314 (61 1 135) for mini flat spring contacts.

cardiagn.com

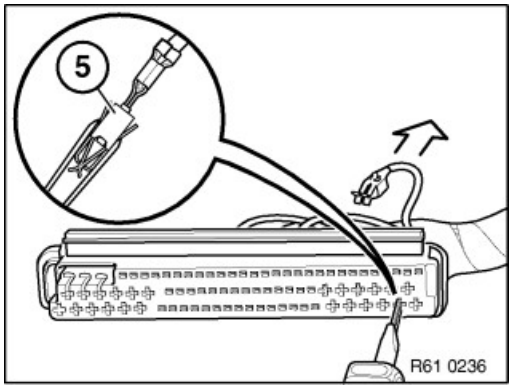

Special tool 61 0 315 (61 1 151) for double flat spring contacts (dual retaining hooks).

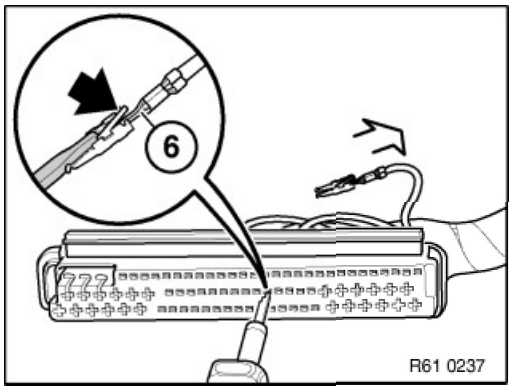

Special tool 61 0 323 (61 1 152) for double flat spring contacts (special retaining hook).

cardiagn.com

61 13 ... Crimping annular contacts



Special tools required:

- 61 4 320



Crimping annular contacts:

Special tool61 4 320

Handling:

Refer to Service Information:


- SI 2 04 06 2939

cardiagn.com


61 13 ... Crimping Micro Power Quadlock contacts (MPQ)

Special tools required:

- 61 4 320

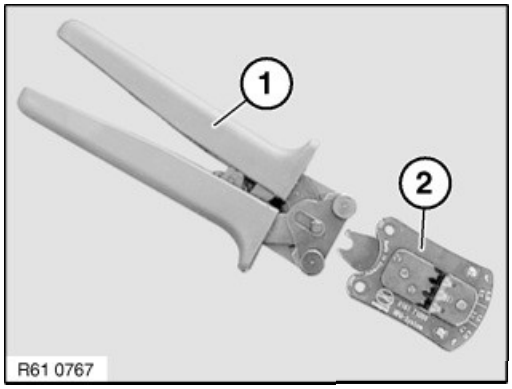

To crimp MPQ contacts, use hand pliers 61 4 321 (1) in conjunction with crimping head 61 4 325 (2) from crimping set 61 4 320 .*Note:*
Hand pliers (1) open automatically until limit position when handles are pressed together.

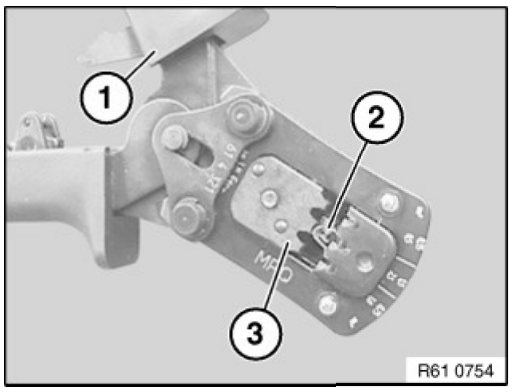


Open hand pliers (1).

Note:
Place contact (2) with utmost care in designated nest (observe line cross-section) in crimping head (3). Make sure it is exactly positioned.

Place MPQ contact (2) in crimping head (3).

Close hand pliers (1) one notch.

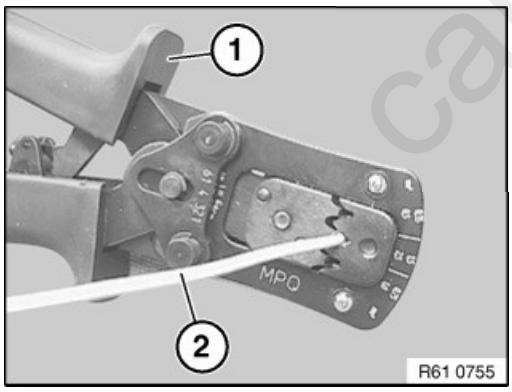

Note:
Follow procedure for cutting and stripping insulation from cables.

Insert stripped cable (2).

Close hand pliers (1) fully.

Open hand pliers (1) and remove cable (2).

Important!


Check contact for correct crimping.

cardiagn.com


61 13 ... Crimping Micro Quadlock System contacts (MQS)

Special tools required:

- 61 4 320

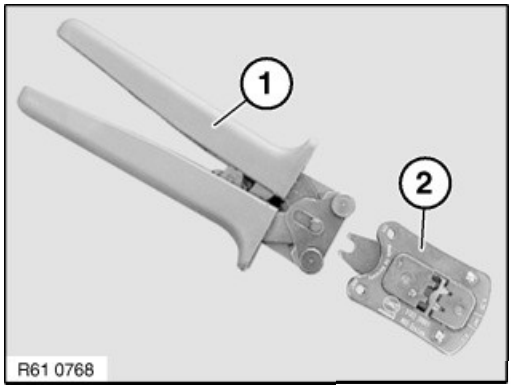

To crimp MPQ contacts, use hand pliers 61 4 321 (1) in conjunction with crimping head 61 4 324 (2) from crimping set 61 4 320 .*Note:*
Hand pliers (1) open automatically until limit position when handles are pressed together.

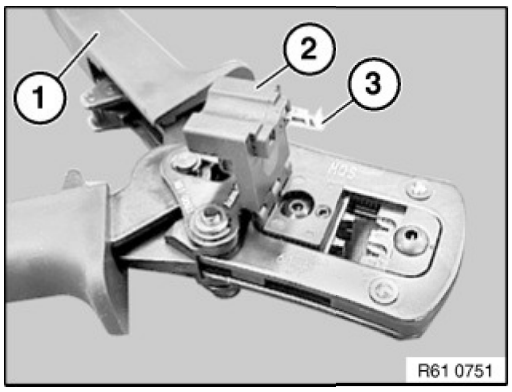


Open hand pliers (1).

Fold up contact carrier (2).

Insert MQS contact (3) in contact carrier (2).

Fold back contact carrier (2).

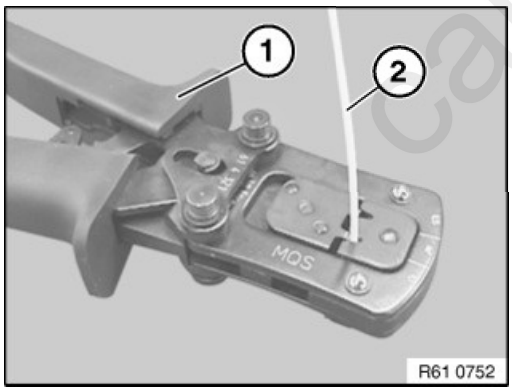


Note:
Follow procedure for cutting and stripping insulation from cables.

Close hand pliers (1) one notch.

Insert stripped cable (2).

Close hand pliers (1) fully.

cardiagn.com

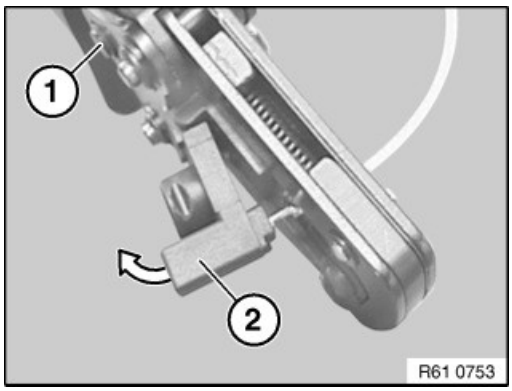

Open hand pliers (1).

Open contact carrier (2) gently and carefully remove MQS contact.

Important!


Check contact for correct crimping.

cardiagn.com


61 13 ... Crimping optical fibres

Special tools required:


- 61 4 320

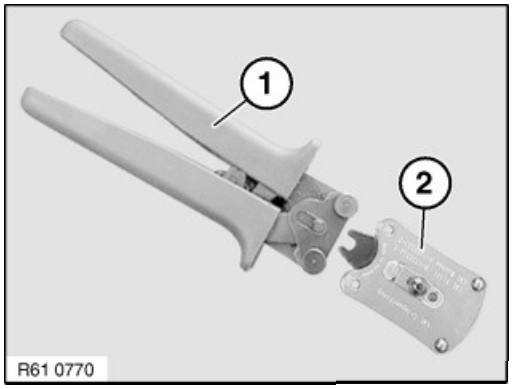

To crimp optical fibres, use hand pliers 61 4 321 (1) in conjunction with crimping head 61 4 323 (2) from crimping set 61 4 320 .*Note:*
Hand pliers (1) open automatically until limit position when handles are pressed together.

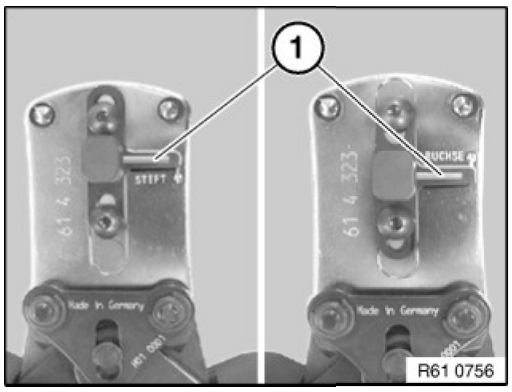


Move contact guide by means of stop lever (1) into corresponding position (pin contact or jack).

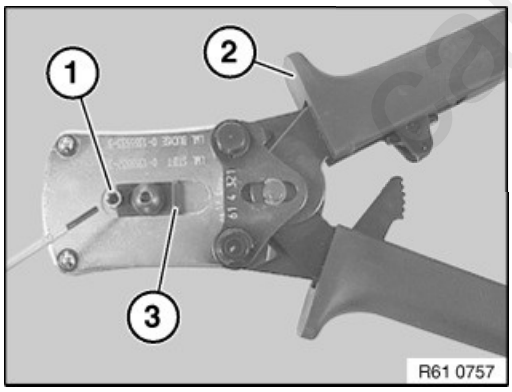

Open hand pliers (2).

Place pin contact or jack (1) in crimping head and secure with locking lever (3).

carldiagn.com

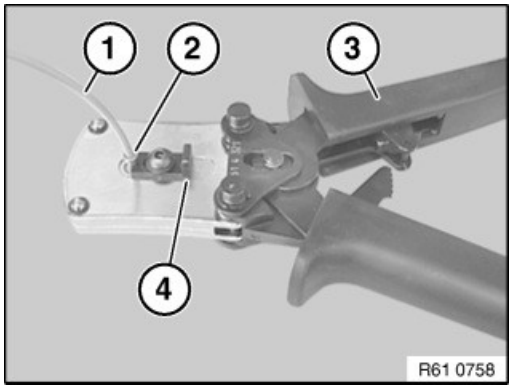


Note:
Follow procedure for cutting and stripping insulation from optical fibres.

Insert stripped optical fibre(1) until limit position into pin contact or jack (2).

Close hand pliers (3) fully.

Open hand pliers (3) and locking lever (4).

Remove optical fibre (1).

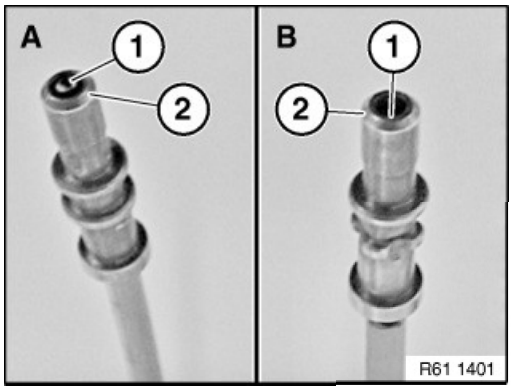

Attention!

Make sure optical fibre is correctly seated in jack.

Right (A)

End of optical fibre (1) must be flush with tip of pin contact (2).

Wrong (B)

End of optical fibre (1) is not flush with tip of pin contact (2).

cardiagn.com

61 13 ... Crimping stop parts

Special tools required:

- 12 1 080
- 12 1 081
- 12 1 083

Spare parts for in-car electronics (housing and contacts):

Refer to Service Information:

SI 2 04 07 341

1. Crimping butt connectors and contact sleeves for comb connectors up to 2.5 mm

Refer to Service Information:


SI 2 04 06 293

2. Crimping butt connectors and contact sleeves for comb connectors larger than 2.5 mm ^{2}

Refer to Service Information:

SI 2 02 05 194

SI 2 07 05 233

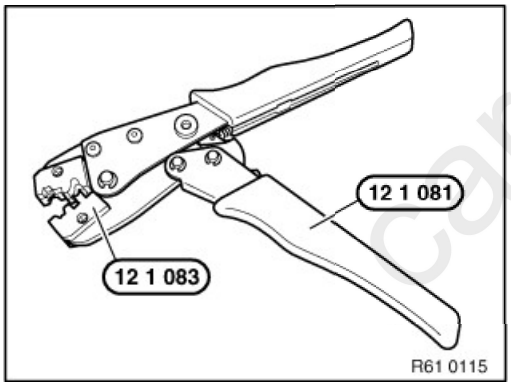


3. Crimping contact sleeves for 4 mm^2 comb connectors and ignition cable contacts

Use special tool kit 12 1 080 to attach ignition cable contacts and crimp 4 mm^2 contact sleeves for comb connectors.

- 12 1 081 (hand pliers)
- 12 1 083 (nest)

See repair instructions
Special tools for wiring harness repairs.

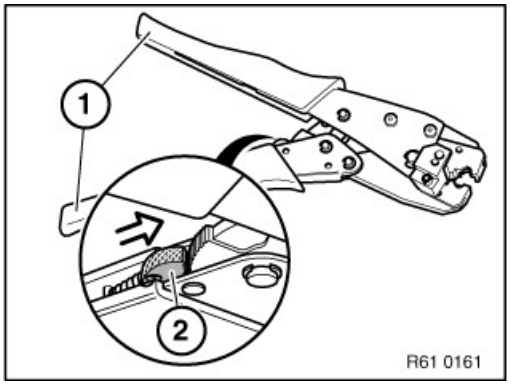


Release special tool 12 1 081 :

Squeeze grips (1) lightly and push release lever (2) in direction of arrow.


Or:

Compress handles until limit position, hand pliers unlock automatically.


cardiagn.com

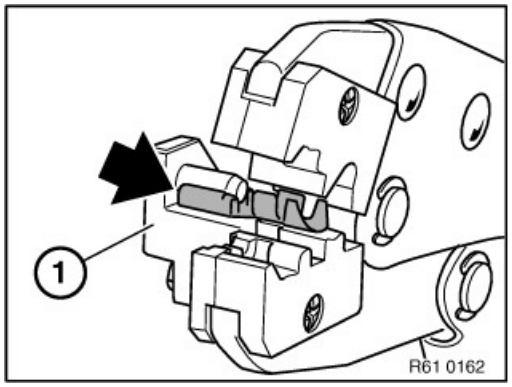

Place 4 mm² contact sleeve in nest with anti-twist safeguard (1) as far as possible.

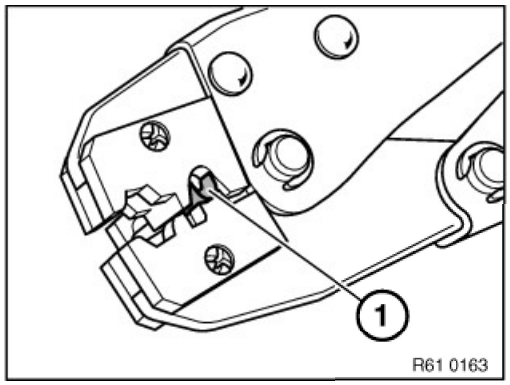

Preload contact by squeezing matrix in crimping tool. Grip contact (1) firmly only, do not crimp.

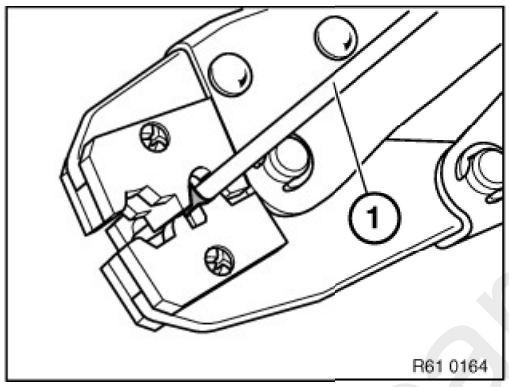


Note:
Follow procedure for cutting and stripping insulation from cables.

Insert stripped end of wire (7) in the contact. Ensure insulation and stripped wire end are correctly laid in contact.

Compress crimping tool to limit position.

Crimping tool unlocks automatically.

Take contact out of crimping tool.

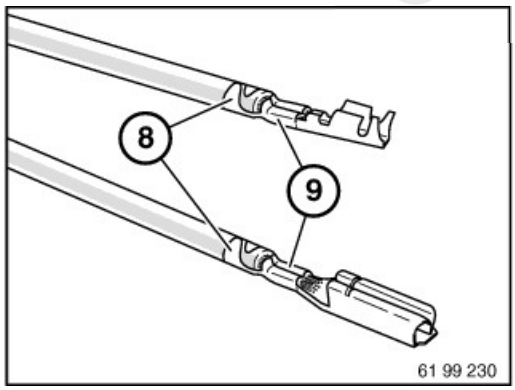


4. Checking crimping


Check insulation crimping (8) and wire crimp (9) against following illustrations to ensure crimps are correctly located.

Note:
Illustration shows butt connectors and contact sleeves for comb connectors knocked on one side. The crimping procedure is identical here.


cardiagn.com

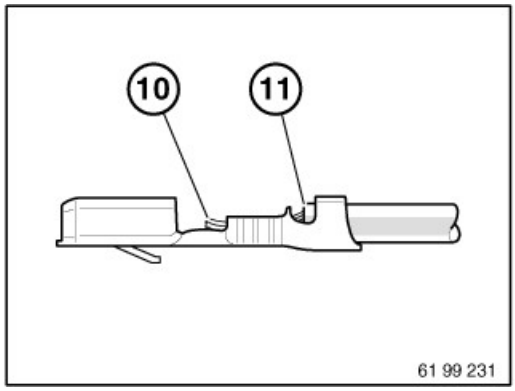

Correct crimping:
Visible conductor end (10).
Visible insulation end (11).

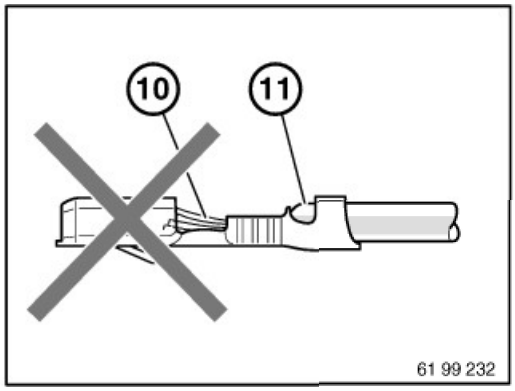

Incorrect crimping:
Conductor end (10) inserted too far.
Insulation end (11) in wire crimp.
If necessary, repeat crimping with a new contact.

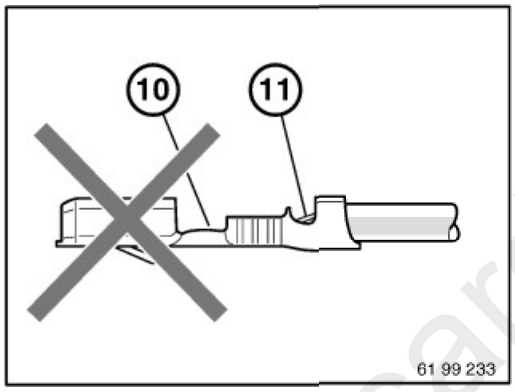

Incorrect crimping:
Conductor end (10) not visible.
Insulation end (11) not visible.
If necessary, repeat crimping with a new contact.

cardiagn.com

61 13 ... Crimping stop parts



Special tools required:

- 0 494 159
- 0 496 849
- 0 496 833
- 2 407 379
- 61 4 320
- 61 4 340
- 61 0 210
- 61 0 220
- 61 0 230



Necessary preliminary work:

- Notes for opening contacts and locks of different connector systems.
- Cutting cables to length and strip insulation

Special tools for wiring harness repair.

New part for vehicle electrical system (stops and housing):

- Sourcing reference: BMW Group Parts
- Refer to Service Information SI 2 04 07 341



1. Crimping of NanoMQS stops (only G11; G12)

Crimping of NanoMQS contacts (MQS).

- Special tool handle 0 494 159 or 0 496 849
- Special tool (die-plate) 0 496 833
- Stripping tool2 407 379



2. Crimping of stops up to 2.5 mm ^{2}

Crimping Micro Quadlock System contacts (MQS).

- Special tool61 4 320

Crimping Micro Power Quadlock contacts (MPQ).

- Special tool61 4 320

Crimping miscellaneous stop parts up to 2.5 mm^2

- Special tool 61 4 340 (up to 03/2010 SWZ 61 4 328)

Refer to Service Information SI 2 04 06 293

cardiagn.com

3. Crimping of stops above 2.5 mm ^{2}

Crimping load current contacts (LSK 8).

- Special tool61 0 210

Crimping SLK 2.8.


- Special tool61 0 220

Refer to Service Information SI 2 02 05 194

Crimping double spring contact (DFK 40)

Crimping MAK 8


- Special tool61 0 230
- Refer to Service Information SI 2 07 05 233

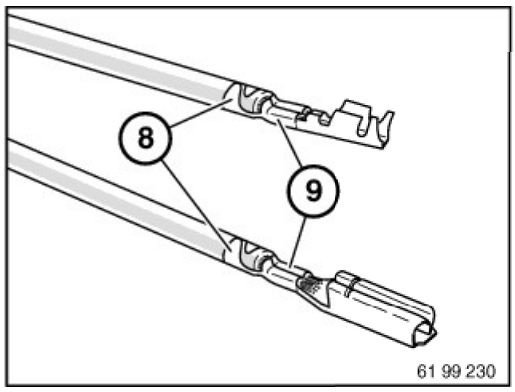

Checking crimping

Check insulation crimping (8) and wire crimp (9) against following illustrations to ensure crimps are correctly located.


Note:
Illustration shows butt connectors and contact sleeves for comb connectors knocked on one side. The crimping procedure is identical here.

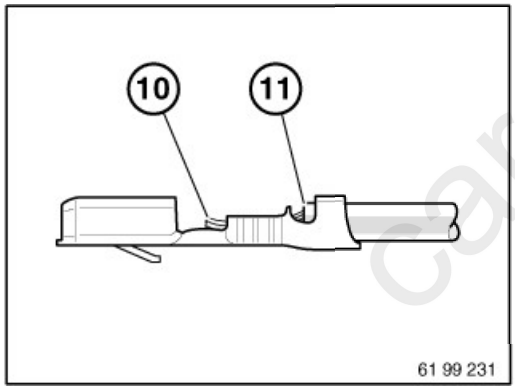

Correct crimping:

Visible conductor end (10).

Visible insulation end (11).

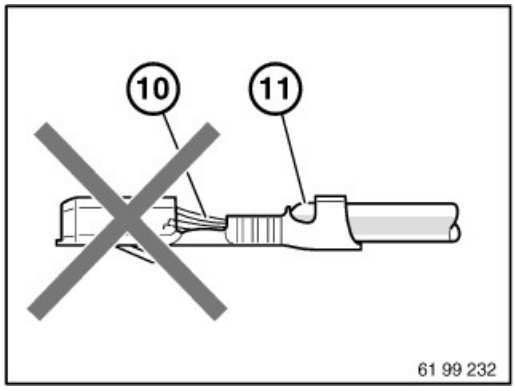


Incorrect crimping:

Conductor end (10) inserted too far.

Insulation end (11) in wire crimp.

If necessary, repeat crimping with a new contact.

cardiagn.com

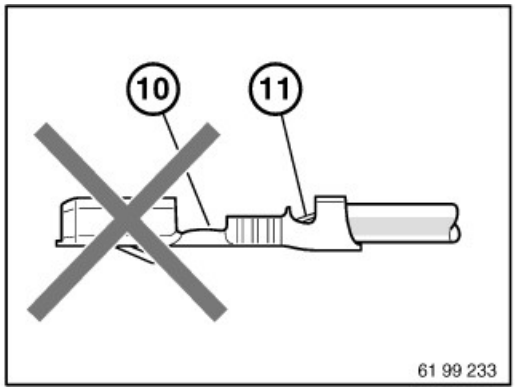

Incorrect crimping:

Conductor end (10) not visible.

Insulation end (11) not visible.


If necessary, repeat crimping with a new contact.

cardiagn.com


61 13 ... Cutting off, stripping insulation and cutting optical fibres to length

Special tools required:

- 61 4 321
- 61 4 329
- 61 4 320
- 61 4 323

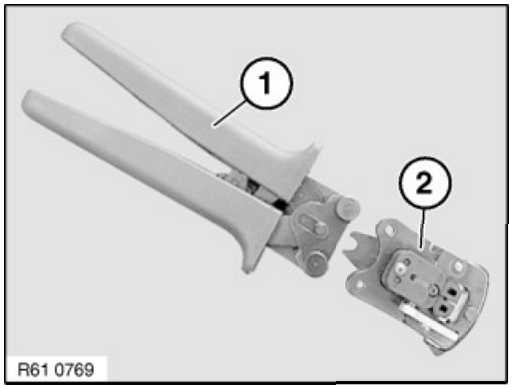

The hand pliers 61 4 321 (1) in connection with the crimping head 61 4 329 (2) from crimp kit 61 4 320 are used for cutting, strip insulation and cutting optical fibres to size.*Note:*
Hand pliers (1) open automatically until limit position when handles are pressed together.

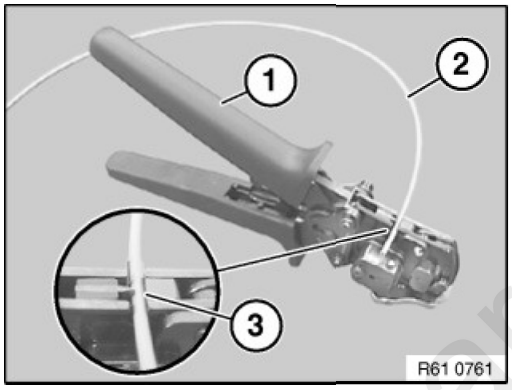


Cutting optical fibre

Open hand pliers (1).

Place optical fibre (2) in cutting device (3).

Close pliers (1) and remove optical fibre (2).

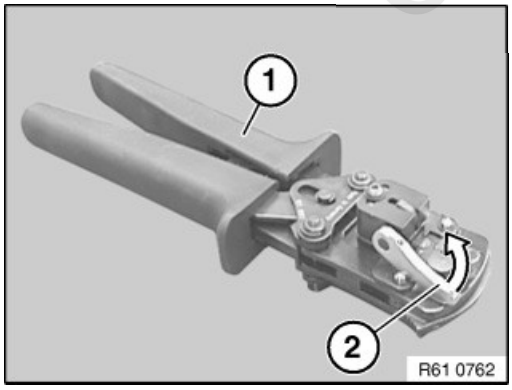


Stripping insulation from optical fibre

Open hand pliers (1).

Open lever (2) in direction of arrow.

cardiagn.com

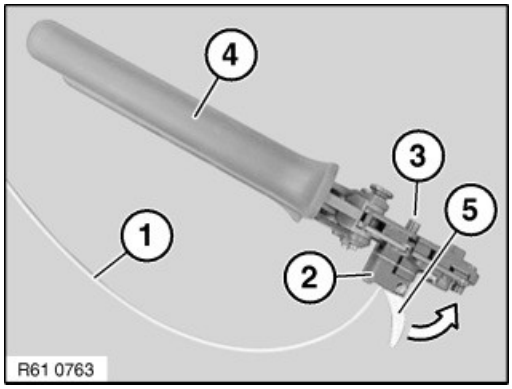


Push the optical fibre (1) into the strip insulation equipment (2) until it is flush in this area (3).

Close hand pliers (4) fully.

Close the operating lever (5) in the direction of the arrow.

Open hand pliers (4) by one tooth notch.

Re-open the operating lever (5) against the direction of the arrow and remove the optical fibre (1).

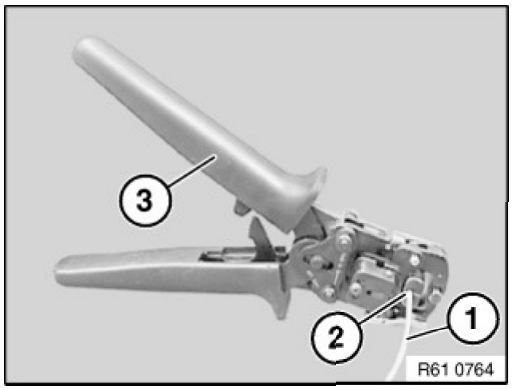


Cutting optical fibre to length

Open hand pliers (3).

Push the optical fibre (1) into the cutting equipment (2) until the insulation of the optical fibre (1) comes into contact with the clamping fixture.

Close hand pliers (3) fully and keep closed.


Remove optical fibre (1).

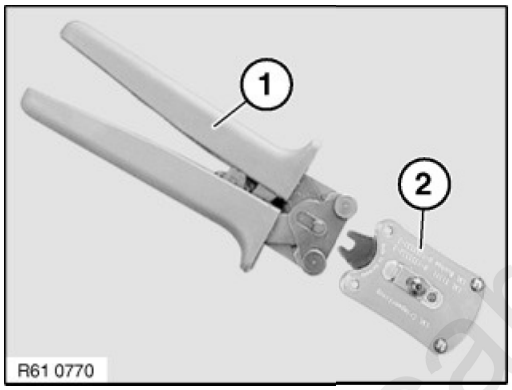

Crimp optical fibre


The hand pliers 61 4 321 (1) in connection with the crimping head 61 4 323 (2) from crimping kit 61 4 320 are used for crimping the optical fibres to size.

Note:
Hand pliers (1) open automatically until limit position when handles are pressed together.

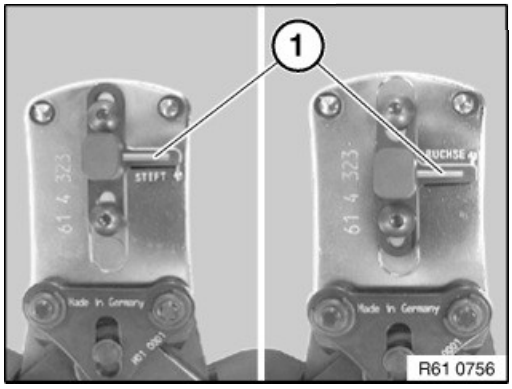


Move contact guide by means of stop lever (1) into corresponding position (pin contact or jack).

cardiagn.com

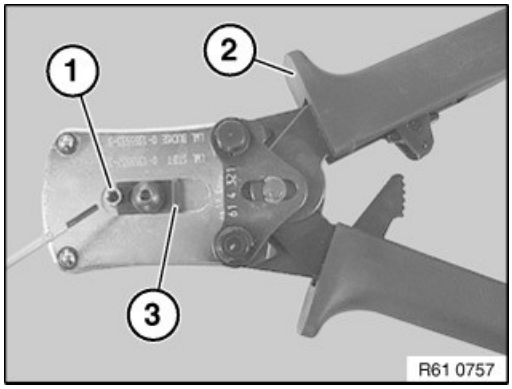

Open hand pliers (2).

Place pin contact or jack (1) in crimping head and secure with locking lever (3).

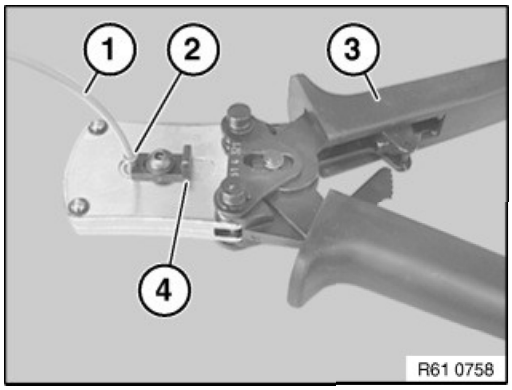


Insert stripped optical fibre(1) until limit position into pin contact or jack (2).

Close hand pliers (3) fully.

Open hand pliers (3) and locking lever (4).

Remove optical fibre (1).

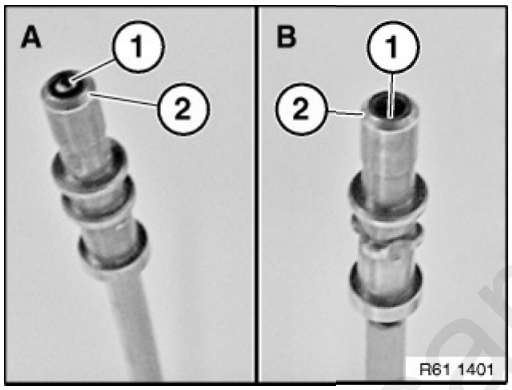

Caution!

Make sure optical fibre is correctly seated in jack.

Right (A)

End of optical fibre (1) must be flush with tip of pin contact (2).

Wrong (B)

End of optical fibre (1) is not flush with tip of pin contact (2).

cardiagn.com

61 13 ... Cutting to length and stripping insulation from cables



For cutting cables to length and stripping insulation, refer to Service Information:

SI 2 07 11 721


Stripped length:

Wire cross-section (mm2)	Stripped length (mm)
0,35 ... 0,50	4,0
0,75 ... 1,00	4,5
1,00 ... 2,50	5,0

cardiagn.com

Manufactured by AMP: The following contact types without strand sealing can be fitted in the connector housings:

- MQS (Micro Quadlock System)
- MPQ, width 2.8 mm (Micro Power Quadlock)
- MPQ, width 5.2 mm (Micro Power Quadlock)

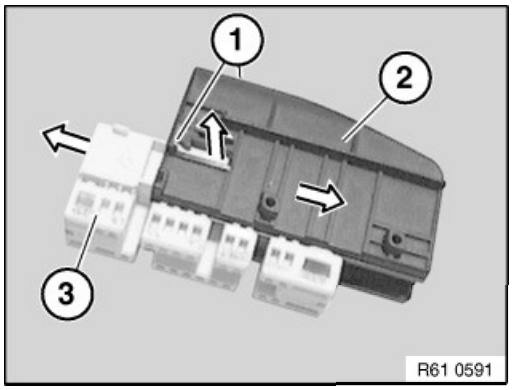


Socket housing:

Press locks (1) on protective cap (2) upwards on both sides.


Detach protective cap from contact carrier (3).

Note:
Detaching the protective cap releases the secondary locks of the socket contacts.

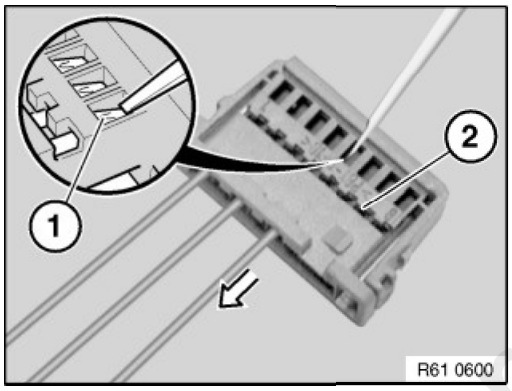


Hold down retaining hook (1) of socket contact in opening of contact carrier with a small screwdriver.

Pull wire with socket contact in direction of arrow as far as secondary lock (2).

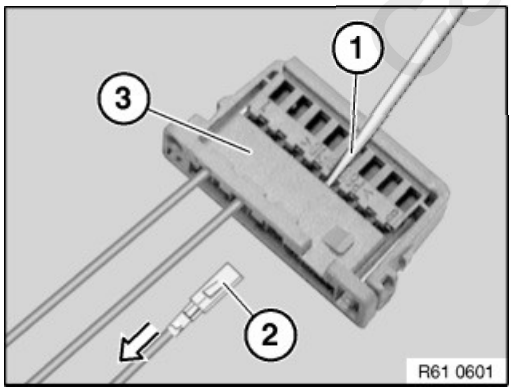

Hold down retaining hook in secondary lock (1) again and pull cable with socket contact (2) completely out of contact carrier (3).

carsdiagn.com

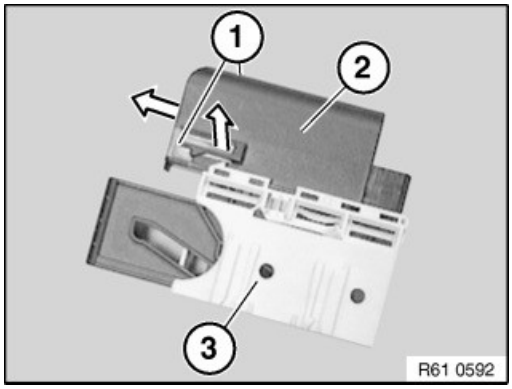


Pin housing:

Press locks (1) on protective cap (2) upwards on both sides.

Detach protective cap from housing carrier (3).

Note:
Detaching the protective cap releases the secondary locks of the pin contacts in the contact carriers.

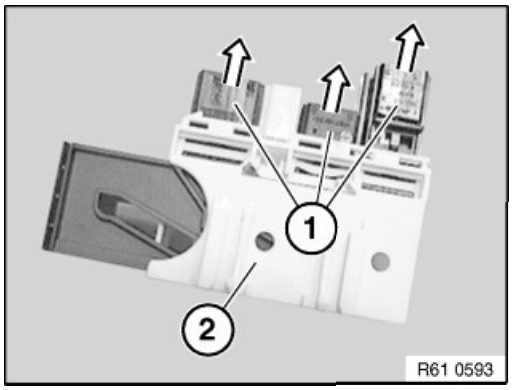


Pull contact carrier (1) out of housing carrier (2).

The pin contacts are pulled out of a contact carrier as described under "Socket housing".

cardiagn.com

Manufactured by AMP: The following contact types without strand sealing can be fitted in the connector housings:

- MQS (Micro Quadlock System)
- MPQ, width 2.8 mm (Micro Power Quadlock)
- MPQ, width 5.2 mm (Micro Power Quadlock)

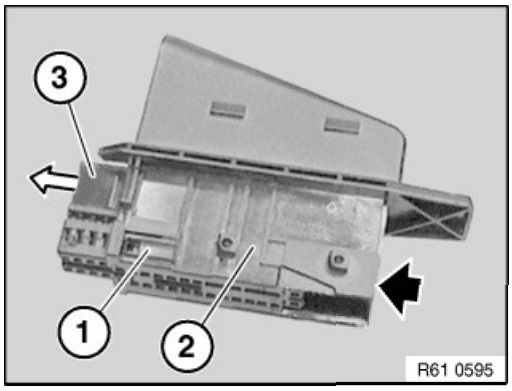


Socket housing:

Raise lock (1) on housing (2).


Push contact carrier (3) out of housing (2).

Note:
Pushing out the contact carrier releases the secondary locks of the socket contacts.

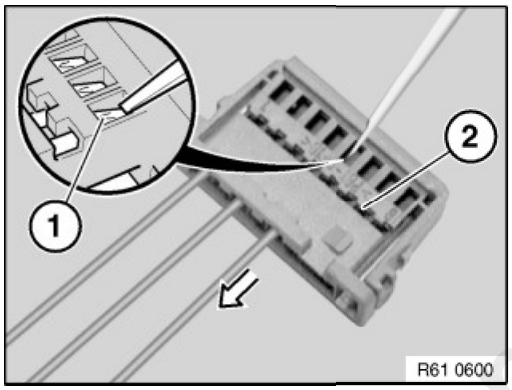


Hold down retaining hook (1) of socket contact in opening of contact carrier with a small screwdriver.

Pull wire with socket contact in direction of arrow as far as secondary lock (2).

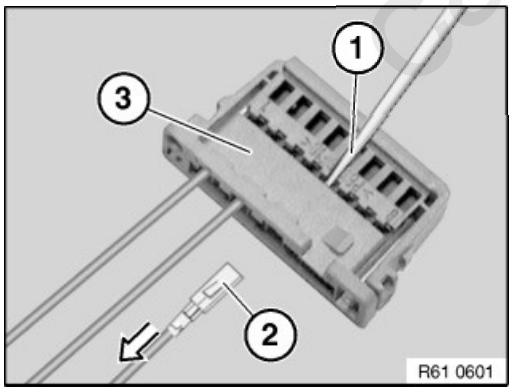

Hold down retaining hook in secondary lock (1) again and pull cable with socket contact (2) completely out of contact carrier (3).

carsdiagn.com

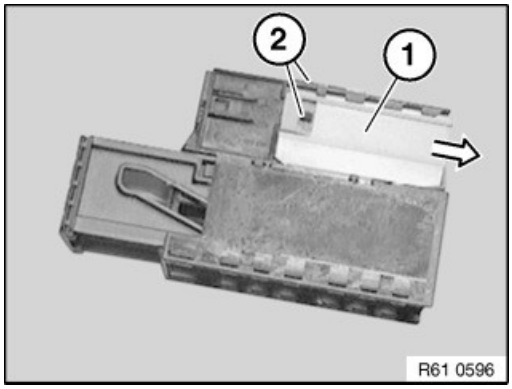


Pin housing:

Contacts 1 ... 13 and 19 ... 27:

Raise locking slide (1) on both sides (2) of housing and detach.

Note:
Detaching the locking slide releases the secondary locks of the pin contacts.

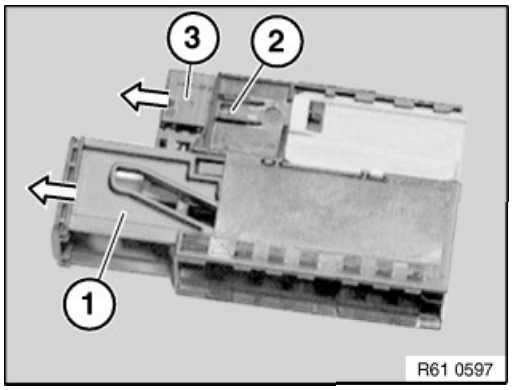

Contacts 14 ... 18 and 28 ... 30:

Pull slide (1) outwards completely.

Raise lock (2) on housing.

Pull contact carrier (3) out of housing.

Note:
Pulling out the contact carrier releases the secondary locks of the pin contacts.


The pin contacts are pulled out of a contact carrier as described under "Socket housing".

cardiagn.com


61 13 ... In-line connectors, 30-pin, System D2.5

Special tools required:


- 61 0 303

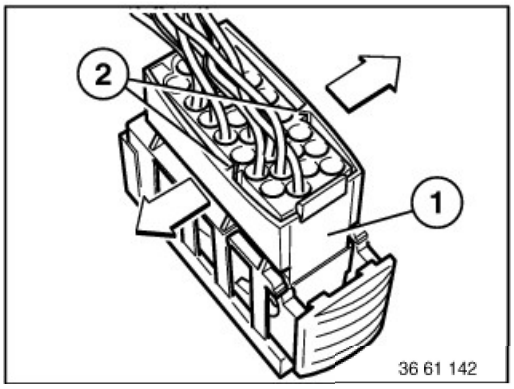

Carefully pull external connector (1) in area of retaining lugs (2) apart slightly.

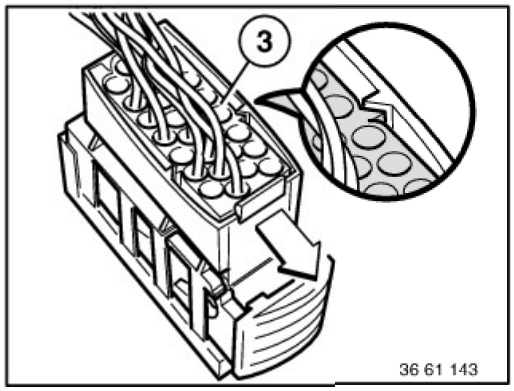

Pull internal connector (3) until limit position in direction of arrow.

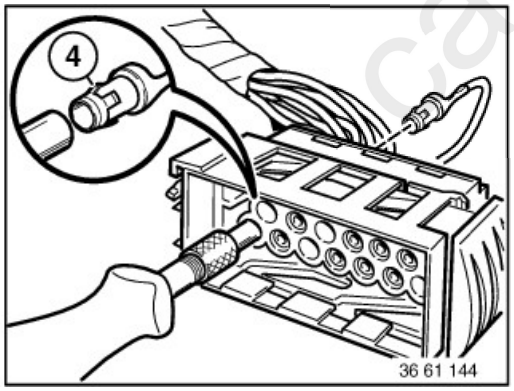


With special tool 61 0 303 press back retaining hook(4) of corresponding contact and pull out cable with contact.

cardiagn.com


61 13 ... In-line plugs, 2-pin, System JPT ELA

Special tools required:


- 61 0 316

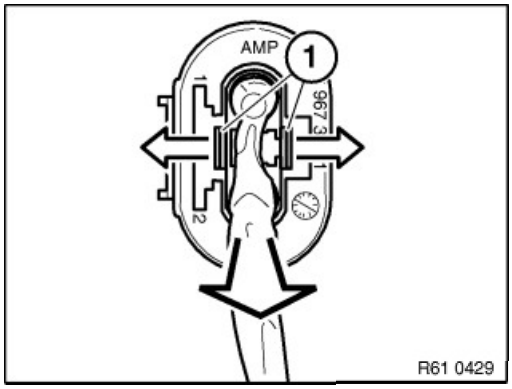

Press lock (1) in direction of arrow and slide connector forward.

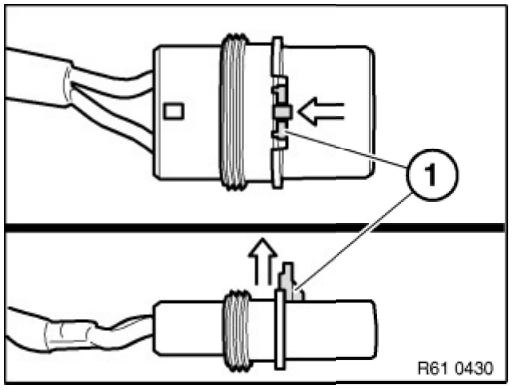

Press lock (1) downward and slide out to one side.

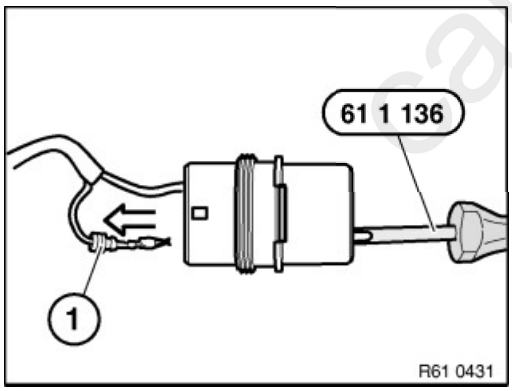


With special tool 61 0 316 (61 1 136), unlock contact and pull out cable with contact (1) towards rear.

carsdiagn.com


61 13 ... In-line plugs, 2-pin, System MDK 3 plus 2.8

Special tools required:

- 61 0 316

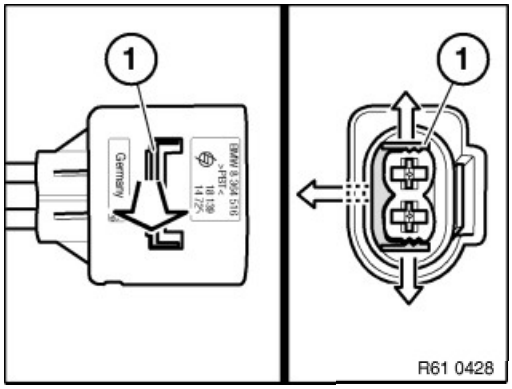

Unlock lock (1) on outside at retaining hook and slide out lock (1) to side.

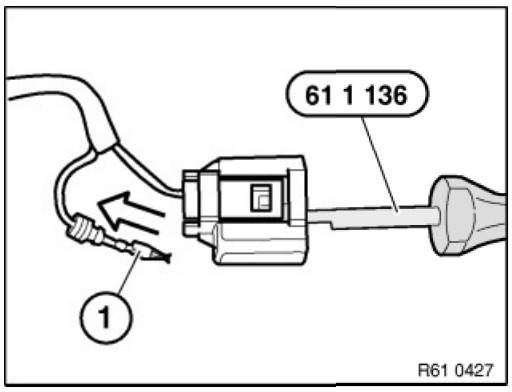


With special tool 61 0 316 (61 1 136), unlock contact and pull out cable with contact (1) towards rear.

cardiagn.com


61 13 ... In-line plugs, 20-pin, System D2.5

Special tools required:

- 61 0 303

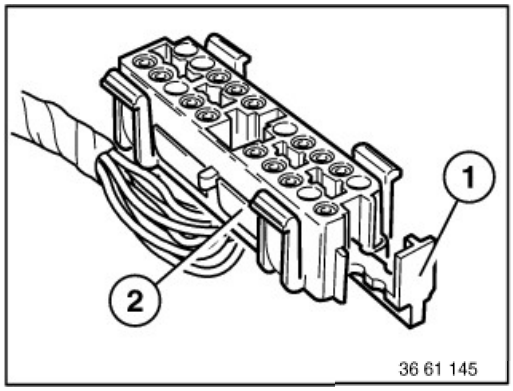

Pull locking slide (1) out of connector (2).

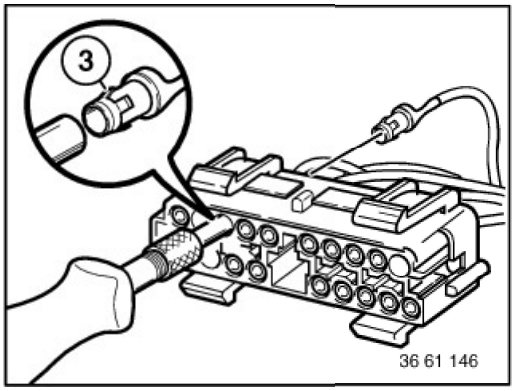


With special tool 61 0 303 , press down retaining hook (3) of corresponding contact and pull out cable with contact.

cardiagn.com


61 13 ... In-line plugs, 4-pin, System DFK ELA

Special tools required:

- 61 0 316

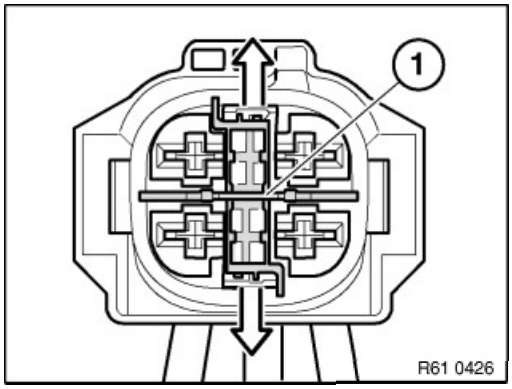


Press retaining hook in direction of arrow and remove lock (1).

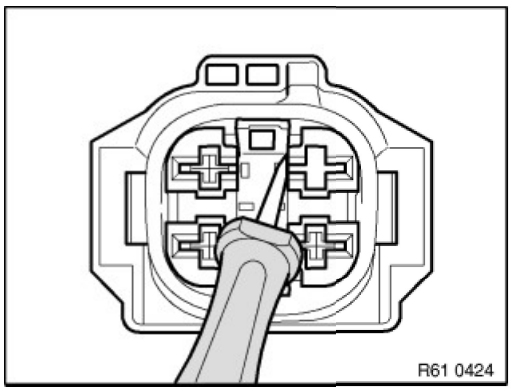

Installation notes:


If necessary, side lock must also be unlocked with screwdriver.

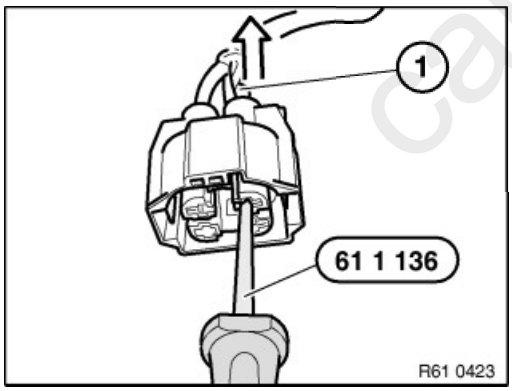


With special tool 61 0 316 (61 1 136), unlock contact and pull out cable with contact (1) towards rear.

cardiagn.com

61 13 ... In-line plugs, 6- to 50-pin, System Elo

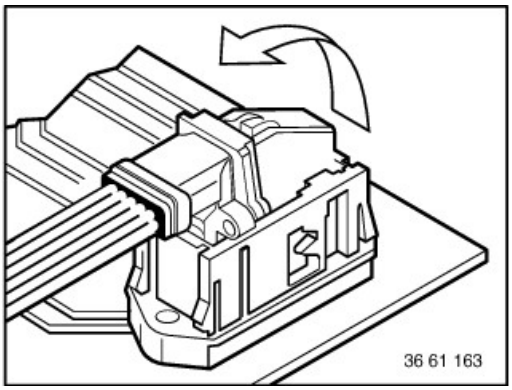


Open lock.

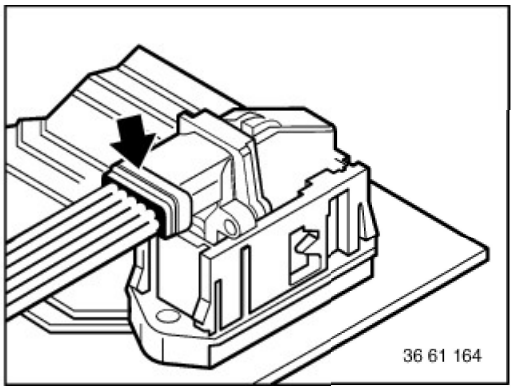


Detach cable strap.

Installation note:
Cable strap must be reinstalled.

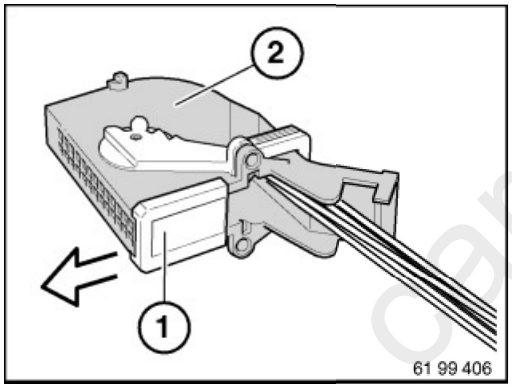


Detach catch (1) from connector housing (2).

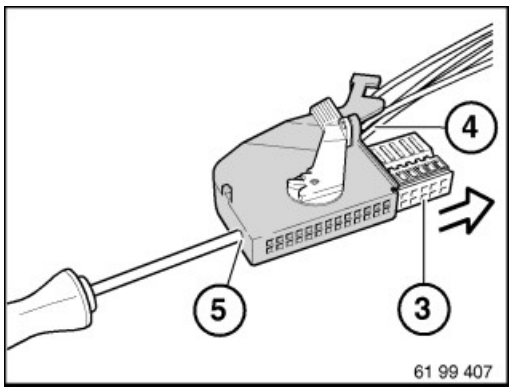


Press out contact carrier (3) with wiring harness (4) through opening (5).

cardiagn.com

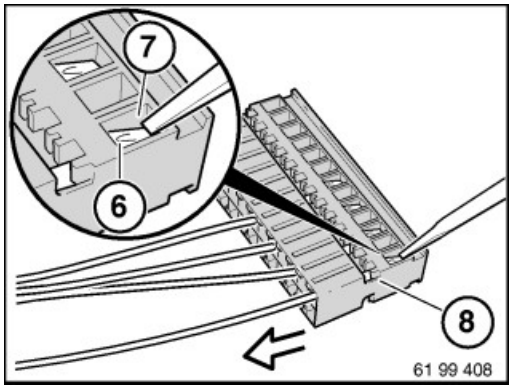

Hold down retaining hook (6) of defective contact and pull cable and contact up to secondary lock (8).

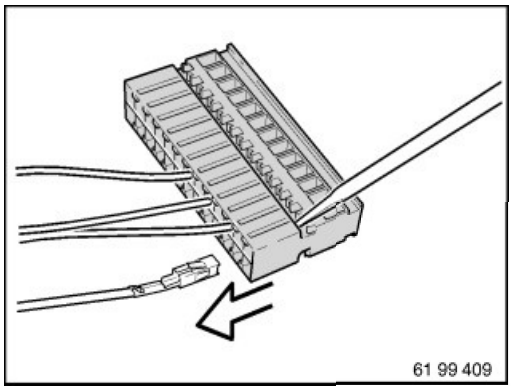


Hold down retaining hook once again in secondary lock (8) and pull cable and contact completely out of contact carrier.

cardiagn.com


61 13 ... Inline connectors, 15-pin, System D2.5

Special tools required:


- 61 0 303

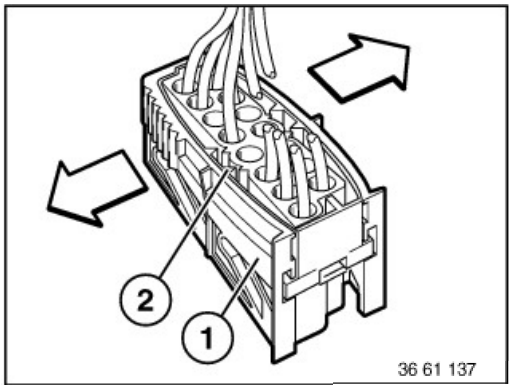

Carefully pull external connector (1) in area of retaining lugs (2) apart slightly.

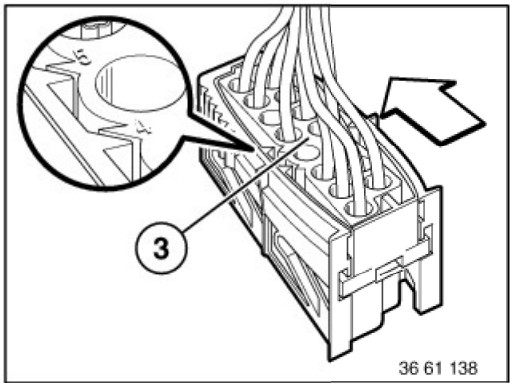


Pull internal connector (3) until limit position in direction of arrow.

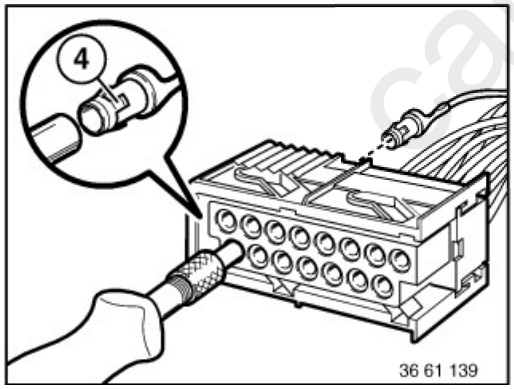


With special tool 61 0 303 press back retaining hook(4) of corresponding contact and pull out cable with contact.

cardiagn.com


61 13 ... Inline connectors, 6-, 8-pin, System MQS

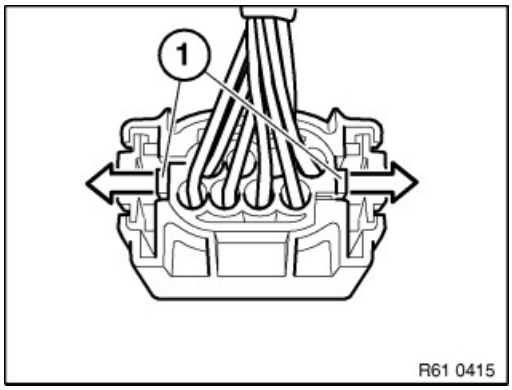

Press lock (1) in direction of arrow and slide connector forward.

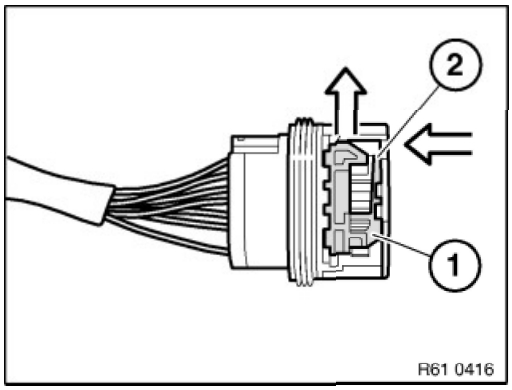


Press locking hook (2) downward and slide lock (1) out.

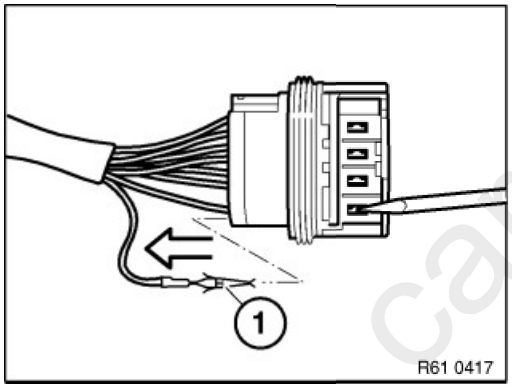


Press down retaining hook (1) with screwdriver and pull out cable with contact towards rear.

cardiagn.com

61 13 ... Inline plugs, 2-pin, System MPQ 2.8

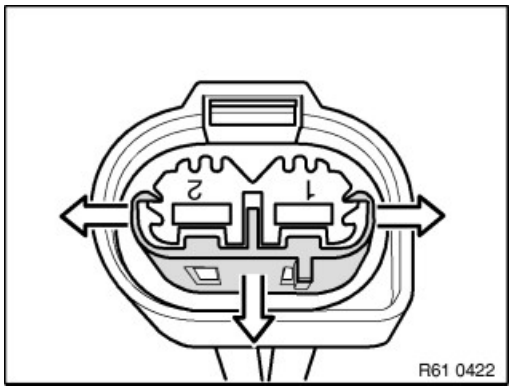


Press catch on outside in direction of arrow and remove towards top.

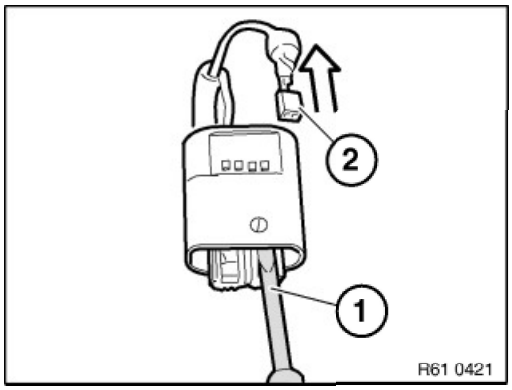


Press down retaining hook (1) with screwdriver and pull out cable and contact (2) towards rear.

cardiagn.com

61 13 ... Inline plugs, 3-, 6-pin, System Elo-Power 2.8

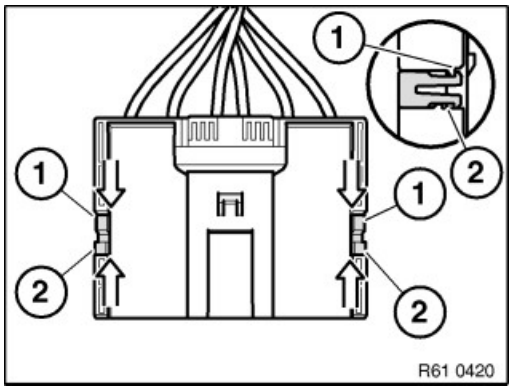


Press locking hook (1) in direction of arrow and disengage. Then unlock locking hook (2) and remove lock.

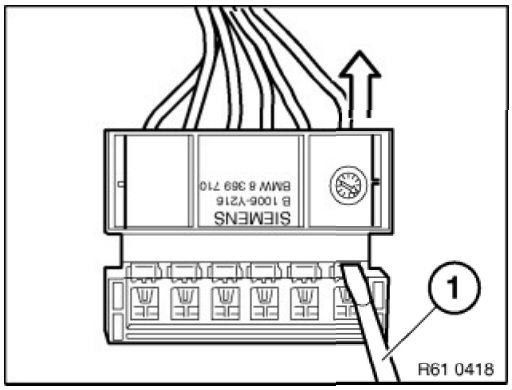


Press down retaining hook with screwdriver (1) and pull out cable with contact towards rear.


cardiagn.com

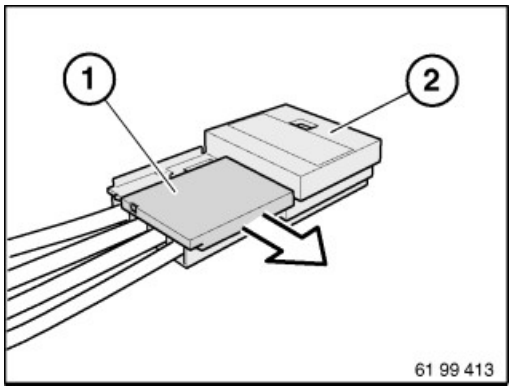

Detach fastener (1) from contact carrier (2).

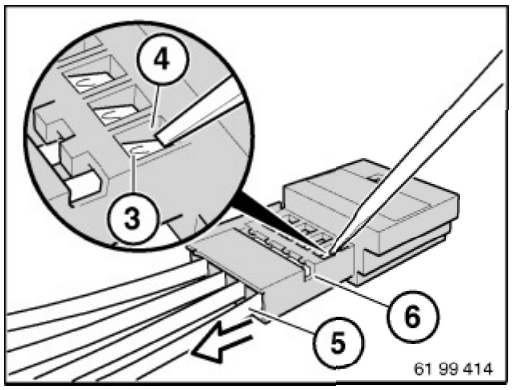

Hold down retaining hook (3) of defective contact and pull cable and contact up to secondary lock (6).

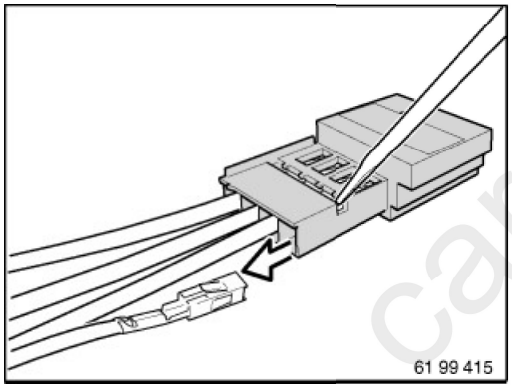


Hold down retaining hook once again in secondary lock and pull cable and contact completely out of contact carrier.

cardiagn.com


61 13 ... Inline plugs, 8-, 12-pin, System D2.5

Special tools required:

- 61 0 303

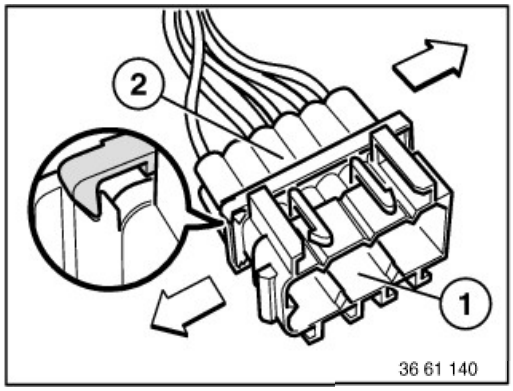

Move upper section of connector (1) and lower section of connector (2) against each other in direction of arrow.

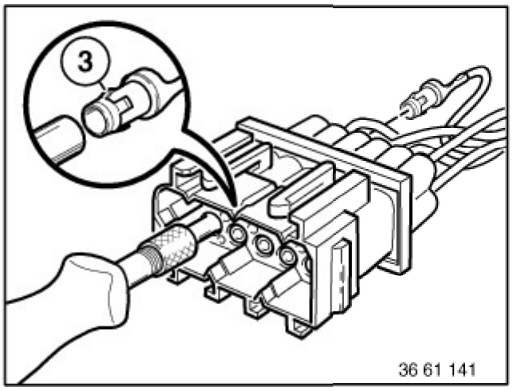


With special tool 61 0 303 , press down retaining hook (3) of corresponding contact and pull out cable with contact.

cardiagn.com

61 13 ... Installing comb connector for retrofitting/repairs

Special tools required:

- 61 9 041
- 61 9 042

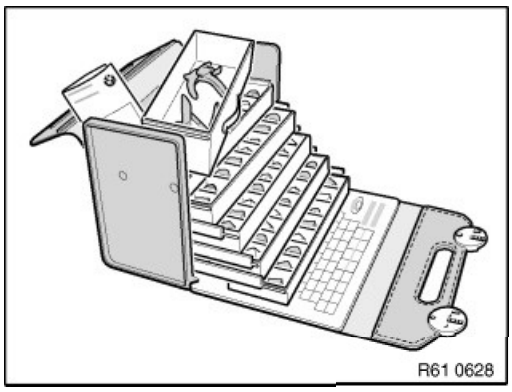


Note:
The repair range IV for vehicle electrical system contained the required special tools and individual parts for retrofitting and repair work with the aid of fan connectors.


The case can no longer be ordered. Order individual parts for wiring harness repair through BMW Parts Department.

- Refer to Service Information:

  SI 02 04 07 341

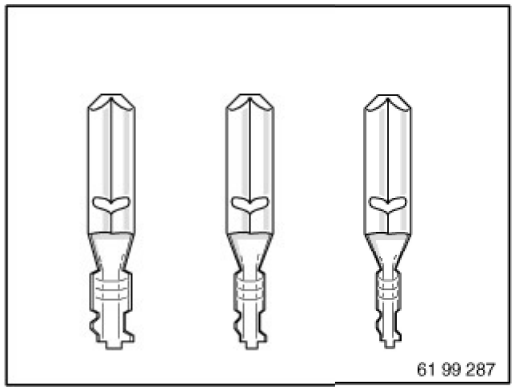


Choose contact sleeve (up to 4 mm^2) in accordance with wire cross-section.

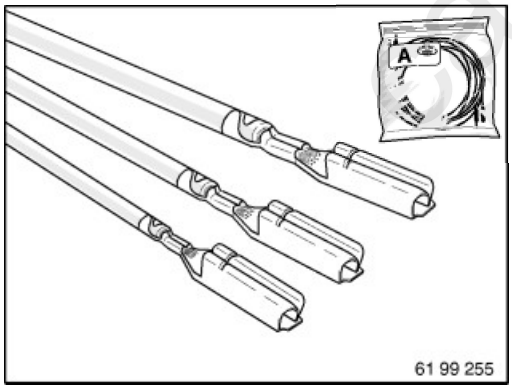

Alternatively:

Choose contact sleeves (up to 2.5 mm^2) or comb connectors.


carldiagn.com

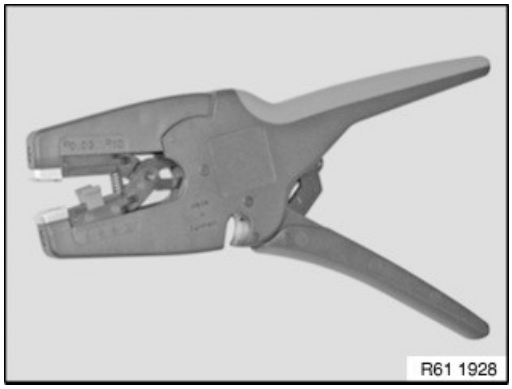

Cut through wire loop in wiring harness at established point.

Strip insulation from both wire ends.


See repair instructions
Cutting to length and stripping insulation from cables

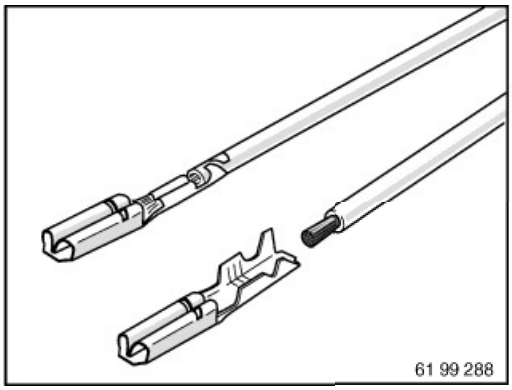


Crimp contact sleeves on both wire ends.*See repair instructions*
Crimping on stop parts

Note:
If using repair kit for contact sleeves, refer to repair instructions:

Butt connector for repairing a plug connection.

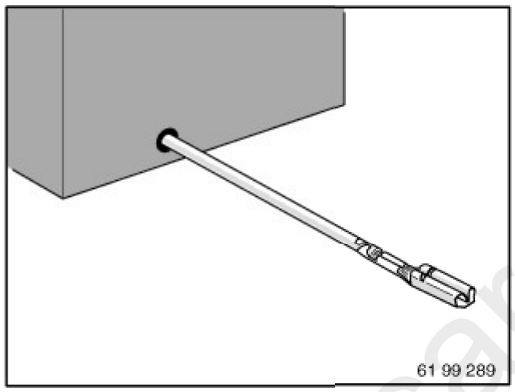


Crimp connecting cable for retrofitting likewise with contact sleeve.

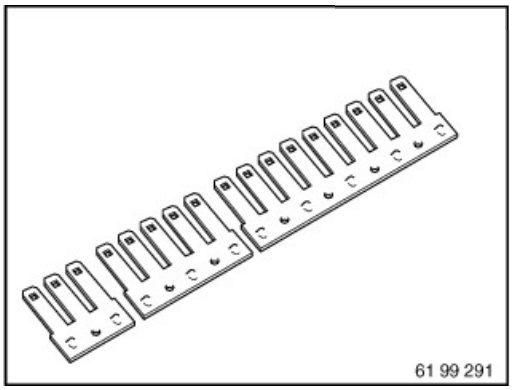


Cut required number of poles to length for comb connectors.

cardiagn.com

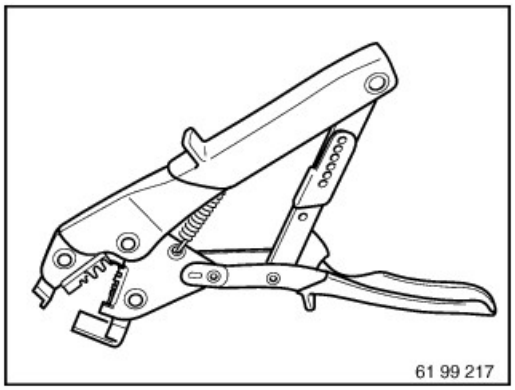

Special tool 61 9 041 (hand pliers) in conjunction with 61 9 042 (matrix) are used for pushing contact sleeves onto comb connectors.*See repair instructions*
Special tools for wiring harness repairs.

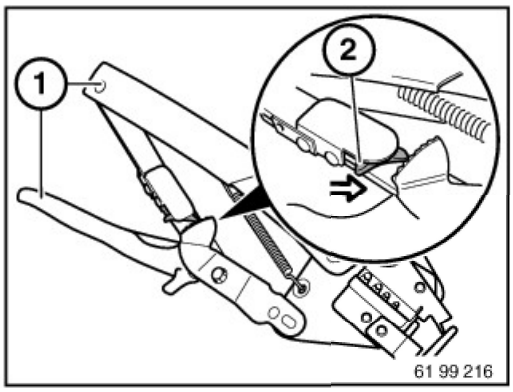


Unlock special tool 61 9 041 :


Squeeze grips (1) lightly and push release lever (2) in direction of arrow.

Or:

Compress handles until limit position, hand pliers unlock automatically.

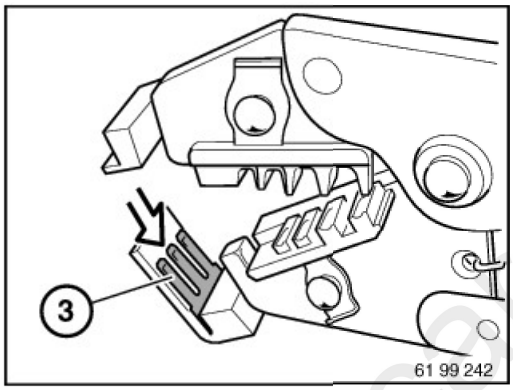


Insert prepared comb connectors (3) in special tool 61 9 041 / 61 9 042 .

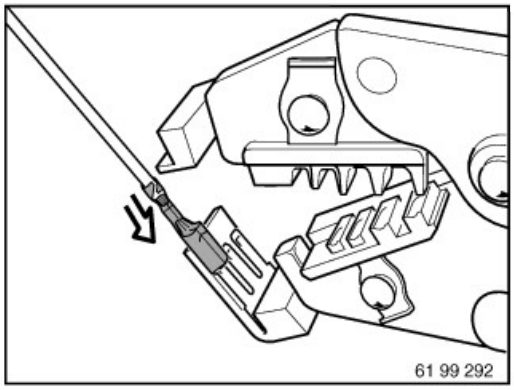


Attach wire with contact sleeve to comb connector.

cardiagn.com

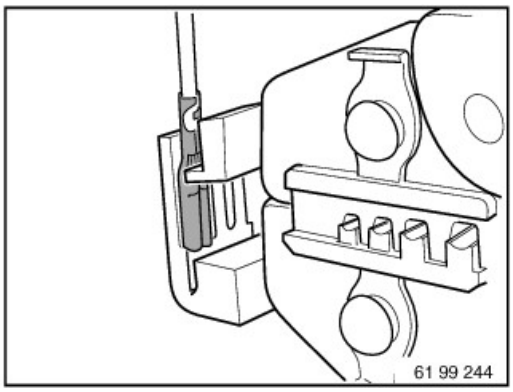


Press hand pliers together and slide on contact sleeve until limit position.

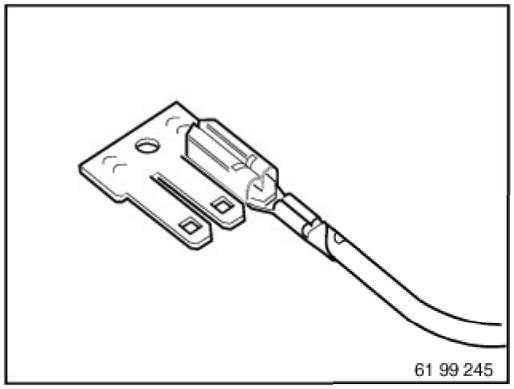

Attention!

Once contact sleeves have been pushed on, they should not be detached again from the comb connector or reused.

Push on further contact sleeves for potential branching.

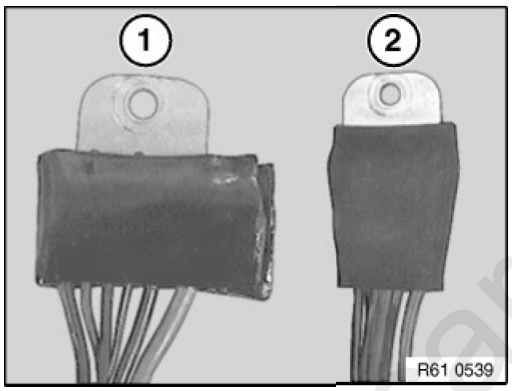

Installation in wet area (engine compartment, wheel arch):

Apply sealing compound on both sides and press into contacts (1).


Fit heat-shrink tubing and heat up with hot air blower (2) (approx. 250 °C).

Note:
Ensure that comb connector has sufficient contact surface on attachment point.

Do not heat-shrink tubing on edges of comb connector too strongly, risk of cracking.

Allow heat-shrink tubing to cool down until hand-warm. Then press sealing material again into contacts and onto edges of comb connector.

If necessary, carefully heat-shrink tubing again.

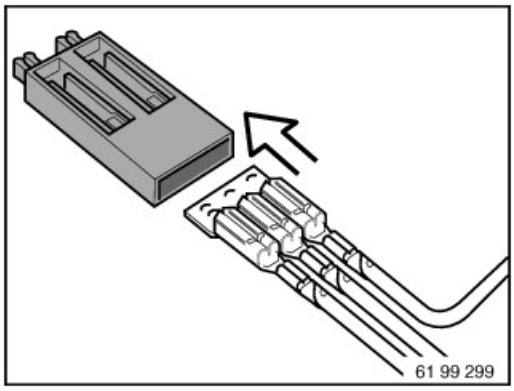

Installation in dry area (interior, luggage compartment):

Slide assembled comb connector into insulation housing until it locks into place.


cardiagn.com

61 13 ... Notes for opening contacts and locks of different plug contact systems

Special tools required:

- 61 0 300
- 61 0 400
- 61 1 100

Abbreviations of contacts and what they mean:	
ELA	**Strand seal**
D 1.5 / 2.5 / 3.5	**Round contacts with 1.5 mm, 2.5 mm or 3.5 mm diameter**
MDK	**Miniature double flat spring contact**
JPT	Junior Power timer
DFK	Double flat spring contacts
Elo	Electronic contacts
Elo Power	Electronic contacts for heavy load
MQS	Micro Quadlock system
MPQ	Micro Power Quadlock
MLK	Mini laminated contact
SLK	Sensor laminated contact
LSK	Load current contact
MLK	Mini laminated contact
Mcon	Multi contact

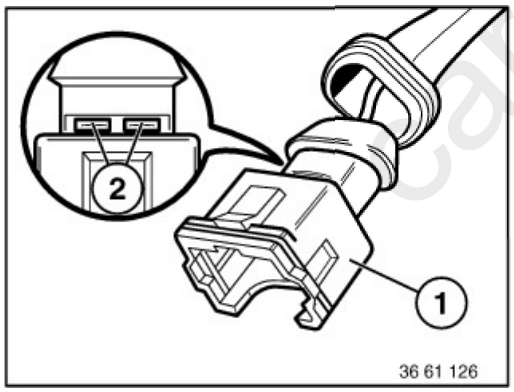

Important!

The contacts can be changed on ultrasonically welded connectors (1).

Ultrasonically welded connectors (1) must be replaced completely.

Ultrasonic-welded connectors (1) can be identified by the welds (2) on their longitudinal side.

Note:

Special tools referred to in the repair instructions below are contained in the following special tool sets:

- Unlocking and pressing-off tool 61 1 150

  is replaced as of 09/2005 by 61 0 300 (BMW) and 61 0 400 (MINI)
- Release and pressing-off tool 61 1 100 (engine)

carldiagn.com

Repair instructions for opening connector housings and removing contacts of different connector systems:

Connector system D 1.5/D 2.5:

- Circular connectors, 7- or 8-pin, system D 2.5
- Circular connectors, 13-pin, system D 2.5
- Circular connectors, 20-pin, system D 2.5
- Circular connectors, 4-, 7-, 10-, 12- or 25-pin, system D 1.5/D 2.5
- In-line connectors, 15-pin, system D 2.5
- In-line connectors, 8-, 12-pin, system D 2.5
- In-line connectors, 30-pin, system D 2.5
- In-line connectors, 20-pin, system D 2.5

Connector system JPT/MDK/DFK:

- In-line connectors, 2-pin, System JPT ELA
- In-line plugs, 2-pin, System MDK 3 plus 2.8
- In-line plugs, 4-pin, System DFK ELA

Connector system Elo/Elo Power:

- Inline plugs, 4-, 10-pin, System Elo
- In-line connectors, 6- to 50-pin, System Elo
- Inline plugs, 3-, 6-pin, System Elo-Power 2.8

Connector system LSK:

- Connector housing LSK contact

Connector system MQS/MPQ:

- Inline connectors, 6-, 8-pin, System MQS
- Inline plugs, 2-pin, System MPQ 2.8
- Control unit connectors, 25-, 35-, 55-, 83-, 88-pin
- In-line plugs, 24-pin, Hybrid System MQS/MPQ
- Socket housing 42-, 43-pin, Hybrid System MQS / MPQ
- Socket housings 2x21-, 2x27-pin, Hybrid System MQS/MPQ, Elo/Elo Power
- In-line connectors, 30-pin, Hybrid System MQS/MPQ
- Socket housings, 5-, 8-pin, System MQS/MPQ
- Socket housing (radio connector), Hybrid System MQS/MPQ

For connector contact systems not listed, refer to Service Information:

SI 2 05 05 217
SI 2 05 06 294
SI 2 03 08 440
SI 2 08 06 312
SI 2 02 08 439
SI 2 01 08 438

cardiagn.com

61 00 ... Notes on handling optical fibres



Important!

To avoid damage when handling optical fibres, comply with the following points:

- The minimum permitted bending radius is 25 mm
- Do not subject optical fibres to compressive and tensile load
- Protect optical fibres against the effects of heat ≥85 °C (e.g. during welding work, drying work with infrared beams or hot air blower)
- Fibre-optic cables are permitted to show only one junction point (bridge), replace fibre-optic cables if necessary



Note:

The optical fibres are coloured differently as follows:

- Green = **MOST** (**M**edia **O**riented **S**ystems **T**ransport) optical fibre
- Yellow = **ISIS** (**I**ntelligent **S**afety and **I**ntegration **S**ystem) optical fibre
- Orange=repair fibre-optic cables

Follow notes for processing cables and optical fibres.

cardiagn.com

61 00 ... Notes on handling wiring harnesses and cables



The following applies in general:

To avoid damage, observe the following instructions:

- Avoid compressive and tensile loads
- To ensure professional repairs, perform repair work only with BMW-approved or recommended special tools and spare parts
- Make sure cables are laid without kinks or abrasions
- Ensure non-contacting routing at sharp-edged body parts; use edge protection if necessary
- Secure additionally laid cables/leads with cable ties

The following additionally applies:

Shielded lines

Interference radiation and interference resistance can lead to neutral zones at contact points in the shielding. Consequently, distinctions have to be drawn between the following types:

Coaxial lines

- Shielded coaxial cables RTK031 may only be repaired with a special crimping tool.
- For aerial lines only the bushing contact may be repaired.
- RG174 Lines and the bushing contact may not be repaired.

CVBS lines

- CVBS cables may not be repaired.
- CVBS cables must be replaced in their entirety.

HSD lines

- HSD cables may not be repaired.
- HSD cables must be replaced in their entirety.

Optical fibre cable:

Note:
Fibre-optic cables are coloured differently as follows:

- Green = **MOST** (**M**edia **O**riented **S**ystems **T**ransport) optical fibres
- Yellow = **ISIS** (**I**ntelligent **S**afety and **I**ntegration **S**ystem) optical fibres
- Orange=repair fibre-optic cables

Attention!

- Optical fibres are permitted to show only one junction point (bridge). Replace optical fibres if necessary
- Smallest permissible bending radius is 25 mm
- Avoid effects of heat ≥ 85 °

Treating cables and fibre-optic cables

FlexRay (twisted cables):

It is possible to repair the FlexRay. In the event of damage, the cables can be joined with conventional butt connectors and heat-shrink tubing.

cardiagn.com

Note:

- FlexRay lines may only reveal one separation point (bride); renew complete line if necessary.
- If possible, maintain twisted cable after repair.
- After repairs, twist cables as close as possible to the connector/separation point.
- Twisting must be as symmetrical as possible.

Airbag lines:

Repairing airbag cables

Ribbon cables:

Repairing ribbon cables

Replacing wiring harnesses

Repair wiring harnesses mainly cover the full equipment of the vehicle. If certain optional equipment is not installed in the vehicle, note the following:

- If necessary, secure the remaining connectors.
- If necessary, seal the remaining connectors outside the vehicle interior, for example, with butyl tape in such a way that moisture ingress can be eliminated permanently.
- If necessary, repin the connector of the repair wiring harness.

Note:
Repair wiring harnesses can be equipped with an **additional socket housing** (30-pin, for example), **which was not provided on the previous vehicle-side wiring harness**. This socket housing also cannot be found in the wiring diagram.

Procedure

The separation point between the vehicle-side wiring harness and the repair wiring harness is located **in the vehicle interior** (in the footwell, for example):

- Cut the additional socket housing and connect the lines to the vehicle-side wiring harness using a butt connector.
- Alternatively, a suitable pin housing can be fitted on the vehicle-side wiring harness and connected to the additional socket housing.

  However, this is permitted only if the following conditions are met:

  - Carpets must not protrude visibly or become deformed due to the installation of the additional plug connection.
  - It must be possible to install the adjacent components (for example, trims, trim panels, etc.) correctly after installing the additional plug connection.
  - All the attachment points of the adjacent components (for example, trims, trim panels, etc.) must engage correctly.
  - There must be no rattling noise due to the installation of the additional plug connection.
  - The additional plug connection must not damage the adjacent components/wiring harnesses, etc..

The separation point between the vehicle-side wiring harness and the repair wiring harness is located **outside the vehicle interior** (in the wheel arch, for example):

cardiagn.com

- Cut the additional socket housing and connect the lines to the vehicle-side wiring harness using a butt connector.
- **Using the additional socket housing is not permitted with a separation point outside the vehicle interior.**


cardiagn.com

61 13 ... Opening plug housings and removing contacts of different plug systems

Special tools required:

- 61 0 300
- 61 0 400
- 61 1 100
- 61 1 150

Abbreviations of contacts and what they mean:	
ELA	**Strand seal**
D 1.5 / 2.5 / 3.5	**Round contacts with 1.5 mm, 2.5 mm or 3.5 mm diameter**
MDK	**Miniature double flat spring contact**
JPT	Junior Power timer
DFK	Double flat spring contacts
Elo	Electronic contacts
Elo Power	Electronic contacts for heavy load
MQS	Micro Quadlock system
MPQ	Micro Power Quadlock
MLK	Mini laminated contact
SLK	Sensor laminated contact
MLK	Mini laminated contact
Mcon	Multi contact

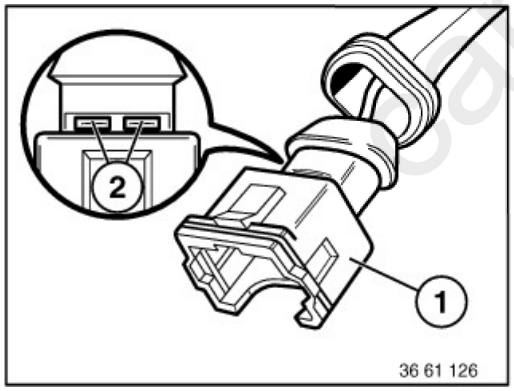

Important!

The contacts can be changed on ultrasonically welded plugs (1).

Ultrasonically welded plugs (1) must be replaced completely.

Ultrasonic-welded connectors (1) can be identified by the welds (2) on their longitudinal side.

Note:

Special tools referred to in the repair instructions below are contained in the following special tool kits:

- Release and press-out tool 61 1 150

  is replaced from 09/2005 by 61 0 300 (BMW) and 61 0 400 (MINI)
- Release and press-out tool 61 1 100 (engine)

cardiagn.com

Repair instructions for opening plug housings and removing contacts of different plug systems:

Plug system D 1.5/D 2.5:

- Circular plugs, 7-, 8-pin, System D 2.5
- Circular plugs, 13-pin, System D 2.5
- Circular plugs, 20-pin, System D 2.5
- Circular plugs, 4-, 7-, 10-, 12-, 25-pin, System D 1.5/D 2.5
- In-line plugs, 15-pin, System D 2.5
- In-line plugs, 8-, 12-pin, System D 2.5
- In-line plugs, 30-pin, System D 2.5
- In-line plugs, 20-pin, System D 2.5

Plug system JPT/MDK/DFK:

- In-line plugs, 2-pin, System JPT ELA
- In-line plugs, 2-pin, System MDK 3plus 2.8
- In-line plugs, 4-pin, System DFK ELA

Plug system Elo/Elo-Power:

- In-line plugs, 4-, 10-pin, System Elo
- In-line plugs, 6- to 50-pin, System Elo
- In-line plugs, 3-, 6-pin, System Elo-Power 2.8

Plug system MQS/MPQ:

- In-line plugs, 6-, 8-pin, System MQS
- In-line plugs, 2-pin, System MPQ 2.8
- Control unit plugs, 25-, 35-, 55-, 83-, 88-pin
- In-line plugs, 24-pin, Hybrid System MQS/MPQ
- Socket housing 42-, 43-pin, Hybrid System MQS / MPQ
- Socket housings 2x21-, 2x27-pin, Hybrid System MQS/MPQ, Elo/Elo-Power
- In-line plugs, 30-pin, Hybrid System MQS/MPQ
- Socket housings, 5-, 8-pin, System MQS/MPQ
- Socket housing (radio plug), Hybrid System MQS/MPQ

For plug contact systems not listed, refer to Service Information:

SI 2 05 05 217

SI 2 05 06 294

SI 2 03 08 440

SI 2 08 06 312

SI 2 02 08 439

SI 2 01 08 438

cardiagn.com

61 42 050 Removing and installing (replacing) voltage transformer




Important!


Read and comply with notes on protection against electrostatic discharge (ESD protection).



Note:
Voltage transformer is only installed depending on equipment.

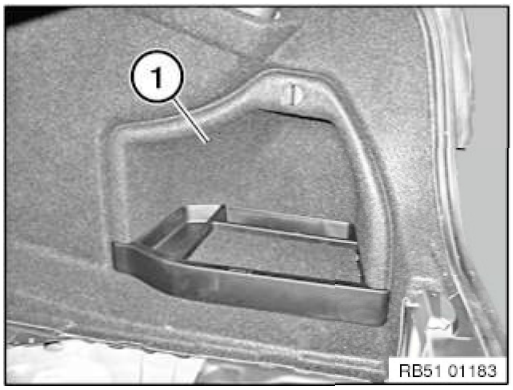

Remove flap (1).*Installation note:*
Make sure flap (1) is correctly seated.

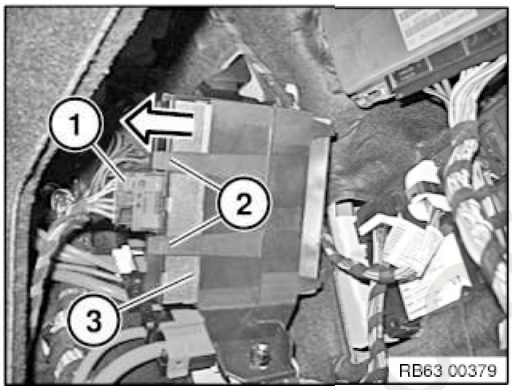

Disconnect plug connection (1).

Lever out latches (2) and pull voltage transformer (3) out of bracket.

Installation note:
Make sure plug connection (1) is correctly seated.

Make sure voltage transformer (3) is correctly seated in bracket.

cardiagn.com

61 42 ... Removing and installing control unit holder

Important!

Read and comply with notes on protection against electrostatic discharge (ESD protection).

Necessary preliminary tasks:

For F30; F32; F35; F80; F82:


- Open flap in luggage compartment panel on right

F31For:

- Remove battery cover

For F34; F36:

- Remove luggage compartment trim on side panel on right

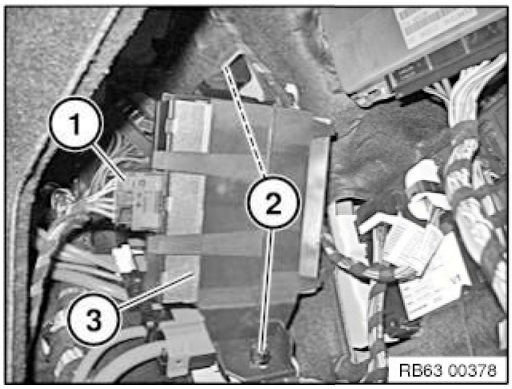

Release plug connections (1) on all control units.

Release nuts (2) and remove control unit holder (3).

Installation note:

Ensure that the plug connections (1) are correctly seated.


Ensure that the control unit holder (3) is correctly seated.

cardiagn.com

61 31 137 Removing and installing/renewing USB interface connecting socket

Necessary preliminary tasks:

- Remove glove box with housing

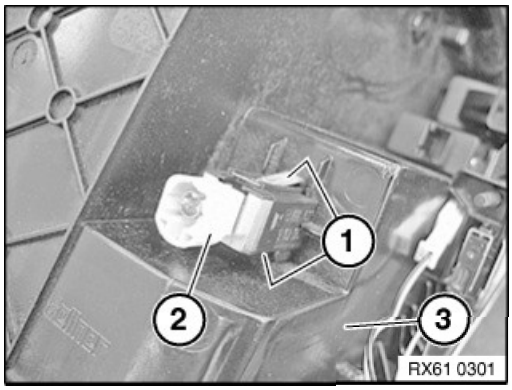

Note:
Similar to graphic.

Release retaining clamps (1).

Push USB interface connecting socket (2) to the front from glove box (3).

Installation note:
Retaining clips (1) must not be damaged.

Make sure USB interface connecting socket (2) is correctly seated.

cardiagn.com

61 14 005 Removing and installing/replacing distribution box (front)

Special tools required:


- 00 9 325

Warning!

Observe safety information for handling vehicle battery.

Necessary preliminary tasks:

- Clamp off battery lead from negative connection point

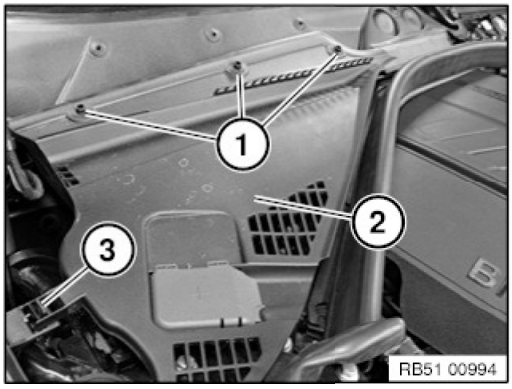


Note:
Work shown on the F20 by way of example, deviations in detail are possible in other models.


Turn locks (1) 90° counterclockwise.

Unlock catch (3).

Remove cover (2).

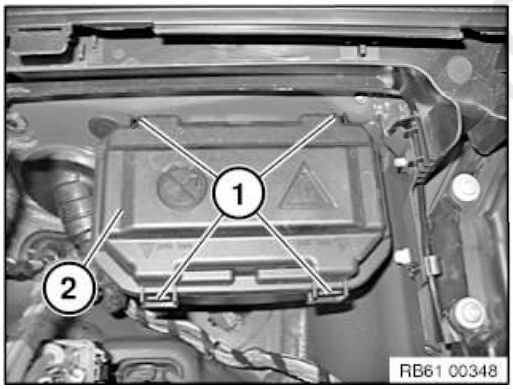


Release latch mechanisms (1) and remove lid (2).*Installation note:*
Make sure cover (2) is correctly locked.

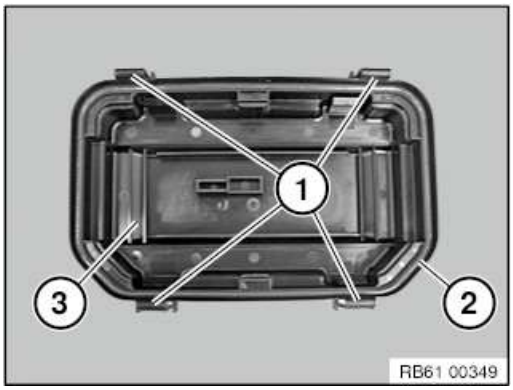


Installation note:
Latch mechanisms (1) and gasket (2) on lid (3) must not be damaged or missing.

Make sure gasket (2) is correctly seated in lid (3).

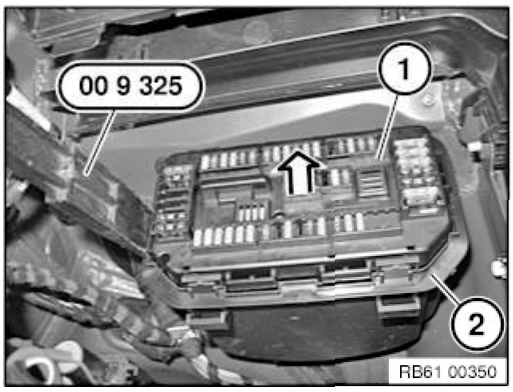

Release power distribution box (1) with special tool 00 9 325 from lower section (2) and pull power distribution box (1) upward.

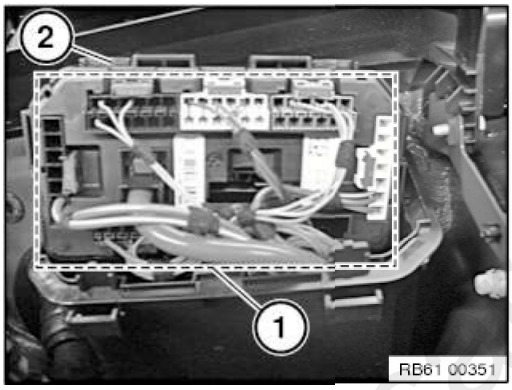

Release and disconnect all plug connections in area (1).

Remove power distribution box (2).

Installation note:
Make sure all plug connections are correctly locked.

cardiagn.com

61 13 ... Removing and installing/replacing fuse box (right engine compartment)



Operation is described in:

Removing and installing/replacing distribution box (front)

cardiagn.com

61 00 ... Repairing airbag cables

Important!

> **Only repair those cables which show visible signs of damage. In the event of visible damage, make sure there is only one cable repair in effect after the repair work. If no visible damage can be identified, the entire cable must be replaced. When carrying out repairs to the airbag wiring harness, you must use the spare parts offered in the Electronic Parts Catalogue (EPC).**

Safety regulations for handling components of airbag system.

Instructions for disconnecting and connecting battery.

In event of non-visible damage to wiring harness:

Disconnect plug connection on airbag module or on adapter plug. It is absolutely vital to disconnect the contacts in succession as there is a risk of mixing up (similar parts)! Cut through one cable after the other at an appropriate position, do not under any circumstances cut through both cables at the same time. Insulate cables remaining in wiring harness with insulating tape. Now disconnect plug connection on airbag control unit. Unpin contacts. Cut through one cable after the other at an appropriate position and insulate with insulating tape, do not under any circumstances cut through both cables at the same time. Pin contacts of repair cable for airbag control unit in control unit plug, assignment of repair cables is relevant. Lay repair cable in vehicle parallel to existing airbag lead. Now pin in contacts for airbag control unit or contacts of adapter plug, assignment of repair cables is relevant. Cut off excess length of repair cable in proximity (visible area) of airbag module or of adapter plug. Twist open cables. With the butt connectors and heat-shrink tubings in the Electronic Parts Catalogue (EPC), reconnect the cables with the same cable colours. Twist cables again, open length (twist) must not exceed 40 mm. Secure interface (heat-shrink tubing) with insulating tape to prevent cables from twisting open.

Instructions for cutting off, insulating, crimping cables, installing and removing contacts:

Cutting off and insulating cables.

Repairing a plug connection using butt connectors.

Installing and removing contacts.

In event of visible damage:

Expose cable at damaged areas. Cut through one cable after the other at an appropriate position and insulate cables no longer required in wiring harness with insulating tape, do not under any circumstances cut through both cables at the same time. Now, depending on the scope of work, unpin contacts either on airbag control unit/airbag module or on adapter plug. Cut off unpinned cables. Insulate cables remaining in wiring harness with insulating tape. Now pin in contacts of repair cable, assignment of repair cables is relevant. Lay repair cable in vehicle parallel to existing airbag lead up to separation point. Cut off excess length of repair cable. Twist open cables. Connect cables with butt connectors and heat-shrink tubings in Electronic Parts Catalogue (EPC), assignment of repair cables is relevant. Twist cables again, open length (twist) must not exceed 40 mm. Secure interface (heat-shrink tubing) with insulating tape to prevent cables from twisting open.

Instructions for cutting off, insulating, crimping cables, installing and removing contacts:

Cutting off and insulating cables.

Repairing a plug connection using connectors.

Installing and removing contacts.


61 13 ... Socket housing (radio connector), Hybrid System MQS/MPQ

Special tools required:

- 61 0 314

Manufactured by AMP: The following contact types without strand sealing can be fitted in the connector housings:


- MQS (Micro Quadlock System)
- MPQ, width 2.8 mm (Micro Power Quadlock)
- MPQ, width 5.2 mm (Micro Power Quadlock)

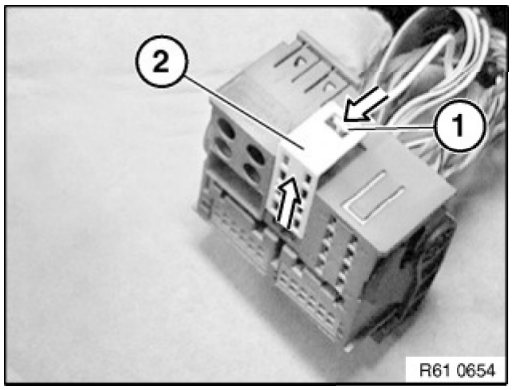

Removing MPQ contacts from radio connector:

Press lock (1) in direction of arrow.


Detach secondary lock (2) from radio plug.

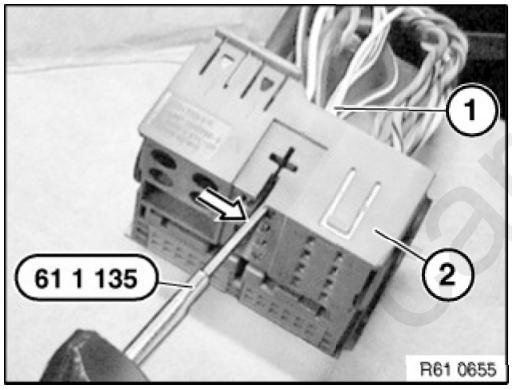

Feed special tool 61 0 314 (61 1 135) past side of contact.

Press special tool 61 0 314 (61 1 135) in direction of arrow.


Pull wire (1) with socket contact out of radio connector (2).

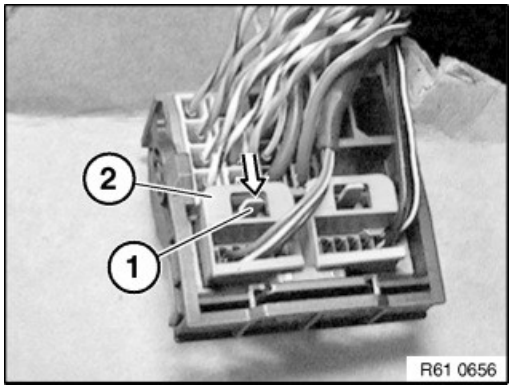


Removing MQS contacts from contact carrier:

Press lock (1) in direction of arrow and pull housing (2) out of radio connector.

cardiagn.com

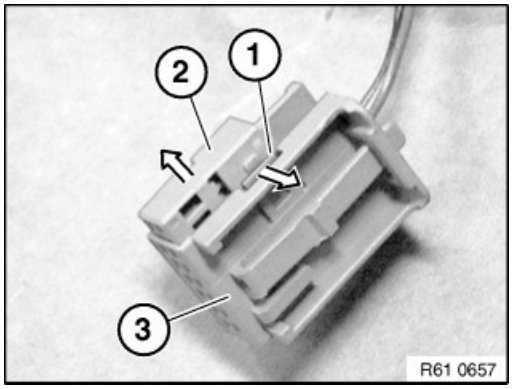


Press lock (1) in direction of arrow. Pull contact carrier (2) out of housing (3).*Note:*
When the contact carrier is pulled out, the secondary locks of the socket contacts are raised.

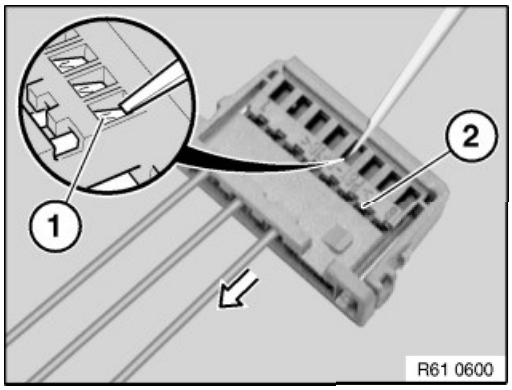


Note:
Schematic diagram shows the 8-pin socket housing by way of example.

Hold down retaining hook (1) of socket contact in opening of contact carrier with a small screwdriver.

Pull wire with socket contact in direction of arrow as far as secondary lock (2).

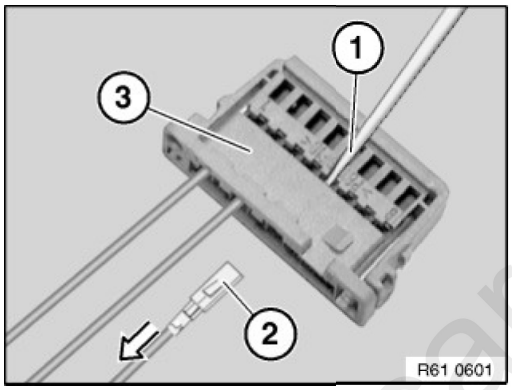

Hold down retaining hook in secondary lock (1) again. Pull wire with socket contact (2) out of contact carrier (3).

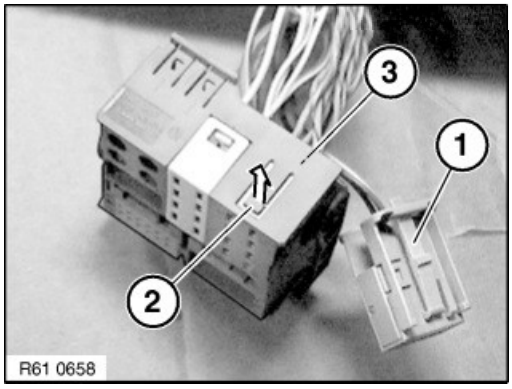


Removing MPQ contacts from contact carrier:

Remove contact carrier (1) with MQS contacts from radio connector.

Raise lock (2) on radio connector.


Pull contact carrier (3) out of radio connector.

cardiagn.com

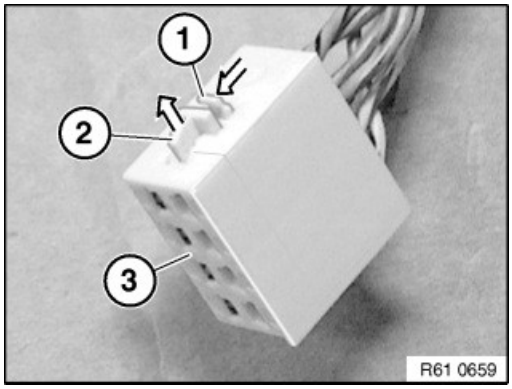

Press lock (1) in direction of arrow.

Pull secondary lock (2) in direction of arrow completely out of contact carrier (3).

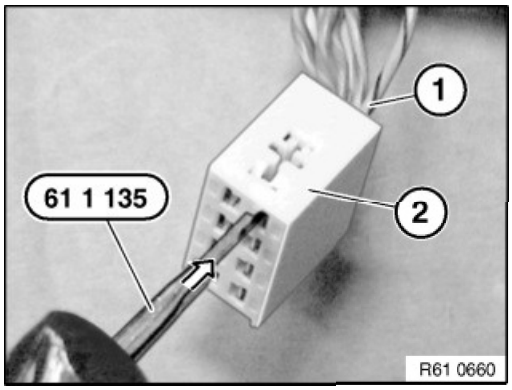

Press special tool 61 0 314 (61 1 135) on inside of contact into contact carrier (2).

Pull wire with socket contact (1) out of contact carrier (2).

cardiagn.com


61 13 ... Socket housing 42-, 43-, 46-pin, Hybrid System MQS / MPQ

Special tools required:

- 61 0 312

Manufactured by AMP: The following contact types without strand sealing can be fitted in the socket housings:


- MQS (Micro Quadlock System)
- MPQ, width 2.8 mm (Micro Power Quadlock)
- MPQ, width 5.2 mm (Micro Power Quadlock)

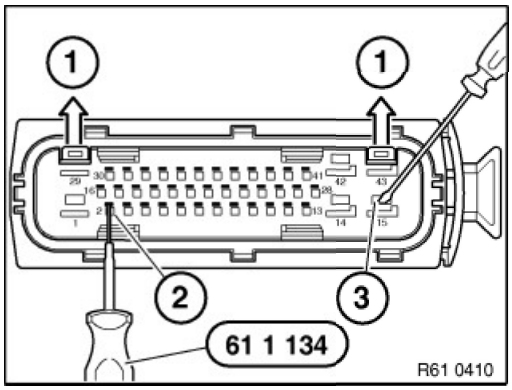

Open secondary locks (1) on socket housing.

Press back retaining hook of MQS contacts (2) with special tool 61 0 312 61 1 134 and pull out cable with contact.

Press back retaining hook of MPQ contacts (3) with screwdriver and pull out cable with contact.

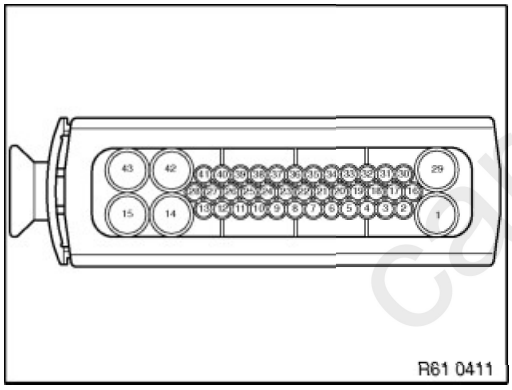

Installation note:
Bend open retaining hook of contacts gently before inserting into connector housing.

For installation of contacts, observe chamber numbers on reverse side of socket housing.

cardiagn.com


61 13 ... Socket housings, 2x21-, 2x27-pin, Hybrid Systems MQS/MPQ, Elo/Elo Power

Manufactured by AMP: The following contact types without strand sealing can be fitted in the socket housings:

- MQS (Micro Quadlock System)
- MPQ, width 2.8 mm (Micro Power Quadlock)
- MPQ, width 5.2 mm (Micro Power Quadlock)

Manufactured by Siemens: The following contact types without strand sealing can be fitted in the socket housings:

- Elo (electrical contact)
- Elo Power 2.8 mm width (electrical contact for heavy loads)
- Elo Power 5.2 mm width (electrical contact for heavy loads)

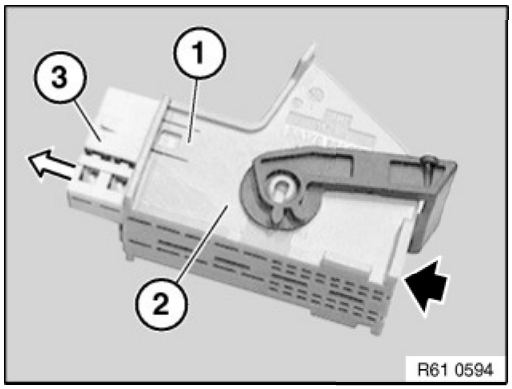


Raise lock (1) on housing (2).

Push contact carrier (3) from rear out of housing.


Note:
The second contact carrier is pushed out in the same way.

Pushing out the contact carrier releases the secondary locks of the socket contacts.

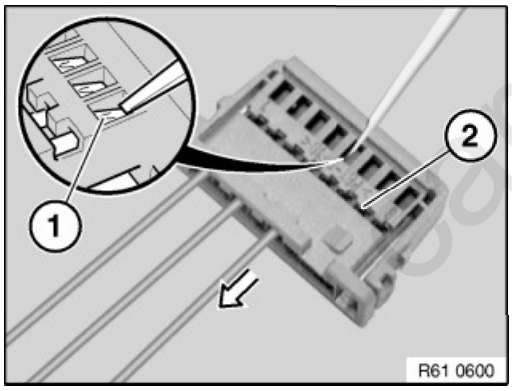

Hold down retaining hook (1) of socket contact in opening of contact carrier with a small screwdriver.

Pull wire with socket contact in direction of arrow as far as secondary lock (2).

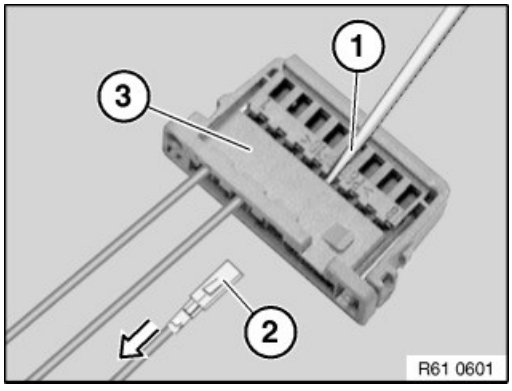


Hold down retaining hook in secondary lock (1) again and pull cable with socket contact (2) completely out of contact carrier (3).

61 13 ... Socket housings, 5-pin, 8-pin, System MQS/MPQ


Manufactured by AMP: The following contact types without strand sealing can be fitted in the connector housings:

- MQS (Micro Quadlock System)
- MPQ, width 2.8 mm (Micro Power Quadlock)
- MPQ, width 5.2 mm (Micro Power Quadlock)

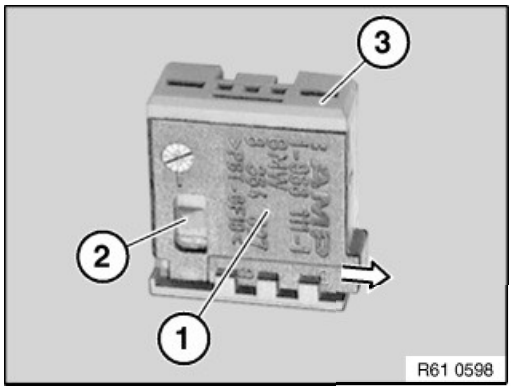


Socket housing, 5-pin (Hybrid System MQS/MPQ)

Raise fastener (1) over retaining lug (2) and pull off from contact carrier (3).

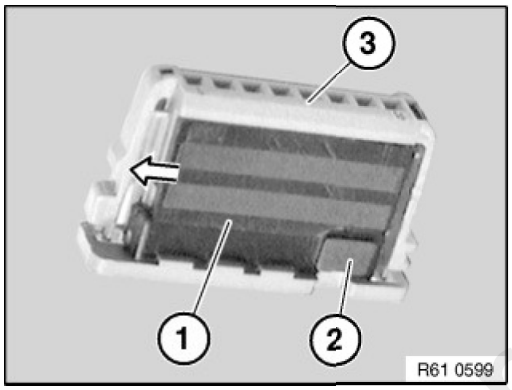


Socket housing, 8-pin (MQS):

Raise fastener (1) over retaining lug (2) and pull off from contact carrier (3).

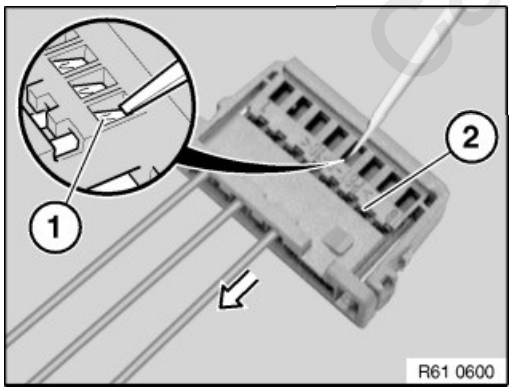

Hold down retaining hook (1) of contact and pull cable with contact as far as secondary lock (2).

cardiagn.com

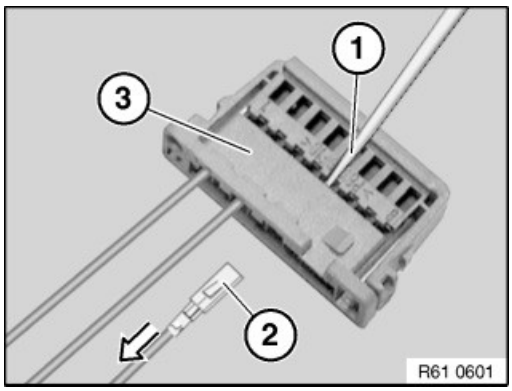


Hold down retaining hook in secondary lock (1) again and pull cable with contact (2) completely out of contact carrier (3).

cardiagn.com

61 13 ... Special tools for wiring harness repairs

Special tools required:

- 61 0 300
- 61 0 400
- 61 1 100
- 61 4 320
- 61 0 200
- 61 0 210
- 61 0 220
- 61 0 230
- 61 0 240

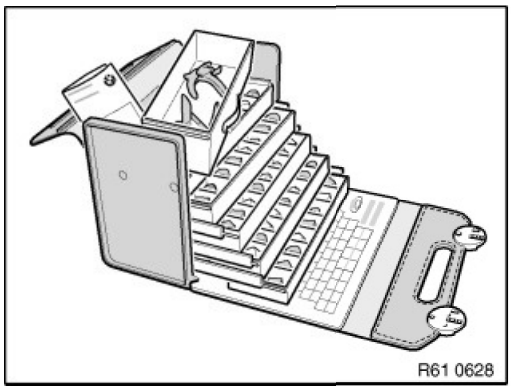

Repair range, vehicle electrical system:

Single parts for wiring harness repairs*

* Sourcing reference: BMW Parts Department

Note:

- Refer to Service Information:
  SI 2 04 07 341




Release and press-out tool:

- Special tool61 0 300
- Special tool 61 0 400 (MINI N12/N14)
- Special tool 61 1 100 (engine)

Handling:

- Notes for opening contacts and locks of different connector contact systems

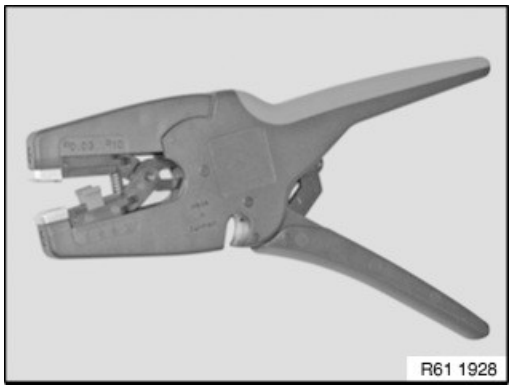

Cutting to length and stripping insulation from cables:


Wire stripper MultiStrip10*

*Sourcing reference BMW Workshop Equipment Catalogue

Handling:


- Cutting cables to length and strip insulation

cardiagn.com

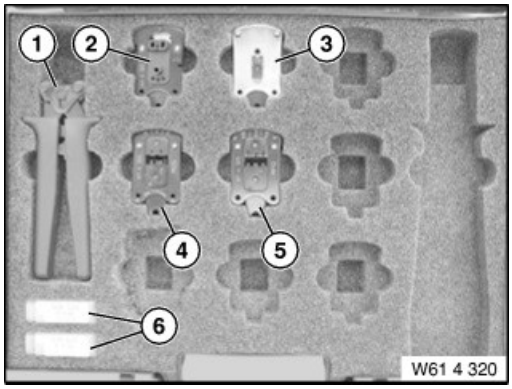

Crimping stop parts (small contacts) and butt connectors:

- Special tool61 4 320
  1. Tool without crimping head
  2. Crimping head (stripping insulation and cutting fibre-optic cables to length)
  3. Crimping head (crimping fibre-optic cable contacts)
  4. Crimping head (crimping MQS contacts)
  5. Crimping head (crimping MPQ contacts)
  6. Replacement blade (face-cutting fibre-optic cables)
  7. Replacement blade with tool (insulation stripping unit)
  8. Universal crimping head (SI 2 04 06 293)

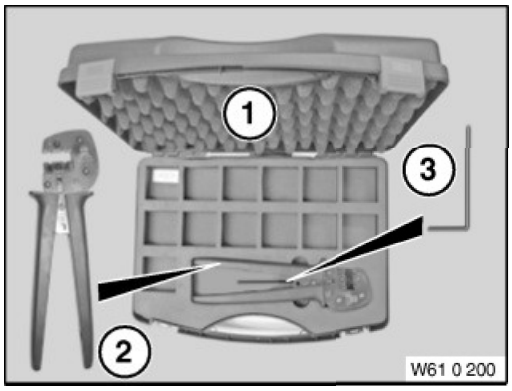

Crimping stop parts (large contacts) and butt connectors:

- Special tool 61 0 200 (crimping set)
- Special tool 61 0 210 (matrix set SLK 8)
- Special tool 61 0 220 (matrix set SLK 2.8)
- Special tool 61 0 230 (matrix set MAK 8 / DFK4)
- Special tool 61 0 240 (butt connector 4.0 - 6.0 mm²)

Handling:

- Refer to Service Information:
  SI 2 02 05 194
  SI 2 07 05 233

cardiagn.com

61 13 ... Treating cables and optical fibres



Special tools required:

- 61 4 320
- 61 0 200



Note:
Special tools referred to in the repair instructions below are contained in the following special tool sets:

Repair range for vehicle electrical system	SI 2 04 07 341
Crimping set with pliers for optical fibres, Micro Power Quadlock (MPQ), Micro Quadlock System (MQS) contacts and universal crimping head	61 4 320 61 0 200

Subject of repair instructions


- Special tools for wiring harness repairs
- Cutting cables to length and strip insulation
- Crimping stop parts (contacts)
- Butt connector for repairing a plug connection
- Comb connector for retrofitting/repairs
- Cutting to length and stripping insulation from optical fibres
  Crimping optical fibres

cardiagn.com

61 13 ... Unlocking and disconnecting different plug connections

Note:
The document describes unlocking and disconnecting different types of plug connections.


Differences in the details of the size and shape of the plug connections are possible.

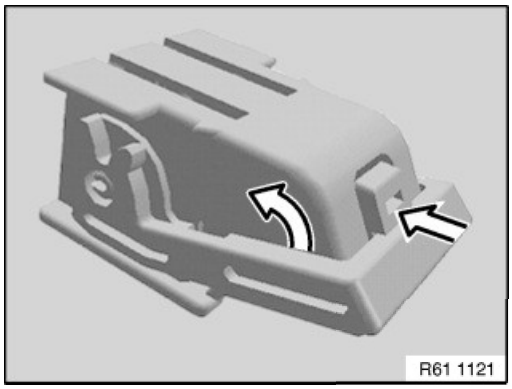

1.

Press lock and open release clip in direction of arrow.


Disconnect plug connection.

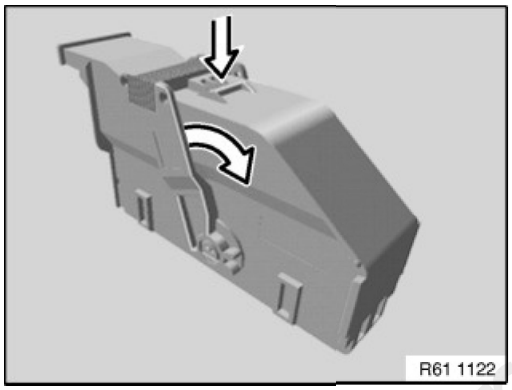

2.

Press lock and open release clip in direction of arrow.


Disconnect plug connection.

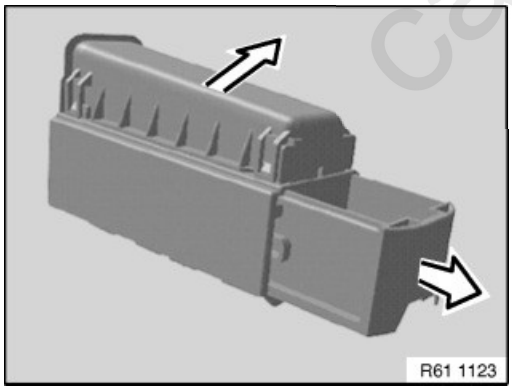

3.


Open release clip in direction of arrow and disconnect plug connection in direction of arrow.

cardiagn.com

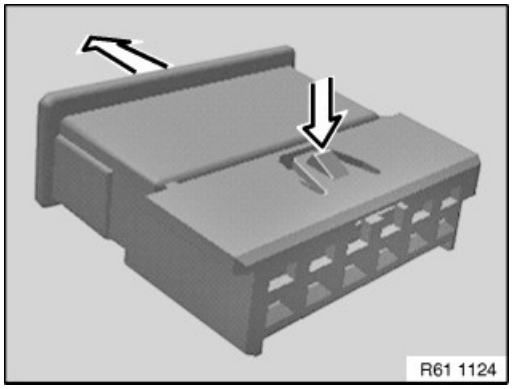


4.

Press lock and disconnect plug connection in direction of arrow.

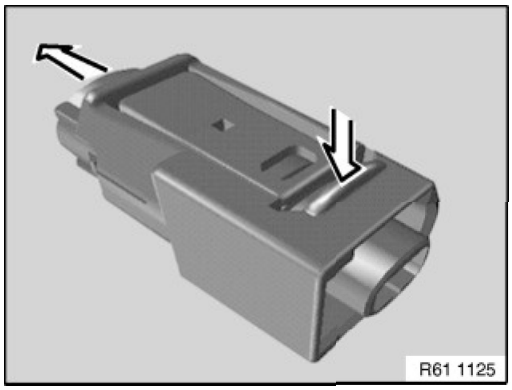


5.

Press lock and disconnect plug connection in direction of arrow.

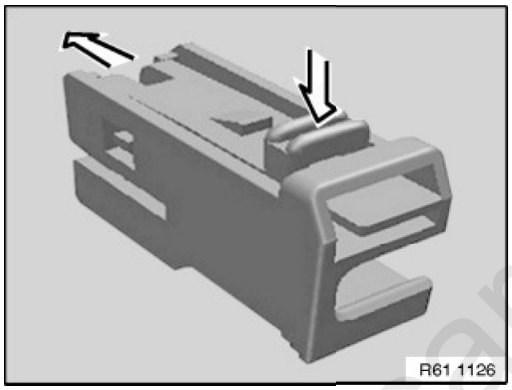

6.


Press lock and disconnect plug connection in direction of arrow.

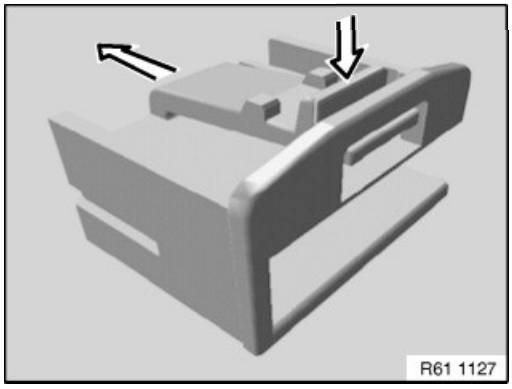

7.


Press lock and disconnect plug connection in direction of arrow.

cardiagn.com

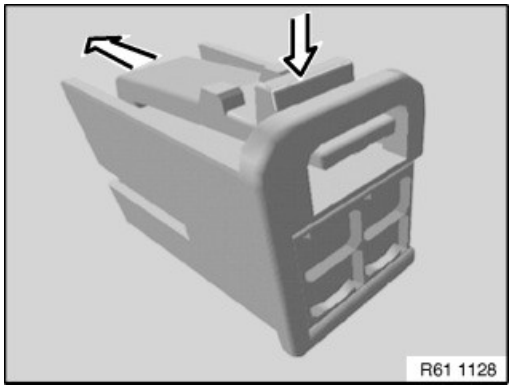


8.

Press lock and disconnect plug connection in direction of arrow.

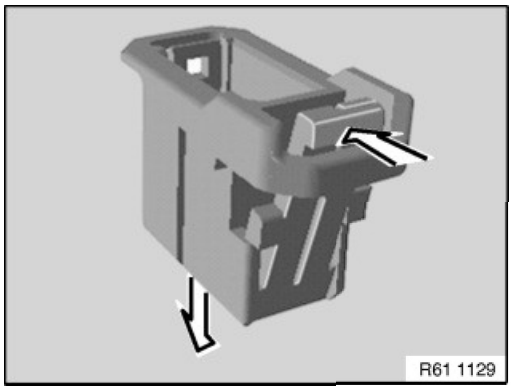


9.

Press lock and disconnect plug connection in direction of arrow.

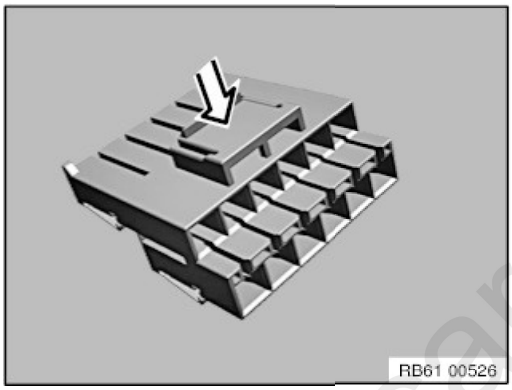

10.


Press the lock and detach plug connection.

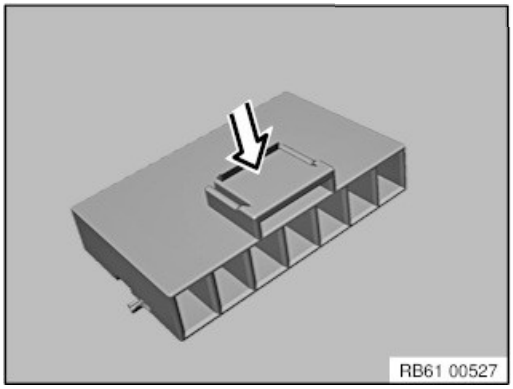


11.

Press the lock and detach plug connection.


cardiagn.com

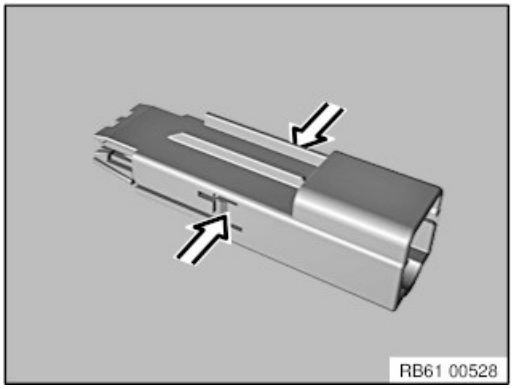


12.
Press the lock on both sides and detach plug connection.

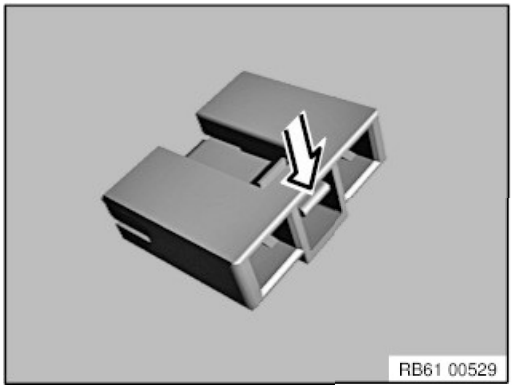

13.
Press the lock and detach plug connection.

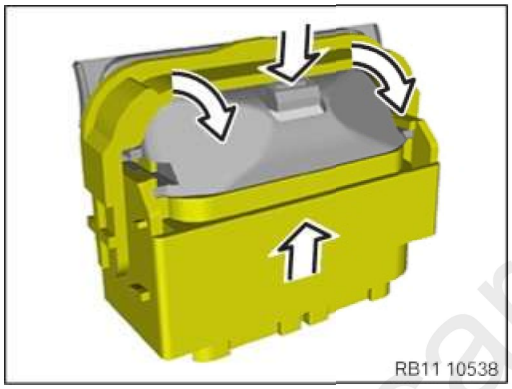


14.
Press lock and open release clip in direction of arrow.
Disconnect plug connection.

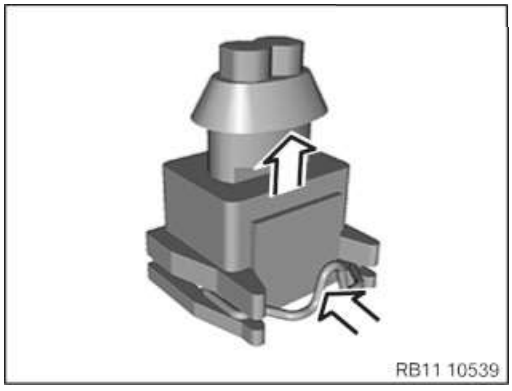

15.
Press the lock and detach plug connection.


cardiagn.com

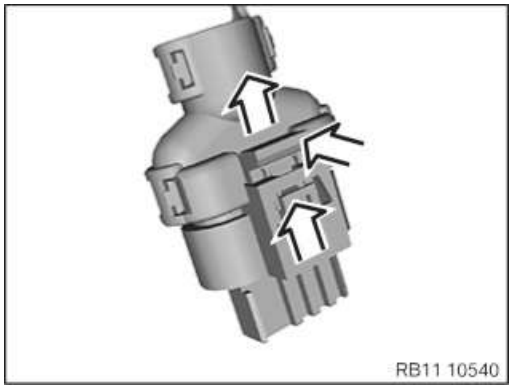

16.


Pull out lock and press.

Disconnect plug connection.

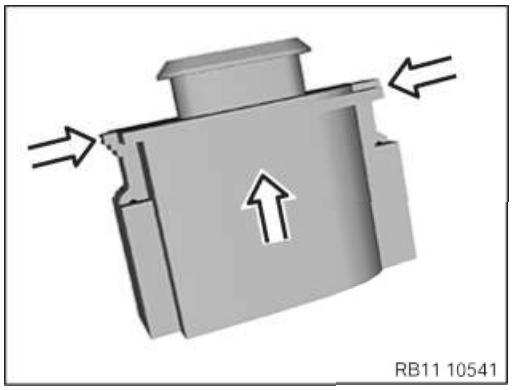


17.

Press the lock and detach plug connection.

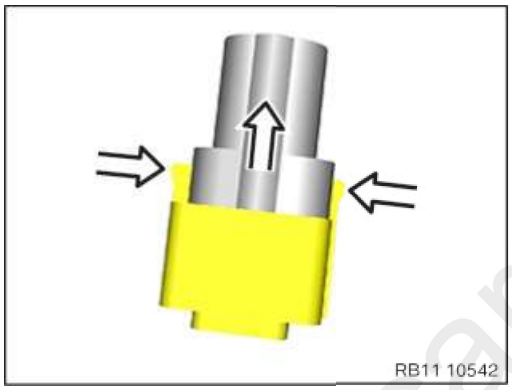

18.


Press the lock and detach plug connection.

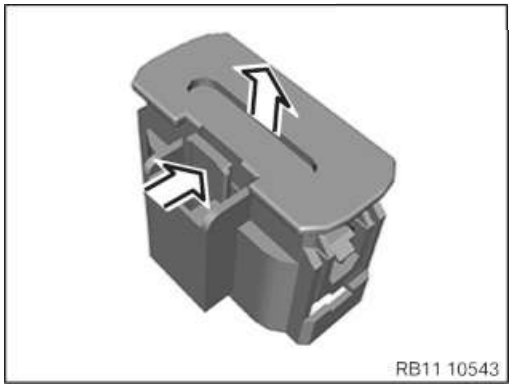

19.

Press the lock and detach plug connection.

cardiagn.com

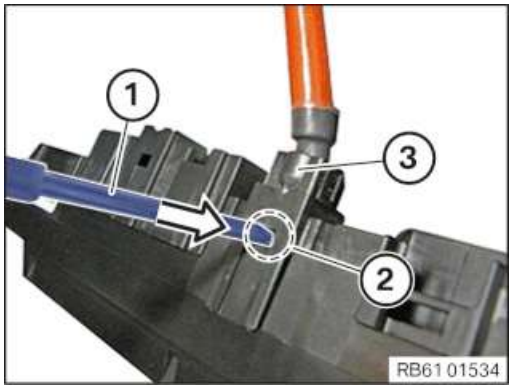


20.

Plug connection, e.g. on the power distribution box:

Press into the opening (2) using a suitable tool (1).

Pull off plug connection (3) upwards.

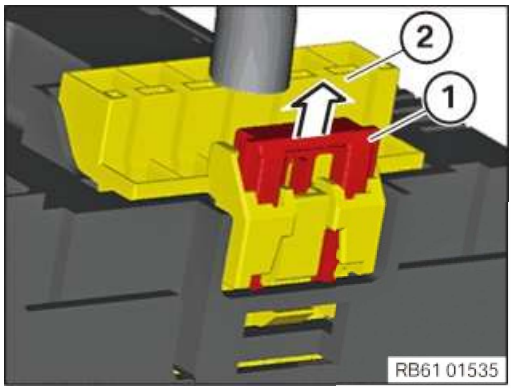

21.

Plug connection, e.g. on the power distribution box:

Lift lock (1) with a suitable tool.

Pull off plug connection (2) upwards.



22.

Vibration resistant high power engine contacts:

Caution!


For this connector type, increased forces come into play when disconnecting and closing.

Disconnect:

Pull out lock (1) downward in direction of arrow first.

Then press lock (1) down in direction of arrow and pull off connector.

cardiagn.com

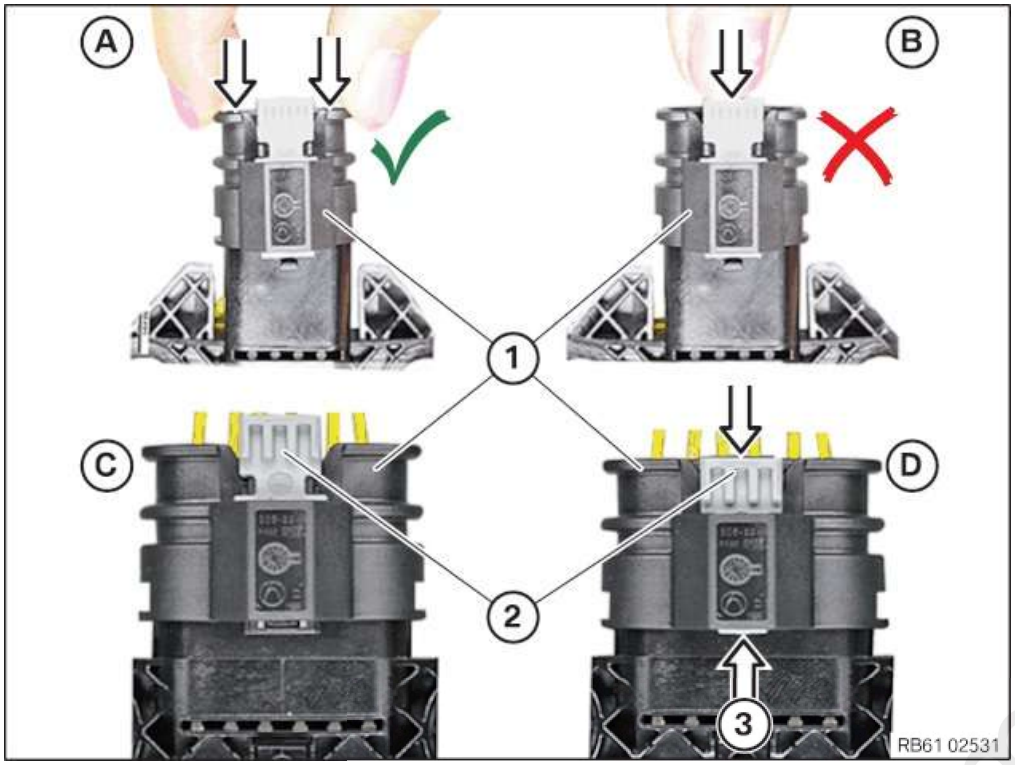


23.

Close:

A. Press the connector (1) down at the points indicated by the arrow **until it reaches the end position**
B. **Do** not press the connector (1) further than the lock
C. Connector (1) is in the end position, but lock (2) is not yet locked
D. Press lock (2) down in the direction of the arrow until the tip of lock (2) is visible at point (3)

Unlock / lock front light combination plug connection & replace housing after damage:

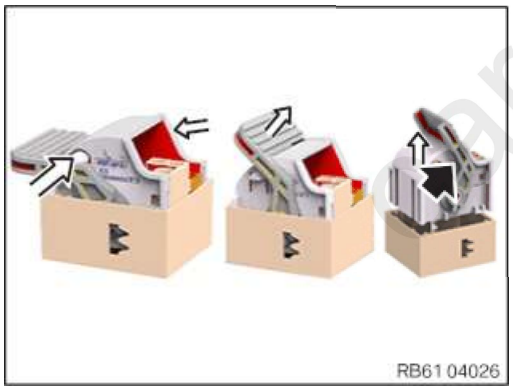


24.

Press in locking lever at both sides until the lever is unlocked and can be moved.


Move lever upwards until it latches into place in the end position.

Once the lever is locked in the end position, remove plug connection upwards.

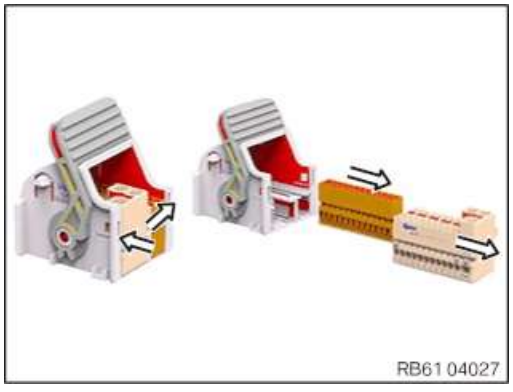


Unlock socket housing by lifting up each of the locking tabs.

Slide out after unlocking the socket housing.

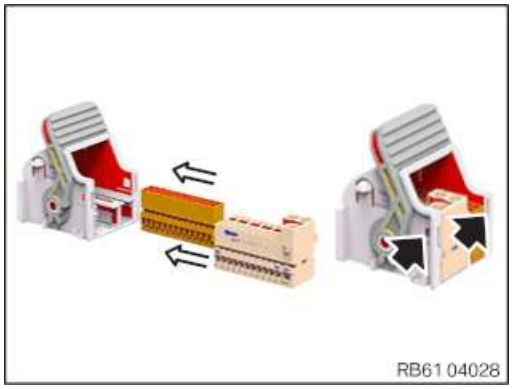

Slide in socket housing up to limit position.


Lock socket housing into place in end position.

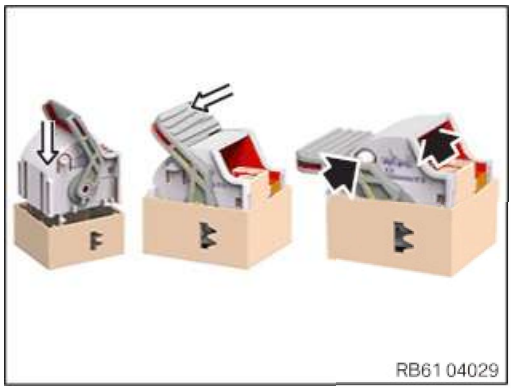

Sliding in up to limit position.

Activate plug-inn procedure by moving lever downwards.


IMPORTANT: the latch mechanism on both sides only works for a completed plug-in procedure.

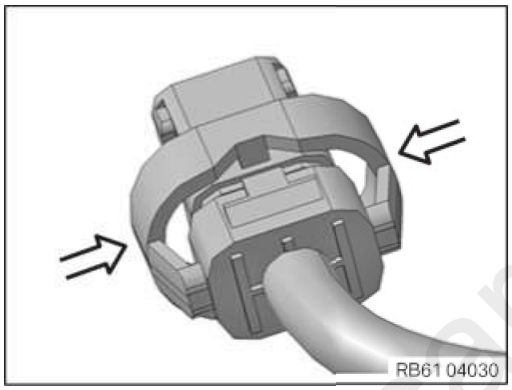

25.

Rosenberger D4S20G-400A5-Y

Press to unlock on both sides.

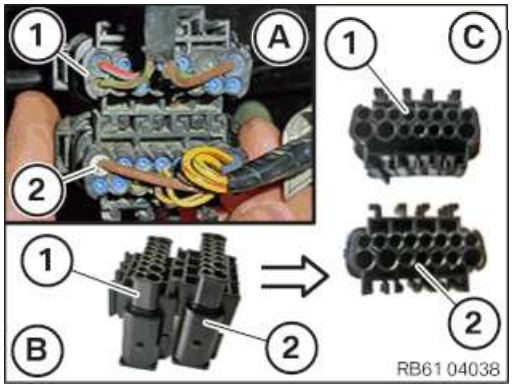


26.

Pin housing, 15-pinMLK1


- A & B. To avoid any damage to individual connectors, the given connector assembly consisting of several individual connectors (1) & (2) must be released before disconnecting the plug connection.
- C: released connector assembly

cardiagn.com

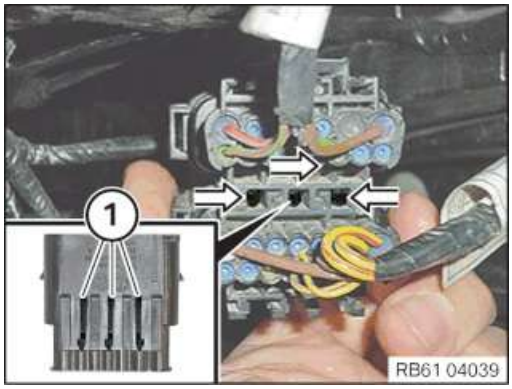

Disconnecting connector assembly:

Release retaining hooks (1) in direction of arrow (detail image shows retaining hooks of individual connector).

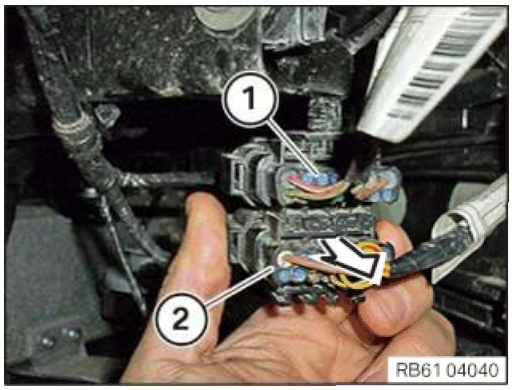

Release connector (2) in direction of arrow from connector (1).




27.

Airbag ignition circuit connector


Warning!

Note the safety information for working on vehicles with airbag systems prior to disconnecting the plug connection.

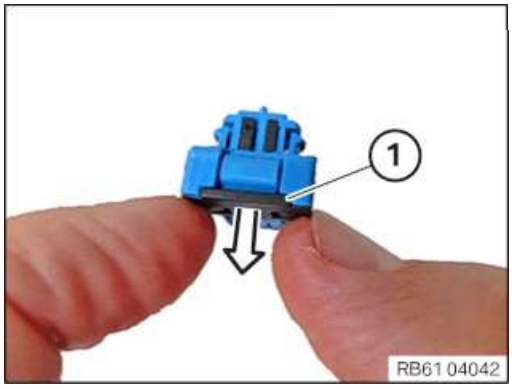

Pull the cap (1) in the direction of the arrow to unlock

cardiagn.com

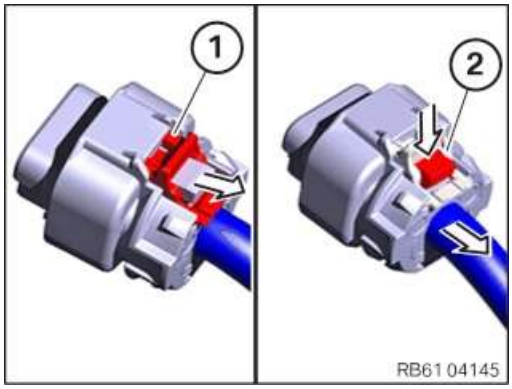


28.

Connector e.g. on front and rear lighting unit

Open safety catch (1) in direction of arrow using appropriate tool.

Push safety catch (2) in direction of arrow and disconnect plug connection.

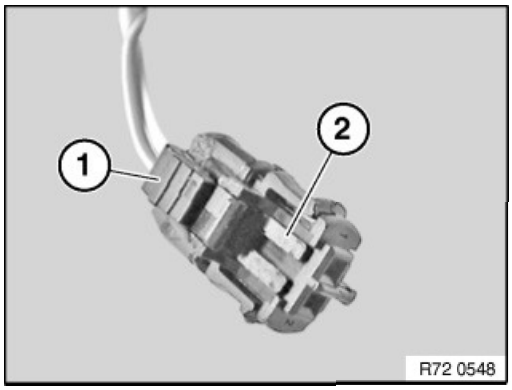

29.

Plug, e.g. in airbag ignition circuits

Press the lock (1) and pull out the connector (2) up to initial engagement position.

Pull off connector (2).


cardiagn.com

61 13 ... Unlocking and disconnecting various plug connections in electrical and hybrid vehicles

Attention!

Observe the following instructions for handling high-voltage plug connections:

- Damaged high-voltage plug connections must be replaced completely. Repair is not permitted.
- Dirt contamination must be removed before opening the plug connection.

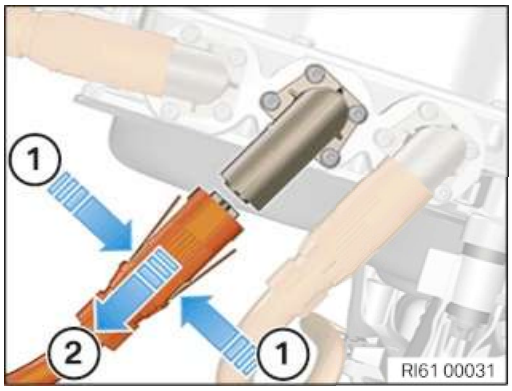

Disconnect the Hirschmann high-voltage connector:


Press the lock (1) on the left and right on the connector in the direction of the arrow.

Pull off connector (2) in direction of arrow.

Attention!

Connector (2) is difficult to pull off.


In the event of damage to high-voltage connector (2), the complete high-voltage cable must be replaced!

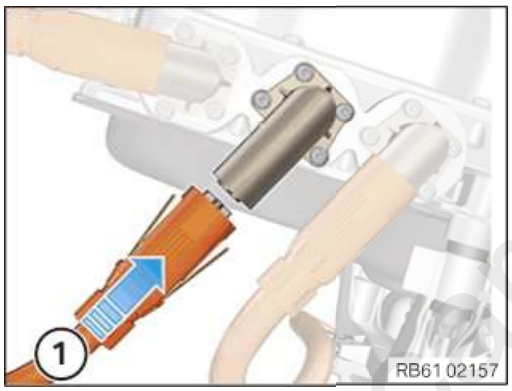

Connect the Hirschmann high-voltage connectors:

Slide the connector (1) on in the direction of the arrow.


Note:
Connector (2) must lock audibly.

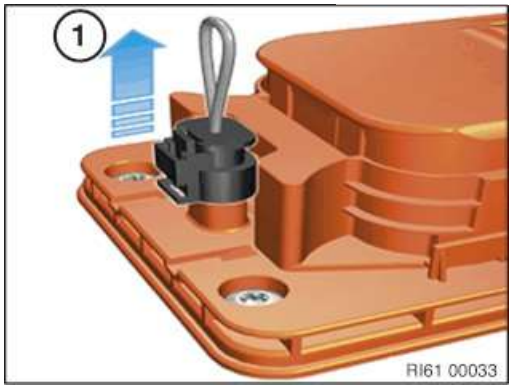

Disconnect the Kostal high-voltage connector:

Unlock and disconnect high-voltage interlock loop (1).

carldiag.com

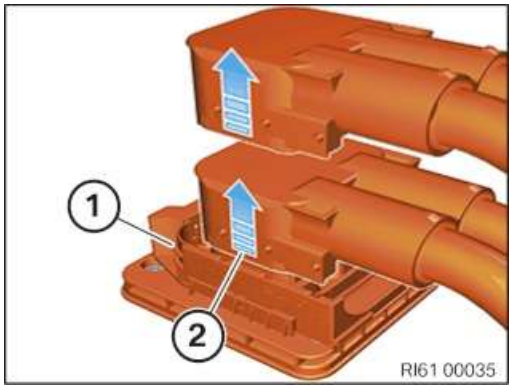


Push the lock (1) fully to the front.

Lift the connector (2) and remove it entirely.

Attention!

Plug connection (3) is difficult to pull off.

The connector (2) must be completely pulled off the opposite housing in one step. Damage may be caused to contact protection if connector is only partly pulled off and then closed again!

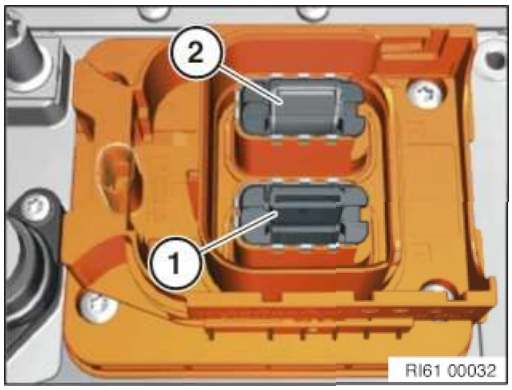

Check the Kostal high-voltage connector and connection for damage:


Check the touch protection for damage and correct positioning (1).

Warning!

Do not touch unprotected connector (2)!


If the contact protection (1) has been pushed to the bottom (2), the high-voltage connector must be refitted.

If contact protection (1) remains in bottom position (2) after reinstallation, the contact protection is faulty and the component must be replaced!

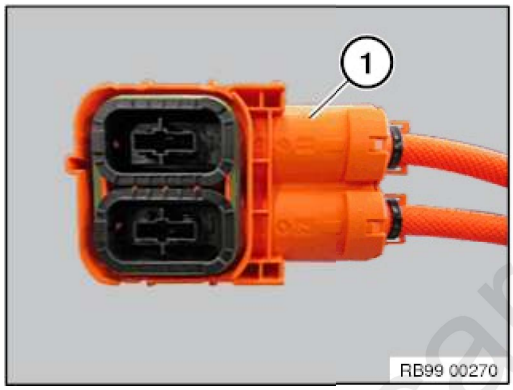

Check the high-voltage connector (1) for damage.**Warning!**

In the event of damage to the high-voltage connector (1), the complete high-voltage cable must be replaced!

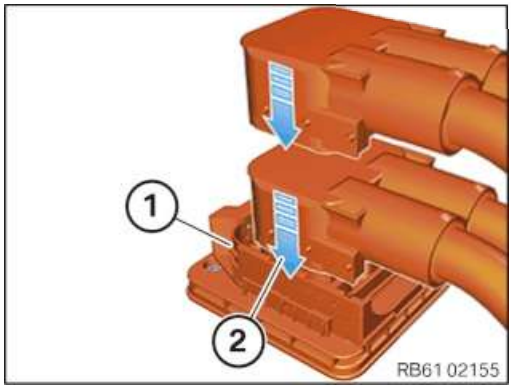

Connect the Kostal high-voltage connector:


Connect the connector (2) in one single movement to the counter-housing.

Push the lock (1) fully to the rear.


Attention!

Plug connection (3) must be correctly locked by lock (2), otherwise there is a risk of damage.

cardiag.com

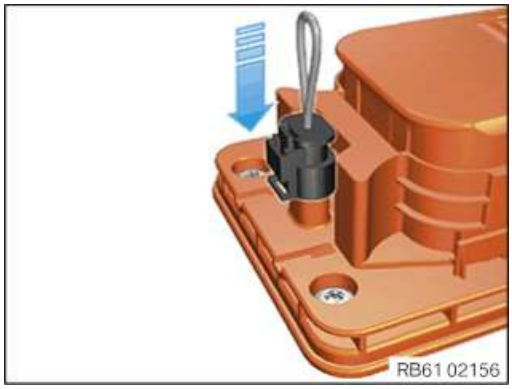


Connect the connector for the high-voltage interlock.

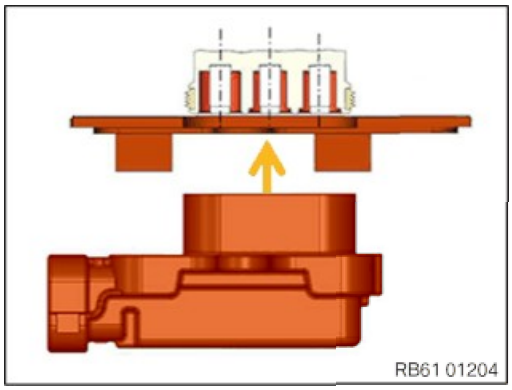

Three-phase high-voltage connector:


Connect and disconnect the connector straight.

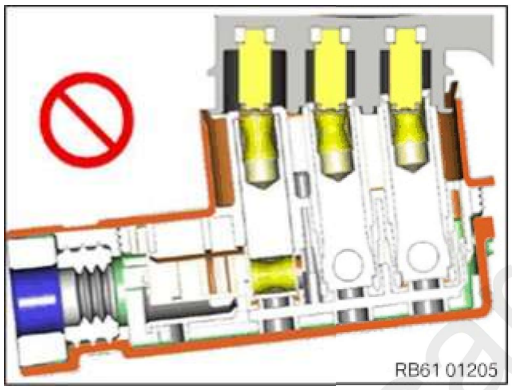

Attention!

The system is designed to only offer limited protection against damage caused by connectors that are inserted at an angle.


Increased tilted connections will increase the connecting force and the risk of danger.

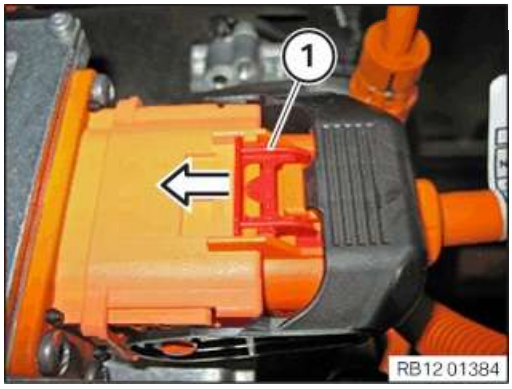


Disconnect the high-voltage connector from the high-voltage connection of the KLE:

Slide lock (1) in direction of arrow up to stop.


cardiagn.com

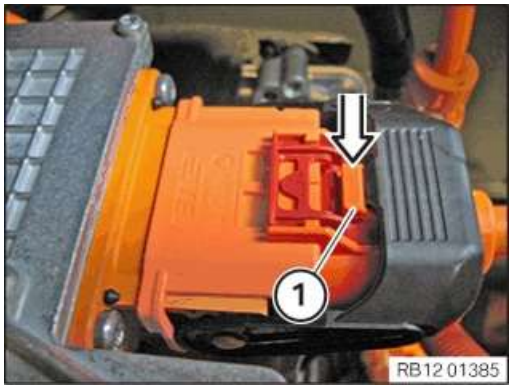

Press lock (1).

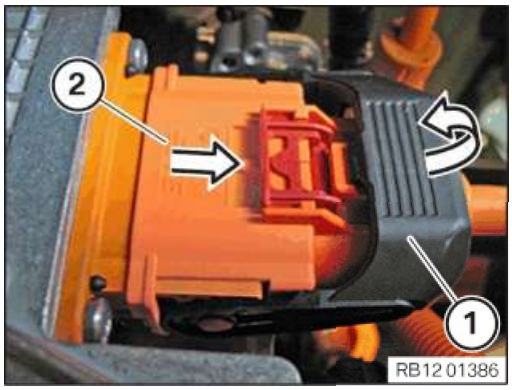

Open the lock (1) completely and disconnect the connector (2).

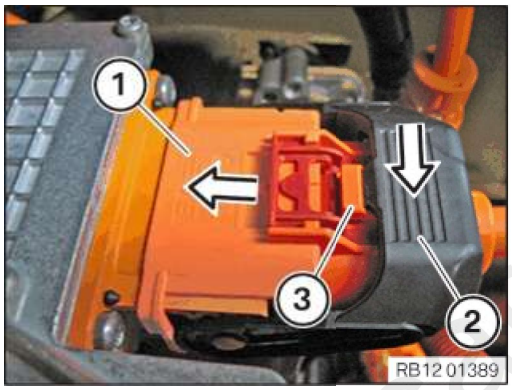


Connect the high-voltage connector to the high-voltage connection of the KLE:

Connect the connector (1) to the limit position and close the lock (2).

Attention!


Lock (2) must snap audibly into place.

The retaining lug of the lock (2) must be positioned completely under the lock (2).

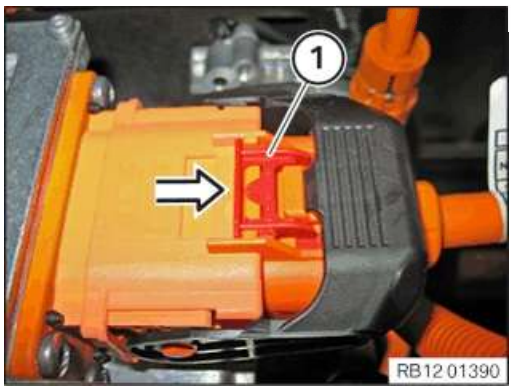

Slide the lock (1) on to the stop in the direction of the arrow.

cardiagn.com

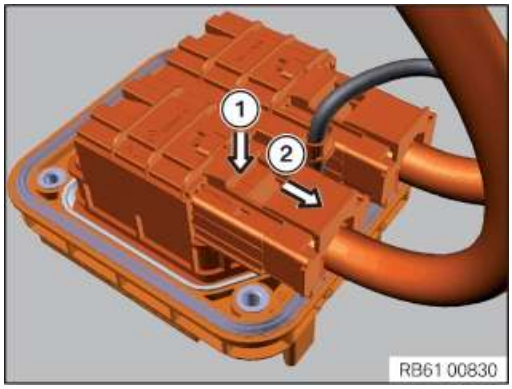


High-voltage connector on the high-voltage connection of the high-voltage battery unit:

Press down unlocking (1) in direction of arrow and pull off connector in direction of arrow (2).

Attention!

Contact protection is no longer provided in the event of a damaged connector housing.

In this case, contact technical support.

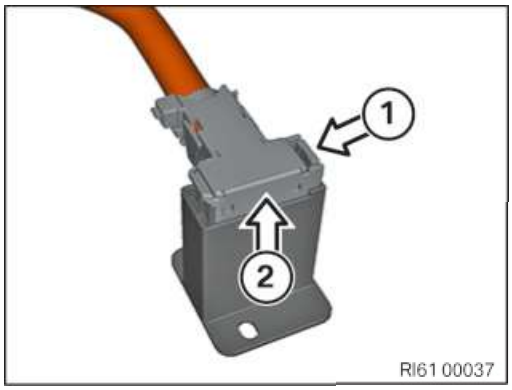


High-voltage connector on the cell module I01:

Press unlocking device (1) together and pull off connector upwards (2).

Attention!

Contact protection is no longer provided in the event of a damaged connector housing.

In this case, contact technical support.

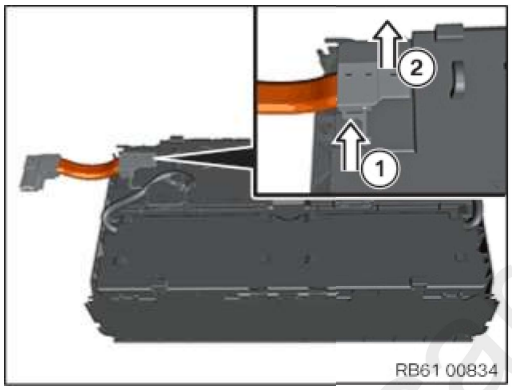

High-voltage connector on the cell module (cell module connecting line):

Press unlocking (1) in direction of arrow and pull off connector in direction of arrow (2).

Attention!

Contact protection is no longer provided in the event of a damaged connector housing.

In this case, contact technical support.

cardiagn.com