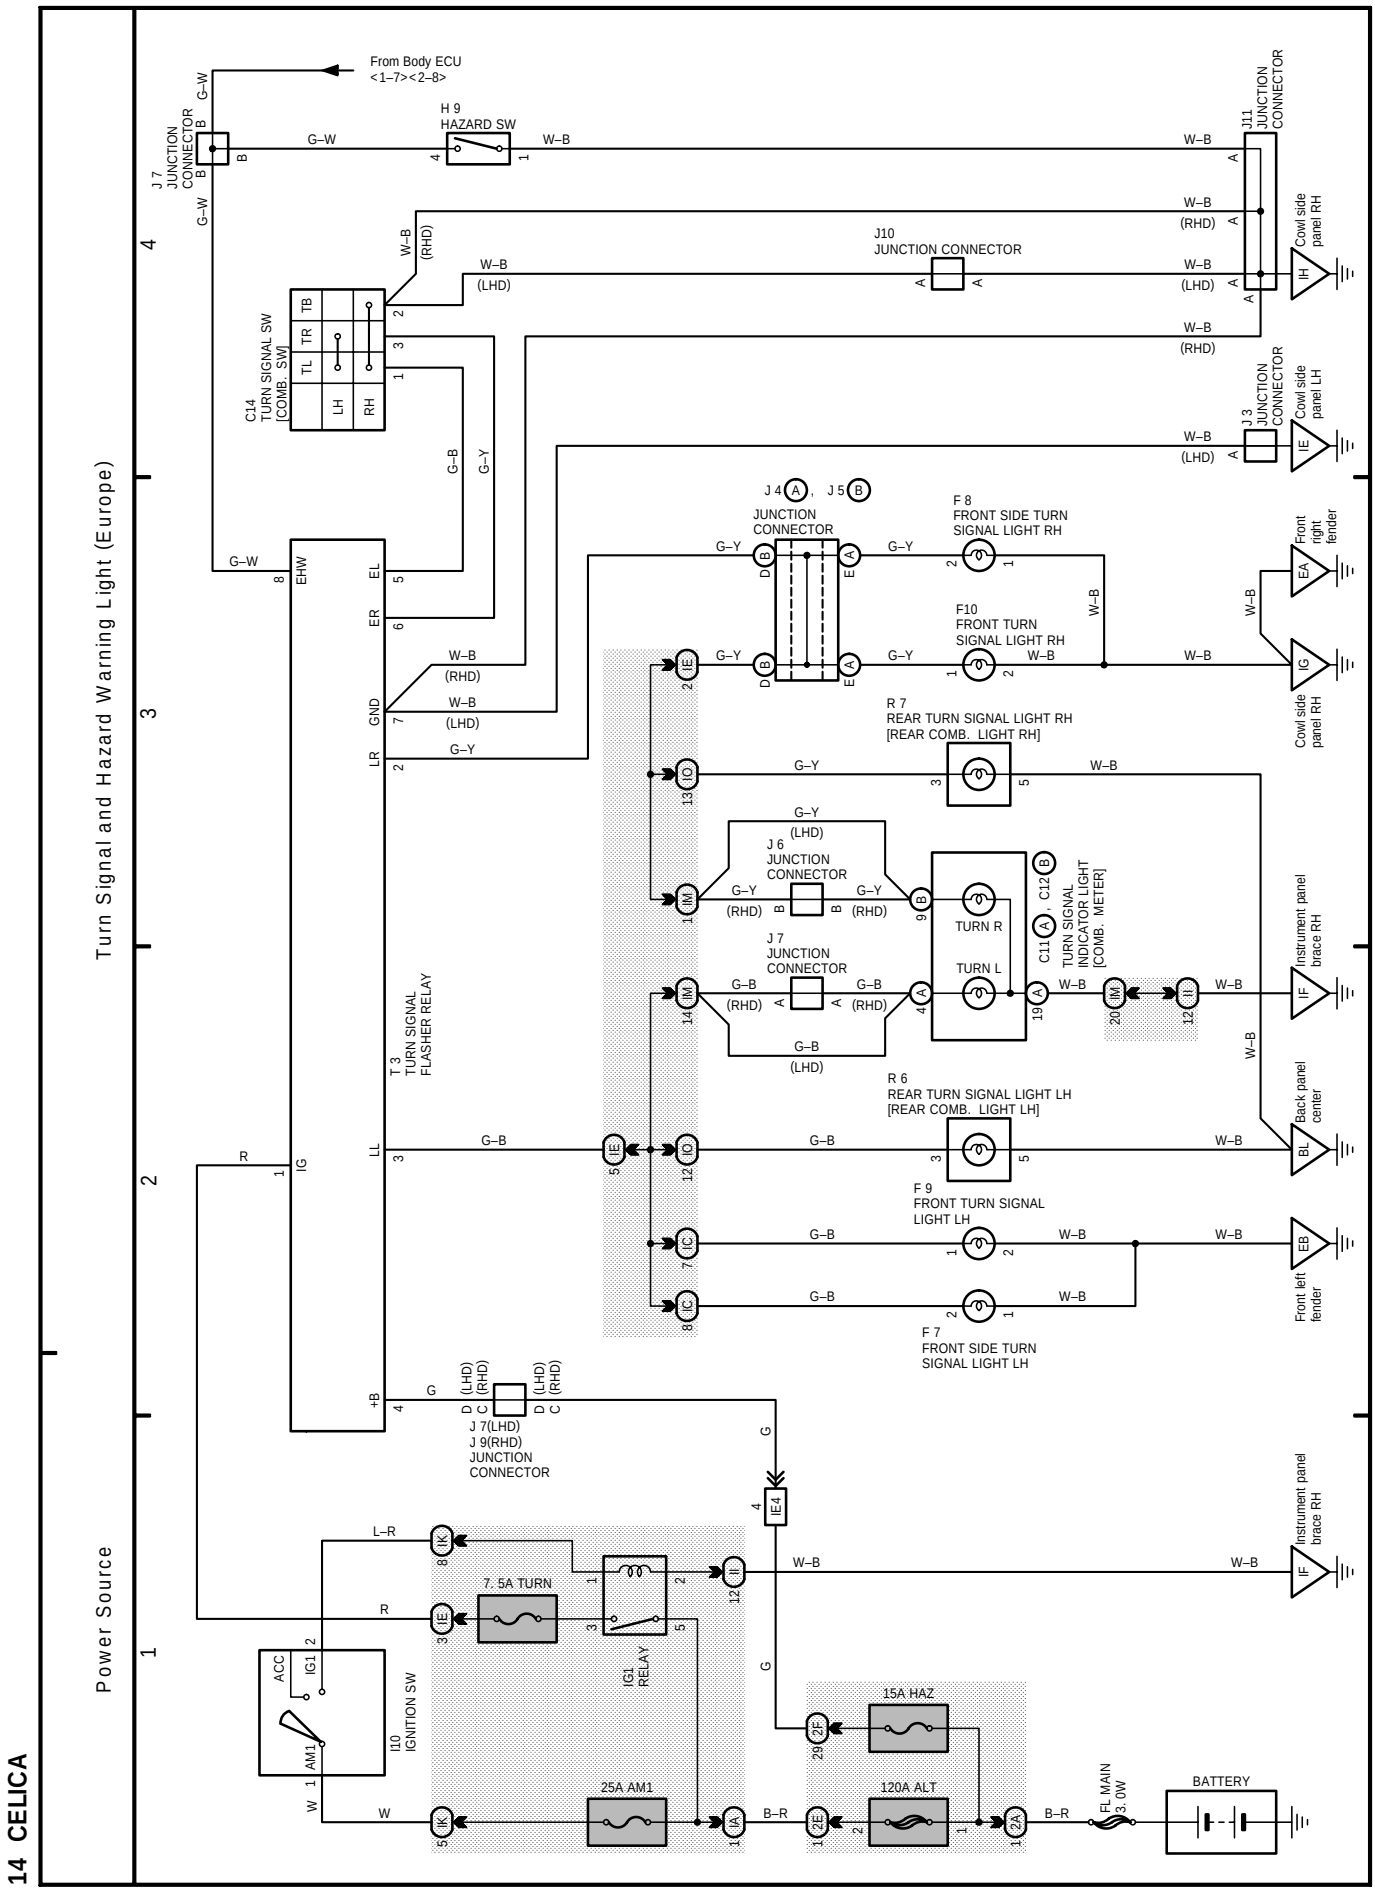

14 CELICA
Power Source
Turn Signal and Hazard Warning Light (Europe)
From Body ECU
<1–7><2–8>
H 9
HAZARD SW
J 7
JUNCTION
CONNECTOR
J11
JUNCTION
CONNECTOR
J10
JUNCTION CONNECTOR
C14
TURN SIGNAL SW
[COMB. SW]
J 3
JUNCTION
CONNECTOR
Cowl side
panel LH
Cowl side
panel RH
J 4 , J 5
JUNCTION
CONNECTOR
F 8
FRONT SIDE TURN
SIGNAL LIGHT RH
F10
FRONT TURN
SIGNAL LIGHT RH
Front
right
fender
R 7
REAR TURN SIGNAL LIGHT RH
[REAR COMB. LIGHT RH]
J 6
JUNCTION
CONNECTOR
J 7
JUNCTION
CONNECTOR
TURN R
TURN L
C11 , C12
TURN SIGNAL
INDICATOR LIGHT
[COMB. METER]
Instrument panel
brace RH
T 3
TURN SIGNAL
FLASHER RELAY
R 6
REAR TURN SIGNAL LIGHT LH
[REAR COMB. LIGHT LH]
Back panel
center
F 9
FRONT TURN SIGNAL
LIGHT LH
Front left
fender
F 7
FRONT SIDE TURN
SIGNAL LIGHT LH
J 7(LHD)
J 9(RHD)
JUNCTION
CONNECTOR
7. 5A TURN
IG1
RELAY
I10
IGNITION SW
15A HAZ
25A AM1
120A ALT
FL MAIN
3. 0W
BATTERY
W–B
G–Y
G–B
G–W
L–R
B–R
(RHD)
(LHD)