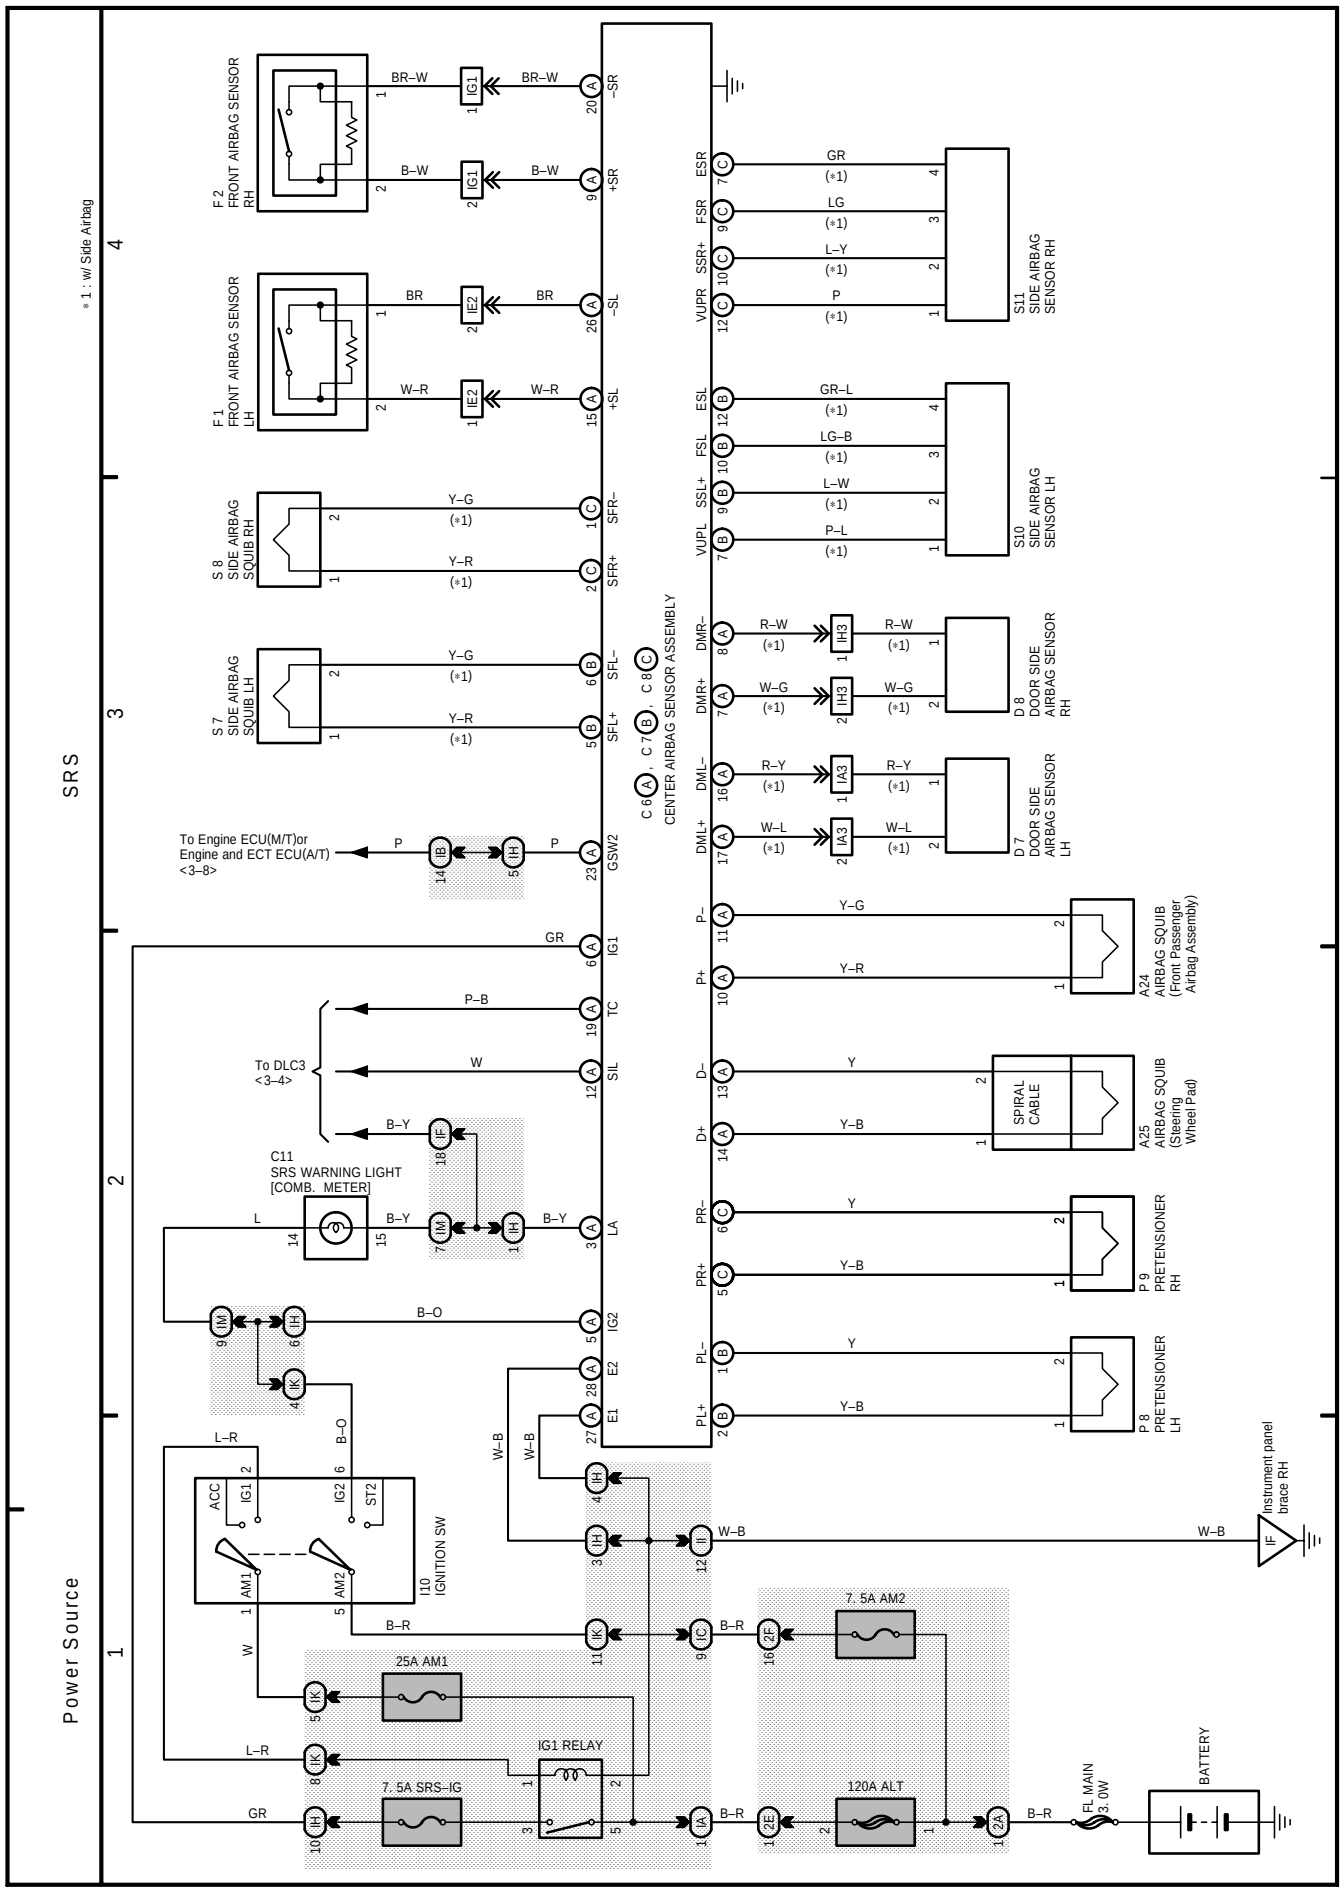

20 CELICA
Power Source
SRS
*1 : w/ Side Airbag
F.2 FRONT AIRBAG SENSOR RH
F.1 FRONT AIRBAG SENSOR LH
S.8 SIDE AIRBAG SQUIB RH
S.7 SIDE AIRBAG SQUIB LH
CENTER AIRBAG SENSOR ASSEMBLY
S11 SIDE AIRBAG SENSOR RH
S10 SIDE AIRBAG SENSOR LH
D.8 DOOR SIDE AIRBAG SENSOR RH
D.7 DOOR SIDE AIRBAG SENSOR LH
A24 AIRBAG SQUIB (Front Passenger Airbag Assembly)
A25 AIRBAG SQUIB (Steering Wheel Pad)
SPIRAL CABLE
P.9 PRETENSIONER RH
P.8 PRETENSIONER LH
To Engine ECU(M/T)or Engine and ECT ECU(A/T) <3–8>
To DLC3 <3–4>
C11 SRS WARNING LIGHT [COMB. METER]
I10 IGNITION SW
ACC
IG1
ST2
IG2
AM1
AM2
IG1 RELAY
25A AM1
7. 5A SRS–IG
7. 5A AM2
120A ALT
FL MAIN 3. 0W
BATTERY
Instrument panel brace RH
BR–W
B–W
BR
W–R
Y–G
Y–R
GR
LG
L–Y
P
GR–L
LG–B
L–W
P–L
R–W
W–G
R–Y
W–L
P–B
W
B–Y
B–O
L–R
W–B
B–R
W