
Fog Light without DRL (Access/Standard Cab)

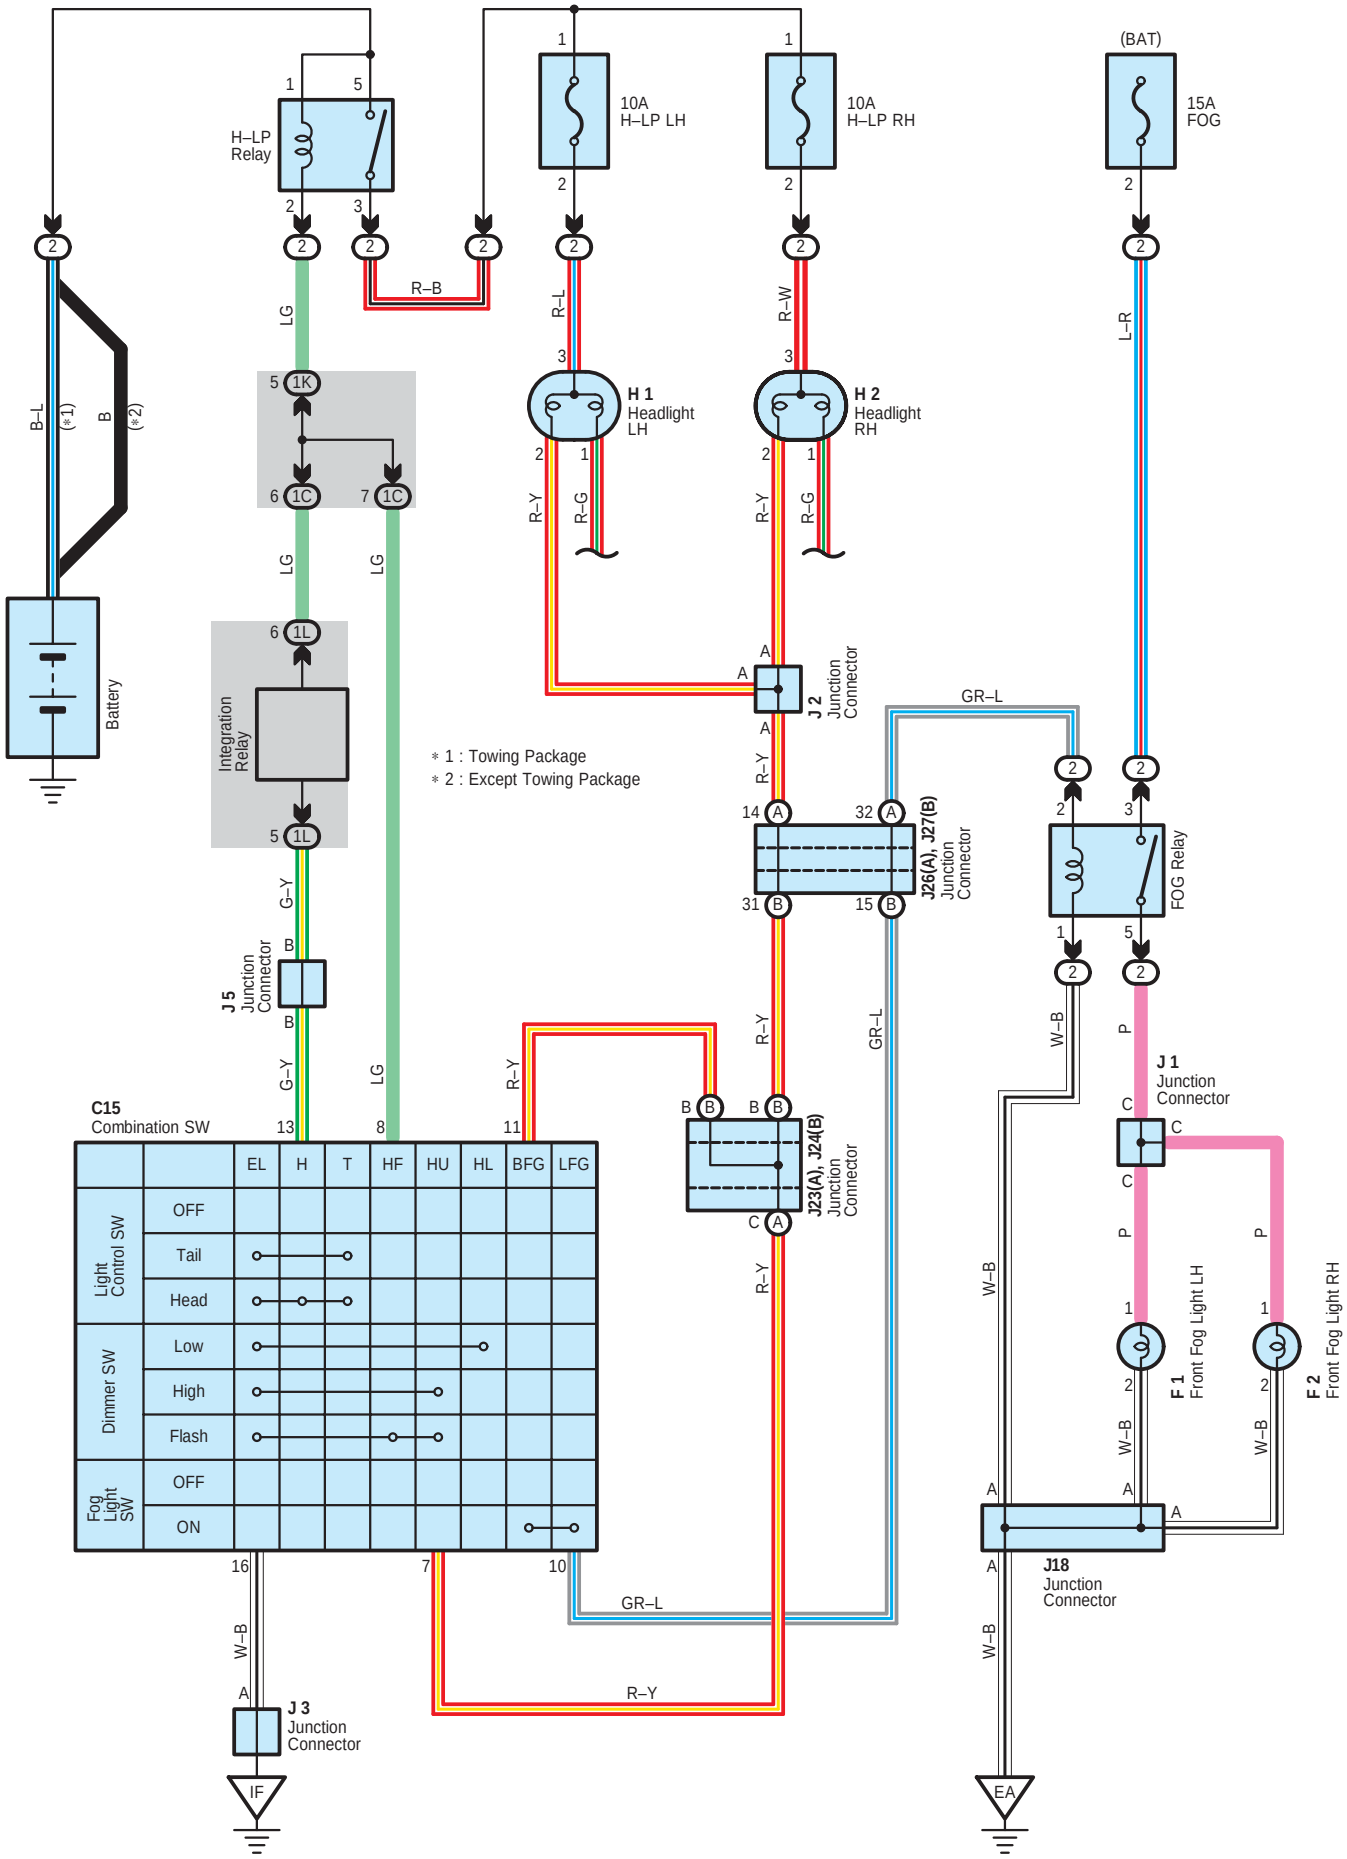

: Parts Location

Code	See Page	Code	See Page	Code		See Page
C15	60	H2	56 (2UZ–FE)	J5		62
F1	56 (2UZ–FE)		58 (1GR–FE)	J18		57 (2UZ–FE)
	58 (1GR–FE)	J1	57 (2UZ–FE)			59 (1GR–FE)
F2	56 (2UZ–FE)		59 (1GR–FE)	J23	A	62
	58 (1GR–FE)	J2	57 (2UZ–FE)	J24	B	62
H1	56 (2UZ–FE)		59 (1GR–FE)	J26	A	62
	58 (1GR–FE)	J3	62	J27	B	62

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1K	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	27 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)

: Ground Points

Code	See Page	Ground Points Location
EA	80 (2UZ–FE)	Front Left Fender
	81 (1GR–FE)	
IF	82	Left Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat