
Audio System with 6 Speaker (Double Cab)

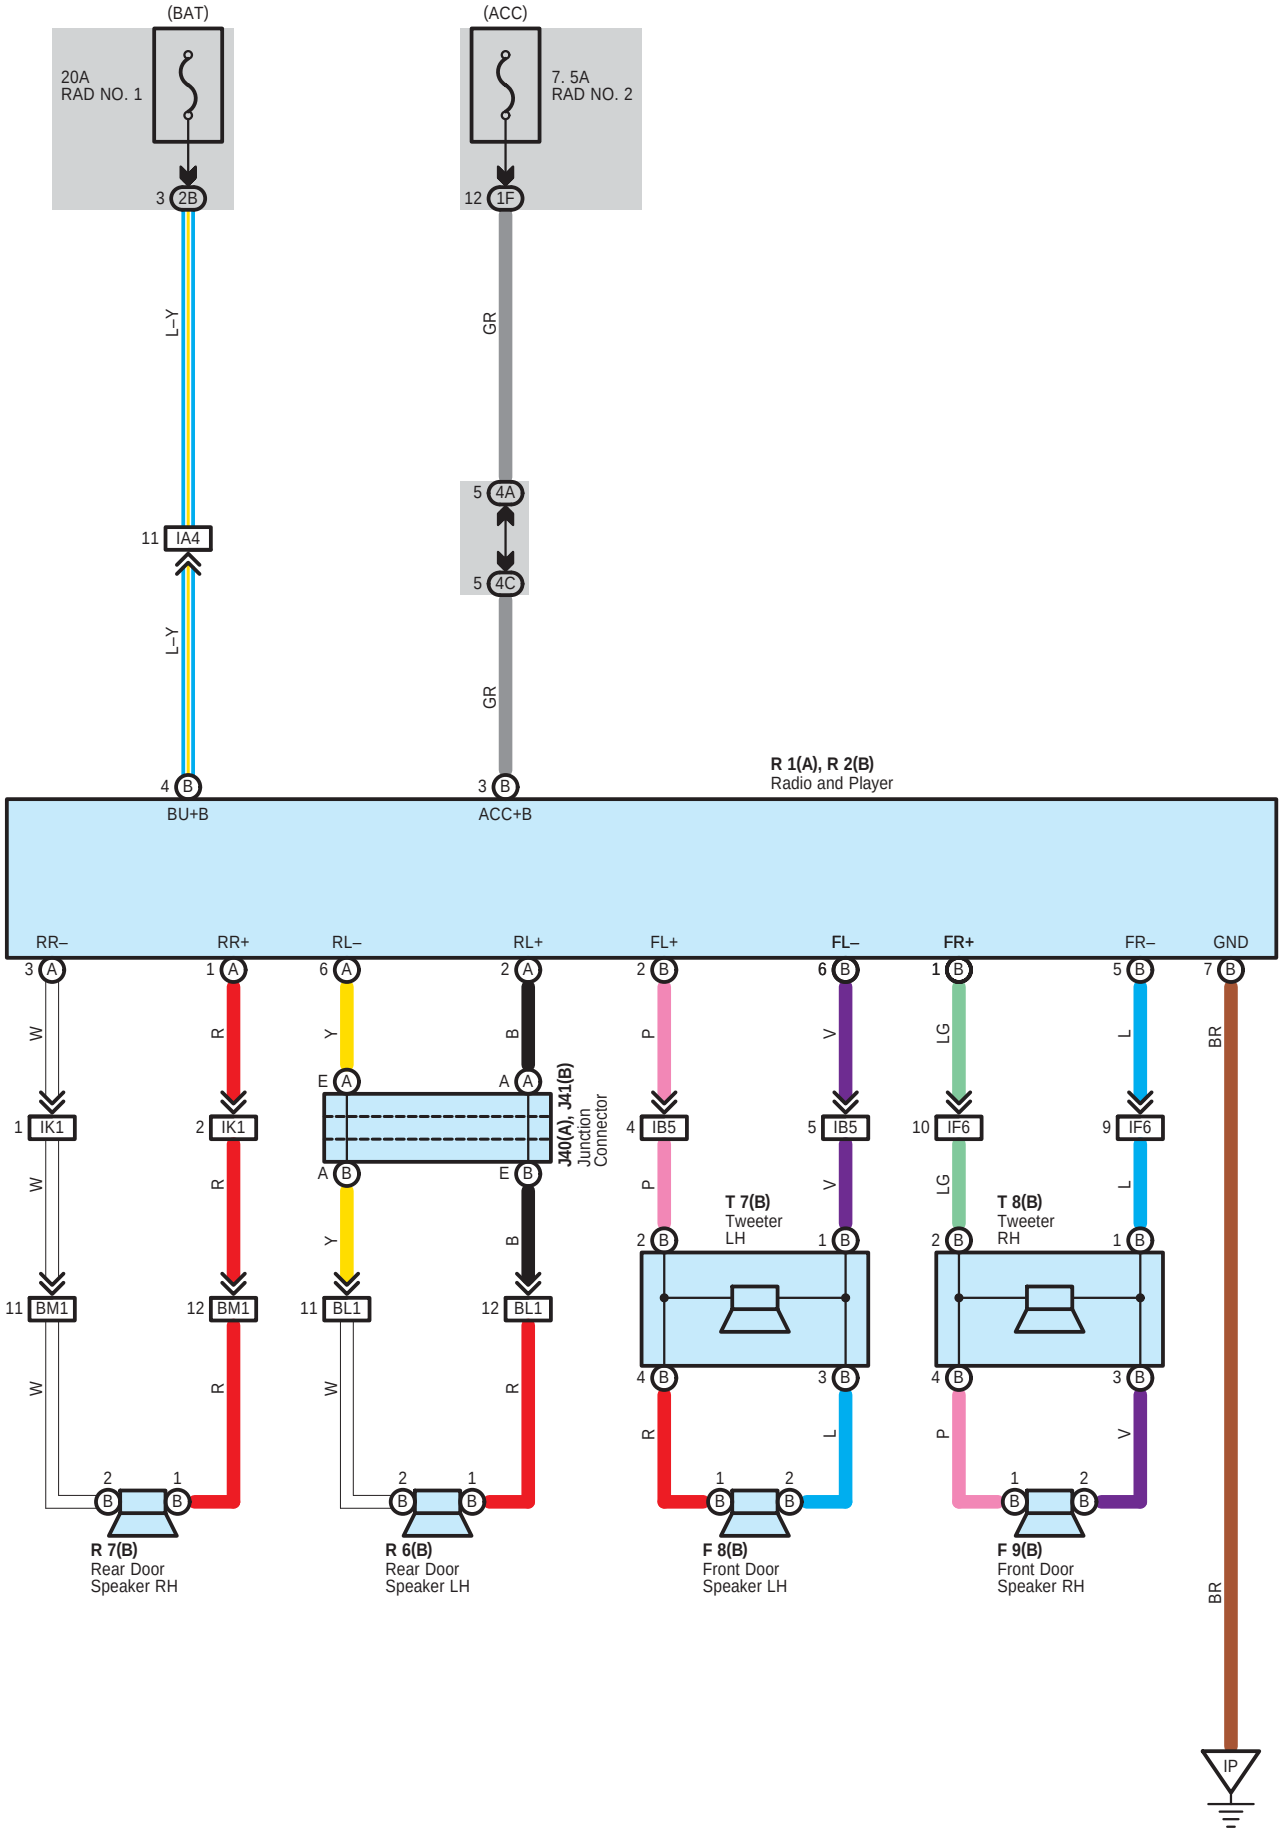

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
F8	B	76	R1	A	75	T7	B	77
F9	B	76	R2	B	75	T8	B	77
J40	A	74	R6	B	77			
J41	B	74	R7	B	77			

⬭ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
2B	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4C		

▭ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	92	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IB5	92	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF6	93	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IK1	93	Floor Wire and Cowl Wire (Right Kick Panel)
BL1	94	Rear Door No.1 Wire LH and Floor No.2 Wire (Left Side of Center Pillar)
BM1	94	Rear Door No.1 Wire RH and Floor Wire (Right Side of Center Pillar)

▽ : Ground Points

Code	See Page	Ground Points Location
IP	92	Instrument Panel Brace LH