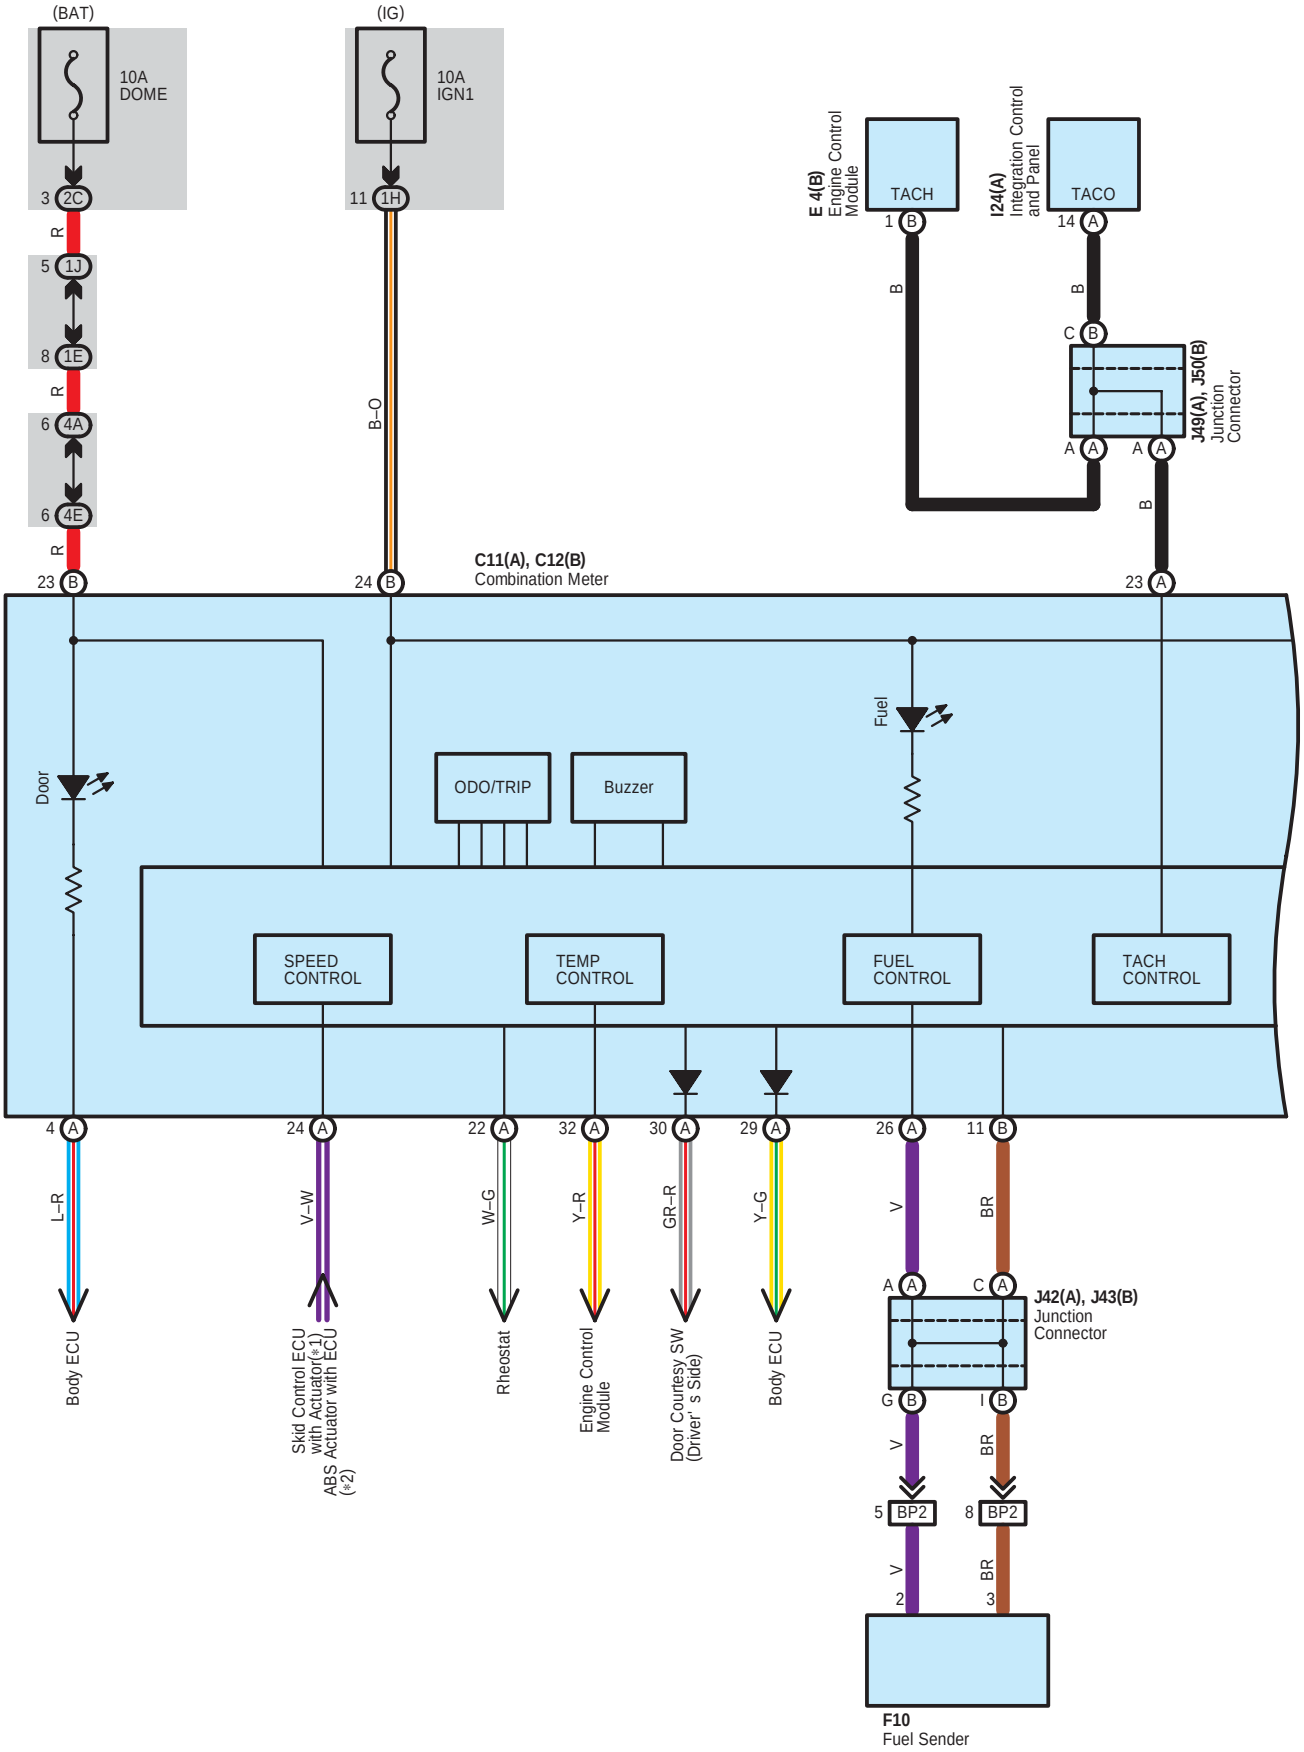
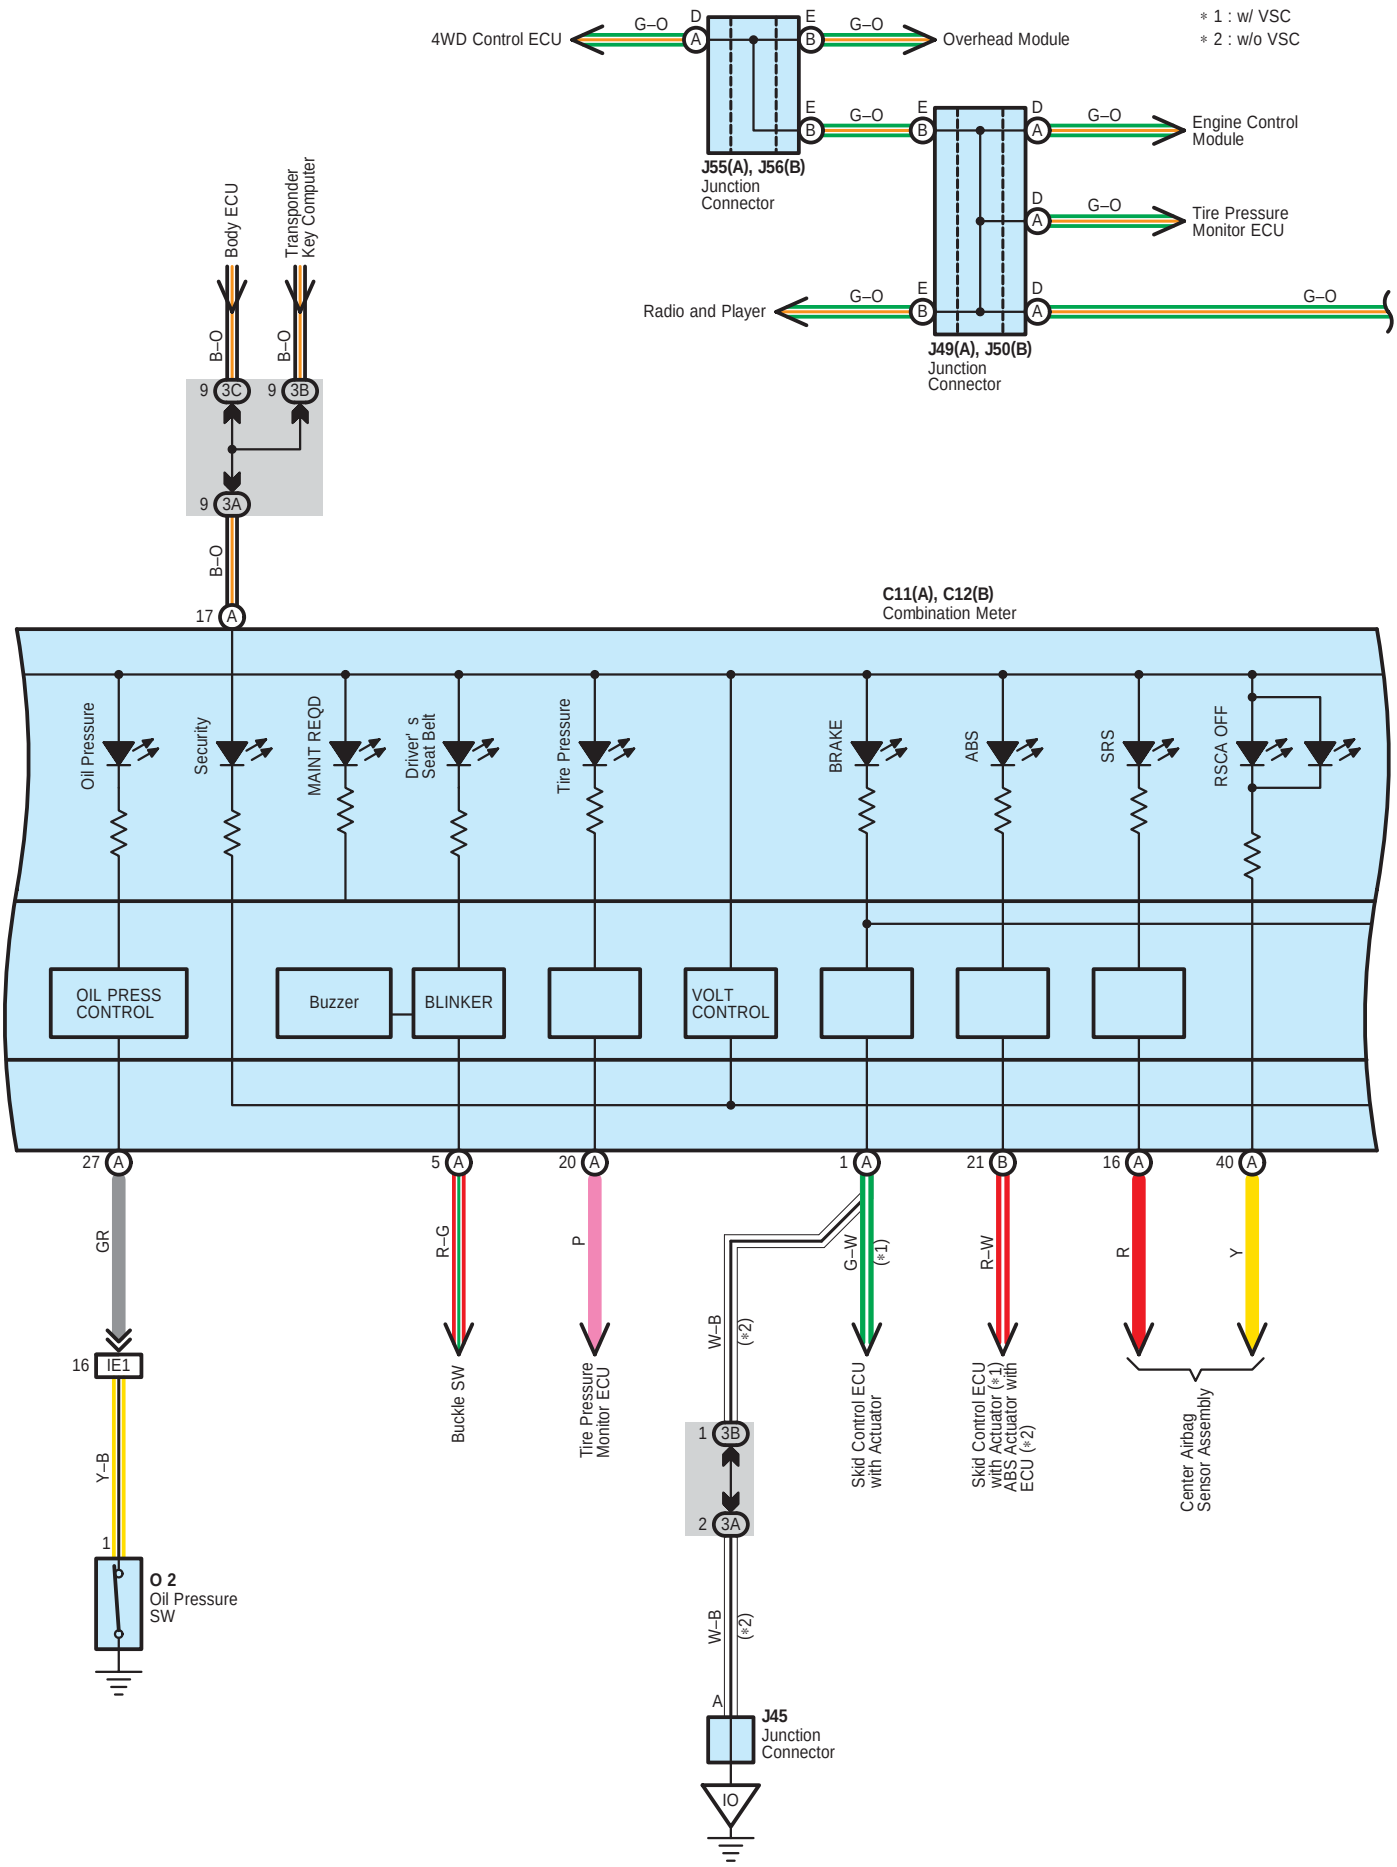
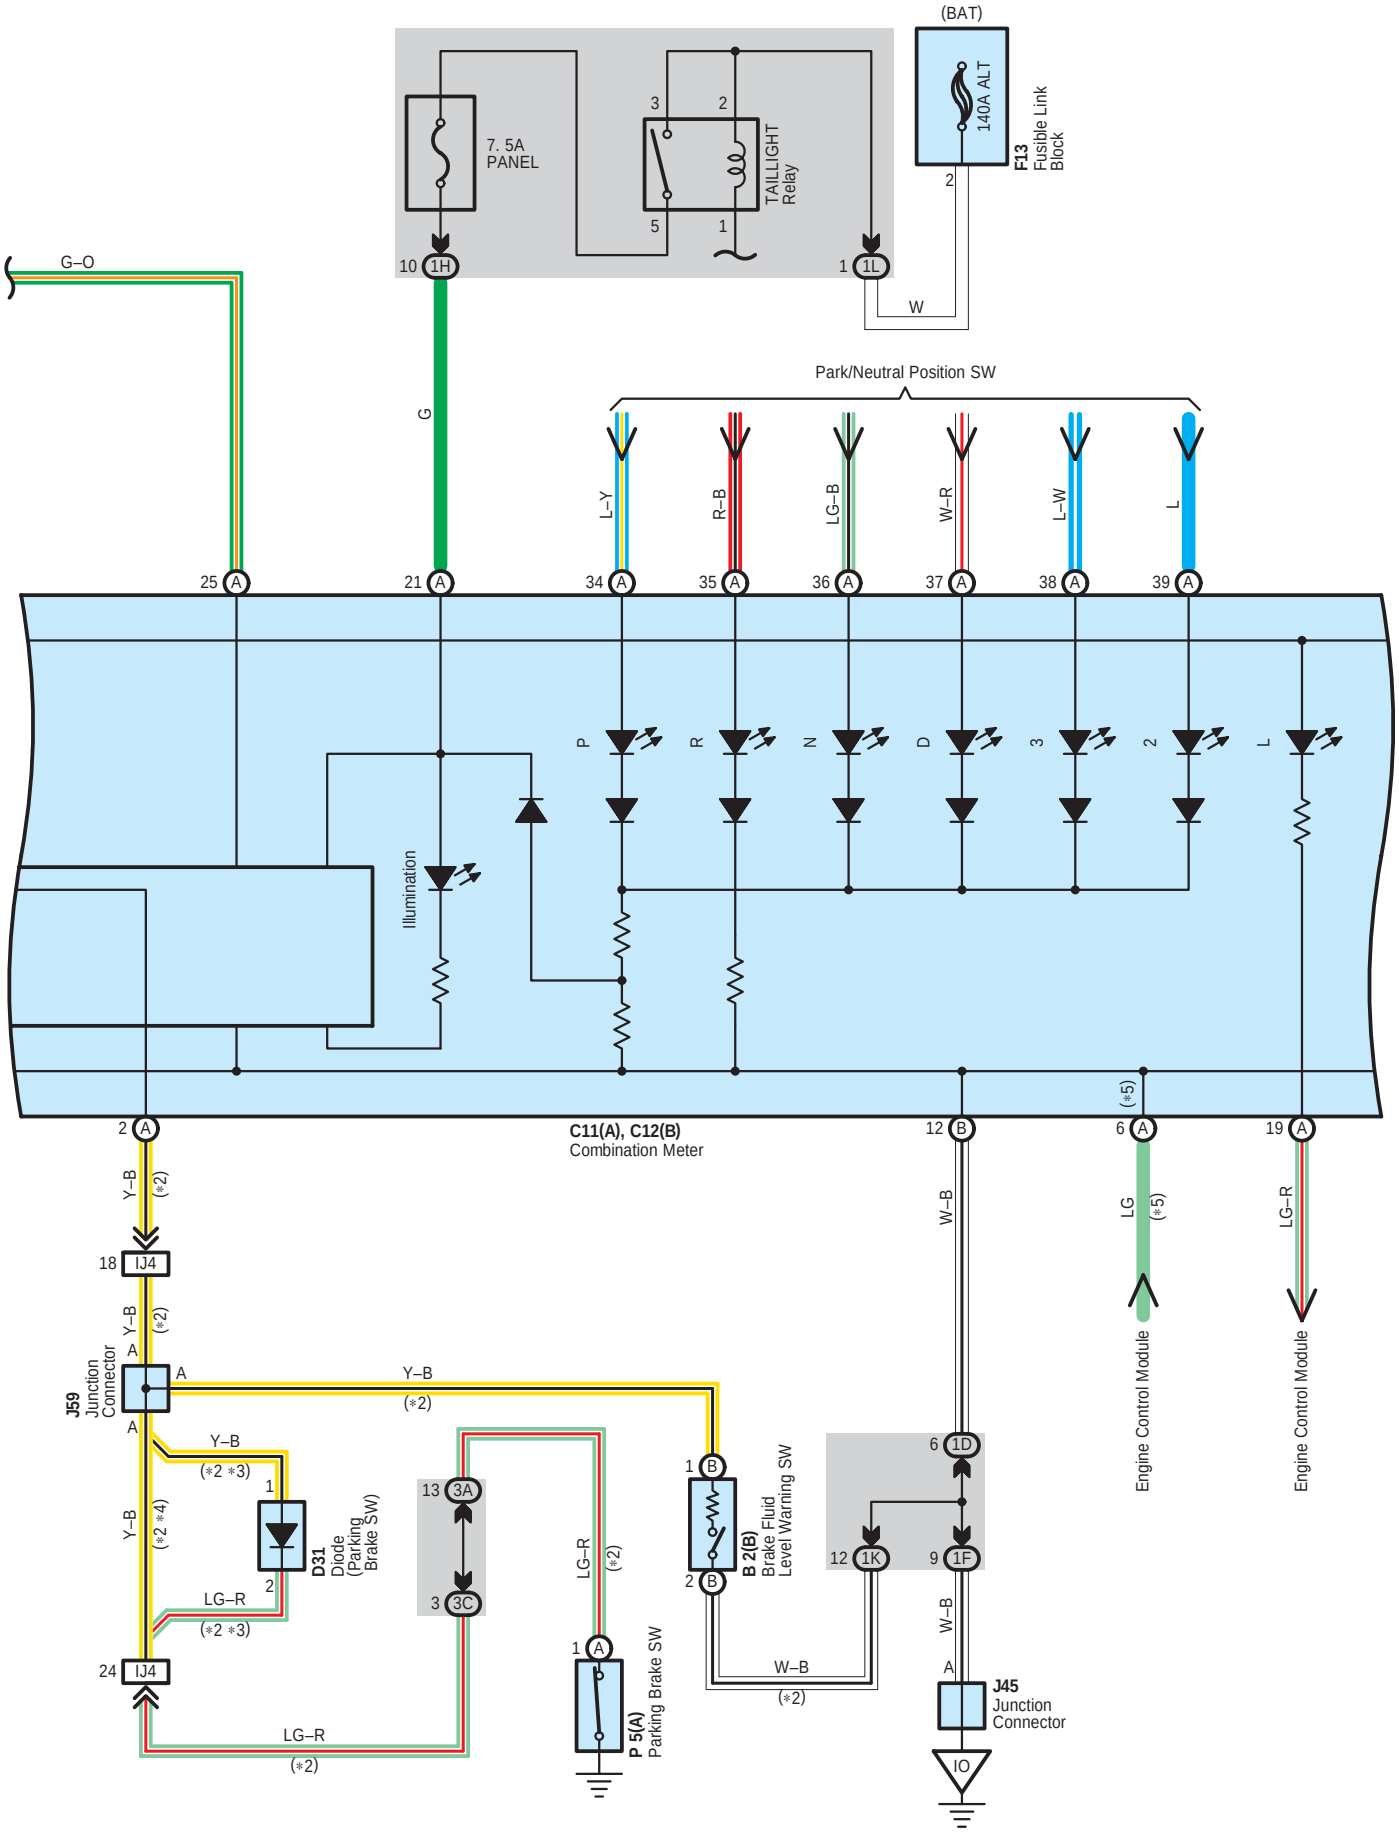
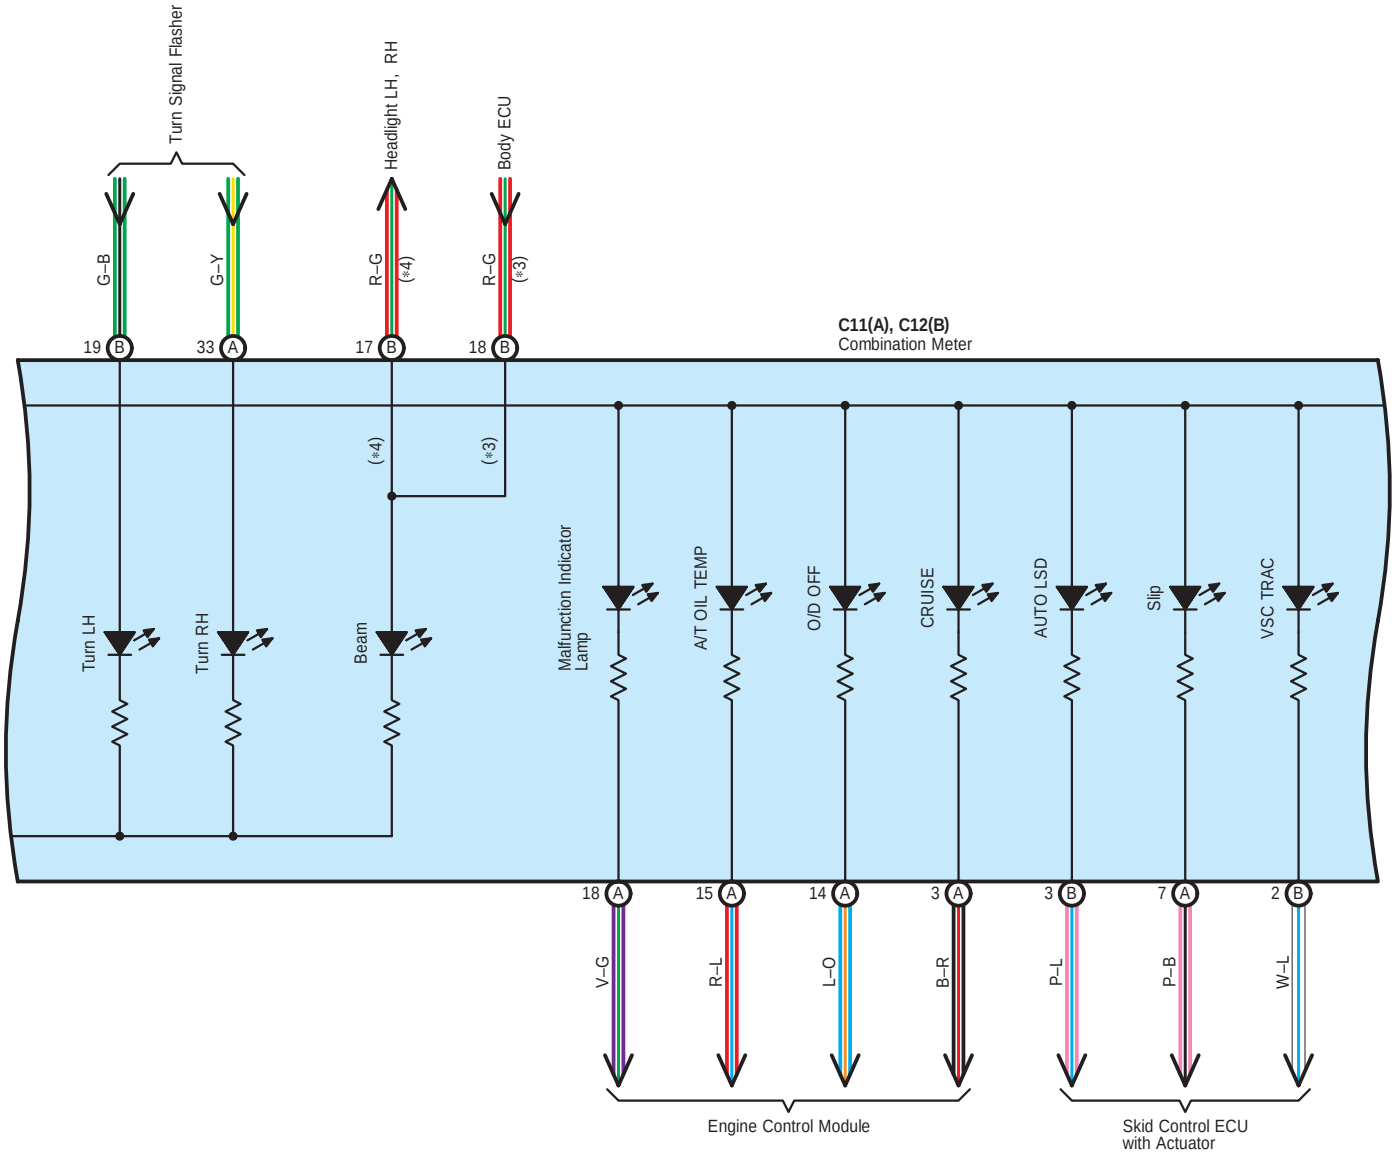
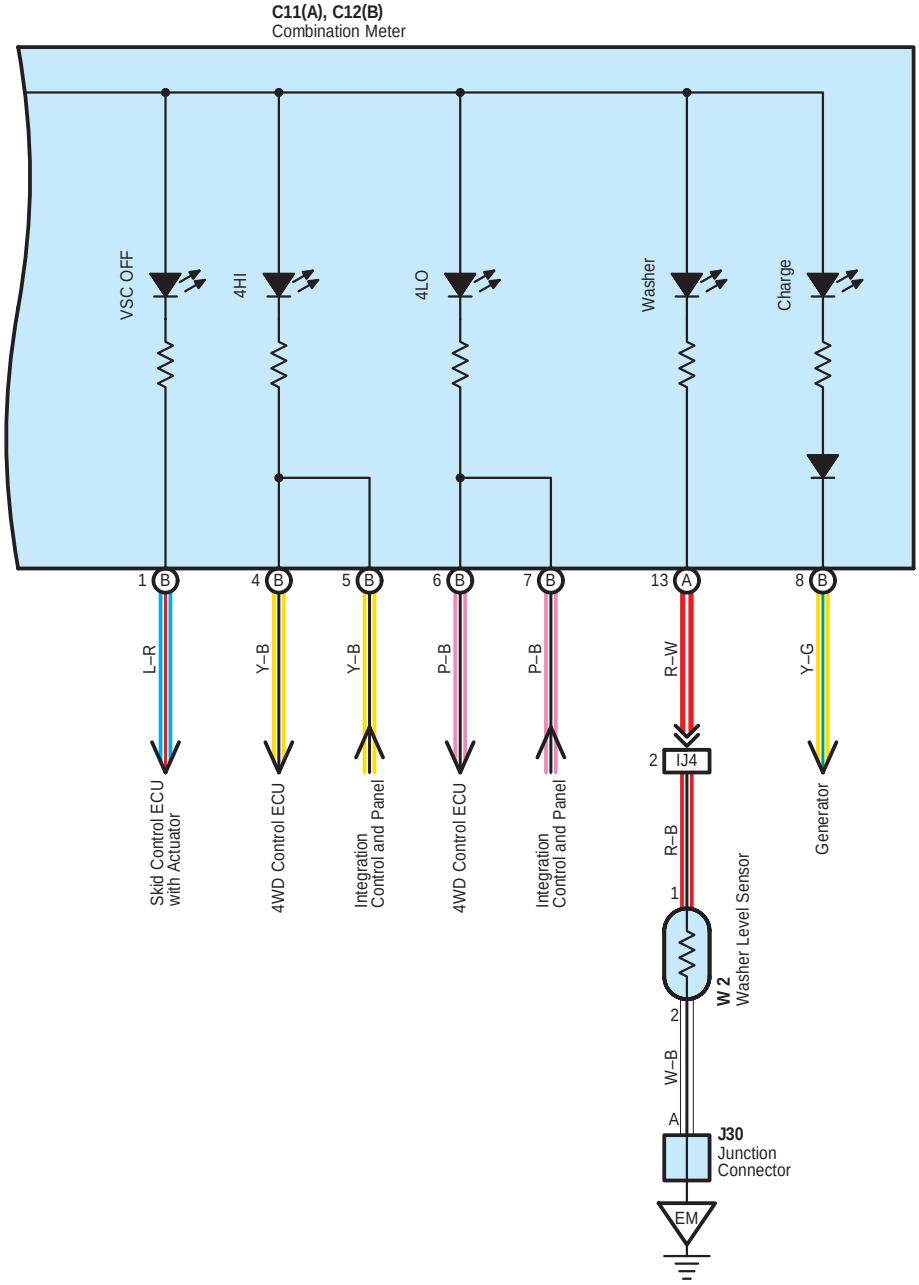

(BAT)
10A
DOME
3 2C
R
5 1J
8 1E
R
6 4A
6 4E
R
23 B
(IG)
10A
IGN1
11 1H
B–O
24 B
C11(A), C12(B)
Combination Meter
E 4(B)
Engine Control
Module
TACH
1 B
I24(A)
Integration Control
and Panel
TACO
14 A
B
C B
J49(A), J50(B)
Junction
Connector
A A
A A
B
23 A
Door
ODO/TRIP
Buzzer
Fuel
SPEED
CONTROL
TEMP
CONTROL
FUEL
CONTROL
TACH
CONTROL
4 A
24 A
22 A
32 A
30 A
29 A
26 A
11 B
L–R
V–W
W–G
Y–R
GR–R
Y–G
V
BR
Body ECU
Skid Control ECU
with Actuator(*1)
ABS Actuator with ECU
(*2)
Rheostat
Engine Control
Module
Door Courtesy SW
(Driver' s Side)
Body ECU
A A
C A
J42(A), J43(B)
Junction
Connector
G B
I B
V
BR
5 BP2
8 BP2
V
BR
2
3
F10
Fuel Sender


* 1 : w/ VSC
* 2 : w/o VSC
4WD Control ECU
G–O
Overhead Module
Engine Control Module
Tire Pressure Monitor ECU
Radio and Player
J55(A), J56(B) Junction Connector
J49(A), J50(B) Junction Connector
Body ECU
Transponder Key Computer
B–O
3C
3B
3A
17
C11(A), C12(B) Combination Meter
Oil Pressure
Security
MAINT REQD
Driver's Seat Belt
Tire Pressure
BRAKE
ABS
SRS
RSCA OFF
OIL PRESS CONTROL
Buzzer
BLINKER
VOLT CONTROL
27
5
20
1
21
16
40
GR
16
IE1
Y–B
1
O 2
Oil Pressure SW
R–G
Buckle SW
P
Tire Pressure Monitor ECU
W–B
(*2)
G–W
(*1)
Skid Control ECU with Actuator
R–W
Skid Control ECU with Actuator (*1) ABS Actuator with ECU (*2)
R
Y
Center Airbag Sensor Assembly
1
3B
2
3A
A
J45
Junction Connector
IO


(BAT)
140A ALT
F13
Fusible Link Block
7. 5A
PANEL
TAILLIGHT
Relay
3
2
5
1
10 1H
1 1L
2
W
G–O
G
Park/Neutral Position SW
L–Y
R–B
LG–B
W–R
L–W
L
25 A
21 A
34 A
35 A
36 A
37 A
38 A
39 A
P
R
N
D
3
2
L
Illumination
C11(A), C12(B)
Combination Meter
2 A
12 B
6 A
19 A
(*5)
Y–B
(*2)
18 IJ4
24 IJ4
J59
Junction Connector
A
Y–B
(*2 *3)
(*2 *4)
LG–R
(*2 *3)
D31
Diode
(Parking Brake SW)
13 3A
3 3C
LG–R
(*2)
1 A
P 5(A)
Parking Brake SW
1 B
2 B
B 2(B)
Brake Fluid Level Warning SW
W–B
(*2)
W–B
6 1D
12 1K
9 1F
A
J45
Junction Connector
IO
LG
(*5)
LG–R
Engine Control Module
Engine Control Module

∗ 2 : w/o VSC
∗ 3 : w/ Daytime Running Light
∗ 4 : w/o Daytime Running Light
∗ 5 : w/ Engine Immobiliser System




C11(A), C12(B)
Combination Meter
VSC OFF
4HI
4LO
Washer
Charge
1 B
4 B
5 B
6 B
7 B
13 A
8 B
L–R
Y–B
Y–B
P–B
P–B
R–W
Y–G
Skid Control ECU with Actuator
4WD Control ECU
Integration Control and Panel
4WD Control ECU
Integration Control and Panel
2 IJ4
Generator
R–B
1
W 2
Washer Level Sensor
2
W–B
A
J30
Junction Connector
EM

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B2 B	70	I24 A	73	J55 A	74
C11 A	72	J30	71	J56 B	74
C12 B	72	J42 A	74	J59	74
D31	73	J43 B	74	O2	71
E4 B	73	J45	74	P5 A	75
F10	76	J49 A	74	W2	71
F13	70	J50 B	74		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E		
1F		
1H		
1J	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1K		
1L		
2C	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	52	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3B		
3C		
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4E		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	93	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IJ4	93	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
BP2	94	Frame Wire and Floor No.2 Wire (Under the Driver's Seat)

: Ground Points

Code	See Page	Ground Points Location
EM	90	Radiator Side Support RH
IO	92	Left Kick Panel