
Back–Up Light (Access/Standard Cab)

∗ 1 : Towing Package
∗ 2 : w/ Navigation System

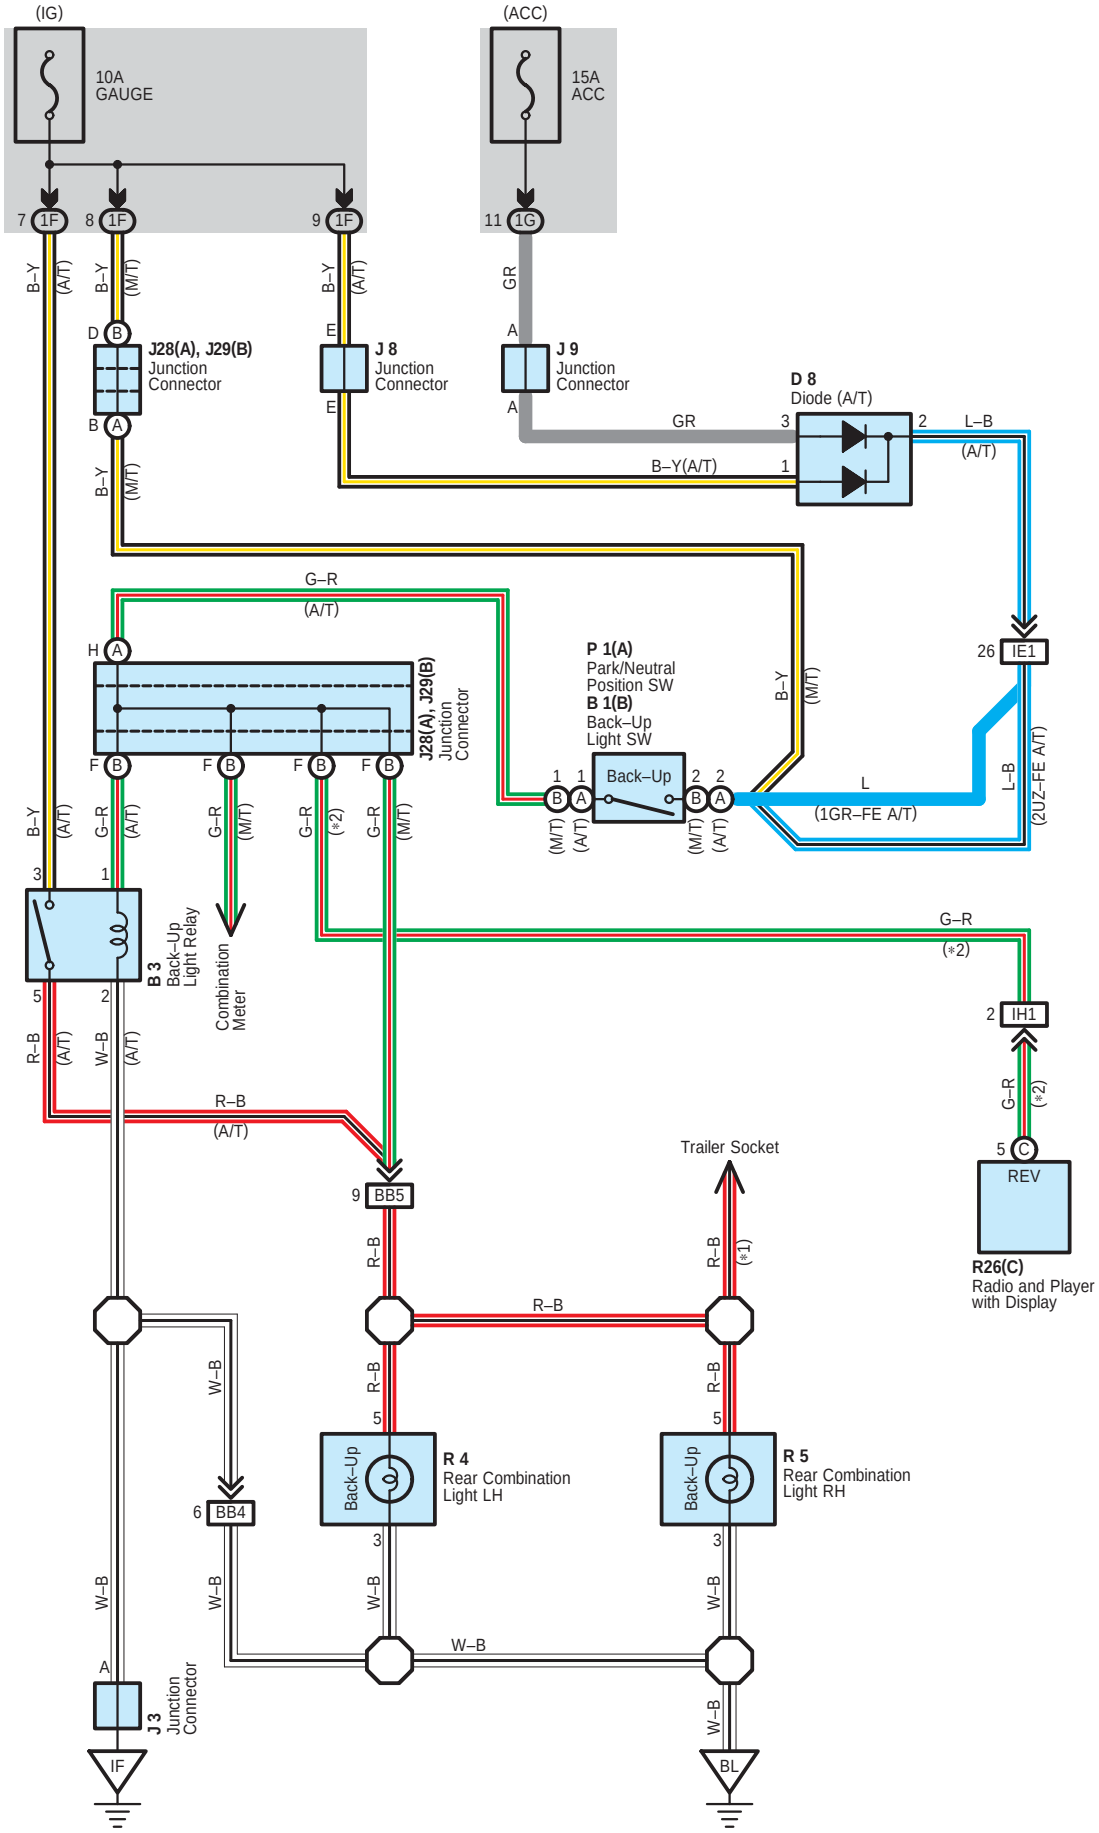

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B1 B	58 (1GR–FE)	J9	62	R4	64 (*3)
B3	60	J28 A	62		65 (*4)
D8	61	J29 B	62	R5	64 (*3)
J3	62	P1 A	57 (2UZ–FE)		65 (*4)
J8	62		59 (1GR–FE)	R26 C	63

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1G	26 (*1)	
	30 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	83	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IH1	83	Cowl Wire and Floor No.3 Wire (Instrument Panel Brace RH)
BB4	84 (*3)	Frame Wire and Cowl Wire (Under the Driver's Seat)
	85 (*4)	
BB5	84 (*3)	
	85 (*4)	

: Ground Points

Code	See Page	Ground Points Location
IF	82	Left Kick Panel
BL	84 (*3)	Surrounding of the Front of the Fuel Tank
	85 (*4)	

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat