
Turn Signal and Hazard Warning Light (Access/Standard Cab)

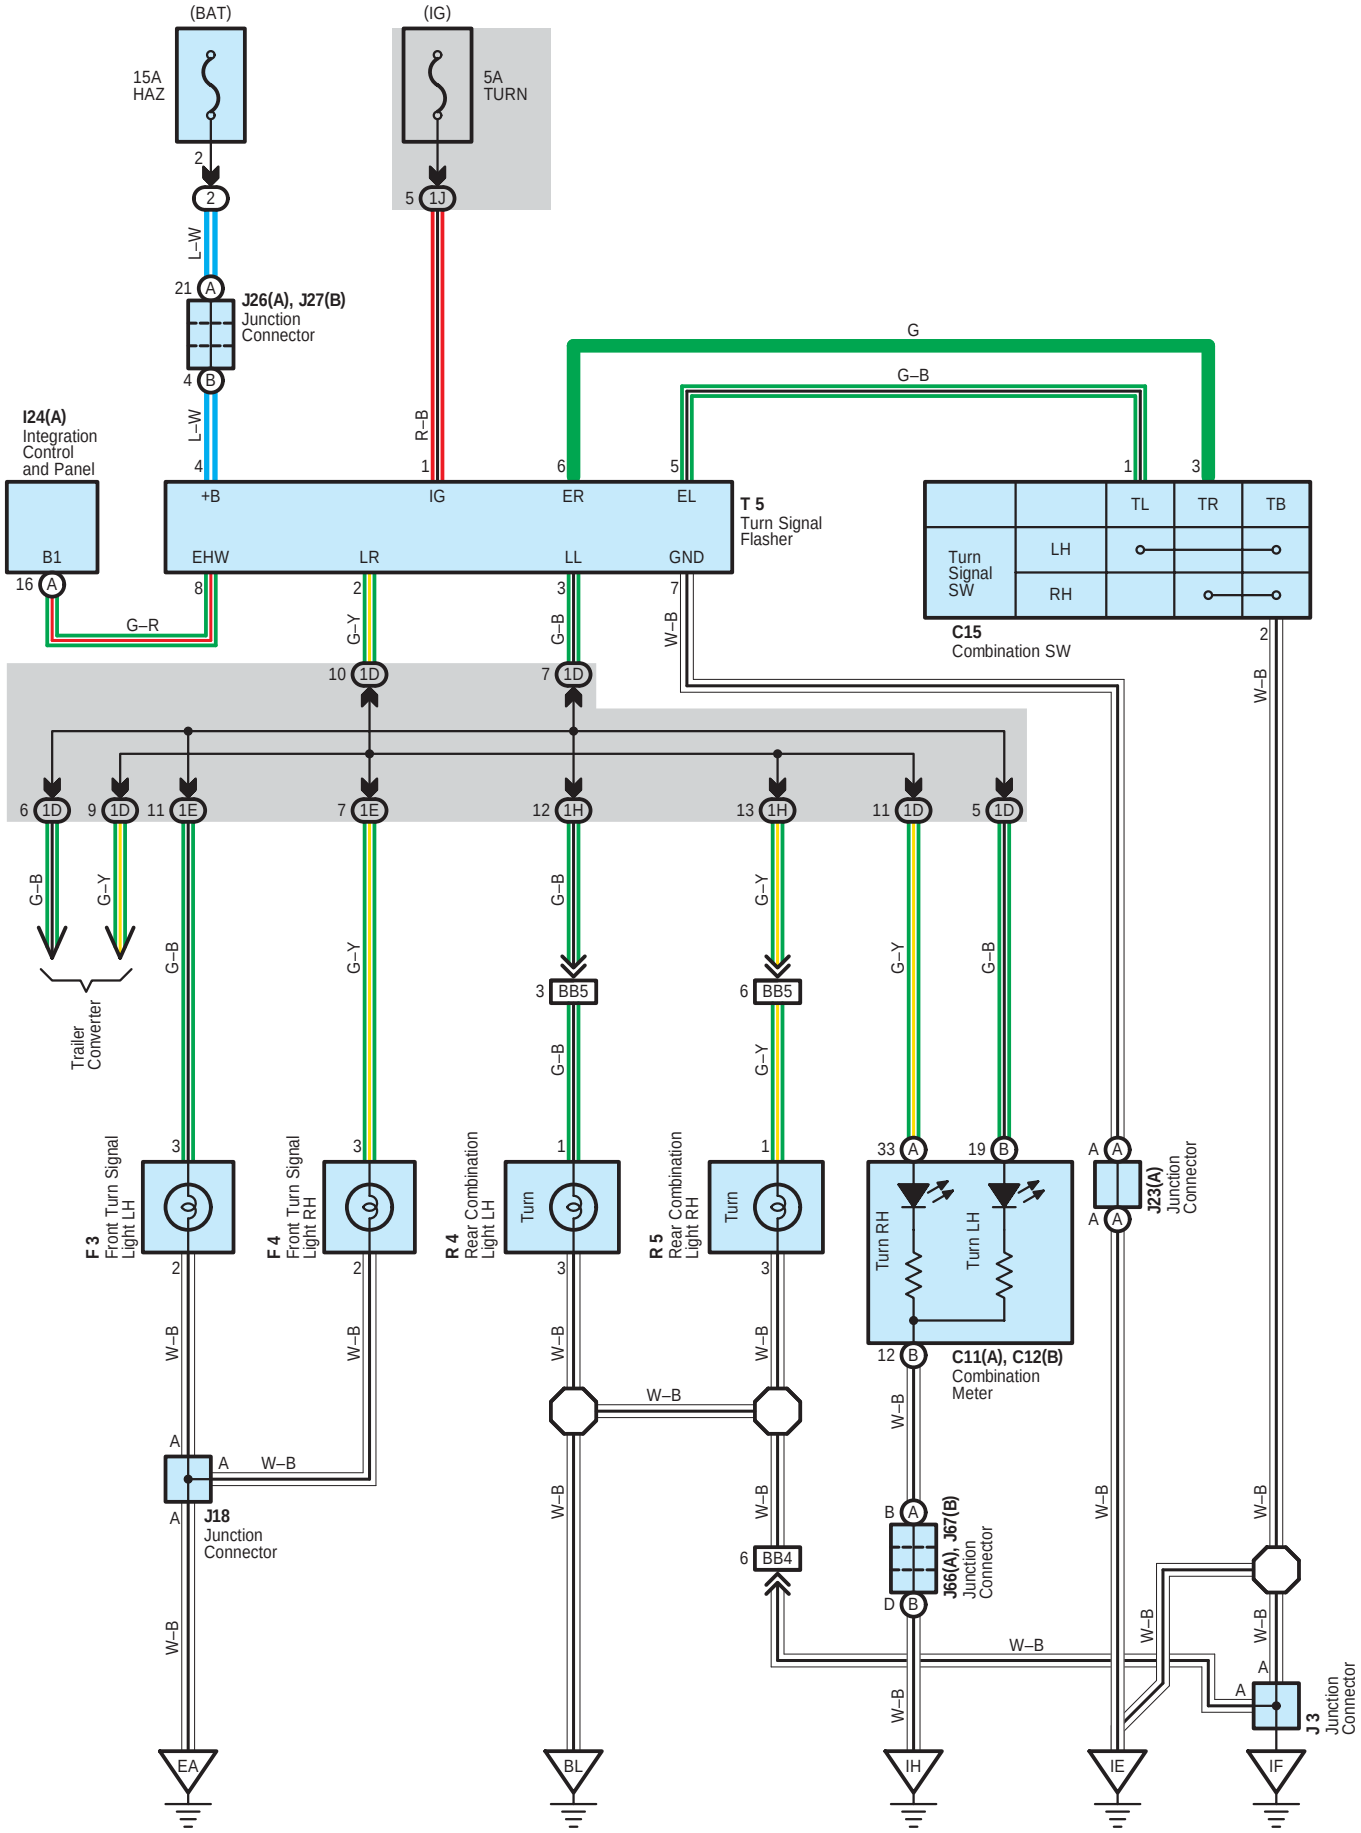

: Parts Location

Code		See Page	Code		See Page	Code		See Page
C11	A	60	I24	A	61	J66	A	62
C12	B	60	J3		62	J67	B	62
C15		60	J18		57 (2UZ–FE)	R4		64 (*3)
F3		56 (2UZ–FE)			59 (1GR–FE)			65 (*4)
		58 (1GR–FE)	J23	A	62	R5		64 (*3)
F4		56 (2UZ–FE)	J26	A	62			65 (*4)
		58 (1GR–FE)	J27	B	62	T5		63

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1E	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1H	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1J	26 (*1)	
	30 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BB4	84 (*3)	Frame Wire and Cowl Wire (Under the Driver's Seat)
	85 (*4)	
BB5	84 (*3)	
	85 (*4)	

: Ground Points

Code	See Page	Ground Points Location
EA	80 (2UZ–FE)	Front Left Fender
	81 (1GR–FE)	
IE	82	Left Kick Panel
IF		
IH	82	Right Kick Panel
BL	84 (*3)	Surrounding of the Front of the Fuel Tank
	85 (*4)	

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat