
Stop Light (Access/Standard Cab)

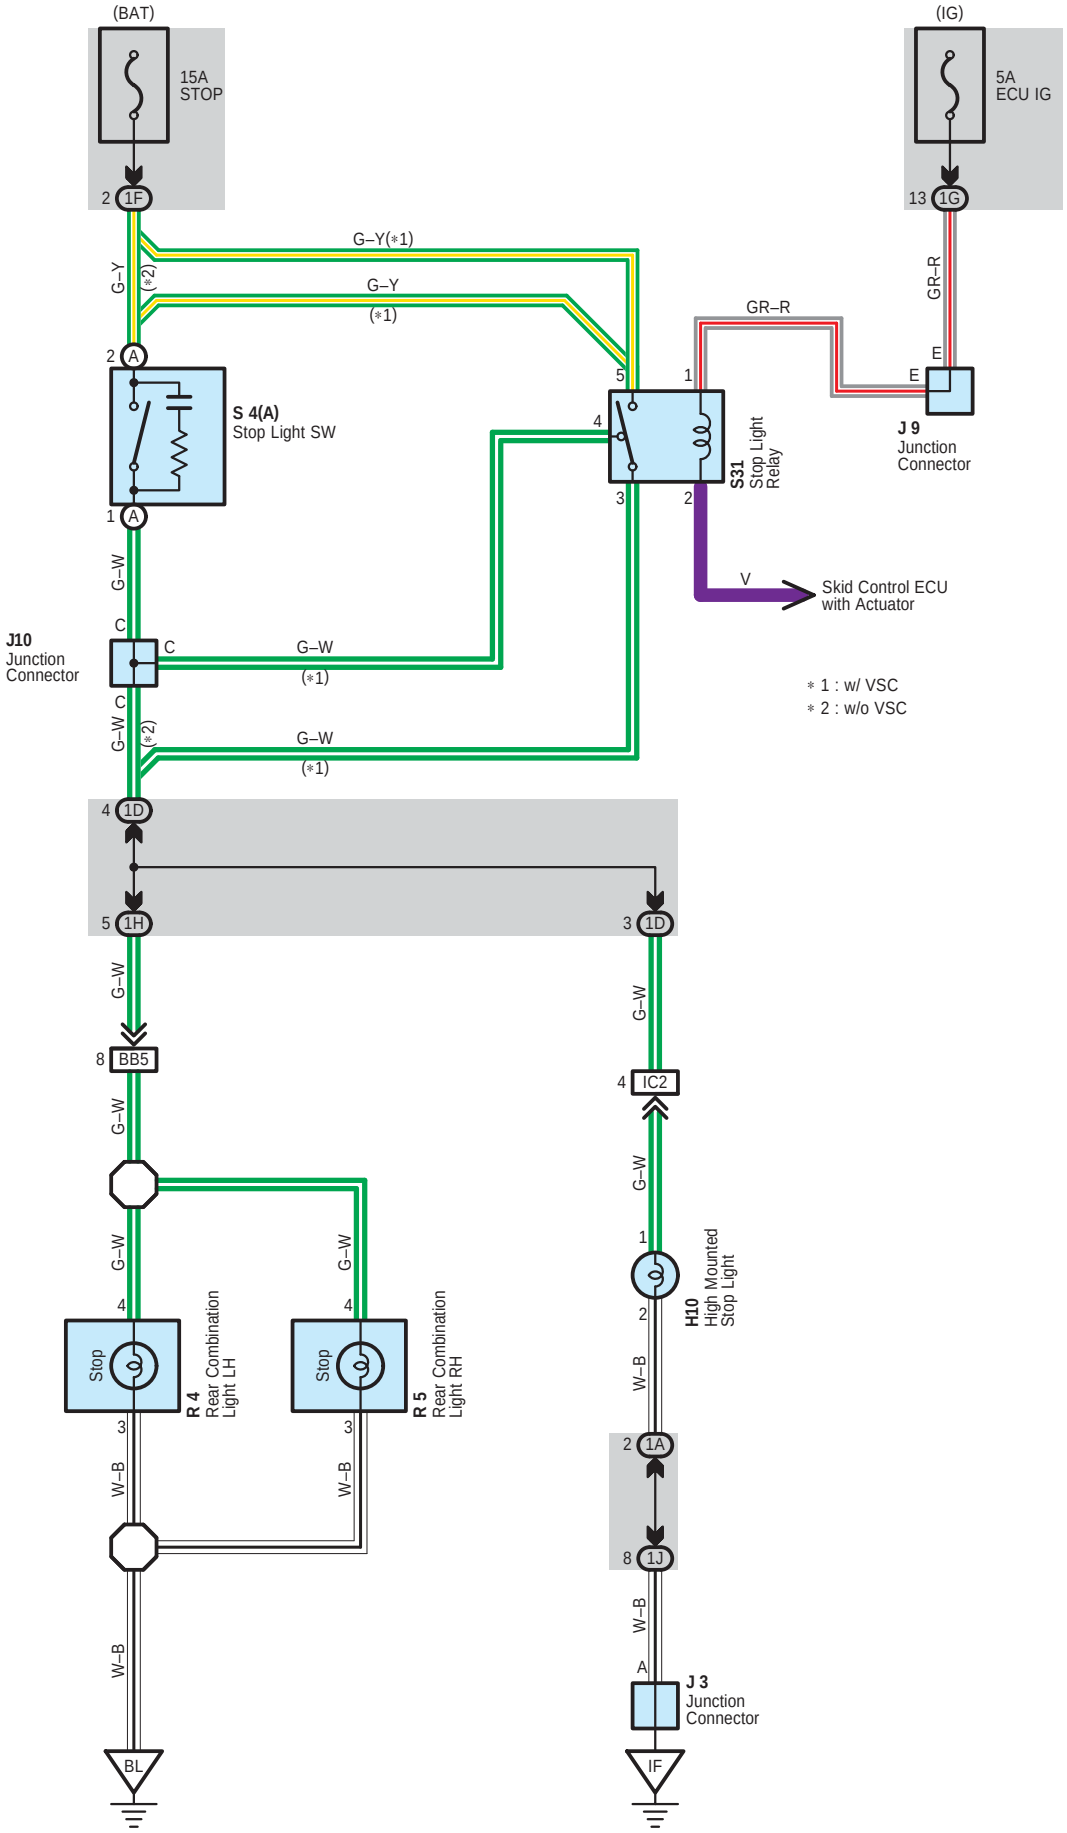

: Parts Location

Code	See Page	Code	See Page	Code	See Page
H10	64 (*3)	J10	62	R5	65 (*4)
	65 (*4)	R4	64 (*3)	S4 A	63
J3	62		65 (*4)	S31	63
J9	62	R5	64 (*3)		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	26 (*1)	Roof Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1D	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1F	26 (*1)	
	30 (*2)	
1G	26 (*1)	
	30 (*2)	
1H	26 (*1)	
	30 (*2)	
1J	26 (*1)	
	30 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	82	Cowl Wire and Roof Wire (Left Side of Instrument Panel)
BB5	84 (*3)	Frame Wire and Cowl Wire (Under the Driver's Seat)
	85 (*4)	

: Ground Points

Code	See Page	Ground Points Location
IF	82	Left Kick Panel
BL	84 (*3)	Surrounding of the Front of the Fuel Tank
	85 (*4)	

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat