
Cargo Light (Access/Standard Cab)

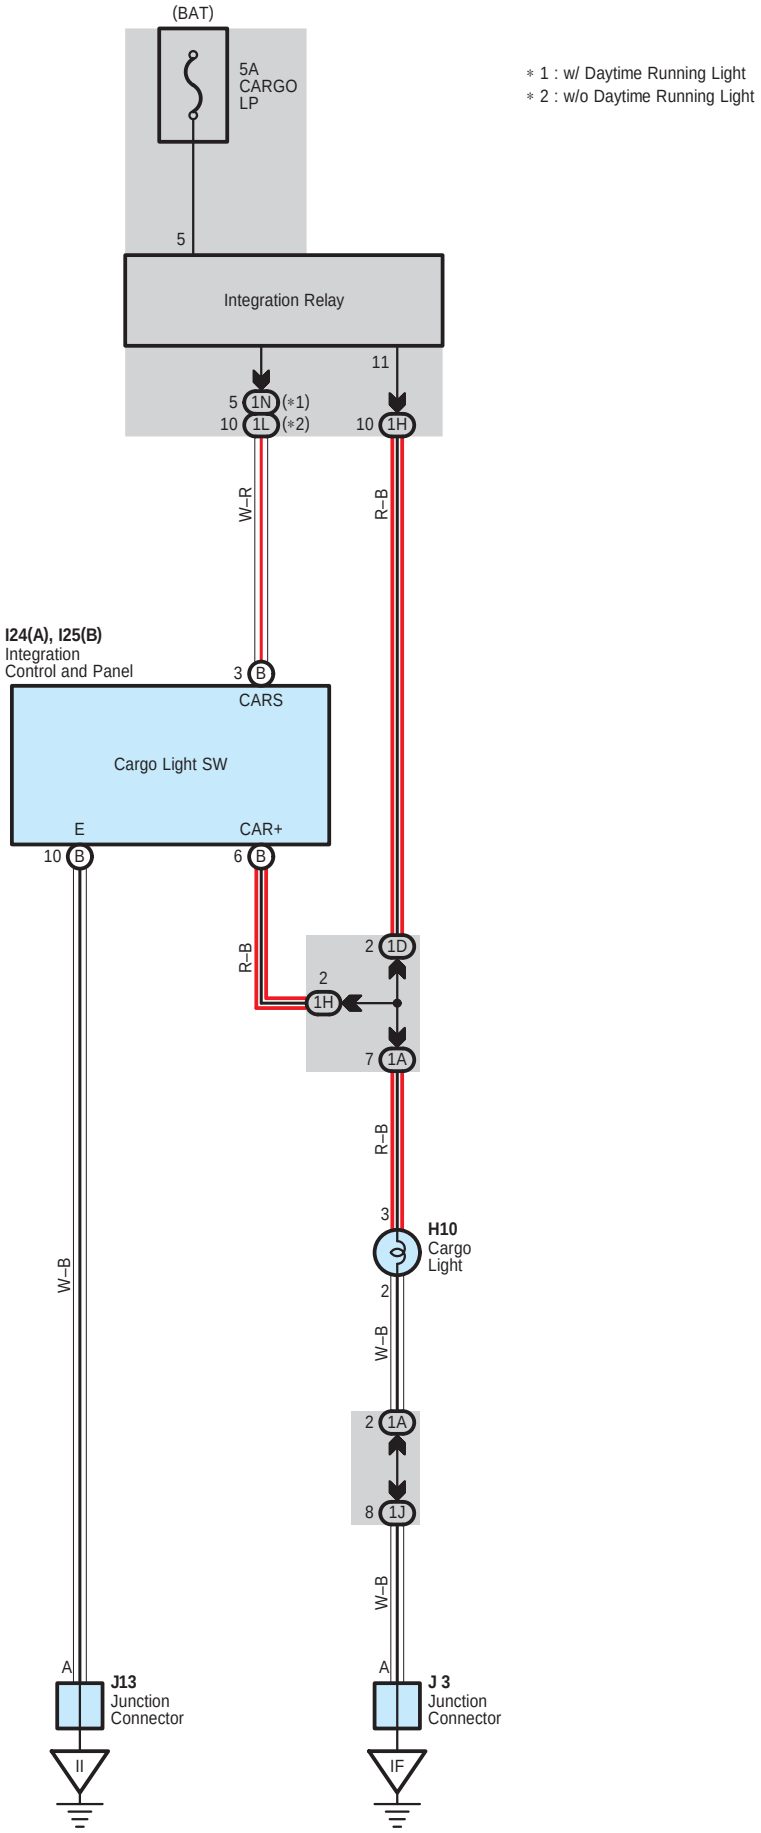

○ : Parts Location

Code	See Page	Code		See Page	Code	See Page
H10	64 (*3)	I24	A	61	J3	62
	65 (*4)	I25	B	61	J13	62

⬭ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	26 (*1)	Roof Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1D	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1H	26 (*1)	
	30 (*2)	
1J	26 (*1)	
	30 (*2)	
1L	27 (*1)	
1N	31 (*2)	

▽ : Ground Points

Code	See Page	Ground Points Location
IF	82	Left Kick Panel
II	82	Right Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat