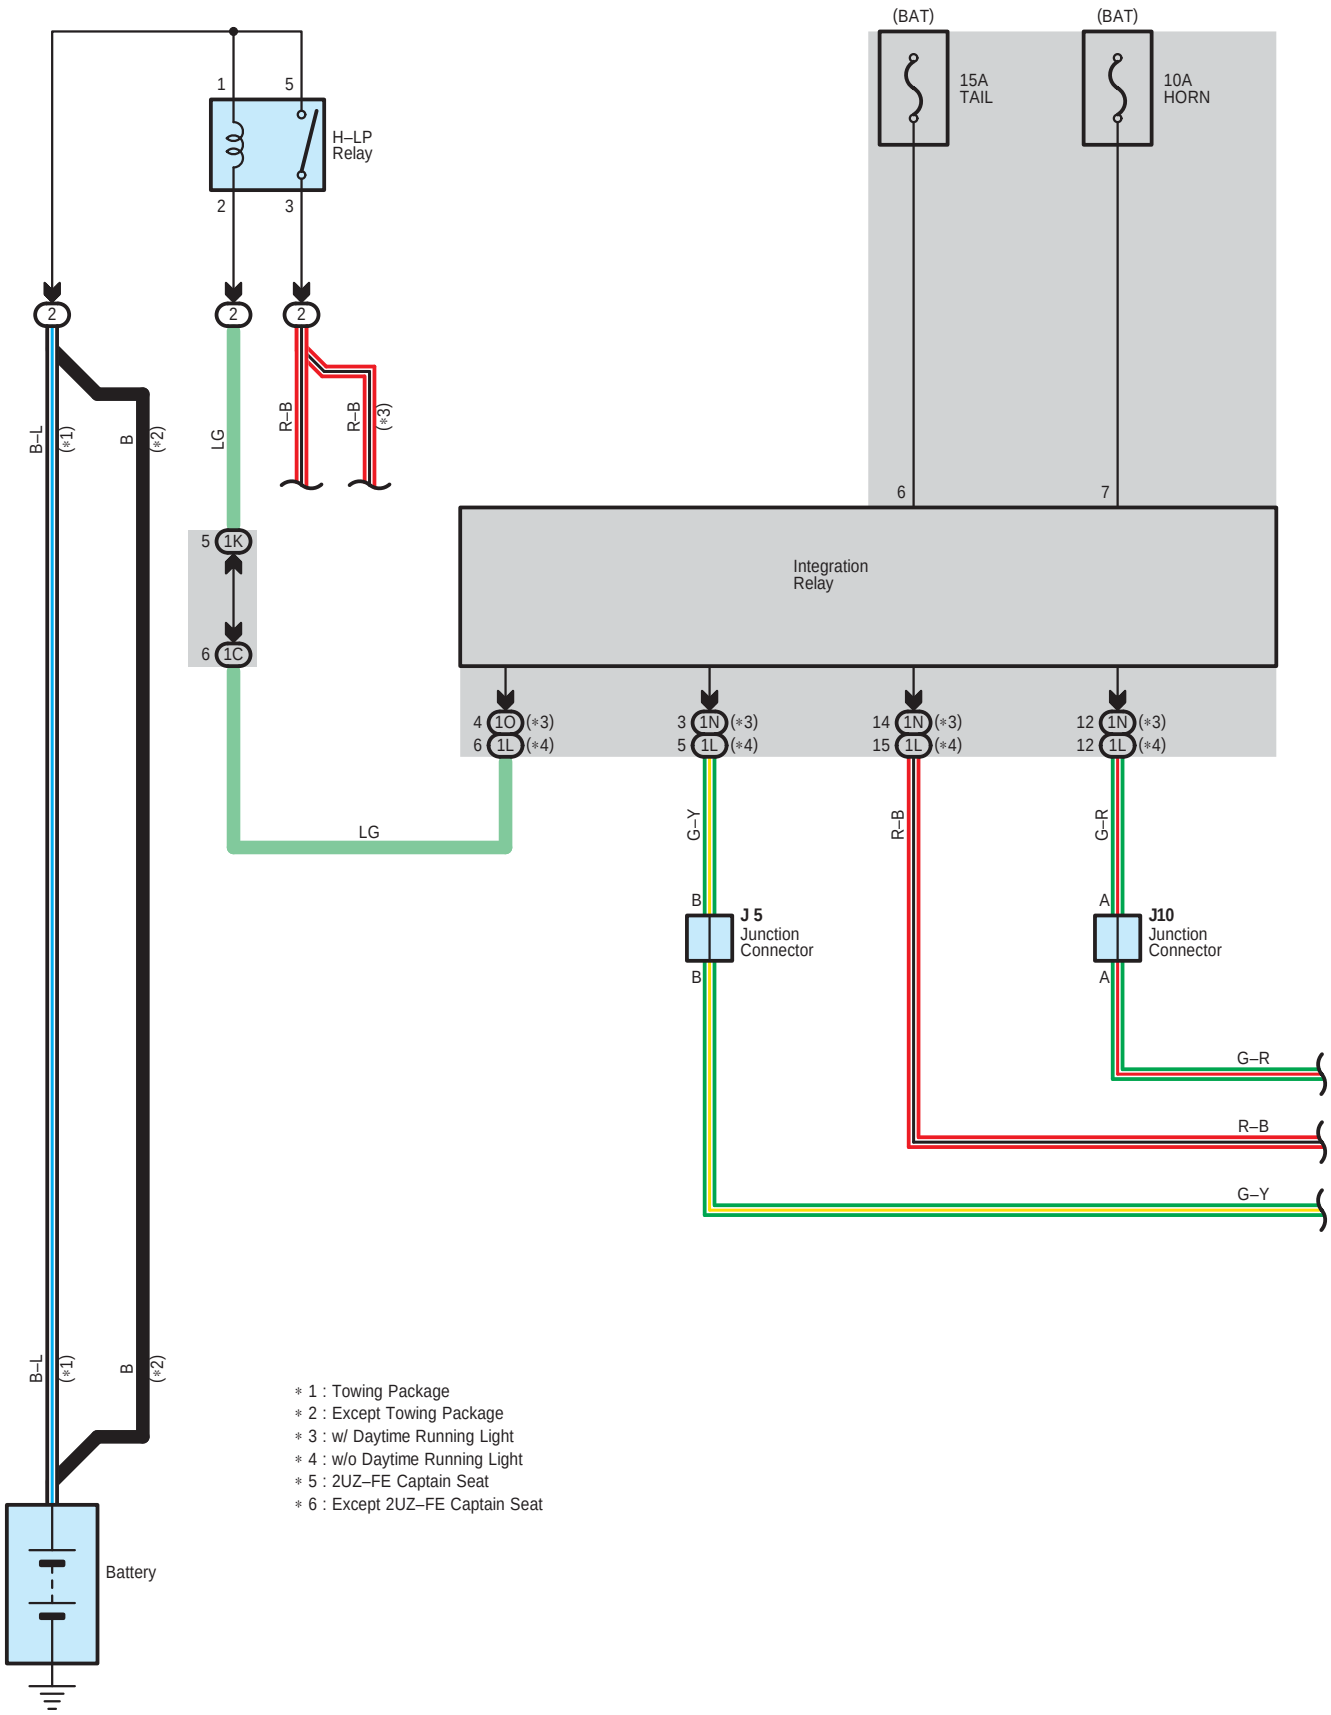
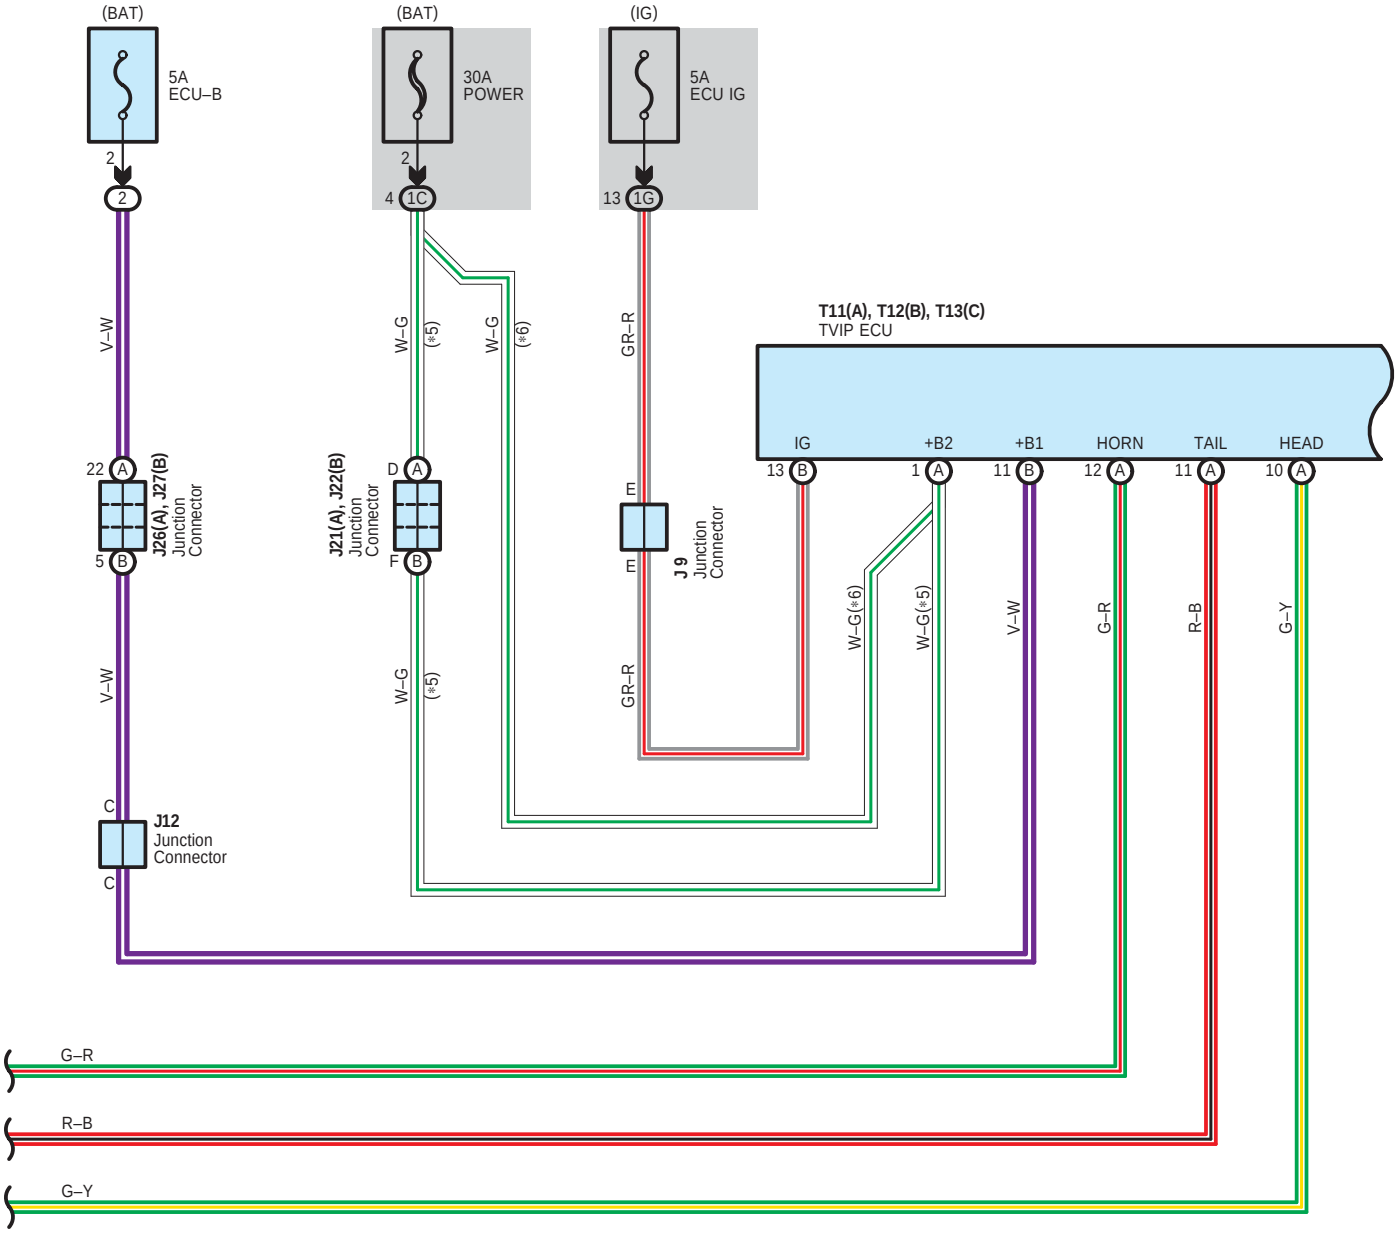
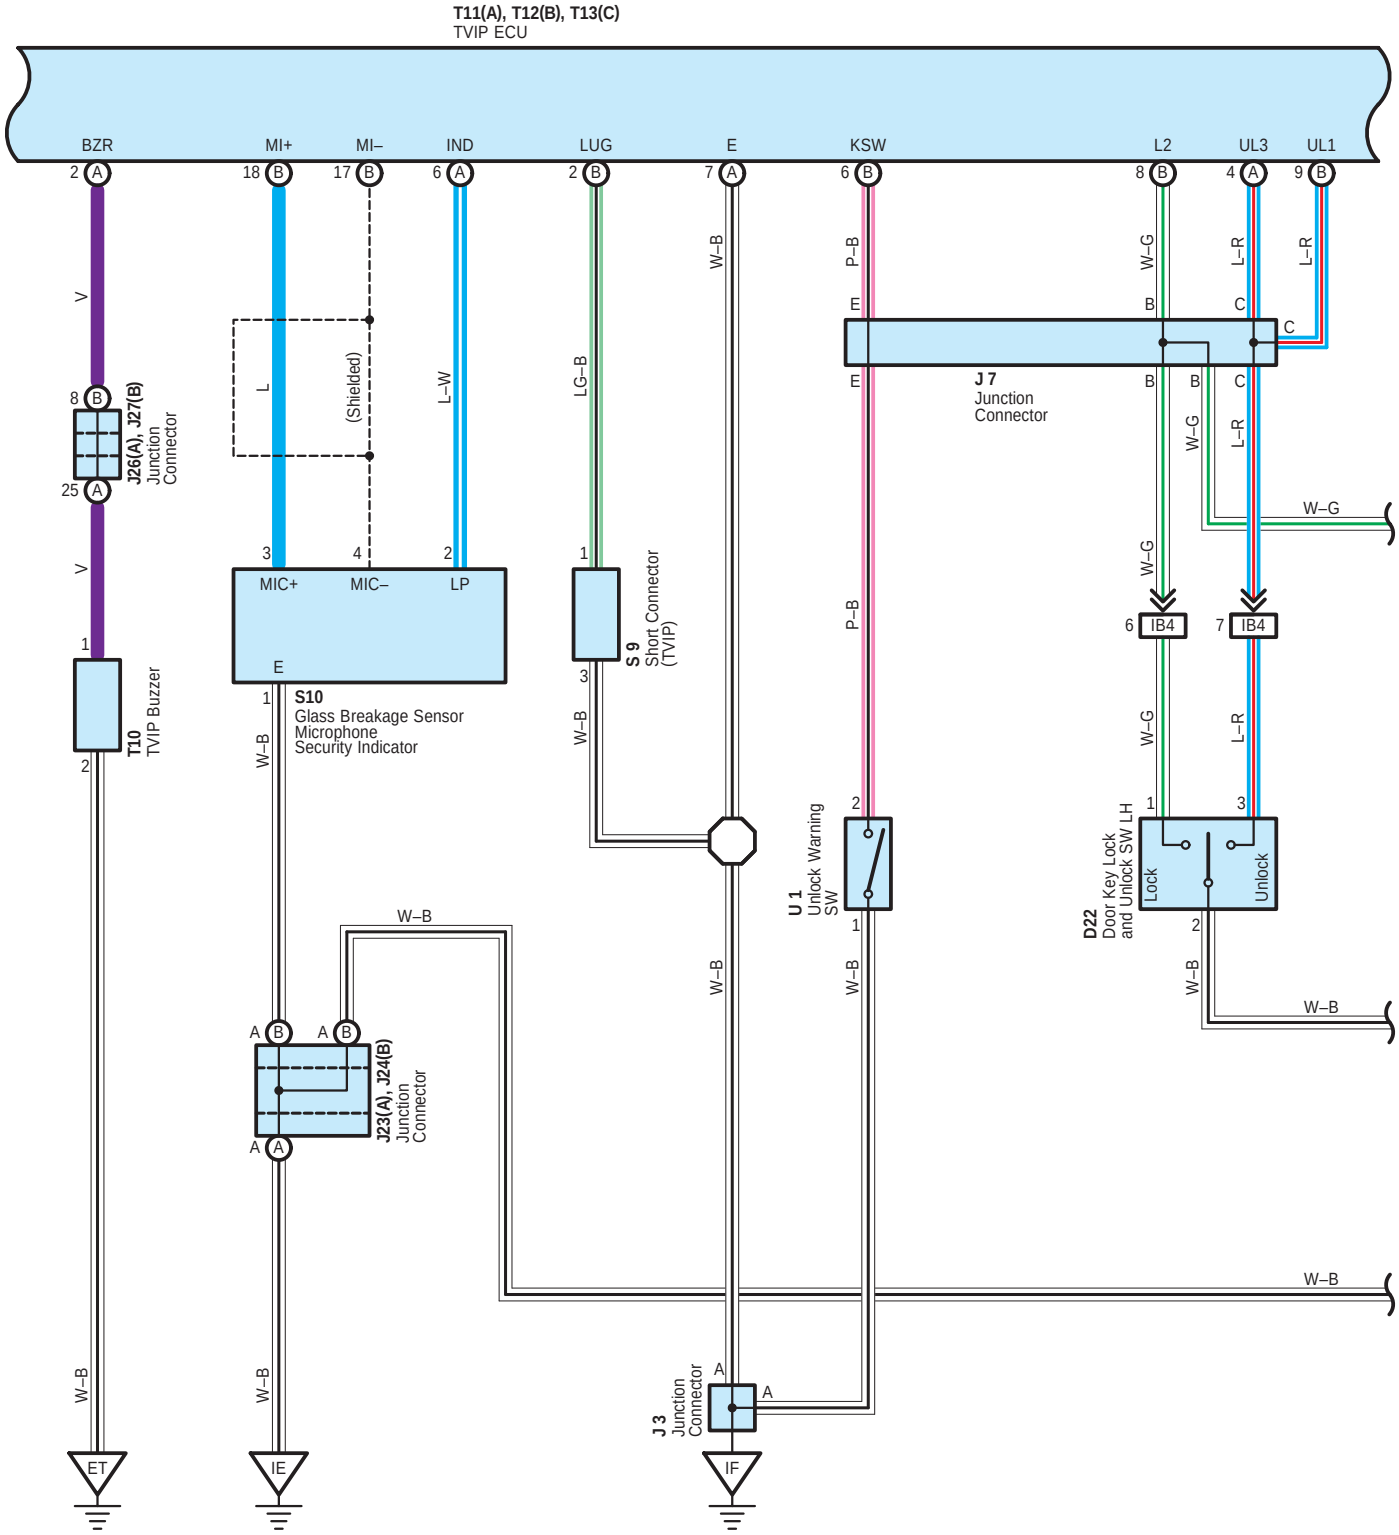
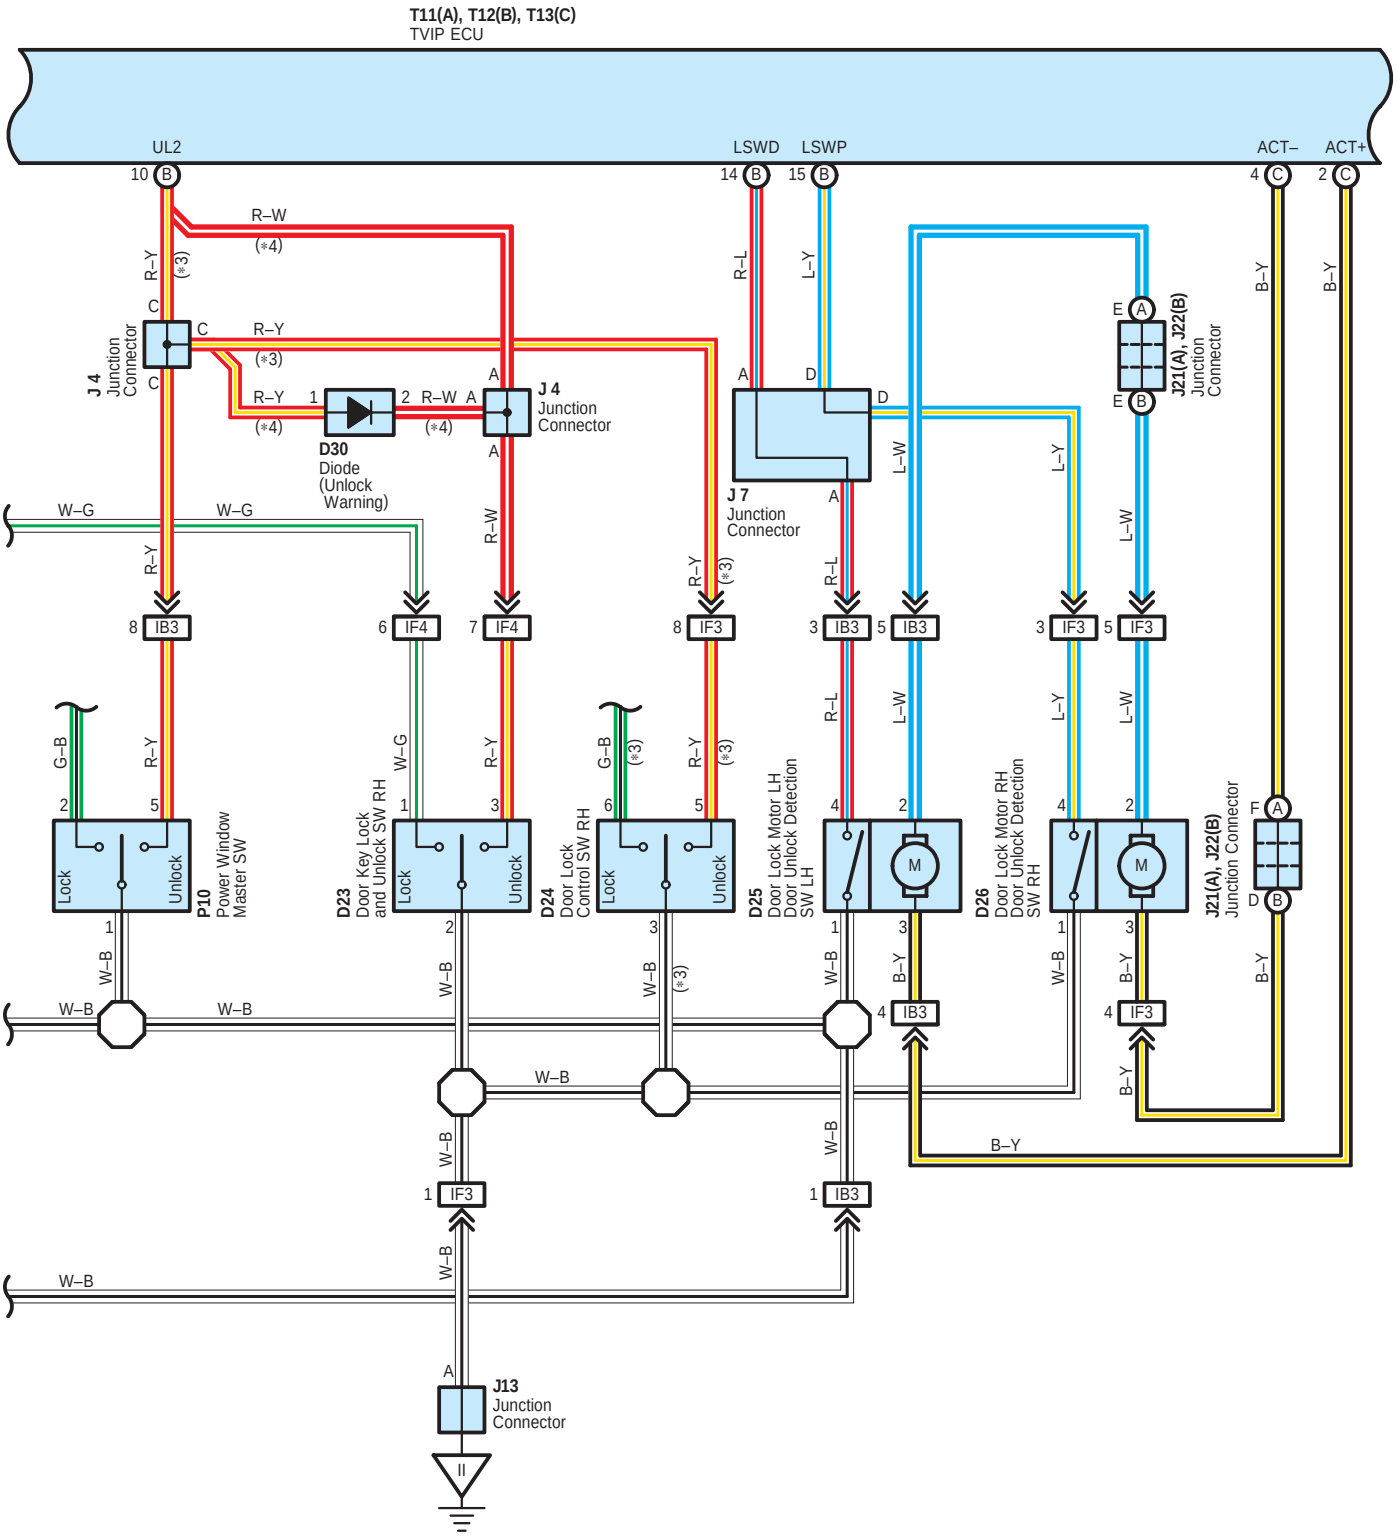

(BAT)
(BAT)
15A
TAIL
10A
HORN
1
5
H–LP
Relay
2
3
6
7
Integration
Relay
B–L
(*1)
B
(*2)
LG
R–B
R–B
(*3)
5 1K
6 1C
4 1O (*3)
6 1L (*4)
3 1N (*3)
5 1L (*4)
14 1N (*3)
15 1L (*4)
12 1N (*3)
12 1L (*4)
LG
G–Y
R–B
G–R
B
J 5
Junction
Connector
B
A
J10
Junction
Connector
A
G–R
R–B
G–Y
Battery
* 1 : Towing Package
* 2 : Except Towing Package
* 3 : w/ Daytime Running Light
* 4 : w/o Daytime Running Light
* 5 : 2UZ–FE Captain Seat
* 6 : Except 2UZ–FE Captain Seat

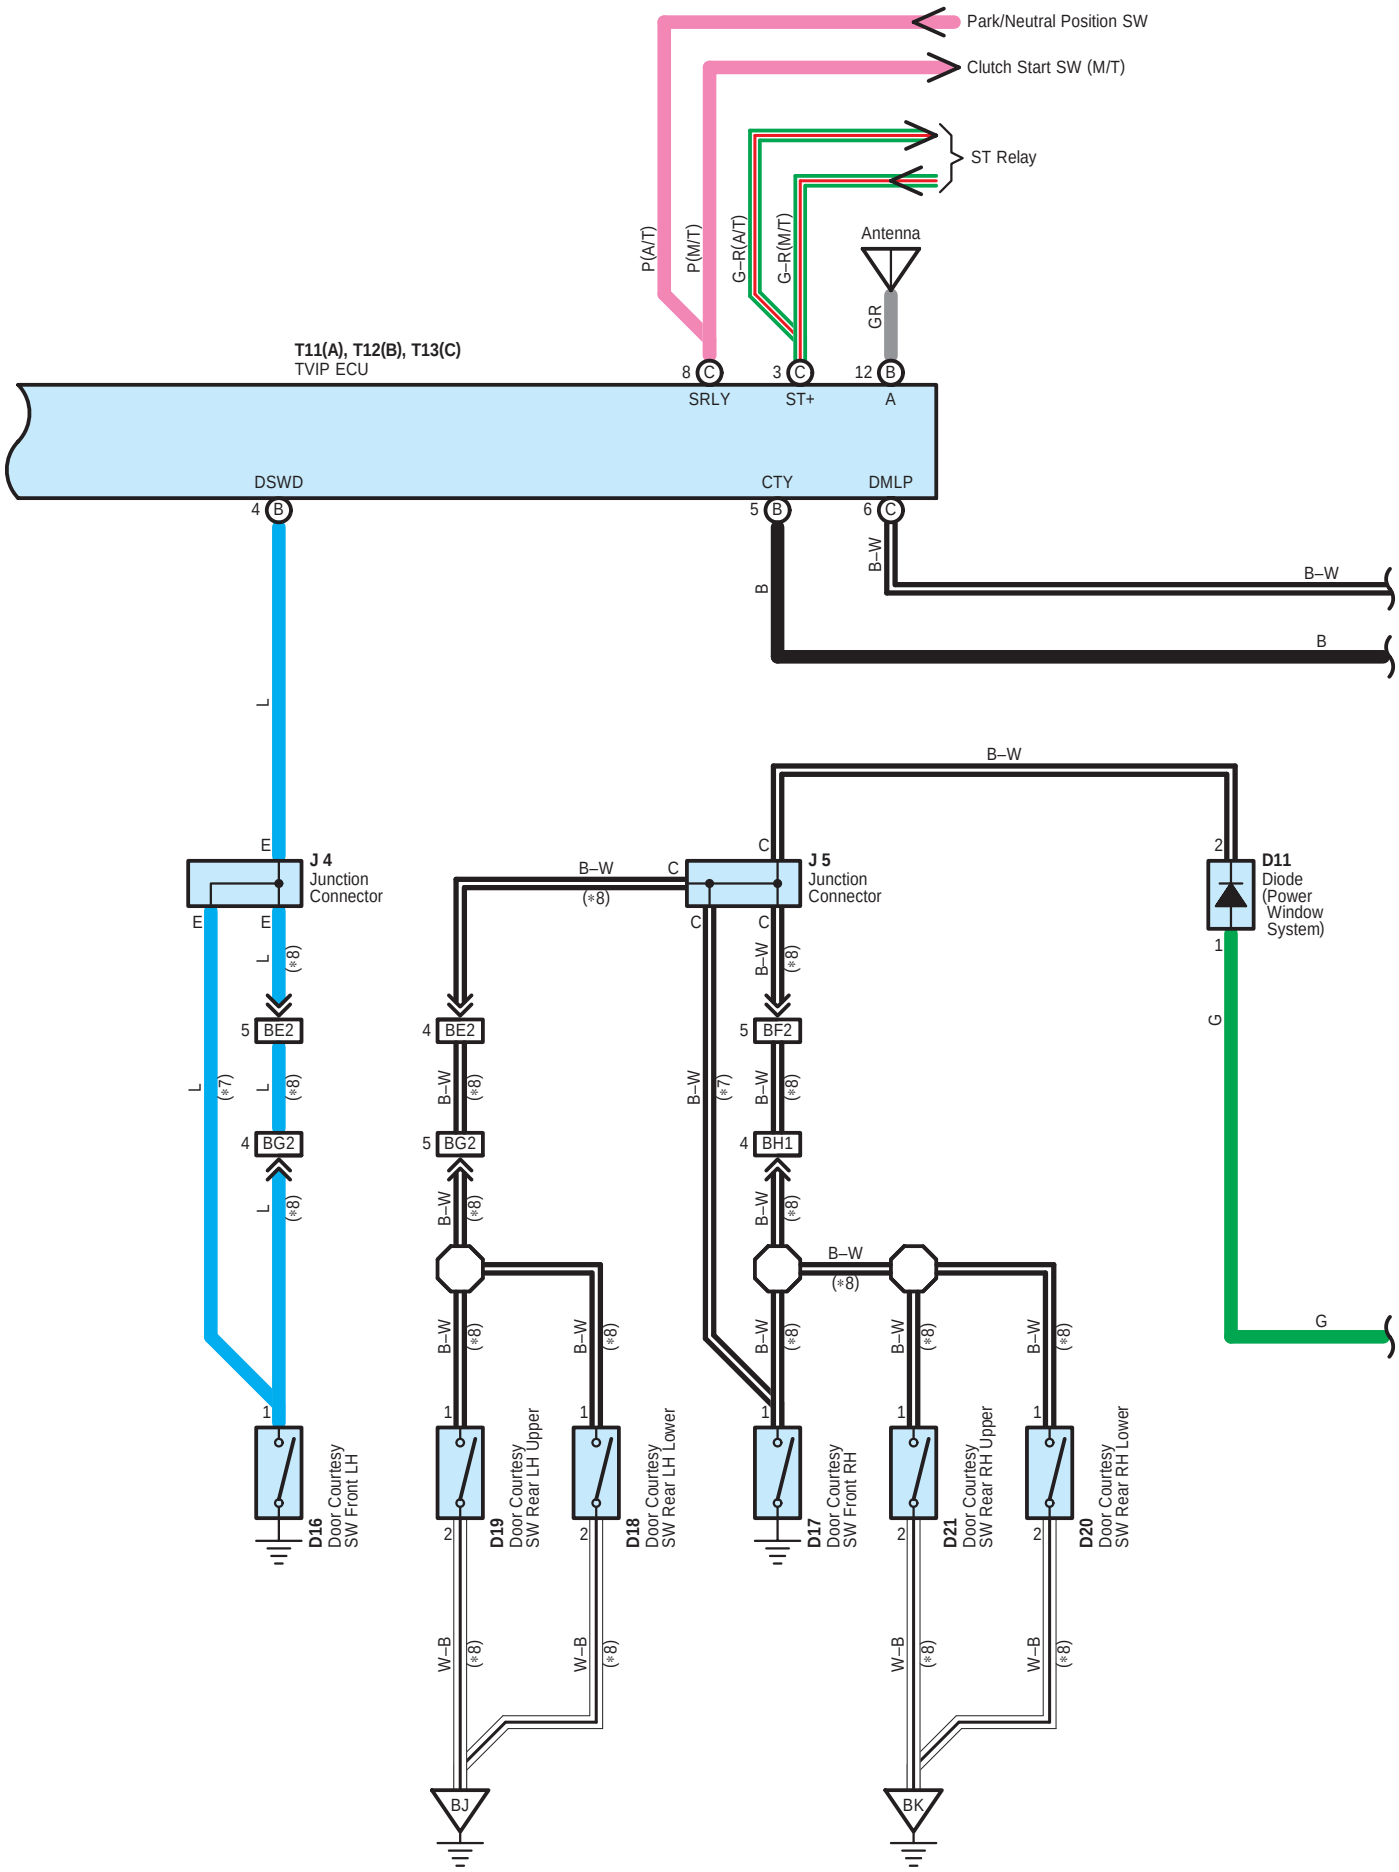

(BAT)
5A
ECU–B
2
2
V–W
22
A
J26(A), J27(B)
Junction
Connector
5
B
V–W
C
J12
Junction
Connector
C
(BAT)
30A
POWER
2
4
1C
W–G
(*5)
W–G
(*6)
D
A
J21(A), J22(B)
Junction
Connector
F
B
W–G
(*5)
(IG)
5A
ECU IG
13
1G
GR–R
E
E
J9
Junction
Connector
GR–R
T11(A), T12(B), T13(C)
TVIP ECU
IG
13
B
+B2
1
A
+B1
11
B
HORN
12
A
TAIL
11
A
HEAD
10
A
W–G(*6)
W–G(*5)
V–W
G–R
R–B
G–Y
G–R
R–B
G–Y


T11(A), T12(B), T13(C)
TVIP ECU
BZR
MI+
MI–
IND
LUG
E
KSW
L2
UL3
UL1
J26(A), J27(B) Junction Connector
T10 TVIP Buzzer
S10 Glass Breakage Sensor Microphone Security Indicator
MIC+
MIC–
LP
S 9 Short Connector (TVIP)
J 7 Junction Connector
U 1 Unlock Warning SW
D22 Door Key Lock and Unlock SW LH
Lock
Unlock
IB4
J23(A), J24(B) Junction Connector
J 3 Junction Connector
(Shielded)
ET
IE
IF

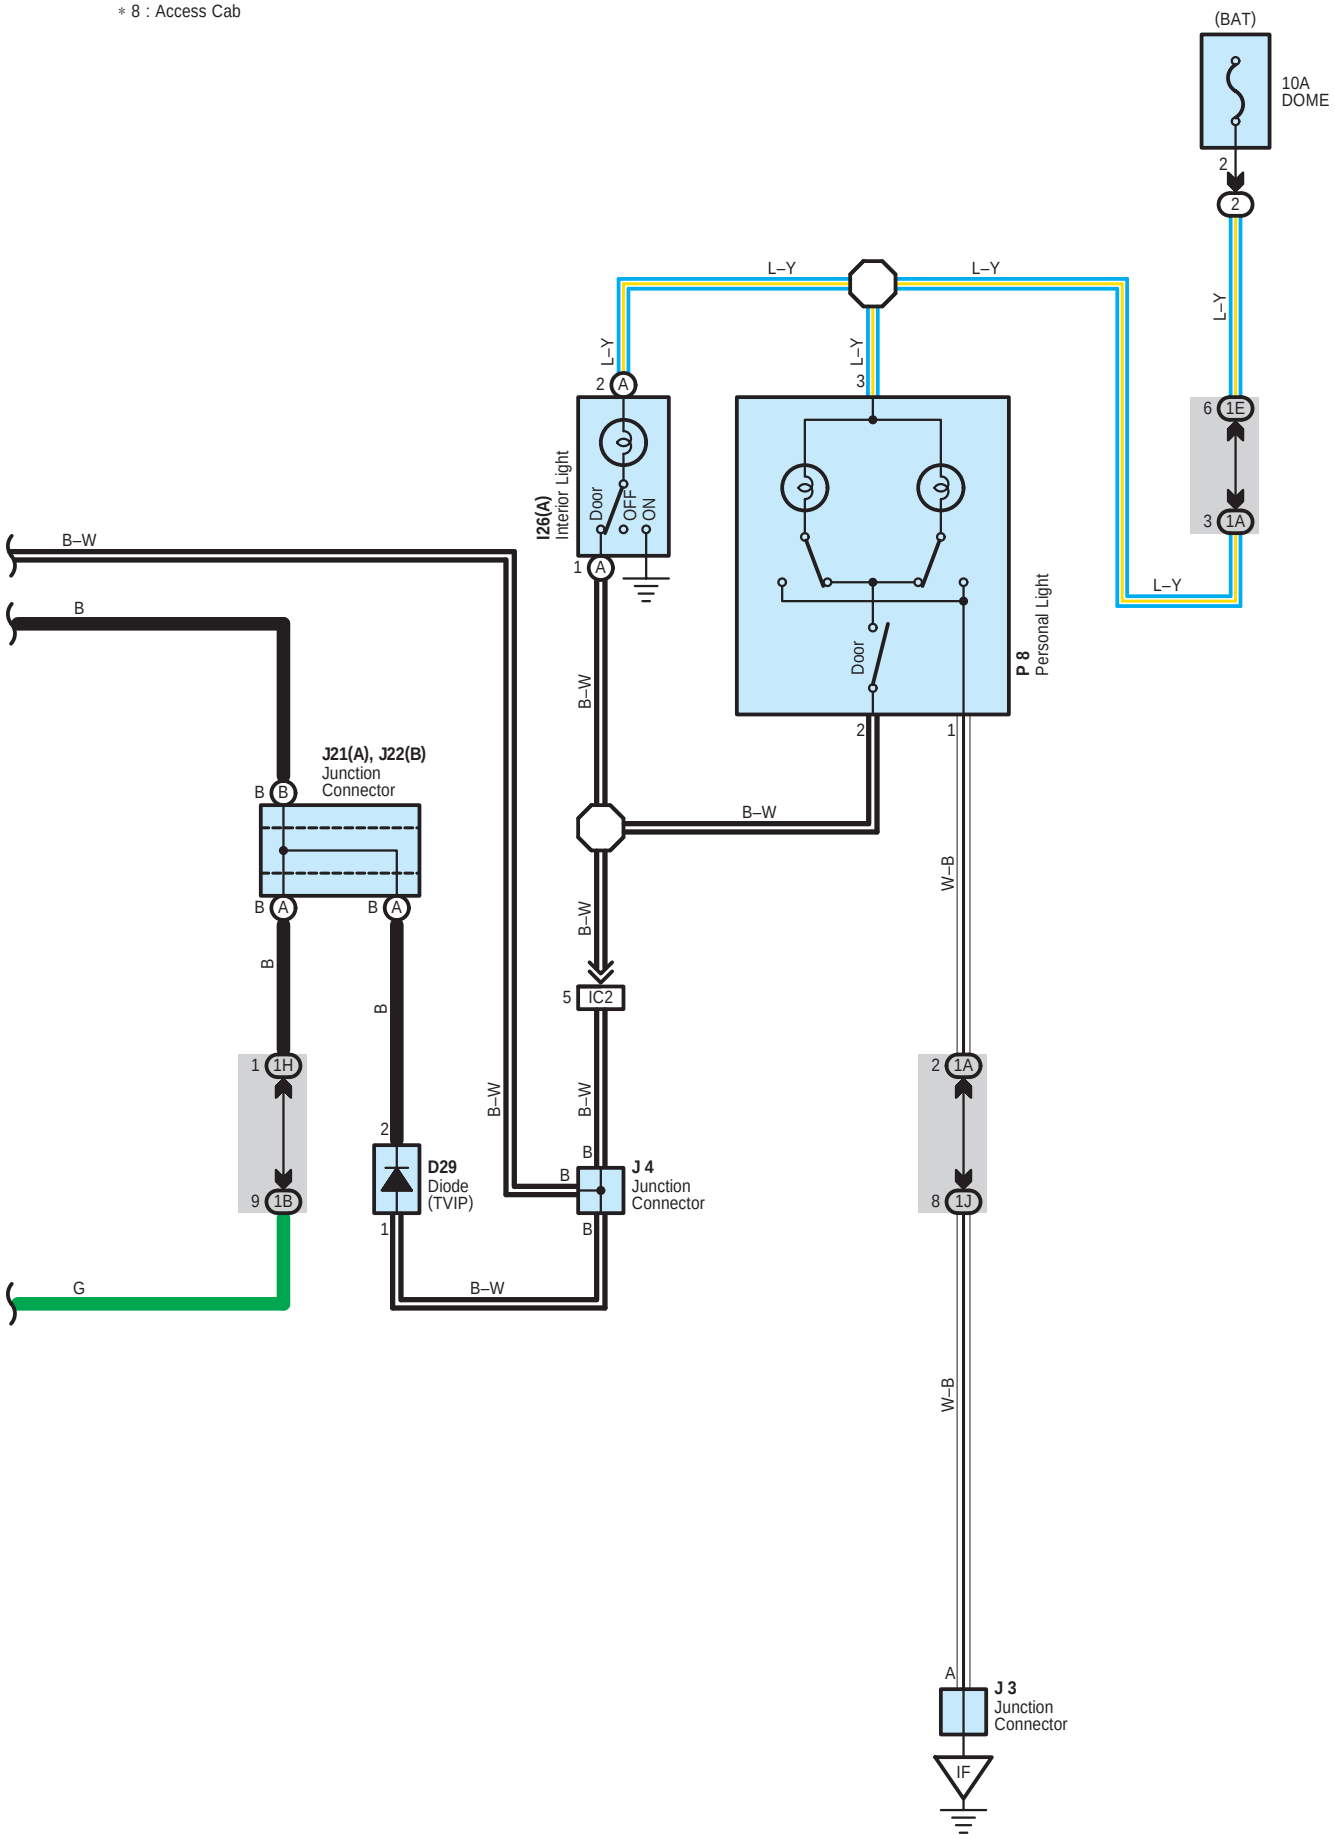
∗ 3 : w/ Daytime Running Light
∗ 4 : w/o Daytime Running Light



TVIP and Wireless Door Lock Control (Access/Standard Cab)



* 7 : Standard Cab
* 8 : Access Cab



TVIP and Wireless Door Lock Control (Access/Standard Cab)

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D11	61	D26	64 (*3)	J24 B	62
D16	64 (*3)		65 (*4)	J26 A	62
	65 (*4)	D29	61	J27 B	62
D17	64 (*3)	D30	61	P8	64 (*3)
	65 (*4)	I26 A	64 (*3)		65 (*4)
D18	64 (*3)		65 (*4)	P10	64 (*3)
D19	64 (*3)	J3	62		65 (*4)
D20	64 (*3)	J4	62	S9	63
D21	64 (*3)	J5	62	S10	63
D22	64 (*3)	J7	62	T10	57 (2UZ–FE)
	65 (*4)	J9	62		59 (1GR–FE)
D23	64 (*3)	J10	62	T11 A	63
	65 (*4)	J12	62	T12 B	63
D24	64 (*3)	J13	62	T13 C	63
	65 (*4)	J21 A	62	U1	63
D25	64 (*3)	J22 B	62		
	65 (*4)	J23 A	62		

▭ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

▭ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	26 (*1)	Roof Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1B	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1C	26 (*1)	
	30 (*2)	
1E	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1G	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1H	26 (*1)	
	30 (*2)	
1J	26 (*1)	
	30 (*2)	
1K	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1L	27 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1N	31 (*2)	
1O		

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB3	82	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB4		
IC2	82	Cowl Wire and Roof Wire (Left Side of Instrument Panel)
IF3	83	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IF4		
BE2	84 (*3)	Floor No.2 Wire and Cowl Wire (Center of Left Rocker Panel)
BF2	84 (*3)	Floor No.1 Wire and Cowl Wire (Center of Right Rocker Panel)
BG2	84 (*3)	Floor No.2 Wire and Rear Door No.2 Wire (Under the Left Quarter Panel)
BH1	84 (*3)	Floor No.1 Wire and Rear Door No.1 Wire (Under the Right Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
ET	80 (2UZ–FE)	Front Right Fender
	81 (1GR–FE)	
IE	82	Left Kick Panel
IF		
II	82	Right Kick Panel
BJ	84 (*3)	Inside of Rear Door LH
BK	84 (*3)	Inside of Rear Door RH

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat