
Cigaratte Lighter and Power Outlet (Access/Standard Cab)

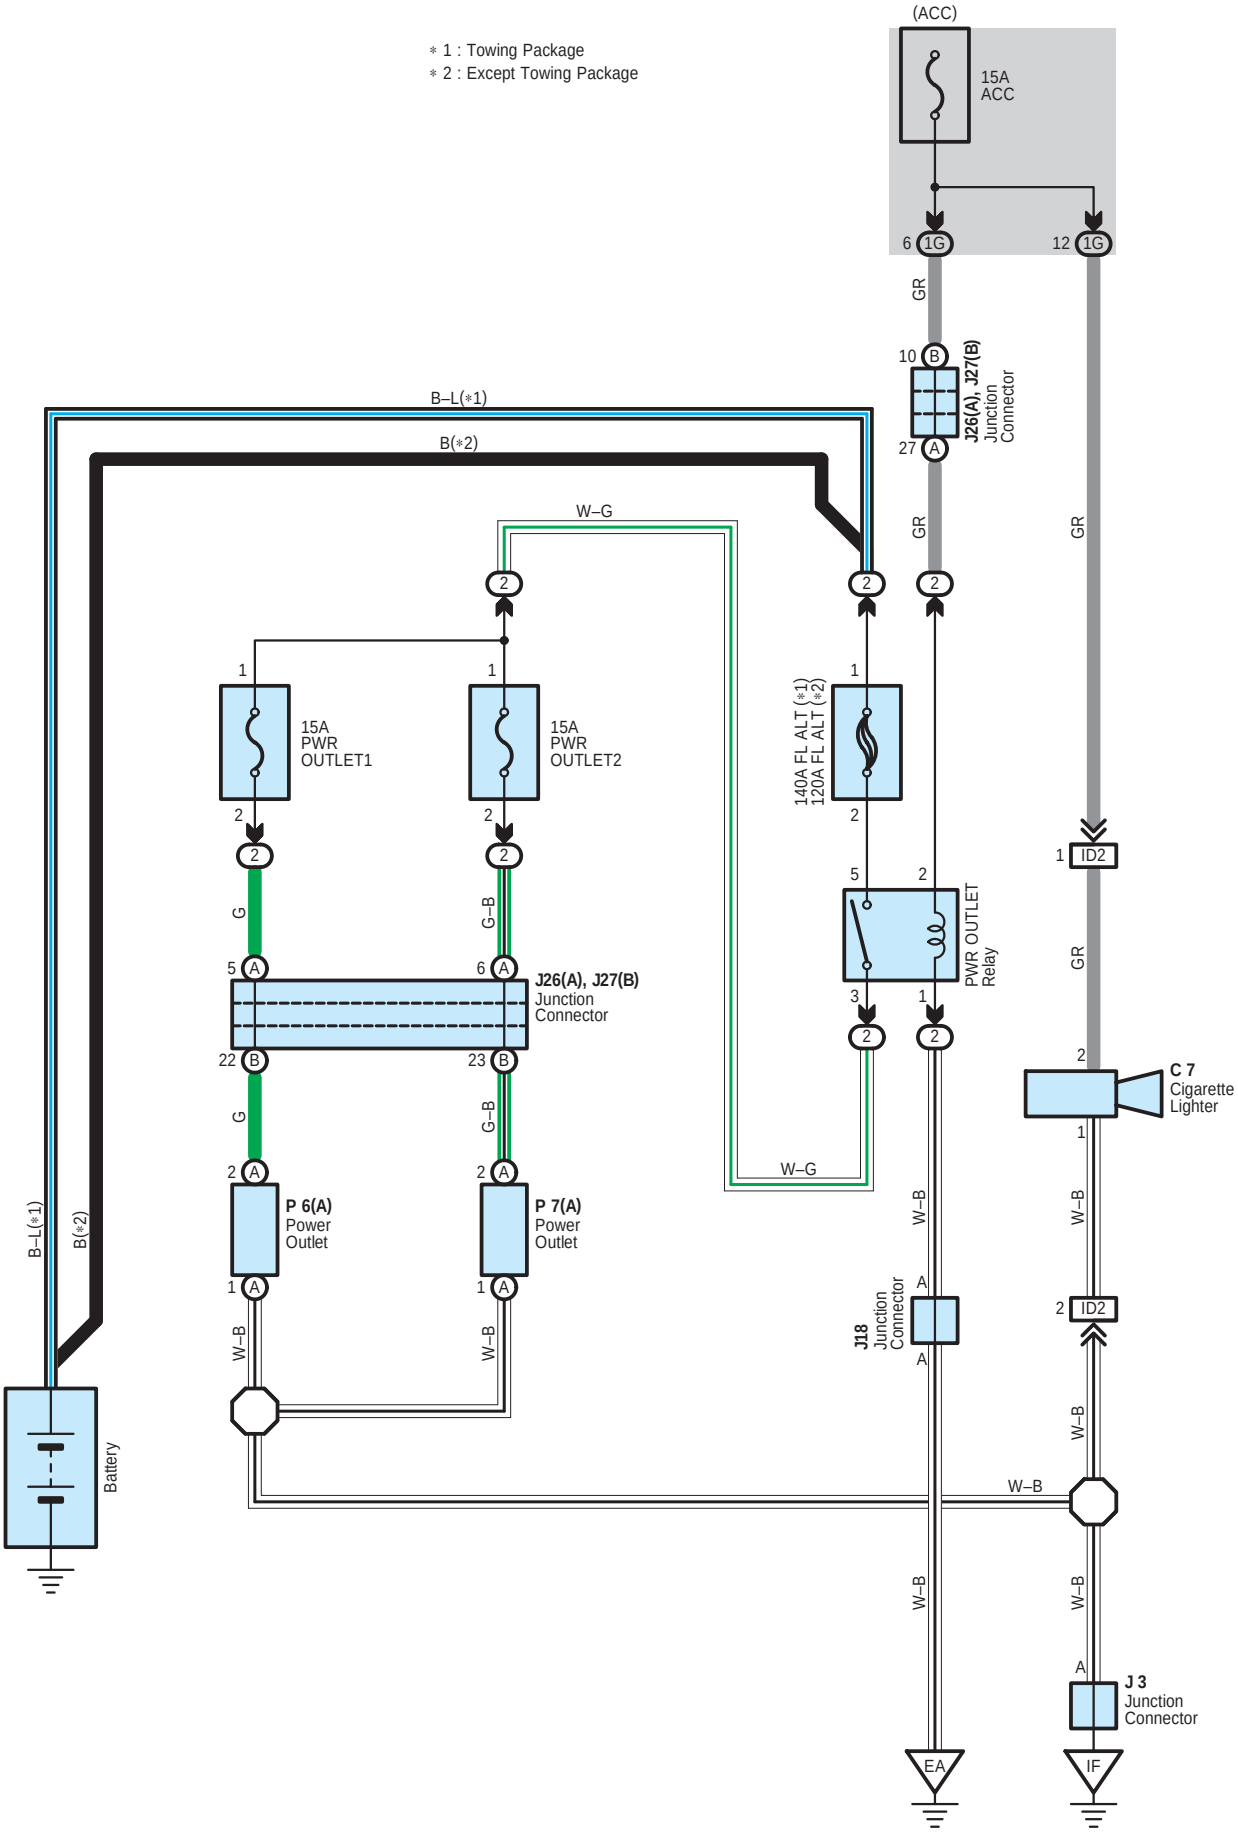

: Parts Location

Code	See Page	Code		See Page	Code		See Page
C7	60	J18		59 (1GR–FE)	P6	A	62
J3	62	J26	A	62	P7	A	62
J18	57 (2UZ–FE)	J27	B	62			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	82	Cigarette Lighter Wire and Cowl Wire (Instrument Panel Brace LH)

: Ground Points

Code	See Page	Ground Points Location
EA	80 (2UZ–FE)	Front Left Fender
	81 (1GR–FE)	
IF	82	Left Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat