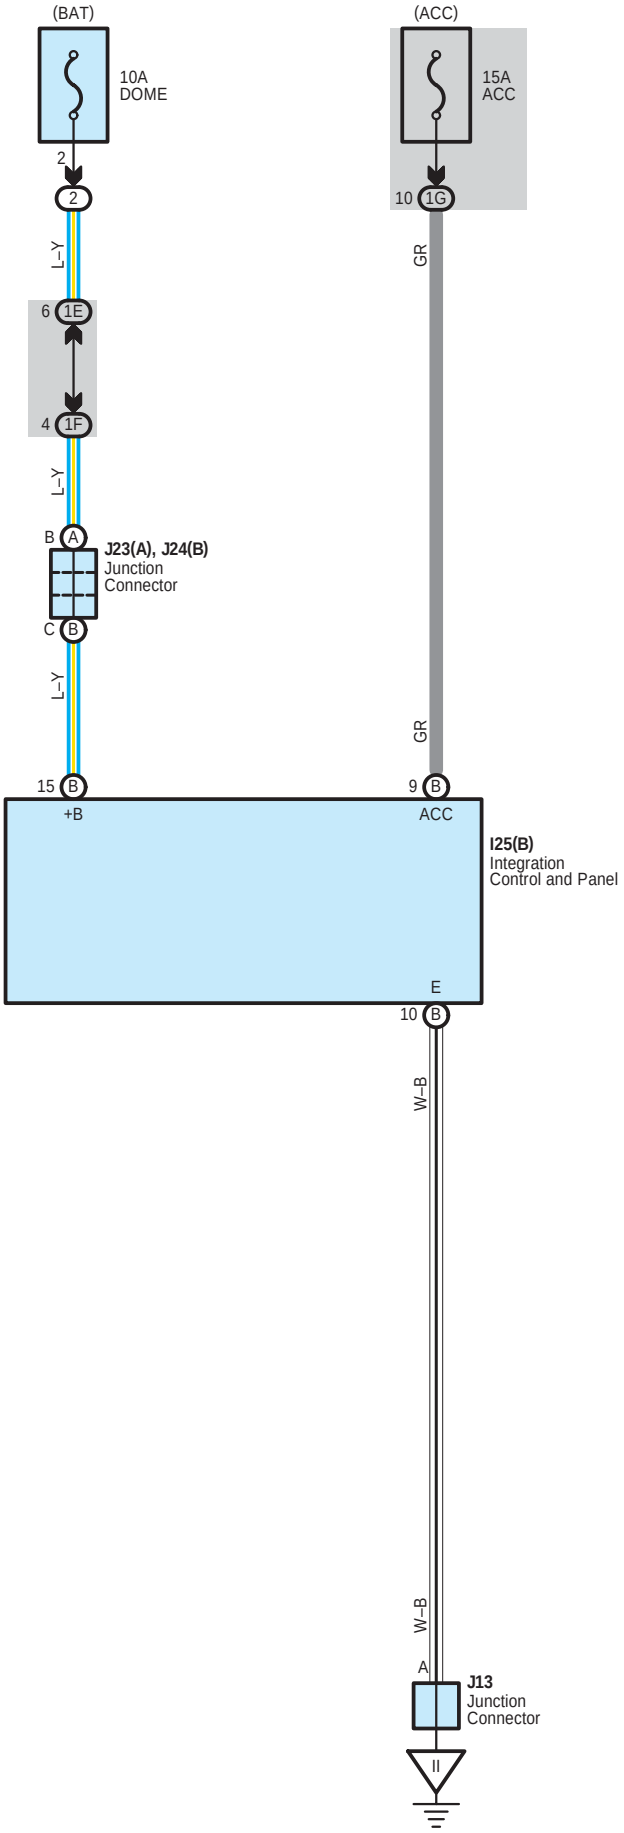

(BAT)
10A
DOME
2
2
L–Y
6
1E
4
1F
L–Y
B
A
J23(A), J24(B)
Junction
Connector
C
B
L–Y
15
B
+B
(ACC)
15A
ACC
10
1G
GR
GR
9
B
ACC
I25(B)
Integration
Control and Panel
E
10
B
W–B
W–B
A
J13
Junction
Connector

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
I25	B	61	J23	A	62		
J13		62	J24	B	62		

⬭ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

⬭ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1F	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1G	26 (*1)	
	30 (*2)	

▽ : Ground Points

Code	See Page	Ground Points Location
II	82	Right Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat