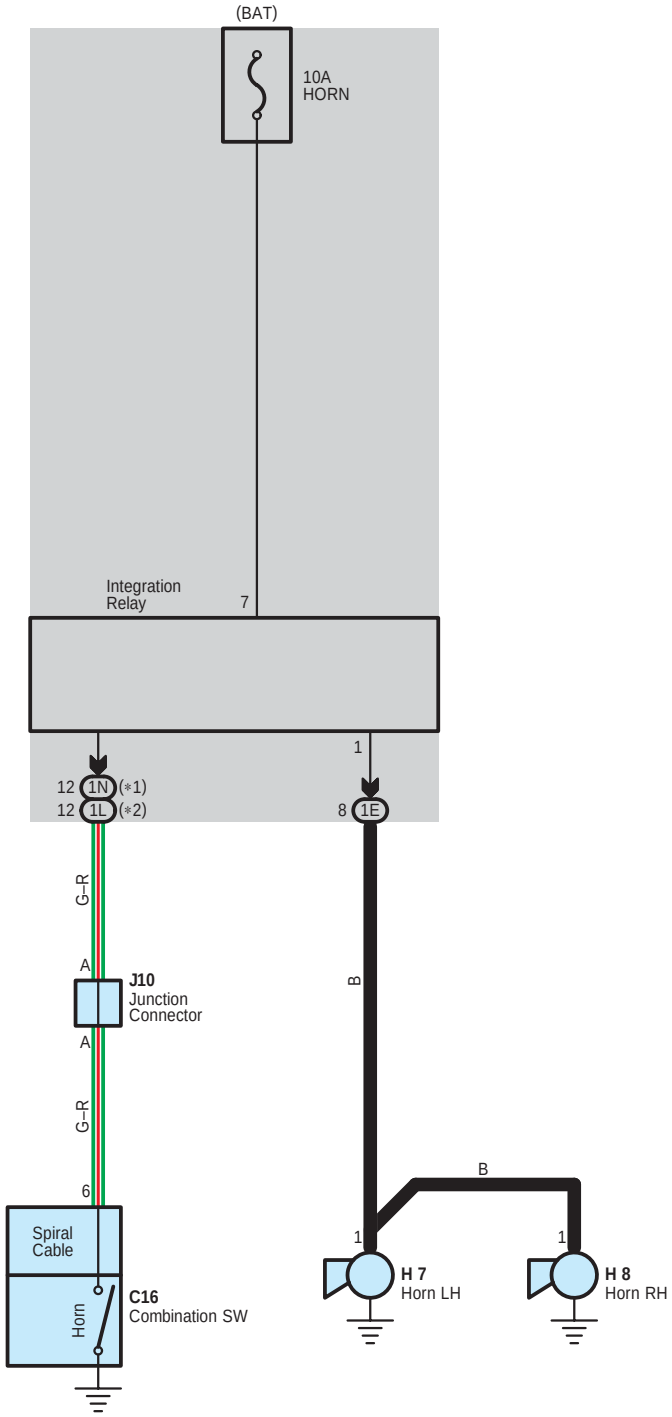


* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light

○ : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
C16	60	H7	58 (1GR–FE)	H8	58 (1GR–FE)
H7	56 (2UZ–FE)	H8	56 (2UZ–FE)	J10	62

⬭ : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1L	27 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1N	31 (*2)	

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat