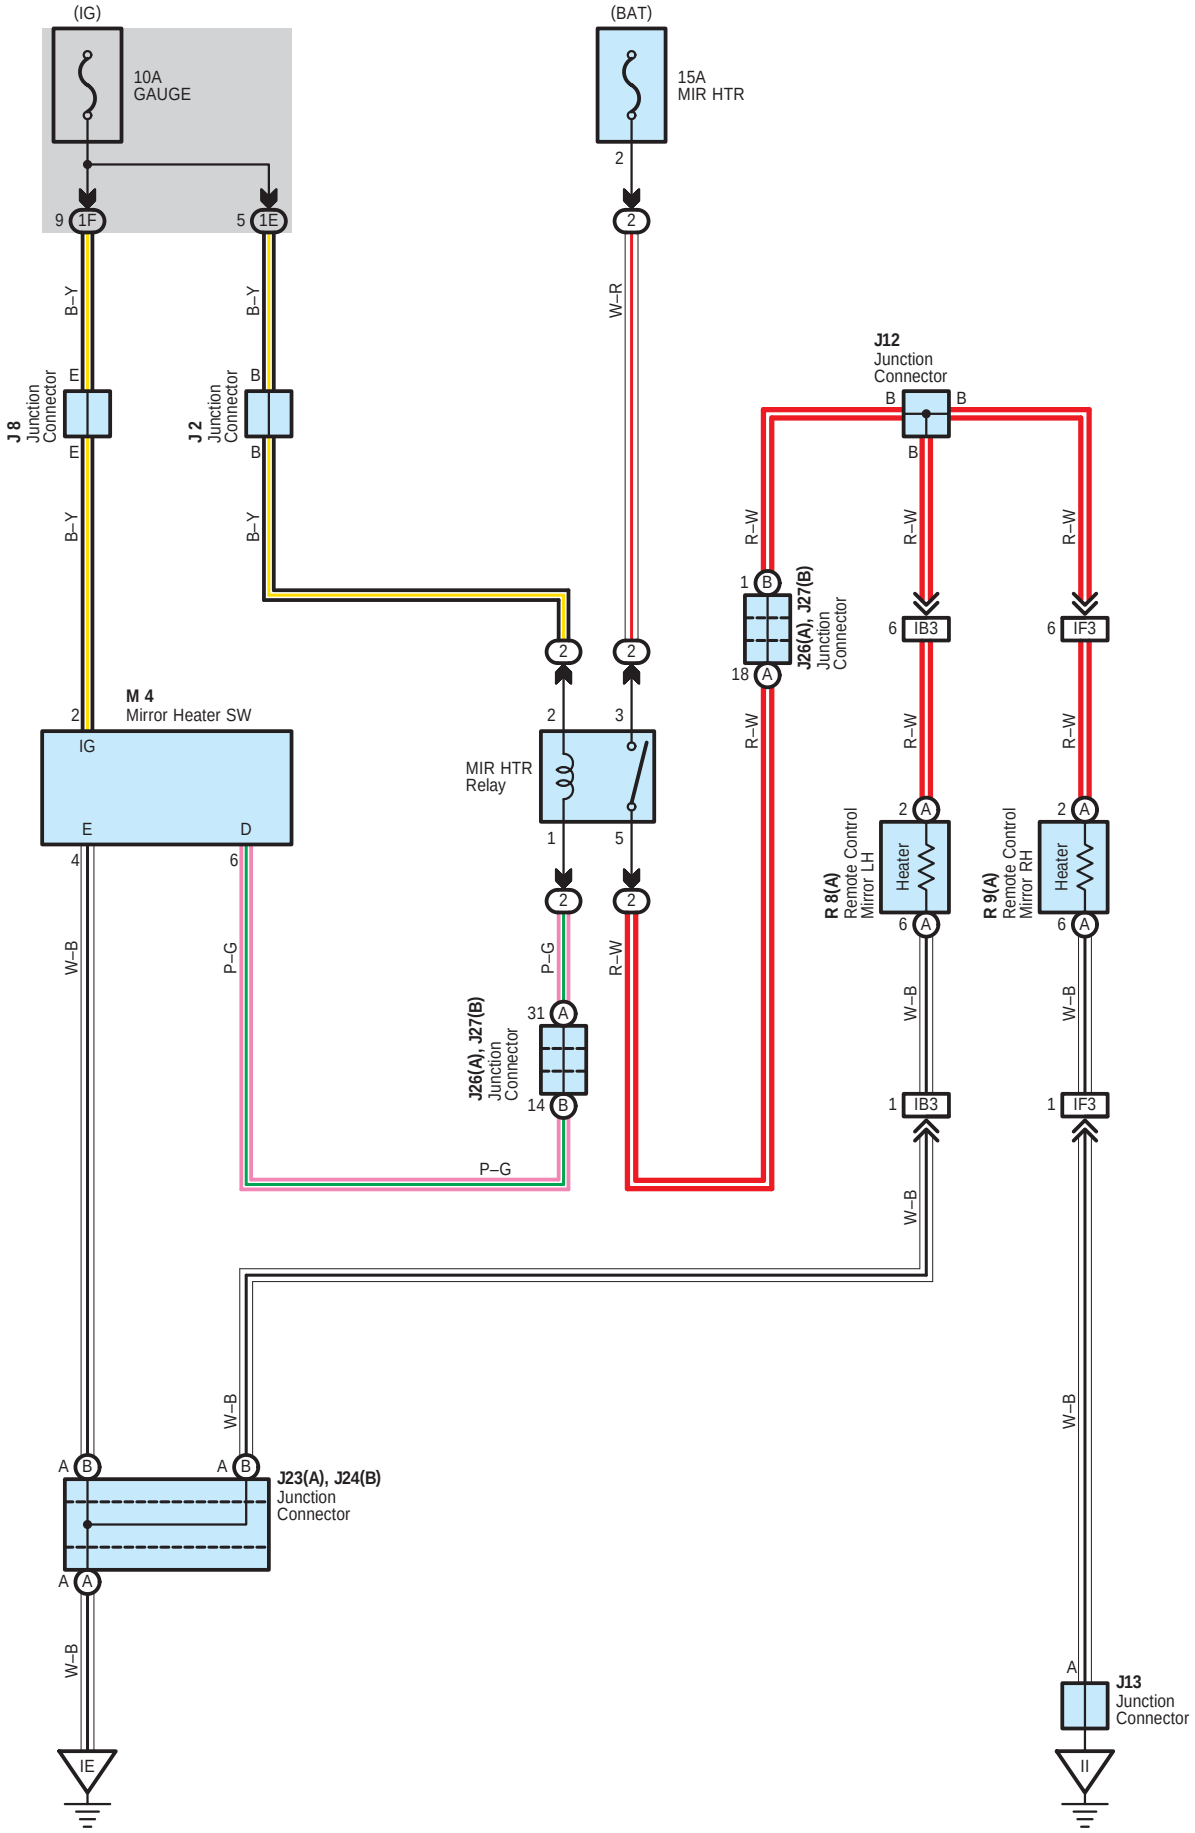

(IG)
10A
GAUGE
(BAT)
15A
MIR HTR
9 1F
5 1E
2
B–Y
W–R
J8
Junction
Connector
J2
Junction
Connector
J12
Junction
Connector
R–W
M 4
Mirror Heater SW
IG
E
D
MIR HTR
Relay
J26(A), J27(B)
Junction
Connector
R 8(A)
Remote Control
Mirror LH
R 9(A)
Remote Control
Mirror RH
Heater
IB3
IF3
W–B
P–G
J23(A), J24(B)
Junction
Connector
J13
Junction
Connector
IE
II

: Parts Location

Code	See Page	Code		See Page	Code		See Page
J2	57 (2UZ–FE)	J23	A	62	R8	A	64 (*3)
	59 (1GR–FE)	J24	B	62			65 (*4)
J8	62	J26	A	62	R9	A	64 (*3)
J12	62	J27	B	62			65 (*4)
J13	62	M4		62			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1F	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB3	82	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF3	83	Front Door RH Wire and Cowl Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IE	82	Left Kick Panel
II	82	Right Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat