
Remote Control Mirror (Access/Standard Cab)

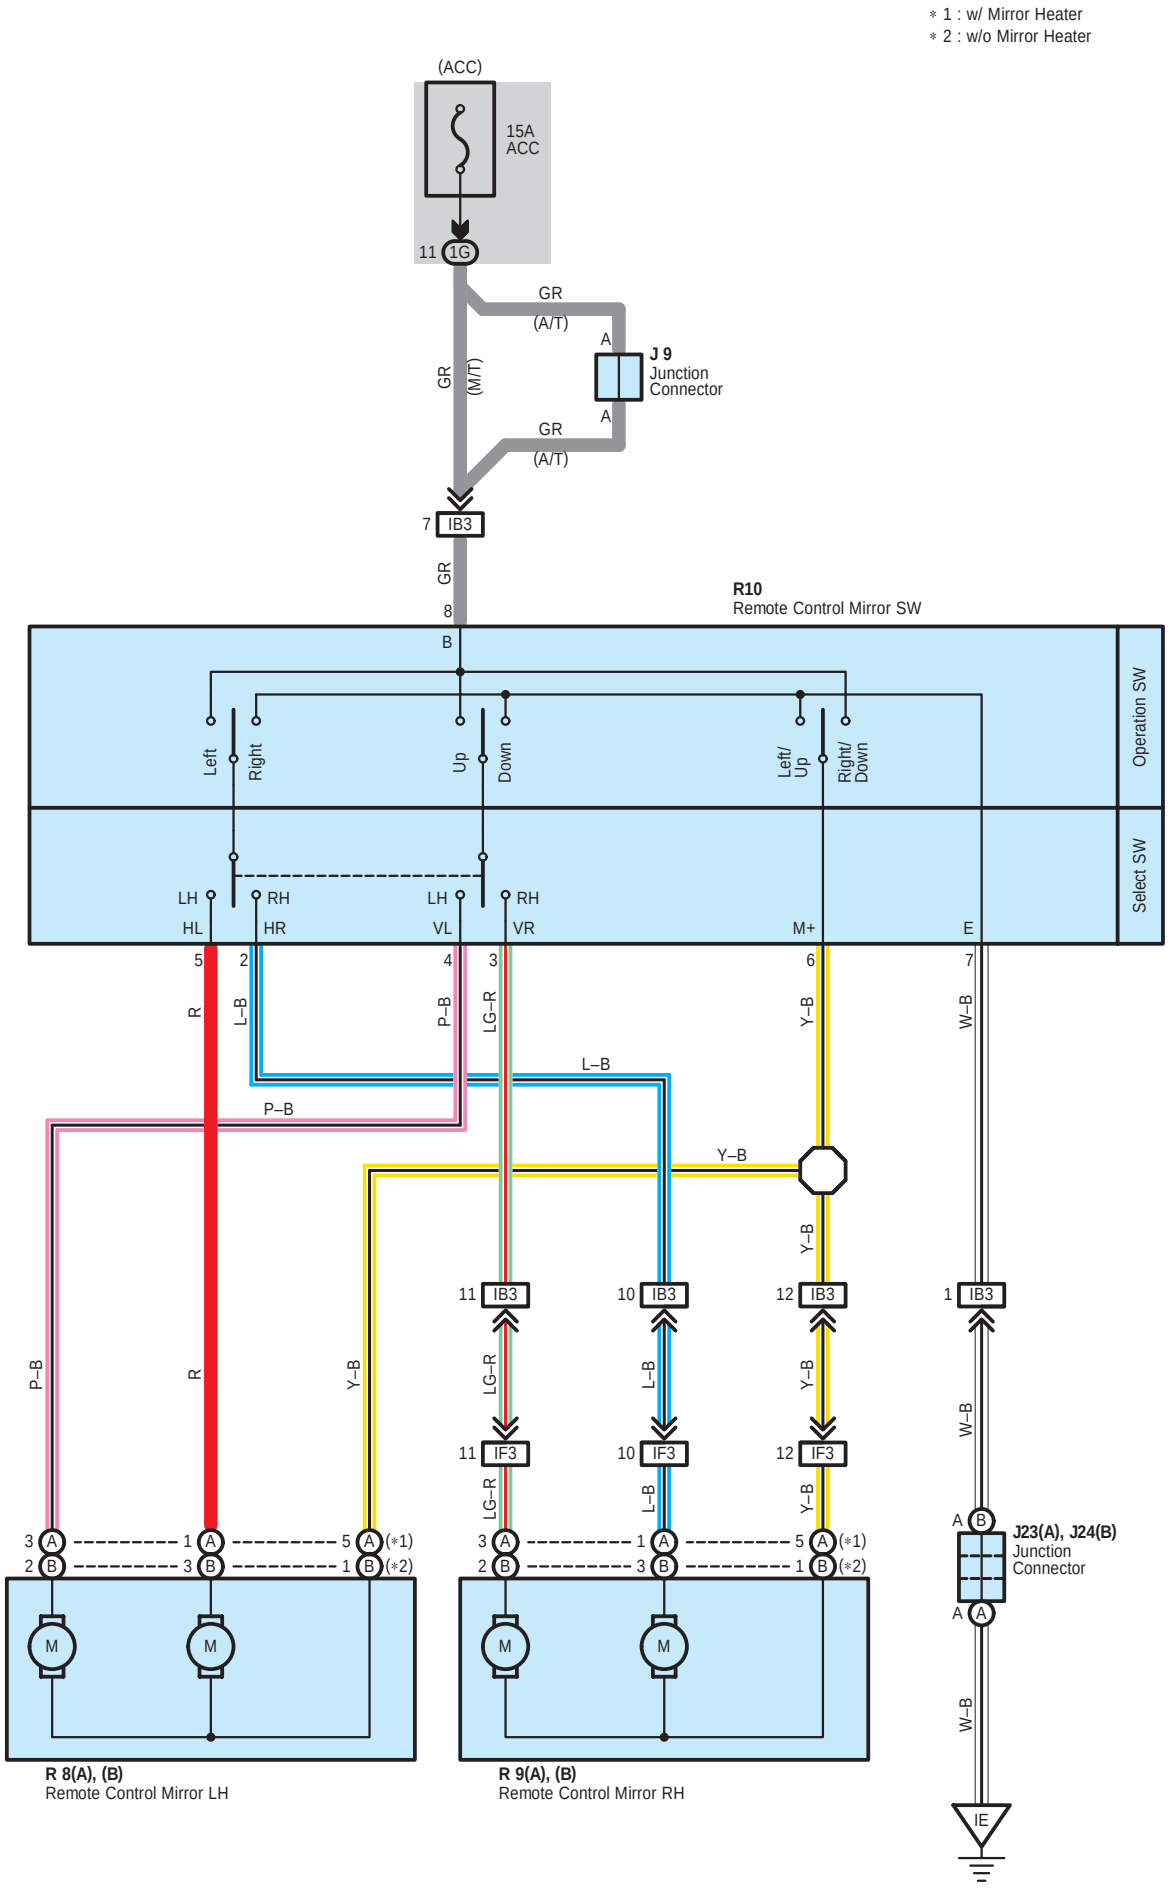

: Parts Location

Code		See Page	Code		See Page	Code		See Page
J9		62	R8	B	64 (*3)	R9	B	65 (*4)
J23	A	62			65 (*4)	R10		64 (*3)
J24	B	62	R9	A	64 (*3)			65 (*4)
R8	A	64 (*3)			65 (*4)			
		65 (*4)		B	64 (*3)			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB3	82	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF3	83	Front Door RH Wire and Cowl Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IE	82	Left Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat