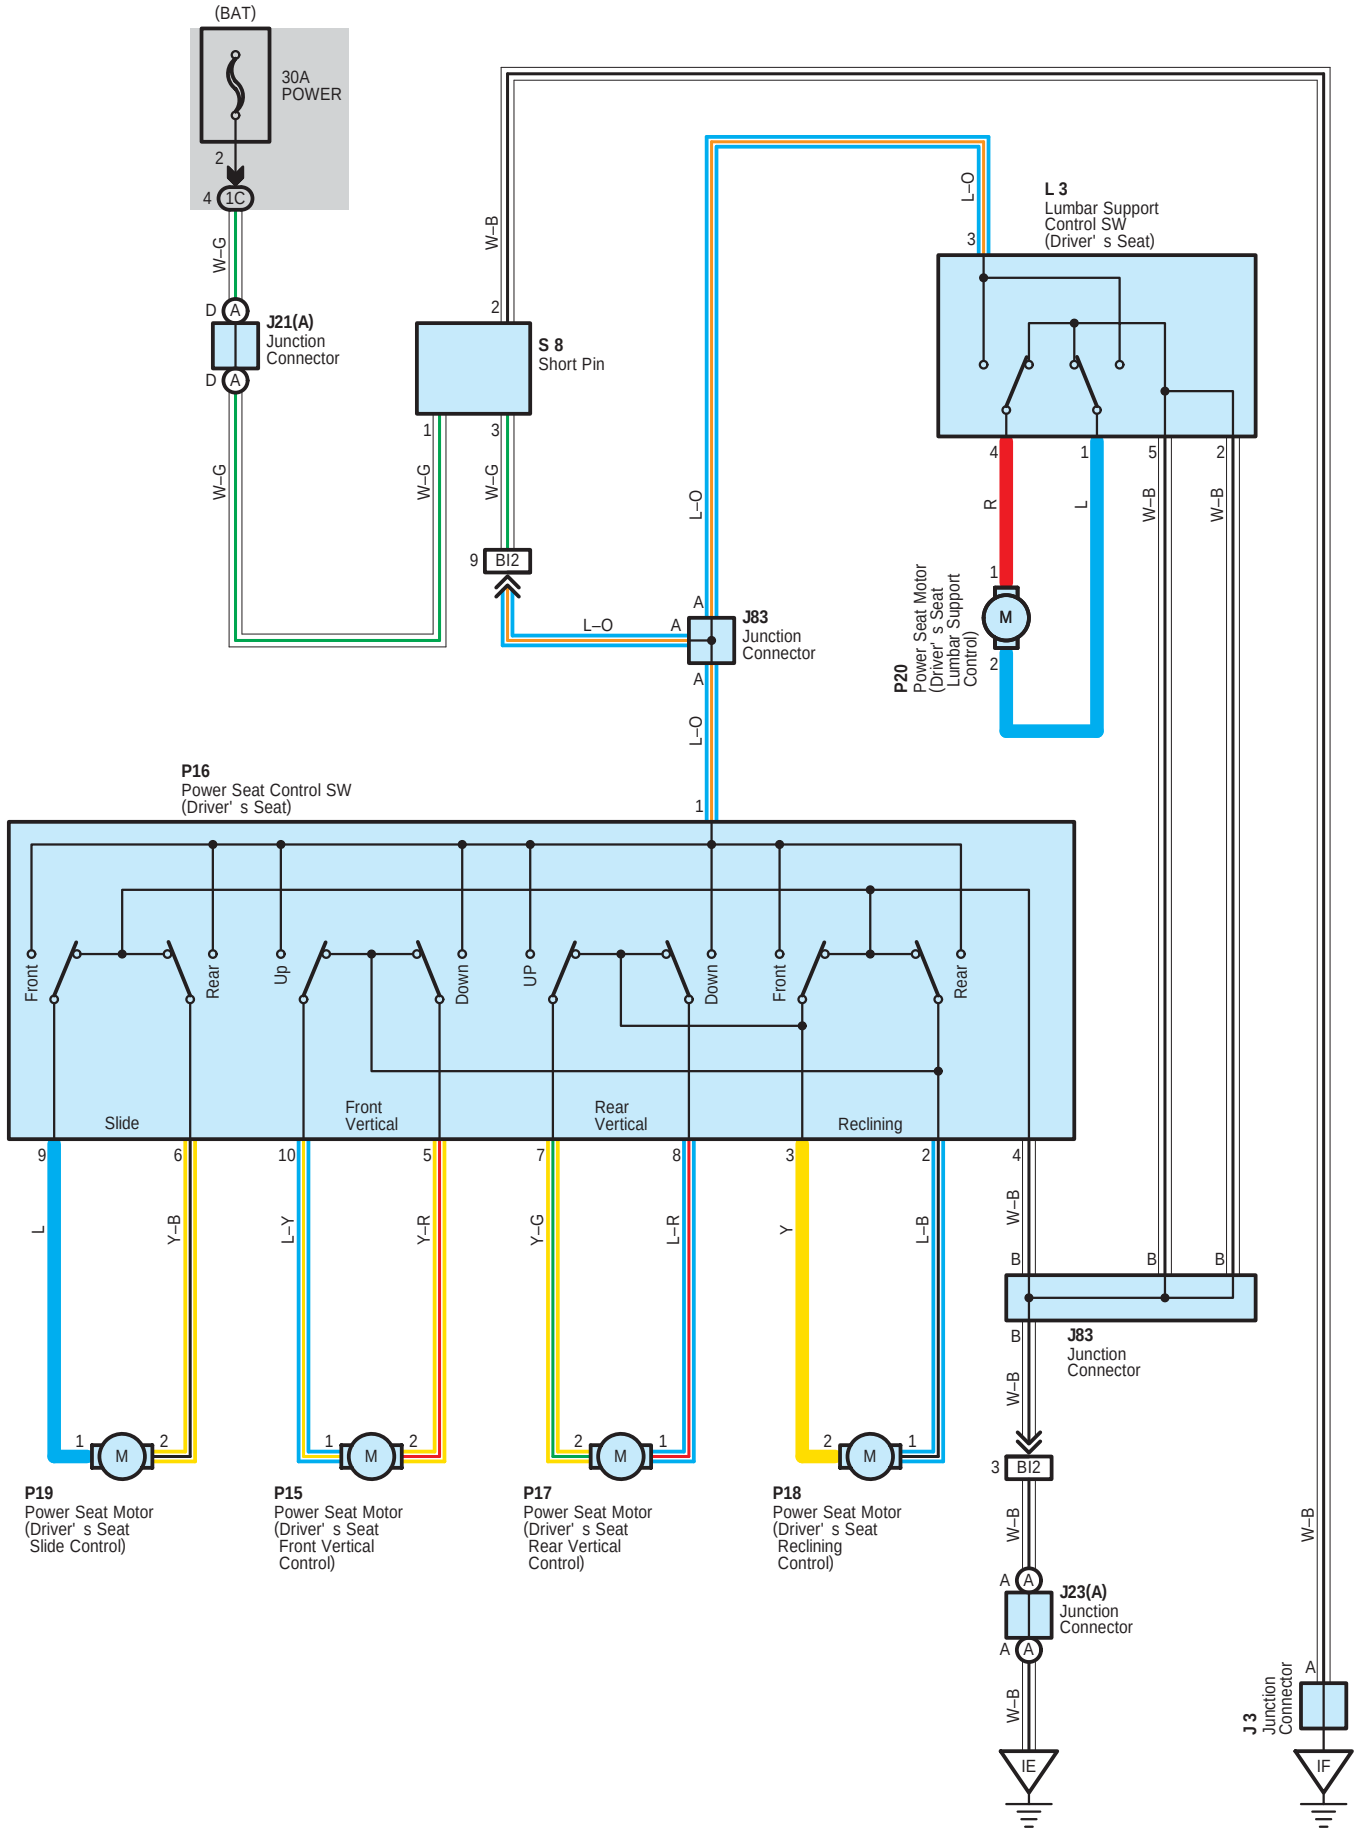

(BAT)
30A
POWER
2
4
1C
W–G
D
A
J21(A)
Junction
Connector
D
A
W–G
W–G
W–B
2
S 8
Short Pin
1
3
W–G
9
BI2
L–O
A
J83
Junction
Connector
A
L–O
1
L–O
3
L 3
Lumbar Support
Control SW
(Driver' s Seat)
4
R
1
L
5
W–B
2
W–B
1
M
2
P20
Power Seat Motor
(Driver' s Seat
Lumbar Support
Control)
P16
Power Seat Control SW
(Driver' s Seat)
Front
Rear
Up
Down
UP
Down
Front
Rear
Slide
Front
Vertical
Rear
Vertical
Reclining
9
6
L
Y–B
10
5
L–Y
Y–R
7
8
Y–G
L–R
3
2
Y
L–B
4
W–B
B
B
B
B
J83
Junction
Connector
W–B
3
BI2
W–B
A
A
J23(A)
Junction
Connector
A
A
W–B
IE
W–B
J3
Junction
Connector
A
IF
1
M
2
P19
Power Seat Motor
(Driver' s Seat
Slide Control)
P15
Power Seat Motor
(Driver' s Seat
Front Vertical
Control)
P17
Power Seat Motor
(Driver' s Seat
Rear Vertical
Control)
P18
Power Seat Motor
(Driver' s Seat
Reclining
Control)

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J3	62	L3	66 (*5)	P18	66 (*5)
J21 A	62	P15	66 (*5)	P19	66 (*5)
J23 A	62	P16	66 (*5)	P20	66 (*5)
J83	66 (*5)	P17	66 (*5)	S8	63

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	26 (*1) 30 (*2)	Cowl Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BI2	86 (*5) 88 (*7)	Cowl Wire and Seat No.2 Wire (Under the Driver's Seat)

: Ground Points

Code	See Page	Ground Points Location
IE IF	82	Left Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat