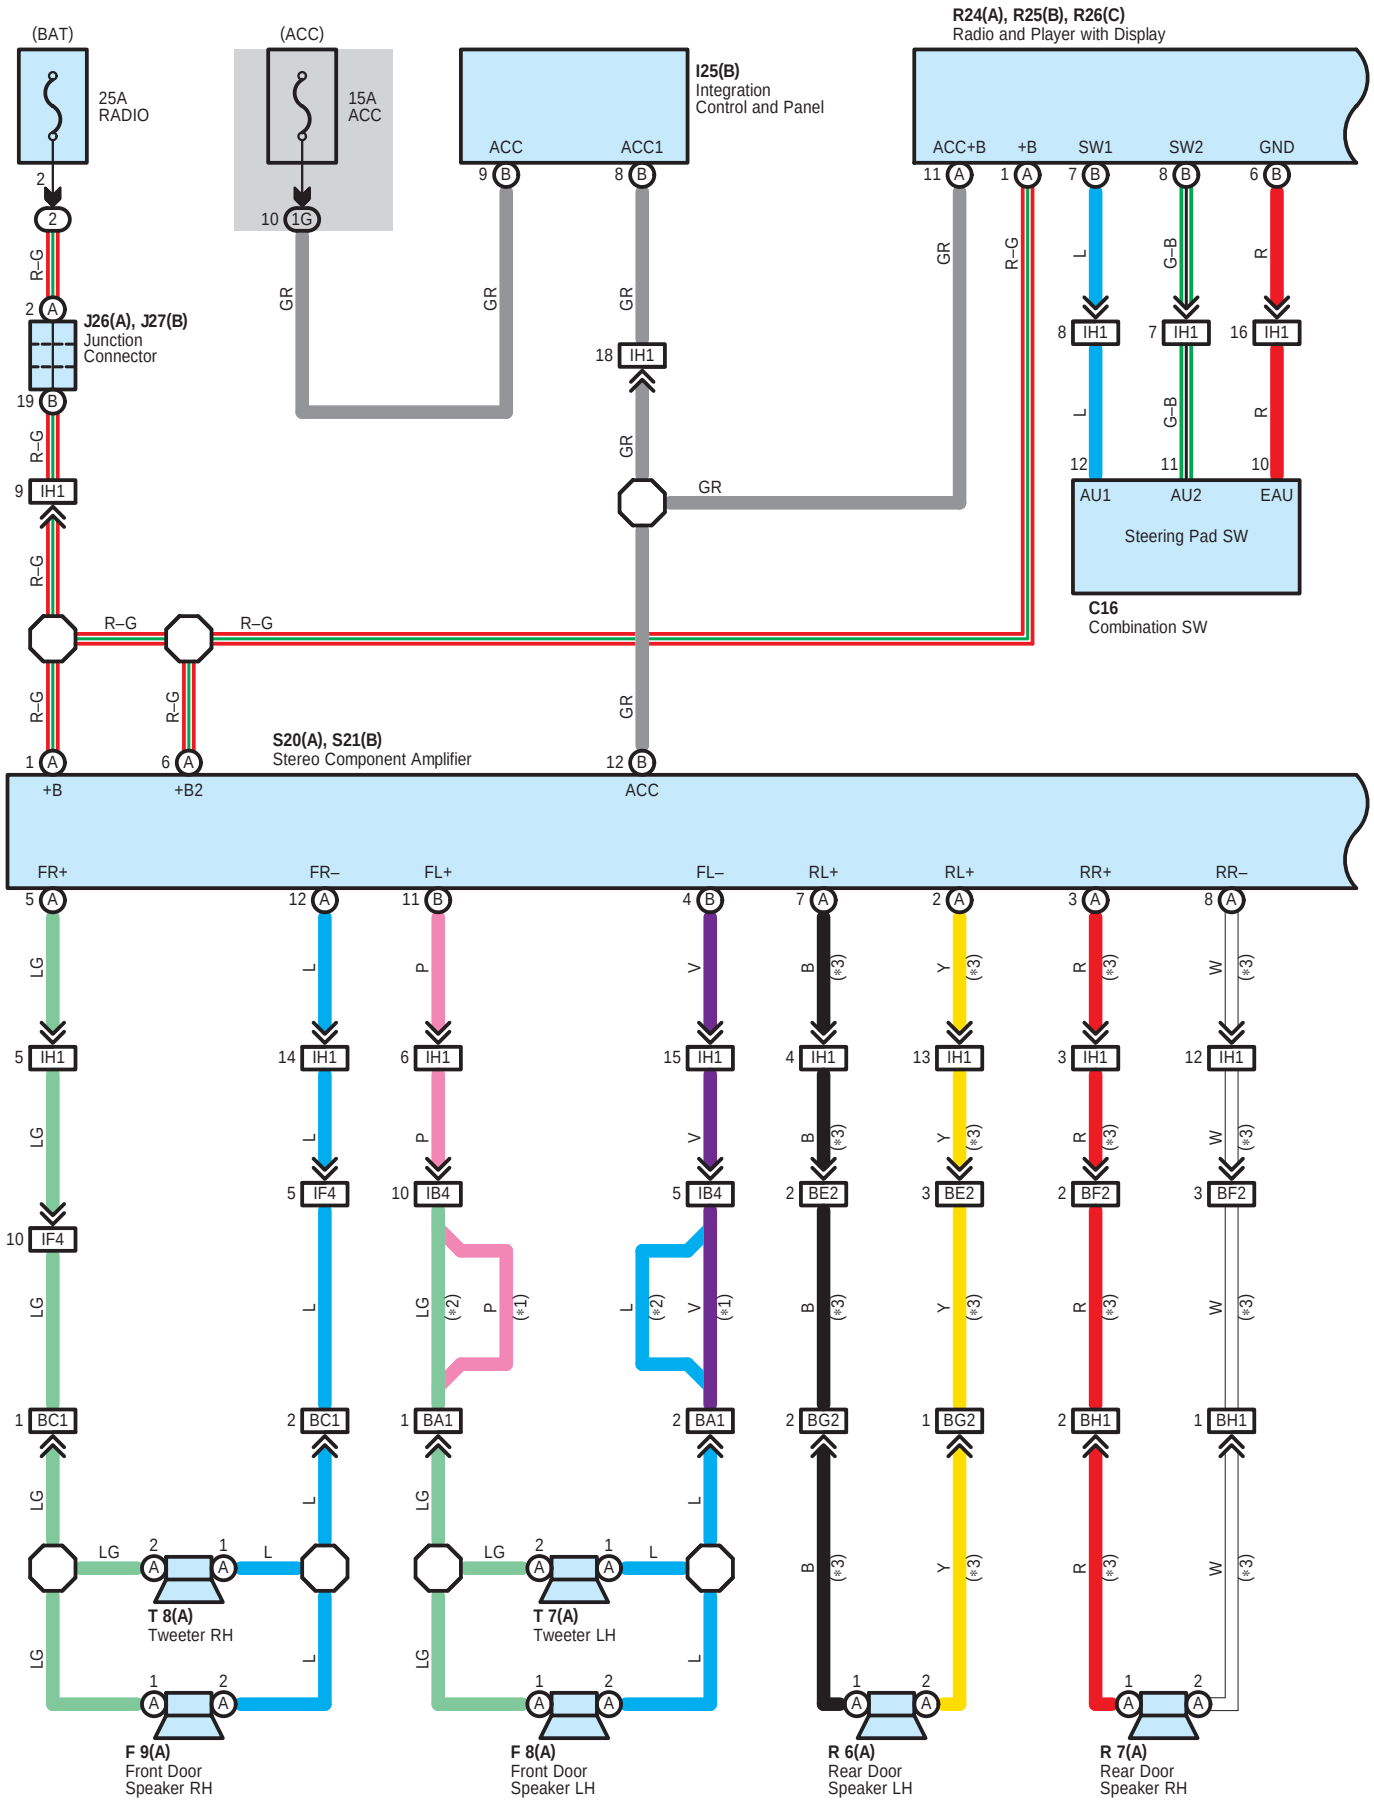
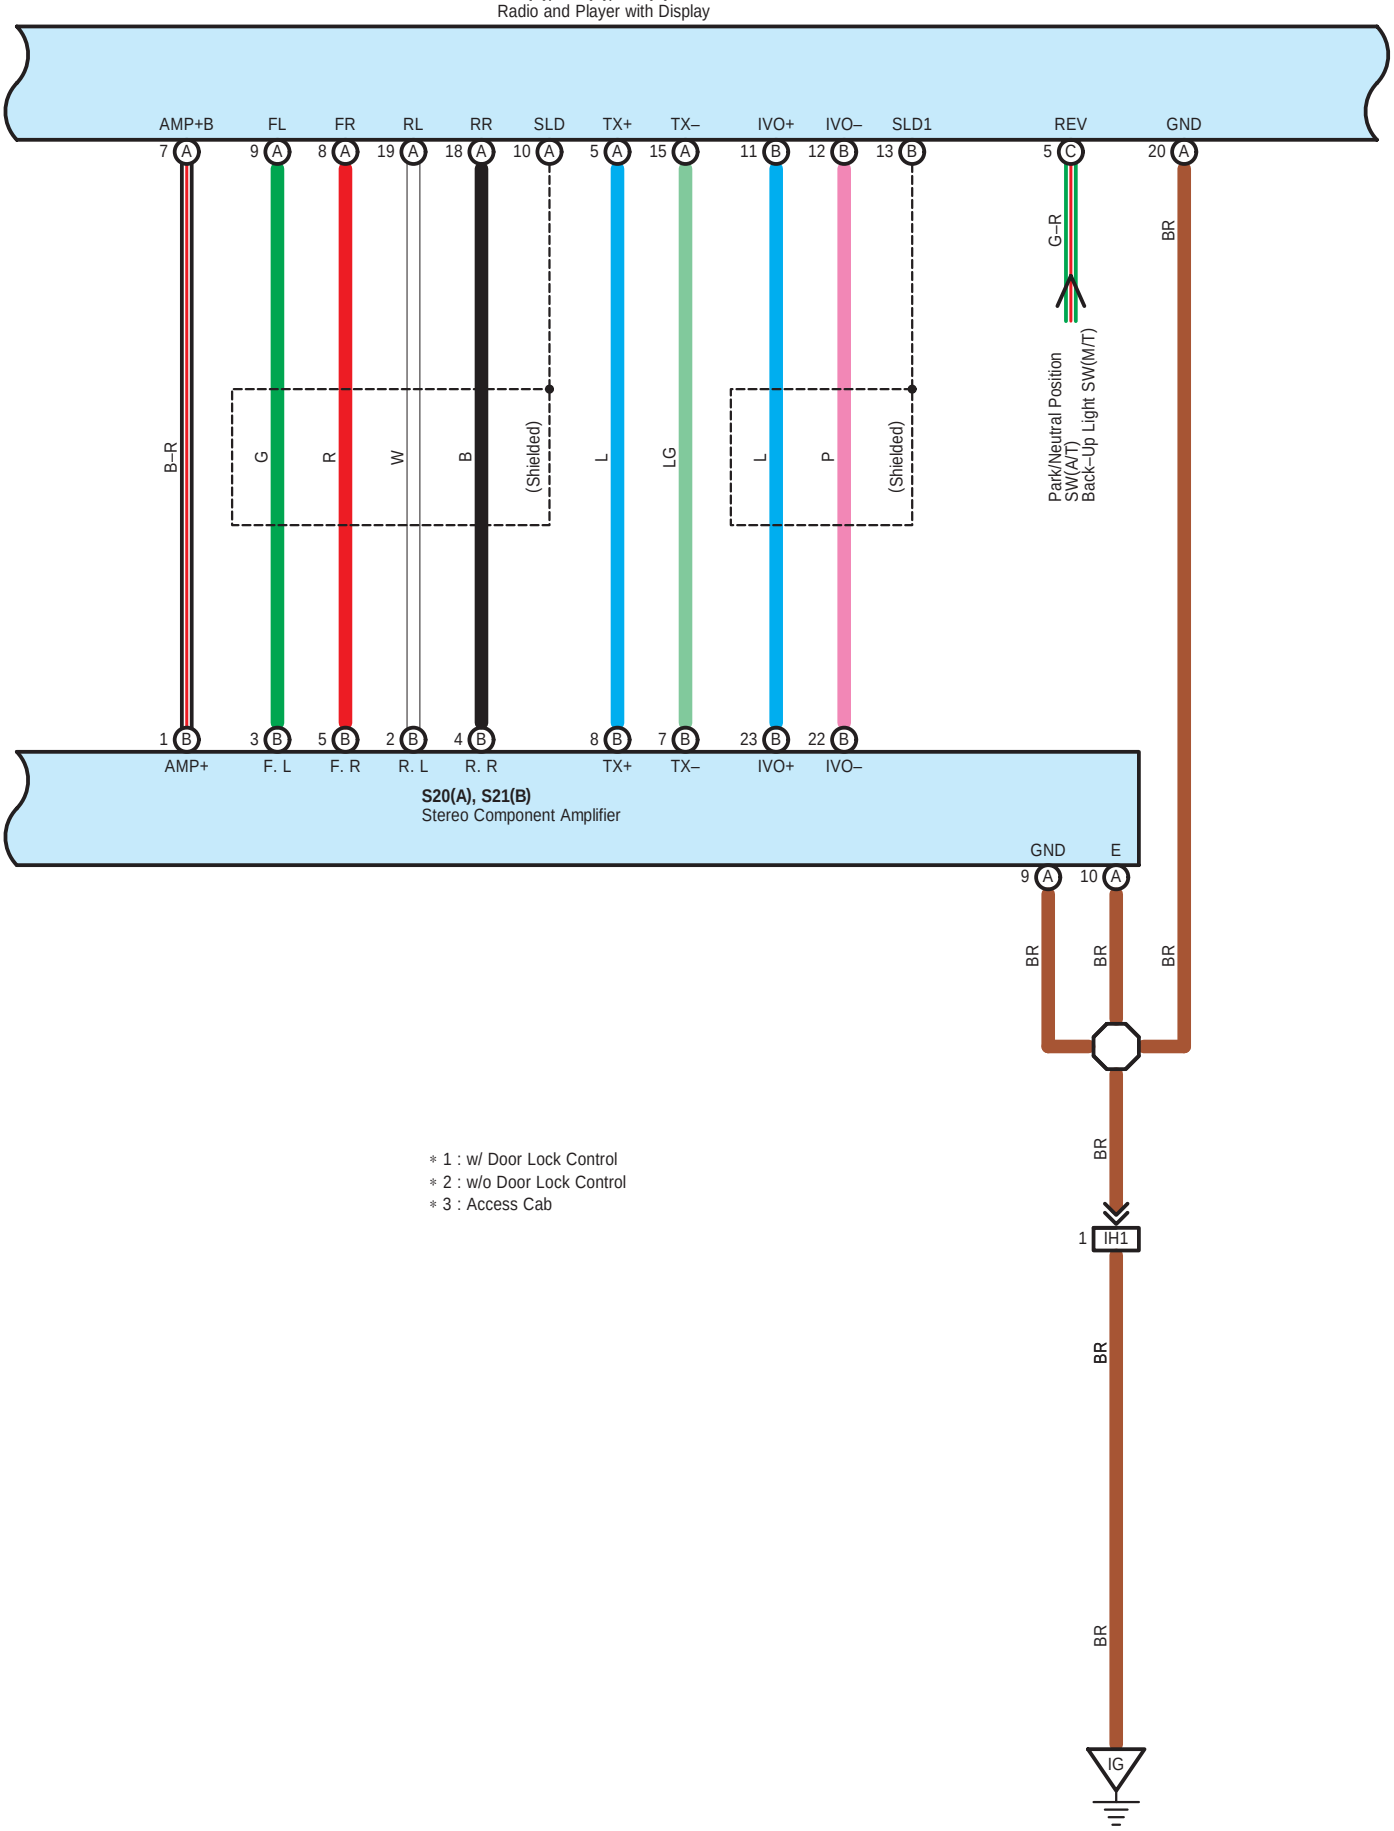
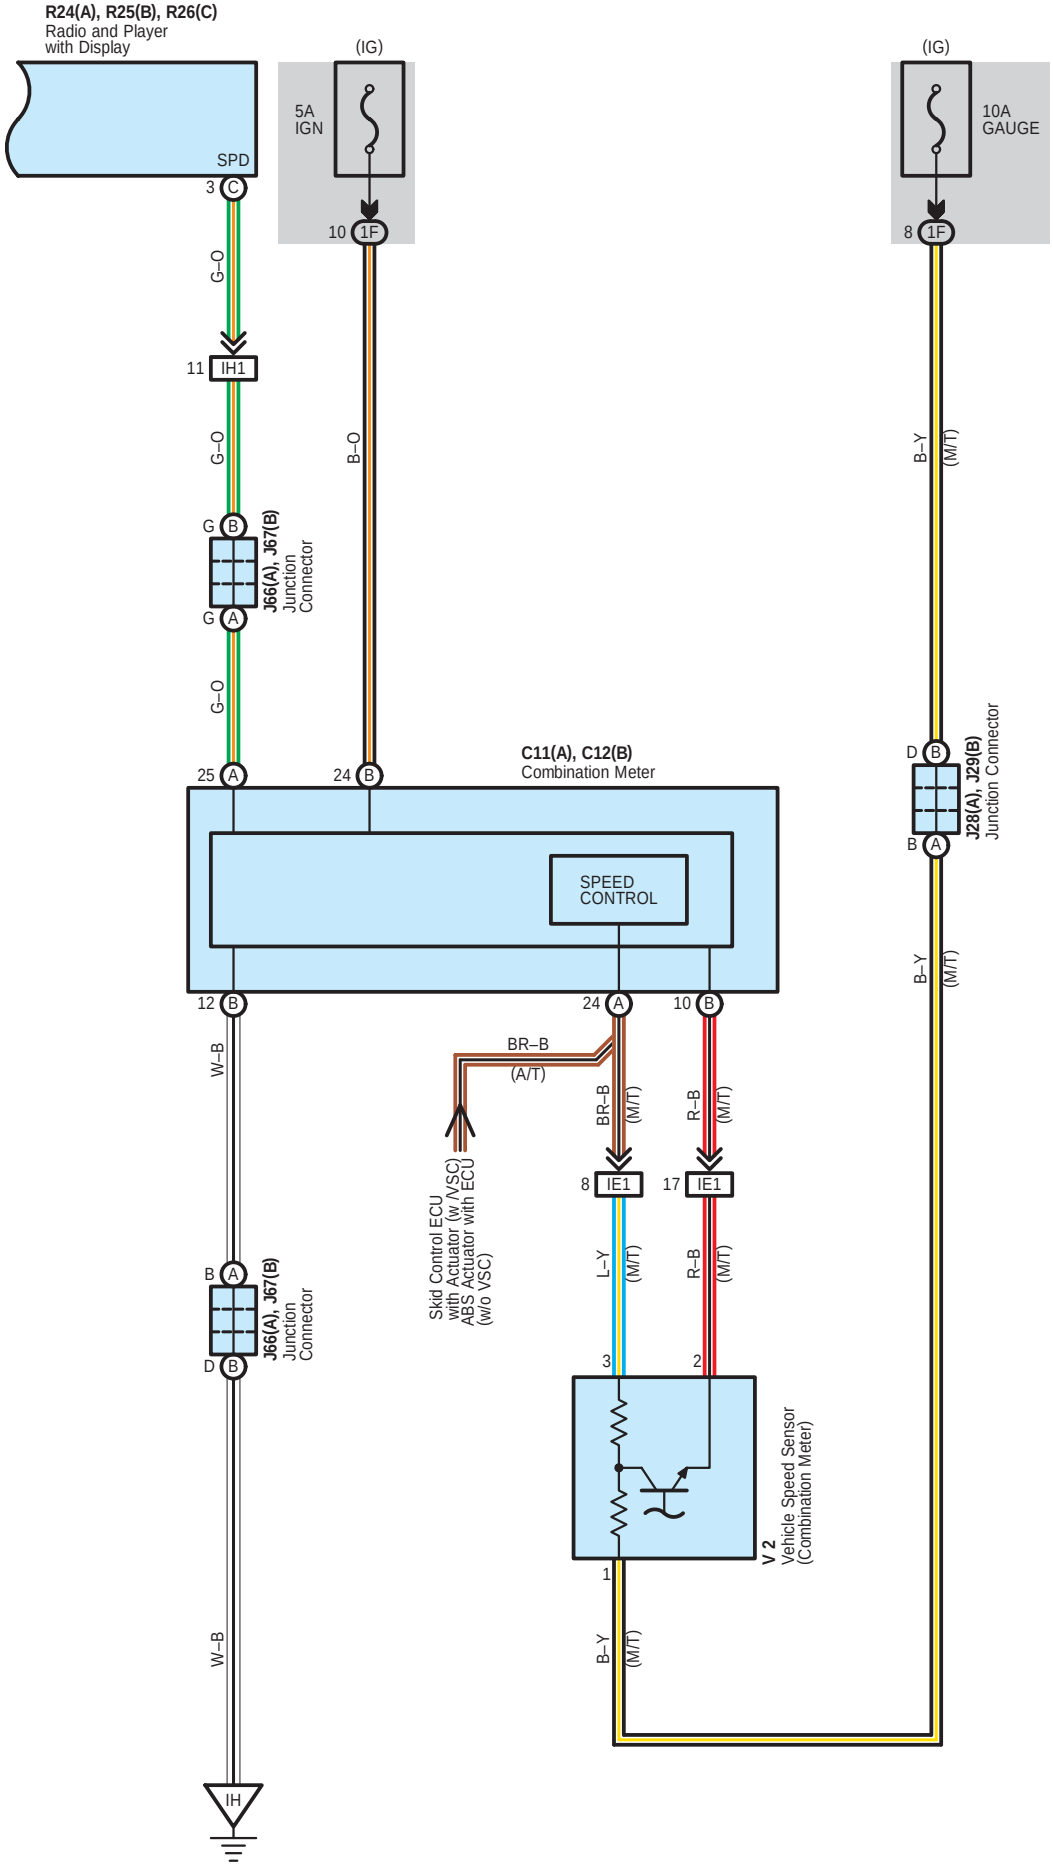

(BAT)
25A
RADIO
(ACC)
15A
ACC
I25(B)
Integration
Control and Panel
ACC
ACC1
R24(A), R25(B), R26(C)
Radio and Player with Display
ACC+B
+B
SW1
SW2
GND
J26(A), J27(B)
Junction
Connector
IH1
AU1
AU2
EAU
Steering Pad SW
C16
Combination SW
S20(A), S21(B)
Stereo Component Amplifier
+B
+B2
ACC
FR+
FR–
FL+
FL–
RL+
RL+
RR+
RR–
IF4
IB4
BC1
BA1
BE2
BG2
BF2
BH1
T 8(A)
Tweeter RH
T 7(A)
Tweeter LH
F 9(A)
Front Door
Speaker RH
F 8(A)
Front Door
Speaker LH
R 6(A)
Rear Door
Speaker LH
R 7(A)
Rear Door
Speaker RH

R24(A), R25(B), R26(C)
Radio and Player with Display



∗ 1 : w/ Door Lock Control
∗ 2 : w/o Door Lock Control
∗ 3 : Access Cab


R24(A), R25(B), R26(C)
Radio and Player with Display
SPD
3 C
G–O
11 IH1
G–O
G B
G A
J66(A), J67(B) Junction Connector
G–O
25 A
(IG)
5A IGN
10 1F
B–O
24 B
(IG)
10A GAUGE
8 1F
B–Y (M/T)
D B
B A
J28(A), J29(B) Junction Connector
B–Y (M/T)
C11(A), C12(B)
Combination Meter
SPEED CONTROL
12 B
24 A
10 B
W–B
BR–B (A/T)
BR–B (M/T)
R–B (M/T)
8 IE1
17 IE1
Skid Control ECU with Actuator (w /VSC) ABS Actuator with ECU (w/o VSC)
L–Y (M/T)
R–B (M/T)
B A
D B
J66(A), J67(B) Junction Connector
3
2
1
V 2
Vehicle Speed Sensor (Combination Meter)
B–Y (M/T)
W–B
IH

: Parts Location

Code		See Page	Code		See Page	Code		See Page
C11	A	60	J28	A	62	R26	C	63
C12	B	60	J29	B	62	S20	A	64 (*3)
C16		60	J66	A	62	S21	B	64 (*3)
F8	A	64 (*3)	J67	B	62	T7	A	64 (*3)
F9	A	64 (*3)	R6	A	64 (*3)	T8	A	64 (*3)
I25	B	61	R7	A	64 (*3)	V2		59 (1GR–FE)
J26	A	62	R24	A	63			
J27	B	62	R25	B	63			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1G	26 (*1)	
	30 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB4	82	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IE1	83	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IF4	83	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IH1	83	Cowl Wire and Floor No.3 Wire (Instrument Panel Brace RH)
BA1	84 (*3)	Front Door LH Wire and Speaker Tweeter Wire LH (Inside of Front Door LH)
BC1	84 (*3)	Front Door RH Wire and Speaker Tweeter Wire RH (Inside of Front Door RH)
BE2	84 (*3)	Floor No.2 Wire and Cowl Wire (Center of Left Rocker Panel)
BF2	84 (*3)	Floor No.1 Wire and Cowl Wire (Center of Right Rocker Panel)
BG2	84 (*3)	Floor No.2 Wire and Rear Door No.2 Wire (Under the Left Quarter Panel)
BH1	84 (*3)	Floor No.1 Wire and Rear Door No.1 Wire (Under the Right Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
IG	82	Instrument Panel Brace RH
IH	82	Right Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat