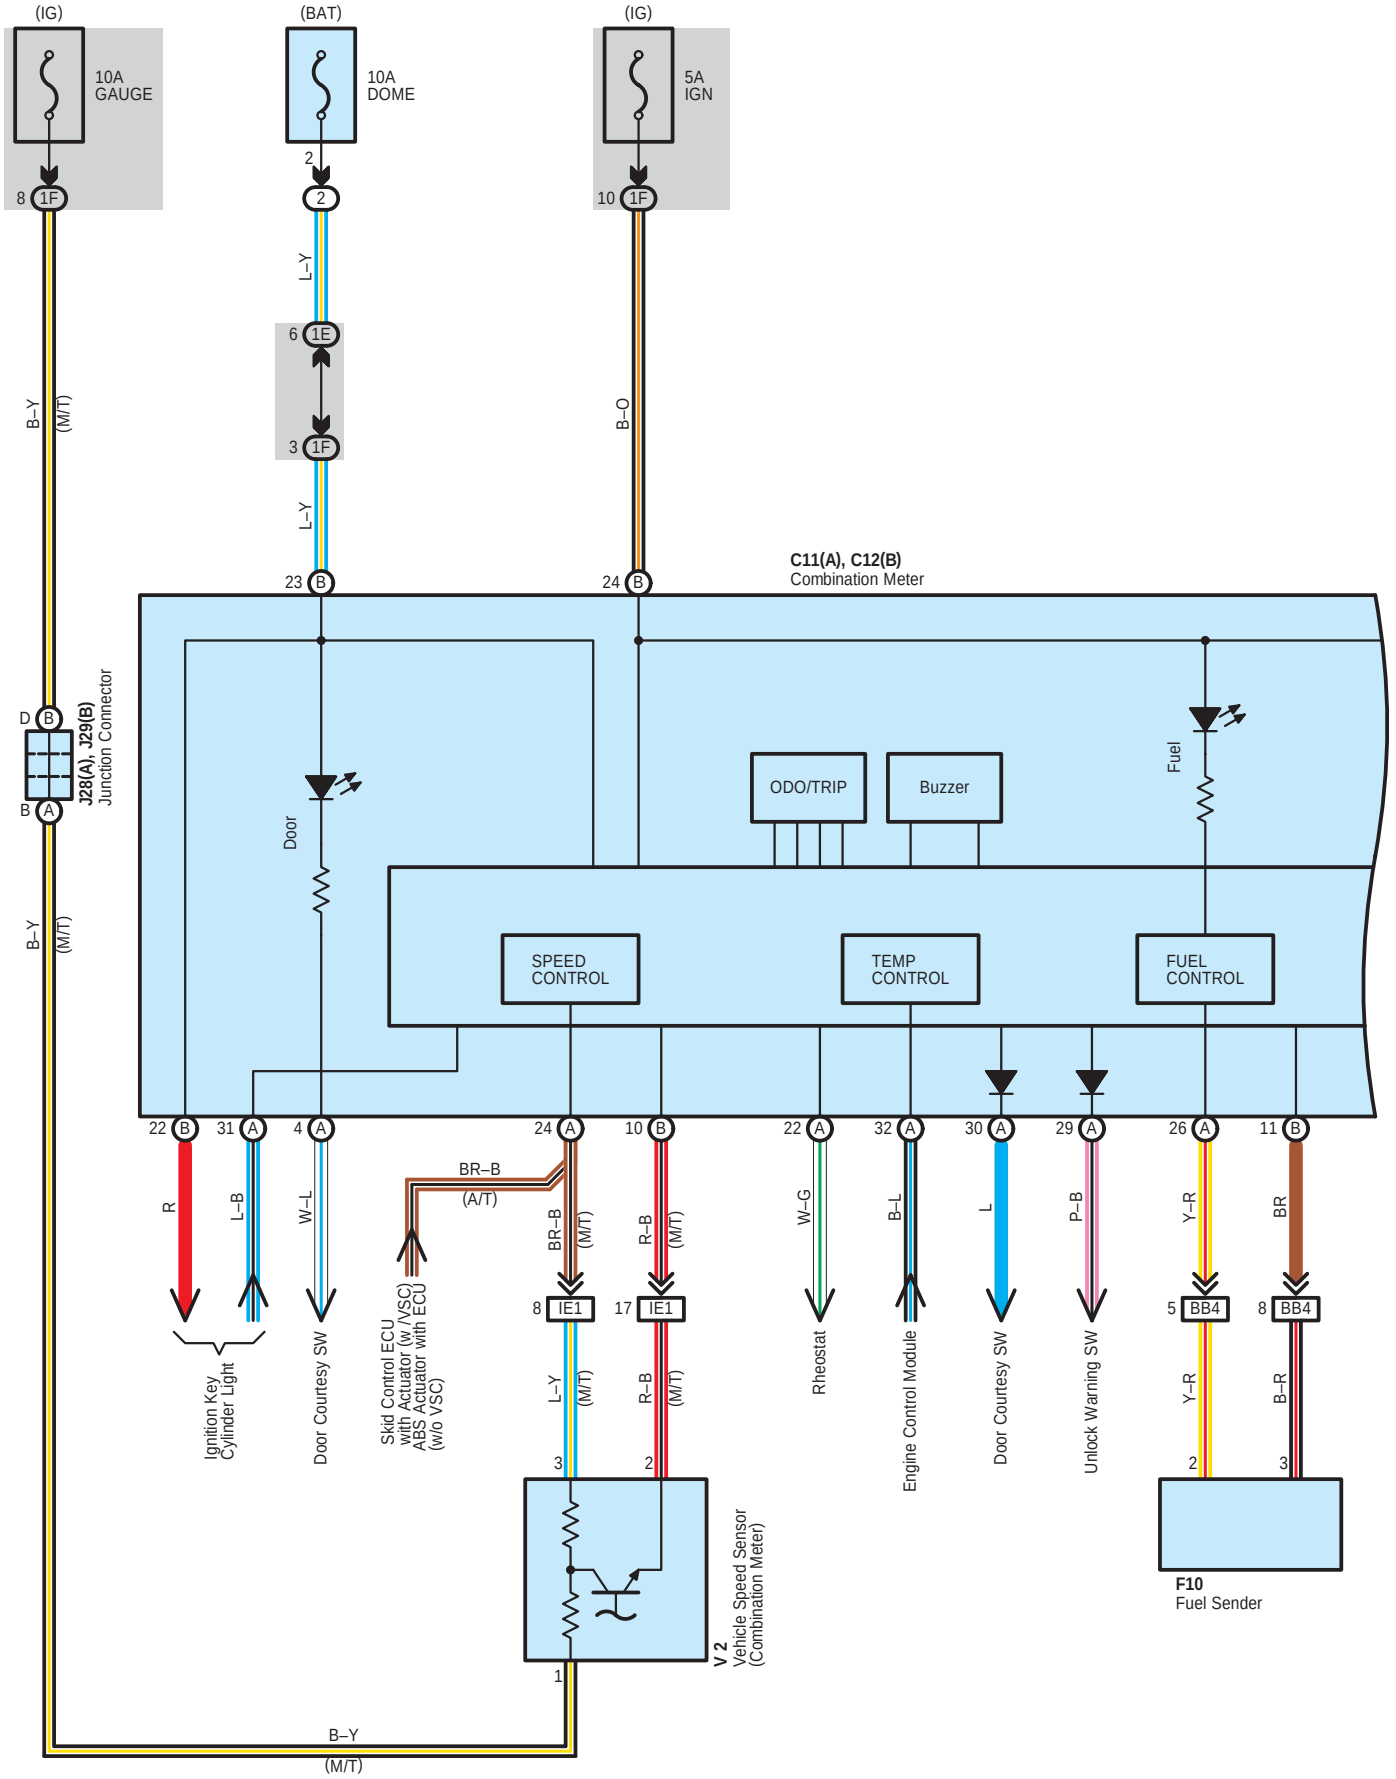
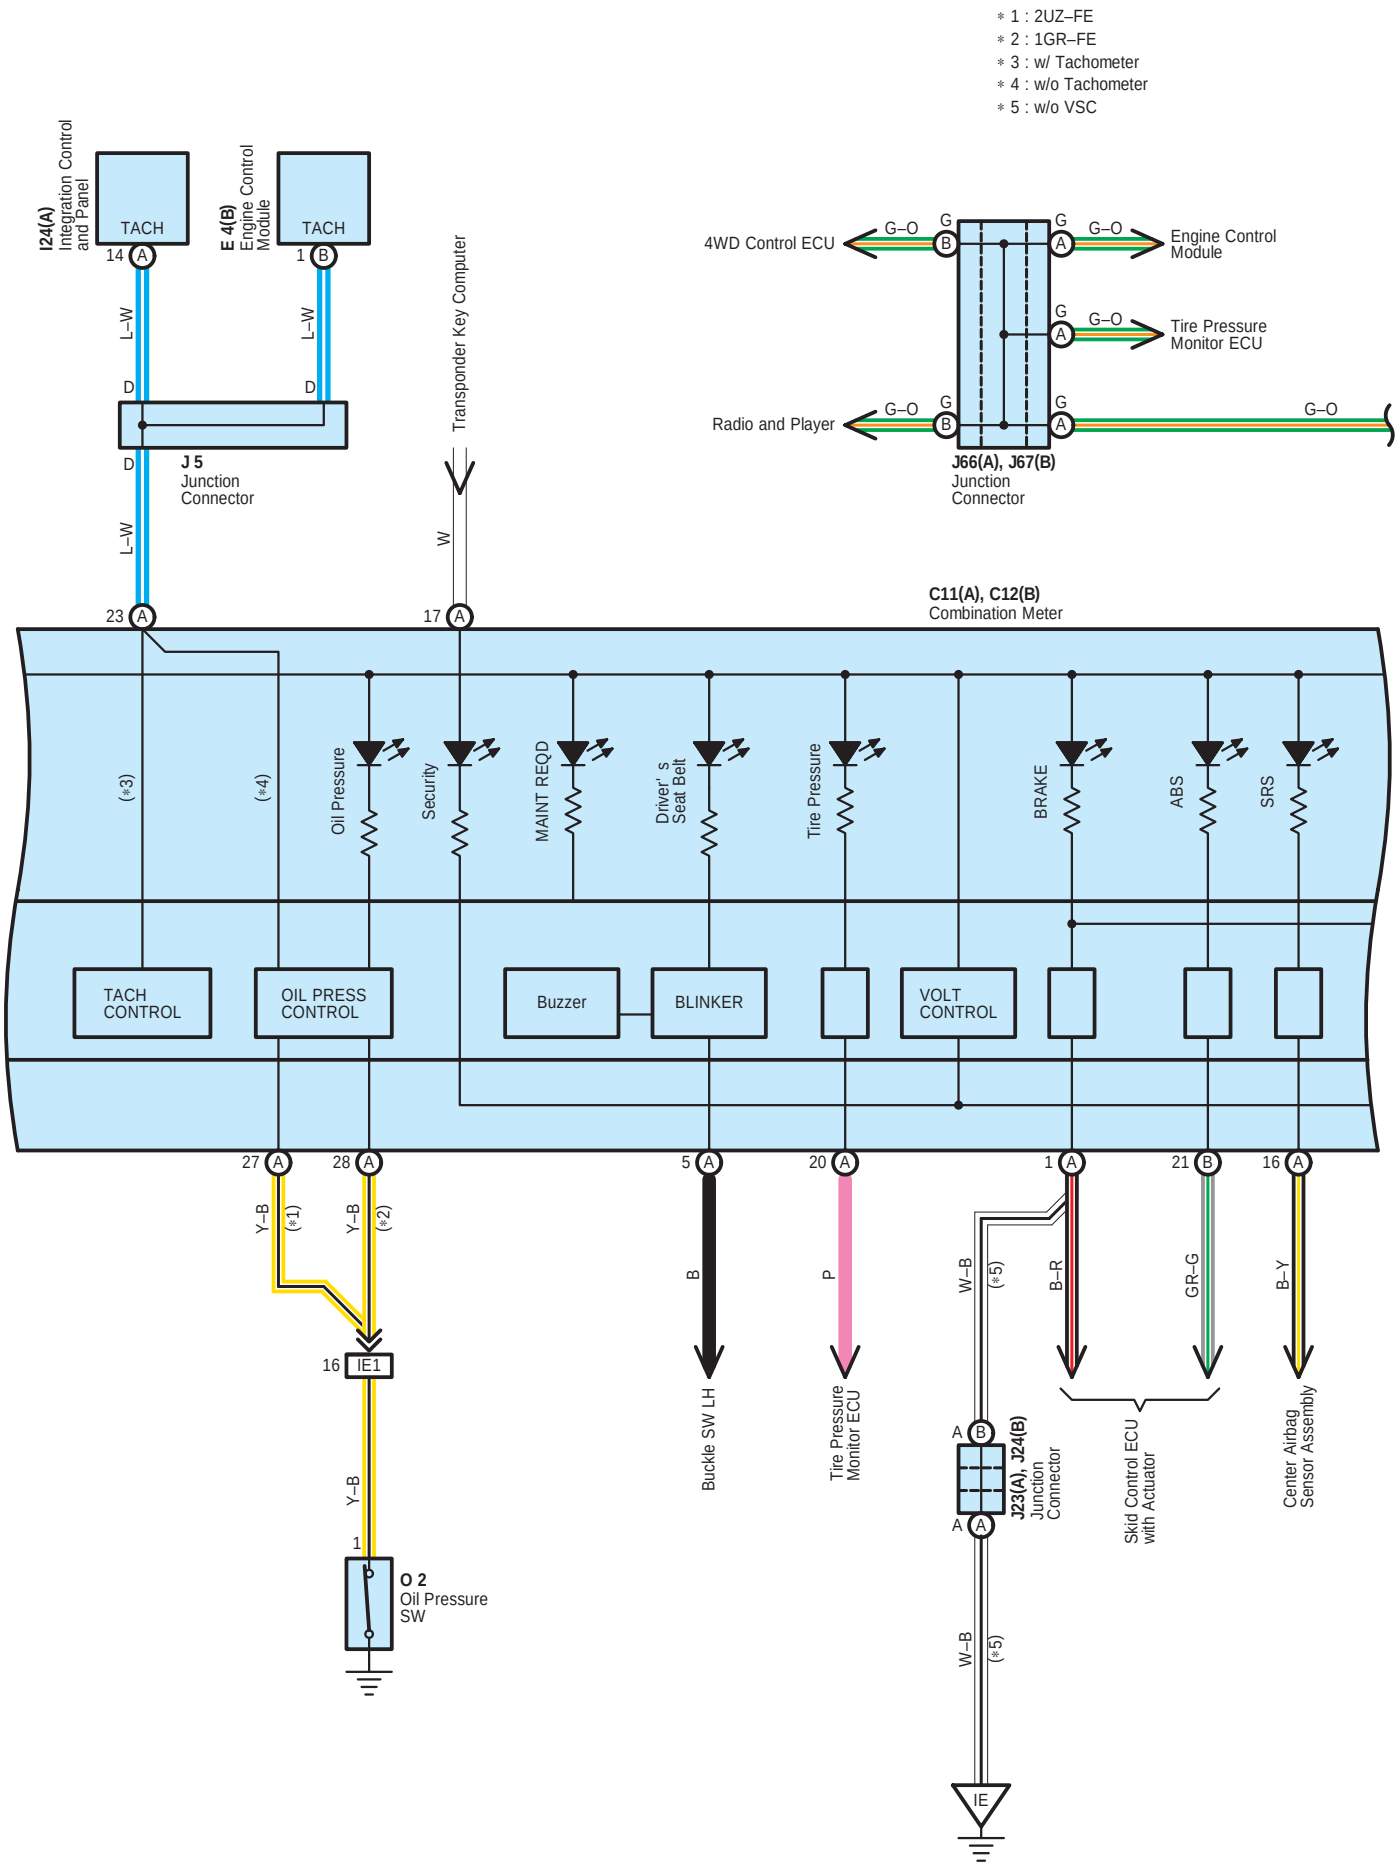
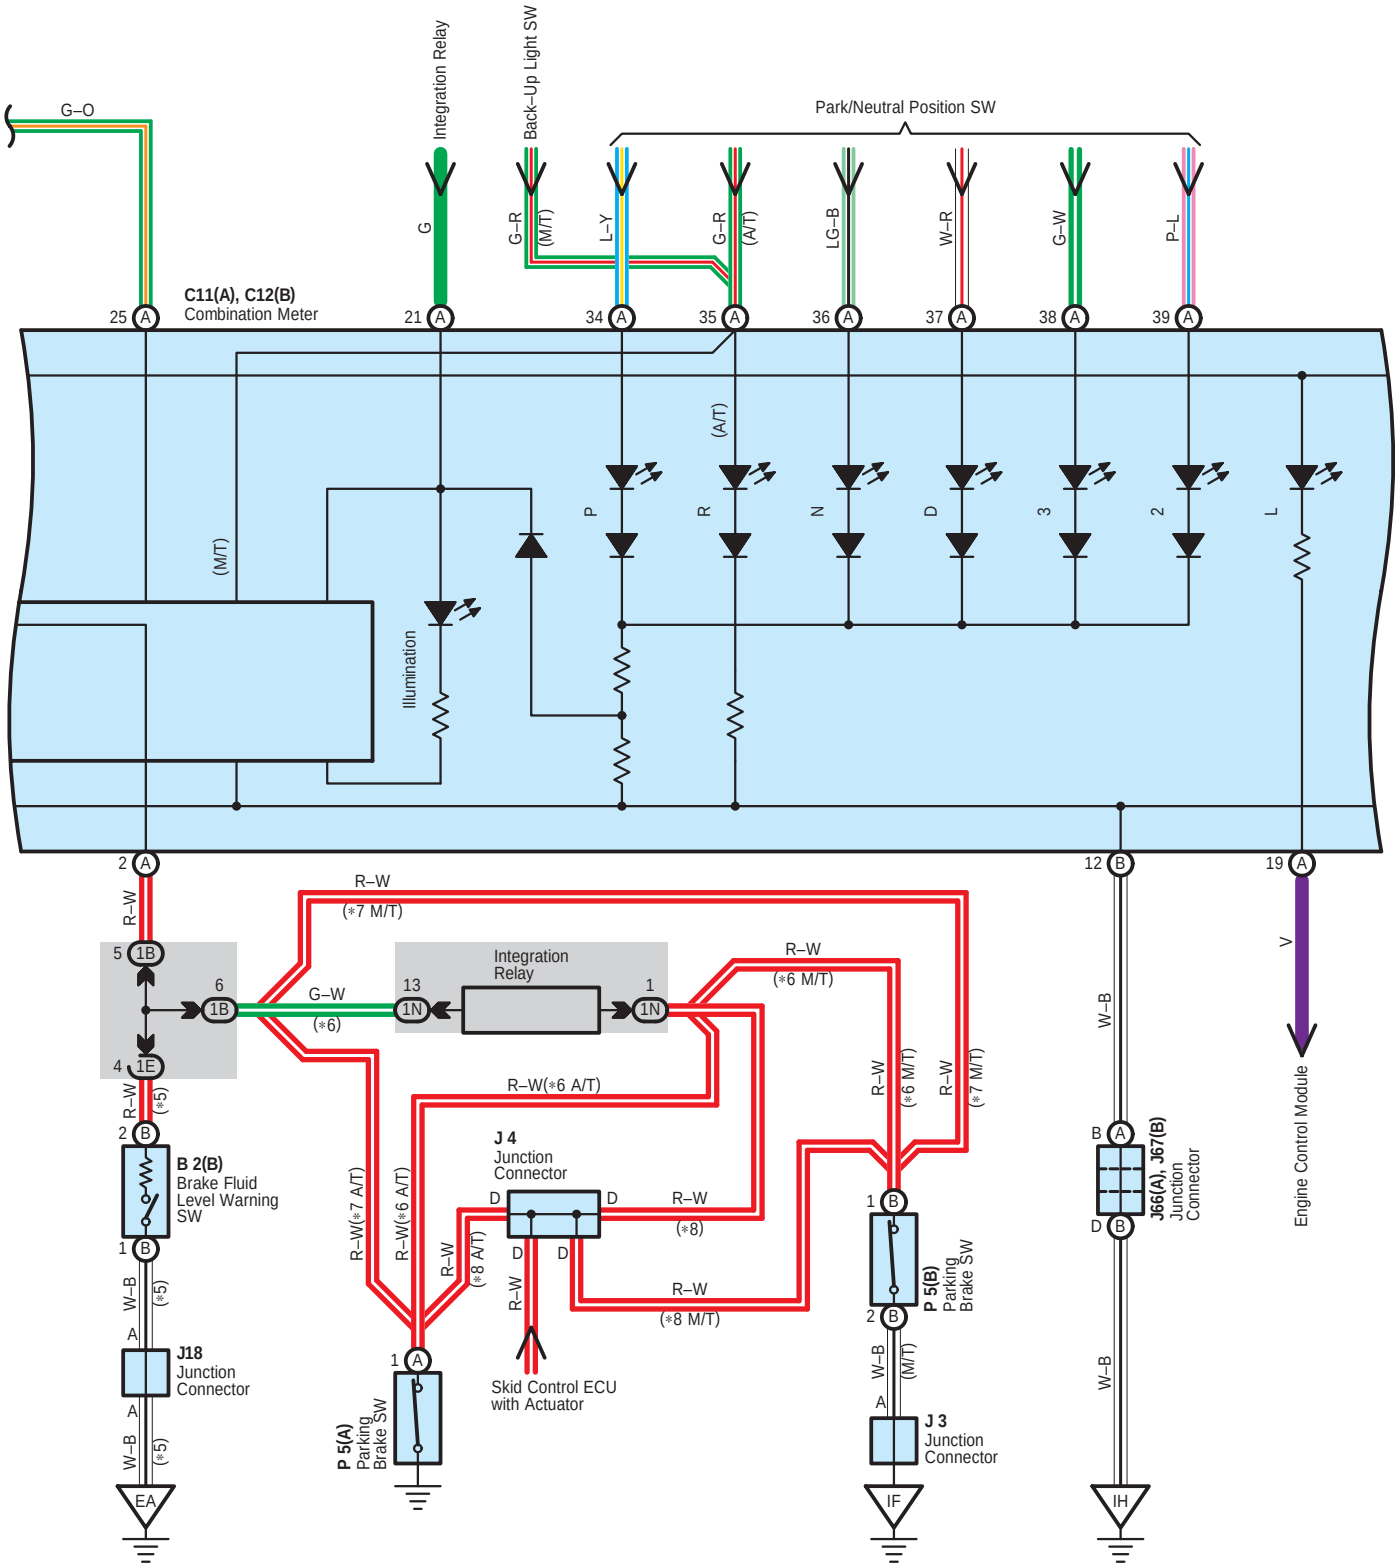
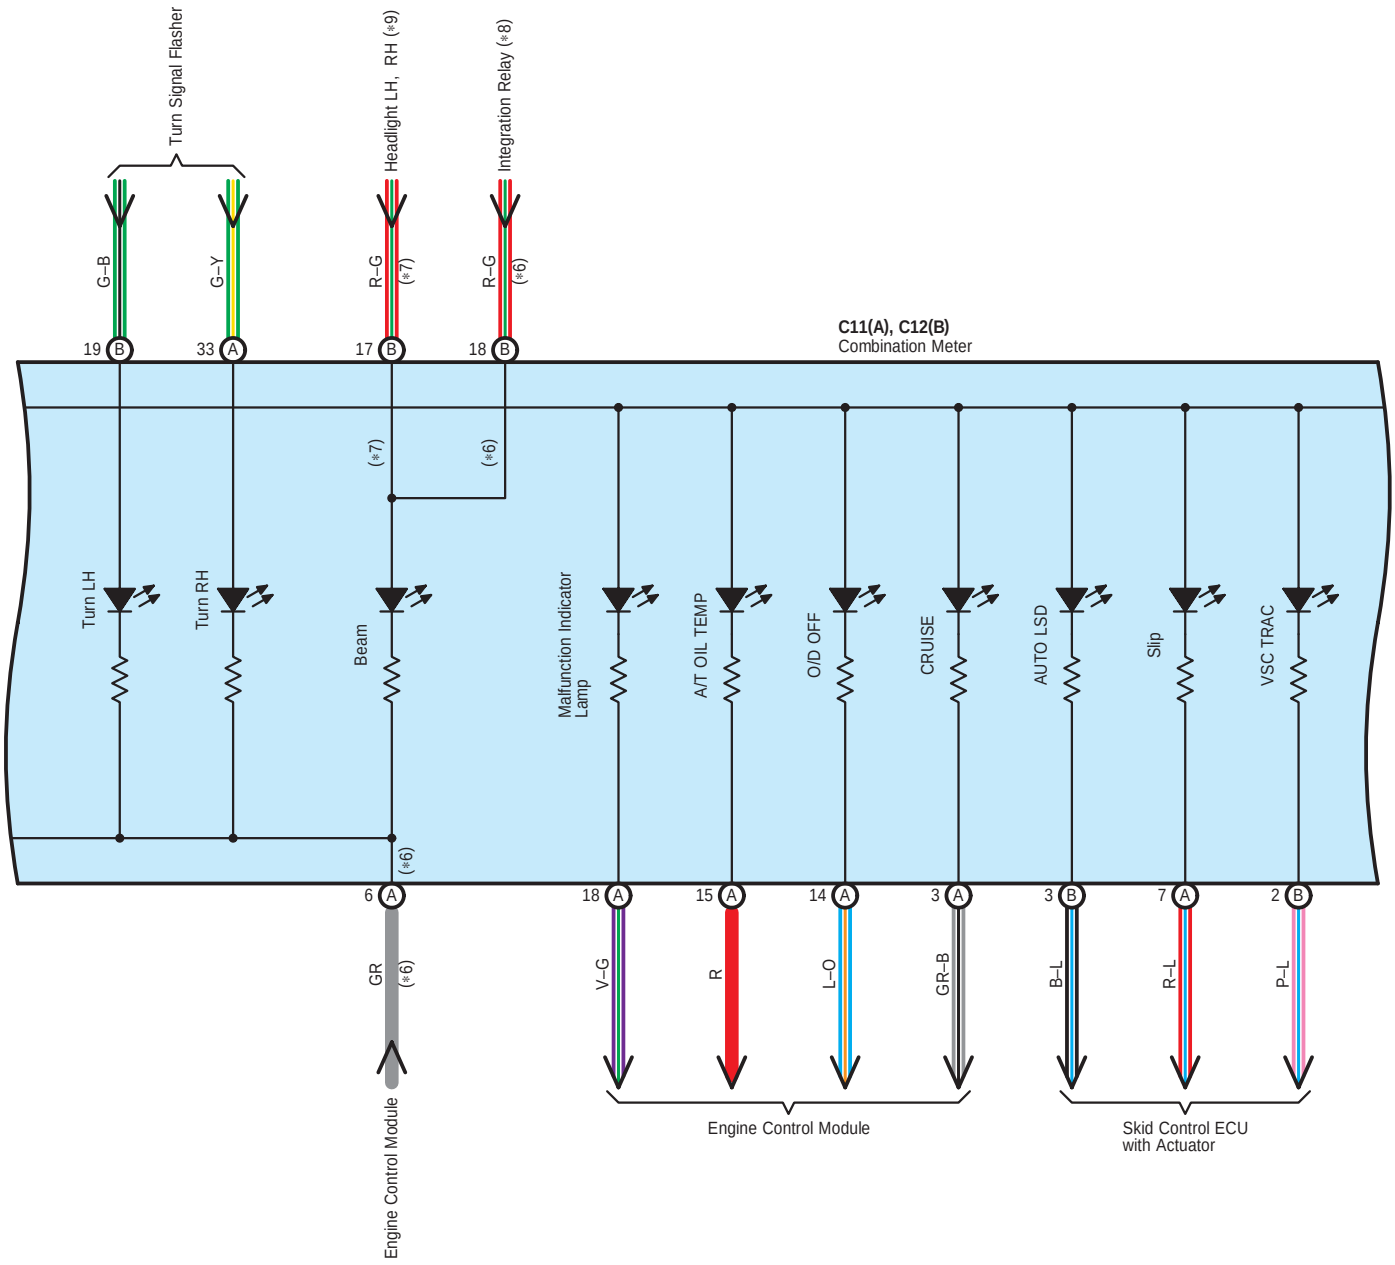
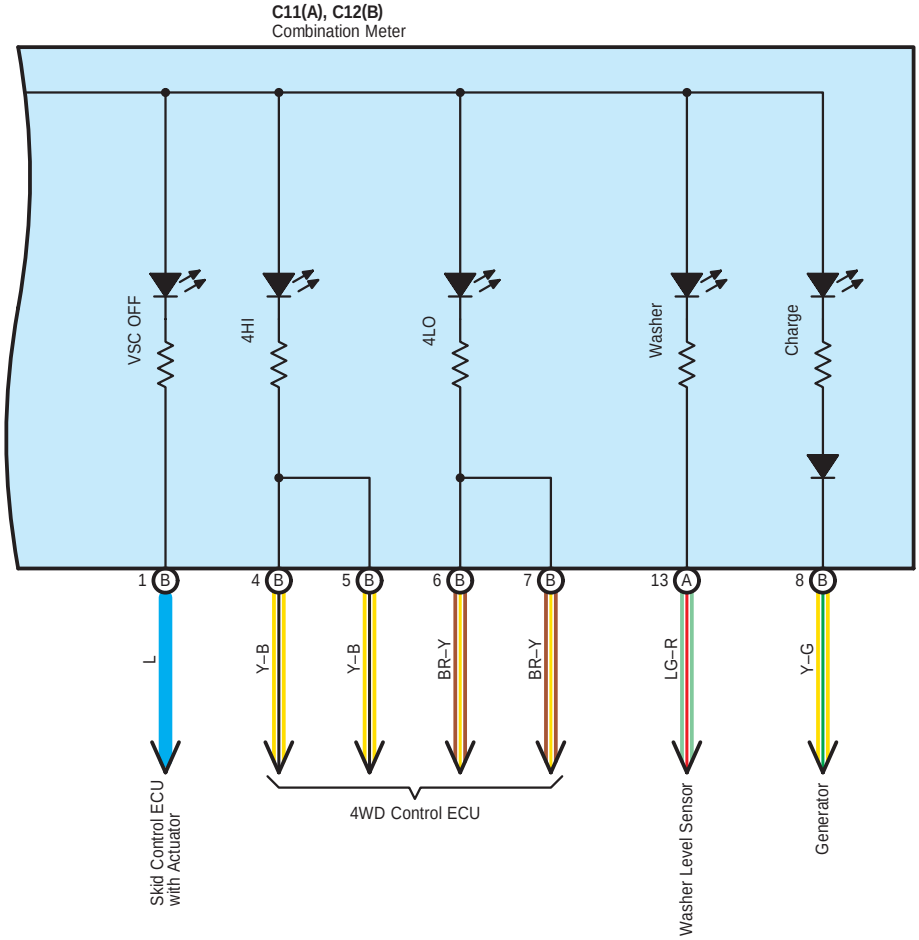

(IG)
10A GAUGE
(BAT)
10A DOME
(IG)
5A IGN
8 1F
2
10 1F
L–Y
6 1E
3 1F
L–Y
B–Y (M/T)
B–O
23 B
24 B
C11(A), C12(B)
Combination Meter
D B
B A
J28(A), J29(B)
Junction Connector
B–Y (M/T)
Door
ODO/TRIP
Buzzer
Fuel
SPEED CONTROL
TEMP CONTROL
FUEL CONTROL
22 B
31 A
4 A
24 A
10 B
22 A
32 A
30 A
29 A
26 A
11 B
R
L–B
W–L
BR–B (A/T)
BR–B (M/T)
R–B (M/T)
W–G
B–L
L
P–B
Y–R
BR
8 IE1
17 IE1
5 BB4
8 BB4
L–Y (M/T)
R–B (M/T)
Y–R
B–R
3
2
2
3
1
Ignition Key Cylinder Light
Door Courtesy SW
Skid Control ECU with Actuator (w /VSC) ABS Actuator with ECU (w/o VSC)
Rheostat
Engine Control Module
Door Courtesy SW
Unlock Warning SW
V 2
Vehicle Speed Sensor (Combination Meter)
F10
Fuel Sender
B–Y (M/T)


* 1 : 2UZ–FE
* 2 : 1GR–FE
* 3 : w/ Tachometer
* 4 : w/o Tachometer
* 5 : w/o VSC
I24(A) Integration Control and Panel
TACH
E 4(B) Engine Control Module
TACH
14 A
1 B
L–W
D
J 5 Junction Connector
Transponder Key Computer
W
23 A
17 A
4WD Control ECU
G–O
Engine Control Module
Tire Pressure Monitor ECU
Radio and Player
J66(A), J67(B) Junction Connector
C11(A), C12(B) Combination Meter
(*3)
(*4)
Oil Pressure
Security
MAINT REQD
Driver's Seat Belt
Tire Pressure
BRAKE
ABS
SRS
TACH CONTROL
OIL PRESS CONTROL
Buzzer
BLINKER
VOLT CONTROL
27 A
28 A
5 A
20 A
1 A
21 B
16 A
Y–B
(*1)
(*2)
B
P
W–B
B–R
GR–G
B–Y
16 IE1
O 2 Oil Pressure SW
Buckle SW LH
Tire Pressure Monitor ECU
J23(A), J24(B) Junction Connector
Skid Control ECU with Actuator
Center Airbag Sensor Assembly
IE


G–O
Integration Relay
Back–Up Light SW
Park/Neutral Position SW
G
G–R (M/T)
L–Y
G–R (A/T)
LG–B
W–R
G–W
P–L
C11(A), C12(B)
Combination Meter
25 A
21 A
34 A
35 A
36 A
37 A
38 A
39 A
(A/T)
(M/T)
P
R
N
D
3
2
L
Illumination
2 A
12 B
19 A
R–W
(*7 M/T)
5 1B
6 1B
4 1E
G–W
(*6)
13 1N
1 1N
Integration Relay
R–W
(*6 M/T)
R–W(*6 A/T)
R–W(*7 A/T)
R–W(*6 A/T)
R–W
(*8 A/T)
J 4
Junction Connector
D
R–W
(*8)
R–W
(*8 M/T)
R–W
(*6 M/T)
R–W
(*7 M/T)
V
W–B
Engine Control Module
2 B
B 2(B)
Brake Fluid Level Warning SW
(*5)
1 B
W–B
(*5)
A
J18
Junction Connector
A
W–B
(*5)
EA
P 5(A)
Parking Brake SW
Skid Control ECU with Actuator
1 B
P 5(B)
Parking Brake SW
2 B
W–B
(M/T)
A
J 3
Junction Connector
IF
B A
D B
J66(A), J67(B)
Junction Connector
W–B
IH

∗ 5 : w/o VSC
∗ 6 : w/ Daytime Running Light
∗ 7 : w/o Daytime Running Light
∗ 8 : w/ Daytime Running Light w/ VSC




C11(A), C12(B)
Combination Meter
VSC OFF
4HI
4LO
Washer
Charge
1 B
4 B
5 B
6 B
7 B
13 A
8 B
L
Y–B
Y–B
BR–Y
BR–Y
LG–R
Y–G
Skid Control ECU with Actuator
4WD Control ECU
Washer Level Sensor
Generator

: Parts Location

Code		See Page	Code		See Page	Code		See Page
B2	B	56 (2UZ–FE)	J3		62	J29	B	62
		58 (1GR–FE)	J4		62	J66	A	62
C11	A	60	J5		62	J67	B	62
C12	B	60	J18		57 (2UZ–FE)	O2		57 (2UZ–FE)
E4	B	61			59 (1GR–FE)			59 (1GR–FE)
F10		64 (*3)	J23	A	62	P5	A	62
		65 (*4)	J24	B	62		B	62
I24	A	61	J28	A	62	V2		59 (1GR–FE)

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1E	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1F	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1N	31 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	83	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
BB4	84 (*3)	Frame Wire and Cowl Wire (Under the Driver's Seat)
	85 (*4)	

: Ground Points

Code	See Page	Ground Points Location
EA	80 (2UZ–FE)	Front Left Fender
	81 (1GR–FE)	
IE	82	Left Kick Panel
IF		
IH	82	Right Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat