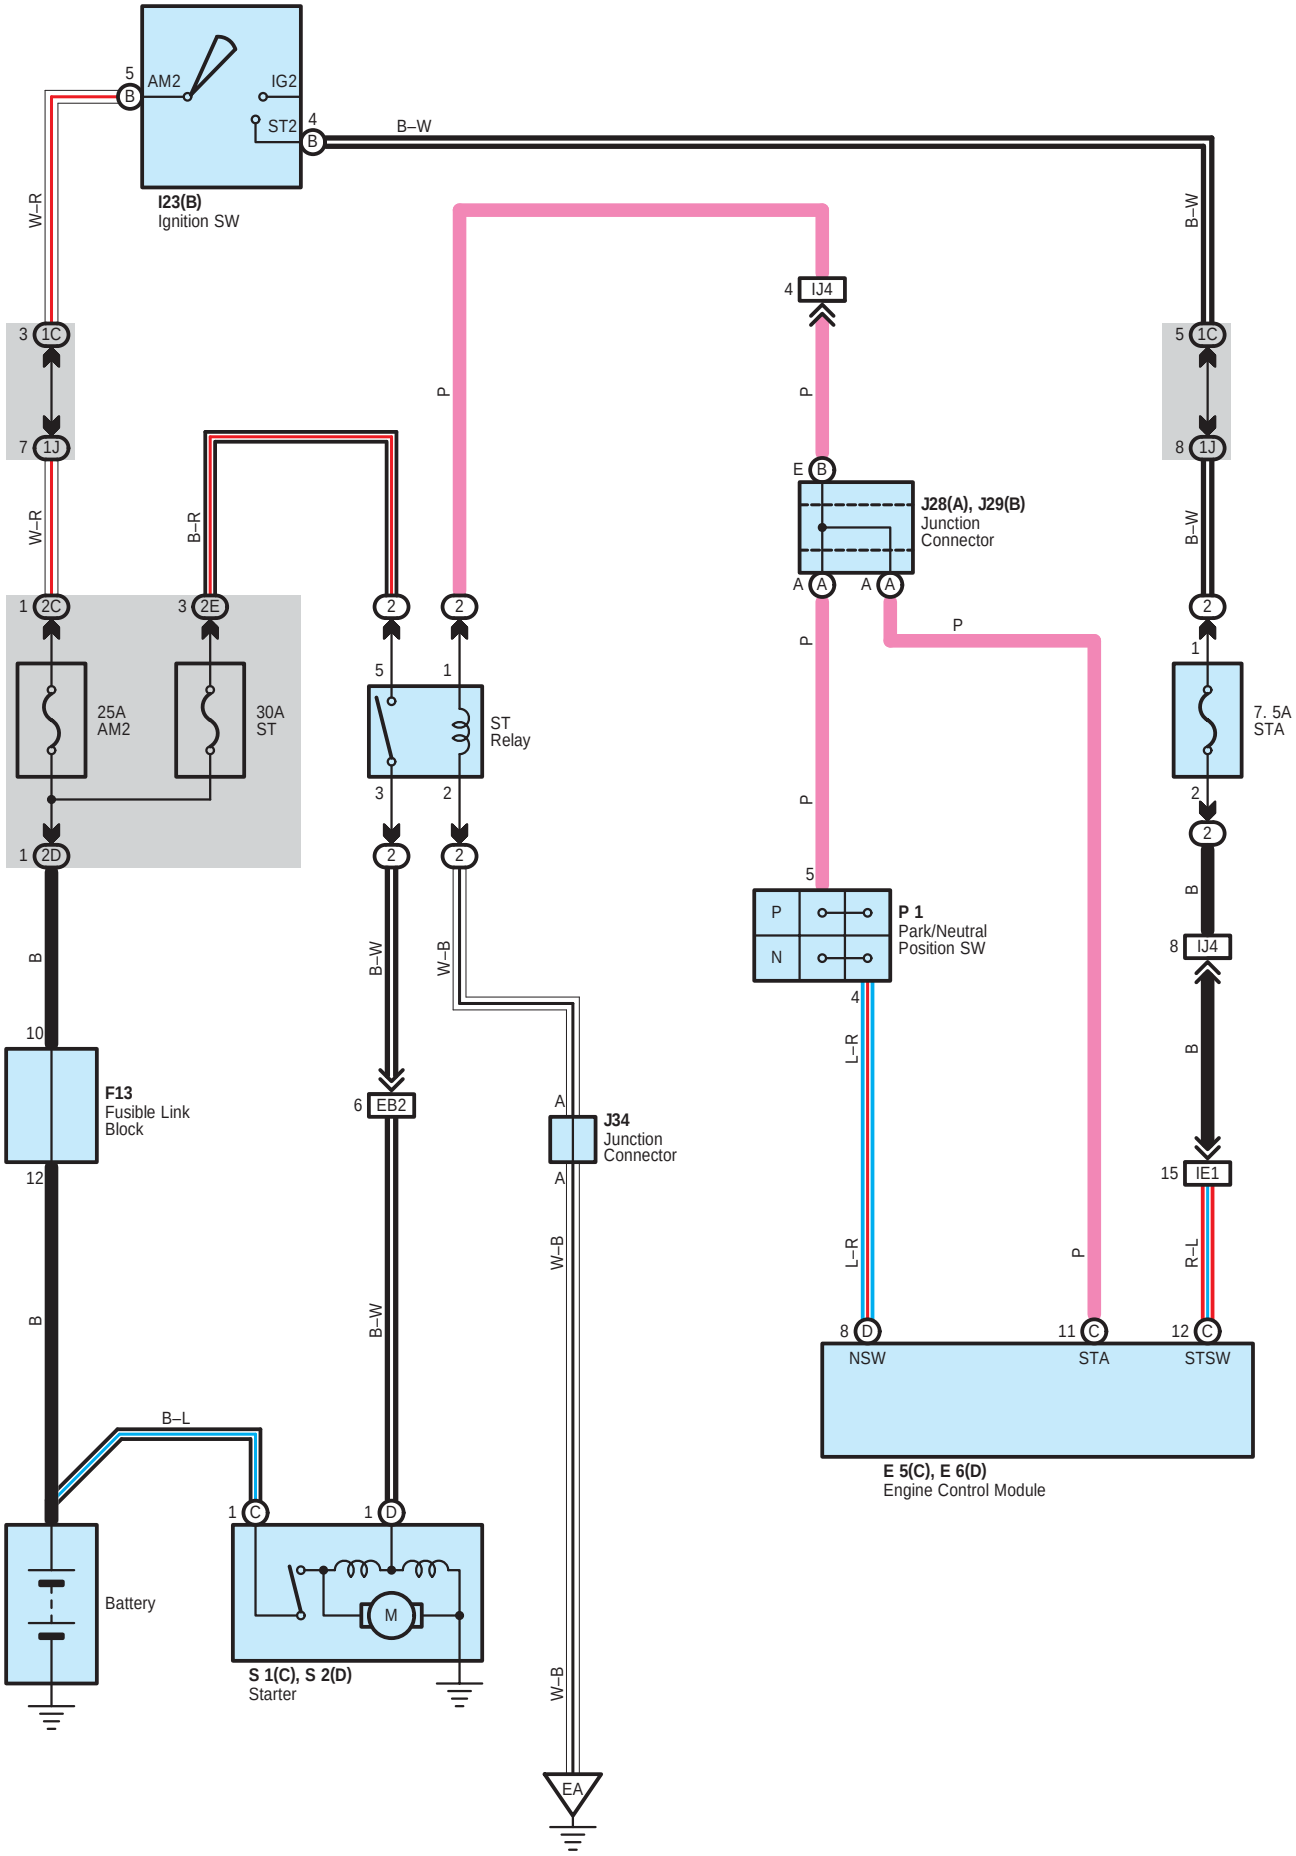

I23(B)
Ignition SW
AM2
IG2
ST2
B–W
W–R
B–R
P
J28(A), J29(B)
Junction
Connector
25A
AM2
30A
ST
ST
Relay
7. 5A
STA
P 1
Park/Neutral
Position SW
F13
Fusible Link
Block
J34
Junction
Connector
B–L
L–R
R–L
W–B
B
Battery
S 1(C), S 2(D)
Starter
M
E 5(C), E 6(D)
Engine Control Module
NSW
STA
STSW
EA

**: Parts Location**

| Code | | See Page | Code | | See Page | Code | | See Page |
|---|---|---|---|---|---|---|---|---|
| E5 | C | 73 | J28 | A | 74 | S1 | C | 71 |
| E6 | D | 73 | J29 | B | 74 | S2 | D | 71 |
| F13 | | 70 | J34 | | 71 | | | |
| I23 | B | 73 | P1 | | 71 | | | |

**: Relay Blocks**

| Code | See Page | Relay Blocks (Relay Block Location) |
|---|---|---|
| 2 | 42 | Engine Room R/B No.2 (Engine Compartment Left) |

**: Junction Block and Wire Harness Connector**

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|---|---|---|
| 1C | 49 | Cowl Wire and Driver Side J/B (Lower Finish Panel) |
| 1J | 49 | Engine Room Main Wire and Driver Side J/B (Lower Finish Panel) |
| 2C | 45 | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left) |
| 2D | | |
| 2E | | |

**: Connector Joining Wire Harness and Wire Harness**

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|---|
| EB2 | 90 | Engine No.2 Wire and Engine Room Main Wire (Under the Engine Room R/B) |
| IE1 | 93 | Engine Wire and Cowl Wire (Right Side of Instrument Panel) |
| IJ4 | 93 | Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH) |

**: Ground Points**

| Code | See Page | Ground Points Location |
|---|---|---|
| EA | 90 | Front Left Fender Apron |