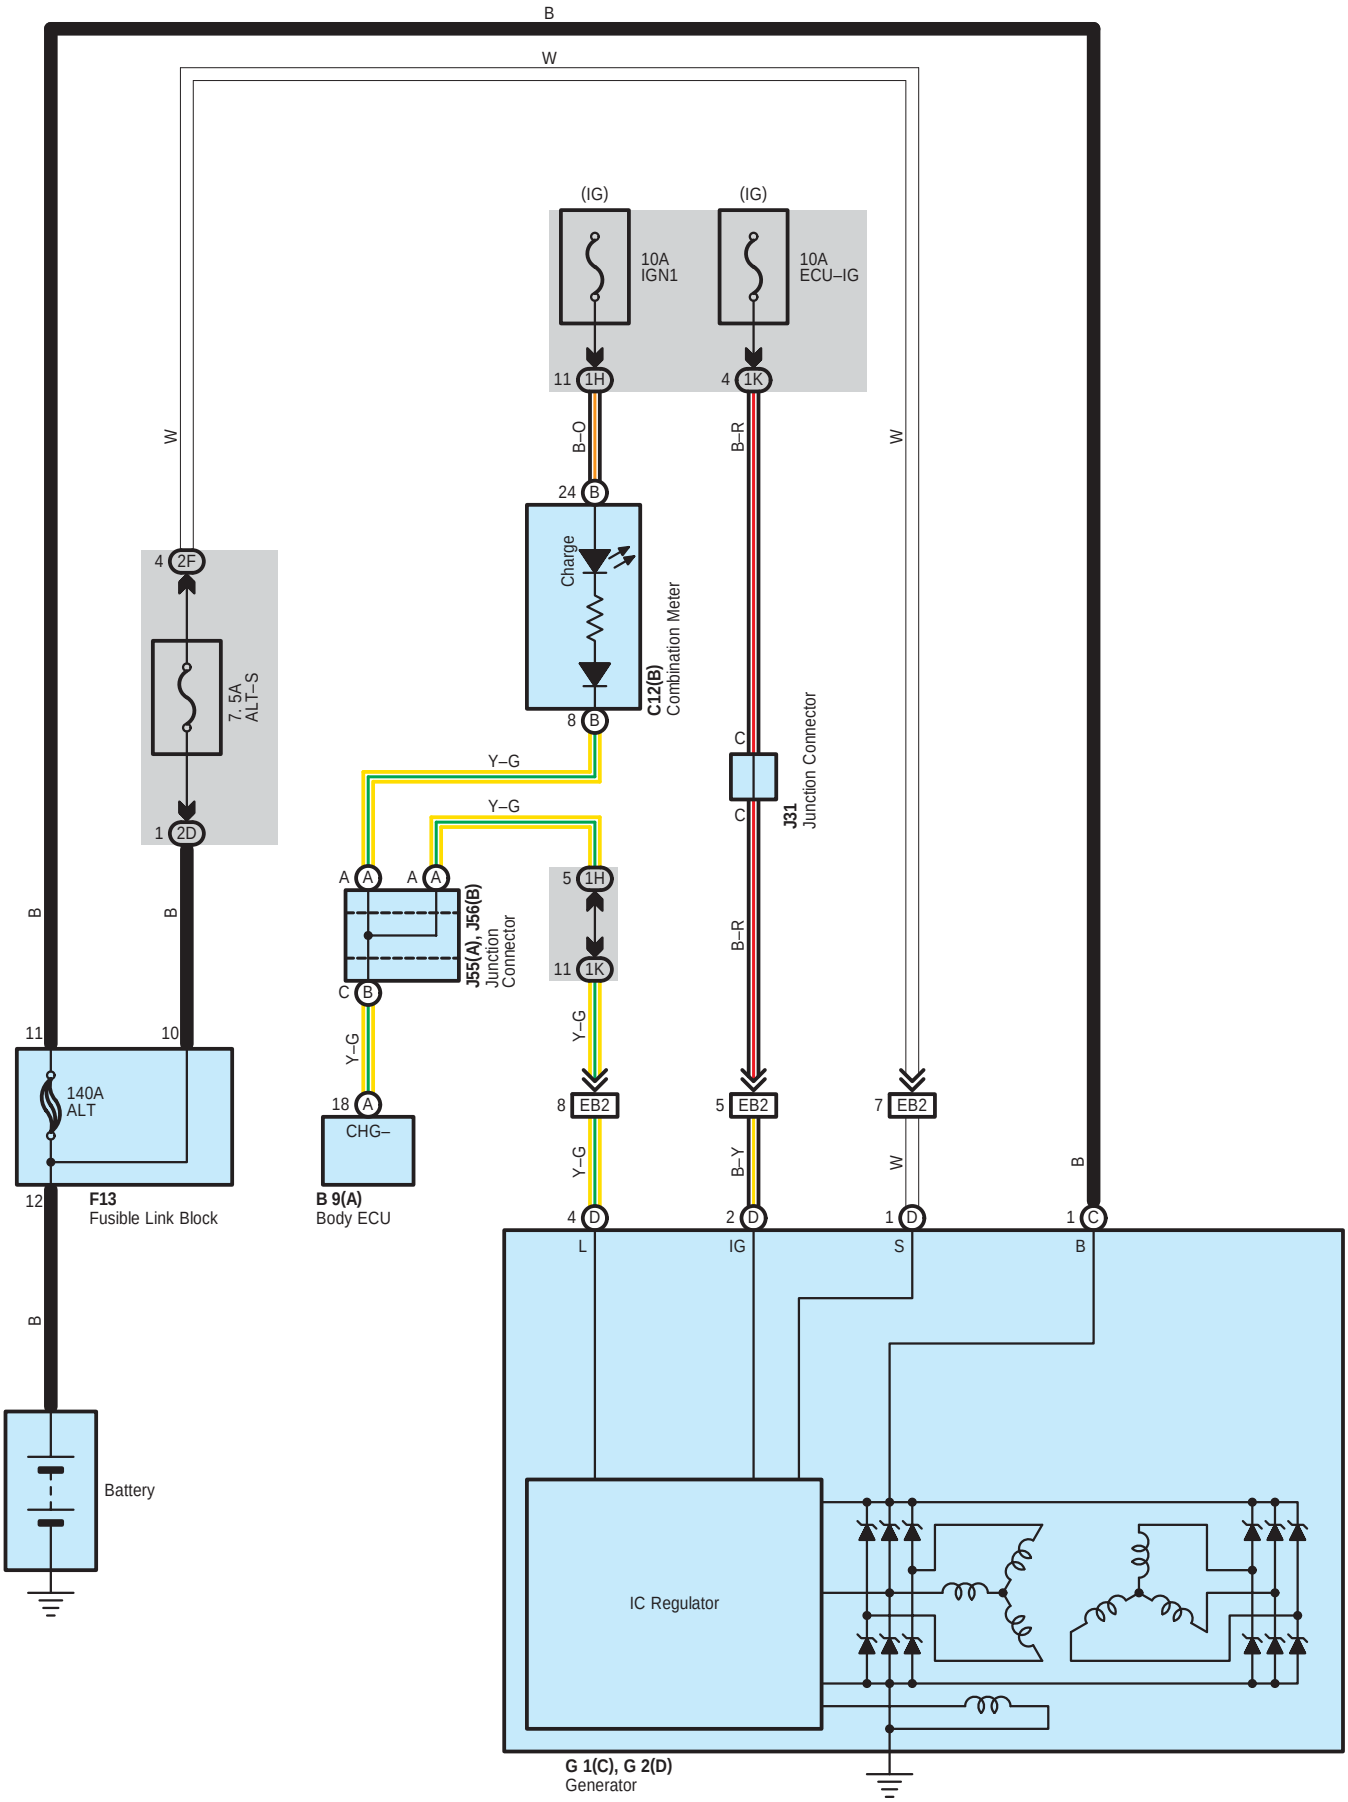

B
W
(IG)
10A
IGN1
(IG)
10A
ECU–IG
11 1H
4 1K
B–O
B–R
W
24 B
Charge
C12(B)
Combination Meter
8 B
4 2F
7. 5A
ALT–S
1 2D
Y–G
Y–G
C
C
J31
Junction Connector
A A A
J55(A), J56(B)
Junction
Connector
C B
5 1H
11 1K
B–R
Y–G
18 A
CHG–
B 9(A)
Body ECU
8 EB2
5 EB2
7 EB2
Y–G
B–Y
W
B
4 D
2 D
1 D
1 C
L
IG
S
B
11
10
140A
ALT
12
F13
Fusible Link Block
B
Battery
IC Regulator
G 1(C), G 2(D)
Generator

: **Parts Location**

Code		See Page	Code		See Page	Code		See Page
B9	A	72	G1	C	70	J55	A	74
C12	B	72	G2	D	70	J56	B	74
F13		70	J31		71			

: **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1K	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2D	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		

: **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	90	Engine No.2 Wire and Engine Room Main Wire (Under the Engine Room R/B)