
Headlight without DRL (Double Cab)

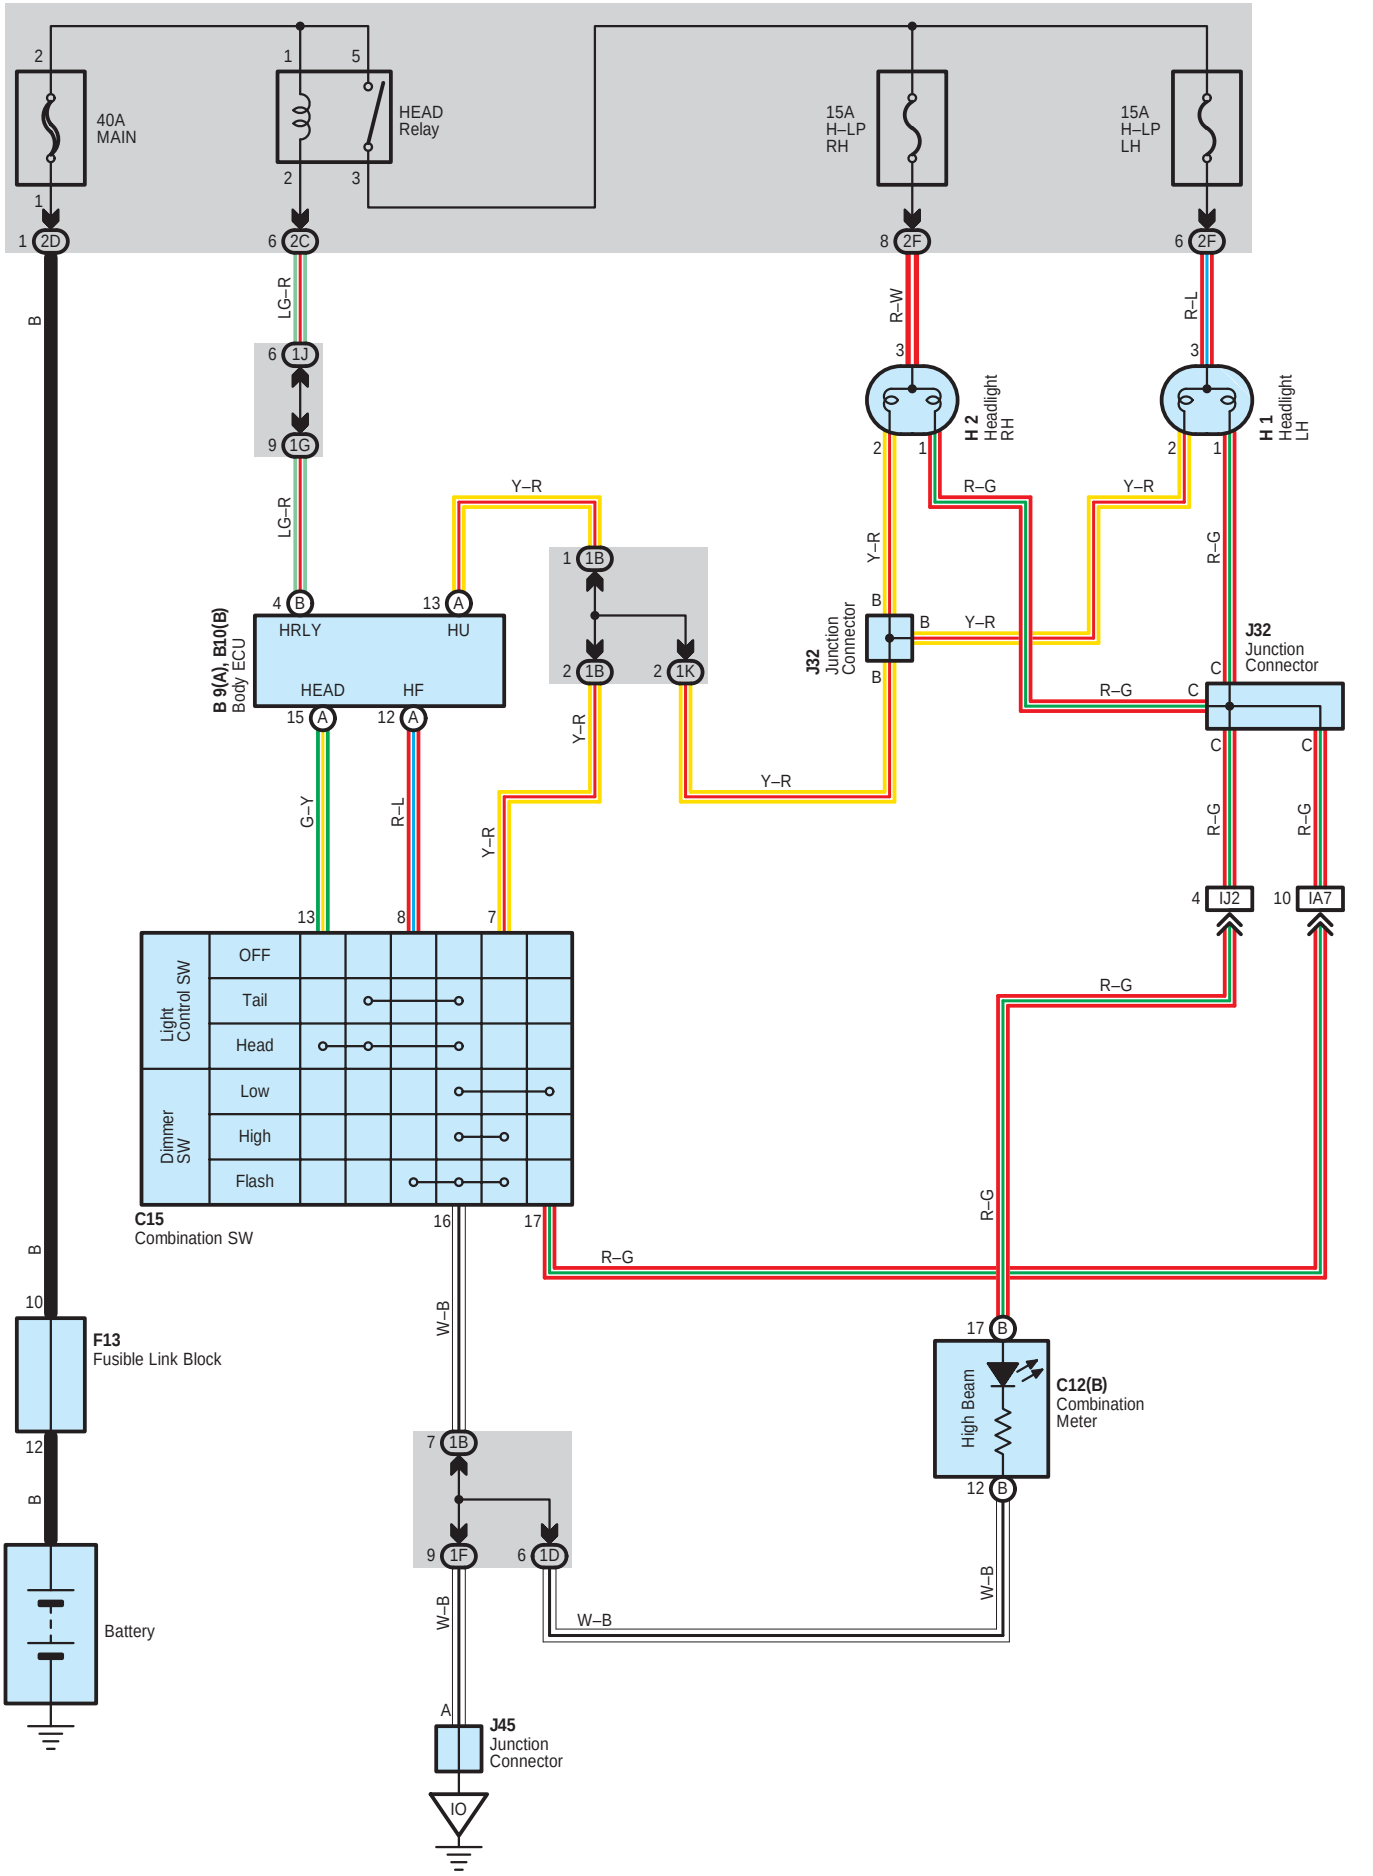

: Parts Location

Code		See Page	Code	See Page	Code	See Page
B9	A	72	C15	72	H2	70
B10	B	72	F13	70	J32	71
C12	B	72	H1	70	J45	74

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1D		
1F		
1G		
1J	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1K		
2C	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D		
2F		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA7	92	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IJ2	93	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)

: Ground Points

Code	See Page	Ground Points Location
IO	92	Left Kick Panel