
Turn Signal and Hazard Warning Light (Double Cab)

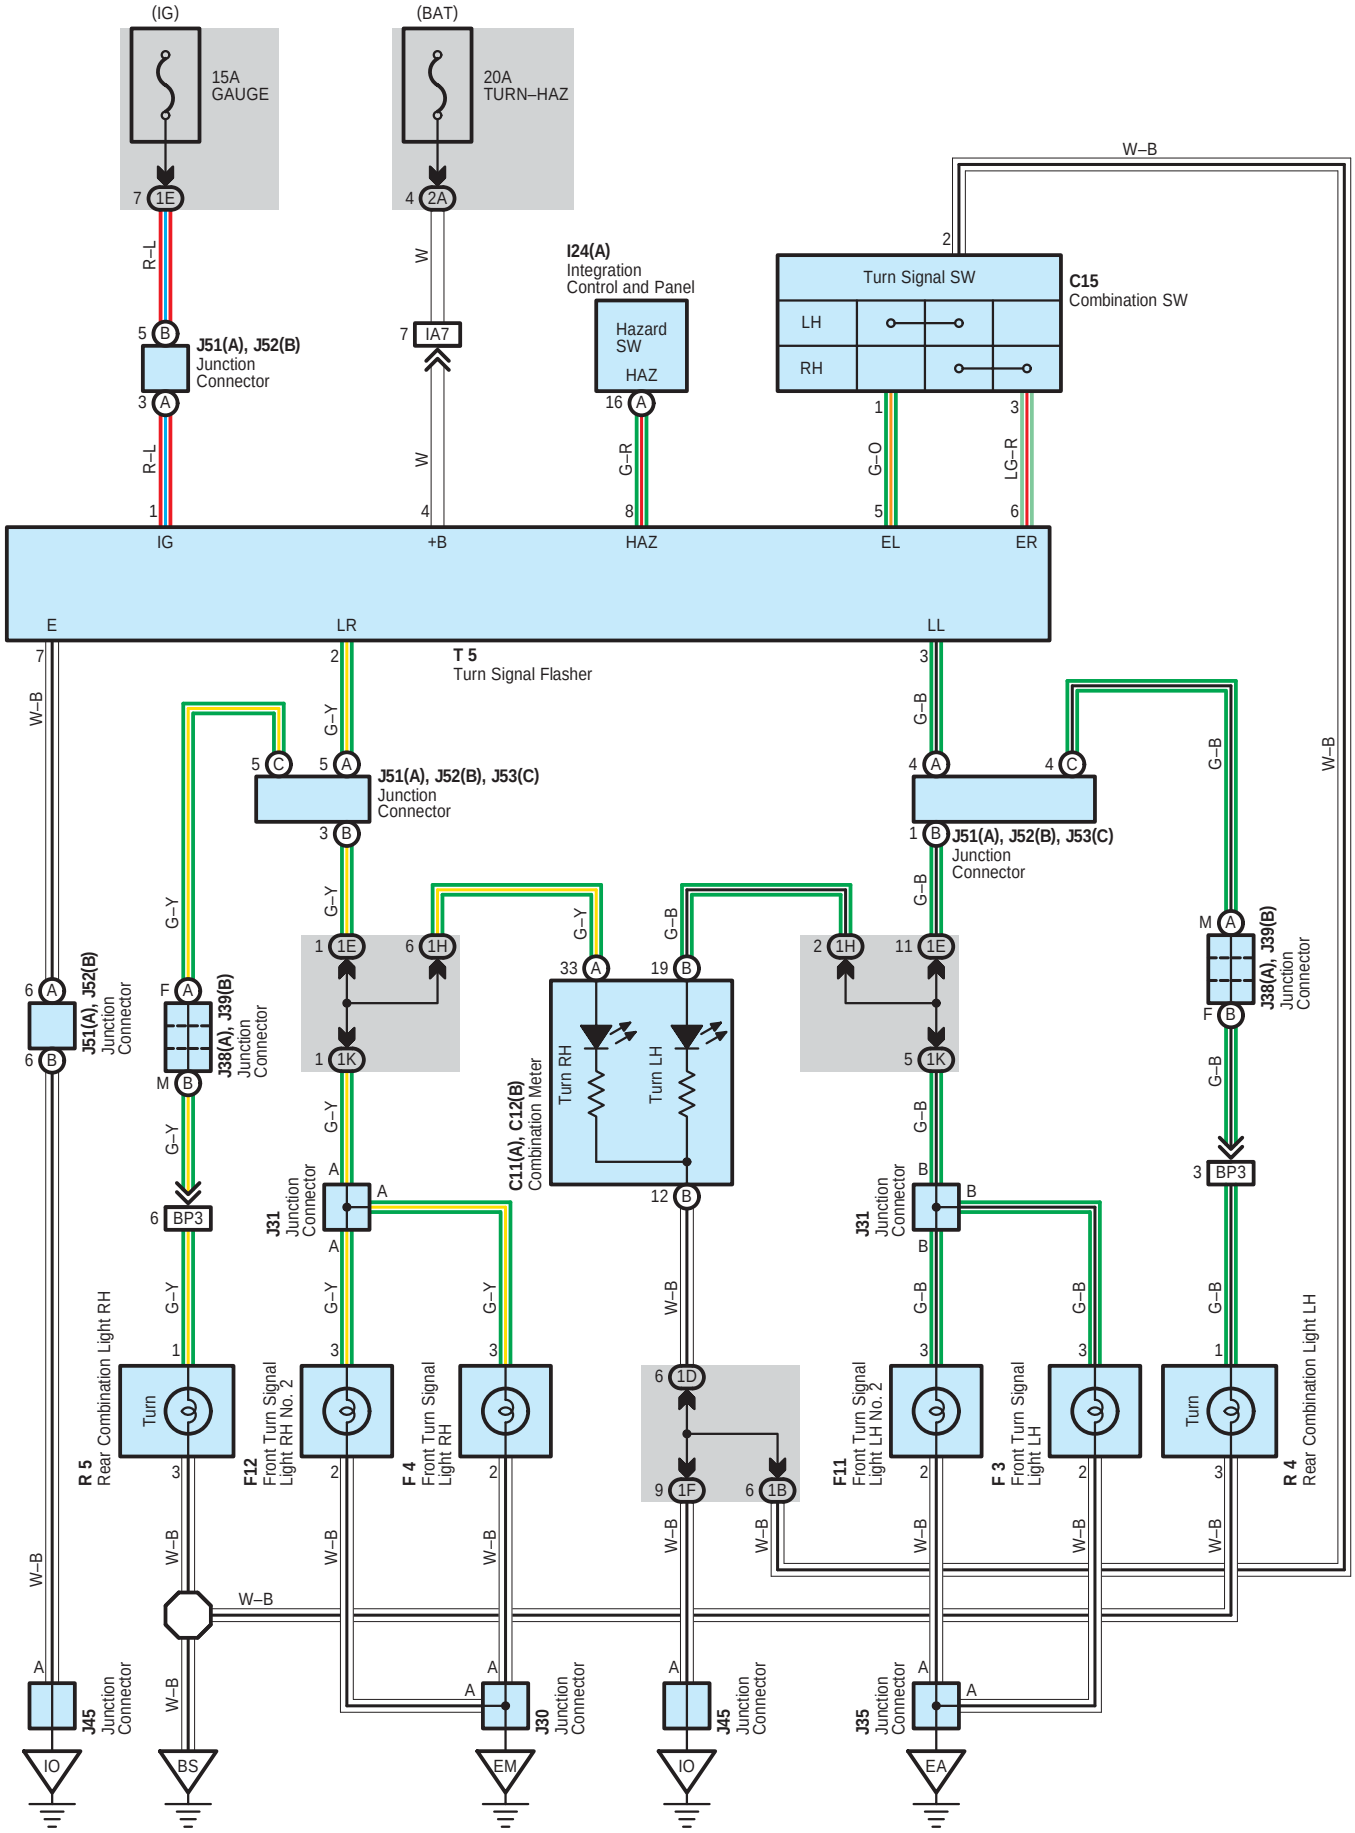

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C11 A	72	I24 A	73	J51 A	74
C12 B	72	J30	71	J52 B	74
C15	72	J31	71	J53 C	74
F3	70	J35	71	R4	77
F4	70	J38 A	74	R5	77
F11	70	J39 B	74	T5	75
F12	70	J45	74		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1D		
1E		
1F		
1H		
1K	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2A	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA7	92	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
BP3	94	Frame Wire and Floor No.2 Wire (Under the Driver's Seat)

: Ground Points

Code	See Page	Ground Points Location
EA	90	Front Left Fender Apron
EM	90	Radiator Side Support RH
IO	92	Left Kick Panel
BS	94	Surrounding of the Front of the Fuel Tank