Trailer Towing (Double Cab)

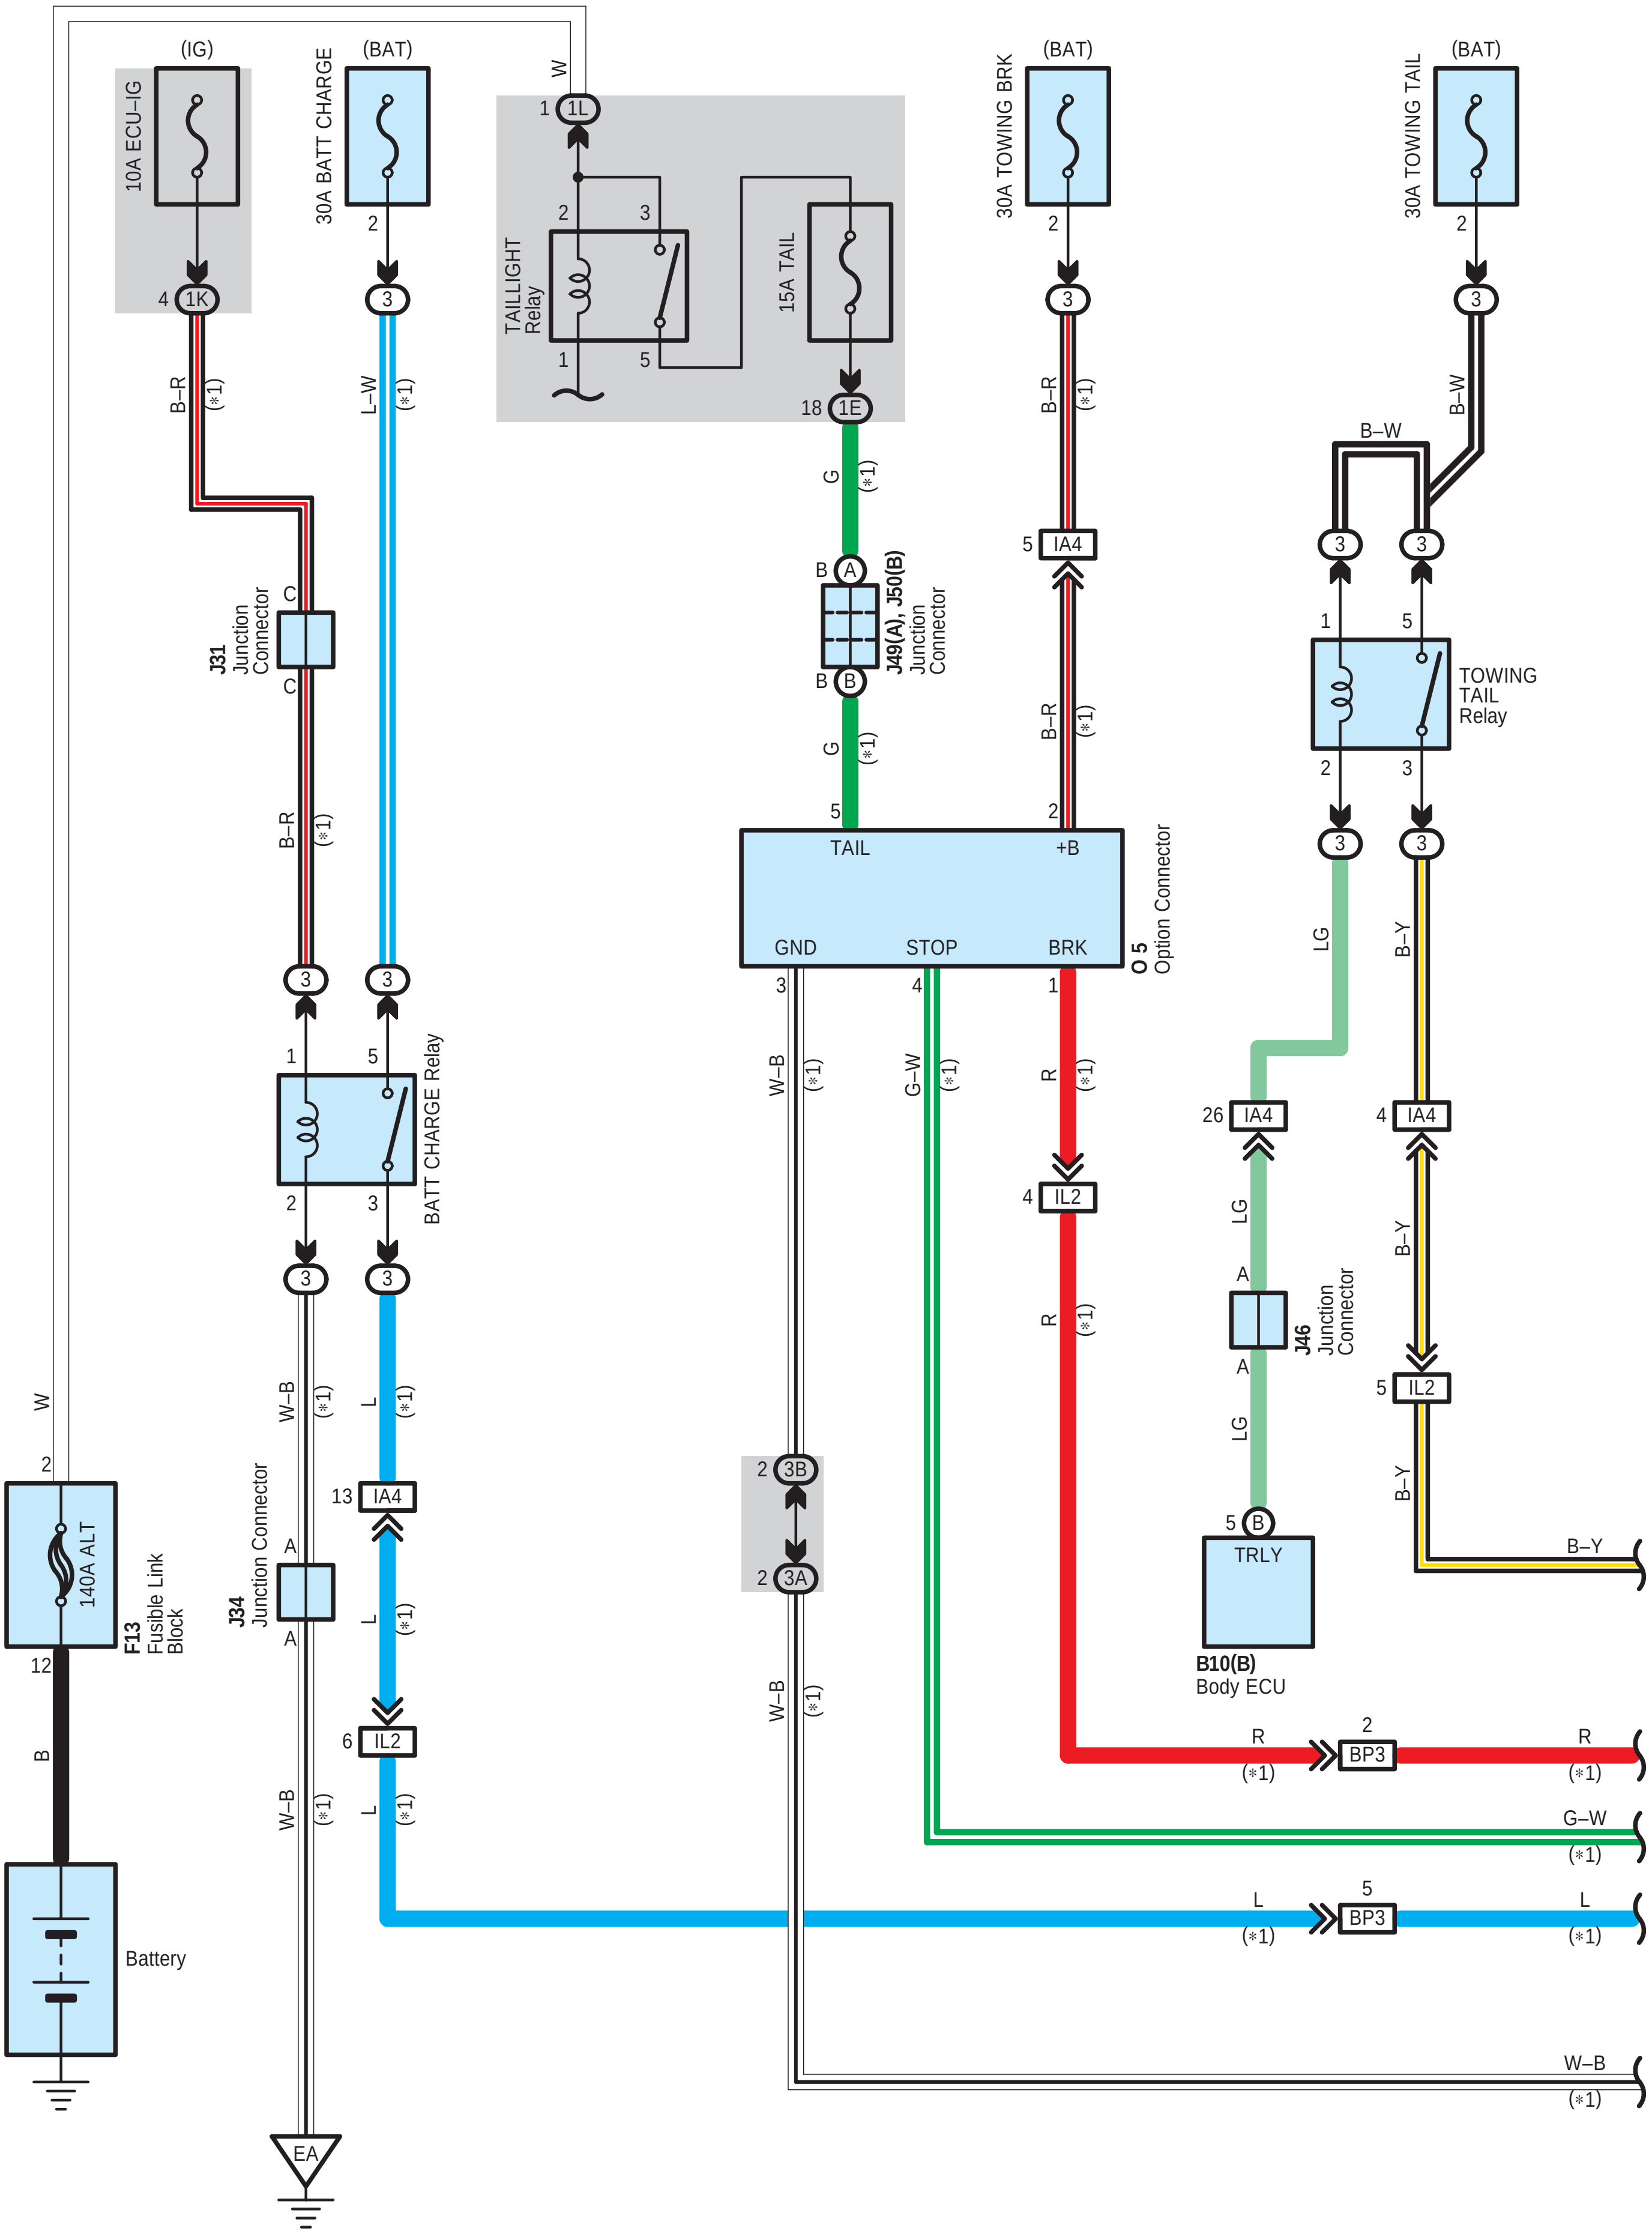

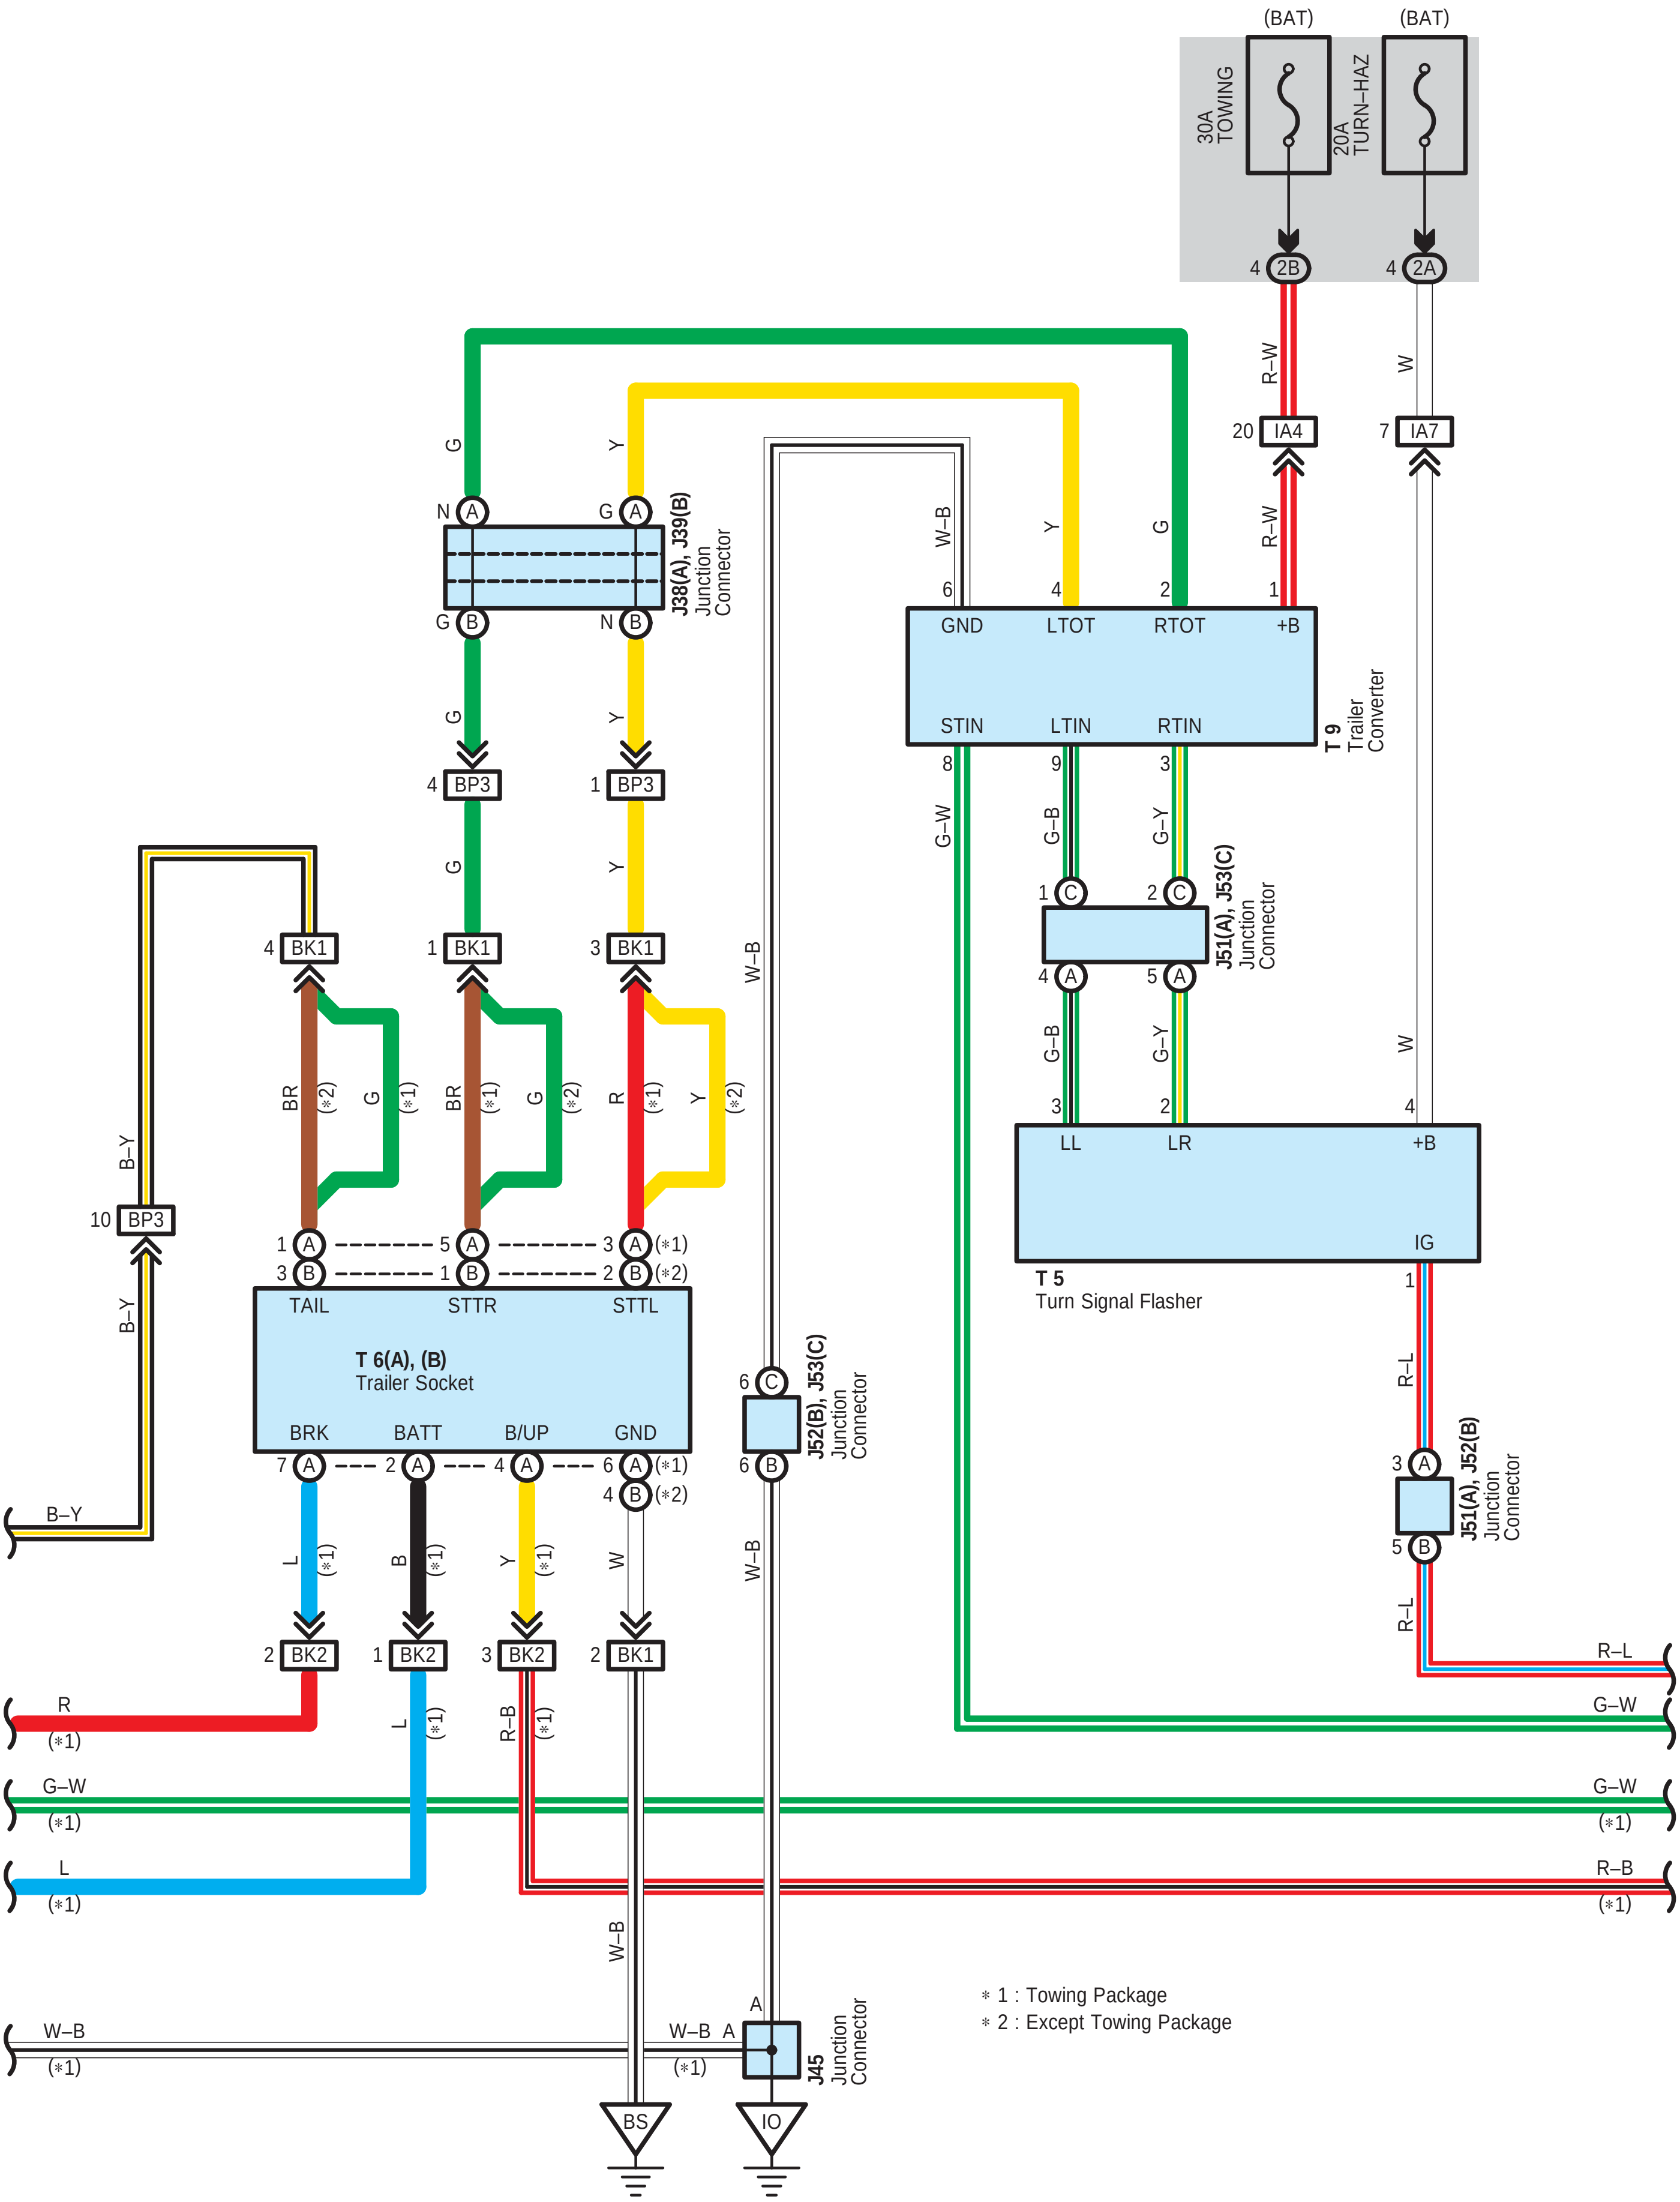

∗ 1 : Towing Package
∗ 2 : Except Towing Package

Trailer Towing (Double Cab)

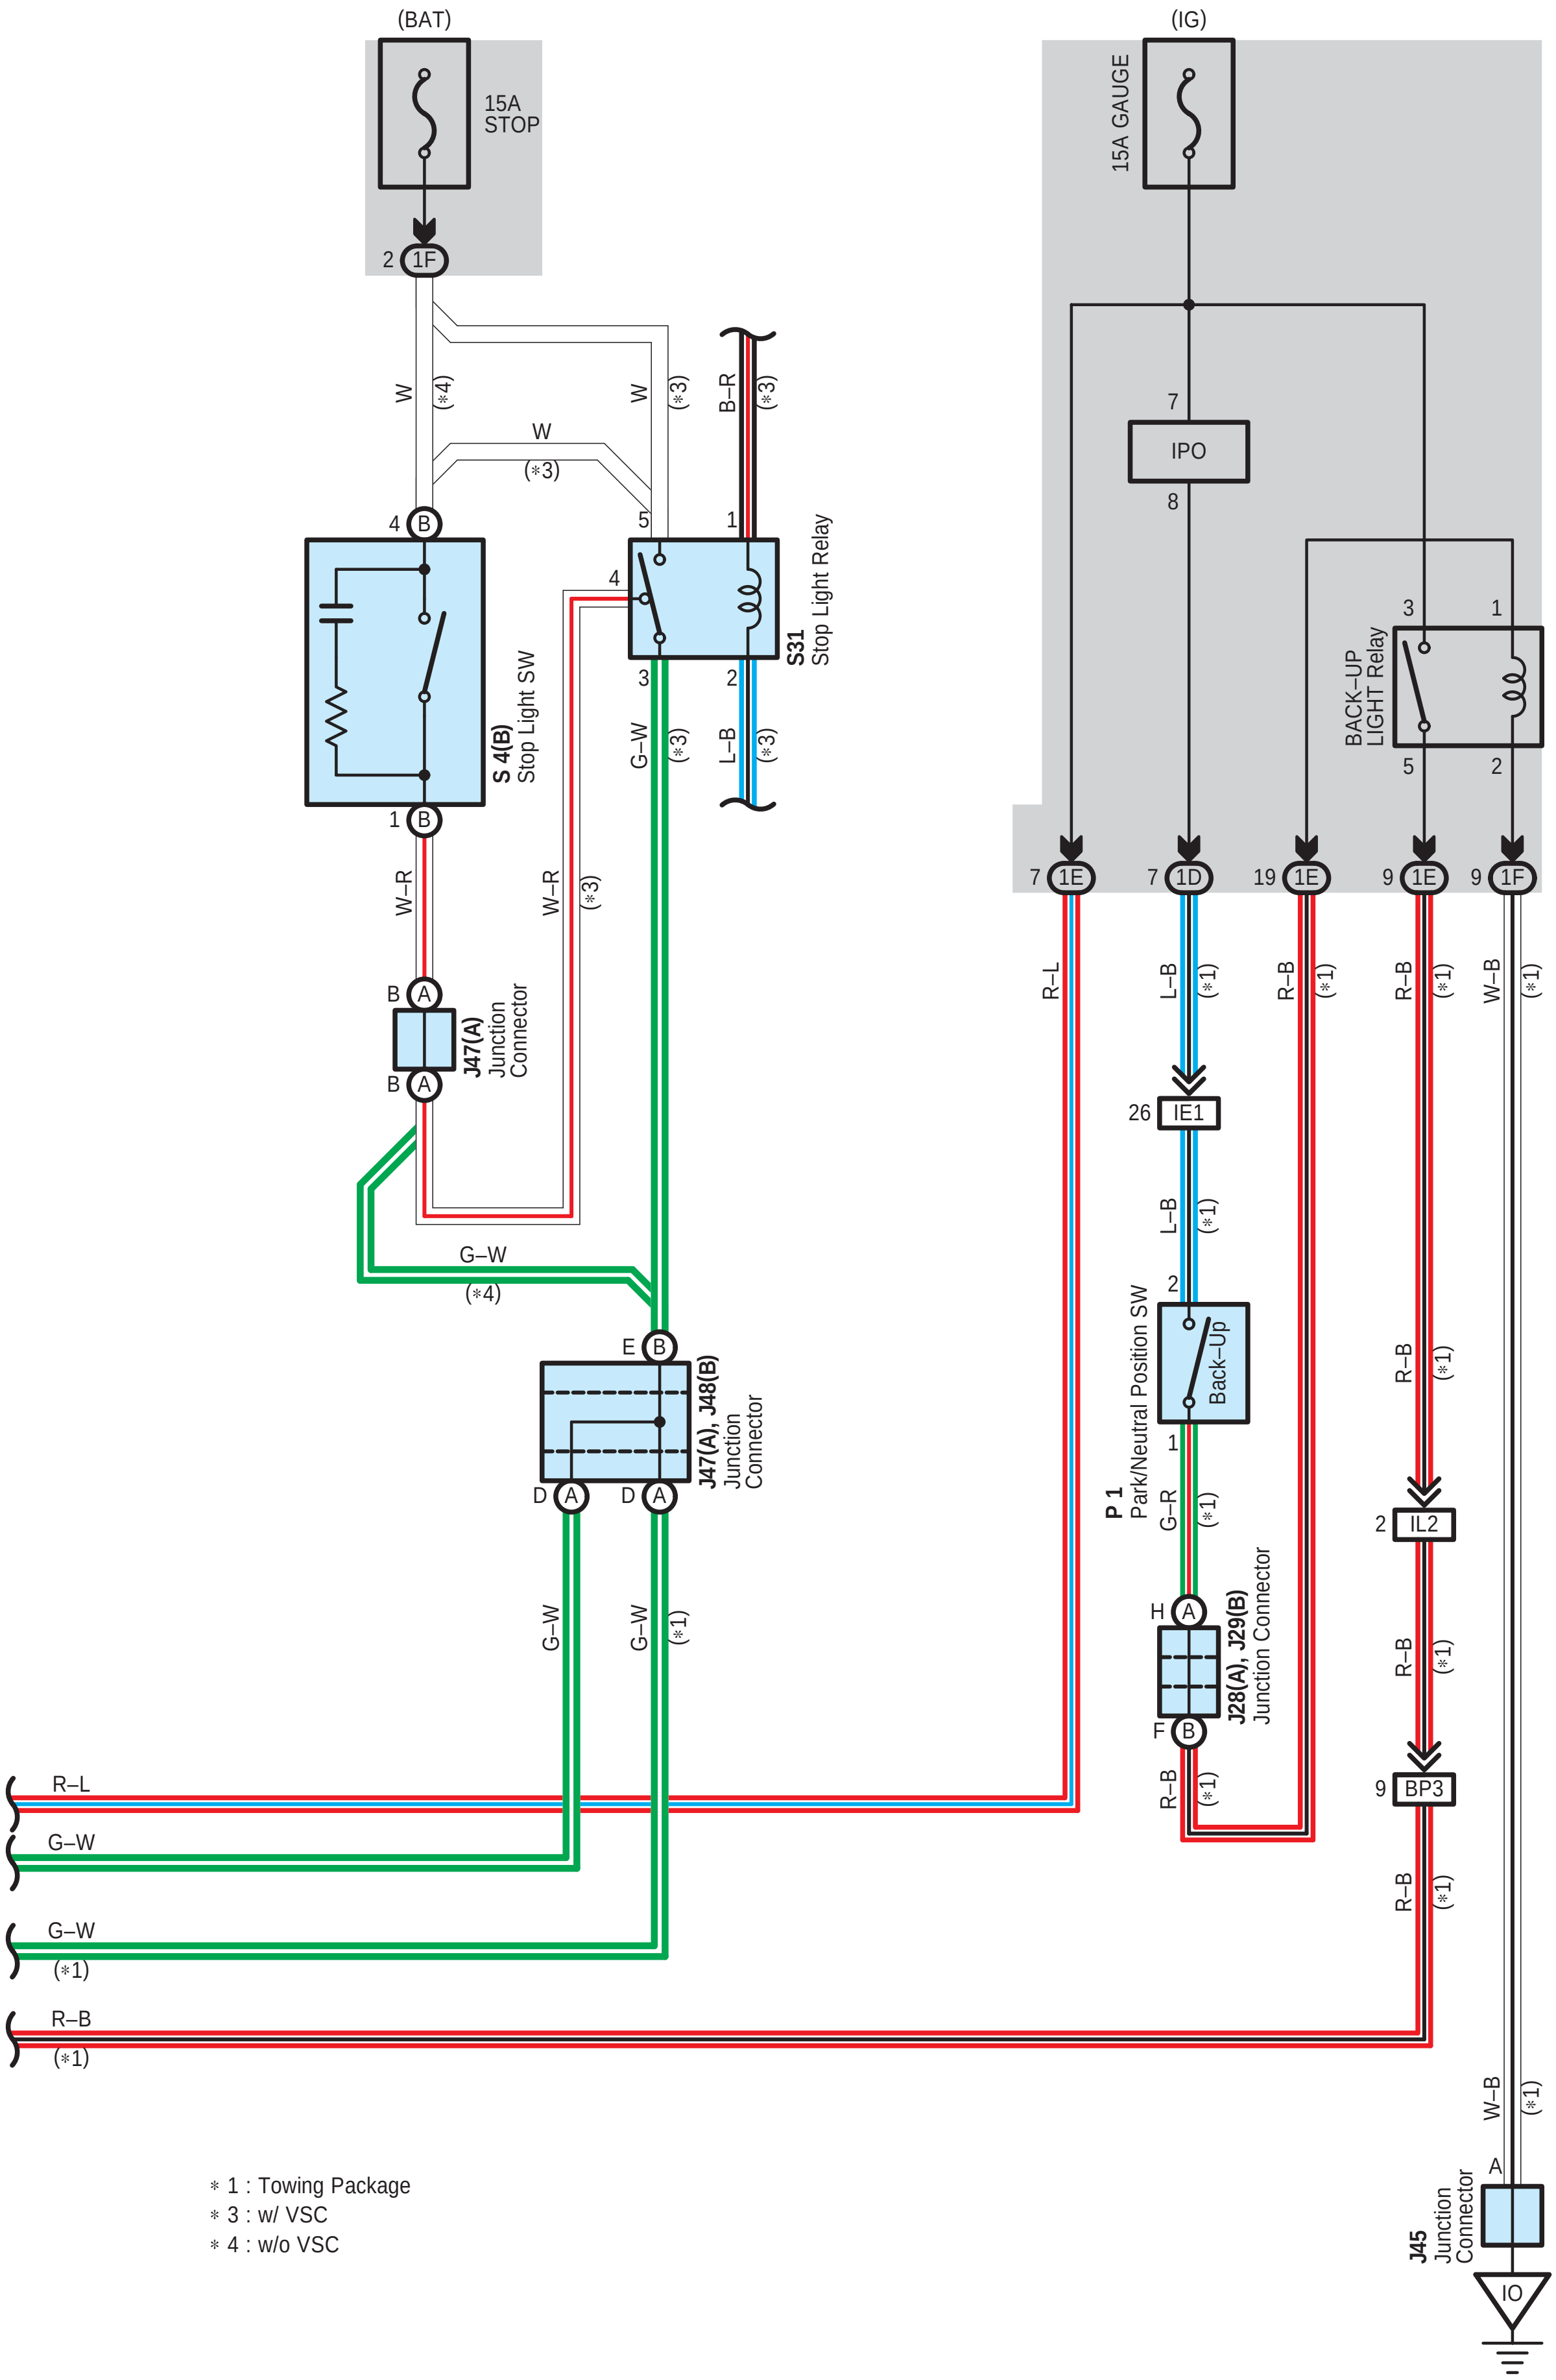

∗ 1 : Towing Package
∗ 3 : w/ VSC
∗ 4 : w/o VSC

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B10	B	72	J46		74	P1		71
F13		70	J47	A	74	S4	B	75
J28	A	74	J48	B	74	S31		75
J29	B	74	J49	A	74	T5		75
J31		71	J50	B	74	T6	A	77
J34		71	J51	A	74		B	77
J38	A	74	J52	B	74	T9		75
J39	B	74	J53	C	74			
J45		74	O5		75			

▢ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	43	Engine Room R/B No.3 (Engine Compartment Left)

▢ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E		
1F		
1K	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L		
2A	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
3A	52	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3B		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	92	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IA7		
IE1	93	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IL2	92	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
BK1	94	Frame Wire and Frame No.3 Wire (Near the License Plate Light)
BK2		
BP3	94	Frame Wire and Floor No.2 Wire (Under the Driver's Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	90	Front Left Fender Apron
IO	92	Left Kick Panel
BS	94	Surrounding of the Front of the Fuel Tank