
Back–Up Light (Double Cab)

∗ 1 : w/ Navigation System

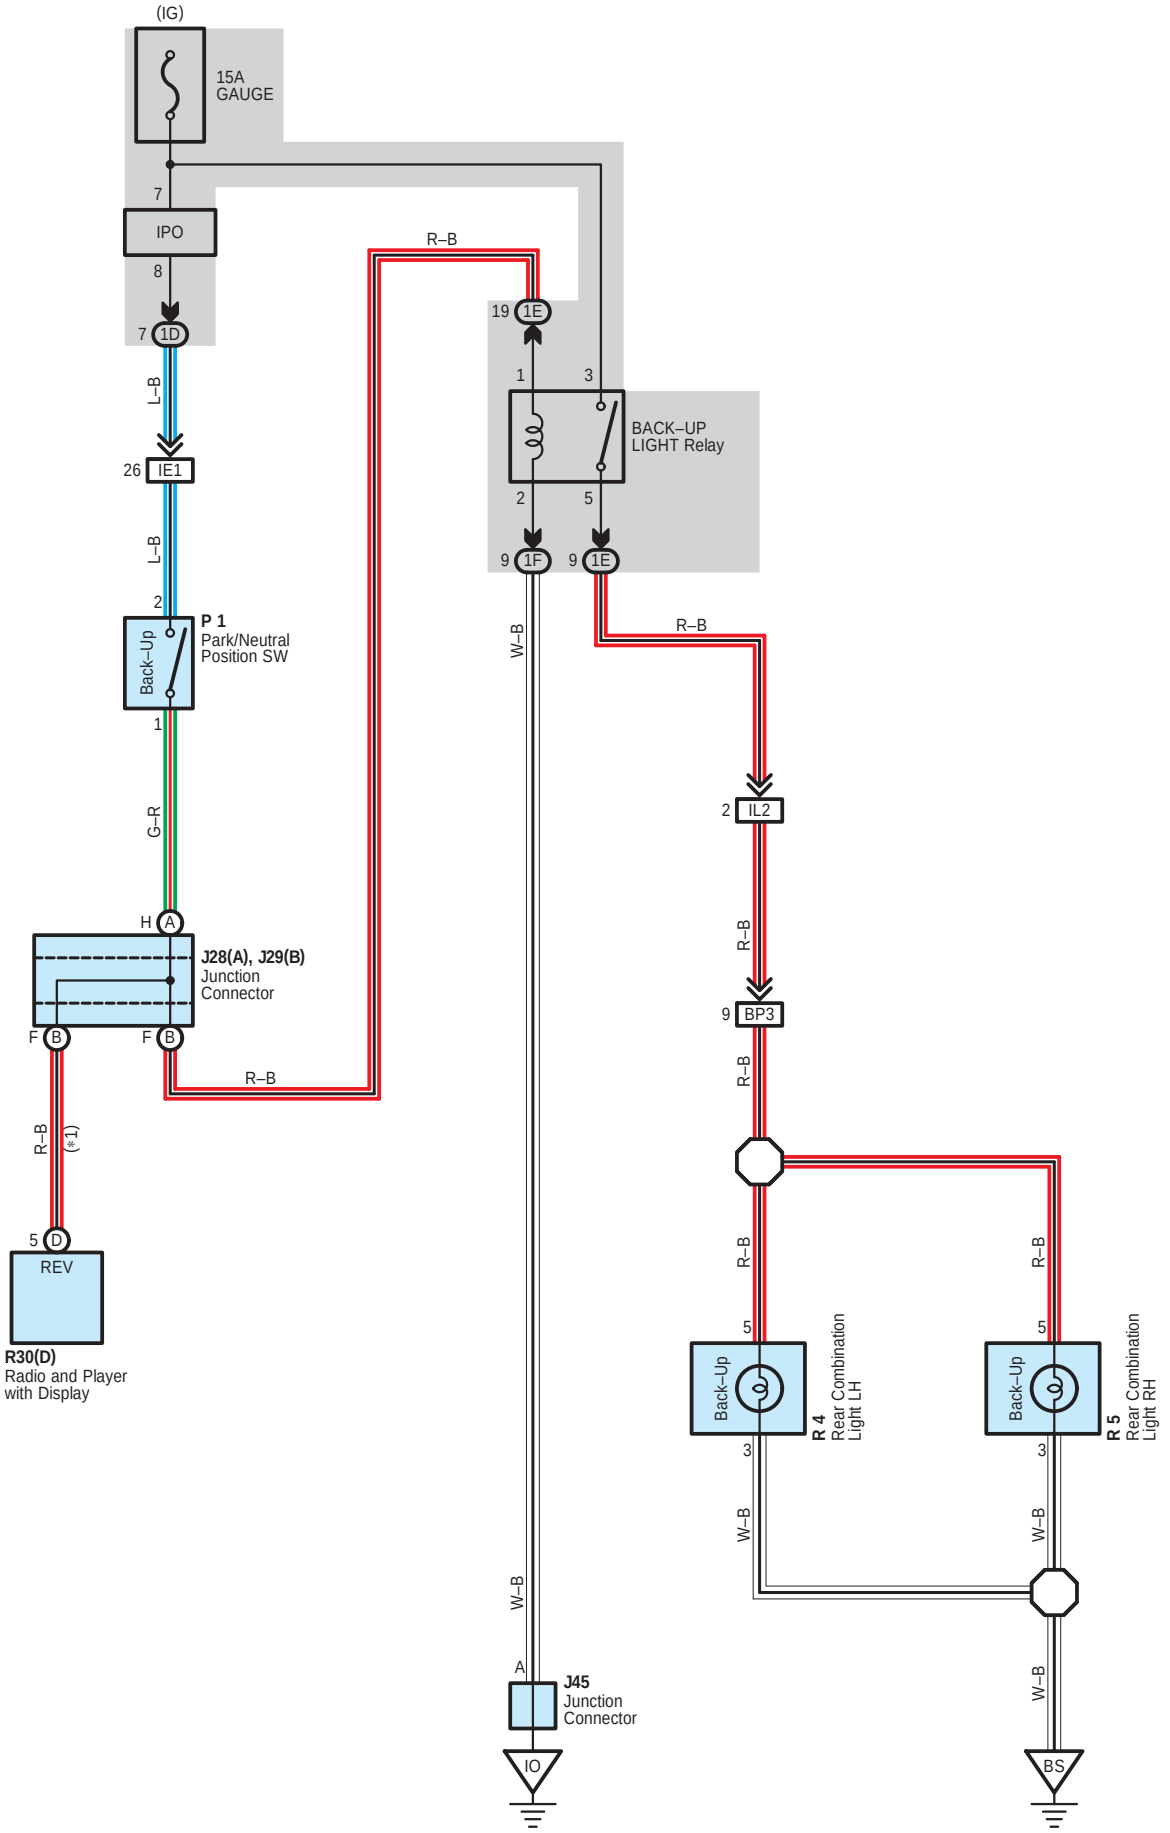

: Parts Location

Code		See Page	Code	See Page	Code		See Page
J28	A	74	P1	71	R30	D	75
J29	B	74	R4	77			
J45		74	R5	77			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E		
1F		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	93	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IL2	92	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
BP3	94	Frame Wire and Floor No.2 Wire (Under the Driver's Seat)

: Ground Points

Code	See Page	Ground Points Location
IO	92	Left Kick Panel
BS	94	Surrounding of the Front of the Fuel Tank