
Stop Light (Double Cab)

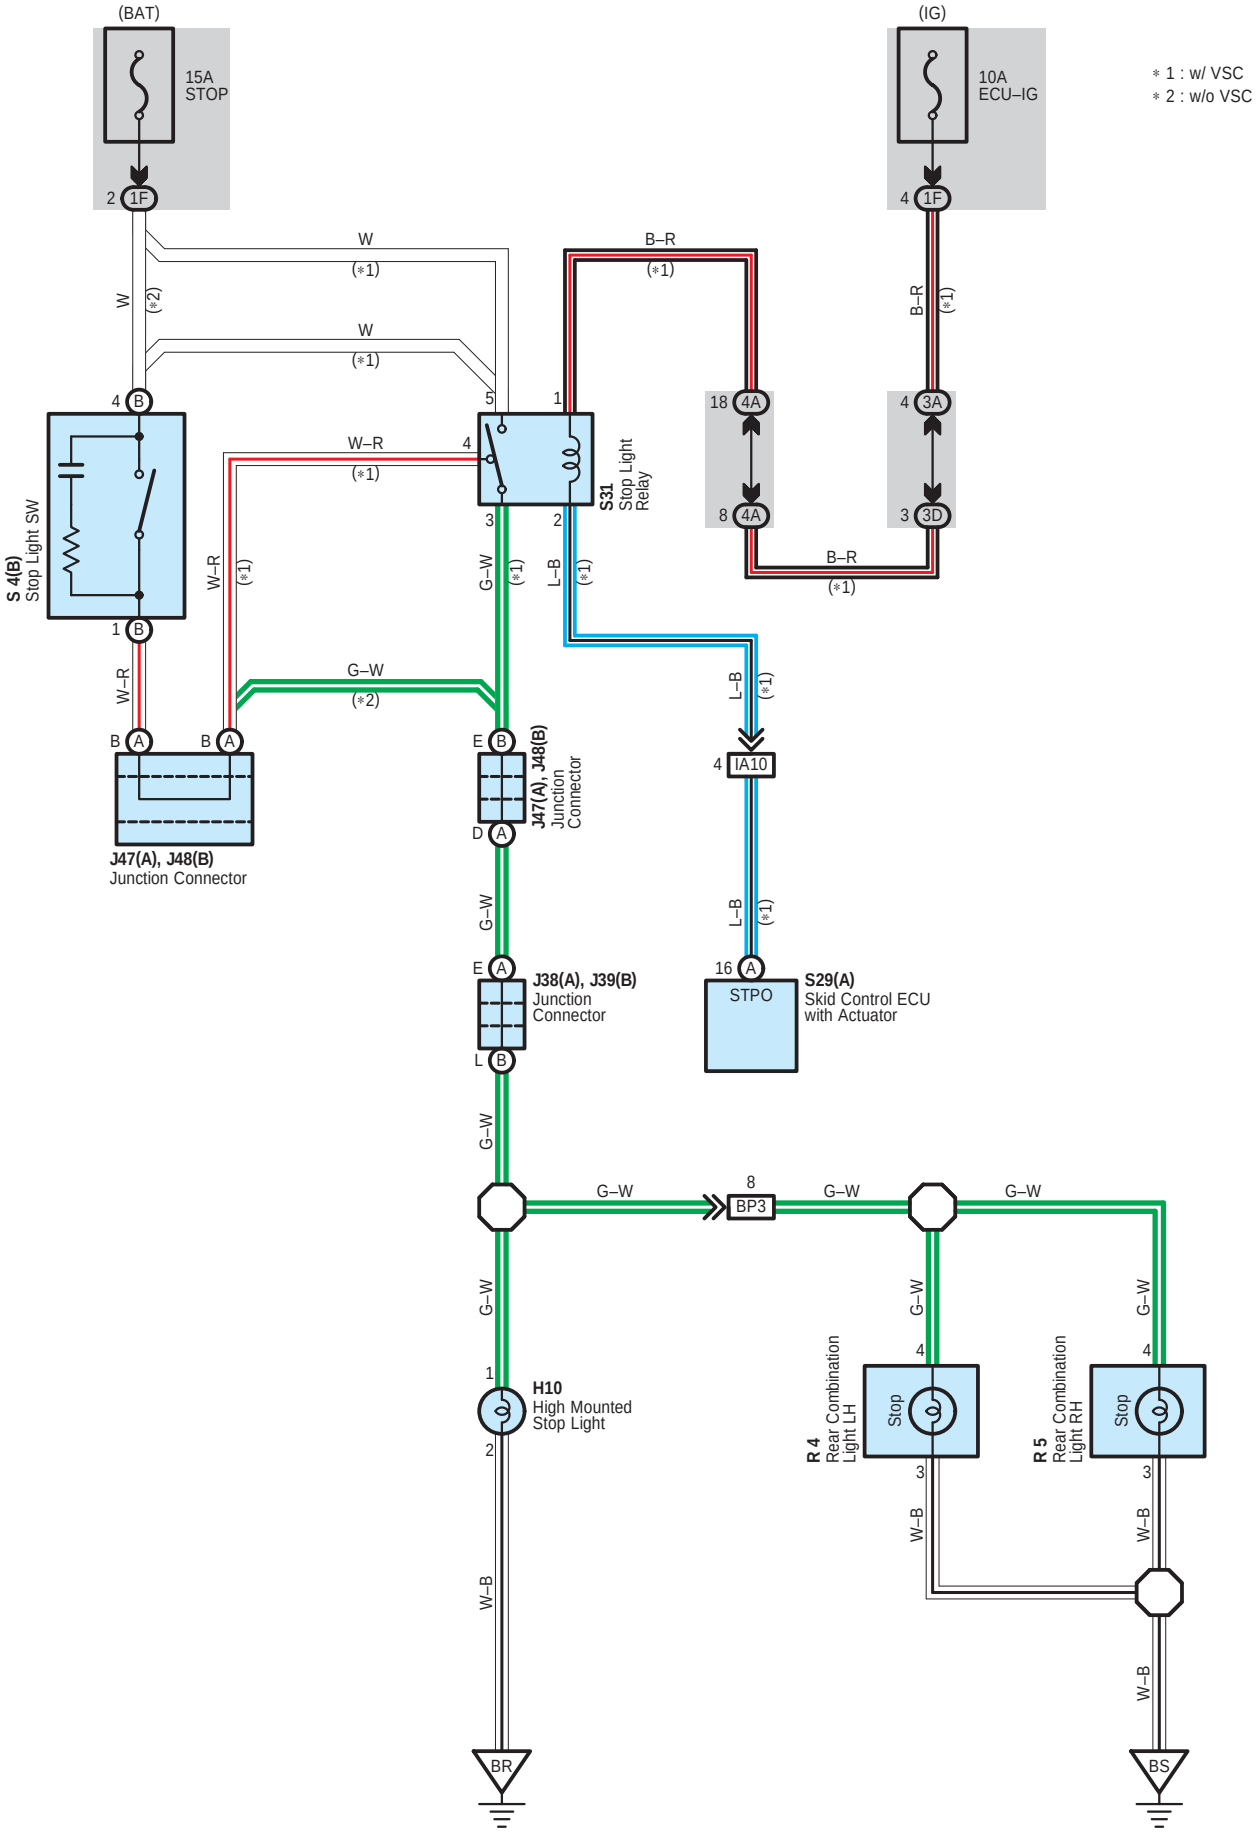

: Parts Location

Code		See Page	Code		See Page	Code		See Page
H10		76	J48	B	74	S29	A	71
J38	A	74	R4		77	S31		75
J39	B	74	R5		77			
J47	A	74	S4	B	75			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3A	52	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3D		
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA10	92	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
BP3	94	Frame Wire and Floor No.2 Wire (Under the Driver's Seat)

: Ground Points

Code	See Page	Ground Points Location
BR	94	Back Panel Left
BS	94	Surrounding of the Front of the Fuel Tank