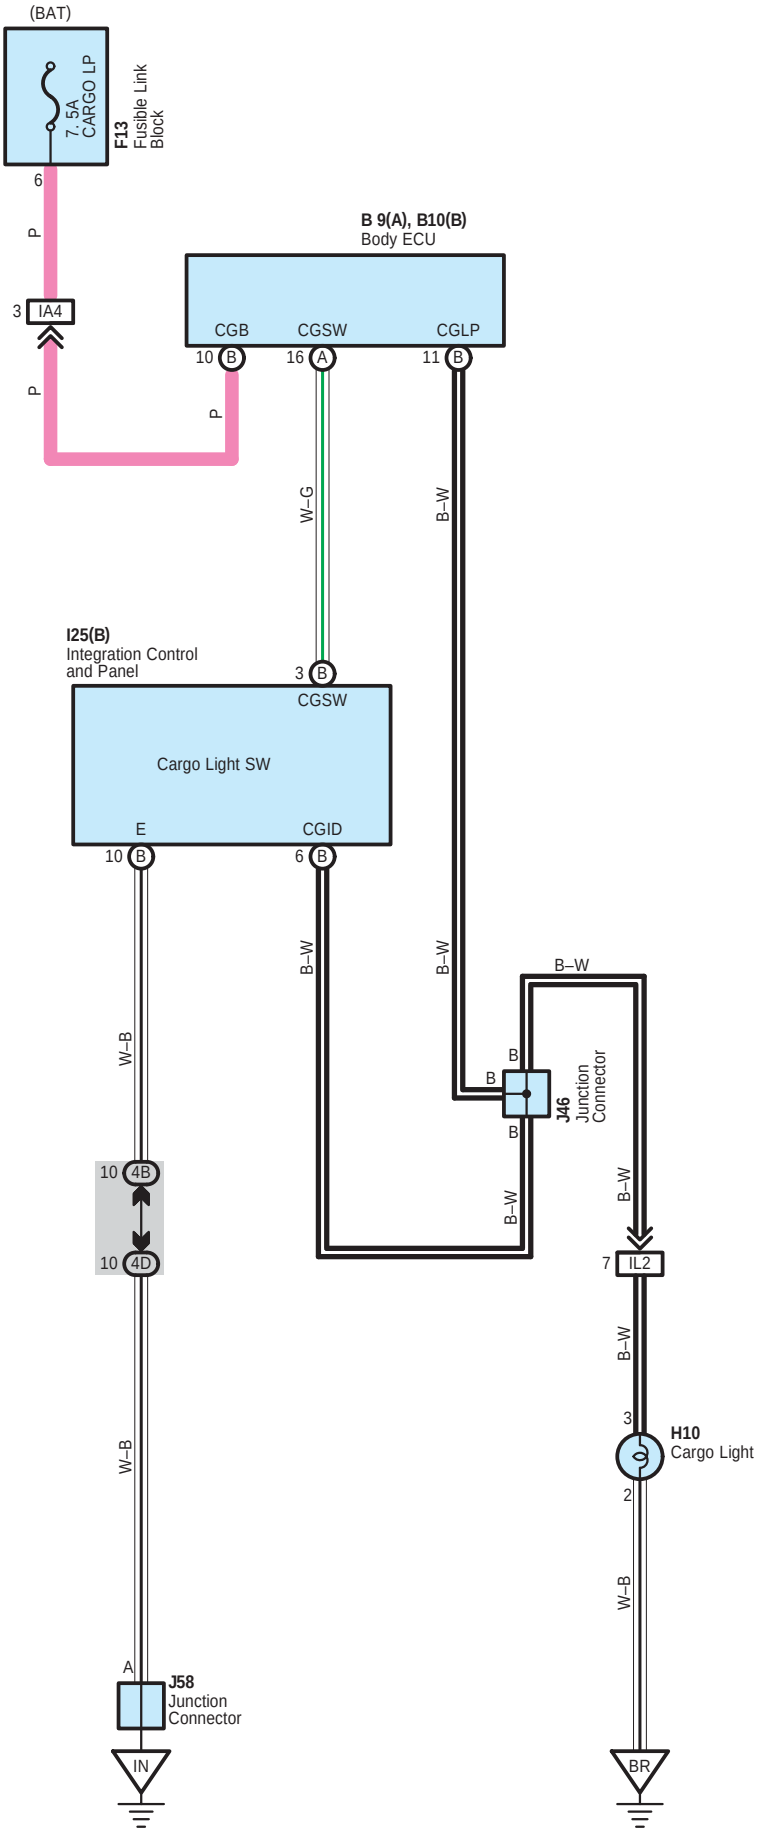

(BAT)
7.5A
CARGO LP
F13
Fusible Link
Block
6
P
3
IA4
P
P
B 9(A), B10(B)
Body ECU
CGB
CGSW
CGLP
10 B
16 A
11 B
W–G
B–W
I25(B)
Integration Control
and Panel
3 B
CGSW
Cargo Light SW
E
CGID
10 B
6 B
W–B
B–W
B–W
B–W
B
B
B
J46
Junction
Connector
10 4B
10 4D
B–W
7 IL2
W–B
3
H10
Cargo Light
2
W–B
W–B
A
J58
Junction
Connector
IN
BR

**: Parts Location**

| Code | | See Page | Code | | See Page | Code | See Page |
|---|---|---|---|---|---|---|---|
| B9 | A | 72 | H10 | | 76 | J58 | 74 |
| B10 | B | 72 | I25 | B | 73 | | |
| F13 | | 70 | J46 | | 74 | | |

**: Junction Block and Wire Harness Connector**

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|---|---|---|
| 4B | 54 | Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal) |
| 4D | | |

**: Connector Joining Wire Harness and Wire Harness**

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|---|
| IA4 | 92 | Engine Room Main Wire and Cowl Wire (Left Kick Panel) |
| IL2 | 92 | Floor No.2 Wire and Cowl Wire (Right Kick Panel) |

**: Ground Points**

| Code | See Page | Ground Points Location |
|---|---|---|
| IN | 92 | Right Kick Panel |
| BR | 94 | Back Panel Left |