
Headlight without DRL (Access/Standard Cab)

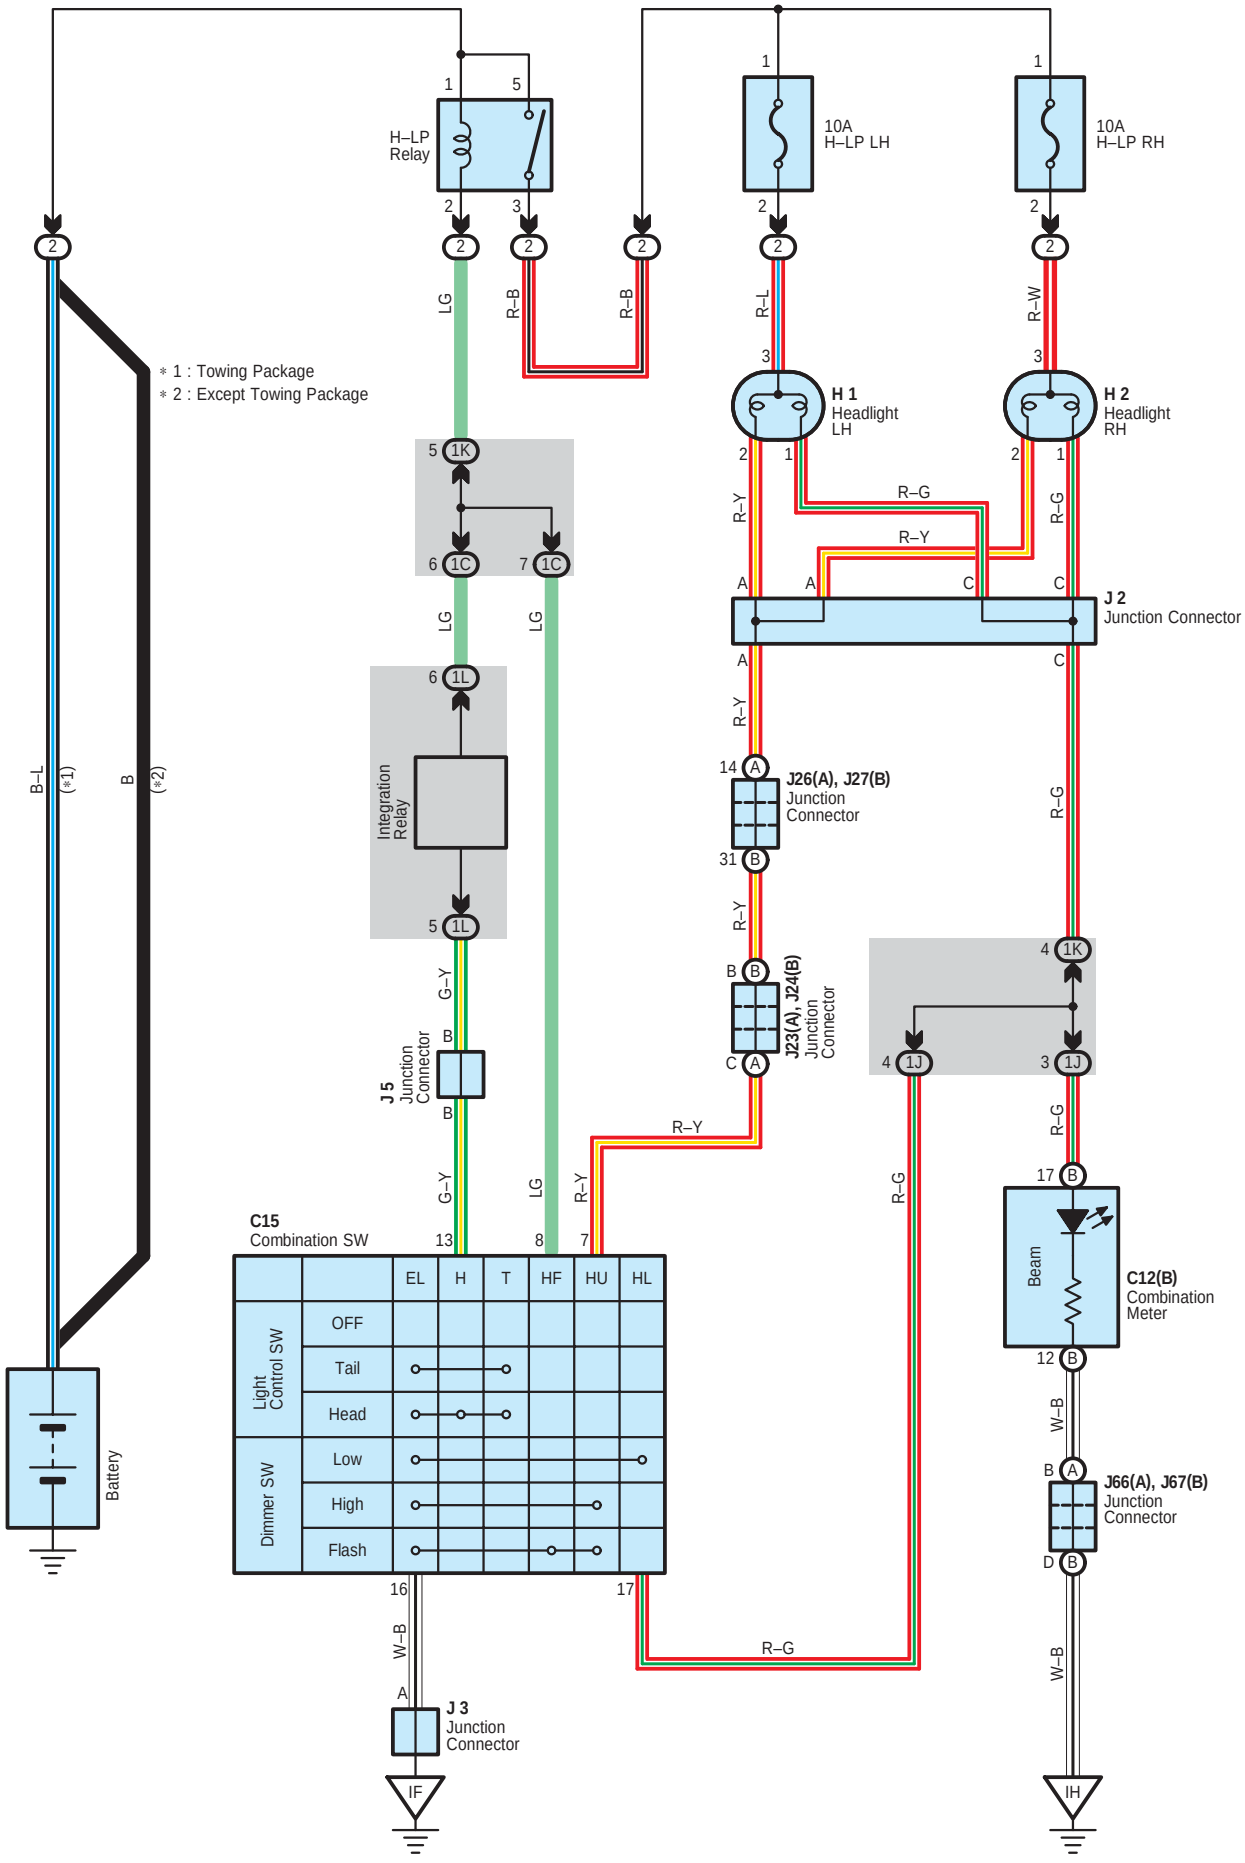

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C12 B	60	J2	57 (2UZ–FE)	J26 A	62
C15	60		59 (1GR–FE)	J27 B	62
H1	56 (2UZ–FE)	J3	62	J66 A	62
	58 (1GR–FE)	J5	62	J67 B	62
H2	56 (2UZ–FE)	J23 A	62		
	58 (1GR–FE)	J24 B	62		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	27 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	82	Left Kick Panel
IH	82	Right Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat