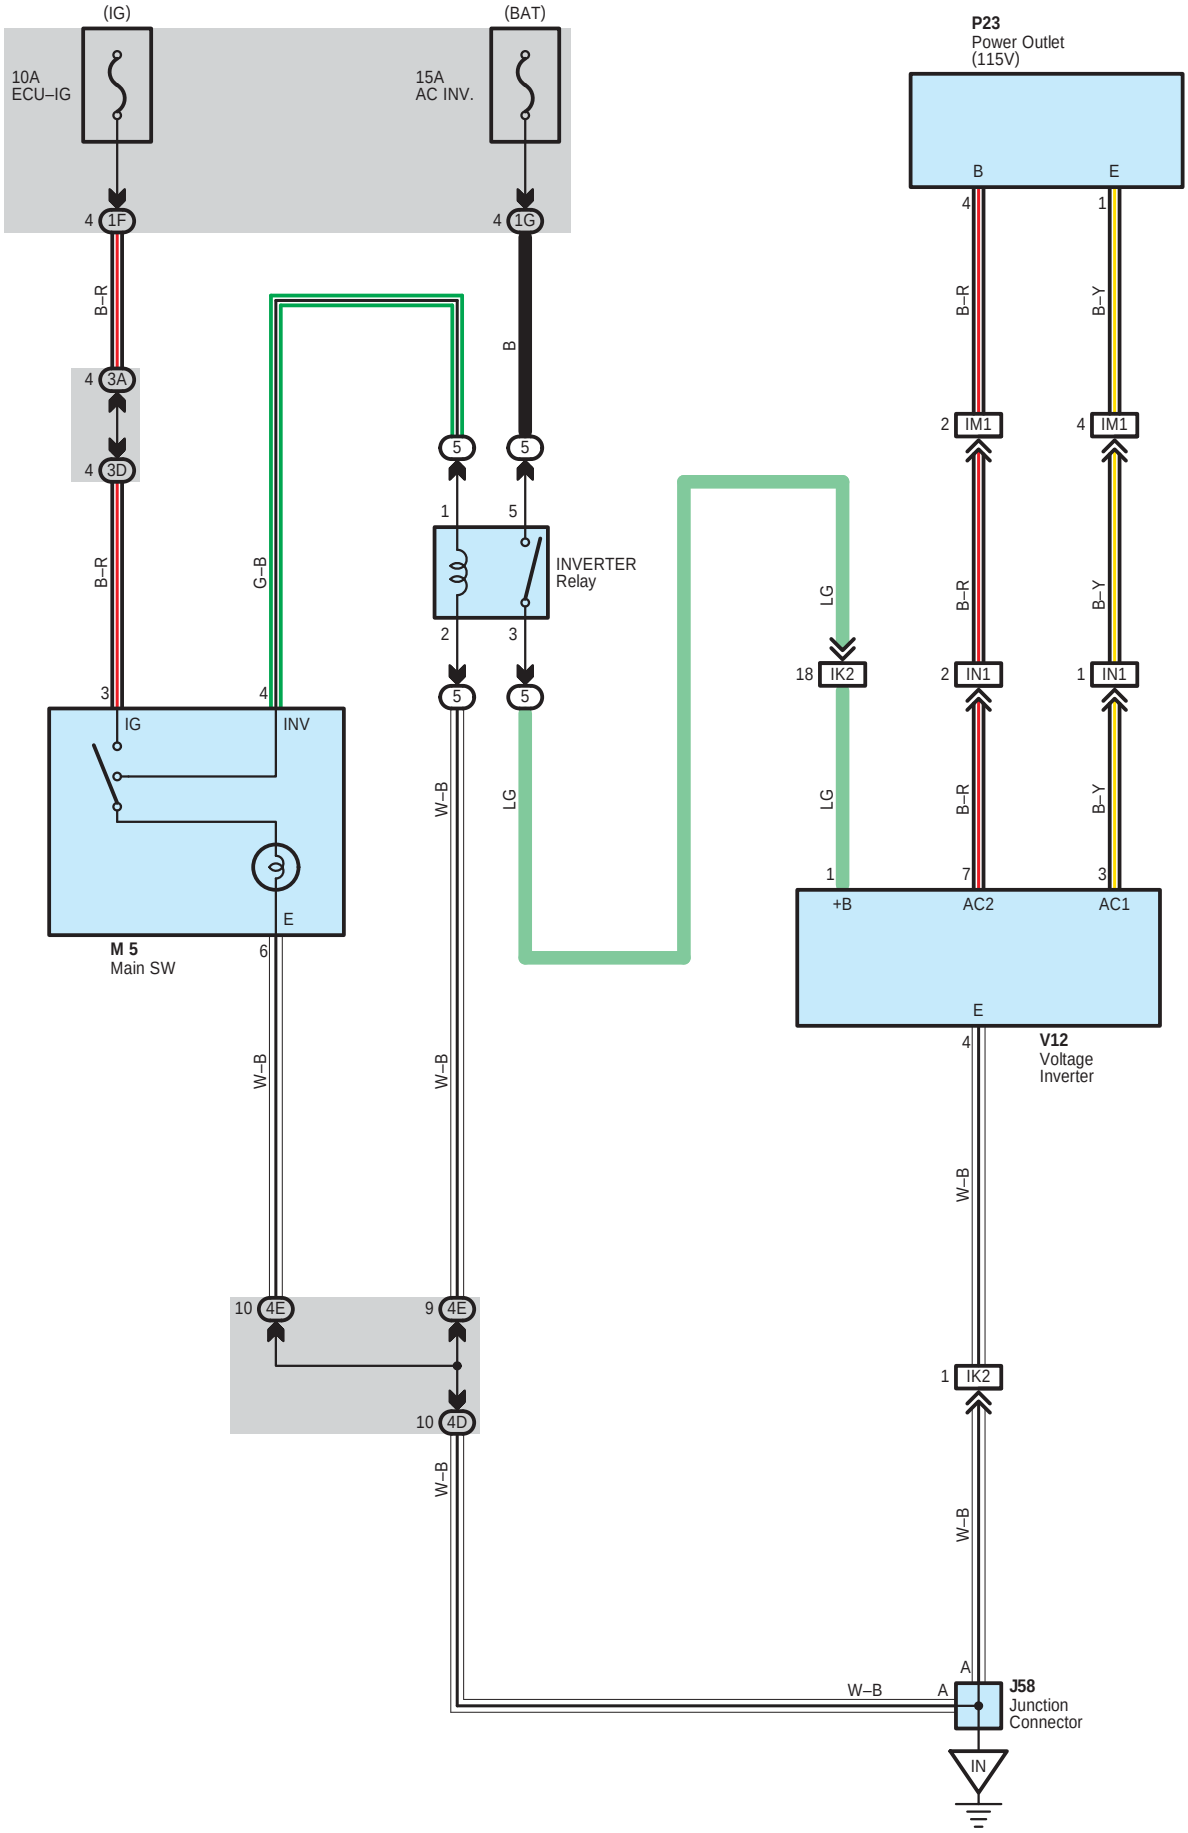

(IG)
(BAT)
10A
ECU–IG
15A
AC INV.
P23
Power Outlet
(115V)
B
E
4
1F
4
1G
B–R
B
B–R
B–Y
4
3A
4
3D
2
IM1
4
IM1
5
5
1
5
INVERTER
Relay
G–B
LG
B–R
B–Y
2
3
18
IK2
2
IN1
1
IN1
3
4
5
5
IG
INV
LG
W–B
LG
B–R
B–Y
1
7
3
+B
AC2
AC1
E
M 5
Main SW
6
E
V12
Voltage
Inverter
4
W–B
W–B
W–B
10
4E
9
4E
1
IK2
10
4D
W–B
W–B
A
W–B
A
J58
Junction
Connector
IN

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J58	74	P23	75		
M5	75	V12	77		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	43	Driver Side R/B (Under the Instrument Panel J/B)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1G		
3A	52	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3D		
4D	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4E		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK2	93	Floor Wire and Cowl Wire (Right Kick Panel)
IM1	92	Console Box Wire and Cowl Wire (Rear Console)
IN1	92	Cowl Wire and Floor Wire (Rear Console)

: Ground Points

Code	See Page	Ground Points Location
IN	92	Right Kick Panel