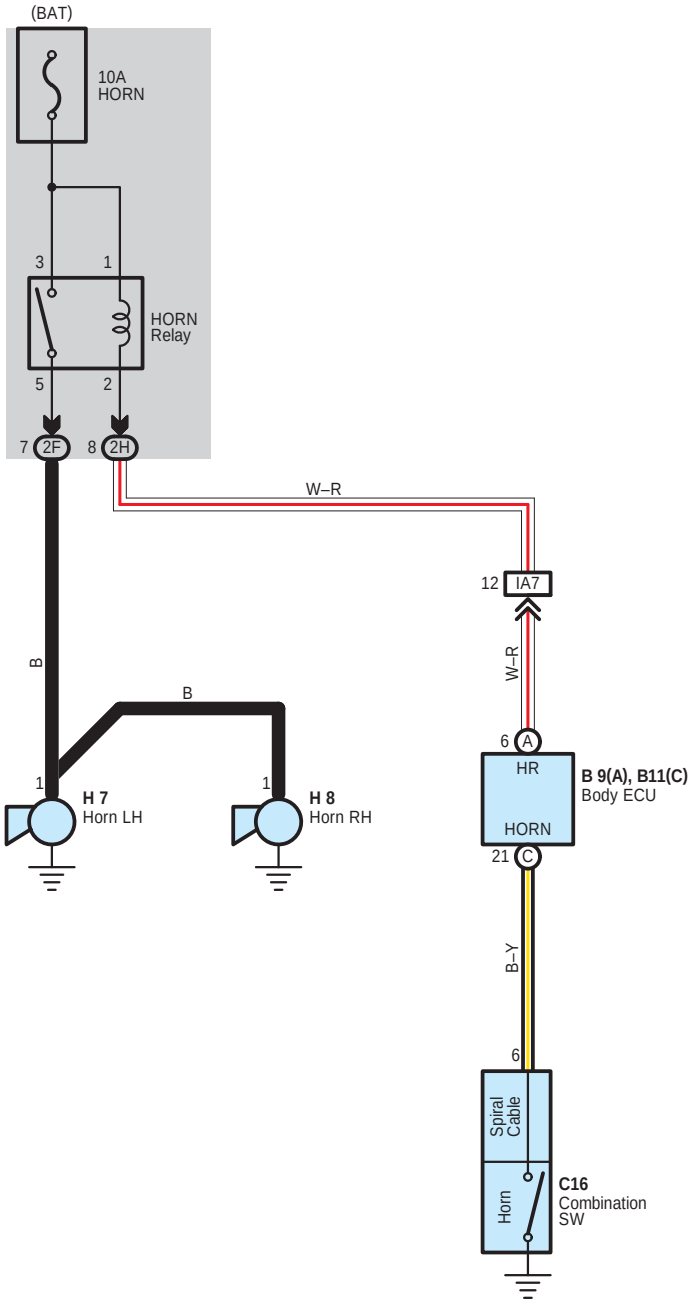

(BAT)
10A
HORN
3
1
HORN
Relay
5
2
7
2F
8
2H
W–R
12
IA7
W–R
B
B
6
A
HR
HORN
B 9(A), B11(C)
Body ECU
21
C
B–Y
6
Spiral
Cable
Horn
C16
Combination
SW
1
H 7
Horn LH
1
H 8
Horn RH

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
B9	A	72	C16	72	H8	70
B11	C	72	H7	70		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2F	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2H		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA7	92	Engine Room Main Wire and Cowl Wire (Left Kick Panel)