
Fog Light with DRL (Access/Standard Cab)

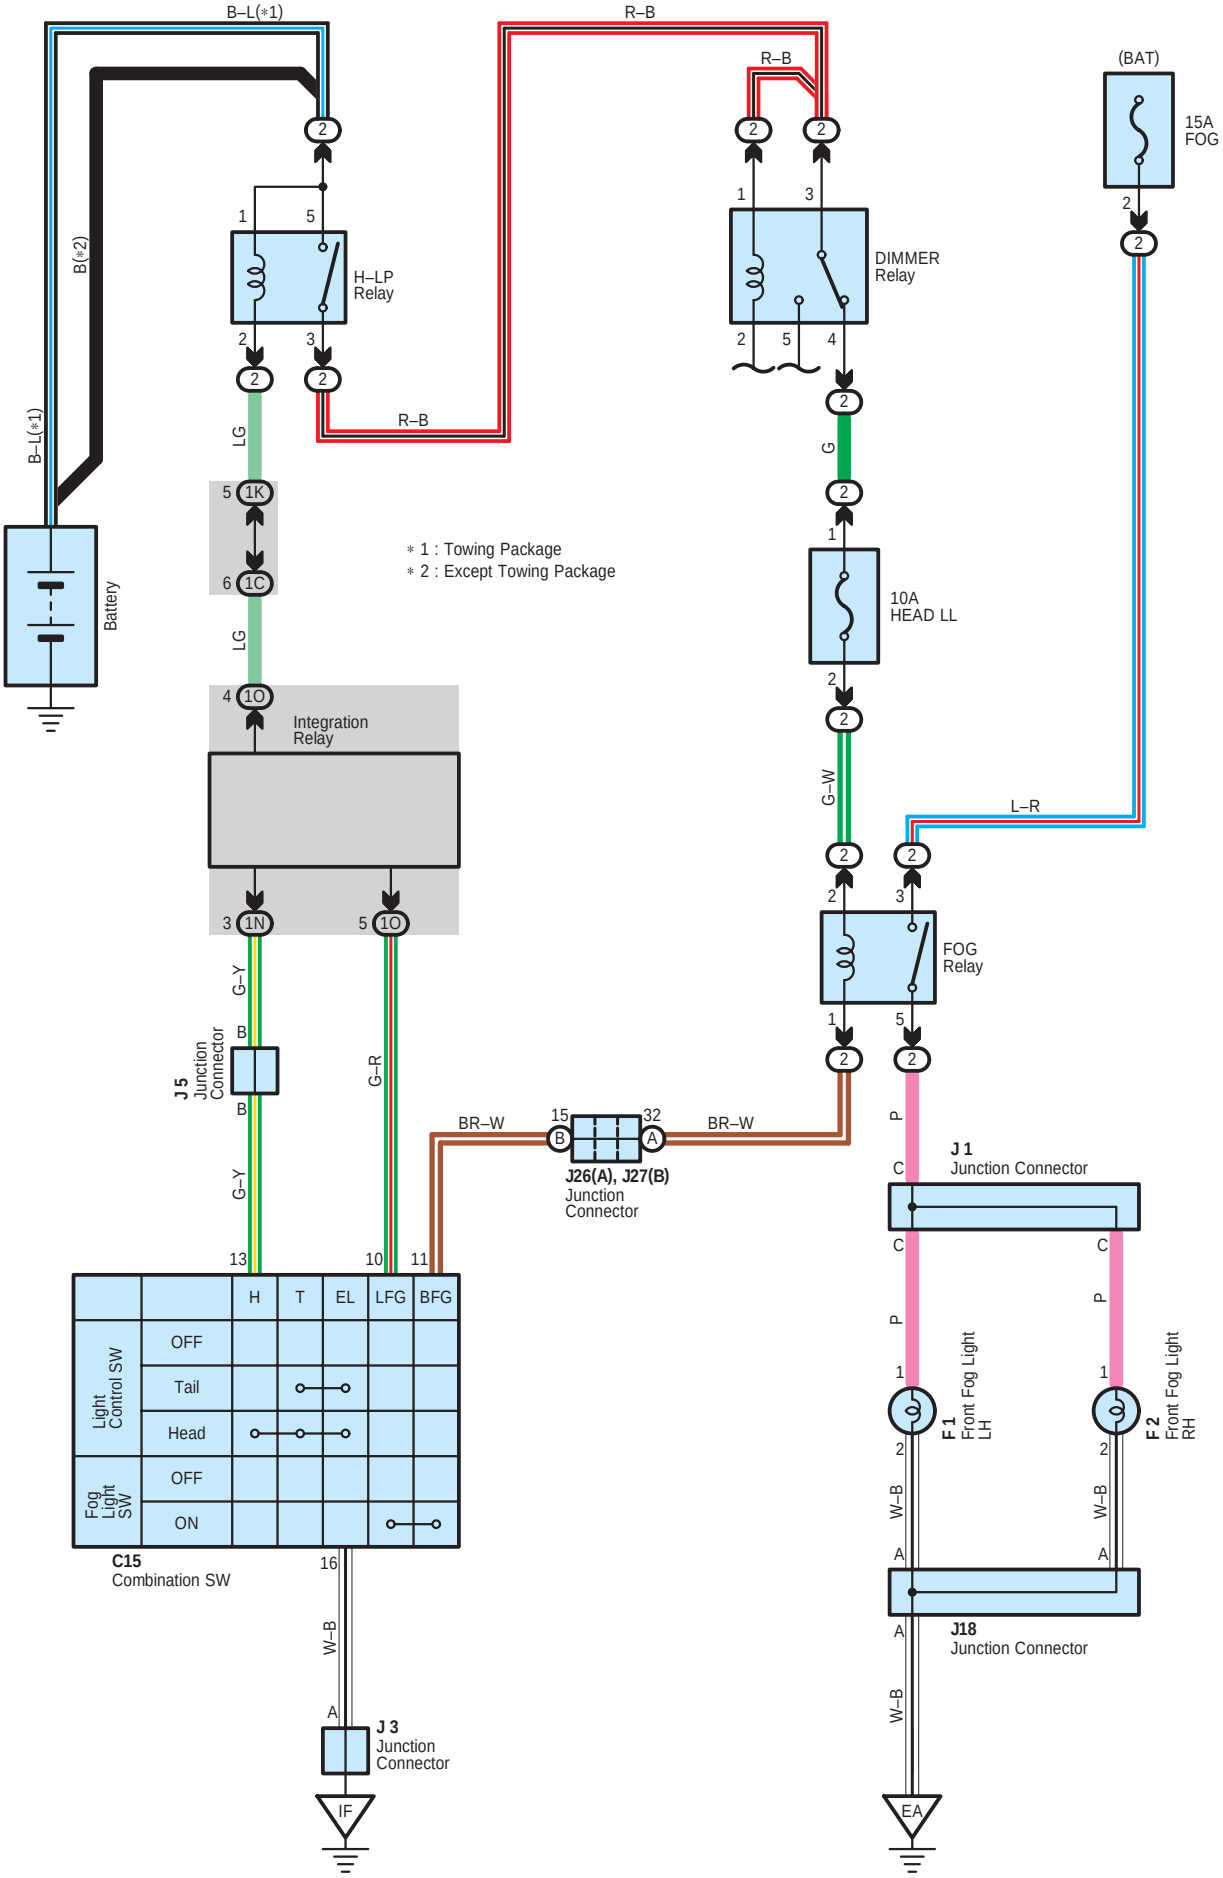

: Parts Location

Code	See Page	Code	See Page	Code		See Page
C15	60	J1	57 (2UZ–FE)	J18		59 (1GR–FE)
F1	56 (2UZ–FE)		59 (1GR–FE)	J26	A	62
	58 (1GR–FE)	J3	62	J27	B	62
F2	56 (2UZ–FE)	J5	62			
	58 (1GR–FE)	J18	57 (2UZ–FE)			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	30 (*2)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1K	30 (*2)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1N	31 (*2)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1O		

: Ground Points

Code	See Page	Ground Points Location
EA	80 (2UZ–FE)	Front Left Fender
	81 (1GR–FE)	
IF	82	Left Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
* 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat