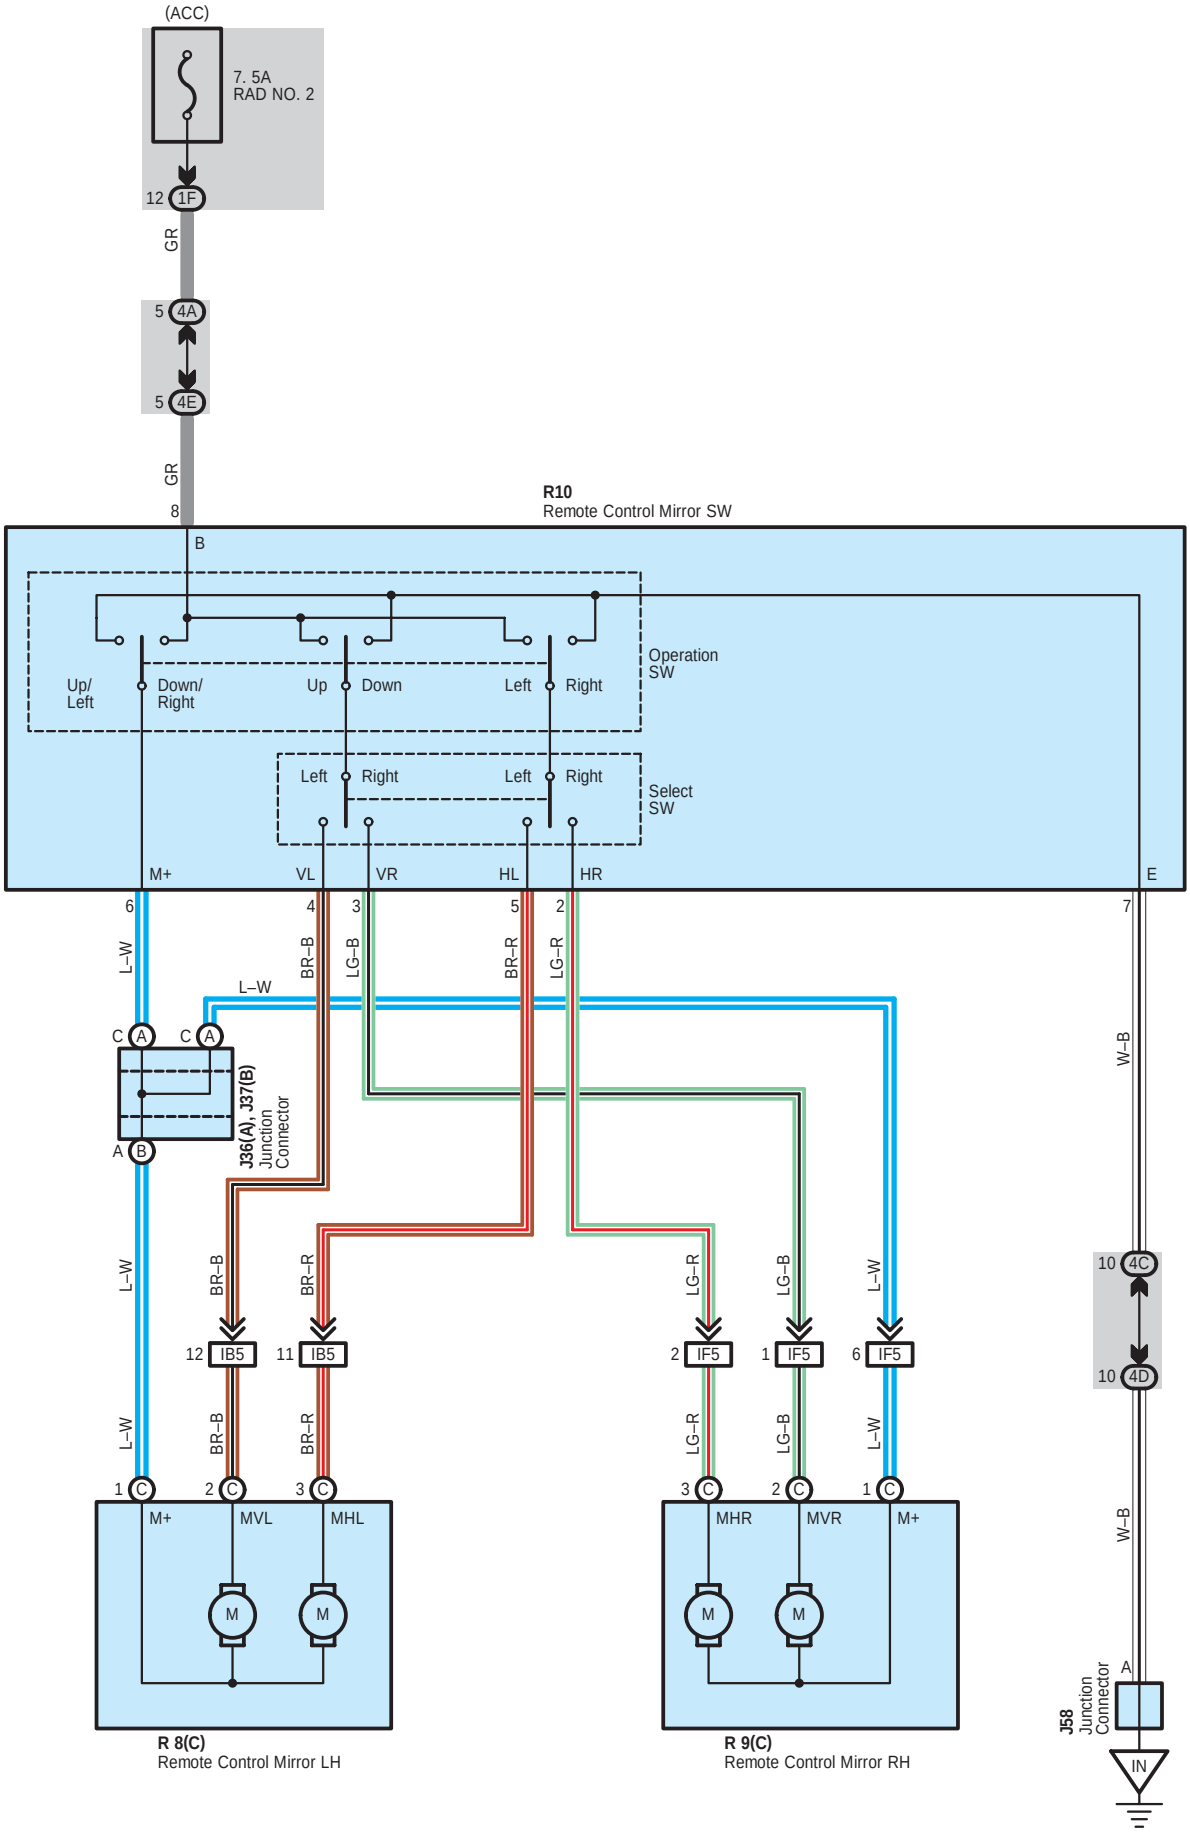

(ACC)
7. 5A
RAD NO. 2
12 1F
GR
5 4A
5 4E
GR
8
R10
Remote Control Mirror SW
B
Operation
SW
Up/
Left
Down/
Right
Up
Down
Left
Right
Select
SW
Left
Right
Left
Right
M+
VL
VR
HL
HR
E
6
4
3
5
2
7
L–W
BR–B
LG–B
BR–R
LG–R
W–B
L–W
C A
C A
A B
J36(A), J37(B)
Junction
Connector
BR–B
BR–R
LG–R
LG–B
L–W
12 IB5
11 IB5
2 IF5
1 IF5
6 IF5
10 4C
10 4D
L–W
BR–B
BR–R
LG–R
LG–B
L–W
1 C
2 C
3 C
3 C
2 C
1 C
M+
MVL
MHL
MHR
MVR
M+
M
M
M
M
W–B
J58
Junction
Connector
A
IN
R 8(C)
Remote Control Mirror LH
R 9(C)
Remote Control Mirror RH

: Parts Location

Code		See Page	Code		See Page	Code		See Page
J36	A	74	J58		74	R9	C	77
J37	B	74	R8	C	77	R10		75

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4C		
4D		
4E		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB5	92	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF5	93	Front Door RH Wire and Cowl Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IN	92	Right Kick Panel