
Power Seat (Double Cab)

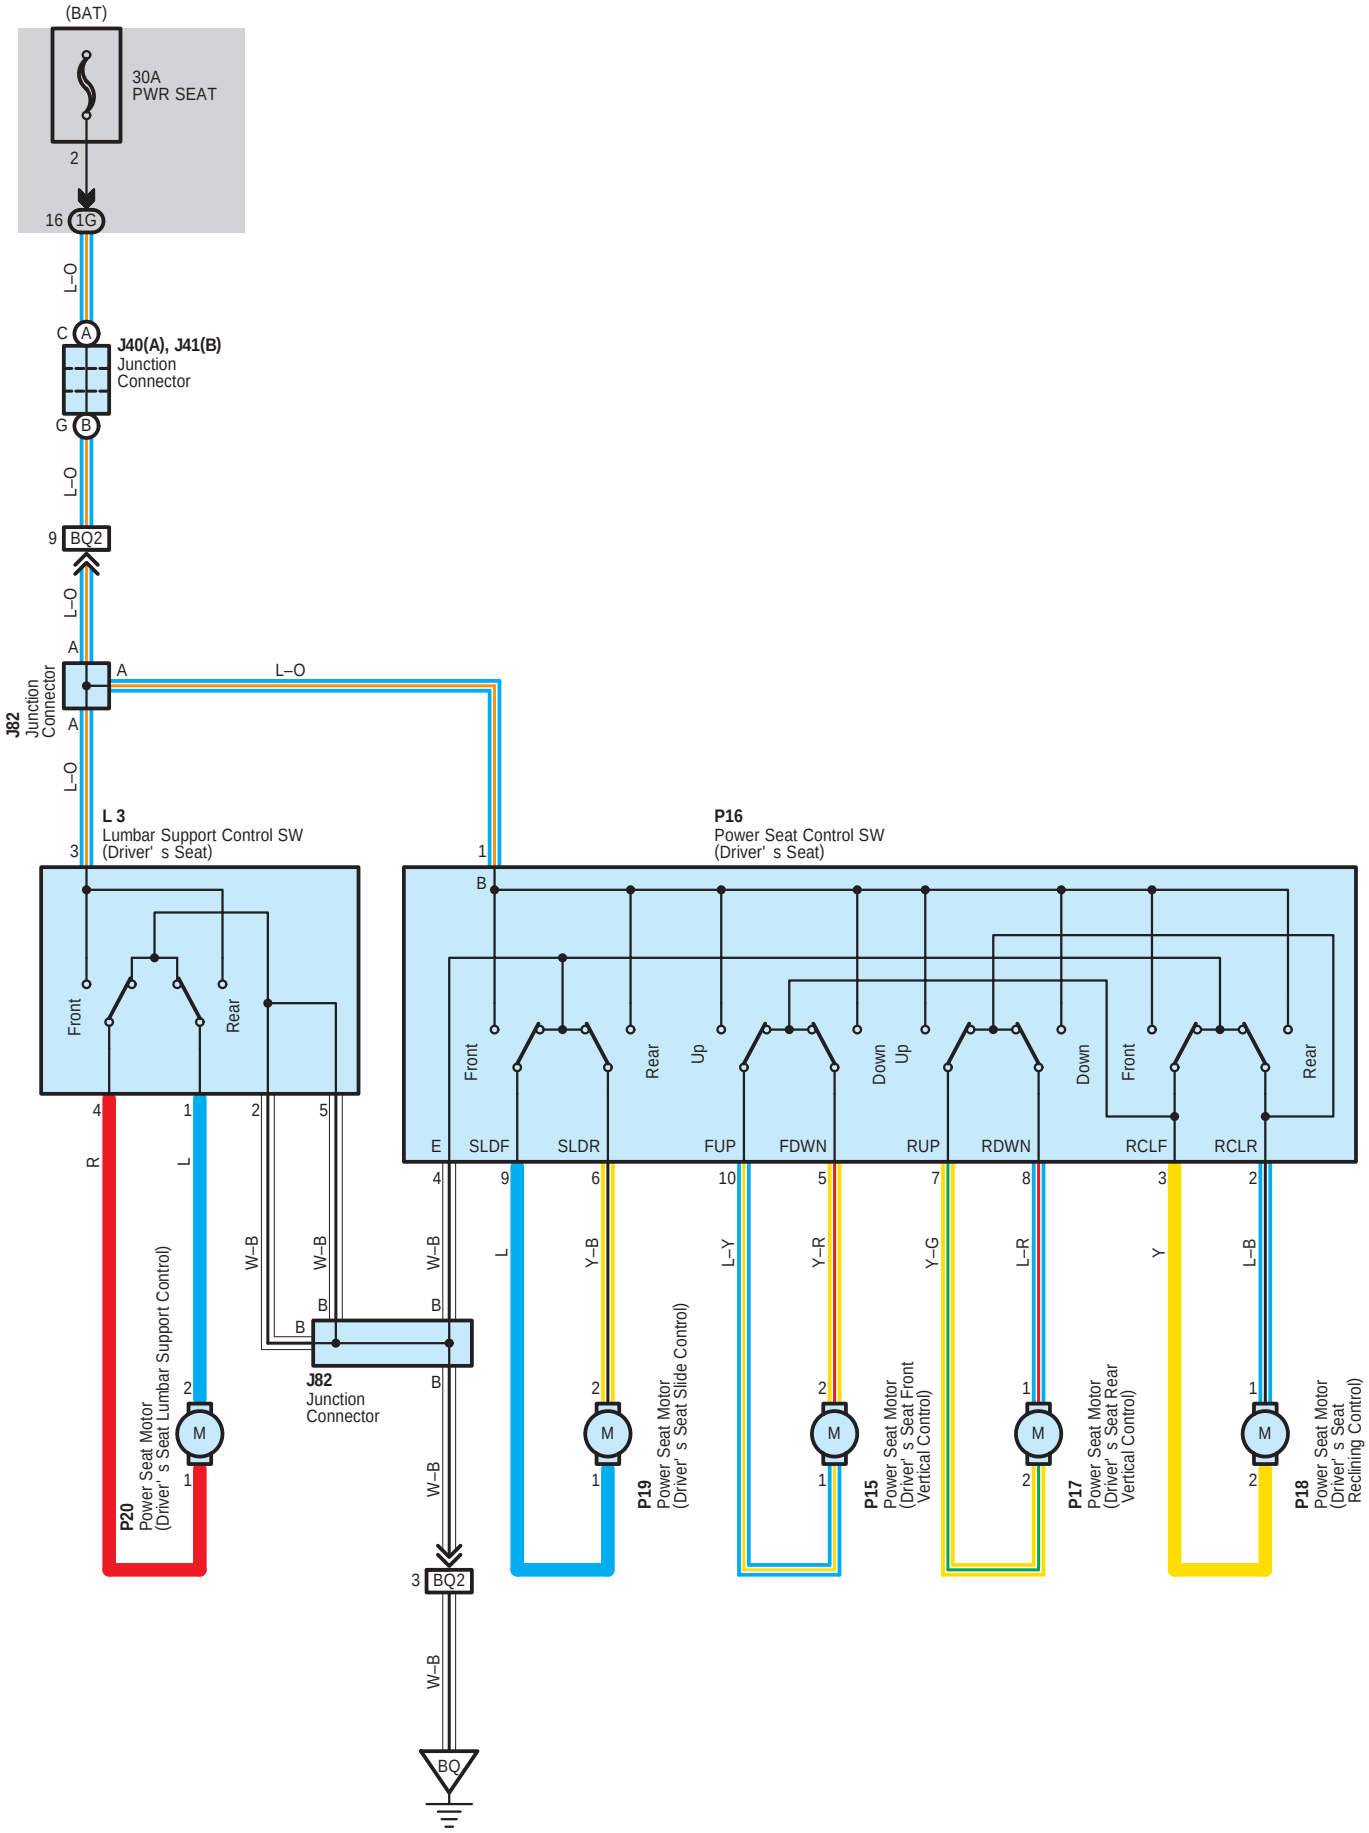

: Parts Location

Code		See Page	Code	See Page	Code	See Page
J40	A	74	P15	78 (*1)	P19	78 (*1)
J41	B	74	P16	78 (*1)	P20	78 (*1)
J82		78 (*1)	P17	78 (*1)		
L3		78 (*1)	P18	78 (*1)		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BQ2	96 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Driver's Seat)

: Ground Points

Code	See Page	Ground Points Location
BQ	94	Left Side of Center Pillar

* 1 : Captain Seat * 2 : Separate Seat