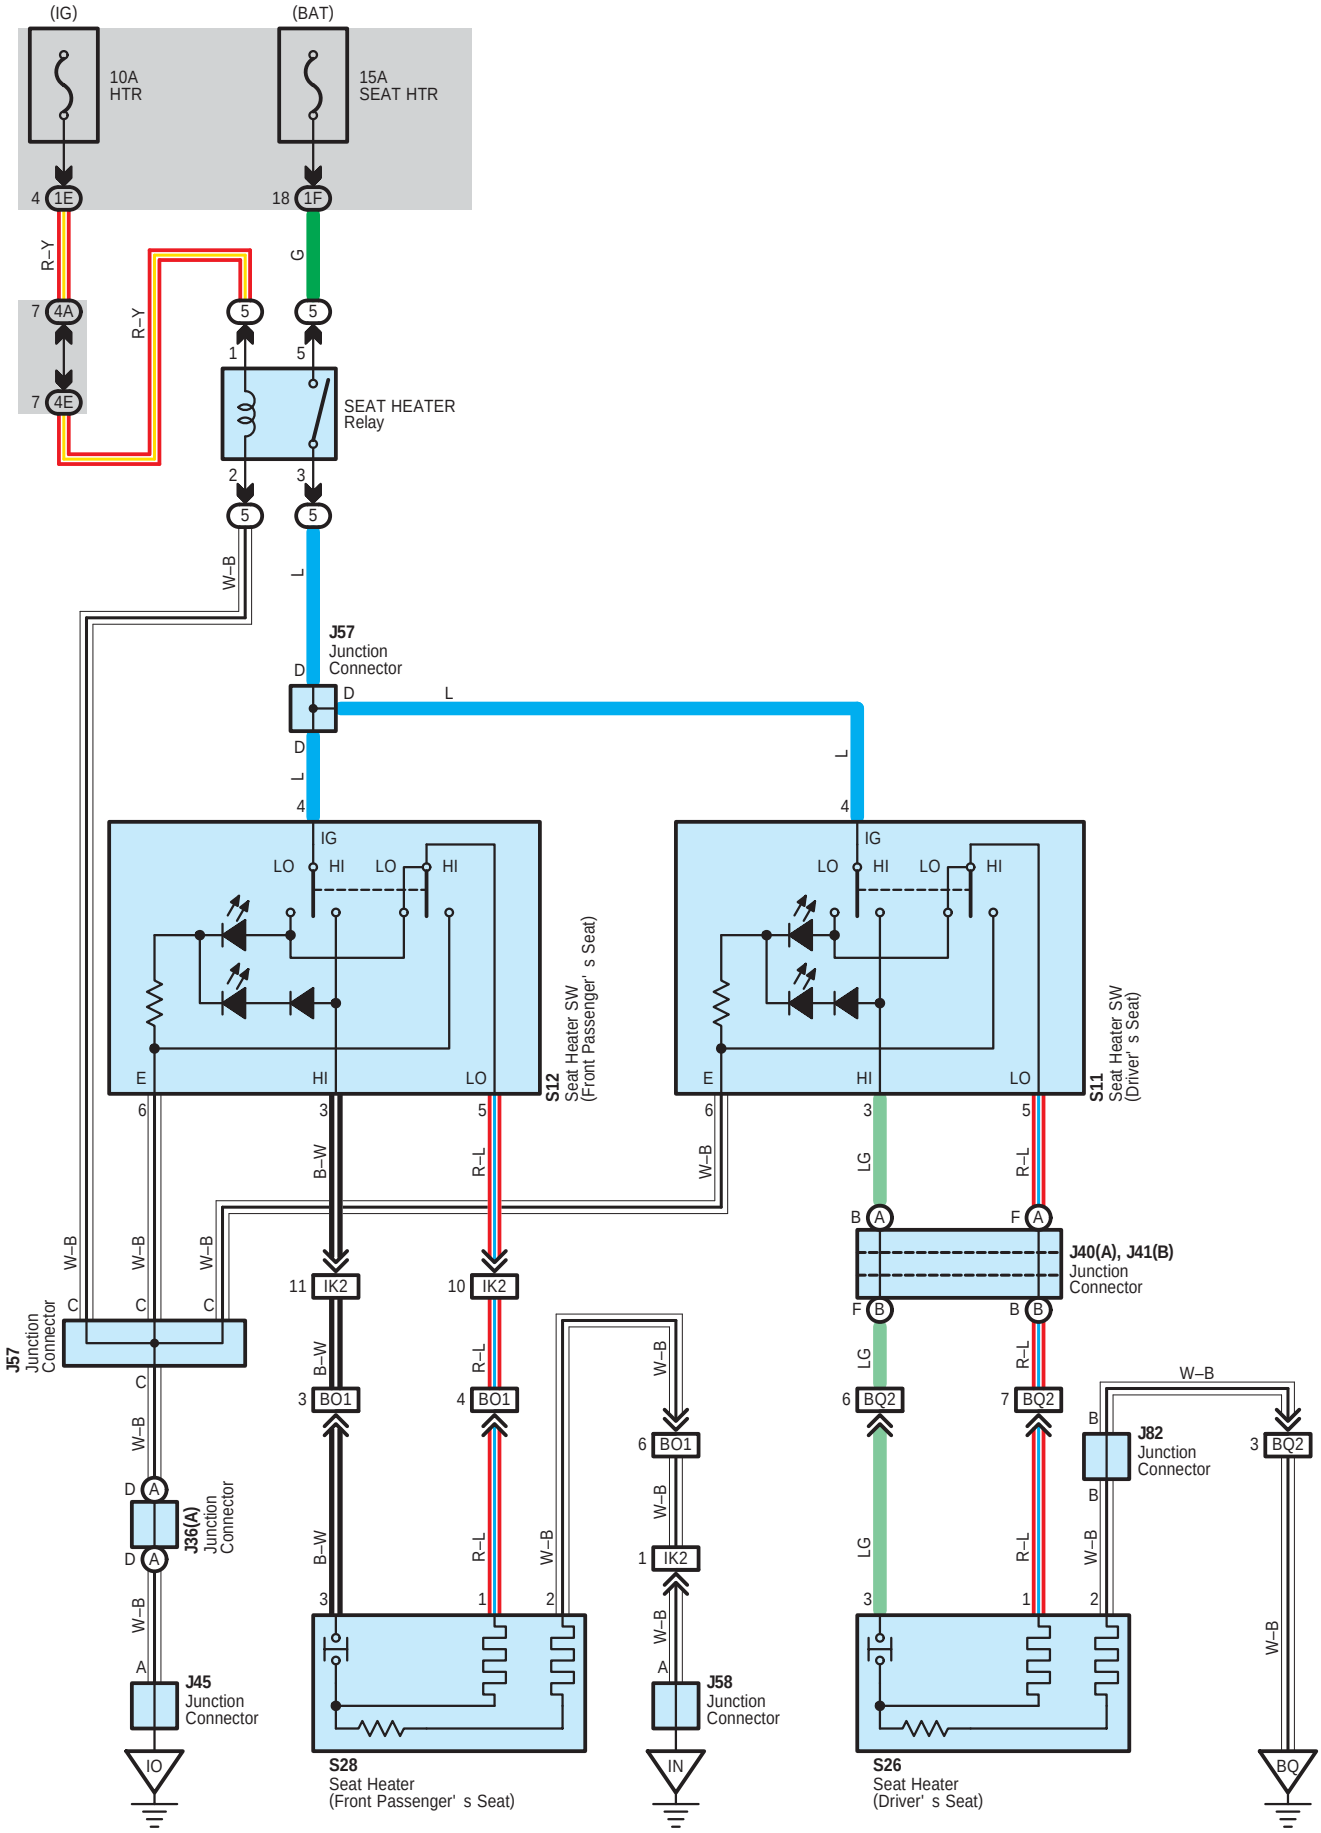

(IG)
(BAT)
10A
HTR
15A
SEAT HTR
4 1E
18 1F
R–Y
G
7 4A
7 4E
R–Y
1
5
5
5
SEAT HEATER
Relay
2
3
5
5
W–B
L
J57
Junction
Connector
D
D
L
D
L
4
4
IG
LO
HI
LO
HI
E
HI
LO
S12
Seat Heater SW
(Front Passenger' s Seat)
S11
Seat Heater SW
(Driver' s Seat)
6
3
5
6
3
5
B–W
R–L
W–B
LG
R–L
B
A
F
A
J40(A), J41(B)
Junction
Connector
F
B
B
B
J57
Junction
Connector
C
C
C
W–B
W–B
W–B
11
IK2
10
IK2
LG
R–L
6
BQ2
7
BQ2
W–B
B
J82
Junction
Connector
3
BQ2
3
BO1
4
BO1
6
BO1
B–W
R–L
W–B
W–B
B
W–B
D
A
D
A
J36(A)
Junction
Connector
1
IK2
LG
R–L
W–B
3
1
2
3
1
2
W–B
A
J45
Junction
Connector
IO
S28
Seat Heater
(Front Passenger' s Seat)
J58
Junction
Connector
IN
S26
Seat Heater
(Driver' s Seat)
BQ

: Parts Location

Code		See Page	Code	See Page	Code	See Page
J36	A	74	J57	74	S12	75
J40	A	74	J58	74	S26	78 (*1)
J41	B	74	J82	78 (*1)	S28	78 (*1)
J45		74	S11	75		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	43	Driver Side R/B (Under the Instrument Panel J/B)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1F		
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4E		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK2	93	Floor Wire and Cowl Wire (Right Kick Panel)
BO1	96 (*1)	Floor Wire and Seat No.1 Wire (Under the Front Passenger's Seat)
BQ2	96 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Driver's Seat)

: Ground Points

Code	See Page	Ground Points Location
IN	92	Right Kick Panel
IO	92	Left Kick Panel
BQ	94	Left Side of Center Pillar

* 1 : Captain Seat * 2 : Separate Seat