
# Rear Window Defogger and Mirror Heater (Double Cab)

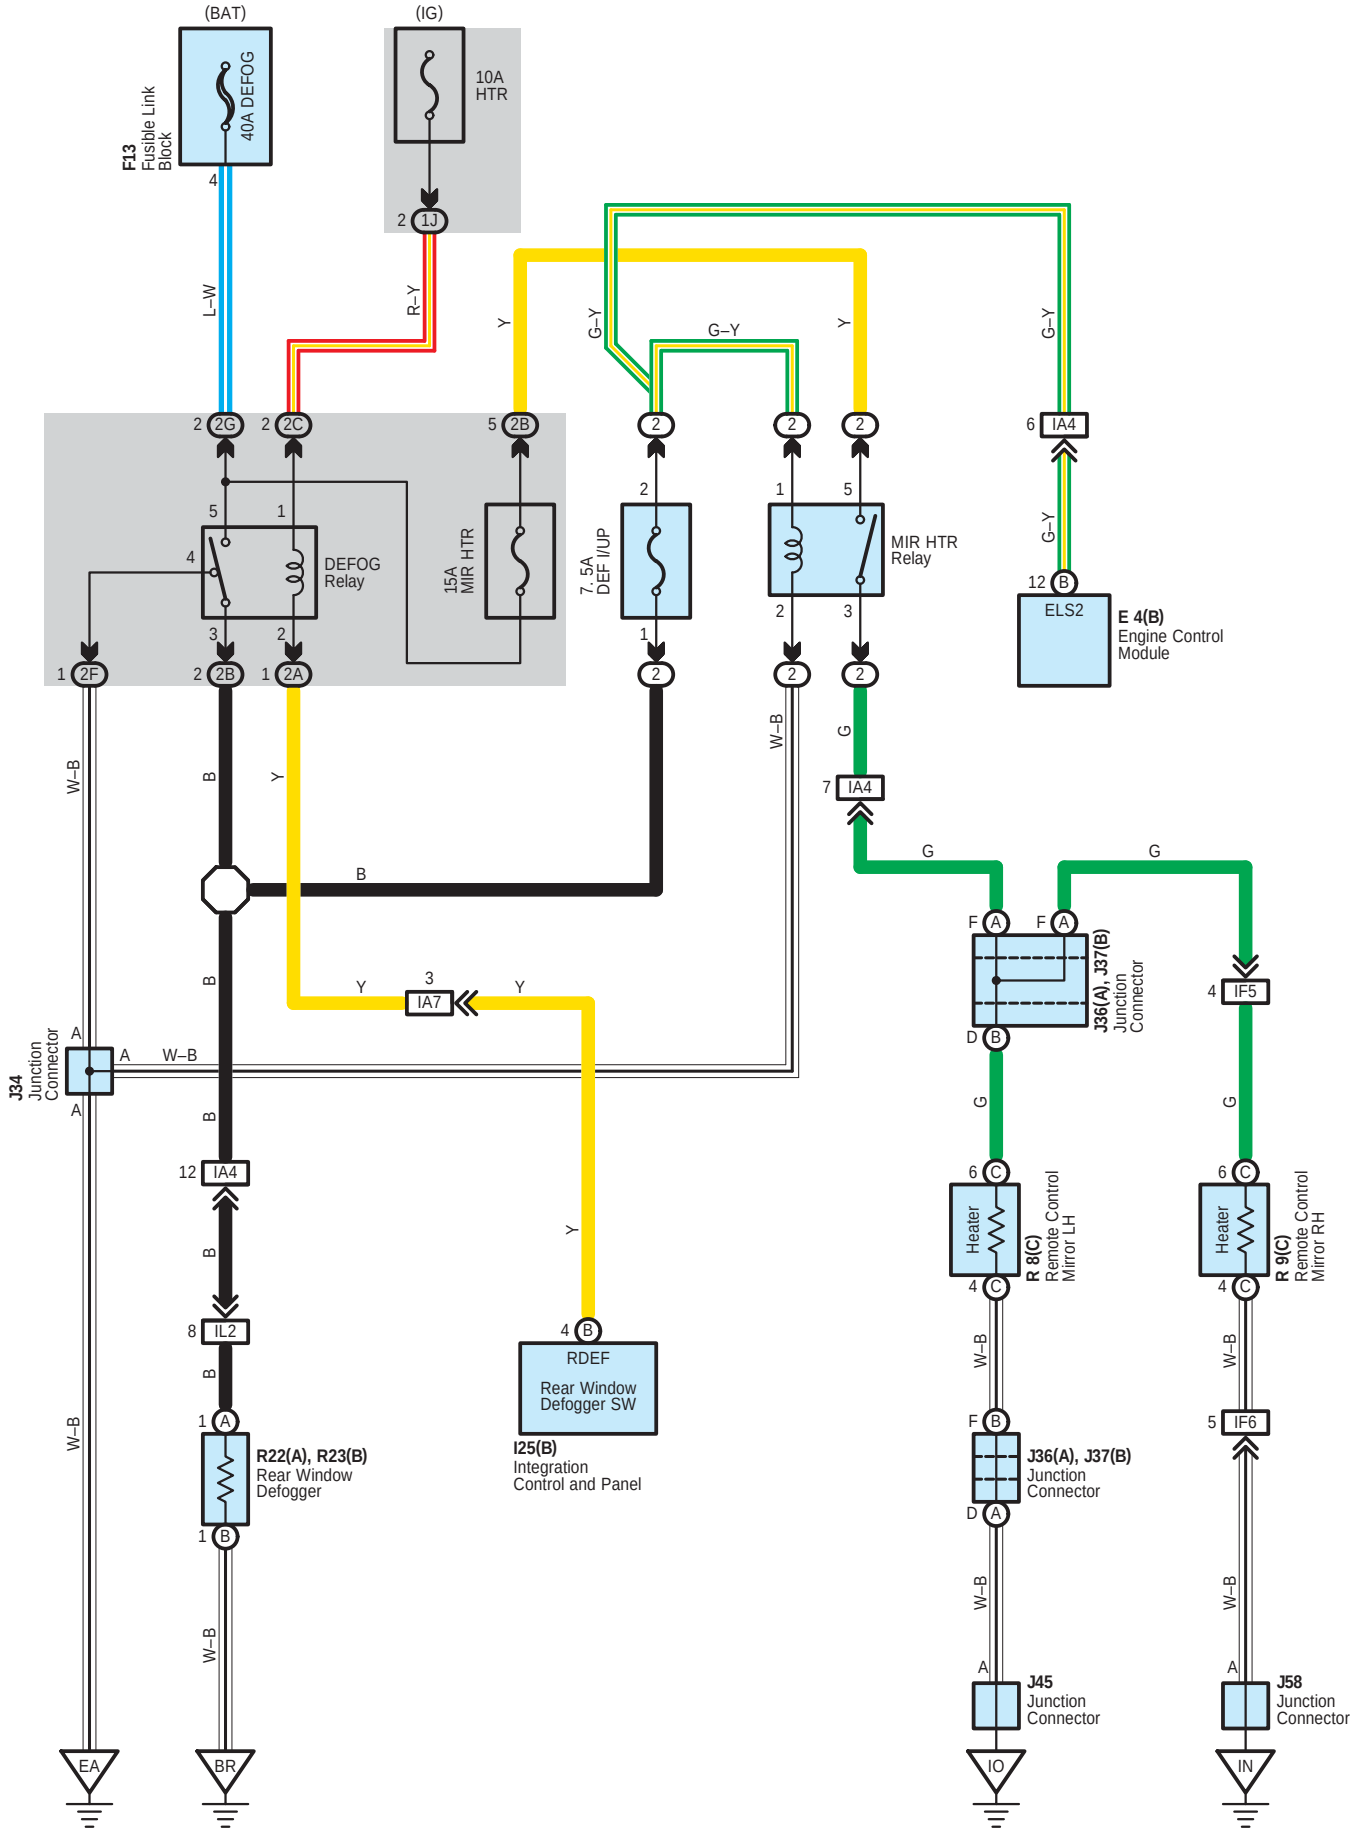

**: Parts Location**

| Code | | See Page | Code | | See Page | Code | | See Page |
|---|---|---|---|---|---|---|---|---|
| E4 | B | 73 | J36 | A | 74 | R8 | C | 77 |
| F13 | | 70 | J37 | B | 74 | R9 | C | 77 |
| I25 | B | 73 | J45 | | 74 | R22 | A | 77 |
| J34 | | 71 | J58 | | 74 | R23 | B | 77 |

**: Relay Blocks**

| Code | See Page | Relay Blocks (Relay Block Location) |
|---|---|---|
| 2 | 42 | Engine Room R/B No.2 (Engine Compartment Left) |

**: Junction Block and Wire Harness Connector**

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|---|---|---|
| 1J | 49 | Engine Room Main Wire and Driver Side J/B (Lower Finish Panel) |
| 2A | 45 | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left) |
| 2B | | |
| 2C | | |
| 2F | | |
| 2G | | |

**: Connector Joining Wire Harness and Wire Harness**

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|---|
| IA4 | 92 | Engine Room Main Wire and Cowl Wire (Left Kick Panel) |
| IA7 | | |
| IF5 | 93 | Front Door RH Wire and Cowl Wire (Right Kick Panel) |
| IF6 | | |
| IL2 | 92 | Floor No.2 Wire and Cowl Wire (Right Kick Panel) |

**: Ground Points**

| Code | See Page | Ground Points Location |
|---|---|---|
| EA | 90 | Front Left Fender Apron |
| IN | 92 | Right Kick Panel |
| IO | 92 | Left Kick Panel |
| BR | 94 | Back Panel Left |