


# Audio System with 8 Speaker (Double Cab)

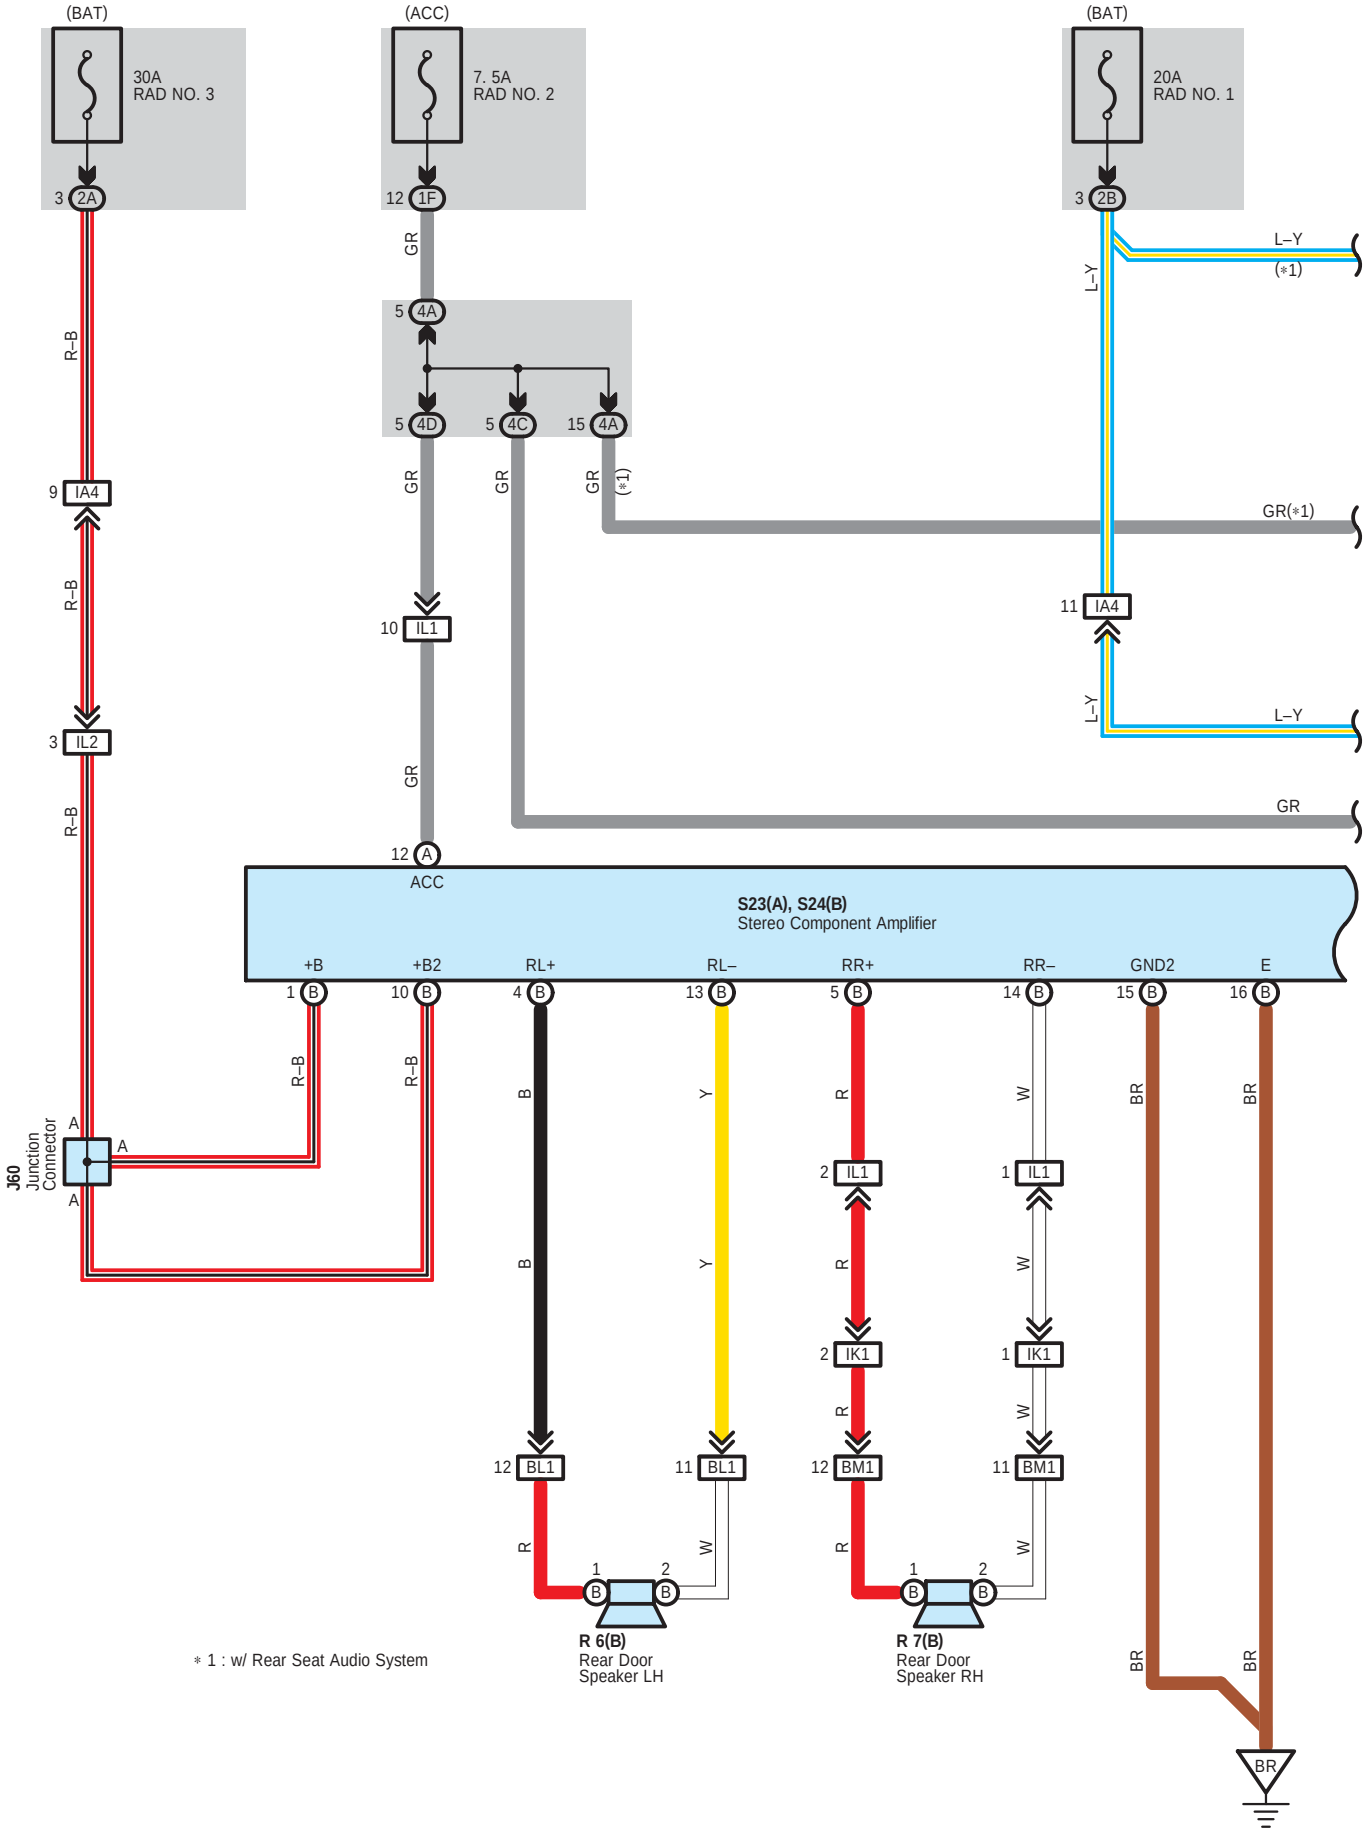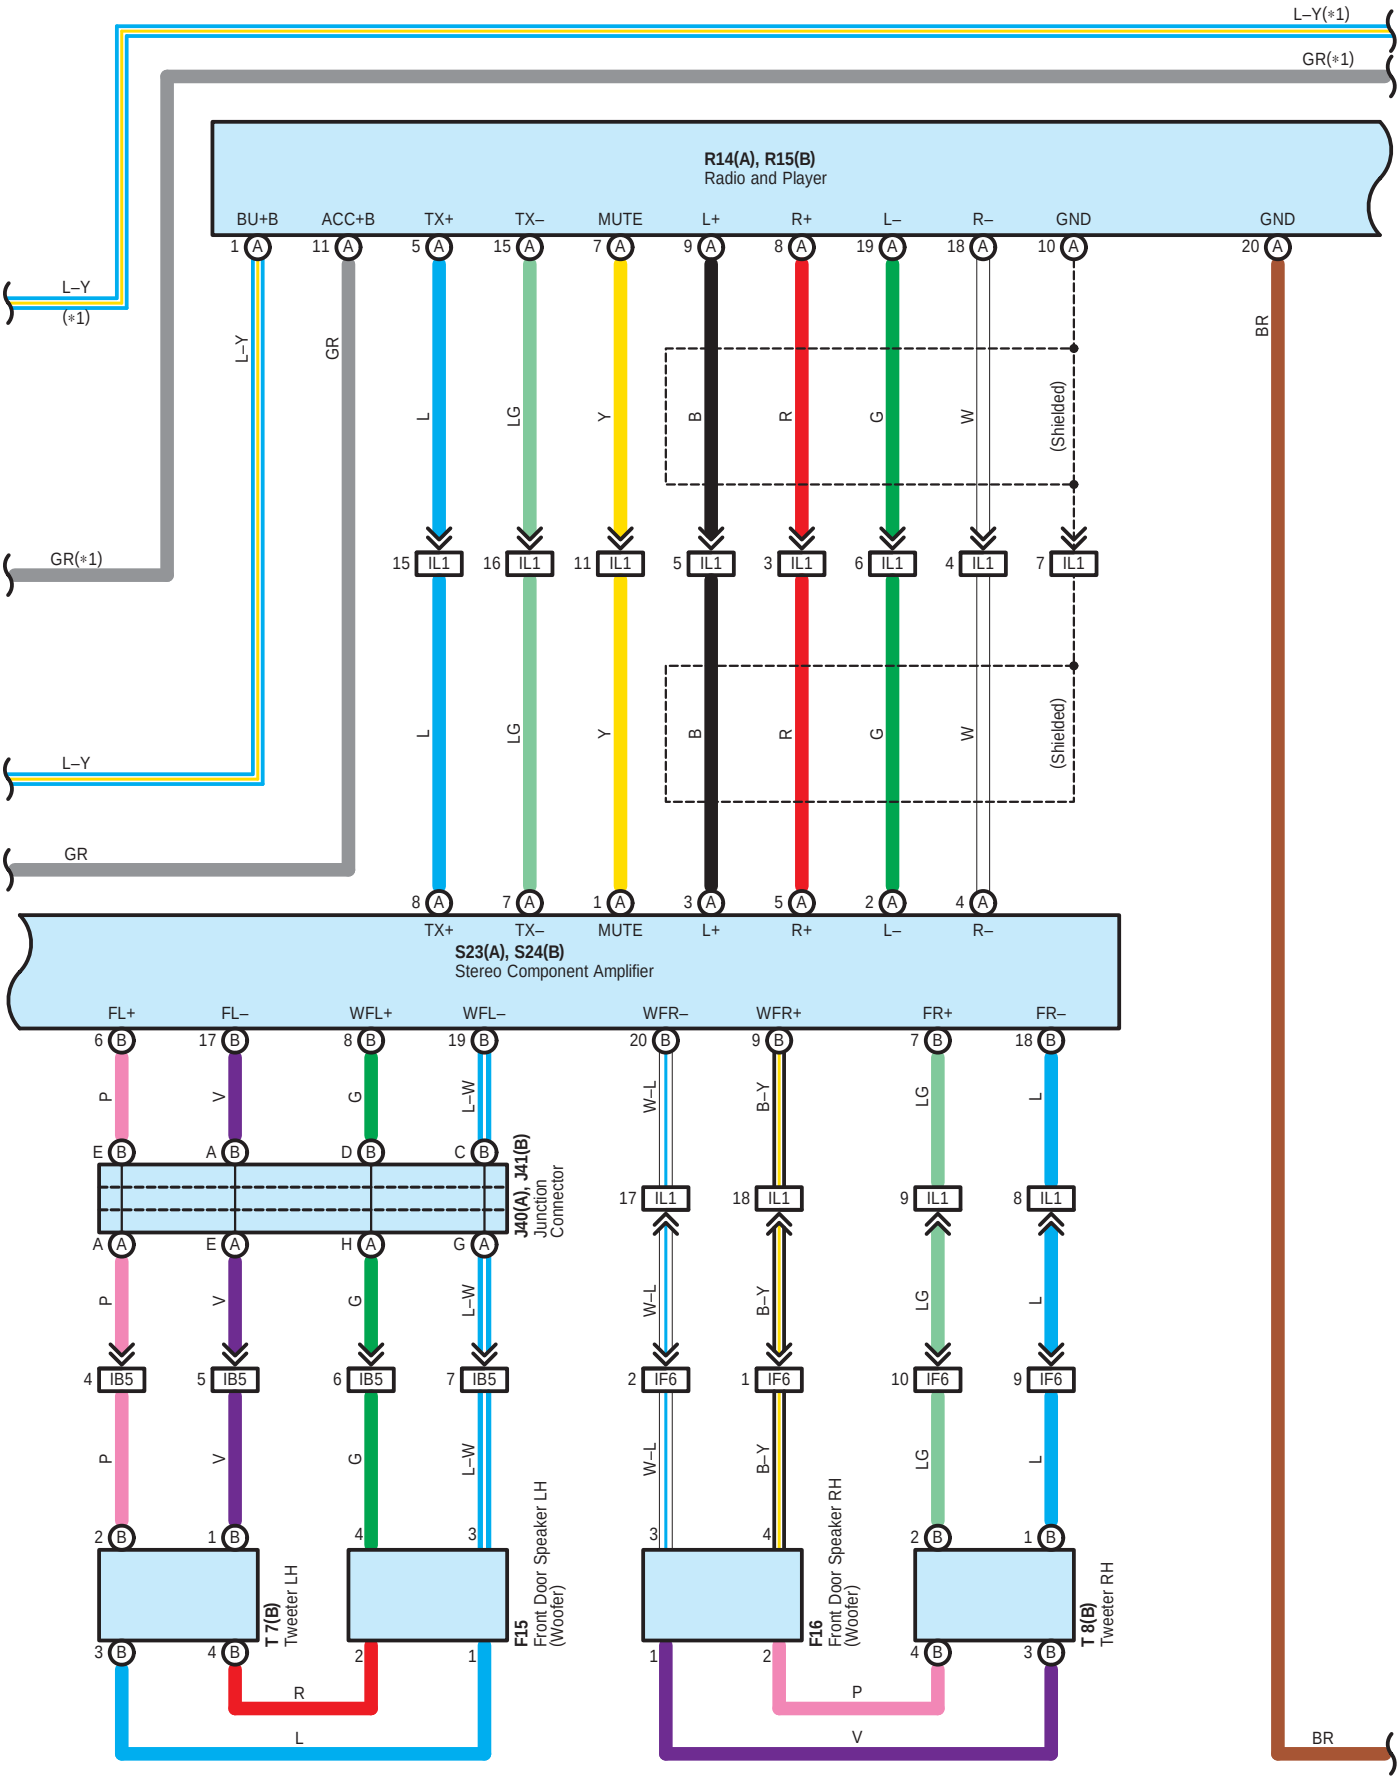


L–Y(*1)
GR(*1)
R14(A), R15(B)
Radio and Player
BU+B
ACC+B
TX+
TX–
MUTE
L+
R+
L–
R–
GND
GND
L–Y
(*1)
GR(*1)
L–Y
GR
L
LG
Y
B
R
G
W
(Shielded)
BR
IL1
S23(A), S24(B)
Stereo Component Amplifier
FL+
FL–
WFL+
WFL–
WFR–
WFR+
FR+
FR–
J40(A), J41(B)
Junction Connector
IB5
IF6
T 7(B)
Tweeter LH
F15
Front Door Speaker LH (Woofer)
F16
Front Door Speaker RH (Woofer)
T 8(B)
Tweeter RH
P
V
G
L–W
W–L
B–Y
R
L
P
BR

# Audio System with 8 Speaker (Double Cab)

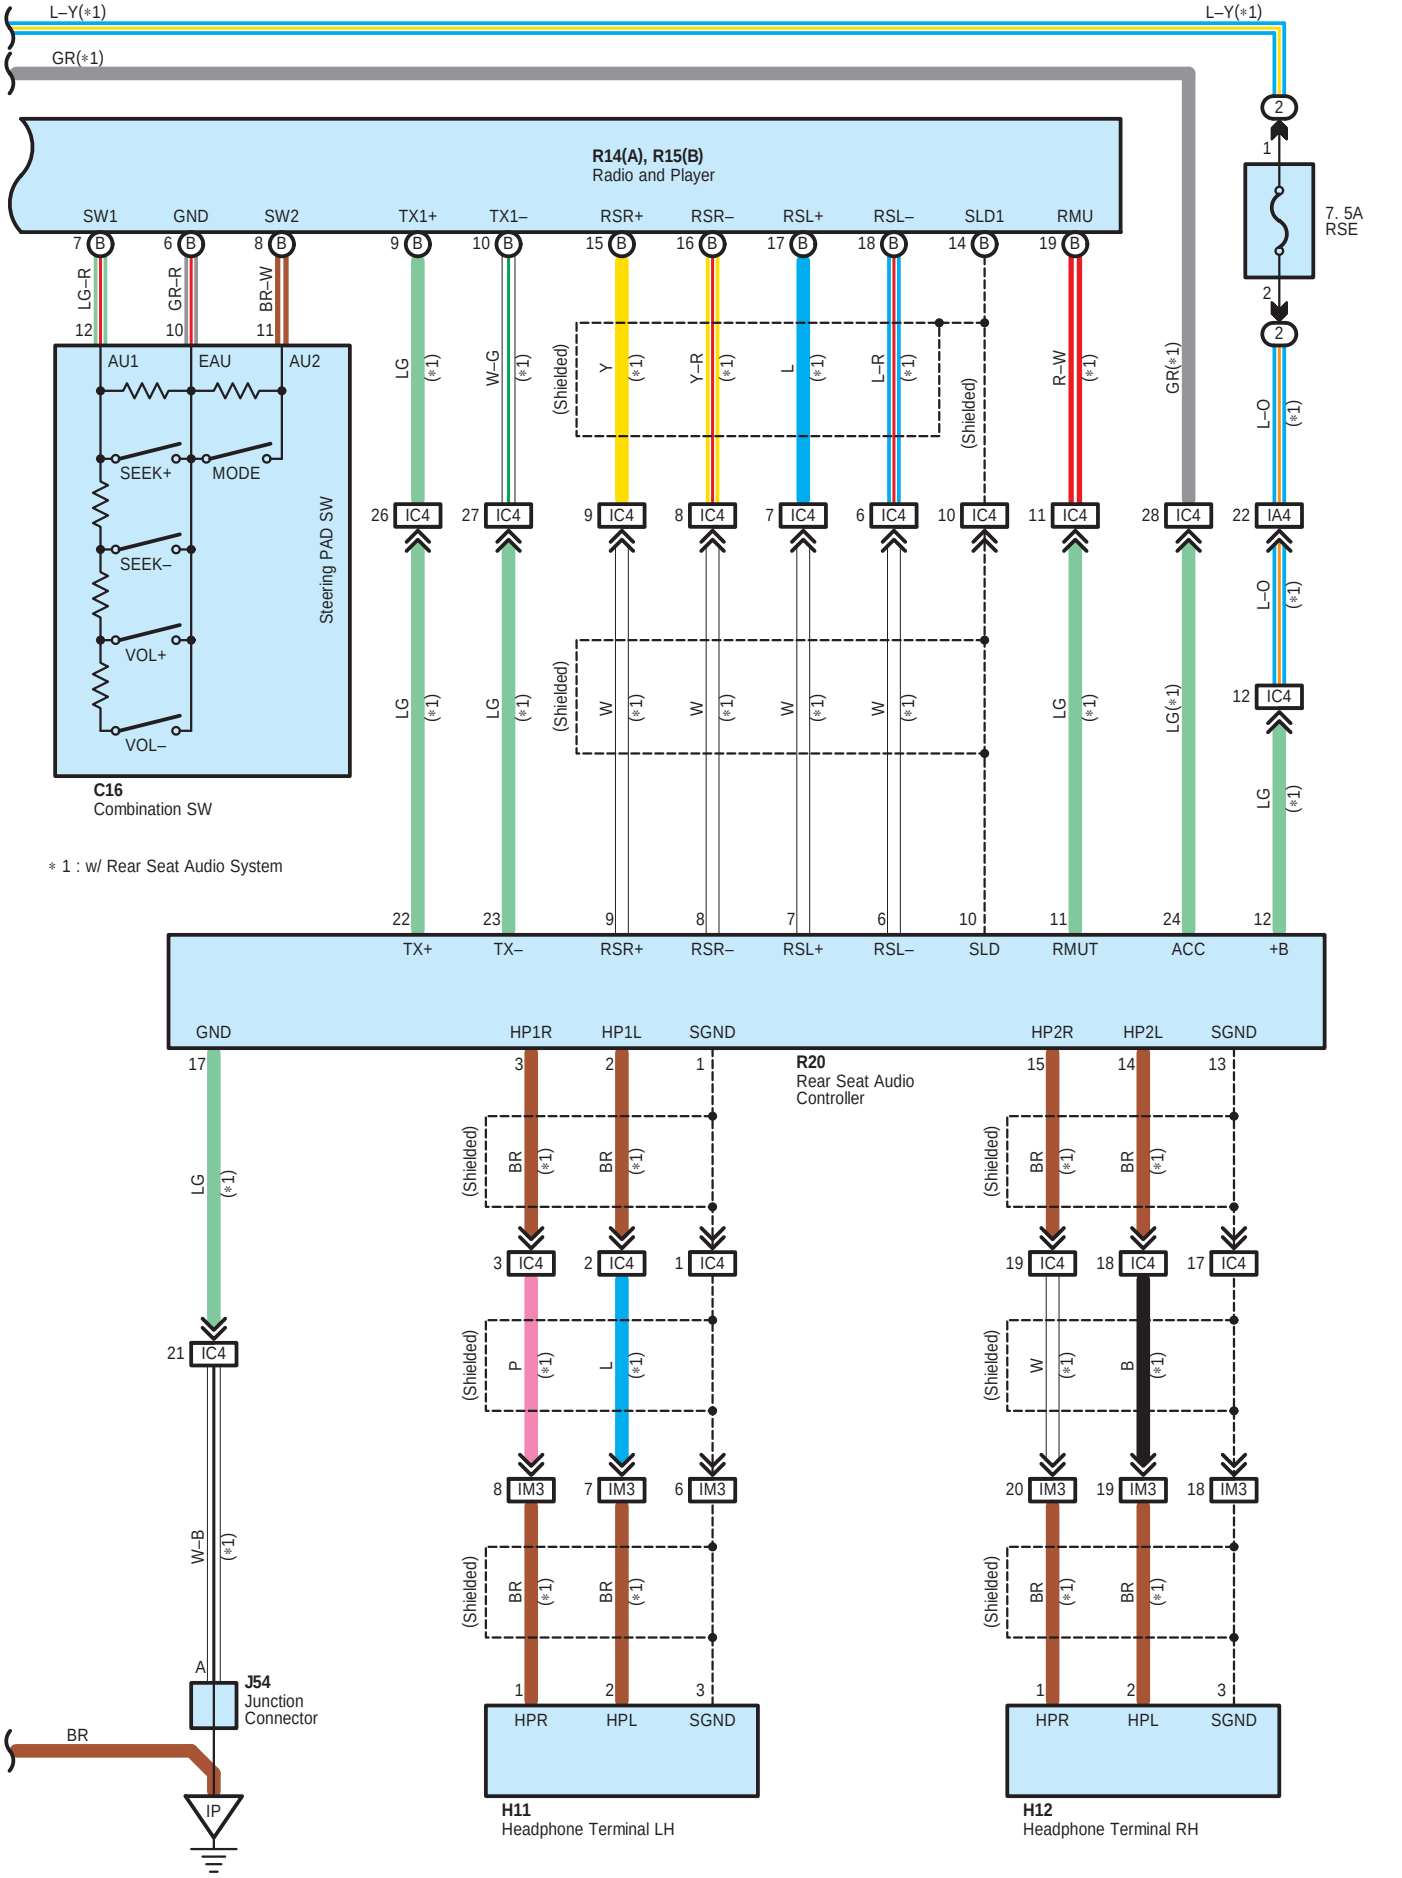

## : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|---|---|---|---|---|---|
| C16 | 72 | J41 B | 74 | R15 B | 75 |
| F15 | 76 | J54 | 74 | R20 | 77 |
| F16 | 76 | J60 | 76 | S23 A | 77 |
| H11 | 73 | R6 B | 77 | S24 B | 77 |
| H12 | 73 | R7 B | 77 | T7 B | 77 |
| J40 A | 74 | R14 A | 75 | T8 B | 77 |

## : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location) |
|---|---|---|
| 2 | 42 | Engine Room R/B No.2 (Engine Compartment Left) |

## : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|---|---|---|
| 1F | 49 | Cowl Wire and Driver Side J/B (Lower Finish Panel) |
| 2A | 45 | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left) |
| 2B | | |
| 4A | 54 | Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal) |
| 4C | | |
| 4D | | |

## : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|---|
| IA4 | 92 | Engine Room Main Wire and Cowl Wire (Left Kick Panel) |
| IB5 | 92 | Front Door LH Wire and Cowl Wire (Left Kick Panel) |
| IC4 | 92 | Cowl Wire and Roof Wire (Left Side of Instrument Panel) |
| IF6 | 93 | Front Door RH Wire and Cowl Wire (Right Kick Panel) |
| IK1 | 93 | Floor Wire and Cowl Wire (Right Kick Panel) |
| IL1 | 93 | Floor No.2 Wire and Cowl Wire (Instrument Panel Brace RH) |
| IL2 | 92 | Floor No.2 Wire and Cowl Wire (Right Kick Panel) |
| IM3 | 92 | Console Box Wire and Cowl Wire (Rear Console) |
| BL1 | 94 | Rear Door No.1 Wire LH and Floor No.2 Wire (Left Side of Center Pillar) |
| BM1 | 94 | Rear Door No.1 Wire RH and Floor Wire (Right Side of Center Pillar) |

## : Ground Points

| Code | See Page | Ground Points Location |
|---|---|---|
| IP | 92 | Instrument Panel Brace LH |
| BR | 94 | Back Panel Left |