
ŠkodaSuperb
OWNER´S MANUAL

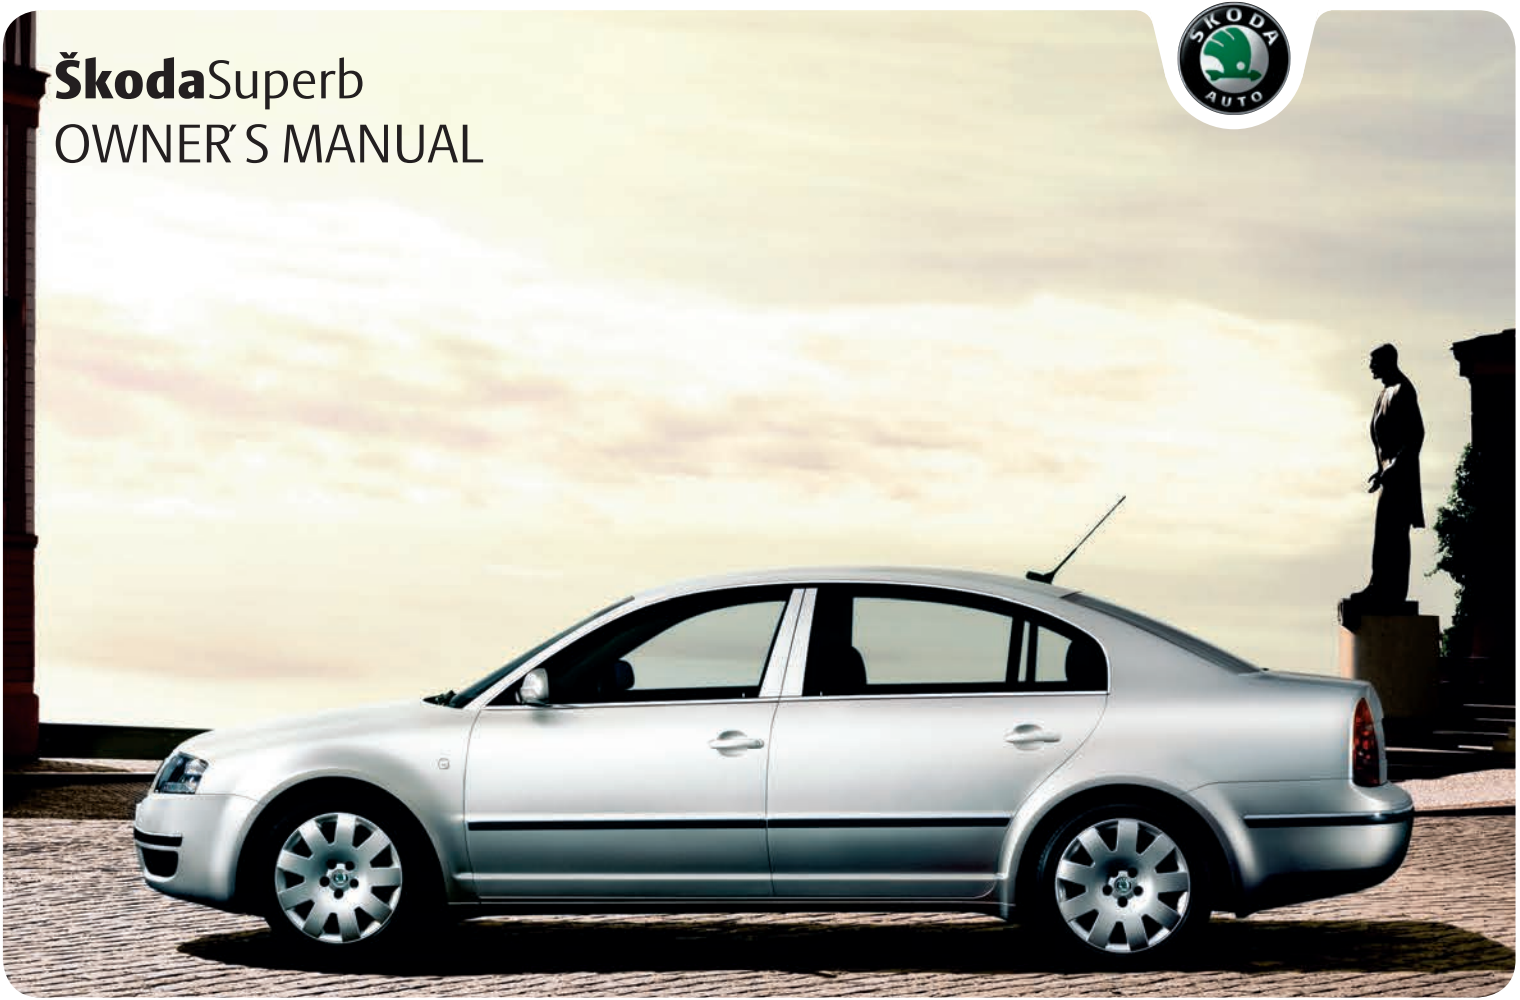

Introduction

You have opted for a Škoda - our sincere thanks for your confidence in us.

Your new Škoda offers you a vehicle featuring the most modern engineering and a wide range of equipment which you will undoubtedly wish to use to the full during your daily motoring. We therefore recommend that you read this Owner's Manual attentively to enable you to become familiar with your vehicle and all that it offers as quickly as possible.

Please do not hesitate to contact your Škoda dealer or importer should you have any further questions regarding your vehicle or any problems which may arise. He will be ready at any time to receive your questions, suggestions and criticisms.

Any national legal provisions which vary from the information contained in this Owner's Manual take precedence over the information contained herein.

We wish you much pleasure with your Škoda and pleasant motoring at all times.

Your **Škoda** Auto

The on-board literature

The on-board literature for your vehicle consists of this “**Owner's Manual**” as well as the brochures “**Service plan**”, “**Technical data**” and “**Travelling assistant**”. There can also be a variety of other additional operating manuals and instructions on-board (e.g. an operating manual for the radio) depending on the vehicle model and equipment.

If one of the publications listed above is missing, please contact a Škoda dealer immediately, where one will be glad to assist you in such matters.

One should note that the details given in the vehicle's papers always take precedence over those in the Owner's Manual.

The Owner's Manual

In addition to information regarding all the controls and equipment, the Owner's Manual also contains important information regarding care and operation for your safety and also to retain the value of your vehicle To provide you with valuable tips and aids. You can learn how how you can operate your vehicle **safely**, **economically** and in an **environmentally** conscious way.

For safety reasons, **please also pay attention to the information on accessories, modifications and replacement of parts** ⇒ page 226.

The other chapters of the Owner's Manual are also important, however, for proper treatment of your car - in addition to regular care and maintenance - helps to retain its value and in many cases is also one of the requirements for warranty claims.

The Service Schedule

contains:

- Vehicle data
- Service intervals
- Overview of the service work
- Service proof
- Confirmation of mobility warranty
- important information on the warranty

The confirmation of the service work carried out is a requirement for a warranty claim.

Please always present the Service Schedule when you take your car to a Škoda dealer.

In case the Service Schedule is missing, lost or not valid, please contact your Škoda dealer, where your car is serviced regularly. You will receive a duplicate, in which the previously carried out service work are confirmed.

Assistance in Europe

contains the addresses and telephone numbers of Škoda Importers.

Technical Data

includes the most important identification data of your vehicle.

Contents

Layout of this Owner's Manual ... 7

Using the system ... 9

Cockpit ... 11
- An overview ... 11

Instruments and Indicator/Warning Lights ... 13
- General view of the instrument cluster ... 13
- Engine revolutions counter ... 14
- Coolant temperature gauge ... 14
- Fuel gauge ... 15
- Digital clock ... 15
- Speedometer with counter for distance driven ... 16
- Service Interval Display ... 17
- Multi-functional indicator* ... 18
- Information display* ... 22
- Auto Check Control ... 25
- Warning lights ... 28

Unlocking and locking ... 37
- Keys ... 37
- Central locking system ... 39
- Child safety locks ... 45
- Remote control ... 46
- Anti-theft alarm system ... 47
- Power windows ... 49
- Electric sliding/tilting roof* ... 52

Lights and Visibility ... 56
- Lights ... 56
- Interior lighting ... 60
- Visibility ... 62
- The windscreen wiper and washing system ... 64
- Rear-view mirror ... 66

Seats and Stowage ... 69
- Front seats ... 69
- Adjusting front seats manually ... 69
- Adjusting front seats electrically* ... 70
- Front passenger seat with a folding central back rest* ... 75
- Footrest at the rear* ... 77
- Seat heaters* ... 77
- Pedals ... 78
- Luggage compartment ... 78
- The cool box in the armrest of rear seats* ... 82
- CargoFlex folding box* ... 85
- The roof luggage rack system ... 88
- Drinks can holder ... 90
- Ashtray ... 91
- Cigarette lighters and power sockets ... 93
- Storage facilities ... 95

Heating and air conditioning system ... 102
- The air conditioning system ... 102
- Climatronic* (automatic air conditioning) ... 107

Starting-off and Driving ... 114
- Setting steering wheel position ... 114
- Ignition lock ... 114
- Starting engine ... 115
- Switching the engine off ... 117
- Shifting gears ... 118
- Handbrake ... 118
- Parking aid* ... 119
- Cruise control system (CCS)* ... 120

Automatic gearbox* ... 123
- 5-speed automatic gearbox ... 123

Communicating and Navigating ... 130
- Multifunction steering wheel* ... 130
- Mobile phone, two-way radio system and navigation system ... 132

Safety ... 137

Passive Safety ... 137
- Driving the safe way ... 137
- Requirements for maximum safety ... 137

Seat belts ... 138
- Why seat belts? ... 138
- The physical principle of a frontal collision ... 139
- Important safety information regarding the use of seat belts ... 140
- How are seat belts correctly fastened? ... 141
- Belt tensioners ... 143

Airbag system ... 145
- Description of the airbag system ... 145
- Front airbags ... 147
- Side airbags ... 149
- Head airbags* ... 152
- Deactivating an airbag ... 154

Transporting children safely ... 157
- What you should know about transporting children! ... 157
- Child seat ... 161
- Attaching child safety seat ... 164

Driving Tips ... 169

Intelligent Technology ... 169
- Electronic stability programme (ESP)* ... 169
- Brakes ... 172
- Antilock brake system (ABS) ... 173
- Brake Assist* ... 174
- Power steering ... 174

Driving and the Environment ... 176
- The first 1 500 kilometres and then afterwards 176
- Catalytic converter ... 177
- Motoring abroad ... 178
- Avoiding damage to your vehicle ... 178
- Driving in an economical and environmentally conscious manner ... 179
- Environmental compatibility ... 183

Towing a trailer ... 184
- Towing a trailer ... 184
- Detachable towing device* ... 186

General Maintenance ... 189

Care and cleaning ... 189
- General ... 189
- Care of the exterior of vehicle ... 189
- Care of the interior of vehicle ... 194
- Engine compartment ... 196

Fuel ... 198
- Petrol ... 198
- Diesel ... 198
- Refuelling ... 200

Inspecting and Replenishing ... 202
- Engine compartment ... 202
- Overview of the engine compartment ... 204
- Engine oil ... 205
- Cooling system ... 208
- Brake fluid ... 210
- The battery ... 212
- Windscreen Wiper and Washer System ... 217
- Spark plugs ... 217
- V-ribbed belts ... 218
- The dust and pollen filter* ... 218

Wheels and Tyres ... 219
- Wheels ... 219

Accessories, changes and replacement of parts ... 226
- General ... 226

Breakdown assistance ... 227

Breakdown assistance ... 227
- First-aid box* ... 227
- Warning triangle ... 227
- Fire extinguisher* ... 228
- Vehicle tool kit ... 228
- Spare wheel ... 229
- Changing a wheel ... 229
- Jump-starting ... 236
- Tow-starting and towing vehicle ... 238

Fuses and light bulbs ... 241
- Electric fuses ... 241
- Bulbs ... 243

Technical Data ... 249

General ... 249
- Vehicle identification data ... 249

Index ... 251

1


Validus per carri: cum cabballus, cum taurus

2

Res gestae divi Augusti

3

Ter munus gladiatorium dedi meo nomine et quinquiens filiorum meorum aut nepotum nomine.

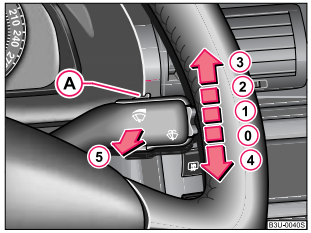

Img. 1 Triumvirum rei publicae constituendae fui per continuos annos decem.

4

- Eo nomine senatus ↻ decretis honirificis in ordinem suum me adlegit C. Pansa et A. Hirtio consulibus ⇒ img. 1 ④ consularem locum sententiae dicendae tribuens et imperium mihi dedit.

5

- Res publica ne quid detrimenti caperet ⇒ ⚠, me pro praetore simul cum consulibus providere iussit Ⓡ.

6

Monumentum Apolloniense*

Qui parentem meum trucidaverunt, eos in exilium expuli iudiciis legitimis ultus eorum facinus AUTO et postea bellum inferentis rei publicae vici bis acie.

① Populus autem eodem anno me consulem
② cum cos. uterque in bello cecidisset
Ⓡ et triumvirum rei publicae constituendae creavit ⇒ codex 1.1, caput "Saturnalia"

7

⚠ INTENTIO!

Bella terra et mari civilia externaque toto in orbe terrarum saepe gessi victorque omnibus veniam petentibus vicibus peperci.

8

ⓘ Monitio!

- Extemas gentes, quibus tuto ignosci ptuit, conservare quam excidere malui ⇒ *pagina 6*, "Monumentum Antiochenum".

- Millia civum Romanorum sub sacramento meo fuerunt circiter quingenta.

9

❀ Nota ad terram

Ex quibus deduxi in colonias aut remisi in municipia sua stipendis emeritis millia aliquanto plura quam trecenta, et iis omnibus agros adsignavi aut pecuniam pro praemis militiae dedi.

10

ⓘ Nota

Naves cepi sescentas praeter cas, si quae minores quam triremes fuerunt. Bis ovans triumphavi et tris egi curulis triumphos et appellatus sum viciens et semel imperator, decernente pluris triumphos mihi senatu quibus omnibus supersedi.

B3U-0205S

Fig. 1

Layout of this Owner's Manual

The Owner's Manual has been systematically designed, in order to make it easy for you to find and absorb the information you require. A sample page of the manual is illustrated in ⇒ page 6, fig. 1. The text in this case is in Latin as the important aspect here is not the contents. This page is an example we have taken in order to explain to you the following aspects and designations of the text.

Chapters, table of contents and subject index

The text of the manual are divided into relatively short sections which are combined into easy-to-read **chapters**. The chapter you are reading at any particular moment is highlighted at the bottom right of the page.

The **Table of contents** is arranged according to the chapters and the detailed **Subject index** at the end of the Owner's Manual helps you to rapidly find the information you are looking for.

Sections

The majority of **Sections** apply to all models.

Since there is a wide range of different equipment and options available it is clearly unavoidable, despite dividing the contents into sections, that mention may be made of equipment which is not fitted to your vehicle.

Equipment which is marked * is only standard on certain vehicle model versions or only suppliable as optional equipment for certain models, cf. 6.

Brief information and instructions

Each section has a **Heading**, cf. 2.

This is followed by **Brief information** (in large italic lettering), which tells you the subject which is dealt with in this section, cf. 3.

Most of the illustrations are accompanied by an **Instruction** (in relatively large letters) which explains to you in a straightforward way the action you have to take. We have identified the corresponding **Actions** with a dash, cf. 4.

Notes

There are 4 different types of notes which are all presented on this example page. Such guidelines are presented together at the end of the section.

The most important type of comments are the **Warnings**, cf. 7. These **Warning** notes draw your attention to a **serious risk of accident or injury**. While reading the text you will frequently encounter a double arrow followed by a small warning symbol, cf. 5. This symbol is intended to draw your attention to a **Warning** note at the end of the section to which you **must** pay careful attention.

A **Caution** note, cf. 8, draws your attention to the possibility of damage to your vehicle (e.g. damage to gearbox), or points out general risks of an accident .

An **Environmental** note, cf. 9, draws your attention to environmental protection aspects. This is where you will, for example, find tips aimed at reducing your fuel consumption.

A normal **Note** cf. 10, draws your attention in a general way to important information.

Direction indications

All direction indications such as “left”, “right”, “front”, “rear” relate to the direction of travel of the vehicle. ■

Using the system

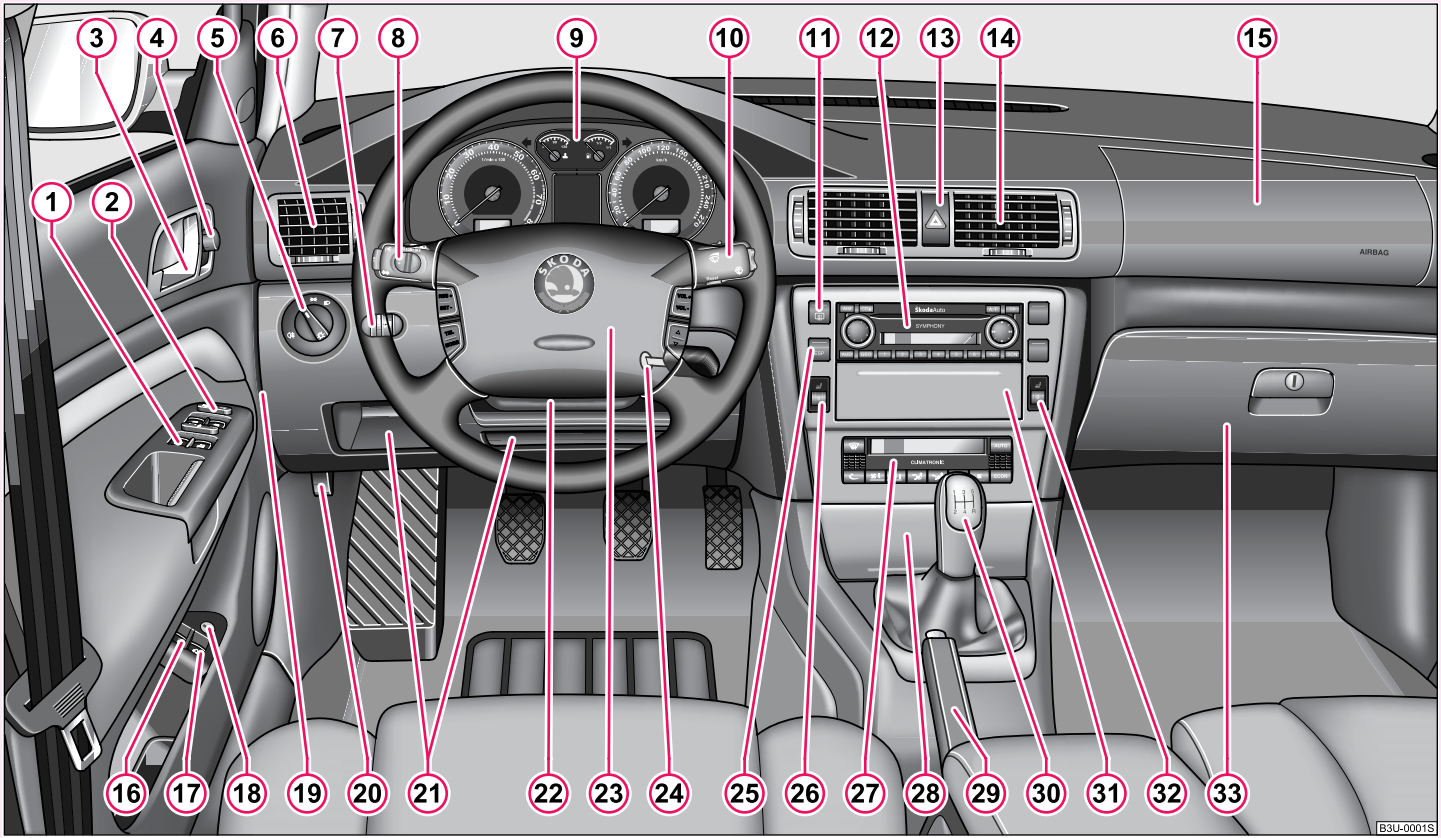


Fig. 2 Certain items of equipment shown in the illustration are only fitted to particular model versions or are optional items of equipment.

Cockpit

An overview

This general view is designed to help you to quickly become familiar with the instruments, gauges and controls.

(1) Power windows 49
(2) Central locking switch 42
(3) Door handle
(4) Electric exterior mirror adjustment 67
(5) Light switch 56
(6) Air outlet vents 106
(7) Headlight range adjustment 58
(8) Lever for turn signal lights and main beam 59
(9) Instrument cluster 13
(10) Lever and switches for:
– Windshield wiper/wash system 64
– Multi-functional indicator 18
(11) Switch for rear window heater 62
(12) Depending on equipment fitted:
– Radio
– Navigation system (Navigation, Radio, CD Player)
(13) Switch for hazard warning lights 58
(14) Air outlet vents 106
(15) Front passenger airbag 147
(16) Fuel filler flap remote release 42
(17) Boot lid remote release 42
(18) Deactivating boot lid remote release 42
(19) Fuse box (on side of dash panel) 241
(20) Bonnet remote release 202
(21) Storage compartments 95
(22) Lever for adjusting the steering wheel 114
(23) Steering wheel:
– with horn
– with driver airbag 147
– with pushbuttons for radio, mobile phone and cruise control system (CCS) 130
(24) Ignition lock 114
(25) Depending on equipment fitted:
– Switch for ESP* 169
– Switch for TCS* 170
(26) Control dial for heating on the driver's seat 77
(27) Depending on equipment fitted:
– Air conditioning 102
– Climatronic 107
(28) Ashtray, cigarette lighter/socket 91
(29) Handbrake 118
(30) Depending on equipment fitted:
– Gearshift lever for manual gearbox 118
– Selector lever for automatic gearbox 123
(31) Storage compartment 95
(32) Control dial for heating on the front passenger seat 77
(33) Lockable storage compartment on the front passenger side 95

Note

- Equipment which is marked * is only standard on certain vehicle model versions or only suppliable as optional equipment for certain models.
- Vehicles with factory-fitted radio, mobile phone, navigation system, CD player etc. are supplied with separate instructions for operating such equipment.
- The arrangement of the controls and switches and the location of some items on right-hand drive models may differ from that shown in ⇒ page 10, fig. 2. The symbols on the controls and switches are the same as for left-hand drive models. ■

Instruments and Indicator/Warning Lights

General view of the instrument cluster

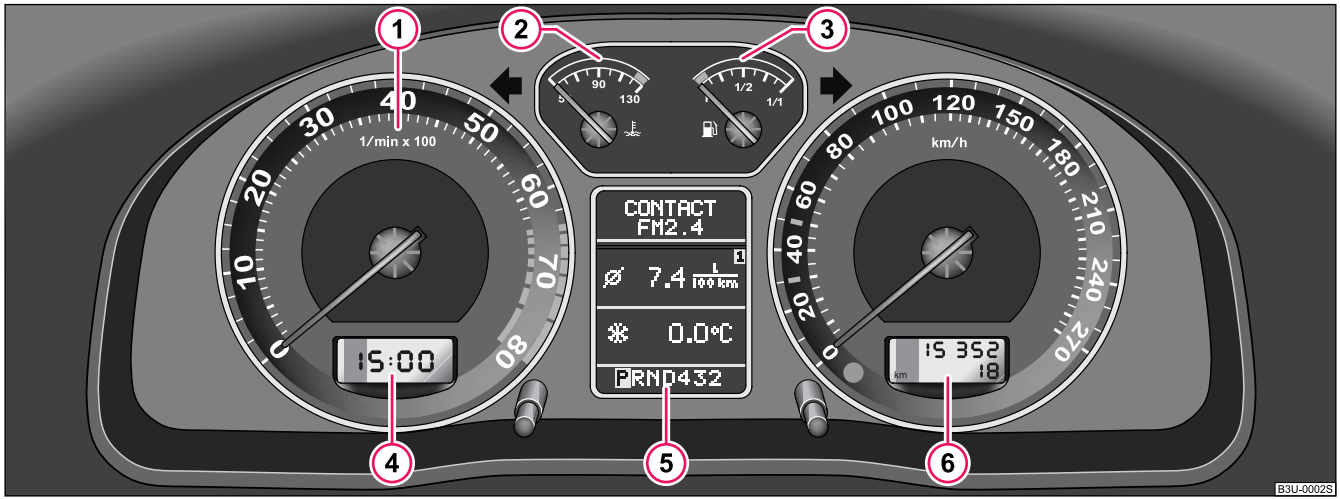


Fig. 3 Instrument cluster

(1) Engine revolutions counter 14
(2) Coolant temperature gauge 14
(3) Fuel gauge 15
(4) Digital clock and multi-functional indicator* 15, 18
(5) Information display* 22
(6) Speedometer
– with counter for distance driven 16
– with trip counter for distance driven 16
– with Service Interval Display 17

When the lights are switched on, the instrument cluster is illuminated. ■

Engine revolutions counter

The start of the red zone in the revolutions counter (1) ⇒ page 13, fig. 3 indicates the maximum permissible engine speed for all gears for an engine which has been run in and operating at a normal temperature. You should shift into the next higher gear before this red zone is reached, or move the selector lever into position **D** if your car is fitted with an automatic gearbox.

One should shift to the next lower gear at the latest when the engine is no longer running smoothly.

Avoid high engine speeds during the running-in period ⇒ page 176

Caution

The needle of the revolutions counter must on no account move into the red zone of the scale: Risk of damage to the engine!

For the sake of the environment

Shifting up early helps you save fuel and reduce the operating noise of your vehicle. ■

Coolant temperature gauge

The coolant temperature gauge (2) ⇒ page 13, fig. 3 only operates when the ignition is switched on.

In order to avoid any damage to the engine, please pay attention to the following notes regarding the temperature ranges:

Cold range

If the pointer is still in the left-hand area of the scale it means that the engine has not yet reached its operating temperature. Avoid running at high engine speeds, at full throttle and at severe engine loads.

The operating range

The engine has reached its operating temperature as soon as the pointer moves into the mid-range of the scale. The pointer may also move further to the right at high engine loads and high outside temperatures. This is not critical provided the warning symbol in the instrument cluster does not flash.

If the symbol in the instrument cluster flashes it means that either the coolant **temperature** is too high or the coolant **level** is too low. Please refer to the guidelines ⇒ page 31, “Coolant temperature/coolant level ”.

WARNING

Pay attention to the warning notes ⇒ page 203, “Working in the engine compartment” before opening the bonnet and inspecting the coolant level.

Caution

Additional headlights and other attached components in front of the fresh air inlet impair the cooling efficiency of the coolant. There is then a risk of the engine overheating at high outside temperatures and high engine loads! ■

Fuel gauge

The fuel gauge (3) ⇒ page 13, fig. 3 only operates when the ignition is switched on.

The fuel tank has a capacity of about 62 litres. The warning symbol in the instrument cluster lights up when the pointer reaches the reserve marking. There are now about 8 litres of fuel remaining in the tank. This symbol is a reminder for you, **that you must refuel**.

A peep sounds as an additional warning signal.

Caution

Never run the fuel tank completely empty! An irregular fuel supply can result in poor ignition or misfiring. Unburnt fuel may get into the exhaust system and damage the catalytic converter. ■

Digital clock

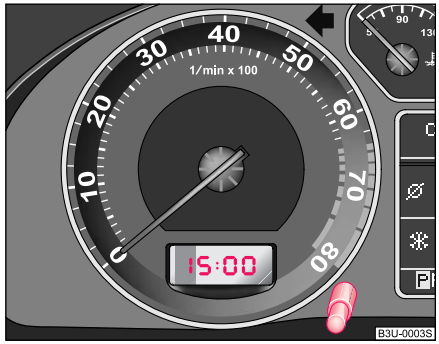


Fig. 4 Instrument cluster: Digital clock

You can set the time with the reset button at the bottom right next to the rev counter.

Setting clock

– Turn the reset button to the left.

Setting minutes

– Turn the reset button to the right.

WARNING

The clock should not be adjusted while driving for safety reasons but only when the vehicle is stationary. ■

Speedometer with counter for distance driven

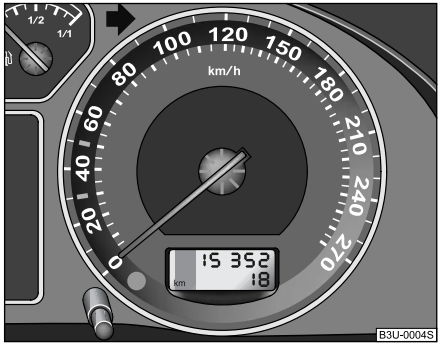


Fig. 5 Instrument cluster: Counter for distance driven

The distance which you have driven with your vehicle is shown in kilometers (km). On certain model versions, the readout is shown in “miles”.

Bottom counter (trip counter) for distance driven

The bottom counter indicates the distance which you have driven since this counter was last reset - in steps of 100 metres or 1/10 of a mile. It can be reset to zero by pressing the reset button next to the trip counter ⇒ fig. 5.

Top counter for distance driven

The top counter for distance driven indicates the total distance in kilometers or miles which the vehicle has been driven.

Fault display

dEF will appear as a constant text in the display field of the counter for distance driven if there is a fault in the instrument cluster. Have this fault rectified without delay by a Škoda dealer.

Warning against excessive speeds*

An acoustic warning signal will sound when the vehicle speed exceeds 120 kilometres per hour. The acoustic warning signal will switch off again when the vehicle speed goes below this speed limit.

This function is only valid for some countries.

WARNING

Never seek to adjust the trip counter for distance driven while driving for safety reasons.

Service Interval Display

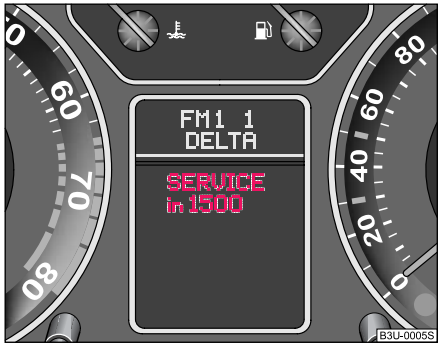


Fig. 6 Instrument cluster: Service Interval Display

Depending on the equipment installed in the vehicle, the information appears in the display of the counter for distance driven or in the information display⇒ fig. 6.

Service Interval Display

If the due date for the service is reached, the following text appears after switching on the ignition:

in the display of the trip counter

Service 1 500 km

in information display

SERVICE in 1500 km

Prior to the due date for the service the kilometer readout decreases in steps of 100 km. As soon as the due date for the service is reached, the following text appears:

in the display of the trip counter

Service

in information display

Service now

The display disappears within 20 seconds after starting the engine. The trip counter is also displayed after pressing the reset button of the trip counter (for more than 1 second).

Resetting Service Interval Display

We recommend having this resetting performed by a Škoda Dealer.

Škoda dealer:

- resets the memory of the display after the appropriate inspection;
- makes an entry in the Service Schedule;
- affix the sticker to the side of the dash panel on the driver's side, where the following service interval is entered.

It is also possible for you to reset the Service Interval Display with the reset button of the trip counter for distance driven as follows (does not apply to models with fixed service intervals - QG2).

- Switch off the ignition, press the reset button of the trip counter for distance driven and hold it down.
- Switch the ignition on and release the reset button of the trip counter. The text **Service** or **Service now** appears in the display.
- Turn the button for resetting the clock to the right - the display is reset.

Caution

We recommend that you do not reset the Service Interval Display yourself otherwise this can result in the service interval display being incorrectly set, which may also result in problems with operation of your vehicle.

Note

- Never reset the display between service intervals otherwise this may result in incorrect readouts.
- information is retained in the Service Interval Display also after the battery of the vehicle is disconnected.
- it is necessary to re-code the Service Interval Display if a new instrument cluster is installed during repair work. this work is carried out by a Škoda dealer.
- After resetting the display with flexible service intervals (QG1) using the reset button of the counter for distance driven, the data displayed are the same as for a car with fixed service intervals (QG2).
- We therefore recommend having the Service Interval Display reset only by a Škoda dealer who is familiar with the procedure for resetting the display with a vehicle system tester.
- Please refer to the brochure Service Plan for extensive information about the service intervals. ■

Multi-functional indicator*

Introduction

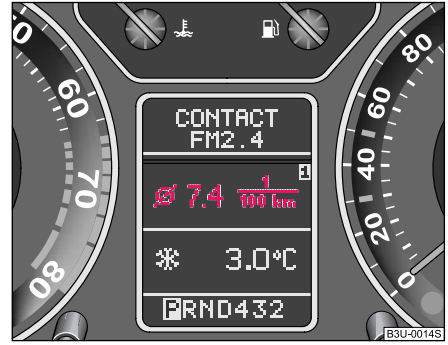


Fig. 7 Multi-functional indicator: Average fuel consumption

The multi-functional indicator appears in the display of the revolutions counter ⇒ page 13, fig. 3 or in the information display ⇒ fig. 7 depending on the equipment fitted to your vehicle.

The multi-functional indicator offers you a range of useful information.

The outside temperature	⇒ page 20
Range	⇒ page 21
Current fuel consumption	⇒ page 21
Average fuel consumption	⇒ page 21

Driving time	⇒ page 21
Distance driven	⇒ page 21
Average speed	⇒ page 22

Note

In certain national versions the displays appear in the Imperial system of measures. ■

Memory



Fig. 8 Multi-functional indicator: Memory level

The multi-functional indicator is equipped with two automatic memories. You can see the memory which is currently being shown in the display from the negatively displayed number ⇒ fig. 8.

The data of the single-trip memory (memory 1) is shown if a **1** appears in the display. A **2** shown in the display means that data relates to the total distance memory (memory 2).

Switching of the memory takes place when the button Ⓑ ⇒ page 20, fig. 9.

Single-trip memory (memory 1)

The single-trip memory collates the driving information from the moment the ignition is switched on until it is switched off. New data will also flow into the calculation of the current driving information if the trip is continued **within 2 hours** after switching off the ignition. The memory will be is automatically erased, on the other hand, if the trip is interrupted for **more than 2 hours**.

Total-trip memory (memory 2)

The total distance driven memory gathers data from any number of indvidual journeys up to a total of 100 hours driving or 10 000 kilometres driven. The memory is deleted when either of these limits is reached and the calculation starts from anew.

The total-trip memory will not, contrary to the single-trip memory, be deleted after a period of interruption of driving of 2 hours.

Note

All information in the memory is erased if the battery of the vehicle is disconnected. ■

Using the system

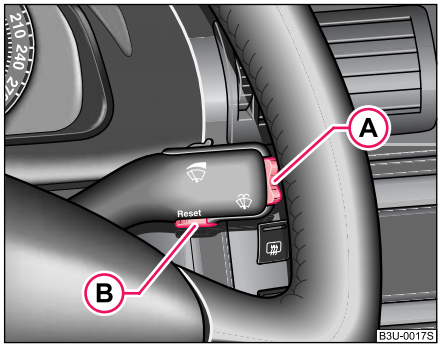


Fig. 9 Multi-functional indicator: Controls

The rocker switch (A) and the button (B) are located in the grip of the window wiper lever ⇒ fig. 9.

Selecting the memory

– Repeated short-term pressing of the button (B) allows one to select the various memories.

Selecting the functions

– Press the rocker switch (A) up or down. This will cause the individual functions of the multi-functional indicator to appear in the display one after the other.

Setting function to zero

– Select the memory you want.

– Press button (B) for more than 1 second.

The following readouts of the selected memory will be set to zero by button (B):

- Average fuel consumption
- Distance driven
- Average speed
- Driving time

You can only operate the multi-functional indicator when the ignition is switched on. After the ignition is switched on, the function displayed is the one which you last selected before switching off the ignition.

The outside temperature indicator will appear with an ice chrystal symbol when the outside temperature lies between +5°C and -5°C. The symbol warns the driver of the possible danger of ice on the road. ■

The outside temperature

The outside temperature appears in the display when the ignition is switched on.

The correct outside temperature will be indicated with a delay of 5 minutes. If the vehicle is stationary (or driven at a very low speed) the temperature indicated may be slightly higher than the actual outside temperature because of heat radiated by the engine.

If the outside temperature is between about +5 °C and -5 °C an ice crystal symbol appears before the temperature display.

WARNING

Please note that black ice may also be present on the road surface even at temperatures around +5°C - warning, drive with care! ▶

Note

The outside temperature is not indicating when showing navigation data (guidance to the destination). It must be called up over the menu (valid for vehicles which have a navigation and information display). ■

Range

The estimated range in kilometres is shown on the display. It indicates the distance you can still drive with your vehicle based on the present level of fuel in the tank for the same style of driving. The readout is shown in steps of 5 km.

The fuel consumption for the last 50 km is taken as a basis for calculating the range. If you drive in a more economical manner from this moment on, the range will be increased accordingly.

You first drive 50 km if the readout is reset (after disconnecting the battery) before a new readout for the range is displayed. ■

Current fuel consumption

The current fuel consumption level is shown in the display in litres/100 km. This information can help you to adapt your style of driving to the fuel consumption you wish to achieve.

The display appears in litres/hour if the vehicle is stationary or driving at a low speed. ■

Average fuel consumption

The average fuel consumption since the memory was last erased is shown in the display in litres/100 km ⇒ page 19. This information can help you to adapt your style of driving to the fuel consumption you wish to achieve.

If you wish to determine the average fuel consumption over a certain period of time you must first erase the memory at the start of the new measurement using the button (B) ⇒ page 20, fig. 9. A zero appears in the display for the first 300 metres you drive after erasing the memory.

The indicated value will be updated every 30 metres while you are driving.

Note

The amount of fuel consumed will not be indicated. ■

Driving time

The driving time which has elapsed since the memory was last erased, appears in the display ⇒ page 19. If you wish to calculate the driving time from a particular time of day you must first erase the memory at this moment in time by pressing the button (B) ⇒ page 20, fig. 9.

The maximum time indicated in both switch positions is 99 hours and 59 minutes. The indicator is set back to null if this period is exceeded. ■

Distance driven

The distance driven since the memory ⇒ page 19 was last erased appears in the display. If you wish to calculate the distance driven from a ▶

particular time of day you must first erase the memory at this moment in time by pressing the button (B) ⇒ page 20, fig. 9.

The maximum distance indicated in both switch positions is 9.999 km. The indicator is set back to null if this period is exceeded. ■

Average speed

The average speed since the memory was last erased is shown in the display in km/hour ⇒ page 19. If you wish to determine the average speed over a certain period of time you must first erase the memory at the start of the new measurement using the button (B) ⇒ page 20, fig. 9.

A zero appears in the display for the first 100 metres you drive after erasing the memory. ■

Information display*

Introduction

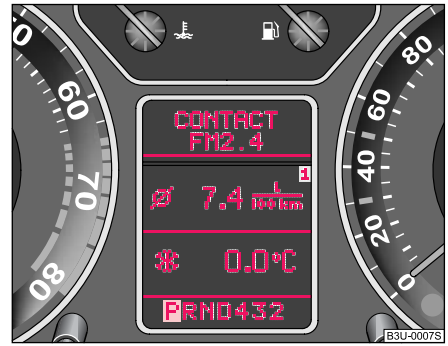


Fig. 10 Instrument cluster: Information display

The information display provides you with information in a convenient way concerning the **current operating state of your vehicle**. The information system also provides you with data (depending on the equipment installed in the vehicle) relating to the radio, multi-functional indicator, navigation system and automatic gearbox.

Certain functions and operating conditions are always being checked on the vehicle when the ignition is switched on and also while driving.

Functional faults, if required rapair work and other services are indicated by red symbols ⇒ page 26 and yellow symbols ⇒ page 26.

Lighting up of these symbols is combined with an acoustic warning signal.

Information and texts giving warnings are also shown in the display ⇒ page 28.

The display of text is possible in the following languages:

Czech, English, German, French, Italian, Spanish, Portuguese.

You can have the relevant language set by a Škoda dealer.

The following information can be shown in the display (depending on the equipment installed on the vehicle).

Menu	⇒ page 23
Door ajar warning, luggage compartment door and bonnet ajar warning	⇒ page 24
Radio display	⇒ page 25
Service Interval Display	⇒ page 17
Selector lever position for an automatic gearbox	⇒ page 124

On models fitted with an automatic gearbox, the information in the display appears only after a drive position is engaged. ■

Menu

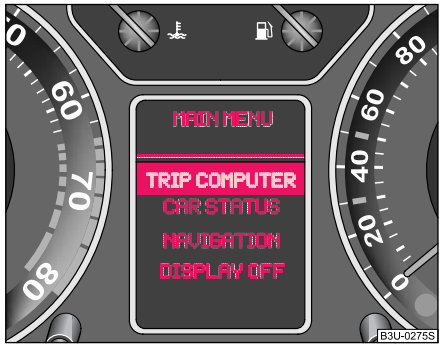


Fig. 11 Information display: Menu

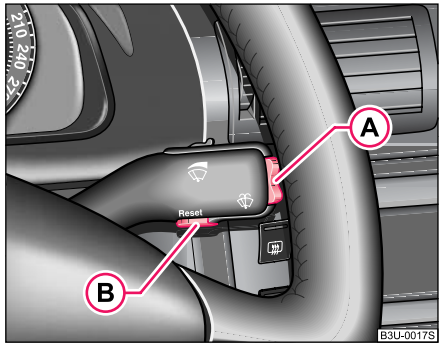


Fig. 12 Information display: Controls

– You can activate the menu by pressing the rocker switch Ⓐ ⇒ fig. 12 for more than 1 second. ▶

– You can select the menu through the rocker switch Ⓐ. The selected information is displayed after pressing the button Ⓑ for a short time or after releasing the rocker switch Ⓐ (after about 4 seconds).

You can select the following information (depending on the equipment installed on the vehicle):

TRIP COMPUTER	⇒ page 18
CAR STATUS (CAR STATUS)	⇒ page 25
DISPLAY OFF	
NAVIGATION	⇒ page 27

After selecting the menu **DISPLAY OFF (DISPLAY OFF)** the display is switched off. Press rocker switch Ⓐ for at least 1 second to switch the display on again.

The Information **CAR STATUS (CAR STATUS)**flashes in the menu if there is something which is not in proper order on the vehicle (e.g. warning of a low fuel level). The first warning will be displayed after switching over to **CAR STATUS (CAR STATUS)**. You can then display other operating conditions afterwards using the switch-over function (such as water level low). ■

Door ajar warning, luggage compartment door and bonnet ajar warning

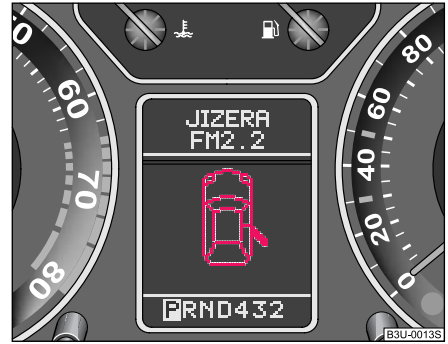


Fig. 13 Information display: Door warning

The door, luggage compartment door and bonnet ajar warning lights up when at least one of the three items door, luggage compartment or bonnet are not closed when the ignition is turned on. The symbol indicates which door is still open or whether the luggage compartment door or bonnet is **not closed** ⇒ fig. 13.

The symbol goes out as soon as the doors, luggage compartment door and bonnet are completely closed.

As an additional warning signal, a 3 time peep sounds if the car is driven at a speed of more than 6km/hour and if the door is open. ■

Radio display



Fig. 14 Information display: Radio display

These displays **appear in addition** to the normal information in the radio display. ■

Auto Check Control

Vehicle condition

The Auto Check Control carries out a check of certain functions and vehicle components. The check is performed constantly when the ignition is switched on, both when the vehicle is stationary, as well as when driving.

Operational faults, urgent repairs, service work or other information appear in the display of the instrument cluster. The displays are shown with a red or yellow light symbol depending on the priority of the message.

The red symbols indicate **danger** (priority 1) while the yellow symbols indicate a **warning** (priortity 2). Information for the driver may also appear in addition to the symbols ⇒ page 28.

Investigate the displayed faults as soon as possible. If several operational faults exist at the same time, the symbols will appear one after the other and are each visible for about 2 seconds.

The error messages are faded out after 10 seconds or by actuating the rocker switch Ⓐ ⇒ page 23, fig. 12 and are stored under the information **CAR STATUS (CAR STATUS)**.

There is at least one error message to be read when the term **CAR STATUS (CAR STATUS)** is flashing in the main menu. The display will show **STATUS 1/2 (STATUS 1/2)** (for example) if a number of error messages are present. This display indicates that the first of a total of two error messages should be displayed.

Actuate the rocker switch Ⓐ, to call up the individual error messages.

If a fault occurs, a warning signal will also sound in addition to the symbol and text in the display:

- Priority 1 - three warning signals
- Priority 2 - one warning signal ■

Operational check of the automatic gearbox

When the ignition is switched on, the Auto Check Control automatically carries out an operational check. The following text will appear first if the selector lever is the position **P** or **N**:

APPLY FOOT BRAKE WHEN SELECTING GEAR WITH VEHICLE STATIONARY.

The text will disappear once you select a drive position (**R**, **D** etc.), and the Auto Check Control function is displayed.

If the Auto Check Control detects faults, these will be displayed about 15 seconds after starting the engine in place of the text shown above. A warning signal sounds at the same time. ■

Red symbols

A red symbol signals danger.

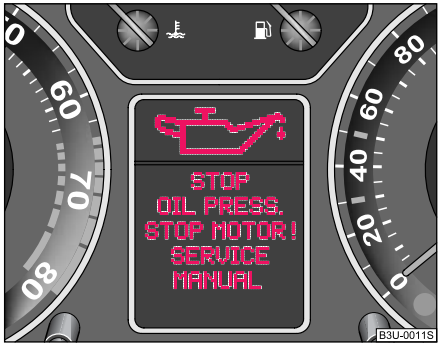


Fig. 15 Information display: Oil pressure is low

Proceed as follows if a red symbol is displayed:

– Stop the vehicle.

– Switch the engine off.

– Investigate the function indicated.

– Obtain professional assistance.

Meaning of the red symbols:

	Faults in the brake surface	⇒ page 35
	Coolant level too low/coolant temperature too high	⇒ page 31
	Engine oil pressure too low	⇒ page 32

Three successive warning signals will sound if a red symbol appears. The symbol continues flashing until the fault is rectified.

If several operational faults of priority 1 exist, the symbols appear one after the other and are each illiminated for about 2 seconds. ■

Yellow symbols

A yellow symbol signals a warning.

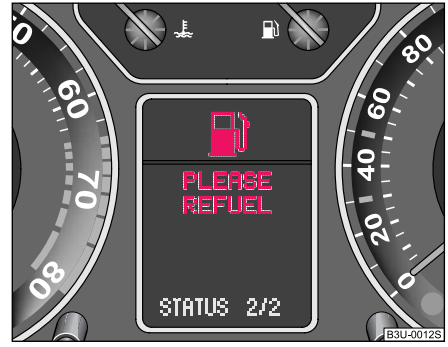


Fig. 16 Information display: Fuel level low

The meaning of the yellow symbols:

	Fuel level low	⇒ page 32
	Check engine oil level, engine oil sensor faulty	⇒ page 32
	Brake pad worn	⇒ page 32
	Washer fluid level low	⇒ page 33
	Light bulb defect	⇒ page 33
	Light bulb in the brake light defect	⇒ page 33

One warning signal will sound if a yellow symbol appears.

If several operational faults of priority 2 exist, the symbols appear one after the other and are each illiminated for about 2 seconds.

Check the relevant function as soon as possible. ■

Navigation system*

The controls for the navigation system, radio, CD player are located in the centre console on both sides of the monitor screen. Navigation data is also shown in the information display of the instrument cluster.

Information and warning texts are displayed preferentially when the navigation system is switched on.

Operation of the navigation system is described in separate operating instructions to be found in the on-board literature. ■

Warning lights

An overview

The warning lights indicate certain functions if necessary faults.

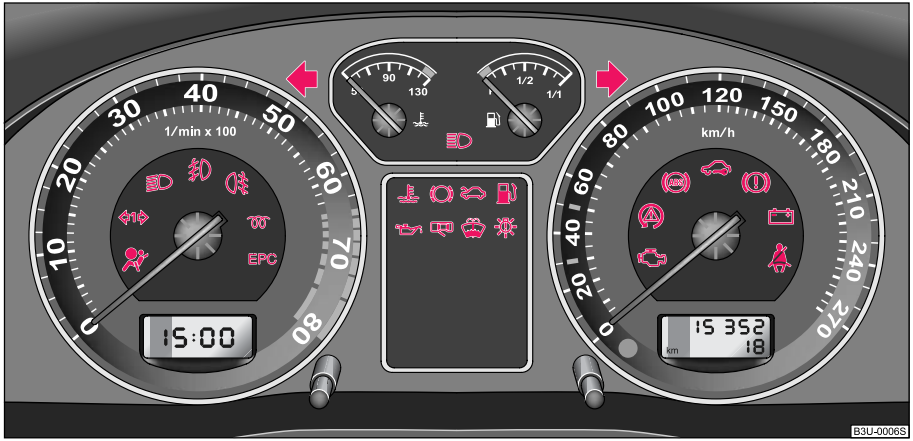


Fig. 17 Instrument cluster with warning lights

	Turn signal lights (to the left)	⇒ page 29
	Turn signal lights (to the right)	⇒ page 29
	Main beam	⇒ page 29
	Airbag system	⇒ page 30

	Turn signal system for vehicles towing a trailer	⇒ page 30
	Low beam	⇒ page 30
	Fog lights*	⇒ page 30
	Rear fog light	⇒ page 31

EPC	EPC fault light (petrol engine)	⇒ page 31
	Glow plug system (diesel engine)	⇒ page 31
	Coolant temperature/coolant level	⇒ page 31
	Brake pad wear	⇒ page 32
	Bonnet	⇒ page 32
	Fuel reserve	⇒ page 32
	Engine oil	⇒ page 32
	Open door	⇒ page 33
	Fluid level in windshield washer system	⇒ page 33
	Bulbs	⇒ page 33
	EPC fault light	⇒ page 34
	Electronic stability programme (ESP)*	⇒ page 34
	Traction control system (TCS)*	⇒ page 34
ABS	Antilock brake system (ABS)	⇒ page 34
	Electronic immobiliser	⇒ page 35
	Brake system	⇒ page 35
	Dynamo	⇒ page 36
	Seat belt warning light	⇒ page 36

Note

- Arrangement of the indicator lights depends on the model and model version. The symbols shown in the following functional description are to be found as indicator lights in the instrument cluster.
- Operational faults are shown in the display of the instrument cluster as red symbols (priority 1 - danger) or yellow symbols (priority 2 - warning). ■

Turn signal system

Either the left ⇦ or right ⇨ indicator light flashes depending on the position of the turn signal lever.

The indicator light flashes at twice its normal rate if a turn signal light fails. This does not apply when towing a trailer.

Switching off the hazard warning light system is switched on will cause all of the turn signal lights as well as both indicator lights to flash.

Further information about the turn signal system ⇒ page 59. ■

Main beam

The indicator light comes on when the main beam is selected or also when the headlight flasher is operated. ▶

Further information about the main beam ⇒ page 59. ■

Airbag system

Monitoring the airbag system

The warning light comes on for a few seconds when the ignition is switched on.

There is a fault in the system if the warning light does not go out or comes on or flashes while driving ⇒ ⚠. This also applies if the warning light does not come on when the ignition is switched on.

The following text will be displayed in the information display*:

AIRBAG FAULT

The functionality of the airbag system is monitored electronically, also when the front, side or head airbags for the front passenger have been switched off.

Front, side or head passenger airbags which have been switched off by a Škoda dealer using the vehicle system tester:

- The warning light lights up for 3 seconds after switching on the ignition and then flashes for 12 seconds afterwards in 2 second intervals.

Front, side or head passenger airbags which have been switched off using the switch (for switching off airbags)* in the storage compartment on the front passenger side:

- The warning light comes on for 3 seconds after the ignition has been switched on.
- Switching off airbags is indicated in the middle of the dash panel by the lighting up of the indicator light **AIRBAG OFF (airbag switched off)** ⇒ page 155.

WARNING

Have the airbag system checked immediately by a Škoda Dealer if a fault exists. Otherwise, there is a risk of the airbag or the belt tensioner not being activated in the event of an accident.

Note

Further information about switching off airbags ⇒ page 154. ■

Turn signal system for vehicles towing trailer

The indicator light on vehicles towing a trailer flashes together with the respective indicator light for the turn signal system.

The indicator light does not flash if a turn signal light on the trailer or on the vehicle is not operating. ■

Low beam

The indicator light comes on when low beam is selected ⇒ page 56. ■

Fog lights*

The warning light comes on when the fog lights are operating ⇒ page 57. ■

The rear fog light

The warning light comes on when the rear fog lights are operating ⇒ page 57. ■

EPC fault light EPC (petrol engine)

The **EPC** (Electronic Power Control) warning light comes on for a few seconds when the ignition is switched on.

There is a system fault in the engine control system if the warning light does not go out or comes on or flashes while driving. The engine management system selects an emergency programme which enables you to drive to the nearest Škoda dealer while adopting a gentle style of driving.

The following text will be displayed in the information display*:

ENGINE WORKSHOP! ■

Glow plug system (diesel engine)

The indicator light lights up for a **cold** engine when switching on the igntion (pre-heat position) **2** ⇒ page 114. Start the engine just as soon as the indicator light goes out.

The glow plug indicator light will come on for about 1 second if the engine is at a **normal operating temperature** or if the outside temperature is above +5°C. This means that you can start the engine **right away**.

If the warning light flashes when driving, this indicates a fault in the system. Have the engine inspected without delay by a Škoda Dealer.

If the warning light does not come on at all when the ignition is switched on, this may indicate a fault in the glow plug system. Have the engine inspected by a Škoda Dealer.

The following text will be displayed in the information display*:

ENGINE WORKSHOP! ■

Coolant temperature/coolant level

The warning light comes on for several seconds after the ignition is switched on.[1)]

The coolant temperature is too high or the coolant level too low if the warning light does not go out after the engine is started or flashes while driving.

3 peeps sound as an additional warning signal.

In this case stop and switch the engine off and check the coolant level; top up the coolant as necessary.

Do not continue your journey if for some reason it is not possible under the conditions prevailing to top up with coolant. **Switch of the engine** and obtain professional assistance from a Škoda dealer.

If the coolant is within the specified range, the increased temperature may be caused by an operating problem at the coolant fan. Check the fuse for the coolant fan, replace it if necessary ⇒ page 241.

Do not continue driving if the warning light does not go off although the fluid is at the correct level and also the fuse of the fan is in proper order. Contact a Škoda dealer to obtain assistance.

1) The warning light on vehicles fitted with information display does not come on after switching the ignition on, but only if a fault exists or the coolant level is too low.

Please also refer to the additional instructions ⇒ page 209.

The following text will be displayed in the information display*:

STOP CHECK COOLANT SERVICE MANUAL

WARNING

- **Take care when opening the coolant expansion bottle. If the engine is hot, the cooling system is pressurized - risk of scalding. It is best to allow the engine to cool down before removing the cap.**
- **Do not touch the coolant fan The coolant fan may switch on automatically even if the ignition is off.**

Brake pad wear

If the warning light comes on, contact a Škoda Dealer and have the brake pads of **all the wheels** inspected.

A peep sounds as an additional warning signal.

The following text will be displayed in the information display*:

CHECK BRAKE PADS

Bonnet

The warning light comes on when the ignition is switched on if the bonnet is unlocked.

Fuel reserve

The warning light comes on if the fuel level in the tank has dropped to about 8 litres.

A peep sounds as an additional warning signal.

The following text will be displayed in the information display*:

PLEASE REFUEL

Engine oil

The warning light lights up red (low oil pressure)

The warning light comes on for several seconds after the ignition is switched on.[2)]

Stop the vehicle and switch the engine off if the warning light does not go off after the engine has started or flashes while driving. Check the oil level and top up with oil as necessary ⇒ page 207.

3 peeps sound as an additional warning signal.

Do not continue your journey if for some reason it is not possible under the conditions prevailing to top up with oil. **Switch of the engine and contact** and obtain professional assistance from a Škoda dealer.

Do not drive any further if the warning light remains on even if the oil is at the correct level. Do not run the engine not at idling speed either. Contact the nearest Škoda dealer to obtain professional assistance.

2) The warning light on vehicles fitted with information display does not come on after switching the ignition on, but only if a fault exists or the engine oil level is too low.

The following text will be displayed in the information display*:

STOP! OIL PRESS. STOP MOTOR! SERVICE MANUAL

The warning light lights up yellow (insufficient oil)*

If the warning light lights up yellow, there is not the correct quantity of oil in the engine. Check as soon as possible the oil level or top up ⇒ page 207 with engine oil.

A peep sounds as an additional warning signal.

The following text will be displayed in the information display*:

CHECK OIL LEVEL

The warning light will go out if the bonnet is left open for more than 30 seconds. If no engine oil has been replenished, the warning light will come on again after driving about 100 km.

The warning light flashes yellow (engine oil level sensor faulty)

A fault on the engine oil level sensor is indicated additionally by an audible signal and the warning light coming on several times after the ignition has been switched on.

In this case have the engine inspected without delay by a Škoda dealer.

The following text will be displayed in the information display*:

OIL SENSOR WORKSHOP!

WARNING

The red oil pressure light is not an oil level indicator! One should therefore check the oil level at regular intervals, preferably after every refueling stop. ■

Open door

The warning light comes on if the boot lid is opened and if one on several doors are opened.

As an additional warning signal, a 3 time peep sounds if the car is driven at a speed of more than 6km/hour and if the door is open. ■

Windshield washer fluid level

The warning light comes on when the ignition is switched on if there is insufficient fluid in the windshield washer system. Top up the fluid ⇒ page 217.

A peep sounds as an additional warning signal.

The following text will be displayed in the information display*:

TOP UP WITH WASH FLUID ■

Bulbs

The warning light comes on if a light bulb is damaged:

- brakes applied (brake light)
- in lighting (low beam and/or rear light)

A peep sounds as an additional warning signal.

The following text will be displayed in the information display*:

LIGHTS FAILURE

or

BRAKE LIGHTS FAILURE ■

EPC fault light

The warning light comes on after the ignition has been switched on.

If the warning light does not go out or comes on when driving, or flashes, this indicates a system fault in the electronic power control or in the exhaust emission system. The engine management system selects an emergency programme which enables you to drive to the nearest Škoda dealer while adopting a gentle style of driving.

The following text will be displayed in the information display*:

EMISSIONS WORKSHOP! ■

Electronic Stability Programme (ESP)*

The warning light comes on for several seconds after the ignition is switched on.

Components of the ESP system also include the Traction Control System (TCS), Electronic Differential Lock (EDL), the Antilock Brake System ABS and the braking assistant

The warning light comes on when driving when a control cycle is activated.

The warning light will come on and remains on if the ESP is switched off or if there is a fault in the system.

The fact that the ESP system operates together with the ABS means that the ESP warning light will also come on if the ABS system is not operating properly.

Further information on the ESP ⇒ page 169. ■

Traction Control System (TCS)*

The warning light comes on for several seconds after the ignition is switched on.

The warning light comes on when driving when a control cycle is activated.

The warning light will come on and remains on if the TCS is switched off or if there is a fault in the system.

The fact that the TCS system operates together with the ABS means that the TCS warning light will also come on if the ABS system is not operating properly.

Further information about the TCS ⇒ page 170. ■

Antilock brake system (ABS)

The warning light shows the functionality of the ABS and the Electronic Differential Lock (EDL).

The warning light comes on for a few seconds after the ignition has been switched on or when starting the engine. The warning light goes out after an automatic check sequence has been completed.

A fault in the ABS

The system is not functioning properly if the warning light (ABS) does not go out within a few seconds after switching on the ignition, does not light up at all or lights up while driving. The vehicle will only be braked by the normal brake system without the effect of the ABS function. Visit a Škoda dealer as quickly as possible and adjust your style of driving in the meantime since you will not know how great the damage is.

Three additional warning tones will sound if there is a major fault in the ABS.

Further information about ABS ⇒ page 173.

A fault in the entire brake system

If the ABS warning light (ABS) comes on together with the brake system warning light (!) (handbrake must be released), there is a fault not only in the ABS but also in another part of the brake system ⇒ ⚠.

The following text will be displayed in the information display*:

STOP BRAKE FAULT SERVICE MANUAL

Electronic Differential Lock (EDL)*

The EDL is a part of the ABS. A fault in the EDL is indicated by the ABS warning light (ABS) in the instrument cluster. Have the vehicle inspected without delay by a Škoda dealer. Further information on the EDL ⇒ page 171.

⚠ WARNING

- **If the brake system warning light (!) comes on together with the ABS warning light (ABS) stop the vehicle immediately and check the brake fluid level in the reservoir ⇒ page 210. If the brake fluid level has dropped below the MIN marking, do not drive any further - risk of accident! Contact a Škoda dealer to obtain professional assistance.**

⚠ WARNING (continued)

- **Pay attention to the following instructions ⇒ page 203 before checking the brake fluid level and opening the bonnet.** ■

Electronic immobiliser

Data is compared between the ignition key and the control unit when switching on the ignition. The indicator light will light up for a few seconds when ignition key authorisation is confirmed.

The warning light will start flashing continuously if a non-authorised ignition key (for example the wrong ignition key) has been used. The engine cannot be started ⇒ page 39.

It is only possible to start the engine of the vehicle with a Genuine Škoda key with the matching code. ■

Brake system (!)

The warning light (!) flashes or comes on if the brake fluid level is too low, if there is a fault in the ABS or if the handbrake is applied.

If the warning light (!) flashes (handbrake is not applied), **stop** and check the brake fluid level ⇒ ⚠.

The following text will be displayed in the information display*:

STOP BRAKE FLUID SERVICE MANUAL

If there is a fault in the ABS which also influences the function of the normal brake system (e.g. distribution of brake pressure), the ABS warning light (ABS) comes on together with the brake system warning light ▶

(!). Visit the next **Škoda dealer** immediately and have the brake system checked.

3 peeps sound as an additional warning signal.

One should get used to high pedal forces, long braking distances and long free play of the brake pedal when driving to the next Škoda dealer.

The following text will be displayed in the information display*:

STOP BRAKE FAULT SERVICE MANUAL

For further information on the brake system ⇒ page 172.

Handbrake applied

The warning light (!) also comes on if the handbrake is applied. An audible warning is also given if you drive the vehicle for at least 3 seconds at a speed of more than 6 km/h.

The following text will be displayed in the information display*:

HANDBRAKE ON

WARNING

- **Pay attention to the following instructions ⇒ page 203 before checking the brake fluid level and opening the bonnet.**
- **If the brake system warning light (!) does not go out a few seconds after switching on the ignition or comes on when driving, stop immediately and check the brake fluid in the reservoir ⇒ page 210. If the fluid level has dropped below the MIN marking, do not drive any further - risk of accident! Contact a Škoda dealer to obtain professional assistance.** ■

Dynamo

The warning light comes on after the ignition has been switched on. It should go out after the engine has started.

If the warning light does not go out after the engine has started, or comes on when driving, drive to the nearest Škoda Dealer. The vehicle battery will be discharged in this case so switch off all non-essential electrical components.

The following text will be displayed in the information display*:

ALTERNATOR WORKSHOP!

Caution

If the warning light comes on when driving and in addition the warning light (cooling system fault) also comes on in display, you must then stop the car immediately and switch the engine off - risk of engine damage! ■

Seat belt warning light

The warning light comes on for a few seconds after the ignition is switched on as a reminder to fasten the seat belt.

If you do not fasten the seat belt, a long warning signal sounds for 6 seconds.

For further information on the seat belts ⇒ page 138.

The following text will be displayed in the information display*:

FASTEN SEATBELT

For further information on the seat belts ⇒ page 138. ■

Unlocking and locking

Keys

Description

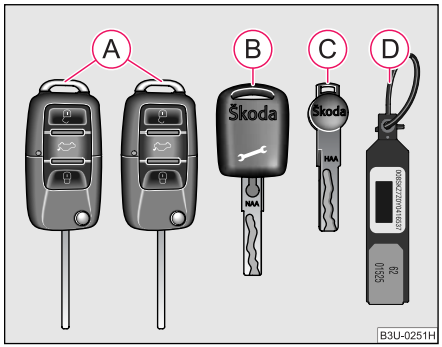


Fig. 18 Set of keys

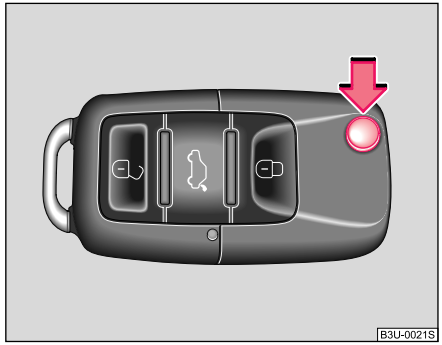


Fig. 19 Folding key

– Press the unlock button ⇒ fig. 19 in order to open and close the folding key.

Your car is supplied with two master keys Ⓐ ⇒ fig. 18 as well as a service key Ⓑ, an emergency key Ⓒ and a key ring Ⓓ. The master and the emergency key fit all the locks of the car. The service key can be used only to open the doors and to start the engine. The service key is intended, for example, to be handed over with your car when it goes for a service, or when you arrive at the hotel.

We recommend that you keep the **emergency key** in your wallet or in a purse. You will need the emergency key only very occasionally if you have mislaid or lost the master key.

Key ring

The key ring only has the key number on it which is essential for producing other keys. This number can be used to order replacement keys from Škoda dealers.

The **key ring** with the number should be separately and securely **kept in safe keeping** since keys can only be replaced if they are lost or damaged by giving this number. You should also therefore give this key ring to the purchaser when selling the vehicle.

WARNING

- **Always withdraw the key whenever you leave the vehicle - even if it is only for a short time. This is particularly important if children are left in the vehicle. The children might otherwise start the engine or operate electrical equipment (e.g. power windows) - risk of injury!**
- **Do not withdraw the ignition key from the ignition lock until the vehicle has come to a stop. The steering lock might otherwise engage unintentionally - risk of accident!**

Note

- Keep the groove of the keys absolutely clean as impurities (textile fibres, dust etc.) have a negative effect on proper operation of the keys and the ignition lock.
- Please approach a Škoda dealer if you lose a key since he can obtain a new one for you. ■

Changing the key battery

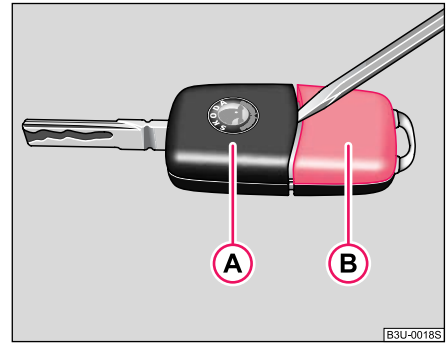


Fig. 20 Disconnect the folding key

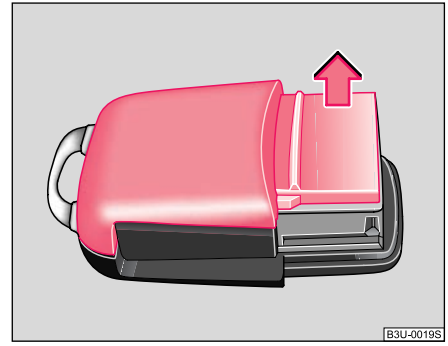


Fig. 21 Cover of the transmitter housing

Each master key contains a battery which is housed in the cover (B) of the transmitter housing ⇒ fig. 20. We recommend that you have the batteries of the key replaced by a Škoda dealer. You ▶

should, however, proceed as follows if you wish to replace the battery yourself:

– Fold open the key.

– Use a screwdriver to carefully lever off the front part of the key Ⓐ ⇒ page 38, fig. 20 from the transmitter housing Ⓑ.

– Take off the cover of the transmitter housing ⇒ page 38, fig. 21 in direction of arrow.

– Take the used battery out of the housing cover.

– Insert the new battery. Ensure that the “+” symbol on the battery is facing downwards. The correct polarity is also shown on the cover of the transmitter housing.

– Insert cover with battery in place at the rear of the transmitter housing and press both parts together.

– Insert the transmitter housing into the front part of the key so that the two parts lock into each other.

For the sake of the environment

Dispose of an old battery in accordance with environmental regulations.

Note

- The replacement battery must have the same specification as the original battery.
- If it is still not be possible to unlock or lock the vehicle with the remote control even after replacing the battery this means that the system has to be synchronised ⇒ page 47. ■

Electronic immobiliser

The electronic immobiliser prevents the vehicle being operated by an unauthorised person.

An electronic chip is integrated in the head of the key. The immobiliser is deactivated with the aid of this chip when the key is inserted in the ignition lock. The electronic immobiliser is automatically activated when you withdraw the ignition key from the lock.

Note

It is only possible to start the engine of your car with a Genuine Škoda key with the matching code ⇒ page 35. ■

Central locking system

Description

Unlocking or locking the vehicle causes **all** doors to be unlocked or locked at the same time by the central locking system. The boot lid is unlocked when opening. It can be opened by pressing the hand grip above the licence plate.

The car can be unlocked and locked either with the remote control ⇒ page 46 **or** with the key inserted at the driver door⇒ page 41.

It is also possible to open and close the windows by means of the central locking system ⇒ page 51. The electric sliding/tilting roof* can only be closed by the central locking system.

Safe securing

The central locking system is equipped with a **safe securing** system. Locking the vehicle from the outside causes the door locks to be automatically blocked. It is not possible to pull out the locking buttons. The indicator light in the driver's door flashes. It is not possible to open the doors with the door handle either from the inside or from the outside. This acts as an effective deterrent for attempts to break into your vehicle.

- You can deactivate the safe securing system. This is done by locking the vehicle with the key or radio-operated key twice within 2 seconds.
- Deactivating the safe securing system means that the warning light next to the securing knob in the driver's door will not flash. This is not the case, however, for an activated anti-theft alarm system since the indicator light is showing that the system is active ⇒ page 47.
- The safe securing system is again activated the next time the vehicle is unlocked and locked again.

The doors can be opened from the inside if the vehicle is locked and the safe securing system is deactivated:

- The door is unlocked by actuating the door-opening lever.
- The door opens upon actuating the door-opening lever again.

Automatic locking*

All the doors and the boot lid are locked automatically once the car reaches a speed of about 15 km/h.

If the ignition key is withdrawn, the car is then automatically unlocked again. In addition, it is possible for the driver to unlock the car by pressing the central locking button or by pulling the door opening lever.

If you wish, your Škoda Dealer can convert the central locking system of your car to the automatic locking mode.

WARNING

If the vehicle is locked from the outside and the safe securing system is activated, there must not be any person and animals in the vehicle as it is then not possible to open either a door or a window from the inside. The locked doors make it more difficult for rescuers to get into the vehicle in an emergency - hazard!

Note

- After unlocking the vehicle see, if the securing knobs are located on all doors at the bottom.
- The vehicle is unlocked automatically if an airbag is deployed.
- Should the central locking system not operate properly, you can lock and unlock the front doors and the boot lid with the key. Emergency unlocking of fuel filler flap ⇒ page 201.
- It is not possible for you to activate the safe securing system and the anti-theft alarm system* if the central locking system fails.
- The anti-theft alarm system is also armed when the car is closed without activating the safe securing system. In this case, always switch off the interior monitoring sensor* ⇒ page 49 first of all to avoid an alarm being triggered unintentionally. ■

Unlocking the vehicle using the key

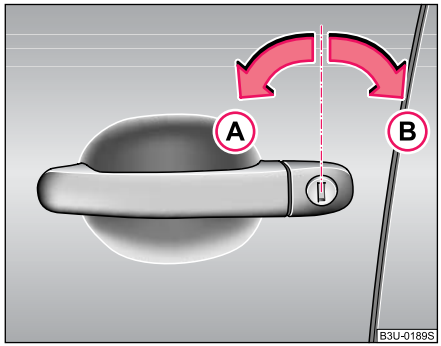


Fig. 22 Turning the key for unlocking and locking the vehicle

– Turn the key in the lock of the driver's door to the left into the opening position Ⓐ ⇒ fig. 22.

– Pull on the door handle and open the door.

- All the doors and the boot lid are unlocked.
- The switched on interior lights come on over the door contact.
- The safe securing system is deactivated.
- The windows **are opened** provided the key is held in the opening position.
- The indicator light in the driver's door stops flashing if the vehicle is not fitted with an anti-theft alarm system* ⇒ page 47.

Note

If the vehicle is equipped with an anti-theft alarm system*, you must unlock the vehicle by inserting the key into the driver door you then have to insert the key into the ignition lock and switch the ignition on within 15 seconds after opening the door. The **alarm will be triggered** if you do **not switch on** the ignition within 15 seconds. ■

Closing the vehicle with the key

– Turn the key in the lock of the driver door to the right into the closing position Ⓑ ⇒ fig. 22.

- All the doors and the boot lid are locked.
- The switched on interior lights go out over the door contact.
- The windows and the electric sliding/tilting roof* are closed provided the key is **held** in the locking position.
- The safe securing system is activated immediately.
- The indicator light in the driver door begins flashing.

Note

The opened driver door cannot be locked. It must be locked separately after closing it. ■

Buttons for central locking

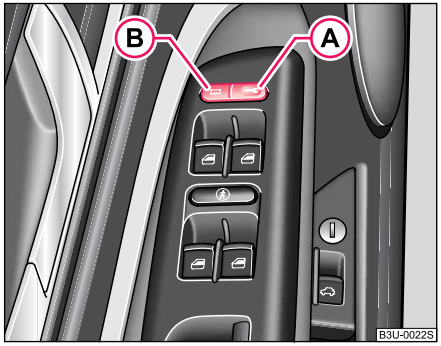


Fig. 23 Inner part of driver door: Buttons for central locking

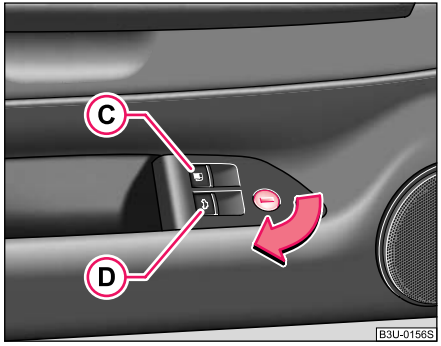


Fig. 24 Inner part of driver door: Switches for opening fuel filler flap and boot lid

All doors are unlocked and locked using the buttons (A) or (B). The buttons also operate if the ignition is switched off, but not if the vehicle was locked from outside.

Locking all doors and the boot lid

– Press button (A) ⇒ fig. 23.

Unlocking all doors and the boot lid

– Press button (B) ⇒ fig. 23. If the boot lid has been set to the permanent locking mode, it is then not unlocked ⇒ page 44 when the button (B) is pressed.

Unlocking fuel filler flap

– Pull the switch (C) ⇒ fig. 24.

Unlocking the boot lid

– Pull the switch (C) ⇒ fig. 24.

Blocking boot lid remote release button

– Turn the master key or emergency key in the lock in direction of arrow ⇒ fig. 24.

– The boot lid is unlocked by turning the key in the opposite direction of the arrow.

Lock the boot lid from outside the vehicle ⇒ page 44.

The following applies if you have locked your vehicle using the central locking system (A) ⇒ fig. 23:

- It is not possible to open the doors or the boot lid from the outside (safety feature, e.g. when stopping at traffic lights etc.).
- You can unlock the doors individually from the inside and open them by pulling the door opening lever.
- Once the driver door is opened it cannot be locked again (after operating the lock function in the button for the central locking switch) in order ▶

to avoid inadvertently being locked out of the vehicle. You then have to lock a door separately after closing it.

- In the event of an accident in which the airbags are deployed, the locked doors are automatically unlocked from the inside in order to enable rescuers to gain access to the vehicle.

WARNING

The central locking system also operates if the ignition is switched off. All the doors and the boot lid are locked. Children should never be left unattended in the vehicle since it is difficult to provide assistance from the outside when the doors are locked. Locked doors make it difficult for rescuers to get into the vehicle in an emergency - hazard!

Note

The door opening lever and the button for the central locking system do not operate if the safe securing system is activated. ■

Opening a single door

The single door opening function makes it possible to unlock only the driver door. The rest of the vehicle remains locked.

Unlocking only driver door

– Turn the key **once** in opening direction or press the unlock button of the remote control **once**.

Unlocking all doors and the boot lid

– Turn the key **twice** in opening direction within 5 seconds or press the unlock button of the remote control **twice** within 5 seconds.

Also if only the driver door is unlocked, the anti-theft protection and the anti-theft alarm system* are immediately deactivated.

Note

The single door opening function can be first activated by recoding the control unit of the central locking system. this work is carried out by a Škoda dealer. ■

Boot lid

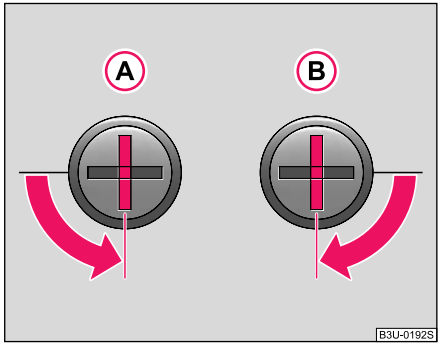


Fig. 25 Positions of lock cylinder of boot lid lock

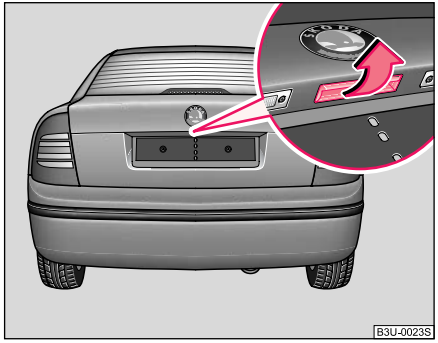


Fig. 26 Handle of boot lid

Open boot lid

– Press on the handle ⇒ fig. 26 and at the same time raise the boot lid.

Close the boot lid

– Pull the boot lid down and close it with a slight swing ⇒ ⚠.

Permanently locking boot lid

If you turn the master key or emergency key to the right (B) ⇒ fig. 25 and withdraw it when the lock cylinder is in the vertical position, the boot lid is no longer incorporated in the central locking system and remains locked all the time.

It is now only possible to open the boot lid using the unlock button of the remote control.

After turning the lock cylinder back into the horizontal position, the boot lid is again integrated in the central locking system.

Unlocking and opening boot lid

When you turn the master key or emergency key to the left (A) ⇒ fig. 25 into the vertical position of the lock cylinder, the boot lid jumps open. You cannot withdraw the key in this position.

After turning the key back into the horizontal position of the lock cylinder, the boot lid is again integrated in the central locking system, and the key can be withdrawn.

It is recommended to always operate ⇒ page 46 the boot lid using the remote control.

WARNING

- **Ensure that the lock is properly engaged after closing the boot lid. Otherwise, the boot lid might open suddenly when driving even if the lock is closed - risk of accident!**
- **Never drive with the boot lid slightly ajar or even fully opened otherwise exhaust gases may get into the interior of the vehicle - risk of poisoning!**

Note

If the vehicle has been locked, the boot lid locks automatically 5 seconds after clsong the boot lid and the anti-theft alarm system* is activated. ■

Child safety locks

Child safety locks on the rear doors

The child safety lock prevents the rear door from being opened from the inside.

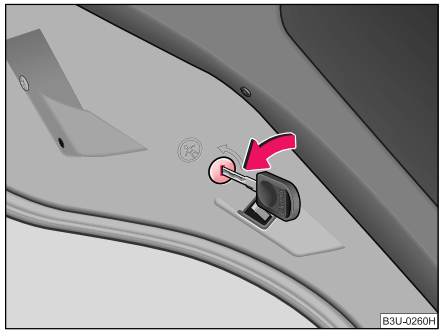


Fig. 27 Child safety locks on the rear doors

The rear doors are equipped with a child safety lock. You can switch the child safety lock on and off using the vehicle key.

Switching child safety lock on

– Use the vehicle key to turn the slit in the rear door to the left in the direction of the arrow ⇒ fig. 27.

Switching child safety lock off

– Use the vehicle key to turn the slit to the right against the direction of the arrow.

So long as the child safety lock is switched on it is not possible to open the door from the inside with the door opening lever. In this case the door can be opened only from the outside. ■

Remote control

Description

You can use the remote control:

- to unlock and lock the car
- unlocking boot lid
- Opening and closing window

The transmitter with the battery is housed in the handle of the master key. The receiver is located in the interior of the car. The operating range of the remote control is 10 metres but this range can be reduced if the batteries are waek.

The master key has a fold-open key bit which can be used for unlocking and locking the car manually and also for starting the engine.

If a lost key is replaced or if the receiver unit has been repaired or a new unit installed, it is then necessary for a Škoda Dealer to initialise the system. Only after this is it possible to again use the remote control.

Note

- The remote control is automatically deactivated when the ignition is switched on.
- The operation of the remote control may temporarily be affected by interference from transmitters close to the car and which operate in the same frequency range (e.g. mobile phone, TV transmitter). ■

Unlocking and locking car

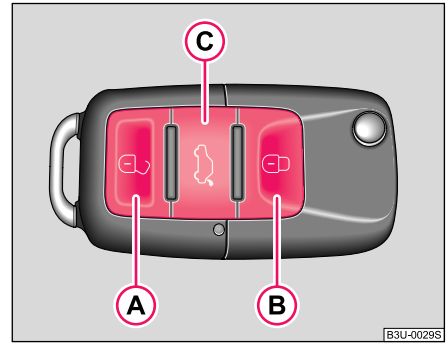


Fig. 28 Key: Assignment of buttons

Unlocking the vehicle

– Press button Ⓐ ⇒ fig. 28 for about 1 second.

Locking the vehicle

– Press button Ⓑ for about 1 second.

Boot lid remote release

– Press button Ⓒ for about 1 second.

Deactivating safe securing system

– Press button Ⓑ zwice in 2 seconds. Further information ⇒ page 39.

The turn signal lights flash twice as confirmation that the vehicle has been unlocked. If you unlock the car with button Ⓐ but do not open a door or ▶

the boot lid within the next 30 seconds, the car locks again automatically. This function is intended to prevent the vehicle being unlocked unintentionally.

The safe securing system along with the anti-theft alarm system* are, however, deactivated during these 30 seconds.

If the **single door opening function** has been activated on your car, you unlock only the driver door by pressing button (A) once and the complete vehicle by pressing the button twice ⇒ page 43.

In addition, when the car is unlocked, the power seats and exterior mirrors* move into the position assigned to this key. The stored setting of driver seat and exterior mirrors is retrieved automatically.

When the vehicle is unlocked or locked, the interior lights in the door contact are automatically switched on or off.

The turn signal lights flash once to confirm that the vehicle has been correctly locked.

WARNING

If the vehicle is locked from the outside and the safe securing system is activated, there must not be any person in the vehicle as it is then not possible to open either a door or a window from the inside. The locked doors make it more difficult for rescuers to get into the vehicle in an emergency - hazard!

Note

- Operate the radio remote control only when the doors and boot lid are closed and you have visual contact with the vehicle.
- Once in the car, you must not press the lock button of the master key before inserting the key into the ignition lock in order to avoid the car being inadvertently locked and, in addition, the anti-theft alarm system being switched on. Should this happen, press the unlock button of the master key. ■

Synchronisation of the vehicle key code

If the vehicle cannot be unlocked by actuating the remote control system then it is possible that the code in the key and the control unit in the vehicle are no longer synchronised. This can occur when the buttons on the radio-operated key are actuated a number of times outside of the operative range of the equipment or the battery on the remote control was replaced.

This means it is necessary to synchronise the code as follows:

- Press any button on the remote control.
- Pressing of the button means that the door will open with the key within 1 minute. ■

Anti-theft alarm system

Description

The anti-theft alarm system increases the level of protection against people seeking to break into the vehicle. The system triggers audible and visual warning signals if an attempt is made to break into the vehicle.

How is the alarm system switched on?

The anti-theft alarm system is activated automatically when the vehicle is locked with the key on the closed driver's door or by using the remote control. It is activated 30 seconds after closing the door.

How is the alarm system switched off?

The anti-theft alarm system is switched off if the vehicle is unlocked by only using the remote control. The vehicle is automatically locked again if the vehicle is not opened within 30 seconds after reactivating the anti-theft alarm system.

Once you unlock the vehicle by inserting the key into the driver door you then have to insert the key into the ignition lock and switch the ignition on within 15 seconds after opening the door in order to deactivate the anti-theft alarm system. The **alarm will be triggered** if you do **not switch on** the ignition within 15 seconds.

When is the alarm triggered?

The following security areas of the locked vehicle are monitored:

- Bonnet
- Boot lid
- Doors
- Ignition lock
- Vehicle interior* ⇒ page 49.
- A drop in voltage of the on-board power supply

An alarm is immediately triggered if either of the two battery terminals is disconnected while the anti-theft alarm system is activated.

If you unlock and open the boot lid with the key, the alarm is immediately triggered.

How is the alarm switched off?

You switch the alarm off if you unlock the car with the radio remote control in the key or if you switch the ignition on.

Turn signals

All of the turn signal lights flash once to indicate that the doors, the bonnet and the boot lid have been correctly closed when locking the car.

If the turn signal lights do not flash, check the doors, bonnet and boot lid again to ensure that they are closed. If the doors, the bonnet or the boot lid remain open when the anti-theft alarm system is activated, the turn signal lights do not flash until after they have been closed.

Indicator light (LED)

The LED in the top of the door trim on the driver door first of all flashes rapidly after the car is locked, then slowly. This indicates that the anti-theft alarm system **including the interior monitor*** is activated.

Note

- Before leaving the car, check that all the doors, windows and the electric sliding/tilting roof* are properly closed in order to ensure that the anti-theft alarm system is fully operational.
- Power supply for the remote control operation is provided by a battery. The battery must be replaced, ideally by the Škoda dealer, if the central locking or anti-theft alarm system does react to the remote control at less than 3 metres away. ■

Interior monitor*

The interior monitor detects movements inside the car and then triggers the alarm.

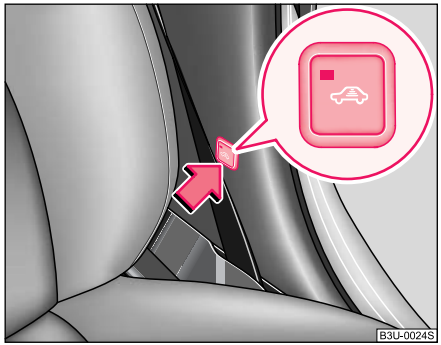


Fig. 29 Interior monitor pushbutton

You can switch the interior monitor off if, for example, an animal or other moving objects inside the car might trigger the alarm.

Switching interior monitor off

– Press the button on the center column at the driver's side ⇒ fig. 29.

– Lock the car.

The interior monitor is switched on again automatically the next time the car is locked.

Note

You can switch off the interior monitor only after opening the door. ■

Power windows

Switch on the driver's door

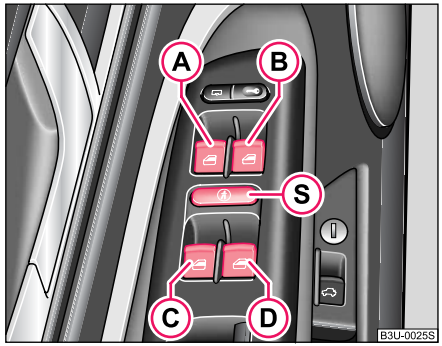


Fig. 30 Armrest on the driver's door: Controls

The power windows operate only when ignition is switched on.

Opening a window

– A window is opened by pressing lightly on the respective switch in the door. The process stops when one releases the switch.

– Pressing of the switch in the driver's door down to the stop will cause the window to be opened completey, automatically. Renewed pressing of the switch causes the window to stop immediately.

Closing a window

– A window is closed through pulling lightly on the respective switch in the door. The closing process stops when one releases the switch.

– Pulling of the switch in the driver's door to the stop will cause the window to be closed completey, automatically. Renewed pulling of the switch causes the window to stop immediately.

Switch for window lifter

Ⓐ Switch for power window of driver door
Ⓑ Switch for power window of front passenger door
Ⓒ Switch for power window at rear left door
Ⓓ Switch for power window at rear right door
Ⓢ Safety pushbutton

Safety pushbutton

You can deactivate the switches for the rear doors ⇒ page 51 using the safety pushbutton Ⓢ ⇒ page 49, fig. 30. The windows of the rear doors can be opened or closed from the rear seats provided this pushbutton has not been pressed in.

WARNING

- **If you lock the car from the outside, do not leave any person in the car as it is no longer possible to open the windows in an emergency.**

WARNING (continued)

- **The system is fitted with a force limiter. The closing process will be stop if an obstruction is detected and the window will open again. You should nevertheless take particular care when closing the windows! A person may otherwise suffer severe injuries as a result of getting an arm, for example, jammed in the window!**
- **It is recommended to deactivate the electrically operated power windows in the rear doors (safety pushbutton) Ⓢ ⇒ page 49, fig. 30 when children are being transported on the rear seats.**

Note

- After switching the ignition off, it is still possible to open or close the windows for a further 10 minutes. The automatic closing and opening functions will not operate during this time. The power windows are switched off completely once you open the driver or front passenger door.
- When driving, use the existing heating, air conditioning and ventilation system for ventilating the interior of the vehicle. If the windows are opened, dust and other dirt can get into the vehicle. The wind noise is more at certain speeds. ■

Switches in front passenger door and in rear doors

A switch for the relevant window is provided in these doors.

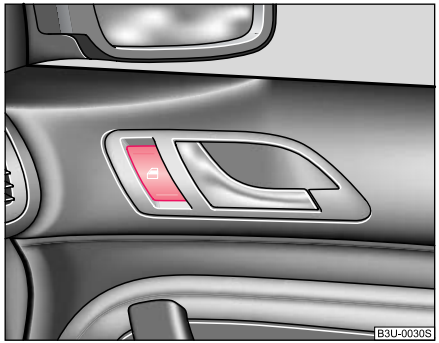


Fig. 31 Position of switch in front passenger door

Opening a window

– Press the appropriate switch **down** and hold it until the window has moved into the desired position.

Closing a window

– Press the appropriate switch **up** and hold it until the window has moved into the desired position.

WARNING

The system is fitted with a force limiter. The closing process will be stop if an obstruction is detected and the window will open again. You should nevertheless take particular care when closing the windows! A person may otherwise suffer severe injuries as a result of getting an arm, for example, jammed in the window!

Note

After switching the ignition off, it is still possible to open or close the windows for a further 10 minutes. The automatic closing and opening functions will not operate during this time. The power windows are switched off completely once you open the driver or front passenger door. ■

Convenience operation of windows

You can open and close the electrically powered windows as follows when unlocking and locking the vehicle (just closing of the sliding roof).

Opening windows with the key

– Turn the key in the lock of the driver door into the opening position or press the opening button of the remote control until all the windows are open.

Closing windows with the key

– Turn the key in the lock of the driver door into the closing position or press the closing button of the remote control until all the windows are closed ⇒ ⚠.

You can interrupt the opening or closing operation of the windows immediately by releasing the key of the button of the remote control.

WARNING

- **Obstruction protection is not active during the convenience operating feature ⇒ ⚠ in “Switches in front passenger door and in rear doors”.**
- **You should take particular care when closing the windows! A person may otherwise suffer severe injuries as a result of getting an arm, for example, jammed in the window!**

Operational problems

Automatic closing or opening does not operate

If the battery of the car has been disconnected and then reconnected, the automatic closing and opening function does not operate. The system must be activated. Proceed as follows in order to re-establish the function:

- Turn the key in the lock of the driver door into the closing position and hold it there until all of the windows are closed.
- Release the key.
- Insert the key again and turn it to the closing position for about 3 seconds.

Operation in winter

Ice accumulating on the surface of the windows during the winter may result in a greater resistance when closing the windows and the window may stop and move back several centimetres

Proceed as follows to close the window fully:

- Turn the key in the lock of the driver door into the closing position and hold it there until all of the windows are closed.
- Repeat this operatiive cycle when the window stops.

WARNING

- **Obstruction protection is not active during the closing of the windows ⇒ ⚠ in “Switches in front passenger door and in rear doors” on page 51.**
- **You should take particular care when closing the windows! A person may otherwise suffer severe injuries as a result of getting an arm, for example, jammed in the window!**

Electric sliding/tilting roof*

Description

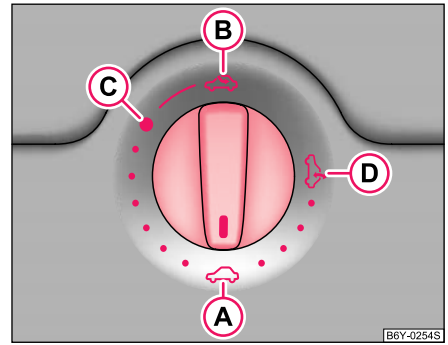


Fig. 32 Control dial for the power sliding/tilting roof

The sliding/tilting roof is operated by means of the control dial ⇒ page 52, fig. 32 and only functions when the ignition is switched on. The control dial has a number of fixed positions.

After switching the ignition off, it is still possible to open or close the windows for a further 10 minutes. It is no longer possible to operate the sliding/tilting roof after opening or closing one of the front doors, however.

Note

- It is possible that the sliding/tilting roof does not close fully after the car battery has been disconnected and reconnected. Here you have to press the control dial forward to switch position Ⓐ for about 10 seconds.
- It is necessary after each emergency operation (using crank handle) to move the sliding/tilting roof into the basic position. Here you have to press the control dial forward to switch position Ⓐ for about 10 seconds. ■

Opening and tilting

Comfort position

– Turn the switch to position Ⓒ ⇒ page 52, fig. 32.

Opening roof fully

– Turn the switch to position Ⓑ and hold it in this position (spring-tensioned position).

Tilting roof

– Turn the switch to position Ⓓ.

The wind noise in the comfort position is less than when the roof is fully opened.

The sun screen is also opened automatically when the roof slides open. You can slide the sun screen into the opened or closed position by hand when the sliding/tilting roof is closed. (This does not apply for models fitted with sliding/tilting roof with solar cells, in which the sun screen is a fixed element.)

Caution

It may be necessary during winter to remove any ice and snow in the area of the sliding/tilting roof before opening it in order to prevent damaging the opening mechanism. ■

Closing

Sliding closed/closing the sliding/tilting roof

– Turn the switch to position Ⓐ ⇒ page 52, fig. 32.

Safety closing

The sliding/tilting roof is equipped with an overload protection system. The sliding/tilting roof stops and moves back several centimetres when it cannot be closed because there is something in the way (e.g. ice). You can close the sliding/tilting roof completely without overload protection by pressing the switch to the Ⓐ position ⇒ page 52, fig. 32 at the front for as long as it takes for the sliding/tilting roof to shut completely ⇒ ⚠.

WARNING

Close the sliding/tilting roof carefully - risk of injury! ■

Convenience operation

You can also close an open sliding/tilting roof from the outside.

– Turn the key in the lock of the driver door into the closing position or press the closing button of the remote control until the sliding/tilting roof is closed ⇒ ⚠.

⚠ WARNING

Close the sliding/tilting roof carefully - risk of injury! The overload protection system does not function with the convenience closing.

Emergency operation

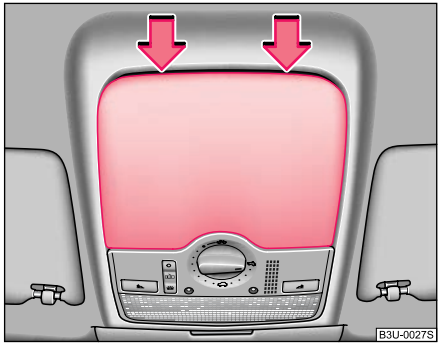


Fig. 33 Detail of the headliner: point for positioning screwdriver

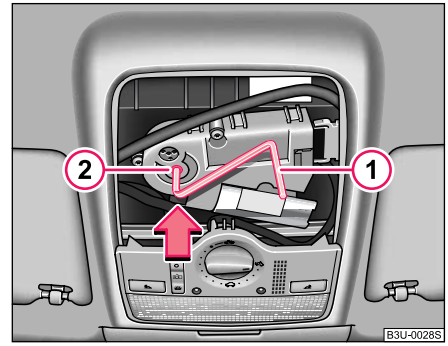


Fig. 34 Detail of the headliner: Emergency operation

You can close the sliding/tilting roof by hand if the system is defect.

– Position the flat blade of a screwdriver (car tool kit) carefully against the rear edge of the cover of the power roof drive ⇒ fig. 33.

– Pull the cover down.

– Take the crank handle out of the inside of the cover.

– Press the crank handle (1) fully into the hexagon hole (2) ⇒ fig. 34.

– Hold the crank pressed and turn it - the roof closes.

– Insert the crank handle into the cover again.

– Press on the cover again by first of all inserting the plastic lugs and then pushing the cover up.

– Have the fault rectified by a Škoda Dealer.

Note

It is necessary after each emergency operation (using crank handle) to move the sliding/tilting roof into the basic position. Here you have to press the control dial forward to switch position Ⓐ ⇒ page 52, fig. 32 for about 10 seconds. ■

Lights and Visibility

Lights

Switching lights on and off

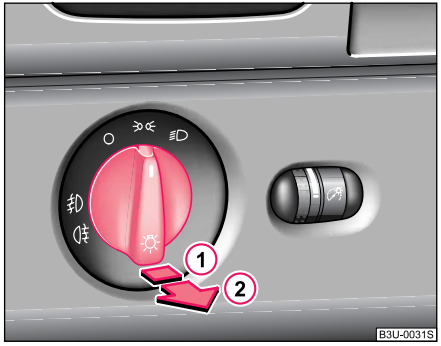


Fig. 35 Dash panel: Light switch

Switching on side lights

– Turn the light switch ⇒ fig. 35 into position ≡O.

Switching on the low beam and main beam ≡D

– Turn the light switch into position ≡D.

– Press the main beam lever forward in order to switch on the main beam ⇒ page 59, fig. 39.

Switching off all lights

– Turn the light switch into position O.

Low beam comes on only if the ignition is switched on. The low beam is switched off automatically when the engine is started and after switching the ignition off; only the side lights come on.

On models fitted with **right-hand steering*** the position of the switches differs from that shown in ⇒ fig. 35. The symbols which mark the switch positions are identical, however.

In certain countries, the low beam is on a reduced brightness as well as the side lights, when the ignition is switched on.

Note

- An audible warning will sound if you withdraw the ignition key and open the driver's door when the vehicle lights are still on.
- The acoustic warning signal is switched off over the door contact when the driver's door is closed (ignition off). The vehicle can be parked with the side lights on.
- We recommend switching off all lights or leaving only the side lights switched on if you park the vehicle for a lengthy period.
- The switching on of the described lights should only be undertaken in accordance with the legal requirements. ■

Fog lights*

Switching on the fog lights

– First of all turn the light switch ⇒ page 56, fig. 35 into position or .

– Pull the light switch out to the **first** detent (1).

When the fault lights are operating, the symbol next on the light switch is illuminated. ■

The rear fog light

Switching on the rear fog light

– First of all turn the light switch ⇒ page 56, fig. 35 into position or .

– Pull the light switch out to the **second** detent (2).

Only the rear fog light of the trailer lights up automatically when you are towing a trailer **using a factory-fitted towing device** which is fitted with the rear fog light .

Caution

The rear fog light should only be switched on if visibility is particularly poor (conform with any varying legal provisions) to avoid dazzling vehicles behind your vehicle. ■

Instrument lighting

You can adjust the brightness of the instrument lighting.



Fig. 36 Dash panel: Instrument lighting

– With the instrument lighting switched on, turn the thumbwheel until you have reached the intensity you wish for the instrument lighting.

Headlight range adjustment



Fig. 37 Dash panel: Lights and Visibility

– Turn the control dial ⇒ fig. 37 until you have adjusted the low beam so that oncoming traffic is not dazzled.

Settings

The positions correspond approximately to the following vehicle loads:

- (-) Front seats occupied, luggage compartment empty.
- (1) All seats occupied, luggage compartment empty.
- (2) All seats occupied, luggage compartment laden.
- (3) Driver seat occupied, luggage compartment laden.

Caution

Set the headlight beam adjustment in such a way as to avoid dazzling oncoming traffic.

Note

Headlights fitted with Xenon bulbs adapt automatically to the load and driving state of the vehicle (e.g. accelerating, braking) when the ignition is switched on and when driving. ■

Switch for hazard warning lights



Fig. 38 Dash panel: Switch for hazard warning lights

– Press switch ⇒ fig. 38 to switch the hazard warning light system on or off.

All the turn signal lights on the vehicle flash at the same time when the hazard warning light system is switched on. The indicator light for the turn signals and the indicator light in the switch also flash at the same time. You can also switch on the hazard warning light system if the ignition is switched off.

Note

Switch on the hazard warning light system if, for example:

- you encounter traffic congestion,
- your car breaks down or an emergency situation occurs, ■

Turn signal ⇦ ⇨ and main beam lever ≡D

The parking lights and headlight flasher are also switched on and off using the turn signal and main beam lever.

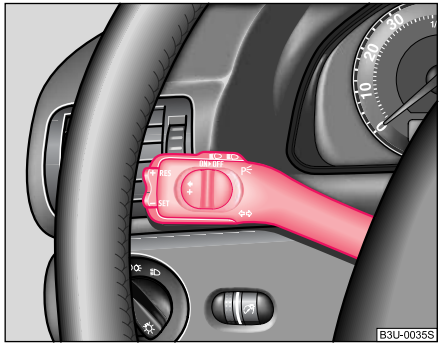


Fig. 39 Turn signal and main beam lever

The turn signal and main beam lever perform the following functions:

Turn signal light right ⇨

– Push the lever upwards ⇒ fig. 39.

– Turn signal for changing lanes - in order to only flash briefly move the lever up or down to the pressure point and hold it there.

Turn signal light left ⇦

– Push the lever downwards ⇒ fig. 39.

– Turn signal for changing lanes - in order to only flash briefly move the lever up or down to the pressure point and hold it there.

Main beam ≡D

– Switch on the low beam.

– Push the lever forwards.

– Pull the lever back into the initial position in order to switch the main beam off again.

Headlight flasher ≡D

– Pull on the lever of the steering wheel (sprung position) - the main beam and warning light in the instrument cluster come on.

Parking light P

– Switch off the ignition.

– Push the lever up or down - the right-hand or left-hand parking light is switched on.

Notes on light and indicator functions

- The **turn signal system** only operates when the ignition is switched on. The corresponding indicator light ⇦ or ⇨ in the instrument cluster also flashes.
- The turn signal is automatically cancelled after negotiating a curve.
- The side light and rear light on the appropriate side of the vehicle are switched on when the **parking light** is selected. The parking light function only operates if the ignition is switched off.
- An acoustic warning signal will sound when the driver's door is opened if the lever is not in the middle position after removing the ignition key. The acoustic warning signal will stop just as soon as the driver's door is closed.

Caution

- Use main beam or the headlight flasher only if this does not risk dazzling other road users.
- Use only in accordance with the legal requirements the described lighting and signal systems. ■

Coming Home-Function*

This function makes it possible to switch on low or main beam for a short time after leaving the car, e.g. to illuminate the path to your front door, etc.

Selecting function

– Switch off the light.

– Switch off the ignition.

– Flash one time with the headlights.

– Open the door, the low beam lights up.

If you shift the lever into the main beam position, the main beam lights up.

If the door remains open, the light remains on for about 3 minutes.

If the door is closed, the light remains on for about 30 seconds. ■

Interior lighting

Front interior lighting and storage compartment on front passenger side

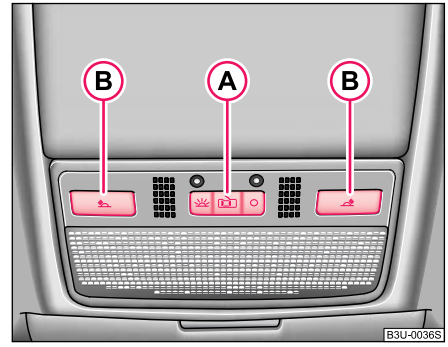


Fig. 40 Detail of the headliner: front interior lighting

Door contact setting

– Position the switch Ⓐ ⇒ fig. 40 into middle position ⚿.

Switching the interior light on

– Press the switch Ⓐ on the symbol.

Switching the interior light off

– Press the switch Ⓐ on the symbol O.

Front reading lights

– Press on one of the switches Ⓑ ⇒ page 60, fig. 40 in order to switch the right or left reading light on or off.

Lighting of storage compartment on the front passenger side

– Open the flap of the storage compartment on the front passenger side, the lighting of the storage compartment switches on automatically and switches off when the flap is closed.

If the interior lighting is fitted with a delayed-off control*, the lighting of the interior of the car remains on for a few seconds after the doors are closed.

The interior light comes on as soon as you unlock the car or open a door or when the ignition key has been removed. The light goes out again about 30 seconds after all the doors have been closed. The interior lighting is switched off when you lock the car or switch the ignition on. This only applies when the switch for the corresponding interior lights is standing n the door contact setting.

The interior lighting goes off after about 60 minutes when a door has been left open in order to avoid discharging the battery of the vehicle.

Two LEDs are integrated in the interior lighting, which illuminates the shift lever and the middle of the dash panel. They are switched on automatically when switching on the parking light. ■

Rear interior lighting

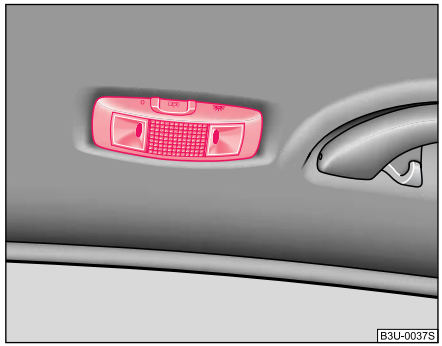


Fig. 41 The roof light at the rear with interior monitoring sensors

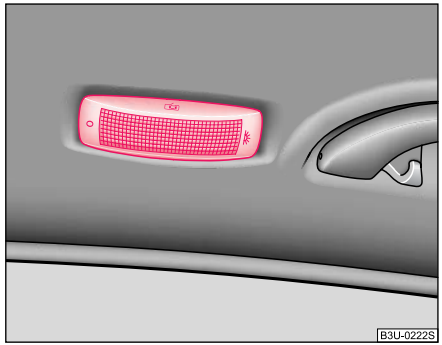


Fig. 42 The interior light at the rear without interior monitoring sensors

The lights with interior monitoring sensors ⇒ fig. 41 are actuated by moving the switch to the symbol, O or to the middle position.

The lights without interior monitoring sensors ⇒ page 61, fig. 42 are actuated by pressing the glass on the symbol O or by switching to the middle position.

The functions are the same as for the interior lighting at the front of the car ⇒ page 60. ■

Luggage compartment light

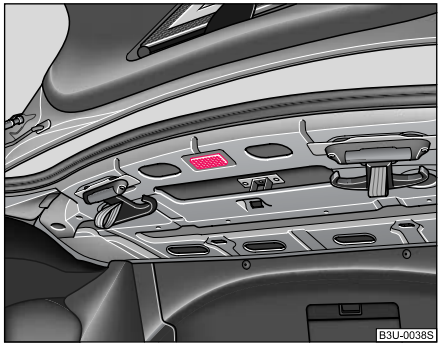


Fig. 43 Luggage compartment: Lighting

The light is located at the top side of the luggage compartment.

The lighting ⇒ fig. 43 comes on automatically when the boot lid is opened. The luggage compartment lighting will switch off again automatically if the boot lid remains open for more than about 60 minutes. ■

Entry lighting

The light is located in the door trim panel below.

The light beam is directed towards the entry area of the corresponding door.

The light switches on when the door is opened and switches off again when the door is closed.

If the doors remain open, the lighting goes out automatically after about 60 minutes provided the ignition is not switched on. ■

Visibility

Rear window heater



Fig. 44 Switch for rear window heater

– Press switch ⇒ page 62, fig. 44 to switch on the rear window heater.

The rear window heater operates only if the ignition is switched on. An indicator light in the switch is illuminated when the rear window heater is switched on.

The rear window heater **switches off** automatically after a few minutes.

For the sake of the environment

You should switch off the rear window heater as soon as the rear window is clear. The reduced current consumption will have a favourable effect on fuel economy ⇒ page 183. ■

Sun visors

Using the sun visors can contribute to increasing road safety.

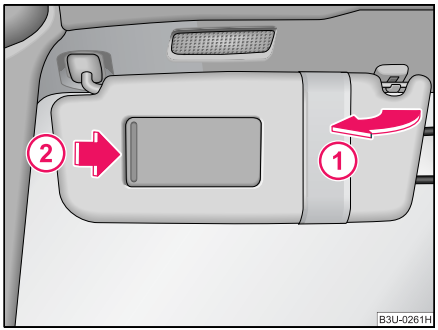


Fig. 45 Sun visor: swivelling out

You can pull the sun visors for the driver and front passenger out of the fixture and swivel them toward the doors in the direction of the arrow (1) ⇒ fig. 45.

The vanity mirrors in the sun visors are provided with covers. When you slide open the cover in the direction of the arrow (2), the vanity mirror lighting in the headliner switches on automatically. It switches off again when you slide the cover closed and when you raise the sun visor. ■

Sun screen*

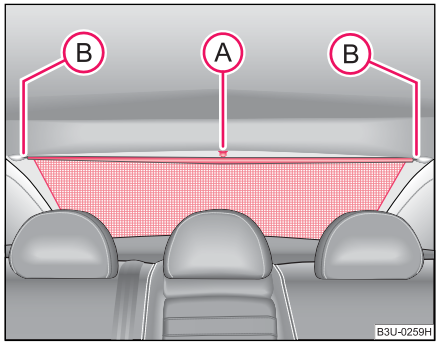


Fig. 46 Rear window: Sun screen

The rear sun screen is located in a housing below the luggage compartment cover.

Unrolling

– Pull the sun screen at the plate (A) and hang it in the bracket (B) ⇒ fig. 46.

Rolling up

– **Hold** the sun screen in such a way that it can roll up slowly and without damage into the housing. ■

The windscreen wiper and washing system

Windscreen wipers

You can operate the windscreen wipers and automatic wipe/wash using the windscreen wiper lever.

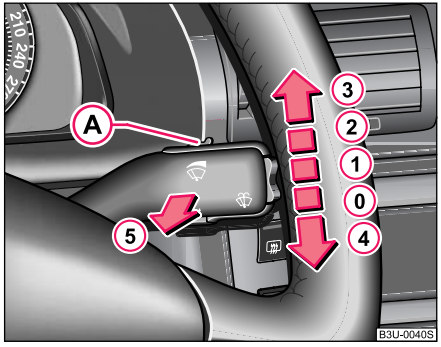


Fig. 47 Windscreen wiper lever

The windscreen wiper lever ⇒ fig. 47 has the following positions:

Finger-operated wiping

– Position the lever down into position (4) if you wish to wipe the windscreen only for a **single wipe** - spring-tensioned position.

Intermittent wipe

– Position the lever up into position (1).

– Set with the switch (A) the desired break between the individual wiper strokes

Slow wipe

– Position the lever up into position (2).

Fast wipe

– Position the lever up into position (3).

Automatic wipe/wash for windscreen

– Pull the lever towards the steering wheel into position (5) and the widescreen wiper and wash system will operate - in the sprung position.

– Release the lever. The washer system stops and the wipers continue operating for a further 4 seconds or so.

Switching windscreen wipers off

– Move the lever back into its home position (0).

Rain sensor*

– Move the lever into position (1).

– You can set the sensitivity of the sensor individually with switch (A).

– If you have switched the ignition off and on again, you must then once again activate the sensor by moving the lever into home position (0), and then back into position (1).

The windscreen wipers and the windscreen washer system only operate if the ignition is switched on.

The windscreen washer nozzles are heated* when the ignition is switched on.

The rain sensor* automatically regulates the break between the individual wiper strokes depending on the intensity of the rain.

WARNING

Properly maintained windscreen wiper blades are essential for clear visibility and safe driving ⇒ page 66, “Replacing windscreen wiper blades”.

Caution

In frosty weather, please first of all check whether the windscreen wiper blades are not frozen to the windscreen before switching them on. Switching on windscreen wipers when the blades are frozen to the windscreen may result in damage both to the blades and the motor of the windscreen wipers! ■

Headlight cleaning system*

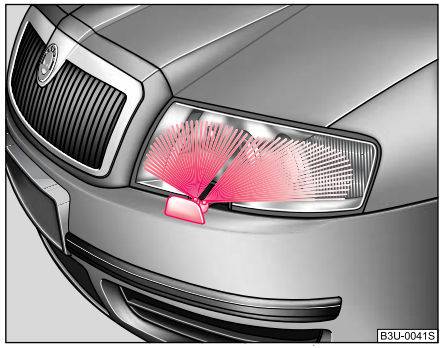


Fig. 48 Headlight with washer nozzle extended

The headlight lenses are cleaned, when main headlights are switched on by holding the lever for about 2 seconds in the position (5) ⇒ page 64.

The headlight washer nozzles are moved forward out of the bumper by the water pressure for cleaning the headlights.

You should remove stubborn dirt (such as insect residues) from the headlight lenses at regular intervals, for example when refuelling. Please refer to the notes ⇒ page 192.

You should remove any snow from the fixtures of the washer nozzles and clear ice in winter with a de-icing spray in order to ensure proper operation of the cleaning system. ■

Replacing windscreen wiper blades

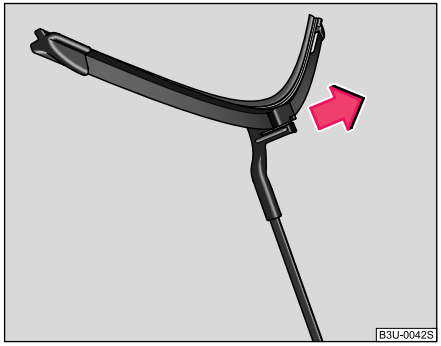


Fig. 49 Taking off the wiper blade

Taking off the wiper blade

– Fold windscreen wiper arm away from the windscreen and position the wiper blade at right angles to the wiper arm.

– Take off the wiper blade in direction of arrow ⇒ fig. 49 ⇒ ⚠.

Attaching a wiper blade

– Push the new wiper blade over the wiper arm and turn the wiper blade into the vertical position.

– Check whether the wiper blade is correctly attached.

Windscreen wiper blades in proper condition are essential to obtain good visibility. Wiper blades should not be allowed to become dirtied by dust, insect remains and preserving wax.

Juddering or smearing of the wiper blades could be due to wax residues left on the windscreen by vehicle washing in automatic vehicle wash systems. It is therefore important to **degrease** the lips of the winscreen wiper blades after every pass through an **automatic vehicle wash system**.

⚠ WARNING

- **If the windscreen wipers are handled carelessly, there is a risk of damage to the windscreen.**
- **You should clean the wiper blades regularly with a windscreen cleaner in order to avoid any smears. Clean a wiper blade with a sponge or cloth if it is very dirty, for example from insect residues.**
- **Replace the windscreen wiper blades once or twice a year for safety reasons. Windscreen wiper blades are available from Škoda dealers.**

Rear-view mirror

Manual dimming interior rear-view mirror

Basic position

– Pull the lever on the bottom edge of the mirror forward.

Dimming mirror

– Pull the lever on the bottom edge of the mirror back.

Automatic dimming interior rear-view mirror*

The mirror is dimmed **automatically** depending on the light striking the mirror from the rear provided the ignition is switched on. The mirror has no lever on the bottom edge of the mirror. When the interior lights are switched on or the reverse gear is engaged, the mirror always moves back into the basic position (not dimmed).

Note

Automatic mirror dimming operates only properly if the sun screen* for the rear window is not in use or the light striking the rear of the interior rear-view mirror is not affected by other objects. ■

Exterior mirror with entry lighting*

The lighting is positioned on the bottom edge of the exterior mirror.

The light beam is aimed at the entry area of the front doors after the car is unlocked.

The light comes on after the doors have been locked or on opening the front door. The lighting goes out about 30 seconds after the doors are closed or if the ignition is switched on.

If the doors remain open, the lighting goes out automatically after about 10 minutes provided the ignition is not switched on. ■

Electrically adjustable rear mirror

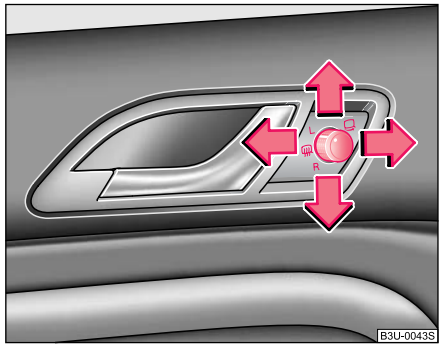


Fig. 50 Inner part of door: rotary knob (joystick)

The heating of the external mirror functions only when ignition is switched on.

Heating of the external mirror

– Turn the rotary knob to position ⇒ fig. 50.

Adjusting left and right exterior mirrors simultaneously

– Turn the rotary knob to position **L**. The movement of the mirror surface is identical to the movement of the rotary knob.

Adjusting the right-hand exterior mirror

– Turn the rotary knob to position **R**. The movement of the mirror surface is identical to the movement of the rotary knob.

Folding in both exterior mirrors*

– Turn the rotary knob to position .

Tilting surface of front passenger exterior mirror*

When the rotary knob is in position R ⇒ page 67, fig. 50 and the reverse gear is engaged, the surface of the mirror tilts down slightly. This provides an aid in seeing the kerb of the pavement when parking the car.

If you shift out of reverse gear, or switch over to the driver exterior mirror in position L, the mirror surface on the passenger side moves back into the original position.

Memory for exterior mirrors*

On vehicles fitted with a memory for the driver seat, the relevant setting of the exterior mirror is also stored automatically when the seat position is stored ⇒ page 71.

WARNING

Convex (curved outward) or aspherical exterior mirrors increase the vision field. They do, however, make objects appear smaller in the mirror. These mirrors are only of limited use, therefore, for estimating distances to the following vehicles.

Caution

If the mirror housing has been shifted out of position as a result of external force (e.g. striking an object when parking), the mirror must then be folded in fully with the electric motor. On no account attempt to move the mirror housing back by hand otherwise proper operation of the mirror mechanism will be affected. This applies only to models fitted with the fold-in function for both exterior mirrors*.

Note

- Do not touch the surface of the exterior mirrors if the exterior mirror heater is switched on.
- You can set the exterior mirrors by hand, if the power setting function fails at any time, by pressing on the edge of the mirror surface.
- Contact your Škoda dealer if a fault exists with the power setting of the exterior mirrors. ■

Seats and Stowage

Front seats

Basic information

The front seats have a wide range of different settings and can thus be matched to the physical characteristics of the driver and front passenger. Correct adjustment of the seats is particularly important for

- safely and quickly reaching the controls,
- a relaxed, fatigue-free body position,
- **achieving the maximum protection offered by the seat belts and the airbag system.**

The chapters which follow describe the procedure which you should adopt for adjusting the seats.

⚠ WARNING

- **Always keep your feet in the footwell when the car is being driven - never place your feet on the instrument panel or on the surfaces of the seats. This is particularly important for the front seat passenger. You will be exposed to increased risk of injury if it becomes necessary to apply the brake or in the event of an accident.**
- **It is important for the driver and front passenger to maintain a distance of at least 25 cm from the steering wheel or dash panel. Not maintaining this minimum distance will mean that the airbag system will not be able to properly protect you - hazard! The front seats and the head restraints must always also be correctly adjusted to match the body size of the occupant.**

⚠ WARNING (continued)

- **Ensure that there are no objects in the footwell as any objects may get behind the pedals during a driving or braking manoeuvre. You would then no longer be able to operate the clutch, to brake or accelerate.**

Adjusting front seats manually

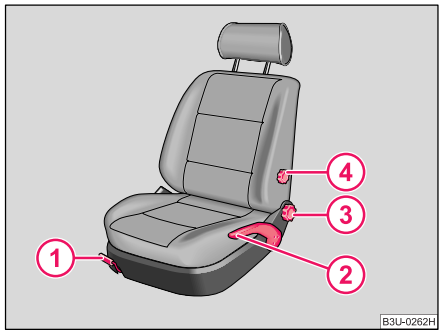


Fig. 51 Controls at driver seat

Adjusting a seat in a forward/back direction

– Pull the lever (1) ⇒ fig. 51 up and push the seat into the desired position.

– Release the lever (1) and push the seat further until the lock is heard to engage.

Adjusting height of seat

– Lift the seat if required by pulling or pumping lever (2) ⇒ page 69, fig. 51 upwards.

– Lower the seat if required by pushing or pumping lever (2) downwards.

Adjusting angle of backrest

– Move forward away from the backrest (do not lean against it).

– Turn the handwheel (3) in order to adjust the angle of the backrest accordingly.

Adjusting lumbar support*

– Turn the handwheel (4) until you have set the most comfortable curvature of the seat upholstery in the area of your spine.

WARNING

- **Only adjust the driver seat when the vehicle is stationary - risk of injury!**
- **Take care when adjusting the seat! Adjusting the seat without care can lead to bruises or injuries.**
- **The backrests must not be angled too far back when driving otherwise this will affect proper operation of the seat belts and of the airbag system - risk of injury!**

Adjusting front seats electrically*

Adjusting seats

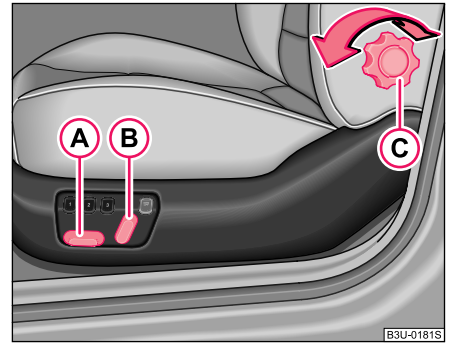


Fig. 52 Side view: controls for adjusting seat

Adjusting seat

– Adopt the correct seated position ⇒ page 69.

– Press switch (A) or (B) ⇒ fig. 52 in the direction of the desired setting.

– Turn the handwheel (C) until you have set the most comfortable curvature of the seat upholstery in the area of your spine.

Switch (A) is operated in order to move the seat up/down and forward/back, while switch (B) is operated in order to move the backrest forward or back.

You can adjust the lumbar support only mechanically with the handwheel (C).

WARNING

- **Only adjust the driver seat when the vehicle is stationary - risk of injury!**
- **Caution when adjusting the seat! You may suffer injuries or bruises as a result of adjusting the seat without paying proper attention.**
- **In view of the fact that the seats can also be adjusted when the ignition is switched off (even when ignition key withdrawn), you should never leave children unattended in the car.**
- **The backrests must not be angled too far back when driving otherwise this will affect proper operation of the seat belts and of the airbag system - risk of injury!**

Caution

If the movement of the seat is inadvertently interrupted during an adjustment, once again press the switch in the appropriate direction and continue with the adjustment of the seat to the end. ■

Memory for the seat

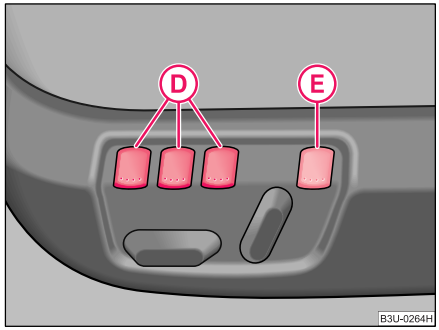


Fig. 53 Driver seat: Memory buttons and ON/OFF switch

Memory buttons

Memory for the seat offers the possibility to store the individual seat and external mirror position. An individual position can be allocated to each of the three memory buttons (D) ⇒ fig. 53, that is three in total. On pressing the appropriate memory button (D) the seat and external mirror will automatically move into the position allocated to this button.

ON/OFF switch

If you press switch (E) (raised switch), the memory buttons (D) no longer operate. You can now adjust the seat electrically without using the memory buttons (D). After pressing switch (E) once again, the seat can be reset with the memory buttons. If you had already started an operation to retrieve the settings, this operation is not continued.

If the car is used only by one driver, it is not necessary to store particular settings in this case, we recommend that you press the button (E) (raised button).

Emergency Off

If you operate any button or the switch ON/OFF of the driver seat, you can interrupt the setting operation at any time in an emergency. ■

Storing and retrieving settings

Storing seat and exterior mirror settings for driving forward

– Switch on the ignition.

– Adjust the seat ⇒ page 70.

– Adjust both exterior mirrors ⇒ page 67.

– Press one of the memory buttons (D) and hold the button pressed for about 3 seconds until an audible signal confirms that the setting has been stored.

Storing exterior mirror setting for reversing

– Switch on the ignition.

– Turn the exterior mirror control to position R ⇒ page 67, fig. 50.

– Engage reverse gear.

– Move the right exterior mirror into the desired position ⇒ page 67.

– Press one of the memory buttons (D) and hold the button pressed for about 3 seconds until an audible signal confirms that the setting has been stored.

Note

- When storing settings with the memory buttons, we recommend that you begin with the front button and assign a memory button to each additional driver.
- Each new setting stored with the same button erases the previous setting.
- Each time you store the seat and exterior mirror settings for driving forward you also have to re-store the individual setting of the exterior mirror on the passenger side for reversing. ■

Assigning remote control to the memory buttons

After storing the settings of the seat and exterior mirrors, you have 10 seconds in order to assign the remote control to the appropriate memory button.

– Withdraw the ignition key.

– Press the release button ⇒ page 46 and hold it pressed for 1 second until an audible signal confirms that the setting has been stored. The setting is stored with the memory button which you have selected.

If you wish to be able to retrieve the settings which are stored in the memory by also using the remote control, you have to assign the remote control to a memory button in each case.

We recommend that you assign one of the two remote controls supplied with your car, to the front memory button, and the other remote control key to the middle memory button.

If you wish, you can obtain an additional remote control from a Škoda Dealer and then assign it to the rear memory button.

Note

- If the remote control had previously been assigned to another memory button, this setting is then erased by the new assignment.
- If you assign the remote control to a memory button which has already been assigned to a remote control, the old assignment is also replaced by a new assignment in this case.
- The assignment of the remote control to a memory button is retained, however, after reassigning the seats and exterior mirrors. ■

Retrieving seat and exterior mirror settings for driving forward

You can retrieve the stored settings either with the memory buttons or with the remote control.*

Retrieving settings with memory buttons

– For safety reasons, you can only retrieve the seat and mirror settings if the ignition is switched off. You have a choice of two different ways of retrieving the settings:

– **One-touch automatic memory:** with the driver door open, operate the desired memory button Ⓓ ⇒ page 71, fig. 53 with one-touch. The seat and the exterior mirrors now move automatically into the stored position.

– **Memory keying**: with the driver door open or closed, press and hold the desired memory button Ⓓ until the seat and the exterior mirrors have moved into the stored position.

Retrieving settings with remote control

– If the driver door is closed and the ignition is switched off, briefly press the unlock button of the remote control ⇒ page 46 and then open the door.

– The seat and exterior mirrors now move automatically into the stored positions.

Retrieving setting of exterior mirror for reversing*

– Engage reverse gear and then move the control for the exterior mirror setting into position R ⇒ page 67.

Emergency Off

You can interrupt any memory retrieval operation in an emergency by pressing the switch Ⓔ ⇒ page 71, fig. 53, by one-touch of a memory button or by pressing the seat setting switch. ■

Head restraints

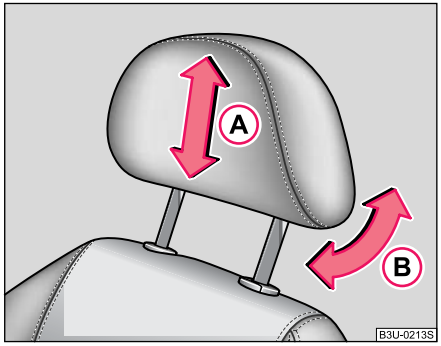


Fig. 54 Adjusting head restraint

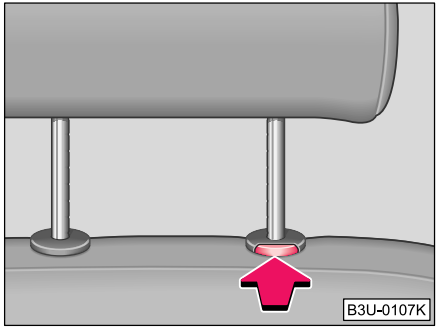


Fig. 55 Removing a head restraint

Adjusting the height of a head restraint

– Grasp the side of the head restraint with both hands and push it up or down in direction of arrow (A) ⇒ fig. 55. Best protection is achieved if the top edge of the head restraint is at least at eye level or higher.

Adjusting the angle of a head restraint

– The head restraint can be matched to the head of the occupant by adjusting the angle in the direction of the arrow (B). Adjusting the angle of the head restraint provides enhanced comfort for the user.

Removing and installing a head restraint

– Pull the head restraint out of the backrest of the seat as far as the stop.

– Press the locking button in direction of arrow ⇒ fig. 55 and pull the head restraint out.

– To re-insert the head restraint, push it down into the backrest of the seat far enough until you hear the locking button engage.

The head restraints of the front seats can be adjusted for angle and height ⇒ fig. 54, the outer head restraints at the rear can be adjusted for height (about 15 mm). The middle rear head restraint is fixed.

The head restraints must be adjusted to match the size of the seat occupant. Correctly adjusted head restraints together with the seat belts offer effective protection for the occupants.

WARNING

The head restraints must be correctly adjusted in order to offer effective protection to the occupants in the event of an accident.

Front passenger seat with a folding central back rest*

Folding out and setting

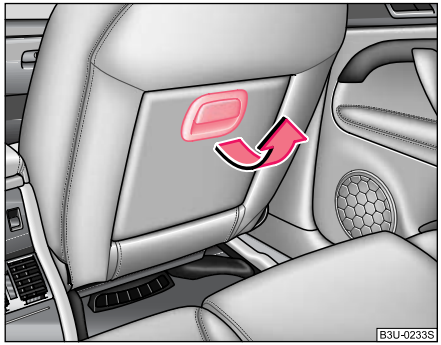


Fig. 56 Front passenger seat: folding central back rest

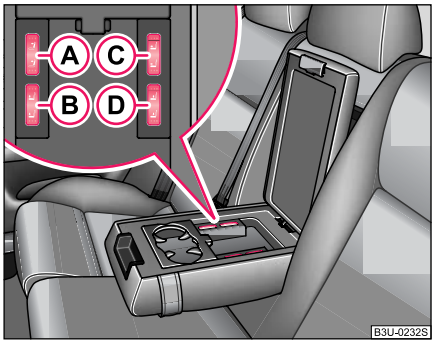


Fig. 57 Armrest of rear seats: Operating the passenger seat

You can fold out the central back rest of the front passenger seat during a long journey for improved comfort. It then serves as a comfortable footrest for the passengers in the rear. You can adjust the position of the footrest by adjusting the passenger seat using the switches in the armrest of the rear seats ⇒ fig. 57.

Folding out the central back rest

– Pull the handle in direction of arrow ⇒ fig. 56 and pull the central part of the back rest downwards.

Folding up the central back rest

– Fold the central back rest up until it is heard to lock.

Adjusting the passenger seat

– Tilt the back rest forwards or backwards using switch (A).

– Move the front part of the seat upwards or downwards using switch (B).

– Shift the seat forwards or backwards using switch (C).

– Move the rear part of the seat upwards or downwards using switch (D).

Caution

- The maximum loading of the foldable central part of the seat is 30 kilograms.
- Never use the foldable central part of the seat as an additional seat.

Note

You can use a protective sack ⇒ page 76 in order to prevent any dirt getting onto the passenger seat. ■

Protective sack

When using the foldable central part of the back rest the protective sack reduces dirt getting on the passenger seat.

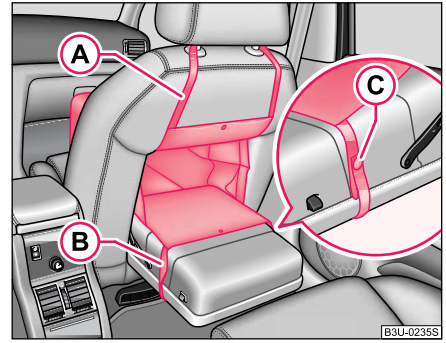


Fig. 58 Front passenger seat: Protective sack

The protective sack is stored in the storage compartment in the back rest of the driver's seat.

Installing the protective sack

– Lay the unfolded protective sack on the passenger seat.

– Fold out the central part of the back rest ⇒ page 75.

– Pull the belt (A) through the opening in the passenger seat and pull it over the head restraint ⇒ fig. 58.

– Pull the belt (B) under the folded down support and secure it with head (C).

– The protective sack is folded up in the reverse order.

The protective sack has zip on the upper side to release air. It allows the upper side to be opened out.

You can also use the protective sack as a luggage bag. ■

Footrest at the rear*

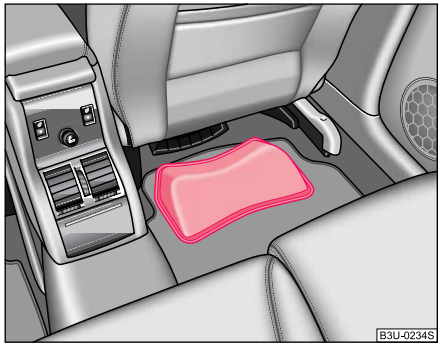


Fig. 59 The floor behind the front seat: Footrest at the rear

The passengers sitting in the rear of the car can use ⇒ fig. 59 the foot rest for increased comfort. The foot rest is attached to the carpet by a velcro fastener. ■

Seat heaters*

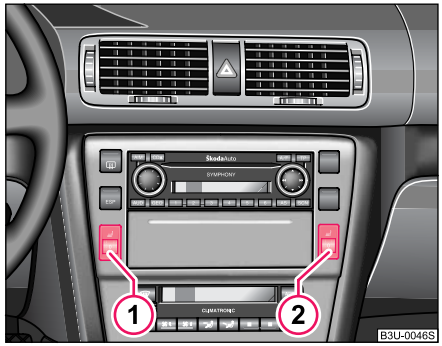


Fig. 60 Dash panel: Control dial for heating the front seats

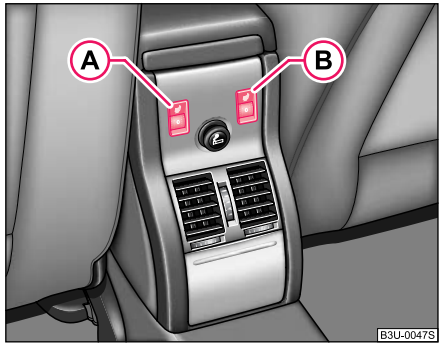


Fig. 61 Centre console at rear: Rotary controls for heaters of rear seats

You can heat the surfaces of the seats and of the backrests of the front seats and the two outer rear seats. ▶

Front seats

– You can switch on and adjust the heaters of the driver and front passenger seats by turning the rotary controls (1) and (2) ⇒ page 77, fig. 60, respectively.

Rear seats

– You can switch on and adjust the heaters of the left and right rear seats by turning the rotary controls (A) and (B) ⇒ page 77, fig. 61, respectively.

If the rotary controls are in the 0 position, the seat heater is switched off. When the seat heater is switched on, the numerical marking of the rotary control is illuminated. The control range extends from 1 to 5.

Caution

- You should not kneel on the seats and avoid applying pressure at specific points in order to avoid damaging the heating elements of the seat heaters.
- Do not clean the seats moist ⇒ page 194.

Note

The seat heating should only be switched on when the engine is running. This has a significant effect of saving on the battery capacity. ■

Pedals

You should use only footmats which do not obstruct the movement of the pedals and have an anti-slip protection.

Operation of the pedals must not be hindered!

WARNING

- **Greater pedal distances may be needed when there is a fault in the brake system.**
- **Do not place any footmats or other additional floor coverings in the area of the pedals in order to ensure that all the pedals can be fully depressed and are able to return unobstructed to their initial position - risk of accident!**
- **There must be no objects on the floor which could roll under the pedals. You would then no longer be able to apply the brakes, operate the clutch or accelerator - risk of accident!** ■

Luggage compartment

Loading the luggage compartment

Please observe the following in the interest of having good handling characteristics of your vehicle:

– Distribute the items of luggage as evenly as possible.

– Place heavy objects as far forward as possible.

– Attach the items of luggage with the safety net* or with tensioning straps attached to the lashing eyes ⇒ page 79. ▶

WARNING

- **Please note that the handling properties of your vehicle may be affected when transporting heavy objects as a result of the displacement of the centre of gravity. The speed and style of driving must be adjusted accordingly.**
- **The items carried in the luggage compartment should be stored in such a way that no objects are able to slip forward if there are any sudden driving or braking manoeuvres undertaken - risk of injury!**
- **Never drive with the boot lid slightly ajar or even fully opened otherwise exhaust gases may get into the interior of the vehicle - risk of poisoning!**
- **On no account exceed the permissible axle loads and the permissible gross weight of the vehicle - risk of accident!**

Note

- You have to adjust the inflation pressure of the tyres to the load of the car - refer to tyre inflation pressure sticker on the inside of the fuel filler flap.
- The backrest of the rear seats is a fixed element and can therefore not be folded forward to increase the size of the luggage compartment! ■

Lashing eyes

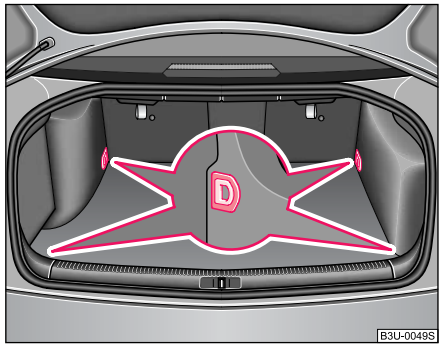


Fig. 62 Position of lashing eyes in luggage compartment

Eyes are located on the sides of the loading area for lashing the goods to be loaded ⇒ fig. 62.

You can also attach a securing net* to these eyes for lashing small objects.

The securing net* and the fixing instruction is located in the well under the floor covering of the lugagge compartment behind the spare wheel.

WARNING

The load to be transported must be fixed in place in such a way that it cannot move during the journey and when braking. ■

Folding double hooks

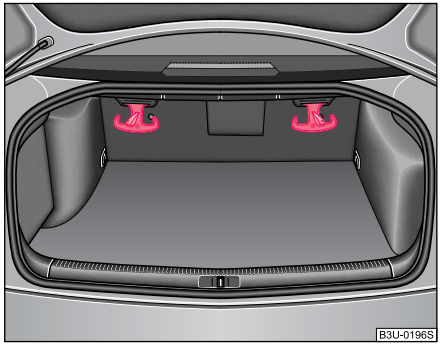


Fig. 63 Folding double hooks

Folding double hooks for attaching small items of luggage, such as bags etc., are provided on both sides of the luggage compartment ⇒ fig. 63.

An item of luggage weighing up to 5 kg can be attached to each side of the double hook. ■

Side compartment

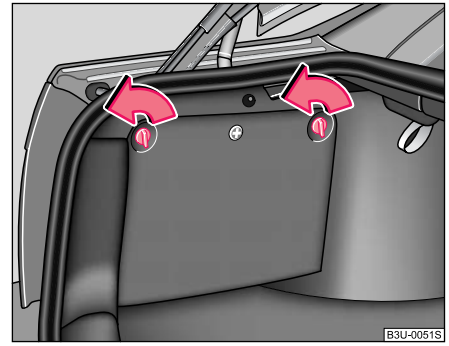


Fig. 64 Luggage compartment: Side compartment

– You can open the compartment by turning the locks in the direction of arrow ⇒ fig. 64.

The CD changer* and the first-aid box* ⇒ page 227 is housed in this compartment. ■

The luggage compartment cover

You can use the luggage compartment cover behind the head restraints of the rear seats for storing light and soft items.

WARNING

No objects should be placed on the luggage compartment cover, the vehicle occupants could be endangered if there is sudden braking or the vehicle collides with something.

Caution

Please ensure that the heating elements of the rear window heater are not damaged as a result of objects placed in this area. ■

Through-loading bag*

The through-loading bag enables you to conveniently transport long objects (such as skis) without damaging the interior of the car.

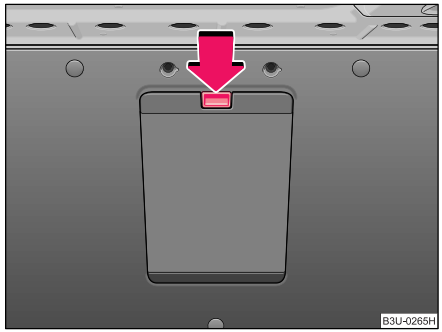


Fig. 65 Luggage compartment: cover for through-loading bag

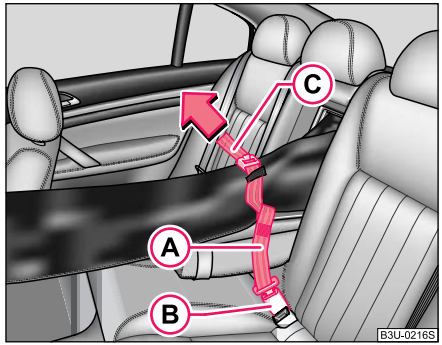


Fig. 66 Attaching through-loading bag to middle seat belt buckle of rear seats

Loading

– Fold down the armrest of the rear seats to the front.

– Press the unlock button for the cover of the through-loading bag in the interior of the car and swivel it down.

– Pull the bag out and unfold it.

– Open the boot lid/luggage compartment door.

– Press the unlock button for the cover of the through-loading bag ⇒ fig. 65 and swivel it down.

– Push the objects into the through-loading bag from the boot ⇒ ⚠.

Securing

– Insert the belt Ⓐ ⇒ fig. 66 into the middle seat belt buckle Ⓑ. ▶

– Pull the seat belt Ⓒ tight in direction of arrow ⇒ page 81, fig. 66.

Stowing

– Close the cover for the through-loading bag in the boot.

– Carefully fold the through-loading bag together (approx. 11 cm packet).

– Close the cover in the interior of the car.

– Move the armrest back into its original position.

⚠ WARNING

After placing items into the through-loading bag, you must secure the bag with the belt Ⓐ.

Note

Never fold the though-loading bag together if it is moist. ■

The cool box in the armrest of rear seats*

Using the system

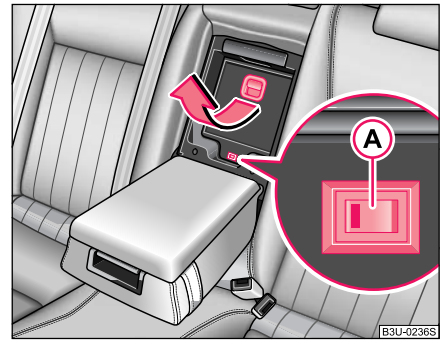


Fig. 67 Cool box

The contents of the cool box is cooled to a temperature of about 20 °C below the ambient temperature, but to a maximum of approx.+ 5 °C.

Opening and Closing

– Pull the handle ⇒ fig. 67 and pull the lid downwards.

– Open up the lid of the cool box upwards until it is heard to lock.

Switching on and off

– The cooling action of the cool box is switched on and off using switch Ⓐ ⇒ fig. 67. It is signalised by the lighting up of the indicator light on the switch.

You can remove the cool box if necessary ⇒ page 84. You can replace the cool box with a storage net ⇒ fig. 68.

Caution

Never cover the ventilator on the cool box otherwise it will overheat and could be damaged.

Note

The cool box also operates if the ignition is switched off. The battery will not run down fully, however, since the system is fitted with a device which monitors the battery charge level. The cool box will be automatically switched off when it is threatening to empty the battery. ■

Partition with storage net

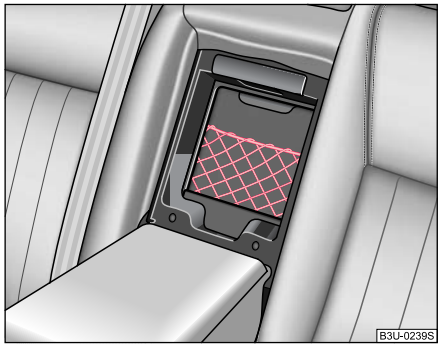


Fig. 68 Partition with storage net

If the cool box is removed, install the partition with the storage net ⇒ fig. 68 which is fixed with a velcro fastener to the side wall of the cool box.

– The partition is installed and removed in a similar way to the cool box ⇒ page 84. ■

Removing and installing the cool box

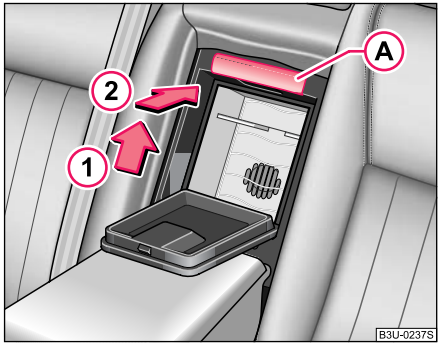


Fig. 69 Removing the cool box

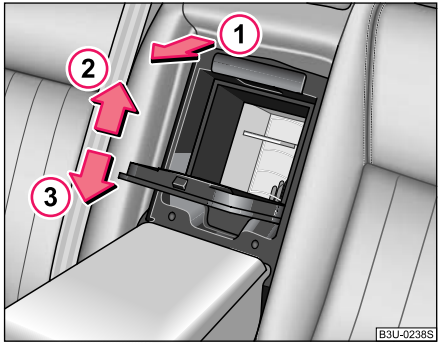


Fig. 70 Installing the cool box

Removing

– Switch the cooling mode of the cool box off ⇒ page 82.

– Remove the locking mechanism Ⓐ ⇒ fig. 69.

– Open the lid of the cool box.

– Press open the upper side of the cool box from the inside in the direction of arrow ① and put away the cool box in the luggage compartment (see arrow ②).

– Unplug the plug connector (the plug connector is located in the luggage compartment in the lower part of the fixing frame for the cool box).

Installing

– Place the cool box on the luggage compartment partition and plug in the plug.

– Remove the locking mechanism Ⓐ ⇒ fig. 69.

– Fold the lid of the cool box onto the fixing frame ⇒ fig. 70.

– Lift the cool box with the palm of the hand on the inside of the upper wall of the cool box.

– Insert the cool box with the lower edge into the lower holding bracket on the luggage compartment partition.

– Pull the cool box forwards to the upper edge until the stop (see arrow ①), press with the palm of the hand onto the upper wall (see arrow ②), pull the box again forwards and press downwards (see arrow ③).

– Push the locking mechanism Ⓐ ⇒ fig. 69 up to the stop into the fixing frame.

– Close the lid of the cool box. ■

CargoFlex folding box*

Lowering and securing folding box

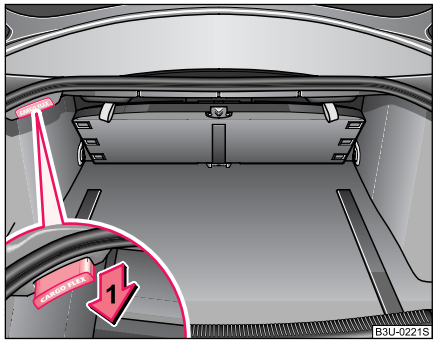


Fig. 71 Folding box: Transport position

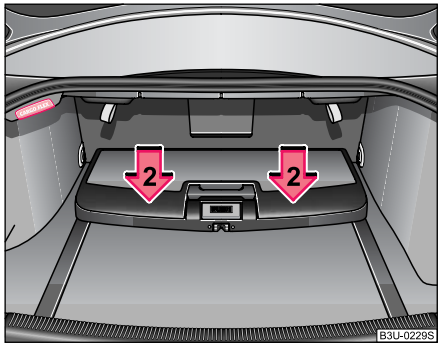


Fig. 72 Folding box: ready position

You can transport the folding box in two different positions - in the transport position against the partition ⇒ fig. 71 of the luggage compartment, or in the ready position lowered onto the floor of the luggage compartment ⇒ fig. 72.

Lowering folding box into the ready position

– Pull the snap handle in direction of arrow **1** ⇒ fig. 71. The folding box is lowered to just above the floor of the luggage compartment.

– Press the folding box at the arrow positions **2** ⇒ fig. 72 onto the floor of the luggage compartment until it locks in place. If correctly locked, the snap handle moves back into its initial position (the top red surface of the handle is not visible).

Securing folding box in the transport position against partition of luggage compartment

– Lower the folding box into the ready position ⇒ page 87.

– Pull the snap handle in direction of arrow **1** ⇒ page 85, fig. 71. The folding box is raised up from the luggage compartment floor.

– Raise and press the folding box against the partition of the luggage compartment, it is secured audibly in this way in the transport position. If correctly locked, the snap handle moves back into its initial position (the top red surface of the handle is not visible).

Opening folding box ⇒ page 86.

Caution

The parts of the folding box can be damaged if handled roughly or in an unprofessional way. ■

Opening folding box

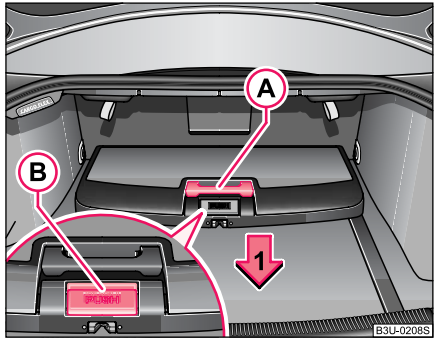


Fig. 73 Luggage compartment: folding box

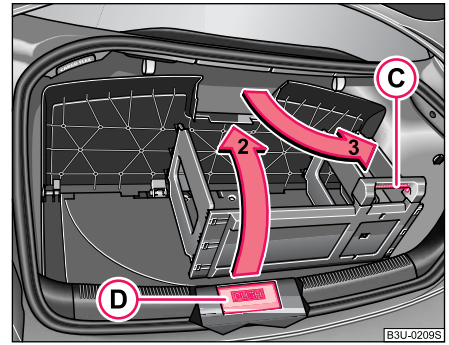


Fig. 74 Opening folding box

You can transport the opened folding box in the secured end or middle position against the partition of the luggage compartment.

Opening folding box

– Lower the folding box into the ready position ⇒ page 85.

– Press the button marked “PUSH” (B) ⇒ page 86, fig. 73.

– Grasp the folding box at the handle (A) and push it in direction of arrow **1** against the partition of the luggage compartment into the secured position. The lock below the button must be heard to engage. If correctly locked, the button marked “PUSH” (B) moves back into its initial position.

– Raise the lid in direction of arrow **2** ⇒ page 86, fig. 74.

– Press on the bottom part of the handle Ⓒ and open the compartments in the direction of arrow **3**. The compartment wall must be heard to engage in the slot in the bottom part of the box.

Moving folding box into secured middle position

– Press on the button marked “PUSH” Ⓓ ⇒ page 86, fig. 74 and carefully push the folding box into the secured middle position. If correctly locked, the button marked “PUSH” Ⓓ is moved back into its initial position. You can now use the space which has become available for stowing further items of luggage.

Caution

- The parts of the folding box can be damaged if handled roughly or in an unprofessional way.
- The maximum weight of goods to be loaded should not exceed 25 kg. ■

Lowering folding box

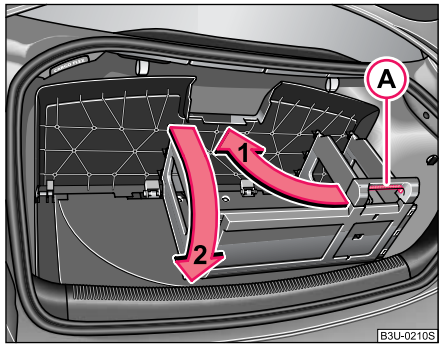


Fig. 75 Lowering folding box

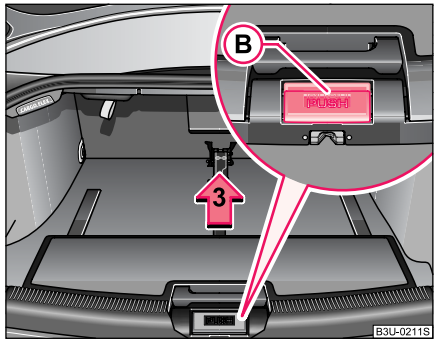


Fig. 76 Securing folding box

– Press the bottom part of the handle Ⓐ ⇒ page 87, fig. 75 and fold the compartments in direction of arrow **1**. The compartments must be heard to engage in the lid.

– Close the lid in direction of arrow **2**.

– Press on the button marked “PUSH” Ⓑ ⇒ page 87, fig. 76 and push the folding box into the secured middle position.

– Once again press on the button marked “PUSH” Ⓑ and push the folding box carefully into the secured position against the partition of the luggage compartment in direction of arrow ③ (ready position). If correctly locked, the button marked “PUSH” Ⓑ is moved back into its initial position.

You can leave the folding box in the ready position for use, or lower it into the transport position ⇒ page 85.

Caution

- The parts of the folding box can be damaged if handled roughly or in an unprofessional way.
- First check for yourself whether the cover for the through-loading bag* is closed before you lower the folding box into the ready position on the partition of the luggage compartment ⇒ page 81. ■

The roof luggage rack system

Description

Pay attention to the following points if you wish to transport luggage or other items on the roof of your vehicle:

- Your car has streamlined rain channels integrated into the roof. For this reason, it is not possible to use conventional roof racks. We therefore recommend that you only use base roof bars from the Škoda Genuine Accessories.
- These base roof bars are the supporting elements for a complete roof bar system. Separate additional components are required for safety reasons for transporting luggage, bikes, surfboards, skis and boats. All these system components are available from Škoda Dealers.

Caution

- If you use other roof rack systems or if the roof bars are not properly fitted, then any damage which may result to your car is not covered by the warranty agreements. It is therefore essential to pay attention to the fitting instructions supplied with the roof luggage rack system.
- On models fitted with a power sliding/tilting roof, ensure that the opened sliding/tilting roof does not strike any items of luggage transported on the roof.

For the sake of the environment

The increased aerodynamic drag results in a higher fuel consumption. One should therefore take off the roof bar system after use. ■

Attachment points

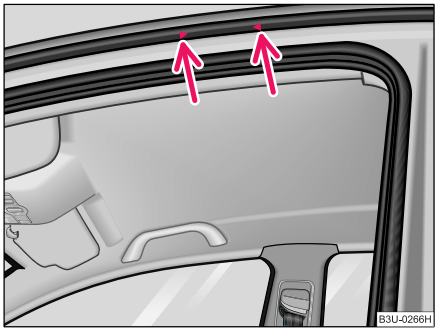


Fig. 77 Attachment points for roof bars

Installing

When fitting on the feet of the roof bars, ensure that they are positioned exactly between the arrow markings in the sealing strip on the roof ⇒ fig. 77. The markings are visible only when the doors are open. ■

Roof load

Distribute weight evenly over the roof luggage rack system. The maximum permissible roof load (including roof rack system) of **100 kg** and the maximum permissible total weight of the vehicle should not be exceeded.

You cannot make full use of the permissible roof load if you use a roof luggage rack system with a lower load carrying capacity. The load transported on the roof luggage rack system must not exceed the weight limit which is stated in the fitting instructions.

WARNING

- **The items which you transport on the roof bar system must be reliably attached - risk of accident!**
- **You must on no account exceed the permissible roof load, the permissible axle loads and the permissible gross weight of your vehicle - risk of accident!**
- **Please note that the handling properties of your vehicle change when you transport heavy or bulky items on the roof bar system as a result of the displacement of the centre of gravity and the increased wind attack area - risk of accident! You must absolutely adapt your style of driving and the speed of the vehicle to the specific circumstances.**

■

Drinks can holder

Drinks can holder in front compartment

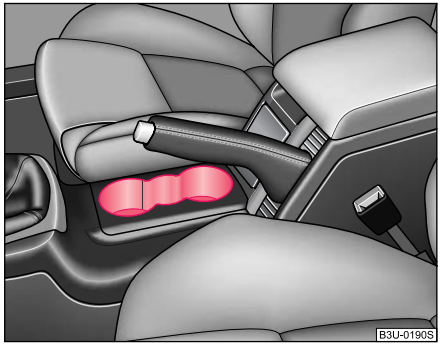


Fig. 78 Centre console: Drinks can holder

You can place two cups or beverage cans into the recesses ⇒ fig. 78.

WARNING

- **Do not place any hot beverages into the cup holder while the car is moving. The hot beverages may spill - risk of scalding!**
- **Do not use any cups or beakers which are made of hard or brittle material (e.g. glass, porcelain). You might be injured by them in the event of an accident.**

Drinks can holder in armrest of the rear seats*

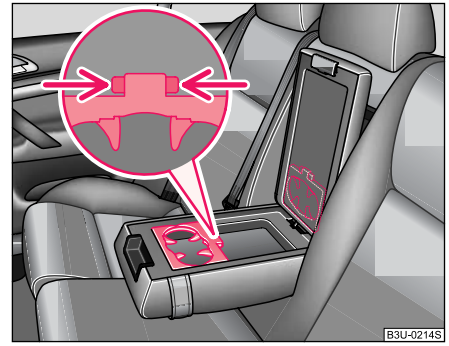


Fig. 79 Drinks can holder in rear armrest

The drinks can holder is provided in the stowage compartment.

Access to drinks can holder

– Raise the cover of the armrest.

– You can take off the drinks can holder. Unlock it ⇒ fig. 79 and attach it to the cover of the armrest.

Only place cans into the drinks can holder which are held tight in the holder.

It is possible to place up to two beverage cans in the drinks can holder of the armrest.

WARNING

- **Do not place any hot beverages into the can holder while the car is moving. The hot beverages may spill - risk of scalding!**
- **Do not use any cups or beakers which are made of hard or brittle material (e.g. glass, porcelain). You might be injured by them in the event of an accident.**

Ashtray

Ashtray at the front

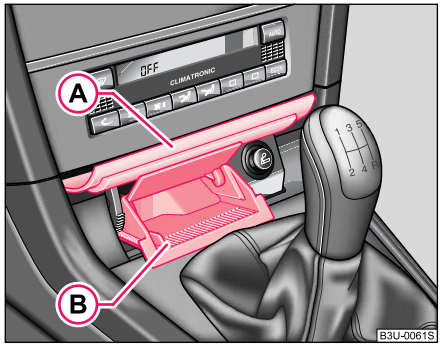


Fig. 80 Centre console: opened ashtray

Opening ashtray

– Press on the bottom part of the cover of the ashtray - refer to Ⓐ ⇒ fig. 80.

Removing the ashtray insert

– Grasp the ashtray insert Ⓑ ⇒ fig. 80 at the side recesses and pull it out.

Replacing the ashtray insert

– Press the ashtray insert into the mount.

WARNING

Never lay flammable objects in the ashtray basin - risk of fire!

Ashtray at the rear*

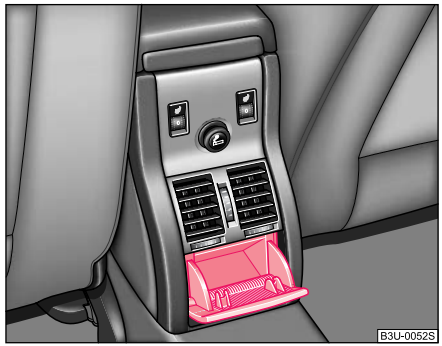


Fig. 81 Ashtray at the rear

Opening ashtray

– Press on the top part of the cover of the ashtray.

Removing the ashtray insert

– Press the cover of the ashtray down slightly as far as the stop.

– Grasp the ashtray insert and pull it out at an angle of about 45°.

Replacing the ashtray insert

– Position the ashtray insert at an angle of about 45° and press it into the mount as far the stop.

WARNING

Never lay flammable objects in the ashtray basin - risk of fire!

Ashtray in the armrest*

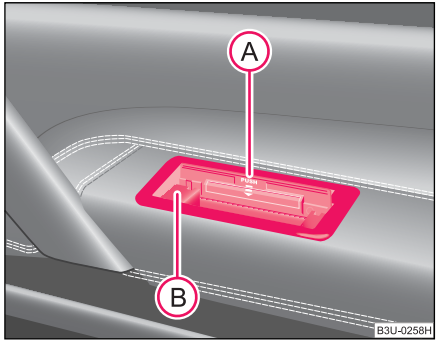


Fig. 82 Ashtray in the armrest of the rear right door

Ashtray located in the armrest of the rear right door

Opening ashtray

– Press on the middle part of the cover of the ashtray.

Removing the ashtray insert

– Press on the top part of the opened ashtray in position Ⓐ, the ashtray insert Ⓑ is raised ⇒ fig. 82.

Replacing the ashtray insert

– Press the ashtray insert into the armrest.

WARNING

Never lay flammable objects in the ashtray basin - risk of fire!

Cigarette lighters and power sockets

Cigarette lighter

You can also use the socket on the cigarette lighter for other electrical appliances.

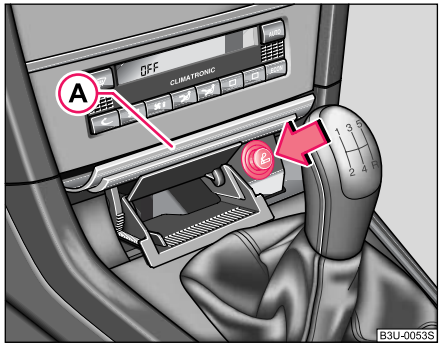


Fig. 83 Centre console: Cigarette lighter

Using the cigarette lighter

– Press on the bottom part of the cover of the ashtray - refer to Ⓐ ⇒ fig. 83.

– Press in the button of the cigarette lighter (see arrow).

– Wait until the button jumps forward.

– Remove the cigarette lighter immediately and use it.

– Insert the cigarette lighter again into the socket.

Using the power socket

– Take out the cigarette lighter.

– Insert the plug of the electrical appliance into the socket of the cigarette lighter.

The 12 volt power socket or the lighter holder can also be used for further electrical appliance with a power uptake of up to 100 watts.

WARNING

- **Take care when using the cigarette lighter! Not paying proper attention or incorrect use the cigarette lighter in an uncontrolled manner may result in burns.**
- **The cigarette lighter and the power socket also operates when the ignition is switched off or the ignition key withdrawn. This is why you should never leave children unattended in the vehicle.**

Caution

Only use matching plugs, which fulfils the DIN - ISO Standard 4165, to avoid damaging the power sockets.

Note

Connecting electrical components when the engine is not running will drain the battery of the vehicle - risk of battery draining! ■

Cigarette lighter in rear compartment

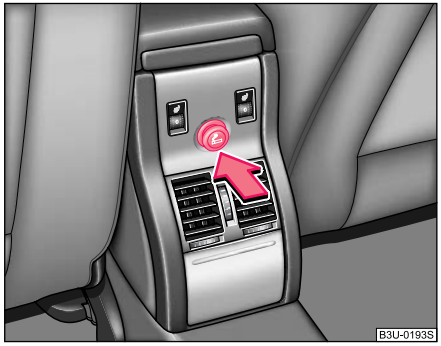


Fig. 84 Centre console: Cigarette lighter

Operating and further information regarding the use of the cigarette lighter ⇒ page 93. ■

Power socket in the luggage compartment

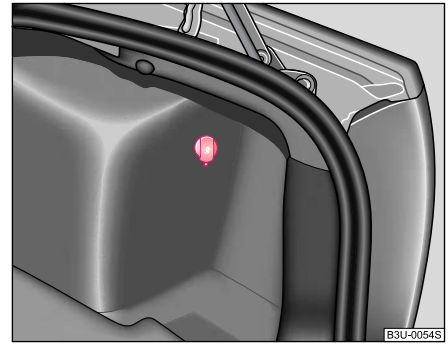


Fig. 85 Luggage compartment: Power socket

– Open the cover of the power socket ⇒ fig. 85.

– Connect the plug of the electrical appliance to the socket.

It fulfils the requirements of DIN standard ISO 4165 and must only be used for connecting approved electrical accessories with a power uptake of up to 100 watts. The vehicle battery will be discharged in the process if the engine is stationary.

Further information concerning use of the power socket ⇒ page 93. ■

Storage facilities

An overview

You will find the following storage facilities in your vehicle:

First-aid box	⇒ page 227
Stowage compartment for warning triangle	⇒ page 227
Storage compartment on the front passenger side	⇒ page 95
Storage drawer*	⇒ page 96
Stowage compartment in centre console	⇒ page 97
Stowage compartment for spectacles*	⇒ page 97
Stowage compartment below steering wheel	⇒ page 98
Stowage compartment in door panel	⇒ page 98
Stowage compartment for an umbrella*	⇒ page 99
Armrest with stowage compartment	⇒ page 100
Rear armrest with stowage compartment*	⇒ page 101
Clothes hooks	⇒ page 101

WARNING

Please do not place anything on top of the dash panel. Such objects might slide or fall down when driving (when accelerating or cornering) and may distract you from concentrating on the traffic situation - risk of accident!

Storage compartment on the front passenger side

The storage compartment on the front passenger side is lockable and illuminated.*

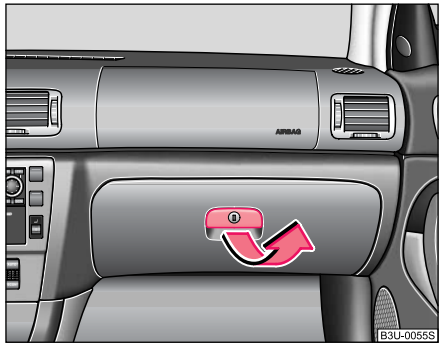


Fig. 86 Dash panel: Storage compartment

Opening the storage compartment

– Pull the handle in the lid in direction of arrow ⇒ fig. 86 and pull the lid down.

Closing the storage compartment

– Raise the lid and press it until the catch is heard to engage.

Locking the storage compartment*

– Turn the master key or emergency key in the lock to the right.

Unlocking the storage compartment*

– Turn the master key or emergency key in the lock to the left.

Two holders for placing drink cans are located on the inside of the lid.

WARNING

- **The storage compartment must always be closed when driving for safety reasons.**
- **The drinks can holder should not be used while driving.**

Cooling of storage compartment on front passenger side

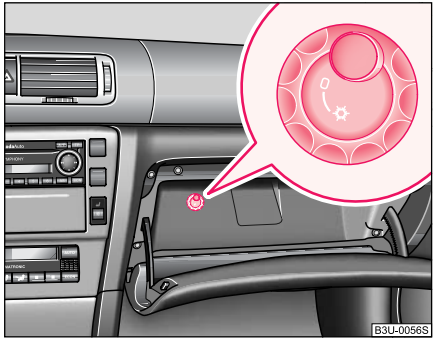


Fig. 87 Storage compartment: Control dial for the cooling system

– You can switch the cooling system on or off using the control dial ⇒ fig. 87.

The cooling of the storage compartment operates only if the air conditioning system is switched on. We recommend that you switch off the cooling (opening concealed) if it is operating in the heating mode or if you are not using the cooling system for the storage compartment.

Storage drawer*



Fig. 88 Dash panel: Storage drawer

– Press in the middle of the storage compartment ⇒ fig. 88 and the storage compartment will come out.

WARNING

- **The storage compartment is not a substitute for the ashtray and must also not be used for such purposes. Risk of fire!**
- **The storage compartment must always be closed when driving for safety reasons.**

Stowage compartment in centre console

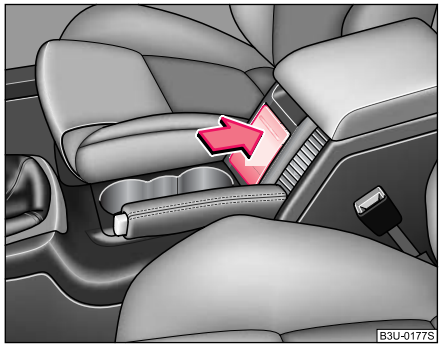


Fig. 89 Centre console: Storage compartment

Opening

– Press on the top part of the cover in direction of arrow. The drawer will come out.

Pulling out compartment

– Press the compartment in the opening direction as far as the stop. Grasp the compartment at the sides and pull it up and out.

Inserting compartment

– Insert the compartment back into its mount and close the cover.

WARNING

- **The storage compartment is not a substitute for the ashtray and must also not be used for such purposes. Risk of fire!**
- **The storage compartment must always be closed when driving for safety reasons.**

Stowage compartment for spectacles*

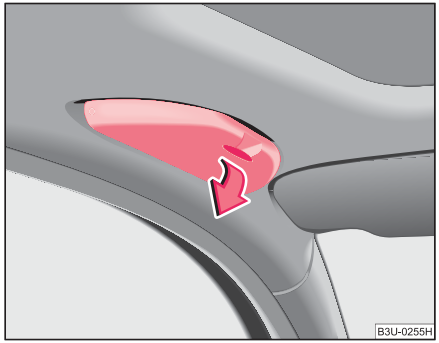


Fig. 90 Stowage compartment for spectacles

The stowage compartment is located above the front left window.

– The storage compartment is opened by folding it out in the direction of the arrow ⇒ fig. 90.

WARNING

The storage compartment must always be closed when driving for safety reasons.

Stowage compartment below steering wheel

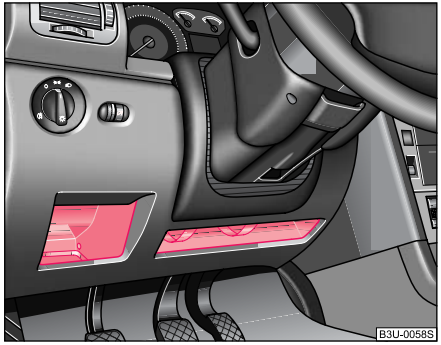


Fig. 91 Dash panel: Stowage compartments below steering wheel

You can use this stowage compartment, for example, for inserting the car documentation.

Stowage compartment in door panel

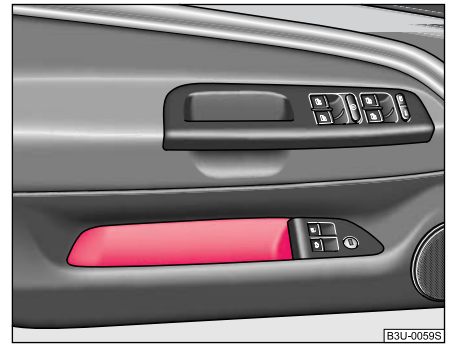


Fig. 92 Stowage compartment in door panel

WARNING

Use the stowage compartments in the door panels only for small items which do not project out of the compartment in order to avoid any interference with the proper operation of the side airbags.

Stowage compartment for an umbrella*

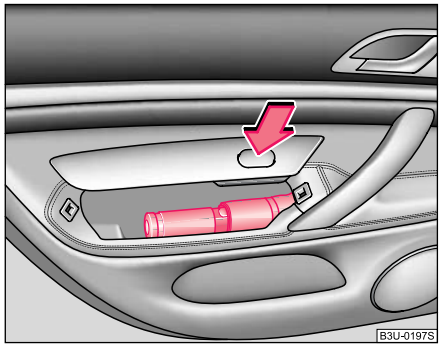


Fig. 93 Left rear door: Storage compartment

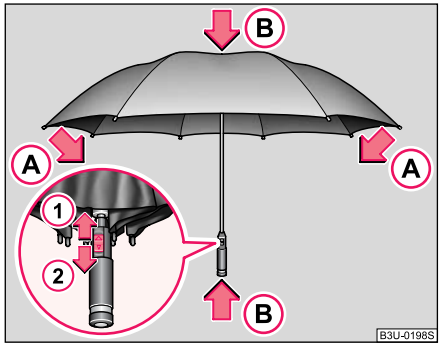


Fig. 94 Opening and closing umbrella

The umbrella supplied with the car is stowed in the compartment in the rear left door ⇒ fig. 93.

Opening umbrella

– Press the knob in direction of arrow (1) ⇒ fig. 94.

Closing umbrella

– Press the knob in direction of arrow (2). The umbrella first of all closes partially in direction of arrow (A).

– Press the umbrella together in direction of arrow (B) in order to fold it closed completely.

There is a water drain facility in the stowage compartment for a wet umbrella.

The stowage compartment can also be used for stowing small objects. The compartment features a foldable partition. When the umbrella is removed the rear part of the compartment closes - thus no object can fall inside the door. The partition is automatically folded back in position when the umbrella is again placed in the compartment. ■

Armrest with stowage compartment

You can use the cover of the compartment as an armrest. The armrest is adjustable for height and length.

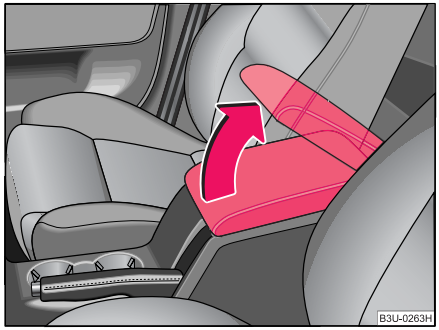


Fig. 95 Armrest between driver and front passenger seat

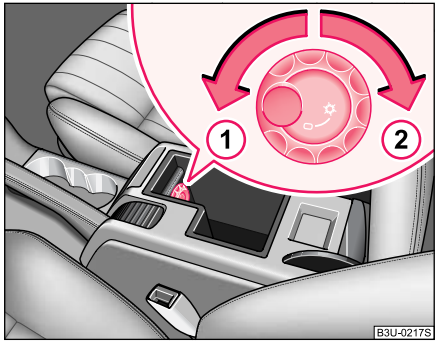


Fig. 96 Storage compartment: Using cooling system

Opening stowage compartment

– Fold out the top cover of the arm rest ⇒ fig. 95.

Opening cooling air inlet in stowage compartment*

– Turn the rotary switch to the left as far as the end position (1) ⇒ fig. 96.

Closing cooling air inlet in stowage compartment*

– Turn the rotary switch to the right as far as the end position (2).

The cooling air flows into the stowage compartment only when the air conditioning is in the cooling mode. If the air conditioning is operating in the heating mode or if you do not wish to use the cooling system of the stowage compartment, you can close the cooling air inlet.

Note

If the armrest is pulled forward, ensure that it does not restrict you when steering the car. ■

Rear armrest with stowage compartment*

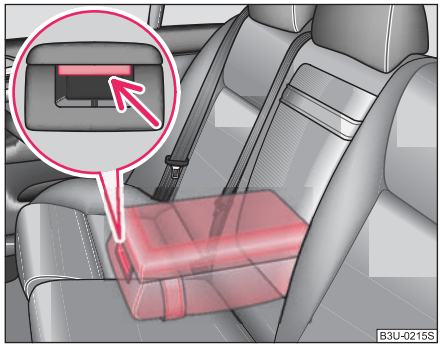


Fig. 97 Armrest of rear seats:

– You can fold down the armrest to enhance occupant comfort.

The armrest includes a stowage compartment. You open the compartment by pressing the button on the front side of the armrest and raising the cover. A drinks can holder* ⇒ page 90 and the operation control for the electrical passenger seat* ⇒ page 75are located in the armrest. ■

Clothes hooks

You will find a clothes hook above each of the rear doors.

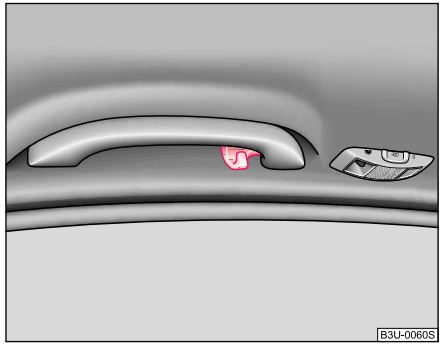


Fig. 98 Area above rear doors: Clothes hooks

WARNING

- **Ensure that any clothes hanging from the hooks do not impair your vision to the rear.**
- **Use the hooks for hanging only light items of clothing and ensure that there are no heavy or sharp-edged objects in the pockets.**
- **Do not use clothes hangers for hanging up items of clothing otherwise this will interfere with the protection offered by the head airbag*.**

■

Heating and air conditioning system

The air conditioning system

Description

The air conditioning system is a combined cooling and heating system. It makes it possible to optimally control the air temperature at any season of the year.

Description of the air conditioning system

It is important for your safety and for your driving comfort that the air conditioning system is operating properly.

The air conditioning system operates when switch AC ⇒ page 103, fig. 99 E is pressed and the following conditions are met:

- engine running
- outside temperature above +5 °C
- blower switch switched on (positions 1 to 4)

If the air conditioning system is switched on, the temperature and air humidity drops in the vehicle. The wellbeing of the occupants of the car is enhanced as a result of this particularly at high outside temperatures and a high air humidity. The system prevents the windows misting up during the cold season of the year.

The heating effect is dependent upon the coolant temperature, thus full heat output only occurs when the engine has reached its operating temperature.

It is possible to briefly activate recirculated air mode in order to enhance the cooling effect ⇒ ⚠.

Air at a temperature of about 5°C may flow out of the vents under certain circumstances when the air conditioning system is operating. Lengthy and uneven distribution of the air flow out of the vents (in particular at the leg area) and large differences in temperature, for example when getting out of the vehicle, can result in chills in sensitive persons.

The air inlet in front of the windscreen must be free of ice, snow or leaves in order to ensure that the heating and ventilation systems operate properly.

After switching on the air conditioning **Condensation** from the evaporator of the air conditioning may drip down and form a puddle below the vehicle. This is quite normal and not an indication of a leak!

Aeration of the vehicle when ignition is switched off*

On models fitted with power sliding/tilting roof with sollar cells, the fresh air blower is automatically switched over to “solar mode ” if the sun ray's are sufficient after switching off the ignition. The solar cells on the sliding/tilting roof deliver power for the fresh air blower. This supplies the interior of the car with fresh air.

For an optimum ventilation, the air outlet vents **3** and **4** must be opened ⇒ page 106.

The ventilation functions only when the sliding/tilting roof is closed.

⚠ WARNING

- **For your own safety and that of other road users, ensure that all the windows are free of ice, snow and misting. Please familiarize yourself about how to correctly operate the heating and ventilation systems, how to demist and defrost the windows, as well as with the cooling mode.** ▶

WARNING (continued)

- **You should not leave recirculated air mode on over a longer period of time. “Stale air” may result in fatigue in the driver and passengers, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases. Switch recirculated air mode off as soon as the windows begin misting up.**

Note

We recommend that you do not smoke in the vehicle when the recirculating air mode is operating since the smoke which is drawn at the evaporator from the interior of the vehicle forms deposits in the evaporator of the air conditioning system. This produces a permanent odour when the air conditioning system is operating which can only be eliminated through considerable effort and expense (replacement of compressor). ■

Using the system

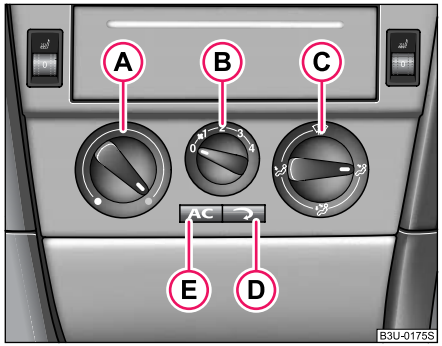


Fig. 99 The air conditioning system: Controls

Setting temperature

– Turn the control dial (A) ⇒ fig. 99 to the right in order to increase the temperature.

– Turn the control dial (A) to the left in order to increase the temperature.

Controlling blower

– Turn the blower switch (B) into one of the positions, 1 to 4, in order to switch the blower on.

– Turn the blower switch (B) into position 0 in order to switch the blower off.

– Pressing switch (D) causes the recirculating air system ⇒ page 105 to be switched on.

Control for air distribution

– You can adjust the direction of the inlet air flow ⇒ page 106 using air distribution regulator (C).

Switching air conditioning on/off

– Press the switch AC (E). The symbol **AC** in the switch comes on.

– When you again press the switch AC, the air conditioning system is switched off. The symbol **AC** in the button is no longer illuminated.

Note

- If the windscreen is misted up, turn the air distributor regulator (C) into position. It is not possible to operate the recirculated air mode, however, in this position.
- The whole heat output will be needed to unfrost the windscreen and side windows. No warm air will be fed to the footwell. This can lead to restriction of the heating comfort.
- If the air conditioning system has not been switched on for a lengthy period, odours may be produced at the evaporator because of deposits. Switch the air conditioning system on at least once a month for approximately 5 minutes at the highest blower stage - also during the cold season of the year - in order to remove such odours. Also open a window for a short time.
- Please refer to the information regarding recirculated air mode ⇒ page 105. ■

Setting air conditioning system

Recommended settings of air conditioning controls:

Defrosting the windscreen and side windows

- Turn control dial (A) ⇒ page 103, fig. 99 to the right up to the stop
- Blower switch (B) in position **4**
- Turn the air distribution control (C) into the position
- Close the air outlet vents **3**
- Open air outlet vents **4** ⇒ page 106, fig. 100 and point towards the side window.

Keeping winscreen demisted

We recommend that you use the following setting in cases where the windows are misted up more than usual (e.g. when it is raining):

- Blower switch (B) in position **2**
- Turn the air distribution control (C) into the position between and
- Close the air outlet vents **3**
- Open air outlet vents **4** and point towards the side window
- Switch on the air conditioning system using switch AC (E)

Warming up the inside of the vehicle as rapidly as possible

- Turn control dial (A) to the right up to the stop
- Blower switch (B) in position **3** or **4**
- Turn the air distribution control (C) into the position
- Open air outlet vents **3** and **4**
- we recommend that you press the switch (D) - recirculated air mode - for a short time

Heating the vehicle to a comfortable temperature

We recommend the following setting once the windows are no longer misted up and the desired teperature has been reached:

- Control dial (A) at the desired heat output
- Blower switch (B) in position **1** or **2**
- Turn the air distribution control (C) into the position
- Close the air outlet vents **3**
- Open the air outlet vents **4**
- Set the air distribution regulator (C) between positions and , if the windscreen gets misted up again, as required.

Cooling down the inside of the vehicle as rapidly as possible

- Turn the control dial (A) to the left up to the stop
- Blower switch (B) in position **3** or **4**

- Turn the air distribution control Ⓒ into the position
- Open the air outlet vents **3** and **4**
- Switch on the air conditioning system using switch AC Ⓔ
- we recommend that you press the switch Ⓓ - recirculated air mode - for a short time

Optimum cooling

- Turn the control dial Ⓐ to the left up to the stop and the temperature can then be increased by turning the regulator to the right according to the prevailing conditions
- Blower switch Ⓑ in position **1**, **2**, or **3**
- Turn the air distribution control Ⓒ into the position
- Open the air outlet vents **3** and **4**
- Switch on the air conditioning system using switch AC Ⓔ

Fresh air mode (ventilation)

- Turn the control dial Ⓐ ⇒ page 103, fig. 99 to the left up to the stop
- Blower switch Ⓑ at least in position **1**
- Turn the air distribution control Ⓒ into the position
- Open air outlet vents **3** and **4** ⇒ page 106, fig. 100

Fresh air is also supplied to the rear footwell if you select air outlet vents **5** with the aid of the air distribution control Ⓒ. ■

Recirculated air mode

In recirculated air mode air is sucked out of the interior of the vehicle and then fed back into the interior.

Recirculated air mode prevents polluted air outside the vehicle from getting into the vehicle, for example when driving through a tunnel or when standing in a traffic jam.

Switching recirculated air mode on

– Press switch Ⓓ ⇒ page 103, fig. 99 the switch symbol lights up.

Switching recirculated air mode off

– Press switch Ⓓ again, the switch symbol goes out.

Recirculated air mode is switched off automatically if the air distribution control Ⓒ ⇒ page 103, fig. 99 is in position .

⚠ WARNING

You should not leave recirculated air mode on over a longer period of time. “Stale air” may result in fatigue in the driver and passengers, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases. Switch recirculated air mode off as soon as the windows begin misting up. ■

Air outlet vents

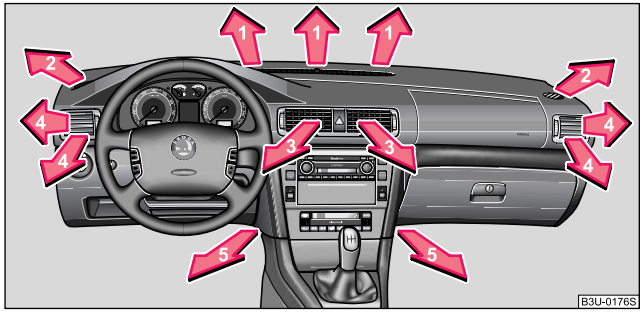


Fig. 100 Air vents at the front

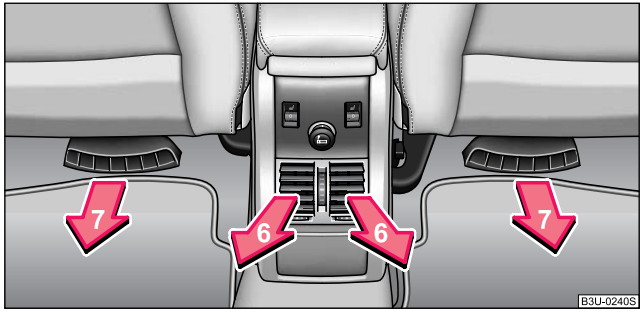


Fig. 101 Air vents at the rear

Open air outlet vents

– Turn the vertical thumbwheel (not when in the end position).

Close air outlet vents

– Turn the vertical thumbwheel into the end position.

Redirecting air flow

– Swivel upward or downward the grille of the vents in order to change the direction of the air flow using the vertically arranged thumbwheel.

– Turn the horizontal thumbwheel on the vent to the right or left in order to change the air flow to the appropriate side.

You can set the air supply to the individual vents with the air distribution control Ⓒ ⇒ page 103, fig. 99. You can also set the vents **3** and **4** ⇒ fig. 100 and **6** ⇒ fig. 101 individually.

Unwarmed or cooled air will flow out of the air outlet vents according to the setting of control dial Ⓐ ⇒ page 103, fig. 99 and the atmospheric conditions.

The rear footwell vents **7** are controlled together with the vents **5**. Turn the air distribution control Ⓒ ⇒ page 103, fig. 99 into the position . ■

Using the air conditioning system economically

The compressor on the air conditioning system uses power from the engine when in cooling mode which will effect the fuel consumption.

It recommended to open the windows or the doors of a vehicle for which the interior has been strongly heated through the effect of direct sunlight in order to allow the heated air to escape.

The air conditioning system should not be switched on while travelling when the window is open.

The desired interior temperature can also be achieved without switching in the air conditioning system just by switching to fresh air mode.

For the sake of the environment

When you economize on fuel, you also reduce pollutant emissions. ■

Operational problems

If the cooling system does not operate at outside temperatures higher than +5°C, there is a problem in the system. The reasons for this may be:

- The fuse of the air conditioning system is defective ⇒ page 241. Check the fuse, replace it if necessary.
- The cooling system has switched off automatically for a short time because the coolant temperature of the engine is too hot.

If you are not able to rectify the operational problem yourself, or if the cooling capacity decreases, switch the air conditioning system off. Please contact your Škoda dealer. ■

Climatronic* (automatic air conditioning)

Description

The Climatronic system is a combination of an automatic heating, fresh air and cooling system which provides optimal comfort for the occupants of the car.

The Climatronic maintains a constant temperature fully automatically, once it has been set. This is achieved by automatically varying the temperature of the outflowing air, the blower stages and the air distribution. It is not necessary to manually alter the settings. The **automatic mode** ⇒ page 109 ensures maximum wellbeing of the occupants at all times of the year.

Description of Climatronic system

The Climatronic can only operate if the following conditions are met.

- engine running
- outside temperature above +5 °C,
- the ECON button is **not** pressed.

If the Climatronic system is switched on, the temperature and air humidity drops in the vehicle. The wellbeing of the occupants of the car is enhanced as a result of this particularly at high outside temperatures and a high air humidity. The system prevents the windows misting up during the cold season of the year.

It is possible to briefly activate recirculated air mode in order to enhance the cooling effect ⇒ ⚠.

The heating effect is dependent upon the coolant temperature, thus full heat output only occurs when the engine has reached its operating temperature.

Puddle of water below car

After switching on the air conditioning **Condensation** from the evaporator of the air conditioning may drip down and form a puddle below the vehicle. This is quite normal and not an indication of a leak!

Switching over from degrees Celsius to degrees Fahrenheit and vice versa

First of all press and hold the button ECON ⇒ page 108, fig. 102 and then press the button AUTO. The temperature measuring unit appears in the display. ▶

An acoustic signal for depressed buttons

Simultaneous pressing of buttons ECON and ⛐ can be used to de-activate or activate this function.

A higher tone is heard when switching on this function, when increasing the blower speed or when increasing the temperature.

A lower tone is heard when switching off this function, when decreasing the blower speed or when decreasing the temperature.

Aeration of the vehicle when ignition is switched off*

On models fitted with power sliding/tilting roof with sollar cells, the fresh air blower is automatically switched over to “solar mode ” if the sun ray's are sufficient after switching off the ignition. The solar cells on the sliding/tilting roof deliver power for the fresh air blower. This supplies the interior of the car with fresh air.

For an optimum ventilation, the air outlet vents **3** and **4** must be opened ⇒ page 112.

The ventilation functions only when the sliding/tilting roof is closed.

WARNING

- **For your own safety and that of other road users, ensure that all the windows are free of ice, snow and misting. Please familiarize yourself about how to correctly operate the heating and ventilation systems, how to demist and defrost the windows, as well as with the cooling mode.**
- **You should not leave recirculated air mode on over a longer period of time. “Stale air” may result in fatigue in the driver and passengers, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases. Switch recirculated air mode off as soon as the windows begin misting up.**

Note

- If the air conditioning system has not been switched on for a lengthy period, odours may be produced at the evaporator because of deposits. Switch the air conditioning system on at least once a month for approximately 5 minutes at the highest blower stage - also during the cold season of the year - in order to remove such odours. Also open a window for a short time.
- We recommend that you do not smoke in the vehicle when the recirculating air mode is operating since the smoke which is drawn at the evaporator from the interior of the vehicle forms deposits in the evaporator of the air conditioning system. This produces a permanent odour when the air conditioning system is operating which can only be eliminated through considerable effort and expense (replacement of compressor).
- Using the air conditioning economically⇒ page 106.
- Operational problems ⇒ page 107. ■

Overview of the controls

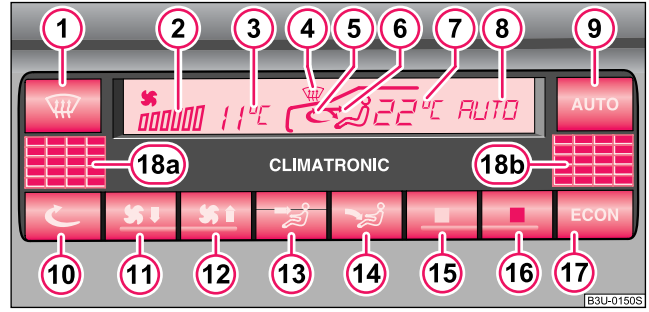


Fig. 102 Climatronic: Controls

The buttons

(1) Defrosting the windscreen

The displays

(2) Display of blower stages
(3) Display of outside temperature, here: **+11 °C**
(4) Defrosting the windscreen
(5) Display for recirculated air mode
(6) Direction of air flow
(7) Display of selected inside temperature, here: **+22 °C**
(8) Display for:
- Automatic mode (**AUTO**) or
- Cooling system switched off (**ECON**) or
- Climatronic switched off (**OFF**)

The buttons

(9) Automatic mode AUTO
(10) Recirculated air mode
(11) Button for:
- Reducing blower speed or
- Switching off Climatronic (**OFF**)

(12) Increasing blower speed button or switching Climatronic on
(13) Air flow button to chest (ventilation mode)
(14) Air flow button to footwell at front and rear (heating mode)
(15) Button for decreasing temperature
(16) Button for increasing temperature
(17) Button for switching off cooling system ECON

The sensor

(18) Interior temperature sensor((18a) on left-hand steering models, (18b) on right-hand steering models)

Buttons (1), (13) and (14) can also be pressed in combination. ■

Automatic mode

The automatic mode is used in order to maintain a constant temperature and to demist the windows in the interior of the car.

Switching automatic mode on

– Set a temperature between +18 °C (64 °F) and +29 °C (86 °F).

– Move the air outlet vents **3** and **4** ⇒ page 112, fig. 103 upwards

– Press the button AUTO.

When the automatic mode is operating, **AUTO** appears in the display. Automatic mode operates only within the control temperature range from +18 °C (17,78 °C) up to +29 °C (30,00 °F). If you select the temperature below +18 °C (17,78 °F), **LO** appears in the display. If you select a temperature higher than +29 °C (30,00 °F), **HI** appears in the display. In both limit positions the Climatronic operates at maximum cooling or heating capacity, respectively. The temperature is not controlled in this case.

If you press when the automatic mode is operating a desired button (except buttons **15** and **16**), the automatic mode is switched off. ■

ECON mode

The cooling system is switched off in the ECON mode - heating and ventilation are regulated automatically.

Switching ECON mode on

– Press the button ECON.

– Set a temperature between +18 °C (64 °F) and +29 °C (86 °F).

Recirculated air mode in ECON mode

– Press the button [⟲].

– After this, press the button [ECON].

When the ECON mode is operating, **ECON** appears in the display. ECON mode operates only within the control temperature range from +18 °C (17,78 °C) up to +29 °C (30,00 °C).

Once a temperature has been set, it is maintained constant fully automatically. This is achieved by automatically varying the temperature of the outflowing air, the blower stages and the air distribution. The system also takes into account bright sunlight which eliminates the need to alter the settings manually.

The ECON mode is switched off when pressing button [❄], [⟲] or [AUTO].

Please note that, in the ECON mode, the interior temperature cannot be lower than the outside temperature. The interior is not cooled and the air is not dehumidified.

If you select the temperature below +18 °C (17,78 °C), **LO** appears in the display. If you select a temperature higher than +29 °C (30,00 °C), **HI** appears in the display. In the position **LO** the recirculated air is not warmed up. In the **HI** position, the system operates continuously with maximum heating capacity.

Please refer to the information regarding recirculated air mode ⇒ page 110. ■

Recirculated air mode

In recirculated air mode air is sucked out of the interior of the vehicle and then fed back into the interior.

Recirculated air mode prevents polluted air outside the vehicle from getting into the vehicle, for example when driving through a tunnel or when standing in a traffic jam.

Switching recirculated air mode on

– Press button [⟲], the symbol ⟲ lights up on the display.

Switching recirculated air mode off

– Once again press the button [⟲] or the button [AUTO], the symbol ⟲ goes out on the display.

⚠ WARNING

You should not leave recirculated air mode on over a longer period of time. “Stale air” may result in fatigue in the driver and passengers, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases. Switch recirculated air mode off as soon as the windows begin misting up.

Note

If the windscreen is misted up, first of all press the button [AUTO] and then the button [❄]. After the windscreen has been demisted, once again press the button [AUTO]. ■

Setting temperature

– Press the button (15) or (16) ⇒ page 108, fig. 102 and continue pressing until the desired temperature is set.

You can set the interior temperature between +18°C (64°F) and +29°C (86°F). The interior temperature is regulated automatically within this range. If you select the temperature below 18 °C (64 °F), “LO” appears in the display. If you select the temperature higher than 29°C (86°F), “ HI” appears in the display. In both limit positions the Climatronic operates at maximum cooling or heating capacity, respectively. The temperature is not controlled in this case.

Lengthy and uneven distribution of the air flow out of the vents (in particular at the leg area) and large differences in temperature, for example when getting out of the vehicle, can result in chills in sensitive persons.

Controlling blower

There are a total of seven blower stages available.

The Climatronic system controls the blower stages automatically in line with the interior temperature. You can also, however, adapt the blower stages manually to suit your particular needs.

Setting blower stages

– Press the button [fan] or the button [fan] to set the blower stage.

The number of dashes in the display (2) ⇒ page 108, fig. 102 indicates the blower stage.

If **OFF** is shown in the display, this indicates that the Climatronic system is switched off ⇒ page 112.

WARNING

- **“Stale air” may result in fatigue in the driver and passengers, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases.**
- **Do not switch the Climatronic system off for longer than necessary.**
- **Switch the Climatronic system on as soon as the windows mist up.**

Air outlet vents

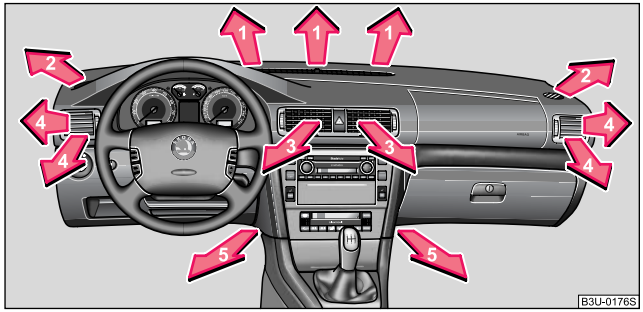


Fig. 103 Air vents at the front

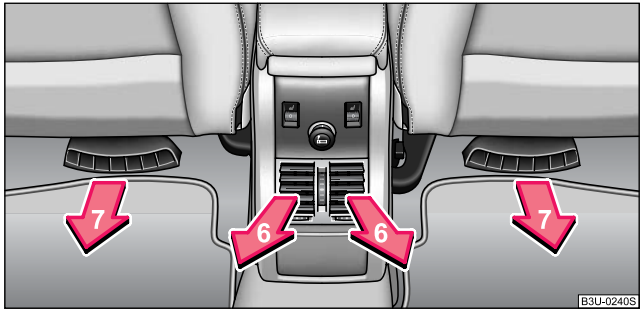


Fig. 104 Air vents at the rear

You can also set the vents **3** and **4** ⇒ fig. 103 and **6** ⇒ fig. 104 individually.

Open air outlet vents

– Turn the vertical thumbwheel (not when in the end position).

Close air outlet vents

– Turn the vertical thumbwheel into the end position.

Redirecting air flow

– Swivel upward or downward the grille of the vents in order to change the direction of the air flow using the vertically arranged thumbwheel.

– Turn the horizontal thumbwheel on the vent to the right or left in order to change the air flow to the appropriate side. ■

Switching Climatronic system off

If the symbols in the display flash for about 15 seconds after the ignition is switched on, switch the Climatronic system off as this indicates an operational fault.

– Continue pressing the button until **OFF is shown in the display** ⇒ ⚠.

– Drive to the nearest Škoda Dealer and have the Climatronic system checked.

WARNING

- **If the Climatronic system is switched off (OFF), there is no supply of fresh air from the outside. “Stale air” may result in fatigue in the driver and passengers, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases.**
- **Do not switch the Climatronic system off for longer than necessary.**

Starting-off and Driving

Setting steering wheel position

You can set the height and the forward/back position of the steering wheel to the desired position.

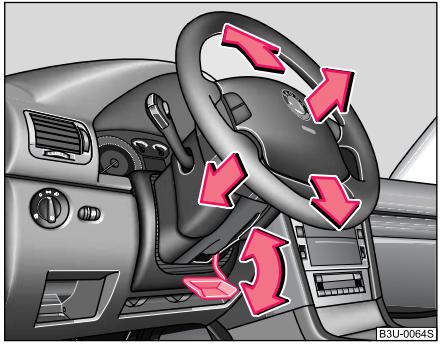


Fig. 105 Lever below steering column

– Adjust the driver seat ⇒ page 69.

– Pull the lever below the steering column ⇒ fig. 105 down ⇒ ⚠.

– Set the steering wheel to the desired position (concerning height and forward/back position).

– Then push the lever up against the steering column until it locks into place.

⚠ WARNING

- **Adjust the steering wheel only when the car is stationary.**
- **For safety reasons the lever must always be firmly pushed up to avoid the steering wheel altering its position unintentionally when driving - risk of accident!**

Ignition lock

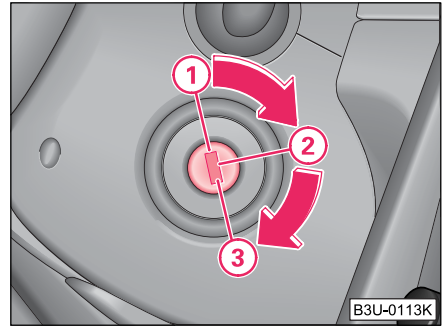


Fig. 106 Ignition lock positions

Petrol engines

① - ignition switched off, engine off

② - ignition switched on

③ - start engine

Diesel engines

① - fuel supply interrupted, ignition switched off, engine off

② - heating glow plugs on, ignition switched on

- You should not switch on any major electrical components during the heating period otherwise the vehicle battery will be drained unnecessarily.

③ - start engine

Applies to all models:

Position ①

To **lock the steering**, with the ignition key withdrawn, turn the steering wheel until the steering locking pin is heard to engage. You should always lock the steering as a general rule if you leave your vehicle. This acts as a deterrent against possible theft of your vehicle ⇒ ⚠.

Position ②

Move the steering wheel back and forward a little if the ignition key cannot, or cannot easily be turned into this position, in order to release the steering lock.

Position ③

The engine is started in this position. At the same time switched on low beam or main beam or other electrical components with major power consumption are briefly switched off. The ignition key moves back into position ② when one releases the key.

The ignition key must be turned back into position ① each time before starting the engine again. The starter repeat lock in the ignition lock prevents the starter being engaged when the engine is running and thus getting damaged.

Ignition key withdrawal lock (automatic gearbox)

You can only withdraw the ignition key after switching off the ignition if the selector lever is in position **P**.

⚠ WARNING

- **When driving, the ignition key must always be in the position ② (ignition switched on) without the engine running. This position is indicated by the warning lights coming on. If this is not the case, it could result in unexpected locking of the steering wheel - risk of accident!**
- **Only remove the ignition key from the ignition lock when the vehicle has come to a standstill (put on the handbrake or select the selector lever position P). The steering lock might otherwise engage unintentionally - risk of accident!**
- **Always withdraw the ignition key if you are going to leave the vehicle, even for a short time. This is particularly important if children are left in the vehicle. The children might otherwise start the engine or operate electrical equipment (e.g. power windows) - risk of injury!**

Starting engine

General

You can only start the engine only using an original ignition key.

- Place the gearshift lever into neutral (or place the selector lever to the position **P** or **N** in the case of an automatic gearbox) and put on the handbrake firmly before starting the engine.

- The clutch pedal should be fully depressed when starting the engine which means that the starter only has to crank the engine.
- Let go of the key as soon as the engine starts otherwise there may be damage to the starter.

The engine running noises may louder at first be louder for a short time after starting the cold engine until oil pressure can be built up in the hydraulic valve clearance compensation. This is quite normal and is not an operating problem.

If the engine does not start ...

You can use the battery of another vehicle as a jump-start aid ⇒ page 236.

It is only possible to tow-start vehicles fitted with a manual gearbox. The tow-starting distance must not be more than 50 metres ⇒ page 238.

WARNING

There is the danger of poisoning if the engine is left running in an enclosed space!

Caution

- Avoid high engine revolutions, full throttle and high engine loads as long as the engine has not yet reached its normal operating temperature - risk of damaging the engine!
- Do not allow the engine to idle for long periods. If vehicle is stationary, there is not sufficient air flowing through the cooler. In certain specific situations it can happen that the engine overheats - risk of engine damage!
- Vehicles which are fitted with an exhaust gas catalytic converter should not be tow-started over a distance of more than 50 metres.

For the sake of the environment

Never warm up the engine when the vehicle is standing. Drive off right away. This enables you to avoid unnecessary pollutant emissions. ■

Petrol engine

These engines are fitted with a starter system which selects the correct fuel/air mixture for every external air temperature.

- Do not operate accelerator before and when starting engine.
- Interrupt the attempt at starting after 10 seconds if the engine does not start right awayand wait for about 30 seconds before repeating the attempt.
- It is possible that the fuse on the electrical fuel pump is defect if the engine still does not start ⇒ page 241.
- Contact the nearest Škoda dealer to obtain professional assistance.

It may be necessary, if the engine is **very hot**, to slightly depress the accelerator after the engine has started. ■

Diesel engine

Glow plug system

Diesel engines are equipped with a glow plug system, the preglow period being controlled automatically in line with the coolant temperature and outside temperature.

The preglow indicator light comes on after the ignition has been switched on.

You should not switch on any major electrical components during the heating period otherwise the vehicle battery will be drained unnecessarily.

- You should start the engine immediately after the glow plug warning light ᔓ has gone out.
- The glow plug warning light will come on for about one second if the engine is at a normal operating temperature or if the outside temperature is above +5°C. This means that you can start the engine **right away**.
- Interrupt the attempt at starting after 10 seconds if the engine does not start right awayand wait for about 30 seconds before repeating the attempt.
- It is possible that the fuse on the diesel preglow system is defect if the engine still does not start ⇒ page 241.
- Contact the nearest Škoda dealer to obtain professional assistance.

Starting the engine after the fuel tank has run dry

It may take longer than normal to start the engine after refuelling if the fuel tank has run completely dry - up to one minute. This is because the fuel system must first of all be filled while the attempting to start the engine. ■

Switching the engine off

– Turn the ignition key into position ① ⇒ page 114.

Caution

you should not switch the engine off right away at the end of your journey after the engine has been operated for a lengthy period at high loads but should be allowed it to run at idling speed for about 2 minutes. This prevents any accumulation of heat when the engine is switched off.

Note

- The radiator fan may continue running for a further 10 minutes or so after the engine and the ignition have been switched off. The coolant fan may, however, also switch on again after some time if the coolant temperature rises because of an accumulation of heat in the engine or if the engine is warm and the engine compartment is additionally heated by strong sunlight.
- This is why particular care is required when carrying out any work in the engine compartment ⇒ page 203. ■

Shifting gears

The shift pattern

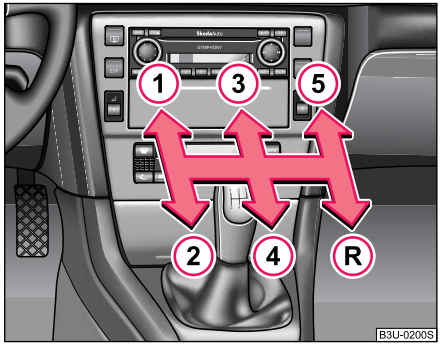


Fig. 107 Shift pattern on models fitted with 5-speed manual gearbox

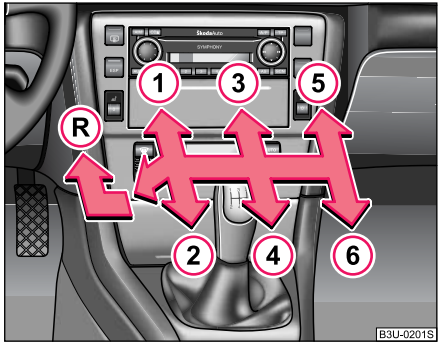


Fig. 108 Shift pattern on models fitted with 6-speed manual gearbox

Shift into reverse only when the car is stationary. Depress the clutch pedal and hold it fully depressed. Wait a moment before engaging reverse gear in order to avoid any shift noises.

The reversing lights will come on once reverse gear is engaged, provided the ignition is on.

Note

One should not lay the hand on the shift lever while driving the vehicle. The pressure of the hand will be transferred to the gearshift forks in the gearbox. This can, over a period of time, lead to early wear of the gearshift forks. ■

Handbrake

Handbrake

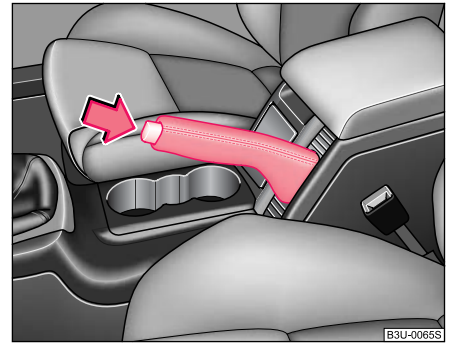


Fig. 109 Centre console: Handbrake

Applying the handbrake

– Pull the handbrake lever up fully.

Releasing the handbrake

– Pull the handbrake lever up slightly **and at the same time** press in the locking button ⇒ page 118, fig. 109.

– Hold the button pressed and push the handbrake lever down fully ⇒ ⚠.

The handbrake warning light (!) lights up when the handbrake is applied, provided the ignition is on.

A warning signal (buzzer) sounds and the following text appears in the display* if you have inadvertently driven off with the handbrake applied:

"Handbrake on"

The handbrake warning is activated if you drive at a speed of more than 5 km/h for more than 3 seconds.

⚠ WARNING

- **Please note that the handbrake must be fully released. A handbrake which is only partially released can result in the rear brakes overheating which will have a negative effect on the operation of the brake system - risk of accident!**
- **Never leave children unattended in the vehicle. The children might, for example, release the handbrake or take the vehicle out of gear. The vehicle might then move off - risk of accident!**

(!) Caution

After the car has come to a stop, always first of all apply the handbrake firmly before then additionally engaging a gear (manual gearbox) or moving the selector lever into position **P** (automatic gearbox). ■

Parking aid*

The parking aid provides a warning of obstacles behind the vehicle.

The audible parking aid at the rear determines the distance to an obstacle behind the car with the aid of ultrasound sensors. The sensors are integrated in the rear bumper.

The parking aid is activated automatically when **reverse gear** is engaged and the ignition is turned on. This is confirmed by a brief signal.

The clearance warning begins at a distance of about 160 cm from the obstacle. The interval between the warning signals becomes shorter as the clearance is reduced.

A continuous tone sounds from a clearance of just 30 cm - danger area. You should not reverse any further after this signal sounds.

⚠ WARNING

- **The parking aid is not a substitute for the driver paying proper attention. It is always the driver's responsibility to take care when parking the vehicle or carrying out similar manoeuvres.** ▶

WARNING (continued)

- **You should therefore satisfy yourself, before reversing, that there is no small obstacle, such as a rock, thin post, trailer drawbar etc., behind your vehicle. Such an obstacle might not be within the range detected by the sensors.**

Note

- The parking aid does not operate if you are towing a trailer (applies to models which feature a factory-fitted towing device*).
- A system fault is indicated if a warning signal sounds for about 5 seconds after switching the ignition on and engaging reverse gear and there is no obstacle close to your vehicle. Have the fault rectified by a Škoda dealer.
- The sensors must be kept clean and free of ice to enable the parking aid to operate properly. ■

Cruise control system (CCS)*

Introduction

The cruise control system makes it possible for the driver to maintain a constant speed of his choosing from a speed of 30 km/h (20 mph) or higher. This, of course, is only possible within the range which is permitted by the power output and braking power of the engine. Using the cruise control system - particularly on long journeys - makes it possible for you to rest your “accelerator foot”.

WARNING

For safety reasons the cruise control system must not be used in dense traffic or on difficult road surfaces (such as road chips, or slippery roads) - risk of accident!

Caution

Models fitted with a manual gearbox: Always depress the clutch pedal if you switch on the cruise control system when the gearbox is in Neutral. The engine will rev up and may even be damaged under certain circumstances.

Note

- The cruise control system is not able to maintain a constant speed when driving on steep downhill sections. The weight of the vehicle increases the speed at which it travels. One should shift down in good time to a lower gear or slow the vehicle down by applying the foot brake.
- It is not possible on vehicles fitted with an automatic gearbox to switch on the cruise control system if the selector lever is in the position **P**, **N**, **R** or **2**. ■

Storing a speed

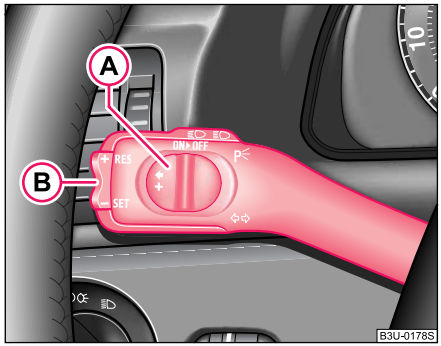


Fig. 110 Operating lever: Pushbutton and slide switch on the cruise control system

– Move the slide switch (A) ⇒ fig. 110 into the **ON** position.

– After the desired speed has been reached, press the press button (B) into the **SET** position.

After you have pressed press button (B) into the **SET** position, the speed you have just selected is maintained at a constant speed without having to depress the accelerator.

You can **increase** the speed by depressing the accelerator. Releasing the accelerator will cause the speed to **drop** again to the set speed.

This does not apply, however, if you drive at a speed which is more than 10 km/h higher than the set speed for a period of more than 5 minutes. The stored speed will be cancelled in the memory. You then have to re-store the desired speed.

One can **reduce** the speed in the usual manner. The system is switched off temporarily by actuating the brake or clutch pedal - ⇒ page 122.

WARNING

First ensure that it is not too high for the traffic conditions which exist at that moment before resuming the stored speed.

Changing a stored speed

You can also change the speed of the vehicle without depressing the accelerator.

Faster

– You can **increase** the stored speed without depressing the accelerator, by pressing the function selector switch (B) ⇒ fig. 110 into the **RES** (RES) position.

– The speed of the car will increase continuously if you hold the pushbutton pressed in the **RES** (RES) position. Release the slide switch once the vehicle has reached the desired speed. The set speed is then stored in the memory.

Slower

– You can **reduce** the stored speed by pressing button (B) in the **SET** position.

– Holding down the pushbutton pressed in the **SET** position will cause the speed of the vehicle to reduce continuously. Once the car has reached the desired speed, release the button. The set speed is then stored in the memory.

– If you release the pushbutton when the vehicle is travelling at a speed of less than 30 km/h, the speed is not stored and the memory is erased. It is then necessary to again store the speed with the pushbutton (B) in the position **SET** after an increase in speed of the vehicle to more than 30 km/hour. ■

Switching cruise control system off temporarily

– You can **switch off** the cruise control system temporarily by **depressing** the brake pedal or clutch pedal, on models with automatic gearbox and only with brake pedal.

– You can likewise switch off the cruise control system by pushing the switch (A) ⇒ page 121, fig. 110 to the right into the intermediate position before the position **OFF**. The slide switch then moves back automatically into the **ON** position.

The set speed remains stored in the memory.

The **Resumption** of the stored speed is achieved by releasing the brake or clutch pedal, on vehicles fitted with automatic gearbox only after releasing the brake pedal and after shortly pressing the pushbutton (B) ⇒ page 121, fig. 110 into the position **RES**.

WARNING

First ensure that it is not too high for the traffic conditions which exist at that moment before resuming the stored speed. ■

Switching off the cruise control system completely

– Move the slide switch (A) ⇒ page 121, fig. 110 up to the stop into the **OFF** position. ■

Automatic gearbox*

5-speed automatic gearbox

Information for driving with an automatic gearbox

Shifting up and down through the gears is performed automatically.

You can also, however, switch the gearbox over into the **Tiptronic mode**. This mode makes it possible for you to also shift gears manually if you so wish ⇒ page 128.

Starting-off and Driving

– Depress the brake pedal and hold it depressed.

– Press the Shiftlock button (button in handle of the selector lever), move the selector lever into the desired position, e.g. **D** ⇒ page 124, and then release the Shiftlock button.

– Wait a moment until the gearbox has shifted (a slight engagement nudge can be felt).

– Release the brake pedal and depress the accelerator ⇒ ⚠.

Stopping for a short time

– The selector lever position **N** does not have to be selected when stopping just for a short time, such as at a cross roads. It is sufficient to hold the vehicle stationary using the foot brake. The engine can, however, be allowed just to idle.

Parking

– Depress the brake pedal and hold it depressed.

– Apply the handbrake firmly.

– Press and Shiftlock button in the selector lever, move the selector lever to **P** and then release the Shiftlock button.

The engine can only be **started** when the selector lever is in position **P** or **N** ⇒ page 115.

It is sufficient to engage selector lever position **P** when parking on a flat surface. When parking on a slope you should first apply the handbrake firmly and then move the selector lever into position P. This is to ensure that there is no excessive pressure acting on the lock mechanism and that it is easier to subsequently move the selector lever out of position **P**.

If the selector lever position **N** is selected by accident while driving it is first necessary to release pressure on the accelerator pedal and wait for idling speed of the engine to be reached before engaging a drive position in the selector lever.

⚠ WARNING

- **Do not depress the accelerator when changing the position of the selector lever if the car is stationary and the engine is running - risk of accident!**
- **Never move the selector lever into position R or P when driving - risk of an accident!** ▶

⚠ WARNING (continued)

- **When the engine is running and the vehicle is stationary, it is necessary to hold the car with the brake pedal in all the positions of the selector lever (except P and N) since the power transmission is never completely interrupted, also not when the engine is idling - the vehicle "creeps".**

Selector lever positions

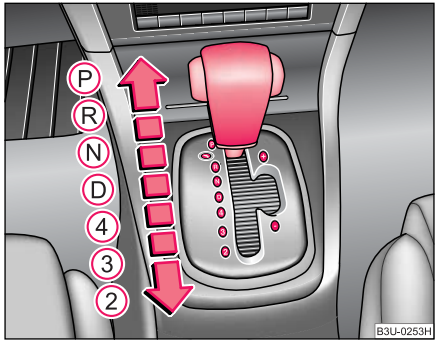


Fig. 111 Selector lever

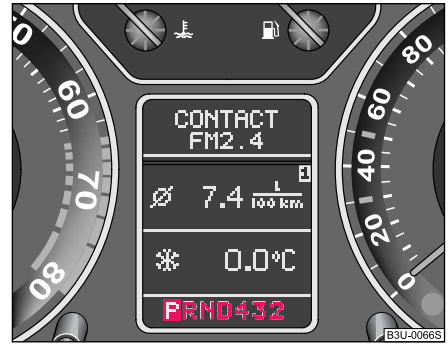


Fig. 112 Information display: Selector lever positions

The selector lever position you have engaged is shown in the information display of the instrument cluster with the corresponding gear symbol highlighted ⇒ fig. 112.

P - Parklock

The driven wheels are locked mechanically in this position.

The Parklock must only be engaged when the vehicle is stationary ⇒ ⚠.

If you wish to move the selector lever into or out of this position, you must press the Shiftlock button in the handle of the selector lever and at the same time depress the brake pedal.

R - Reverse

Reverse gear must only be engaged when the vehicle is stationary and the engine idling ⇒ ⚠.

The brake pedal must be depressed and at the same time the Shiftlock must be pressed, if you wish to obtain the selector lever positions **R**, **P** or **N**.

The reversing lights come on when the selector lever is moved into position **R** when the ignition is also on.

N - Neutral

The transmission is in Neutral in this position.

The brake pedal must be depressed and the Shiftlock in the selector lever grip must be pressed (if the selector lever is in its position for longer than 2 seconds) in order to move the selector lever out of the **N** position, with the ignition switched on, on a vehicle travelling at less than 5 km/hour or on a stationary vehicle.

D - Drive, position for driving forward

When the selector lever is in this position, the forward gears are shifted up and down automatically in line with engine load, vehicle speed and the dynamic shift programme (DSP).

You must depress the brake pedal ⇒ ⚠ if you wish to move the selector lever into position **D** from **N** when the vehicle is travelling at less than 5 km/hour or is stationary.

In certain circumstances (e.g. when driving in mountainous regions or when towing a trailer) it may be beneficial to select the manual shift programme ⇒ page 128 for a short time in order to adapt the gearbox ratios manually to the driving situations.

4 - Position when driving in hilly areas

We recommend this position if driving with the selector lever in position **D** would, in certain circumstances, result in the gearbox frequently shifting between fourth and fifth gears.

The gearbox then shifts up and down automatically into the first, second, third and fourth gears in line with engine load and vehicle speed. Fifth gear is not engaged in this case. This makes it possible to exploit greater engine braking power when the accelerator is released ⇒ ⚠.

The Shiftlock on the selector lever grip must be pressed when moving out of position **4** into position **D**.

3 - Position when driving in mountainous regions

This position of the selector lever is suitable for long sloping sections.

The gearbox shifts up and down automatically into first, second and third gear in line with engine load and vehicle speed. The fourth and fifth gears remain locked out in order to avoid unnecessary gear changes. Enhanced engine braking power is thus available.

The Shiftlock on the selector lever grip must be pressed when moving out of position **4** into position **3**.

2 - Position for extreme mountainous sections

This position of selector lever is suitable for very steep downhill sections.

The gearbox shifts up and down automatically into first and second gear in line with engine load and vehicle speed. Third, fourth and fifth gears are not engaged. This position offers you the maximum possible engine braking power.

The Shiftlock on the selector lever grip must be pressed when moving out of position **2** into position **3**.

The cruise control system is locked in position **2**.

⚠ WARNING

- **Never move the selector lever into position R or P when driving - risk of an accident!**
- **When the engine is running and the vehicle is stationary, it is necessary to hold the car with the brake pedal in all the positions of the selector lever (except P and N) since the power transmission is never completely interrupted, also not when the engine is idling - the vehicle "creeps".** ▶

⚠ WARNING (continued)

- **You must on no account unintentionally operate the throttle (e.g. by hand from the engine compartment) if a drive position is engaged when the car is stationary. The vehicle would otherwise immediately start off - also when the handbrake is firmly applied - risk of an accident!**
- **You must move the selector lever into position P and firmly apply the handbrake first before you or any other person opens the bonnet and starts working on the engine when it is running - risk of accident! It is also essential to observe all warnings ⇒ page 203.**

Note

- Take your foot off the accelerator if you inadvertently shift into **N** when driving and wait until the engine speed has dropped to the idling speed range before shifting into **D**.
- If you shift gear manually it is possible to select positions **4**, **3** and **2**, but the automatic gearbox will not shift down until there is no risk of the engine overrevving. ■

Selector lever lock

Automatic selector lever lock

With the ignition on, the selector lever is locked when it is in the positions **P** and **N**. You must first of all depress the brake pedal in order to move the selector lever out of this position. The following text appears in the display * as a reminder for the driver when the selector lever is in position **P** and **N**:

"Apply foot brake when selecting gear with vehicle stationary"

In addition, the symbol for the automatic selector lever lock in the shift gate lights up.

A time delay element ensures that the selector lever is not blocked when rapidly switching over the position **N** (e.g. from **R** to **D**). This does, for example, allow one to seesaw out a stuck vehicle. The selector lever lock will click into place if the lever is in the **N** position for more than 2 seconds without the brake pedal being pressed.

The selector lever lock is only active if the vehicle is stationary or moving at speed of less than 5 km/hour. The lock is switched off automatically into position **N** when the car is travelling at a higher speed.

Shiftlock button

The Shiftlock button in the handle of selector lever prevents certain selector lever positions being engaged inadvertently. The selector lever lock is cancelled when you press the Shiftlock button.

Keylock - Ignition key withdrawal lock

You can only withdraw the ignition key after switching off the ignition if the selector lever is in position **P**. As long as the ignition key is withdrawn, the selector lever is locked in position **P**. ■

Kickdown function

The kickdown function provides you with maximum acceleration power.

Depressing the accelerator pedal beyond the pressure point casues the automatic gearbox to shift down into a lower gear (in line with vehicle speed and engine speed). The gearbox shifts up into the next higher gear when the engine has reached its maximum revolations.

WARNING

Please note that using the kickdown function can result in the driven wheels spinning on a smooth or slippery road surface - risk of skidding!

Dynamic shift programme

The automatic gearbox of your vehicle is controlled electronically. Shifting up and down through the gears is performed automatically on the basis of pre-defined driving programmes.

Adopting a **moderate style of driving** will cause the gearbox to select the most economical driving programme. Shifting up into a higher gear as soon as possible and shifting down as late as possible will have a favourable effect on your fuel consumption.

Adopting a **faster style of driving** with rapid movements of the accelerator pedal combined with sharp acceleration and frequent changes in speed, exploiting the top speed of the car or operating the kickdown function, will cause the gearbox to switch over to the sporty driving programme. Shifting up later into a higher gear makes it possible to fully exploit the power reserves of the engine. The gearbox also then shifts down at higher engine speeds than is the case for the economy-oriented programmes.

Selecting the most appropriate driving programme for the particular style of driving is a continuous process. Irrespective of this it is, however, possible to switch into a sporty driving programme by depressing the accelerator rapidly. The gearbox shifts down into a lower gear matching the speed of the car and this allows you to accelerate rapidly (e.g. when overtaking) without having to depress the accelerator pedal fully into the kickdown range. The original programme will be reactivated to match your particular style of driving once the gearbox has shifted up again.

When driving in hilly regions, the gears are selected to match uphill and downhill sections. This avoids the gearbox frequently shifting up and down when negotiating an uphill stretch. Depressing the brake pedal while driving downhill causes the gearbox to shift down into the next lower gear. This makes it possible for you to exploit the engine braking power without the need for shifting gears manually.

Tiptronic

The Tiptronic allows the driver to also shift gears manually.

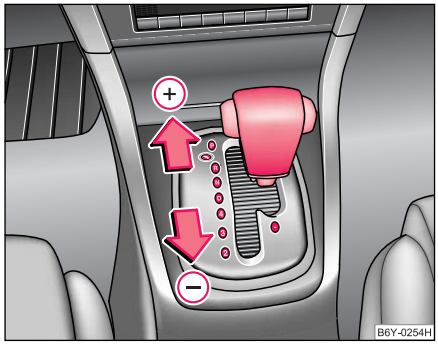


Fig. 113 Selector lever: Manual shifting of gears

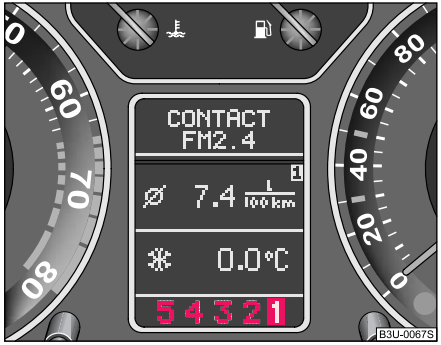


Fig. 114 Information display: Manual shifting of gears

Switching over to manual

– Push the selector lever to the right out of position **D**. As soon as the gearbox has switched over, **5 4 3 2 1** appears in the display, with the gear engaged being highlighted.

Shifting up gears

– One-touch forward of the selector lever (in the Tiptronic position) ⇒ page 128, fig. 113 +.

Shifting down gears

– One-touch back of the selector lever (in the Tiptronic position) -.

It is possible to switch over to manual both when the car is stationary and also when driving.

When you accelerate, the gearbox shifts up automatically in gears 1, 2, 3 and 4 into the next higher gear just before the maximum permissible engine speed is reached.

If you select a lower gear than the one presently engaged, the automatic gearbox does not shift down until there is no risk of the engine overrevving.

If you operate the kickdown function, the gearbox shifts into a lower gear in line with the vehicle speed and engine speed. ■

Emergency programme

An emergency programme exists in the event of a fault in the system.

The gearbox operates in a corresponding emergency programme if there are functional faults in the gearbox electronics. This is indicated by all of the segments in the display lighting up or going out.

It is possible to continue to move the selector lever into all the positions. The gearbox always shifts into 4th gear in the positions **D**, **4**, **3** and **2**. It is also possible to continue to engage reverse gear in the position **R**.

The manual shift programme (Tiptronic) is switched off in the emergency mode.

If the gearbox has switched over to emergency mode, drive to the nearest Škoda dealer in order to have the fault rectified.

WARNING

Never move the selector lever into position R or P when driving - risk of an accident!

Tow-starting and towing vehicle

Tow-starting a vehicle

For technical reasons it is not possible to tow-start a car fitted with an automatic gearbox ⇒ page 239.

you can use jump-start cables connected to the battery of another vehicle for starting your car if the vehicle battery is flat ⇒ page 237.

Towing a vehicle

Please pay attention to the following information if it comes necessary to tow-in your car ⇒ page 238.

Communicating and Navigating

Multifunction steering wheel*

Introduction

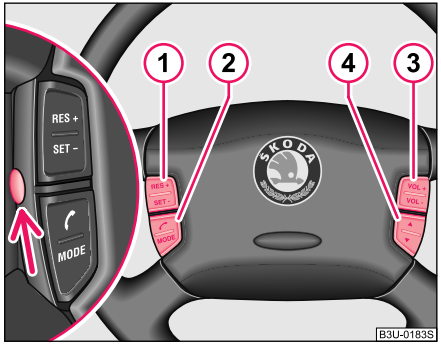


Fig. 115 Multifunction steering wheel: control buttons

The assignment of the pushbuttons in the steering wheel may differ depending on the vehicle equipment.

The buttons (1), (2), (3) and (4) ⇒ fig. 115 make it possible to operate the main functions of the cruise control system, of the radio and mobile phone. Refer to the more detailed information in the relevant operating instructions.

If you press the button (see arrow) when the headlights are switched on, the steering wheel pushbuttons are then also illuminated. ■

Operating cruise control system

The cruise control system is operated with the buttons (1) and (2), but on version which is also fitted with mobile phone only by button (1) ⇒ fig. 115.

Switching on and off

– The cruise control system is **switched on** by sliding the switch (A) ⇒ page 121 into the **ON** position.

– The cruise control system is **switched off** by sliding the switch (A) fully to the right into the **OFF** position.

Storing a speed

– Switch the cruise control system on.

– After the car has reached the desired speed, briefly press the button (1) ⇒ fig. 115 in the position **SET-**. The car maintains the stored speed without you having to depress the accelerator pedal.

Changing a stored speed

– You can **reduce** the stored speed by pressing the button (1) ⇒ fig. 115 in the position **SET-**. If you press and hold the button, the speed of the car is reduced continuously. Once the car has reached the desired speed, release the button. The set speed is then stored in the memory.

– If you release the pushbutton when the vehicle is travelling at a speed of less than 30 km/h, the speed is not stored and the memory is erased. It is then necessary to again store the speed with the pushbutton (1) in the position **SET** after an increase in speed of the vehicle to more than 30 km/hour.

– You can **increase** the stored speed by pressing the button (1) in the position **RES+**. Pressing and holding down the slide switch will cause the speed of the vehicle to be increased continuously. Once the car has reached the desired speed, release the button. The set speed is then stored in the memory.

Switching cruise control system off temporarily

– On the version not fitted with a mobile phone, the cruise control system is switched off temporarily with the button (2) ⇒ page 130, fig. 115 in the position **CANCEL**, on the version fitted with mobile phone, by pushing the switch (A) into the intermediate position ahead of the position **OFF** ⇒ page 122.

– You can resume the stored speed by pressing the button (1) in the position **RES+**.

For further methods of temporarily switching off the cruise control system ⇒ page 122.

Please refer to the following guidelines ⇒ page 120.

WARNING

First ensure that it is not too high for the traffic conditions which exist at that moment before resuming the stored speed.

Operating radio and CD player

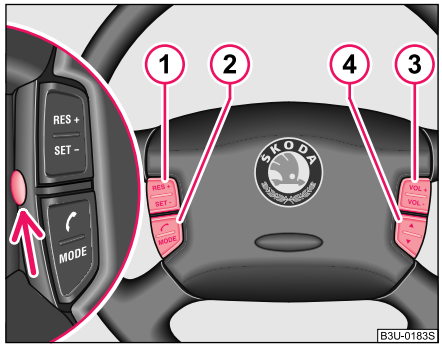


Fig. 116 Multifunction steering wheel: control buttons

The radio is operated with buttons (3) and (4), but on the version fitted with a mobile phone by buttons (2), (3) and (4) ⇒ fig. 116.

Radio

– You can set the radio, cassette player, CD player and radio data system louder or softer by pressing button (3) (positions **VOL+** and **VOL-**).

– You can search forward or back within the frequency search for different radio stations by pressing button (4) (positions △ and ▽).

Cassette player

– You can run the tape forward or back by pressing the button (4) (positions △ and ▽).

CD-player

– You can select the titles forward or back by pressing the button (4) (positions △ and ▽).

Radio data system (RDS)*

You can select the recorded radio traffic messages by moving forward or back in stages by pressing the button (4) (positions △ and ▽).

On the version fitted with mobile phone, you must press button (2) in the position **MODE** in order to switch over to the radio mode. ■

Operating mobile phone

– You can operate the mobile phone with buttons (2), (3) and (4) ⇒ page 130, fig. 115.

– You can switch over from the radio mode to the phone mode (or back again) by pressing the button (2) in the position **MODE**.

– You can accept or end a telephone call or select from the telephone book by briefly pressing the button (2) in the position.

– You can refuse a telephone call by pressing the button (2) in the position for more than 2 seconds.

– You can make the volume of the telephone call louder or softer by pressing the button (3) in the positions **VOL+** and **VOL-**.

– You can scroll alphabetically upward (A to Z) or downward (Z to A) within the telephone memory by pressing the button (4) in the positions △ and ▽.

Note

The operation of the mobile phone fitted with multifunction steering wheel is only possible on certain models of mobile phone. More detailed information is available from your Škoda Dealer. ■

Mobile phone, two-way radio system and navigation system

Universal telephone connection at the front* (GSM II)

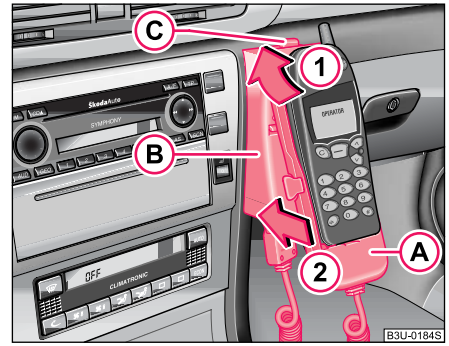


Fig. 117 Universal telephone connection at the front

A telephone mount is factory-fitted. The mount is attached to the centre console. Adapter (Cullmann) and mobile phone are not factory-fitted by Škoda Auto.

Initialisation

– Withdraw the ignition key.

– First insert the adapter without the mobile phone into the mount (B) in the direction of arrow (1) ⇒ page 132, fig. 117 until the adapter is touching the stop. Press the adapter slightly in the direction of arrow (2) until it locks into position.

– Plug the adapter cable into the mobile phone socket. The socket is located on the mobile phone mount below.

– Switch on the ignition.

– Wait approximately 20 seconds, switch off the ignition and pull the ignition key out of the ignition lock.

– Insert the mobile phone into the adapter (A) (as specified in manufacturer's instructions) and switch on the ignition.

Removing the mobile phone and adapter

– Press the button (C) and remove the mobile telephone.

An initialisation must be carried out:

- after the first connection of the adapter
- after reconnecting the battery
- after pulling out the adapter cable from the power socket for the mobile phone

This enables you to make full use of the advantages of a normal carphone (“handsfree system” using a microphone integrated in the vehicle, optimal transmission of signals using an external aerial etc.). The battery of the mobile phone is also constantly charged.

Please contact your Škoda dealer If there are any points which are not clear.

Please also refer to the additional instructions ⇒ page 135. ■

Telephone pre-installation at the front or rear* (GSM III)

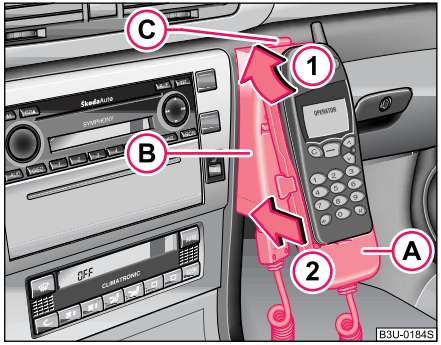


Fig. 118 Universal telephone connection at the front

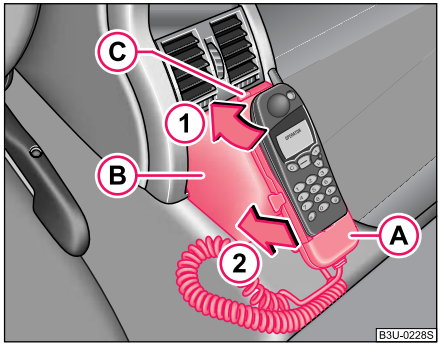


Fig. 119 Universal telephone connection at the rear

Initialisation of the adapter

– Withdraw the ignition key.

– Insert the adapter (A) into the mount (B) (the mobile phone must not be inserted in the adapter).

– Plug the adapter cable into the mobile phone socket.

– Switch on the ignition.

– Wait approximately 20 seconds, switch off the ignition and pull the ignition key out of the ignition lock.

– Insert the mobile phone into the adapter (as specified in manufacturer's instructions) and switch on the ignition.

An initialisation must be carried out:

- after the first connection of the adapter
- after reconnecting the battery
- after pulling out the adapter cable from the power socket for the mobile phone

This enables you to make full use of the advantages of a normal carphone (“handsfree system” using a microphone integrated in the vehicle, optimal transmission of signals using an external aerial etc.). The battery of the mobile phone is also constantly charged.

A telephone mount is factory-fitted for the front mobile phone and for the rear mobile phone. The front telephone mount is located on the front center console ⇒ fig. 118, the rear on the rear center console ⇒ fig. 119. Adapter (Cullmann) and mobile phone are not factory-fitted by Škoda Auto.

Please also refer to the additional instructions ⇒ page 135.

Note

For technical reasons it is not possible to use simultaneously the front and rear mobile phone. Ensure that the adapter Ⓐ is always inserted only in the bracket Ⓑ. ■

Mobile phones and two-way radio systems

The installation of mobile phones and two-way radio systems in a vehicle should generally be undertaken by a Škoda dealer.

Škoda Auto permits the operation of mobile phones and two-way radio systems with a professionally installed external aerial and a maximum transmission power of up to 10 watts.

Our Skoda dealers are also happy to inform you about the possibilities available for installing and operating mobile telephones and radio transmitters which have an output greater than 10 watts. The Skoda dealers can provide you with details about the technical possibilities for retrofitting of mobile telephones and radio transmitters.

The operation of commercially available mobile phones or two-way radio systems may cause operational problems in the electronic systems of your car. The reasons for this may be:

- no external aerial
- external aerial incorrectly installed
- transmission power greater than 10 watts.

You should therefore **not operate a mobile phone or two-way radio system inside the vehicle** without the use of an external aerial, or with an external aerial which has been incorrectly installed.

You should also note that only an **external** aerial makes it possible to achieve the optimal range of such equipment.

WARNING

- **If a mobile phone or two-way radio system is operated inside the vehicle without using an external aerial, or with an external aerial which has been incorrectly installed, the result can be excessive electromagnetic fields which may cause harm to your health.**
- **Please always pay full attention to the traffic situation around you!**
- **You must not install two-way radio systems, mobile phones or mounts on the covers of the airbags or within the immediate deployment range of airbags. This might result in injuries to the occupants in the event of an accident.**

Note

Please also refer to the operating instructions of the mobile phones and two-way radio systems. ■

Navigation system*

The controls for the navigation system, radio, CD player are located in the centre console on both sides of the monitor screen. Navigation data is also shown in the information display.

Please refer to the relevant operating instructions for a detailed description of the navigation system. ■

Safety

Passive Safety

Driving the safe way

Passive safety measures reduce the risk of injury in accident situations.

In this section you will find important information, tips and notes on the subject of passive safety in your vehicle. We have combined everything here which you should be familiar with, for example, regarding seat belts, airbags, child seats and safety of children. It is therefore important, in particular, to comply with the notes and warnings in this section for your own interest and in the interest of all those travelling with you.

The information provided in this section applies to all models of your type of vehicle. It is also possible that equipment is described here which does not necessarily apply to your vehicle.

⚠ WARNING

Please do not forget to give the new owner the complete vehicle documentation, if you sell your vehicle, including the service schedule and documents relating to the possible deactivation of airbags. ■

Requirements for maximum safety

What you have to pay attention to in order to obtain the maximum protection from the passive safety measures.

It is important that you comply with the following requirements in order to ensure that the seat belts and the airbag systems offer you and the occupants of your vehicle maximum protection:

- front seats correctly adjusted ⇒ page 69, “Front seats”,
- head restraints adjusted to match your body size ⇒ page 74,
- seat belts correctly fastened and adjusted ⇒ page 141,
- adopting a correct seated position ■

Seat belts

Why seat belts?

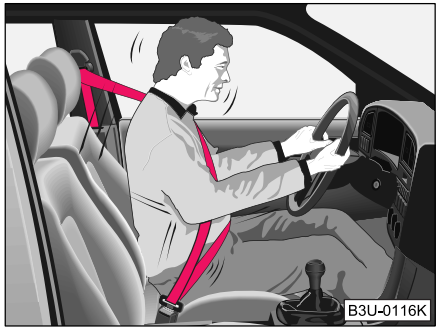


Fig. 120 Driver wearing seat belt (a basic illustration)

It is a proven fact that seat belts offer good protection in accidents ⇒ fig. 120. Thus wearing a seat belt is a legal requirement in most countries.

Seat belts which have been correctly fastened and adjusted hold the occupants of the car in the correct seated position ⇒ fig. 120. The belts reduce the kinetic energy (energy of motion) to a considerable extent. They also prevent uncontrolled movements which, in turn, may well result in severe injuries.

The occupants of a vehicle who have fastened and correctly adjusted their seat belt, profit to a major extent from the fact that the kinetic energy is optimally absorbed by the belts. The structure of the front end of the vehicle and other passive safety measures, such as the airbag system, also contribute to reducing the kinetic energy. The energy produced is thus absorbed and there is less risk of injury.

Accident statistics prove that seat belts which are fastened and properly adjusted reduce the risk of an injury and enhance the chance of survival in a major accident ⇒ page 139.

It is important that you pay attention to safety measures, particularly when transporting children in the vehicle ⇒ page 157, “What you should know about transporting children!”.

WARNING

- **Fasten your seat belt each time before setting off, also when driving in town! This also applies to the people seated at the rear - risk of injury!**
- **Expectant women must also always wear a seat belt. This is the only way of ensuring optimal protection for the unborn child ⇒ page 141.**
- **It is important for the belt webbing to be properly routed if the seat belts are to offer the maximum protection. You can see a description of how safety belts should be fitted properly on the next pages.**

Note

Please comply with any differing legal requirements when using the seat belts. ■

The physical principle of a frontal collision

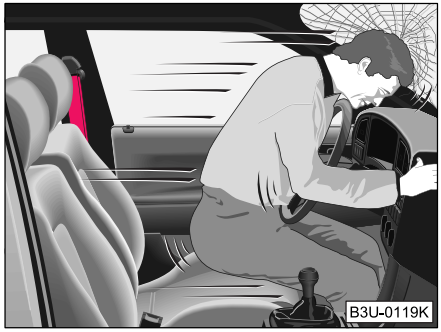


Fig. 121 The driver is thrown forward if not wearing a belt

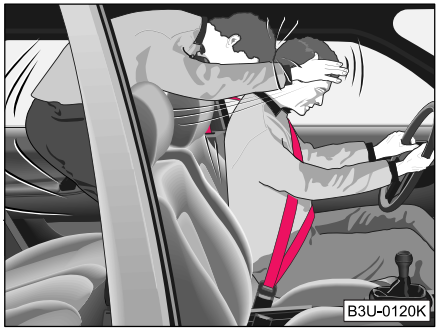


Fig. 122 The rear seat occupant is thrown forward if not wearing a belt

The physical principle of a frontal accident can be explained quite simply:

As soon as the vehicle is moving, so-called kinetic energy (the energy of motion) is produced both in terms of the car as well as in terms of the occupants. The magnitude of this kinetic energy depends essentially on the speed at which the vehicle is travelling and on the weight of the vehicle and the occupants. The greater the speed and weight increase, the greater the amount of energy which has to be absorbed in the event of an accident.

The speed of the vehicle is, nevertheless, the most important factor. Doubling the speed of the vehicle from 25 km/h up to 50 km/hour increases the kinetic energy four times.

The common opinion that it is possible to support your body in a minor accident with your hands, is incorrect. Even in a collision at only a low speed, the forces acting on the body are such that it is no longer possible to support your body.

Even if you only drive at a speed within the range from 30 km/hour to 50 km/hour, the forces which are produced on your body in the event of an accident can easily exceed 10,000 N (Newton). This equals a weight of one tonne (1 000 kg).

In the event of a frontal collision, occupants of the car not wearing a seat belt, are thrown forward and strike in an uncontrolled way parts of the interior of the car, such as steering wheel, dash panel, windscreen,⇒ fig. 121. The occupants of a vehicle who have not fastened their seat belts may even be thrown out of the vehicle. This can result in fatal injuries.

It is also important that rear seat passengers fasten their seat belts as they will otherwise be thrown through the vehicle in an uncontrolled manner in the event of an accident A rear seat passenger who has not fastened the seat belt is a danger not only to himself but also for those seated at the front ⇒ fig. 122. ■

Important safety information regarding the use of seat belts

The correct use of the seat belts considerably reduces the risk of injury!

WARNING

- **The belt webbing must not be jammed in-between at any point or twisted, or chafe against any sharp edges.**
- **No two persons (also not children) should ever use a single seat belt together.**
- **The maximum protection which seat belts can offer is only achieved if you are correctly seated ⇒ page 69.**
- **The belt webbing must not run across solid or fragile objects (e.g. spectacles, ball-point pens, keys etc.) as this may be a cause of injuries.**
- **Bulky, loose clothing (e.g. a winter coat over a jacket) does not allow you to be correctly seated and impairs proper operation of the seat belts.**
- **It is prohibited to use clamps or other objects to adjust seat belts (e.g. for shortening the belts for smaller persons).**
- **The lock tongue should only be inserted into the lock which is the correct one for your seat. Wrong use of the safety belt will reduce its capacity to protect.**
- **The backrests of the front seats must not be tilted too far to the rear otherwise the seatbelts can lose their effectiveness.**
- **The belt webbing must always be kept clean. Soiled belt webbing may impair proper operation of the inertia reel ⇒ page 196.**

WARNING (continued)

- **The slot of the belt tongue must not be blocked by paper or similar objects otherwise the belt tongue will not lock in place properly.**
- **Damaged seat belts which have been subjected to stress in an accident and were therefore stretched, must be replaced - this is best done by a Škoda dealer. The anchorage points of the belts must also be inspected. The anchorage points for the belts should also be checked.**
- **In certain countries it is possible to use seat belts which differ in terms of their operation from the seat belts which are described on the pages which follow.**

How are seat belts correctly fastened?

Fastening a three-point seat belt

Fasten your seat belt before starting!

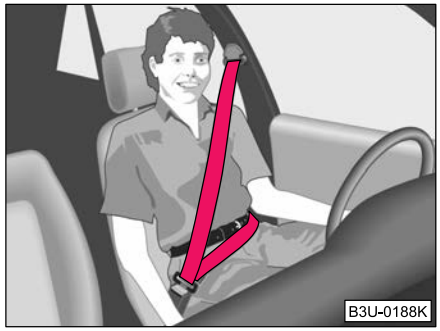


Fig. 123 Routing of webbing over the shoulders and the lap belt

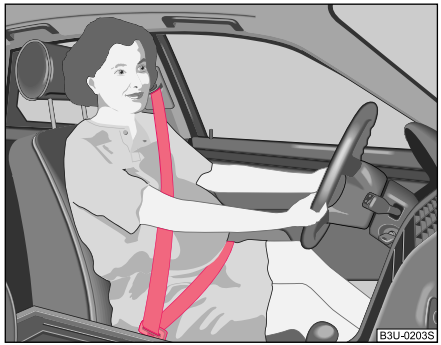


Fig. 124 Routing of belt webbing for an expectant mother

– Correctly adjust the front seat and the head restraint before fastening your seat belt ⇒ page 69, “Front seats”.

– Slowly pull the belt webbing at the tongue of the lock over your chest and pelvis ⇒ ⚠.

– Insert the tongue of the lock into the seat belt buckle belonging to the seat until it is heard to lock in place.

– Pull on the belt to check that it has also reliably engaged in the lock.

Each three-point seat belt is equipped with an inertia reel. This inertia reel offers you complete freedom of movement if the belt is unreeled slowly. If the brakes are applied suddenly, the inertia reel will block. It also blocks the belts when the car accelerates, when driving uphill and when cornering.

Expectant mothers must also wear the seat belt ⇒ ⚠.

⚠ WARNING

- **The shoulder part of the seat belt must never run across your neck but must run approximately over the middle of the shoulder and fit snugly against the chest. The lap part of the belt must run across the hip and must never be routed across the stomach. It must always fit snugly ⇒ fig. 123. Adjust the belt webbing as required.**
- **The lap part of the belt should be positioned as low as possible at the pelvis of an expectant mother in order to avoid exerting any pressure on the lower abdomen.**
- **Always ensure that the webbing of the seat belts is properly routed. Seat belts which are not correctly adjusted can themselves cause injuries even in minor accidents.** ▶

WARNING (continued)

- **A seat belt which is hanging too loose can result in injuries as your body is moved forward by the kinetic energy produced in an accident and is then suddenly held firm by the belt.**
- **Only insert the lock tongue into the lock which is the correct one for your seat. This will affect the protection which the belt offers and increase the risk of an injury.**

Seat belt height adjuster

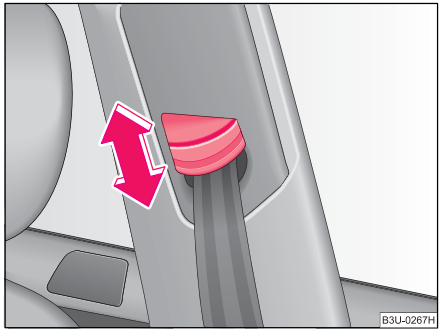


Fig. 125 Front seat: Seat belt height adjuster

The seat belt height adjuster makes it possible for you to adapt the routing of the three-point seat belt in the area of the shoulder to match your body size.

– Move the height adjuster in the desired direction up or down ⇒ fig. 125.

– Then pull firmly on the belt to ensure that the seat belt height adjuster has correctly locked in place.

WARNING

Adjust the height of the belt in such a way that the shoulder part of the belt is positioned approximately across the middle of your shoulder - on no account across your neck.

Note

It is also possible to adapt the routing of the belt webbing at the front seats by adjusting the height of the seat.

Taking seat belts off

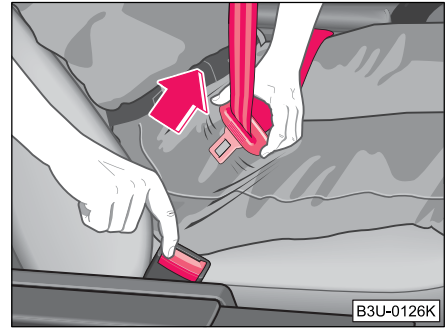


Fig. 126 Releasing lock tongue from belt lock

– Press the red button in the belt lock ⇒ fig. 126. The spring force causes the tongue of the lock to jump out.

– Guide the belt back with your hand to enable the inertia reel to wind up the belt webbing more easily.

A plastic knob in the belt webbing holds the belt tongue in a position which is easy to get hold of. ■

Three-point safety belt for the middle rear seat

Your car is equipped as standard with the three-point seat belt in the middle rear seat. It is used in the same way as the three-point seat belts on the left and right (at front and rear). The three-point seat belt for the rear middle seat must be put on first to allow the pelvic part of the belt to run between the belt lock for the right three-point seat belt and the backrest, while avoiding crossing the belt webbing of the right and middle seat belts. ■

Blocking seat belts

The three-point seat belts for the front passenger and for the rear seats can be blocked for attaching a child safety seat ⇒ page 164, “Attaching child safety seat”. Blocking the belt in this way ensures that the child seat is held firmly in position in the car.

WARNING

Never attach a child safety seat on the front passenger seat if the child is seated with its back facing in direction of travel when the front passenger airbag is still activated ⇒ page 158, “Use of child safety seats on the front passenger seat”. Risk of severe or even fatal injuries! ■

Belt tensioners

Safety for the driver and passengers **wearing their seat belts**, is enhanced by the belt tensioners fitted to the inertia reels of the front and rear side three-point seat belts, in addition to the protection afforded by the airbag system.

The fastened three-point seat belts are automatically tensioned in the event of a frontal collision of a certain severity. The rear outside belt tensioners are also deployed if the seat belt is not fastened.

The belt tensioner is deployed in the event of a frontal collision of major severity. A powder charge is ignited in the inertia reels during deployment. The belt webbing is pulled into the inertia reels by a mechanical system and the belt is tensioned.

Belt tensioners are not activated in the event of minor frontal collisions, side and rear-end collisions, in the case of a rollover and also not in accidents in which no major forces are produced from the front. ▶

WARNING

- **The service life of seat belts and belt tensioners is 15 years from the date of manufacture of the vehicle. It is then necessary to have the seat belts replaced by a Škoda dealer.**
- **Any work on the system including removal and installation of system components because of other repair work, must only be carried out by Škoda Dealer.**
- **The protective function of the system is only adequate for a single accident. If the belt tensioners have been deployed, it is then necessary to replace the entire system.**
- **The Owner's Manual must also be handed over to the new owner if the vehicle is sold.**

Note

- Smoke is generated when the belt tensioners are deployed. This is not an indication of a fire in the vehicle.
- It is essential to pay attention to relevant safety regulations if the vehicle or individual parts of the system are scrapped. Škoda dealers are familiar with these regulations and will be able to provide you with detailed information in this respect.
- When disposing of vehicle or parts of the system, it is important to comply with the national legal requirements. ■

Airbag system

Description of the airbag system

General information on the airbag system

The front airbag system is complementary to the three-point seat belts and offers additional protection for the head and chest area of the driver and passenger in the event of a frontal collision.

In the case of a violent side crash, the side and head airbags reduce the risk of injuries to the occupants on the part of the body facing the side of the accident ⇒ ⚠.

The airbag system is only functional after the ignition has been switched on.

The operational readiness of the airbag system is monitored electronically. The airbag warning light comes on for a few seconds each time the ignition is switched on.

The airbag system (according to vehicle equipment) essentially consists of:

- an electronic control unit
- the two front airbags
- the side airbags
- Head airbags*
- an airbag warning light in the instrument cluster
- a front passenger airbag switch* ⇒ page 155
- an indicator light showing a switched-off front passenger airbag* in the middle of the dash panel⇒ page 155

A fault in the airbag system exists if:

- the airbag indicator light does not light up when the ignition is switched on
- the warning light does not go out after about 3 seconds after the ignition is switched on
- the airbag indicator light goes out and comes on again after the ignition is switched on
- the airbag indicator light comes on or flickers when driving
- an airbag indicator light showing a switched-off front passenger airbag* in the middle of the dash panel flashes

⚠ WARNING

- **To enable the occupants of a car to be protected with the greatest possible effect when the airbag is deployed, the front seats must be ⇒ page 69, “Front seats”correctly adjusted to match the body size of the occupant.**
- **If you do not fasten the seat belts when driving, lean too far forward or adopt an incorrect seated position, you are exposing yourself to increased risk of injury in the event of an accident.**
- **Have the airbag system checked immediately by a Škoda Dealer if a fault exists. Otherwise, there is a risk of the airbag not being activated in the event of an accident.**
- **No modifications of any kind may be made to parts of the airbag system.**
- **It is prohibited to manipulate individual parts of the airbag system as this might result in the airbag being deployed.** ▶

WARNING (continued)

- **The protective function of the airbag system is sufficient for only one accident. The airbag system must then be replaced if the airbag has been deployed.**
- **The airbag system needs no maintenance during its working life.**
- **The service life of the airbag system is 15 years from the date of manufacture of the vehicle. Have the airbag system replaced by a Škoda Dealer after this period.**
- **If you sell your car, please hand over the complete vehicle documentation to the new owener. Please note that the documents relating to the possibility of deactivating the front passenger airbag are also part of the vehicle documents!**
- **If the vehicle or individual parts of the airbag system are scrapped, it is essential to observe the relevant safety precautions. Škoda dealers are familiar with these regulations.**
- **When disposing of vehicle or parts of the airbag system, it is important to comply with the national legal requirements.**

When are the airbags deployed?

The airbag system is designed in such a way that the driver and the front passenger airbag are activated in the event of a **frontal collision** of major severity.

In the case of a **violent side crash**, the side airbags on the side of the car at which the collision occurs, are deployed together with the relevant head airbag*.

In certain accident situations it is possible that both the front as well as the side airbags and the relevant head airbag are deployed at the same time.

The airbags **are not deployed** in the case of **minor** frontal and side collisions, in the case of rear-end collisions and vehicle rollover.

Deployment factors

It is not possible to state globally which deployment conditions apply to the airbag system in every situation as the circumstances which exist in the case of accidents vary greatly. An important role in this case, for example, is played by factors such as the type of object against which the vehicle impacts (hard, soft), the angle of impact, the vehicle speed etc.

A decisive factor for the deployment of the airbags is the deceleration which occurs during a collision. The control unit analyses the nature of the collision and activates the relevant restraint system. If the vehicle deceleration which occurs and is measured during the collision remains below the prescribed reference values specified in the control unit, the airbags are not deployed although the vehicle may well suffer severe damage to the bodywork as a consequence of the accident.

The airbags are not deployed if:

- ignition off
- a minor frontal collision
- a minor side collision
- a rear-end collision
- rollover

Note

- A fine dust is produced when airbag inflated. This is perfectly normal and is not an indication of a fire in the vehicle.
- The dash panel must be replaced after the front passenger airbag has been deployed.

Front airbags

Description of the front airbags

The airbag system is not a substitute for the seat belt!

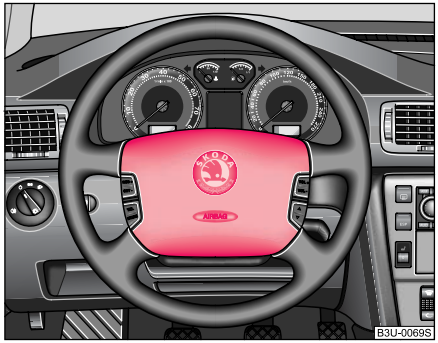


Fig. 127 Driver airbag in the steering wheel

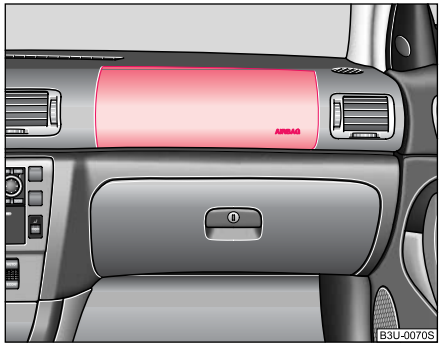


Fig. 128 Front passenger airbag in the dash panel

The front airbag for the driver is housed in the steering wheel ⇒ fig. 127. The front airbag for the front passenger is housed in the dash panel above the storage compartment ⇒ fig. 128. The installation positions are each marked with the “AIRBAG” logo.

The front airbag system, in combination with three-point safety belts, offers additional protection for the head and chest area of the driver and front passenger in the event of a frontal collision of major severity ⇒ ⚠ in “Important safety information regarding the front airbag system” on page 148.

The airbag is not a substitute for the seat belt, but is part of the complete passive vehicle safety concept. **Please note that an airbag can only offer you optimal protection in combination with a seat belt which is fastened.**.

Apart from their normal protective function, a further task of the **seat belts** is to also hold the driver and front passenger in a correct seated position in the event of a frontal collision so as to enable the front airbags to offer the maximum protection.

You should therefore always fasten ⇒ page 138 the seat belts, not only because this is required by law, but also for safety reasons and for your own protection.

Note

The dash panel must be replaced after the front passenger airbag has been deployed. ■

Function of the front airbags

Risk of injury to the head and chest area is reduced by fully inflated airbags.

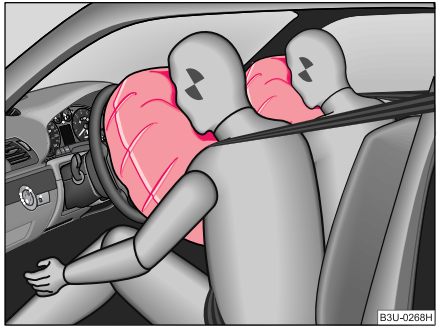


Fig. 129 Inflated airbags

The airbag system is designed in such a way that the driver and front passenger airbag are deployed in the event of a frontal collision of major severity.

In certain accident situations both the front airbags as well as the head and side airbags may be deployed together.

If the airbags are deployed, the airbags are filled with a propellant gas and inflated in front of the driver and front passenger ⇒ fig. 129. The airbags inflate in fractions of a second and at a high speed in order to be able to offer that additional protection in the event of an accident. The forward movement of the driver and of the front passenger is cushioned when they make contact with the fully inflated airbag and the risk of injury to head and chest is thus reduced.

The specially developed airbag allows the gas to flow out of the inflated airbag in a controlled manner (depending on the load of the particular car occupant) in order to cushion head and chest areas. The airbag then deflates subsequently to such an extent, after an accident, to again provide a clear view forward.

A fine dust is produced when airbag inflated. This is perfectly normal and is not an indication of a fire in the vehicle.

The airbag develops enormous forces when triggered, which can lead to injuries if the sitting position or seated position is not correct ⇒ ⚠ in “Important safety information regarding the front airbag system”. ■

Important safety information regarding the front airbag system

Correct use of the airbag system considerably reduces the risk of injury!

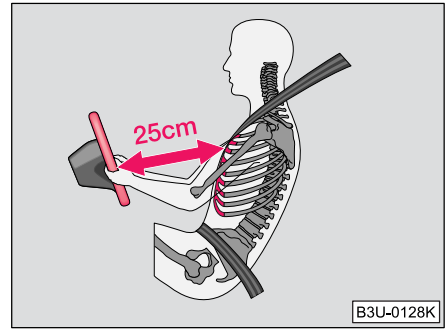


Fig. 130 Safe distance to steering wheel

WARNING

- Never transport children on the front seat of a vehicle without using a proper restraint system. If airbags are deployed in the event of an accident, the child might suffer severe or even fatal injuries.
- For the driver and front passenger it is important to maintain a distance of at least 25 cm from the steering wheel or dash panel ⇒ page 148, fig. 130. Not maintaining this minimum distance will mean that the airbag system will not be able to properly protect you - hazard! The front seats and the head restraints must always also be correctly adjusted to match the body size of the occupant.
- It is essential to always switch off ⇒ page 154 the front passenger airbag when attaching a child safety seat on the front passenger seat where the child is seated with its back facing in direction of travel (in some countries also when the child is facing the direction of travel). If this is not done, there is a risk of the child suffering severe or even fatal injuries if the front passenger airbag is deployed. In certain countries national legal provisions also require that the side or head passenger airbags be deactivated. When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats.
- There must not by any further persons, animals or objects positioned between the front seated occupants and the deployment area of the airbag.
- The steering wheel and the surface of the airbag module in the dash panel on the passenger side must not be stuck onto, covered or modified in any other way. These parts should only be cleaned with a dry cloth or a cloth moistened with water. No objects such as cup holders, mobile phone mounts, etc. may be attached to the covers of the airbag modules or be located within the immediate area.

WARNING (continued)

- No modifications of any kind may be made to parts of the airbag system. Any work on the airbag system including installing and removing system components because of other repair work (e.g. removing the steering wheel) must only be carried out by a Škoda dealer.
- Never place any objects on the surface of the front passenger airbag in the dash panel.

Side airbags

Description of side airbags

The side airbag together with the head airbag offers enhanced occupant protection in the event of a side collision.

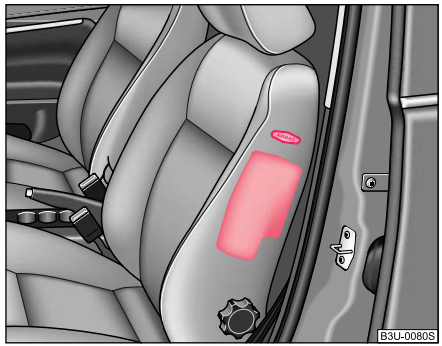


Fig. 131 Installation position of side airbag in driver seat

The side airbags are housed in the upholstery of the backrests of the front seats ⇒ page 149, fig. 131.

The side airbag system in combination with the three-point seat belts, offers additional protection for the upper area of the body (chest, stomach and pelvis) of the occupants of the car in the event of a side collision of major severity ⇒ ⚠ in “Important safety information on the side airbag” on page 151.

Apart from their normal protective function, a further task of the **seat belts** is to also hold the driver and front passenger in a correct seated position in the event of a side collision so as to enable the side airbags to offer the maximum protection.

You should therefore always fasten ⇒ page 138 the seat belts, not only because this is required by law, but also for safety reasons and for your own protection.

Each time the side airbags are deployed, the head airbag* on the relevant side is automatically deployed at the same time in order to provide the occupant with enhanced protection ⇒ page 152. ■

Function of the side airbags

Risk of injury to the upper part of the body is reduced by fully inflated side airbags.

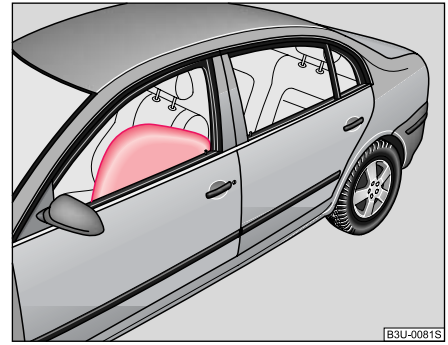


Fig. 132 Inflated side airbag

In case of violent **side collision** the side airbag on the side of the vehicle on which the collision takes place, is also deployed ⇒ fig. 132.

In certain accident situations both the front airbags as well as the head and side airbags may be deployed together.

If an airbag is deployed, the airbag is filled with propellant gas. The airbags inflate in fractions of a second and at a high speed in order to be able to offer that additional protection in the event of an accident.

A fine dust is produced when airbag inflated. This is perfectly normal and is not an indication of a fire in the vehicle.

The load of the occupants is cushioned when plunging into the fully inflated airbag and the risk of injury to the entire upper body (chest, stomach and pelvis) is reduced on the side facing the door. ■

Important safety information on the side airbag

Correct use of the airbag system considerably reduces the risk of injury!

WARNING

- **It is essential to always switch off ⇒ page 154 the front passenger airbag when attaching a child safety seat on the front passenger seat where the child is seated with its back facing in direction of travel (in some countries also when the child is facing the direction of travel). If this is not done, there is a risk of the child suffering severe or even fatal injuries if the front passenger airbag is deployed. In certain countries national legal provisions also require that the side or head passenger airbags be deactivated. When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats.**
- **Your head should never be positioned in the deployment area of the side airbag. You might suffer severe injuries in the event of an accident. This applies in particular to children who are transported without using a suitable child safety seat ⇒ page 160.**
- **If children adopt an incorrect seated position when travelling, they may be exposed to an increased risk of injury in the event of an accident. This can result in serious injuries ⇒ page 157.**
- **There must not be any further persons, animals as well as objects positioned between the occupants and the deployment area of the airbag. There must also be no accessories such as cup holders, attached to the doors to enable the side airbags to activate properly.**
- **Only hang light items of clothing on the clothes hooks to the vehicle. Never leave any heavy or sharp-edged objects in the pockets of the items of clothing.**

WARNING (continued)

- **Ensure that there are no excessive forces, such as violent knocks, kicks etc., impact on the backrests of the seats otherwise the system may be damaged. The side airbags would not be deployed in such a case!**
- **Any seat or protective covers which you fit to the driver or front passenger seats must only be of the type expressly authorized by Škoda Auto. In view of the fact that the airbag inflates out of the backrest of the seat, use of non-approved seat or protective covers would considerably impair the protective function of the side airbag.**
- **Any damage to the original seat covers in the area of the side airbag module must be repaired without delay by your Škoda dealer.**
- **The airbag modules in the front seats must not display any damage, cracks or deep scratches. It is not permissible to use force in order to open the modules.**
- **Any work on the side airbag system including removing and installing system components because of other repair work (e.g. removing seats) must only be carried out by a Škoda dealer.**

Head airbags*

Description of the head airbags

The head airbag together with the side airbag offers enhanced occupant protection in the event of a side collision.

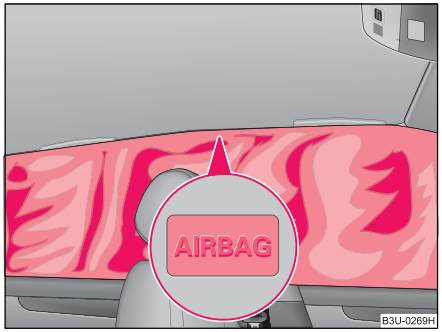


Fig. 133 Installation position of the head airbags above the door, shown inflated, and Airbag logo on the pillar cover panel

The head airbags are positioned above the doors on both sides in the interior of the car ⇒ fig. 133. The installation positions are each marked with the “AIRBAG” logo.

The head airbag together with the three-point seat belts and the side airbags, offers additional protection for the head and neck area of the occupants in the event of a side collision of major severity ⇒ ⚠ in “Important safety information on the head airbag” on page 153.

Apart from their normal protective function, a further task of the **seat belts** is to also hold the driver and the occupants in a correct seated position in the event of a side collision so as to enable the head airbags to offer the maximum protection.

You should therefore always fasten ⇒ page 138 the seat belts, not only because this is required by law, but also for safety reasons and for your own protection.

Together with other elements (such as cross bars in the seats, stable vehicle structure) the head airbags are the consequent further development of occupant protection in the case of side collisions. ■

Function of the head airbags

The risk of injury to the head and neck area is reduced in the event of a side collision by fully inflated head airbags.

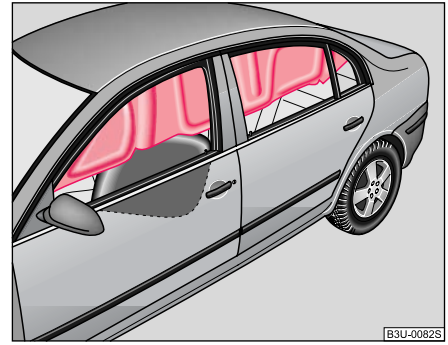


Fig. 134 Inflated head airbag

In the case of a **side collision** the head airbag is deployed together with the relevant side airbag on the side of the car on which the accident occurs ⇒ fig. 134.

If the head airbag is deployed, the airbag is filled with propellant gas and extends over the entire area of the side window including the door pillars ⇒ page 152, fig. 134. The protection offered by the head airbags is thus available simultaneously both to the front occupants of the car seated on the side on which the accident occurs, as well as to the rear occupants. Any impact of the head against parts of the interior or objects outside of the car, is cushioned by the inflated head airbag. The reduction in any impact to the head and the resultant minimizing of any movements of the head additionally reduce the risk of injuries to the neck area. The head airbag also offers additional protection in the case of an offset impact by covering the front door pillar.

In certain accident situations both the front airbags as well as the side and head airbags may be deployed together.

The airbags inflate in fractions of a second and at a high speed in order to be able to offer that additional protection in the event of an accident. A fine dust is produced when airbag inflated. This is perfectly normal and is not an indication of a fire in the vehicle. ■

Important safety information on the head airbag

Correct use of the airbag system considerably reduces the risk of injury!

⚠ WARNING

- **It is essential to always switch off ⇒ page 154 the front passenger airbag when attaching a child safety seat on the front passenger seat where the child is seated with its back facing in direction of travel (in some countries also when the child is facing the direction of travel). If this is not done, there is a risk of the child suffering severe or even fatal injuries if the front passenger airbag is deployed. In certain countries national legal provisions also require that the side or head passenger airbags be deactivated. When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats.**
- **There must not be any objects in the deployment area of the head airbags which might prevent the airbags from inflating properly.**
- **Only hang light items of clothing on the clothes hooks to the vehicle. Never leave any heavy or sharp-edged objects in the pockets of the items of clothing. In addition, it is not permitted to use clothes hangers for hanging up items of clothing.**
- **There must not be any other persons (e.g. children) or animals between the car occupant and the deployment area of the head airbag. In addition, none of the occupants should lean their head out of the window when driving, or extend their arms and hands out of the window.** ▶

⚠ WARNING (continued)

- **The sun visors must not be swivelled to the side windows into the deployment area of the head airbags if any objects, such as ball-point pens etc. are attached to them. This might result in injuries to the occupants if the head airbag is deployed.**
- **Installing accessories in the area of the head airbag may considerably impair the protection offered by the head airbag in the event of it being deployed. When the deployed head airbag is inflated, parts of the accessories fitted may in certain circumstances be thrown into the interior of the car and cause injuries to the occupants.**
- **Any work on the head airbag system including installing and removing system components because of other repair work (e.g. removing headliner) must only be carried out by a Škoda Dealer.**

Deactivating an airbag

Deactivating airbags

If any airbags have been deactivated, switch them on again as soon as possible so that they are able to again provide their proper protection.

There is the technical means installed within your vehicle to switch off the front, side or head airbag (take out of commission).

This is why you should have the deactivation of the airbags carried out by a Škoda dealer.

On vehicles equipped with the switch for deactivation of the airbags, you can deactivate the front and side passenger airbag by means of this switch ⇒ page 155.

Deactivation of airbags is envisaged only for particular instances, such as if

- You must in **exceptional cases** use a child seat on the front passenger seat where the child is seated with its back to the direction of travel (in some countries this must be in the direction of travel due to other legal regulations applying) ⇒ page 157.
- You are not able to maintain the distance of at least 25 cm between middle of steering wheel and chest, despite the driver seat being correctly adjusted.
- Special attachments are required in the area of the steering wheel because of a physical disability.
- You have installed other seats (e.g. orthopaedic seats without side airbags).

Monitoring the airbag system

The functionality of the airbag system is monitored electronically, also when the airbags have been switched off

An airbag which has been switched off by a Skoda dealer using the vehicle system tester:

- The warning light for the airbag system lights up for 3 seconds after switching on the ignition and then flashes for 12 seconds afterwards in 2 second intervals.

Front passenger airbags switched off using the switch for front passenger airbags* in stowage compartment on the front passenger side:

- The airbag indicator light in the instrument cluster comes on for about 3 seconds each time the ignition is switched on.

- Switching off airbags is indicated ⇒ page 155 in the middle of the dash panel by the lighting up of the indicator light **AIRBAG OFF**.

Note

Your Škoda dealer will be able to advise you whether national legislation in your country allows airbags in your vehicle to be deactivated, and which ones. ■

Switch for the front seat passenger airbags*

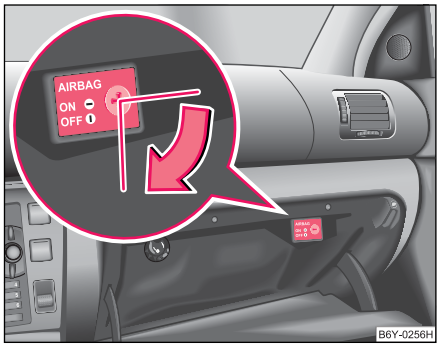


Fig. 135 Storage compartment: Switch for the front seat passenger airbags



Fig. 136 Indicator light for a switched off front seat passenger airbag

The front and side passenger airbag is deactivated with the switch.

Deactivating airbags

– Switch off the ignition.

– Turn the slot of the airbag switch using the main or emergency key in the direction of the arrow to the position **OFF** ⇒ fig. 135. The slot of the airbag switch must be located in the vertical position.

– Check whether the airbag indicator light **AIRBAG OFF** in the middle of the dash panel lights up ⇒ fig. 136 when the ignition is turned on.

Switching on airbags

– Switch off the ignition.

– Turn the slot of the airbag switch using the main or emergency key in the opposite direction of the arrow to the position **ON** ⇒ page 155, fig. 135. The slot of the airbag switch must be located in the horizontal position.

– Check whether the airbag indicator light **AIRBAG OFF** in the middle of the dash panel lights up ⇒ page 155, fig. 136 when the ignition is turned on.

The airbags should only be switched off under exceptional circumstances ⇒ page 154.

Indicator light AIRBAG OFF (airbag switched off)

The airbag indicator light in the middle of the dash panel does not light up ⇒ page 155, fig. 136.

If the front passenger airbag is **switched on**, the airbag warning light comes on for a few seconds each time the ignition is switched on.

When the front and side passenger airbag is **switched off**, the indicator light comes on after the ignition is switched on.

There is a system fault present in the airbag switch off ⇒ ⚠ if the indicator light flashes. **Please have the vehicle inspected without delay by a Škoda dealer.**

⚠ WARNING

- **Only switch off the airbag when the ignition is switched off! Otherwise a fault can arise on the airbag system and therefore could cause the airbag to trigger.**
- **The driver is responsible for whether the airbag is switched on or switched off.**
- **If the indicator light flashes:**

⚠ WARNING (continued)

– **There is a risk of the front passenger airbag or the side passenger airbag not being deployed in the event of an accident.**

– **There is the risk, if someone is sitting on the front passenger seat, that the front passenger will suffer injury if the airbag is suddenly deployed.**

Transporting children safely

What you should know about transporting children!

An introduction to the subject

Accident statistics have revealed that children are generally more safely transported on the rear seats than on the front passenger seat.

Children younger than 12 years of age should normally travel on the rear seat of the vehicle (take note of any national legal provisions which differ from this). They should be secured there by means of a child restraint system or by using the existing seat belts depending on their age, body size and weight. The child seat should be mounted behind the front passenger seat for safety reasons.

The physical principle of an accident does, of course, also apply to children ⇒ page 139. They differ from adults in that their muscles and bone structure of children are not yet fully developed. Thus children are exposed to increased risk of injury.

Children should be transported by using special child safety seats in order to reduce this risk of injury.

Use only child safety seats which are officially approved and are suitable for children and which comply with the ECE-R 44 Standard, which classifies child safety seats into 5 groups ⇒ page 161, “Classification of child seats into groups”. Child restraint systems which have been tested for conformity with ECE-R 44 have a non-detachable test seal (a large E within a circle and below this the test number) attached to the seat.

We recommend that you use child safety seats from the Škoda range of genuine accessories. These child seats were developed and also tested for use in Skoda vehicles. They fulfil the standard ECE-R 44.

WARNING

Always comply with legal provisions and instructions from the relevant child seat manufacturer when installing and using the child seat ⇒ ⚠ in “Important safety information on using child safety seats”.

Note

Any varying national legal regulations take priority over the information provided in these instructions for use, or stated in this chapter. ■

Important safety information on using child safety seats

Correct use of child safety seats considerably reduces the risk of injury!

WARNING

- **All the occupants of the car - in particular children - must wear a seat belt when the car is moving.** ▶

WARNING (continued)

- **Children less than 1.50 m in height or younger than 12 years must not use a normal seat belt without a child restraint system otherwise this may result in injuries to the stomach and neck areas. Comply with the national legal requirements.**
- **One should never carry children, and also not babies! - on one's lap.**
- **You can transport a child safely in a suitable child safety seat ⇒ page 161, “Child seat”!**
- **Only one child may be fastened with a seat belt into a child safety seat.**
- **Never leave the child sitting unattended in the seat.**
- **Never allow your child to be transported in a vehicle without the use of a suitable restraint system.**
- **Children should also never stand up in a vehicle or kneel on the seats when the vehicle is moving. In the event of an accident the child will be thrown through the vehicle and may as a result suffer fatal injuries, and also injure other occupants.**
- **Children are exposed to an increased risk of injury in the event of an accident if they lean forward or adopt an incorrect seated position when the vehicle is moving. This particularly applies to children who are transported on the front passenger seat if the airbag system deploys in the event of an accident. This can result in severe or even fatal injuries.**
- **It is important that the belt webbing is properly routed if the seat belts are to offer their maximum protection ⇒ page 141, “How are seat belts correctly fastened?”. Pay particular attention to the information provided by the manufacturer of the child safety seat regarding correct routing of the belt. Seat belts which are not correctly adjusted can themselves cause injuries even in minor accidents.**

WARNING (continued)

- **Safety belts must be checked to ensure that they are running properly. One should also ensure that the belt is not damaged by sharp-edged fittings.**
- **It is essential to always switch off ⇒ page 154 the front passenger airbag when attaching a child safety seat on the front passenger seat where the child is seated with its back facing in direction of travel (in some countries also when the child is facing the direction of travel). If this is not done, there is a risk of the child suffering severe or even fatal injuries if the front passenger airbag is deployed. In certain countries national legal provisions also require that the side or head passenger airbags be deactivated. When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats.**
- **Particular care is required if use is made of child restraint systems which are attached together with the seat belts fitted to the vehicle. It is important to ensure that the bolts are inserted into the threaded hole over their entire length and are tightened to a torque of 35 Nm.**

Use of child safety seats on the front passenger seat

Child safety seats should always be attached to the rear seats.

We recommend, for safety reasons, that you always mount a child restraint systems on the rear seats whenever possible. If you still decide, however, to use a child safety seat on the front passenger seat then you must pay attention to the following warnings in connection with the use of the airbag system on the front passenger seat:

WARNING

- Warning - particular hazard! Never use a child safety seat on the front passenger seat in which the child is seated with its back facing the direction of travel. This child safety seat is positioned in the deployment area of the front passenger airbag. The airbag may cause the child severe, or even fatal injuries, in the event of it being deployed.
- This is also clearly stated on the sticker which is located on the centre column of the front passenger side. The sticker is visible upon opening the front passenger door. The next warning sticker is located on the windscreen near the front passenger seat.
- It is essential to always switch off ⇒ page 154 the front passenger airbag when attaching a child safety seat on the front passenger seat where the child is seated with its back facing in direction of travel (in some countries also when the child is facing the direction of travel). If this is not done, there is a risk of the child suffering severe or even fatal injuries if the front passenger airbag is deployed. In certain countries national legal provisions also require that the side or head passenger airbags be deactivated. When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats.
- If the front passenger airbag has been switched off by a Škoda dealer using the vehicle system tester, the side and head passenger airbag* remains switched on. The national legal provisions in certain countries require that both the front, side and head airbags be deactivated. Please comply with any differing national legal regulations regarding the use of child safety seats.
- If a child safety seat in which the child faces in the direction of travel is used on the front passenger seat, the front passenger seat must be moved back fully.

WARNING (continued)

- If this is not done, a child seated on the front passenger seat may suffer severe or even fatal injuries if the front passenger airbag or airbags are deployed. Have the airbag (or airbags) deactivated if necessary ⇒ page 154.
- You should have the front passenger airbag (or airbags) reactivated by your Škoda dealer just as soon as you no longer use a child safety seat on the front passenger seat.

Child safety and side airbags

Children must never be seated in the deployment area of the side airbags and head airbags.

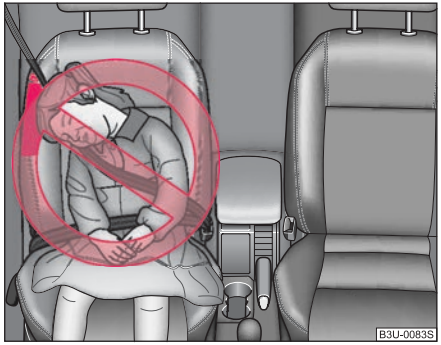


Fig. 137 Seated position of an unprotected child at risk from side airbag

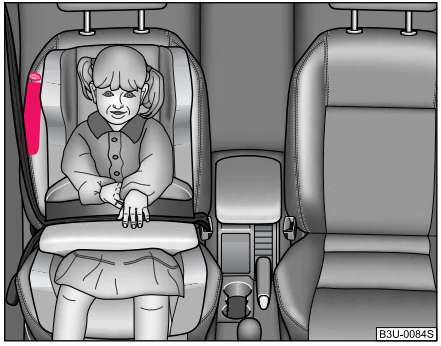


Fig. 138 Child properly protected by safety seat

In the event of a side collision, the side airbags offer the vehicle occupants enhanced protection.

The side airbags are inflated in fractions of a second in order to be able to provide this protection ⇒ page 150, “Function of the side airbags”.

An airbag inflating develops such a strong force that an occupant who has not adopted an upright seated position may suffer injuries from the airbag or as a result of objects which are located within the deployment area of the side airbag.

This applies particularly to children if they are not transported in accordance with legal requirements.

Correct seated position of the child - a suitable child safety seat protects the child.

The child is protected when seated in a child safety seat matching its age. Adequate room is available between the child and the deployment area of the side airbag and head airbag. The airbag offers optimal protection.

WARNING

- **It is essential to always switch off ⇒ page 154 the front passenger airbag when attaching a child safety seat on the front passenger seat where the child is seated with its back facing in direction of travel (in some countries also when the child is facing the direction of travel). If this is not done, there is a risk of the child suffering severe or even fatal injuries if the front passenger airbag is deployed. In certain countries national legal provisions also require that the side or head passenger airbags be deactivated. When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats.**
- **When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats.** ▶

WARNING (continued)

- **Children must never be seated with their head in the deployment area of the side airbag. Risk of injury!**
- **Do not place any objects within the deployment area of the side airbag. Risk of injury!**

Child seat

Classification of child seats into groups

Only child safety seats which have an official approval and are suitable for the child, may be used.

ECE-R 44 standard applies to child safety seats. ECE-R means: Economic Commission of Europe - Regulation.

Child restraint systems which have been tested for conformity with ECE-R 44 have a non-detachable test seal (a large E within a circle and below this the test number) attached to the seat.

Child safety seats are classified in 5 groups:

Group	Weight	
0	0 -10 kg	⇒ page 162
0+	up to 13 kg	⇒ page 162
1	9 -18 kg	⇒ page 162
2	15 -25 kg	⇒ page 163
3	22 -36 kg	⇒ page 164

Children of more than 150 cm in height may use the seat belts fitted to the vehicle without a seat bolster.

Use of child seats

An overview of the usefulness of child seats on each of the seats:

Child seat according to group	Front passenger seat	Rear seat on the side	Rear seat middle
0	U	U	U
0+	U	U	U
1	U	U	U
2 and 3	U	U	U

U - universal category - seat is suitable for all approved types of child safety seats.

Child seats of group 0/0+

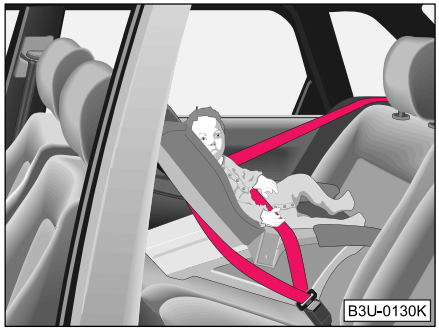


Fig. 139 Child seats of group 0/0+

The optimal solution for babies of up to about 9 months old weighing up to 10 kg or babies up to about 18 months old weighing up to 13 kg is a child safety seat which can be adjusted into the reclining position ⇒ page 162, fig. 139.

In view of the fact that such child seats are installed that the child is seated with its back facing the direction of travel, they must not be used on the front passenger seat⇒ page 158, “Use of child safety seats on the front passenger seat”.

⚠ WARNING

- **It is essential to always switch off the front passenger airbag (airbags) when attaching in exceptional circumstances a child safety seat on the front passenger seat where the child is seated with its back facing in direction of travel (in some countries also when the child is facing the direction of travel).**

  – **by allowing a Skoda dealer to do this**

⚠ WARNING (continued)

  – **or by using the switch for the front passenger airbag* ⇒ page 155.**

- **The national legal provisions in certain countries require that both the front, side and head airbags be deactivated. Please comply with any differing national legal regulations regarding the use of child safety seats.**
- **If this is not done, a child seated on the front passenger seat may suffer severe or even fatal injuries if the front passenger airbag or airbags are deployed.**
- **You should have the front passenger airbag (or airbags) reactivated by your Škoda dealer just as soon as you no longer use a child safety seat on the front passenger seat.**

Child safety seats in Group 1

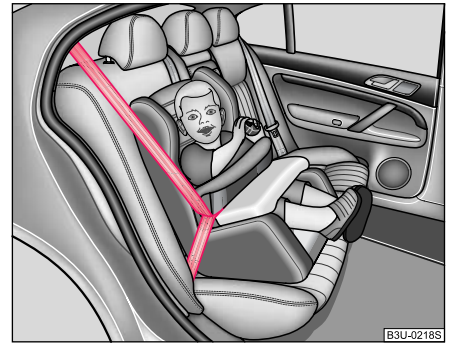


Fig. 140 Child seat with padded table in Group 1 installed on rear seat facing the direction of travel

Child seats in Group 1 are for babies and small children up to 4 years of age with a weight of between 9 and 18 kilograms. It is best for children in the lower range of this group, to use a child seat which allows the child to sit with its back to the direction of travel. It is best for children in the upper range of the Group 0+, to use a child seat which allows the child to sit ⇒ fig. 140 in the direction of travel.

Child safety seats in which the child is seated with its back facing the direction of travel, must not be used on the front passenger seat ⇒ page 158, “Use of child safety seats on the front passenger seat”.

WARNING

- **It is essential to always switch off the front passenger airbag (airbags) when attaching in exceptional circumstances a child safety seat on the front passenger seat where the child is seated with its back facing in direction of travel (in some countries also when the child is facing the direction of travel).**
  - **by allowing a Skoda dealer to do this**
  - **or by using the switch for the front passenger airbag* ⇒ page 155.**
- **The national legal provisions in certain countries require that both the front, side and head airbags be deactivated. Please comply with any differing national legal regulations regarding the use of child safety seats.**
- **If this is not done, a child seated on the front passenger seat may suffer severe or even fatal injuries if the front passenger airbag or airbags are deployed.**
- **You should have the front passenger airbag (or airbags) reactivated by your Škoda dealer just as soon as you no longer use a child safety seat on the front passenger seat.**

Child safety seats in Group 2

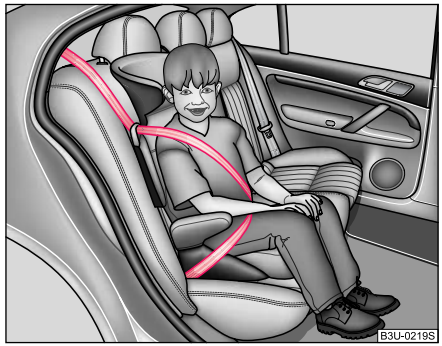


Fig. 141 Child seat in Group 2 installed on the rear seat facing the direction of travel

For children up to about 7 years of age weighing between 15 and 25 kg the optimal solution is a child safety seat in combination with the three-point seat belt ⇒ fig. 141.

WARNING

- **When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats. If required, the airbag has to be deactivated,**
  - **by allowing a Skoda dealer to do this**
  - **or by using the switch for the front passenger airbag* ⇒ page 155.**

WARNING (continued)

- **The shoulder part of the seat belt must run approximately across the middle of the shoulder and fit snugly against the chest. It must on no account run across the neck. The lap part of the seat belt must run across the pelvis and fits snugly; it must not run over the belly. Tighten the belt webbing over your hip if necessary.**
- **Please comply with any differing national legal regulations regarding the use of child safety seats.**

Child safety seats in Group 3

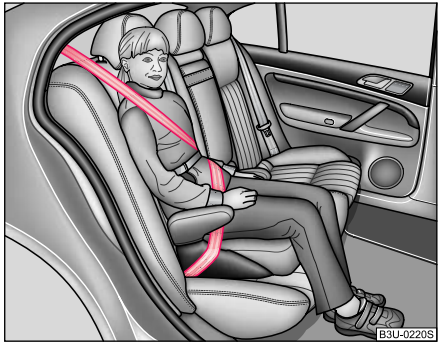


Fig. 142 Child seat in Group 3 installed on the rear seat facing the direction of travel

For children of about 7 years of age weighing between 22 and 36 kg and of a height of less than 150 cm, the optimal solution is a child safety seat (seat bolster) in combination with the three-point seat belt ⇒ fig. 142.

Children of more than 150 cm in height may use the seat belts fitted to the vehicle without a seat bolster.

WARNING

- **When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats. If required, the airbag has to be deactivated,**
  - **by allowing a Skoda dealer to do this**
  - **or by using the switch for the front passenger airbag* ⇒ page 155.**
- **The shoulder part of the seat belt must run approximately across the middle of the shoulder and fit snugly against the chest. It must on no account run across the neck. The lap part of the seat belt must run across the pelvis and fits snugly; it must not run over the belly. Tighten the belt webbing over your hip if necessary.**
- **Please comply with any differing national legal regulations regarding the use of child safety seats.**

Attaching child safety seat

Child seat protection

You can block the three-point seat belt in order to attach a child safety seat.

You can permanently block the three-point seat belt in order to attach a child safety seat. Blocking the belt in this way ensures that the child seat is held firmly in position in the car.

Activating child seat protection

– Attach the child safety seat with the three-point seat belt as stated in the instructions of the manufacturer of the child seat.

– Now, pull the shoulder part of the belt out fully.

– Insert the tongue of the lock into the seat belt buckle belonging to the seat until it is heard to lock in place.

– Reel up the belt webbing until it is fitted snugly against the child seat. When the belt is reeled up, this can be detected by a “clicking” noise.

– Pull on the belt in order to check that it is no longer possible to pull out the webbing. The child seat protection is now switched on.

Deactivating child seat protection

– Press the red button on the seat belt buckle. The tongue of the lock jumps out of the buckle as a result of the spring force when this is done.

– Guide the belt back with your hand to enable the inertia reel to wind up the belt webbing more easily. The child safety lock is deactivated after the full reeling up of the belt.

WARNING

It is essential to always switch off ⇒ page 154 the airbag (airbags) when attaching a child safety seat on the front passenger seat where the child is seated with its back facing in direction of travel (in some countries also when the child is facing the direction of travel). If this is not done, there is a risk of the child suffering severe or even fatal injuries if the front passenger airbag is deployed. In certain countries national legal provisions also require that the side or head passenger airbags be deactivated. When transporting a child on the front passenger seat, please comply with the appropriate national regulations regarding the use of child safety seats.

Attaching a child seat using the “ISOFIX” system*

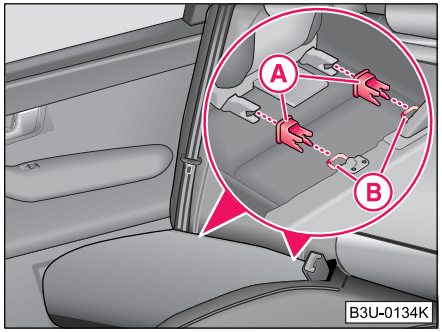


Fig. 143 Locking eyes (ISOFIX system)

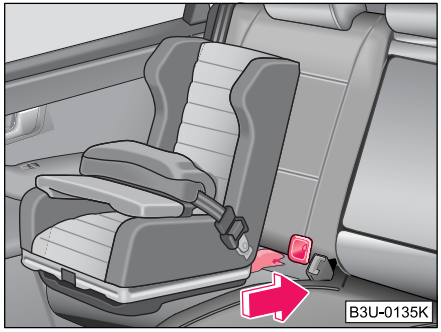


Fig. 144 The ISOFIX child seat is pushed into the mounting funnels

There are two fixing eyes between the backrest and the seat itself on both of the outer rear seats for fixing the “ISOFIX” system child seat in place.

– Insert the mounting funnels Ⓐ onto the locking eyes Ⓑ between the backrest and seat cushion ⇒ fig. 143.

– Push the notched arms of the child seat over the mounting funnels into the locking eyes, until it is heard to lock ⇒ fig. 144.

– **Pull on both sides of the child seat!**

“ISOFIX” system can be mounted quickly, easily and reliably. Please pay close attention to instructions from the manufacturer of the child safety seat when installing and removing the seat.

Child seats fitted with the “ISOFIX” clamping system can only be mounted and fixed in a vehicle fitted with an “ISOFIX system” when these child seats have been released for your type of vehicle according to the ECE-R 44 standard.

You can obtain child seats with the “ISOFIX” attachment system from Škoda dealers who will also installed it as well.

Complete installation instructions are enclosed with the child safety seat.

WARNING

- **The locking eyes have just been developed for child safety seats which use the “ISOFIX” system. You should therefore never attach other child safety seats, seat belts or objects to the locking eyes - hazard!**
- **Ask a Škoda dealer whether a child seat which you bought for another vehicle is recommended for use in a Skoda before using an “ISOFIX” system.** ▶

WARNING (continued)

- **Certain child seats which use the “ISOFIX” system can be attached with standard three-point seat belts. Please pay close attention to instructions from the manufacturer of the child safety seat when installing and removing the seat.**

Note

Child seats which use the “ISOFIX” system are currently available for children weighing from 9 up to 18 kg. This corresponds to an age range of from 9 months to 4 years. ■

Driving Tips

Intelligent Technology

Electronic stability programme (ESP)*

General



Fig. 145 ESP switch

General

The ESP aids you maintain control of your vehicle in situations in borderline driving situations such as when negotiating a curve too fast. The risk of skidding is reduced and your car thus offers greater driving stability depending on the conditions of the road surface. This occurs at all speeds.

The following systems are integrated into the electronic stability programme:

- Electronic Differential Lock (EDL)
- Traction control system (TCS)
- Antilock brake system ABS
- Brake Assist

Operating principle

The ESP switches on automatically when the engine is started and then conducts a self-test. The ESP control unit processes data from the individual systems. It also processes additional measurement data which are supplied by highly sensitive sensors: the rotational velocity of the vehicle about its vertical axis, the lateral acceleration of the vehicle, the braking pressure and the steering angle.

The direction which the driver wishes to take is determined based on the steering angle and the speed of the vehicle and is constantly compared with the actual behaviour of the vehicle. If differences exist, such as the car beginning to skid, the ESP will automatically brake the appropriate wheel and reduce the engine speed.

The car is stabilised again by the forces which take effect when the wheel is braked. Intervention into the brake system takes place primarily on the outer front wheel of a vehicle which tends to oversteer (tendency for the rear of the vehicle to break away) while occurs this is on the inner rear wheel of a vehicle which tends to understeer (tendency to shift out of the curve). This braking control cycle is accompanied by noises.

The ESP operates in combination with the ABS ⇒ page 173. If there is a fault in the ABS system, the ESP also does not operate.

The ESP warning light ⇒ page 34 lights up in the instrument cluster when there is a fault on the ESP.

Switching off

You can switch the ESP off and on again as you wish, by pressing the button ⇒ page 169, fig. 145. The ESP warning light ⇒ page 34 lights up in the instrument cluster when the ESP is switched off.

The ESP should normally always be switched on. It may be good practice to switch the system off only in particular exceptional situations if you desire wheel slip.

Examples:

- when driving with snow chains
- when driving in deep snow or on a loose surface
- when it is necessary to rock a car free when it has become stuck

then you should switch on the ESP again.

WARNING

It is also not possible for the ESP to overcome the physical limits of the vehicle. Even if a vehicle fitted with ESP you should still always adapt your style of driving to the condition of the road surface and the traffic situation. This particularly applies when driving on slippery and wet roads. The increased safety offered must not tempt you to take greater risks than otherwise - risk of an accident!

Note

- All four wheels must be fitted with the same tyres in order to achieve problem-free operation of the ESP. Differing rolling circumferences of the tyres can lead to an undesirable reduction in the engine output.
- Changes to vehicle (e.g. on engine, on the brakes, on chassis or other assignment of tyres and wheels) can influence the function of the ESP ⇒ page 226. ■

Traction control system (TCS)*

The traction control system prevents the driven wheels from spinning when accelerating.



Fig. 146 TCS switch

General

The TCS makes it much easier, and sometimes at all possible, to start off, accelerate and climb a steep hill when the conditions of the road surface are unfavourable.

Operating principle

The TCS switches on automatically when the engine is started and then conducts a self-test. The system monitors the speeds of the driven wheels with the aid of the ABS sensors. If the wheels are spinning, the force trans- ▶

mitted to the road surface is automatically adapted by reducing the engine speed. This occurs at all speeds.

The TCS operates in combination with the ABS ⇒ page 173. The TCS will not function if a fault exists in the ABS system.

The TCS warning light ⇒ page 34 lights up in the instrument cluster when there is a fault on the TCS.

Switching off

You can switch the TCS off and on again as you wish by pressing the button ⇒ page 170, fig. 146. The TCS warning light ⇒ page 28 lights up in the instrument cluster when the TCS is switched off.

The TCS should normally always be switched on. It may be good practice to switch the system off only in particular exceptional situations if you desire wheel slip.

Examples:

- when driving with snow chains
- when driving in deep snow or on a loose surface
- when it is necessary to rock a car free when it has become stuck

then you should switch on the TCS again.

The EDL ⇒ page 171 is a part of the TCS. THE EDL operates independently of the TCS (also when the TCS has been switched off using the TCS button).

WARNING

You should always adjust your style of driving to the conditions of the road surface and the traffic situation. The increased safety offered must not tempt you to take greater risks than otherwise - risk of an accident!

Note

- All four wheels must be fitted with the same tyres in order to achieve problem-free operation of the TCS. Differing rolling circumferences of the tyres can lead to an undesirable reduction in the engine output.
- Changes to vehicle (e.g. on engine, on the brakes, on chassis or other assignment of tyres and wheels) can influence the function of the TCS ⇒ page 226. ■

Electronic Differential Lock (EDL)*

The electronic differential lock prevents an individual wheel from slipping.

General

The EDL makes it much easier, and sometimes at all possible, to start off, accelerate and climb a steep hill when the conditions of the road surface are unfavourable.

Operating principle

The EDL is activated automatically, that is without any action on the part of the driver. It monitors the speeds of the driven wheels with the aid of the ABS sensors. Should only **one** drive wheel begin spinning on a slippery surface there will be an appreciable difference in the speed of the driven wheels. The EDL function brakes the slipping wheel and the differential transmits a greater driving force to the other driven wheel. This control process is also accompanied by noises.

Overheating of the brakes

The EDL switches off automatically if unusually severe stresses exist in order to avoid excessive heat generation in the disc brake on the wheel which is being braked. The vehicle can continue to be driven and has the same characteristics as a vehicle not fitted with EDL.

The EDL switches on again automatically as soon as the brake has cooled down.

WARNING

- **Depress the accelerator carefully when accelerating on uniformly slippery road surfaces, such as ice and snow. The driven wheels might still spin despite the EDL and affect the stability of the vehicle - risk of an accident!**
- **You should always adapt your style of driving to the condition of road surface and to the traffic situation even when your vehicle is fitted with EDL. The increased safety offered must not tempt you to take greater risks than otherwise - risk of an accident!**

Note

- If the ABS warning light comes on, this may also indicate a fault in the EDL. Please have the vehicle inspected as soon as possible by a Škoda dealer.
- Changes to vehicle (e.g. on engine, on the brakes, on chassis or other assignment of tyres and wheels) can influence the function of the EDL ⇒ page 226. ■

Brakes

What has a negative effect on braking efficiency?

Wear-and-tear

Wear-and-tear to the brake pads is greatly dependent on the operating conditions of the vehicle and your style of driving. Particularly if you drive a great deal in towns and over short distances or if you adopt a sporty style of driving, it may be necessary to have the thickness of the brake pads inspected at a Škoda Dealer between the service inspections.

Wet roads or road salt

There may be a certain delay before the brakes take full effect under certain conditions such as when driving through water, during heavy rain showers or after the vehicle has been washed in an automatic vehicle wash, since the brake discs and brake pads may be moist or even have a coating of ice on them in winter. You should dry the brakes as soon as possible (by applying and releasing the brakes several times, if the road conditions and the traffic situation allows it).

There also may be a certain delay before the full braking efficiency is available when driving on roads which have been treated with road salt if you have not used the brakes for some considerable time beforehand. The layer of salt on the brake discs and brake pads must first be rubbed off when you apply the brakes.

Corrosion

We recommend cleaning the brake discs by firmly applying the brakes at a fairly high speed if you do not make much use of the braking system or if surface corrosion is present ⇒ ⚠.

Faults in the brake surface

The brake booster operates using vacuum which is only generated when the engine is running. This is why you should not drive off with engine switched off!

The brake pedal has to be depressed with a significantly greater force if the brake booster is not operating because the vehicle has to be towed or because there is damage to the brake booster, in order to balance out the missing brake boosting effect.

If you notice that the braking distance has suddenly become longer and that the brake pedal can be depressed further, it is possible that a brake circuit of the dual-circuit brake system has failed. Drive, in such cases, to the nearest Škoda dealer without delay in order to have the problem recti- ▶

fied. Drive at a reduced speed while on your way to the dealer and adapt your style of driving to the higher brake pedal pressure required.

Low brake fluid level

An insufficient level of brake fluid may result in problems in the brake system. The level of the brake fluid is monitored electronically ⇒ page 35.

WARNING

- **Only apply the brakes for the purpose of drying and cleaning the brake discs if the traffic conditions permit this. Do not place any other road users in jeopardy.**
- **When retrospectively mounting a front spoiler, solid wheel hubs etc. one must ensure that the air supply to the front wheel brakes is not reduced otherwise the braking system could run too hot.**
- **Allow for the fact that new brake pads do not achieve their full braking efficiency until approximately 200 kilometres. New brake pads must be first "run in" before they develop their optimal friction force. You can, however, compensate for this slightly reduced braking force by increasing the pressure on the brake pedal. This guideline also applies to any new brake pads installed at a future date.**

Caution

- Never allow the brakes to rub by applying slight pressure if you do not wish to brake the vehicle. This causes the brakes to overheat and can also result in a longer braking distance and excessive wear.
- Before negotiating a steep downhill section, please reduce your speed, shift down into the next lower gear (manual gearbox) or select a lower driving stage (automatic gearbox). This enables you to make full use of the braking power of the vehicle and reduces the strain on the brakes. Any additional braking should be done intermittently, not continuously. ■

Antiblock brake system (ABS)

ABS prevents the wheels locking when braking.

General

The ABS contributes significantly to enhancing the active safety of your vehicle. Compared to a car not fitted with the ABS brake system, you are able to retain optimal steering ability even during a full brake application on a slippery road surface because the wheels do not lock up.

You must not expect, however, that the braking distance will be shorter under all circumstances as a result of the ABS The braking distance for example on gravel and fresh snow, when you should anyway be driving slowly and cautiously, will be longer.

Operating principle

As soon as the vehicle speed has increased to about 6 km/hour an automatic test procedure is conducted during which you will be able to hear a pumping noise for about 1 second.

The brake pressure will be reduced on a wheel which is rotating at a speed which is too low for the speed of the vehicle and tending to lock. This control cycle is noticeable from a **pulsating movement of the brake pedal** which is accompanied by noises. This is consciously intended to provide the driver with the information that the wheels are tending to lock (ABS control range). You must always keep the brake pedal depressed to enable the ABS to optimally control the brake application in this braking range. Never interrupt the application of the brakes!

WARNING

- **The ABS can also not overcome the physical limits of your vehicle. Please do not forget this, particularly when driving on icy or wet road surfaces. If the ABS is operating within the control range, adapt your speed immediately to the conditions of the road surface and the traffic situation. The increased safety offered by the ABS must not tempt you to take greater risks than otherwise - risk of an accident!**
- **The normal braking system is still fully functional if there is an ABS fault. Visit a Skoda dealer as quickly as possible and adjust your style of driving to take account of the ABS fault in the meantime since you will not know how great the damage is.**

Note

- A warning light comes on if a fault occurs in the ABS system ⇒ page 34.
- Changes to vehicle (e.g. on engine, on the brakes, on chassis or other assignment of tyres and wheels) can influence the function of the ABS ⇒ page 226. ■

Brake Assist*

During a severe brake application (e.g. if a hazard exists), the Brake Assist increases the braking force and thus makes it possible to rapidly produce the pressure required in the brake system.

The majority of drivers do apply the brakes in good time in dangerous situations, but do not depress the brake pedal with sufficient pressure. Consequently, it is not possible for the car to achieve its maximum deceleration and the car covers a greater distance than necessary.

The Brake Assist is activated by the very quick operation of the brake pedal. In such cases, a much greater braking pressure exists than during a normal brake application. This makes it possible, even with a relatively low resistance of the brake pedal, to produce an adequate pressure in the brake system in the shortest possible time, which is required for maximum deceleration of the car. You must apply the brake pedal firmly and hold it in this position in order to achieve the shortest possible braking distance.

The Brake Assist is able to help you achieve a shorter braking distance in emergency situations by rapidly producing the pressure required in the brake system. It fully exploits the attributes of the ABS. After you release the brake pedal, the function of the Brake Assist is automatically switched off and the brakes operate in the normal way.

The Brake Assist is part of the ESP system. If a fault occurs in the ESP, the Brake Assist function is also not available. Further information on the ESP ⇒ page 169.

WARNING

- **The Brake Assist is also not able to overcome the physical limits of your car in terms of the braking distance required.**
- **Adapt your speed to the conditions of the road surface and to the traffic situation.**
- **The increased safety offered by the Brake Assist must not tempt you to take a greater safety risk than otherwise.** ■

Power steering

Power steering assists the driver in steering the vehicle and reduces the physical force needed for steering. ▶

It is still possible to fully steer the vehicle if the power steering fails or if the engine is not running (vehicle being towed in). The only difference is that greater physical effort is required.

If the steering is turned to **full** lock when the car is stationary, you will place great stresses on the power steering system. Turning the steering to full lock in such a situation will be accompanied by noises. In addition, the idling speed of the engine will drop briefly.

Caution

Do not leave the steering at full lock for more than 15 seconds when the engine is running - risk of damaging the power steering!

Note

- Have the steering inspected as soon as possible by a Škoda dealer if there is a leak or fault in the system.
- The power steering requires a special hydraulic oil. The oil reservoir is located at the front left of the engine compartment ⇒ page 204. The correct hydraulic oil level is important for proper operation of the power steering system. ■

Driving and the Environment

The first 1 500 kilometres and then afterwards

A new engine

The engine has to be run in during the first 1 500 kilometres.

Up to 1 000 kilometres

– Do not drive faster than 3/4 of the mamimum speed of the gear in use, that is 3/4 of the maximum permissible engine speed.

– Do not use full throttle.

– Avoid high engine revolutions.

– Do not tow a trailer.

From 1 000 up to 1 500 kilometres

– Increase the power output of the engine **gradually** up to the full speed of the gear engaged, that is up to the maximum permissible engine revolutions.

During the first operating hours the engine has higher internal friction than later until all of the moving parts have harmonized. The driving style which you adopt during the first 1 500 kilometres plays a decisive part in the success of running in your car.

You should not drive at unnecessarily **high engine revolutions** even after the running-in period is complete. The maximum permissible engine speed is marked by the beginning of the red zone on the scale of the revolutions counter. Shift up into the next higher gear on a vehicle fitted with manual gearbox before the red zone is reached. **Extremely** high engine revolutions are automatically governed, by the way.

For a vehicle fitted with a manual gearbox the converse situation also applies: Do not drive at engine revolutions which are **too low**. Shift down as soon as the engine is no longer running smoothly.

Caution

All the speed and engine revolution figures apply only when the engine is at its normal operating temperature. Never rev up an engine which is cold, neither when the vehicle is stationary nor when driving in individual gears.

For the sake of the environment

Not driving at unnecessarily high engine revolutions and shifting to a higher gear as early as possible are ways to minimise fuel consumption and operating noise levels and protects the environment. ■

New tyres

New tyres have to be “run in” since they do not offer optimal grip at first. You should take account of this fact for the first 500 kilometres and drive particularly carefully. ■

New brake pads

Allow for the fact that new brake pads do not achieve their full braking efficiency until after the first 200 kilometres. New brake pads must be first “run in” before they develop their optimal friction force. You can, however, compensate for this slightly reduced braking force by increasing the pressure on the brake pedal.

This guideline also applies to any new brake pads installed at a future date.

During the running-in period, you should avoid excessive stresses on the brakes. This includes, for example, violent braking, particularly from very high speeds, and also when crossing mountain passes. ■

Catalytic converter

Proper operation of the emission control system (catalytic converter) is of major significance for driving your vehicle in an environmentally conscious way.

Please refer to the following guidelines:

– Always fill the fuel tank with unleaded petrol ⇒ page 198, “Grades of petrol”.

– Never run the fuel tank completely empty.

– Do not switch off the ignition while you are driving the vehicle.

– Do not pour too much oil into the engine ⇒ page 207, “Replenishing engine oil”.

– Do not tow-start the vehicle over a distance of more than 50 metres ⇒ page 239, “Tow-starting a vehicle”.

If you drive your vehicle in a country in which unleaded petrol is not available, you must have the catalytic converter replaced later when driving the vehicle into a country in which use of a catalytic converter is mandatory.

WARNING

- **In view of the high temperatures which may be produced in the catalytic converter, one should always park a vehicle in such a way that the catalytic converter cannot come into contact with easily flammable materials below the vehicle - a risk of fire!**
- **Never use additional underbody protection or corrosion-protection agents for the exhaust pipes, catalytic converters or heat shields. Such substances might ignite when driving - risk of fire!**

Caution

- Vehicles fitted with catalytic converter should never be allowed to let the fuel tank to run completely empty. An irregular fuel supply can result in poor ignition or misfiring. Unburnt fuel may get into the exhaust system and damage the catalytic converter.
- Filling the tank even only once with leaded petrol will result in the catalytic converter being destroyed.
- If you detect misfiring, a drop in performance or irregular engine running when driving, reduce your speed immediately and have the vehicle inspected by the nearest Škoda dealer. The symptoms described may be caused by a fault in the ignition system. Unburnt fuel may get into the exhaust system and damage the catalytic converter.

For the sake of the environment

Even if the exhaust system is operating properly, a sulphur-like exhaust odour may be produced under certain operating conditions of the engine. This depends on the sulphur content of the fuel. It is often sufficient to refuel with unleaded premium-grade petrol of a different brand or at a different filling station. ■

Motoring abroad

General

Other circumstances may exist abroad.

It is also possible, in certain countries, that the Skoda dealership network has not been established yet. This is the reason why obtaining certain spare parts may be somewhat complicated and specialist garage personnel may only be able to make limited repairs. Škoda Auto in the Czech Republic and relevant importers are happy to provide information about technical aspects of the vehicle, required maintenance work and possibilities for getting repairs done. ■

Unleaded petrol

A vehicle fitted with a catalytic converter must always be refuelled with unleaded petrol ⇒ page 177. The automobile associations can provide you with information regarding the locations of filling stations which offer unleaded petrol. ■

Headlights

The low beam of your headlights is set asymmetrically. It illuminates the side of the road on which you are driving to a greater extent. If you drive abroad on the other side of the road, you will dazzle oncoming traffic.

It is necessary in order to avoid dazzling oncoming traffic to stick a sticker over a certain part of the headlights.

Windscreen wiper stickers are available at Škoda dealers.

Headlights with Xenon lamps are designed for driving in countries with traffic on the right or on the left. Have this done always at a Škoda dealer.

Note

You can obtain further information regarding masking over or converting the headlights from your Škoda Dealer. ■

Avoiding damage to your vehicle

When driving on poor roads and lanes or when driving over kerbstones, steep ramps etc., you must pay particular attention to ensuring that any low-slung parts of the vehicle, such as spoiler and exhaust, do not touch the ground and get damaged.

This particularly applies to models with a lowered suspension (sport suspension) and also when your vehicle is fully laden. ■

Driving in an economical and environmentally conscious manner

General

Your personal style of driving is a major factor.

Your fuel consumption, any pollution of the environmental and the wear-and-tear to the engine, brakes and tyres, depend essentially on three factors:

- your personal style of driving
- the conditions under which your vehicle is operated
- technical aspects.

You can easily improve your fuel economy by 0 - 15 percent by driving in an economical way with foresight. This section is intended to provide you with a number of tips on how to protect the environment and at the same time save money.

The fuel consumption can naturally also be influenced by factors which are beyond the driver'scontrol. It is, for example, normal for the fuel consumption to increase in winter and under worsened conditions such as poor road conditions, towing a trailer, etc.

The technical requirements for low fuel usage and economic efficiency of the vehicle have already been built into the vehicle at the works. Special attention has been given to minimising negative effects on the environment. It is necessary to take note of the guidelines given in this chapter in order to make best use of these characteristics and to maintain their effectiveness. ■

Looking ahead when driving

A vehicle's highest fuel consumption occurs it accelerates.

Avoid accelerating and braking unnecessarily. If you drive with forsight you will not need to brake so often and will also then not have to accelerate so much. Let your vehicle coast to a stop, for example, if this is possible, when you see that the next set of traffic lights is at red. ■

Shifting gears and saving energy

Shifting up early saves on fuel.

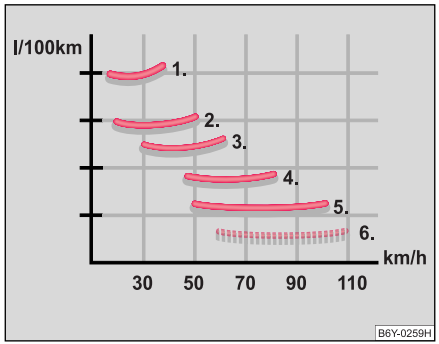


Fig. 147 Fuel consumption in litres/100 km. and speed in km/h.

Manual gearbox

– Drive no more than about one length of your vehicle in first gear. Shift up into the next higher gear at about 2 000 revs. ▶

Automatic gearbox

– Depress the accelerator pedal **slowly**. Do not depress it beyond the kickdown position, however.

An effective way of achieving good fuel economy is to shift up **early**. You will consume more fuel if you drive at unnecessarily high revolutions in any given gear.

The ⇒ page 179, fig. 147 shows the ratio of fuel consumption to the speed of your vehicle for the individual gears. Fuel consumption in 1st gear is the highest, while that in 5th or the 6th gear is the lowest.

Only depress the accelerator pedal slowly if your vehicle is fitted with an automatic gearbox in order to automatically select an economic driving programme. You will achieve good fuel economy by shifting up early and shifting down late. This applies in particular if you make use of the manual mode (Tiptronic) for shifting gears.

Note

Also use the information supplied by the multi-functional indicator ⇒ page 18. ■

Avoiding full throttle

Driving more slowly means saving fuel.

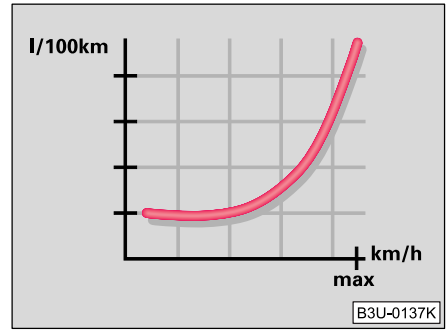


Fig. 148 Fuel consumption in litres/100 km. and speed in km/h.

Sensitive use of the accelerator will not only significantly reduce fuel consumption but also positively influence environmental pollution and wear of your vehicle.

You should avoid fully exploiting the top speed of your vehicle wherever possible. Fuel consumption, pollutant emissions and vehicle noises increase disproportionally at high speeds.

The ⇒ fig. 148 shows the ratio of fuel consumption to the speed of your vehicle. You will cut your fuel consumption by half if you only make use three-quarters of the possible top speed of your vehicle. ■

Reducing idling

Idling also costs fuel.

It is worthwhile switching off the engine in a traffic jam or when waiting at a level crossing or at traffic lights with a lengthy red phase. Even after just 30 - 40 seconds you will have saved more fuel than that is needed when you start the engine up again.

If an engine is only idling it takes much longer for it to reach its normal operating temperature. Wear-and-tear and pollutant emissions, though, are particularly high in the warming-up phase. This is why you should drive off right after starting the engine. Do avoid high engine revolutions at this time, however. ■

Regular servicing

A poorly tuned engine consumes an unnecessarily high amount of fuel.

Having your vehicle serviced regularly at a Škoda Dealer enables you to satisfy **one** of the requirements for economical motoring even before you set off on your journey. Keeping your vehicle properly serviced not only has a positive effect on the safety of your vehicle and maintaining its value, but also saves on **fuel**.

A poorly tuned engine can result in a fuel consumption which is 10% higher than normal.

The foreseen maintenance work should be undertaken exactly according to the service plan by a Škoda dealer.

Also check the **oil level** after refueling. **Oil consumption** is dependent to a considerable extent on the load and speed of the engine. Oil consumption could be as high as 0.5 litres/1 000 km depending on your style of driving.

It is quite normal that a new engine has a higher oil consumption at first, and reaches its lowest level only after a certain running in time. It is therefore not possible to correctly assess the oil consumption of a new vehicle until after you have driven about 5000 km.

For the sake of the environment

- You can achieve additional improvements in your fuel economy by using high-lubricity oils.
- Check the ground below your car at regular intervals to detect any leakages in good time. Please have your vehicle inspected by a Škoda dealer if you find any stains caused by oil or other fluids on the floor. ■

Avoid driving short distances

Short distances result in an above-average high fuel consumption.

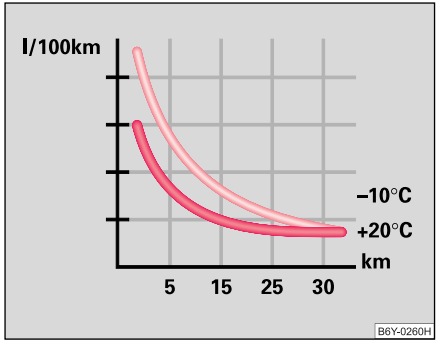


Fig. 149 Fuel consumption in litres/100 km at different temperatures

– Avoid driving a distance of no more than 4 km if the engine is cold.

The engine and catalytic converter must first have reached their optimal **operating temperature** in order to effectively reduce fuel consumption and pollutant emissions.

The cold engine of a mid-range vehicle consumes 30 - 40 litres/100 km. of fuel immediately after starting. Fuel consumption drops to 20 litres/100 km. after just 1 kilometre. The engine reaches its operating temperature only after about **four** kilometres and the fuel consumption then stabilizes. You should therefore avoid driving short distances whenever possible.

An important factor in this connection is also the **ambient temperature**. The ⇒ fig. 149 shows the different fuel consumptions for the same distance, on the one hand at +20°C and on the other hand at -10°C. Your vehicle has a higher fuel consumption in winter than in summer. ■

Checking tyre inflation pressures

Tyres which are correctly inflated save fuel.

Always ensure that your tyres are inflated to the correct pressure at all times. The rolling resistance will be increased if the tyre filling pressure is too low. This will not only increase fuel consumption but also tyre wear and the driving behaviour will worsen.

Always check the inflation pressure of the tyres when **cold**.

Do not drive with **winter tyres** all year round for this costs about 10 % more fuel. Winter tyres are also louder. ■

No unnecessary ballast

Transporting ballast costs fuel.

The fact that every kilogram of extra **weight** increases your fuel consumption means that it is worth taking a look in the luggage compartment to avoid transporting any unnecessary ballast.

It is particularly in town trafffic, when one is accelerating quite often, that the vehicle weight will have a significant effect upon the fuel consumption. A rule of thumb here is that an increase in weight of 100 kilograms will cause an increase in fuel consumption of about 1 litre/100 kilometres.

You may frequently also leave a **roof rack fitted** on just out of convenience, although you no longer need it. The increased aerodynamic drag of your vehicle causes it to use about 1 litre more fuel than normal at a speed of 100 - 120 km/h, even when you are not carrying a load on the roof. ■

Saving electricity

Generating electricity costs fuel.

– Switch off electrical components as soon as you no longer need them.

When the engine is running, the alternator generates and supplies electrical power. The greater the load on the alternator as a result of having a large number of electrical components switched on, the more fuel will be consumed for operating the alternator. ■

Keeping a log of your fuel consumption

If you really wish to keep a close check on your **fuel consumption**, it is best to enter the figures in a logbook. This does not take much time but is a very worthwhile exercise. It enables you to detect any change (positive and negative) at an early stage and to take any appropriate action.

If you find that your fuel consumption is too high, you should reflect on how, where and in what conditions you have driven the vehicle since you last refuelled. ■

Environmental compatibility

Environmental protection has played a major role in the design, selection of materials and manufacture of your new Škoda. Particular emphasis has been paid to a number of aspects, including:

Design measures

- Joints designed to be easily detached
- Simplified disassembly due to the modular structure system
- Improved purity of different classes of materials
- Identification of all plastic parts in accordance with VDA Recommendation 260
- Reduced fuel consumption and exhaust emission CO_2
- Minimum fuel leakage during accidents
- Reduced noise

Choice of materials

- Extensive use of recyclable material
- Air conditioning filled with CFC-free refrigerant
- No cadmium
- No asbestos
- Reduction in the “vaporisation” of plastics

Manufacture

- Cavity protection without using solvents
- Solvent-free protection of the vehicle for transportation from the production plant to the customer
- Use of solvent-free adhesives
- No CFCs used in the production process
- Without use of mercury
- Use of water-soluble paints ■

Towing a trailer

Towing a trailer

Technical requirements

The towing device must satisfy certain technical requirements.

Your vehicle is designed primarily for transporting persons and luggage. It can, however, also be used for towing a trailer - provided certain technical equipment is fitted.

If your vehicle has already been supplied with a **factory-fitted** towing device then everything that is necessary for towing a trailer in technical terms, and in terms of the law, has already been taken into account.

Your vehicle is fitted with a 13-pin power socket for the electrical connection between the vehicle and trailer. If the trailer which you wish to tow has a **7-pin connector**, you can use a suitable adapter cable. You can obtain such an adapter from a Škoda dealer.

This work must be carried out in accordance with the manufacturer's specifications if a towing device is retrofitted.

Škoda dealers are familiar with details relating to retrofitting a towing device and for any necessary modifications to the cooling system.

WARNING

We recommend that you have the towing device installed by a Škoda dealer. He is familiar with all the relevant details relating to retrofitting such equipment. There is a risk of an accident if the towing device is not properly fitted.

General Maintenance

There are a number of points to pay attention to when towing a trailer.

Trailer load

The permissible trailer load must on no account be exceeded.

You can negotiate appropriately steeper inclines and descents if you do not make full use of the permissible trailer load.

The trailer loads specified only apply for **altitudes** up to 1 000 metres above mean sea level. The fact that the engine power output drops with increasing height due to a lowering of air pressure and thus the ability to climb, means that the towed weight must be reduced by 10% for every further increase of 1 000 metres in height above sea level. The towed weight is the weight of the (laden) vehicle and the (laden) trailer together. One should take this into account before driving up to higher altitudes.

The trailer and drawbar load information on the type plate of the towing device are merely test data for the towing device The data relating to your vehicle, which is often less than this test data, can be found in your vehicle registration documents or in the brochure - Technical Data.

Distribution of the load

Distribute the load in the trailer in such a way that any heavy items are located as close as possible to the axle. Secure the items to prevent them slipping.

You can make full use of the permissible **drawbar load** indicated on the ball head of the towing device, but you must not **exceed this**.

Tyre inflation pressure

Select the tyre inflation pressure on your vehicle for that of “fully laden”, ⇒ page 220. The inflation pressure of the tyres fitted to the trailer adjust in accordance with the manufacturer's recommendation.

Exterior mirrors

You have to have additional exterior mirrors fitted if you are not able to see the traffic behind the trailer with the standard rear-view mirrors. Both exterior mirrors should be attached to folding arms. Adjust the mirrors so that they provide you with an adequate field of view to the rear.

Headlights

Before starting off with a hitched trailer, also check the setting of the headlights. Alter the setting as necessary with the aid of the headlight beam adjuster ⇒ page 58.

Detachable ball head

The ball rod is detachable on vehicles which feature a factory-fitted towing device. It is stowed together with separate fitting instructions in the spare wheel well in the luggage compartment of the vehicle.

Further information on the towing device ⇒ page 186.

Note

- We recommend that you also have your vehicle inspected between service intervals if you tow a trailer frequently.
- The handbrake on the towing vehicle must be put on when coupling and decoupling the trailer. ■

Driving Tips

Particular caution is required when towing a trailer.

– Do not, as far as possible, drive with your vehicle unladen and the trailer laden.

– Do not make full use of the legal maximum speeds. This applies in particular to downhill sections.

– Apply the brakes in good time.

– Keep a check on the coolant temperature gauge if the outside temperature is high.

Distribution of weight

The distribution of the weight is very poor if your vehicle is unladen and the trailer is laden. Maintain a particularly low speed if you cannot avoid driving with this combination.

Driving speed

Do not drive faster than 80 km/hour for safety reasons. This also applies for countries in which higher speeds are allowed.

The fact that the driving stability of the vehicle + trailer combination reduces with increasing speed means that the legally allowed speed should not be used when there are unfavourable road, weather or wind conditions, particularly near accident black spots.

You must always reduce your speed immediately as soon as you detect even just the **slightest swaying** of the trailer. On no account attempt to stop the trailer from “swaying” by accelerating.

Apply the brakes in good time! If the trailer is fitted with a **trailer brake**, apply the brakes gently at first, then brake firmly. This will avoid brake jolts resulting from the trailer wheels locking. Shift down gears in good time ▶

before negotiating a downhill section to allow the engine to also act as a brake.

Engine overheating

Please keep a check on the coolant temperature gauge if you have to negotiate a lengthy downhill stretch in a low gear at a high engine speed when the outside temperature is very high ⇒ page 14. If the needle of the coolant temperature gauge moves into the right-hand area or even the red area of the scale, reduce your speed immediately. Stop and switch off the engine if the warning light in the instrument cluster begins flashing. Wait a few minutes and check the level of coolant in the coolant expansion bottle ⇒ page 208.

Please refer to the following guidelines ⇒ page 31.

The coolant temperature can be reduced by switching on the heating.

Any increase in the cooling effect of the coolant fan through shifting down a gear and increasing the engine speed is not possible since the fan speed is independent of the engine speed. One should also not drop a gear for this reason when towing a trailer as long as the engine can manage the slope without any drop in speed. ■

Detachable towing device*

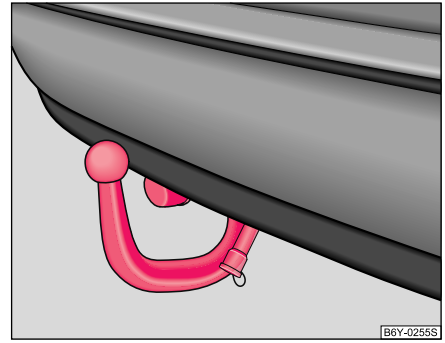


Fig. 150 Detachable ball head

The detachable ball head of the towing device is stowed in the spare wheel well in the luggage compartment.

An instruction for correct installation and removal of the ball head of the towing device is supplied with the ball head

WARNING

- **Do not use any aids or tools for installing or removing the ball head. This might result in damage to the locking mechanism to the extent that the safety of the towing device is no longer assured - risk of an accident.**

Note

- Do not carry out any modifications or repairs to the ball head or to any other components on the towing device.

- Contact a Škoda dealer if you encounter any problems using the device.
- Inspect the ball head to ensure that it is properly locked each time before setting off.
- Never unlock the ball head with a trailer coupled to it.
- You should take off the ball head if you drive without towing a trailer. Inspect whether the end cover properly seals off the mounting shaft.
- Remove the ball head beforehand if you wish to clean your vehicle using a steam jet. Ensure that the end cover properly seals the mounting shaft. ■

General Maintenance

Care and cleaning

General

Proper care retains the value of your vehicle.

Regular and proper care retains **the value** of your vehicle. It may also be one of the requirements for the acceptance of warranty claims relating to corrosion damage and paint defects on the bodywork.

You can obtain the necessary **care products** from Škoda dealers. Please follow the instructions for use on the package.

WARNING

- **Care products may be harmful to your health if not used according to the instructions.**
- **Always store care products in a safe place, out of the reach of children - risk of poisoning!**

For the sake of the environment

- Always select environmentally-friendly products when purchasing vehicle care products.
- Do not dispose of residues of care products in domestic waste. ■

Care of the exterior of vehicle

Washing the vehicle

Frequent washing protects your vehicle.

The best protection for your vehicle against harmful environmental influences is **frequent** washing and wax treatment. How often you should wash your vehicle depends on a wide range of factors, such as:

- Frequency of use
- The parking situation (garage, below trees etc.)
- Season of the year
- Weather conditions
- Environmental influences

The longer insect residues, bird droppings, tree sap, road and industrial dust, tar, soot particles, road salt and other aggressive deposits remain adhering to the paintwork of your vehicle, the more detrimental their destructive effect can be. High temperatures, such as those caused by intensive sun's rays, accentuate this caustic effect.

It may therefore be necessary, in certain circumstances, to wash the car **once a week**. It may also be sufficient, however, to wash the car **once a month** followed by appropriate wax treatment.

It is essential to also thoroughly wash the **underside of your vehicle** at the end of the winter road salting and gritting period. ▶

WARNING

When washing your vehicle in the winter: Water and ice in the brake system can affect the braking efficiency - risk of accident.

Automatic vehicle wash systems

The paintwork of the vehicle is sufficiently resistant that the vehicle can be washed normally in automatic vehicle wash plants without any problem. The actual stress to which the paintwork is subjected, however, depends greatly on the design of the vehicle wash system, the filtering of the water and the type of washing and care products used. If the paintwork of your vehicle appears mat after being washed or even has scratches, point this out to the operator of the vehicle wash plant. Use a different vehicle wash plant, if necessary.

There are no particular points to note before washing your vehicle in such a plant other than the usual precautionary measures (closing windows and sliding/tilting roof, moving any factory-fitted aerials down flat against the bodywork, etc.).

If you have any particular attached parts fitted to your car - such as spoiler, roof rack system, two-way radio aerial - it is best to first of all consult the operator of the car wash plant.

It is important to degrease the lips of the windscreen wiper rubbers after passing through the automatic vehicle wash system.

Caution

Do not screw the swivelling down roof aerial tight before washing the vehicle in an automatic vehicle wash system - risk of damage!

Washing vehicle by hand

It is important to first soften the dirt with plenty of water and rinse it off as thoroughly as possible before washing your vehicle by hand.

One should then clean the vehicle using a soft **washing sponge**, **washing glove** or a **washing brush** and only slight pressure. Work from the top to the bottom - beginning with the roof. Only place slight pressure on the vehicle paintwork during cleaning Only use a **shampoo** for stubborn dirt.

Wash out the sponge or washing glove thoroughly at short intervals.

Clean wheels, door sills and similar parts last. Use a second sponge for such areas.

Rinse off the vehicle well after giving it a wash and dry it off using a chamois leather.

WARNING

- **The ignition should always be switched off when you wash your vehicle - risk of accident!**
- **Protect your hands and arms from sharp-edged metal parts when you are cleaning the underfloor, the inside of the wheel housings or the wheel trims - risk of cuts.**

Caution

- Do not wash your vehicle in bright sunlight - risk of paint damage.
- Ensure that the jet of water is not aimed directly at the locks or at the door and panel joints if you spray your vehicle in winter down with a hose - risk of freezing.
- Do not use any insect sponges, rough kitchen sponges or similar cleaning products - risk of damage to the surface of paintwork.

For the sake of the environment

Only wash your vehicle at washing bays specifically reserved for this purpose. This ensures that no water which may be contaminated by oil flows into the sewage system. It is not even permitted to wash your vehicle in certain areas except at such specific washing bays. ■

Washing with a high-pressure cleaner

When you wash your vehicle with a high-pressure cleaner, it is essential to comply with the instructions for use of the cleaning equipment. This applies in particular to the **pressure** used and to the **spraying distance**. Maintain a sufficiently large distance to soft materials such as rubber hoses or insulation material.

On no account use **circular spray nozzles** or **so-called dirt cutters**.

The water containing wax must be no hotter than 60°C.

Caution

It is particularly important that you do not clean tyres with circular spray jets. Damage to tyres may occur even at a relatively large spraying distance and if sprayed only for a short time. ■

Wax treatment

Good wax treatment is an effective way of protecting the paintwork from harmful environmental influences and minor mechanical damage.

A new layer of a high-quality hard wax polish can be applied to the clean bodywork after it has dried thoroughly. Even if you use a wax preserver regularly we still recommend that you treat the paintwork of the vehicle at least twice a year with hard wax.

Caution

Never apply wax to the windows. ■

Polishing

Polishing is only necessary if the paintwork of your vehicle has become unattractive and if it is no longer possible to achieve a gloss with wax preservers.

You must treat the paintwork with a wax preserver if the polish you use does not contain any preserving elements ⇒ page 191, “Wax treatment”.

We recommend using a preservative from the range of accessories offered by your Skoda dealer.

Caution

You must not treat mat painted parts or plastic with polishing products or hard wax. ■

Trim strips

Use **pH neutral care products** to remove stains and coatings on trim strips - in other words not chrome care products. Škoda Dealers have available a range of environmentally compatible cleaning products which have been tested and approved for your car. ■

Paint damage

Slight damage to paintwork such as scratches, scuffs or traces of chip damage must be touched up immediately with paint (Skoda painting pen) **before** any corrosion can result. You can of course have this work carried out by a Škoda dealer.

Škoda dealers have a range of matching **touch-up pens** or **spray cans** available for your vehicle.

The paint number of the original paintwork of your vehicle is indicated on the vehicle data sticker ⇒ page 249.

Any corrosion which has already have formed must be removed thoroughly. Apply a **corrosion protection primer** and then the paint to the affected point. You can of course have this work carried out by a Škoda dealer. ■

Plastic parts

External plastic parts are cleaned by normal washing. Plastic parts and synthetic leather can also be treated with **special solvent-free plastic cleaning agents** if a damp cloth is not sufficient. Paint care products are not suitable for plastic parts. ■

Windows

Only use a plastic ice scraper for removing snow and ice from the windows and mirrors. You should not move the ice scraper forward and backward but in one direction on the window which you are cleaning in order to avoid any damage to the surface of the glass.

You can best remove residues of rubber, oil, grease, wax or silicone by using a special window cleaner or a special silicone remover.

You should also clean the windows regularly from the inside.

Do not use window leathers which you have used to polish the vehicle body to dry off the windows. Residues of preservatives in the window leather can dirty the window and reduce visibility.

Do not affix any stickers over the inside of the rear window to avoid damage to the **heating elements of the rear window heater**.

We recommend using a preservative from the range of accessories offered by your Skoda dealer. ■

The headlight lenses

Please do not use any aggressive cleaning or chemical solvent products - risk of damage to the plastic lenses **Please use** soap and clean warm water.

Caution

Never wipe the headlights dry and do not use any sharp objects for cleaning the plastic lenses, this may result in damage to the protective paintwork and consequently in formation of cracks on the headlight lenses, e.g through effect of chemical products. ■

Door and window seals

The rubber seals on the doors, boot lid, bonnet, sliding roof and windows remain supple and last longer if you treat them from time to time with a rubber care product (e.g. silicone spray). You also avoid premature wear ▶

of the seals and prevent leakages in this way. It is also easier to open the doors. Rubber seals which are well cared for also do not stick together in cold winter weather. ■

Locks

We recommend that you use Genuine Škoda Spray with regreasing and anticorrosive effect for de-icing locks.

Note

When washing your vehicle, ensure that as little water as possible gets into the locks. ■

Wheels

Steel wheels

You should also thoroughly wash the wheels and wheel trims when giving your vehicle its regular wash. This prevents any brake dust, dirt and road salt from sticking to the wheel hubs. You can remove stubborn brake abrasion adhering to the wheels with an industrial cleaner. Touch up any damage to the paintwork on the wheels before rust is able to form.

Light alloy wheels

Regular care of light alloy wheels is necessary in order to retain their decorative appearance over long periods. It is particularly important to remove any road salt and brake abrasion from light alloy wheels every two weeks, otherwise the surface will suffer. Wash thoroughly and then treat the wheels with a protective product for light alloy wheels which does not contain any acidic components. You should provide the wheel hubs with a hard wax layer every three months. You must not use any products which cause abrasion when treating the wheel hubs. Any damage to the paint layer on the wheel hubs must be touched up immediately.

We recommend using a preservative from the range of accessories offered by your Skoda dealer.

WARNING

One should remember when cleaning the wheels that moisture, ice and road salt may adversely affect braking efficiency - risk of an accident!

Note

Severe layers of dirt on the wheels can also result in wheel imbalance. This may show itself in the form of wheel vibration which is transmitted to the steering wheel which, in certain circumstances, can cause premature wear of the steering. It is therefore important to clean dirty wheels. ■

Underbody protection

The underside of your vehicle is protected for life against chemical and mechanical influences.

One cannot, however, completely rule out damage to the **protective layer** when driving so we recommend that you inspect the protective layer on the underside of your vehicle and on the chassis at certain intervals - this is best done at the beginning and end of the winter - and to touch up any damaged areas.

Škoda dealers have suitable **spray products** available as well as the necessary equipment and are familiar with the instructions for its use. It is therefore best to have such touch-up work or additional corrosion protection measures carried out by a Škoda dealer.

WARNING

Never use additional underbody protection or corrosion-protection agents for the exhaust pipes, catalytic converters or heat shields. Such substances might ignite when driving - risk of fire!

Protection of hollow spaces

All the cavities of your vehicle which are at risk from corrosion are protected for life by a layer of **protective wax** applied in the factory.

This wax protection does not require to be inspected or re-treated. If a small amount of wax flows out of the cavities at high temperatures, please remove it with a plastic scraper and cleaning petroleum.

WARNING

Safety and environmental protection regulations should observed when using petroleum cleaner to remove wax - a risk of fire!

Care of the interior of vehicle

Plastic parts, artificial leather and cloths

You can clean plastic parts and artificial leather with a moist cloth. You should only treat such parts with special **solvent-free plastic cleaning and care products** it does prove to be adequate.

Upholstery cloth and cloth trim on the doors, luggage compartment cover, headliner etc. are best treated with special cleaning products, using if necessary a **dry foam** and a soft sponge or brush.

Fabric covers of electrically heated seats

Do **not clean** the seat covers moist as this may result in damage to the seat heating system.

Clean such covers using special agents, for example dry foam.

Natural leather

Natural leather requires quite particular care and attention.

General

The intensity of the dyeing determines the visual appearance and the properties. If the typical signature of nature is detectable on the surface of the leather, then this is a natural nappa leather which offers excellent seating comfort and well being. Fine veins, closed scabs, insect bites, natural creases as well as a fogginess with graduations in shade, remain visible and represent characteristics of the genuineness of the natural material.

Natural nappa leather does not have a covering dye layer. It is therefore more sensitive. Remember that leather is subject to particularly severe wear-and-tear from children, animals or other influences.

In contrast, leathers with a more or less covering dye layer are harder wearing. This has a positive effect on the wear properties of the leather in daily use. In this case, however, the typical natural characteristics are scarcely or no longer visible, which does not have any effect on the quality of the leather itself, however.

Leather cleaning and care

In view of the exclusiveness of the qualities and characteristics of the leathers used (such as sensitivity to oils, greases, dirt etc.) a certain carefulness in use and particular care are required. Dark items of clothing, for example, (particularly if these are moist and have poor quality dyeing) may colour the leather seats. Dust and dirt particles in pores, creases and seams may chafe and damage the surface. For this reason, care for the leather regularly, or according to the wear-and-tear. After a lengthy period of use, your leather seats will acquire a typical and unique patina. This is characteristic of the natural product leather and is a sign of genuine quality.

Please pay attention to the following notes in order to retain the value of the natural material over its full life:

Caution

- Avoid leaving your vehicle for lengthy periods in bright sunlight in order to avoid bleaching the leather. If you leave your vehicle parked in the open for lengthy periods, protect the leather from the direct rays of the sun by covering it over.
- Sharp-edged objects on items of clothing such as zip fasteners, rivets, sharp-edged belts may leave permanent scratches or signs of rubbing on the surface.

Note

- Use a care cream with light blocker and impregnation effect regularly and each time after cleaning the leather. The cream nourishes the leather, allows it to breathe and keeps it supple and also provides moisture. It also creates surface protection.
- Clean the leather every 2 to 3 months, remove fresh soiling each time this occurs.
- Remove fresh stains such as those from ball-point pens, ink, lipstick, shoe cream etc., as quickly as possible.
- Care also for the leather dye. Refreshen areas which have lost their colour with a special coloured leather cream as required. ■

Cleaning and care of leather upholstery

Normal cleaning

– Clean soiled areas of the leather with slightly moistened cotton or woollen cloth.

Severe soiling

– Clean severely soiled areas with a cloth dipped in a mild soapy solution (2 spoonfuls of natural soap to 1 litre of water).

– Ensure that the leather is not soaked through at any point and that no water gets into the stitching of the seams.

– Dry off the leather with a soft, dry cloth.

Removing stains

– Remove fresh stains which are **water-based** (e.g. coffee, tea, juices, blood etc.) with an absorbent cloth or household paper or use the cleaner from the care set for a stain which has already dried in.

– Remove fresh stains which are **oil based** (e.g. butter, mayonnaise, chocolate etc.) with an absorbent cloth or household cleaning paper or with the cleaner from the care set if the stain has not yet penetrated into the surface.

– Use a grease dissolver for **grease stains which have dried in**.

– Eliminate **special stains** (e.g. ball-point pens, felt pen, nail varnish, dispersion paint, shoe cream etc.) with a special stain remover suitable for leather.

Leather care

– Treat the leather every six months with the leather care product available from Škoda dealers.

– Apply only a small amount of the care product.

– Dry the leather off with a soft cloth

It is best to consult your Škoda dealer if you have any questions regarding cleaning and care of the leather interior.

Caution

You must on no account treat the leather with solvents (e.g. gasoline, turpentine), floor wax, shoe cream or such like. ■

Alcantara upholstery

Do not use any leather care products for cleaning Alcantara upholsteries.

Eliminating dust and dirt

Wipe the Alcantara upholstery with a slightly moistened, soft cloth or clean the covers with a suitable shampoo.

Removing stains

Moisten a soft cloth with lukewarm water or diluted methylated spirits and dab the stain from the edges toward the middle. ■

Seat belts

– Keep the seat belts clean.

– Wash seat belts which have become soiled using a mild soapy solution.

– Inspect the seat belts regularly to ensure they are in good condition.

Belt webbing which has become severely soiled may prevent the inertia reel from reeling up the belt properly.

WARNING

- **The seat belts must not be removed for cleaning.**
- **Never clean the seat belts chemically as dry cleaning may destroy the fabric. The seat belts must also not be allowed to come into contact with corrosive liquids (such as acids etc.).**
- **Seat belts which have damage to the webbing, the connections, the inertia reel or the lock should be replaced by a Škoda dealer.**
- **Inertia reel belts must be completely dried before being reeled up.**

■

Engine compartment

Good corrosion protection is very important, particularly in winter when one often drives over its salt-strewn roads. One should therefore clean the whole engine compartment and the radiator tank before and after the salt spreading period and treat with preservative in order to prevent the salt from being destructive. ▶

Skoda dealers have the cleaning agents and preservatives recommended by the manufacturer and also the required equipment.

WARNING

It is necessary to observe the guidelines given in the chapter before working on the engine compartment ⇒ page 203.

Caution

- Engine cleaning may be only be undertaken when the ignition is off.
- It is recommended to cover the generator before washing the engine compartment.

For the sake of the environment

The dirty water produced by washing the engine has washed away petrol, and residues of grease and oil and should therefore be cleaned by an oil separator. This is why engine washing should only be undertaken in a garage or at a fueling station (when these are fitted with the required equipment). ■

Fuel

Petrol

Grades of petrol

There are various grades of petrol. Please read the brochure “Technical Data” in order to know which grade of petrol your vehicle requires. You will also find the same information affixed to the inside of the fuel filler flap of your vehicle ⇒ page 200, fig. 151.

A distinction is made between unleaded and leaded petrol. All Škoda vehicles with petrol engines are equipped with a catalytic converter and must therefore be only driven with **unleaded petrol**. Unleaded petrol complies with the **standard EN 228**.

The individual grades of petrol are distinguished by their **octane number** (RON). Please adopt the following procedure if the grade of petrol which you normally use is not be available in exceptional circumstances:

- Engines which need **unleaded premium petrol 95 RON** can also be run on unleaded regular petrol 91 RON. This does, however, result in a slight loss in performance.
- Engines which need **unleaded premium petrol 98 RON** can also be run on unleaded regular petrol 95 RON. This does, however, result in a slight loss in performance. You can **in exceptional circumstances** also use unleaded regular petrol of 91 RON in the event that no unleaded premium petrol of 98 RON or 95 RON is available. Refuel as soon as possible with unleaded premium plus of 98 RON or unleaded premium petrol of 95 RON.

If, in an emergency, the only fuel available is one which has a lower octane number than that required by the engine then only drive at medium engine speeds and lower engine loadings.

You can make unlimited use of fuel which has a higher octane number than that required by the engine. There will, however, be no advantages gained by this in terms of engine performance and fuel consumption!

The handling, performance and life of your engine are determined to a significant extent by the quality of the fuel. Do not use any petrol additives. **Use a fuel complying with the standard.**

You can find further information on refuelling ⇒ page 200.

Caution

- Filling the tank even only once with leaded petrol will result in the catalytic converter being destroyed.
- Operating the engine with petrol of a low octane number can result in engine damage at high revolutions or severe engine loading. ■

Diesel

Grade of diesel fuel

Grades of diesel fuel

Your vehicle can be driven with the following grades of diesel fuel:

- **Diesel fuel** with a cetane number of at least CN 49 (the cetane number CN is a measure of the ignition performance of the diesel fuel). Diesel fuel must comply with the **standard EN 590**.
- **Biofuel (RME rape oil methyl ester fuel)** must comply with the **standard EN 51 606**. Please refer to the following guidelines ⇒ page 199.

Fuel additives

You must not use fuel additives, so-called “flow improvers” (petrol and similar products) in diesel fuel.

It is then necessary to have the **fuel filter** drained of water by a Škoda dealer more often than stated in the service schedule if the quality of the diesel fuel used is poor.

You can find information on refuelling ⇒ page 200, “Refuelling”.

Caution

- Use a fuel complying with the standard. Filling the tank even only once, which does not comply with the standard, can result in damage to the fuel system.
- Water which has collected in the fuel filter can result in engine problems. ■

Biofuel

Biofuel (methyl ester from rape oil) is manufactured from vegetable oil by means of a chemical process.

Biofuel does not contain sulphur. This means that no sulphur dioxide (SO_2) is produced when it is burnt.

The exhaust gases contain less

- carbon monoxide (CO)
- hydrocarbons (HC)
- particles (soot)

than when operating with conventional diesel fuel.

The Biofuel is more biodegradable.

When using biofuel pay attention to the following points:

- The **Performance** may be reduced slightly if you switch to driving with biofuel.
- The**Fuel consumption** may increase slightly if you switch to driving with biofuel.

Biodiesel conforming to the **standard E 51 606** can be mixed in any desired ratio with diesel fuel conforming to the **standard EN 590**.

We recommend refuelling with diesel fuel at temperatures below -10°C.

Caution

Filling the tank even only once with biofuel, which does not comply with the standard **standard E 51 606**, can result in damage to the fuel system. ■

Operation in winter

Winter-grade diesel fuel

A different grade of diesel fuel is available at filling stations in winter than during the summer. Using “summer-grade diesel fuel” at temperatures below 0°C can result in operational problems because the diesel becomes viscous as a result of paraffin separation.

It is therefore the case that DIN EN 590 prescribes diesel fuel class for certain periods of the year which can also be purchased at the corresponding time during the year. “Winter-grade diesel fuel” will still operate properly even at a temperature of -20°C.

It is often the case in countries with different climatic conditions that diesel fuels available have a different temperature characteristic. Škoda dealers and filling stations in the country concerned will be able to provide you with information regarding the diesel fuels available.

Prewarming fuel

The vehicle is fitted with a fuel filter prewarming system. This secures operation of a vehicle using diesel fuel down to an environmental temperature of -25°C.

Biofuel

We recommend refuelling with diesel fuel at temperatures below -10°C.

Caution

It is not permitted to add the various fuel additives on the market, including petrol, to diesel fuel in order to improve its flow properties. ■

Refuelling

Refuelling procedure

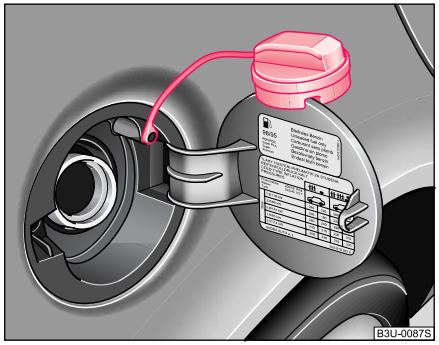


Fig. 151 Filler flap with cap unscrewed

Opening the fuel filler cap

– Unlock the fuel filler flap with the switch in the driver door ⇒ page 42.

– Open the fuel filler flap fully.

– Unscrew the cap by turning it to the left.

– Place the cap onto the top of the fuel filler flap ⇒ fig. 151.

Closing fuel filler cap

– Screw on the cap by turning it to the right until it is heard to lock.

– Press the fuel tank flap closed.

The correct grade of fuel for your vehicle as well as the tyre size and inflation pressures are stated on a sticker affixed to the inside of the fuel filler flap. Further information on fuel ⇒ page 198.

The fuel tank has a capacity of about 62 litres.

WARNING

Pay attention to any legal requirements if you do carry a spare canister in the vehicle. We do not recommend carrying any fuel canisters in your vehicle for safety reasons. The canister can be damaged in the event of an accident and fuel may leak out.

Caution

- Remove any fuel which has spilled onto the paintwork of your vehicle immediately. This particularly applies to biodiesel - risk of paint damage! ▶

- Vehicles fitted with catalytic converter should never be allowed to let the fuel tank to run completely empty. An irregular supply of fuel to the engine can result in misfiring and unburnt fuel may get into the exhaust system, which may result in overheating and damage to the catalytic converter.

For the sake of the environment

The fuel tank is full just as soon as the pump nozzle switches off for the first time, provided the nozzle has been operated properly. You should not continue refuelling - otherwise the expansion chamber in the fuel tank will also be filled with fuel. Fuel might flow out of the tank when it heats up.

Emergency release of fuel filler flap

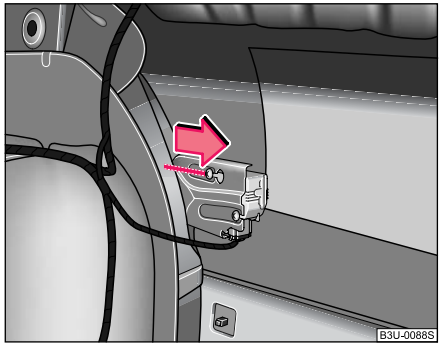


Fig. 152 Luggage compartment: Emergency release of fuel filler flap

If the electric lock is faulty, you can also unlock the fuel filler flap manually.

– Open the boot lid/luggage compartment door.

– Unscrew the clip attaching the right-hand side trim panel and pull the trim panel off the body.

– Pull on the loop in direction of arrow in order to unlock the fuel filler flap ⇒ fig. 152.

WARNING

Reel up the belt webbing once again until it is fitted snugly against the child seat.

Inspecting and Replenishing

Engine compartment

Opening and closing the bonnet.

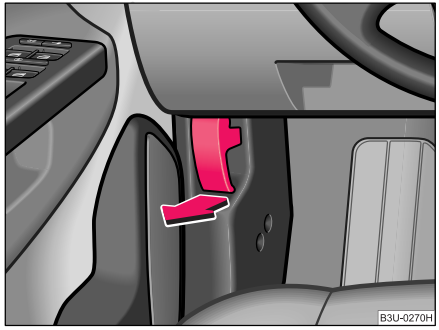


Fig. 153 Bonnet release lever

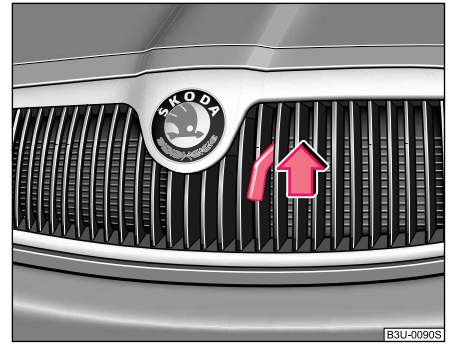


Fig. 154 Radiator grille: handle

Opening the bonnet

– Pull the unlocking lever below the dash panel on the driver's side ⇒ fig. 153.

– Pull the handle ⇒ fig. 154 and lift the bonnet.

Closing the bonnet

– Pull the bonnet down far enough to overcome the force of the pressurized gas spring.

– Then, allow the bonnet to drop into the lock - do not press down on bonnet.

The bonnet jumps out of its lock as a result of the spring force. A handle appears at the same time in the radiator grille.

The bonnet is held in the opened position by a pressurized gas spring.

WARNING

- **Never open the bonnet if you see that steam or coolant is flowing out of the engine compartment - risk of scalding! Wait long enough until the steam or coolant has stopped escaping.**
- **For safety reasons, the bonnet must always be properly closed when driving. One should therefore check that the lock has in fact engaged properly after closing the bonnet.**
- **Stop your vehicle immediately while driving if you notice that the lock is not properly engaged and close the bonnet properly - risk of an accident!**

Caution

- Never open the bonnet using the handle - danger of causing damage.
- Before opening the bonnet, ensure that the arms of the windscreen wipers are correctly in place against the windscreen. Otherwise, there is a risk of damage to the paintwork. ■

Working in the engine compartment

Particular care is required when carrying out any work in the engine compartment!

There is a risk of injuries, scalding, accidents and fire when working in the engine compartment, e.g. inspecting and replenishing oil and other fluids. For this reason, it is essential to comply with the warning instructions stated below and with the general applicable rules of safety. The engine compartment of your car is a hazardous area ⇒ ⚠.

WARNING

- **Switch off the engine and pull out the ignition key.**
- **Apply the handbrake firmly.**
- **If your vehicle is fitted with a manual gearbox, move the gear-shift lever into Neutral, or if it is fitted with automatic gearbox, move the selector lever into position P.**
- **Allow the engine to cool down.**
- **Keep children clear of the engine compartment.**
- **Never spill oil and other fluids over the hot engine. Such fluids (e.g. the antifreeze contained in the coolant) may ignite!**
- **Avoid short circuits in the electrical system - particularly on the battery.**
- **Never place your hand into the radiator fan as long as the engine is still warm. The fan might suddenly start running!**
- **Never open the cap of the coolant expansion bottle as long as the engine is still warm. The cooling system is pressurized!**
- **Cover over the cap of the coolant expansion reservoir with a large cloth when opening it as protection for your face, hands and arms from hot steam or hot coolant.**
- **In cases where it be necessary to carry out inspection work when the engine is running there is an additional risk from rotating parts (e.g. the V-ribbed belt, alternator, radiator fan) and from the high-voltage ignition system.**
- **Please also comply with the warning instructions stated below when carrying out any essential work on the fuel system or on the electrical system:**
  - **Always separate the car battery from the electrical system.**
  - **Do not smoke.**
  - **Never carry out any work close to naked flames.** ▶

WARNING (continued)

– **Always keep a working fire extinguisher at hand.**

Caution

When replenishing fluids in the engine, always ensure that the fluids are on no account mixed up. This may result in major operating problems and also vehicle damage! ■

Overview of the engine compartment

Overview of the engine compartment

The main inspection points

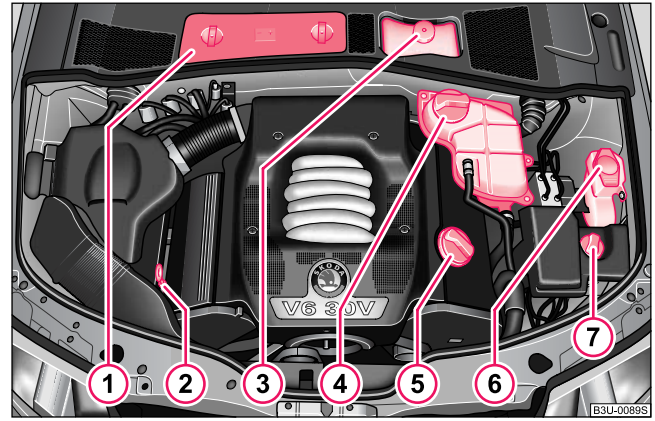


Fig. 155 6-cylinder 2.8 ltr./ 142 kW petrol engine

(1) Battery (below a cover) 212
(2) Engine oil dipstick 206
(3) Brake fluid reservoir 210
(4) Coolant expansion bottle 208
(5) Engine oil filler opening 207
(6) Windshield washer fluid reservoir 217
(7) Power steering reservoir . . . . . 174 ▶

Note

The location of the inspection points in the engine compartment of petrol and diesel engines is practically identical. ■

Engine oil

Engine oil specifications

The grade of engine oil should be selected in accordance with precise specifications.

The engine of your vehicle has been factory-filled with a high-grade oil which you can use throughout the year - except in extreme climatic regions.

You can mix various oils together with each other when refilling with oil. This does not, however, apply for models with flexible service intervals (QG1).

Engine oils are, of course, undergoing continuous further development. Thus the information stated in this Owner's Manual is only correct at the time of publication.

Škoda dealers are constantly informed by Škoda Auto about current changes. This why you should always have engine oil changed by your Škoda dealer.

Engine oil specifications for vehicles with fixed service intervals (QG2)

Denomination	Petrol engine	Diesel engine
Multigrade high-lubricity oils	VW 500 00 VW 502 00	VW 505 01 VW 505 00 a)
Multigrade oils	VW 501 01 ACEA A2 b) or A3 b)	ACEA B3 b) or B4 b)

a) This does not apply for PD engines (a unit injection engine). Further information - see Technical Data.

b) Only to be used in exceptional cases if the oils specified above are not available.

Engine oil specifications for models with flexible service intervals (QG1).

	Specification
Petrol engines	VW 503 00
Diesel engines	VW 506 01 VW 506 00 a)

a) This does not apply for PD engines (a unit injection engine). Further information - see Technical Data.

For further information - see Service Schedule.

Caution

Only the above-mentioned oils may be used on vehicles with flexible service intervals (QG1). We recommend always refilling with oil of the same specification since this will maintain the properties of the oil. In exceptional cases, you must top up only once engine oil complying with Specification VW 502 00 (only for petrol engines) or Specification VW 505 01 (only for diesel engines) to maximum 0.5 litres. You must not use other engine oils - risk of engine damage!

Note

- We recommend using a preservative from the range of accessories offered by your Skoda dealer.
- For further information - see Service Schedule. ■

Inspecting the engine oil level

The dipstick indicates the level of oil in the engine.

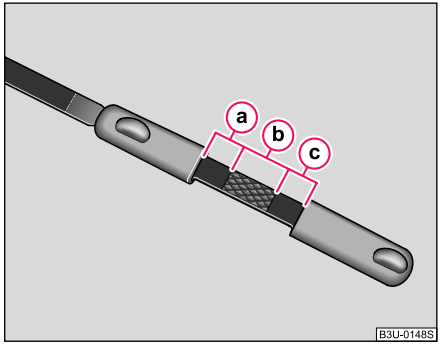


Fig. 156 Dipstick

Checking the oil level

– Park the vehicle on a horizontal surface.

– Switch the engine off.

– Open the bonnet ⇒ ⚠ in “Working in the engine compartment” on page 203.

– Wait a few minutes and pull out the oil dipstick.

– Wipe off the dipstick with a clean cloth and insert it again fully.

– After this, once again withdraw the dipstick and read off the oil level ⇒ page 206, fig. 156.

Oil level within range (a)

– You must **not** top up the oil.

Oil level within range (b)

– You **may** top up the oil. It is possible that the oil level may then be within range (a) after doing this.

Oil level within range (c)

– You **must** top up the oil ⇒ page 207. It is sufficient, once this is done, to keep the oil level is within range (b).

It is normal for the engine to consume oil. The oil consumption may be as much as 0.5 l/1 000 km depending on your style of driving and the conditions under which you operate your vehicle. The oil consumption may be slightly higher than this during the first 5 000 kilometres.

One should therefore check the oil level at regular intervals, preferably every time after the fuel tank is filled or after driving for long stretches.

We recommend maintaining the oil level within the range (a) if the engine has been operating at high loads, for example during a lengthy motorway trip during the summer months, towing a trailer or negotiating a high mountain pass, **but not above this**.

The warning light in the instrument cluster will indicate whether the oil level is too low ⇒ page 28. In this case, check the oil level as soon as possible. Top up with an appropriate quantity of oil.

Caution

The oil level must on no account extend beyond the range (a). Danger of damaging the catalytic converter. ■

Replenishing engine oil

– Unscrew the cap of the engine oil filler opening.

– Pour in a suitable grade of oil in portions of 0.5 litres ⇒ page 205, “Engine oil specifications”.

– Inspect the oil level ⇒ page 206.

– Carefully screw on the cap of the filler opening and push the dipstick in fully.

Do not continue your journey if for some reason it is not possible under the conditions prevailing to top up with oil. **Switch of the engine** and obtain professional assistance from a Škoda dealer.

The location of the engine oil filler opening is shown in the illustration of the engine compartment ⇒ page 204.

WARNING

Avoid dripping oil onto hot parts of the engine when topping up will oil - a risk of fire!

For the sake of the environment

The oil level must on no account be above the range (a) ⇒ page 206, fig. 156. Oil will otherwise be drawn in through the crankcase ventilation and may pass through the exhaust system to atmosphere. The oil may combust in the catalytic converter and damage it. ■

Changing engine oil

The engine oil must be changed at the intervals stated in the Service Schedule or according to the service interval indicator ⇒ page 17.

WARNING

Store old oil in a safe place out of the reach of children and unauthorized persons until you dispose of it properly.

Caution

You must not pour any additives into the engine oil - risk of engine damage!

For the sake of the environment

- You must on no account pour oil into the ground or into the sewage system.
- In view of the problems involved in properly disposing of old oil, the material, equipment and the knowledge required for such work, we recommend that you have the oil and oil filter change carried out by your Škoda dealer. ■

Cooling system

Coolant

The job of the coolant is to cool the engine.

The cooling system does not require any maintenance under normal operating conditions. The coolant consists of water with a concentration of antifreeze agent of 40 %. This mixture not only provides antifreeze protection down to -25°C but also protects the cooling and heating system from corrosion. It also prevents the formation of scale and significantly increases the boiling point of the coolant.

You must therefore not reduce the concentration of antifreeze agent in the coolant by adding water, also not during the summer months or in countries with a warm climate. **The concentration of antifreeze agent in the coolant must be at least 40%.**

You can increase the amount of antifreeze in the coolant iIf a higher concentration of antifreeze is necessary for climatic reasons but only up to 60% (antifreeze protection down to approx. -40°C). The antifreeze protection tails off above that concentration.

Vehicles exported to countries with a cold climate (e.g. Sweden, Norway, Finland) are already factory-filled with a coolant which offers antifreeze protection down to about -35°C.

Coolant

The cooling system is factory-filled with TL 774-F (G12 PLUS) coolant - colour purple - .

We recommend that you use the same antifreeze agent - G12 PLUS (purple in colour).

Please contact your Škoda dealer if you have any questions regarding the coolant or if you wish to fill up with a different coolant.

Your Škoda dealer can also supply you with the correct coolant additives.

Caution

- **Other coolant additives may cause operational problems which, in particular, involves significantly reducing the anticorrosion effect.**
- **Any faults or problems resulting from corrosion may cause a loss of coolant and, as a consequence of this, result in major engine damage.** ■

Inspecting the coolant level

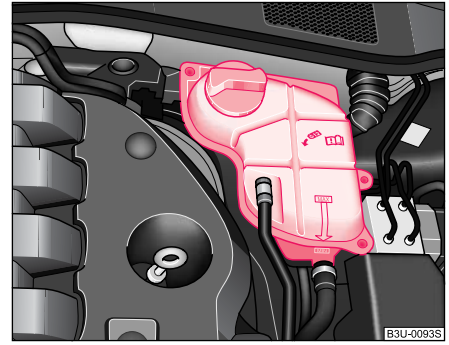


Fig. 157 Engine compartment: Coolant expansion bottle

The coolant expansion bottle is located in the engine compartment on the left.

– Switch the engine off.

– Open the bonnet ⇒ ⚠ in “Working in the engine compartment” on page 203.

– Check the level of coolant in the coolant expansion bottle ⇒ fig. 157. The coolant level when the engine is cold must lie between the “MIN” and “MAX” markings. The level may also rise slightly above the “MAX” marking when the engine is warm.

If the coolant level in the reservoir is too low, this is indicated by the warning light in the instrument cluster ⇒ page 28. We nevertheless recommend inspecting the coolant level directly at the reservoir from time to time.

Loss of coolant

A loss of coolant is first and foremost an **indication of a leak** in the system. You should not merely top up the coolant in the reservoir. It is also important to have the cooling system inspected without delay by a Škoda dealer.

Losses can only occur through the pressure relief in the cap of the coolant expansion bottle which is completely free of leaks if the coolant boils as a result of overheating and is forced out of the cooling system.

One should contact a Skoda dealer as soon as possible if the source of overheating itself cannot be determined and removed, since there may be grave damage to the engine. ■

Replenishing the coolant

– Switch the engine off.

– Allow the engine to cool down.

– Place a cloth over the cap of the coolant expansion reservoir ⇒ page 208, fig. 157 and unscrew the cap **carefully** by turning it to the left ⇒ ⚠.

– Top up the coolant.

– Screw on the cap tight until it is heard to lock.

The coolant which you use for replenishing the system, must comply with certain specifications ⇒ page 208, “Coolant”. Do not use an alternative additive if the coolant additive G12°PLUS is not available in exceptional cases. Just top up the system with water and as soon as possible arrange adjustment to correct the mixing ratio of water and coolant additive again by a Škoda dealer.

Only use fresh coolant for topping up the system.

Do not fill up over the “MAX” marking! Excess coolant which is heated up is forced out of the cooling system through the pressure relief valve in the cap of the coolant compensation bottle.

Wait until the engine has cooled down for a system which has suffered a major loss of coolant before pouring in coolant. This is necessary to avoid engine damage.

Do not continue your journey if for some reason it is not possible under the conditions prevailing to top up with coolant. Switch off the engine and obtain professional assistance from a Škoda dealer.

⚠ WARNING

- **The cooling system is pressurized! Do not open the cap of the coolant expansion bottle if the engine is still hot - risk of scalding!** ▶

WARNING (continued)

- **The coolant additive and thus all of the coolant is harmful to your health. Avoid contact with the coolant. Coolant vapours are also harmful to the health. It is important, therefore, to always safely store any coolant additive in its original container out of the reach of children - risk of poisoning.**
- **If any splashes of coolant get into your eyes, rinse out your eyes immediately with clear water and contact a doctor as soon as possible.**
- **You should also consult a doctor without delay if you have inadvertently swallowed coolant.**

For the sake of the environment

Do not re-use coolant if it is necessary to drain the coolant in the system. It should be collected and disposed of in compliance with environmental protection regulations. ■

The radiator fan

The radiator fan may switch on suddenly.

The radiator fan is driven by an electric motor and controlled by a thermostat according to the coolant temperature.

After the engine is switched off, the radiator fan may continue running for up to 10 minutes - even if the ignition is also off. It may also switch on suddenly after a certain time, if

- the coolant temperature has risen because of an accumulation of heat

or

- the warm engine compartment is heated up additionally by strong sunlight.

WARNING

You must therefore be aware when working in the engine compartment that the fan may switch on suddenly - risk of injury! ■

Brake fluid

Inspecting the brake fluid level

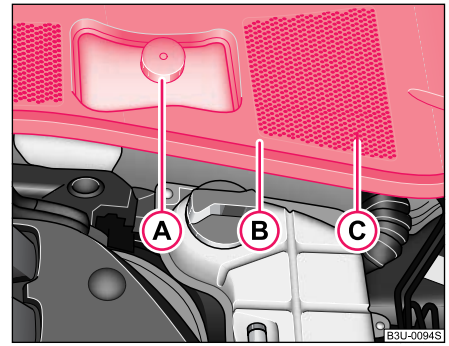


Fig. 158 Engine compartment: Brake fluid reservoir

You can also see the location of the brake fluid reservoir in the engine compartment from the general view of the engine compartment ⇒ page 204. The brake fluid reservoir on right-hand steering models is positioned on the other side of the engine compartment.

– Switch the engine off. ▶

– Open the bonnet ⇒ ⚠ in “Working in the engine compartment” on page 203.

– Pull off the rubber seal Ⓑ ⇒ fig. 158 partially away and lift the cover Ⓒ slightly.

– Inspect the brake fluid level at the reservoir Ⓐ. The level must be between the “MIN” and “MAX” markings. The markings are indicated on the side of the reservoir.

A slight drop in the fluid level results when driving due to normal wear-and-tear and automatic adjustment of the brake pads, and is perfectly normal.

There may be an indication of a leak in the brake system, however, if the fluid level drops significantly within a short time or if it drops below the “MIN” marking. A situation where the brake fluid level is too low is indicated by the warning light (!) lighting up in the instrument cluster ⇒ page 35. You should drive **carefully and immediately to the nearest Škoda Dealer** and have the brake system inspected. ■

Replacing brake fluid

Brake fluid absorbs moisture. This causes the fluid to absorb moisture from the surrounding air over a period of time. Excessive water in the brake fluid may be the cause of corrosion in the brake system. The water content also lowers the boiling point of the brake fluid. **This is why brake fluid must be replaced every two years.**

One may only use new genuine brake fluid from Skoda Auto. The specification for the brake fluid is “FMVSS 116 DOT 4”.

We recommend that you have the brake fluid replaced by a **Škoda Dealer** as part of an Inspection Service.

⚠ WARNING

- **Using old brake fluid can result in severe stress on the brakes because of the formation of vapour bubbles in the brake system. This greatly impairs the braking efficiency and thus also the safety of your vehicle.**
- **Brake fluid is toxic! It must therefore be kept safely in closed original containers and well away from children and unauthorized persons.**

Caution

Brake fluid damages the paintwork of the vehicle.

For the sake of the environment

In view of the problems involved with proper disposal of brake fluid, the special tools and the professional knowledge required, you should have the brake fluid replaced by a Škoda dealer. ■

The battery

Working on the battery

Particular care is required when carrying out any work on the battery!

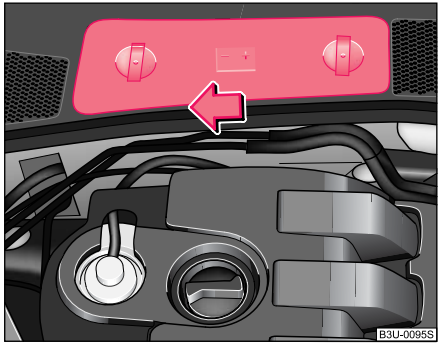


Fig. 159 Engine compartment: plenum chamber - battery cover

The battery is located in the engine compartment in the plenum chamber below a cover.

Taking off cover

– Press the cover in direction of arrow ⇒ fig. 159.

There is a risk of injuries, scalding, accidents and burns when carrying out any work on the battery and on the electrical system. It is essential to comply with the warning instructions stated below ⇒ ⚠ and with the general applicable rules of safety.

⚠ WARNING

- **The battery acid is strongly corrosive and must, therefore, be handled with the greatest of care. Always wear protective gloves, eye and skin protection when handling batteries. Corrosive fumes in the air irritate the air passages and lead to conjunctivitis and inflammation of the air passages in the lungs. Battery acid corrodes dental enamel and creates deep wounds after contact with the skin which take a long time to heal. Repeated contact with diluted acids causes skin diseases (inflammations, ulcers, slin cracks). Acids coming into contact with water are diluted accompanied by significant development of heat.**
- **Do not tilt the battery otherwise battery electrolyte may flow out of the battery vent openings. Protect the eyes with safety glasses or a shield! There is the danger of suffering blindness! If any battery electrolyte gets into your eye, rinse out your eye immediately with clear water for several minutes. Contact a doctor without delay.**
- **Splashes of acid on your skin or clothes should be neutralised as soon as possible using soap suds and then rinsed with plenty of water. Contact a doctor immediately if you swallow battery electrolyte.**
- **Keep batteries out of the reach of children.**
- **Hydrogen is released when you charge a battery and a highly explosive gas mixture is produced. An explosion can be caused through sparkling over during unclamping or loosening of the cable plug while the ignition is on.**
- **Bridging of the poles will create a short circuit (e.g. through metal objects, cables). Possible consequences of a short circuit: Melting of lead struts, explosion and burning of the battery, jets of acid spurting out.** ▶

WARNING (continued)

- **It is prohibited to work with a naked flame and light, to smoke or to carry out any activities which produce sparks. Avoid creating sparks when working with cables and electrical devices. Strong sparking represents a risk of injury.**
- **You must disconnect the negative terminal (-) of the battery when carrying out work on the electrical system. If you wish to replace a bulb it is sufficient to switch off the appropriate light.**

Caution

- You must only disconnect the battery if the ignition is switched on, otherwise the electrical system (electronic components) of the vehicle may be damaged. When disconnecting the battery from the electrical system of the vehicle, first disconnect the negative terminal (-) of the battery. Then disconnect the positive terminal (+).
- When reconnecting the battery, first connect the positive terminal (+) and only then the negative terminal (-) of the battery. You must on no account connect the cables wrongly - risk of a cable fire.
- Ensure that battery acid does not come into contact with the vehicle body otherwise damage could occur to the paintwork.
- Do not place the battery in direct daylight in order to protect the battery housing from the effects of ultra-violet light.

For the sake of the environment

A removed battery is a special type of waste which is harmful to the environment - contact your Škoda dealer regarding disposing of the battery.

Note

Please also refer to the guidelines ⇒ page 216, also after connecting the battery. ■

Battery with a charge level indicator, the so-called magic eye

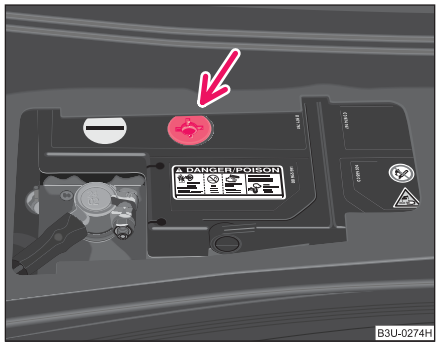


Fig. 160 Engine compartment: Battery with magic eye

There is a so-called magic eye ⇒ fig. 160 located on the top of the battery. This indicator changes its colour in line with the charge state and electrolyte level in the battery. The colour serves as an aid to your Škoda dealer in diagnosing the condition of the battery.

Remove the cover ⇒ page 212, fig. 159 and knock the magic eye carefully before carrying out the battery check.

- green colour - the battery is adequately charged.
- dark colour - the battery has to be charged
- colourless or yellow - the electrolyte level is too low, no indication regarding the charge state is possible. The battery must be replenished with distilled water.

Batteries, which are more than 5 years old, must be replaced. We recommend you have the electrolyte level inspected and adjusted to the correct level or the battery replaced if necessary by a Škoda dealer. ▶

Caution

If the vehicle has not been driven for more than 4 weeks, the battery will discharge gradually as a result from electrical components such as the control units which were not switched off. You can prevent the discharging of the battery by disconnecting the negative terminal or charging the battery constantly with a very low charging current. Please also refer to the notes when working on the battery ⇒ page 212, “Working on the battery”. ■

Inspecting the electrolyte level

The battery is practically **maintenance-free** under normal operating conditions. We do, however, recommend that you have the electrolyte level inspected from time to time by a Škoda dealer when outside temperatures are high or when driving on long trips. You should also check the electrolyte level ⇒ page 214 each time the battery is charged.

The battery acid level will also be checked as part of the Inspection Service.

Caution

Do not expose the battery to direct sunlight for lengthy periods in order to protect it from UV rays. ■

Operation in winter

The battery has to provide greater amounts of electricity during the winter. It also has only part of the initial power output at low temperatures that it has at normal temperatures.

A discharged battery may already freeze at temperatures just below 0°C.

We therefore recommend that you have the battery checked by a Škoda dealer before the start of the winter, and recharged if necessary.

Note

If the vehicle is not going to be driven for a period of some weeks when there is very severe frost one should remove ⇒ page 215 the battery and store it in a place which is protected from frost. This prevents the battery from freezing up and thereby being destroyed. ■

Charging the battery

A properly charged battery is essential for reliably starting the engine.

– Read the warning notes ⇒ ⚠ in “Working on the battery” on page 212 and ⇒ ⚠.

– Switch the ignition and all electrical components off.

– Only for “quick-charging”: disconnect both battery cables (first of all “negative”, then “positive”) .

– Carefully attach the terminal clamps of the charger to the battery terminals (red = “positive”, black = “negative”).

– You can now plug the mains cable of the charger into the power socket and switch on the charger.

– When charging is completed: switch the charger off and unplug the mains cable from the power socket.

– Only then should you disconnect the terminal clamps of the charger.

– Reconnect the cables to the battery (first of all “positive”, then “negative”).

It is not normally necessary to disconnect the cables of the battery if you recharge the battery using low amperages (as for example from a **mini-charger**) . Please also refer to the instructions from the charger manufacturer.

A charging current of 0.1 of the total battery capacity (or lower) is that which should be used until full charging is achieved.

It is, however, necessary to disconnect both cables before charging the battery with high amperages, so-called “**quick-charging**”.

“Quick-charging” a battery is **dangerous** ⇒ ⚠ in “Working on the battery” on page 212. It requires a special charger and appropriate knowledge. We therefore recommend that you have your battery quick-charged only by your Škoda dealer.

A discharged battery may already **freeze** at temperatures just below 0°C. If a battery is frozen, it is essential that it is first of all thawed out before being charged ⇒ ⚠. We recommend that you no longer use a battery which has thawed out because the casing of the battery may be cracked through the formation of ice and this would allow battery electrolyte to flow out.

The vent plugs of the battery should not be opened for charging.

⚠ WARNING

Never charge a battery which is frozen - risk of explosion!

Removing and installing the battery

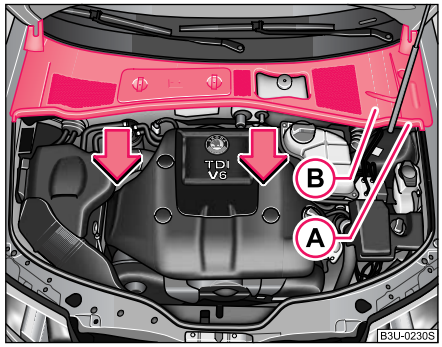


Fig. 161 Engine compartment: plenum chamber - cover

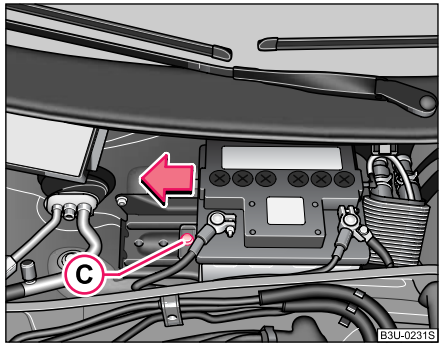


Fig. 162 Engine compartment: The battery

Removing and installing the battery

– Please also refer to the notes when working on the battery ⇒ page 212.

– Switched off all electrical components and remove the ignition key.

– Pull off gasket (A) and take out the cover of the plenum chamber (B) in the direction of the arrow ⇒ fig. 161.

– Unclamp the battery negative terminal (-).

– Unclamp the battery positive terminal (+).

– Unscrew the screw (C) ⇒ fig. 162 completely and remove the locking plate.

– Move the battery in the direction of the arrow and pull it out in an upward direction.

– Installation takes place in the reverse order.

Please also refer to the following notes when connecting up the battery ⇒ page 216.

Note

We do not recommend that you remove and install the battery yourself (even when you are following the instructions given in this manual) since a battery can be heavily damaged in the process under certain circumstances. Please contact your Škoda dealer. ■

Disconnecting and reconnecting the battery

On disconnecting and reconnecting the battery the following functions are initially deactivated or are no longer able to operate fault-free.

Operation	Operating measure
Power windows	⇒ page 52
Enter radio code number	see Radio Operating Instructions
Setting clock	⇒ page 15
Data in the multi-functional indicator are deleted.	⇒ page 18

We recommend having the vehicle checked by a Škoda dealer to ensure full functionality of all electrical systems. ■

Replacing the battery

You should only replace a battery with a new battery of the same capacity, voltage (12 V), amperage and of the same size. Škoda dealers have a range of suitable batteries available.

We recommend that you only have an old battery disposed of by your Skoda dealer since it does require special disposal.

For the sake of the environment

Batteries contain poisonous substances such as sulphuric acid and lead. They must be disposed of in accordance with local environmental protection regulations and on no account as domestic waste. ■

Windscreen Wiper and Washer System

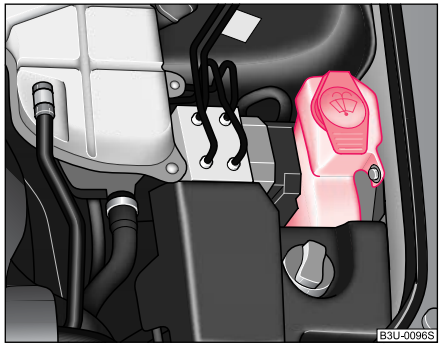


Fig. 163 Engine compartment: Windshield washer fluid reservoir

The windshield washer reservoir contains the cleaning fluid for the windscreen and for the headlamp cleaning system*. The reservoir is located at the front left of the engine compartment ⇒ fig. 163.

The reservoir has a **capacity** of 4 liters.

Clear water is not sufficient to intensively clean the windscreen and headlights. We therefore recommend using clean washing water together with the screen cleaner (in winter additionally with antifreeze) which is capable of removing stubborn dirt. Follow the instructions for use on the packaging when using screen cleaning products.

You should always add antifreeze to the cleaning water in winter even if your vehicle is fitted with heated windscreen washer nozzles*.

It is also possible in exceptional cases to use methylated spirits when no screen cleaner with antifreeze is available. The concentration of methylated spirits must not be more than 15 %. Please note, however, that the antifreeze protection at this concentration is only adequate down to -5°C.

Caution

- On no account should you add radiator antifreeze or other additives to the windscreen washer fluid.
- If the vehicle is fitted with headlight cleaning system, you should only add cleaning products which do not attack the polycarbonate coating of the headlights to the windscreen washer fluid. Please contact a Škoda dealer, he will tell you, which cleaning product you can use.

Note

Do not take the filter out of the windscreen wash container when filling it up again with liquid otherwise dirt can get into the liquid transportation system and can lead to faults in operation of the windscreen wash system. ■

Spark plugs

The spark plugs will also be checked as part of the Inspection Service.

Please observe the following if spark plugs have to be renewed inbetween inspection services.

- Spark plugs and the ignition system are matched to the engine and therefore contribute to lower emissions in the exhaust gases.
- Only use the spark plugs foreseen for the engine concerned if you wish to avoid operational faults, engine damage and loss of approval and licensing of the vehicle due to false exhaust gas values or unshielded spark plugs. Particularly important parameters include the number of electrodes, the thermal value and possibly also the radio frequency suppression level.

Spark plugs are constantly being further developed. It is therefore advisable to just obtain spark plugs from Skoda dealers since they are informed about latest developments. ■

V-ribbed belts

The V-ribbed is one of the most highly loaded components on a vehicle. This is why there are high demands on quality made on the V-ribbed belt.

It not sufficient when replacing the V-ribbed belt to choose just any one of the same size. **One should only use the V-ribbed belt foreseen for use on that vehicle for safety reason.**

V-ribbed belts are constantly being further developed. It is therefore advisable to just obtain them from Skoda dealers since they are informed about latest developments. ■

The dust and pollen filter*

The dust and pollen filter for the heating and ventilation system is located in the heater. The filter is replaced according to directions given in the Service Plan. The filter should be replaced even earlier when the air flow is reduced significantly.

Changing of the filter is undertaken by a Skoda dealer as part of the inspection service. ■

Wheels and Tyres

Wheels

General comments

- New tyres do not offer optimal grip at first and should therefore be run in for about 500 km at a moderate speed and an appropriately cautious style of driving. You will also profit from longer tyre life.
- The tread depth of new tyres may differ because of design features and the configuration of the tread (depending on the type of tyre and the manufacturer).
- Drive over curbs on the side of the road and other such obstacles slowly and, where possible, at a right angles in order to avoid damage to tyres and wheel trims.
- Inspect your tyres from time to time for damage (punctures, cuts, splits and bulges). Remove foreign bodies from the tyre profile.
- Damage to tyres and wheels is frequently not visible. Unusual vibrations or pulling of the vehicle to one side could be a sign of tyre damage. **Please reduce your speed immediately and stop if you suspect that a wheel is damaged.** Inspect the tyres for signs of damage (bulges, splits, etc.) If no visible damage is present, please drive at an appropriately slow speed and carefully to the nearest Škoda dealer in order to have your vehicle inspected.
- Also protect your tyres from contact with oil, grease and fuel.
- Immediately replace any dust caps of the valves which have got lost.
- Mark wheels before removing them so that their previous direction of running can be maintained when mounted them again.
- Always store wheels or tyres which been removed in a cool, dry and, where possible, dark place. Tyres which are not fixed to a wheel trim should be stored upright.

Please comply with any national regulations in other countries which may differ from the information stated above.

Unidirectional tyres*

The direction of rotation of the tyres is marked by arrows on the wall of the tyre. This indicates the direction of rotation of the tyre, and it is essential that the tyres are fitted on to run in this direction. Only then are the tyres able to provide the optimal properties in terms of grip, low noise, wear-and-tear and aquaplaning.

Further information concerning the use of unidirectional tyres
⇒ page 225.

Note

Please observe the various differing legal requirements regarding tyres. ■

Tyre life

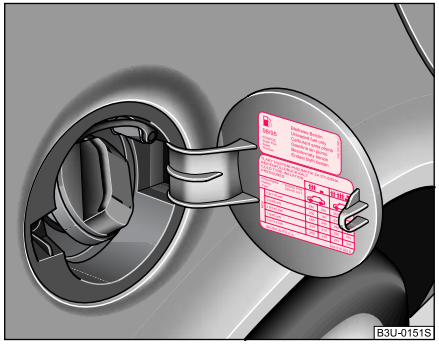


Fig. 164 An opened fuel filler flap with the tyre inflation pressure table

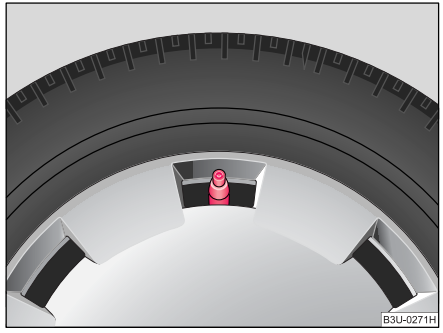


Fig. 165 Wheel with full trim and extended valve

The life of your tyres very much depends on the following points:

Tyre inflation pressure

The working life of tyres will be shortened considerably if the tyres are insufficiently or over-inflated and this will have an adverse effect on the handling of your vehicle.

Check the inflation pressure of the tyres at least once a month. The tyre inflation pressures for **summer tyres** are indicated on the inside of the fuel filler flap ⇒ fig. 164. The inflation pressures for **winter tyres** are 0.2 bar higher than those for summer tyres ⇒ page 224.

Correctly inflated tyres are of particular importance when travelling at **high speeds**. It is therefore good to check the pressure at least once a month and also before setting off on a long trip. Please do not forget the spare wheel when checking the tyres.

The tyre pressure should be at the highest pressure specified for your vehicle at all times.

On cars with full wheel trim, **valve extensions** are fitted in place of dust caps ⇒ fig. 165. It is not necessary to unscrew the valve extensions in order to check and alter the inflation pressure of the tyre.

Driving style

Fast cornering, sharp acceleration and braking (squealing tyres) increase wear-and-tear on your tyres.

Balancing wheels

The wheels of a new vehicle are balanced. There are a wide range of influences when driving which may result in an imbalance and which makes themselves felt through vibration in the steering.

You should have the wheels rebalanced since any imbalance increases wear-and-tear on the steering, the suspension and tyres. A wheel must also be rebalanced when a new tyre is fitted and each time a tyre is repaired.

Wheel alignment errors

Incorrect wheel alignment at the front and rear will not only increase wear-and-tear on the tyres but will also has an adverse effect on vehicle safety. Contact your Škoda dealer if you notice any unusual tyre wear.

WARNING

If the inflation pressure is too low, the tyre must perform a greater flexing work. At higher speeds the tyre will warm up as a result of this. This can result in tread separation and even a tyre blowout.

For the sake of the environment

Tyres which are insufficiently inflated increase your fuel consumption. ■

Wear indicators



Fig. 166 Tyre tread with wear indicators

The base of the tread of the original tyres has wear indicators 1.6 mm high, installed at right angles to the direction of travel. These wear indicators are located at 6 to 8 points depending on the make and are evenly spaced around the circumference of the tyre ⇒ fig. 166. Markings on the walls of the tyres through the letters “TWI” or triangular symbols identify the position of the wear indicators.

A remaining tread of just 1.6 mm, measured in the grooves of the tread next to the wear indicators, means that your tyres have reached their legally permissible minimum tread depth.

WARNING

- **You must have your tyres replaced with new ones at the latest when the wear indicators have been worn down. The legally permissible minimum tread depth should be observed.**
- **Worn tyres do not provide the necessary adhesion to the road surface at high speeds on wet roads. One could experience “aqua-planing” (uncontrolled movements of the vehicle - “swimming” on a wet road surface).** ■

Changing wheels around

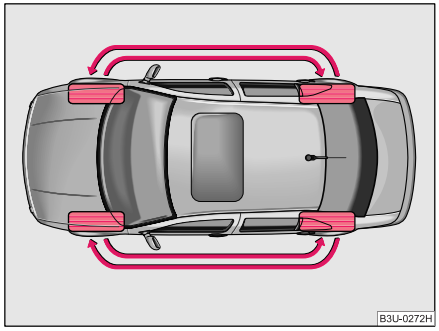


Fig. 167 Changing wheels around

If significantly greater wear is present on the front tyres, we recommend changing the front wheels around with the rear wheels as shown in the diagram ⇒ fig. 167. You will then obtain approximately the same life for all the tyres.

It may be advantageous to swap the tyres over “crosswise” when certain types of wear characteristic arise on the running surface of the tyres (but not in the case of unidirectional tyres). Škoda dealers can provide you with details.

We recommend that you change the wheels around every 10 000 km in order to achieve even wear on all wheels and to obtain optimal tyre life. ■

New tyres and wheels

Tyres and wheel rims are important design elements. One should therefore use the tyres and wheel rims which have been released for use by Škoda Auto. They are exactly matched to the vehicle type and therefore contribute significantly to good road holding and safe driving characteristics ⇒ ⚠.

Only fit radial tyres of the same type on all 4 wheels of the same type, size (rolling circumference) and, if possible, the same tread pattern.

Škoda dealers have access to the most current information about which tyres we have released for use.

We recommend that you have any work relating to tyres or wheels carried out by your **Škoda dealer**. Your dealer has all of the necessary special tools and replacement parts available plus the required specialist knowledge and is also in a position to properly dispose of the old tyres. A large number of Škoda dealers also have an attractive range of tyres and wheels available.

The tyre/wheel combinations which are approved for your vehicle are indicated in your vehicle documents. Approval and licensing may differ according to the legislation prevailing in individual countries.

Proper knowledge of the tyre data makes it easier for you to select the correct type of tyre. Radial tyres have, for example, the following **inscription**:

205 / 60 R 15 91 V

What this means is:

205	Tyre width in mm
60	Height/width ratio in %
R	Code letter for the type of tyre - **R**adial
15	Diameter of wheel in inches
91	Load index
V	Speed symbol

The following **speed restrictions** apply to tyres.

Speed symbol	Permissible maximum speed
S	180 km/h
T	190 km/h
H	210 km/h
V	240 km/h
W	270 km/h
Y	300 km/h

The **date of manufacture** is also stated on the tyre wall (possibly only on the inside of wheel):

DOT ... 30 01...

means, for example, that the tyre was manufactured in the 30th week of the year 2001.

Any **spare wheel** which differs from the tyres fitted to the vehicle (e.g. winter tyres or low-profile tyres) should only be used only for a short time in the event of a puncture and when adopting an appropriately cautious style of driving. It should be replaced as quickly as possible by a normal wheel.

WARNING

- **Only use those tyres or wheel rims which have been approved for your model of Škoda Auto vehicle. Failure to observe this instruction will adversely affect the road safety of your vehicle - risk of accident! Approval and licencing of your vehicle on public roads may also become void as a result.**

WARNING (continued)

- **You must on no account drive at a higher speed than is permissible for your tyres - risk of an accident resulting from tyre damage and loss of control over your vehicle.**
- **Tyres which are 6 years old or more should only be fitted in exceptional cases and when adopting an appropriately cautious style of driving.**
- **Never fit tyres which have already been used without having adequate knowledge of their previous history. Tyres age even if they have not been used at all or only very little. A spare tyre must only be used in exceptional cases and only then when adopting an appropriately cautious style of driving.**
- **Do not, where possible, replace individual tyres but at least replace them on both wheels of a given axle at the same time. Always fit the tyres with the deeper tread depth to the front wheels.**

For the sake of the environment

Old tyres must be disposed of in conformity with the appropriate regulations.

Note

It is not normally possible to fit wheels from other models of cars for technical reasons. This may also apply in certain circumstances to the wheels of the same type of vehicle. ■

Wheel bolts

Wheels and **wheel bolts** are matched to each other in terms of design. Each time you fit other wheels - e.g. light alloy wheels or wheels with winter tyres - you must therefore also use the matching wheel bolts of the ▶

correct length and shape of spherical cap. This is essential to ensure that the wheels are tightly fitted and that the brake system operates properly.

If you retrofit **wheel trims** (or have this done), please also ensure that an adequate flow of air remains assured for cooling the brake system.

Škoda dealers are instructed in the technical possibilities which exist regarding converting or retrofitting wheels, tyres and wheel trim.

The wheel bolts must be clean and must turn easily. ■

Winter tyres

The handling of your vehicle will be significantly improved when driving on wintry roads and at temperatures below 7 °C if you fit winter tyres. Summer tyres do not offer the same grip on ice and snow because of their construction (width, rubber blend, tread pattern). This applies in particular to vehicles which are equipped with **low-profile tyres** or **high-speed tyres** (code index V, W or Y on wall of tyre).

Winter tyres must be mounted on all four wheels to obtain the best handling characteristics.

Only use **radial** winter tyres.

You must only fit those types of winter tyre which are approved for your vehicle. The permissible **sizes of winter tyres** are stated in your vehicle documents. Approvals may differ because of national legislation.

Please remember that the tyres should be inflated to 0.2 bar more than is the case for summer tyres ⇒ page 220.

Winter tyres no longer offer the same winter performance once the **tyre tread** has worn down to a depth of about 4 mm.

Ageing also causes winter tyres to lose most of their winter performance properties - even in cases where the remaining tread depth is still clearly more than 4 mm.

Speed restrictions apply to winter tyres as well as to summer tyres ⇒ ⚠.

You can fit winter tyres of a lower speed category to your vehicle provided that you also do not drive faster than the permissible maximum speed for such tyres, even if the possible maximum speed of your vehicle is higher. Exceeding the speed category of the tyre can lead to damage occurring.

Please pay attention to the notes if you decide to fit winter tyres ⇒ page 219.

You can also fit so-called “all-weather tyres” instead of winter tyres.

Please contact your Škoda dealer If there are any points which are not clear who will be able to provide you with information regarding the maximum speed for your tyres.

⚠ WARNING

You must on no account drive your car at more than the permissible maximum speed for your winter tyres - risk of an accident resulting from tyre damage and loss of control over your car.

For the sake of the environment

Fit your summer tyres on again in good time since summer tyres offer you better grip and handling on roads which are free of snow and ice - the braking distance is shorter, there is less tyre noise, tyre wear is reduced and fuel consumption is reduced.

Note

Please observe the various differing legal requirements regarding tyres. ■

Unidirectional tyres*

The direction of rotation of the tyres is marked by **arrows on the wall of the tyre**. This indicates the direction of rotation of the tyre, and it is essential that the tyres are fitted on to run in this direction. Only then are the tyres able to provide the optimal properties in terms of grip, low noise, wear-and-tear and aquaplaning.

Should it be necessary to fit on a spare wheel in exceptional cases with a tyre not dedicated to the running direction, please adopt a cautious style of driving as the tyre is no longer able to provide optimal grip and handling in such a situation. This particularly important on wet roads. Please refer to the notes ⇒ page 229.

You should have the defective tyre replaced as soon as possible and restore the correct direction of rotation on all tyres ■

Snow chains

Snow chains can be used only for wheel sizes 6J x 16 ET 40 or 6J x 16 ET 37. Your Škoda Dealer can provide you with more detailed information.

Snow chains must only be mounted on the front wheels.

When driving on wintry roads, snow chains improve not only traction, but also the braking performance.

Only use **fine-link snow chains**. They must not project more than 15 mm - including the chain lock.

Remove the **full wheel trim** if you wish to fit snow chains to the wheels.

You must take the chains off as soon as you drive on roads which are free of snow. They adversely affect the handling of your vehicle, damage the tyres and are rapidly destroyed.

Observe the national legal requirements relating to the maximum vehicle speed with snow chains.

Note

We recommend that you use snow chains from the Škoda range of genuine accessories. ■

Accessories, changes and replacement of parts

General

Škoda vehicles have been built according to the latest discoveries in safety engineering. Thus one should not change the condition in which the vehicle was delivered from the manufacturer without some thought.

The following guidelines should be observed when a vehicle is to be retro-fitted with accessories, have technical changes made to it or a part has to be replaced at some time in the future.

- Advise should always be obtained from a Škoda dealer **before** buying any accessories and **before** making any technical changes ⇒ ⚠.
- This is particularly the case when accessories are bought in a foreign country.
- Skoda accessories which have been released for use and original Škoda parts can be obtained from Škoda dealers. They will install them professionally and correctly.
- All original accessories which are listed in the catalogue such as tilting roofs, spoilers, wheels etc. must have an official stamp of approval.
- Radios, aerials and other electrical accessories should only be installed by an authorised workshop.
- The guidelines issued by Škoda Auto must be observed when making technical changes.
- This is to ensure that no technical damage occurs to the vehicle, that travelling and operating safety are maintained and that the chnages are permissible. Škoda dealers undertake this work professionally or refer it to an specialist company in special cases.

Any damage which is done caused by technical changes made without consulting a Škoda Auto is excluded from the warranty.

⚠ WARNING

- **We advise you, in your own interest, to only use Škoda accessories and original Skoda parts which have been expressly approved for use on your Škoda. Reliability, safety and suitabiliity have been established for these parts.**
- **We cannot guarantee suitability of installation into your vehicle of other products despite keeping a constant eye on market developments (also not in the case where there is an attestation or permission can be produced).**

Breakdown assistance

Breakdown assistance

First-aid box*

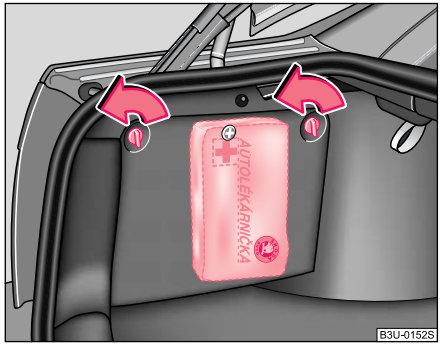


Fig. 168 Compartment for stowing first-aid box

First-aid box

The compartment for stowing the first-aid box is located in the left of the luggage compartment ⇒ fig. 168.

Note

Pay attention to the use-by-date of the contents of the first-aid box. ■

Warning triangle

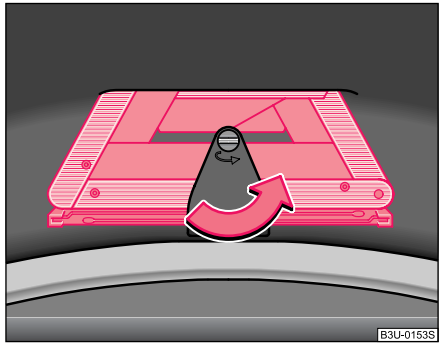


Fig. 169 Warning triangle fitted inside boot lid

– To remove the warning triangle, turn the rotary lock in direction of arrow ⇒ fig. 169 and fold the fixture down. ■

Fire extinguisher*

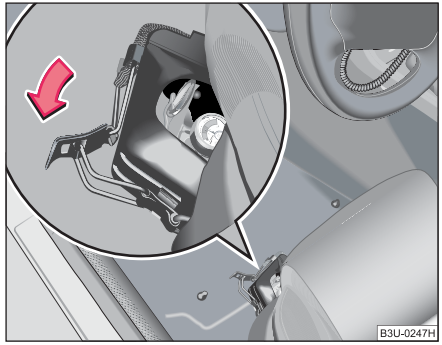


Fig. 170 Front seat: Fire extinguisher

The fire extinguisher is located in the sheath below the driver's seat ⇒ fig. 170.

Please read carefully the instructions which are attached to the fire extinguisher.

The fire extinguisher must be checked by an authorised person or company annually (please observe the national legal equirements).

Note

The fire extinguisher is only supplied in certain countries within the scope of delivery. ■

Vehicle tool kit

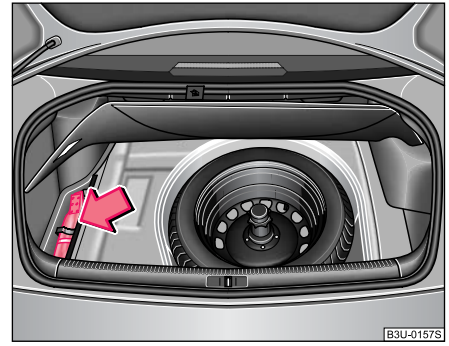


Fig. 171 Luggage compartment: Compartment for stowing the tool kit

The car tool kit and the car jack are stowed in the left of the luggage compartment ⇒ fig. 171 below the floor covering.

The vehicle tool kit contains the following parts (depending on equipment fitted):

- Hook for pulling off a full wheel trim
- Plastic clip for a wheel bolt cover
- Wheel wrench
- Assembly pin for changing wheel
- Screwdriver with reversible blade
- 10 x 13 open-end wrench
- Adapter for the wheel bolts lock

After using the lifting jack, screw in the arm of the lifting jack fully before placing it back in its stowage area.

WARNING

- **The hexagon socket in the handle of the screwdriver is used for fitting on the wheel bolts. Never use it for tightening the wheel bolts because you will not be able to achieve the necessary tightening torque with this tool - risk of accident!**
- **The factory-supplied lifting jack is only intended for your model of vehicle. On no account attempt to lift a heavier vehicle or other loads - risk of injury!**

Spare wheel

The spare wheel is stowed in the spare wheel well in the luggage compartment below the floor covering.

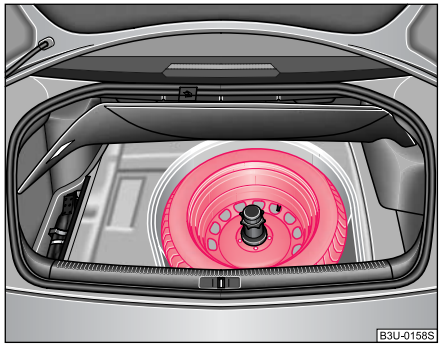


Fig. 172 Luggage compartment: Spare wheel

The spare wheel lies in a well under the luggage compartment floor and is fixed in place using special screws ⇒ fig. 172.

One should check the air pressure in the spare wheel (at best when generally checking the tyre air pressures - see sign on the fuel filler flap) to ensure that the spare wheel is always ready to use.

Unidirectional tyres*

If you have such tyres on your vehicle, please refer to the notes below:

- The spare wheel provided with a car fitted with unidirectional tyres has different dimensions. The wheel is provided with a warning sticker.
- After fitting on the wheel, the warning sticker must not be concealed (e.g. by the wheel trim).
- Do not drive with this spare wheel at more than 80 km/h - risk of accident. Avoid accelerating at full throttle, sharp braking and fast cornering.
- The inflation pressure for this spare wheel is identical to the inflation pressure of the standard tyres.
- Use this spare wheel only to reach the nearest service station as it is not intended for continuous use.

Changing a wheel

Preliminary work

The following steps should be carried out before actually changing the wheel.

– If it is necessary to change a wheel, park the vehicle as far away as possible from the traffic flow. The place you choose should be **level**.

– Have all the occupants **get out**. While changing a wheel, the occupants of the vehicle should not stand on the road (it is better behind a crash barrier).

– Apply the **handbrake** firmly.

– Engage **1st gear** or if your vehicle is fitted with an automatic gearbox, position the **selector lever into position P**.

– If a trailer is coupled, uncouple it.

– Take the **vehicle tool kit** and the **spare wheel** ⇒ page 229 out of the luggage compartment.

WARNING

- **If you find yourself in flowing traffic put on the hazard warning lights system and place the warning triangle on the side of the road at the prescribed distance from your vehicle while observing all national legal provisions. In this way you are protecting not only yourself but also other road users.**
- **Never start the engine with the vehicle sitting on the raised jack - danger of suffering injury!**

Caution

If you have to change a wheel on a slope first block the opposite wheel with a stone or similar object in order to secure the vehicle from unexpectedly rolling away.

Note

Comply with the national legal regulations. ■

Changing a wheel

Always change a wheel on a level surface as far as possible.

– Take off the full wheel trim/wheel trim cap ⇒ page 232, “Wheel trim caps*” or the caps ⇒ page 232, “Wheel bolts with caps*”.

– Slacken the wheel bolts ⇒ page 233.

– Jack up the vehicle until the wheel is clear of the ground ⇒ page 233.

– Unscrew the wheel bolts and place them on a clean surface (cloth, paper etc.).

– Take off the wheel.

– Fit on the spare wheel and tighten the wheel bolts slightly.

– Lower the car.

– Tighten the wheel bolts firmly, alternately and diagonally using the wheel wrench ⇒ page 233.

– Mount the full wheel trim/wheel trim cap or the caps.

Note

- All bolts must be clean and must turn easily.
- You must never grease or oil the wheel bolts! ■

Subsequent steps

After changing the wheel, you must perform the following steps.

– Stow and attach the replaced wheel in the spare wheel well.

– Stow the vehicle tool kit in the space provided.

– **Check** the **tyre pressure** on the spare wheel just mounted as soon as possible.

– Have the **tightening torque** of the wheel bolts **checked** with a torque wrench as soon as possible. The tightening torque must be 120 Nm.

– Have the defective tyre repaired as soon as possible.

WARNING

It is necessary to observe the guidelines given on ⇒ page 222, “New tyres and wheels” if the vehicle is subsequently fitted with tyres which are different to those it was fitted with at the works.

Note

- If you find, when changing the wheel, that the wheel bolts are corroded and difficult to turn, the bolts must be replaced before checking the tightening torque.
- Drive cautiously and only at a moderate speed to a workshop where the tightening torque can be checked. ■

Full wheel trim*

Removing

– Hook the clamp (found in the vehicle toolkit) into the reinforced edge of the full wheel trim.

– Push the wheel key through the clamp, support the wheel key at the tyre and pull off the wheel trim.

Installing

– First press the full wheel trim onto the wheel at the valve opening provided. Then press the full wheel trim into the wheel in such a way that its entire circumference locks correctly in place.

Caution

Use the pressure of your hand, do not knock on the full wheel trim! Heavy knocks mainly on the points where the full wheel trim has not been inserted into the wheel, can result in damage to the guide and centering elements of the full wheel trim. ■

Wheel trim caps*

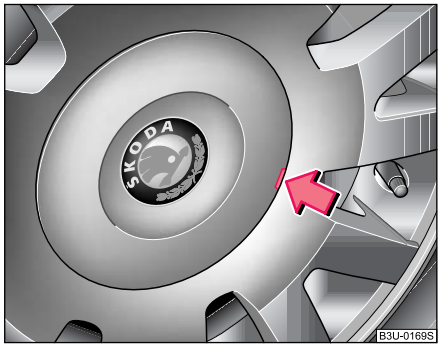


Fig. 173 Changing a wheel: Pulling off the wheel trim cap

Removing

– Carefully ⇒ fig. 173 lever off the wheel trim cap using the removal hook . ■

Wheel bolts with caps*

The caps are designed to protect the wheel bolts.

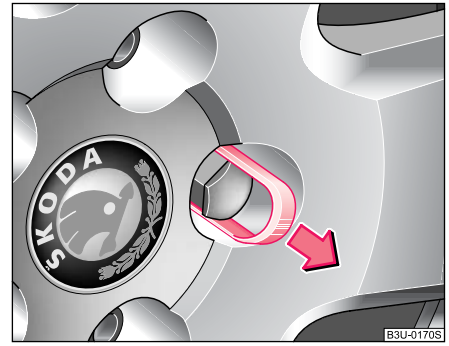


Fig. 174 Changing a wheel: Removing the cap

Removing

– Push the **plastic clip** (in the car tool kit) sufficiently far onto the cap until the inner catches of the clip are positioned at the collar of the cap.

– Pull the cap off with the **plastic clip** ⇒ fig. 174.

Installing

– Push the caps onto the bolts. ■

Slackening and tightening wheel bolts

Slacken the wheel bolts before jacking up the vehicle.

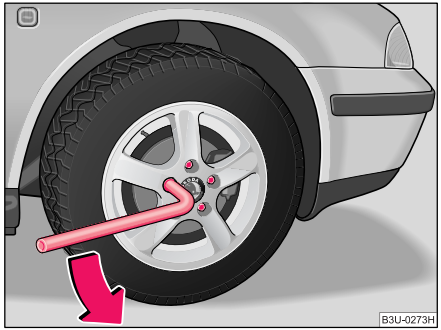


Fig. 175 Changing a wheel: Slackening wheel bolts

Slackening wheel bolts

– Push the wheel wrench fully onto the wheel bolt [3].

– Grasp the end of the wrench and turn the bolt about one turn to the left ⇒ fig. 175.

Tightening wheel bolts

– Push the wheel wrench fully onto the wheel bolt [3].

– Grasp the end of the wrench and turn the bolt to the right until it is tight.

[3] Use the appropriate adapter for slackening and tightening the safety wheel bolts ⇒ page 235.

WARNING

Slacken the wheel bolts only a little (about one turn) as long as the vehicle has not yet been jacked up - risk of an accident!.

Note

- Do not use the hexagon socket in the handle of the screwdriver for slackening or tightening the wheel bolts.
- apply pressure carefully with your **foot** to the end of the wheel wrench if it proves difficult to slacken the wheel bolts. Hold tight on the vehicle when doing this and ensure that you have a steady position. ■

Raise vehicle

You have to raise the vehicle with a lifting jack in order to be able to take off the wheel.

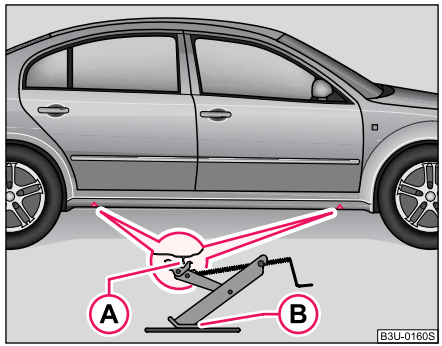


Fig. 176 Changing a wheel: Points for positioning car jack

– Position the lifting jack by selecting the jacking point - lower sill - which is closest to the wheel to be removed ⇒ page 233, fig. 176.

– Position the lifting jack below the jacking point and move it up until its claw is positioned directly below the vertical web of the lower sill.

– Align the lifting jack so that its claw grasps the web of the lower sill Ⓐ and the moving base plate of the jack Ⓑ is resting flat against firm ground.

– Turn the lifting jack up further until the wheel is just clear of the ground.

Ground below the lifting jack which is soft and slippery can cause the vehicle to slip off the jack. It is therefore always necessary to place the liftingjack on a solid surface. Use a wide, stable base, if necessary. Use a non-slip base (e.g. a rubber foot mat) if the **surface is smooth**, such as cobbled stones, a tiled floor,etc.

WARNING

- **Take suitable measures to prevent the base of the lifting jack from slipping off - risk of injury!**
- **Not positioning the lifting jack at the specified points can result in damage to the vehicle. The jack can also slip off if it does not have sufficient grip - risk of injury!**
- **It is important to support the vehicle with suitable supporting blocks if you wish to work under the lifted vehicle - risk of injury!**

Taking off and fitting on wheel

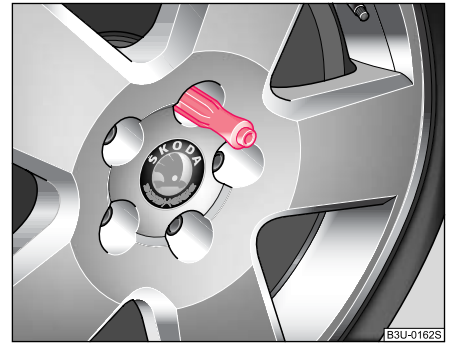


Fig. 177 Changing a wheel: Remove bolts with hexagon in screwdriver

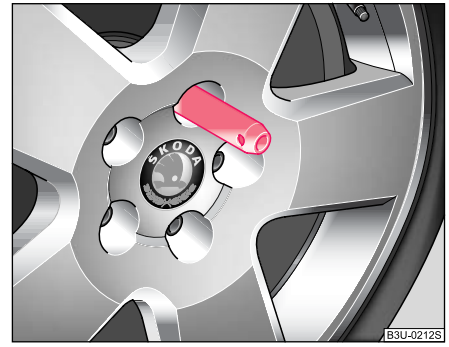


Fig. 178 Changing a wheel: assembly pin

After you have slackened the wheel bolts and have raised the car with the car jack, replace the wheel as follows:

Changing a wheel

– Turn the wheel bolt which is farthest to the **top** fully out with the **hexagon socket** in the screwdriver handle (car tool kit) and place the bolt down on a clean surface ⇒ page 234, fig. 177.

– Screw the assembly pin (car tool kit) into the vacant hole ⇒ page 234, fig. 178.

– Unscrew the remaining wheel bolts as described above.

– Take off the wheel.

Fitting on wheel

– Push the spare wheel over the assembly pin.

– Screw in the wheel bolts and tighten them **slightly** with the aid of the hexagon socket.

– Unscrew the assembly pin and screw in the remaining wheel bolt also slightly.

The wheel bolts must be clean and must turn easily.

The hexagon socket in the handle of the screwdriver makes it simpler to fit on the wheel bolts. The reversible blade should be pulled out for this step.

When fitting on **unidirectional** tyres, ensure that the tyres rotate in the correct direction ⇒ page 225.

Note

Do not use the hexagon socket in the handle of the screwdriver for slackening or tightening the wheel bolts. ■

Securing wheels against being stolen

You need a special adapter for slackening the safety wheel bolts.

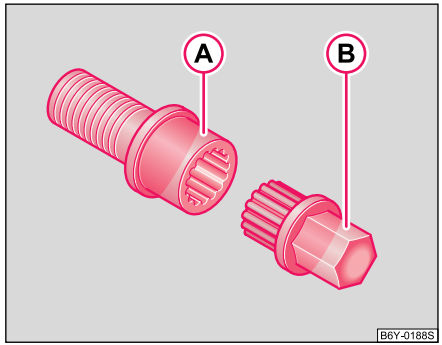


Fig. 179 Safety wheel bolt with adapter

– Pull off the full wheel trim/cap from the wheel hub or cap from the safety wheel bolt.

– Push the adapter (B) with its toothed side into the inner toothing of the safety wheel bolt (A) right down in such a way that only the outer hexagon is jutting out ⇒ fig. 179.

– Push the wheel wrench fully onto the adapter (B).

– Slacken the wheel bolt, or tighten it firmly ⇒ page 223.

– Reinstall the full wheel trim/wheel cap after removing the adapter or place the cap onto the safety wheel bolt. ▶

– Have the **tightening torque checked** with a torque wrench as soon as possible. The tightening torque must be 120 Nm.

The safety wheel bolts on vehicles fitted with them (one safety wheel bolt per wheel) can only be loosened or tighten up by using the adapter provided.

It is meaningful to note the code number hammered into the rear side of the adapter or the rear side of the safety wheel bolts. You can obtain a replacement adapter from a Škoda Dealer, if necessary, by quoting this number.

We recommend that you always carry the adapter for the wheel bolts with you in the vehicle. It should be stowed in the vehicle tool kit.

Caution

Damage can occur to the adapter and safety wheel bolt if the safety wheel bolt is tightened up too much.

Note

The set of safety wheel bolts can be obtained from your Skoda dealer as an original accessory. ■

Jump-starting

Initial steps

You can use the battery of another vehicle for jump-starting yours if the engine does not start because the battery on your vehicle is flat. You will require jump-start cables for this purpose.

Both batteries must have a rated voltage of 12 V. The **capacity** (Ah) of the battery supplying the power must not be significantly less than the capacity of the discharged battery in your vehicle.

Jump-start cables

Only use jump-start cables which have an adequately large cross-section and insulated terminal clamps. Please pay attention to the manufacturer's instructions.

Positive cable - colour coding in the majority of cases red.

Negative cable - colour coding in the majority of cases black.

WARNING

- **A discharged battery may already freeze at temperatures just below 0°C. It is essential to thaw out a frozen battery before you connect the jump-start cables - risk of an explosion!**
- **Please pay attention to the warning instructions relating to working in the engine compartment ⇒ page 203.**

Note

- There must not be any contact between the two vehicles otherwise current may flow as soon as the negative terminals are connected.
- The discharged battery must be properly connected to the system of the vehicle.
- Switch off any mobile phone, pay attention to the instructions for use of the mobile phone in such a situation.
- We recommend purchasing jump-start cables from a Skoda dealer as an original accessory or from retailers who sell branded batteries. ■

Starting engine

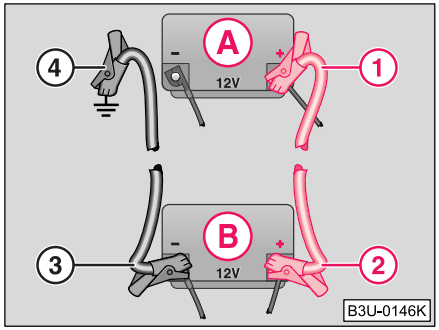


Fig. 180 Jump-starting using the battery from another vehicle: A - flat vehicle battery, B - battery providing current

It is important to connect the jump-start cables in the correct order.

Connecting positive terminals

– Attach one end to the positive terminal (1) ⇒ fig. 180 of the discharged battery (A).

– Attach the other end to the positive terminal (2) of the battery supplying the power (B).

Connecting negative terminal and engine block

– Attach one end to the negative terminal (3) of the battery supplying the power (B).

– Attach the other end (4) to a solid metal part which is connected firmly to the engine block, or to the engine block itself.

Starting engine

– Start the engine of the vehicle providing current and run the engine at idling speed.

– Now start the engine of the vehicle with the discharged battery.

– Interrupt the attempt at starting an engine after 10 seconds if it does not start right away and wait for about 30 seconds before repeating the attempt.

– Disconnect the cables on the engine in exactly the **reverse order** they were connected up.

WARNING

- **The non-insulated parts of the terminal clamps must never make contact with each other. Furthermore, the cable connected to the positive terminal of the battery must not come into contact with electrically conducting parts of the vehicle - risk of a short circuit!**
- **Do not affix the jump starting cables to the negative terminal of the discharged battery. There is the risk of detonating gas seeping out the battery being ignited by the strong spark which results from the engine being started.**
- **Run the jump-start cables so that they cannot be caught by any rotating parts in the engine compartment.**
- **Do not bend over the batteries - risk of caustic burns!**
- **The vent screws of the battery cells must be tightened firmly.**
- **Keep any sources of ignition (naked flame, smouldering cigarettes etc.) away from the battery - risk of an explosion!**

Tow-starting and towing vehicle

General

Please pay attention to the following instructions if you are going to use a tow rope:

Driver of the towing vehicle

– Do not drive off until the tow rope is taught.

– Release the clutch particularly gently when starting off or depress the accelerator particularly gently if your vehicle is fitted with an automatic gearbox.

Driver of the towed vehicle

– Switch the ignition on so that the steering wheel is not blocked and you can also operate the turn signal lights, the headlight flasher, the windscreen wipers and windscreen washer system.

– Take the vehicle out of gear or move the selector lever into position **N** if your vehicle is fitted with an automatic gearbox.

– Note that the brake servo unit and power steering only operate if the engine is running. You will require significantly greater physical force to depress the brake pedal and to steer the vehicle if the engine is not running.

– Ensure that the tow rope is always kept taught.

Tow rope or tow bar

A tow **bar** is safest way of towing a vehicle and also minimizes any shocks. You can use a tow **rope** only if a suitable tow bar is not available.

The tow rope must be elastic to protect the vehicle. Thus one should only use plastic fibre rope or a rope made out of a similarly elastic material.

Attach the tow rope or the tow bar only to the **towing eyes** provided for this purpose ⇒ page 239, “Towing eye” and ⇒ page 239, “Rear towing eye”.

Driving style

Towing another vehicle requires a certain amount of practice. Both drivers should be familiar with the particular points about towing a vehicle. Unskilled drivers should not attempt to tow-start or tow in another vehicle.

One should be constantly vigilant not to allow impermissibly high towing forces or jerky loadings. There is always a risk of excessive stresses and damage resulting at the points to which you attach the tow rope or tow bar when you attempt to tow a vehicle which is not standing on a paved road.

Caution

If the gearbox of your vehicle no longer contains any oil because of a defect, your vehicle must only be towed in with the driven wheels raised clear of the ground, or on a special vehicle transporter or trailer.

Note

Please comply with any legal requirements particularly regarding the switched on signal systems, when towing in or tow-starting another vehicle. ■

Towing eye

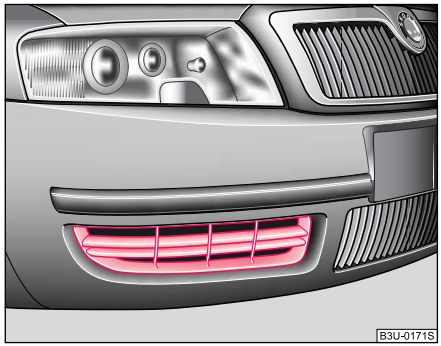


Fig. 181 Front bumper: Protective grille for the towing eye

The front towing eye is welded on behind the bumper on the right.

– Carefully pull the protective grille ⇒ fig. 181 off in the right-hand area of the bumper. ■

Rear towing eye

The rear towing eye is welded on below the rear bumper on the right. ■

Tow-starting a vehicle

If the engine does not start, we generally do **not recommend** to tow-start your vehicle. One should attempt to start the engine using jump start cables ⇒ page 236 or call on the services of the SERVICE mobile.

If your vehicle has to be towed:

– Engage 2nd or 3rd gear with the vehicle stationary.

– Depress the clutch pedal fully and keep it depressed.

– Switch on the ignition.

– Wait until both vehicles are moving then release the clutch pedal slowly.

– Depress the clutch pedal fully when the engine fires and take the vehicle out of gear.

For technical reasons it is not possible to tow-start a car fitted with an **automatic gearbox**.

WARNING

There is high risk of having an accident when tow-starting a vehicle, when for example the towed vehicle runs into the towing vehicle.

Caution

Vehicles which are fitted with a catalytic converter should not be tow-started over a distance of more than 50 metres. Unburnt fuel may get into the catalytic converter and damage it. ■

Towing in a vehicle fitted with a manual gearbox

Please refer to the notes ⇒ page 238.

The car can be towed in with a tow bar or a tow rope or with the front or rear wheels raised. The maximum towing speed is **50 km/h**. ■

Towing of a vehicle with an automatic gearbox

Please refer to the notes ⇒ page 238.

The car can be towed in with a tow bar or a tow rope. Pay attention to the following points:

- Move **selector lever into N**.
- The maximum towing speed is **50 km/h**.
- The maximum permissible towing distance is **50 km**. The gear oil pump does not operate when the engine is not running and the gear would not be adequately lubricated at higher speeds and over longer towing distance.

Caution

If the vehicle is towed in by a recovery vehicle, it should only be towed in with the front wheels raised. If the vehicle is raised at rear, the automatic gearbox is damaged!

Note

The vehicle must be transported on a special vehicle or trailer if it is not possible to tow in the vehicle in the way described or if the towing distance is greater than 50 km. ■

Fuses and light bulbs

Electric fuses

Replacing fuses

Defect fuses must be replaced.

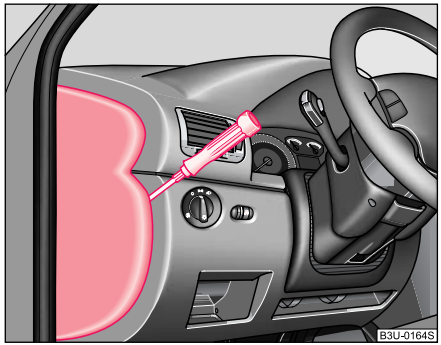


Fig. 182 Left side of the dash panel: fuse cover

Individual electrical circuits are protected by fuses. The fuses are located on the left side of the dash panel behind the safety cover.

– Switch the ignition off and also the electrical component affected.

– Use a screwdriver to take off the fuse cover ⇒ fig. 182.

– Find out which fuse belongs to the component which is not operating ⇒ page 242, “Fuse assignment”.

– Take the plastic clip out of the fixture in the fuse cover, insert it onto the fuse in question, and pull it out.

– Defect fuses can be detected by their melted metal strips. Replace the defect fuse by a new fuse of the **same** ampere number.

– Fit on the fuse cover again.

We recommend that you carry the box of replacement fuses with you which was delivered in your vehicle. Replacement fuses [4] are available at Škoda dealers.

Colour coding of fuses

Colour	Maximum amperage
light brown	5
brown	7,5
red	10
blue	15
yellow	20
white	25
green	30

[4] Replacement fuses are, on the other hand, part of the basic equipping of the vehicle in some countries.

Caution

- Never attempt to “repair” fuses and also do not replace them with a fuse of a higher amperage - risk of fire! This may also cause damage at another part of the electrical system.
- Have the electrical system checked as quickly as possible by a Škoda dealer if a newly inserted fuse blows again after a short time. ■

Fuse assignment

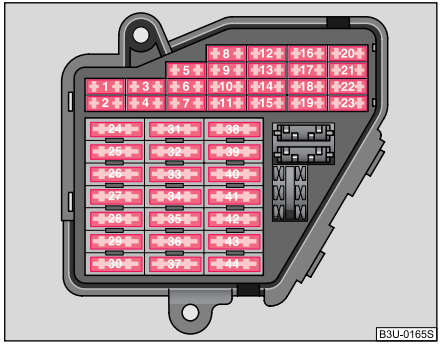


Fig. 183 Schematic representation of fuse carrier

Certain electrical components are only standard on certain vehicle model versions or only suppliable as optional equipment for certain models.

No.		Amperes
1	Heatable windscreen washing nozzles	5
2	Turn signals	10
3	Not assigned	
4	Licence plate light	5
5	Instrument cluster - warning lights, seat heaters, cruise control system, exterior mirror adjustment, lighting of controls and switches, outside temperature display, air conditioning, audible parking aid, navigation system, multifunction steering wheel	10
6	Heating of the external mirror	5
7	ABS, EDS, ASR, ESP, cruise control system, engine electronics	10
8	Automatic headlight beam adjustment	5
9	Parking aid	5
10	CD changer, mobile phone, multifunction steering wheel	5
11	Electrically adjustable seats	5
12	Power supply for diagnostic socket	10
13	Brake lights	10
14	Central locking control unit, interior lighting	10
15	Instrument cluster, air conditioning, automatic gearbox, exterior mirror adjustment memory and navigation system	10
16	ESP	5
17	Two-way radio system, special vehicles (police etc.)	10

No.		Amperes
18	Right main beam	10
19	Left main beam	10
20	Low beam on the right	15
21	Low beam on the left	15
22	Parking light on the right	5
23	Parking light on the left	5
24	Windscreen washer system, windscreen wiper pump and intermittent switch	25
25	Fan for fresh air, the air conditioning unit, Climatronic	30
26	Rear window heating, recirculated air mode	30
27	Not assigned	
28	Fuel pump, diesel additional pump	20
29	Engine control	20
30	Electric sliding/tilting roof	20
31	Reversing lights, cruise control system, automatic gearbox, automatic dimming interior mirror	15
32	Engine control, cruise control system	20
33	Cigarette lighter	15
34	Engine control	15
35	Trailer socket	30
36	Fog lights	15
37	Radio, navigation	20
38	Central locking system	15
39	Hazard warning light system	15
40	Horn	25
41	Not assigned	
42	ESP	25
43	Engine control	15
44	Seat heaters	30

The power windows and the power seats are protected by **automatic circuit breakers** which switch on again automatically after a few seconds after the overload has been eliminated - e.g. frozen windows. ■

Bulbs

Changing bulbs

The relevant lamp must always be switched off before a light bulb is replaced.

Do not take hold of the glass bulb with naked fingers (even the smallest amount of dirt reduces the working life of the light bulb). Use a clean cloth, serviette or something similar.

Defect light bulbs should only be replaced with light bulbs of the same type. The designation is located on the light socket or the glass bulb.

Changing certain bulbs is not something which you can do yourself, but requires to be done by a specialist. Other parts of the vehcle must be ▶

removed in order to change the light bulbs. This applies, in particular, to bulbs which can only be reached from the engine compartment.

We therefore recommend that you have any bulbs changed by a Škoda dealer or, in exceptional cases, by calling on other professional assistance.

Please note that the engine compartment is a hazardous area ⇒ page 203, “Working in the engine compartment”.

We recommend that you carry the set of light bulbs with you which was delivered in your vehicle. Replacement light bulbs [5] are available at Škoda dealers.

Fitted with a xenon headlight

Change of light bulbs on Xenon lights (low beam lights, parking lights and main beam lights) should be undertaken by a Skoda dealer.

Overview of bulbs

Front headlight	Halogen headlight	Xenon headlight
Low beam	H7	D2S
Main beam	H3	D2S, H3
Parking lights	W5W	HW5W
Turn signals	PY21W	PY21W
Fog lights	H3	H3

Rear light unit	Bulb
Reversing light	P21W
Turn signal light	PY21W
Brake lights	P21W
Side light and rear fog light	P21/4W
Others	
Side turn signal lights	WY5W
Licence plate light	C5W
3. Brake light	LED
Interior light	4x W5W
Reading light	12 V/3.8 W or C5W
Luggage compartment light	W5W
Entry light	W5W
Storage compartment light - front passenger side	C3W
Interior mirror light	C5W
Footwell light	W5W

WARNING

- **Bulbs H7 and H3 are pressurised and may burst when changing the bulb - risk of injury!**
- **It is recommended to wear gloves and eye protection when changing a light bulb.**
- **Gas discharge bulbs* (xenon bulbs) operate with a high voltage, professional knowledge is required - danger to life!**

[5] Replacement light bulbs are, on the other hand, part of the basic equipping of the vehicle in some countries.

Note

This Owner's Manual only describes the replacement of bulbs where it is assumed that no major complications will arise. Other light bulbs should be changed by your Škoda dealer. ■

Rear light unit

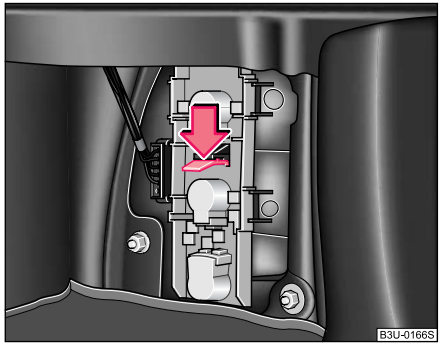


Fig. 184 Luggage compartment: Remove light bulb holder

– Open the boot lid/luggage compartment door.

– Raise the floor covering.

– Press the catch in direction of arrow and pull out the light fixture.

– Press the defect light bulb in to the holder, turn anti-clockwise and remove.

– Insert the new light bulb and turn it fully to the right.

– Insert the light bulb holder again, the plastic tongue must lock in place. ■

Licence plate light

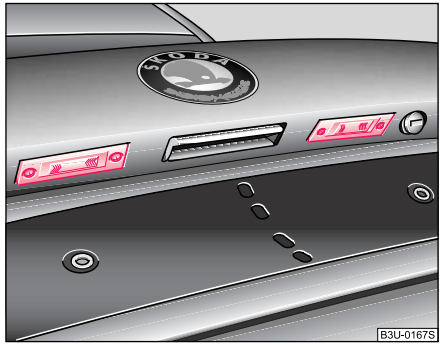


Fig. 185 Luggage compartment door Licence plate light

– Open the boot lid/luggage compartment door.

– Unscrew the glass cover of the light ⇒ fig. 185.

– Take the faulty bulb out of the fixture and insert a new one.

– Replace the the glass cover of the light and press it down to the stop - ensure that the glass cover is correctly installed.

– Screw the glass cover tight. ■

Luggage compartment light

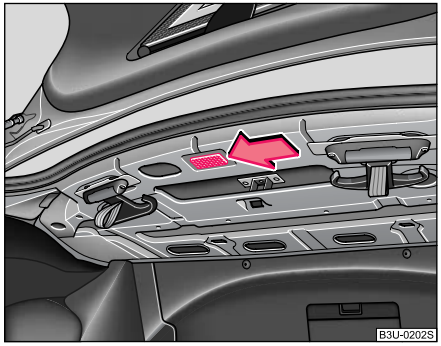


Fig. 186 Luggage compartment: Lighting

– Insert a small screwdriver into the slot next to the light ⇒ fig. 186 and carefully press out the light.

– Unplug the connector.

– Take the faulty bulb out of the fixture and insert a new one.

– Plug in plug.

– Insert the light first of all on the side opposite the arrow and press it in carefully - until it locks in place. ■

Interior lights at the front

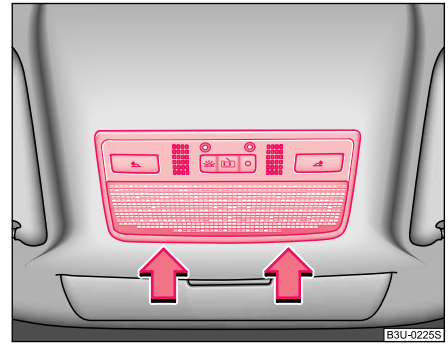


Fig. 187 Interior lights at the front for vehicles without an electric sliding/tilting roof

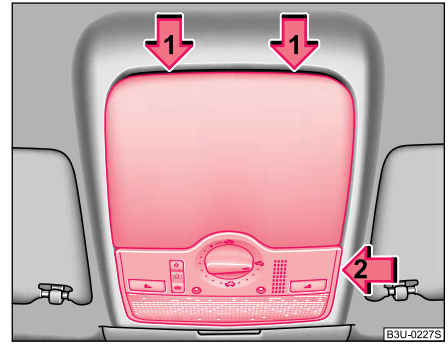


Fig. 188 Interior lights at the front for vehicles with an electric sliding/tilting roof

Changing the bulb for interior light of vehicles without an electric sliding/tilting roof

– Insert a small screwdriver into the slot next to the light ⇒ page 246, fig. 187.

– Carefully press out the light and remove it from the headliner.

– Take the faulty bulb out of and insert a new one.

– First of all place the lights in the mounts at the rear and press them into the headliner, until they lock into place.

Changing the bulb for interior light of vehicles with an electric sliding/tilting roof

– Position a small screwdriver carefully against the rear edge of the cover of the power roof drive - arrows 1- ⇒ page 246, fig. 188.

– Lever off the cover down carefully.

– Insert a small screwdriver into the slot next to the light - arrow 2-.

– Carefully press out the light and remove it from the headliner.

– Take the faulty bulb out of and insert a new one.

– First of all place the lights in the side plastic mounts and press them upwards, until they lock into place.

– Press on the cover again by first of all inserting the plastic lugs and then pushing the cover up. ■

Interior lights at the rear

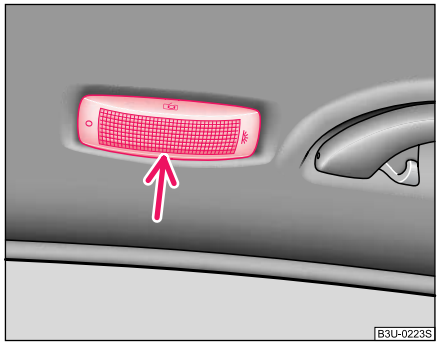


Fig. 189 The interior light at the rear without interior monitoring sensors

Changing the bulb for lights without interior monitoring sensors

– Insert a small screwdriver into the slot next to the light cover ⇒ fig. 189 and carefully lever the cover off.

– Take the faulty bulb out of and insert a new one.

– Insert the cover and press it in fully until it locks in place.

Changing the bulb for lights with interior monitoring sensors

– We recommend having these bulbs replaced by a Škoda dealer. ■

Lighting in storage compartment on front passenger side

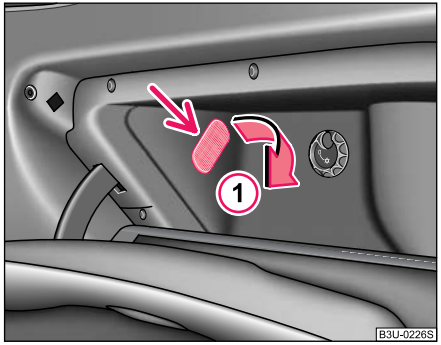


Fig. 190 Storage compartment: Lighting

– Insert a small screwdriver into the slot next to the light ⇒ fig. 190 and carefully lever out the light in the direction of the arrow (1).

– Unplug the connector.

– Take the faulty bulb out of and insert a new one.

– Plug in plug.

– Insert the light and press it into the wall of the storage compartment. ■

Entry lighting

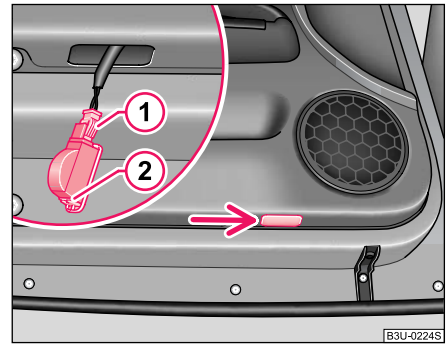


Fig. 191 Inner part of the door: Entry light

– Insert a small screwdriver into the slot next to the light ⇒ fig. 191 and carefully lever out the light.

– Unplug plug (1).

– Push away the spring clip on the cover (2) and remove the cover.

– Take the faulty bulb out of and insert a new one.

– Insert the cover again and secure it by locking it in place.

– Plug in plug.

– Insert the light from the rear and press it forwards up to the stop. ■

Technical Data

General

Vehicle identification data

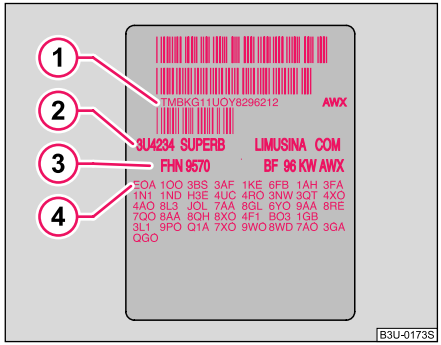


Fig. 192 Vehicle data sticker

Vehicle data sticker

The vehicle data sticker ⇒ fig. 192 is located on the floor of the luggage compartment and is also stated in the Service Schedule.

The vehicle data sticker contains the following vehicle data:

1. Vehicle identification number
2. Vehicle type
3. Gearbox code, paint number, interior equipment number, engine output, engine code
4. Optional equipment

Vehicle identification number (vehicle body number)

The vehicle identification number is stamped in the rear cross panel of the engine compartment and is also indicated below the windscreen on the left in the driver area.

Engine number

The engine number is stamped into the engine block.

Type plate

The type plate is affixed to the rear cross panel in the engine compartment on the right looking in the direction of travel.

Vehicles for certain export countries do not have a type plate.

Stickers on inside of fuel filler flap

The stickers are affixed to the inside of the fuel filler flap and contain the following data:

- The prescribed types of fuel
- Tyre size
- Tyre pressure

Note

- You will find the technical data of your vehicle in the separate brochure "Technical Data".
- Please note that the information stated in the **official vehicle registration documents** always takes priority. ■

Index

A

ABS 173
Accessories 226
Adjusting seats 69
  Adjusting front seats manually 69
  electrically 70
Adjusting the steering wheel 114
Air outlet vents 106
Airbag 145
  Deactivating 154
  Deployment 146
  Front airbags 147
  Head airbags 152
  Side airbags 149
  Warning light 30
Airbag system 145
Alarm 47
Alcantara 196
An overview
  Cockpit 11
Antilock Brake System 173
Antilock brake system (ABS)
  Warning light 34
Anti-theft alarm system 47
Ashtray 91
Auto Check Control 25
Automatic gearbox
  5-speed automatic gearbox 123
  Dynamic shift programme 127
  Emergency programme 129
  Kickdown function 126
  Selector lever lock 126
  Selector lever positions 124
  Tiptronic 128
Automatic seat adjustment 71
Automatic vehicle wash systems 190
Avoiding damage to your vehicle 178

B

Belt tensioners 143
Belts 138
Biodiesel 198
Bonnet 202
Boot lid 44
Brake Assist 174
Brake booster 172
Brake fluid 210
Brake pads 32
Brake system
  Warning light 35
Bulbs
  Warning light 33
Button on the driver's door
  Central locking system 42

C

Car jack 228, 233
CargoFlex 85
CargoFlex folding box 85
Catalytic converter 177
Central locking system 39
  Opening a single door 43
  Unlocking 41
Changing a wheel 229
Changing bulbs 243
Changing oil 207
Changing wheels around 222
Charging 36
Charging the battery 214
Chassis number 249
Child safety 157
  Side airbags 160
Child safety locks
  rear doors 45
Child safety seats
  ISOFIX system 166

Child seat 161
Attaching 164
Child seat protection 164
Classification into groups 161
on the front passenger seat 158
Safety instructions 157
Use of child seats 161
Cigarette lighter 93
Cleaning 189
Climatronic
Air outlet vents 112
Blower 111
Defrosting windows 108
economic use 108
Keeping windows demisted 109
Operational problems 108
Recirculated air mode 110
Setting temperature 111
Climatronic (automatic air conditioning) . . . 107
Clothes hooks 101
Cockpit
An overview 11
Coming Home 60
Compartments 95
Convenience operation 51
Converting/masking over headlights 178
Cool box 82
Coolant 31, 208
replenishing 209
Coolant temperature gauge 14
Coolant temperature/coolant level
Warning light 31
Counter for distance driven 16
Cruise control 120
Cruise control system 120

D

Deactivating an airbag 154
Defrosting windows
The air conditioning system 104
De-icing windows 192
Detachable towing device 186
Diesel 198
Digital clock 15
Dipstick 206
Direction indicators 59
Warning light 29
Doors
Child safety locks 45
Drinks can holder
at the front 90
at the rear 90
Driving economically 179
Dynamo
Warning light 36

E

EDL
See Electronic Differential Lock 34
Electric sliding/tilting roof 52
Electronic Differential Lock
Operating principle 171
Warning light 34
Electronic stability programme
Operating principle 169
Electronic stability programme (ESP)
Warning light 34
Emergency key 37
Emergency operation
Fuel filler flap 201
Engine compartment
Safety instructions 203
Engine electronics
EPC warning light 31
Engine oil 205
changing 207
replenishing 207
Engine revolutions counter 14
Environmental compatibility 179, 183
Exterior mirrors 67

F

First-aid box 227
Fog lights 57
Warning light 30, 31
For the first 1 500 kilometres 176
Front airbags 147
Front armrest 100

Fuel 198
Diesel 198
Fuel gauge 15
Petrol 198
saving 179
Fuel consumption 21
Fuel gauge 15
Fuel reserve
Warning light 32
Fuse 241
Assignment 242

G

Glow plug system 116
Warning light 31

H

Handbrake 118
Hazard warning light system 58
Warning light 29
Head restraint 74
Headlight flasher 59
Headlights
Fog lights 57
Headlight cleaning system 65
Heated windscreen washer nozzles 64
Heating 102
Heating of the external mirror 67
Horn 11

I

Ignition lock 114
Information display 22
Instrument cluster 13
Instrument lighting 57
Instruments 13
Interior lighting
at the front 60
at the rear 61
Luggage compartment 62
Interior monitoring 49
Intermittent wipe 64
Isofix 166
ISOFIX system 166

J

Jacking points 233
Jump-starting 236, 237

K

Keeping windows demisted
The air conditioning system 104
Keys 37

L

Leather care 195
Lighting of the interior of the vehicle 60
Lights
switching them on and off 56
Lights and Visibility 58
Locking 39
Central locking system 41
Remote control 46
Locking and unlocking from inside 42
Low beam 56
Warning light 30
Luggage compartment 78
CD-ROM player 80
Folding double hooks 80
Lashing eyes 79
Luggage compartment opening 81
Luggage compartment door
Lighting 62
Lumbar support 70

M

Main beam 56, 59
Warning light 29
Manual gearbox 118
Memory for the on-board computer 19
Mirror
Storing and retrieving settings 72
Mobile phone 132, 135
Motoring abroad 178
Headlights 178

Multifunction steering wheel 130
Operating cruise control system 130
Operation of radio 131
Multi-functional indicator 18

N

Natural leather 194
Navigation system 27, 135

O

Oil 205
Warning light 32
Onboard computer 18
Open door
Warning light 33
Opening a single door 43
Operation in winter
Biodiesel 199
De-icing windows 192
Snow chains 225
The battery 214
Tyres 224
Overview of the engine compartment 204

P

Paint 192
Paint damage 192
Parking aid 119
Parking light 59
Parking lights 56
Pedals 78
Petrol 198
Polishing 191
Power socket 93, 94
Power steering 174
Power windows
Central locking system 51
Operational problems 52
Switch on the driver's door 49
Switches in front passenger door and in rear doors 51

R

Rear fog light 57
Warning light 31
Rear window heater 62
Rear-view mirror
Exterior mirrors 67
Interior rear-view mirror 66
Recirculated air mode
Heating and ventilation 105
Refuelling 200
Emergency release of fuel filler flap . . . 201
Remote control 46
Synchronisation 47
Replacing fuses 241
Roof aerial 190
Running in the car 176

S

Safety instructions
Engine compartment 203
Safety wheel bolts 235
Saving energy 179
Seat belt height adjuster 142
Seat belt warning light 141
Seat belts 138, 143
Belt tensioners 143
Blocking 143
Cleaning 196
Fasten 141
Height adjustment 142
Safety instructions 140
taking off 142
Warning light 36
Seat heaters 77
Service Interval Display 17
Service key 37
Setting temperature
The air conditioning system 103
Setting the clock 15
Shifting gears 118
Ski bag 81
Sliding/tilting roof 52
Snow chains 225
Spare wheel 229
Speedometer 16

Starting engine 115
after fuel tank has run empty 117
Diesel engine 116
Petrol engine 116
Storage compartment
Door trim panels 98
Lighting 60
Umbrella 99
Storage compartments 95
Storage drawer 96
Storage facilities 95
Stowage compartment below steering wheel 98
Sun visors 63
Switch on the driver's door
Power windows 49
Switching the engine off 117

T

Taking care of your vehicle 189
TCS
Warning light 34
Telephone 132
The air conditioning system 102
The armrest at the rear 101
The automatic wiper/washer system 64
The battery 212
changing 216
charging 214
disconnecting and connecting 216
Inspecting the electrolyte level 214
Operation in winter 214
The electronic immobiliser 35, 39
The radiator fan 210
The roof luggage rack system 88
Thickness of brake pads
Warning light 32
Through-loading bag 81
Tiptronic 123
Tool 228
Towing a vehicle 238
Towing eye
at the front 239
at the rear 239
Tow-starting a vehicle 238
Tow-starting and towing vehicle
Automatic gearbox 129
Traction Control System
Operating principle 170
Trailer 184
Driving Tips 185
General Maintenance 184
technical aspects 184
Transporting children 157
Tread depth 221
Trip counter for distance driven 16
Turn signal system for vehicles towing a trailer
Warning light 30
Turn signals
Warning light 29
Two-way radio sets 135
Two-way radio systems
mobile 135
Type plate 249
Tyres 220

U

Underbody protection 193
Unlocking 39
Remote control 46

V

Vanity mirror 63
Vehicle electrics 36
Vehicle identification data 249
Vehicle tool kit 228

W

Warning lights 28
Warning symbols on the instrument cluster . . 28
Warning triangle 227
Washing
Wash systems 190
with high-pressure cleaner 191

Washing vehicle by hand 190
Wax treatment 191
Wheel bolts 223
Wheel rims 219
Wheels 219
Windscreen Wiper and Washer System . . . 217
Windscreen wipers 64
Windshield washer fluid reservoir
Warning light 33
Winter tyres 224
Wiper blades
Replacing windscreen wiper blades 66

X

Xenon headlights 178, 243

Škoda Auto is constantly working on the further development of all types and models. Please understand that, for this reason, changes to the scope of supply in terms of shape, equipment and engineering may be introduced at any time. It is therefore not possible to derive any claims from the information, illustrations and descriptions contained in this Owner´s Manual .

Reprinting, reproduction, translation or any other use of this document, in whole or in parts, is not permitted without the written consent of Škoda Auto.

Škoda Auto expressly reserves all rights in respect of copyright.

Subject to modification.

Published by ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2003

How you can contribute to a cleaner environment

The fuel consumption of your Škoda - and thus the level of pollutants contained in the exhaust - is also determined by how you drive.

The noise level and wear and tear are also influenced by how you personally handle your vehicle. This Owner´s Manual tells you how to drive your Škoda to achieve the minimum impact on the environment, and how to save money at the same time. Look up „Environment“ in the Index to find out more.

Please also refer to all the texts identified with a ❀ in this Owner´s Manual.

Make your contribution – for the sake of the environment.

Návod k obsluze
Superb anglicky 08.03
S73.5610.04.20
3U0 012 003 DE
www.skoda-auto.com