WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

☐ CLIMATE CONTROL –pages 12-13
- Explain the different air modes to customer.

☐ TIRE PRESSURE MONITORING SYSTEM (TPMS) – page 28

Explain TPMS function to customer.
- When illuminated, one or more tires are under-inflated.
- Blinks for approximately one minute then remains illuminated when there is a malfunction with the TPMS.




☐ BLUE LINK – pages 20-21
- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment

Show Blue Link Users Manual & tear out Voice Commands/Quick Tip Card
- Encourage customers to press the Blue link button after enrollment to initiate Welcome Call

☐ CLOCK ADJUSTMENT – page 26

Hour 1
Pressing the H button will advance the time displayed by one hour.

Minute 2
Pressing the M button will advance the time displayed by one minute.

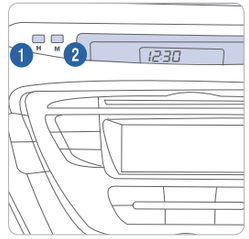

☐ VEHICLE SETTINGS – pages 10-11 & 23-25
- Demonstrate vehicle settings in instrument cluster
- Demonstrate navigation use, enter dealer address
- Show radio presets



☐ BLUETOOTH – pages 18-19
- Demonstrate phone pairing Refer to www.hyundaiusa.com/bluetooth
- Demonstrate QR code

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil and Filter	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Battery Condition	Inspect	7,500	Inspect	Same As Normal
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter (For Evaporator and Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500 or 6 mos.
Electronic Throttle Control	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Front Brake Disc / Pads, Calipers	Inspect	15,000	Inspect	More Frequently
Rear Brake Drums / Linings Rear Brake Disc / Pads	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Brake/Clutch Fluid	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses and Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect	30,000	Inspect	Same As Normal
Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose, Fuel Tank & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Manual Transmission Fluid	Inspect	37,500	Replace	75,000
Drive Belt (Alt, A/C)	1st Inspect 60,000 or 72 mos. Add'l Inspect 15,000 or 24 mos.		Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	100,000 or 10 yrs.	Replace	More Frequently
Coolant	1st Replace 120,000 or 10 yrs. Add'l Replace 30,000 or 24 mos.		Replace	Same As Normal
Automatic Transmission Fluid	No check, No service required		Replace	60,000

*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

NP150-82014-C
(Rev 12/11/13)
Printing 12/14/13



HYUNDAI | ELANTRA COUPE

Quick Reference Guide

www.hyundai.com

HYUNDAI
NEW THINKING.
NEW POSSIBILITIES.

Roadside Assistance: 1-800-243-7766
Consumer Affairs: 1-800-633-5151
XM® Radio: 1-800-967-2346
Blue Link: 1-855-2BLUELINK (1-855-225-8354)

Table of contents

GETTING STARTED

Engine start/stop button 03
Front seat adjustment 03
Fuel filler lid 05
Headrest adjustment 04
Remote keyless entry 02
Seat belt adjustment 04
Steering wheel adjustment 05

FEATURES AND CONTROLS

Active ECO system 29
Central door lock switch 06
Climate control 12-13
Clock adjustment 26
Cruise control system 14
Driver's main controls 06
Electronic Stability Control (ESC) 28
Head lights and fog lights 07
Instrument cluster 10-11
Instrument panel illumination 11
Interior lights 09
Rear seat folding 30
Rearview camera 33
Steering wheel functions 14-15
Sunroof 08
Tire Mobility Kit 31-32
Tire Pressure Monitoring System (TPMS) 28
Transmission 27
Trip computer 11
Wiper and washer 07


MULTIMEDIA

AUX, USB and iPod® port 22
Blue Link Telematic system 20-21
Bluetooth® operational tips 16-17
Bluetooth® phone pairing 18-19
Navigation 23-25
Standard radio 22

*Some vehicles may not be equipped with all the listed features.

FREQUENTLY ASKED QUESTIONS

- Pair phone to your vehicle. Refer to pages 18-19.

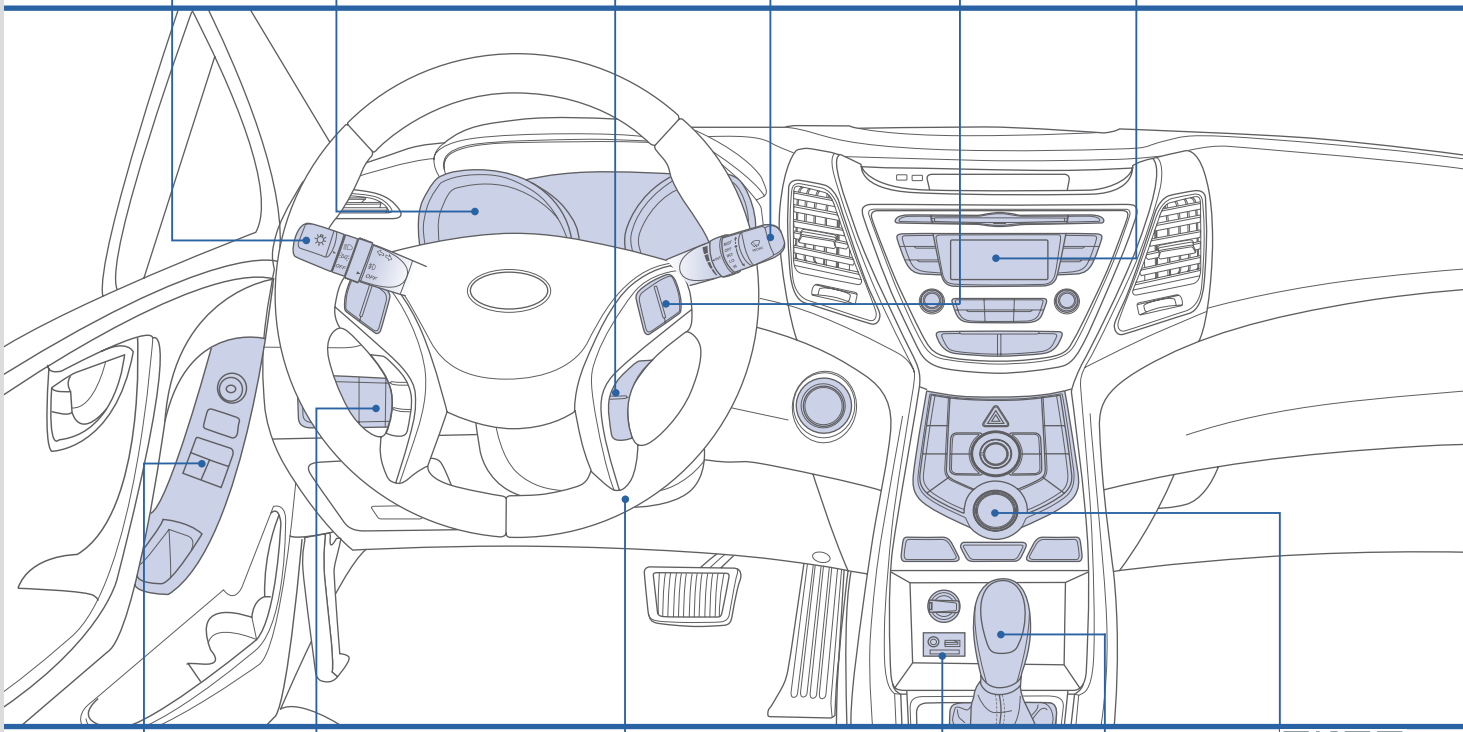

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

⚠ WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.


Download QR Code Reader

You can download a QR reader app to your smart phone to take advantage of the QR codes throughout this Quick Reference Guide.

iPhone® - Apple® App Store
Android® - Google Play
BlackBerry® - BlackBerry® App World

REMOTE KEYLESS ENTRY



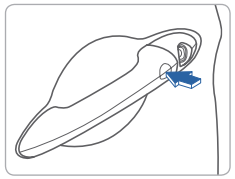


Driver's door Lock/Unlock

Smart key must be within range.

Press:

Once – Unlock driver door
Twice – Unlock all doors
Third – Lock all doors

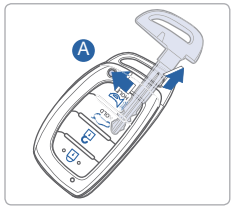


Remove mechanical key

Press and hold the release Ⓐ button and remove the key.

Reinstall mechanical key

Put the key into the hole and push it until a click sound is heard.

ENGINE START/STOP BUTTON

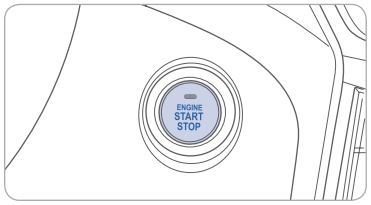

With the ignition OFF, press the engine start/stop button:

- Once for ACC (Accessory) mode
- Twice for ON mode
- Three times for OFF

To start the engine, press the start/stop button while:

- Auto transmission: depressing the brake pedal.
- Manual transmission: depressing the clutch and brake pedals.

To shut engine off, shift to:

- Auto transmission: P (Park) and press the start/stop button.
- Manual Transmission: Select 1st gear or Neutral, apply the parking brake, and press the start/stop button.

Emergency situations:

Shut off engine while driving:

- Press engine start/stop button for more than 2 seconds or press it 3 times consecutively within 3 seconds.

Restart engine while driving:

- Press engine start/stop button with shift lever in N (Neutral).

FRONT SEAT ADJUSTMENT



Ⓐ Forward and backward



Ⓑ Seat cushion height (for driver's seat)




Ⓒ Seatback angle




Ⓓ Rear seat entry lever



HEADREST ADJUSTMENT

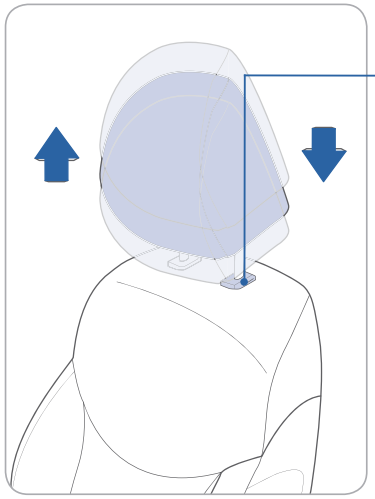

Height adjustment

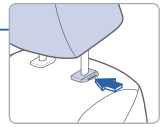


Lock knob

To raise headrest height, pull up on headrest.

To lower headrest, press lock knob while pushing down on headrest.


SEAT BELT ADJUSTMENT

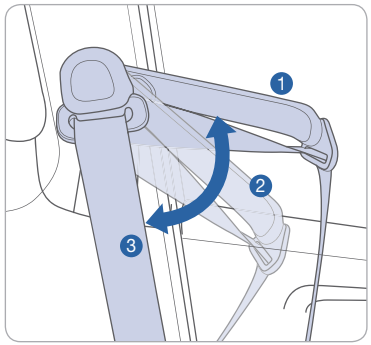


Set the belt extension guide to one of the 3 positions when using the seat belt.


See Owner's Manual for additional seat belt information.

STEERING WHEEL ADJUSTMENT

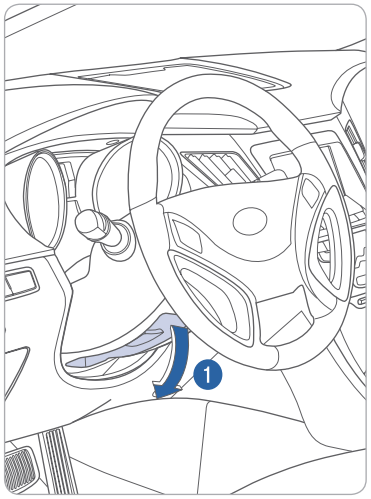

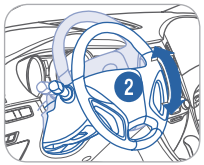

Tilt

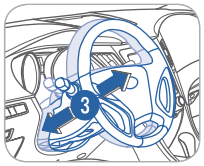



Telescopic


1. Pull the lever 1 downward.
2. Set the angle 2 and distance 3.
3. Push the lever 1 upward. Be sure lever is locked into place before driving.

Warning: Never adjust steering wheel while driving. You may lose steering control and cause severe personal injury, death, or accidents.

FUEL FILLER LID

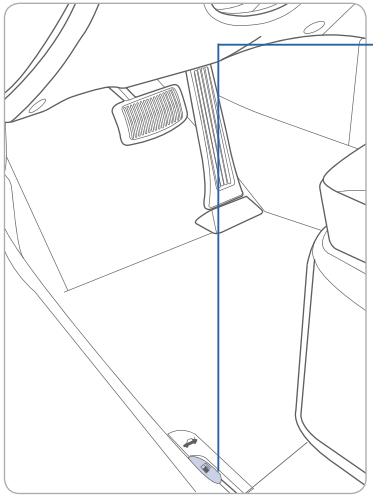

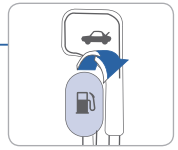

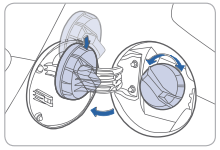


NOTE

After adding fuel, always reinstall the fuel cap onto the filler neck by rotating it clockwise until it clicks one time.

Failure to do this may result in the Check Engine Light illuminating.

DRIVER'S MAIN CONTROLS

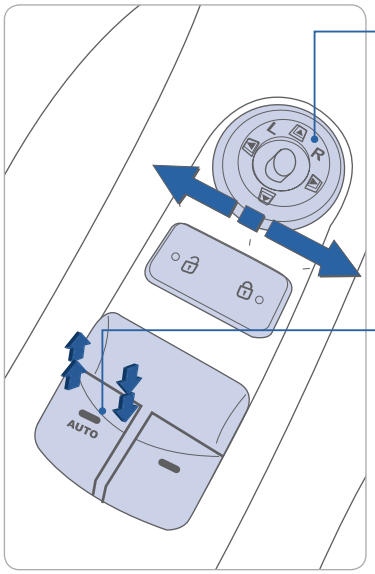


Outside Rearview Mirrors

Move center switch to L (left) or R (right). Then adjust the mirror by pressing the directional arrows on the outer ring

Window Auto down/up (driver's side only)

Press past detent to fully open/close window.


CENTRAL DOOR LOCK SWITCH

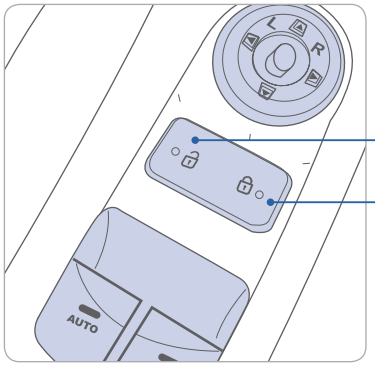

Unlock all doors

Lock all doors

HEAD LIGHTS AND FOG LIGHTS

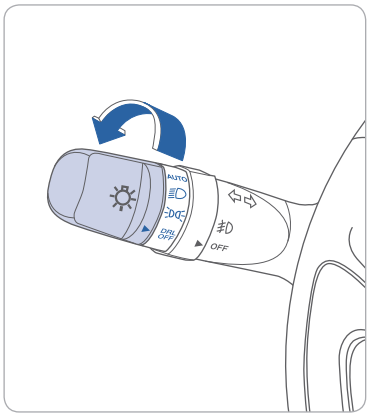

AUTO — Auto light

Head light


Parking light

DRL OFF — DRL OFF


Escort Function

Head lights may stay on for 30 seconds after exiting and locking vehicle. Press remote lock button twice to turn head lights off.


Turn signals and lane change signals

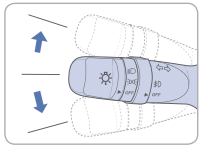


Flashing head lights

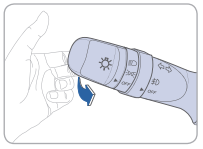


High beam

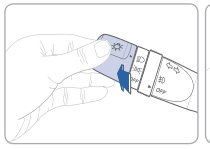

Fog light

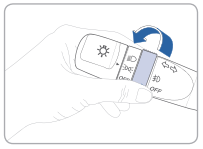

WIPER AND WASHER

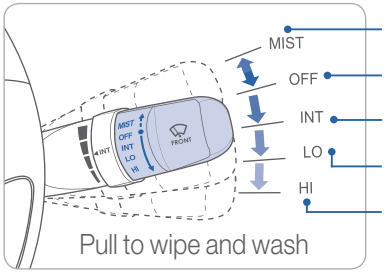

MIST - Single wipe


OFF - Off

INT - Intermittent wipe

LO - Normal wiper speed

HI - Fast wiper speed

Intermittent wipe time adjustment

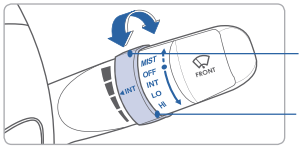



Fast wiper speed

Slow wiper speed

SUNROOF

Sliding the sunroof

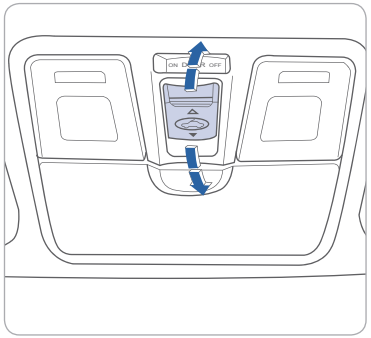


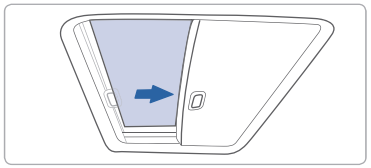


Open
Press switch backward.
Press switch backward past the detent to open completely.

Close
Press switch forward.
Press switch forward past the detent to close completely.

Tilting the sunroof

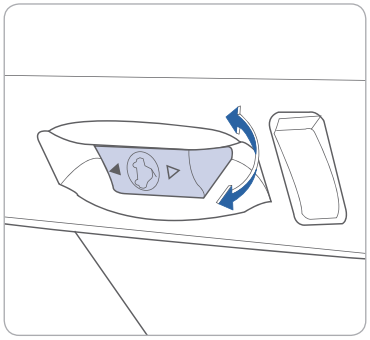

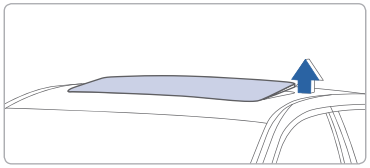


Tilt
Push or pull switch up or down.

NOTE
Do not leave the sun shade closed while the sun roof is open.

INTERIOR LIGHTS

Map lamp

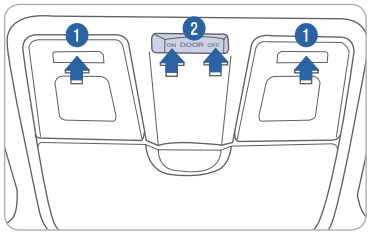

Push the lens 1 to turn the map lamp on or off.


Switch 2

ON
Map lamp and room lamp will turn on.

DOOR
Map lamp and room lamp will turn on when any door is open except trunk.


OFF
The lights stay off at all times, except when individually turned on.

Rear room lamp

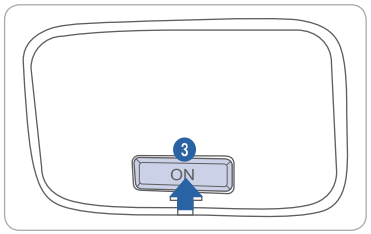

Switch 3


ON
Room lamp will turn on or off.

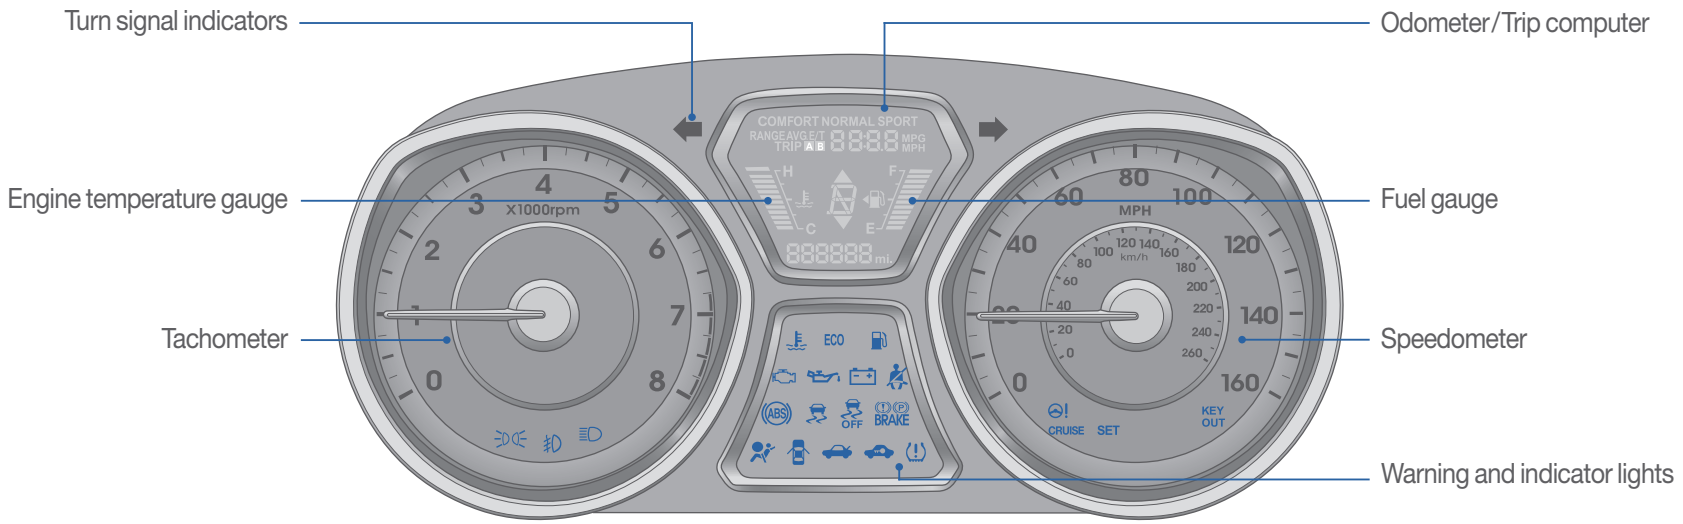

WARNINGS AND INDICATORS


Air bag warning light	Parking brake & Brake fluid warning light	ABS warning light
Seat belt warning light	Low Tire Pressure Indicator / TPMS (Tire Pressure Monitoring System) malfunction indicator	
High beam indicator	Engine oil pressure warning light	Charging system warning light
Electric Power Steering system warning light	Door open warning light	Turn signal indicator
Immobilizer indicator	Automatic transmission shift indicator	Manual transmission shift indicator
Trunk open warning light	Low fuel level warning light	ESC (Electronic Stability Control) indicator
ESC (Electronic Stability Control) OFF indicator	CRUISE Cruise indicator	SET Cruise SET indicator
Malfunction indicator light	Front fog light indicator	ECO ECO indicator
Light on indicator	Engine coolant temperature warning light	

INSTRUMENT PANEL ILLUMINATION

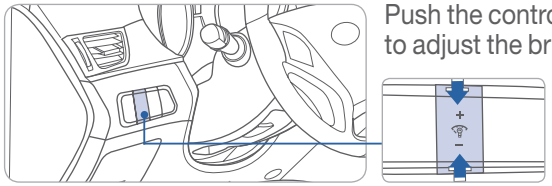



Push the control switch up or down to adjust the brightness.

TRIP COMPUTER

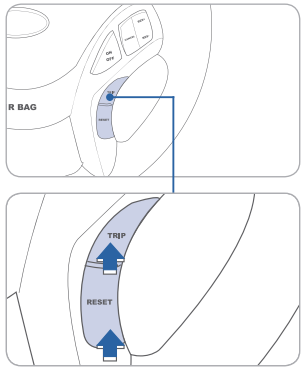

Press the TRIP button to select function as follows:

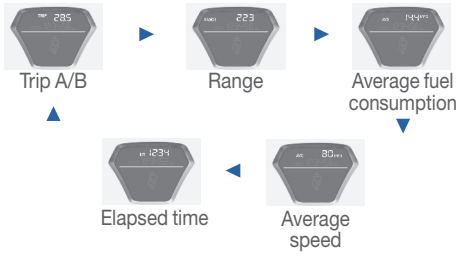

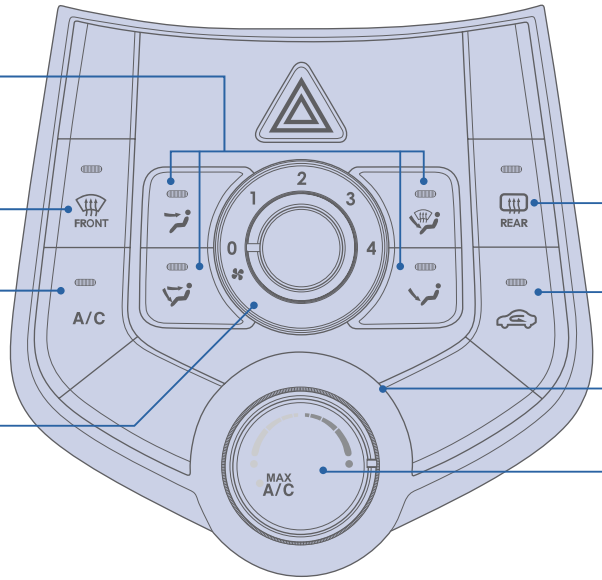


DEFROSTING / DEFOGGING

1. Press the front windshield defrost control.
2. Set the temperature control to the warmest setting.
3. Set the fan speed to the highest setting.

NOTE

To reduce tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner.

AIR INTAKE CONTROL

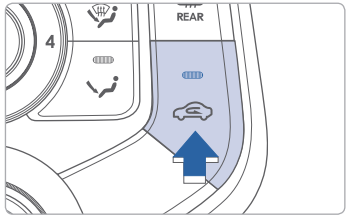


Outside (fresh) air position

Recirculated air position (LED on)

MODE SELECTION

- Face Level
- Bi-Level
- Floor Level
- Floor & Defrost Level
- Defrost Level


REAR WINDOW DEFROSTER

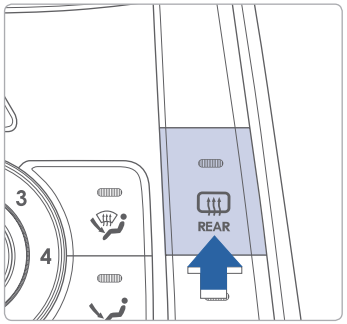

Press to activate/deactivate the rear window defroster.

STEERING WHEEL FUNCTIONS

Cruise Control

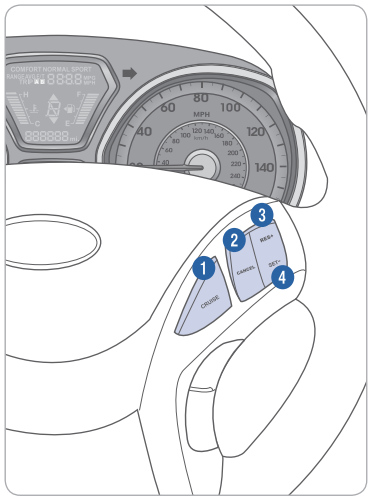

CRUISE Cruise indicator

SET Cruise set indicator

To set a cruising speed

1. Press CRUISE button 1 and the CRUISE indicator will illuminate in the instrument cluster. Accelerate to desired cruising speed (above 25 mph).
2. Press SET - button 4 and remove your foot from the accelerator pedal.


To accelerate or decelerate

Press RES + button 3 up to increase set cruising speed.
Press SET - button 4 down to decrease set cruising speed.

To cancel cruising speed

Press CANCEL button 2, depress brake pedal, or press CRUISE button 1.

Audio Control

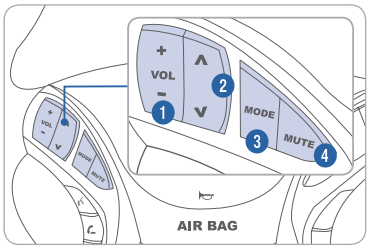

1 **Volume**
Raises or lowers speaker volume.


2 **Seek/Preset**
Change station.

3 **Mode**
Change the audio source.

4 **Mute**
Mute the sound.

Please refer to your Owner's Manual for more detailed information on how to use your audio system.
Complimentary XM® subscription ends three months following the vehicle date of sale.
Please contact XM® Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM® subscription.

Bluetooth Control

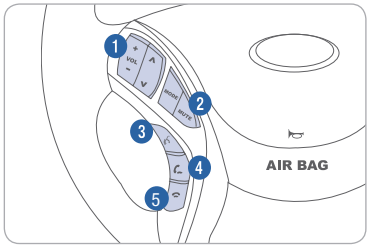

To redial previously dialed number, press and hold 3.

1 **Volume**
Raises or lowers speaker volume.

2 **Mute**
Mute the microphone during a call.

3 **Talk**
Activates voice recognition.

4 **Call**
Places and transfers calls.

5 **End**
Ends calls or cancels functions.


*Bluetooth is a wireless technology that allows multiple devices to be connected in a short range, low powered devices like hands-free, stereo headset, wireless remocom, etc. For more information, visit the website at www.bluetooth.com

BLUETOOTH OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. High level volume may result in distortion and echo. Keep the Bluetooth volume to a low level.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering wheel bluetooth control

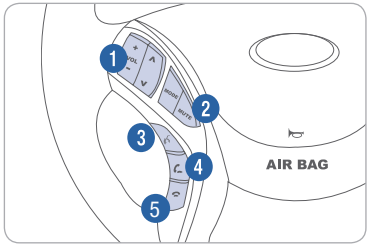

To redial previously dialed number, press and hold 4.

1. **Volume**
   Raises or lowers speaker volume.
2. **Mute**
   Mute the microphone during a call.
3. **Talk**
   Activates voice recognition.
4. **Call**
   Places and transfers calls.
5. **End**
   Ends calls or cancels functions.

*Bluetooth is a wireless technology that allows multiple devices to be connected in a short range, low powered devices like hands-free, stereo headset, wireless remocom, etc. For more information, visit the website at www.bluetooth.com

To Answer a Call:
- Press button on the steering wheel.

To Reject a Call:
- Press button on the steering wheel.

To Adjust Ring Volume:
- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the Phone (Secret Call):
- Press and hold button on the steering wheel until the audio system transfers a call to the phone.

To Finish a Call:
- Press button on the steering wheel.

VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.

Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when passing a tunnel or when driving on rugged and uneven roads.


For complete list of commands, refer to your Owner's Manual.

BLUETOOTH PHONE PAIRING


Pairing tutorials, phone compatibility and Operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.

Navigation: phone pairing

Phone setup (pairing phone) with Audio

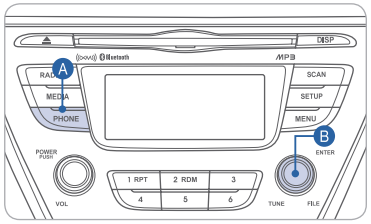


1. Push the PHONE button A.
2. Select “Phone” by rotating TUNE knob B, then press knob to select.
3. Select “Pair” by rotating the TUNE knob B, then press knob to select.
4. Enable Bluetooth® on your phone.
5. Select “ELANTRA” on your mobile phone from the Bluetooth® list.
6. Input passkey displayed on the screen when applicable.
7. If your phone prompts a phonebook access request, it is advisable to check the box “Always allow” or “Don’t ask again”.

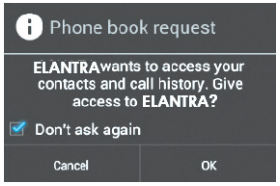


Phone setup (pairing phone) with Navigation


1. Press the call button 1.

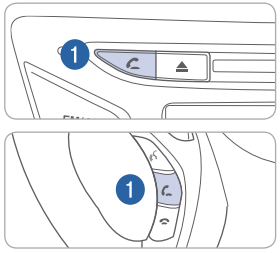


2. Press “YES” on the PHONE screen. Then press “Connections”.

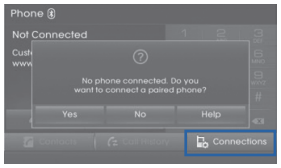


3. Press the 2 “Add New” to pair a new mobile phone.

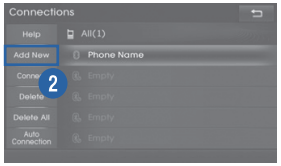

4. Enable Bluetooth on your phone. Input the passkey displayed on the screen when applicable. (The initial passkey is 0000.)

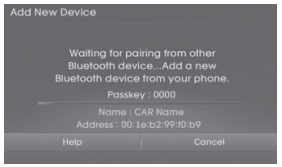


5. If your phone prompts a phonebook access request, it is advisable to check the box “Always allow” or “Don’t ask again".

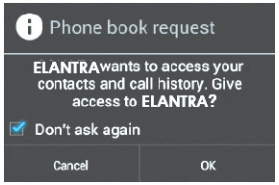

NOTE
Vehicle must be in Park to complete pairing process.

BLUE LINK TELEMATIC SYSTEM

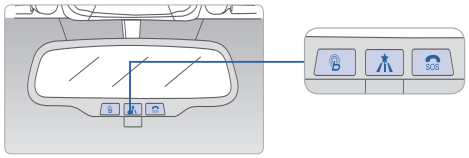

Press the button for access to the voice-response menu of services.
You have two options:
- You can say, “Main Menu” for a listing of main menu choices.
- You can directly select any of the listed menu items by saying its name.

New Destination	Information	Navigation	Vehicle Assist
Main Menu	Traffic Weather Valet Alert Main Menu	Gas Price Restaurant Ratings Daily Route Guide Main Menu	Roadside Assistance Service Link Main Menu

- Press the button for navigation-related services.
- Press the SOS button for SOS Emergency Assistance.
- Refer to your Blue Link User’s Manual for detailed information on system operation.
- For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).
- Please register your Blue Link at www.MyHyundai.com.

You must be an active Blue Link subscriber or within the initial free trial period to receive Blue Link services, including emergency notification services.

Remote Door Unlock/Lock

Blue Link Mobile App



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android® — Google Play
- BlackBerry® — BlackBerry® App World

With this feature, you can lock or unlock your vehicle doors from virtually anywhere by using the Blue Link mobile phone app, by dialing the toll-free number, or by using the Blue Link owner’s website.


- To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to www.MyHyundai.com.

To Activate Remote Door Unlock/Lock

- By Blue Link Mobile App: Select DOOR UNLOCK or DOOR LOCK, as desired.
  - Enter your Blue Link PIN.
  - The command to lock or unlock your doors will be sent to your vehicle.
- By phone: Dial toll-free 1-855-2-BLUELINK (1-855-225-8354).
- By web site: Log on to www.MyHyundai.com, select the Blue Link logo on the upper left-hand side.
  - Select Vehicle Status, then Remote Door Unlock/Lock.
  - Input your Blue Link PIN. (If you need time to get to your vehicle, specify a time delay before your vehicle will be unlocked.)

STANDARD RADIO

Audio

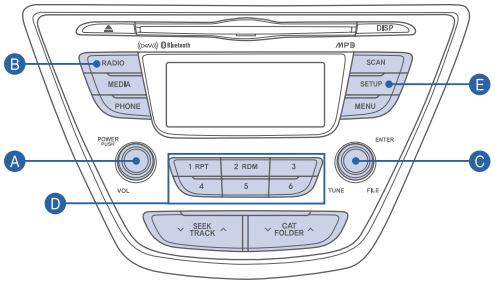

Press POWER button A to turn radio on.

- TUNING/LISTENING TO CHANNELS
  1. Press Radio B.
  2. Rotate TUNE knob C to desired channel.


NOTE A clear view of the southern sky helps to ensure XM® radio reception.

- SETTING PRESET MEMORY BUTTONS (FM/AM/XM®)
  1. Press and hold any preset button (1-6) D until audible beep is heard to store current channel.

- ADJUSTING THE SOUND CONTROL
  1. Press SETUP E.
  2. Select "Audio" by rotating TUNE knob C, then press knob to select.
  3. Select "Bass / Mid / Tre / Fad / Bal" by rotating TUNE knob C, then press knob to select.
  4. Rotate TUNE knob C to adjust, then press knob to select.
  5. Press SETUP E when done.

Please refer to your Owner's Manual for more detailed information on how to use your audio system. Complimentary XM® subscription ends three months following the vehicle date of sale. Please contact XM® Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM® subscription.

AUX, USB AND iPod® PORT

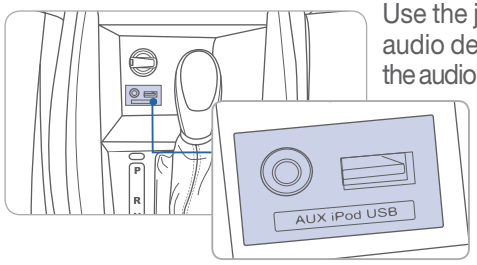


Use the jack to connect an external audio device and listen to it through the audio system speakers in your vehicle.

NOTE: To operate your iPod® through the vehicle's audio system, connect your Apple supplied USB cable to the USB port

iPod® is a trademark of Apple Inc.

NAVIGATION

Audio mode

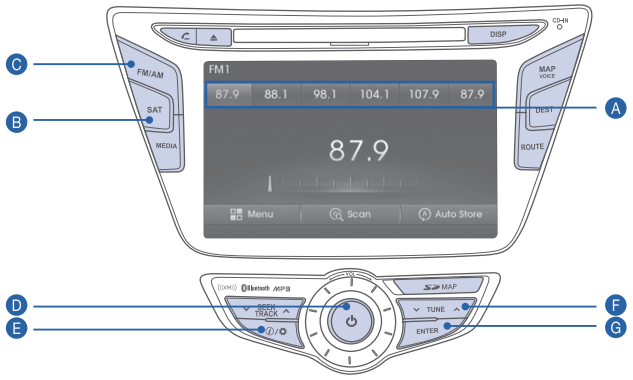


Press POWER button D to turn radio on.

- TUNING/LISTENING TO CHANNELS
  1. Press FM/AM C or SAT B.
  2. Press TUNE button F to desired channel.

NOTE A clear view of the southern sky helps to ensure XM® radio reception.


- SETTING PRESET MEMORY BUTTONS (FM/AM/XM®)
  Press and hold any preset button (1-6) A on the screen until audible beep is heard to store current channel.

- ADJUSTING THE SOUND CONTROL
  1. Press ⓘ/⚙ E to enter SETUP menu.
  2. Press Sound button.
  3. Press on-screen arrows to adjust desired setting.

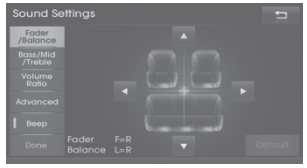


- SELECTING TRACK THROUGH SEARCH (CD/USB MODE)
  1. Press the ∧ TUNE ∨ button F to search for desired display track.
  2. Press the ENTER button G to select the desired track.

NAVIGATION

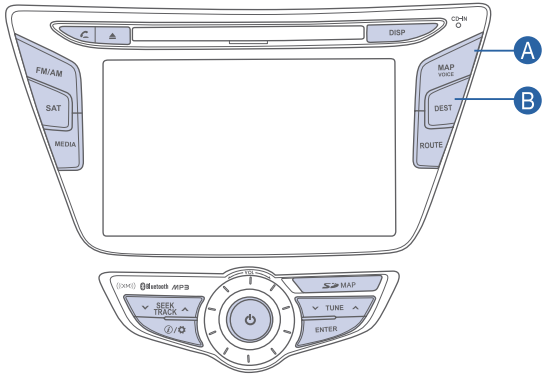


Map position

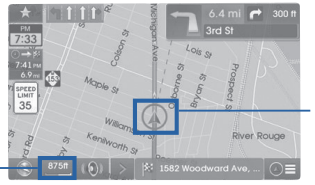

Press MAP button (A) to display map position.

Refer to Digital Navigation System User's Manual for more details.


Destination menu

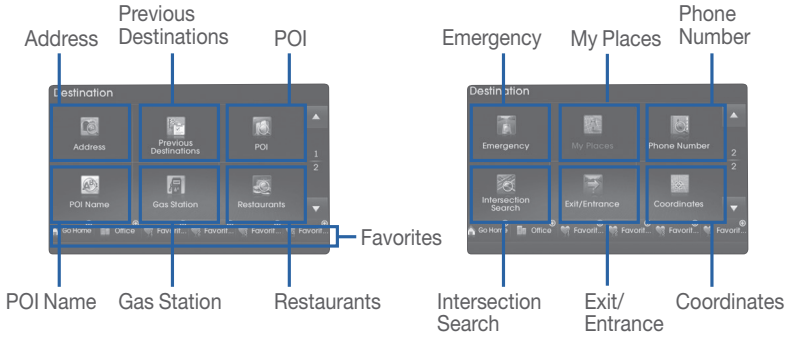

Press DEST button (B) to display destination menu.

- Previous Destinations: Search and select previous destinations.
- Address: Search destinations by selecting specific states/cities/roads.
- POI Name: Search for POIs by name.
- Favorites: Store favorite places.
- POI (Point of Interest): Search for neighboring POIs near current position, scroll position, destination and city center.
- Gas Station: Search for gas station.
- Restaurants: Search for restaurants.
- Emergency: Search for emergency related facilities.
- My Places: List of saved My Places.
- Intersection Search: Search destinations by selecting street intersections.
- Phone Number: Search destinations by entering POI phone number
- Exit/Entrance: Search destinations by searching for expressway exits and entrances
- Coordinates: Search destinations by entering the latitude and longitude coordinates.

CLOCK ADJUSTMENT

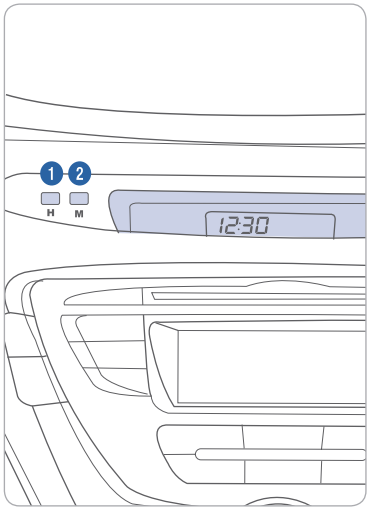

Hour 1


Pressing the H button will advance the time displayed by one hour.


Minute 2


Pressing the M button will advance the time displayed by one minute.


Press the H and M buttons at the same time for more than 5 seconds to toggle between 12- and 24-hour formats.

TRANSMISSION

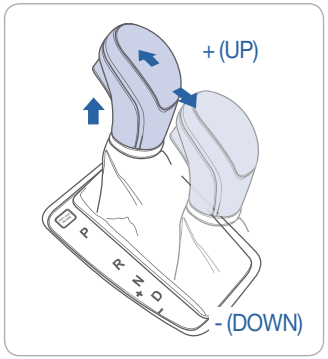

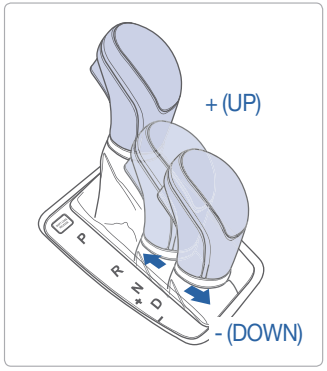

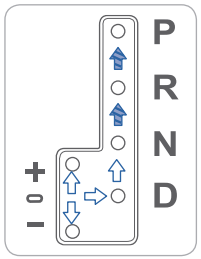

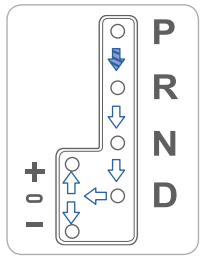

(➡) : Depress the brake pedal when shifting.


(⇨) : The shift lever can be moved freely.

(⇛) : Depress the brake pedal and press the lock out button to shift.

Sport mode

Move the shift lever from D to the right gate to select.
Move the shift lever forward (+) to upshift or rearward (–) to downshift.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

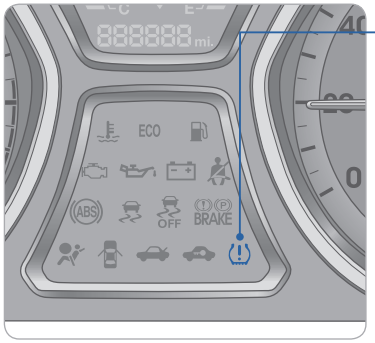



Low Tire Pressure Indicator /
TPMS Malfunction Indicator

Low Tire Pressure Indicator

Illuminates if one or more of your tires is significantly under-inflated.


TPMS Malfunction Indicator

Blinks for approximately one minute then remains illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer.

NOTE

Tire pressure may vary in colder temperatures causing the low tire pressure light to illuminate.


ELECTRONIC STABILITY CONTROL (ESC)

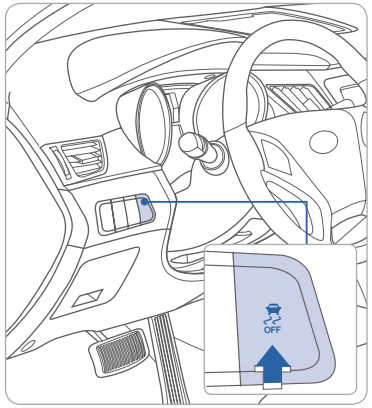

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

- To turn the ESC off, press the OFF button. Indicator will illuminate on the instrument cluster.
- To turn ESC on, press it again.
- System defaults to ON position at start.

ACTIVE ECO SYSTEM

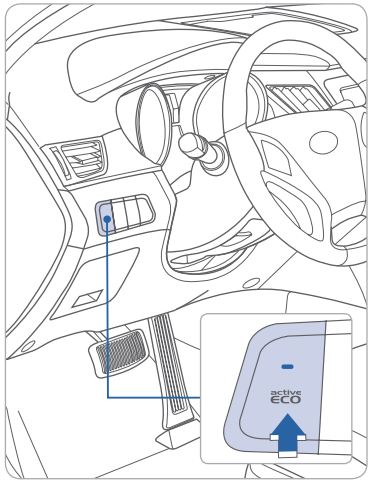





Active ECO system (automatic transmission)

Active ECO system helps to improve fuel efficiency. When the Active ECO system is activated, the vehicle acceleration, gear shift points and air conditioning performance will be reduced to conserve the fuel consumption.
Press the Active ECO button to activate. The LED on the button and the ECO indicator in the instrument cluster will illuminate.


ECO Shift (Manual Transmission)

▲ or ▼ symbol is displayed along with the current gear position, which informs you to up shift or down shift to the next recommended gear position for fuel efficiency.


To improve your fuel efficiency:

- Drive smoothly and accelerate at a moderate rate.
- Avoid heavy accelerations.
- Maintain steady cruising speed.
- Adjust the vehicle speed to the traffic condition and avoid speed changes.
- Avoid unnecessary braking.
- Keep the tires inflated to the recommended tire pressure.
- Don't idle the engine longer than necessary.

REAR SEAT FOLDING

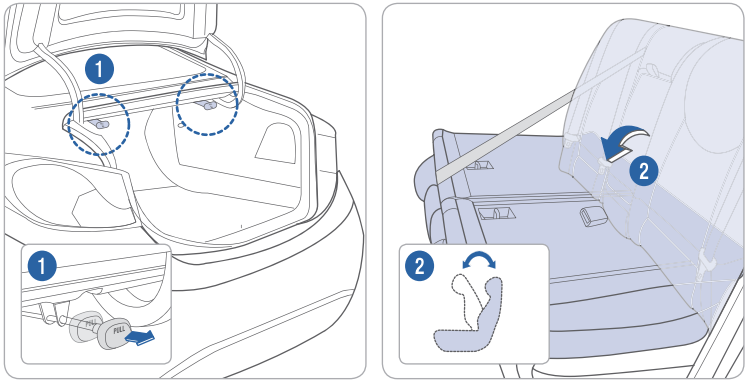



TIRE MOBILITY KIT

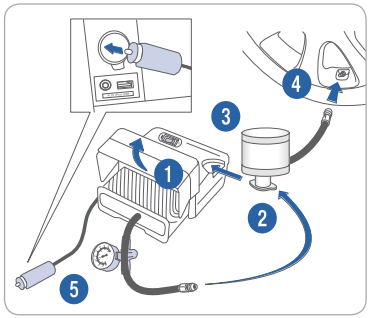

Setup

1. Remove the speed restriction label from the sealant bottle and place it on the center of the steering wheel.
2. Ensure that the compressor is switched to OFF.
3. Lift the cable cover 1 and screw the compressor hose 2 on to the connector of the sealant bottle.
4. Insert the sealant bottle into the housing slot 3 of the compressor.
5. Screw the filling hose 4 of the sealant bottle onto the tire's valve stem.
6. Insert the compressor power plug 5 into the vehicle's power outlet.
7. Turn the ignition switch to the ON position or press the Engine Start/Stop button twice.

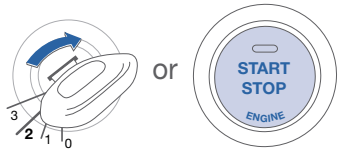

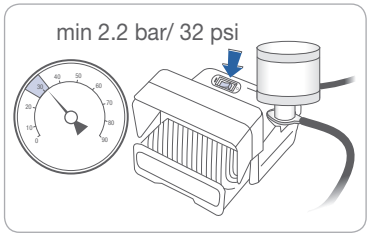


Inflate Tire

1. Switch ON the compressor and let it run for approximately 5 minutes.
2. Switch OFF the compressor and check to ensure that inflation pressure is over 32 psi. If not, the puncture is too large to repair. Contact Hyundai Roadside Assistance.
3. Remove the filling hose 4, compressor hose 2, and compressor power plug 5.


continued on next page...

TIRE MOBILITY KIT (CONT)

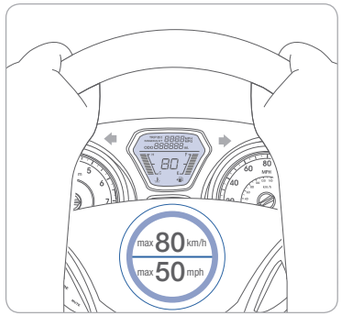

Drive Vehicle

1. Drive for approximately 6 miles or 10 minutes no faster than 50 mph.

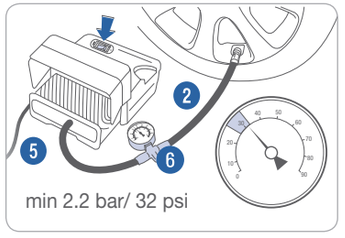

Recheck Tire Pressure

1. Screw the compressor hose (2) directly to the tire valve.
2. Insert the compressor power plug (5) into the vehicle's power outlet.
3. Adjust to the recommended tire pressure located on the driver side door jam placard.


To increase the tire pressure:

1. Switch ON the compressor.
2. To check the current tire pressure, briefly switch OFF the compressor.


To reduce the tire pressure:

1. Loosen the knob (6) on the gauge. Tighten the knob (6) to set tire pressure.

REARVIEW CAMERA

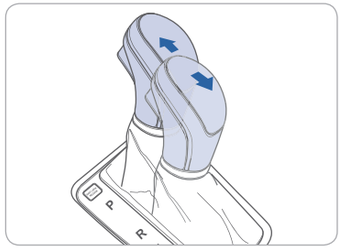

The rearview camera will activate when the ignition switch is turned ON and the shift lever is in the R (Reverse) position.

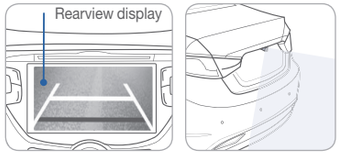

KEY WEBSITES

Hyundai website - www.hyundai.com
Hyundai owner website - www.myhyundai.com
Bluetooth phone compatibility - www.hyundaiusa.com/bluetooth

ELANTRA CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- ☐ CONFIRM "GOOD BATTERY" USING GR8 AND STAPLE TEST TICKET HERE
- ☐ SET TIRE PRESSURE LF___ RF ___ RR___ LR___
- ☐ VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES · CLEAN WINDSHIELD AND BACK WINDOW
- ☐ ENSURE FLOORMATS ARE SNAPPED INTO PLACE

Sales Consultant Date Sales Manager Date

Customer Date

Email @