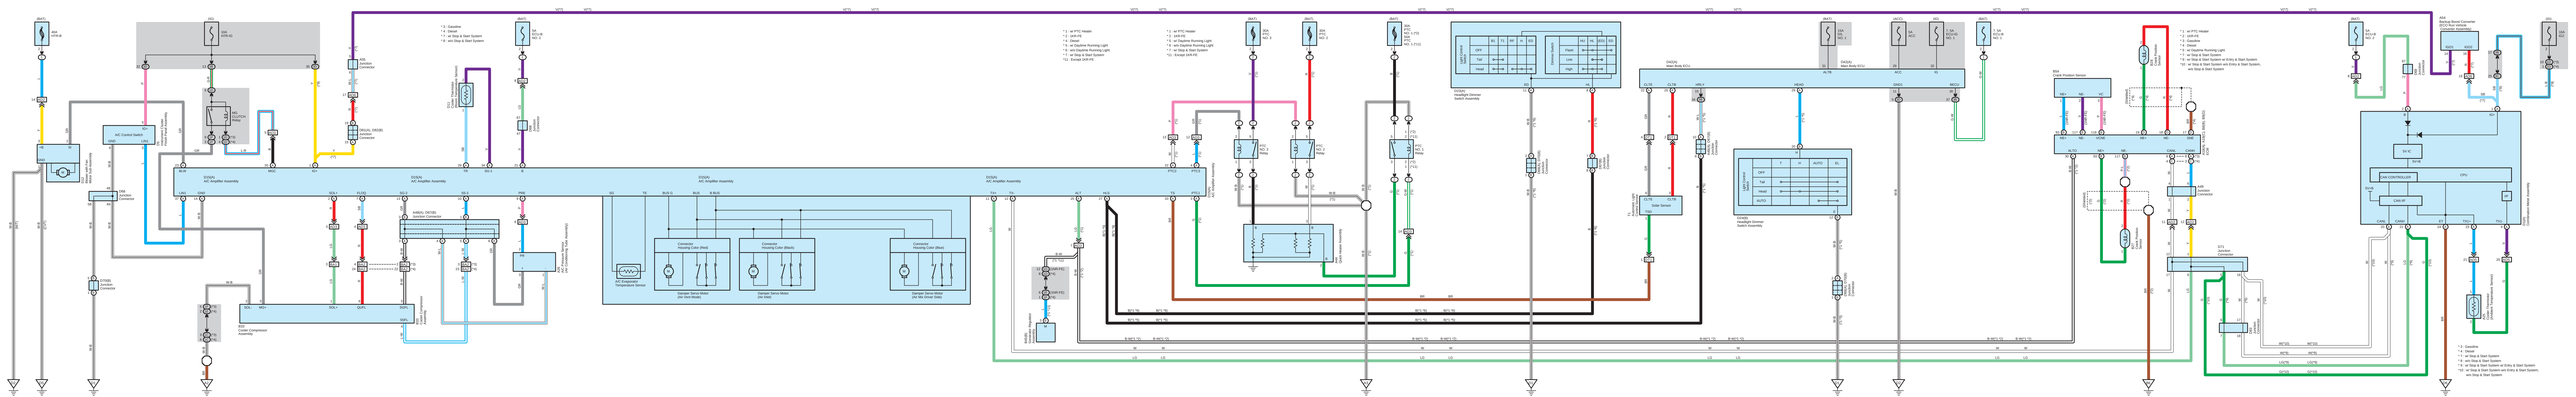
*1 : w/ PTC Heater
*2 : Gasoline
*3 : Diesel
*4 : w/ Daytime Running Light
*5 : w/ Headlight Leveling Light
*6 : w/ Stop & Start System
*10 : Except 1KR-FE
*11 : Except 1KR-FE
*12 : Except 1KR-FE
*13 : Except 1KR-FE
*14 : w/ Stop & Start System or Entry & Start System
*15 : w/ Stop & Start System and Entry & Start System, w/o Stop & Start System
A/C Control Switch
A/C Amplifier Assembly
Blower Motor
Blower Resistor
Blower Motor Assembly
A/C Evaporator Temperature Sensor
Damper Servo Motor (w/ Vent Mode)
Damper Servo Motor (w/ Heat)
Damper Servo Motor (w/ Mix Mode)
Compressor Assembly
Cooler Compressor Assembly
Engine Control Module
Engine Room Relay Block
Engine Room J/B No. 2
Engine Room J/B No. 3
Cowl Wire
Instrument Panel Wire
Floor Wire
Roof Wire
Rear Door RH Wire
Rear Door LH Wire
Rear Body ECU
Headlight Dimmer Switch Assembly
Main Body ECU
Main Body J/B
Instrument Panel J/B
Instrument Panel J/B No. 2
Instrument Panel J/B No. 3
Main Body ECU (Multiplex Network Master ECU)
Driver Door Control Switch
Front Door Control Switch
Front Door Inner Handle
Front Door Outer Handle
Front Door Lock Motor
Front Door Courtesy Light
Front Door Speaker
Front Door Glass Switch
Front Door Glass Motor
Front Door Inner Mirror
Front Door Outer Mirror
Front Door Outer Mirror Motor
Front Door Outer Mirror Heater
Front Door Outer Mirror Switch
Front Door Inner Mirror Switch
Front Door Inner Mirror Motor
Front Door Inner Mirror Heater
Front Door Inner Mirror Assembly
Front Door Inner Mirror Heater Assembly
Front Door Inner Mirror Motor Assembly
Front Door Inner Mirror Switch