FOREWORD

This manual is an essential part of your vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new MARUTI SUZUKI and review the manual from time to time. It contains important information on safety, operation and maintenance. You are invited to avail the three Free Inspection Services as described in the manual. Three free inspection coupons are attached to this manual. Please show this manual to your dealer while you take your MARUTI SUZUKI for any Service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to “PERIODIC MAINTENANCE SCHEDULE” described in “INSPECTION AND MAINTENANCE” section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per “DAILY INSPECTION CHECKLIST” described in the “INSPECTION AND MAINTENANCE” section of this manual is essential for prolonging the life of the vehicle and for safe driving.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth’s natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

⚠ WARNING/ ⚠ CAUTION/*NOTICE*/ *NOTE*

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, ***NOTICE*** and *NOTE* have special meanings. Pay particular attention to messages highlighted by these signal words:

⚠ WARNING

Indicates a potential hazard that could result in death or serious injury.


⚠ CAUTION

Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:
Indicates special information to make maintenance easier or instructions clearer.

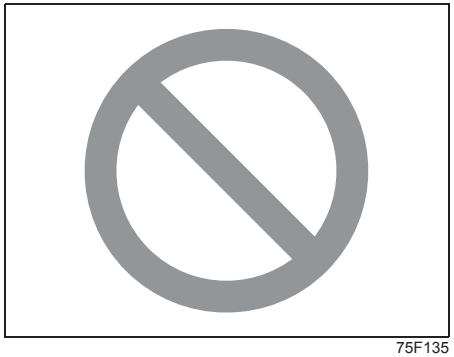

75F135

The circle with a slash in this manual means “Don’t do this” or “Don’t let this happen”.

MODIFICATION WARNING

⚠ WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen’s Band) radios or any other wireless transmitters may cause electronic interference with your vehicle’s ignition system, resulting in vehicle performance problems. Consult your authorised Maruti Suzuki workshop or qualified service technician for advice.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

“WARNING”



Vehicle may break-down, meet with an accident or catch fire due to

1. Installation of
   - High wattage bulbs
   - Non genuine lamps / horns
   - Modified suspension / wheels
   - Non genuine parts / accessories etc.
2. Retrofitment of LPG / CNG fuel systems/kits.
3. Usage of domestic LPG.
4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.



Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may break-down or engine may fail due to

1. Water entry into the engine.
2. Short circuiting of the electrical systems.

If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe. NOTE:

IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.

“CAUTION”

1. Retro-fitment of LPG/CNG kit may deteriorate vehicle performance, reduce engine & engine related component’s life and also warranty will be null and void for such vehicles.
2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
3. Usage of domestic LPG for running vehicles is prohibited as per law.
4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning. (reduced contact area between tire and road due to presence of water)
6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-mono-oxide in cabin and may lead to suffocation or breathing problems.
7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
9. Always wear seat belt at all the times.
10. Do not use mobile phone while driving.
11. Avoid Smoking in the car, live bud thrown in car may cause fire.
12. Do not put any body part under the vehicle when it is supported on a Jack.
13. Do not use non-genuine accessories in your vehicle.
14. Do not fit accessories from unauthorized workshops/sources.
15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.

VIN:																		

MODEL:			**OWNER NAME & ADDRESS**	
VARIANT:				
COLOUR:				
ENGINE NO.:			**CONTACT NO.**	
KEY NO.:			**E-mail ID:**	
INVOICE DATE:			**SELLING DEALER NAME & CODE**	
ODOMETER READING	**KM**			
REGISTRATION NO.:				
BATTERY MAKE:			**DEALER SHOWROOM ADDRESS & CONTACT NO. (STAMP)**	
BATTERY NO.:				
BATTERY BATCH				
TYRE	**MAKE**	**BATCH CODE**		
Front Right			**CONTACT NO. FOR SERVICE APPOINTMENT & SUPPORT**	
Front Left				
Rear Right				
Rear Left				
Spare				

For any assistance with regard to our product, please contact General Manager/Works Manager at any of our authorised Maruti Suzuki Nexa dealer / authorised Maruti Suzuki Workshop. For additional enquiry you may contact our Regional Office or Service Department. The addresses and phone numbers are given in Service Network section of this Manual.

CUSTOMER SERVICE MAINTENANCE RECORD (to be filled by customer)

INSPECTION SCHEDULE	DATE OF SERVICE	MILEAGE (KM)	NAME OF SERVICING WORKSHOP
1st Free inspection service - 1000 KM / 1 Months			
2nd Free inspection service - 5000 KM / 6 Months			
3rd Free inspection service - 10000 KM / 12 Months			
1st Paid inspection service - 20000 KM / 24 Months			
2nd Paid inspection service - 30000 KM / 36 Months			
3rd Paid inspection service - 40000 KM / 48 Months			
4th Paid inspection service - 50000 KM / 60 Months			
5th Paid inspection service - 60000 KM / 72 Months			
6th Paid inspection service - 70000 KM / 84 Months			
7th Paid inspection service - 80000 KM / 96 Months			
8th Paid inspection service - 90000 KM / 108 Months			
9th Paid inspection service - 100000 KM / 120 Months			
10th Paid inspection service - 110000 KM / 132 Months			
11th Paid inspection service - 120000 KM / 144 Months			
12th Paid inspection service - 130000 KM / 156 Months			

Maruti Suzuki Network can be viewed by installing below Mobile Apps:

For Arena Models: MARUTI CARE

Maruti care

For Nexa Models: NEXA

Nexa

GET IT ON Google Play

Available on the App Store

1ST. FREE INSPECTION COUPON

(Customer's copy) **(1,000 KM or 1 MONTH)**

Model Name	
Model Code*	
VIN	
Engine No.	
Mileage	
Invoice Date	D D M M Y Y
Date of Inspection	D D M M Y Y
Registration No.	
Customer Name	
Ph. No.	

Service workshop / MASS Code (fill below)

				—				—			

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

Workshop In charge
Signature

For periodic maintenance schedule, refer to "Inspection and Maintenance" section of this manual

1ST. FREE INSPECTION COUPON

(Selling dealer copy) **(1,000 KM or 1 MONTH)**

Model Name	
Model Code*	
VIN	
Engine No.	
Mileage	
Invoice Date	D D M M Y Y
Date of Inspection	D D M M Y Y
Registration No.	
Customer Name	
Ph. No.	

Service workshop / MASS Code (fill below)

				—				—			

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

Workshop In charge
Signature

1ST. FREE INSPECTION COUPON

(Servicing W/S copy) **(1,000 KM or 1 MONTH)**

Model Name	
Model Code*	
VIN	
Engine No.	
Mileage	
Invoice Date	D D M M Y Y
Date of Inspection	D D M M Y Y
Registration No.	
Customer Name	
Ph. No.	

Service workshop / MASS Code (fill below)

				—				—			

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

Workshop In charge
Signature

1ST. FREE INSPECTION COUPON

(Servicing W/S copy) **(1,000 KM or 1 MONTH)**

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.

Service Division
Maruti Suzuki India Limited

1ST. FREE INSPECTION COUPON

(Selling dealer copy) **(1,000 KM or 1 MONTH)**

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.

Service Division
Maruti Suzuki India Limited

1ST. FREE INSPECTION COUPON

(Customer's copy) **(1,000 KM or 1 MONTH)**

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.

Service Division
Maruti Suzuki India Limited

2ND. FREE INSPECTION COUPON

(Customer's copy) **(5,000 KM or 6 MONTHS)**

Model Name	
Model Code*	
VIN	
Engine No.	
Mileage	
Invoice Date	D D M M Y Y
Date of Inspection	D D M M Y Y
Registration No.	
Customer Name	
Ph. No.	

Service workshop / MASS Code (fill below)

— —

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

Workshop In charge
Signature

For periodic maintenance schedule, refer to "Inspection and Maintenance" section of this manual

2ND. FREE INSPECTION COUPON

(Selling dealer copy) **(5,000 KM or 6 MONTHS)**

Model Name	
Model Code*	
VIN	
Engine No.	
Mileage	
Invoice Date	D D M M Y Y
Date of Inspection	D D M M Y Y
Registration No.	
Customer Name	
Ph. No.	

Service workshop / MASS Code (fill below)

— —

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

Workshop In charge
Signature

2ND. FREE INSPECTION COUPON

(Servicing W/S copy **(5,000 KM or 6 MONTHS)**

Model Name	
Model Code*	
VIN	
Engine No.	
Mileage	
Invoice Date	D D M M Y Y
Date of Inspection	D D M M Y Y
Registration No.	
Customer Name	
Ph. No.	

Service workshop / MASS Code (fill below)

— —

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

Workshop In charge
Signature

2ND. FREE INSPECTION COUPON

(Servicing W/S copy) **(5,000 KM or 6 MONTHS)**

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.

Service Division
Maruti Suzuki India Limited

2ND. FREE INSPECTION COUPON

(Selling dealer copy) **(5,000 KM or 6 MONTHS)**

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.

Service Division
Maruti Suzuki India Limited

2ND. FREE INSPECTION COUPON

(Customer's copy) **(5,000 KM or 6 MONTHS)**

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.

Service Division
Maruti Suzuki India Limited

3RD. FREE INSPECTION COUPON

(Customer's copy) **(10,000 KM or 12 MONTHS)**

Model Name	
Model Code*	
VIN	
Engine No.	
Mileage	
Invoice Date	D D M M Y Y
Date of Inspection	D D M M Y Y
Registration No.	
Customer Name	
Ph. No.	

Service workshop / MASS Code (fill below)

				—				—			

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

Workshop In charge
Signature

For periodic maintenance schedule, refer to "Inspection and Maintenance" section of this manual

3RD. FREE INSPECTION COUPON

(Selling dealer copy) **(10,000 KM or 12 MONTHS)**

Model Name	
Model Code*	
VIN	
Engine No.	
Mileage	
Invoice Date	D D M M Y Y
Date of Inspection	D D M M Y Y
Registration No.	
Customer Name	
Ph. No.	

Service workshop / MASS Code (fill below)

				—				—			

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

Workshop In charge
Signature

3RD. FREE INSPECTION COUPON

(Servicing W/S copy) **(10,000 KM or 12 MONTHS)**

Model Name	
Model Code*	
VIN	
Engine No.	
Mileage	
Invoice Date	D D M M Y Y
Date of Inspection	D D M M Y Y
Registration No.	
Customer Name	
Ph. No.	

Service workshop / MASS Code (fill below)

				—				—			

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

Workshop In charge
Signature

3RD. FREE INSPECTION COUPON

(Servicing W/S copy) **(10,000 KM or 12 MONTHS)**

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.

Service Division
Maruti Suzuki India Limited

3RD. FREE INSPECTION COUPON

(Selling dealer copy) **(10,000 KM or 12 MONTHS)**

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.

Service Division
Maruti Suzuki India Limited

3RD. FREE INSPECTION COUPON

(Customer's copy) **(10,000 KM or 12 MONTHS)**

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.

Service Division
Maruti Suzuki India Limited

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called “Maruti Suzuki”), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorised dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorised dealer and set-up, and serviced by a Maruti Suzuki authorised workshop.

(2) Term:

The term of the warranty shall be twenty-four (24) months or 40,000 kilometers (whichever occurs first) from the date of invoice to the first owner.

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki’s only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labour, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

(4) Limitation:

This warranty shall not apply to:

(a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, Consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.

(b) The normal wear of parts including without limitation, bulbs, tyres and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).

(c) Any vehicle which has been used for competition, rallies or racing.

(d) Any repairs or replacement arising from accidents or collision.

(e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding - not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.

(f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner’s Manual.

(g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.

(h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.

(i) Any vehicle which has not been operated in accordance with the operating instructions in this Owner’s Manual and Service Booklet.

(j) Any vehicle which has not received the service inspections prescribed in this Owner's Manual and Service Booklet.
(k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorised workshop.
(l) Any vehicle which has been used for purposes other than what it was designed for.
(m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
(n) Insignificant defects which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
(o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
(p) Installation and usage of domestic LPG gas/LPG Cylinder.
(q) V-belts, hoses and gas leaks.
(r) Any vehicle retrofitted with LPG/CNG kits.
(s) Repainting including patchwork, bodywork and mouldings and interior trims.
(t) Corrosion, rusting of body parts and/ or components.
(u) Any vehicle on which odometer has been changed unauthorisedly or odometer reading has been modified/ tampered with/ or not matching the service records.
(v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
(w) Any damage(s) caused to vehicle including battery/ tyre due to parking of the vehicle in idle condition for long duration of time periods.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorised to extend or enlarge this warranty and no dealer or its or his agent or employee is authorised to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorised workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

(7) Owner's Warranty Responsibilities:

It is responsibility of each owner to:

– Have performed, at his own expenses, by a Maruti Suzuki authorised workshop all the service inspections specified in the Maruti Suzuki "Owner's Manual and Service Booklet" and maintain adequate proof that such service inspections have been performed.
– Update and maintain the 'Customer service maintenance records' page in the "Owner's Manual and Service Booklet", whenever service inspection or warranty service is carried out on the vehicle in a Maruti Suzuki authorised workshop.
– Present the Maruti Suzuki "Owner's Manual and Service Booklet" to the Maruti Suzuki authorised workshop whenever requesting service inspections or warranty service.

If the “Owner’s Manual and Service Booklet” should be lost or destroyed the owner should consult the Maruti Suzuki authorised dealer from whom the vehicle was purchased for instructions concerning replacement of the “Owner’s Manual and Service Booklet”.

(8) Disclaimer of Consequential Damage:
Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner
Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

EMISSION WARRANTY POLICY

Maruti Suzuki offers the Emission Warranty on all Maruti Suzuki vehicles (apart from the Regular Warranty and will run parallel to the regular product warranty) only in four metropolitan cities **(New Delhi, Kolkata, Mumbai and Chennai)** with effect from July 1st, 2001.

Terms:

The Emission Warranty will be applicable for **80,000 kms or 3 years** (Whichever comes earlier) from the date of invoice to the first owner. The remaining warranty terms will be valid in case of any change in ownership provided the production of all valid documents.

Conditions:

1. Under Emission Warranty, Warranty claims will be admitted for a prima-facie examination, in case vehicle fails to meet the Emission Standard as specified in sub rule (2) of rule no. 115 of Central Motor Vehicles Rules (CMVR), 1989.
2. The warranty claims will only be accepted after examination carried out by Maruti Suzuki or authorised Maruti Suzuki workshop which leads to firm conclusions that the
   a) Original settings have not been tampered in any case.
   b) Part (as given in Annexure - A) has a manufacturing defect.
   c) Vehicle is unable to meet the Emission Standards (as given in 1.), inspite of the vehicle having been maintained and used in accordance with the instructions as specified in Owner's Manual and Service Booklet and the used fuel and different oils (Engine oil, Transmission oil, Brake oil etc.) are also as per specification.
3. The method of examination for deciding the warranty of the parts will be at the sole discretion of Maruti Suzuki and authorised Maruti Suzuki workshop and results of the examination will be final and binding. If after examination, the warrantable condition is not established, Maruti Suzuki and authorised Maruti Suzuki workshop has the right to charge all, or part of the cost of such examination.
4. Under Emission Warranty, the parts (as given in Annexure - A) will be changed free of cost, but the consumables will be charged as per actual.
5. If the part covered under Emission Warranty or the associated parts, are not independently replaceable, on account of these being integral parts of a complete assembly, Maruti Suzuki and authorised Maruti Suzuki workshop will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
6. Any consequential repairs or replacement of parts which may be found necessary to establish compliance of Emission Warranty, will not be considered under warranty, unless the same is under product warranty. The consumable will be charged as per actual under such repair or replacement.
7. Maruti Suzuki will not be responsible for the cost of transportation of the vehicle to the nearest authorised Maruti Suzuki workshop or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination and/or repair by Maruti Suzuki workshop.
8. Maruti Suzuki will not be responsible for any penalty that may be charged by statutory authorities on account of failure to comply with the EMISSION STANDARDS.
9. Emission Warranty will not be affected by the change of owner, provided all the documents are available.

10. All maintenance actions (as specified in the Owner's Manual and Service Booklet) need to be followed and recorded in the manual for emission warranty.
11. The customer needs to produce the PUC (Pollution Under Control) certificate valid for the period preceding the test during which the failure is discovered. The receipts (for the maintenance of the vehicle as per specification in Owner's Manual and Service Booklet from the date of original purchase of the vehicle) will also be required.

Conditions under which the Emission Warranty is not APPLICABLE

1. In the absence of valid PUC certificate.
2. Vehicle not serviced from authorised Maruti Suzuki workshop as per the schedule specified in the Owner's Manual.
3. Vehicle subjected to abnormal use (accident, motor race, rallies or for the purpose of establishing the records etc).
4. Use of non MGP (Maruti Genuine Part).
5. Vehicle that has been tampered with.
6. Tampering with odometer so that the actual kilometer reading cannot be determined.
7. Use of adulterated fuel and/or unspecified oils (Engine oil, Transmission oil and Brake oil etc).

Annexure - A

List of parts covered under Emission Warranty


1. Fuel Injection Assembly, Pressure Regulator, Throttle Body Assembly.
2. Electronic Control Module (ECM).
3. Intake Manifold.
4. EGR valve.
5. Ignition Coil.
6. Canister Assembly.
7. Vapour Liquid Seperator.
8. Fuel Tank and Filler Cap.
9. PCV (Positive Crankcase Ventilation) Valve.
10. Oil Filler Cap.
11. Catalytic Convertor.
12. Exhaust Manifold.
13. All Fuel Injection System related Sensors.
14. High Pressure Fuel Pump.
15. Glow Plug.
16. Glow Plug Controller.

TABLE OF CONTENTS

FUEL RECOMMENDATION	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
VEHICLE LOADING AND TOWING	6
INSPECTION AND MAINTENANCE	7
EMERGENCY SERVICE	8
APPEARANCE CARE	9
GENERAL INFORMATION	10
SPECIFICATIONS	11
SERVICE NETWORK	12

FUEL RECOMMENDATION

Fuel recommendation 1-1

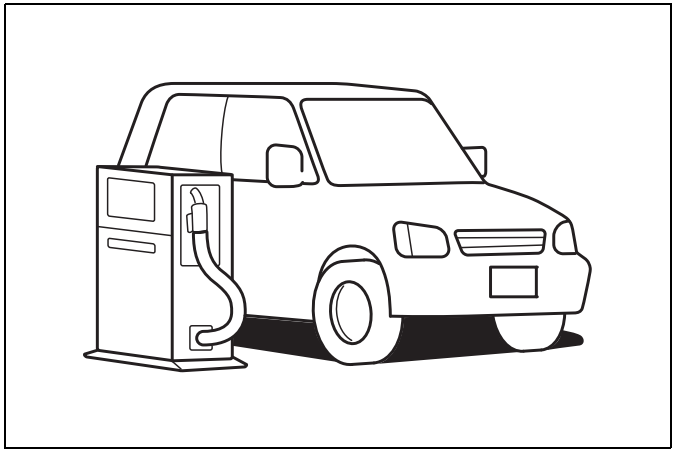

65D394

Fuel Recommendation

Petrol Engine

You must use unleaded petrol with an octane number (RON) of 91 or higher.

Petrol/Ethanol blends

Blends of unleaded petrol and ethanol (grain alcohol), also known as gasohol, are commercially available in some areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol. Make sure this petrol-ethanol blend has octane ratings no lower than those recommended for petrol.

Petrol/Methanol blends

Blends of unleaded petrol and methanol (wood alcohol) are also commercially available in some areas. DO NOT USE fuels containing more than 5% methanol under any circumstances. Fuel system damage or vehicle performance problems resulting from the use of such fuels are not the responsibility of MARUTI SUZUKI and may not be covered under the New Vehicle Warranty.

Fuels containing 5% or less methanol may be suitable for use in your vehicle if they contain cosolvents and corrosion inhibitors.

NOTE:
If you are not satisfied with the driveability or fuel economy of your vehicle when you are using a petrol/alcohol blend, you should switch back to unleaded petrol containing no alcohol.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when using an alternative non-automatic system, initial vent blowback occurs.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Warranty.


Diesel Engine

You must use diesel fuel with Cetane Number (CN) higher than 51 and sulfur content less than 50 ppm (parts per million).
MARUTI SUZUKI recommends to use the diesel fuel conformable to EN590. Do not use marine diesel fuel, heating oils and so forth.

NOTICE
The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fueled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when using an alternative non-automatic system, initial vent blowback occurs.

NOTICE
Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Warranty.

BEFORE DRIVING

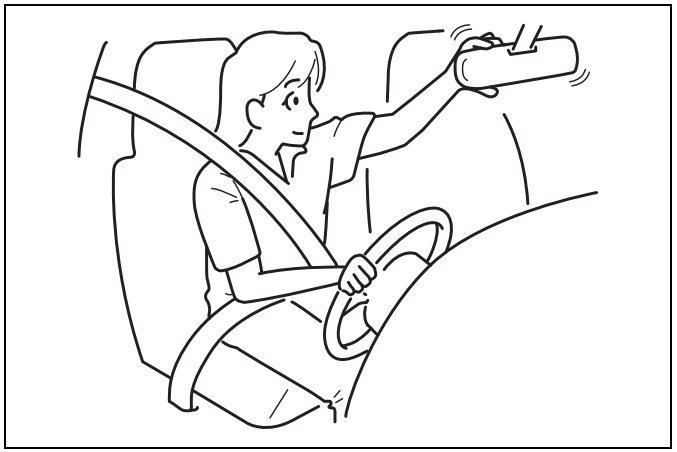


60G404

Keys 2-1
Door locks 2-2
Keyless push start system remote controller /
Keyless entry system transmitter (if equipped) 2-6
Security system (if equipped) 2-14
Windows 2-17
Mirrors 2-19
Front seats 2-21
Rear seats 2-22
Seat belts and child restraint systems 2-24
Supplemental restraint system (air bags) 2-41
Instrument cluster 2-48
Speedometer 2-49
Tachometer (if equipped) 2-49
Fuel gauge 2-50
Brightness control 2-50
Information display
(instrument cluster with tachometer) 2-52
Information display
(instrument cluster without tachometer) 2-65
Warning and indicator lights 2-71
Lighting control lever 2-77
Front fog light switch (if equipped) 2-78
Headlight leveling switch 2-79
Turn signal control lever 2-79
Hazard warning switch 2-80
Windshield wiper and washer lever 2-81
Tilt steering lock lever 2-83
Horn 2-83
Heated rear window switch (if equipped) 2-84

Keys

EXAMPLE

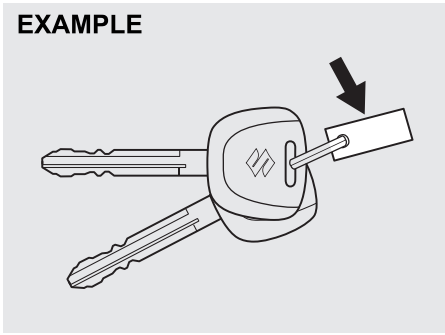

54G489

Your vehicle comes with a pair of keys. The key(s) may or may not be equipped with a transmitter depending on model variant. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer system

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.
The engine can be started only with your vehicle's original immobilizer ignition key or keyless push start system remote controller, which has an electronic identification code programmed into it. The key or remote controller communicates the identification code to the vehicle when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to "ON". If you need to make spare keys or remote controllers, see your authorised Maruti Suzuki workshop. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.



80JM122

If the immobilizer/keyless push start system warning light blinks or comes on when the ignition switch is in "ON" position or the ignition mode is "ON", the engine will not start.

NOTE:
If the immobilizer/keyless push start system warning light blinks or comes on, a message may be shown on the information display.

For vehicles without a keyless push start system
If this light blinks or comes on, turn the ignition switch to "LOCK" position, and then turn it back to "ON" position.
If the light still blinks or comes on after the ignition switch is turned back to "ON" position, there may be something wrong with your key or with the immobilizer system. Ask your authorised Maruti Suzuki workshop to have the system inspected.

For vehicles with a keyless push start system
If this light blinks or comes on, change the ignition mode to LOCK (OFF), and then change it back to "ON". Also refer to "If the master warning indicator light blinks or comes on and the engine cannot be started" in "Starting the engine (vehicle with keyless push start system)" in the "OPERATING YOUR VEHICLE" section.
If the light still blinks or comes on after the ignition mode is changed back to "ON", there may be something wrong with your key or with the immobilizer system. Ask your authorised Maruti Suzuki workshop to have the system inspected.

The immobilizer/keyless push start system warning light may also blinks if the remote controller is not in the vehicle when you close the door or attempt to start the engine.

NOTE:
- *If you lose your immobilizer ignition key or remote controller, ask your authorised Maruti Suzuki workshop as soon as possible to deactivate the lost one, and to make a new key or remote controller.*
- *If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch or the engine switch when using your vehicle or the engine may not be started because they may interfere with your vehicle's immobilizer system.*
- *If you attach any metal objects to the immobilizer key or remote controller, it may not start the engine.*

NOTICE
The immobilizer key and remote controller are sensitive electronic instruments. To avoid damaging them: • **Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.** • **Keep them away from magnetic objects.**


Ignition key reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

Door locks

Side door locks

EXAMPLE

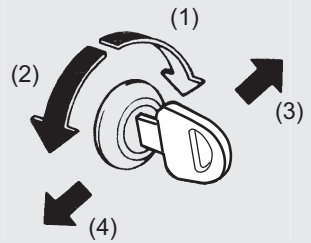

68PH00201


(1) UNLOCK
(2) LOCK
(3) Front
(4) Rear

To lock a driver's door from outside the vehicle:

- Insert a key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a driver's door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

EXAMPLE

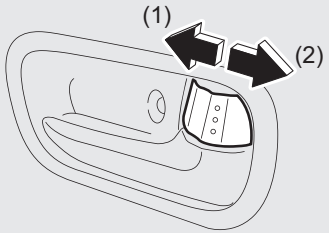

66RH010

(1) LOCK
(2) UNLOCK


To lock a door from the inside of the vehicle, turn the lock knob forward. Turn the lock knob backward to unlock the door.

To lock a rear door from the outside of the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:
Hold the door handle when you close a locked front door, or the door will not remain locked.

Central door locking system

EXAMPLE

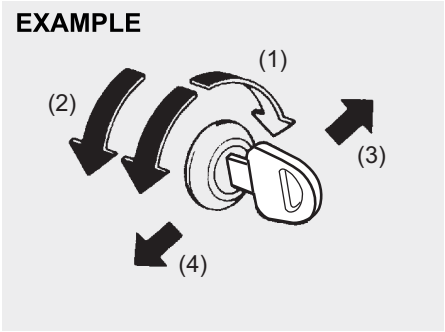

76MH0A002

(1) LOCK
(2) UNLOCK
(3) Front
(4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.


To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.

NOTE:
You can switch the function that unlocks all doors from requiring two turns to requiring one turn, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

EXAMPLE

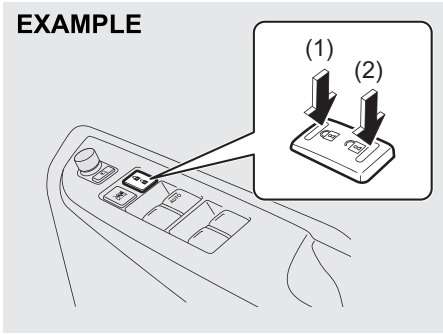

66RH011


(1) LOCK
(2) UNLOCK

You can also lock or unlock all doors from inside by depressing the front or rear of the switch, respectively on the driver side.

NOTE:
- *If your vehicle is equipped with the keyless entry system or keyless push start system, you can also lock or unlock all doors by operating the transmitter or remote controller. Refer to "Keyless push start system remote controller / Keyless entry system transmitter" in this section.*
- *If your vehicle is equipped with the keyless push start system, you can also lock or unlock all doors by pushing the request switch. Refer to "Keyless push start system remote controller / Keyless entry system transmitter" in this section.*

NOTE:
- *All doors are automatically unlocked when you change the ignition mode to LOCK (OFF) or turn the ignition switch to the "LOCK" position and pull out the key.*
- *All doors are automatically locked for safety when the vehicle speed reaches 15 km/h.*
- *You can change the automatic locking or unlocking function mentioned above via the setting mode of the information display. For details on how to use the information display, refer to "Information display" in this section.*

Child-proof locks (rear door)

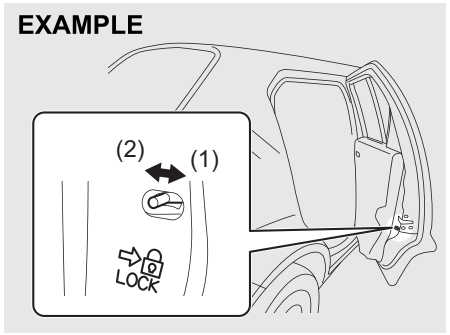

75RM037

(1) LOCK
(2) UNLOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in LOCK position (1), the rear door can only be opened from outside. When the lock lever is in UNLOCK position (2), the rear door can be opened from inside or outside.

⚠ WARNING


Place the child-proof lock in LOCK position whenever children are seated in the rear.

Tailgate

⚠ WARNING

Always make sure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

Type A

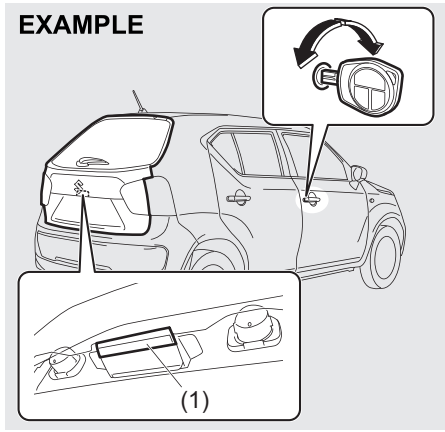


66RH012

You can lock and unlock the tailgate by using the key in the driver's door lock.

To open the tailgate, pull up the tailgate handle (1) and lift the tailgate.

If you cannot unlock the tailgate by using the key in the driver's door lock due to a discharged battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.


1) Remove the luggage compartment cover (if equipped) and fold the rear seat forward for easier access. Refer to "Folding rear seats" section for details on how to fold the rear seat forward.

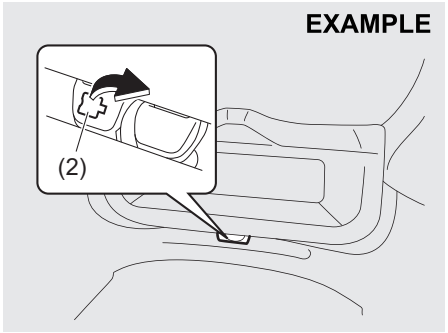

62R0366


2) Open the cover (2) in the lock mechanism of the tailgate.

NOTE:
Be careful not to lose the cover (2) because it is small and detachable.

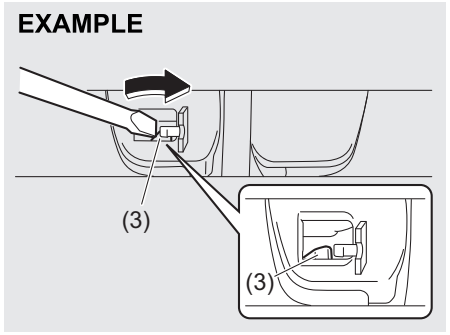

65P30080

3) Move the lever (3) in arrow direction by using a flat blade screwdriver to unlock the tailgate.

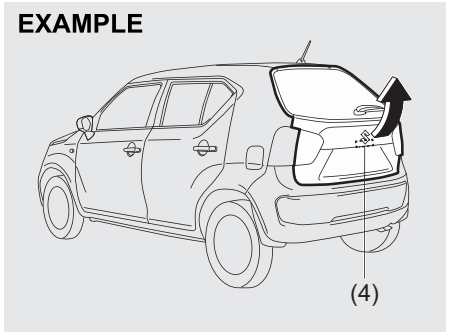


66RH095

4) From outside the vehicle, pull up the tailgate handle (4) and lift the tailgate.

If the tailgate cannot be unlocked, have the vehicle inspected by your authorised Maruti Suzuki workshop.

Type B

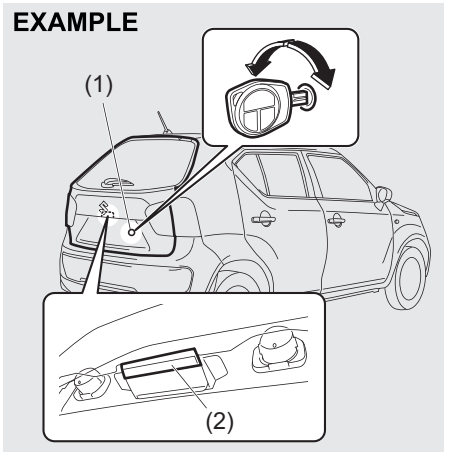


66RH096

You can lock or unlock the tailgate by using the key in the tailgate lock (1).
To open the tailgate, pull up the tailgate handle (2) and lift the tailgate.

NOTICE
Do not use key to lift up the tailgate, or the key may break off in the lock.

Keyless push start system remote controller / Keyless entry system transmitter (if equipped)

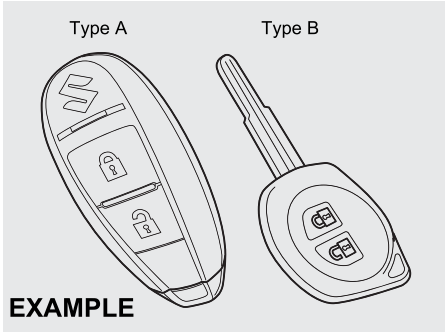

82PH02035

Your vehicle is equipped with either a keyless push start system remote controller (Type A) or a keyless entry system transmitter (Type B). The remote controller has a keyless entry system and a keyless push start system. The transmitter has only a keyless entry system. For details, refer to the following explanations.

⚠ WARNING


Radio waves from the keyless push start system antenna(s) may interfere with operation of electrical medical equipment such as pacemakers. Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.

- **Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from the antenna(s) can interfere with the medical equipment.**
- **If radio wave interference is a concern, have the function of the antenna(s) disabled by your authorised Maruti Suzuki workshop.**

Keyless push start system remote controller (Type A)

The remote controller enables the following operations:

- You can lock or unlock the doors by operating LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch. For details, refer to the explanation in this section.
- You can start the engine without using an ignition key. For details, refer to “Engine switch” in the “OPERATING YOUR VEHICLE” section.

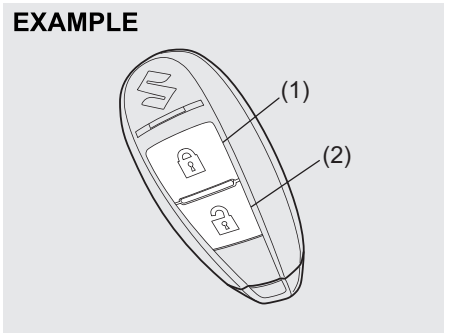

82PH02034

(1) LOCK button
(2) UNLOCK button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the remote controller near the vehicle.

Central door locking system
- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

NOTE:
You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:
- The turn signal lights will flash twice and the siren will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Make sure that the doors are locked after you operate LOCK button (1).
If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.


NOTE:
- *If you lock the doors using the remote controller when the engine hood is open, the siren will sound 3 times to remind you.*
- *If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the remote controller, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.*
- *Once you push both of the LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound. However, if you push one of the buttons twice or more within 5 seconds, or push one of the buttons 5 seconds later, the siren will sound.*
- *You can set whether the siren sounds when locking or unlocking the doors via the setting mode of the information display. For details on how to use the information display, refer to "Information display" in this section.*

NOTE:
- *The maximum operating distance of the remote controller is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.*
- *The door locks cannot be operated with the remote controller if the ignition mode is in any other mode than LOCK (OFF).*
- *If any door is open, you cannot lock the door by operating the remote controller, however unlock the door.*
- *If you lose one of the remote controllers, ask your authorised Maruti Suzuki workshop as soon as possible for replacement. Have your dealer program the new remote controller code in your vehicle's memory so that the old code is erased.*

Car locator function
This function helps in locating the vehicle.
Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds. The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time.
To cancel the car locator function, press any button (LOCK or UNLOCK).
You can also cancel the car locator function in any of the following operations.
- Press the engine switch to change the ignition mode to ON.
- Bring the remote controller with you and press the request switch.

NOTE:
The car locator function will not activate when the ignition mode is ACC or ON or pre warning / full blast warning by shock sensor or alarm is in activated condition.

Keyless unlocking/locking using the request switches

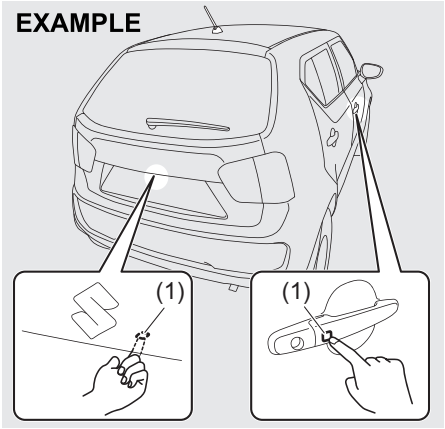

66RH013

When the remote controller is within the operating range described in this section, you can lock or unlock the doors (including the tailgate) by pushing the request switch (1) on the driver's door handle, front passenger's door handle or tailgate.

When all doors are unlocked:
- To lock all doors, push one of the request switches once.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

To unlock a door or all doors:
- Push one of the request switches once to unlock only one door.
- Push one of the request switches twice to unlock all doors.

NOTE:
You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

When the doors are unlocked:
- The turn signal lights will flash twice and the siren will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.


Make sure that the doors are locked after you operate the request switch to lock the doors.

NOTE:
- *The door locks cannot be operated by the request switch under the following conditions:*
  - *If any door is open or is not completely closed.*
  - *If the ignition mode is in any other mode than LOCK (OFF).*

- *If no doors are opened within about 30 seconds after unlocking the doors by pushing the request switch, the doors will be locked again automatically.*

NOTICE

- **Do not operate request switch with sharp metal object.**
- **Do not use high pressure water on request switch.**

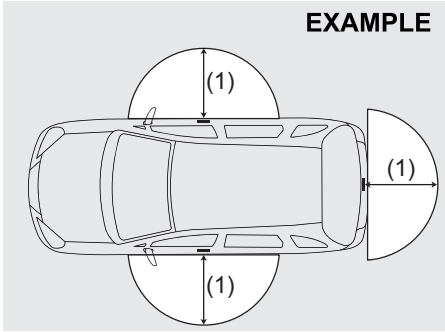

80J056

(1) 80 cm (2 1/2 feet)

When the remote controller is within approximately 80 cm (2 1/2 feet) from a front door handle or the tailgate switch, you can lock or unlock the doors by pushing the request switch.

NOTE:

- *If the remote controller is outside the request switch operating range described above, you will not be able to operate the request switch.*
- *If the battery of the remote controller runs down or there are strong radio waves or noise, the request switch operating range may be reduced or the remote controller may be inoperative.*
- *If the remote controller is too close to the door glass, the request switches may not operate.*
- *If a spare remote controller is in the vehicle, the request switches may not operate normally.*
- *The remote controller will only operate a request switch if it is within the switch's operating range. For example, if the remote controller is within the operating range of the driver's door request switch but not the front passenger's door request switch or the tailgate request switch, the driver's door switch can be operated but the front passenger's door switch or tailgate switch cannot be operated.*

NOTICE

The remote controller is a sensitive electronic instrument. To avoid damaging the remote controller:

- **Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.**
- **Keep the remote controller away from magnetic objects such as a television.**

NOTE:

The keyless push start system may not function correctly in certain environments or under certain operating conditions such as the following:


- *When there are strong signals coming from a television, power station or a cellular phone.*
- *When the remote controller is in contact with or covered by a metal object.*
- *When a radio wave type remote keyless entry is used nearby.*
- *When the remote controller is placed near an electronic device such as personal computer.*

Some additional precautions you should take and information you should be aware of are:

- *Make sure that the key is stowed in the remote controller. If the remote controller becomes unreliable, you will not be able to lock or unlock the doors.*

- *Make sure that the driver always carries the remote controller.*
- *If you lose one of the remote controllers, ask your authorised Maruti Suzuki workshop as soon as possible for a replacement. Have your dealer program the new remote controller code in your vehicle's memory so that the old code is erased.*
- *You can use up to four remote controllers and the keys for your vehicle. Ask your authorised Maruti Suzuki workshop for details.*
- *The battery life of the remote controller is about two years, but it can vary depending on usage conditions.*


EXAMPLE



57L21016

To stow the key into the remote controller, push the key in the remote controller until you hear a click.

EXAMPLE

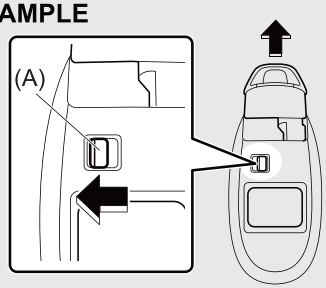

54P000263

To remove the key from the remote controller, push the button (A) in arrow direction and pull the key out from the remote controller.

Request switch warning buzzer

This exterior buzzer beeps for about 2 seconds in the following conditions to warn you that the request switch will not work.


- The request switch is pressed after all doors are closed with the ignition mode changed to ACC or ON by pressing the engine switch when the remote controller is outside the vehicle.
- The request switch is pressed in any of the following conditions after changing the ignition mode to LOCK (OFF) by pressing the engine switch.
  - The remote controller is left inside the vehicle.
  - Any door (including the tailgate) is open.

Press the request switch again after doing the following:

With the ignition mode changed to LOCK (OFF) by pressing the engine switch, bring out the remote controller if it is inside the vehicle and make sure that all doors are completely closed.

Reminder function

EXAMPLE

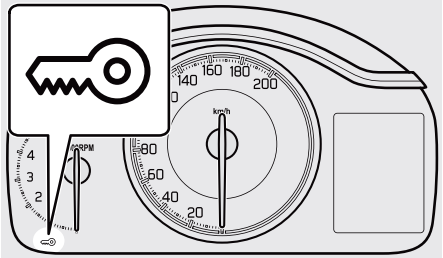

66RH014

If the remote controller is not in the vehicle under the following conditions, the buzzer sounds intermittently for about 2 seconds and the immobilizer/keyless push start system warning light on the instrument cluster blinks:

When one or more doors are opened and all of the doors are later closed with the ignition in any other mode than LOCK (OFF).

The indicator light will turn off within several seconds after the remote controller is returned to an area of the vehicle other than the rear luggage area.

If the remote controller is left in the vehicle and you lock the driver's door or front passenger's door as described below, the door will be automatically unlocked.

- If you open the driver's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the driver's door will be automatically unlocked.
- If you open the front passenger's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the front passenger's door will be automatically unlocked.

NOTE:


- *The reminder will not operate when the remote controller is on the instrument panel, in the glove box, in a storage compartment, in the sun visor or on the floor, etc.*
- *Make sure that the driver always carries the remote controller.*
- *Do not leave the remote controller in the vehicle when leaving the vehicle.*

Battery replacement

If the remote controller becomes unreliable, replace the battery.

To replace the battery of the remote controller:


EXAMPLE

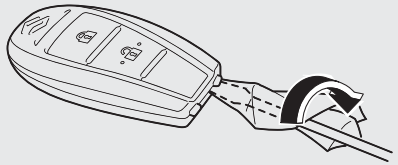

71LMT0201

1) Pull the key out from the remote controller.
2) Insert a flat-bladed screwdriver covered with a soft cloth in the slot of the remote controller and pry it open.

EXAMPLE

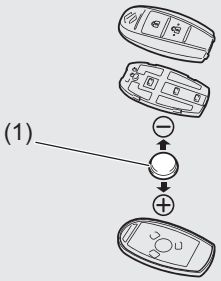

68LM210

(1) Lithium disc type battery: CR2032 or equivalent

3) Replace the battery (1) so its + terminal faces the bottom of the case as shown in the illustration.
4) Close the remote controller firmly.
5) Make sure that the door locks can be operated with the remote controller.
6) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

⚠ WARNING

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.


NOTICE

- **The remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.**
- **When replacing the battery by yourself, the remote controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.**

NOTE:
Used batteries must be disposed properly according to applicable rules or regulations and must not be disposed with ordinary household trash.

Keyless entry system transmitter (Type B)

EXAMPLE

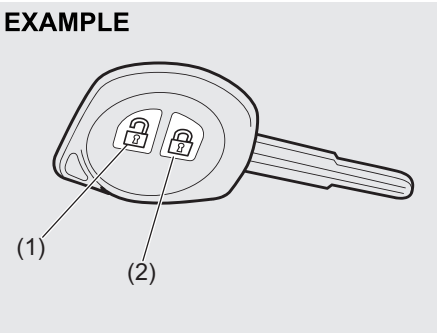

66RM02001

(1) LOCK button
(2) UNLOCK button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle.

Central door locking system
- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

NOTE:
You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:
- The turn signal lights will flash twice and the siren will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Make sure that the doors are locked after you operate LOCK button (1).

NOTE:
If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.

NOTE:
- *If you lock the doors using the transmitter when the engine hood is open, the siren will sound 3 times to remind you.*
- *If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the transmitter, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.*

- *Once you push both of the LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound. However, if you push one of the buttons twice within 5 seconds, or push one of the buttons 5 seconds later, the siren will sound.*

NOTE:
- *The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.*
- *The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.*
- *When any door is open, the door locks can only be unlocked with the transmitter, and the turn signal light will not flash.*
- *If you lose one of the transmitters, ask your authorised Maruti Suzuki workshop as soon as possible for a replacement. Have your dealer program the new transmitter code in your vehicle's memory so that the old code is erased.*

NOTICE


The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:
- **Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.**
- **Keep the transmitter away from magnetic objects such as a television.**

Car locator function
This function helps in locating the vehicle. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds.
The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time.
To cancel the car locator function, press any button (LOCK or UNLOCK). You can also cancel the car locator function by turning the ignition switch to "ON" position.

NOTE:
The car locator function will not activate when the key is in the ignition switch or pre warning / full blast warning by shock sensor or alarm is in activated condition.

Battery replacement
If the transmitter becomes unreliable, replace the battery.


To replace the battery of the transmitter:

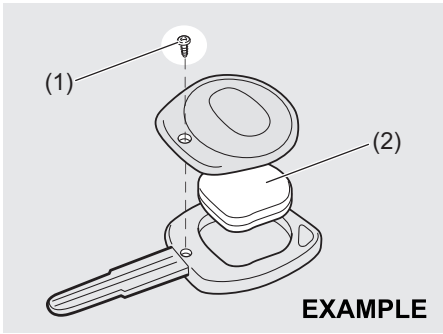

68LM248

1) Remove the screw (1), and open the transmitter cover.
2) Remove the transmitter (2).

EXAMPLE

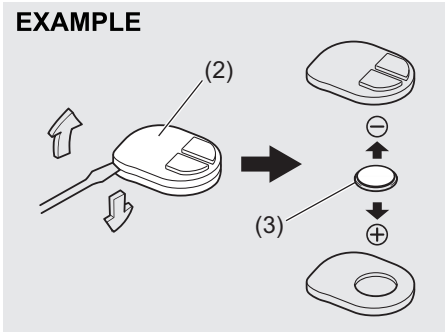

68LM249

(3) Lithium disc type battery:
CR1616 or equivalent

3) Put the edge of a flat-bladed screwdriver in the slot of the transmitter (2) and pry it open.
4) Replace the battery (3) so its + terminal faces "+" mark of the transmitter.
5) Close the transmitter and install it into the transmitter holder.
6) Close the transmitter cover, install and tighten the screw (1).
7) Make sure that the door locks can be operated with the transmitter.
8) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

⚠ WARNING

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- **The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.**
- **When replacing the battery by yourself, the transmitter could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.**

Security system (if equipped)

The security system is armed after you lock all doors (including engine hood and tailgate) by using the keyless entry system transmitter, keyless push start system remote controller or request switch.
Once the system is armed, any attempt to open a door by using any other means (*) than the keyless entry system transmitter, keyless push start system remote controller or request switch, or open the engine hood, will cause the alarm to be triggered.
* These means include the following:
  – The key
  – The lock knob on a door
  – The central door locking switch
  – The tailgate emergency lever


Also, in case that you have set the shock sensor to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the warning will be triggered in case of any attempt to tamper with the vehicle. The shock sensor can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor, ask your authorised Maruti Suzuki workshop or use the setting mode of the information display.

NOTE:
- *The default setting of the shock sensor is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to "Information display" in this section.*
- *Your dealer may have already set the shock sensor of the vehicle to the enabled state before you purchase it. Consult your dealer for further information.*

NOTE:
- *The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into the vehicle.*
- *Always use the keyless entry system transmitter, keyless push start system remote controller or request switch to unlock the doors when the security system has been armed. Using a key instead will trigger the alarm.*
- *If a person who does not know the security system is going to drive the vehicle, we recommend you explain the system and its operation to the person. Mistakenly triggering the alarm may cause a nuisance to others.*
- *Even if the security system is armed, you should still be careful to guard against theft. Do not leave money or things of value in the vehicle.*

How to arm the security system
Lock all doors (including engine hood and tailgate) using the keyless entry system transmitter, keyless push start system remote controller or request switch.
When the system is armed, the indicator continues to blink at intervals of approximately 2 seconds.

EXAMPLE

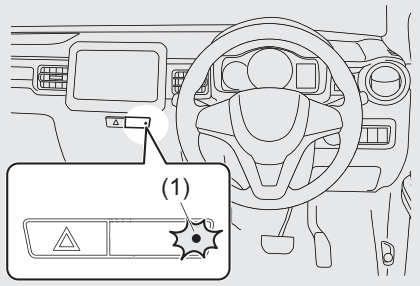

62R0148

NOTE:
- *To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or the warning may be triggered if anyone swings the vehicle (if the shock sensor is in the enabled state).*
- *The security system is not armed when all doors are locked using the key from outside, using the door lock knobs or the central door locking switch from inside.*
- *If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless entry system transmitter, keyless push start system remote controller or request switch, the doors are automatically locked again. When the doors are locked, the security system will be armed.*
- *If the security system indicator (1) blinks when the ignition switch is in "ON" position or the ignition mode is ON, there may be something wrong with the security system. Ask your authorised Maruti Suzuki workshop to inspect the system.*

How to disarm the security system
Simply unlock the doors using the keyless push start system remote controller, the request switch or the keyless entry system transmitter. The security system indicator will go out, indicating that the security system is disarmed.

How to stop the alarm
Should the alarm be triggered accidentally, the alarm will stop by the following operations.
- Press the engine switch to change the ignition mode to ON or turn the ignition switch to “ON” position in case of emergency.
- Unlock the doors using the keyless push start system remote controller, the request switch, or the keyless entry system transmitter.

NOTE:
- *Even after the alarm has stopped, if you lock the doors using the keyless entry system transmitter, keyless push start system remote controller or request switch, the security system will be rearmed.*
- *If you disconnect the battery while the security system is in the armed condition or the alarm is actually in operation, the alarm will be re-triggered when the battery is then reconnected.*
- *Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, or the warning may be triggered if the vehicle feels a shock (if the shock sensor is in the enabled state), without disarming the security system.*


Checking whether the alarm has been triggered during parking
If the alarm was triggered and you then turn the ignition switch to “ON” position or change the ignition mode to ON, the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether the vehicle has been broken into while you were away from it.

Security system indication
- If any of the doors or tailgate are opened without unlocking by the keyless entry system transmitter, keyless push start system remote controller or request switch, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the shock sensor is in the enabled state and the vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, siren will sound for about 4.5 seconds (full blast warning). The security system indicator continues to blink during this time.

NOTE:
If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.

Windows

Manual window control (if equipped)

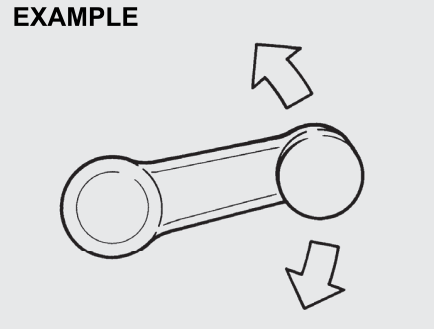


60G010A

Raise or lower the door windows by turning the handle located on the door panel.

Electric window controls (if equipped)


The electric windows can only be operated when the ignition switch is in “ON” position or the ignition mode is ON.

Driver’s side (Type A)

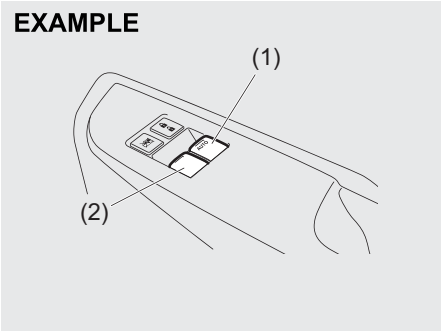

66RH018


Driver’s side (Type B)

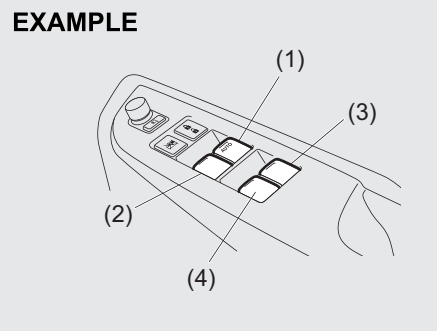

66RH019


The driver’s door has a switch (1) to operate the driver’s window, and a switch (2) to operate the front passenger’s window or there are switches (3), (4), to operate the rear right and left passenger windows, respectively.

Passenger's door

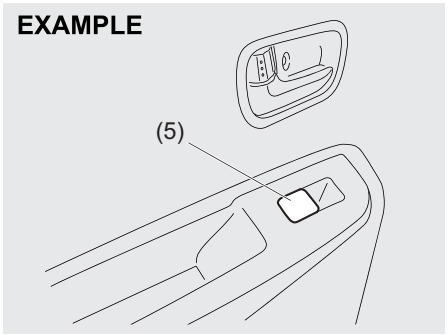

66RH020

The passenger's door has a switch (5) to operate the passenger's window.

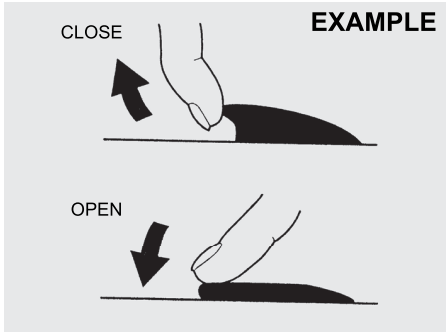


81A009

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.


The driver's window has AUTO-DOWN feature for greater convenience (at toll booths or drive-through restaurants, for example). This means the driver can open the window without holding the window switch in DOWN position. Press down the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN position, pull up the switch briefly.

Lock switch (Type A)

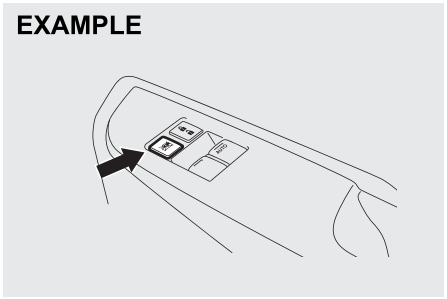

66RH021

Lock switch (Type B)

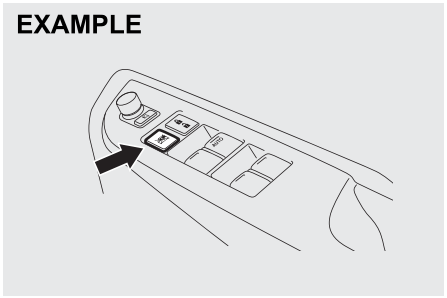

66RH022

The driver's door also has a lock switch for the passenger's window(s). When you push in the lock switch, the passenger's window(s) cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing it again.

⚠ WARNING

- **You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.**
- **To avoid injuring an occupant by window entrapment, make sure that no part of the occupant's body such as hands or head is in the path of the electric windows when closing them.**
- **Always remove the ignition key or take the keyless push start system remote controller with you when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the electric window switches and get trapped by the window.**


NOTE:
If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Mirrors

Inside rearview mirror


You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror.

Type A

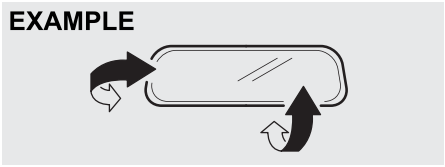


74LHT0235

Type B

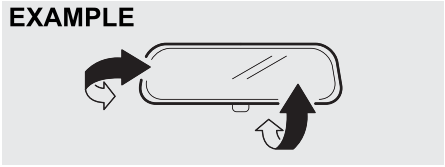

68LMT0205

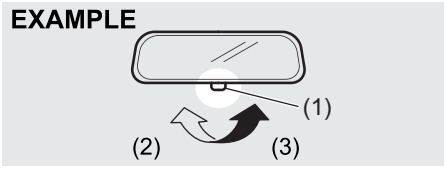

68LMT0206

(2) Day driving
(3) Night driving

To adjust the mirror, set the selector tab (1) to the day position, and then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

⚠ WARNING


- **Always adjust the mirror with the selector set to the day position.**
- **Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.**

Outside rearview mirrors

⚠ WARNING

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.


Type A

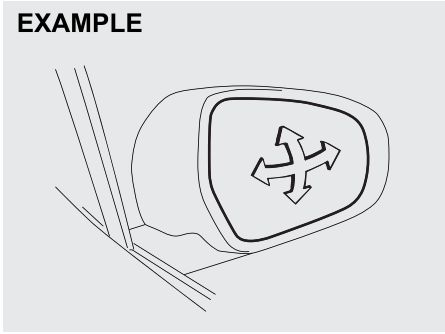

66RH023

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

Type B

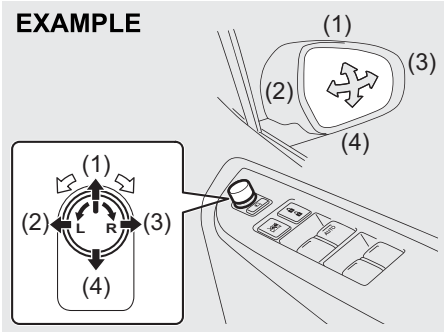


66RH024

The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position, or the ignition mode is ACC or ON. To adjust the mirrors:

1) Move the selector switch to the left or right to select the mirror you wish to adjust.
2) Press the outer part of the switch that corresponds to the direction in which you wish to move the mirror.
3) Return the selector switch to the center position to help prevent unintended adjustment.

Outside rearview mirror folding switch (if equipped)

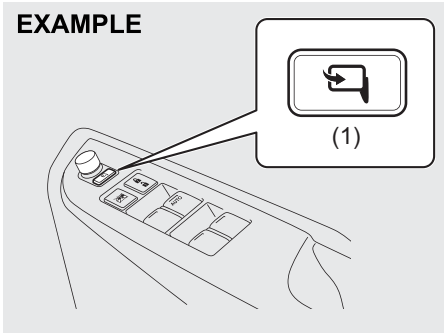

66RH025

You can fold the mirrors when you park the vehicle in a narrow space. When the ignition switch is in "ACC" or "ON" position, or the ignition mode is ACC or ON, push the folding switch (1) to fold and unfold the mirrors. Make sure that the mirrors are completely unfolded before you start driving.

⚠ CAUTION

Moving mirrors can pinch and injure a hand. Do not allow anyone's hand to get near the mirrors when folding and unfolding the mirrors.

Front seats

Seat adjustment

⚠ WARNING


Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Make sure that the driver's seat and seatback are properly adjusted before you start driving.

⚠ WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

⚠ WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

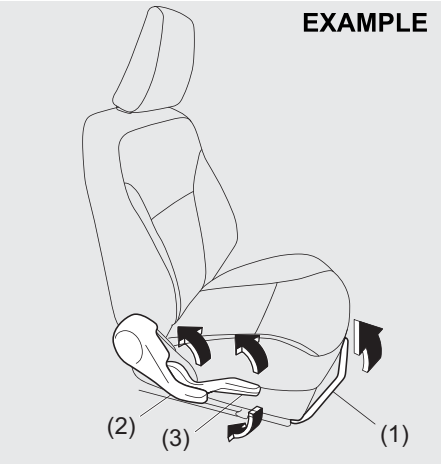

66RH155


Seat position adjustment lever (1)
Pull the lever up and slide the seat.

Seatback angle adjustment lever (2)
Pull the lever up and move the seatback.

Seat height adjustment lever (3) (if equipped)
Pull the lever up to raise the seat. Push the lever down to lower the seat.

After adjustment, move the seat and seatback forward and backward to check that it is securely latched.

Head restraints

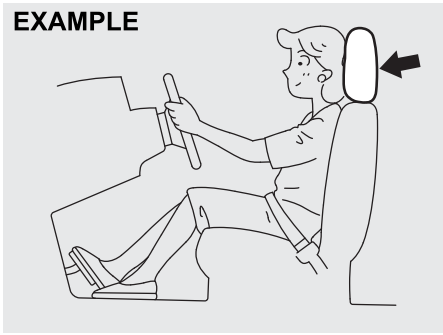

63J246


Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

⚠ WARNING

- **Never drive the vehicle with the head restraints removed.**
- **Do not attempt to adjust the head restraint while driving.**

NOTE:
It may be necessary to recline the seatback to provide enough overhead clearance to remove the head restraint.

Front

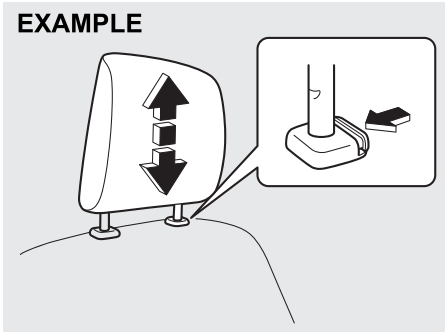

75RM004

To raise the front head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

Rear seats

Head restraints (if equipped)

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.


⚠ WARNING

- **Never drive the vehicle with the head restraints removed.**
- **Do not attempt to adjust the head restraint while driving.**

NOTE:
It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.

Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

Rear

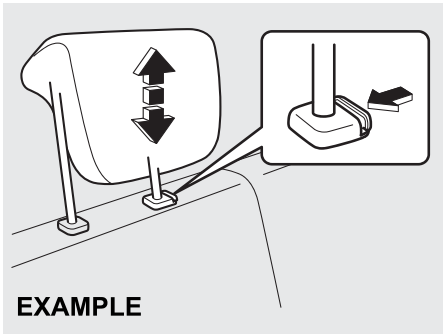

75RM006

To raise the rear head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

When installing a child restraint system, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary.


Folding rear seats

The rear seat(s) of your vehicle can be folded forward to provide additional cargo space.

To fold the rear seat(s) forward:

1) Lower the head restraint (if equipped) fully.

EXAMPLE

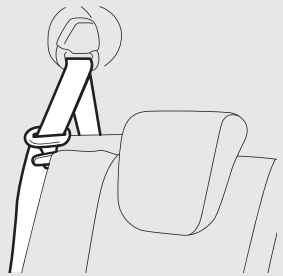


75RM007

2) Hook the webbing of the outboard lap-shoulder belts and latch plates in the belt hangers.

NOTICE

- **When you move a seatback, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.**
- **Make sure the belt webbing is not twisted.**

EXAMPLE

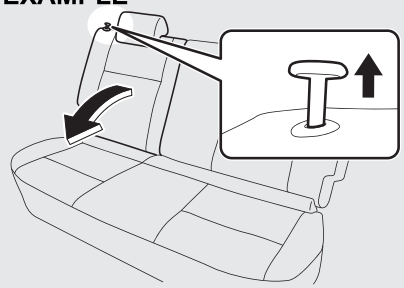

66RH027

3) Pull the release knob on the top of the seat(s), and fold the seatback forward.

NOTICE

After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.

⚠ WARNING

If you need to carry cargo in the passenger compartment with the rear seatback folded forward, secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.

To return the seat to the normal position, follow the procedure below.


⚠ CAUTION

When returning the rear seatback to the normal position, be careful that your finger is not caught between the lock and the striker.

NOTICE

When returning the rear seatback to the normal position, make sure that there is nothing around the striker. Any foreign materials prevent the seatback from being locked securely.

EXAMPLE

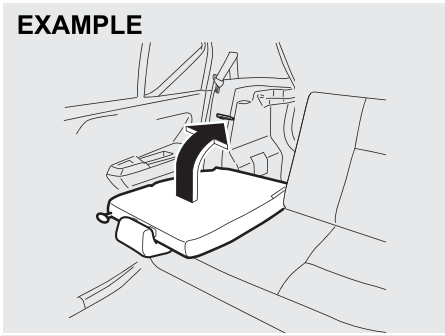

66RH087

Raise the seatback until it locks into place.

After returning the seat, move the seatback forward and backward to check that it is securely latched.

⚠ CAUTION


Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.

NOTICE

- **When returning the rear seatback to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback from being locked securely.**
- **When returning the rear seatback to the normal position, handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.**
- **As the lock is designed exclusively for securing the rear seatback, do not use it for any other purpose. Incorrect use of it may cause damage to the inside of the lock and prevent the seatback from being locked securely.**

Seat belts and child restraint systems

EXAMPLE

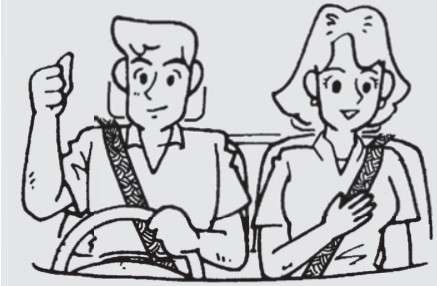


65D231S

⚠ WARNING

Wear your seat belts at all times.

⚠ WARNING

An air bag supplements or adds to the frontal crash protection offered by seat belts. The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.

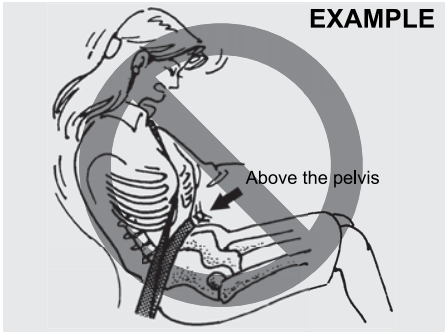


65D606

⚠ WARNING

- **Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.**
- **Seat belts should always be adjusted as follows:**
  - **– the lap portion of the belt should be worn low across the pelvis, not across the waist.**
  - **– the shoulder straps should be worn on the outside shoulder only, and never under the arm.**
  - **– the shoulder straps should be away from your face and neck, but not falling off your shoulder.**

(Continued)

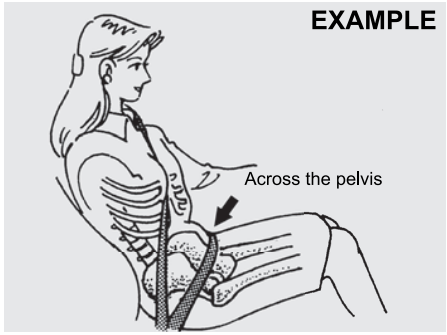


65D201

⚠ WARNING

(Continued)

- **Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than a snug belt.**
- **Make sure that each seat belt buckle is inserted into the proper buckle catch. It is possible to cross the buckles in the rear seat.**

(Continued)

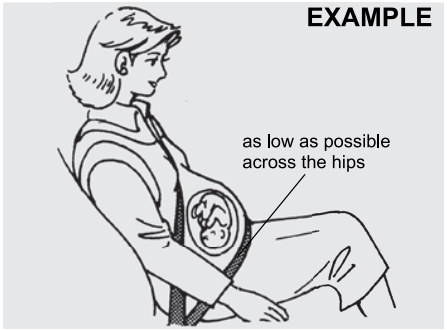

65D199

⚠ WARNING

(Continued)

- **Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the illustration.**
- **Do not fasten your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.**

(Continued)

⚠ WARNING

(Continued)

- **Never use the same seat belt for more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.**
- **Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.**
- **Children aged 12 and under should ride properly restrained in the rear seat.**
- **Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.**

(Continued)

⚠ WARNING

(Continued)


- **For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.**
- **Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.**
- **Do not insert any items such as coins and clips into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.**
- **All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.**

Lap-shoulder belt


Emergency locking retractor (ELR)

The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

Safety reminder

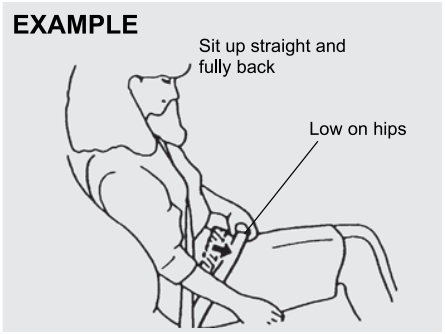

60A038

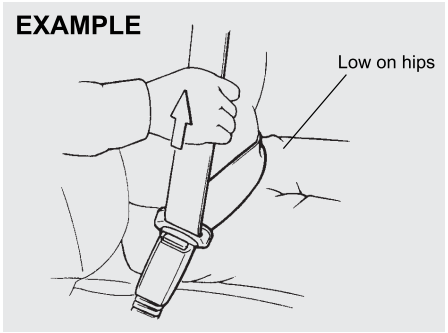


60A040

To reduce the risk of sliding under the belt during a crash, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.


All seat belts except rear center

All seat belts except rear center are the lap-shoulder belt.

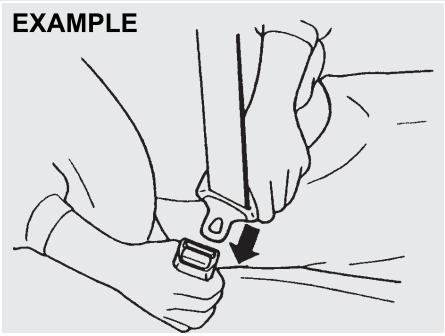


60A036

To fasten the seat belt, sit up straight and far back into the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a click.

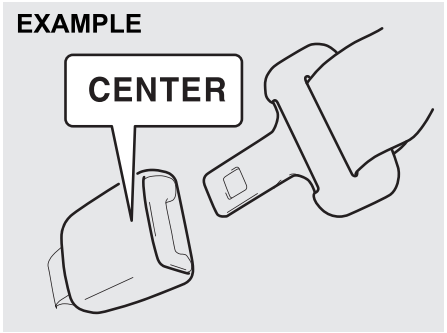

80J2008

NOTE:
The word "CENTER" is marked on the buckle for the rear center belt. The buckles are designed so a latch plate cannot be inserted into the wrong buckle.

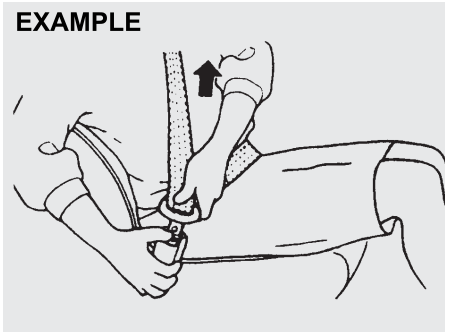


60A039

To unfasten the seat belt, push the red “PRESS” button on the buckle and retract the belt slowly while holding the belt or/and the latch plate.

Lap belt


Rear center seat belt

To fasten the belt, pull the latch plate attached to the seat belt across your hips and press it straight into the buckle until you hear a click. To reduce the risk of sliding under the belt during a collision, position the belt across your lap as low on your hips as possible and adjust it to a snug fit.

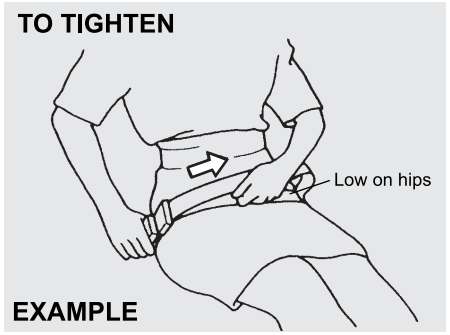

80JS028


To tighten the belt, pull the free end of the belt across alongside the lap strap.

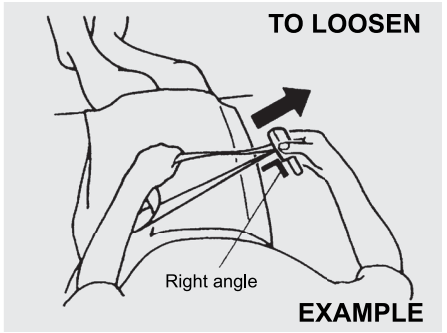

80JS029

To lengthen, release the latch plate from the buckle, pull the latch plate (adjuster) in the direction of the arrow, at right angles to the belt. The latch plate should then be refitted into the buckle and the belt tightened as previously described.

To unfasten the belt, press the release button on the buckle catch.

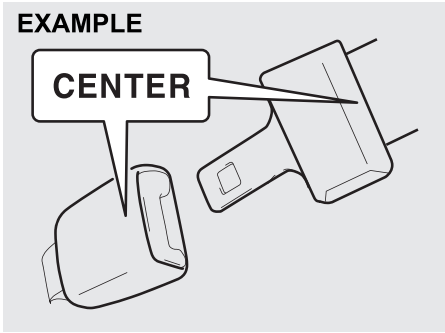


79MH0239

NOTE:
The word "CENTER" is marked on the buckle for the rear center belt. The buckles are designed so a latch plate cannot be inserted into the wrong buckle.


Driver's seat belt reminder

With tachometer

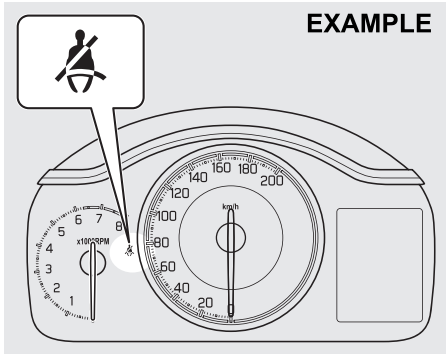

66RH028

Without tachometer

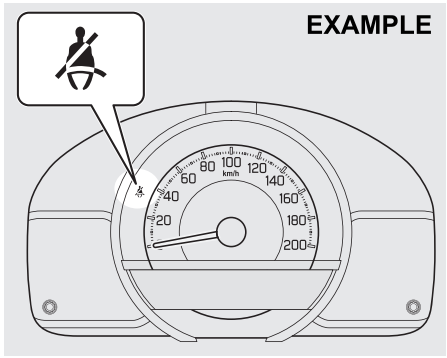

66RH029

If the driver's seat belt remains unbuckled when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the reminder works as follows:

1) The driver's seat belt reminder light will come on.
2) After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
3) The reminder light will remain on until the driver's seat belt is buckled.


If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned off, or the engine switch is pressed to change the ignition mode to LOCK (OFF).

⚠ WARNING

It is absolutely essential that the driver and passengers fasten their seat belts at all times. Persons who are not fastening seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before putting the key in the ignition or pressing the engine switch.


Rear outside seat belt guide

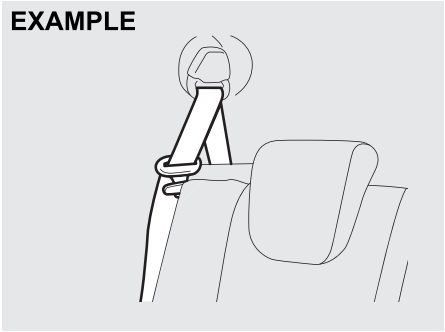

75RM007

When you move a seatback, make sure the belt webbing and latch plate are hooked in the seat belt hangers.

Seat belt inspection

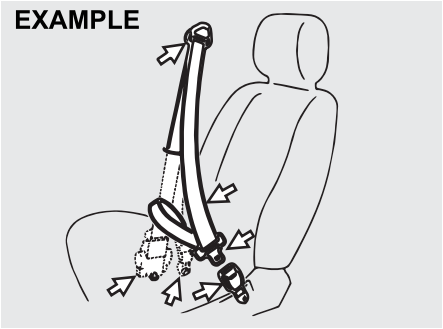


68PH00242

Periodically check if the seat belts work properly and are not damaged. Make sure the webbing, buckles, latch plates, retractors, anchorages and guide loops. Replace any seat belts which do not work properly or are damaged.

⚠ WARNING


Inspect all seat belt assemblies after any crash. Any seat belt assembly which was in use during a crash (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly which was not in use during a crash should be replaced if it does not function properly, it is damaged in any way or the seat belt pretensioners were activated (that is, if the front air bags were activated).

Child restraint systems

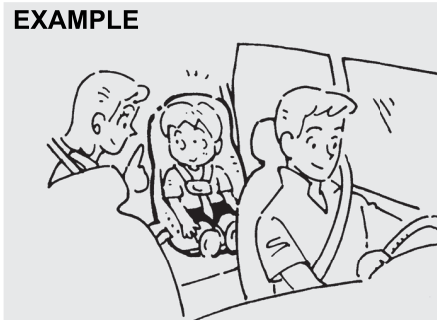


60G332

Infant restraint - rear seat only

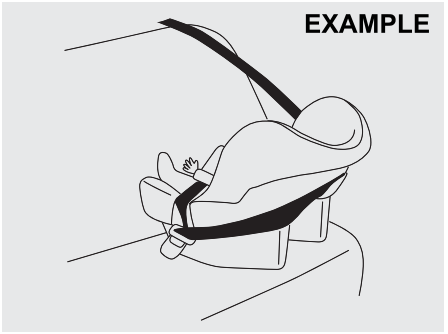


80JC007

Child restraint

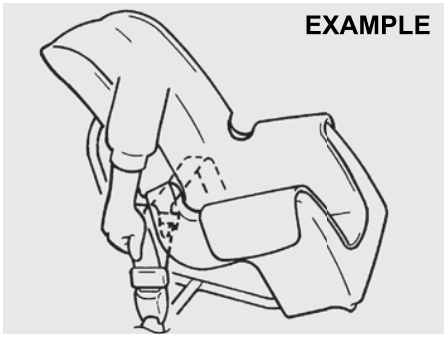

80JC016

Booster seat

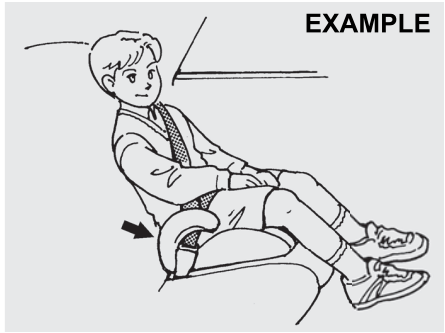

80JC008

MARUTI SUZUKI highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; make sure that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats either by seat belts (lap belts or the lap portion of lap-shoulder belts) or by special rigid lower anchor bars built into the seat. Whenever possible, MARUTI SUZUKI recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

If you must use a front facing child restraint in the front passenger's seat, adjust the passenger's seat as far back as possible.

NOTE:
Observe any statutory regulation about child restraints.



58MS030

⚠ WARNING


Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front air bag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating air bag.

⚠ WARNING

If you install a child restraint system in the rear seat, slide the front seat far enough forward so that the child's feet do not touch the front seatback. This will help avoid injury to the child in the event of an accident.



65D608

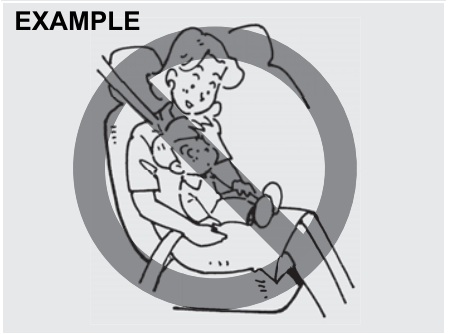

65D609

⚠ WARNING

Children could be endangered in a crash if their child restraint systems are not properly secured in the vehicle. When installing a child restraint system, follow the instructions below. Secure the child in the restraint system according to the manufacturer's instructions.


Installation with lap-shoulder seat belts

⚠ CAUTION

Adjust the height of the rear head restraint (if equipped) or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the rear seat head restraint should not be removed. If the rear head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.
If the child restraint is fitted improperly, a child sitting in it could be injured in a crash.

NOTE:
Stow the removed head restraint (if equipped) in the luggage compartment so it will not cause inconvenience to the occupants.

ELR type belt

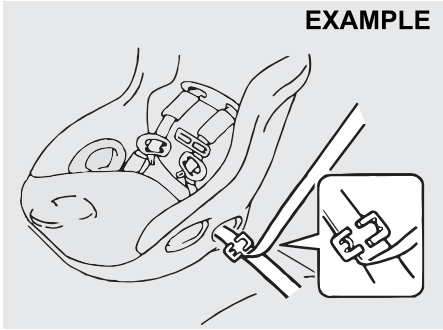


68PH00243

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Make sure that the seat belt is securely latched.
Move the child restraint system in all directions to check that it is securely installed.
When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

Installation with a lap belt

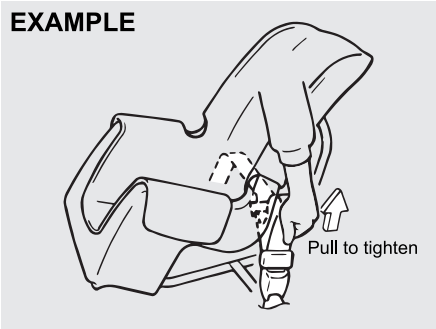


68PH00244

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

To lengthen or tighten the belt, refer to the "**Lap-belt**" item in this "Seat belts and child restraint systems" section. After making sure that the seat belt is securely latched, try moving the child restraint system in all directions, to make sure it is securely installed. If you need to tighten the belt, pull the free end of the webbing.

Installation with ISOFIX type anchorages

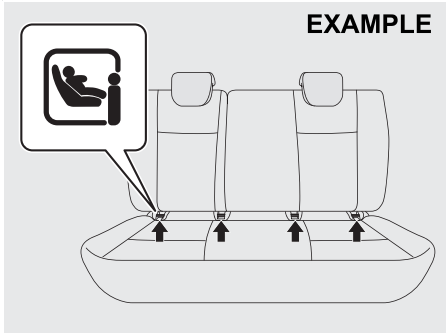


66RH144

Your vehicle is equipped with the lower anchorages in the rear seat outboard seating positions for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.

⚠ WARNING

Install the ISOFIX type of child restraint(s) in the only outboard seating positions, not in the central position for the rear seat.

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

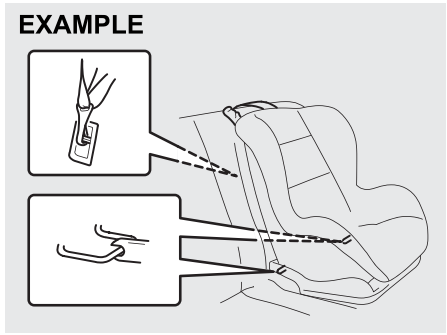

84MM00252

Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer.


Here is a general instruction:

⚠ CAUTION

Adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the rear seat head restraint should not be removed. If the rear head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.
If the child restraint is fitted improperly, a child sitting in it could be injured in a crash.

NOTE:
Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

EXAMPLE

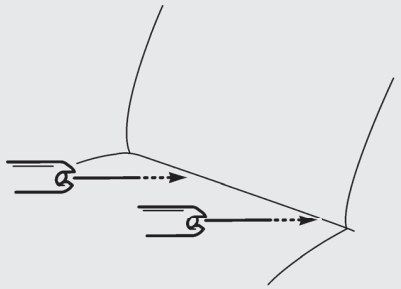

78F114

1) Place the child restraint in the rear seat, inserting the connecting bars to the anchorages between the seat cushion and the seatback.


EXAMPLE



68LM268


2) Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.

EXAMPLE

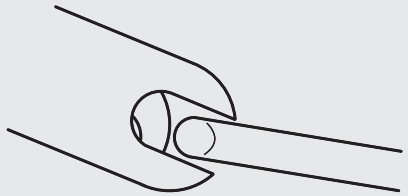

54G184

3) Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.

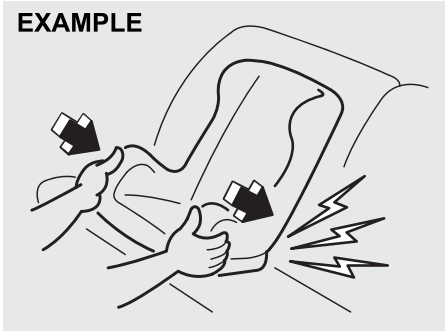


54G185

4) Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Make sure that they are securely latched by trying to move the child restraint system in all directions, especially forward.
5) Attach the top tether strap referring to "Installation of child restraint with top tether" section below.
   When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

NOTICE

When installing a child restraint system to the rear seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.

Installation of child restraint with top tether

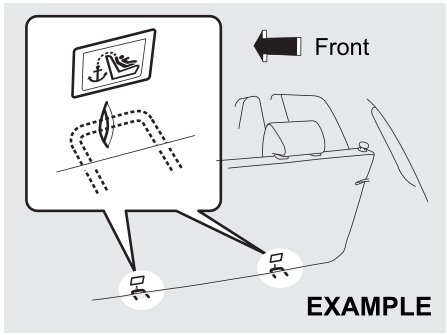


66RH145

Some child restraint systems require the use of a top tether strap. Top tether anchorage brackets are provided in your vehicle at the locations shown in the illustrations.
The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

1) Remove the luggage compartment cover (if equipped).
2) Secure the child restraint on the rear seat using the procedure described above for securing a restraint system that does not require a top tether strap.
3) Hook the top tether strap to the top tether anchorage bracket and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage bracket located directly behind the child restraint. Do not attach the top tether strap to the luggage restraint loops (if equipped).

⚠ WARNING

Do not attach the child restraint top tether strap to the luggage restraint loops (if equipped). Incorrectly attached top tether strap will reduce the intended effectiveness of the child restraint system.

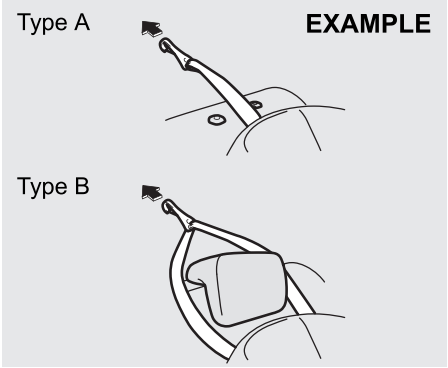

4) When routing the top tether strap, pass the top tether strap as shown in the illustration (Refer to “Head restraints” section for details on how to remove the head restraint).
5) Make sure that cargo does not interfere with routing of the top tether strap.

NOTICE
When installing a child restraint system to the rear seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.

NOTE:
Maruti Suzuki recommends use of Maruti Suzuki Genuine accessory of “Child seat, ISOFIX”.

Child Restraint System for India


Child Restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

MASS GROUP	Seating position (or other site)				
	Front Passenger	Rear Outboard	Rear Centre	Intermediate Outboard	Intermediate Centre
Group 0 Up to 10 kg	X	U	X	N.A.	N.A.
Group 0+ Up to 13 kg	X	U	X	N.A.	N.A.
Group I 9 to 18 kg	X	U	X	N.A.	N.A.
Group II 15 to 25 kg	X	U	X	N.A.	N.A.
Group III 22 to 36 kg	X	U	X	N.A.	N.A.

Key of letters to be inserted in the above table:
U =Suitable for 'universal' category restraints approved for use in this mass group.
X =Seat position not suitable for children in this mass group.
N.A = Seat position not available for children in this mass group.
NOTE: 'universal' is the category in the AIS 072.
: 'Outboard' indicates window side seat.

Seat belt pretensioner system

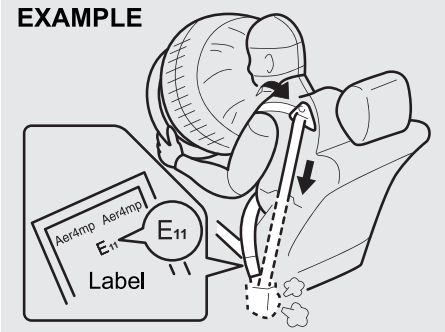

66RM02002

⚠ WARNING

This section describes your MARUTI SUZUKI vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front seating positions, make sure the label on the seat belt at the bottom part. If the letter "E11" appear as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.
Read this section and "Supplemental restraint system (air bags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (air bags). The crash sensors and the electronic controller of the air bag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal crash severe enough to trigger the air bags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental restraint system (air bags)" section in addition to this "Seat belt pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal crash. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a crash.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat adjustment" section and the instructions and precautions about the seat belts in this "Seat belts and child restraint systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the air bags will activate in severe frontal crashes. They are not designed to activate in rear impacts, roll-overs, or minor frontal crashes. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the air bags are activated), have authorised Maruti Suzuki workshop as soon as possible.

If the AIR BAG light on the instrument cluster does not blink or come on briefly when the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, stays on for more than 10 seconds, or comes on while driving, the pretensioner system or the air bag system may not work properly. Have both systems inspected by an authorised Maruti Suzuki workshop as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by an authorised Maruti Suzuki workshop who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, make sure that the battery is disconnected and the ignition switch has been in “LOCK” position or the ignition mode has been LOCK (OFF) for at least 90 seconds before performing any electrical service work on your vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your vehicle, ask your authorised Maruti Suzuki workshop body repair shop, or scrap yard for assistance.

Supplemental restraint system (Air bags)


⚠ WARNING

This section describes the protection provided by your vehicle's supplemental restraint system (air bags). Read and follow all instructions carefully to minimize your risk of severe injury or death in the event of a crash.

Your vehicle is equipped with a supplemental restraint system consisting of the following components in addition to a lap-shoulder belt at each seating position.

(1) Driver's front air bag module
(2) Front passenger's front air bag module
(3) Front seat belt pretensioners
(4) Air bag controller
(5) Forward crash sensor

EXAMPLE

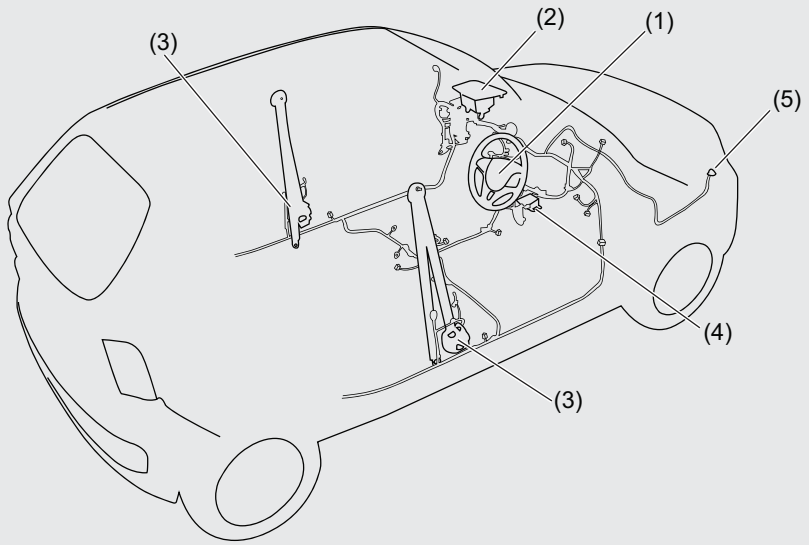

66RM02005

⚠ WARNING

An air bag supplements or adds to the crash protection offered by seat belts. The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.

"AIR BAG" light



63J030

If the AIR BAG light on the instrument cluster does not blink or come on when the ignition switch is first turned to "ON" position, or the ignition mode is first changed to ON, or AIR BAG light stays on, or comes on while driving, the air bag system (or the seat belt pretensioner system) may not work properly. Have the air bag system inspected by an authorised Maruti Suzuki workshop as soon as possible.

Air bag symbol meaning

EXAMPLE



72M00150

You may find this label on the sun visor.

⚠ WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Front air bags

EXAMPLE




68PH00247

Front air bags are designed to inflate in severe frontal crashes when the ignition switch is in "ON" position or the ignition mode is ON.


Front air bags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal crashes, since they would offer no protection in those types of accidents. Since an air bag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.
Therefore, an air bag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

Driver's front air bag

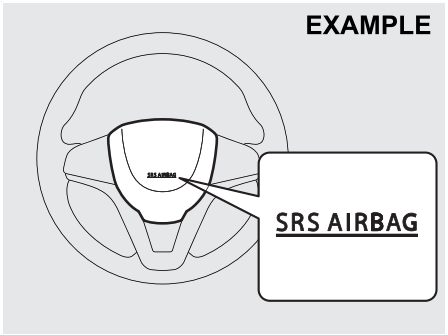

81P30640

Front passenger's front air bag

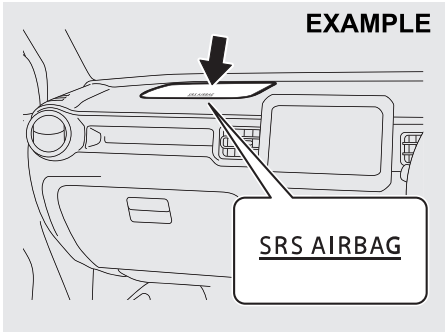

62R0135

The driver's front air bag is located behind the center pad of the steering wheel and the front passenger's front air bag is located behind the passenger's side of the dashboard.
The words "SRS AIRBAG" are molded into the air bag covers to identify the location of the air bags.




58MS030

⚠ WARNING

Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front air bag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating air bag.


Refer to "Seat belts and child restraint systems" section for details on securing your child.

Conditions of front air bags deployment (inflation)

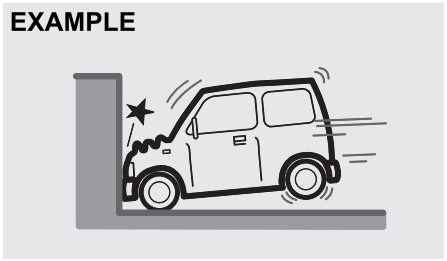

80J097

- Frontal crash with a fixed wall that does not move or deform in more than about 25 km/h.

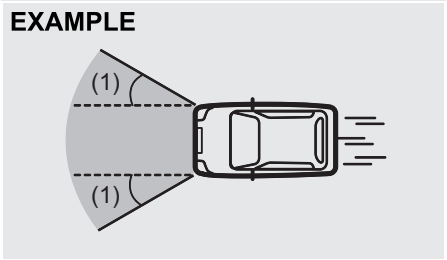

80J098E

- Crash such as above at an angle of about 30 degrees (1) or less from the front.

Conditions of front air bags may inflate
Receiving a strong impact to the lower body of your vehicle, the front air bags will inflate in many cases.


EXAMPLE



80J099

- Hitting a curb or medial strip.

EXAMPLE

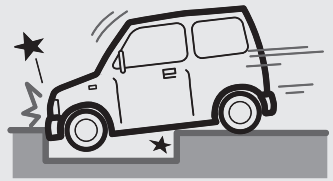

80J100E

- Falling into a deep hole or ditch.

EXAMPLE



80J101

- Landing hard or falling.

Front air bags might inflate in a strong impact
Front air bags do not inflate basically in rear collision, side collision or rollovers, etc., however, these might inflate in a strong impact.


EXAMPLE



80J120

- Crash from the rear.

EXAMPLE

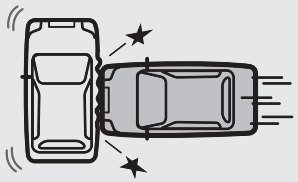

80J119

- Crash from the side.

EXAMPLE



80J110

- Vehicle rollover.

Front air bags may not inflate
The front air bags may not inflate when the impact is absorbed since the crash object moved, vehicle body deformed, or crash angle was greater than about 30 degrees from the front.


EXAMPLE



80J102

- Approximately 50 km/h or lower speed frontal crash to a stopped vehicle.


EXAMPLE

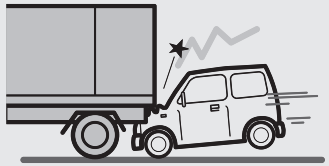

80J103

- Crash that the front of your vehicle goes under the bed of a truck etc.


EXAMPLE

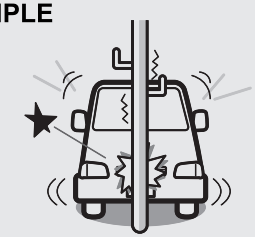

80J104

- Crash with a utility pole or stumpage.


EXAMPLE

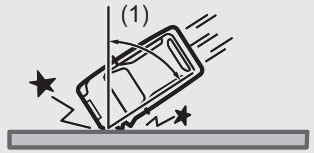

80J105E

- Crash with a fixed wall or guardrail at an angle of greater than about 30 degrees (1) from the front.


EXAMPLE

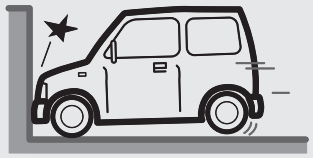

80J106

- Frontal crash with a fixed wall that does not move or deform in less than about 25 km/h.

EXAMPLE



80J107

- Crash angle is offset from the vehicle angle (offset crash).

How the system works

In a frontal crash, the crash sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal crash, the controller will trigger the inflators. The inflators inflate the appropriate air bags with nitrogen or argon gas. The inflated air bags provide a cushion for your head and upper body. The air bag inflates and deflates so quickly that you may not even realize that it has activated. The air bag will neither hinder your view nor make it harder to exit the vehicle.

Air bags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the air bag may irritate bare skin, such as the facial area against a front air bag. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some air bag components may be hot for a while after inflation.

A seat belt helps keep you in the proper position for maximum protection when an air bag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to “Seat adjustment” section and “Seat belts and child restraint systems” section in this section for details on proper seat and seat belt adjustments.



65D610

⚠ WARNING

- **The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard, or otherwise get too close to the dashboard. In these situations, the out-of-position occupant would be too close to an inflating air bag, and may suffer severe injury.**
- **Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the air bag and the driver or front passenger. These objects may interfere with air bag operation or may be propelled by the air bag in the event of a crash. Either of these conditions may cause severe injury.**

Even though your vehicle is moderately damaged by a crash, it may not be severe enough to trigger front air bags to inflate. If your vehicle sustains any front-end or side damage, have the air bag system inspected by an authorised Maruti Suzuki workshop to ensure that it works properly.

Your vehicle is equipped with a diagnostic module which records information about the air bag system if the air bags deploy in a crash. The module records information about overall system status, and which sensors activated the deployment.

Servicing the air bag system
If the air bags inflate, have the air bags and related components replaced by an authorised Maruti Suzuki workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the air bag controller could be damaged. If this happens, ask authorised Maruti Suzuki workshop to check the air bag system as soon as possible.

Special procedures are required for servicing or replacing an air bag. For that reason, only an authorised Maruti Suzuki workshop should be allowed to service or replace your air bags. Remind anyone who services your vehicle that it has air bags.

Service on or around air bag components or wiring must be performed only by an authorised Maruti Suzuki workshop. Improper service could result in unintended air bag deployment or could render the air bag inoperative. Either of these two conditions may result in severe injury.


To prevent damage or unintended inflation of the air bag system, make sure that the battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been LOCK (OFF) for at least 90 seconds before performing any electrical service work on your vehicle. Do not touch air bag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

Scrapping a vehicle that has an uninflated air bag can be hazardous. Ask your dealer, body repair shop or scrap yard for help with disposal.

Instrument cluster


(1) Speedometer
(2) Tachometer (if equipped)
(3) Information display
(4) Warning and indicator lights

With tachometer

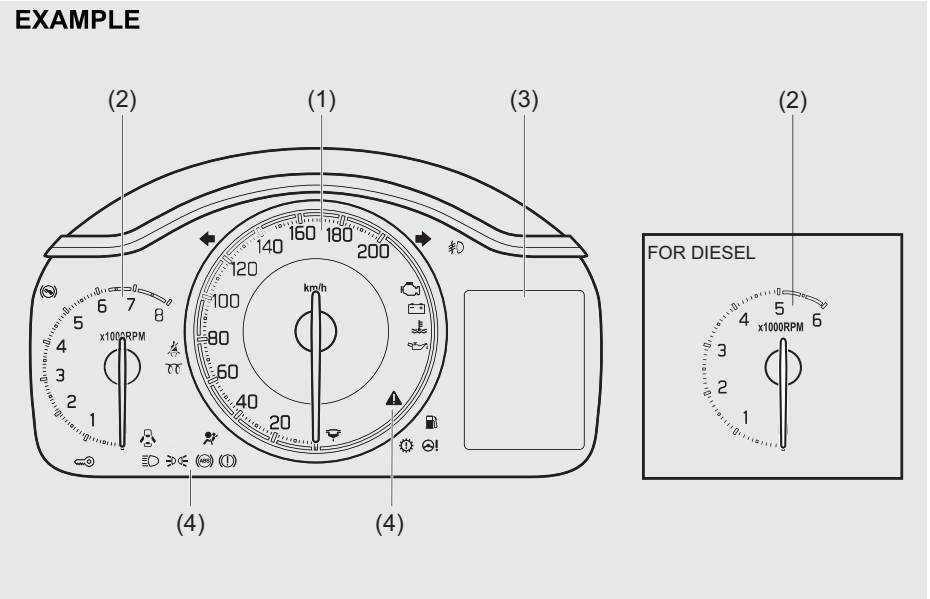

66RM02003

Without tachometer

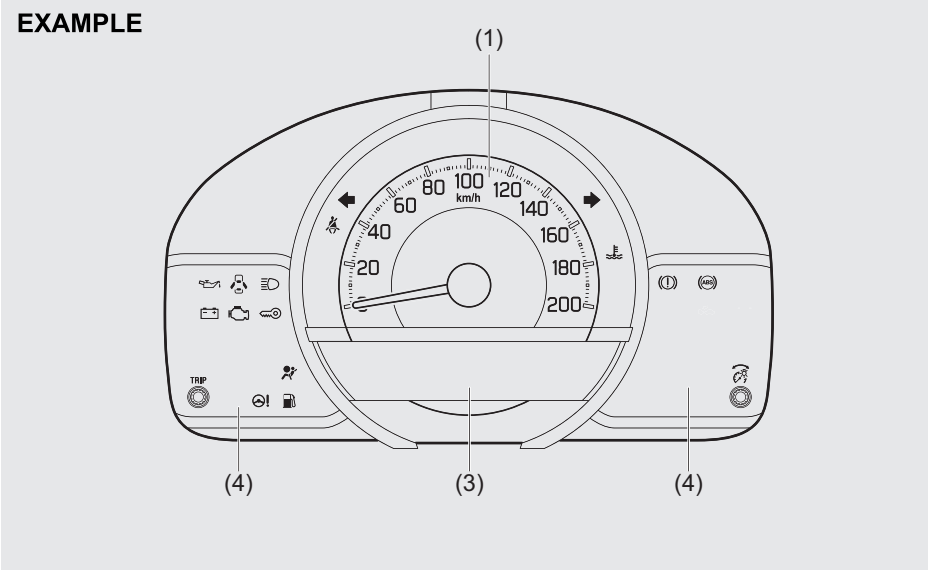

66RH098

Speedometer

The speedometer indicates vehicle speed.

Tachometer (if equipped)


The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result.
Keep the engine speed below the red zone even when downshifting to a lower gear position.
Refer to "Downshifting maximum allowable speeds" in the "OPERATING YOUR VEHICLE" section.


Fuel gauge

With tachometer

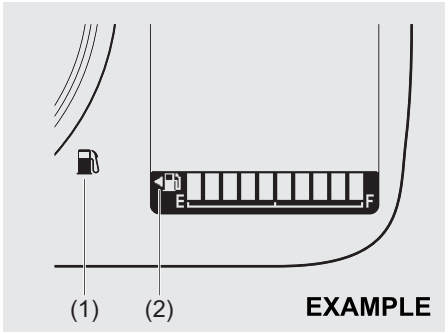

75RM248

Without tachometer

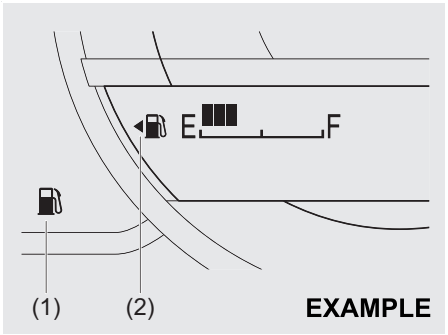

75RM249

When the ignition switch is in “ON” position or the ignition mode is ON, this gauge gives an approximate indication of the amount of fuel in the fuel tank. “F” stands for full and “E” stands for empty.

- If the indicator shows only one segment to “E”, refill the tank as soon as possible. If the last segment blinks, it means that the fuel is almost empty.

If the low fuel warning light (1) comes on, fill the fuel tank immediately.
Refer to “Low fuel warning light” in “Warning and indicator lights” in this section for details.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

Brightness control

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, the instrument cluster lights or pointer lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument cluster lights when the position lights or headlights are on.

You can change the brightness of the instrument cluster lights;

- For the instrument cluster with tachometer, regardless of whether the position lights or headlights are off or on.
- For the instrument cluster without tachometer, when the position lights and/or headlights are ON.


To switch the display indication to the brightness control, refer to “Information display” in this section.

⚠ WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.


With tachometer

EXAMPLE

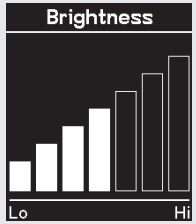

75RM208

EXAMPLE

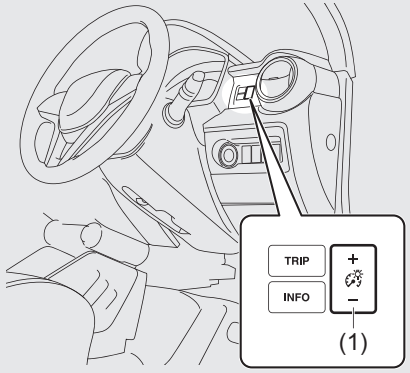

66RH114


To increase the brightness of the instrument panel lights, push "+" side of the brightness control switch (1). To change the brightness quickly, push and hold the switch.
To reduce the brightness of the instrument panel lights, push "–" side of the brightness control switch (1). To change the brightness quickly, push and hold the switch.

NOTE:
- *If you do not push the brightness control switch within several seconds of activating the brightness control, the brightness control display will be canceled automatically.*
- *When you reconnect the battery, the brightness of the instrument cluster lights will be reinitialized. Readjust the brightness according to your preference.*

NOTE:
If you select the maximum brightness level when the position lights or headlights are on, the following functions will be canceled.
- *The function which automatically dims the brightness of instrument cluster lights.*
- *The function which operates with the brightness control, except maximum brightness level.*


Without tachometer

EXAMPLE

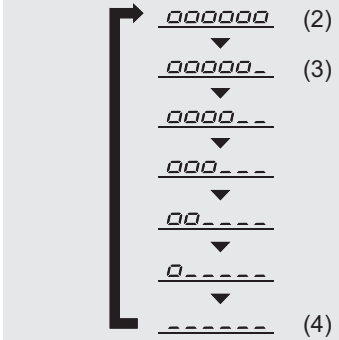

75RM404

(2) Brightest
(3) Initial setting
(4) Dimmest

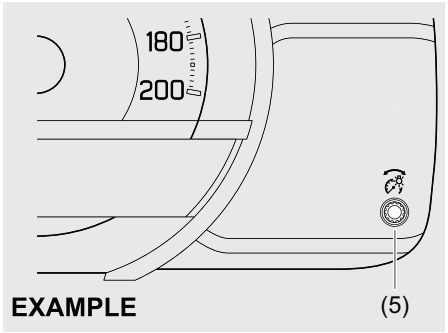

75RM266


To increase the brightness of the instrument panel lights, turn the brightness control knob (5) clockwise.
To reduce the brightness of the instrument panel lights, turn the brightness control knob (5) counterclockwise.

NOTE:
- *If you do not turn the brightness control knob within several seconds of activating the brightness control, the brightness control display will be canceled automatically.*
- *When you reconnect the battery, the brightness of the instrument cluster lights will be reinitialized. Readjust the brightness according to your preference.*

NOTE:
If you select the maximum brightness level when the position lights or headlights are on, the following functions will be canceled.
- *The function which automatically dims the brightness of instrument cluster lights.*
- *The function which operates with the brightness control, except maximum brightness level.*

Information display (instrument cluster with tachometer)


The information display is shown when the ignition switch is in “ON” position or the ignition mode is ON.

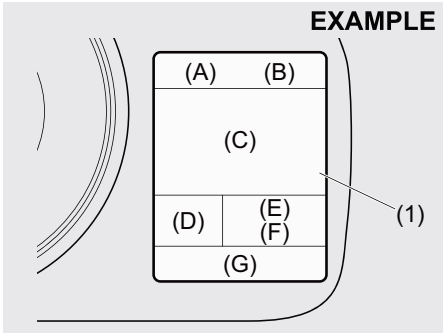

75RM042

(1) Information display

EXAMPLE

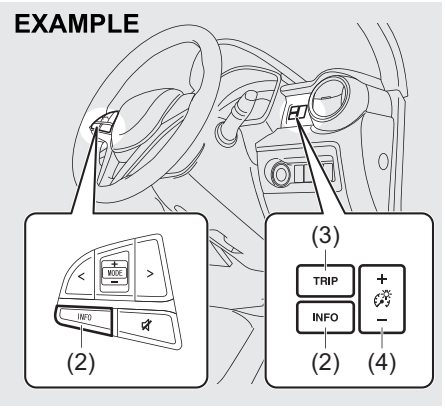

66RH115

(2) Information switch
(3) Trip meter switch
(4) Brightness control switch

The information display shows the following information.

Display (A)
Clock

Display (B)
Thermometer

Display (C)
Warning and indicator messages / Fuel consumption / Driving range / Average speed / Driving time

Display (D)
Gear position
(for Auto Gear Shift models) / Gearshift indicator (if equipped)

Display (E)
Trip meter

Display (F)
Odometer

Display (G)
Fuel gauge

EXAMPLE



81P31150

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, the message shown in the above illustration will appear on the display for several seconds. Some warning and indicator messages may appear on the display when the ignition switch is in “ACC” or “LOCK” position, or the ignition mode is ACC or LOCK (OFF).

Clock
The display (A) shows the time.

To set the clock, follow “Setting mode” instructions in this section.

Thermometer
The display (B) shows the thermometer.

The thermometer indicates the outside temperature.




75RM210

If the outside temperature nears freezing, the message shown in the above illustration will appear on the display.

NOTE:
- *The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.*

Fuel consumption / Driving range / Average speed / Driving time

When there are no warning or indicator messages on the display (C), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time or no indication.

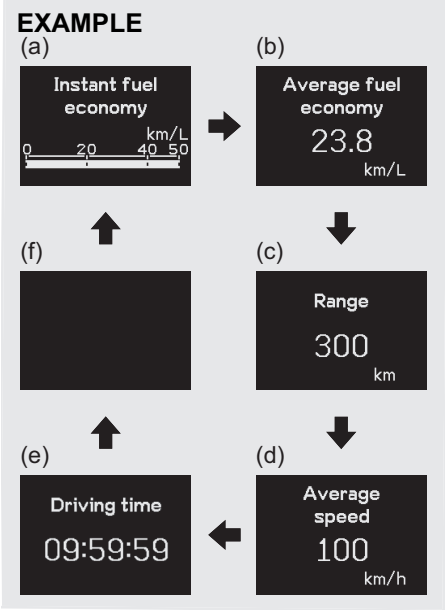

66RH162

(a) Instantaneous fuel consumption
(b) Average fuel consumption
(c) Driving range
(d) Average speed
(e) Driving time
(f) No indication

To switch the display indication, push the information switch (2) quickly.

NOTE:
The value of fuel consumption, driving range and average speed shown on the display are affected by the following conditions;
- *Road condition*
- *Surrounding traffic condition*
- *Driving condition*
- *Vehicle condition*
- *A malfunction which causes the malfunction indicator light to come on or blink*

Instantaneous fuel consumption
The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

NOTE:
- *The display does not show the bar graph unless the vehicle is moving.*
- *Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L, MPG (UK) or MPG (US).*
- *The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.*
  - *For L/100km setting: 30*
  - *For km/L setting: 50*
  - *For MPG (UK) setting: 80*
  - *For MPG (US) setting: 60*
- *The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.*
- *The display shows estimated values. Indications may not be the same as actual values.*

Average fuel consumption
If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON. Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.

NOTE:
When you reconnect the negative (–) terminal to the battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select when the value of average fuel consumption is reset from among the following three methods;
- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the information switch (2) when the display indicates the average fuel consumption.

To change when the value of average fuel consumption is reset, refer to “Setting mode” in this section.

NOTE:
If you add only a small amount of fuel when you select “Reset after refuel”, the average fuel consumption value may not be reset.

Driving range
If you selected driving range the last time you drove the vehicle, the display indicates “**---**” for a few seconds and then indicates the current driving range when the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON.

The driving range shown in the display is the approximate distance you can drive until the fuel gauge indicates “E”, based on current driving conditions.

When the low fuel warning light comes on, the display “**---**” will appear.
If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

As the driving range after refueling is calculated based on the most recent driving condition, the value is different each time you refuel.

NOTE:
- *If you refuel when the ignition switch is in “ON” position or the ignition mode is ON, the driving range may not indicate the correct value.*
- *When you reconnect the negative (–) terminal to the battery, the value of driving range will be shown after driving for a period of time.*

Average Speed
If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON. Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.

To reset the value of average speed, push and hold the information switch (2) for a while when the display indicates an average speed. The display shows “**---**” and then indicates a new average speed after driving for a short time.

NOTE:
When you reconnect the negative (–) terminal to the battery, the value of average speed will be shown after driving for a period of time.

Driving time
The display shows the total amount of driving time since the indication was reset.
- To reset the driving time to zero, push and hold the information switch (2) for a while when the display shows the driving time.

NOTE:
When you reset the indication or reconnect the negative (–) terminal to the battery, the driving time will be shown after driving for a while.

Gear position / Gearshift indicator
The display (D) shows some of the following indications.



66RH116

(5) Gear position
(6) Manual mode indicator
(7) Drive mode indicator

Gear position
(for Auto Gear Shift models)
The display shows the current gear position (5).

NOTE:
For Auto Gear Shift models, when the gearshift lever position and the gear position indication in the information display are unmatched, the indication will blink and the interior buzzer will sound. Refer to "Auto Gear Shift" in the "OPERATING YOUR VEHICLE" section for details.

Manual mode indicator
(for Auto Gear Shift models)
When you are using the manual mode, the display shows the manual mode indicator (6).

NOTE:
For Auto Gear Shift models, the manual mode indicator will only appear when the gearshift lever is in "M".

Drive mode indicator
(for Auto Gear Shift models)
When the gearshift lever is in "D", the display shows the drive mode indicator (7).

For details on how to use the transaxle, refer to "Using transaxle" in the "OPERATING YOUR VEHICLE" section.

Gearshift indicator (if equipped)
Refer to "Gearshift indicator" in the "OPERATING YOUR VEHICLE" section.

Trip meter
The display (E) shows the trip meter.

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.
You can use trip meter A or trip meter B independently.

To reset the trip meter to zero, push and hold the trip meter switch (3) for a while.

NOTE:
The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Odometer
The display (F) shows the odometer.

The odometer records the total distance the vehicle has been driven.

NOTICE
Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Fuel gauge
The display (G) shows the fuel gauge.
Refer to "Fuel gauge" in this section.

Setting mode

When the ignition switch is in “ON” position or the ignition mode is ON and the vehicle is stationary, you can enter the setting mode of the information display by pushing and holding the information switch (2) for more than 3 seconds.

- To select the setting that you want to change, push the brightness control switch (4) up or down.
- To change the setting, push the information switch (2).
- To exit the setting mode, select “Back” and push the information switch (2).

EXAMPLE



66RH156

NOTE:
The currently selected setting item is surrounded by a frame.

NOTE:
- *If you push and hold the information switch (2) to enter the setting mode when the display (C) shows average fuel consumption, average speed or driving time, the value will be reset simultaneously. If you do not want to reset the value, push the information switch quickly to switch the indication of the display.*
- *If you turn the ignition switch, press the engine switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.*

Distance unit
(Odometer / trip meter distance unit setting)
You can change the units in which odometer / trip meter / driving range distance is displayed.

Fuel economy
(Fuel consumption unit setting)
You can change the units that fuel consumption is displayed in.

Language
You can change the language of the information display.

Fuel reset
(Average fuel consumption reset setting)
You can change when the value of average fuel consumption is reset.

Temperature (Temperature unit setting)
You can change the units that temperature is displayed in.

NOTE:
When you change the units that temperature is displayed in, the automatic heating and air conditioning system (if equipped) temperature display units will be changed automatically.

Clock setting (Adjusting the clock)
- To change the hour indication, push the brightness control switch (4) up or down repeatedly when the hour indication appears as reversed color. To change the hour indication quickly, push and hold the brightness control switch (4). To set the hour indication, push the information switch (2) and the minute indication appears as reversed color.
- To change the minute indication, push the brightness control switch (4) up or down repeatedly when the minute indication appears as reversed color. To change the minute indication quickly, push and hold the brightness control switch (4). To set the minute indication, push the information switch (2).

You can also switch the time indication between 12-hour and 24-hour format.

Door lock (Door lock setting)

- **Door unlock**
  – All Doors:
  Unlock all doors by turning the key, or operating the keyless entry system transmitter, keyless push start system remote controller or request switch once.
  – Driver Door:
  Unlock all doors by turning the key, or operating the keyless entry system transmitter, keyless push start system remote controller or request switch twice (default setting).
- **Auto lock**
  – Manual Lock:
  Disable the automatic door locking function.
  – Speed Syncro:
  Lock all doors when the vehicle speed reaches 15 km/h (default setting).
- **Auto unlock**
  – Syncro Off:
  Disable the automatic door unlocking function (default setting for the vehicle with the keyless push start system).
  – IG-OFF Sync:
  Unlock all doors when the key is pulled out from the ignition switch or the engine switch is pressed to change the ignition mode to LOCK (OFF) (default setting for the vehicle without the keyless push start system).
- **Alarm**
  You can turn off or on the siren sound when the door(s) is(are) locked or unlocked.

Lights (Light setting)
Lane change (Turn signal lights setting)
The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever immediately after moving it.

Antitheft
(Shock sensor system setting)
You can change the on/off of the shock sensor (default setting is off state).

(Shock sensor P setting)
You can adjust the pre-warning sensitivity of shock sensor (default setting level is 14).

(Shock sensor F setting)
You can adjust the full blast warning sensitivity of shock sensor (default setting level is 9).

Default (initialization setting)
If you select “YES” and push the information switch (2), all settings will be reinitialized.

Warning and indicator messages

The display shows warning and indicator messages to let you know about certain vehicle problems.
A tone may also sound to alert you.

If warning and indicator messages appear on the display, follow the messages.

Master warning indicator light



80P0382

When the display shows warning and indicator messages, the master warning indicator light may also blink.

NOTE:

- *When the problem that causes a message to appear is corrected, the message will disappear.*
- *If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.*
- *When you push and hold the information switch (2) for about 2 seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is not corrected, the message will appear again after 5 seconds.*

Warning and indicator messages

All model

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 75RM407	Blinks (only while vehicle is in motion) 	Beep (one time from interior buzzer; only while vehicle is in motion)	A door or tailgate is not properly closed. If in driving, stop the vehicle in a safe place and close the door or tailgate properly. (#1)
 75RM268	Blinks 	Continuous beep (from interior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.
 61MM0A172	Blinks 	Continuous beep (from interior buzzer)	The headlights and/or the position lights are left on. Turn them off.

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 75RM213	Off	Beep (one time from interior buzzer)	Fuel is low. Refill it immediately. (#1)
 66RM02004	Off	Off	The road may be icy. Drive very carefully. (#1)

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Vehicle with keyless push start system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 61MM0A163	Off	Off	This message is displayed when the ACC position is selected as the ignition mode. (#1)
 75RM214	Off	Off	The brake pedal (for Auto Gear Shift models) or the clutch pedal (for manual transaxle models) is depressed. Press the engine switch to start the engine.
 61MM0A168	Blinks 	Beep (one time from interior buzzer)	There is a problem with the steering lock system. Have your vehicle inspected by an authorised Maruti Suzuki workshop.

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 75RM215	Blinks 	Beep (one time from interior buzzer)	There is a problem with the keyless push start system. Also, the vehicle battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle battery, have your vehicle inspected by an authorised Maruti Suzuki workshop.
 75RM216  75RM217	Blinks 	By certain conditions, some kind of sound you will hear from interior and/or exterior of the vehicle.	The remote controller may be outside the vehicle or its battery may have become discharged. Locate the remote controller or touch the engine switch with the remote controller. If the message still appears, replace the remote controller battery.
 75RM218	Off	Off	This message is displayed when the ON position is selected as the ignition mode. (#1)


(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 75RM219	Blinks 	Beep (one time from interior buzzer)	The steering lock is not disengaged. While lightly turning the steering wheel in both directions, press the engine switch again.
 75RM220	Blinks 	Beep (one time from interior buzzer)	The remote controller battery is about to become flat. Replace the battery. (#1)
Manual transaxle  61MM0A166	Off	Off	The engine switch is pressed without depressing the brake and clutch pedals. Try again as instructed by the message.

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.


Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
Auto Gear Shift  75RM322	Off	Off	The engine switch is pressed with the gearshift lever in a position other than “N” and depressing the brake pedal. Try again as instructed by message.

Information display (Instrument cluster without tachometer)

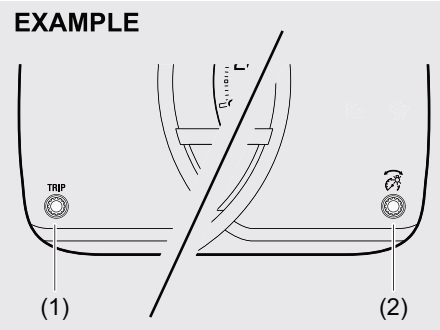

75RM250

(1) Trip meter selector knob
(2) Indicator selector knob

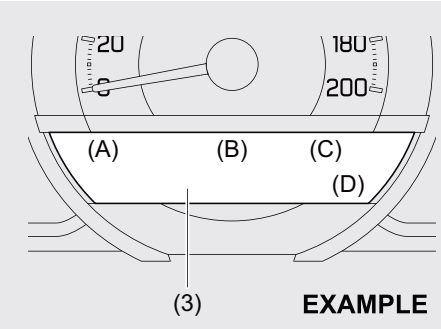

66RH117

(3) Information display

When the ignition switch is in “ON” position, the information display shows the following information.

Display (A)
Fuel gauge

Display (B)
Gearshift indicator

Display (C)
Trip meter / Odometer / Fuel consumption / Driving range

Display (D)
Clock

Fuel gauge
The display (A) shows the fuel gauge.

Refer to “Fuel gauge” in this section.


Gearshift indicator
The display (B) shows the gearshift indicator.

Refer to “Gearshift indicator” in the “OPERATING YOUR VEHICLE” section.

Trip meter / Odometer / Fuel consumption / Driving range

The display (C) shows one of the following indications, trip meter A, trip meter B, odometer, instantaneous fuel consumption, average fuel consumption or driving range.

To switch the display indication (C), push the trip meter selector knob (1) or the indicator selector knob (2) quickly.

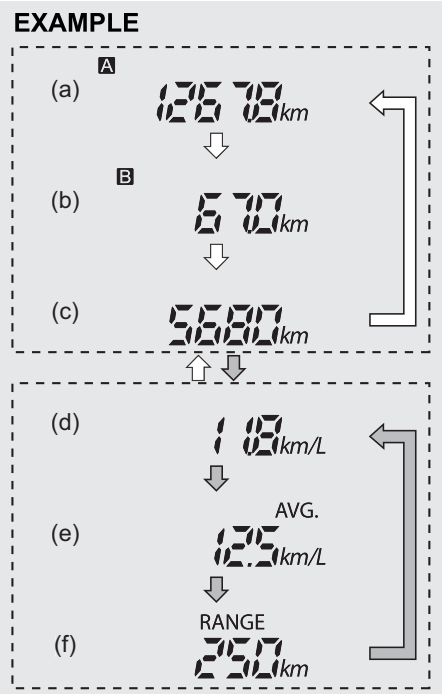

⇧⇩	Push the trip meter selector knob (1).
⇧⇩	Push the indicator selector knob (2).

(a) Trip meter A
(b) Trip meter B
(c) Odometer
(d) Instantaneous fuel consumption
(e) Average fuel consumption
(f) Driving range

⚠ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.
Do not attempt to adjust the display while driving.

NOTE:
- *Indications will change when you push and release a knob.*
- *The display shows estimated values. Indications may not be the same as actual values.*

Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.
You can use the trip meter A or trip meter B independently.

To reset the trip meter to zero, push and hold the trip meter selector knob (1) for a while when the display shows the trip meter.

NOTE:
The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Odometer
The odometer records the total distance the vehicle has been driven.

NOTICE
Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Instantaneous fuel consumption
The display shows the value of instantaneous fuel consumption only when the vehicle is moving.


NOTE:
- *The display does not show the value unless the vehicle is moving.*
- *Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km or km/L.*
- *The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.*
  – For L/100km setting: 30
  – For km/L setting: 50
- *The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.*
- *The display shows estimated values. Indications may not be the same as actual values.*
- *For "L/100km" or "km/L" setting, you can change the units that instantaneous fuel consumption is displayed in. Refer to "Average fuel consumption" in this section.*

Average fuel consumption
If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is turned to "ON" position. Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption which includes average fuel consumption during previous driving.

To reset the average fuel consumption to zero, push and hold the indicator selector knob (2) for a while when the display shows the average fuel consumption.

NOTE:
When you reset the indication or reconnect the negative (–) terminal to the battery, the value of average fuel consumption will be shown after driving for a while.

(For "L/100km" or "km/L" setting)
To change the unit of average fuel consumption, while pushing and holding the trip meter selector knob (1), turn the indicator selector knob (2).

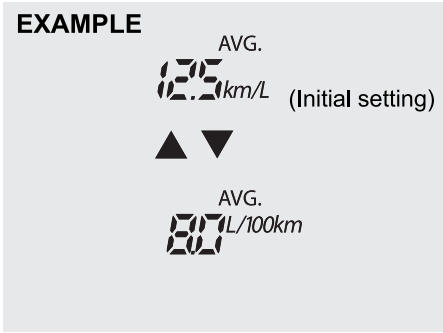

68PH02207

NOTE:
- *When you change the units that average fuel consumption is displayed in, the instantaneous fuel consumption units will be changed automatically.*
- *When you reconnect the negative (–) terminal to the battery, the unit of the average fuel consumption will be reinitialized. Change the unit again to your preference.*

Driving range
If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned to "ON" position.

The driving range shown in the display is the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions.

When the low fuel warning light comes on, the display "---" will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

As the driving range after refueling is calculated based on the most recent driving condition, the value is different each time you refuel.

NOTE:
- *If you refuel when the ignition switch is in "ON" position, the driving range may not indicate the correct value.*
- *When you reconnect the negative (–) terminal to the battery, the value of driving range will be shown after driving for a while.*

Clock
The display (D) shows the time.



To change the time indication:
1) Push the trip meter selector knob (1) and the indicator selector knob (2) together.
2) To change the hour indication, turn the indicator selector knob (2) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (2). To set the hour indication, push the indicator selector knob (2) and the minute indication will blink.
3) To change the minute indication, turn the indicator selector knob (2) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (2). To set the minute indication, push the indicator selector knob (2).

⚠ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.
Do not attempt to adjust the display while driving.

NOTE:
When you reconnect the negative (–) terminal to the battery, the clock indication will be reinitialized. Change the indication again to your preference.

Setting mode
In the setting mode, you can set up the following functions.

Indication	Functions
	Time indication of clock “CL”
	Central door locking system “d1”
	Automatic door locking function “d2”
	Automatic door unlocking function “d3”
	Additional flashes of the turn signal “L2”
	Initialization setting “dE-on”
	Exit the setting mode “End”

⇕	Turn the indicator selector knob (2).
⇨	Push the indicator selector knob (2).

NOTE:
Depending on vehicle's specifications, some items may not be displayed.

How to operate the setting mode:
1) When the ignition switch is in "ON" position and the vehicle is stationary, push the trip meter selector knob (1) to switch the information display indication (C) to the odometer.
2) Push and hold the indicator selector knob (2) until the display shows "CLOCK".
3) Turn and/or push the indicator selector knob (2) to select a function that you want to set up according to the above chart.
4) Turn and/or push the indicator selector knob (2) to register settings of the following functions.

Time indication of clock "CL"
- CL-12h: 12-hour format (default setting)
- CL-24h: 24-hour format

Central door locking system "d1"
- d1-SL1: Unlock all doors by turning the key once
- d1-SL2: Unlock all doors by turning the key twice (default setting)

Automatic door locking function "d2"
- d2-SL1: Disable the automatic door locking function
- d2-SL2: Lock all doors when the vehicle speed reaches 15 km/h (default setting)

Automatic door unlocking function "d3"
- d3-SL1: Disable the automatic door unlocking function
- d3-SL2: Unlock all doors when the key is pulled out from the ignition switch (default setting)

Additional flashes of the turn signal "L2"
- L2-SL1: Turn signal flashes three times after the turn signal lever is returned (default setting)
- L2-SL2: Disable the additional flashes of turn signal

Initialization setting "dE-on"
- dE-on: Initialize all settings

EXAMPLE



75RM229

NOTE:
- *As shown in the above illustration, "SEL" indicates on the display of currently setting item.*
- *To go back to the higher level display during operation, turn the indicator selector knob (2) to display "BACK" or "-BAC" and then push the indicator selector knob (2).*

5) To exit the setting mode, switch the display to show "End" and then push the indicator selector knob (2).

Warning and indicator lights

NOTE:
If warning and indicator lights blink or come on, the corresponding messages may be shown on the information display.

Brake system warning light



82K170

Three different types of operations exist depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON.
- The light comes on when the parking brake is engaged with the ignition switch in "ON" position or the ignition mode is ON.
- The light comes on under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system.
If this happens:

1) Pull off the road and stop carefully.

⚠ WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

2) Test the brakes by carefully starting and stopping the vehicle on the shoulder of the road.
3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest dealer for repairs or tow the vehicle to the nearest dealer for repairs.

⚠ WARNING

If any of the following conditions occur, you should immediately ask your authorised Maruti Suzuki workshop to inspect the brake system.

- **If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.**
- **If the brake system warning light does not come on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON.**
- **If the brake system warning light comes on at any time during vehicle operation.**

NOTE:
Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:
Parking brake reminder buzzer
A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Anti-lock brake system (ABS) warning light



65D529

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.
If the light stays on or comes on when driving, there may be something wrong with the ABS.

If this happens:
1) Pull off the road and stop carefully.
2) Turn the ignition switch to “LOCK” or change the ignition mode to LOCK (OFF) by pressing the engine switch and then start the engine again.


If the warning light comes on briefly and then turns off, the system is normal. If the warning light still stays on, something is wrong with the system.

If the light and the brake system warning light stay on or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and the anti-lock function of the ABS system.

If one of the above occurs, have the system inspected by your authorised Maruti Suzuki workshop.
If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to “Anti-lock brake system (ABS)” in the “OPERATING YOUR VEHICLE” section.

Oil pressure light

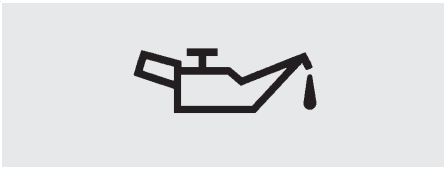


50G051

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.
Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by your authorised Maruti Suzuki workshop before you drive the vehicle again.

NOTICE
• **If you operate the engine with this light on, severe engine damage can result.** • **Do not rely on the oil pressure light to indicate the need to add oil. Periodically check the engine oil level.**

Charging light

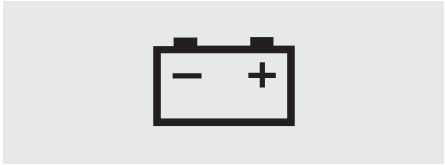

50G052

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by your authorised Maruti Suzuki workshop.

Driver's seat belt reminder light



60G049

When the driver does not buckle his or her seat belt, this light will come on and/or blink.
For details of the seat belt reminder, refer to "Seat belts and child restraint systems" in this section.

"AIR BAG" light



63J030


When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light blinks or comes on for several seconds so you can check that the light is working.

The light will come on and stay on if there is a problem in the air bag system or the seat belt pretensioner system.

⚠ WARNING

If AIR BAG light does not blink or come on briefly when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, stays on for more than 10 seconds, or comes on while driving, the air bag system or the seat belt pretensioner system may not work properly. Have both systems inspected by an authorised Maruti Suzuki workshop.

Malfunction indicator light

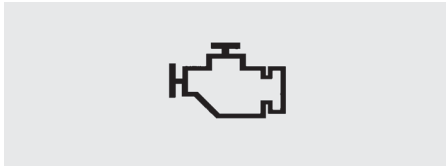

65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument cluster to indicate when it is necessary to have the emission control system serviced. When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on. When the engine is started, the light goes out.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.
Bring the vehicle to your authorised Maruti Suzuki workshop to have the damage fixed.

Also, if this light comes on when the engine is running, there is a problem with the Auto Gear Shift system. Ask your authorised Maruti Suzuki workshop to have the system inspected.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Transaxle warning light (if equipped)



80J219

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on for several seconds so you can check that the light is working.
If this light comes on when the engine is running, there is a problem with the Auto Gear Shift system. Ask your authorised Maruti Suzuki workshop to have the system inspected.

NOTE:
If the Auto Gear Shift clutch temperature becomes too high, this light will blink. Stop the vehicle in a safe place and let the system cool down.

Immobilizer / keyless push start system warning light



80JM122

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

If this light stays on, there is a problem with the system or the steering lock cannot be released. If this happens, press the engine switch, turning the steering wheel to the right or left. If this light still stays on, ask your authorised Maruti Suzuki workshop to have the system inspected.

Open door warning light



54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

Low fuel warning light



54G343

If this light comes on, fill the fuel tank immediately.

When this light comes on, a ding sounds once to remind you to fill the fuel.
If you do not fill the fuel, a ding sounds every time when the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON.

NOTE:
The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

Electric power steering light



79J039

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on. When the engine is started, the light goes out.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by your authorised Maruti Suzuki workshop.

NOTE:
The following steering wheel operations may gradually take more effort while parking or driving at a very low speed. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent it from overheating.

- *The steering wheel is operated very often.*
- *The steering wheel is kept in a fully turned position for a long while.*

When the power steering control system cools down, the power steering system will return to its original condition.
However, repeating these operations could cause damage to the power steering system.

NOTE:
If the power steering system does not work properly, it will require greater effort to steer, but you still will be able to steer.

NOTE:
If the steering is operated, you may hear noise caused by electric power steering operation. This is normal and indicates that the power steering system works properly.

Engine coolant temperature warning light



68PH00274

When the ignition switch is turned to the “ON” position or the engine switch is pressed to change the ignition mode “ON”, this light comes on briefly so you can check that the light is working.

This indicator has two following functions.

Low engine coolant temperature light (Blue color) - For petrol engine model

This light stays on while the engine is still cold and goes off when the engine has warmed up.
If this light blinks, there is a problem with the system. Have your vehicle inspected by your authorised Maruti Suzuki workshop.

High engine coolant temperature warning light (Red color)

If this light blinks while driving, it means the engine is running hot. Avoid driving conditions that may lead to actual overheating. If the light stays on without blinking, then the engine is overheating. Follow the instruc-

tions in the “Engine trouble: Overheating” of “EMERGENCY SERVICE” section.

NOTICE
Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.


Front fog light indicator light (if equipped)



82PH045

The front fog light indicator light comes on when the front fog light operates.


Turn signal indicators

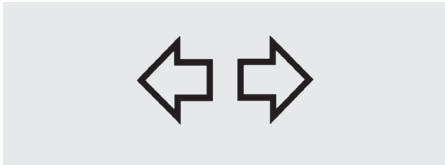

50G055

When you turn on the left or right turn signals, the corresponding green arrow on the instrument cluster will flash along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will flash along with all of the turn signal lights.


Main beam (high beam) indicator light

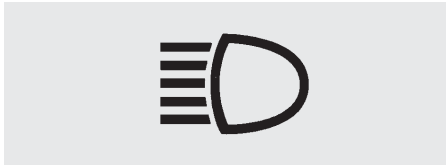

50G056

This indicator comes on when headlight main beams (high beams) are turned on.

Illumination indicator light

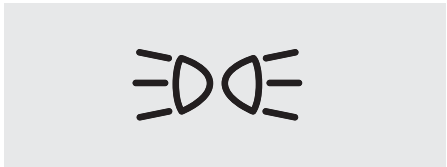

64J045

This indicator light comes on while the position lights, tail light and/or the headlights are on.

Glow plug indicator light (For diesel engine model)



60A543

If the coolant temperature is cool enough, this light comes on when the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON and goes out when the glow plug is heated enough for engine starting.

Fuel filter warning light (For diesel engine model)



60A541

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on for several seconds so you can check that the light is working.
If the light comes on when driving, it is possible that water may be in the fuel filter.

Drain water as soon as possible. Have your vehicle inspected by an authorised Maruti Suzuki workshop.

Depress brake pedal indicator (if equipped)



76MH0A047

Refer to “Auto Gear Shift” in the “OPERATING YOUR VEHICLE” section for details.

Master warning indicator light




80P0382

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the information display shows warning and indicator messages, this indicator light may also blink.
For details, refer to “Information display (instrument cluster with tachometer)” in this section.

Lighting control lever

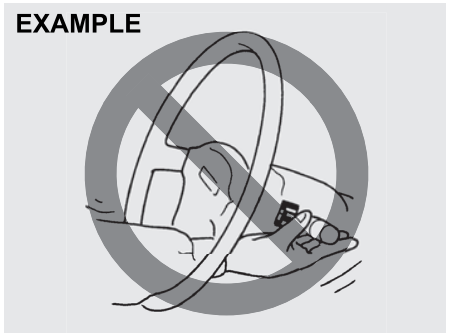


65D611

⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Lighting operation

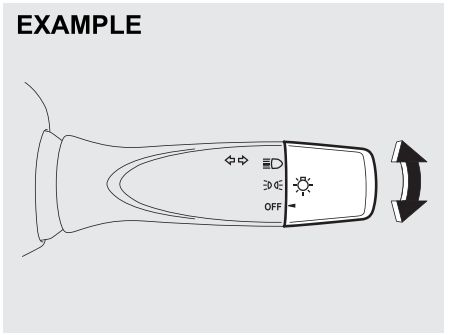

66RH032


To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

OFF
All lights are off.

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

Front position lights, tail lights, license plate light, instrument lights and headlights are on.

EXAMPLE

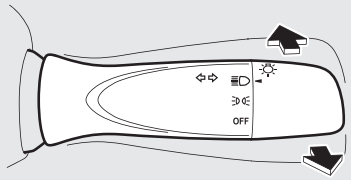

66RH033

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

NOTICE
Do not leave the headlamp ON in any position when the engine is not running, or the battery will discharge rapidly.

Light reminder buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:
The headlights and/or position lights are on even after the ignition switch is turned off, or the engine switch is pressed to change the ignition mode to LOCK (OFF).

The buzzer stops sounding when you turn off the headlights and position lights.

NOTE:
A message is indicated on the information display in the instrument cluster with tachometer while the buzzer is sounding.

Daytime running light (D.R.L.) system (if equipped)


When the engine is started, this system turns on the daytime running lights.

Conditions for D.R.L. system operation
1) The engine is running.
2) Headlights and front fog light (if equipped) are off.

NOTE:
Brightness of the daytime running lights is different from the brightness of the position lights, but it is not a malfunction.

Front fog light switch (if equipped)

EXAMPLE

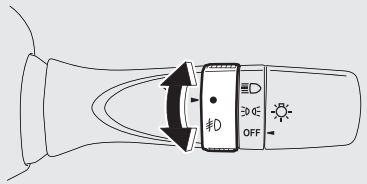


66RH034

To turn the front fog light on, twist the knob as shown in the illustration with the position lights, tail lights and/or the headlights are on. When the front fog light is on, an indicator light on the instrument cluster will come on.

NOTE:
In some countries, the lighting operation may be different from the above description according to local regulations.

Headlight leveling switch

EXAMPLE

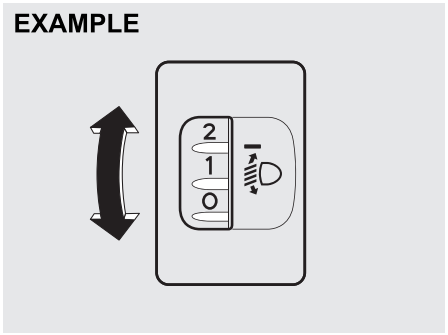


75RM008

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart below shows the appropriate switch position for different vehicle load conditions.

Vehicle Load Condition	Switch Position
Driver only	0
Driver + 1 passenger (in front seat)	0
Driver + 4 passengers, no cargo	1
Driver + 4 passengers, cargo added	2
Driver + full cargo	3

Turn signal control lever

EXAMPLE

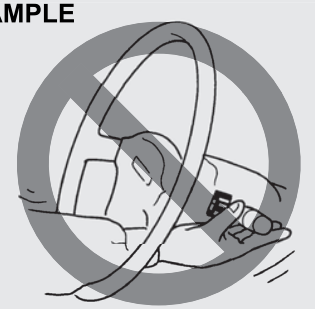

65D611

⚠ WARNING


To avoid possible injury, do not operate controls by reaching through the steering wheel.

Turn signal operation

With the ignition switch in “ON” position or the ignition mode ON, move the lever upward or downward to activate the left or right turn signals respectively.

Normal turn signal

EXAMPLE

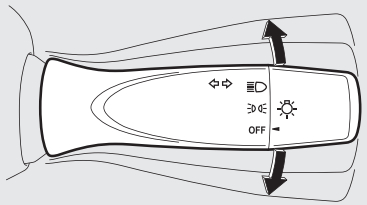


66RH035

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

Lane change signal

EXAMPLE

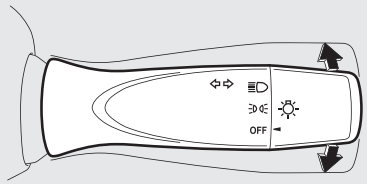

66RH036

Move the lever partway upward or downward to turn left or right and hold the lever in the moved position.

- The turn signal and its indicator flash while the lever is held at the moved position.


The turn signal and its indicator flash 3 times even if you return the lever immediately after moving it.

NOTE:
The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to “Information display” in this section.

NOTE:
You can customize the setting for the number of flashing times of the turn signal and its indicator (1 to 4 times). Please ask an authorised Maruti Suzuki workshop for the customization.

Hazard warning switch

EXAMPLE

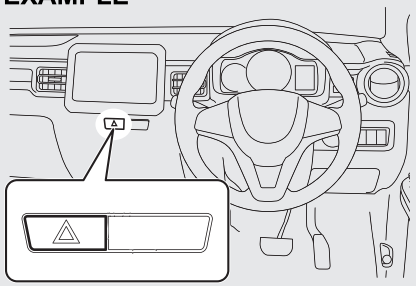


62R0138

Push in the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.
Use the hazard warning lights to warn other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

Windshield wiper and washer lever

EXAMPLE

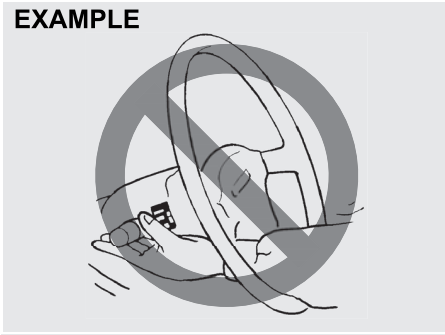

57L21128

⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Wiper and washer operation

When the ignition switch is in “ON” position or the ignition mode is ON, you can use the wiper/washer lever or switch (if equipped).


When the wipers are under heavy load such as covered by snow, the breaker will be activated and the wipers will stop operating to protect the wiper motor from overheating.
If the wiper stops during operation, do the following methods.

1) Stop the vehicle in a safe place, and turn the engine off.
2) Move the wiper lever and switch to “OFF” position.
3) Remove obstacles such as snow on the wipers.
4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and the wipers will be able to use.

If you cannot use the wipers after a while, there may be another problem. Ask your authorised Maruti Suzuki workshop to have the wipers inspected.

Windshield wipers

EXAMPLE

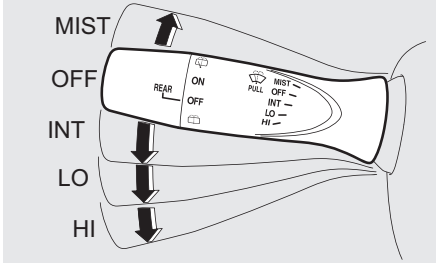


66RH037

To turn the windshield wipers on, move the lever down to one of the three operating positions. In “INT” position, the wipers operate intermittently. The “INT” position is very convenient for driving in mist or light rain. In “LO” position, the wipers operate at a steady low speed. In “HI” position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to “OFF” position.

Move the lever up and hold it to “MIST” position, the windshield wipers will turn on continuously at low speed.

Windshield washer

EXAMPLE

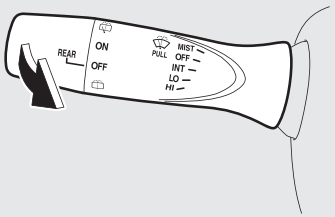

66RH038

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and your vehicle is equipped with “INT” position.

⚠ WARNING

- **To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.**
- **Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle’s paint.**


NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- **Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.**
- **Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.**
- **Clear ice or packed snow from the wiper blades before using the wipers.**
- **Check the washer fluid level regularly. Make sure it often when the weather is bad.**
- **Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.**

Rear window wiper/washer switch (if equipped)

EXAMPLE

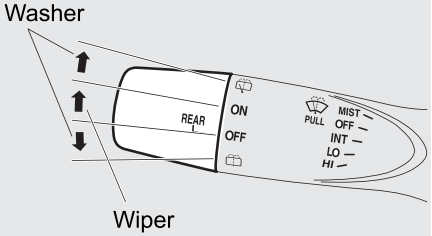

66RH039

To turn the rear wiper on, twist the rear wiper switch on the end of the lever forward to “ON” position. To turn the rear wiper off, twist the switch rearward to “OFF” position.


With the rear wiper in “OFF” position, twist the switch rearward and hold it there to spray window washer fluid.

With the rear wiper in “ON” position, turn the switch forward and hold it there to spray window washer fluid.

NOTICE

Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

Tilt steering lock lever

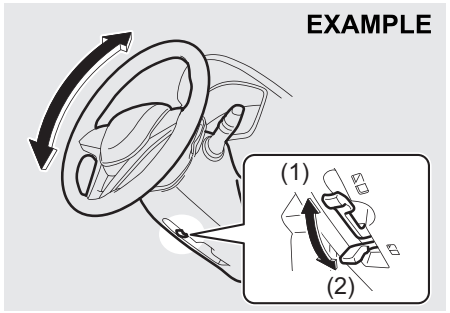

75RM044

(1) LOCK
(2) UNLOCK


The lock lever is located under the steering column. To adjust the steering wheel height:

1) Push down the lock lever to unlock the steering column.
2) Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
3) Try moving the steering wheel up and down to check that it is securely locked in position.

⚠ WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.

Horn

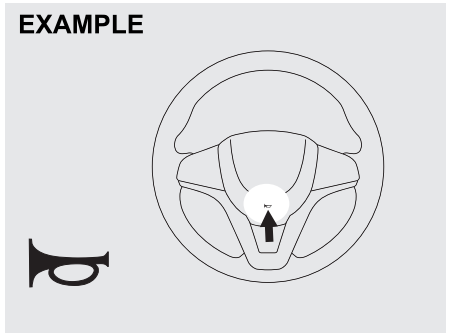


75RM045

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position or any ignition mode.


Heated rear window switch (if equipped)

Type A

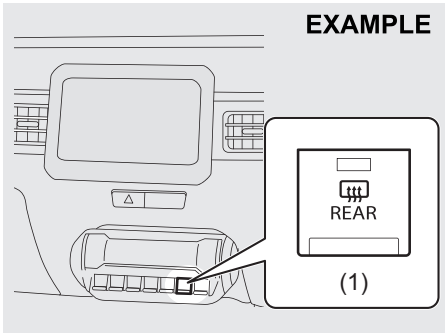

66RH118

Type B

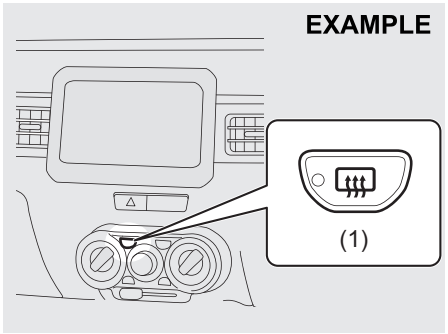

66RH119

When the rear window is misted, push this switch (1) to clear the window.


An indicator light will be lit when the defogger is on. The defogger will work only when the engine is running. To turn off the defogger, push the switch (1) again.

NOTICE
The heated rear window uses a large amount of electricity. Turn off the switch after the window has become clear.

NOTE:

- *The defogger will work only when the engine is running.*
- *The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the battery.*

OPERATING YOUR VEHICLE

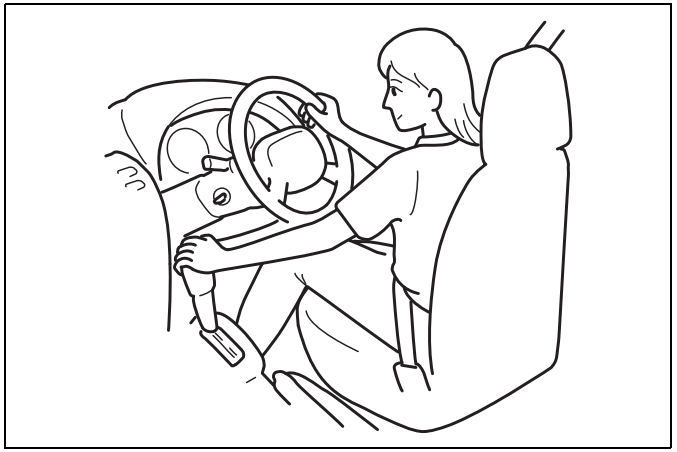


60G408

Exhaust gas warning 3-1
Daily inspection checklist 3-1
Engine oil consumption 3-2
Ignition switch
(vehicle without keyless push start system) 3-3
Engine switch
(vehicle with keyless push start system) 3-5
Keyless push start system (if equipped) 3-6
Parking brake lever 3-9
Pedal 3-10
Starting the engine
(vehicle without keyless push start system) 3-11
Starting the engine
(vehicle with keyless push start system) 3-13
Using the transaxle 3-16
Gearshift indicator (if equipped) 3-27
Parking sensors (if equipped) 3-28
Rearview camera (if equipped) 3-32
Braking 3-35

Exhaust gas warning

EXAMPLE

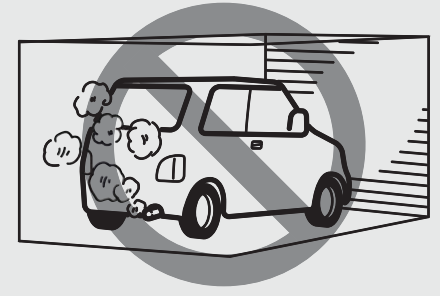

52D334

⚠ WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, take the following precautions to help prevent carbon monoxide from entering your vehicle.

- **Do not leave the engine running in garages or other confined areas.**

(Continued)

⚠ WARNING

(Continued)

- **Do not park with the engine running for a long period of time, even in an open area. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure that the air intake selector is set to FRESH AIR and the blower is at high speed.**
- **Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to do so, make sure that the sunroof (if equipped) and all windows are closed, and the blower is at high speed with the air intake selector set to FRESH AIR.**
- **To allow proper operation of your vehicle's ventilation system, keep the air inlet grill in front of the windshield clear of snow, leaves or other obstructions at all times.**
- **Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.**
- **Have the exhaust system inspected periodically for damage and leakage. Any damage or leakage should be repaired immediately.**

Daily inspection checklist

Before driving

EXAMPLE



60A187S

1) Make sure that windows, mirrors, lights and reflectors are clean and unobstructed.
2) Visually check the tires for the following points:
   – the depth of the tread groove
   – abnormal wear, cracks and damage
   – loose wheel nuts
   – existence of foreign material such as nails, stones, etc.

Refer to "Tires" in the "INSPECTION AND MAINTENANCE" section for details.

3) Look for fluid and oil leakage.

NOTE:
It is normal for water to drip from the air conditioning system after use.

4) Make sure that the hood is fully closed and latched.
5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
6) Adjust the seat and head restraint (if equipped).
7) Check the brake pedal and the parking brake lever.
8) Adjust the mirrors.
9) Check that you and all passengers have properly fastened your seat belts.
10) Check that all warning lights come on as the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON.
11) Check all gauges.
12) Check that the brake system warning light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, perform the following under-hood checks:

1) Engine oil level
2) Coolant level
3) Brake fluid level
4) Battery solution level
5) Windshield washer fluid level
6) Hood latch operation
   Pull the hood release handle inside the vehicle. Make sure that you cannot open the hood all the way without releasing the secondary latch. Close the hood securely after checking for proper latch operation. See the item "All latches, hinges and locks" of "Chassis, body and others" in "Maintenance schedule" in the "INSPECTION AND MAINTENANCE" section for lubrication schedule.

⚠ WARNING

Make sure that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tire pressure using a tire pressure gauge. Also check the tire pressure of the spare tire.

Engine oil consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumption depends on viscosity and quality of the oil and your driving conditions.
More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.
A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km driving.


Oil consumption:
Max. 1.0 L per 1000 km

When judging the amount of oil consumption, note that the oil may become diluted and it is difficult to judge the accurate oil level.
As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km or more of driving. This is because the oil gradually becomes diluted with fuel or moisture, making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

Ignition switch (vehicle without keyless push start system)

EXAMPLE

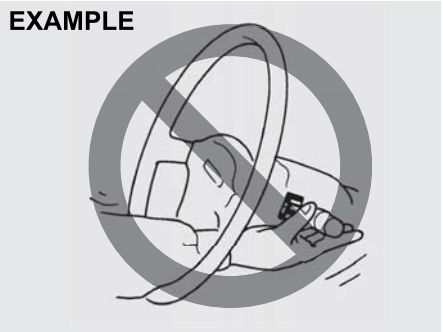


65D611

⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.


EXAMPLE

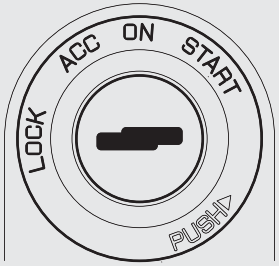

68PH00310

The ignition switch has the following four positions:

LOCK
This is the normal parking position. It is the only position in which the key can be removed.

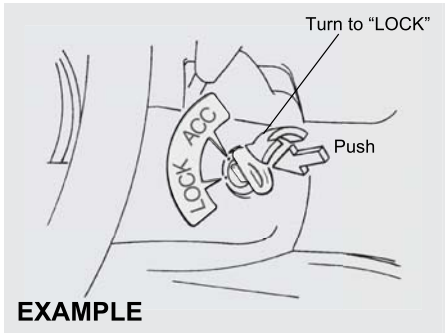

60G033

You must push in the key to turn it to “LOCK” position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.


To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering, try turning the steering wheel slightly to the right or left while turning the key.

ACC
Accessories such as the radio can operate, but the engine is off.

ON
This is the normal operating position. All electrical systems are on.

START
This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder
A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver’s door is opened.

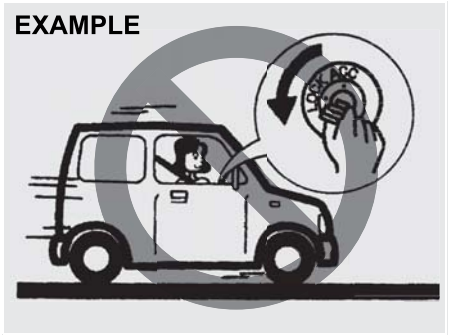

81A297S

⚠ WARNING

- **Never return the ignition switch to “LOCK” position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.**

(Continued)

⚠ WARNING


(Continued)

- **Always return the ignition switch to “LOCK” position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could cause accidental movement of the vehicle or could tamper with power windows or power sunroof. They also could suffer from heat stroke in warm or hot weather. These could result in severe injury or even death.**

NOTICE

- **Do not use the starter motor for more than 12 seconds at a time. If the engine does not start, wait 15 seconds before trying again. If the engine does not start after several attempts, make sure the fuel and ignition systems or consult your authorised Maruti Suzuki workshop.**
- **Do not leave the ignition switch in “ON” position if the engine is not running as the battery will discharge.**

Engine switch (vehicle with keyless push start system)

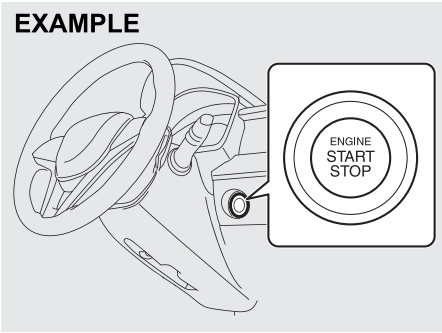

66RH040

LOCK (OFF)
This mode is for parking the vehicle. When this mode is selected by pressing the engine switch and then any door (including the tailgate) is opened or closed, the steering will be locked automatically.

ACC
Press the engine switch to select this ignition mode to use such electric equipment as the audio system, outside rearview mirrors and accessory socket with the engine off. When this position is selected, the information display in the instrument cluster shows the following message: “ACC” IGNITION SWITCH POSITION. Refer to “Information display” in the “BEFORE DRIVING” section for details.

ON
- **With the engine off**
  You can use such electric equipment as the power windows and wipers with the engine off. When this ignition mode is selected by pressing the engine switch, the information display in the instrument cluster shows the following message: “ON” IGNITION SWITCH POSITION.
- **With the engine on**
  All electric equipment is operational. The vehicle can be driven when you have selected this ignition mode by pressing the engine switch.

START
Manual transaxle – Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after shifting to “N” (Neutral) and depressing the brake and clutch pedals.

Auto Gear Shift – Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after shifting to “N” (Neutral) and depressing the brake pedal.

NOTE:
You do not need to keep the engine switch pressed to start the engine.

NOTICE
Do not leave the engine switch in ACC or ON mode when the engine is not running. Avoid using the radio or other electric accessories for a long time when the engine switch is in ACC or ON mode when the engine is not running, otherwise the battery may discharge.

NOTE:
In the presence of strong radio signals or noise, you may not be able to change the ignition mode to ACC or ON or to start the engine using the engine switch. In this case, the information display in the instrument cluster will show the following message: KEY FOB NOT DETECTED.

Unreleased steering lock warning

If the steering lock remains engaged when you press the engine switch to change the ignition mode to ON, the information display in the instrument cluster shows the message: “TRN. STEERING WHEEL TO RELEASE LOCK”. Refer to “Information display” in the “BEFORE DRIVING” section for details.

NOTE:
The steering lock may not be released and the immobilizer/keyless push start system warning light turns on if some load is acting on the steering wheel. If this happens, turn the steering wheel to the right or left to relieve it from the load before you press the engine switch again to change to the desired ignition mode.

Keyless push start system (if equipped)

Provided the keyless push start system remote controller is within the interior workable area (refer to the related explanation in this section), you can use the engine switch for starting the engine and selecting an ignition mode (ACC or ON). In addition, the following functions can be used:


- Keyless entry function. Refer to “Keyless push start system remote controller / keyless entry system transmitter” in the “BEFORE DRIVING” section for details.
- Locking and unlocking doors (including the tailgate) using a request switch. Refer to “Keyless push start system remote controller / keyless entry system transmitter” in the “BEFORE DRIVING” section for details.
- Immobilizer (anti-theft) function. Refer to “Immobilizer system” in the “BEFORE DRIVING” section for details.

Engine switch illumination

The engine switch is illuminated (lit) in the following situations:

- When the engine is off and the driver’s door is open, or for 15 seconds after the driver’s door is closed. The illumination will fade out after 15 seconds passed.
- When the engine is off and the position lights are on. The illumination will go out when the position lights are turned off.
- When the engine is on and the position lights and/or the headlights are on. The illumination will go out when the position lights are turned off.

EXAMPLE

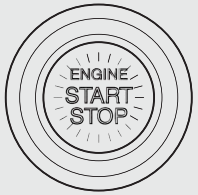

82K253

NOTE:
To save the battery, the illumination will be automatically turned off when both of the following conditions are simultaneously met:


- *The headlights and position lights are turned off.*
- *15 minutes has elapsed since opening the driver’s door.*

Selection of ignition modes

Press the engine switch to select ACC or ON mode as follows when you use an electric accessory or check the operation of instruments without running the engine.

1) Bring the keyless push start system remote controller with you and sit in the driver's seat.
2) Manual transaxle – Without depressing the clutch pedal, press the engine switch (1).
   Auto Gear Shift – Without depressing the brake pedal, press the engine switch (1).


EXAMPLE

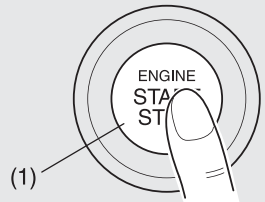

82K254

Every time you press the engine switch, the ignition mode changes as follows.

EXAMPLE

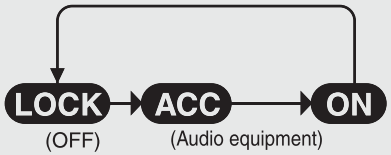


68PH00322

NOTE:
When selecting the ignition modes, the information display in the instrument cluster shows certain messages. Refer to "Information display" in "BEFORE DRIVING" section for details.

If the master warning indicator light blinks and the ignition modes cannot be selected

Your keyless push start system remote controller may not be sensed as being within the interior workable area (refer to the related explanation in this section). Try again after checking that you have the remote controller with you. If the ignition modes still cannot be selected, the battery of the remote controller may be discharged. To select an ignition mode, you must then use the following method:

EXAMPLE

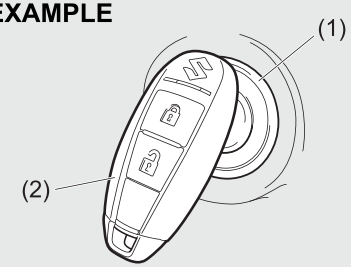

68PH00304

1) Without depressing the brake pedal and the clutch pedal, push the engine switch (1).
2) The master warning indicator light in the instrument cluster blinks and the message "PLACE KEY FOB ON START SWITCH" appears on the information display within about 10 seconds. Touch the engine switch with


LOCK button end of remote controller (2) for about 2 seconds.

NOTE:
- *If you still cannot select the ignition modes, there may be some problem with the keyless push start system. Contact an authorised Maruti Suzuki workshop for an inspection of the system.*
- *The immobilizer/keyless push start system warning light will come on for about 5 seconds while the master warning indicator light is blinking. In addition, the information display in the instrument cluster will show a message during this time. Refer to "Information display" in the "BEFORE DRIVING" section for details.*
- *You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. To incorporate this customization, please contact an authorised Maruti Suzuki workshop.*
- *If the battery of the remote controller is about to become completely discharged, the corresponding message will appear on the information display when you press the engine switch to change the ignition mode to ON. Refer to "Information display" in the "BEFORE DRIVING" section for details. For details on replacing the battery, refer to "Keyless push start system remote controller / keyless entry system transmitter" in the "BEFORE DRIVING" section.*

REMOTE CONTROLLER OUTSIDE warning

When either of the conditions described below is met, the system issues a REMOTE CONTROLLER OUTSIDE warning by sounding the interior and exterior buzzers. At the same time, the immobilizer/keyless push start system warning light comes on and the master warning indicator light blinks.

- Any door is opened and then closed while the remote controller is not inside the vehicle and the engine is running or the ignition mode has been changed to ACC or ON by pressing the engine switch.
- The remote controller is not inside the vehicle when you attempt to start the engine after changing the ignition mode to ACC or ON by pressing the engine switch.

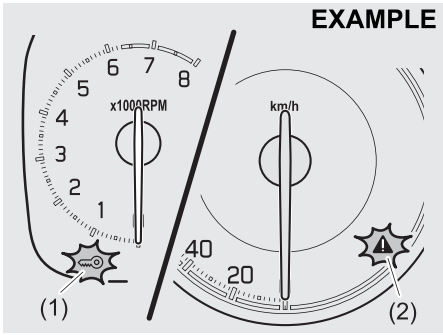

75RM048


(1) Immobilizer/keyless push start system warning light (blinks)
(2) Master warning indicator light (blinks)

NOTE:
- *If the warning is given, locate the remote controller as soon as possible.*
- *Any attempt to start the engine will fail while the warning is active. The message appearing on the information display in the instrument cluster will also indicate this condition. Refer to "Information display" in the "BEFORE DRIVING" section for details.*
- *Normally, the immobilizer/keyless push start system warning light should go out and the master warning indicator light should stop blinking shortly after the remote controller is brought back inside the vehicle. If they remain lit and blinking, change the ignition mode to LOCK (OFF)*

by pressing the engine switch and then perform the engine starting operation. Refer to "Starting engine (vehicle with keyless push start system)" in this section.
- *Always keep the remote controller with you as the driver.*

Interior workable area for engine starting

EXAMPLE

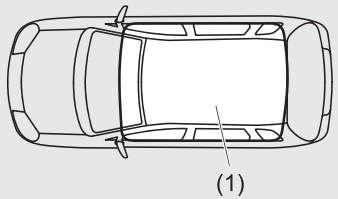

54P000373


(1) Interior workable area

The interior workable area for these functions is defined as all the interior spaces except for the space above the instrument panel.

NOTE:
- *Even when the remote controller is in the interior workable area, if it is in any of the following conditions, you may not be able to start the engine or select the ignition modes, and the REMOTE CONTROLLER OUTSIDE warning may be given.*
  - *The remote controller's battery is low.*
  - *The remote controller is affected by strong radio signals or noise.*
  - *The remote controller is in contact with or covered by a metallic object.*
  - *The remote controller is in stowage such as the glove box or a door pocket.*
  - *The remote controller is in the sun visor pocket or on the floor.*
- *Even when the remote controller is outside the interior workable area, if it is in any of the following conditions, you may be able to start the engine or select the ignition mode. The REMOTE CONTROLLER OUTSIDE warning may not be given at that time.*
  - *The remote controller is outside the vehicle but very close to a door.*
  - *The remote controller is on the instrument panel.*

Parking brake lever

EXAMPLE

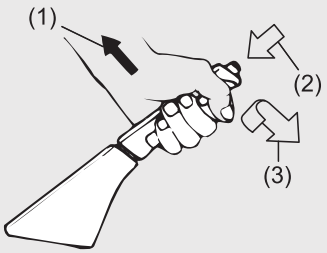

68PHM3001

(1) To set
(2) To release
(3) To release

The parking brake lever is located between the seats. To set the parking brake, hold the brake pedal down and pull the parking brake lever all the way up. To release the parking brake, hold the brake pedal down, pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

⚠ WARNING

- **Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.**
- **If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by an authorised Maruti Suzuki workshop.**

⚠ WARNING

Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, make sure that the gearshift lever is in one of the following positions;

- **1st gear or "R" (Reverse) for manual transaxle vehicles.**
- **"D", "M" or "R" for Auto Gear Shift vehicles. Also, make sure the instrument cluster to make sure that the transaxle is engaged in "1" or "R" position.**

Remember, even though the transaxle is in gear, you must set the parking brake fully.

⚠ WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:

1) **Set the parking brake.**
2) **Manual transaxle – turn off the engine, then shift into reverse or first gear.**
   Auto Gear Shift – shift into "D", "M" or "R" and make sure the gear position indicator in the instrument cluster to make sure that the transaxle is engaged in "1" or "R" position, then turn off the engine.
3) **Get out of the vehicle and put chocks under the wheels.**
4) **Release the parking brake.**
   When you return to your vehicle, first set the parking brake, and then remove the wheel chocks.

NOTE:
(For Auto Gear Shift Model)
For details on how to use the gearshift lever to park the vehicle, refer to "Parking" in "Auto Gear Shift" in this section.


Parking brake reminder buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Pedal

Manual transaxle


EXAMPLE

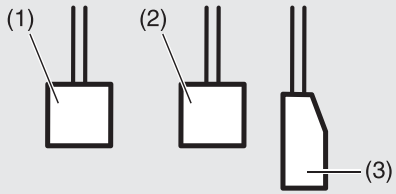

80J2121

Auto Gear Shift

EXAMPLE

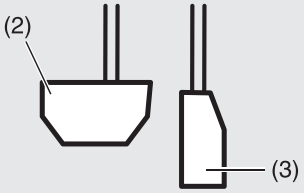

80J2122

Clutch pedal (1)

A clutch pedal is used to disengage the drive to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

⚠ WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake pedal (2)

Your MARUTI SUZUKI vehicle is equipped with front disc brakes and rear drum brakes. Depressing a brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as cold, wet, snow, etc.

⚠ WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by your authorised Maruti Suzuki workshop.

⚠ WARNING


Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator pedal (3)

An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

Starting the engine (vehicle without keyless push start system)

Before starting the engine

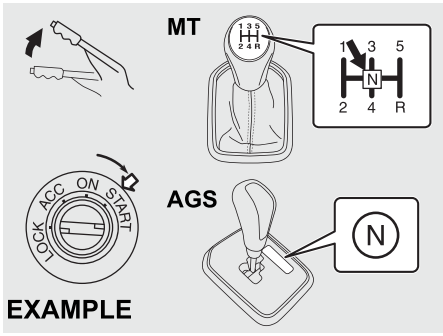

66RH041

1) Make sure that the parking brake is set fully.
2) Manual transaxle – Shift into “N” (Neutral) and depress the clutch pedal all the way to the floor. Hold the clutch pedal while starting the engine.
   Auto Gear Shift – Shift into “N” (Neutral) and depress the brake pedal. Hold the brake pedal while starting the engine.

NOTE:
For Auto Gear Shift vehicles, if the engine cannot be started, make sure the gearshift lever is in “N” before restarting the engine.

⚠ WARNING

Make sure that the parking brake is set fully and the transaxle is in Neutral before attempting to start the engine.

Starting a cold and warm engine

(For petrol engine model)
With your foot taken off the accelerator pedal, crank the engine by turning the ignition key to “START”. Release the key when the engine starts.

NOTICE

- **Stop turning the starter immediately after the engine has started or the starter system can be damaged.**
- **Do not crank the engine for more than 12 seconds at a time. If the engine does not start on the first try, wait about 15 seconds before trying again.**

If the engine does not start after 12 seconds of cranking, wait about 15 seconds, and then press down the accelerator pedal to 1/3 full of capacity and try cranking the engine again. Release the key and accelerator pedal when the engine starts.

If the engine still does not start, try holding the accelerator pedal all the way to the floor while cranking. This should clear the engine if it is flooded.

(For diesel engine model)

Cold engine
Turn the ignition switch to “ON” position and wait until the glow plug indicator goes out if it comes on. Crank the engine by turning the ignition key to “START”. Release the key when the engine starts.

NOTICE

- **Stop turning the starter immediately after the engine has started or the starter system can be damaged.**
- **Do not crank the engine for more than 30 seconds at a time. If the engine does not start on the first try, wait about 15 seconds before trying again.**

Warm engine
Crank the engine by turning the ignition key to “START”. Release the key when the engine starts.


Caution when stopping the engine with turbocharger
When stopping the engine after climbing or high speed driving, let the engine idle for about one minute or more (if it is not prohibited) to cool down the turbocharger and engine oil. This is to prevent the engine oil from over-deteriorating. Deteriorated engine oil will damage the bearings of the turbocharger.

Restarting diesel engine after fuel-empty stop
If the engine stops and the low fuel warning light and the malfunction indicator light come on, use the following procedure:
1) Fill the fuel tank.
2) Hold the ignition key in “ON” position for 5-10 seconds to feed fuel.
3) Perform above engine starting procedure to start the engine.

If the malfunction indicator light still comes on after the engine started, there may be some problem with the engine. Ask your authorised Maruti Suzuki workshop to have the engine inspected.


Starting the engine (vehicle with keyless push start system)

Before starting the engine

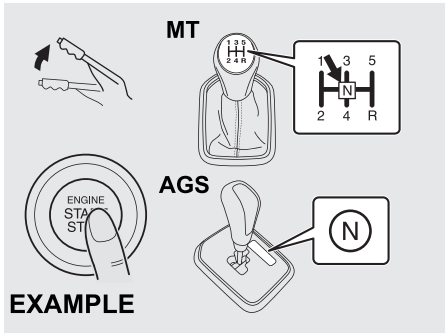

66RH042

1) Make sure that the parking brake is set fully.
2) Manual transaxle – Shift to “N” (Neutral) and fully depress the clutch pedal. Hold the clutch and brake pedals fully depressed.
   Auto Gear Shift – Shift into “N” (Neutral) and depress the brake pedal. Hold the brake pedal while starting the engine.

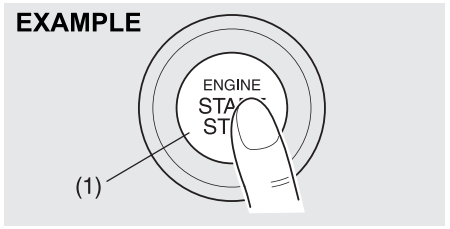

82K254

3) The “PUSH START SWITCH” message will appear on the information display in the instrument cluster. Push the engine switch (1). When the engine is started, the starter motor will automatically stop.

⚠ WARNING

Make sure that the parking brake is set fully and the transaxle is in Neutral before attempting to start the engine.

NOTICE

- **Do not depress the accelerator during the engine starting procedure.**
- **If the engine does not respond when you try to start it with the engine switch or if the engine switch repeats cycling through LOCK (OFF) – ACC – ON mode, the vehicle battery may be discharged. Check the voltage of the vehicle battery before trying again.**

NOTE:

- *You do not need to keep the engine switch pressed to start the engine.*
- *The engine of a manual transaxle vehicle will not start unless the clutch pedal is depressed.*
- *For Auto Gear Shift vehicles, if the engine cannot be started, make sure the gearshift lever is in “N” before restarting the engine.*
- *During the engine starting procedure, messages on the information display will help you. Refer to “Information display” in the “BEFORE DRIVING” section for details.*
- *You should turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.*
- *Even if you fail to start the engine, the starter motor will stop turning automatically after a short time. After the starter motor has stopped or if there is some problem with the system, the starter motor will rotate only while the engine switch is being pressed.*

Stopping the engine

- Depress the engine switch to stop the engine after the vehicle stopped completely.
- In case of emergency, you can stop the engine by quickly pushing the engine switch more than 3 times, or pushing and holding the engine switch for more than 2 seconds while the vehicle is in motion.

NOTE:
Except in cases of emergency, do not stop the engine while the vehicle is in motion.
The steering and braking operation will require more effort when the engine is stopped.
Refer to "Braking" in this section.

- If the engine remains stopped for while after it was stopped unexpectedly or was raced before stopping, a clicking sound may be heard from around the engine when it is restarted. This is not a malfunction. Always let the engine idle before stopping it.

Starting a cold and warm engine

(For petrol engine model)

With your foot taken off the accelerator pedal, crank the engine by pressing the engine switch to change the ignition mode to START.

NOTICE

Do not crank the engine for more than 12 seconds at a time.
If the engine does not start on the first try, wait about 15 seconds before trying again.

After pressing the engine switch to change the ignition mode to START, the starter cranks the engine for about 12 seconds before it can start the engine. If the engine fails to start at the first attempt, wait about 15 seconds, and then try again while keeping the engine switch pressed while pressing down the accelerator pedal 1/3 of full capacity. Release the accelerator pedal when the engine starts.

If the engine still does not start, try holding the accelerator pedal all the way to the floor while cranking. This should clear the engine if it is flooded.
If you are unable to start the engine using this procedure, consult your authortised Maruti Suzuki workshop.

(For diesel engine model)

Cold engine

Depress the clutch and brake pedals fully and press the engine switch to crank the engine. If the glow plug indicator light comes on, the engine will start automatically after the glow plug indicator light goes off up to 10 seconds afterward.

NOTICE

Do not crank the engine for more than 30 seconds at a time.
If the engine does not start on the first try, wait about 15 seconds before trying again.

Warm engine

Crank the engine by pressing the engine switch to change the ignition mode to "START".

Caution when stopping the engine with turbocharger

When stopping the engine after climbing or high speed driving, let the engine idle for about one minute or more (if it is not prohibited) to cool down the turbocharger and engine oil. This is to prevent the engine oil from over-deteriorating. Deteriorated engine oil will damage the bearings of the turbocharger.

Restarting diesel engine after fuel-empty stop
If the engine stops and the low fuel warning light and the malfunction indicator light come on, use the following procedure:
1) Fill the fuel tank.
2) Press the engine switch to change the ignition mode to “ON” for 5-10 seconds to feed fuel.
3) Perform the above engine starting procedure to start the engine.

If the malfunction indicator light still comes on after the engine started, there may be some problem with the engine. Ask your authorised Maruti Suzuki workshop to have the engine inspected.

If the master warning indicator light blinks and the engine cannot be started
Your keyless push start system remote controller may not be sensed as being within the interior workable area. Try again after checking that you have the remote controller with you. If the engine still cannot be started, the battery of the remote controller may be discharged. To start the engine, use the following method:

EXAMPLE



68PH00304

1) Make sure that the parking brake is set fully.
2) Manual transaxle – Shift to “N” (Neutral) and fully depress the clutch pedal. Hold the clutch and brake pedals fully depressed.
   Auto Gear Shift – Shift to “N” (Neutral) and fully depress the brake pedal. Hold the brake pedal fully depressed.
3) “PUSH START SWITCH.” message will appear on the information display in the instrument cluster. Press the engine switch (1).
4) The master warning indicator light in the instrument cluster blinks within about 10 seconds. Touch the engine switch with LOCK button end of remote controller (2) for about 2 seconds.

NOTE:
- *If you still cannot start the engine after several attempts using the above method, there may be a problem elsewhere, such as a low battery. Contact your authorised Maruti Suzuki workshop for inspection.*
- *The immobilizer/keyless push start system warning light will come on for about 5 seconds while the master warning indicator light is blinking. In addition, the information display will show a certain message during this time. Refer to “Information display” in the “BEFORE DRIVING” section for details.*
- *You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. Please contact an authorised Maruti Suzuki workshop for the customization.*
- *If the battery of the remote controller is about to become completely discharged, the corresponding message will appear on the information display when you press the engine switch to change the ignition mode to ON. For details on replacing the battery, refer to “Keyless push start system remote controller / keyless entry system transmitter” in the “BEFORE DRIVING” section.*

Returning ignition mode to LOCK (OFF)

NOTE:
Certain problems like a fault in engine system may prevent the engine switch from going back to the "LOCK" (OFF) mode. If this happens, have the vehicle inspected by an authorised Maruti Suzuki workshop after doing the following:

- *Lock the doors using the key to prevent theft (The request switches and the keyless push start system remote controller cannot be used to lock them).*
- *Disconnect the negative cable from the battery to prevent discharge.*

LOCK (OFF) mode reminder buzzer
If the driver's door is opened without returning the ignition mode to LOCK (OFF) by pressing the engine switch, a buzzer sounds to warn you of this state.


- If you open the driver's door after pressing the engine switch to change the ignition mode to ACC, the interior buzzer beeps intermittently.
- The buzzer will stop sounding if you then push the engine switch twice, thus bringing it back the ignition mode to LOCK (OFF).

NOTE:
Whenever you leave the vehicle, make sure that you have returned the ignition mode to LOCK (OFF) using the engine switch and then lock the doors. Without returning the ignition mode to LOCK (OFF), you cannot use a request switch or keyless push start system remote controller to lock the doors.

Steering lock warning buzzer
If the steering lock fails to engage due to a fault in the system when the ignition mode is turned to LOCK (OFF) by pressing the engine switch and any door (including the tailgate) is opened or closed, the interior buzzer will warn you of this condition with repeated short beeps. If this happens, have the vehicle inspected by an authorised Maruti Suzuki workshop.

Using the transaxle

Manual transaxle

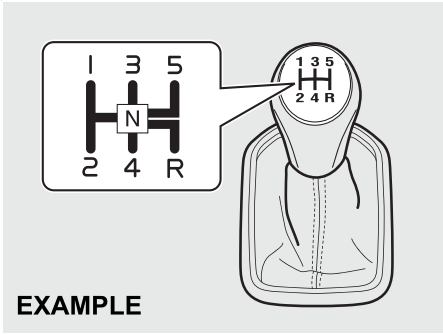

75RM254

Starting off
To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting
All forward gears are synchronized and provide quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed from rising into the red zone of the tachometer.

Downshifting maximum allowable speeds

For petrol engine

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	80
4th to 3rd	120
5th to 4th	155

For diesel engine

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	55
4th to 3rd	90
5th to 4th	135

**NOTE:*
You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe engine damage can result.

⚠ WARNING

- **Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.**
- **When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.**

NOTICE

Make sure that the vehicle is completely stationary before you shift into reverse.

NOTICE

- **To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.**
- **When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.**

Auto Gear Shift

Auto Gear Shift is a 5-speed forward/reverse transaxle.
Auto Gear Shift has the basic features of conventional manual transaxle, but clutch operation and transaxle gear shifting are controlled electronically.


NOTICE

Do not depress both the brake pedal and accelerator pedal simultaneously. This can cause damage or overheating to the clutch.

NOTE:
When you open the driver's door, the Auto Gear Shift systems run automatically and you may hear an operating noise. This sound does not indicate malfunction.


The features are as follows:

EXAMPLE

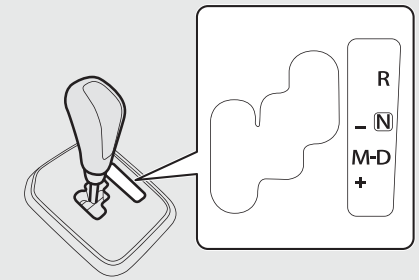

66RH043

EXAMPLE

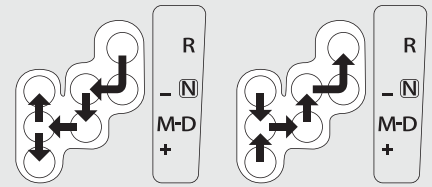

66RH044

Depress brake pedal indicator

EXAMPLE



76MH0A047

This light will come on if you do not depress the brake pedal in the following situations.

- When starting the engine.
- When the engine is on and the gearshift lever is shifted from “N” position to “D”, “M” or “R” position.
- When the ignition switch is in the “ON” position or the ignition mode is ON, and the engine is off, the gearshift lever is shifted into any position.

This light will also come on if one of the gears cannot be engaged and the system is unable to re-try shifting when you shift the gearshift lever from “N” position to “D”, “M” or “R” position.

Starting the engine

When starting the engine, always place the gearshift lever in the “N” position and depress the brake pedal firmly. The engine cannot be started unless the gearshift lever is in the “N” position and the brake pedal is depressed.

If you parked vehicle with gear engaged on last time (if you can see “1” or “R”), shift into “N” (Neutral) and depress the brake pedal. Hold the brake pedal while starting the engine. You can hear buzzer in short time.

Clutch operation

You can select either the Drive (D) mode or the Manual (M) mode. Since this vehicle controls clutch operation electronically in either mode, you do not need to operate the clutch.

Creeping function
This vehicle has a creeping function that helps the vehicle to start smoothly by engaging the clutch. When the gearshift lever is in any of the positions “D”, “M” or “R”, and you release your foot from the brake pedal, the vehicle starts slowly without depressing the accelerator pedal. The creeping function is disabled if you depress the brake pedal or pull up the parking brake lever. Creep is not possible in manual mode with 2nd gear engaged.

NOTE:
If the driver’s door is opened and/or the parking brake lever is engaged with the gear in the “M”, “D” or “R” position, the creeping function will not operate.

Parking and Stopping the vehicle
Auto Gear Shift does not have a parking position. Park the vehicle with a gear engaged. Make sure that the gearshift lever is “D”, “M”, or “R”.
Also, check the instrument cluster to make sure that the transaxle is engaged in “1” or “R” position.

NOTICE

A buzzer will sound continuously if the vehicle is operated with the gearshift lever in-between of each shift positions. The vehicle will become inoperative if you continue to operate the vehicle with the gearshift lever in-between shift positions.

Drive (D) mode
When the Drive (D) mode is activated, the most appropriate gear position is automatically selected upon operation of the accelerator pedal and variation of vehicle speed.

EXAMPLE



66RM03002

Normal driving:
1) Start the engine as instructed in “Starting the engine” in this section.
2) With your foot on the brake pedal, shift the gearshift lever to the “D” position. When the gearshift lever is shifted to the “D” position, the gear will be shifted to 1st.

NOTE:
- *If 1st gear cannot be engaged even though the gearshift lever has been shifted from the “N” to the “D” position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate a malfunction.*
- *The “N” indicator will flush, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;*
  – *If you shift the gearshift lever from the “N” to the “D” position without depressing the brake pedal.*
  – *If the system is unable to re-try shifting You should depress the brake pedal and shift the gearshift lever to “N” position, then shift to “D” again.*

3) Release the parking brake and brake pedal.
4) Depress the accelerator pedal slowly.

⚠ WARNING

- **While driving the vehicle, do not shift the gearshift lever to the “N” position. The engine brake may not work and you may get involved in an unexpected accident. If you return the gearshift lever from “N” to “D” because of unintended shifting, the gear position will be shifted according to the current vehicle speed.**
- **Always keep your foot on the brake pedal while stopped with the engine running. This operation prevents the vehicle from moving due to unintended activation of the creeping function.**

NOTICE

If the gearshift lever cannot shift into any position, or the gear is changed to "N" position automatically when the vehicle speed becomes less than 10 km/h, there may be a systematic malfunction. In this case, ask your authorised Maruti Suzuki workshop to inspect the Auto Gear Shift system as soon as possible.

NOTICE

Do not operate the system as described below. The life cycle of the clutch may be reduced.

- **Using the accelerator pedal to hold the vehicle on an uphill slope with the gearshift lever in the "D" or "M" position. If you perform this operation for a certain period of time, a warning buzzer will sound.**
- **Shifting the gearshift lever to the "D", "M" or "R" position while racing the engine.**
- **Driving at low speed using a high gear.**
- **Holding the vehicle on an uphill slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.**

Starting off on an uphill/downhill:

Uphill

1) Apply the parking brake firmly so that the vehicle does not roll backwards.
2) Shift the gearshift lever to the "D" position while depressing the brake pedal. Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move, release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Downhill

1) Depress the brake pedal and shift the gearshift lever to the "D" position. Make sure that the gear is in 1st by checking the gear position indicator.
2) Release the brake pedal and depress the accelerator pedal slowly. Even if the accelerator pedal is not depressed, the clutch will be engaged when the vehicle speed increases.

Using engine braking:


When driving on a downhill slope, downshifting is recommended. So you can use engine braking.
By placing the gearshift lever in the "M" position, the Manual (M) mode is selected, and you can shift to a lower gear manually. For details of downshift operation, refer to "Upshift and downshift" in the "Manual (M) mode".

Manual (M) mode

The gears are not shifted automatically. To shift the transaxle, the driver must operate the gearshift lever to the "+" or "–" direction. As for conventional manual transaxle vehicles, releasing the accelerator pedal a little may help the transaxle to shift smoothly.


Upshift and downshift:

Upshifting

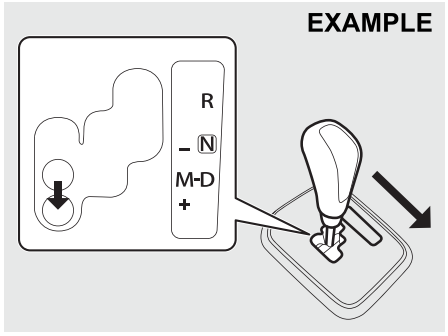


66RH045

Pull the gearshift lever to the "+" direction and release it. Every time the lever is operated, the transaxle is upshifting 1 step in the order of 1st → 2nd → 3rd → 4th → 5th gear.

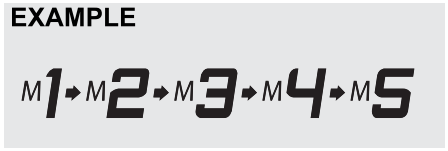


66RM03003

Downshifting

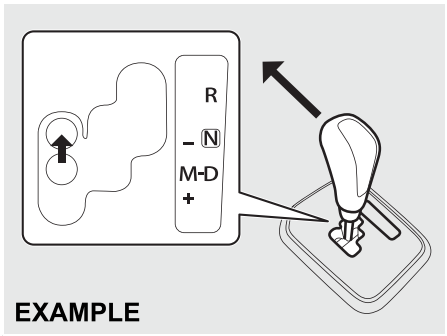

66RH046

Push the gearshift lever to the "–" direction and release it. Every time the lever is operated, the transaxle is downshifted in the order 5th → 4th → 3rd → 2nd → 1st gear.

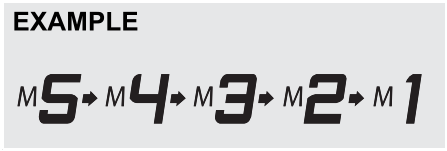

66RM03004

The gear position is displayed on the gear position indicator. The gear position indicator shows the transaxle gear position. Before starting off, always make sure the gear position indicator to make sure that the transaxle is engaged in 1st or reverse, then depress the accelerator pedal. It's possible to start-off vehicle in 2nd gear using manual mode, from stop condition.

NOTE:

- *Always use 1st gear while starting off an uphill slope, otherwise you can damage the clutch.*
- *To downshift smoothly, the engine runs fast in some cases. This is done intentionally by the system and is not malfunction.*
- *When driving down a hill, downshift and use the engine braking appropriately. If necessary, continuous downshifting is possible. However, if downshifting more than 3 steps, gear shifting will take more time.*
- *When the gear is shifting, a noise can be heard in some case. This is not malfunction.*

⚠ WARNING

- **Be careful when accelerating, upshifting, downshifting or braking on a slippery surface. Sudden acceleration or engine braking could cause the vehicle to spin or skid. While starting off on a slippery or snowy roads, please use 2nd gear (if required).**
- **To drive down a long or steep hill, reduce your speed and downshift. Remember, if you ride the brakes excessively, they may overheat and fail.**
- **While driving the vehicle, do not shift the gearshift lever to "N" position. The engine brake may not work and you may get involved in an unexpected accident. If you return the gearshift lever from "N" to "M" because of unintended shifting, the gear position will be shifted according to the current vehicle speed.**
- **Do not apply the parking brake while driving. Otherwise, it could cause a skid and you may get involved in an unexpected accident.**

NOTICE

- **If the gearshift lever cannot shift into any position, or the gear is changed to "N" position automatically when the vehicle speed becomes less than 10 km/h, there may be a systematic malfunction. In this case, ask your authorised Maruti Suzuki workshop to inspect the Auto Gear Shift system as soon as possible.**
- **In manual (M) mode, the system does not upshift even if the engine speed reaches the rev-limit.**
- **The system will not allow shifting up or down to a gear that would cause engine over-revving or under-revving.**
- **If frequently driving at low speed using a high gear position, the life cycle of the clutch may be reduced.**
- **Frequent downshifting (more than 3 positions consecutively) causes the reduction of transaxle life.**

Starting off:

1) Start the engine as instructed in "Starting the engine" in this section.
2) With your foot on the brake pedal, shift the gearshift lever to the "M" position. When the gearshift lever is shifted to the "M" position, the gear will be shifted to 1st. Before starting off, always make sure that the intended gear is engaged by checking the gear position indicator, then depress the accelerator pedal.

NOTE:

- *If 1st gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "M" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate malfunction.*
- *The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;*
  - *If you shift the gearshift lever from the "N" to the "M" position without depressing the brake pedal.*
  - *If the system is unable to re-try shifting You should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "M" position again a few seconds later.*

3) Release the parking brake and brake pedal. Depress the accelerator pedal slowly for smooth starting.

⚠ WARNING

Always keep your foot on the brake pedal while stopped with the engine running. These operations prevent the vehicle from starting due to unintended activation of the creeping function.

NOTICE

Do not operate the system as described below. The life cycle of the clutch may be reduced.

- **Using the accelerator pedal to hold the vehicle on an uphill slope operation with the gearshift lever in the "M" or "D" position. If you perform this operation for a certain period of time, a warning buzzer will sound.**
- **Shifting the gearshift lever to the "M", "D" or "R" position while racing the engine.**
- **Driving at low speed using a high gear.**
- **Stopping on a slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.**

Starting off on an uphill/downhill slope:

Uphill

1) Apply the parking brake firmly so that the vehicle does not roll backwards.
2) Shift the gearshift lever to the "M" position while depressing the brake pedal. Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move, release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Downhill

1) Depress the brake pedal and shift the gearshift lever to the "M" position. Make sure the gear position indicator to make sure that the gear is in 1st.
2) Release the brake pedal and depress the accelerator pedal slowly. Even though the accelerator pedal is not depressed, the clutch will be engaged when the vehicle speed increases.

Backing up

After the vehicle has stopped completely, depress the brake pedal and shift the gearshift lever to the "R" position. Depress the accelerator pedal slowly as when starting off in 1st gear. Before backing up, make sure that reverse gear is selected by checking the gear position indicator.

NOTE:

- *If reverse gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "R" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate malfunction.*
- *The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;*

– *If you shift the gearshift lever from the "N" to the "R" position without depressing the brake pedal.*
– *If the system is unable to re-try shifting.*

You should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "R" position again a few seconds later.

- *The system will not allow shifting to the "R" position if the vehicle speed is over about 3 km/h. If the gearshift lever is operated under this condition, the "N" indicator in the instrument cluster will blink. However, when the vehicle speed drops below about 3 km/h, the gear will be shifted to reverse. Make sure that the vehicle has stopped completely before shifting to the "R" position.*

NOTICE

On a downhill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Stopping

The vehicle can be stopped by depressing the brake pedal regardless of the gear position. This is because the clutch is automatically disengaged to prevent the engine from stopping.

- If the gearshift lever is in the "D" position, the gear will be downshifted to 1st when the vehicle stops.
- If the gearshift lever is in the "M" position, the gear will be downshifted to 1st when the vehicle stops.

⚠ WARNING

- **When stopping, for example, at a traffic light, be sure to depress the brake pedal firmly. For your safety, apply the parking brake, too, when stopping on a hill.**
- **When racing the engine, make sure that the gear is in the "N" position by checking the gear position indicator. If the accelerator is operated with the gear in any other position, the vehicle may move resulting in an unexpected accident.**
- **Do not leave your vehicle unattended while the engine is running.**
- **When leaving the vehicle, stop the engine and park the vehicle with a gear engaged. Remember, even though the transaxle is in gear, you must set the parking brake firmly. If you need to leave the vehicle with the engine running, apply the parking brakes firmly, and shift the gearshift lever to the "N" position and confirm the neutral position by checking the gear position indicator. However basically don't leave the vehicle with the engine running. Otherwise, the vehicle may move unexpectedly and may cause an accident.**

NOTICE

- **On a slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.**
- **If the gearshift lever is operated more than necessary, the system may not allow operation of the gearshift lever for a certain period of time, and the gear may not be shifted appropriately. Therefore, do not operate the gearshift lever if not necessary.**

Parking

Unlike an automatic transaxle, Auto Gear Shift does not have a parking position. The vehicle can be parked with the gearshift lever at "D" or "R" position. Remember, even though the transaxle is in gear, you must set the parking brake firmly.

1) Apply the parking brake and the brake pedal firmly.
2) While depressing the brake pedal, shift the gearshift lever to the "R" position on a downhill slope, and to the 1st position in the drive (D) mode or the "M (1)" position in the manual (M) mode on an uphill slope and confirm the gear position by checking the gear position indicator.
3) Stop the engine completely.
4) In the case of uphill/downhill slope, release the parking brake and brake pedal slowly in order to check the gear is engaged.
5) After check the vehicle stopped by the gear engaged, Apply the parking brake and the brake pedal firmly again.
6) Get out of the vehicle and put chocks under the wheels.

When you return to your vehicle, you must remember to remove the wheel chocks.

NOTE:

- *After the engine is stopped or ignition switch is OFF, the gear in the transaxle does not change even if you shift the gearshift lever in any position. Always shift the gearshift lever before turn ignition switch OFF.*
- *Check the transaxle gear position by looking at the gear position indicator, then turn the ignition switch off to stop the engine.*

⚠ WARNING

- **If the gear is not engaged properly and completely before the ignition switch is turned to "LOCK" position or the engine switch is pressed to change the ignition mode to LOCK (OFF), the vehicle may not be parked with the gear engaged. Always confirm the gear position by checking the gear position indicator when parking.**
- **On a downhill slope, the gear should be put in reverse, and in 1st gear on an uphill slope. In the case of uphill/downhill slope, after check the vehicle stopped by the gear engaged, put chocks under the wheels. Otherwise, the vehicle may move, and cause an unexpected accident. If the gear is left in the "N" position, the vehicle cannot be parked with a gear engaged.**

Parking cancel
Depress the brake pedal, turn the ignition switch to “ON” position or press the engine switch to change the ignition mode to ON, and shift the gearshift lever to the “N” position. The gear will be disengaged.

Warning functions
A warning buzzer will sound or the indicator will blink under the following conditions.

Warning buzzer
- The clutch is heated due to excessive load.
- The creeping function is being activated for a long period of time.

NOTICE

In the above cases, pull over to the side of the road and stop the engine, and then ask your authorised Maruti Suzuki workshop to inspect your vehicle. Otherwise, the clutch disc may be damaged.

- The ignition switch is turned to the “LOCK” position or the engine switch is pressed to change the ignition mode to LOCK (OFF) with the gear in 2nd, 3rd, 4th or 5th. In this case, turn the ignition switch to “ON” position or press the engine switch to change the ignition mode to ON, and shift the gearshift lever in the “N” position, shift it to the “D” or “M” or “R” position, then turn the ignition switch to “LOCK” position or press the engine switch to change the ignition mode to LOCK (OFF).
- During a stop, the driver’s door is opened with the gearshift lever in the “R”, “D” or “M” position while the engine is running.

“N” indicator blinking
When the gear indicator lamp blinks “N”, you should depress the brake pedal and shift the gearshift lever to “N” position.

“1st” indicator blinking
When the gear indicator lamp blinks “1st”, you should depress the brake pedal and shift the gearshift lever to “N” position, then shift to “D” or “M” position again a few seconds later.

“R” indicator blinking
When the gear indicator lamp blinks “R”, you should depress the brake pedal and shift the gearshift lever to “N” position, then shift to “R” position again a few seconds later.

Gearshift indicator (if equipped)

EXAMPLE



75RM327

When the gearshift lever is in a position other than “N” (Neutral), the gearshift indicator is indicated on the information display when the ignition switch is in “ON” position or the ignition mode is ON.

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated on the display while driving, we recommend you to shift up or down the gear until the arrow disappears. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transaxle, refer to “Using transaxle” in this section.

⚠ WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.
To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

NOTE:
- *The gearshift indicator is not indicated when the gear position is in “N” (Neutral).*
- *If you depress the clutch pedal while UP/DOWN arrow is indicated, the indication will disappear.*
- *The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.*

Example of the gearshift indicator

Indication	Description
	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended.
	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended.

Parking sensors (if equipped)

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumper. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obstacle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.
- The parking sensor function can be used when you press the engine switch to change the ignition mode to "ON", the gearshift lever is in the reverse position and the parking sensor switch is in "ON" position. This function is helpful in the following cases: pulling over to the curb; parallel parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

⚠ WARNING


- **The parking sensor warns you of obstacles with buzzers. However, you still have to drive with particular care.**
- **The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.**

NOTICE

- **Parking sensor are only for driver's assistance.**

Sensor locations

On rear bumper

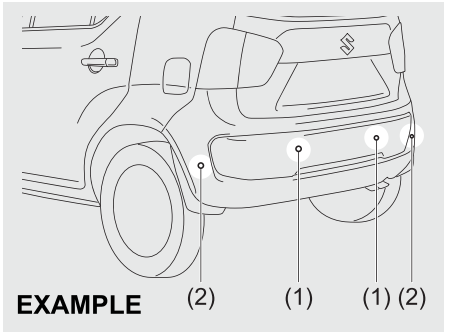

66RH047

(1) Rear center sensors (2 places)
(2) Rear corner sensors (2 places)


NOTICE

- **Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.**
- **If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by an authorised Maruti Suzuki workshop.**

Working sensors
The sensors work depending on the gearshift lever position and parking brake lever position as follows:

Gearshift lever position		Manual transaxle		Auto Gear Shift		Parking brake lever
		R	N, 1st – 5th	R	N, D, M	
Rear sensors	Center	On	Off	On	Off	No relation
	Corner	On	Off	On	Off	No relation

Approximate areas where obstacles can be detected

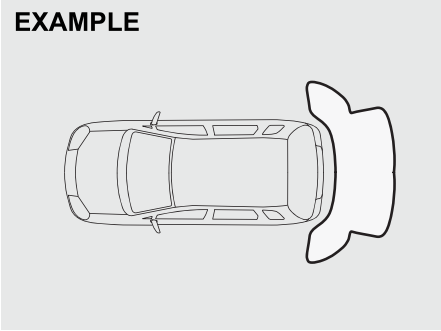

66RH048

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect an obstacle up to about 1.5 m (5 ft) from the rear of vehicle.

⚠ WARNING

- **Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.**
  - **– Sensors are covered with mud, ice or other materials (Such materials must be removed for normal operation).**
  - **– Sensors are wet from water splashes or heavy rain.**
  - **– Sensors are covered by a hand, sticker, accessory, etc.**
  - **– There is an accessory or other object attached within the sensor's sensing area.**
  - **– Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.**
  - **– The height of the bumper is changed due to alteration to the suspension or other causes.**
  - **– The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.**
  - **– The vehicle is on a rough surface, slope, gravel road or grass field.**
  - **– The vehicle is at a steep angle.**

(Continued)

⚠ WARNING

(Continued)

- **– Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.**
- **– Obstacles are too close to the sensors.**
- **– Sensors are at an angle to a highly reflective object such as glass (Ultrasonic waves are not reflected back from the obstacle).**


- **Sensors may not be able to correctly detect the following types of obstacles:**
  - **– Objects made of a thin material such as wire netting and ropes.**
  - **– Square-shaped curbstones or other objects with sharp edges.**
  - **– Tall objects with a large upper part such as a road sign.**
  - **– Low-profile objects such as curbstones.**
  - **– Sound-absorbing objects such as cotton and snow.**

NOTE:

- *Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.*
- *The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.*

How to use parking sensor

Parking sensor switch

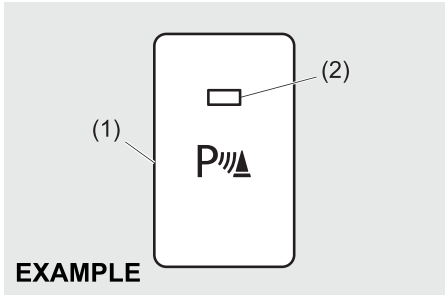

66RH120

(1) Parking sensor switch
(2) Indicator

- When the ignition mode is ON and the indicator light in the parking sensor switch is on, indicating that the parking sensor is ready for operation under the following conditions:
  – The gearshift lever is in a position.
- To deactivate the parking sensor, push the parking sensor switch and check that the indicator light goes off.

Switch position	State
EXAMPLE 	ON • When the indicator light is on and all necessary conditions are met, system becomes ready for operation.
EXAMPLE 	OFF • The system does not operate. Push the switch to turn off the indicator if you do not wish to use the parking sensor.

NOTE:
- *If you push the parking sensor switch from OFF to ON position when the ignition mode has been changed to ON by pressing the engine switch, the interior buzzer sounds.*
- *When the gearshift lever is shifted to the "R" position with the system ON, a buzzer will sound once.*

Obstacle indication by parking sensor

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound.
- A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.
- Warnings when obstacles are detected by corner sensors.

Distance (approx.)	Buzzer
45 – 60 cm (18 – 24 in)	Short beeps at short intervals
35 – 45 cm (14 – 18 in)	Short beeps at very short intervals
Less than 35 cm (14 in)	Continuous beep

- Warnings when obstacles are detected by center sensors.

Distance (approx.)	Buzzer
60 – 150 cm (24 – 59 in)	Short beeps at long intervals
45 – 60 cm (18 – 24 in)	Short beeps at short intervals
35 – 45 cm (14 – 18 in)	Short beeps at very short intervals
Less than 35 cm (14 in)	Continuous beep

Warning and indicator messages

If there is a problem or warning regarding the parking sensor system, a buzzer and the status of the indicator on the parking sensor inform it. Follow its instruction.

- The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be problem with the parking sensor system. Have your vehicle inspected by an authorised Maruti Suzuki workshop.
- The indicator does not come on when the parking sensor switch is pressed. The indicator goes off while operating. There may be a problem with the parking sensor system, Have your vehicle inspected by an authorised Maruti Suzuki workshop.

Rearview camera (if equipped)

When the gearshift lever is shifted to "R" position while the ignition mode is ON, the rearview camera system automatically shows the view behind the vehicle on the display.

⚠ WARNING


The distance viewed in the rearview camera may differ from the actual distance according to the condition of road or the load the vehicle is carrying. Since the camera display area is also limited, backing up by only looking at the display may cause an accident or a crash with an object.
The rearview camera cannot replace the driver's attention. The driver alone is responsible for parking and similar driving maneuvers.

- **Use the rearview camera only to provide driving assistance.**
- **Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes and using the rear view mirror.**
- **Make sure that the tailgate is securely closed when backing up.**

NOTICE

If you use the rearview camera for a long time when the ignition mode is ON, but the engine is not running, the battery may discharge.
Do not leave the ignition mode ON for a long time when the engine is not running.

Rearview camera location

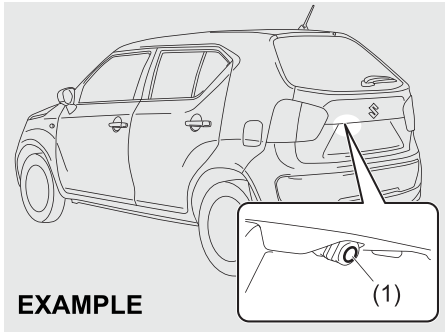

66RH049

(1) Rearview camera

The rearview camera is installed beside the license plate light.

NOTICE

The rearview camera is a precision instrument. If you strike the camera, it may be broken and cause damage resulting in a catch fire or a malfunction.
- **Do not strike the camera.**
- **Do not remove snow or mud on the camera lens with a stick.**

NOTICE

If water enters the rearview camera, it may cause a malfunction or catch fire.
Do not use high pressure water around the camera.

NOTICE

This lens is hard coated to prevent damage or discoloration. Damage or discoloration of lens may obscure the image.
- **Do not use a brush to clean lens.**
- **Do not use alcohol, benzene or thinner to clean the lens.**
- **Do not use wax on the camera lens.**

NOTE:
If body wax gets on the camera lens, wipe off the wax with a clean cloth dampened with mild detergent diluted with water, and then wipe the lens with a dry cloth.

How to use rearview camera


1) Press the engine switch to change the ignition mode to ON.
2) Shift the gearshift lever in “R” position.
   - The display automatically shows the view behind the vehicle.
   - When the gearshift lever is shifted from “R” to another gearshift lever position, the display returns to the previous display.

NOTE:
The rearview camera display has first priority in any display mode. However, the rearview camera display does not show the rear view while the system is initializing.


Display range of rearview camera

The rearview camera display shows the area behind the rear end of the tailgate. The display cannot show objects which are close to the bumper or under the bumper.
The rearview camera display cannot show obstacles which are higher than the camera. Upper parts of tall objects such as road signs cannot be viewed on the display.

Display range of rearview camera

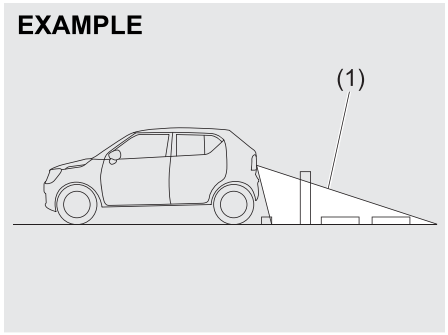

75RM293

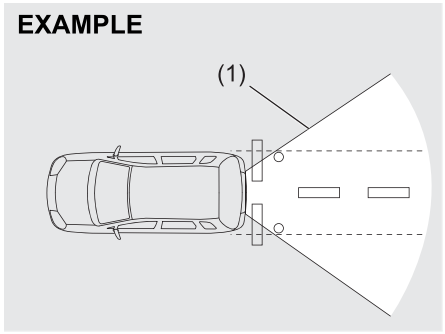

54P000370

(1) Display range


NOTE:

- *Images shown on the display from the rearview camera are reversed images (mirror images).*
- *The colors of objects on the rearview camera may differ from the actual object colors.*
- *The rearview camera display may be difficult to see under the following conditions, but this is not a system malfunction.*
  - *In dark areas, on a rainy day or at night.*
  - *When the temperature around the lens is too high/low, or the camera is wet such as on a rainy day or during periods of high humidity (dew condensation may occur on the camera lens).*
  - *When a foreign object such as mud or a drop of water is stuck around the camera lens.*
  - *When strong light directly enters the camera (vertical lines may be seen on the display).*
  - *Under fluorescent light (The display may flicker).*
  - *When the outside temperature is low (the image on the display may be darkened).*

Rearview camera screen indication

The distance viewed in the rearview camera may differ from the actual distance according to the condition of the road or the load the vehicle is carrying.

Uphill incline behind the vehicle

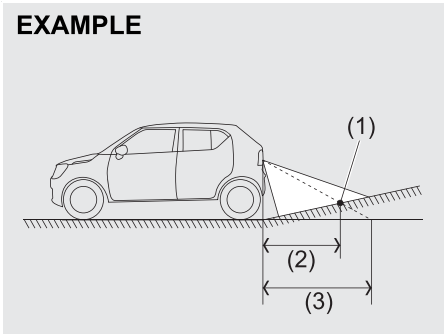


75RM294

(1) Object
(2) Actual distance
(3) Distance on the display

When there is an uphill incline behind the vehicle, the object shown on the display appears farther away than the actual distance.

Downhill incline behind the vehicle

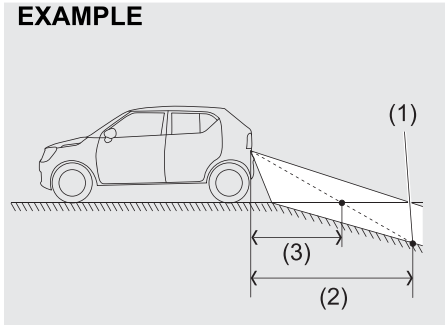

(1) Object
(2) Actual distance
(3) Distance on the display

When there is a downhill incline behind the vehicle, the object shown on the display appears closer than the actual distance.


If the rear view from the rearview camera is not shown or there is a poor image

- If the rear view from the rearview camera is not shown.
  – Check that the ignition mode is ON.
  – Check that the gearshift lever is shifted to “R” position.

- If the image from the rearview camera is poor.
  – Check that the camera lens is not dirty.
  – Check that light from the sun or the beam of the headlights from the vehicle behind is not shining directly into the lens.

If the rearview camera system is still not working properly after checking the above, have the system inspected by an authorised Maruti Suzuki workshop as soon as possible.

Braking

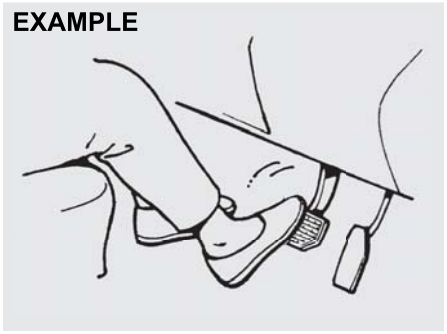

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

⚠ WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-assisted brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

⚠ WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake assist system

When you slam the brakes on, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:
If you quickly and forcefully depress the brakes, you may hear clicking sound by the brake assist system operation. This is normal and indicates that the brake assist system is activated properly.

Anti-lock brake system (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.
The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal move a little while the ABS is operating.

NOTE:
- *The ABS will not work if vehicle speed is under about 9 km/h.*
- *If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.*
- *You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.*

⚠ WARNING

- **On some types of loose surfaces (such as gravel, snow-covered roads, etc.), the stopping distance required for a vehicle with ABS may be slightly greater than the one required for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tires are able to plow the gravel or snow layer, shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.**


(Continued)

⚠ WARNING

(Continued)

- **On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.**
- **In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive too fast.**

EXAMPLE



(1) (2)

54MN069

(1) ABS warning light
(2) Brake system warning light

⚠ WARNING

- **If the ABS warning light (1) on the instrument cluster comes on and stays on while driving, there may be a problem with the ABS system. Ask your authorised Maruti Suzuki workshop to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.**
- **If the ABS warning light (1) and the brake system warning light (2) on the instrument cluster simultaneously stay on or come on while driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask your authorised Maruti Suzuki workshop to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.**


How ABS works

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself.

⚠ WARNING

The ABS may not work properly if tires or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tires or wheels, use only the size and type specified in this owner's manual.


DRIVING TIPS

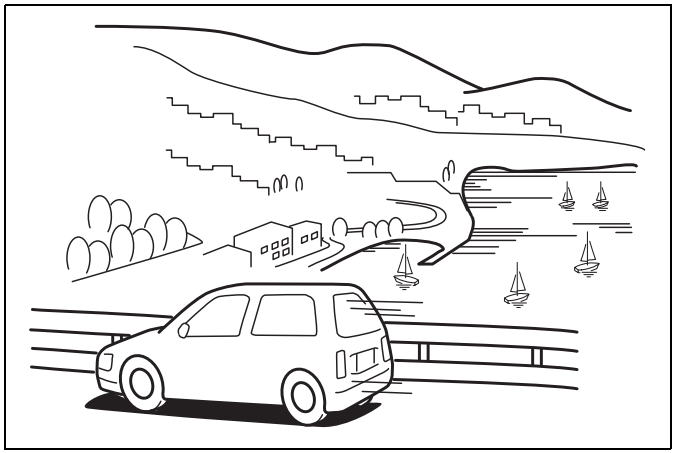

60G409

Running-in 4-1
Catalytic converter 4-1
Improving fuel economy 4-2
Highway driving 4-3
Driving on hills 4-3
Driving on slippery roads 4-4
Driving on wet roads 4-6
Do's and Dont's for safe driving 4-6
Margin for safety 4-9

EXAMPLE

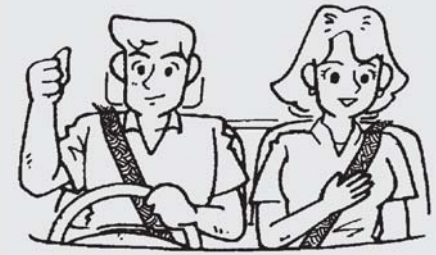

68PHM4001

⚠ WARNING

- **WEAR YOUR SEAT BELTS AT ALL TIMES. Even though air bags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to "Seat belts and child restraint systems" section for instructions on proper use of the seat belts.**
- **Never drive under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated or under stress.**

Running-in


NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- **After starting, do not race the engine. Warm it up gradually.**
- **Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.**
- **Start off from a stop slowly. Avoid full throttle starts.**
- **Avoid hard braking, especially during the first 320 km of driving.**
- **Do not drive slowly with the transaxle in a high gear.**
- **Drive the vehicle at moderate engine speeds.**
- **Do not tow a trailer.**

Catalytic converter

EXAMPLE

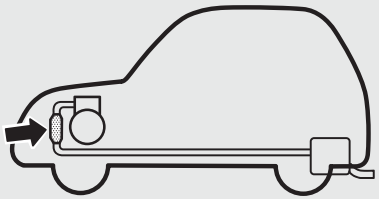

80G106

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- **Maintain the engine in the proper operating condition.**
- **In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.**
- **Do not turn off the engine or interrupt the ignition when the transaxle is in gear and the vehicle is in motion.**
- **Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.**
- **Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.**
- **Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.**
- **Do not allow the fuel tank to get near the empty level.**

EXAMPLE



54G584S

⚠ WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Improving fuel economy

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you are to wait for more than a minute while you are parked, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

Avoid sudden acceleration

Sudden acceleration starting from rest or while driving will consume fuel unnecessarily and shorten engine life. Start off slowly.


Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a slow, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

Keep the air cleaner clean

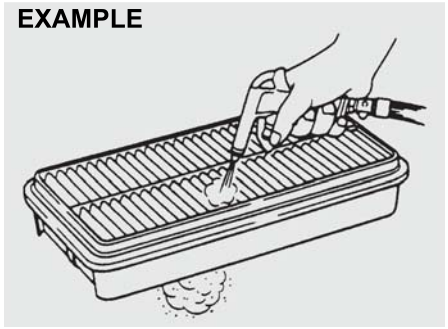

60A183S

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Keep weight to a minimum
The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Keep tire pressures correct
Under-inflation of the tires can waste fuel due to increased running resistance of the tires. Keep your tires inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.


Highway driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tires due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.


Driving on hills

Manual transaxle

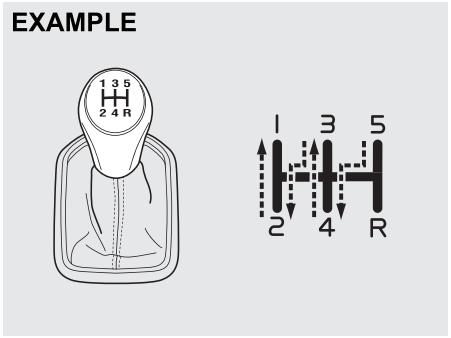

75RM260

Auto Gear Shift

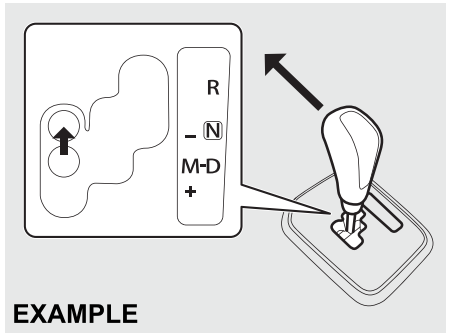

66RH046

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

While moving uphill/gradient from a stand still condition

- Apply the parking brake firmly so that the vehicle does not roll backwards.
- Depress the Clutch pedal and Shift the gearshift lever to 1st Select position.
- Do not slip the clutch.
- When ready to start, press accelerator pedal and slowly release the clutch pedal simultaneously. When the vehicle starts to move, gradually release the parking brake.


⚠ WARNING

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE

When descending a downhill, Never turn the ignition key to "LOCK" position or press the engine switch to change the ignition mode to LOCK (OFF). Emission control system damage may result.

Driving on slippery roads

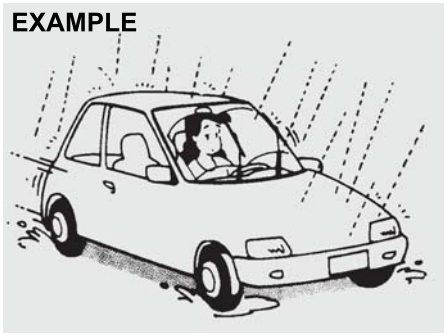

60G089S

On wet roads, you should drive at a lower speed than you do on dry roads due to possible slippage of tires during braking. When driving on icy, snow-covered or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

Tire chains

Tire chains should only be used if they are needed to increase traction or are required by law. Check that the chains you use are the correct size for your vehicle's tires. Also check that there is enough clearance between the fenders and the chains as installed on the tires.

Install the chains on the front tires tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

- **If you hear the chains hitting against the vehicle body while driving, stop and tighten them.**
- **If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.**

Stuck vehicle

If your vehicle gets stuck in snow, mud or sand, follow the directions below:

1) Shift the transaxle back and forth between the first gear and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting.
   Do not race the engine. Excessive wheel spin will cause the tires to dig deeper, making it more difficult to free the vehicle.
2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult your authorised Maruti Suzuki workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by a towing cable or chain secured to the towing hook either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame hooks" in the "OTHER CONTROLS AND EQUIPMENT" section.

⚠ WARNING


Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transaxle damage.

Driving on wet roads

EXAMPLE

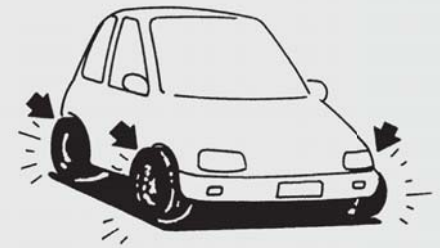

82PHM04001

NOTICE

- **When driving on wet roads, avoid driving through large amount of standing water on the road. Large amount of water entering the engine compartment may cause damage to the engine and or electrical components.**
- **If stuck in deep water, do not start the engine.**
- **Water is incompressible substance, water inside engine is harmful to the engine.**

⚠ WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions.

- **Check that your tires are in good condition and always maintain the specified tire pressure. Refer to "Tires" in the "INSPECTION AND MAINTENANCE" section for details.**
- **Do not use tires other than those specified by MARUTI SUZUKI. Never use different sizes or types of tires on the front and rear wheels. For information regarding the specified tires, refer to the tire information label located on the driver's door lock pillar.**
- **Never use oversized tires or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tires may also rub against the fender over bumps, causing vehicle damage or tire failure.**
- **After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.**

Do's and Dont's for safe driving


Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

Following are basic rules for safe driving. Read them carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your vehicle.

Starting

1) Adjust the driver's seat for the proper driving posture.
2) Adjust the rear view mirror so as to obtain the best possible rear view.

EXAMPLE

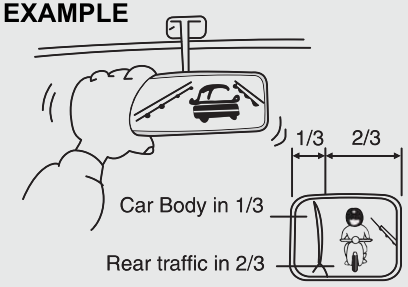


72F-08-001

3) Before moving, look around your vehicle to confirm safety.
4) Don't accelerate suddenly, since it is dangerous and wastes fuel.

General Driving

1) Be sure to stop before a stop light or stop sign. When moving into an intersection without any traffic lights or signs, drive slowly to confirm safety.
2) Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead makes a sudden stop.


EXAMPLE

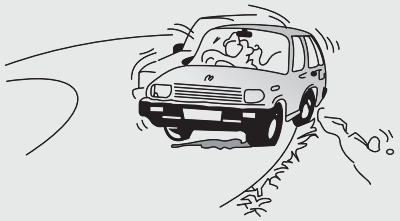

72F-08-008

3) Turn ON the turn signal at least 30 meters before making a turn or changing the lane so as not to be hit.
4) Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or skidding may occur.
5) When overtaking other vehicles, watch out for oncoming vehicles and carefully ensure safety.
6) Don't attempt zigzag driving as it will hinder your control over the vehicle and may cause an accident.
7) Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.
8) The higher the speed, the narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels fatigued.

EXAMPLE

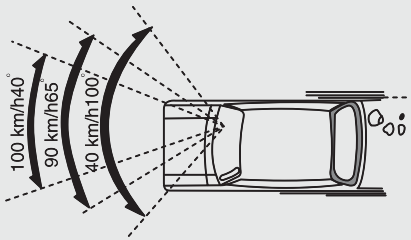


72F-08-015

9) Do not attempt sharp handling during high speed driving. You may lose your control over your vehicle.
10) When overtaking or changing lanes while driving at a high speed, keep ample vehicle-to-vehicle distance.

Braking

EXAMPLE

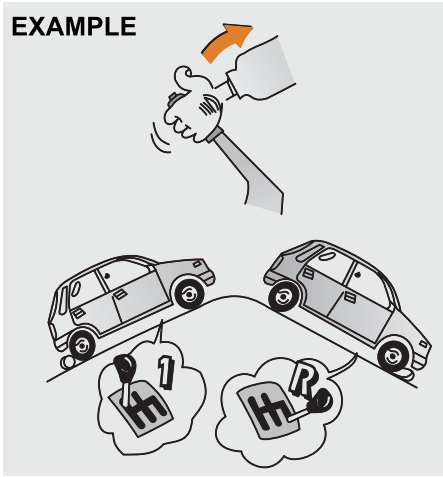

72F-08-011

1) Use the parking brake when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety.
2) Don't use hand-braking unless unavoidable. It causes the vehicle to skid and a collision may occur. It is especially dangerous when the tyres are worn out as they skid more.

EXAMPLE



72F-08-012

Use foot brake in three stages
1. Warn the vehicle behind you.
2. Gradually apply the brake.
3. Bring the vehicle to a halt.

3) When driving downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in reduction of brake effectiveness.

Long Distance Driving

1) Be sure to perform safety checks before starting a trip.
2) Take rest at regular intervals to prevent accidents which may occur due to feeling sleepy or tired.

Night Time Driving


EXAMPLE



72F-08-020

1) Drive at lower speeds during the night than in the daytime, as the visual range is restricted at night.
2) Avoid overtaking other vehicles at night. Darkness bothers your sense of speed and hinders your judgment of vehicle-to-vehicle distance.

EXAMPLE

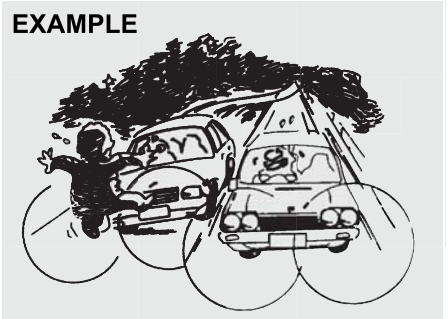

72F-08-021

3) Don't use headlights on high beam unless its use is inevitable. It may cause visual impairment to the driver of the oncoming vehicle or the vehicle ahead of you, which may cause an accident.
4) Always keep the window glasses clean. Don't operate the windshield wiper when the windshield glass is dry else the wiper blade and glass may get damaged.

Margin for safety


It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.

- Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't accelerate suddenly, steer sharply or stop suddenly.
- Keep ample gaps between driving schedules.
- Observe traffic rules and regulations.

Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, lengthens its life, gives better fuel efficiency and ensures a comfortable driving experience.
Follow the do's and dont's listed, and driving will never be the same again.


OTHER CONTROLS AND EQUIPMENT

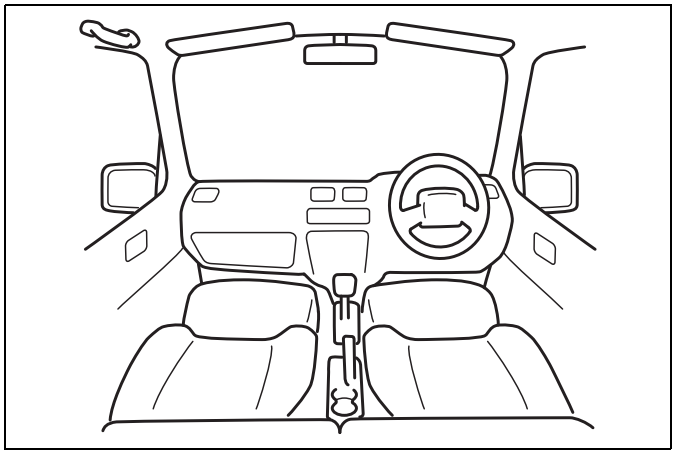


60G407

Fuel filler cap 5-1
Engine hood 5-2
Sun visor 5-4
Interior light 5-5
Accessory socket 5-6
AUX/USB socket (if equipped) 5-7
Assist grips 5-7
Glove box 5-7
Cup holder and storage area 5-8
Footrest 5-10
Floor mats (if equipped) 5-10
Luggage compartment cover (if equipped) 5-11
Luggage compartment board 5-11
Frame hooks 5-12
Heating and air conditioning system 5-14
Manual heating and air conditioning system 5-15
Automatic heating and air conditioning system
(climate control) (if equipped) 5-19
Radio antenna 5-24
Installation of radio frequency transmitters 5-25
Audio system (if equipped) 5-25

Fuel filler cap

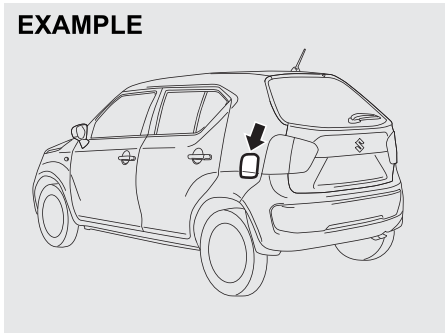


66RH147

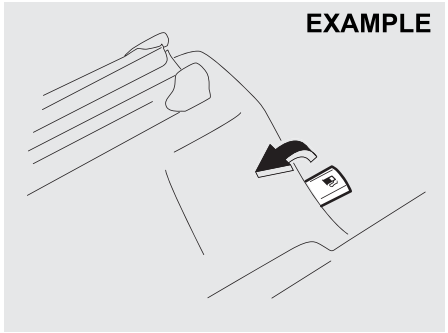

66RH050

A fuel filler cap is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard side of the driver's seat and locked by simply closing the door.

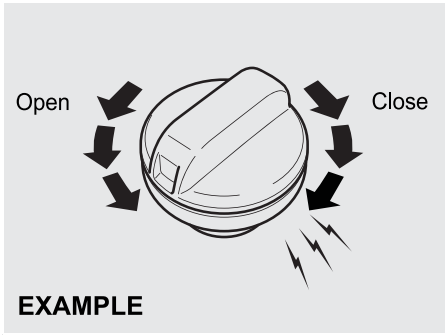


57L51093


To remove the fuel filler cap:
1) Open the fuel filler door.
2) Remove the cap by turning it counter-clockwise.

⚠ CAUTION

Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

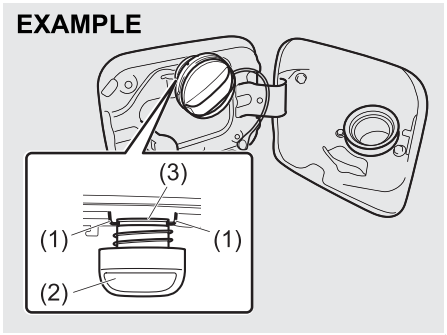

75RM057

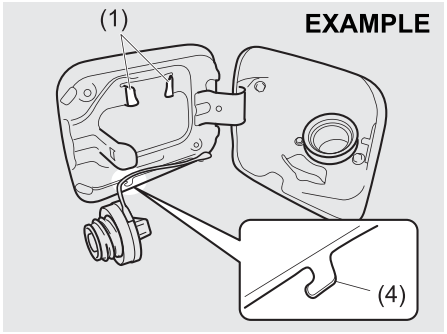

75RM058

NOTE:
The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3), or the hook (4) also holds the fuel filler cap when refueling.

To reinstall the fuel filler cap:
1) Turn the cap clockwise until you hear several clicks.
2) Close the fuel filler door.


⚠ WARNING

Fuel is extremely flammable. Do not smoke when refueling, and check that there are no open flames or sparks in the area.

⚠ WARNING


If you need to replace the fuel cap, use a genuine MARUTI SUZUKI cap. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage in the event of an accident.

Engine hood

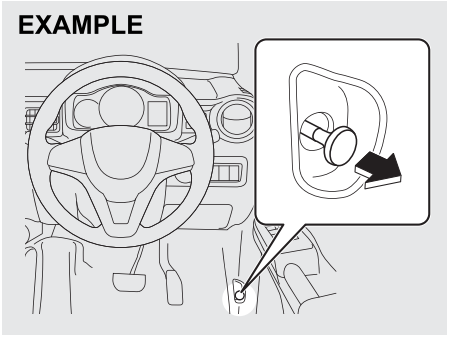

66RH051

To open the engine hood:
1) Pull the hood release handle located on the outboard side of the driver's side. This will disengage the engine hood lock halfway.

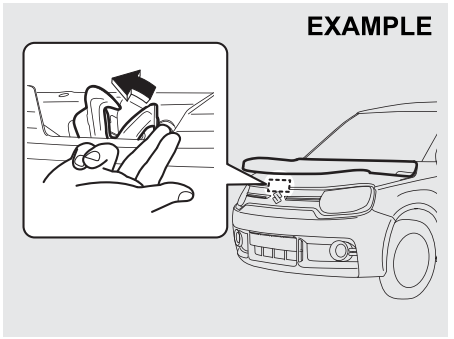

66RH148


2) Push the under-hood release lever sideways with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

⚠ CAUTION

The release lever can be hot enough to burn your finger right after driving. Touch the lever after it becomes cool enough.

NOTICE

Check that the wiper arms are not raised before you lift up the engine hood to avoid damaging the wiper arms and the engine hood.

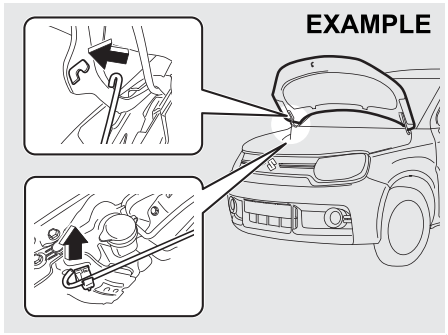

66RH149


3) While holding the hood, pull the prop rod out from the holding clip, and then insert the end of the rod into the designated hole in the hood.

⚠ CAUTION

- **The prop rod can be hot enough to burn your finger right after driving. Touch the rod after it becomes cool enough.**
- **Insert the end of the rod into the hole securely. If the rod slips out, you may get caught in the closing hood.**
- **The rod may slip out when the hood is blown by wind. Be careful on windy days.**

To close the engine hood:

1) Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back into the holding clip.

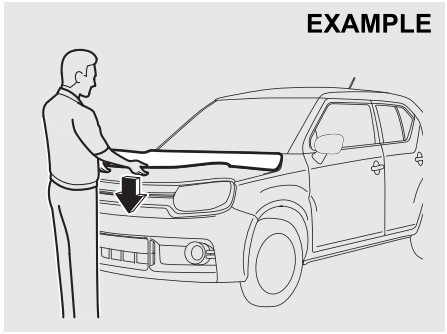

66RH150

2) Lower the hood to about 20 cm above the hood latch, and then let it drop down. Check that the hood is securely latched after closing.

⚠ WARNING

Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.


⚠ CAUTION

To avoid injury, check that no part of the occupant's body such as hands or head is in the path of the hood when closing it.

NOTICE

Pressing the hood from above may damage the hood.

Sun visor

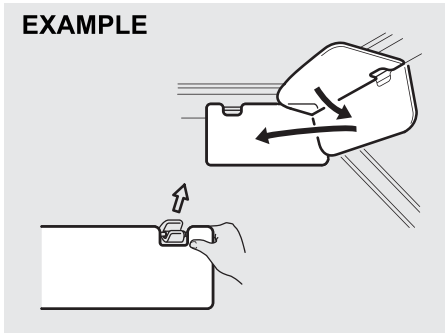


79J161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE
When unhooking and hooking a sun visor, be sure to handle it by the hard plastic parts or the sun visor can be damaged.

Card holder (if equipped)

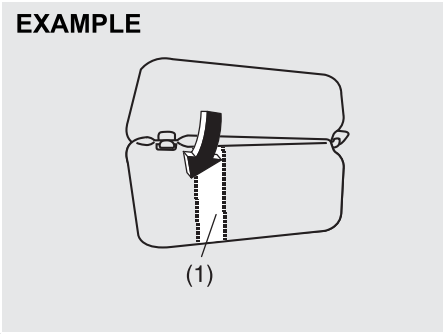


74LHT0516

(1) Card holder

You can put a card in the card holder (1) on the back of the sun visor.

NOTICE
When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the holder. The heat may distort them.

Vanity mirror (if equipped)

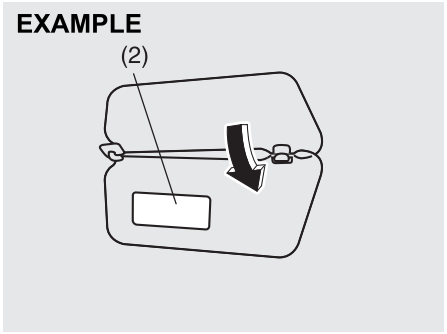


74LHT0532

(2) Vanity mirror

⚠ WARNING
When using the vanity mirror, do not move too close to a front air bag location or lean against it. If the front air bag is accidentally inflated, it could hit you hard.

Interior light

Front

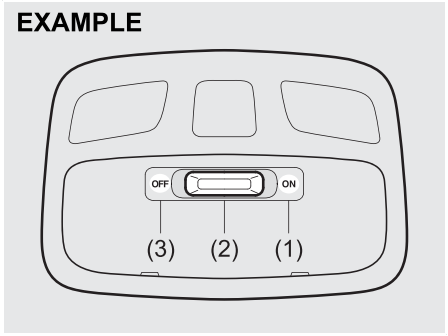

62R0294

These light switches have three or four positions which function as described below:


ON (1)
- The light comes on and stays on regardless of whether the door is open or closed.
- To prevent battery from discharging, the light will be automatically turned off when a period of 15 minutes has elapsed after the light comes on and other operations are not done.

DOOR (2)
- The light comes on when any of the doors (including the tailgate) is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out.
- If all doors are closed, the light comes on for about 15 seconds when the ignition key is pulled out from the ignition switch or the engine switch is pressed to change the ignition mode from ON to LOCK (OFF). After 15 seconds, the light will fade out.
- To prevent battery from discharging, the light will be automatically turned off when a period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

If you perform any of the following procedures before the light fading out, the light will start to fade out immediately.
- Inserting the ignition key into the ignition switch or pressing the engine switch to change the ignition mode to ACC or ON.
- Locking all doors by operating the key, keyless entry transmitter, keyless push start system remote controller, power door locking switch or request switch.

OFF (3)
The light remains off even when the door is opened.

Courtesy light (if equipped)

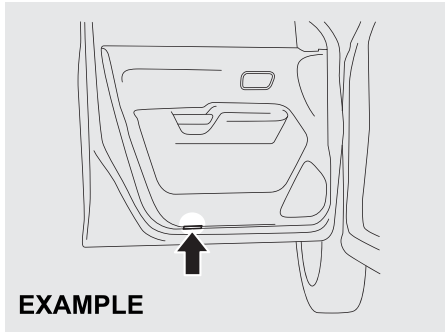


66RH128

Each front door has a courtesy light on its inside bottom. It lights automatically when the door is opened.

NOTE:
If you leave any door open, the light will automatically be turned off after about 15 minutes to prevent the battery from discharging.

Luggage compartment (if equipped)

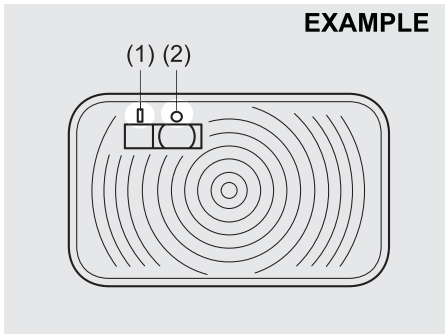

75RM009


When you open the tailgate with the luggage compartment light switch in ON position (1), the light comes on and remains on as long as you keep the tailgate open.

- To save the battery, the light will be automatically turned off when a period of 15 minutes has elapsed after the tailgate is opened and other operations are not done.

When the luggage compartment light switch is in OFF position (2), the light remains off regardless of whether the tailgate is open or close.

NOTICE


Do not leave the tailgate open with the luggage compartment light switch in ON position for a long time, or the battery will discharge.

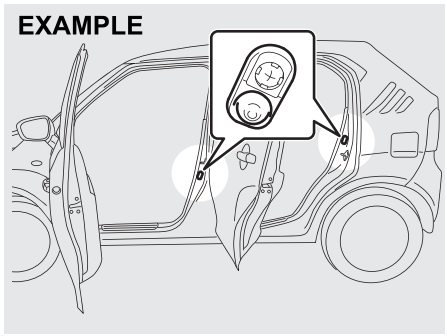

75RM193

NOTE:
The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber protrusion) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber protrusion.

Accessory socket

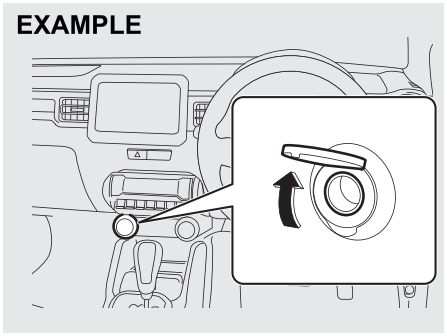


66RH129

The accessory socket will work when the ignition switch is in “ACC” or “ON” position, or the ignition mode is ACC or ON.
This can be used to provide 12 volt/120 watt/10 ampere power for electrical accessories. Check that the cap is closed when socket is not in use.

NOTICE

Use of inappropriate electrical accessories can cause damage to your vehicle’s electrical system. Make sure that any electrical accessories you use are designed to plug into this type of socket.


AUX/USB socket (if equipped)

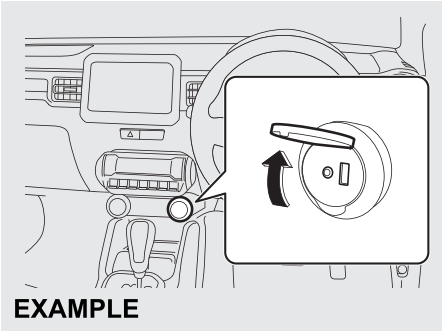

66RH130

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to "Audio system" in this section.

Assist grips

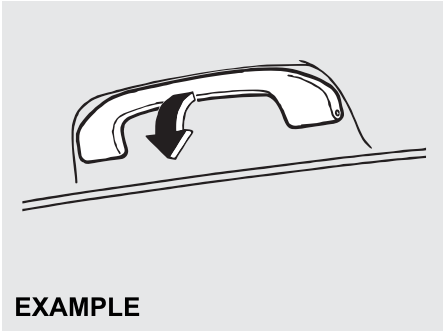


54G249

Assist grips are provided for convenience.


NOTICE
To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Glove box

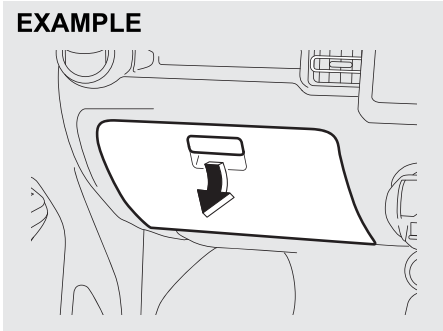

66RH055

To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

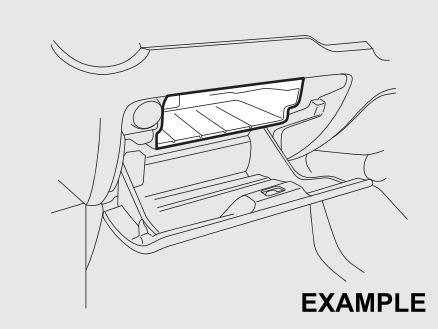


66RH056

There is a recess in the glove box.

⚠ WARNING

Never drive with the glove box lid open. It could cause injury if an accident occurs.

Cup holder and storage area

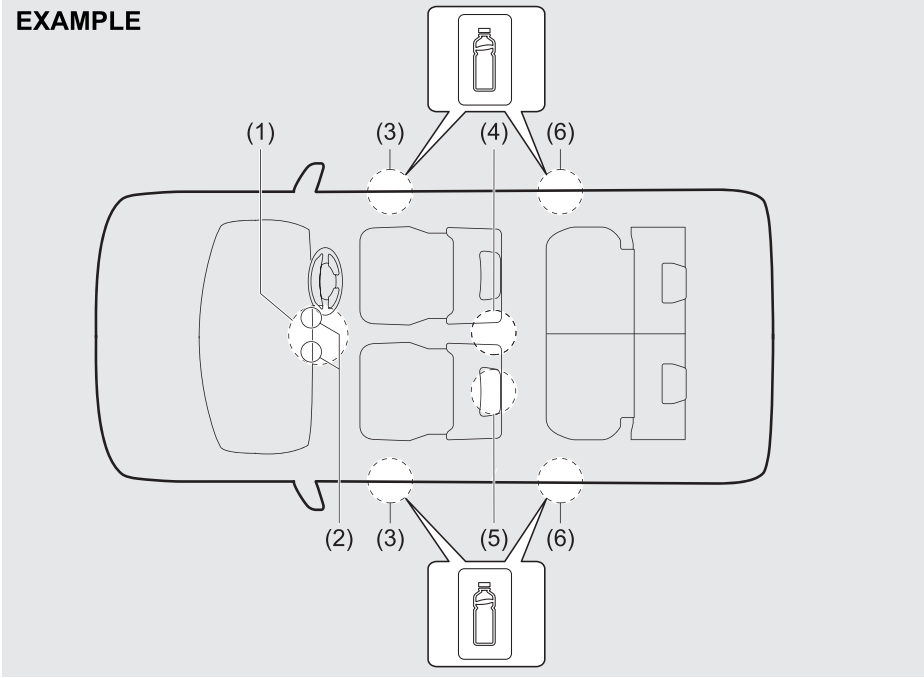

66RH057

(1) Center console tray
(2) Front cup holders
(3) Front bottle holder
(4) Rear cup holder
(5) Front seat back pocket (if equipped)
(6) Rear bottle holder

Center console tray (1)

⚠ WARNING

Do not place any objects which may fall out from the pocket when the vehicle is moving. Failure to take the precaution may result in an object interfering with the pedals and causing a loss of vehicle control or an accident.

Front cup holders (2) / Rear cup holder (4)

Use the rear cup holder to put a cup with a lid or a bottle with a cap. Also, you can put small articles in the rear cup holder.

⚠ WARNING


Failure to take the precautions listed below could cause personal injury or vehicle damage.

- **Be careful when you are using the cup holders to hold a cup containing hot liquid. Spilling out hot liquid can cause burn injury.**
- **Do not use the cup holders to hold sharp-edged, hard or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.**
- **Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.**

Front bottle holder (3) / Rear bottle holder (6)

You should only place a bottle with a cap in the holder.

Front seat back pocket (5) (if equipped)

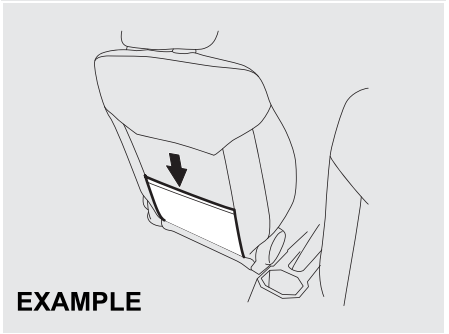


66RH058

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

⚠ CAUTION

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.


Footrest

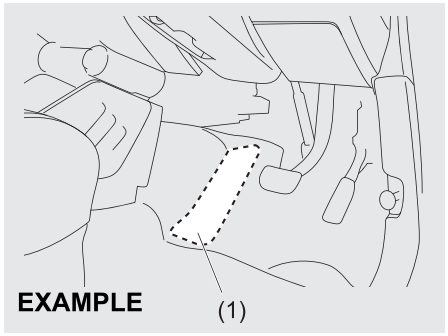

66RH059

Use the footrest (1) as a support for your left foot.

Floor mats (if equipped)

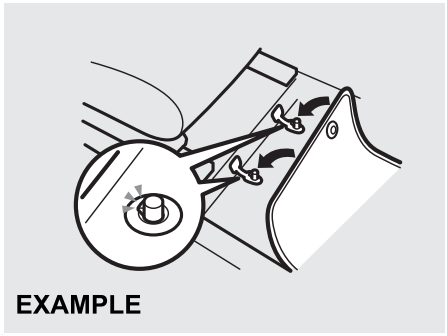

72M10201

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, MARUTI genuine floor mats are recommended.
Whenever you put the driver's side floor mat back in the vehicle after it has been removed, hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.


When you replace the floor mats in your vehicle with a different type such as all weather floor mats, we highly recommend to use MARUTI genuine floor mats for proper fitting.

⚠ WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- **Check that the floor mat grommets are hooked to the fasteners.**
- **Never place additional floor mats on top of the existing floor mat.**

Luggage compartment cover (if equipped)

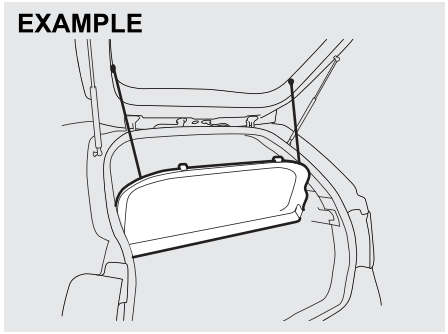


66RH060

Luggage or other cargo placed in the luggage compartment is hidden from view by a luggage compartment cover.

⚠ WARNING

Do not carry items on top of the luggage compartment cover, even if they are small and light. Objects on top of the cover could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.

Luggage compartment board

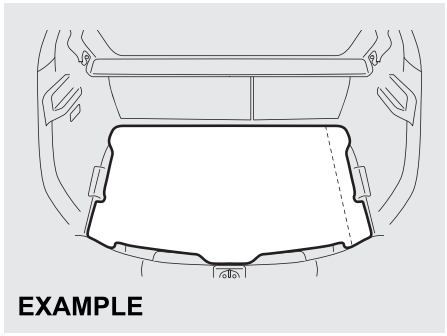

66RM05001

Your vehicle is equipped with the luggage compartment board in the luggage compartment.

⚠ WARNING

Objects that extend higher than the luggage compartment cover (if equipped) can obstruct the driver's rear view, which can cause an accident. These objects can also become damaged or can damage the tailgate. Do not carry items that extend higher than the luggage compartment cover.

⚠ CAUTION

If you are not careful when handling the luggage board, you could be injured.
Handle the luggage board carefully when removing or installing it.

NOTICE

Do not apply undue force to the board which is held open, and do not hold open the board while driving. Doing so could break the board or the interior.

Frame hooks


Your MARUTI SUZUKI does not recommend you use the frame hooks for towing another vehicle. MARUTI SUZUKI was originally designed to tow your vehicle on the road for emergency towing.
If your vehicle needs to be towed in an emergency, refer to “Towing” in the “EMERGENCY SERVICE” section.

⚠ WARNING

Observe the following instructions when using frame hooks. The towing hook or vehicle body may break and cause serious injury or damage:
- **Do not use the frame hooks for towing another vehicle.**
- **Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the towing hook.**

In such case, we recommend that you contact a professional service.


Front

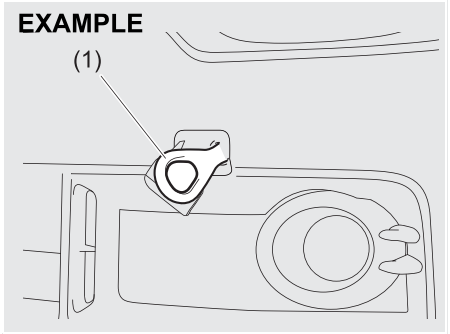

75RM012


The towing hook (1) is provided on the front of the vehicle for use in emergency situations only.

To install the hook (1), follow the procedure below.

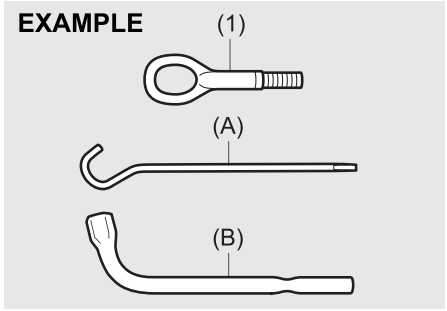

75RM014


1) Pick up the towing hook (1), jack handle (A) and wheel brace (B) in the luggage compartment.

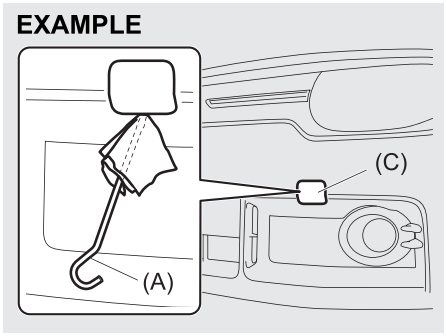

75RM015

2) Remove the cover (C) by using a jack handle (A) covered with a soft cloth as shown in the illustration.


NOTE:
Do not use excessive force as it may damage the cover strap.

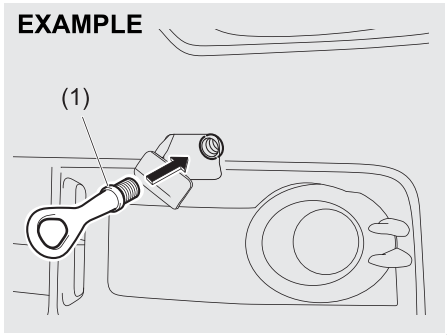

75RM016

3) Install the towing hook (1) by hand.

NOTE:
We recommend that fasten the cover with tape to prevent damage during towing.

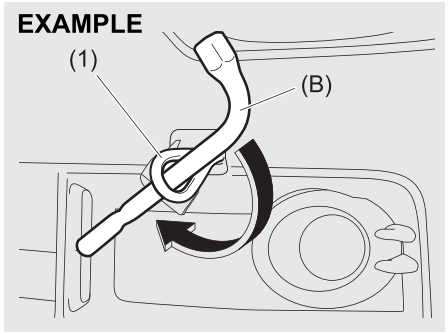


75RM017

4) To tighten the towing hook (1), turn it clockwise by using a wheel brace (B) until the hook (1) is securely installed.

To remove the towing hook (1), reverse the installation procedure.

Rear

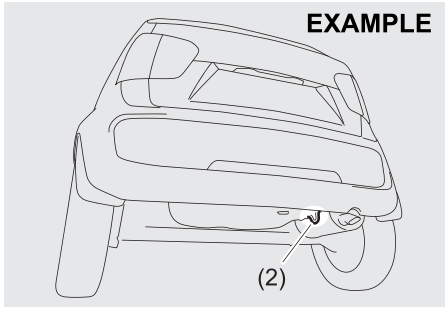


75RM018

The frame hook (2) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only.

NOTICE

When you use the frame hook (2), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, the vehicle body or the drive system.
- **Do not accelerate suddenly.**
- **Do not tow the vehicle heavier than your vehicle.**

Other holes

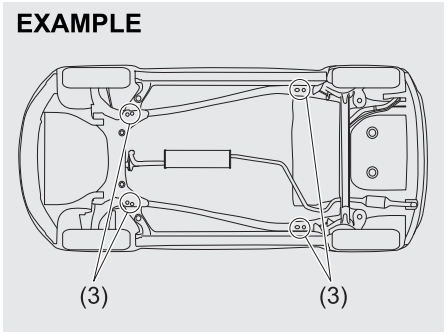

66RM05002

The frame holes (3) are provided only for transporting by a car carrier trailer.


⚠ WARNING

Do not use the frame holes (3) for towing purpose. These holes may break and cause serious injury or damage.

Heating and air conditioning system

There are two types of air conditioning systems as follows:
- Manual heating and air conditioning system (if equipped)
- Automatic heating and air conditioning system (climate control) (if equipped)


Air outlet

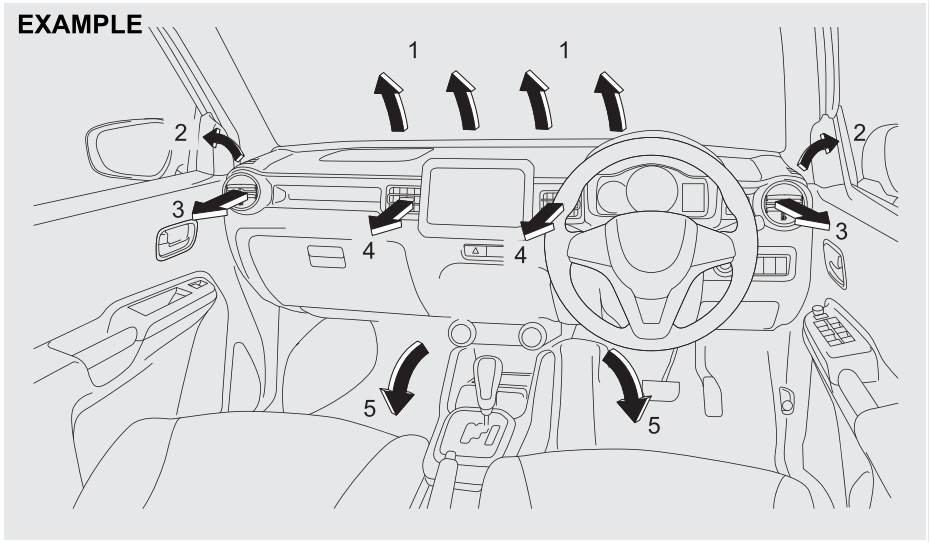

66RH131

1. Windshield defroster outlet
2. Side defroster outlet
3. Side outlet
4. Center outlet
5. Floor outlet


Side outlet

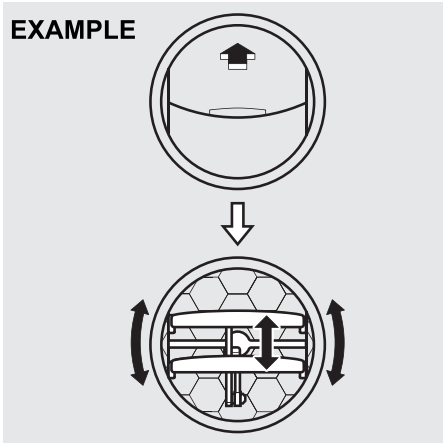

75RM019

When open, air comes out regardless of the air flow selector position.

Center outlet

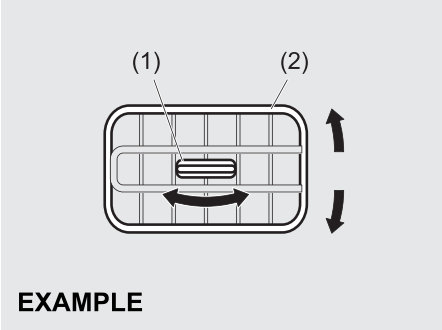

66RH123


Move the knob (1) horizontally or the case (2) vertically to adjust the direction of airflow as desired.

⚠ CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Manual heating and air conditioning system

Description of controls

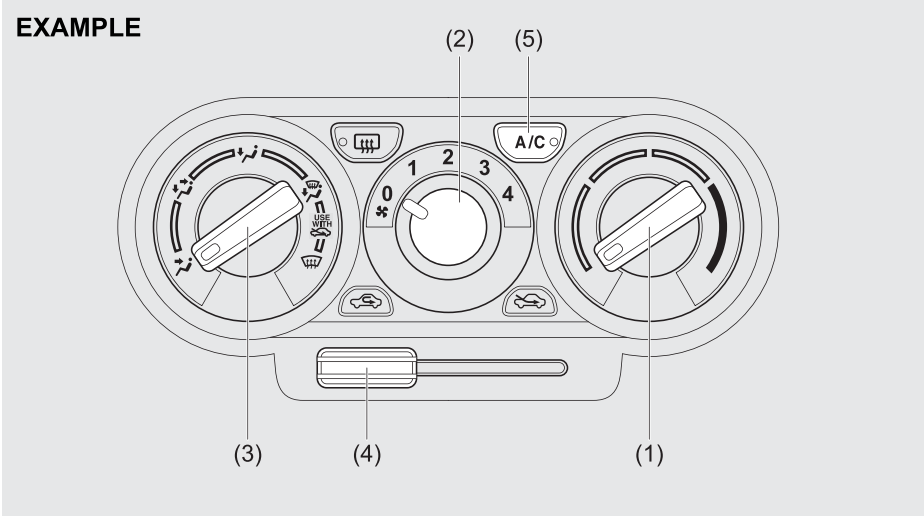


75RM060

Temperature selector (1)
This is used to select the temperature by turning the selector.

Blower speed selector (2)
This is used to turn on the blower and to select blower speed by turning the selector.


Air flow selector (3)

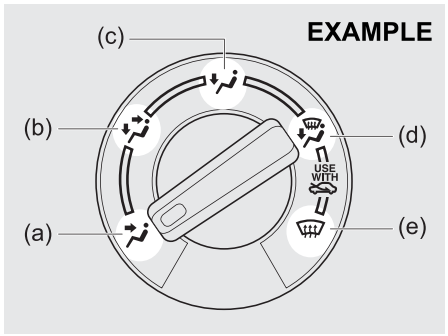

75RM022

This is used to select one of the following functions.


VENTILATION (a)

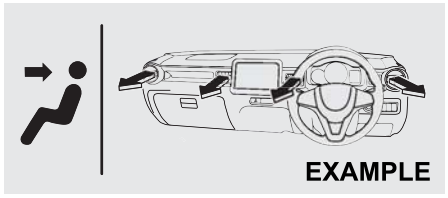

66RH132

Temperature-controlled air comes out of the center and side air outlets.


BI-LEVEL (b)

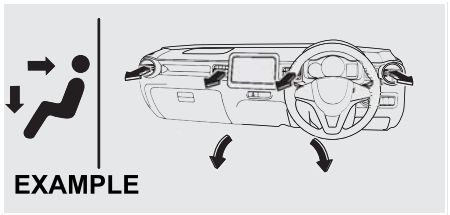

66RH133

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.


HEAT (c)

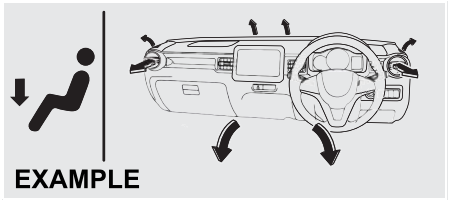

66RH134

Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.


HEAT & DEFROST (d)

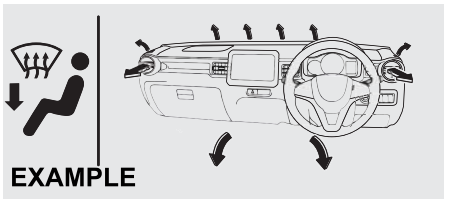

66RH135

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.


DEFROST (e)

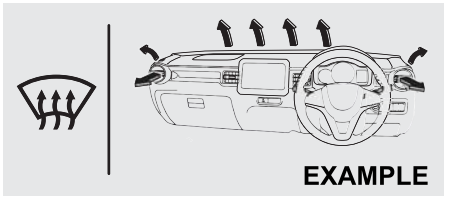

66RH136

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

Air intake selector (4)

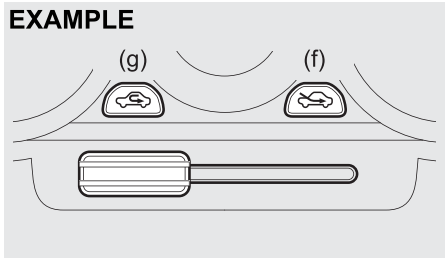

75RM059

This selector is used to select the following modes.

FRESH AIR (f)
When this mode is selected by moving the lever to right, outside air is used.

RECIRCULATED AIR (g)
When this mode is selected by moving the lever to left, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down the interior.

NOTE:
If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select FRESH AIR.

Air conditioning switch (5)
To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch (5). With this "A/C" switch operation, a indicator light will come on when the air conditioning system is on. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System operating instructions

Natural ventilation
Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation
The control settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)
Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

Quick heating (using recirculated air)
The control settings are the same as for normal heating except you select RECIRCULATED AIR. If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating
Select BI-LEVEL and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling
Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCULATED AIR increases cooling efficiency.


Quick cooling (using recirculated air)
The control settings are the same as for normal cooling except you select RECIRCULATED AIR and the highest blower speed.

NOTE:
- *If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select FRESH AIR.*
- *If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.*

Dehumidifying
Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch.

NOTE:
Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

EXAMPLE

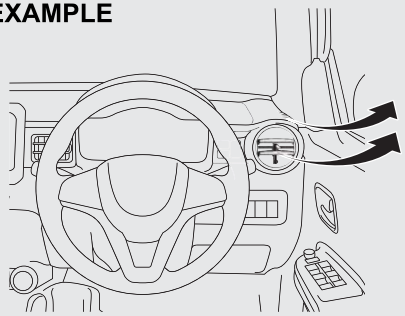

66RH137

NOTE:
If you need maximum defrosting:
- *select DEFROST and FRESH AIR,*
- *set the blower speed selector to high,*
- *adjust the temperature selector to the hot end,*
- *turn on "A/C" switch, and*
- *adjust the side outlets so the air blows on the side windows.*

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in the "INSPECTION AND MAINTENANCE" section. Have this job done by your authorised Maruti Suzuki workshop as the lower glove box must be lowered for this job.


NOTE:
Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE
Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Automatic heating and air conditioning system (climate control) (if equipped)

Description of controls


EXAMPLE

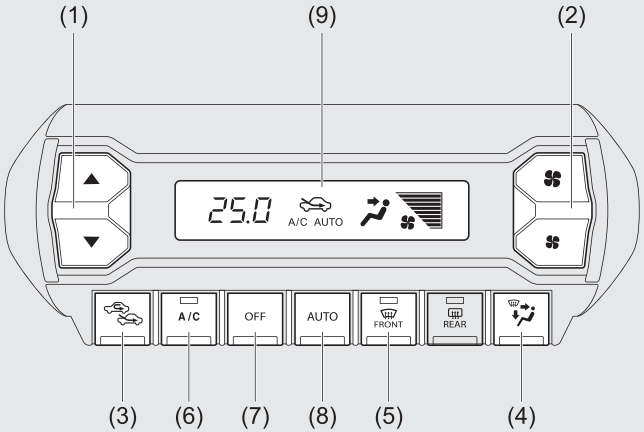

75RM025

(1) Temperature selector
(2) Blower speed selector
(3) Air intake selector
(4) Air flow selector
(5) Defrost switch
(6) Air conditioning switch
(7) "OFF" switch
(8) "AUTO" switch
(9) Display

Temperature selector (1)

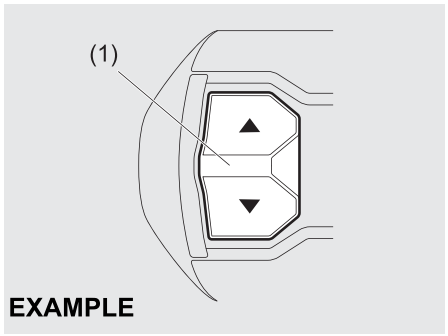


75RM026

Push the temperature selector (1) up or down to adjust the temperature.

NOTE:
If you push the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling. The temperature of the air from the outlets may change suddenly while "LO" or "HI" is displayed, but this is normal.

NOTE:
When you change the unit of temperature in the information display, the unit of temperature in the air conditioning system will be changed. Refer to "Information display (instrument cluster with tachometer)" in the "BEFORE DRIVING" section for details.

Blower speed selector (2)

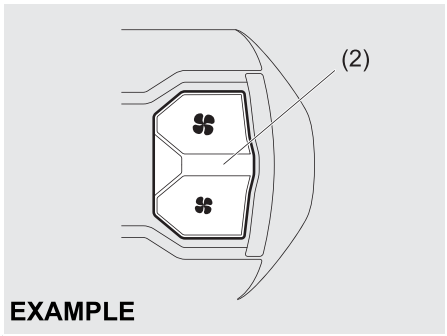


75RM027

The blower speed selector (2) is used to turn on the blower and to select blower speed.

If "AUTO" switch (8) is pushed, the blower speed will vary automatically as the climate control system maintains the selected temperature.

Air intake selector (3)

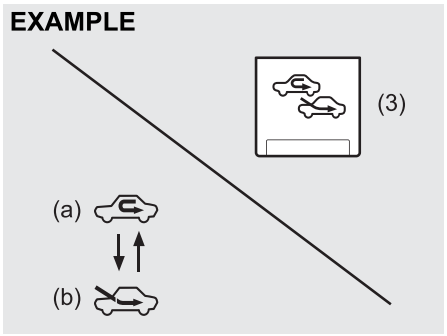

75RM028

Push the air intake selector (3) to change between the following modes.

If "AUTO" switch (8) is pushed, the air intake will vary automatically as the climate control system maintains the selected temperature.

NOTE:
When you select the recirculated air mode, the automatic operation system is deactivated if you push "AUTO" switch (8).


RECIRCULATED AIR (a)
When this mode is selected, outside air is shut off and inside air is recirculated. This mode is suitable when driving through an area with polluted air such as a tunnel, or when attempting to quickly cool down the vehicle.

FRESH AIR (b)
When this mode is selected, outside air is introduced.

FRESH AIR and RECIRCULATED AIR are selected alternately each time the air intake selector is pushed.

NOTE:
If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select FRESH AIR.

Air flow selector (4)

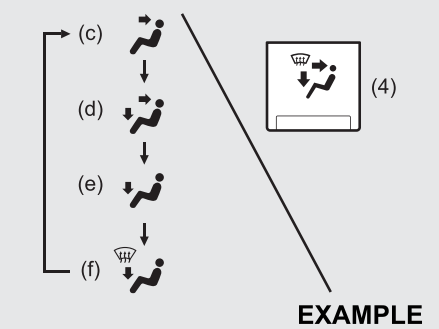


75RM029

Push the air flow selector (4) to change among the following functions. The indication of the selected mode appears on the display.

If "AUTO" switch (8) is pushed, the air flow will vary automatically as the climate control system maintains the selected temperature.


VENTILATION (c)

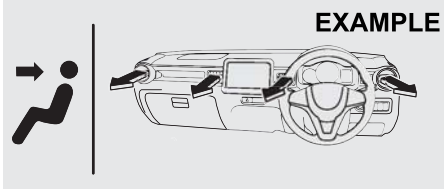

66RH132

Temperature-controlled air comes out of the center, side and rear air outlets.


BI-LEVEL (d)

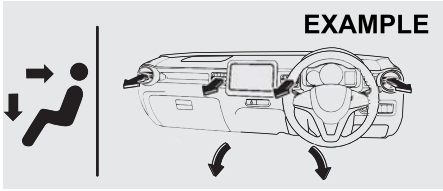

66RH133

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center, side and rear outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center, side and rear outlets will be the same temperature.


HEAT (e)

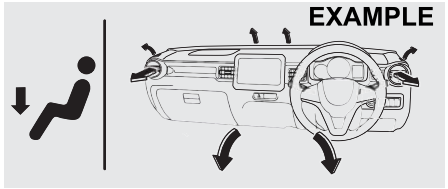

66RH134

Temperature-controlled air comes out of the floor outlets and the side outlets, a small amount of air comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.


HEAT & DEFROST (f)

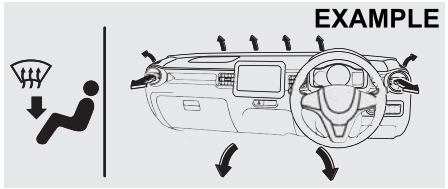

66RH138

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.


Defrost switch (5)

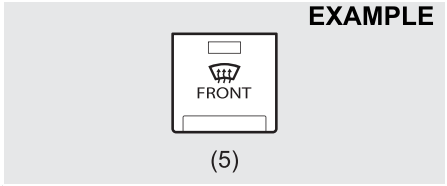

75RM030

Push the defrost switch (5) to turn on the defroster.

DEFROST

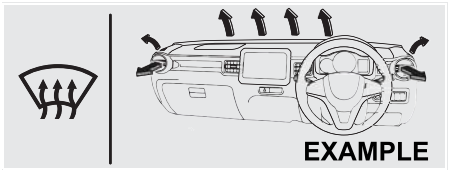


66RH136

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

NOTE:
When the defrost switch (5) is pushed to turn on the defroster, the air conditioning system will come on and FRESH AIR mode will be selected automatically. In very cold weather, however, the air conditioning system will not turn on.

Air conditioning switch (6)

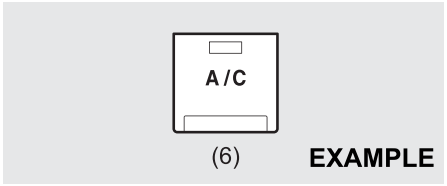


75RM031

The air conditioning switch (6) is used to turn on and off the air conditioning system only when the blower is on. To turn on the air conditioning system, push in the switch and “A/C” will appear on the display. To turn off the air conditioning system, push in the switch again and “A/C” will go off.

System operating instructions

Automatic operation

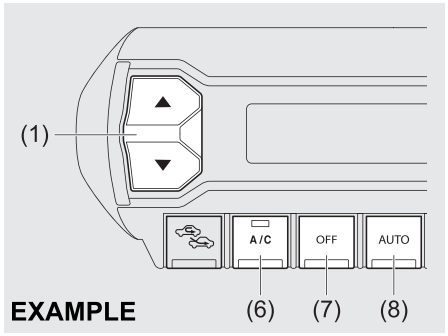

75RM032

You can let the climate control system work automatically. To set the system for fully-automatic operation, follow the procedure below.

1) Start the engine.
2) Push “AUTO” switch (8).
3) Set the desired temperature by pushing the temperature selector (1).

The blower speed, air intake and air flow are controlled automatically to maintain the set temperature. However, the air flow is not changed to DEFROST position automatically.


NOTE:
When you select the recirculated air mode, the automatic operation system is deactivated if you push “AUTO” switch (8).

You can use the air conditioning switch (6) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.

To turn the climate control system off, push “OFF” switch (7).

NOTE:
If “AUTO” on the display blinks, there is a problem in the heating system and/or air conditioning system. You should have the system inspected by an authorised Maruti Suzuki workshop.

NOTE:
- *To find the temperature at which you are most comfortable, start with the 25°C (75°F) setting.*
- *If you push the temperature selector (1) until “HI” or “LO” appears on the display, the climate control system will operate at maximum heating or cooling and the blower will run at full speed.*
- *To avoid blowing cold air in cold weather or hot air in hot weather, the system will delay turning on the blower until warmed or chilled air is available.*
- *If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly.*
- *Even under the automatic operation, you can set individual selectors to the manual mode. The manually selected functions are maintained, and the other functions remain under automatic operation.*
- *If the windshield and/or the front door windows are fogged, push the defrost switch (5) to turn on the defroster, or push the air flow selector (4) to change the air flow to HEAT & DEFROST position to defog the windows.*
- *To return the blower speed selector (2), air intake selector (3), and air flow selector (4) to automatic operation, push “AUTO” switch (8).*

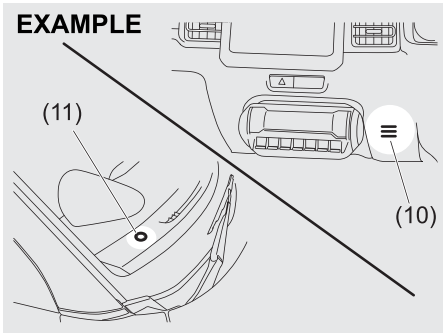


66RH124

Be careful not to cover the interior temperature sensor (10) located between the steering wheel and the climate control panel, or the solar sensor (11) located at the top of the driver’s side dashboard. These sensors are used by the automatic system to regulate temperature.

Manual operation

You can manually control the climate control system. Set the selectors to the desired positions.

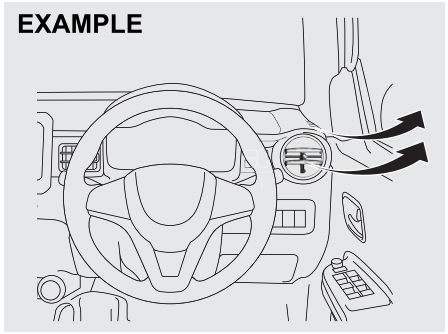

66RH137

NOTE:
If you need maximum defrosting:

- *push the defrost switch (5) to turn on the defroster (the air conditioning system will come on and FRESH AIR mode will be selected automatically),*
- *set the blower speed selector to high,*
- *adjust the temperature selector to "HI" indication on the display, and*
- *adjust the side outlets so the air blows on the side windows.*

Maintenance


If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in the "INSPECTION AND MAINTENANCE" section. Have this job done by your authorised Maruti Suzuki workshop as the lower glove box must be lowered for this job.

NOTE:
Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE
Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Radio antenna

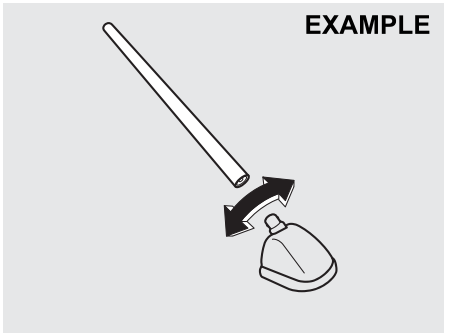

75RM301

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.


NOTICE
To avoid damage to the radio antenna: **• Remove the antenna when using an automatic car wash.** **• Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.**

Installation of radio frequency transmitters

We recommend that you always ask a authorised Maruti Suzuki workshop about frequency band, max output power, antenna position at vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

Audio system (if equipped)

EXAMPLE

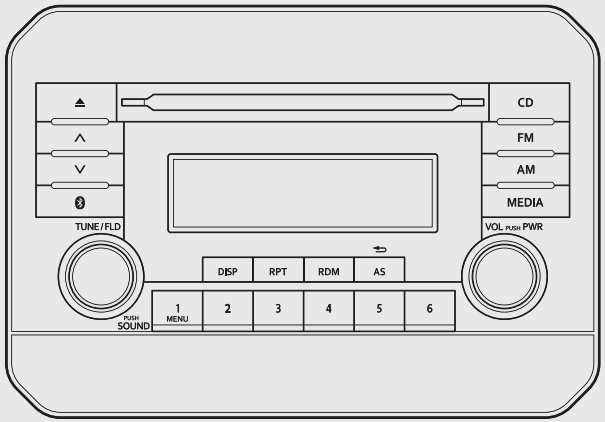

66RH070

AM/FM CD player with Bluetooth® function

NOTE:
For vehicle equipped with SMARTPLAY INFOTAINMENT SYSTEM, refer to the audio manual available with the vehicle.
Remote controller is not provided with the vehicles equipped with SMARTPLAY INFOTAINMENT SYSYTEM.

Safety information

⚠ WARNING

If you pay too much attention to operating the audio system or viewing the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- **Keep your eyes on the road and your mind on the drive. Avoid paying too much attention to operating the audio system or viewing the audio system display.**
- **Familiarize yourself with the audio system controls and operation of the audio system before driving.**
- **Preset your favorite radio stations before driving so that you can quickly tune to them using the presets.**
- **Set the sound volume to a level that will allow you to continue to be aware of road and traffic conditions while driving.**

Notes on discs

Precautions


- When the inside of the vehicle is very cold and the player is used soon after switching on the heater, condensation may form on the disc or the optical parts of the player and proper playback may not be possible. If condensation forms on the disc, wipe it off with a soft cloth. If condensation forms on the optical parts of the player, do not use the player for about one hour. This will allow the condensation to disappear normally.
- Driving on extremely bumpy roads which cause severe vibrations may cause sound to skip.
- This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts. Bring the unit to an authorised Maruti Suzuki workshop.

Cautions on handling



52D274


This unit has been designed specifically for playback of compact discs bearing mark (A) shown above.
No other discs can be played.

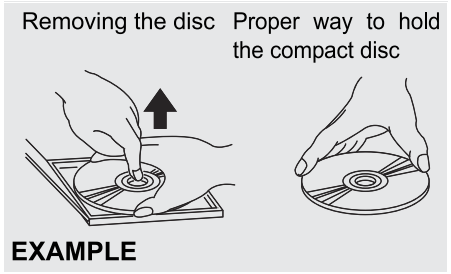

52D275


To remove the compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

Always handle the compact disc by the edges.
Never touch the surface.

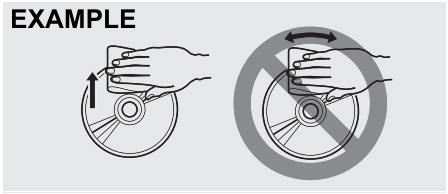


52D347

To remove fingermarks and dust, use a soft cloth, and wipe in a straight line from the center of the compact disc to the circumference.

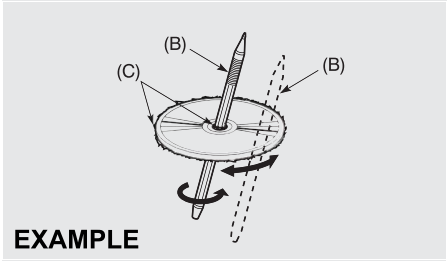


52D277

New discs may have some roughness around the edges. The unit may not work or the sound may skip if such discs are used. Use a ball-point pen (B), etc. to remove the roughness (C) from edges of the disc before inserting it into the unit.

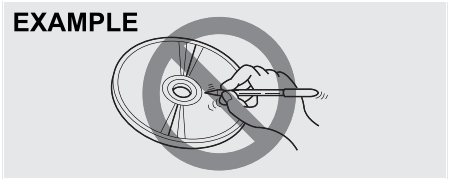


52D348

Never stick labels on the surface of the compact disc or write on the surface with a pencil or pen.

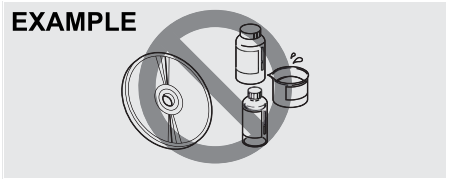


52D349

Do not use any solvents such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.

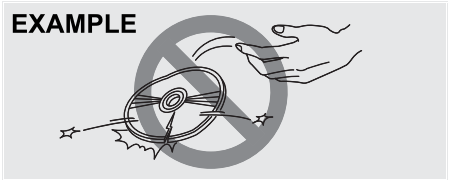

52D350

Do not use compact discs that have large scratches, are misshaped, or cracked, etc. Use of such discs will cause damage or prevent the system from operating properly.

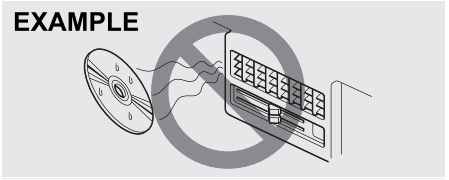

52D351

Do not expose compact discs to direct sunlight or any heat source.

NOTE:

- *Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc.*
  These may get caught in the internal mechanism and damage the disc.
- *It may be impossible to play CD-R discs with this unit due to the recording conditions.*
- *CD-RW discs cannot be played with this unit.*

⚠ WARNING

This is a class I laser product. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
Do not open covers and do not attempt to repair this unit by yourself.
Ask an authorized dealer for the repair.


Bluetooth®

The Bluetooth® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Ink.

Stop using this unit and a Bluetooth® ready device whenever requested.
This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.
You should stop using this unit whenever you are notified that your unit disturbs other wireless communication immediately.

Basic operations

EXAMPLE

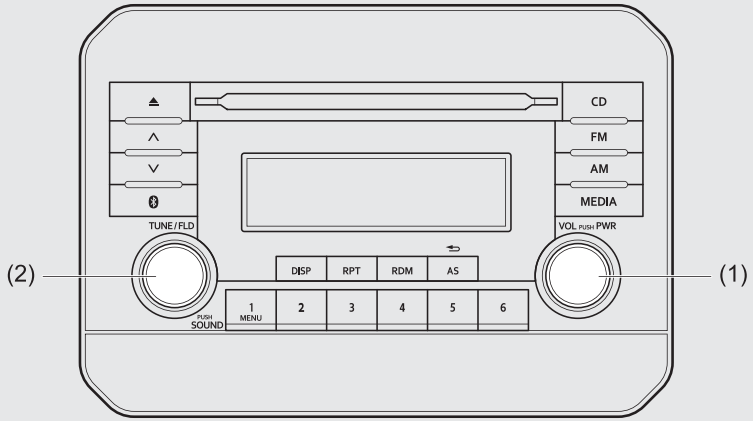

66RH071

(1) “VOL PUSH PWR” knob
(2) “TUNE/FLD PUSH SOUND” knob


Turning on/off power
Press “VOL PUSH PWR” knob (1) to turn on the power. The unit starts to operate in the previous setting that the power was turned off.

Adjusting the volume
Turn “VOL PUSH PWR” knob (1).
Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.

NOTE:
For the purposes of safe driving, adjust the audio volume to a level that allows you to hear sounds outside of the vehicle including car horns and particularly emergency vehicle sirens.

Adjusting bass/treble/balance/fader

1) Press “TUNE/FLD PUSH SOUND” knob (2).
   Each time the knob is pressed, sound adjustment will change as follows:

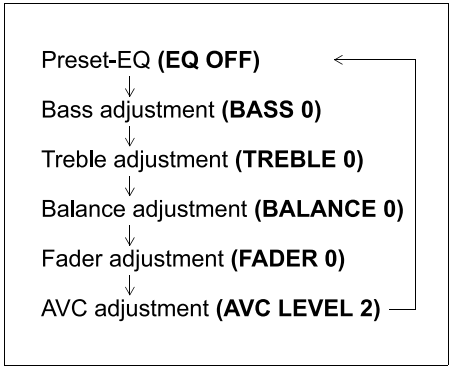

2) Turn “TUNE/FLD PUSH SOUND” knob (2) to adjust the sound.

Adjusting the AVC (Auto volume control)


The Auto Volume Control (AVC) function automatically adjusts (increases/decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with three selectable levels (LEVEL OFF, 1, 2, 3). The range of volume adjustment increases together with the LEVEL number.

1) Press “TUNE/FLD PUSH SOUND” knob (2) until the AVC adjustment mode is selected.
2) Turn “TUNE/FLD PUSH SOUND” knob (2) to select the desired AVC adjustment level (Initial setting: LEVEL 2).

Preset-EQ


Preset-EQ calls up various sound types in accordance with the listening music type.

1) Press “TUNE/FLD PUSH SOUND” knob (2) several times until “PRESET-EQ” appears.
2) Turn “TUNE/FLD PUSH SOUND” knob (2).
   Each time the knob is turned, preset EQ mode will change as follows:

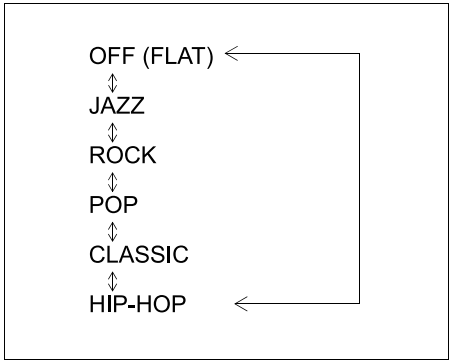


Listening to the radio

EXAMPLE

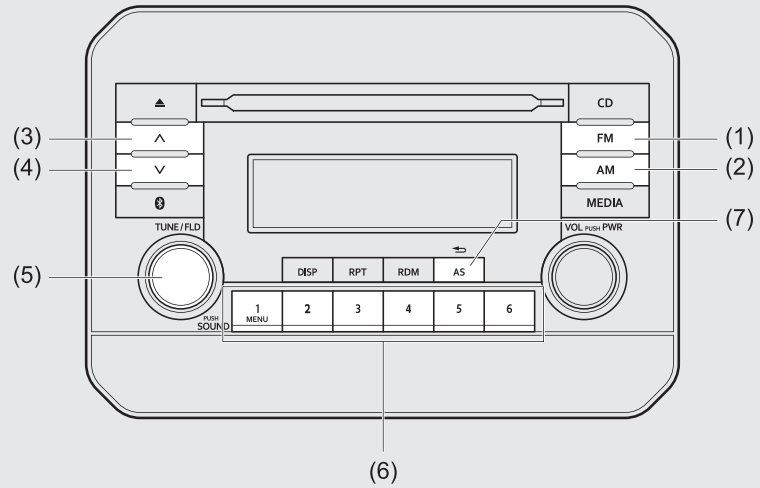

66RH072


Display

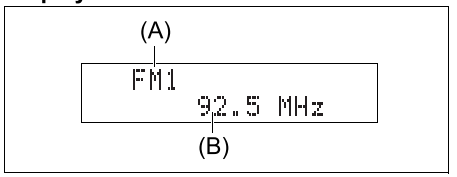

(1) “FM” button
(2) “AM” button
(3) UP button
(4) DOWN button
(5) “TUNE/FLD PUSH SOUND” knob
(6) PRESET buttons ([1] to [6])
(7) “AS” button

(A) Band
(B) Frequency

Selecting the FM band
Press “FM” button (1).
Each time the button is pressed, the reception band will change as follows:

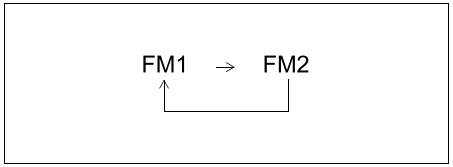

Selecting the AM band
Press “AM” button (2).

Seek tuning
Press UP button (3) or DOWN button (4).
The unit stops searching for a station at a frequency where a broadcast station is available.


Manual tuning
Turn “TUNE/FLD PUSH SOUND” knob (5).
The frequency being received is displayed.

Preset memory
1) Select the desired station.
2) Hold down a desired button ([1] to [6]) of the PRESET buttons (6) to which you want to store the station for 2 seconds or longer.

Auto store
Hold down “AS” button (7) for 2 seconds or longer.
6 stations in good reception will automatically be stored to PRESET buttons (6) in order, starting from a station whose frequency is the lowest.

NOTE:
- *Auto store can be released by pressing “AS” button (7) while auto store is under way.*
- *When the auto store is performed, the station previously stored in the memory at the position is overwritten.*
- *When there are fewer than 6 stations that can be stored even if 1 round of auto store operation is performed, no station will be stored at the remaining PRESET buttons (6).*
- *6 stations can be preset for FM1 and FM2 in common, and 6 stations for AM in auto store mode.*


Auto store mode on/off
Press “AS” button (7).
Each time the button is pressed, the mode is switched as follows:

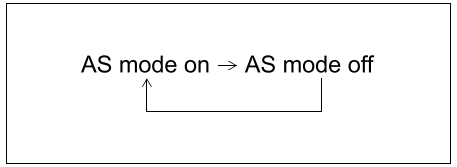

Radio reception
Radio reception can be affected by environment, atmospheric conditions, or radio signal’s power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.


Listening to a CD

EXAMPLE

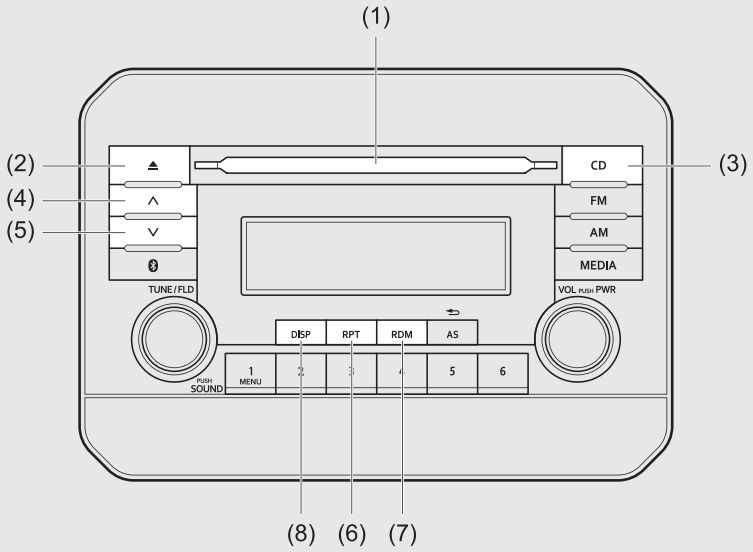

66RH073

Display

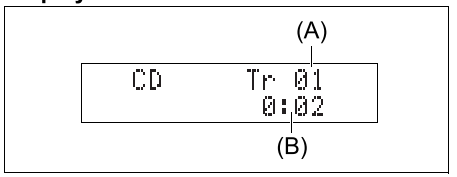

(1) Insertion slot
(2) EJECT button
(3) “CD” button
(4) UP button
(5) DOWN button
(6) “RPT” button
(7) “RDM” button
(8) “DISP” button

(A) Track number
(B) Play time


NOTE:
This product does not support 8 cm CD (sometimes called as “mini single CD”, “3-inch CD”, “CD3”, etc.).

EXAMPLE



- CDs or CD-ROMs without mark (A) cannot be used.
- Some discs recorded in CD-R/CD-RW format may sometimes be impossible to use.

EXAMPLE

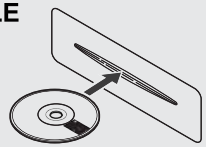

- A CD is to be inserted with its label side up.
- When there is a CD already in the unit, it is impossible to insert another CD without ejecting the CD in the unit. Do not use force to insert a CD into the CD insertion slot.

NOTICE

- **Never insert your finger or hand into the CD insertion slot. Never insert foreign objects.**
- **Never insert a CD with glue coming out from adhesive tape or a rental CD label or with a trace indicating that adhesive tape or a rental CD label has been removed. This may cause the CD not to eject or result in a malfunction.**

Loading a CD
Insert a CD in the insertion slot (1).
When the CD is loaded, it starts to play.

Ejecting a CD
Press EJECT button (2).
When the ignition switch is in "LOCK" position or the engine switch is in LOCK (OFF) mode, the CD remained ejected for around 15 seconds or longer will automatically be drawn inside the unit (Auto reload function).
The backup eject function:
This function allows you to eject a CD by pressing EJECT button (2) even when the ignition switch is in "LOCK" position or the engine switch is in LOCK (OFF) mode.

NOTICE


If you forcefully try to push an ejected CD inside the unit before auto reloading, the disc surface might be scratched.
Before reloading a CD, remove it from the unit completely.

Listening to a CD
When a CD is inserted, playback will automatically start.
When a CD is already inside the unit, press "CD" button (3) to start playback.

Selecting a track
- Press UP button (4) to listen to the next track.
- Press DOWN button (5) twice to listen to the previous track.
  When DOWN button (5) is pressed once, the track currently being played will start from the beginning again.


Fast forwarding/rewinding a track
- Hold down UP button (4) to fast forward the track.
- Hold down DOWN button (5) to fast rewind the track.

Random playback
Press “RDM” button (7).
Each time the button is pressed, the mode will change as follows:

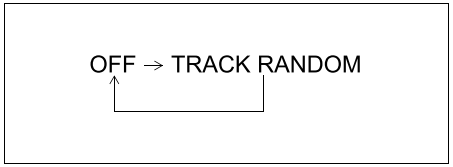


- TRACK RANDOM
  The random indicator “RDM” will light.
  The tracks in the loaded disc will be played in random order.

Repeat playback
Press “RPT” button (6).
Each time the button is pressed, the mode will change as follows:

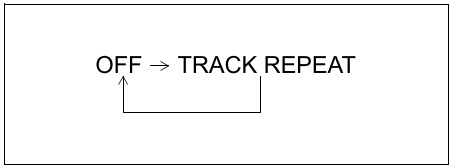

- TRACK REPEAT
  The repeat indicator “RPT” will light.
  The track currently being played will be played repeatedly.


Display change
Press “DISP” button (8).
Each time the button is pressed, display will change as follows:

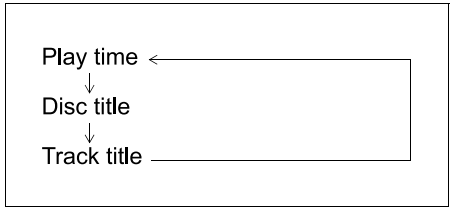

NOTE:
- *“NO TITLE” will be displayed when there is no text information in the disc currently being played.*
- *If text data contains more than 16 characters, “>” mark will appear at the right end. Holding down “DISP” button (8) for 1 second or longer can display the next page.*


Listening to an MP3/WMA/AAC disc

EXAMPLE

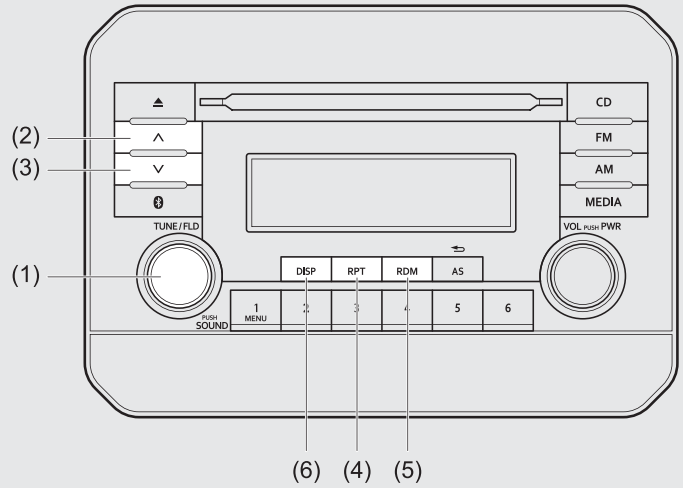

66RH074

Display

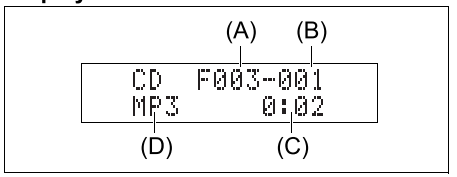

(1) “TUNE/FLD PUSH SOUND” knob
(2) UP button
(3) DOWN button
(4) “RPT” button
(5) “RDM” button
(6) “DISP” button


(A) Folder number
(B) Track number
(C) Play time
(D) File type

Selecting a folder
Turn “TUNE/FLD PUSH SOUND” knob (1) to select a folder.

Selecting a track
- Press UP button (2) to listen to the next track.
- Press DOWN button (3) twice to listen to the previous track.
  When DOWN button (3) is pressed once, the track currently being played will start from the beginning again.


Fast forwarding/rewinding a track
- Hold down UP button (2) to fast forward the track.
- Hold down DOWN button (3) to fast rewind the track.

Random playback
Press “RDM” button (5).
Each time the button is pressed, the mode will change as follows:

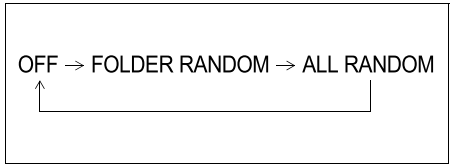


- FOLDER RANDOM
  The random indicator “F.RDM” will light.
  The tracks in the current folder will be played in random order.
- ALL RANDOM
  The random indicator “RDM” will light.
  The tracks in the loaded disc will be played in random order.

Repeat playback
Press “RPT” button (4).
Each time the button is pressed, the mode will change as follows:

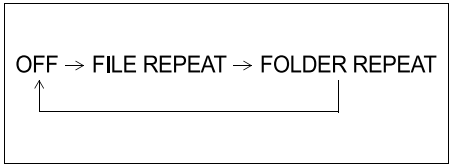

- FILE REPEAT
  The repeat indicator “RPT” will light.
  The track currently being played will be played repeatedly.
- FOLDER REPEAT
  The repeat indicator “F.RPT” will light.
  All tracks in the currently selected folder will be played repeatedly.

Display change
Press “DISP” button (6).
Each time the button is pressed, display will change as follows:

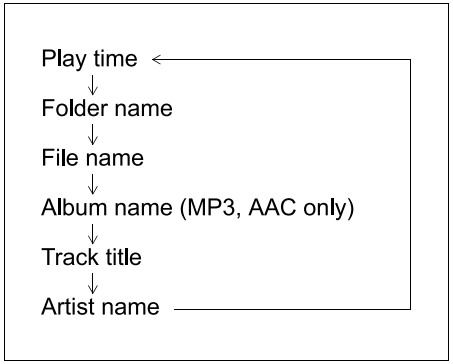

NOTE:
- *“NO TITLE” will be displayed when there is no text information in the disc currently being played.*
- *If text data contains more than 16 characters, “>” mark will appear at the right end. Holding down “DISP” button (6) for 1 second or longer can display the next page.*

Notes on MP3/WMA/AAC

What is MP3?
- An abbreviation of “MPEG audio layer3”, MP3 is an audio compression format that has become the standard format among PC users. Its merit is that the original audio data is compressed to approximately 1/10 and high sound quality is maintained. This means that it is possible to store the data of approximately 10 music CDs on a single CD-R/RW disc, which in turn makes it possible to play music for a long time without having to change the disc.

What is WMA?
- An abbreviation of “Windows Media Audio,” WMA is an audio compression format developed by Microsoft.
- WMA files for which the DRM (Digital Rights Management) function is on cannot be played.
- Windows Media™ and the Windows® logo are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

What is AAC?
- An abbreviation of “Advanced Audio Coding,” AAC is an audio compression format used by MPEG2 and MPEG4.

Points to remember when making MP3/WMA/AAC files
Common
- High bit rate and high sampling frequency are recommended for high quality sounds.
- Selecting VBR (Variable Bit Rate) is not recommended. Selecting VBR may cause display of incorrect playing time and jumpiness of playback.
- Playback sound quality varies depending on the encoding environment. For details, refer to the user manual of the encoding software and the writing software in use.

NOTICE

Never use “.mp3”, “.wma” or “.m4a” as a file name extension if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.

Recording MP3/WMA/AAC files on a CD media

- It is recommended not to write both CD-DA files and MP3/WMA/AAC files on a disc.
- If both CD-DA files and MP3/WMA/AAC files are on the same disc, tracks may not be played in the correct order or some tracks may not be played at all.
- When storing both MP3 data and WMA data on the same disc, sort and place them in different folders.
- Do not write files other than MP3/WMA/AAC files and unnecessary folders on a disc.
- MP3/WMA/AAC files should be named to meet the standards and the file system specifications as shown below.
- The file extension ".mp3", ".wma" or ".m4a" should be assigned to files based on their format independently.
- You may encounter a trouble in playing MP3/WMA/AAC files or displaying information of MP3/WMA/AAC files depending on the writing software or CD recorder in use.
- This unit does not have a playlist function.
- It is recommended to write discs in Disc-at-Once mode even though Multi-session mode is supported. These modes are the methods for writing audio data in CD.

Compression formats

MP3

- Bit rate:
  MPEG1 Audio Layer III: 32 k - 320 kbps
  MPEG2 Audio Layer III: 8 k - 160 kbps
  MPEG2.5 Audio Layer III: 8 k - 160 kbps
- Sampling frequency:
  MPEG1 Audio Layer III: 32 k/44.1 k/48 kHz
  MPEG2 Audio Layer III: 16 k/22.05 k/24 kHz
  MPEG2.5 Audio Layer III: 8 k/11.025 k/12 kHz

WMA (Ver. 7, Ver. 8, Ver. 9*)

- Bit rate: CBR 32 k - 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz

* WMA 9 Professional/LossLess/Voice are not supported.

AAC*

- Bit rate: ABR 16 k - 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz

* Apple Lossless is not supported.

Supported file systems


ISO 9660 Level 1/Level 2, Joliet, Romeo

Maximum number of files/folders

- Maximum number of files: 512
- Maximum number of files in a folder: 255
- Maximum depth of tree structure: 8
- Maximum number of folders: 255
  (Root folder is included.)


Listening to files stored in a USB device

EXAMPLE

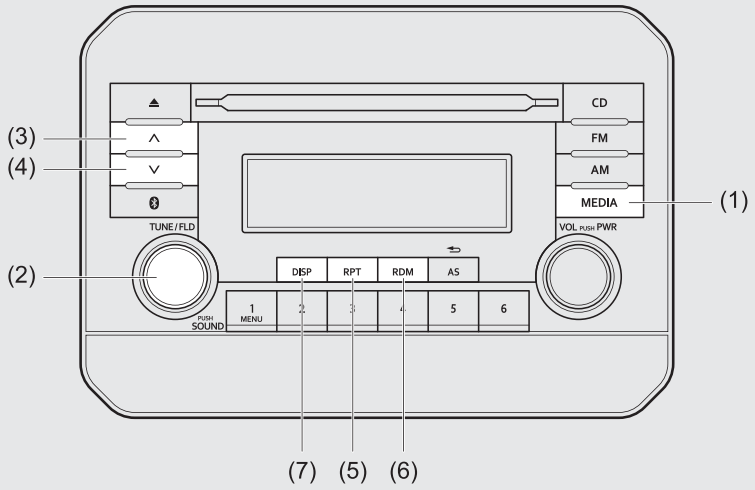

66RH075

Display

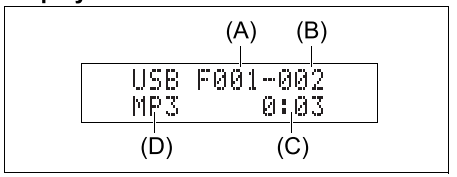


(1) “MEDIA” button
(2) “TUNE/FLD PUSH SOUND” knob
(3) UP button
(4) DOWN button
(5) “RPT” button
(6) “RDM” button
(7) “DISP” button

(A) Folder number
(B) Track number
(C) Play time
(D) File type

NOTICE

Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating and smoking.

Selecting a USB device mode
Press “MEDIA” button (1).
Each time the button is pressed, the mode will change as follows:

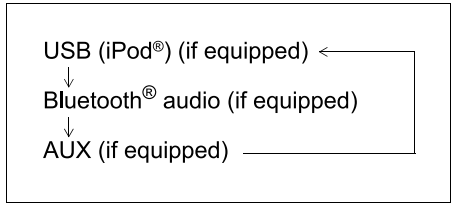


Selecting a folder
Turn “TUNE/FLD PUSH SOUND” knob (2) to select the desired folder.

Selecting a track
- Press UP button (3) to listen to the next track.
- Press DOWN button (4) twice to listen to the previous track.
  When DOWN button (4) is pressed once, the track currently being played will start from the beginning again.


Fast forwarding/rewinding a track
- Hold down UP button (3) to fast forward the track.
- Hold down DOWN button (4) to fast rewind the track.

Random playback
Press “RDM” button (6).
Each time the button is pressed, the mode will change as follows:

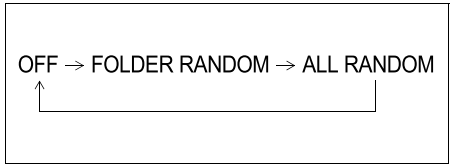


- FOLDER RANDOM
  The random indicator “F.RDM” will light.
  The tracks in the currently selected folder will be played in random order.
- ALL RANDOM
  The random indicator “RDM” will light.
  The tracks in the connected USB device will be played in random order.

Repeat playback
Press “RPT” button (5).
Each time the button is pressed, the mode will change as follows:

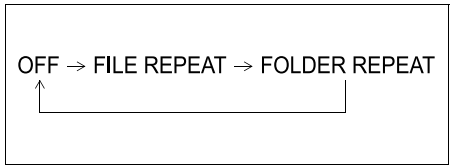

- FILE REPEAT
  The repeat indicator “RPT” will light.
  The track currently being played will be played repeatedly.
- FOLDER REPEAT
  The repeat indicator “F.RPT” will light.
  All the tracks in the folder currently selected will be played repeatedly.

Display change
Press “DISP” button (7).
Each time the button is pressed, display will change as follows:

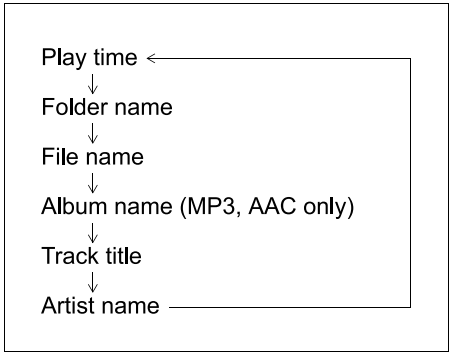

NOTE:
- *“NO TITLE” will be displayed when there is no text information in the file currently being played.*
- *If text data contains more than 16 characters, “>” mark will appear at the right end. Holding down “DISP” button (7) for 1 second or longer can display the next page.*

Notes on USB device

Compatible USB devices

- USB mass storage class.
  For details as to whether your USB memory/USB audio is compatible with USB mass storage class, please contact the USB memory/USB audio manufacturer.
- USB standard compatibility 1.1/2.0 full speed.
- File system FAT12/16/32, VFAT.
- Maximum current less than 1.0 A.
- If devices such as USB hub, extension cable are connected to the audio system, it may not be recognized. In such case, connect the USB device directly to the audio system.
- Devices such as MP3 player/mobile phone/digital camera may not be recognized by the audio system for playing music.

USB device connection

- When connecting a USB device, check that the connector is pushed all the way into the port.
- Do not leave the USB device for long periods of time inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand. We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA/AAC format.

Recording MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the stored one.

Compression formats

MP3

- Bit rate:
  MPEG1 Audio Layer III: 32 k - 320 kbps
  MPEG2 Audio Layer III: 8 k - 160 kbps
  MPEG2.5 Audio Layer III: 8 k - 160 kbps
- Sampling frequency:
  MPEG1 Audio Layer III: 32 k/44.1 k/48 kHz
  MPEG2 Audio Layer III: 16 k/22.05 k/24 kHz
  MPEG2.5 Audio Layer III: 8 k/11.025 k/12 kHz

WMA (Ver. 7, Ver. 8, Ver. 9*)

- Bit rate: CBR 32 k - 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz

* WMA 9 Professional/LossLess/Voice are not supported.

AAC*

- Bit rate: ABR 16 k - 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz


* Apple Lossless is not supported.

Maximum number of files/folders

- Maximum number of files: 2500
- Maximum number of files in a folder: 255
- Maximum depth of tree structure: 8
- Maximum number of folders: 255
  (Root folder is included.)


Listening to an iPod®

EXAMPLE

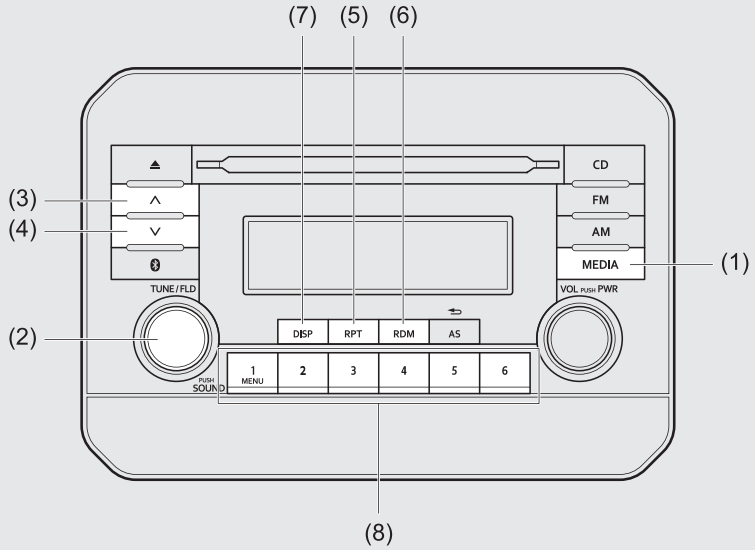

66RH076


Display

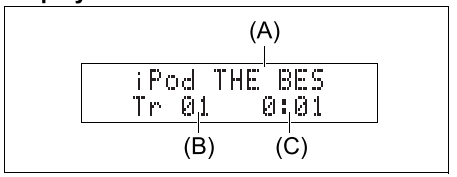

(1) “MEDIA” button
(2) “TUNE/FLD PUSH SOUND” knob
(3) UP button
(4) DOWN button
(5) “RPT” button
(6) “RDM” button
(7) “DISP” button
(8) PRESET buttons ([1] to [6])

(A) Track title
(B) Track number
(C) Play time


Selecting an iPod® mode
Press “MEDIA” button (1).
Each time the button is pressed, the mode will change as follows:

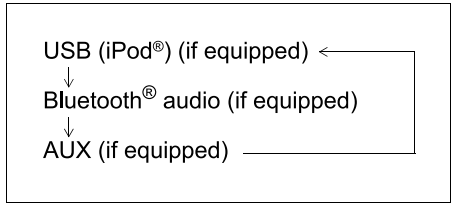

Selecting a track
- Press UP button (3) to listen to the next track.
- Press DOWN button (4) twice to listen to the previous track.
  When DOWN button (4) is pressed once, the track currently being played will start from the beginning again.


Fast forwarding/rewinding a track
- Hold down UP button (3) to fast forward the track.
- Hold down DOWN button (4) to fast rewind the track.

Random playback
Press “RDM” button (6).
Each time the button is pressed, the mode will change as follows:

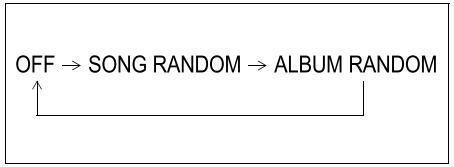


- SONG RANDOM
  The random indicator “RDM” will light.
  The tracks in the iPod® will be played in random order.
- ALBUM RANDOM
  The random indicator “F.RDM” will light.
  The albums in the iPod® will be played in random order.

Repeat playback
Press “RPT” button (5).
Each time the button is pressed, the mode will change as follows:

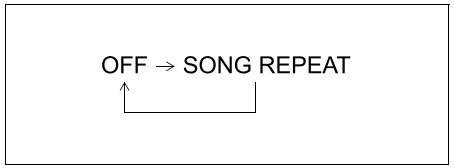

- SONG REPEAT
  The repeat indicator “RPT” will light.
  The track currently being played will be played repeatedly.

Display change
Press “DISP” button (7).
Each time the button is pressed, display will change as follows:

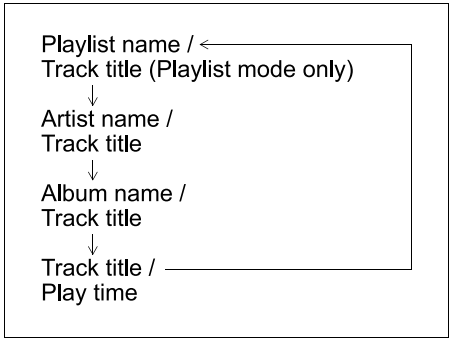

NOTE:
If text data contains more than 16 characters, “>” mark will appear at the right end. Holding down “DISP” button (7) for 1 second or longer can display the next page.

Playing mode selection

1) Press the button numbered [6] of PRESET buttons (8) for 1 second or longer.
2) Turn "TUNE/FLD PUSH SOUND" knob (2).
   Each time the knob is turned, the mode will change as follows:



3) Press "TUNE/FLD PUSH SOUND" knob (2) to select the desired mode.

NOTE:

- *When the button numbered [6] of PRESET buttons (8) is pressed, the previous mode will be displayed.*

Notes on iPod®

Supported iPod®

- iPod® touch (6th generation)
- iPod® touch (5th generation)
- iPod® touch (4th generation)
- iPod® touch (3rd generation)
- iPod® touch (2nd generation)
- iPod® touch (1st generation)
- iPod® classic
- iPod® nano (7th generation)
- iPod® nano (6th generation)
- iPod® nano (5th generation)
- iPod® nano (4th generation)
- iPod® nano (3rd generation)
- iPod® nano (2nd generation)
- iPod® nano (1st generation)
- iPod® (5th generation)
- iPhone® 6S Plus
- iPhone® 6S
- iPhone® 6 Plus
- iPhone® 6
- iPhone® 5S
- iPhone® 5C
- iPhone® 5
- iPhone® 4S
- iPhone® 4
- iPhone® 3GS
- iPhone® 3G
- iPhone®


* Some functions may not be available depending on the model of iPod®.
* iPod® is a trademark of Apple Inc., registered in the U.S. and other countries.
* iPhone® is a trademark of Apple Inc., registered in the U.S. and other countries.
* Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod® connection

- Make sure to detach the iPod® after turning the ignition switch to "LOCK" position or pressing the engine switch to change the ignition mode to LOCK (OFF). The iPod® may not be shut down when it is being connected and may result in battery depletion.
- Do not connect iPod® accessories such as an iPod® remote control or headphones while connecting the iPod® with the unit. The unit may not operate correctly.

AUX function

EXAMPLE

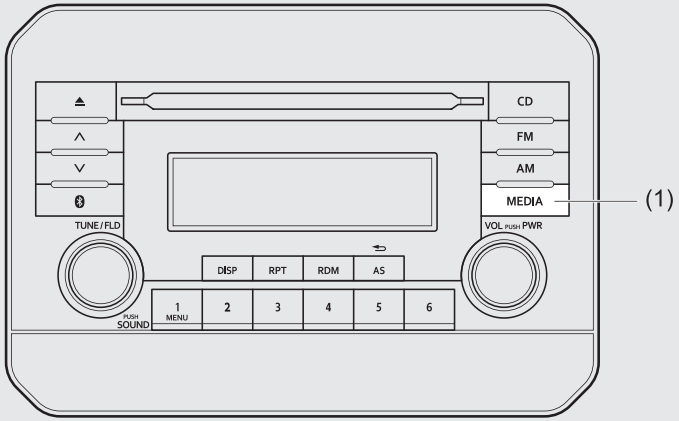

66RH077

(1) “MEDIA” button

AUX connection

To listen to auxiliary audio sources (sold separately) through the unit, follow the instruction below.

1) Connect the auxiliary audio source to the AUX/USB socket (separately attached) with an AUX cable.
2) Press “MEDIA” button (1).
   Each time the button is pressed, the mode will change as follows:

USB (iPod®) (if equipped)
↓
Bluetooth® audio (if equipped)
↓
AUX (if equipped)
↑


⚠ CAUTION

- **Before connection, mute the unit, and also keep the volume of the auxiliary audio source within a range that will not cause distortion.**
- **When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source.**

NOTE:
- *Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.*
- *The volume and tone controls of the auxiliary audio source can be adjusted on the unit.*
- *In AUX mode, the volume setting is different from another mode.*

Bluetooth® hands-free (if equipped)


EXAMPLE

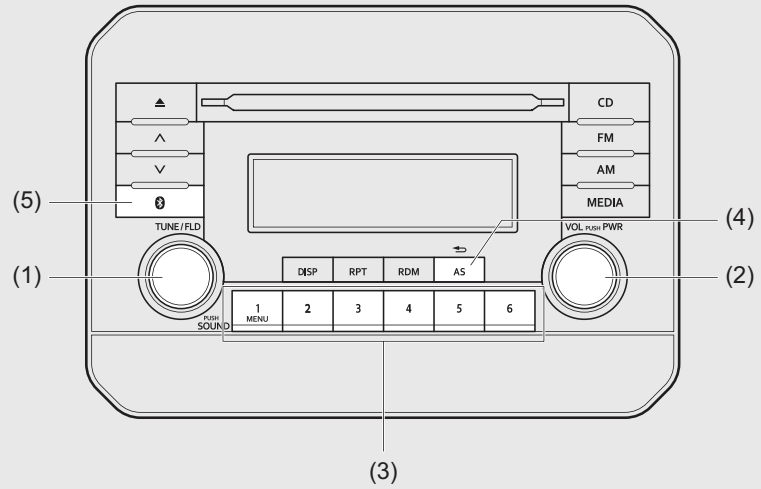

66RH078

(1) “TUNE/FLD PUSH SOUND” knob
(2) “VOL PUSH PWR” knob
(3) PRESET buttons
(4) BACK button
(5) Bluetooth® setup button (on control panel)

Steering switch

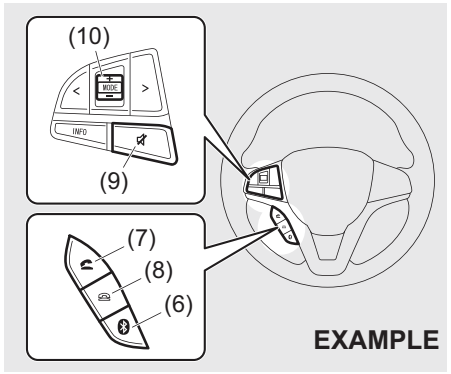

75RM061

(6) Bluetooth® setup button (on steering wheel)
(7) OFF HOOK button
(8) ON HOOK button
(9) MUTE switch
(10) “VOL” switch

Phone registration

To use the hands-free function with this unit, it is required to register the phone in advance.

NOTE:
- *Up to 5 phones can be registered.*
- *To set up a new phone, disconnect the audio player from the unit. Connect the audio player again after phone setup is completed if necessary.*
- *When attempts to establish the pairing fail within 60 seconds, the connecting operation will be canceled. Try to establish the pairing again or refer to the manual of the phone in use for how to establish the pairing with the phone.*
- *Some Bluetooth® enabled phones may not be compatible fully and or partially with the audio unit.*
- *Bluetooth / Telephone setup mode can be entered only when the vehicle is stationary.*

1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Bluetooth”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Pairing”, and press the knob (1) to determine the selection.
4) Select “CAR AUDIO” from the Bluetooth® menu of the phone and establish the pairing.
   Refer to the manual of the phone in use for further information.
5) Enter the passkey displayed on the unit to the phone.
6) When the pairing with the phone is established, automatic transfer of the phonebook and the call history becomes selectable. The automatic transfer starts with “Yes” and it does not with “No”.
7) Press ON HOOK button (8).

NOTE:
- *When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.*
- *When registering an additional phone, repeat Step from 1).*
- *Some phones may not re-connect automatically. For such cases, follow steps 1) to 6) of “Reconnecting already registered phone (Select Phone)” mentioned in further pages of this section.*
- *In case phone does not re-connect after following above steps, delete your phone from registered list of phones by following steps 1) to 7) of “Deletion of phone information (Delete phone)” mentioned in further pages of this section. Register the phone again by referring to “Phone registration” and follow steps 1) to 7).*

Receiving a call
Press OFF HOOK button (7) to receive a call.

Ending a call
Press ON HOOK button (8) to end a call.

Rejecting a call (only for supported models)
Press ON HOOK button (8) to reject a incoming call.

Mute of hands-free microphone
Press MUTE switch (9) to mute the microphone. To cancel the mute, press MUTE switch (9) again.

Adjusting the listening volume
- Turn “VOL PUSH PWR” knob (2) during a call.
  Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press “VOL” switch (10) during a call. Pressing the switch up increases the volume; pressing the switch down decreases the volume.

Adjusting the ring volume
- Turn “VOL PUSH PWR” knob (2) while a call is coming in.
  Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press “VOL” switch (10) during a call. Pressing the switch up increases the vol-

ume; pressing the switch down decreases the volume.

Adjusting the call or ringtone volume
Follow the instructions below to adjust the call or ringtone volume.
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Telephone”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Sound Setting”, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Call Volume” or “Ringtone Volume”, and press the knob (1) to determine the selection.
   The current call or ringtone volume will be displayed.
5) Turn “TUNE/FLD PUSH SOUND” knob (1) to select the desired call or ringtone volume, and press the knob (1) to determine the selection.

NOTE:
When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.

Dialing using missed/incoming/ outgoing calls
Follow the instructions below to dial to the previously dialed number again.

NOTE:
Up to 30 phone numbers of the latest calls can be stored (30 calls including missed, received and dialed call).

1) Press OFF HOOK button (7).
   The Bluetooth® phonebook menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “All Calls”, “Missed Calls”, “Incoming Calls” or “Outgoing Calls”, and press the knob (1) to determine the selection.
   To dial from the dialed history or the received history, select “All Calls”, “Missed Calls”, “Incoming Calls” or “Outgoing Calls” respectively.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select the desired number, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Dial”, and press the knob (1) or OFF HOOK button (7) to dial to the selected number.

NOTE:
- *When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.*
- *Pressing “Confirm” after selecting “Add Speed Dial” can register the selected number in the speed dial.*
- *Pressing “Confirm” after selecting “Delete” can delete the selected number from the call history.*

Deletion of call history
Follow the instructions below to delete a missed/incoming/outgoing call history.
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Telephone”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Phonebook”, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Delete History”, and press the knob (1) to determine the selection.
5) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Missed Calls”, “Incoming Calls”, or “Outgoing Calls”, and press the knob (1) to determine the selection.
6) Turn “TUNE/FLD PUSH SOUND” knob (1) to select a number to be deleted or “ALL”, and press the knob (1) to determine the selection.

7) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Delete?” or “Delete All?”, and press the knob (1) to determine the selection.
8) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Confirm”, and press the knob (1) to complete the deletion.

NOTE:
When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.

Registration in Phonebook
Follow the instructions below to register phone numbers in the Phonebook of the unit.
1) Press the Bluetooth® setup button (5) or (6).
The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Telephone”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Phonebook”, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Add Contacts”, and press the knob (1) to determine the selection.
5) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Overwrite All” or “Add One Contact”, and press the knob (1) to determine the selection.
“Rewrite All (MAX1000): Ok?” or “Rest of Memory XXXX: Ok?” will be displayed.
6) Press or turn “TUNE/FLD PUSH SOUND” knob (1) to select “Confirm”, and press the knob (1) to determine the selection.
7) Transfer contacts from the phone.
When the registration is completed, the “Setup Phonebook” will be displayed.

NOTE:
- *When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.*
- *Up to 1000 numbers can be registered in Phonebook.*

Transfer of call history (Call History)
Follow the instructions below to transfer call history of the registered phone.
1) Press the Bluetooth® setup button (5) or (6).
The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Telephone”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Call History”, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Overwrite Call History?”, and press the knob (1) to determine the selection.
5) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Confirm”, and press the knob (1) to transfer the call history from the phone.

NOTE:
When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.

Automatic transfer of phonebook/call history

You can select whether or not the device transfers the phonebook and the call history automatically when the phone is registered.

Follow the instructions below to select.

1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Telephone”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “A.Transfer”, and press the knob (1) to determine the selection.
4) Pressing “TUNE/FLD PUSH SOUND” knob (1) switches between “A.transfer On” and “A.transfer Off”.
5) Selecting “Go Back” or pressing the BACK button (4) stores displayed setting and the previous menu is displayed.

Making a call by phonebook

Follow the instructions below to dial a number registered in phonebook.

1) Press OFF HOOK button (7).
   The Bluetooth® phonebook menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Phonebook”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select the initial of the name you would like to make a call, and press the knob (1) to determine the selection.
   The registered numbers will be displayed in sequence. If names have been registered together with numbers, the names will be displayed.
   Turn “TUNE/FLD PUSH SOUND” knob (1) to select the name you would like to make a call, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Dial”, and press the knob (1) or OFF HOOK button (7).
   The displayed number or the number registered with the displayed name will be dialed.

Deletion of registered data (Delete Entry)

Follow the instructions below to delete a number registered in phonebook.

1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Telephone”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Phonebook”, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Delete Contacts”, and press the knob (1) to determine the selection.
5) Turn “TUNE/FLD PUSH SOUND” knob (1) to select the initial of the name you would like to delete or “ALL”, and press the knob (1) to determine the selection.
   Turn “TUNE/FLD PUSH SOUND” knob (1) to select the name you would like to delete, and press the knob (1) to determine the selection.
6) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Delete?” or “Delete All?”, and press the knob (1) to determine the selection.
7) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Confirm”, and press the knob (1) to complete the deletion.

NOTE:
When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Registration in speed dial
Follow the instructions below to assign a number to one of PRESET buttons (3) to use as the speed dial.
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
3) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
4) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Add Speed Dial", and press the knob (1) to determine the selection.
5) Turn "TUNE/FLD PUSH SOUND" knob (1) to select the initial of the name you would like to register in speed dial, and press the knob (1) to determine the selection.
   The registered numbers will be displayed in sequence. If names have been registered together with numbers, the names will be displayed.
   Turn "TUNE/FLD PUSH SOUND" knob (1) to select the name you would like to register in speed dial, and press the knob (1) to determine the selection.
6) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Choose Preset", and press one of PRESET buttons (3) to which the selected number is to be assigned. If a number is already assigned to the selected button, a confirmation message will be displayed.
   Turn "TUNE/FLD PUSH SOUND" knob (1) to select a confirmation message, and press the knob (1) to complete the assignment.
   Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to complete the assignment.
   When the assignment is completed, the "Setup Phonebook" will be displayed.

NOTE:
When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

One-touch call (Speed dial)
Follow the instructions below to dial the number assigned to each of the PRESET buttons (3).
1) Press OFF HOOK button (7).
   The Bluetooth® phonebook menu will be displayed.
   Pressing one of PRESET buttons (3) can skip step 2) and the 1st line of step 3).
2) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Speed Dials", and press the knob (1) to determine the selection.
3) Press one of PRESET buttons (3).
   The assigned number will be displayed. If no number is assigned, "No Entry" is displayed.
4) Press OFF HOOK button (7).
   The selected number will be dialed.

Deletion of speed dial (Del Speed Dial)
Follow the instructions below to delete the number assigned for the speed dial.
1) Press OFF HOOK button (7).
   The Bluetooth® phonebook menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Speed Dials”, and press the knob (1) to determine the selection.
3) Press one of PRESET buttons (3) to which the number to be deleted is assigned.
   If the number is not registered, “No Entry” is displayed.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Delete”, and press the knob (1) to determine the selection.
5) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Del Speed Dial”, and press the knob (1) to determine the selection.
6) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Confirm”, and press the knob (1) to complete the deletion.

NOTE:
When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.

Display of device data (Device Name)
Follow the instructions below to display the BD (Bluetooth® Device) address and device name.
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Bluetooth”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Bluetooth Info”, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Device Name” or “Device Address”, and press the knob (1) to display the device name or the BD (Bluetooth® Device) address.

NOTE:
When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.

Reset to the factory defaults
Follow the instructions below to reset all the settings to the factory defaults.
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Bluetooth”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Initialize”, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “All Initialize”, and press the knob (1) to determine the selection.
5) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Confirm”, and press the knob (1) to start the reset.

NOTE:
When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.

List of phones (List Phones)
Follow the instructions below to display the names of the registered phones in sequence.
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Bluetooth”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “List Phone”, and press the knob (1) to determine the selection.
   The names of the registered phones are displayed in sequence.

NOTE:
When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.

Re-connecting already registered phone (Select Phone)
Follow the instructions below to select a phone to be paired with from the registered phones.
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Bluetooth”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “List Phone”, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select a phone to be paired with, and press the knob (1) to determine the selection.
5) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Select”, and press the knob (1) to determine the selection.
6) Similarly to connect audio device. Follow the steps of “re-connecting audio device” method in this section.

NOTE:
- *When selecting “Go Back” or pressing BACK button (4), the previous menu will be displayed.*
- *The Bluetooth® ready audio device will be disconnected when the phone is selected.*

Passkey setting (Set Passkey)
Follow the instructions below to set the security number (passkey).
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Setup Bluetooth”, and press the knob (1) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Passkey”, and press the knob (1) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (1) to select “Enter New Passkey”, and press the knob (1) to determine the selection.
5) Press or turn “TUNE/FLD PUSH SOUND” knob (1) to select “Confirm”.
6) Turn “TUNE/FLD PUSH SOUND” knob (1) to select a number for the first digit, and press the knob (1) to determine the selection. Select and determine numbers for the second, third and fourth digits in order in the same manner. When not entering up to the eighth digit, enter blanks for the successive digits.
7) Press “TUNE/FLD PUSH SOUND” knob (1) to determine the passkey setting.

NOTE:
When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Deletion of phone information (Delete Phone)
Follow the instructions below to delete the registered phone information.
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
3) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "List Phone", and press the knob (1) to determine the selection.
4) Turn "TUNE/FLD PUSH SOUND" knob (1) to select a phone to be deleted, and press the knob (1) to determine the selection.
5) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Delete", and press the knob (1) to determine the selection.
6) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Delete?", and press the knob (1) to determine the selection.
7) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to determine the selection.


NOTE:
When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

BT function on/off (BT Power)
Follow the instructions below to turn on/off the Bluetooth® function.
1) Press the Bluetooth® setup button (5) or (6).
   The Bluetooth® setup menu will be displayed.
2) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
3) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "BT Power", and press the knob (1) to determine the selection.
4) Press "TUNE/FLD PUSH SOUND" knob (1) to select "BT Power On" or "BT Power Off".

NOTE:
- *When the BT function is turned off, the connection between this unit and the registered phone in use will be disconnected.*
- *When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.*

Bluetooth® audio (if equipped)


EXAMPLE

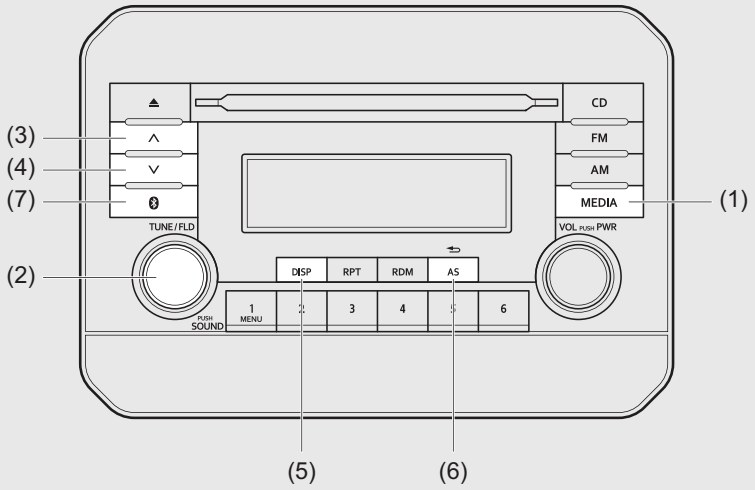

66RH079


Steering switch

EXAMPLE

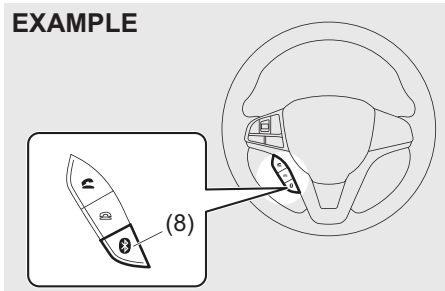

75RM062

Display

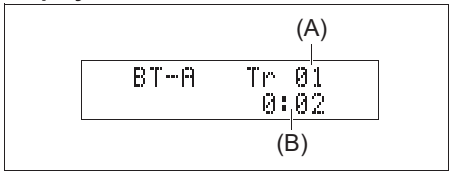

(1) “MEDIA” button
(2) “TUNE/FLD PUSH SOUND” knob
(3) UP button
(4) DOWN button
(5) “DISP” button
(6) BACK button
(7) Bluetooth® setup button (on control panel)
(8) Bluetooth® setup button (on steering wheel)

(A) Track number
(B) Play time

Registration of audio devices


To use Bluetooth® ready audio devices with this unit, it is required to register the devices.

NOTE:
- *To set up a new audio player, disconnect the phone from the unit. Connect the phone after audio player setup is completed if necessary.*
- *When attempts to establish the pairing fail within 60 seconds, the connecting operation will be canceled. Try to establish the pairing again or refer to the audio player manual for assistance with the pairing process.*
- *Some Bluetooth® enabled audio device may not be compatible fully and or partially with the audio unit.*
- *Bluetooth / Telephone setup mode can be entered only when the vehicle is stationary.*

1) Press the Bluetooth® setup button (7) or (8).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Setup Bluetooth”, and press the knob (2) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Pairing”, and press the knob (2) to determine the selection.
4) Select “CAR AUDIO” from the Bluetooth® menu of the audio player and establish the pairing.
   Refer to the manual of the audio player in use for further information.
5) Enter the passkey displayed on the unit to the audio player.

NOTE:
- *When selecting “Go Back” or pressing BACK button (6), the previous menu will be displayed.*
- *When registering additional audio devices, repeat Step from 1).*
- *Some audio device may not re-connect automatically. For such cases, follow steps 1) to 6) of “Reconnecting already registered audio devices (Select Audio)” mentioned in further pages of this section.*
- *In case audio device does not re-connect after following above steps, delete your audio device from registered list of audio by following steps 1) to 7) of “Deletion of audio device information (Delete Audio)” mentioned in further pages of this section. Register the audio device again by referring to “Registration of audio devices” and follow steps 1) to 5).*

Selecting Bluetooth® audio mode
Press “MEDIA” button (1).
Each time the button is pressed, the mode will change as follows:

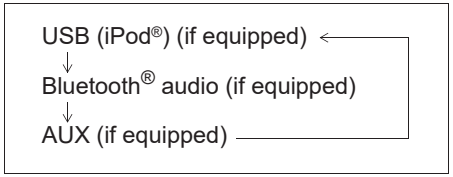


Selecting a group (only for supported models)
Turn “TUNE/FLD PUSH SOUND” knob (2) to select a group.

Selecting a track
- *Press UP button (3) to listen to the next track.*
- *Press DOWN button (4) twice to listen to the previous track.*
  When DOWN button (4) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track
- Hold down UP button (3) to fast forward the track.
- Hold down DOWN button (4) to fast rewind the track.

NOTE:
Some functions may not be available depending on Bluetooth® audio.

Display change
Press “DISP” button (5).
Each time the button is pressed, display will change as follows:

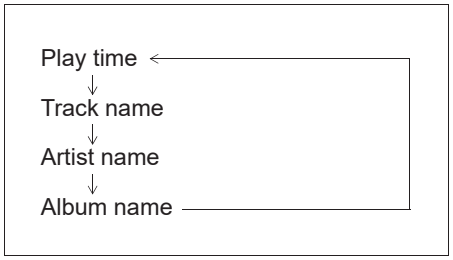

NOTE:
If text data contains more than 16 characters, “>” mark will appear at the right end. Holding down “DISP” button (5) for 1 second or longer can display the next page.

List of audio devices (List Audio)
Follow the instructions below to display the names of the registered audio devices in sequence.
1) Press the Bluetooth® setup button (7) or (8).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Setup Bluetooth”, and press the knob (2) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “List Audio”, and press the knob (2) to determine the selection. The names of registered audio devices will be displayed in sequence.

NOTE:
When selecting “Go Back” or pressing BACK button (6), the previous menu will be displayed.

Re-connecting already registered audio device (Select Audio)
Follow the instructions below to select an audio device to be paired with from the registered audio devices.
1) Press the Bluetooth® setup button (7) or (8).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Setup Bluetooth”, and press the knob (2) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “List Audio”, and press the knob (2) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (2) to select an audio device to be used, and press the knob (2) to determine the selection.
5) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Select”, and press the knob (2) to determine the selection.
6) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Confirm”, and press the knob (2) to complete the pairing.

NOTE:
- *When selecting “Go Back” or pressing BACK button (6), the previous menu will be displayed.*
- *The phone will be disconnected when the Bluetooth® ready audio device is selected.*

Passkey setting (Set Passkey)
Follow the instructions below to set the security number (Passkey).
1) Press the Bluetooth® setup button (7) or (8).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Setup Bluetooth”, and press the knob (2) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Passkey”, and press the knob (2) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Enter New Passkey”, and press the knob (2) to determine the selection.
5) Press or turn “TUNE/FLD PUSH SOUND” knob (2) to select “Confirm”.
6) Turn “TUNE/FLD PUSH SOUND” knob (2) to select a number for the first digit, and press the knob (2) to determine the selection. Select and determine numbers for the second, third and fourth digits in order in the same manner. When not entering up to the eighth digit, enter blanks for the successive digits.
7) Press “TUNE/FLD PUSH SOUND” knob (2) to determine the passkey setting.

NOTE:
When selecting “Go Back” or pressing BACK button (6), the previous menu will be displayed.


Deletion of audio device information (Delete Audio)
Follow the instructions below to delete the registered audio device information.
1) Press the Bluetooth® setup button (7) or (8).
   The Bluetooth® setup menu will be displayed.
2) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Setup Bluetooth”, and press the knob (2) to determine the selection.
3) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “List Audio”, and press the knob (2) to determine the selection.
4) Turn “TUNE/FLD PUSH SOUND” knob (2) to select an audio device to be deleted, and press the knob (2) to determine the selection.
5) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Delete”, and press the knob (2) to determine the selection.
6) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Delete?”, and press the knob (2) to determine the selection.
7) Turn “TUNE/FLD PUSH SOUND” knob (2) to select “Confirm”, and press the knob (2) to complete the deletion.

NOTE:
When selecting “Go Back” or pressing BACK button (6), the previous menu will be displayed.

Disclaimer for Bluetooth® function
- Depending on compatibility of mobile phone models, no Bluetooth® function can be used, or some Bluetooth® functions may be restricted.
- Media playback through third-party applications may have limited support.
- Playback, display contents, connectivity or voice quality etc. may get affected depending on circumstances.
- After the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, the audio system takes few seconds to detect and connect to the Bluetooth® device (if already paired).

Remote audio controls (if equipped)

Controlling basic functions of the audio system is available using the switches on the steering wheel.

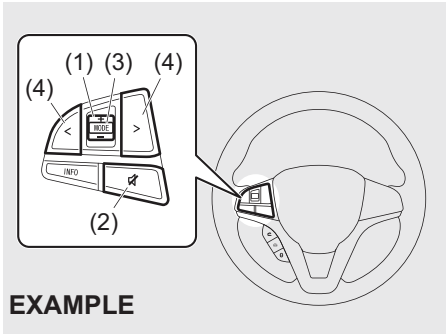

EXAMPLE


75RM063

Adjusting the volume

- To increase the volume, press the “VOL” switch (1) up. The volume will continue to increase until the switch is released.
- To decrease the volume, press the “VOL” switch (1) down. The volume will continue to decrease until the switch is released.
- To mute the sound, press the switch (2).

Selecting the mode

Press the switch (3).
Each time the button is pressed, the mode will change as follows:

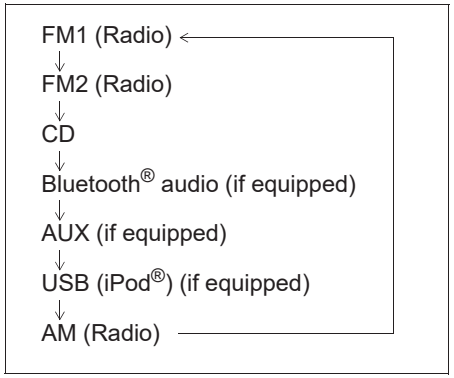

It is possible to turn on the audio system by pressing the switch (3).

Selecting the radio station (AM, FM1, FM2 mode)

- To select the next preset station, press “>” of the switch (4) only for a moment.
- To select the previous preset station, press “<” of the switch (4) only for a moment.
- To scan a higher frequency radio station, press “>” of the switch (4) for 1 second or longer.
- To scan a lower frequency radio station, press “<” of the switch (4) for 1 second or longer.

Selecting the track (CD, USB (iPod®), Bluetooth® audio mode)


- To skip to the next track, press “>” of the switch (4) only for a moment.
- To skip to the previous track, press “<” of the switch (4) twice only for a moment. When the switch (4) is pushed down once only for a moment, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- To fast forward a track, press “>” of the switch (4) for 1 second or longer.
- To fast rewind a track, press “<” of the switch (4) for 1 second or longer.

Anti-theft feature

EXAMPLE

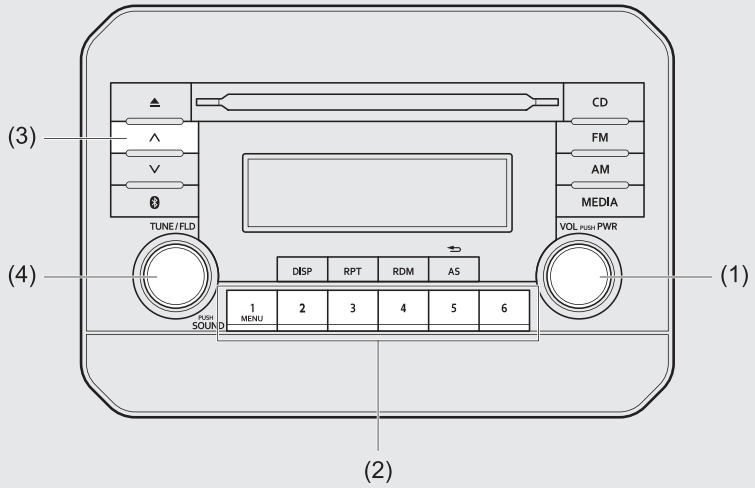

66RH080

(1) VOL PUSH PWR" knob
(2) PRESET buttons ([1] to [6])
(3) UP button
(4) "TUNE/FLD PUSH SOUND" knob

The anti-theft function is intended to discourage thefts. For example, when the audio system is installed in another vehicle, it will become unable to operate.
This function works by entering a Personal Identification Number (PIN).
When the unit is disconnected from its power source, such as when the audio system is removed or the battery is disconnected, the unit will become inoperable until the PIN is reentered.

Setting the anti-theft function

1) Press “VOL PUSH PWR” knob (1) to power off.
2) Hold down the buttons numbered [1] and [6] of PRESET buttons (2) and press “VOL PUSH PWR” knob (1).
   “SECURITY” will be displayed.
3) Press UP button (3) and the button numbered [1] of PRESET buttons (2) simultaneously.
4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of PRESET buttons (2).
5) Hold down “TUNE/FLD PUSH SOUND” knob (4) for 1 second or longer to set the anti-theft function.

NOTE:
Take a note of the registered PIN and keep it for the future use.

Canceling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

1) Press “VOL PUSH PWR” knob (1) to power off.
2) Hold down the buttons numbered [1] and [6] of PRESET buttons (2) and press “VOL PUSH PWR” knob (1).
   “PIN ENTRY” will be displayed.
3) Press UP button (3) and the button numbered [1] of PRESET buttons (2) simultaneously.
4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of PRESET buttons (2).
5) Hold down “TUNE/FLD PUSH SOUND” knob (4) for 1 second or longer to delete the registered PIN. The indication “---” will be displayed and the anti-theft function will be canceled.

NOTE:
To change your PIN, first delete your current PIN, and then set a new one.

Confirming the Personal Identification Number (PIN)


When the main power source is disconnected such as when the battery is replaced, etc, it is required to enter the PIN to operate the unit again.

1) Set the ignition switch to “ACC” position or the ignition mode to ON.
   “SECURITY” will be displayed.
2) Press UP button (3) and the button numbered [1] of PRESET buttons (2) simultaneously.
3) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of PRESET buttons (2).
4) Hold down “TUNE/FLD PUSH SOUND” knob (4) for 1 second or longer.
   When the same PIN as registered is entered, the power of the audio system will be turned off automatically and it will become operable again.

NOTE:
If an incorrect PIN is entered, “ERROR” and the total number of incorrect entry attempts will be displayed.
If an incorrect PIN is entered 10 times or more, “HELP” will be displayed and the audio system will become inoperable.

Battery installation

Install a lithium battery (CR2025) with the poles facing the correct direction.

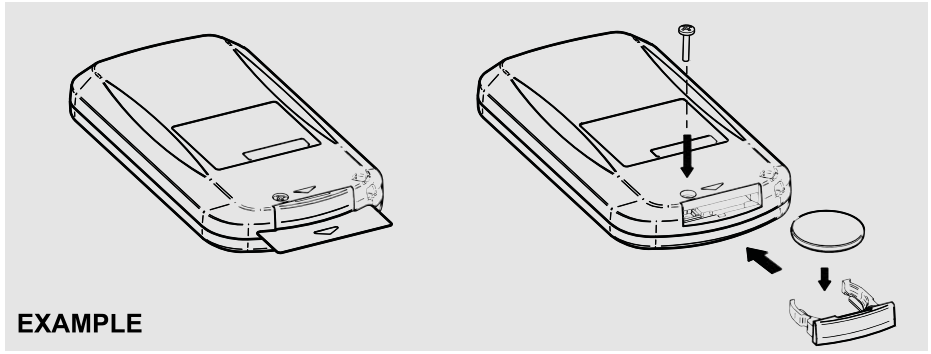

EXAMPLE

Battery replacement timing
- When battery power is depleted, the button may not be operable. If the remote controller does not operate, replace the battery and check the operation.

Caution on battery
- Be sure to follow the instructions to prevent battery leakage, over-heating, ignition or explosion.

⚠ WARNING

- **Do not expose the battery to flame. Do not short circuit, disassemble, or heat the battery.**
- **Do not charge the battery.**
- **Use the specified type battery.**
- **Keep the button-shaped battery away from children to prevent accidental swallowing.**

If the battery is swallowed, contact a doctor immediately.

⚠ CAUTION

- **Install the battery with the poles facing the correct direction.**
- **When not in use for a long period of time, or if the battery is dead, remove the battery from the remote controller.**


If battery leakage has occurred, wipe the container first then install a new battery. If the battery solution contacts the skin, wash off with water completely.

Caution on remote controller


- Do not leave the remote controller in an area exposed to direct sunlight, such as on the dashboard or steering wheel. The remote controller may deform because of the heat, (Be especially careful of the dashboard exposed to direct sunlight in the summer, as it will become extremely hot).
- When the vehicle is parked in an area exposed to direct sunlight, Ensure the remote controller is placed in an area not exposed to direct sunlight. For example: Glove box.
  Under direct sunlight, signal reception from the remote controller weakens. If this happens, hold the remote controller close to the signal receptor on the front panel.

Remote controller (if equipped)

Common operations

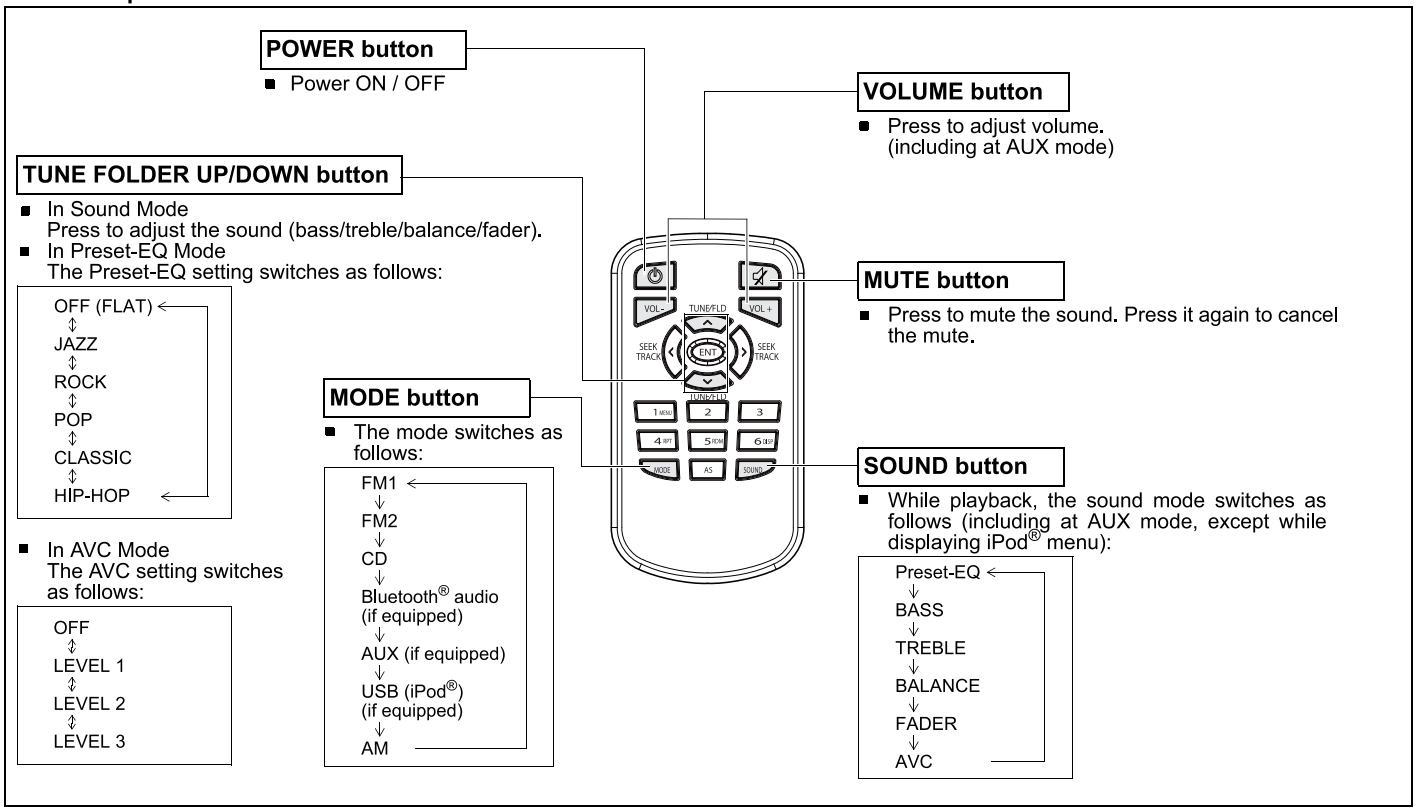

Radio operations

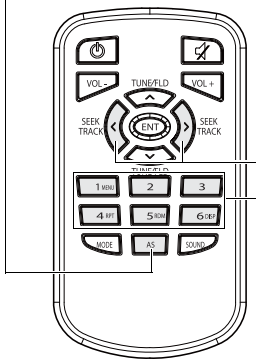

AS button

- Press to return to the last received frequency in the previous auto store mode.
- Press it for 2 seconds or longer. It selects the stations with the stronger signals and stores them in order.

SEEK TRACK UP/DOWN button


- Press to select the radio station.

PRESET buttons (1-6)


- Press to select the desired preset station.

NOTE:
When there are fewer than 6 stations that can be stored even if 1 round of auto store operation is performed, no station will be stored at the remaining preset buttons.


CD operations

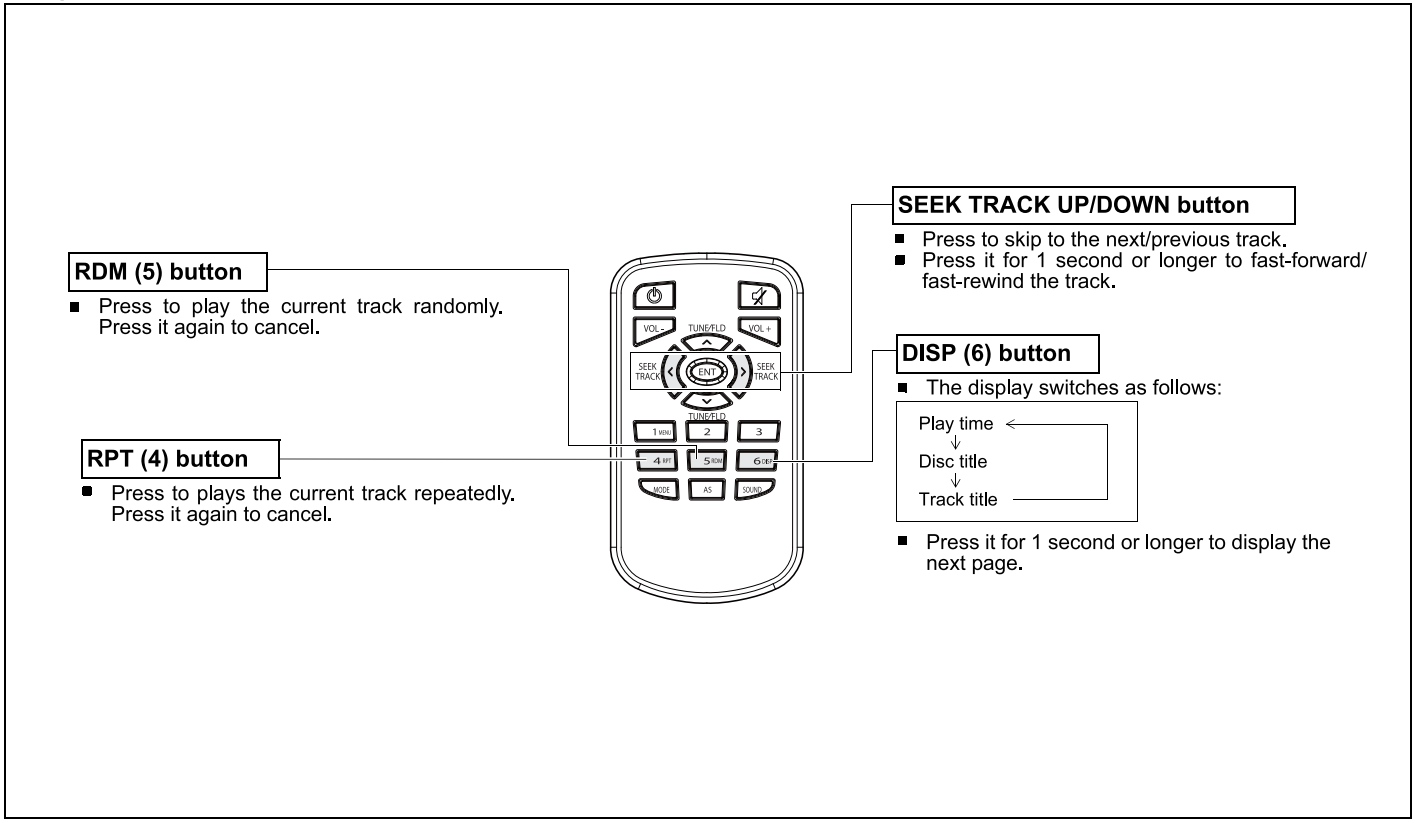


MP3/WMA/AAC Disc operations

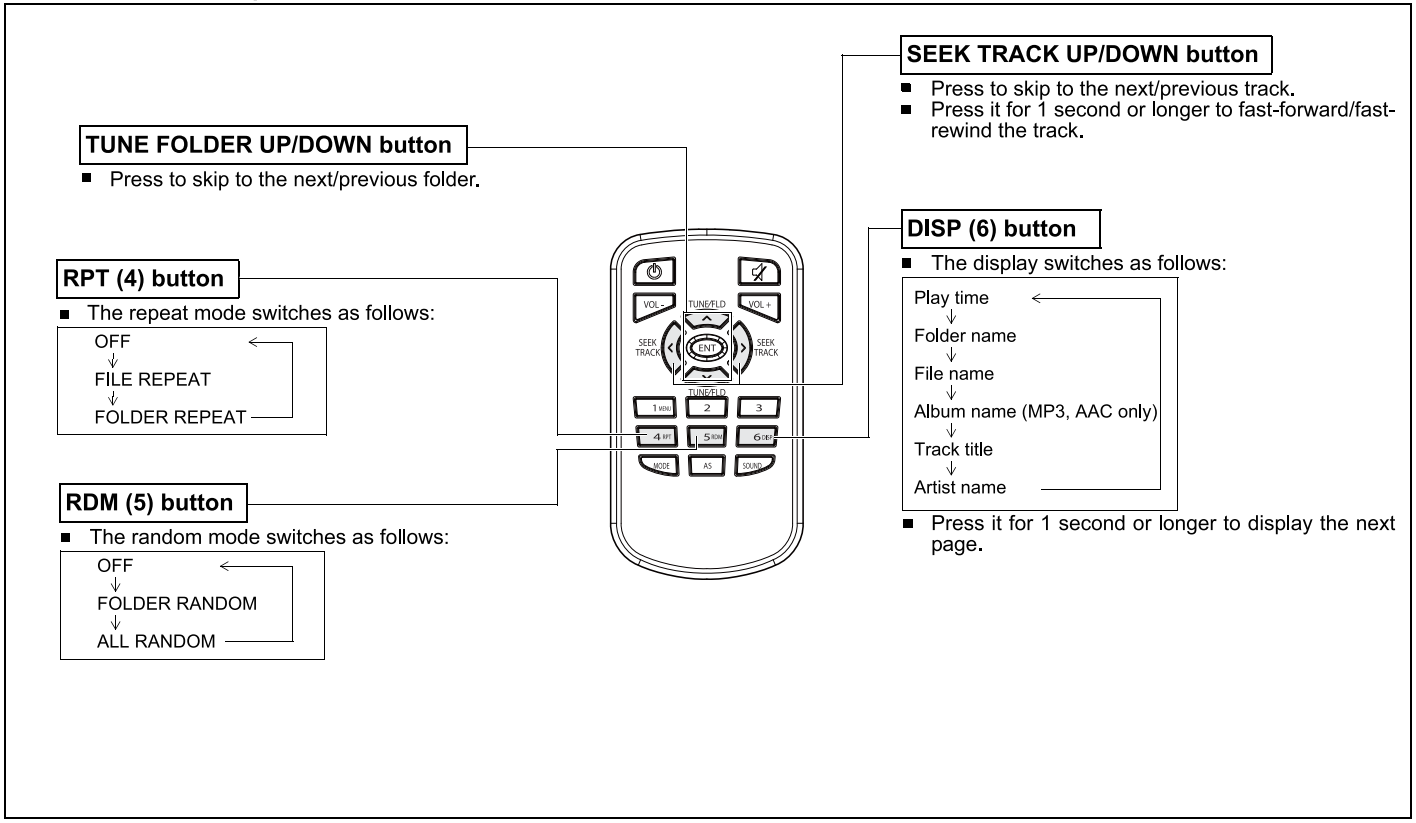

USB operations

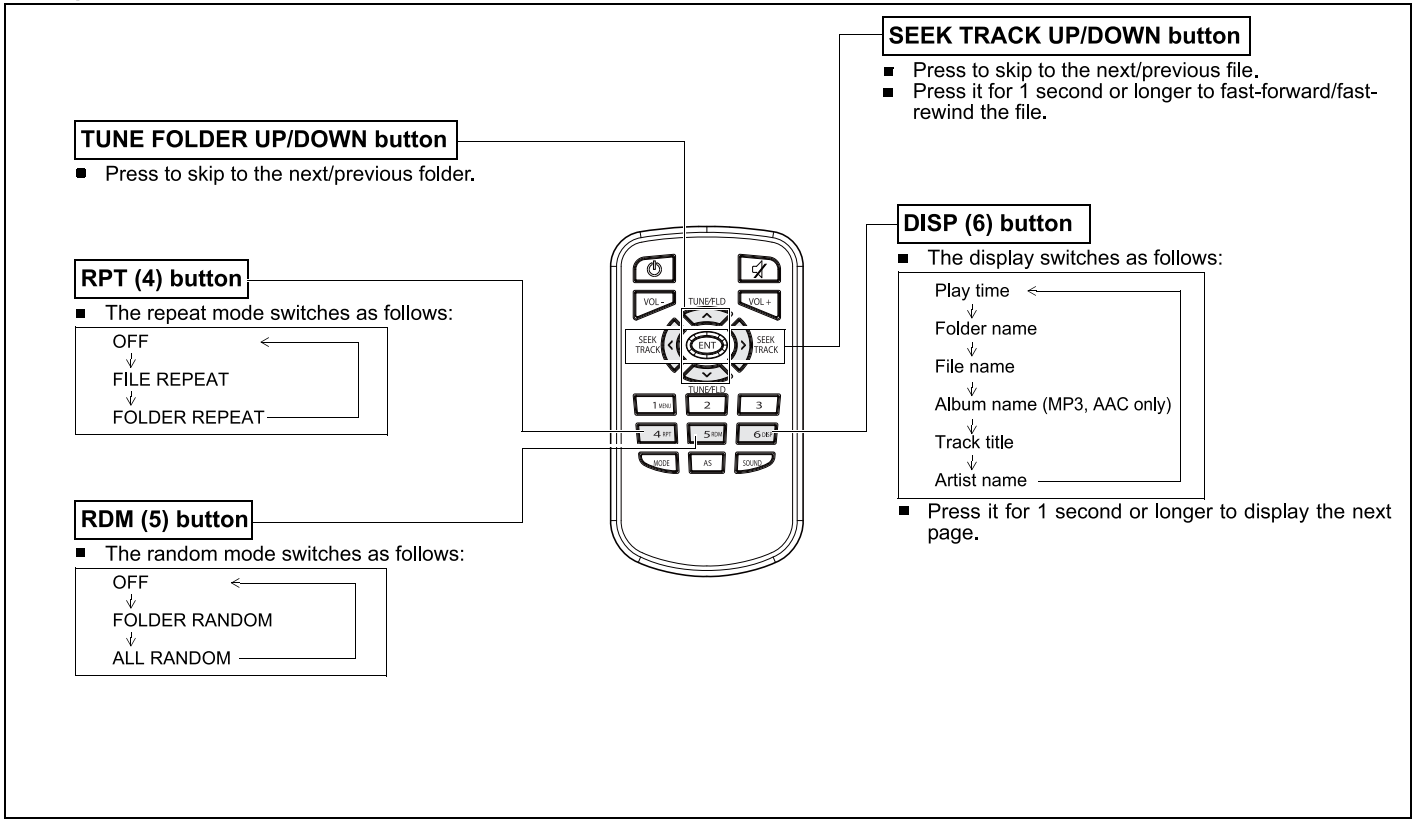

iPod® operations

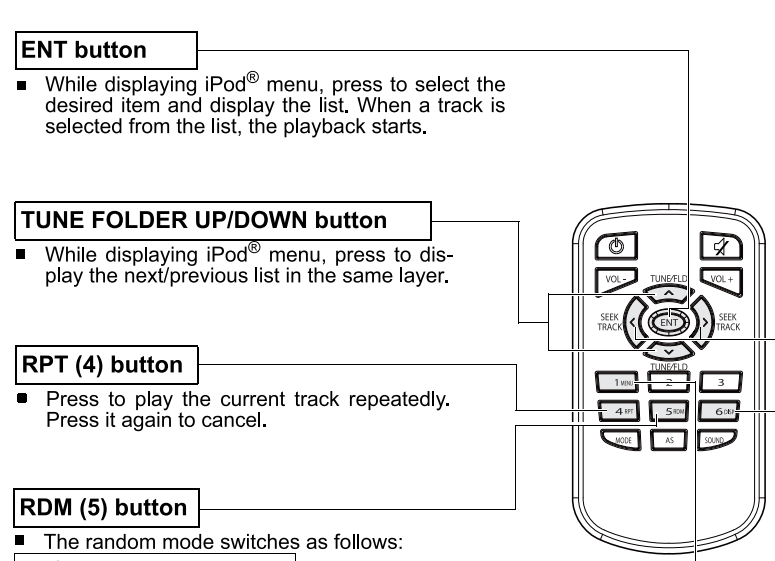

ENT button

- While displaying iPod® menu, press to select the desired item and display the list. When a track is selected from the list, the playback starts.

TUNE FOLDER UP/DOWN button

- While displaying iPod® menu, press to display the next/previous list in the same layer.

RPT (4) button

- Press to play the current track repeatedly. Press it again to cancel.

RDM (5) button

- The random mode switches as follows:

OFF → SONG RANDOM → ALBUM RANDOM → OFF

SEEK TRACK UP/DOWN button

- Press to skip to the next/previous file.
- Press it for 1 second or longer to fast-forward/fast-rewind the file.

DISP (6) button

- The display switches as follows:

Playlist name / Track title (Playlist mode only) → Artist name / Track title → Album name / Track title → Track title / Play time → Playlist name / Track title (Playlist mode only)

- Press it for 1 second or longer to display the next page.

MENU button

- During playback
  - Press to display iPod® menu.
  - Press it for 1 second or longer to display the top menu.
- While iPod® menu is displayed
  - Press to display the folder in one layer upper.
  - Press it for 1 second or longer to display the top menu.

Troubleshooting

When encountering a problem, check and follow the instructions below.
If the described suggestions do not solve the problem, it is recommended to take the unit to your authorised Maruti Suzuki workshop.

Problem	Possible cause	Possible solution
Common		
Unable to operate	The security function is on.	When “SECURITY” is displayed, enter the PIN. When “HELP” is displayed, contact your authorised Maruti Suzuki workshop.
Unable to turn on the power (No sound is produced)	Fuse is blown.	Contact your authorised Maruti Suzuki workshop.
Radio		
High noise	It may not be exactly tuned in to the station.	Tune it in exactly to the station.
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.
CD		
Sound skips or noise produced	The disc is dirty.	Wipe the disc with a soft cloth.
	The disc has a major scratch or is warped.	Replace the disc with the one which has no scratch and warp.


Problem	Possible cause	Possible solution
MP3/WMA/AAC		
No playback	The disc contains unsupported formatted data.	Check the file format.
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.
USB		
Playback does not start when the USB device is connected	There is no supported format file to play on this unit.	Check the file format.
	The current consumption of the USB device exceeds 1.0 A.	Use a USB device with a current consumption lower than 1.0 A.
Bluetooth®		
Pairing failed	The distance between this unit and the Bluetooth® ready device is too far, or a metallic object may be located between the Bluetooth® ready device and this unit.	Change the location of the Bluetooth® ready device.
	The Bluetooth® function of the Bluetooth® ready device is off.	Refer to the manual of the Bluetooth® ready device (Some devices have the power saving function that automatically activates after a certain time).
Unable to receive a call	Your current location may be out of service area.	Drive your vehicle to the service area of the phone.
The voice quality of hands-free is low (Distortion, noise etc.)	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit.

Error display messages

Display	Possible cause	Possible solution
CD		
“ERROR 1”	The disc cannot be read.	Insert the disc with its label side up. Check the disc if it is not warped or is free of flaws. When “ERROR 1” does not disappear even when a normal disc is inserted, contact your dealer.
“ERROR 3”	The player developed an error of an unidentified cause.	When the CD is in the unit, press the CD eject button to remove the disc. When the disc cannot be ejected, contact your dealer.
USB/iPod®		
“USB ERROR”	The USB device is disconnected.	Check the connection of the USB device.
“ERROR 2”	Impossible to communicate correctly with the USB device.	Unplug the USB device and plug it again. Check the USB device.
“ERROR 3”	Inoperable due to an unidentified cause.	Unplug the USB device and plug it again. When “ERROR 3” does not disappear, contact your dealer.
“ERROR 4”	The current consumption of the USB device exceeds 1.0 A.	Check the USB device.

Display	Possible cause	Possible solution
Bluetooth®		
“ERROR 1”	The player developed an error of an unidentified cause.	Disconnect the Bluetooth® ready device and connect it again. When “ERROR 1” does not disappear, contact your dealer.
“Connection Failed”	Failed to establish pairing or connection.	Try to establish the pairing or connection again.
“Memory Full”	Reached the limit for the number of phone-book data in transfer.	Delete registered data of unnecessary number in phone-book and try to transfer the register phone numbers in the phonebook again.
“Not Available”	Inoperable during driving.	Operate the system after pulling over your car.

VEHICLE LOADING AND TOWING

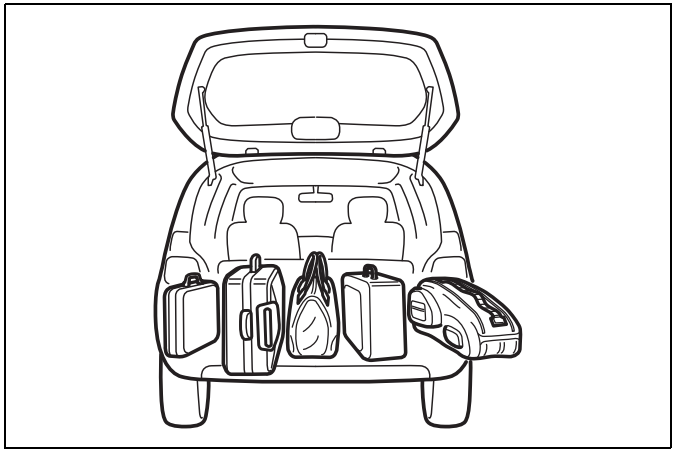

54G215

Vehicle loading 6-1
Trailer towing 6-1

Vehicle loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in the “SPECIFICATIONS” section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).
PAW (front and rear) – Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

⚠ WARNING

Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).


⚠ WARNING

Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer towing

Your MARUTI SUZUKI was originally designed to carry people and a normal amount of cargo, not to tow a trailer.

INSPECTION AND MAINTENANCE

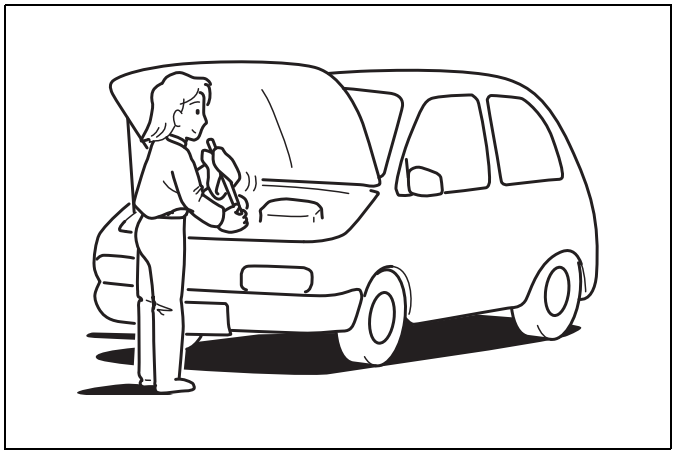

60G410

Maintenance schedule 7-2
Periodic maintenance schedule 7-2
Drive belt 7-6
Engine oil and filter 7-6
Engine coolant 7-11
Air cleaner 7-13
Spark plugs (Petrol engine model) 7-13
Gear oil 7-14
Clutch pedal 7-15
Fuel filter (Diesel engine model) 7-16
Brakes 7-16
Steering 7-18
Tires 7-18
Battery 7-21
Fuses 7-22
Headlight aiming 7-26
Bulb replacement 7-26
Wiper blades 7-31
Windshield washer fluid 7-34
Air conditioning system 7-34

EXAMPLE



60B128

⚠ WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

- **To prevent damage or unintended activation of the air bag system or seat belt pretensioner system, check that the battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been LOCK (OFF) for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle. Do not touch air bag system components, seat belt pretensioner system components or wires.**
  The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.
- **Do not leave the engine running in garages or other confined areas.**

(Continued)

⚠ WARNING

(Continued)

- **When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.**
- **When it is necessary to perform service work with the engine running, check that the parking brake is set fully and the transaxle is in Neutral (for manual transaxle or Auto Gear Shift vehicles).**
- **Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.**
- **Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.**
- **Do not allow smoking, sparks, or flames around fuel or the battery. Flammable fumes are present.**
- **Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.**
- **Be careful not to cause accidental short circuits between the positive and negative battery terminals.**

(Continued)

⚠ WARNING

(Continued)

- **Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.**

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

⚠ WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by authorised Maruti Suzuki workshop.

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use MARUTI genuine replacement parts or their equivalent.

Periodic Maintenance Schedule

"C": Clean
"R": Replace or Change
"I": Inspect, clean, adjust, lubricate or replace as necessary
"L": Lubricate
"T": Tighten to Specified Torque
"O": Rotate

NOTE:
This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.

Interval: This interval should be judged by odometer reading or months, whichever comes first.				FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
			km (x1000)	1	5	10	20	30	40	50	60	70	80
			months	1	6	12	24	36	48	60	72	84	96
ENGINE													
1-1.	Water pump drive belt (Tension, Wear)		Petrol	-	-	-	I	-	I	-	I	-	R
1-2.	Engine coolant (Level, Leakage)			I	I	I	R	I	R	I	R	I	R
1-3.	Engine oil, engine oil filter and drain plug gasket (Level, Leakage)			I	I	R	R	R	R	R	R	R	R
1-4.	Cooling system hoses and connections (Leakage and Damage)			I	I	I	I	I	I	I	I	I	I
1-5.	Engine mounting and manifold fixing (Loose Damage)			-	-	I	-	I	-	I	-	I	-
1-6.	Valve clearance		Petrol	-	-	-	-	I	-	-	I	-	-
1-7.	Exhaust system (Noise, Leakage etc.)			-	I	-	I	-	I	-	I	-	I
1-8.	Positive crank case ventilation system (Hoses, Connections and Valve)		Petrol	-	I	-	I	-	I	-	I	-	I
1-9.	Exhaust gas recirculation valve		Diesel	-	-	-	-	C	-	-	C	-	-
IGNITION													
2-1.	Ignition wire (Damage, Deterioration)		Petrol	-	-	-	I	-	I	-	I	-	I
2-2.	Spark plug		Petrol	-	-	-	-	-	R	-	-	-	R
FUEL													
3-1.	Air cleaner filter element	Paved-road	Petrol	Clean every 5,000 KM. Replace after every 40,000 KM.									
			Diesel	Clean every 10,000 KM. Replace after every 40,000 KM.									
		Dusty Condition	Petrol	Clean every 2,500 KM or as required. Replace after every 40,000 KM. Replace more frequently if dust condition is severe.									
			Diesel										
3-2.	Fuel tank cap, fuel lines and connections (Leakage and Damage)			-	I	-	-	-	I	-	-	-	I
3-3.	Fuel filter (Leakage)		Petrol	I	I	I	I	I	R	I	I	I	R
3-4.	Fuel filter and water draining		Diesel	I	I	I	R	I	R	I	R	I	R
CLUTCH AND TRANSMISSION													
4-1.	Clutch pedal (Play)		Petrol	I	I	I	I	I	I	I	I	I	I
4-2.	Clutch fluid (Level, Leakage)		Diesel	I	I	I	R	I	R	I	R	I	R
4-3.	Clutch slipping (Dragging or Excess Damage)			I	I	I	I	I	I	I	I	I	I

Interval: This interval should be judged by odometer reading or months, whichever comes first.			FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
4-4.	Manual transmission oil (Level, Leakage)		Replace at 1,60,000 km or 10 years whichever comes first.									
			I	I	I	I	I	I	I	I	I	I
4-5.	Gear shifter (Operation)		I	I	I	I	I	I	I	I	I	I
DRIVE SHAFT												
5-1.	Drive shaft noise		I	I	I	I	I	I	I	I	I	I
5-2.	Drive shaft boot (Damage)		-	I	I	I	I	I	I	I	I	I
BRAKE												
6-1.	Brake fluid (Level, Leakage)		I	I	I	R	I	R	I	R	I	R
6-2.	Brake pedal (Pedal - carpet clearance)		I	I	I	I	I	I	I	I	I	I
6-3.	Parking brake lever and cable (Play, Damage)		I	I	I	I	I	I	I	I	I	I
6-4.	Brake disc and pad (Wear)		-	I	I	I	I	I	I	I	I	I
6-5.	Brake drum and shoes (Wear)		-	-	I	I	I	I	I	I	I	I
6-6.	Master cylinder, wheel cylinder, caliper piston (Fluid leakage, Boot/Seal damage)		I	I	I	I	I	I	I	I	I	I
6-7.	Brake hoses and pipes (Fluid leakage, Damage)		I	I	I	I	I	I	I	I	I	I
WHEEL												
7-1.	Tyres (Air pressure, Abnormal wear, Crack and Rotation)		I	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O
7-2.	Wheels (Damage)		I	I	I	I	I	I	I	I	I	I
7-3.	Front/Rear wheel bearing (Loose, Damage)		I	I	I	I	I	I	I	I	I	I
FRONT / REAR SUSPENSION												
8-1.	Suspension strut (Oil leakage, Damage)		I	I	I	I	I	I	I	I	I	I
8-2.	Suspension arms / Knuckle support and Torsion rods (Loose, Damage)		-	I	I	I	I	I	I	I	I	I
8-3.	Rear spring (Damage)		I	I	I	I	I	I	I	I	I	I
8-4.	Shock absorbers (Oil leakage, Damage)		I	I	I	I	I	I	I	I	I	I
8-5.	All bolts and nuts (Loose)		-	T	T	T	T	T	T	T	T	T

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
	km (x1000)	1	5	10	20	30	40	50	60	70	80
	months	1	6	12	24	36	48	60	72	84	96
STEERING											
9-1.	Steering wheel (Play, Loose)	I	I	I	I	I	I	I	I	I	I
9-2.	All rods and arms (Loose, Damage, Wear)	I	I	I	I	I	I	I	I	I	I
9-3.	Tilt steering (Operation)	I	I	I	I	I	I	I	I	I	I
ELECTRICAL											
10-1.	Battery - Electrolyte (Level, Leakage) and voltage	I	I	I	I	I	I	I	I	I	I
10-2.	Wiring harness connection (Loose, Damage)	-	I	I	I	I	I	I	I	I	I
10-3.	Lighting system (Operation, Stains, Damage)	I	I	I	I	I	I	I	I	I	I
10-4.	Wiper (Operation)	I	I	I	I	I	I	I	I	I	I
10-5.	Horn (Operation)	I	I	I	I	I	I	I	I	I	I
10-6.	AUX, USB and accessory socket (Operation)	-	I	I	I	I	I	I	I	I	I
BODY											
11-1.	All chassis bolts and nuts (Tighten)	-	T	T	T	T	T	T	T	T	T
11-2.	All latches, hinges and locks (Function)	I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
ROAD TEST											
12-1.	Operation of Brakes, gear shifting and speedometer	I	I	I	I	I	I	I	I	I	I
12-2.	Body and chassis noise	I	I	I	I	I	I	I	I	I	I
AIR CONDITIONER											
13-1.	Check belt tension	I	I	I	I	I	I	I	I	I	I
13-2.	Tighten compressor mounting bolt	-	T	T	T	T	T	T	T	T	T
13-3.	All hose joint (Check, Tighten)	I	I	I	I	I	I	I	I	I	I
13-4.	Check functioning of recirculating flap	I	I	I	I	I	I	I	I	I	I
13-5.	Clean condenser with low pressure water	-	C	C	C	C	C	C	C	C	C
13-6.	Check belt for frayed edges	I	I	I	I	I	I	I	I	I	I
13-7.	Check all mounting bolts	I	I	I	I	I	I	I	I	I	I
13-8.	Air conditioner filter element (if equipped)	I	I	I	I	R	I	I	R	I	I

Drive belt

⚠ WARNING


When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

Check that the drive belt tension is correct. If the belt is too loose, insufficient battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. When you press the belt with your thumb midway between the pulleys, there should be a deflection according to the following chart.

The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by your authorised Maruti Suzuki workshop.

(For petrol engine model)

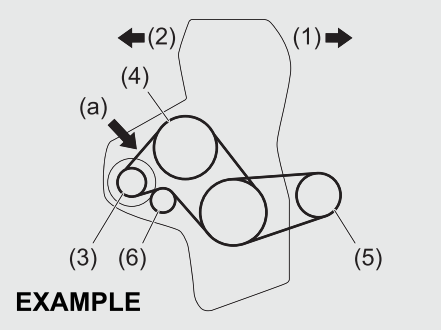

75RM359

(1) Front
(2) Rear
(3) Generator
(4) Water pump
(5) Air conditioner compressor
(6) Tensioner pulley


Drive belt deflection
(100 N (10 kg, 22 lbs) press)
(a) 5.2 – 6.0 mm (0.20 – 0.24 in.)

(For diesel engine model)
The drive belts tension is adjusted automatically.

Engine oil and filter

Specified oil

(For petrol engine model)

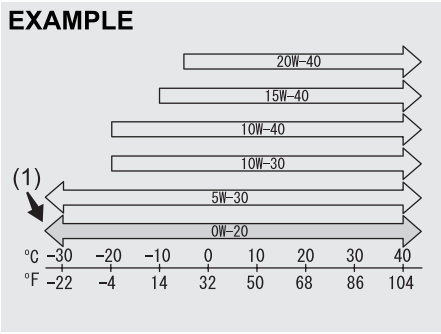


71LST0701

(1) Preferred

Be sure that the engine oil you use comes under the quality classification of SL, SM or SN. Select the appropriate oil viscosity according to the above chart.

SAE 0W-20 (1) is the best choice for good fuel economy and good starting in cold weather.

(For diesel engine model)

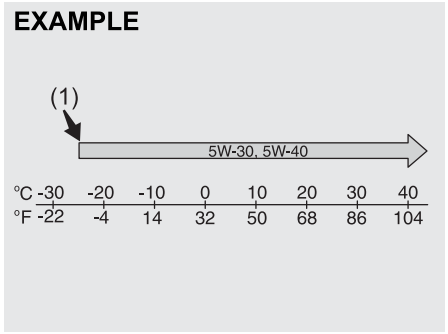

79MH0760


(1) Preferred

Be sure that the engine oil you use comes under the quality classification of ACEA A5/B5. Select the appropriate oil viscosity according to the above chart.


SAE 5W-30 (1) is the best choice for good fuel economy, and good starting in cold weather.

Oil level check

(For petrol engine model)

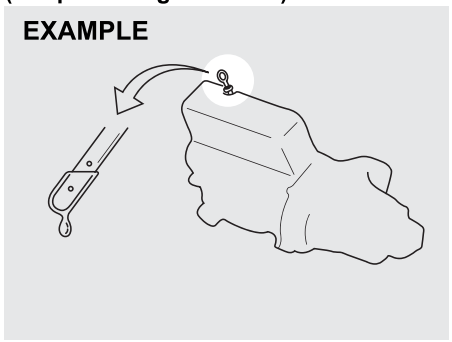


68PH00702

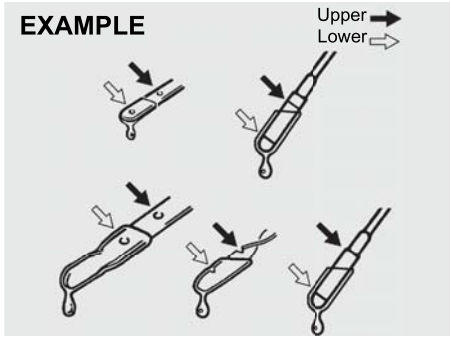


52D084

(For diesel engine model)

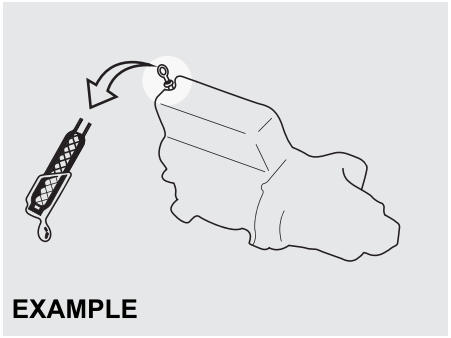

66RM07001

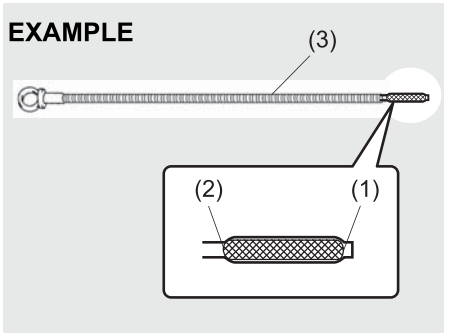

54P000701

(1) MIN
(2) MAX
(3) Engine oil dipstick

It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.
The handle of the engine oil dipstick is colored with yellow for easy identification.


Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, and then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE
Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

NOTICE
(For diesel engine model) **Do not top up the oil over the MAX limit. Too much oil causes serious engine trouble.**


Refilling

(For petrol engine model)

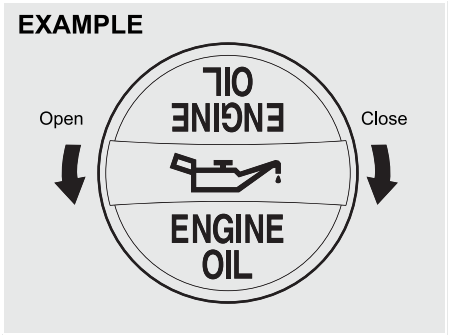

68PH00762

(For diesel engine model)

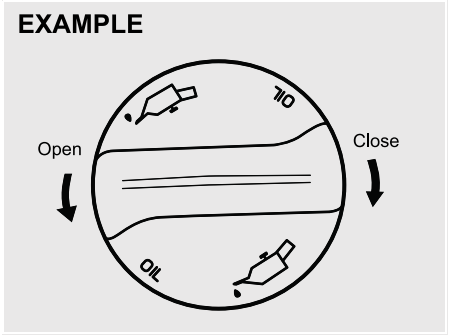


82PM07001

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

Changing engine oil and filter

Drain the engine oil while the engine is still warm.

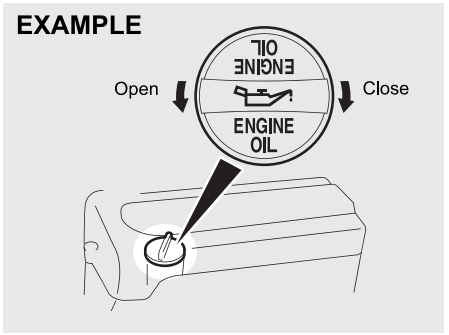


66RH001

1) Remove the oil filler cap.
2) Place a drain pan under the drain plug.
3) Using a wrench, remove the drain plug and drain the engine oil.

⚠ CAUTION
The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

EXAMPLE

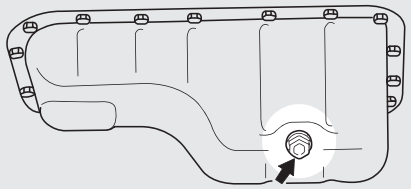

68PH00705

Tightening torque for drain plug
Petrol engine :
35 Nm (3.6 kg-m, 25.8 lb-ft)
Diesel engine :
20 Nm (2.0 kg-m, 14.8 lb-ft)

⚠ WARNING

Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.
Repeated, prolonged contact with used engine oil may cause skin cancer.
Brief contact with used oil may irritate skin.
(Continued)

⚠ WARNING

(Continued)
To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.
Launder any clothing or rags if it is with oil.
Recycle or properly dispose of used oil and oil filters.

4) Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.


Oil filter replacement

NOTE:
(For diesel engine model)
Since special procedures and tools are required, ask your authorised Maruti Suzuki workshop for this job.

1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
2) Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
3) Smear a small amount of engine oil around the rubber gasket of the new oil filter.
4) Screw the new filter by hand until the filter gasket contacts the mounting surface.

(For petrol engine model)

EXAMPLE

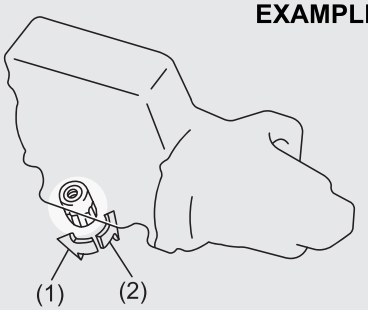


68PH00706

(1) Loosen
(2) Tighten

Tightening (viewed from filter top)


EXAMPLE

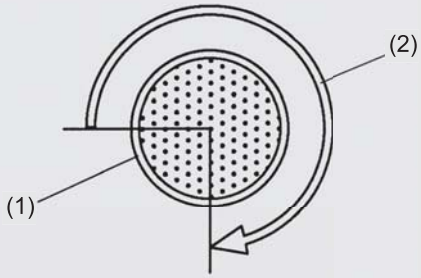

54G093

(1) Oil filter
(2) 3/4 turn

(For diesel engine model)

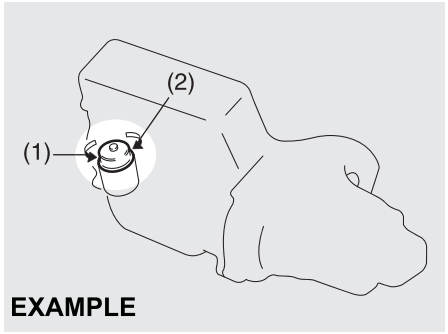

84E016

(1) Loosen
(2) Tighten

NOTICE
To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

5) Tighten the filter as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

   Tightening torque for oil filter
   Petrol engine :
   3/4 turn or
   14 Nm (1.4 kg-m, 10.3 lb-ft)
   Diesel engine :
   25 Nm (2.5 kg-m, 18.5 lb-ft)

NOTICE
To prevent oil leakage, check that the oil filter is tight, but do not over-tighten it.

Refill with oil and oil leakage check

1) Pour oil through the filler hole and install the filler cap.
   For the approximate capacity of the oil, refer to “Capacities” in the “SPECIFICATIONS” section.
2) Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
3) Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

NOTICE
• **When replacing the oil filter, it is recommended that you use a MARUTI genuine replacement filter. If you use an aftermarket filter, check that it is of equivalent quality and follow the manufacturer’s instructions.** • **Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have the vehicle inspected by your authorised Maruti Suzuki workshop.**

Engine coolant

Selection of coolant

To maintain optimum performance and durability of your engine, use MARUTI genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your authorised Maruti Suzuki workshop can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- **Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.**
- **Make sure that the proper mix is 50/50 coolant to distilled water (Diesel) and 30/70 (Petrol) and in no case higher than 70/30. Concentrations greater than 70/30 coolant to distilled water will cause overheating conditions.**
- **Do not use straight coolant nor plain water.**
- **Do not add extra inhibitors or additives. They may not be compatible with your cooling system.**
- **Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine damage.**

Coolant level check

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between “FULL” and “LOW” marks.

Adding coolant

⚠ WARNING


Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- **Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.**
- **Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.**
- **If coolant gets in the eyes, flush with water and seek medical attention.**
- **Wash thoroughly after handling coolant.**
- **Keep engine coolant out of the reach of children and pets.**

NOTICE

- **The mixture you use should contain 50% concentration of antifreeze.**
- **If the lowest ambient temperature in your area is expected to be –35°C (–31°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container.**

(For petrol engine model)

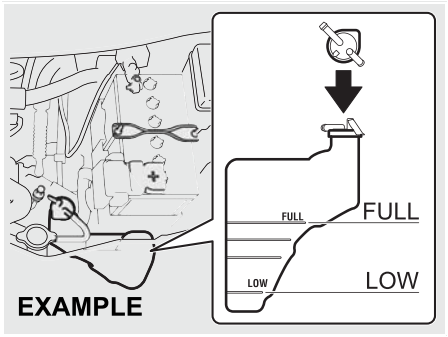


81PN200

If the coolant level is below “LOW” mark, more coolant should be added. Remove the reservoir tank cap and add coolant until the reservoir tank level reaches “FULL” mark. Never fill the reservoir tank above “FULL” mark.

NOTICE

When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

(For diesel engine model)

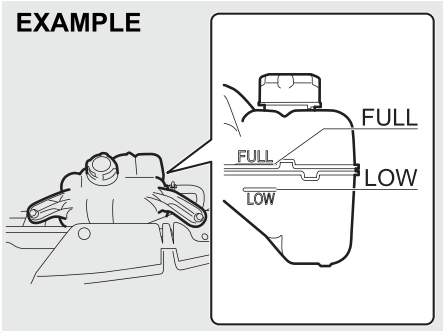

66RH089

⚠ WARNING

It is hazardous to remove the reservoir tank cap (degassing tank cap) for a diesel engine when the water temperature is high, because scalding fluid and steam may be blown out under pressure. Wait until the coolant temperature has lowered before removing the cap.

If the coolant level is below “LOW” mark, more coolant should be added. When the engine is cool, remove the degassing tank cap by turning it counterclockwise slowly to release any pressure. And add coolant until the degassing tank level reaches “FULL” mark. Never fill the degassing tank above “FULL” mark.


Coolant replacement

Since special procedures are required, ask your authorised Maruti Suzuki workshop for this job.

Air cleaner


If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

(For petrol engine model)

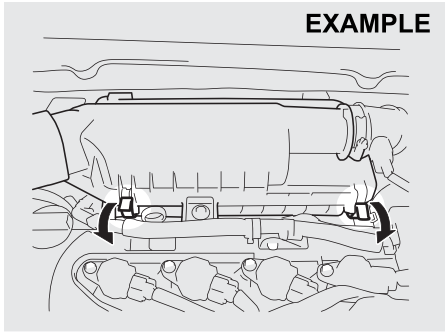

75RM064

(For diesel engine model)

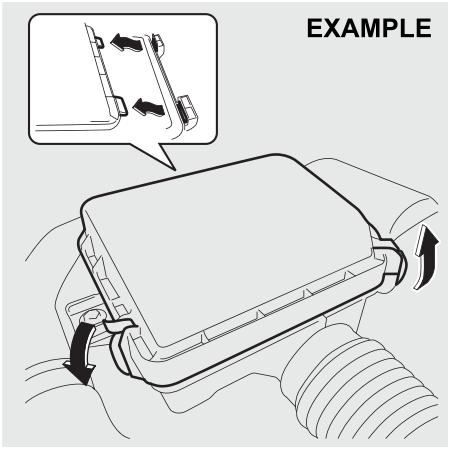

66RH090

1) Unclamp the side clamps and remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.
2) Clamp the side clamps securely.

Spark plugs (Petrol engine model)

Spark plug replacement and inspection

Since special procedures, materials and tools are required, it is recommended that you trust this job to your authorised Maruti Suzuki workshop.


Gear oil

Manual transaxle oil / Auto Gear Shift oil

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use “MARUTI GENUINE GEAR OIL 75W-80” for manual transaxle or Auto Gear Shift oil.


Manual transaxle oil / Auto Gear Shift oil

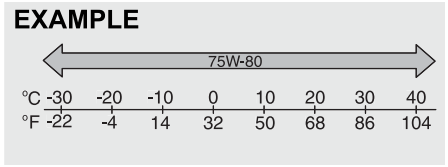

68LM728

Gear oil level check


(For petrol engine model)

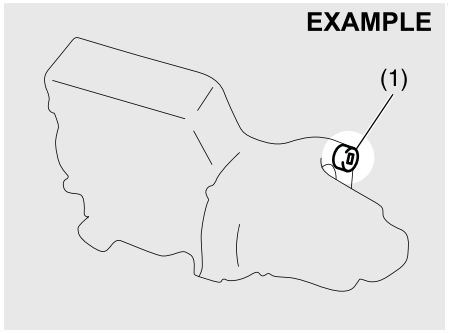

68KH073

(1) Oil filler and level plug

(For diesel engine model)

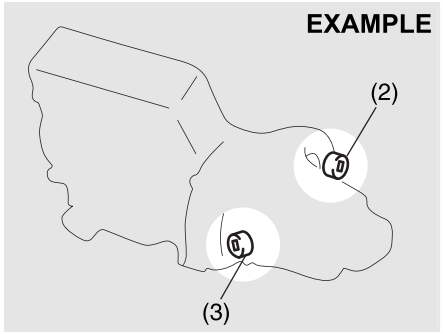

68PH00712

(2) Oil filler and level plug (for Auto Gear Shift)
(3) Oil filler and level plug (for manual transaxle)

To check the gear oil level, use the following procedure:

1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
2) Remove the oil filler and level plug.
3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole.

Tightening torque for oil filler and level plug

Manual transaxle (1) or (3):
21 Nm (2.1 kg-m, 15.5 lb-ft)

Auto Gear Shift (1) or (2):
21 Nm (2.1 kg-m, 15.5 lb-ft)

⚠ CAUTION

After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug are cool enough to touch with your bare hands before inspecting gear oil level.


NOTICE
When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage. **MARUTI SUZUKI Bond No. “1216E” or “1217G”.**

Gear oil change

Since special procedures, materials and tools are required, ask your authorised Maruti Suzuki workshop for this job.

Clutch pedal

Cable control clutch (if equipped)

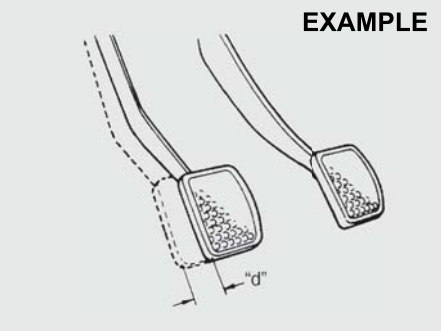


54G274

Clutch pedal play “d”:
10 - 15 mm (0.4 - 0.6 in.)

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be between the specified values. If the play is more or less than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by your authorised Maruti Suzuki workshop.

Fluid control clutch (if equipped)

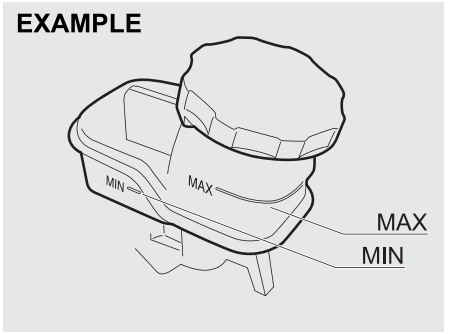

66RH139

Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by your authorised Maruti Suzuki workshop. If the clutch fluid level is near “MIN” line, fill it up to “MAX” line with Maruti Genuine Brake Fluid (MGBF) or DOT 3.
We highly recommend to use “Maruti Genuine Brake Fluid” (MGBF).


Fuel filter (Diesel engine model)

If the fuel filter warning light comes on when driving, there is a possibility that water is in the fuel filter. Drain water as soon as possible. Have your vehicle inspected by an authorised Maruti Suzuki workshop.

Brakes

Brake fluid

EXAMPLE

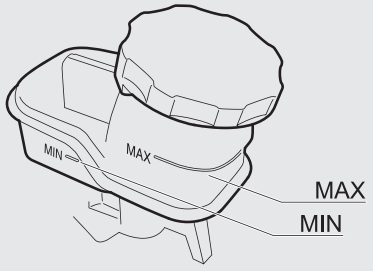

66RH139

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between “MAX” and “MIN” lines. If the brake fluid level is near “MIN” line, fill it up to “MAX” line with Maruti Genuine Brake Fluid (MGBF) or DOT 3.
We highly recommend to use “Maruti Genuine Brake Fluid” (MGBF).

⚠ WARNING

Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.

- **If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument cluster will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask your authorised Maruti Suzuki workshop to inspect the brake system.**
- **A rapid fluid loss indicates leakage in the brake system which should be inspected by your authorised Maruti Suzuki workshop immediately.**
- **Do not use any fluid other than Maruti Genuine Brake Fluid (MGBF) or DOT 3. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.**

⚠ CAUTION

Brake fluid can harm your eyes and damage painted surfaces. Be careful when refilling the reservoir.


⚠ WARNING

Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.

NOTE:
With disc brakes, the fluid level can be expected to gradually fall as the brake pads wear.

Brake pedal

Check brake pedal stroke. If the stroke is so large, have the brake system inspected by your authorised Maruti Suzuki workshop. If you doubt the brake pedal is at its normal height, check it as follows:

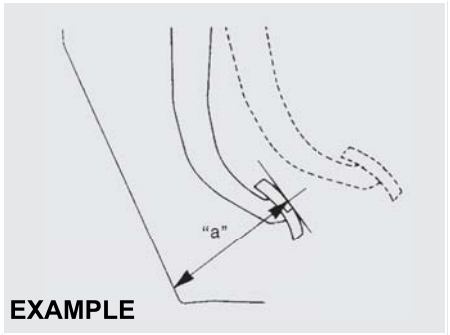


54G108

Minimum distance between brake pedal and floor carpet "a":
Petrol engine model:
52 mm (2.0 in.)
Diesel engine model:
44 mm (1.7 in.)

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.
If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by your authorised Maruti Suzuki workshop.

NOTE:
When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor wall in your measurement.

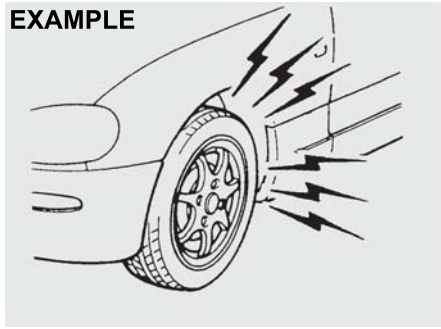


60G104S

⚠ WARNING

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by your authorised Maruti Suzuki workshop.
- **Poor braking performance**
- **Uneven braking (brakes not working uniformly on all wheels).**
- **Excessive pedal travel**
- **Brake dragging**
- **Excessive noise**

Parking brake

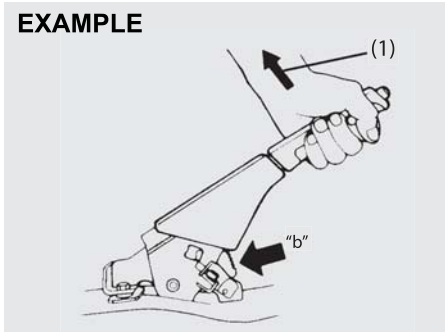


68PM7001

Ratchet tooth specification "b":
4th – 9th
Lever pull force (1):
200 N (20 kg, 45 lbs)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag after the lever has been fully released, have the parking brake inspected and/or adjusted by your authorised Maruti Suzuki workshop.

Steering

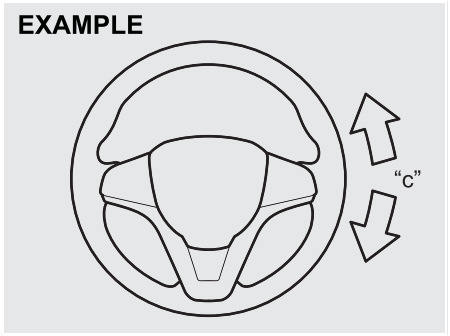


75RM035

Steering wheel play "c":
0 – 30 mm (0.0 – 1.2 in.)

Check the play of the steering wheel by gently turning it from left to right and right to left, with wheels in straight ahead position and engine in OFF condition. Measure the distance that the steering moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is not as specified or you find anything else to be wrong, an inspection must be performed by your authorised Maruti Suzuki workshop.

Tires

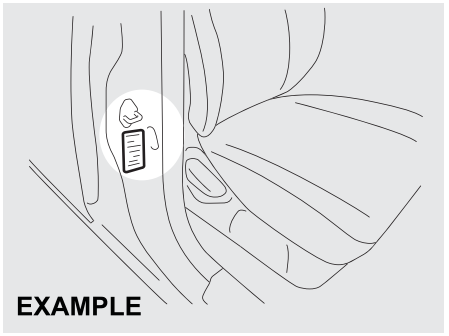

74LHT0704

The front and rear tire pressure specifications are listed on the tire information label. Both front and rear tires should have the specified tire pressure.
Note that the value does not apply to the compact spare tire, if equipped.

Tire inspection


Inspect your vehicle's tires at least once a month by performing the following checks:

1) Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.

⚠ WARNING

- **Air pressures should be checked when the tires are cold or you may get inaccurate readings.**
- **Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.**
- **Never under-inflate or over-inflate the tires.**
  Under-inflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim.
  Over-inflation can cause the tire to burst, resulting in personal injury. Over-inflation can also cause unusual handling characteristics which may result in an accident.

EXAMPLE

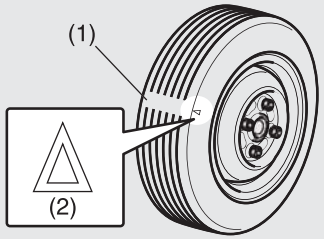

52KM110

(1) Tread wear indicator
(2) Indicator location mark

2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.). or less and the tire should be replaced.
3) Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by your authorised Maruti Suzuki workshop.

⚠ CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Have tires and wheel alignment checked periodically by your authorised Maruti Suzuki workshop.

4) Check for loose wheel nuts.
5) Check that there are no nails, stones or other objects sticking into the tires.

⚠ WARNING


- **Your MARUTI SUZUKI vehicle is equipped with tires which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.**
- **Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle.**
- **Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.**

NOTICE

Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with your authorised Maruti Suzuki workshop before purchasing replacement tires that differ in size from the original tires.


Tire rotation

4-tire rotation

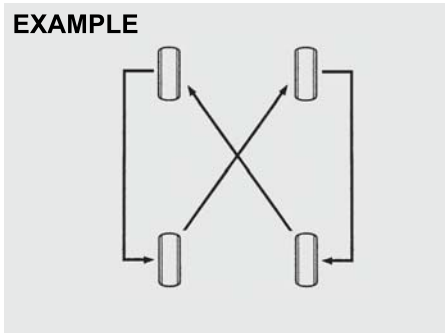

54G114

5-tire rotation

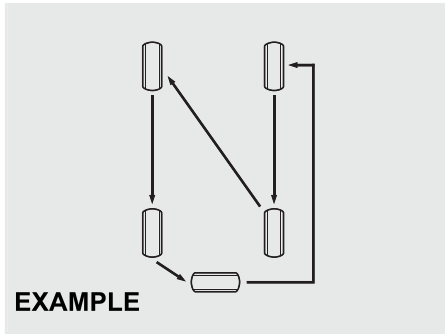


68PH00755

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated every 10000 km. After rotation, adjust front and rear tire pressures to the specification listed on your vehicle's tire information label.

Battery

⚠ WARNING

- **Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.**
- **When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.**
- **To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions in the "EMERGENCY SERVICE" section if it is necessary to jump-start your vehicle.**
- **Diluted sulfuric acid spilled from battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.**

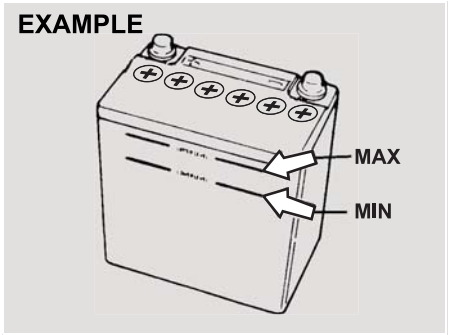


54GM701

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery solution must be kept between the "MAX" and the "MIN" level lines at all times. If the level is found to be below the "MIN" level line, add distilled water to the "MAX" level line. You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.


Replacement of the battery

(For petrol engine model)

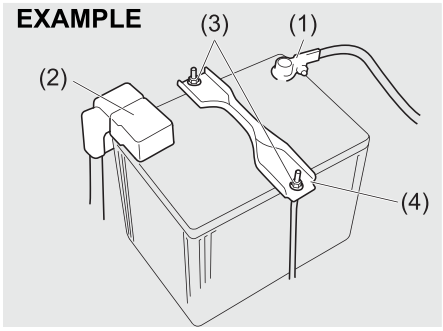

68PH00719

(For diesel engine model)

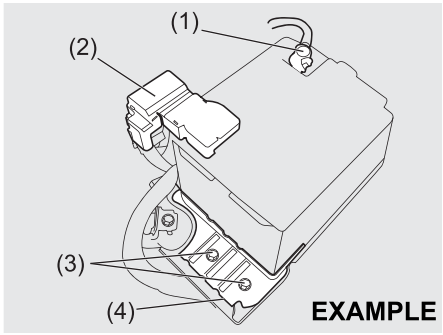

66RM07002

To remove the battery:
1) Disconnect the negative cable (1).
2) Disconnect the positive cable (2).

For petrol engine model;
3) Remove the retainer nuts (3) and remove the retainer (4).

For diesel engine model;
3) Remove the bracket bolt (3) and remove the bracket (4).
4) Remove the battery.

To install the battery:
1) Install the battery in the reverse order of removal.
2) Tighten the bracket bolt and battery cables securely.

NOTE:
When the battery is disconnected, some of the vehicle's function will be initialized and/or deactivated.
These function are required to reset after the battery is reconnected.

⚠ WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used battery must be disposed or recycled according to the local law and must not be discarded with ordinary household waste. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injury.

Fuses

Your vehicle has three types of fuses, as described below:


Main fuse
The main fuse takes current directly from the battery.

Primary fuses
These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses
These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller provided in the fuse box.


EXAMPLE

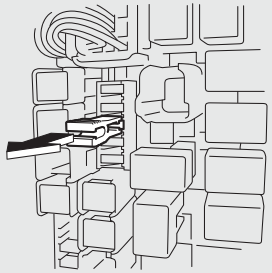

63J095


Fuses in engine compartment

EXAMPLE

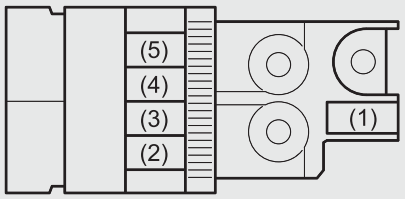

66RH105

EXAMPLE

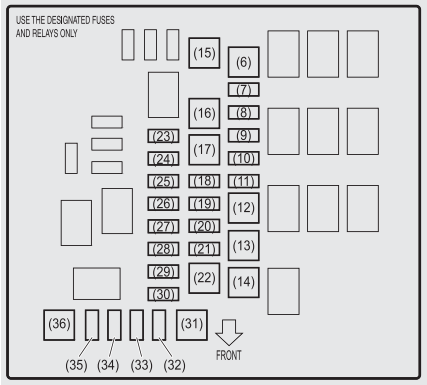


66RH106

MAIN FUSE / PRIMARY FUSE		
(1)	120 A	FL1
(2)	100 A	FL2
(3)	80 A	FL3
(4)	100 A	FL4
(5)	50 A	FL5
(6)	40 A	Power steering
(7)	5 A	ECM
(8)	10 A	Air compressor
(9)	25 A	Headlight high
(10)	15 A	Headlight (Left)
(11)	15 A	Headlight (Right)
(12)	30 A	Starter motor
(13)	30 A*1 40 A*2	Radiator fan
(14)	–	Blank
(15)	40 A	Ignition switch 2
(16)	–	Blank
(17)	30 A	T/M pump
(18)	30 A	Back-up
(19)	–	Blank
(20)	15 A	Front fog light
(21)	–	Blank
(22)	30 A	Blower fan
(23)	–	Blank
(24)	5 A	Starting signal
(25)	–	Blank
(26)	15 A	Headlight high (Left)
(27)	15 A	Headlight high (Right)
(28)	20 A	INJ DRV
(29)	10 A	FI 2
(30)	15 A*1 30 A*2	FI
(31)	40 A	ABS motor
(32)	25 A	ABS solenoid
(33)	20 A	Fuel pump
(34)	10 A	T/M 2
(35)	5 A	T/M 3
(36)	40 A	Ignition switch

*1: Petrol engine model
*2: Diesel engine model

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a genuine MARUTI replacement. To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

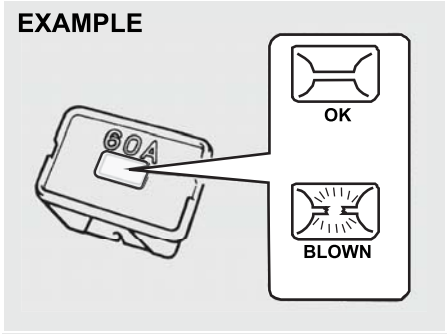


68PH00723

⚠ WARNING

If the main fuse or a primary fuse blows, have your vehicle inspected by an authorised Maruti Suzuki workshop Always use a genuine MARUTI replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.


NOTE:
Check that the fuse box always carries spare fuses.

Fuses under dashboard

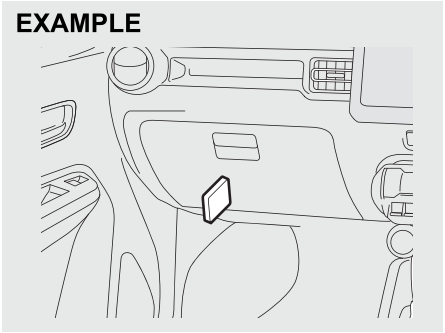

66RH084

Type A

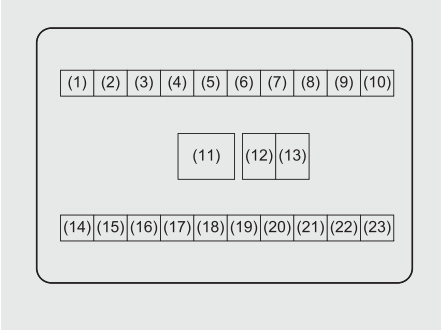


68PH00725

PRIMARY FUSE		
(1)	10 A	Back-up light
(2)	15 A	Ignition coil
(3)	10 A	Meter
(4)	10 A	Wiper
(5)	5 A	Ignition-2 signal
(6)	15 A	Washer
(7)	25 A	Front wiper
(8)	10 A	Tail light
(9)	10 A	Hazard
(10)	10 A	Stop light
(11)	30 A	Power window

(12)	15 A	ACC-2
(13)	5 A	ACC
(14)	5 A	Starting signal
(15)	10 A	Ignition-1 signal
(16)	10 A	Air bag
(17)	5 A	ABS control module
(18)	15 A	Horn
(19)	20 A	Door lock
(20)	25 A	RR defogger
(21)	15 A	Radio
(22)	5 A	Dome light
(23)	10 A	Dome light-2

Type B

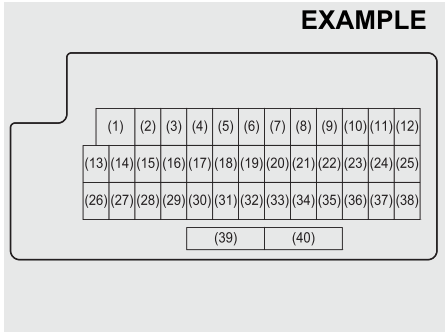


68PH00759

PRIMARY FUSE		
(1)	30 A	Power window
(2)	10 A	Meter
(3)	15 A	Ignition coil
(4)	5 A	Ignition-1 signal 2
(5)	20 A	Shift
(6)	20 A	S/R
(7)	–	Blank
(8)	20 A	Door lock
(9)	15 A	Steering lock
(10)	10 A	Hazard
(11)	5 A	A-STOP
(12)	10 A	Rear fog lamp
(13)	5 A	ABS control module
(14)	15 A	S/H
(15)	5 A	IG1 SIG3
(16)	10 A	Dome light-2
(17)	5 A	Dome light
(18)	15 A	Radio
(19)	5 A	Cont
(20)	5 A	Key 2

(21)	20 A	P/W T
(22)	5 A	Key
(23)	15 A	Horn
(24)	5 A	Tail light (Left)
(25)	10 A	Tail light
(26)	10 A	Air bag
(27)	10 A	Ignition-1 signal
(28)	10 A	Back-up light
(29)	5 A	ACC-3
(30)	20 A	Rear defogger
(31)	10 A	Heated mirror
(32)	15 A	ACC-2
(33)	5 A	ACC
(34)	10 A	Wiper
(35)	5 A	Ignition-2 signal
(36)	15 A	Washer
(37)	25 A	Front wiper
(38)	10 A	Stop light
(39)	–	Blank
(40)	25 A	Rear defogger

EXAMPLE

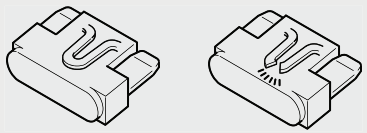

81A283

⚠ WARNING

Always replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by your authorised Maruti Suzuki workshop.

Headlight aiming

Since special procedures are required, ask your authorised Maruti Suzuki workshop for this job.

Bulb replacement

⚠ CAUTION

- **Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.**
- **The halogen headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.**
- **To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.**

NOTICE

- **The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.**
- **During bulb replacement, always use same bulb number as used in the vehicle.**

NOTICE


Frequent bulb replacement indicates the need for an inspection of the electrical system. This should be carried out by your authorised Maruti Suzuki workshop.

NOTE:
Mist may form on the lenses of exterior lights (Headlight, Rear combination light etc.) during or after driving in the rain or after car washing. This is a natural phenomenon which occurs due to temperature difference between lamp inside and outside. Temporary mist on the lens is not a malfunction and will not cause any discomfort during vehicle driving.
The mist would get cleared when the environmental condition change to sunny or when headlamp is kept on. However if there is water leakage inside the lamp, contact your authorised Maruti Suzuki workshop.

Interior light


Remove the lens by using a flat-bladed screwdriver covered with a soft cloth as shown. To install it, simply push it back in.

Front

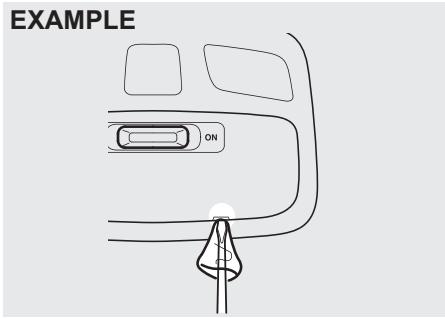


76MH0A139

Luggage compartment (if equipped)

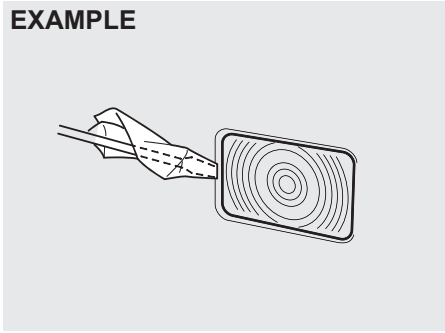

81PN162

Courtesy light (if equipped)

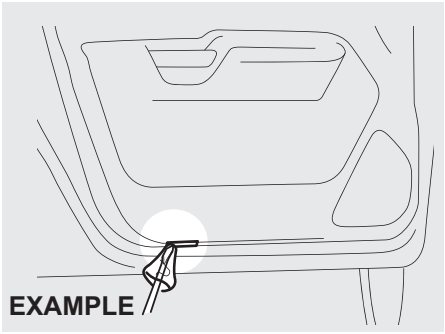


66RH140

Headlights

LED headlights (if equipped)


Since special procedures are required, we recommend you take your vehicle to your authorised Maruti Suzuki workshop for bulb replacement.

Halogen headlights (if equipped)

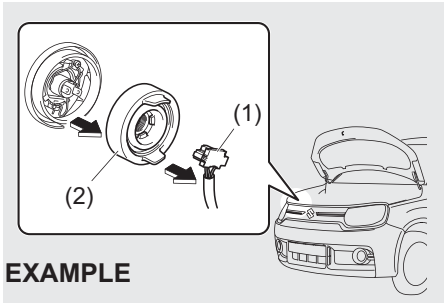


66RH151

1) Open the engine hood. Disconnect the coupler (1). Remove the sealing rubber (2).

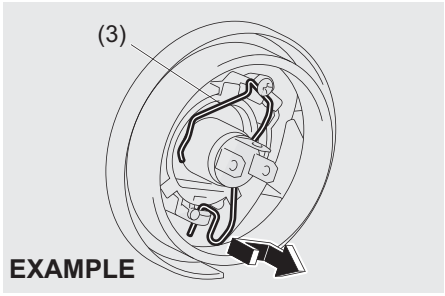

75RM068S

2) Push the retaining spring (3) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order of removal.

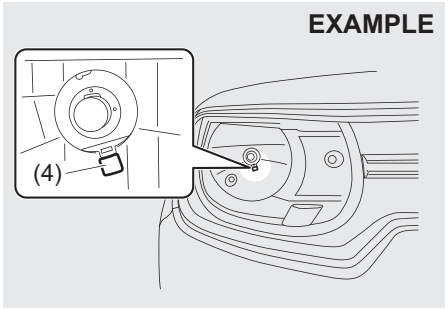


75RM069

NOTE:
You can see the position of retaining spring from the hole (4) of headlight.


Front fog light (if equipped)

1) Start the engine. Turn the steering wheel to the opposite side of the fog light to be replaced to replace the bulb easily. Then turn off the engine.

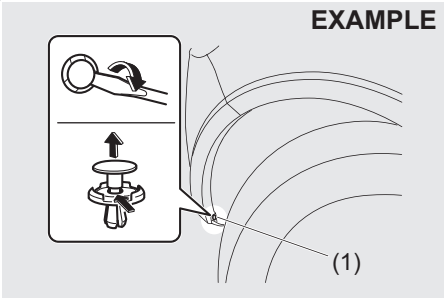

75RM094

2) Remove the clip (1) by prying it off with a flat-bladed screwdriver as shown in the illustration.

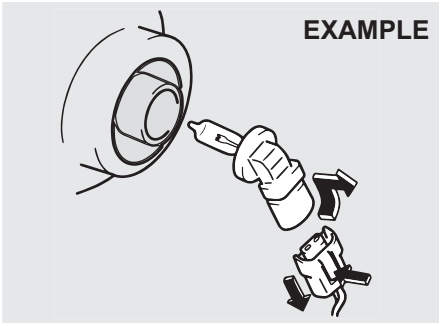


68PH00736

3) Open the end of the cover inside the fender. Disconnect the coupler by pushing the lock release. Turn the bulb holder counterclockwise and remove it.

Other general lights

Bulb holder

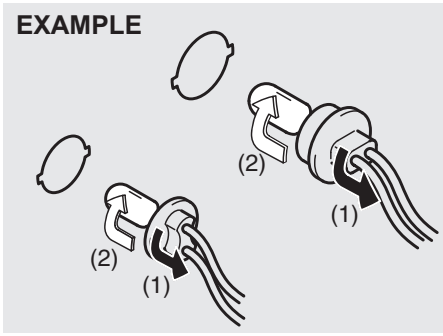


54G123

(1) Removal
(2) Installation

To remove a bulb holder from a light housing, turn the holder counterclockwise and pull it out. To install the holder, push the holder in and turn it clockwise.

Bulb

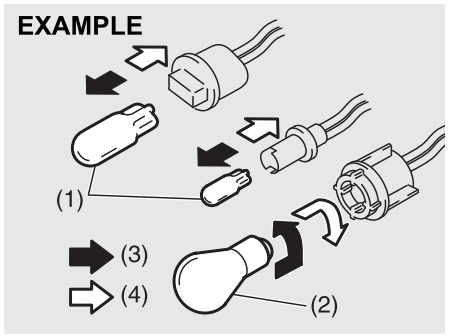

54G124

(3) Removal
(4) Installation

There are two types of bulb, full glass type (1) and glass/metal type (2).


To remove and install a full glass type bulb (1), simply pull out or push in the bulb.

To remove a glass metal type bulb (2) from a bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.

You can access the individual bulb or bulb holders as follows.


Front turn signal light (1)
Front position light (2)

Models with halogen headlights

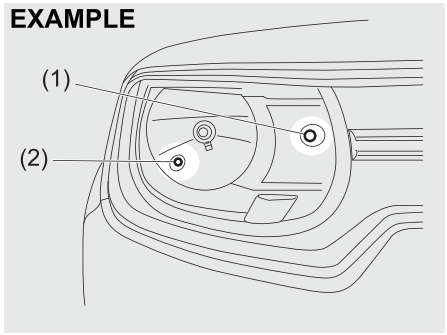


75RM066

Models with LED headlights

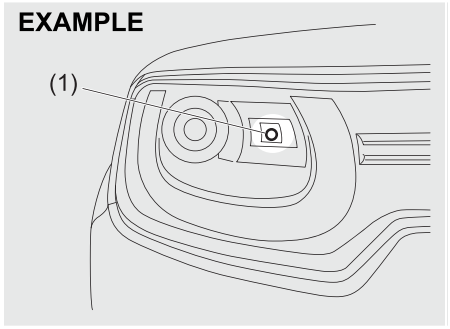


62R0306

Side turn signal light (if equipped)

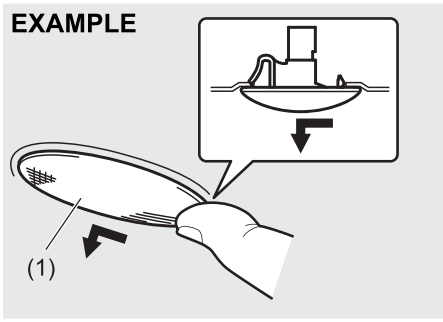

68PH00729


1) Remove the light housing (1) by sliding to left with your finger.

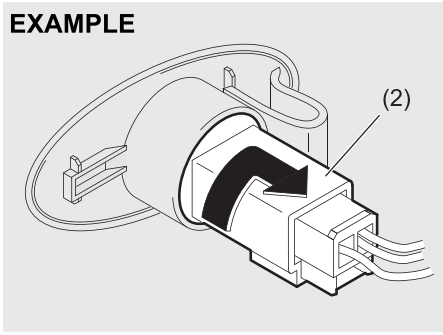

68PH00760

2) Turn the bulb holder (2) clockwise and pull it out from the light housing.

Rear combination light

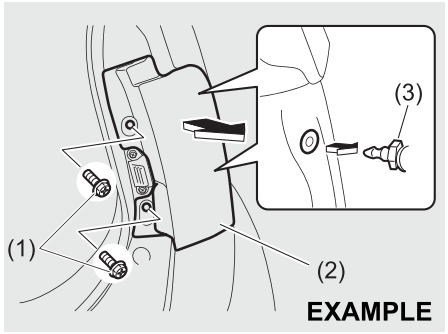


75RM070

Remove the bolts (1) and pull the light housing (2) straight.


NOTE:
When reinstalling the light housing, check that the clips (3) are properly attached.

Reversing light

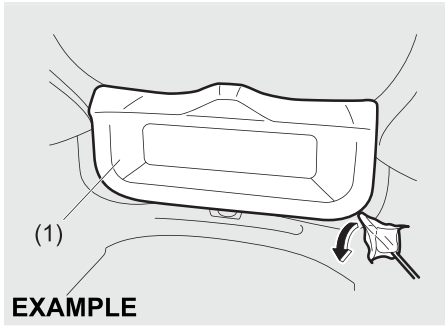

62R0122


1) Open the tailgate and remove the trim (1) of the tailgate.
   • Insert a flat blade screwdriver covered with a soft cloth between the trim and the tailgate to make a space for fingers, and then pull out the trim with your fingers.

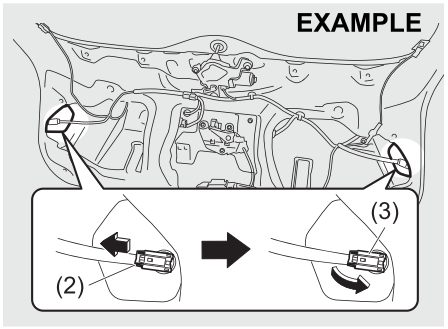

62R0378


2) Disconnect the coupler (2) by pushing the lock release. Turn the bulb holder of the reversing light (3) counterclockwise and remove it.

License plate light

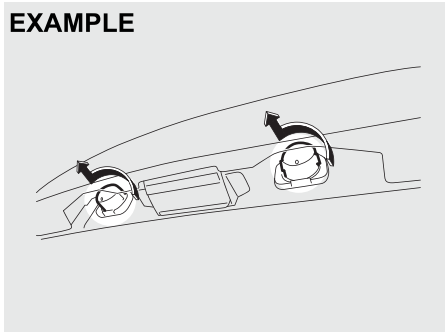

75RM071

Wiper blades

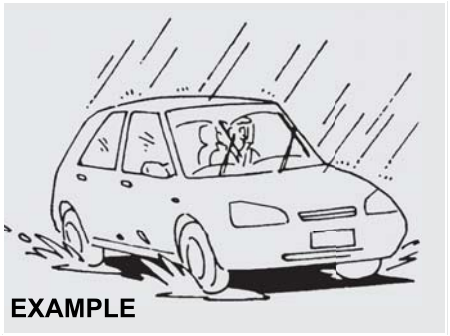

54G129


If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.

NOTICE
To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

NOTE:
Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult your authorised Maruti Suzuki workshop for proper replacement method.


For windshield wipers:

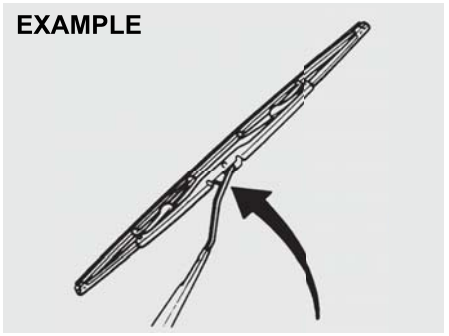

70G119

1) Hold the wiper arm away from the window.


NOTE:
When raising both of the front wiper arms, pull the driver's side wiper arm up first.
When returning the wiper arms, lower the passenger's side wiper arm first.
Otherwise, the wiper arms may interfere with each other.

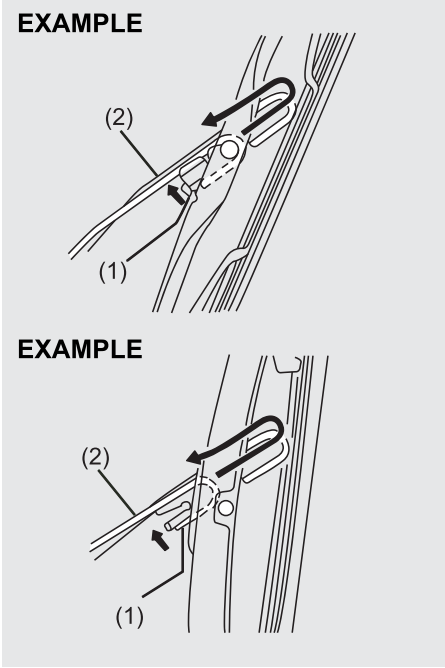

68PH00750


2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
3) Unlock the lock end of the wiper blade and slide the blade out as shown.

Removal

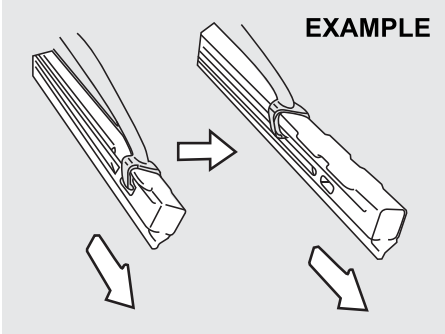


68PH00751

Installation

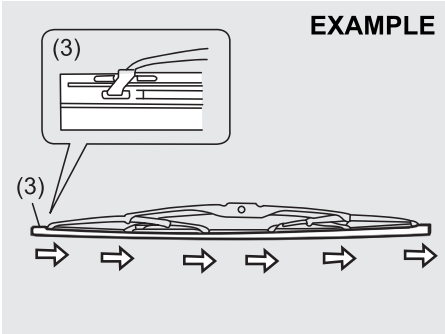

68PH00752


(3) Locked end

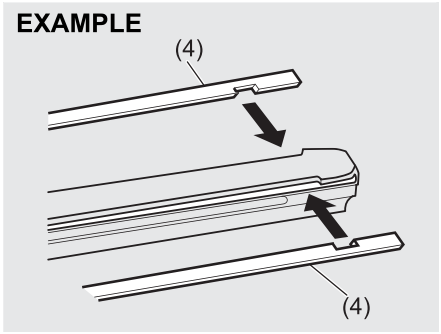


68PH00753

(4) Retainer

4) If the new blade is provided without the two metal retainers (4), move them from the old blade to the new one.

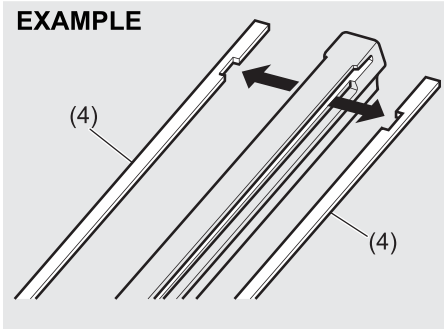

68PH00754

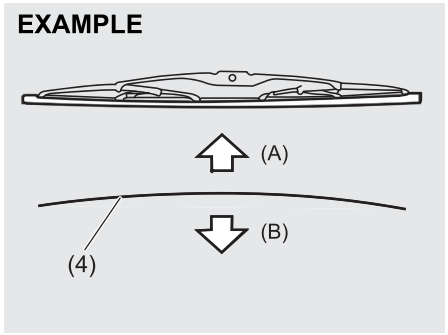


60MHM7001

(A) Up
(B) Down

NOTE:
When you install the metal retainers (4), check that the direction of metal retainers is as shown in the above illustrations.


5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm.
   Check that the blade is properly retained by all the hooks. Lock the blade end into place.
6) Reinstall wiper frame to arm, checking that the lock lever is snapped securely into the arm.

For rear wipers:

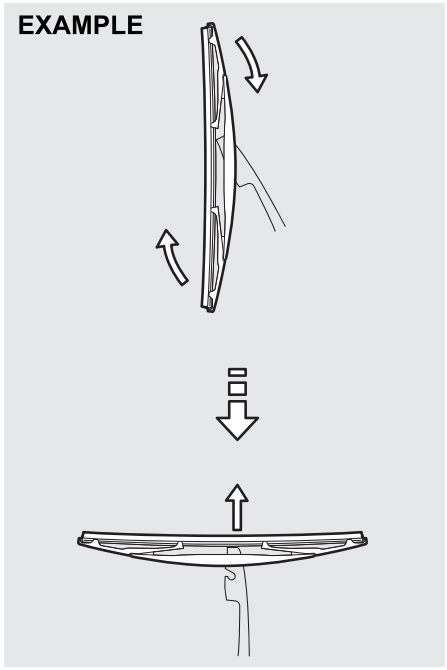


68PH00763

1) Hold the wiper arm away from the window.
2) Remove the wiper frame from the arm as shown.
3) Slide the blade out as shown.

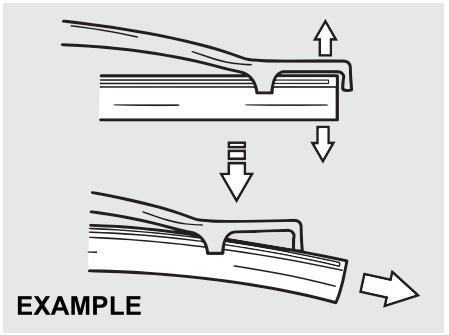

68PH00764

NOTE:
Do not flex the wiper blade frame end more than necessary. If you do, it can break off.

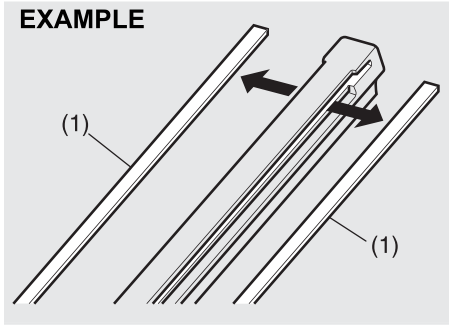


68PH00765

(1) Retainer

4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.
5) Install the new blade in the reverse order of removal.
   Check that the blade is properly retained by all the hooks.
6) Reinstall wiper frame to arm in the reverse order of removal.

Windshield washer fluid

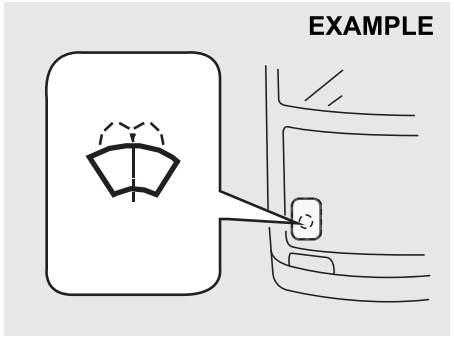

68PH00756

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

⚠ WARNING

Do not use anti-freeze solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also damage your vehicle's paint.

NOTICE


Damage may result if the washer motor is operated with no fluid in the washer tank.

Air conditioning system

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.


Replacement of the Air Conditioner Filter (if equipped)

Since special procedures are required, we recommend you take your vehicle to your authorised Maruti Suzuki workshop for the air conditioner filter replacement.

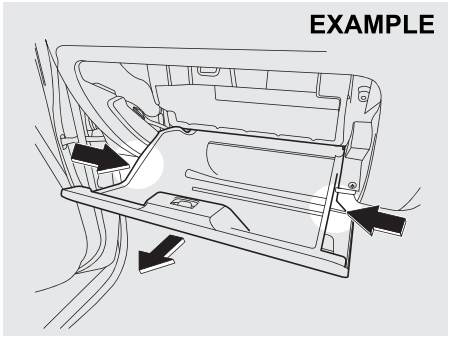

66RM07003

1) To approach the air conditioner filter, press inward on both sides of the glove box, pull it frontward and remove it.

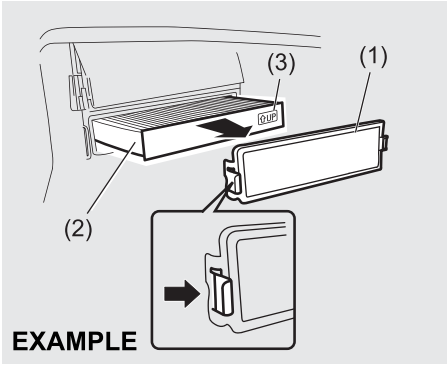


66RM07004

2) Remove the cover (1) and pull out the air conditioner filter (2).

NOTE:
When you install a new filter, make sure the UP mark (3) faces upward.

EMERGENCY SERVICE

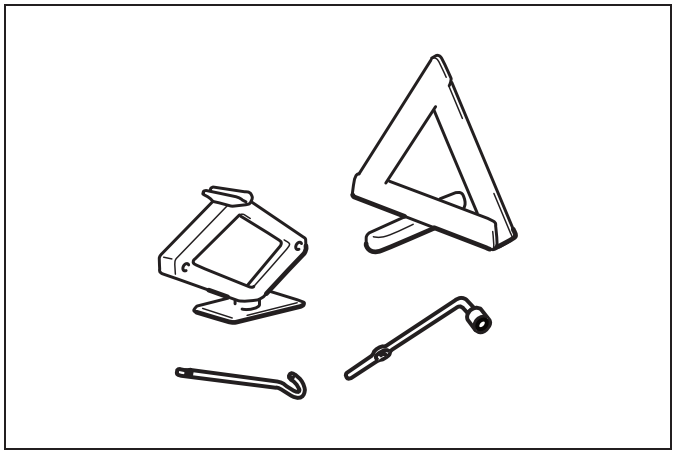


60G411A

Tire changing tool 8-1
Jacking instructions 8-2
Jump-starting instructions 8-6
Towing 8-8
Engine trouble: Starter does not operate 8-9
Engine trouble: Flooded engine 8-9
Engine trouble: Overheating 8-9
Warning Triangle 8-11

Tire changing tool

EXAMPLE

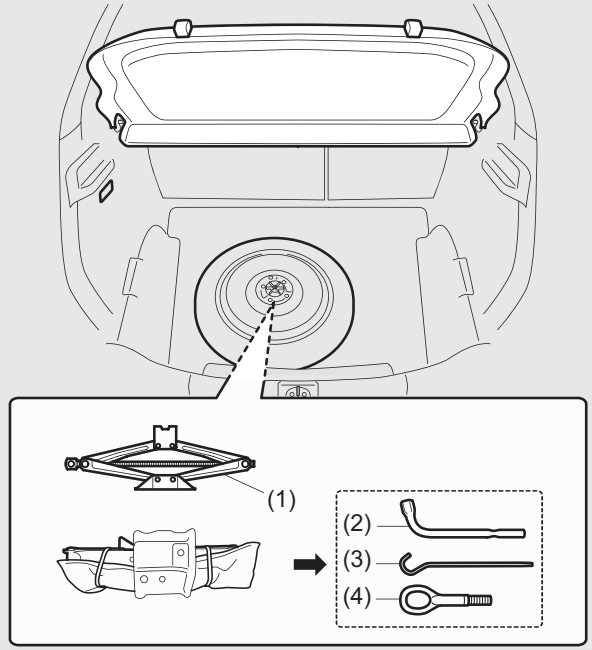

66RM08003

(1) Jack
(2) Wheel brace
(3) Jack handle
(4) Towing hook


The tire changing tools are stowed in the luggage compartment below the spare tire.

⚠ WARNING

After using the tire changing tools, stow them securely or they can cause injury if an accident occurs.

⚠ CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

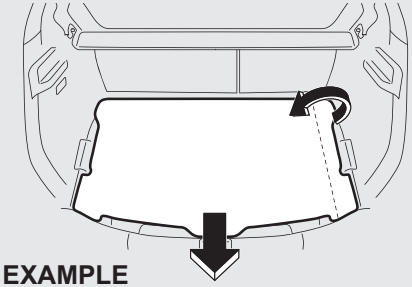


EXAMPLE

66RH157


To remove the luggage compartment board easily, fold the right side of the board and pull it out.

NOTE:
When installing, install the board in the reverse order of removal.

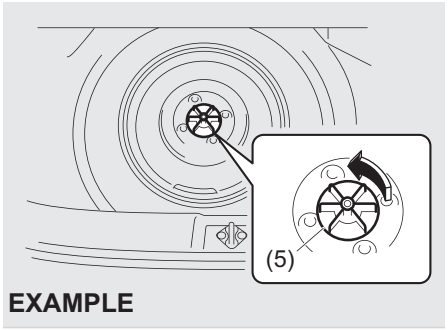


66RM08004

To remove the spare tire, turn its holder bolt (5) counterclockwise and remove it.

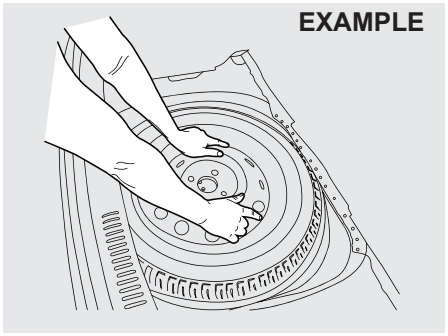

66RM08001

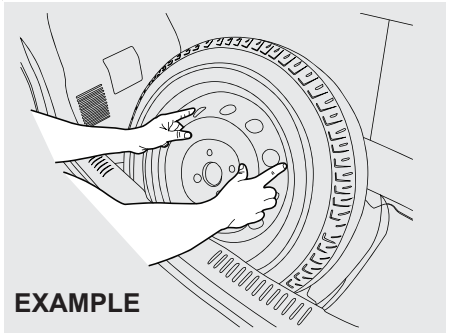


66RM08002

Hold and lift the spare tire as shown in above illustration for easy removal of spare tire. Install spare tire in the reverse order of removal.

While replacing tire with alloy wheel (if equipped) make sure to remove the wheel cap before keeping the tire in the trunk.

NOTICE
Be sure that spare tire does not move after tightening the holder bolt.

Jacking instructions

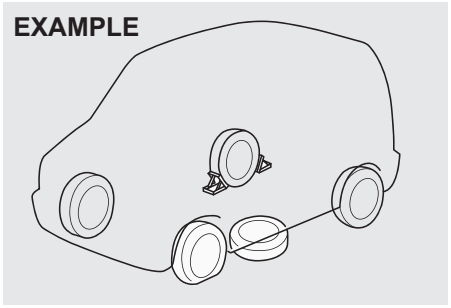

75F062


1) Place the vehicle on level, hard ground.
2) Set the parking brake firmly and shift into “R” (Reverse) if your vehicle has a manual transaxle/Auto Gear Shift.

⚠ WARNING


- **Shift into “R” (Reverse) for a manual transaxle/Auto Gear Shift vehicle when you jack up the vehicle.**
- **Never jack up the vehicle with the transaxle in “N” (Neutral). Otherwise, unstable jack may cause an accident.**

3) Turn on the hazard warning flasher if your vehicle is near traffic.
4) Block the front and rear of the wheel diagonally opposite of the wheel being lifted.


5) Place the spare wheel near the wheel being lifted as shown in the illustration in case the jack slips.

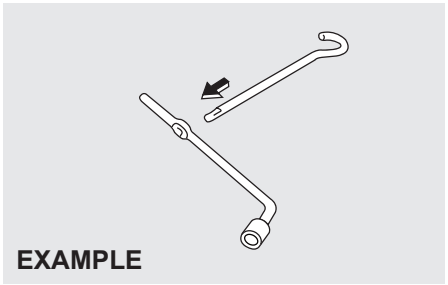

66RM08006

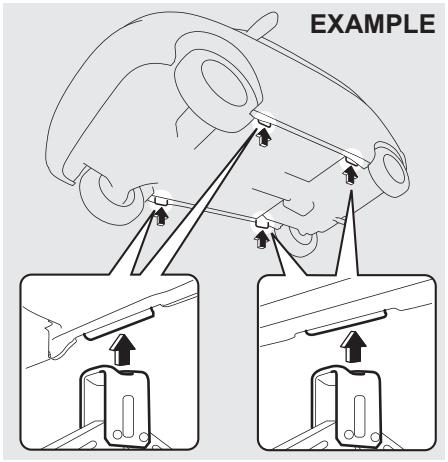

75RM077

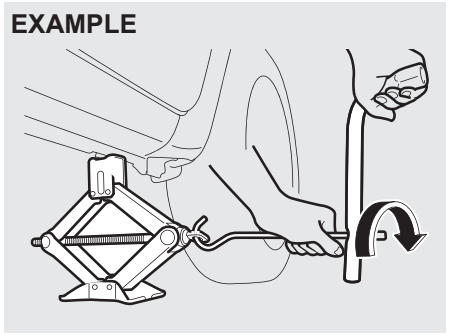

75RM078

6) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body.
7) Continue to raise the jack slowly and smoothly until the tire clears the ground. Do not raise the vehicle more than necessary.


⚠ WARNING

- **Use the jack only to change wheels on level, hard ground.**
- **Never jack up the vehicle on an inclined surface.**
- **Never raise the vehicle with the jack in a location other than the specified jacking point (shown in the illustration) near the wheel to be changed.**
- **Check that the jack is raised at least 25 mm (1 inch) before it contacts the flange. Use of the jack when it is within 25 mm (1 inch) of being fully collapsed may result in failure of the jack.**
- **Never get under the vehicle when it is supported by the jack.**
- **Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.**

Raising vehicle with garage jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

EXAMPLE

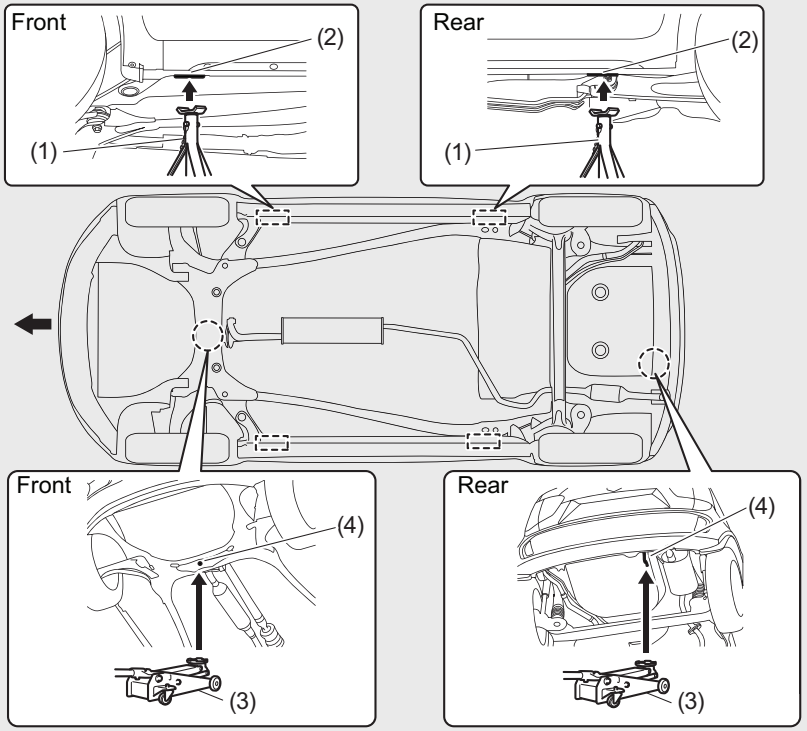

66RM08005S

(1) Jack stand
(2) Jacking point for jack stand
(3) Garage jack
(4) Jacking point for garage jack

NOTICE

Never apply a garage jack to the exhaust pipe, side under spoiler (if equipped), engine undercover or rear torsion beam.

NOTE:
For more details, contact an authorised Maruti Suzuki workshop.

Changing wheels


To change a wheel, use the following procedure:

1) Remove the jack, tools and spare wheel from the vehicle.
2) Loosen, but do not remove the wheel nuts.
3) Jack up the vehicle (follow the jacking instructions in this section).

⚠ WARNING


- **Shift into "R" (Reverse) for a manual transaxle/Auto Gear Shift vehicle when you jack up the vehicle.**
- **Never jack up the vehicle with the transaxle in "N" (Neutral). Otherwise, unstable jack may cause an accident.**

4) Remove the wheel nuts and wheel.

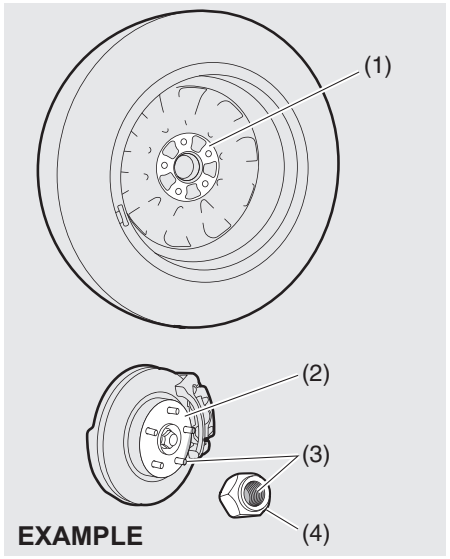

65J4033

5) Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth. Clean the hub carefully; it may be hot from driving.
6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

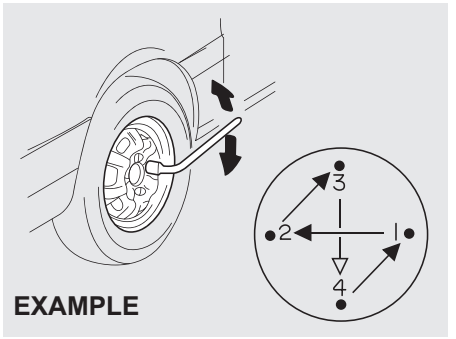


54G116

Tightening torque for wheel nut
85 Nm (8.7 kg-m, 62.7 lb-ft)

7) Lower the jack and fully tighten the nuts with a wrench in numerical order as shown in the illustration.

⚠ WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by an authorised Maruti Suzuki workshop.

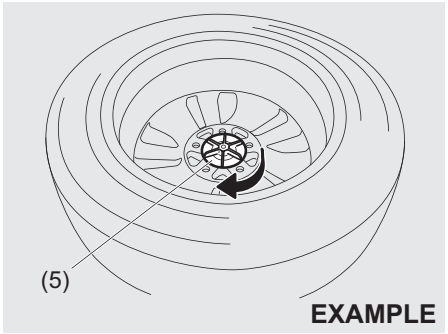


82PM08006

Return the spare tire back into the luggage compartment in the reverse order of removal and tighten its bolt (5) clockwise as shown in the above illustration.

NOTICE

Make sure that the spare tire is fixed securely on the floor. Loosely fixed tire may cause noise during driving and damage paint on vehicle body.


Full wheel cover (if equipped)

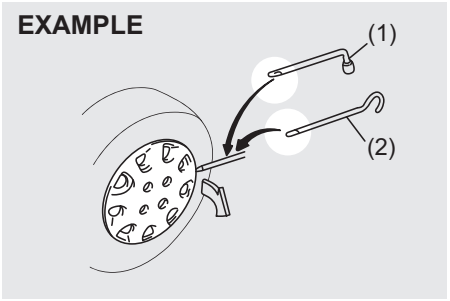

60G309

(1) or (2) Flat end tool

Your vehicle includes two tools, a wheel brace and a jack crank, one of which has a flat end.
Use the tool with the flat end to remove the full wheel cap, as shown above.

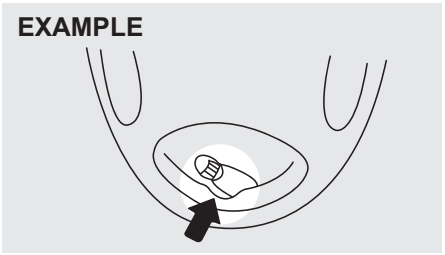

54P000803

Install the full wheel cover not to cover or foul the air valve.

Jump-starting instructions


⚠ WARNING

- **Never attempt to jump-start your vehicle if the battery appears to be frozen. Batteries in this condition may explode.**
- **When making jump lead connections, check that your hands and the jump leads remain clear from pulleys, belts or fans.**
- **Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.**
- **If the booster battery you use for jump-starting is installed in another vehicle, check that the two vehicles are not touching each other.**
- **If your battery discharges repeatedly, for no apparent reason, have your vehicle inspected by an authorised Maruti Suzuki workshop.**
- **To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions below.**
  If you are in doubt, call for qualified road service.

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

1) Use only a 12-volt battery to jump-start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
2) Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

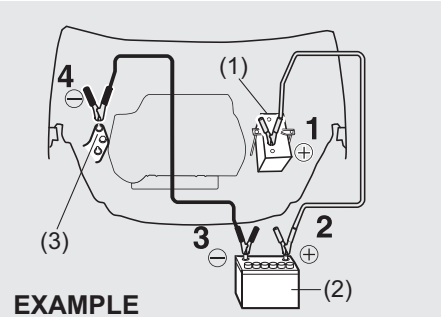

EXAMPLE

54P000804

3) Connect jump leads as follows:
   1. Connect one end of the first jump lead to the positive (+) terminal of the flat battery (1).
   2. Connect the other end to the positive (+) terminal of the booster battery (2).
   3. Connect one end of the second jump lead to the negative (–) terminal of the booster battery (2).
   4. Make the final connection to an unpainted, heavy metal part (i.e. engine mount bracket (3)) of the engine of the vehicle with the flat battery (1).

⚠ WARNING

Never connect the jump lead directly to the negative (–) terminal of the discharged battery, or an explosion may occur.

⚠ CAUTION

Connect the jump lead to the engine mount bracket securely. If the jump lead disconnects from the engine mount bracket because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
5) Start the engine of the vehicle with the flat battery.
6) Remove the jump leads in the exact reverse order in which you connected them.

Towing

If you need to have your vehicle towed, contact a professional service. Your dealer can provide you with detailed towing instructions.

NOTICE

Observe the following instructions when towing your vehicle.

- **To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.**
- **Using the frame hook, tow your vehicle on paved roads for short distances at low speed.**

2-wheel drive (2WD) manual transaxle or Auto Gear Shift

Manual transaxle vehicles or Auto Gear Shift vehicles may be towed using either of the following methods.

1) From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, check that the parking brake is released.
2) From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, check that transaxle is in neutral, the steering wheel is unlocked (vehicle without keyless push start system - the ignition key should be in “ACC” position) (vehicle with keyless push start system - the ignition mode is ACC), and the steering wheel is secured with a clamping device designed for towing service.

NOTICE

The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

NOTICE

After shifting the Auto Gear Shift gearshift lever to the “N” position, always check the gear position indicator in the instrument cluster shows the “N” position to make sure that the transaxle is disengaged.
If the transaxle cannot be put in neutral, turn the key from the “LOCK” to the “ON” position or press the engine switch to change the ignition mode to ON, and move the Auto Gear Shift gearshift lever from “N” to “D”, “M” or “R”, then back to “N” again. Then turn the key from the “ON” to the “LOCK” position or press the engine switch to change the ignition mode to LOCK (OFF). These procedures may help put the transaxle in neutral. If the transaxle still cannot be put in neutral, you cannot tow the vehicle without using a towing dolly.

Engine trouble: Starter does not operate

1) Try turning the ignition switch to “START” position or try pressing the engine switch to change the ignition mode to START with the headlights turned on to determine the battery condition. If the headlights go excessively dim or go off, it usually means that either the battery is flat or the battery terminal contact is poor. Recharge the battery or correct battery terminal contact as necessary.
2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by your authorised Maruti Suzuki workshop.

Engine trouble: Flooded engine

If the engine is flooded with fuel, it may be hard to start. If this happens, press the accelerator pedal all the way to the floor and hold it there while cranking the engine.

- For petrol engine model, do not operate the starter motor for more than 12 seconds.
- For diesel engine model, do not operate the starter motor for more than 30 seconds.

NOTE:
For keyless push start, if the engine refuses to start, the starter motor automatically stops after a certain period of time. After the starter motor has automatically stopped or if there is anything abnormal in the engine starting system, the starter motor runs only while the engine switch is held pressed.

Engine trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the high engine coolant temperature warning light comes on as overheating during driving:

1) Turn off the air conditioner, if equipped.
2) Take the vehicle to a safe place and park.
3) Let the engine run at the normal idle speed for a few minutes until the high engine coolant temperature warning light goes off.

⚠ WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.


If the high engine coolant temperature warning light does not go off:

1) Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
2) Check the coolant level in the reservoir. If it is found to be lower than “LOW” line, check radiator, water pump, radiator hoses and heater hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
3) If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to “Engine coolant” in the “INSPECTION AND MAINTENANCE” section).

NOTE:
If engine overheats and you are not sure what to do, contact your authorised Maruti Suzuki workshop.



79J007

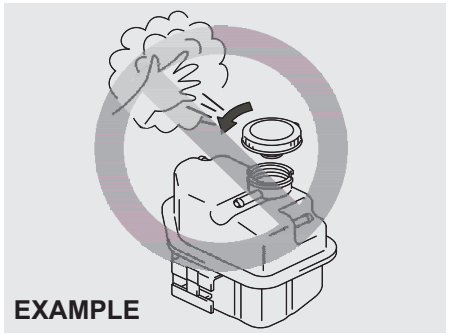


65D350D

⚠ WARNING

- **It is hazardous to remove the radiator cap (or degassing tank cap for a diesel engine) when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.**
- **To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (if equipped). These electric fans can automatically turn on without warning.**

Warning Triangle


EXAMPLE

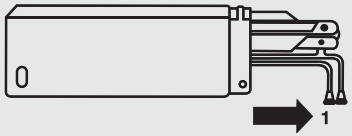

MH007001

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.


EXAMPLE

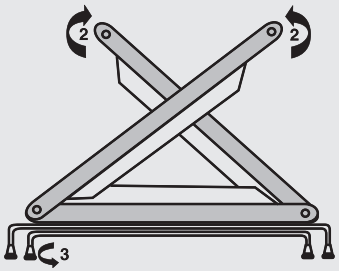

MH007014


- Remove the warning triangle carefully from the cover as shown by arrow 1.
- Open both the reflector arms as shown by arrow and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow 3. Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

EXAMPLE

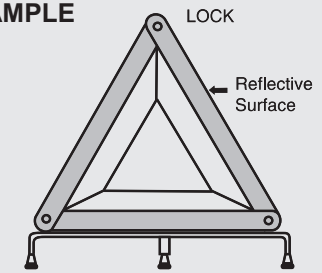

MH007015

APPEARANCE CARE

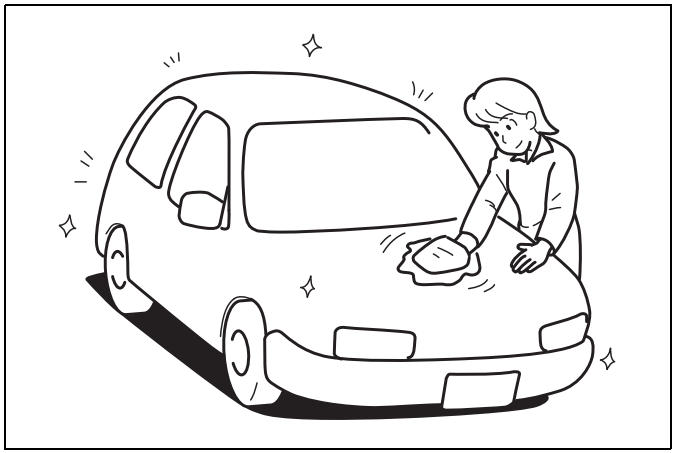

60G412

Corrosion prevention 9-1
Vehicle cleaning 9-2

Corrosion prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important information about corrosion

Common causes of corrosion

1) Accumulation of road salt, dirt, moisture or chemicals in hard-to-reach areas of the vehicle underbody or frame.
2) Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.

Environmental conditions which accelerate corrosion

1) Road salt, dust control chemicals, sea air or industrial pollution will all accelerate the corrosion of metal.
2) High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
3) Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.
4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to help prevent corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing.
Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible.
If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to “Vehicle cleaning” section.

Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Check that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer’s directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.
Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they

are spilled or leaked, clean and dry the area immediately.

Store your vehicle in a dry, well-ventilated area
Do not park your vehicle in a damp, poorly-ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

⚠ WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter and exhaust pipes. A fire could be started if the undercoating substance becomes overheated.

Vehicle cleaning



76G044S

⚠ WARNING

When cleaning the interior or exterior of the vehicle, do not use flammable solvents such as lacquer thinners, petrol and benzene. Also, do not use cleaning materials such as bleaches and strong household detergents. The materials could cause personal injury or damage to the vehicle.

Cleaning interior

Vinyl upholstery
Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.
Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery
Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

Leather upholstery
Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:
- *In order to keep leather upholstery looking good, it should be cleaned at least twice a year.*
- *If leather upholstery becomes wet, immediately wipe it dry with tissue paper or a soft cloth. Water may cause leather to harden and shrink if it is not wiped off.*
- *When parking on sunny days, select a shady place or use a sunshade. If leather upholstery is exposed to direct sunlight for a long time, it may discolor and shrink.*
- *As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.*

Seat belts
Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

Vinyl floor mats
Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets
Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

Instrument panel and console
Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

NOTICE
Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components.

Cleaning exterior

NOTICE
It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

Caring for aluminum wheels


NOTE:
- *Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaner will cause permanent spots, discoloration and cracks on finished surfaces and damage to center caps.*
- *Do not use a bristle brush and soap containing an abrasive material. These will damage finished surfaces.*

Washing

⚠ WARNING

- **Never attempt to wash and wax your vehicle with the engine running.**
- **When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.**
- **After washing your vehicle, carefully test the brakes before driving to check that they have maintained their normal effectiveness.**

Washing by hand

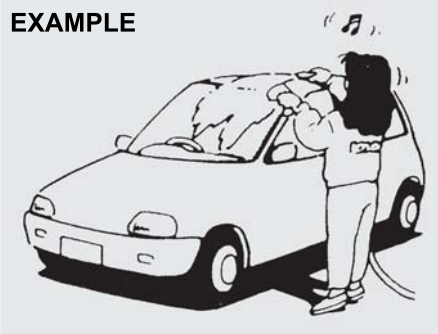

60B212S

When washing the vehicle, park it in the place where direct sunlight does not fall on it and follow the instructions below:

1) Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle:
- **Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.**
- **To avoid damaging engine components, do not use pressurized water in the engine compartment.**

2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.

3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

4) Once the dirt has been completely removed, rinse off the detergent with running water.
5) Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
   1. Clean all damaged spots and allow them to dry.
   2. Stir the paint and touch up the damaged spots lightly using a small brush.
   3. Allow the paint to dry completely.


Washing by an automatic car wash

NOTICE
If you use an automatic car wash, check that your vehicle's body parts, such as spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.

Washing by a high-pressure cleaner

NOTICE
If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently. • **Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.** • **Pointing the nozzle to the weatherstrip of door glasses, doors and the sunroof (if equipped) can allow water to enter the cabin.**

Waxing

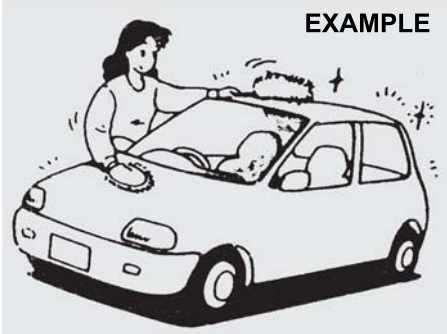


60B211S

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

GENERAL INFORMATION

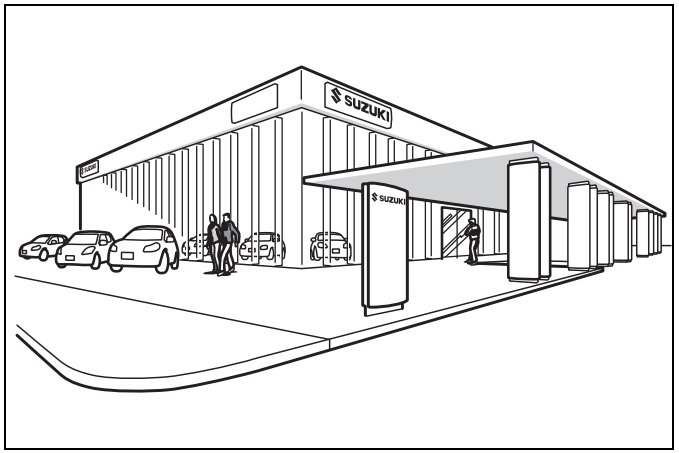


84MM01001


Vehicle identification 10-1
FASTag (if equipped) 10-1

Vehicle identification

Chassis serial number

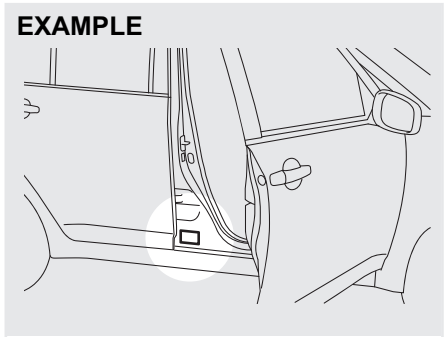


74LHT1001

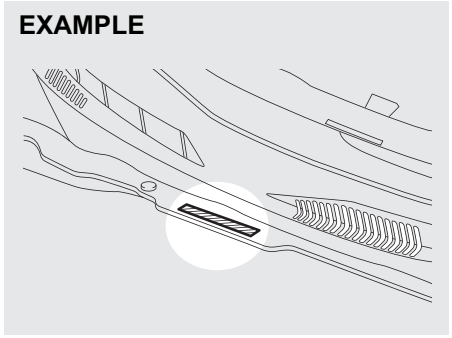

66RH153

The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist your dealer when ordering or referring to special service information. Whenever you have occasion to consult your authorised Maruti Suzuki workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

Engine serial number

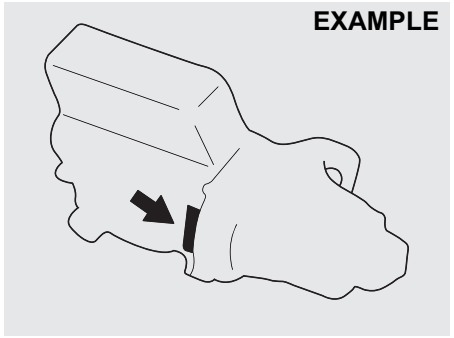


60G128

The engine serial number is stamped on the cylinder block as shown in the illustration.

FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.


In case of any damage to FASTag or replacement of front windscreen, please contact your nearest authorised Maruti Suzuki workshop.

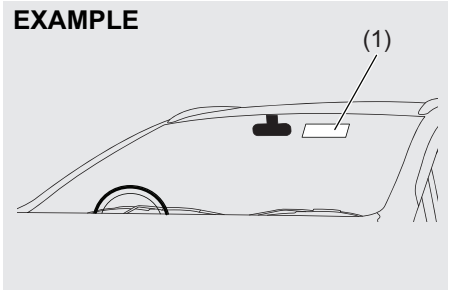

64MM01001

As seen from inside of the vehicle

EXAMPLE

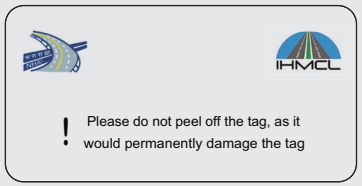

64MM01002

NOTE:
The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle

EXAMPLE



64MM01003

NOTE:
The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:
- *Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.*
- *Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.*
- *Use of any sharp objects on the tag can damage the tag.*

SPECIFICATIONS

NOTE:
Specifications are subject to change without notice.

M/T: Manual transaxle

Petrol: Petrol (K12M) engine model
Diesel: Diesel (D13A) engine model

ITEM: Dimensions		UNIT: mm
Overall length		3700
Overall width		1660 – 1690
Overall height		1595
Wheelbase		2435
Track	Front	1460
	Rear	1470

ITEM: Mass (weight)		UNIT: kg	Petrol	Diesel
Curb mass (weight)	M/T		825 – 860	940 – 960
	Auto Gear Shift		850 – 860	950 – 960
Gross vehicle mass (weight) rating			1280	1380
Permissible maximum axle weight	Front		660	760
	Rear		680	680

SPECIFICATIONS

ITEM: Engine		
Type	K12M (DOHC)	D13A (DOHC)
Number of cylinders	4	4
Bore	73.0 mm	69.6 mm
Stroke	71.5 mm	82.0 mm
Piston displacement	1197 cm^3	1248 cm^3
Compression ratio	11.0 : 1	17.6 : 1

ITEM: Electrical		
Standard spark plug	Petrol	NGK LKR6F-10
Battery	Petrol	12V 34B19L
	Diesel	12V DIN50L
Fuses		See “INSPECTION AND MAINTENANCE” section.

ITEM: Lights		WATTAGE	BULB No.
Headlight	Halogen headlight	12V 60/55W	H4
	LED headlight	LED	–
Front fog light (if equipped)		12V 19W	H16
Position light		12V 5W	W5W
		LED	–
Daytime running light (if equipped)		LED	–
Turn signal light	Front	12V 21W	WY21W
	Rear	12V 21W	PY21W
Side turn signal light		12V 5W	WY5W
		LED	–
Tail/brake light		12V 21/5W	P21/5W
High mount stop light		LED	–
Reversing light		12V 16W	W16W
License plate light		12V 5W	W5W
Interior light	Front	12V 10W	–
	Luggage compartment (if equipped)	12V 5W	W5W
	Courtesy light (if equipped)	12V 5W	W5W

ITEM: Wheels and tires	
Tire size, front and rear	175/65R15 84H*1
Rim size	15X5J
Tire pressures	For the specified tire pressure, see the tire information label on the driver's door lock pillar.
Recommended snow tire	175/65R15 84H*2
Tire size, spare*3	175/65R15 84H

*1 If you cannot prepare tires with the specified load index rating and speed symbol, prepare tires with higher load index rate and speed symbol.
*2 If you prepare snow tires;
• Check that they are tires of the same size, structure and load capacity as the originally installed tires.
• Mount the snow tires on all four wheels.
• Understand that the maximum permissible speed of snow tires is generally less than the originally installed tires.
*3 The spare wheel provided with alloy wheel variant is of steel wheel rim, hence follow 4 tire rotation only (Refer: Section Inspection and Maintenance).

ITEM: Recommended fuel / lubricants and capacities (approx.)				
Fuel			See “FUEL RECOMMENDATION” section.	32 L#
Engine oil	Petrol		Classification: API SL, SM or SN Viscosity: SAE 0W-20	3.1 L (replacement with oil filter)
	Diesel		Classification: ACEA A5/B5 Viscosity: SAE 5W-30	3.1 L (replacement with oil filter)
Engine coolant	Petrol	M/T	See “INSPECTION AND MAINTENANCE” section.	3.8 L (including reservoir tank)
		Auto Gear Shift		3.8 L (including reservoir tank)
	Diesel	M/T		5.6 L (including degassing tank)
		Auto Gear Shift		5.6 L (including degassing tank)
Manual transaxle oil/ Auto Gear Shift oil	Petrol		MARUTI GENUINE GEAR OIL 75W-80	1.5 L
	Diesel			2.6 L
Brake fluid / Clutch fluid			MARUTI GENUINE BRAKE FLUID (MGBF) or DOT 3	Refill to the proper oil level according to the instructions in the “INSPECTION AND MAINTENANCE” section.

The fuel tank capacity is slightly more than the recommended quantity of fuel that you can fill. The additional voluminous space is provided for safety and scientific reasons.

- **MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS**
- **MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS**
- **MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS**
- **MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS**

For latest Service Network details kindly visit **www.marutisuzuki.com** or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I & III) MARUTI SUZUKI INDIA LIMITED GROUND FLOOR, BLOCK B-1, PICUP BHAWAN, VIBHUTI KHAND, GOMTI NAGAR, LUCKNOW-226010 PH:-(0522) 2720932-33-34	UTTARAKHAND AND UTTAR PRADESH
REGIONAL OFFICE (NORTH-II & IV) MARUTI SUZUKI INDIA LIMITED SCO: 39-40 GROUND FLOOR, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH:- (0172) 2780056	PUNJAB, HIMACHAL PRADESH, HARAYANA & JAMMU AND KASHMIR
REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED A2, TOWER A, FIRST FLOOR, 247 PARK, LBS MARG, VIKHROLI WEST MUMBAI 400083 PH NO – 022 - 45042300	GREATER MUMBAI (MUMBAI, NAVI MUMBAI, THANE, PANVEL, PALGHAR), KONKAN & GOA.
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, NORTH BLOCK, SACRED WORLD, WANOWARIE, PUNE, MAHARASHTRA - 411040 PH:- (020) 26856036, 26856037	MAHARASHTRA EXCEPT GREATER MUMBAI (MUMBAI, NAVI MUMBAI, THANE, PANVEL, PALGHAR) & KONKAN REGION
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE ROAD, AHMEDABAD - 380015 PH:- (079) 40036660	GUJARAT
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, CAPITAL TOWERS, NO 180, KODAMBAKKAM HIGH ROAD, NUNGAMBAKKAM, CHENNAI – 600034 PH:- (044) 2823 3050-53	TAMILNADU & PONDICHERRY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED ZONAL OFFICE , UNIT 1001 , 11TH FLOOR, "SKAV 909", 9/1 LAVELLE ROAD, BENGALURU-560001 KARNATAKA PH:- (080) 22236464/54	KARNATAKA

SERVICE NETWORK (AS ON 20.07.2018)

REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, NH47- BYE PASS, PADIVATTOM, COCHIN- 682024, PH:- (0484) 4088400	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITED NO. 3-6-363 & 3-6-1/1, MAHAVIR CHAMBERS, 101,102, LIBERTY SQUARE STANZA, HIMAYATNAGAR, HYDERABAD-500029, PH:- 040-667299999	ANDHRA PRADESH & TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UNIT NO. 605 & 606 (6TH FLOOR), UTKAL SIGNATURE, CUTTACK-BHUBANESWAR ROAD, NH-5, PAHAL, BHUBANESWAR-752101, ODISHA PH:- 0674-2973229, 0674-2973139	ODISHA & CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I, II & IV) MARUTI SUZUKI INDIA LIMITED PLOT NO 1, NELSON MANDELA ROAD, VASANT KUNJ, NEW DELHI- 110070 PH:- (011) 46784011, 46782077	DELHI, NCR (GURGAON,FARIDABAD,NOIDA,GHAZIABAD) & MADHYA PRADHESH
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, POOJA TOWER, NEAR GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018 PH:- (+911412550888)	RAJASTHAN

DETAILS OF AREA OFFICES	
Area Office Location	**Area Office Address**
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact : 0755 6051555
Calicut	Maruti Suzuki India Limited,1st Floor, Central Arcade, Bypass Road, Puthiyara, Calicut- 673004, Phone: 0495-2723151
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore – 641018 Ph.- 0422-2221091
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649763, 4649765
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph. - 0452-4200203
Nagpur	Maruti Suzuki India Limited, lot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extention, Nagpur - 440010 (Mahrashtra) Ph. (0712) 2225808

SERVICE NETWORK (AS ON 20.07.2018)

DETAILS OF AREA OFFICES	
Area Office Location	**Area Office Address**
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo,Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph.- 0771-4039643
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734 010 West Bengal
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009 Ph - 0261-6544450/51
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299

ANDHRA PRADESH

ANANTHAPUR

1. SRI DURGA AUTOMOTIVES PVT LTD (1BNA--01), NO.124, SOMALADODDI, ANANTHAPUR, ANDRA PRADESH - 515004
PH :9866551078.

RAJAHMUNDRY

2. SB MOTORS PVT LTD (C5NA--01), D.NO:84-1-12, PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX, NH-45, RAJAHMUNDRY, ANDRAPRADESH-533106. - 533016
PH :9885183851.

VIJAYAWADA

3. PARAMSHIVA MOTORS PVT LTD (26NB-26-01), NO. 20-1-34, C K REDDY ROAD, AYODHYA NAGAR, VIJAYAWADA, ANDRAPRADESH-520003. - 520003
PH :9848659456.

BIHAR

PATNA

4. ALANKAR AUTO SALES (15NA-15-01), OPP.RUPASPUR THANA, BAILEY ROAD NEAR GOLA ROAD, PATNA - 800002
PH :9334710055.

PURNEA

5. SEEMANCHAL MOTORS PVT.LTD (6VNA--01), DAMKA CHOWK,KISHANGANJ ROAD, NH-31,GUALBBAGH,PURNEA,BIHAR - 854326
PH :9074158220.

GOA

GOA

6. SAI SERVICE PVT LTD (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521 - 403521

GUJARAT

ANAND

7. AMAR CARS PVT LTD (F7NA--01), SURVEY NO 1583, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT - 388001

BHARUCH

8. RAVIRATNA MOTORS PVT LTD (F8NA--01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. - 392001
PH :9687641974.

GANDHINAGAR

9. NANDA AUTOMOBILES PVT LTD (2BNA--01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT. - 382421

GODHRA

10. RB CARS PVT LTD (2CNA--01), SURVEY NO. 38/2 PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001
PH :9727700823.

MEHSANA

11. STARLINE CARS PVT LTD (D1NA--01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE NAGALPUR, DISTRICT MEHSANA, GUJARAT - 384002
PH :9925051444.

HARYANA

AMBALA

12. EAKANSH WHEELS (18NA-18-01), AMBALA-CHANDIGARH HIGHWAY ADJOINING AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA

FARIDABAD

13. PASCO AUTOMOBILES (58NB-58-01), 14/4, MATHURA ROAD, FARIDABAD, HARYANA - 121003
PH :1292565666.
14. BVA AUTO (58NC-58-01), 2J/53-54, NH-2, NIT FARIDABAD -- 121001 - 121001

GURGAON

15. PREM MOTORS (95ND-95-01), PLOT NO. 5, IDC, SECTOR-16, GURGAON, HARYANA - 122001
PH :8750611111.
16. T R SAWHNEY AUTOMOBILES (95NB-95-01), CRPF CAMP ROAD, VILLAGE ULLAWAS, NR. PIONEER PARK SECTOR-62, GURGAON, HARYANA - 122001
PH :9999790229.

KAITHAL

17. EAKANSH MOTORS (U8NA--01), NH-65, OPP RKM FARM, AMBALA ROAD, KAITHAL - 136027
PH :8395903111.

KARNAL

18. KARNAL MOTORS (89NA-89-01), 118-119 KM MILESTONE, G.T. ROAD, KARNAL, HARYANA - 132001
PH :8222002147.

REWARI

19. DINCO 4 WHEELS (U1NA--01), OPP. TULARAM STADIUM, DELHI ROAD, REWARI - 123401
PH :1274254441.

SIRSA

20. SHAKTI MOTORS (E4NA--01), OPP. DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD, SIRSA - 125055
PH :8572801011.

JAMMU & KASHMIR

JAMMU

21. JAMKASH VEHICLES (33NB-33-01), NH-1A BYE PASS OPPOSITE CHANNI HIMMAT, JAMMU (J&K) - 180015

JHARKHAND

JAMSHEDPUR

22. MOTOR WORLD (31NB-31-01), NS-6, 2ND PHASE, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013
PH :7369944132.

KARNATAKA

BANGALORE

23. KALYANI MOTORS PVT LTD (02NI--01), SURVEY NO.17/2, KENCHENAHALLI VILLAGE, RAJARAJESHWARI NAGAR, MYSORE ROAD,BANGALORE, KARNATAKA - 560032
PH :9008121000.
24. SURAKSHAA CAR CARE PVT LTD (02NF--01), 2/6, BERTEN AGRAHARA, OPP TO METRO CASH & CARRY, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE, KARNATAKA - 560100
PH :9845011686.
25. MANDOVI MOTORS PVT LTD (02NJ--01), SURVEY NO.33/2,ALLALASANDRA, YELAHANKA NORTH, BANGALORE, KARNATAKA - 560064
PH :9945235521.
26. GARUDA AUTO CRAFT PVT LTD (02NH--01), 52/7, OUTER RING ROAD, DODDA BANASWADI, HORAMAVU, KR PURAM HOBALI, BANGALORE -560043. - 560043
PH :9845047393.

BELGAUM

27. SHANTESHA MOTORS PVT LTD (E8NA--01), PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD, KANGRALI B K, BELGAUM, KARNATAKA-590010. - 590010
PH :9448355441.

HUBLI

28. LEKHYA MOTORS PVT LTD (73NA-73-01), OPP TO APMC 2ND GATE, ESHWAR NAGAR, HUBLI-DHARWAD ROAD, HUBLI-580025. - 580025
PH :8971888885.

MYSORE

29. FRIENDLY MOTORS PVT LTD (25NB-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016. - 570016
PH :9538195381.

KERELA

CALICUT

30. AM MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EYE HOSPITAL,SRAMBIKKAL PARAMBA,MINI BYPASS JAIL ROAD JUNCTION,PUTHIYARA POST,CALICUT, KERELA-673004. - 673004
PH :989596666.

COCHIN

31. INDUS MOTOR PVT LTD (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106
PH :9745996565.

TRIVANDRUM

32. SRIVATSA INTERNATIONAL PVT LTD (16NA-16-01), SURVEY NO. 1045/1-1,1045/2-1,1046,NH BYE PASS ROAD,KADAKAMPALLI VILLAGE, ANAYARA P.O, TRIVANDRUM, KERELA-695029. - 695029
PH :7708833966.
33. INDUS MOTOR PVT LTD (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND,ALUMOOD JN,NH 47,KANNIYAPURAM, TRIVANDRUM - 695301. - 695301
PH :9745996565.

MADHYA PRADESH

INDORE

34. PATEL MOTORS (53NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJRANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.) - 452016
PH :6262230999.

SATNA

35. CITY CARS (D7NA--01), BEHIND NEXA SHOWROOM, 666/2, AMOUDHA, PANNA ROAD, SATNA, MADHYA PRADESH - 485001
PH :7970006402.

MAHARASHTRA

AMARAVATI

36. ASPA BANDSONS AUTO PVT LTD (F2NA--01), F32/1 MIDC , AURANGABAD NAGPUR EXPRESS HIGHWAY, AMRAVATI, MAHARASHTRA - 444607
PH :8975762303.

JALGAON

37. MANRAJ AUTO (C4NA--01), P 93, MIDC, R L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA -- 425003 - 425003

NEXA WORKSHOP (AS ON 20.07.2018)

MUMBAI

38. SAI SERVICE PVT LTD (05NB--01), JOSEPH CARDIJN TECHNICAL SCHOOL , KHASHABA JADHAV MARG , OFF DR. AMBEDKAR ROAD , DADAR (EAST) MUMBAI, MAHARASHTRA. - 400014
39. SHIVAM AUTOZONE (INDIA) PVT LTD (05ND--01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA. - 400069

NASHIK

40. SEVA AUTOMOBILES LTD (37NA-37-01), PLOT B-17, MIDC, AMBAD, NASIK, MAHARASHTRA - 422010

NAVI MUMBAI

41. SIMRAN MOTORS PVT LTD (AACN--01), 60/72, JAWAHAR COOPERATIVE INDUSTRIAL ESTATE, KALAMBOLI, KHARGHAR, MUMBAI, MAHARASHTRA. - 410209

PUNE

42. THE KOTHARI WHEELS PVT LTD (19NB-19-01), GATE NO 1605, OLD 1099, KESNAND ROAD, WAGHOLI, TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA - 412207
43. EXCELL AUTOVISTA PVT LTD (19NG-19-01), SURVEY NO 98/2A/P, NEW PUNE - MUMBAI HIGHWAY, NEAR BALEWADI STADIUM, BANER TALUKA, PUNE - 411045
    PH :7721865000.

RATNAGIRI

44. JAGRUT MOTORS PVT LTD (G3NA--01), 410/6/1B, SALVI STOP, SHIVAJI NAGAR MAIN ROAD RATNAGIRI, MAHARASHTRA - 415612

SOLAPUR

45. CHAVAN MOTORS DIVISION (I) PVT LTD (B1NA--01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224
    PH :9130041513.

NAGALAND

DIMAPUR

46. PROGRESSIVE MOTORS (32NA-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, - 797115

NEW DELHI

DELHI

47. RANA MOTORS PVT LTD (08NE--01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI - 110020
48. T R SAWHNEY AUTOMOBILES (08NH--01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DELHI - 110020

PUNJAB

LUDHIANA

49. SANDHU AUTOMOBILES (62NB-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003
    PH :7710400000.
50. STAN AUTOS (62NC-62-01), PLOT NO. 4, NEW SUNDAR NAGAR, OPP. MEDIWAYS HOSPITAL, PO THEREKEE, LUDHIANA, PUNJAB - 142021
    PH :8872501234.

MOHALI

51. CM MOTORS (L1NA--01), C-155, INDUSTRIAL AREA, PHASE-7, MOHALI - 160055

RAJASTHAN

ALWAR

52. FORTUNE CARS (F9NA--01), 6TH MILESTONE VILLAGE JATIYANA,OPP. PETROL BEHROR ROAD ALWAR - 301001

BIKANER

53. AUDI MOTORS (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD , BICHHWAL INDUSTRIAL AREA , BIKANER 334001 - 334001
    PH :7412059823.

JAIPUR

54. KP AUTOMOTIVES (11NB-11-01), PLOT NO.3-4,MANGLAM RIICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION,SIRSI ROAD - 302034

JODHPUR

55. AUDI MOTORS (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLE, SARASH DAIRY ROAD, JODHPUR - 334001
    PH :9982341741.

UDAIPUR

56. TECHNOY MOTORS (49NB-49-01), OPP. NAND BHAWAN, GOVERDHAN VILLAS , UDAIPUR
    PH :7300077394.

TAMILNADU

CHENNAI

57. PILLAI & SONS PVT LTD (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117
    PH :9884722126.
58. POPULAR VEHICLES & SERVICES PVT LTD (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI,TAMILNADU- 600116. - 600116
    PH :9841033464.

COIMBATORE

59. AADHI CARS PVT LTD (41NB-41-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY,TAKKAL PURAM, TRIVANDRUM ROAD,KOKKARAKULAM VILLAGE, PALAYAMKOTTAI, TIRUNELVELI,TAMILNADU - 627007
    PH :8754045446.
60. SREE SARADHAMBAL PVT LTD (41NA-41-01), 18/1472, S.N.R COLLEGE ROAD, NAVA INDIA, COIMBATORE, AND TAMILNADU-641004. - 641004
    PH :9786022272.

ERODE

61. SREE SARADHAMBAL PVT LTD (H7NA--01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011
    PH :9786022272.

HOSUR

62. SRI AMMAN CARS PVT LTD (7QNA--01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44,OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109
    PH :9790004271.

SALEM

63. THRIVENI CAR PVT LTD (A2NA--01), 2/6, KANDHAMPATTY,BYE PASS ROAD, SALEM, TAMILNADU - 636005
    PH :9626099999.

TRICHY

64. PLA MOTORS PVT LTD (23NA-23-01), TS NO.29P,31P & 32P,36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NAGAR, TRICHY, TAMILNADU - 620017. - 620017
    PH :9994950505.

VELLORE

65. GANESH CARS PVT LTD (C6NA--01), 96/6, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI,VELLORE, TAMILNADU - 632009
    PH :9842389111.

TELANGANA

HYDERABAD

66. KALYANI MOTORS PVT LTD (10NE-10-01), SURVEY NO.184, KARMAGHAT VILLAGE, BESIDE KHARMANGHAT HANUMAN TEMPLE, R.R DISTRICT, HYDERABAD, TELANGANA - 500079
    PH :8978944414.
67. VARUN MOTORS PVT LTD (10NB-10-01), B-54, CO.INDUTRIAL ESTATE, BALANAGAR, HYDERABAD, TELENGANA - 500037
    PH :9885001155.
68. GEM MOTORS PVT LTD (10NH-10-01), D.NO.8-96, SURVEY NO.128/2 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA. - 500084
    PH :9347121212.

VIJAYAWADA

69. VARUN MOTORS PVT LTD (26NA-26-01), OPP TO PRIYA PICKLES, BANDAR ROAD, PORANKI, VIJAYAWADA, ANDRAPRADESH-521137. - 521137

WARANGAL

70. ADARSHA AUTO WORLD PVT LTD (D5NA--01), H.NO: 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007
    PH :8886682222.

UTTAR PRADESH

AGRA

71. MADHUSUDAN MOTORS (66NA-66-01), ADJOINING HEMA PETROL PUMP, EIT MANDI, BODLA, AGRA - 282007

MEERUT

72. RAJ SNEH AUTO (48NA-48-01), 1183/17 RITHANI, ZONE - A, SECTOR 4 NEAR PETROL PUMP, MEERUT, UTTAR PRADESH - 250103
    PH :9105004400.

NOIDA

73. FAIR DEAL CARS PRIVATE LIMITED (A1NC--01), A-107, SECTOR-5. NOIDA - 201301
    PH :9911259288.
74. MOTOR CRAFT (59NB--01), C 42 SECTOR 57 - 201301
    PH :9810542222.

UTTARAKHAND

HALDWANI

75. NAINITAL MOTORS (J6NA--01), 5TH KM RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR UJALA PRINTING PRESS, HALDWANI, UTTARAKHAND - 263139

ROORKEE

76. SHAKUMBARI AUTOMOBILES (H2NA--01), 5 KM MILESTONE ,NH-58,ROORKEE-DELHI ROAD ,NEAR HOTEL GODWARI,ROORKEE, UTTARAKHAND - 247667
    PH :18002704142.

WEST BENGAL

KHARAGPUR

77. BHANDARI AUTOMOBILE PVT LTD (G7NA--01), CHOWRANGEE, PLOT NO-138 & 139, O T ROAD, KHARAGPUR - 721301
    PH :9933055539.

CHANDGAD

1. SAI SERVICE PVT. LTD. (BTF1-BTF-01), GAT NO.360, G.P.M NO.157, A/P HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA. - 416507
PH :02320-239339.

ANDAMAN & NICOBAR

DIGLIPUR

2. AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (PU01-PU-01), MADHUPUR VILLAGE,TEHSIL DIGLIPUR,NORTH ANDAMAN - 744202
PH :03192-271056.

PORTBLAIR

3. AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-02), NAYAGEN, PORTBLAIR - 744101
PH :3192-227104, 211682.
4. AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-01), GARACHRAMA, PORT BLAIR - 744105
PH :3192-251980, 253586, 211590.

RANGAT

5. AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-FJ-03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN, - 744201
PH :3192-211546.

ANDHRA PRADESH

AMALAPURAM

6. S.B. MOTOR CORPORATION (BTS1-BTS-01), #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201
PH :08856-98853173333.

ANAKAPALLE

7. JAYABHERI AUTOMOTIVES PVT LTD (0N01-0N-01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001
PH :08294-7093575555.

ANANTAPUR

8. SRI DURGA AUTOMOBILES (1B01-1B-01), 17/377-A,GOOTY ROAD,,ANANTAPUR - 515001
PH :08554-277958.

BHIMAVARAM

9. NOVELTY REDDY AND REDDY AUTOMOTIVES (7M01-7M-01), NEAR BYEPASS ROAD,UNDI ROAD,BHIMAVARAM - 534202
PH :0881-2765645.

BOBBILI

10. VARUN MOTORS PVT. LTD. (CAM1-CAM-01), D. NO. 4-64, SURVEY NO. 219/8, VILLAGE – MALLAMMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT – VIZIANAGARAM, ANDHRA PRADESH. - 535558
PH :08944-9885280772, 9885317344.

CHINTALAPUDI

11. REDDY AND REDDY MOTORS (BYQ1-BYQ-01), RS NO.698/2 MARUTI NAGAR COURT CENTRE, ELURU-CHINTALAPUDI HIGHWAY, CHINTALAPUDI MANDAL, ANDHRA PRADESH - 534460
PH :9948827555.

CHIRALA

12. JAYALAKSHMI AUTOMOTIVES PVT. LTD. (G502-NT-04), 9-1-92, CHURCH ROAD,CHIRALA, - 523157
PH :8594-9703703353.

CHITTOOR

13. BHARGAVI AUTOMOBILES PVT LTD (A801-1C-03), 22-241/A,KATTAMANCHI TIRUPATI ROAD,CHITTOOR, - 517001
PH :8572-9848144772.

CUDDAPPAH

14. MSA MOTORS (C201-1D-03), K.T. BYE PASS ROAD,CUDDPPAH,ANDHRA PRADESH, - 516001
PH :08562-645427.

ELURU

15. REDDY & REDDY MOTORS (1E01-1E-01), OLD NH-5 ROAD,BESIDES C R REDDY WOMEN'S COLLEFE OLD NH-5,ELURU, - 534001
PH :8812-221826.

GUDIVADA

16. VARUN MOTORS PVT. LTD. (2603-CL-02), D NO. 1-621,AUTONAGER 1ST LANE,GUDIVADA - 521301
PH :08674-246244, +919885651383.

GUDUR

17. BHARGAVI AUTOMOBILES PVT. LTD. (IS01-IS-01), SURVEY NO.1619/3A,GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101
PH :8624-252509.

GUNTUR

18. JAYALAKSHMI AUTOMOTIVES PVT. LTD. (G502-G5-01), D-N-8-24-31,MANGALAGIRI ROAD,GUNTUR - 522001
PH :0863-2241000.

HINDUPUR

19. SRI DURGA AUTOMOTIVES (1B01-36-02), PLOT NO.83, NEAR RELIANCE PETROL BUNK, BYE PASS ROAD, HINDUPUR - 515201
PH :8554 -277958.

HYDERABAD

20. ADARSHA AUTOMOTIVES PVT. LTD. (1014-10-02), H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218
PH :040-8142346633, 9985326633.

JAGGAIAHPETA

21. VARUN MOTORS PVT. LTD. (2603-PC-05), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175
PH :8652-281555.

JANGAREDDYGUDEM

22. REDDY & REDDY MOTORS (1E01-HQ-02), NEAR R&B GUEST HOUSE,ELURU ROAD,JANGAREDDYGUDEM, - 534447
PH :8821-9948829555.

KAIKALURU

23. SANTOSH AUTOMOTORS PVT. LTD. (CLW1-CLW-01), SY. NO. 127/7 &9, OPP. NAIDU COMPLEX, AATAPAKA, KAIKALURU MANDAL, DIST. KRISHNA - 521333
PH :7799787969.

KAKINADA

24. S B MOTORS (W701-W7-01), D. NO. 52-10-36/3,NEAR AMAR GHATI CENTER,KARAPA ROAD, KAKINADA - 533001
PH :884-2352785.

KANDUKURU

25. JAYALAKSHMI AUTOMOTIVES PVT. LTD. (BEY1-BEY-01), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD, KANDUKURU MANDAL, DISTRICT – PRAKASHAM, ANDHRA PRADESH. - 523105
PH :9848131133.

KAVALI

26. BHARGAVI AUTOMOBILES PVT LTD (A801-PF-05), KAVALI NELLORE,ANDHRA PRADESH - 524201
PH :8626-9248702567.

KOTHEGUDAM

27. VARUN MOTORS PVT. LTD. (2603-HF-04), DOOR NO. 5-35/4/B,LAKSHMIDAVI PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM - 507101
PH :0253-2351277/79.

KURNOOL

28. MSA MOTORS (C201-C2-01), AUTO NAGAR,INDUSTRIAL ESTATE, NH-7, KURNOOL - 518004
PH :08518-254040, 251616.

MACHILIPATNAM

29. MITHRA AUTO AGENCIES PVT LTD (2604-0K-04), NARASIMHA NAGAR, MACHLIPATNAM, ANDHRA PRADESH - 521001
PH :8672-9848988312.

MADANAPALLI

30. BHARGAVI AUTOMOBILES PVT. LTD. (AAT1-AAT-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101
PH :8624-252509.

MADHURAWADA

31. JAYABHERI AUTOMOTIVES PVT LTD (BQQ1-BQQ-01), PLOT NO. 5, SURVEY NO. 4/P, KOMMADI ROAD, MADHURAWADA, VISHAKAPATNAM, ANDHRA PRADESH - 530048
PH :0891-9849445639.

MANDAPETA

32. S B MOTOR CORPORATION (BJC1-BJC-01), BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA, DISTRICT – EAST GOADAVARI, ANDHRA PRADESH . - 533308
PH :8886664090.

MARKAPURAM

33. JAYALAKSHMI AUTOMOTIVES PVT. LTD. (CFF1-CFF-01), D. NO. 4-515/12, SURVEY NO. 1167, OPP. INDUSTRIAL ESTATE, ONGOLE ROAD, MARKAPURAM, DISRT.-PRAKASAM, ANDHRA PRADESH. - 523316
PH :8596-9848131133.

NANDYAL

34. MSA MOTORS (CKB1-CKB-01), SURVEY NO. 333, VUDUMALPURAM, MANDAL – NANDYAL, OPP. AUTO NAGAR, NANDYAL, DISTRICT – KURNOOL. - 518501
PH :9985560925.

NARASARAOPET

35. JAYALAKSHMI AUTOMOTIVES PVT. LTD. (G502-JT-03), NEAR RELIANCE PETROL PUMP BUNK,VINUKONDA ROAD, NARASAROAPET, GUNTUR, - 522603
PH :8647-9866844344.

NARSIPATNAM

36. JAYABHERI AUTOMOTIVES PVT. LTD. (WT01-WT-01), OPP. RDO BUNGLAW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116
PH :958932-225111/226111.

DEALER WORKSHOP (AS ON 20.07.2018)

NELLORE

37. BHARGAVI AUTOMOBILES PVT LTD (A801-A8-01), D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004 PH :0861-326226, 329927.
38. BHARGAVI AUTOMOBILES PVT LTD (A801-A8-04), A2, INDUSTRIAL ESTATE,A.K. NAGAR,NELLORE, - 524004 PH :861-6457369.

NUZVID

39. VARUN MOTORS PVT. LTD. (2603-CN-03), BESIDE R T C BUS DEPOT.,OLD D M OFFICE,VIJAYAWADA ROAD, NIZVID - 521201 PH :0866-2544444, 9885706800.

ONGOLE

40. JAYALAKSHMI AUTOMOTIVES (8Y01-8Y-02), THROVAGUNTA COMPANY CENTRE,NH-5,GUNTUR ROAD,ONGOLE,PRAKASAM DISTRICT. - 523003 PH :8592-247167.

PALAKONDA

41. VARUN MOTORS PVT. LTD. (CKO1-CKO-01), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440 PH :9885317344.

PALASA

42. JAYABHERI AUTOMOTIVES PVT. LTD. (BWH1-BWH-01), SURVEY NO. 63 OF VILLAGE – PURUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT – SRIKAKULAM, ANDHRA PRADESH. - 532221 PH :08945-9849054442.

PENDURTHI

43. VARUN MOTORS PVT. LTD. (BAP1-BAP-01), SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKAPATNAM - 530047 PH :0891-9885006651.

PIDUGURALLA

44. JAYALAKSHMI ATUOMOTIVES PVT. LTD. (BFN1-BFN-01), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT – GUNTUR, ANDHRA PRADESH. - 522413 PH :9848131133.

RAJAHMUNDRY

45. S.B. MOTOR CORPORATION (C501-C5-01), OPP.FCI GOWDOWN,JAILROAD,LALACHERUVLI,RAJAMUNDRY - 533101 PH :0883-72410, 60249.

RAJAM

46. VARUN MOTORS PVT. LTD. (BLJ1-BLJ-01), PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH :08941-9703101166.

SRIKAKULAM

47. VARUN MOTORS PVT. LTD. (4603-W6-09), PEDDA PADDU ROAD,ARASAVILLI (P.O.),SRIKAKULAM, - 532001 PH :08942-220830.

SURYAPET

48. PAVAN MOTORS PVT. LTD (BLC1-BLC-01), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213 PH :8684-8008899995, 27502750.

TANUKU

49. NOVELTY REDDY & REDDY PVT LTD (BAR2-BAR-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211 PH :08819-9951440444.

TENALI

50. JAYALAKSHMI AUTOMOTIVES PVT. LTD. (PE01-PE-01), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002 PH :8644-226100,227100.

THAGARAPUVALASA

51. VARUN MOTORS PVT. LTD. (CQV1-CQV-01), SURVEY NO.11/2B,11/3,NAGARAMPALEM VILLAGE, NH-16, NAGARAMPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM, - 531162 PH :9885317344.

TIRUPATI

52. BHARGAVI AUTOMOBILES PVT LTD (A801-N9-02), 11/66/1,TIRUPATI RENIGUNTA ROAD,TIRUPATI, - 517507 PH :877-64591111.

TIRUVURU

53. SANTOSH AUTOMOTORS PVT. LTD. (CIM1-CIM-01), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. - 521235 PH :7799787969.

TUNI

54. SATTIBABU MOTORS (PVT) LTD. (KY01-KY-01), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH :08854-7661893888.

VIJAYAWADA

55. MITHRA AUTO AGENCIES PVT LTD (2604-26-01), 40-17-3,,PICHAIAH STREET,GANDHI COLONY,VIJAYAWADA - 520001 PH :0866-632283, 633068.
56. VARUN MOTORS PVT. LTD. (2603-26-01), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008 PH :0866-2545053.
57. VARUN MOTORS PVT. LTD. (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY,VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH :866-9885382444.
58. SANTOSH AUTOMOTORS PVT. LTD. (2607-26-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010 PH :0866-7799787969, 2552262.
59. VARUN MOTORS PVT. LTD. (2603-26-07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. PH :9885576602.

VISAKHAPATNAM

60. VARUN MOTORS PVT. LTD. (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003 PH :0891-2525885.
61. VARUN MOTORS PVT. LTD. (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026 PH :0891-2513157.
62. VARUN MOTORS PVT. LTD. (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM., - 530007 PH :0891-2705375.
63. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATANAM, ANDHRA PRADESH - 530018 PH :0891-2506837.
64. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-02), D.NO:51-17-2 , NH-5, KRANTHINAGAR, VISAKHAPATNAM,(ANDHRA PRADESH). - 530013 PH :0891- 7799772272.
65. VARUN MOTORS PVT. LTD. (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007 PH :0891-9885313744.
66. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-03), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046 PH :0891-2514919, 9849445639.
67. VARUN MOTORS PVT. LTD. (4603-46-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE – DUPPITURU, MANDAL – ACHUTAPURAM, DISTRICT – VISHAKAPATNAM, ANDHRA PRADESH. - 531011 PH :0891-3055561, 3055550.
68. VARUN MOTORS PVT. LTD. (4603-46-0L), SURVEY NO. 408/1 OF MADHURAWADA VILLAGE, RUSHIKONDA ITI SEZ, VISHAKAPATNAM RURAL MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. - 530045 PH :9885317344.

VIZAINAGARAM

69. VARUN MOTORS PVT. LTD. (4603-N8-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001 PH :8922-7799666998.

VIZIANAGARAM

70. JAYABHERI AUTOMOTIVES (N801-N8-01), PLOT NO.B-1,DOOR NO.8-32-1,SURVEY NO.108/12A & 109/2A, INDUSTRIAL ESTATE, VANTITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDHRA PRADESH - 535001 PH :08922 -255366,255377,8008333232.

ARUNACHAL PRADESH

ITANAGAR

71. BUISHI YADA MOTORS (7501-75-01), A' SECTOR, NAHARLAGUN, ARUNACHAL PRADESH. - 791110 PH :0360-245113, 245114.
72. BUISHI YADA MOTORS (7501-75-04), MODEL VILLAGE, BEFORE GOVERNMENT HIGHER SECONDARY SCHOOL, NAHARLAGUN, ITANAGAR - 791110 PH :9436041437.

PASSIGHAT

73. BUISHI YADA MOTORS (7501-8A-03), PASSIGHAT BAZAR, PASSIGHAT, ARUNACHAL PRADESH - 791102 PH :368-9435082651/2224748.

ZIRO

74. BUISHI YADA MOTORS (CHM1-CHM-01), HAPOLI, NEAR TELECOMMUNICATION CENTRE, ZIRO, ARUNACHAL PRADESH. - 791120
PH :9436427578.

ASSAM

BAIHATA CHARIALI

75. PALLAVI MOTORS PVT. LTD. (BNL1-BNL-01), DAG NO. 1042, PATTA NO. 17, MOUZA – BORBANKHAR, P.S. – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381
PH :361-9864052488.

BARPETA

76. BHARTI MOTORS (P) LTD (7N01-7Z-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313
PH :366-6260416.

BIJOYNAGAR

77. PODDAR CAR WORLD (IA01-IA-01), AT/PO - BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BIJOYNAGAR - 781125
PH :3623-9854120396.

BOKAKHAT

78. ANAMIKA MOTORS (BTP1-BTP-01), OPP. JDSG COLLEGE, NH-37, A.T. ROAD, WARD NO.-1, BOKAKHAT DISTT. GOLAGHAT (ASSAM) - 786512
PH :03774-9435050938.

BONGAIGAON

79. BHARTI MOTORS (P) LTD (7N01-7N-01), CHAPAGURI ROAD, BONGAIGAON - 7833830
PH :3664-099541-56179/231580/9859978958.

DHEKIAJULI

80. RAMLAL DURGADUTT MOTORS PVT LTD (BRX1-BRX-01), DAG NO.242, K.P. PATTA NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110
PH :0361-9854258025.

DHEMAJI

81. SAIKIA AUTO PVT. LTD. (7P01-UD-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057
PH :3752-9957837538.

DIBRUGARH

82. JAYBEE AUTO AGENCIES PVT. LTD. (C101-C1-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001
PH :0373-2321018, 2329314.

DIGBOI

83. VISHAL CAR WORLD PVT. LTD. (BYD1-BYD-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. – DIGBOI, DISTRICT – TINSUKIA , ASSAM. - 786171
PH :3751-9435860000..

DULIAJAN

84. JAY BEE AUTO AGENCIES PVT. LTD. (ADA1-ADA-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH - 786602
PH :0374-8811098576.

GOALPARA

85. BHARATI MOTORS PVT. LTD. (YN01-YN-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301
PH :8761985554.

GOLAGHAT

86. ANAMIKA MOTORS (J302-J3-01), N.H.-39, RANGAJAN, PO: MORANGI, DIST- GOLAGHAT - 785621
PH :03772-360901, 360947.

GUWAHATI

87. BIMAL AUTO AGENCY (0901-09-01), JHALUKBARI, GUWAHATI. - 781014
PH :0361-670335, 570137.
88. BIMAL AUTO AGENCY (0903-09-01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021
PH :0361-98645025045/46.
89. PALLAVI MOTORS PVT. LTD. (0902-09-01), DAG NO. 1&2,NEXT TO DEPTT. OF FAMILY WELFARE,SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022
PH :361-2363191/92/93, 2360149, 2368980, 2360233.
90. PODDAR CAR WORLD PVT LTD (0904-09-01), HENGRABARI ,VIP ROAD,GUWAHATI - 781036
PH :0361-2334969, 71, 2334975.
91. BIMAL AUTO AGENCY (0901-09-02), BEHARBARI,BEHIND DHOOM RESTAURANT, NH-37,GUWAHATI - 781028
PH :0361-8486002903/902.
92. PODDAR CAR WORLD (0905-09-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029
PH :0361-7101714 , 9435555853.
93. BIMAL AUTO AGENCY (0901-09-03), AECB ROAD, MAJHAR GALI, ROOP NAGAR, ULUBARI, GUWAHATI, ASSAM - 781007
PH :0361-9864074525.
94. BIMAL AUTO AGENCY (0903-09-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005
PH :0361-2207322/9854057190.
95. MITTAL AUTOZONE (0906-09-01), NH-37, LALMATI, NEAR BHARAT PETROLIUM, GUWAHATI, ASSAM. - 781029
PH :0361-2309951.
96. MITTAL AUTOZONE (0906-09-02), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028
PH :0361-9864296666.
97. PALLAVI MOTORS PVT. LTD. (0902-09-02), DAG NO. 2201, PATTA NO. 237, VILLAGE – JYOTIKUCHI, MOUZA – BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT – KAMRUP, ASSAM. - 781034
PH :9864052488.

HOJAI

98. RAMLAL DURGADUTT MOTORS PVT LTD (ARA1-ARA-01), KHATIYAN NO.: 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT – NAGAON , ASSAM - 782435
PH :03674-9707556868.

JAGI ROAD

99. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-RB-02), JAGIROAD,MORIGAON,NALAOW,ASSAM - 782410
PH :03678-9435569526.

JORHAT

100. ANAMIKA MOTORS (G901-G9-01), GARALI ROAD, RAJABARIE, JORHAT, ASSAM. - 785001
PH :0376-360901, 360947.

KARIMGANJ

101. JAIN UDYOG (6901-1S-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710
PH :3843-262084.

KHATKHATI

102. PODDAR CAR WORLD PVT. LTD. (CAZ1-CAZ-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBI ANGLONG . - 782460
PH :3675-9706010366.

MANGALDOI

103. PODDAR CAR WORLD (YW01-YW-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115
PH :0361- 9707152711.

MARGHERITA

104. VISHAL CAR WORLD PVT. LTD. (YR01-YR-01), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181
PH :03751-220011.

NAGAON

105. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002
PH :0372-236111.

NAHARKATIYA

106. JAY BEE AUTO AGENCIES PVT. LTD. (C101-CJI-03), NAHARKATIYA TOWN PART NO. 4, MOUZA – JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT – DIBRUGARH, ASSAM . - 786610
PH :9954799273.

NALBARI

107. BIMAL AUTO AGENCY (9201-92-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335
PH :0364-220031.

NORTH LAKHIMPUR

108. SAIKIA AUTO PVT. LTD. (7P01-7P-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031
PH :3752-232272,232450.
109. SAIKIA AUTO PVT. LTD. (7P01-7P-03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001
PH :03752-232272.

RAJGARH

110. JAYBEE AUTO AGENCIES PVT. LTD. (CIJ1-CIJ-01), DAG NO.182, PP NO.140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM - 786611
PH :7002643167.

RANGIA

111. PODDAR CAR WORLD PVT. LTD. (6X01-6X-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354
PH :0361-9707015958.

SIBSAGAR

112. ANAMIKA MOTORS (G901-L9-02), CHEREKAPAR, B.G. ROAD, NEAR HOLY NAME SCHOOL, SIBSAGAR. - 785640
PH :03772-272231, 272251.

SILCHAR

113. JAIN UDYOG (6901-J2-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006
PH :03842-26061, 62.

SONAPUR

114. BIMAL AUTO AGENCY (AAQ1-AAQ-01), TEPESIA TINIALI, NH-37, SONAPUR, DIST- KAMRUP, ASSAM.
PH :9435101175.

TANGLA

115. BIMAL AUTO AGENCY (CHO1-CHO-01), DAG NO.:121, PATTA NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521
PH :9864074525.

TEZPUR

116. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154
PH :0361- 8724087940.

TINSUKIA

117. VISHAL CAR WORLD (J401-J4-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM - 786183
PH :0374-2312572.

BIHAR

ARARIA

118. SEEMANCHAL MOTORS PVT. LTD. (O701-O7-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318
PH :06455-8797096012/7545830002.

ARRAH

119. PEARL CARS (VU01-VU-01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301
PH :6182-9304685888.

BANKA

120. SEEMANCHAL MOTORS PVT. LTD. (CEQ1-CEQ-01), KHATA NO. 134, KHESRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR. - 813101
PH :8797096020.

BEGUSARAI

121. G S MOTORS (1U01-1U-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR - 851101
PH :9204756206.

BETTIAH

122. SHREE GOPAL AUTO PVT. LTD. (O401-O4-01), BEETIAH - MOTIHARI HIGHWAY , NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438
PH :6254-223050/9771486183.

BHAGALPUR

123. SEEMANCHAL MOTORS PVT. LTD. (G802-G8-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005
PH :0641-8797096012/8797096019.

BIHARSHARIF

124. REESHAV AUTOMOBILES (MG01-TG-03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR - 803101
PH :7061295297.

BUXAR

125. PEARL CARS (VV01-VV-01), C/O DEVDHTRHA UPPDHYYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101
PH :6183-8294634605/8294634602.

CHAPRA

126. REESHAV AUTOMOBILES (MG01-TH-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301
PH :9263637646.

DANAPUR

127. ALANKAR AUTO SALES & SERVICE (1504-NN-02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, - 800018
PH :9386898458.

DARBHANGA

128. KRISHNA MOTORS (1V01-1V-01), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P. -13, ROAD, DARBHANGA, BIHAR - 846009
PH :9204552405.

129. KRISHNA MOTORS (1V01-1V-03), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) - 846003
PH :9204552405.

GAYA

130. KARLO AUTOMOBILES PVT LTD (Y601-Y6-01), BODH GAYA, GAYA. - 824231
PH :631-016312200277, 09708231604.

GOPALGANJ

131. SHREE GOPAL AUTO PVT. LTD. (O301-O3-01), NH-28, DANAPUR, TEHSIL-MANJAGARH,GOPALGANJ (BIHAR) - 800023
PH :06156-292290/9771486139.

HAJIPUR

132. REESHAV AUTOMOBILES (MG01-MG-01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI). - 844101
PH :9263632163.

KATIHAR

133. SEEMANCHAL MOTORS PVT. LTD. (O601-O6-01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATIHAR PURNEA ROAD, KATIHAR - 854105
PH :6452-8797096021/8797096019.

KISHANGANJ

134. SEEMANCHAL MOTORS PVT. LTD. (PX01-PX-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA:KNE, WARD NO.1, KISHANGANJ (BIHAR). - 855101
PH :06456-233074/8797096043.

MADHUBANI

135. KRISHNA MOTORS (CAJ1-CAJ-01), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR - 847211
PH :7766912182.

MOHANIA

136. PEARL CARS (VW01-VW-01), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109
PH :6187-8294634632/8294634649.

MOTIHARI

137. RAJIV AUTOMOBILES PVT LTD (T401-FH-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401
PH :6252-241405, 9234609669.

MUZAFFARPUR

138. RAJIV AUTOMOBILES PVT LTD (T401-T4-01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002
PH :0621-2272660/9910347908/9234609671.

139. RAMKRISHNA MOTORS PRIVATE LTD. (T402-T4-01), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR. - 842001
PH :9102173333.

NAUGACHIA

140. SEEMANCHAL MOTORS PVT. LTD. (CFS1-CFS-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT – BHAGALPUR, BIHAR. - 853204
PH :8797096014, 8797096020.

NAWADA

141. REESHAV AUTOMOBILES (MG01-TJ-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110
PH :9263632156.

PATNA

142. KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. - 800013
PH :612-'09304212119/9304217120.

143. VAU'S AUTOMOBILE (1503-15-01), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA. - 800014
PH :9771446012.

144. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001
PH :612-2528415/ 9934020200.

145. REESHAV AUTOMOBILES PVT.LTD. (1506-15-01), PLOT NO.25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA. - 800004
PH :7320916713.

PURNEA

146. SEEMANCHAL MOTORS PVT. LTD. (6V01-6V-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326
PH :06454-232229/87979096014.

SAHARSA

147. G S MOTORS (AAP1-AAP-02), PATUAHA, NH 107 SAHARSA,BIHAR - 852201
PH :9263638456.

SAMASTIPUR

148. KRISHNA MOTORS (1W01-1W-01), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101
PH :9204061641.

SASARAM

149. PEARL CARS (1X01-1X-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115
PH :6184-8294634602/8294634605.

SITAMARHI

150. RAJIV AUTOMOBILES PVT. LTD. (EO01-EO-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. - 843301
PH :9234609671.

SIWAN

151. SHREE GOPAL AUTO PVT. LTD. (O501-O5-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236
PH :6154-9771486144/9771486132.

CHANDIGARH

CHANDIGARH

152. AUTOPACE NETWORK (P) LTD (0705-07-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002
PH :1'072-9878422201.

153. MODERN AUTOMOBILES (0702-07-01), 4 M.W. INDL AREA, CHANDIGARH - 160002
PH :01'072-650555, 656333.

154. CM AUTOSALES PVT. LTD. (0706-07-01), PLOT NO.130, PHASE-1, INDUSTRIAL AREA, CHANDIGARH - 160029
PH :0172-5200250.

155. TRICITY AUTOS (9M01-07-02), PLOT NO 29/6, INDUSTRIAL AREA PHASE-2, CHANDIGARH - 160002
PH :0172- 4222222.

156. STAN AUTOS PVT LTD (L104-07-03), B-42, INDUSTRIAL AREA, PHASE-II, CHANDIGARH - 160002
PH :0172-5003700.

157. CM AUTOSALES PVT. LTD. (0706-07-04), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. - 160002
PH :5014270 ,8284800830.

CHHATTISGARH

AMBIKAPUR

158. MAHAMAYA AUTOCARS PVT. LTD. (AE01-AE-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001
PH :7774-231852, 53.

BAIKUNTHPUR

159. MAHAMAYA AUTOCARS (CQU1-CQU-01), WARD NO.01, KHATA NO.91/6, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335
PH :9516609610.

BALODA BAZAAR

160. SKY AUTOMOBILES (5001-GJ-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332
PH :7727-222606.

BHATAPARA

161. SPARSH AUTOMOBILES (BBJ1-BBJ-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118
PH :9926626662.

BHILAI

162. CHOUHAN AUTOMOBILES LLP (8305-83-01), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI. - 490023
PH :7043512032.

163. SPARSH AUTOMOBILES PVT LTD (8304-83-01), R-17, INDUSTRAIL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH - 490026
PH :9926626662.

164. CHOUHAN AUTOMOBILES LLP (8305-83-02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH - 491001
PH :9644264450.

BILASPUR

165. SATYA AUTOMOBILES (C301-C3-03), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001
PH :7752-645048, 252024.

DHAMTARI

166. SKY AUTOMOBILES (7V01-7V-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009
PH :8889998612.

DURG

167. SPARSH AUTOMOBILES PVT LTD (7W03-7W-01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001
PH :9926626662.

GARIABAND

168. SPARSH AUTOMOBILES (CCH1-CCH-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032
PH :9669638883.

JAGDALPUR

169. SKY AUTOMOBILES (EC01-EC-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001
PH :07782-231500/231498.

JANJGIR

170. SATYA AUTOMOBILES (C301-9N-02), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668
PH :07817-993092051, 9981260403.

KANKER

171. SKY AUTOMOBILES (5001-KG-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER , DISTRICT – KANKER, CHHATTISGARH - 494334
PH :07722-233111.

KORBA

172. SATYA AUTOMOBILES (U701-U7-03), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681
PH :07759-228167, 228168, 228169.

MAHASAMUND

173. SPARSH AUTOMOBILES (5002-9P-02), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND.
PH :7723-224880.

MANENDRAGARH

174. MAHAMAYA AUTOCARS PVT. LTD. (AE01-BCE-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442
PH :8817282064.

MUNGELI

175. SATYA AUTOMOBILES PVT LTD. (BLE1-BLE-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468
PH :9981266667, 08,09.

PATHALGAON

176. MAHAMAYA AUTOCARS PVT. LTD. (BXO1-BXO-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118
PH :8889955558.

PITHORA

177. SPARSH AUTOMOBILES (CCG1-CCG-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008
PH :9009645552.

RAIGARH

178. SATYA AUTOMOBILES (7Y02-7Y-01), JINDAL ROAD, RAIGARH - 496001
PH :07762-228177,215810.

RAIPUR

179. SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010
PH :0771-4214000.

180. SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001
PH :0771-4019000.

181. SPARSH AUTOMOBILES (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001
PH :771-4222222.

182. SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001
PH :0771-4032505.

183. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006
PH :0771-4207000.

184. SPARSH AUTOMOBILES (5002-50-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR - 492004
PH :0771-4222213.

185. SPARSH AUTOMOBILES (5002-50-05), PLOT - 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR
PH :9926626662.

186. SKY AUTOMOBILES (5001-50-07), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH. - 492013
PH :9425204051.

187. HDN MOTORS PVT. LTD. (5005-50-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH. - 492001
PH :8839189152.

188. VISHWABHARTI AUTOMOBILES PVT. LTD. (5004-50-01), VIDHAN SABHA ROAD, MOWA, RAIPUR DISTT. CHHATTISGARH - 492005
PH :9425204444.

RAJIM

189. SPARSH AUTOMOBILES (5002-MO-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493881
PH :7701-234556.

SARAIPALI

190. SKY AUTOMOBILES PVT. LTD. (BUF1-BUF-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI - 493558
PH :7725-4030011, 4075000.

SARANGARH

191. SATYA AUTOMOBILES PVT LTD. (BUC1-BUC-01), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH. - 733751
PH :9981266667,08,09.

DADRA & NAGAR HAVELI

SILVASSA

192. KATARIA AUTOMOBILES PVT. LTD (ED01-ED-01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA - 396230
PH :0260 -2650057/56.

DAMAN & DIU

DAMAN

193. KATARIA AUTOMOBILES PVT. LTD (0104-98-08), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN , DAMAN UNION TERRITORY - 396210
PH :0260-8866002499/2244002.

DELHI

DELHI

194. AAA VEHICLEADES PVT. LTD. (08B4-08-01), B-25 OKHLA INDUSTRIAL AREA, PHASE-1, NEW DELHI - 110020
PH :011-46664888-46664999.

195. BAGGA LINK MOTORS PVT LTD. (0811-08-01), 395 PATPAR GANJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092
PH :011-46488830, 46488831.

196. BAGGA LINK MOTORS PVT LTD. (0811-08-02), LINK ROAD,(NEAR BAGGA PETROL PUMP),KAROL BAGH,NEW DELHI - 110005
PH :011-23524646, 23522626.

197. COMPETENT AUTOMOBILES CO LTD (0806-08-01), 895/C-8,NEAR JAIN MANDIR DADA BARI,MEHRAULI,NEW DELHI - 110030 PH :011-47724700, 47724707.
198. COMPETENT AUTOMOBILES CO LTD (0806-08-03), PLOT NO.3,GAZIPUR,DELHI, - 110096 PH :011-45300000.
199. D.D. MOTORS (08B2-08-01), A-1 UDYOG VIHAR,NEW ROHTAK ROAD,PEERAGARHI,DELHI - 110041 PH :011-25963535, 48616500.
200. D.D. MOTORS (0813-08-01), A-100 MAYAPURI,PHASE-II,NEW DELHI - 110064 PH :011-41845000, 49305232.
201. D.D. MOTORS (08A3-08-01), 5, WAZIRPUR,INDUSTRIAL AREA,ADJACENT TO WAZIRPUR DEPOT,RING ROAD, NEW DELHI - 110034 PH :011-27153996-99, 27151466-67.
202. KRISH AUTOMOTORS PVT. LTD. (08C1-08-01), PLOT NO.9, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. - 110063 PH :011-43288888.
203. MAGIC AUTO PVT. LTD. (0888-08-01), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI - 110064 PH :011-41847777.
204. MAGIC AUTO PVT. LTD. (08B7-08-01), PLOT NO. 68/3,MOTINAGAR,NEW DELHI, - 110015 PH :011-43777777, 43777721.
205. MAGIC AUTO PVT. LTD. (08B7-08-02), PLOT NO. : B-7, G.T. KARNAL ROAD, DELHI, - 110033 PH :011-45977777.
206. MARKETING TIMES AUTOMOBILES PVT LTD (0887-08-01), 18, OKHLA INDUSTRIAL ESTATE, PHASE-3, NEW DELHI - 110020 PH :011-40999999, 40999904.
207. RANA MOTORS PVT LTD (08A1-08-02), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020 PH :011-41707777.
208. ROHAN MOTORS LTD. (0886-08-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044 PH :011-40567900, 41679252-259.
209. SAYA AUTOMOBILES PVT. LTD. (0808-08-03), A 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033 PH :011-47088888.
210. T.R. SAWHNEY MOTORS PVT LTD (0819-08-01), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094 PH :011-71115333.
211. T.R. SAWHNEY MOTORS PVT LTD (0819-08-02), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042 PH :011-71118333.
212. T.R. SAWHNEY MOTORS PVT LTD (0819-08-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092 PH :011-9873851333.
213. T.R. SAWHNEY MOTORS PVT LTD (08C3-08-01), PLOT NO. -A/191, OKHLA PHASE-1, DELHI - 110020 PH :011-71119333.
214. SAYA AUTOMOBILES (0808-08-2B), KHASRA NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI - 110033 PH :011-27731325, 27731856.
215. COMPETENT AUTOMOBILES CO. LTD. (0806-08-05), B-83 MAYAPURI PHASE I, NEW DELHI - 110015 PH :011-47268980.
216. BAGGA LINK MOTORS PVT LTD. (0811-08-03), PLOT NO.4,6,8,10 NEAR FORTIS HOSPITAL, OPPOSITE NIRULAS, BABA POTERY COMPOUND, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI - 110070 PH :011-45688888, 45688811.
217. RANA MOTORS PVT LTD (08A1-08-04), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020 PH :011-40877777, 26389930.
218. COMPETENT AUTOMOBILES (0806-08-06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI PH :011-8377007980/81/02.
219. PREM MOTORS PVT. LTD. (08D4-08-01), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI - 110037 PH :011-42390000.
220. AAA VEHICLEADES PVT. LTD. (08B9-08-03), VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041 PH :011-66118888.
221. RANA MOTORS PVT LTD (08A1-08-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033 PH :011-41609999, 42474444.
222. MAGIC AUTO PVT. LTD. (08B8-08-01), KHASRA NO. 220 & 248, VILLAGE-DHUL SIRAS, SECTOR-24, DWARKA NEW DELHI. - 110077 PH :9910445501, 9818555669.
223. KRISH AUTOMOTORS PVT. LTD. (08A9-08-03), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. - 110052 PH :011-42020000, 9910114255.
224. T.R. SAWHNEY MOTORS PVT LTD (08D2-08-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064 PH :011-71119333, 9999049337.
225. D.D. MOTORS (0813-08-05), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015 PH :0-999903888.
226. MAGIC AUTO PVT. LTD. (08D5-08-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092 PH :011-9818741741.
227. D.D. MOTORS (0813-08-06), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. - 110043 PH :011-9999127840/9999127947.
228. D.D. MOTORS (A DIV OF D D IND. LTD.) (08DB-08-01), 36/22/2 AND 36/19, PANA UDHYAN, NARELA, NEW DELHI. - 110040 PH :8860637358.
229. D.D. MOTORS (A DIV OF D D IND. LTD.) (0813-08-07), 32/19, MATIALA, BEHIND DELHI PUBLIC SCHOOL, SECTOR-3, DWARKA, NEW DELHI. - 110059 PH :9873173005.
230. RANA MOTORS PVT LTD (08A1-08-07), C-7 & C-8, OKHLA INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110020 PH :9899250555.
231. FAIR DEAL CARS PVT. LTD. (08D8-08-01), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.48/17, OPP. BRAHMSHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJHAWALA ROAD, DELHI - 110086 PH :9711993801.

GOA

BICHOLIM

232. SAI SERVICE PVT. LTD. (BHN1-BHN-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529 PH :0832-2385500.

CANACONA

233. CHOWGULE INDUSTRIES PVT. LTD. (IT01-IT-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702 PH :0832-2633010.

CUNCOLIM

234. SAI SERVICE PVT. LTD. (3402-AAO-06), SURVEY NO.64/7, SHOP NO.3-A-II, CANCNAMODDI, CUNCOLIM, SOUTH GOA - 403703 PH :0832-2763062, 2763063.

DHARBANDORA

235. CHOWGULE INDUSTRIES PVT. LTD. (3408-GO-07), AT- KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401 PH :0832-2345221.

MAPUSA

236. CHOWGULE INDUSTRIES PVT. LTD. (3408-8Z-03), PLOT NO. 19/20,THIVIM INDUSTRIAL ESTATE,KARASWADA, MAPUSA,GOA - 403507 PH :0832-2258000/5/6.
237. SAI SERVICE PVT. LTD. (3402-8Z-05), D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA, GOA, - 403507 PH :0832-2267000.

MARGAO

238. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-01), OPP.DAMODAR TEMPLE,FATORDA,MARGOA,GOA - 403602 PH :0832-2749100,2749135,169,180,741237, 39.
239. SAI POINT CARS PVT LTD (3409-1Y-01), H,NO.17,WARD NO.5,SURVEY NO.34/3,34/4,MARGAON PONDA HIGHWAY,SONFATOR AMBORA,CAMURLIN,SALCETE ,GOA - 403722 PH :0832-2746700/2858899.
240. SAI SERVICE PVT. LTD. (3402-1Y-02), SURVEY NO. 212/4,VILLAGE - VERNA,TAL : SALCETE ,NEXT TO AGNEL POLYTECHNIC, MARGAO - 403718 PH :0832-2883000, 2791195,791192-96.
241. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-08), PLOT NO. M-58 AND M-59, PHASE 3B, VERNA INDUSTRIAL ESTATE, MARGAO, VERNA, SALCETE SOUTH GOA, GOA - 403722 PH :0832-2782400.

PANAJI

242. CHOWGULE INDUSTRIES PVT. LTD. (3408-P1-02), D.B BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001 PH :0832-2433000/2.
243. SAI SERVICE PVT. LTD. (3402-P1-01), SURVEY NO: 36/1,PENHA DE FRANCE,TAL : BARDEZ, ALTO PCRVORIM,GOA - 403501 PH :0832 -2419200, 2414324,412084.
244. SAI SERVICE PVT. LTD. (3402-P1-07), SHED NO.18/329, PLOT NO.5A, SURVEY NO.117/6, TELEIGAON, ST. INEZ, PANJIM, GOA-403 002. - 403001 PH :0832-22229222/2225222.

PONDA

245. SAI SERVICE PVT. LTD. (3402-34-03), OFF PANJIM HIGHWAY,PONDA,GOA, - 403401 PH :0832-2324106, 2311499, 2324120.

SANVORDEM

246. CHOWGULE INDUSTRIES PVT. LTD.
(BTK1-BTK-01), SURVEY NO. 4, SUBDIVISION-3, VILLAGE – CACORA, TALUKA – CURCHOREM, SANVORDEM, DIST. – SOUTH GOA, GOA . - 403706
PH :8322652300.

SATTARI

247. CHOWGULE INDUSTRIES PVT. LTD.
(3408-BOP-10), SURVEY NO. 60, SUB DIV NO. 05, VILLAGE ARVALEM, VILLAGE PANCHAYAT ARVALEM, TALUKA SATTARI, NORTH GOA, GOA - 403505
PH :0832-6410187.

TALEIGAON

248. CHOWGULE INDUSTRIES PVT. LTD.
(3408-NP-06), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAON, - 403001
PH :0832-2431799,2231217.

VASCO

249. SAI SERVICE PVT. LTD. (3402-CP-04), NEXT TO SHIKALIM CHURCH,SHIKALIM,VASCO,GOA - 403802
PH :0832-2542581/2526008/2526000/9850559425,2414327.

250. CHOWGULE INDUSTRIES PVT. LTD.
(3408-CP-09), OPP BHRAMASTAL TEMPLE, PATRONG BAINA, VASCO,GOA - 403802
PH :0832-2540121/833540131.

GUJARAT

AHMEDABAD

251. KATARIA AUTOMOBILES PVT. LTD (0104-01-01), D/8 BEHIND ESI HOSPITAL,OUTSIDE DARIAPUR DARWAJA,AHMEDABAD - 380016
PH :079-22174053/54.

252. KATARIA AUTOMOBILES PVT. LTD (0104-01-05), NEAR KOKHRA BRIDGE,MANINAGAR - 380008
PH :079-22160571/72.

253. KATARIA AUTOMOBILES PVT. LTD (0110-01-01), BEHIND ADANAL PUMP, ,NEAR MAKARBA CROSSING, MAKARBA,SG HIGHWAY - 380051
PH :079-30112333 / 30112312.

254. KIRAN MOTORS LIMITED (0102-01-01), SARKHEJ - GANDHINAGAR HIGHWAY,OPP. RAJPATH CLUB,AHMEDBAD - 380054
PH :0272-6740955, 67.

255. KIRAN MOTORS LIMITED (0102-01-02), BEHIND L&T GODOWN,SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210
PH :079-26891863, 26891009, 65459555, 65228555, 65229555..

256. KIRAN MOTORS LIMITED (0102-01-03), BASEMENT, RIVERA ARCADE,NR. AUDA GARDEN, PRAHLADNAGAR, 100FT RING ROAD,SATELLITE, AHMEDABAD - 390015
PH :079-26924777,26927333.

257. POPULAR WHEELERS (INDIA) PVT. LTD. (0105-01-01), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443
PH :079-61903232.

258. POPULAR WHEELERS (INDIA) PVT. LTD. (0111-01-01), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA,AHMEDABAD - 380054
PH :079-65058111.

259. KIRAN MOTORS LIMITED (0112-01-01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005
PH :079-65054555 / 575.

260. UDAY AUTOLINK (0113-01-01), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHWADA, AHMEDABAD, GUJARAT - 382430
PH :079-31927070.

261. NANDA AUTOMOBILES (0114-01-01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405
PH :079-886558787 / 8460088883.

262. STARLINE CARS (AHMEDABAD) PVT LTD (0115-01-01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330
PH :079-29701051/53.

263. KIRAN MOTORS (0112-01-02), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330
PH :079-60020555/60021555.

264. KIRAN MOTORS LIMITED (0102-01-04), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060
PH :079-65457555.

265. POPULAR WHEELERS (INDIA) PVT. LTD. (0109-01-01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. - 380007
PH :079-30491101, 02.

266. ATUL MOTORS PVT. LTD. (0116-01-01), PLOT NO. 116, BOPAL – AMBIL ROAD, BOPAL , AHMEDABAD, DISTRICT – AHMEDABAD, GUJARAT. - 380058
PH :079-61993300.

267. TANU MOTORS PVT. LTD. (0118-01-01), SURVEY NO. 1155/1-2, 1154 & 1156, PLOT NO. 39, SARKHEJ-SANAND ROAD, SANAND, AHMEDABAD (GUJARAT) - 382110
PH :9909006071.

268. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (0117-01-01), PLOT NO.116 & 118/2, SARDAR PATEL RING ROAD, VASTRAL, AHMEDABAD - 382418
PH :079-7623089000.

269. STARLINE CARS PVT. LTD. (D101-01-09), SR NO – TP - 57, PLOT NO. 67, NEAR GOTA FLYOVER BRIDGE, OPP. SHANKU FARM HOUSE, S.G. HIGHWAY, GOTA, AHMEDABAD. - 382481
PH :7046046232.

270. KATARIA AUTOMOBILES PVT. LTD. (0110-01-02), PLOT NO. 112, 116 & 119, SURVEY NO. 283/3.7.10, B/H SILVER STAR, BESIDE HARI VILLA BUNGLOWS, GOTA ROAD, CHANDLODIYA, AHMEDABAD. - 382481
PH :9824344889.

AMOD

271. RAVIRATNA MOTORS (F801-ZE-03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110
PH :9687691106.

AMRELI

272. ATUL MOTORS (9E01-9E-01), LATHI BY PASS ROAD, AMRELI, GUJARAT. - 365601
PH :02792-8140909098.

ANAND

273. AMAR CARS PVT LTD (F702-F7-01), JANTHA CROSSING,SOJITRA ROAD,ANAND - 388121
PH :02692-229980, 229981.

ANKALESHWAR

274. RAVIRATNA MOTORS PVT LTD (P901-P9-01), PLOT NO. 624/2/BA, GIDC, VALIA ROAD, ANKLESHWAR - 393002
PH :02646-225132/28.

BALASINOR

275. AMAR CARS PVT. LTD. (CJE1-CJE-01), SR. NO. 1451, OPP. OIC PETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARJINA MUVADA, VILLAGE – VADALA, TALUKA – BALASINOR, DISTRICT – MAHISAGAR, GUJARAT. - 388255
PH :8141011188.

BARDOLI

276. DHRU MOTORS (4002-Q1-02), G.I.D.C,SURAT BARDOLI ROAD,BARDOLI, - 394601
PH :02622-9825413113/9879104454.

277. KATARIA AUTOMOBILES PVT. LTD. (Q106-Q1-02), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310
PH :02622-922803307/9228004697/302222.

BAREJA

278. KATARIA AUTOMOBILES PVT. LTD. (BAN1-BAN-01), 5/6/7, ADITYA COMPLEX NATIONAL HIGHWAY-8, BAREJA , TALUKA – DASKROI, DISTRICT – AHMEDABAD, GUJARAT - 382425
PH :079-7046079997.

BARWALA

279. UDAY AUTOLINK PVT. LTD. (I401-I4-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450
PH :7567449999.

BAVLA

280. KATARIA AUTOMOBILES PVT. LTD (0104-RX-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220
PH :02714-231250.

BHACHAU

281. K.D. MOTORS (P501-JP-02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140
PH :02837-223402.

BHARUCH

282. RAVIRATNA MOTORS (F801-F8-01), NH 8, OPP YOGI PETROL PUMP,P.O. ZADESHWAR,BHARUCH - 392011
PH :02642-233506, 507, 504.

BHAVNAGAR

283. ETERNAL MOTORS PVT LTD (C901-C9-01), 14/1 & 2 GIDC,BEHIND S.T.WORKSHOP,CHITRA,BHAVNAGAR - 364004
PH :9227893042, 44.

284. ETERNAL MOTORS PVT LTD (C901-C9-02), PLOT NO. 1858/A-2,OPP GOLIBAR HANUMAN MANDIR, BEHIND GAUSHALA, RUPANI CIRCLE, BHAVNAGAR - 364002
PH :0278-2562462, 9228007221.

285. ETERNAL MOTORS PVT. LTD. (C901-C9-04), 6/8 & 11 GIDC, BHAVNAGAR - RAJKOT HIGHWAY, CHITRA, BHAVNAGAR (GUJARAT). - 364004
PH :0278-9228007215, 9227893040.

286. ETERNAL MOTORS PVT LTD (C901-C9-05), PLOT NO.29, SURVEY NO.37/1 & 37/2 NEAR TALAJA OCTROI CIRCLE, BESIDE INDIAN OIL PUMP, TALAJA ROAD, ADHEWADA, BHAVNAGAR, DISTT: BHAVNAGAR, GUJARAT - 364002
PH :0278-9099091926, 9227893036.

DEALER WORKSHOP (AS ON 20.07.2018)

BHUJ

287. K.D. MOTORS (P501-P5-01), PLOT NO. 5/6/14,UMANAGAR,MIRZAPUR HIGHWAY ROAD , BHUJ,GUJARAT - 370001
PH :2832-02832-232534/5.

BODELI

288. KIRAN MOTORS LIMITED (0R01-0R-01), OPP.NARMADA GUEST HOUSE,DABHOI ROAD, BODELI, TALUKA: SANKHEDA,VADODARA - 391135
PH :02665-222223 / 222224.

BORSAD

289. AMAR CARS PVT LTD (BJM1-BJM-01), BORSAD – TARAPUR HIGHWAY, BORSAD , DISTRICT – ANAND, GUJARAT - 388540
PH :0265-9586477744.

BOTAD

290. ETERNAL MOTORS PVT LTD (C901-AP-03), OPP.MULTIPLEX CINEMA,YOGI NAGAR,PALIYAD ROAD,BOTAD - 400092
PH :02849-8511118832, 9099095344.

CHOTILA

291. DREAM VEHICLES PVT. LTD. (CFI1-CFI-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO – CHOTILA, DISTRICT – SURENDRANAGAR, GUJARAT. - 363520
PH :8238000979.

DABHOI

292. KATARIA AUTOMOBILES PVT. LTD. (UU01-UU-01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110
PH :02663-255311.

DAHOD

293. R B CARS PVT. LTD. (2C01-PL-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151
PH :02673
-244307.

DEESA

294. TANU MOTORS PVT. LTD. (Q801-UQ-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535
PH :02744-270499.

DEHGAM

295. NANDA AUTOMOBILES (2B01-NR-03), NEAR UMIYA MATAJI TEMPLE,COLLEGE ROAD,AHMEDABAD ROAD, DEHGAM - 382305
PH :02716-234567.

DEVGADH BARIA

296. R B CARS PVT. LTD. (2C01-AOA-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380
PH :0265-2771122.

DHANERA

297. TANU MOTORS PVT. LTD. (BZW1-BZW-01), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA. - 385310
PH :9909006071.

DHARAMPUR

298. KATARIA AUTOMOBILES PVT. LTD. (BSK1-BSK-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050
PH :02633-240600.

DHARI

299. ATUL MOTORS PVT. LTD. (GG01-GG-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI , TALUKA - DHARI, DIST. - AMRELI, GUJARAT. - 365640
PH :0281-2462779, 6699000, 9824200001, 7046233352.

DHRANGADHRA

300. DREAM VEHICLES PVT. LTD. (IM01-IM-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310
PH :2754-281234.

DWARKA

301. ATUL MOTORS PVT LTD (CJG1-CJG-01), SURVEY NO. 41, NEAR, SHRI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT – DWARKA – . - 361335
PH :9904822333.

GANDHI NAGAR

302. NANDA AUTOMOBILES (2B01-2B-01), 1003,SECTOR-28,GANDHI NAGAR - 382028
PH :079-23212692 / 93 / 94.

GANDHIDHAM

303. B M AUTOLINK (7702-77-01), EAST OF PLOT NO. 30-35,NATIONAL HIGHWAY, GANDHIDHAM - 370201
PH :02836-223330.

304. B M AUTOLINK (7702-77-03), SURVEY NO.129/26 P, GALPADAR HIGHWAY, GANDHIDHAM , DISTT.KACHCHH, GUJARAT. - 370110
PH :9727725004.

GODHRA

305. R B CARS PVT. LTD. (2C01-2C-01), PLOT NO. 112/11.,12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001
PH :02672-265306, 265307, 365308.

306. R B CARS PVT. LTD. (2C01-2C-04), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001
PH :02672-262749.

GONDAL

307. ATUL MOTORS (PVT) LTD (5503-AD-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY,GONDAL - 360311
PH :02825-294495.

HALOL

308. R B CARS PVT. LTD. (BKC1-BKC-01), PLOT NO. 104/6 & 104/8, VADODARA – GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350
PH :02678-220201.

HALVAD

309. DREAM VEHICLES PVT. LTD. (GX01-GX-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330
PH :02758-291409.

HIMMATNAGAR

310. KIRAN MOTORS LIMITED (P601-P6-01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001
PH :02772- 9824576711.

IDER

311. KIRAN MOTORS LIMITED (UX01-UX-01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430
PH :8155994111.

JAMJODHPUR

312. ATUL MOTORS (CSN1-CSN-01), RS NO.438/1, PLOT NO.14-15, JAMJODHPUR DISTT. JAMNAGAR - 360530
PH :02898-222250.

JAMNAGAR

313. ATUL MOTORS (PVT) LTD (F401-F4-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001
PH :0288-3041001.

314. ATUL MOTORS (PVT) LTD (F401-F4-04), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002
PH :0288-2550251.

JASDAN

315. ATUL MOTORS PVT. LTD. (5503-OB-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050
PH :02821-291222 7046299952.

JETPUR

316. PERFECT AUTO SERVICES (PK01-PK-01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370
PH :(02823)-9978998806.

JHALOD

317. R B CARS PVT. LTD. (CJF1-CJF-01), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA-JHALOD, DISTRICT - DAHOD. - 389170
PH :9099049349.

JUNAGADH

318. PERFECT AUTO SERVICES (5502-K8-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001
PH :9879518052.

JUNAGARH

319. PERFECT AUTO SERVICES (5502-K8-02), PLOT NO. 81-82,G.I.D.C. DOLATPURA,RAJKOT-JUNAGARH HIGHWAY, JUNAGARH - 362001
PH :661480.

KADI

320. STARLINE CARS PVT. LTD. (D101-UR-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715
PH :02764-241200.

KALOL

321. NANDA AUTOMOBILES (2B01-FW-02), PLOT NO. - 162-168, GIDC,KALOL MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL. - 383028
PH :02764-220781 / 82 / 83.

KARJAN

322. AMAR CARS PVT LTD (UZ01-UZ-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODRARA (GUJARAT) - 391210
PH :0265-2458282/2458585.

KESHOD

323. PERFECT AUTO SERVICES (BZY1-BZY-01), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA – KESHOD, DISTRICT – JUNAGADH, GUJARAT. - 362220
PH :9879605322.

KHAMBHAT

324. AMAR CARS PVT LTD (BNF1-BNF-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620
PH :0265-9909960706.

KHEDA

325. AMAR CARS PVT. LTD. (BNA1-BNA-01), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL: MATER, DISTT. KHEDA, GUJARAT - 387570
PH :8734930567.

KIM

326. KATARIA AUTOMOBILES (UW01-UW-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110
PH :02621 -3081240/251,235555.

LIMBDI

327. DREAM VEHICLES PVT. LTD. (BSG1-BSG-01), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421
PH :02758-261262.

LUNAWADA

328. R B CARS PVT. LTD. (BYN1-BYN-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA , TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230
PH :9879126981, 9825967139 9586746703.

MAHESANA

329. STARLINE CARS PVT. LTD. (D101-D1-01), NAGALPUR HIGHWAY,MAHESANA , GUJRAT - 384002
PH :02762-255454 & 231707.

MAHUVA

330. ETERNAL MOTORS PVT. LTD. (IV01-IV-01), VIJAY - PARTH COMPLEX, BANDAR ROAD, MAHUVA(GUJARAT) - 364290
PH :02844-226226 / 9227893041.

MANDAL

331. KIRAN MOTORS (IW01-IW-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130
PH :02715-9408803925.

MANDVI

332. K.D.MOTORS (UY01-UY-01), PLOT NO.25,26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465
PH :02834-295100 / 01.

MANSA

333. NANDA AUTOMOBILES (2B01-0L-04), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINAGAR, GUJARAT - 382845
PH :9727921000.

MEHSANA

334. TANU MOTORS PVT. LTD. (Q801-D1-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002
PH :02762-291102, 291103, 291104.

METODA

335. ATUL MOTORS PVT. LTD. (5503-BLW-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021
PH :9924688774.

MODASA

336. KIRAN MOTORS LIMITED (P601-CR-02), SHAMLAL JI ROAD,SABARKANTHA DIST., MODASA - 383315
PH :2774- 8155995111.

MORBI

337. PERFECT AUTO SERVICES (5502-X5-07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI , TEHSIL-MORBI, DISTT.-MORBI, GUJARAT. - 363641
PH :9879518052, 9099058044 9925199569.

MOTI KHAVADI

338. ATUL MOTORS PVT LTD (AAU1-AAU-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST - JAMNAGAR, GUJARAT. - 361140
PH :0288-2846015.

MUNDRA

339. B M AUTOLINK (7702-AJ-02), PRAGPAR ROAD,MUNDRA,DISTRICT-KUTCH, GUJARAT, - 370421
PH :02838-296020.

NADIAD

340. AMAR CARS PVT LTD (F702-P7-02), NEAR RAJHANS MULTIPLEX,NADIAD-UTTARSANDA ROAD - 387370
PH :0268-2587981, 2587980.

NAVSARI

341. KATARIA AUTOMOBILES PVT. LTD (Q701-Q7-01), PLOT NO.-891, OPP PAUVA MILL, NH-8,NEAR GANESH SISODRA CHOKDI,GANESH SISODIA NAVSARI, GUJRAT - 396463
PH :02637-304444/304439.

OLPAD

342. COMET CAR SALES & SERVICE PVT. LTD. (4006-ZZ-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540
PH :0261
-220066 / 220088.

PADRA

343. AMAR CARS (2205-OC-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. – VADODARA, GUJARAT - 391440
PH :02662-223355/223366.

PALANPUR

344. TANU MOTORS (Q801-Q8-01), OPP.DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001
PH :02742-254477/254499/254000.

345. STARLINE CARS PVT. LTD. (D101-Q8-08), SURVEY NO.4 & 5/2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001
PH :2742-265665.

PALITANA

346. ETERNAL MOTORS (CSD1-CSD-01), RE SURVEY NO. 75/1, YASHOVIJAY NAGAR, PLOT NO. 15, TALUKA – PALITANA, DISTRICT – BHAVNAGAR, GUJARAT. - 364270
PH :7043340575.

PALSANA

347. KATARIA AUTOMOBILES PVT. LTD (4004-ZF-07), BESIDE SAINATH COMPLEX, KADODARA AHMEDABAD ROAD , NH-8, UMBHEL GAM,TALUKA: PALSANA KADODARA, SURAT. - 382721
PH :02622-9228004677, 8866001593.

PATAN

348. STARLINE CARS PVT. LTD. (D101-Q9-02), CHANASMA HIGHWAY, PATAN - 384265
PH :02766-7046046184 & 7046046186.

PORBANDAR

349. ATUL MOTORS PVT LTD (F401-T6-05), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY , PORBANDAR, DIST. PORBANDAR GUJARAT - 360577
PH :0286-290002.

PRANTIJ

350. KIRAN MOTORS LIMITED (AAI1-AAI-01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAMALPUR, TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205
PH :9624401888.

RADHANPUR

351. STARLINE CARS PVT. LTD. (BNI1-BNI-01), SURVEY NO. 208/A, MOUJA – RADHANPUR, RADHANPUR MAIN ROAD, DISTRICT – PATAN, GUJARAT. - 385340
PH :9824601773.

RAJKOT

352. ATUL MOTORS (PVT) LTD (5503-55-01), NEAR BHAKTI NAGAR STATION CIRCLE,TAGORE ROAD, RAJKOT - 360002
PH :0281-2462781/82.

353. ATUL MOTORS (PVT) LTD (5503-55-02), BEHIND HP PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT - 360005
PH :0281-2575513/14.

354. PERFECT AUTO SERVICES (5502-55-01), PERFECT HOUSE,GONDAL ROAD,VANDI,RAJKOT - 360004
PH :0281-360588, 366759.

355. PERFECT AUTO SERVICES (5502-55-04), 150 RING ROAD,OPP. GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005
PH :0281-2576233, 2576234.

356. ATUL MOTORS (PVT) LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003
PH :0281-2704573.

357. PERFECT AUTO SERVICES (5502-55-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006
PH :9979861995.

358. KATARIA AUTOMOBILES PVT. LTD. (5504-55-01), S. NO. 10/1, TPS NO. – 10, KALAVAD ROAD, MOTAMAVA, RAJKOT, GUJARAT. - 360001
PH :9824190300.

RAJPARDI

359. RAVIRATNA MOTORS PVT. LTD. (CAI1-CAI-01), R.S.NO.973, CTS NO. 1298, SHOPS PLOT NO.29 & 30, MOJE RAJPARDI, TALUKA-JHAGADIA, DISTT. BHARUCH - 393115
PH :9687691100.

RAJPIPLA

360. RAVIRATNA MOTORS PVT. LTD. (9X01-9X-01), OPP. JALARAM SAW MILL, NEAR HARSIDDHI MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA, GUJARAT - 393145
PH :02640-223508.

DEALER WORKSHOP (AS ON 20.07.2018)

RAJULA

361. ATUL MOTORS PVT LTD (BAK1-BAK-01), HINDORNA CHOWKDI, JAFRABAD ROAD, RAJULA DISTT. AMRELI (GUJARAT) - 365560
PH :02794-221501.

SANTRAMPUR

362. R B CARS PVT. LTD. (2C01-RY-03), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR,DISTT.-PANCHMAHAL - 389260
PH :02675
-221752.

SAVLI

363. KIRAN MOTORS LTD. (CFD1-CFD-01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRVA CHOWKDI, SAVLI – TIMBA ROAD, SAVIL, TALUK – SAVLI, DISTRICT – VADODARA, GUJARAT. - 391770
PH :9624099195.

SAYAN

364. KIRAN MOTORS LTD. (OO01-OO-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIA, TALUKA: OLPAD, SAYAN - 394130
PH :(02621)-9228007037/9712010100.

SHAPAR

365. ATUL MOTORS PVT. LTD. (BQZ1-BQZ-01), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT – RAJKOT, GUJARAT - 360024
PH :2827-8460692223.

SIDDHPUR

366. STARLINE CARS PVT. LTD. (CMY1-CMY-01), PLOT NO. 140-1285/7, SIDHPUR, TALUKA – VADGAM, DISTRICT – PATAN. - 384151
PH :9824601773.

SURAT

367. DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR,NEAR JEEVAN JYOT THEATRE,UDHNA MAIN ROAD,SURAT - 394210
PH :0261-406071/72.

368. DHRU MOTORS (4002-40-1B), 207, NEW INDUSTRIAL ESTATE,ROAD NO.-6,UDHNA UDYOG NAGAR, SURAT - 394210
PH :0261-0261-2272118/ 9978900862.

369. KATARIA AUTOMOBILES PVT. LTD (4004-40-04), OPP. VATSALYA BUNGLOWS,NEAR GUJARAT GAS CNG STATION,UDHNA MADGULLA ROAD, VESU,SURAT - 395007
PH :0261-2211005/9228004674.

370. KATARIA AUTOMOBILES PVT. LTD (4004-40-05), KATARIA ARCADE,OPP. RAJHANS CINEMA,DUMAS ROAD, PIPLOD, SURAT - 395007
PH :0261-3081238, 3081240, 3081251.

371. KIRAN MOTORS LIMITED (4001-40-01), SURAT-BARDOLI ROAD,DUMBHAL,NEAR PUNA JAKAT NAKA,SURAT - 395010
PH :0261-9824701590/9712010100.

372. KIRAN MOTORS LIMITED (4001-40-02), PANDESARA,BAMROLI ROAD,SURAT - 395002
PH :0261-2630361-4.

373. COMET CAR SALES & SERVICE PVT. LTD. (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221
PH :0261 -3091234.

374. KATARIA AUTOMOBILES LTD. (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT - 394310
PH :0261-2778810 / 20 / 30 / 40.

375. KIRAN MOTORS (P) LTD. (4005-40-01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT - 395009
PH :9712010100.

376. AMAR CARS PVT LTD (4009-40-01), BLOCK NO.116, SURVEY NO.128/1, SURAT-KAMREJ ROAD, VALAK PATIYA, NEAR VALAK NAGAR, TALUKA-KAMREJ, DISTT:SURAT - 395006
PH :0261-8980042799/89800471899.

377. AMAR CARS PVT LTD (4009-40-02), PLOT NO.10&11, SURVEY NO.7 & 9, SONARAS COMPOUND, NEAR DGVCL OFFICE, KARMNATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006
PH :0261-7069026555/7069026666.

378. COMET CAR SALES & SERVICE PVT. LTD. (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT – SURAT, GUJARAT. - 395004
PH :0261-2480877, 2604877.

SURENDERNAGAR

379. DREAM VEHICLES PVT. LTD. (LC01-LC-01), 261/P, OPP MARKETING YARD,GIDC AREA,WADHWAN CITY, SURENDERNAGAR - 363030
PH :02752-241314 / 651516.

TANKARA

380. ATUL MOTORS PVT. LTD. (BQY1-BQY-01), PLOT NO. 8/1, S. NO. 107, VILLAGE – JABALPUR, TALUKA – TANKARA, SUB DISTRICT – MORBI, DISTRICT – RAJKOT. - 363650
PH :9904100076.

THARA

381. TANU MOTORS PVT. LTD. (0V01-0V-01), SHOP NO.17 & 18, SIHORI HIGHWAY, R.B. THAKKAR COMPLEX, THARA, KAKREJ TALUKA, BANASKANTHA DISTT. - 385555
PH :9909006071.

UMERGAON

382. KATARIA AUTOMOBILES (BNB1-BNB-01), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT – VALSAD, GUJARAT. - 396170
PH :7698685000.

UMRETH

383. AMAR CARS PVT. LTD. (CFE1-CFE-01), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH , DIST.ANAND, GUJARAT. - 388220
PH :7567898716.

UNA

384. PERFECT AUTO SERVICES (BFD1-BFD-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT – GIR SOMNATH, GUJARAT. - 362560
PH :8511147523.

UNJHA

385. TANU MOTORS (Q801-GR-02), OPP. DHANA DAL FACTORY,MEHSANA PALANPUR HIGHWAY, UNJHA - 384170
PH :02742-224499.

VADODARA

386. AMAR CARS PVT LTD (2203-22-01), GORWA ROAD,VARODARA,GUJARAT, - 390016
PH :0265-2291500, 01, 02.

387. KIRAN MOTORS LIMITED (2201-22-01), 909/4,G.I.D.C.MAKARPURA,VADODARA - 390010
PH :0265-2642212.

388. KIRAN MOTORS LIMITED (2201-22-02), PLOT NO.160,SUB-I NUTAN GUJ.INDL.ESTATE,OLD CHHANI ROAD, VADODARA - 390002
PH :0265-2771744, 45.

389. AMAR CARS PVT LTD (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001
PH :0265-2428282.

390. KATARIA AUTOMOBILES PVT. LTD (2204-22-01), 984/4,GIDC, OLD NH-8,MAKARPURA ROAD, VADODARA, GUJARAT - 390010
PH :0265-3091257 / 34.

391. AMAR CARS PVT LTD (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA,GUJARAT - 390016
PH :0265-2488787.

392. KIRAN MOTORS LIMITED (2201-22-03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002
PH :0265-2771122.

393. KATARIA AUTOMOBILES PVT. LTD (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001
PH :08866002482 / 1584.

VALSAD

394. KATARIA AUTOMOBILES PVT. LTD (0104-2E-06), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020
PH :02632 -233244 / 233245.

VALVADA

395. VITESSE TRADING LIMITED (0503-V1-05), SURVEY NO.137/1 Q 148/1 VILLAGE VALVADA,NATIONAL HIGHWAY-8, NEAR KARAMBELI STATION, DISTT.VALSAD(GUJ) - 396105
PH :0260-787301.

VANSDA

396. KATARIA AUTOMOBILES PVT. LTD. (Q701-SB-02), JAMNABA PARK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT – NAVSARI, GUJARAT - 396580
PH :02630-223490.

VAPI

397. KATARIA AUTOMOBILES PVT. LTD (0104-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C., VAPI, TAL. PARDI - 396195
PH :0260-3081240/3081260.

398. KATARIA AUTOMOBILES PVT. LTD (0104-97-09), PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI , DISTRICT -VALSAD, GUJARAT - 369191
PH :0260-2408202/8866001591/9327740903.

VERAVAL

399. PERFECT AUTO SERVICES (5502-AH-05), NR. BALIYA HANUMAM,VERAVAL - JUNAGADH HIGHWAY, JUNAGADH, GUJARAT - 362265
PH :02876-221122.

VIJAPUR

400. STARLINE CARS PVT. LTD. (D101-V2-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870
PH :02763-220059.

VIRAMGAM

401. KIRAN MOTORS LIMITED (AAB1-AAB-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150
PH :8156016222.

VISNAGAR

402. STARLINE CARS PVT. LTD. (D101-RW-05), VISNAGAR -AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT.- MEHSANA - 384315
PH :02765-222977.

VYARA

403. COMET CAR SALES & SERVICE PVT. LTD. (BIY1-BIY-01), SHOP NO. 11 & 12, BLOCK NO. 175/1/A, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT – TAPI, GUJARAT - 394650
PH :02626-221410/11.

WAGHODIA

404. KATARIA AUTOMOBILES PVT. LTD. (BZZ1-BZZ-01), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA – WAGHODIA, DISTRICT – VADODARA, GUJARAT. - 391760
PH :8153022000.

WANKANER

405. ATUL MOTORS PVT LIMITED (BAL1-BAL-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621
PH :02828-221556.

HARYANA

AMBALA

406. EAKANSH WHEELS (1802-18-01), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001
PH :0171-2822500,600,900.
407. EAKANSH WHEELS (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001
PH :01712542549, 9991802000.
408. MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003
PH :0171-2521444, 2520155.
409. MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003
PH :0171-2520448.

ASSANDH

410. KARNAL MOTORS (8906-CS-04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032
PH :1749-272032.

BABARPUR

411. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PVT. LTD.) (CKX1-CKX-01), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103
PH :7009396727.

BAHADURGARH

412. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (2G01-2G-01), 1202, M.I.E, PART-B, MAIN ROHTAK ROAD, BAHADURGARH, DIST. JHAJJAR (HARYANA), - 124507
PH :01276268102 / 01276661111 9812580555.
413. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (2G01-2G-02), KHASRA NO. 1681-82, MODERN INDUSTRIAL AREA, PART – B, BAHADURGARH. - 124507
PH :9992200429.

BARARA

414. EAKANSH WHEELS (NX01-NX-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA - 133201
PH :01731-286400.

BARWALA

415. MODERN AUTOMOBILES (BSA2-BSA-01), KHEWAT/KHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118
PH :9416021648.

BAWAL

416. DINCO 4 WHEELS LLP (AUTO VIBES) (BBD2-BBD-01), KHATA NO. 326 AND KHATAUNI NO. 362, OPPOSITE PRATHAM HOUSING, NH-8, BAWAL, DISTRICT – REWARI, HARYANA . - 123501
PH :7082100250.

BERI

417. SIDHI VINAYAK VEHICLES PVT. LTD. (BEV1-BEV-01), PLOT NO. 53/2, NEAR MATA MANDIR, BERI DUJANA ROAD, BERI , DIST. JHAJJAR - 124201
PH :9992200415.

BHAPOLI

418. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PVT. LTD.) (CKV1-CKV-01), KHEWAT NO. 136, VILLAGE – JHAMBA, TEHSIL – BAPOLI, DISTRICT – PANIPAT. - 132103
PH :7009396727.

BHIWANI

419. JAGMOHAN MOTORS (X301-X3-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021
PH :01664-9812000364.

BILASPUR

420. PANDIT AUTOMOBILES PVT. LTD. (BGH1-BGH-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT – YAMUNANAGAR, HARYANA. - 135102
PH :01732-247777, 9812455350, 9812455879.

BILASPUR (HARYANA)

421. PLATINUM MOTOCORP LLP (2L04-CIA-02), KHASRA NO.54/67, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT – GURUGRAM. - 122413
PH :9205192666.

CHARKHI DADRI

422. JAGMOHAN MOTORS (X301-CT-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306
PH :9992200363, 9992200362.

CHEEKA

423. EAKANSH MOTORS PVT. LTD. (U802-HU-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA, - 136034
PH :01743222277 / 01743222288.

CHHACHHARAULI

424. PANDIT AUTOMOBILES PVT. LTD. (CQZ1-CQZ-01), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL – CHHACHHRAULI, DISTRICT – YAMUNA NAGAR. - 135103
PH :9812455896.

DADRI-TOE

425. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (BVH1-BVH-01), KHEWAT NO.270, 273 KILA NO.11/2/2 & 14 (8-0), 15/2 (7-16) VILL - DADRI TOE, MAIN BUS STAND JHAJJAR-GURGAON ROAD, TEHSIL - JHAJJAR, DISTT.-JHAJJAR, HARYANA. - 124103
PH :9992200433.

ELLENABAD

426. SHAKTI MOTORS PVT.LTD. (E401-IN-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD - 125055
PH :1666-230168, 221953, 9729871902.

FARIDABAD

427. TCS AUTOMOBILES (5804-58-01), PLOT NO-1A, SECTOR-6, FARIDABAD, - 121001
PH :0129 -4292929.
428. VIPUL MOTORS LTD. (5801-58-03), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD - 121006
PH :0129-4003052, 4286000,24,30.
429. VIPUL MOTORS LTD. (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002
PH :0129-4285000,33,66, 286640, 41, 290685.
430. FAIR DEAL CARS PVT. LTD. (5805-58-01), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003
PH :9953340624.
431. TCS AUTOWORLD PVT. LTD. (TCS & ASSOCIATES PVT. LTD.) (5804-58-02), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA. - 121003
PH :0129-2256789.
432. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD.) (5806-58-01), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003
PH :0129-4180500.

FARRUKHNAGAR

433. PLATINUM MOTOCORP LLP (KE01-KE-01), KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO. -19/3 AND 22/2, VILLAGE – SEHADPUR MOHAMADPUR, TEHSIL – FARRUKHNAGAR, DISTRICT – GURGAON. - 122506
PH :9205192660, 9810181273, 9205192661.

FATEHABAD

434. SHAKTI MOTORS PVT.LTD. (2H02-2H-01), NH-10, SIRSA ROAD, FATEHABAD - 125050
PH :01667221799 / 01667221699 9896032100.

GANAUR

435. JAGMOHAN AUTOMOTIVES PVT. LTD. (NA04-NA-01), RAILWAY ROAD, GANAUR - 131101
PH :0130-2461500.

GHARAUNDA

436. KARNAL MOTORS (8906-MR-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114
PH :01748-252030,252040.

GOHANA

437. JAGMOHAN AUTOMOTIVES PVT. LTD. (CU03-CU-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. - SONEPAT - 131301
PH :9992200357.

GURGAON

438. COMPETENT AUTOMOBILES CO LTD (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004
PH :0124-425200.
439. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006
PH :0124-8912555, 8912000, 8912869, 8912870.

440. PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, - 122015
PH :0124-4012555.
441. VIPUL MOTORS LTD. (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001
PH :0124-4395700/1, 4004019-23, 9811723030.
442. ROHAN MOTORS LTD. (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001
PH :7065574220.
443. VIPUL MOTORS LTD. (5801-95-04), PLOT NO.5/22/1, SARHAUL VILLAGE,SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102
PH :0124-4285000.
444. PREM MOTORS PVT. LTD. (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON - 122017
PH :7065003410, 7065000000.
445. PREM MOTORS PVT. LTD. (9512-95-01), PLOT NO. 3,IDC, OPPOSITE SECTOR-14, GURGAON - 122001
PH :7065003377, 7065003388.
446. RANA MOTORS PVT LTD (9509-95-02), PLOT NO.60, IDC, GURGAON - 122001
PH :0124-4867777.
447. PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. - 122001
PH :0124-9810047332, 9810052514.
448. RANA MOTORS PVT LTD (9509-95-03), QILA NO. 8/2, MUSTAKIL NO. 25, SECTOR 17-18, DIVIDING ROAD, GURGAON. - 122001
PH :0124-2340140.

HANSI

449. JAGMOHAN MOTORS (GT02-GT-01), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI - 124001
PH :9992200383.

HISSAR

450. HISSAR AUTOMOBILES (7601-76-01), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA - 125001
PH :01662-76310, 76021.
451. MODERN AUTOMOBILES (7602-76-01), OPP. VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005
PH :01662-20000, 21000.
452. MODERN AUTOMOBILES (7602-76-02), OPP. BBMB, HISSAR DELHI ROAD, HISSAR - 125001
PH :9354511110.
453. UNIQUE MOTORS PVT. LTD. (7603-76-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD,HISSAR (HARYANA) - 125006
PH :8818055538.

JHAJJAR

454. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (0B01-0B-01), NEAR GOVT. POLYTECHNIC, BAHADURGARH ROAD, JHAJJAR - 124507
PH :01251-271115 /271119.
455. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (0B01-0B-02), BERI ROAD, JHAJJAR, HARYANA. - 124103
PH :9992200415.

JIND

456. EAKANSH MOTORS PVT. LTD. (U802-2K-06), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102
PH :01681-247666.

JULANA

457. EAKANSH MOTORS PVT. LTD. (MA01-MA-01), JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101
PH :8395906111.

KAITHAL

458. EAKANSH MOTORS PVT. LTD. (U802-U8-01), AMBALA ROAD, NH-65, KAITHAL - 136027
PH :01746-225959, 229100, 309330.

KALKA

459. MODERN AUTOMOBILES (EG02-EG-01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302
PH :0173-224999/220555.

KARNAL

460. KARNAL MOTORS (8906-89-01), 71/3 MILESTONE ,G.T.ROAD, KARNAL - 132001
PH :0184-255555, 274387.
461. KARNAL MOTORS (8906-89-02), OPP. BUS STAND, AMBALA CHANDIGARH HIGHWAY, KARNAL - 132001
PH :0184-2274287.
462. MODERN AUTOMOBILES (8907-89-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL - 132001
PH :0184-2272503.

KHARKHODA

463. JAGMOHAN AUTOMOTIVES PVT. LTD. (BU02-BU-01), NEAR KANYA GURUKUL MAHAVIDYALYA, DELHI ROAD, NEAR UNION BANK, KHARKHODA (HARYANA) - 131402
PH :0130-2584111.

KOSLI

464. DINCO 4 WHEELS LLP (AUTO VIBES) (CAN1-CAN-01), OPPOSITE RAJIV GANDHI STADIUM, TEHSIL ROAD KOSLI, DISTRICT – REWARI, HARYANA . - 123302
PH :7082100202.

KUND

465. DINCO 4 WHEELS LLP (AUTO VIBES) (CJL1-CJL-01), NEAR KUND BARRIER, OPP. SBI BANK, NARNAUL ROAD, VILLAGE - MANETHI, KUND, DISTRICT - REWARI, HARYANA . - 123102
PH :7082100204, 9215164549.

KUNDLI

466. JAGMOHAN AUTOMOTIVES PVT. LTD. (GU03-GU-01), OPP. TDI OFFICE, DELHI KUNDALI BORDER, GT KARNAL ROAD SONEPAT - 131001
PH :0130-8059900535.

KURUKSHETRA

467. KARNAL MOTORS (8906-U6-03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA
PH :01744-232827.

LADWA

468. KARNAL MOTORS PVT. LTD. (CRA1-CRA-01), KHEWAT NO.197, KHATONI NO.233, KHASRA NO.27/17/1,27/14, LADWA-KURUKSHETRA ROAD, VILLAGE - LADWA, TEHSIL THANESAR, DISTT. KURUKSHETRA - 136132
PH :8529555554.

MADLAUDA

469. HARISONS AUTOMOBILES (CFK1-CFK-01), ASANDH ROAD, VILLAGE - MADLAUDA, TEHSIL - MADLAUDA, DISTRICT – PANIPAT. - 132113
PH :0180-2667788.

MANDI DABWALI

470. SHAKTI MOTORS PVT.LTD. (E401-KU-02), SANGARIA ROAD, DABWALI, DISTT.-SIRSA - 125104
PH :01668-229988,229966
9896023577.

MANESAR

471. PLATINUM MOTOCORP LLP (2L04-2L-01), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON. - 122052
PH :0124-2656500.

MEHAM

472. JAGMOHAN MOTORS (A601-NZ-08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101
PH :9992100310.

NARAINGARH

473. EAKANSH WHEELS (1802-CV-02), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203
PH :1734-285500.

NARNAUL

474. PLATINUM MOTOCORP LLP (9Q02-9Q-01), KAILASH NAGAR, REWARI ROAD, NARNAUL, HARYANA,
PH :9205192661.

NARWANA

475. EAKANSH MOTORS PVT. LTD. (U802-CW-03), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116
PH :01684-9813583100.

PALWAL

476. ROHAN MOTORS LTD. (EE01-EE-01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101
PH :1275-304100.

PANCHKULA

477. MODERN AUTOMOBILES (0702-K3-03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113
PH :0172-2594200.
478. AUTOPACE NETWORK PVT. LTD (0705-K3-03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. - 134113
PH :9878427062.

PANIPAT

479. HARISONS AUTOMOBILES (D301-D3-01), G.T.ROAD , PANIPATHARYANA - 132103
PH :01742-67292, 67225, 67782.
480. HARISONS AUTOMOBILES (D301-D3-03), NEAR JATAL ROAD, OLD CANAL, PANIPAT - 132103
PH :01802688088, 01804091801.
481. HARISONS AUTOMOBILES (D301-D3-04), PLOT NO.23, SECTOR-25, PHASE-1, PART-1, PANIPAT (HARYANA). - 132103
PH :0180-2667799,2667788.
482. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (D302-D3-01), KHASRA NO. 43/6, 44/9 & 10, VILLAGE – JATTIPUR, NEAR HOTEL SWARNA MAHAL, NH-1, PANIPAT, HARYANA.
PH :9053400551.

PATAUDI

483. PLATINUM MOTOCORP LLP (BY03-BY-01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503
PH :0124-2672100.

PEHOWA

484. KARNAL MOTORS (8906-2M-06), NEAR SHARMA SERVICE STATION, KURUKSHETRA ROAD, PEHOWA - 136128
PH :01741220911
9996038881.

PUNDRI

485. EAKANSH MOTORS PVT. LTD. (BFF1-BFF-01), KILA NO- 3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026
PH :8395906111.

RADAUR

486. PANDIT AUTOMOBILES PVT.LTD. (D201-EN-02), OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA - 135001
PH :01732-283165, 9812455884.

REWARI

487. DINCO 4 WHEELS LLP (AUTO VIBES) (U102-U1-01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA)) - 123401
PH :1274-261347.

ROHTAK

488. JAGMOHAN MOTORS (A601-A6-01), SONEPAT ROAD, ROHTAK - 124001
PH :01262-55002-5.

489. JAGMOHAN MOTORS (A601-A6-09), SWAN GARDEN, DELHI ROAD, ROHTAK - 124001
PH :9812000357.

SAFFIDON

490. EAKANSH MOTORS PVT. LTD. (U802-JU-05), NEAR BRSK SCHOOL , OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT- JIND - 126112
PH :9896155345.

SALAHAWAS

491. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (BEQ1-BEQ-01), KHATA NO. 550, KHASRA NO. 62/17/2(4-4) 18/2(4-9) 19/1/1(3-1), JHAJJAR-KOSLI ROAD (VIA MATANHEL), NEAR BDPO OFFICE VPO & TEHSIL – SALAHAWAS, DISTRICT – JHAJJAR, HARYANA, - 124146
PH :9467165111.

SAMALKHA

492. HARISONS AUTOMOBILES (D301-LY-02), INDUSTRIAL AREA, GT ROAD, SAMALKHA, DISTT. PANIPAT, HARYANA - 132101
PH :8607000122.

SAMPLA

493. JAGMOHAN MOTORS PVT. LTD. (NY01-NY-01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501
PH :9812000351.

SHAHABAD

494. KARNAL MOTORS PVT. LTD. (CCR1-CCR-01), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST.- KURUKSHETRA. - 136135
PH :9996206000.

SIRSA

495. SHAKTI MOTORS PVT.LTD. (E401-E4-01), DABBALI RD., SIRSA, HARYANA - 125055
PH :01666-30168.

SOHNA

496. PASCO AUTOMOBILES (9506-KZ-03), DAMDAMA MORE, GURGAON -SOHNA ROAD, SOHNA, HARYANA, - 122103
PH :0124-4952001.

SONEPAT

497. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-02), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001
PH :9812615000.

SONIPAT

498. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001
PH :01264-230114, 236106-07.

TAURU

499. PASCO AUTOMOBILES (BIV1-BIV-01), KILA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA. - 122015
PH :8683000902, 9873001497.

TOHANA

500. SHAKTI MOTORS PVT.LTD. (XP01-XP-01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120
PH :01692-220099,220199.

TOSHAM

501. JAGMOHAN MOTORS LTD. (0Y01-0Y-01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040
PH :01253-8059900566.

YAMUNANAGAR

502. PANDIT AUTOMOBILES PVT.LTD. (D201-D2-01), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR - 135001
PH :01732-30099.

503. PANDIT AUTOMOBILES PVT.LTD. (D201-D2-03), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001
PH :9996426004.

HIMACHAL PRADESH

BADDI

504. GOYAL MOTORS PVT. LTD. (7D01-CIF-04), KHATA/KHATAUNI NO. 26/26, KHASRA NO. 93/56/32 AND 94/56/32, KITAS 2, REVENUE MAUZA – CHAK JANGI, HADBAST NO. 203, TEHSIL – BADDI, DISTRICT – SOLAN, HIMACHAL PRADESH. - 173205
PH :9418076972.

BAIJNATH

505. KANGRA VEHICLEADES (BBC1-BBC-01), TASHI JONG, PAPROLA-BAIJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAIJNATH, DISTT. KANGRA - 176115
PH :01892-251379.

BANIKHET

506. PATHANKOT VEHICLEADES PVT. LTD. (BWN1-BWN-01), KHASRA NO.709, KHATA KHATOONI NO.23, BANIKHET, THE-DALHOUSIE, DISTT. CHAMBA - 176303
PH :01899-254186, 232036, 9418048803.

BILASPUR

507. COMPETENT AUTOMOBILES CO. LTD. (6Y01-6Y-01), KHEWAT NO. 8/8 KHATAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. – CHANDPUR, TEHSIL – SADAR, DIST.- BILASPUR, HIMACHAL PRADESH. - 174001
PH :1978-7807166832, 7807800330 / 7807800440.

CHAMBA

508. KANGRA VEHICLEADES (D902-JF-03), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310
PH :01899222086 ,
9418059252.

509. KANGRA VEHICLEADES PVT. LTD. (D902-JF-05), KHASRA NO. 88/96,1 & KHASRA NO.628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310
PH :9988717437.

DEHRA

510. KANGRA VEHICLEADES (D902-HT-02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA - 177101
PH :01970-234477.

GAGGAL

511. KANGRA VEHICLEADES (BBV1-BBV-01), NATIONAL HIGHWAY -20 , ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA , HIMACHAL PRADESH - 176209
PH :9857645440.

HAMIRPUR

512. COMPETENT AUTOMOBILES CO LTD (W901-W9-01), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT, HAMIRPUR - 177401
PH :01972-256281-84.

INDORA

513. PATHANKOT VEHICLEADES PVT. LTD. (BHE1-BHE-01), VILLAGE CHANDOR, PO & TEHSIL INDORA, DISTT. KANGRA, PIN-176401, HIMACHAL PRADESH - 176401
PH :9418008627.

JAISINGHPUR

514. KANGRA VEHICLEADES (BVA1-BVA-01), HARSI PATTAN ROAD, OPP. SABJI MANDI, TEHSIL – JAISINGHPUR, DIST. – KANGRA, HIMACHAL PRADESH. - 176095
PH :9418477756.

JOGINDER NAGAR

515. COMPETENT AUTOMOBILES CO. LTD. (BBO1-BBO-01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015
PH :1692-9418263465.

KULLU

516. COMPETENT AUTOMOBILES (2Q01-2Q-01), OPPOSITE S.S.B. TRAINING CENTRE, SHAMSHI, KULLU - 175126
PH :1902-260665, 9625797817.

KUNIHAR

517. GOYAL MOTORS PVT. LTD. (BBX1-BBX-01), KHATA NO. – 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSHIL – ARKI, DISTRICT – SOLAN, HIMACHAL PRADESH - 173207
PH :9818138772.

MANALI

518. COMPETENT AUTOMOBILES CO. LTD. (BKU1-BKU-01), VILL. CHOURI VIHAR (AALU GROUND), P.O. & THESIL- MANALI, DIST. KULLU, (H.P.) - 175131
PH :1902-9418387465.

MANDI

519. COMPETENT AUTOMOBILES CO. LTD. (B301-B3-01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI - 124501
PH :01905-23865.

NADAUN

520. COMPETENT AUTOMOBILES CO. LTD. (BXA1-BXA-01), VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041
PH :01972-232865.

NAGROTA

521. KANGRA VEHICLEADES (D902-D9-01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047
PH :01892-251379, 251387.

NAGROTA BAGWAN

522. KANGRA VEHICLEADES PVT. LTD. (D902-D9-06), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047
PH :01892-251379, 251387.

NAGROTA SURIAN

523. KANGRA VEHICLEADES (BGI1-BGI-01), KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA NO. 2037, MAHAL BASSA, SUB TEHSIL – NAGROTA SURIAN, DISTRICT – KANGRA.
PH :9418488999.

NALAGARH

524. GOYAL MOTORS (IB02-IB-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) - 174101
PH :9418069672.

NERWA

525. GOYAL MOTORS (CRS1-CRS-01), KHASRA NO. 482, VILLAGE – KEDI, TEHSIL – NERWA, DISTRICT – SHIMLA, HIMACHAL PRADESH. - 171210
PH :9418213972.

NURPUR

526. KANGRA VEHICLEADES (D902-JG-04), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201
PH :01893-226789, 226333.

PALAMPUR

527. KANGRA VEHICLEADES (2T01-2T-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061
PH :1894-236227.

PAONTA SAHIB

528. GOYAL MOTORS PVT. LTD. (A901-8G-02), OPP BIBIJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR , NH-72, PAONTA SAHIB - 173025
PH :9418061728.

RAJGARH

529. GOYAL MOTORS PVT. LTD. (BJX1-BJX-01), KHATA NO. 517/505, 478/3, KHASRA NO. – 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL – RAJGARH, DISTRICT – SIRMAUR , HIMACHAL PRADESH - 173101
PH :9818138772.

RAMPUR

530. GOYAL MOTORS PVT. LTD. (CEZ1-CEZ-01), KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL – RAMPUR, DISTRICT – SHIMLA. - 172001
PH :94183245752.

ROHRU

531. GOYAL MOTORS (JZ01-JZ-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207
PH :9418018472.

SHIMLA

532. GOYAL MOTORS PVT. LTD. (A901-A9-01), TARADEVI, SHIMLA,(H.P.) - 171010
PH :0177-231872.

SOLAN

533. GOYAL MOTORS PVT. LTD. (7D01-7D-01), DEON GHAT, SOLAN - 173211
PH :01792-220472.

UNA

534. COMPETENT AUTOMOBILES (QD01-QD-01), VILLAGE RAINSARY,P.O JHALERA,TEHSIL & DISTRICT:UNA - 174303
PH :1972-256281-84.

JAMMU & KASHMIR

AKHNOOR

535. JAMMU MOTORS (2X02-2X-01), MAIN ROAD DASKAL, TEHSIL – AKHNOOR, DISTRICT - JAMMU - 181201
PH :1924-252021, 9419109162.

ANANTNAG

536. PEAKS AUTO PVT. LTD. (2Y01-2Y-01), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG - 228165
PH :1932-228165.

BANDIPORA

537. JAMKASH VEHICLEADES (KASHMIR) PVT. LTD. (1205-OA-04), AJAR BANDIPORA , J&K - 193502
PH :01957-225185.

BARAMULA

538. JAMKASH VEHICLEADS(KASHMIR)PVT. LTD. (8C01-8C-01), VILLAGE SANGRAMA,WAGAROO, BARAMULA - 193101
PH :0194-2138951.

BHADRAWAH

539. J&K VEHICLEADES PVT. LTD. (AKA1-AKA-01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K - 182222
PH :9419796821.

DAYALACHAK

540. JAMKASH VEHICLEADES PVT. LTD. (BFH1-BFH-01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK,TEHSIL & DISTT. KATHUA , JAMMU & KASHMIR - 184121
PH :7051292915, 9888370650.

DODA

541. J & K VEHICLEADES PVT. LTD (2Z02-2Z-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202
PH :01996233146.

GANDERBAL

542. JAMKASH VEHICLEADES (KASHMIR) PVT. LTD. (ZA01-ZA-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201
PH :0194-2416156.

GURHA KALYAL (PHINTER)

543. JAMKASH VEHICLEADES PVT. LTD. (BHV1-BHV-01), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. - 184203
PH :9419187583.

HANDWARA

544. JAMKASH VEHICLEADES (KASHMIR) PVT. LTD. (BYA1-BYA-01), KHEWAT NO-31, KHATTA NO-298, SURVEY NO- 3764/1816, MOZA BRARIPORA, TEH- HANDWARA, DIST-KUPWARA, J&K - 193221
PH :01955-262322, 9419074012.

JAMMU

545. JAMKASH VEHICLEADES PVT LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015
PH :0191-466681, 464304, 308.

546. JAMKASH VEHICLEADES PVT LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001
PH :0191-2576235, 2543935, 2520323.

547. JAMKASH VEHICLEADES PVT LTD (3306-33-04), SUNJWAN, DISTT. JAMMU - 180011
PH :0191-2468504.

548. PEAKS AUTO JAMMU PVT. LTD. (3312-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010
PH :0191-2484813.

549. JAMMU MOTORS PVT. LTD (3308-33-01), 6, AKHNOOR ROAD, JAMMU. - 180001
PH :0191-2504746, 2552977, 2505183.

550. JAMMU MOTORS PVT. LTD (3308-33-02), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002
PH :0191-2504746, 2552977, 2505183.

551. PEAKS AUTO JAMMU PVT. LTD. (3312-33-02), KHASRA NO.425 & 426, KHATA NO.425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001
PH :0191-2484813, 9596620057.

KATHUA

552. JAMMU MOTORS PVT. LTD. (3B02-3B-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH1-A, KATHUA TEHSIL KATHUA - 184101
PH :7837613036.

KULGAM

553. PEAKS AUTO PVT. LTD. (OY01-OY-01), NEAR GRID STATION,MAIN ROAD, KULGAM - 191202
PH :1931-260030.

KUPWARA

554. JAMKASH VEHICLEADS(KASHMIR)PVT. LTD. (1205-AX-03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223
PH :01955-253322.

LEH

555. DRUK AUTOZONE (9S01-9S-01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH - 194101
PH :01982-250005.

POONCH

556. JAMKASH VEHICLEADES PVT LTD (AAW1-AAW-01), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121
PH :1965-222972.

PULWAMA

557. PEAKS AUTO PVT. LTD. (1204-MU-03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301
PH :01933-240226.

RAJOURI

558. JAMKASH VEHICLEADES PVT LTD (3306-KS-06), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI - 185131
PH :01962-264973.

RS PURA

559. JAMKASH VEHICLEADES PVT LTD (3306-JN-03), GAGAIN MORTH, R S PURA, JAMMU, - 181102
PH :01923-251951.

SHOPIAN

560. PEAKS AUTO PVT. LTD. (AAA1-AAA-01), AGLAR SOFANAMAN, SHOPIAN - 192303
PH :0194-24666067.

SIDHRA

561. JAMKASH VEHICLEADES PVT LTD (CDL1-CDL-01), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMU - 180019
PH :0191-2662024, 2662025, 2576235.

SRINAGAR

562. HIGHLAND AUTOMOBILES PVT.LTD (1202-12-01), SONWAR, SRINAGAR - 190001
PH :0194-452579, 479928.

563. JAMKASH VEHICLEADS(KASHMIR)PVT. LTD. (1205-12-01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015
PH :0194-2435576.
564. PEAKS AUTO PVT. LTD. (1204-12-01), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101
PH :0194-2130261.
565. JAMKASH VEHICLEADS(KASHMIR)PVT. LTD. (1205-12-05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017
PH :01951-260308, 260309, 9419003372.

SUNDERBANI

566. PEAKS AUTO JAMMU PVT. LTD. (AAM3-AAM-01), MOUZA THANDA PANI, TEH. SUNDERBANI - 185153
PH :1960-233119.

SURANKOTE

567. PEAKS AUTO JAMMU PVT. LTD. (TY03-TY-01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101
PH :9018331442.

UDHAMPUR

568. J & K VEHICLEADES PVT. LTD. (D801-D8-01), NATIONAL HIGHWAY 1A, NEAR DAK BANGLOW, UDHAMPUR - 182101
PH :01992-76266.

URI

569. JAMKASH VEHICLEADES PVT. LTD. (CCK1-CCK-01), KHASRA NO.346/118, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT. BARAMULLA - 193123
PH :9419074012.

JHARKHAND

BAGODAR

570. RELIABLE INDUSTRIES PVT. LTD. (BHA1-BHA-01), SONTURPI, GT ROAD, GAIDA, BAGODAR, GIRIDIH, JHARKHAND. - 825322
PH :9835830202.

BOKARO

571. HINDUSTAN AUTO AGENCY (B501-B5-02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004
PH :06542-233690/ 9263631315.
572. HINDUSTAN AUTO AGENCY (B501-B5-03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) - 827004
PH :9204796107.

CHAIBASA

573. PEBCO MOTORS (BOY1-BOY-01), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT – WEST SINGHDHUM, JHARKHAND. - 833201
PH :9386369716.

CHIRKUNDA

574. RELIABLE INDUSTRIES (CQT1-CQT-01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. – CHIRKUNDA, DISTRICT – DHANBAD, JHARKHAND. - 828202
PH :9835830202.

DALTONGANJ

575. PREMSONS MOTORS UDYOG PVT LTD (5103-MP-02), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101
PH :06562-9386768344.

DEOGHAR

576. RELIABLE INDUSTRIES (5202-KR-03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, - 814112
PH :06432-9431125332.

DHANBAD

577. RELIABLE INDUSTRIES (5202-52-01), KATRAS ROAD, DHANBAD, JHARKHAND. - 826001
PH :0326-301507, 301508,9431125332.
578. RELIABLE INDUSTRIES (5202-52-02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G. ASHRAM, SARAIDHELA , DHANBAD - 828127
PH :326-8986749072.
579. RELIABLE INDUSTRIES (5202-52-06), SUGIADIH, HIRAK ROAD, SARAIDHELA, DHANBAD, JHARKHAND. - 828127
PH :9835830202.

DUMKA

580. RELIABLE INDUSTRIES (L701-L7-01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA (JHARKHAND) - 814101
PH :9708555924.

GARHWA

581. PREMSONS MOTOR UDYOG PVT. LTD. (VX01-VX-01), KHATA NO. 4, KHESRA NO. 108, 109, THANA NO. 342, PIPRAKALA, GARHWA, JHARKHAND. - 822114
PH :9065524040.

GHATSHILA

582. PEBCO MOTORS LTD. (AIA1-AIA-01), PLOT NO. 68, KHASRA NO.128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK,GHATSHILA, EAST SINGHBHUM (JHARKHAND) - 832303
PH :06585-9308433388.

GIRIDIH

583. RELIABLE INDUSTRIES (5202-3D-04), MOHANPUR, PACHAMBA ROAD, GIRIDIH. - 815301
PH :06532-222969/ 9934205123.

GODDA

584. RELIABLE INDUSTRIES (5202-EJ-05), ASANBANI CHOWK, MAIN ROAD, GODDA. - 814133
PH :9431121479.

GUMLA

585. PREMSONS MOTOR UDYOG PVT. LTD. (5103-2O-04), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207
PH :06524-221117.

HAZARIBAGH

586. HINDUSTAN AUTO AGENCY (Y901-Y9-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301
PH :9263631324.
587. HINDUSTAN AUTO AGENCY (Y901-Y9-02), PLOT NO. 233 AND 234, MORANGI, THANA - MUFFASSIL NO. 257, HAZARIBAGH, JHARKHAND. - 825301
PH :9263631327, 9031098015.

JAMSHEDPUR

588. MOTOR WORLD (3102-31-01), N.H-33, NEAR PARDIH CHOWK, MANGO, JAMSHEDPUR - 831012
PH :0657-2360346, 2360347.
589. PEBCO MOTORS LTD. (3101-31-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001
PH :0657-409106, 107.
590. PEBCO MOTORS LTD. (3101-31-02), 16 BALICHALA, CONTRACTORS & GODOWN AREA, SONARI, JAMSHEDPUR - 831011
PH :9308433388.

JAMTARA

591. RELIABLE INDUSTRIES (BOX1-BOX-01), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351
PH :9835814404.

KHELARI

592. SUDHA BUSINESSS ENTERPRISES PVT. LTD. (CFO1-CFO-01), PLOT 113, MOUZA- BUKBUKA, BESIDE PAHADI MANDIR, KHELARI, RANCHI - 829205
PH :0651-6458222, 9534199997.

KODARMA

593. HINDUSTAN AUTO AGENCY (VR01-VR-01), AT LALMAN DIGTHU, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILAIYA, P.S. – TILAIYA, DISTRICT – KODERMA, JHARKHAND. - 825409
PH :7004286238.

RAMGARH

594. HINDUSTAN AUTO AGENCY (AV01-AV-01), MARAR, RANCHI ROAD (NH-33), RAMGARH - 829122
PH :9263631320.

RANCHI

595. PREMSONS MOTORS UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI. - 834008
PH :0651-2231686, 9304807349.
596. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-03), 10/P, NAMKUM INDUSTRIAL ESTATE,BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010
PH :0651-3210400, 3190400/9304807354.
597. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-05), PLOT NO.31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003
PH :0651-6560180.
598. SUDHA BUSINESS ENTERPRISES PVT. LTD. (5107-51-02), PLOT NO. 74, OPPOSITE OTC GROUND, HEHAL, RATU ROAD, RANCHI, JHARKHAND - 834005
PH :9534199997.
599. SUDHA BUSINESS ENTERPRISES PVT. LTD. (5107-51-03), PLOT NO. 39, NEAR BOOTY MORE, RANCHI-RAMGARH ROAD, RANCHI. - 835217
PH :9534199997.
600. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-06), PLOT NO.14 (P) KOKAR INDUSTRIAL AREA KOKAR, RANCHI. - 834001
PH :9835507004.

KARAIKAL

KARAIKAL

601. SHENBAKA CARS PVT. LTD. (CCF1-CCF-01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL. - 609602
PH :4368-227800/1/2.

KARNATAKA

ANEKAL

602. PRATHAM MOTORS (0205-FA-04), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106
PH :080-9343222764.

DEALER WORKSHOP (AS ON 20.07.2018)

ANKOLA

603. BHARATH AUTO CARS PVT LTD (FC02-FC-01), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT - 581314
PH :08388-231330.

ATHANI

604. SHANTESHA MOTORS (BWA1-BWA-01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304
PH :8289-8884472587, 9538715071.

ATHRADI

605. ABHARAN MOTORS (G601-UK-04), HERABETTU ROAD ATHARDI UDUPI - 576107
PH :0820-6452061/2/3/4.

ATTIBELE

606. SURAKSHAA CAR CARE PVT. LTD. (BMM1-BMM-01), SURVEY NO.22/7/8, SARJAPUR MAIN ROAD, INDIABELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE. - 562107
PH :9449865665.

BAGALKOT

607. VIJAY MOTOWINGS (ZL01-ZL-01), 180/4-2,BELGUM RAICHUR ROAD,NEAR APMC MARKET YARD, BAGALKOT - 587103
PH :08354-2001193/94.

BANGALORE

608. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-01), 60/2, MAHADEVPURA, WHITE FIELD ROAD, BANGALORE - 560048
PH :080-30583361/2/3.

609. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078
PH :080-30482295/6/3/1.

610. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-03), NO.7/1, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IIMB POST, BANNERGHATTA RD. , BANGALORE - 560076
PH :080-30280511/12.

611. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE - 560038
PH :080-30584638/41/42, 9845026252.

612. BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-01), NO.- 60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064
PH :080-30088801-09.

613. GARUDA AUTOCRAFT PVT LTD (0212-02-01), SURVEY NO. 13, 11TH KM., KANAKPURA ROAD, BANGALORE - 560062
PH :080-26322500/2/3.

614. GARUDA AUTOCRAFT PVT LTD (0212-02-02), 119/1, 11TH CROSS,MALLESHWARAM,BANGALORE, - 560003
PH :080-23460136/140/142.

615. KALYANI MOTORS (P) LTD (0211-02-01), MYSORE ROAD,PANTHARAPALYA,KENGRI HOBLI,BANGALORE - 583201
PH :080-28606004/05/06/07.

616. MANDOVI MOTORS PVT LTD (0201-02-01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027
PH :080-22233763.

617. MANDOVI MOTORS PVT LTD (0201-02-05), NO.2/106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN. VIJAYANAGAR,BANGALORE - 560079
PH :080-23400685.

618. MANDOVI MOTORS PVT LTD (0201-02-07), 17/A-2&3 IND.SUBURB.IIND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD. YESWANTHPUR, BANGALORE - 560022
PH :080-23374130.

619. MANDOVI MOTORS PVT LTD (0201-02-08), NO. 70 SARAKKI INDUSTRIAL LAYOUT,J.P NAGAR,3RD PHASE, BANGALORE - 560078
PH :080-26589945 /26584363.

620. MANDOVI MOTORS PVT LTD (0201-02-0C), NO 1 TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR - 560044
PH :080-23158777/23159777.

621. MANDOVI MOTORS PVT LTD (0201-02-0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043
PH :080-25445560/61.

622. PRATHAM MOTORS (0205-02-01), 16, BALLANDUR, SARJAPUR RING ROAD, BANGALORE - 560037
PH :080-41262929.

623. PRATHAM MOTORS (0205-02-02), STHANIKAM'S ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE - 560010
PH :080-30141800.

624. PRATHAM MOTORS (0205-02-03), NO. 319 -324 ,QUEENS ROAD CROSS, BANGALORE. - 560001
PH :080-30741700.

625. RNS MOTORS (7301-02-03), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTPUR, BANGALORE - 560022
PH :080-23474354-58.

626. RNS MOTORS (7301-02-04), HOSUR ROAD,BOMMANAHALLI,MADIVALA POST,BANGALORE - 560068
PH :080-24115901.

627. RNS MOTORS (7301-02-06), TUMKUR ROAD, NH-4, YESHWANTPUR, BANGALORE - 560022
PH :0836-43479803-15 /14.

628. SAGAR AUTOMOBILES (0203-02-01), 39/2 BANNERGHATTA ROAD,BYRASANDRA,BANGALORE - 560029
PH :080-30426063/2.

629. SAGAR AUTOMOBILES (0203-02-02), 28/1 KANAKPURA ROAD,BASANAVAGUDI,BANGALORE - 560004
PH :080-41204666.

630. SURAKSHAA CAR CARE PVT LTD (0280-02-01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE
PH :080-28522222/3/4.

631. MANDOVI MOTORS PVT LTD (0201-02-0E), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA. - 560102
PH :080-25747764/76/62/63/64.

632. MANDOVI MOTORS PVT LTD (0201-02-9B), PLOT NO.-257/1-13, BANNERGHATTA ROAD, N.S. PALYA, BANGALORE - 560076
PH :080-26681323,26589945.

633. KALYANI MOTORS (0213-02-02), SY. NO.:58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE. - 560049
PH :080-33235000.

634. KALYANI MOTORS PVT. LTD. (0213-02-03), NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU. - 574239
PH :080-40419000.

635. SURAKSHAA CAR CARE PVT. LTD. (0280-02-02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068
PH :080-25732018.

636. KALYANI MOTORS PVT. LTD. (0213-02-04), 250/1,BILEKAHALLI, BANNERGHATTA ROAD, BENGALURUE - 560076
PH :080-803041911.

637. SURAKSHAA CAR CARE PVT. LTD. (0280-02-03), NO.64, POTHALAPPA GARDEN, LASHKAR BUILDING, HOSUR ROAD, ADUGODI, BANGALORE. - 560030
PH :08153-290299.

638. BIMAL AUTO AGENCY (0218-02-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE - 560058
PH :9945237213.

639. RNS MOTORS (7301-02-0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092
PH :080-23534286.

640. PRATHAM MOTORS (0205-02-05), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034
PH :080-30712020.

641. RNS MOTORS LIMITED (7301-02-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158
PH :080-43110200.

642. GARUDA AUTOCRAFT PVT LTD (0212-02-03), 10/1, HEBBAL , AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024
PH :080-23621332.

643. BIMAL AUTO AGENCY INDIA PVT. LTD. (0286-02-01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE - 560066
PH :080-30693069.

644. SURAKSHAA CAR CARE PVT. LTD. (0280-02-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034
PH :080-25529009/10/01.

645. KALYANI MOTORS PVT LTD. (0287-02-01), # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056
PH :080-30036333.

646. MANDOVI MOTORS PVT LTD (0201-02-0G), NO. 42/2, CENTRAL STREET, NEXT TO SANGEETH THEATRE, SHIVAJI NAGAR, BANGALORE, KARNATAKA - 560003
PH :9731407344.

647. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033
PH :080-41143168.

648. MANDOVI MOTORS PVT LTD (0201-02-0H), BBMP NO.4C, WARD NO.83, JOLLY ESTATE, OLD MADRAS ROAD, NAGAWARAPALYA, BANGALORE - 560093
PH :080-25341144/77.

649. VARUN MOTORS PVT. LTD. (0292-02-01), HNO. 72/19-6 & HNO. 67/2, YESHWANTPUR INDUSTRIAL SUBURB, WARD NO. 10, RAJAJI NAGAR, BANGALORE. - 560022
PH :080-23085555, 7337834600.

650. KALYANI MOTORS PVT. LTD. (0213-02-05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. - 560043
PH :080-9900599946.
651. KATARIA AUTOMOBILES PVT. LTD. (0294-02-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST – AADUGODI, BANGALORE. - 560030
PH :080-7337880450, 9998086020.
652. MANDOVI MOTORS PVT. LTD. (0201-02-0I), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASPURA, KENGERI HOBLLI, UTTARAHALLI, BANGALORE - 560060
PH :9945235516.
653. VARUN MOTORS PVT. LTD. (0292-02-02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. - 560073
PH :22160606, 7338286729.
654. MANDOVI MOTORS PVT. LTD. (0201-02-0J), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKRISHNAN ROAD, VIDYARANYAPURA, BANGALORE. - 560097
PH :9945235514.
655. KATARIA AUTOMOBILES PVT. LTD. (0293-02-01), SURVEY NO. 8/3, 10/4, 10/2, VILLAGE – THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA.
PH :8884434340.
656. RNS MOTORS LIMITED (7301-02-0J), SY. NO. 11/2 & 12/1, VILLAGE – ARAKERE, BEGUR HOBLI, BANNERGHATTA ROAD, BANGALORE – 560 076. - 560076
PH :9538965601.
657. SURAKSHAA CAR CARE PVT. LTD. (0280-02-05), SURVEY NO.2/6, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE. - 560100
PH :080-8884471200.

BANGARPET

658. SURAKSHA CAR CARE PVT. LTD. (OR04-OR-01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114
PH :082153-290299.

BANTWAL

659. MANDOVI MOTORS PVT LTD (TR01-TR-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARANATAKA - 574231
PH :080-2410123.

BELGAUM

660. SHANTESHA MOTOR (P) LTD (E801-E8-01), MUJAWAR COMPOUND,NEHRU NAGAR,BELGAUM, - 590010
PH :0831-2473308/4204523/2476162.
661. SHANTESHA MOTOR (P) LTD (E801-E8-03), CTS NO. 519, 520, BESIDE PARATA CORNER,CONGRESS ROAD, TILAKWADI, BELGAUM - 590006
PH :0831-2470871.
662. SHANTESHA MOTOR (P) LTD (E801-E8-04), PLOT NO. 8, SURVEY NO. 251/51, HAVLOCK ROAD CAMP, BELGAUM - 290010
PH :0831-2425001/2.

BELLARY

663. K P F PVT. LTD (G201-G2-01), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101
PH :08392-237666/685.
664. K P F PVT. LTD (G201-G2-03), 1ST CROSS, OPP. WOMAN'S COLLEGE, BESIDE CS MULTI SPECIALITY HOSPITAL, BELLARY. - 583103
PH :08392-258900.

BELTHANGADY

665. BHARATH AUTO CARS PVT LTD (4503-HM-04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214
PH :08256-234130.

BHATKAL

666. BHARATH AUTO CARS PVT LTD (CEF1-CEF-01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320
PH :8382-9448979530.

BIDAR

667. LAHOTI MOTORS PVT. LTD. (EX01-EX-01), SI 50/51,PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402
PH :08482-232975.

BIJAPUR

668. RNS MOTORS (7301-T7-0I), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109
PH :08352-242821.

BYNDOOR

669. ABHARAN MOTORS PVT. LTD. (BUH1-BUH-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214
PH :08254-7899751777.

CHALLAKERE

670. SAKETH AUTOMOBILES (CKN1-CKN-01), SITE NO. 9 & 10, SY. NO. 96/1, OPP. SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE. - 577522
PH :9686550126.

CHAMRAJ NAGAR

671. MANDOVI MOTORS PVT. LTD. (0E01-0E-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313
PH :08226-222857/858.

CHANNAGIRI

672. SHRUTI MOTORS (BUQ1-BUQ-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213
PH :08189-7899934143.

CHANNAPATNA

673. KALYANI MOTORS PVT LTD (BSX1-BSX-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160
PH :080-28078999.

CHANNARAYAPATNA

674. VENKAT MOTORS (HC01-HC-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA. - 573116
PH :08172- 256622, 09844377477.

CHICKBALLAPUR

675. BIMAL AUTO AGENCY INDIA PVT. LTD. (KJ02-KJ-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101
PH :08156-300500/02/1.

CHIKMANGALORE

676. SHRUTI MOTORS (B701-3F-02), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102
PH :08262-221183;221184.

CHIKODI

677. SHANTESHA MOTORS (E801-ZB-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201
PH :08338-273120,272744.

CHINTAMANI

678. PRATHAM MOTORS PVT. LTD (0205-BQ-06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125
PH :7899761301.

CHITRADURGA

679. SAKETH AUTOMOBILES (AL01-AL-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130
PH :08132-221414.

DAVANGERE

680. SHRUTI MOTORS (S101-S1-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004
PH :08192-9663377655.

DEVANAHALLI

681. BIMAL AUTO AGENCY INDIA PVT LTD (WH01-WH-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: - 562110
PH :080-27681778.

DHARWAD

682. REVANKAR MOTORS PVT. LTD. (BIX1-BIX-01), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYDAPUR VILLAGE, DHARWAD, KARNATAKA - 580001
PH :0836-2444666.

DODDABALLAPUR

683. PRATHAM MOTORS PVT. LTD. (BUA1-BUA-01), PLOT NO. 50, OBADENAHALLI INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALLI GUDDADAHALLI, KASABA HOBLI TALUK – DODDABALLAPUR, DISTRICT – BENGALURU RURAL.
PH :9108142626.

GADAG

684. RNS MOTORS (7301-RK-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG - 582103
PH :08372-230072,230076.

GANGAWATHI

685. MUNEER CARS (N701-KA-03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, - 583227
PH :08533-270055.

GAURIBIDANUR

686. MANDOVI MOTORS PVT LTD (BUY1-BUY-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210
PH :9945235531.

GOKAK

687. SHANTESHA MOTORS PVT. LTD. (IR01-IR-01), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307
PH :08332-226006.

GONIKOPPAL

DEALER WORKSHOP (AS ON 20.07.2018)

688. MANDOVI MOTORS PVT LTD (2501-U3-07), KAIKERY VILLAGE,GONIKOPPAL,, - 571213
PH :08274-279801.

GULBARGA

689. LAHOTI MOTORS (E902-E9-01), LAHOTI GARDENS,NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104
PH :08472-258142.

GUNDLUPET

690. FRIENDLY MOTORS (INDIA) PVT. LTD. (BPU1-BPU-01), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/ N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111
PH :9741785588.

HAGARIBOMMANAHALLI

691. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT. LTD.) (BUX1-BUX-01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.:3, HAGARIBOMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212
PH :08394-266227.

HASSAN

692. VENKAT MOTORS (C802-C8-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201
PH :08172-243405/404.

HAVERI

693. REVANKAR MOTORS PVT LTD (BBM1-BBM-01), NEAR TMAE SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110
PH :08375-235900.

H-CROSS

694. BIMAL AUTO AGENCY INDIA PVT LTD (CRQ1-CRQ-01), PART NO.1, SITE NO.36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122
PH :9008788332.

HEGGADADEVANA KOTE (H D KOTE)

695. FRIENDLY MOTORS (INDIA) PVT. LTD. (CJC1-CJC-01), SURVEY NO. 5/4, VILLAGE – YARAHALLI, KASABA HOBLI, TALUK – H.D.KOTE, DISTRICT – MYSORE. - 571125
PH :0821-4005200.

HOSKOTE

696. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-SM-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114
PH :080-8111398104.

HOSPET

697. MUNEER CARS (N701-N7-01), BELLARY ROAD,SANKLAPUR,HOSPET , - 583203
PH :08394-266226.

HUBLI

698. RNS MOTORS (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025
PH :0836-2271825/2271239.

699. RNS MOTORS (7301-73-0F), GOKUL ROAD MUREDESHWAR BHAVAN , HUBLI - 580030
PH :0836-2236051/52.

700. REVANKAR MOTORS PVT. LTD. (7303-73-01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029
PH :0836-6613332.

KADABA

701. MANDOVI MOTORS PVT LTD (BYE1-BYE-01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA - 574221
PH :08251-260351.

KADUR

702. SHRUTI MOTORS (BQS1-BQS-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT – CHIKMAGALUR. - 577548
PH :7022007621.

KANAKAPURA

703. KALYANI MOTORS PVT. LTD. (BXY1-BXY-01), SURVEY NO. 447/1B, KASABA HOBIL, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. - 562117
PH :9900050130.

KARKALA

704. ABHARAN MOTORS (G601-HY-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104
PH :08258-233055;233085.

KARWAR

705. BHARATH AUTO CARS PVT LTD (8J01-8J-01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. - 581301
PH :08382-265530.

KENGERI

706. KALYANI MOTORS (P) LTD (0211-HP-03), RV COLLEGE,KENGERI,BANGALORE.,,, - 560059
PH :080-28607057.

KOLAR

707. MANDOVI MOTORS PVT LTD (0201-QU-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101
PH :8152-210077.

KOPPAL

708. KPF PVT. LTD. (ER01-ER-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238
PH :08539-225500.

KRISHNARAJAPET

709. MANDOVI MOTORS PVT. LTD. (BMP1-BMP-01), KHATA NO.3094, SY. NO.278, MYSORE CHENNERAYAPATNA ROAD (OPP. TO K.B.C. FUEL STATION), KRISHARAJAPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423
PH :9845132038.

KUMTA

710. BHARATH AUTO CARS PVT LTD (AFA2-AFA-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) - 581334
PH :08386-223330.

KUNDAPUR

711. ABHARAN MOTORS (G601-CY-02), NH-17, THAKKATTE, KUNDAPURA - 272877
PH :08254-272877.

KUNIGAL

712. SAKETH AUTOMOBILES (VQ01-VQ-01), NEAR KRS AGRAHARA,BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130
PH :08132-221414.

KUSHAL NAGAR

713. MANDOVI MOTORS (VN01-VN-01), SY NO:88,MADAPATANA,KUSHAL NAGAR,SOMVARPUR,NORTH KODAGU, KARNATAKA - 571234
PH :08276-272365,273365.

LINGASUGUR

714. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT. LTD.) (BOQ1-BOQ-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122
PH :8532-251555.

MADIKERI

715. FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-QX-02), BASAPPA THEATURE BUILDING, DASAWAL ROAD,MADIKERI KODAGU DISTRICT. - 571201
PH :08272-222900, 9741785533,9741785588.

MANDYA

716. MANDOVI MOTORS PVT LTD (2501-BD-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, - 571401
PH :08232-230260.

MANGALORE

717. BHARATH AUTO CARS PVT LTD (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR A.J. HOSPITAL, MANGALORE - 575004
PH :0824-2223030.

718. MANDOVI MOTORS PVT LTD (4502-45-01), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATTA, MANGALORE - 575001
PH :0824-2410123, 2410128.

719. MANDOVI MOTORS PVT LTD (4502-45-03), NO., HASSAN GROWTH CENTRE,ADYAR,N.H. -48,,MANGALORE - 575007
PH :0824-2275123.

720. MANDOVI MOTORS PVT LTD (4502-45-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008
PH :0824-3194123.

721. BHARATH AUTO CARS PVT LTD (4503-45-06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002
PH :0824-222330.

722. MANDOVI MOTORS PVT LTD (4502-45-08), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575008
PH :0824-2985123.

MUDBIDRI

723. BHARATH AUTO CARS PVT LTD (4503-HN-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227
PH :08258-238630.

MULKI

724. BHARATH AUTO CARS PVT LTD (4503-QV-05), BHARATH BEEDI COMPOUND, NH-17 MULKI - 574154
PH :0824-2293030.

MURUDESHWAR

725. RNS MOTORS (7301-T8-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350
PH :08385-260295/96/97.

MYSORE

726. FRIENDLY MOTORS (2502-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008
PH :0821-4005200.

727. MANDOVI MOTORS PVT LTD (2501-25-05), NO.182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011
PH :0821-4244417 /4000001.

728. MANDOVI MOTORS PVT LTD (2501-25-08), 217/2., HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017
PH :0821-4009900.

729. MANDOVI MOTORS PVT LTD (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005
PH :0821-4240000.

NANJANGUD

730. FRIENDLY MOTORS (BYK1-BYK-01), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT – MYSORE, KARNATAKA. - 571301
PH :8221-297444, 7259255558.

NELAMANGALA

731. RNS MOTORS LIMITED (BBH1-BBH-01), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123
PH :080-27700245.

NELYADI

732. BHARATH AUTO CARS PVT. LTD. (BPF1-BPF-01), SURVEY NO. 97/11P AND SURVEY NO. 97/9, VILLAGE - HOSAMAJALU KAUKRADY, POST - NELYADI, TALUK - PUTTUR, DIST.-DAKSHIN KANNADA . - 574229
PH :9886072730.

PADUBIDRI

733. ABHARAN MOTORS (CODE NOT YET PROVIDED BY DD1--), PLOT NO. 51/20, VILLAGE – PADUBETTU, PADUBIDRI TOWN, TALUKA & DISTRICT – UDUPI, KARNATAKA. - 574111
PH :9845242777.

PUTTUR

734. BHARATH AUTO CARS PVT LTD (4503-CZ-02), NEAR RAIWAY STATION, HARADY, PUTTUR - 517583
PH :08251-230230.

RAICHUR

735. MUNEER CARS (N701-3K-02), #12-10-64,GOUSHAL ROAD,SIYA TALAB AREA,RAICHUR - 584101
PH :08532-9449870774.

RAMANAGARAM

736. KALYANI MOTORS (P) LTD (0211-JB-02), #K1318/2034C,OPP TO ROTARY HOSPITAL,BM ROAD, RAMNAGARAM - 571511
PH :080-27275991/2/3/4.

SAGAR

737. SHRUTI MOTORS (WF01-WF-01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. - 577401
PH :08183-222123.

SAKLESHPUR

738. VENKAT MOTORS (BPW1-BPW-01), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT – HASSAN.
PH :7892809634.

SARJAPURA

739. PRATHAM MOTORS PVT. LTD. (BSY1-BSY-01), SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA – ANEKAL, SARJAPUR HOBLI, DISTRICT – BANGALORE URBAN, KARNATAKA. - 562125
PH :9590009944, 7760962890 / 9880838249.

SHIMOGA

740. SHRUTI MOTORS (B701-B7-01), K.NO 599, SHANKARMUTT ROAD, SHIMOGA - 577201
PH :08182-277976.

741. SHRUTI MOTORS (B701-B7-03), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOGA. - 577204
PH :08182-250177,277976.

742. SHRUTI MOTORS (B701-B7-05), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOGA. - 577201
PH :08182-9845399367.

SIDDAPUR

743. BHARATH AUTO CARS PVT. LTD. (BPY1-BPY-01), SURVEY NO. 211, NEAR IOCL PETROL BUNK, JOG ROAD, VILLAGE – HOSUR, TALUK – SIDDAPUR, DISTRICT – UTTARA KANNADA. - 581355
PH :9448979530.

SINDHANUR

744. KPF MOTORS PVT LTD (FX01-FX-01), SURVEY NO. 755/1, DOOR NO. 6-1-216/3 WARD NO. 19, GANGAVATHI ROAD, SINDHANUR, RAICHUR, KARNATAKA - 584128
PH :08535-221299.

SIRSI

745. RNS MOTORS (7301-MQ-0D), K H B COLONY, SIRSI - 581402
PH :08384-234854.

SULLIYA

746. MANDOVI MOTORS PVT LTD (4502-EW-04), ODABAI SULLIA,MANGALORE MYSORE ROAD,KARNATAKA - 574239
PH :08257-232325;232317.

SURATHKAL

747. MANDOVI MOTORS PVT LTD (4502-7G-02), KANA ROAD, SURATHKAL - 574158
PH :0824-4256987/4258899.

THIRTHAHALLI

748. SHRUTI MOTORS (BQR1-BQR-01), PLOT NO. 1507/2187, OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI . - 577432
PH :7625080168.

THOKOTU

749. BHARATH AUTO CARS PVT LTD (QW01-QW-01), NH-66, KAPIKAD, ULLAL,THOKOTTU, DAKSHINA KANNADA DISTT. - 575017
PH :0824-2464630.

TIPTUR

750. SAKETH AUTOMOBILES (H101-HV-03), BANDIHALLI INDUSTRIAL ESTATE, N.H.:206, TIPTUR, KARNATAKA - 572201
PH :08134-253663.

TUMKUR

751. SAKETH AUTOMOBILES (H101-H1-01), SIRA ROAD, TUMKUR - 572106
PH :0816-2256433/66.

UDUPI

752. ABHARAN MOTORS (G601-G6-01), N.H. 17, NITTUR, UDUPI - 576103
PH :0820-6454111/222/333/777.

753. ABHARAN MOTORS PVT. LTD. (G601-G6-05), N0. 305/1C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI . - 576101
PH :9845242777.

UJIRE

754. BHARATH AUTO CARS PVT LTD (BWT1-BWT-01), SURVEY NO.237-2B1, MANGALORE-CHARMADY ROAD, NEAR INDIAN OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE, BELTHANGADY TALUKA, DISTT. DAKSHINA KANNADA, KARNATAKA. - 574240
PH :8256-234230, 9986503030.

UPPINANGADI

755. MANDOVI MOTORS PVT LTD (4502-NL-05), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241
PH :08251-252123/128/129.

VITTAL

756. MANDOVI MOTORS PVT. LTD. (CCE1-CCE-01), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA – BANTWAL, DISTRICT – DAKSHIN KANNADA - 574243
PH :08255-239123.

KERALA

ADOOR

757. INDUS MOTOR CO. PVT. LTD. (2702-CJ-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518
PH :04734-9745998303.

758. AVG MOTORS LTD. (Y501-CJ-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523
PH :04734-9446355900.

ALANALLUR

759. KVR AUTOCARS PVT. LTD. (CIW1-CIW-01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST – ALANALLUR, TALUKA – MANNARKAD, DISTRICT - PALAKKAD, KERALA. - 678601
PH :9747020832.

ALAPPUZA

760. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (E501-E5-01), CCSB ROAD, CHUNGAM, ALLEPPY, - 688011
PH :477-9847580000.

761. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (E501-E5-03), PATHIRAPALLY, NH-47, ALAPPUZA - 688521
PH :0477-9747022412.

ALATHUR

762. BRD CAR WORLD PVT LTD (BRW1-BRW-01), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682
PH :9745634999.

ALUVA

763. BRD CAR WORLD LTD. (A404-CBQ-09), RE SURVEY NO.330/7, NH-47, KUNNUMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102
PH :0484-8589094913.

ANCHAL

764. SARATHY AUTO CARS (BQT1-BQT-01), SURVEY NO. 371/9, VILLAGE – IDAMULAKKAL, P.O. – ANCHAL, TALUK – PUNALUR, DISTRICT – KOLLAM. - 691306
PH :9526073765.

765. HERCULES AUTOMOBILES (CODE NOT YET PROVIDED BY DD1--), RE SURVEY NO. 581/5, BLOACK NO. 33, VILLAGE – ANCHAL, NEAR ALBILAL DRIVING SCHOOL, KAITHADY JUNCTION, ANCHAL. - 691306
PH :907584640.

ANGAMALY

766. INDUS MOTOR CO. PVT. LTD. (2702-JW-0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572
PH :9745998434.

767. POPULAR VEHICLES & SERVICES LTD. (2701-JW-0D), 182-AIRPORT JUNCTION NAGAR,M. C. ROAD,ANGAMALY - 683572
PH :8086898002.

ATTINGAL

768. POPULAR VEHICLES & SERVICES LTD. (1601-SX-07), PALAMKONAM, PERUNKULAM,VIA-.ALAMCODE, ATTINGAL - 695102
PH :8086078788.

BALARAMAPURAM

769. POPULAR VEHICLES & SERVICES LTD. (1601-AQA-11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501
PH :0471-8943345922.

CALICUT

770. INDUS MOTOR CO. PVT. LTD. (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011
PH :0495-9745998019.

771. INDUS MOTOR CO. PVT. LTD. (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT - 673005
PH :0495-9745998020.

772. INDUS MOTOR CO. PVT. LTD. (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673655
PH :0495-9745998018.

773. POPULAR VEHICLES & SERVICES LTD. (4702-47-02), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016
PH :0495-8086078650.

774. POPULAR VEHICLES & SERVICES LTD. (4702-47-07), NH-17 BYE PASS,PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT - 673009
PH :8086078651.

775. CARINO MOTORS (CARINO AUTO INFRA PVT. LTD.) (4704-47-01), RE SURVEY NO. 13, BUILDING NO. 5/548, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH – CHERUVANNUR, P.O. – NALLALAM, CALICUT (KOZHIKODE) , KERALA.
PH :7592898888.

CHALAKUDI

776. BRD CAR WORLD (ZJ02-ZJ-01), MURINGOOR P.O., CHALAKUDY - 680316
PH :0480 -9567869239.

CHALLAKUDDY

777. POPULAR VEHICLES & SERVICES LTD. (2701-8U-0C), OPPSITE CCMK HOSPITAL, VELLIKULAM ROAD, CHALAKUDY, KERALA - 680307
PH :9946104653.

CHANGARAMKULAM

778. A M MOTORS (VH01-VH-01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585
PH :9895756008.

CHAVAKAD

779. BRD CAR WORLD LTD. (A404-0J-06), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512
PH :9645963999.

CHAVAKKAD

780. SAI SERVICE PVT. LTD. (0J02-0J-01), SURVEY NO. 26/5, MULLANTHARA PARAMBU, OVUNGAL, KUNNAMKULAM ROAD, TALUK – GURUVAYUR, CHAVAKKAD.) - 680506
PH :8606900280.

CHENGANNUR

781. SARATHY AUTO CARS (C701-UL-06), PRAVUMKOOD, THIRUVANVANDOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) - 689124
PH :9947270665.

CHERPULASSERY

782. KVR AUTO CARS PVT LTD (NB01-NB-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE – CHERUPPALASSERY, TALUK – OTTAPPALAM, DISTRICT – PALAKKAD - 679503
PH :04662-9747020582, 280100.

CHERTHALA

783. INDUS MOTOR CO. PVT. LTD. (VL03-VL-01), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKKUZHI,CHERTHALA, ALAPPUZHA-DIST. - 688552
PH :9745997633.

CHINGAVANAM

784. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (I601-I6-01), SURVEY NO.290/9, 290/9/2, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM (KERALA) - 686531
PH :9847315969.

CHITTUR

785. INDUS MOTOR CO. PVT. LTD. (BQX1-BQX-01), S.NO.719/3 AND 721/1, RE SURVEY NO.671/10, VELLIYAVALLAMPPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555
PH :9745991560.

CHULLIMANOOR

786. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (BAI1-BAI-01), RE-SURVEY NO. 43/7, VILLAGE – ANAND, CHULLIMANOOR TOWN, TALUKA – NEDUMANGAD, DISTRICT – TRIVANDRUM, KERALA. - 695541
PH :0472- 8943341623, 9895770167.

COCHIN

787. INDUS MOTOR CO. PVT. LTD. (2702-27-02), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN, - 682015
PH :484-9745998040.

788. INDUS MOTOR CO. PVT. LTD. (2702-27-09), PALARIVATTOM KAKANAD ROAD, KAKANAD, COCHIN, - 682030
PH :0484-9745998013.

789. POPULAR VEHICLES & SERVICES LTD. (2701-27-01), PERANDOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025
PH :0484-9846017725.

790. POPULAR VEHICLES & SERVICES LTD. (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018
PH :9846498616.

791. SAI SERVICE PVT. LTD. (2705-27-01), 50/1 15L, ,CHERANALLOOR ROAD,EDAPPALLY,COCHIN - 682024
PH :484-9645106195.

792. SAI SERVICE PVT. LTD. (2705-27-02), NH-47,,PATHADIPALAM,EDAPPALLY,COCHIN - 682024
PH :9645105057.

793. SAI SERVICE PVT. LTD. (2705-27-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) - 682040
PH :9645106339.

794. GEORGE MAIJO AUTOMOBILES PVT. LTD. (2709-27-01), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN. - 683104
PH :0484-7559997864, 4237700.

795. INDUS MOTOR CO. PVT. LTD. (2702-27-0L), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKKUMBHAGAM, PUTHIYAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301
PH :9745992070.

EDAPPAL

796. POPULAR VEHICLES & SERVICES LTD. (4702-AM-05), KOZHIKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582
PH :9946104680.

FORT KOCHI

797. SAI SERVICE PVT. LTD. (BRS1-BRS-01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005
PH :9645106138.

IRINJALAKUDA

798. BRD CAR WORLD LTD. (A404-KQ-05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670
PH :9539006999.

IRITTY

799. INDUS MOTORS CO. PVT. LTD. (RO02-VJ-02), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRITTY, KANNUR, KERALA - 670703
PH :9747554929.

KAIPAMANGALAM

800. SAI SERVICE PVT. LTD. (2705-RP-07), VAZHIYAMBALAM PO, KAIPAMANGALAM,THRISSURE - 680681
PH :9645105053.

KALAMASSERY

801. INDUS MOTOR CO. PVT. LTD. (2702-Q3-07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106
PH :0484-9745998012.

KALLAMBALAM

802. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-QZ-04), DOOR # MP/2/500, KAVALAYOOR PANCHAYAT, KALLAMBALAM, CHIRAYINKEEZHU TALUKA, TRIVANDRUM - 695605
PH :8086079100.

KALPETTA

803. INDUS MOTOR CO. PVT. LTD. (4701-JE-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA,WAYAND - 673591
PH :9745998592.

KANHANGAD

804. KVR CARS (3L01-K2-02), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD, - 671315
PH :9605040999.

805. POPULAR VEHICLES & SERVICES LTD. (4702-K2-06), HIGHWAY JUNCTION,KANHANGAD SOUTH P.O .,KANHANGAD - 689641
PH :468-9846400300.

806. INDUS MOTOR CO. PVT. LTD. (4701-K2-0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541
PH :9745998024.

KANJIRAPALLY

807. INDUS MOTOR CO. PVT. LTD. (7E01-9Y-02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O. , KANJIRAPALLY - 686506
PH :9745998009.
808. AVG MOTORS LTD. (9Y03-9Y-01), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT.,KERALA - 686512
PH :8606071155.

KANNUR

809. HAR CARS (K101-K1-01), HAR AVENUE, KANNOTHUMCHAL, CHOVVA POST, KANNUR - 670006
PH :0497-9539009392.
810. HAR CARS (K101-K1-03), POTTIAN SHEKHARAN ROAD, MAKKANY , SOUTH BAZAR, KANNUR - 670002
PH :9539009405.
811. INDUS MOTORS CO (P) LTD (4701-K1-0E), BALANKINAR JN., KATTAMPALLY.P.O, KANNUR - 690011
PH :0497 -9745998023.
812. KVR CARS (3L01-K1-04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011
PH :0497-7558028889.
813. POPULAR VEHICLES & SERVICES LTD. (4702-K1-0F), PLOT NO.82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOVVA (PO), KANNUR - 670018
PH :0497-9846400300.

KARIKKAD

814. BRD CAR WORLD LTD. (A404-GE-02), BRD INDUSTRIAL ESTATE,KARIKKAD, KUNNAMKULAM - 680519
PH :9995804599.

KARUNAGAPALLY

815. SARATHY AUTO CARS (C701-AQ-05), K.S. PURAM,NEELIKULAM, KARUNAGAPPALLY,KOLLAM, - 690544
PH :9947277765.

KASARGOD

816. KVR CARS (3L01-3L-01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123
PH :04994-9747011100.
817. POPULAR VEHICLES & SERVICES LTD. (4702-3L-0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371
PH :4994-8086078864.
818. INDUS MOTORS CO. PVT. LTD. (RO02-3L-03), SURVEY NO.384/3C 10, MUTTATHODY VILLAGE, INDIRA NAGAR, KASARAGOD - 671541
PH :9747550747.

KATTAPANA

819. INDUS MOTOR (ZN01-ZN-01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.). - 685508
PH :04868-9746743460.

KAYAMKULAM

820. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (E501-8L-04), NH-47, KOTTUKULANGARA JUNCTION, KAYAMKULAM, ALLAPPUZHA DIST,KERALA - 690502
PH :0479-9947040824.
821. INDUS MOTOR CO. PVT. LTD. (2702-8L-05), KARIYILAKULANGARA, KAYANKULAM P.O., ALAPPUZHA DISTT. - 690572
PH :0479-9745998005.
822. POPULAR VEHICLES & SERVICES LTD. (B802-8L-03), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. - 690502
PH :0479-9946105601.

KODANGALLUR

823. SAI SERVICE PVT. LTD. (2705-8K-03), NH-17,T.K.S.PURAM,,KODUNGALLOOR - 680667
PH :0480-8606980006.

KODUVALLY

824. A M MOTORS (BGX1-BGX-01), SURVEY NO:91/9, 91/10,NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572
PH :9895979023.

KOLLAM

825. INDUS MOTOR CO. PVT. LTD. (1602-Q4-03), OLD SARATHY THEATRE, PUNALOOR ROAD, KOLLAM - 691005
PH :0474-9745998004.
826. POPULAR VEHICLES & SERVICES LTD. (1601-Q4-04), H & C COMPOUND, MUNDDACKAL, KOLLAM - 680006
PH :0474-98464 98656.

KOLLAM (QUILON)

827. SARATHY AUTO CARS (C701-C7-01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017
PH :0474-9847072065.
828. SARATHY AUTO CARS (C701-C7-08), SURVEY NO. (SIDCO) 318/1, SHED NO. B12, UMAYANALLUR SIDCO INDUSTRIAL ESTATE, KOLLAM. - 691589
PH :0474-9847072065, 2537280.

KONDOTTY

829. INDUS MOTORS CO. PVT. LTD. (ID02-ID-01), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPURAM DISTRICT, KERALA - 683573
PH :9745997875.

KOOTHATTUKULAM

830. SAI SERVICE PVT. LTD. (VM01-VM-01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. - 686662
PH :0485-9645106258.

KOTHAMANGALAM

831. INDUS MOTOR CO. PVT. LTD. (7E01-9V-03), PALAKKADAN BUILDING,CHANKLAM,KOTHAMANGALAM - 686691
PH :9745998479.
832. POPULAR VEHICLES & SERVICES LTD. (2701-9V-0B), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA - 686691
PH :9946104661.

KOTTAKKAL

833. INDUS MOTOR CO. PVT. LTD. (4701-8M-09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST, - 676503
PH :0493-9745998017.
834. POPULAR VEHICLES & SERVICES LTD. (4702-8M-03), NH-17, ,CHANDAPARAMBU, ,RANBATHANI P.O, MALAPPURAM, KOTTAKAL - 676510
PH :0483-9946104631.

KOTTARAKKARA

835. POPULAR VEHICLES & SERVICES LTD. (S801-S8-01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA - 691531
PH :8086073466.
836. SARATHY AUTO CARS (S802-S8-01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARKARA DISTT. KOLLAM (KERALA) - 691531
PH :9947073065.
837. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (S803-S8-01), S.NO:7/61,7/63,7/71,7/111, KALAYAPURAM VILLAGE, MYLUM PANCHAYATH,KOTTARAKKARA TALUKA, KOLLAM DISTRICT. - 691560
PH :9995807163.
838. INDUS MOTOR CO. PVT. LTD. (S804-S8-01), RE SURVEY NO.207/3-2, KIZHAKEKKARA MURIYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT., - 691531
PH :9747562299.

KOTTAYAM

839. AVG MOTORS LTD. (B801-B8-01), ERAYILKADAVU, KOTTAYAM - 686001
PH :0481-9446323999.
840. INDUS MOTOR CO. PVT. LTD. (2702-B8-04), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM , KERALA - 686013
PH :0481-9745998007.
841. INDUS MOTOR CO. PVT. LTD. (2702-B8-0C), MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM - 686013
PH :9745998007.
842. POPULAR VEHICLES & SERVICES LTD. (B802-B8-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O, KOTTAYAM - 686006
PH :0481-9539007400.

KOZHENCHERRY

843. AVG MOTORS LTD. (W801-AS-03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT- PATHANAMTHITTA, - 689641
PH :9446492988.

KUNNAMKULAM

844. POPULAR VEHICLES & SERVICES LTD. (2701-8N-07), CHOONDAL,TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502
PH :0488-9846397066.

LAKKIDI PERUR

845. A M MOTORS LTD. (CER1-CER-01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302
PH :8086305555.

MALAPURAM

846. A.M. MOTORS (E601-E6-01), VARANGODE, DOWNHILL, MALAPURAM, - 676519
PH :493-9895705325.

MALLAPALLY

847. INDUS MOTORS (I201-I2-01), THOPPIL COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585
PH :9747541400.

MANJERI

848. A.M. MOTORS (E601-8V-05), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA - 676121
PH :9895756035.

849. K V R AUTO CARS PVT. LTD. (8V02-8V-01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123
PH :9947020741.

850. POPULAR VEHICLES & SERVICES LTD. (4702-8V-0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THRUKKAL, MANJERI (KERALA) - 676121
PH :0483-8589992405.

MANNARKAD

851. A.M. MOTORS (E601-RA-07), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582
PH :9895979048.

852. INDUS MOTORS (2702-RA-0K), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZHA-PO. MANNARKAD,KERALA - 678583
PH :9745995946.

MAVELIKARA

853. POPULAR VEHICLES & SERVICES LTD. (B802-S9-02), KONNAYIL SUVAKO INDUSTRIAL COMPLEX,,SHED A-1,, KOLLAKADAVU INDUSTRIAL ESTATE, KOCHAL MOODU, KALLIMEL P.O.,, MAVELIKKARA, KERALA - 690570
PH :9846298622.

854. INDUS MOTORS (1602-S9-07), NEAR PRATHIBA THEATRE, PUTTHIYAKAVU, MAVELIKKARA - 690101
PH :9745998137.

855. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (S901-S9-01), SURVEY NO. 227/3, SHANTHIVANAM JUNCTION, CHERUKOLE P.O., MAVELIKKARA, KERALA - 690104
PH :9747022424.

MUVATTUPUZHA

856. INDUS MOTOR CO. PVT. LTD. (7E01-7E-01), NH-49, MUVATUPUZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATUPUZHA, ERNAKULAM DIST - 686661
PH :0485-9745998011.

857. POPULAR VEHICLES & SERVICES LTD. (2708-7E-02), MUTHUKALLU JUNCTION,PERUMPALLUR P.O., MUVATTUPUZHA, KERALA - 686673
PH :9846374786.

858. INDUS MOTOR CO. PVT. LTD. (7E01-7E-08), BUILDING NO. 11/146(A), KADATHY MARKET, NH-49, MUVATTUPUZHA, DISTRICT - ERNAKULAM. - 686673
PH :485- 9745999858.

NEYYANTTINKARA

859. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-AT-02), NH 47, KOTTAMAN , KOLLAYIL PANCHAYAT, NEYYATTINKARA, TRIVANDRUM, - 695503
PH :9995867628.

NEYYATINKARA

860. INDUS MOTORS (AT01-AT-01), INDUS MOTOR CO. PVT. LTD., OLD M.V THEATRE, NEAR KSRTC BUS STATION, NEYYATINKARA, DIST. TRIVANDRUM - 695121
PH :0471-9747544500.

NILAMBUR

861. INDUS MOTOR CO. PVT. LTD. (4701-AF-0A), MINERVA JUNCTION, NILAMBUR , KERALA - 679329
PH :04931-9745998396.

862. INDUS MOTOR CO. PVT. LTD. (4701-AF-0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPURAM DIST. - 679329
PH :9745998414.

NILAMEL

863. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-DA-03), M. C. ROAD, KANNANCODU, NILAMEL, KOLLAM (DIST.) - 691535
PH :8086079107.

OTTAPALAM

864. INDUS MOTOR CO. PVT. LTD. (PA01-PA-01), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA. - 679101
PH :0466-9745998014.

PALA

865. POPULAR VEHICLES & SERVICES LTD. (B802-GN-04), 12TH MILE,PALA-PONKUNNAM ROAD,PALA - 686575
PH :0482-8086073454.

866. INDUS MOTOR CO. PVT. LTD. (7E01-GN-05), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574
PH :9745998878.

867. AVG MOTORS LTD. (GN03-GN-01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651
PH :4822-9447137246.

868. INDUS MOTORS CO. PVT. LTD. (7E01-GN-07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT - 686584
PH :9747516934.

PALAKKAD

869. INDUS MOTOR CO. PVT. LTD. (2702-Y2-0G), VADAKKUMURI-NH-47, KANNADI, KUZHALMAMMAM (P.O.), PALAKKAD. - 678701
PH :9745998590.

870. POPULAR VEHICLES & SERVICES LTD. (2701-Y2-09), OPP. PALANA HOSPITAL,KODUVAYOOR ROAD,KINASSERY P.O.,PALAKKAD - 678707
PH :0491-9846300650.

871. INDUS MOTOR CO. PVT. LTD. (Y202-Y2-01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA, CHANDRANAGAR POST, PALAKKAD - 678007
PH :9747519500.

PARAVOOR

872. BRD CAR WORLD LTD. (A404-ZS-08), MAVINCHUVADU, MANNAM P.O., NORTH PARAVUR, PARAVOOR (KERALA) - 683520
PH :9567869239.

PATHANAMTHITTA

873. AVG MOTORS LTD. (W801-W8-02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA, - 689671
PH :0468-9744077183.

874. AVG MOTORS LTD. (W801-W8-04), SURVEY NO. 53/7A/3, WARD NO. 13, OLD THEATER ROAD, KUMBAZHA, PATHANAMTHITTA.
PH :468-2232002, 8606805577.

PATHNAMTHITTA

875. INDUS MOTOR CO. PVT. LTD. (1602-16-04), KUMBAZHA, PATHANAMTHITTA - 689653
PH :0468-9745998008.

876. POPULAR VEHICLES & SERVICES LTD. (B802-W8-05), T.K. ROAD, NEAR COLLECTORATE,PATHANAMTHITTA - 689645
PH :9946105687.

PATTAMBI

877. A.M. MOTORS (E601-8P-04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306
PH :0466-9567866059.

878. INDUS MOTOR CO. PVT. LTD. (2702-8P-0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303
PH :9745998295.

879. A.M. MOTORS (E601-8P-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. - 679306
PH :0466-9567866059.

PAYANNUR

880. POPULAR VEHICLES & SERVICES LTD. (4702-9Z-04), N H 17,,EZHILODE P O, ,,PAYYANUR - 670309
PH :0497-9846036510.

PERINTHALMANNA

881. A.M. MOTORS (E601-7H-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322
PH :04933-8129818235.

882. KVR AUTOCARS PVT. LTD. (7H01-7H-01), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351
PH :04933-9747020573.

883. KVR AUTOCARS PVT. LTD. (7H01-7H-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322
PH :04933-9747020837.

PERUMBAVOOR

884. SAI SERVICE PVT. LTD. (2705-8W-04), M.C.ROAD,PERUMBAVOOR,ERNAKULAM DIST,KERALA - 683542
PH :9645106543.

POINACHI

885. KVR CARS (3L01-GF-03), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319
PH :9526021822.

PUNALUR

886. SARATHY AUTO CARS (C701-8Q-03), NH-208, Q.S. ROAD,ELAMPAL POST,PUNALUR, KOLLAM DIST - 691322
PH :0475-9847073065.

QUILANDY

887. INDUS MOTOR CO. PVT. LTD. (3O01-3O-01), BUILDING NO.13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. - 673306
PH :9745997875.

RAMANATTUKARA

888. A.M. MOTORS (E601-KB-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632
PH :9567866144.

RANNI

889. INDUS MOTOR CO. PVT. LTD. (7E01-JX-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677
PH :9745998737.

SASTHAMKOTTAH

890. INDUS MOTORS CO. PVT. LTD. (1602-RT-09), NO. SP IX/661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM – , KERALA - 690520
PH :9745998849.

SHORNUR

891. POPULAR VEHICLES & SERVICES LTD. (2701-1I-0E), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124
PH :8589992425.

TALIPARAMBA

892. HAR CARS (K101-9W-02), SREEKANDAPURAM MAIN ROAD, KANNUR (DIST), KERALA, THALIPARAMBA - 670141
PH :0460-9539009480.

TELLICHERRY

893. INDUS MOTOR CO. PVT. LTD. (4701-Y3-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY , KERALA - 670102
PH :9747520100.

THALASSERY

894. INDUS MOTOR CO. PVT. LTD. (RO02-RO-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105
PH :490-9745998022.

THIRUVALLA

895. AVG MOTORS LTD. (Y501-Y5-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA , PATHANAMTHITTA DISTT - 689107
PH :0469-8606071155.

896. POPULAR VEHICLES & SERVICE (B802-Y5-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103
PH :8086073489.

THIRUVANANTHAPURAM

897. SOUTH PARK MOTORS PVT. LTD. (1604-16-01), SURVEY NO. 985/3-4-5-6, VILLAGE - KADAKAMPALLY, CHACKAI BYPASS, TALUKA - TRIVANDRUM, TRIVANDRUM, KERALA. - 695029
PH :9526100008.

898. SOUTH PARK MOTORS PVT. LTD. (1605-16-01), RE SURVEY NO. 9/3, TO 9/5, 9/8, TO 9/10, 9/15, 9/18, 9/19, 6/12, 9/23, KAZHKOOTAM, VAZHAYILA, VILLAGE – PEROORKADA, TRIVANDRUM. - 695005
PH :471-3050000, 9539031111, 9544040005.

899. SARATHY AUTO CARS LTD. (C701-16-09), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT-THIRUVANANTHPURAM, KERALA.
PH :0471-9744816565.

THODUPUZHA

900. INDUS MOTOR CO. PVT. LTD. (7E01-HZ-04), PALA ROAD, THODUPUZHA - 685584
PH :9745998631.

THRISSUR

901. BRD CAR WORLD LTD. (A404-A4-01), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR - 680031
PH :0487-9995807141.

902. INDUS MOTOR CO. PVT. LTD. (2702-A4-08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505
PH :0487-9745998015.

903. INDUS MOTOR CO. PVT. LTD. (2702-A4-0D), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004
PH :0487-9745998014.

904. POPULAR VEHICLES & SERVICES LTD. (2701-A4-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655
PH :0487-8589992404.

905. SAI SERVICE PVT. LTD. (2705-A4-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004
PH :9645106089.

906. BRD CAR WORLD LTD. (A404-A4-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002
PH :0487-9746476529.

THRITHALLUR

907. BRD CAR WORLD LTD. (A404-SS-04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619
PH :9539197888.

TIRUR

908. A.M. MOTORS (E601-Y4-02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR - 676101
PH :0494-9895940000.

909. KVR AUTOCARS PVT. LTD. (7H01-Y4-05), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307
PH :9747020673.

910. A.M. MOTORS (E601-Y4-08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. - 676103
PH :0494 -9895705323.

TRIPRAYAR

911. POPULAR VEHICLES & SERVICES LTD. (2701-8R-08), NEAR CENTURY PLAZA, NATTIKA P.O, TRIPRAYAR, TRISSUR DIST - 680566
PH :0487-9846699245.

TRIPUNTARA

912. SAI SERVICE PVT. LTD. (2705-AK-05), HILL PALACE ROAD,KARINGACHIRA,COCHIN - 682301
PH :9645105067.

TRIVANDRUM

913. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-16-01), VAZHAYILA P.O., TRIVANDRUM - 695564
PH :9995867654.

914. INDUS MOTOR CO. PVT. LTD. (1602-16-02), NH BYE PASS ROAD, VEMPALAVATTOM, TRIVANDRUM - 695029
PH :0471-9745998003.

915. INDUS MOTOR CO. PVT. LTD. (1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM - 695014
PH :0471-9745998001.

916. INDUS MOTOR CO. PVT. LTD. (1602-16-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, , - 695011
PH :9745998002.

917. POPULAR VEHICLES & SERVICES LTD. (1601-16-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002
PH :0471-9846498633.

918. POPULAR VEHICLES & SERVICES LTD. (1601-16-05), OPP. ST. JUDE CHURCH,CIT ROAD, KILLIPPALAM,TRIVANDRUM - 695002
PH :8589992434.

919. SARATHY AUTO CARS (C701-16-04), KOVALAM BYEPASS,SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009
PH :0491-9847401465.

920. INDUS MOTOR CO. PVT. LTD. (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA PO, MANNANTHALA,TRIVANDRUM - 695028
PH :9747540100.

921. INDUS MOTORS CO. PVT. LTD. (1602-16-11), SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM - 695030
PH :9746743357.

UPPALA

922. POPULAR VEHICLES & SERVICES LTD. (4702-4I-0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322
PH :8589051616.

923. KVR CARS (4I02-4I-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324
PH :4994-9747021211.

URAKAM

924. INDUS MOTORS (AAH1-AAH-01), IRINJALAKKUDA ROAD, POOCHUNNIPPADAM, URAKAM PO, TRICHUR DISTT., KERALA - 680562
PH :9745998044.

VADAKARA

925. INDUS MOTOR CO. PVT. LTD. (4701-8S-07), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104
PH :0496-9745998021.

926. POPULAR VEHICLES AND SERVICES (8S02-8S-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102
PH :0496-8943345935.

VAIKOM

927. INDUS MOTOR CO. PVT. LTD. (2702-WN-0J), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605
PH :9746743003.

VETTICHIRA

928. KVR AUTOCARS PVT. LTD. (7H01-MZ-03), AP IV, 75A TO G, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHIRA, - 676552
PH :9747020023.

WADAKKANCHERY

929. BRD CAR WORLD LTD. (A404-MX-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583
PH :9567869403.

MADHYA PRADESH

AGAR

930. PRIME CAR PVT LTD (BJT1-BJT-01), BAROD ROAD, NEAR LAL KOTHI, AGAR. - 456441
PH :8889913327.

ANUPPUR

931. SHUBH MOTORS PVT. LTD. (BIB1-BIB-01), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224
PH :9755595596, 9752546255.

ASHOK NAGAR

932. PREM MOTORS PVT. LTD. (DS01-DS-02), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331
PH :9926809110.

ASHTA

933. JEEWAN MOTORS PVT. LTD. (BSF1-BSF-01), KHASRA NO.111/1 NEAR RELIANCE PETROL PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE (M.P.) - 466001
PH :0756-9826429604.

BADNAWAR

934. PATEL MOTORS PVT. LTD. (BPT1-BPT-01), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNAWAR, DISTT. - DHAR, MADHYA PRADESH. - 454660
PH :07295-232228, 9977703512.

BADWAH

935. NIMAR MOTORS PVT. LTD. (AU01-UJ-05), NIRMAL COMPLEX , INDORE ROAD , BARWAH - 451001
PH :224567, 7770878726.

BALAGHAT

936. KUNAL MOTORS (U501-TP-04), KH NO.-1/56, JHULELAL DHARMSHALA ROAD, BALAGHAT, MADHYA PRADESH - 4811001
PH :07632-240088.

BARELI

937. MY CAR (BHOPAL) PVT LTD. (I302-I3-01), KHASRA NO.423/2, NH-12, J.J. ROAD, NEAR SHRIVASTAV MARRIAGE GARDEN, BARELI DISTRICT RAISEN (M.P.) - 464668
PH :07486-230103.

BARNAGAR

938. RUKMANI MOTORS (P) LTD (BBK1-BBK-01), RUNIJA ROAD ,BARNAGAR CITY, DISTRICT UJJAIN - 456771
PH :9755512100.

BARWANI

939. NIMAR MOTORS PVT. LTD. (AU01-SA-02), NEAR ICE FACTORY,RAJGHAT ROAD, BARWANI - 451551
PH :07290-224366.

BEGAMGANJ

940. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CIL1-CIL-01), BHOPAL-SAGAR MAIN ROAD, BEGAMGANJ, DISTRICT – RAISEN, MADHYA PRADESH . - 464881
PH :7024119905.

BERASIA

941. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CKG1-CKG-01), BHOPAL ROAD, OPP. BERASIA HOSPITAL, BERASIA, DISTRICT – BHOPAL, MADHYA PRADESH. - 463106
PH :7024119909.

BETMA

942. OCEAN MOTORS PVT. LTD. (BVR1-BVR-01), OPPOSITE MPEB OFFICE, INDORE-AHEMDABAD ROAD, BETMA, DISTRICT – INDORE, MADHYA PRADESH . - 453001
PH :7389936444.

BETUL

943. KUNAL MOTORS (U501-U5-02), BHOPAL - NAGPUR NATIONAL HIGHWAY, NEAR BADORA CHOWK,, BETUL - 460001
PH :07141-239991 / 239992.

BHOPAL

944. JEEWAN MOTORS (0302-03-01), 9E SECTOR A,INDUSTRIAL AREA, GOVINDPURA, BHOPAL - 462024
PH :0755-4058888.

945. MY CAR (BHOPAL) LTD (0303-03-01), 189,JINSI,NH-12,BHOPAL (MP) - 462008
PH :0755-4022800 / 4222999.

946. MY CAR (BHOPAL) LTD (0303-03-03), 196, MANDAKINI HOUSING SOCIETY.,KOLAR ROAD,,BHOPAL,MADHYA PRADESH - 462042
PH :0755-4082854.

947. SATYAM MOTORS (0307-03-01), NH-12,SUVEESHA NAGAR,HOSHANGABAD ROAD,MISROAD - 462040
PH :0755-4422000 / 4422056.

948. JEEWAN MOTORS (0302-03-03), PLOT NO. 157, NEAR PUNJAB & SINDH BANK M.P. NAGAR ZONE-II, BHOPAL - 462023
PH :0755-9826429605, 2558831.

949. JEEWAN MOTORS PVT. LTD. (0302-03-04), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH,CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036
PH :0755-4057988.

950. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (0308-03-01), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023
PH :755-4063529,30,31,32,33,34,35.

BIAORA

951. PRIME CARS (3Q01-0F-03), NR. INDORE-BHOPAL SQUARE, A B ROAD, BIAORA - 465674
PH :7374-230063.

BINA

952. ADINATH CARS PRIVATE LIMITED (BHQ2-BHQ-01), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT – SAGAR, MADHYA PRADESH - 470113
PH :9009780030.

BURHANPUR

953. NIMAR MOTORS PVT. LTD. (BRR1-BRR-01), KHASRA NO. 654/15-16, BASEMENT OF HOTEL AMBIKA RESIDENCY, OPP. PAKIZA SHOWROOM, SANJAY NAGAR, AMRAVATI ROAD, BURHANPUR, MADHYA PRADESH - 450331
PH :07325-242211.

CHATTARPUR

954. ADINATH CARS PRIVATE LIMITED (8B02-8B-01), MAHOBA ROAD, NEAR BUS STAND, CHHATARPUR, DISTT SAGAR - 471001
PH :07682-241446.

CHHINDWARA

955. KUNAL MOTORS (U501-U5-03), OPP. KUNAL MOTORS SHOWROOM, ,LAL BAGH TIRAHA,BEHIND TRUE VALUE OUTLET, NASIRABAD ROAD, CHHINDWARA(MP), - 480001
PH :07162-236436.

956. KUNAL MOTORS (U501-U5-06), PLOT NO. 546, LAHGARUA NEAR MULLU BABA MANDIR, NARSINGHPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002
PH :8349999112.

957. KAMTHI MOTORS LLP (U502-U5-01), KHASRA NO.1/53, BESIDE MVM SCHOOL, NAGPUR ROAD, VILL.-SARRA, DISTT. CHHINDWARA, MADHYA PRADESH - 480001
PH :9111488444.

DAMOH

958. ADINATH CARS PRIVATE LIMITED (RD02-RD-01), KILLARI NAKA, SAGAR ROAD, DAMOH - 470661
PH :07812-221740.

DATIA

959. PREM MOTORS PVT. LTD. (3003-WE-05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661
PH :07522-233236.

DEPALPUR

960. OCEAN MOTORS PVT. LTD. (WB01-WB-03), NEAR LEELA RESIDENCY,INDORE ROAD,DEPALPUR,DIST.INDORE-MP - 453115
PH :07322-220505, 222501.

DEWAS

961. PRIME CARS PVT. LTD. (3Q01-3Q-01), RASULPUR BYPASS TIRAHA, AB ROAD, DEWAS - 455001
PH :07272-259301.

DHAR

962. RUKMANI MOTORS (P) LTD (5304-LM-02), 41/2 MAGAJPURA,DHAR,, - 454001
PH :7292-223500.

DINDORI

963. STANDARD AUTO AGENCIES (AVA1-AVA-01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP,DINDORI - 481661
PH :07644-280030,7771014728.

GADARWARA

964. STANDARD AUTO AGENCIES (BOI2-BOI-01), KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1, NO. 119, GADARWARA, DISTRICT – NARSINGHPUR . - 487551
PH :8319784336.

GANJBASODA

965. MY CAR (BHOPAL) LTD. (AEA1-AEA-01), NEAR GHUNGRU GARDEN , TYONDA ROAD , GANJBASODA, VIDISHA DISTT., M.P. - 464221
PH :7389928892.

GAUTAMPURA

966. OCEAN MOTORS PVT. LTD. (CFW1-CFW-01), RUNJI CHOURAHA, GAUTAMPURA, TEHSIL - DEPALPUR, DISTT.-INDORE, MADHYA PRADESH . - 453220
PH :7322-230501, 7389937314.

GUNA

967. PREM MOTORS PVT. LTD. (S301-S3-01), OPP R.T.O.,A.B. ROAD,GUNA, - 473001
PH :07542-268015 / 268081.

GWALIOR

968. PREM MOTORS PVT. LTD. (3003-30-01), M. L. B. ROAD,GWALIOR,, - 474002
PH :0751-4010757.

969. PREM MOTORS (3005-30-01), SHIVPURI LINK ROAD, GWALIOR - 474002
PH :0751-4055137.

HARDA

970. INFINITY CARS (KM01-VY-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331
PH :8889284444.

HATOD

971. OCEAN MOTORS PVT. LTD. (BVT1-BVT-01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE - 453111
PH :7389936477.

HOSHANGABAD

972. INFINITY CARS (KM01-KM-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001
PH :07574-256677.

ICHHAWAR

973. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CIK1-CIK-01), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHHAWAR, DISTRICT – SEHORE, MADHYA PRADESH. - 466115
PH :9926488501.

INDORE

974. MY CAR PVT. LTD. (5305-53-01), 78/1/3, HUKMAKHEDI RAU, ADJESCENT IPS ACADEMY, A6 ROAD,INDORE - 452031
PH :0731-4272727.
975. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017
PH :0731-4245222.
976. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-01), 428/3/3,NIRANJANPUR,A B ROAD,INDORE - 452010
PH :0731-4033333.
977. RUKMANI MOTORS (P) LTD (5304-53-01), 2-3,,A.B. ROAD,INDORE - 452001
PH :0731-4075401.
978. RUKMANI MOTORS (P) LTD (5304-53-03), NO. -4/5, MANORAMA GANJ, INDORE - 452001
PH :0731-4075408.
979. OCEAN MOTORS PVT. LTD. (5306-53-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. - 452001
PH :0731-6627500, 6627505.
980. OCEAN MOTORS (5306-53-02), NEAR QUEENS COLLEGE,ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017
PH :0731-6617505,2877505.
981. MY CAR (INDORE) PVT. LTD. (5305-53-02), KHASARA NO.15/1/8 GRAM PIPLIYA KUMAR GODOWN NO.1112, DEWAS NAKA, INDORE. - 452010
PH :0731-4737373.
982. PATEL MOTORS (5303-53-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) - 452006
PH :0731-2383099,2382099.
983. OCEAN MOTORS PVT. LTD. (5306-53-03), SCHEME NO.94, SECTOR A, PLOT NO. 28FA, RING ROAD, NEAR PIPLIYAHANA CIRCLE, INDORE (M.P.) - 452001
PH :0731-'9685333331,'7389936451.
984. KATHED MOTOCORP (5307-53-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002
PH :0731-2616868, 7471111132.

JABALPUR

985. SHUBH MOTORS (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 486001
PH :0761-4099999.
986. STANDARD AUTO AGENCIES (5402-54-01), OPPOSITE ALLAHABAD BANK,DELITE TALKIES ROAD,CIVIL LINES, JABALPUR - 482001
PH :0761-4040405 / 4040406.
987. STANDARD AUTO AGENCIES (5402-54-03), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002
PH :0761-4038001.
988. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002
PH :0761-6999952, 9755502292.
989. STANDARD AUTO AGENCIES (5402-54-06), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001
PH :9303568517.

JAORA

990. PATEL MOTORS (INDORE) PVT. LTD. (P801-BFR-04), SURVEY NO.57/11/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226
PH :243399, '9826634449, 9926932221.

JHABUA

991. PATEL MOTORS (AAR1-AAR-01), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA ,MADHYA PRADESH. - 457661
PH :07392-243399, '9826634449.

KATNI

992. SHUBH MOTORS PVT LTD (FK01-FK-01), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501
PH :9755595596.

KHANDWA

993. NIMAR MOTORS PVT. LTD. (AU01-3R-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001
PH :0733-2244088.

KHARGONE

994. NIMAR MOTORS PVT. LTD. (AU01-AU-01), JETAPUR,SANAWAD ROAD,KHARGAONE, - 462026
PH :07282-243285.
995. NIMAR MOTORS PVT. LTD. (AU01-AU-06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001
PH :07282-243788, 243688, 9669569504.

KHATEGAON

996. PRIME CARS PVT. LTD. (BXB1-BXB-01), SURVEY NO. 85/3, NEMAWAR ROAD, KHATEGAON, DISTRICT – DEWAS, MADHYA PRADESH - 455336
PH :7274-8889913306.

KOTMA

997. SHUBH MOTORS (DO01-DO-01), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336
PH :07658-233777.

KUKSHI

998. OCEAN MOTORS PVT. LTD. (BIO1-BIO-01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331
PH :9009780030, 7389945443, 8085999990.

MAIHAR

999. CITY CARS (D702-GI-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771
PH :07674-234575.

MANAWAR

1000. OCEAN MOTORS PVT. LTD. (BVS1-BVS-01), NEAR SHANTIKUNJ COLONY, INDORE-MANAWAR MAIN ROAD, TEHSIL – MANAWAR, DISTRICT – DHAR. - 454335
PH :7389936477.

MANDIDEEP

1001. MY CAR (BHOPAL) PVT LTD. (CGK1-CGK-01), NH-12 INFRONT OF BHAVYA CITY NEAR VILLAGE – SARAKIA, MANDIDEEP, TEHSIL – GOHARGANJ, DISTRICT – RAISEN, MADHYA PRADESH. - 464990
PH :755-3023321.

MANDLA

1002. STANDARD AUTO AGENCIES (5402-WD-04), KATARA ROAD, MANDLA, DIST. MANDLA MP - 481661
PH :7642-260600,260622.

MANDSAUR

1003. PATEL MOTORS (INDORE) PVT. LTD. (WC01-WC-01), NEAR SHIVANA BRIDGE,RATLAM MANDSAUR ROAD,MANDSAUR - 458001
PH :07422-400450, 220372.

MHOW

1004. OCEAN MOTORS PVT. LTD. (WA01-WA-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441
PH :07324-7389936478, 266211.

MORENA

1005. PREM MOTORS PVT. LTD. (RG01-RG-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001
PH :07532-233101.

NAGDA

1006. RUKMANI MOTORS (P) LTD (CHR1-CHR-01), PLOT NO. 17, STATE HIGHWAY NO.17, INDORIYA ROAD, NAGDA, DISTRICT – UJJAIN, MADHYA PRADESH. - 456335
PH :9755512100.

NARSINGHPUR

1007. STANDARD AUTO AGENCIES (BB01-BB-01), KH. NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL & DISTRICT – NARSINGHPUR, MADHYA PRADESH. - 487001
PH :7792-232757.

NASRULLAGANJ

1008. JEEWAN MOTORS PVT. LTD. (CIN1-CIN-01), KHASRA NO. 458, VILLAGE – RALA, TEHSIL – NASRULLAGANJ, DISTRICT – SEHORE, MADHYA PRADESH. - 466331
PH :9826017799, 8959900110.

NEEMUCH

1009. PATEL MOTORS (RATLAM) PVT. LTD. (P801-3T-02), MHOW-NEEMUCH ROAD,NEEMUCH(MP),, - 458441
PH :07423-263883-4.

PANNA

1010. CITY CARS (EQ01-EQ-01), KHASRA NO. 378, MOHAN RAJ VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA, MADHYA PRADESH . - 488001
PH :7672-223026, 222593.

PETLAWAD

1011. PATEL MOTORS (INDORE) PVT. LTD. (CJD1-CJD-01), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT – JHABUA, MADHYA PRADESH. - 457773
PH :9977703421.

PIPARIYA

1012. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD.) (CGB1-CGB-01), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775
PH :8889282220.

PITHAMPUR

1013. PATEL MOTORS (INDORE) PVT. LTD.
(5303-BVD-04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775
PH :722-4990999.

RAISEN

1014. MY CAR (BHOPAL) PVT. LTD. (RF01-RF-01), NEAR BAGHEL TRACTORS BEFORE SALE TAX TOLL SAGAR ROAD - 464221
PH :9755550061.

RATLAM

1015. PATEL MOTORS (INDORE) PVT. LTD.
(P801-P8-01), 76 C,D&E,INDUSTRIAL AREA,RATLAM - 452001
PH :07412-402529-31-32-33-41.

1016. PATEL MOTORS (INDORE) PVT LTD.
(P801-P8-03), 181/17/18,DOSHI GOAN,INDUSTRIAL AREA ,JAORA ROAD,RATLAM - 457001
PH :07412-261463, 261464 ,'9926932221.

REWA

1017. CITY CARS (D702-M2-03), NYPASS CHURHATA,DIST. REWA - 482001
PH :07662-222021.

SAGAR

1018. ADINATH CARS PRIVATE LIMITED (G102-G1-01), STATION ROAD, TILAK GANJ, SAGAR (M.P). - 470001
PH :07582-403932 / 226560.

SAJAPUR

1019. PRIME CARS (3Q01-ZC-02), LALGHATI , A B ROAD, SHAJAPUR - 465441
PH :7364-226333.

SANWER

1020. MY CAR (INDORE) PVT. LTD. (AAJ1-AAJ-01), S.NO.356/3/1, OLD UJJAIN BYPASS ROAD,TALUKA SANWER, DISTT. INDORE. - 453551
PH :07321-'220043,'7389920507.

SATNA

1021. CITY CARS (D702-D7-05), (A UNIT OF AGRAWAL WHEELS PVT. LTD.), BESIDE BHASKAR PRESS, BEHIND MARUTI SHOWROOM, WARD NO.27, AMOUDHA KALA, PANNA ROAD, SATNA - 485001
PH :9754301199.

SEHORE

1022. JEEWAN MOTORS (0302-EH-02), 869/1/2,OFFICERS COLONY,IN FRONT OF CHURCH GROUND,BHOPAL, INDORE ROAD - 466001
PH :0756 -2226400.

SENDHWA

1023. NIMAR MOTORS PVT. LTD. (CIH1-CIH-01), KHASRA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL – SENDHWA, DISTRICT – BARWANI, MADHYA PRADESH. - 451666
PH :9669569504.

SEONI

1024. KUNAL MOTORS (U501-8X-05), JYARAT NAKA, JABALPUR NAGPUR ROAD, SEONI (M.P.) - 480661
PH :07692-228158,8349999269.

SHADOL

1025. SHUBH MOTORS (MF01-MF-01), JAMUA, NEAR GYAN GUPTA,BUDHAR ROAD,SHAHDOL, - 484771
PH :07652-231358 / 230110.

SHAHPURA

1026. STANDARD AUTO AGENCIES (CRD1-CRD-01), KHASARA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119
PH :7771000392.

SHAMGARH

1027. PATEL MOTORS (INDORE) PVT LTD
(BFZ1-BFZ-01), KHASRA NO. 1179/1, MOHALLA MAROTH, TEHSIL – SHAMGARH, DISTRICT – MANDSAUR, MADHYA PRADESH. - 458883
PH :9826360699.

SHIVPURI

1028. PREM MOTORS PVT. LTD. (3003-3U-04), A B ROAD,SIVPURI,, - 473551
PH :07492-221215.

SIDHI

1029. CITY CARS (BKM1-BKM-01), ADHIYAR KHOH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. - 486661
PH :7672-223026, 222593, 9754301199.

SIHORA

1030. SHUBH MOTORS PVT. LTD. (CIG1-CIG-01), KHASRA NO. 31/1, P.H. – 11, MOUZA – GHAT SIMARIYA, TEHSIL – SIHORA, DISTRICT – JABALPUR, MADHYA PRADESH,. - 483440
PH :9755595596, 9752546255.

SIMROL

1031. PATEL MOTORS (INDORE) PVT. LTD.
(BZV1-BZV-01), PLOT NO. 13-14, SANJAY GANDHI NAGAR, INDORE KHANDWA RD, GRAM - SIMROL, TEHSIL – MHOW, DISTRICT – INDORE, MADHYA PRADESH . - 452020
PH :07295-9977703512, 232228.

SUJALPUR

1032. PRIME CARS PVT. LTD. (3Q01-BJO-04), 363/1 DEHANI JOD, ASHTA ROAD, NEAR SOYA PLANT SHUJALPUR, MADHYA PRADESH - 465333
PH :8889913304 & 08889913341.

TARANA

1033. RUKMANI MOTORS (P) LTD (CHQ1-CHQ-01), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH . - 456665
PH :975551210.

TENDUKHEDA

1034. STANDARD AUTO AGENCIES (CRC1-CRC-01), KHASARA NO. 49/6, MOUZA – TENDUKHEDA, DISTRICT – NARSINGHPUR . - 470880
PH :7771014773.

TIKAMGARH

1035. ADINATH CARS PRIVATE LIMITED (RE02-RE-01), NEAR MAU CHUNGI NAKA, TIKAMGARH (M.P.) - 472001
PH :07683-247469.

UJJAIN

1036. RUKMANI MOTORS (P) LTD (3W02-3W-01), SURVEY NO. 59/3, DEWAS ROAD,UJJAIN - 456010
PH :0734-4052000.

UMARIA

1037. SHUBH MOTORS (5403-BVY-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661
PH :0761-6009333.

VIDISHA

1038. MY CAR PVT. LTD. (AY01-AY-01), SURVEY NO. 102, VILLAGE – RANGI, TEHSIL – VIDISHA, VIDISHA, (M.P) . - 464001
PH :7592-9755550071, 297067.

WAIDHEN

1039. CITY CARS (D702-JJ-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI ,MADHYA PRADESH - 486886
PH :07662-222021, 8889917774.

MAHARASHTRA

AHMEDNAGAR

1040. KANKARIYA AUTOMOBILES PVT LTD
(A501-A5-01), SARDA MILLS,SAVEDI ROAD,AHMEDNAGAR, MAHARASTRA - 414001
PH :0241-9403961540.

1041. KANKARIYA AUTOMOBILES PVT LTD
(A501-A5-05), MIDC, AHMEDNAGAR - 414003
PH :0241-2777131.

AJARA

1042. SAI SERVICE PVT. LTD. (CIR1-CIR-01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT – KOLHAPUR. - 416505
PH :02323-246046.

AKLUJ

1043. CHAVAN MOTORS DIVISION INDIA PVT. LTD.
(B102-RU-04), PLOT NO. 15/3-A, PANCHVATI STOP,MALINAGAR ROAD,AKLUJ - 413101
PH :02185-223033.

AKOLA

1044. KHANDELWAL AUTOWHEELS PVT. LTD.
(F101-F1-01), TIRUPATI CHAMBERS,CONVENT ROAD,AKOLA - 444005
PH :0724-2429404,2440409,2420061.

ALIBAUG

1045. SIMRAN MOTORS PVT. LTD. (7S01-3X-05), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE – VESHVI, ALIBAUG, DISTRICT – RAIGAD, MAHARASHTRA - 402201
PH :02141-226344.

AMBEGAON

1046. THE KOTHARI WHEELS (1906-AGA-04), SOHAM NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK HIGHWAY, A/P MANCHAR, TALUKA: AMBEGAON, DISTT: PUNE, MAHRASHTRA - 410503
PH :02132-223083/93.

AMRAVATI

1047. ASPA BANDSONS AUTO (P) LTD (F201-F2-01), SATURNA BADNERA ROAD,AMRAVATI,MAHARASTRA, - 444607
PH :0721-2510475/76/77.

1048. ASPA BANDSONS AUTO (P) LTD. (F201-F2-05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA. - 444607
PH :0721-2520085.

AURANGABAD

1049. AUTOMOTIVE MANUFACTURERS LTD.
(2102-21-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210
PH :0240-6640500/6640555.

1050. AUTOMOTIVE MANUFACTURERS LTD.
(2102-21-03), C-27,MIDC, CHIKALTHANA , N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006
PH :240-2484911.

1051. PAGARIYA AUTO PVT. LTD. (2103-21-01), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD - 431005
PH :0240-240665902.

1052. PAGARIYA AUTO PVT. LTD. (2103-21-05), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005
PH :9860999468.

1053. PAGARIYA AUTO PVT. LTD. (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001
PH :0240-6504141.

BADLAPUR

1054. PRAKASH AUTO PVT. LTD. (9O01-9O-01), SHOP NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRISHNA WATER SUPPLY, OPP. INDIAN OIL PETROL PUMP, MIDC ROAD, KATRAP, BADLAPUR (EAST) - 421503
PH :0251-9321352333.

BALLARPUR

1055. TRISTAR CARS (H302-ZH-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701
PH :--9272222412/13.

BARAMATI

1056. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-7R-01), BARAMATI- PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102
PH :02112-229005.

BARSHI

1057. CHAVAN MOTORS (BBA1-BBA-01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401
PH :2184-229666.

BEED

1058. PAGARIYA AUTO PVT. LTD. (V602-V6-01), GUT NO. 61, VILLAGE – GHOSAPURI, TALUKA AND DISTRICT – BEED, MAHARASHTRA . - 431122
PH :2256058/56/57.

BHANDARA

1059. AUTOMOTIVE MANUFACTURERS LTD. (2001-FG-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904
PH :07184-250542/251542.

BHIVANDI

1060. S K WHEELS PVT. LTD. (IX01-IX-02), SURVEY NO. 43/1E, VILLAGE SONALE, NH-8, MUMBAI-NASHIK HIGHWAY, BHIVANDI, THANE - 421302
PH :0252-2657484/9930545454/61768000.

BHOR

1061. SEHGAL AUTORIDERS PVT. LTD. (BSV1-BSV-01), GUT NO. 929/1, UTTROLI, BHOR, TALUKA – BHOR, DISTRICT – PUNE, MAHARASHTRA. - 412206
PH :8888881348, 8888881399.

BRAMHAPURI

1062. TRISTAR CARS PVT LTD (H302-TW-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206
PH :9272222406/7/8.

CHALISGAON

1063. MANRAJ MOTORS PVT LTD (AAE1-AAE-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA. - 424101
PH :02589229320.

CHANDRAPUR

1064. TRISTAR CARS PVT LTD (H302-H3-01), NR. HOTEL KUNDAN PLAZA,NAGPUR ROAD,CHANDRAPUR - 442401
PH :07172-9272222401/2.

1065. TRISTAR CARS PVT LTD (H302-H3-03), NAGPUR ROAD, CHANDRAPUR - 442401
PH :07172-9272222403/4.

CHANDWAD

1066. SHAAN CARS PRIVATE LIMITED (CODE NOT YET PROVIDED BY DD1--), 615/1/1B WING, ARIHANT PLAZA SHOPPING COMPLEX, MUMBAI AGRA HIGHWAY, CHANDWAD, DISTRICT – NASHIK . - 423101
PH :9075028780.

CHIPLUN

1067. JAGRUT MOTORS P. LTD. (9A01-9A-01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605
PH :02355-252238.

DAHANU

1068. SAI SERVICE PVT. LTD. (V901-TD-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602
PH :8975003138 /02528-225060/70/80/8975003140 ,.

DAPOLI

1069. JAGRUT MOTORS P. LTD. (G301-VG-06), AT/POST-DAPOLI, DAPOLI-KHED ROAD,DAPOLI.DIST RATANAGIRI. - 415712
PH :02358-267272,252238.

DHULE

1070. SEVA AUTOMOTIVE LTD. (P301-P3-01), GATE NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE - 424001
PH :02562-281128/29.

DINDORI

1071. AUTOMOTIVE MANUFACTURERS LTD. (AAF1-AAF-01), S.NO.753, NEAR PANDAV PETROL PUMP,NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202
PH :02557-222021.

DOMBIVALI

1072. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-JS-02), SURVEY NO.13, NEAR PIMPLESHWAR TEMPLE, OPP. MAHANAGAR CNG PUMP, KALYAN-SHILPHATA ROAD, MANGAON, SONARPADA, DOMBIVLI EAST. - 421203
PH :251-2449789,2445557/8.

DOMBIVILI

1073. AUTOMOTIVE MANUFACTURERS LTD. (3901-JS-02), PLOT NO. B-43, PHASE-1,DOMBIVALI INDUSTRIAL AREA, DOMBIVALI,DISTT-THANE, MAHARASHTRA, - 421201
PH :0251-2800492/4/5.

GADCHIROLI

1074. BARBATE AUTOMOTIVE (INDIA) PVT. LTD. (ARYA CARS) (ZK02-ZK-01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI , MAHARASTRA - 442702
PH :07132-232220.

GADINGALAJ

1075. SAI SERVICE PVT. LTD. (3802-DB-04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ - 416502
PH :02327-222239.

GANGAPUR

1076. PAGARIYA AUTO PVT. LTD. (2103-MC-03), E-16,WALUJ,AURANGABAD - 431001
PH :0240-2406617790.

GONDIA

1077. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2004-4C-02), ITI ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601
PH :07182-234567.

GUHAGAR

1078. JAGRUT MOTORS PVT. LTD. (BJV1-BJV-01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGHAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703
PH :9404923981.

HINGANGHAT

1079. SEVA AUTOMOTIVE PVT. LTD. (CDZ1-CDZ-01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, AJANTI, HINGANGHAT, TALUK – HINGANGHAT, DISTRICT – WARDHA, MAHARASHTRA. - 442301
PH :9689871099.

HUPARI

1080. SAI SERVICE PVT. LTD. (CIQ1-CIQ-01), GAT NO.925/8K/2, PLOT NO.7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT – KOLHAPUR. - 416203
PH :9923208425.

ICHALKARANJI

1081. SAI SERVICE PVT. LTD. (4D01-4D-01), GATE NO. 107,KOLHAPUR ROAD,KABNOOR,ICHALKARANJI - 416122
PH :0230-2425282.

INDAPUR

1082. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-NQ-02), STATE HIGHWAY NO. 151, INDAPUR - 412219
PH :02112-2117222500.

ISLAMPUR

1083. CHOWGULE INDUSTRIES PVT. LTD. (PJ02-PJ-01), GATE NO.905/A/3, NEAR BOMBAY RAYAN, PUNE-BANGALOE HIGHWAY (NH-4), ISLAMPUR TALUKA : WALVA, DIST:SANGLI - 415409
PH :225757.

JALGAON

1084. MANRAJ MOTORS PVT LTD (C401-C4-01), AJINTA ROAD, MIDC INDL AREA, JALGAON - 425003
PH :0257-2212122/23/24.

JALNA

1085. AUTOMOTIVE MANUFACTURERS LTD. (2102-BC-02), PLOT NO. 4 & 5 , CTS NO. 11427/4-A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA, - 431203
PH :02482-221143.

JATH

1086. CHOWGULE INDUSTRIES PVT. LTD. (J102-BLX-05), PLOT NO. 12, SAWANT ESTATE, MORE COLONY, OPP. CATTLE BAZAR, SATARA ROAD, JATH, DISTRICT SANGLI, MAHARASHTRA - 416404
PH :02341 -246598.

JAYSINGPUR

1087. SAI SERVICE PVT. LTD. (ASA1-ASA-01), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, A/P UDGAON(JAYSINGHPUR), TALUKA:SHIROL, DIST: KOLHAPUR - 416134
PH :02322-225959.

KALWAN

1088. SHAAN CARS PRIVATE LIMITED (BNW1-BNW-01), GAT NO. 189, PLOT NO. 7, MALEGAON ROAD, A/P KALWAN, NASHIK. - 423501
PH :8888846450.

KALYAN

1089. AHER AUTOPRIME LLP (CFV1-CFV-01), SURVEY NO.53 & 54, HIND MILL, OPPOSITE STATE BANK OF INDIA, ANDHARWADI ROAD, KALYAN, MUMBAI - 421301
PH :0251-8422871721.

KANKAVALI

1090. JAGRUT MOTORS P. LTD. (G301-V7-05), PLOT NO.32-33,SURVEY NO.-1886/1,,MUMBAI-GOA HIGHWAY
(NH-17),JANAVLI,KANKAVLI,MAHARASHTRA - 416002
PH :02367-232872/203977 , (91)9881467572.

KAPHOLI

1091. S K WHEELS PVT LTD (0515-9C-02), PLOT NO. 42,N-47 , KAPHOLI INDUSTRIAL AREA,MUMBAI -PUNE HIGHWAY,MUMBAI - 410203
PH :02192-266243/266470,02192-266243.

KARAD

1092. CHOWGULE INDUSTRIES PVT. LTD. (F303-4E-02), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, A/P MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110
PH :02164-660000.

KARJAT

1093. SIMRAN MOTORS PVT. LTD. (7S01-TA-03), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD - 410201
PH :8108194564.

KAVATE MAHANKAL

1094. CHOWGULE INDUSTRIES PVT. LTD. (SC02-SC-01), MAHANKALI BAAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 416405
PH :02341-222102.

KHAMGAON

1095. MANRAJ MOTORS PVT LTD. (BXU1-BXU-01), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON , MAHARASHTRA - 444303
PH :07263-250002/3.

KHARGHAR

1096. EXCELL AUTOVISTA PVT LTD (AAC1-AAC-01), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210
PH :022-65999111.

KOLHAPUR

1097. SAI SERVICE PVT. LTD. (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR - 416008
PH :0231-2661676.

1098. SAI SERVICE PVT. LTD. (3803-38-01), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS,NH-4, KOLHAPUR - 416122
PH :0230-2468376.

1099. SAI SERVICE PVT. LTD. (3802-38-06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA. - 416012
PH :0231-2329495.

KONGAON

1100. PRAKASH AUTO PVT. LTD. (3903-AZ-02), SURVEY NO.126/127,98/38,AT & POST KONGAON, - 421302
PH :0252-2280264.

KUDAL

1101. JAGRUT MOTORS PVT. LTD. (9B01-9B-01), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA – KUDAL, DISTRICT – SINDUDURG, MAHARASHTRA - 416520
PH :02362-202423.

LASALGAON

1102. SHAAN CARS PRIVATE LIMITED (BZM1-BZM-01), PLOT NO. 337, LASALGAON MAIN ROAD, LASALGAON, TALUKA – NANDGAON, DISTRICT – NASHIK. - 422306
PH :8888846450.

LATUR

1103. AUTOMOTIVE MANUFACTURERS LTD. (V801-V8-02), PLOT NO. 28, 29, 30, SURVEY NO. 36, VARVATTI VILLAGE, LATUR - BARSHI ROAD, LATUR - 413512
PH :02382-609111/609222.

1104. AUTOMOTIVE MANUFACTURERS LTD. (V801-V8-01), CITY SURVEY NO. 2960, NANDED ROAD, OPP. TIRUPATHI LODGE, LATUR - 413512
PH :02382-661909.

LONAVALA

1105. SEHGAL AUTORIDERS PVT. LTD. (CGA1-CGA-01), GATE NO. 120/1, VILLAGE – WAKSAI, TALUKA – MAVAL, LUNAVALA, DISTRICT – PUNE, MAHARASHTRA. - 410405
PH :02114- 282600.

MAHAD

1106. SIMRAN MOTORS PVT. LTD. (7S01-TX-04), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301
PH :02145-223123.

MALEGAON

1107. SHAAN CARS PRIVATE LIMITED (3703-FF-02), PLOT NO. 572/81,CHANDANPURI SHIVAR,OLD MUMBAI, AGRA ROAD, DIST- NASIK,MALEGAON - 423203
PH :02554-237200/237201.

MANGAON

1108. SIMRAN MOTORS PVT. LTD. (BAM1-BAM-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD, MAHRASTHRA. - 402104
PH :02140-261118.

MANMAD

1109. SHAAN CARS PRIVATE LIMITED (BNX1-BNX-01), GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4, NANDGAON ROAD, MANMAD. - 423104
PH :8888846450.

MANOR

1110. SAI SERVICE PVT. LTD. (CRE1-CRE-01), GUT NO. 37, NEAR MSEB POWER STATION, PALGHAR MANOR ROAD, AT POST – TAKVAHAL, DISTRICT – PALGHAR, MANOR. - 401403
PH :9167980005.

MARCEL

1111. SAI POINT CARS PVT. LTD. (CODE NOT YET PROVIDED BY DD1--), SURVEY NO. 62/1, C/O IOC PETROL PUMP, SAI NAGAR, MARCEL, GOA. - 403107
PH :2288900.

MIRAJ

1112. CHOWGULE INDUSTRIES PVT. LTD. (J102-SD-03), 42C , OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410
PH :0233-2643221, 22.

MUMBAI

1113. EXCELL AUTOVISTA PVT LTD (0510-05-01), RESHAM SINGH COMPOUND,CST ROAD,KALINA, SANTACRUZ EAST,MUMBAI - 400098
PH :022-67743888,26653242, 43, 46.

1114. SAH & SANGHI AUTO AGENCIES PVT.LTD (0505-05-01), PRAKASH MILLS COMPOUND,OFF. GLOBE MILLS PASSAGE,WORLI,MUMBAI - 400013
PH :022-24925452/53/54, 24965379/80,4925452, 53.

1115. SAI SERVICE PVT. LTD. (0504-05-01), 462 SENAPATI BAPAT MARG,WORLI NAKA,LOWER PAREL,MUMBAI - 400013
PH :022-'43030404/43030400.

1116. SAI SERVICE PVT. LTD. (0504-05-02), ARVIND CHAMBERS,194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069
PH :022-43030606 /600,8356242,.

1117. SAI SERVICE PVT. LTD. (0504-05-04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND,DATTA PADA ROAD,BORIVILI (EAST),MUMBAI - 400066
PH :022-'4303 0111/103/104/118/120,28707000.

1118. VITESSE TRADING LIMITED (0503-05-01), SHAH INDL.ESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058
PH :022-26730787/26730280/26730296,6367018.

1119. VITESSE TRADING LIMITED (0503-05-02), 77 AF PALKY GULLY,OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025
PH :022-24229747,4223933.

1120. AUTOMOTIVE MANUFACTURERS LTD. (3901-05-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST) , MUMBAI - 400070
PH :22-61563734 / 61563744 / 61563715.

1121. FORT POINT (0521-05-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAI - 400096
PH :022-41157777, 42432121/2131,.

1122. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA - 400067
PH :022-41099999.

1123. VITESSE PVT. LTD. (0503-05-07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067
PH :022-28674753/28674754,24229747.

1124. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-03), C/O VARUN STEEL INDUSTRIES,AAM TOOL COMPOUND,BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI - 400010
PH :022-64550650.

1125. K.T.S. AUTOMOTORS PVT. LTD. (0582-05-02), C/O-COZY INDIA, 5, HANSRAJ LANE, BYCULLA, MUMBAI - 400027
PH :022-23751234,23752301/2/3/5/6.

1126. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-02), PLOT NO. 82-ABCD, KANDIVALI INDUSTRIAL ESTATE, OPP. CHARKOP POST OFFICE, CHARKOP, KANDIVALI (WEST), MUMBAI, MAHARASHTRA. - 400067
PH :022-9870934444, 41099999.

1127. KIRAN MOTORS MAHARASHTRA (05A1-05-01), PLOT NO. B-62/41A, SHREYAS INDUSTRIAL, OFF. NEW LINK ROAD, ANDHERI (WEST), MUMBAI. - 400053
PH :022-42570000, 7700934505.

MURBAD

1128. PRAKASH AUTO PVT. LTD. (BYO1-BYO-01), SURVEY NO. 61/2, KALYAN - MURBAD ROAD, VILLAGE – DAHAGAON, TALUKA – MURBAD, DISTRICT – THANE, MAHARASHTRA. - 421605
PH :9028342725.

MURGUD

1129. SAI SERVICE PVT. LTD. (AWA1-AWA-01), R.S. NO. 188/4, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219
PH :02325- 265553.

NAGPUR

1130. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD,NAGPUR - 440035
PH :0712-6688333.

1131. AUTOMOTIVE MANUFACTURERS LTD. (2001-20-02), 575 KAMPTEE ROAD,NAGPUR-26,, - 440026
PH :0712-2630550/6662000/6662001/2652551/2648341 .

1132. SEVA AUTOMOTIVE LTD. (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR - 440023
PH :0712-2500231/6652800.

1133. SEVA AUTOMOTIVE LTD. (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA, - 440016
PH :07104-666444.

1134. AUTOMOTIVE MANUFACURERS PVT. LTD (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001
PH :0712-6555013/14.

1135. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2007-20-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASTRA - 440018
PH :0712-6664777.

1136. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2007-20-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASTRA. - 441202
PH :8888819524.

NANDED

1137. SEVA AUTOMOTIVE LTD. (6801-68-01), NANDED HYDERABAD ROAD, NANDED - 431604
PH :02462-241599.

NANDURBAR

1138. SEVA AUTOMOTIVE LTD. (P301-KW-02), PLOT NO.- 3& 4, BANSITAL NAGAR, NEAR HOTEL KARAN GARDEN HOWFULLY BYE PASS ROAD, NANDURBAR,DIST.- SATARA. - 425412
PH :02564-233000.

NARAYANGAON

1139. THE KOTHARI WHEELS (1906-FV-02), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504
PH :02132-244002.

NASHIK

1140. AUTOMOTIVE MANUFACTURERS LTD. (3702-37-01), P-1-12,ADDITIONAL NASIK INDL. AREA,AMBAD,NASIK - 422010
PH :0253-6636300/6636329/312/314/317.

1141. SEVA AUTOMOTIVE LTD. (3701-37-01), PLOT NO. X - 46,MIDC. AMBAD, NASIK - 422010
PH :0253-2386537.

1142. SHAAN CARS PRIVATE LIMITED (3703-37-01), E-3 MIDC AREA,SATPUR , NASIK,MAHARASHTRA - 422007
PH :0253-2351372.

1143. SEVA AUTOMOTIVE PVT LTD (3701-37-07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006
PH :0253-6604444.

1144. SEVA AUTOMOTIVES PVT LTD (3701-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004
PH :0253-6654444.

NASIK

1145. SHAAN CARS PRIVATE LIMITED (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011
PH :0253-2236080.

1146. SEVA AUTOMOTIVE LTD. (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010
PH :0253-6642444.

NAVI MUMBAI

1147. AUTOMOTIVE MANUFACTURERS LTD. (3901-9K-01), D-234 MIDC TTC INDL AREA,SHIRVANE NERUL,NEW BOMBAY, - 400706
PH :022-40183900/40183923/24/28,7614603.

1148. S K WHEELS PVT LTD (0515-9K-01), D-42,TTC INDUSTRIAL AREA, MIDC, TURBHE,NAVI MUMBAI - 400075
PH :022-61222121.

1149. EXCELL AUTOVISTA PVT LTD (AAC1-9K-02), PLOT NO-9,MIDC,NAVADE,TALOJA, TAL-PANVEL ,DIST-RAIGAD - 410208
PH :022-27405555.

1150. SIMRAN MOTORS PVT. LTD. (3913-9K-01), PLOT NO. PAP-R-380, MIDC COMMERCIAL PLOT, TTC MIDC RABALE, NAVI MUMBAI . - 400701
PH :62359943/4/5.

NEVASA

1151. KANKARIYA AUTOMOBILES PVT. LTD. (BSU1-BSU-01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA – NEVASA, DISTRICT – AHMEDNAGAR. - 414603
PH :9527227136.

NIPHAD

1152. SHAAN CARS PVT. LTD. (COX1-COX-01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT – NASHIK, MAHARASHTRA.
PH :9075028780.

OSMANABAD

1153. CHAVAN MOTORS DIVISION INDIA PVT. LTD. (B102-LW-03), PLOT NO. 1, TAWADE COMPLEX,PRERANA NAGAR,OSMANABAD, - 413501
PH :02472-228666.

PALGHAR

1154. SAI SERVICE PVT. LTD. (TE01-TE-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404
PH :2525-8308806722.

PALUS

1155. CHOWGULE INDUSTRIES PVT. LTD. (J102-0Z-04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308
PH :02346-229021.

PANDHARPUR

1156. CHAVAN MOTORS DIVISION INDIA PVT. LTD. (B102-0H-05), GAT NO.56, ESABAVI, PUNE ROAD, TAL:PANDERPUR, SOLAPUR - 413001
PH :02186-228666.

PANVEL

1157. SIMRAN MOTORS PVT. LTD. (7S01-7S-01), PLOT2-8,SECTOR-15, OPP. HOTEL GARDEN,OLD MUMBAI PUNE HIGHWAY,PANVEL - 410206
PH :022-27488000,27462605, 27490365.

1158. AUTOMOTIVE MANUFACTURERS LTD. (3901-7S-03), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206
PH :09272237071 TO 94,.

1159. K.T.S. AUTOMOTORS PVT. LTD. (0582-7S-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207
PH :9420611356/94206611326.

PARATWADA

1160. ASPA BANDSONS AUTO PVT. LTD. (CFZ1-CFZ-01), SURVEY NO. 26/4A, RAMGAON, AMRAVATI PARATWADA ROAD, NEAR JAWARDI PHATA, PARATWADA TALUKA – ACHALPUR, DISTRICT – AMRAVATI .
PH :8888897629, 9689914030.

PATAS

1161. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-PR-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106
PH :02111-225009.

PEN

1162. SIMRAN MOTORS (9I01-9I-01), AT POST – VADKHAL NAKA, NH-17, MUMBAI GOA HIGHWAY, TAL – PEN, DISTT. RAIGAD - 402107
PH :02143-269073.

PHALTAN

1163. CHOWGULE INDUSTRIES PVT. LTD. (KH02-KH-01), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523
PH :02161-200455.

PIMPLEGAON

1164. AUTOMOTIVE MANUFACURERS PVT LTD (BAY1-BAY-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202
PH :02550-252808.

PUNE

1165. ACE KUDALE CAR PVT. LTD. (1910-19-01), 36/2C/1, MANRAJ BUDRUK, PUNE-SOLHAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE - 412201
PH :020-30456441/447/413.

1166. CHOWGULE INDUSTRIES PVT. LTD.
(1908-19-02), S.NO. 53,PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411046
PH :020-26959460; 66786200.

1167. CHOWGULE INDUSTRIES PVT. LTD.
(1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046
PH :020-66803555.

1168. MY CAR (PUNE) PVT LTD (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057
PH :020-3988333/39810920.

1169. SAI SERVICE PVT. LTD. (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE - 411012
PH :20-46404440/48.

1170. SAI SERVICE PVT. LTD. (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004
PH :20-41401141/40.

1171. SAI SERVICE PVT. LTD. (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046
PH :020-41402222/240/241/242/243.

1172. SAI SERVICE PVT. LTD. (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019
PH :020-46605999/95.

1173. THE KOTHARI WHEELS (1906-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039
PH :020-66874100.

1174. WONDER CARS (P) LTD (1903-19-02), 12, NPS LINES,SOLAPUR ROAD,,OLD POOL GATE,CAMP, PUNE - 411001
PH :020- 26332934/35.

1175. SEHGAL AUTORIDERS PVT. LTD. (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021
PH :020-8308304444/41463625/41463627.

1176. SAI SERVICE PVT. LTD. (1901-19-06), SURVEY NO.244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057
PH :020-204200700.

1177. ACE KUDALE CAR PVT. LTD. (1910-19-02), ATLAS TANKS VESSELS, SR. NO 232/2, PUNE-NASIK ROAD, KHANDOBAMAL, BHOSARI, PUNE. - 411039
PH :020-2030662009.

1178. THE KOTHARI WHEELS (1906-19-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019
PH :020-66352600.

1179. MAHALAXMI AUTOMOTIVES PVT. LTD.
(1912-19-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036
PH :020-30217000,67270000.

1180. WONDER CARS PVT. LTD. (1903-19-03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. - 411018
PH :020-27130171/2/3/8.

1181. SAI SERVICE PVT. LTD. (1901-19-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. - 411048
PH :020-71727001/2/3/4/5/6/7.

1182. MAHALAXMI AUTOMOTIVES PVT LTD
(1912-19-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016
PH :020-67290018/17.

1183. CHOWGULE INDUSTRIES PVT. LTD.
(1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033
PH :020-67915700.

1184. SAI SERVICE PVT. LTD. (1901-19-08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT - PUNE, MAHARASHTRA.
PH :020-24391399.

1185. THE KOTHARI WHEELS (1906-19-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. - 411028
PH :020-26871020, 8411002011.

1186. CHOWGULE INDUSTRIES PVT. LTD.
(1908-19-06), SR. NO.- 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE- SATARA ROAD, PUNE. - 411009
PH :020-67273200.

1187. EXCELL AUTOVISTA PVT LTD (1917-19-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE – WADKI, TAL – HAVELI, DIST PUNE. - 412308
PH :9320357300.

1188. THE KOTHARI WHEELS (1906-19-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014
PH :020-27030400/444.

1189. ACE KUDALE CAR PVT. LTD. (1910-19-03), SURVEY NO. 272, 1/4, NEAR MOSHI TOLL PLAZA, MOSHI GAON, TALUKA – HAVELI, DISTRICT – PUNE. - 412105
PH :020-9423123665.

1190. SUMANKIRTI CARS PVT. LTD. (1915-19-02), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUMM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045
PH :66860606.

1191. MY CAR (PUNE) PVT LTD (1918-19-01), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE – KURULI, TALUKA – KHED, CHAKAN, DISTRICT – PUNE. - 410501
PH :9373506916.

1192. WONDER CARS PVT. LTD. (1903-19-04), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA – MULSHI, DANGE CHOWK, PUNE – 411 033. - 411033
PH :9850094151.

RAHATA (SHIRDI)

1193. KANKARIYA AUTOMOBILES PVT LTD
(ZV03-ZV-01), SHIRDI ROAD, SAKORI, RAHATA, - 423107
PH :2423-243541.

RAJAPUR

1194. JAGRUT MOTORS P. LTD. (AHA1-AHA-01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702
PH :02355-252238.

RAJGURUNAGAR

1195. MY CAR (PUNE) PVT. LTD. (CBZ1-CBZ-01), SURVEY NO.94, SANDBHORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505
PH :9326530075.

RATNAGIRI

1196. JAGRUT MOTORS P. LTD. (G301-G3-01), D-25,,MIDC MIRJOLE,MAHARASTRA,RATNAGIRI - 415639
PH :02352-228380, 28380.

SANGAMNER

1197. SHAAN CARS PRIVATE LIMITED (HE03-HE-01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER , DIST AHMEDNAGAR, MAHARASHTRA - 422605
PH :2425-259197, 8888846450.

SANGLI

1198. CHOWGULE INDUSTRIES PVT. LTD.
(J102-J1-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416
PH :0233-6631300.

SASWAD

1199. CHOWGULE INDUSTRIES PVT. LTD.
(1908-PH-03), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE - 412301
PH :02115-224450; 225210.

SATARA

1200. CHOWGULE INDUSTRIES PVT. LTD.
(F303-F3-01), PLOT NO. B-2,OLD MIDC,SATARA - 415002
PH :02162-245941/2/3.

SAVNER

1201. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD.) (BTJ1-BTJ-01), PLOT NO.2, MADANE LAYOUT, MOUZA GUJARKHEDI, NR. INDIAN PETROL PUMP, NAGPUR ROAD, SAVNER DISTT. NAGPUR, - 441107
PH :8888859502.

SAWANTWADI

1202. JAGRUT MOTORS PVT. LTD. (BBL1-BBL-01), SHIVSHAMBHO APARTMENT, 1190, A/P KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. - 416510
PH :9765000872, 9823564372.

SHAHAPUR

1203. SHIVAM AUTO ZONE (I) PVT. LTD.
(BZU1-BZU-01), DR. DESHPANDE COMPOUND, NEAR BHATSA COLONY, VILLAGE – GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT – THANE, MAHARASHTRA - 421601
PH :8082111222.

SHIRPUR

1204. SEVA AUTOMOTIVE PVT. LTD. (FE01-FE-01), SR. NO. 114, PLOT NO. 5, AMODE, TALUKA – SHIRPUR, DISTRICT – DHULE
PH :9960090613.

SHIRUR

1205. MAHALAXMI AUTOMOTIVES PVT. LTD.
(1912-ZD-02), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHTRA - 412210
PH :02138-615000.

SHIRWAL

1206. CHOWGULE INDUSTRIES PVT. LTD.
(BSD1-BSD-01), GAT NO.175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801
PH :02169-244044.

SHRIRAMPUR

1207. KANKARIYA AUTOMOBILES PVT LTD
(LV03-LV-01), S.NO.139/1/3, NEAR NAKA NO.4,
SANGAMNER ROAD, SHRIRAMPUR DISTT.
AHMEDNAGAR - 413709
PH :02422-210264.

SILLOD

1208. PAGARIYA AUTO PVT. LTD. (2103-ZG-04), PLOT
NO. 19/20, SURVEY NO. 386, AURANGABAD
NAKA, SILLOD, AURANGABAD - 431112
PH :-9860999468.

SINNAR

1209. SHAAN CARS PRIVATE LIMITED (3703-FU-03),
A-24, MIDC AREA MALEGAON,SINNAR TAL-
SINNAR,, - 422103
PH :02551-230300.

SOLAPUR

1210. CHAVAN MOTORS DIVISION INDIA PVT. LTD.
(B102-B1-02), 150, AKALKOT ROAD,OPP. SVCS
HIGH SCHOOL,SOLAPUR, - 413006
PH :217-2606666.

1211. CHAVAN MOTORS DIVISION INDIA PVT. LTD.
(B102-B1-01), 18,39, INDUSTRIAL
ESTATE,HOTAGI ROAD,SOLAPUR, - 413224
PH :0217-2378888, 2373999.

TALASARI

1212. SHIVAM AUTO ZONE (I) PVT. LTD. (BIN1-BIN-01),
SURVEY NO. 191/1 PLOT NO. 5, AT-POST –
VADAVALI, NH-8, TALASARI, THANE,
MAHARASHTRA - 401606
PH :02521-220777.

THANE

1213. FORT POINT (3906-39-01), KOTHARI
WAREHOUSE NO. 111,POKHRAN ROAD NO.
11,MANPADA, CHATALSAR,THANE - 400607
PH :022-41157777, 41515300,25897170.

1214. NAVNIT MOTORS LTD (3908-39-02), B R T PLOT
,THANE (W) ,MAHARASHTRA - 400607
PH :022-66066666.

1215. PARAMOUNT WHEELS PVT. LTD. (3911-39-01),
OPP. PREMA LAXMAN SCHOLL. PANKERPADA,
MIRAROAD(E), DIST: THANE - 401107
PH :022- 42933944/45/51/52/53.

1216. PARAMOUNT WHEELS PVT. LTD. (3911-39-03),
B-2, MIDC, MIRA ROAD, OFF NH-8, THANE. -
401107
PH :022-9004999360.

TITWALA

1217. PRAKASH AUTO PVT. LTD. (BYP1-BYP-01),
SHOP NO. 1, SURVEY NO. 23/2, GOVELI –
TITWALA ROAD, VILLAGE – GHOTSAI, TITWALA,
TALUKA – KALYAN, DISTRICT – THANE,
MAHARASHTRA . - 421605
PH :0251-3240040 ,9960023999.

ULHASNAGAR

1218. PRAKASH AUTO PVT. LTD. (3903-39-01), U
NO-3,SHEET NO. 30,VITHALWADI STATION
ROAD, ULHASNAGAR - 421003
PH :0251-3228525,/3257934,2561582.

VADUJ

1219. CHOWGULE INDUSTRIES PVT. LTD.
(F303-GQ-03), KALEVASTI, VADUJ DAHIWADI
ROAD , VADUJ - 415506
PH :02161-232323/232030.

VAIJAPUR

1220. PAGARIYA AUTO PVT. LTD. (BNR1-BNR-01),
NEAR SUBHASH BUNGLOW, STATION ROAD,
VAIJAPUR, AURANGABAD. - 423701
PH :9860999468.

VASAI

1221. SAI SERVICE PVT. LTD. (0504-V9-03), C/O
PRASHANTI INVESTMENT LTD.,NEAR GAODEVI
TEMPLE, VILLAGE SATIVILI,DISTT. THANE -
401208
PH :0250-9552590086 /87 /
0250-2480583/2481474,912455685, 453583.

1222. SAI SERVICE PVT. LTD. (V901-V9-01),
ANDRADESH BHAVAN, SURVEY #27 A,NEAR
UMELA PHATAK, VASAI (WEST), DIST. THANE,
MAHARASTRA - 401202
PH :88050229862 / 9552527214,.

VASIND

1223. SHIVAM AUTO ZONE (I) PVT. LTD.
(BZT1-BZT-01), PARDI NO.03, OLD AGRA ROAD,
NEXT TO GAJANAN PLAZA, VILLAGE –
VASHIND, TALUKA – SHAHPUR, DISTRICT –
THANE. - 421601
PH :7718893483.

VIRAR

1224. SAI SERVICE PVT. LTD. (V901-PG-02), SURVEY
NO.16, AGASHI ROAD, PADMAN NAGAR,
VIRAR-WEST, DISTT. PALGHAR. - 401301
PH :8605000906 / 0250-2584105 / 2584015,.

VITA

1225. CHOWGULE INDUSTRIES PVT. LTD.
(BSE1-BSE-01), S NO. 900, HISSA NO. 1,2,3/1/2,
SANGLI VITA ROAD, VITA, TALUKA –
KHANAPUR, DISTRICT – SANGLI,
MAHARASHTRA - 415311
PH :6631350.

WADA

1226. PARAMOUNT WHEELS PVT. LTD.
(BXD1-BXD-01), SURVEY NO.133/7/1, WADA
BHIWANDI ROAD, VILLAGE GANDARE, POST
KONE, TALUKA WADA, DISTT. PALGHAR
(MAHARASHTRA) - 421303
PH :02526- 8411933992.

WAGHOLI

1227. SAI SERVICE PVT. LTD. (1901-AB-04), GAT NO
2406/1440, VILLAGE- WAGHOLI,TAL- HAVELI,
DIST- PUNE - 412207
PH :020-46403333/31/32.

WAI

1228. CHOWGULE INDUSTRIES PVT. LTD.
(BYC1-BYC-01), GAT NO. 407, A/P
SHENDURJANE, MIDC ROAD, NEAR HOTEL
GANDHARVA, OPP. DHOM LEFT CANAL, TAL –
WAI, DISTT. SATARA - 412803
PH :8805095200, 880519820, 9922992887.

WANI

1229. HIMALAYA CARS (4M01-0I-02), YASH LAWNS,
COLLEGE/NAGPUR ROAD, TALUKA:WANI,
DISTRICT-YAVATMAL, MAHARASHTRA - 445304
PH :07239-228888.

WARANANAGAR

1230. SAI SERVICE PVT. LTD. (CRB1-CRB-01), GAT
NO.:1122/A, KODOLI, TALUKA: PANHALA, DIST.
KOLHAPUR - 416114
PH :9923208422.

WARDHA

1231. SEVA AUTOMOTIVE LTD. (2002-AC-02), GOPURI
CHOWK, ,OPP. BANK OF INDIA COLONY,
NAGPUR ROAD, WARDHA - 442001
PH :07152-253545/253525.

WARUD

1232. ASPA BANDSONS AUTO (P) LTD (F201-UG-04),
SURVEY NO. 50/3, SETURJANAGHAT ROAD,
TALUKA: WARUD, DIST. AMRAWATI - 444906
PH :07229-232888.

WASHIM

1233. ASPA BANDSONS AUTO (P) LTD (F201-9D-02),
NEAR RAILWAY CROSSING,HIGOLI
ROAD,WASHIM, - 444505
PH :07252-233999.

YAVATMAL

1234. HIMALAYA CARS (4M01-4M-01), OPPOSITE
RAUT PETROL PUMP, DARWHA ROAD,
YAVATMAL, MAHARASHTRA - 445001
PH :07232-249992.

YEOLA

1235. SEVA AUTOMOTIVES PVT LTD (BST1-BST-01),
GAT NO. 65-A, PLOT NO. 41, AHMED
NAGAR-MANMAD ROAD, NEAR TEHSIL OFFICE,
YEOLA, TALUKA – YEOLA, DISTRICT – NASHIK,
MAHARASHTARA. - 423401
PH :259-266166.

YEWAT

1236. MAHALAXMI AUTOMOTIVES PVT. LTD.
(AZA1-AZA-01), SOLAPUR PUNE NATIONAL
HIGHWAY, SAHAJAPUR, YEWAT, TALUKA:
DAUND, DISTT: PUNE (MAHARASHTRA). -
412202
PH :9881254892.

MANIPUR

CHANDEL

1237. EASTERN MOTORS (CSB1-CSB-01), KAKCHING
LAMKHAI, AH1 (INDO BURMA ROAD), CHANDEL
(MANIPUR) - 795103
PH :8415945626.

CHURACHANDPUR

1238. EASTERN MOTORS (BBE1-BBE-01), HMUIA
VENG,TEDDIM ROAD, CHURACHANDPUR,
MANIPUR - 795128
PH :03874235969, 9862555472.

IMPHAL

1239. EASTERN MOTORS (7401-74-01),
CHINGMEIRONG EAST, IMPHAL, MANIPUR
PH :0385-330856, 226816/2056962.

1240. EASTERN MOTORS (7401-74-02), NH,39,
CHINGMEIRONG, WEST, IMPHAL. - 795010
PH :0385-2422152.

THOUBAL

1241. EASTERN MOTORS (BJL1-BJL-01), THOUBAL
ATHOKPAM KHUNOU, NEAR D.C. OFFICE
COMPLEX, THOUBAL, MANIPUR - 795138
PH :3848-9862662225.

MEGHALAYA

BHOIRYMBONG

1242. RANI MOTORS (CHP1-CHP-01), VILLAGE –
UMROI MADAN, DISTRICT – RI BHOI,
MEGHALAYA. - 793103
PH :9774478281, 9856007619.

JOWAI

1243. RANI MOTORS (3I01-3I-01), LADTHADLABHO,
OPP. PWD OFFICE, JOWAI, DIST - JAINTIA
HILLS, MEGHALAYA - 793150
PH :03652-204025.

KHLIEHRIAT

1244. BANALARI WORLD CARS (8502-PZ-03),
JOWAI-SICHAR ROAD, MEGHALAYA,
KHLIEHRIAT - 793150
PH :3655-9856299493.

MAWNGAP

1245. BANALARI WORLD CARS (CBK1-CBK-01),
LAITPYNTER, SHILLONG NONGTION ROAD,
MAWNGAP, DIST.-EAST KHASI HILLS,
MEGHALAYA. - 793121
PH :9774537902, 9615101743.

NONGPOH

1246. RANI MOTORS (8501-TN-05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGHPOH, RIBHOI DISTT. - 793102
PH :03662-977401910/9774012380.

NONGSTOIN

1247. RANI MOTORS (8501-0P-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119
PH :9863022955.

SHILLONG

1248. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017
PH :364-09436111128/2575045.

1249. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014
PH :0364-241581.

1250. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021
PH :364-2535189, 2231287.

TURA

1251. RANI MOTORS (CLF1-CLF-01), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101
PH :7005072910.

UMSAW

1252. BANALARI WORLD CARS (CHZ1-CHZ-01), UMSAWKHWAN RAID MAWBUH, MYLLIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA. - 793123
PH :8974818017.

MIZORAM

AIZAWL

1253. G.I.G. MOTORS (9103-91-01), EDENTHAR, AIZAWL, MIZORAM. - 796001
PH :8258998038.

NAGALAND

DIMAPUR

1254. PROGRESSIVE MOTORS (3201-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112
PH :03862-30987, 30992.

KOHIMA

1255. PROGRESSIVE MOTORS (3201-4N-02), NH-39, NEAR INDIAN OIL PETROL PUMP, BELOW NAGA HOSPITAL, KOHIMA. - 797001
PH :03862-230987.

MOKOKCHUNG

1256. PROGRESSIVE MOTORS (CGL1-CGL-01), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601
PH :9643998612.

ORISSA

ANANDAPUR

1257. JYOTE MOTORS PVT LTD. (CIU2-CIU-01), KHATA NO. 246/407, PLOT NO. 76, P.S. – GHASIPURA, MOUZA – SUDUSUDIA, DISTRICT – KEONJHAR, ANANDPUR, ODISHA . - 758021
PH :9776615001.

ANGUL

1258. ODYSSEY MOTORS PVT. LTD. (W101-W1-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145
PH :06764-221079, 221669.

BALASORE

1259. JYOTE MOTORS PVT LTD (L501-L5-01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST. -BALASORE - 756019
PH :6782-2302200.

BARGARH

1260. ODYSSEY MOTORS (P) LTD (D401-SJ-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028
PH :06646 -246533.

BARIPADA

1261. JYOTE MOTORS PVT LTD (L501-RQ-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001
PH :6792-211200.

BERHAMPUR

1262. SKY AUTOMOBILES (E203-E2-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002
PH :7381266000.

1263. SKY AUTOMOBILES (E203-E2-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE – KONISI, BERHAMPORE, GANJAM, ODISHA. - 761008
PH :7381266000.

BHADRAK

1264. JYOTE MOTORS PVT LTD. (IZ01-IZ-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK , ODISHA - 756101
PH :9776615001.

BHAVANIPATNA

1265. LEGEND CARS PVT. LTD. (SW01-TB-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001
PH :06670 -233345.

BHUBANESWAR

1266. JYOTE MOTORS PVT LTD (0402-04-01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003
PH :0674-2436829.

1267. NARAYANI MOTORS PVT LTD (0403-04-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006
PH :0674-572872, 873.

1268. SKY AUTOMOBILES (0404-04-01), PLOT NO. -435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR, - 751022
PH :674-2725912/2725992.

1269. NARAYANI MOTORS PVT LTD (0403-04-02), PLOT NO 56 AND 57,RASULGARH, BHUBANESHWAR, ODISHA - 751010
PH :0674-2588476.

1270. JYOTE MOTORS PVT LTD (0402-04-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010
PH :7064499362.

BOLANGIR

1271. ODYSSEY MOTORS (P) LTD (D401-MW-03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001
PH :6652-230031.

CHANDIKHOLE

1272. SKY AUTOMOBILES (BXL1-BXL-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA, - 755044
PH :9583000001.

CUTTACK

1273. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011
PH :0671-2686527.

DEOGARH

1274. ORBIT MOTORS (CBB1-CBB-01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA - 768108
PH :9437061030.

DHENKENAL

1275. SKY AUTOMOBILES (6701-4P-04), PLOT NO-136/1103, KATHAGARA , NEARASSAM OIL, NH-42, DHENKANAL. - 759001
PH :06762-243048-49.

JAJPUR

1276. SKY AUTOMOBILES (6701-RZ-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019
PH :06726-9583104012.

JALESWAR

1277. JYOTE MOTORS PVT. LTD. (BXP1-BXP-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST.- BALASORE, ODISHA. - 756032
PH :8599019867.

JEYPORE

1278. LEGEND CARS PVT. LTD. (SW01-SW-03), SOURAGUDA,JEYPORE,DISTT-KORAPUT,ORISSA,INDIA - 764001
PH :06854 -230624.

JHARSUGUDA

1279. ODYSSEY MOTORS PVT LTD (BJU1-BJU-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201
PH :0663-4030011, 4075000.

KEONJHAR

1280. JYOTE MOTORS PVT. LTD. (7U01-7U-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001
PH :9776615001.

NAYAGARH

1281. JYOTE MOTORS PVT LTD (0402-DC-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069
PH :06753-225394.

NIMAPARA

1282. NARAYANI MOTORS PVT. LTD. (CFL1-CFL-01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT – PURI, ODISHA. - 752106
PH :9583001877.

PALLAHARA

1283. ODYSSEY MOTORS PVT. LTD. (CHV1-CHV-01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119
PH :9439817308.

PARADEEP

1284. NARAYANI MOTORS PVT LTD (OE01-OE-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. - 754141
PH :9583022020.

PURI

1285. NARAYANI MOTORS (4Q01-4Q-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAON, PURI, ODHISA - 752002
PH :06752-231323.

RAIRANGPUR

1286. JYOTE MOTORS PVT. LTD. (CES1-CES-01), PLOT NO.1077/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA - 757046
PH :8599019867.

ROURKELA

1287. ORBIT MOTORS (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041
PH :0661-2660777.

SAMBALPUR

1288. ODYSSEY MOTORS (P) LTD (D401-D4-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004
PH :0663-522102 - 03 -04-05.

SUBARNAPUR

1289. ODYSSEY MOTORS PVT. LTD. (BUK1-BUK-01), KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNPUR, ODISHA - 767017
PH :9439314464.

PONDICHERRY

PONDICHERRY

1290. SHENBAKA CARS PRIVATE LIMITED (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY - 605010
PH :0413-2293391/92/93.

PUNJAB

ABOHAR

1291. TARA AUTOMOBILES (H501-H5-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHAR, PUNJAB - 152116
PH :01634-28313-14.

ADAMPUR

1292. LOVELY AUTOS (CHA1-CHA-01), KHASRA NO.10/7/1, JALANDHAR-HOSHIARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR - 144102
PH :8288050777.

AJNALA

1293. SWANI MOTORS PVT. LTD. (CBP1-CBP-01), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102
PH :1858-220401.

AMRITSAR

1294. JAYCEE MOTORS (1702-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006
PH :0183-581334, 581335.

1295. RISHABH FOURWHEELS PVT. LTD. (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004
PH :0183-2263369.

1296. SWANI MOTORS LTD. (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001
PH :0183-400404,.

ANANADPUR SAHIB

1297. C M AUTOSALES (OF01-OF-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB,TEHSIL ANANDPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123
PH :01887-9592916811.

BALACHAUR

1298. LOVELY AUTOS (XV01-XV-01), NEAR MCDONALD – GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHAHR) - 144521
PH :9878427910.

BANGA

1299. LOVELY AUTOS (3503-MS-03), NAWASEHAR-JALANDHAR ROAD, BANGA - 144505
PH :01823-7355560557.

BANUR

1300. TRICITY AUTOS PVT. LTD. (BRT1-BRT-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601
PH :01762-660880.

BARNALA

1301. MAX AUTOS (4S01-4S-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001
PH :01679-285022, 9216529220.

BATALA

1302. PATHANKOT VEHICLEADES PVT. LTD. (A701-V5-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505
PH :01871-246246, 246245.

BHADSON

1303. HIRA AUTOMOBILES (BAG1-BAG-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202
PH :8872034034, 9217048236.

BHAGTA BHAI KA

1304. TARA AUTOMOBILES (BHG1-BHG-01), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT – BHATINDA. - 151206
PH :8437030666.

BHATINDA

1305. TARA AUTOMOBILES (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001
PH :0164-2235349, 50.

BHIKHIWIND

1306. RISHABH FOURWHEELS PVT. LTD. (BPK1-BPK-01), KHASRA NO. 67/3/2, 4/1, 7/2, 8/1, 8/2, PIND BHIKHIWIND, TEHSIL – PATTI, DISTRICT – TARN TARAN, PUNJAB. - 143303
PH :9914708577.

BHOGPUR

1307. LOVELY AUTOS PVT. LTD. (BRU2-BRU-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOGPUR - 144201
PH :9872030006.

BHULATH

1308. LOVELY AUTOS (CHB1-CHB-01), WARD NO. 1, NADALA-BEGOWAL ROAD, VPO BHULATH, DISTRICT – KAPURTHALA, PUNJAB.
PH :9876541065, 8288050777.

CHUNNI KALAN

1309. HOSHIARPUR AUTOMOBILES (CFG1-CFG-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307
PH :1763-248005, 9815131766.

DASUYA

1310. HOSHIARPUR AUTOMOBILES (H402-8D-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205
PH :01883-9872312371.

DERABASSI

1311. AUTOPACE NETWORK (P) LTD (0705-AW-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507
PH :01762-9815011669.

DEVIGARH

1312. HIRA AUTOMOBILES (OG01-OG-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111
PH :0175-2631152.

FARIDKOT

1313. MAPSKO AUTO INDIA PVT. LTD. (4U02-4U-01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204
PH :01639- 253001.

FAZILKA

1314. TARA AUTOMOBILES (H501-4V-03), NH-10, NEAR SARVHITKARI BAL VIDYA MANDIR, FAZILKA - 152116
PH :01638-260213.

FEROZEPUR

1315. BABA AUTOS (7C01-7C-01), MOGA ROAD, FEROZEPUR CANTT - 152002
PH :01632-8872013211.

GARHSHANKAR

1316. HOSHIARPUR AUTOMOBILES (H402-V4-02), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHIARPUR - 144527
PH :01884-9872487800.

GIDDARBAHA

1317. HIRA AUTOMOBILES (AUA1-AUA-01), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBAHA, DISTT. SRI MUKTSAR SAHIB (PUNJAB) - 152101
PH :01637-231510.

GORAYA

1318. LOVELY AUTOS (BJR1-BJR-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409
PH :01826-261001.

GURDASPUR

1319. PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521
PH :01874-247245, 247246.

1320. PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521
PH :01874-247244.

HOSHIARPUR

1321. HOSHIARPUR AUTOMOBILES (H402-H4-01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR, - 146001
PH :01882-9815131766,9915095786.

JAGRAON

1322. SANDHU AUTOMOBILES (6206-LT-05), NATIONAL HIGHWAY-64, JAGRAON - 142026
PH :01624-258558 ,9876727296.

JAITU

1323. MAPSKO AUTO INDIA PVT. LTD. (YX02-YX-01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT – FARIDKOT. - 151202
PH :7347000520.

JALALABAD

1324. TARA AUTOMOBILES (H501-8E-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024
PH :01638-252913.

JALANDHAR

1325. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001
PH :0181-237001, 02.

1326. STAN AUTOS PVT LTD (3504-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010
PH :0181-3952521.

JANDIALA MANJKI

1327. LOVELY AUTO (BJS1-BJS-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE – JANDIALA MANJKI, TEHSIL – NOORMAHAL, DISTRICT – JALANDHAR, PUNJAB. - 144033
PH :7087439797.

JANDIALAGURU

1328. BABA AUTOS (7C01-GL-03), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU - 143115
PH :0183-8872013029.

KAHNUWAN

1329. PATHANKOT VEHICLEADES PVT. LTD. (CGM1-CGM-01), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. - 143528
PH :8288993301.

KAPURTHALA

1330. STAN AUTOS PVT LTD (3504-4Z-03), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602
PH :01822-8872000288
8872006618, 9779623949.

KHANNA

1331. SANDHU AUTOMOBILES PVT. LTD. (N301-N3-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST. -LUDHIANA, PUNJAB. - 141401
PH :1858-220401.

KHARAR

1332. CM AUTOSALES PVT. LTD. (7K01-JH-03), NH-95, MORINDA ROAD,KHANPUR, KHARAR. DIST. MOHALI - 140301
PH :0160-9915022878.

KILANWALI

1333. HIRA AUTOMOBILES LTD. (BFV1-BFV-01), GT ROAD (NH NO. 09), NEAR GURU NANAK COLLEGE, KILANWALI, TEHSIL – MALOUT, DISTRICT – MUKTSAR SAHIB.
PH :8872034131.

KOTKAPURA

1334. MAPSKO AUTO INDIA PVT. LTD. (BIS2-BIS-01), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT – FARIDKOT - 151204
PH :7347000518.

LALRU

1335. AUTOPACE NETWORK PVT. LTD (BRJ1-BRJ-01), VILLAGE – LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501
PH :9815011669.

LUDHIANA

1336. GULZAR MOTORS LTD. (6204-62-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA - 141003
PH :0161-534953, 534952, 543704, 5.

1337. LIBRA AUTO CAR CO. LTD (6207-62-01), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020
PH :0161-2512701, 03.

1338. LIBRA AUTO CAR CO. LTD (6207-62-02), G.T ROAD, NEAR AIRPORT, LUDHIANA. - 141020
PH :0161-2512701 , 03.

1339. SANDHU AUTOMOBILES (6206-62-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA - 141203
PH :0161-2534514, 2535107.

1340. STAN AUTOS PVT LTD (6203-62-01), G.T.ROAD, NEAR SHERPUR CHOWK, LUDHIANA - 141003
PH :0161-542300, 545800.

1341. STAN AUTOS PVT LTD (6203-62-04), HAMBRAN ROAD, LUDHIANA - 141001
PH :0161-2304487.

1342. SWANI MOTORS SERVICES PVT. LTD. (6208-62-01), 523, G.T.ROAD, NEAR DHANDHARI RLY STATION, LUDHIANA - 141010
PH :0161-2510583, 2510883.

1343. STAN AUTOS (6203-62-06), OPP. BHAI BALA GURUDWARA SAHIB OPP. PAKHOWAL ROAD, LUDHIANA - 141008
PH :0161-9257243406.

1344. SWANI MOTORS SERVICES PVT. LTD. (6208-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA - 141003
PH :0161-5092244.

1345. SWANI MOTORS SERVICES PVT. LTD. (6208-62-03), KHASRA NO. 114, 118, 119, 121/1/1, 121/2/1 OF VILLAGE-THREEKE, HADBAST NO. 156, AYALI CHOWK, FEROZEPUR ROAD, LUDHIANA, PUNJAB. - 141003
PH :0161-2802074, 7355825175.

1346. STAN AUTOS PVT LTD (6203-62-07), B-32/751 JALANDHAR BYE PASS CHOWK NEAR SABJI MANDI, LUDHIANA. - 141005
PH :8872640004.

1347. STAN AUTOS PVT LTD (6203-62-08), PLOT NO. 3, HB NO. 261, GIASPURA, GT ROAD (NEAR DHANDARI RAILWAY STATION), LUDHIANA, PUNJAB - 141014
PH :0161-5043044,8872640004,.

MACHIWARA

1348. SANDHU AUTOMOBILES (6206-9T-03), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115
PH :01628-250577.

MAHILPUR

1349. HOSHIARPUR AUTOMOBILES (H402-DD-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105
PH :01884-9914720424.

MALERKOTLA

1350. MAX AUTOS (CCI1-CCI-01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023
PH :9814403131 , 9056903131.

MALOUT

1351. HIRA AUTOMOBILES LTD. (6302-LE-05), TINKONI CHOWK, NEAR LIC BUILDING, MALOUT - 152107
PH :01637-299524, 264724.

MANDI GOBINDGARH

1352. HOSHIARPUR AUTOMOBILES (U903-U9-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301
PH :0176- 5523628, 9914119292.

MANSA

1353. TARA AUTOMOBILES (7002-TL-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA , PUNJAB - 151505
PH :01652-216042.

MOGA

1354. REMIRA MOTORS PVT. LTD. (H602-H6-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001
PH :234475, 7087025402.

MOHALI

1355. STAN AUTOS PVT LTD (L104-L1-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059
PH :0172-5020786, 5044849, 5020739.

1356. CM AUTOSALES PVT. LTD. (0706-L1-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI – PUNJAB - 140110
PH :8284800597.

MUKERIAN

1357. HOSHIARPUR AUTOMOBILES (IP01-IP-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN - 144211
PH :01883-8727951100.

MUKTSAR

1358. HIRA AUTOMOBILES LTD. (6302-J8-03), BHAI COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB - 152026
PH :64642.

MULLANPUR

1359. SANDHU AUTOMOBILES (YY01-YY-01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101
PH :8437025969.

NABHA

1360. HIRA AUTOMOBILES LTD. (6302-UF-06), RADHA SWAMI ROAD, NABHA - 147201
PH :01765-8437602800 ,9217048403.

NAKODAR

1361. LOVELY AUTOS (3503-5B-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040
PH :01821-7355554666, 9915028603.

NANGAL

1362. CM AUTOSALES PVT. LTD. (7K01-8F-02), PLOT#36,AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB - 140126
PH :1884-9915022897.

NAWANSHAHR

1363. LOVELY AUTOS (3503-J7-02), NAWANSHAHR CHANDIGARH ROAD, VILL- LANGROHA, DISTT:- NAWANSHAHR, PUNJAB - 144514
PH :01823-7355560006.

PATHANKOT

1364. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-01), NEAR MAMOON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001
PH :0186-47273.

1365. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-04), NEAR A. B. COLLEGE, PATAHANKOT - 145001
PH :0186-2233701, 9417900828.

PATIALA

1366. HIRA AUTOMOBILES LTD. (6302-63-04), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001
PH :0175-2232377.

1367. HIRA AUTOMOBILES LTD. (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001
PH :0175-2360131, 2360132, 2360562.

1368. HIRA AUTOMOBILES (6302-63-07), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001
PH :0175-2232295, 2232296.

1369. ATELIER AUTOMOBILES PVT. LTD. (6303-63-01), VILLAGE MITHUMAJRA, RAJPURA-PATIALA ROAD, NEAR CASABA RESORT, PATIALA - 147001
PH :7527000106.

PATRAN

1370. HIRA AUTOMOBILES LTD. (6302-V3-02), NARWANA ROAD, PATRAN, PUNJAB, - 147105
PH :01764-244445, 245788.

PATTI

1371. JAYCEE MOTORS (BQA1-BQA-01), KHASRA NO. 64/19/2/1 KA 16/49 & KHASRA NO. 64/20 KA 29/94, NEAR RADHA SWAMI, TARN TARAN ROAD, VILLAGE - PATTI, DISTT.-TARN TARAN, PUNJAB.
PH :9780038335.

PHAGWARA

1372. STAN AUTOS PVT LTD (3504-5C-02), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001
PH :01824-508067.

POHIR

1373. STAN AUTO (6203-XS-05), NEAR AHMEDGARH BYE PASS, POHIR, DISTRICT-LUDHIANA - 148101
PH :0161-2885500, 2885100.

RAIKOT

1374. SANDHU AUTOMOBILES PVT. LTD. (XT01-XT-01), BARNALA BY PASS ROAD, RAIKOT - 141109
PH :01624-8437700026.

RAJPURA

1375. HIRA AUTOMOBILES LTD. (HK01-HK-01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA - 140401
PH :01762-244881-84.

RAMPURA PHUL

1376. TARA AUTOMOBILES (XR01-XR-01), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103
PH :01651-266643.

RAYYA

1377. RISHABH FOURWHEELS PVT. LTD. (CAK1-CAK-01), NH-1, GT ROAD RAYYA, TEHSIL – BABA BAKALA, DISTRICT – AMRITSAR. - 143112
PH :9914708577.

ROPAR

1378. CM AUTOSALES PVT. LTD. (7K01-7K-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001
PH :01881-9915022802.

SANGRUR

1379. MAX AUTOS (G401-G4-01), DHURI ROAD, SANGRUR, - 148024
PH :1672-239627.

SHAHKOT

1380. LOVELY AUTOS (BHT1-BHT-01), PUBLIC SCHOOL ROAD, SHAHKOT, DISTRICT – JALANDHAR, PUNJAB.
PH :8437936811.

SIRHIND

1381. HOSHIARPUR AUTOMOBILES (TF03-TF-01), KHEWAT KHATONI NO. 802/1049 & 821/1070 KHEWAT KHAS NO. 43/1/2/1 (1-0), BESIDE SBI BANK, BASSI ROAD, SIRHIND, TEHSIL AND DISTRICT – FATEHGARH SAHIB - 140406
PH :01763-224466.

SULTANPUR LODHI

1382. STAN AUTO (3504-ZY-04), NEAR TALWADI BRIDGE, TALWANDI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA - 144626
PH :01828-224222.

TALWANDI SABOO

1383. TARA AUTOMOBILES (ON01-ON-01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI,TALWANDI SABO, BHATINDA - 1551302
PH :9646691047, 8437008666.

TALWARA

1384. HOSHIARPUR AUTOMOBILES (H402-LR-07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216
PH :01883-238899, 295899, 9501084500.

TANDA

1385. HOSHIARPUR AUTOMOBILES (H402-DE-06), VILL.PULPUKHATA, MIANI ROAD, TANDA - 144203
PH :01886-8427648484.

TARAGARH

1386. PATHANKOT VEHICLEADES PVT. LTD. (BVC1-BVC-01), VILLAGE - RAHIMPUR, VPO-TARAGARH, TEHSIL & DISTT. PATHANKOT, HIMACHAL PRADESH - 143534
PH :9988639963.

TARN TARAN

1387. JAYCEE MOTORS (BLP1-BLP-01), VILLAGE – KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401
PH :9780188456.

ZIRA

1388. BABA AUTOS (7C01-GK-02), FEROZEPUR ROAD, ZIRA - 142047
PH :01682-8437700230.

ZIRAKPUR

1389. TRICITY AUTOS (9M01-9M-01), PATIALA HIGHWAY,VILLAGE - NABHA, ZIRAKPIR, PUNJAB - 140603
PH :9878359054.

RAJASTHAN

ABU ROAD

1390. NAVNEET MOTORS (OQ01-OQ-01), PLOT NO. E-26, RIICO AMBAJI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026
PH :7665000995.

AJMER

1391. AJMER AUTO AGENCIES PVT. LTD. (B201-B2-01), SRINAGAR ROAD,AJMER (RAJASTHAN) - 305001
PH :0145-2426468.

1392. RELAN MOTORS (B203-B2-01), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001
PH :9251057111.

1393. RELAN MOTORS (B203-B2-02), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001
PH :9251019000.

1394. AJMER AUTO AGENCIES PVT. LTD. (B201-B2-05), KHASRA NO.343/2, 344, 345, 347 GHUGHRA GHATI, JAIPUR ROAD, AJMER. - 305001
PH :9610684602.

ALWAR

1395. M.G. MOTORS (F901-F9-01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001
PH :0144-732236.

1396. M.G MOTORS (F901-F9-02), KHASRA NO.803/198, BHUGORE TIRAHA, NEAR ALWAR PUBLIC SCHOOL, JAIPUR ROAD, ALWAR - 301001
PH :9829215301.

BAGRU

1397. PREM MOTORS PVT. LTD. (US02-US-01), JAIPUR-AJMER HIGHWAY, BAGRU, DISTRICT-JAIPUR - 303007
PH :141-2865921.

BALOTRA

1398. L.M.J.SERVICES LTD (6502-9G-05), JODHPUR BALOTRA ROAD,BALOTRA, RAJASTHAN - 344022
PH :02988-220958.

BANSUR

1399. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (BQP1-BQP-01), KOTPUTLI ROAD, NEAR SUBHASH CHOWK, BANSUR, RAJASTHAN - 301402
PH :8875004375.

BANSWARA

1400. NAVNEET MOTORS (X903-X9-01), NEAR J.C. MILL,OPPOSITE AKASHWANI,DAHOD ROAD,BANSWARA - 327001
PH :02962-201123.

BARAN

1401. BHATIA & COMPANY (6101-PM-03), BESIDE OJHA METAL, ATRU ROAD, BARAN - 325205
PH :07453-230312.

BARMER

1402. L.M.J.SERVICES LTD (6502-SH-06), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001
PH :2982-224641.

BASSI

1403. PREM MOTORS PVT. LTD. (VF02-VF-01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN - 303301
PH :8058794085.

BEHROR

1404. M G MOTORS (FQ01-FQ-01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701
PH :8003165999.

BHARATPUR

1405. TM MOTORS PVT. LTD. (5J01-5J-01), BRIJ VIHAR COLONY,,MADARPUR ROAD,BHARATPUR,RAJASTHAN - 321001
PH :5644-226156.

BHILWARA

1406. CHAMPION CARS (E302-E3-01), CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001
PH :1482-513147.

1407. LOHIA AUTOMOBILES (E301-E3-01), AJMER ROAD,NEAR OCTROI POST,BHILWARA - 311001
PH :1482-28061, 36934, 51419.

1408. LOHIA AUTOMOBILES (E301-E3-03), PLOT NO. H-11, EVERGREEN TEXTILE PARK, RIICO INDUSTRIAL AREA, PUR ROAD, BHILWARA. - 311001
PH :9887063862, 8003193522.

BHIWADI

1409. FORTUNE CARS (9H01-9H-01), OPP. INDAG RUBBER,MAIN ROAD ,BHIWADI - 301019
PH :1493-645678.

1410. FORTUNE CARS (9H01-9H-02), F-458-C,RIICO,INDUSTRIAL AREA,BHIWADI - 301019
PH :1493-645682.

BIJOLIA

1411. LOHIA AUTOMOBILES (E301-UA-02), R/O GOLDEN CORRIDOR, OPP. ASHOK LEYLAND W/S, CHITTOR-BIJOLIA HIGHWAY, BIJOLIA, DIST. -BHILWARA - 311602
PH :9602515000.

BIKANER

1412. AUDI MOTORS LTD (7101-71-01), OPP. URMUL DAIRY PLANT,GANGANAGAR ROAD,BIKANER - 334004
PH :0151-522831, 61846.

1413. AUDI MOTORS LTD (7101-71-04), JAIPUR BYE PASS,BIKANER
, - 334004
PH :141-2793924-7.

1414. AUDI MOTORS LTD (7101-71-05), OPP. AVYYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003
PH :151-2230384.

BILARA

1415. L.M.J.SERVICES LTD (BZB1-BZB-01), BANGANGA MOD, JODHPUR ROAD, BILARA , RAJASTHAN - 342602
PH :8094011126.

BUNDI

1416. BHATIA & COMPANY (6101-EF-02), 13-16B,INDUSTRIAL ESTATE,KOTA - 323301
PH :0747-2445457.

CHAKSU

1417. K.P. AUTOMOTIVES (P) LTD. (1104-JM-03), TONK ROAD, CHAKSU - 303901
PH :1429-243517.

CHIRAWA

1418. AUDI MOTORS LTD. (SY02-SY-01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026
PH :8696543583.

CHITTORGARH

1419. BHATIA & COMPANY (K901-K9-01), PLOT NO. 1001/1-1002/1,NIMBAHERA ROAD,CHITTORGARH - 312001
PH :1472-235299.

CHOMU

1420. SANGA AUTOMOBILES PVT. LTD. (HW01-HW-01), OPPOSITE POWER HOUSE, MORIJA ROAD, CHOMU - 303702
PH :01423-223102.

CHURU

1421. AUDI MOTORS PVT LTD (MD03-MD-01), NEAR DTO OFFICE, JAIPUR ROAD, CHURU - 331001
PH :8875009044.

DAUSA

1422. VIPUL MOTORS LTD. (1102-FM-03), AGRA JAIPUR ROAD, DAUSA - 303303
PH :1427-222158.

DEOLI

1423. K.P. AUTOMOTIVES (P) LTD. (Z001-Z0-01), KOTA- JAIPUR HIGHWAY, NH-12, DEOLI - 304804
PH :9549651778.

DEVGARH

1424. LOHIA AUTOMOBILES (CODE NOT YET PROVIDED BY DD1--), NEAR KRISHI MANDI, KAMLIGHAT ROAD, TEHSIL – DEVGARH, DISTRICT – RAJSAMAND, RAJASTHAN. - 313331
PH :9887063862.

DIDWANA

1425. SHRI MANGALAM AUTO PVT. LTD. (FT03-FT-01), KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA , DISTRICT – NAGAUR. - 341303
PH :7231912912.

DUDU

1426. PREM MOTORS PVT. LTD. (BRY1-BRY-01), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008
PH :8058411181.

DUNGURPUR

1427. NAVNEET MOTORS (4902-GP-02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001
PH :2964-233788.

FATEHNAGAR

1428. TECHNOY MOTORS INDIA PVT. LTD. (4903-SV-03), PLOT NO.15, FATENAGAR SANWAR ROAD, UDAIPUR-CHITTORGARH HIGHWAY NO.76, FATEHNAGAR-313205 DISTT. UDAIPUR - 313205
PH :2955-220002.

GANGAPUR CITY

1429. PREM MOTORS PVT. LTD. (BUT1-BUT-01), KHASRA NO. 5854, 5858, 5860, 5861, VILLAGE UDAI KALAN, THE GANGAPUR CITY - 322201
PH :8058794142.

GOVINDGARH

1430. SANGA AUTOMOBILES PVT. LTD. (BTC1-BTC-01), KHASRA NO. 540, RAKBA 1.15 HECTARE, VILLAGE – SHYAM NAGAR, NH-52, JAIPUR-SIKAR ROAD, GOVINDGARH, TEHSIL – CHOMU, DISTRICT – JAIPUR. - 303712
PH :9772210909.

GUDHAGORJI

1431. AUDI MOTORS PVT. LTD. (CGC1-CGC-01), BHORKI ROAD, GUDHAGORJI, DISTRICT – JHUNJHUNUN, RAJASTHAN. - 333022
PH :8875009044.

HANUMANGARH

1432. AUDI MOTORS LTD (7101-S7-03), JUNCTION TOWN ROAD,HANUMANGARH - 335512
PH :01552-231295.

HINDAUN

1433. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S002-S0-01), KHASRA NO. 737, VILLAGE – PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN. - 322230
PH :8875005912.

JAIPUR

1434. K.P. AUTOMOTIVES (P) LTD. (1104-11-01), E-198, SANGANER INDUSTRIAL AREA,MANSAROVAR,JAIPUR - 302020
PH :0141-445534, 35, 36, 442605.

1435. PREM MOTORS PVT. LTD. (1112-11-02), 12 13,SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006
PH :141-0141-2213065/2216229.

1436. SANGA AUTOMOBILES (1110-11-01), SECTOR 35, PRATAP NAGAR,SANGANER, JAIPUR - 302033
PH :141-4110200.

1437. SANGA AUTOMOBILES (1110-11-03), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGAH, BILOCHOYAN MOHALLA, DELHI ROAD, JAIPUR - 302002
PH :141-3050400.

1438. VIPUL MOTORS LTD. (1102-11-01), F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA NAGAR,JAIPUR - 302017
PH :0141-523339, 520405.

1439. VIPUL MOTORS LTD. (1102-11-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR - 302012
PH :0141-5194200.

1440. K.P. AUTOMOTIVES (P) LTD. (1104-11-06), GROUND FLOOR, ORBIT MALL, AJMER ROAD, JAIPUR, RAJASTHAN - 302006
PH :141-4079999.

1441. PREM MOTORS PVT. LTD. (1112-11-01), PLOT NO. E101/A, VKI , JAIPUR - 302039
PH :141-3055563.

1442. SATNAM MOTOCORP PVT. LTD. (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR – 302 022, RAJASTHAN. - 302022
PH :0141-2771623.

1443. KTL PVT. LTD. (1114-11-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR. - 302012
PH :0141-2345222.

JAISALMER

1444. LMJ SERVICES (5L01-5L-01), PLOT NO.36, 37, MAHESH REFUGEE COLONY,HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) - 345001
PH :9314223963.

JALORE

1445. SHRI KRISHNA AUTOSALES PVT. LTD. (VD01-VD-01), KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001
PH :9001893669.

JHALAWAR

1446. BHATIA & COMPANY (6102-RV-02), OPP. BALAJI KI CHHATRI , KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001
PH :07432-234009.

JHUNJHUNU

1447. AUDI MOTORS (FN03-FN-02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. - 333001
PH :01592-2250024.

JOBNER

1448. PREM MOTORS PVT. LTD. (BRD1-BRD-01), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL – PHULERA, DISTRICT – JAIPUR, RAJASTHAN - 303328
PH :1475-214999, 8058794094.

JODHPUR

1449. L.M.J.SERVICES LTD (6502-65-01), PRATAP NAGAR,JODHPUR - 340002
PH :0291-28158, 33205.

1450. L.M.J.SERVICES LTD (6502-65-04), OPP TO RFC OFFICE,NEW POWER HOUSE ROAD,JODHPUR - 342003
PH :0291-2617772.

1451. SRI KRISHNA AUTOSALES PVT LTD (6503-65-01), 32-A,HEAVY INDUSTRIAL AREA,NR FCI GODOWNS, JODHPUR - 342005
PH :0291-2748405.

1452. L.M.J.SERVICES LTD (6502-65-09), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008
PH :8094011147.

1453. L.M.J.SERVICES LTD (6502-65-0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002
PH :293-2256177.

1454. AUDI MOTORS PVT. LTD. (6504-65-01), C-62 BASNI INDUSTRIAL AREA, PHASE-1, JODHPUR
PH :7412059839.

KAPRAIN

1455. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BGG1-BGG-01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT. BUNDI - 323301
PH :9001027933.

KEKRI

1456. AJMER AUTO AGENCIES PVT. LTD. (B201-GZ-03), KOTA SAWAR ROAD,KEKRI - 305404
PH :01467-222398.

KHERLI

1457. M G MOTORS (BZE1-BZE-01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606
PH :8003163999.

KISHANGARH

1458. FORTUNE CARS (9H01-TU-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405
PH :1460-243323.

KOTA

1459. BHATIA & COMPANY (6101-61-01), 13-16 B,INDUSTRIAL ESTATE, KOTA - 324007
PH :0744-451367, 22373, 26469.

1460. BHATIA & COMPANY (6102-61-01), AUTO MOBILE ZONE,G-11/12 INDUSTRIAL AREA, KOTA - 324005
PH :0744-2439006.

1461. BHATIA & COMPANY (6101-61-04), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN - 324007
PH :9413350336.

1462. BHATIA & COMPANY (6101-61-05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007
PH :0744-6450918.

1463. BHATIA & COMPANY (6101-61-06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. - 324005
PH :7446451110.

KOTPUTLI

1464. PREM MOTORS PVT. LTD. (MH09-MH-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108
PH :8058794312.

KUCHAMAN

1465. SHRI MANGALAM AUTO PVT. LTD. (VA02-VA-01), SUDARSHAN NAGAR, BURSU ROAD, KHASRA NO.148, KUCHAMAN. - 341508
PH :9649518518.

MAHWA

1466. VIPUL MOTORS PVT. LTD. (BKZ1-BKZ-01), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, N.H.-11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608
PH :9887447928.

MAKRANA

1467. SHRI MANGALAM AUTO PVT. LTD. (CFX1-CFX-01), KHASRA NO. 609/4, NEAR BAJAJ SHOWROOM, MANGLANA ROAD, MAKRANA, DISTRICT – NAGAUR. - 341505
PH :7231913913.

MALPURA

1468. K.P. AUTOMOTIVES (P) LTD. (BLB1-BLB-01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502
PH :9549656456.

NAGAUR

1469. SHRI MANGLAM AUTO PVT. LTD. (HL03-HL-01), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUR.
PH :01582-2242828, 242400,9116007210.

NAINWA

1470. BHATIA & COMPANY (CODE NOT YET PROVIDED BY DD1--), UNIARA ROAD, OPP: PETROL PUMP, NAINWA, DIST. KOTA - 323801
PH :9001027933.

NASIRABAD

1471. AJMER AUTO AGENCIES PVT. LTD. (B201-VB-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601
PH :9314391011.

NATHDWARA

1472. LOHIA AUTOMOBILES (X201-TZ-02), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND - 313301
PH :2953-234761.

NEEM KA THANA

1473. JAMU AUTOMOBILES (P) LTD (K701-TV-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713
PH :1574-231575.

NEEMRANA

1474. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OP01-OP-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705
PH :8875004356.

NIWAI

1475. K.P. AUTOMOTIVES (P) LTD. (BLA1-BLA-01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT – TONK. - 304021
PH :9549656559.

NOHAR

1476. AUDI MOTORS LTD (VE02-VE-01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523
PH :1555-220485.

NOKHA

1477. AUDI MOTORS LTD. (I501-I5-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803
PH :8875010555.

PALI

1478. LMJ SERVICES (6502-J9-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401
PH :2932-256277.

PAOTA

1479. K P AUTOMOTIVES PVT. LTD. (BRH1-BRH-01), PATTA SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106
PH :9462686008.

PISANGAN

1480. AJMER AUTO AGENCIES PVT. LTD. (CODE NOT YET PROVIDED BY DD1--), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT – AJMER, RAJASTHAN. - 305204
PH :9610684602.

PRATAPGARH

1481. BHATIA & COMPANY (PN01-PN-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605
PH :9414397142.

RAIPUR

1482. LMJ SERVICES (CRZ1-CRZ-01), NATIONAL HIGHWAY, PALI ROAD, VILLAGE – RAIPUR, DISTRICT – PALI.
PH :8094011126.

RAISINGHNAGAR

1483. AUDI MOTORS (BHK1-BHK-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHNAGAR, DISTRICT – SRIGANGANAGAR. - 335051
PH :9982638516.

RAJGARH

1484. MG MOTORS (IY01-IY-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408
PH :9001781777.

1485. AUDI MOTORS PVT. LTD. (CGD1-CGD-01), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU, - 331023
PH :9982638516.

RAJSAMAND

1486. LOHIA AUTOMOBILES (X201-X2-01), BHILWARA ROAD,KHANKROLI,RAJSAMAND DISTT, RAJSAMAND - 313301
PH :2952-320460.

RAMGANJMANDI

1487. BHATIA & COMPANY (BAZ1-BAZ-01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519
PH :9414085790.

RAWATBHATA

1488. BHATIA & COMPANY (JQ01-JQ-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA , DIST. CHITTORGARH, RAJASTHAN. - 323307
PH :1475-214999,9462719294.

REVDAR

1489. TECHNOY MOTORS INDIA PVT. LTD., (CRY1-CRY-01), OPP. TIRUPATI PETROL PUMP, KAROTI ROAD, REVDAR, DISTT. SIROHI, RAJASTHAN. - 307514
PH :9530396878.

SAGWARA

1490. TECHNOY MOTORS INDIA PVT. LTD. (CK01-CK-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025
PH :9530306910.

SALUMBAR

1491. NAVNEET MOTORS PVT. LTD. (BZH1-BZH-01), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT – UDAIPUR. - 313027
PH :7665010167.

SANCHORE

1492. SHRI KRISHNA AUTO SALES PVT. LTD. (GY01-GY-01), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. - 343041
PH :9460551446.

SARDARSHAHAR

1493. AUDI MOTORS PVT. LTD. (BID1-BID-01), KHASRA NO.134, MOTOR MARKET, RATANGARH SARDARSHAHAR ROAD, SARDARSHAHAR DISTT. CHURU, RAJASTHAN - 331403
PH :9982638516.

SAWAI MADHOPUR

1494. PREM MOTORS PVT. LTD. (FY03-FY-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001
PH :8058791638.

SHAHPURA

1495. K.P. AUTOMOTIVES (P) LTD. (1104-NH-05), VILLAGE RAJPURA,GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103
PH :8696934964.

1496. LOHIA AUTOMOBILES (CCP1-CCP-01), OPPOSITE LIC OFFICE, BHILWARA ROAD, SHAHPURA DISTT. BHILWARA - 311404
PH :9887063862.

SIKAR

1497. JAMU AUTOMOBILES (P) LTD (K701-K7-01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001
PH :1572-245515.

SIROHI

1498. NAVNEET MOTORS (4902-LK-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001
PH :2972-222917.

SOJAT

1499. LMJ SERVICES LTD. (BWI1-BWI-01), KHASRA NO. – 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104
PH :306104.

SRIGANGANAGAR

1500. AUDI MOTORS LTD (U201-U2-01), NEW AUTOMOBILE MARKET,SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001
PH :0154-2466225.

1501. AUDI MOTORS LTD (U201-U2-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001
PH :9982638516.

SUJANGARH

1502. AUDI MOTORS PVT. LTD. (BRB1-BRB-01), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH , DISTT. CHURU - 331507
PH :7665722860.

SUMERPUR

1503. L.M.J. SERVICES LTD. (6502-VC-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHEREA GROUND, SUMERPUR - 306902
PH :02933 -274977,274978,9414411609.

SURATGARH

1504. AUDI MOTORS LTD (U201-LG-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804
PH :1509-224227, 224228.

TODABHIM

1505. MG MOTORS (CRR1-CRR-01), VILLAGE – GHAROLI, PANCHAYAT – SAKARWALA, TEHSIL – TODABHIM, DISTRICT – KARAULI, RAJASTHAN - 321611
PH :8003163999.

TONK

1506. K P AUTOMOTIVES PVT LTD (GM01-GM-01), F-94, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001
PH :1432-8696925252.

UDAIPUR

1507. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD,UDAIPUR - 313001
PH :0294-415143.

1508. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002
PH :0294-2494451-55.

1509. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002
PH :2955-220304.

1510. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-04), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL – BADGAON, UDAIPUR, RAJASTHAN. - 313001
PH :9530396896, 9530396878.

SIKKIM

GANGTOK

1511. ENTEL MOTORS (B901-B9-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102
PH :3592-649125, 232341, 232059,.

JORTHANG

1512. ENTEL MOTORS (B901-ND-02), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121
PH :3595-257030, 257020, 257069.

TAMIL NADU

ANNUR

1513. JAI KRISHNA AUTO SALES PVT. LTD. (DN01-DN-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR,COIMBATORE (DIST), TAMILNADU - 641653
PH :0422-04254-262744/ 9788850733.

ARAKKONAM

1514. GANESH CARS PVT. LTD. (BKQ1-BKQ-01), SURVEY NO. 556A/3, VILLAGE – ICHIPUDHUR, TALUKA – ARAKKONAM, VELLORE. - 631003
PH :9842345399.

ARIYALUR

1515. PILLAI & SONS MOTOR CO. (EB01-EB-01), NO.1/1 , NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704
PH :9442281302/ 9442418751.

ARNI

1516. GANESH CARS PVT. LTD. (BKP1-BKP-01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI , THIRUVANAMALAI, TAMIL NADU. - 632301
PH :9952608752.

ATTUR

1517. S.M.CAR PVT. LTD. (QT02-QT-01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108
PH :7094440030.

AVADI

1518. VISHNU CARS PVT. LTD. (5P01-5P-01), SURVEY NO. 146, 147/1F & 147/G, NO. 17 VILLAGE – KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT – THIRUVALLUR, CHENNAI, TAMIL NADU - 600054
PH :9841429338.

BHAVANI

1519. AMBAL AUTO (H701-IG-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316
PH :0424-2230408.

CHENGALPATTU

1520. AIE CARS PVT. LTD. (BBS1-BBS-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. - 603002
PH :7299057387.

CHENNAI

1521. A.B.T LTD (1401-14-01), 102, MOUNT ROAD, GUINDY, CHENNAI - 600032
PH :044-42254544, 42254554.

1522. A.B.T LTD (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093
PH :044-23650488, 23650490.

1523. A.B.T LTD (1401-14-06), NO. 1 & 2, VASANTHA PRESS,ROAD, OPPOSITE MALAR HOSPITAL, ADYAR, CHENNAI - 600020
PH :044-24465814 , 24465815.

1524. A.B.T LTD (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106
PH :044-42267603, 42267621.

1525. A.B.T LTD (1411-14-01), 29, WALLES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058
PH :044-42281720/708.

1526. C.A.R.S. INDIA PVT LTD. (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058
PH :044-26359600, 42947900.

1527. C.A.R.S. INDIA PVT LTD. (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI - 600020
PH :044-24461584, 24461584..

1528. C.A.R.S. INDIA PVT LTD. (1403-14-03), 4/321, OLD MAHABALIKPURAM RD. , KOTTIVAKKAM, CHENNAI - 600040
PH :44-43590914, 4294830.

1529. C.A.R.S. INDIA PVT LTD. (1403-FP-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066
PH :044-26323434/3737.

1530. C.A.R.S. INDIA PVT LTD. (1403-14-05), PLOT NO.-80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112
PH :044-23821862/ 23821852.

1531. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-03), PLOT NO. SP-35, 1ST MAIN ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI - 600058
PH :044-43445000/45968000.

1532. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-02), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107
PH :044-64599892, 64599896..

1533. KHIVRAJ MOTORS LTD (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006
PH :044-42269575.

1534. POPULAR VEHICLES & SERVICES LTD. (1410-14-01), NO.11, ARUNACHALAM ROAD, SALIGRAMAM, CHENNAI - 600093
PH :044-65877973, 974, 975, 65610801, 802, 803, 804, 805, 806, 42136611.

1535. POPULAR VEHICLES & SERVICES LTD. (1410-14-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117
PH :044-64525444/64526444.

1536. POPULAR VEHICLES & SERVICES LTD. (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI , CHENNAI - 600099
PH :044-64626410/ 64626411.

1537. VISHNU CARS (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004
PH :044-24661973/74/75.

1538. VISHNU CARS (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043
PH :044-40175555.

1539. KHIVRAJ MOTORS LTD (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032
PH :044-43542303/05/06.

1540. ABT LTD (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. - 600041
PH :044-24490585/86, 42281700, 42281749.

1541. AIE CARS (A UNIT OF A.I. ENTERPRISES (P) LTD.) (1484-14-01), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115
PH :044-30193020/30193019.

1542. RAJALAKSHMI CARS PVT. LTD. (1486-14-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI . - 600060
PH :044-33015454/ 8939995454.

1543. KHIVRAJ MOTORS PVT. LTD. (1480-14-02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI - 600096
PH :44-9043019626/ 7092033013.

1544. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-04), NO.225,JAWAHARALAL NEHRU ROAD, KOYAMBEDU, CHENNAI - 600107
PH :044-42006000-23.

1545. ABT LTD (1401-14-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU. - 600119
PH :044-24502185-87.

1546. VISHNU CARS PVT. LTD. (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089
PH :044-8754440002/ 9677244332.

1547. VISHNU CARS PVT. LTD. (1487-14-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056
PH :26792961/ 26792962.

1548. VISHNU CARS PVT. LTD. (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100
PH :044-9840929994/ 9840944478.

1549. VISHNU CARS PVT. LTD. (1427-14-04), NEW S. NO. 314/1B1A, PALLAVARAM – THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. - 600117
PH :044-9940057775.

1550. VISHNU CARS PVT. LTD. (1427-14-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. - 600016
PH :044-32531117.

1551. RAJALAKSHMI CARS PVT. LTD. (1486-14-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095
PH :044-43870090, 893999541.

1552. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-06), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058
PH :7401930335.

1553. RAJALAKSHMI CARS (1489-14-01), SURVEY NO. 414/3, 4, 5, 26, 27, MYLAPORE REVENUE VILLAGE, ROYAPETTAH HIGH ROAD, MYLAPORE, CHENNAI – 600 004. - 600004
PH :8939423232.

CHEYYAR

1554. GANESH CARS PVT. LTD. (BUD1-BUD-01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407
PH :9787669339.

COIMBATORE

1555. A.B.T LTD (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001
PH :0422-4232660, 4232666.

1556. A.B.T LTD (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037
PH :0422-4232588, 4232550.

1557. A.B.T LTD (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043
PH :0422-228155.

1558. A.B.T LTD (4101-41-0A), NO 49, PANKAJA MILL ROAD, OPP INDIAN EXPRESS OFFICE, RAMANATHAPURAM, COIMBATORE - 641045
PH :0422-4516000, 4390434.

1559. AMBAL AUTO (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005
PH :0422-3075000, 3075001.

1560. AMBAL AUTO (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011
PH :0422-3075211, 3075203..

1561. AMBAL AUTO (4103-41-08), SF-94, SATHY MAIN ROAD, VISWASAPURAM, SARAVANNAMPATTI, COIMBATORE, - 641013
PH :0422-3075800.

1562. AMBAL AUTO (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027
PH :0422-2331646.

1563. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-01), 8/60-C&8/62-D, METTUPALAYAM ROAD, G.N.MILLS POST , NEARJOHNBOSCO CHURCH,COIMBATORE - 641029
PH :0422-4519140.

1564. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-02), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004
PH :0422-4383220.

1565. AMBAL AUTOMOBILES (4103-41-0C), SENGUPTA STREET, RAM NAGAR, COIMBATORE. - 641009
PH :0422-3009600/ '3009602.

1566. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE - 641004
PH :0422-2511773.

1567. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-OH-04), NO.12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020
PH :0422-698899.

1568. AADHI CARS PVT. LTD. (4108-41-01), NO.176/2, SATHYAMANGALAM ROAD, SARAVANAPATTI, COIMBATORE - 641035
PH :8754009117/ 8754045977.

1569. ABT LTD (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024
PH :0422-9994408618/ 9500911243.

1570. AADHI CARS PVT. LTD. (4108-41-02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004
PH :0422-8754045421/ 8754045443.

1571. AADHI CARS PVT. LTD. (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041
PH :0422-3000211/ 3000204.

1572. AADHI CARS PVT. LTD. (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE-. - 641005
PH :4000777.

1573. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-41-0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. - 641008
PH :9047077775.

COONOOR

1574. AMBAL AUTOMOBILES (3G01-3G-01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102
PH :0423-2202254.

CUDDALORE

1575. A.B.T LTD (5Q01-5Q-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003
PH :04142-227699, 227599..

DHARAPURAM

1576. AMBAL AUTO (H701-QN-04), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM - 638656
PH :04258-301107/ 301103.

DHARMAPURI

1577. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-5R-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTIHALLI (PO), DHARMAPURI , TAMILNADU - 636807
PH :04342-233933.

DINDIGUL

1578. PLA MOTORS (S401-S4-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL - 624001
PH :0451-3098300.

EDAYARPALAYAM

1579. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (CJK1-CJK-01), SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE. - 641025
PH :9047011791.

ERODE

1580. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (H701-H7-01), 23/1, PERUND, URAI ROAD, ERODE, - 638011
PH :0424-3056600/ 3056602.

GOBICHETTIPALAYAM

1581. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (H701-QM-03), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476
PH :04285-302001/ 302005.

GUDIYATHAM

1582. GANESH CARS PVT. LTD. (CQW1-CQW-01), SURVEY NO.250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAI, GUDIYATTAM. - 653803
PH :95855591039.

GUDUVANCHERY

1583. VISHNU CARS (BAD1-BAD-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203
PH :9500121553/ 9677122225.

GUMMIDIPOONDI

1584. RAJALAKSHMI CARS PVT. LTD. (BIZ1-BIZ-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE – PAPPANAKUPPAM, GUMMIDIPONNDI, THIRUVALLUR - 601201
PH :044-27922060, 8939995454, 8939853972.

HARUR

1585. SRI AMMAN CARS INDIA PVT. LTD.
(AAV1-AAV-01), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903
PH :04346-9790004273/ 9790004279.

HOSUR

1586. SRI AMMAN CARS INDIA PVT. LTD.
(7Q01-7Q-01), P.O.- PERANDAPALLI,NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109
PH :4344-260277.

IDAPPADI

1587. THRIVENI CAR COMPANY PVT LTD. (HI01-HI-01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM - 637101
PH :04283-222300.

KANCHEEPURAM

1588. GANESH CARS PVT.LTD (C601-JA-02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502
PH :044-67275222/27277771.

KARAIKUDI

1589. A.B.T LTD (4202-HX-05), 42-43 KOVILOOR ROAD, OPP. TNSTC DEPOT - 630302
PH :04565-232484, 232486..

KARUMATHAMPATTI

1590. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (CJQ1-CJQ-01), SF: NO.281/B, NEAR BHARAT PETROL BUNK, VILLAGE - VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALUK-PALLADAM, DISTT. COIMBATORE. - 641659
PH :9047011791.

KARUR

1591. A.B.T LTD (K401-K4-01), SF NO. 529/1, SALEM BY PASS,ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002
PH :04324-222261/62/63.

KATPADI

1592. GANESH CARS (C601-APA-04), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004
PH :0416-9842313139/ 9842333061.

KINATHUKADAVU

1593. AADHI CARS PVT. LTD. (BBI1-BBI-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109
PH :0422-3000506/ 3000505.

KOTAGIRI

1594. AADHI CARS PVT. LTD. (BAS1-BAS-01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217
PH :04266-8754045891/ 8754045442.

KOVILPATTI

1595. ASIR AUTOMOBILES PVT. LTD. (NO01-NO-01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501
PH :04632-232220.

KRISHNAGIRI

1596. SRI AMMAN CARS INDIA PVT. LTD.
(7Q01-QL-03), NH-7,NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001
PH :–9750699555/ 8220009348.

KUMBAKONAM

1597. PILLAI & SONS MOTOR CO. (E701-N4-02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM , TANJAVUR - 612501
PH :0435-2442566,65.

MADURAI

1598. A.B.T LTD (4202-42-02), MADURAI-DINDIGAL BYE PASS ROAD,NEAR FATHIMA COLLEGE,MADURAI - 625018
PH :0452-2547108, 2547125.

1599. A.B.T LTD (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005
PH :0452-4387050/51/52.

1600. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016
PH :0452-2688888.

1601. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. - 625003
PH :0452-26888889.

1602. ASIR AUTOMOBILES PVT. LTD. (4206-42-01), D. NO. 28/5B, MELUR MAIN ROAD, UTHANKUDI, MADURAI. - 625107
PH :0452-4382220.

1603. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008
PH :0452-2487490, 2489074.

MADURANTHAKAM

1604. AIE CARS PVT. LTD. (CEW1-CEW-01), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM. - 603306
PH :7299053583.

MALLUR

1605. THRIVENI CAR COMPANY PVT LTD. (CDH1-CDH-01), SURVEY NO.50/4A, AMANI AMMAPALAYAM VILLAGE, DISTT.: DADHAGAPATTY SUB REGISTRATION , MALLUR DISTT. SALEM - 636309
PH :427-2422399, 2440000.

MANAMADURAI

1606. ABT LIMITED (CHF1-CHF-01), NO. 35, OLD RAMNAD ROAD, MANAMADURAI TOWN, DISTRICT – SIVGANGAI. - 630606
PH :9994450331.

MANGALAPURAM

1607. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (CLX1-CLX-01), DOOR NO. 1/518, SURVEY NO. 75/1, ATTUR MAIN ROAD, MANGALAPURAM (POST), TALUK – RASIPURAM, DISTRICT – NAMAKKAL. - 636202
PH :9047011791.

MAYILADUTHURAI

1608. PILLAI & SONS MOTOR CO. (E701-AG-04), 46,VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007
PH :04364-43542303/ 43542306.

MELUR

1609. SIVA AUTOMOTIVE TRADING PVT. LTD. (CHC1-CHC-01), OLD SN. 138/1, SURVEY WARD C, BLOCK NO. 1, T.S. NO. 21/7, VILLAGE AND TOWN – MELUR, MELUR , DIST.-MADURAI. - 625109
PH :7402788840.

METTUPALAYAM

1610. A.B.T LTD (4101-EU-0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043
PH :04254-228155.

MINJUR

1611. RAJALAKSHMI CARS PVT. LTD. (BPE1-BPE-01), PLOT NO. 27, SRI JANAKI RATHINA NAGAR, VILLAGE AND TOWN – MINJUR, PONNERI – 601 203, DISTRICT – THIRUVALUR. - 601203
PH :8939995409.

NAGAPATTINAM

1612. PILLAI & SONS MOTOR CO. (CQQ1-CQQ-01), NO.181, KEELA ANTHANAPETTAI, ANTHANAPETTAI, P.O. - MANJAKOLLAI, PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU - 611106
PH :9443264165.

NAGERCOIL

1613. SRIVATSA INTERNATIONAL PVT. LTD.
(S502-S5-01), PLOT NO. 31B1-1, BEACH ROAD JUNCTION, KOTTAR, NAGERCOIL, DISTRICT-KANYAKUMARI, TAMIL NADU. - 629002
PH :04652-232344, 236344/ 8973423332.

NAMAKKAL

1614. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (X401-X4-01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL - 637001
PH :04286-307507, 307512.

1615. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (X401-X4-03), 1/412/1 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001
PH :04286-307500-502.

NEGAMAM

1616. ABT LIMITED (CHD1-CHD-01), 68, 69, ABT BUS STAND, PALLADAM ROAD, PERIA NEGAMAM, POLLACHI, TAMIL NADU - 642120
PH :9994450331.

OMALUR

1617. SRI AMMAN CARS INDIA PVT. LTD.
(7Q01-UM-04), 123, 3B, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012
PH :04277-9790004273/ 9750799555.

1618. THRIVENI CAR COMPANY PVT LTD.
(UM01-UM-01), PLOT NO. 44 & 45, PALANIYAPPA NAGAR LAYOUT, NH-7, KAMALAPURAM VILLAGE, OMALUR, DISTRICT – SALEM, TAMIL NADU - 636309
PH :04290-222611, 711.

OOTY

1619. AMBAL AUTO (4103-Y1-05), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY - 643001
PH :0423-3075303, 3075311.

PARAMATHI VELUR

1620. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (CC01-CC-01), SURVEY NO. 171, NEAR KONGU SCHOOL, NAMAKKAL BYPASS ROAD, PADAMUDI PALAYAM, TALUKA – PARAMATHIVELUR, NAMAKKAL , TAMIL NADU. - 638182
PH :9047011794, 9047077775.

PATTUKKOTTAI

1621. PILLAI & SONS MOTOR CO. (CJA1-CJA-01), SURVEY NO. 85/6, 85/4, 84/6, DOOR NO.314/11, SRI JANAGALAKSHMI NAGAR, THANJAVUR ROAD, ALADIKUMULAI VILLAGE, TALUK PATTUKOTTAI, THANJAVUR. - 614615
PH :8489900902.

PENNAGARAM

1622. SRI AMMAN CARS INDIA PVT. LTD.
(BXZ1-BXZ-01), SURVEY NO. 419/1, VILLAGE – PARUVADHANAALLI, PENNAGARAM, DHARMAPURI. - 636810
PH :9790036371.

PERAMBALUR

1623. PLA MOTORS (2305-DQ-04), SURVEY NO.88/1, A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212
PH :0431-403361/3461.

PERUNDURAI

1624. SREE SARADHAMBAL AUTOMOBILES ERODE PVT. LTD. (BTX1-BTX-01), SF NO.542/1, KOVAI MAIN ROAD, PERUNDURAI VILLAGE, PERUNDURAI DISTT. ERODE, TAMIL NADU - 638052
PH :9655575757.

POCHAMPALLI

1625. SRI AMMAN CARS PVT. LTD. (CODE NOT YET PROVIDED BY DD1--), NEW SURVEY NO. 561/5, VILLAGE – JUMBUKUTTANPATTI, POCHAMPALLI, KRISHNAGIRI. - 635206
PH :9600466988.

POLACHI

1626. A.B.T LTD (L301-L3-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003
PH :04259-37010,37020.

PUDUKOTTAI

1627. PLA MOTORS (2305-5U-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI, - 622003
PH :04322-265566/67.

RAJAPALYAM

1628. A.B.T LTD (4202-5V-03), NO. 10/32, DHARMAPURAM, SRIVILLIPUTHUR MAIN ROAD, RAJAPALYAM - 626125
PH :04563-260298.

RAMANATHAPURAM

1629. SIVA AUTOMOTIVE TRADING PVT. LTD. (0U02-0U-01), SURVEY NO. 172/1B2C, 172/2C, VILLAGE - ACHUNTHANVAYAL, ACHUNTHANGAL GROUP, TALUK - RAMANATHAPURAM, RAMANATHAPURAM. - 623502
PH :7402788840.

RANIPET

1630. GANESH CARS PVT. LTD. (CJJ1-CJJ-01), SURVEY NO. 44/1, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET , TAMIL NADU. - 632403
PH :9842389111.

RASIPURAM

1631. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (BSJ1-BSJ-01), SURVEY NO:41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401
PH :04287-231177.

SALEM

1632. A.B.T LTD (4101-A2-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009
PH :0427-4066988, 406999.

1633. THRIVENI CAR COMPANY PVT. LTD. (A203-A2-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005
PH :0427-2440000/ 2336599.

1634. S.M.CARS PVT. LTD. (A204-A2-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202
PH :7094448000, 7034449000.

1635. THRIVENI CAR COMPANY PVT. LTD. (A203-A2-03), SURVEY NO. 57, VILLAGE - MASINAICKENPATTY, AYOTHIAPATTINAM, AMMAPET, SALEM. - 636103
PH :9943288699.

1636. S M CAR PRIVATE LIMITED (A204-A2-02), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTY, SALEM, TAMILNADU - 636007
PH :709444053.

SANKAGIRI

1637. THRIVENI CAR COMPANY PVT LTD. (BTN1-BTN-01), SURVEY NO.171/5B, KCK PLAZA, KACHERIDADU, DEPUTY COLLETCTOR ROAD, SALEM, SANKAGIRI (TAMIL NADU) - 637301
PH :4283-242600.

SANKARANKOVIL

1638. AADHI CARS PVT. LTD. (BXS1-BXS-01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL. - 627756
PH :04636-223331
8754043378.

SATHYAMANGALAM

1639. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (BGU1-BGU-01), SURVEY NO. 51, 54 & RS NO. 37, KOTTUVEERAMPALAYAM VILLAGE, SATHYAMANGALAM – 638 401, DISTRICT – ERODE, TAMIL NADU - 638401
PH :222026/ 222036.

SIVAKASI

1640. MEENAKSHI AUTO ZONE PVT. LTD. (X602-X6-01), 372 D & E, ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. - 626123
PH :04562-231281.

SRIPERUMBUDUR

1641. RAJALAKSHMI CARS PVT. LTD. (7B01-7B-01), SURVEY NO. 150/1A, DOOR NO 1C, THERADI STREET, NEW VILLAGE NO 42, SRIPERUMBADUR, KANCHEEPURAM DISTRICT, TAMIL NADU. - 602105
PH :044-65683041.

SULUR

1642. JAI KRISHNA AUTO SALES PVT. LTD (4107-TK-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR
PH :0422-3199901.

TANJAVUR

1643. PILLAI & SONS MOTOR CO. (E701-E7-01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU - 613007
PH :04362-71723, 71724.

TENKASI

1644. AADHI CARS PVT. LTD. (BXR1-BXR-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE – KUNARAMANALLUR, TENKASI. - 627814
PH :04636-252050.

THENI

1645. MEENAKSHI AUTO ZONE PVT. LTD. (9U02-9U-01), DOOR NO. 871/1, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT – THENI - 625531
PH :9789703881.

THIRPATHUR

1646. ABT LIMITED (CHH1-CHH-01), DOOR NO. 8/2/29A, KARAIKUDI ROAD, TIRUPATHUR, DISTRICT – SIVAGANGAI. - 630211
PH :9994450331.

THIRUMULLAIVOYAL

1647. KAPICO MOTORS (INDIA) PVT. LTD (CDW1-CDW-01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULAIVOYAL DISTT. CHENNAI - 600062
PH :044-9551070545.

THIRUVALLUR

1648. KHIVRAJ MOTORS LTD (1404-HH-04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001
PH :044-27662888.

1649. KHIVRAJ MOTORS LTD (1404-HH-05), PLOT NOS.218,219,220,225,226,227.228 AND S.NOS.18/5,18/6, EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR - 602001
PH :9791070359.

THIRUVARUR

1650. PILLAI & SONS MOTOR CO. (E701-LJ-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001
PH :04366-250250.

THUCKALAY

1651. SRIVATSA INTERNATIONAL PVT. LTD. (BWQ1-BWQ-01), D NO. 5/76B, THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE – MUTHALAKURUCHI, THUCKALAY, DISCTRICT – KANYAKUMARI - 629174
PH :4651-252592, 8973218881.

THURAIYUR

1652. PLA MOTORS (CSE1-CSE-01), D.NO.:5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010
PH :9790309577.

TIRUCHENDUR

1653. ASIR AUTOMOBILES PVT. LTD. (CCJ1-CCJ-01), SURVEY NO. 220/1D1A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215
PH :04639-246220.

TIRUCHENGODE

1654. AMBAL AUTO (X401-QP-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE - 637001
PH :04288-282292/ 306726.

TIRUNAMALAI

1655. GANESH CARS PVT.LTD (C601-LX-03), NO.-5, NH-78, KRISHANAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601
PH :04175-249319.

TIRUNELVELLI

1656. AADHI CARS PVT. LTD. (A303-A3-01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI , TAMIL NADU - 627357
PH :0462-2300040/ 9500991487.

TIRUPUR

1657. A.B.T LTD (4101-Y7-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR - 641601
PH :0421-4305686 , 4305640.

1658. SHASHTI CAR PVT LTD (Y701-Y7-01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604
PH :0421-2430275/ 2430276.

TIRUTHANI

1659. CARS INDIA PVT. LTD. (CRESCENT AUTO RENTAL SERVICES INDIA PVT. LTD.) (CIC1-CIC-01), NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI,TAMILNADU - 631209
PH :9952000091.

TRICHY

1660. A.B.T LTD (2302-23-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY - 620001
PH :0431-4221602 , 4221603..

1661. A.B.T LTD (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005
PH :0431-4221555, 4221564.

1662. PLA MOTORS (2305-23-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009
PH :0431-2403361, 9843055561.

1663. PLA MOTORS (2305-23-03), 10A & B, ALXANDRIA ROAD, CANTONMENT, TRICHY - 620001
PH :0431-2411540/530.

1664. PILLAI & SONS (2306-23-01), SURVEY NO. 10B, 1A/D, CHENNAI TRICHY BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY. - 620002
PH :7094481120.

TUTICORIN

1665. ASIR AUTOMOBILES PVT. LTD. (S603-S6-01), SURVEY NO. 25/1B, MAPPILLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002
PH :2337220/ 7373120220.

UDUMALPET

1666. ABT LTD (QR01-QR-01), 2/3, PERIYAKOTTAI PIRIVU, S.V. MILL POST, UDUMALPET - 642126
PH :04252-222572/ 222573.

UTHANGARAI

1667. SRI AMMAN CARS INDIA PVT. LTD. (CFY1-CFY-01), SURVEY NO. 104/1, 104/1B, VILLAGE – THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304
PH :9976206699, 9790004273.

VALLIYUR

1668. AADHI CARS PVT. LTD. (BXQ1-BXQ-01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002
PH :04857-223000.

VANIYAMBADI

1669. GANESH CARS PVT. LTD. (BJY1-BJY-01), NO. 197/1B1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI , VELLORE (DIST), TAMIL NADU. - 635801
PH :291520.

VELLORE

1670. GANESH CARS PVT.LTD (C601-C6-01), 91 NEW BY-PASS ROAD, VELLORE - 632004
PH :0416-6454221, 2233709.

VILLUPURAM

1671. A.B.T LTD (5Q01-QQ-02), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602
PH :04146-225509.

VIRUDHACHALAM

1672. ABT LTD (BMA1-BMA-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU. - 606101
PH :04143-262631,32,33.

TELANGANA

ADILABAD

1673. ADARSHA AUTOMOTIVES PVT LTD (BTM1-BTM-01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA. - 504001
PH :08732-7799784538.

ARMUR

1674. VARUN MOTORS PVT. LTD. (BBN1-BBN-01), SURVEY NO.277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224
PH :08643-8142281424: 26/26/27.

BHUPALPALLY

1675. ADARSHA AUTOMOTIVES PVT. LTD. (D502-BCF-04), 6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169
PH :08715-7799790526.

CHEVELLA

1676. GEM MOTORS INDIA PVT. LTD. (CBL1-CBL-01), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA. - 510101
PH :9912899128.

GADWAL

1677. SRI JAYARAMA MOTORS PVT. LTD. (WP01-BHR-02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125
PH :08546-8096990074.

GAJWEL

1678. ACER MOTORS (BYU1-BYU-01), SURVEY NO. 220, VILLAGE – PRAGNAYPUR, GAJWEL, DISTRICT – MEDAK, TELANGANA . - 502311
PH :040-9849017827.

GHATKESAR

1679. ACER MOTORS PVT. LTD. (BYL1-BYL-01), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT – RANGA REDDY. - 501301
PH :040-9849017827.

HYDERABAD

1680. GEM MOTORS (INDIA) PVT. LTD. (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR,,HYDERABAD , ANDHRA PRADESH - 500084
PH :040-40506070.

1681. GEM MOTORS (INDIA) PVT. LTD. (1009-10-02), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072
PH :40-40302525.

1682. RKS MOTORS PVT. LTD. (1003-10-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482
PH :040-3371115, 33.

1683. RKS MOTORS PVT. LTD. (1003-10-02), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039
PH :040-7200193, 7204444.

1684. RKS MOTORS PVT. LTD. (1003-10-04), 16-11-19/5/2/C, SALEEM NAGAR COLONY,MALAKPET (NEAR FARHAT HOSPITAL),HYDERABAD - 500036
PH :040-23434576, 77.

1685. RKS MOTORS PVT. LTD. (1003-10-05), 11-6-191/192,OPP. HOTEL HARSHA,PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD - 500001
PH :040-23432390, 391.

1686. SAI SERVICE PVT. LTD. (1011-10-01), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR, ,BALANAGAR, HYDERABAD - 500037
PH :040-44604000.

1687. SAI SERVICE PVT. LTD. (1011-10-02), #2-3-505,ML GARDENS, AMBERPET, HYDERABAD (A.P.) - 500013
PH :040-65646565.

1688. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD,AZAMABAD INDUSTRIAL AREA, HYDERABAD, - 500020
PH :040-7662481, 7618488, 7641786,7630422.

1689. THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10,NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081
PH :040-23114567, 3444.

1690. THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8,NEAR MARGADARSI CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074
PH :040-24122222.

1691. THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD - 500076
PH :040-27176999.

1692. VARUN MOTORS PVT. LTD. (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD, - 500037
PH :040-3778035,3778036, 3777979.

1693. VARUN MOTORS PVT. LTD. (4603-10-0A), 1-11-200,SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016
PH :040-27766533.

1694. VARUN MOTORS PVT. LTD. (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036
PH :040-4553395, 4547676.

1695. VARUN MOTORS PVT. LTD. (4603-10-0B), ADITYA NAGAR COLONY, ,ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008
PH :40-64551700.

1696. VARUN MOTORS PVT. LTD. (1010-10-01), PLOT NO. VI- VII A & B,UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070
PH :40-24027677.

1697. VARUN MOTORS (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD - 500008
PH :040-9985104860, 69997979.

1698. RKS MOTORS PVT. LTD. (1003-10-08), D.NO.1-10-1/285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062
PH :040-49054905,9010822210.

1699. SAI SERVICE PVT. LTD. (1011-10-04), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD. - 500059
PH :040 -8886512309,23808080.

1700. VARUN MOTORS PVT. LTD. (4603-10-0G), 1-10-28/1 SY. NO.285, KUSHAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062
PH :040-7799600098.

1701. VARUN MOTORS PVT. LTD. (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033
PH :040-64551700.

1702. VARUN MOTORS PVT. LTD. (4603-10-0J), PLOT NO. 1-45, SY.NO:1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE - 500019
PH :040-9885206555.

1703. SAI SERVICE PVT. LTD. (1011-10-07), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032
PH :040-766181100.

1704. ADARSHA AUTOMOTIVES PVT. LTD. (1014-10-01), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD - 500005
PH :040-8142326633.

1705. RKS MOTORS PVT. LTD. (1003-10-09), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072
PH :040-23432311.

1706. SAI SERVICE PVT. LTD. (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018
PH :040-9133346300.

1707. KALYANI MOTORS PVT. LTD. (1018-10-01), PLOT NO. A-23 & A31/1, I.D.A, NACHARAM, HYDERABAD. - 500076
PH :040-66985555, 9100114877.

1708. GEM MOTORS (INDIA) PVT. LTD. (1009-10-03), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA. - 500089
PH :040-9912899128.

1709. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE CB SQUARE, VILLAGE – GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032
PH :040-7680046666, 9704835556.

1710. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081
PH :9704835556.

1711. KALYANI MOTORS PVT. LTD. (1018-10-02), M/S VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE – KARMANGHAT, MANDAL – SAROORNAGAR, DISTRICT – RANGA REDDY, HYDERABAD. - 500079
PH :040-9014600700.

1712. ADARSHA AUTOMOTIVES PVT. LTD. (1019-10-01), H. NO. 2-4-43/15, SURVEY NO. 34, SOGBOWLI (PILLER NO. 185 OF P.V. NARSIMHA RAO EXPRESSWAY), RAJENDRANAGAR, UPPERPALLY, ATTAPUR, RANGA REDDY, HYDERABAD, TELENGANA. - 500048
PH :040-9703152222.

1713. THE MITHRA AGENCIES (1002-10-06), SURVEY NO.57, D.NO.8-2-108, BIRAMALGUDA, KARMANGHAT NAGARJUN SAGAR ROAD, HYDERABAD, TELANGANA. - 500079
PH :40-9393333028.

1714. VARUN MOTORS PVT. LTD. (4603-10-0M), KSN GARDENS, 5-162/6, BORABANDA MAIN ROAD, HYDERABAD. - 500018
PH :040-8886110917.

1715. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-03), SURVEY NO.283, PLOT NO.D-46 & 47, PHASE-V, IDA, JEEDIMETLA, QUTUBULLAPUR MANDAL, RANGA REDDY DISTT., HYDERABAD (TELANGANA). - 500055
PH :9849445639.

JAGITIAL

1716. ADARSHA AUTOMOTIVES PVT LTD (N601-NU-04), HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JAGTIAL, - 505327
PH :8724-8886152222.

JANGAON

1717. ADARSHA AUTOMOTIVES PVT. LTD. (KI01-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167
PH :8716-9959223393.

KAMAREDDY

1718. VARUN MOTORS PVT. LTD. (KX01-KX-01), H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111
PH :08142-551166/77/88/99.

KARIMNAGAR

1719. ADARSHA AUTOMOTIVES PVT LTD (N601-N6-01), H.NO. 8-6-313/1,HYDERABAD ROAD,BY-PASS JUNCTION,KARIMNAGAR - 505001
PH :0878-2277200, 300.

1720. ADARSHA AUTOMOTIVES PVT LTD (N601-N6-05), H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. - 505001
PH :0878-8886152222.

KHAMMAM

1721. MITHRA AUTO AGENCIES PVT LTD (2604-1G-02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003
PH :08742-222444.

KODAD

1722. PAVAN MOTORS PVT. LTD (BRP2-BRP-01), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD , DISTRICT – NALGONDA, TELANGANA - 508206
PH :8683-8008899995.

MAHABUBABAD

1723. ADARSHA AUTOMOTIVES PVT. LTD. (CQS1-CQS-01), SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE AND MANDAL, MAHBUBABAD. - 506101
PH :9177746333.

MAHESHWARAM

1724. ADARSHA AUTOMOTIVES PVT. LTD. (CQR1-CQR-01), (BEARING #5-187, SURVEY NO.:336/A1, VILLAGE & MANDAL: MAHESHWARAM DISTT. RANGA REDDY - 501359
PH :9703152222.

MANCHERIAL

1725. ADARSHA AUTOMOTIVES PVT LTD (N601-CM-03), BEHIND MAHINDRA TRACTORS SHOWROOM,BELLAMPALLY ROAD, MANCHIRIAL , DISTT. ADILABAD - 504208
PH :08736-255757.

MEDCHAL

1726. AUTOFIN LIMITED (CID1-CID-01), H. NO. 11-27/1, SURVEY NO.401, MEDCHAL VILLAGE AND MANDAL, DIST. - MEDCHAL. - 501401
PH :8885040128.

MEHABOOB NAGAR

1727. SRI JAYARAMA MOTORS PVT. LTD. (WP01-WP-01), PLOT NO.C1 & C2, INDUSTRIAL ESTATE, METTUGADA, MEHBOOBNAGAR - 504001
PH :08542-256111, 9866545424.

MIRYALGUDA

1728. PAVAN MOTORS PVT. LTD (WR01-WR-01), SURVEY NO-940 &943, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANKI BY-PASS ROAD,MIRYALAGUDA ,NALGONDA DISTRICT,ANDHRA PRADESH - 508207
PH :08689-8790900399.

MOINABAD

1729. GEM MOTORS (INDIA) PVT. LTD. (CFN1-CFN-01), SURVEY NO. 70, PLOT NO. 4, VILLAGE AND GRAM PANCHAYAT – HIMAYATH NAGAR, MANDAL – MOINABAD, DISTRCT – RANGA REDDY. - 500075
PH :9912899128.

NALGONDA

1730. PAVAN MOTORS PVT. LTD (AN01-AN-01), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 508001
PH :08682 -247399,8790344499.

NARAYANKHED

1731. VARUN MOTORS PVT. LTD. (CGI1-CGI-01), D. NO. 1-6-111/25/B/5/A/1, SY NO. 57/2, BHUMAN COLONY, GRAM PANCHAYAT & MANDAL - NARAYANKHED, DISTRICT – MEDAK, TELANGANA. - 502286
PH :9885210555.

NIRMAL

1732. ADARSHA AUTOMOTIVES PVT LTD (N601-AA-02), H. NO. 1-1-131, ,SHASTRINAGAR, ,MANCHIRIAL ROAD, DISTT. ADILABAD, NIRMAL - 504106
PH :8734-9912752344.

NIZAMABAD

1733. VARUN MOTORS PVT. LTD. (1H02-1H-01), PLOT NO. GP 1-57/4/1,PANGARA BORGOAN,NIZAMABAD - 503230
PH :08642-234428.

PARGI

1734. VARUN MOTORS PVT. LTD. (CBO1-CBO-01), HOUSE NO. 2-356 JANGAIAH COMPLEX, SURVEY NO. 217/EE4, JAYANTHI NAGAR COLONY, MANDAL – PARGI, DISTRICT – RANGA REDDY. - 510501
PH :08556-988521055, 9885200000.

RAMAGUNDAM

1735. ADRASHA AUTOMOTIVES PVT. LTD. (BGA1-BGA-01), 5-6-172 SURVEY NO. – 259/B, MEDIPALLY SHIVAR, RAMAGUNDAM MUNICIPALITY, DISTRICT – KARIM NAGAR, ANDHRA PRADESH - 505209
PH :08728-8886144550.

RAMAYAMPET

1736. VARUN MOTORS PVT. LTD. (CDO1-CDO-01), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT – MEDAK. - 502101
PH :9885208555.

SANGAREDDY

1737. SAI SERVICE PVT. LTD. (1011-OI-05), H.NO.4-8-92/1/4/5, AHMED NAGAR, OPP.GOVT.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001
PH :08455 -278090,7799360003.

SECUNDERABAD

1738. ACER MOTORS (K601-K6-01), A1, MOTI VALLEY,TRIMULGHERRY,SECUNDERABAD, - 500015
PH :040-7740774, 7747559.
1739. AUTOFIN LIMITED (K606-K6-01), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011
PH :040-67295858.
1740. SAI SERVICE PVT. LTD. (1011-K6-06), PLOT NO. 1-8-308/3/1, PATIGADDA, BEGUMPET, SECUNDERABAD, TELANGANA - 500016
PH :040-27904644.
1741. VARUN MOTORS PVT. LTD. (4603-K6-0I), 1-10-176/1, BEHIND VARUN TOWERS-I, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE. - 500016
PH :040-9985552452.
1742. RKS MOTORS PVT. LTD (K605-K6-01), PLOT NO. 207, TADBUND, SECUNDERABAD. - 500009
PH :040-23434520, 9010834567.
1743. PAVAN MOTORS PVT. LTD (K608-K6-01), PREMISES NO.6-1-17/A AND 6-1-18, WALKER TOWN, PADMARAO NAGAR, SECUNDERABAD. - 500025
PH :40-27502750.
1744. AUTOFIN LIMITED (K606-K6-02), SURVEY NO. 177/B & 178/C SITUATED AT VILLAGE – KOMPALLY, MANDAL – QUTHBULLAPUR, HYDERABAD. - 500090
PH :040-67295856.

SHAD NAGAR

1745. SRI JAYARAMA MOTORS (P) LTD. (WS01-WS-01), SERVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH. - 500216
PH :08548-8096991424.

SHANKARPALLY

1746. SAI SERVICES PVT. LTD. (CEX1-CEX-01), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - 501203
PH :8416-9966377888, 9912899128.

SIDDIPET

1747. ADARSHA AUTOMOTIVES PVT. LTD. (CAL1-CAL-01), SURVEY 197/A, VILLAGE – PONNALA, SIDDIPET, DISTRICT – MEDAK, TELANGANA. - 502103
PH :0457-888662222, 7799784525.

SIRCILLA

1748. ADARSHA AUTOMOTIVE PVT. LTD. (BYW1-BYW-01), H. NO. 10-1-7/2, 10-1-7/3, 10-1-7/3/A/1, KARIMNAGAR ROAD, SIRCILLA, DISTRICT – KARIMNAGAR, TELANGANA - 505301
PH :8886618155.

TANDUR

1749. VARUN MOTORS PVT. LTD. (CFR1-CFR-01), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA. - 501141
PH :040-9885208555.

THORRUR

1750. ADARSHA AUTOMOTIVES PVT. LTD. (BYV1-BYV-01), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - 506163
PH :9059438007.

VIKARABAD

1751. GEM MOTORS (INDIA) PVT. LTD. (BYM1-BYM-01), SHOP NO. 3-2-93/2, VILLAGE – YENNAPALLY, VIKARABAD MUNCIPALITY, VIKARABAD, DISTRICT – RANGA REDDY, TELANGANA . - 501101
PH :8416-9912349840.

WANAPARTHY

1752. SRI JAYARAMA MOTORS (P) LTD. (WQ01-WQ-01), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103
PH :08543-9542448662.

WARANGAL

1753. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007
PH :0870-2623359.
1754. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-03), OPPOSITE TO ORUGALLU FILLING STATION, HUNTER ROAD, SHAYAMPET, HUNAMKONDA, WARANGAL - 506001
PH :0870-2523349, 9959223393.

ZAHIRABAD

1755. SAI SERVICE PVT. LTD. (BAT1-BAT-01), PLOT NO-5,NEAR IBP PETROL BUNK, NH-9,ALIPUR,ZAHIRABAD,MEDAK (DIST),ANDHRA PRADESH - 502220
PH :8451-9966377888 (MR. GOPAL DESAI).

TRIPURA

AGARTALA

1756. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - 799003
PH :0381-230542.
1757. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA. - 799003
PH :0381-2371402, 9436123592.
1758. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843, MOUJA & TEHSIL – KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - 799008
PH :0381-9436121559.

AMBASSA

1759. JAIN UDYOG (CDT1-CDT-01), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - 799289
PH :9436123592.

DHARMANAGAR

1760. JAIN UDYOG (6901-RN-03), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH). - 799250
PH :3822-23047, 9774040553.

UDAIPUR

1761. JAIN UDYOG (YU01-YU-01), DHWAJANAGAR INDUSTRIAL ESTATE,UDAIPUR,TRIPURA (SOUTH) - 799116
PH :3821-222640/9774020152.

UNION TERRITORY

PANCHKULA

1762. AUTO VOGUE PVT. LTD. (K303-K3-01), PLOT NO- 388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113
PH :8725099358.

UTTAR PRADESH

AGRA

1763. MADHUSUDAN MOTORS PVT LTD (6603-66-01), B-5 LAWYERS COLONY, BYE PASS ROAD, AGRA - 282005
PH :0562-531102-05.
1764. MADHUSUDAN MOTORS PVT LTD (6603-66-02), GANESH GANJ, PRATAPPURA, AGRA - 282001
PH :0562-3297501.
1765. MADHUSUDAN MOTORS PVT LTD (6603-66-03), 6-A , VIBHAV INDUSTRIAL STATE, AGRA - 282007
PH :0562-3299221.
1766. MADHUSUDAN MOTORS PVT LTD (6603-66-04), 26/253, SULTAN GANJ KI PULIA, MAUZA LASKARPUR, AGRA - 283203
PH :9837097894.
1767. PREM MOTORS PVT. LTD. (6605-66-01), KHASRA NO.382,386,387,388, VILLAGE ARTHONI, DELHI-AGRA HIGHWAY, NH-2, AGRA, UTTAR PRADESH - 282007
PH :9690010795, 3215315/16.
1768. KTL PVT. LTD. (6606-66-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004
PH :8449715033,8449715099.
1769. PREM MOTORS PVT. LTD. (6607-66-01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002
PH :0562-2523022, 9690010795.
1770. KTL PVT. LTD (6606-66-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001
PH :05622-410004.
1771. KTL PVT. LTD. (6606-66-03), 44/320 B, MAUJA BODLA, BODLA CHOWK, AGRA. - 282007
PH :0562-8449715091,7060404416.

AKBARPUR

1772. KTL PVT. LTD. (2801-LH-03), KANPUR ROAD, AKBARPUR - 209206
PH :7408409304.
1773. SMARTWHEELS PVT. LTD. (7201-LH-08), TANDA ROAD, VILL-BUDHAEEPUR, PO-KATRIYA YAKOOBPUR, AKBARPUR , DIST-AMBEDKAR NAGAR (U.P.) - 224122
PH :244570.

ALIGARH

1774. DEV MOTORS (P) LTD (B601-B6-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001
PH :0571-521771.

ALLAHABAD

1775. AMITDEEP MOTORS (2901-29-01), 26 SULEM SARAI, G.T ROAD, ALLAHABAD - 211001
PH :0532-2636301, 2436360.
1776. GREENLAND MOTORS (2903-29-01), 40, INDUSTRIAL ESTATE, TELEARGANJ, ALLAHABAD - 211004
PH :0532-9838107735.
1777. GREENLAND MOTORS (2903-29-03), 52/36, LUKERGANJ, ALLAHABAD - 211001
PH :7081103839, 7081103840.

AMETHI

1778. KTL PVT. LTD. (1302-AAY-07), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR - 227409
PH :05368-244445.

ANPARA

1779. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (NJ02-NJ-01), KAHUWA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT – SONEBHADRA. - 232101
PH :9170640607.

AURAIYA

1780. KULDEEP MOTORS (QJ01-QJ-01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA. - 206241
PH :9235358444.

AZAMGARH

1781. DEEP MOTORS (K501-K5-01), HARBANSHPUR NARAULI, AZAMGARH - 276001
PH :05462-325387.
1782. DEEP MOTORS (K501-K5-04), VILLAGE – BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH. - 276138
PH :09838072902.

BAHERI

1783. KAVISHA MOTORS PVT. LTD. (BSB1-BSB-01), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMLILA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201
PH :7895980110.

BAHRAICH

1784. ANAND MOTORS (1301-5Z-05), LUCKNOW ROAD,BEHRAICH,UTTAR PRADESH - 271801
PH :7860786161.

BAKSHI KA TALAB

1785. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-II-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020
PH :9838075960,9628370601.

BALLIA

1786. DEEP MOTORS (K501-BA-03), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001
PH :9838072917.

BALRAMPUR

1787. ANAND MOTOR AGENCIES LTD. (XB01-XB-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201
PH :05263-232144.

BANDA

1788. MY CAR PVT. LTD. (2803-KV-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001
PH :9839029868.

BARABANKI

1789. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-6A-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001
PH :9838075960.

BARAUT

1790. RAJ SNEH AUTO INDIA PVT LTD (4803-LL-04), DELHI SAHARANPUR ROAD, OPP.POLICE CHECK POST, NEAR VERDHMAN -DHARAM KANTA, BARAUT - 250611
PH :9837581179.

BAREILLY

1791. CORAL MOTORS (P) LTD. (5602-56-01), STATION ROAD, BAREILLY - 243001
PH :0581-559191.
1792. CORAL MOTORS (P) LTD. (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002
PH :0581-0581-2554922.
1793. KAVISHA MOTORS PVT. LTD. (5601-56-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502
PH :0581-480404,5,6,7,8.
1794. ETERNITY MOTORS LLP (5603-56-01), KHASRA NO. 803/2, PILIBHIT BYPASS ROAD, PEER BAHORA, OPP, FUN CITY, BAREILLY, UTTAR PRADESH. - 243001
PH :9105555746.

BASTI

1795. SMARTWHEELS PVT. LTD. (7201-6B-05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002
PH :05542-286294.

BHADOHI

1796. VARANASI MOTORS PVT. LTD. (8402-TT-02), VARNASI ROAD, BHADOHI - 221401
PH :9838360662.

BIJNOR

1797. SHAKUMBARI AUTOMOBILES (P) LTD (6D01-6D-01), PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT KHEDI CHAURAHA, NEAR PULKIT HOSPITAL, DELHI-BIJNOR HIGHWAY, BIJNOR, DIST. – BIJNOR, UTTAR PRADESH. - 246701
PH :01345-8755903006.

BILASPUR

1798. AKANKSHA AUTOMOBILES PVT. LTD. (BCN1-BCN-01), NH-87 ,OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT – RAMPUR. - 244921
PH :7895600005, 7247800009.

BUDAUN

1799. CORAL MOTORS (P) LTD. (5602-NF-04), PLOT NO.- 72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103
PH :9837891846.

BULANDSHAHR

1800. ROHAN MOTORS LTD. (T201-M5-02), PLOT NO-561, M.T. VILLAGE AKBARPUR, OPP. PANDIT PETROL PUMP, BULANDSAHAR, UTTAR PRADESH - 203001
PH :9758418546.

CHAKIA

1801. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (CJH1-CJH-01), KATHSILA NAHER, NEAR SAINT JOHN'S SCHOOL CHAKIA, DISTRICT – CHANDAULI. - 232101
PH :7895980300.

CHANDAUSI

1802. AKANKSHA AUTOMOBILES PVT. LTD. (XA01-XA-01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412
PH :254111.

DEOBAND

1803. ATELIER AUTOMOBILES (XK01-XK-01), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001
PH :7500250042.

DEORIA

1804. SMARTWHEELS PVT. LTD. (M601-M6-01), PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST. -DEORIA, UTTAR PRADESH. - 274001
PH :05568- 7705800602.

ETAH

1805. MADHUSUDAN VEHICLES PRIVATE LTD. (XG01-XG-01), 472 ASROLI, GT ROAD, ETAH - 207125
PH :9837097894.

ETAWAH

1806. KULDEEP MOTORS (6E01-6E-01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001
PH :05688-257029.

FAIZABAD

1807. SMARTWHEELS PVT. LTD. (7201-F5-02), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH. - 224001
PH :05278-309333.

FARIDPUR

1808. KAVISHA MOTORS PVT. LTD. (CEM1-CEM-01), GATE NO. 216, KASBA SARAI, TEHSIL – FARIDPUR, DISTRICT – BAREILLY, UTTAR PRADESH. - 243503
PH :7895980300.

FARRUKHABAD

1809. MY CAR PVT. LTD. (2803-TS-04), NEKPUR KALAN, FARRUKHABAD - 209625
PH :9839029868.

FATEHABAD

1810. KTL PVT LTD (BLQ1-BLQ-01), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKRARA MODE, FATEHABAD, DISTRICT – AGRA, UTTAR PRADESH - 283111
PH :08449715063.

FATEHPUR

1811. KTL PVT. LTD. (2801-TM-04), NH-2, OPP. RTO OFFICE, KANPUR ROAD, FATEHPUR - 212601
PH :7408409304.

FEROZABAD

1812. MADHUSUDAN VEHICLES PRIVATE LTD. (DF01-DF-01), 746, ALI NAGAR KEJRA , NEAR RAJA KA TAL CROSSING, NH 2, FEROZABAD - 283203
PH :05612-9690003035.

GAJRAULA

1813. AKANKSHA AUTOMOBILES PVT. LTD. (XD01-XD-01), JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA - 244235
PH :9897069329.

GHAZIABAD

1814. REGENT AUTOLINKS (P) LTD (5902-59-01), A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001
PH :0120-2706034-37, 0120-4641900,911,904.
1815. ROHAN MOTORS LTD. (5904-59-01), 432 MUKAND NAGAR, G.T.ROAD, GHAZIABAD - 201001
PH :0120-4375182,4730717, 4730176, 4734218.
1816. ROHAN MOTORS (5904-59-02), PLOT NO.46, MEERUT-DELHI ROAD, MORTA, GHAZIABAD - 201102
PH :0120-9717388333,9971466644.
1817. T.R. SAWHNEY MOTORS PVT LTD (5905-59-01), PLOT N0. 96, RAJINDER NAGAR INDUSTRIAL AREA, MOHAN NAGAR, GHAZIABAD, DISTT. - GHAZIABAD, U.P. - 201007
PH :7503326561.

GHAZIPUR

1818. AGR AUTOMOBILES PVT. LTD. (8403-KT-03), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR - 2333001
PH :0542-2361136.

GHIROR

1819. KULDEEP MOTORS (CODE NOT YET PROVIDED BY DD1--), KARHAL ROAD, TEHSIL – GHIROR, DISTRICT – MAINPURI, UTTAR PRADESH.
PH :9536755555.

GONDA

1820. SMARTWHEELS PVT. LTD. (7201-FZ-07), JANKI NAGAR, OPP INDIAN OIL DEPOT, BAHRAICH ROAD, GONDA, UTTAR PRADESH, - 271001
PH :233598.

GORAKHPUR

1821. SMARTWHEELS PVT. LTD. (7201-72-01), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012
PH :2200267, 3090906.
1822. SMARTWHEELS PVT. LTD. (7201-72-06), NEAR T B HOSPITAL, LACHCHIPUR, NEPAL ROAD, GORAKHPUR - 273012
PH :0551-3090906.
1823. SMARTWHEELS PVT. LTD. (7202-72-01), PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. - 273209
PH :9235401004.

GREATER NOIDA

1824. ROHAN MOTORS LTD. (T201-T2-01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTER PRADESH - 201306
PH :0120-4513739,40,09,01, 2560564, 2569984-85, 3092597.

HAMIRPUR

1825. KTL LTD. (QH01-QH-01), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301
PH :7408409304,9235443403.

HAPUR

1826. ROHAN MOTORS (6G01-6G-01), DELHI-HAPUR ROAD, OPPOSITE SSV INTERCOLLEGE,HAPUR, DISTRICT- GHAZIABAD - 245101
PH :+11222313203.

HARDOI

1827. CONCEPT CARS PVT. LTD. (QE01-QE-01), NANAK GANJ, LUCKNOW ROAD, HARDOI - 241001
PH :9792971496.
1828. CONCEPT CARS PVT. LTD. (QE01-QE-04), PLOT NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH. - 241001
PH :7607005857.

HATHRAS

1829. DEV MOTORS (P) LTD (B601-LP-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS - 204101
PH :9917435500.

JAGDISHPUR

1830. BRIGHT 4 WHEELS SALES PVT. LTD. (XC01-XC-01), KATHORA,MUSAFIRKHANA,LUCKNOW SULTANPUR ROAD,JAGDISPUR-UTTAR PRADESH - 227817
PH :06438-9721526961 , 9628374814.

JAUNPUR

1831. KIRTIKUNJ AUTOMOBILES PVT. LTD. (6H01-6H-01), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001
PH :9554951026.

JHANSI

1832. SURI AUTOMOBILES (6001-60-01), 362/1 NEHRU MARG, CIVIL LINES, JHANSI - 284001
PH :330844.

KAISERGANJ

1833. ANAND MOTORS (CODE NOT YET PROVIDED BY DD1--), NEAR PARAM HANS DEGREE COLLEGE, VILLAGE & POST-KONARI, TEHSIL-KAISERGANJ, BAHRAICH- (U.P.) - 271903
PH :9838400002.

KANNAUJ

1834. KTL PVT. LTD. (2801-EM-05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725
PH :7408409304.

KANPUR

1835. KTL PVT. LTD. (2801-28-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002
PH :0512-290459.
1836. KTL PVT. LTD. (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007
PH :0512-401390.
1837. MY CAR PVT. LTD. (2803-28-01), 84/54 C, JARIB CHOWKI ,G.T. ROAD, KANPUR - 208003
PH :0512-3988833.
1838. MY CAR PVT. LTD. (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022
PH :0512-2691756.
1839. S B CARS PVT.LTD (2806-28-01), 77B , FAZALGANZ, KANPUR - 208012
PH :0512-2241660.
1840. MY CAR PVT. LTD. (2803-28-05), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004
PH :0512-3067601.
1841. S B CARS PVT.LTD (2806-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017
PH :7408430365.

KASGANJ

1842. MADHUSUDAN VEHICLES PRIVATE LTD. (BVX1-BVX-01), ARAJI NO. 646, SAURO ROAD, KASGANJ, DISTRICT – KASGANJ, UTTAR PRADESH. - 207123
PH :9837825800.

KAUSHAMBI

1843. GREENLAND MOTORS (AYA1-AYA-01), OPP. NAVEEN SAMITI MANDI STHAL, MANJHANPUR, KAUSAMBHI - 211001
PH :9919202043 , 9838107762.

KHANDAULI

1844. MADHUSUDAN MOTORS PVT LTD (BVV1-BVV-01), KHASRA NO. 97, AGRA-SADABAD, HATHRAS ROAD, OPP. HDFC BANK, VILL.-KHANDAULI, TEHSIL ETHMADPUR, DIST. AGRA, UTTAR PRADESH. - 283126
PH :9837097863.

KHUTAR

1845. SUMITRA DS MOTORS PVT LTD (CIO1-CIO-01), VILLAGE – NARAINPUR, VIKRAMPUR GOLA ROAD, KHUTAR, DISTRICT – SHAHJAHANPUR, UTTAR PRADESH. - 242405
PH :9336408074.

KIRAOLI

1846. PREM MOTORS PVT. LTD. (BJZ1-BJZ-01), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA – JAIPUR HIGHWAY, KIRAWALI, DISTRICT – AGRA, UTTAR PRADESH. - 283122
PH :7055007646.

KUBERPUR

1847. KTL PVT. LTD. (6606-CRU-04), KHASRA NO.248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006
PH :9831550033.

LAKHIMPUR

1848. SUMITRA DS MOTORS PVT LTD (W201-M3-02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001
PH :262583/4/5.

LALGANJ

1849. KTL PVT.LTD. (BKT1-BKT-01), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206
PH :9918451222.

LALITPUR

1850. SURI AUTOMOBILES (6001-6J-03), JAHANSI SAGAR ROAD, LALITPUR - 284001
PH :9451496015.

LUCKNOW

1851. ANAND MOTOR AGENCIES LTD. (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105
PH :0522-315791, 315792, 315000, 7080000469.
1852. ANAND MOTOR AGENCIES LTD. (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW - 226016
PH :0522-3098257, 7080000463.
1853. ANAND MOTOR AGENCIES LTD. (1301-13-04), G-3, LDA MARKET, ALIGANJ, LUCKNOW - 226024
PH :0522 - 4103406/407/408, 7080000464.
1854. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-01), 11/CP- 6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022
PH :0522-2739501.
1855. KTL LIMITED (1302-13-02), MATIYARI CHAURAHA, CHINNHAT, FAIZABAD ROAD, LUCKNOW - 227105
PH :0522-315301.
1856. KTL LIMITED (1302-13-03), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016
PH :0522-2340183,86.
1857. KTL LIMITED (1302-13-04), BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005
PH :9918451222.
1858. ONE UP MOTORS INDIA PVT. LTD. (1306-13-01), C-16A,TRANSPORT NAGAR,KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012
PH :9918100801.
1859. ONE UP MOTORS INDIA PVT. LTD. (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005
PH :9839015046.
1860. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021
PH :9838075960.
1861. ONEUP MOTORS INDIA PVT. LTD. (1306-13-04), PLOT NO. 1/5, PATRAKARPURAM ROAD, VINEET KHAND, GOMTI NAGAR , LUCKNOW, UTTAR PRADESH - 226010
PH :0522-0522-4943666 , 9918100291.
1862. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-05), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW. - 226001
PH :7705911825, 9838075929.

MADHOGANJ

1863. CONCEPT CARS PVT. LTD. (BHI1-BHI-01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241001
PH :05852-220016, 220064, 7607696666.

MAHARAJGANJ

1864. SMARTWHEELS PVT. LTD. (EI01-EI-01), NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303
PH :05523-7705803113.

1865. KTL PVT. LTD. (BKS1-BKS-01), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TEHSIL – MAHARAJGANG, DISTRICT – RAIBAREILLY, UTTAR PRADESH.
PH :99184512222.

MAHMUDABAD

1866. CONCEPT CARS PVT. LTD. (AAN1-AAN-01), IN FRONT OF POWER HOUSE, SIDAULI ROAD, MAHMOODABAD (U.P.) - 261203
PH :05864-253893.

MAHOBA

1867. SURI AUTOMOBILES (6001-RM-02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH, - 284001
PH :5281-244344, 9451496015.

MAHRONI

1868. SURI AUTOMOBILES (CGN1-CGN-01), LALITPUR ROAD, MEHRONI, DISTRICT – LALITPUR, UTTAR PRADESH. - 384405
PH :9455213963.

MAINPURI

1869. KULDEEP MOTORS (6E01-SG-02), SKP-4A, MAINPURI - 205001
PH :9235258444.

MALIHABAD

1870. ONE UP MOTORS INDIA PVT. LTD. (BOD1-BOD-01), KHASRA NO. 326/1 AND 327, VILLAGE PARGANA, TEHSIL – MALIHABAD, DISTRICT – LUCKNOW, UTTAR PRADESH. - 227111
PH :9918100781.

MATHURA

1871. UMA MOTORS PVT. LTD. (H801-H8-01), 68, MAHOLI,NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004
PH :0565-2463043/ 6290700.

MEERUT

1872. RAJ SNEH AUTO INDIA PVT LTD (4803-48-01), 210, DELHI ROAD, NEAR AMAR UJALA, MEERUT - 250001
PH :0121-2408038.

1873. RAJ SNEH AUTO INDIA PVT LTD (4803-48-02), GARH ROAD, OPP. PURI PETROL PUMP, MEERUT, UTTARPRADESH - 250003
PH :121-2408031-35.

1874. TANYA MOTORS (4802-48-01), 35 CHIPPI TANK, BEGUM BRIDGE ROAD, MEERUT - 250001
PH :0121-4020006, 648829.

1875. TANYA MOTORS (4802-48-03), 40, NAUCHANDI GROUND, MEERUT - 250001
PH :0121-4026208, 2658008, 09, 10.

1876. RAJSNEH AUTO INDIS PVT. LTD. (4803-48-05), NEAR TAKSHILA COLONY, OPP. MEDICAL COLLEGE, GARH ROAD, MEERUT - 250002
PH :9568007373, 9837581179.

1877. RAJ SNEH AUTO INDIA (P) LTD. (4803-48-06), OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, MEERUT (U.P.) - 250002
PH :0121-2575787, 2575797.

1878. RADHA GOVIND AUTOMOBILES PVT. LTD. (4807-48-01), VILLAGE – BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002
PH :7456001001.

MIRZAPUR

1879. STAR CARS (6K02-6K-01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001
PH :9450544961.

MODINAGAR

1880. MOTORCRAFT SALES PVT. LTD. (5903-M7-02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204
PH :01232 -244001,9219444550.

MOHANLAL GANJ

1881. BRIGHT 4 WHEEL SALES PVT. LTD. (BWU1-BWU-01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANJ, LUCKNOW DISTT., UTTAR PRADESH - 227305
PH :7571905966.

MORADABAD

1882. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-01), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001
PH :0591-2485111,2480888, 2487722.

1883. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-03), 5TH KM DELHI ROAD, MORADABAD - 244001
PH :9219404041.

1884. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-04), KHASRA NO. 569-570, VILLAGE – KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001
PH :07895600005.

MUZAFFARNAGAR

1885. RADHA GOVIND (H903-H9-01), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001
PH :9412210301.

NAUGARH

1886. SMARTWHEELS PVT. LTD. (QG01-QG-01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHNAGAR - 272205
PH :05544-211078.

NAWABGANJ

1887. KAVISHA MOTORS (P) LTD. (CHT1-CHT-01), VILLAGE – EIDH JAGIR NEAR GURUDWARA AT NH-74, TEHSIL – NAWABGANJ, DISTRICT – BAREILLY.
PH :07895980222, '07895980300.

NOIDA

1888. FAIR DEAL CARS PVT. LTD. (A103-A1-01), D-39, SEC-10, NOIDA - 201301
PH :0120-4747300, 301.

1889. ROHAN MOTORS LTD. (A102-A1-01), C-8/9, SECTOR - I, NOIDA - 201301
PH :0120-4071900, 209,31,32,2529407, 2530535, 2539297, 2556663.

1890. ROHAN MOTORS LTD. (A102-A1-02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301
PH :0120- 4071900, 209,31,32,.

1891. MOTORCRAFT SALES PVT. LTD. (5903-A1-03), D-39, SECTOR-10, NOIDA - 201301
PH :9818660777, 9810500000.

1892. VIPUL MOTORS LTD. (A101-A1-02), B-124 & B-125, SECTOR – 5, NOIDA, UTTAR PRADESH - 201301
PH :8800785532, 9818600000.

1893. VIPUL MOTORS PVT. LTD. (A106-A1-01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301
PH :0120-4758605.

ORAI

1894. S B CARS PVT.LTD (2806-LU-02), KANPUR ROAD, ORAI - 285001
PH :9307219303.

PILIBHIT

1895. CORAL MOTORS (P) LTD. (IL01-IL-01), BISALPUR ROAD, PILIBHIT, U.P. - 262001
PH :9837891846.

PRATAPGARH

1896. GREENLAND MOTORS (2903-NK-02), PITAI KA PURVA, JOGAPUR, ALLAHABAD ROAD, PRATAPGARH - 230001
PH :9838075757.

PURANPUR

1897. CORAL MOTORS (P) LTD. (CAD1-CAD-01), KHASRA NO. 768 & 770, VILLAGE – KHAMRIYA PATTI, PURANPUR – PILIBHIT ROAD, TEHSIL AND PARGANA – PURANPUR, DIST. PILIBHIT. - 262124
PH :05880-9837891846, 9927001120.

RAIBAREILLY

1898. KTL LIMITED (1302-HS-05), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303
PH :0532-937177411,415.

RAMNAGAR

1899. NAINITAL MOTORS PVT. LTD. (XM01-XM-01), BASAI, KASIPUR ROAD, RAMNAGER - 244137
PH :05947-282013.

RAMPUR

1900. AKANKSHA AUTOMOBILES PVT. LTD. (B401-6L-02), JUDGES ROAD, RAMPUR, UTTAR PRADESH - 244901
PH :0595-9219415225.

RAYA

1901. UMA MOTORS PVT. LTD. (BXK1-BXK-01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204
PH :9837204254.

SAHARANPUR

1902. ATELIER AUTOMOBILES PVT. LTD. (S202-S2-01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001
PH :0173-2395001.

SAHIBABAD

1903. FAIR DEAL CARS PVT. LTD. (08A5-M9-01), 12/67 SITE 4, INDUSTRIAL AREA,,SAHIBABAD, GHAZIABAD - 110095
PH :0120-4740409/102/436.

1904. MOTORCRAFT SALES PVT. LTD. (5903-M9-01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010
PH :0120-4172222 / 4102222.

1905. T.R. SAWHNEY MOTORS PVT LTD (0819-M9-03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA,DISTT- GHAZIHABAD, UTTAR PRADESH - 201010
PH :204753300, 9811020333.

1906. MARKETING TIMES AUTOMOBILES PVT LTD (0887-M9-02), PLOT NO. 509 & 511, WAZIRABAD LONI ROAD , OPP. SHALIMAR GARDEN, SAHIBABAD DISTT GHAZIABAD,U.P. - 201005
PH :9873298702,9818799910.

SAMBHAL

1907. AKANKSHA AUTOMOBILES PVT. LTD. (BBP1-BBP-01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302
PH :0592-3232400.

SANDILA

1908. CONCEPT CARS PVT. LTD. (WY01-WY-01), PLOT NO.371, SARAY MARUFPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. - 241204
PH :05854-270001.

SHAHABAD

1909. CONCEPT CARS PVT. LTD. (AAX1-AAX-01), VILLAGE MUJAGADH, SHAHABAD - 241124
PH :9151783146.

SHAHJAHANPUR

1910. SUMITRA DS MOTORS PVT LTD (W201-W2-01), SITAPUR ROAD, NH-24, SHAHJAHANPUR - 242001
PH :05842-220333, 233909.

SHAMLI

1911. RADHA GOVIND AUTOMOBILES PVT. LTD. (XJ01-XJ-01), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776
PH :1398-244571, 244572-73.

SHIKOHABAD

1912. MADHUSUDAN VEHICLES PRIVATE LTD. (XH01-XH-01), 2508, KATRA MIRA, MAHAMMABAD, OPP PROFESSOR COLONY, NH 2, BYE PASS ROAD, SHIKOHABAD, DISTT: FIROZABAD,UTTAR PRADESH - 283203
PH :9837097894,9690003001.

SITAPUR

1913. CONCEPT CARS PVT. LTD. (QE01-6M-02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001
PH :9161284000.

SULTANPUR

1914. KIRTIKUNJ AUTOMOBILES PVT. LTD. (N101-N1-01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001
PH :05362-227760 , 220107.

SWAR

1915. AKANKSHA AUTOMOBILES PVT. LTD. (CQX1-CQX-01), IN FRONT OF EIDGAH, TEHSIL – SWAR, DISTRICT – RAMPUR, UTTAR PRADESH. - 244924
PH :9897069329.

THAKURDWARA

1916. AKANKSHA AUTOMOBILES PVT. LTD. (KO01-KO-01), 2 KM. MORADABAD ROAD, NEAR JEETA KA DHABA, SAHAB GANJ (MUNSHI GANJ), THAKURDWARA, DISTT. MBD. UTTAR PRADESH - 244601
PH :7895980519.

UNCHAHAR

1917. KTL PVT. LTD. (1302-IH-06), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, SALON, UNCHAHAR, DISTT: RAIBARELI - 229404
PH :9451133838.

UNNAO

1918. S B CARS (2806-KL-04), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO,U.P. - 209801
PH :5153-9839811711,202445.

VARANASI

1919. AGR AUTOMOBILES PVT. LTD. (8403-84-01), B-38/2A, MAHMOORGANJ, GOPAL VIHAR, VARANASI - 221010
PH :0542-2360436.

1920. VARANASI MOTORS PVT. LTD. (8402-84-01), THE MALL, CANTONMENT, VARANASI - 221001
PH :0542-2509068, 2509069.

1921. VARANASI MOTORS PVT. LTD. (8402-84-03), AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR, MOHANSARAI, RAJATALAB, VARANASI (U.P.) - 221311
PH :0542-2632786, 9838360662.

UTTARAKHAND

ALMORA

1922. NAINITAL MOTORS PVT. LTD. (J603-SQ-04), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHRAGARH ROAD, ALMORA - 263601
PH :9639016895.

BAGESHWAR

1923. NAINITAL MOTORS PVT. LTD. (J603-8I-05), KAPKOT ROAD, BAGESHWAR. - 263642
PH :9927708822.

BAZPUR

1924. AKANKSHA AUTOMOBILE (RUDRAPUR) PVT. LTD. (CGU2-CGU-01), KHASRA NO. 96/2, VILLAGE – BHONA, ISLAM NAGAR, TEHSIL – BAZPUR, UTTARAKHAND. - 262401
PH :5949-281122, 9837278256.

CHAMPAWAT

1925. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (SF02-SF-01), TANAKPUR LOHAGHAT ROAD, CHAMPAWAT, UTTARAKHAND - 262523
PH :05965 - 230033.

DEHRADUN

1926. D.D. MOTORS (5704-57-01), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN
PH :0135-2745330, 31, 32.

1927. FUTURE AUTO WHEELS PVT.LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001
PH :0129 -4271800.

1928. ROHAN MOTORS LTD. (5702-57-01), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001
PH :0135-2530955, 624519, 626097.

1929. ROHAN MOTORS LTD. (5702-57-02), 257/2, GMS ROAD,,VILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001
PH :0135-2720342/43/44.

DOIWALA

1930. FUTURE AUTO WHEELS (BRI1-BRI-01), 26, MISSARAWALA, DOIWALA, DISTRICT – DEHRADUN, UTTARAKHAND. - 248140
PH :8826077216.

GAIRSAIN

1931. ROHAN MOTORS (CRH1-CRH-01), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIC GROUND, GAIRSAIN, DISTRICT – CHAMOLI, UTTARA KHAND.
PH :9897507410.

GOPESHWAR

1932. ROHAN MOTORS LTD. (5702-MV-03), CHOTA, MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028
PH :01372-251572.

HALDWANI

1933. NAINITAL MOTORS PVT. LTD. (J603-J6-01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139
PH :9639016895.

1934. NAINITAL MOTORS PVT. LTD. (J603-J6-02), KALA DUNGI, NEAR ABDULLAH PETROL PUMP, HALDWANI - 263139
PH :9639016895.

HARIDWAR

1935. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-6N-01), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407
PH :01334-310676, 321432.

JASPUR

1936. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (BKL2-BKL-01), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712
PH :9837278256.

KARANPRAYAG

1937. ROHAN MOTORS (CRG1-CRG-01), BADRINATH ROAD, KARANPRAYAG, DISTRICT – CHAMOLI, UTTARAKHAND.
PH :9897507410.

KASHIPUR

1938. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (DG02-DG-01), BAZPUR ROAD, KASHIPUR - 244713
PH :9219408725.

KHATIMA

1939. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (XL02-XL-01), VILLAGE: KHETAL SANDA KHAM (SAL BHOJI NO.3, OPP. FOREST CORPORATION) PILIBHIT ROAD, KHATIMA,UDHAM SINGH NAGAR, UTTARAKHAND - 262308
PH :8191000813.

KOTDWAR

1940. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-2I-02), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTRAKHAND - 249001
PH :8755998075,9927708822.

PITHORAGARH

1941. NAINITAL MOTORS PVT. LTD. (J603-NM-03), VILLAGE PANDA, ODSAINI, DHARCHULA ROAD, PITHORAGARH - 262501
PH :9639016895.

RANIKHET

1942. NAINITAL MOTORS PVT. LTD. (AXA1-AXA-01), GANYADYOLI, NEAR DRUG FACTORY, RANIKHET DISTT. ALMORA (UTTARAKHAND) - 263645
PH :05962-230254.

RISHIKESH

1943. FUTURE AUTO WHEELS PVT. LTD. (AAS1-AAS-01), 640, LAXMAN JHULA ROAD, RISHIKESH. DISTT. DEHRADUN, UTTARAKHAND - 249201
PH :0135-2432387.

ROORKEE

1944. SHAKUMBARI AUTOMOBILES (P) LTD (H201-H2-01), 3RD KM STONE, DELHI-ROORKEE HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE DISTT HARIDWAR - 247667
PH :01332-326160, 72267, 76216.

RUDRAPRAYAG

1945. ROHAN MOTORS (IK01-IK-01), GULABRAI-BADRINATH ROAD, RUDRAPRAYAG - 246171
PH :1364-233118.

RUDRAPUR

1946. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (U404-U4-01), KICHHA BYE PASS ROAD, INDUSTRIAL AREA, RUDRAPUR - 263153
PH :05944-247203.

SELAQUI

1947. ROHAN MOTORS (CRF1-CRF-01), KHASRA NO.783, BAHADURPUR ROAD, NH-72, SELAKUI, DISTT.-DEHRADUN, UTTARAKHAND.
PH :9897507410.

SITARGANJ

1948. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (CD02-CD-01), PLOT NO.228/5 AND 228/6 KHATIMA ROAD, SITARGANJ, DISTT - RUDRAPUR, UTTARAKHAND. - 262405
PH :8192000375.

SRINAGAR

1949. SHAKUMBARI AUTOMOBILES (ANA1-ANA-01), SRICOT GANAGANALI , NEAR MEDICAL COLLEGE, PO- SRICOT, SRINAGAR - 246174
PH :1346-244571,244572-73.

TEHRI

1950. D.D. MOTORS (5704-SP-02), PLOT NO. 541, SECTOR-8E, DISTT. - NEW TEHRI - 249001
PH :01376-233144.

WEST BENGAL

ALIPURDUAR

1951. PODDAR CAR WORLD PVT. LTD. (BZO1-BZO-01), BIRPARA MORE, COOCH BEHAR ROAD, BESIDE GOYENKA PETROL PUMP, ALIPURDUAR, WEST BENGAL. - 736121
PH :03564-9800633338.

ARAMBAGH

1952. SANEI MOTORS PVT. LTD. (7T02-7T-01), R.S. DAG NO. 1887, R.S. KHATIAN NO. 104, HAL KHATIAN NO. 1233, MOUZA-PARUL, J.L.NO. 38, R.S.NO. 3111, P.S. ARAMBAGH, DISTT. HOOGHLY, WEST BENGAL - 712601
PH :8584050184.

ASANSOL

1953. BEEKAY AUTO PVT LTD (F601-F6-01), CHANDA MORE, N.H.-2, ASANSOL - 713301
PH :341-2344030/31/2343978, 9932049425.

ASHOKNAGAR

1954. STARBURST MOTORS PVT LTD (BXJ1-CLB-03), JESSORE ROAD, MANIKNAGAR, KHOSDELPUR MORE, P.S. – ASHOKNAGAR, NORTH 24 PARGANAS, WEST BENGAL. - 743222
PH :8697731763, 8336933447.

BAGDAH

1955. SANEI MOTORS PVT. LTD. (BON1-BON-01), C/O, DINABANDHU TARAFDAR, S/O LATE NARENDRANATH TARAFDAR, VILLAGE – HALENCHA SOUTH, P.O. – HALENCHA COLONY, P.S. – BAGDAH, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL. - 743270
PH :8584050184.

BAHRAMPUR

1956. BEEKAY AUTO PVT LTD (T301-DJ-02), BOKULTALA (PASCHIM GAMINI), NH-34, BAHARAMPUR, DISTT. MURSHIDABAD. - 742101
PH :3482-267340.

BAJKUL

1957. BHANDARI AUTOMOBILES LTD (CAV1-CAV-01), VILLAGE – KAPTYAPA BARI, P.O. – KAJLAGARH, P.S. – BHAGWANPUR, BAJKUL, DISTRICT – PURBA MIDNAPORE. - 721626
PH :9933055539.

BANKURA

1958. BHANDARI AUTOMOBILES LTD. (G701-6Q-02), PLOT NO.-156, KH NO.-173, MITHILA MOUZA, AT/PO-BANKURA (WB) - 722101
PH :34242-256766.

BARASAT

1959. PREMIER CARWORLD PVT. LTD. (XZ03-XZ-01), R.S DAG NO. 512 AND PARTY IN DAG NO. 513, MOUZA-KHILKAPUR, P.O BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 146, J.L NO. 4, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL - 700125
PH :8420122407.

BARJORA

1960. BHANDARI AUTOMOBILES PVT. LTD. (BED1-BED-01), VILLAGE + P.O. + P.S. – BARJORA, MOUZA – BARJORA, JL NO. 46, KHATIAN NO. 3380, PLOT NO. 2795, BARJORA DISTRICT – BANKURA, WEST BENGAL. - 722202
PH :8016087297.

BARRACKPORE

1961. STARBURST MOTORS PVT LTD (BXJ1-CIY-02), NEAR RAIL GATE, WARD NO. 24, WEST BARASAT ROAD, P.S. – TITAGARH, BARRACKPORE, DISTRICT – NORTH 24 PARGANAS, KOLKATA. - 700120
PH :9836303777.

BARSUNDRA

1962. BHANDARI AUTOMOBILES PVT LTD (G701-BJW-05), PLOT NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE. WEST BENGAL - 721654
PH :9933055539.

BARUIPUR

1963. ONE AUTO PVT LTD (ACA1-ACA-01), MAHENDRA NIKETAN, KHASH MALLICK, P.O. SOUTH GOBINDAPUR, P.S.- BARUIPUR, DISTT. SOUTH 24 PARGANAS, WEST KOLKATA (WEST BENGAL) - 700145
PH :8584018013.

BASIRHAT

1964. BHANDARI AUTOMOBILES LTD. (X701-0D-03), RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. - 743428
PH :3217-249192, 249194.

BISHNUPUR

1965. BHANDARI AUTOMOBILES PVT. LTD. (AAG1-AAG-01), STATION ROAD, P.O+P.S-BISHNUPUR, DIST: BANKURA, WEST BENGAL - 722122
PH :9933055539.

BOLPUR

1966. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-TC-03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM
PH :3463-252577, 252777.

BONGAON

1967. STARBURST MOTORS PVT LTD (TQ02-TQ-01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235
PH :9874195451.

BUDGE BUDGE

1968. ONE AUTO PVT. LTD. (BAV1-BAV-01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141
PH :8335050357/8442830001.

BURDWAN

1969. BEEKAY AUTO PVT LTD (T301-T3-03), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL - 713101
PH :033-9932049454.

C K ROAD

1970. BHANDARI AUTOMOBILES PVT. LTD. (D001-D0-01), P.O:SAT BANKURA, PS:GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252
PH :3222-9933055539.

CANNING

1971. OSL MOTORCORP PVT. LTD. (CEG1-CEG-01), MOUZA – DIGHIR PAAR, J.L NO. 121, PARGANA – SUNDARBAN, TOUZI NO. 2692/2834, P.S. – CANNING, SOUTH 24 PARGANAS, WEST BENGAL. - 743329
PH :8336996179.

CHAKDAHA

1972. BHANDARI AUTOMOBILES (OM01-OM-01), VILLAGE – PUMLIA, P.O. – CHAKDAHA, DISTRICT – NADIA, WEST BENGAL. - 741222
PH :9073940368, 9674735303, 9674169007.

CHANDITALA

1973. BHANDARI AUTOMOBILES PVT. LTD. (BPC3-BPC-01), RS DAG NO.2986, LR DAG NO. 3150, UNDER L R KHATIAN NO.3859, MOUZA-KRISHNARAMPUR, J.L. 59, POLICE STATION-CHANDITALA, HOOGHLY, WEST BENGAL - 712702
PH :9830044089.

CHANDRAKONA

1974. BHANDARI AUTOMOBILES PVT. LTD. (D001-CIP-02), AT. VILL. GOSAI PO+PS CHANDRAKONA TOWN, MOUZA DHARABILA, J.L.NO. 095, KHATIAN NO. 315, PLOT NO. 203 & 189, NEAR MUNIPAL GATE TOWARDS C.K. ROAD. - 721201
PH :8945526833.

CONTAI

1975. BHANDARI AUTOMOBILES LTD. (G701-GV-03), SERPUR BAMUNBAR,P O- MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401
PH :3220-254572.

COOCH BEHAR

1976. PODDAR CAR WORLD PVT. LTD. (BWZ1-BWZ-01), CHAKCHAKA, NEELKUTHI BAZAR, NEAR ADA FACTORY, NH-31, COOCH BEHAR, WEST BENGAL. - 736101
PH :'03582-258567, 7031045594.

DARJEELING

1977. BEEKAY AUTO PVT LTD (4301-6U-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101
PH :354-9233539579.

DHUPGURI

1978. BEEKAY AUTO PVT. LTD. (BWD1-BWD-01), MOUZA – DHUPGURI, PLOT NO. 1814, WARD NO. 16, DHUPGURI, DISTRICT – JALPAIGURI, WEST BENGAL. - 735210
PH :7477785203.

DIAMOND HARBOUR

1979. ONE AUTO PVT. LTD. (YE01-YE-01), VILLAGE – CHEWRA, OPPOSITE – K.E. CARMEL SCHOOL, P.O. – SARISHA HAT, P.S. – DIAMOND HARBOUR, DISTRICT – 24 PARGANAS (S) , WEST BENGAL. - 743368
PH :8442830001.

DURGAPUR

1980. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213
PH :343-2547777, 9233500277.

FALTA

DEALER WORKSHOP (AS ON 20.07.2018)

1981. OSL MOTOCORP PVT. LTD. (CFA1-CFA-01), JL 16, TOUZI NO. 37, DAG NO. 440, FALTA, DISTRICT – 24 PARGANAS, WEST BENGAL. - 743504
PH :8336996547.

GHATAL

1982. BHANDARI AUTOMOBILES (AAD1-AAD-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL,WEST MIDNAPORE,WEST BENGAL - 721211
PH :9933055539.

GOPIBALLAVPUR

1983. BHANDARI AUTOMOBILES PVT. LTD. (BPQ1-BPQ-01), JL NO. 1103, KHATIAN NO. 1103, PLOT NO. 438, VILLAGE + P.O. + P.S. – GOPIBALLVPUR , MOUZA – GOPIBALLVPUR, WEST MIDNAPUR, WEST BENGAL. - 721506
PH :9933055539, 8170018577.

HALDIA

1984. BHANDARI AUTOMOBILES LTD. (G701-SE-04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657
PH :3224-8016082344, 9233502421.

HOWRAH

1985. BHANDARI AUTOMOBILES LTD. (X701-X7-01), BANKRA THANA,DOMJUR,HOWRAH. - 711403
PH :33-66137528/18/06.

1986. PREMIER CARWORLD PVT. LTD. (0611-X7-02), MOUZA – PRASASTHA, P.S. – DOMJUR, UNDER MOHIARY 2 NO. GRAM PANCHAYAT, ANKURHATI, HOWRAH, WEST BENGAL. - 711302
PH :9830177558.

JALPAIGURI

1987. PODDAR CAR WORLD PVT. LTD. (XY01-XY-01), COLLEGE PARA, SIRISHTALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101
PH :03561-257155, 257066, 8945534921.

JHARGRAM

1988. BHANDARI AUTOMOBILES PVT. LTD. (BUG1-BUG-01), DAG NO.383, KHATAN NO. JL396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507
PH :8016087297, 9933055539.

KALNA

1989. BEEKAY AUTO PVT LTD (WZ01-WZ-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409
PH :9932251483.

KALYANI

1990. STARBURST MOTORS PVT LTD (IJ01-IJ-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. U I C UDYOG, NEAR: J I S COLLEGE), KALYANI. - 741234
PH :033-25824139/25824140.

KESHPUR

1991. BHANDARI AUTOMOBILES PVT. LTD. (CCM1-CCM-01), JL NO. 338, KHATIAN NO. 786/2, PLOT NO. 1749, MOUZA – KESHPUR, VILLAGE + P.O. + P.S. – KESHPUR, WEST MIDNAPUR, WEST BENGAL. - 721150
PH :721150, 8170014289.

KHARAGPUR

1992. BHANDARI AUTOMOBILES LTD. (G701-G7-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL - 721301
PH :3222-755537.

KOLKATA

1993. AUTO HITECH PRIVATE LIMITED (0604-06-01), 34-A, C.N. ROY ROAD, KOLKATA - 700039
PH :33-40218200,8231/8222/8262.

1994. DEWAR'S GARAGE (0605-06-01), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUTTA - 700069
PH :33-2483397 (NA).

1995. MACHINO TECHNO SALES LTD. (0601-06-01), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA - 700017
PH :33-30285317/18/16/12/15,08272981466.

1996. MACHINO TECHNO SALES LTD. (0601-06-02), 48 A, TARATALA ROAD, KOLKATA - 700066
PH :33-24913755, 24913993.

1997. PREMIER CARWORLD PVT. LTD. (0611-06-01), AGARPARA JUTE MILL, 28-B.T.ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058
PH :33-66065555/25235910.

1998. BHANDARI AUTOMOBILES PVT. LTD. (0609-06-01), BUDGE BUDGE TRUNK ROAD, NEW GOPALPUR, SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24 PARGANAS, WEST BENGAL - 700143
PH :033-64995331/2.

1999. BHANDARI AUTOMOBILES PVT. LTD. (0609-06-02), 37, GULAM JILANI KHAN ROAD, KOLKATA. - 700039
PH :033-9903850402/9830044089.

2000. SANEI MOTORS PVT. LTD. (0612-06-01), 16/2 CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION,KOLKATA - 700067
PH :033-30103043.

2001. ONE AUTO PVT. LTD. (0614-06-02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA , WEST BENGAL - 700105
PH :033-8442830001.

2002. ONE AUTO PVT LTD (0614-06-01), JL NO.3, MOUZA-JAGADIPOTA, P.S:SONARPUR, KHEYADAHA NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099
PH :8442830001.

2003. DEWAR'S GARAGE (0605-06-03), P-27/2, TARATALA ROAD, KOLKATA - 700088
PH :033-24010011, 8584015273.

2004. SANEI MOTORS PVT LTD (0612-06-02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059
PH :8584050184, 958405071.

2005. OSL MOTOCORP PVT. LTD. (0616-06-01), 49 DEBENDRA CHANDRA DEY ROAD, LANE BESIDE SILVER SPRING CLUB, E.M. BYE-PASS, KOLKATA - 700015
PH :3369466946, 08697982283.

KOTULPUR

2006. BHANDARI AUTOMOBILES LTD (BIP1-BIP-01), KHATIAN NO.644, PLOT NO.373, JL NO. 101, VILLAGE - MULDARA, P.S. + P.S. - KOTULPUR, DISTT.-BANKURA, WEST BENGAL. - 722141
PH :9933055539.

KRISHNANAGAR

2007. BHANDARI AUTOMOBILES LTD. (X701-GS-02), PLOT NO.-1874, MOUZA-GOBINDSARAK ,J.K. NO. 94, PS-KOTWAL, OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011
PH :3472-223587.

MADHYAMGRAM

2008. STARBURST MOTORS PVT LTD (BXJ1-BXJ-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129
PH :9830130265.

MALBAZAR

2009. BEEKAY AUTO PVT LTD (BWG1-BWG-01), CALTEX MORE, VILLAGE + P.S. – MALBAZAR AND DISTRICT – JALPAIGURI . - 735221
PH :3562-7477785203.

MALDA

2010. J.K. WHEELS PVT LTD (L801-L8-01), GABGACHHI, N.H. 34, MALDA, - 732103
PH :3512-258884, 266379.

MATHABHANGA

2011. BEEKAY AUTO PVT LTD (BQF1-BQF-01), SITAKULCHI ROAD, WARD NO.9,MATHABHANGA, DISTRICT – COOCHBEHAR. - 736146
PH :7477785202.

MOHANPUR

2012. BHANDARI AUTOMOBILES PVT LTD (CIV1-CIV-01), VILLAGE-NAYAGAON, P.O. -PAROI, P.S.-MOHANPUR, MOUZA - NAYAGAON, JL NO.395, KHATIAN NO.175/1, PLOT NO.895, DISTT.-PASCHIM MIDNAPUR,W.BENGAL. - 721436
PH :9933055539.

NAIHATI

2013. PREMIER CARWORLD PVT. LTD. (YD01-YD-01), P.O. BHATPARA, GRAM-MUKTARPUR, P.S. - JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) - 743123
PH :8420122451.

PANDUA

2014. BHANDARI AUTOMOBILES PVT LTD (BOS1-BOS-01), GT ROAD, PANDUA, NEAR KAKOLI CINEMA HALL, OPP. POWER HOUSE, HOOGLY, WEST BENGAL. - 712149
PH :9830044089.

PANSKURA

2015. BHANDARI AUTOMOBILES PVT. LTD. (BPS1-BPS-01), MOUZA – PASCHIM NEKRA, JL NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL. - 721139
PH :7478000389.

PURULIA

2016. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-6W-02), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149
PH :3252-242100.

RAGHUNATHPUR

2017. BEEKAY AUTO PVT. LTD. (CKZ1-CKZ-01), MOUZA – BUNDLA, J.L. NO. 197, PLOT NO. 2656, KHATIAN NO. LR 207, P.O. – RAGHUNATHPUR, P.S. – RAGHUNATHPUR, DISTRICT – PURULIA. - 723133
PH :7478004463, 99320494425.

RAIGANJ

2018. JK WHEELS PVT. LTD. (BN02-BN-01), JL NO. 150, KHATIAN NO. 168/3 & 168/4, PLOT NO. 4158., P.S. – RAIGANJ, MUNICIPALITY – RAIGANJ, WARD NO. 11, HOLDING NO. 577/N, MOUZA – RAIGANJ, DISTRICT – UTTAR DINAJPUR, - 733134
PH :9733020202.

RANAGHAT

2019. STARBURST MOTORS PVT LTD (BBW1-BBW-01), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309, RANAGHAT, DISTT: NADIA - 741238
PH :8584040215, 8336933447.

RUPNARAYANPUR

2020. BEEKAY AUTO PVT. LTD. (BWS1-BWS-01), P.S. – SALANOUR, UNDER MOUZA – JEMARI, J.L. NO. 32, PLOT NO. 343-344, KHAITAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL. - 713335
PH :9932049425.

SEORI

2021. BEEKAY AUTO PVT LTD (F601-KC-02), RAMBADANPUR, NEAR SP MORE, DIST-BIRBHUM, SEORI - 731101
PH :3462-259055 / 9233503153.

SHYAMPUR

2022. SANEI MOTORS PVT LTD (CAW1-CAW-01), VILLAGE + P.O. – GOBINDAPUR, P.S. – SHYAMPUR, DISTRICT – HOWRAH, WEST BENGAL . - 711314
PH :8584050184.

SILIGURI

2023. BEEKAY AUTO PVT LTD (4301-43-01), NH-31, P.O. MATIGARA,SILIGURI. - 734428
PH :353-2002254, 6533554.

2024. BEEKAY AUTO PVT LTD (4301-43-04), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001
PH :353-2568592, '9932049347.

2025. SEVOKE MOTORS PVT. LTD. (4302-43-01), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001
PH :353-2545309/12/13.

SREERAMPORE (SREERAMPUR)

2026. BHANDARI AUTOMOBILES (BBT1-BBT-01), BANGIHATI (MADPUR) DELHI ROAD, SREERAMPUR, DISTT: HOOGHLY, WB - 712203
PH :33-66137505, 66137585, 9674741544.

TAMLUK

2027. BHANDARI AUTOMOBILES PVT. LTD. (OL01-OL-01), MOUZA PADUMBASAN, WARD NO 10, JL NO:144, DISTT: EAST MIDNAPUR, WEST BENGAL - 721636
PH :9933055539.

TARAKESHWAR

2028. SANEI MOTORS PVT. LTD. (YH01-YH-01), MOUZA BAIDYAPUR, UNDER BALIGORI(1), GRAM PANCHAYET, TARAKESHWAR, DISTT. HOOGLY, WEST BENGAL.
PH :9836872710.

UDAYNARAYANPUR

2029. BHANDARI AUTOMOBILES PVT. LTD. (BOO1-BOO-01), VILLAGE-JANGALPARA BELGRAM, PS- UDAYNARAYANPUR, DIST-HOWRAH, WEST BENGAL. - 711226
PH :9830044089.

ULUBERIA

2030. BHANDARI AUTOMOBILES (2401-24-01), HOLDING 1242A, BANITABLA, P.O+P.S: ULUBERIA, NH-6, DISTT: HOWRAH, WEST BENGAL - 711316
PH :8336070344.

DELHI

DELHI

1. J.J IMPEX (MARUTI SERVICE MASTERS)
   (0883-08-03), C-7 SMA INDUSTRIAL ESTATE, G T
   KARNAL ROAD, NEW DELHI - 110033
   PH :011-40715500, 40715501.
2. J.J IMPEX (MARUTI SERVICE MASTERS)
   (0883-08-01), F-39,OKHLA INDUSTRIAL
   AREA,PHASE-II,NEW DELHI - 110020
   PH :011-41612194, 40685500.
3. MARUTI SALES & SERVICE(DELHI) (0810-08-01),
   C-119, INDUSTRIAL AREA PHASE-I, NARAINA,
   NEW DELHI - 110028
   PH :011-45541113.

TAMIL NADU

CHENNAI

4. J.J IMPEX (MARUTI SERVICE MASTERS)
   (1485-14-01), # 9, (SP),THIRU-VI-KA INDUSTRIAL
   ESTATE, GUINDY, CHENNAI - 600032
   PH :044-43563366, 43563367.

ARUNACHAL PRADESH

ITANAGAR

1. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111
PH :0360-2212843.

ASSAM

BARPETA

2. ROY AUTO ENGINEERING WORKS (7Z81-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD , WARD NO.-4, ASSAM - 781315
PH :03666-260343,262743.

DULIAJAN

3. B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. - 786602
PH :0374-2801255.

BIHAR

PATNA

4. CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA - 800013
PH :0612-2265916,9334115999.

CHHATTISGARH

RAIGARH

5. SHAKTI AUTOMOBILES (7Y81-7Y-01), ORRISSA ROAD, KABIR CHOWK, BANJHIPALI, RAIGARH, C.GARH - 496001
PH :9300006496.

DELHI

DELHI

6. A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, ,LAWRANCE ROAD,,DELHI - 110035
PH :011-48280000.
7. GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA,TILAK NAGAR,NEW DELHI, - 110018
PH :011-43276666.

HARYANA

BALLABGARH

8. ROYAL MOTORS (9R81-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004
PH :0129-4271800, 9899242536, 2242536.

MURTHAL

9. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44 HSIIDC, MURTHAL - 131027
PH :0130-2482230.

PANCHKULA

10. CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113
PH :0172-2592310, 2594310, 5064336.

PANIPAT

11. VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103
PH :180-4001490.

SAHA

12. PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.- AMBALA - 133104
PH :0171-2822669, 9896402469.

YAMUNANAGAR

13. HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001
PH :1732-261937.

HIMACHAL PRADESH

JASSUR

14. CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201
PH :01893-226555.

JAMMU & KASHMIR

SRINAGAR

15. RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR - 2441384
PH :0194-2435909.

JHARKHAND

RANCHI

16. PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48 , KOKAR INDUSTRIAL AREA, RANCHI. - 834001
PH :0651-2544661, 2542650.

KERALA

ERNAKULAM

17. AUTOTEAM SALES & SERVICES PVT.LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN, ERNAKULAM, COCHIN - 682024
PH :9847521112.

KOTTARAKARA

18. CHITHIRA AUTOMOBILES (C781-S8-01), RAILWAY STATION JUNCTION ,KOTTARAKARA - 691506
PH :0474-9447711001.

PATHNAMTHITTA

19. AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA - 689640
PH :0468-9288117477.

MADHYA PRADESH

NEEMUCH

20. AUTO SCAN (3T81-3T-01), MHOW ROAD,NEEMUCH,MADHYAPRADESH, - 454775
PH :07423-221912.

MAHARASHTRA

PUNE

21. MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017
PH :020-65001981.

THANE

22. THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE - 400007
PH :022-25872222.

ORISSA

KEONJHAR

23. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001
PH :06766-256466.

PUNJAB

BATALA

24. CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505
PH :01871-98724024253.

MOGA

25. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA - 142001
PH :1636-226807.

RAJASTHAN

JAIPUR

26. KATARIA AUTOMOBILES (1181-11-01), 1-A ; NARAYANPURI,KATARIA KRISHI FARM,SIRSI ROAD,JAIPUR - 302034
PH :141-2471740/2471014 /2471406.

TELANGANA

HYDERABAD

27. RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D,NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD - 500068
PH :040-9848062263.

UTTAR PRADESH

AGRA

28. PRIME MOTORS (6681-66-01), 8B/7D, BYE PASS ROAD, DEV NAGAR, AGRA - 282007
PH :0562-2531881,2531882.

ALIGARH

29. VINEET MOTORS (MSZ) (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001
PH :9917473052, 9582123586.

BULANDSEHAR

30. SK & COMPANY (M581-M5-02), KHASRA NO. 2261, NEAR T POINT , BY PASS SHIKARPUR ROAD , BULANDSHAHR. - 203395
PH :05732-235400.

GHAZIABAD

31. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD - 201102
PH :9999107841, 9997093422.
32. KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR,HAPUR ROAD,GHAZIABAD - 201002
PH :2714143, 9210026200.

LUCKNOW

33. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW - 226003
PH :0522-2473369.

MEERUT

34. UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, - 250001
PH :9568001008.

NOIDA

35. FAST TRACK AUTO CARE INDIA PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301
PH :120-4581111/31.
36. JKM MOTORS (A184-A1-01), A-25,SECTOR 9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301
PH :0120-4052400.
37. MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125,SECTOR-63,NOIDA, - 201301
PH :0120-2402671-72.
38. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8 & 9,SECTOR-8,NOIDA - 201301
PH :0120-5332222.

SAHIBABAD

39. FAST TRACK SERVICES, (M981-M9-01), PLOT NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010
PH :9560868111.

UNNAO

40. VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, - 209801
PH :0515-2830610,2831248.

VARANASI

41. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002
PH :0542-25100469, 9415203641.

WEST BENGAL

KOLKATA

42. MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027
PH :33-24568326, 24486568, 24568325.

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO