


ELECTRICAL WIRING SCHEMATIC

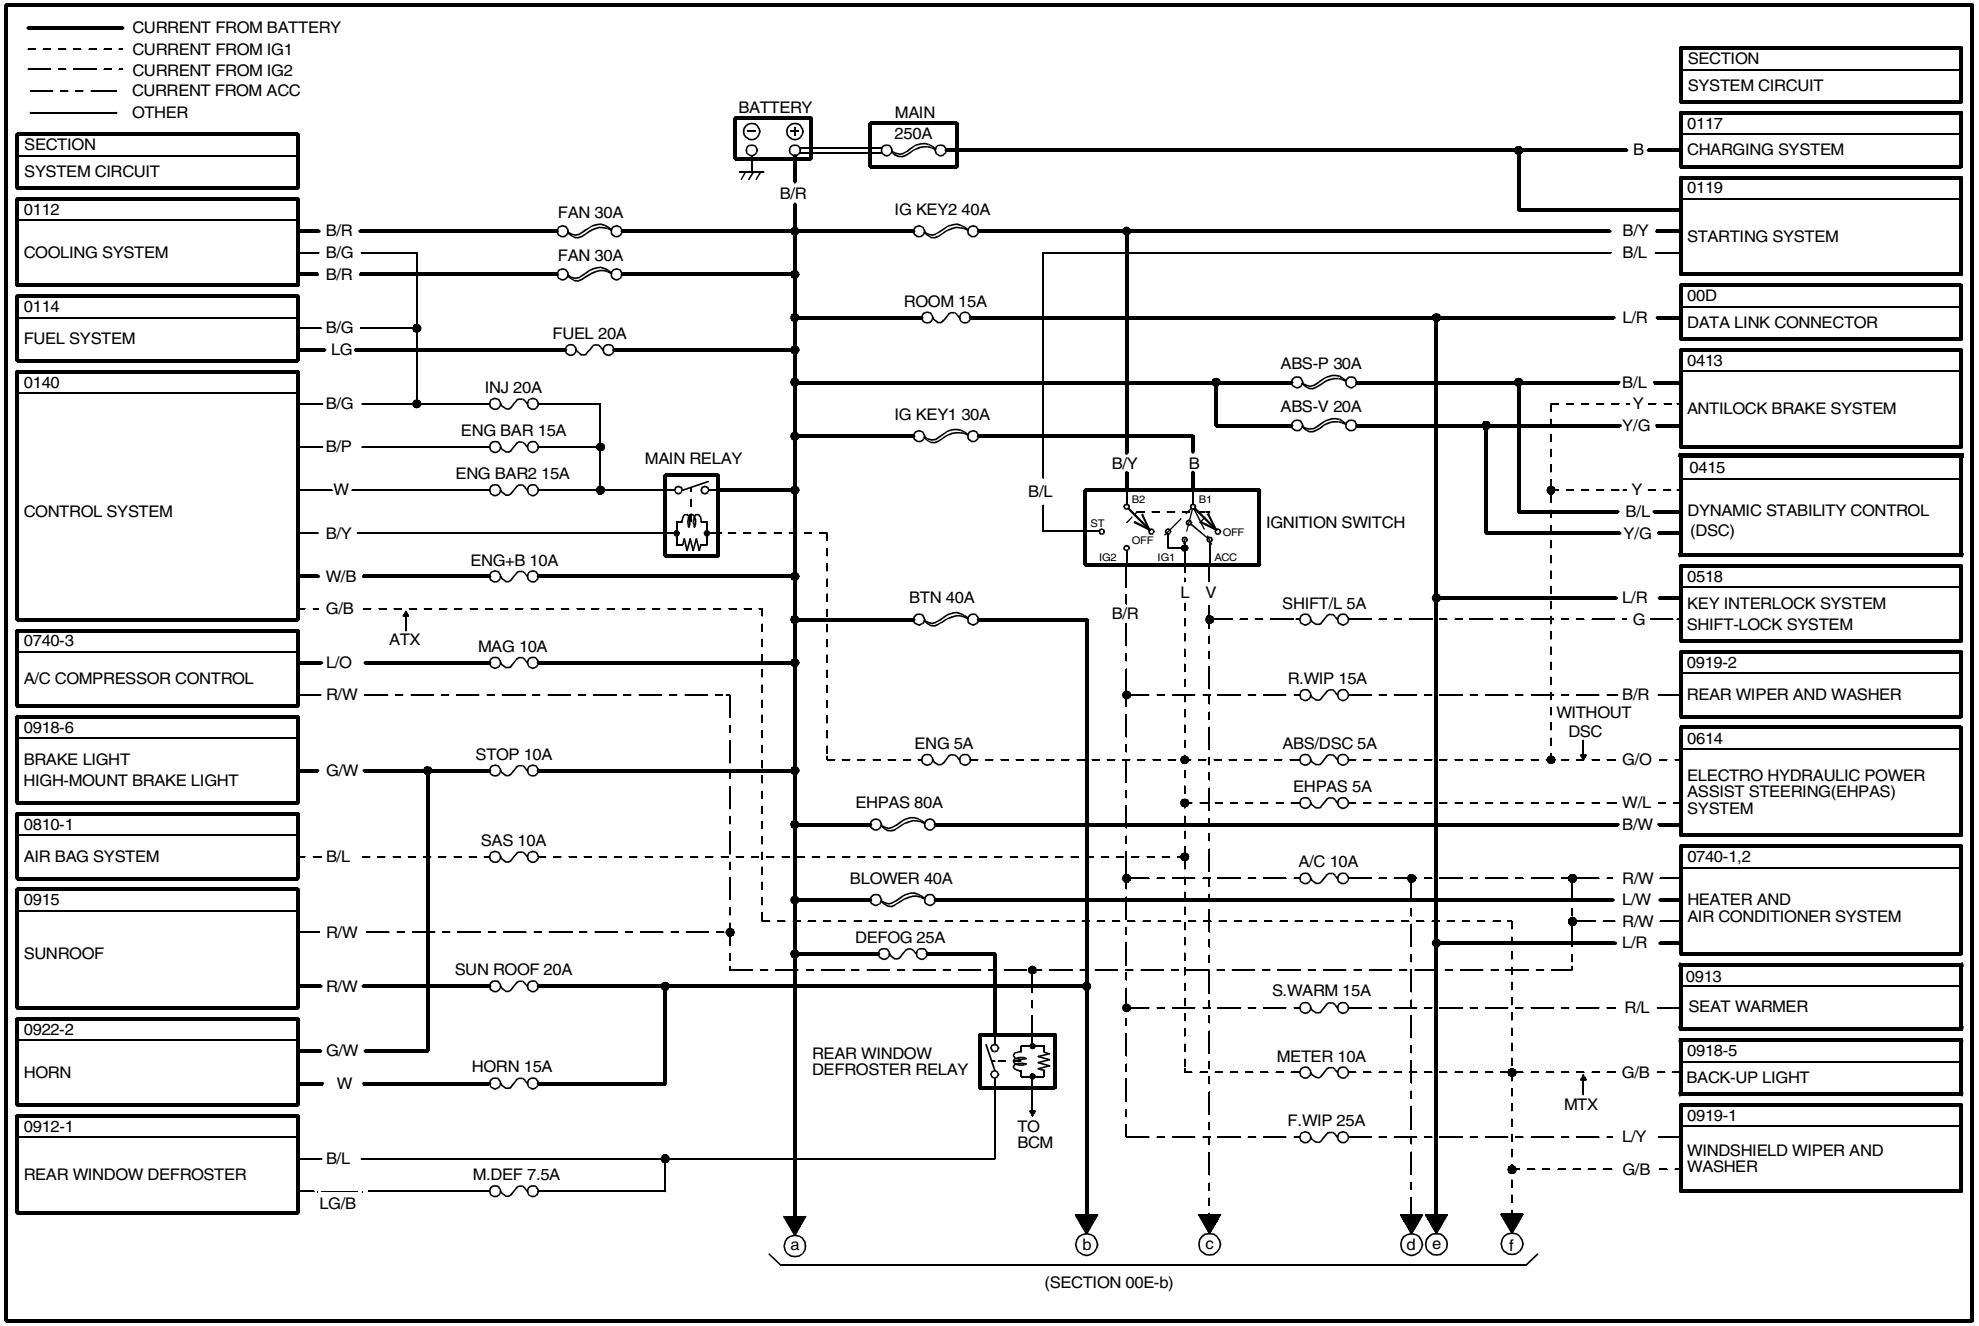

ELECTRICAL WIRING SCHEMATIC

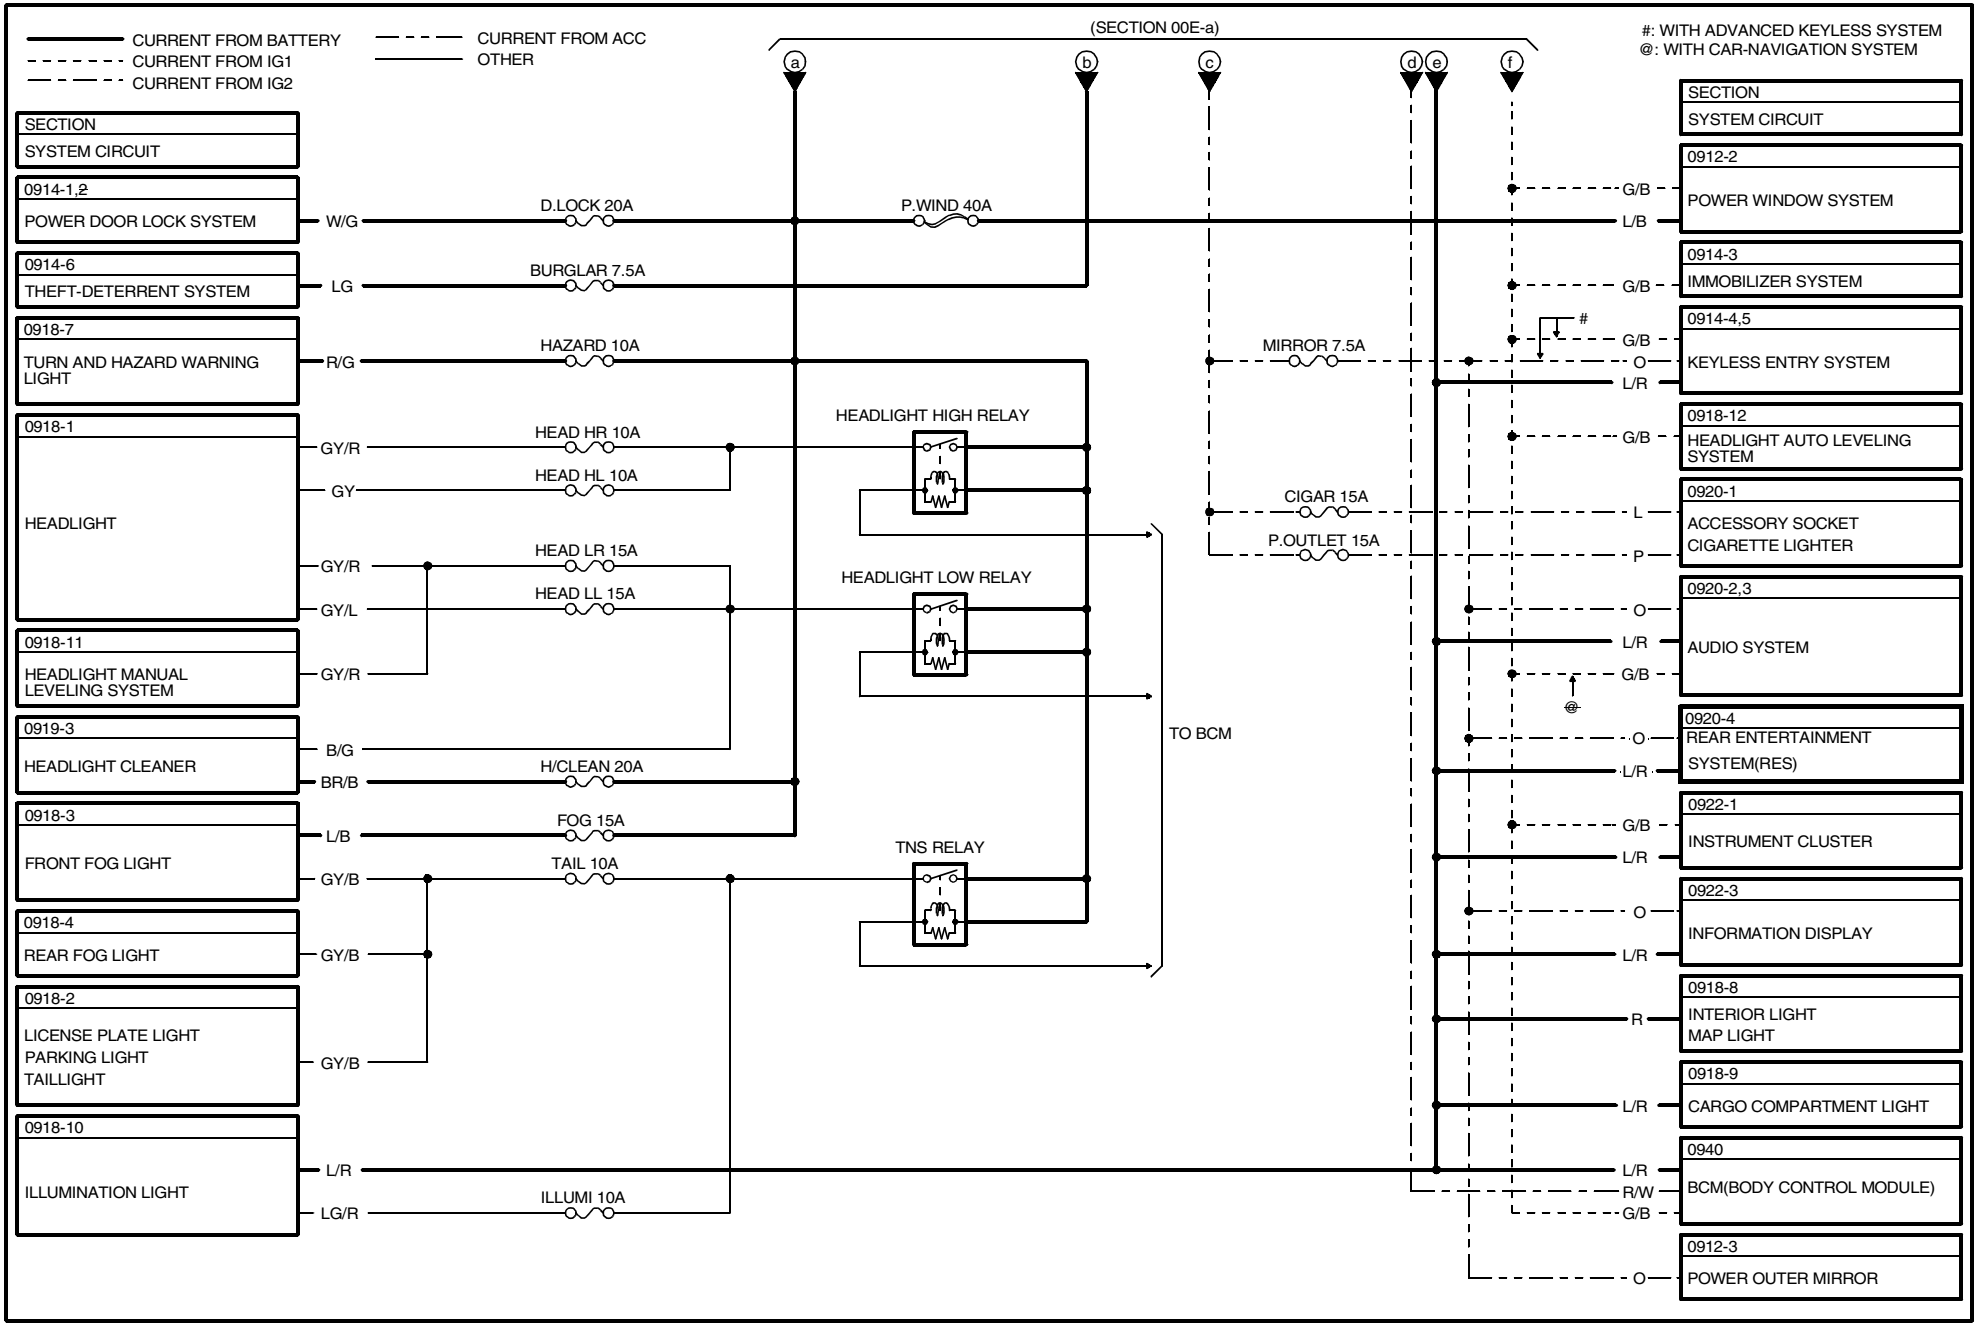

F-01 MAIN FUSE BLOCK

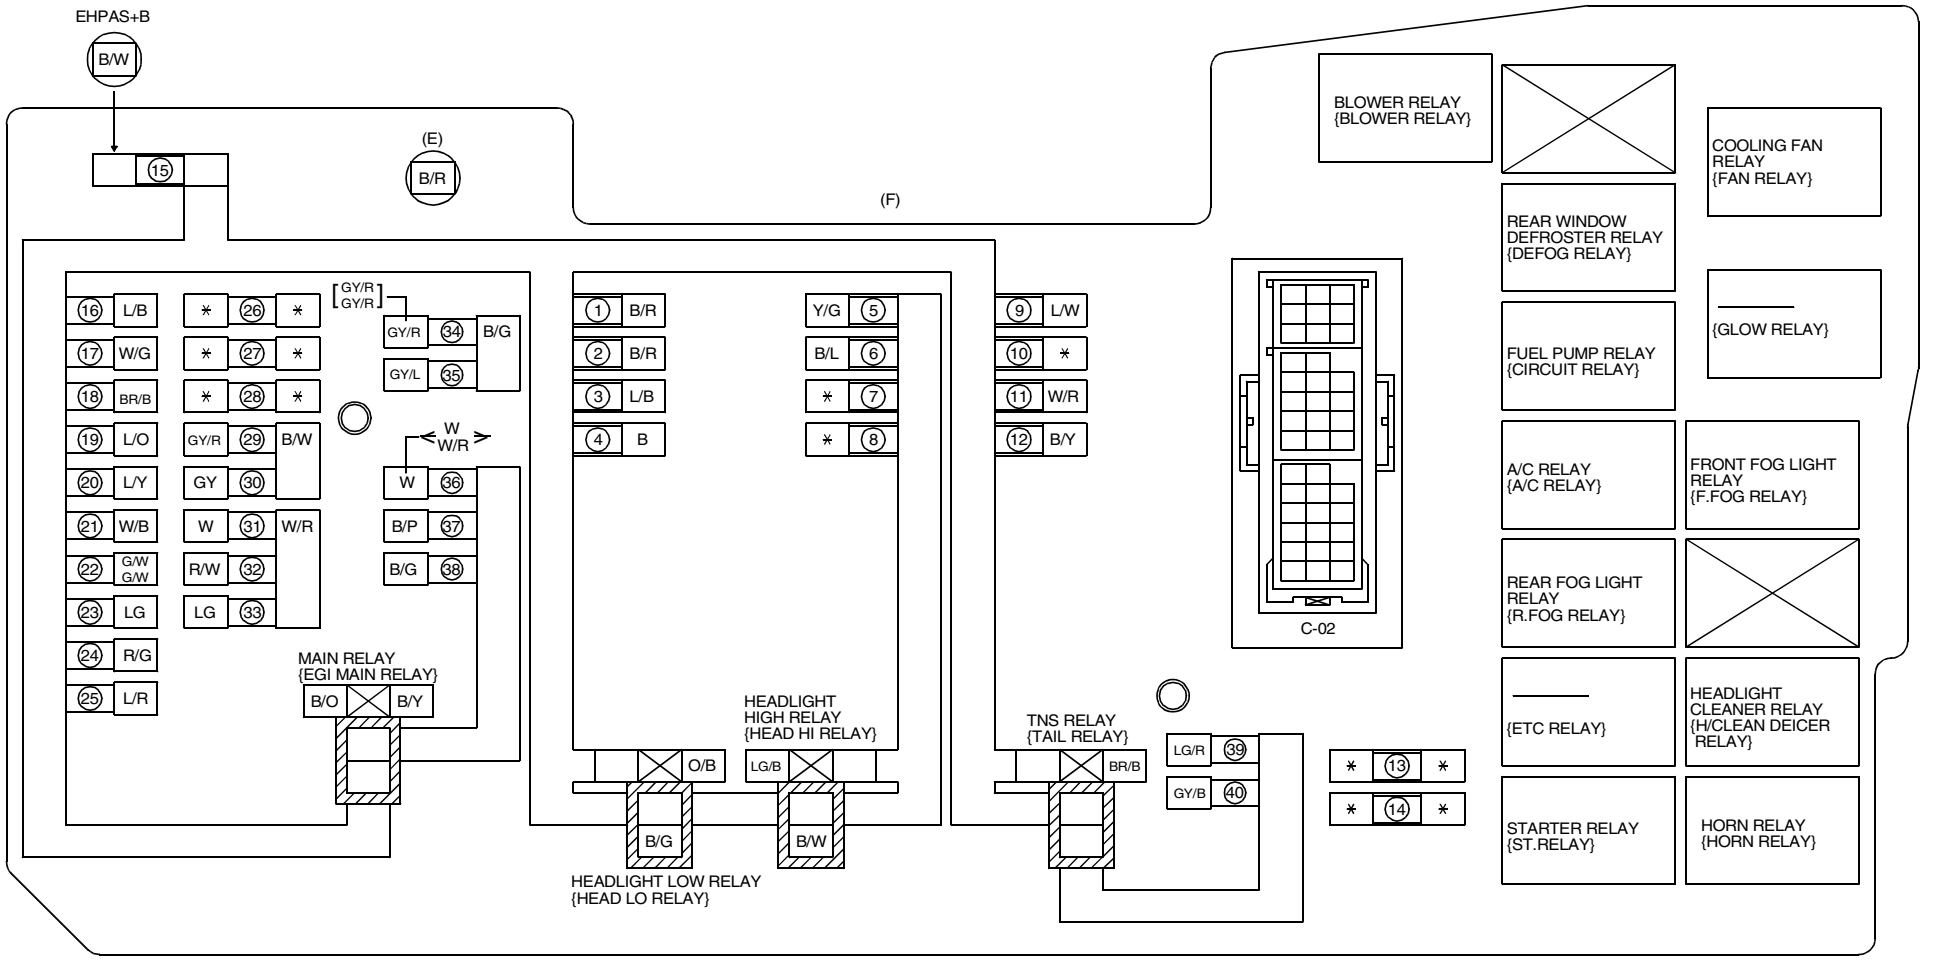

NOTE:SEEN FROM TERMINAL SIDE

< > ATX
{ } NAME INDICATED ON FUSE BOX COVER
[ ] WITH HEADLIGHT MANUAL LEVELING SYSTEM
*: VACANT

FUSE BOX


F-01 MAIN FUSE BLOCK

(F)

NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
①	FAN	30A	㉑	ENG+B	10A
②	FAN	30A	㉒	STOP	10A
③	P.WIND	40A	㉓	FUEL	20A
④	IG KEY1	30A	㉔	HAZARD	10A
⑤	ABS-V	20A	㉕	ROOM	15A
⑥	ABS-P	30A	㉖	———	———
⑦	(IG KEY2)	(20A)	㉗	———	———
⑧	(HEATER) (DEICER)	(20A)	㉘	(GLOW SIG)	(7.5A)
⑨	BLOWER	40A	㉙	HEAD HR	10A
⑩	(GLOW) (IG KEY1)	(40A)	㉚	HEAD HL	10A
⑪	BTN	40A	㉛	HORN	15A
⑫	IG KEY2	40A	㉜	@SUN ROOF	@20A
⑬	(CLOSER LH) (P.SLIDE LH)	(20A)	㉝	(ETC MIRROR) BURGLAR	7.5A
⑭	(CLOSER RH) (P.SLIDE RH)	(20A)	㉞	HEAD LR	15A
⑮	EHPAS	80A	㉟	HEAD LL	15A
⑯	FOG	15A	㊱	ENG BAR2	15A
⑰	D.LOCK	20A	㊲	ENG BAR	15A
⑱	(P.WIND) H/CLEAN	20A	㊳	INJ	20A
⑲	MAG	10A	㊴	ILLUMI	10A
⑳	DEFOG	25A	㊵	TAIL	10A

( ) NOT USED
@: IF EQUIPPED

F-02 FUSE BLOCK(I)

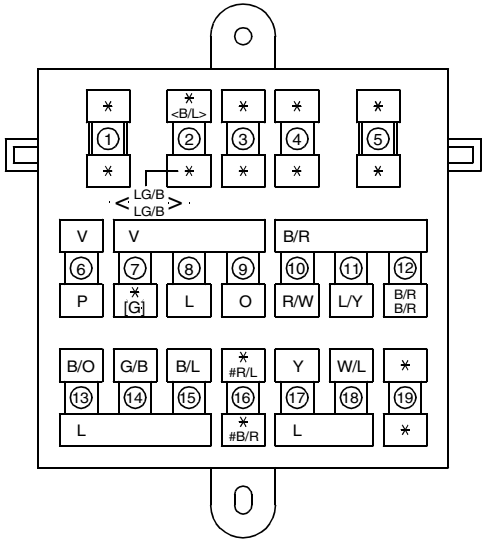


NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
①	———	———	⑪	F.WIP	25A
②	@M.DEF	@7.5A	⑫	R.WIP	15A
③	———	———	⑬	ENG	5A
④	———	———	⑭	METER	10A
⑤	———	———	⑮	SAS	10A
⑥	P.OUTLET	15A	⑯	@S.WARM	@15A
⑦	@SHIFT/L	@5A	⑰	ABS/DSC	5A
⑧	CIGAR	15A	⑱	EHPAS	5A
⑨	MIRROR	7.5A	⑲	———	———
⑩	A/C	10A			


[ ] ATX
< > WITH HEATED OUTER MIRROR
#: WITH SEAT WARMER
@: IF EQUIPPED
*: VACANT

COMMON CONNECTOR LIST

C-01 IGNITION SWITCH/ KEY REMINDER SWITCH(I)

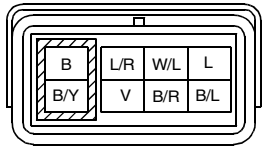


C-02 FRONT(F)-ENGINE(E)

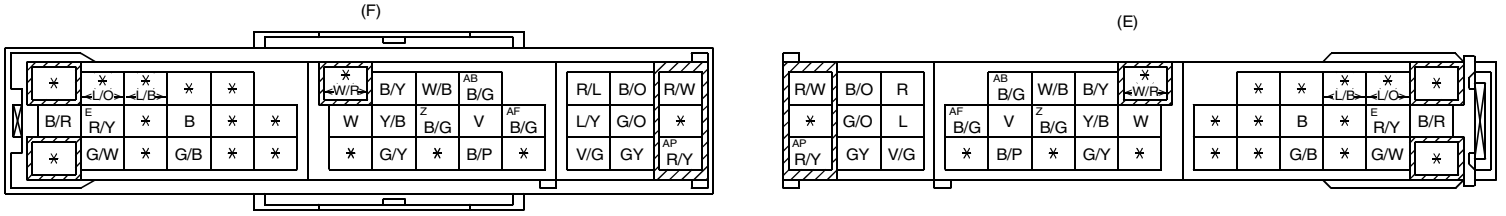


< > ATX
*: VACANT

C-03 FRONT(F)-INSTRUMENT PANEL(I)

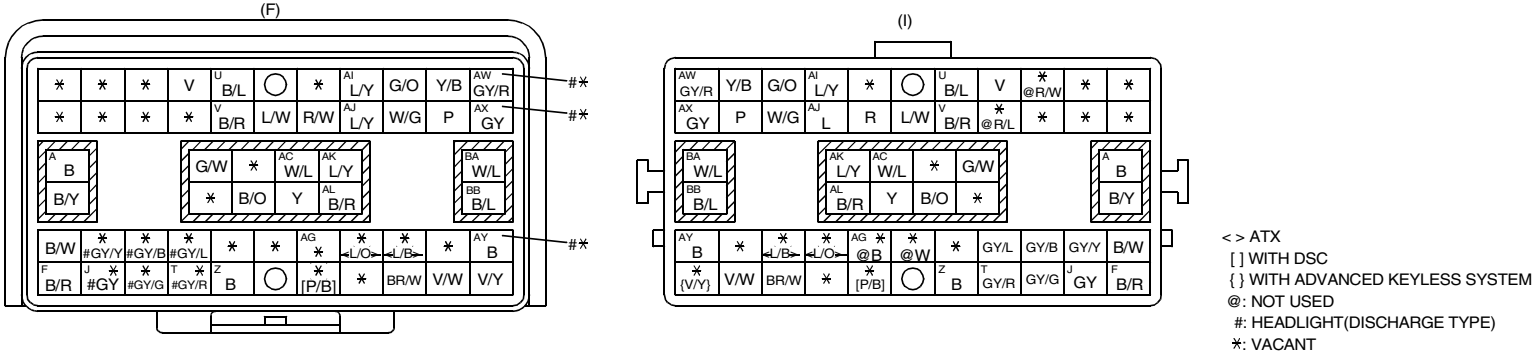

< > ATX
[ ] WITH DSC
{ } WITH ADVANCED KEYLESS SYSTEM
@: NOT USED
#: HEADLIGHT(DISCHARGE TYPE)
*: VACANT

C-04 FRONT(F)-REAR(R)

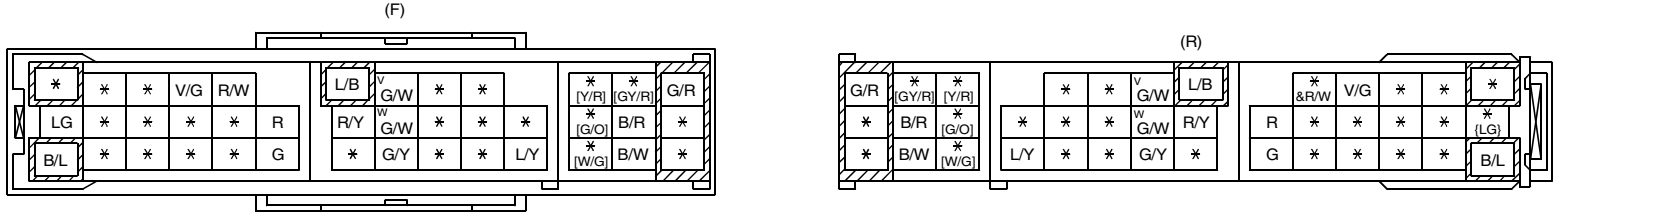


[ ] WITH DSC
{ } WITH THEFT-DETERRENT SYSTEM
&: WITH SUNROOF
*: VACANT


COMMON CONNECTOR LIST

C-06 ENGINE(E)-INJECTION(INJ)

(E)

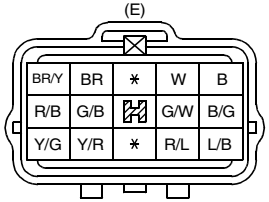


(INJ)

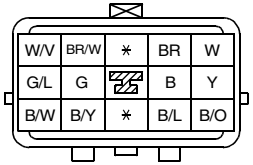


*: VACANT

C-07 INSTRUMENT PANEL(I)-REAR(R)

(I)




(R)

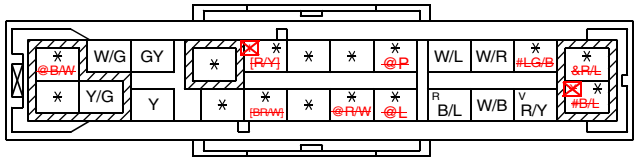


[ ] WITH CAR NAVIGATION SYSTEM
@: WITH RES
#: WITH HEATED OUTER MIRROR
&: WITH SEAT WARMER
*: VACANT

C-08 INSTRUMENT PANEL(I)-REAR(R)

(I)

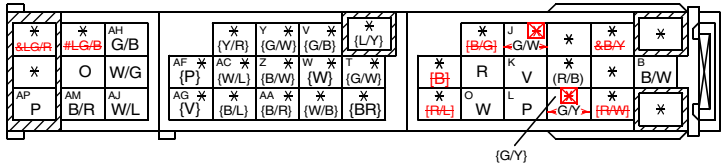

(R)

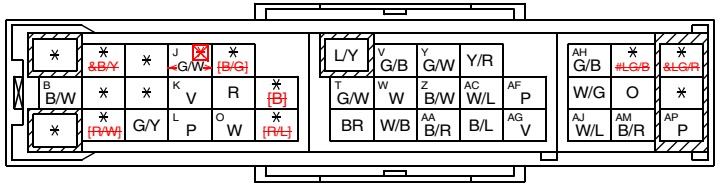


{ } WITH ADVANCED KEYLESS SYSTEM
[ ] WITH CAR NAVIGATION SYSTEM
( ) NOT USED
<-> ATX

&: WITH SEAT WARMER
#: WITH HEATED OUTER MIRROR
*: VACANT


COMMON CONNECTOR LIST

C-10 INSTRUMENT PANEL(I) SHORT CORD

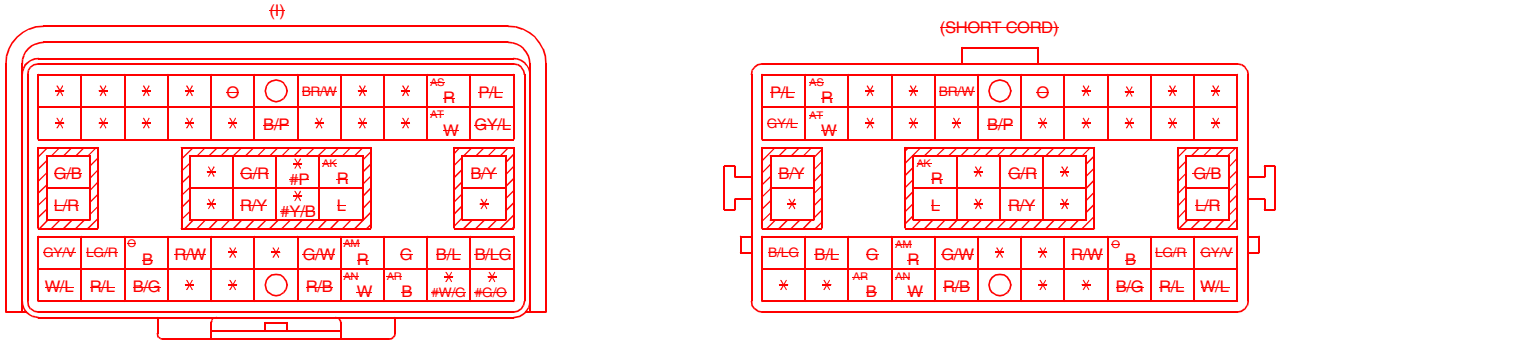


#: NOT USED
*: VACANT

C-11 JOINT CONNECTOR(I)

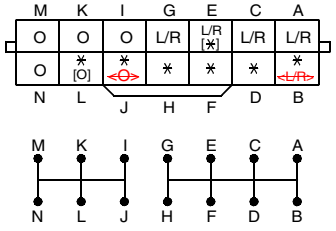


<> WITH CAR-NAVIGATION SYSTEM
[ ] WITH ADVANCED KEYLESS SYSTEM
*: VACANT

C-12 JOINT CONNECTOR(I)

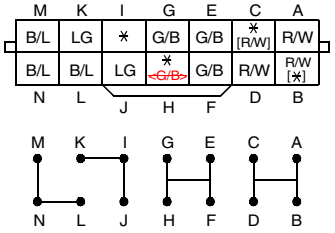

[ ] AUTO A/C
<> WITH CAR-NAVIGATION SYSTEM
*: VACANT


C-13 JOINT CONNECTOR(I)

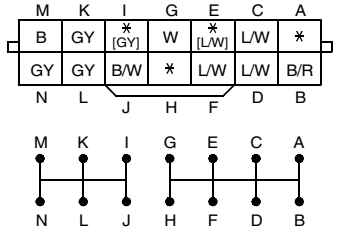

[ ] AUTO A/C
*: VACANT


COMMON CONNECTOR LIST

C-14 REAR(R)-DOOR NO.1(DR1)

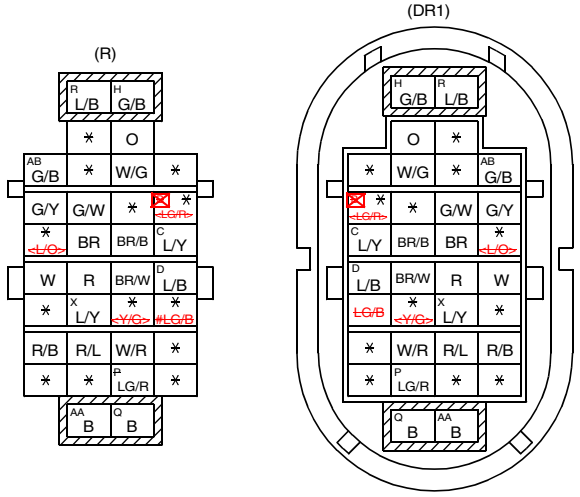


~~<>~~ WITH DOUBLE LOCKING SYSTEM
~~#~~: WITH HEATED OUTER MIRROR
*: VACANT

C-15 REAR(R)-DOOR NO.2(DR2)

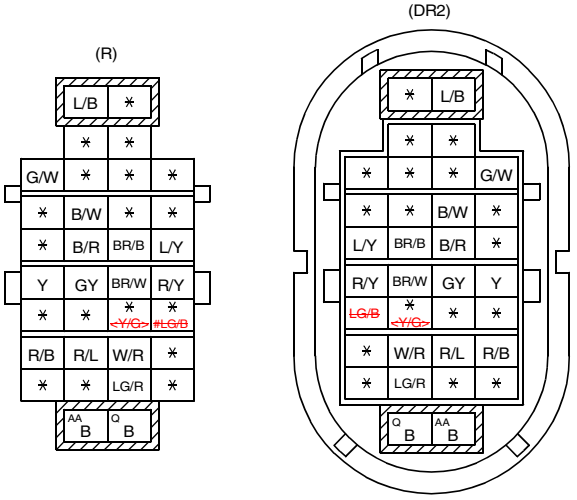


~~<>~~ WITH DOUBLE LOCKING SYSTEM
~~#~~: WITH HEATED OUTER MIRROR
*: VACANT

C-16 REAR(R)-DOOR NO.3(DR3)

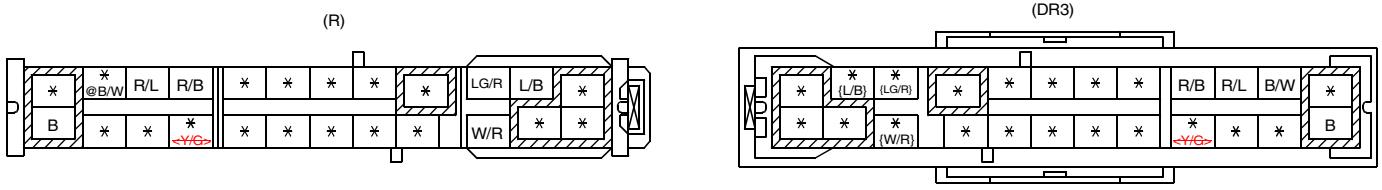

~~<>~~ WITH DOUBLE LOCKING SYSTEM
{ } WITH REAR POWER WINDOW SYSTEM
@: WITH THEFT-DETERRENT SYSTEM
*: VACANT

C-17 REAR(R)-DOOR NO.4(DR4)

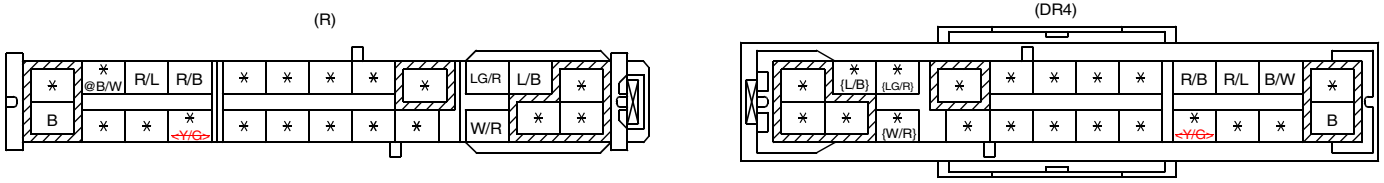


~~<>~~ WITH DOUBLE LOCKING SYSTEM
{ } WITH REAR POWER WINDOW SYSTEM
@: WITH THEFT-DETERRENT SYSTEM
*: VACANT


COMMON CONNECTOR LIST

C-18 REAR(R)-REAR NO.2(R2)

(R)

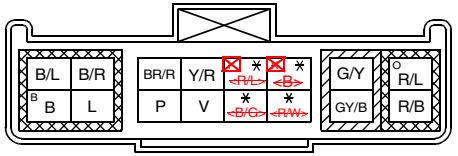


(R2)

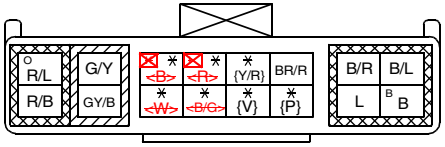


<R> WITH CAR-NAVIGATION SYSTEM
{ } WITH ADVANCED KEYLESS SYSTEM
*: VACANT

C-19 REAR(R)-INTERIOR LIGHT(IN)

(R)




(IN)




C-20 REAR(R)-INTERIOR LIGHT NO.2(IN2)

(R)

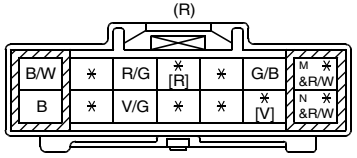


(IN2)

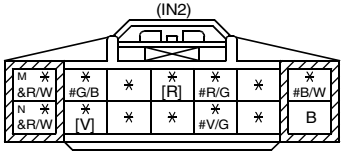


[ ] WITH THEFT-DETERRENT SYSTEM
#: WITH AUTO WIPER
&: WITH SUNROOF
*: VACANT

C-21 REAR(R)-SHORT CORD

(R)

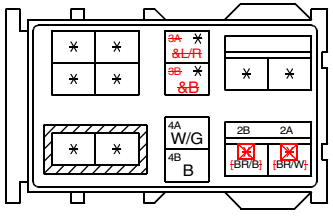

(SHORT CORD)

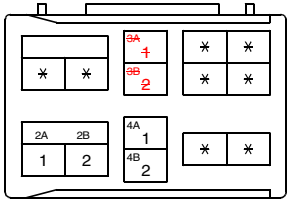


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


[ ] WITH SIDE AND CURTAIN AIR BAG SYSTEM
&: WITH SEAT WARMER
*: VACANT

C-22 REAR(R)-SHORT CORD

(R)

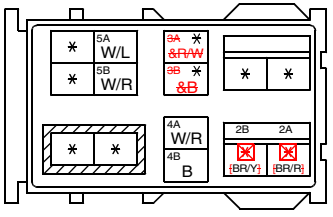

(SHORT CORD)

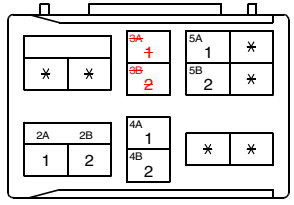

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

[ ] WITH SIDE AND CURTAIN AIR BAG SYSTEM
&: WITH SEAT WARMER
*: VACANT

COMMON CONNECTOR LIST

C-23 REAR(R)-SHORT CORD

(R)

R	G

(SHORT CORD)

GY	W

C-24 REAR(R)-SHORT CORD

(R)

B/R	W/G	W/R
B/W	W/B	*

(SHORT CORD)

W/R	W/G	W
*	W/B	GY

*: VACANT

C-25 FRONT(F)-SHORT CORD

(F)

R/W	L/Y

(SHORT CORD)

W	GY

C-26 FRONT(F)-SHORT CORD

(F)

L/O	V

(SHORT CORD)

W	GY

~~C-27 REAR(R)-REAR NO.4(R4)~~

~~(R)~~

*	*	P	*	*	*	*	*
*	*	*	L	*	*	R/W	B/W

~~(R4)~~

*	*	*	*	*	P	*	*
B/W	R/W	*	*	L	*	*	*

~~(WITH RES)~~

~~*: VACANT~~

C-28 REAR(R)-REAR NO.4(R4)

~~(R)~~

* @V	*	L/R	L/R	G	L	W	* B/W
*	N * @B/W	P	O	B/L	P	GY	B/P

~~(R4)~~

* B/W	W	L	G	G	L/R	*	* @V
B/P	GY	P	B/L	O	P	N * @B/W	*

~~(WITH RES)~~

~~@: WITH THEFT-DETERRENT SYSTEM~~

~~*: VACANT~~

(R)

B	*	B/W	V

(R4)


V	B/W	*	B

(~~WITHOUT RES~~WITH THEFT-DETERRENT SYSTEM)

*: VACANT


COMMON CONNECTOR LIST

C-29 JOINT CONNECTOR(I)

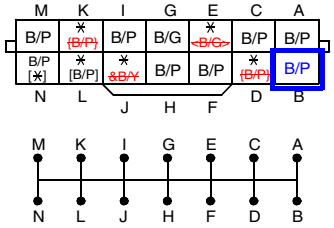

~~( ) WITH CAR-NAVIGATION SYSTEM~~
~~&: WITH SEAT WARMER~~
[ ] AUTO A/C
~~< > WITH DSC~~
*: VACANT


~~C-30 JOINT CONNECTOR(I)~~

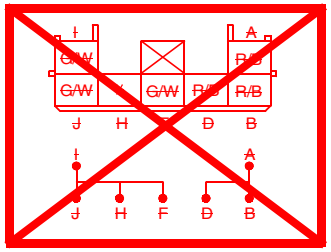

~~(WITH CAR-NAVIGATION SYSTEM)~~


~~*: VACANT~~

C-31 JOINT CONNECTOR(I)

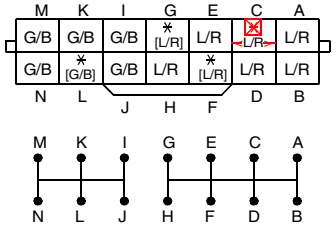


~~< > ATX~~
[ ] WITH ADVANCED KEYLESS SYSTEM
*: VACANT

~~C-32 INSTRUMENT PANEL(I)-SHORT CORD~~

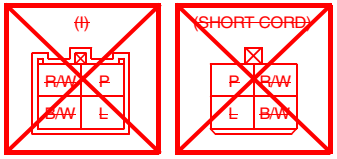


~~(WITH RES/WITHOUT CAR-NAVIGATION SYSTEM)~~

C-33 JOINT CONNECTOR(I)

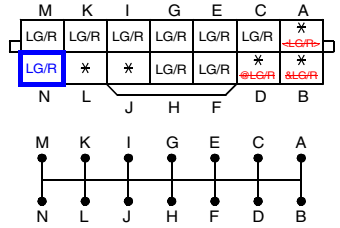


~~< > WITH DSC~~
~~&: WITH SEAT WARMER~~
~~@: WITH CAR-NAVIGATION SYSTEM~~
*: VACANT

C-34 JOINT CONNECTOR(F)

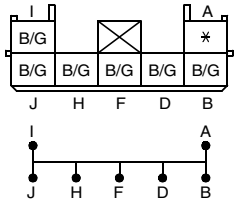


*: VACANT

C-35 JOINT CONNECTOR(F)

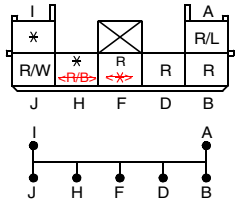

~~< > WITH DSC~~
*: VACANT


C-36 JOINT CONNECTOR(F)

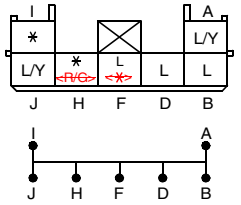


~~< > WITH DSC~~
*: VACANT


THIS PAGE INTENTIONALLY LEFT BLANK

GROUND POINT

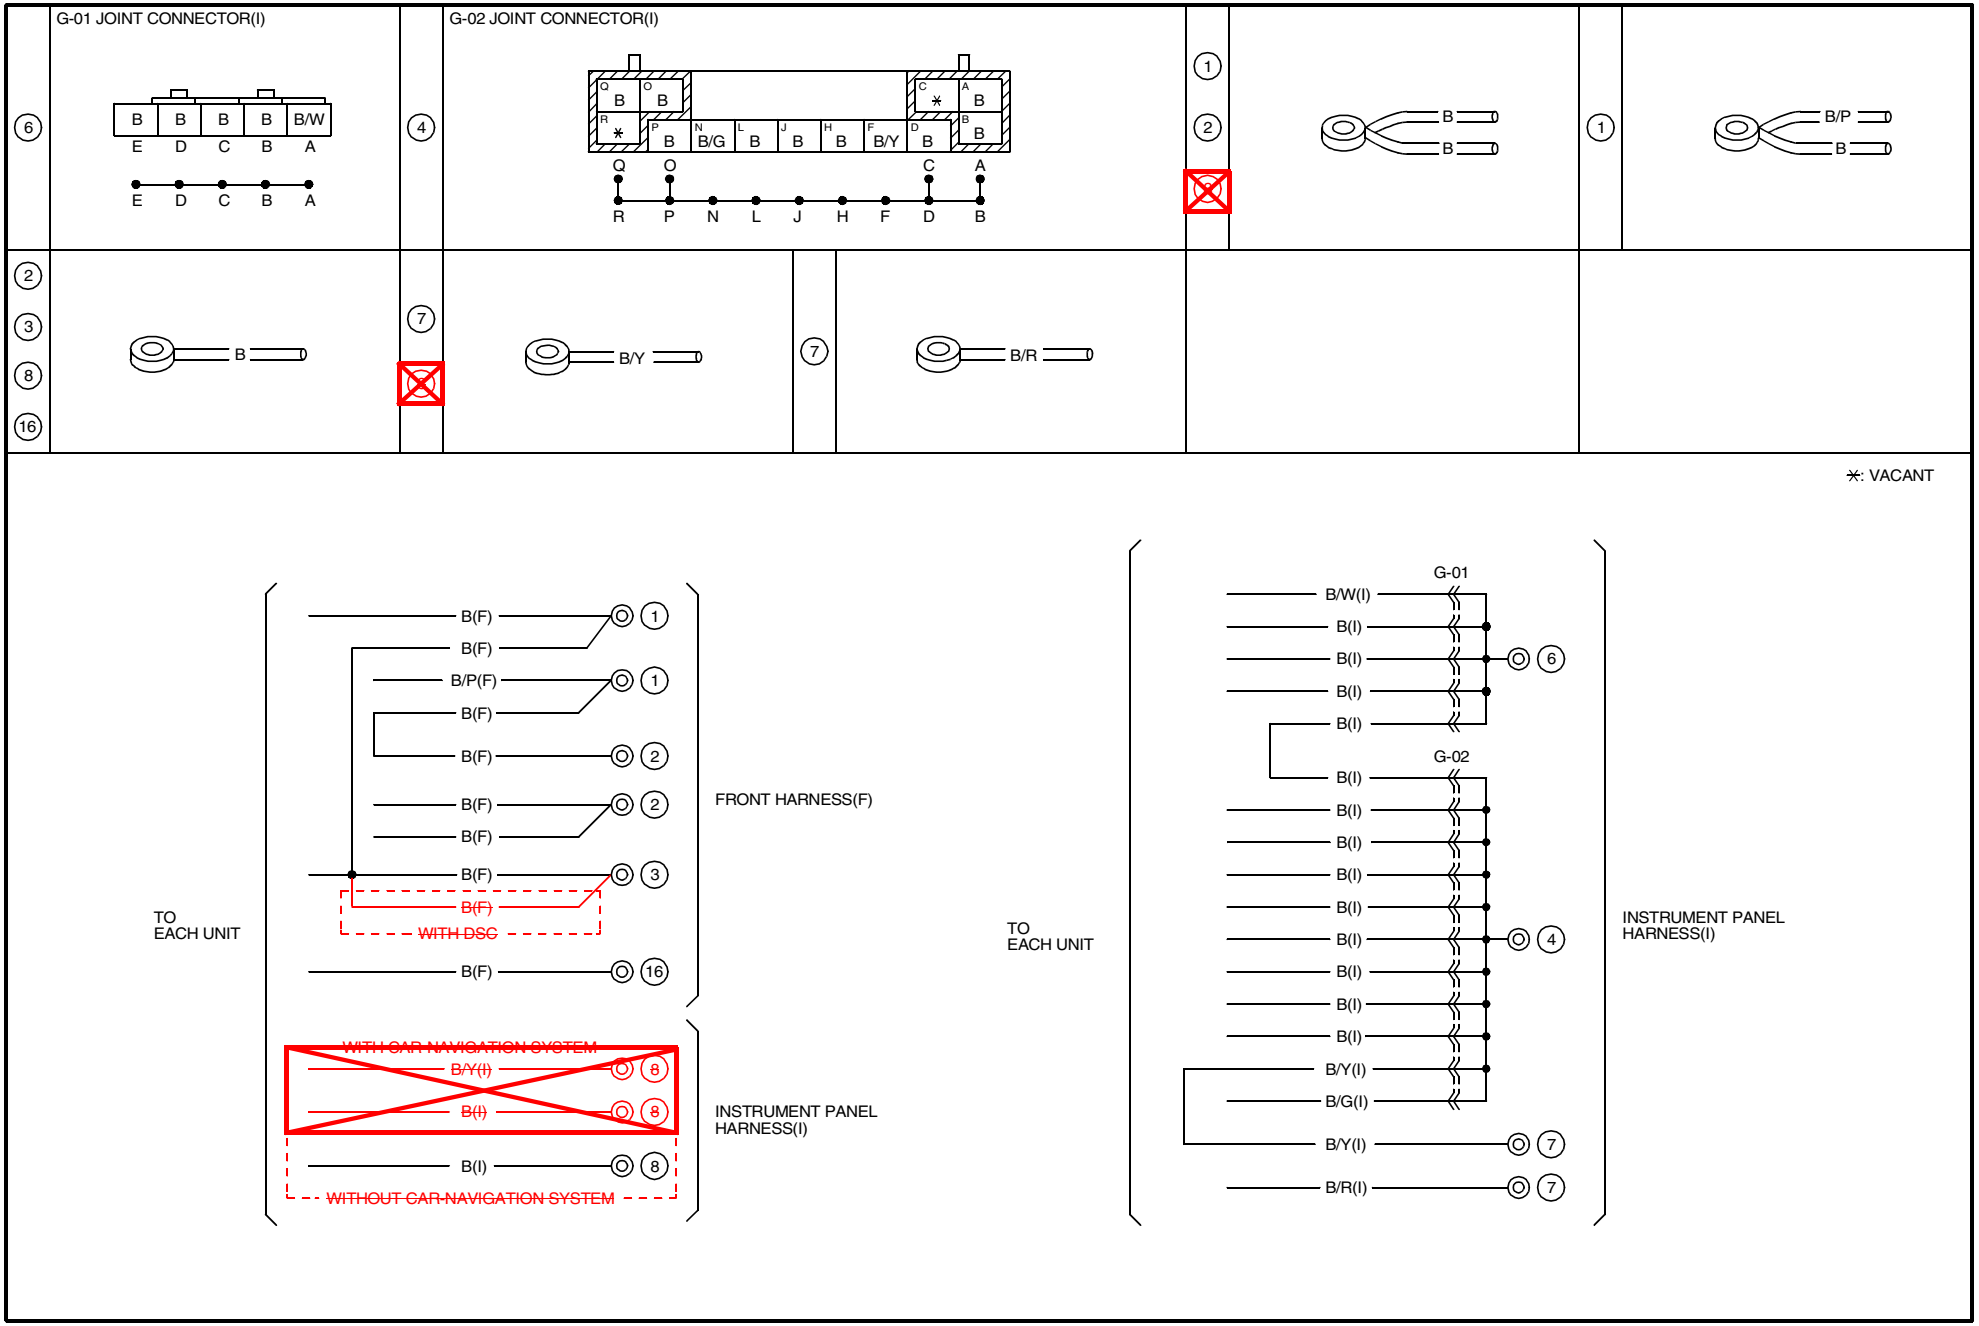


HARNESS SYMBOL : (F) (E) (R)

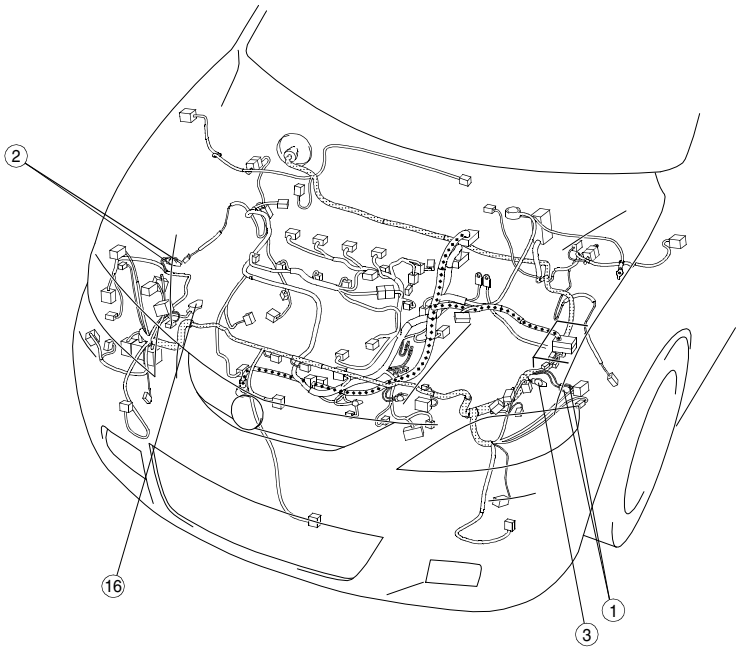

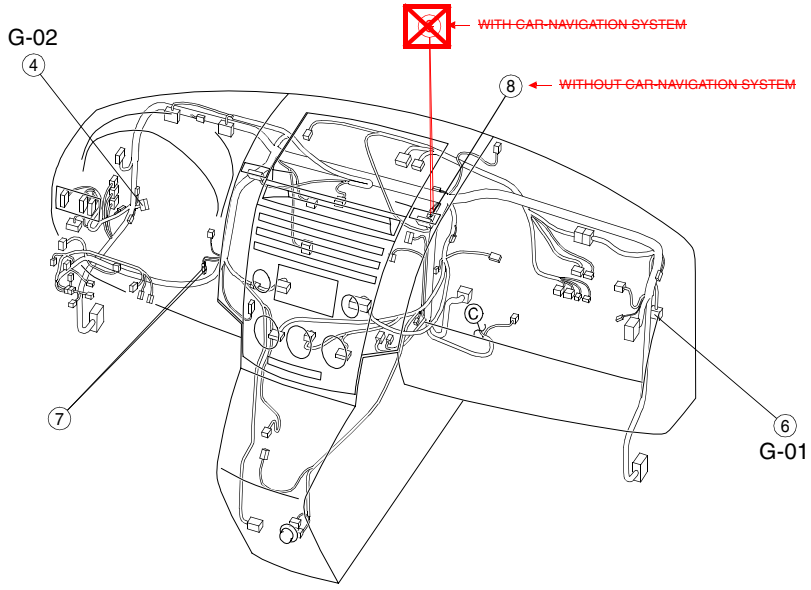



GROUND POINT

5 10 12 13 14	B	5 10 11 12	B B	15	G L	15	L

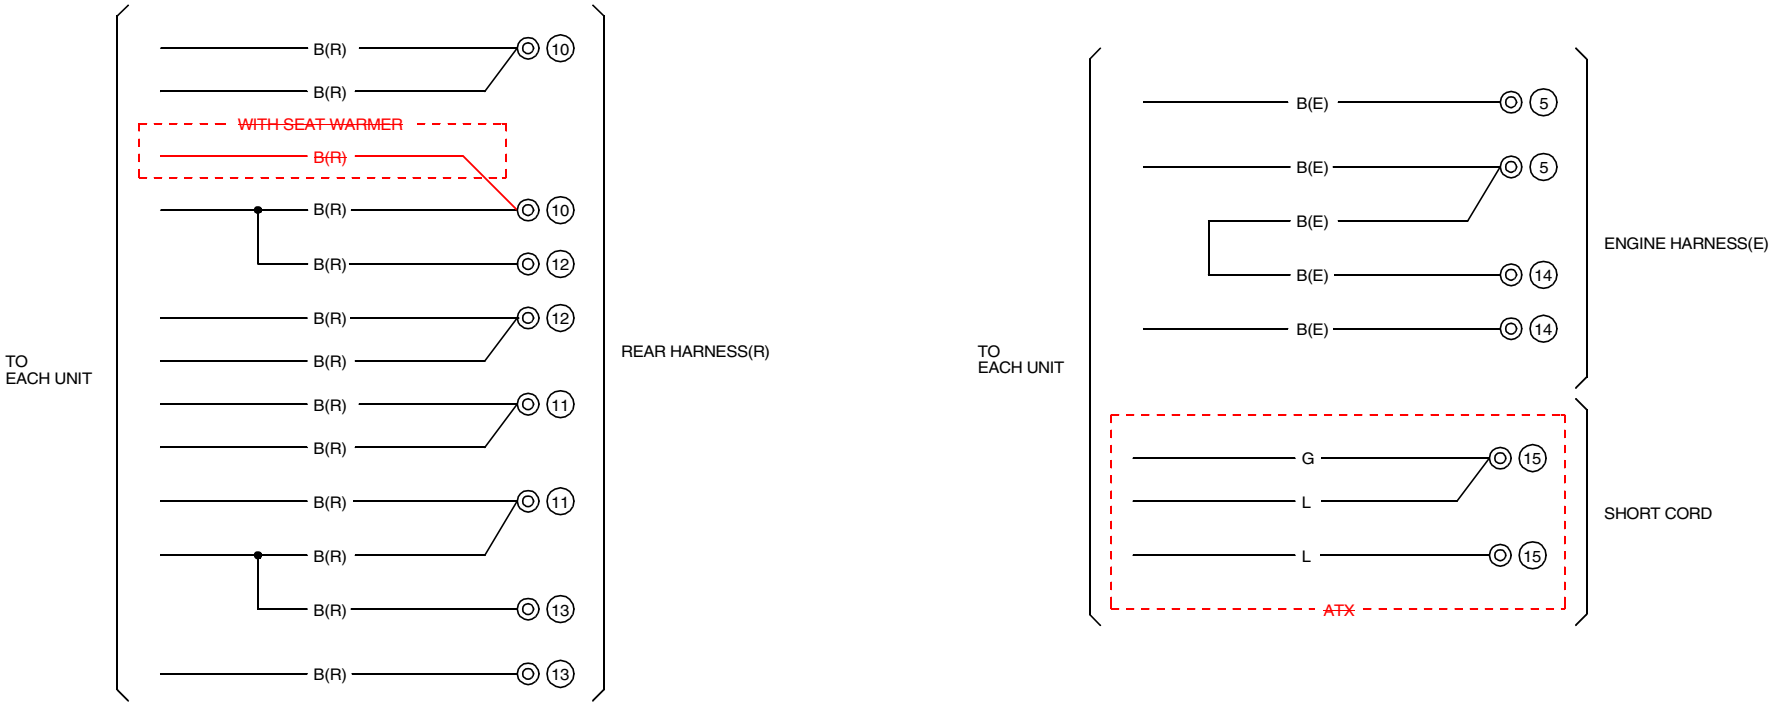


HARNESS SYMBOL : (F) (E) (R)

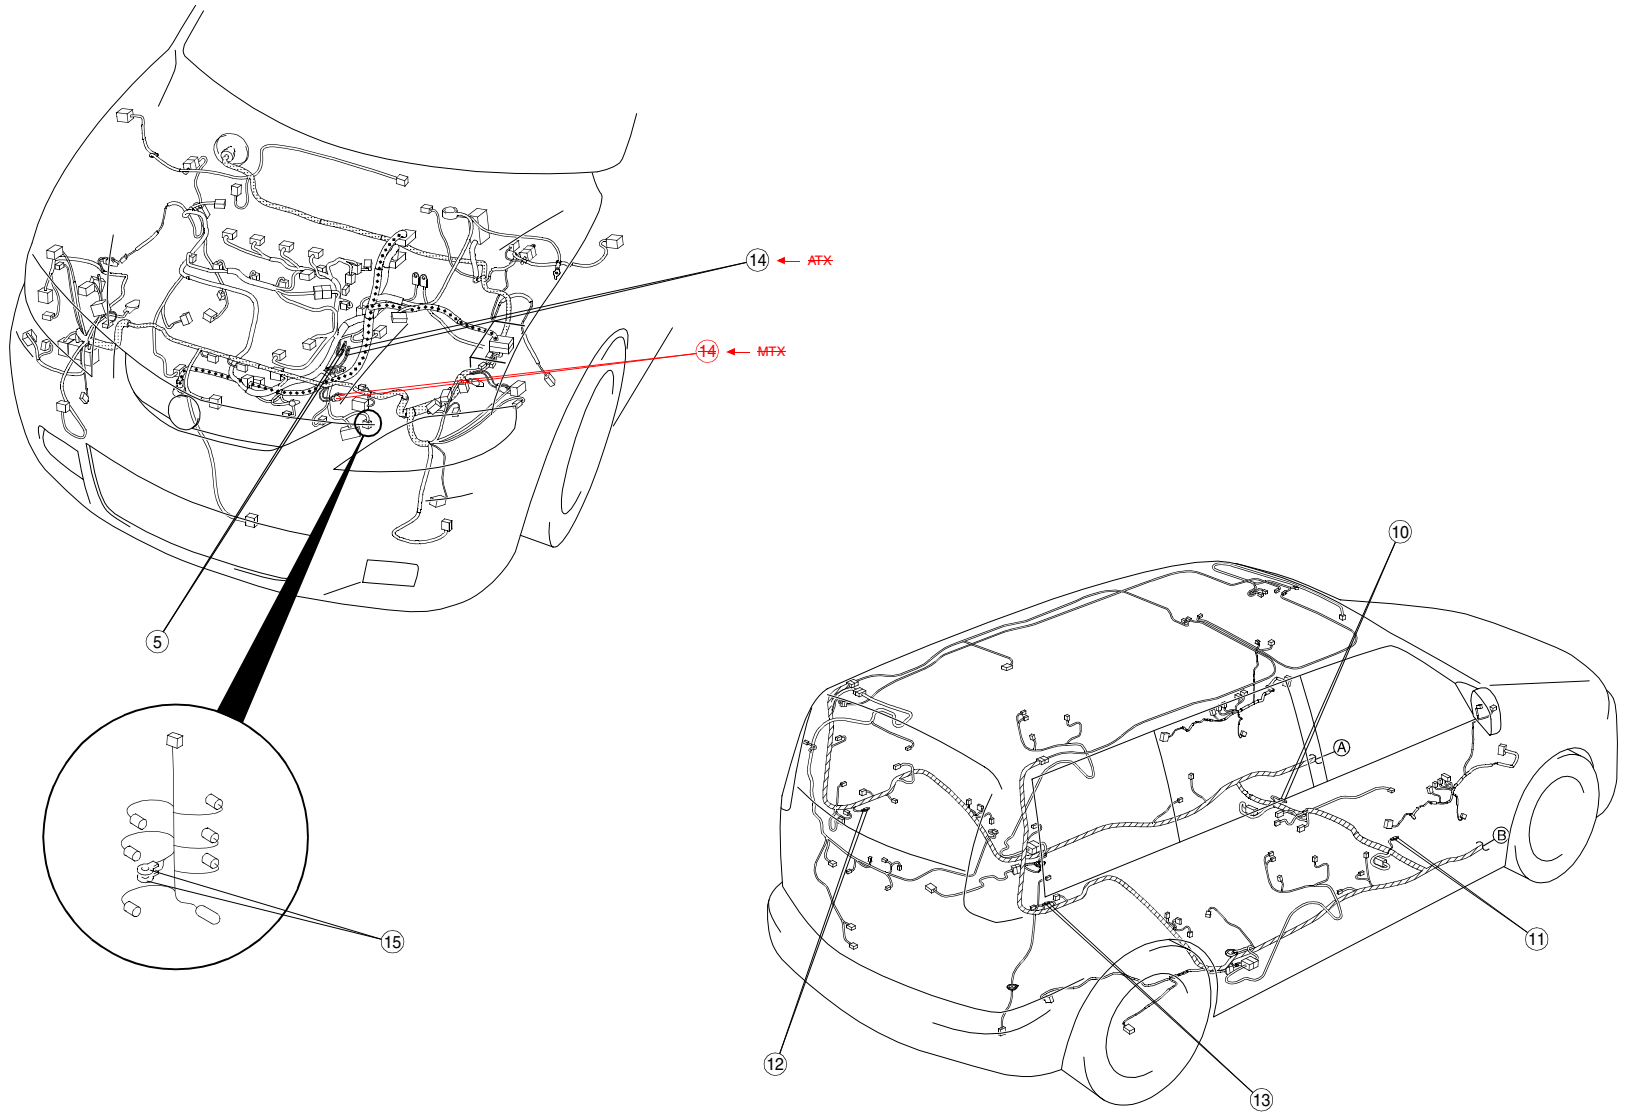

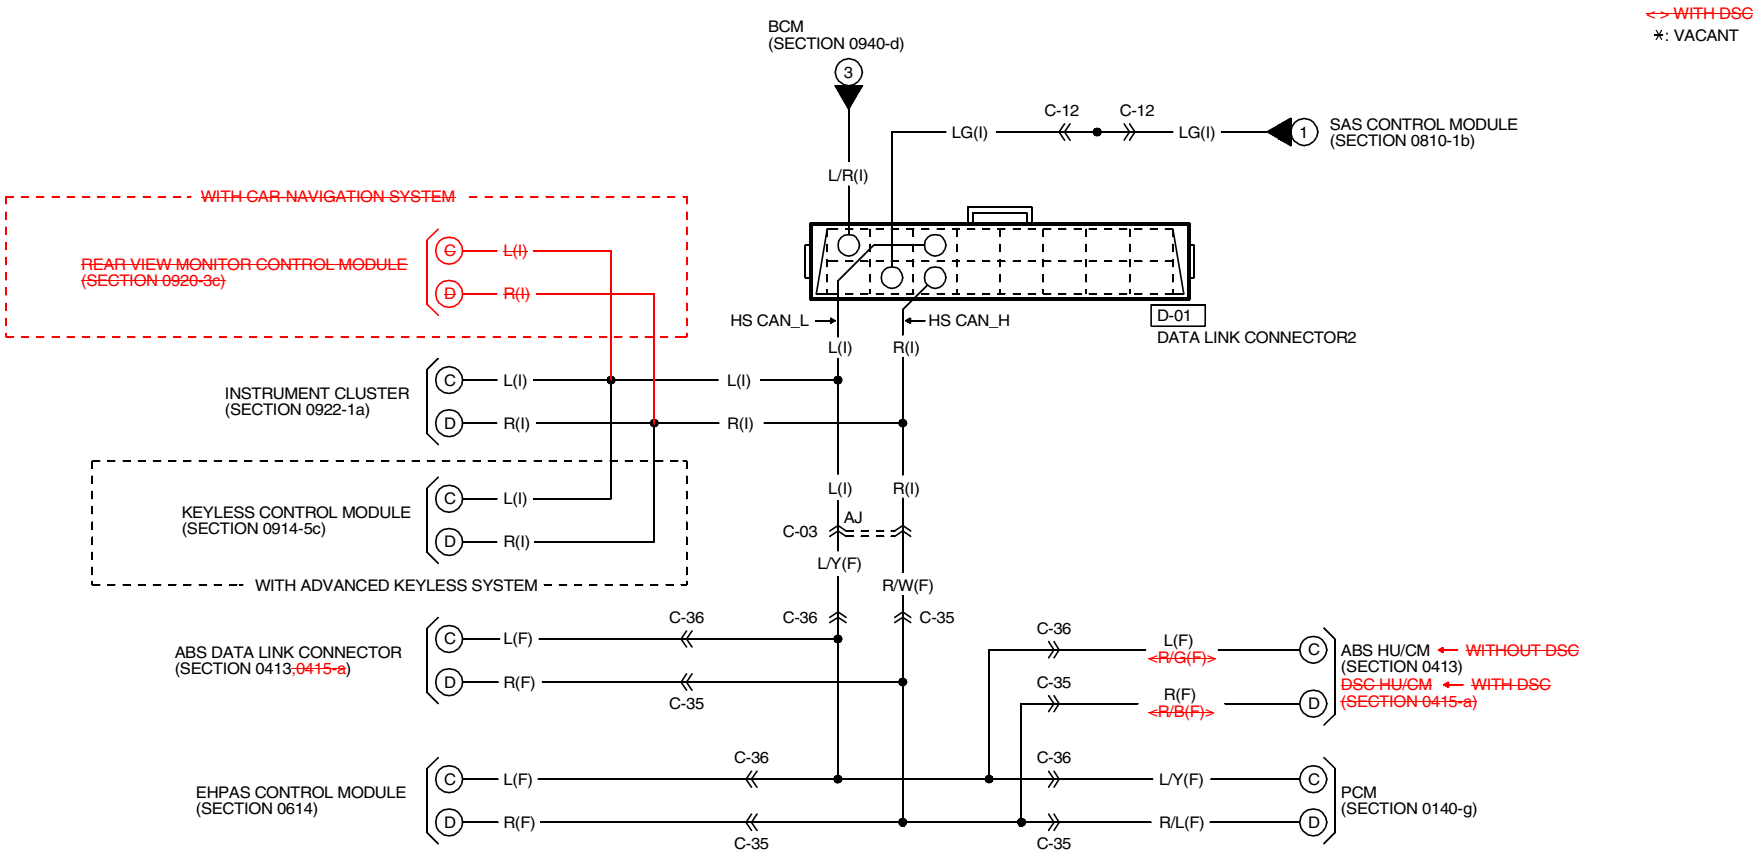



D-01
DATA LINK CONNECTOR2(I)




NOTE:SEEN FROM TERMINAL SIDE

HARNESS SYMBOL : (F) (E) (R)

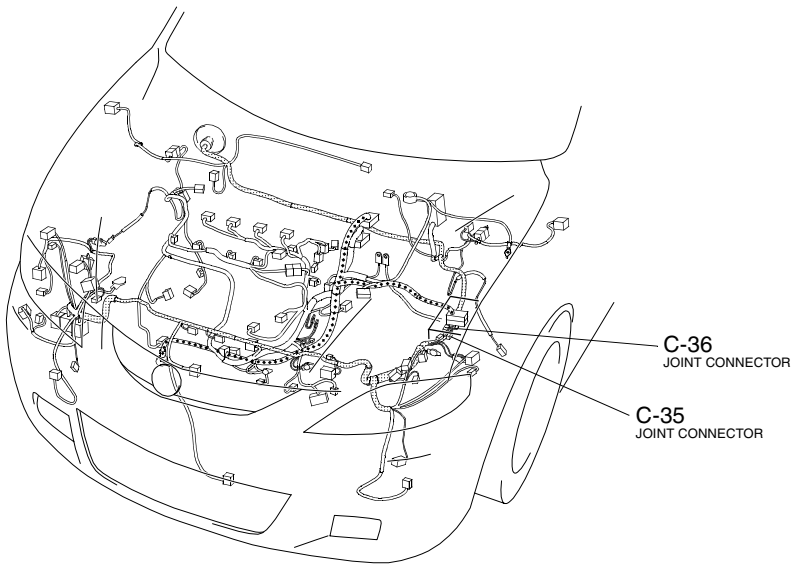


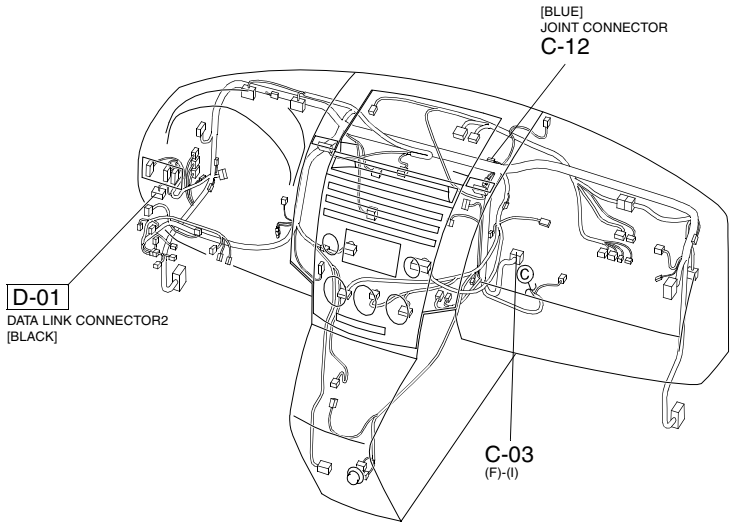

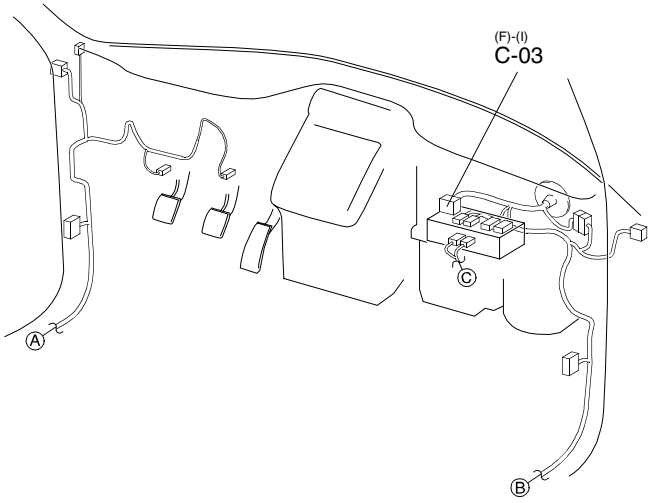


DATA LINK CONNECTOR

*: VACANT

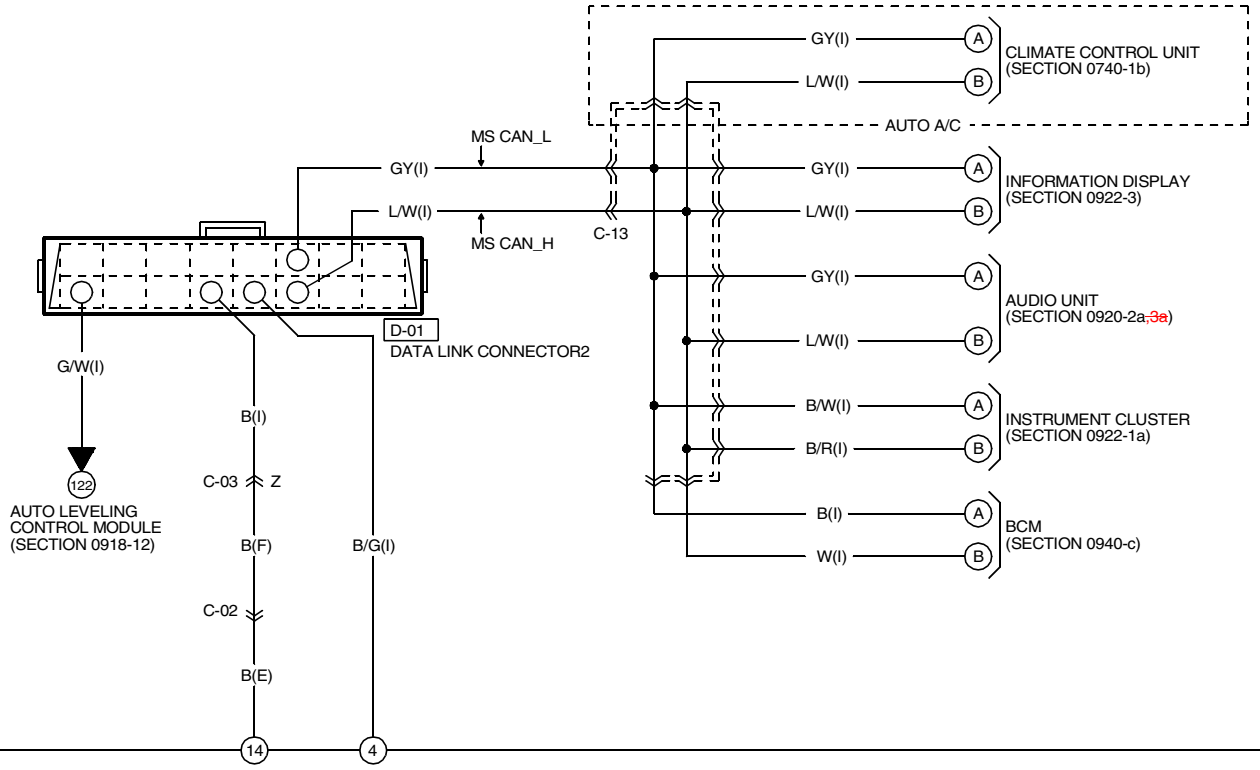



D-01
DATA LINK CONNECTOR2(I)





NOTE:SEEN FROM TERMINAL SIDE

HARNESS SYMBOL : (F) (E) (R)

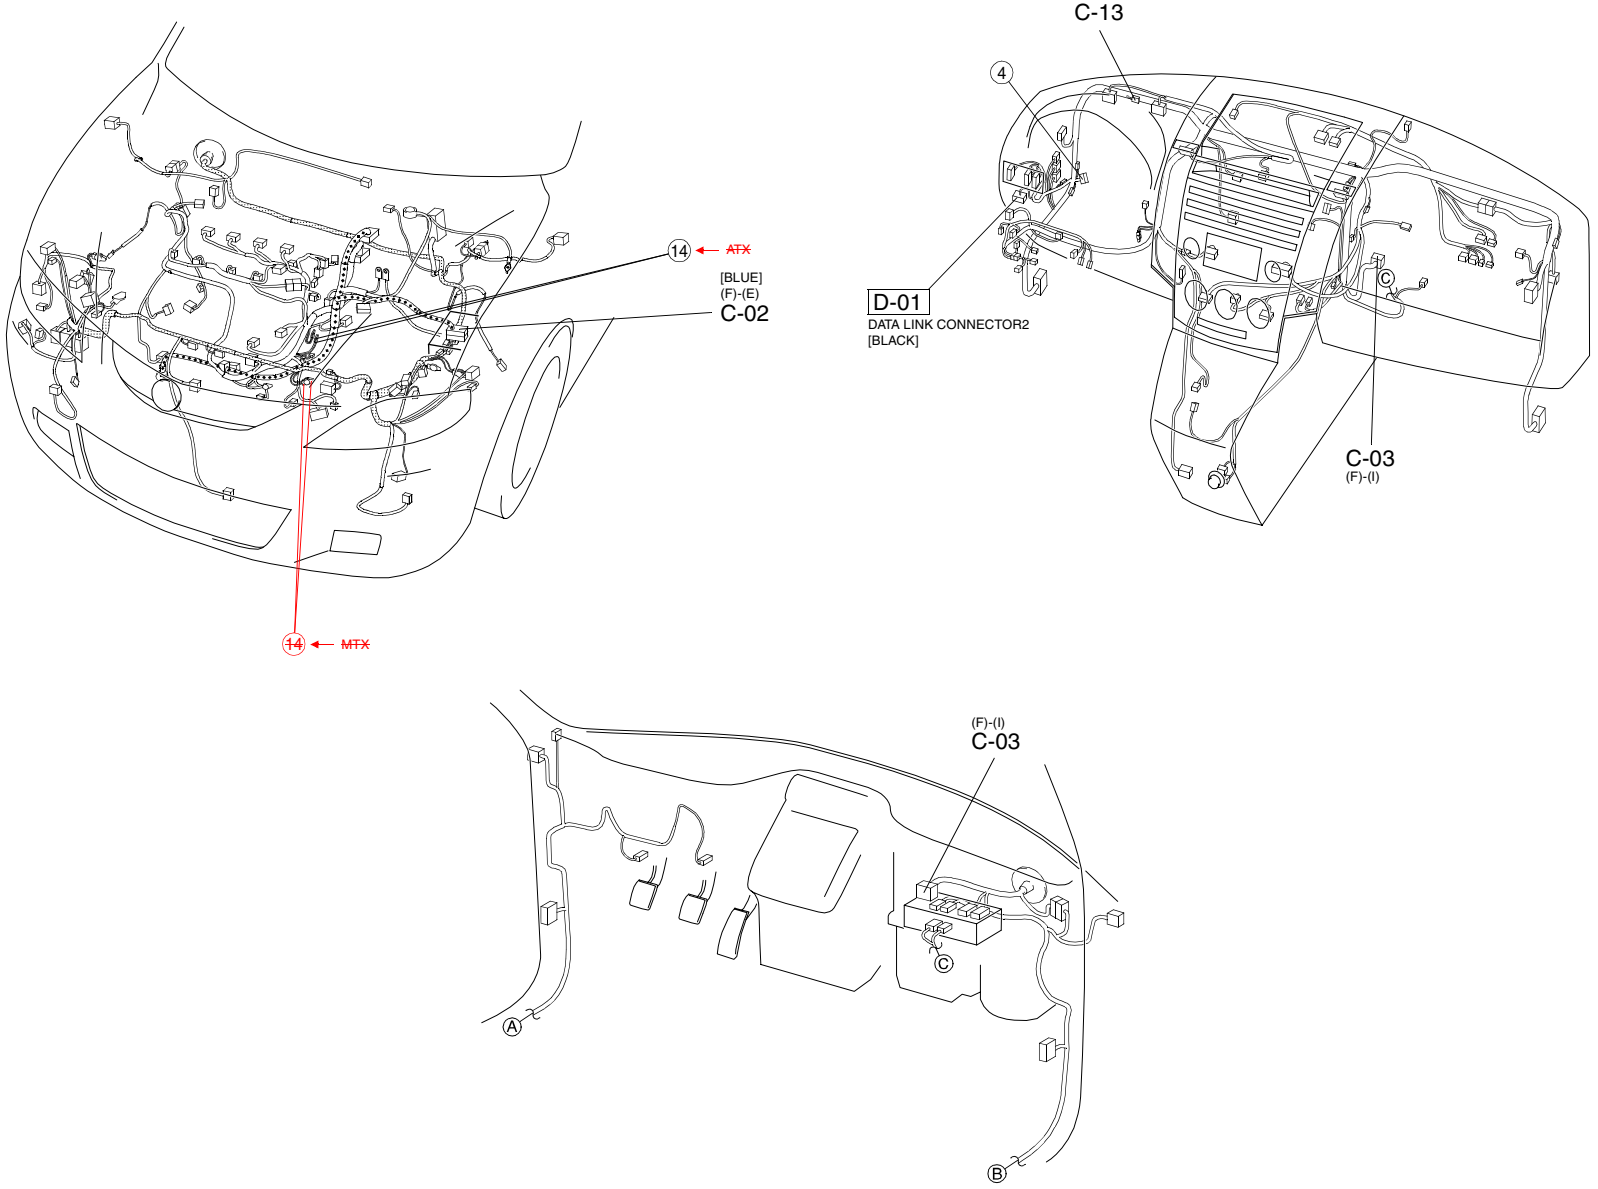


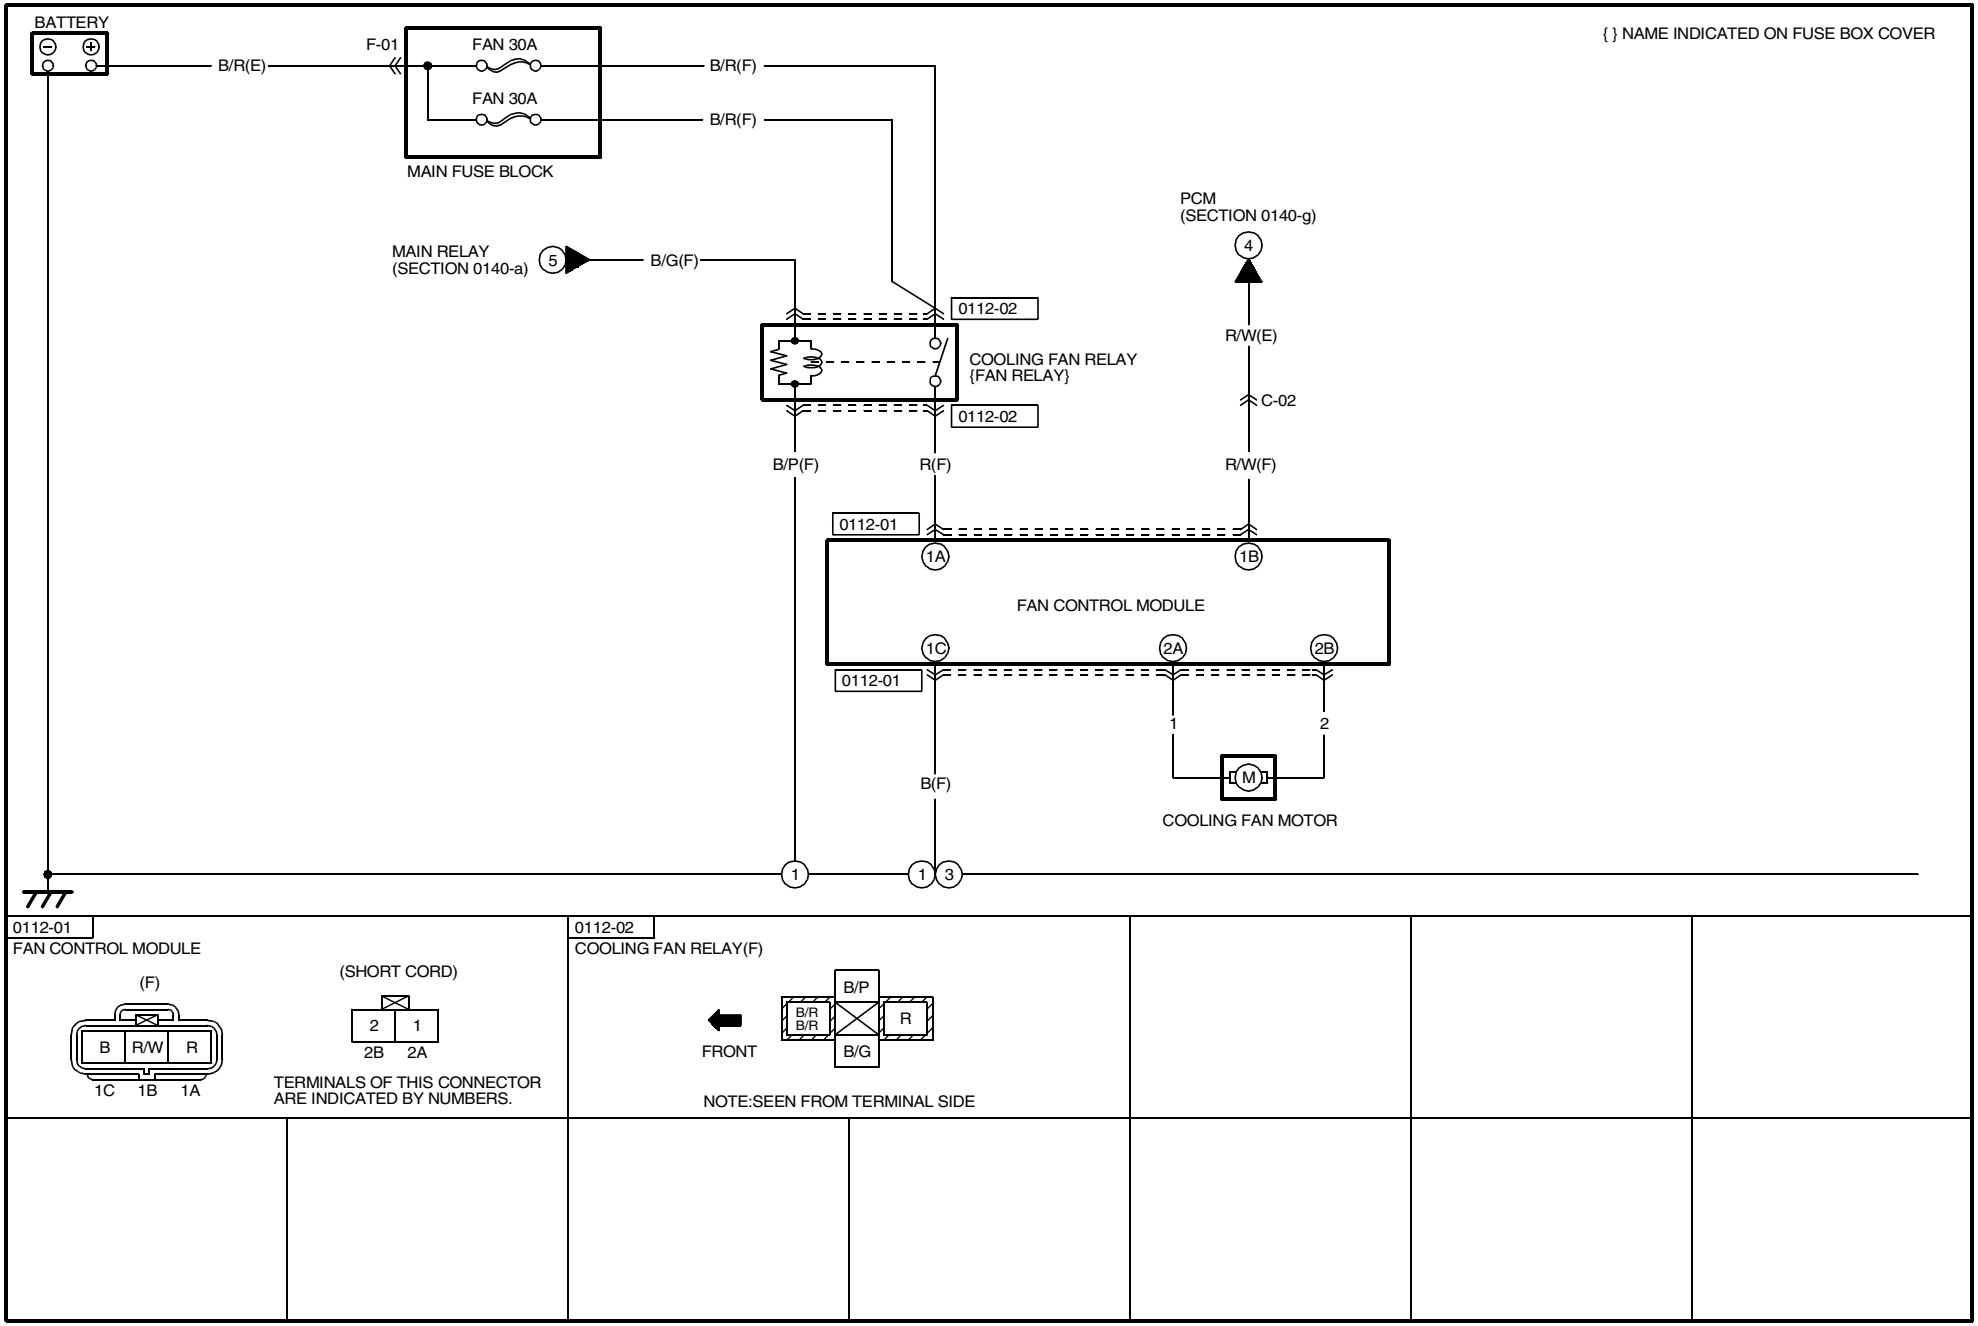
{ } NAME INDICATED ON FUSE BOX COVER
BATTERY
B/R(E)
F-01
FAN 30A
FAN 30A
B/R(F)
B/R(F)
MAIN FUSE BLOCK
PCM
(SECTION 0140-g)
4
MAIN RELAY
(SECTION 0140-a)
5
B/G(F)
0112-02
COOLING FAN RELAY
{FAN RELAY}
0112-02
R/W(E)
C-02
B/P(F)
R(F)
R/W(F)
0112-01
1A
1B
FAN CONTROL MODULE
1C
2A
2B
0112-01
1
2
B(F)
M
COOLING FAN MOTOR
1
1
3
0112-01
FAN CONTROL MODULE
(F)
B
R/W
R
1C
1B
1A
(SHORT CORD)
2
1
2B
2A
TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.
0112-02
COOLING FAN RELAY(F)
FRONT
B/P
B/R
B/R
R
B/G
NOTE:SEEN FROM TERMINAL SIDE

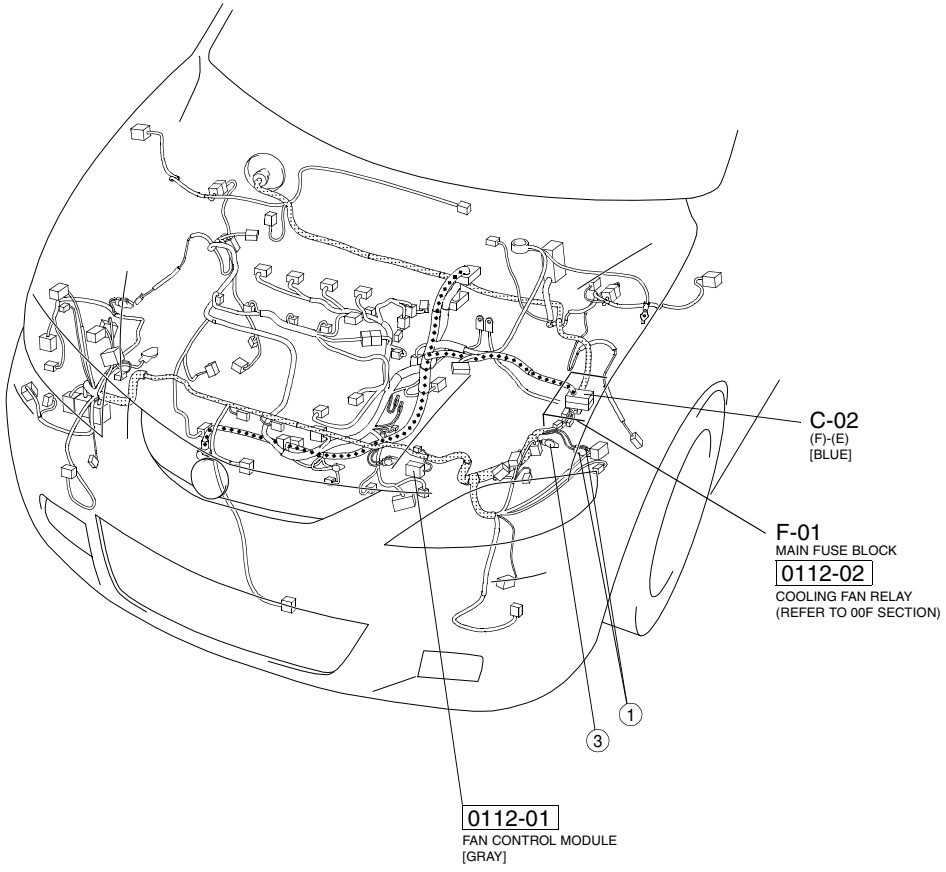
C-02
(F)-(E)
[BLUE]
F-01
MAIN FUSE BLOCK
0112-02
COOLING FAN RELAY
(REFER TO 00F SECTION)
1
3
0112-01
FAN CONTROL MODULE
[GRAY]

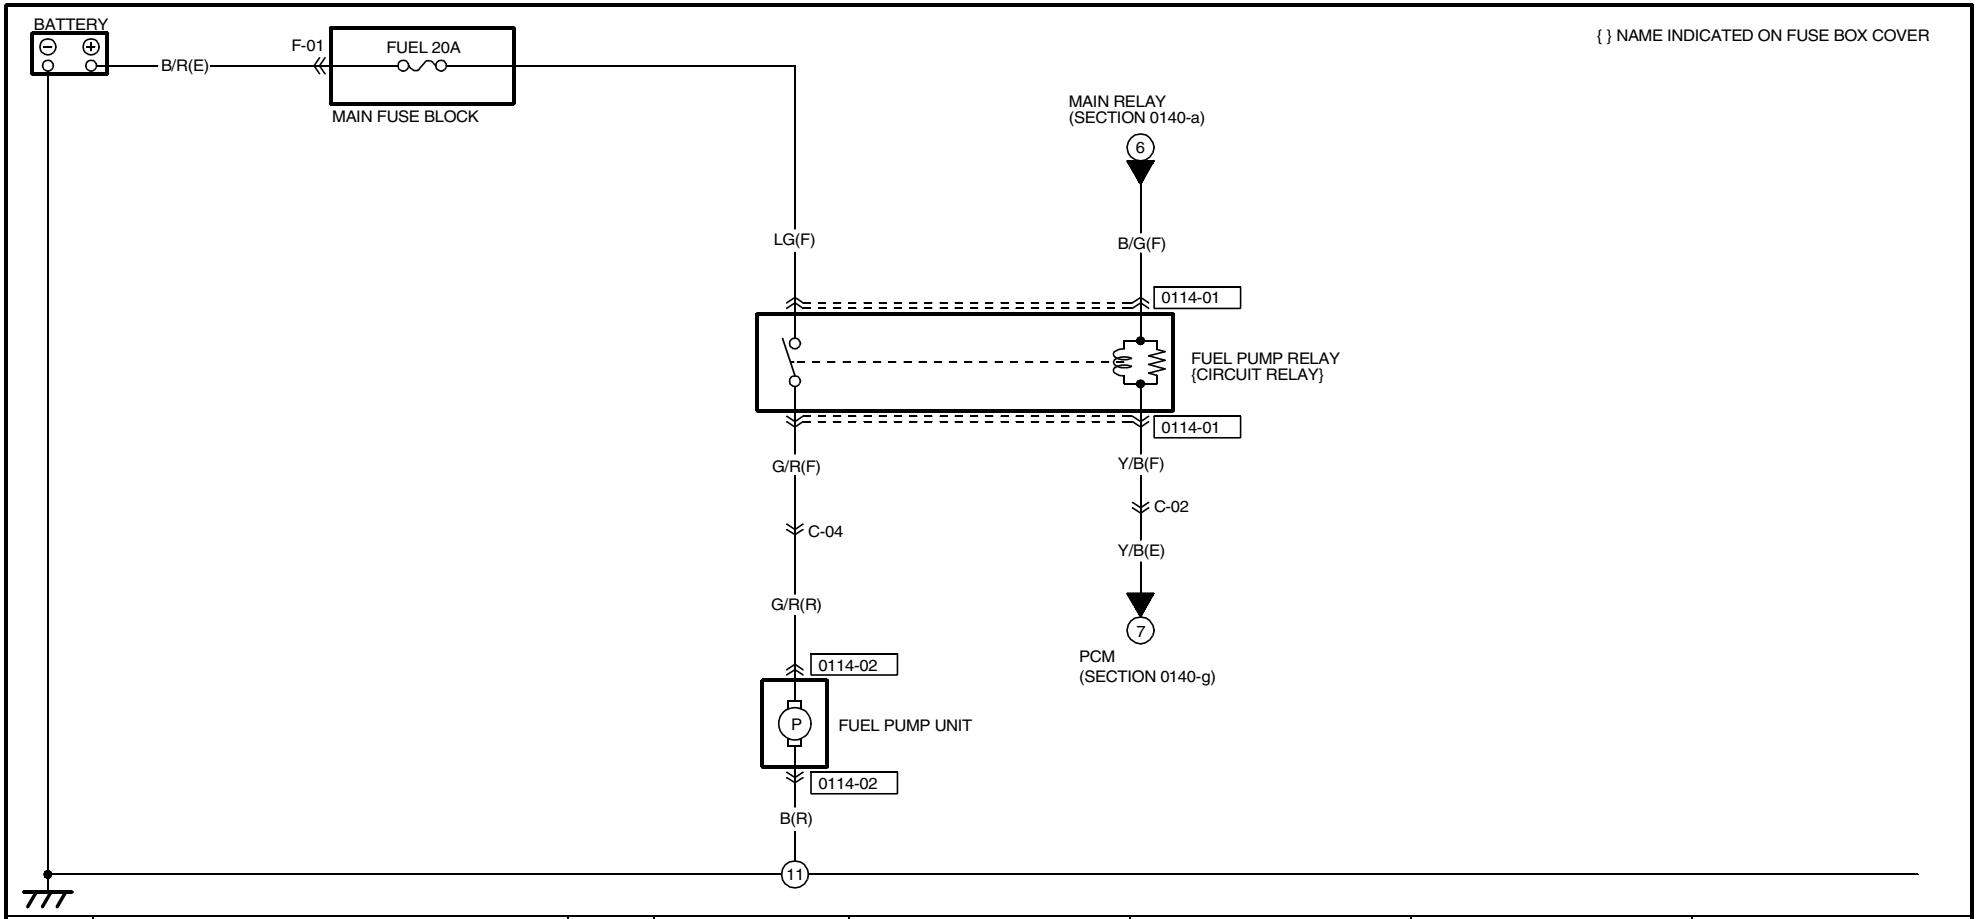



0114-01
FUEL PUMP RELAY(F)





NOTE:SEEN FROM TERMINAL SIDE


0114-02
FUEL PUMP UNIT(R)

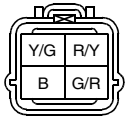

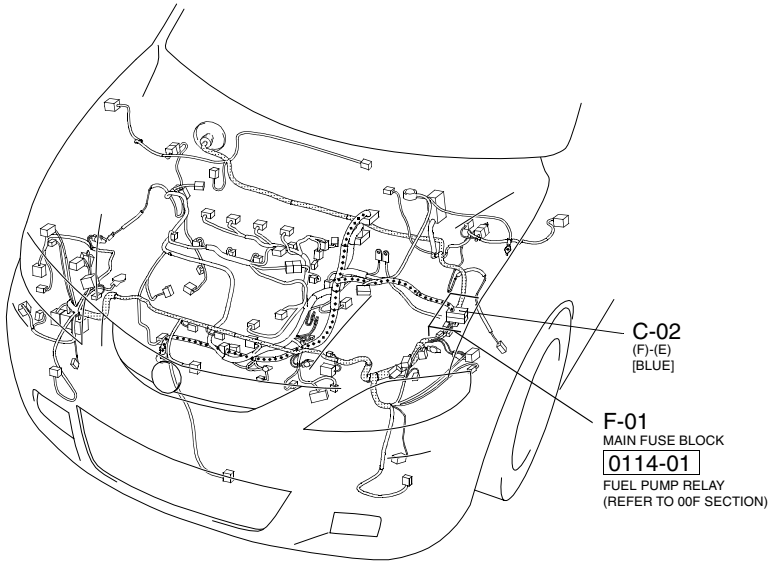

C-02
(F)-(E)
[BLUE]
F-01
MAIN FUSE BLOCK
0114-01
FUEL PUMP RELAY
(REFER TO 00F SECTION)

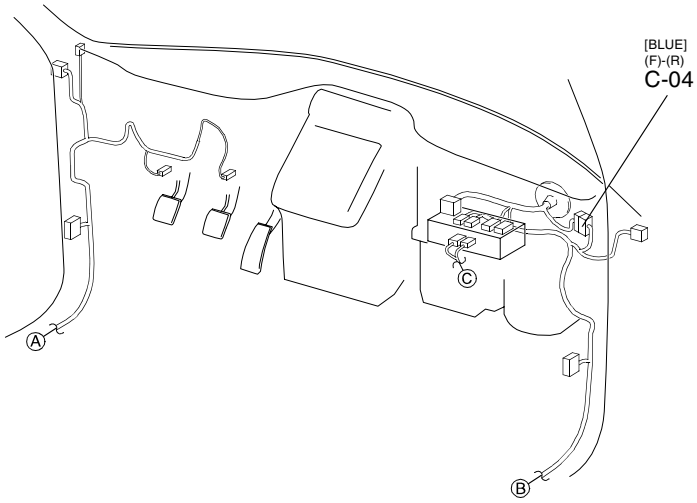

[BLUE]
(F)-(R)
C-04
A
B
C

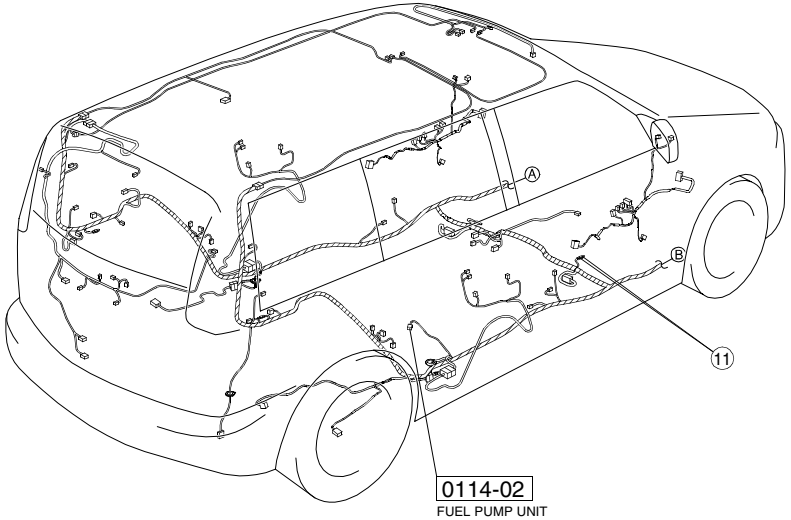
A
B
C
F
11
0114-02
FUEL PUMP UNIT

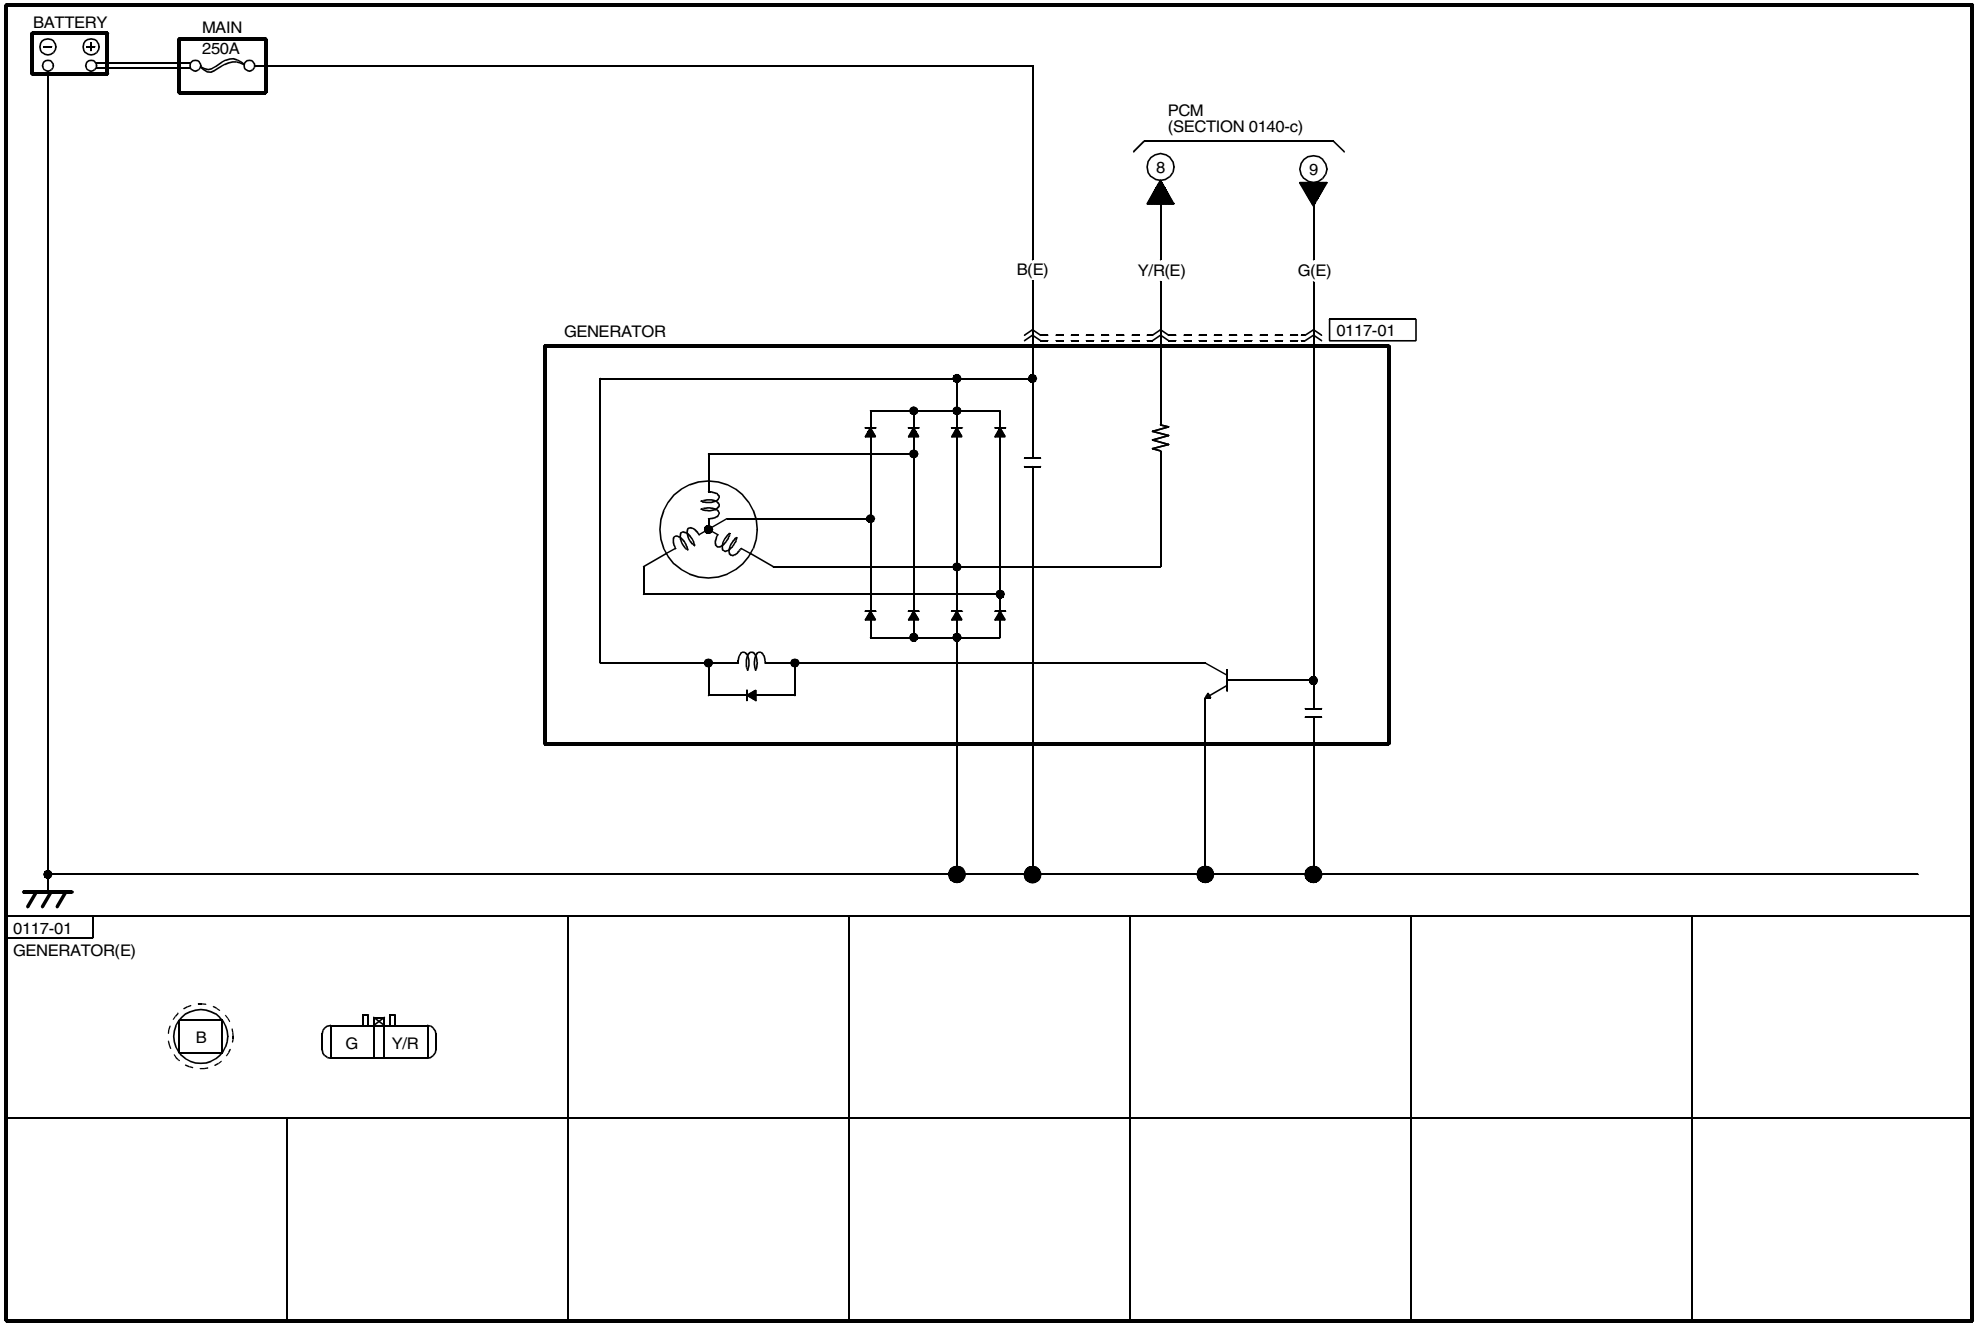

0117-01
GENERATOR(E)

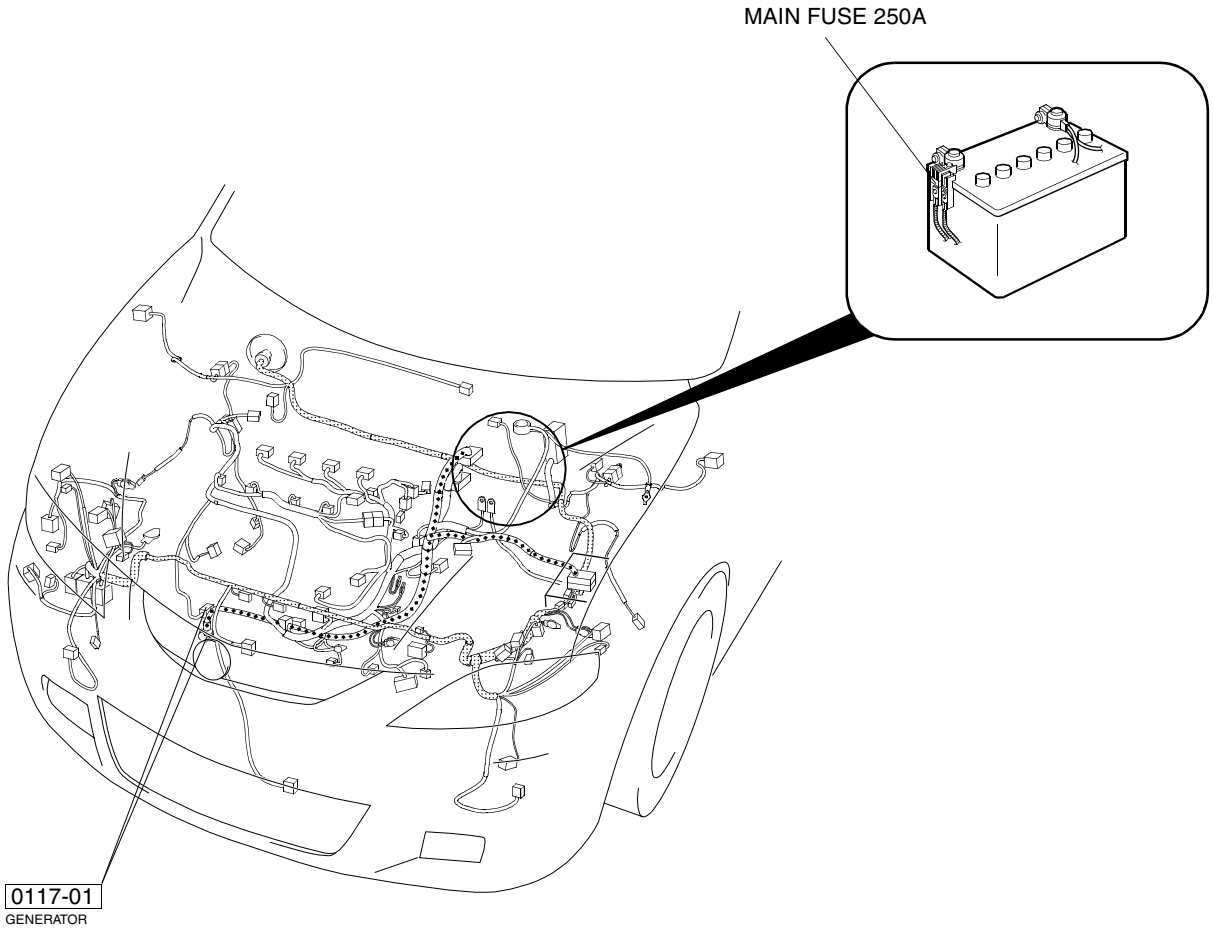
MAIN FUSE 250A
0117-01
GENERATOR

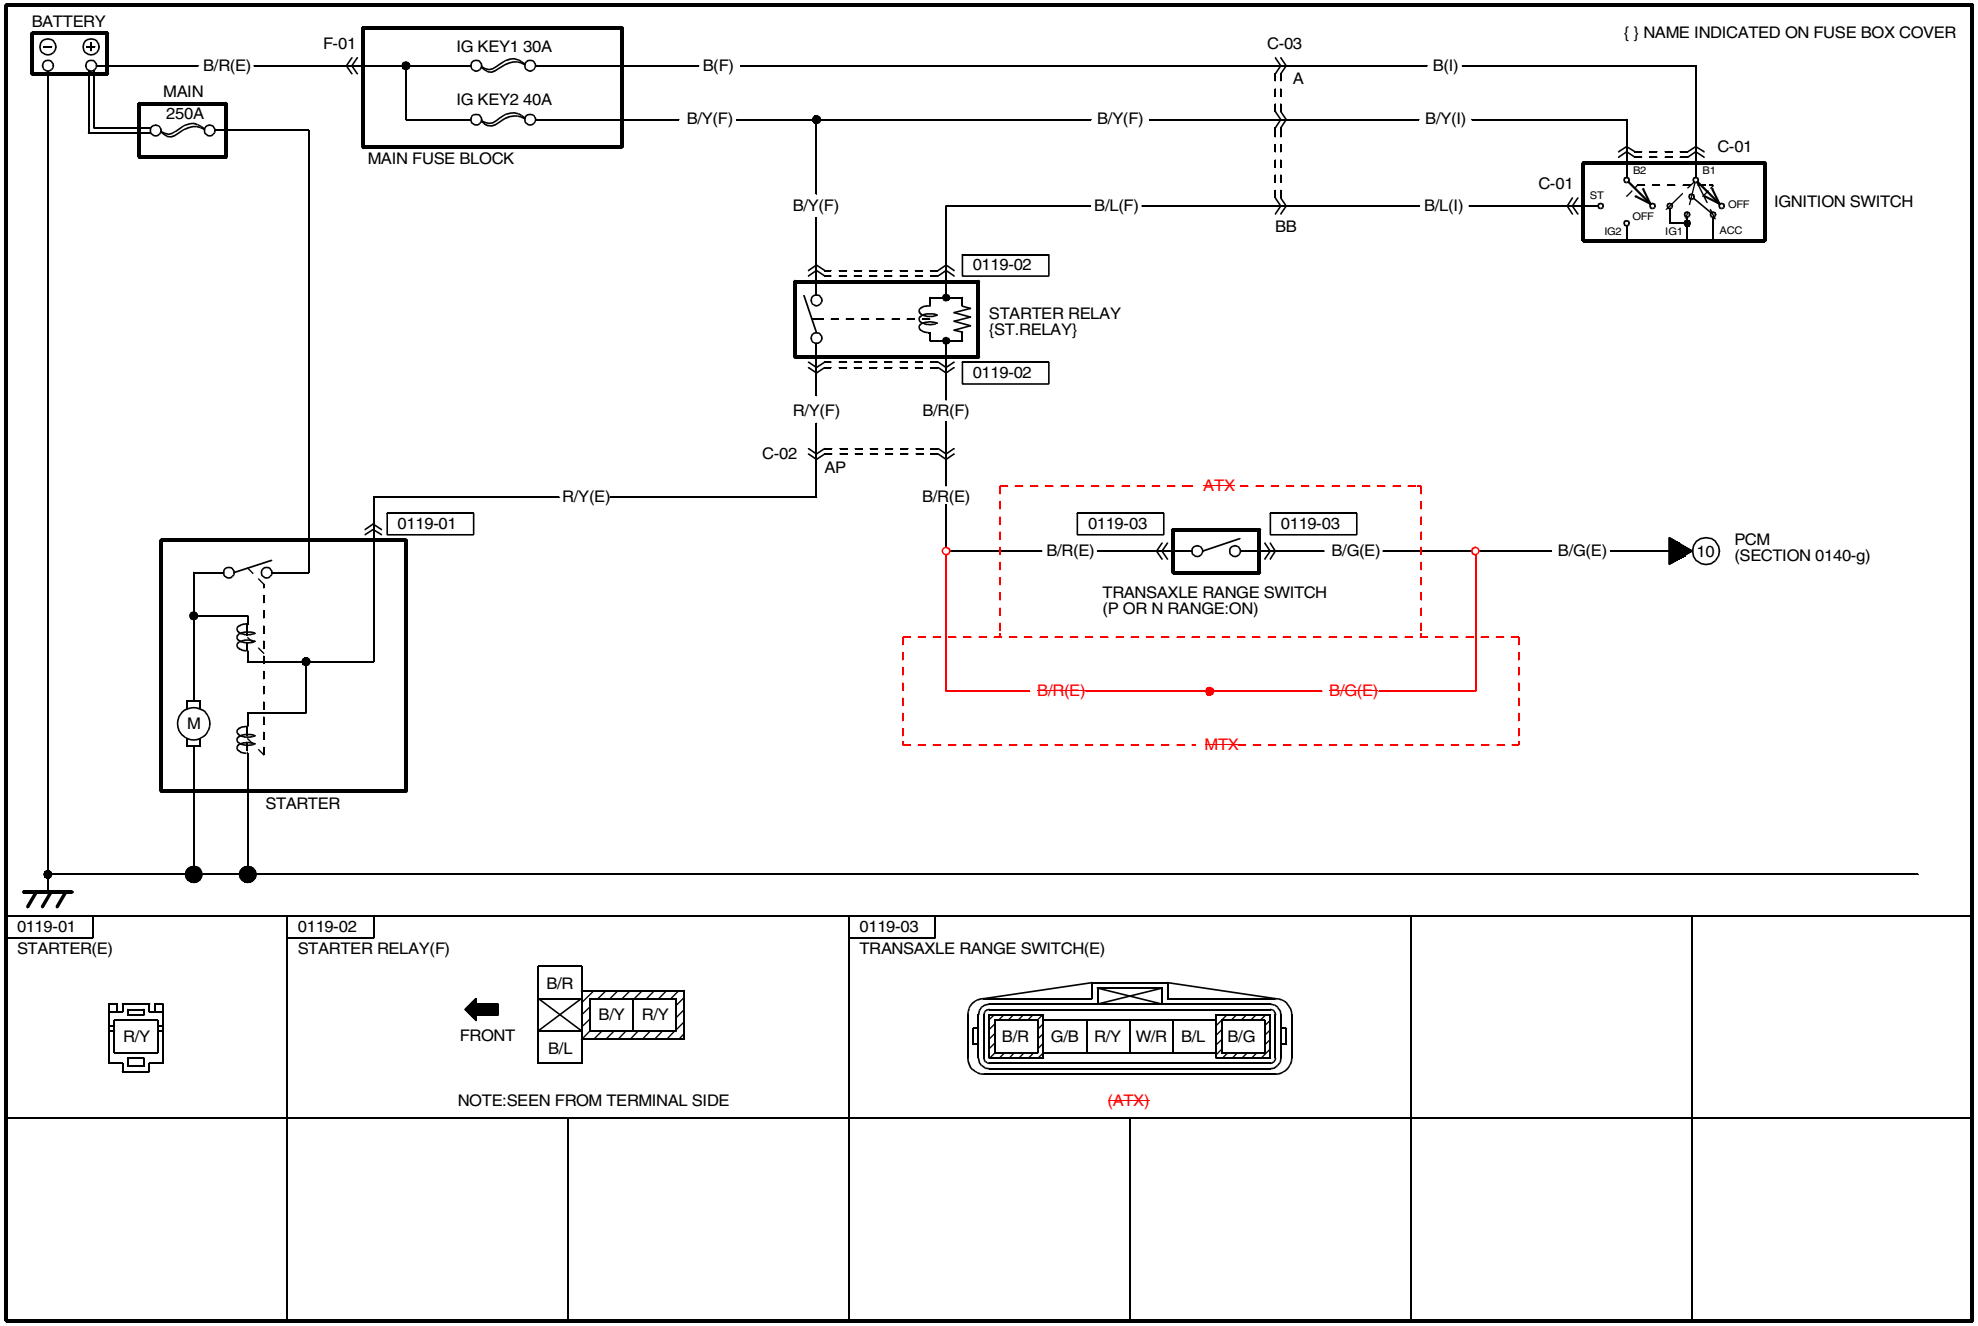

0119-01
STARTER(E)


0119-02
STARTER RELAY(F)

NOTE:SEEN FROM TERMINAL SIDE


0119-03
TRANSAXLE RANGE SWITCH(E)

~~(ATX)~~


HARNESS SYMBOL : (F) (E) (R)

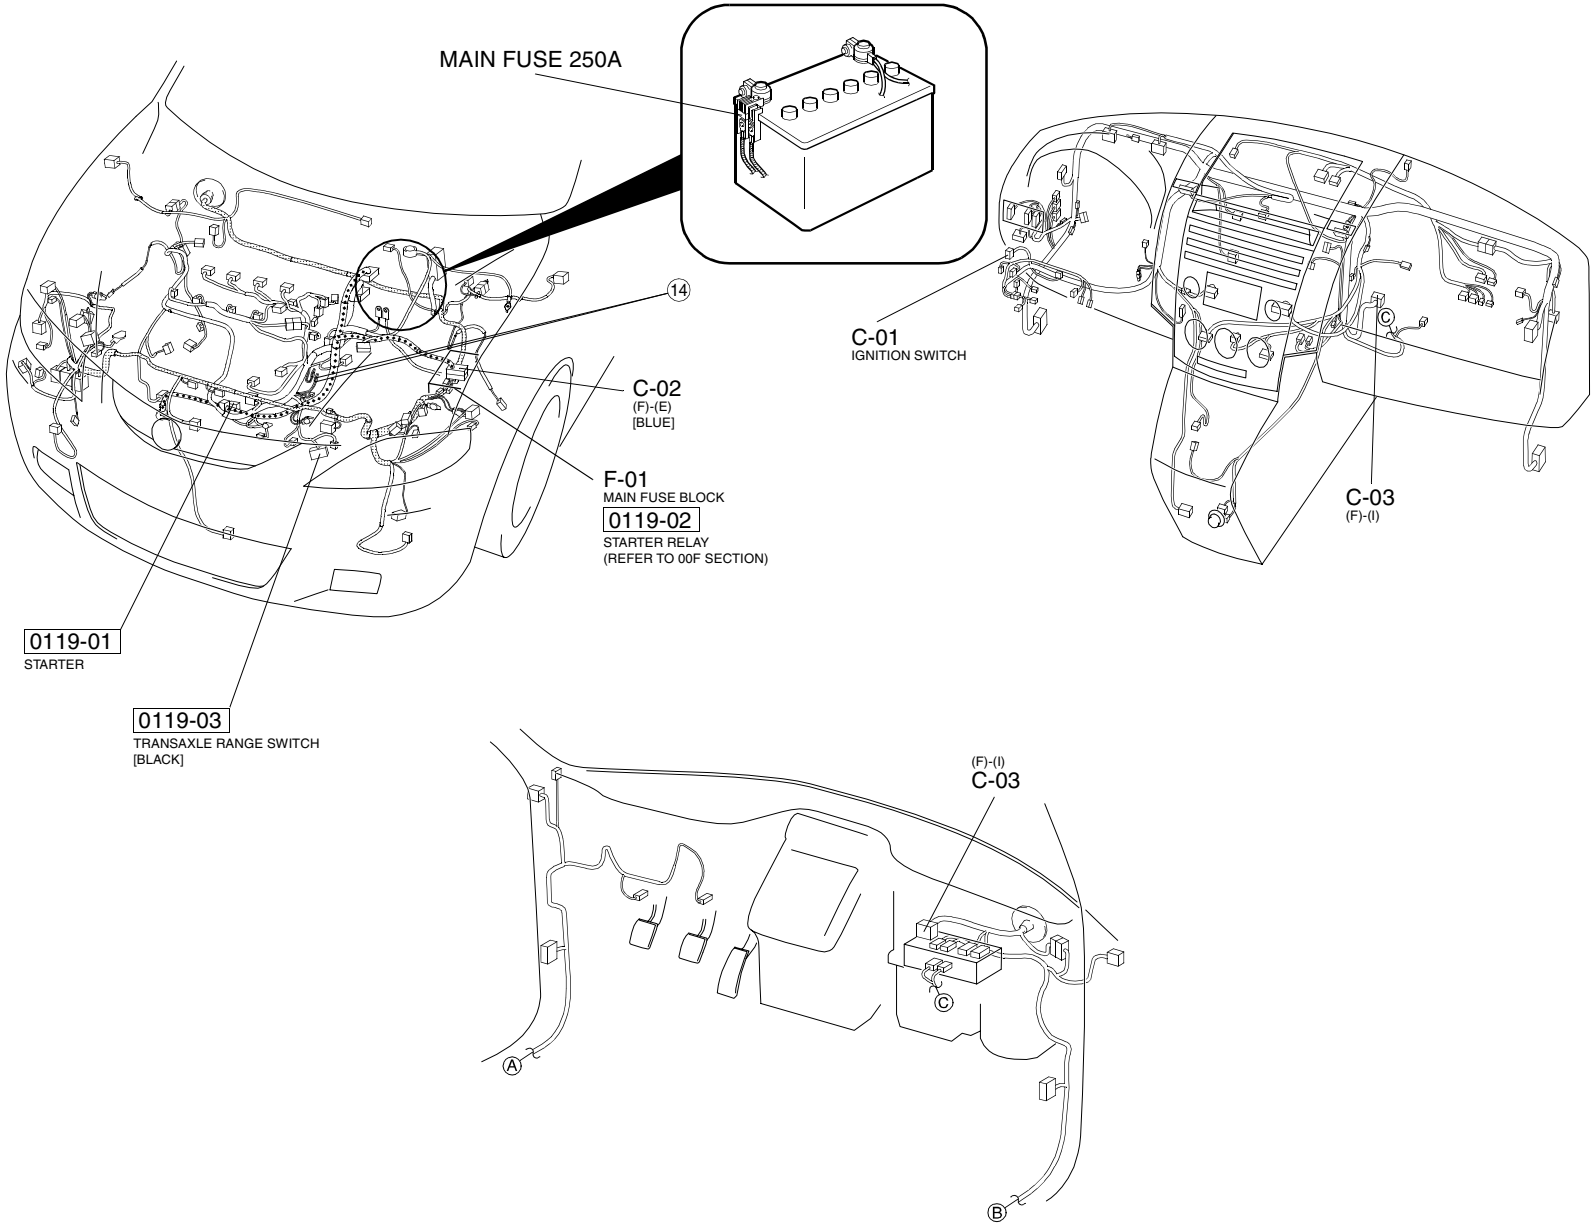


CONTROL SYSTEM (INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

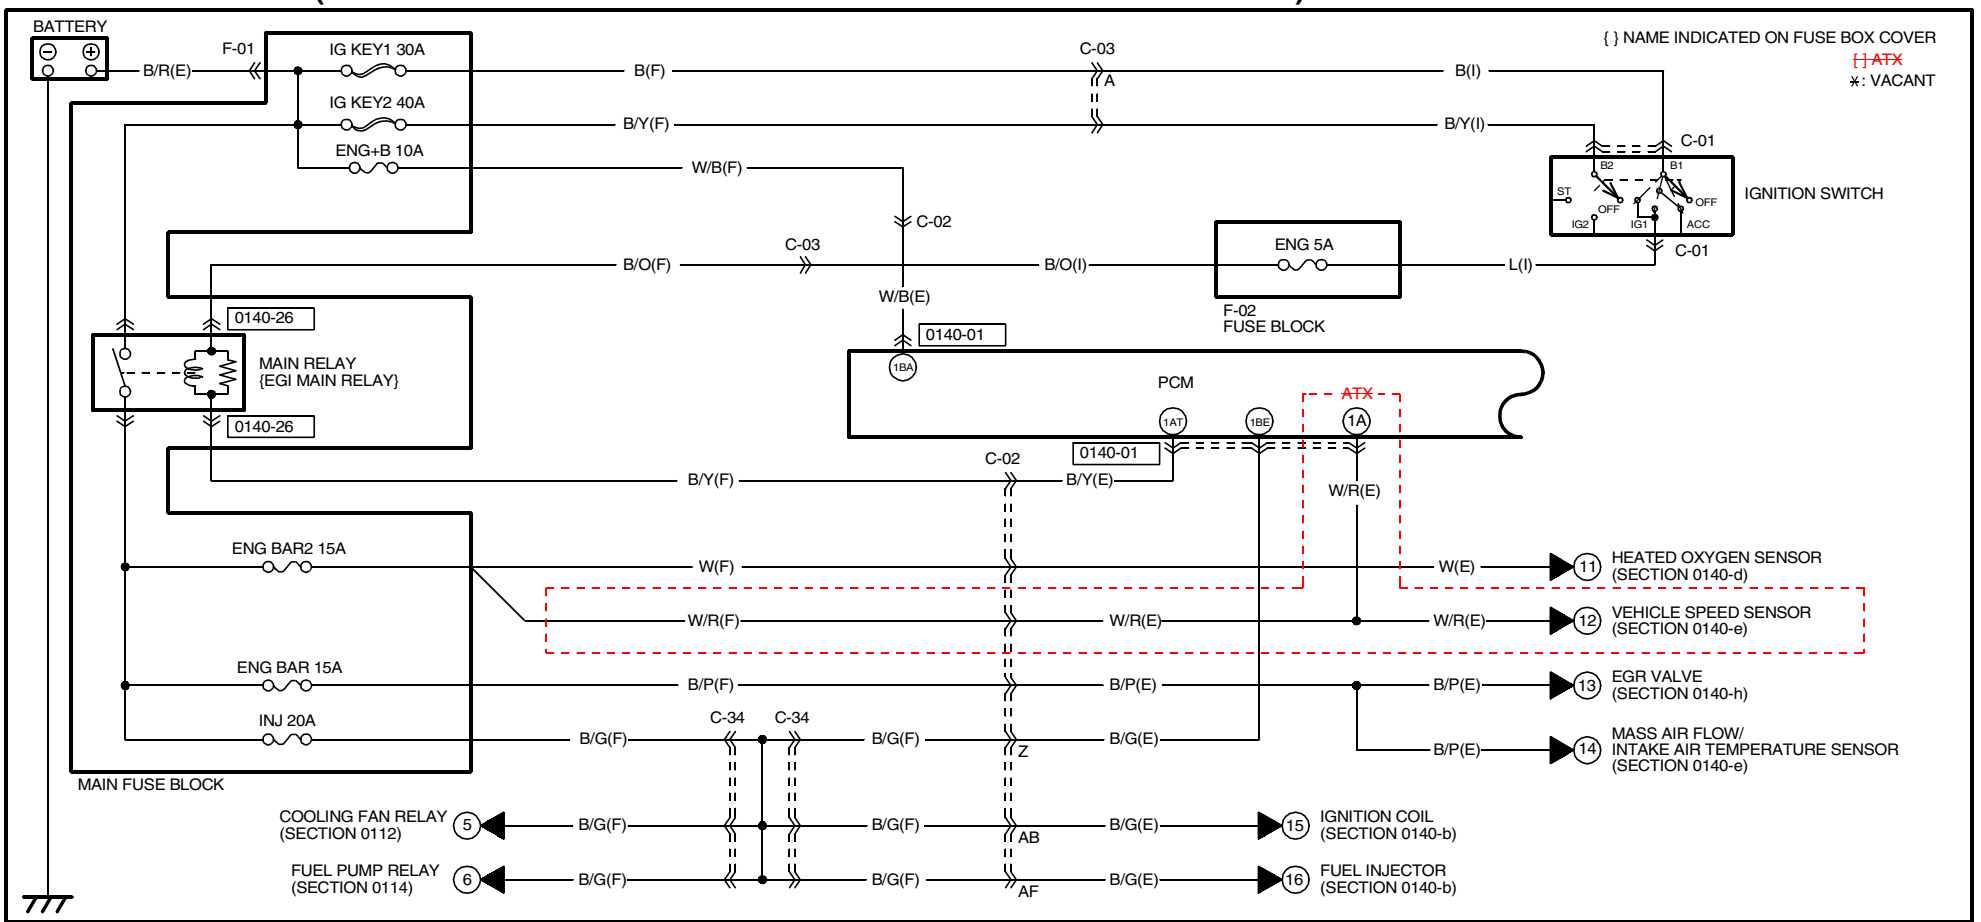


0140-01
PCM(E)

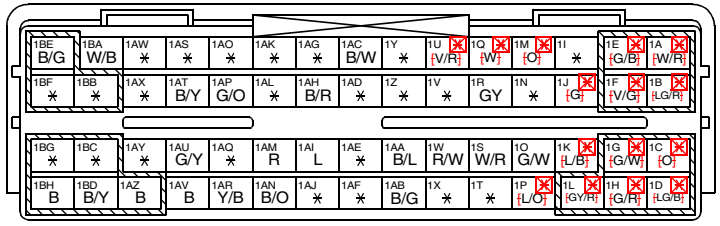


0140-26
MAIN RELAY(F)



NOTE:SEEN FROM TERMINAL SIDE

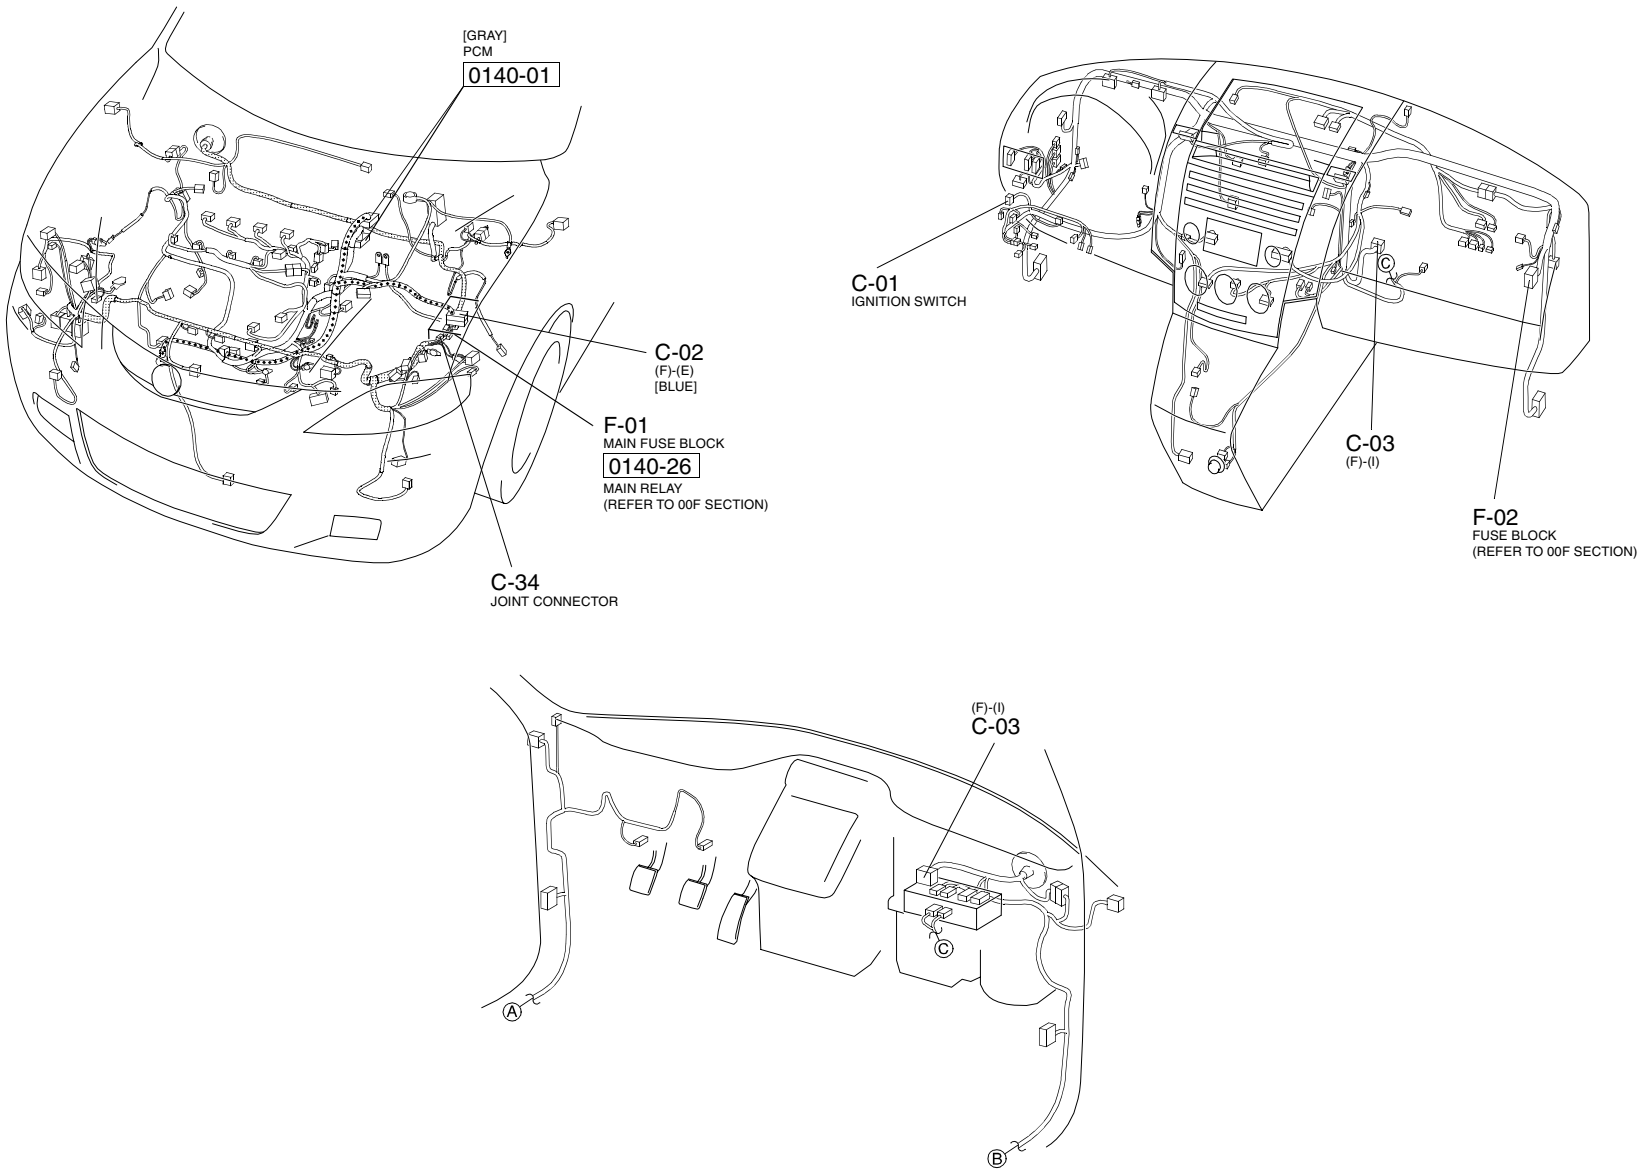
[GRAY]
PCM
0140-01
C-02
(F)-(E)
[BLUE]
F-01
MAIN FUSE BLOCK
0140-26
MAIN RELAY
(REFER TO 00F SECTION)
C-34
JOINT CONNECTOR
C-01
IGNITION SWITCH
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
(F)-(I)
C-03
A
B
C

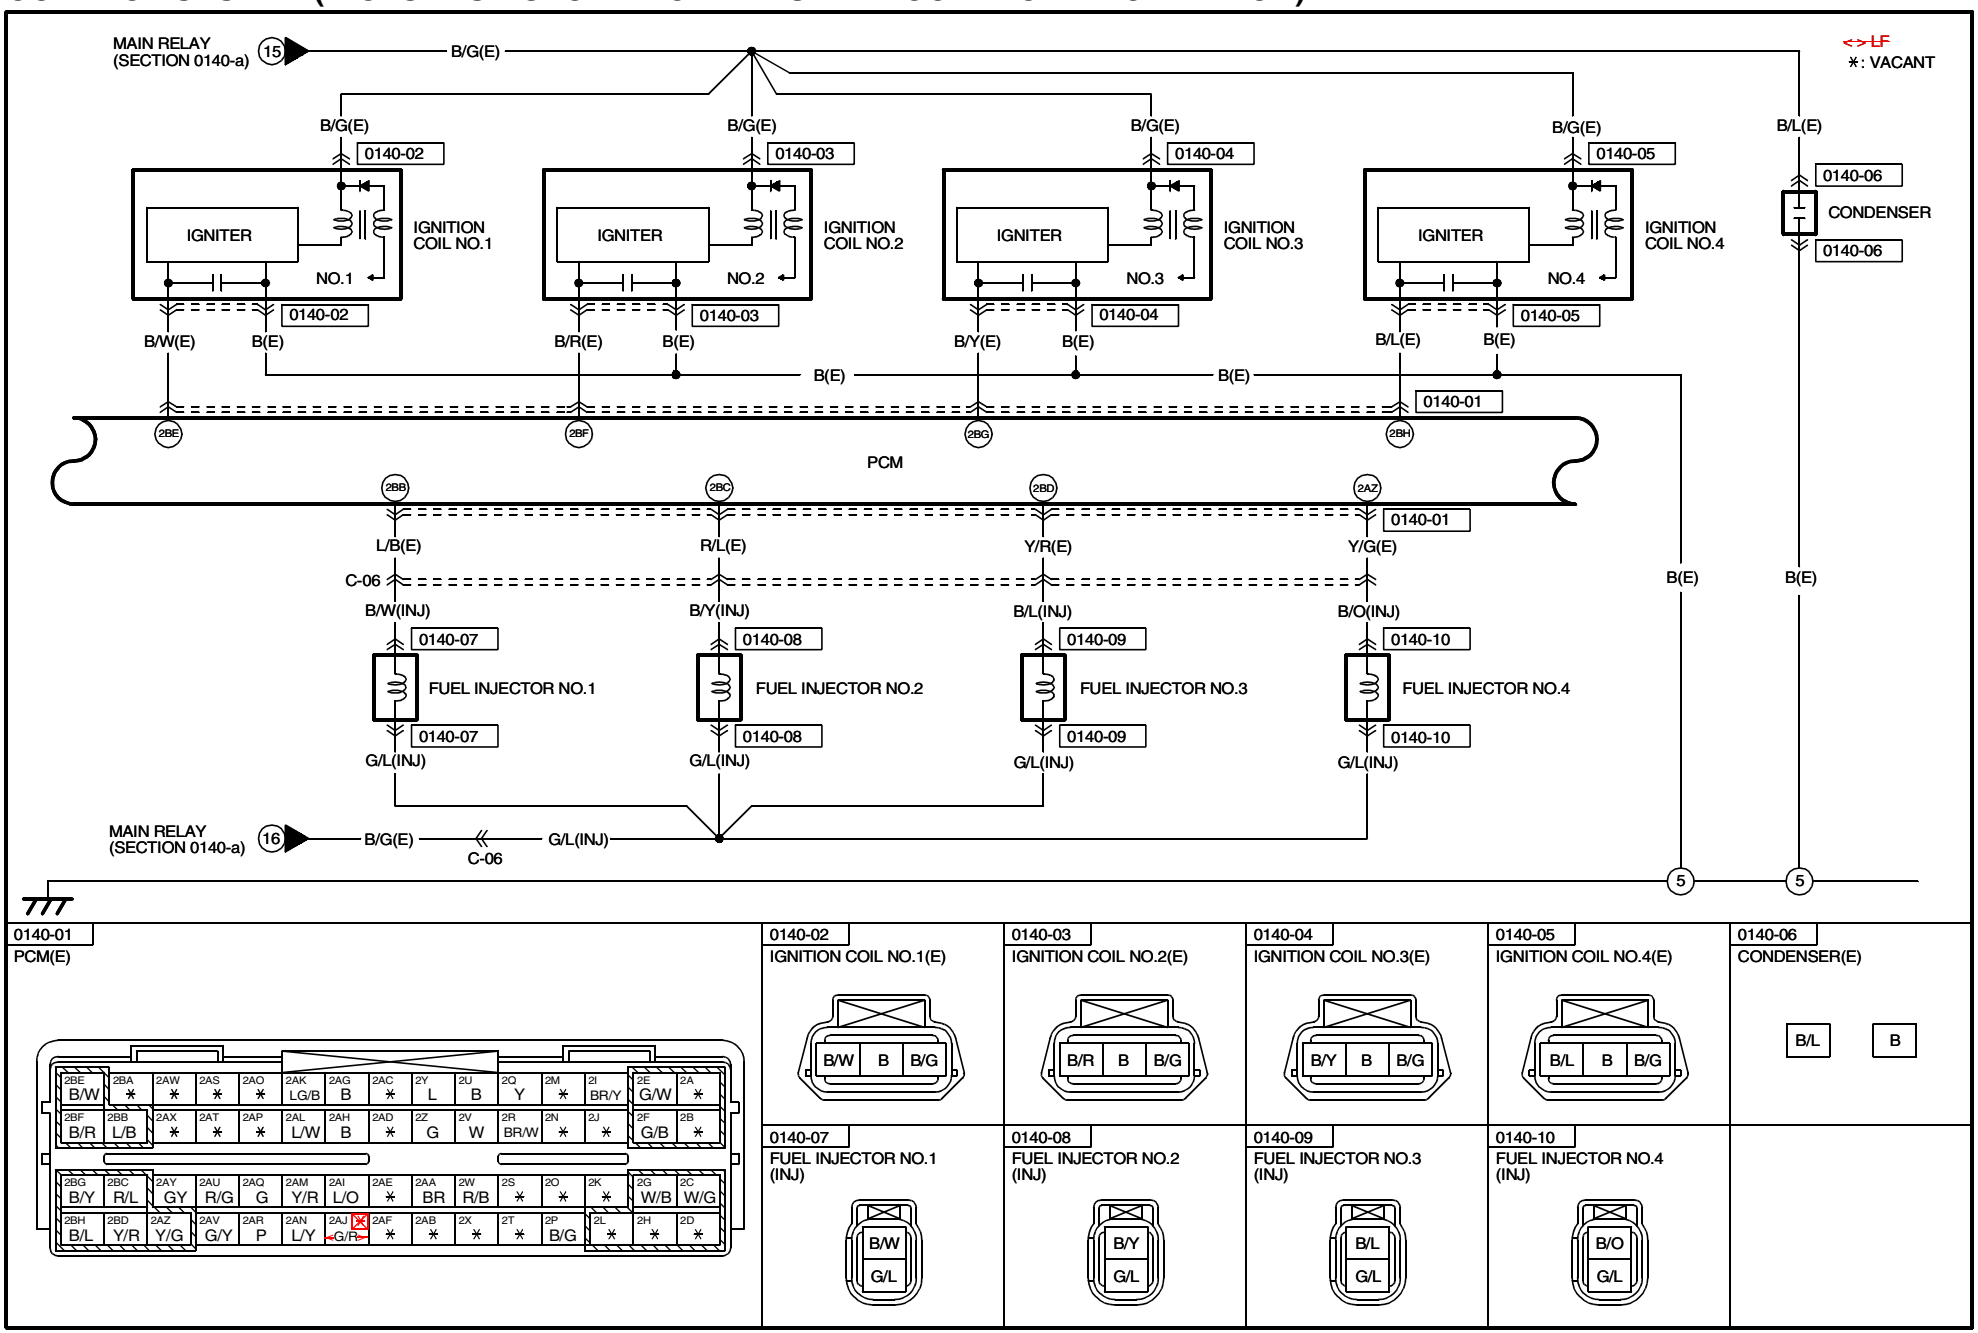

0140-01 PCM(E)

0140-02 IGNITION COIL NO.1(E)

0140-03 IGNITION COIL NO.2(E)

0140-04 IGNITION COIL NO.3(E)

0140-05 IGNITION COIL NO.4(E)


0140-06 CONDENSER(E)


0140-07 FUEL INJECTOR NO.1 (INJ)

0140-08 FUEL INJECTOR NO.2 (INJ)

0140-09 FUEL INJECTOR NO.3 (INJ)

0140-10 FUEL INJECTOR NO.4 (INJ)

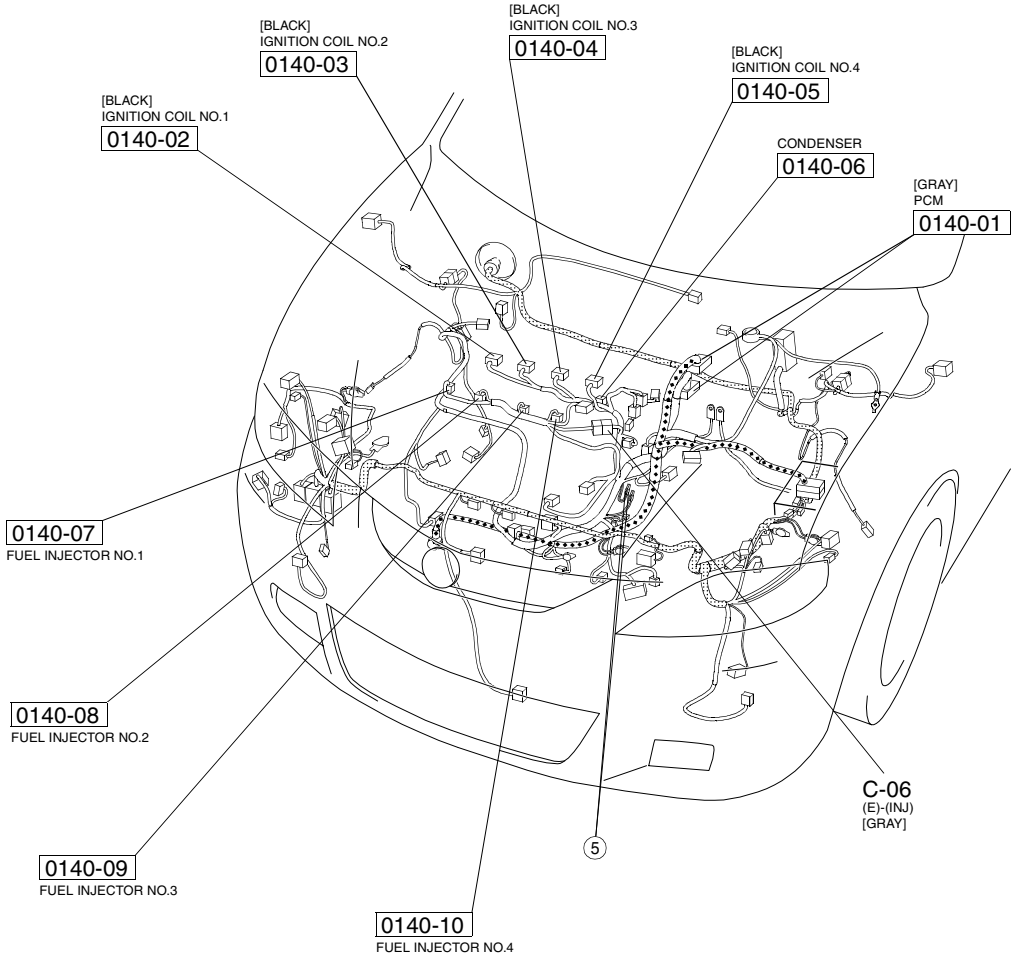
[BLACK]
IGNITION COIL NO.2
0140-03
[BLACK]
IGNITION COIL NO.3
0140-04
[BLACK]
IGNITION COIL NO.4
0140-05
[BLACK]
IGNITION COIL NO.1
0140-02
CONDENSER
0140-06
[GRAY]
PCM
0140-01
0140-07
FUEL INJECTOR NO.1
0140-08
FUEL INJECTOR NO.2
0140-09
FUEL INJECTOR NO.3
0140-10
FUEL INJECTOR NO.4
C-06
(E)-(INJ)
[GRAY]
5

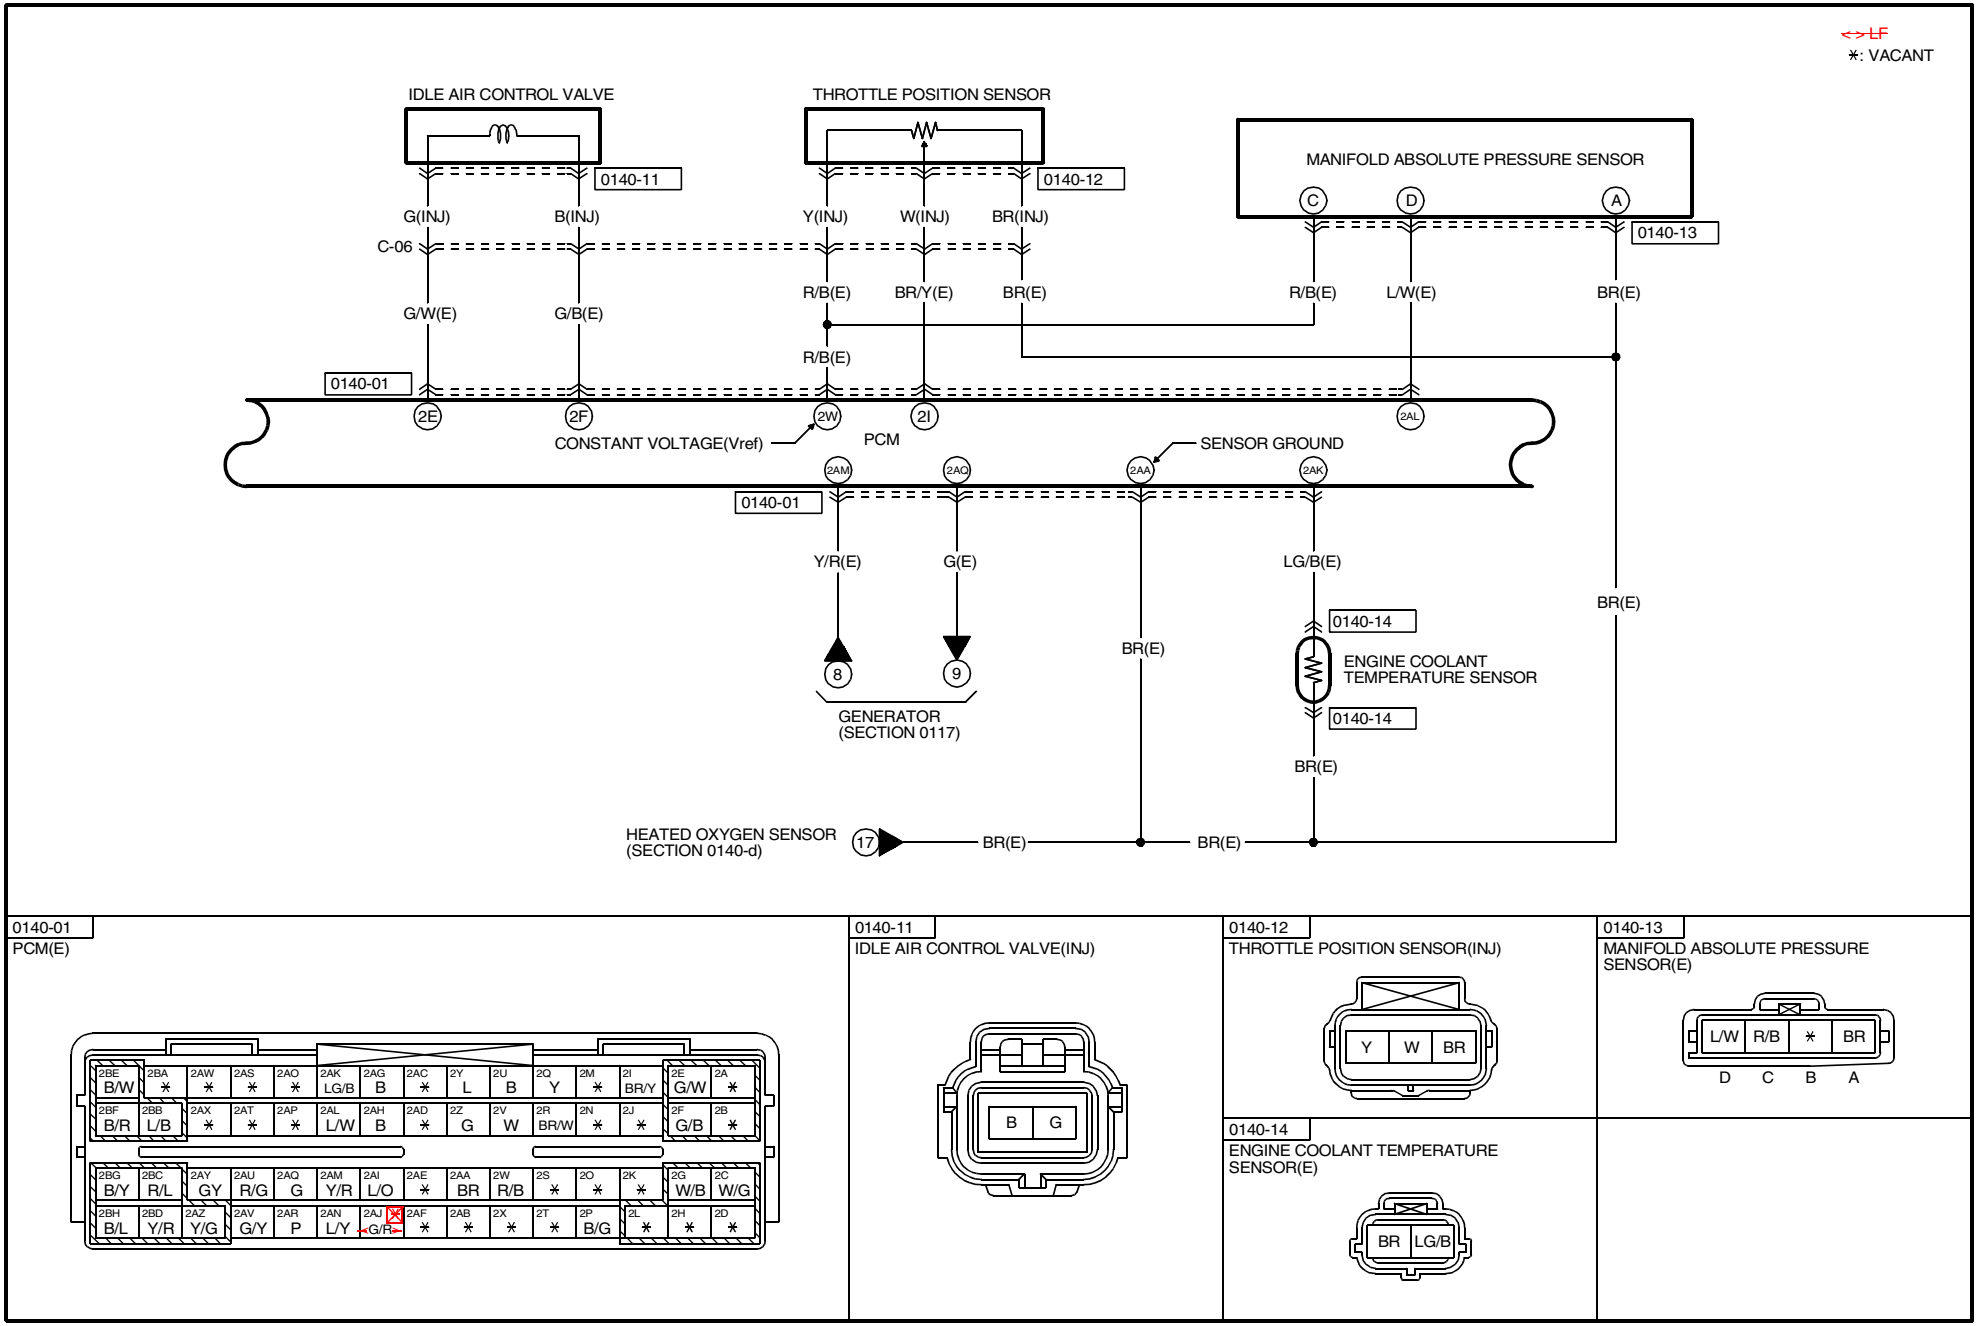


0140-01
PCM(E)


0140-11
IDLE AIR CONTROL VALVE(INJ)

0140-12
THROTTLE POSITION SENSOR(INJ)

0140-13
MANIFOLD ABSOLUTE PRESSURE SENSOR(E)

0140-14
ENGINE COOLANT TEMPERATURE SENSOR(E)

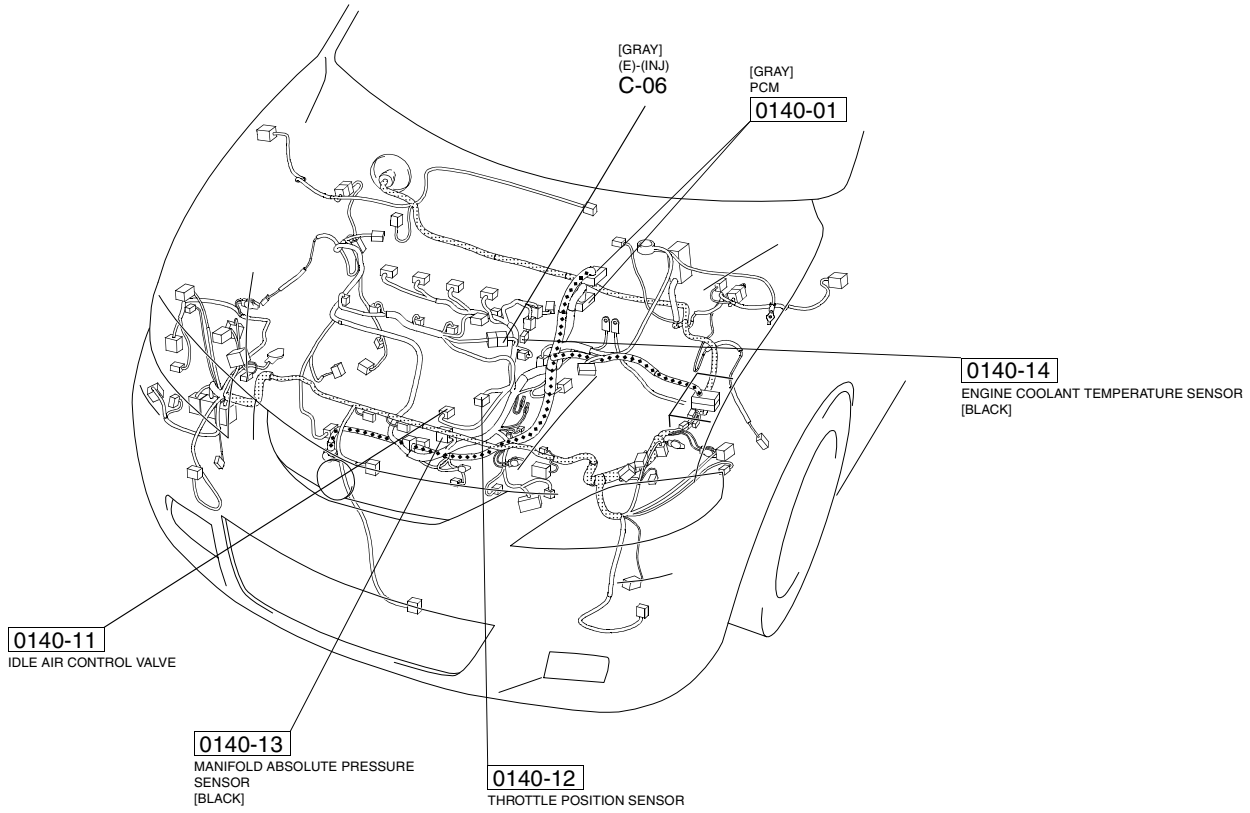
[GRAY]
(E)-(INJ)
C-06
[GRAY]
PCM
0140-01
0140-14
ENGINE COOLANT TEMPERATURE SENSOR
[BLACK]
0140-11
IDLE AIR CONTROL VALVE
0140-13
MANIFOLD ABSOLUTE PRESSURE
SENSOR
[BLACK]
0140-12
THROTTLE POSITION SENSOR

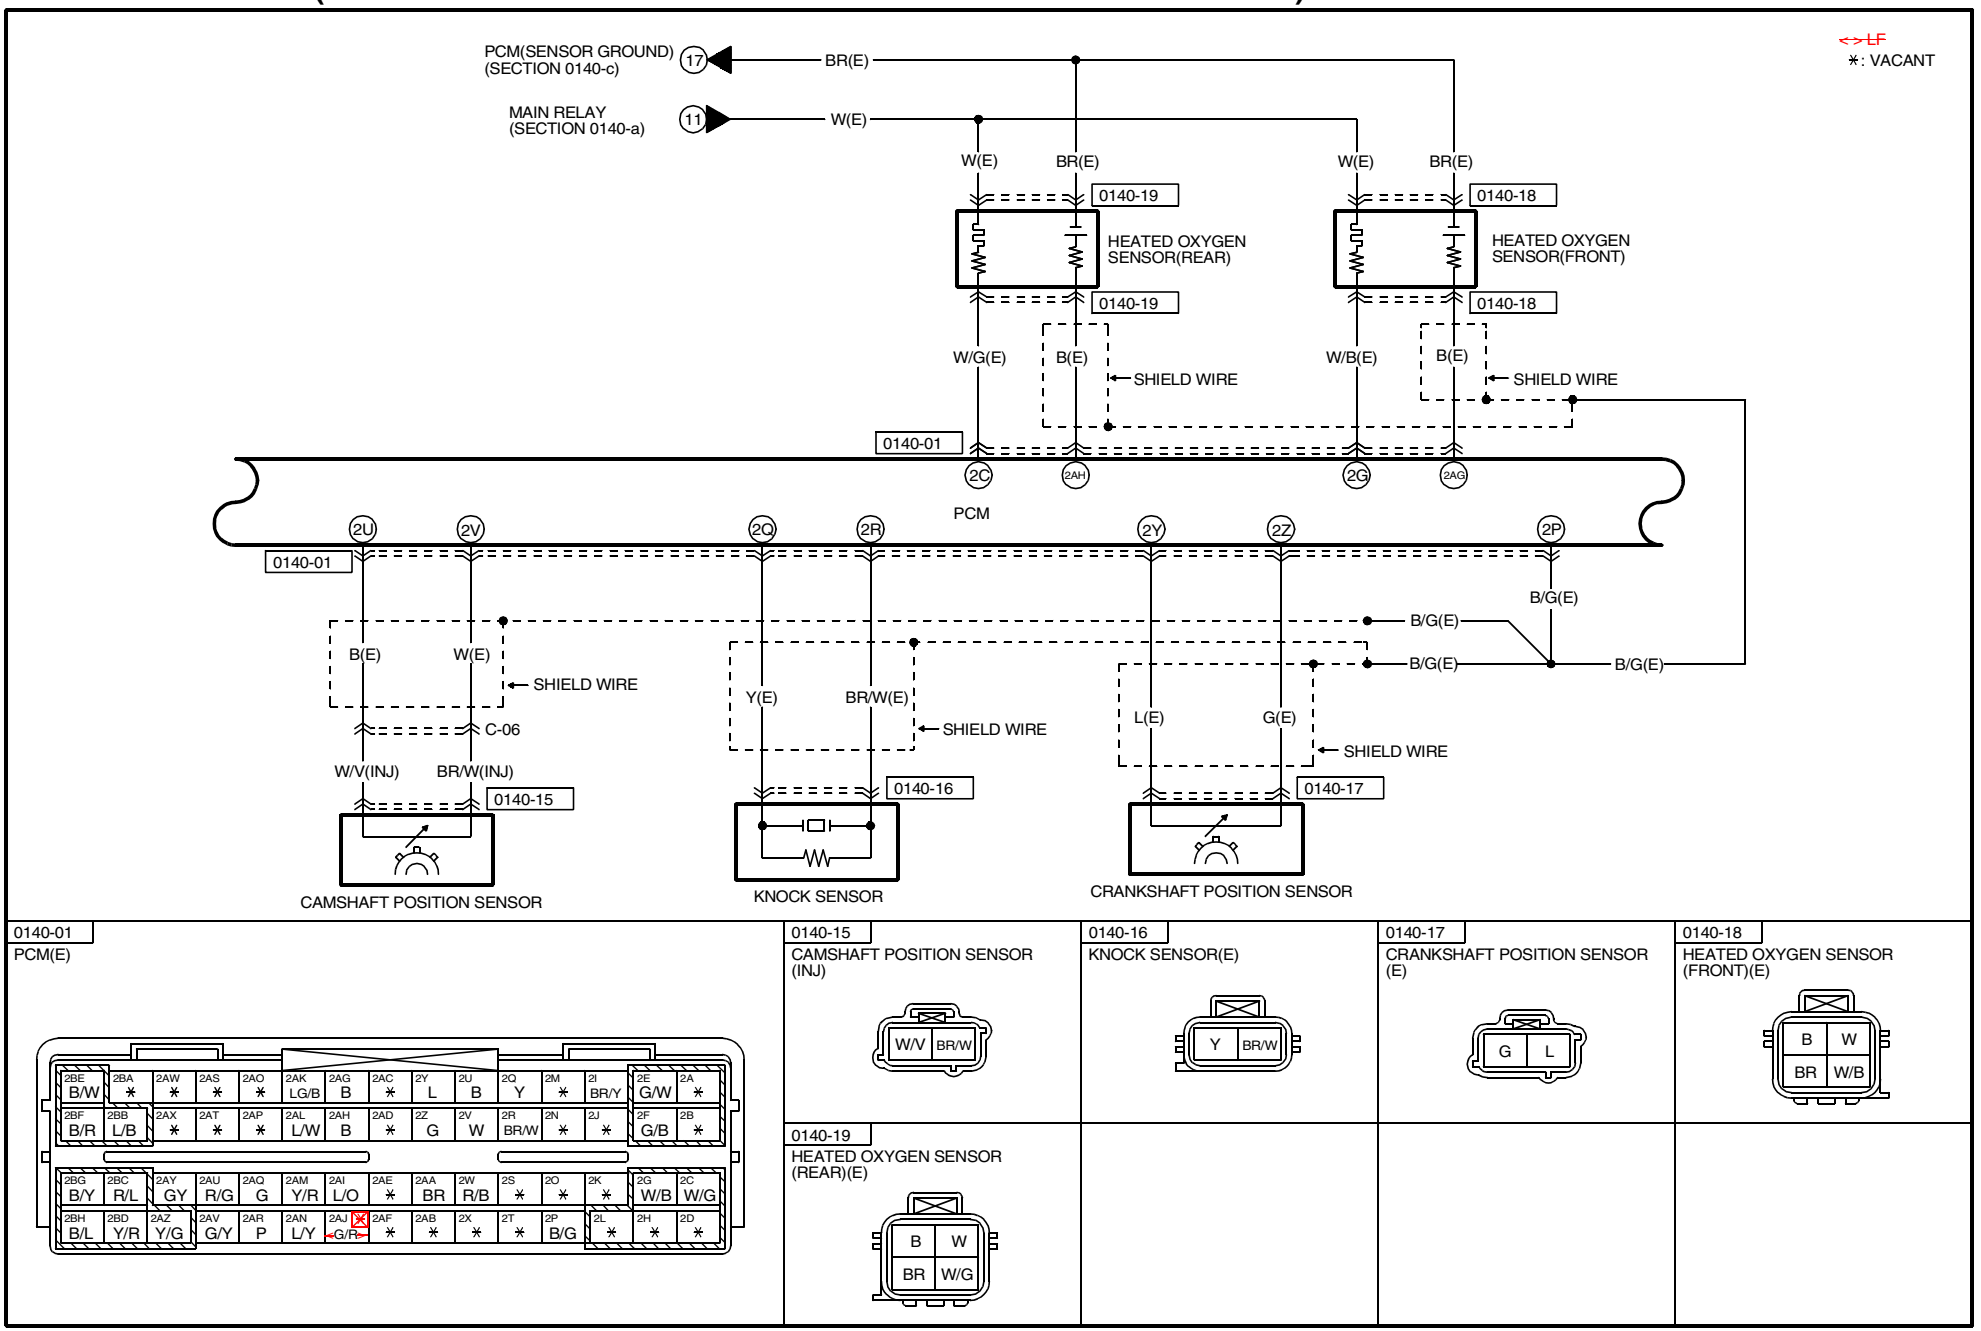

0140-01
PCM(E)


0140-15
CAMSHAFT POSITION SENSOR (INJ)

0140-16
KNOCK SENSOR(E)


0140-17
CRANKSHAFT POSITION SENSOR (E)

0140-18
HEATED OXYGEN SENSOR (FRONT)(E)


0140-19
HEATED OXYGEN SENSOR (REAR)(E)

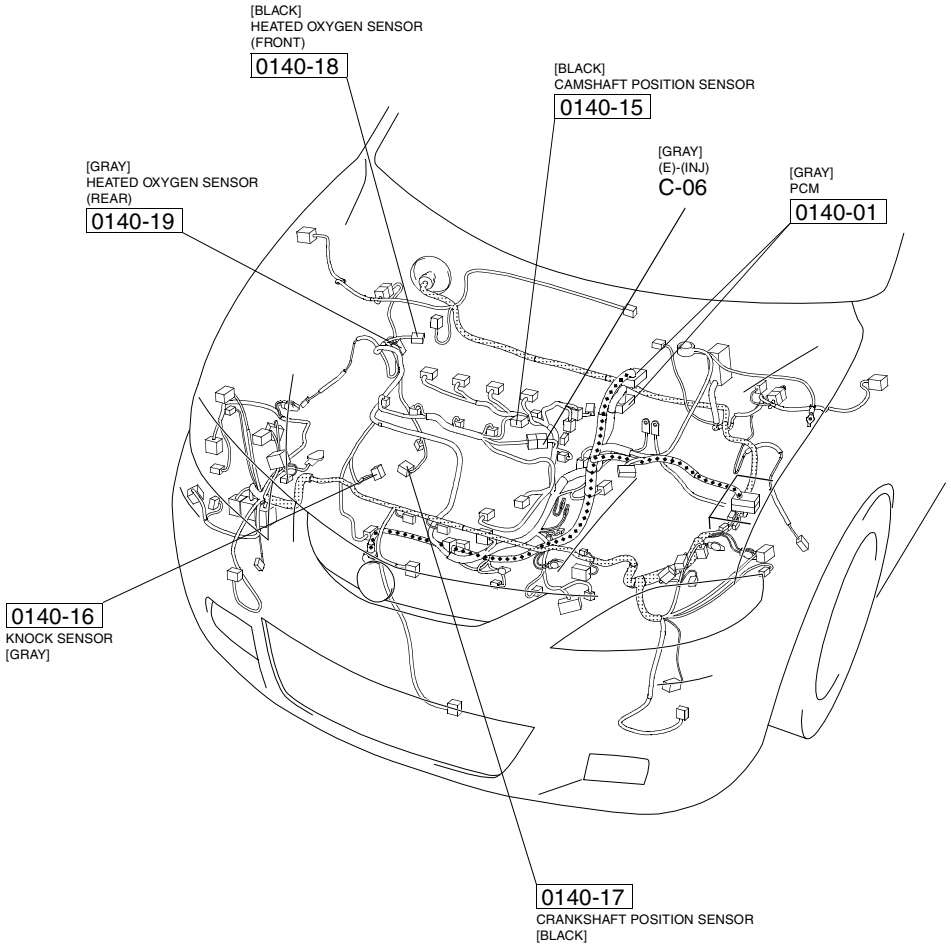
[BLACK]
HEATED OXYGEN SENSOR
(FRONT)
0140-18
[BLACK]
CAMSHAFT POSITION SENSOR
0140-15
[GRAY]
(E)-(INJ)
C-06
[GRAY]
PCM
0140-01
[GRAY]
HEATED OXYGEN SENSOR
(REAR)
0140-19
0140-16
KNOCK SENSOR
[GRAY]
0140-17
CRANKSHAFT POSITION SENSOR
[BLACK]


[ ] ATX
∗: VACANT

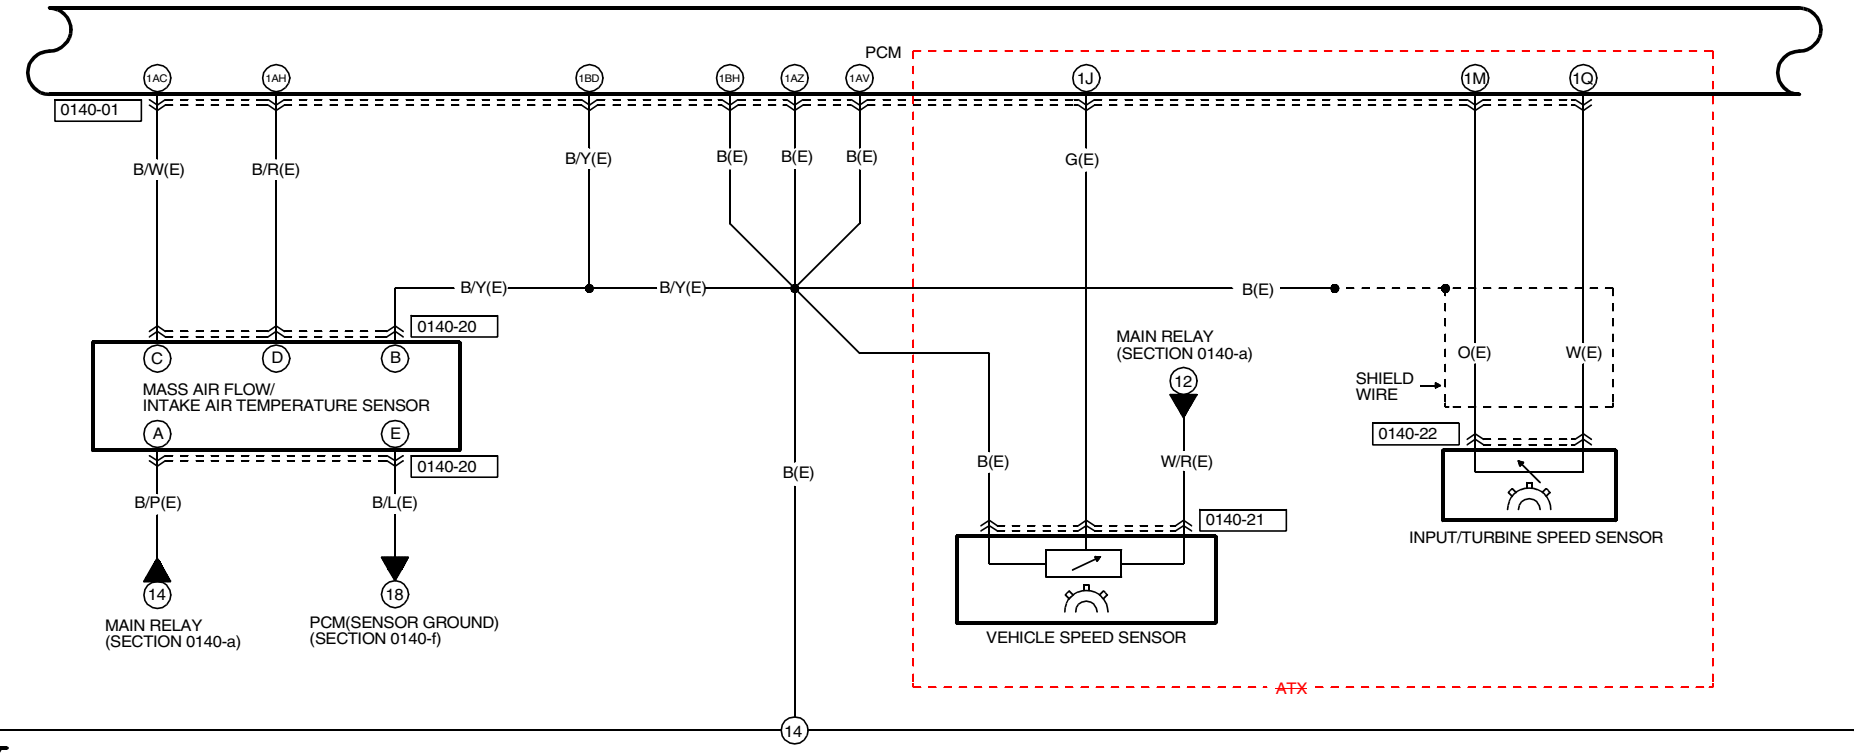


0140-01
PCM(E)

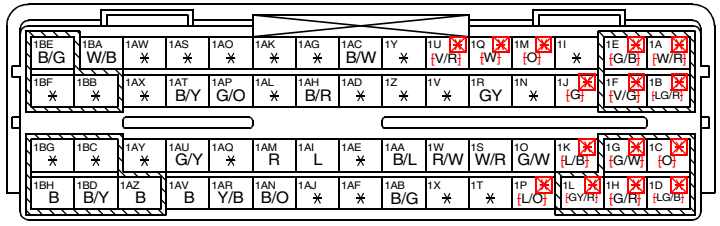

0140-20
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR(E)




0140-21
VEHICLE SPEED SENSOR(E)




(ATX)


0140-22
INPUT/TURBINE SPEED SENSOR(E)



(ATX)

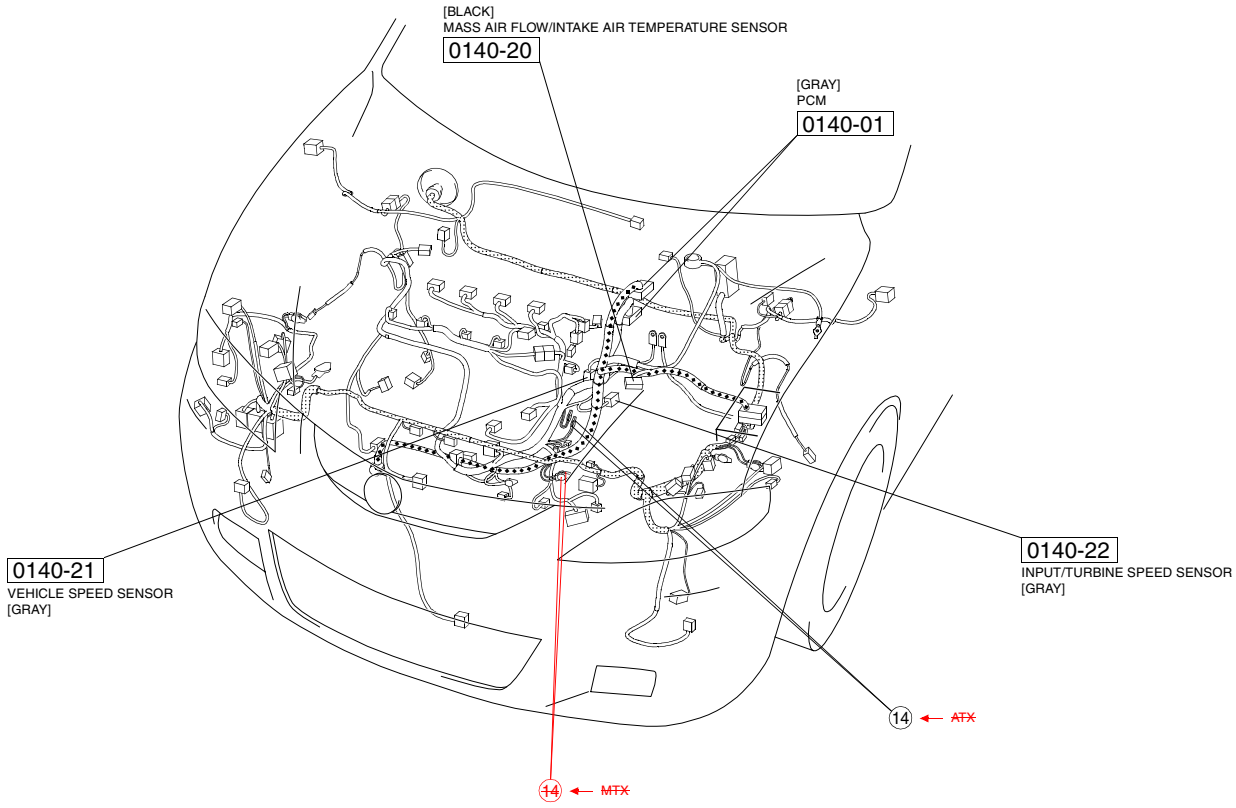
[BLACK]
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR
0140-20
[GRAY]
PCM
0140-01
0140-21
VEHICLE SPEED SENSOR
[GRAY]
0140-22
INPUT/TURBINE SPEED SENSOR
[GRAY]
14 ← ATX
14 ← MTX

CONTROL SYSTEM (INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

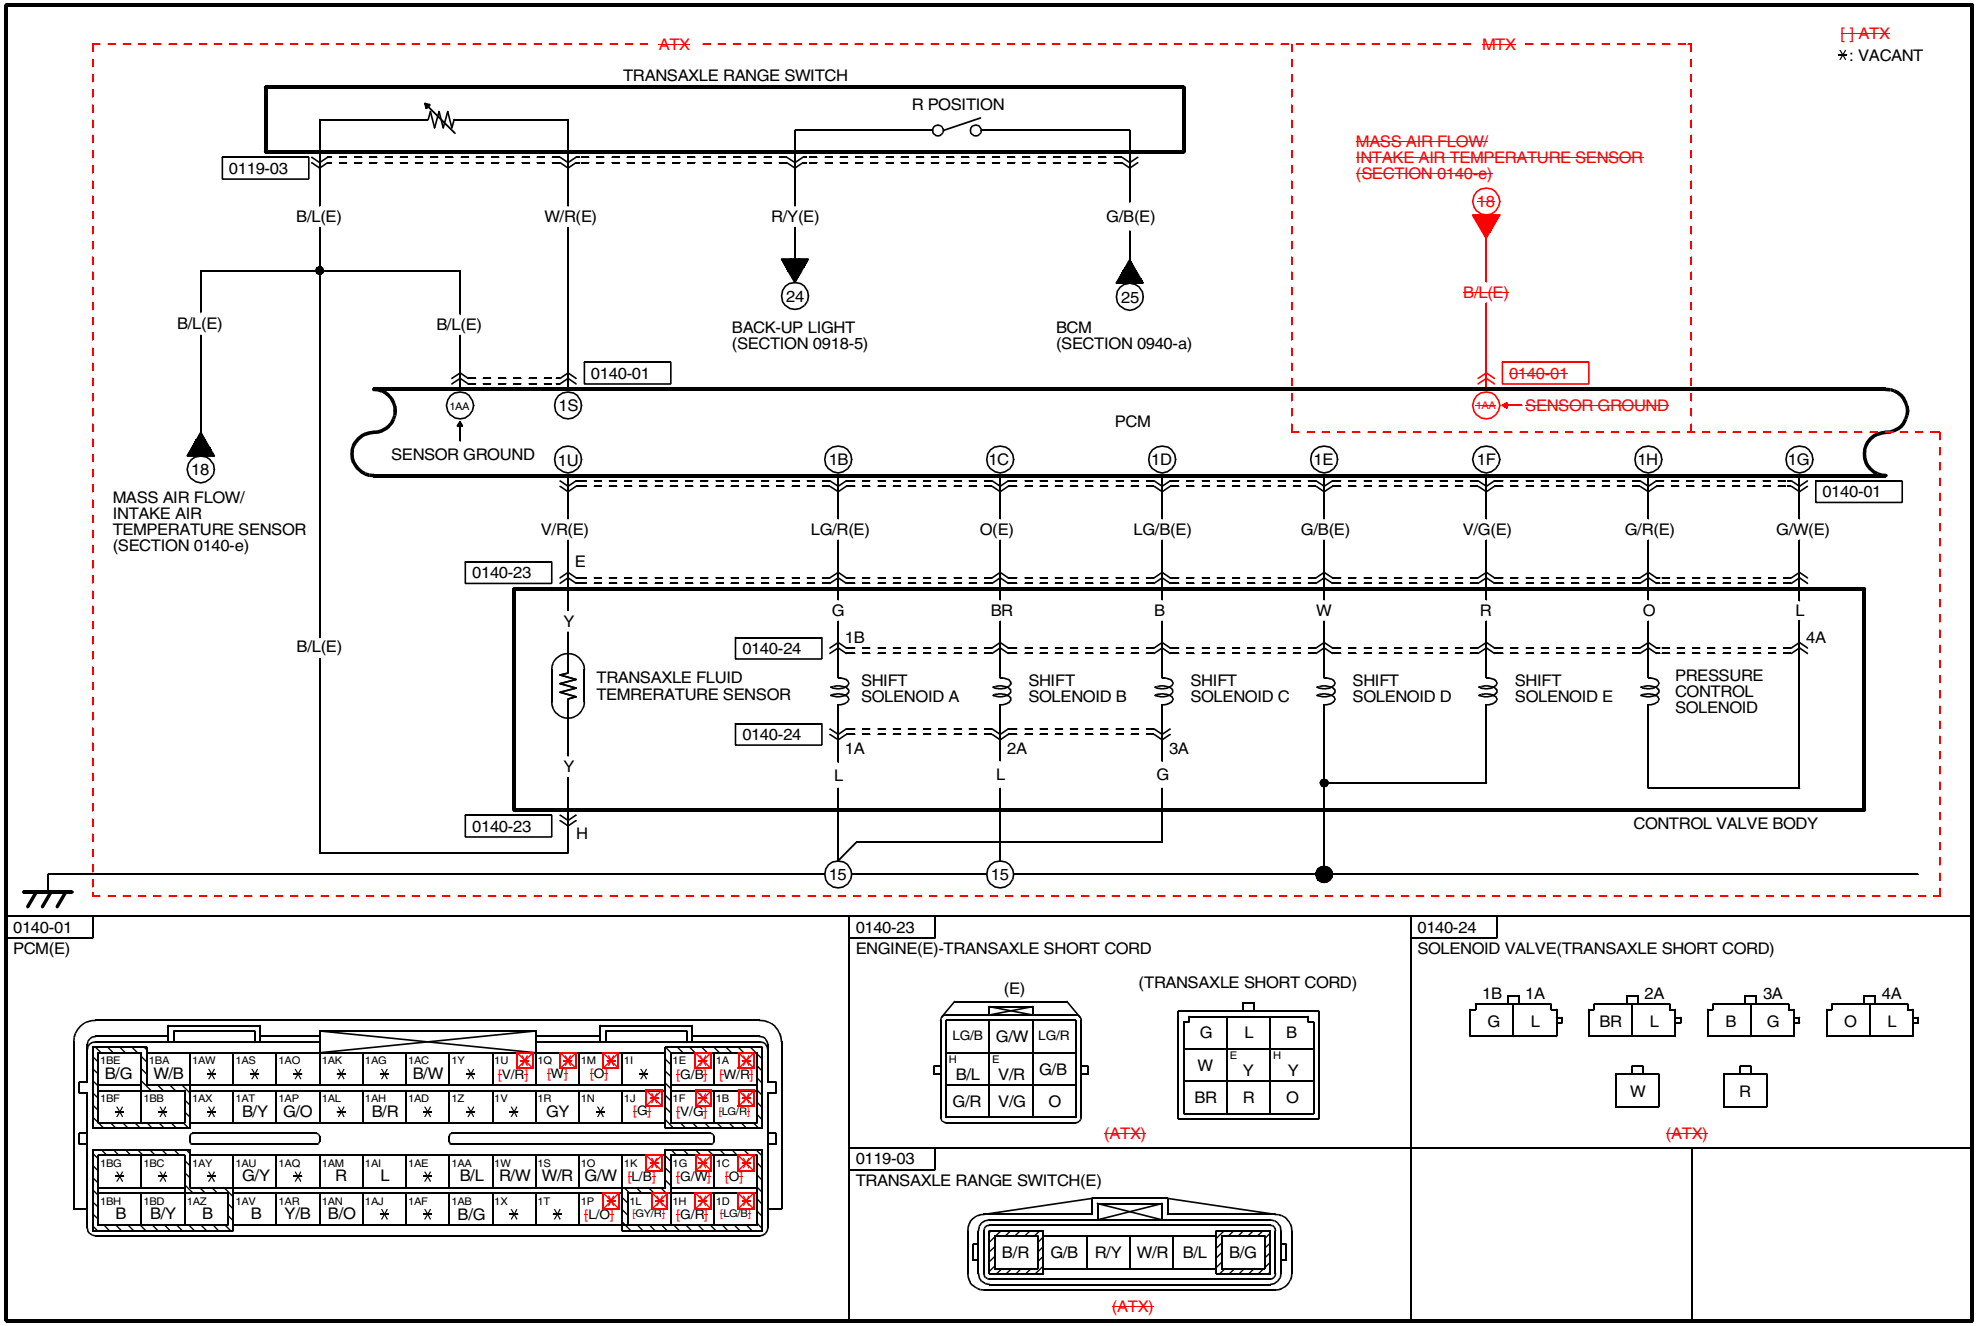



0140-01
PCM(E)


0140-23
ENGINE(E)-TRANSAXLE SHORT CORD


0140-24
SOLENOID VALVE(TRANSAXLE SHORT CORD)


0119-03
TRANSAXLE RANGE SWITCH(E)

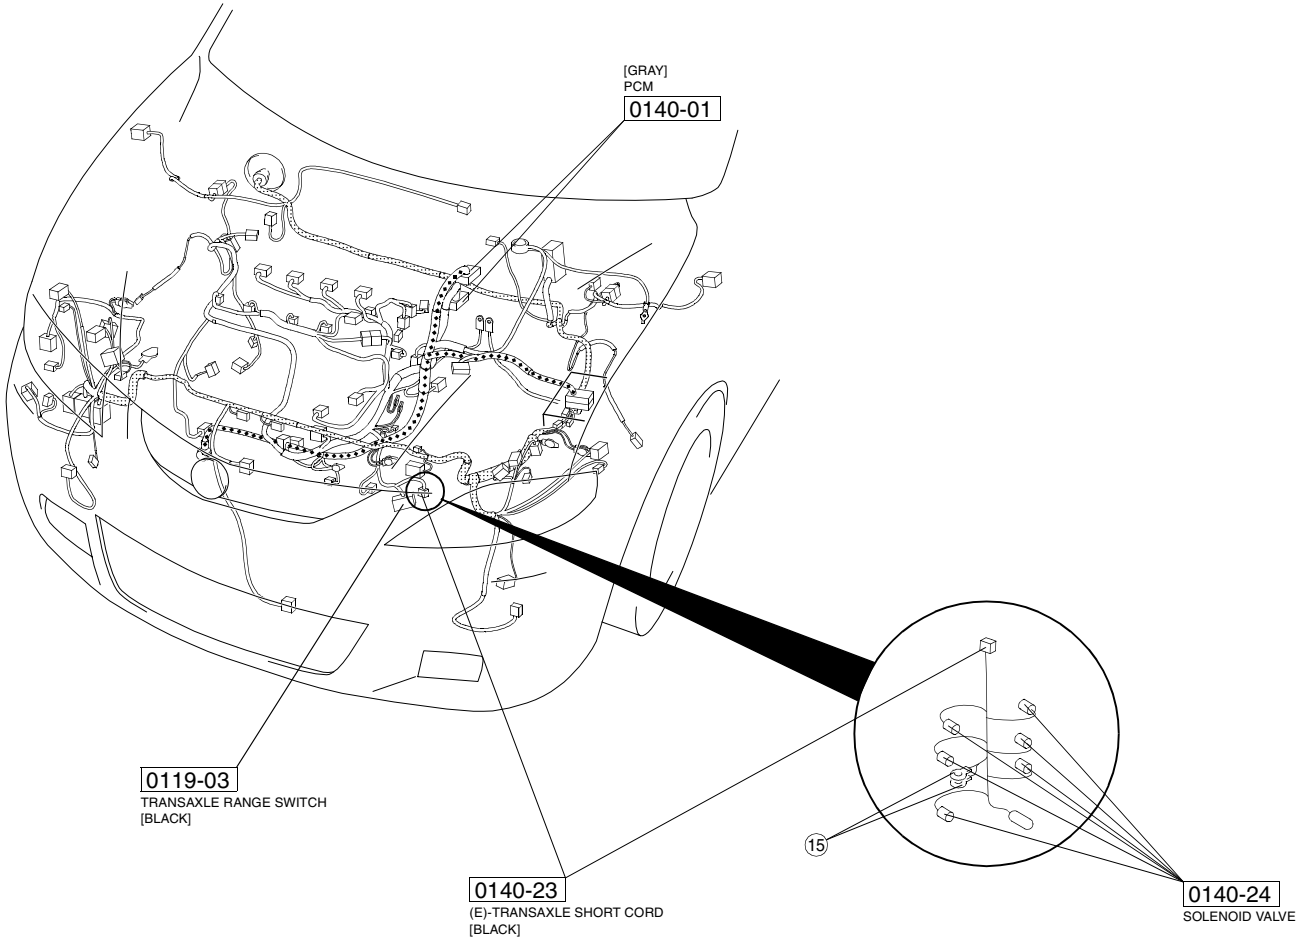
[GRAY]
PCM
0140-01
0119-03
TRANSAXLE RANGE SWITCH
[BLACK]
0140-23
(E)-TRANSAXLE SHORT CORD
[BLACK]
15
0140-24
SOLENOID VALVE

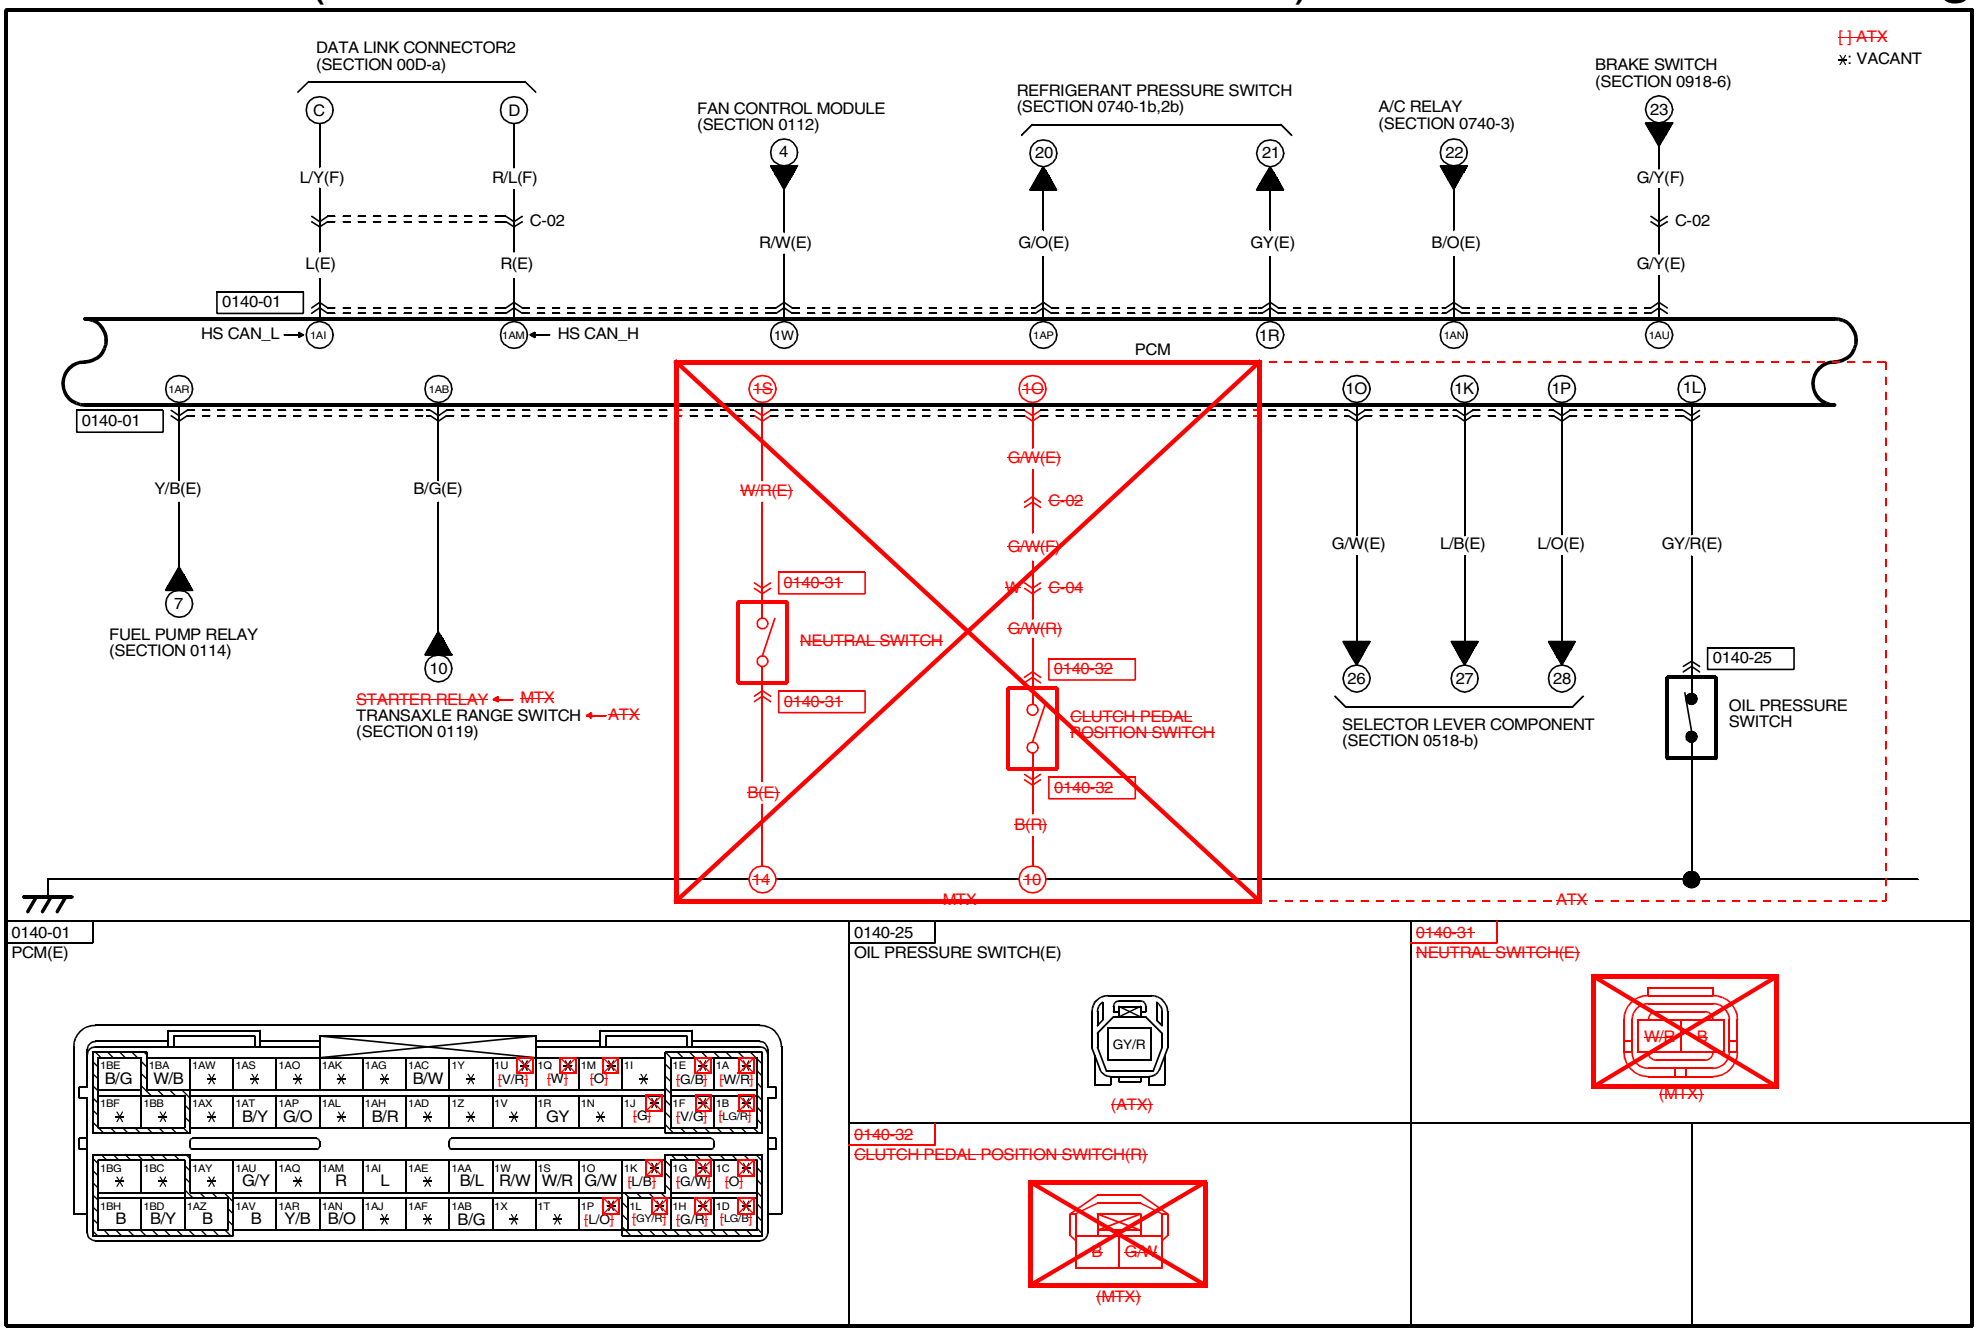

[-] ATX
*: VACANT
DATA LINK CONNECTOR2
(SECTION 00D-a)
FAN CONTROL MODULE
(SECTION 0112)
REFRIGERANT PRESSURE SWITCH
(SECTION 0740-1b,2b)
A/C RELAY
(SECTION 0740-3)
BRAKE SWITCH
(SECTION 0918-6)
L/Y(F)
R/L(F)
C-02
L(E)
R(E)
R/W(E)
G/O(E)
GY(E)
B/O(E)
G/Y(F)
G/Y(E)
0140-01
HS CAN_L
HS CAN_H
PCM
Y/B(E)
B/G(E)
FUEL PUMP RELAY
(SECTION 0114)
STARTER RELAY ← MTX
TRANSAXLE RANGE SWITCH ← ATX
(SECTION 0119)
W/R(E)
0140-31
NEUTRAL SWITCH
B(E)
G/W(E)
C-04
G/W(R)
0140-32
CLUTCH PEDAL POSITION SWITCH
B(R)
MTX
ATX
G/W(E)
L/B(E)
L/O(E)
GY/R(E)
SELECTOR LEVER COMPONENT
(SECTION 0518-b)
0140-25
OIL PRESSURE SWITCH
0140-01
PCM(E)
0140-25
OIL PRESSURE SWITCH(E)
GY/R
(ATX)
0140-31
NEUTRAL SWITCH(E)
W/R
B
(MTX)
0140-32
CLUTCH PEDAL POSITION SWITCH(R)
B
G/W
(MTX)

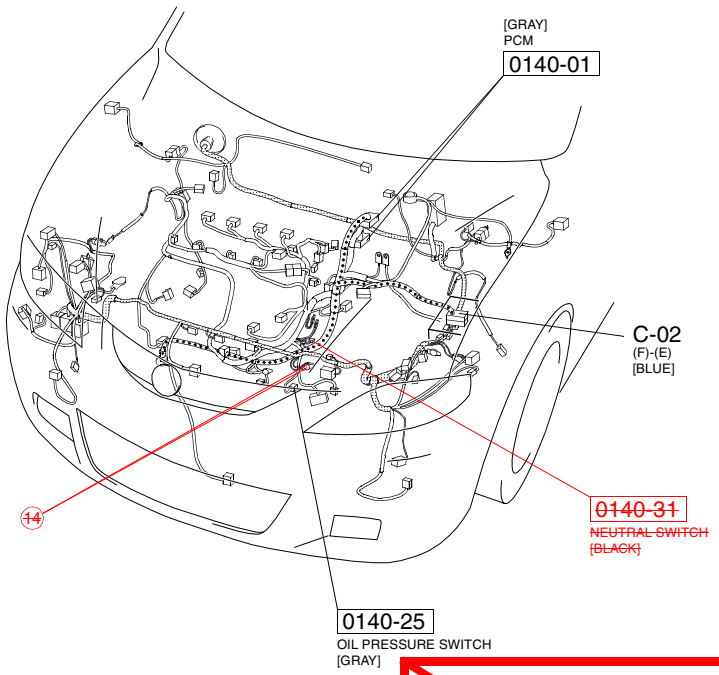
[GRAY]
PCM
0140-01
C-02
(F)-(E)
[BLUE]
14
0140-31
NEUTRAL SWITCH
[BLACK]
0140-25
OIL PRESSURE SWITCH
[GRAY]

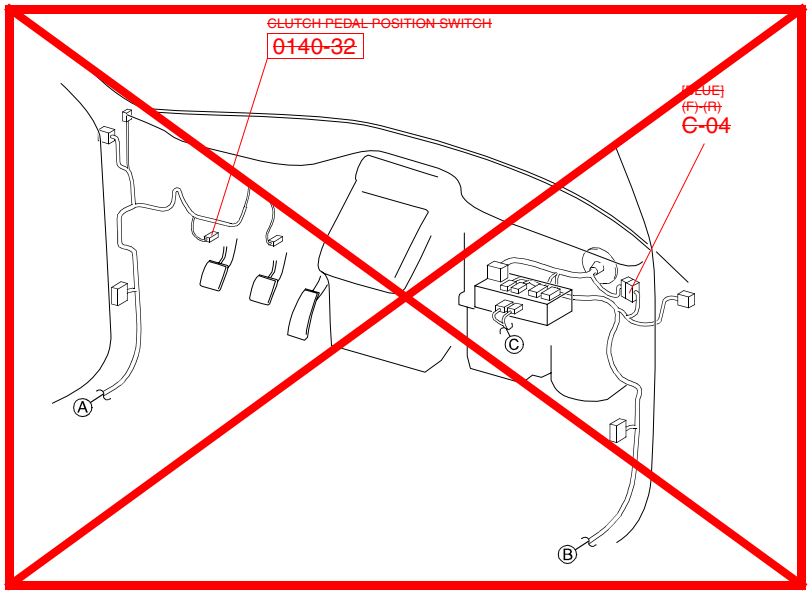

CLUTCH PEDAL POSITION SWITCH
0140-32
[BLUE]
(F)-(R)
C-04
A
B
C

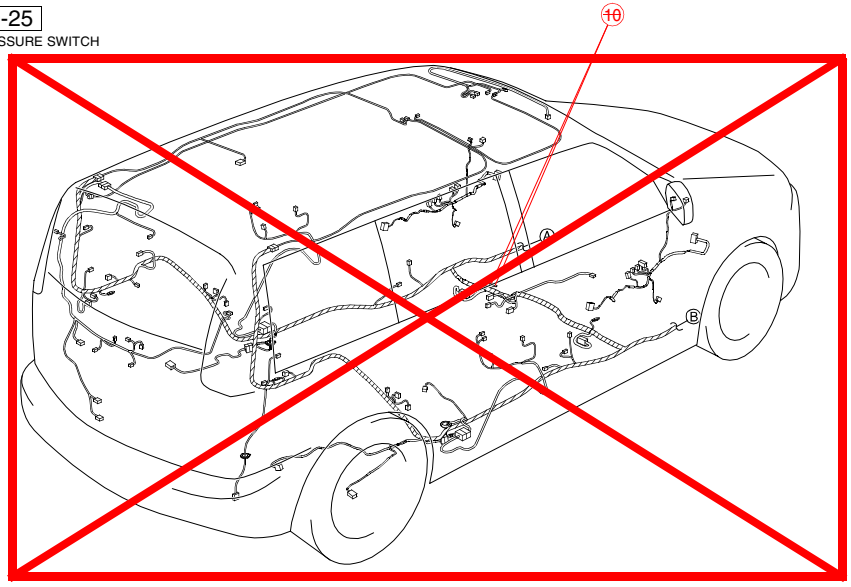
10
A
B
C
F


<~~>LF
*: VACANT

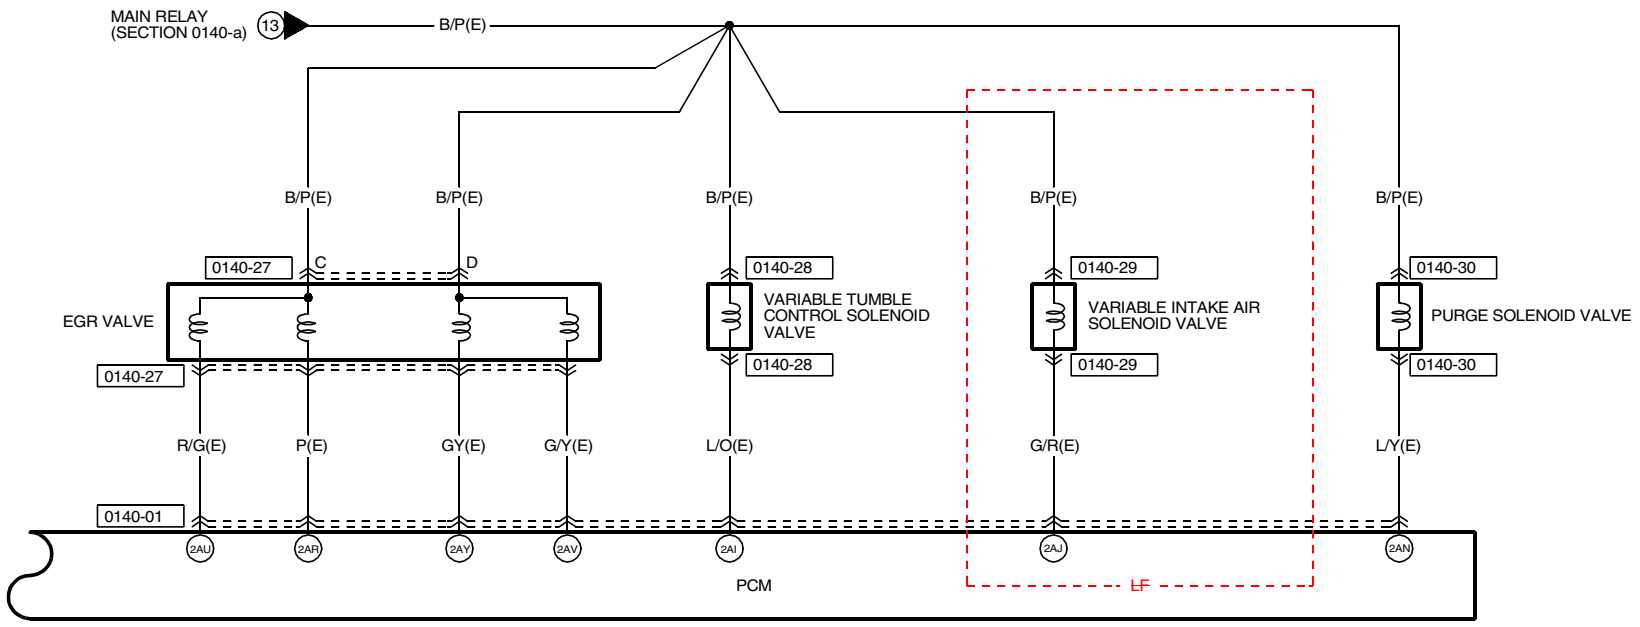


0140-01
PCM(E)

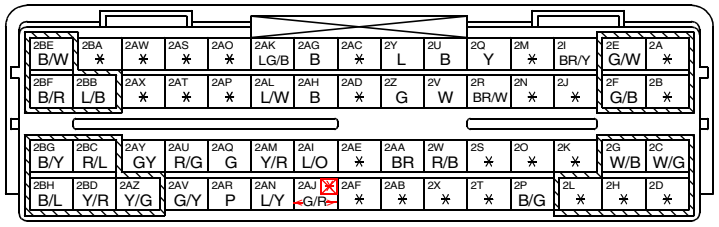


0140-27
EGR VALVE(E)

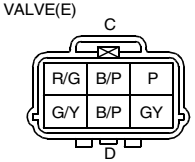

0140-28
VARIABLE TUMBLE CONTROL SOLENOID VALVE(E)





0140-29
VARIABLE INTAKE AIR SOLENOID VALVE(E)




~~(LF)~~

0140-30
PURGE SOLENOID VALVE(E)



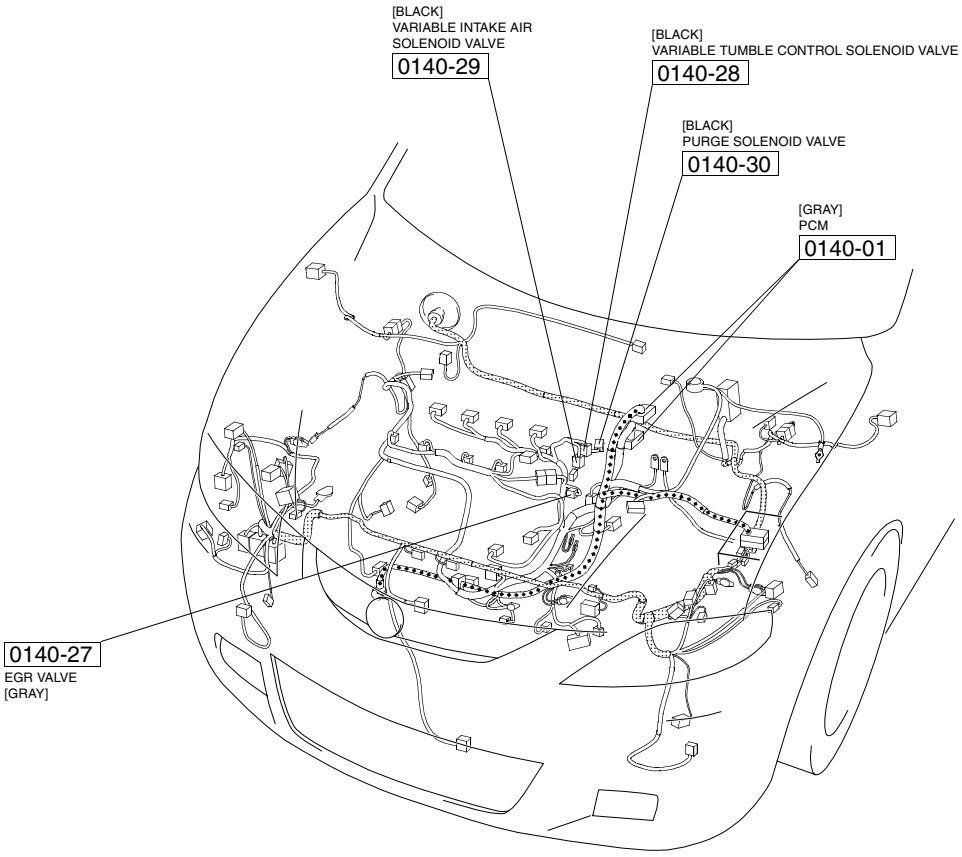
[BLACK]
VARIABLE INTAKE AIR
SOLENOID VALVE
0140-29
[BLACK]
VARIABLE TUMBLE CONTROL SOLENOID VALVE
0140-28
[BLACK]
PURGE SOLENOID VALVE
0140-30
[GRAY]
PCM
0140-01
0140-27
EGR VALVE
[GRAY]

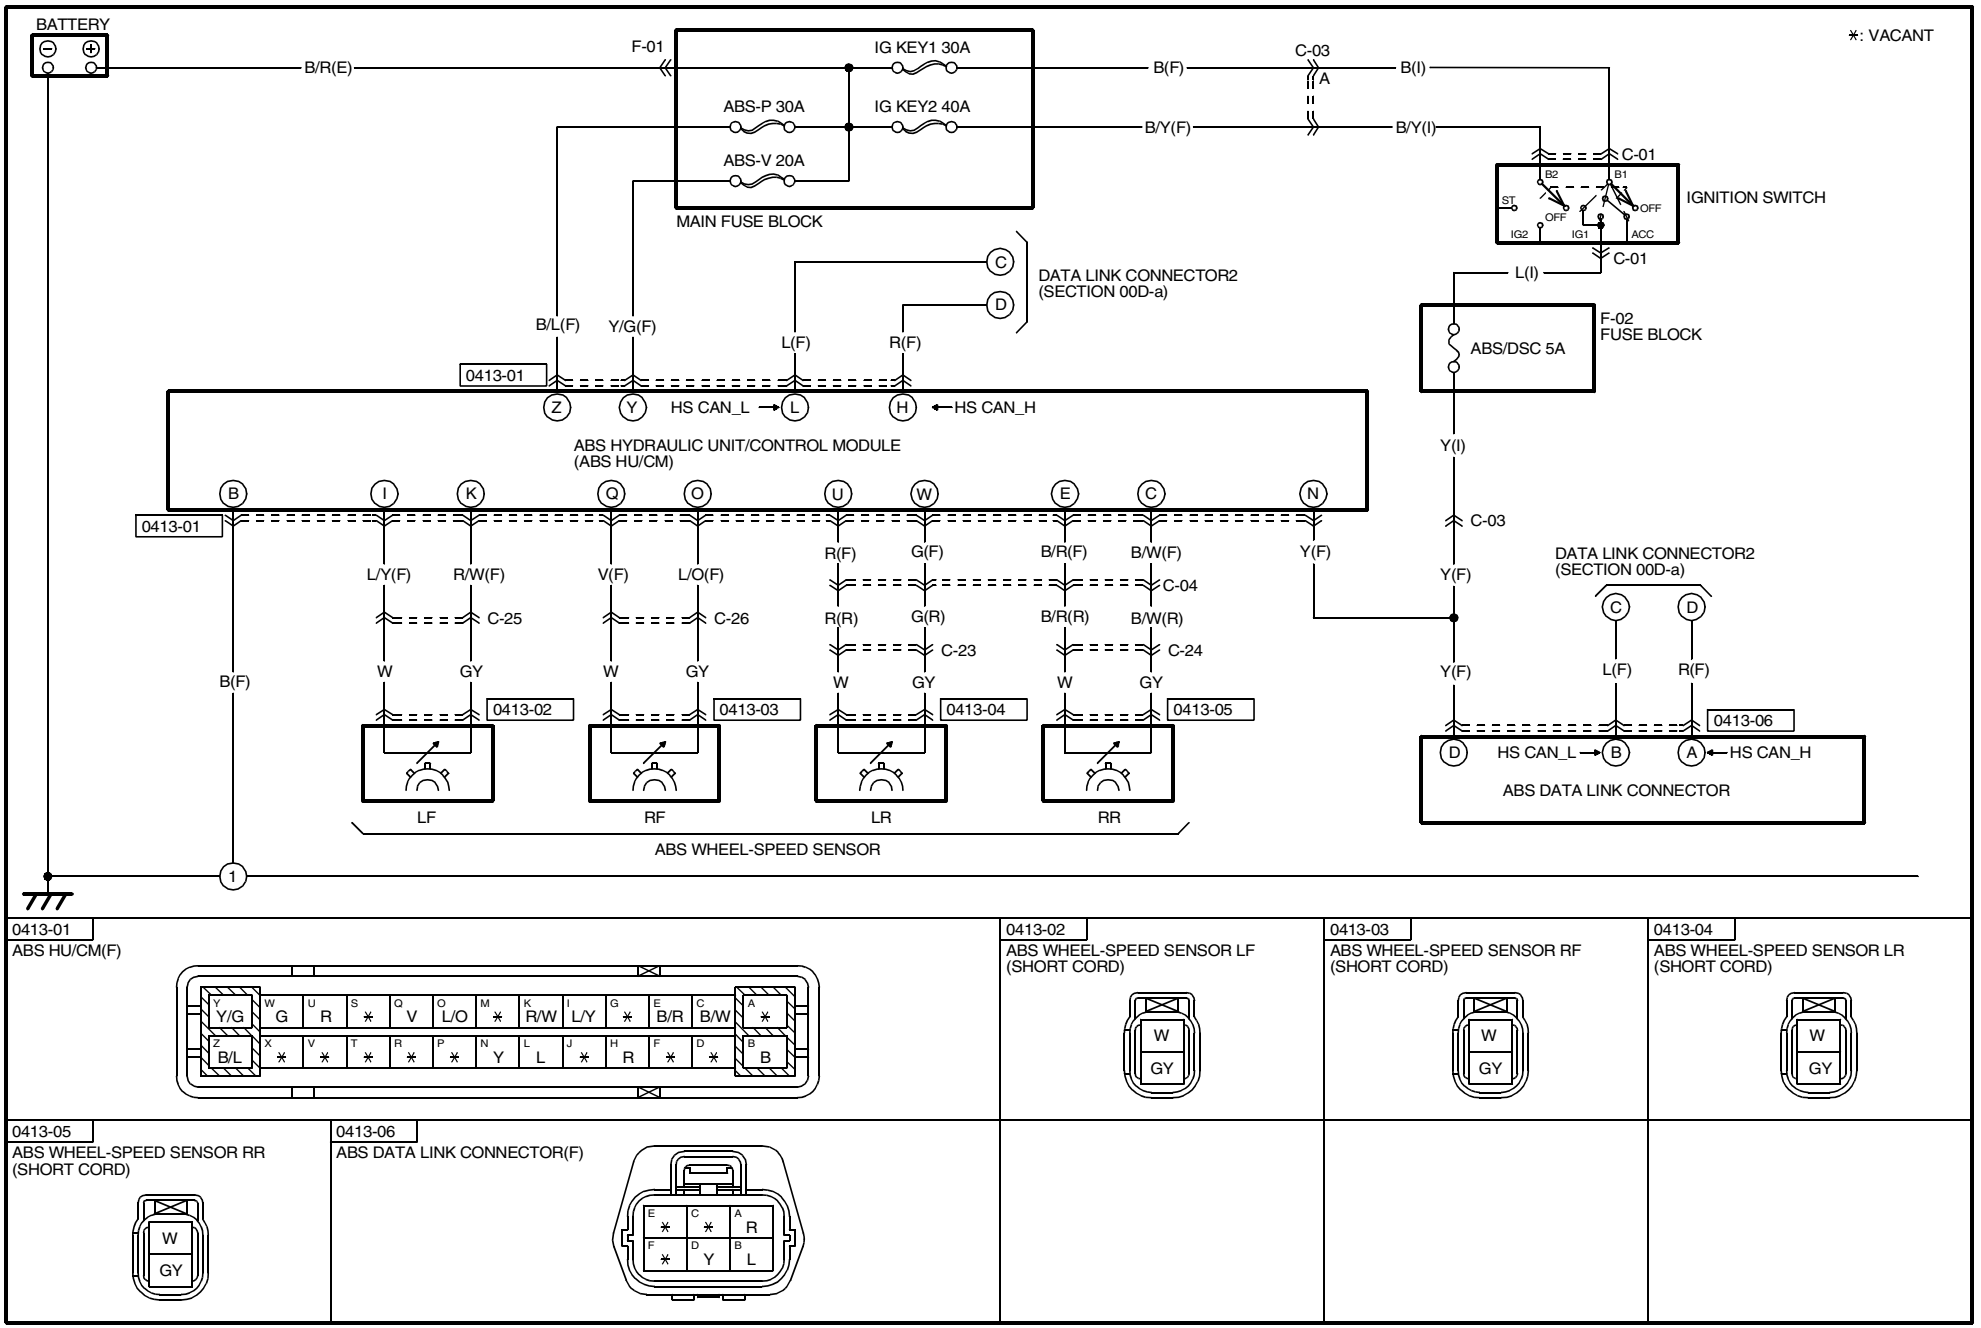

0413-01 ABS HU/CM(F)


0413-02 ABS WHEEL-SPEED SENSOR LF (SHORT CORD)

0413-03 ABS WHEEL-SPEED SENSOR RF (SHORT CORD)


0413-04 ABS WHEEL-SPEED SENSOR LR (SHORT CORD)

0413-05 ABS WHEEL-SPEED SENSOR RR (SHORT CORD)


0413-06 ABS DATA LINK CONNECTOR(F)

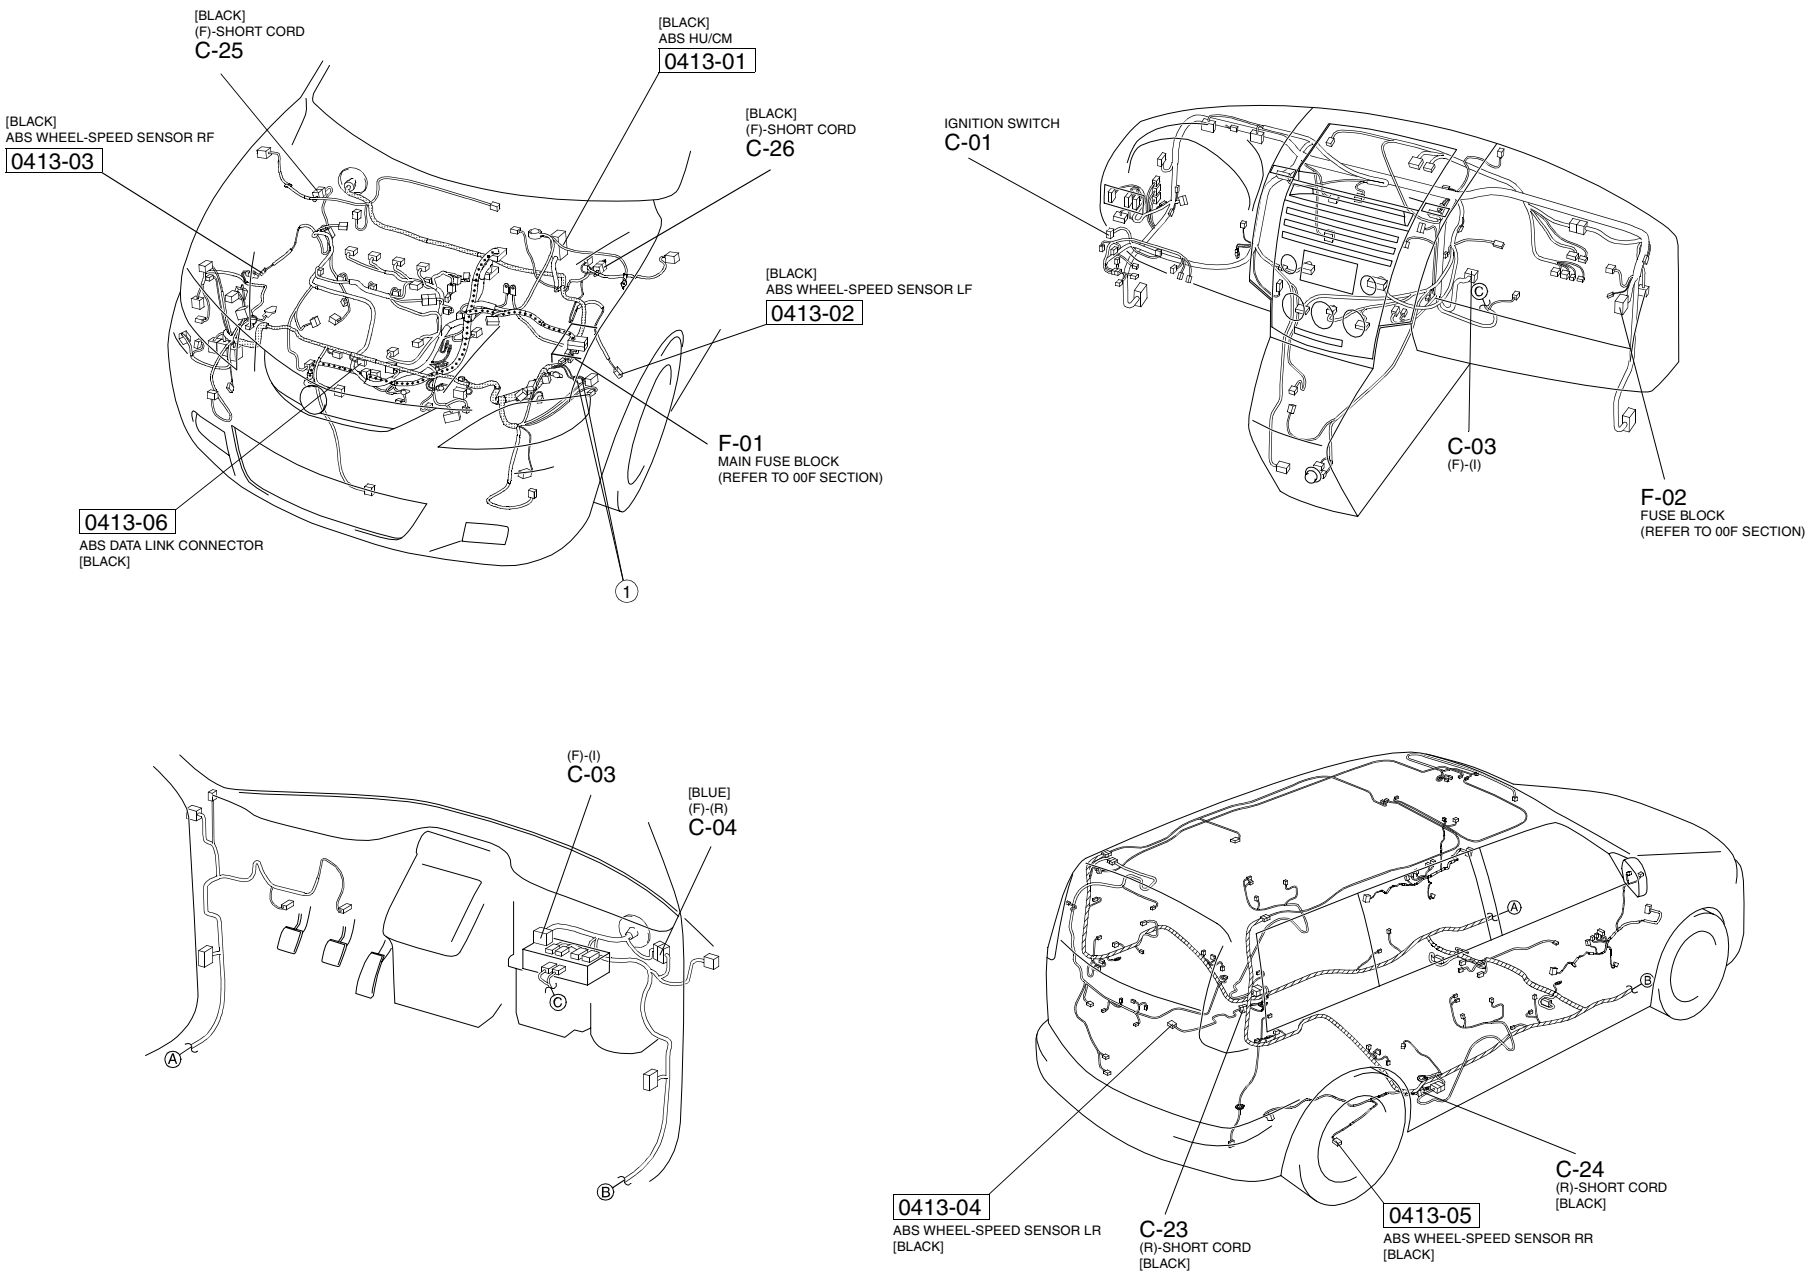
[BLACK]
(F)-SHORT CORD
C-25
[BLACK]
ABS HU/CM
0413-01
[BLACK]
ABS WHEEL-SPEED SENSOR RF
0413-03
[BLACK]
(F)-SHORT CORD
C-26
[BLACK]
ABS WHEEL-SPEED SENSOR LF
0413-02
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0413-06
ABS DATA LINK CONNECTOR
[BLACK]
1
IGNITION SWITCH
C-01
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
(F)-(I)
C-03
[BLUE]
(F)-(R)
C-04
A
B
C
0413-04
ABS WHEEL-SPEED SENSOR LR
[BLACK]
C-23
(R)-SHORT CORD
[BLACK]
0413-05
ABS WHEEL-SPEED SENSOR RR
[BLACK]
C-24
(R)-SHORT CORD
[BLACK]


DYNAMIC STABILITY CONTROL (DSC)

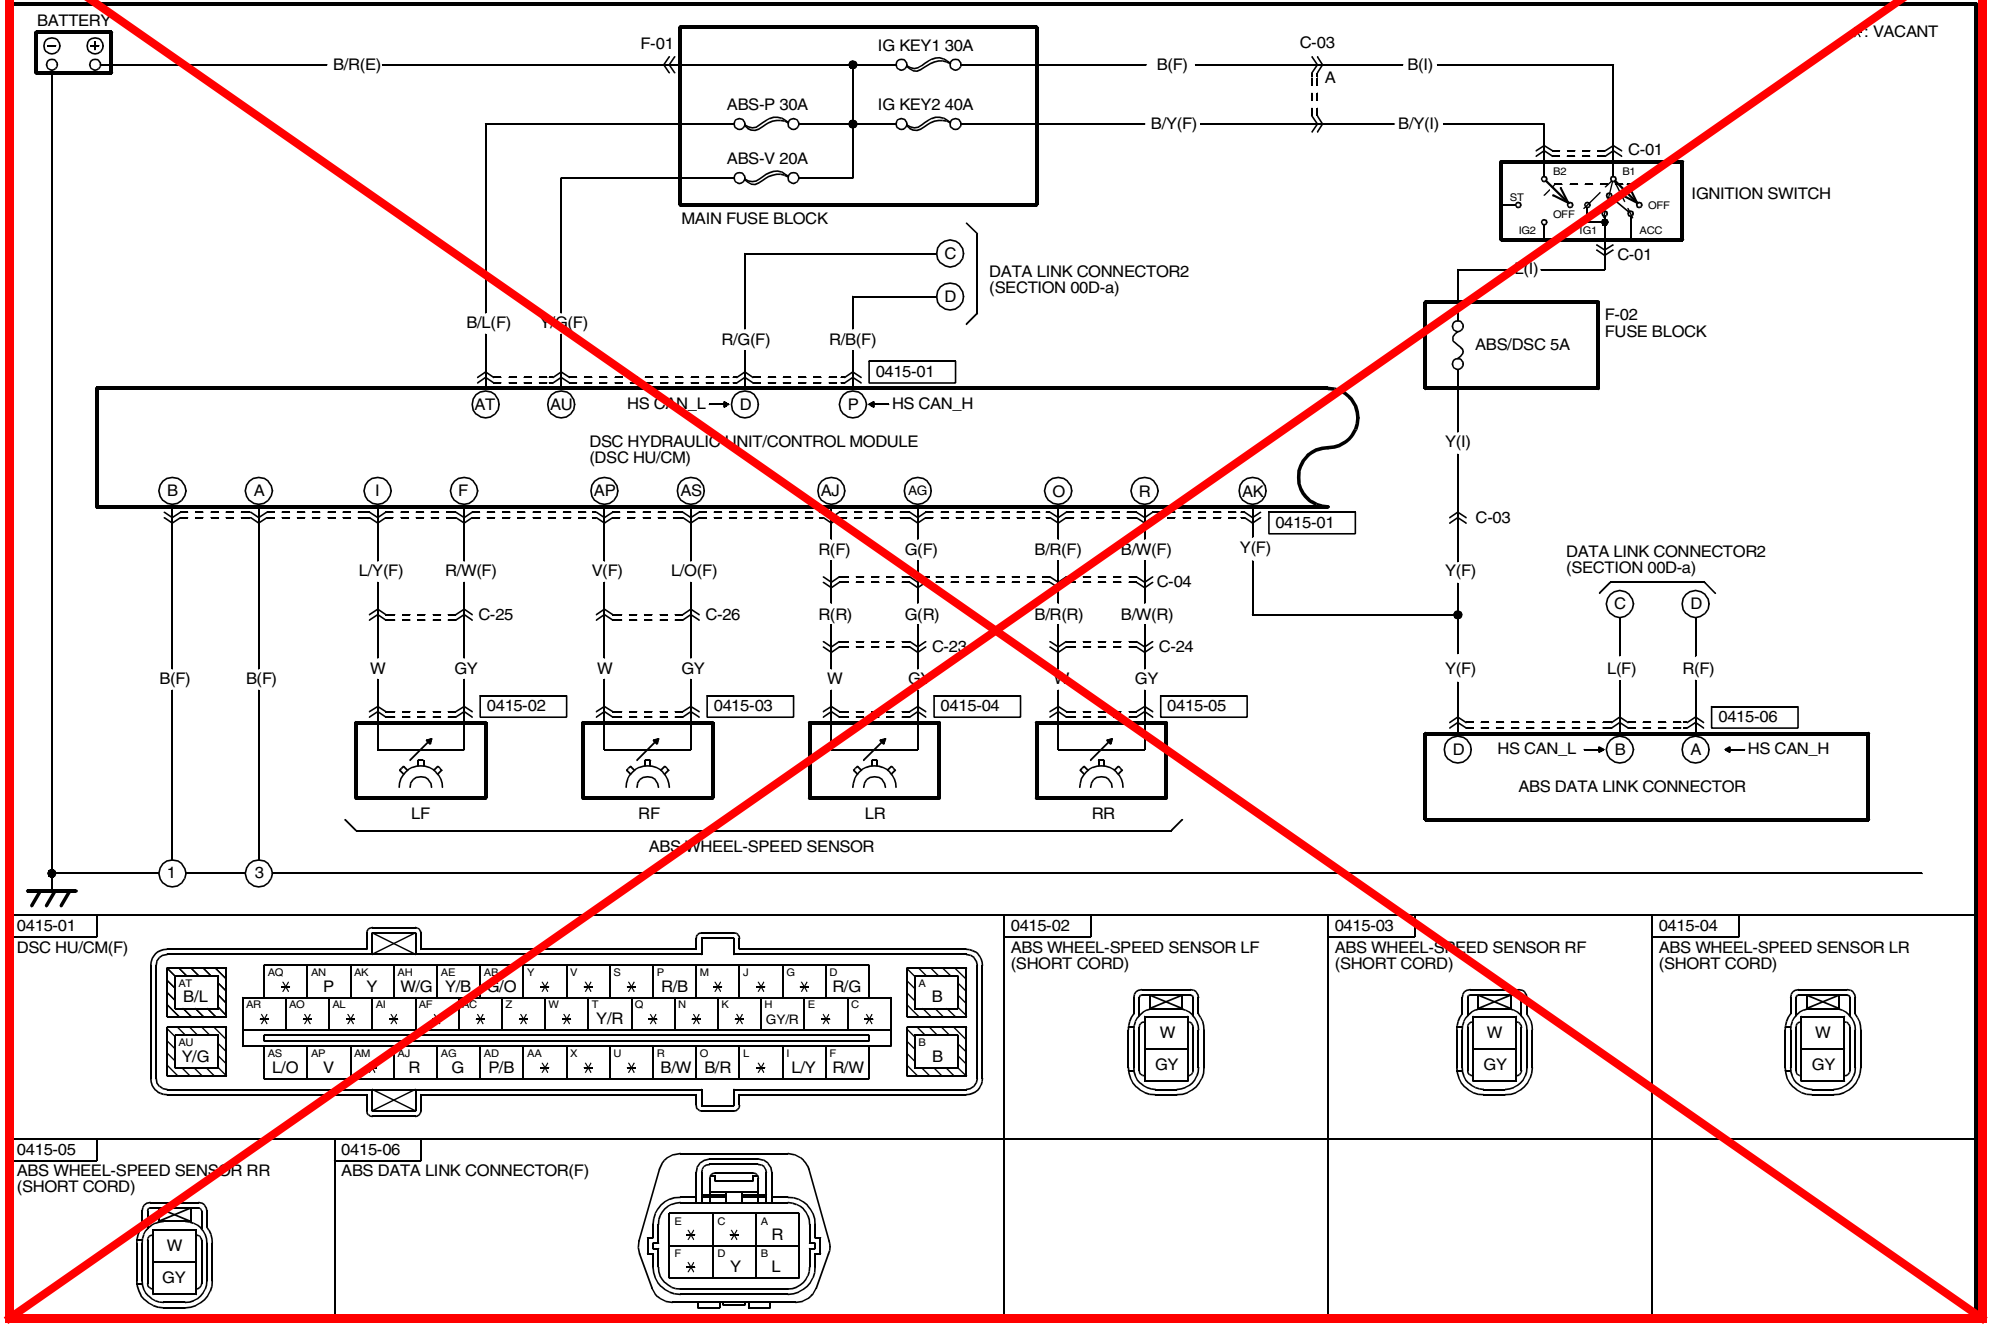


HARNESS SYMBOL : (F) (E) (R)

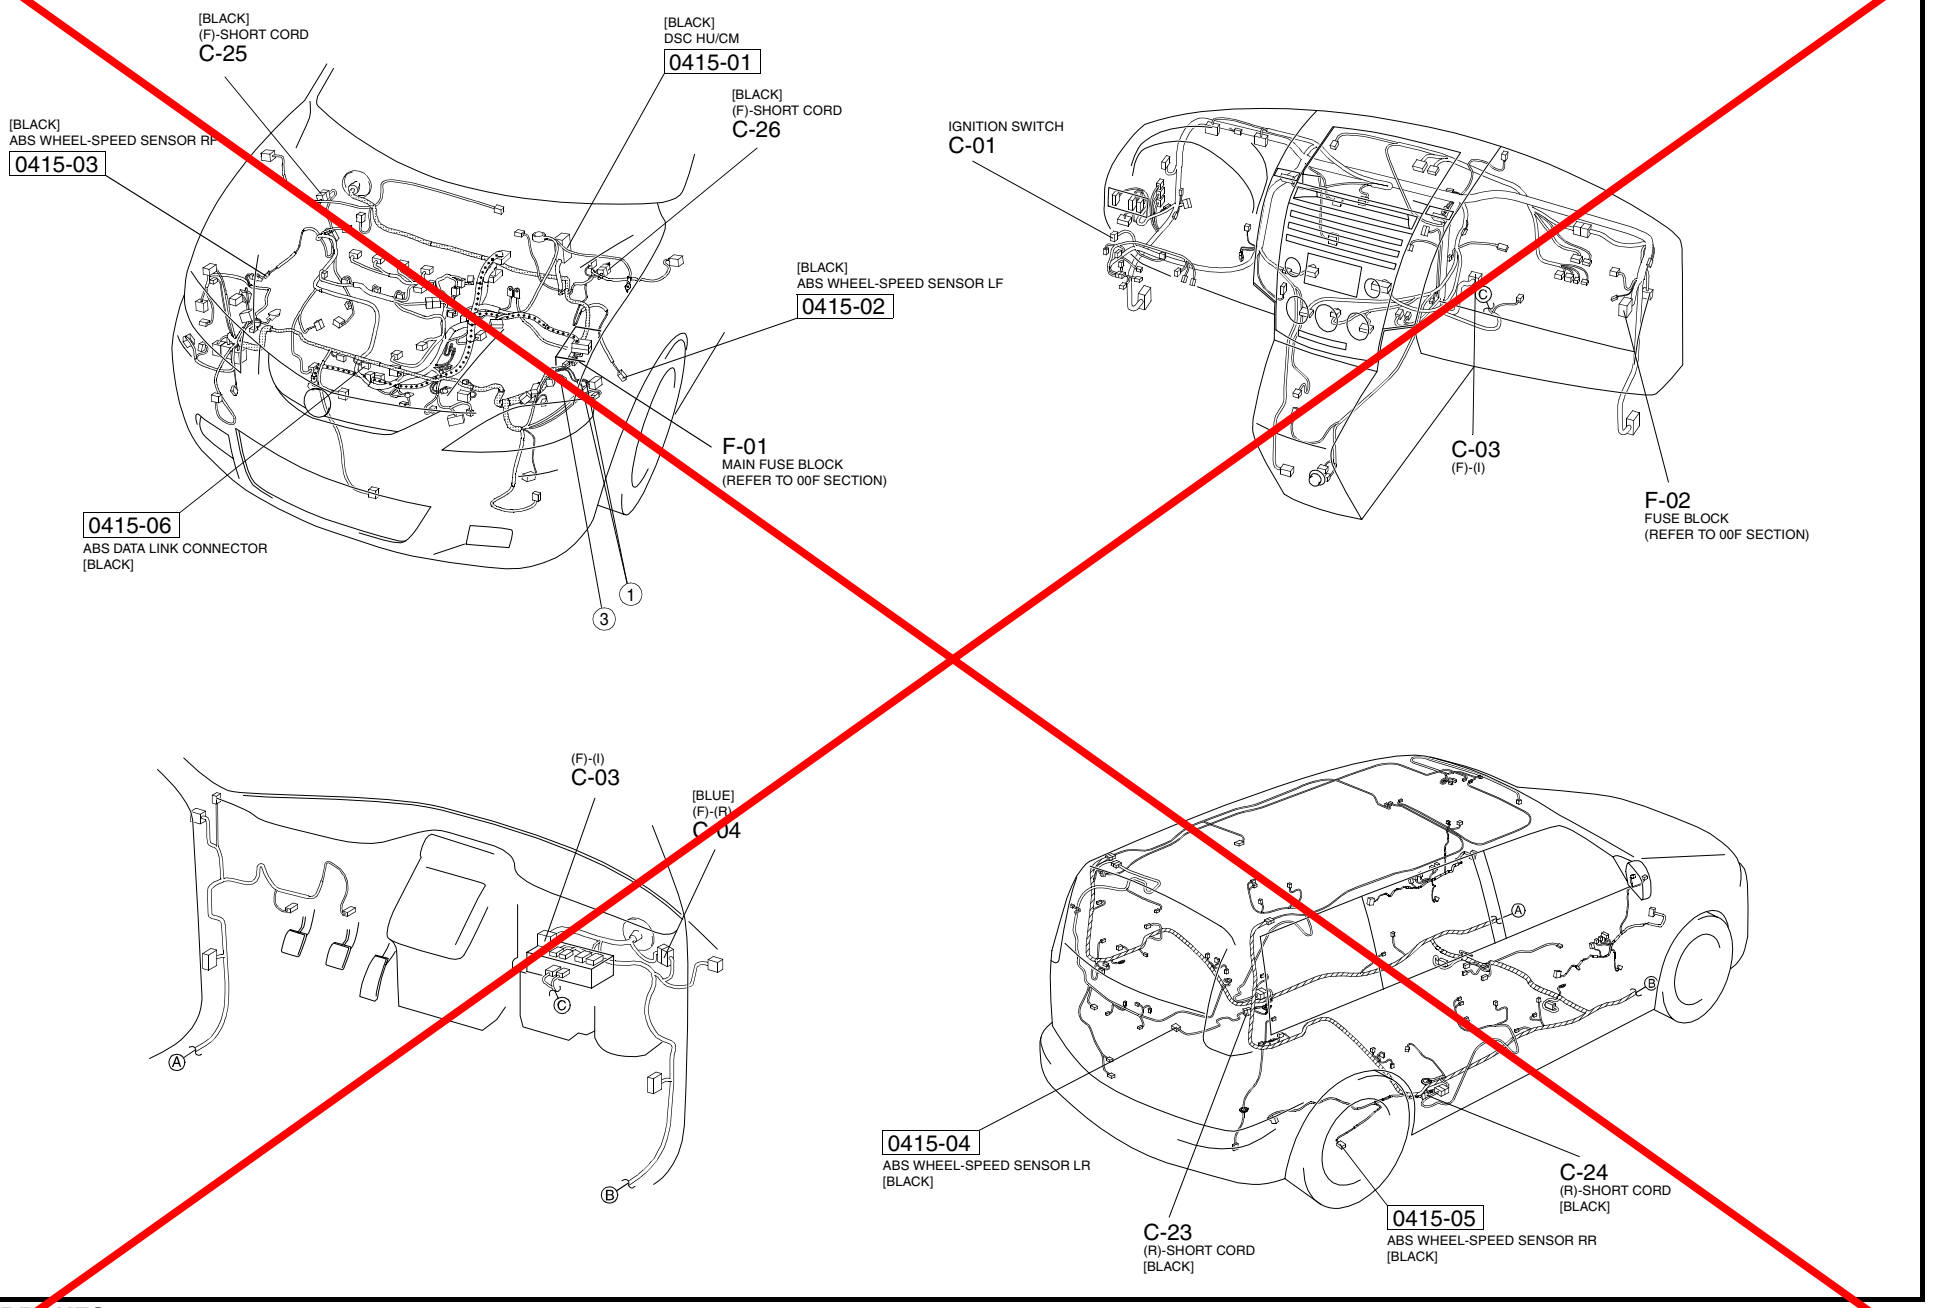


V: VACANT

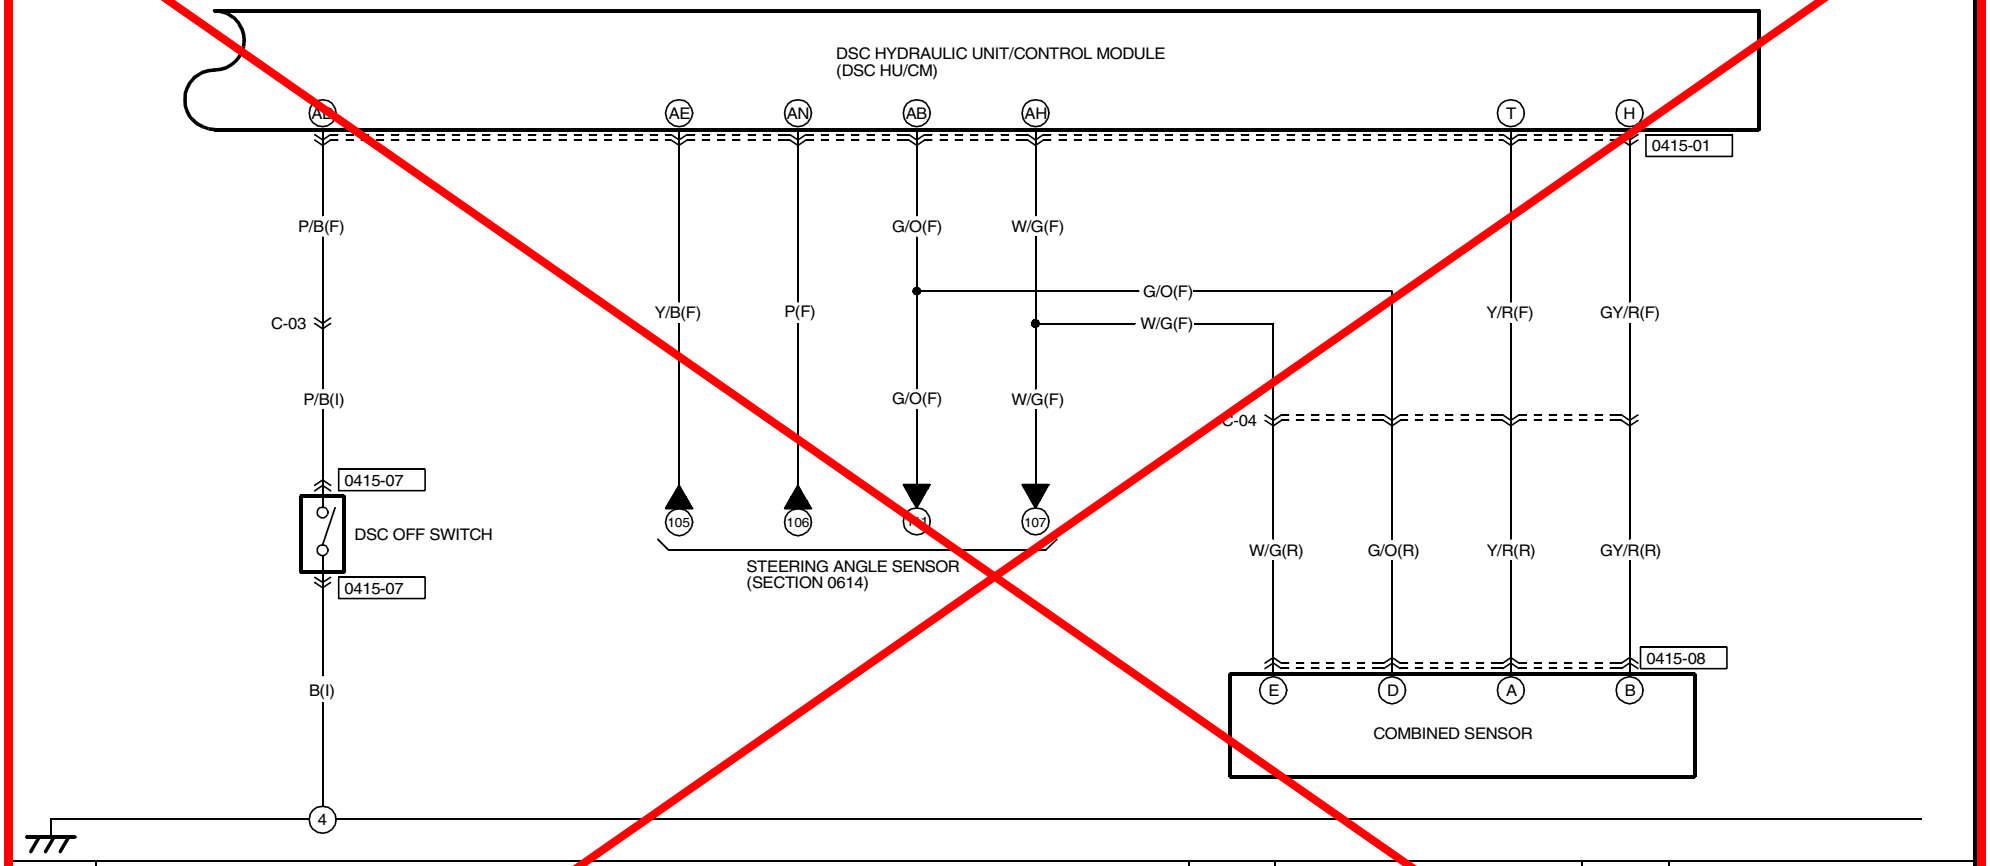


0415-01
DSC HU/CM(F)

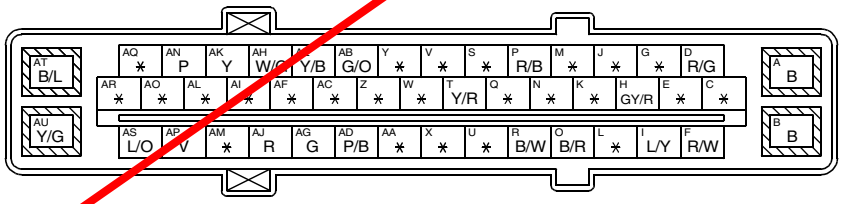


0415-07
DSC OFF SWITCH(I)





0415-08
COMBINED SENSOR(R)

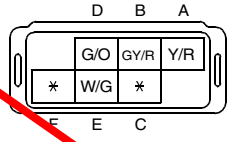


HARNESS SYMBOL : (F) (E) (R)

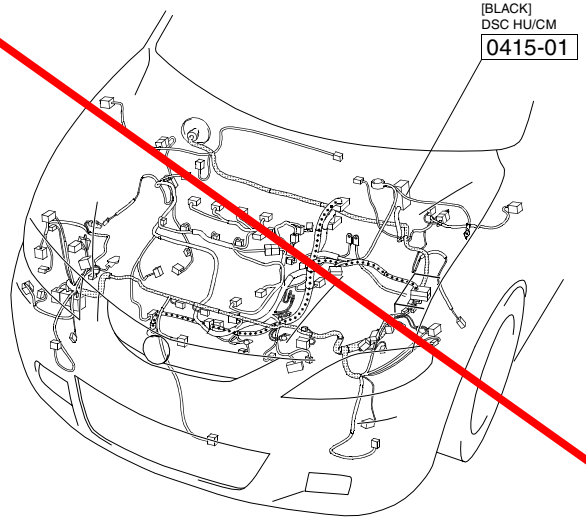

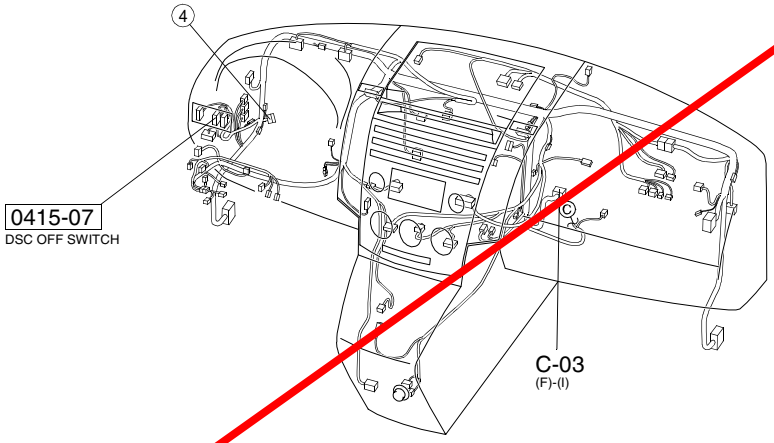


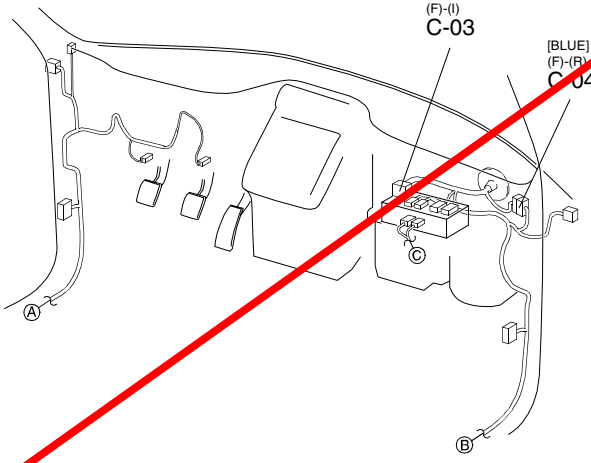

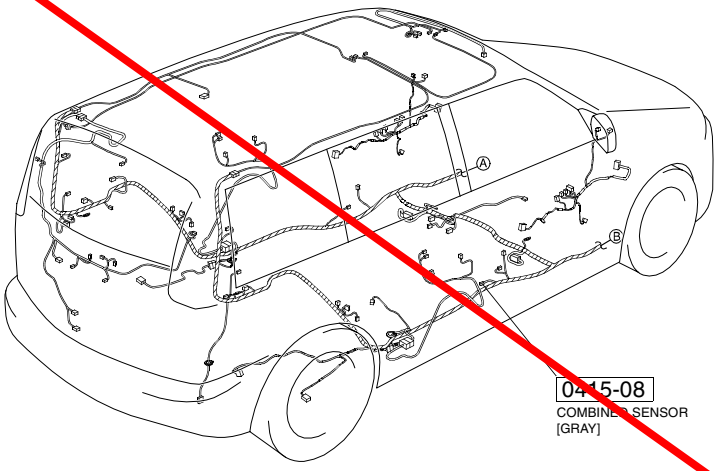


67


KEY INTERLOCK SYSTEM/SHIFT-LOCK SYSTEM

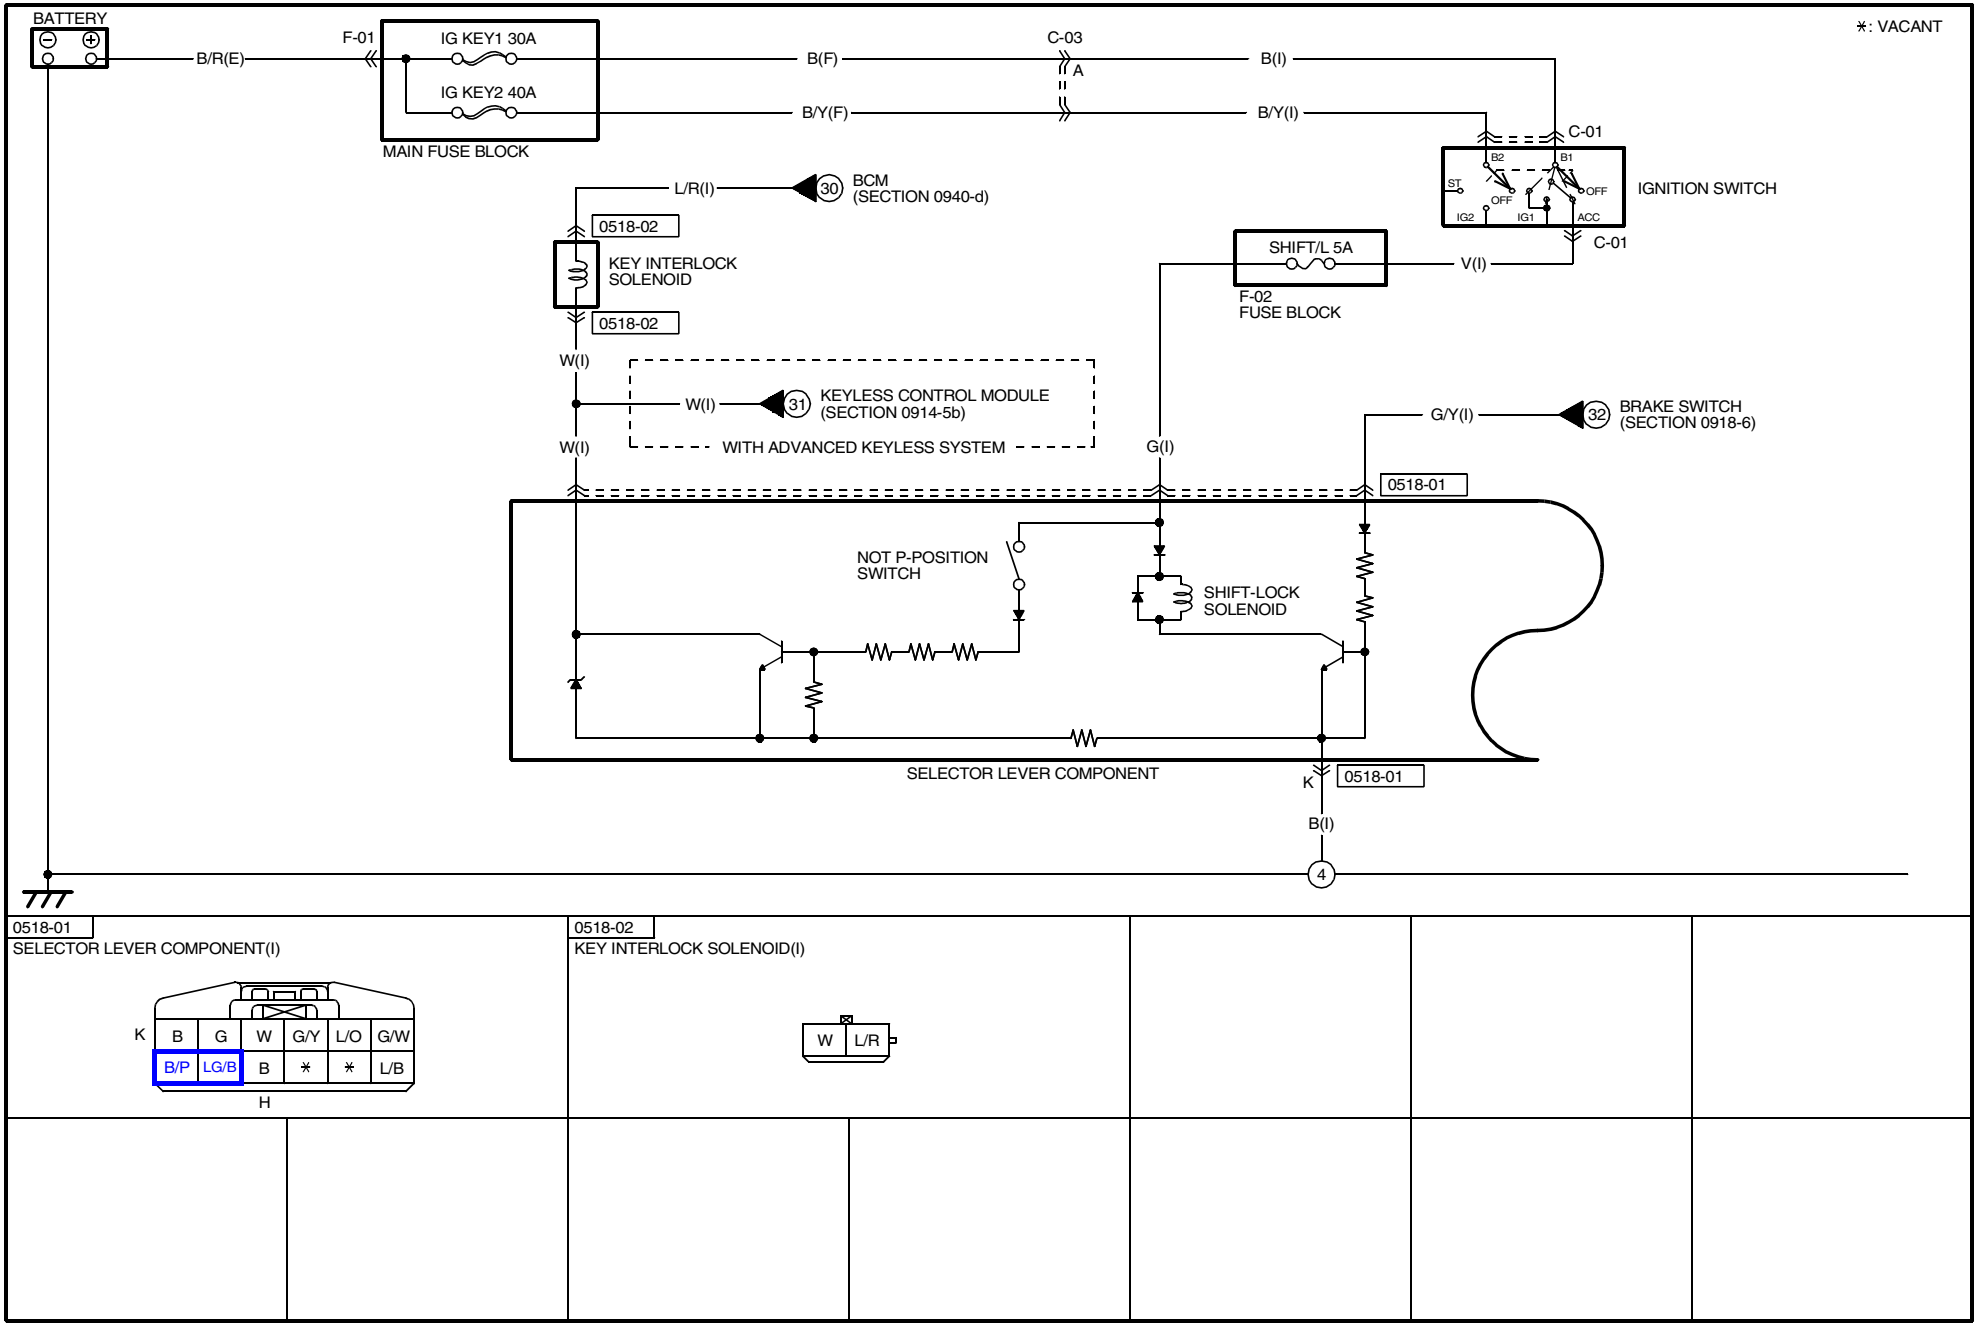


0518-01
SELECTOR LEVER COMPONENT(I)


0518-02
KEY INTERLOCK SOLENOID(I)

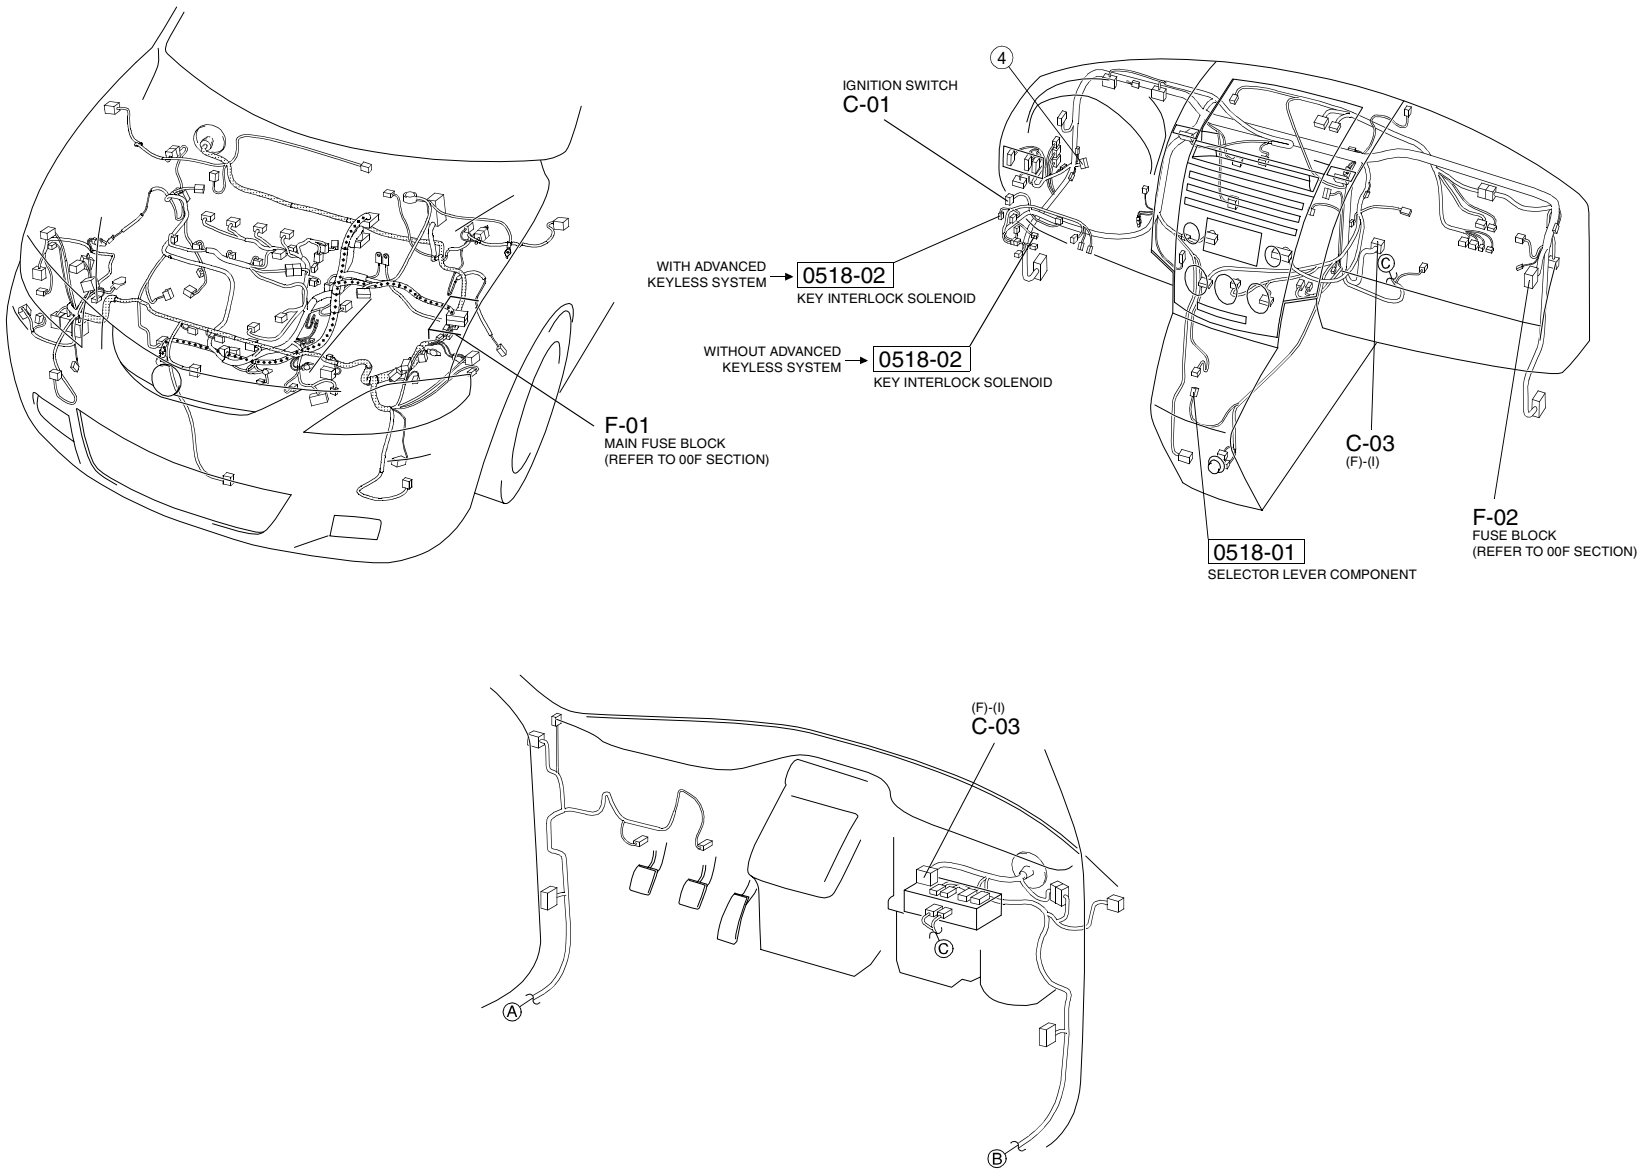

IGNITION SWITCH
C-01
4
WITH ADVANCED KEYLESS SYSTEM
0518-02
KEY INTERLOCK SOLENOID
WITHOUT ADVANCED KEYLESS SYSTEM
0518-02
KEY INTERLOCK SOLENOID
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
0518-01
SELECTOR LEVER COMPONENT
(F)-(I)
C-03
A
B
C

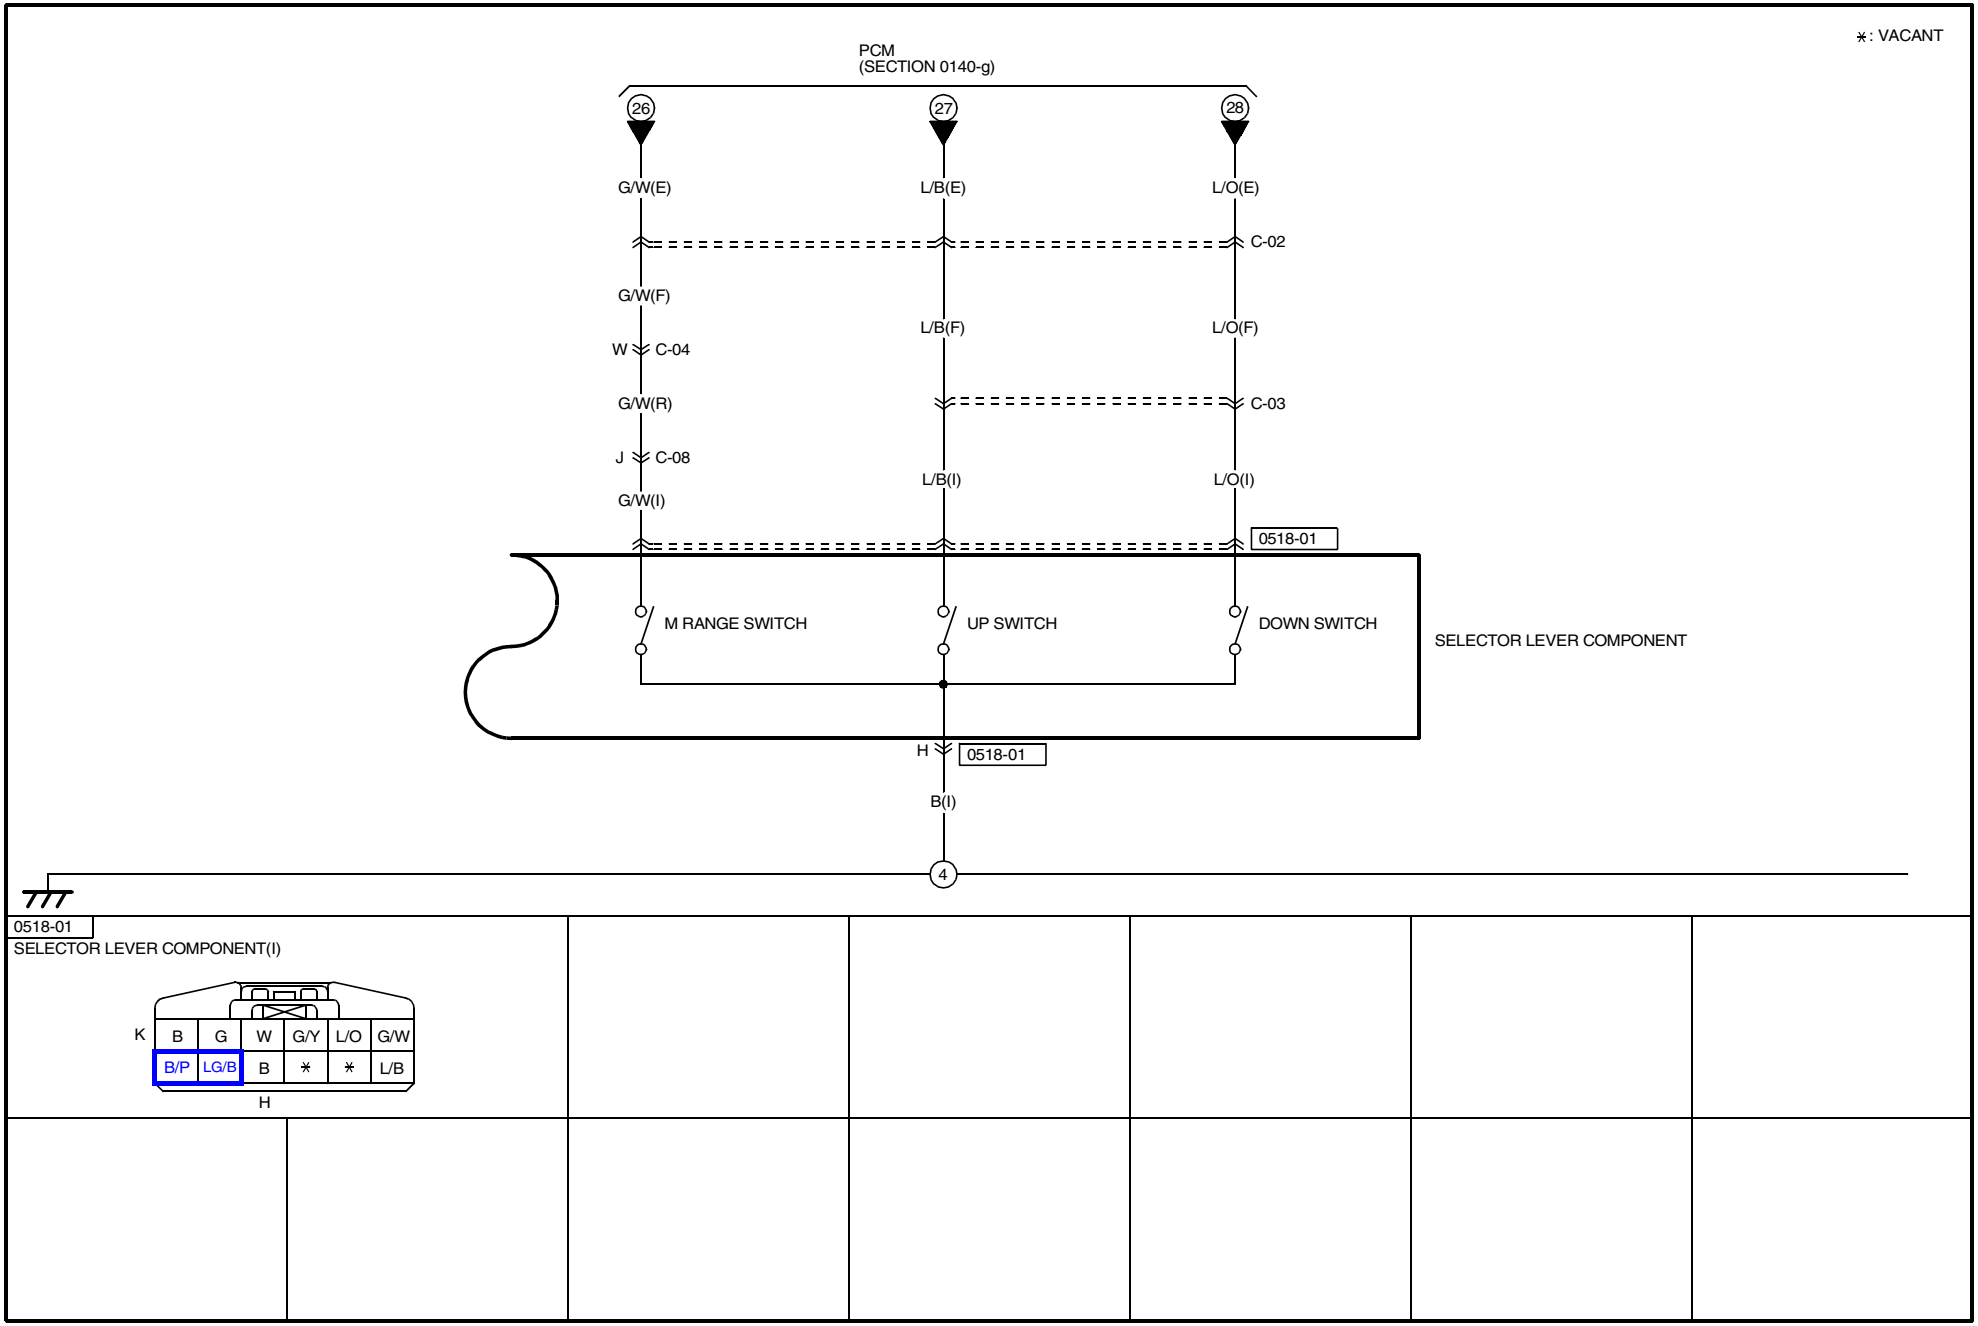


0518-01
SELECTOR LEVER COMPONENT(I)

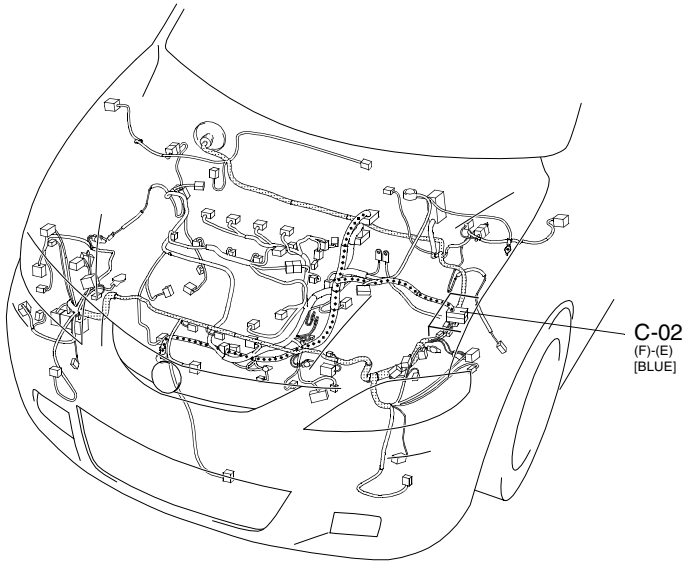
C-02
(F)-(E)
[BLUE]

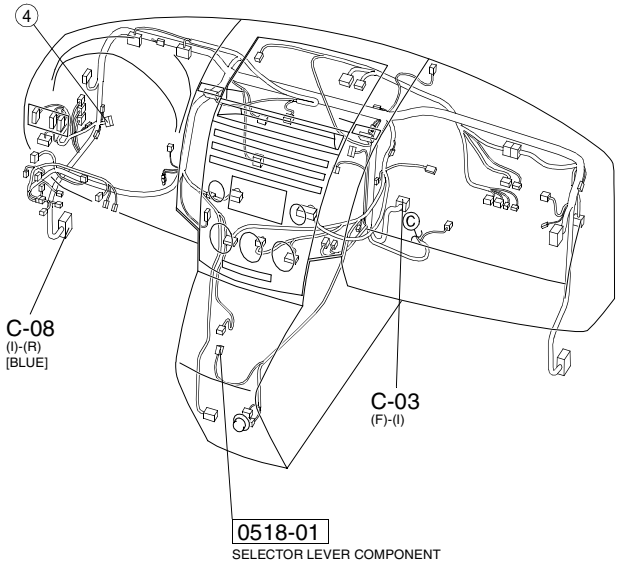
4
C-08
(I)-(R)
[BLUE]
C
C-03
(F)-(I)
0518-01
SELECTOR LEVER COMPONENT

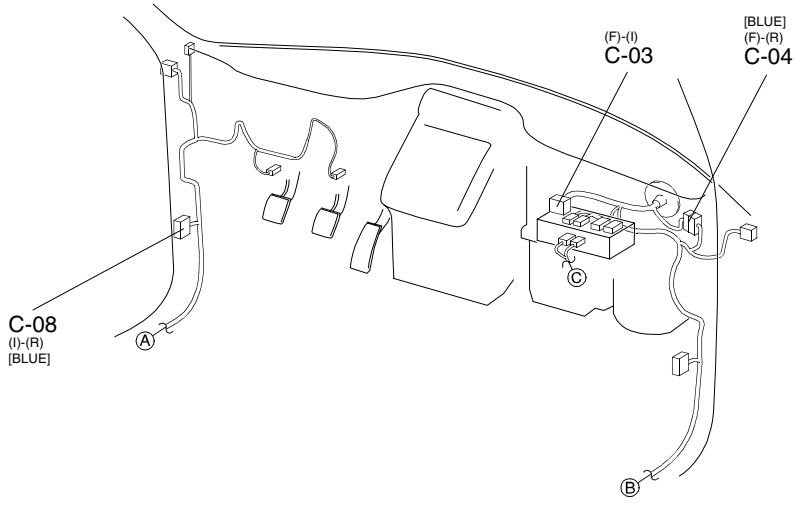

(F)-(I)
C-03
[BLUE]
(F)-(R)
C-04
C
C-08
(I)-(R)
[BLUE]
A
B

ELECTRO HYDRAULIC POWER ASSIST STEERING (EHPAS) SYSTEM

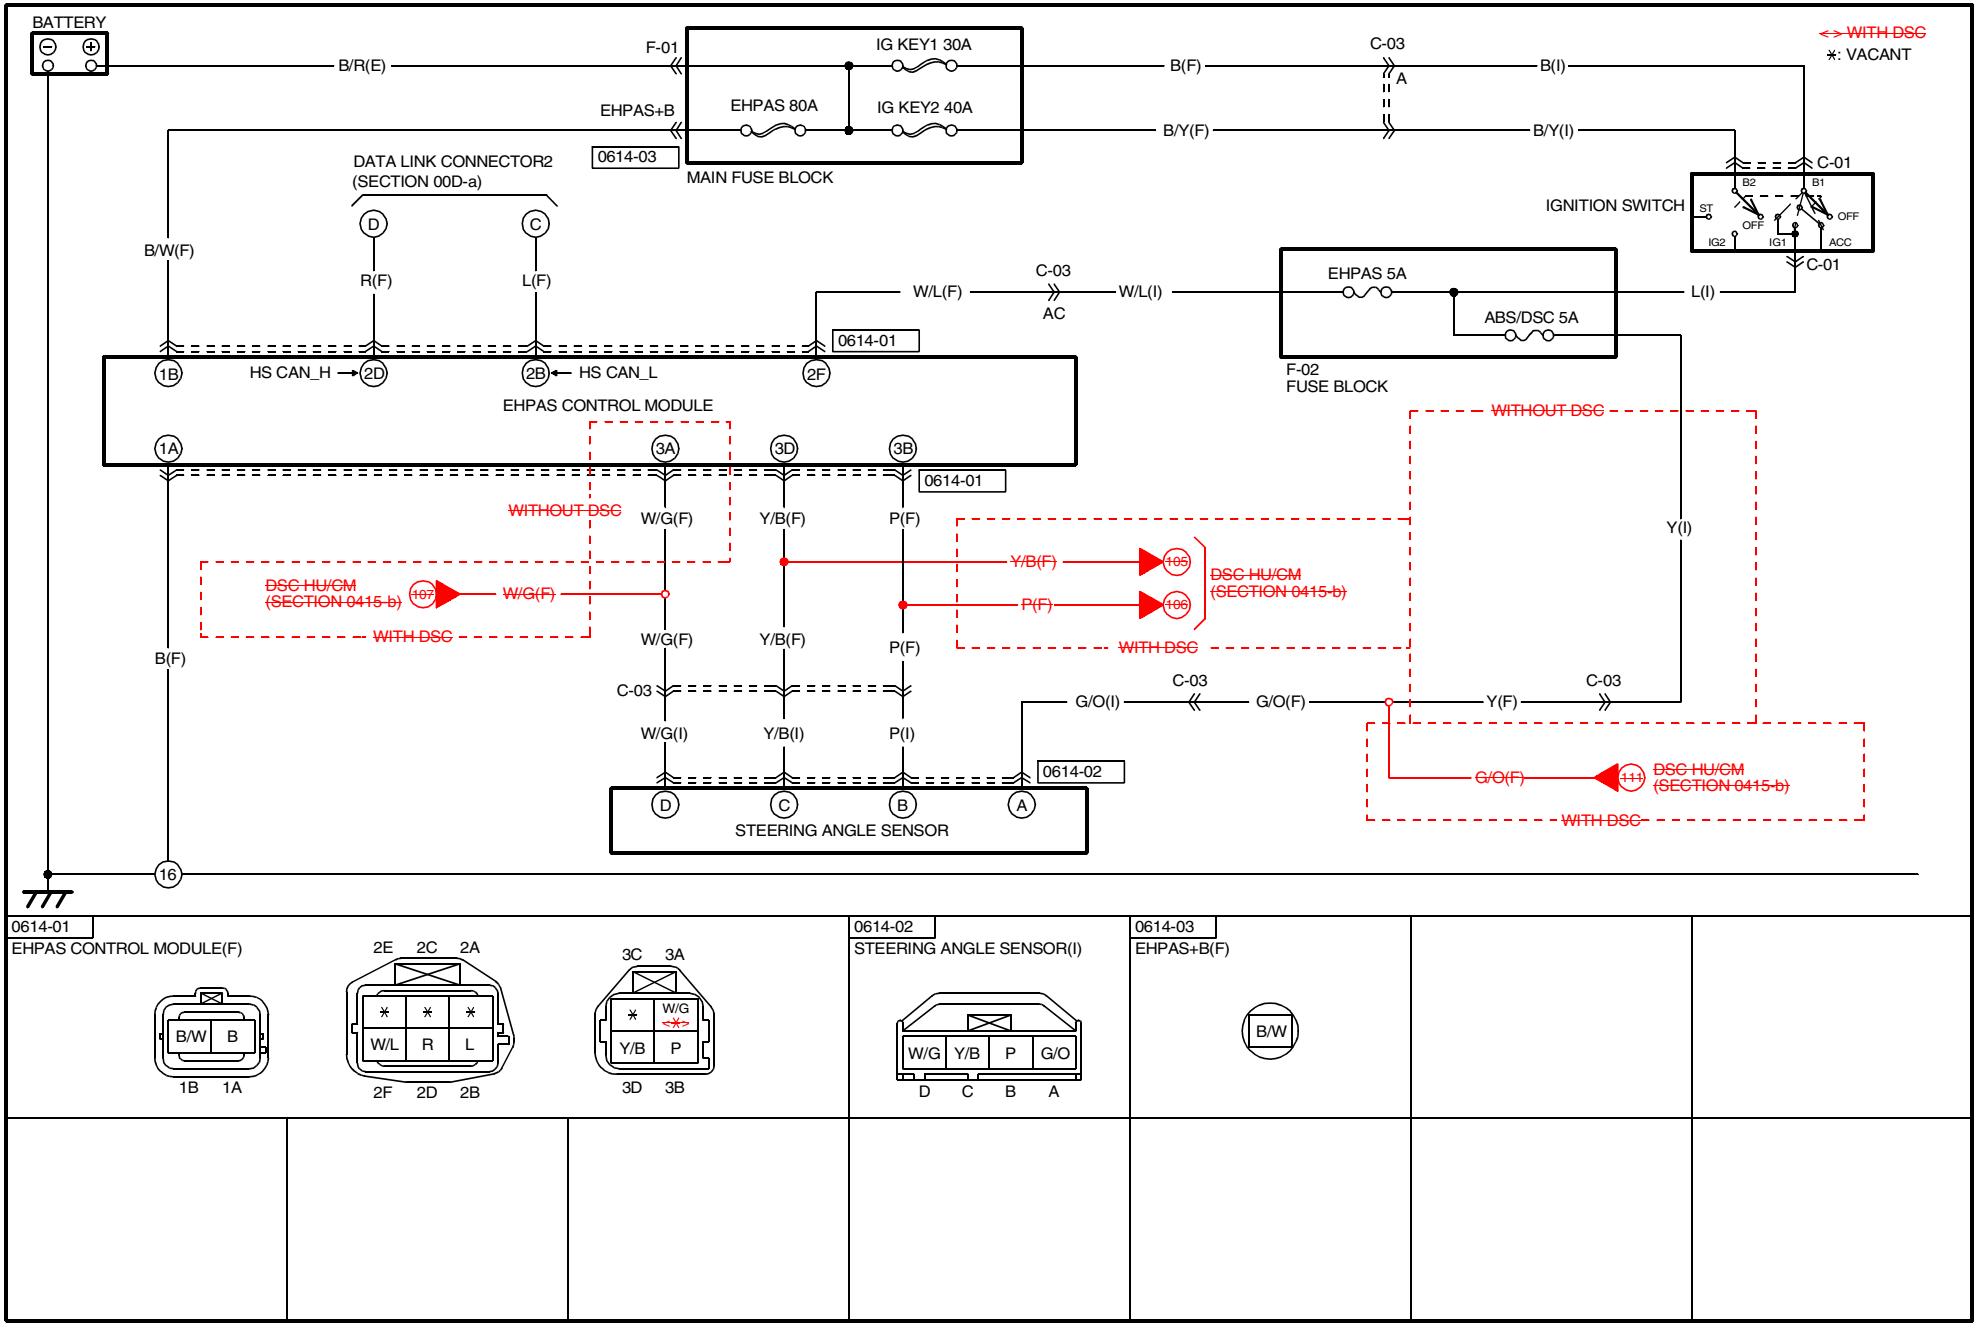


0614-01 EHPAS CONTROL MODULE(F)	0614-02 STEERING ANGLE SENSOR(I)	0614-03 EHPAS+B(F)			

HARNESS SYMBOL : (F) (E) (R)

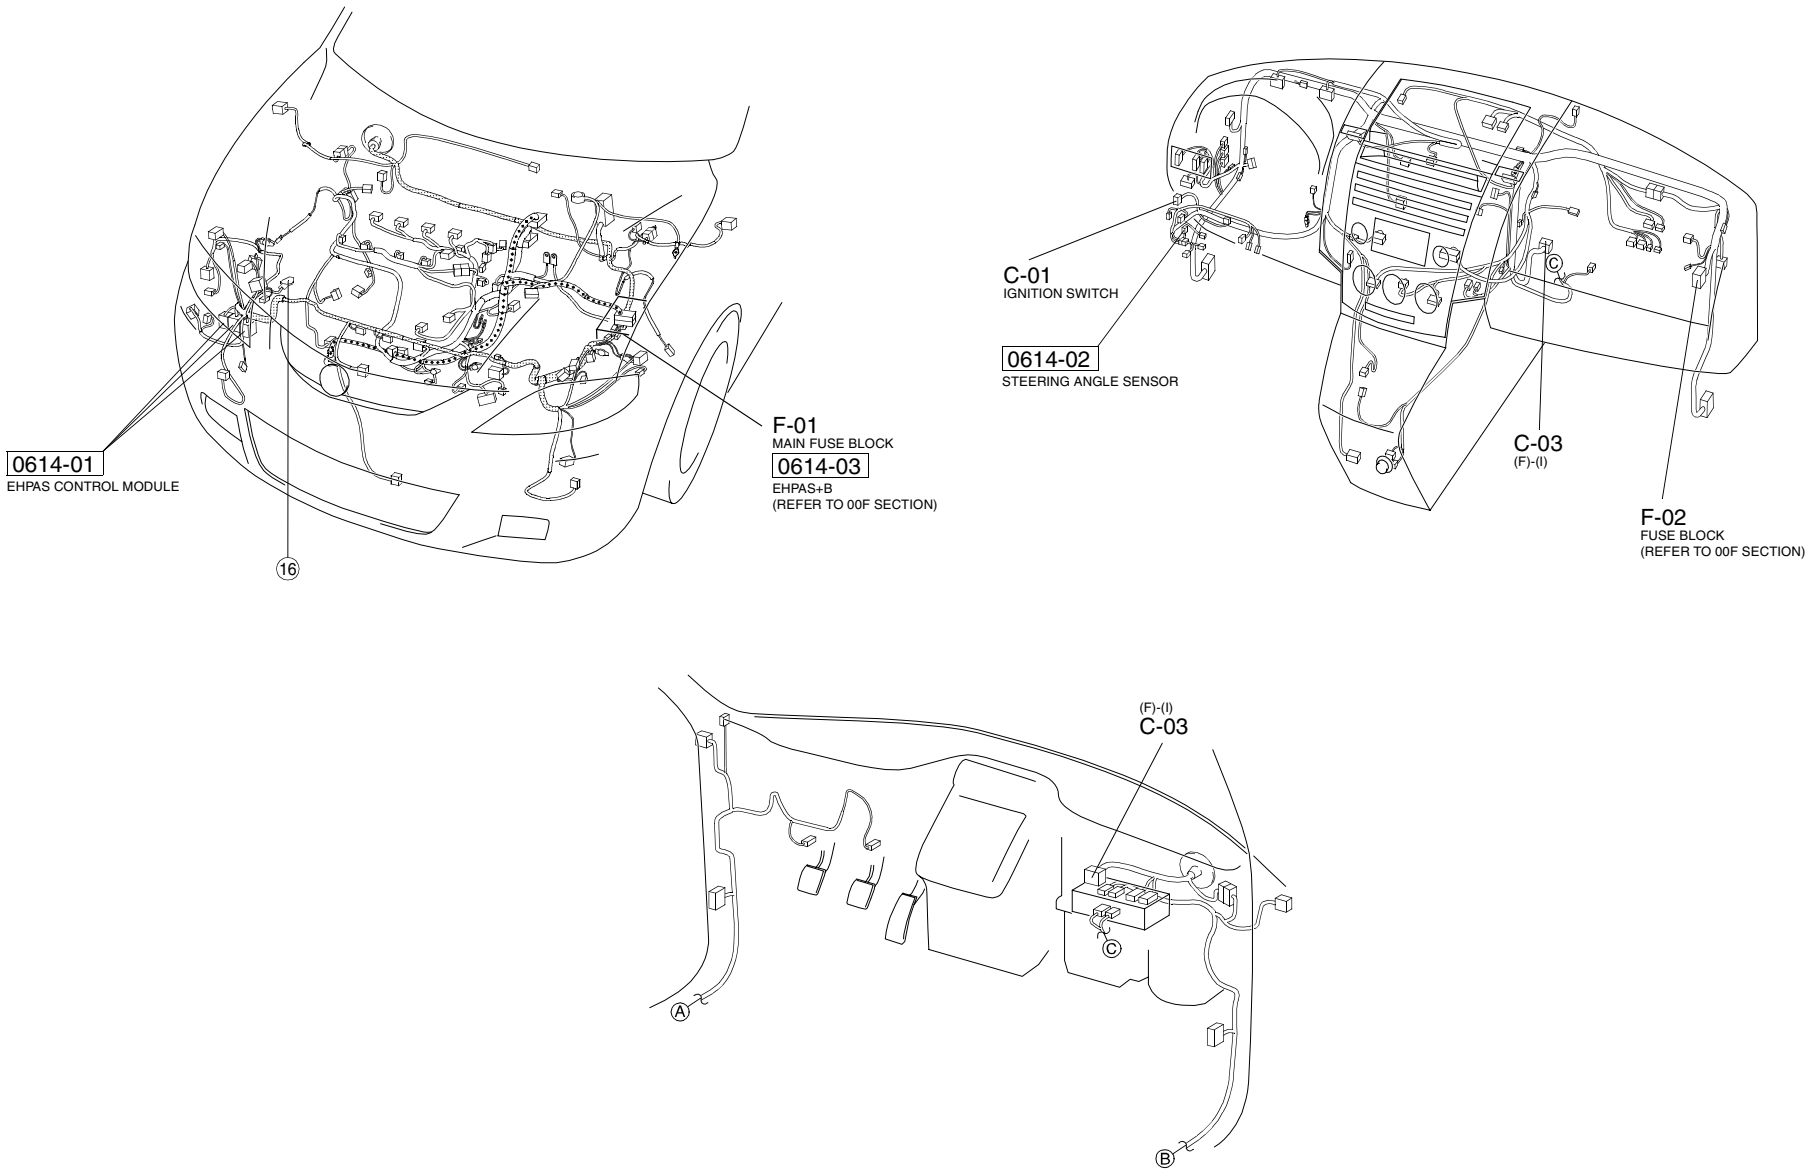

HEATER AND AIR CONDITIONER SYSTEM (AUTO A/C)

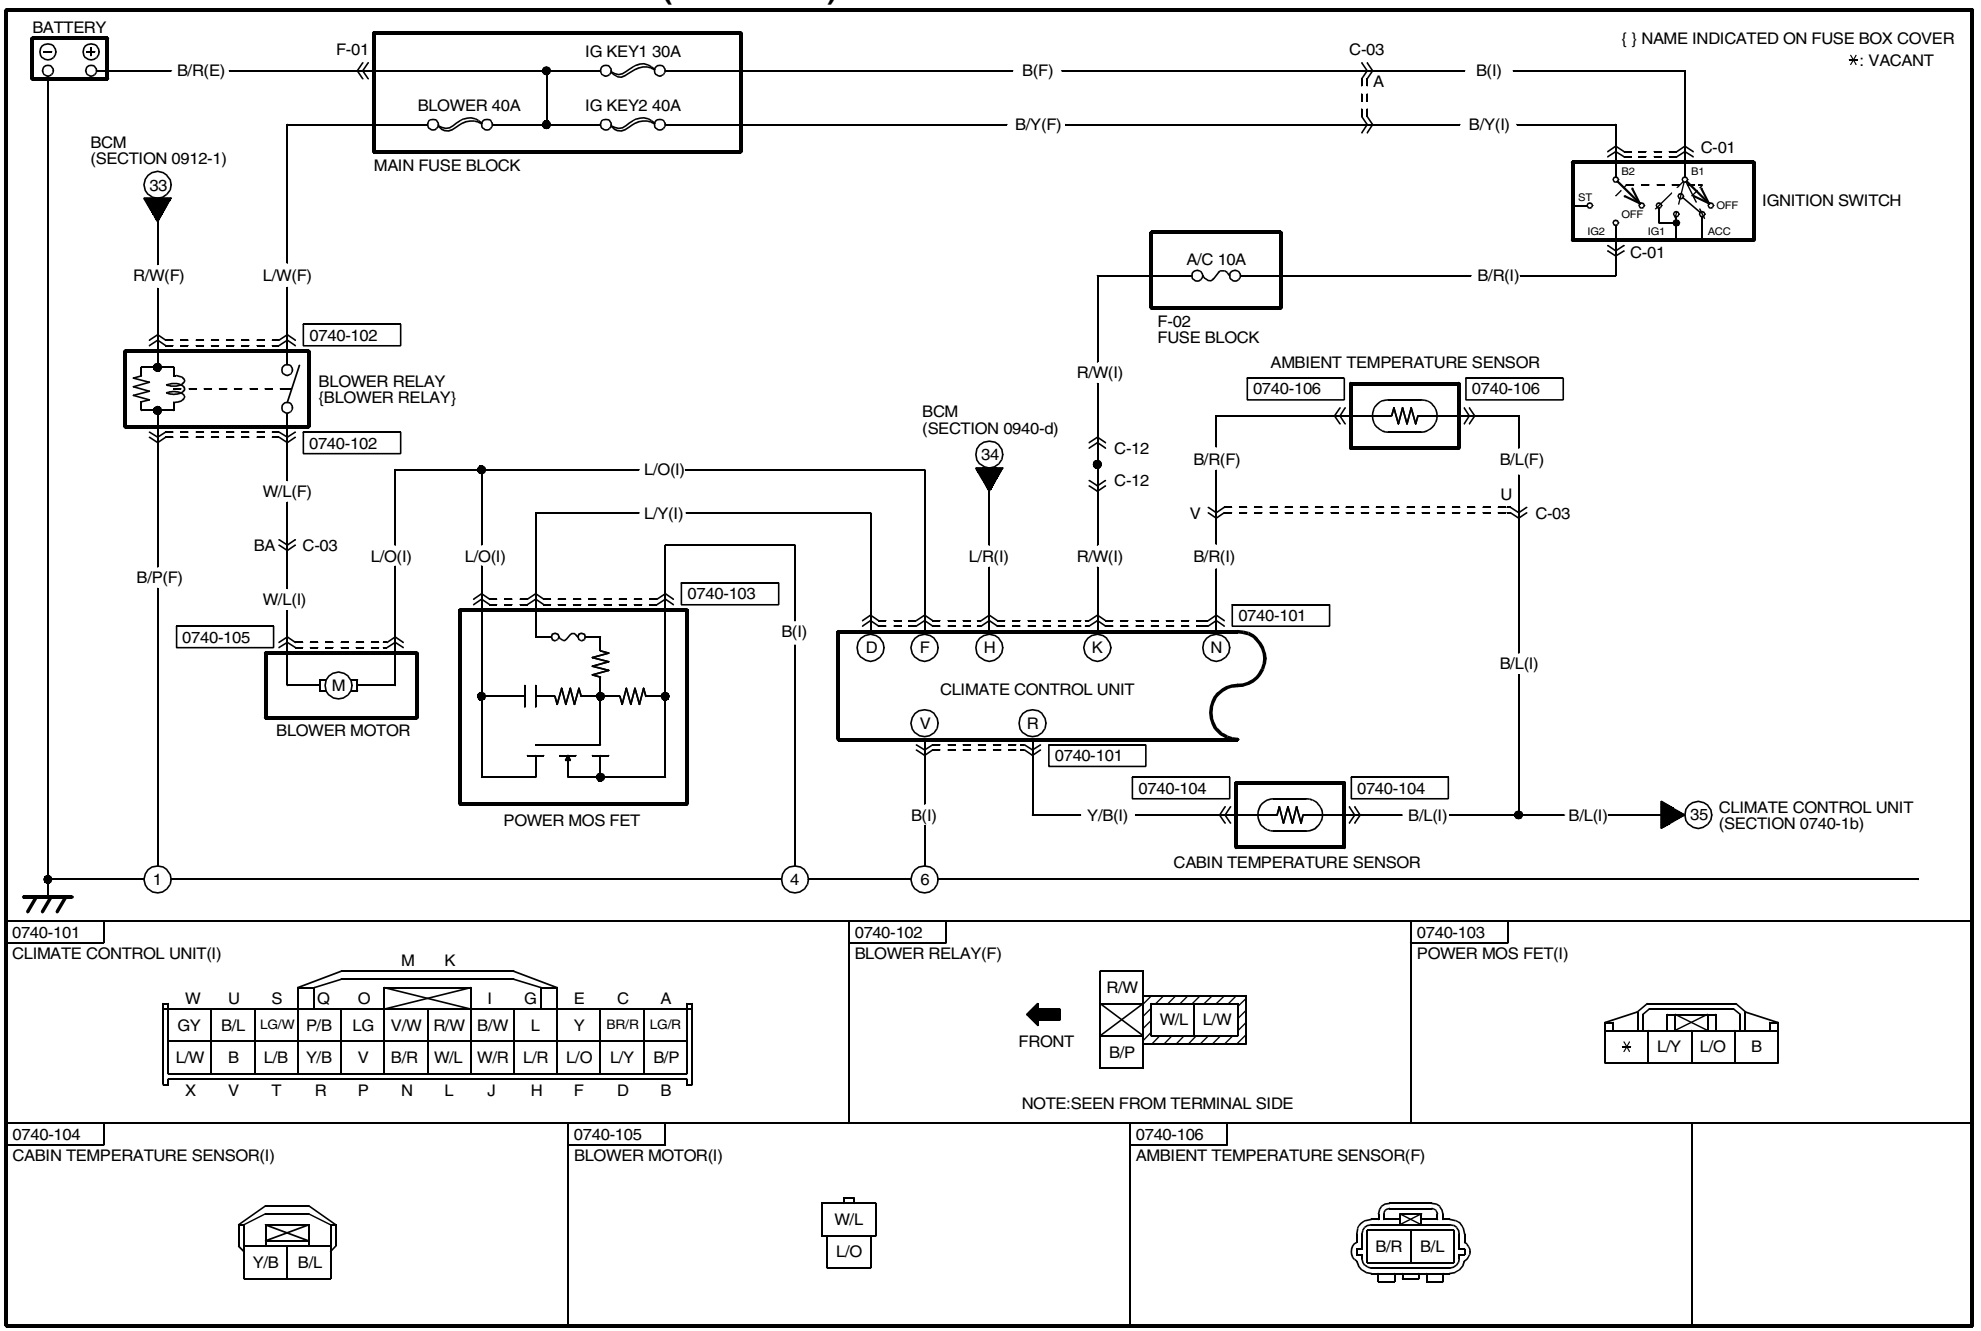

0740-101 CLIMATE CONTROL UNIT(I)

	W	U	S	Q	O	M/K	I	G	E	C	A
	GY	B/L	LG/W	P/B	LG	V/W	R/W	B/W	L	Y	BR/R	LG/R
	L/W	B	L/B	Y/B	V	B/R	W/L	W/R	L/R	L/O	L/Y	B/P
	X	V	T	R	P	N	L	J	H	F	D	B

0740-102 BLOWER RELAY(F)


NOTE:SEEN FROM TERMINAL SIDE

0740-103 POWER MOS FET(I)


0740-104 CABIN TEMPERATURE SENSOR(I)

0740-105 BLOWER MOTOR(I)

0740-106 AMBIENT TEMPERATURE SENSOR(F)

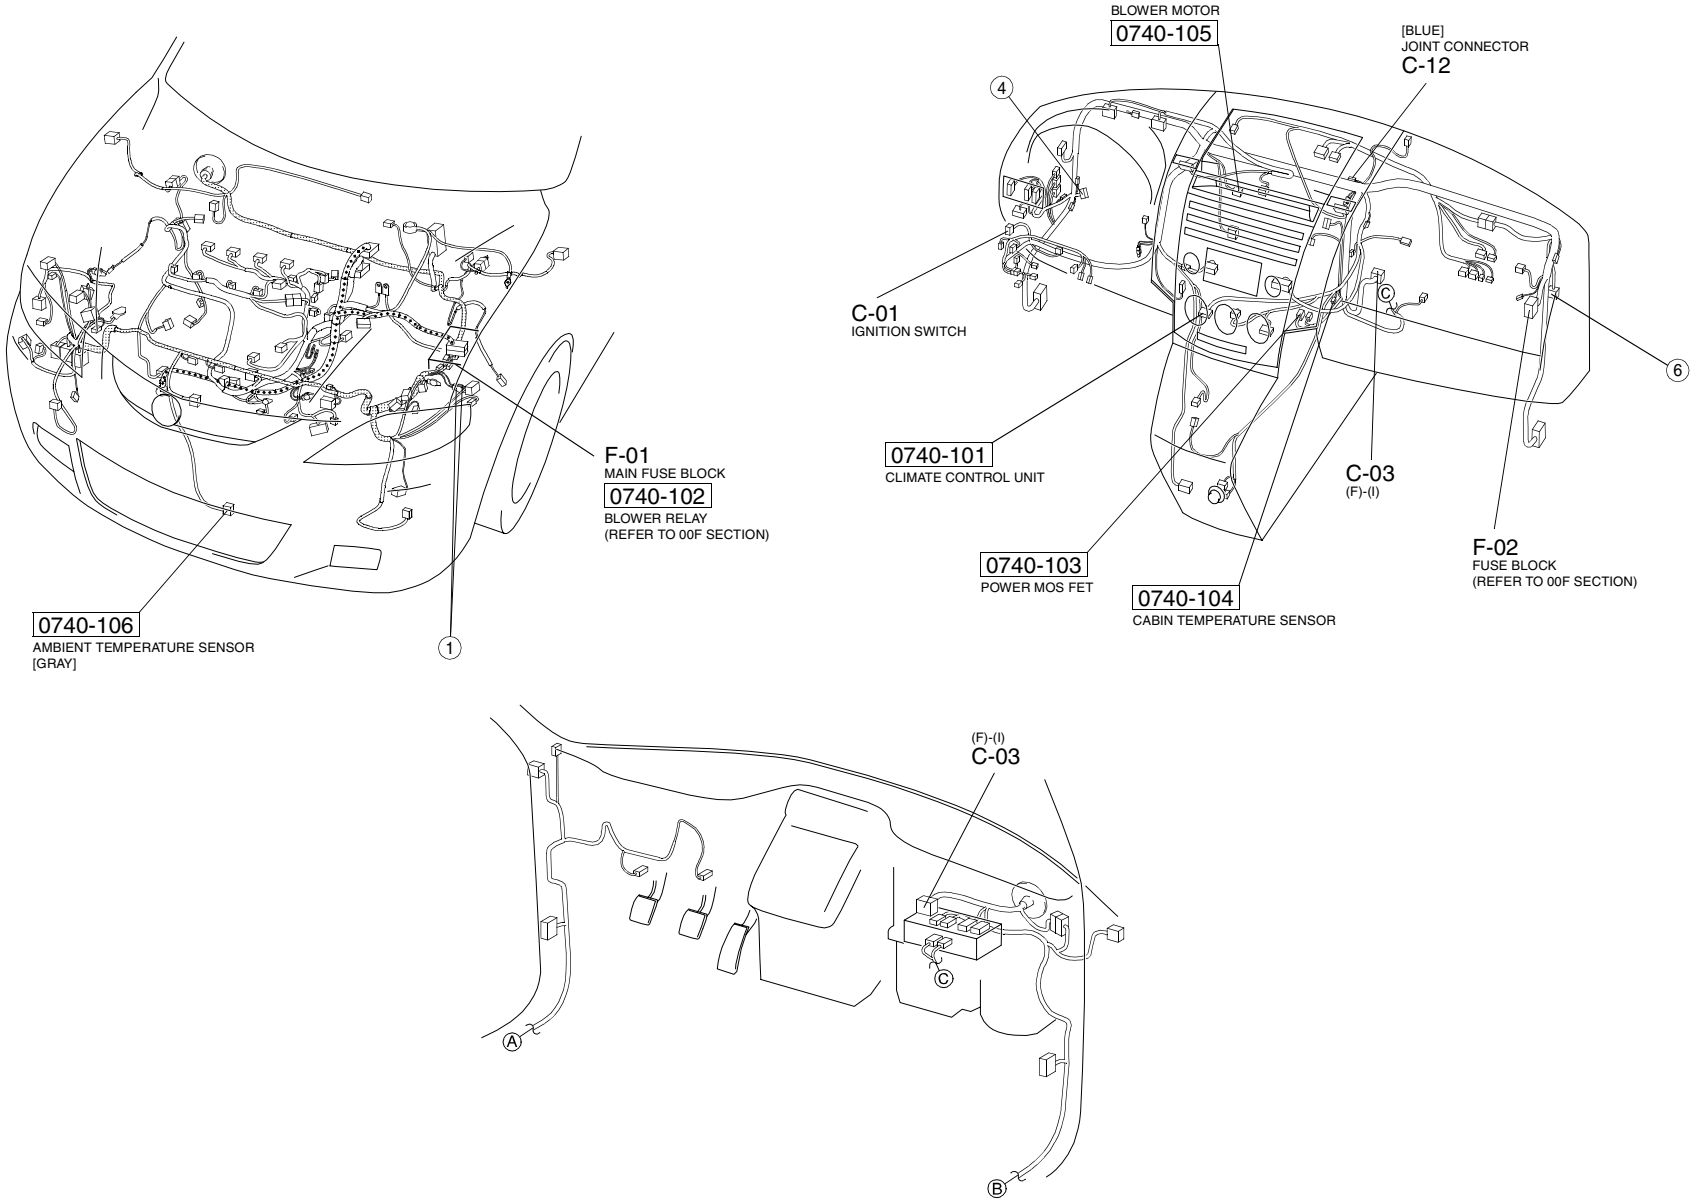
BLOWER MOTOR
0740-105
[BLUE]
JOINT CONNECTOR
C-12
4
C-01
IGNITION SWITCH
6
C
F-01
MAIN FUSE BLOCK
0740-102
BLOWER RELAY
(REFER TO 00F SECTION)
0740-101
CLIMATE CONTROL UNIT
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
0740-103
POWER MOS FET
0740-104
CABIN TEMPERATURE SENSOR
0740-106
AMBIENT TEMPERATURE SENSOR
[GRAY]
1
(F)-(I)
C-03
C
A
B

HEATER AND AIR CONDITIONER SYSTEM (AUTO A/C)

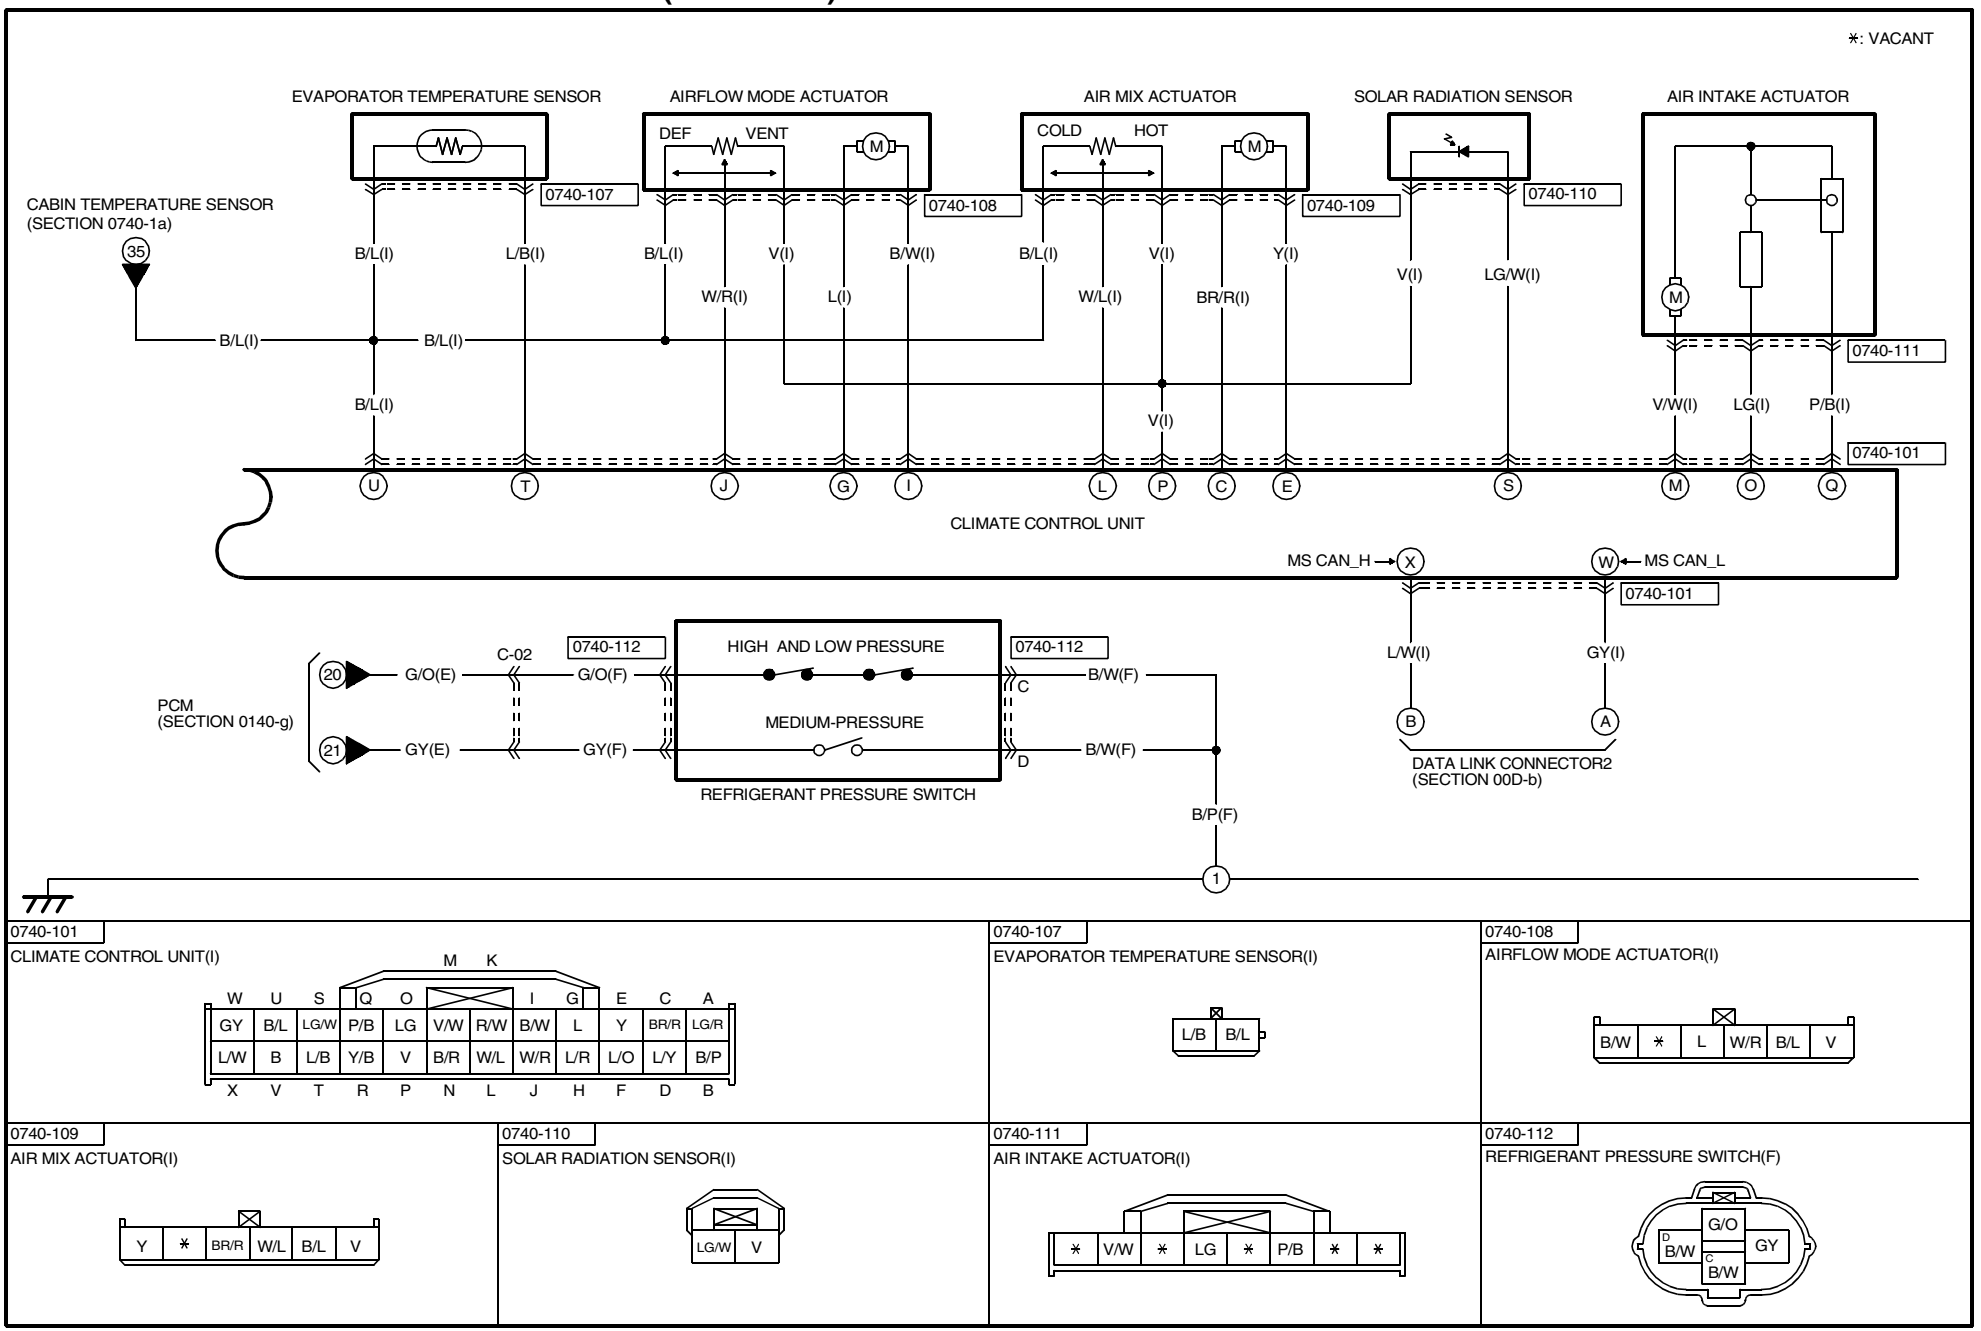

0740-101
CLIMATE CONTROL UNIT(I)

M					K						
W	U	S	Q	O			I	G	E	C	A
GY	B/L	LG/W	P/B	LG	V/W	R/W	B/W	L	Y	BR/R	LG/R
L/W	B	L/B	Y/B	V	B/R	W/L	W/R	L/R	L/O	L/Y	B/P
X	V	T	R	P	N	L	J	H	F	D	B

0740-107
EVAPORATOR TEMPERATURE SENSOR(I)

L/B	B/L

0740-108
AIRFLOW MODE ACTUATOR(I)

B/W	*	L	W/R	B/L	V

0740-109
AIR MIX ACTUATOR(I)

Y	*	BR/R	W/L	B/L	V

0740-110
SOLAR RADIATION SENSOR(I)


LG/W	V


0740-111
AIR INTAKE ACTUATOR(I)

*	V/W	*	LG	*	P/B	*	*


0740-112
REFRIGERANT PRESSURE SWITCH(F)

D	G/O
B/W	GY
C	B/W

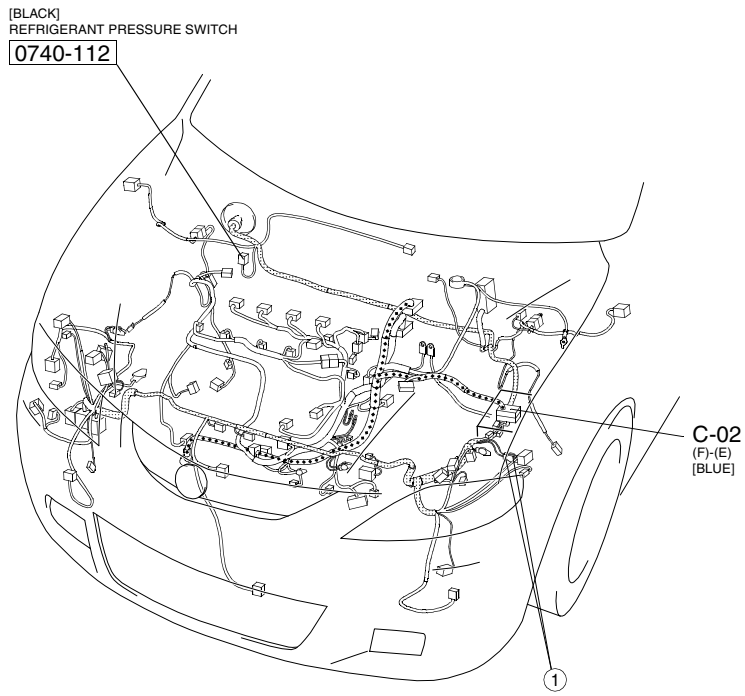
[BLACK]
REFRIGERANT PRESSURE SWITCH
0740-112
C-02
(F)-(E)
[BLUE]
1

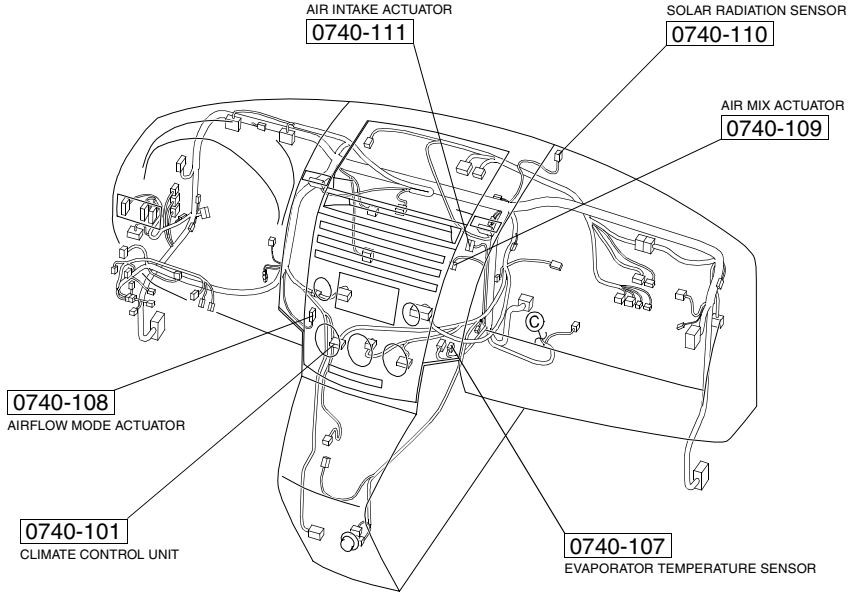
AIR INTAKE ACTUATOR
0740-111
SOLAR RADIATION SENSOR
0740-110
AIR MIX ACTUATOR
0740-109
0740-108
AIRFLOW MODE ACTUATOR
0740-101
CLIMATE CONTROL UNIT
0740-107
EVAPORATOR TEMPERATURE SENSOR

HEATER AND AIR CONDITIONER SYSTEM (MANUAL A/C)

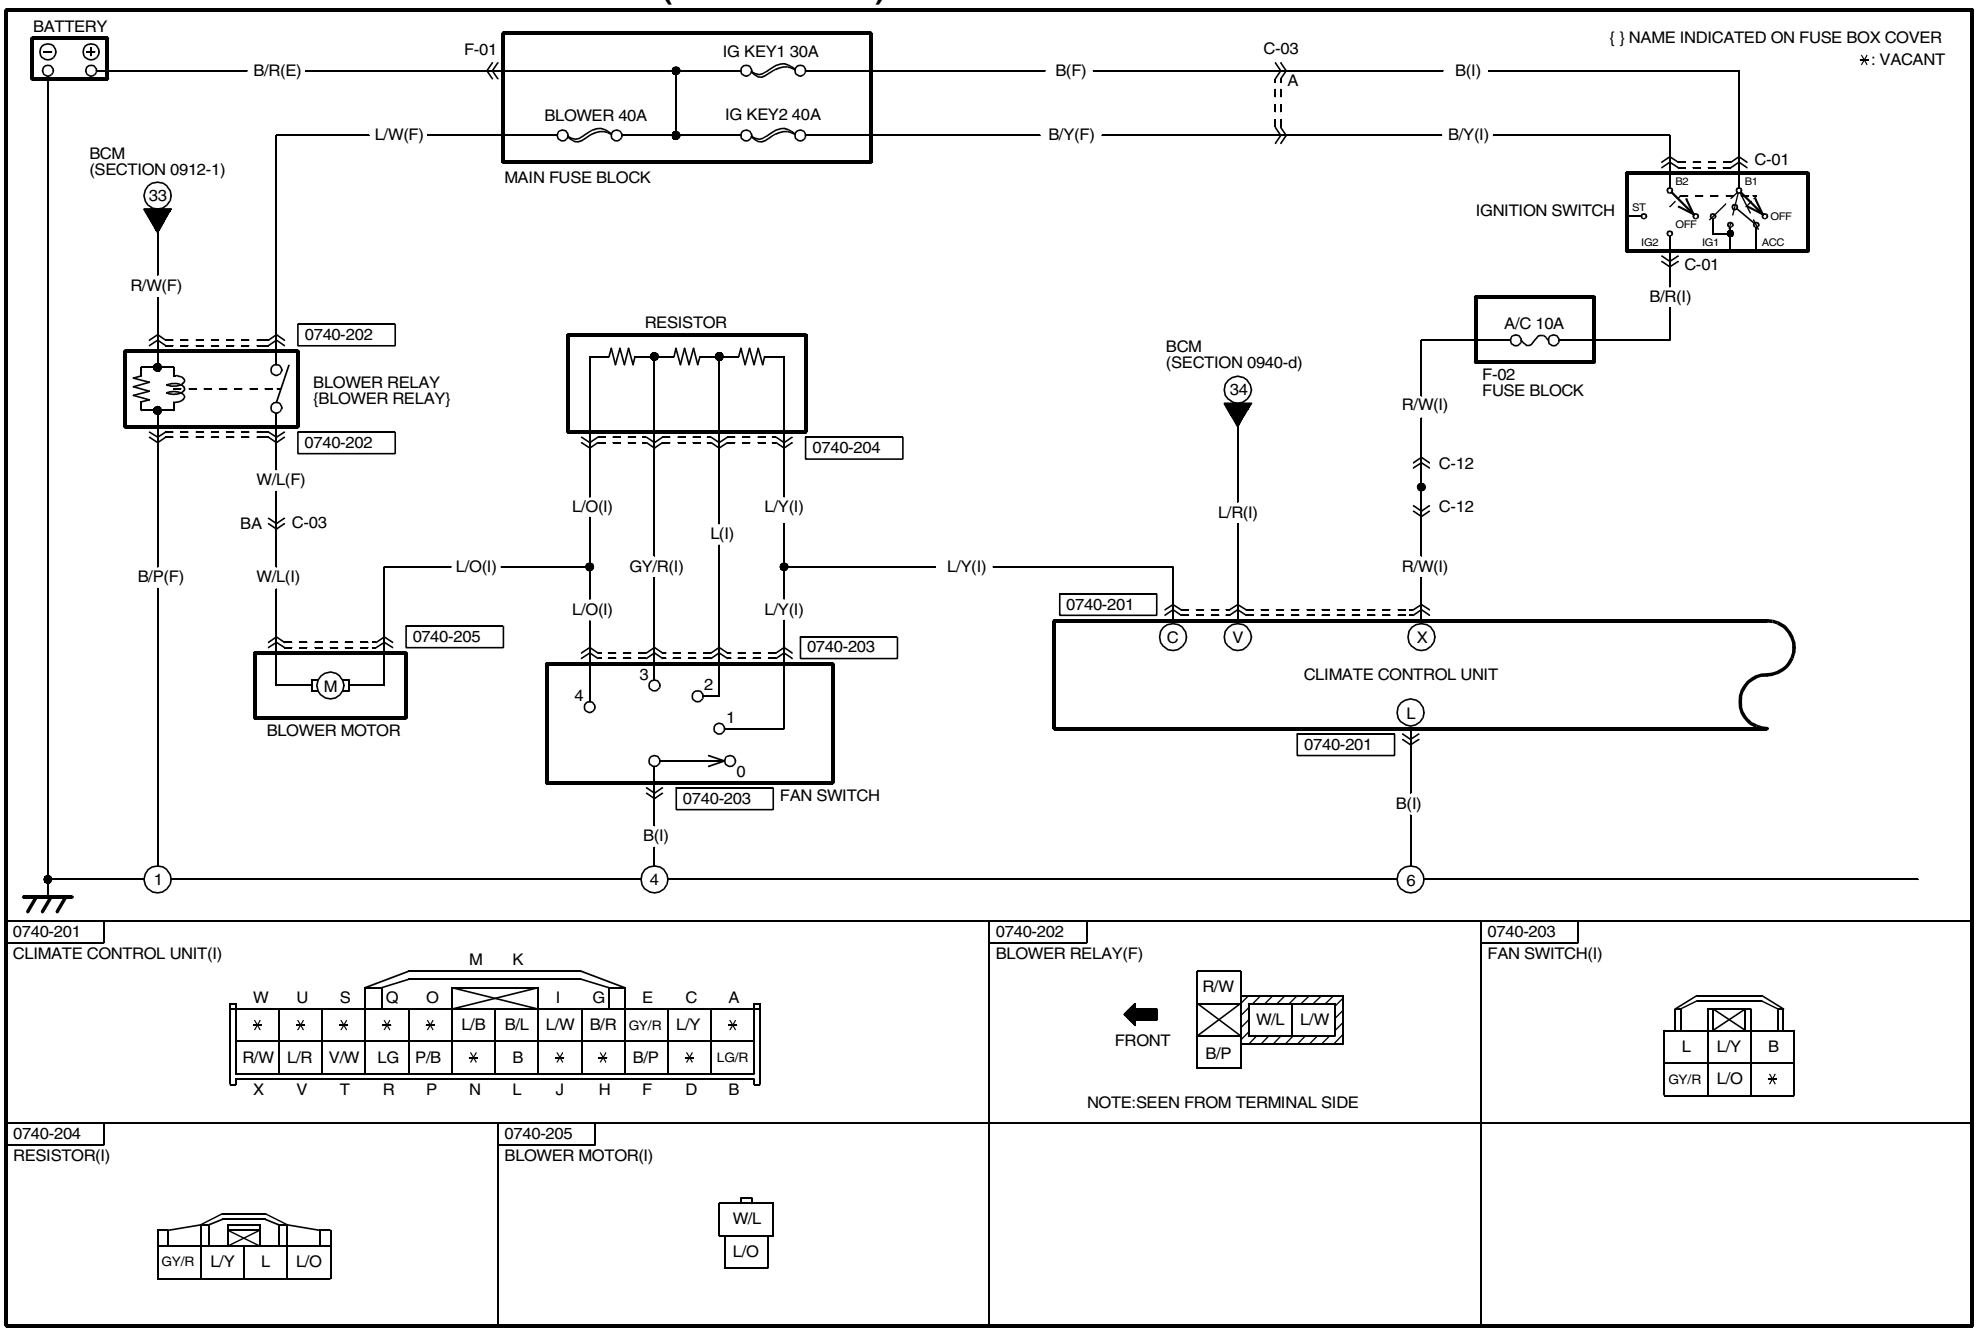

0740-201
CLIMATE CONTROL UNIT(I)

M					K							
W	U	S	Q	O		I	G	E	C	A		
∗	∗	∗	∗	∗	L/B	B/L	L/W	B/R	GY/R	L/Y	∗	
R/W	L/R	V/W	LG	P/B	∗	B	∗	∗	B/P	∗	LG/R	
X	V	T	R	P	N	L	J	H	F	D	B	

0740-202
BLOWER RELAY(F)

NOTE:SEEN FROM TERMINAL SIDE

0740-203
FAN SWITCH(I)


L	L/Y	B
GY/R	L/O	∗

0740-204
RESISTOR(I)

GY/R	L/Y	L	L/O


0740-205
BLOWER MOTOR(I)


W/L
L/O

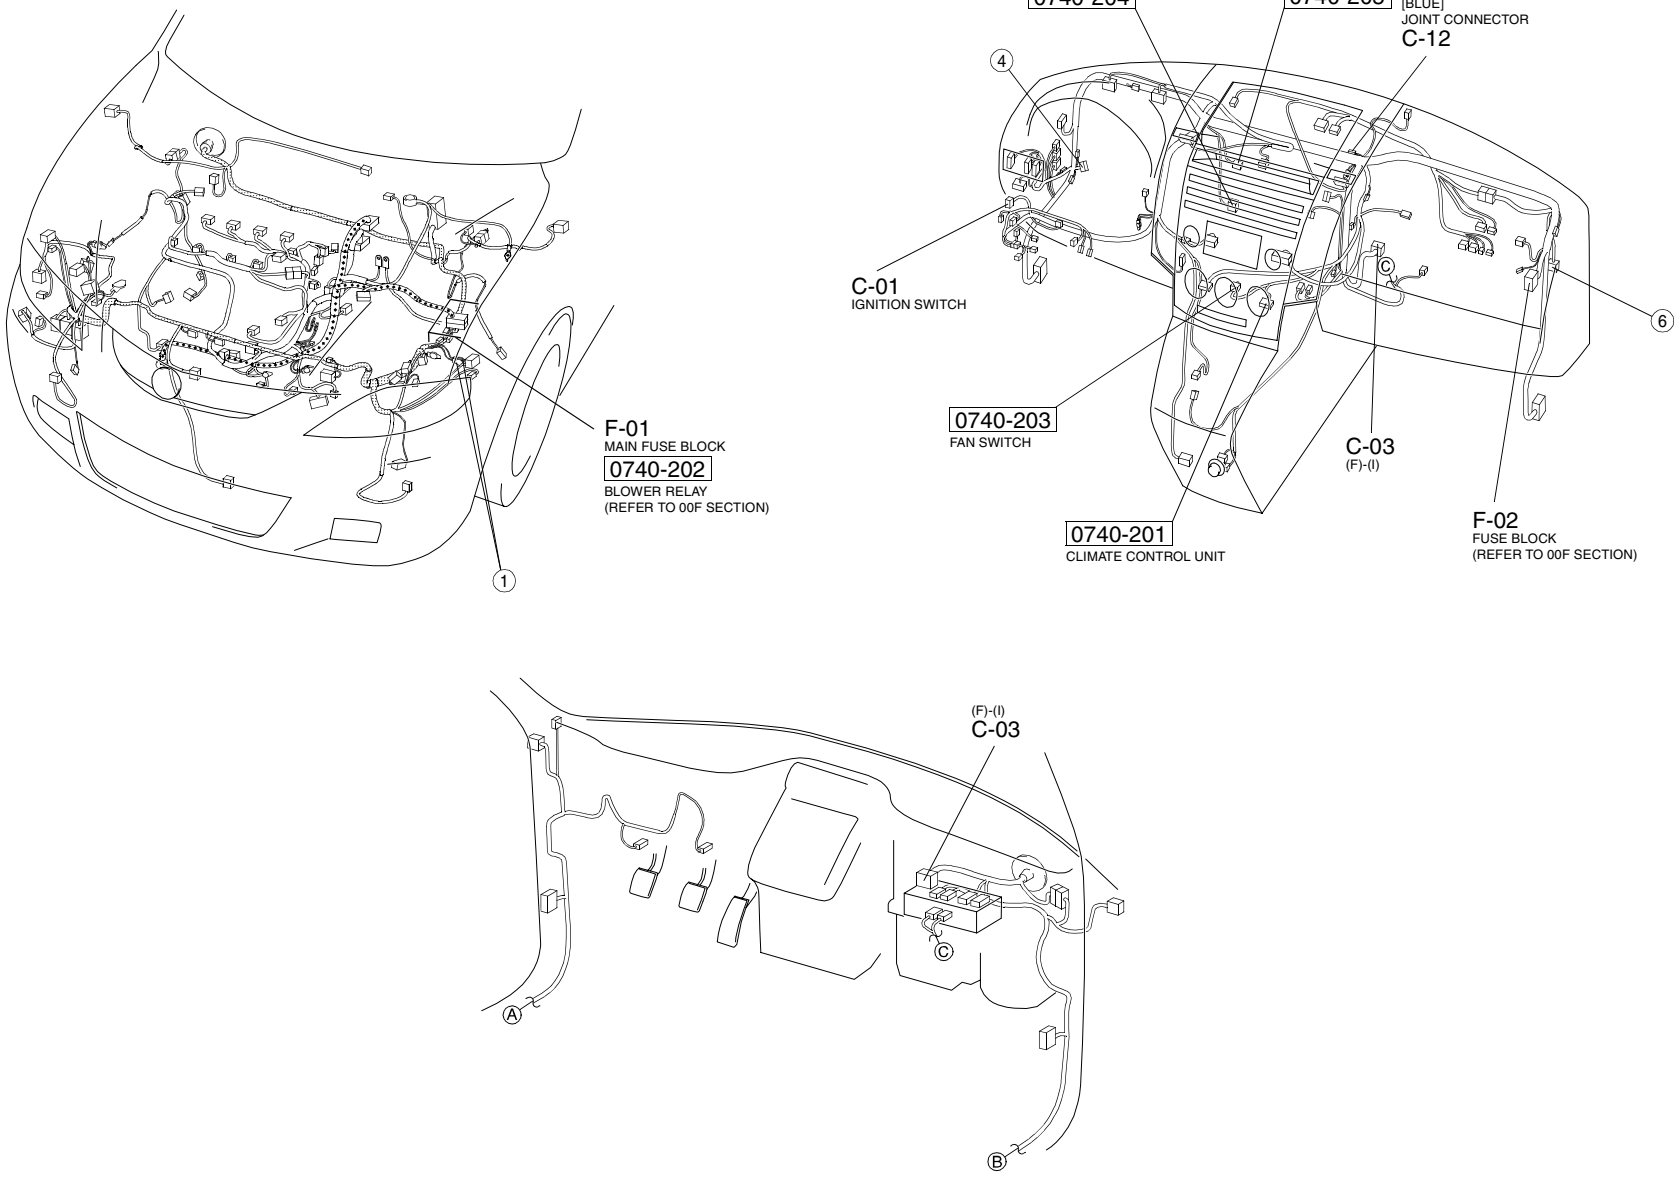
RESISTOR
0740-204
BLOWER MOTOR
0740-205
[BLUE]
JOINT CONNECTOR
C-12
4
C-01
IGNITION SWITCH
6
C
0740-203
FAN SWITCH
C-03
(F)-(I)
F-01
MAIN FUSE BLOCK
0740-202
BLOWER RELAY
(REFER TO 00F SECTION)
1
0740-201
CLIMATE CONTROL UNIT
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
(F)-(I)
C-03
C
A
B


HEATER AND AIR CONDITIONER SYSTEM (MANUAL A/C)

*: VACANT

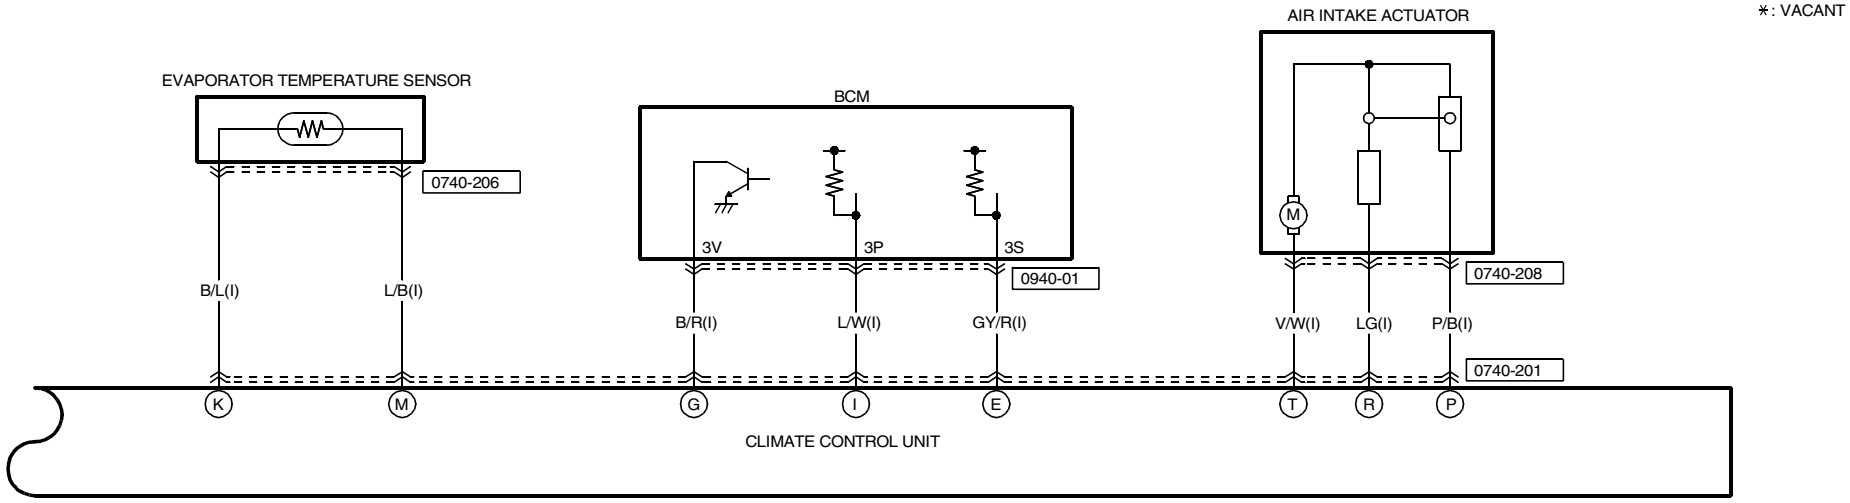


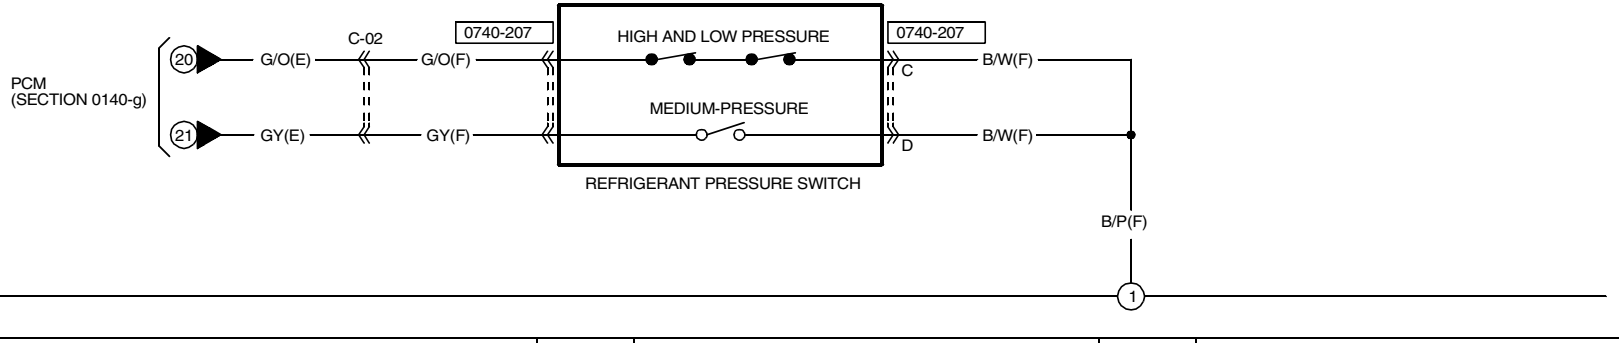


0740-201
CLIMATE CONTROL UNIT(I)

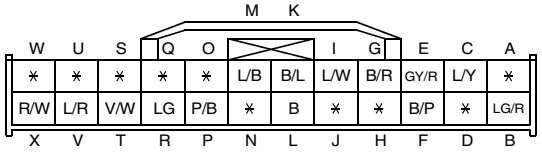


0740-206
EVAPORATOR TEMPERATURE SENSOR(I)



0740-207
REFRIGERANT PRESSURE SWITCH(F)

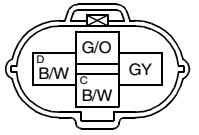


0740-208
AIR INTAKE ACTUATOR(I)




0940-01
BCM (I)


3AB V/G	3Y *	3V B/R	3S GY/R	3P L/W	3M L/B	3J GY/B	3G B	3D W	3A B/W
3AC *	3Z L	3W L/O	3T W/B	3Q W/R	3N L/O	3K L/R	3H G	3E Y/G	3B GY
3AD W/L	3AA P/L	3X *	3U R/W	3R L/Y	3O BR/R	3L Y	3I LG	3F G/W	3C Y/R

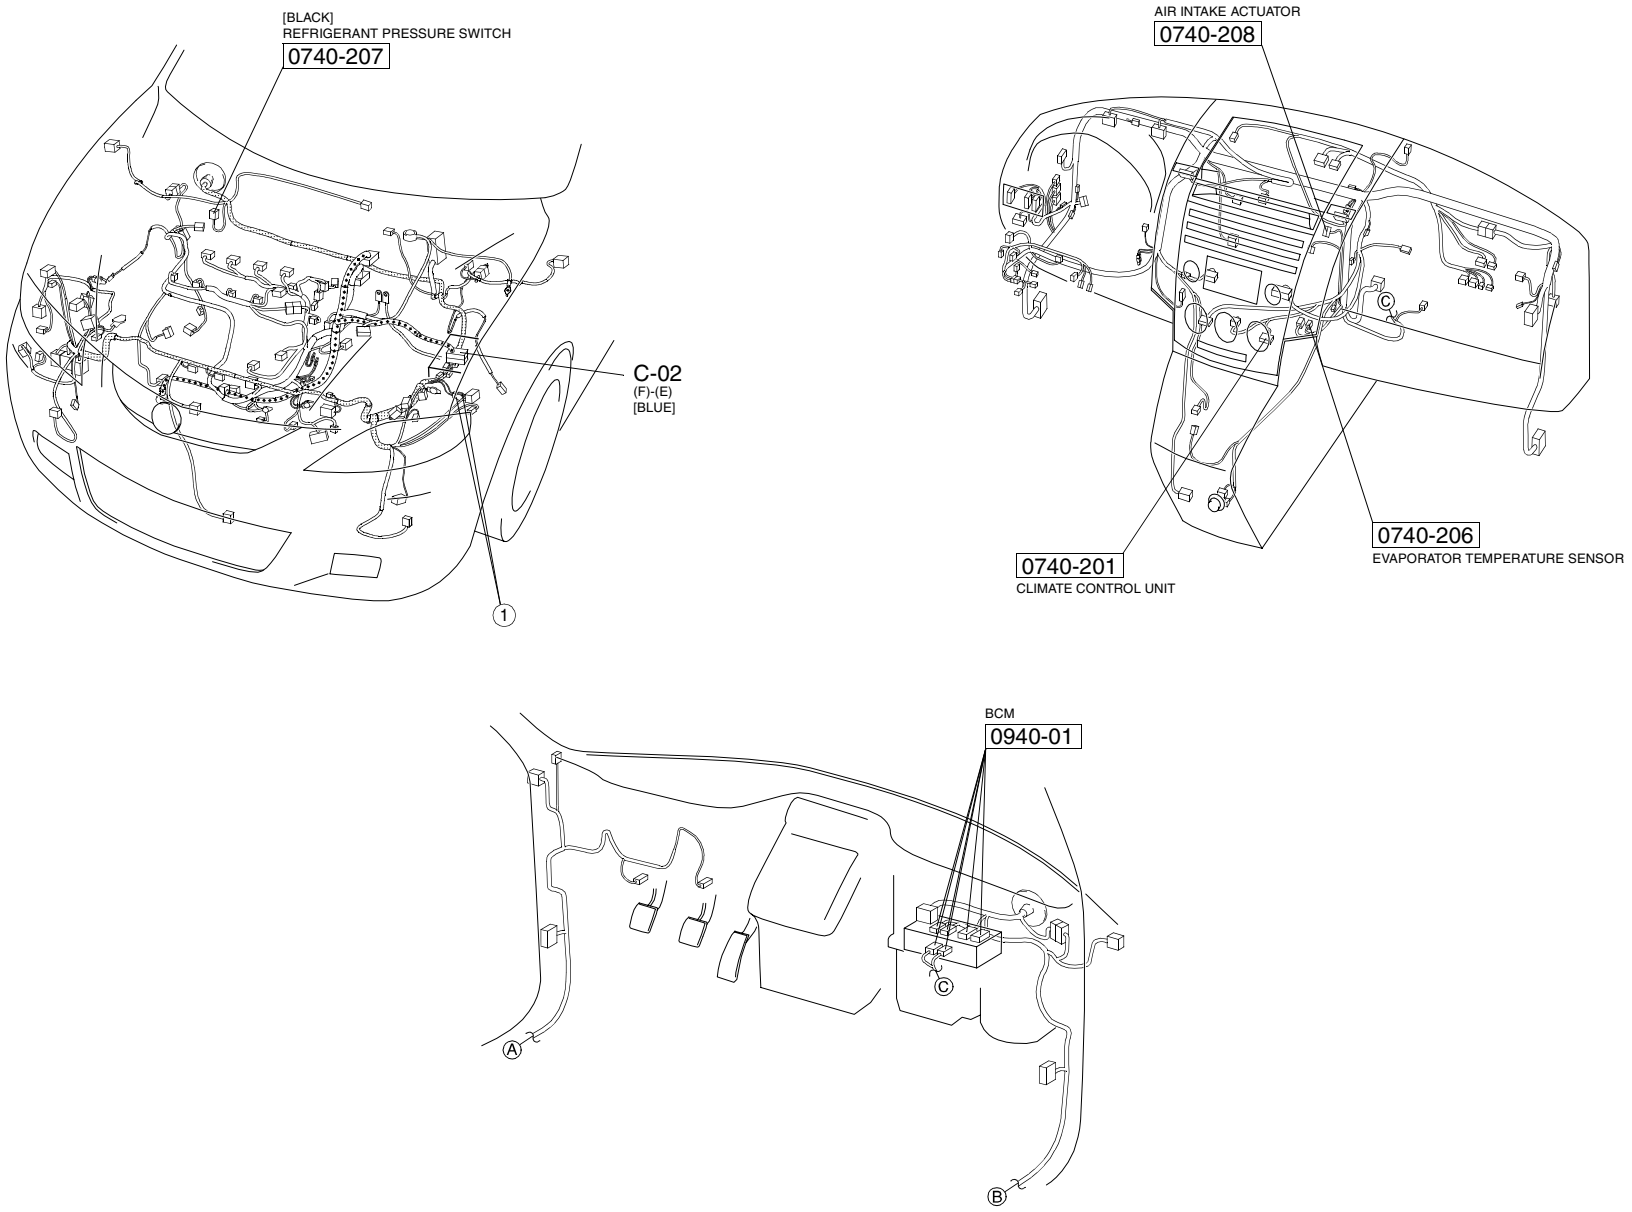
[BLACK]
REFRIGERANT PRESSURE SWITCH
0740-207
C-02
(F)-(E)
[BLUE]
1
AIR INTAKE ACTUATOR
0740-208
C
0740-206
EVAPORATOR TEMPERATURE SENSOR
0740-201
CLIMATE CONTROL UNIT
BCM
0940-01
C
A
B

A/C COMPRESSOR CONTROL

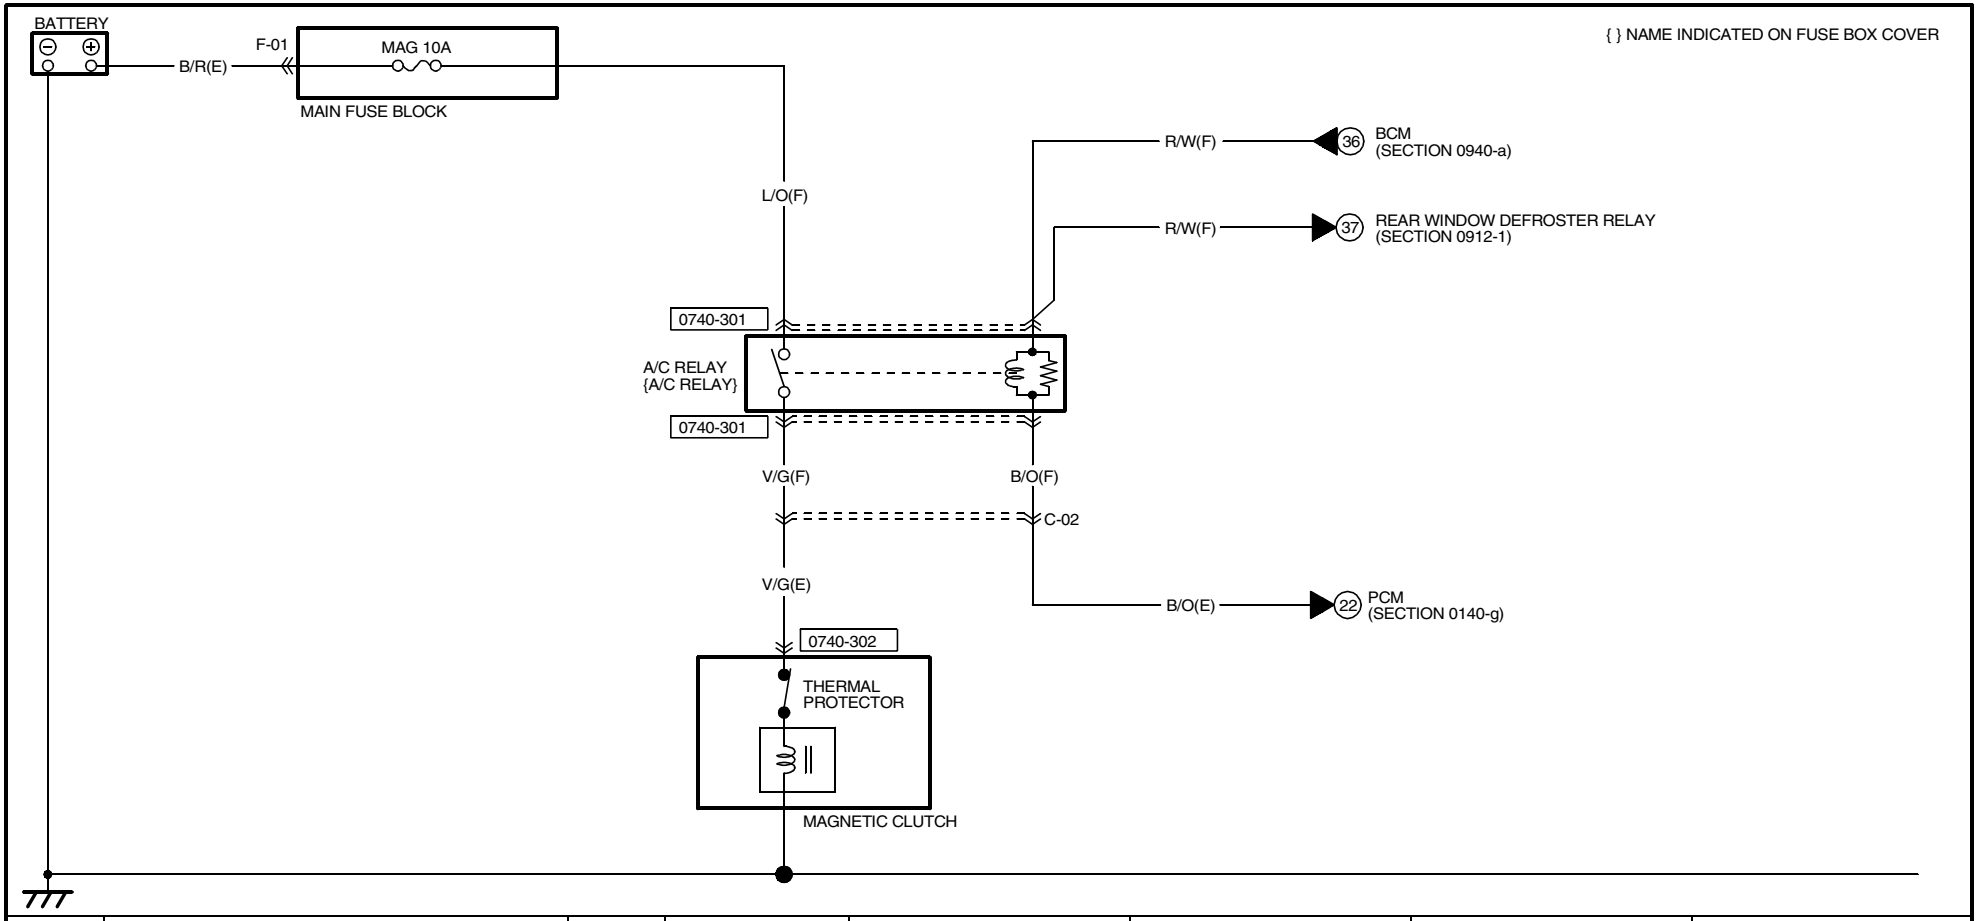


0740-301
A/C RELAY(F)



NOTE:SEEN FROM TERMINAL SIDE

0740-302
MAGNETIC CLUTCH(E)

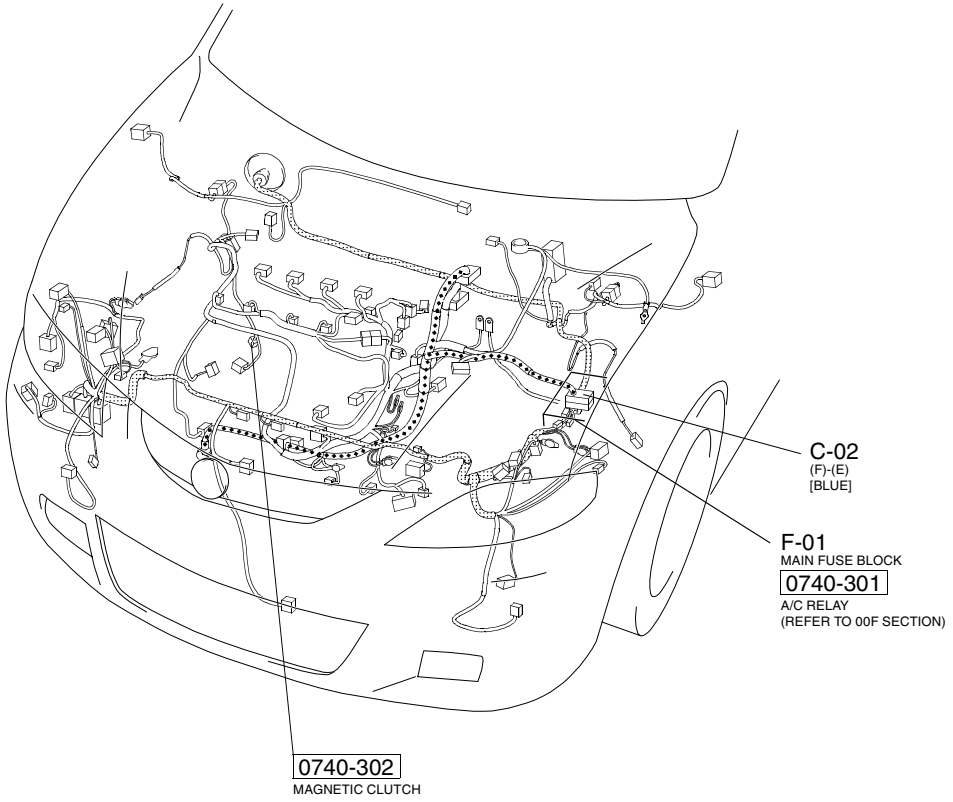


C-02
(F)-(E)
[BLUE]
F-01
MAIN FUSE BLOCK
0740-301
A/C RELAY
(REFER TO 00F SECTION)
0740-302
MAGNETIC CLUTCH


AIR BAG SYSTEM

SERVICE WARNINGS

DPE081000000W02

Air Bag Module Inspection


- Inspecting an air bag module using a tester can operate (deploy) the air bag module, which may cause serious injury. Do not use a tester to inspect an air bag module. Always use the on-board diagnostic function to diagnose the air bag module for malfunctions.

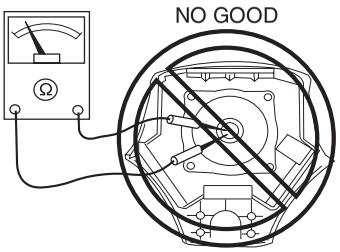

DPE810ZW1002


Air Bag Module Handling

- Handling a live (undeployed) air bag module that is pointed toward your body could result in serious injury if the air bag module were to accidentally operate (deploy). When carrying a live (undeployed) air bag module, point the deployment surface away from your body to lessen the chance of injury in case it operates (deploys).

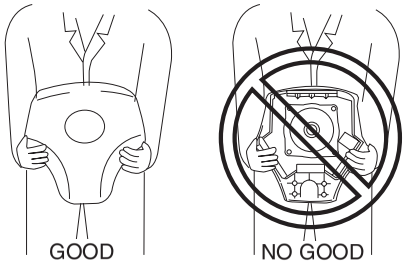

DPE810ZW1003

- A live (undeployed) air bag module placed with its deployment surface to ground is dangerous. If the air bag module were to accidentally operate (deploy), it could cause serious injury. Always place a live (undeployed) air bag module with its deployment surface up.

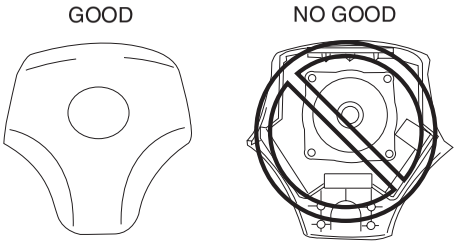

DPE810ZW1004

Side Air Bag Module Handling

- When a side air bag module operates (deploys) due to a collision, the interior of the seat back (pad, frame, trim) may become damaged. If a side air bag does not operate (deploy) normally from a seat back that has been reused, a serious accident may result. After a side air bag has operated (deployed), always replace both the side air bag module and the seat back (pad, frame, trim) with new parts. After servicing, verify that the seat operates normally and that the wiring harness is not caught.

SAS control module Handling

- Removing the SAS control module or disconnecting the SAS control module connector with the ignition switch at the ON position can activate the sensor in the SAS control module and operate (deploy) the air bags and pre-tensioner seat belts, which may cause serious injury. Before removing the SAS control module or disconnecting the SAS control module connector, always turn the ignition switch to the LOCK position, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.
- Connecting the SAS control module connector with the SAS control module not securely fixed to the vehicle is dangerous. The sensor in the SAS control module could send an electrical signal to the air bag modules and pre-tensioner seat belts. This will operate (deploy) the air bags and pre-tensioner seat belts, which may result in serious injury. Therefore, before connecting the connector, securely fix the SAS control module to the vehicle.
- Because a sensor is built into the SAS control module, once the air bags and pre-tensioner seat belts have operated (deployed) due to a collision or other causes, the SAS control module must be replaced with a new one even if the used one does not have any visible external damage or deformation. The used SAS control module may have been damaged internally which may cause improper operation. If the SAS control module is reused, the air bags and pre-tensioner seat belts may not operate (deploy) normally, which could result in a serious accident. Always replace the SAS control module with a new one. The SAS control module cannot be bench-checked or self-checked.

Crash Zone Sensor Handling


- Removing the crash zone sensor or disconnecting the crash zone sensor connector with the ignition switch at the ON position can activate the crash zone sensor and operate (deploy) the air bags and pre-tensioner seat belts, which may cause serious injury. Before removing the crash zone sensor or disconnecting the crash zone sensor connector, always turn the ignition switch to the LOCK position, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.
- If the crash zone sensor is subjected to shock or the sensor is disassembled, the air bags and pre-tensioner seat belts may accidentally operate (deploy) and cause injury, or the system may fail to operate normally and cause a serious accident. Do not subject the crash zone sensor to shock or disassemble the sensor.
- Because a sensor is built into the crash zone sensor, once the air bags and pre-tensioner seat belts have operated (deployed) due to a collision or other causes, the crash zone sensor must be replaced with a new one even if the used one does not have any visible external damage or deformation. If the crash zone sensor is reused, the air bags and pre-tensioner seat belts may not operate (deploy) normally, which could result in a serious accident. Always replace the crash zone sensor with a new one. The crash zone sensor cannot be bench-checked or self-checked.

Side Air Bag Sensor Handling

- Removing the side air bag sensor or disconnecting the side air bag sensor connector with the ignition switch at the ON position can activate the side air bag sensor and operate (deploy) the side air bag, which may cause serious injury. Before removing the side air bag sensor or disconnecting the side air bag sensor connector, always turn the ignition switch to the LOCK position, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.
- If the side air bag sensor is subjected to shock or the sensor is disassembled, the side air bag may accidentally operate (deploy) and cause injury, or the system may fail to operate normally and cause a serious accident. Do not subject the side air bag sensor to shock or disassemble the sensor.
- Because a sensor is built into the side air bag sensor, once the air bag has operated (deployed) due to a collision or other causes, the side air bag sensor must be replaced with a new one even if the used one does not have any visible external damage or deformation. If the side air bag sensor is reused, the side air bag may not operate (deploy) normally, which could result in a serious accident. Always replace the side air bag sensor with a new one. The side air bag sensor cannot be bench-checked or self-checked.

Pre-tensioner Seat Belt Inspection

- Inspecting a pre-tensioner seat belt using a tester can operate (deploy) the pre-tensioner seat belt, which may cause serious injury. Do not use a tester to inspect a pre-tensioner seat belt. Always use the on-board diagnostic function to diagnose the pre-tensioner seat belt for malfunctions.

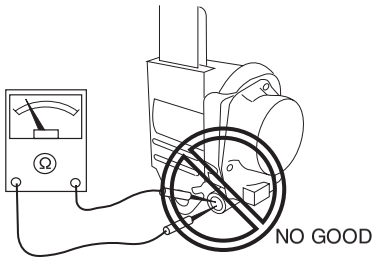

CHU0810W603

SERVICE CAUTIONS

DPE081000000W03

Air Bag System Component Disassembly


- Disassembling the air bag system components could cause it to not operate (deploy) normally. Never disassemble any air bag system components.



DPE810ZW1005

Air Bag Module, Pre-tensioner Seat Belt Handling

- Oil, grease, or water on the air bag modules may cause the air bags and pre-tensioner seat belts to fail to operate (deploy) in an accident. Never allow oil, grease, or water to get on the air bag modules or pre-tensioner seat belts.
- Inserting a screwdriver or similar object into the connector of an air bag module or a pre-tensioner seat belt may damage the connector and cause the air bag module or the pre-tensioner seat belt to operate (deploy) improperly, which may cause serious injury. Never insert any foreign objects into the air bag module or seat belt connectors.

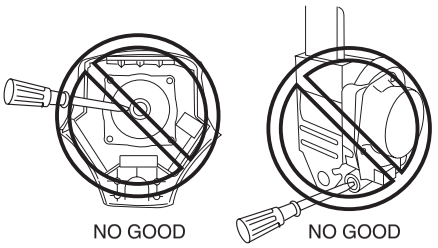

DPE810ZW1006

Air Bag Module, Pre-tensioner Seat Belt Reuse

- Even if an air bag module or a pre-tensioner seat belt does not operate (deploy) in a collision and does not have any external signs of damage, it may have been damaged internally, which may cause improper operation. Before reusing a live (undeployed) air bag module and the pre-tensioner seat belts, always use the on-board diagnostic to diagnose the air bag module and the pre-tensioner seat belts to verify that they have no malfunction.


Air Bag Wiring Harness Repair

- Incorrectly repairing an air bag wiring harness can accidentally operate (deploy) the air bag module and pre-tensioner seat belts. If a problem is found in the air bag wiring harness, always replace the wiring harness with a new one.



CHU0810W606

AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)

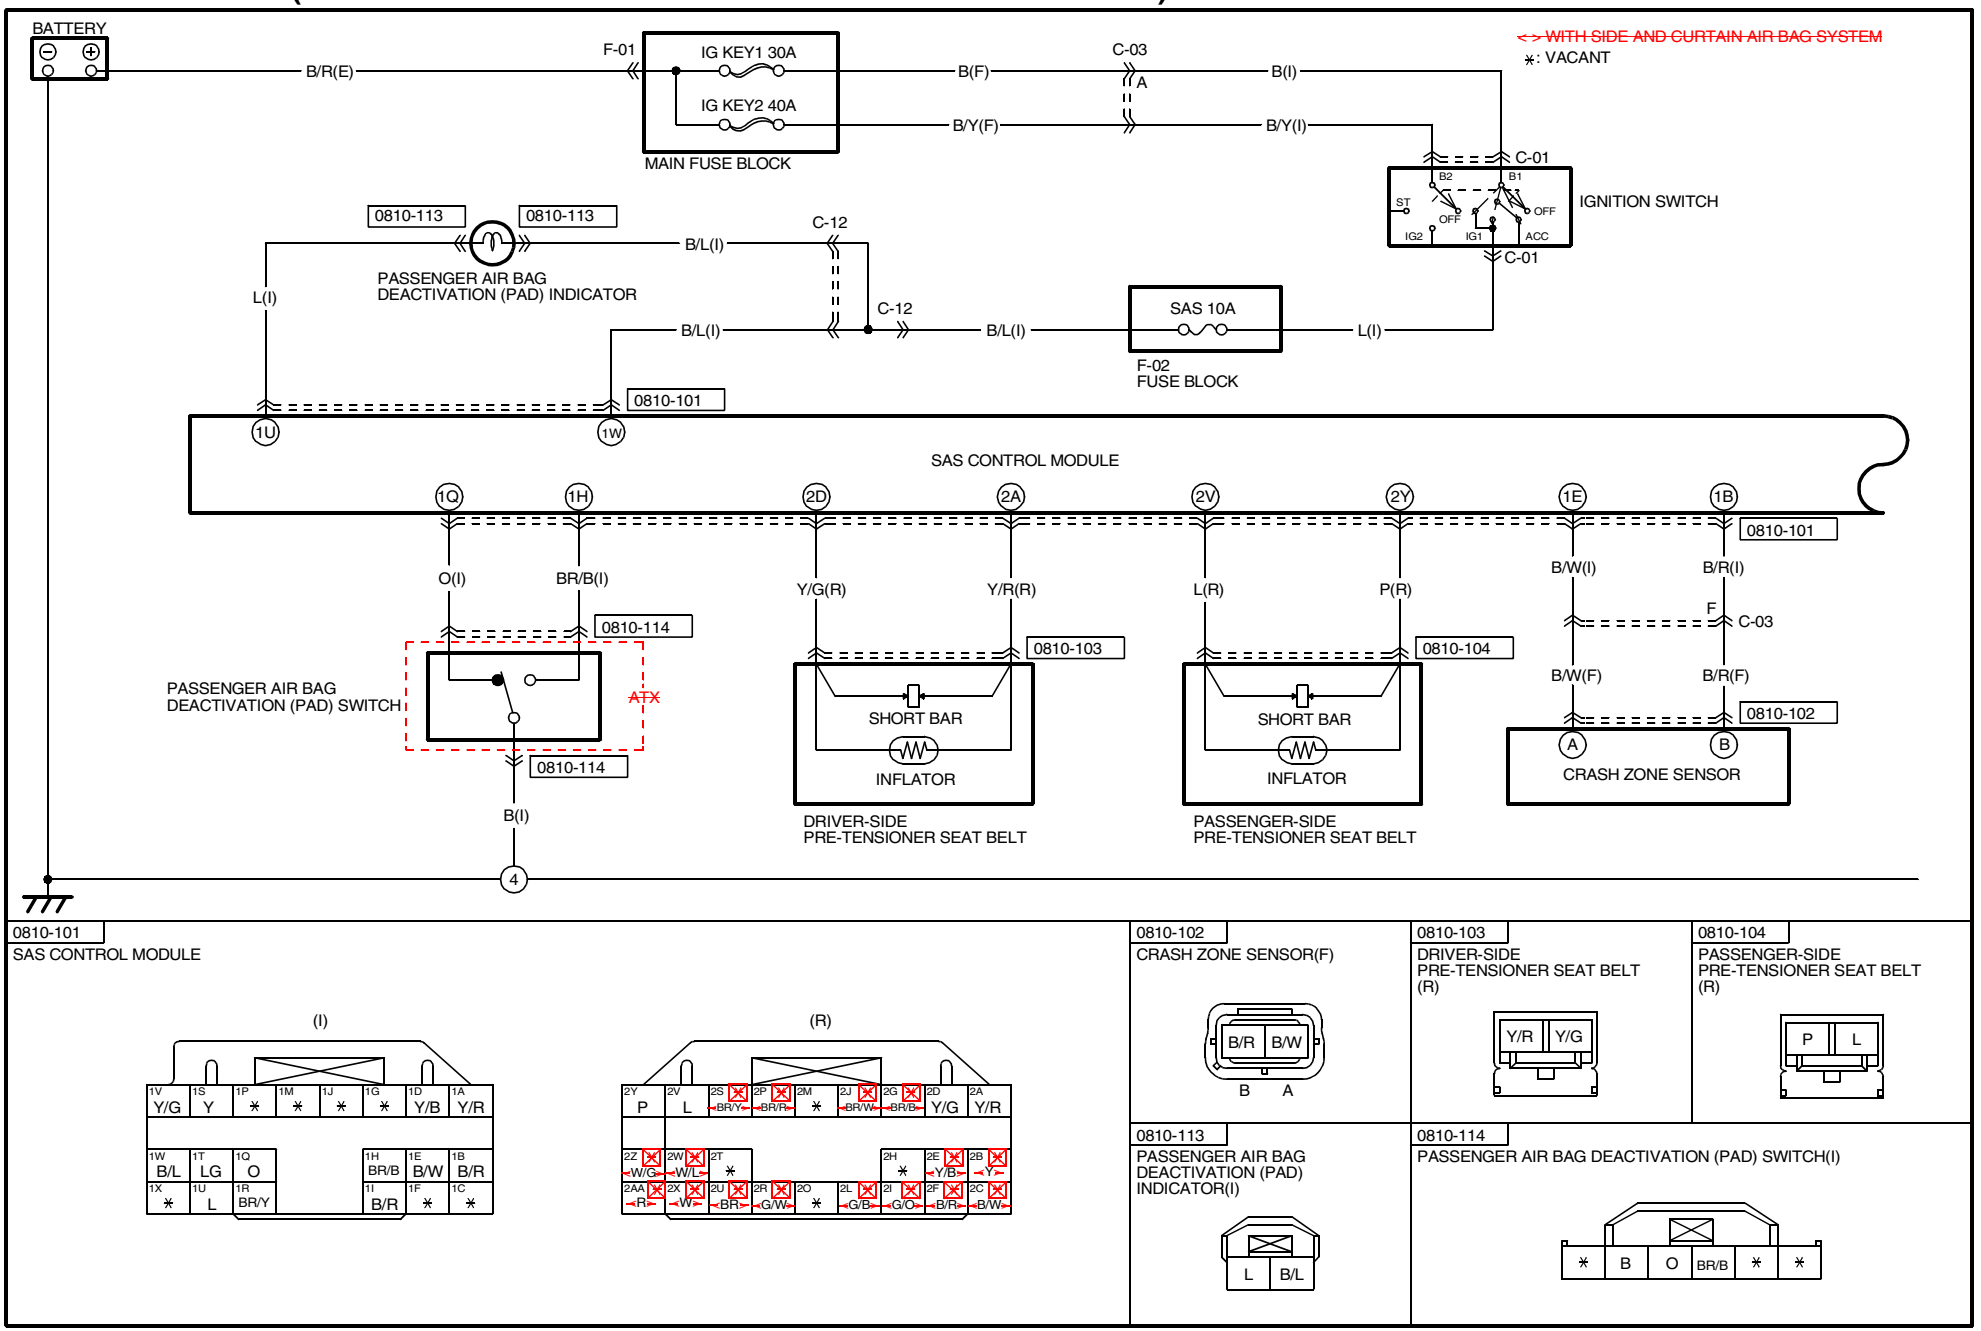

0810-101
SAS CONTROL MODULE

(I)

(R)


0810-102
CRASH ZONE SENSOR(F)

0810-103
DRIVER-SIDE
PRE-TENSIONER SEAT BELT
(R)


0810-104
PASSENGER-SIDE
PRE-TENSIONER SEAT BELT
(R)

0810-113
PASSENGER AIR BAG
DEACTIVATION (PAD)
INDICATOR(I)

0810-114
PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH(I)

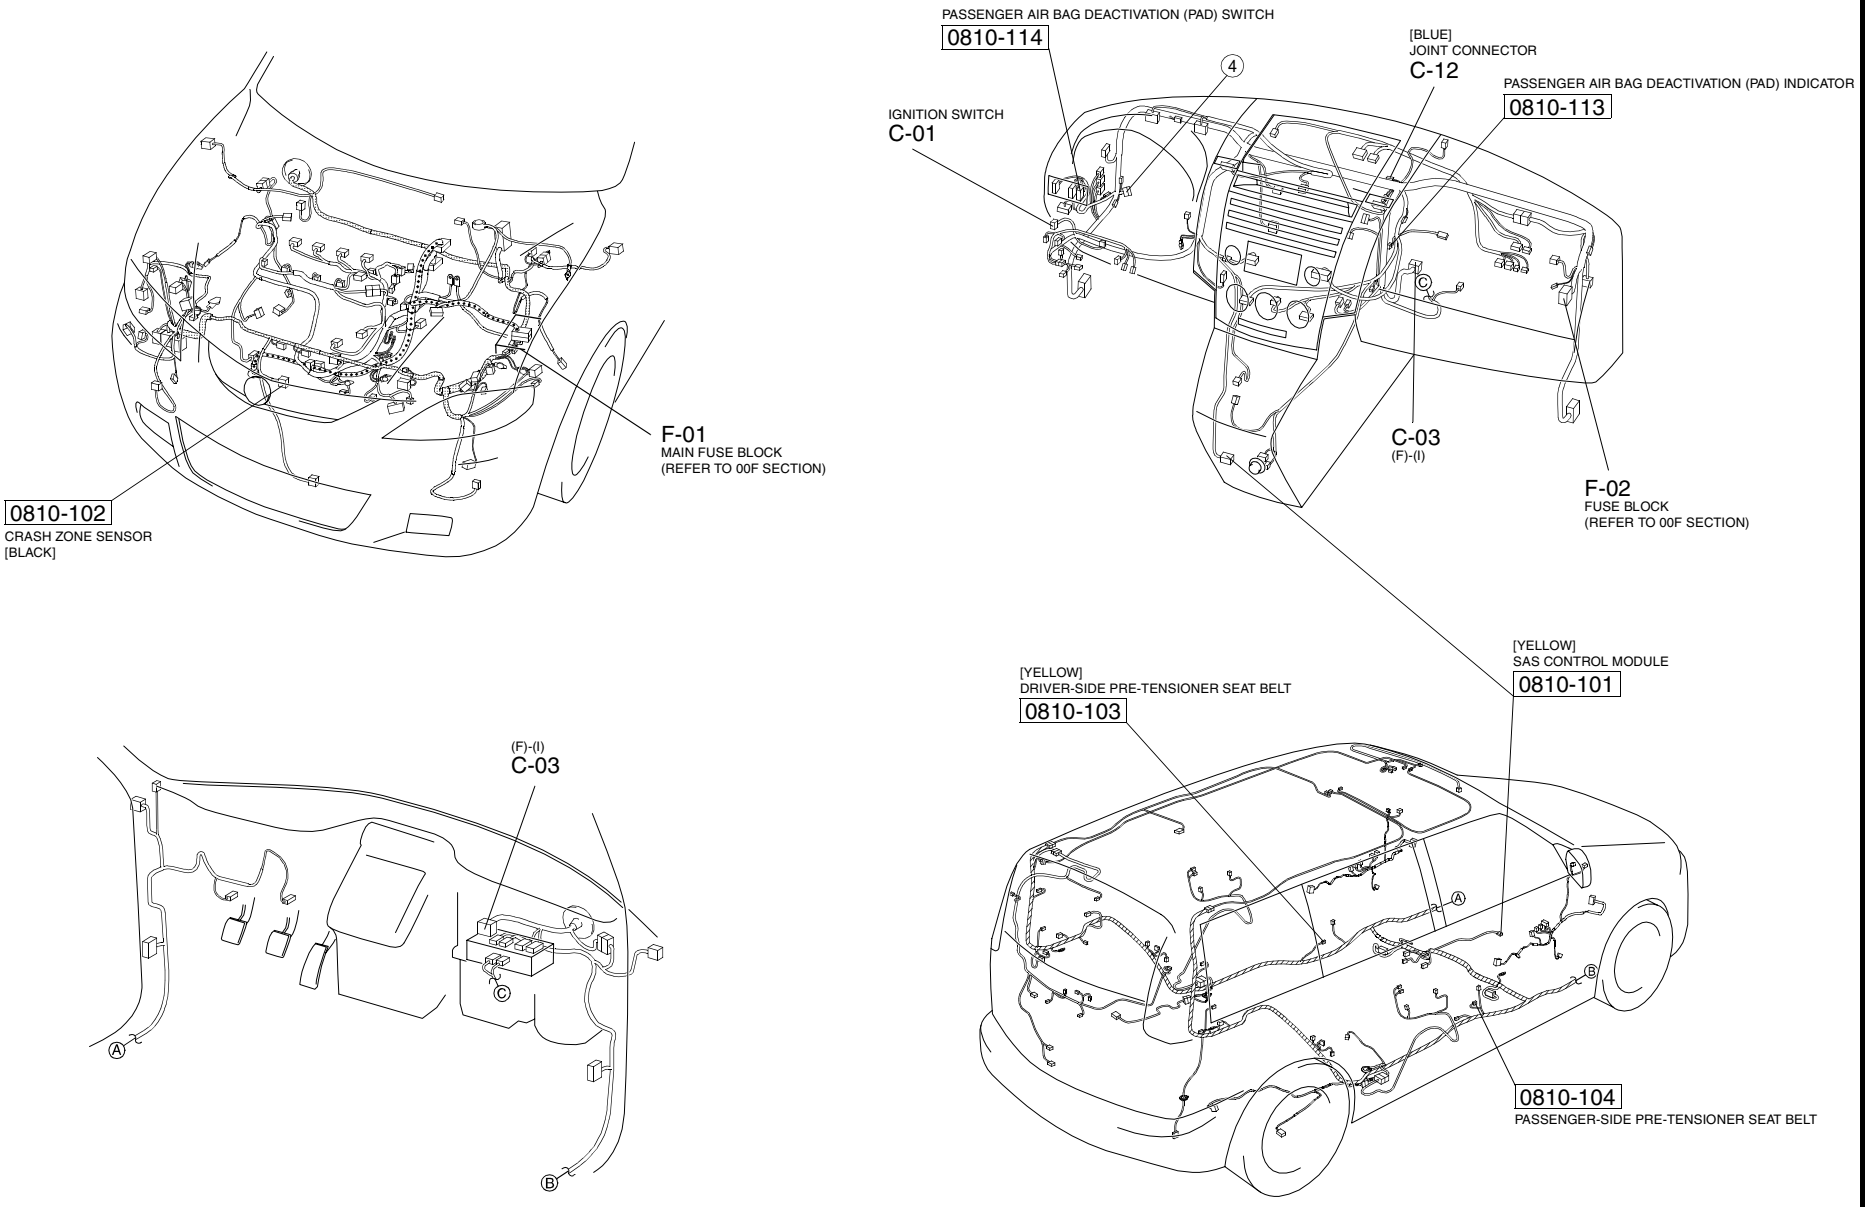
PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH
0810-114
[BLUE]
JOINT CONNECTOR
C-12
PASSENGER AIR BAG DEACTIVATION (PAD) INDICATOR
0810-113
IGNITION SWITCH
C-01
4
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0810-102
CRASH ZONE SENSOR
[BLACK]
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
[YELLOW]
SAS CONTROL MODULE
0810-101
[YELLOW]
DRIVER-SIDE PRE-TENSIONER SEAT BELT
0810-103
(F)-(I)
C-03
A
B
C
0810-104
PASSENGER-SIDE PRE-TENSIONER SEAT BELT

[ ] NOT USED
*: VACANT

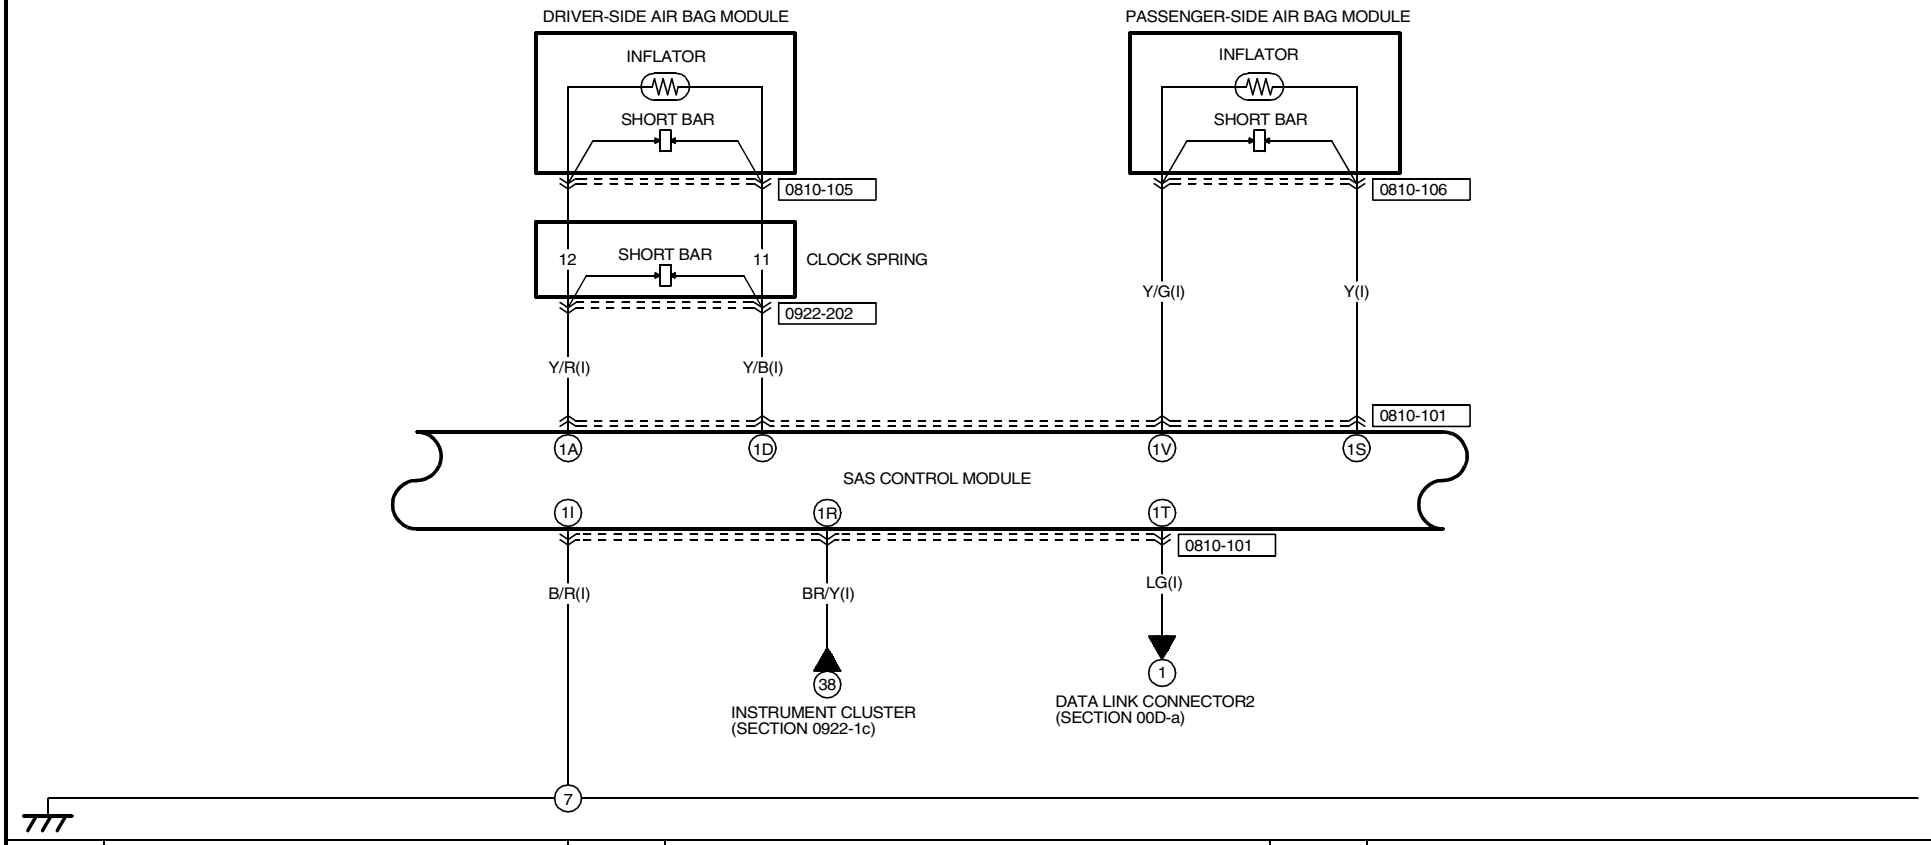

0810-101
SAS CONTROL MODULE

(I)

1V	1S	1P	1M	1J	1G	1D	1A
Y/G	Y	*	*	*	*	Y/B	Y/R

1W	1T	1Q		1H	1E	1B
B/L	LG	O		BR/B	B/W	B/R
1X	1U	1R		1I	1F	1C
*	L	BR/Y		B/R	*	*

0810-105
DRIVER-SIDE AIR BAG MODULE(CLOCK SPRING)

12	11

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-106
PASSENGER-SIDE AIR BAG MODULE(I)

Y/G	Y

0922-202
INSTRUMENT PANEL(I)-CLOCK SPRING


(I)

* [R/W]	* [R/L]	R/B	G/W	B/P	LG/R
Y/R	Y/B	*	*	B	V/W


(CLOCK SPRING)

1	2	3	4	*	*
7	8	*	*	11	12

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

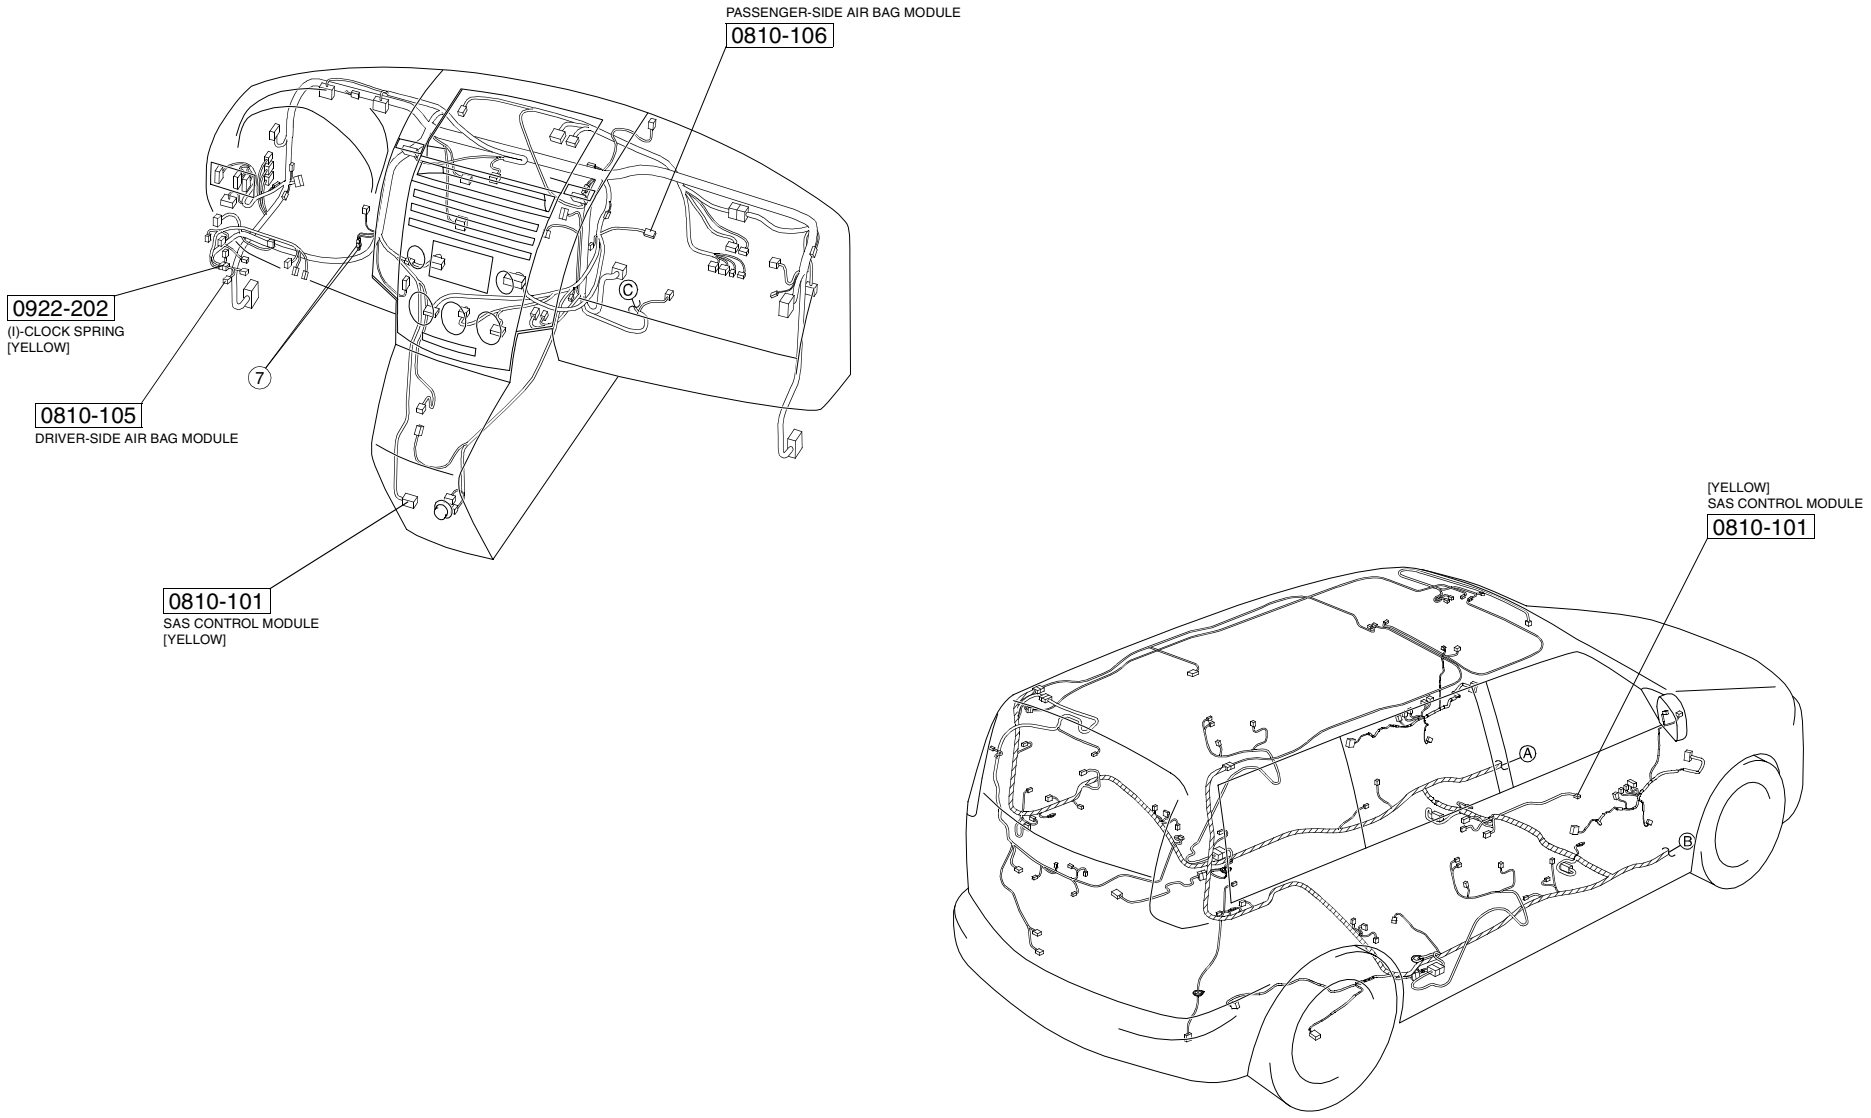
PASSENGER-SIDE AIR BAG MODULE
0810-106
0922-202
(I)-CLOCK SPRING
[YELLOW]
0810-105
DRIVER-SIDE AIR BAG MODULE
0810-101
SAS CONTROL MODULE
[YELLOW]
[YELLOW]
SAS CONTROL MODULE
0810-101
C
7
A
B

AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)

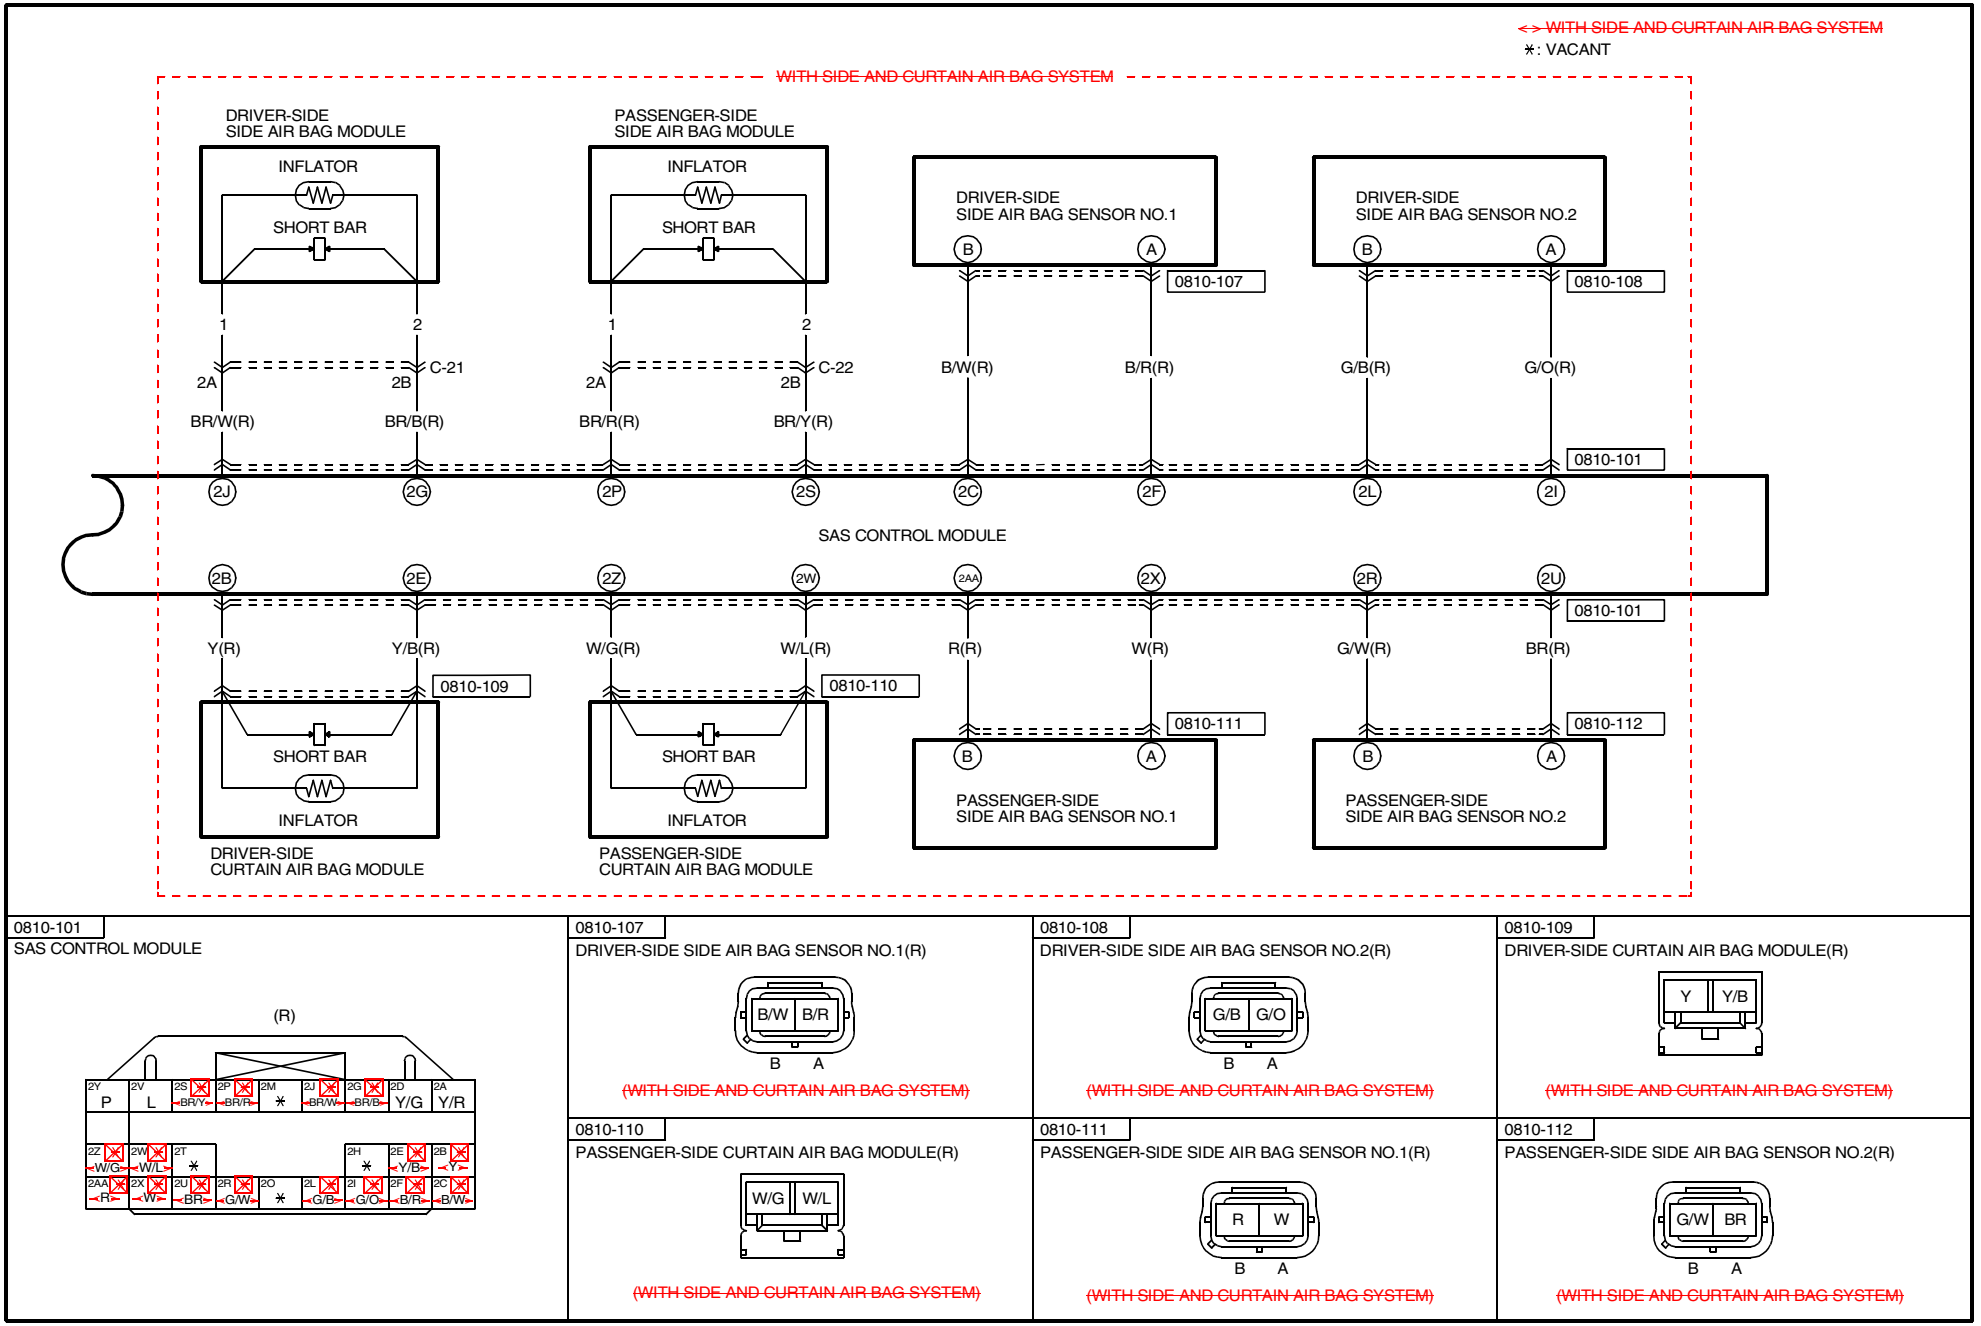

0810-101
SAS CONTROL MODULE

(R)

0810-107
DRIVER-SIDE SIDE AIR BAG SENSOR NO.1(R)

~~(WITH SIDE AND CURTAIN AIR BAG SYSTEM)~~

0810-108
DRIVER-SIDE SIDE AIR BAG SENSOR NO.2(R)

~~(WITH SIDE AND CURTAIN AIR BAG SYSTEM)~~

0810-109
DRIVER-SIDE CURTAIN AIR BAG MODULE(R)

~~(WITH SIDE AND CURTAIN AIR BAG SYSTEM)~~

0810-110
PASSENGER-SIDE CURTAIN AIR BAG MODULE(R)


~~(WITH SIDE AND CURTAIN AIR BAG SYSTEM)~~

0810-111
PASSENGER-SIDE SIDE AIR BAG SENSOR NO.1(R)


~~(WITH SIDE AND CURTAIN AIR BAG SYSTEM)~~

0810-112
PASSENGER-SIDE SIDE AIR BAG SENSOR NO.2(R)

~~(WITH SIDE AND CURTAIN AIR BAG SYSTEM)~~

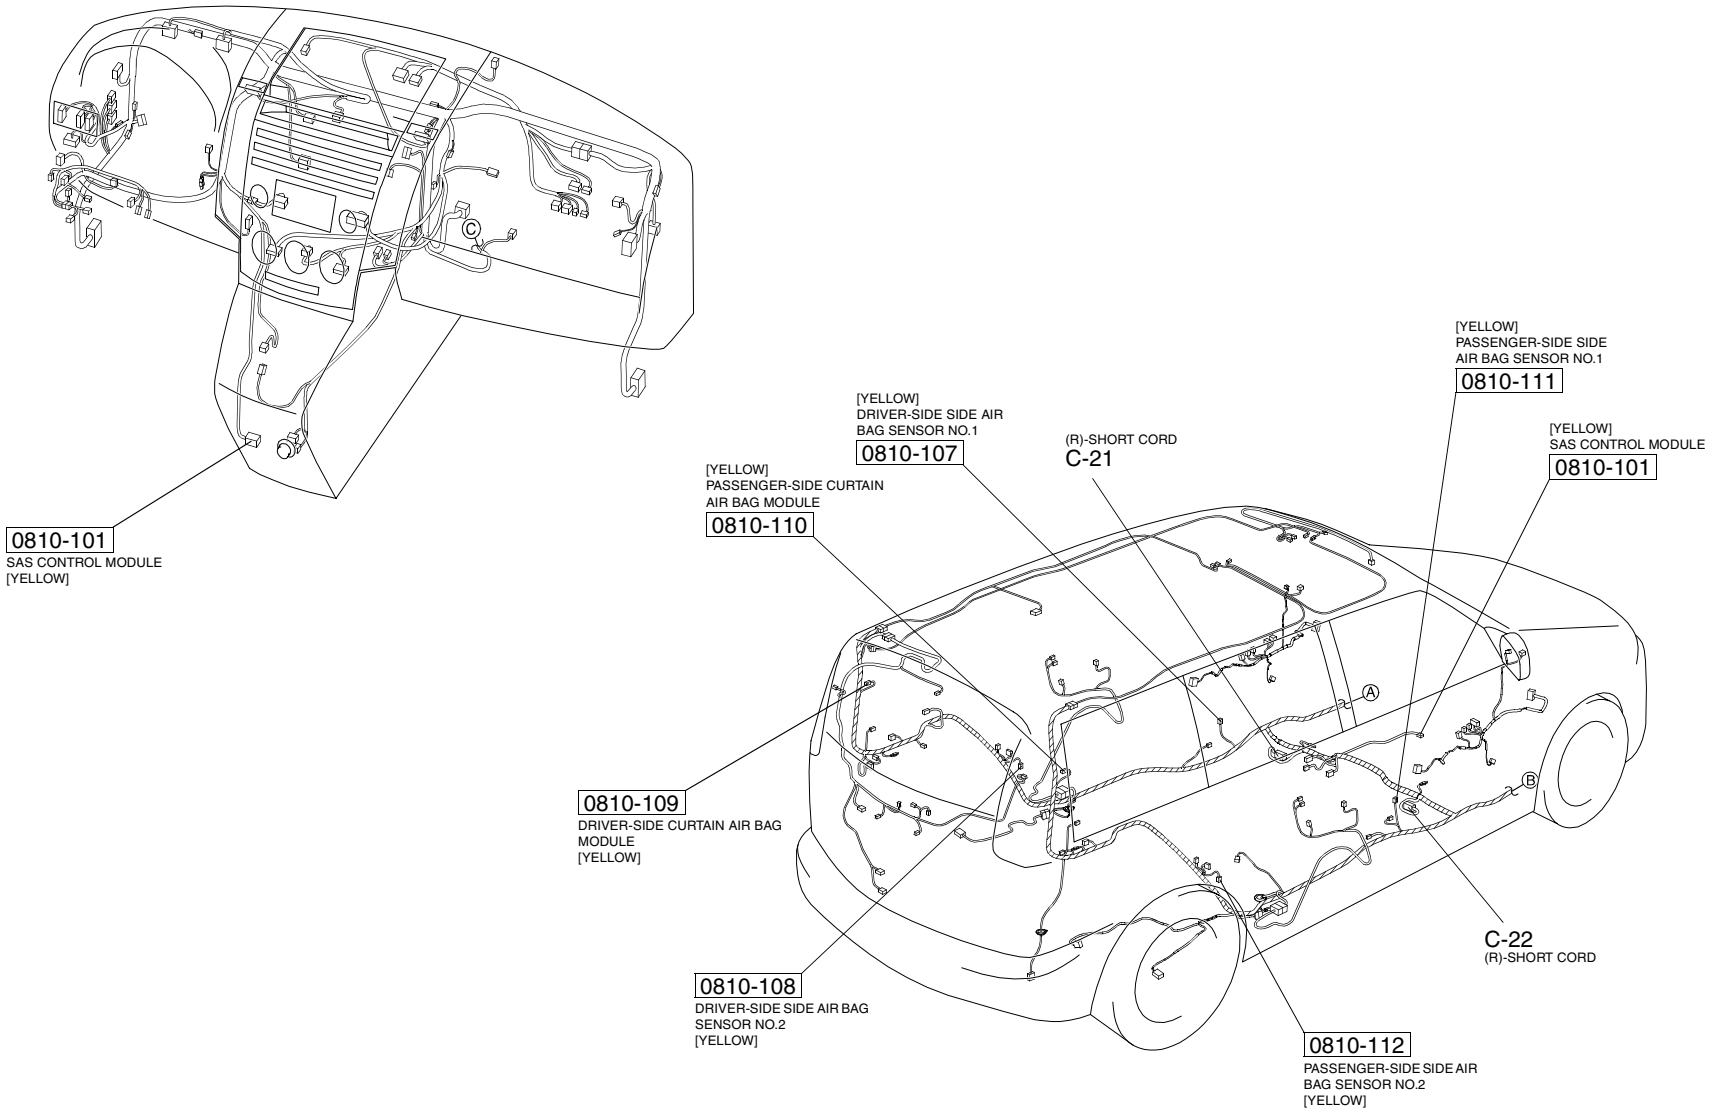
0810-101
SAS CONTROL MODULE
[YELLOW]
[YELLOW]
PASSENGER-SIDE SIDE
AIR BAG SENSOR NO.1
0810-111
[YELLOW]
DRIVER-SIDE SIDE AIR
BAG SENSOR NO.1
0810-107
(R)-SHORT CORD
C-21
[YELLOW]
SAS CONTROL MODULE
0810-101
[YELLOW]
PASSENGER-SIDE CURTAIN
AIR BAG MODULE
0810-110
A
B
0810-109
DRIVER-SIDE CURTAIN AIR BAG
MODULE
[YELLOW]
C-22
(R)-SHORT CORD
0810-108
DRIVER-SIDE SIDE AIR BAG
SENSOR NO.2
[YELLOW]
0810-112
PASSENGER-SIDE SIDE AIR
BAG SENSOR NO.2
[YELLOW]

REAR WINDOW DEFROSTER ~~(INCLUDES HEATED OUTER MIRROR INFORMATION)~~

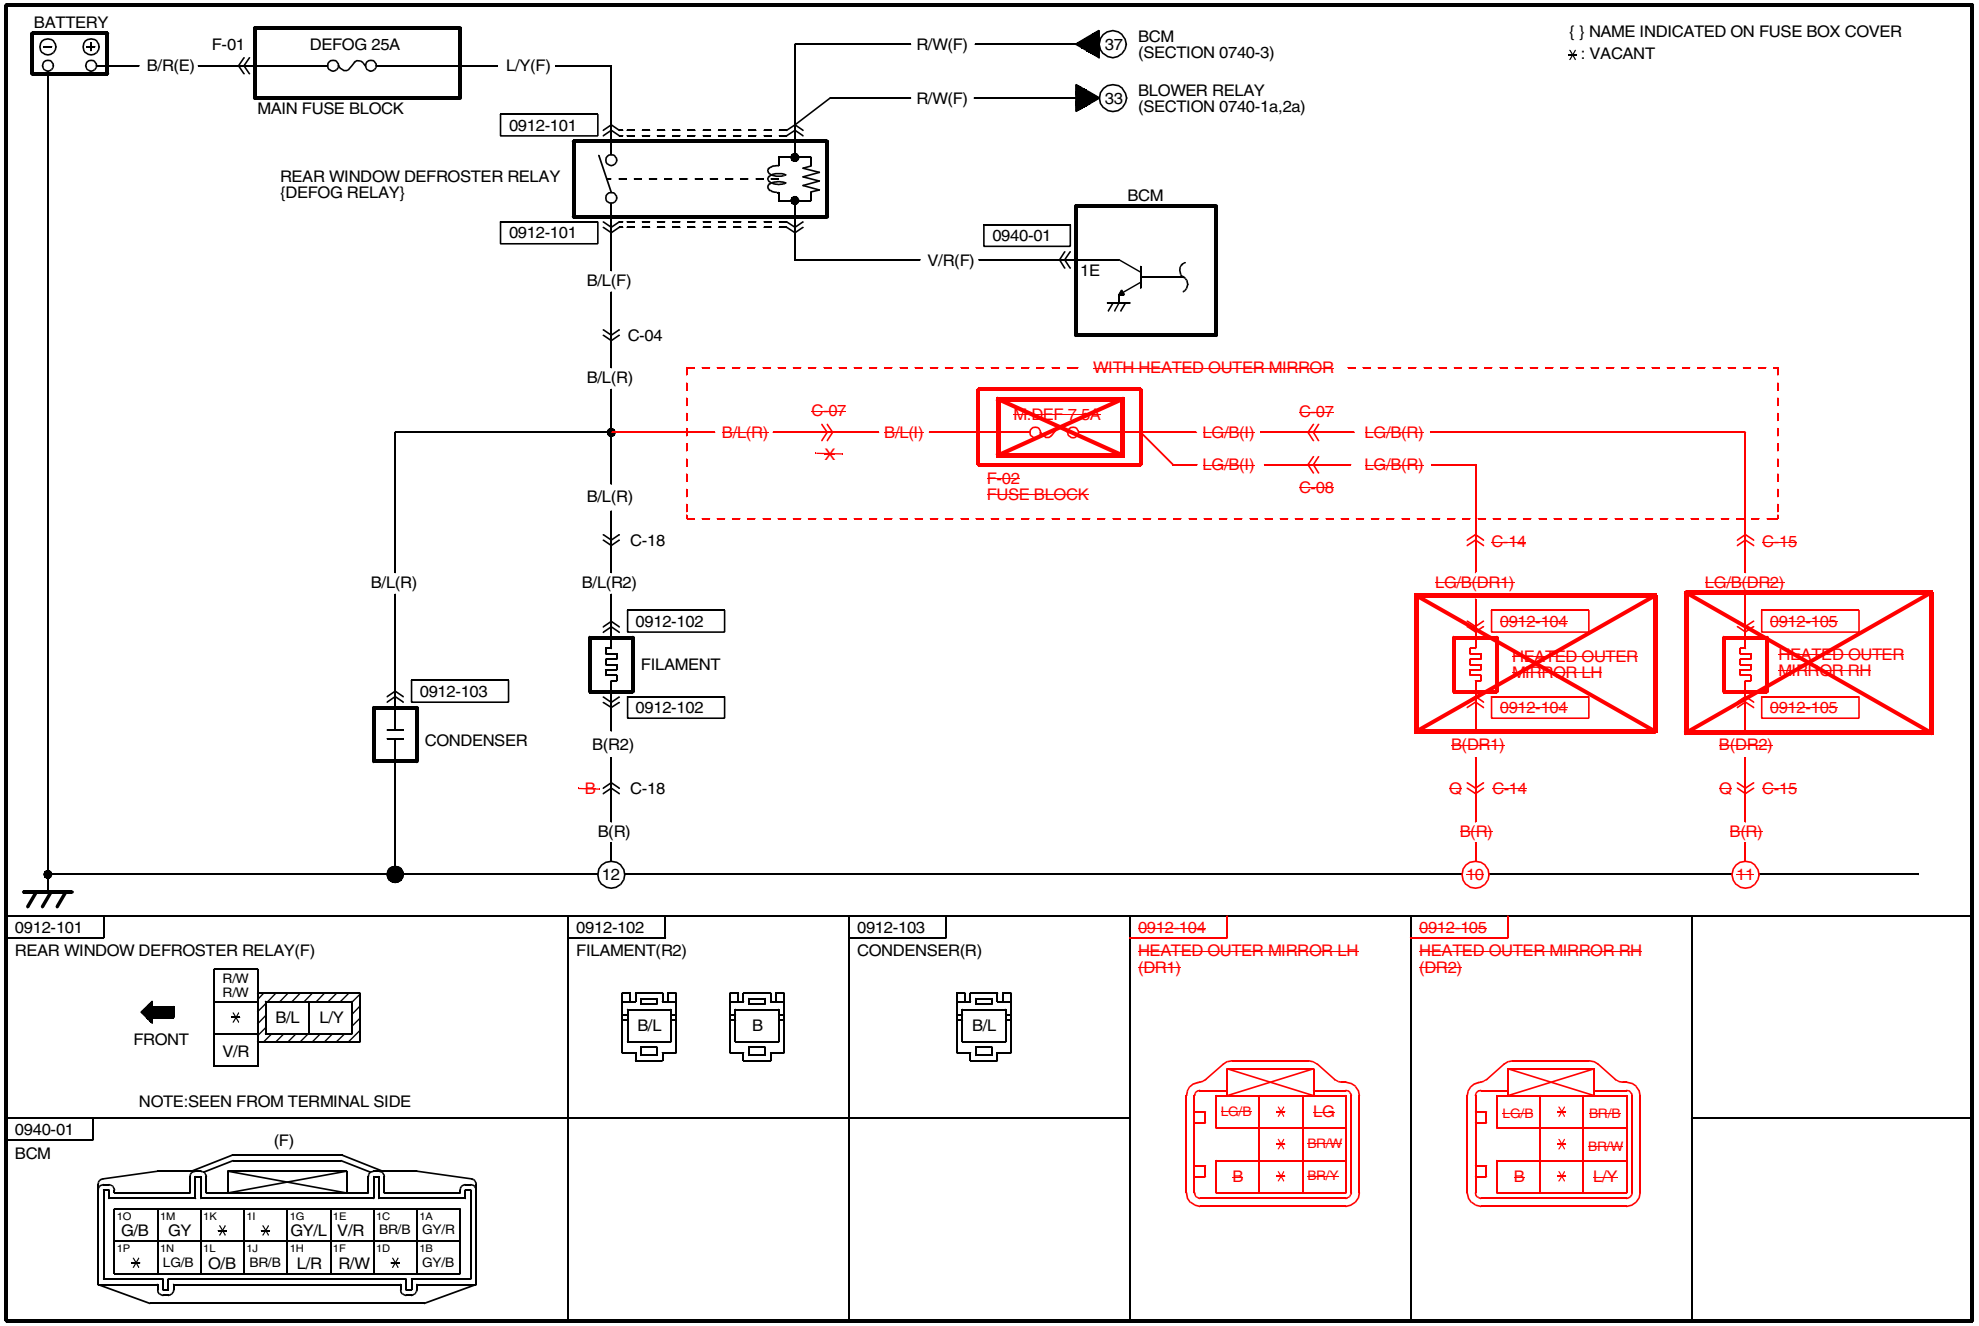

0912-101
REAR WINDOW DEFROSTER RELAY(F)

NOTE:SEEN FROM TERMINAL SIDE


0912-102
FILAMENT(R2)


0912-103
CONDENSER(R)


~~0912-104~~
~~HEATED OUTER MIRROR LH (DR1)~~


~~0912-105~~
~~HEATED OUTER MIRROR RH (DR2)~~

0940-01
BCM

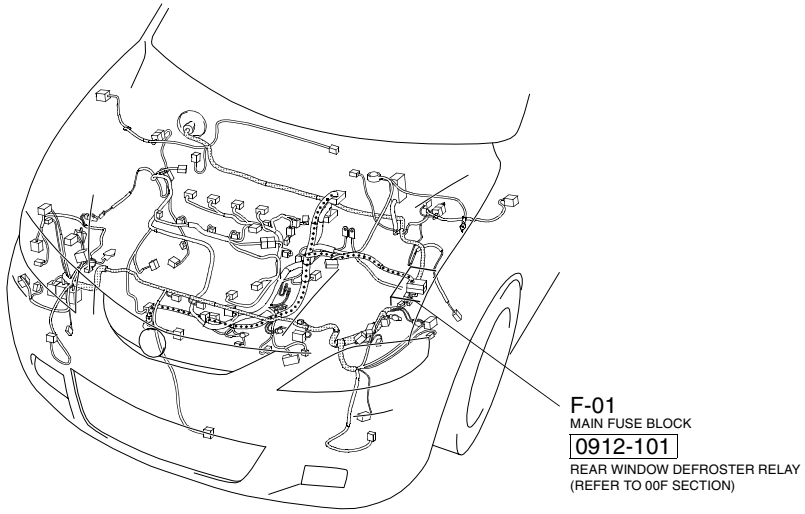

F-01
MAIN FUSE BLOCK
0912-101
REAR WINDOW DEFROSTER RELAY
(REFER TO 00F SECTION)

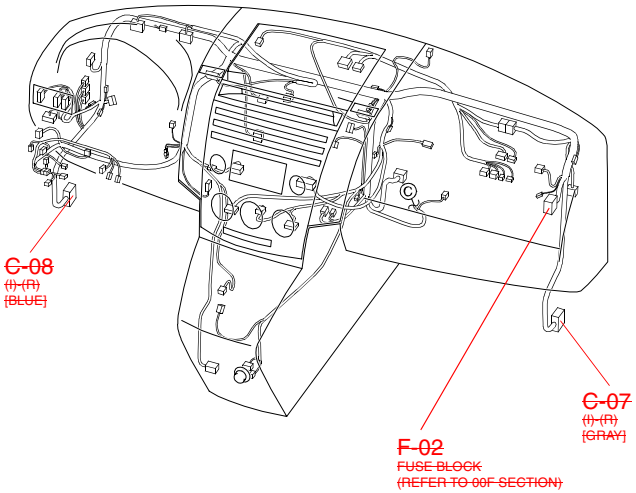
~~C-08~~
~~(I)-(R)~~
~~[BLUE]~~
~~C-07~~
~~(I)-(R)~~
~~[GRAY]~~
~~F-02~~
~~FUSE BLOCK~~
~~(REFER TO 00F SECTION)~~

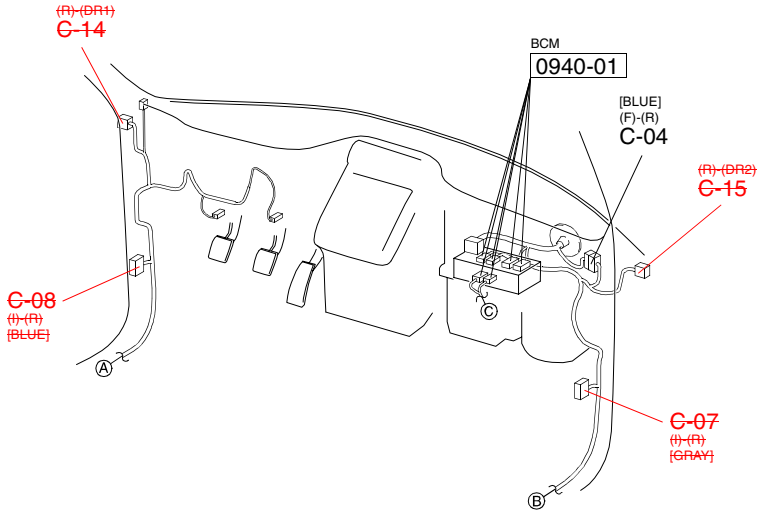
~~(R)-(DR1)~~
~~C-14~~
BCM
0940-01
[BLUE]
(F)-(R)
C-04
~~(R)-(DR2)~~
~~C-15~~
~~C-08~~
~~(I)-(R)~~
~~[BLUE]~~
~~C-07~~
~~(I)-(R)~~
~~[GRAY]~~

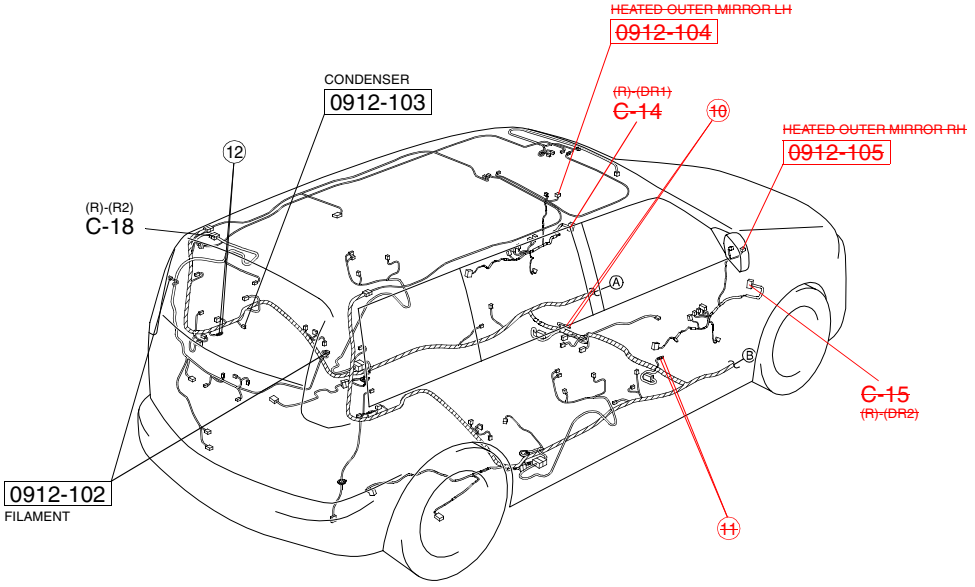

~~HEATED OUTER MIRROR LH~~
~~0912-104~~
CONDENSER
0912-103
~~(R)-(DR1)~~
~~C-14~~
~~10~~
~~HEATED OUTER MIRROR RH~~
~~0912-105~~
(R)-(R2)
C-18
12
~~C-15~~
~~(R)-(DR2)~~
0912-102
FILAMENT
~~11~~


POWER WINDOW SYSTEM

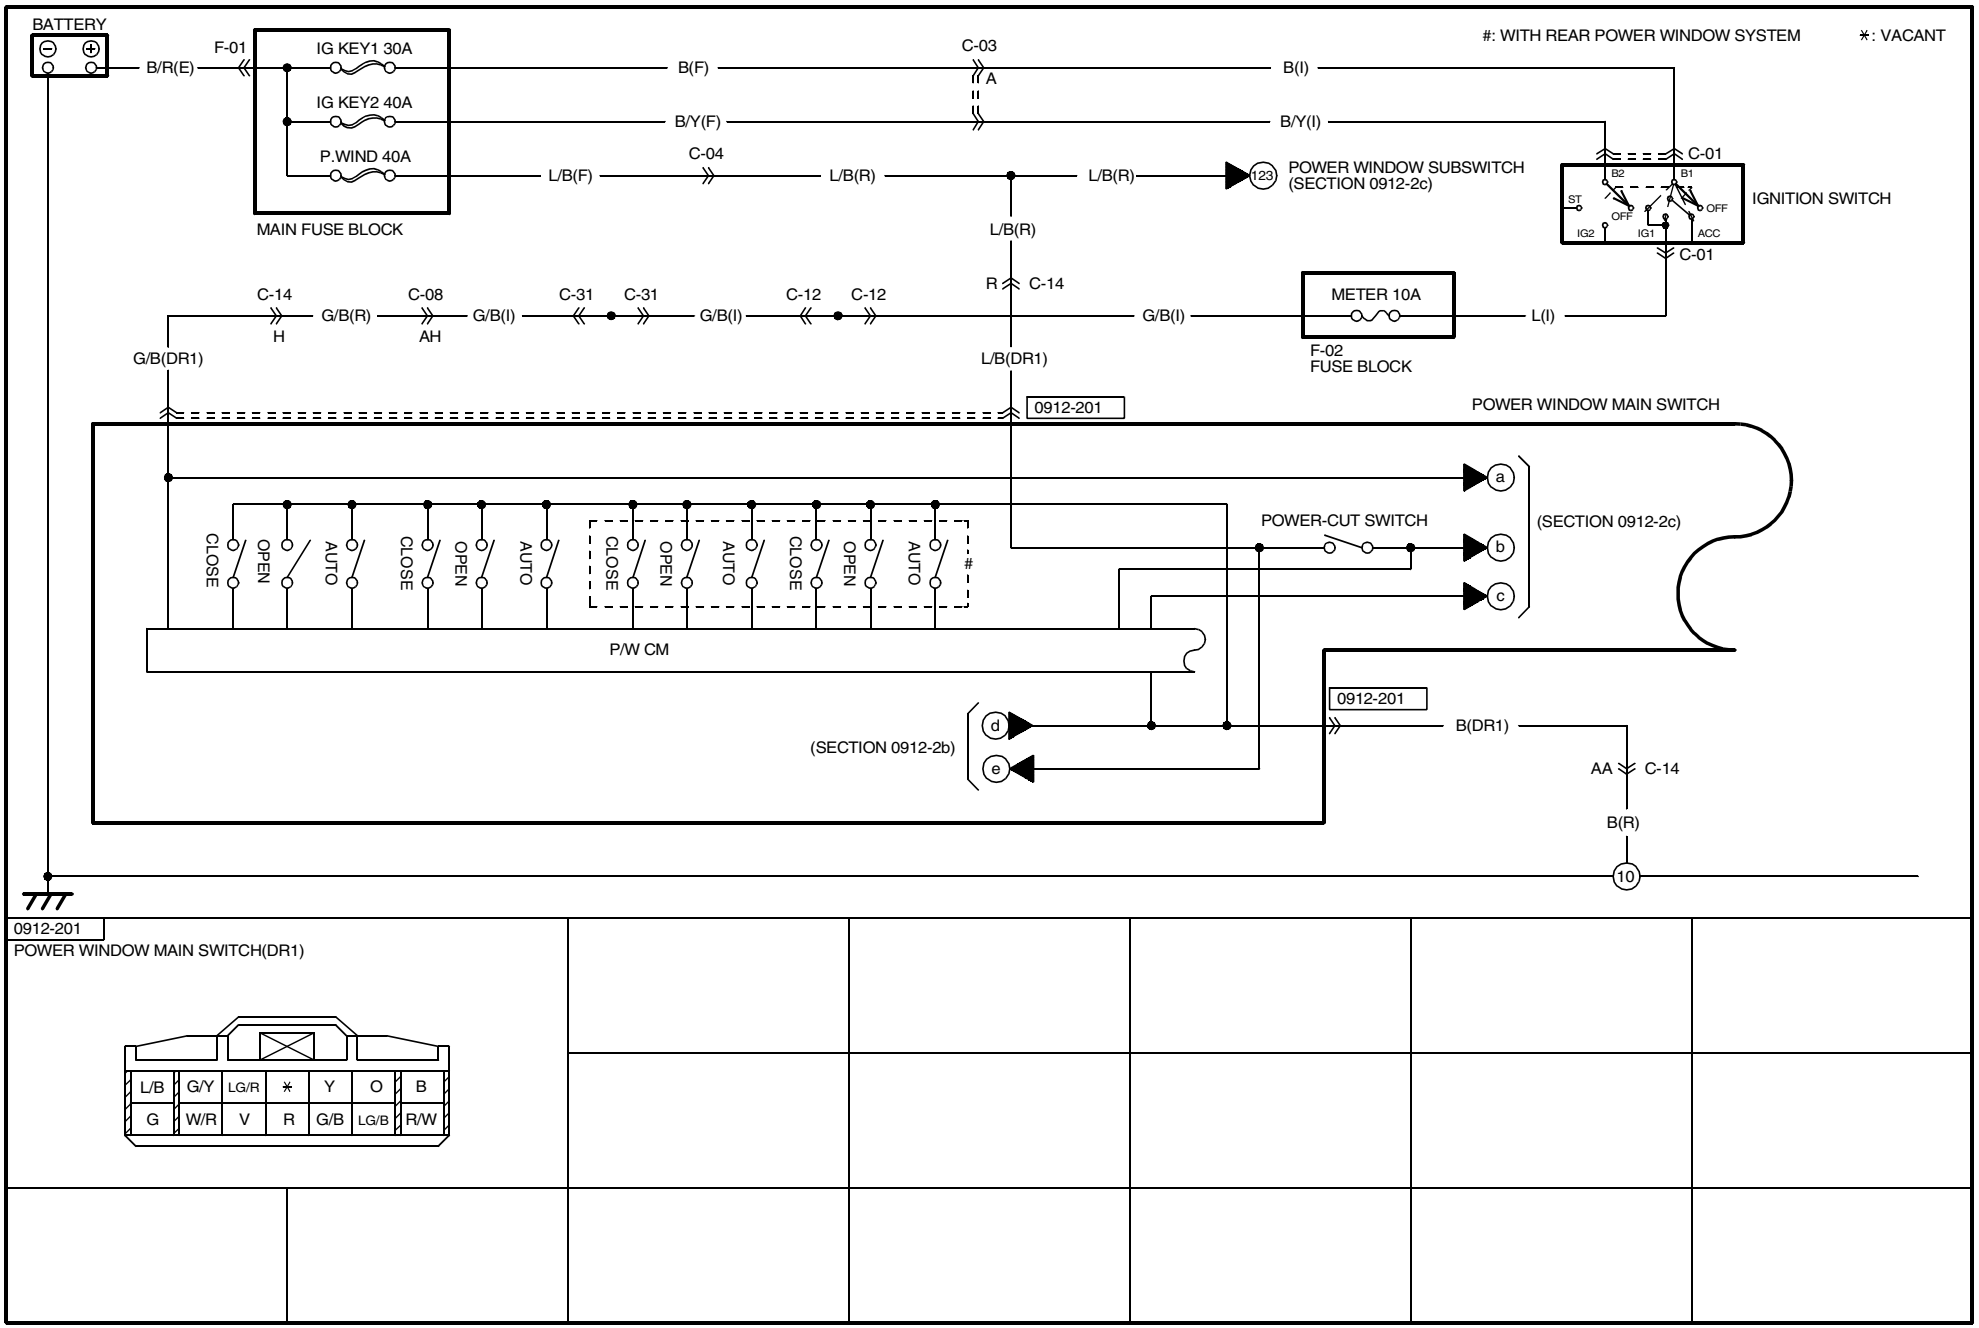



0912-201

POWER WINDOW MAIN SWITCH(DR1)

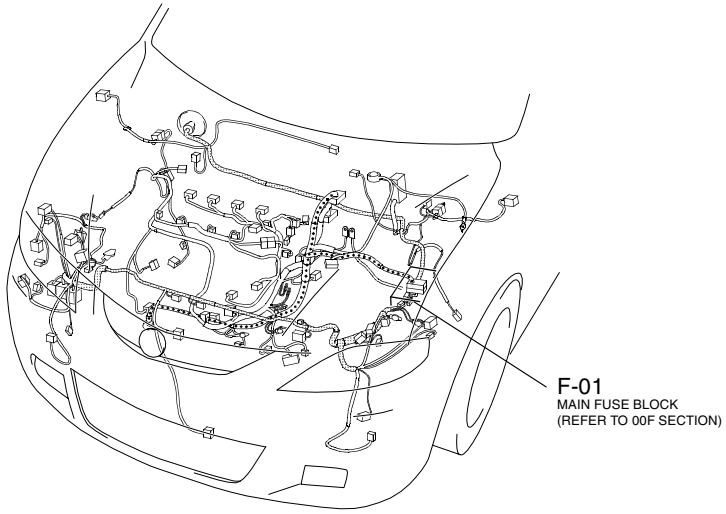
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

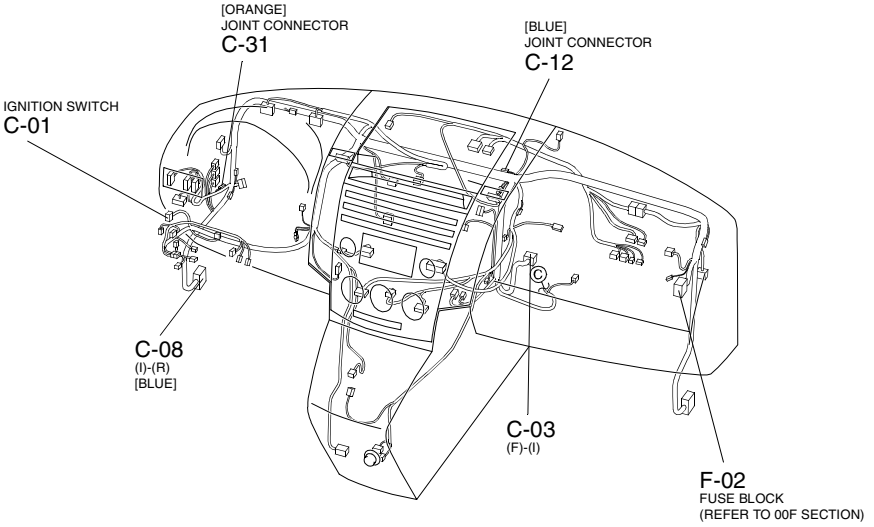

[ORANGE]
JOINT CONNECTOR
C-31
[BLUE]
JOINT CONNECTOR
C-12
IGNITION SWITCH
C-01
C-08
(I)-(R)
[BLUE]
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)

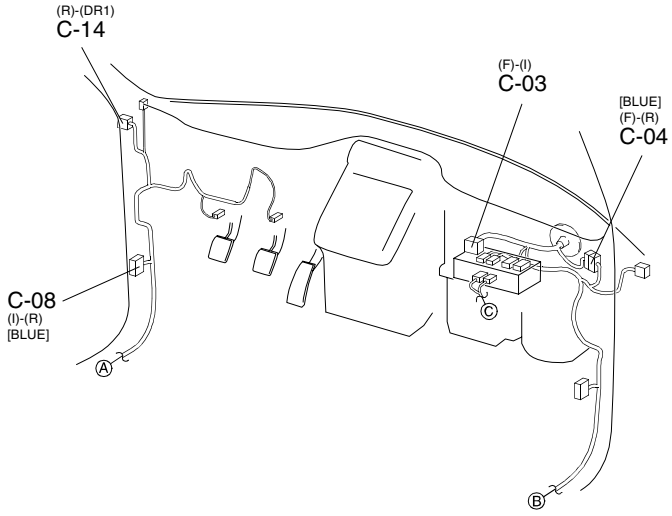
(R)-(DR1)
C-14
(F)-(I)
C-03
[BLUE]
(F)-(R)
C-04
C-08
(I)-(R)
[BLUE]
A
B
C

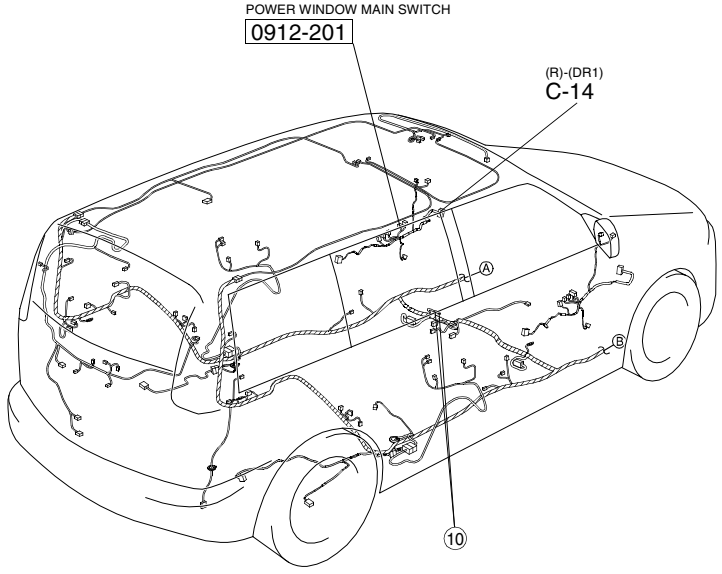

POWER WINDOW MAIN SWITCH
0912-201
(R)-(DR1)
C-14
A
B
10

<-> WITH DOUBLE LOCKING SYSTEM


*: VACANT

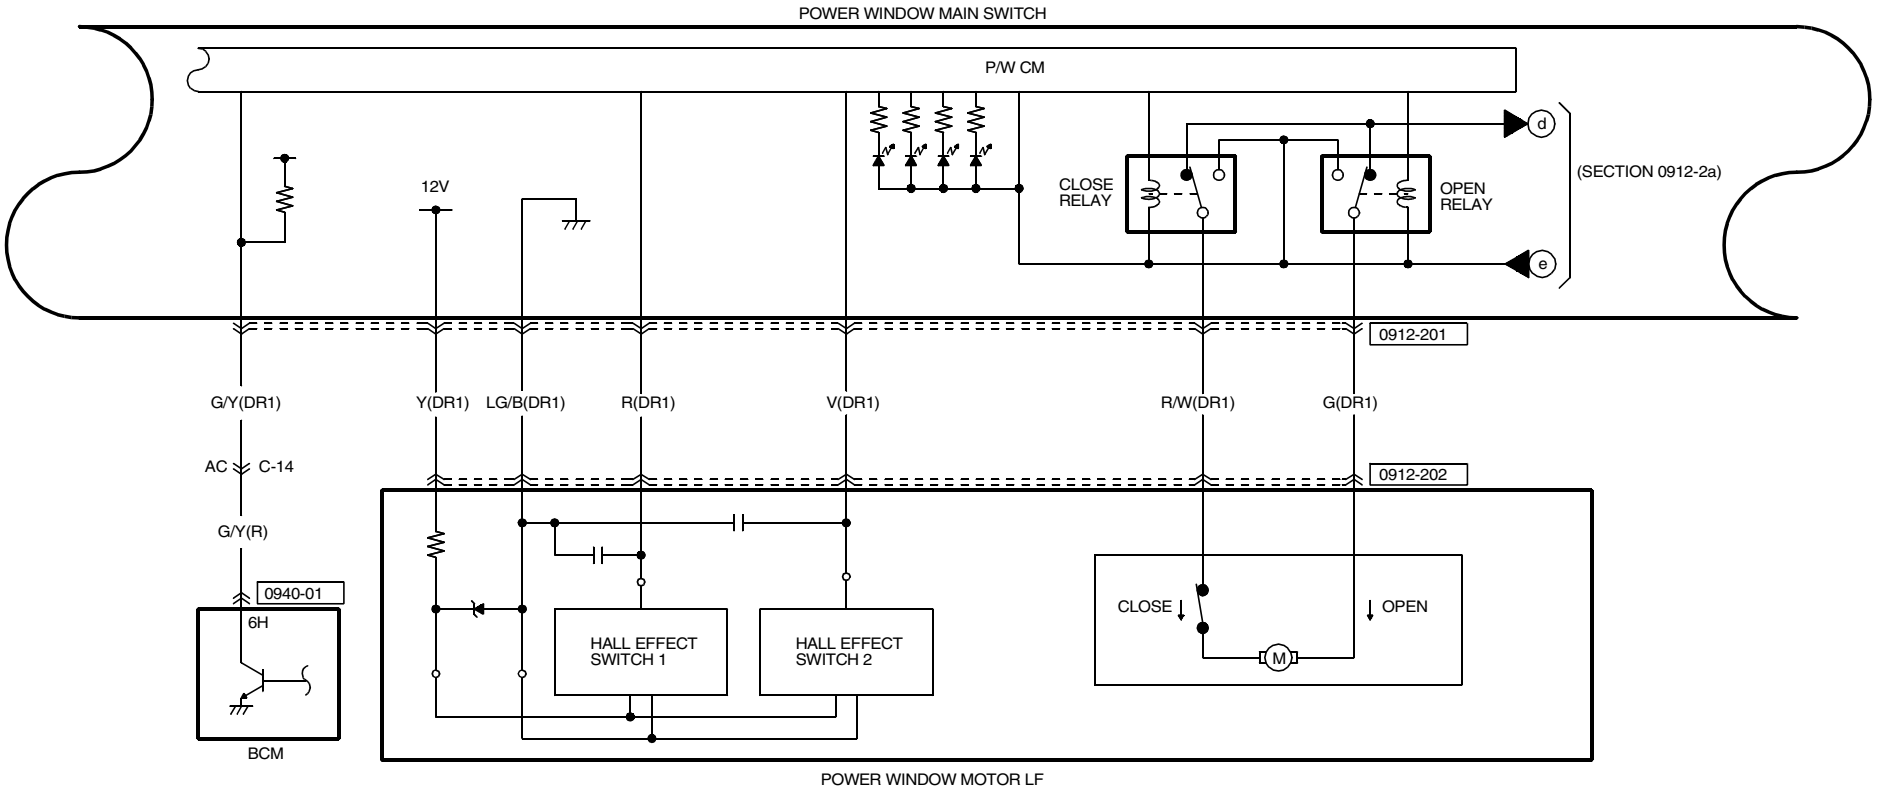

0912-201
POWER WINDOW MAIN SWITCH(DR1)

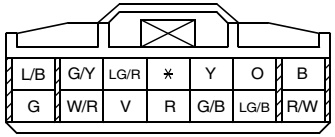



0912-202
POWER WINDOW MOTOR LF(DR1)





0940-01
BCM

(R)



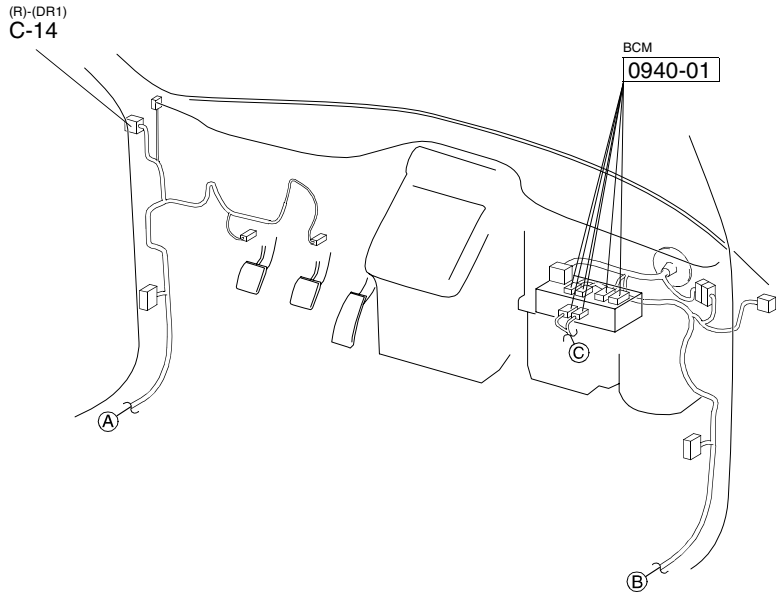
(R)-(DR1)
C-14
BCM
0940-01
A
B
C

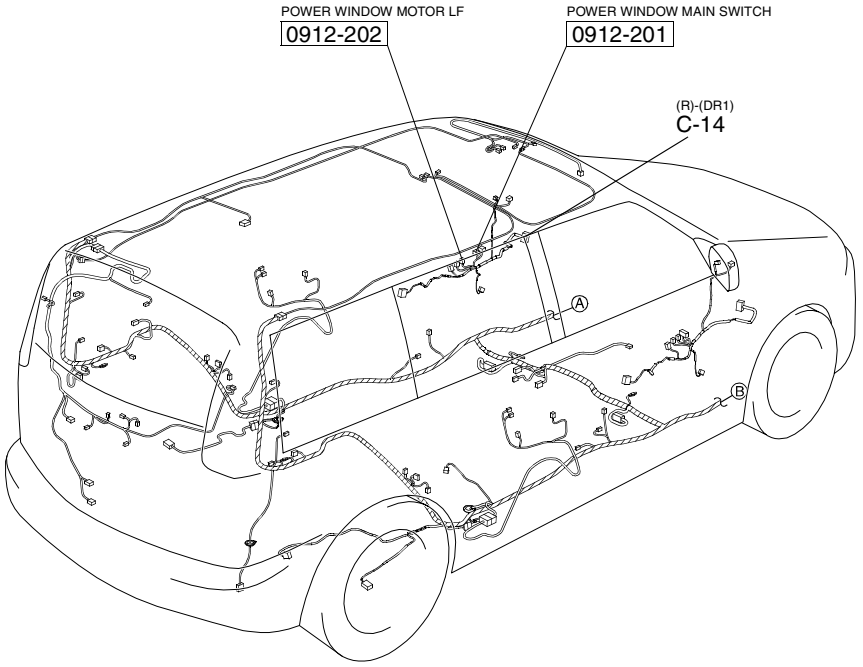
POWER WINDOW MOTOR LF
0912-202
POWER WINDOW MAIN SWITCH
0912-201
(R)-(DR1)
C-14
A
B

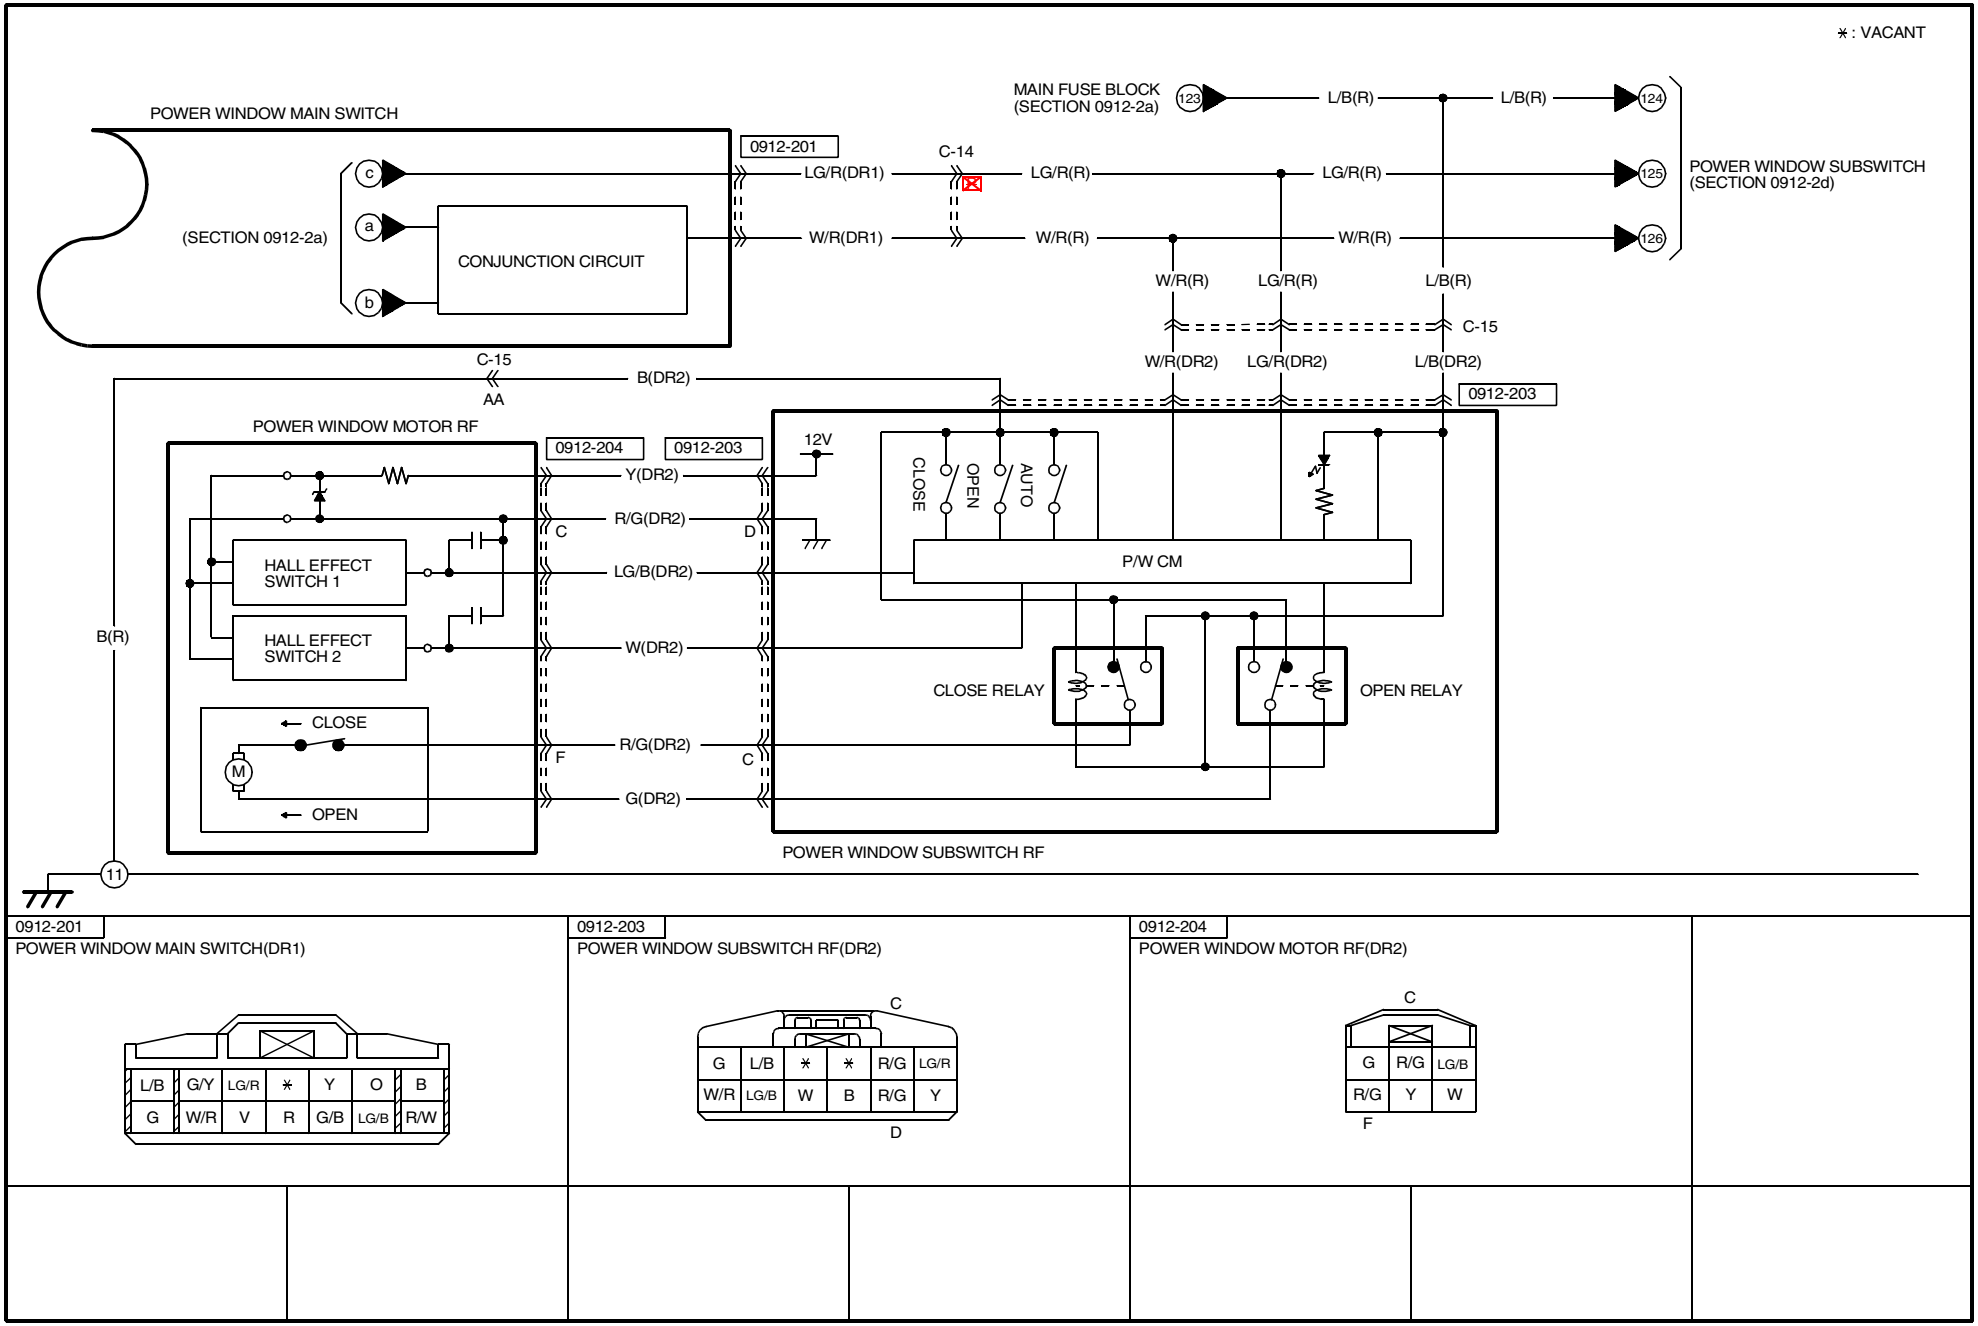

0912-201
POWER WINDOW MAIN SWITCH(DR1)

L/B	G/Y	LG/R	∗	Y	O	B
G	W/R	V	R	G/B	LG/B	R/W

0912-203
POWER WINDOW SUBSWITCH RF(DR2)

C

G	L/B	∗	∗	R/G	LG/R
W/R	LG/B	W	B	R/G	Y


D


0912-204
POWER WINDOW MOTOR RF(DR2)


C

G	R/G	LG/B
R/G	Y	W


F

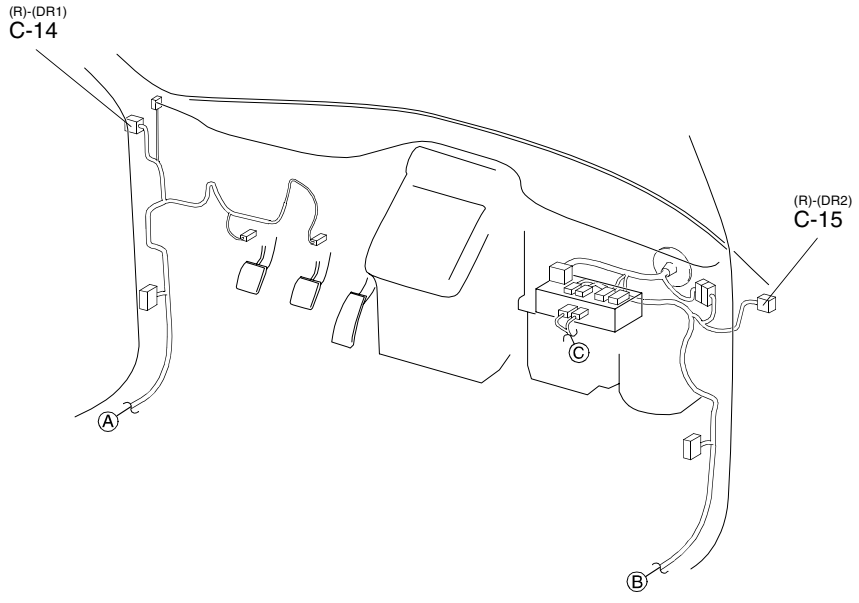
(R)-(DR1)
C-14
(R)-(DR2)
C-15
A
B
C

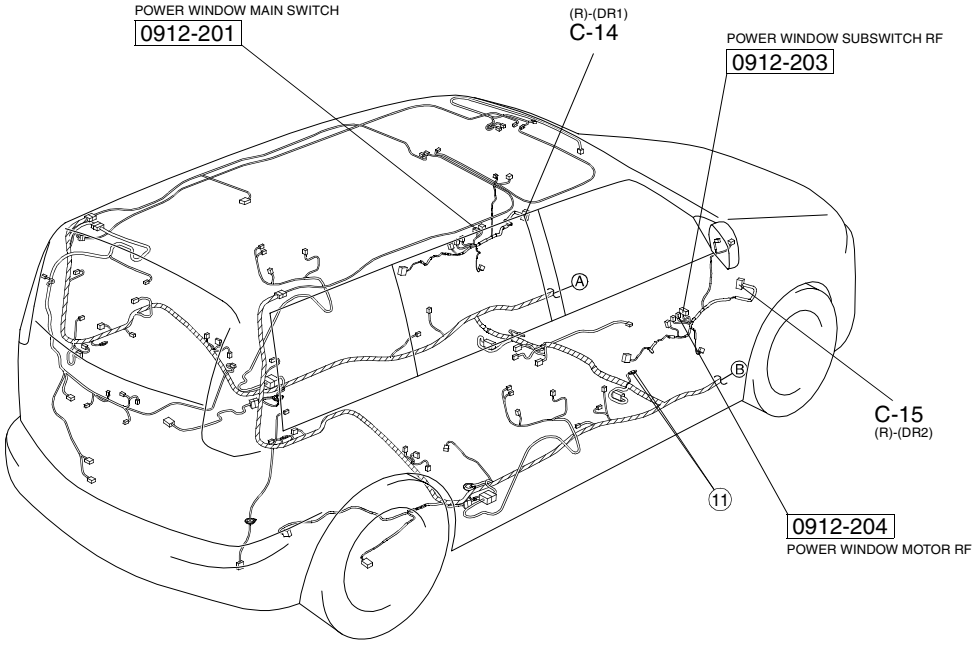
POWER WINDOW MAIN SWITCH
0912-201
(R)-(DR1)
C-14
POWER WINDOW SUBSWITCH RF
0912-203
A
B
C-15
(R)-(DR2)
11
0912-204
POWER WINDOW MOTOR RF

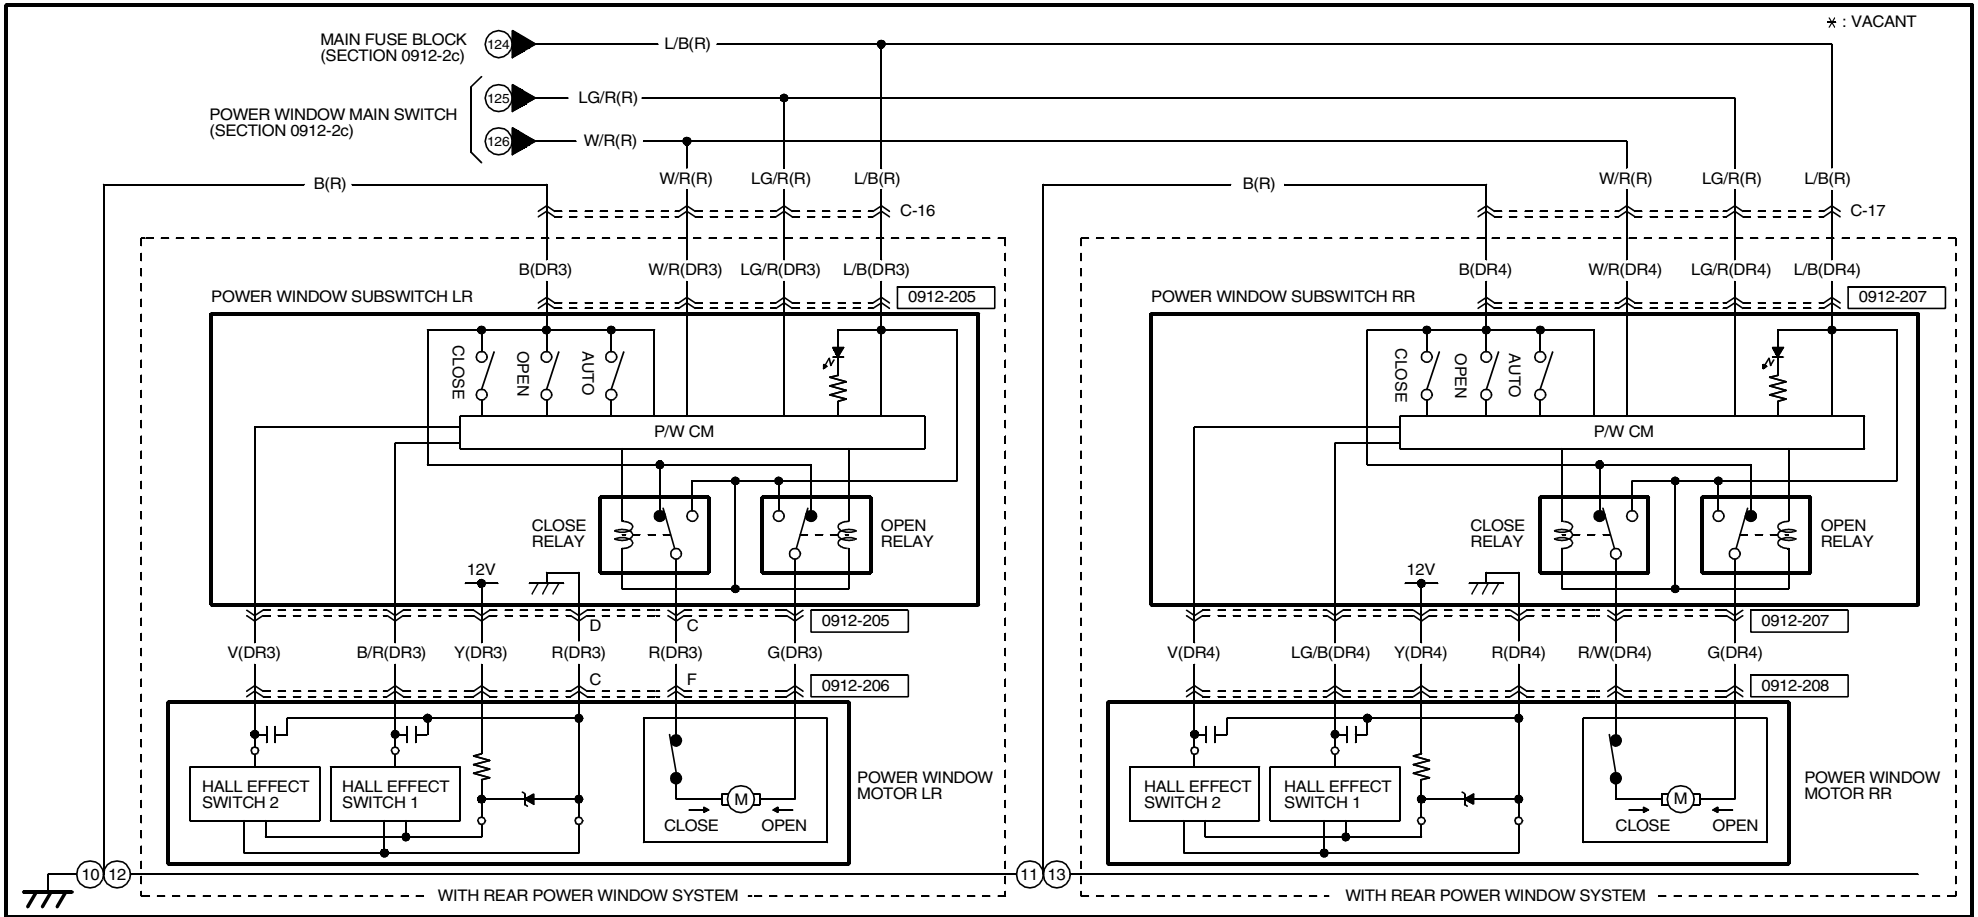


0912-205
POWER WINDOW SUBSWITCH LR(DR3)

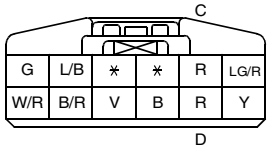


(WITH REAR POWER WINDOW SYSTEM)

0912-206
POWER WINDOW MOTOR LR(DR3)

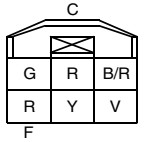


(WITH REAR POWER WINDOW SYSTEM)

0912-207
POWER WINDOW SUBSWITCH RR(DR4)

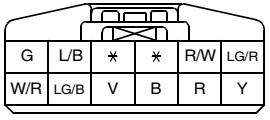


(WITH REAR POWER WINDOW SYSTEM)


0912-208
POWER WINDOW MOTOR RR(DR4)




(WITH REAR POWER WINDOW SYSTEM)

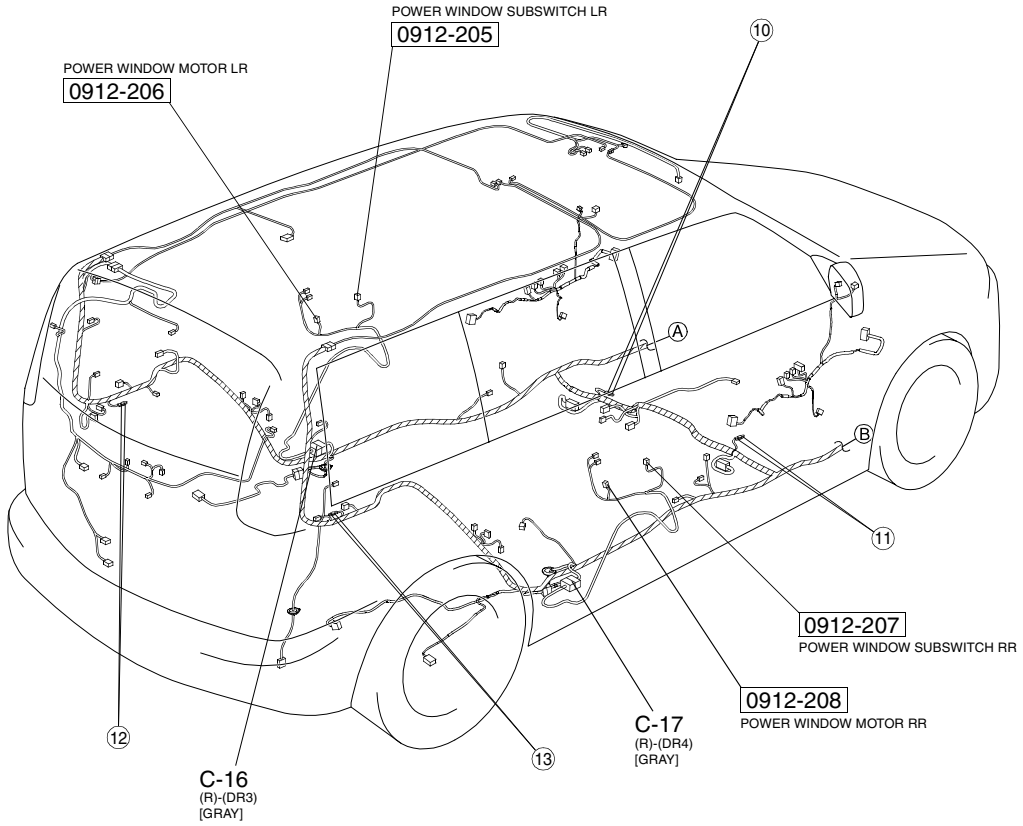

POWER WINDOW SUBSWITCH LR
0912-205
POWER WINDOW MOTOR LR
0912-206
10
A
B
11
0912-207
POWER WINDOW SUBSWITCH RR
0912-208
POWER WINDOW MOTOR RR
C-17
(R)-(DR4)
[GRAY]
12
13
C-16
(R)-(DR3)
[GRAY]


POWER OUTER MIRROR

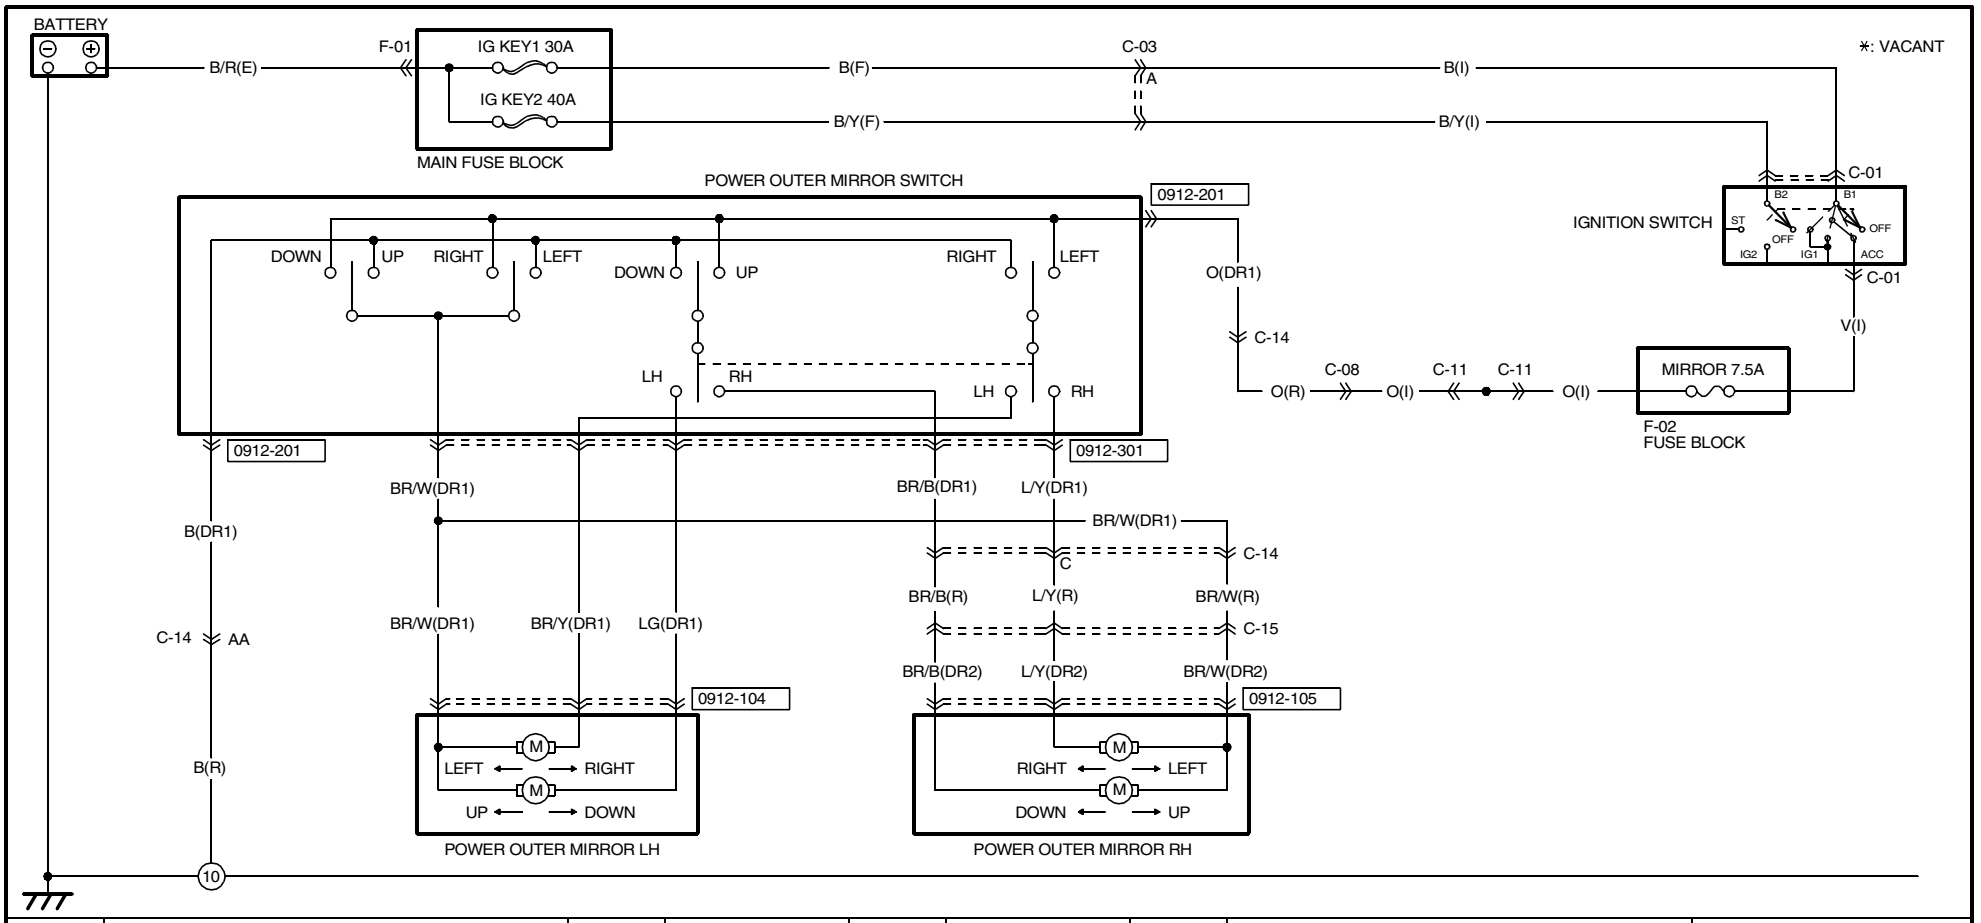



0912-301	0912-104	0912-105	0912-201	
POWER OUTER MIRROR SWITCH(DR1)	POWER OUTER MIRROR LH (DR1)	POWER OUTER MIRROR RH (DR2)	POWER OUTER MIRROR SWITCH(DR1)	




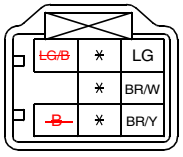


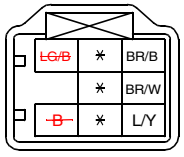


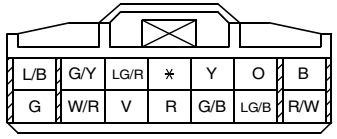

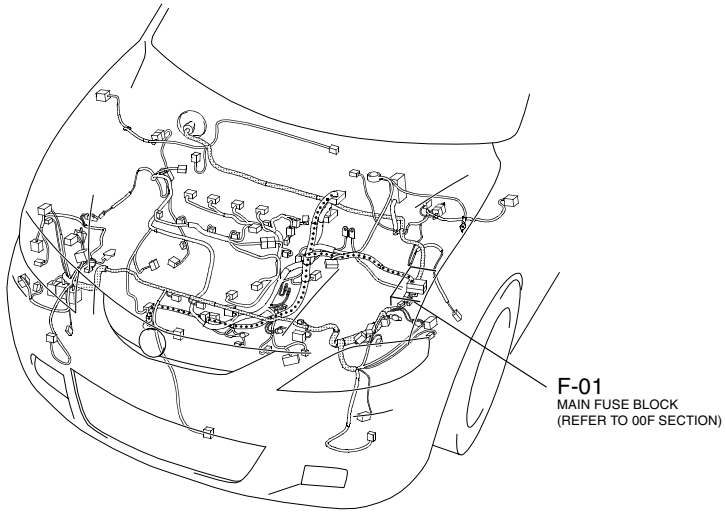
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

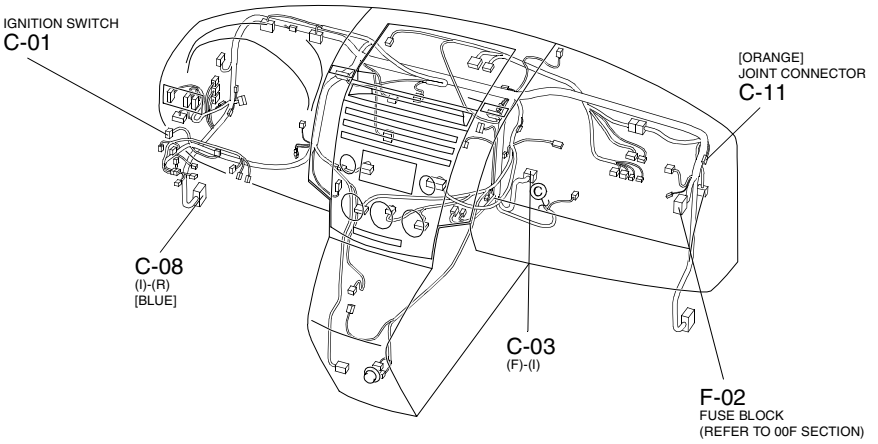

IGNITION SWITCH
C-01
[ORANGE]
JOINT CONNECTOR
C-11
C-08
(I)-(R)
[BLUE]
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)

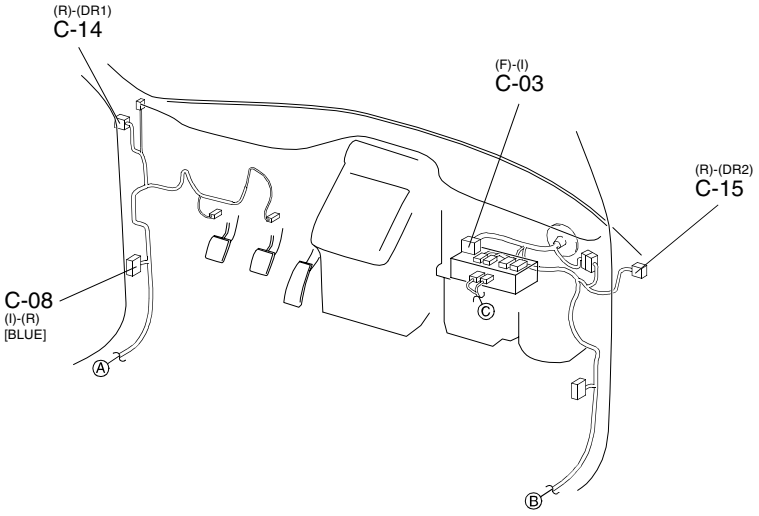
(R)-(DR1)
C-14
(F)-(I)
C-03
(R)-(DR2)
C-15
C-08
(I)-(R)
[BLUE]

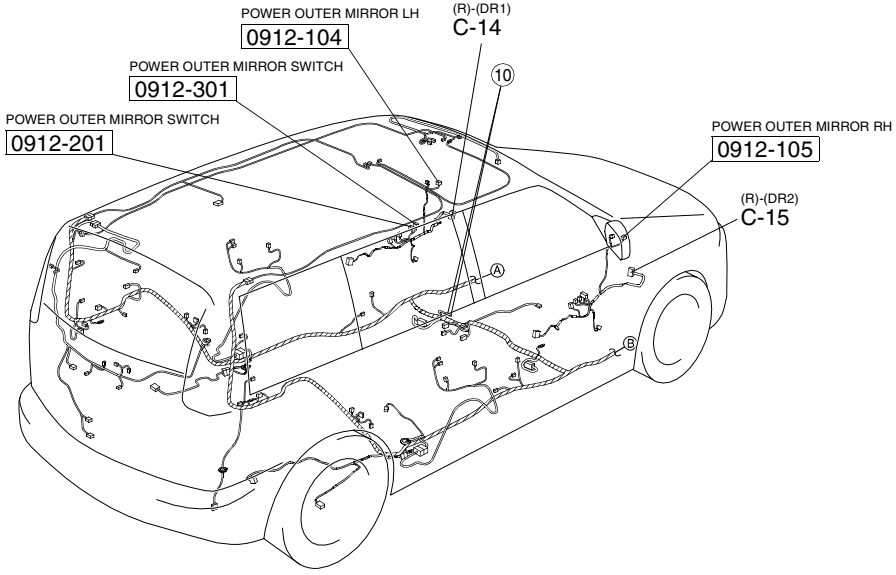
POWER OUTER MIRROR LH
0912-104
(R)-(DR1)
C-14
POWER OUTER MIRROR SWITCH
0912-301
POWER OUTER MIRROR SWITCH
0912-201
POWER OUTER MIRROR RH
0912-105
(R)-(DR2)
C-15

SEAT WARMER


0913

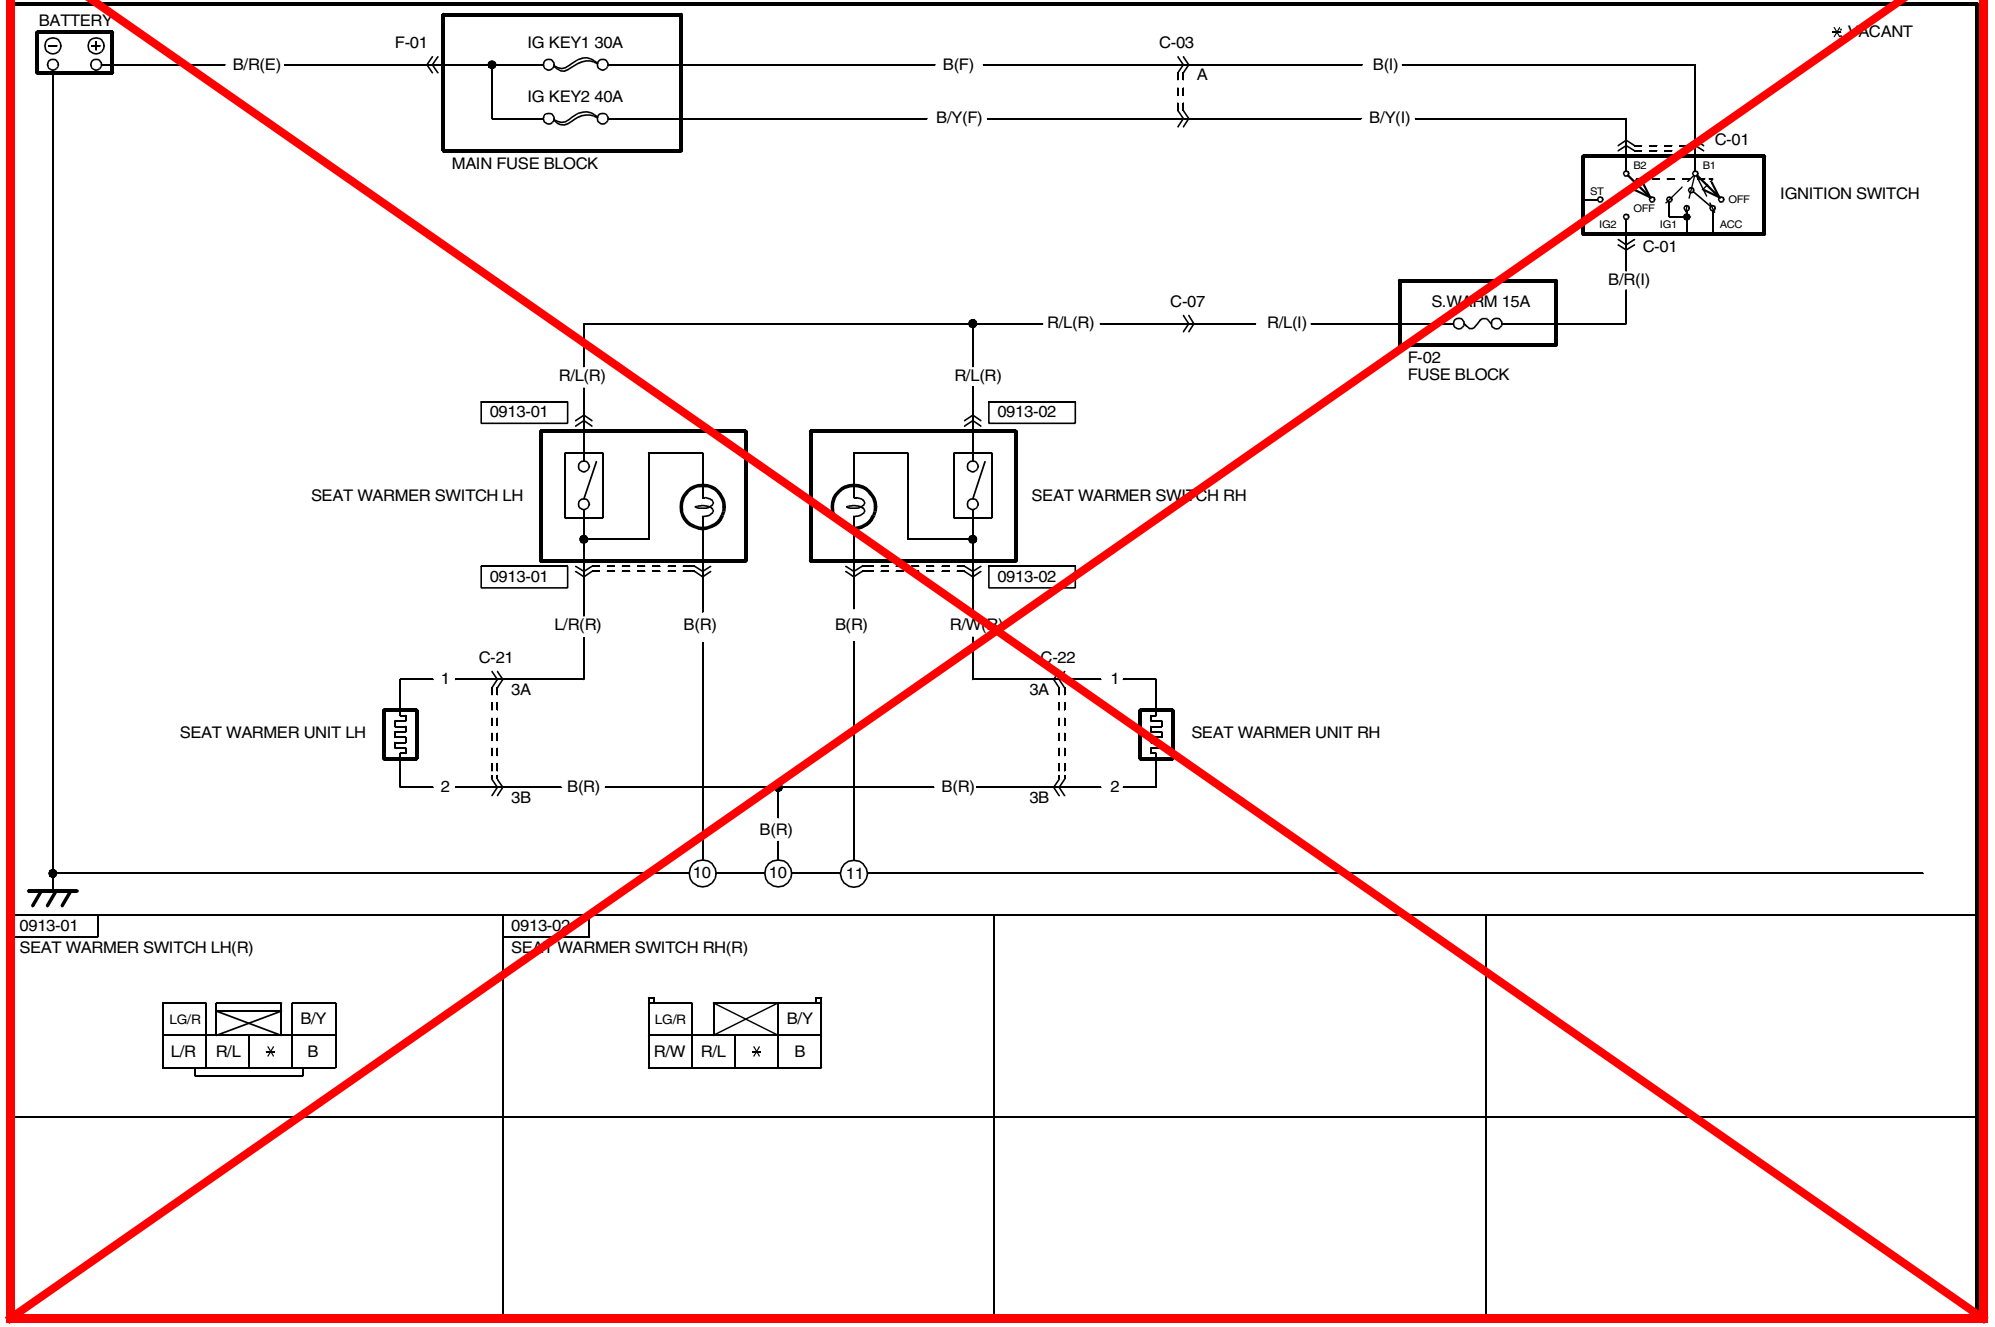



0913-01
SEAT WARMER SWITCH LH(R)


0913-02
SEAT WARMER SWITCH RH(R)

HARNESS SYMBOL : (F) (E) (R)

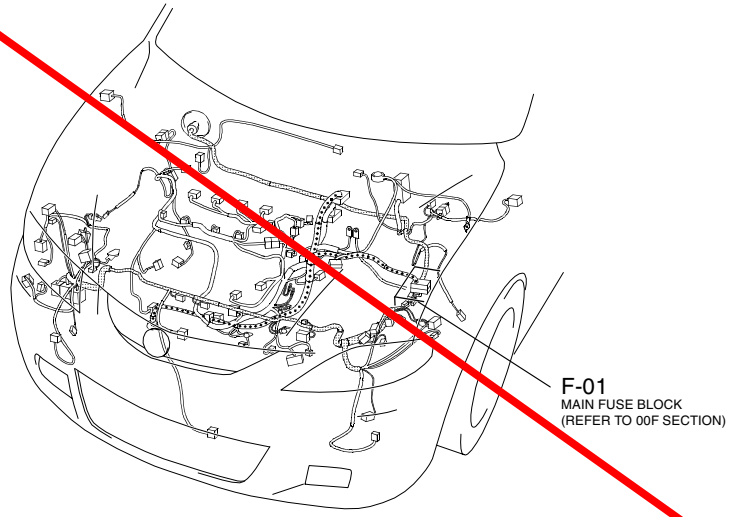


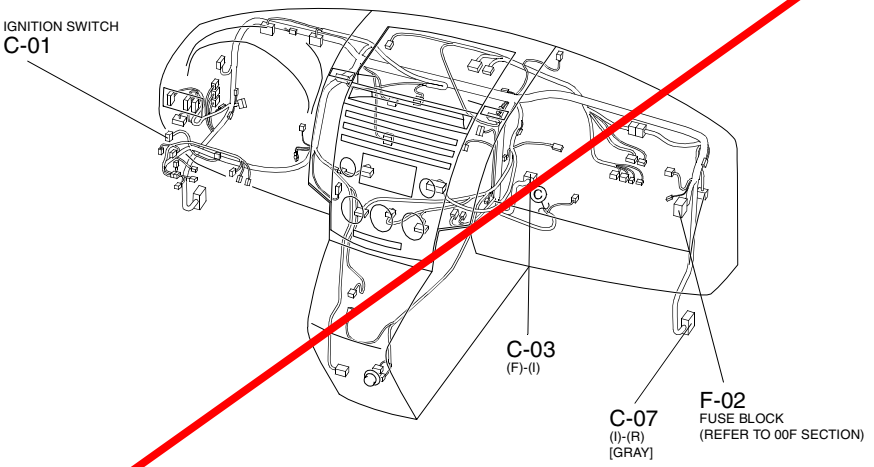

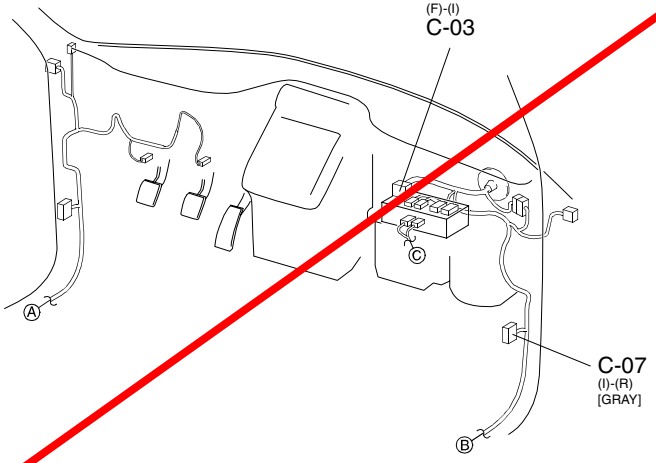

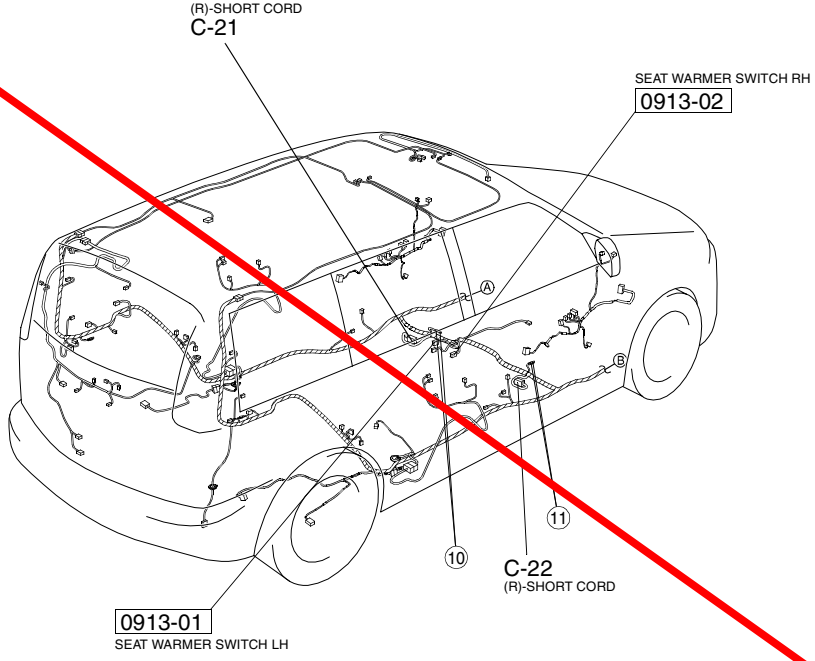

POWER DOOR LOCK SYSTEM ~~(WITHOUT DOUBLE LOCKING SYSTEM)~~

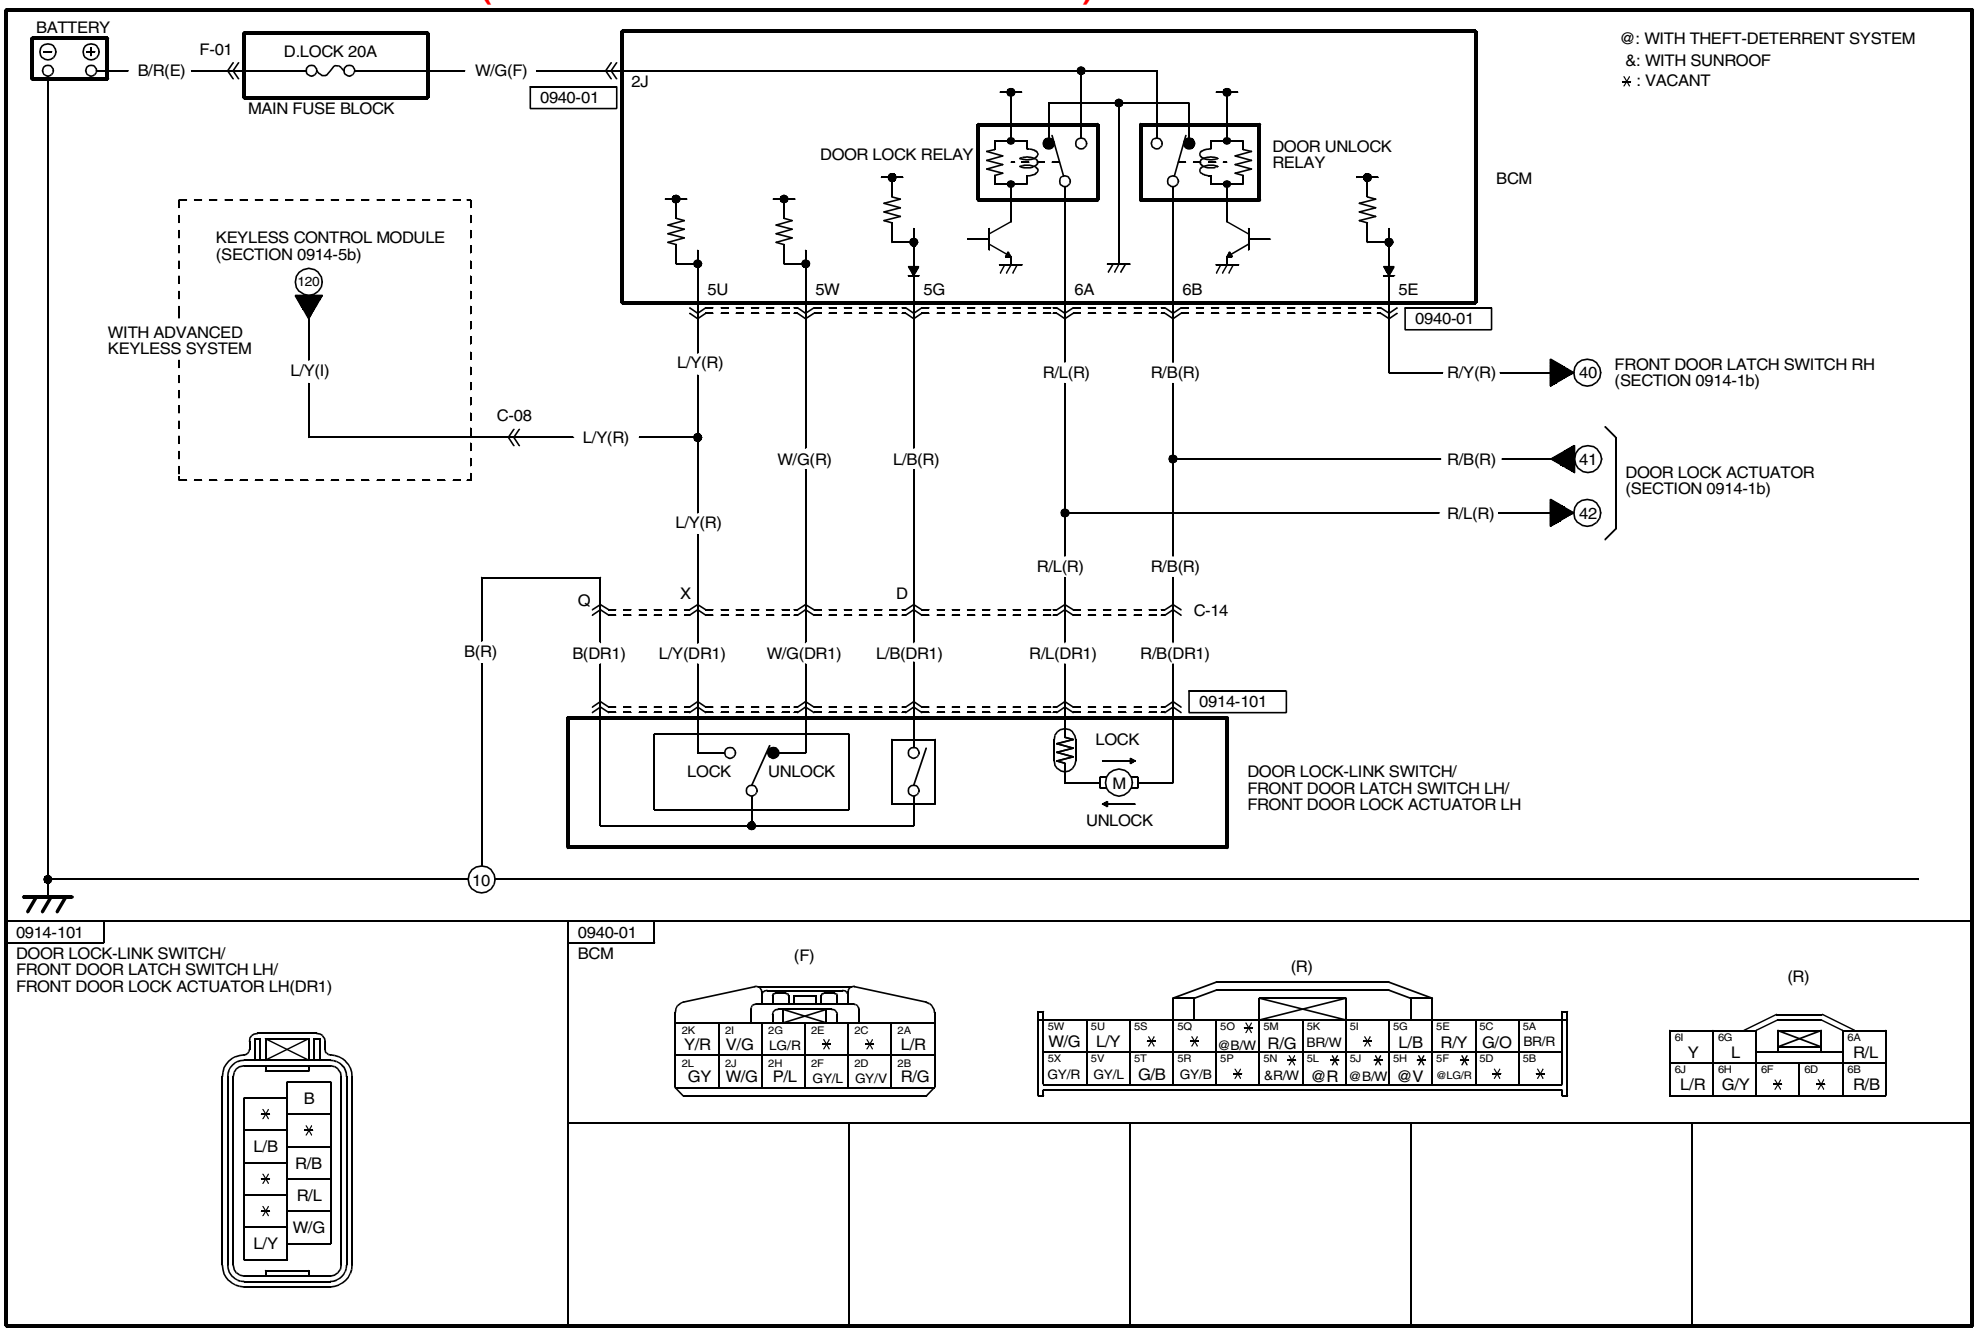

0914-101
DOOR LOCK-LINK SWITCH/
FRONT DOOR LATCH SWITCH LH/
FRONT DOOR LOCK ACTUATOR LH(DR1)

0940-01
BCM

(F)


2K	2I	2G	2E	2C	2A
Y/R	V/G	LG/R	∗	∗	L/R
2L	2J	2H	2F	2D	2B
GY	W/G	P/L	GY/L	GY/V	R/G


(R)


5W	5U	5S	5Q	5O	5M	5K	5I	5G	5E	5C	5A
W/G	L/Y	∗	∗	∗ @B/W	R/G	BR/W	∗	L/B	R/Y	G/O	BR/R
5X	5V	5T	5R	5P	5N	5L	5J	5H	5F	5D	5B
GY/R	GY/L	G/B	GY/B	∗	∗ &R/W	∗ @R	∗ @B/W	∗ @V	∗ @LG/R	∗	∗


(R)


6I	6G		6A
Y	L		R/L
6J	6H	6F	6D	6B
L/R	G/Y	∗	∗	R/B

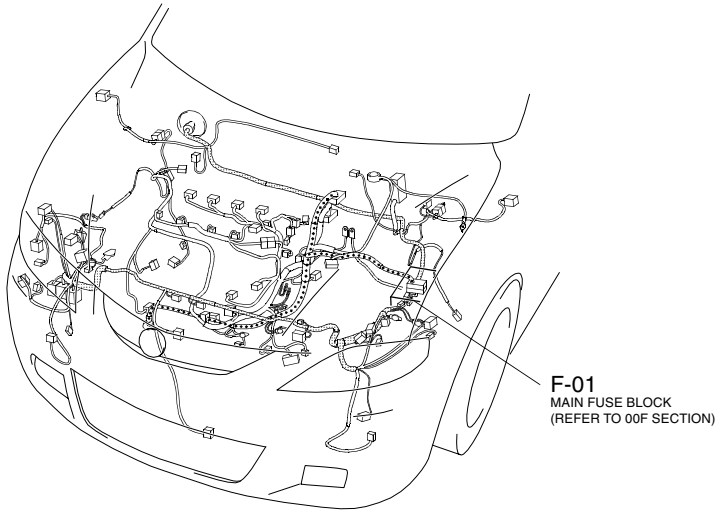
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

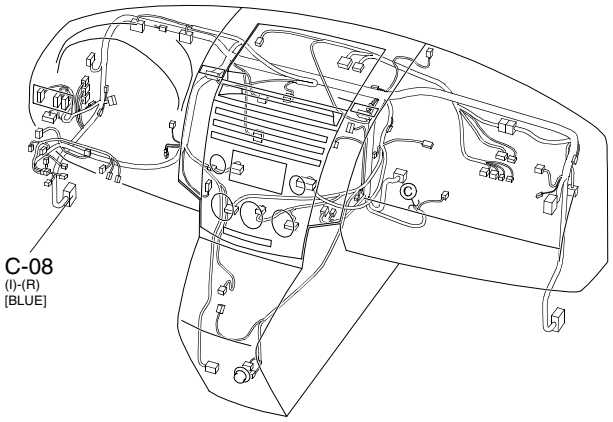
C-08
(I)-(R)
[BLUE]
C

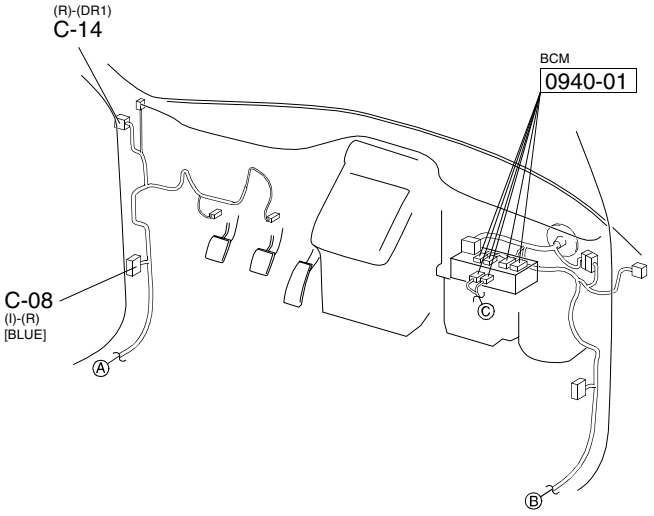
(R)-(DR1)
C-14
BCM
0940-01
C-08
(I)-(R)
[BLUE]
A
C
B

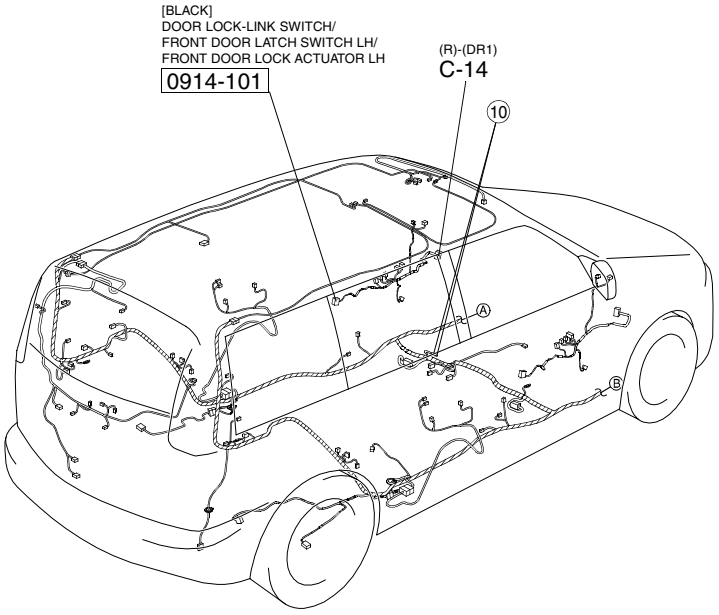
[BLACK]
DOOR LOCK-LINK SWITCH/
FRONT DOOR LATCH SWITCH LH/
FRONT DOOR LOCK ACTUATOR LH
0914-101
(R)-(DR1)
C-14
10
A
B

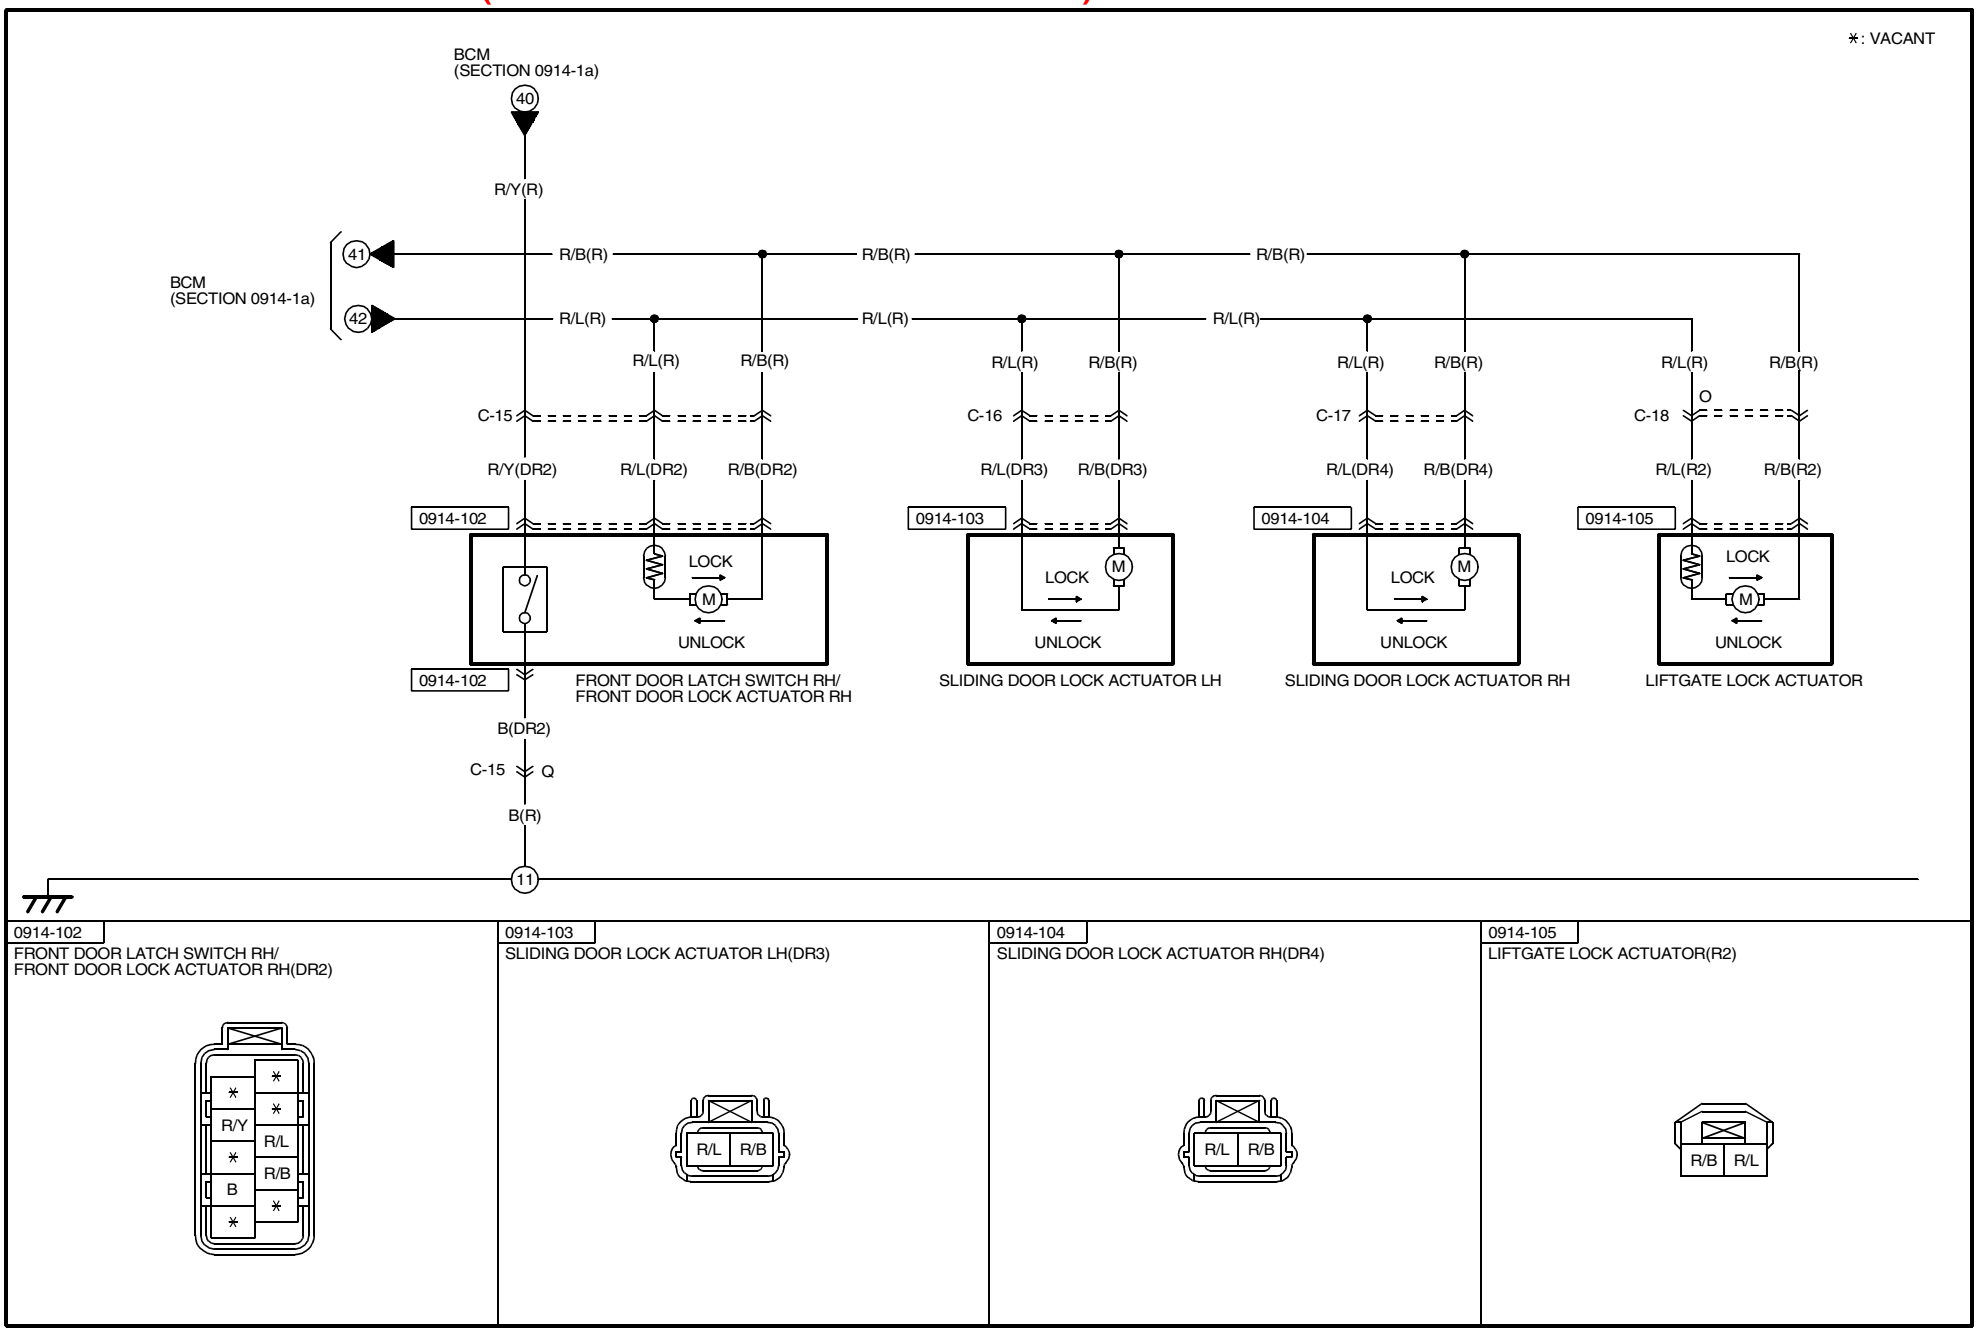



0914-102
FRONT DOOR LATCH SWITCH RH/
FRONT DOOR LOCK ACTUATOR RH(DR2)

0914-103
SLIDING DOOR LOCK ACTUATOR LH(DR3)


0914-104
SLIDING DOOR LOCK ACTUATOR RH(DR4)


0914-105
LIFTGATE LOCK ACTUATOR(R2)

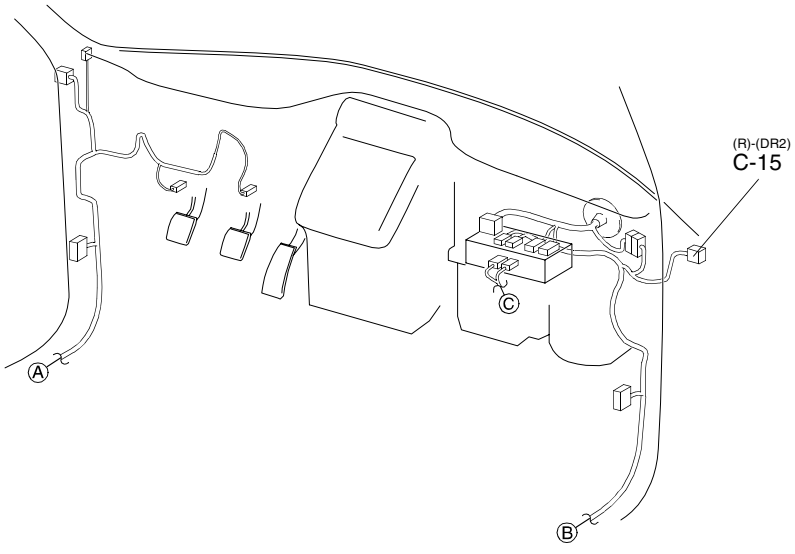

(R)-(DR2)
C-15
A
B
C

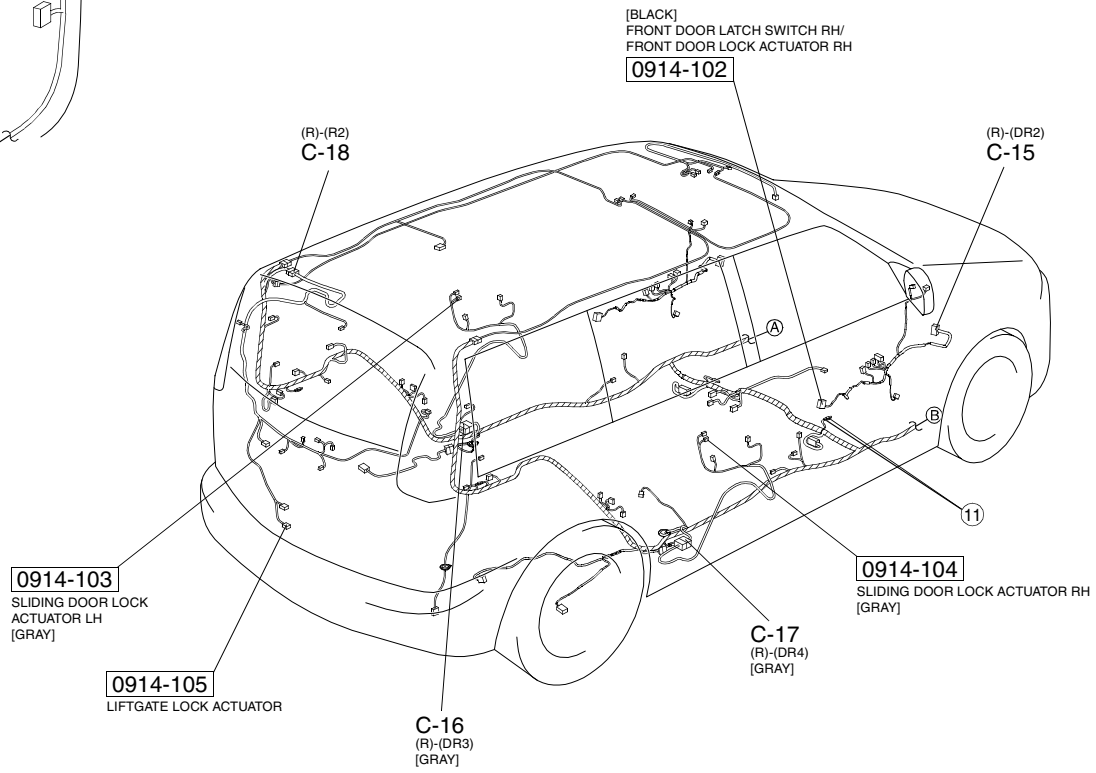

[BLACK]
FRONT DOOR LATCH SWITCH RH/
FRONT DOOR LOCK ACTUATOR RH
0914-102
(R)-(R2)
C-18
(R)-(DR2)
C-15
A
B
11
0914-103
SLIDING DOOR LOCK
ACTUATOR LH
[GRAY]
0914-104
SLIDING DOOR LOCK ACTUATOR RH
[GRAY]
C-17
(R)-(DR4)
[GRAY]
0914-105
LIFTGATE LOCK ACTUATOR
C-16
(R)-(DR3)
[GRAY]


POWER DOOR LOCK SYSTEM (WITH DOUBLE LOCKING SYSTEM)

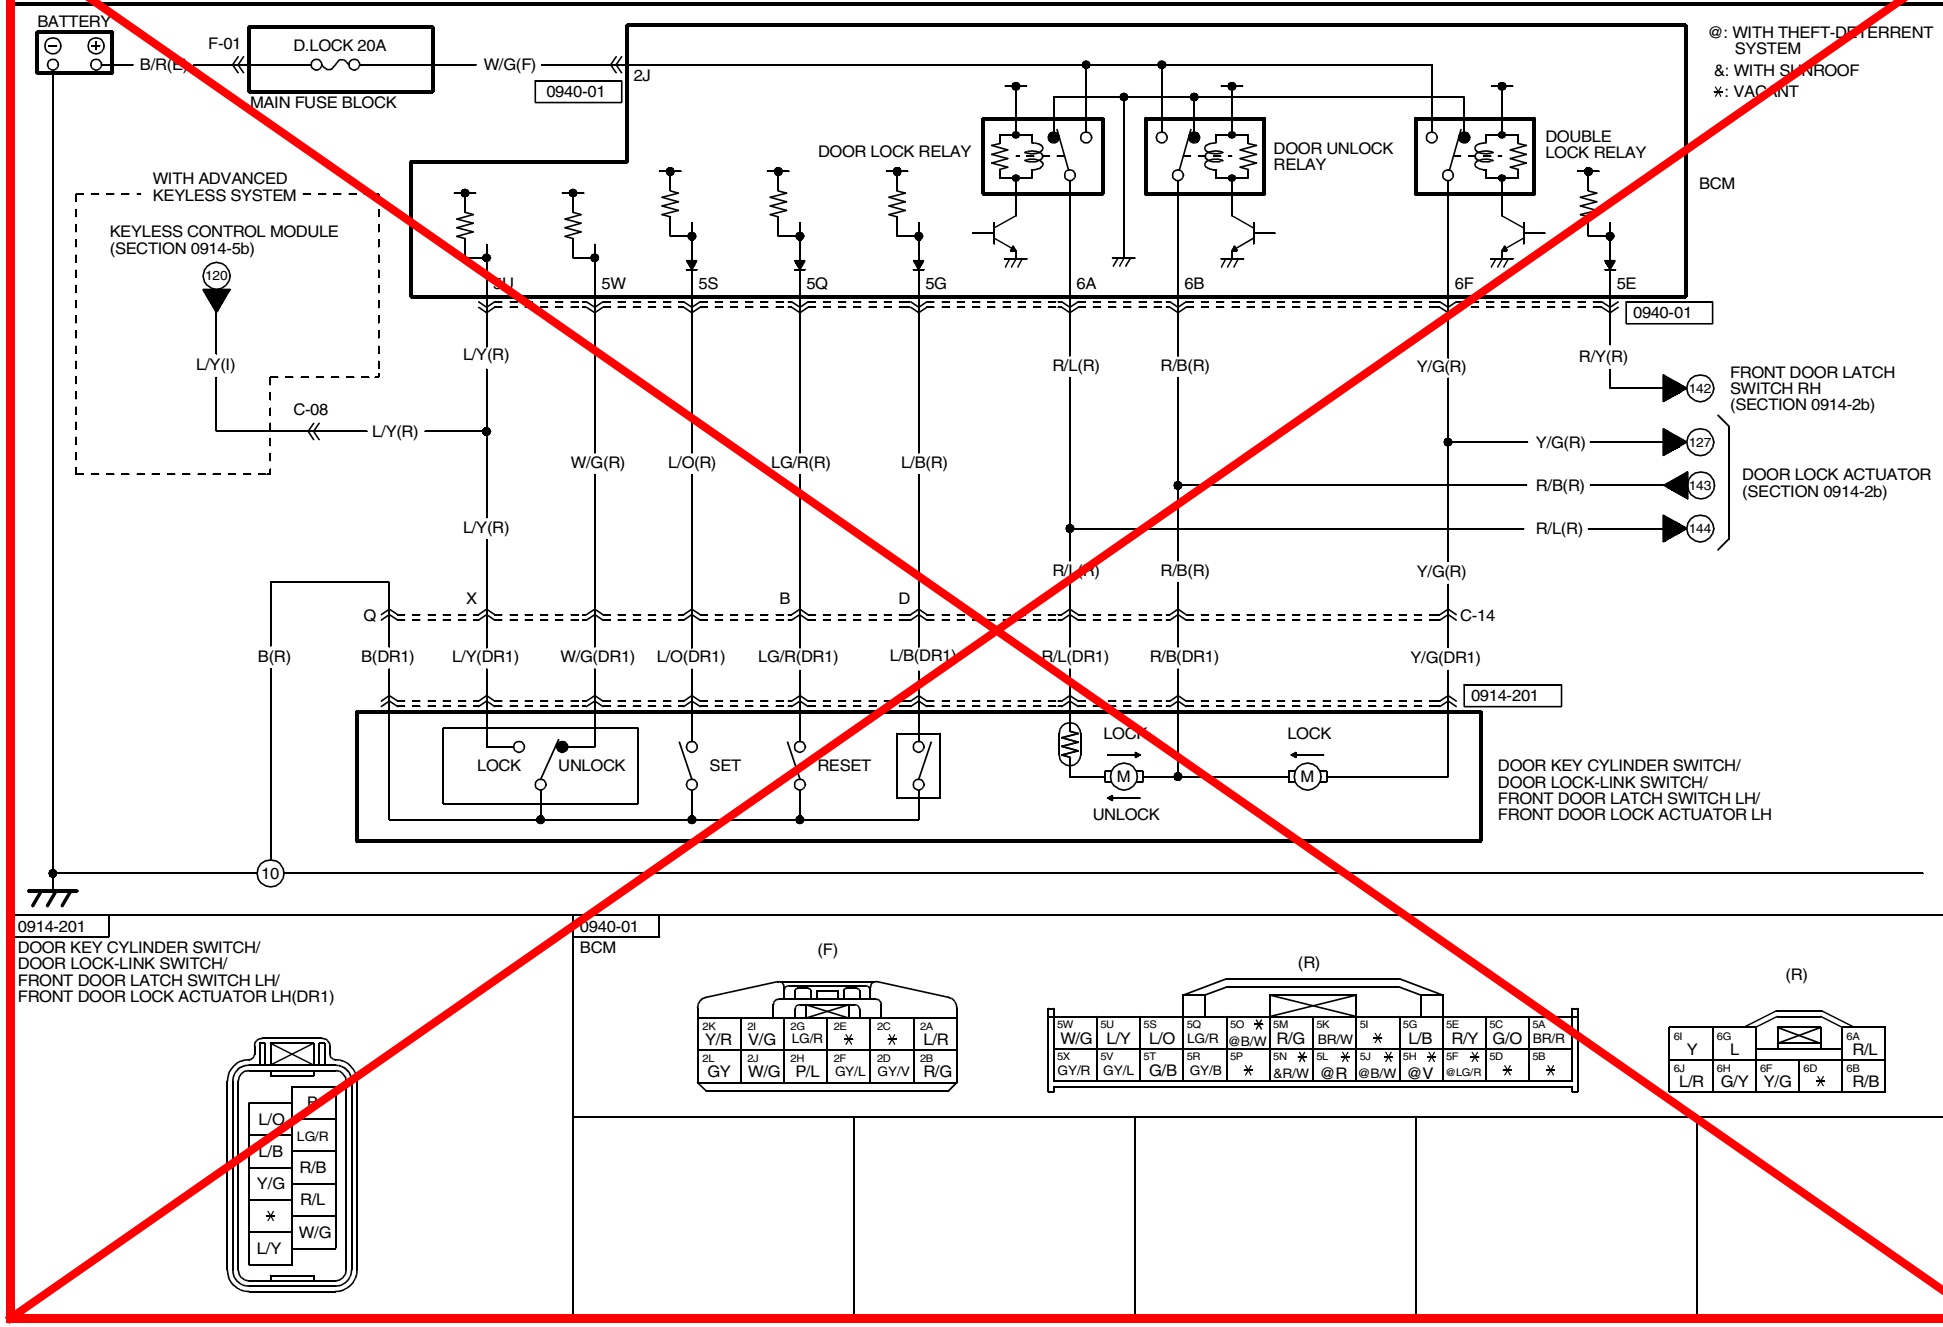

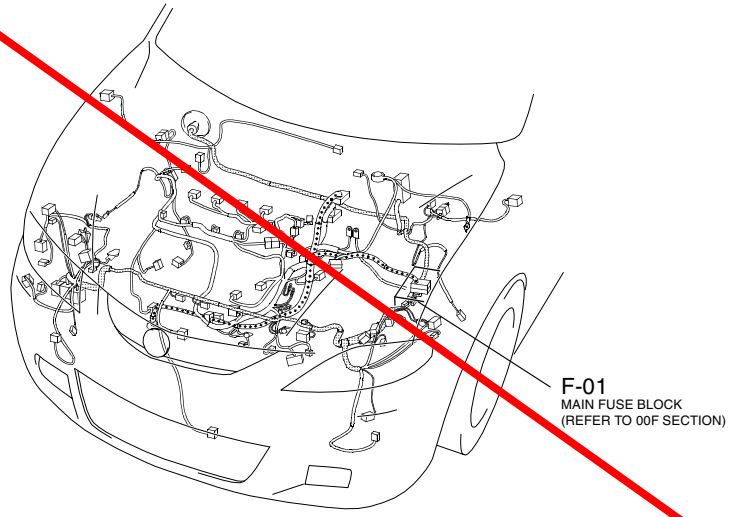
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

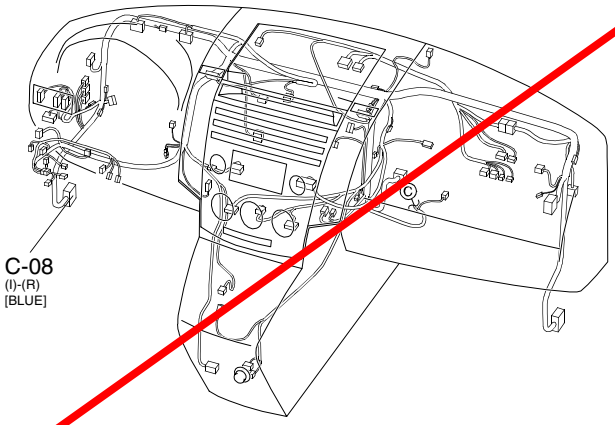

C-08
(I)-(R)
[BLUE]
C

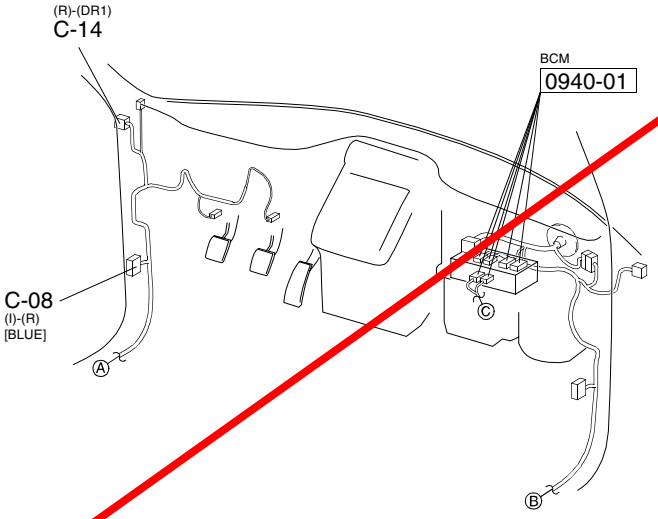

(R)-(DR1)
C-14
BCM
0940-01
C-08
(I)-(R)
[BLUE]
A
B
C

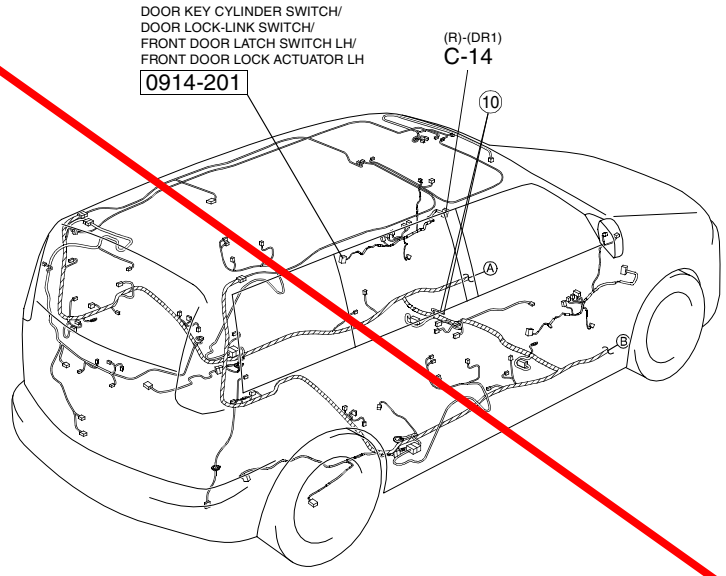

DOOR KEY CYLINDER SWITCH/
DOOR LOCK-LINK SWITCH/
FRONT DOOR LATCH SWITCH LH/
FRONT DOOR LOCK ACTUATOR LH
0914-201
(R)-(DR1)
C-14
10
A
B


POWER DOOR LOCK SYSTEM (WITH DOUBLE LOCKING SYSTEM)


V : VACANT

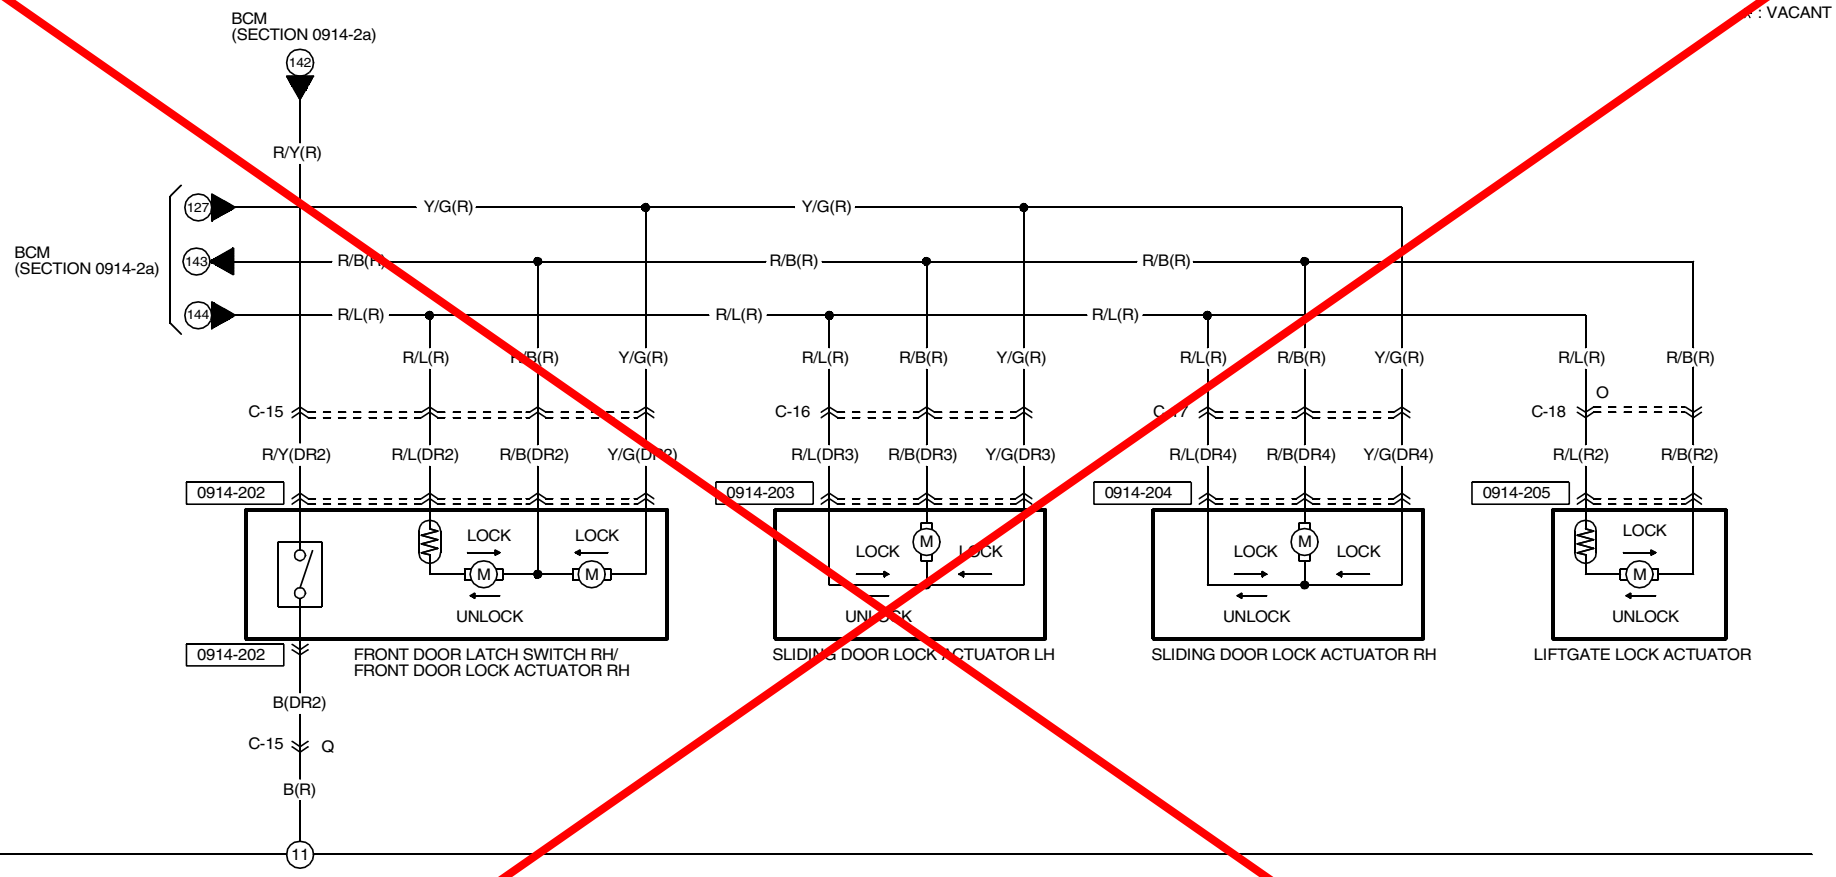


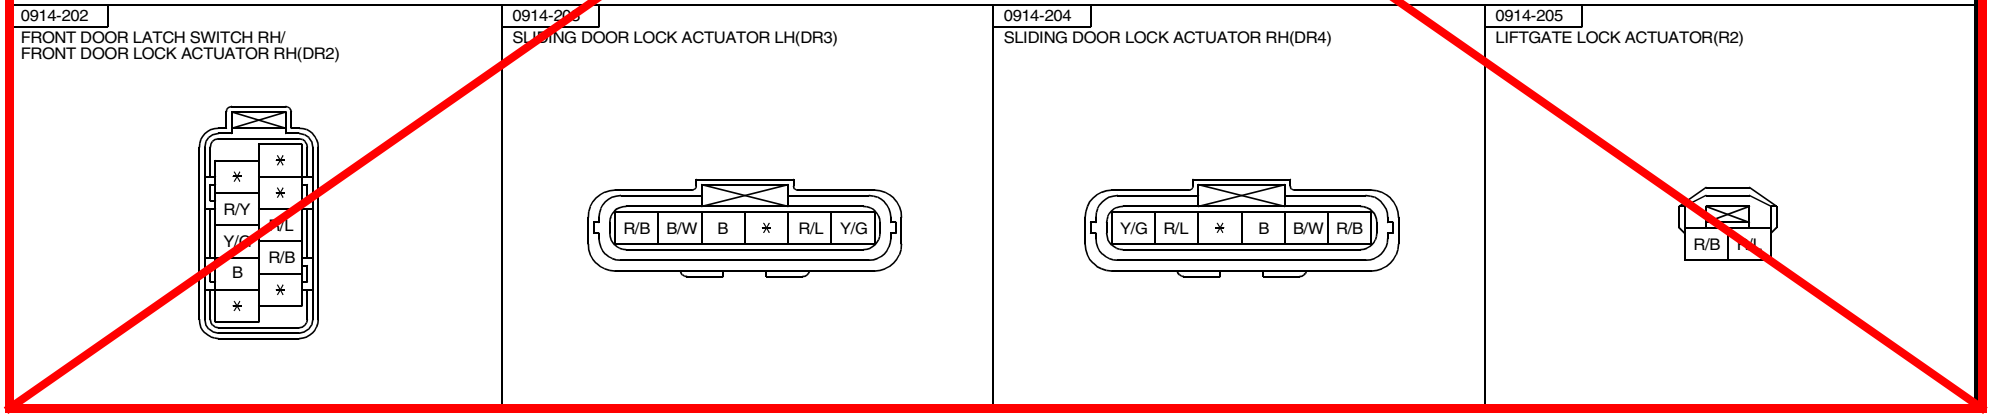

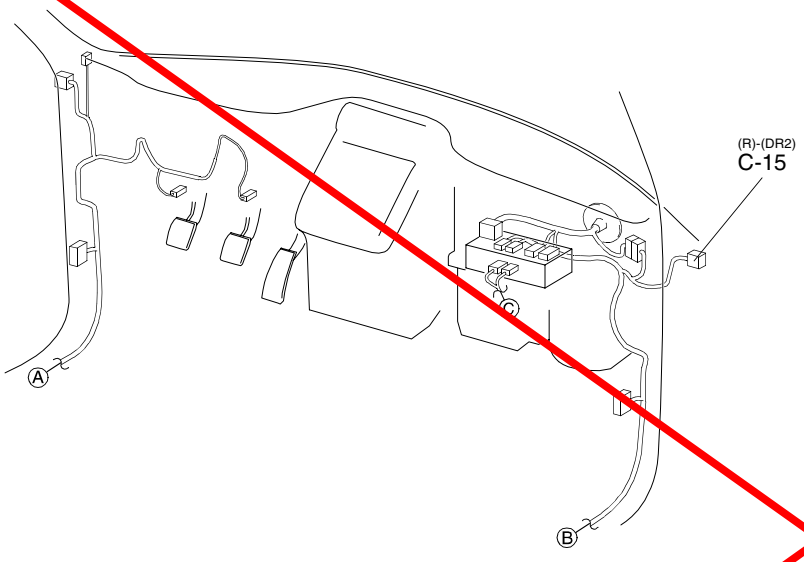

(R)-(DR2)
C-15
A
B
C

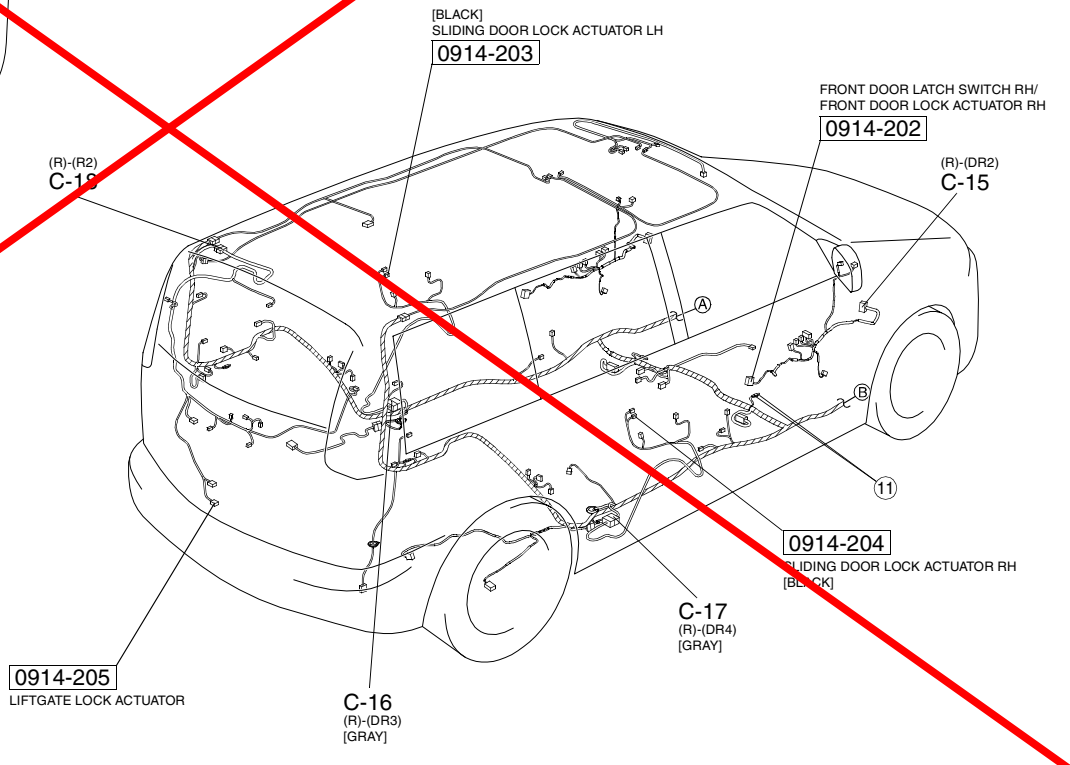
[BLACK]
SLIDING DOOR LOCK ACTUATOR LH
0914-203
FRONT DOOR LATCH SWITCH RH/
FRONT DOOR LOCK ACTUATOR RH
0914-202
(R)-(R2)
C-19
(R)-(DR2)
C-15
A
B
11
0914-204
SLIDING DOOR LOCK ACTUATOR RH
[BLACK]
C-17
(R)-(DR4)
[GRAY]
0914-205
LIFTGATE LOCK ACTUATOR
C-16
(R)-(DR3)
[GRAY]

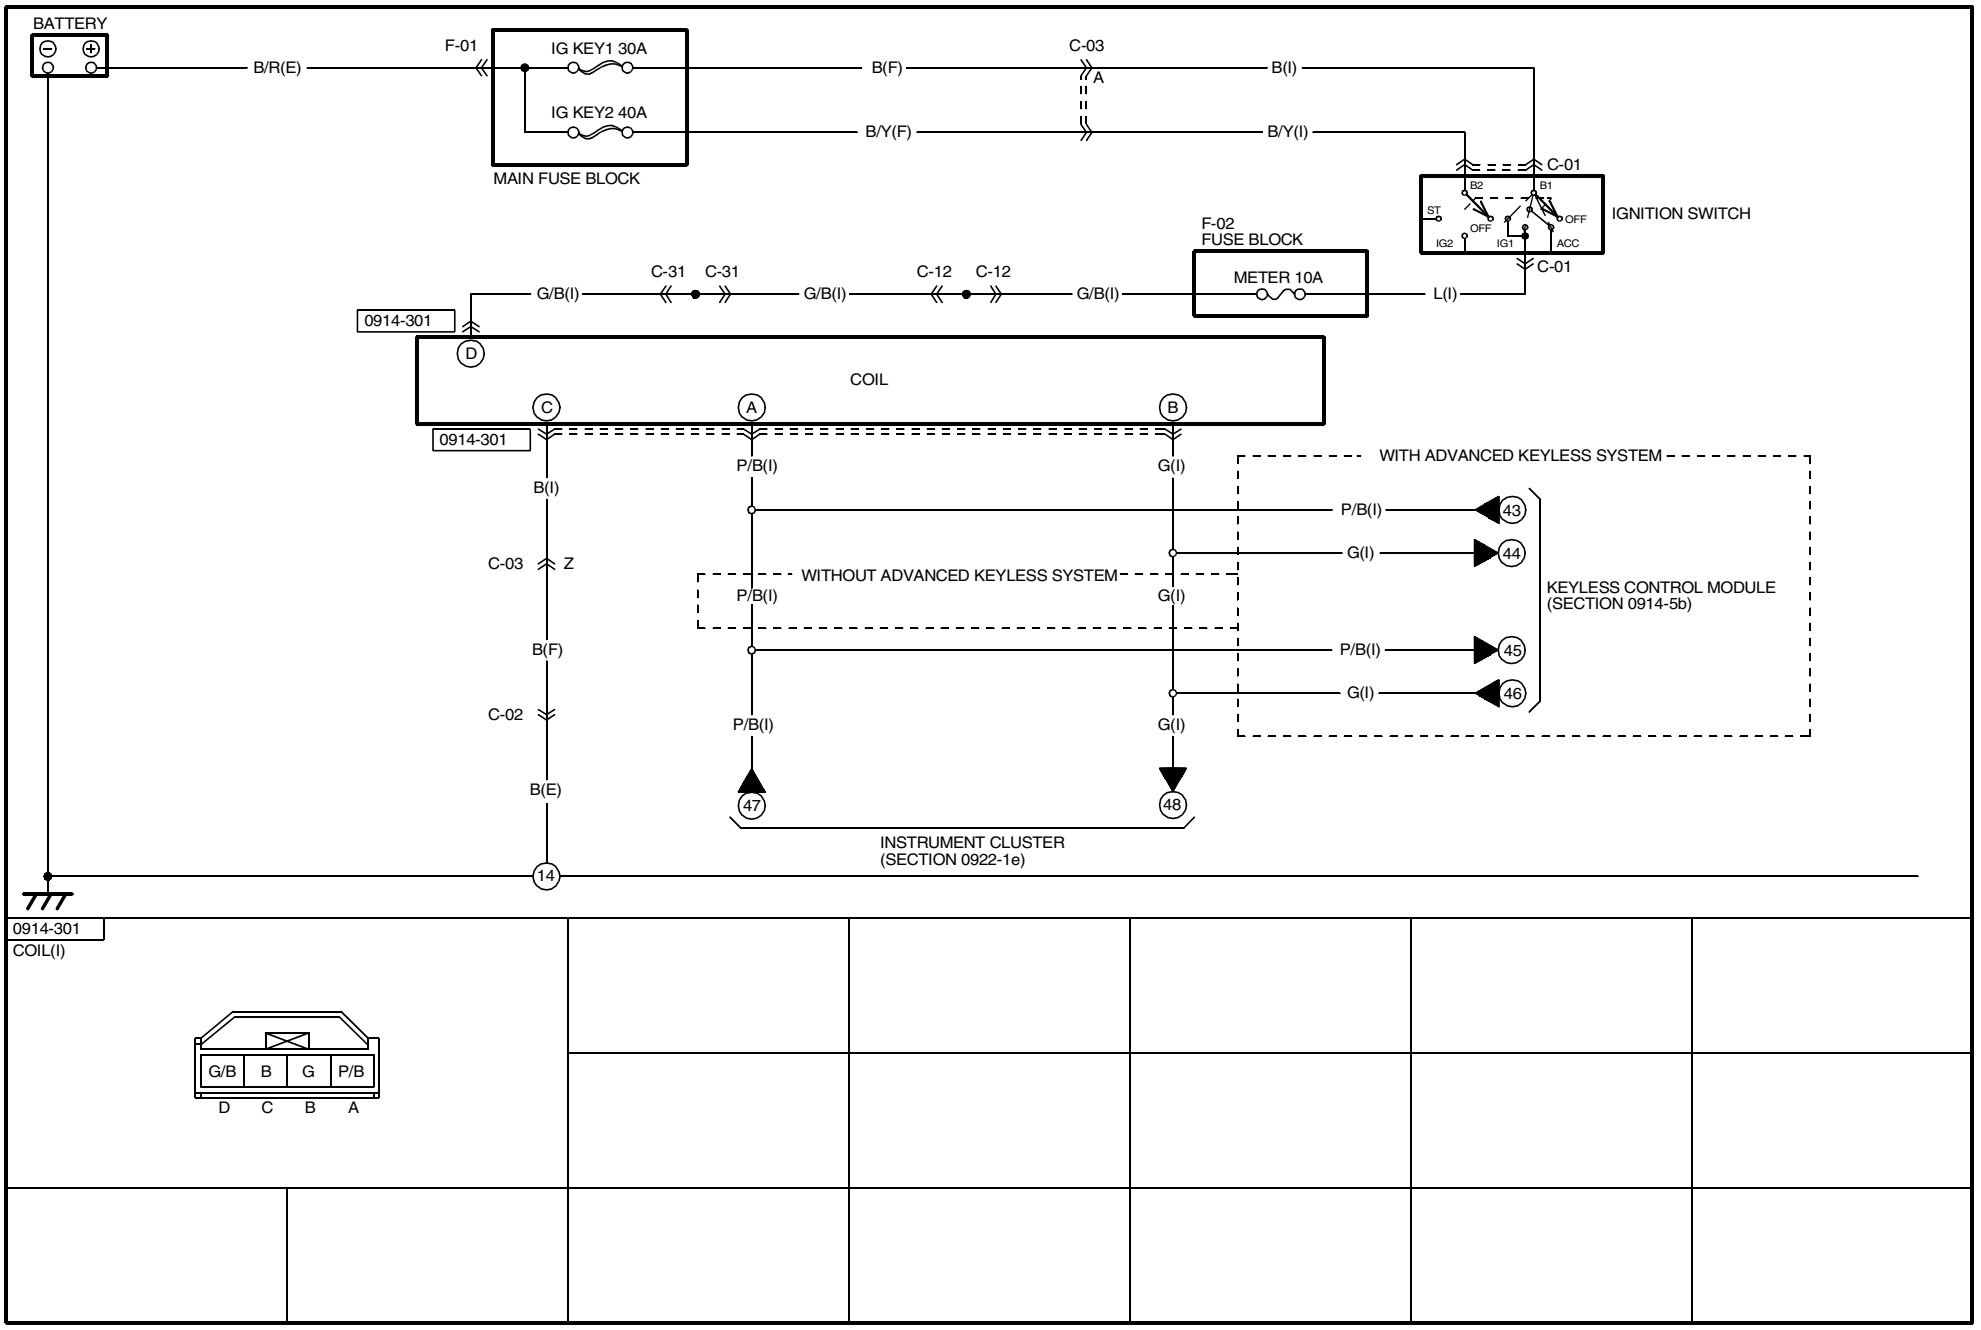

BATTERY
B/R(E)
F-01
IG KEY1 30A
IG KEY2 40A
MAIN FUSE BLOCK
B(F)
B/Y(F)
C-03
A
B(I)
B/Y(I)
C-01
B2
B1
ST
OFF
IG2
IG1
ACC
IGNITION SWITCH
F-02
FUSE BLOCK
METER 10A
L(I)
C-31
C-12
G/B(I)
0914-301
D
COIL
C
A
B
0914-301
B(I)
C-03
Z
B(F)
C-02
B(E)
P/B(I)
G(I)
WITH ADVANCED KEYLESS SYSTEM
43
44
45
46
KEYLESS CONTROL MODULE
(SECTION 0914-5b)
WITHOUT ADVANCED KEYLESS SYSTEM
47
48
INSTRUMENT CLUSTER
(SECTION 0922-1e)
14
0914-301
COIL(I)
G/B
B
G
P/B
D
C
B
A

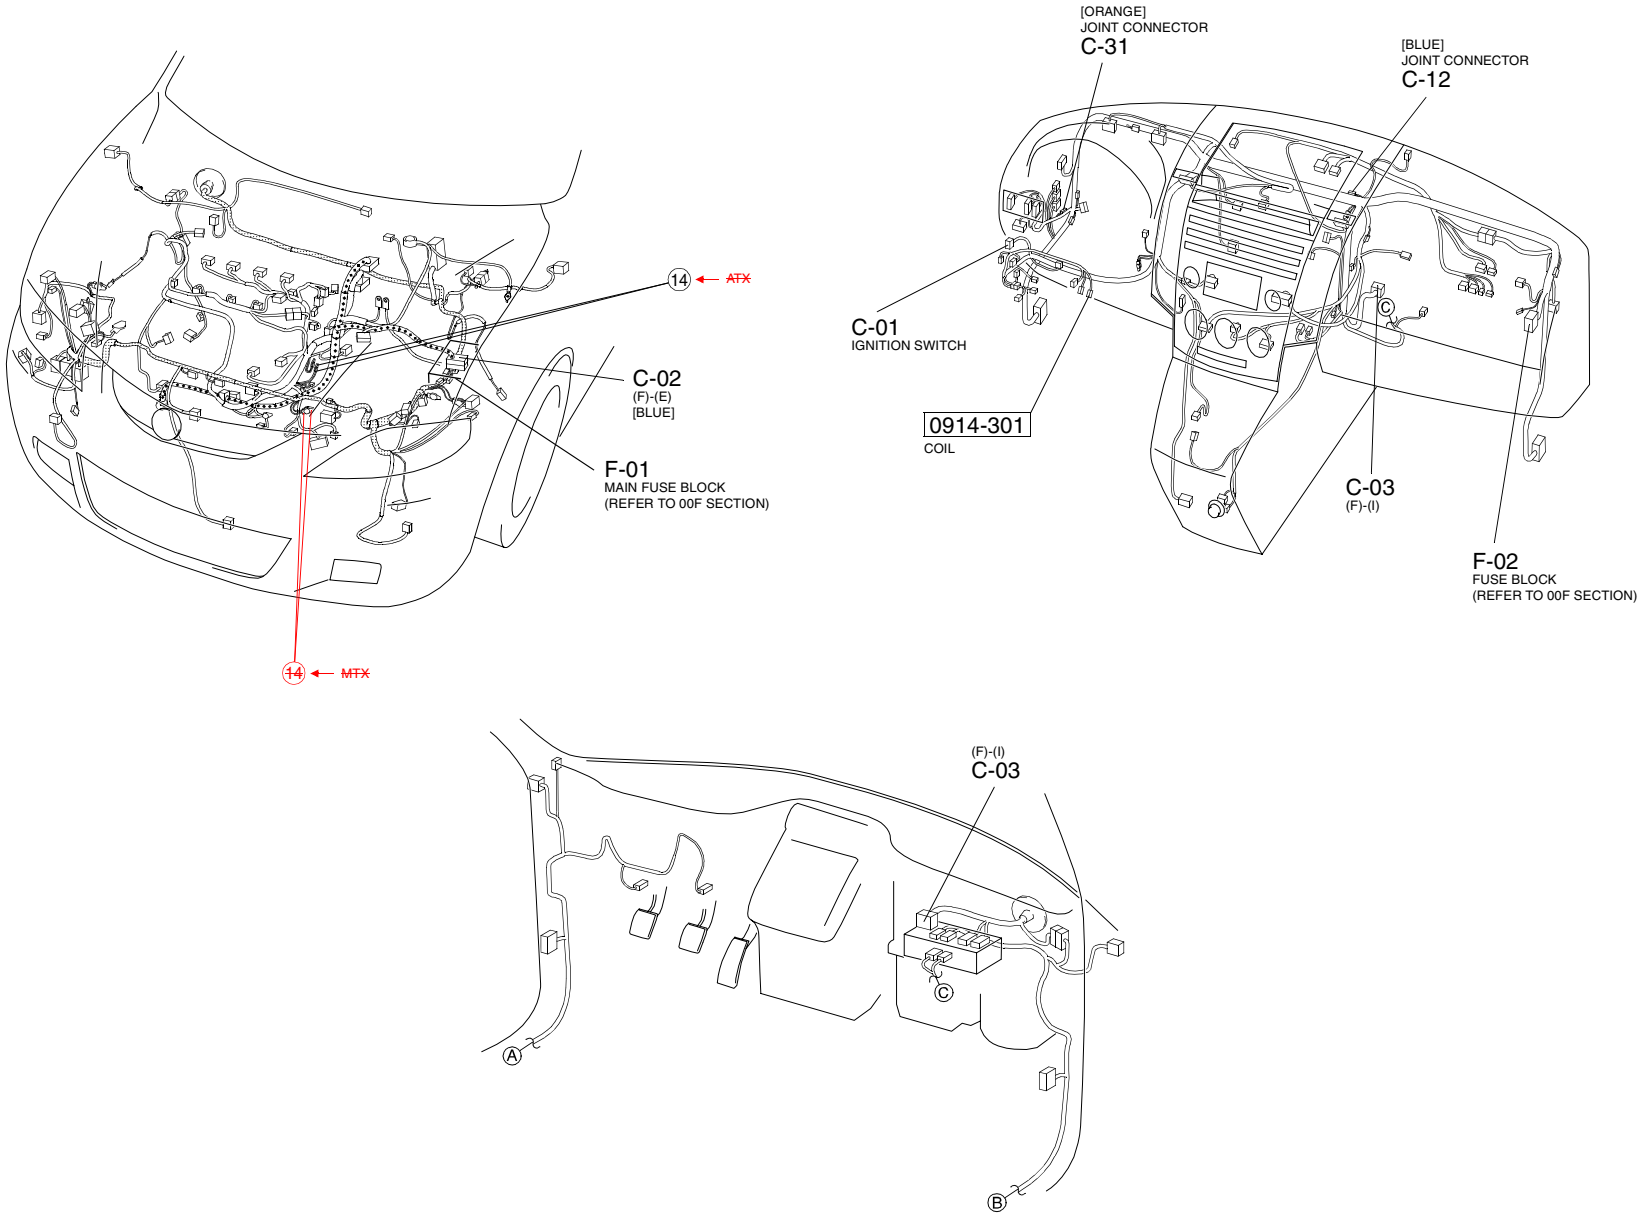

[ORANGE]
JOINT CONNECTOR
C-31
[BLUE]
JOINT CONNECTOR
C-12
14 ATX
C-02
(F)-(E)
[BLUE]
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-01
IGNITION SWITCH
0914-301
COIL
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
14 MTX
(F)-(I)
C-03
A
B
C

*: VACANT

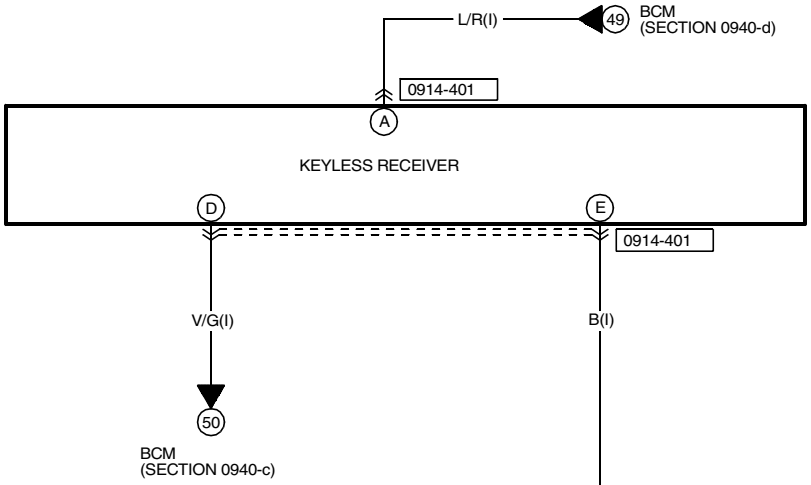


0914-401
KEYLESS RECEIVER(I)



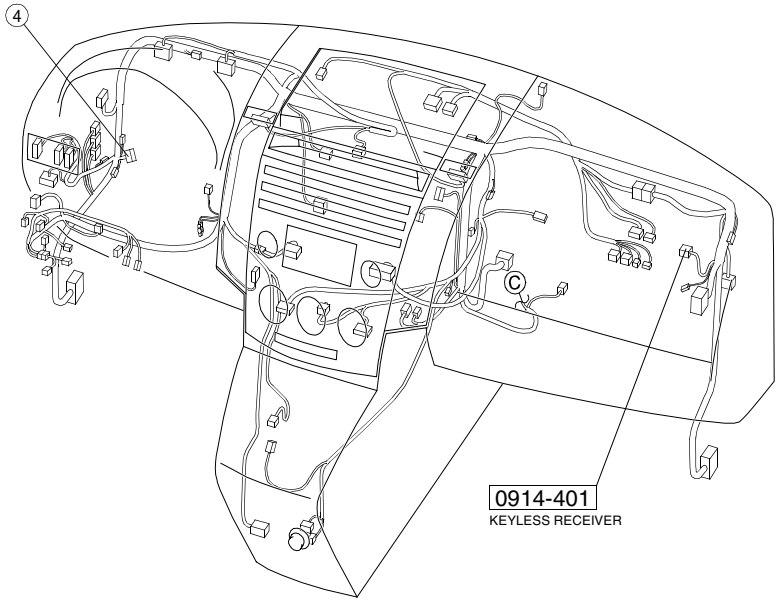
4
C
0914-401
KEYLESS RECEIVER

KEYLESS ENTRY SYSTEM (WITH ADVANCED KEYLESS SYSTEM)

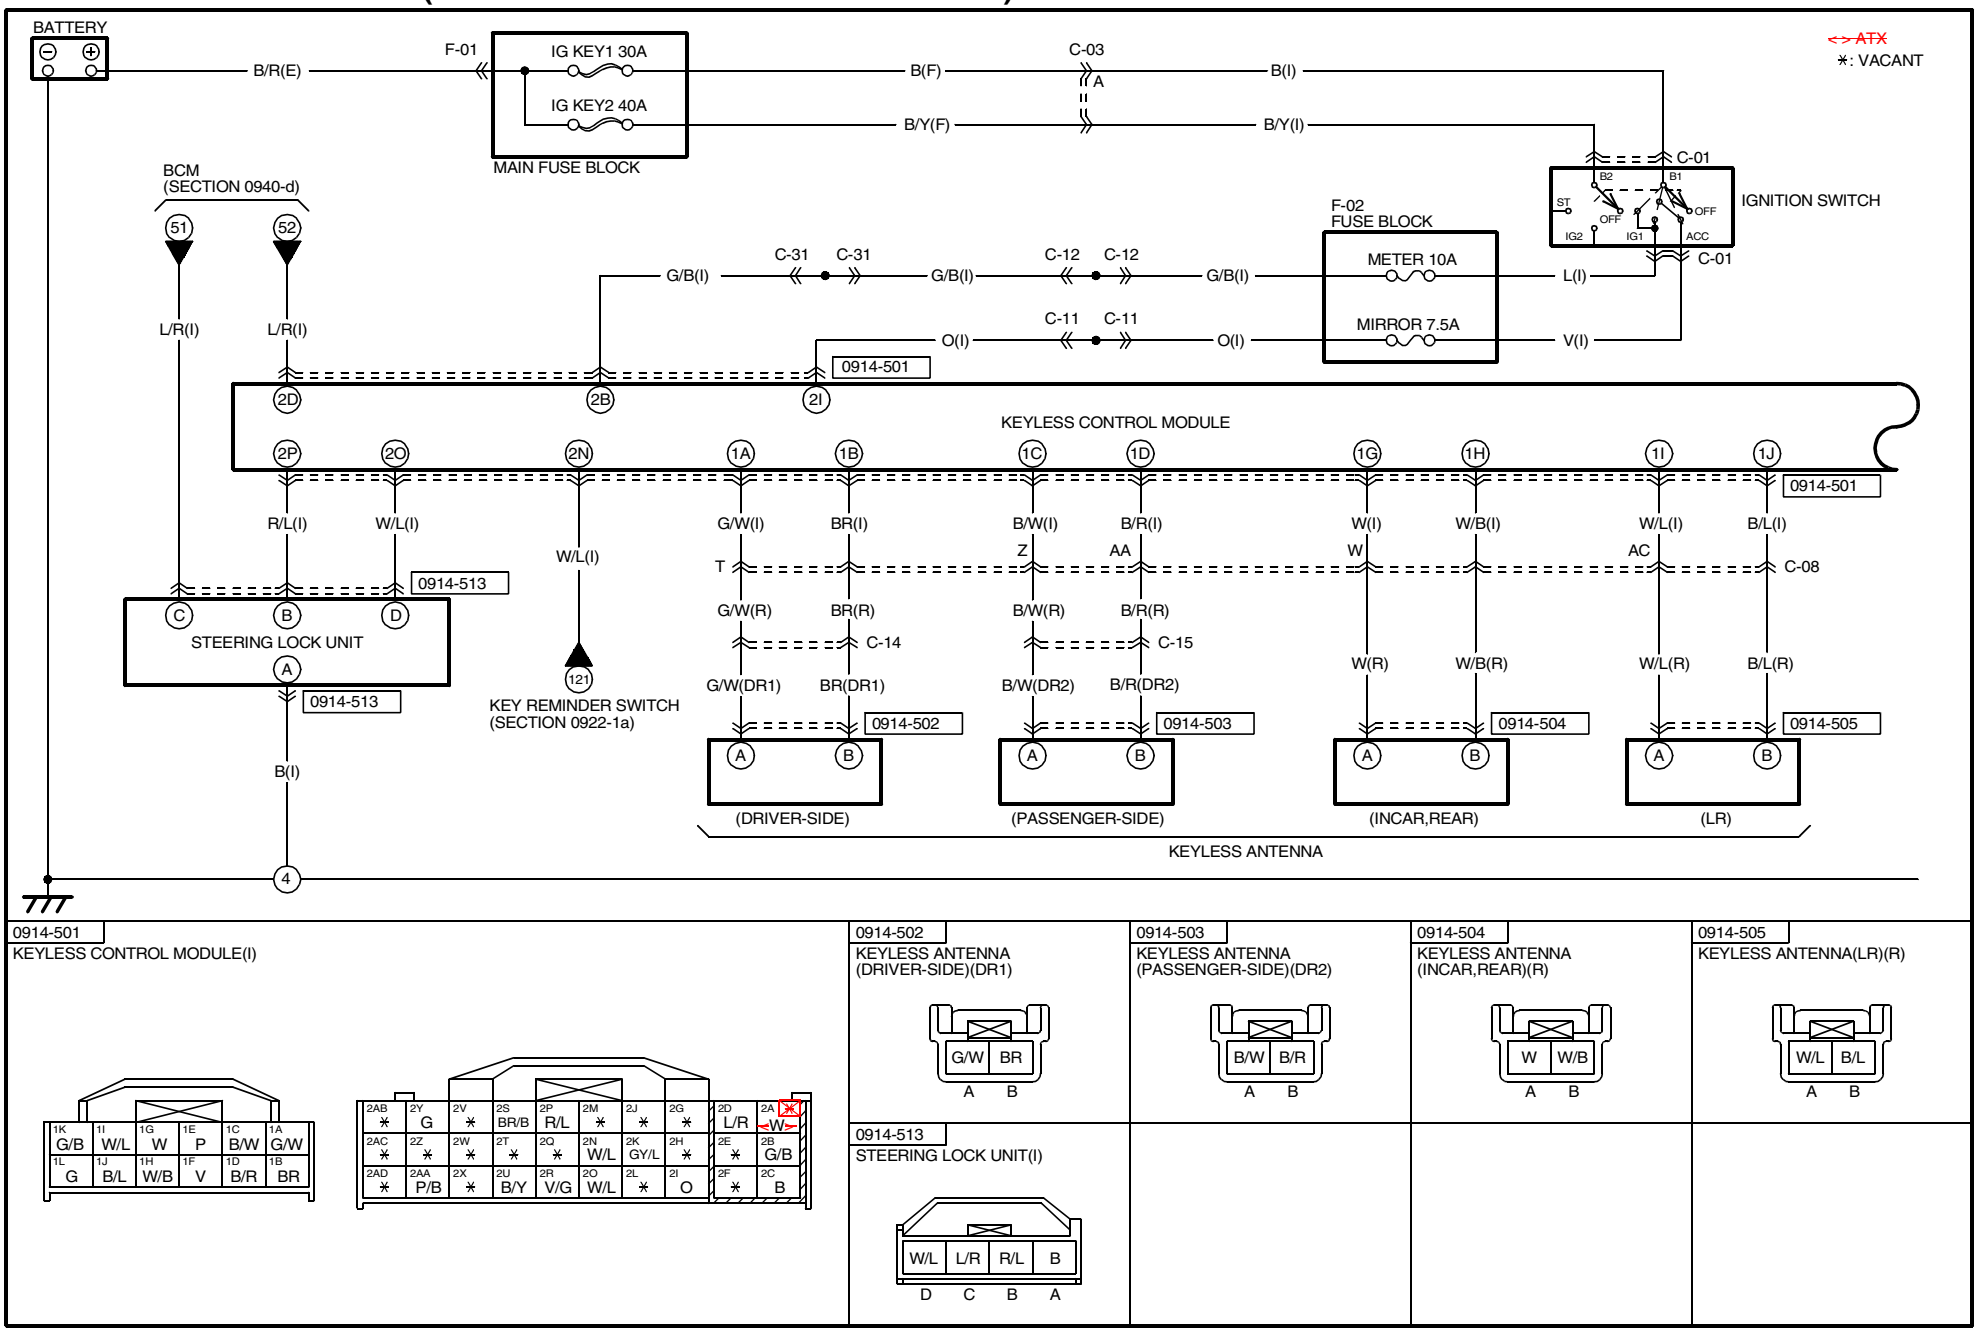

0914-501
KEYLESS CONTROL MODULE(I)


0914-502
KEYLESS ANTENNA
(DRIVER-SIDE)(DR1)


0914-503
KEYLESS ANTENNA
(PASSENGER-SIDE)(DR2)


0914-504
KEYLESS ANTENNA
(INCAR,REAR)(R)


0914-505
KEYLESS ANTENNA(LR)(R)

0914-513
STEERING LOCK UNIT(I)

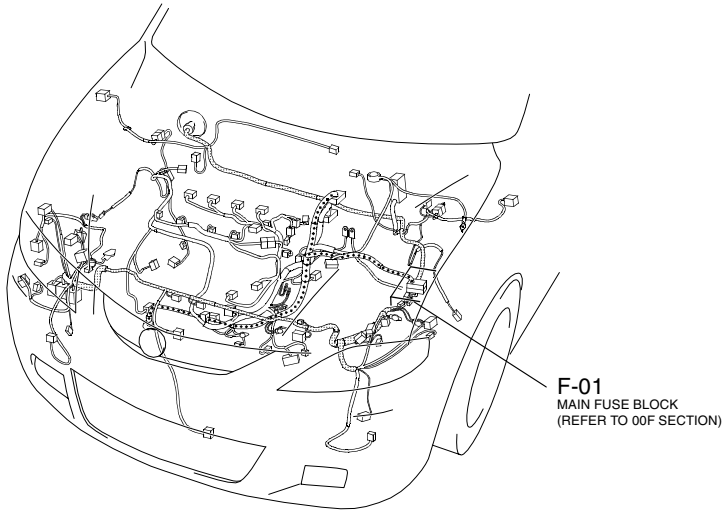

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

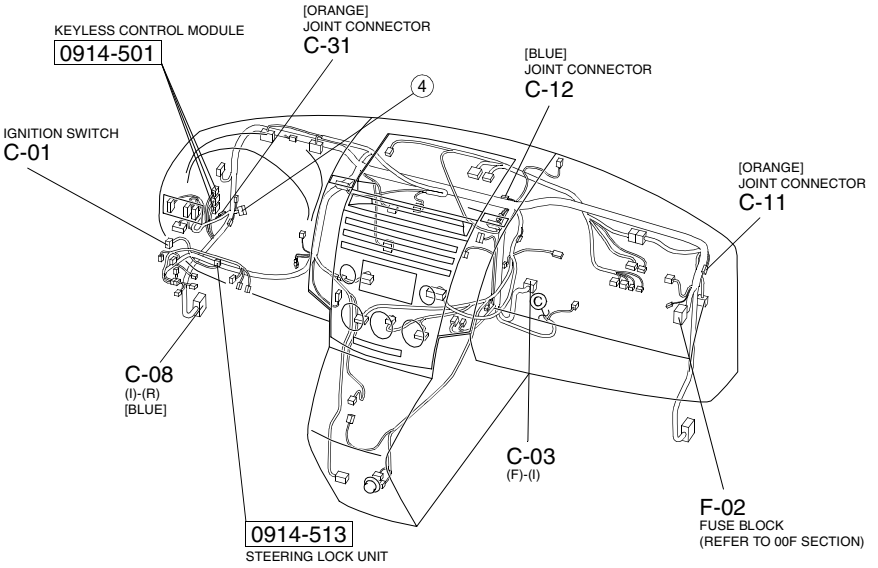
KEYLESS CONTROL MODULE
0914-501
[ORANGE]
JOINT CONNECTOR
C-31
[BLUE]
JOINT CONNECTOR
C-12
IGNITION SWITCH
C-01
[ORANGE]
JOINT CONNECTOR
C-11
C-08
(I)-(R)
[BLUE]
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
0914-513
STEERING LOCK UNIT

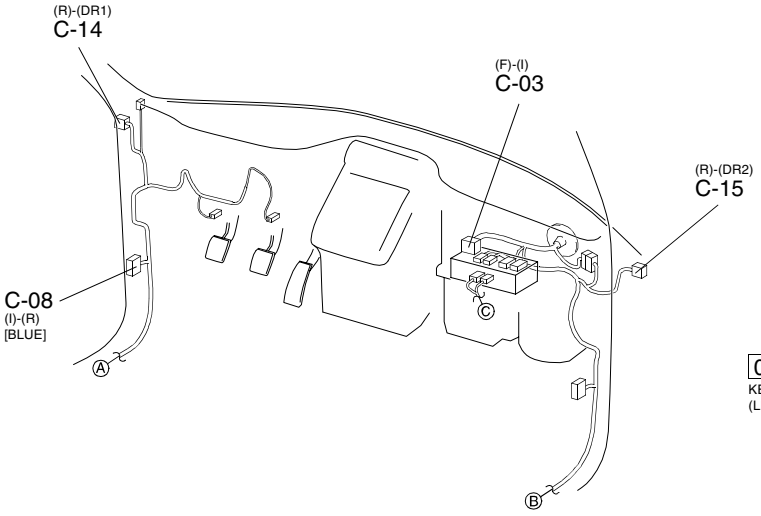
(R)-(DR1)
C-14
(F)-(I)
C-03
(R)-(DR2)
C-15
C-08
(I)-(R)
[BLUE]

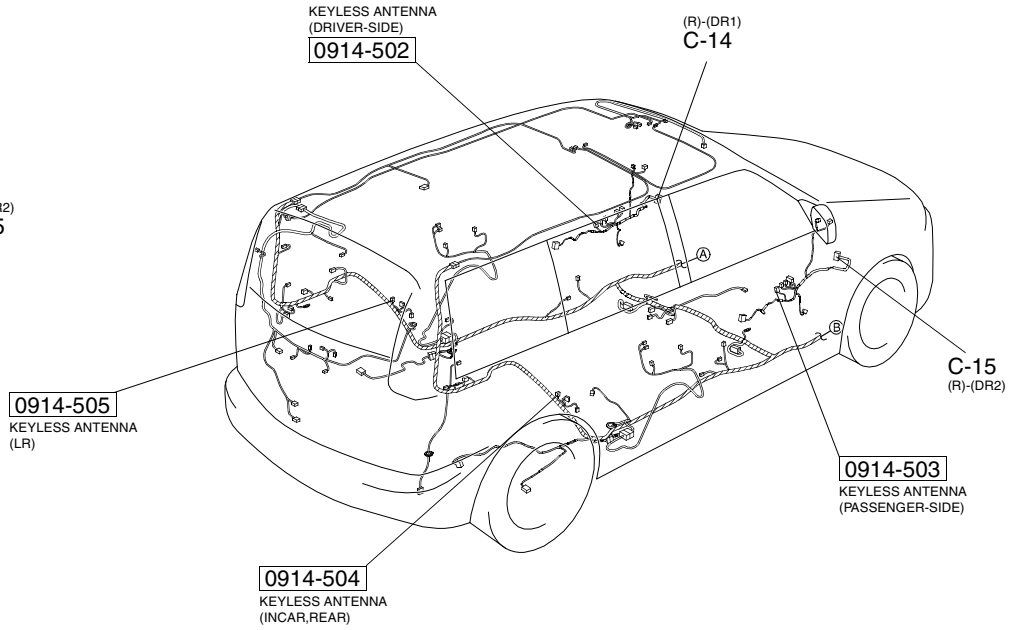
KEYLESS ANTENNA
(DRIVER-SIDE)
0914-502
(R)-(DR1)
C-14
C-15
(R)-(DR2)
0914-505
KEYLESS ANTENNA
(LR)
0914-503
KEYLESS ANTENNA
(PASSENGER-SIDE)
0914-504
KEYLESS ANTENNA
(INCAR,REAR)

KEYLESS ENTRY SYSTEM (WITH ADVANCED KEYLESS SYSTEM)

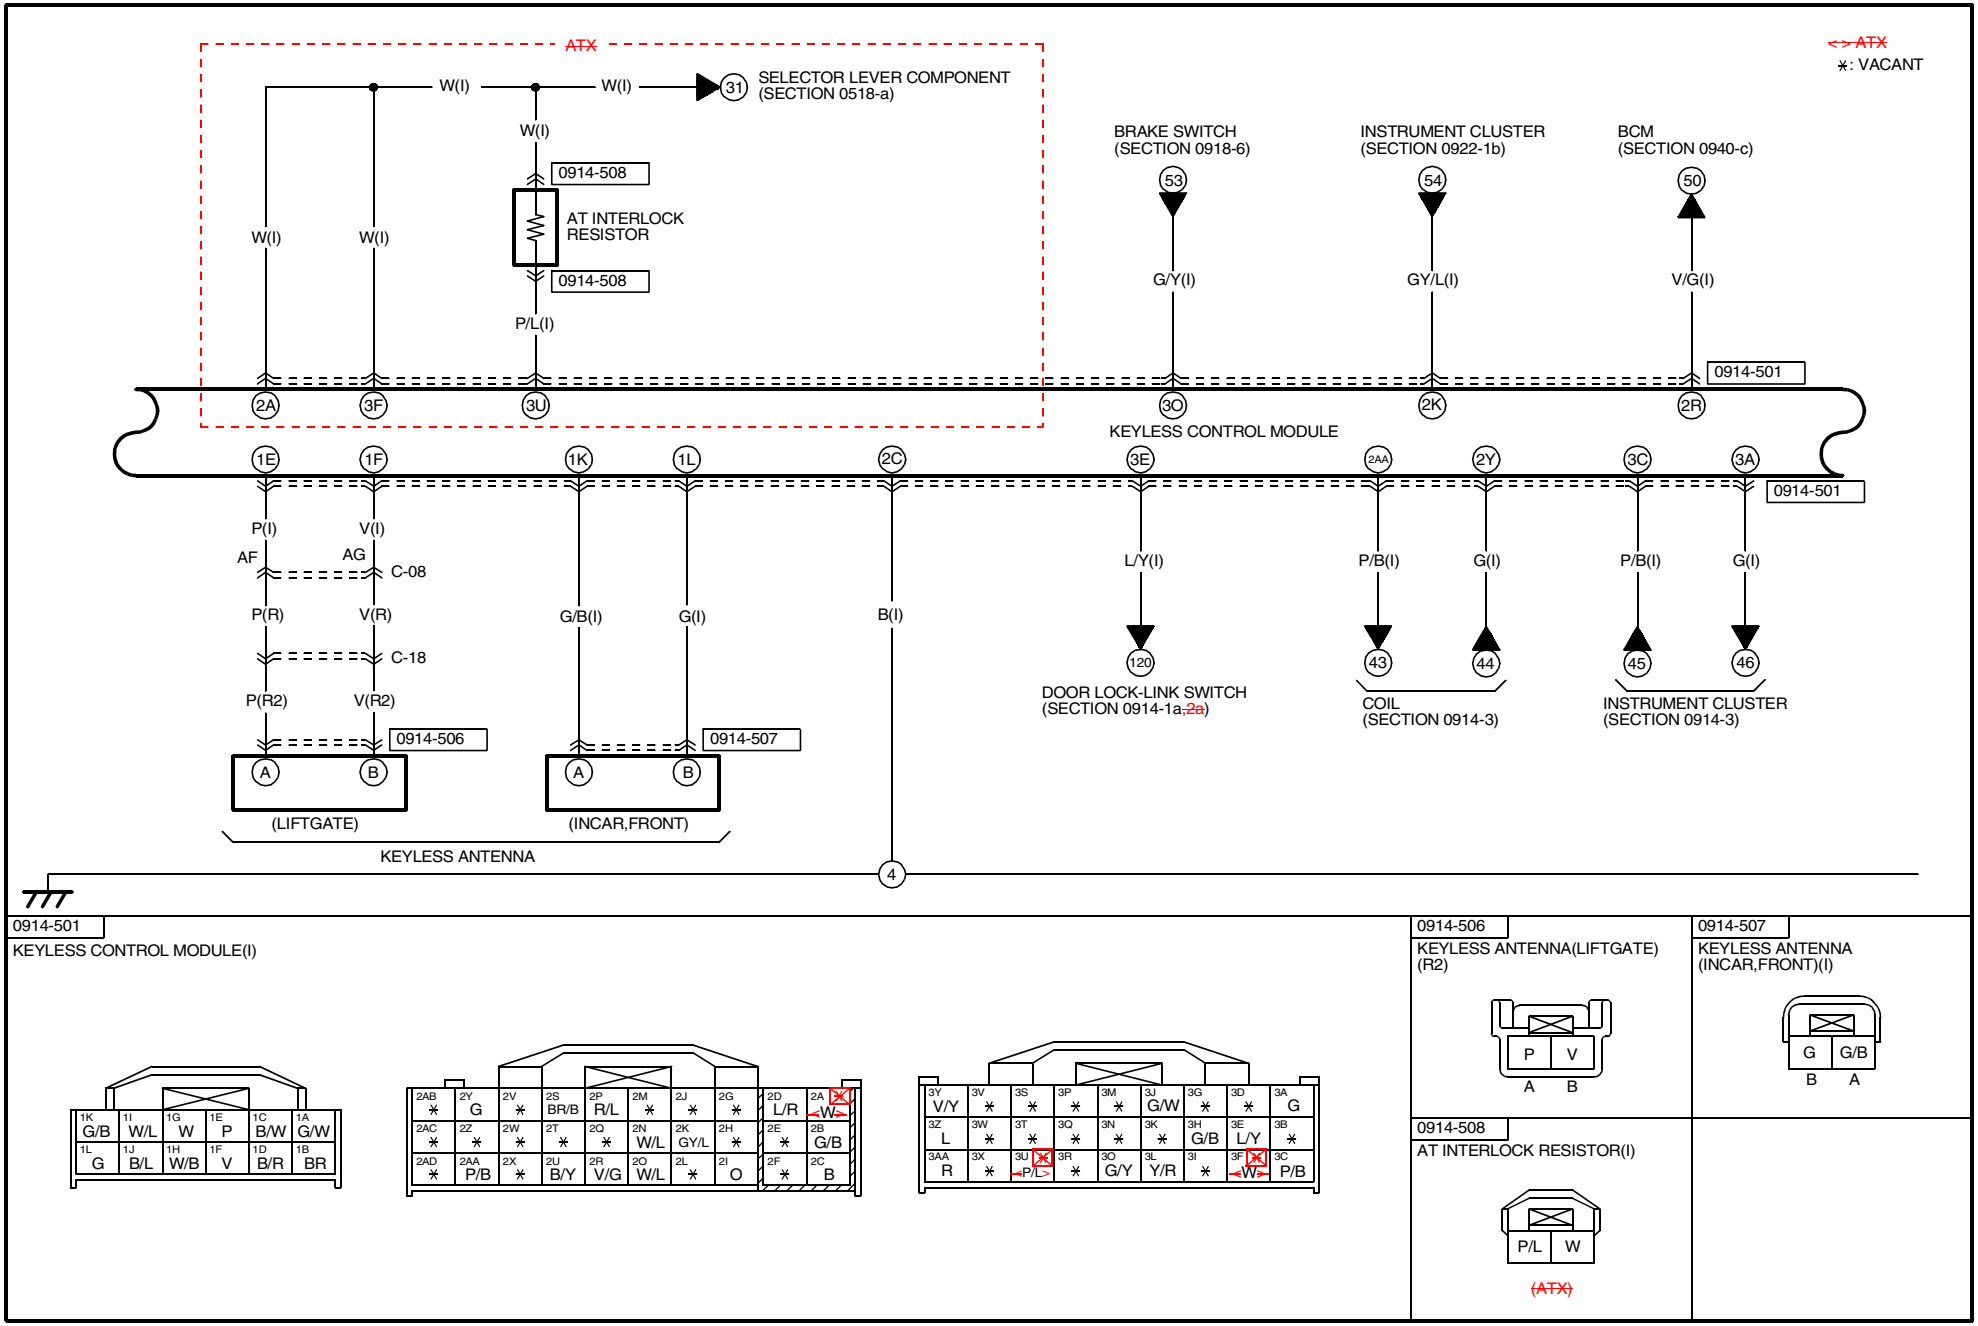


0914-501
KEYLESS CONTROL MODULE(I)

0914-506
KEYLESS ANTENNA(LIFTGATE)
(R2)


0914-507
KEYLESS ANTENNA
(INCAR,FRONT)(I)

0914-508
AT INTERLOCK RESISTOR(I)

(ATX)

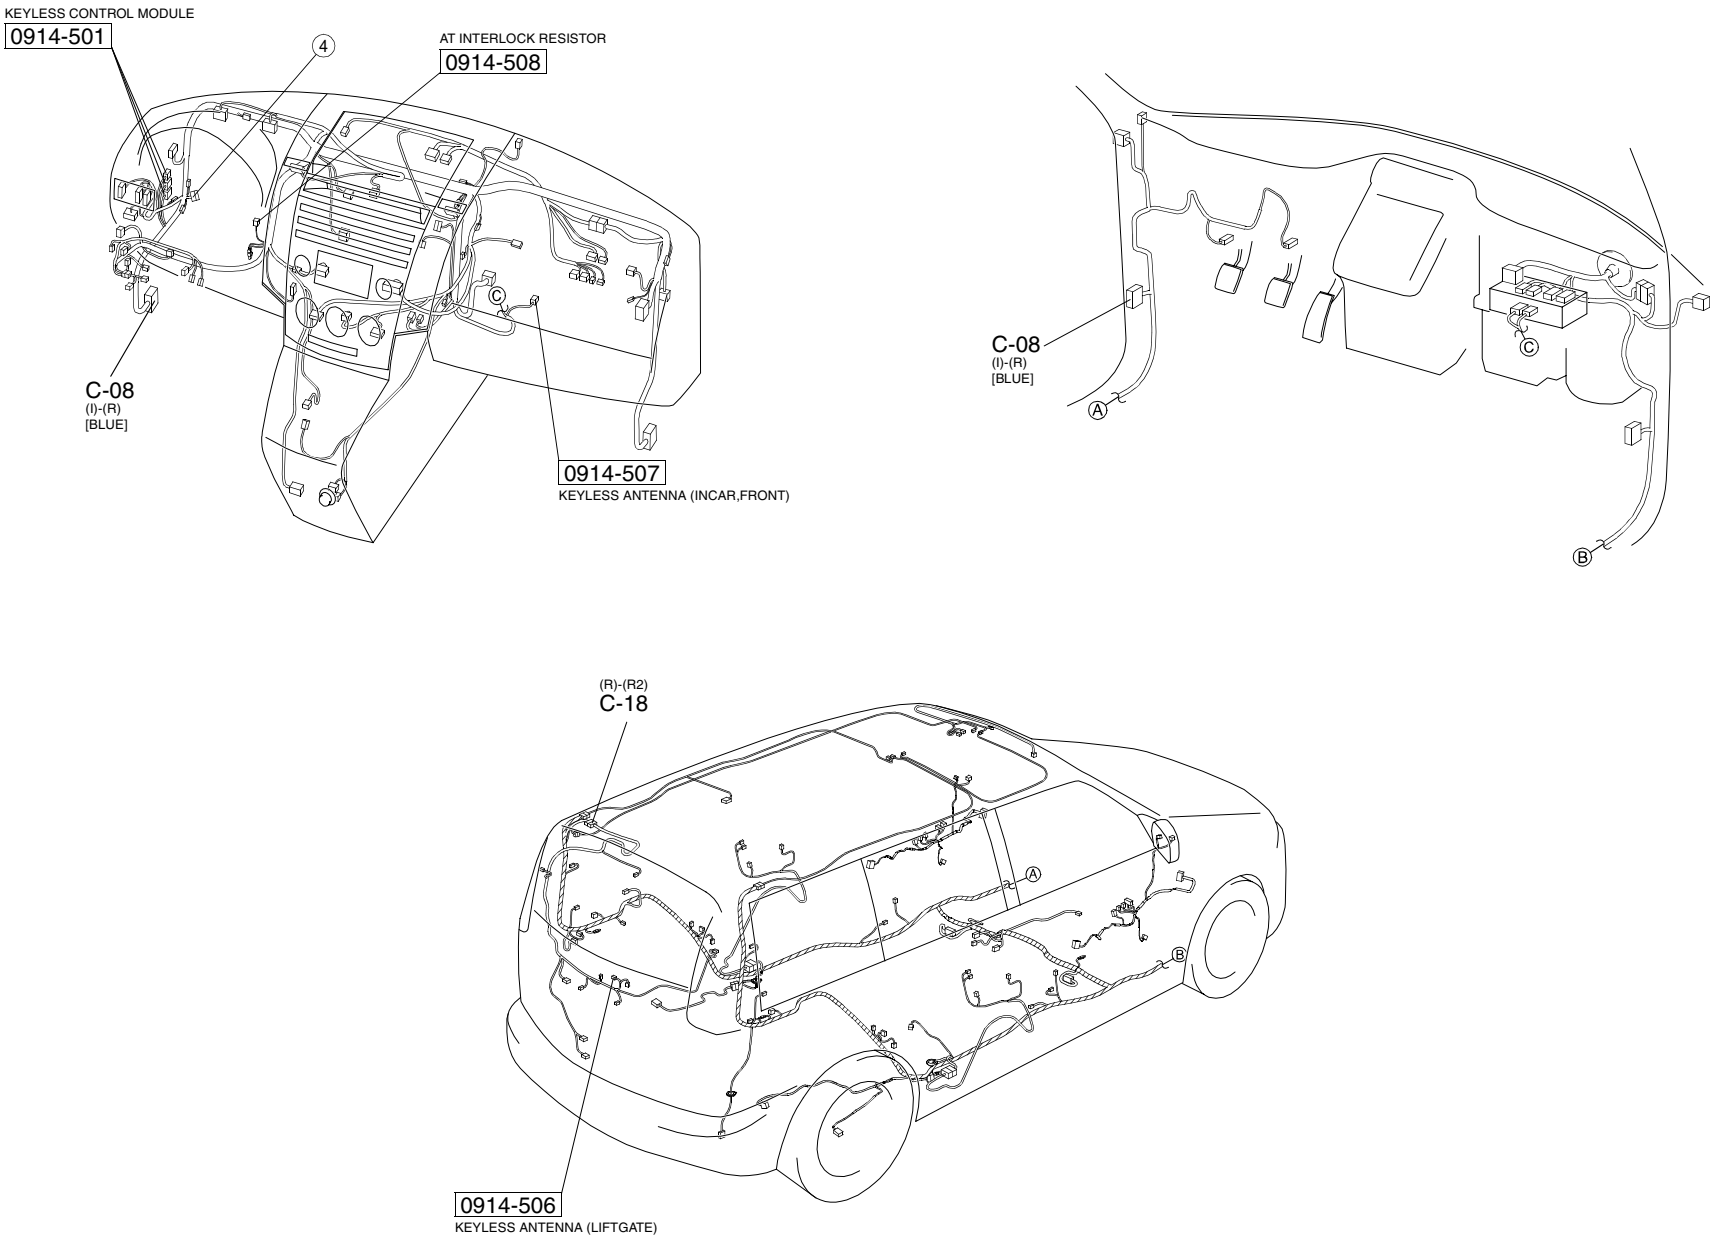
KEYLESS CONTROL MODULE
0914-501
4
AT INTERLOCK RESISTOR
0914-508
C-08
(I)-(R)
[BLUE]
0914-507
KEYLESS ANTENNA (INCAR,FRONT)
C-08
(I)-(R)
[BLUE]
(R)-(R2)
C-18
0914-506
KEYLESS ANTENNA (LIFTGATE)

KEYLESS ENTRY SYSTEM (WITH ADVANCED KEYLESS SYSTEM)

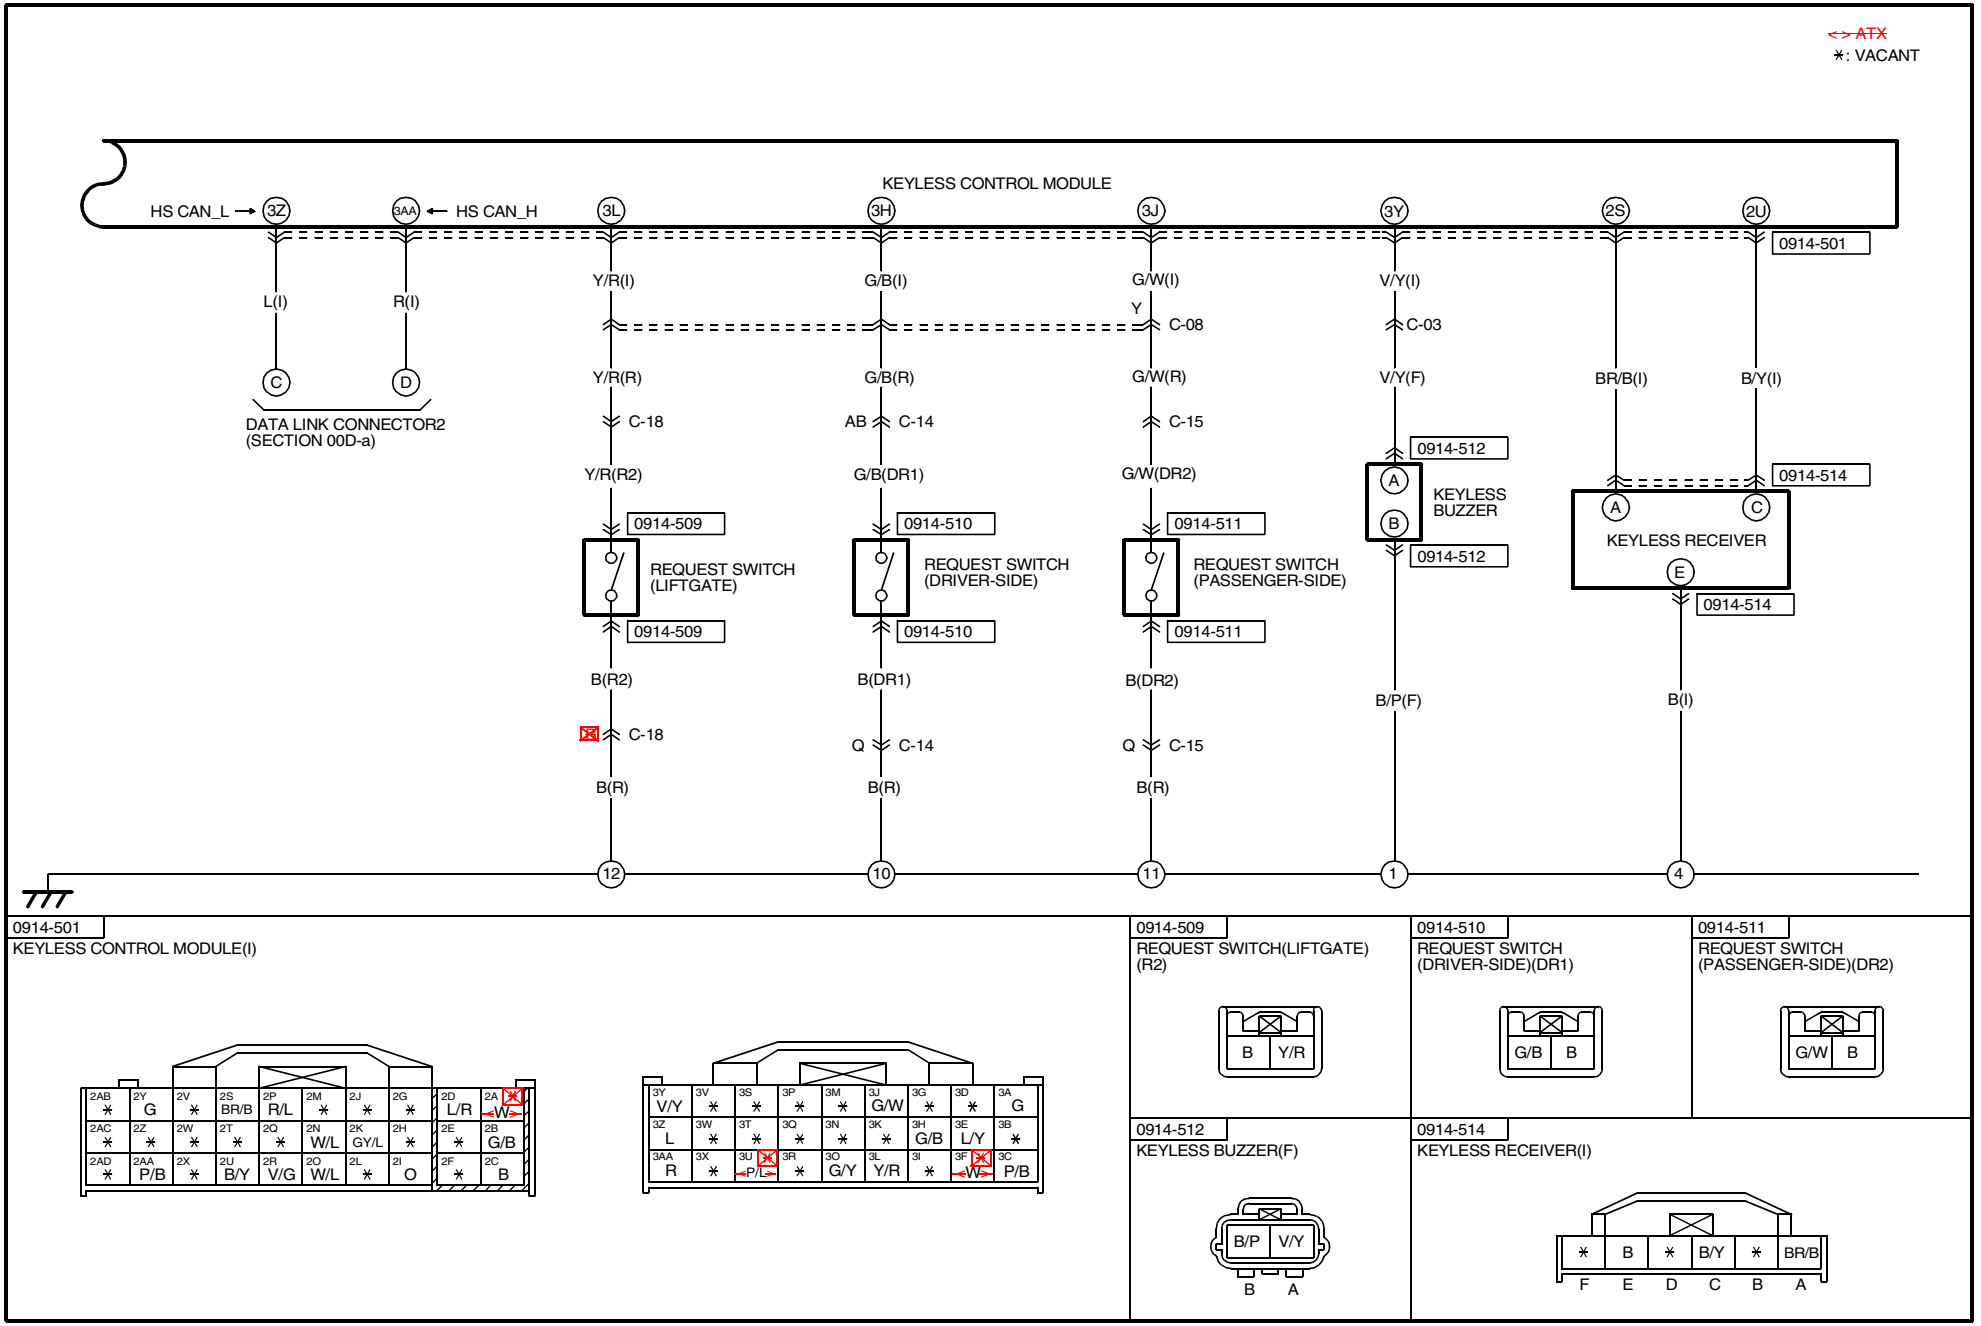

0914-501
KEYLESS CONTROL MODULE(I)


0914-509
REQUEST SWITCH(LIFTGATE)
(R2)


0914-510
REQUEST SWITCH
(DRIVER-SIDE)(DR1)


0914-511
REQUEST SWITCH
(PASSENGER-SIDE)(DR2)


0914-512
KEYLESS BUZZER(F)

0914-514
KEYLESS RECEIVER(I)

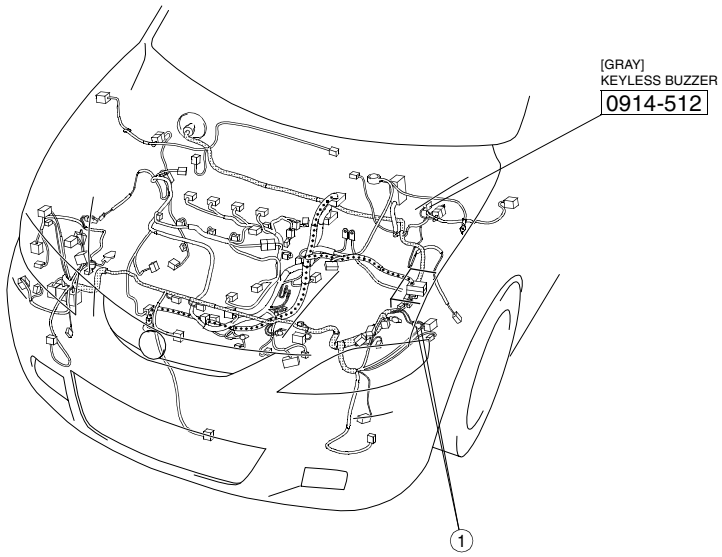

[GRAY]
KEYLESS BUZZER
0914-512
1

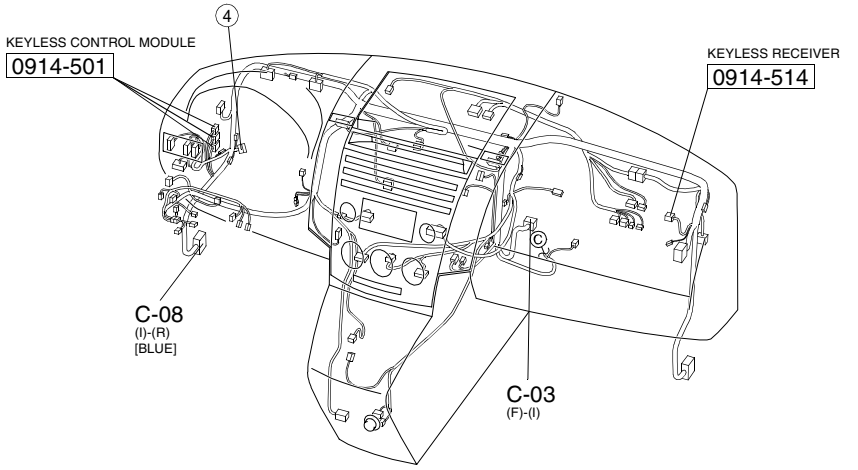
KEYLESS CONTROL MODULE
0914-501
4
KEYLESS RECEIVER
0914-514
C-08
(I)-(R)
[BLUE]
C-03
(F)-(I)

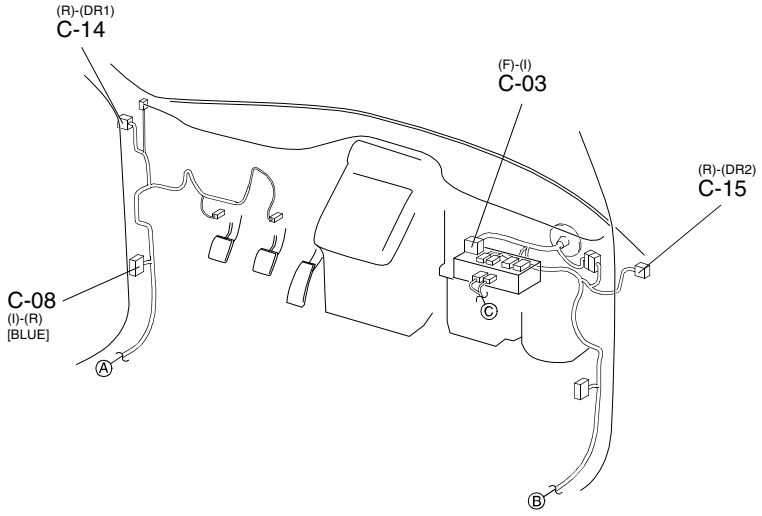
(R)-(DR1)
C-14
(F)-(I)
C-03
(R)-(DR2)
C-15
C-08
(I)-(R)
[BLUE]

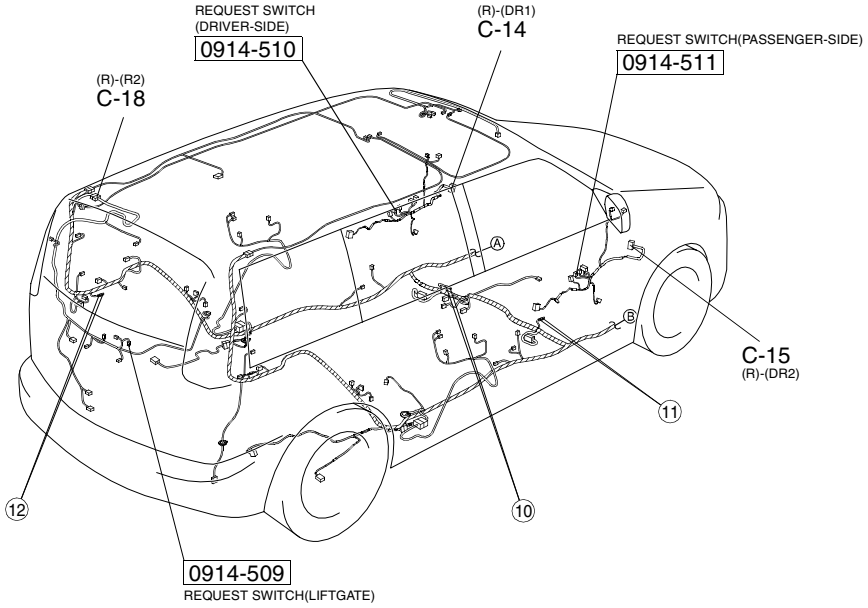
REQUEST SWITCH
(DRIVER-SIDE)
0914-510
(R)-(DR1)
C-14
REQUEST SWITCH(PASSENGER-SIDE)
0914-511
(R)-(R2)
C-18
C-15
(R)-(DR2)
11
12
10
0914-509
REQUEST SWITCH(LIFTGATE)

THEFT-DETERRENT SYSTEM

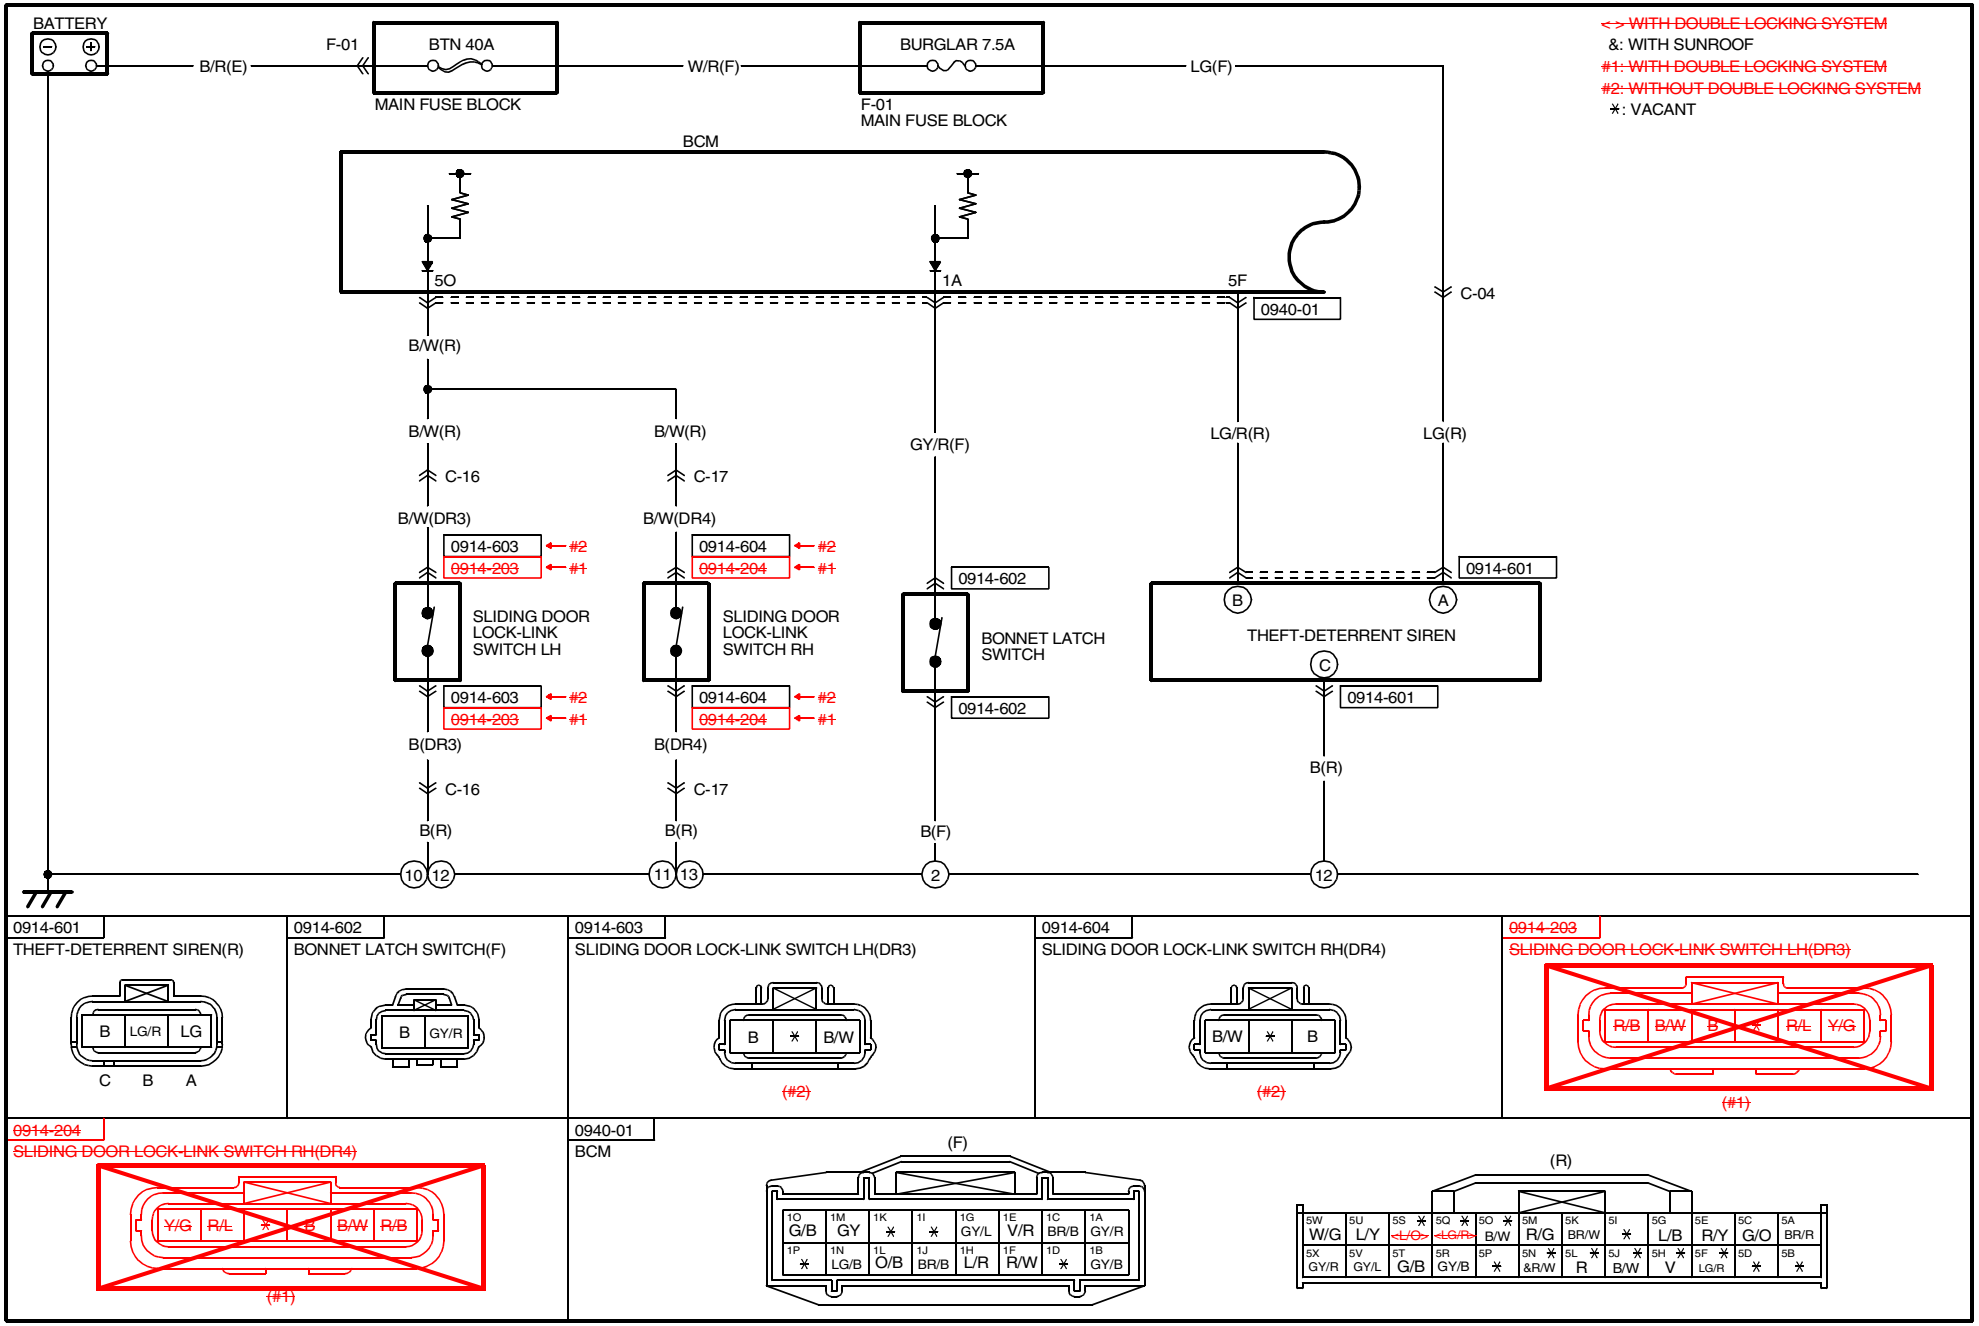

0914-601
THEFT-DETERRENT SIREN(R)

0914-602
BONNET LATCH SWITCH(F)

0914-603
SLIDING DOOR LOCK-LINK SWITCH LH(DR3)

~~(#2)~~

0914-604
SLIDING DOOR LOCK-LINK SWITCH RH(DR4)

~~(#2)~~


~~0914-203~~
~~SLIDING DOOR LOCK-LINK SWITCH LH(DR3)~~


~~(#1)~~


~~0914-204~~
~~SLIDING DOOR LOCK-LINK SWITCH RH(DR4)~~


~~(#1)~~

0940-01
BCM

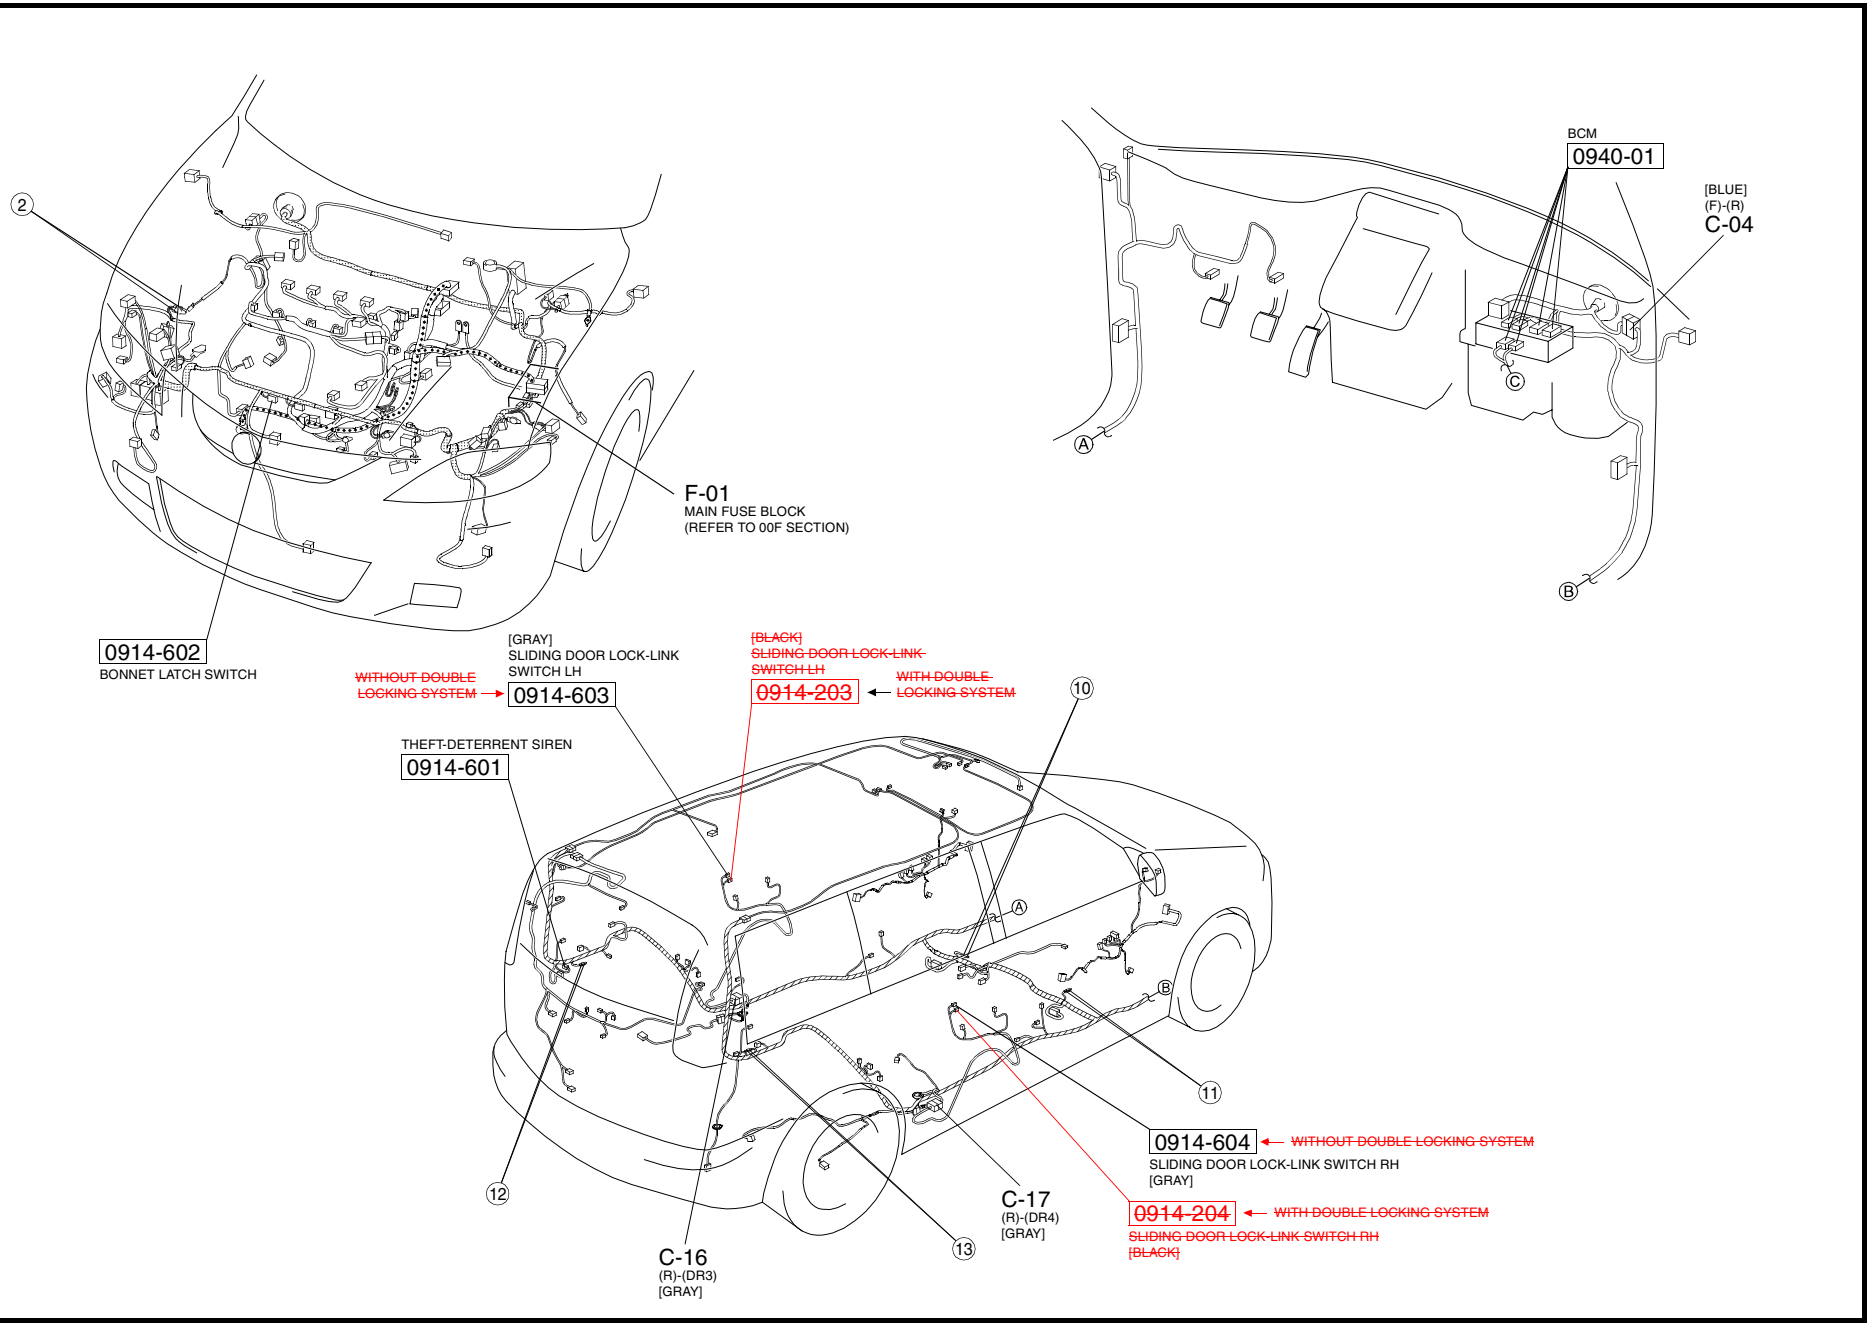

2
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0914-602
BONNET LATCH SWITCH
BCM
0940-01
[BLUE]
(F)-(R)
C-04
A
B
C
[GRAY]
SLIDING DOOR LOCK-LINK
SWITCH LH
WITHOUT DOUBLE LOCKING SYSTEM
0914-603
~~[BLACK]~~
~~SLIDING DOOR LOCK-LINK SWITCH LH~~
~~0914-203~~
~~WITH DOUBLE LOCKING SYSTEM~~
THEFT-DETERRENT SIREN
0914-601
10
11
12
13
C-16
(R)-(DR3)
[GRAY]
C-17
(R)-(DR4)
[GRAY]
0914-604
WITHOUT DOUBLE LOCKING SYSTEM
SLIDING DOOR LOCK-LINK SWITCH RH
[GRAY]
~~0914-204~~
~~WITH DOUBLE LOCKING SYSTEM~~
~~SLIDING DOOR LOCK-LINK SWITCH RH~~
~~[BLACK]~~

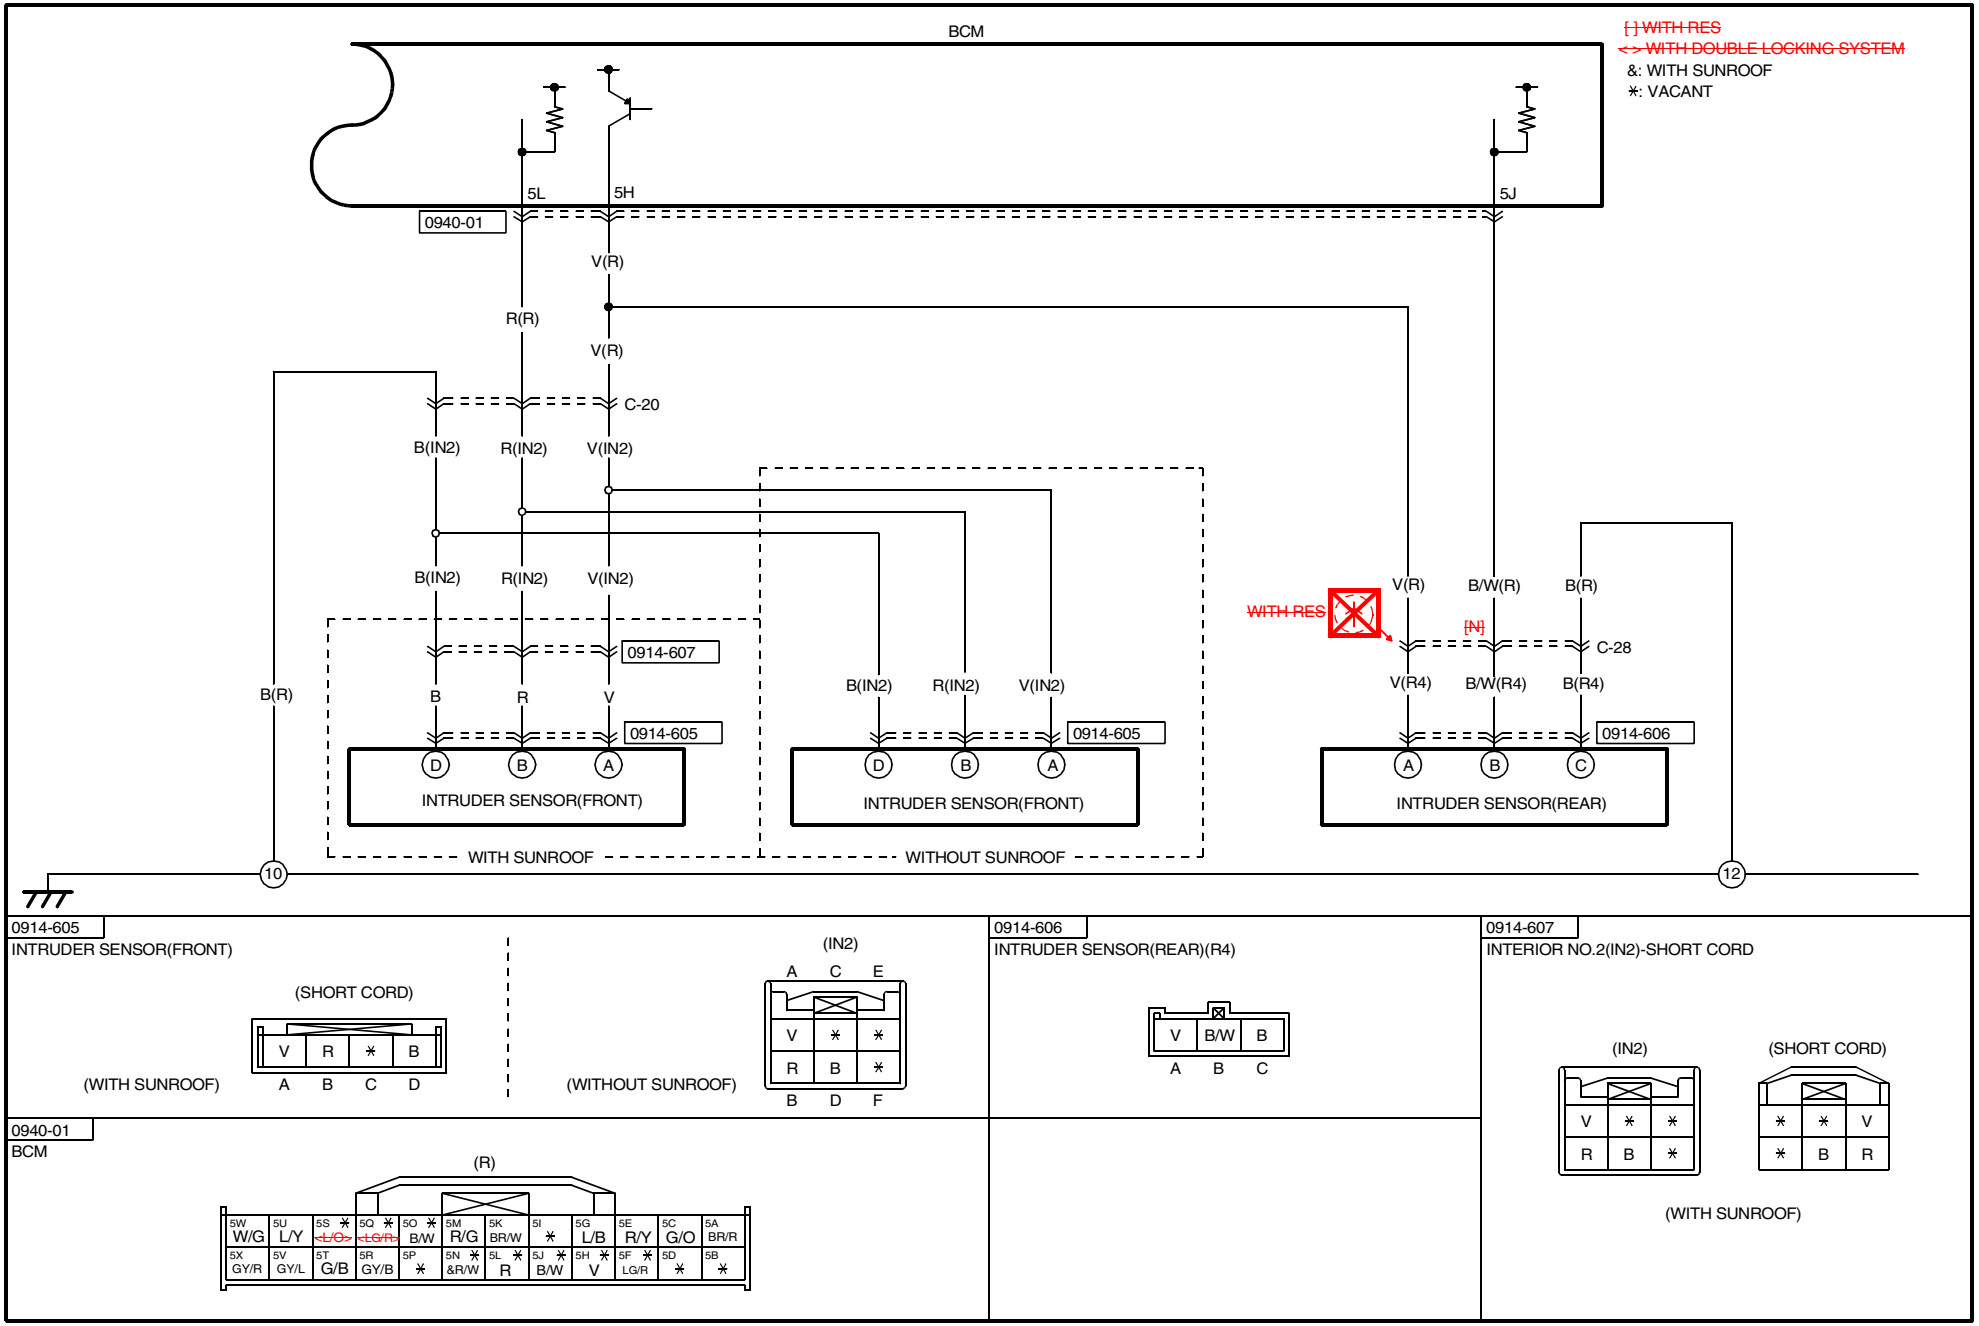
BCM
[ ] WITH RES
<> WITH DOUBLE LOCKING SYSTEM
&: WITH SUNROOF
*: VACANT
5L
5H
5J
0940-01
V(R)
R(R)
V(R)
C-20
B(IN2)
R(IN2)
V(IN2)
B(IN2)
R(IN2)
V(IN2)
0914-607
B
R
V
0914-605
B(R)
D
B
A
INTRUDER SENSOR(FRONT)
WITH SUNROOF
B(IN2)
R(IN2)
V(IN2)
0914-605
D
B
A
INTRUDER SENSOR(FRONT)
WITHOUT SUNROOF
WITH RES
V(R)
B/W(R)
B(R)
[N]
C-28
V(R4)
B/W(R4)
B(R4)
0914-606
A
B
C
INTRUDER SENSOR(REAR)
10
12
0914-605
INTRUDER SENSOR(FRONT)
(SHORT CORD)
V R * B
A B C D
(WITH SUNROOF)
(IN2)
A C E
V * *
R B *
B D F
(WITHOUT SUNROOF)
0914-606
INTRUDER SENSOR(REAR)(R4)
V B/W B
A B C
0914-607
INTERIOR NO.2(IN2)-SHORT CORD
(IN2)
V * *
R B *
(SHORT CORD)
* * V
* B R
(WITH SUNROOF)
0940-01
BCM
(R)
5W W/G
5U L/Y
5S * <L/O>
5Q * <LG/R>
5O * B/W
5M R/G
5K BR/W
5I *
5G L/B
5E R/Y
5C G/O
5A BR/R
5X GY/R
5V GY/L
5T G/B
5R GY/B
5P *
5N * &R/W
5L * R
5J * B/W
5H * V
5F * LG/R
5D *
5B *

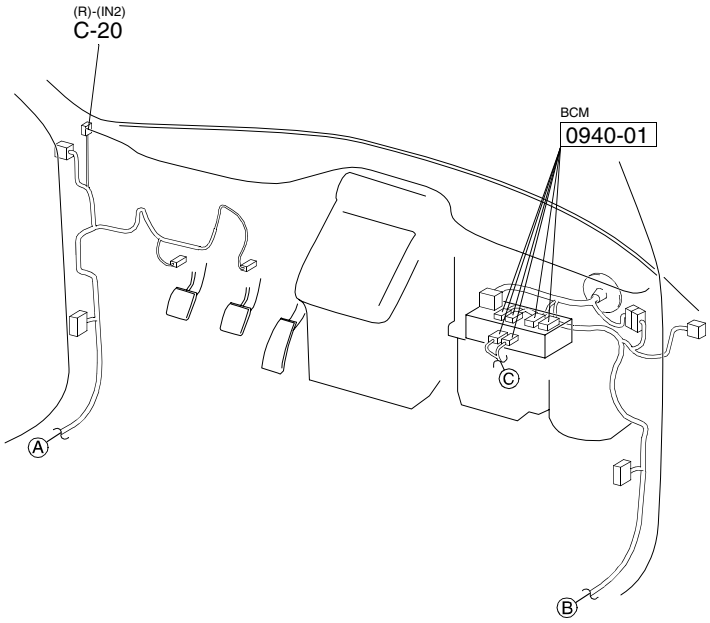
(R)-(IN2)
C-20
BCM
0940-01
A
B
C

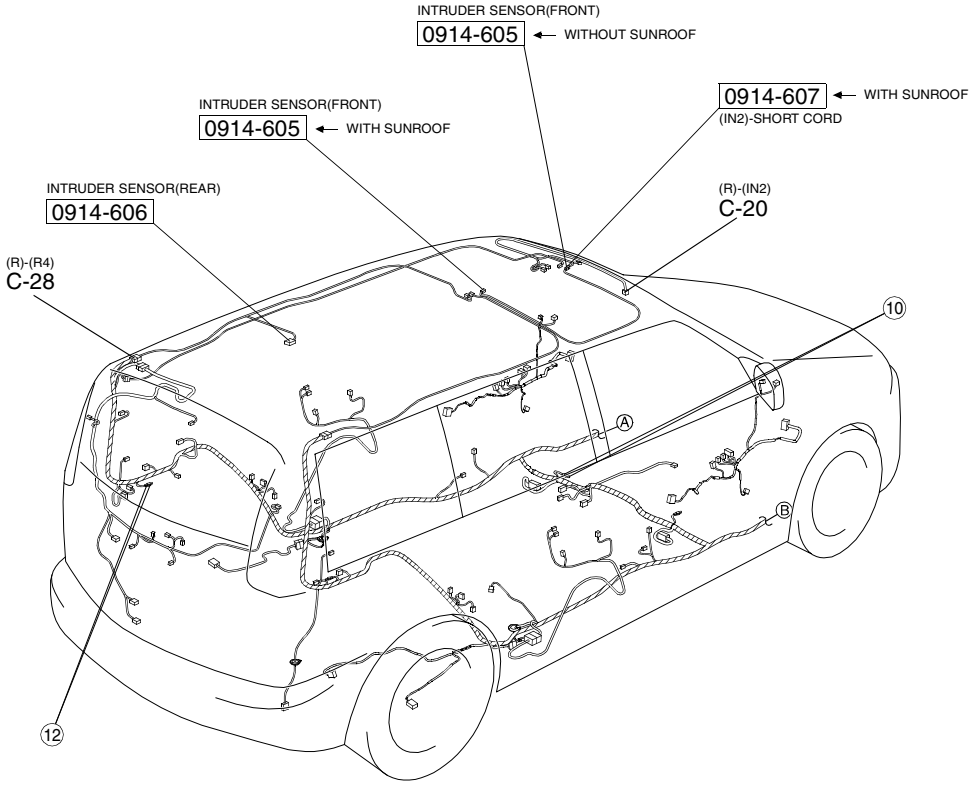

INTRUDER SENSOR(FRONT)
0914-605
WITHOUT SUNROOF
0914-607
WITH SUNROOF
(IN2)-SHORT CORD
INTRUDER SENSOR(FRONT)
0914-605
WITH SUNROOF
INTRUDER SENSOR(REAR)
0914-606
(R)-(IN2)
C-20
(R)-(R4)
C-28
10
12
A
B

SUNROOF

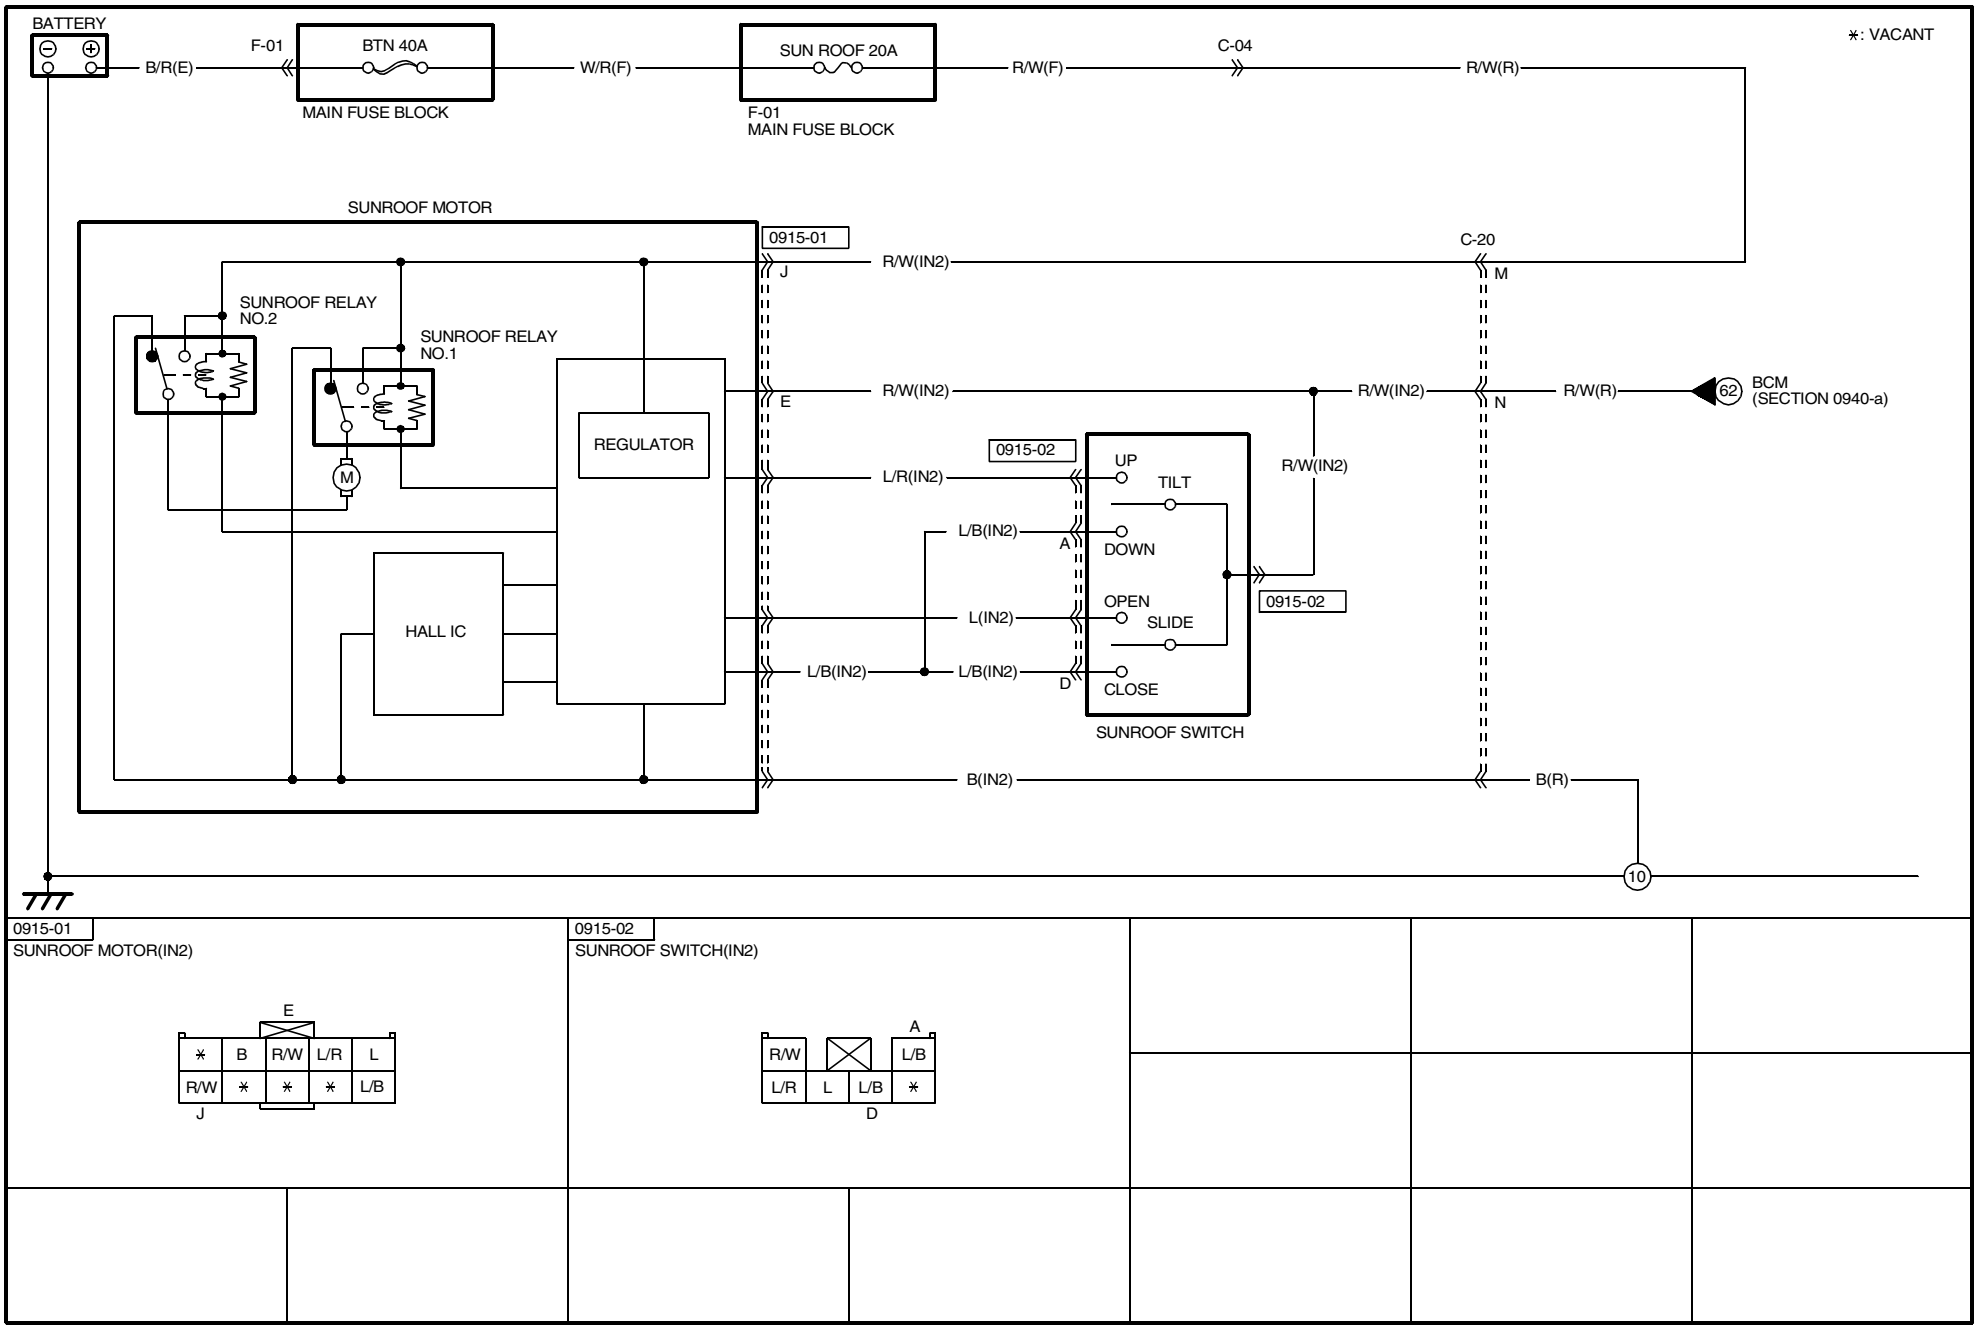


0915-01
SUNROOF MOTOR(IN2)

0915-02
SUNROOF SWITCH(IN2)

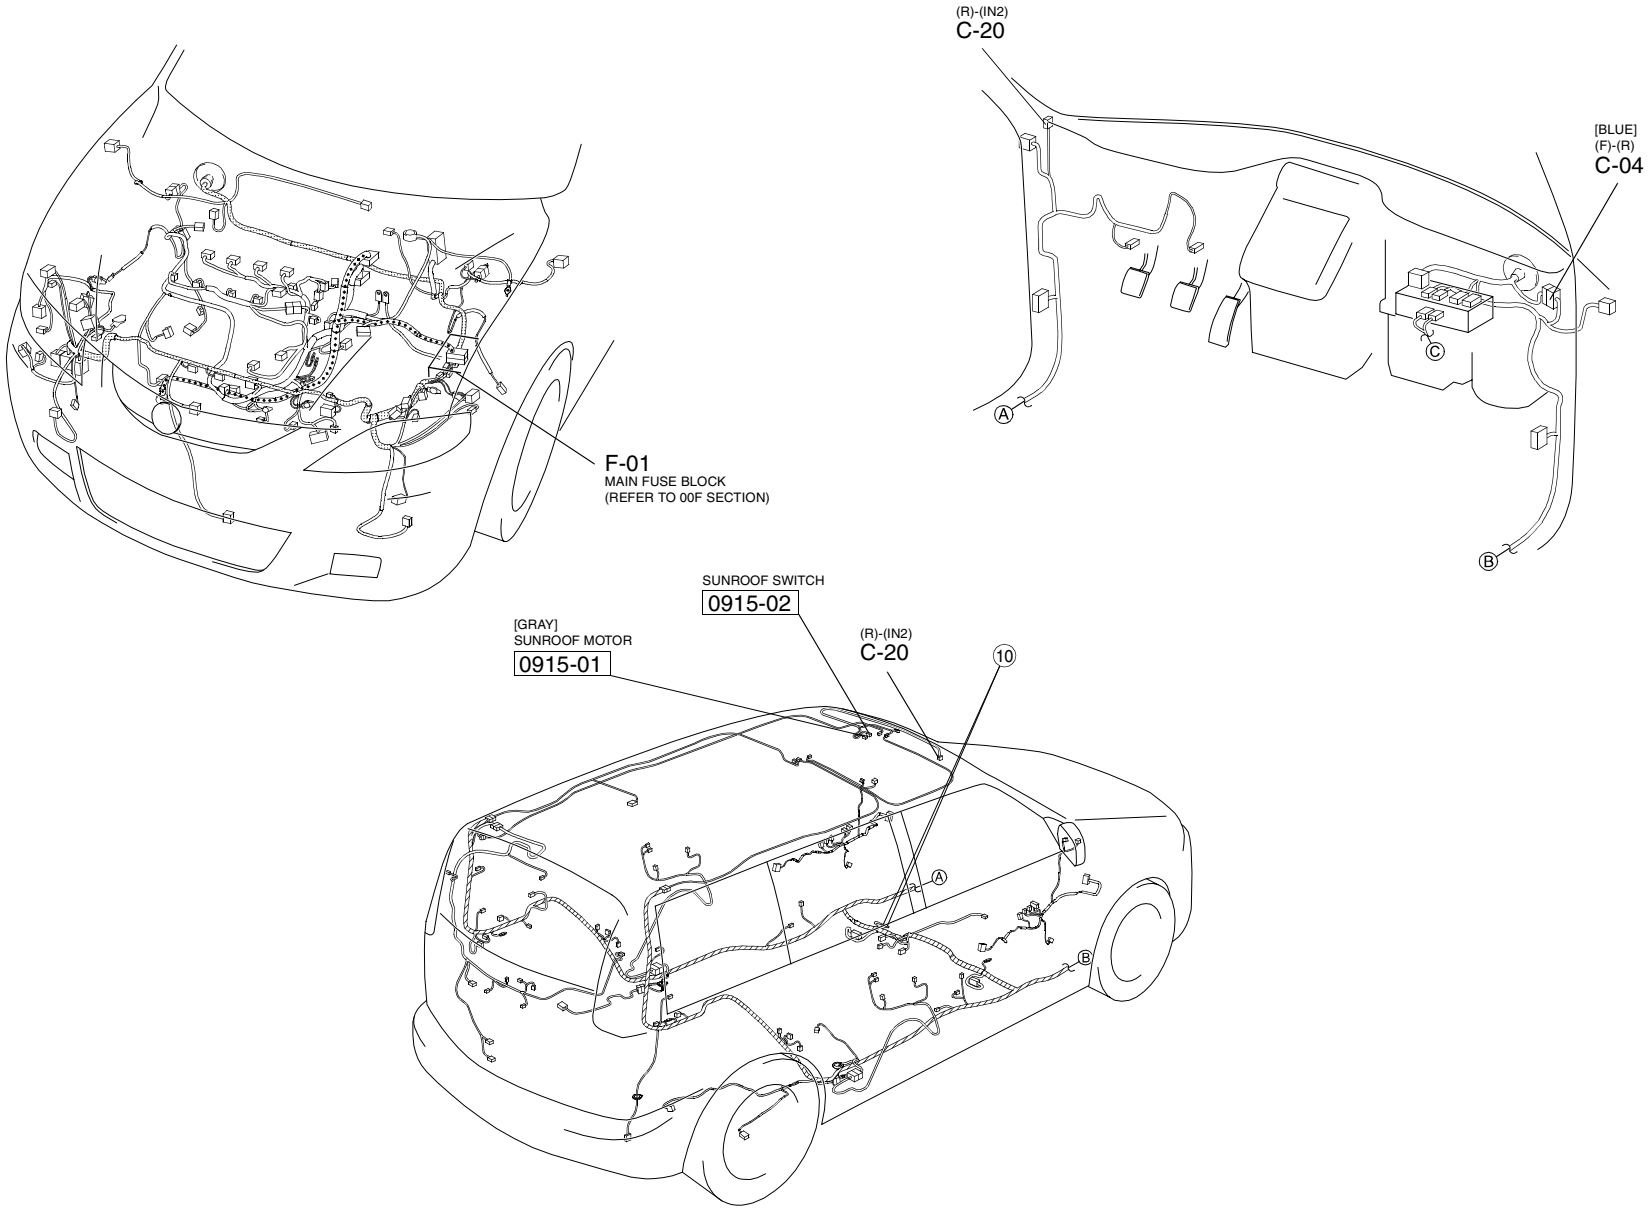
(R)-(IN2)
C-20
[BLUE]
(F)-(R)
C-04
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
SUNROOF SWITCH
0915-02
[GRAY]
SUNROOF MOTOR
0915-01
(R)-(IN2)
C-20
10
A
B
C
F

HEADLIGHT

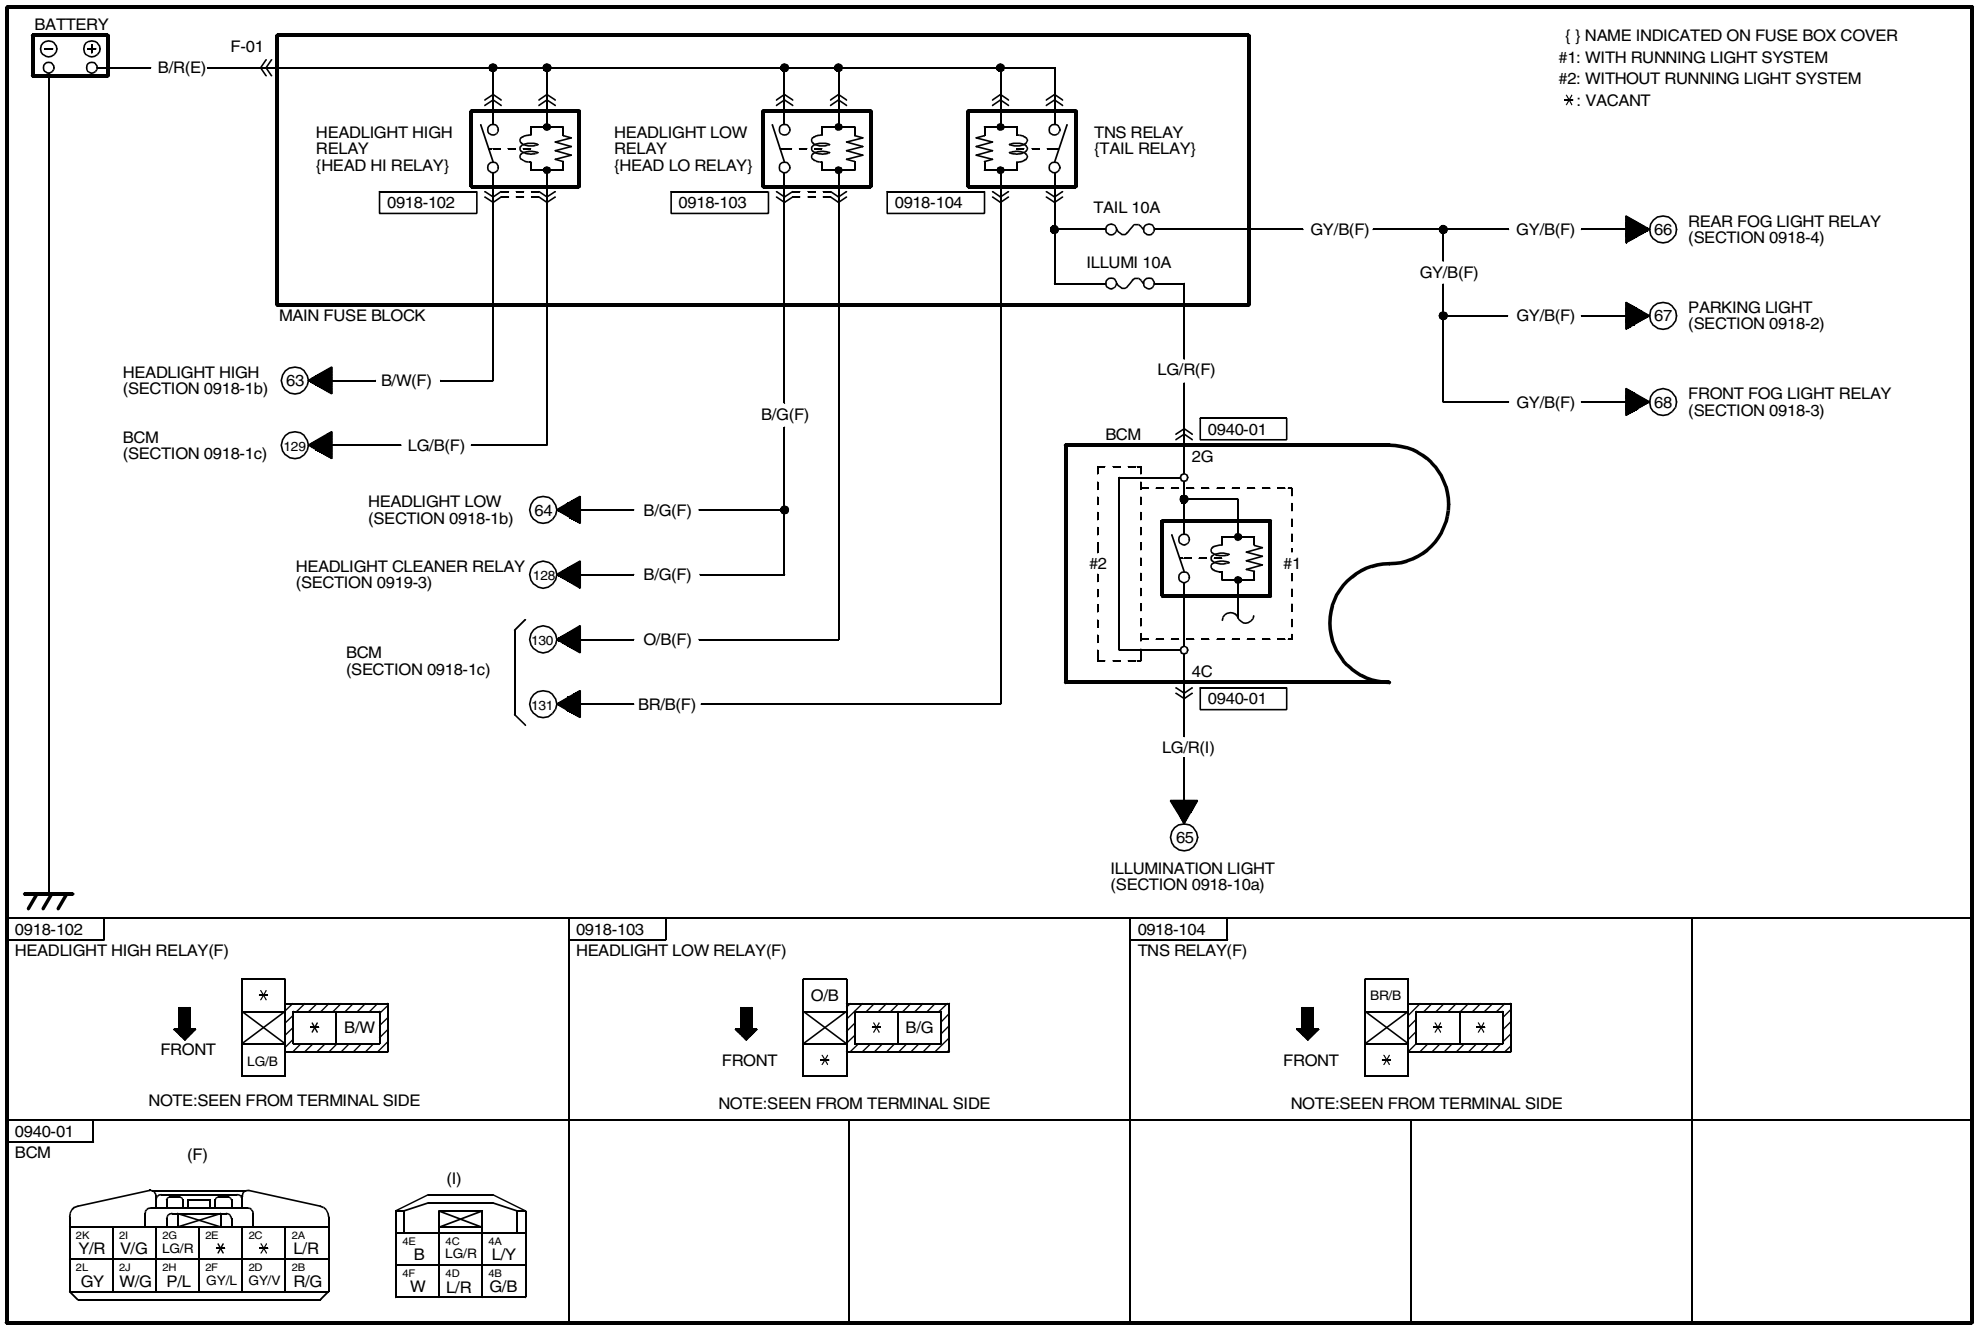

0918-102 HEADLIGHT HIGH RELAY(F)

NOTE:SEEN FROM TERMINAL SIDE

0918-103 HEADLIGHT LOW RELAY(F)

NOTE:SEEN FROM TERMINAL SIDE


0918-104 TNS RELAY(F)

NOTE:SEEN FROM TERMINAL SIDE


0940-01 BCM


(F)

(I)

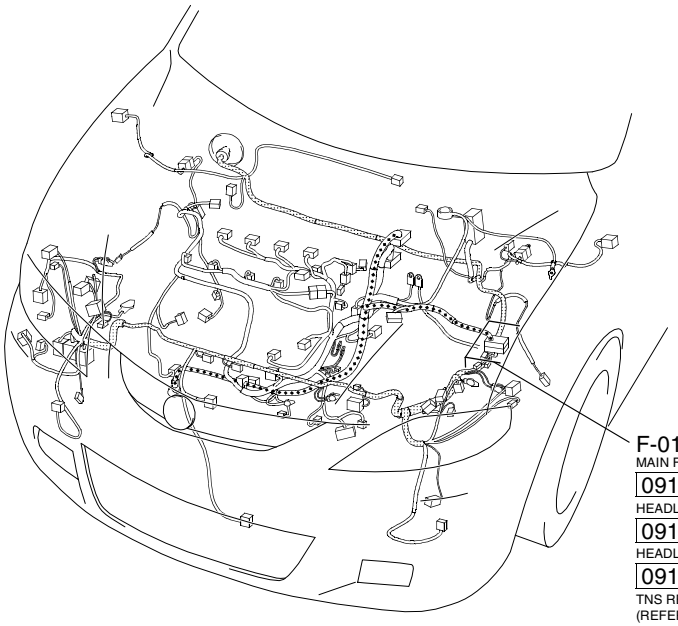


F-01
MAIN FUSE BLOCK
0918-102
HEADLIGHT HIGH RELAY
0918-103
HEADLIGHT LOW RELAY
0918-104
TNS RELAY
(REFER TO 00F SECTION)

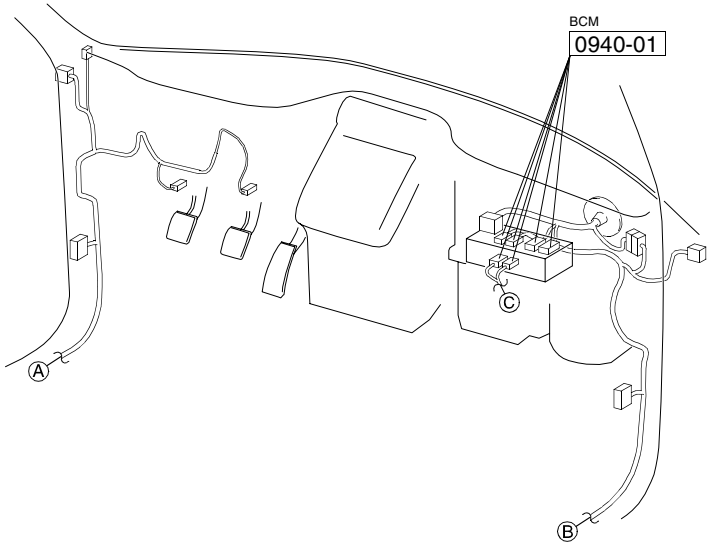


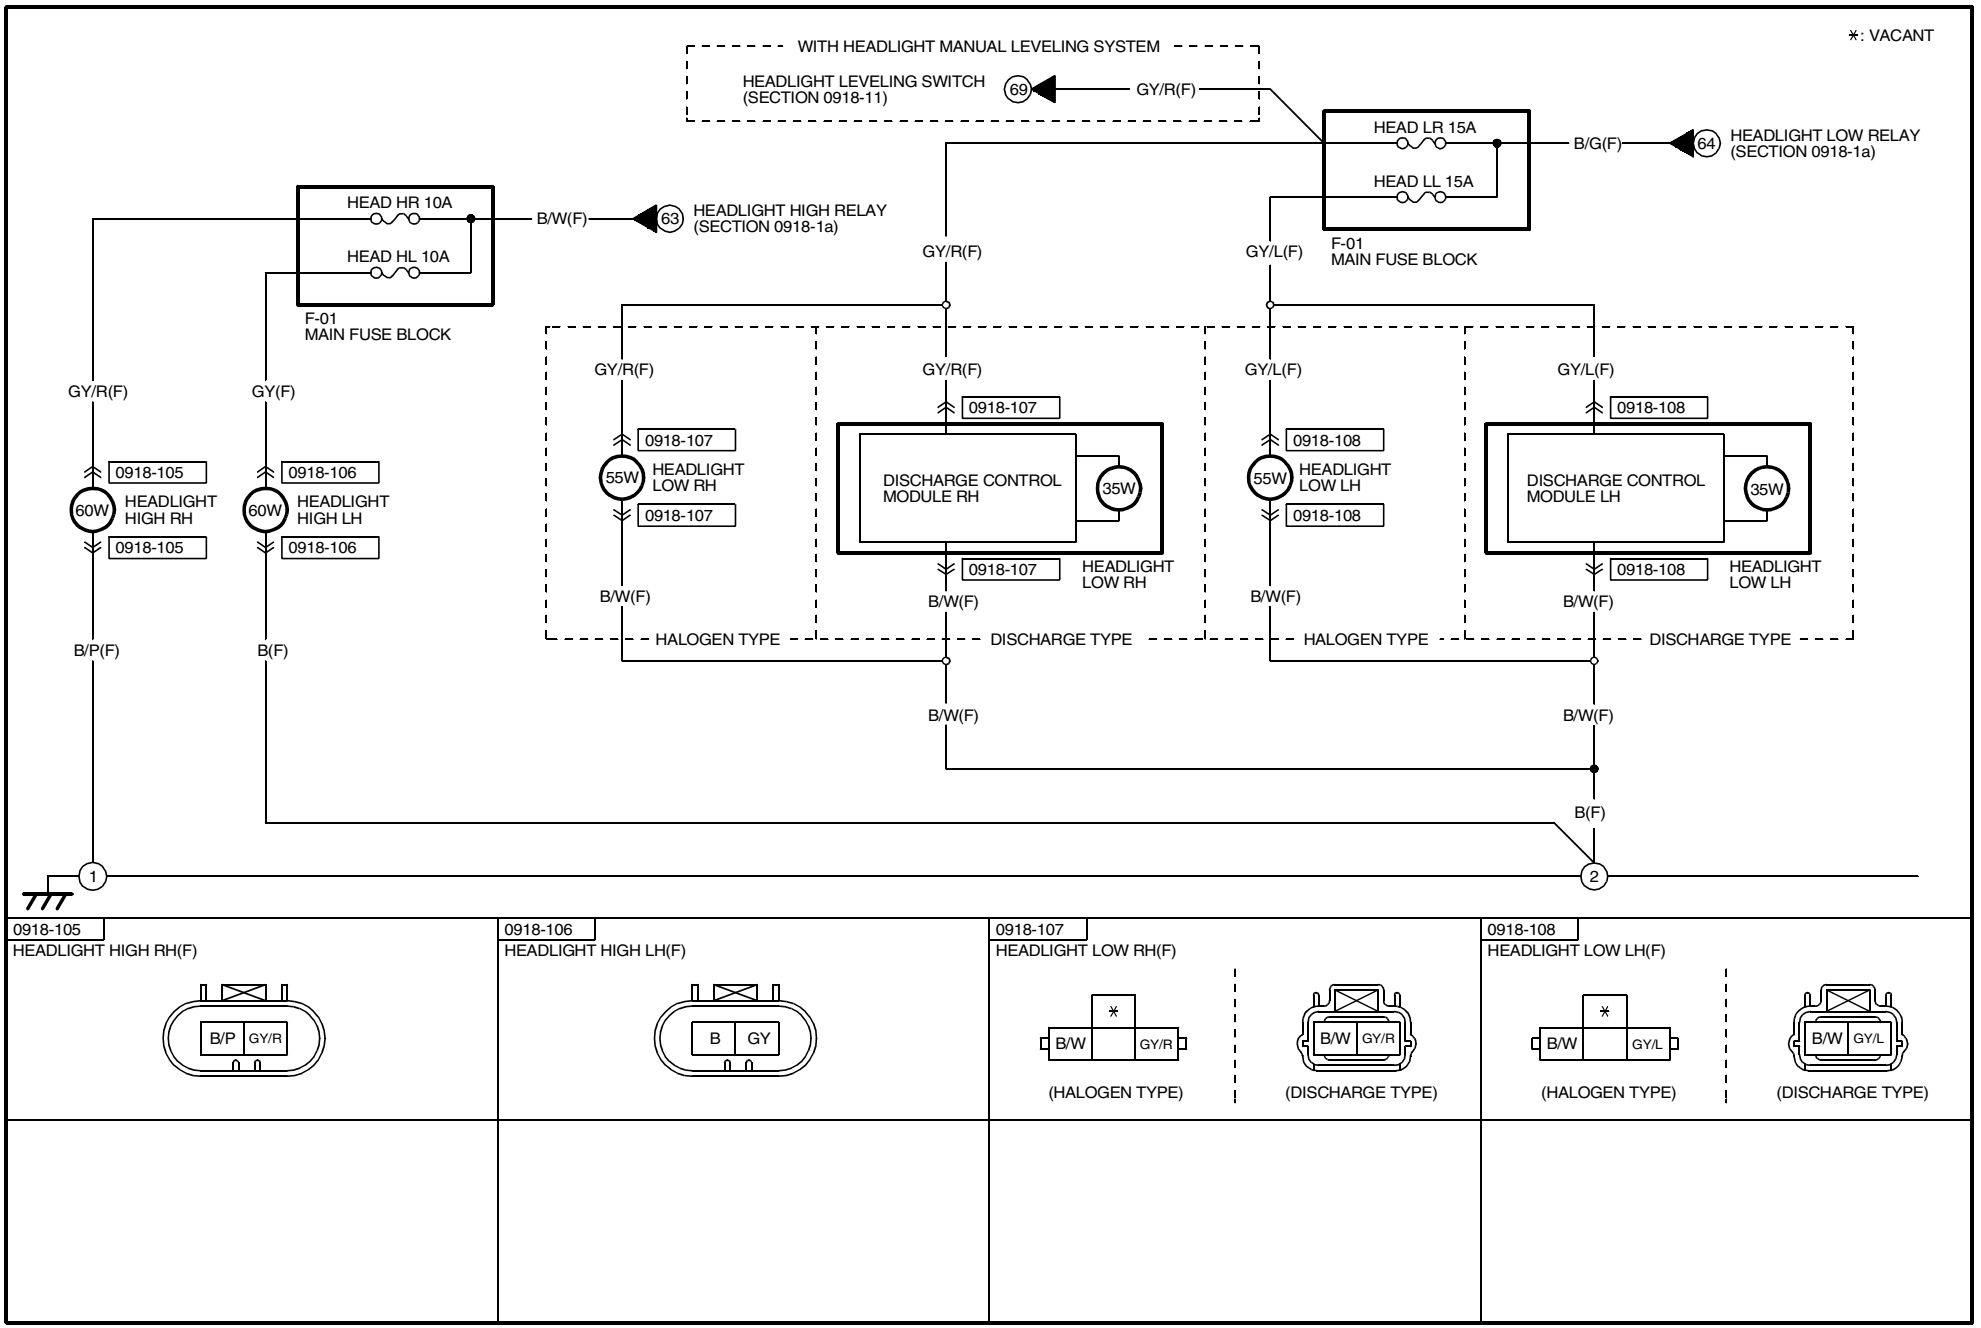


0918-105 HEADLIGHT HIGH RH(F)	0918-106 HEADLIGHT HIGH LH(F)	0918-107 HEADLIGHT LOW RH(F)	0918-108 HEADLIGHT LOW LH(F)
		(HALOGEN TYPE) (DISCHARGE TYPE)	(HALOGEN TYPE) (DISCHARGE TYPE)

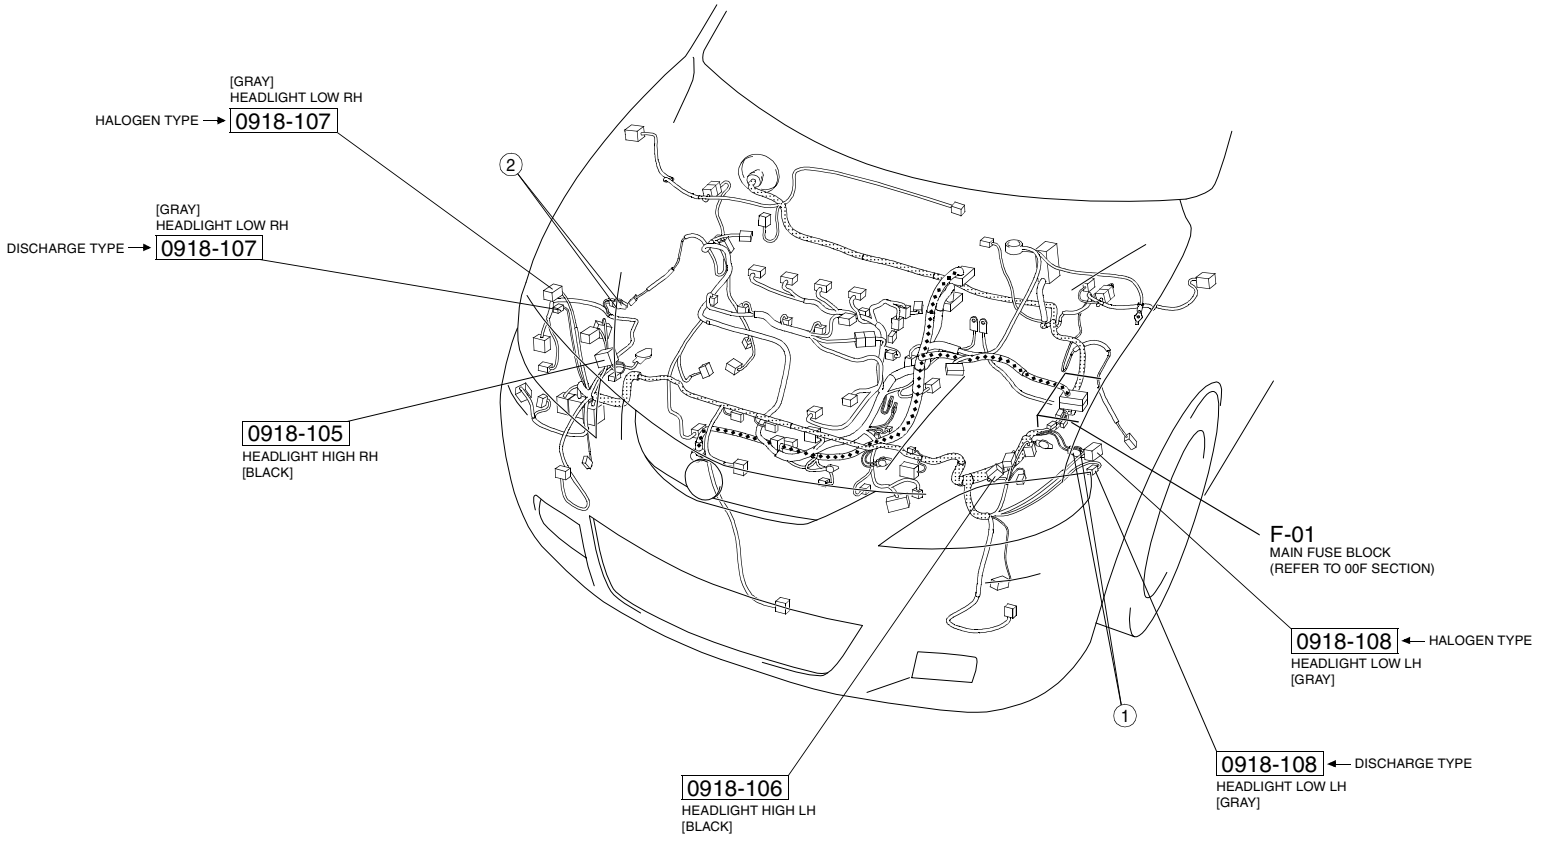
[GRAY]
HEADLIGHT LOW RH
HALOGEN TYPE
0918-107
[GRAY]
HEADLIGHT LOW RH
DISCHARGE TYPE
0918-107
0918-105
HEADLIGHT HIGH RH
[BLACK]
2
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0918-108
HALOGEN TYPE
HEADLIGHT LOW LH
[GRAY]
1
0918-108
DISCHARGE TYPE
HEADLIGHT LOW LH
[GRAY]
0918-106
HEADLIGHT HIGH LH
[BLACK]

[ ] AUTO A/C
@: WITH AUTO LIGHT SYSTEM
#1: WITH RUNNING LIGHT SYSTEM
#2: WITHOUT RUNNING LIGHT SYSTEM
*: VACANT

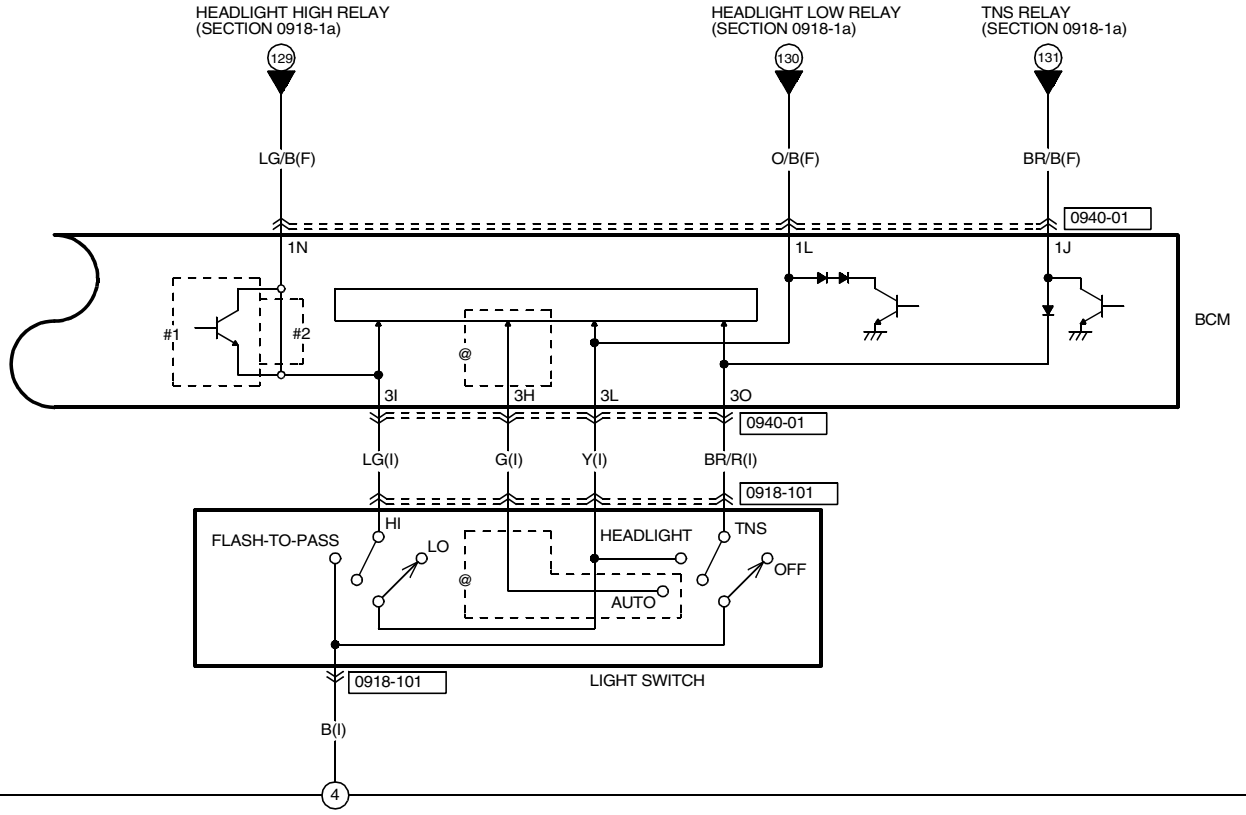


0918-101
LIGHT SWITCH(I)

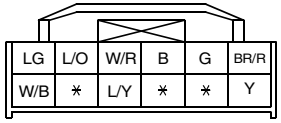


LG	L/O	W/R	B	G	BR/R
W/B	*	L/Y	*	*	Y

0940-01
BCM

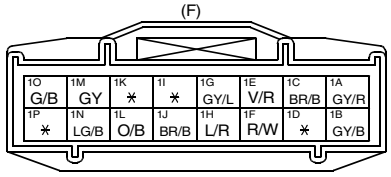


(F)


1O G/B	1M GY	1K *	1I *	1G GY/L	1E V/R	1C BR/B	1A GY/R
1P *	1N LG/B	1L O/B	1J BR/B	1H L/R	1F R/W	1D *	1B GY/B

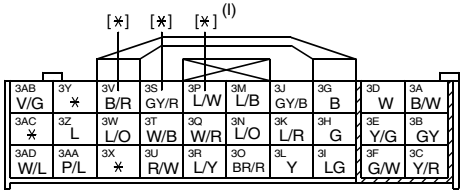


[*] [*] [*] (I)

3AB V/G	3Y *	3V B/R	3S GY/R	3P L/W	3M L/B	3J GY/B	3G B	3D W	3A B/W
3AC *	3Z L	3W L/O	3T W/B	3Q W/R	3N L/O	3K L/R	3H G	3E Y/G	3B GY
3AD W/L	3AA P/L	3X *	3U R/W	3R L/Y	3O BR/R	3L Y	3I LG	3F G/W	3C Y/R

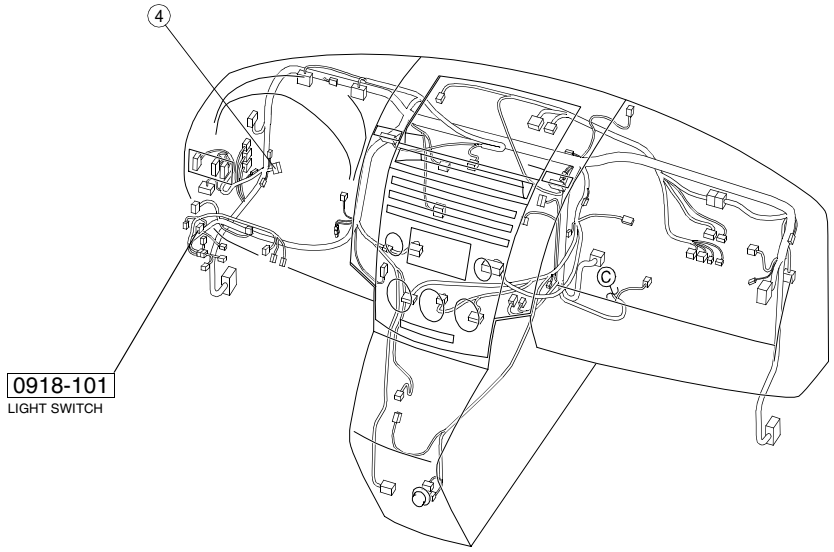
4
C
0918-101
LIGHT SWITCH

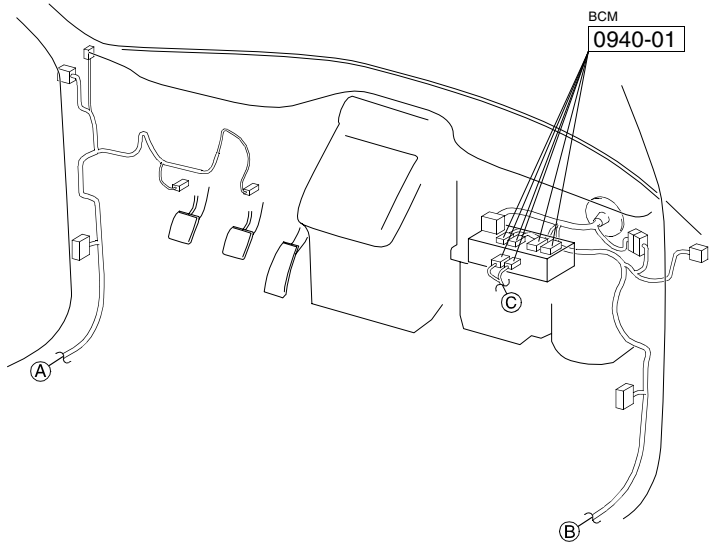
BCM
0940-01
C
A
B

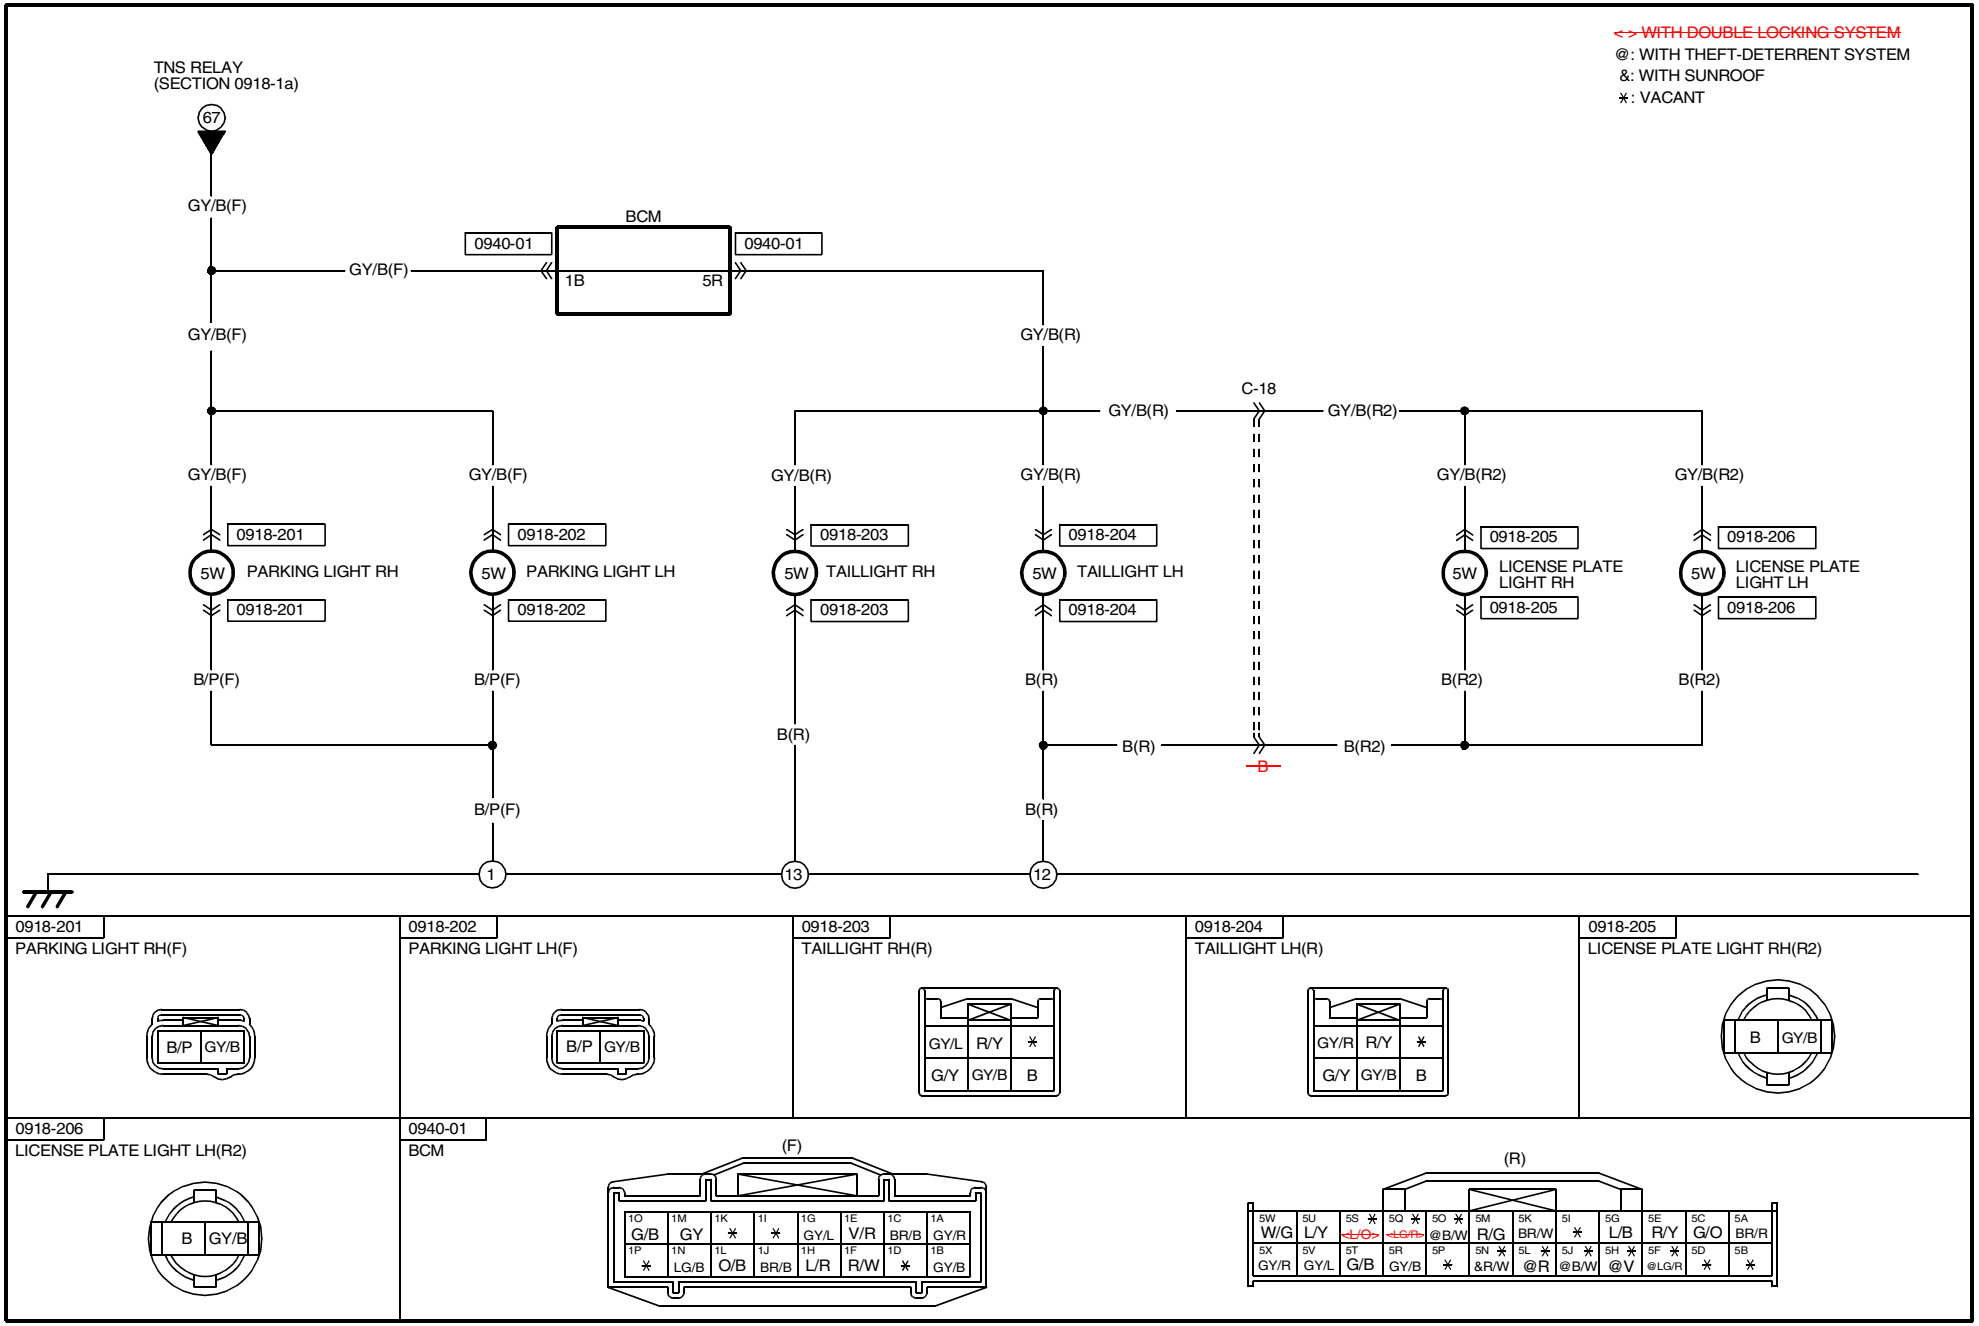

0918-201
PARKING LIGHT RH(F)

0918-202
PARKING LIGHT LH(F)

0918-203
TAILLIGHT RH(R)

0918-204
TAILLIGHT LH(R)


0918-205
LICENSE PLATE LIGHT RH(R2)

0918-206
LICENSE PLATE LIGHT LH(R2)


0940-01
BCM

(F)

(R)

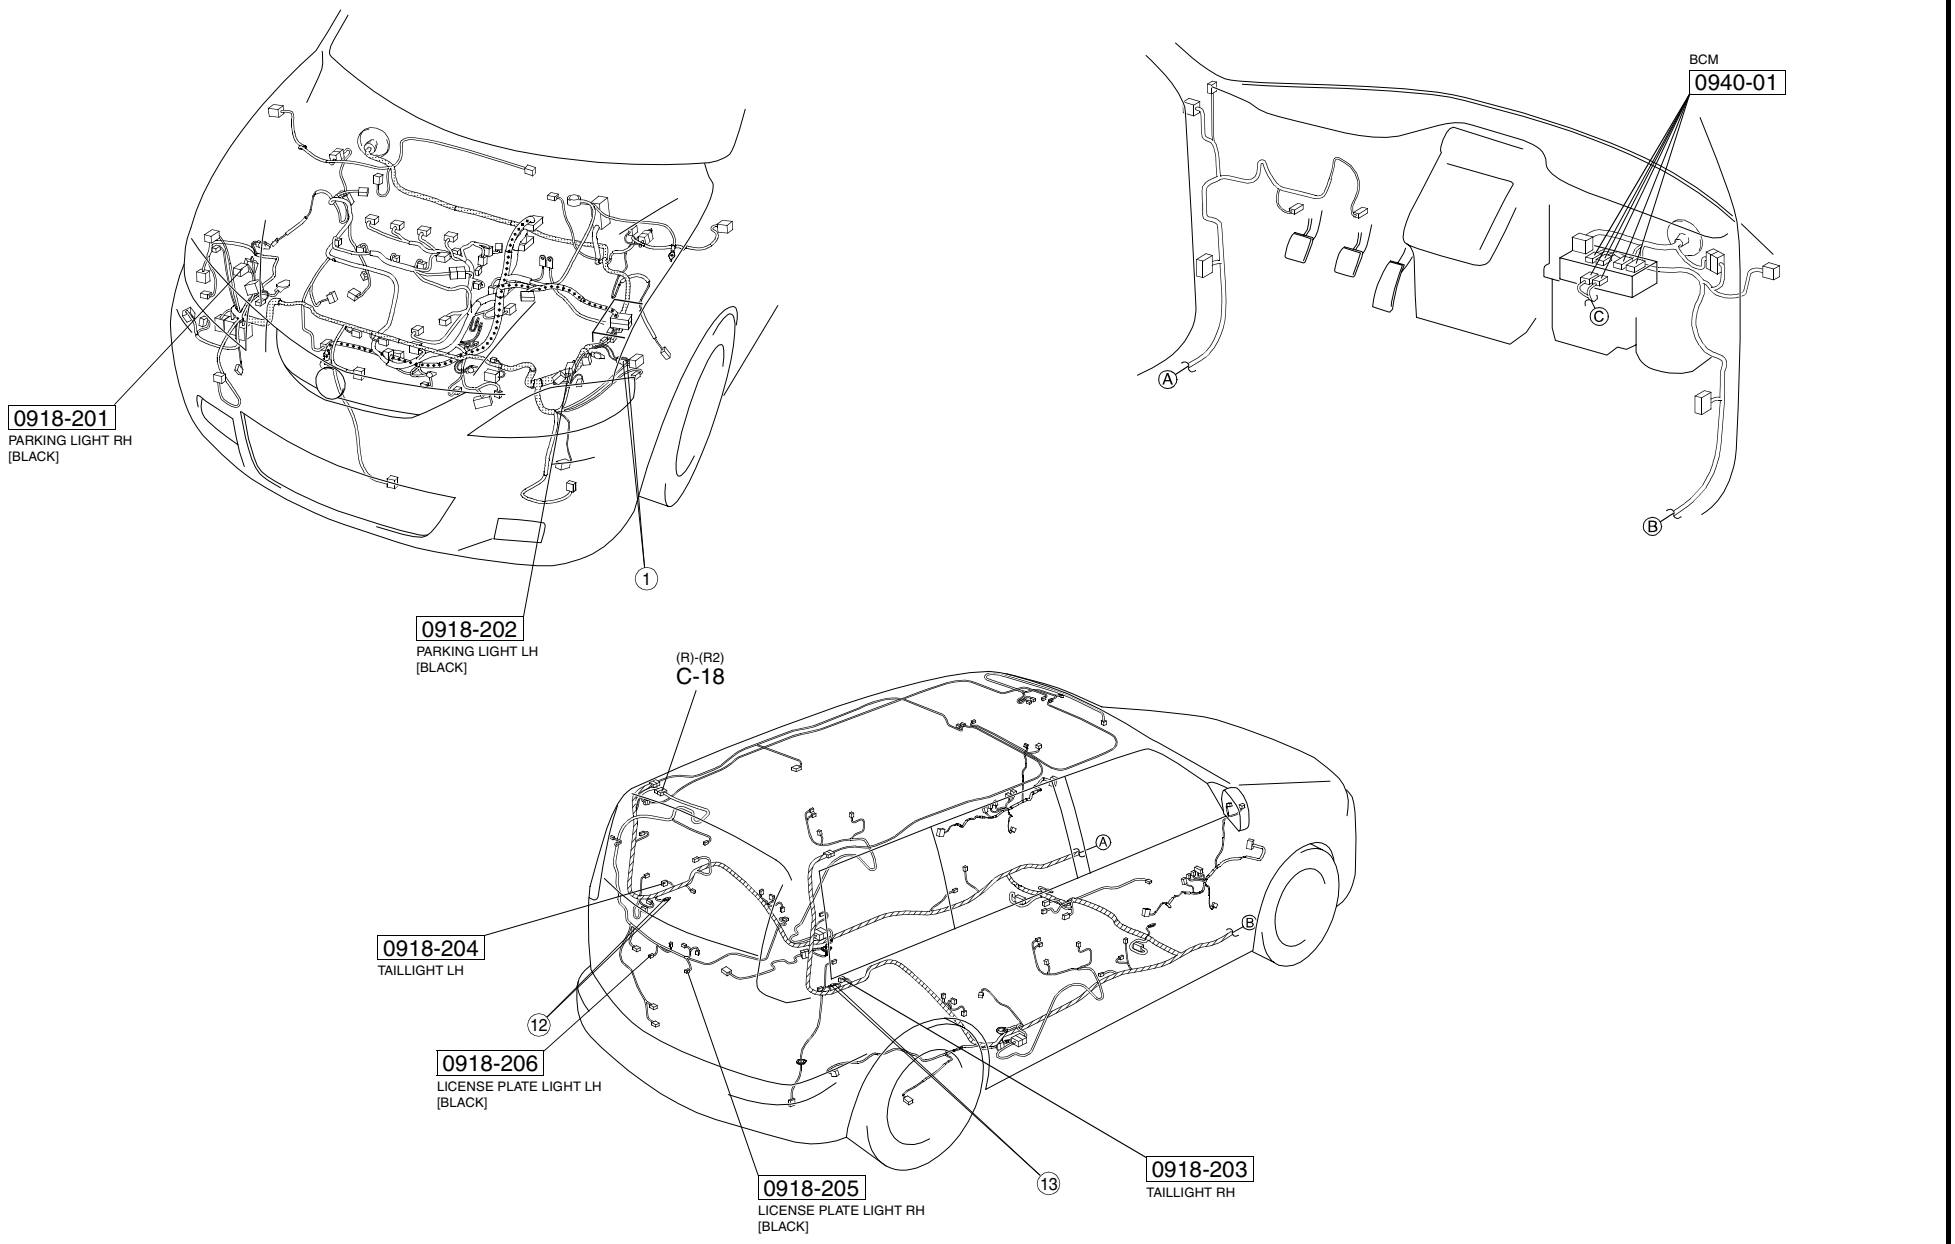
0918-201
PARKING LIGHT RH
[BLACK]
1
0918-202
PARKING LIGHT LH
[BLACK]
BCM
0940-01
A
B
C
(R)-(R2)
C-18
0918-204
TAILLIGHT LH
12
0918-206
LICENSE PLATE LIGHT LH
[BLACK]
0918-205
LICENSE PLATE LIGHT RH
[BLACK]
13
0918-203
TAILLIGHT RH

FRONT FOG LIGHT

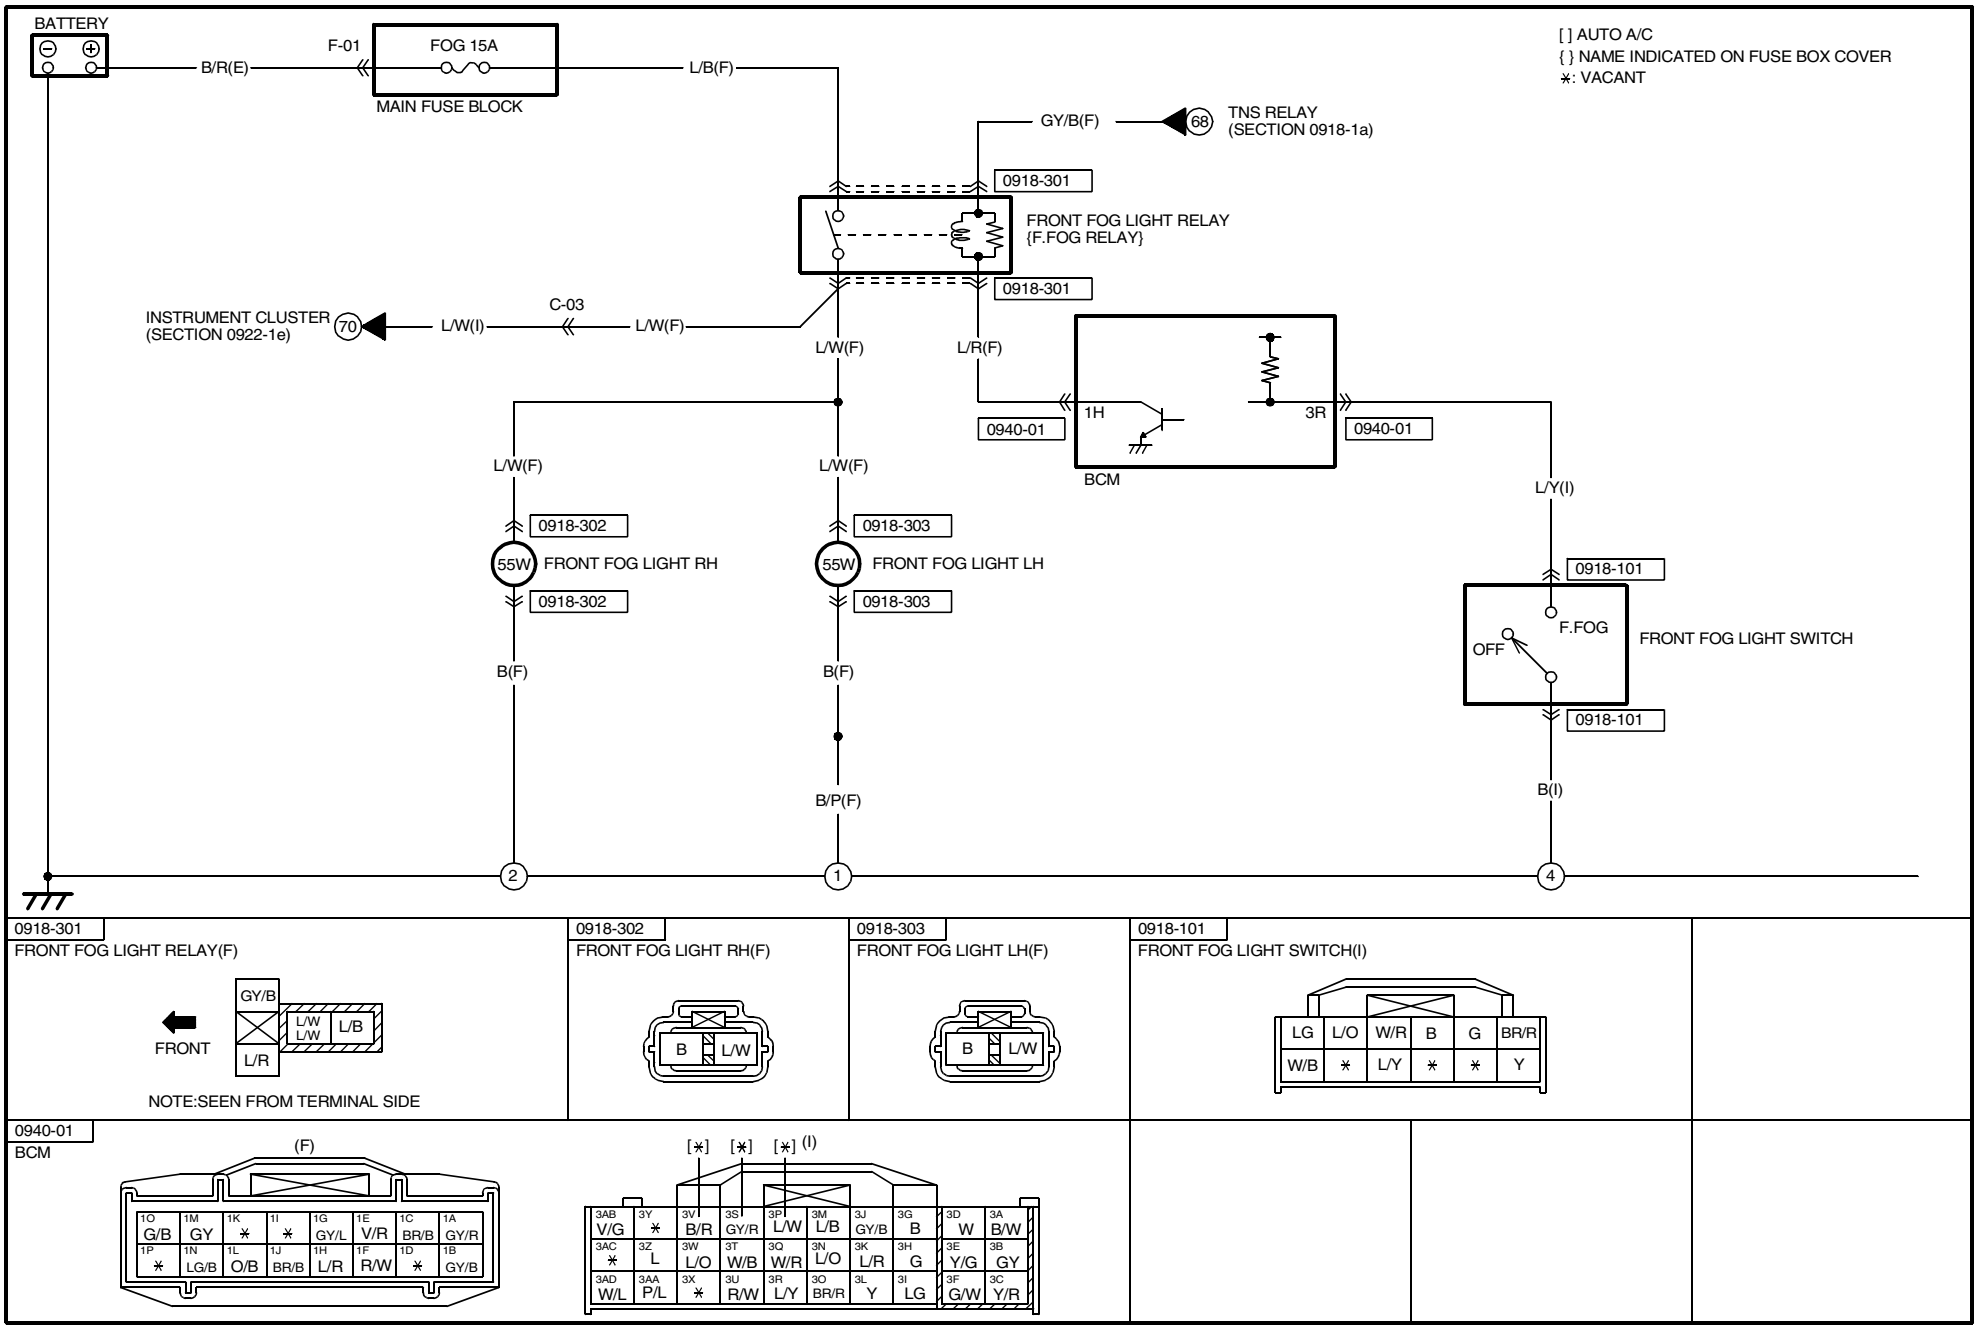

0918-301 FRONT FOG LIGHT RELAY(F)


NOTE:SEEN FROM TERMINAL SIDE


0918-302 FRONT FOG LIGHT RH(F)

0918-303 FRONT FOG LIGHT LH(F)

0918-101 FRONT FOG LIGHT SWITCH(I)

0940-01 BCM

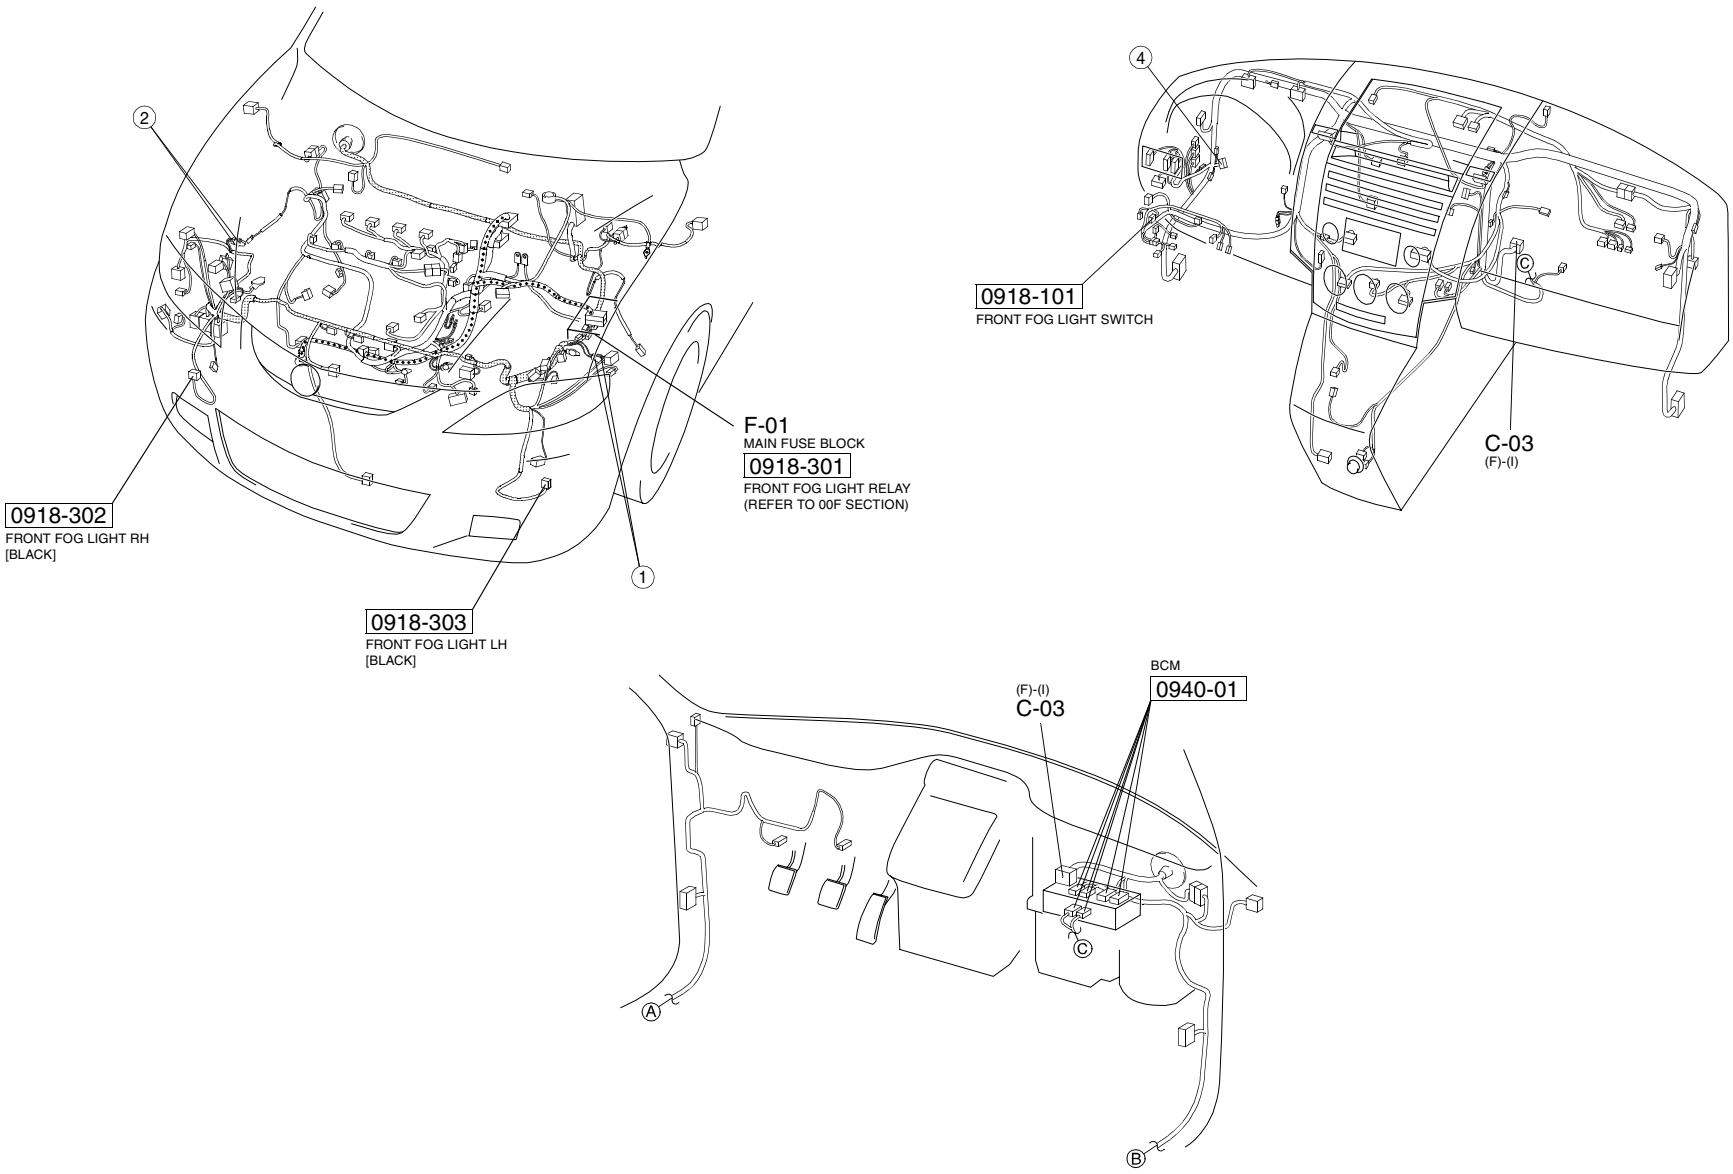
2
0918-302
FRONT FOG LIGHT RH
[BLACK]
F-01
MAIN FUSE BLOCK
0918-301
FRONT FOG LIGHT RELAY
(REFER TO 00F SECTION)
1
0918-303
FRONT FOG LIGHT LH
[BLACK]
4
0918-101
FRONT FOG LIGHT SWITCH
C
C-03
(F)-(I)
BCM
0940-01
(F)-(I)
C-03
C
A
B

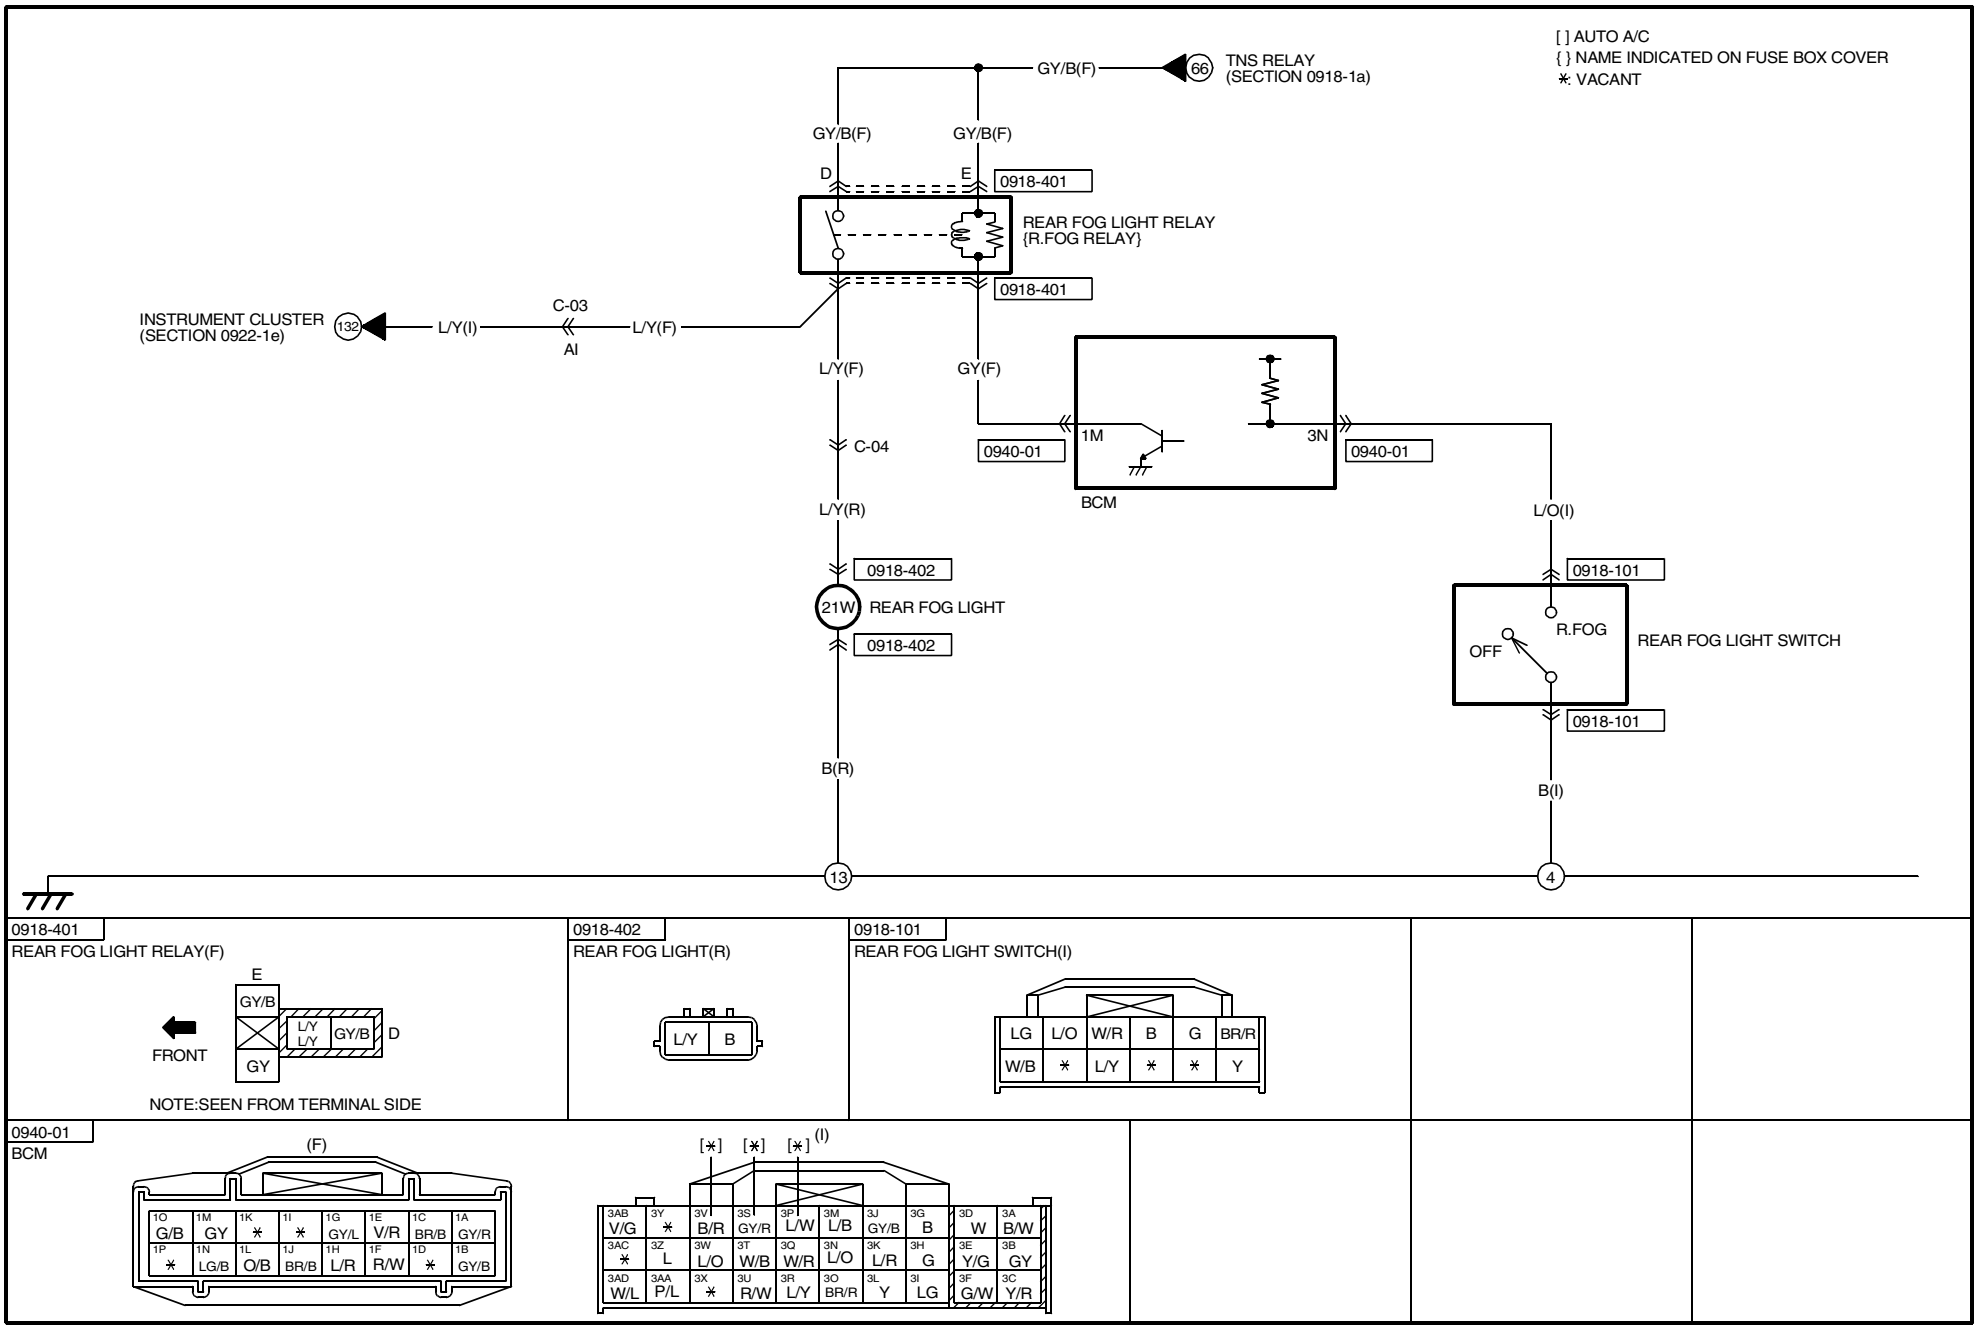


0918-401
REAR FOG LIGHT RELAY(F)


NOTE:SEEN FROM TERMINAL SIDE


0918-402
REAR FOG LIGHT(R)


0918-101
REAR FOG LIGHT SWITCH(I)


0940-01
BCM

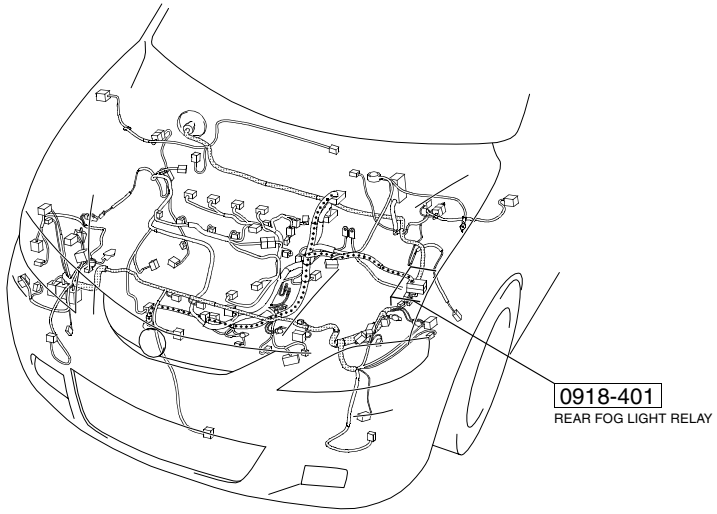
0918-401
REAR FOG LIGHT RELAY

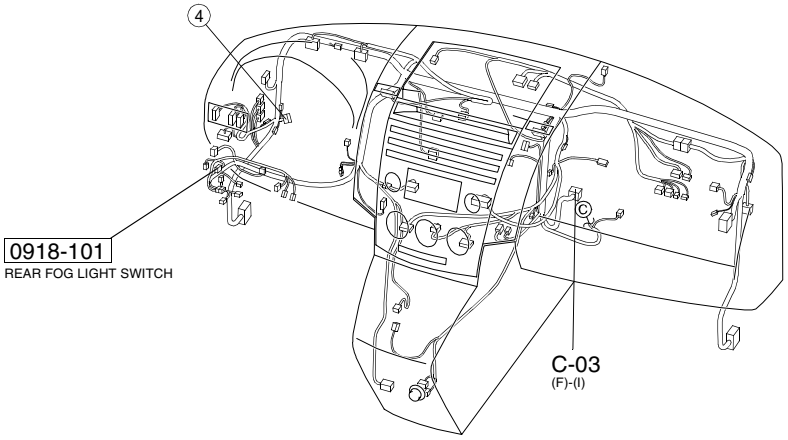

4
0918-101
REAR FOG LIGHT SWITCH
C-03
(F)-(I)

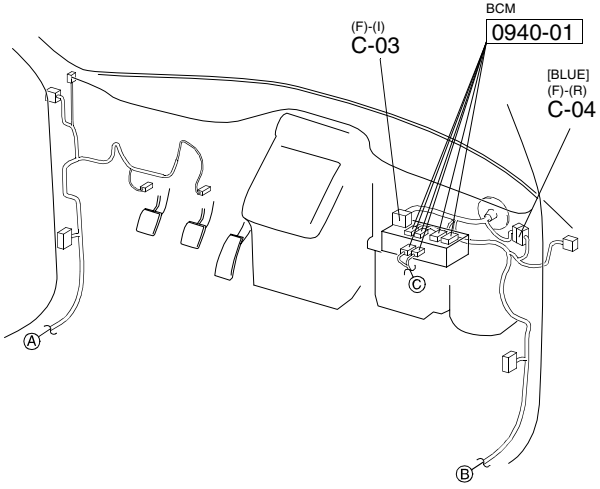

BCM
0940-01
(F)-(I)
C-03
[BLUE]
(F)-(R)
C-04

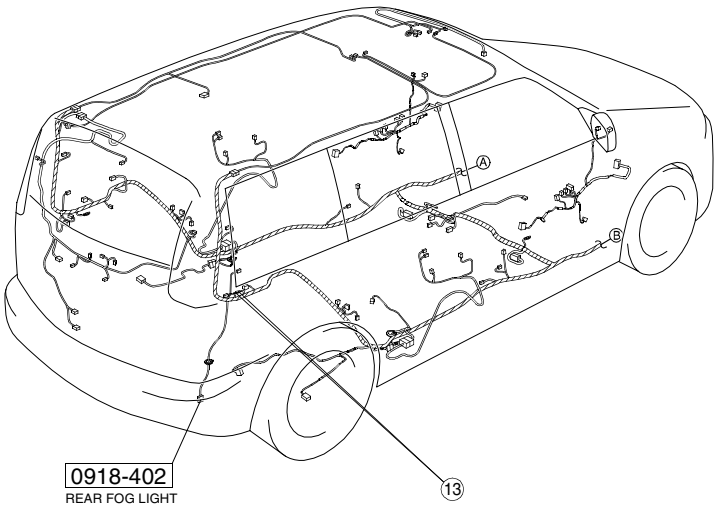

0918-402
REAR FOG LIGHT
13

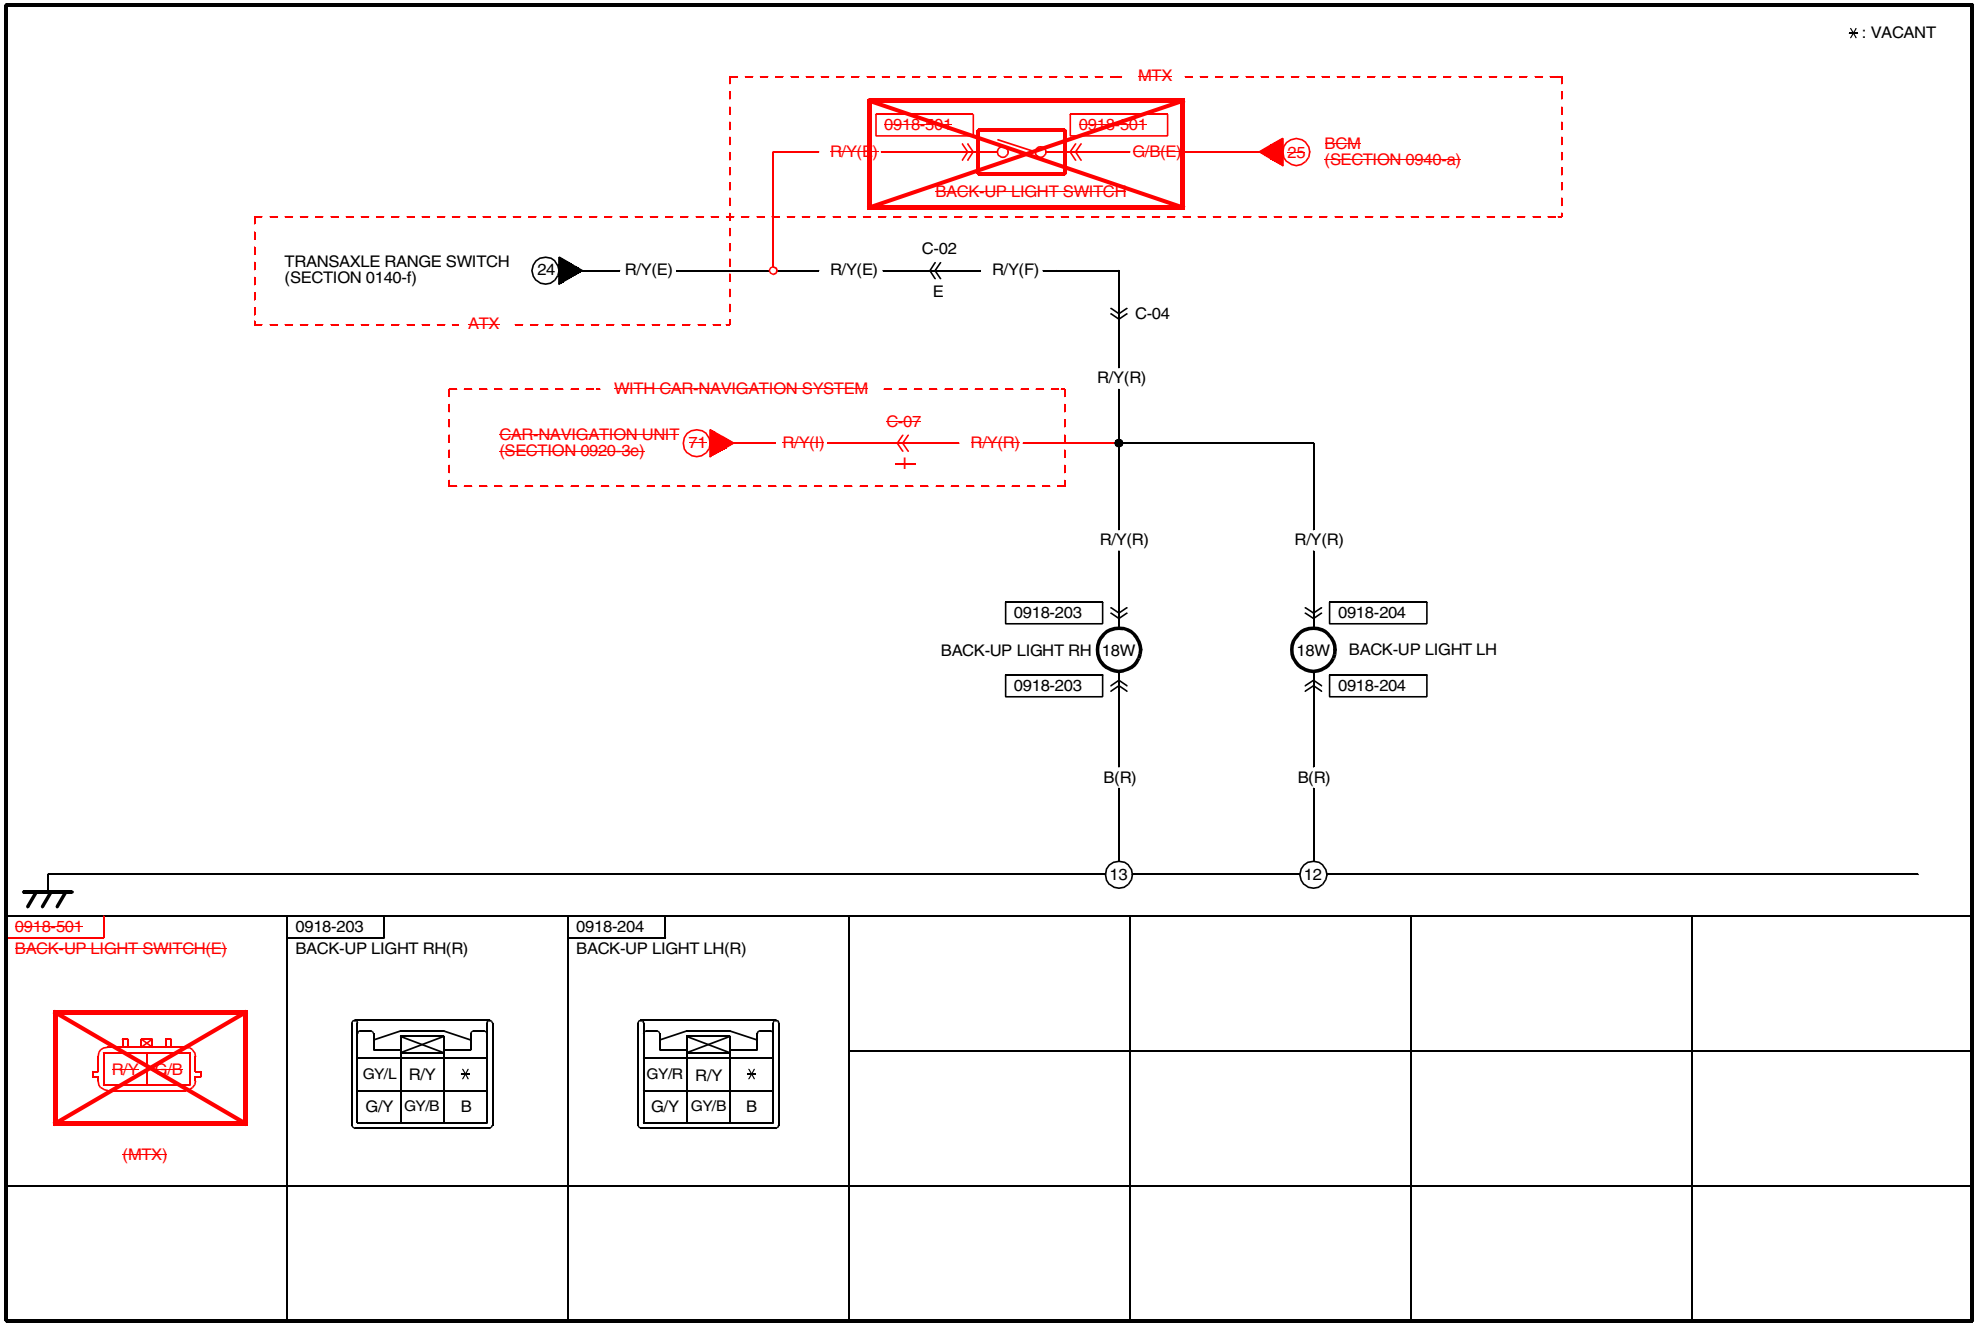


0918-501 BACK-UP LIGHT SWITCH(E)	0918-203 BACK-UP LIGHT RH(R)	0918-204 BACK-UP LIGHT LH(R)				
(MTX)						

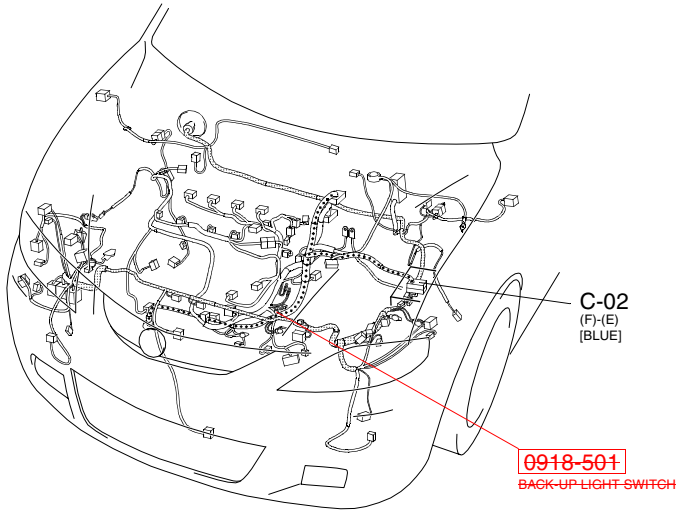

C-02
(F)-(E)
[BLUE]
~~0918-501~~
~~BACK-UP LIGHT SWITCH~~

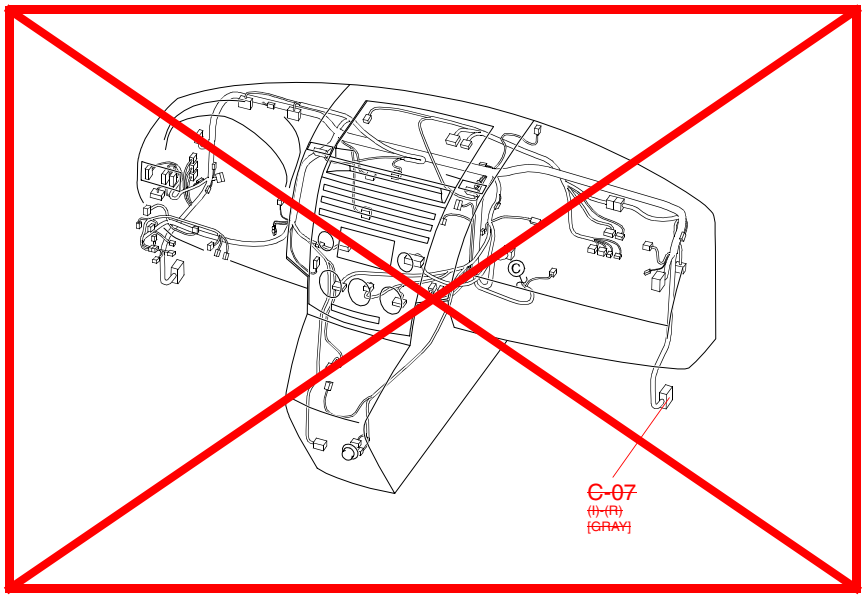
~~C-07~~
~~(I)-(R)~~
~~[GRAY]~~

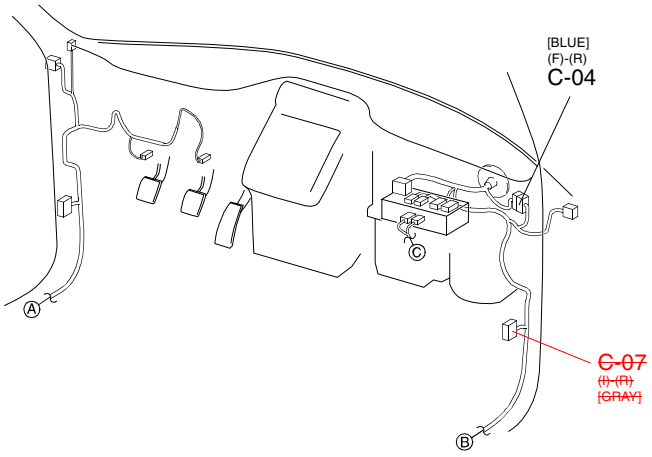

[BLUE]
(F)-(R)
C-04
~~C-07~~
~~(I)-(R)~~
~~[GRAY]~~

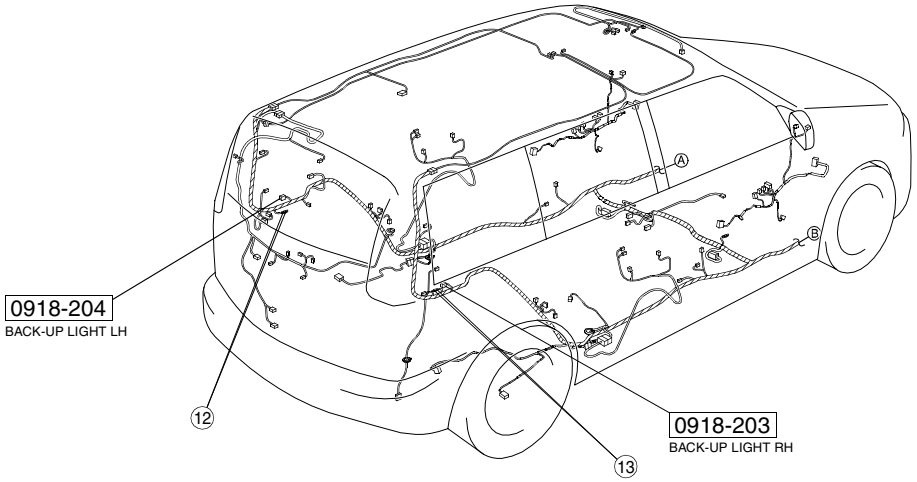

0918-204
BACK-UP LIGHT LH
0918-203
BACK-UP LIGHT RH


BRAKE LIGHT/HIGH-MOUNT BRAKE LIGHT

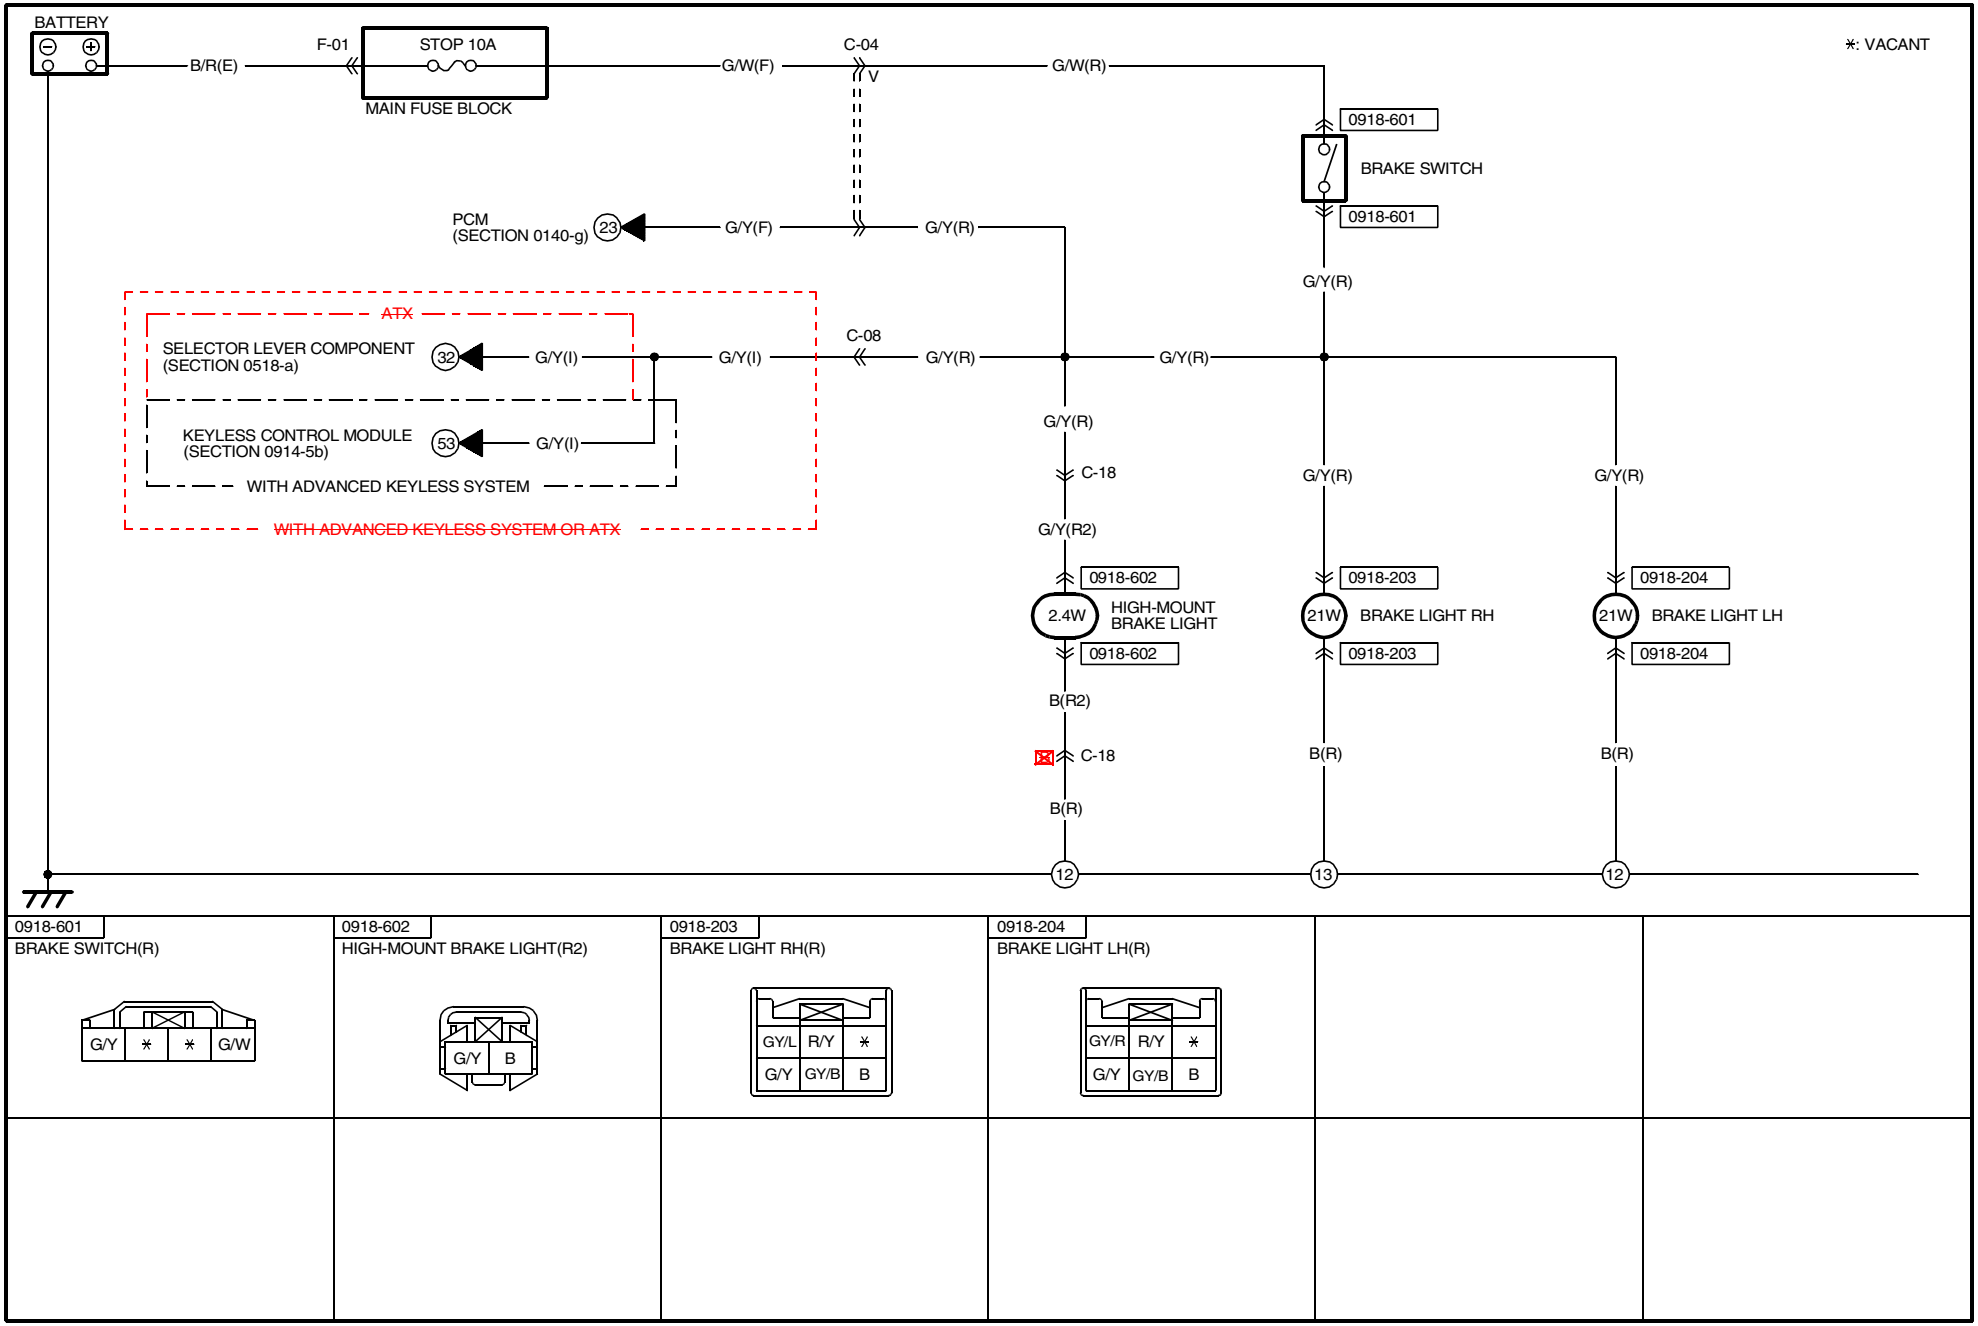


0918-601 BRAKE SWITCH(R)	0918-602 HIGH-MOUNT BRAKE LIGHT(R2)	0918-203 BRAKE LIGHT RH(R)	0918-204 BRAKE LIGHT LH(R)		
G/Y * * G/W	G/Y B	GY/L R/Y * G/Y GY/B B	GY/R R/Y * G/Y GY/B B		

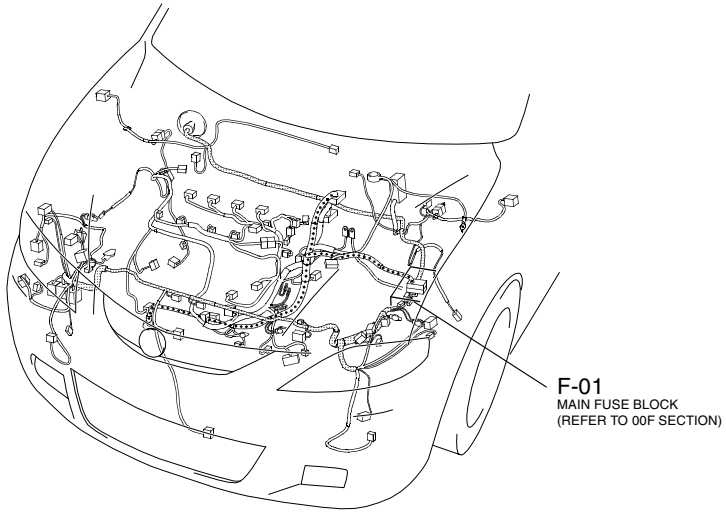

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

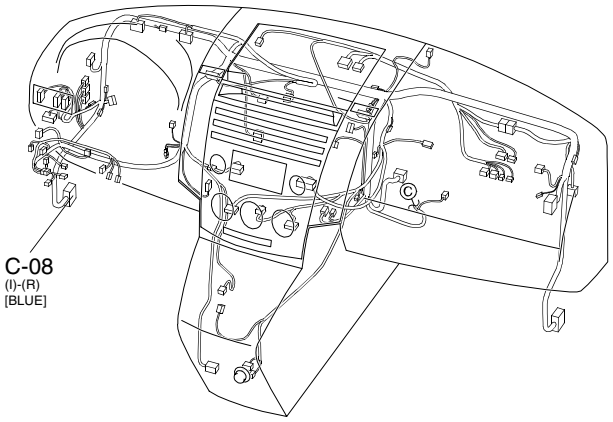

C-08
(I)-(R)
[BLUE]

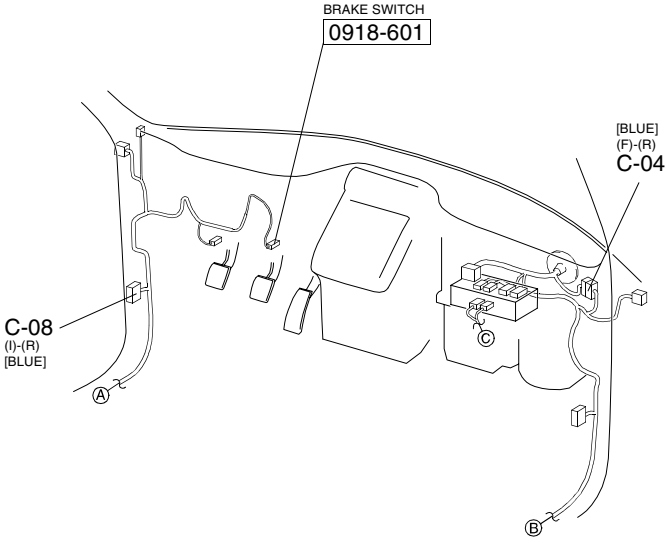

BRAKE SWITCH
0918-601
[BLUE]
(F)-(R)
C-04
C-08
(I)-(R)
[BLUE]

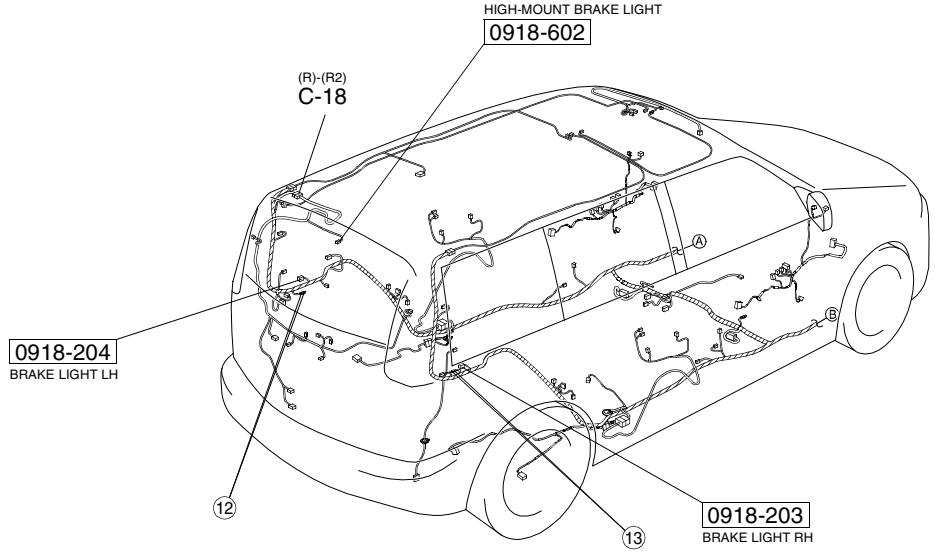

HIGH-MOUNT BRAKE LIGHT
0918-602
(R)-(R2)
C-18
0918-204
BRAKE LIGHT LH
0918-203
BRAKE LIGHT RH


TURN AND HAZARD WARNING LIGHT

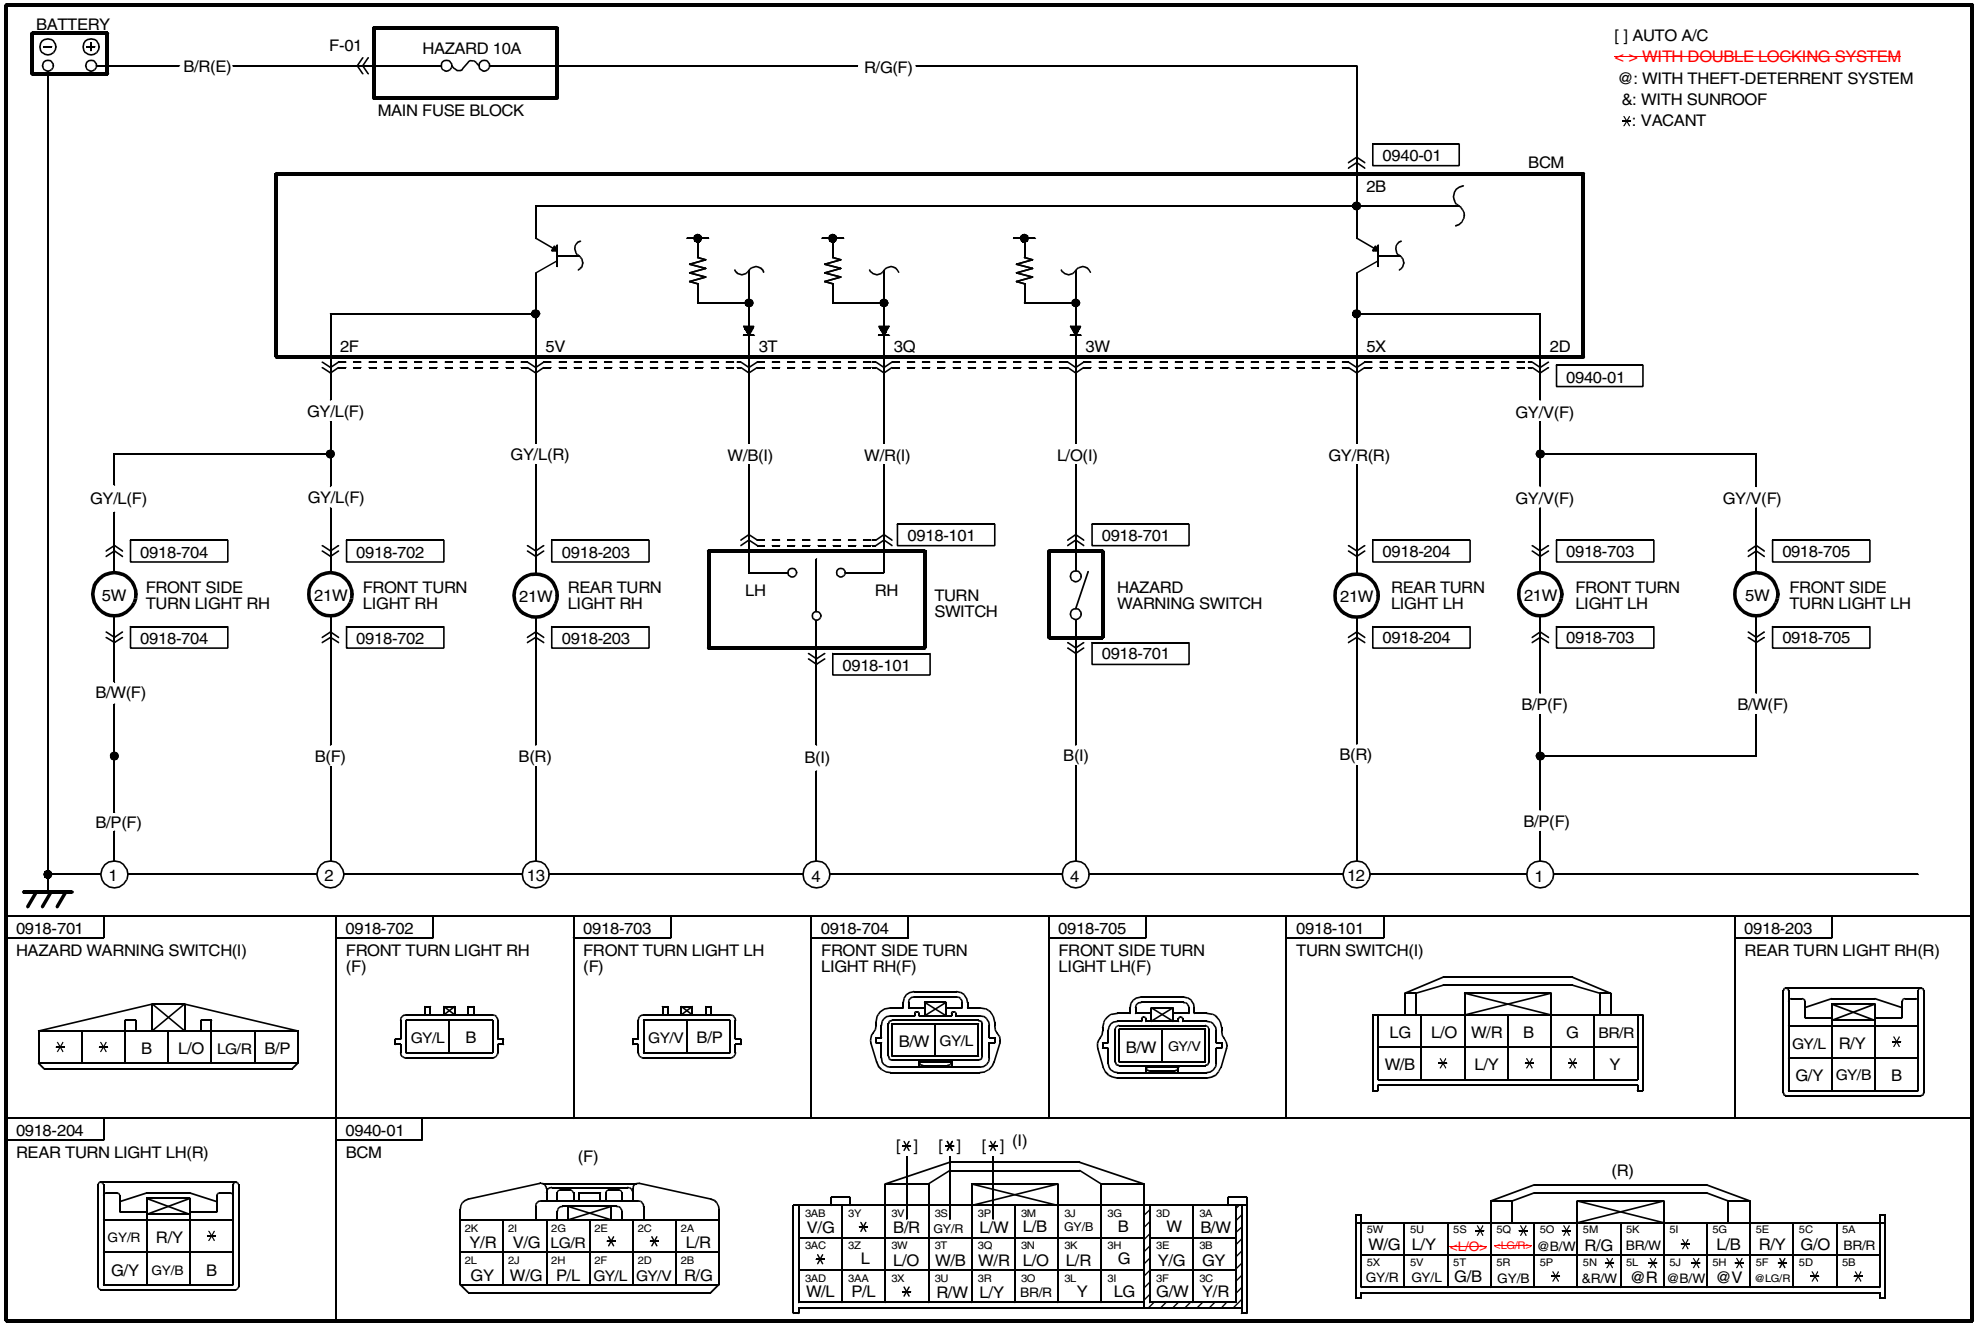

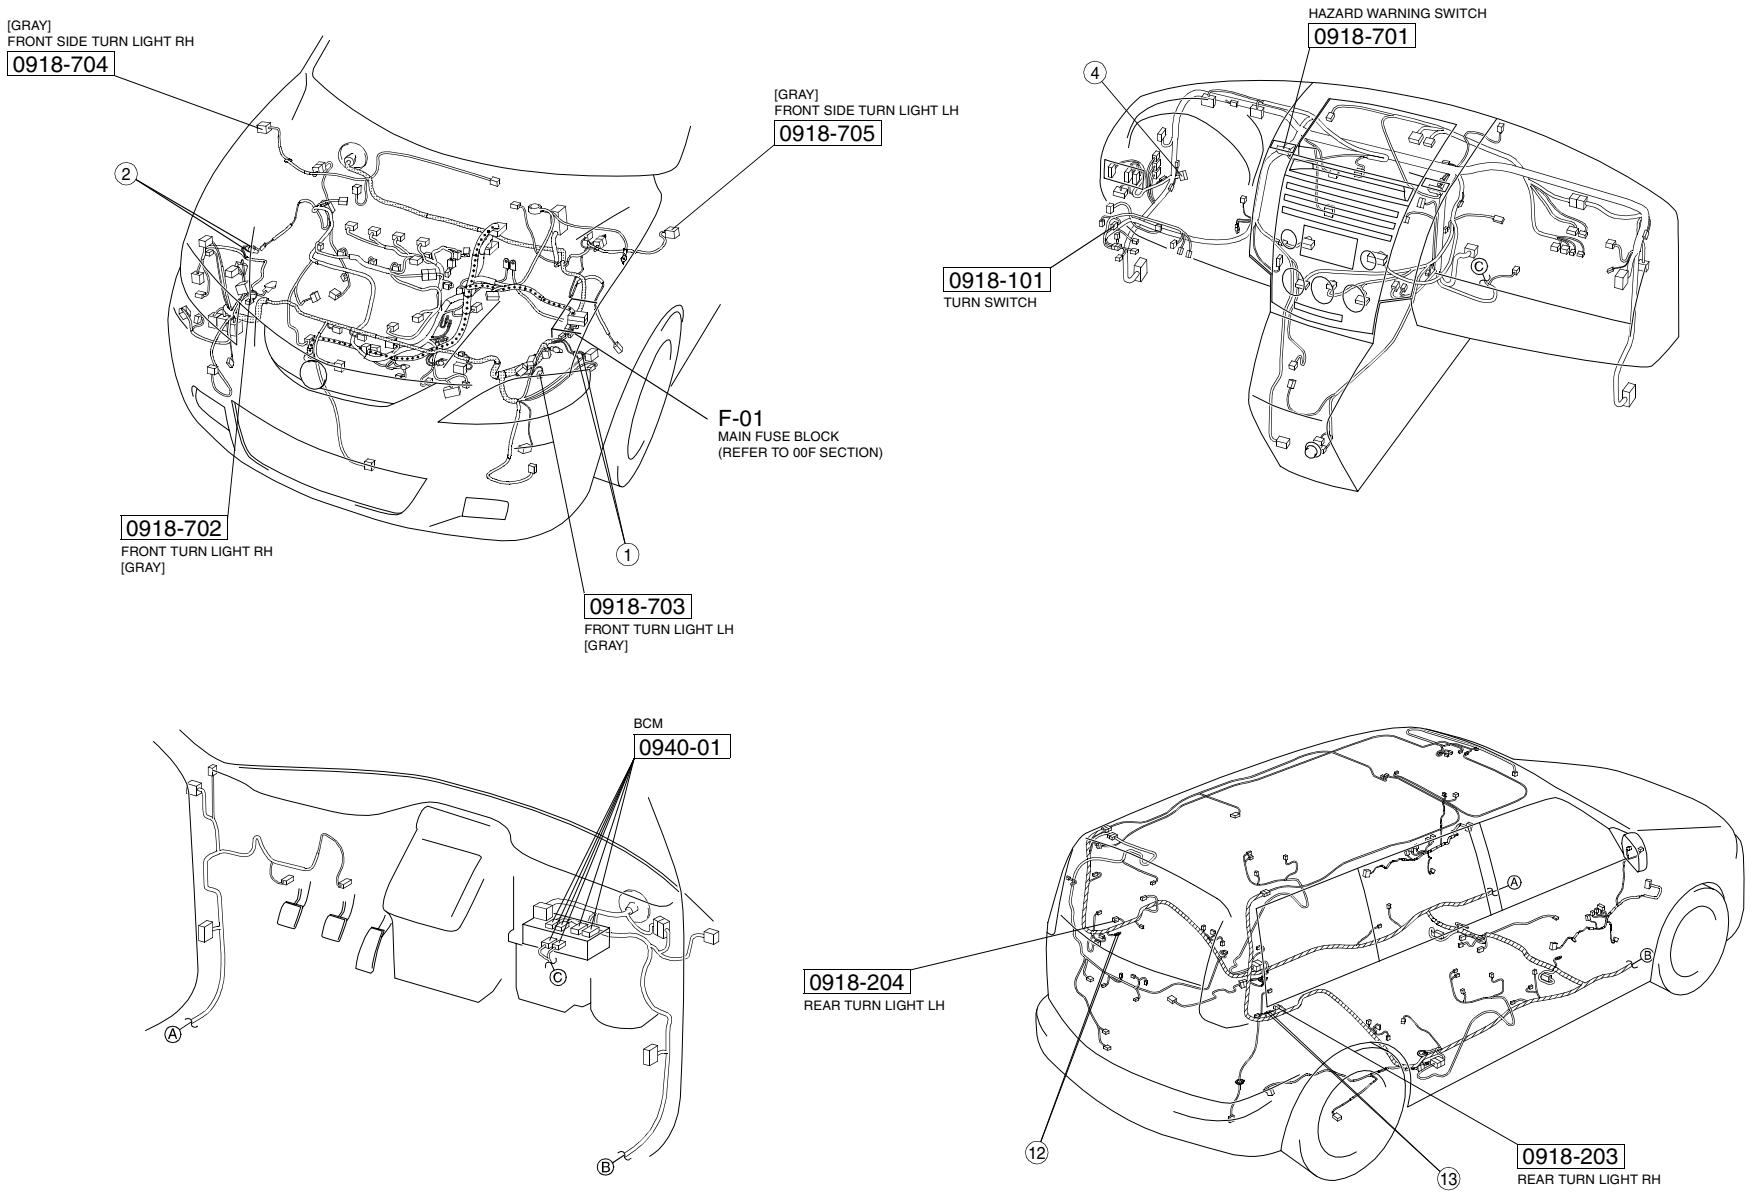

[GRAY]
FRONT SIDE TURN LIGHT RH
0918-704
[GRAY]
FRONT SIDE TURN LIGHT LH
0918-705
2
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0918-702
FRONT TURN LIGHT RH
[GRAY]
1
0918-703
FRONT TURN LIGHT LH
[GRAY]
HAZARD WARNING SWITCH
0918-701
4
0918-101
TURN SWITCH
BCM
0940-01
A
C
B
0918-204
REAR TURN LIGHT LH
12
13
0918-203
REAR TURN LIGHT RH

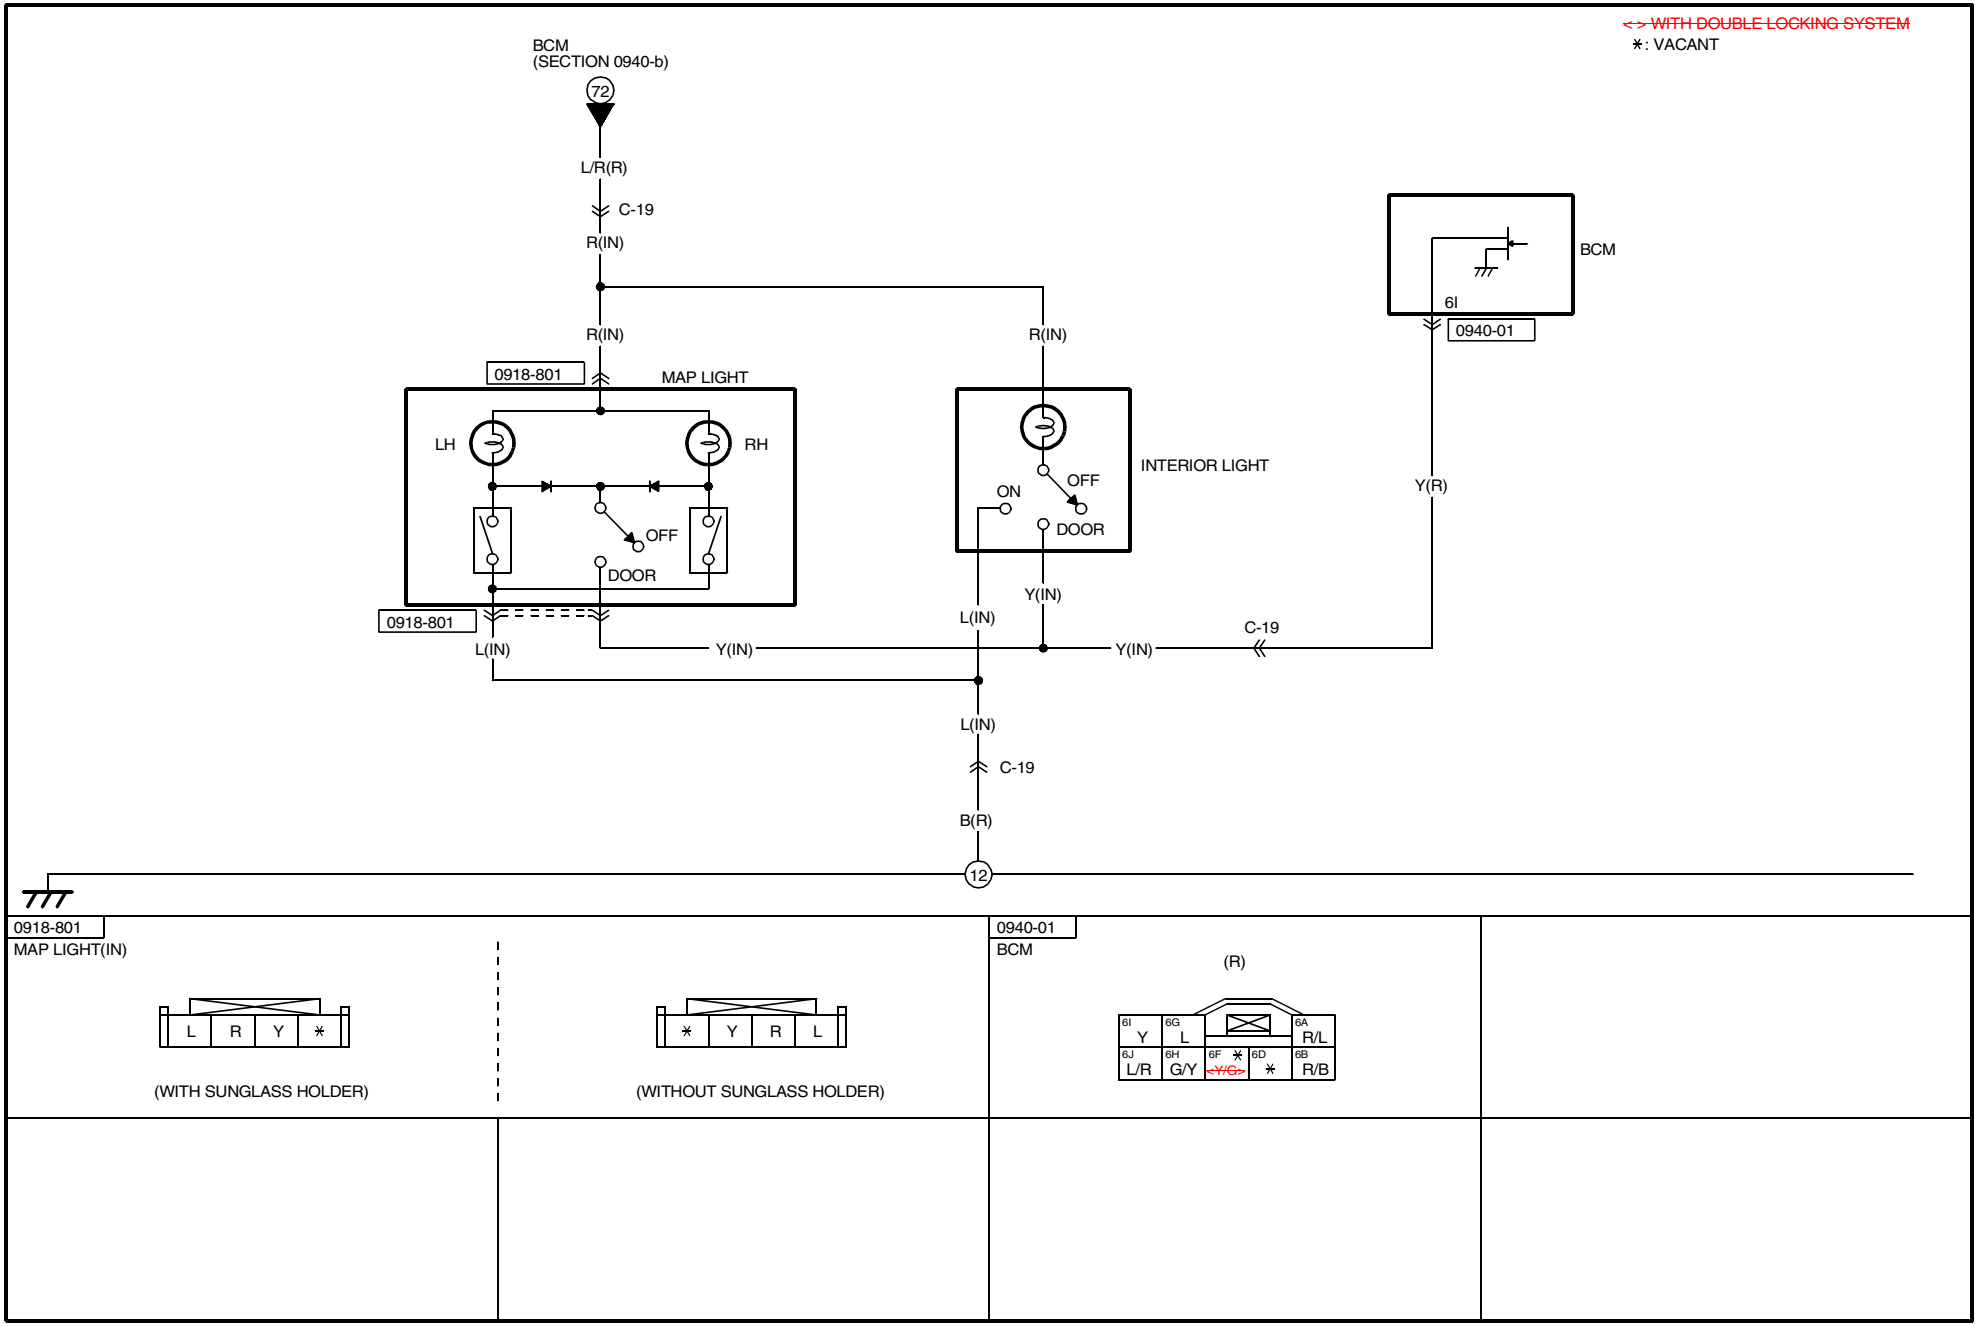
<> WITH DOUBLE LOCKING SYSTEM
*: VACANT
BCM
(SECTION 0940-b)
72
L/R(R)
C-19
R(IN)
R(IN)
R(IN)
0918-801
MAP LIGHT
LH
RH
OFF
DOOR
0918-801
L(IN)
Y(IN)
INTERIOR LIGHT
ON
OFF
DOOR
Y(IN)
L(IN)
Y(IN)
C-19
BCM
6I
0940-01
Y(R)
L(IN)
C-19
B(R)
12
0918-801
MAP LIGHT(IN)
L R Y *
(WITH SUNGLASS HOLDER)
* Y R L
(WITHOUT SUNGLASS HOLDER)
0940-01
BCM
(R)
6I Y
6G L
6A R/L
6J L/R
6H G/Y
6F * <Y/G>
6D *
6B R/B

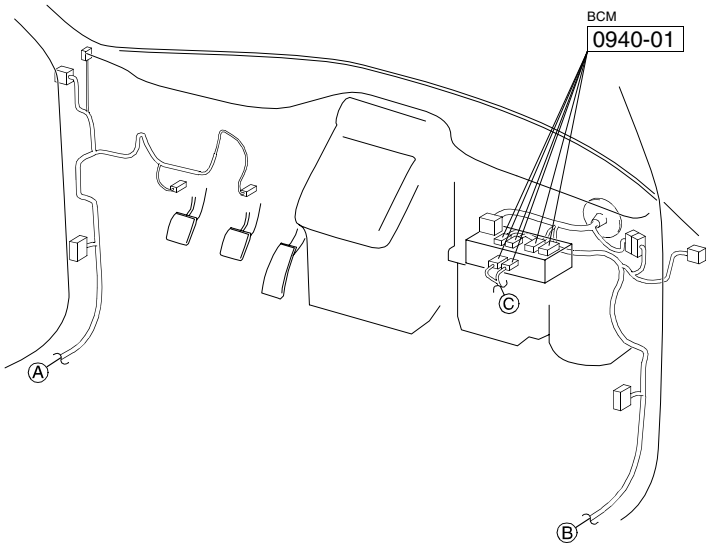
BCM
0940-01
A
B
C

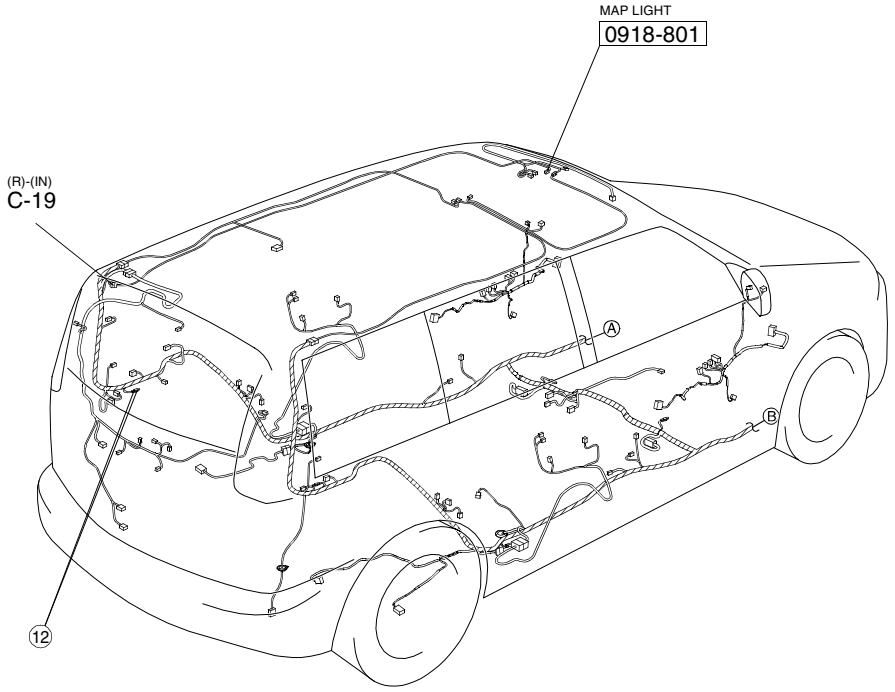
MAP LIGHT
0918-801
(R)-(IN)
C-19
A
B
12

CARGO COMPARTMENT LIGHT

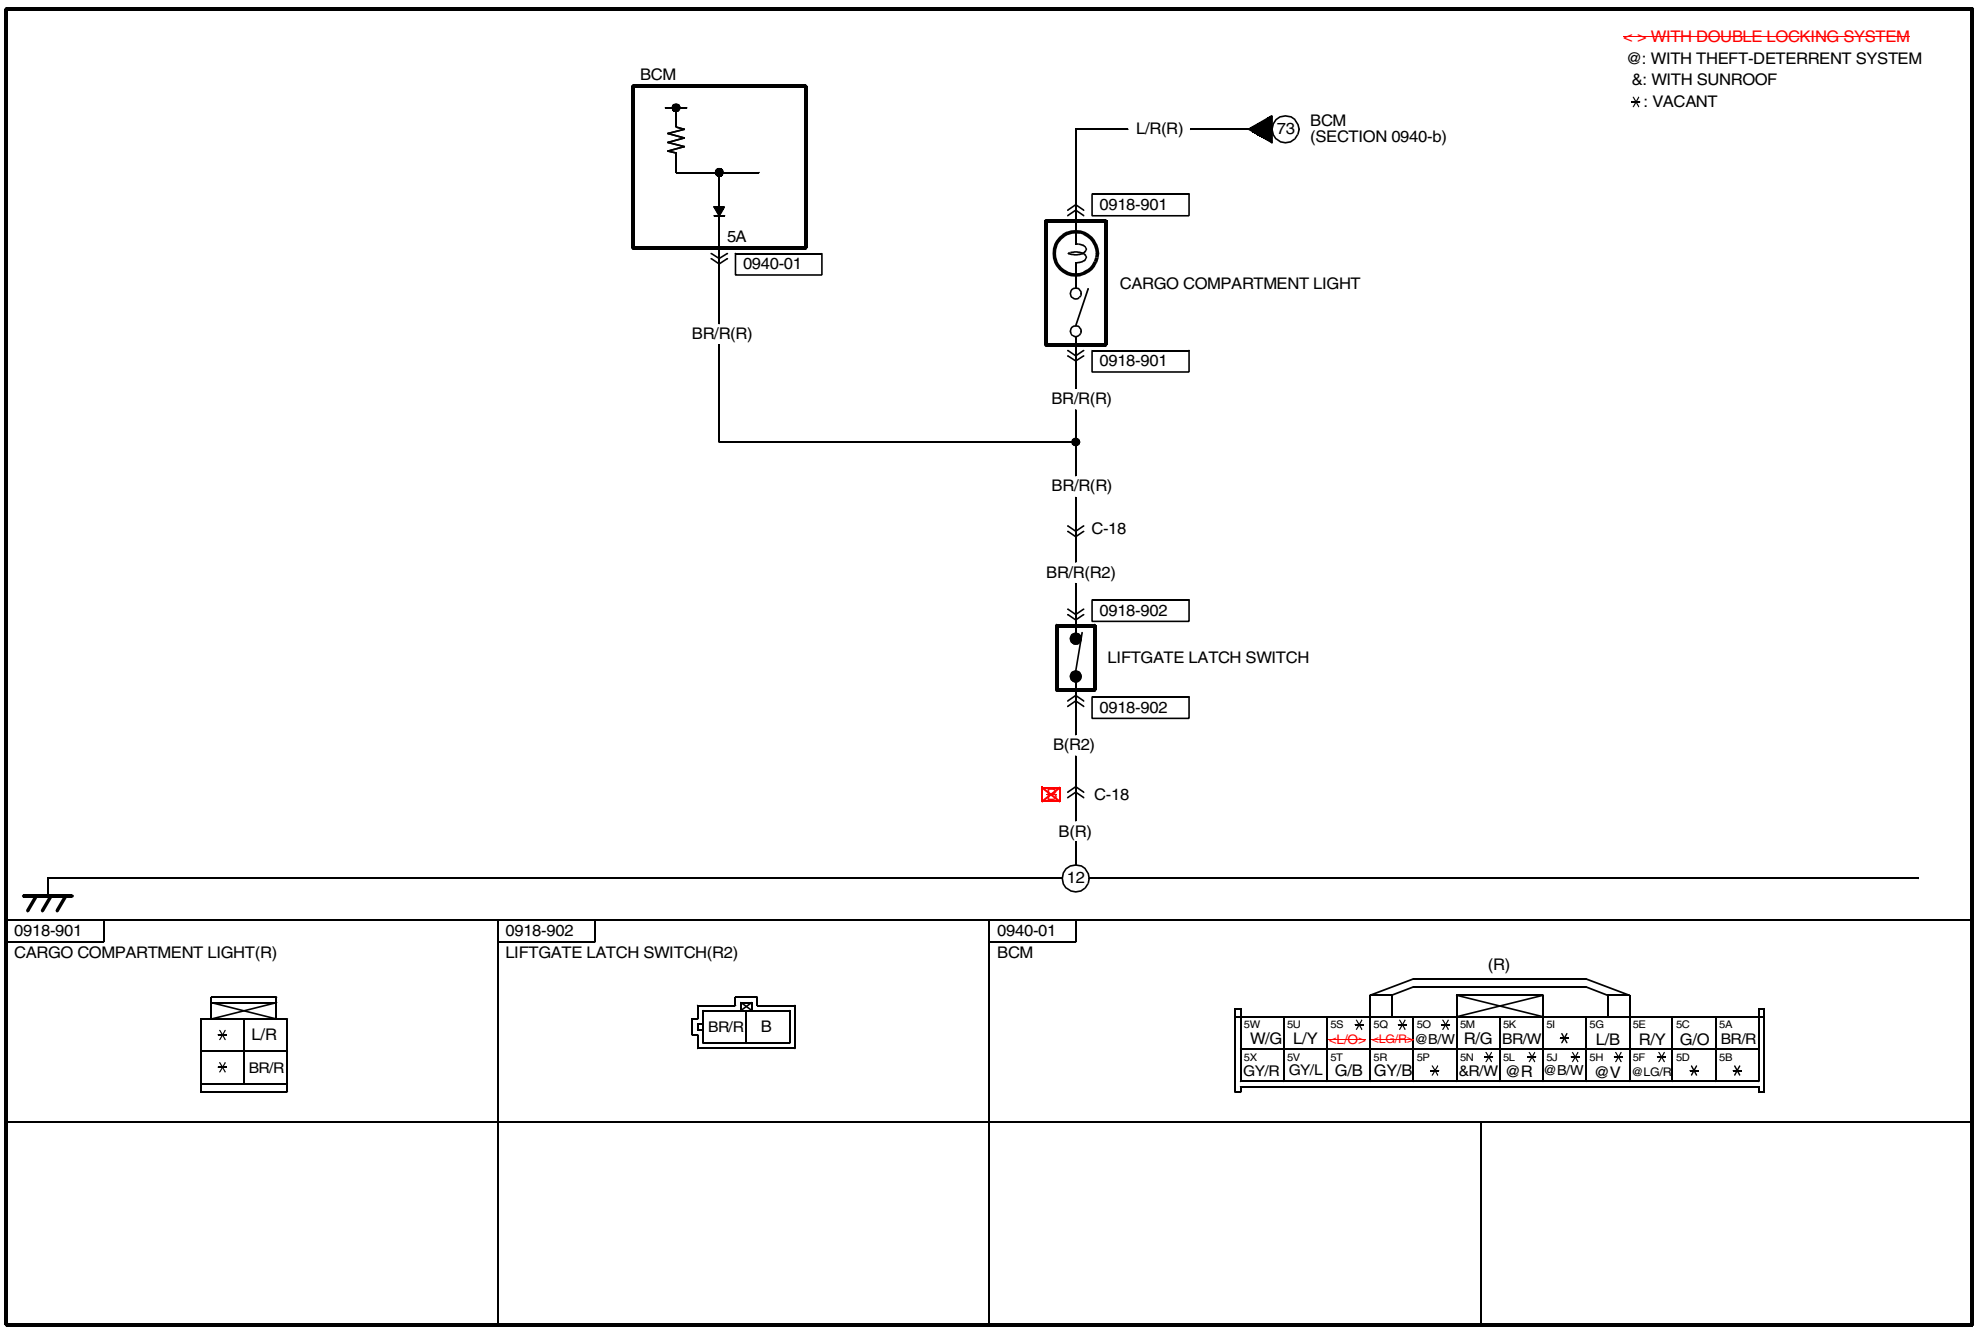



0918-901
CARGO COMPARTMENT LIGHT(R)


0918-902
LIFTGATE LATCH SWITCH(R2)

0940-01
BCM

(R)

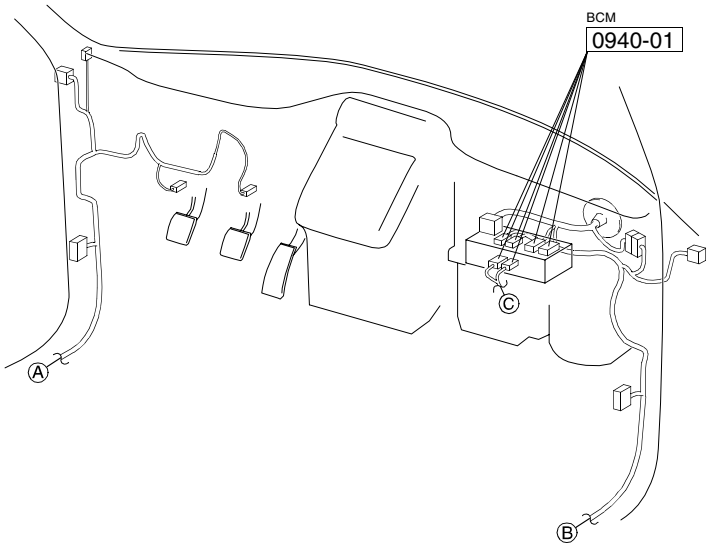
BCM
0940-01
A
B
C

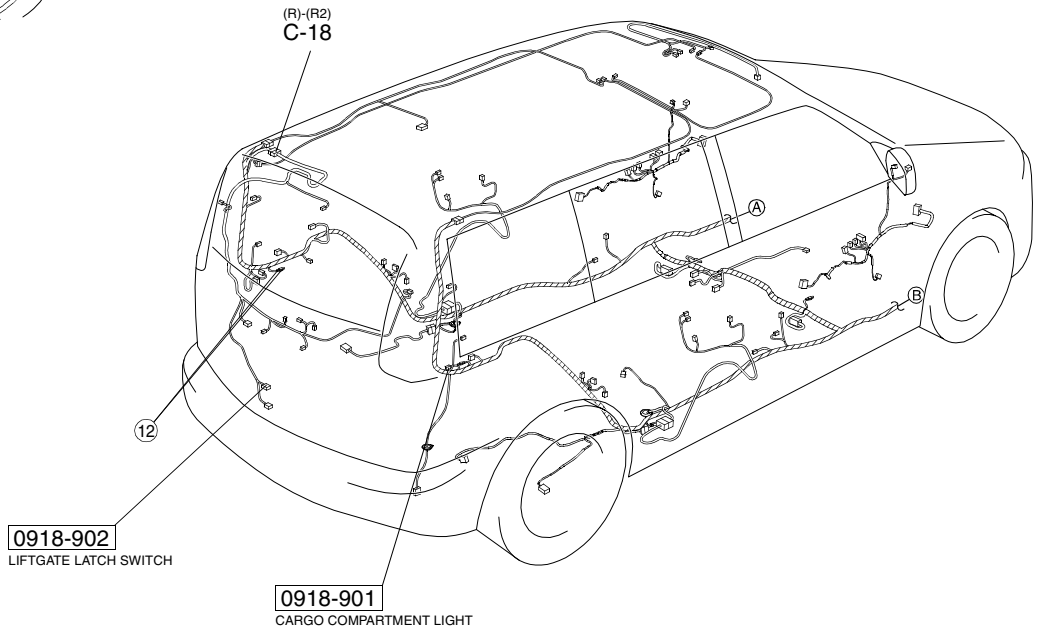
(R)-(R2)
C-18
A
B
12
0918-902
LIFTGATE LATCH SWITCH
0918-901
CARGO COMPARTMENT LIGHT

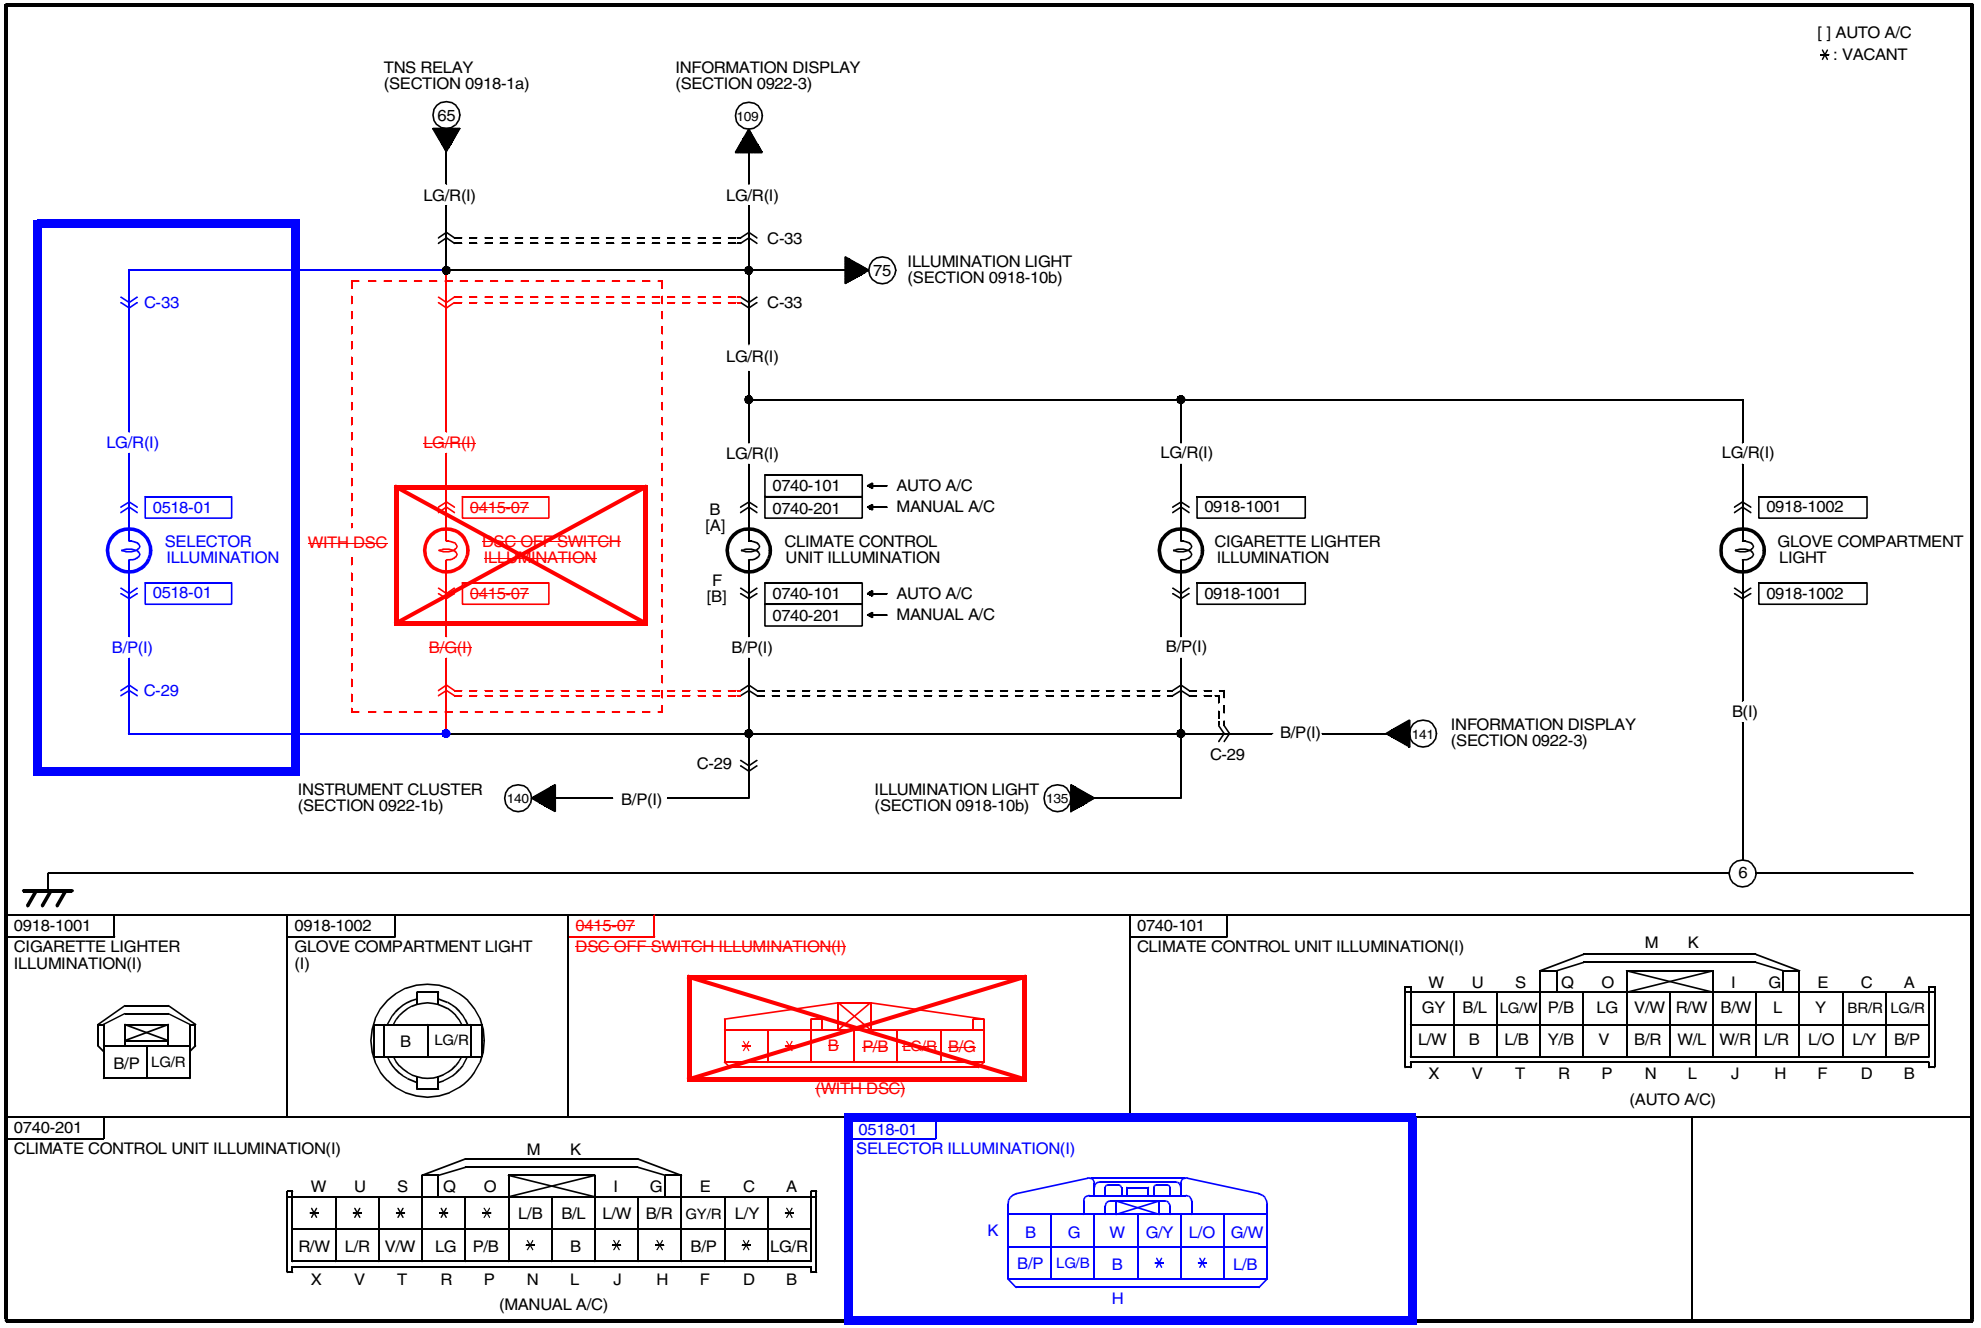

0918-1001
CIGARETTE LIGHTER ILLUMINATION(I)

0918-1002
GLOVE COMPARTMENT LIGHT (I)

0415-07
DSC OFF SWITCH ILLUMINATION(I)

(WITH DSC)

0740-101
CLIMATE CONTROL UNIT ILLUMINATION(I)

M	K											
W	U	S	Q	O		I	G	E	C	A		
GY	B/L	LG/W	P/B	LG	V/W	R/W	B/W	L	Y	BR/R	LG/R	
L/W	B	L/B	Y/B	V	B/R	W/L	W/R	L/R	L/O	L/Y	B/P	
X	V	T	R	P	N	L	J	H	F	D	B	

(AUTO A/C)


0740-201
CLIMATE CONTROL UNIT ILLUMINATION(I)

M	K											
W	U	S	Q	O		I	G	E	C	A		
∗	∗	∗	∗	∗	L/B	B/L	L/W	B/R	GY/R	L/Y	∗	
R/W	L/R	V/W	LG	P/B	∗	B	∗	∗	B/P	∗	LG/R	
X	V	T	R	P	N	L	J	H	F	D	B	


(MANUAL A/C)

0518-01
SELECTOR ILLUMINATION(I)


K						
	B	G	W	G/Y	L/O	G/W
	B/P	LG/B	B	∗	∗	L/B
			H			

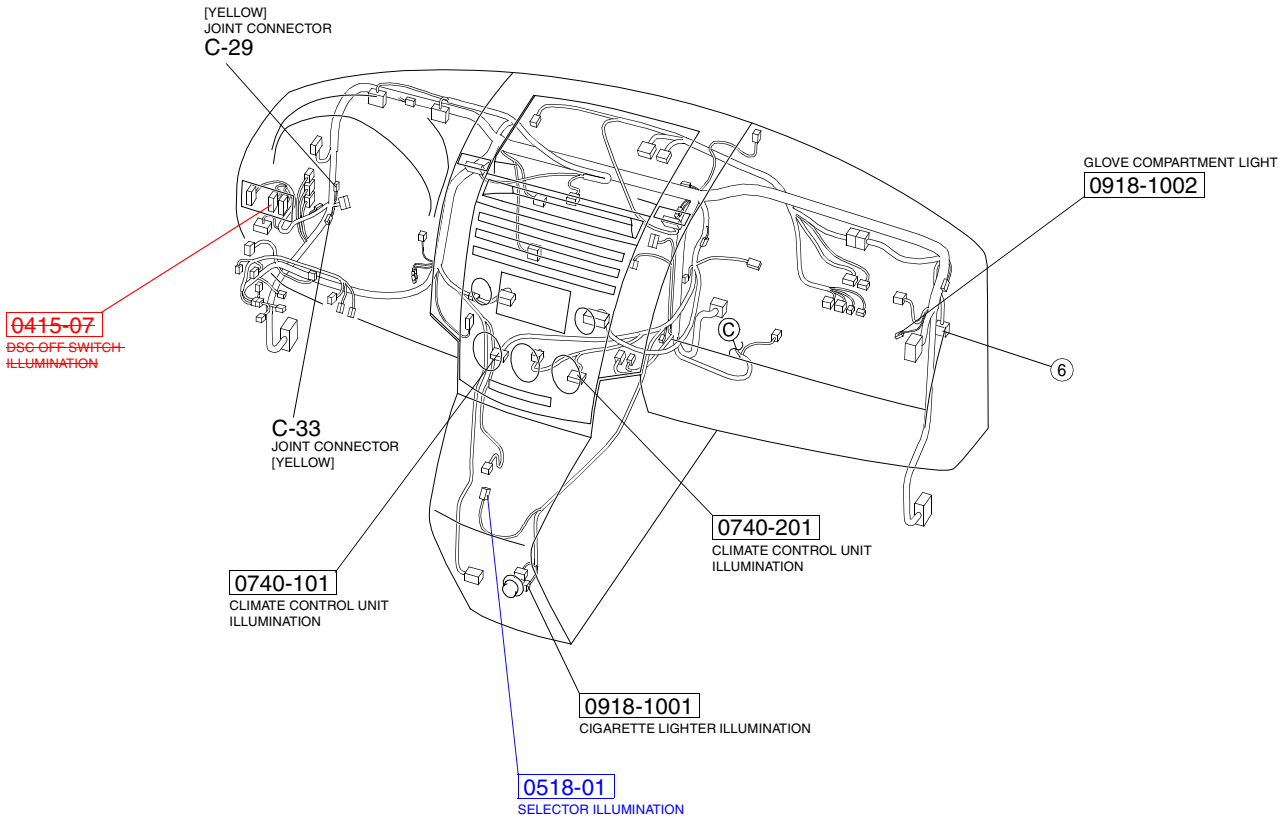
[YELLOW]
JOINT CONNECTOR
C-29
GLOVE COMPARTMENT LIGHT
0918-1002
~~0415-07~~
~~DSC OFF SWITCH ILLUMINATION~~
C
6
C-33
JOINT CONNECTOR
[YELLOW]
0740-201
CLIMATE CONTROL UNIT
ILLUMINATION
0740-101
CLIMATE CONTROL UNIT
ILLUMINATION
0918-1001
CIGARETTE LIGHTER ILLUMINATION
0518-01
SELECTOR ILLUMINATION


[ ] NOT USED
*: VACANT

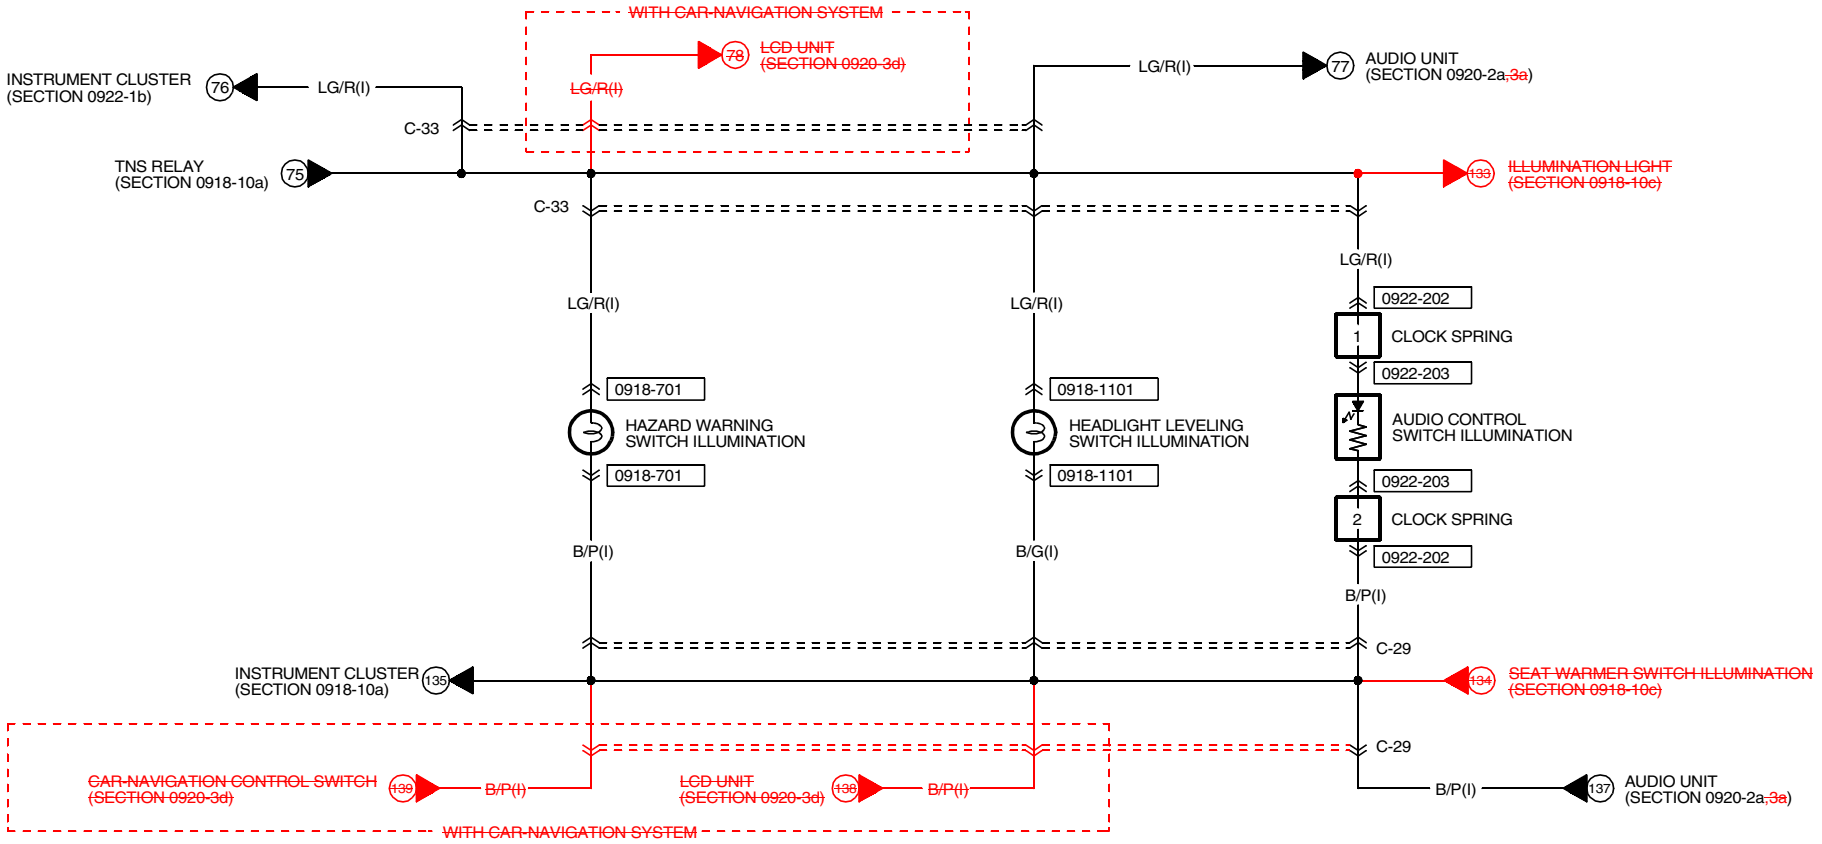

0918-701
HAZARD WARNING SWITCH ILLUMINATION(I)




0918-1101
HEADLIGHT LEVELING SWITCH ILLUMINATION(I)




0922-202
INSTRUMENT PANEL(I)-CLOCK SPRING

(I)

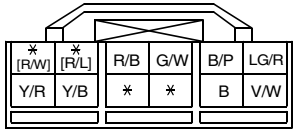


(CLOCK SPRING)




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0922-203
AUDIO CONTROL SWITCH ILLUMINATION (CLOCK SPRING)








TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

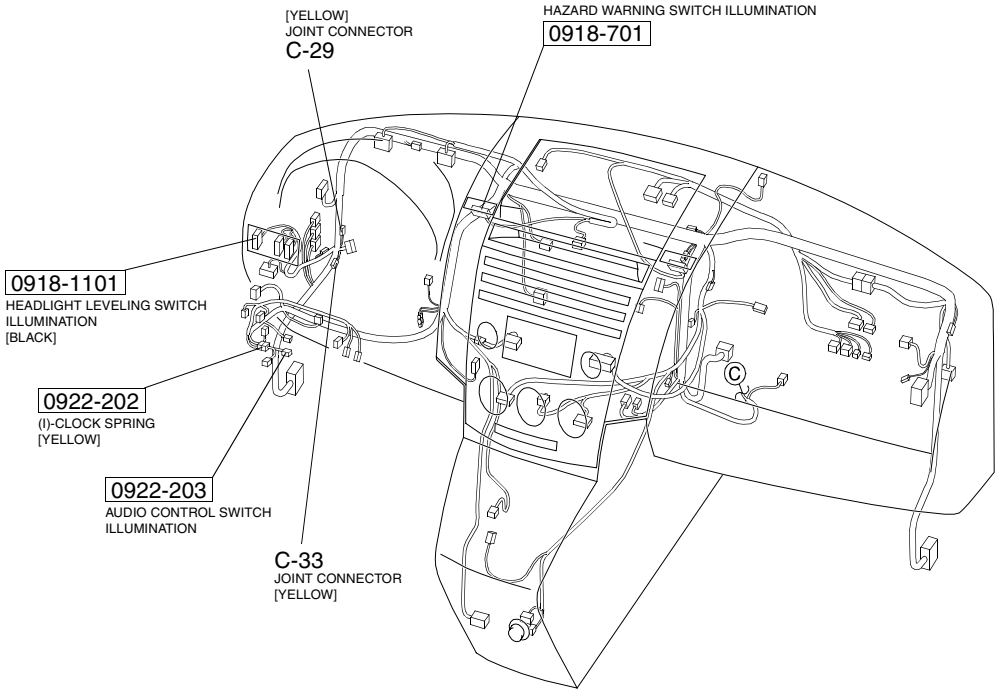

[YELLOW]
JOINT CONNECTOR
C-29
HAZARD WARNING SWITCH ILLUMINATION
0918-701
0918-1101
HEADLIGHT LEVELING SWITCH
ILLUMINATION
[BLACK]
0922-202
(I)-CLOCK SPRING
[YELLOW]
0922-203
AUDIO CONTROL SWITCH
ILLUMINATION
C-33
JOINT CONNECTOR
[YELLOW]
C


[ ] AUTO A/C
∗: VACANT

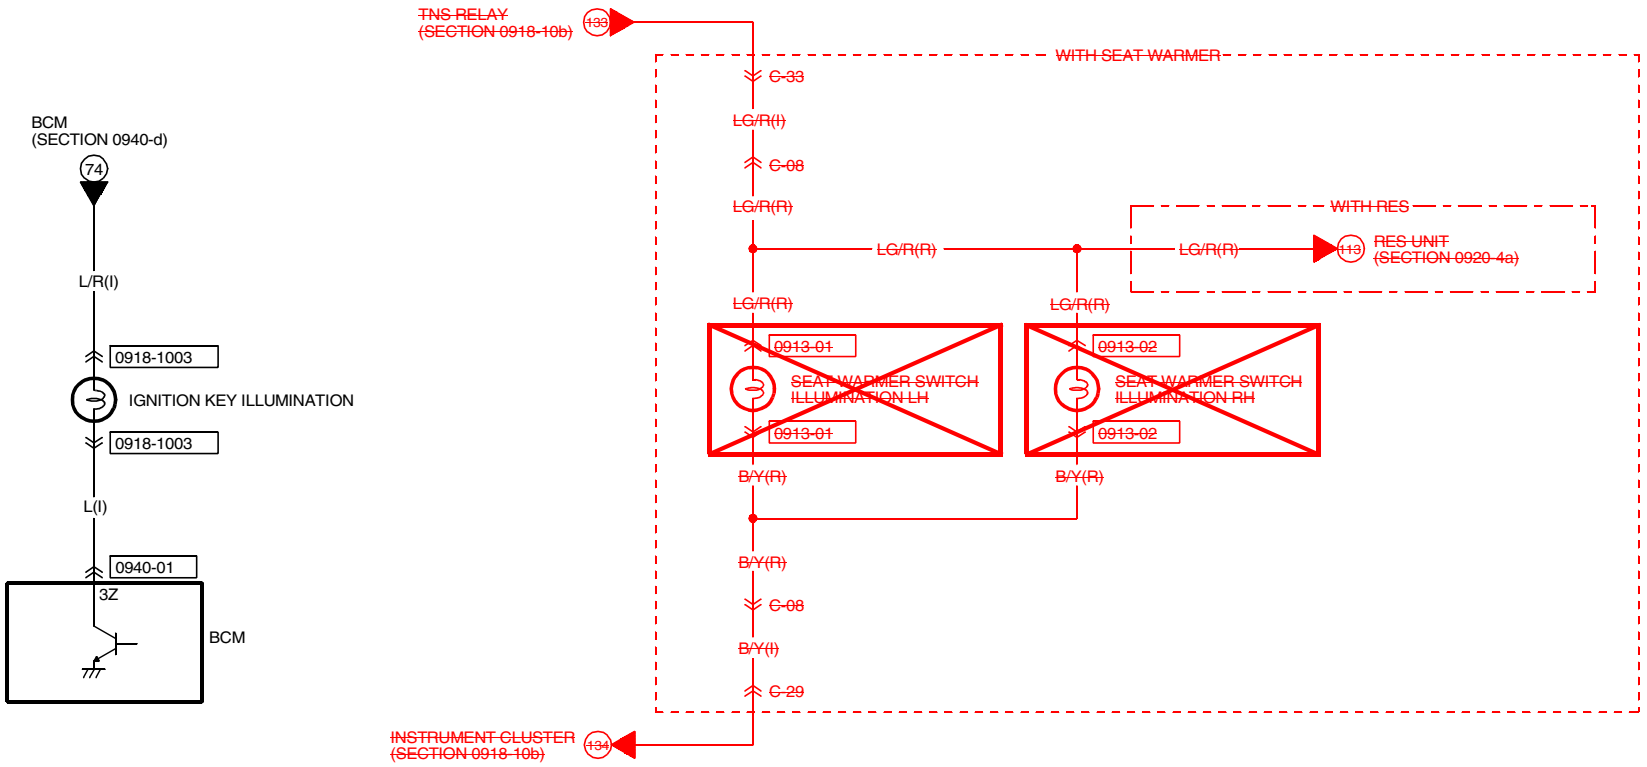


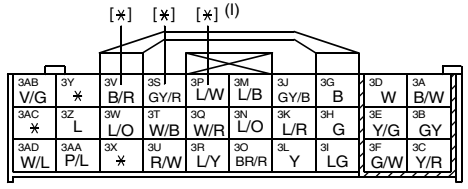
0918-1003	0913-01	0913-02	0940-01		
IGNITION KEY ILLUMINATION(I)	SEAT WARMER SWITCH ILLUMINATION LH(R)	SEAT WARMER SWITCH ILLUMINATION RH(R)	BCM		
					
	(WITH SEAT WARMER)	(WITH SEAT WARMER)			

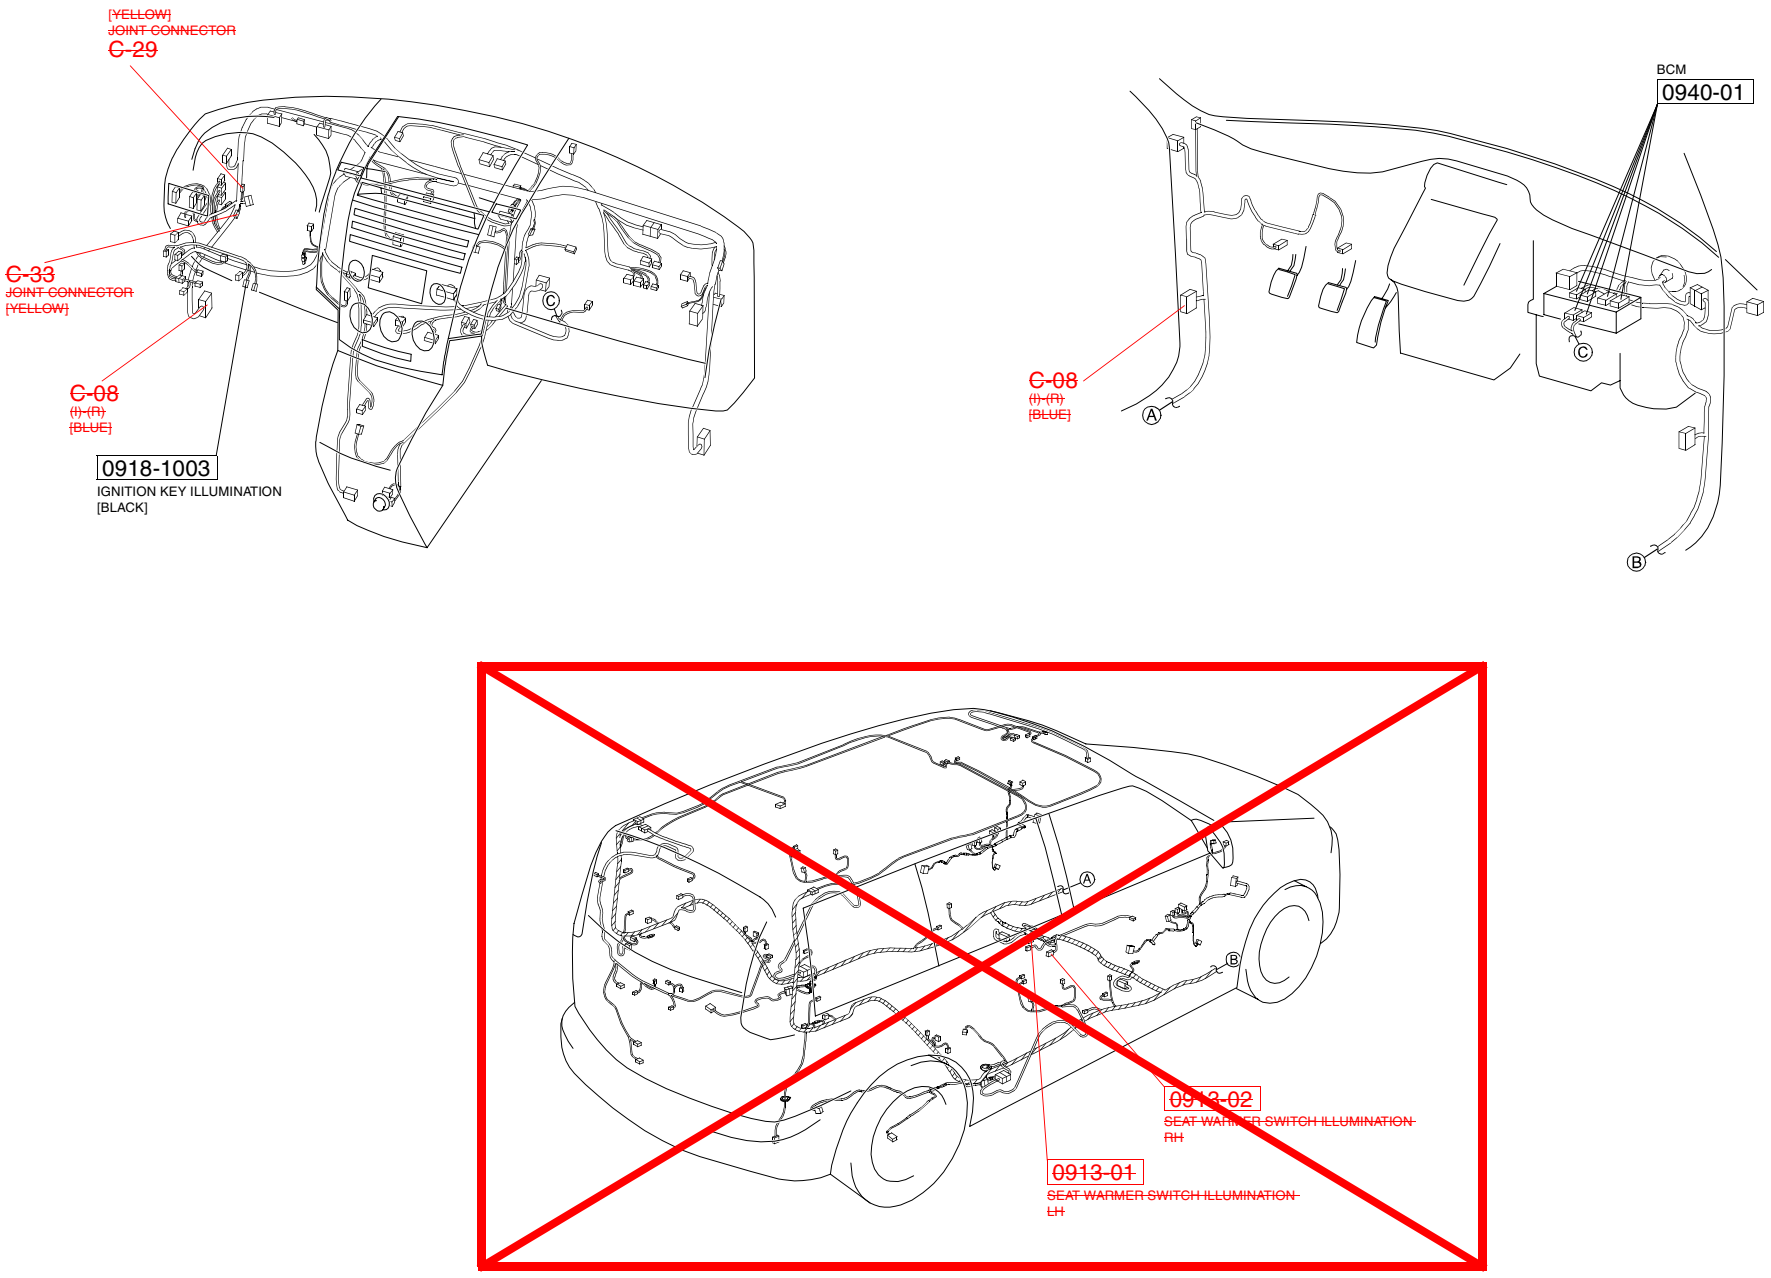
[YELLOW]
JOINT CONNECTOR
C-29
C-33
JOINT CONNECTOR
[YELLOW]
C-08
(I)-(R)
[BLUE]
0918-1003
IGNITION KEY ILLUMINATION
[BLACK]
BCM
0940-01
C-08
(I)-(R)
[BLUE]
A
B
C
0913-02
SEAT WARMER SWITCH ILLUMINATION
RH
0913-01
SEAT WARMER SWITCH ILLUMINATION
LH

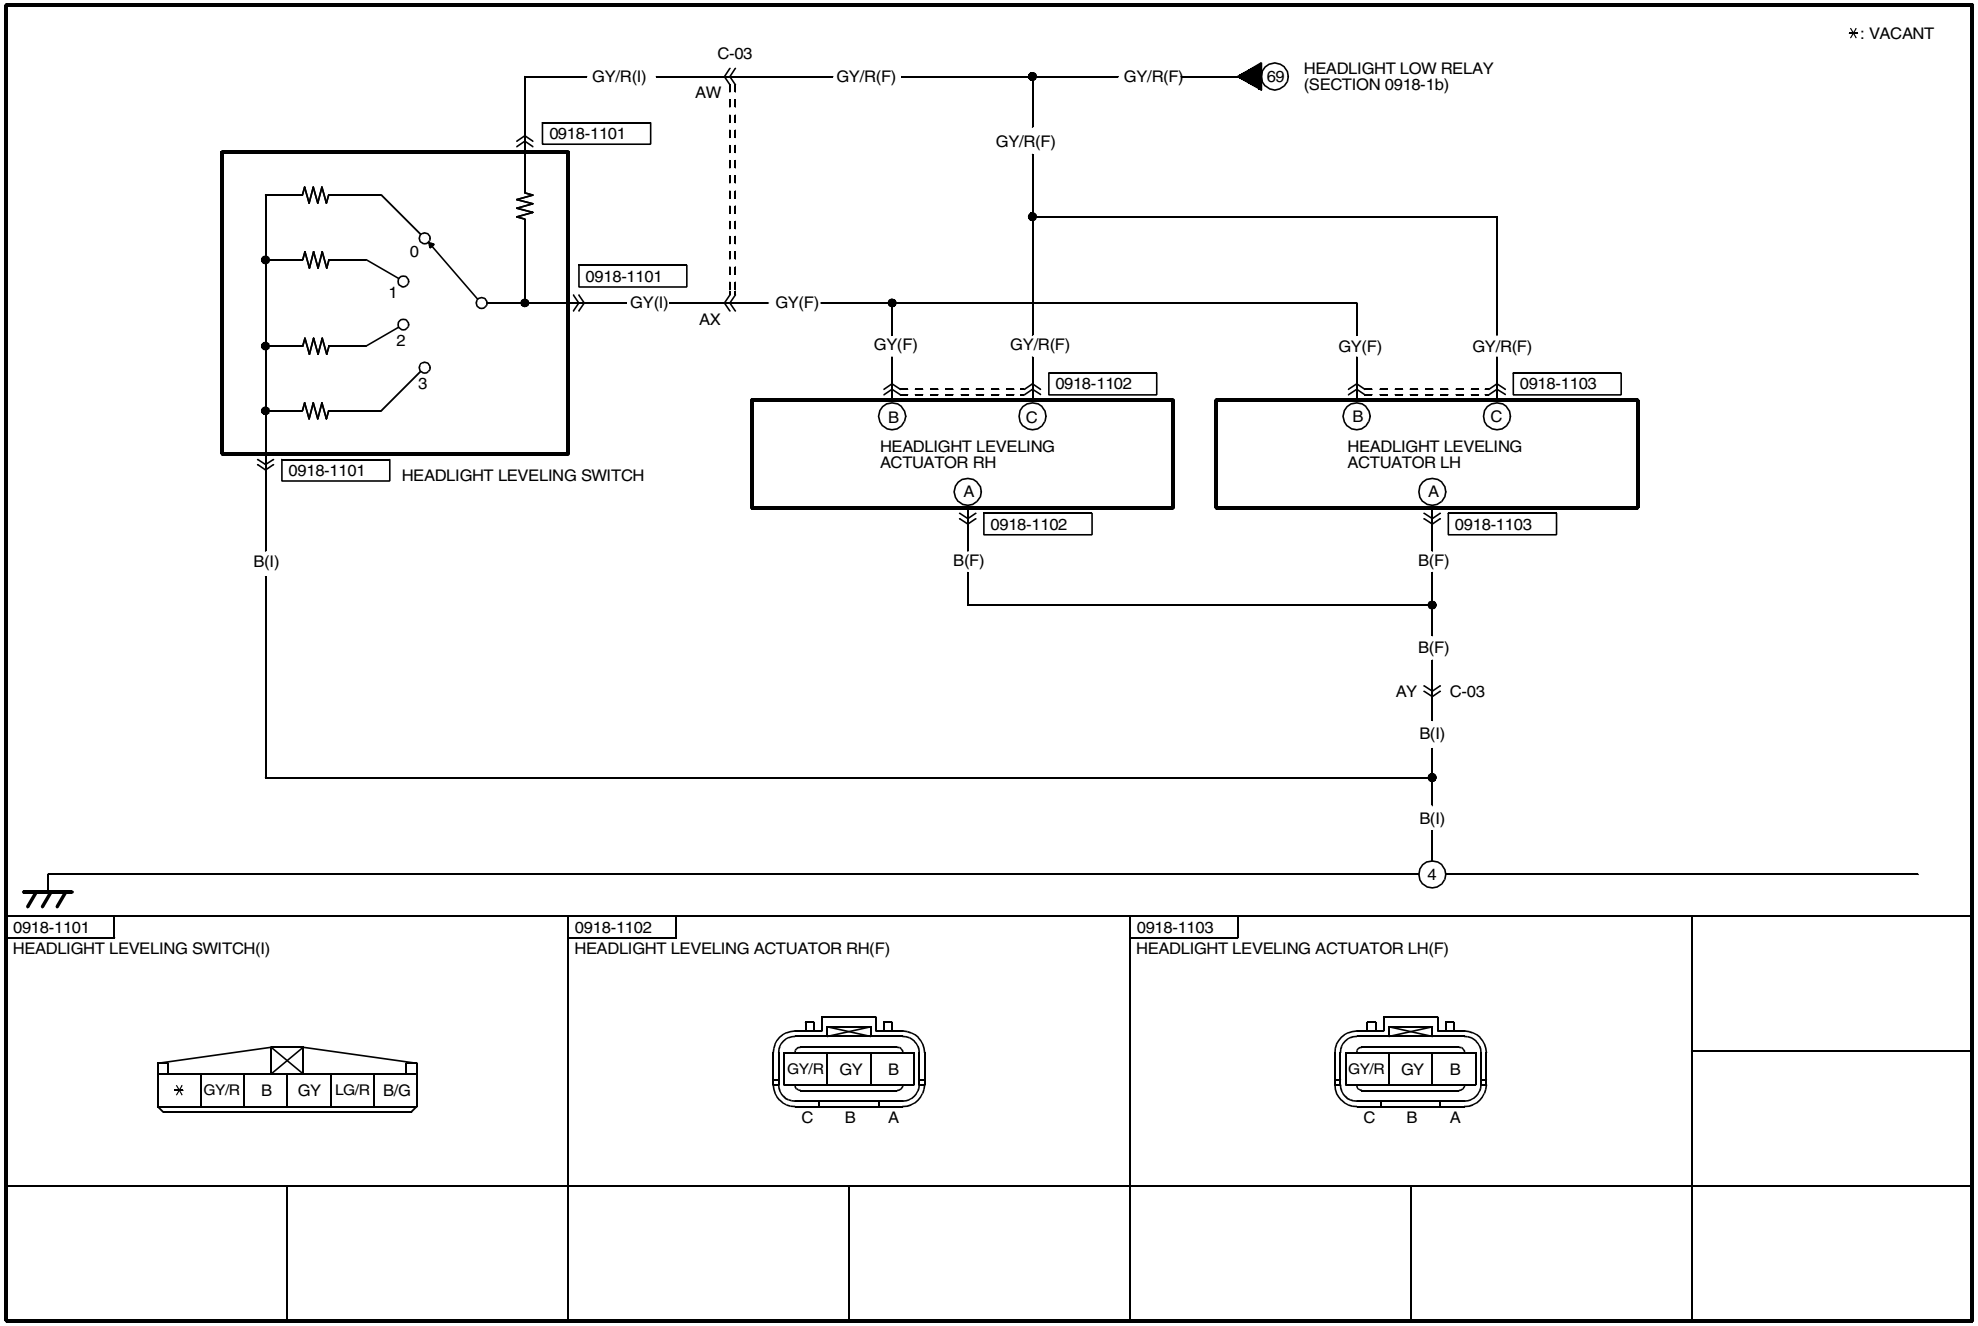

*: VACANT
C-03
GY/R(I)
AW
GY/R(F)
GY/R(F)
69
HEADLIGHT LOW RELAY
(SECTION 0918-1b)
0918-1101
GY/R(F)
0
1
2
3
0918-1101
GY(I)
AX
GY(F)
GY(F)
GY/R(F)
0918-1102
GY(F)
GY/R(F)
0918-1103
B
C
HEADLIGHT LEVELING
ACTUATOR RH
A
B
C
HEADLIGHT LEVELING
ACTUATOR LH
A
0918-1101
HEADLIGHT LEVELING SWITCH
0918-1102
0918-1103
B(I)
B(F)
B(F)
B(F)
AY
C-03
B(I)
B(I)
4
0918-1101
HEADLIGHT LEVELING SWITCH(I)
*
GY/R
B
GY
LG/R
B/G
0918-1102
HEADLIGHT LEVELING ACTUATOR RH(F)
GY/R
GY
B
C
B
A
0918-1103
HEADLIGHT LEVELING ACTUATOR LH(F)
GY/R
GY
B
C
B
A

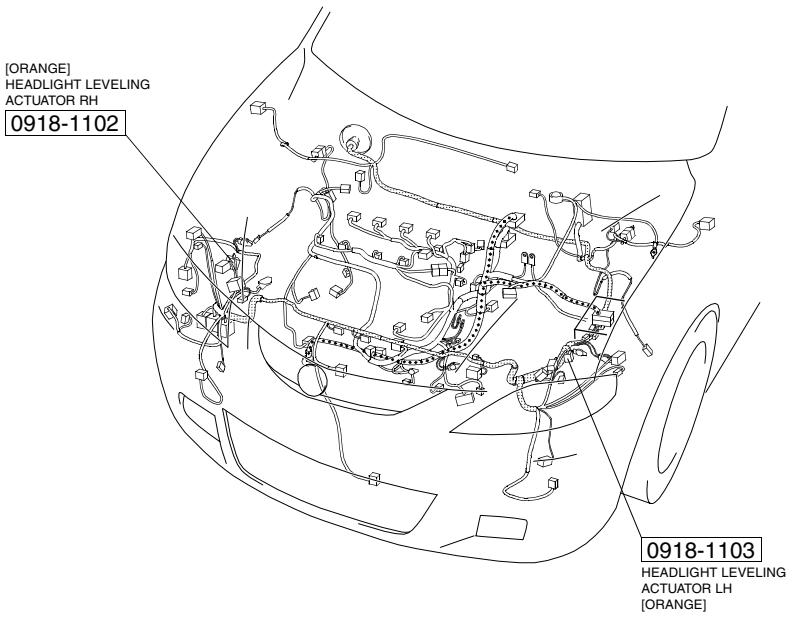
[ORANGE]
HEADLIGHT LEVELING
ACTUATOR RH
0918-1102
0918-1103
HEADLIGHT LEVELING
ACTUATOR LH
[ORANGE]

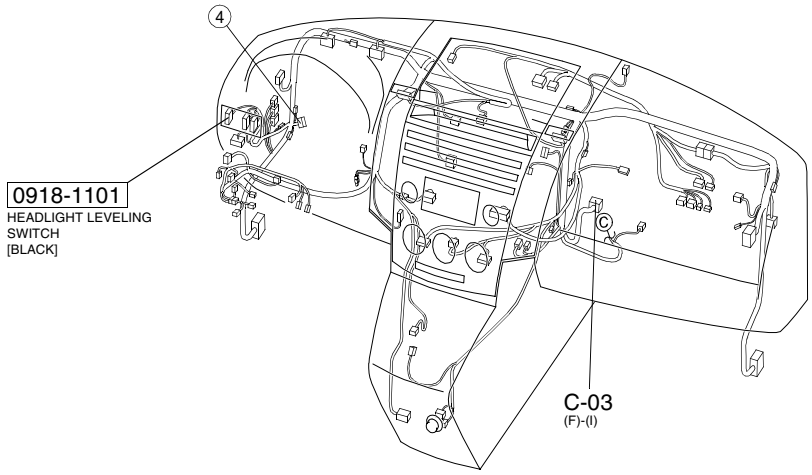
4
0918-1101
HEADLIGHT LEVELING
SWITCH
[BLACK]
C
C-03
(F)-(I)

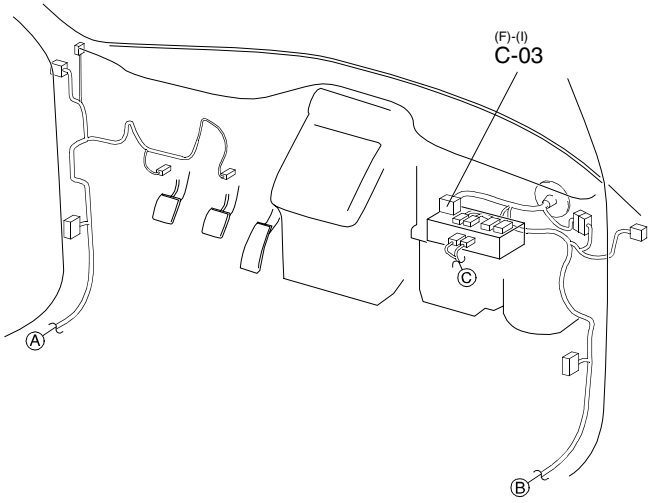
(F)-(I)
C-03
C
A
B

HEADLIGHT AUTO LEVELING SYSTEM

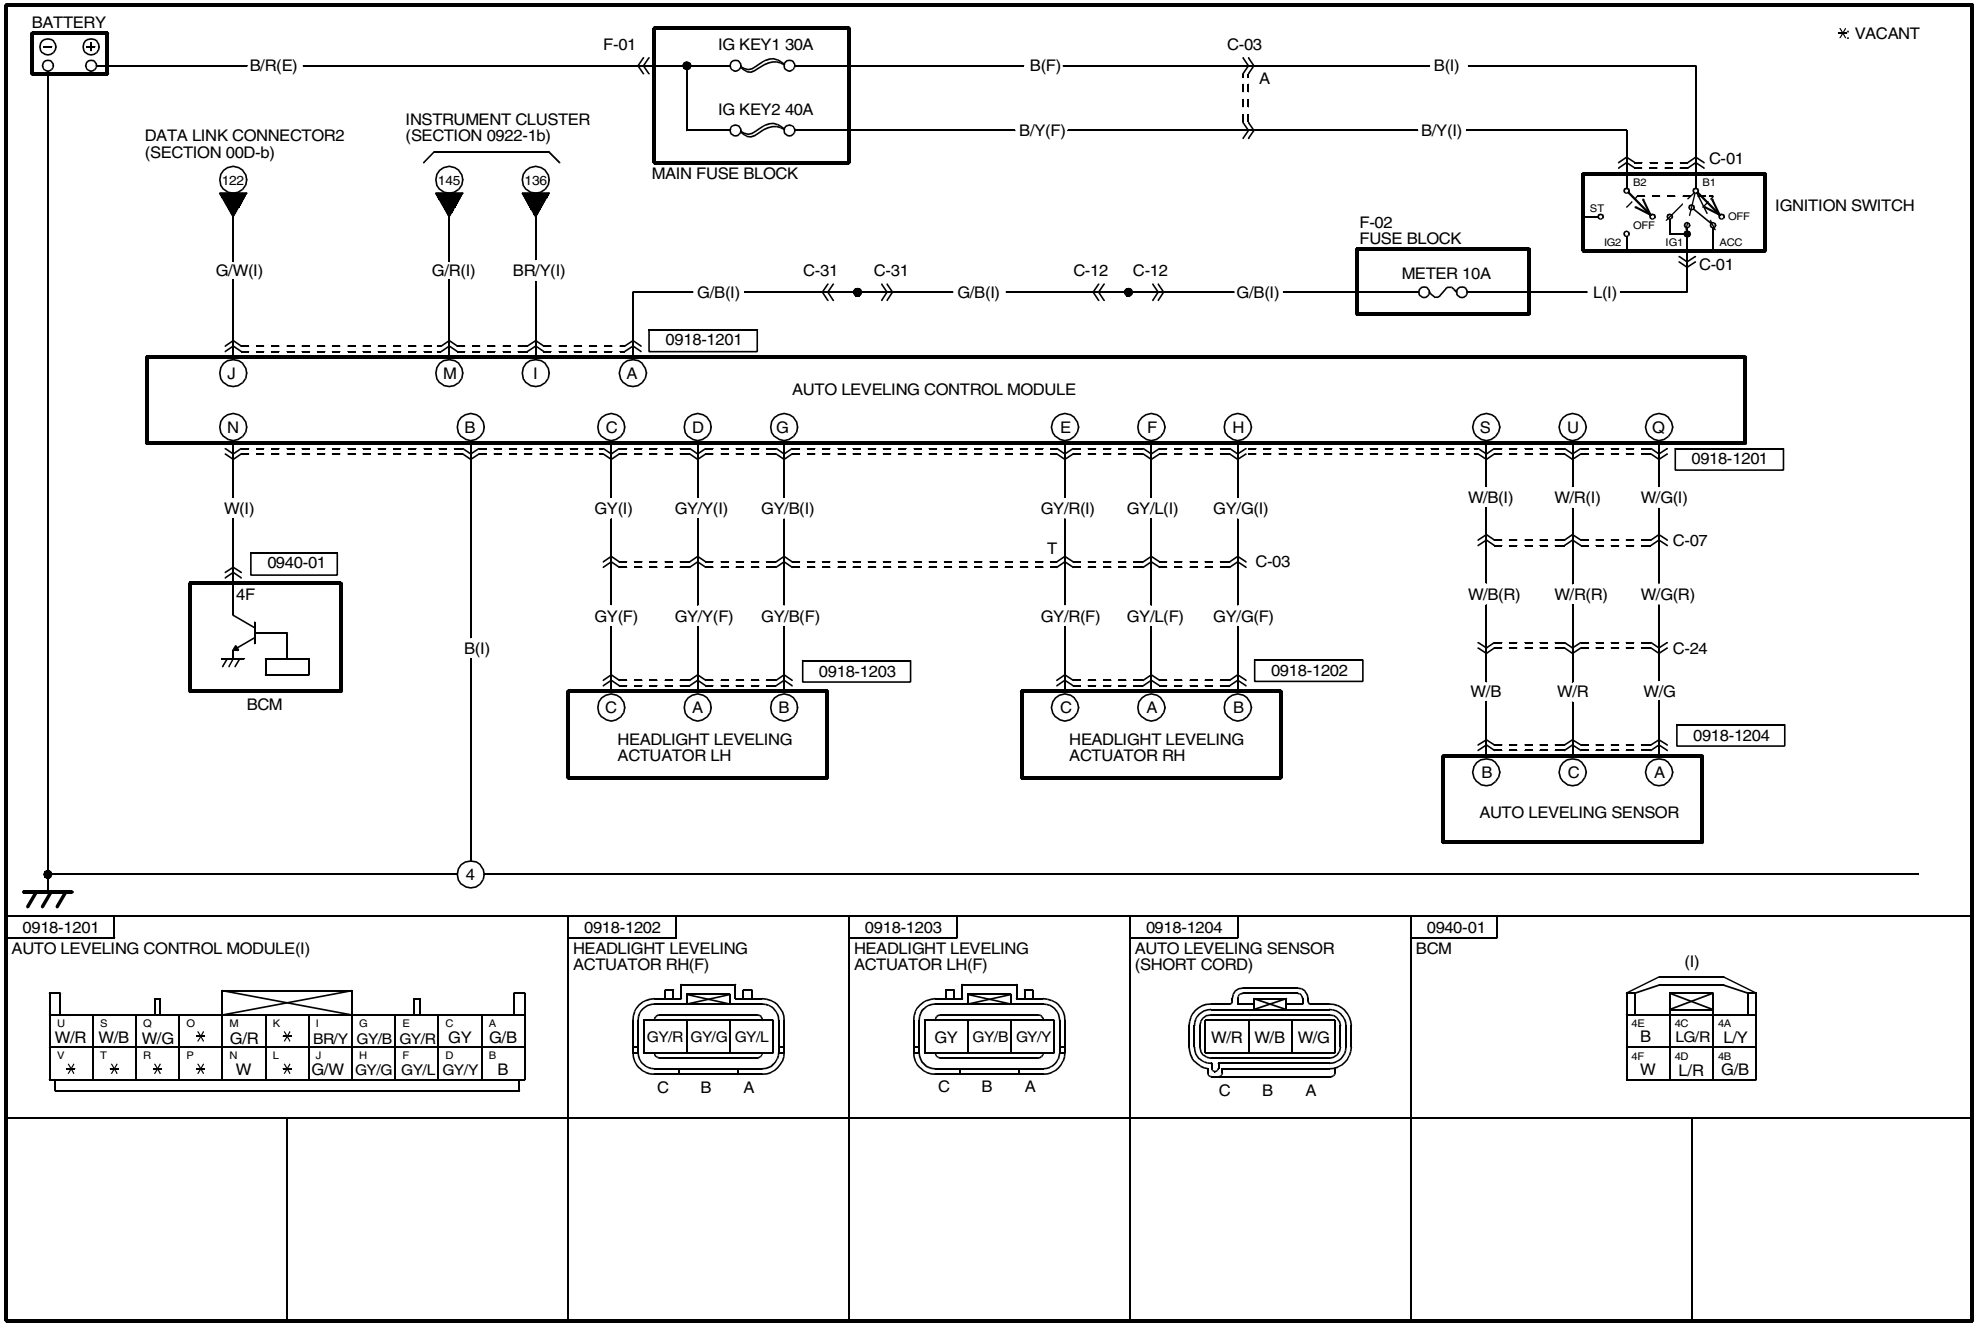

0918-1201 AUTO LEVELING CONTROL MODULE(I)

U	S	Q	O	M	K	I	G	E	C	A
W/R	W/B	W/G	*	G/R	*	BR/Y	GY/B	GY/R	GY	G/B
V	T	R	P	N	L	J	H	F	D	B
*	*	*	*	W	*	G/W	GY/G	GY/L	GY/Y	B

0918-1202 HEADLIGHT LEVELING ACTUATOR RH(F)


0918-1203 HEADLIGHT LEVELING ACTUATOR LH(F)


0918-1204 AUTO LEVELING SENSOR (SHORT CORD)


0940-01 BCM


(I)

4E	4C	4A
B	LG/R	L/Y
4F	4D	4B
W	L/R	G/B

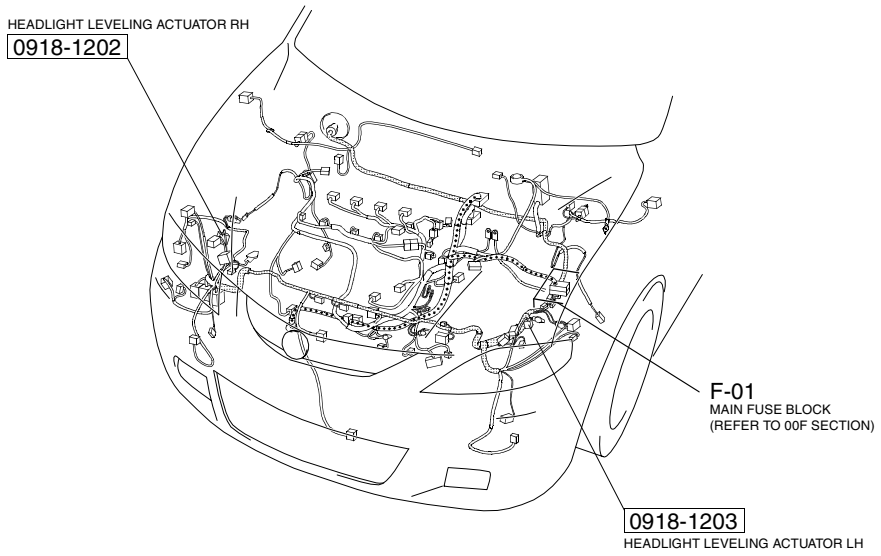

HEADLIGHT LEVELING ACTUATOR RH
0918-1202
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0918-1203
HEADLIGHT LEVELING ACTUATOR LH

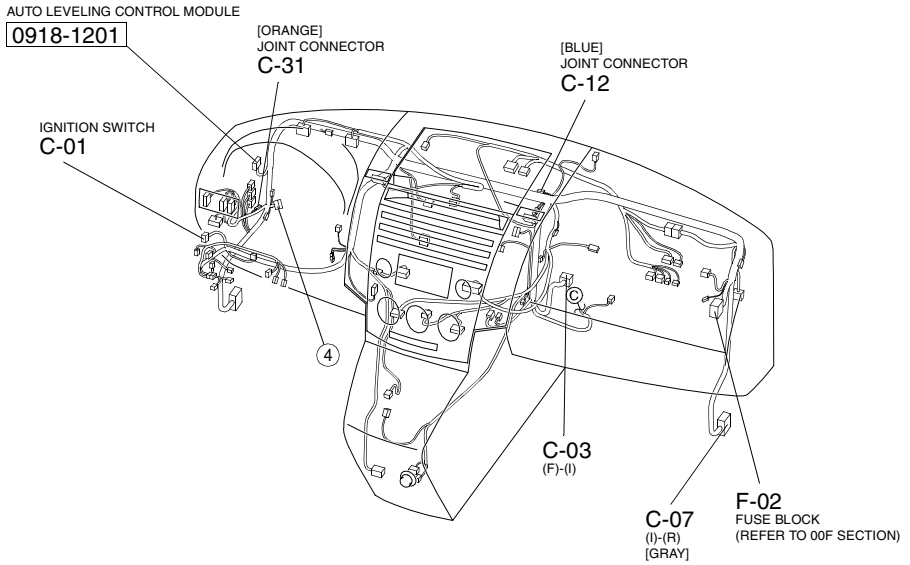

AUTO LEVELING CONTROL MODULE
0918-1201
[ORANGE]
JOINT CONNECTOR
C-31
[BLUE]
JOINT CONNECTOR
C-12
IGNITION SWITCH
C-01
4
C-03
(F)-(I)
C-07
(I)-(R)
[GRAY]
F-02
FUSE BLOCK
(REFER TO 00F SECTION)

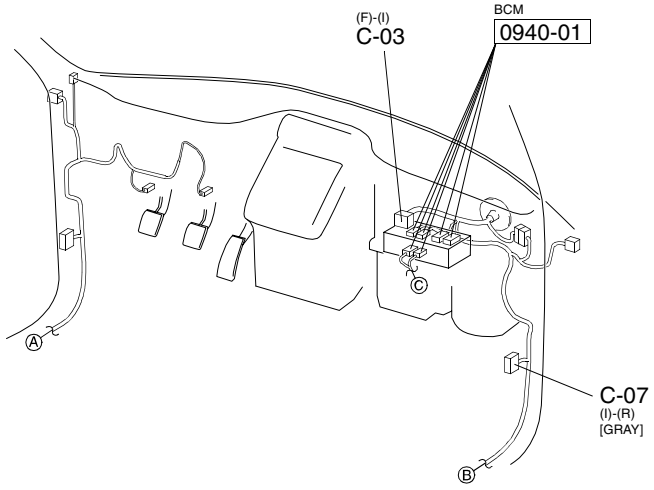

(F)-(I)
C-03
BCM
0940-01
C-07
(I)-(R)
[GRAY]

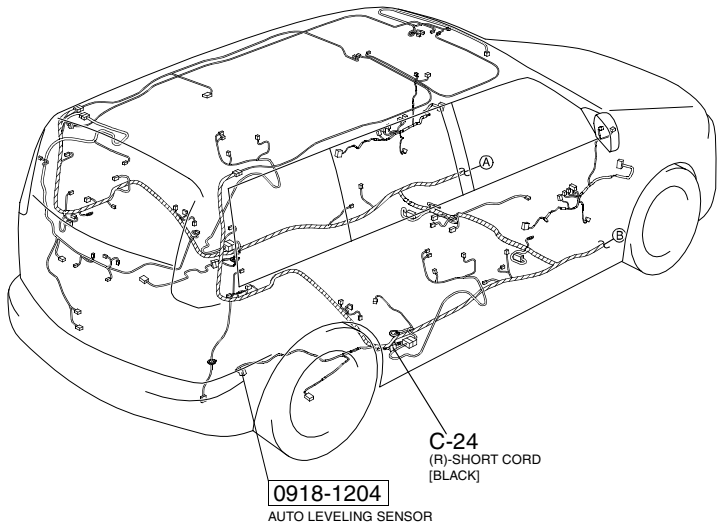

C-24
(R)-SHORT CORD
[BLACK]
0918-1204
AUTO LEVELING SENSOR


WINDSHIELD WIPER AND WASHER

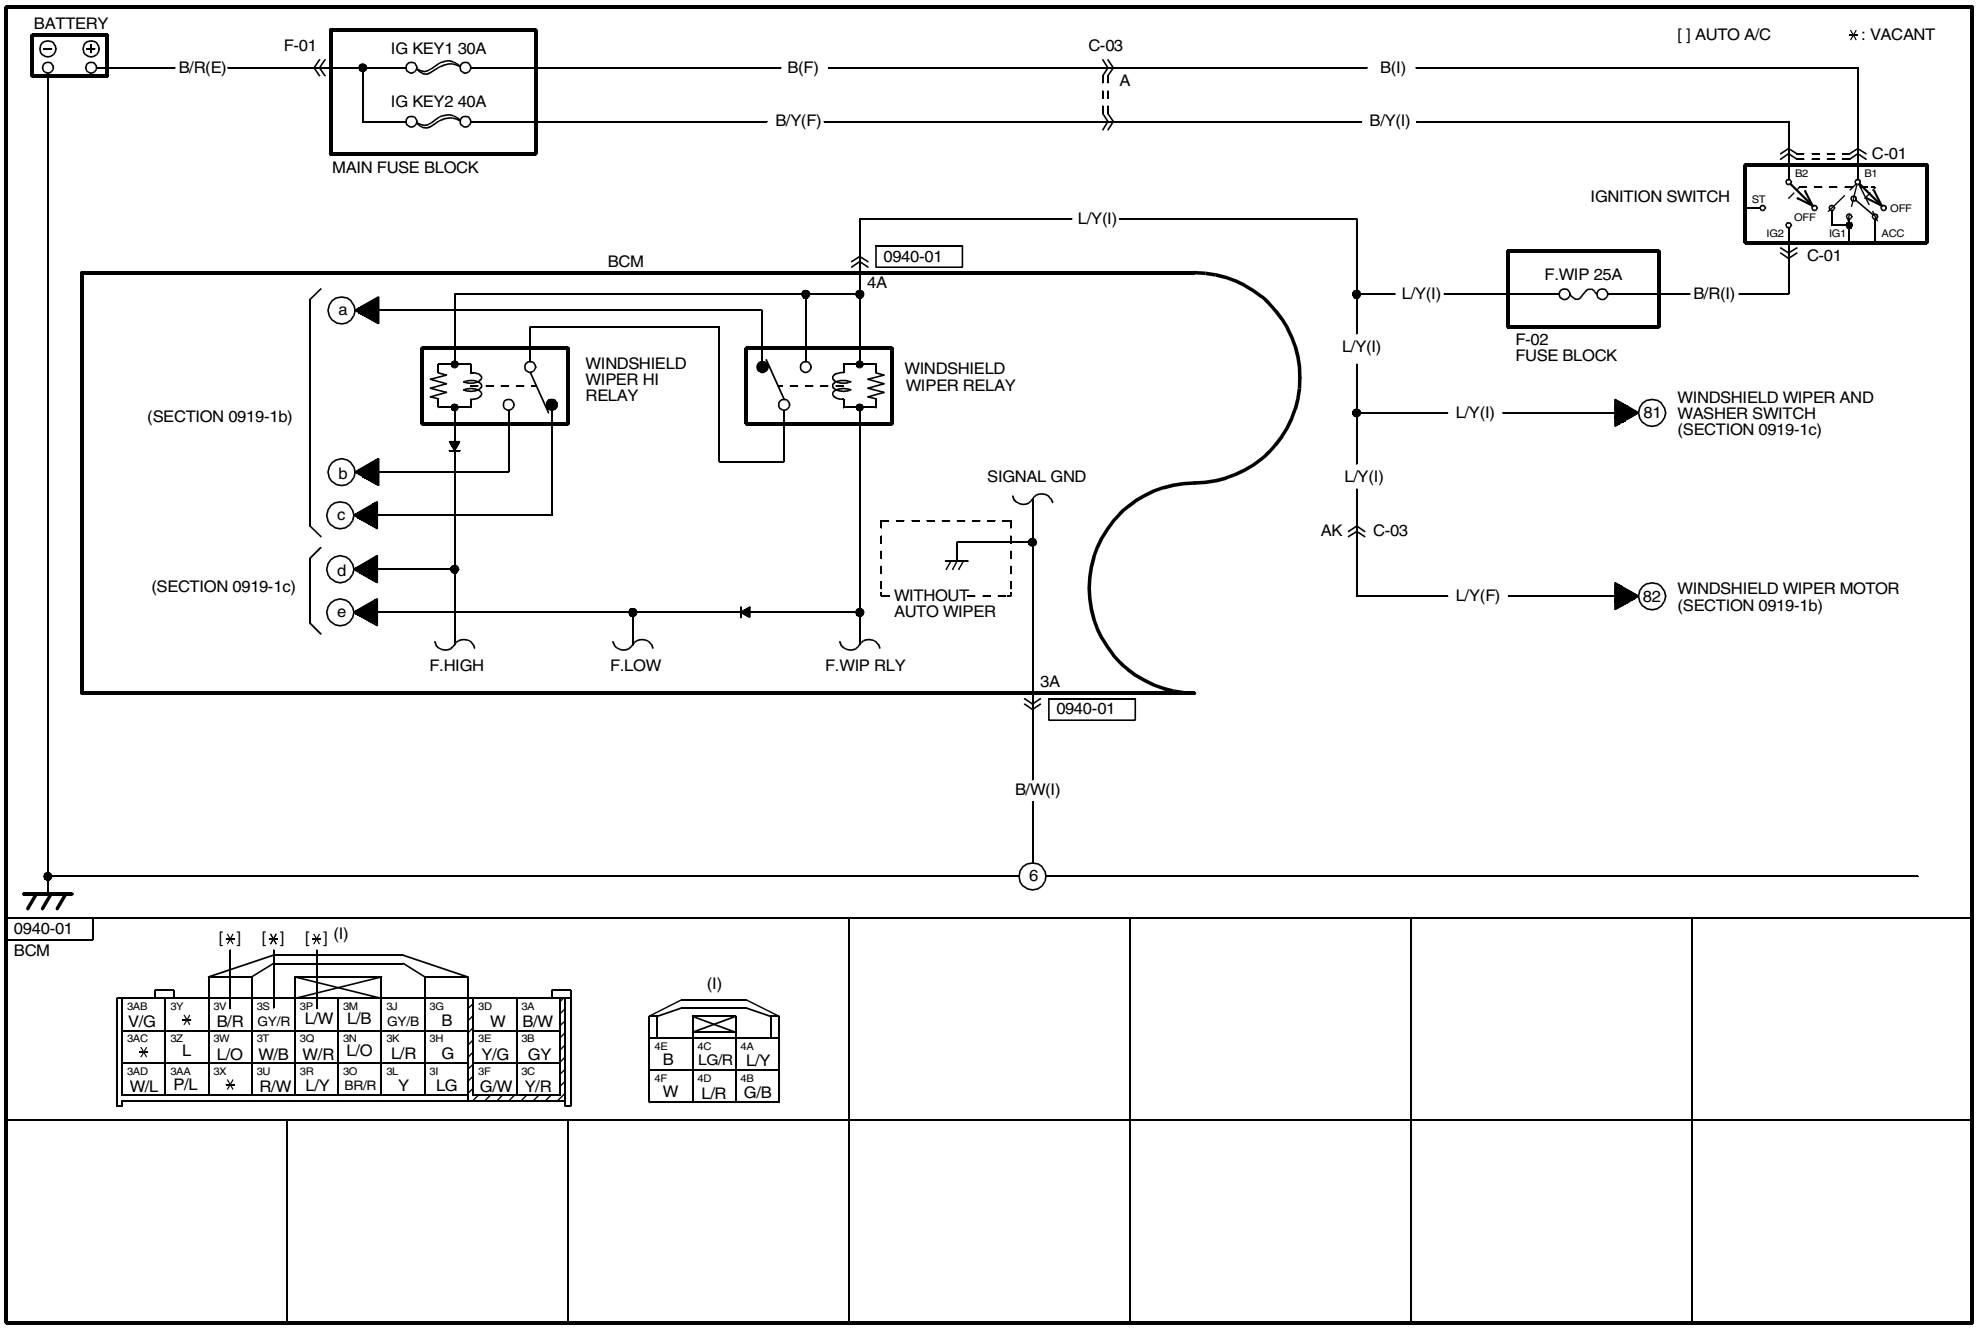

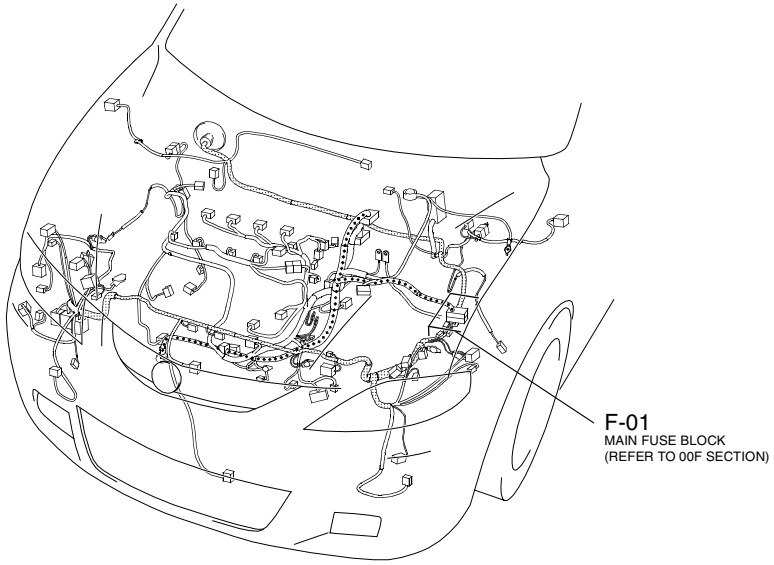
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

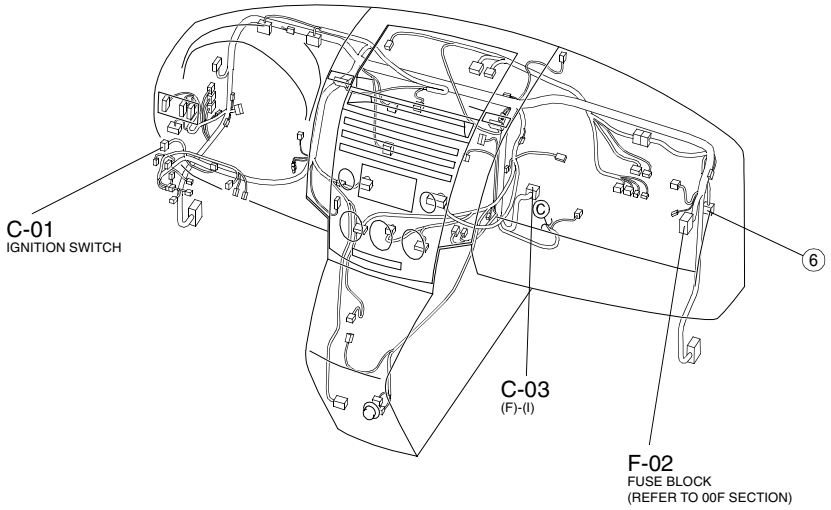
C-01
IGNITION SWITCH
C
6
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)

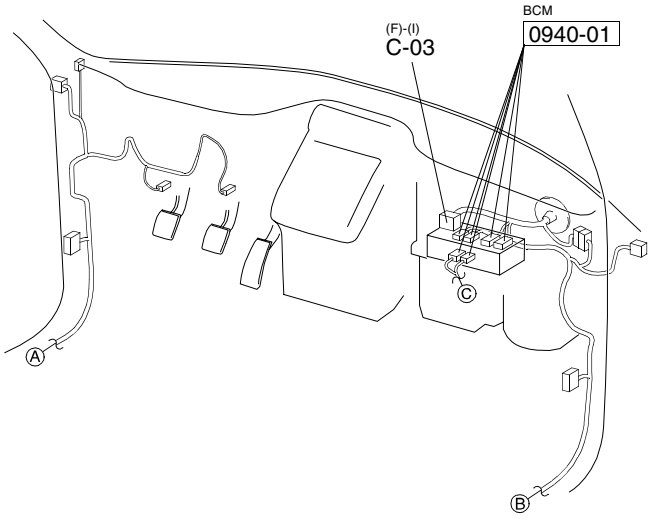
BCM
0940-01
(F)-(I)
C-03
C
A
B

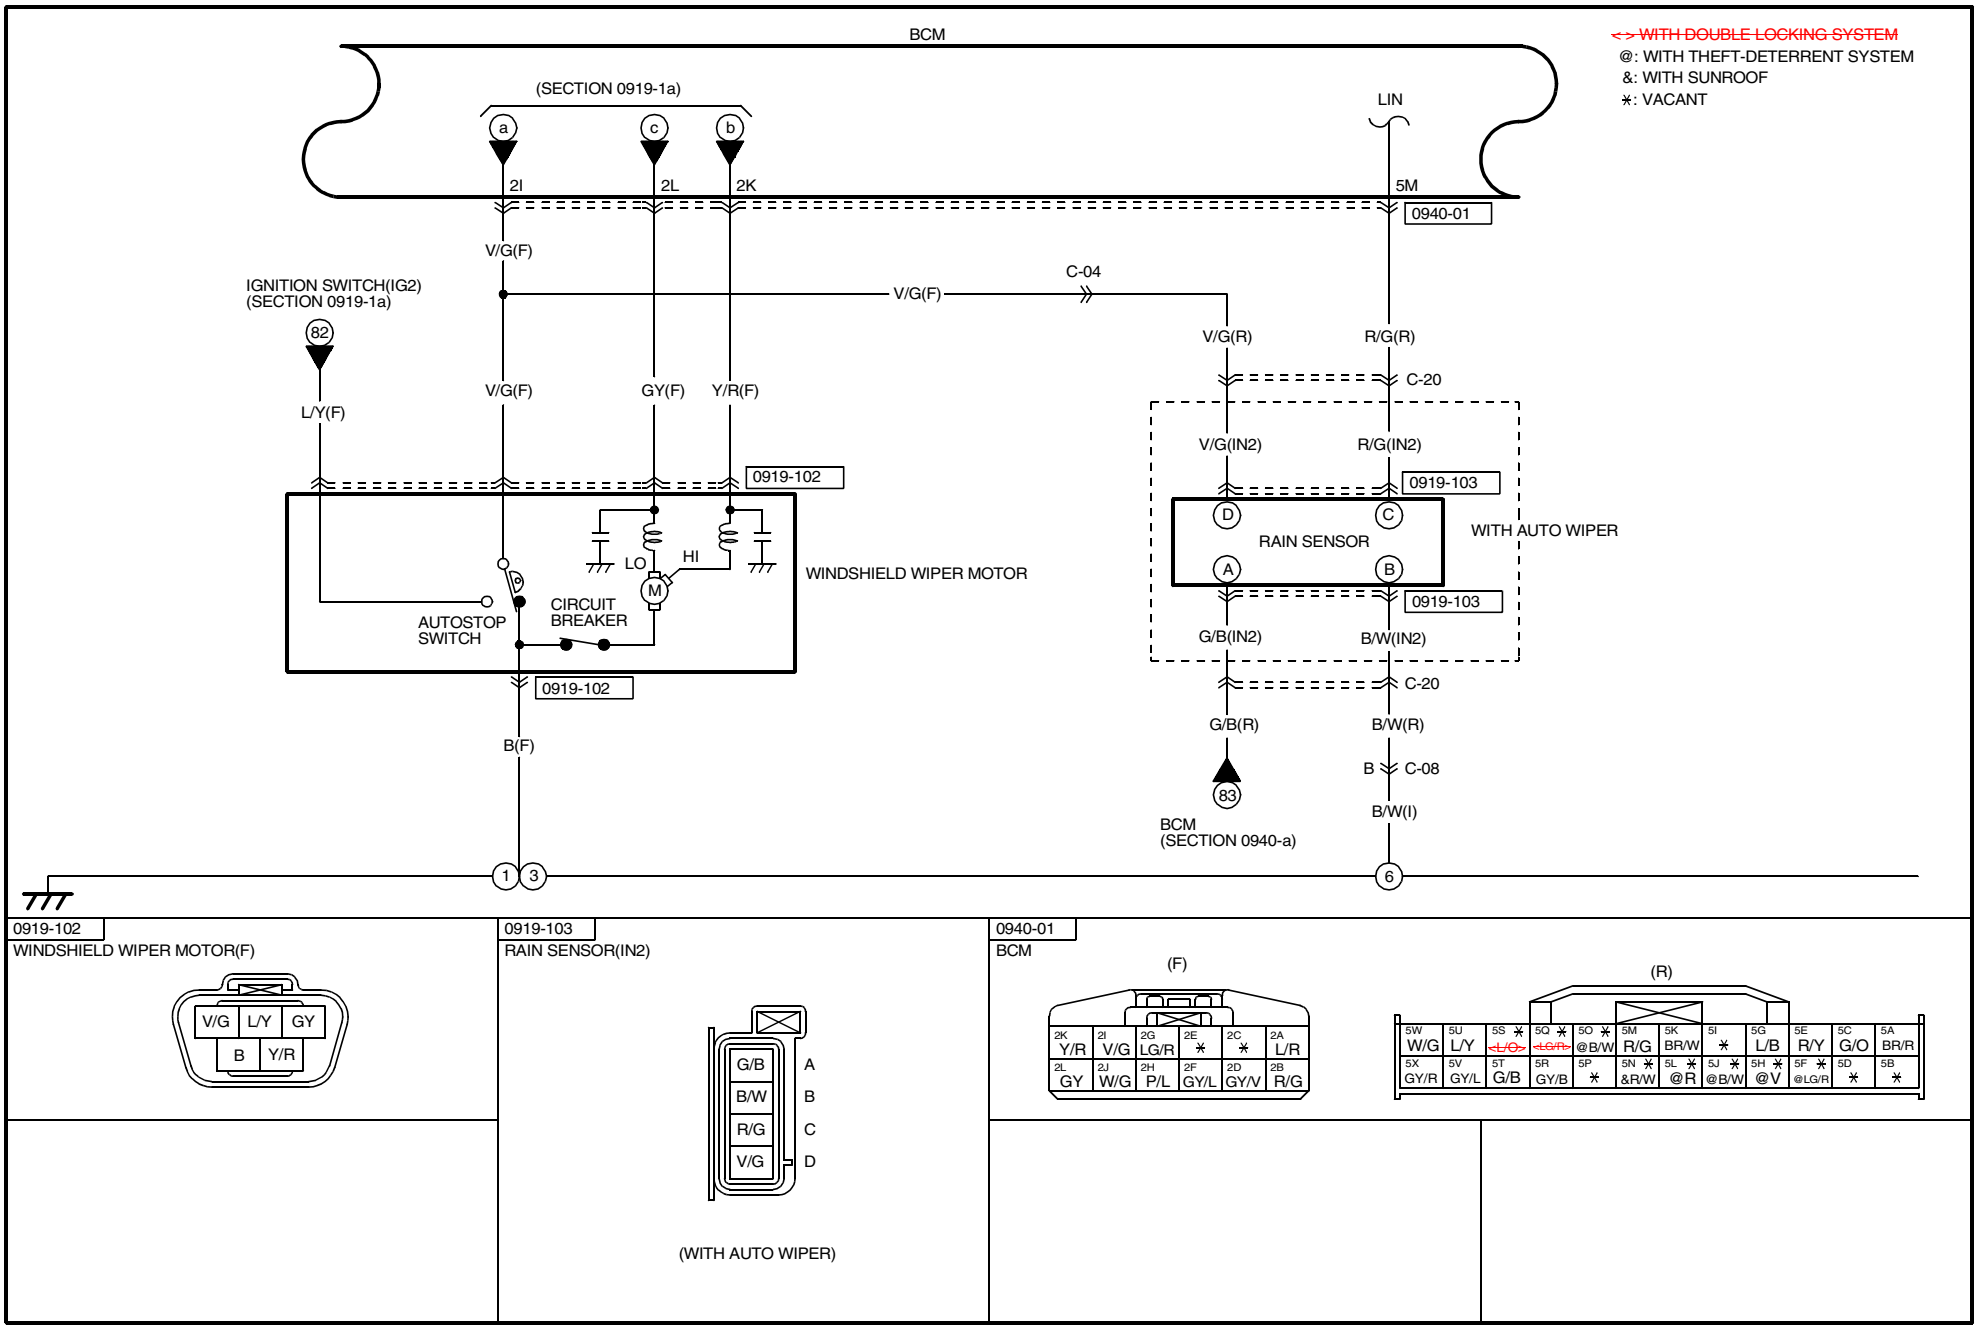

0919-102
WINDSHIELD WIPER MOTOR(F)


0919-103
RAIN SENSOR(IN2)


(WITH AUTO WIPER)


0940-01
BCM


(F)


(R)

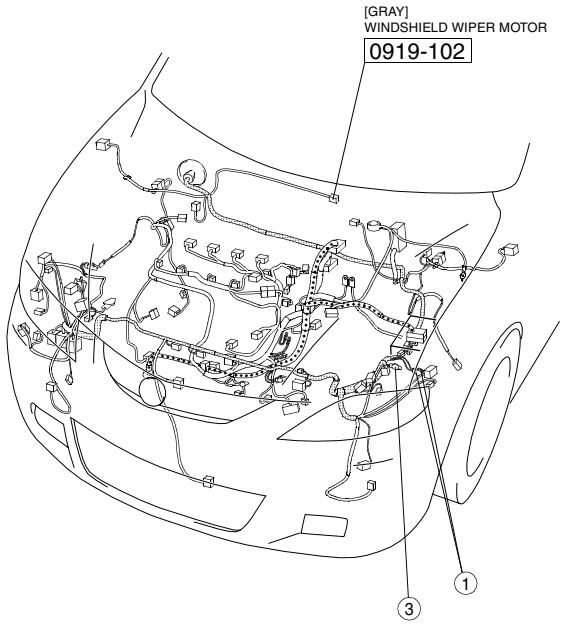
[GRAY]
WINDSHIELD WIPER MOTOR
0919-102
1
3

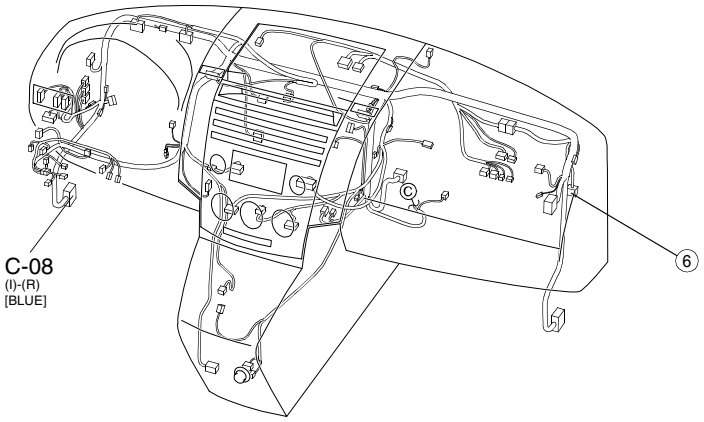
C-08
(I)-(R)
[BLUE]
6

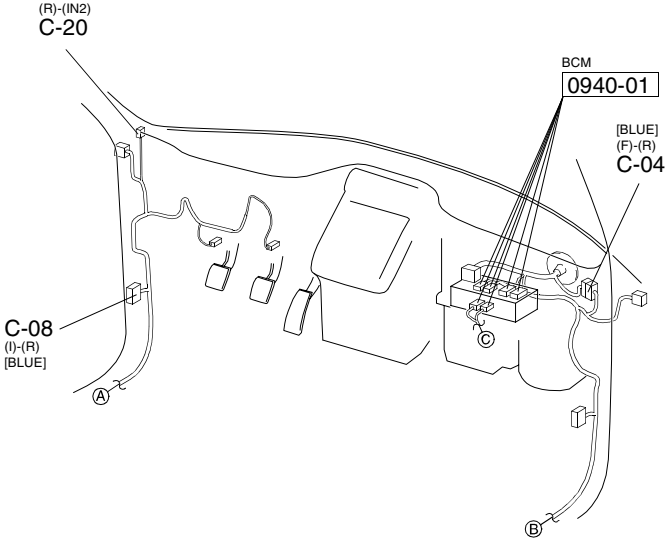
(R)-(IN2)
C-20
BCM
0940-01
[BLUE]
(F)-(R)
C-04
C-08
(I)-(R)
[BLUE]
A
B
C

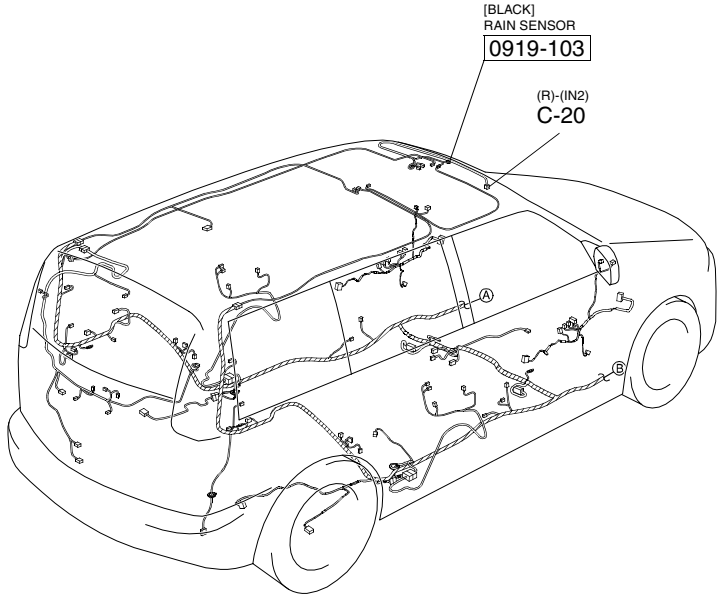
[BLACK]
RAIN SENSOR
0919-103
(R)-(IN2)
C-20
A
B

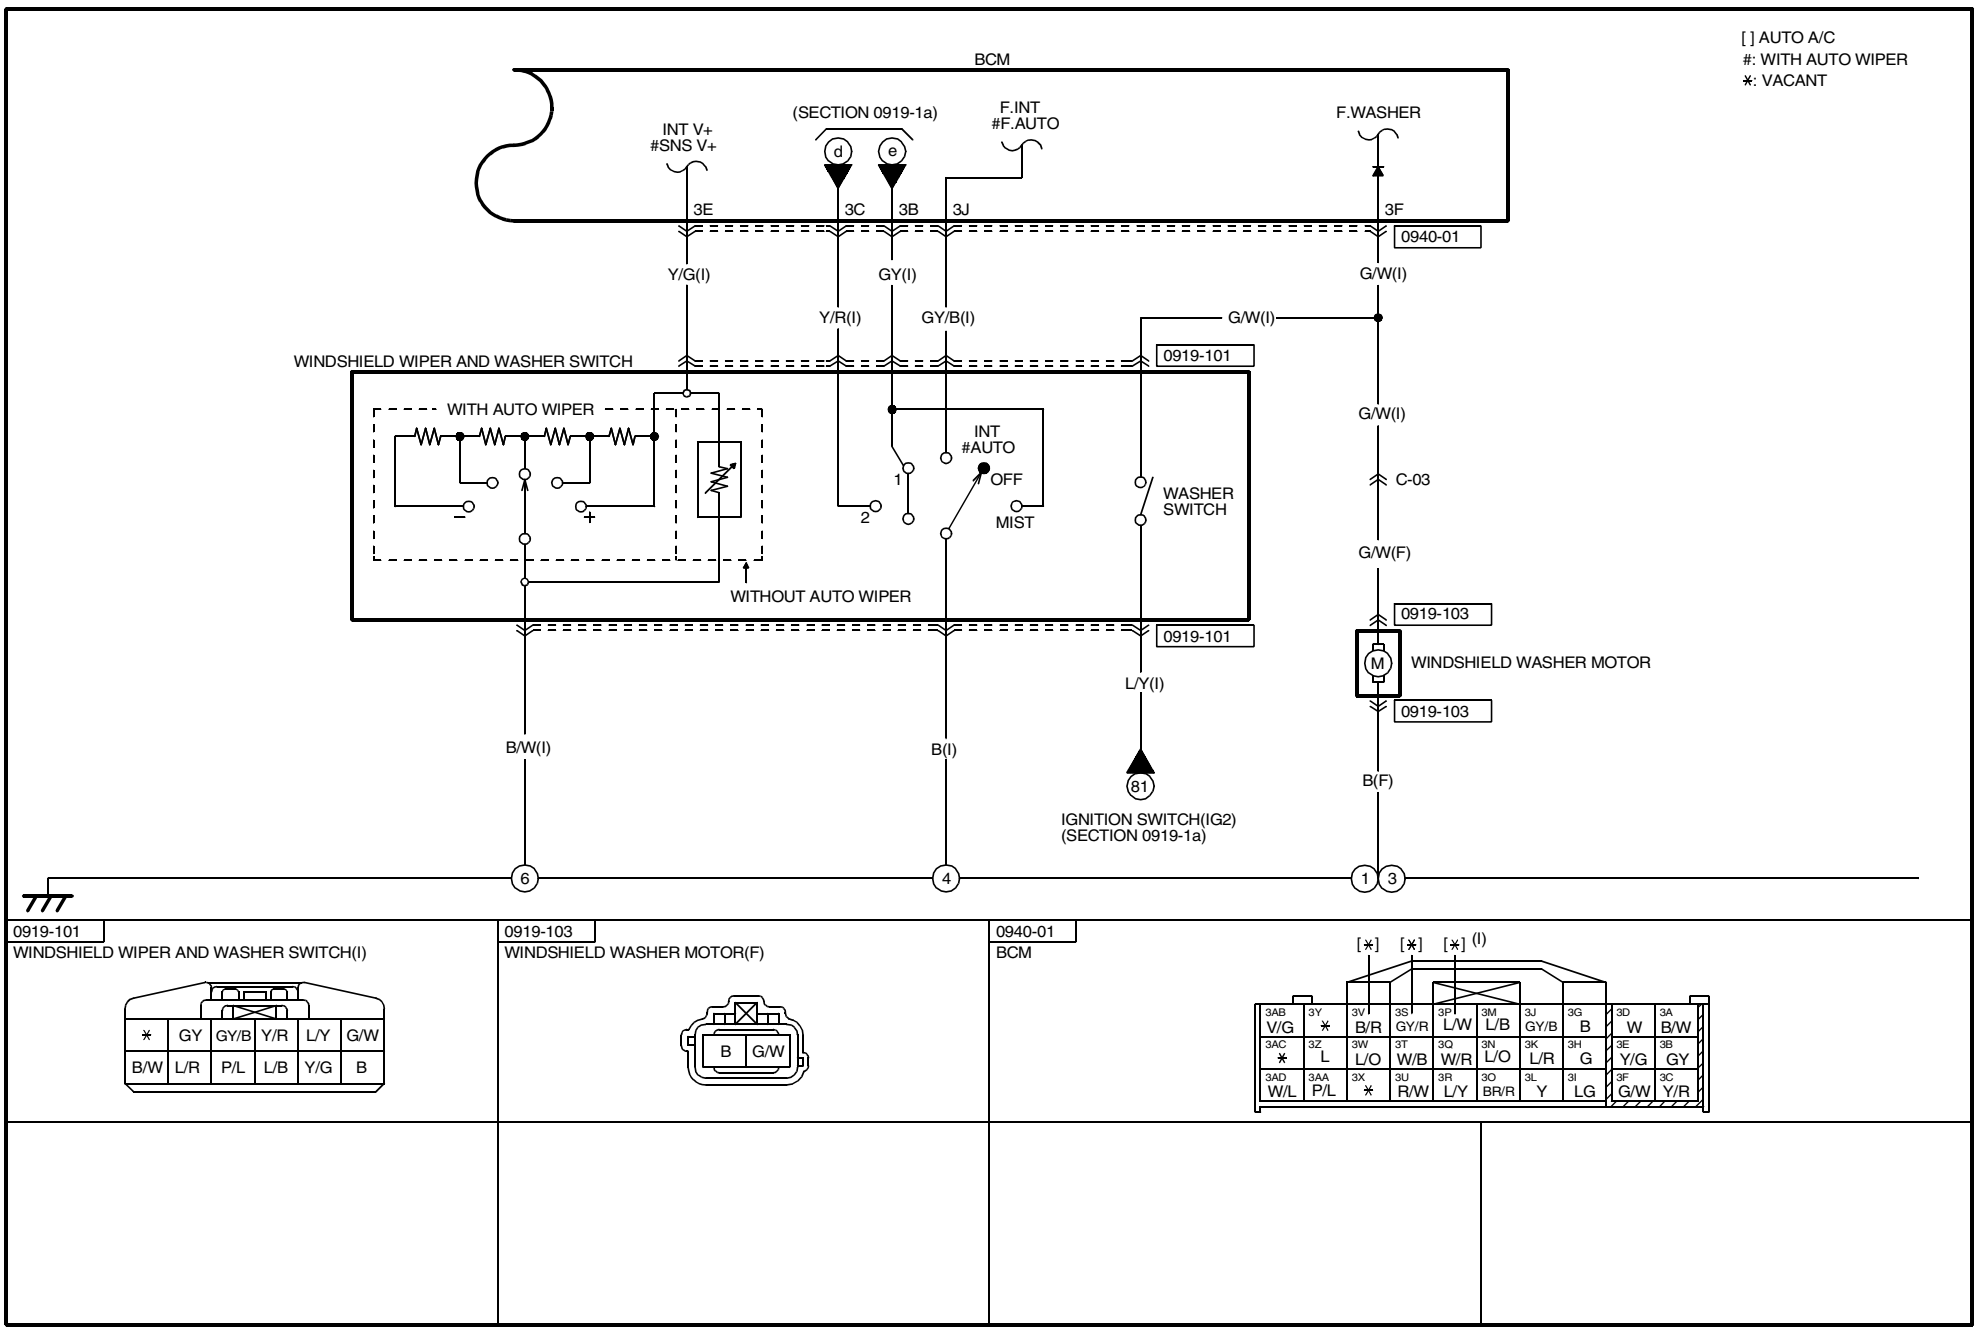

0919-101
WINDSHIELD WIPER AND WASHER SWITCH(I)

*	GY	GY/B	Y/R	L/Y	G/W
B/W	L/R	P/L	L/B	Y/G	B

0919-103
WINDSHIELD WASHER MOTOR(F)


B	G/W

0940-01
BCM


[*] [*] [*] (I)

3AB V/G	3Y *	3V B/R	3S GY/R	3P L/W	3M L/B	3J GY/B	3G B	3D W	3A B/W
3AC *	3Z L	3W L/O	3T W/B	3Q W/R	3N L/O	3K L/R	3H G	3E Y/G	3B GY
3AD W/L	3AA P/L	3X *	3U R/W	3R L/Y	3O BR/R	3L Y	3I LG	3F G/W	3C Y/R

HARNESS SYMBOL : (F) (E) (R)

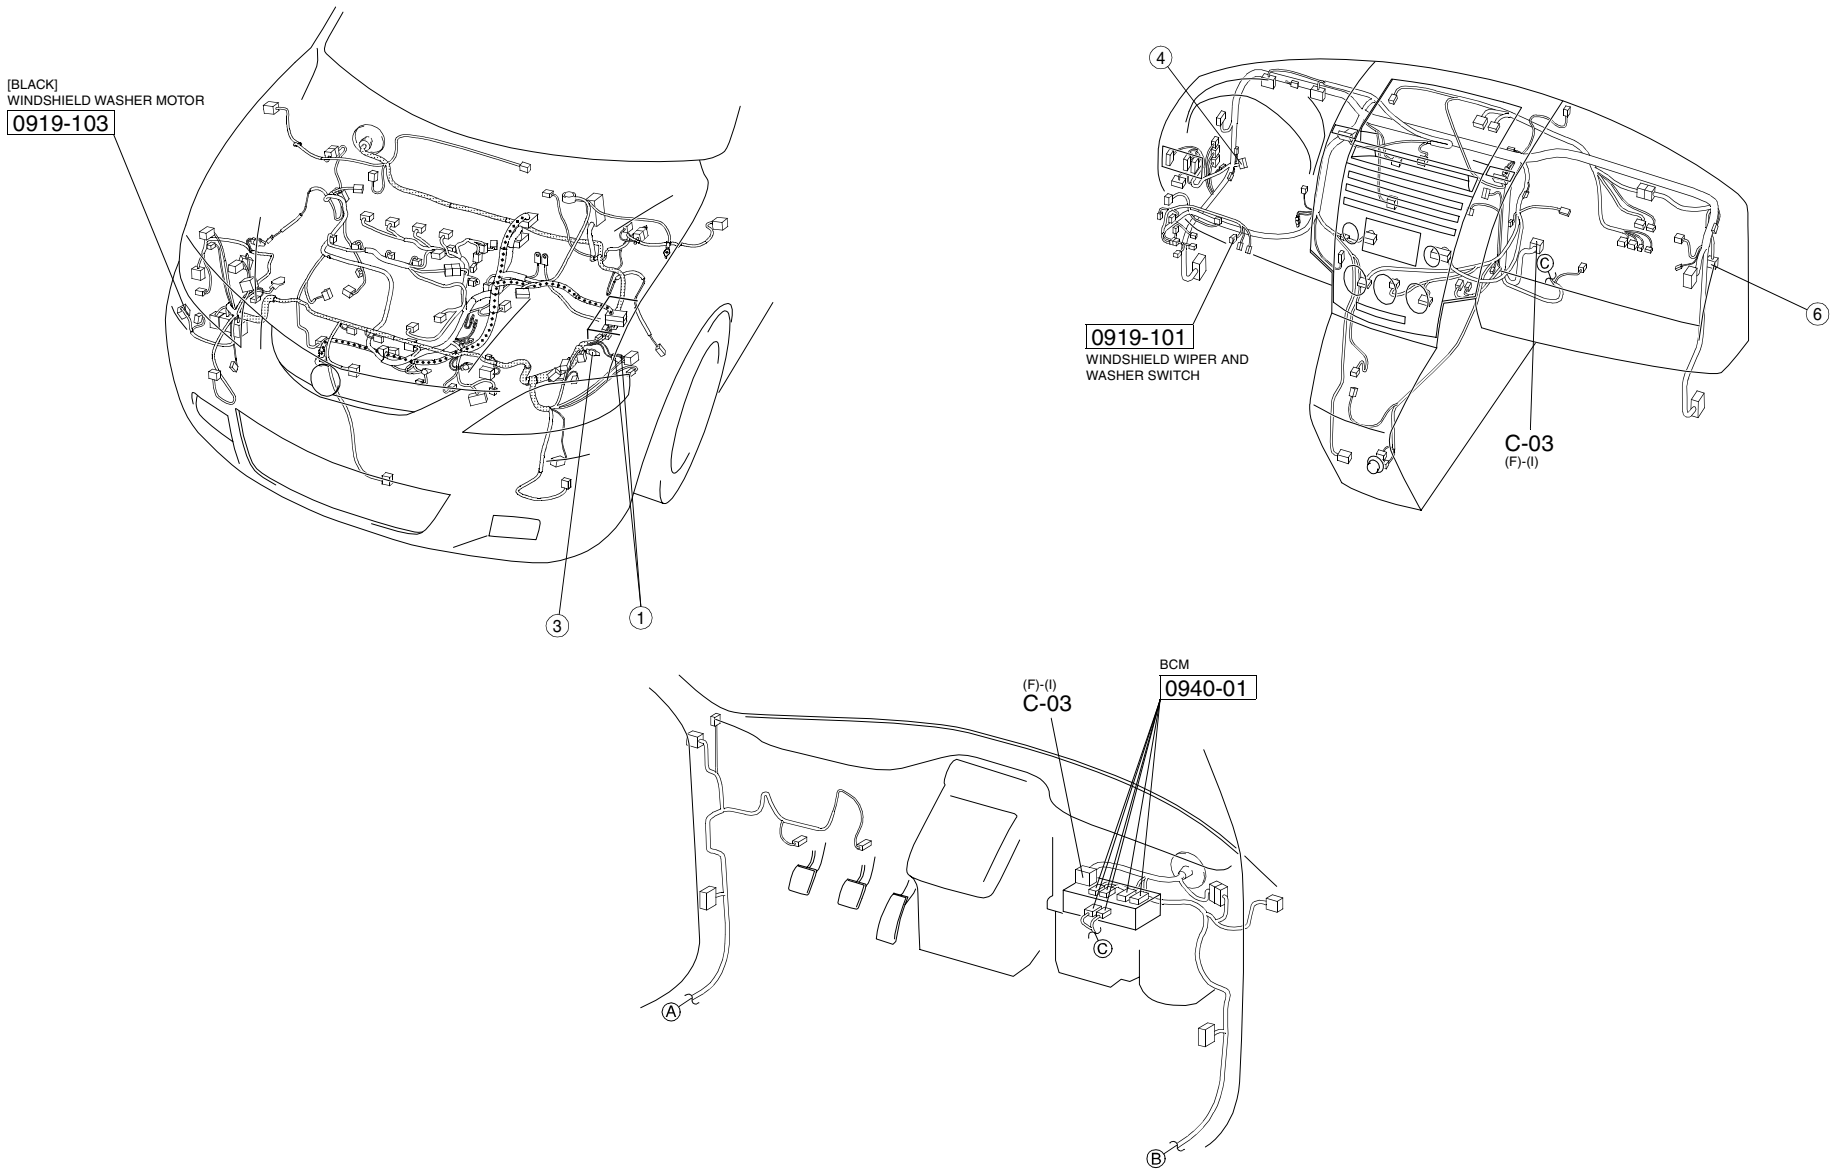

REAR WIPER AND WASHER

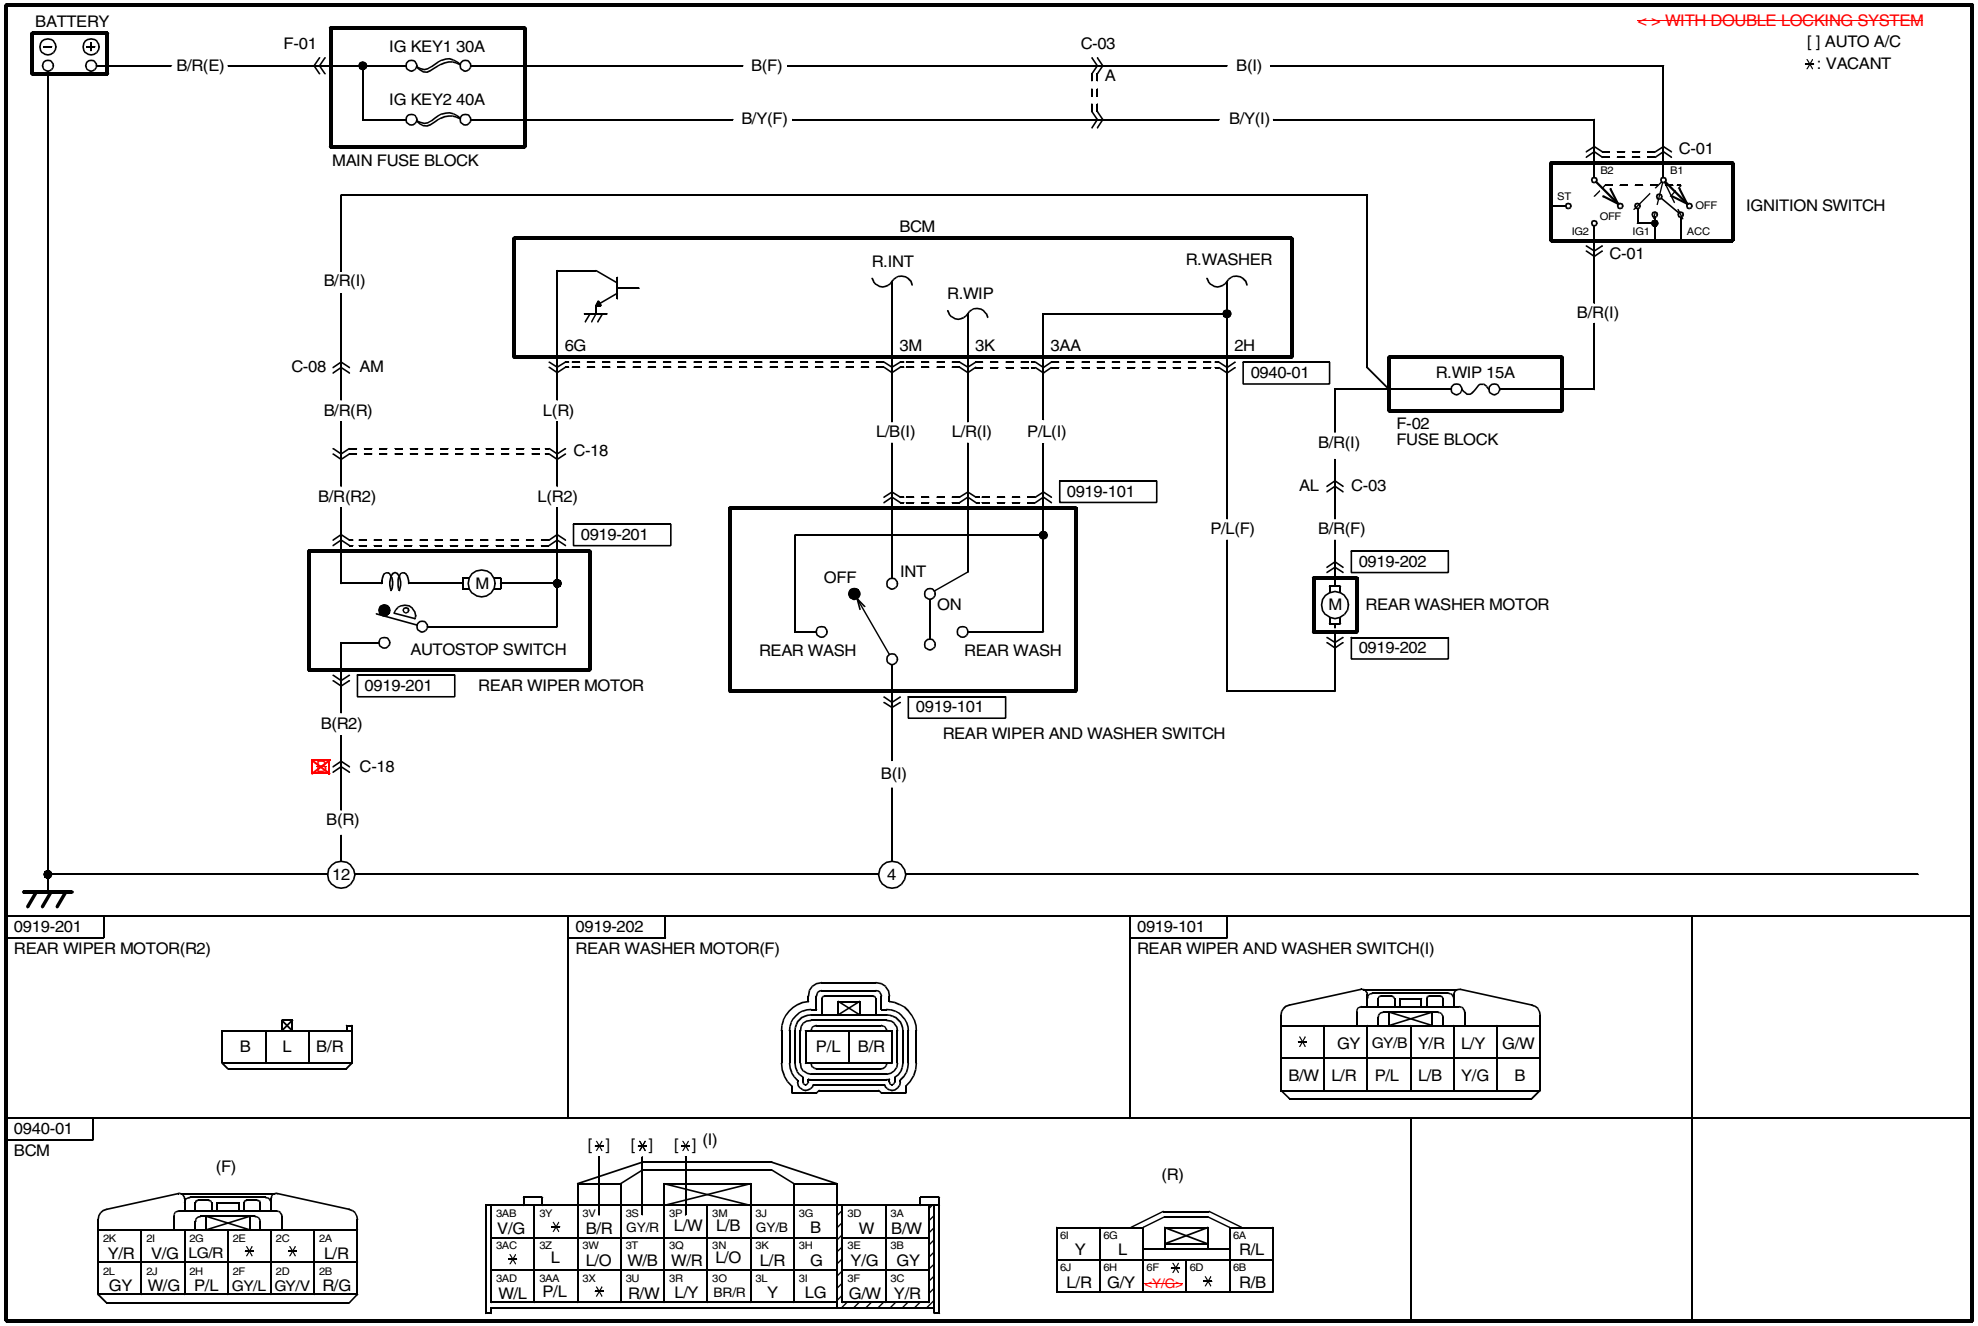

0919-201
REAR WIPER MOTOR(R2)

B	L	B/R

0919-202
REAR WASHER MOTOR(F)

P/L	B/R

0919-101
REAR WIPER AND WASHER SWITCH(I)

*	GY	GY/B	Y/R	L/Y	G/W
B/W	L/R	P/L	L/B	Y/G	B

0940-01
BCM

(F)


2K Y/R	2I V/G	2G LG/R	2E *	2C *	2A L/R
2L GY	2J W/G	2H P/L	2F GY/L	2D GY/V	2B R/G


[*] [*] [*] (I)


3AB V/G	3Y *	3V B/R	3S GY/R	3P L/W	3M L/B	3J GY/B	3G B	3D W	3A B/W
3AC *	3Z L	3W L/O	3T W/B	3Q W/R	3N L/O	3K L/R	3H G	3E Y/G	3B GY
3AD W/L	3AA P/L	3X *	3U R/W	3R L/Y	3O BR/R	3L Y	3I LG	3F G/W	3C Y/R


(R)

6I Y	6G L			6A R/L
6J L/R	6H G/Y	6F * ~~Y/G~~	6D *	6B R/B

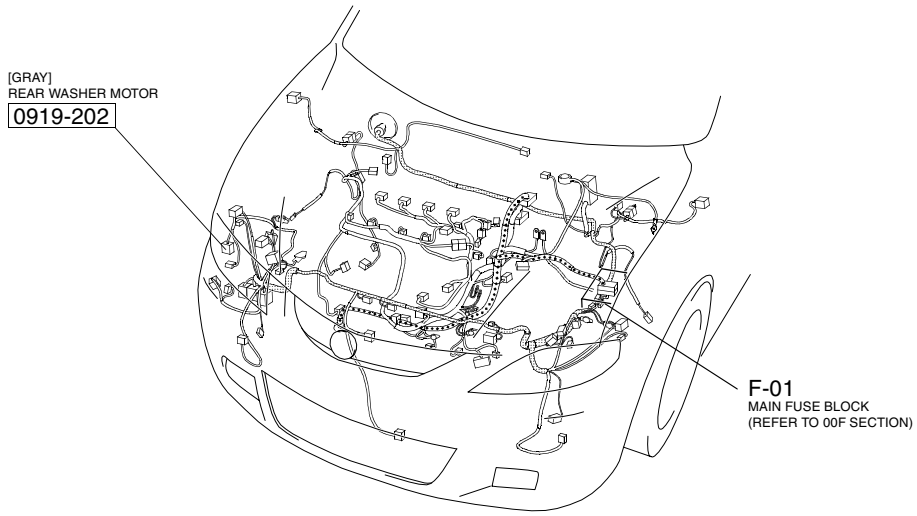

[GRAY]
REAR WASHER MOTOR
0919-202
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

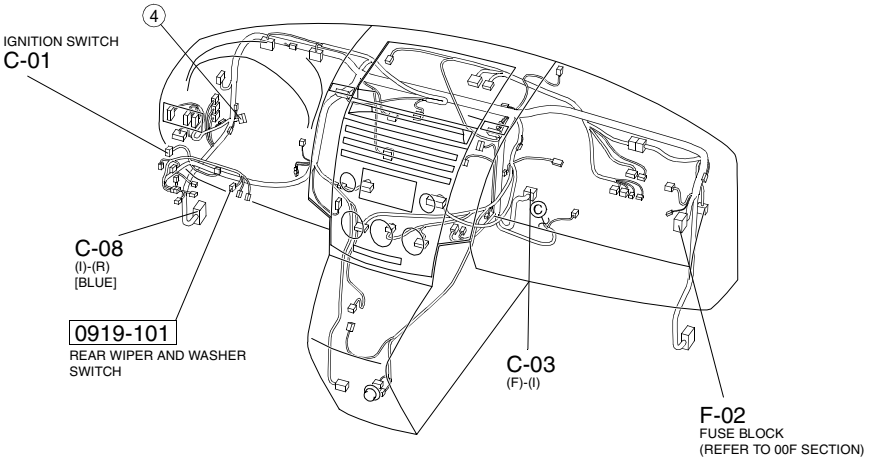
4
IGNITION SWITCH
C-01
C-08
(I)-(R)
[BLUE]
0919-101
REAR WIPER AND WASHER SWITCH
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)

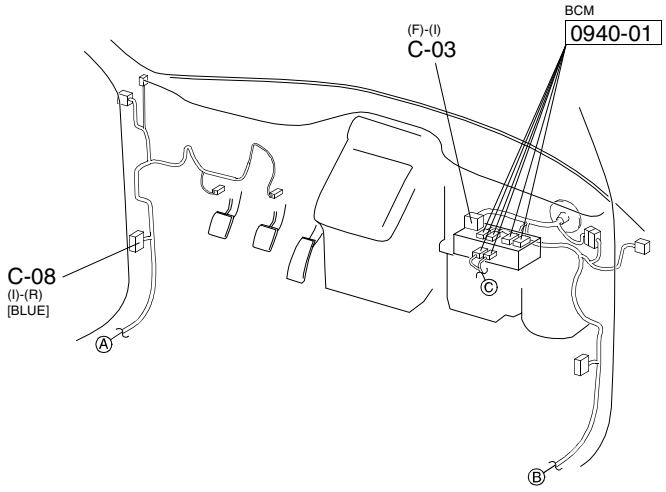

BCM
0940-01
(F)-(I)
C-03
C-08
(I)-(R)
[BLUE]
A
B
C

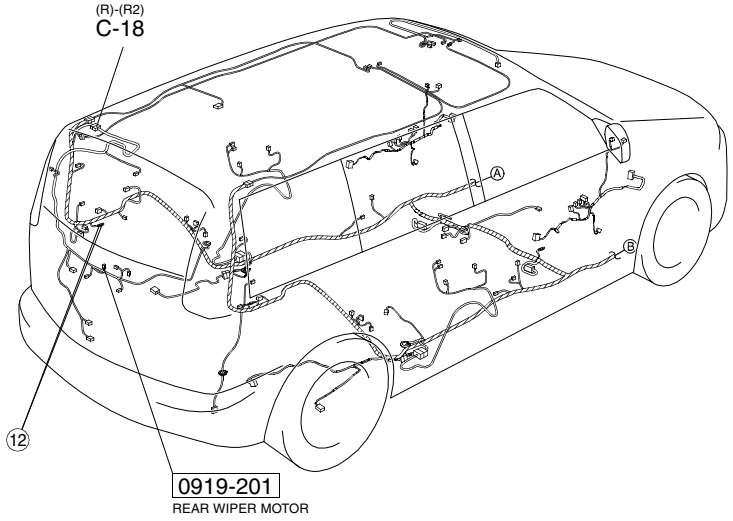
(R)-(R2)
C-18
12
0919-201
REAR WIPER MOTOR
A
B

HEADLIGHT CLEANER

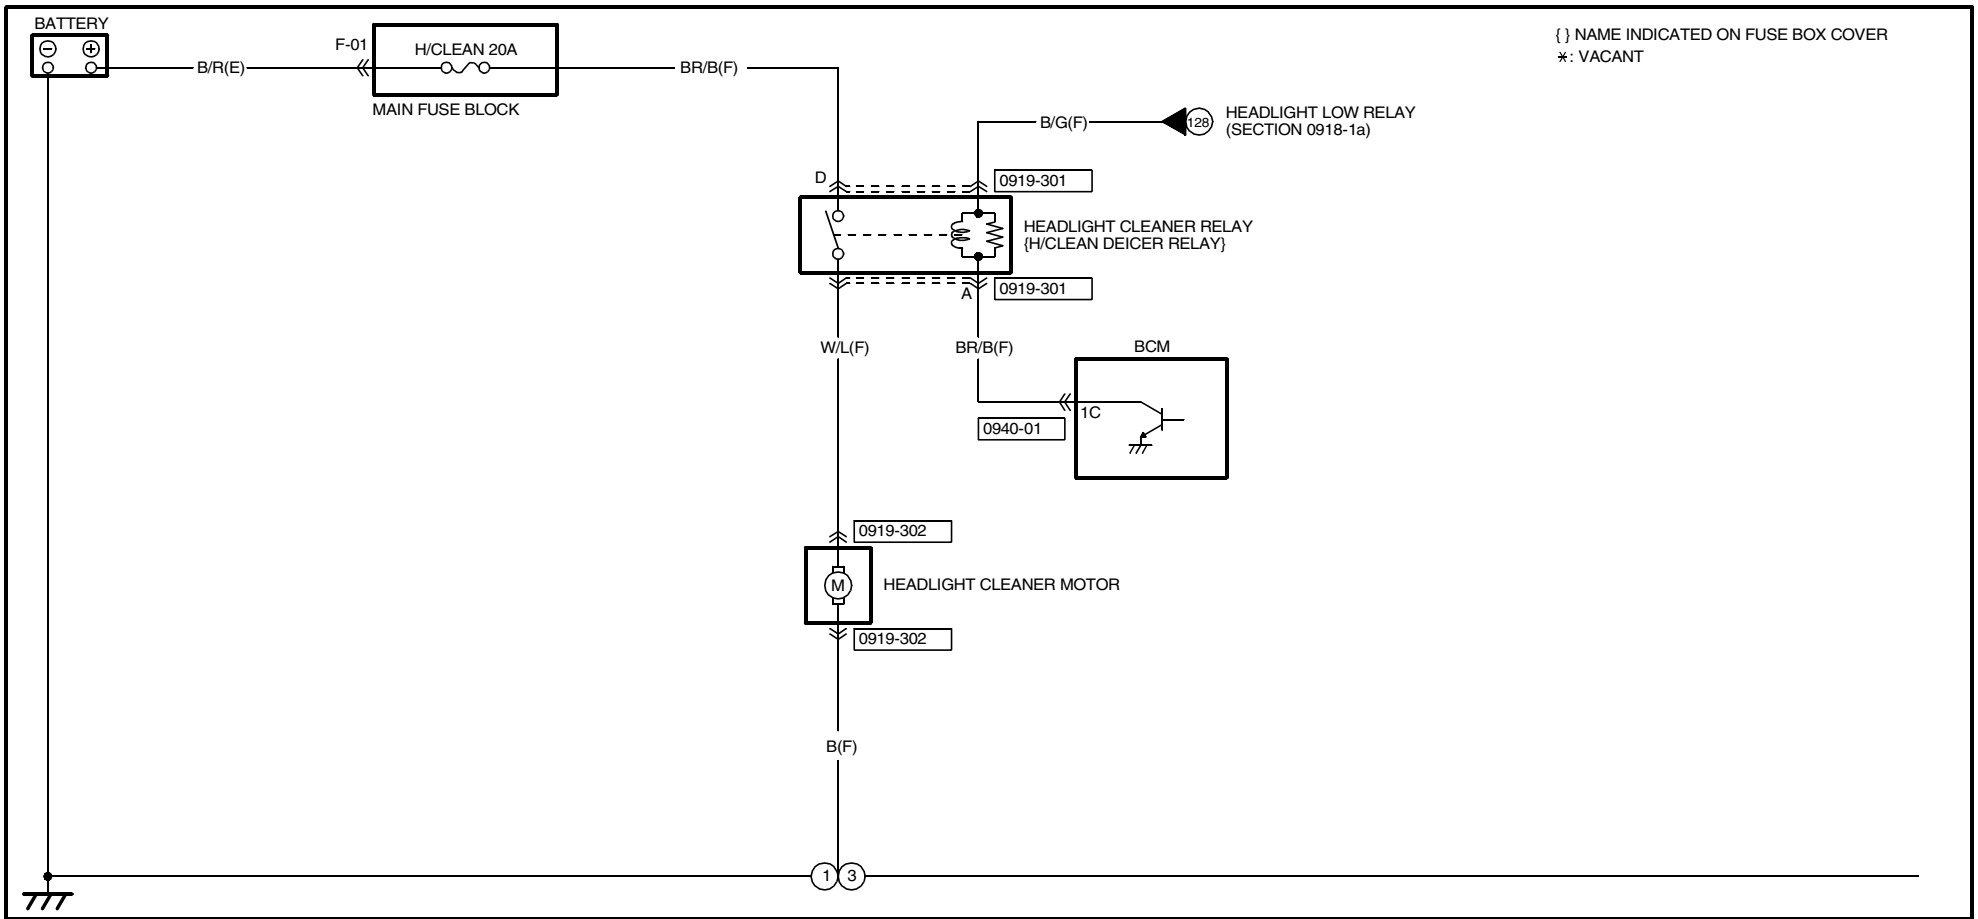


0919-301
HEADLIGHT CLEANER RELAY(F)





NOTE:SEEN FROM TERMINAL SIDE


0919-302
HEADLIGHT CLEANER MOTOR
(F)




0940-01
BCM

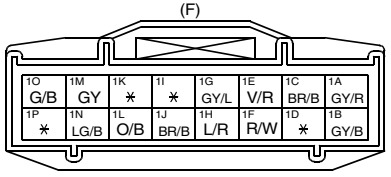

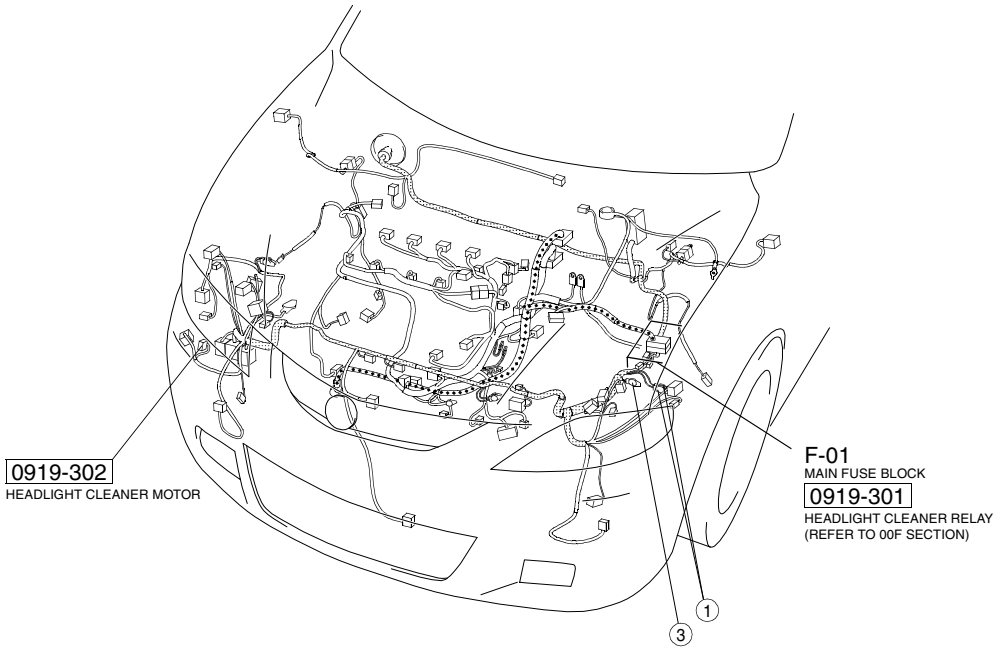

0919-302
HEADLIGHT CLEANER MOTOR
F-01
MAIN FUSE BLOCK
0919-301
HEADLIGHT CLEANER RELAY
(REFER TO 00F SECTION)
1
3

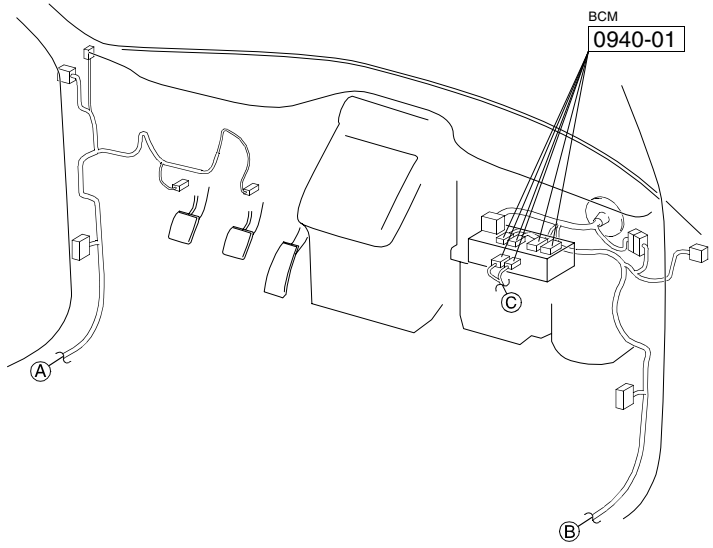

BCM
0940-01
A
B
C


ACCESSORY SOCKET/CIGARETTE LIGHTER

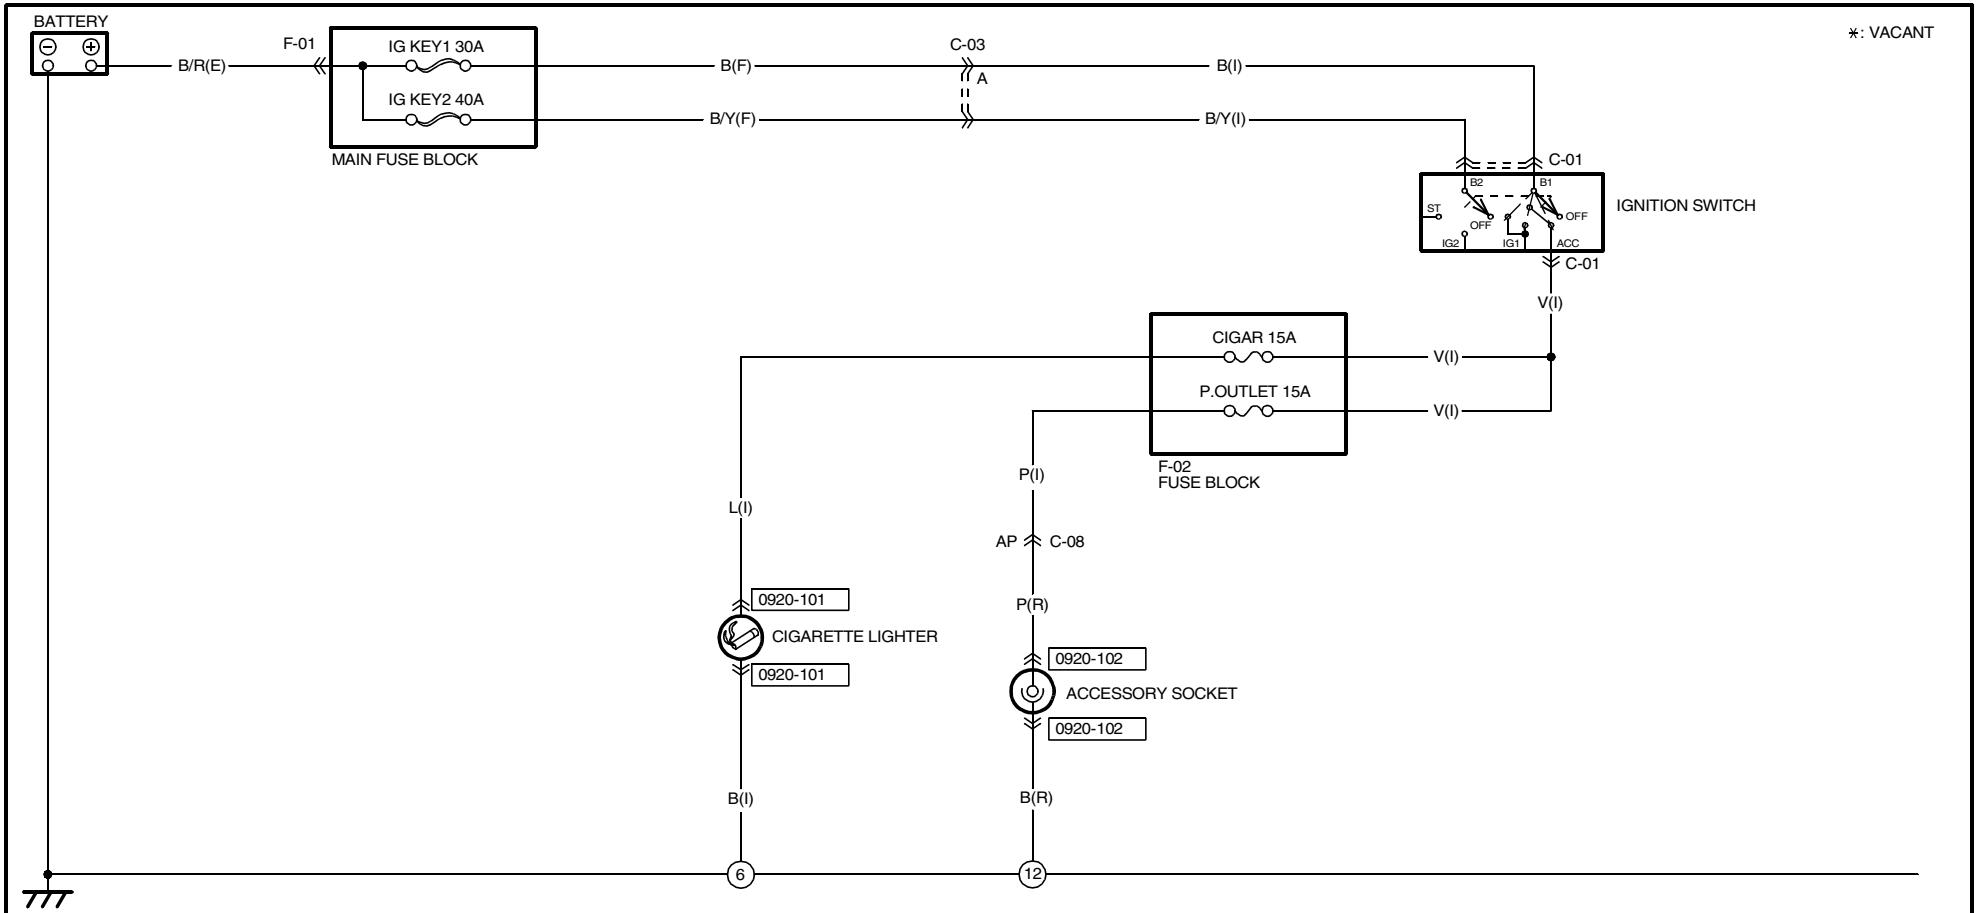


0920-101 CIGARETTE LIGHTER(I)	0920-102 ACCESSORY SOCKET(R)					
L ＊ B	P ＊ B					

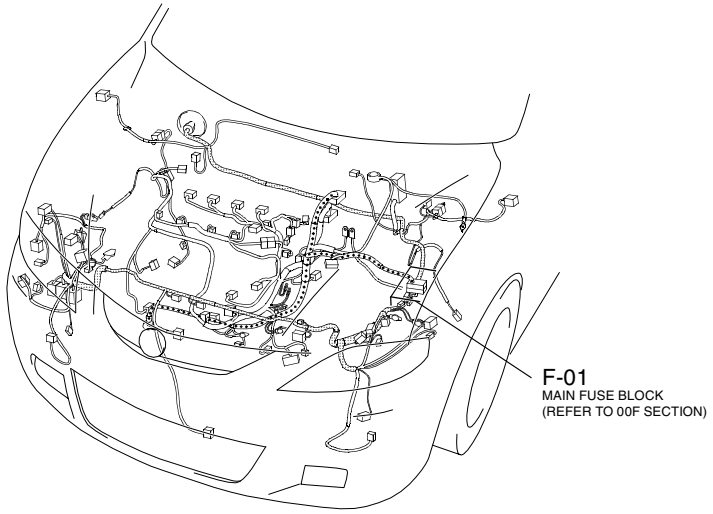

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

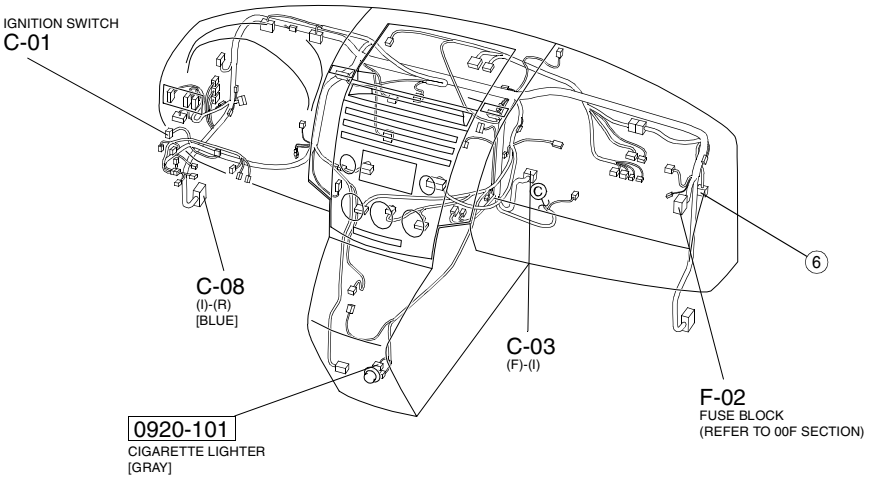
IGNITION SWITCH
C-01
C-08
(I)-(R)
[BLUE]
C-03
(F)-(I)
6
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
0920-101
CIGARETTE LIGHTER
[GRAY]

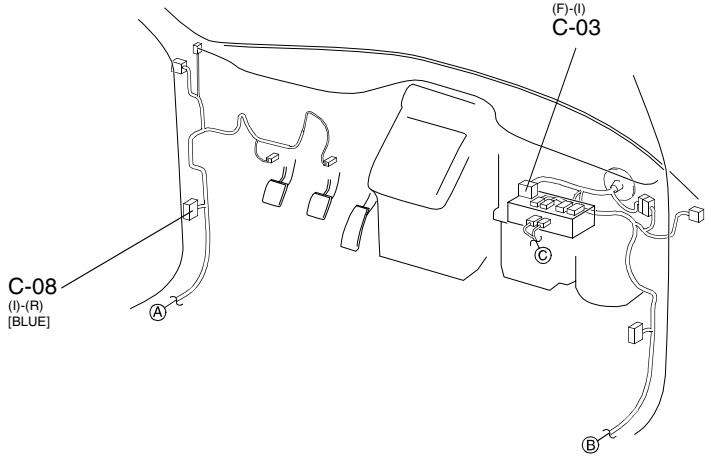

(F)-(I)
C-03
C-08
(I)-(R)
[BLUE]
A
B
C

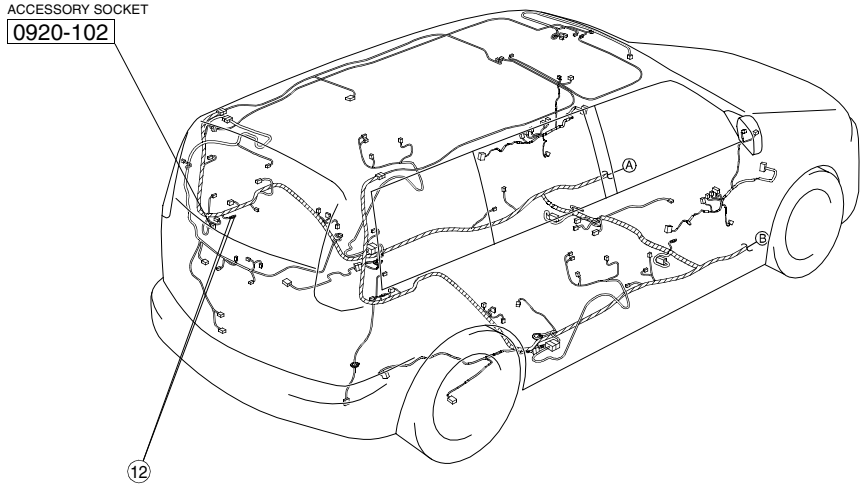
ACCESSORY SOCKET
0920-102
12
A
B

AUDIO SYSTEM ~~(WITHOUT CAR-NAVIGATION SYSTEM)~~

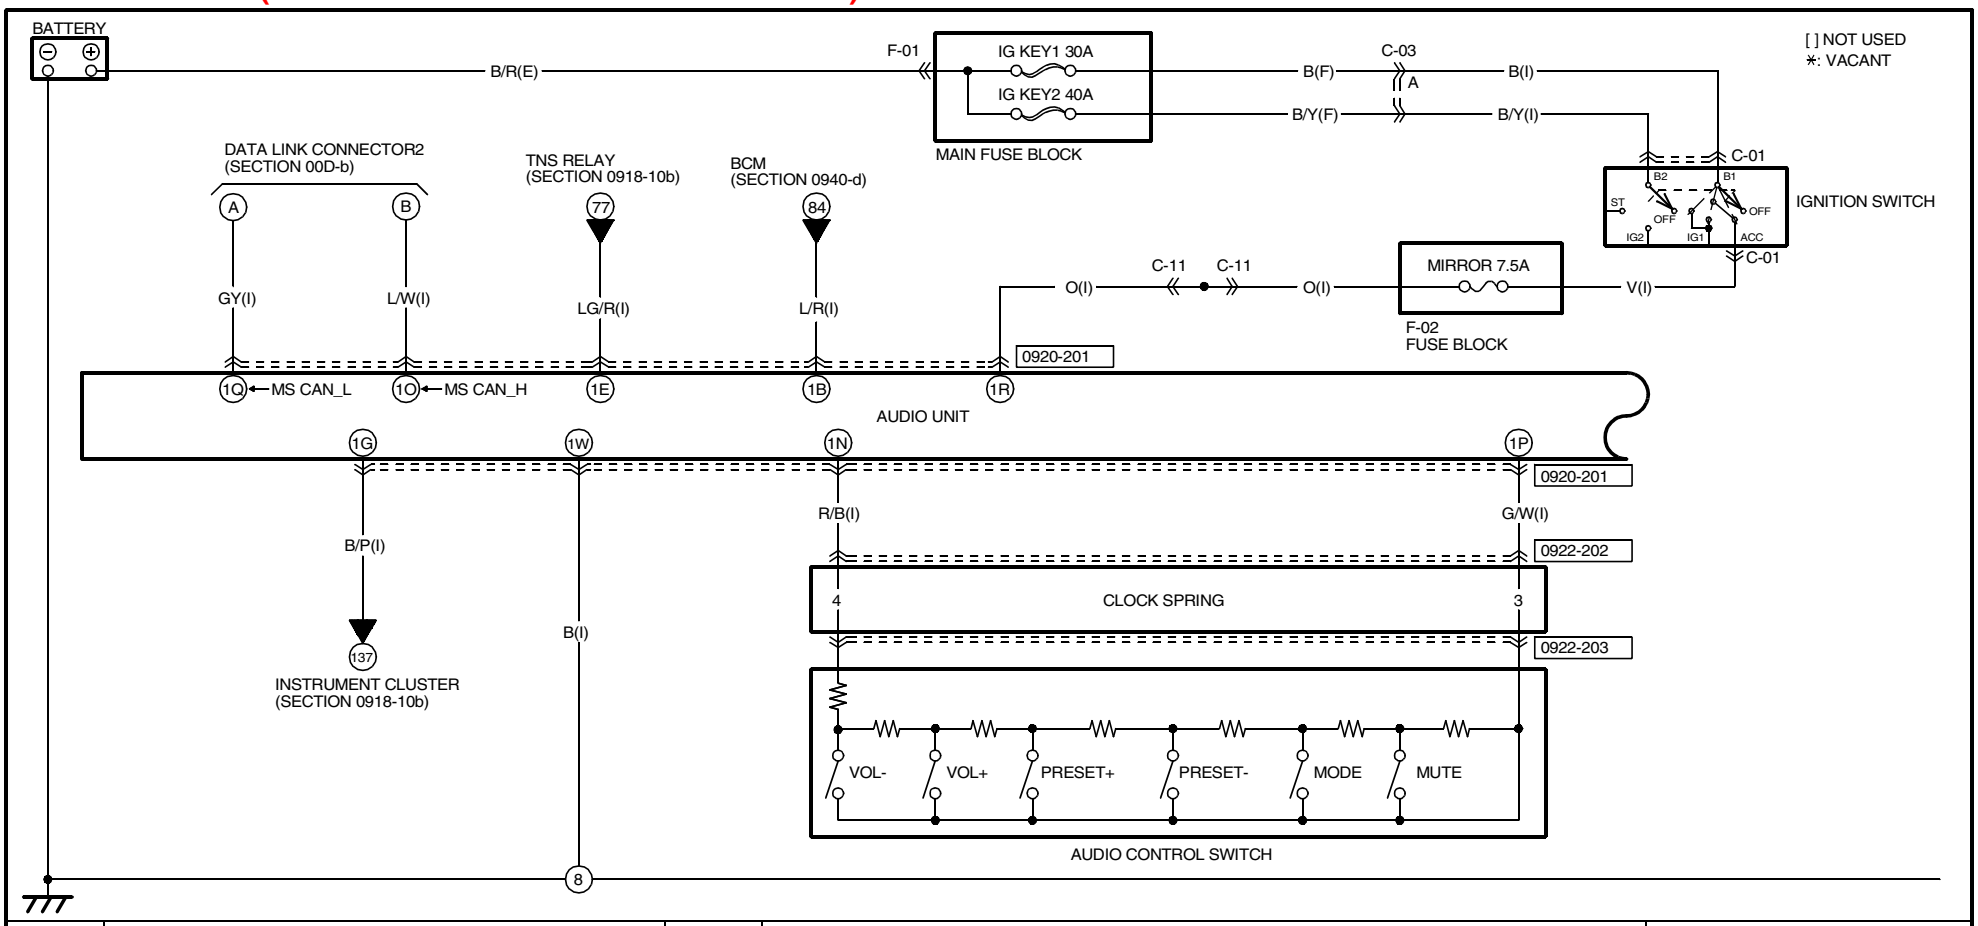


0920-201
AUDIO UNIT(I)

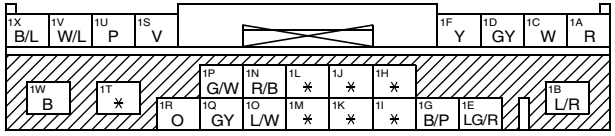


0922-202
INSTRUMENT PANEL(I)-CLOCK SPRING

(I)

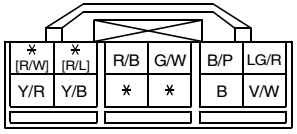


(CLOCK SPRING)





TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.


0922-203
AUDIO CONTROL SWITCH(CLOCK SPRING)




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

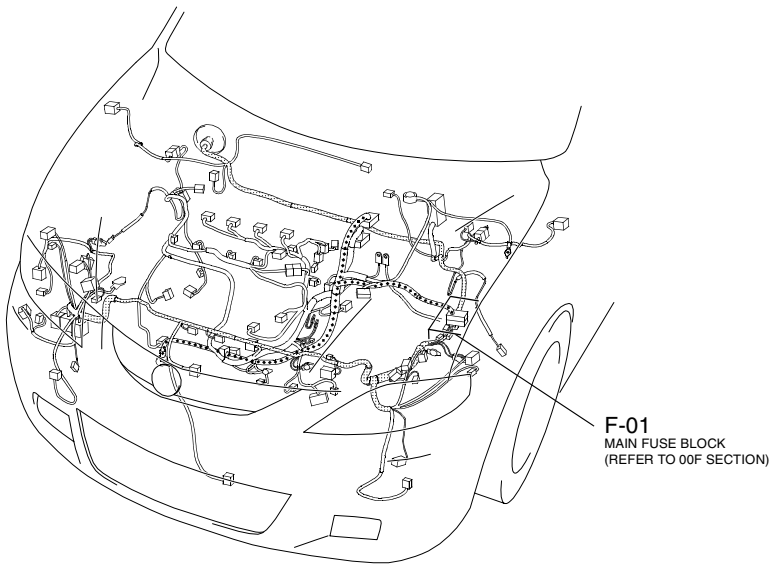
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

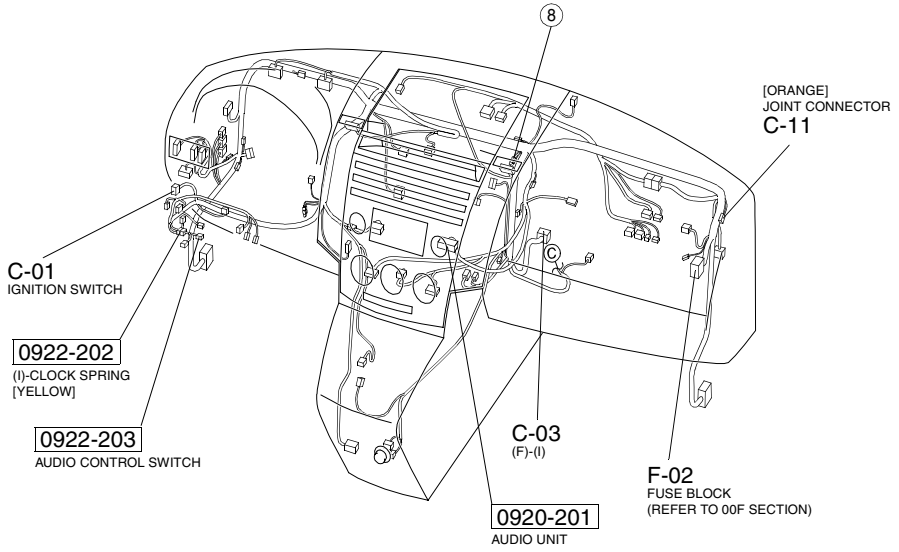
8
[ORANGE]
JOINT CONNECTOR
C-11
C-01
IGNITION SWITCH
0922-202
(I)-CLOCK SPRING
[YELLOW]
0922-203
AUDIO CONTROL SWITCH
C
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)
0920-201
AUDIO UNIT

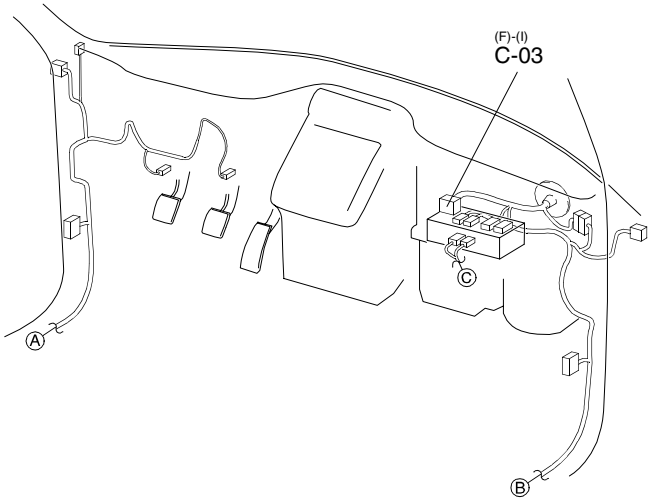
(F)-(I)
C-03
C
A
B

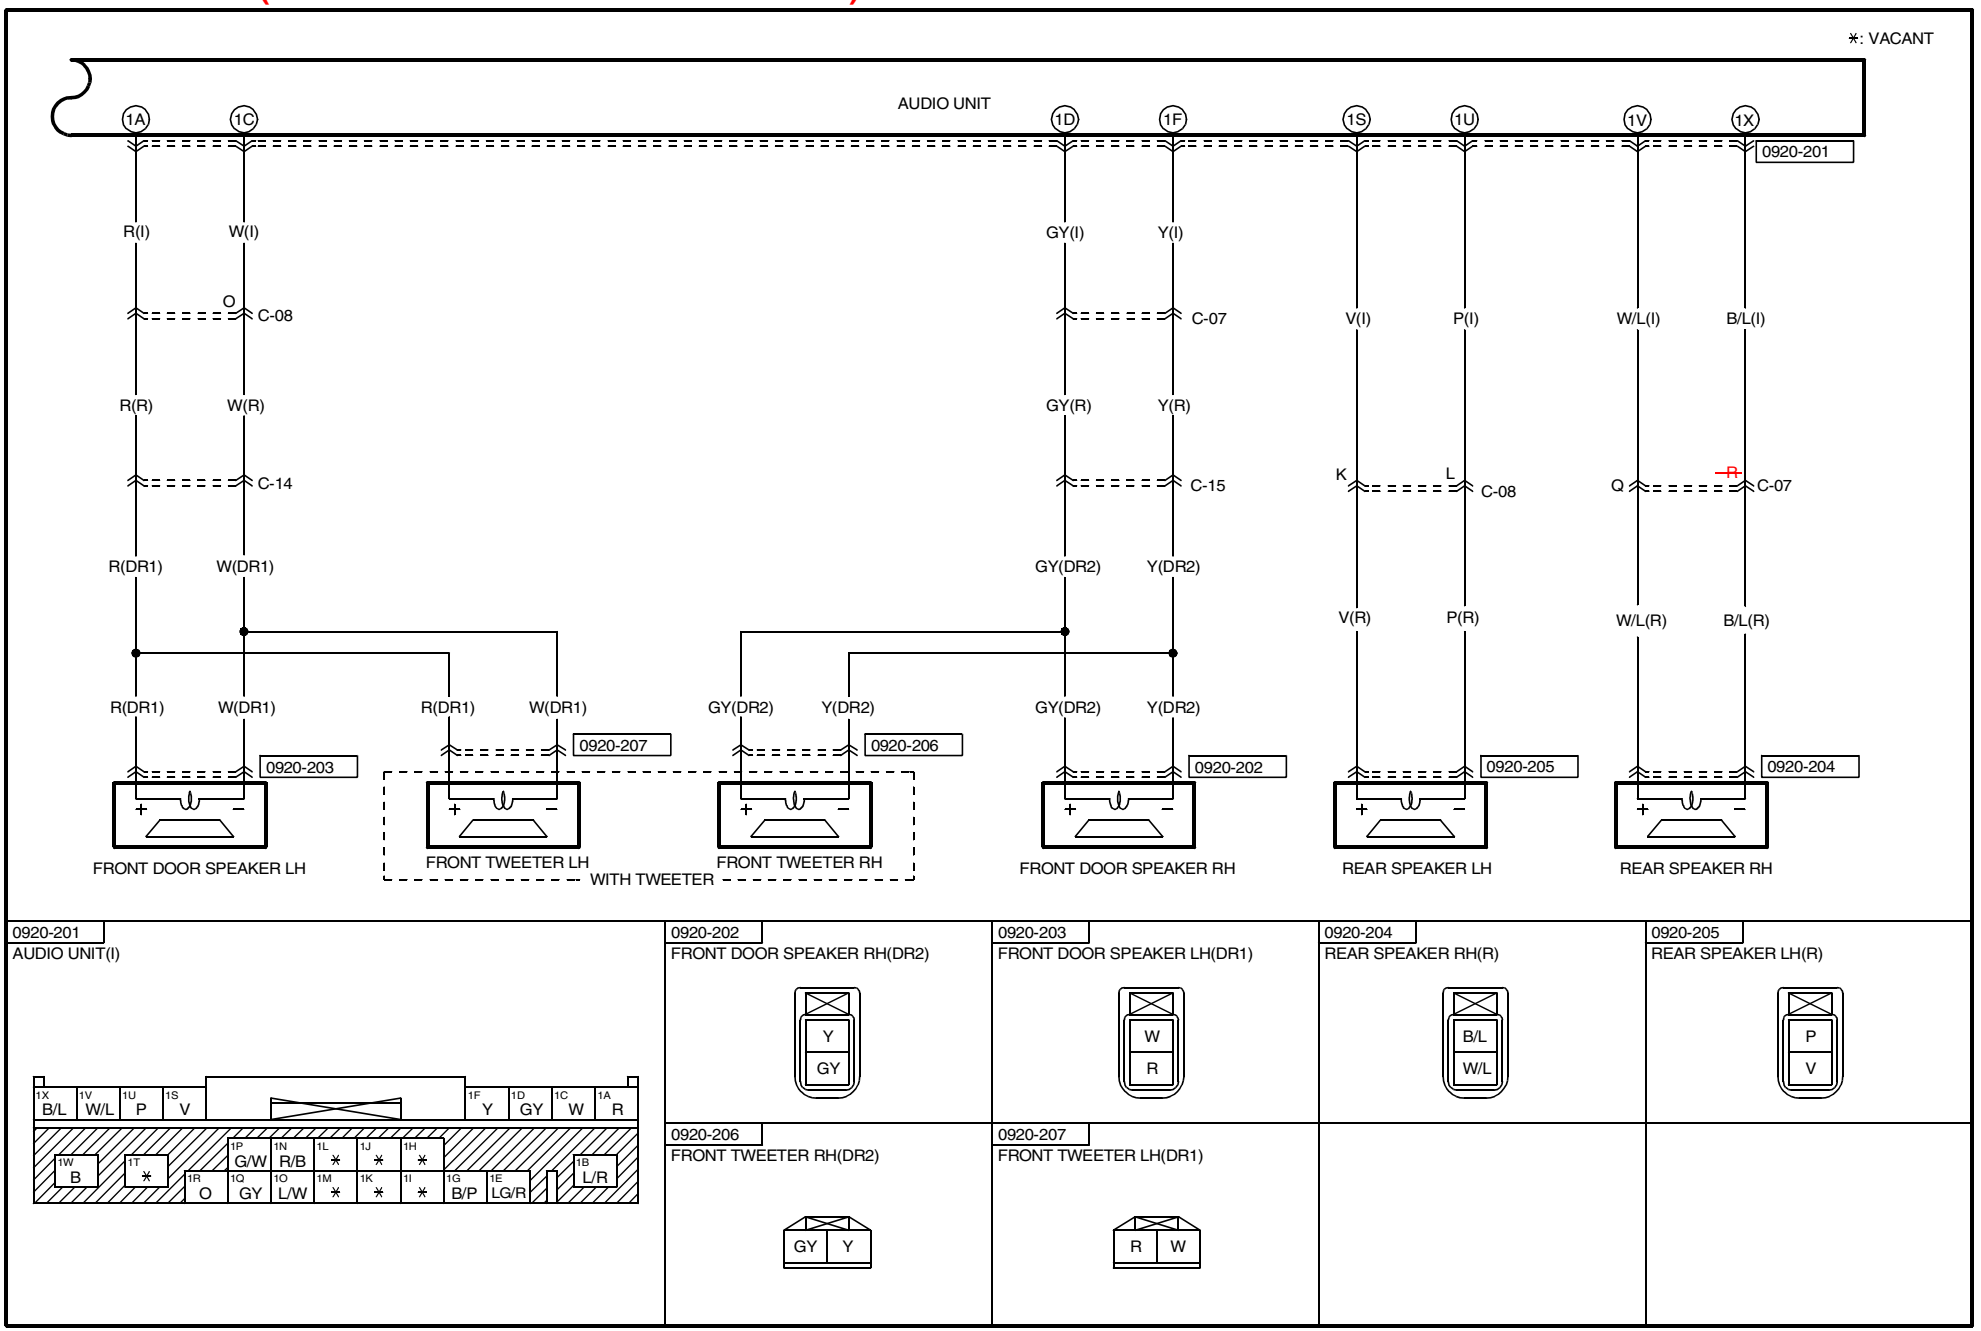

0920-201
AUDIO UNIT(I)

0920-202
FRONT DOOR SPEAKER RH(DR2)


0920-203
FRONT DOOR SPEAKER LH(DR1)

0920-204
REAR SPEAKER RH(R)


0920-205
REAR SPEAKER LH(R)

0920-206
FRONT TWEETER RH(DR2)


0920-207
FRONT TWEETER LH(DR1)

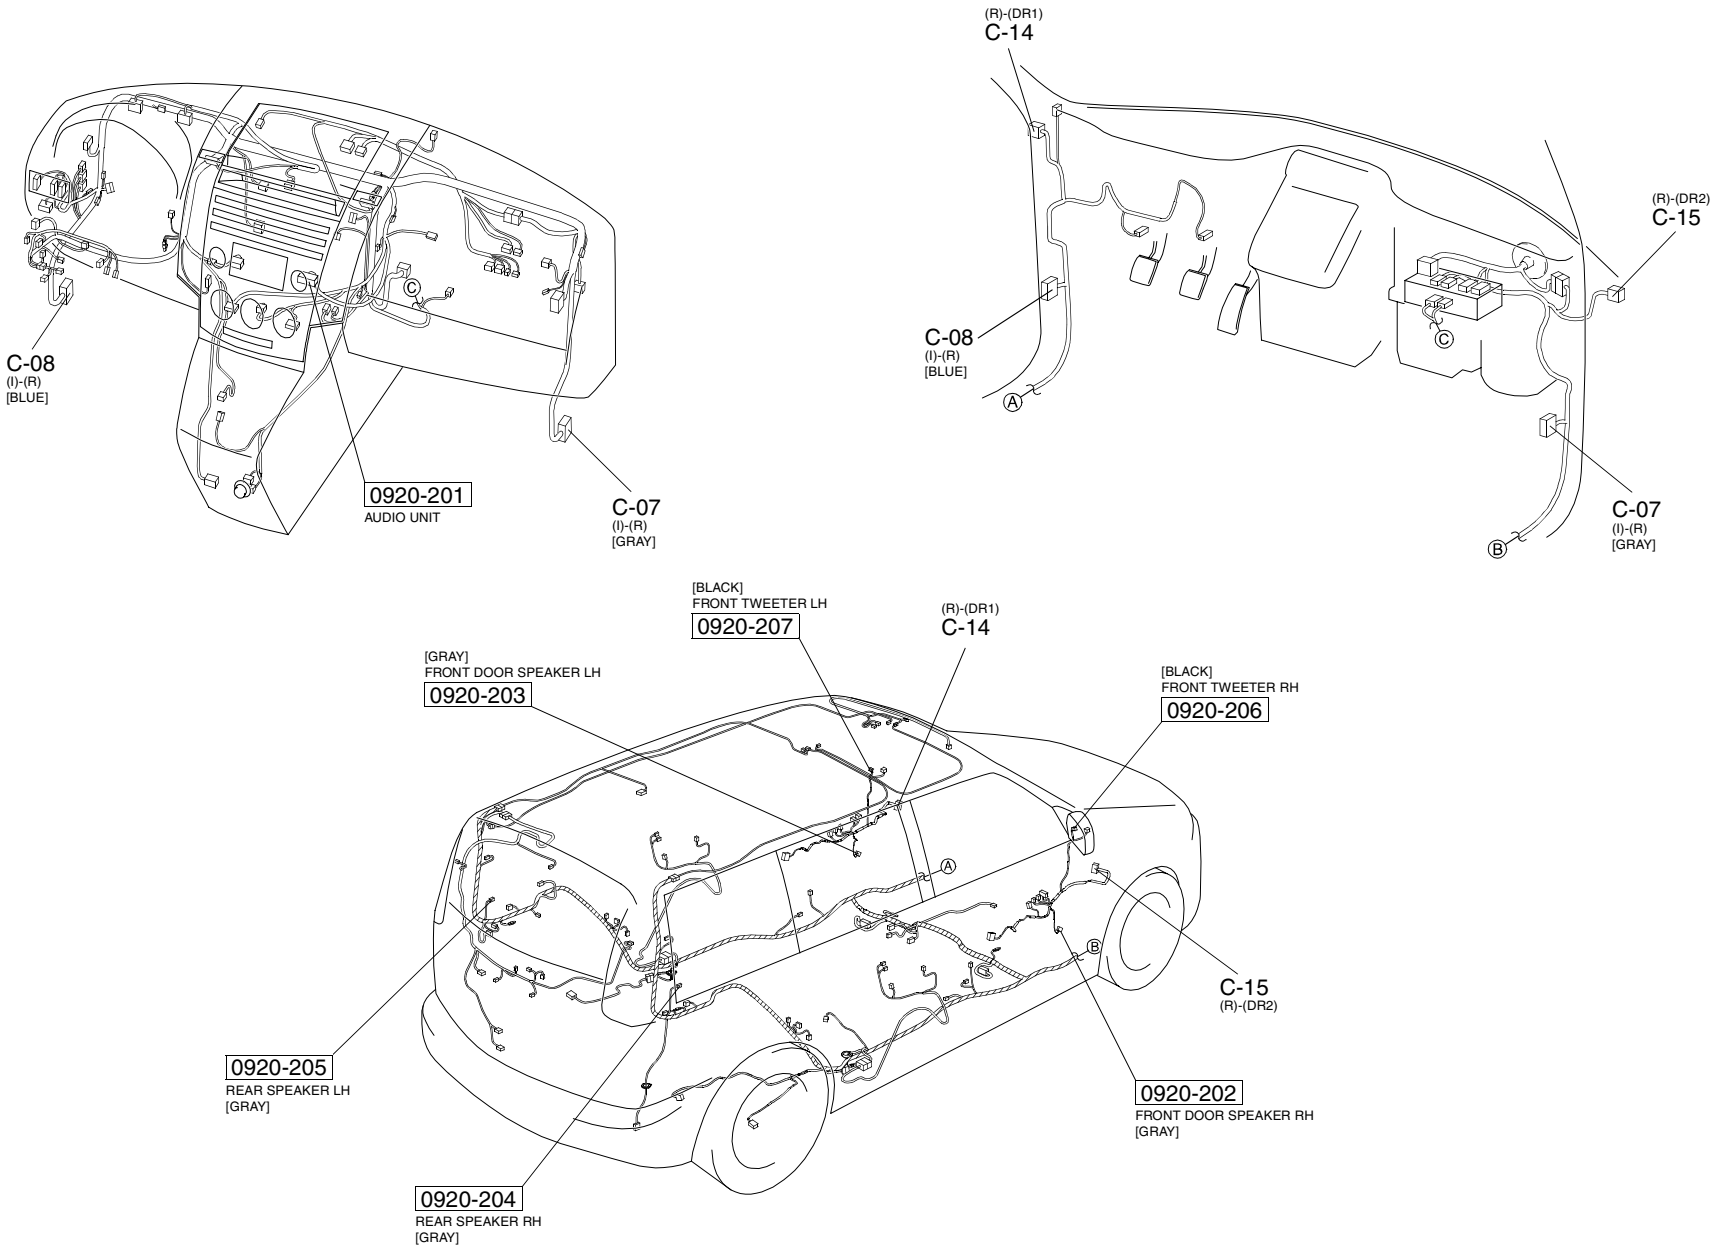
C-08
(I)-(R)
[BLUE]
0920-201
AUDIO UNIT
C-07
(I)-(R)
[GRAY]
(R)-(DR1)
C-14
C-08
(I)-(R)
[BLUE]
(R)-(DR2)
C-15
C-07
(I)-(R)
[GRAY]
[BLACK]
FRONT TWEETER LH
0920-207
(R)-(DR1)
C-14
[GRAY]
FRONT DOOR SPEAKER LH
0920-203
[BLACK]
FRONT TWEETER RH
0920-206
C-15
(R)-(DR2)
0920-205
REAR SPEAKER LH
[GRAY]
0920-202
FRONT DOOR SPEAKER RH
[GRAY]
0920-204
REAR SPEAKER RH
[GRAY]


AUDIO SYSTEM (WITH CAR-NAVIGATION SYSTEM)

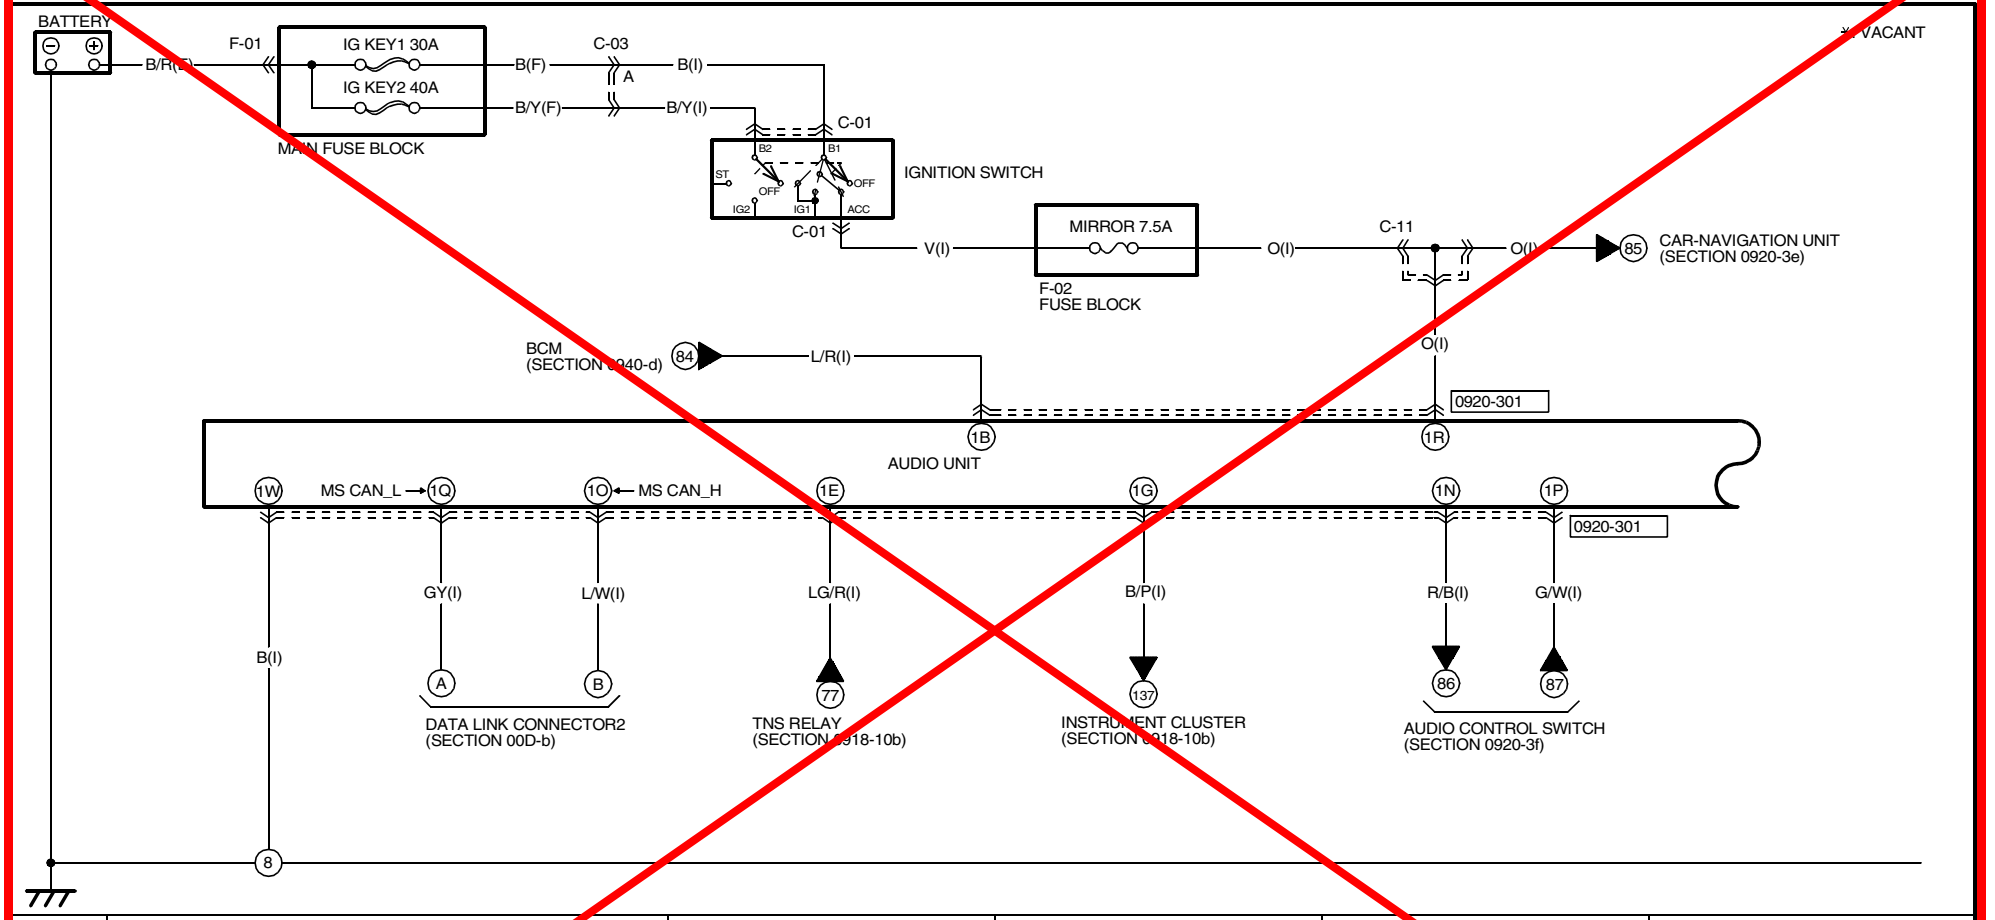


0920-301
AUDIO UNIT(I)

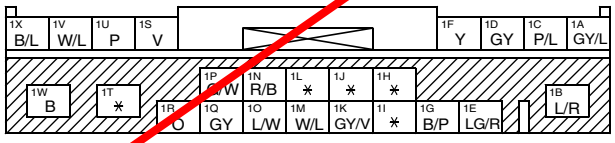


HARNESS SYMBOL : (F) (E) (R)

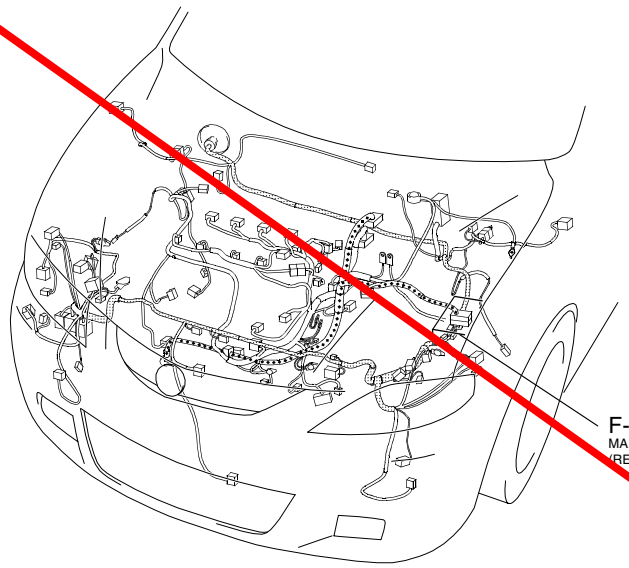


F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

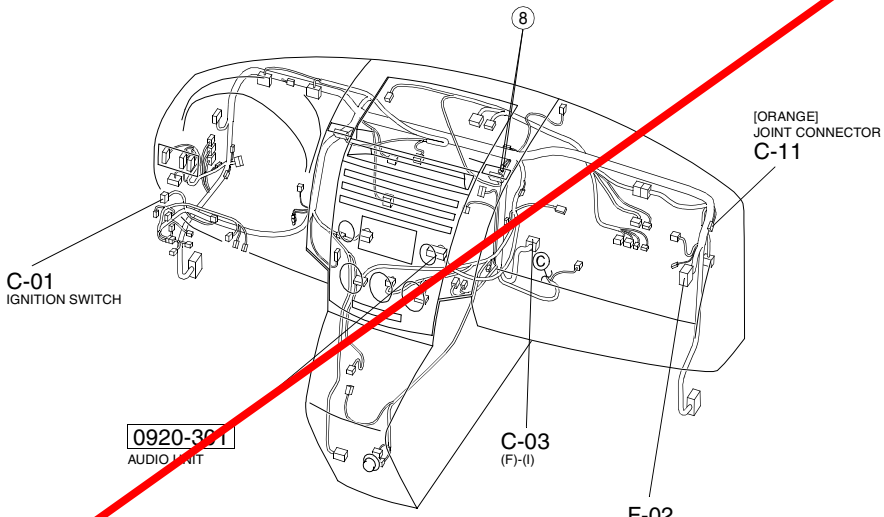

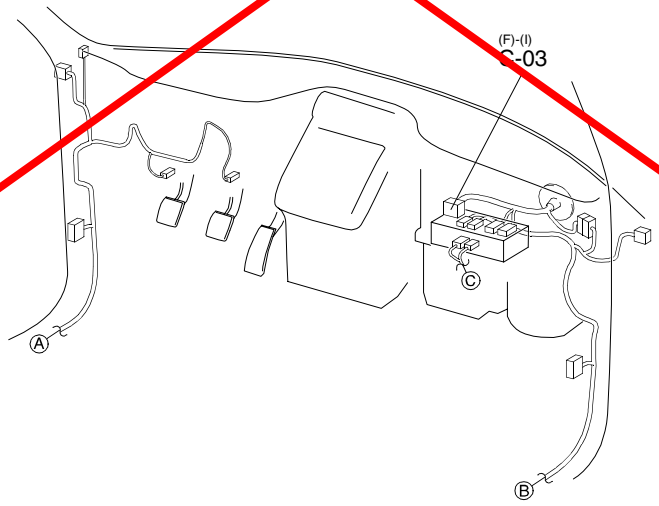


AUDIO SYSTEM (WITH CAR-NAVIGATION SYSTEM)


V: VACANT

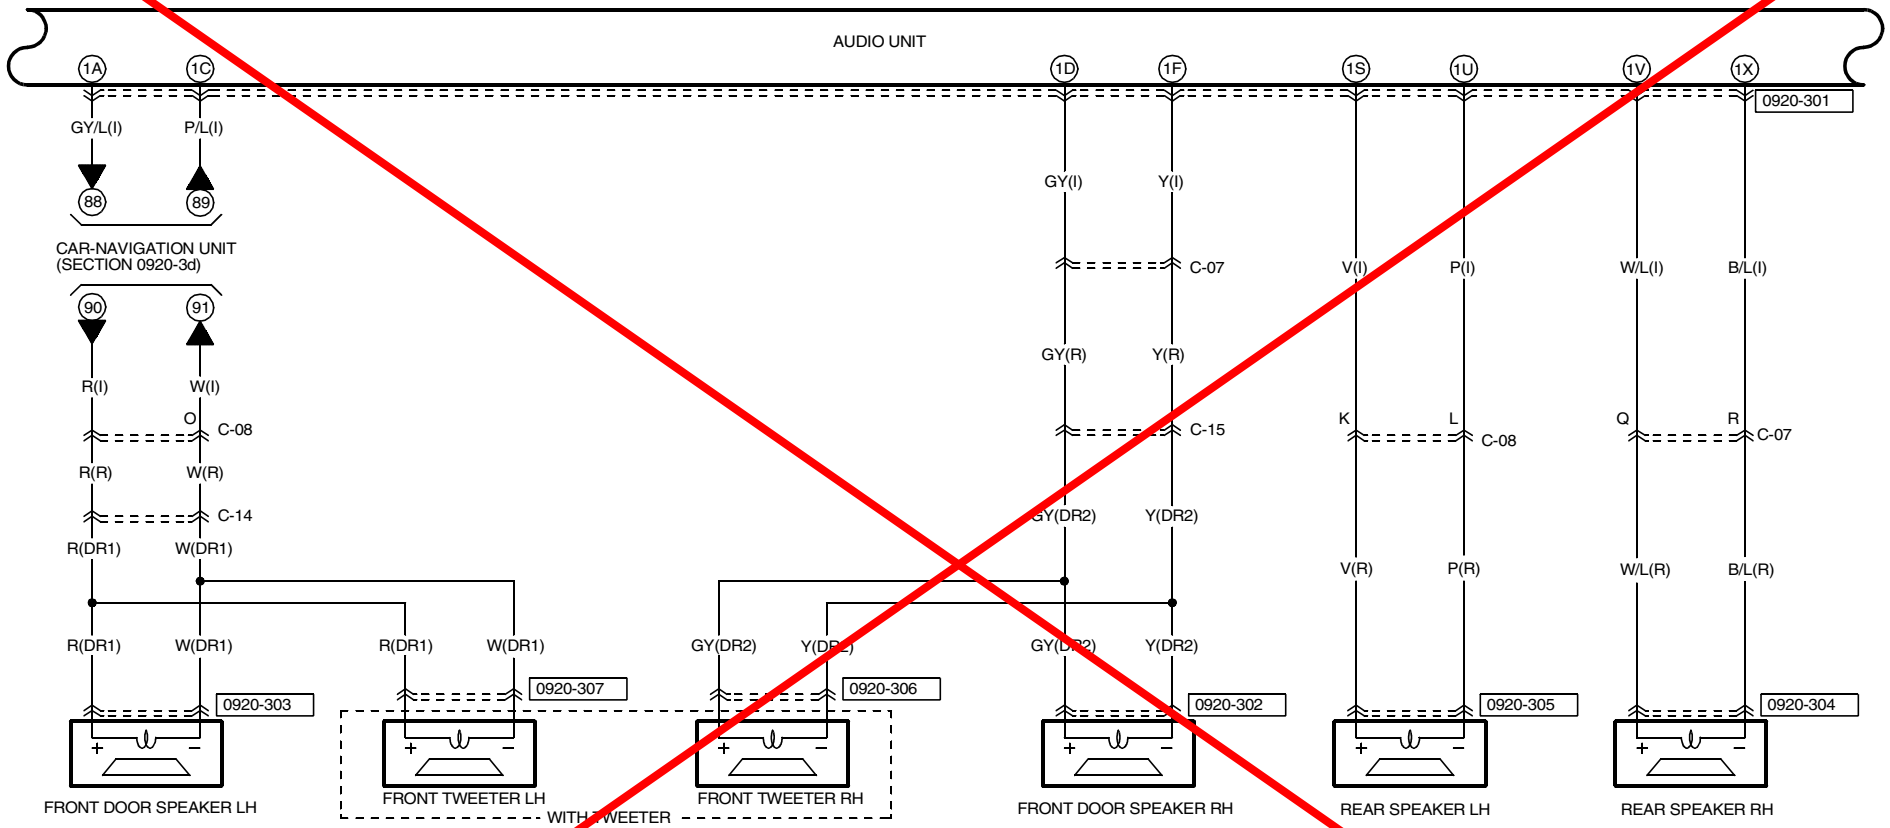


0920-301
AUDIO UNIT(I)

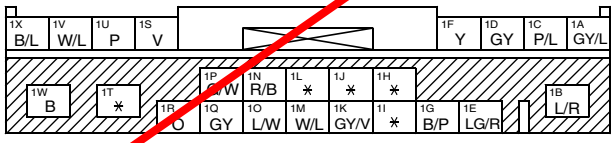


0920-302
FRONT DOOR SPEAKER RH(DR2)




0920-303
FRONT DOOR SPEAKER LH(DR1)



0920-304
REAR SPEAKER RH(R)



0920-305
REAR SPEAKER LH(R)




0920-306
FRONT TWEETER RH(DR2)




0920-307
FRONT TWEETER LH(DR1)

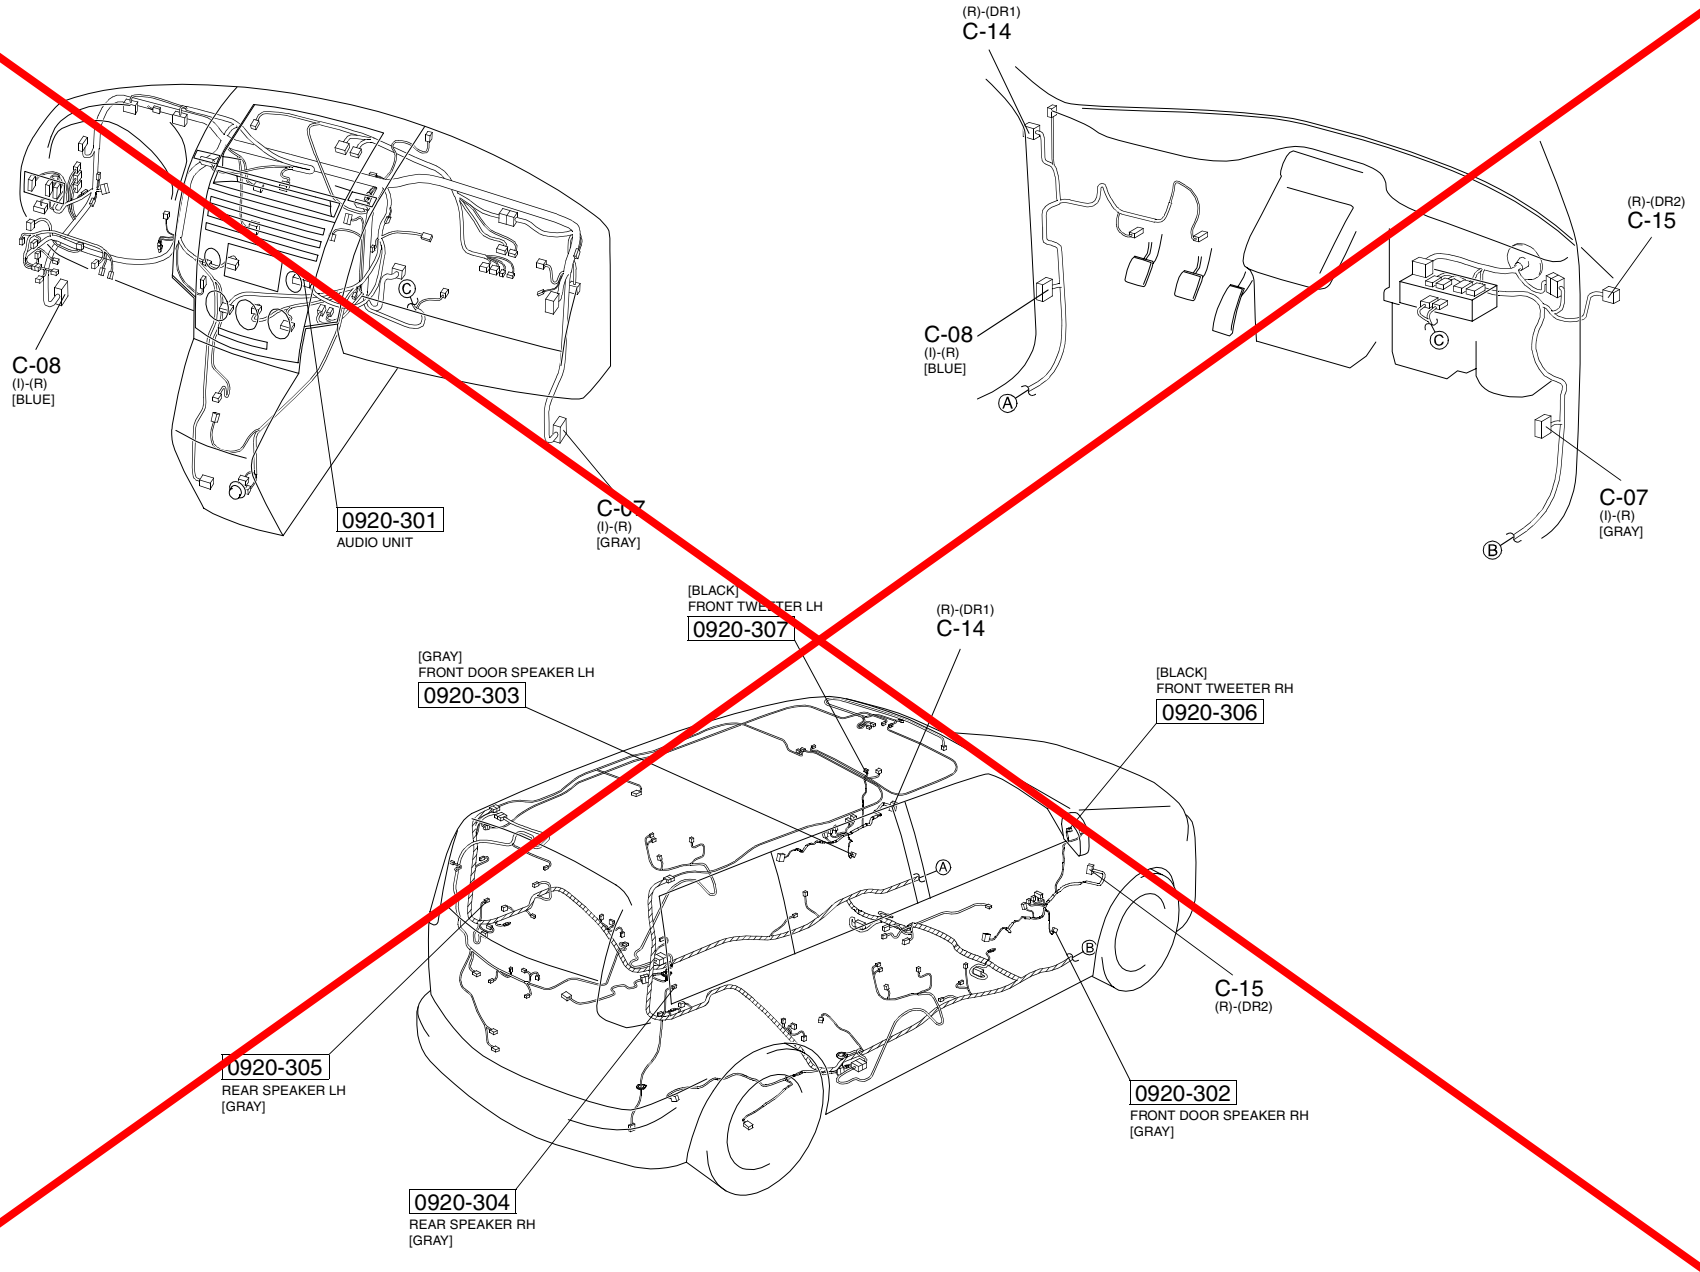



C-08
(I)-(R)
[BLUE]
0920-301
AUDIO UNIT
C-07
(I)-(R)
[GRAY]
(R)-(DR1)
C-14
C-08
(I)-(R)
[BLUE]
(R)-(DR2)
C-15
C-07
(I)-(R)
[GRAY]
[BLACK]
FRONT TWEETER LH
0920-307
(R)-(DR1)
C-14
[GRAY]
FRONT DOOR SPEAKER LH
0920-303
[BLACK]
FRONT TWEETER RH
0920-306
C-15
(R)-(DR2)
0920-305
REAR SPEAKER LH
[GRAY]
0920-302
FRONT DOOR SPEAKER RH
[GRAY]
0920-304
REAR SPEAKER RH
[GRAY]


AUDIO SYSTEM (WITH CAR-NAVIGATION SYSTEM)

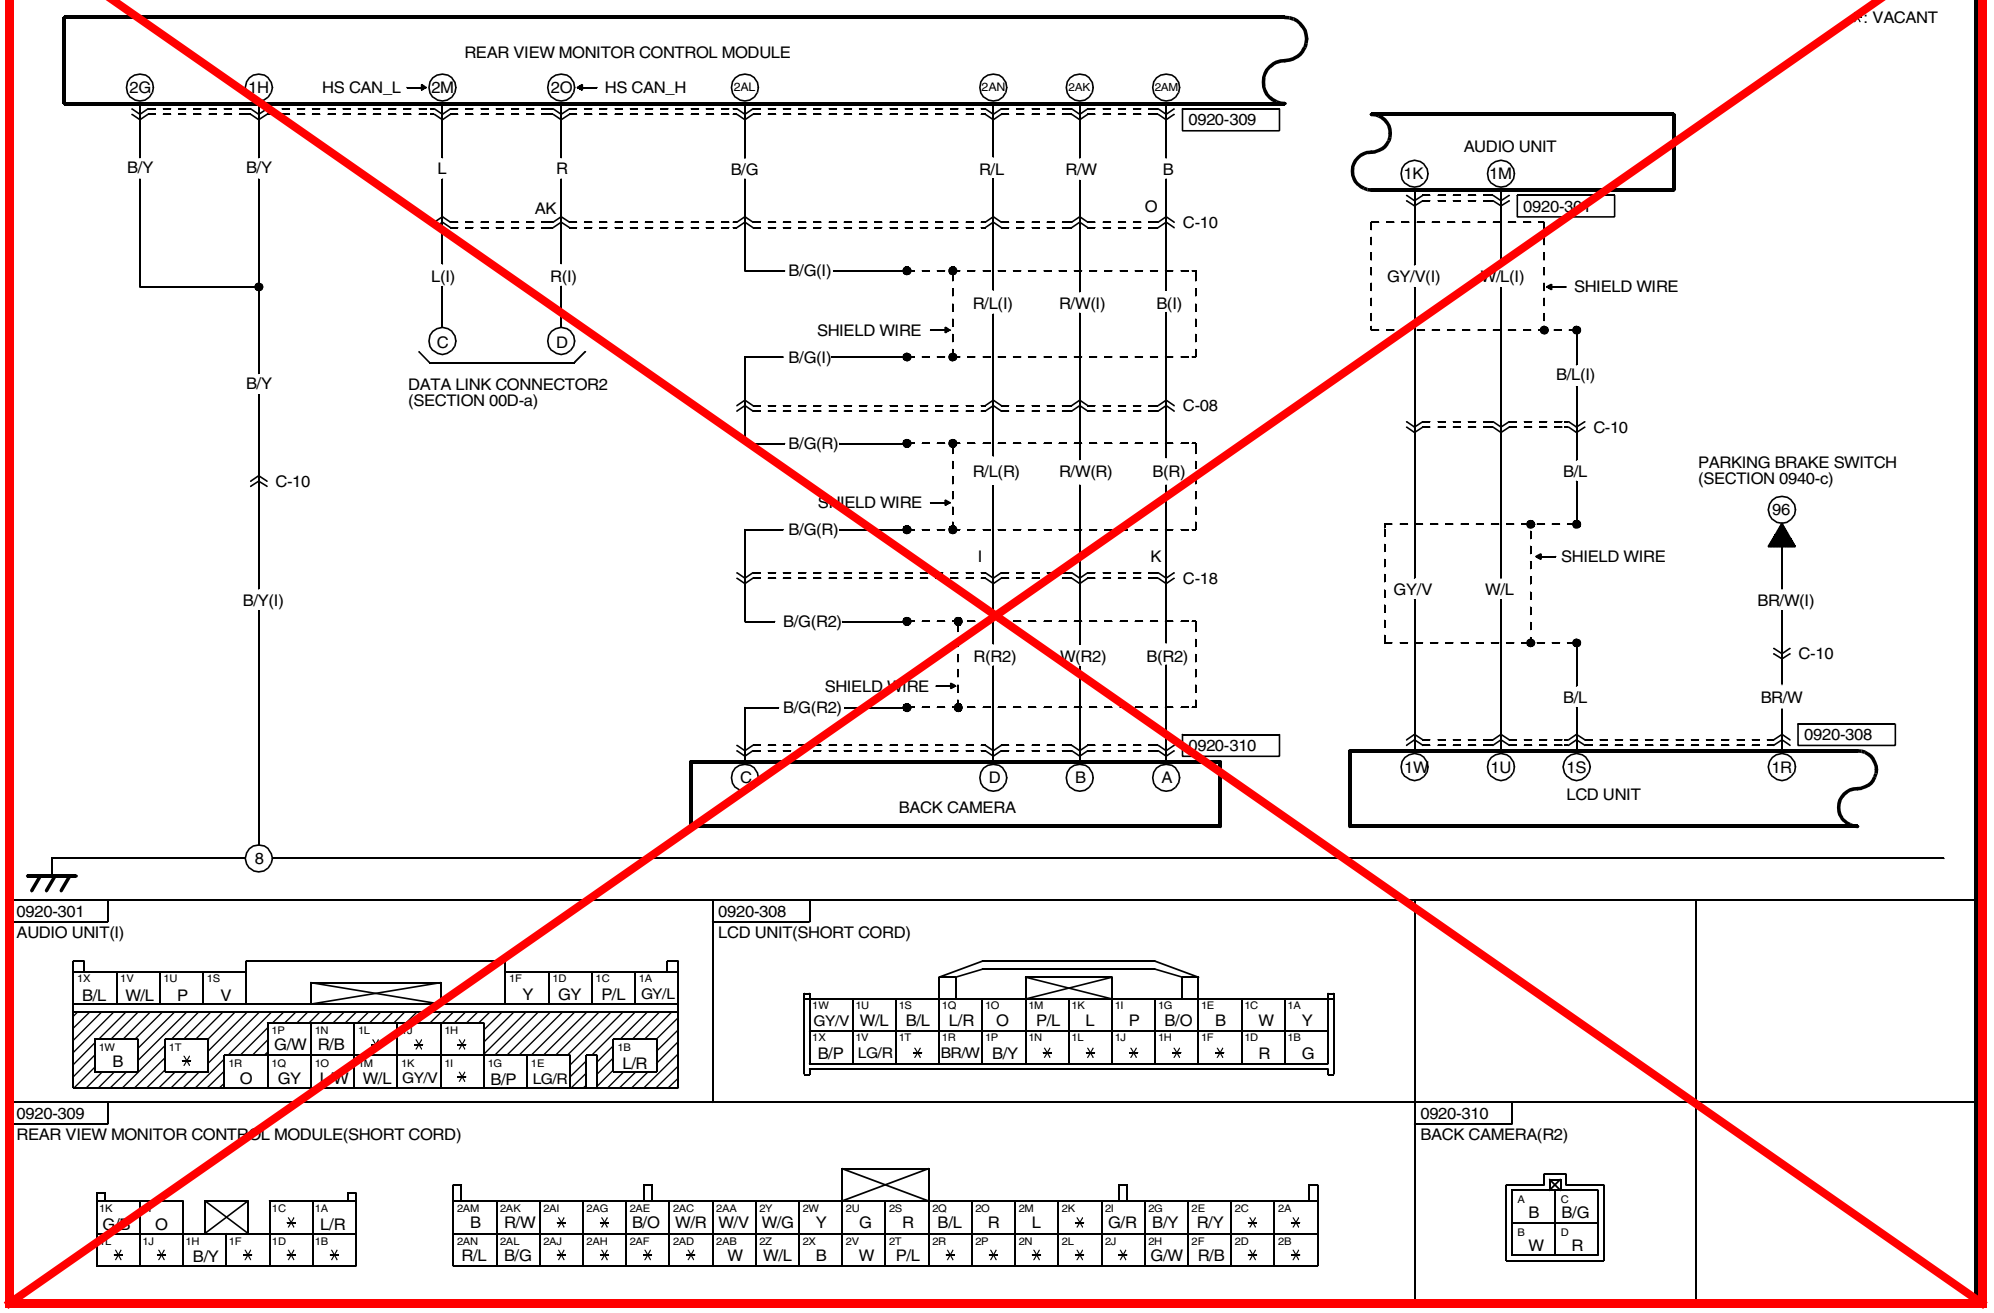

HARNESS SYMBOL : (F) (E) (R)

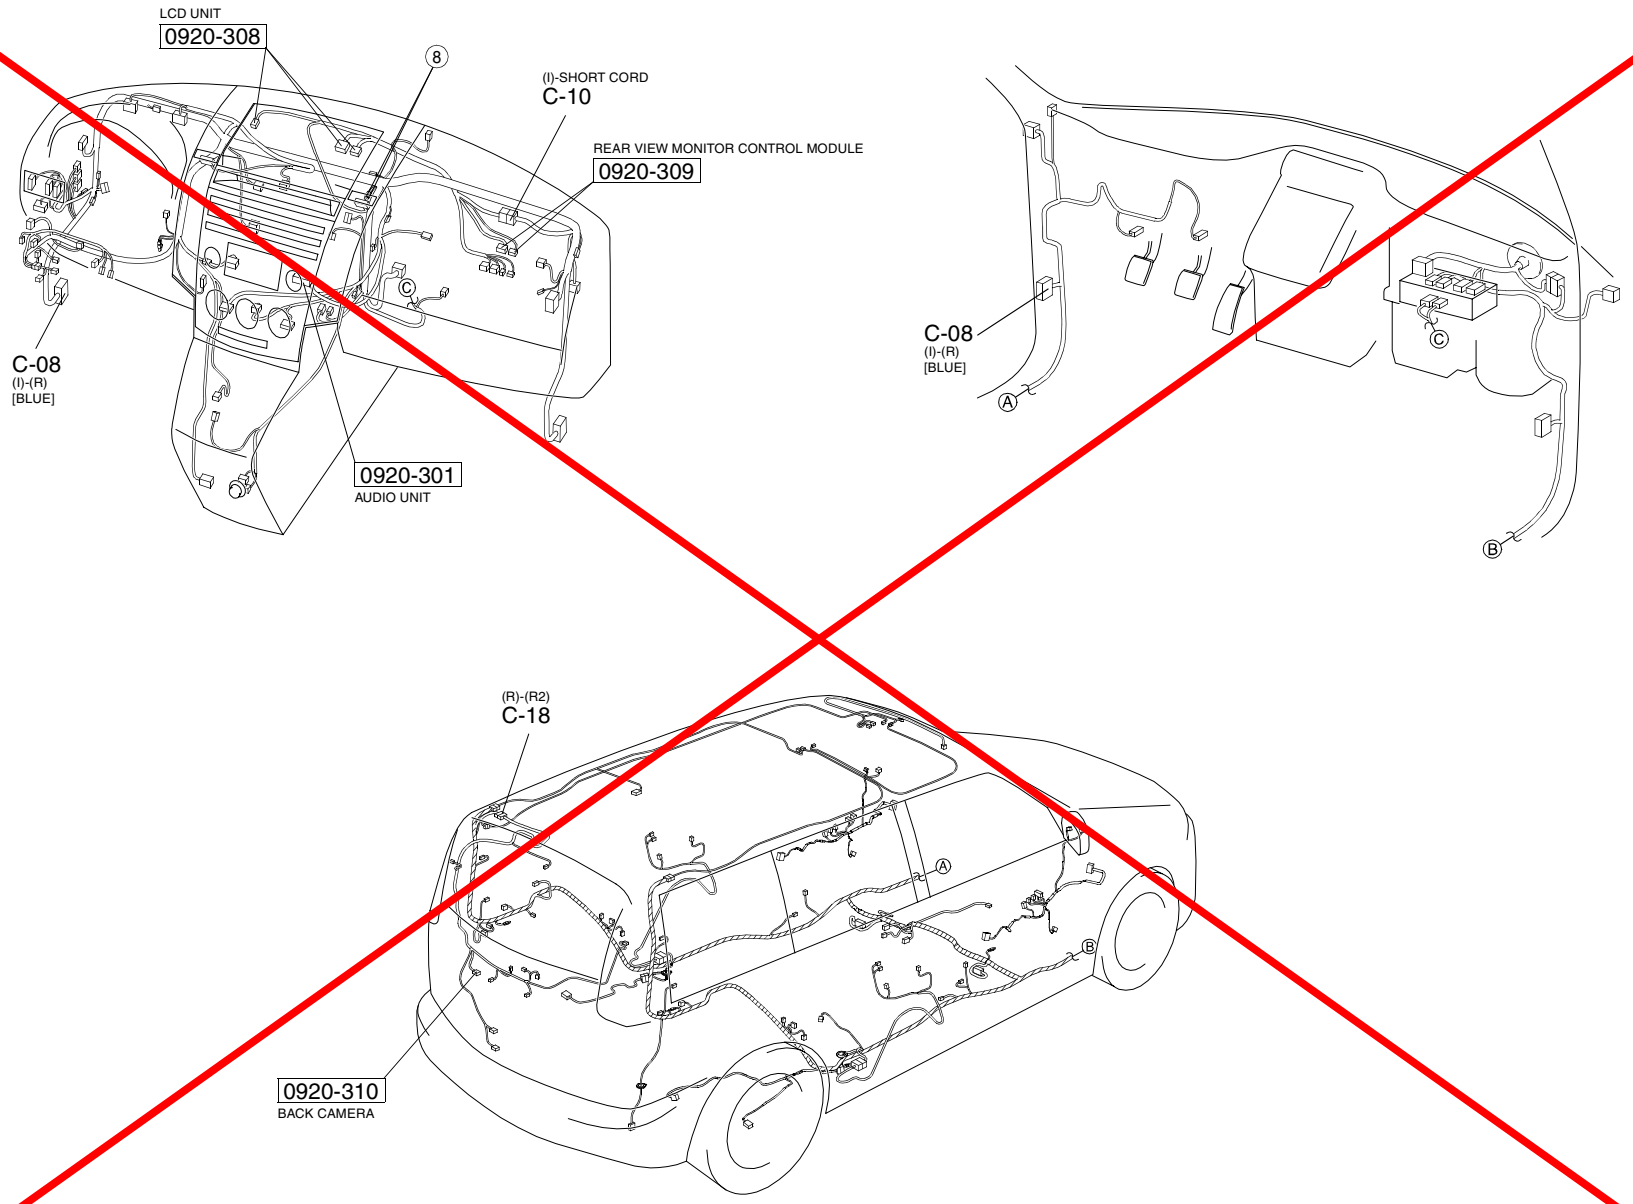

AUDIO SYSTEM (WITH CAR-NAVIGATION SYSTEM)

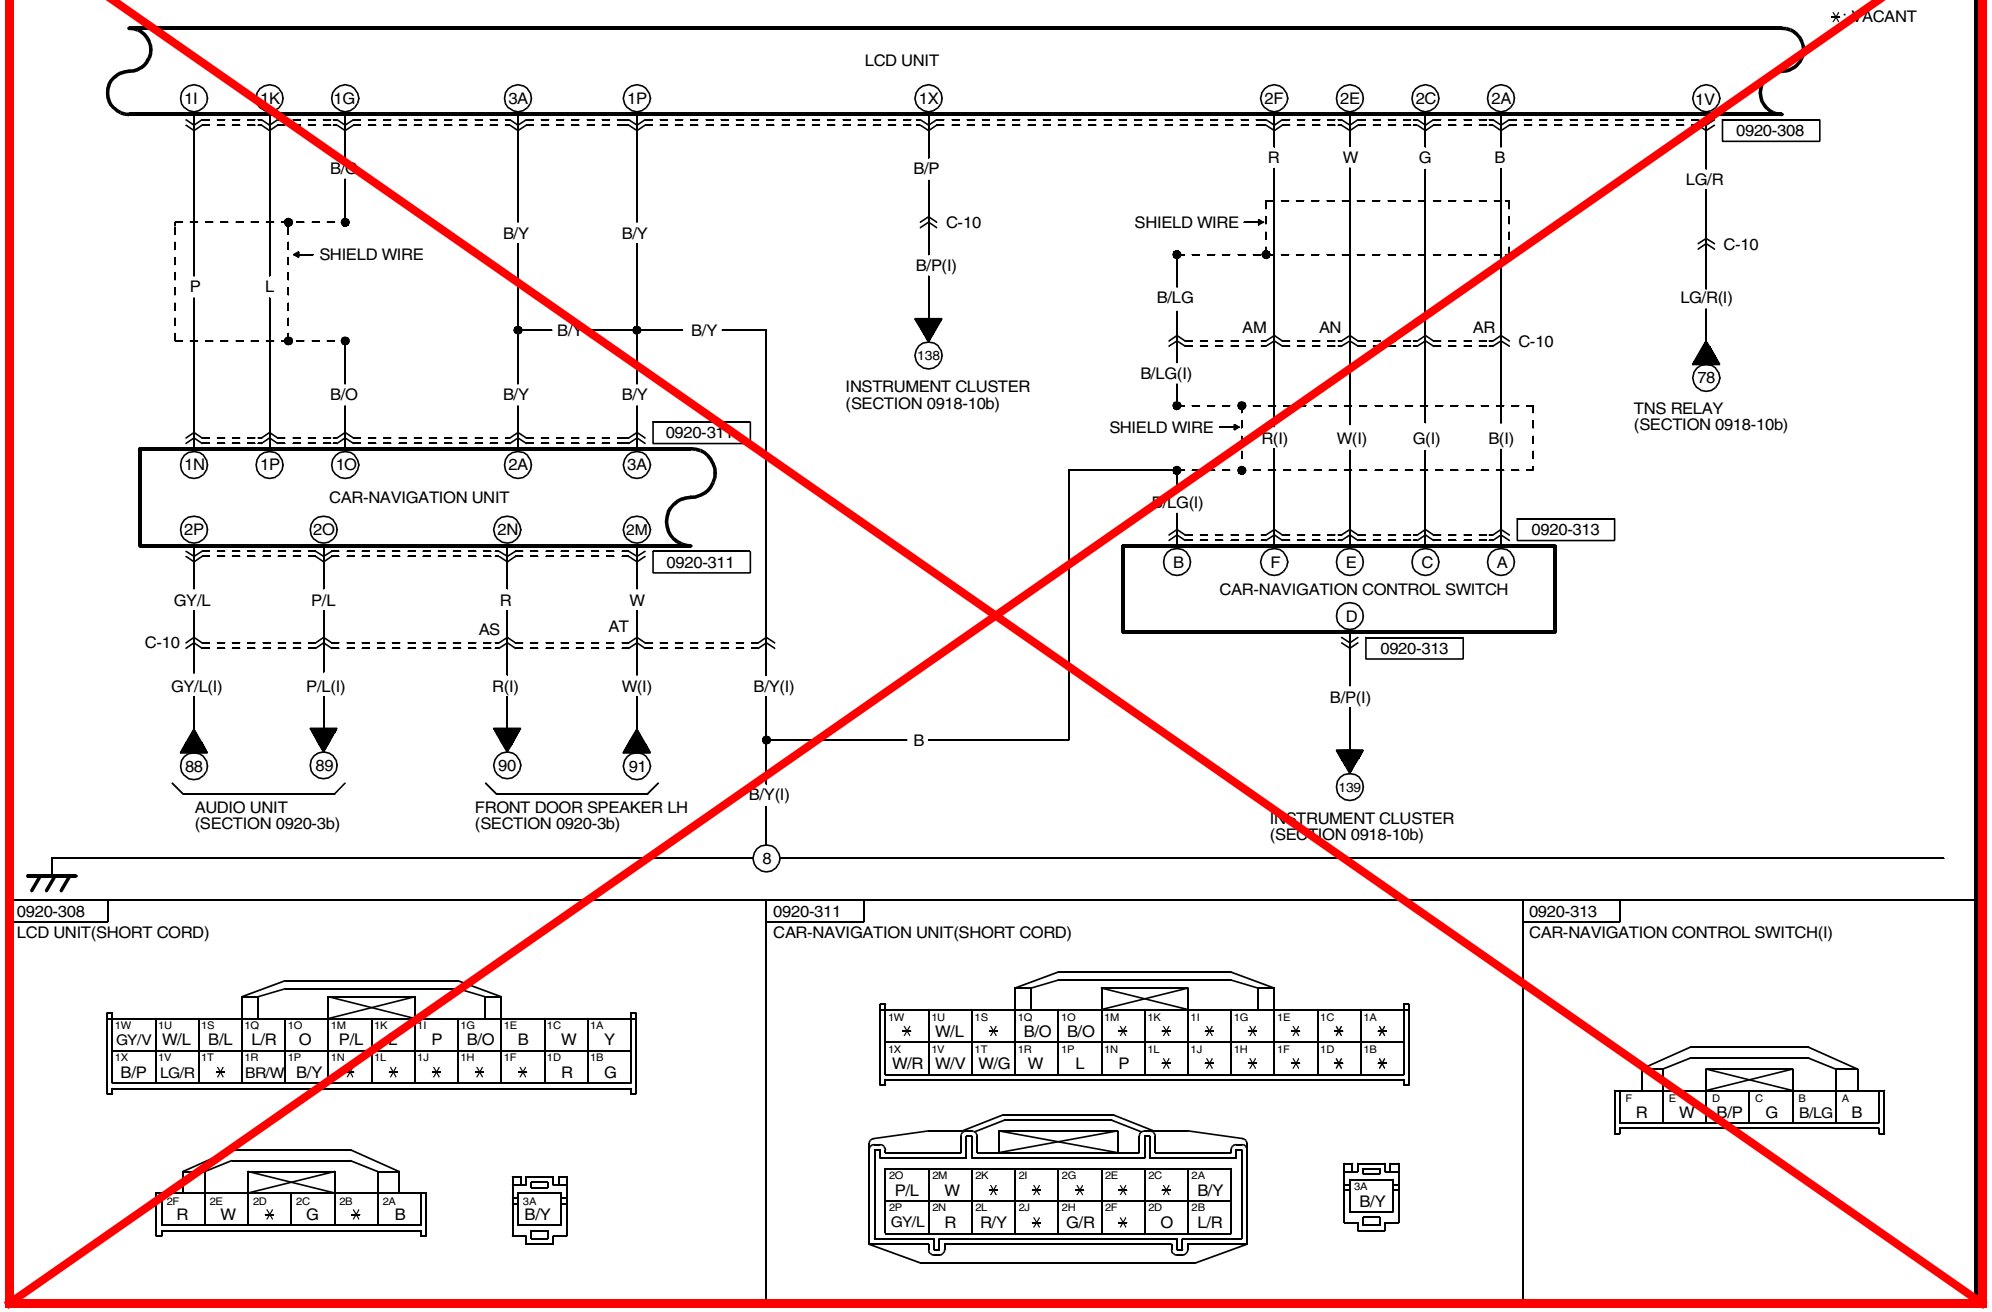


0920-308
LCD UNIT(SHORT CORD)

0920-311
CAR-NAVIGATION UNIT(SHORT CORD)


0920-313
CAR-NAVIGATION CONTROL SWITCH(I)

HARNESS SYMBOL : (F) (E) (R)

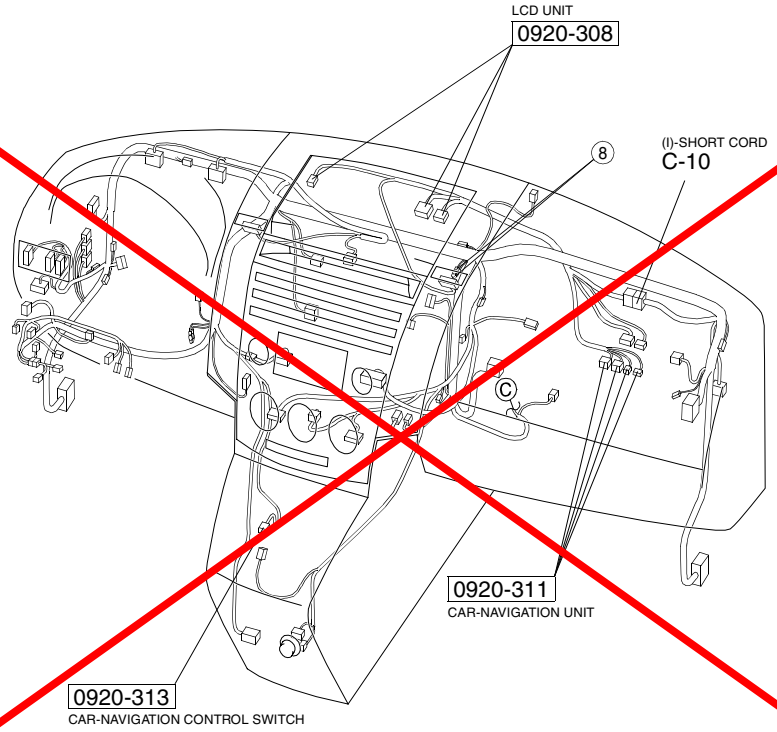


AUDIO SYSTEM (WITH CAR-NAVIGATION SYSTEM)


*: VACANT

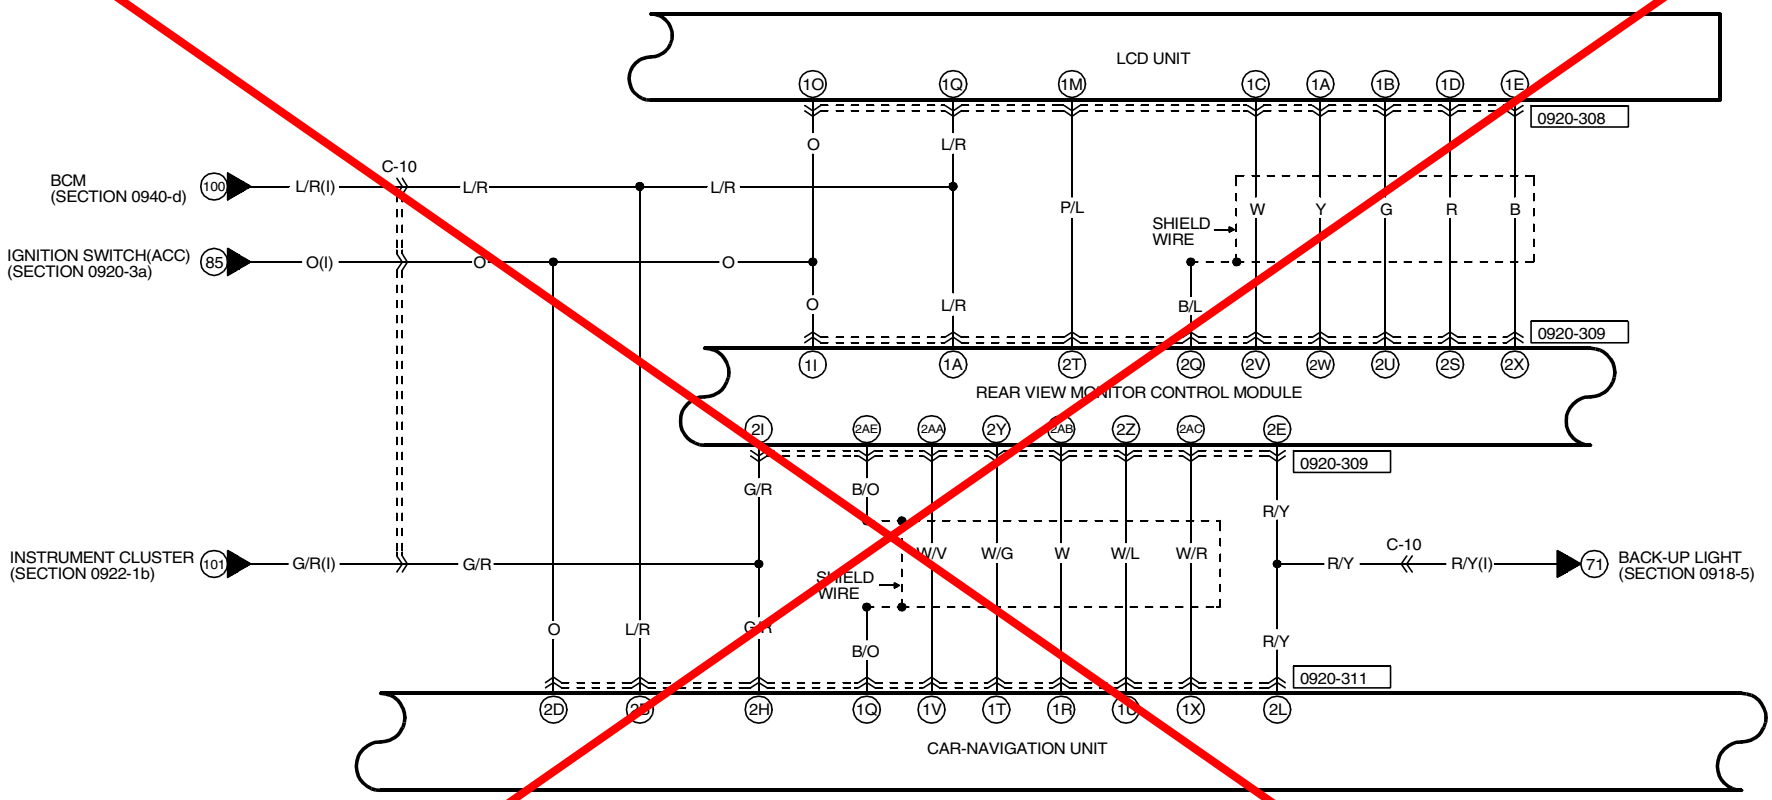


0920-308
LCD UNIT(SHORT CORD)

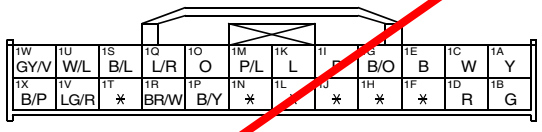



0920-309
REAR VIEW MONITOR CONTROL MODULE(SHORT CORD)






0920-311
CAR-NAVIGATION UNIT(SHORT CORD)

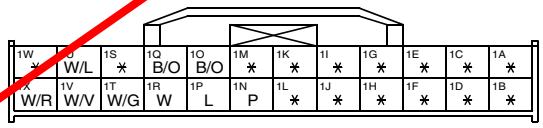

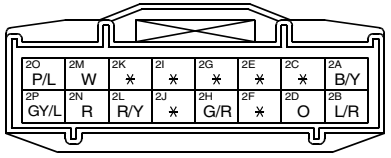


HARNESS SYMBOL : (F) (E) (R)

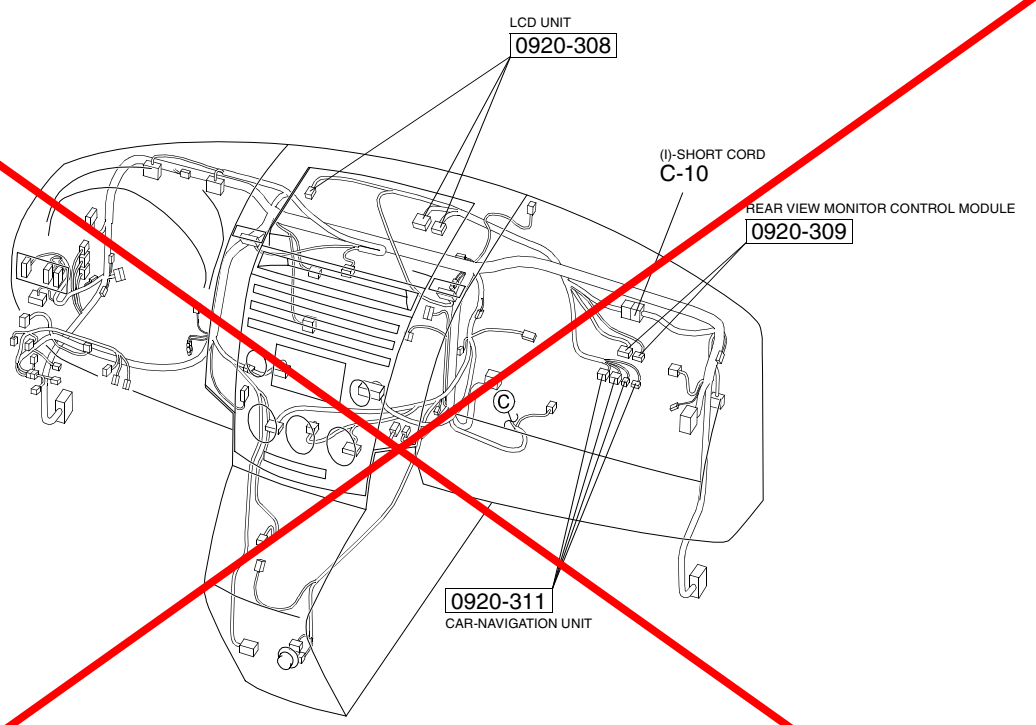

187

AUDIO SYSTEM (WITH CAR-NAVIGATION SYSTEM)

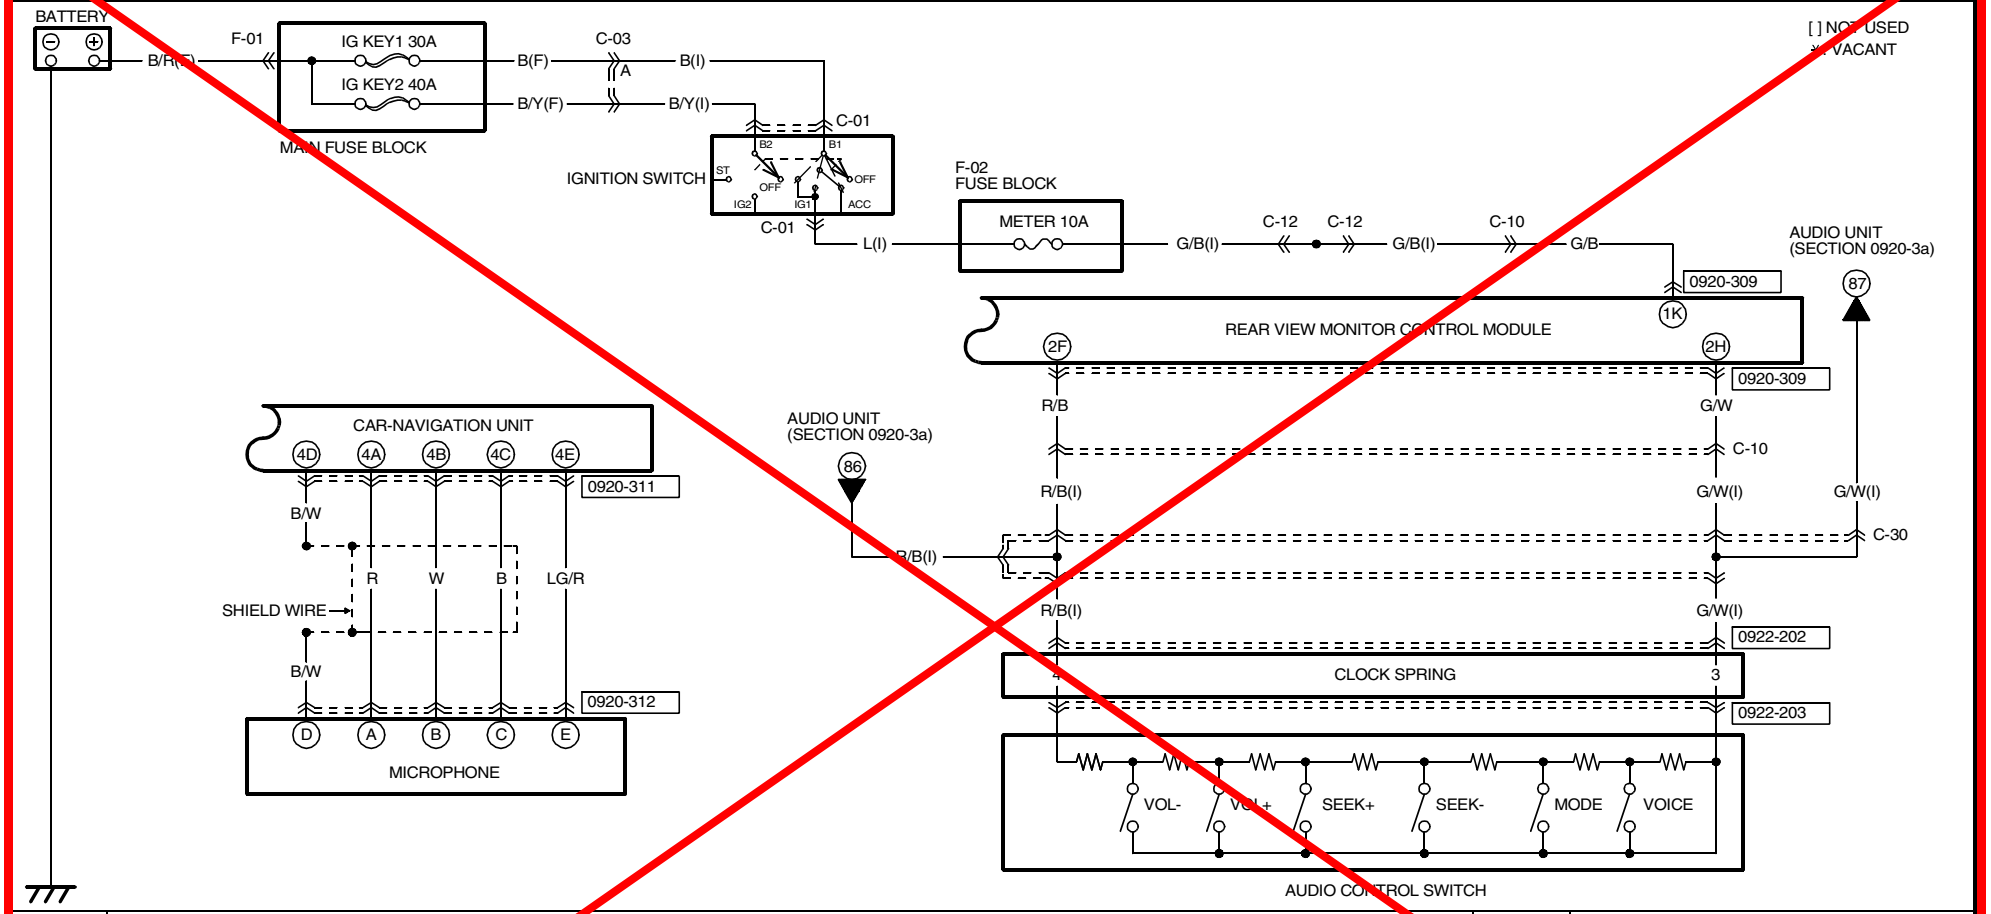

0920-309
REAR VIEW MONITOR CONTROL MODULE(SHORT CORD)

1K	1I		1C	1A
G/B	O		*	L/R
1L	1J	1H	1F	1D	1B
*	*	B/Y	*	*	*

2AM	2AK	2AI	2AG	2AE	2AC	2AA	2Y	2W	2U	2S	2Q	2O	2M	2K	2I	2G	2E	2C	2A
B	R/W	*	*	B/O	W/R	W/V	W/G	Y	G	R	B/L	R	L	*	G/R	B/Y	R/Y	*	*
2AN	2AL	2AJ	2AH	2AF	2AD	2AB	2Z	2X	2V	2T	2R	2P	2N	2L	2J	2H	2F	2D	2B
R/L	B/G	*	*	*	*	W	W/L	B	W	P/L	*	*	*	*	*	G/W	R/B	*	*

0920-311
CAR-NAVIGATION UNIT(SHORT CORD)

4F	4E	4D	4C	4B	4A
*	LG/R	B/W	B	W	R

0920-312
MICROPHONE(SHORT CORD)

F	E	D	C	B	A
*	LG/R	B/W	B	W	R

0922-202
INSTRUMENT PANEL(I)-CLOCK SPRING

(I)

* [R/W]	* [R/L]	R/B	G/W	B/P	LG/R
Y/R	Y/B	*	*	B	V/W

(CLOCK SPRING)

1	2	3	4	*	*
7	8	*	*	11	12


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0922-203
AUDIO CONTROL SWITCH(CLOCK SPRING)


*	*	4	3	2	1	8	7

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

HARNESS SYMBOL : (F) (E) (R)

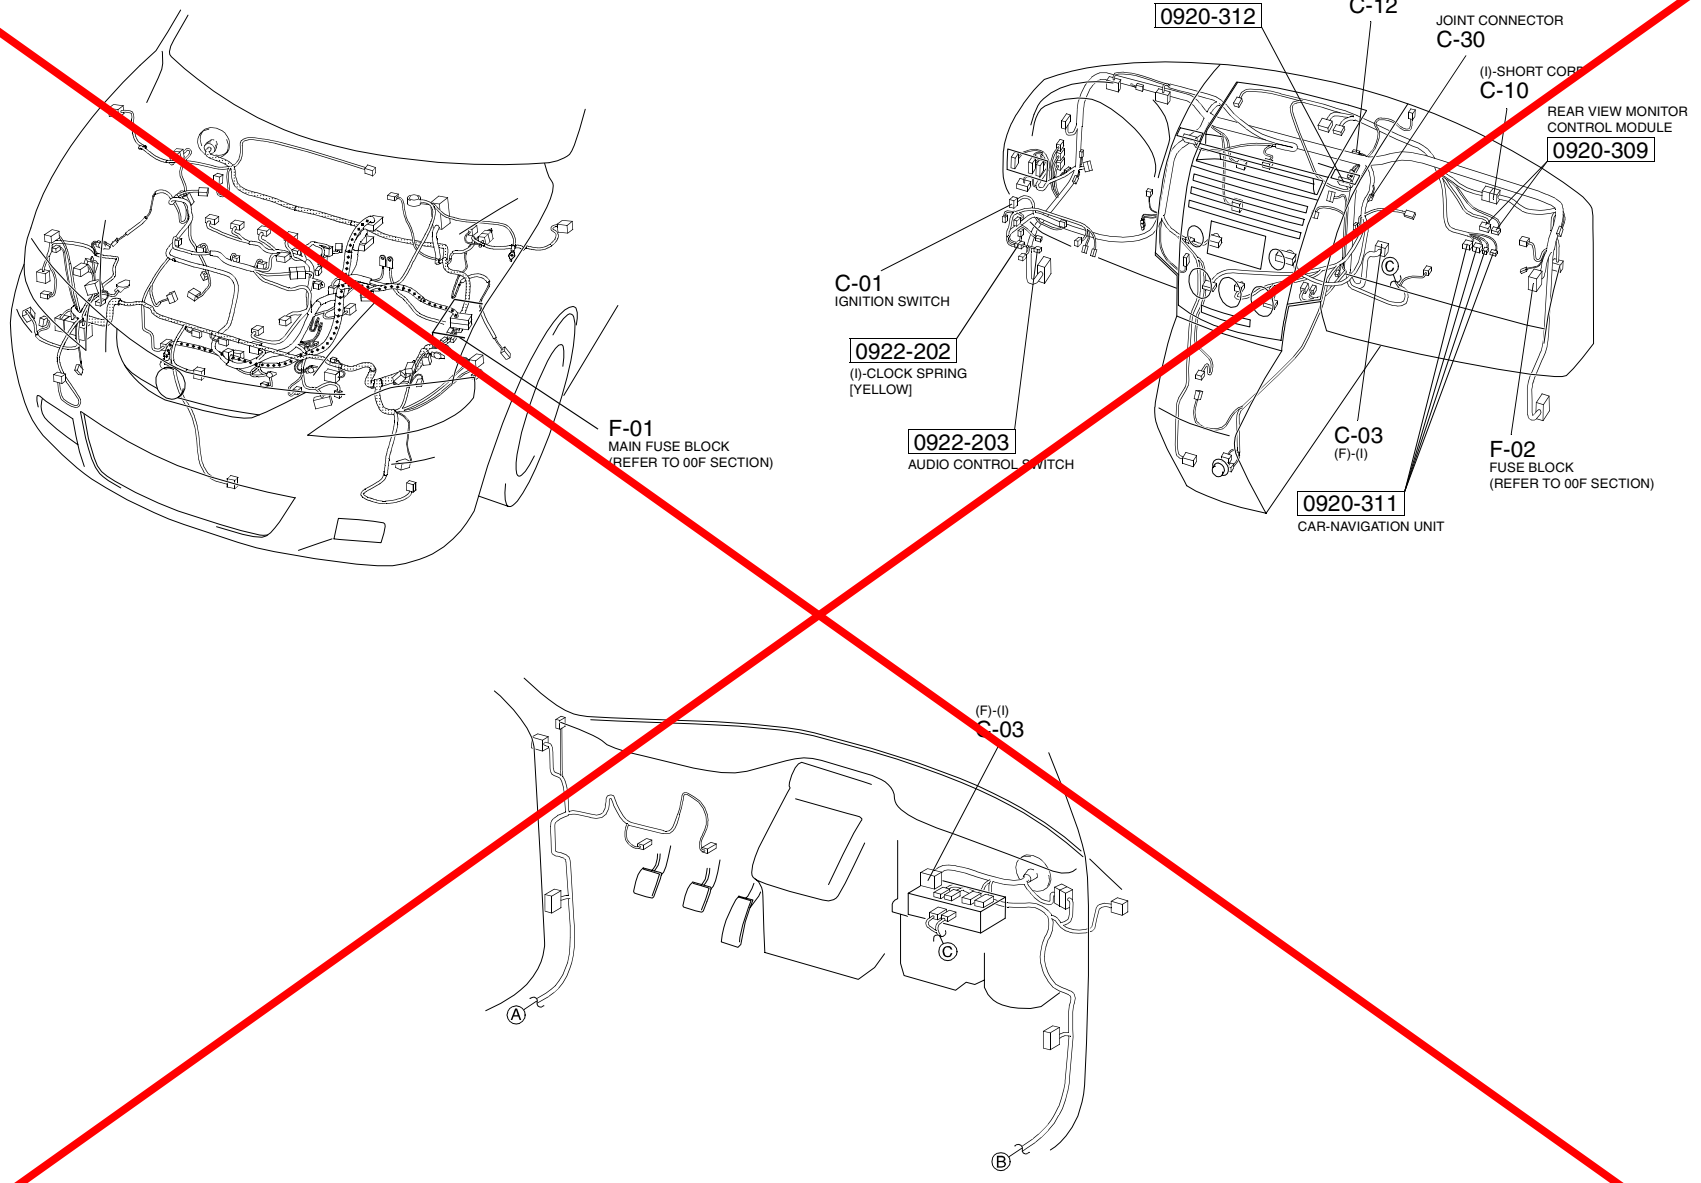


REAR ENTERTAINMENT SYSTEM (RES)

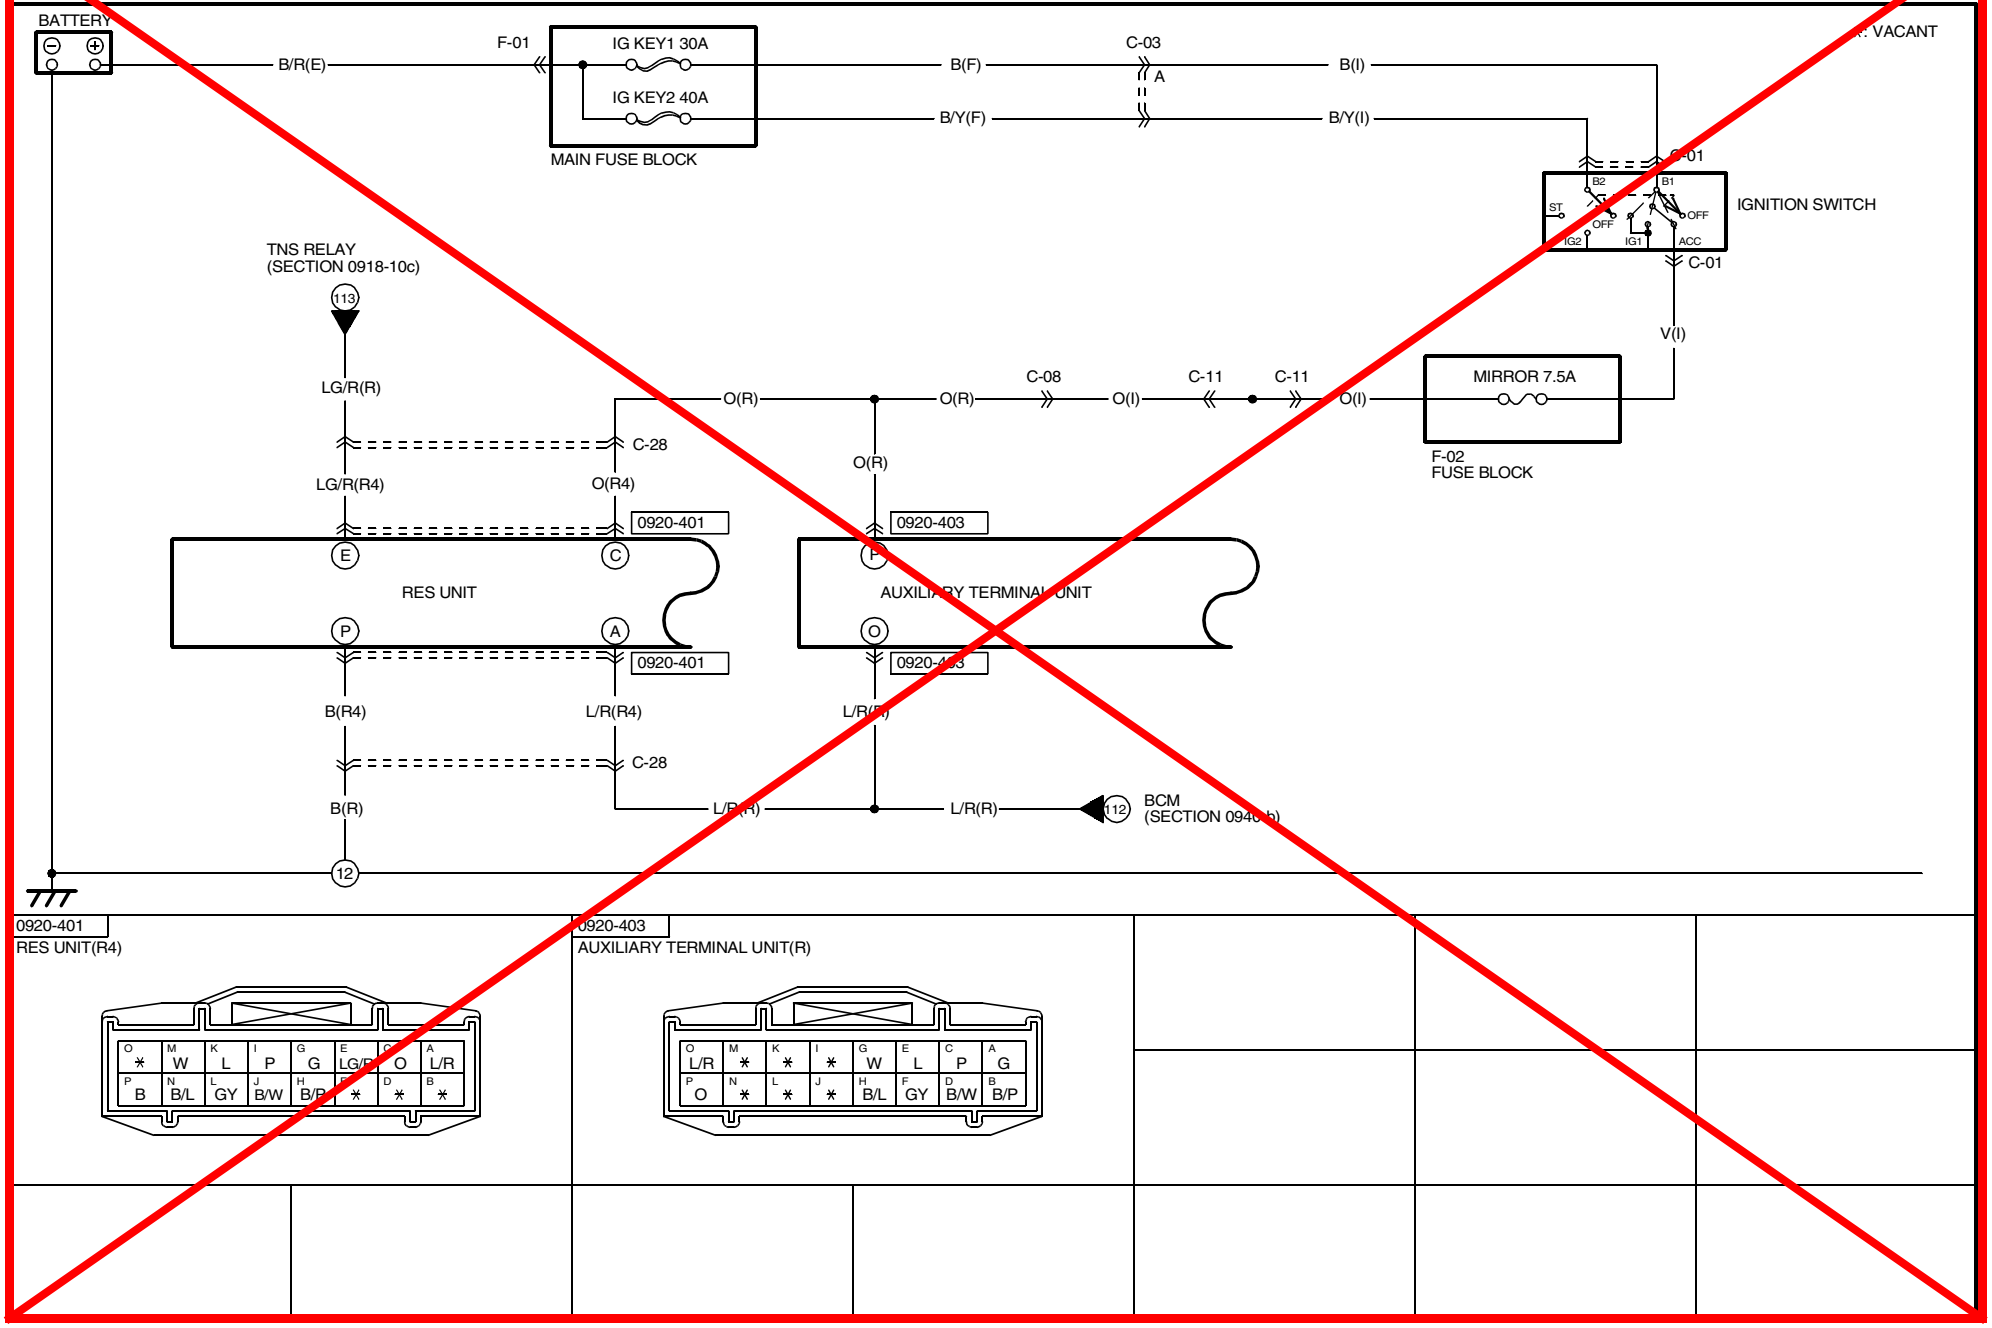



0920-401
RES UNIT(R4)


0920-403
AUXILIARY TERMINAL UNIT(R)

HARNESS SYMBOL : (F) (E) (R)

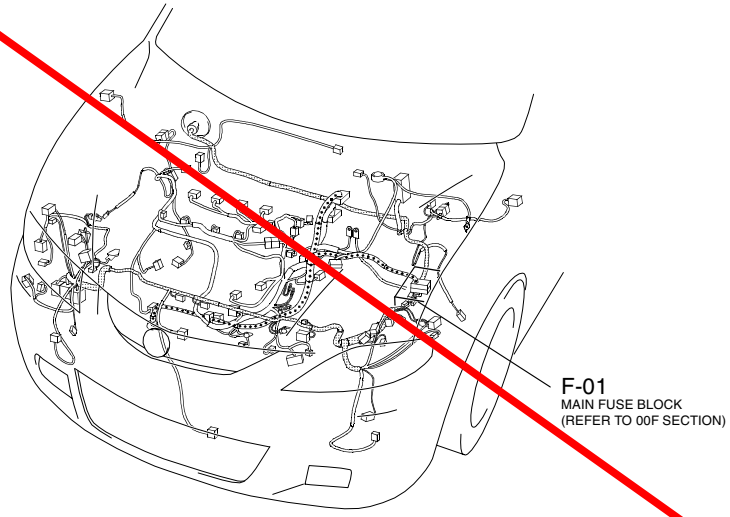

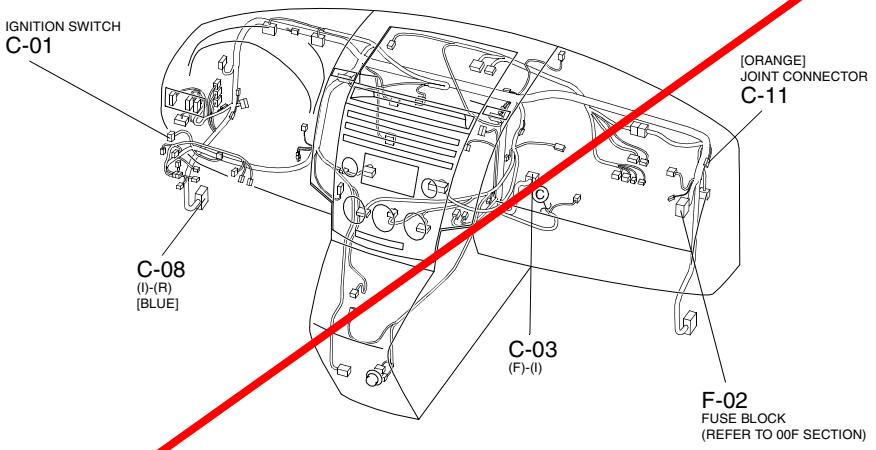


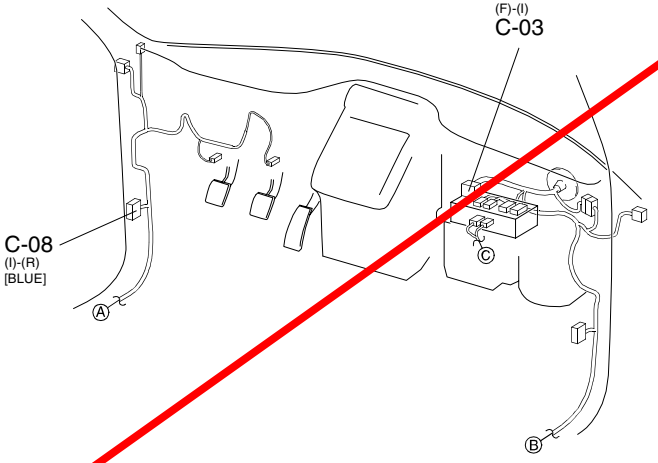

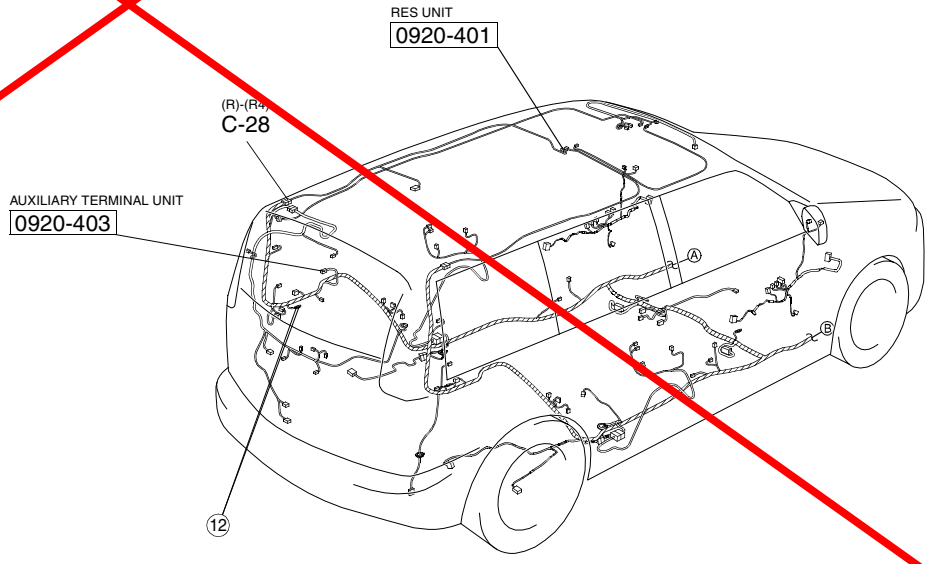


REAR ENTERTAINMENT SYSTEM (RES)


*: VACANT

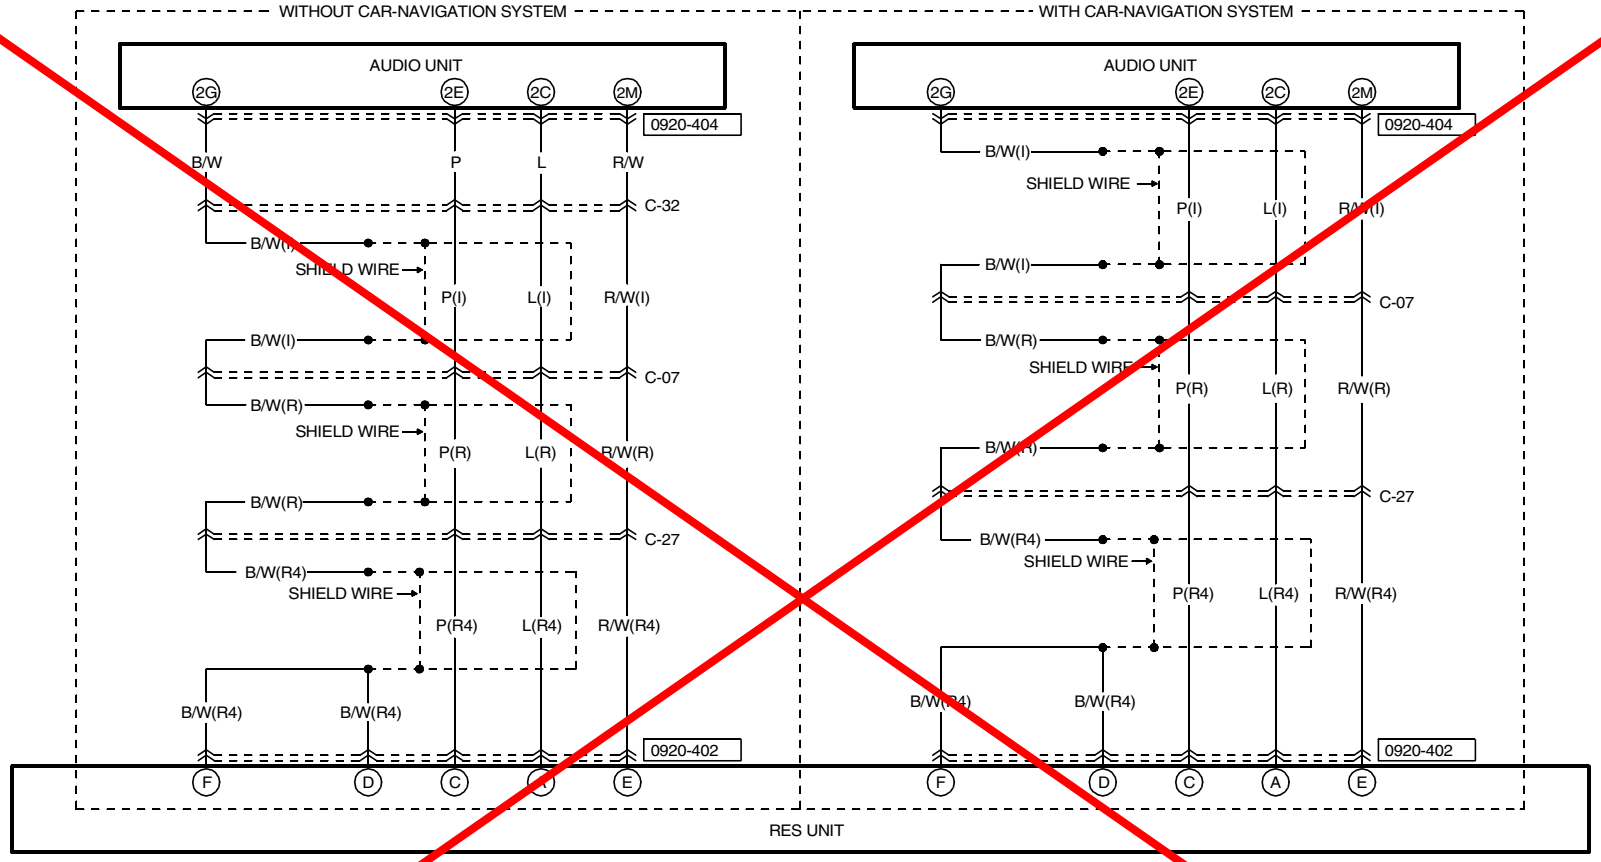


0920-402
RES UNIT(R4)

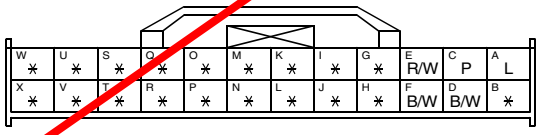


0920-404
AUDIO UNIT
(I) ← WITH CAR-NAVIGATION SYSTEM
(SHORT CORD) ← WITHOUT CAR-NAVIGATION SYSTEM

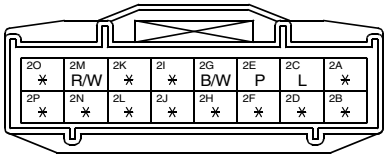


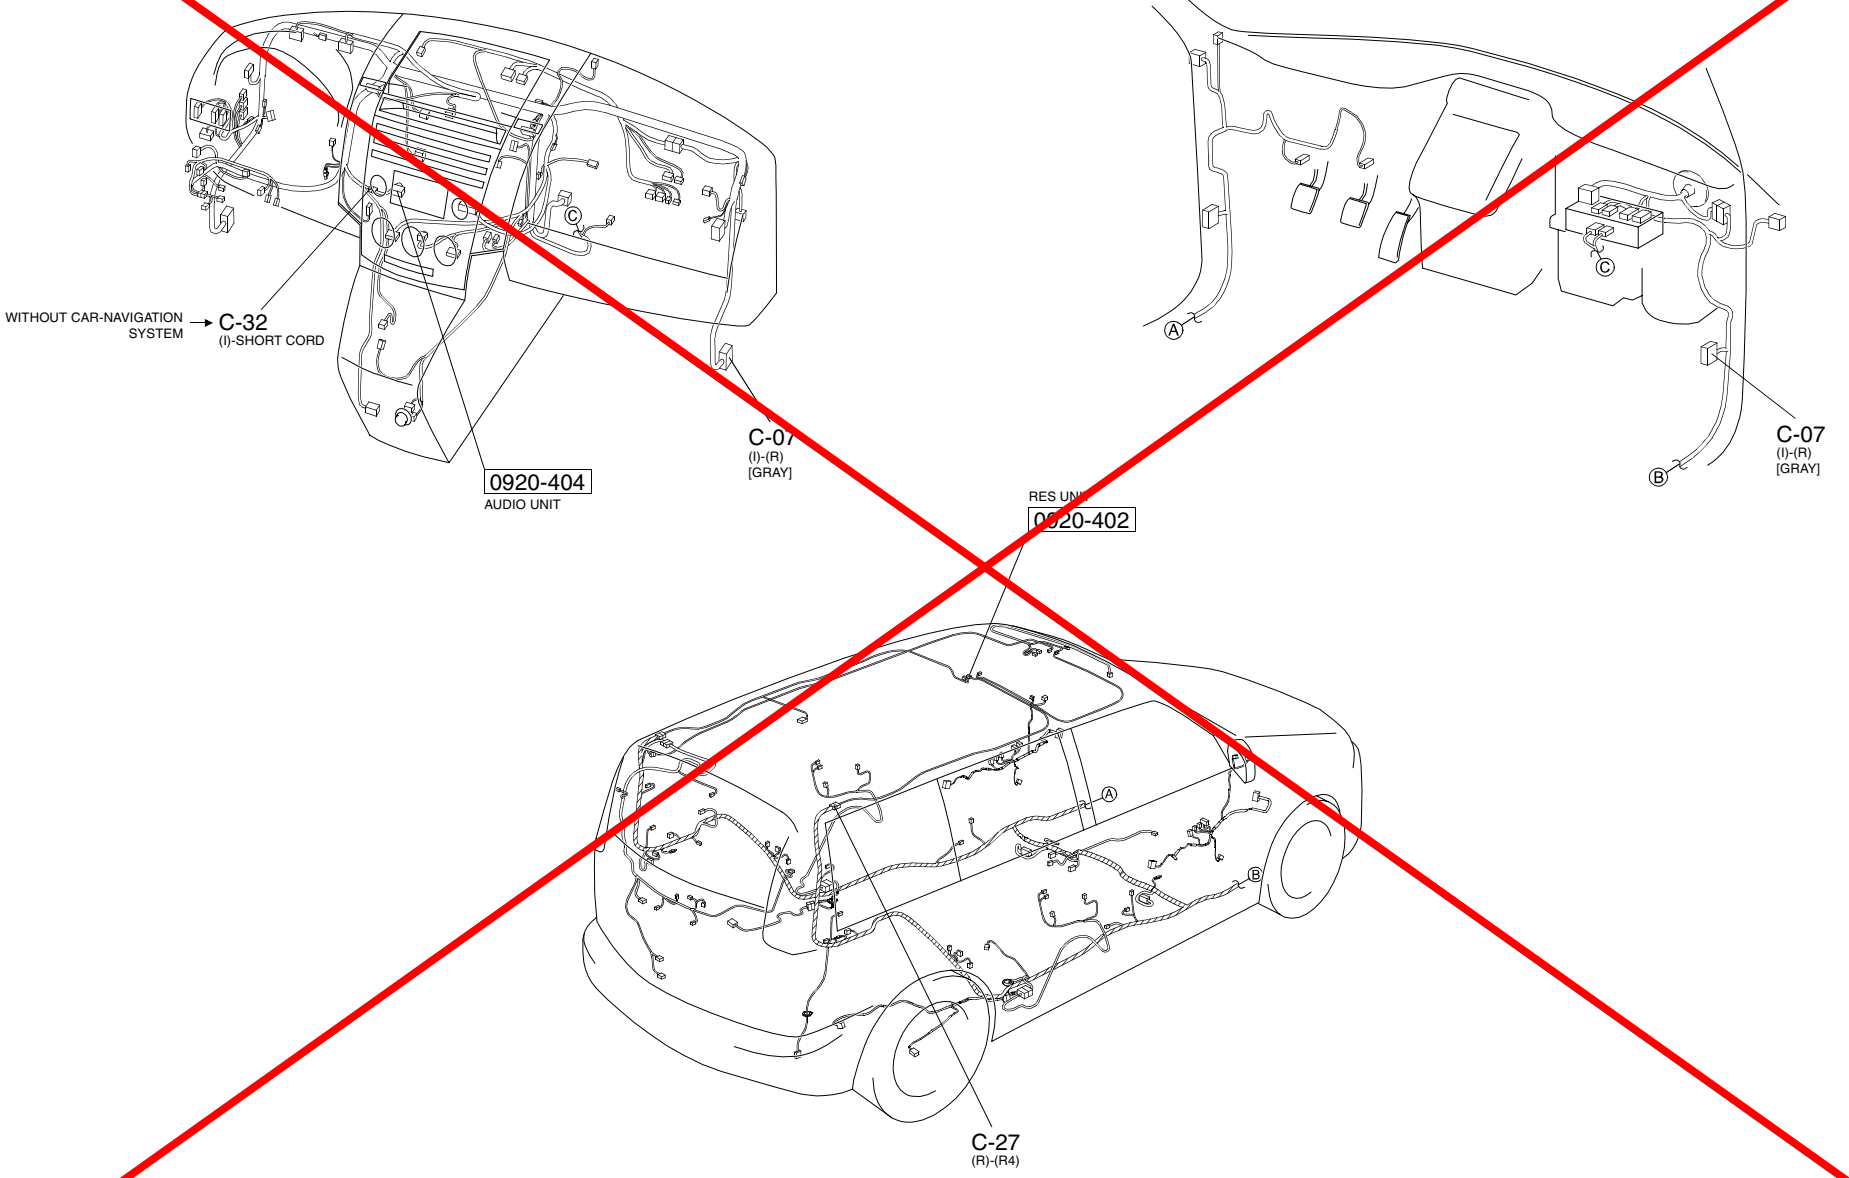
WITHOUT CAR-NAVIGATION SYSTEM
C-32
(I)-SHORT CORD
0920-404
AUDIO UNIT
C-07
(I)-(R)
[GRAY]
C-07
(I)-(R)
[GRAY]
0920-402
C-27
(R)-(R4)


*: VACANT

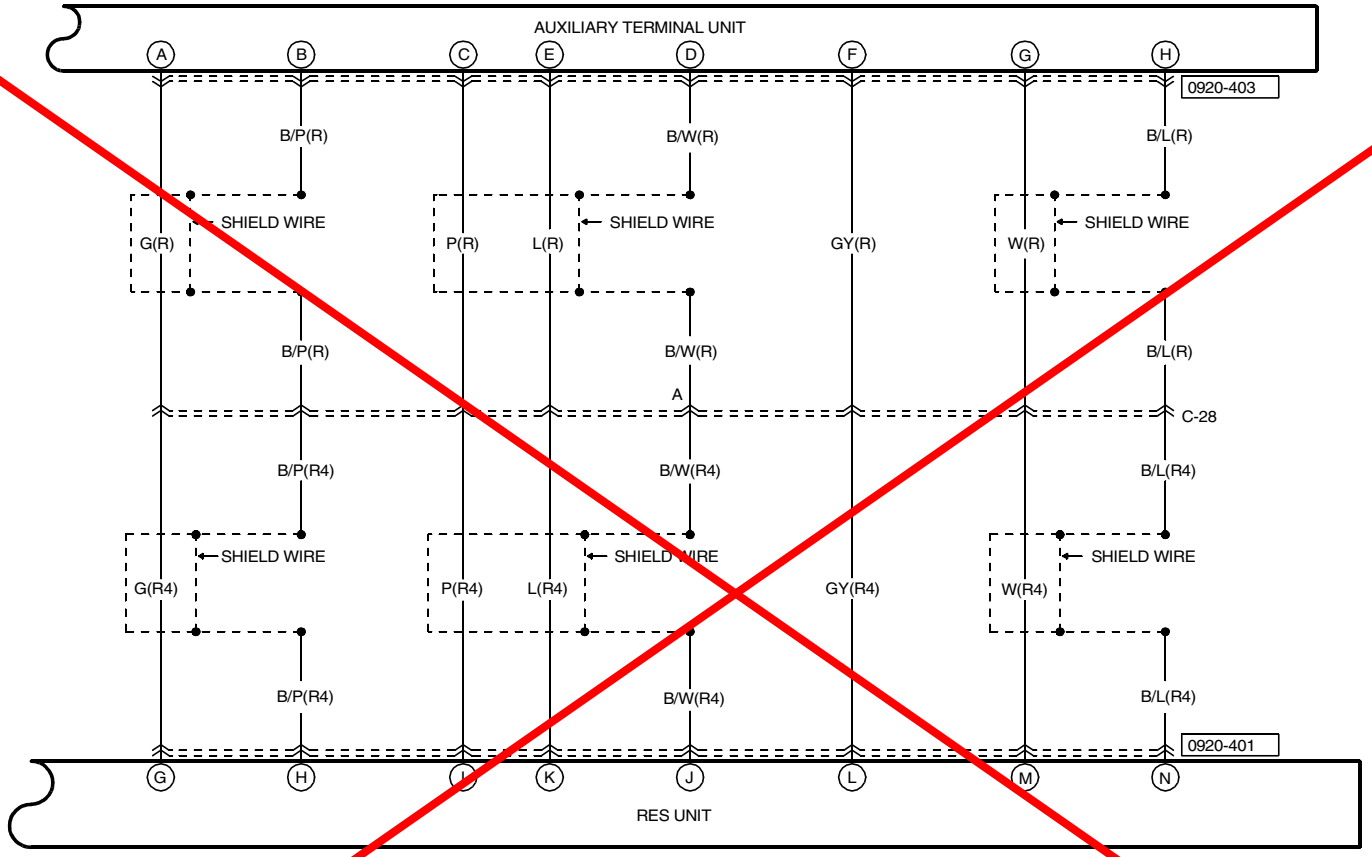


0920-401
RES UNIT(R4)

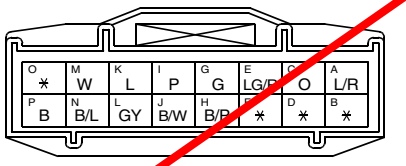


0920-403
AUXILIARY TERMINAL UNIT(R)

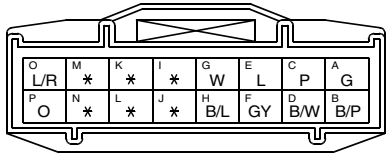

HARNESS SYMBOL : (F) (E) (R)

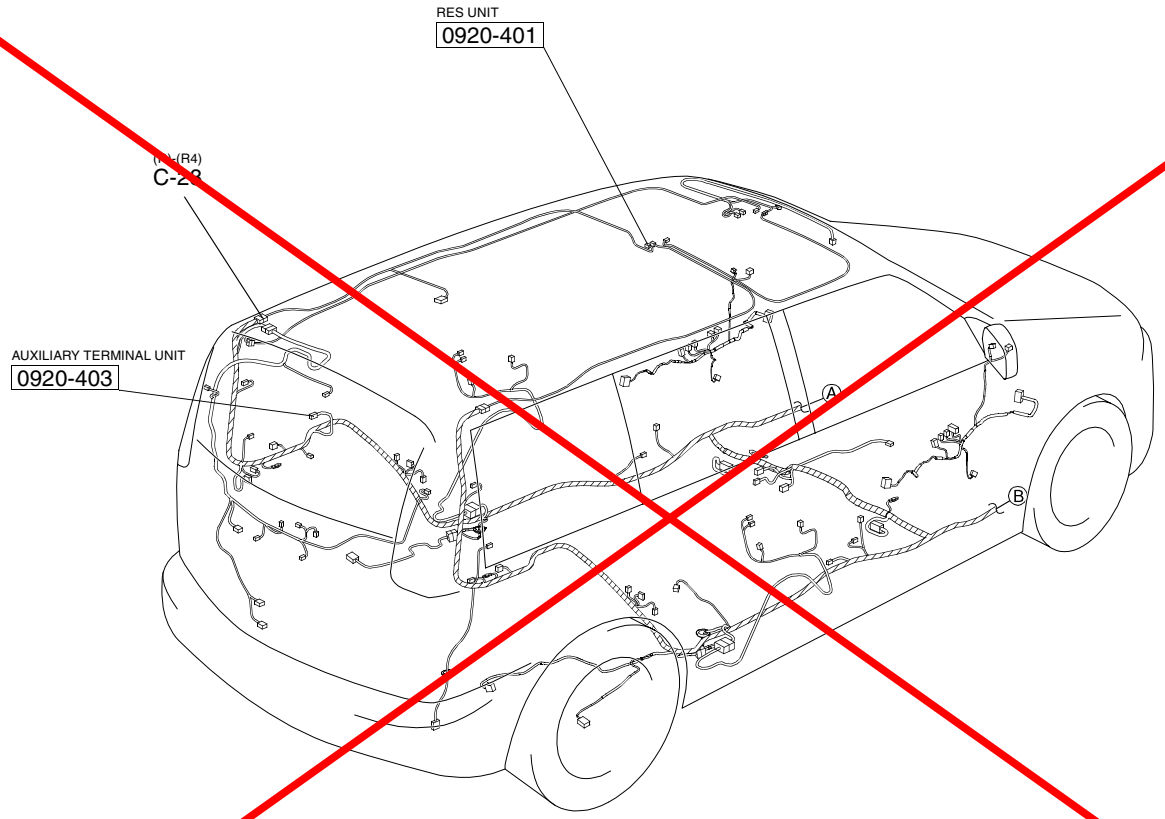



INSTRUMENT CLUSTER

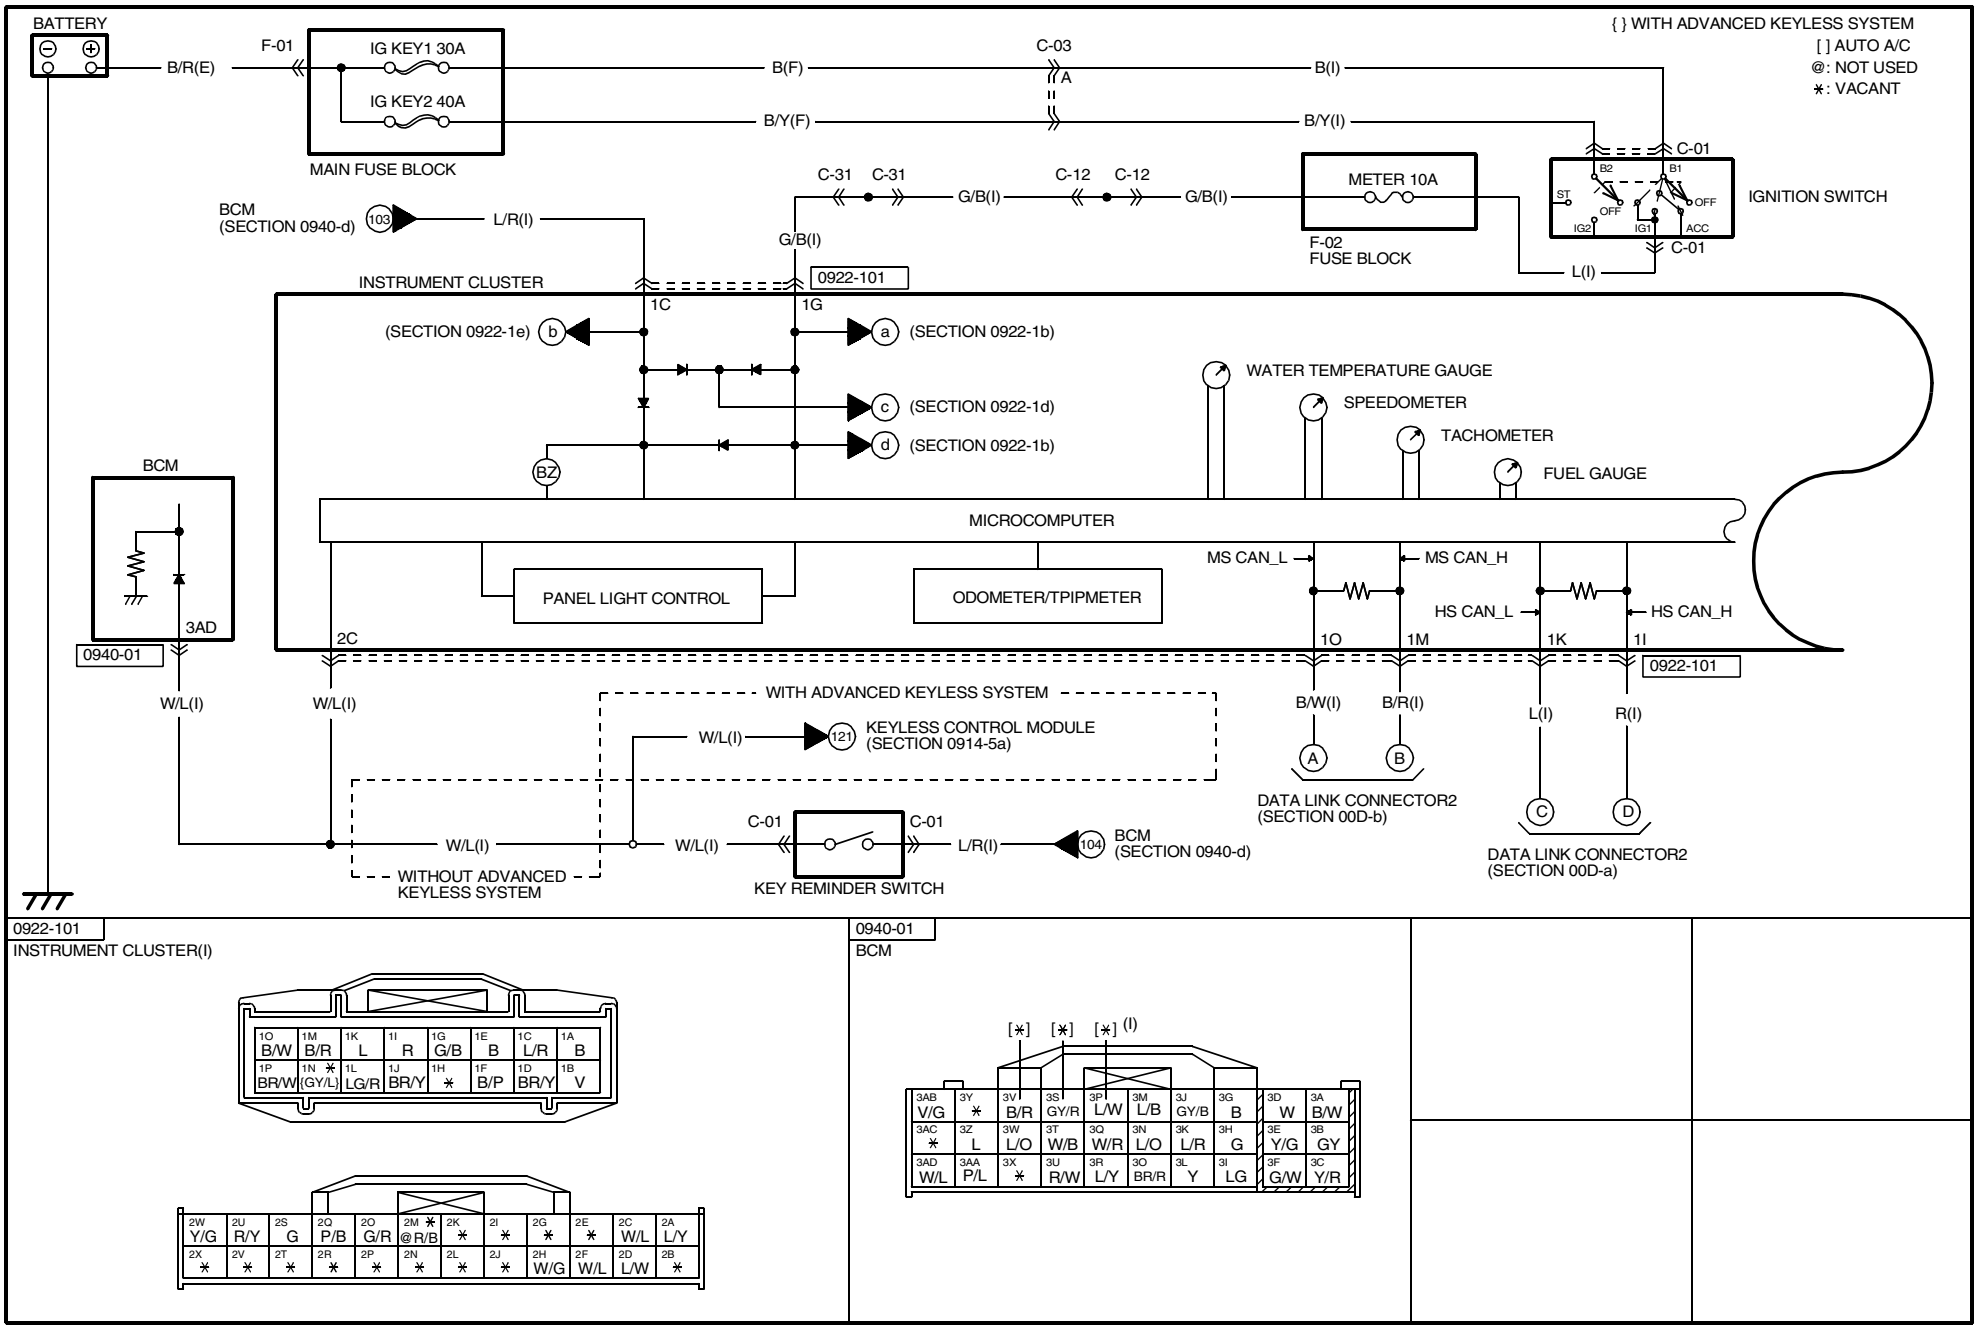



0922-101
INSTRUMENT CLUSTER(I)

0940-01
BCM

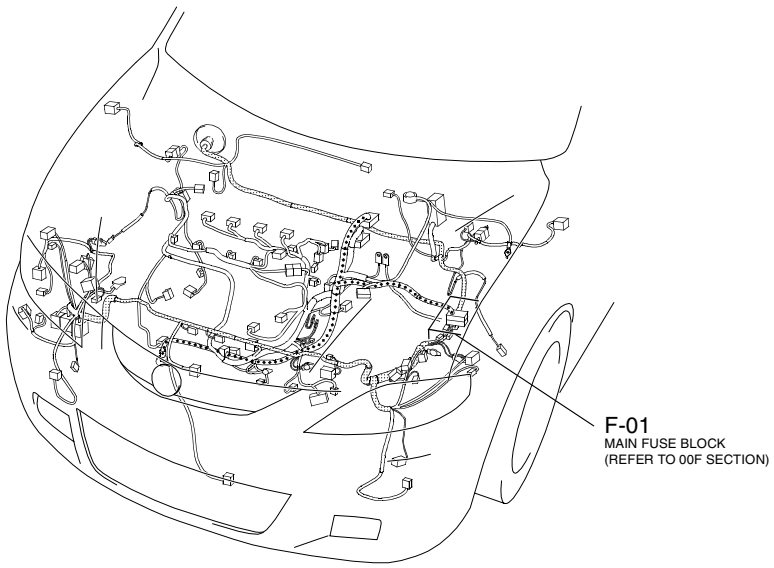
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

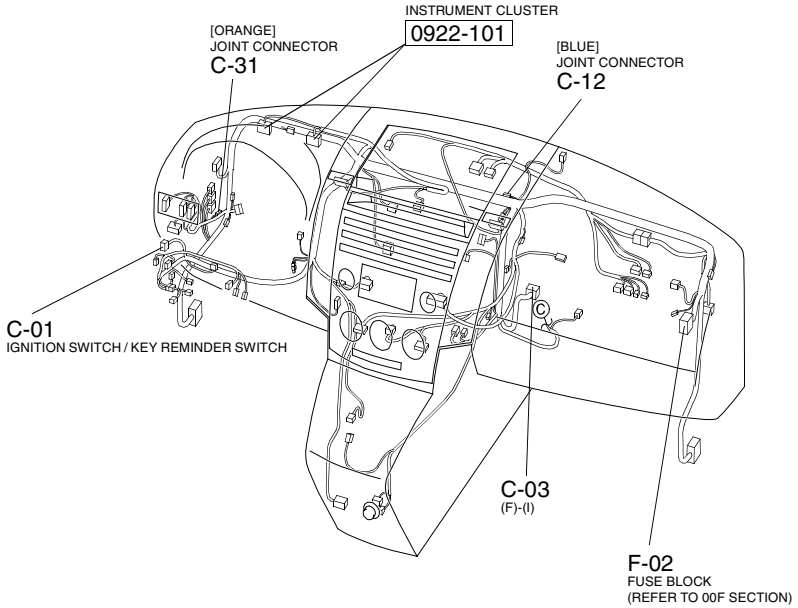

INSTRUMENT CLUSTER
0922-101
[ORANGE]
JOINT CONNECTOR
C-31
[BLUE]
JOINT CONNECTOR
C-12
C-01
IGNITION SWITCH / KEY REMINDER SWITCH
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)

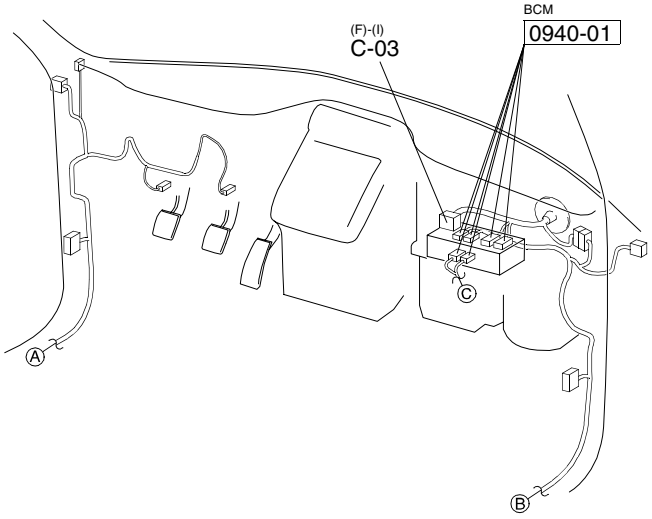

BCM
0940-01
(F)-(I)
C-03

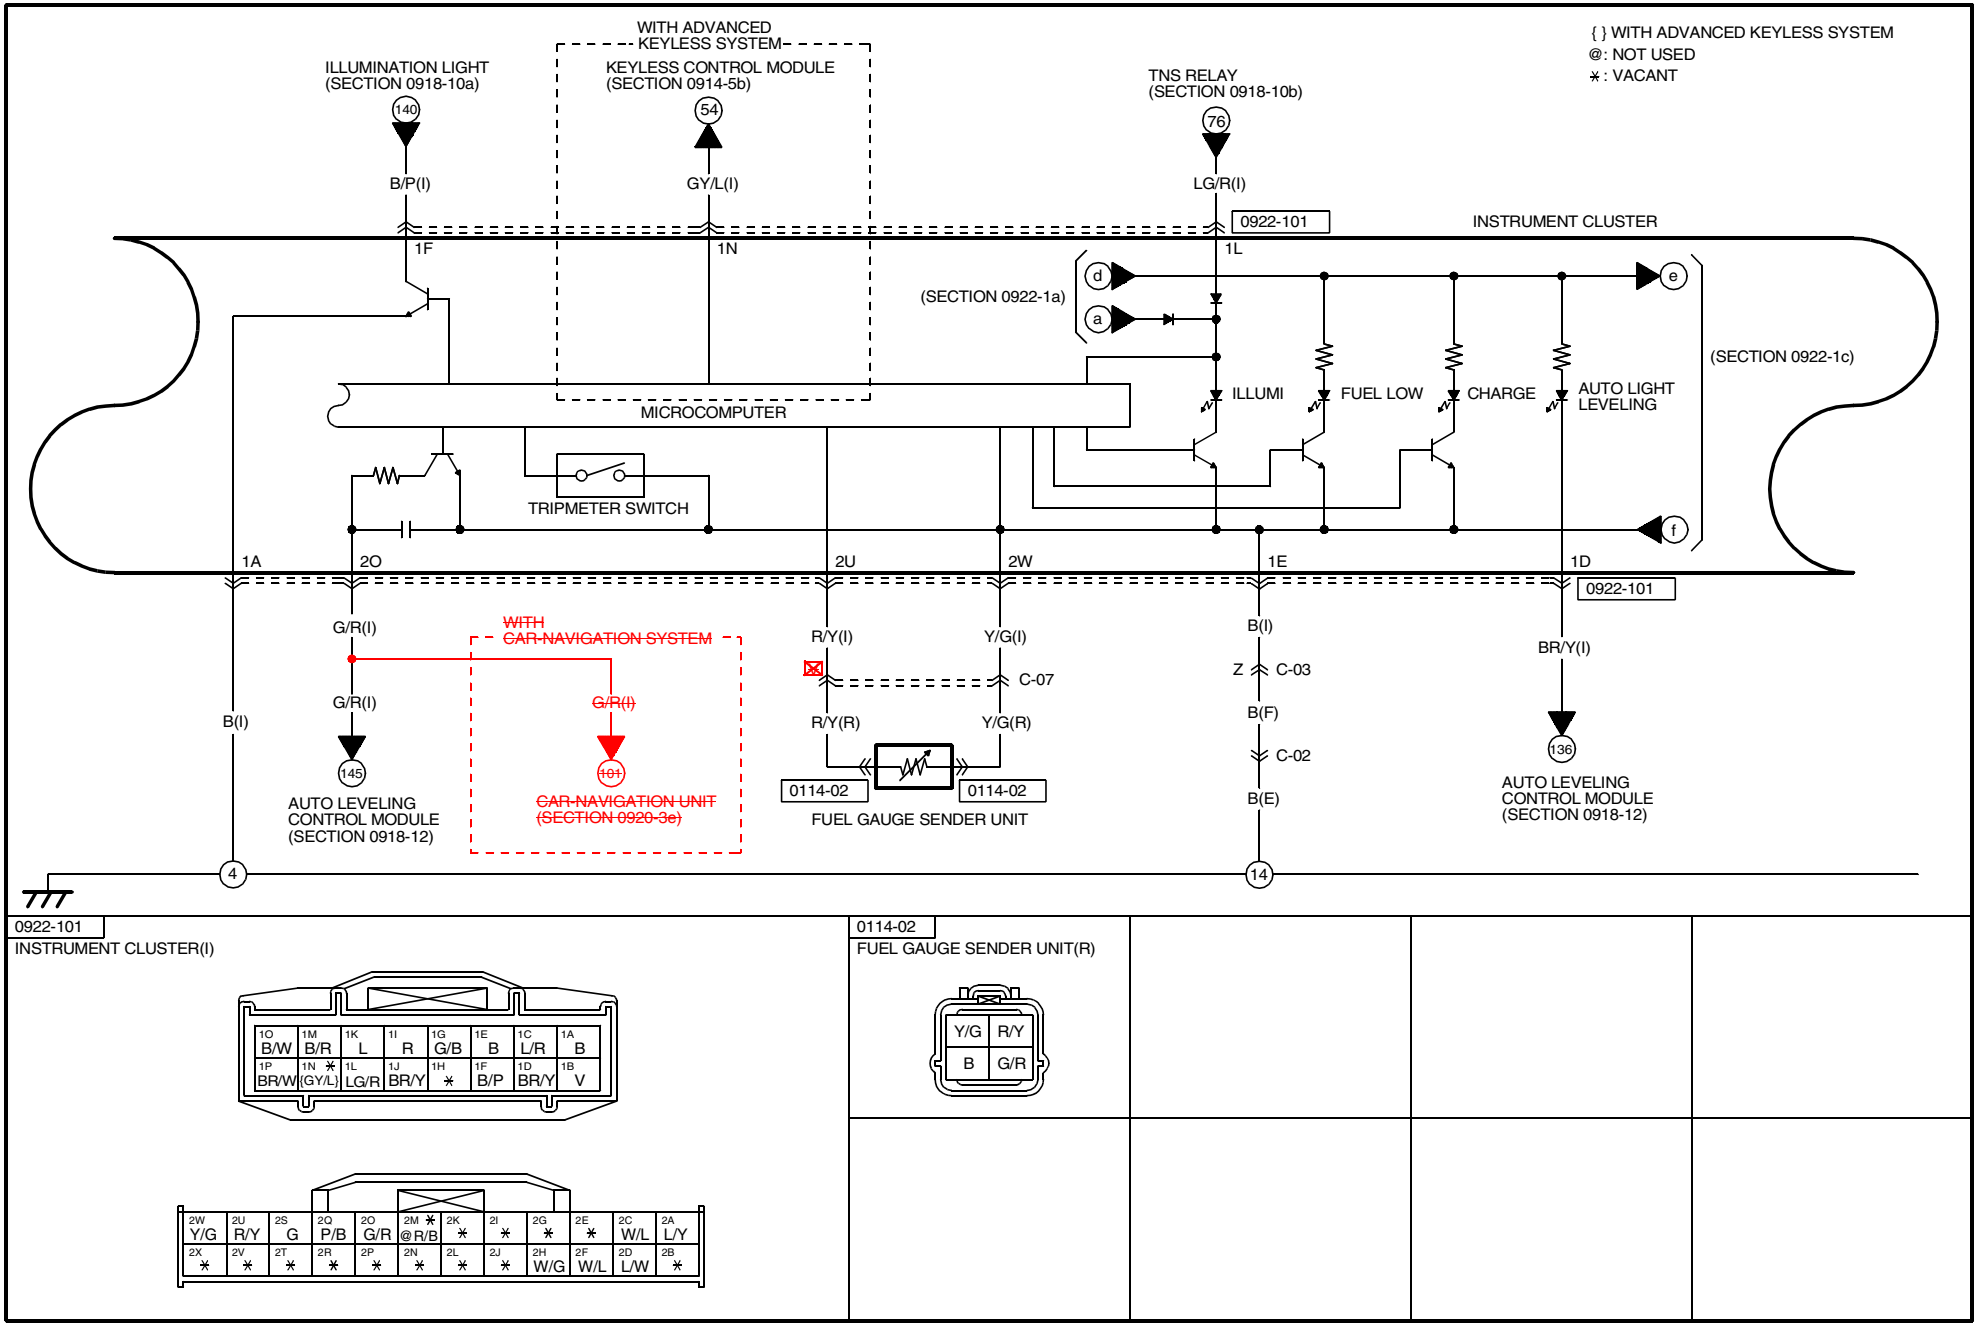



0922-101
INSTRUMENT CLUSTER(I)

0114-02
FUEL GAUGE SENDER UNIT(R)

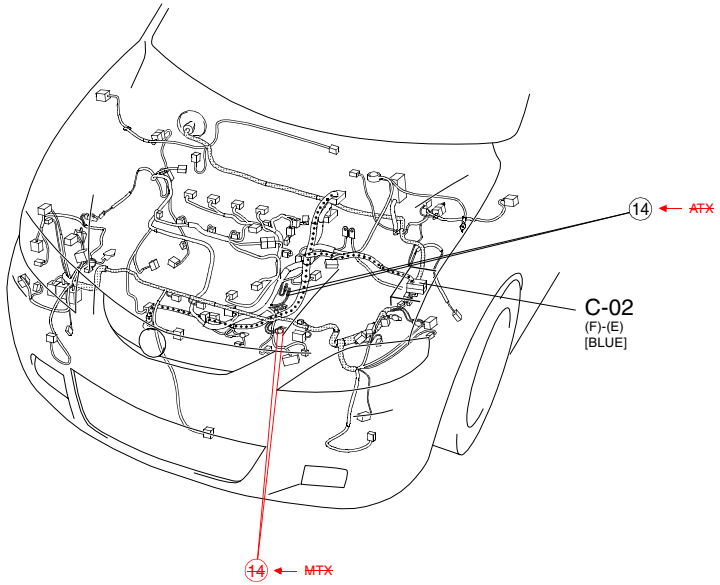

14 ← ATX
C-02
(F)-(E)
[BLUE]
14 ← MTX

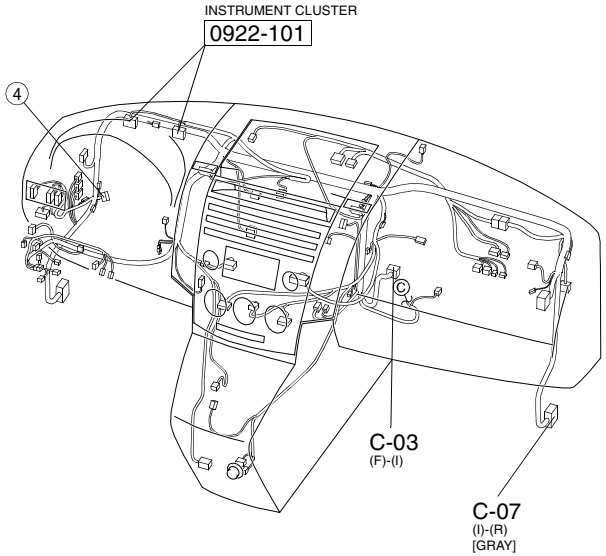
INSTRUMENT CLUSTER
0922-101
4
C-03
(F)-(I)
C-07
(I)-(R)
[GRAY]

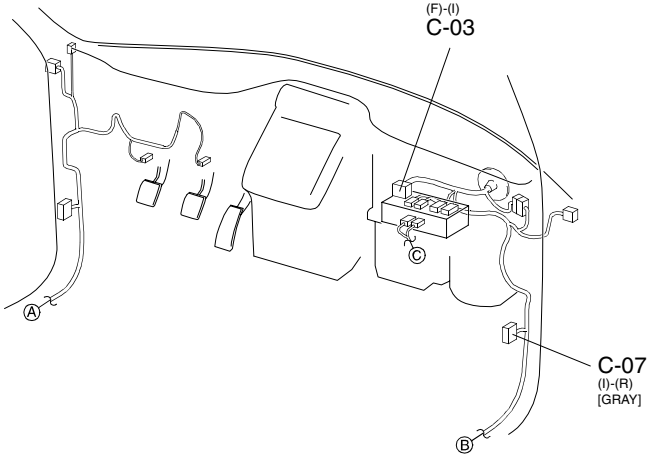

(F)-(I)
C-03
C-07
(I)-(R)
[GRAY]

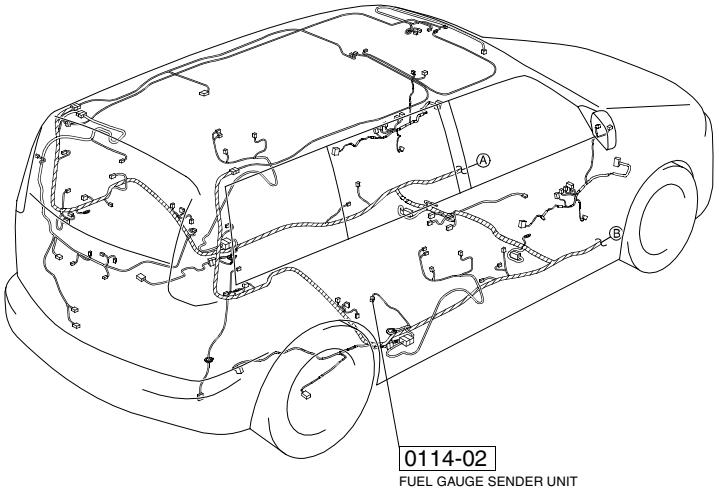
0114-02
FUEL GAUGE SENDER UNIT


{ } WITH ADVANCED KEYLESS SYSTEM
∗: VACANT

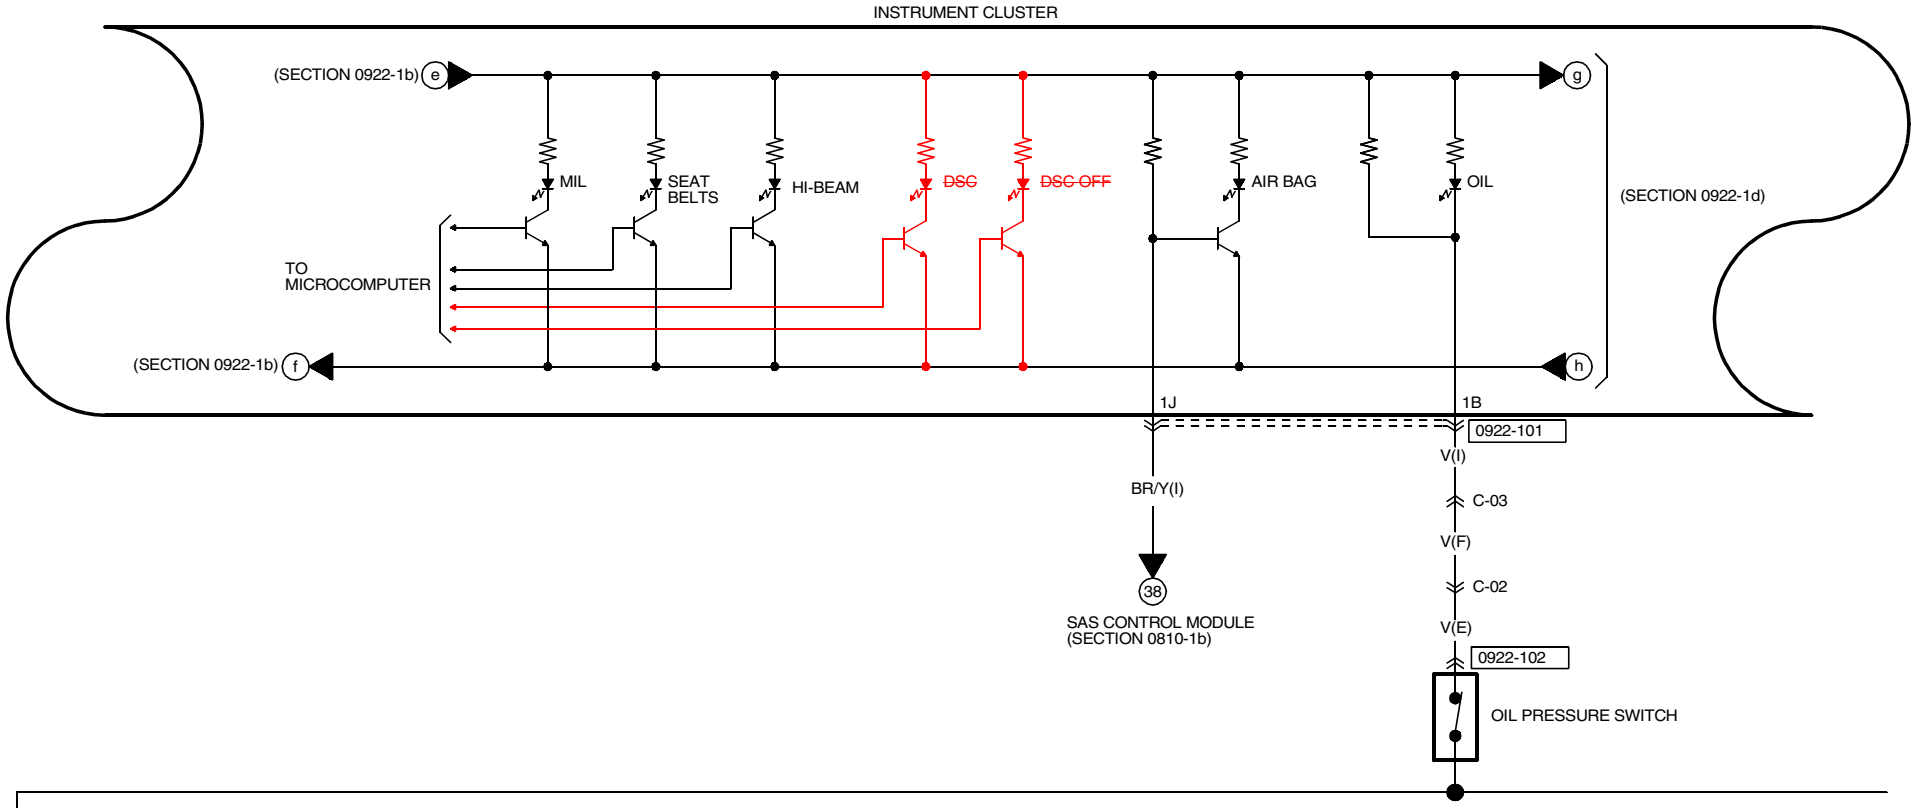



0922-101
INSTRUMENT CLUSTER(I)

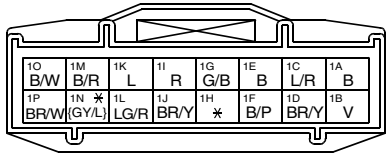


0922-102
OIL PRESSURE SWITCH(E)




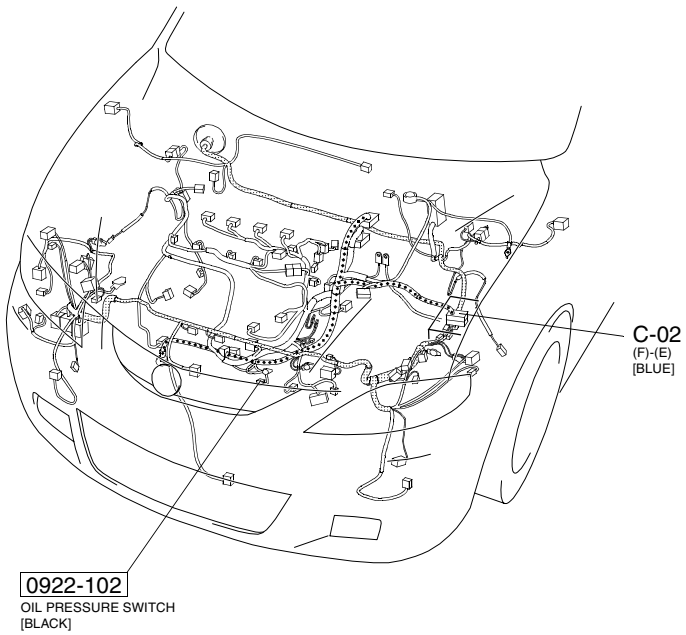
C-02
(F)-(E)
[BLUE]
0922-102
OIL PRESSURE SWITCH
[BLACK]

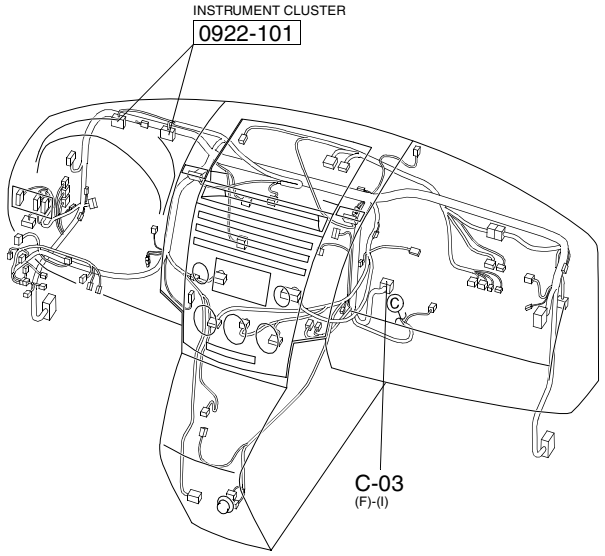

INSTRUMENT CLUSTER
0922-101
C
C-03
(F)-(I)

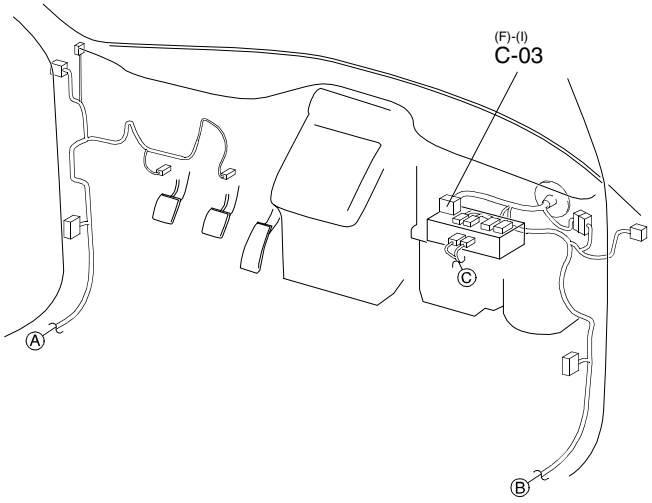

(F)-(I)
C-03
C
A
B

@: NOT USED
*: VACANT

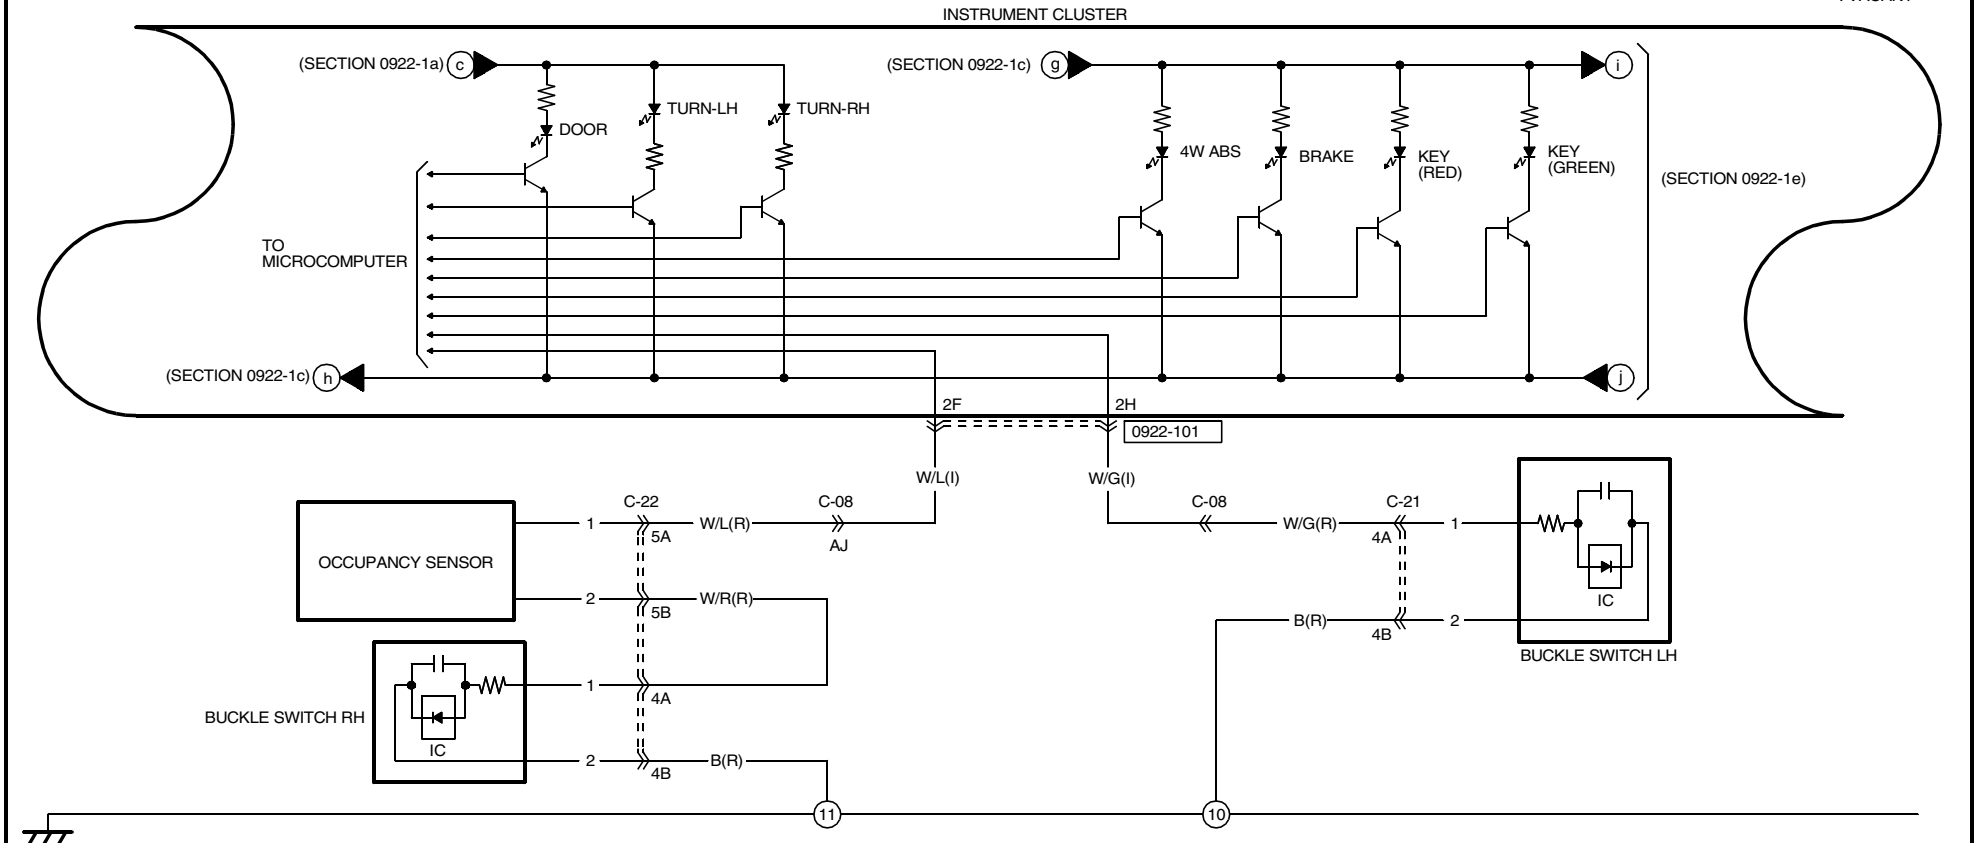


0922-101
INSTRUMENT CLUSTER(I)

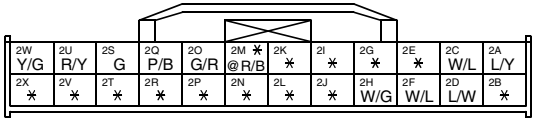


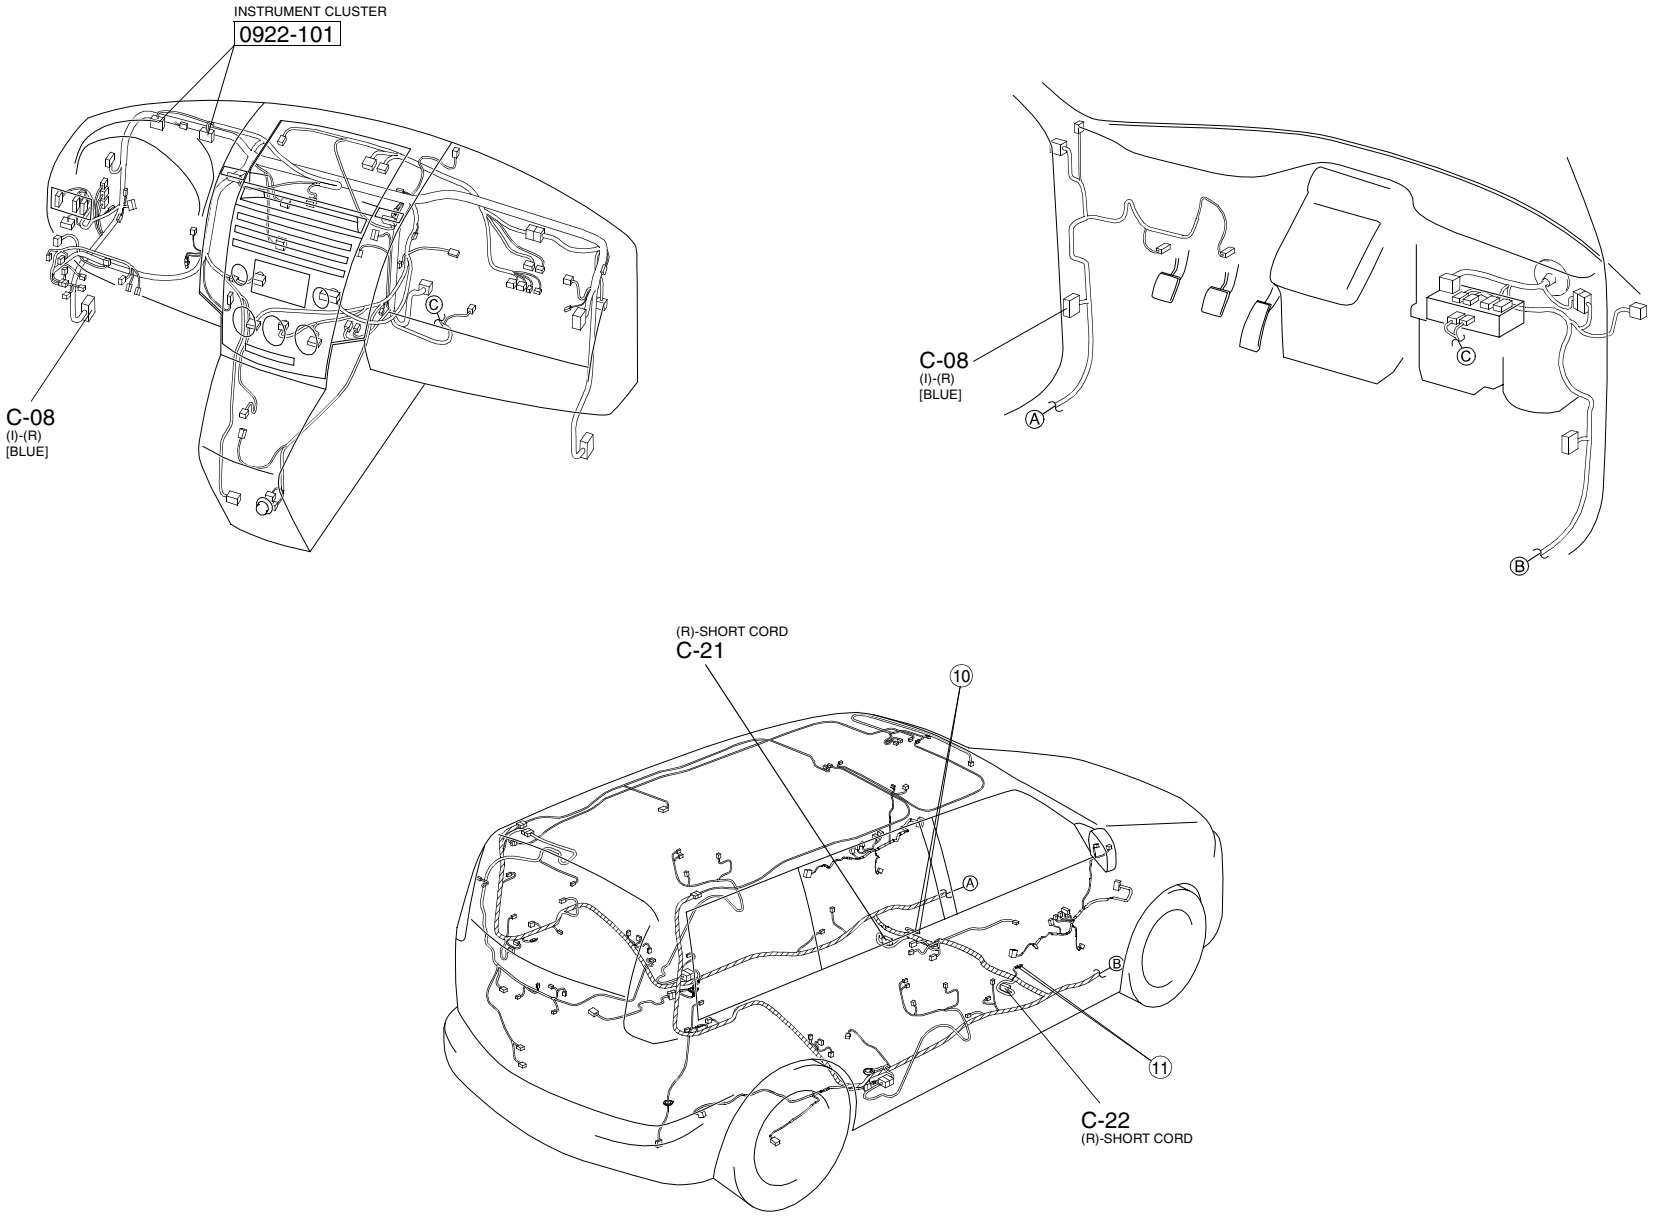

INSTRUMENT CLUSTER
0922-101
C-08
(I)-(R)
[BLUE]
C-08
(I)-(R)
[BLUE]
(R)-SHORT CORD
C-21
C-22
(R)-SHORT CORD

@: NOT USED
*: VACANT

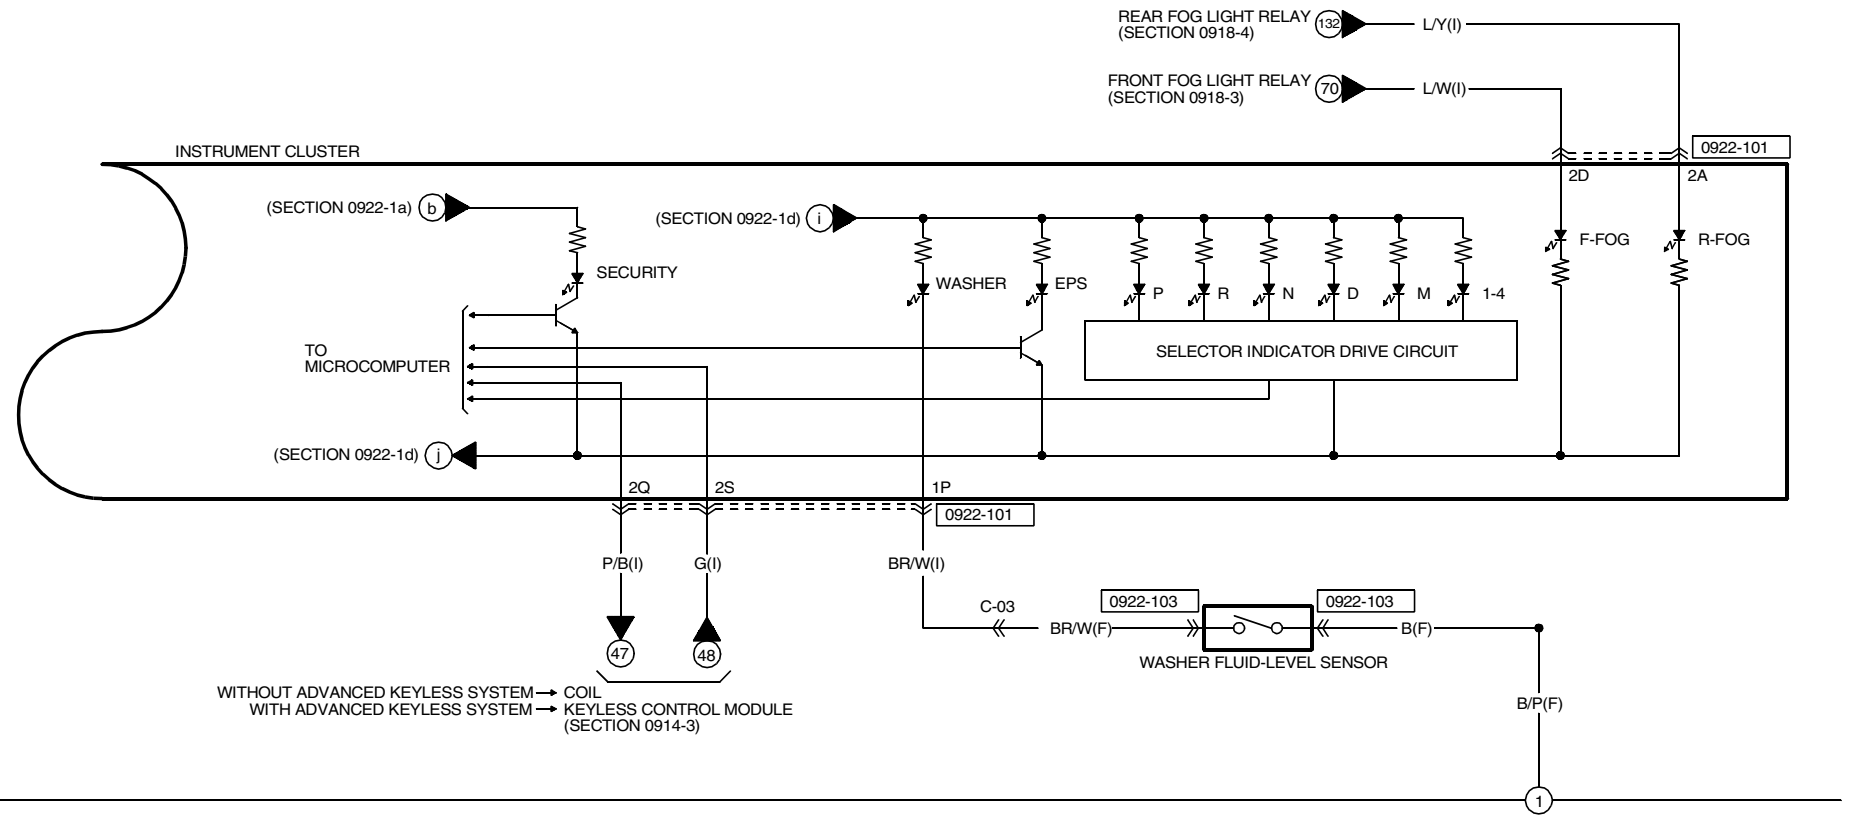


0922-101
INSTRUMENT CLUSTER(I)

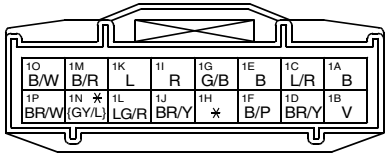


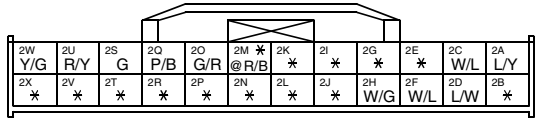


0922-103
WASHER FLUID-LEVEL SENSOR(F)



HARNESS SYMBOL : (F) (E) (R)

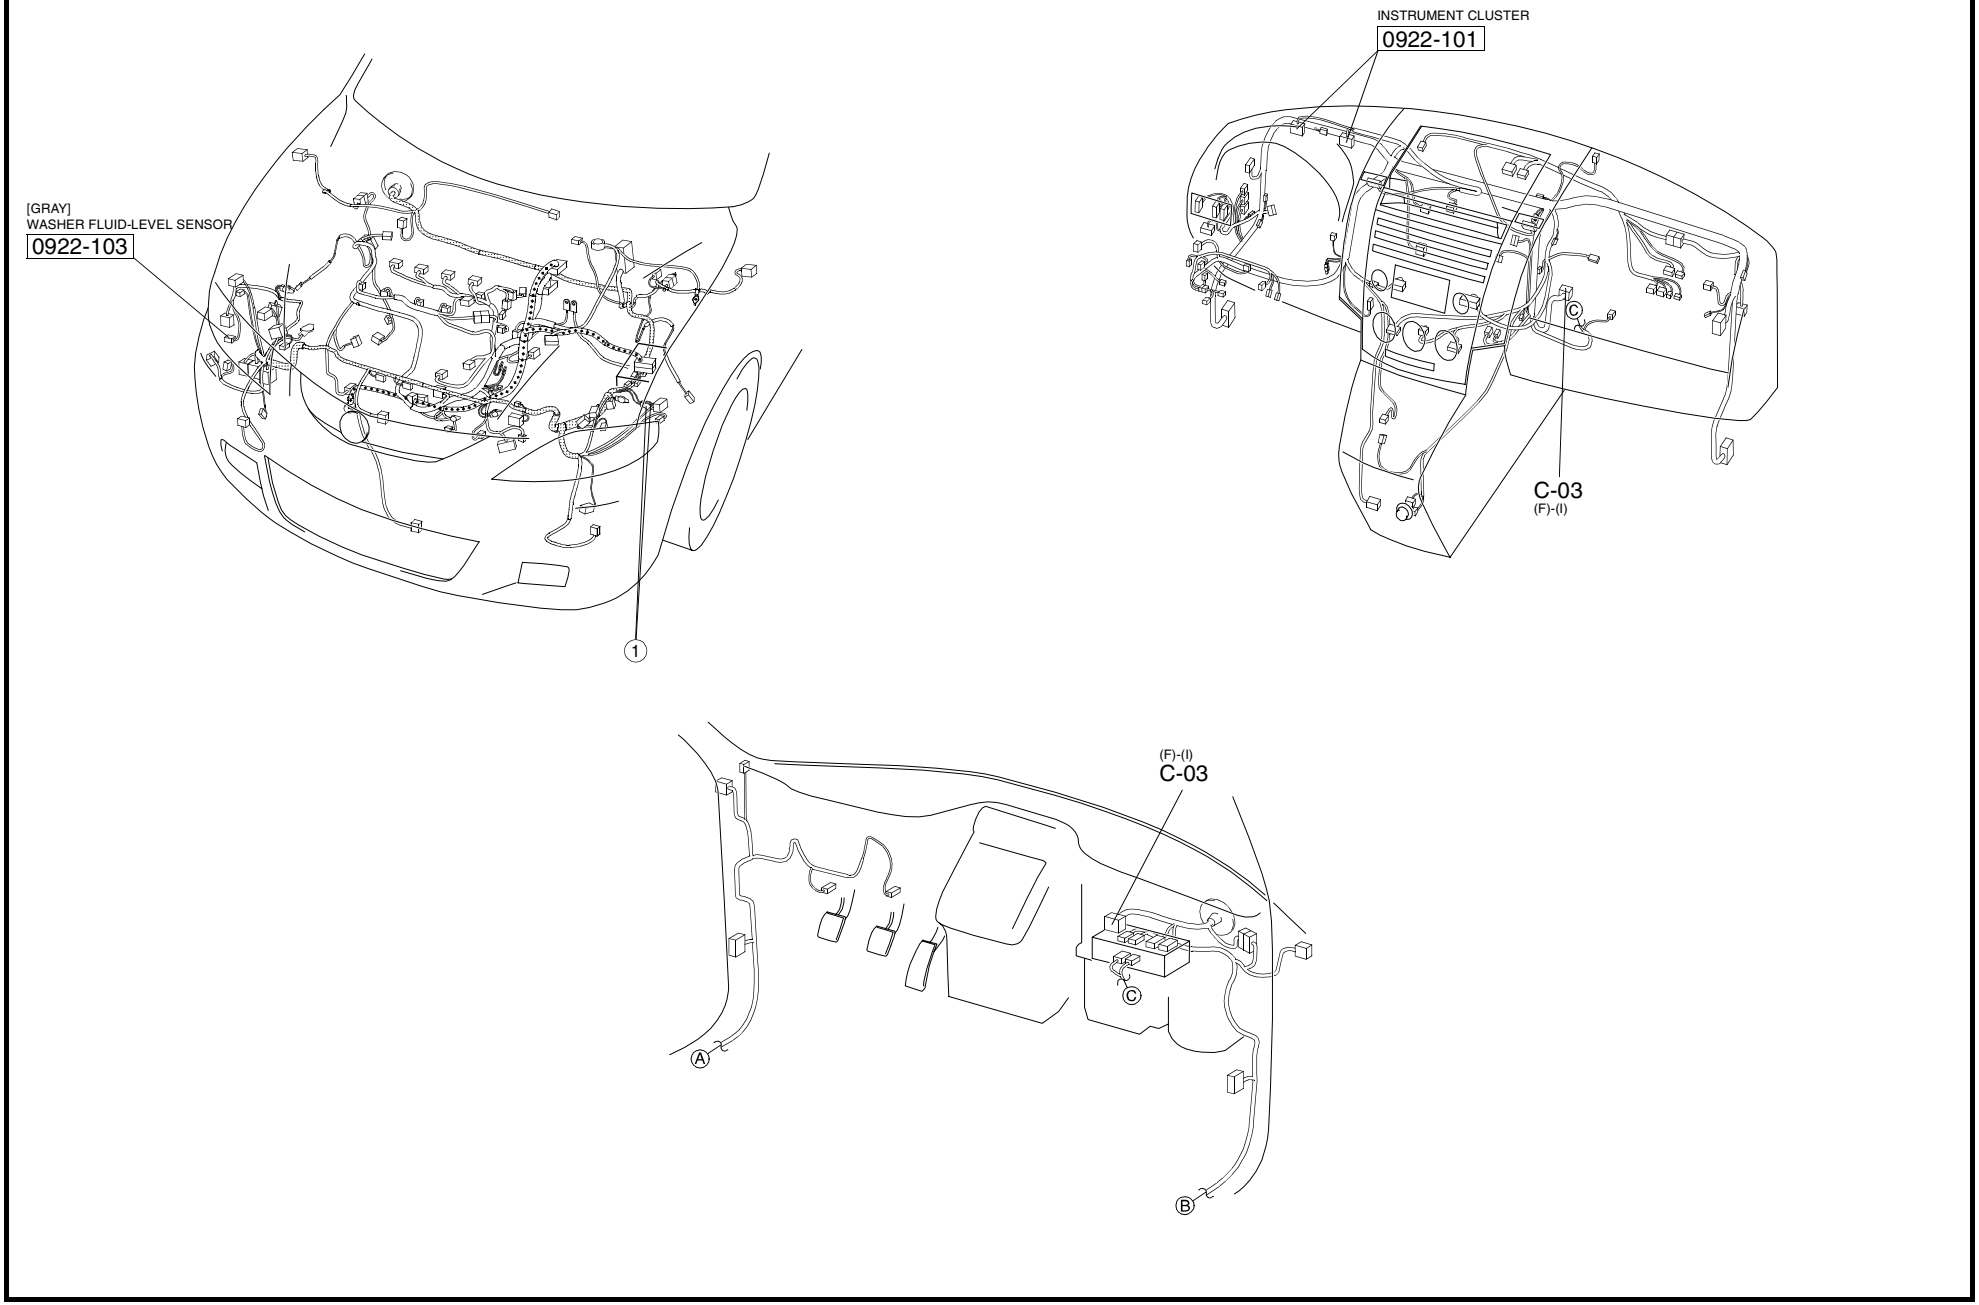

HORN

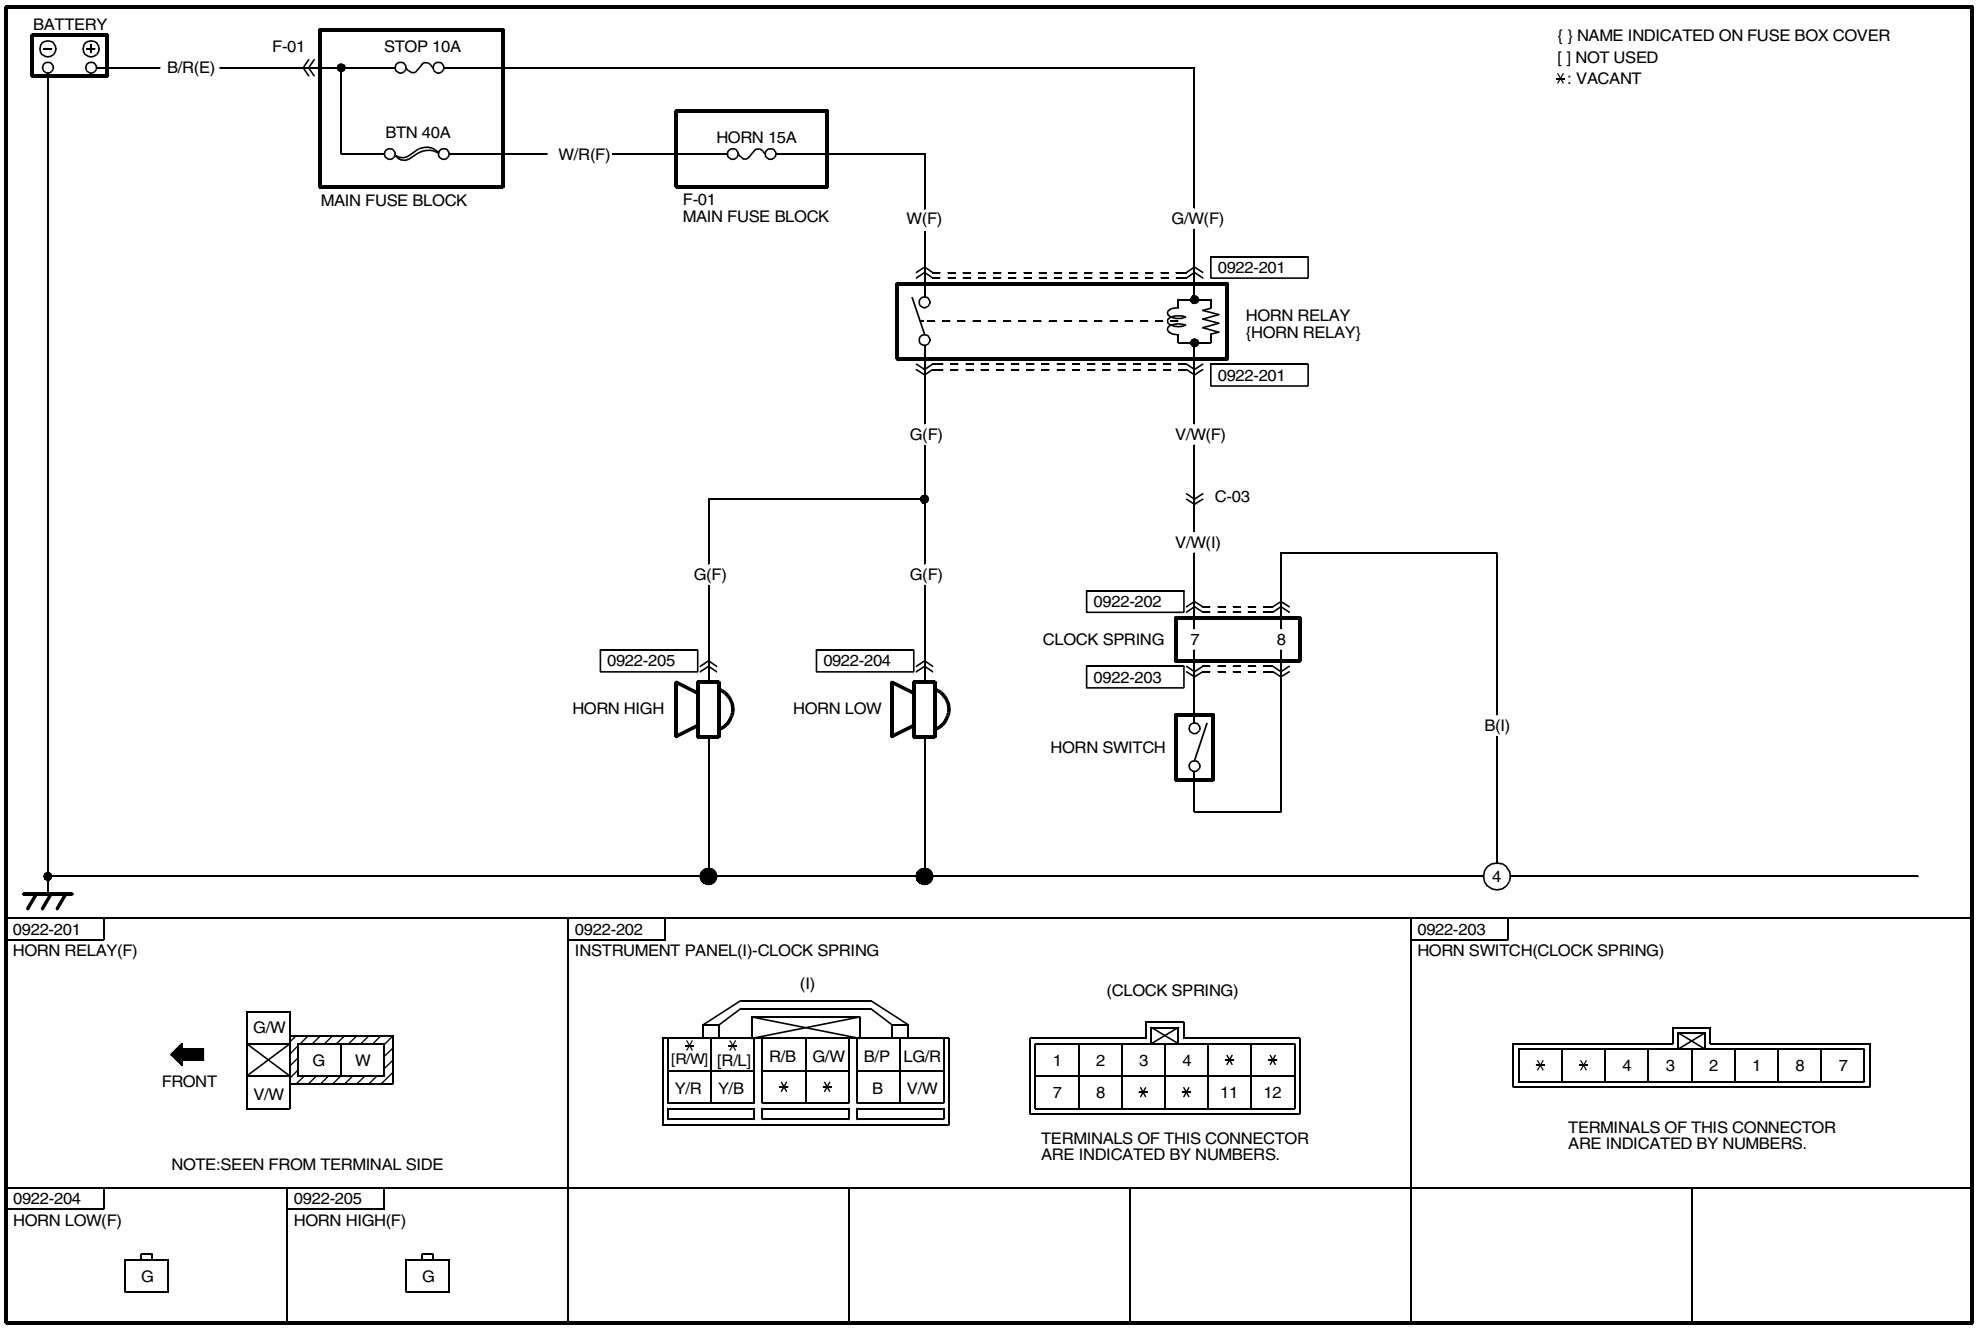

0922-201
HORN RELAY(F)

NOTE:SEEN FROM TERMINAL SIDE

0922-202
INSTRUMENT PANEL(I)-CLOCK SPRING


TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.

0922-203
HORN SWITCH(CLOCK SPRING)


TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.

0922-204
HORN LOW(F)

0922-205
HORN HIGH(F)

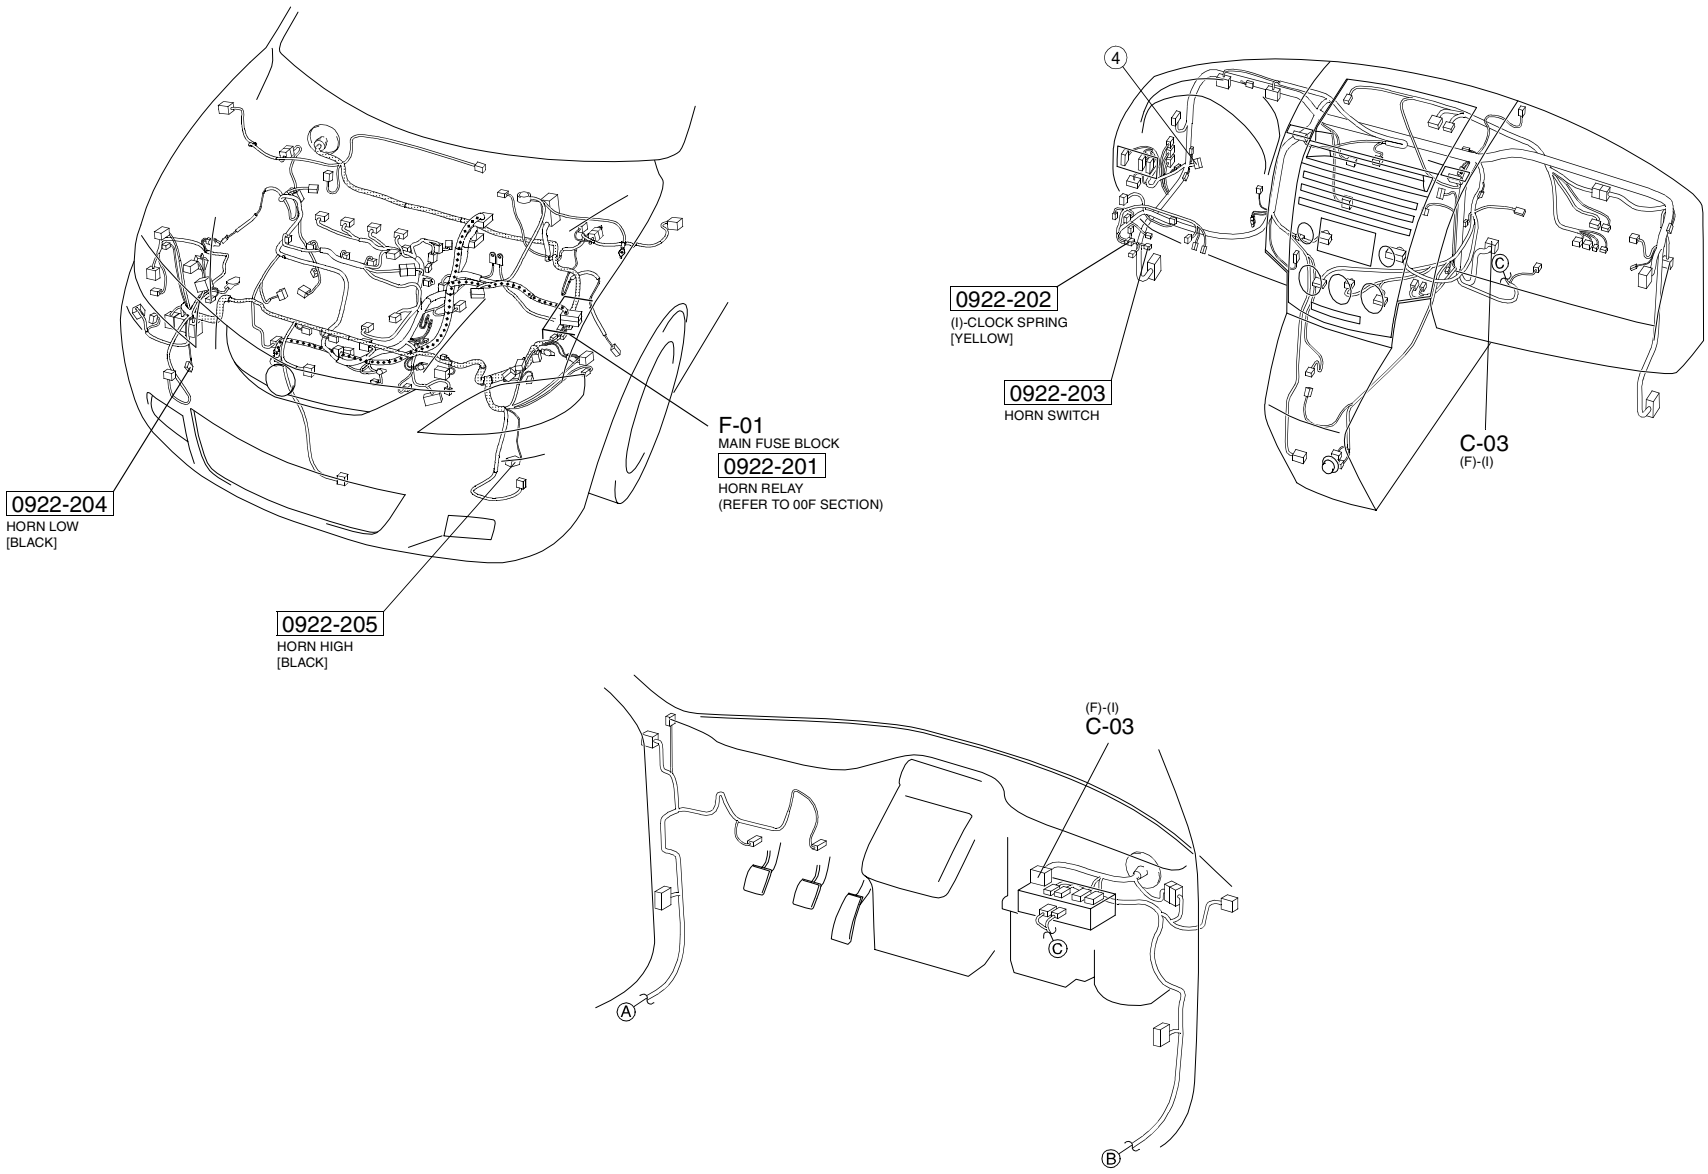
0922-204
HORN LOW
[BLACK]
0922-205
HORN HIGH
[BLACK]
F-01
MAIN FUSE BLOCK
0922-201
HORN RELAY
(REFER TO 00F SECTION)
4
0922-202
(I)-CLOCK SPRING
[YELLOW]
0922-203
HORN SWITCH
C
C-03
(F)-(I)
(F)-(I)
C-03
C
A
B


INFORMATION DISPLAY

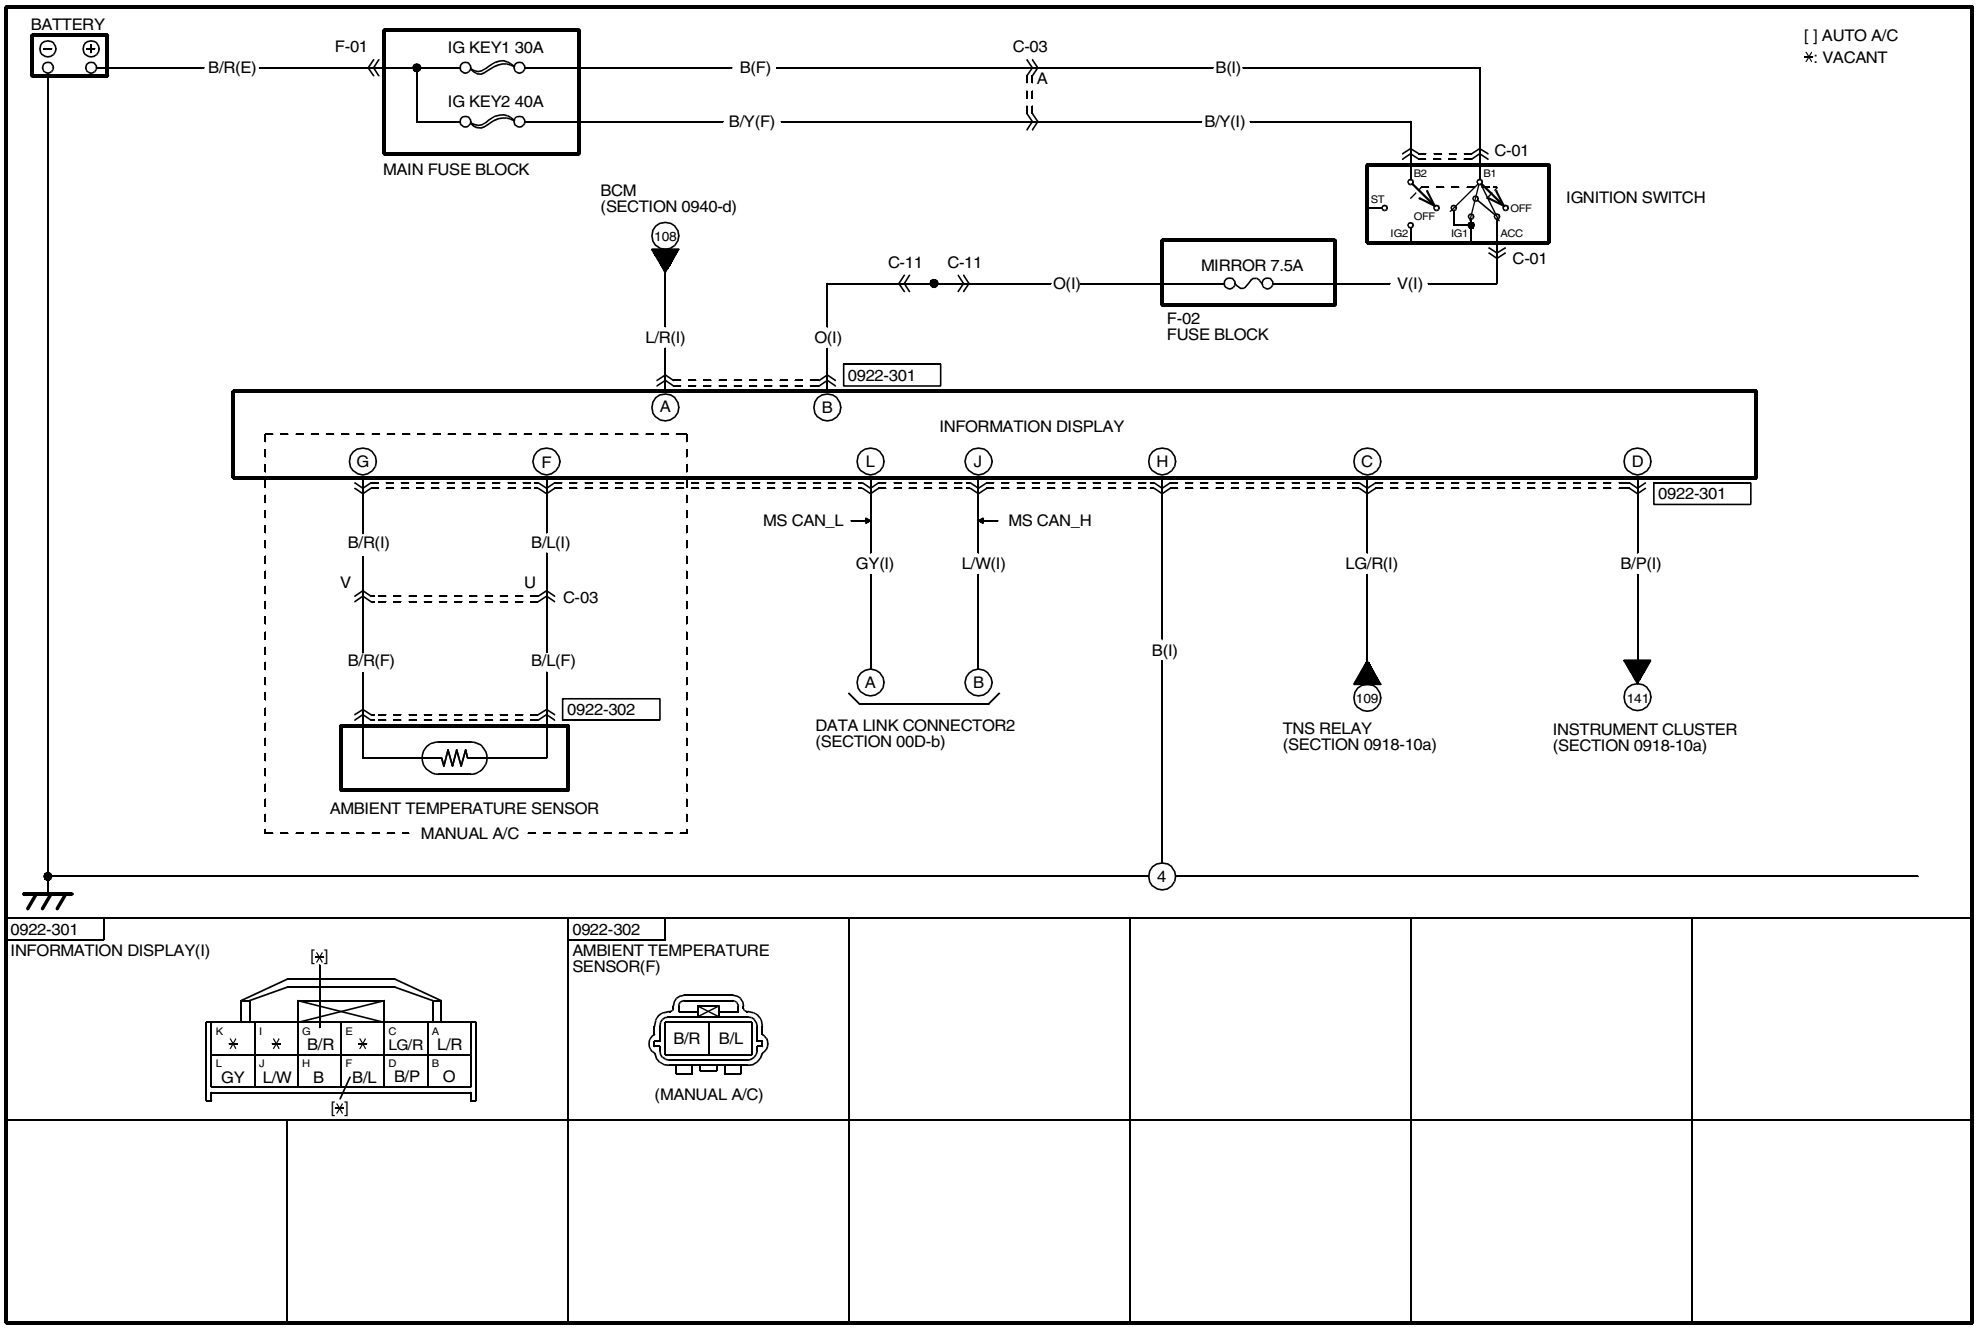



0922-301
INFORMATION DISPLAY(I)

0922-302
AMBIENT TEMPERATURE SENSOR(F)


(MANUAL A/C)

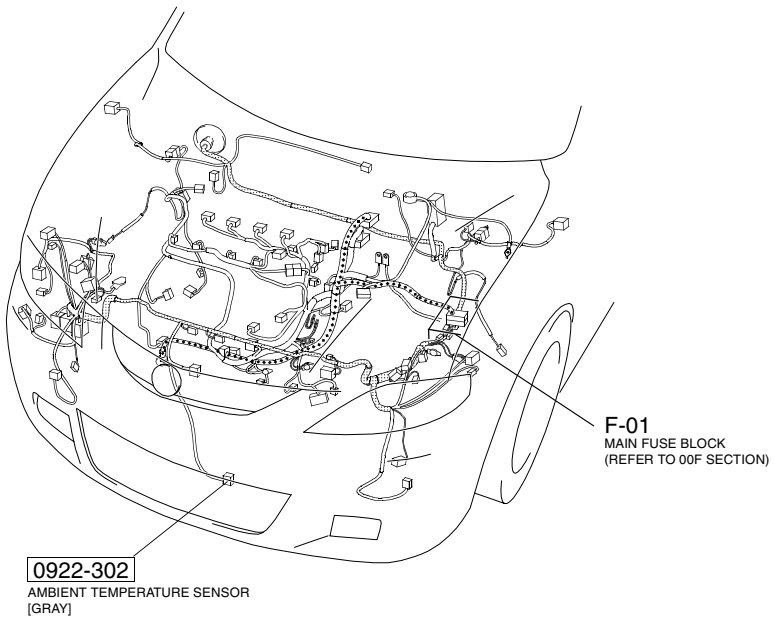
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0922-302
AMBIENT TEMPERATURE SENSOR
[GRAY]

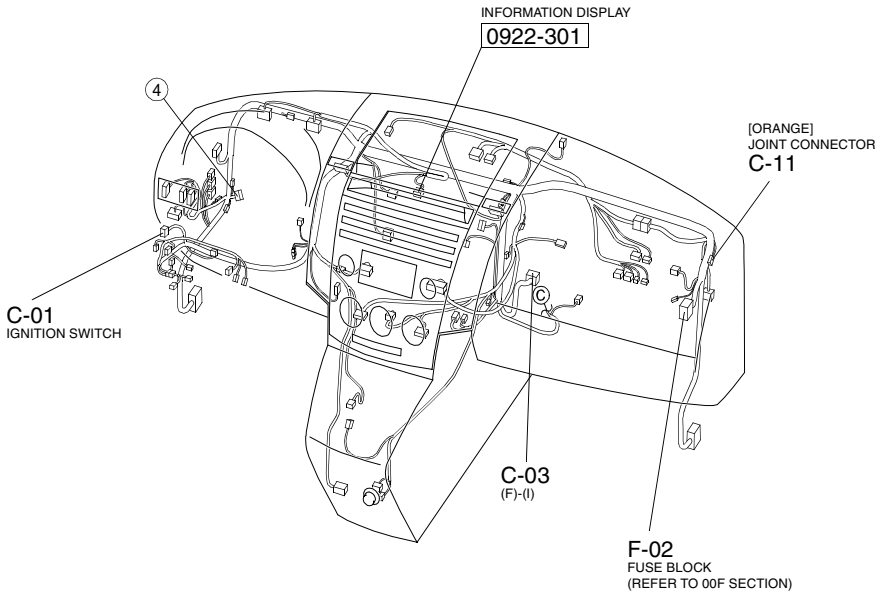
INFORMATION DISPLAY
0922-301
4
[ORANGE]
JOINT CONNECTOR
C-11
C-01
IGNITION SWITCH
C
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)

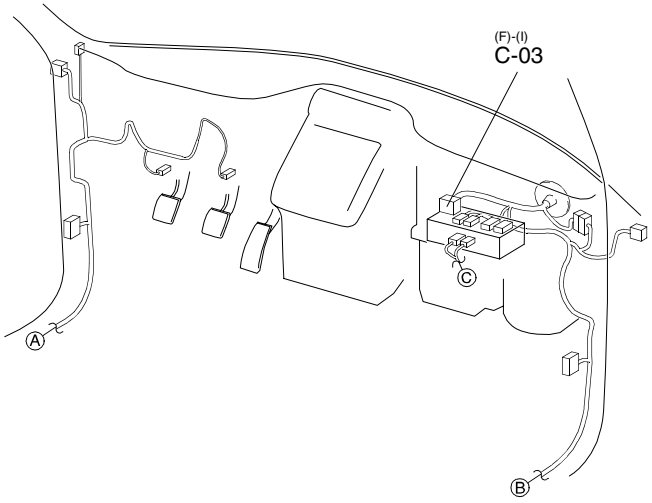
(F)-(I)
C-03
C
A
B

BCM (BODY CONTROL MODULE)

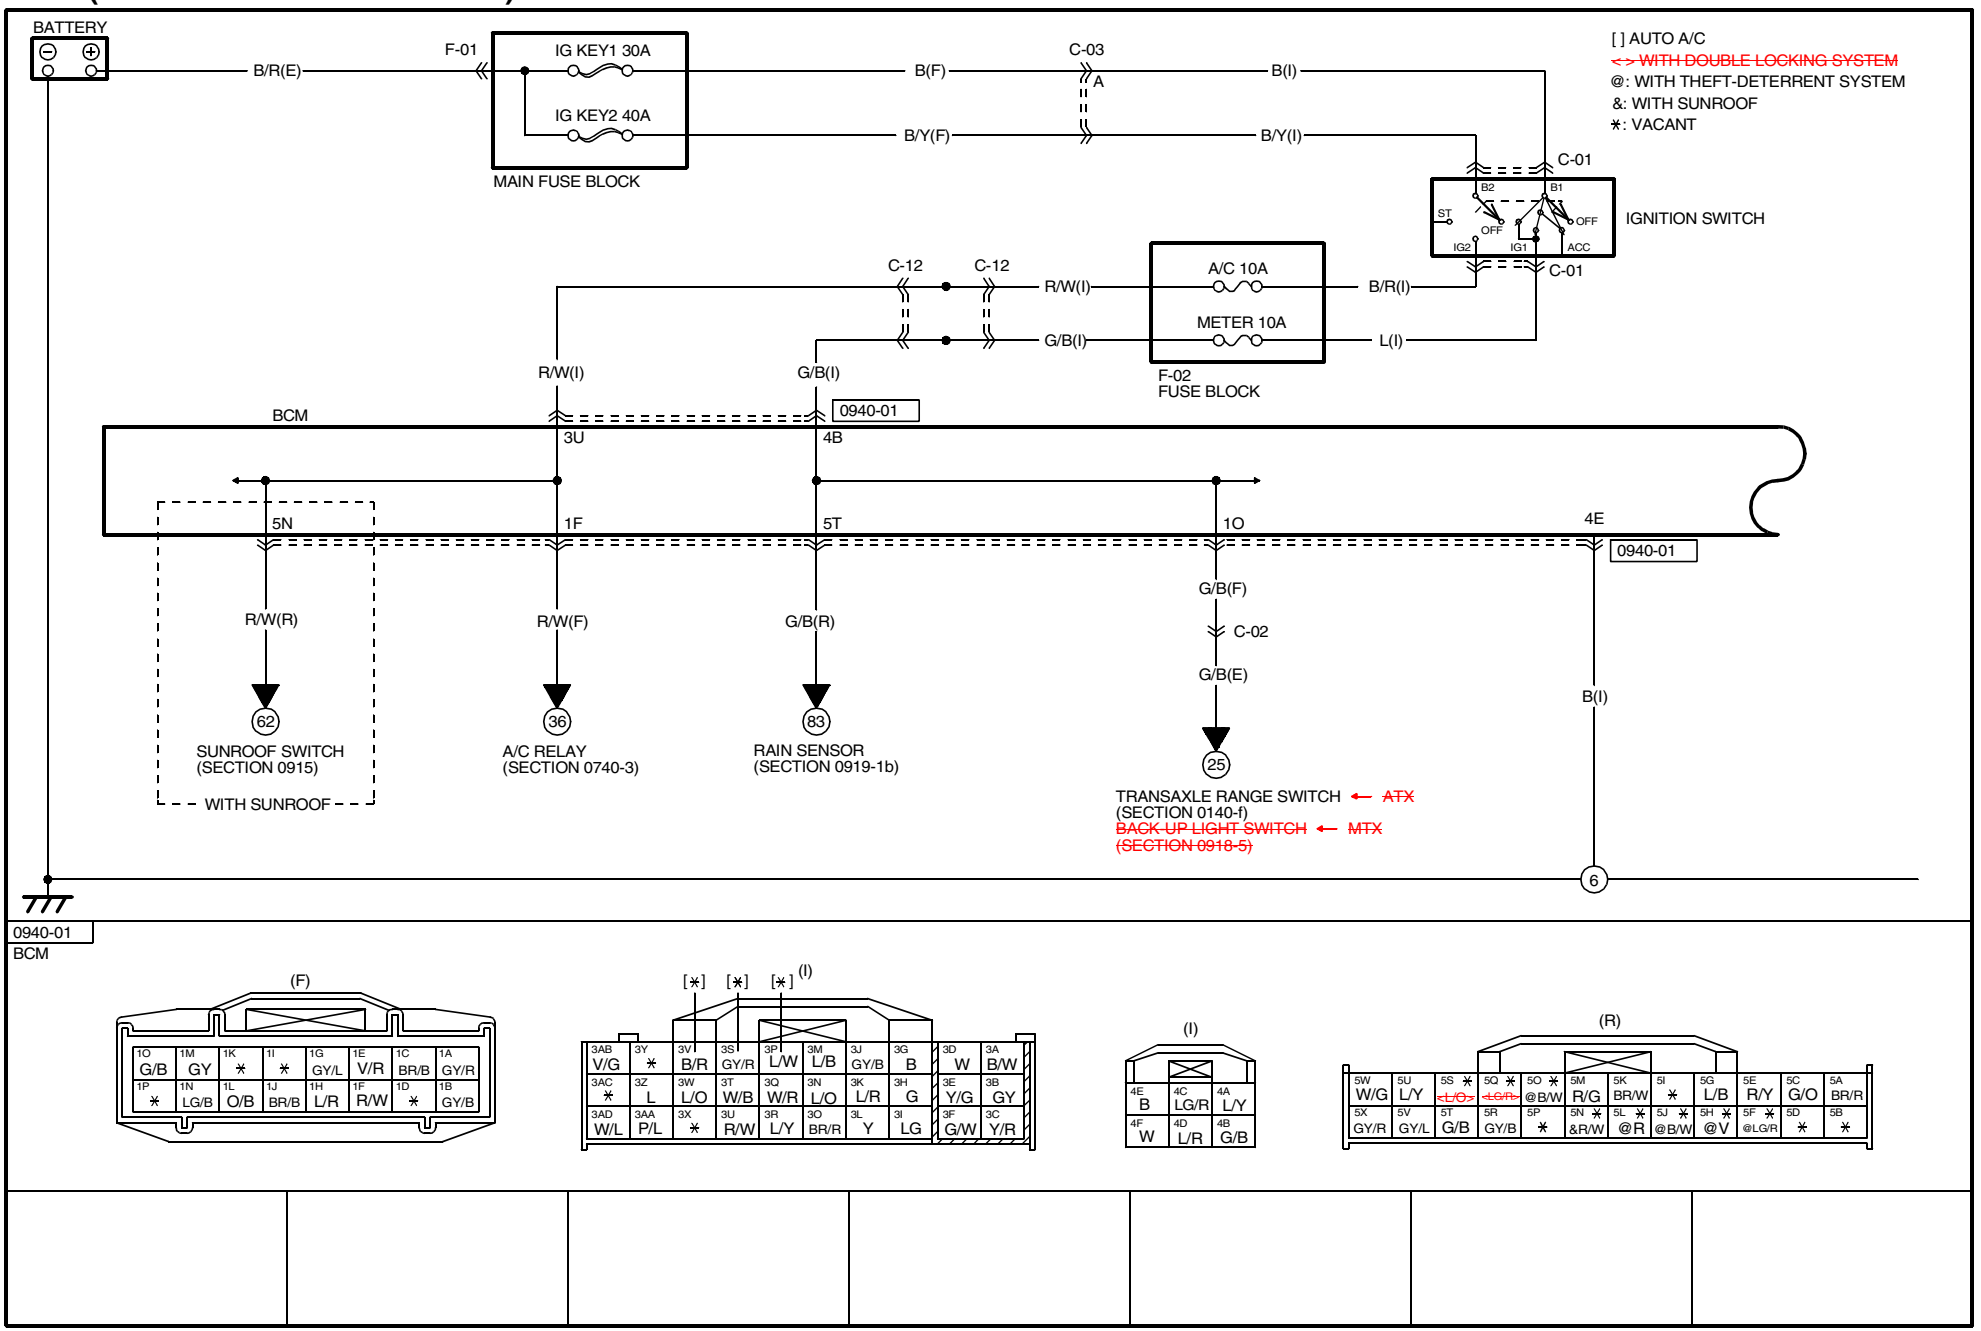

0940-01
BCM

(F)

1O G/B	1M GY	1K *	1I *	1G GY/L	1E V/R	1C BR/B	1A GY/R
1P *	1N LG/B	1L O/B	1J BR/B	1H L/R	1F R/W	1D *	1B GY/B

(I)

3AB V/G	3Y *	3V B/R	3S GY/R	3P L/W	3M L/B	3J GY/B	3G B	3D W	3A B/W
3AC *	3Z L	3W L/O	3T W/B	3Q W/R	3N L/O	3K L/R	3H G	3E Y/G	3B GY
3AD W/L	3AA P/L	3X *	3U R/W	3R L/Y	3O BR/R	3L Y	3I LG	3F G/W	3C Y/R


[*] [*] [*]


(I)


4E B	4C LG/R	4A L/Y
4F W	4D L/R	4B G/B

(R)


5W W/G	5U L/Y	5S * ~~L/O~~	5Q * ~~LG/R~~	5O * @B/W	5M R/G	5K BR/W	5I *	5G L/B	5E R/Y	5C G/O	5A BR/R
5X GY/R	5V GY/L	5T G/B	5R GY/B	5P *	5N * &R/W	5L * @R	5J * @B/W	5H * @V	5F * @LG/R	5D *	5B *

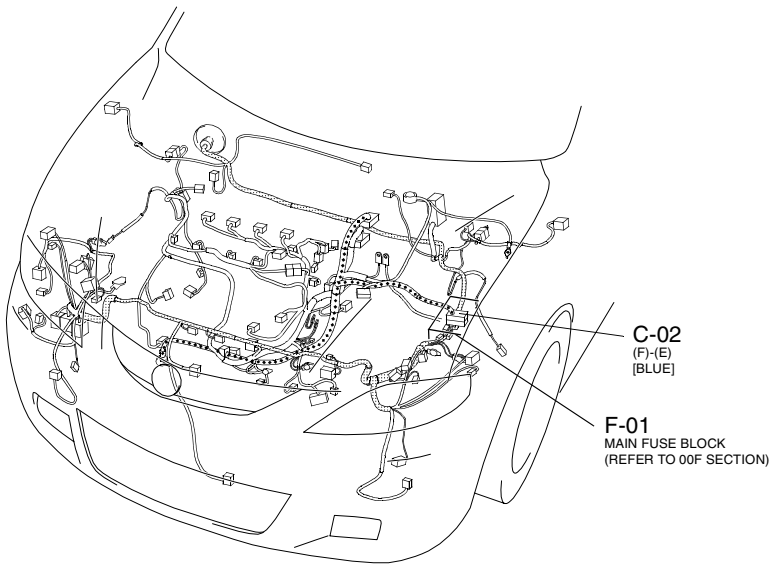

C-02
(F)-(E)
[BLUE]
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

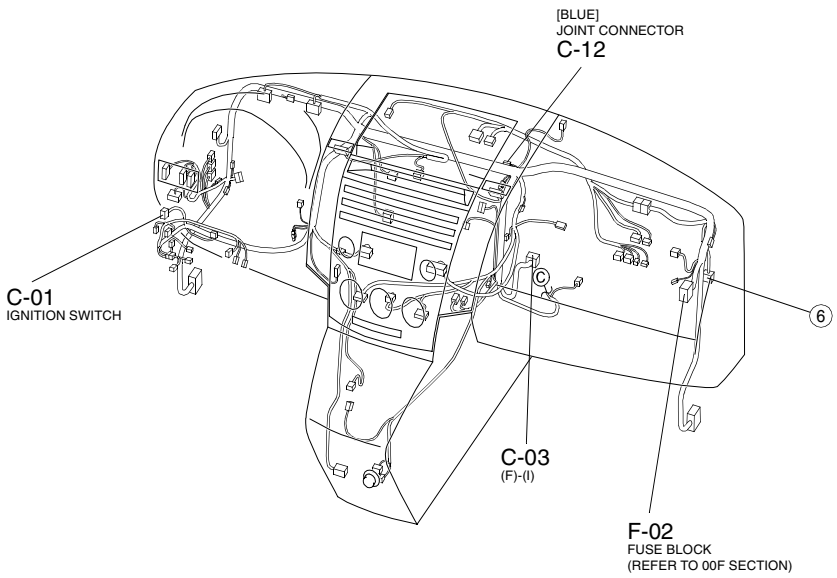

[BLUE]
JOINT CONNECTOR
C-12
C-01
IGNITION SWITCH
C
6
C-03
(F)-(I)
F-02
FUSE BLOCK
(REFER TO 00F SECTION)

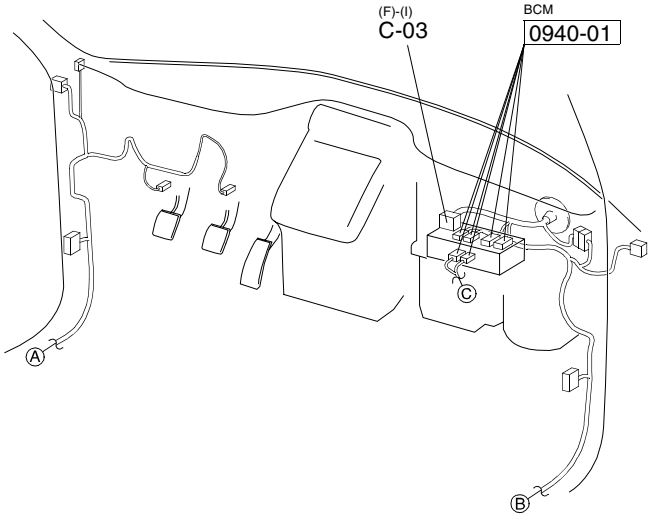
(F)-(I)
C-03
BCM
0940-01
C
A
B


BCM (BODY CONTROL MODULE)

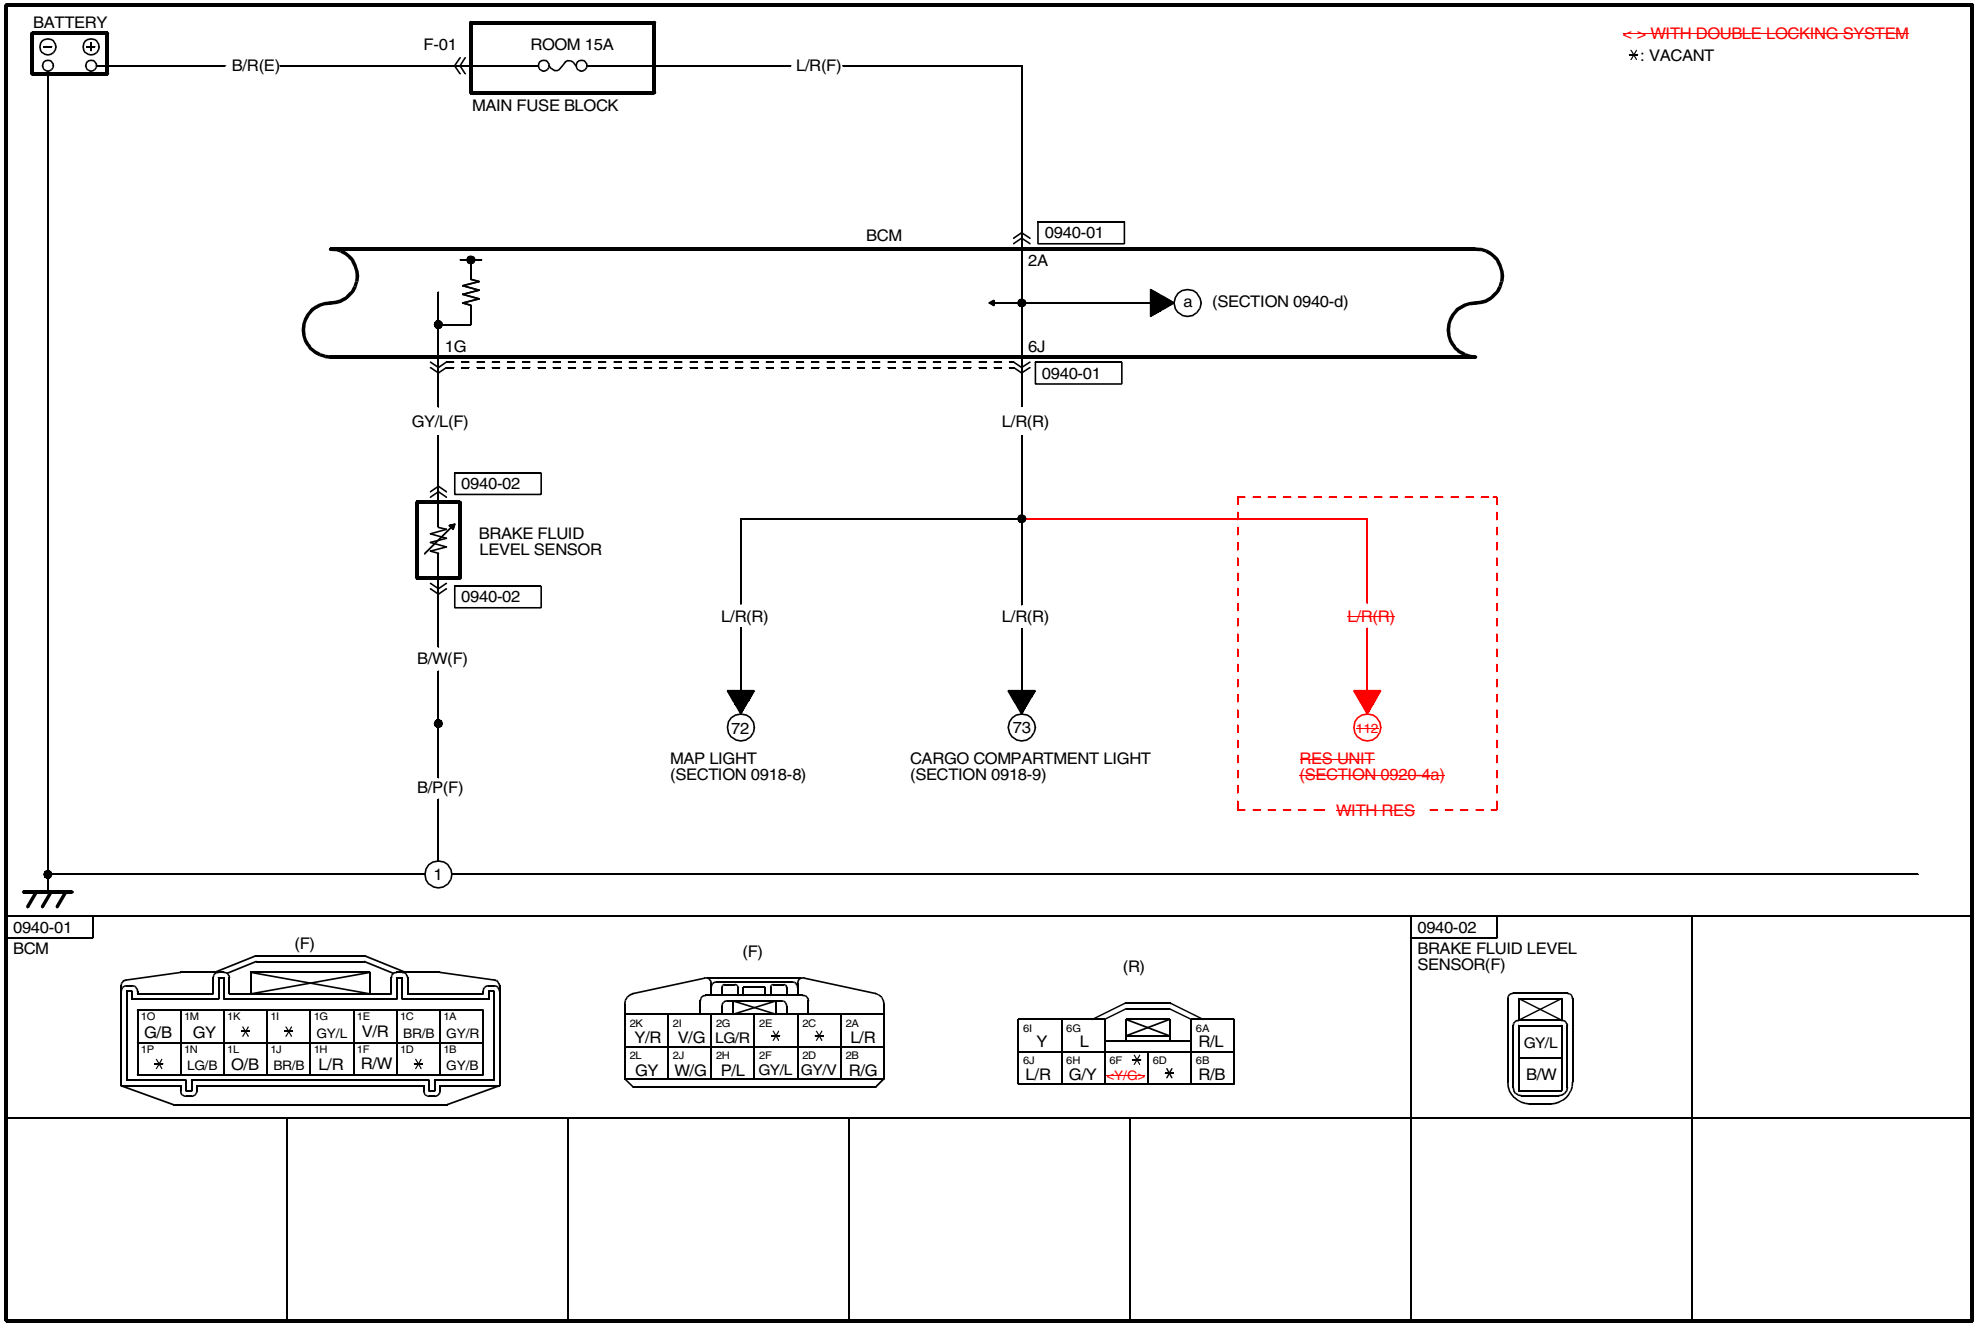

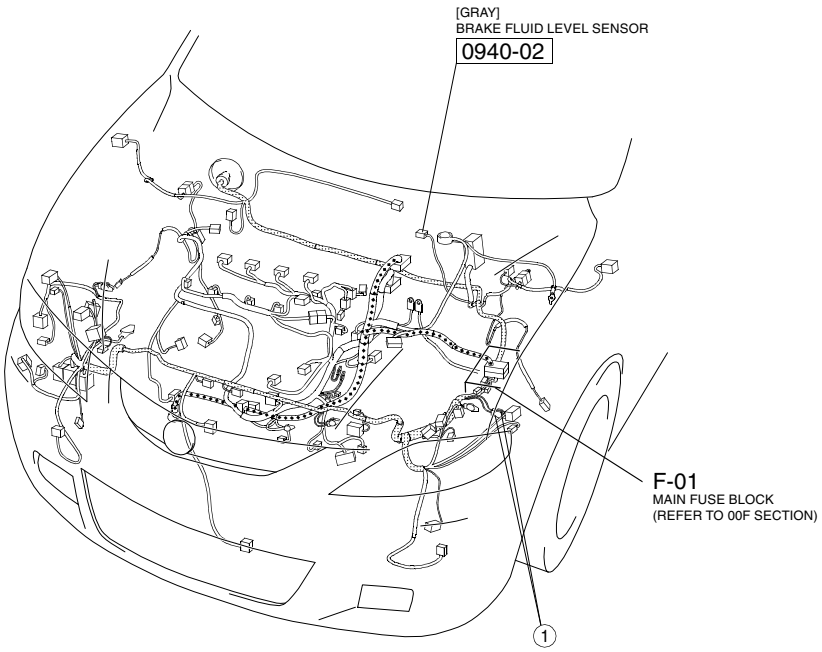
[GRAY]
BRAKE FLUID LEVEL SENSOR
0940-02
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
1

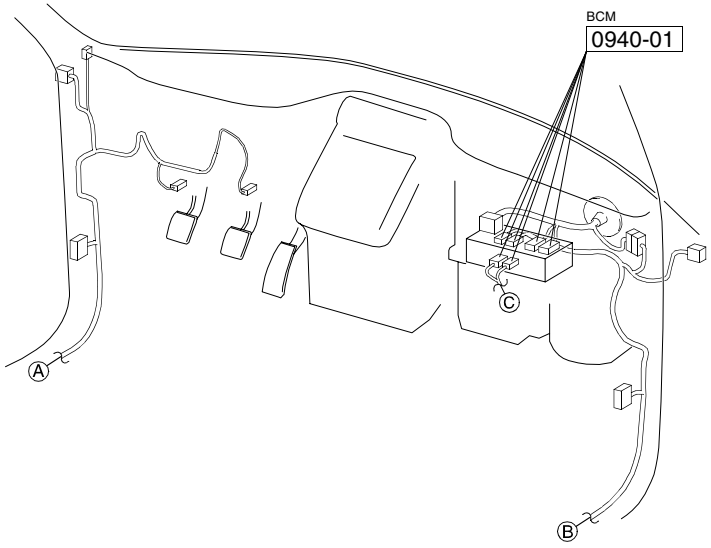
BCM
0940-01
A
B
C

BCM (BODY CONTROL MODULE)

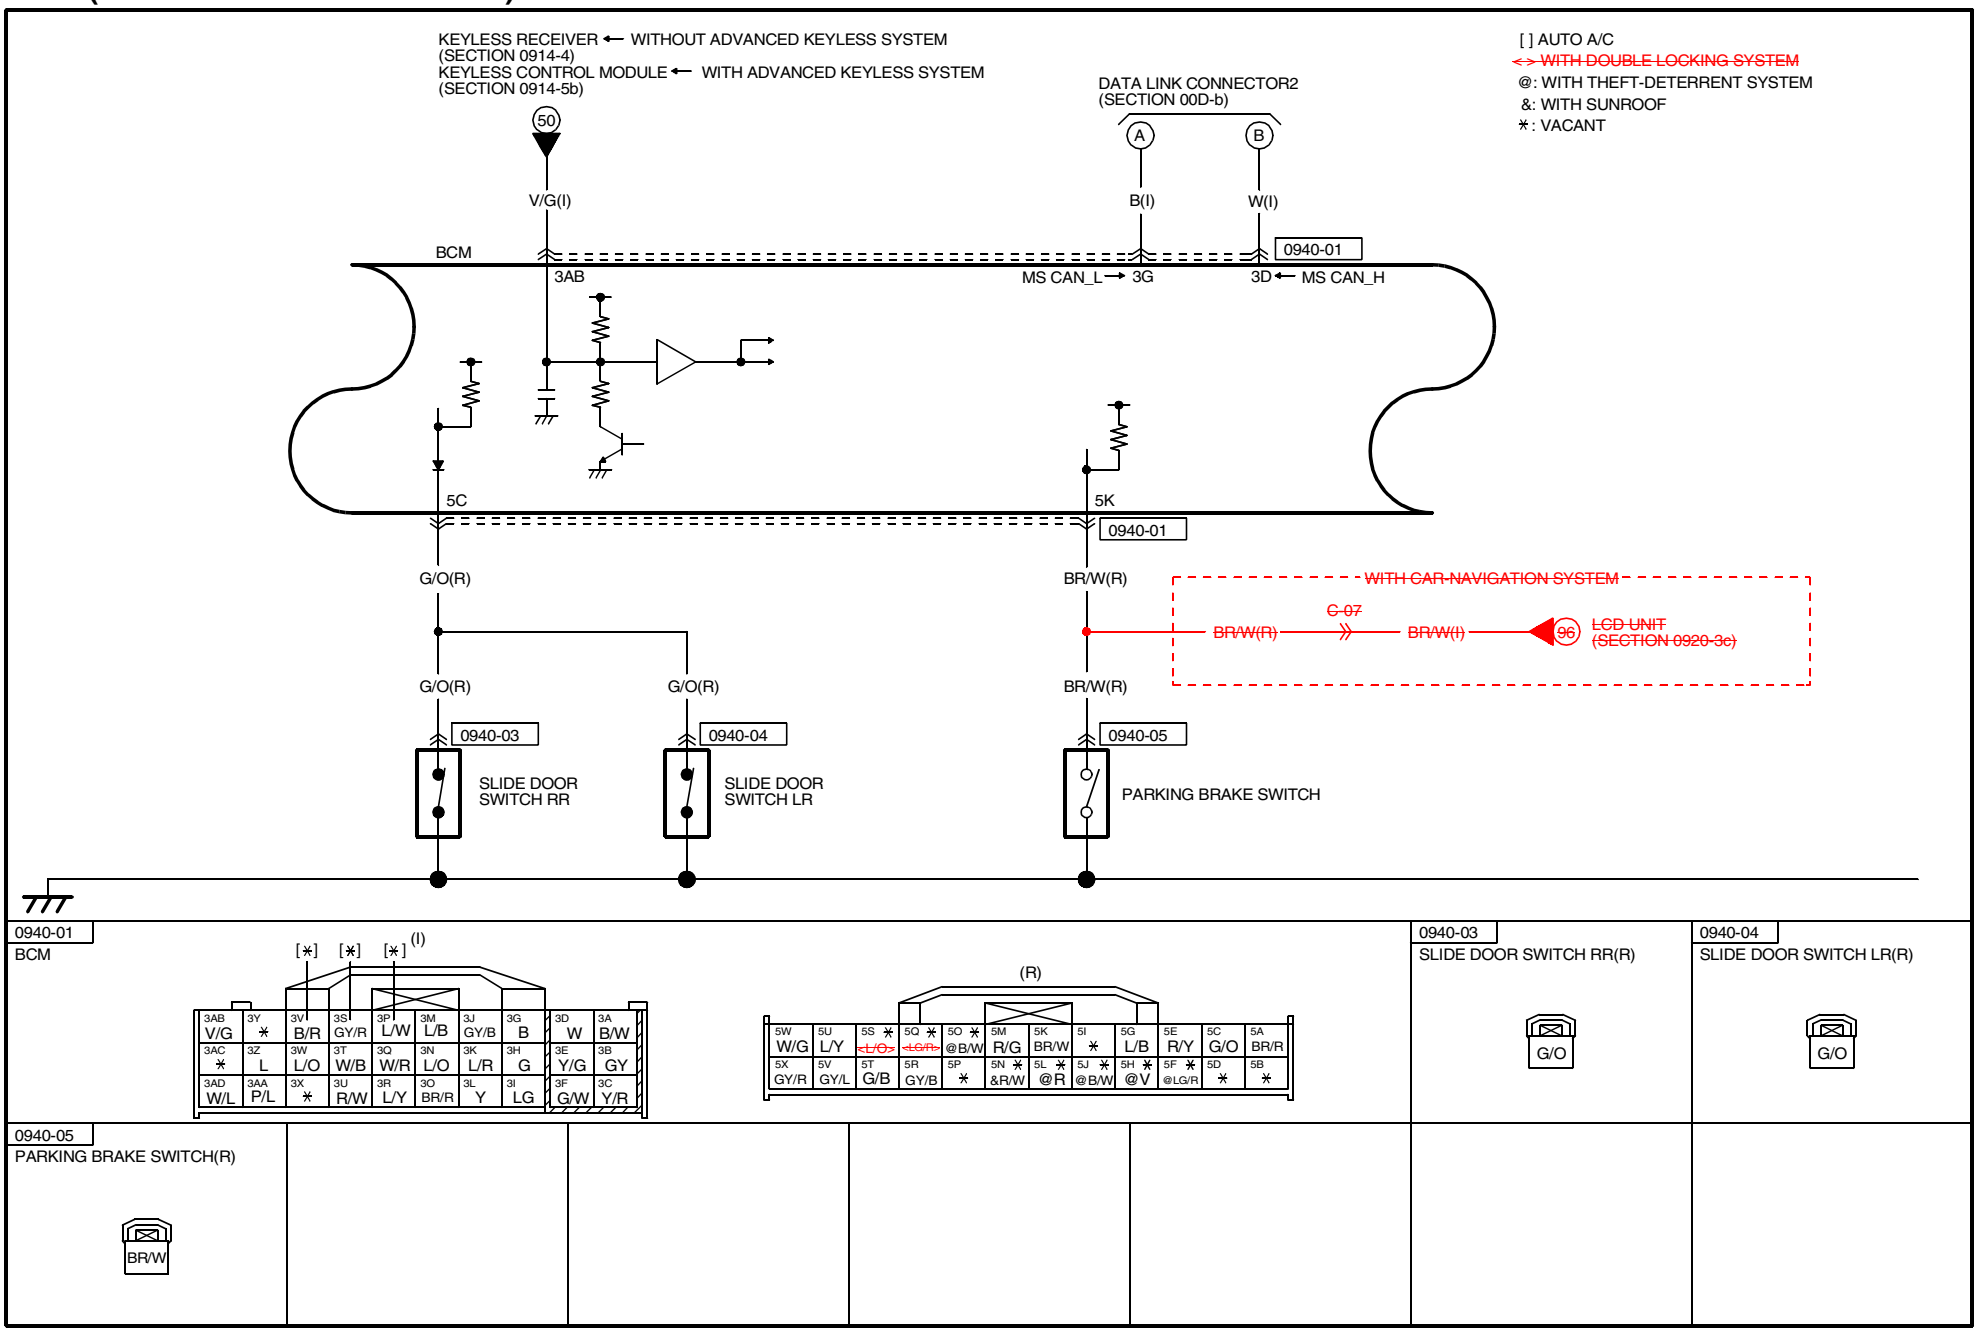



0940-01
BCM


0940-03
SLIDE DOOR SWITCH RR(R)


0940-04
SLIDE DOOR SWITCH LR(R)

0940-05
PARKING BRAKE SWITCH(R)

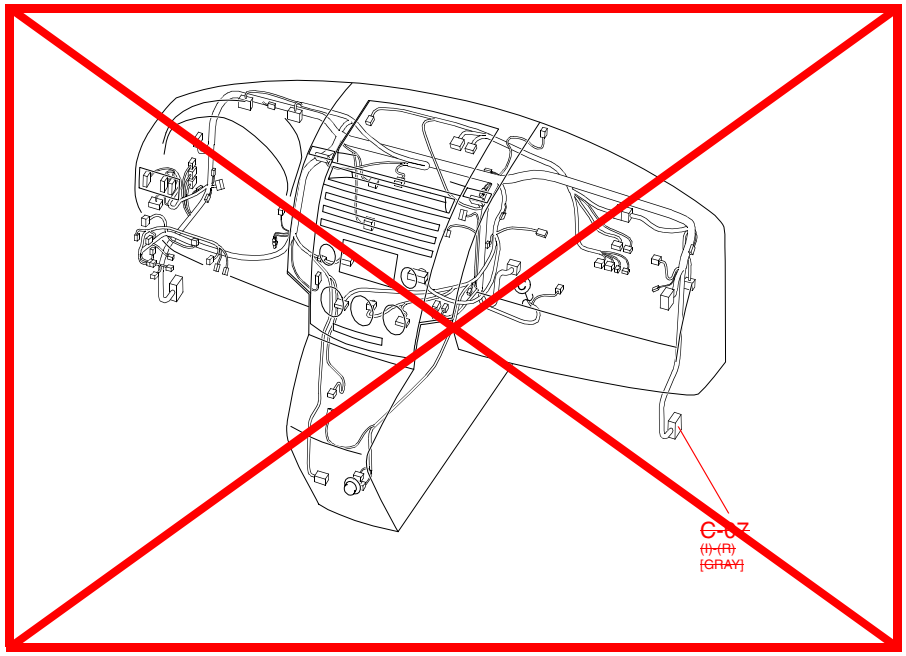
~~C-07~~
~~(I)-(R)~~
~~[GRAY]~~

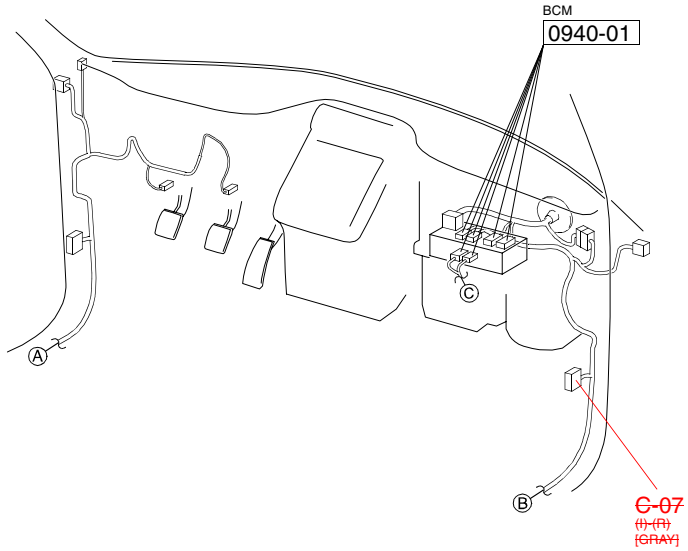
BCM
0940-01
A
B
C
~~C-07~~
~~(I)-(R)~~
~~[GRAY]~~

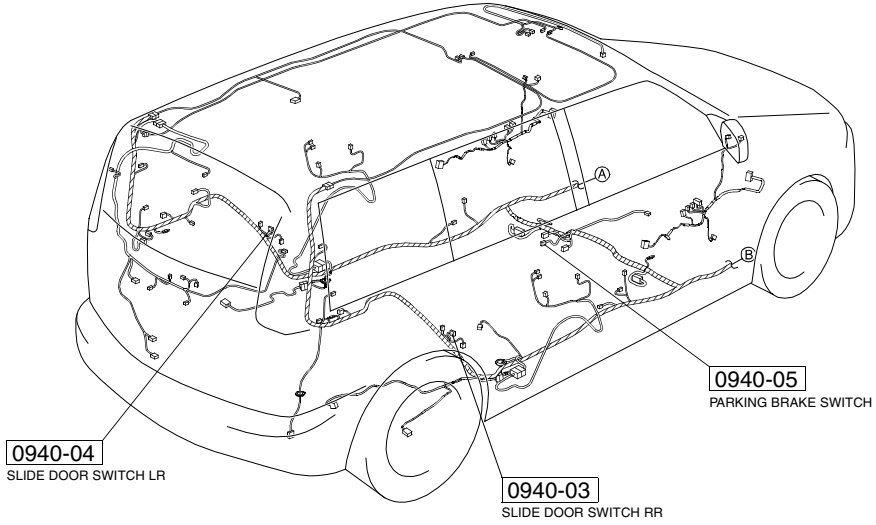

0940-04
SLIDE DOOR SWITCH LR
0940-03
SLIDE DOOR SWITCH RR
0940-05
PARKING BRAKE SWITCH

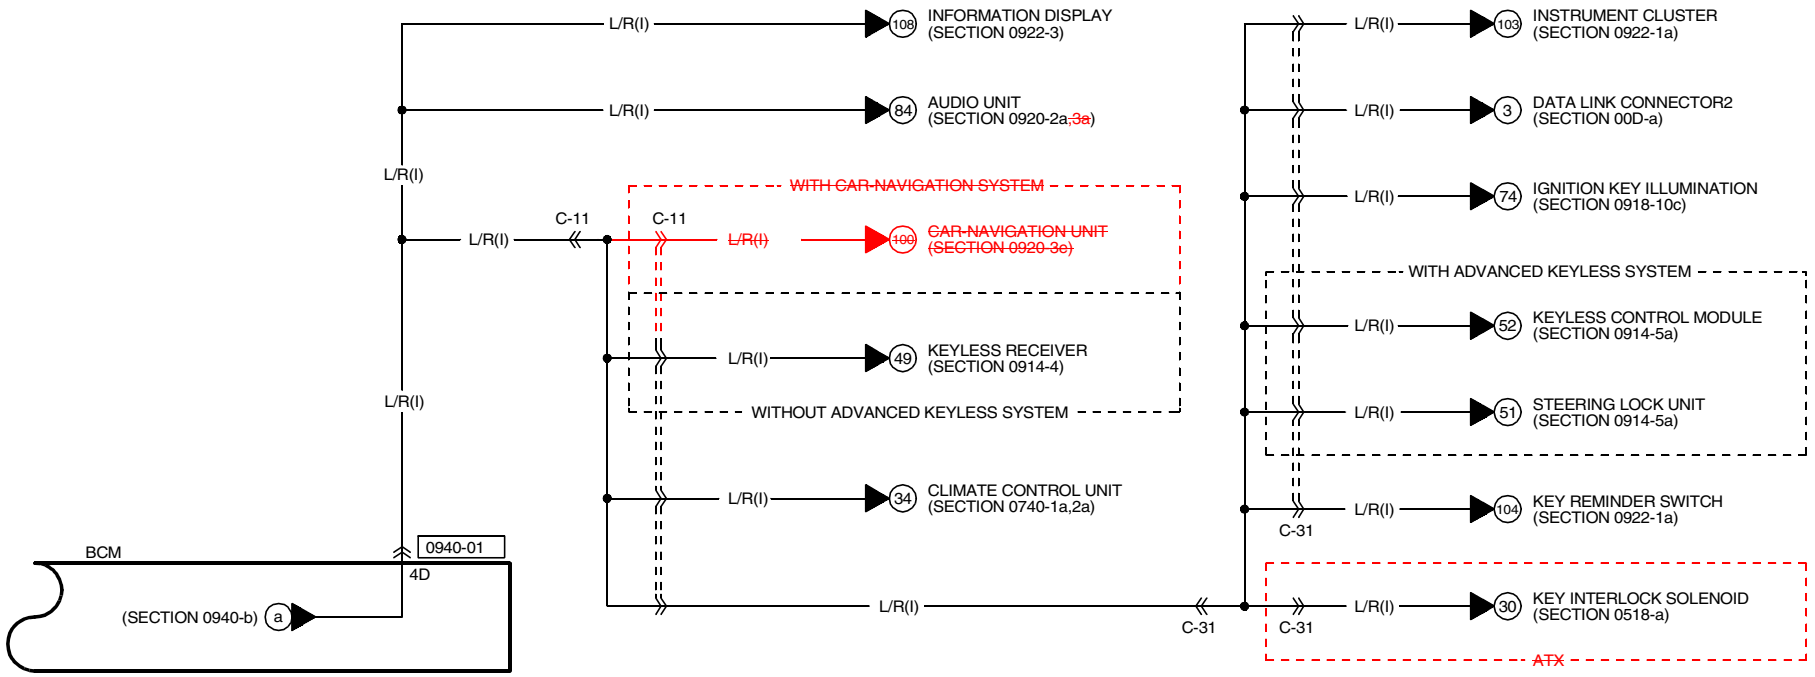


0940-01
BCM

(I)

4E B	4C LG/R	4A L/Y
4F W	4D L/R	4B G/B

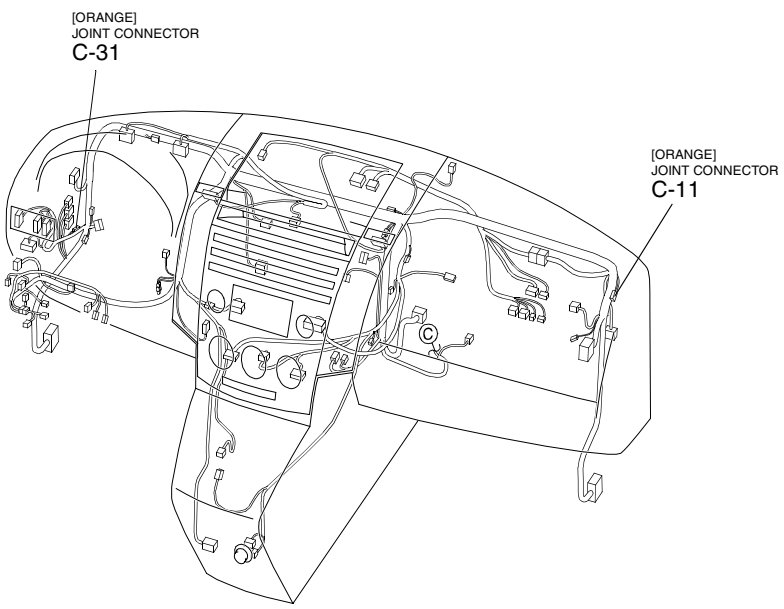
[ORANGE]
JOINT CONNECTOR
C-31
[ORANGE]
JOINT CONNECTOR
C-11
C

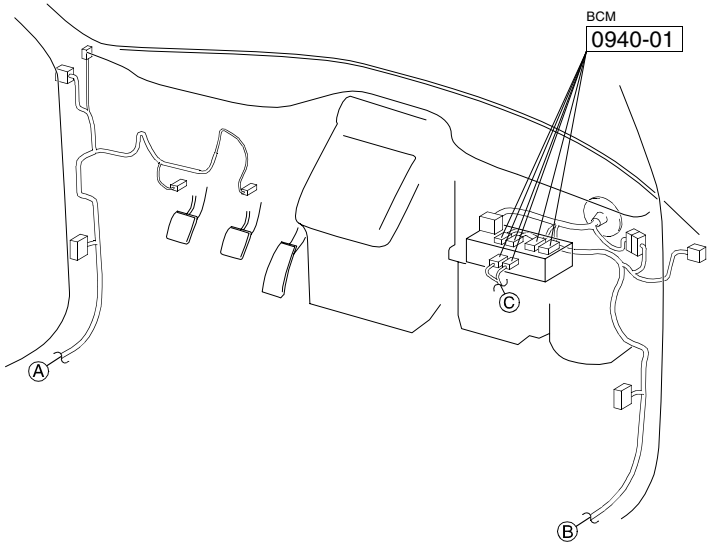
BCM
0940-01
A
B
C