
Radio/Cassette/CD/Speakers


1995-97 318ti 10 Speaker System

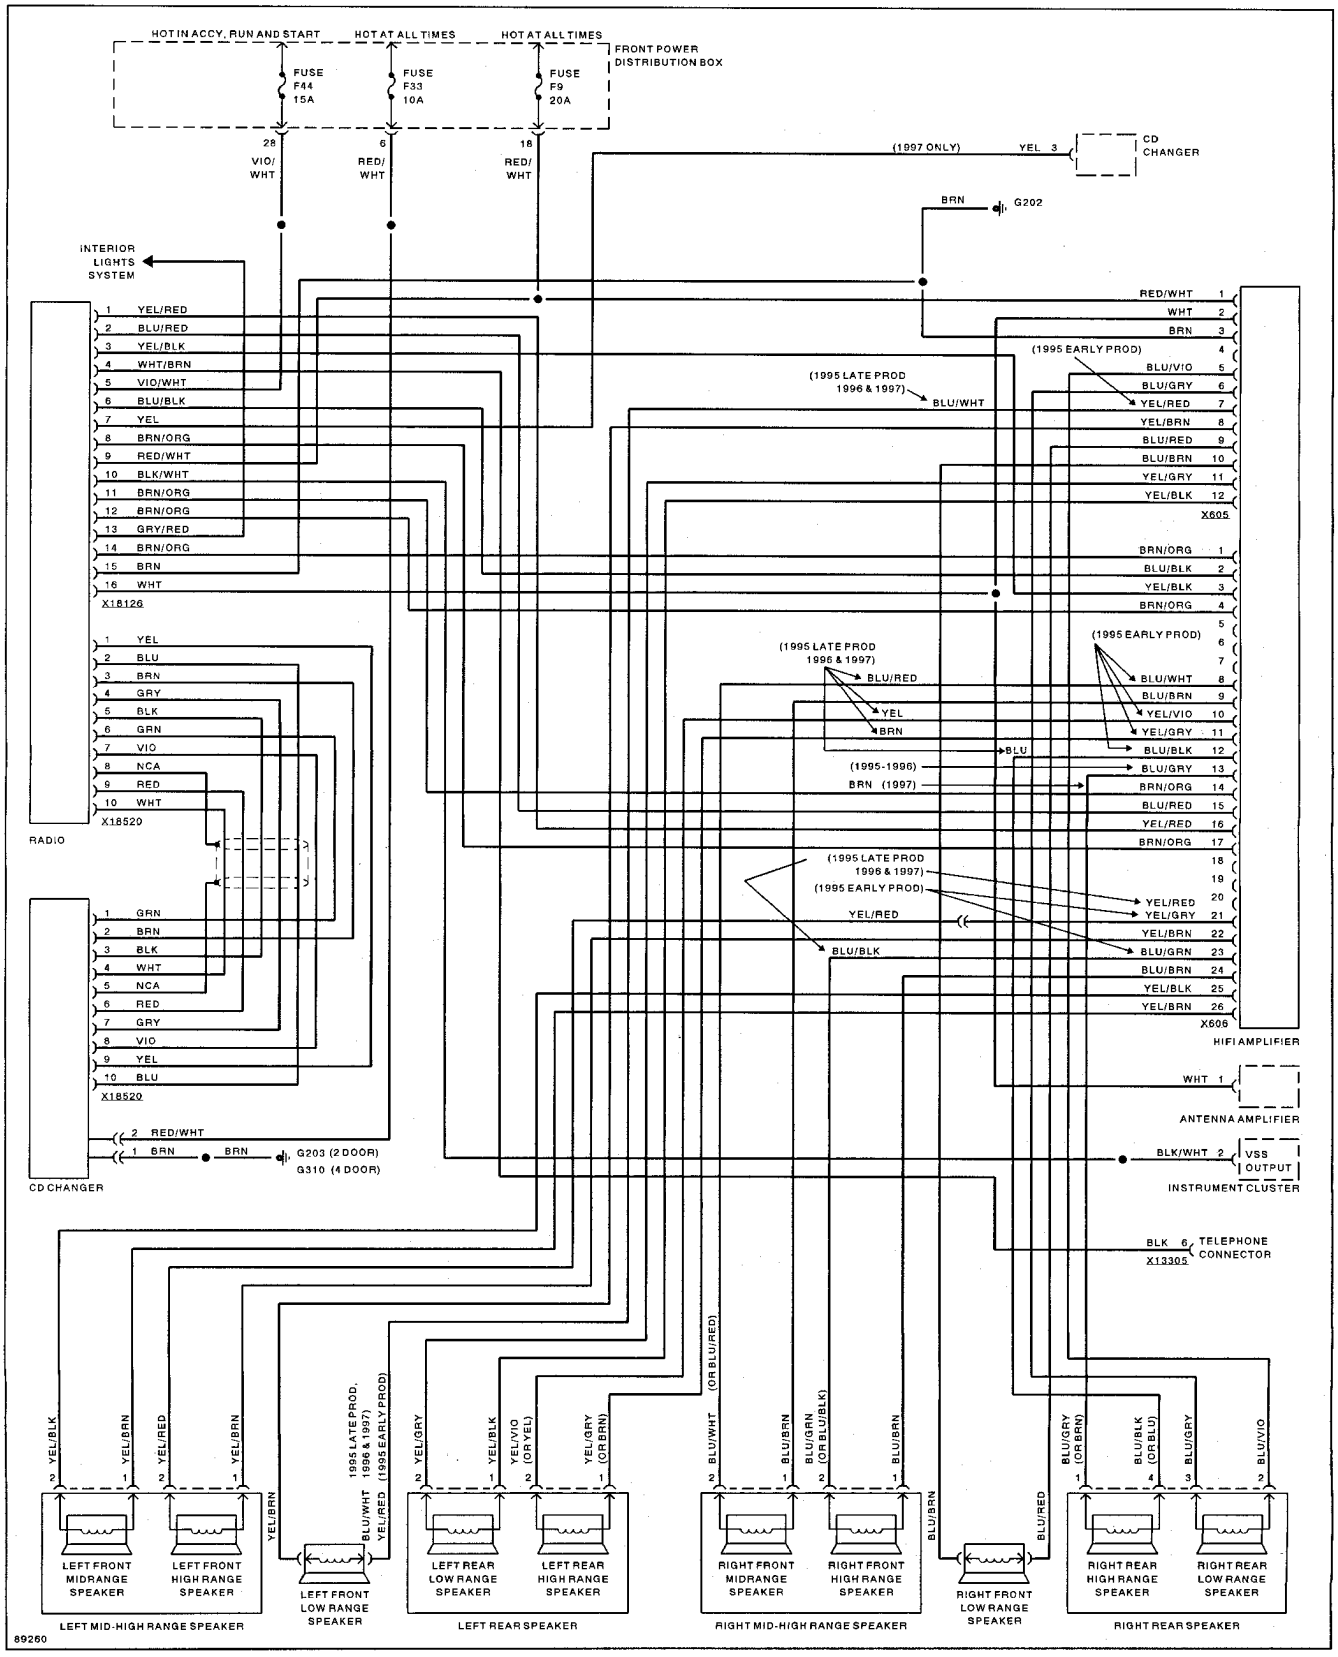

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Radio/Cassette/CD/Speakers

1994-97 Except 318ti 10 Speaker System

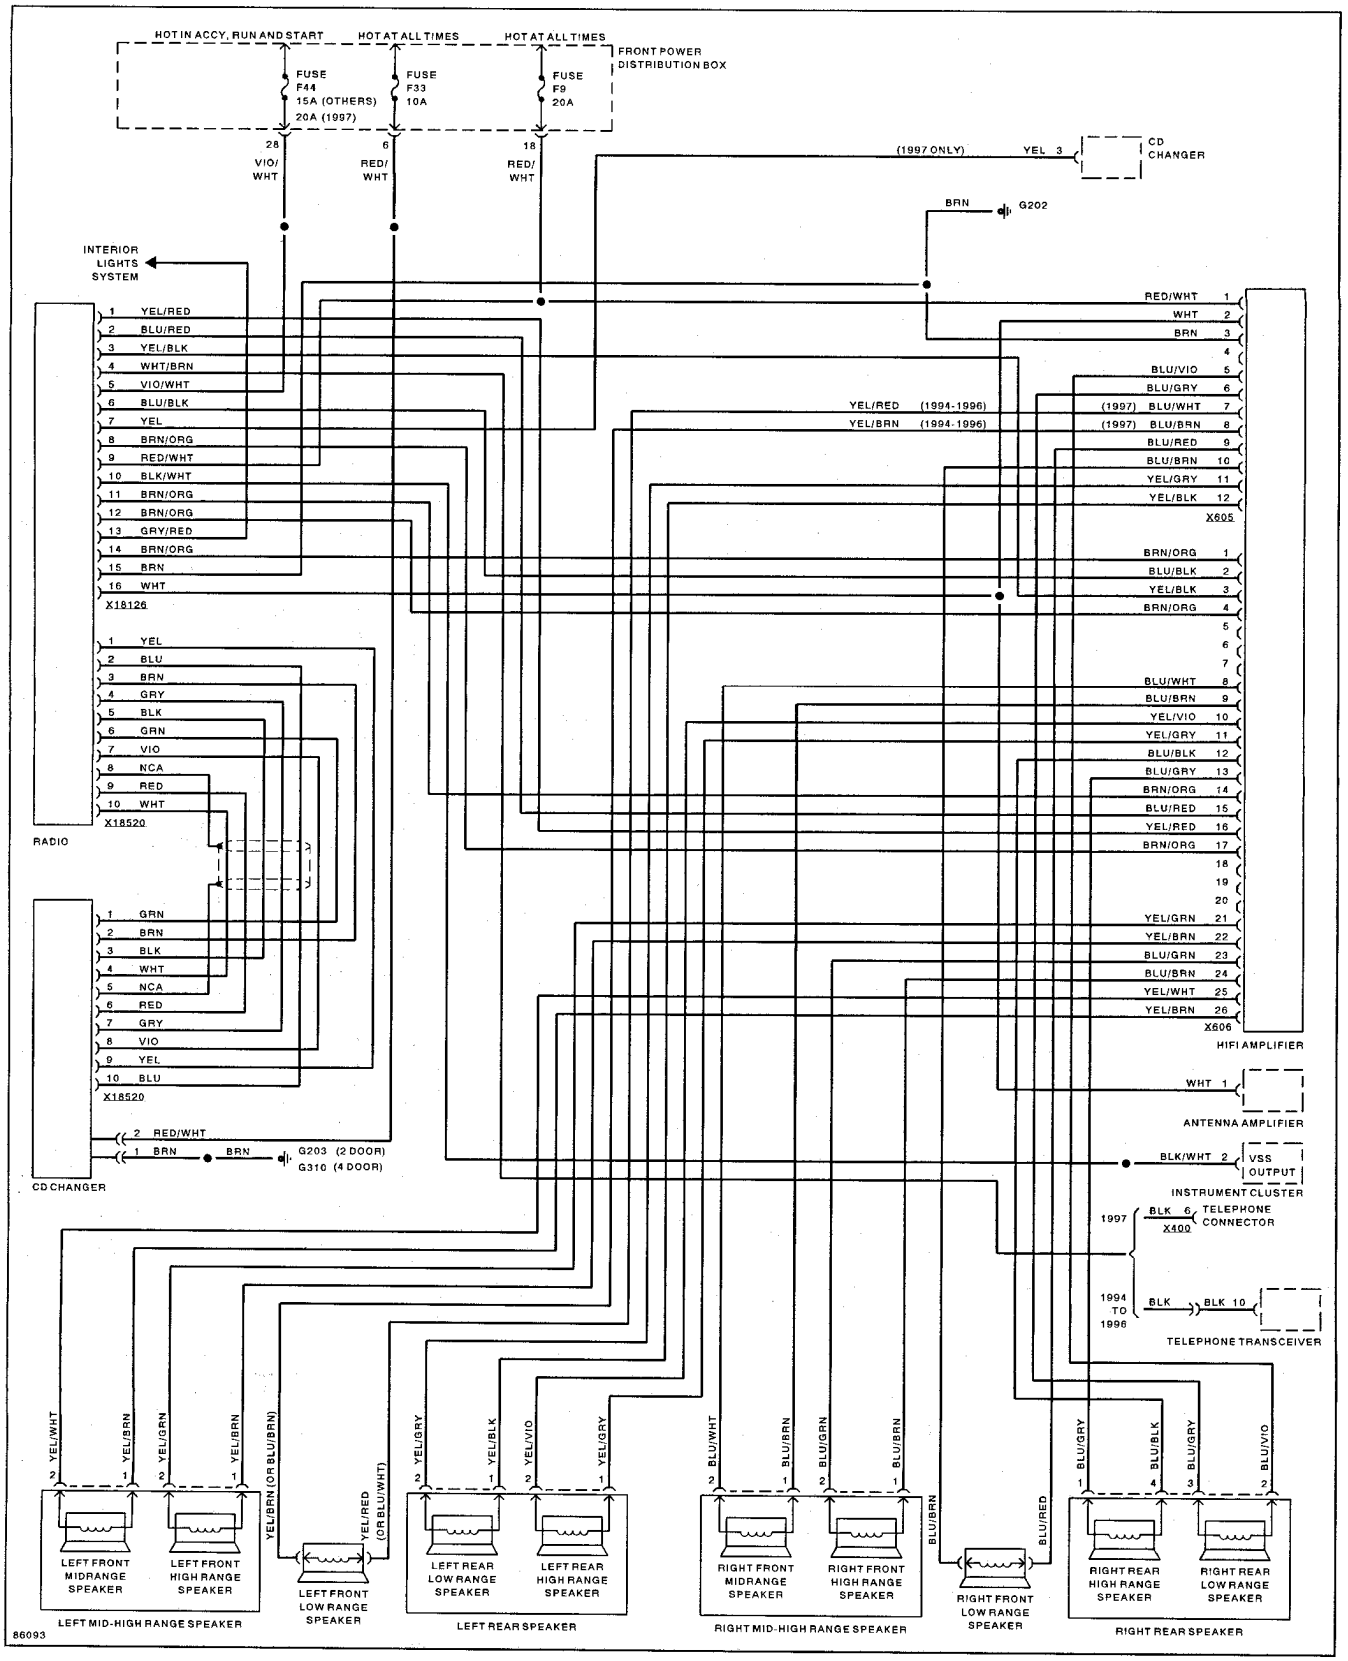


Radio/Cassette/CD/Speakers

1993 Late Production 10 Speaker System

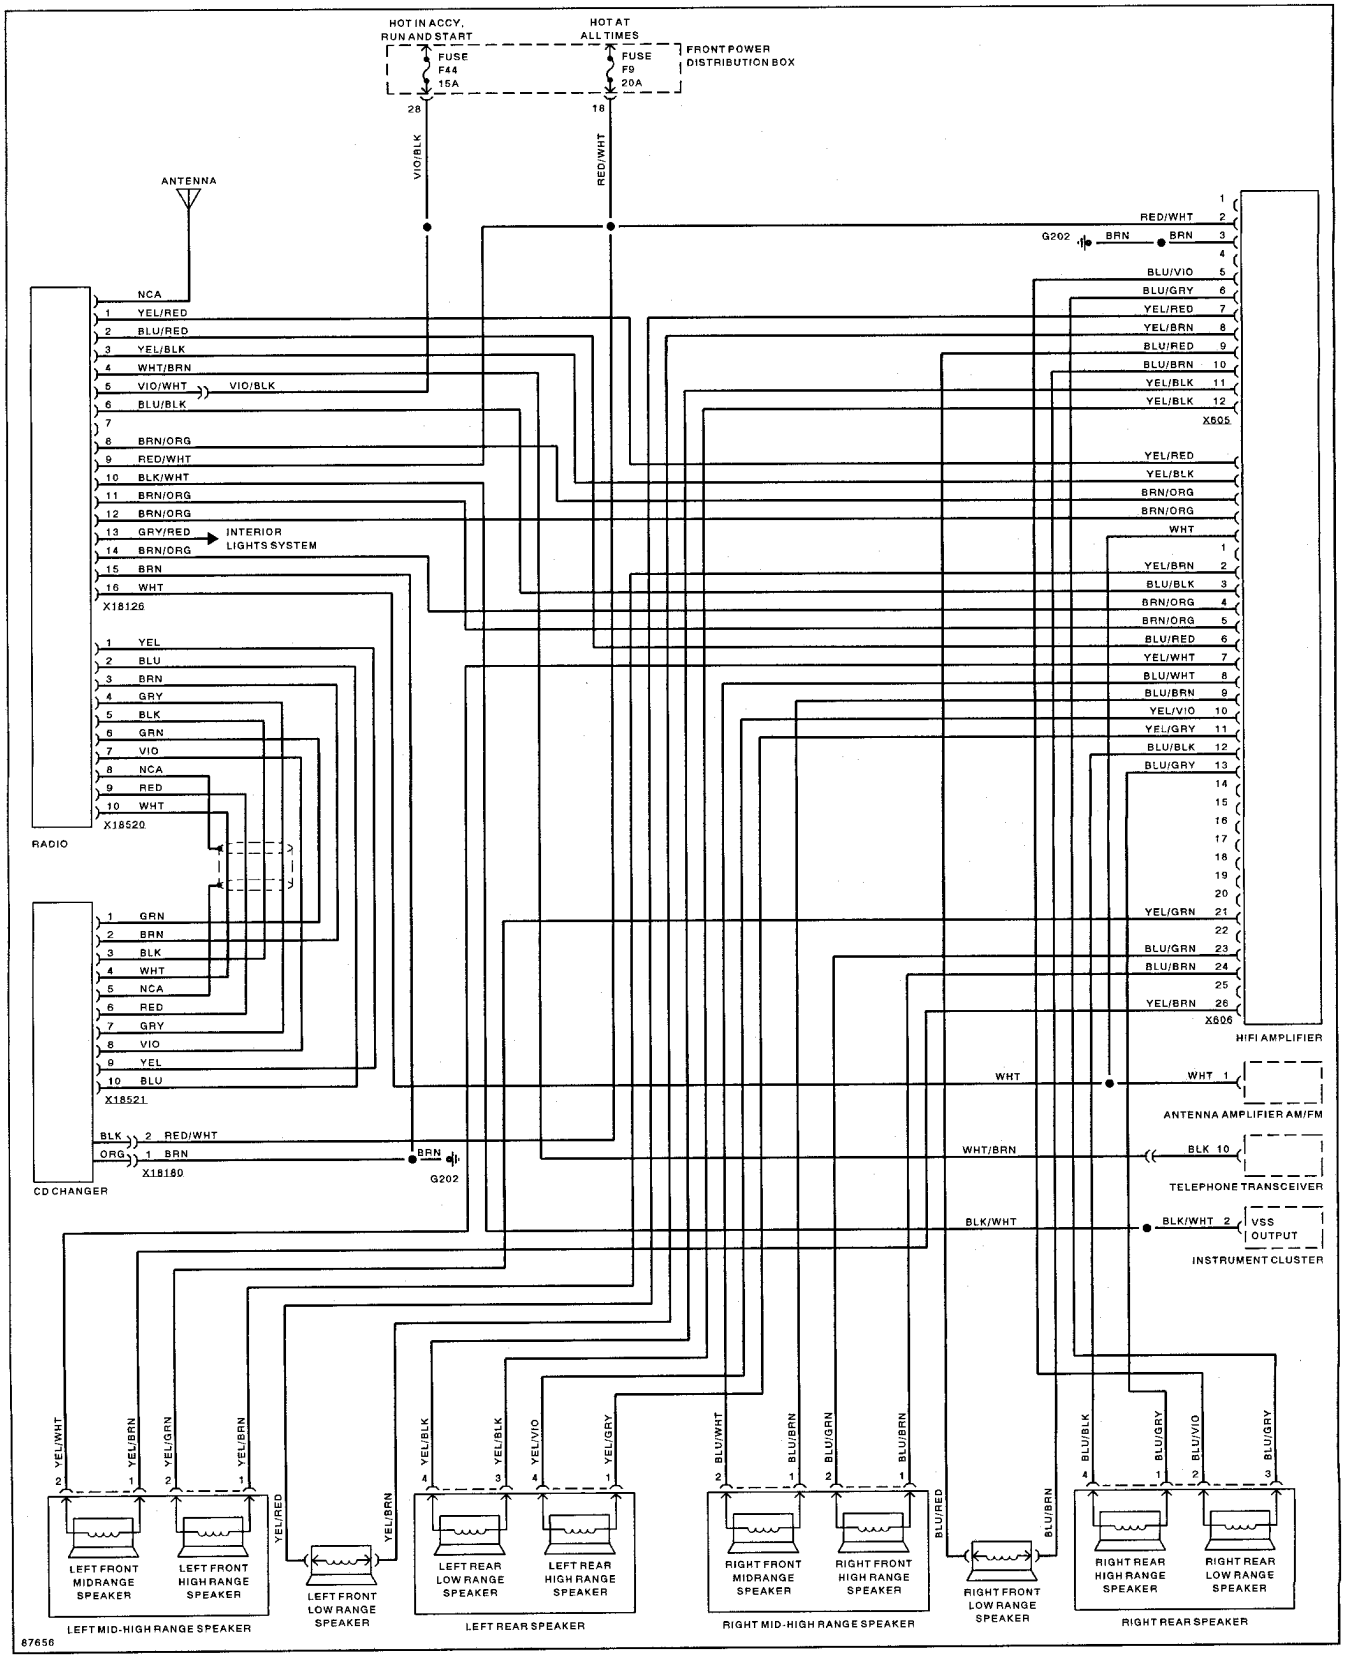


Radio/Cassette/CD/Speakers

1993 Early Production 10 Speaker System

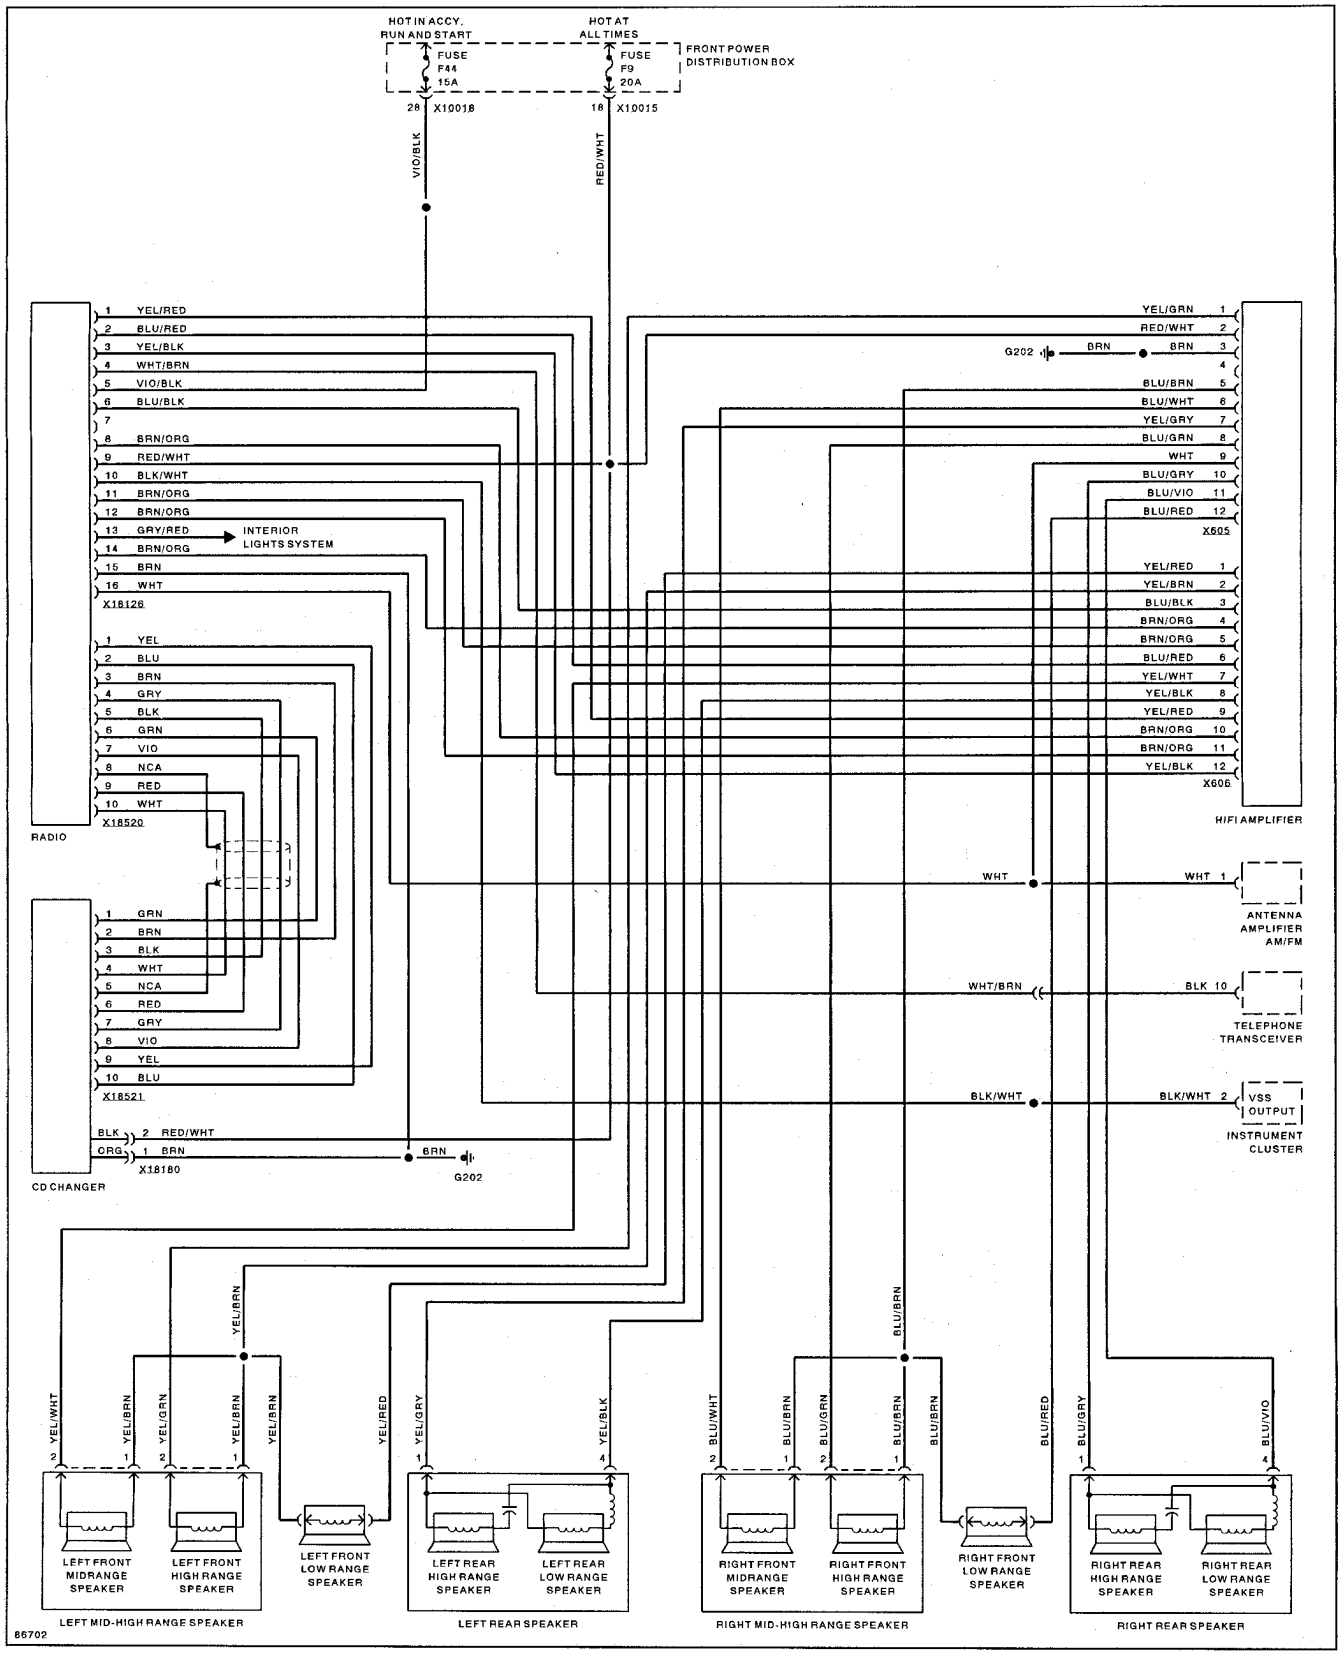


Radio/Cassette/CD/Speakers

1992 10 Speaker System

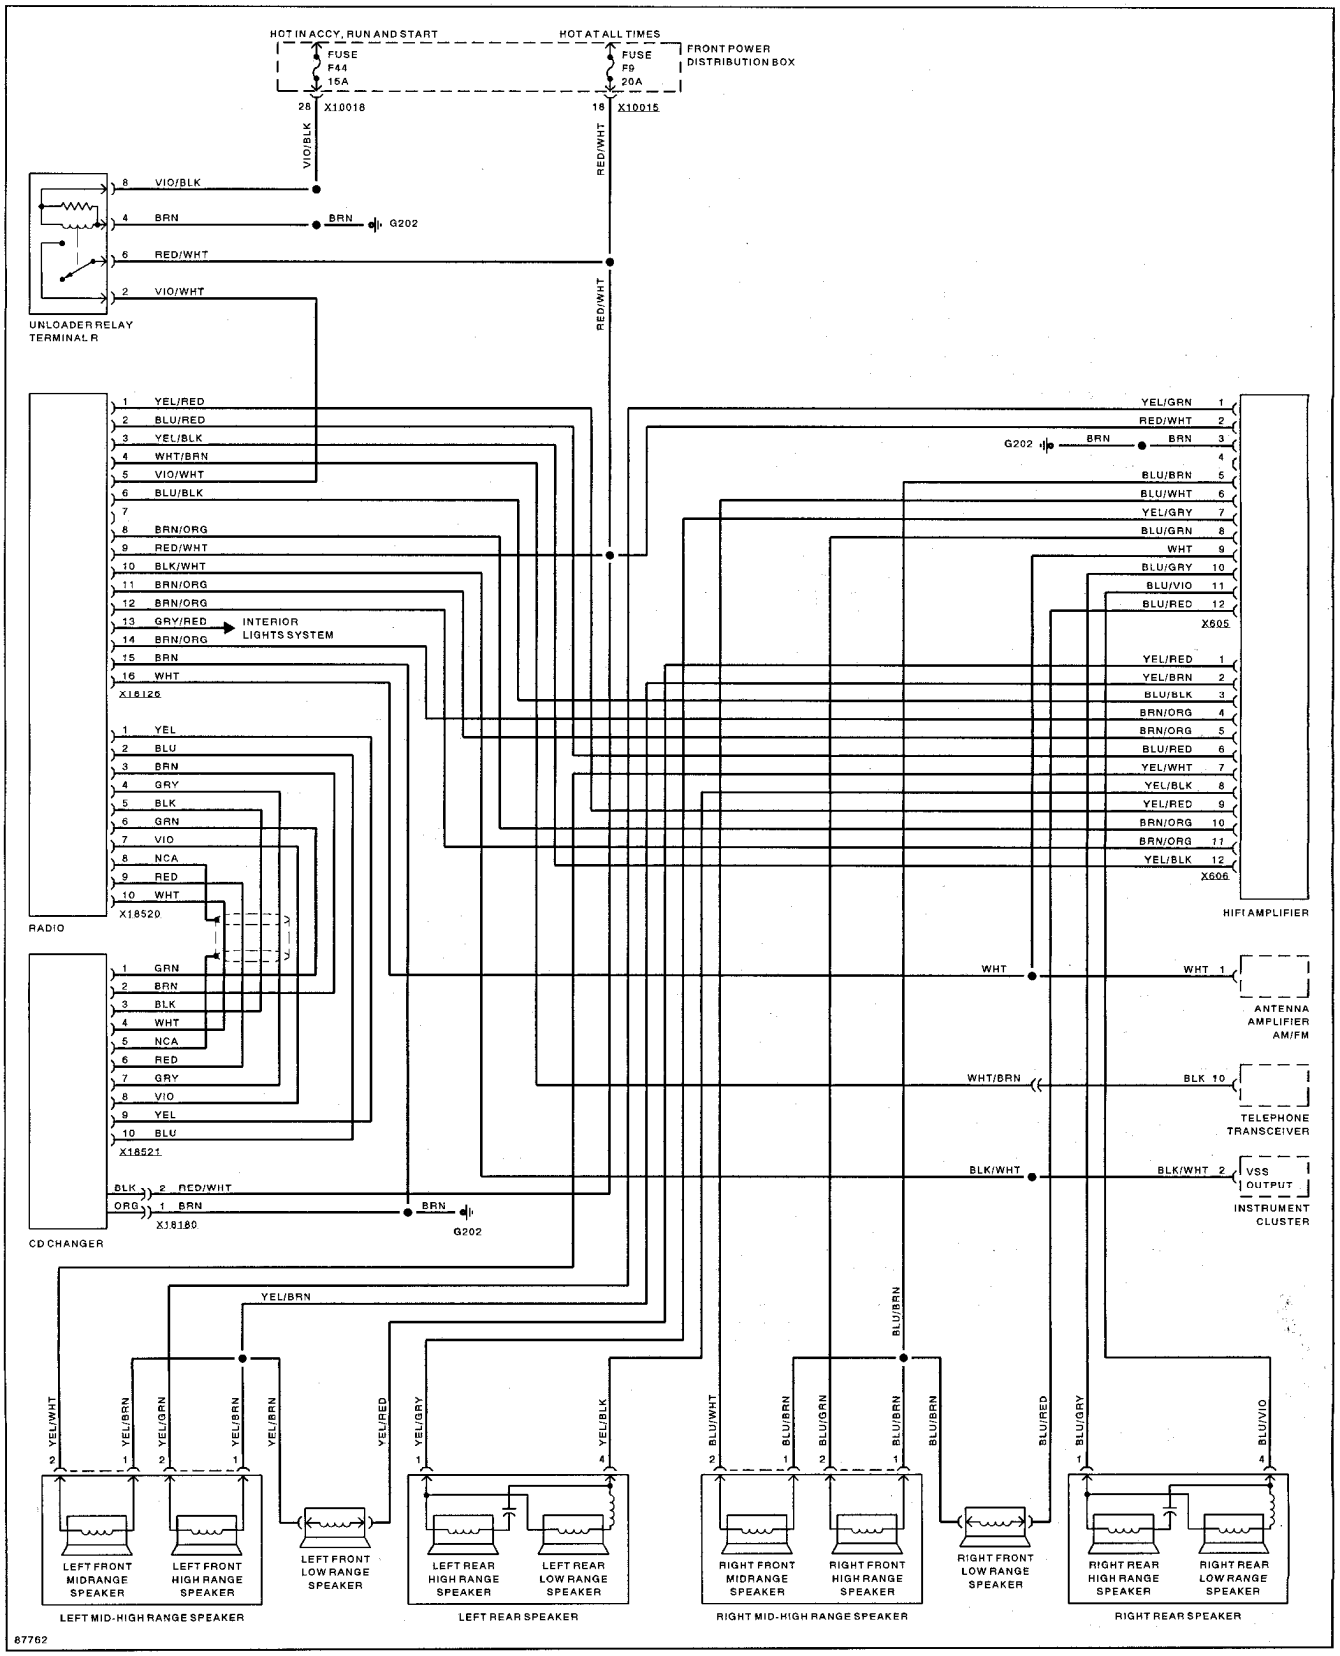


Radio/Cassette/CD/Speakers


1998 318ti 10 Speaker w/CD Changer System

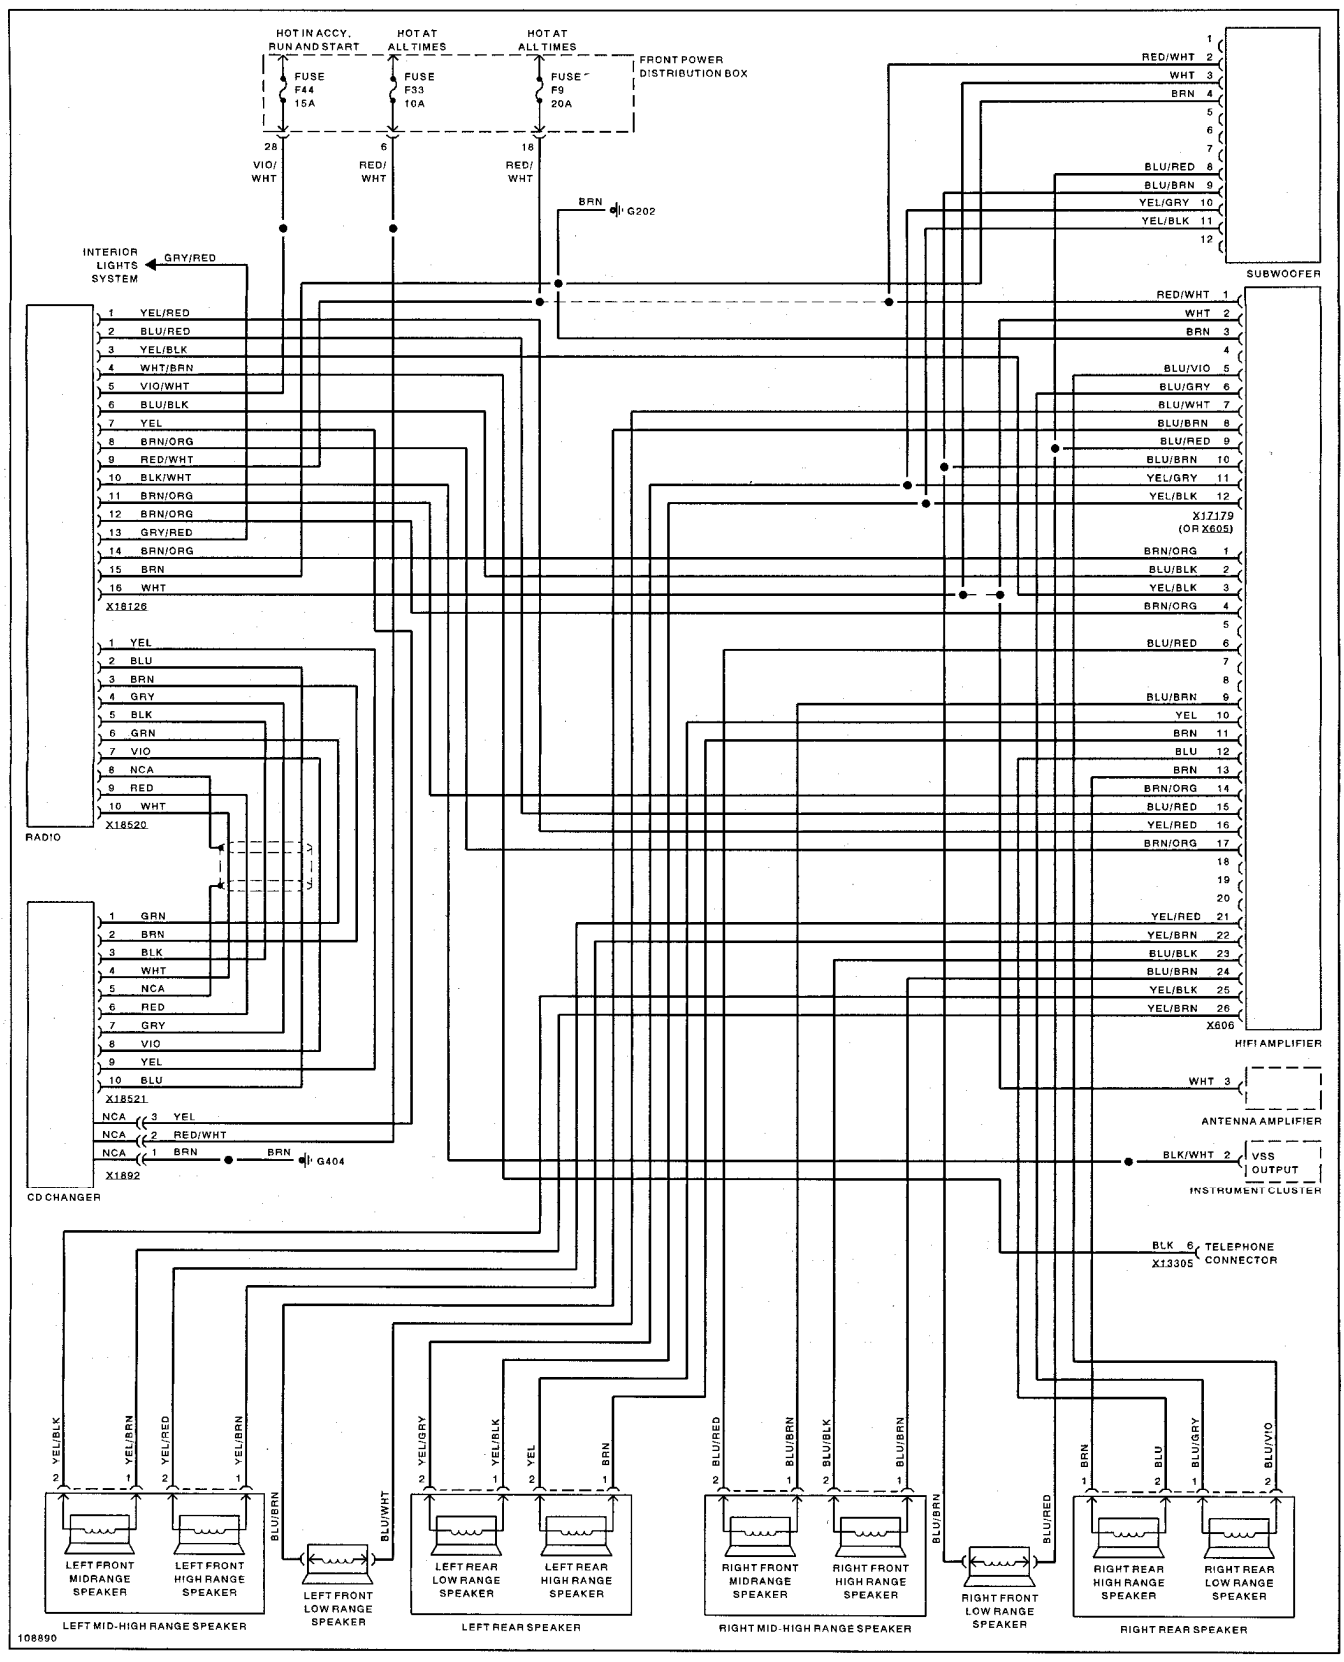

Radio/Cassette/CD/Speakers

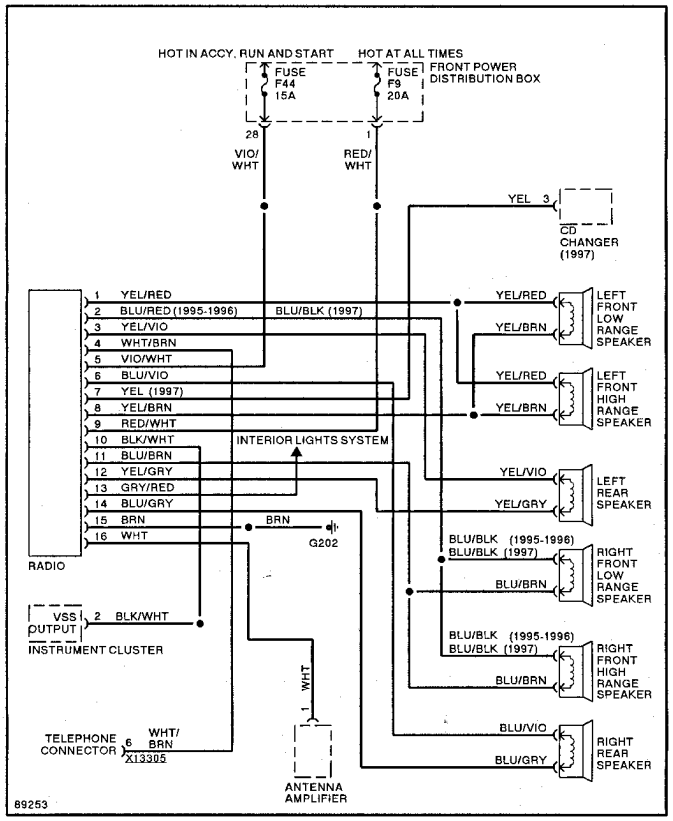


1995-97 318ti 6 Speaker System

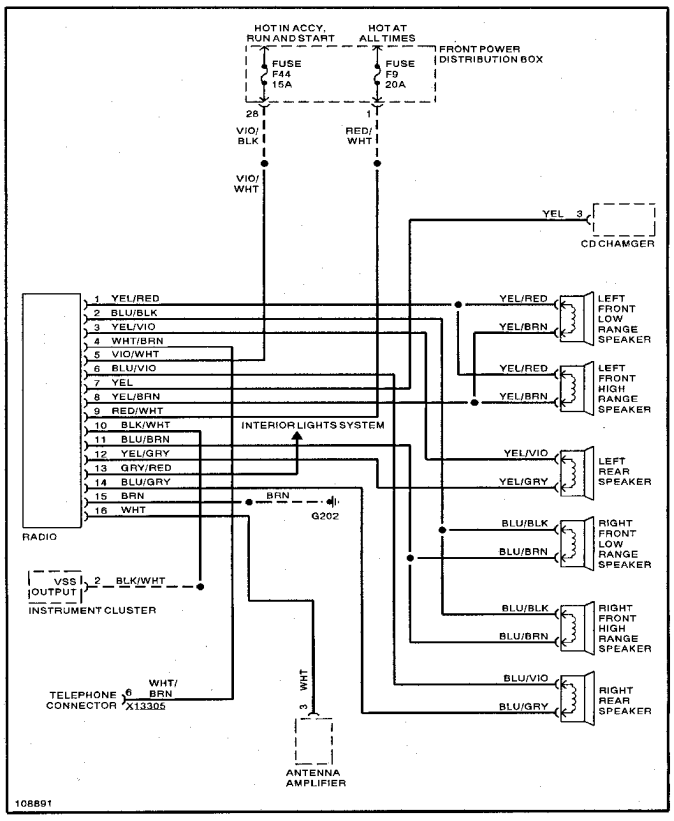


1998 318ti 6 Speaker System

Radio/Cassette/CD/Speakers


1998 Convertible 10 Speaker w/CD & Top HiFi System

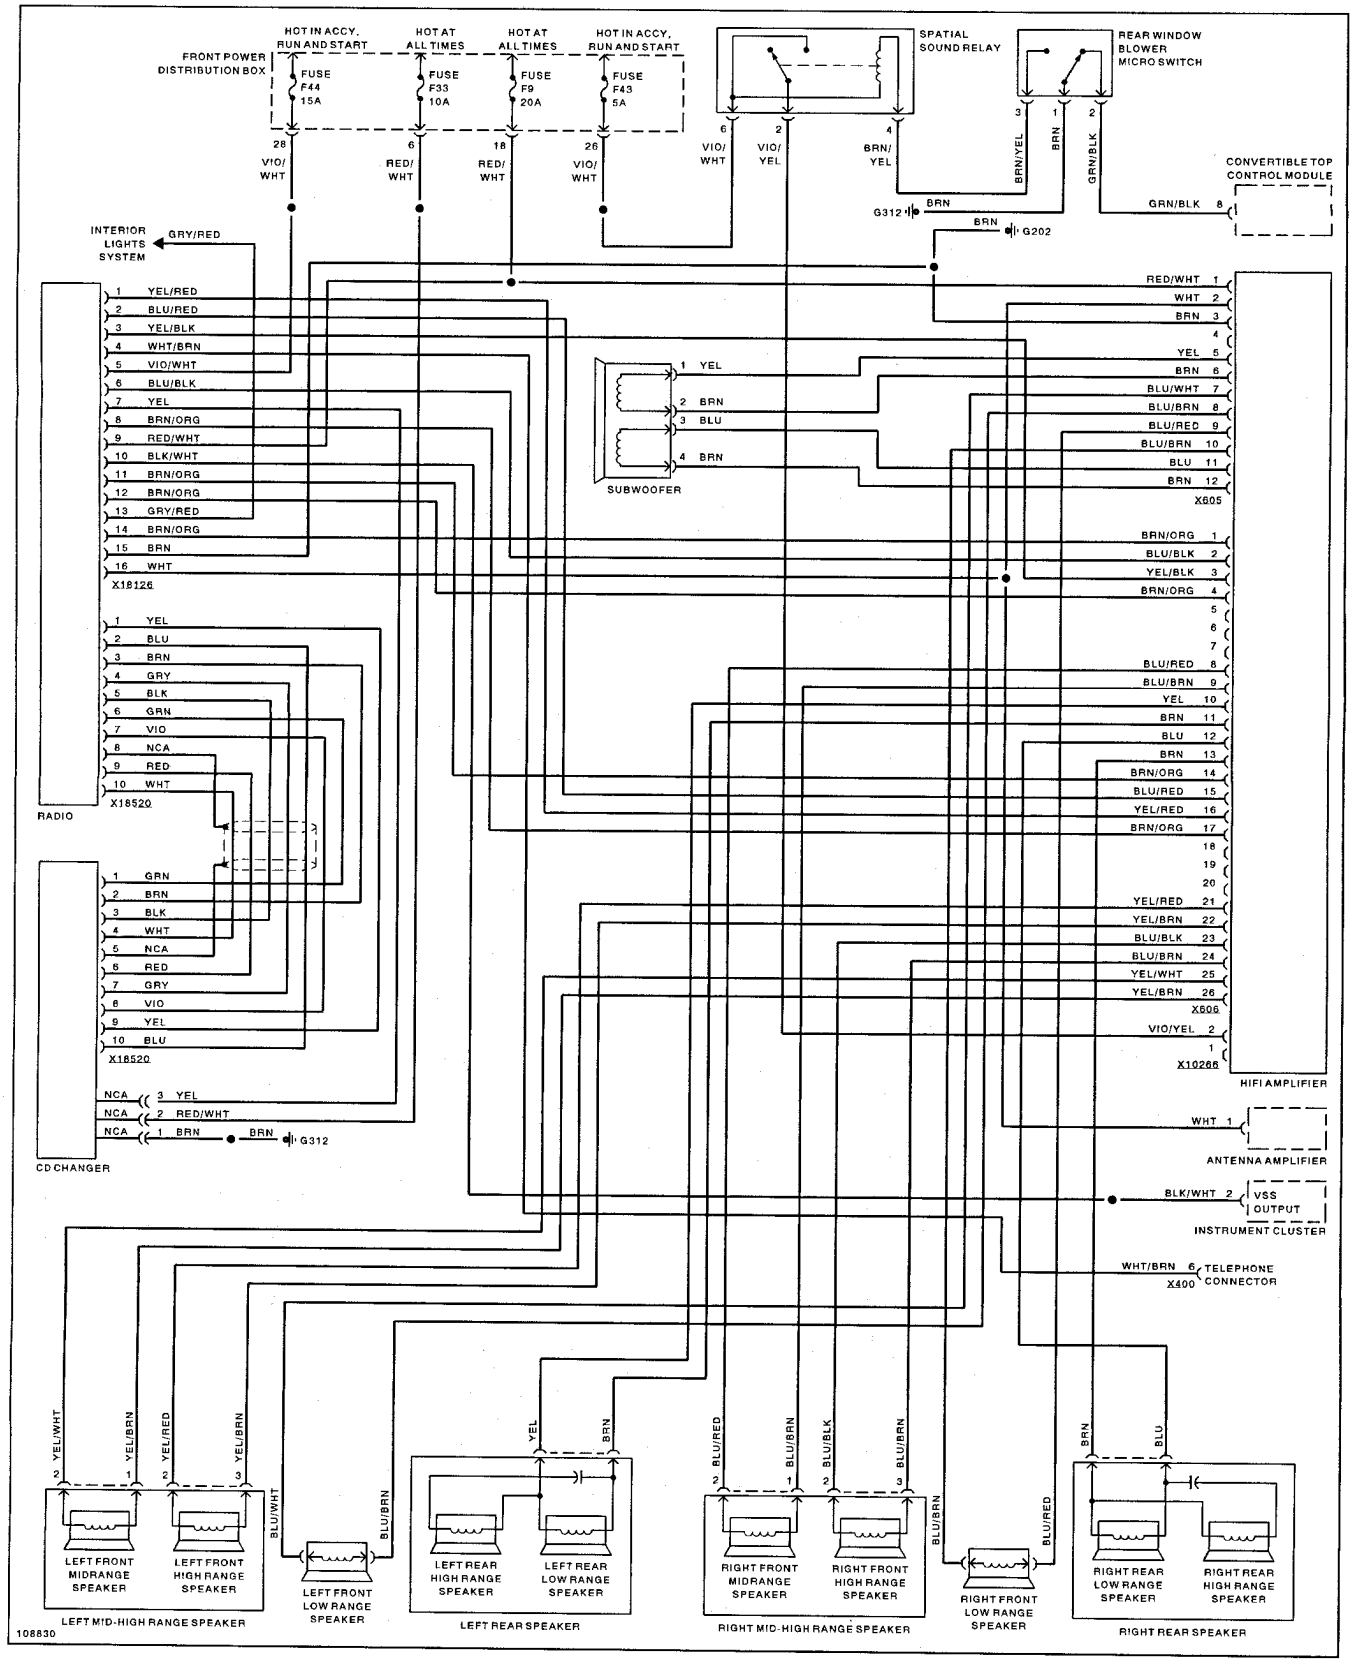

Radio/Cassette/CD/Speakers

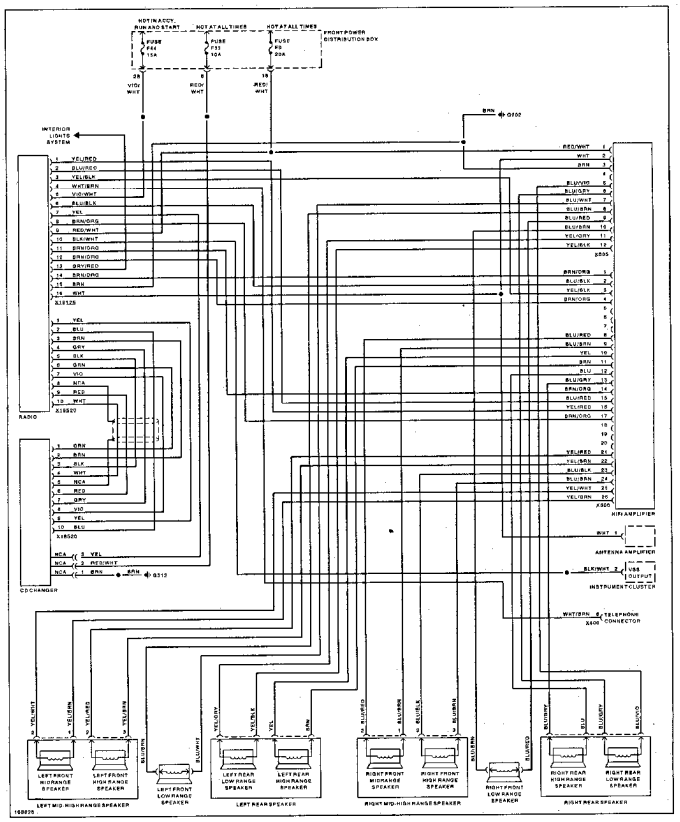

1998
Except 318ti
10 Speaker
w/CD Changer
System

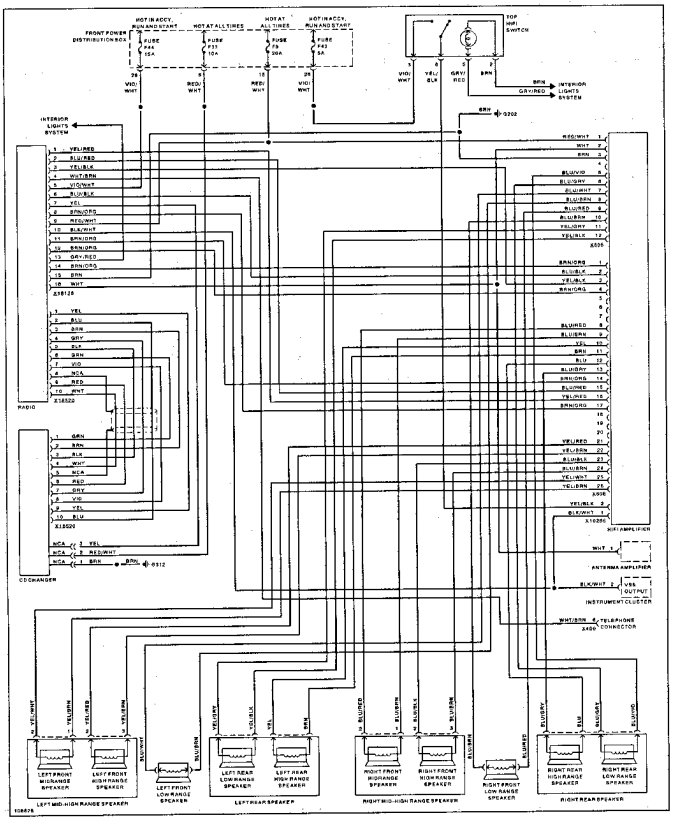


1998
Except convertible
10 Speaker w/CD
Changer and Top
HiFi System


Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Radio/Cassette/CD/Speakers


1998 Except 318ti 6 Speaker System

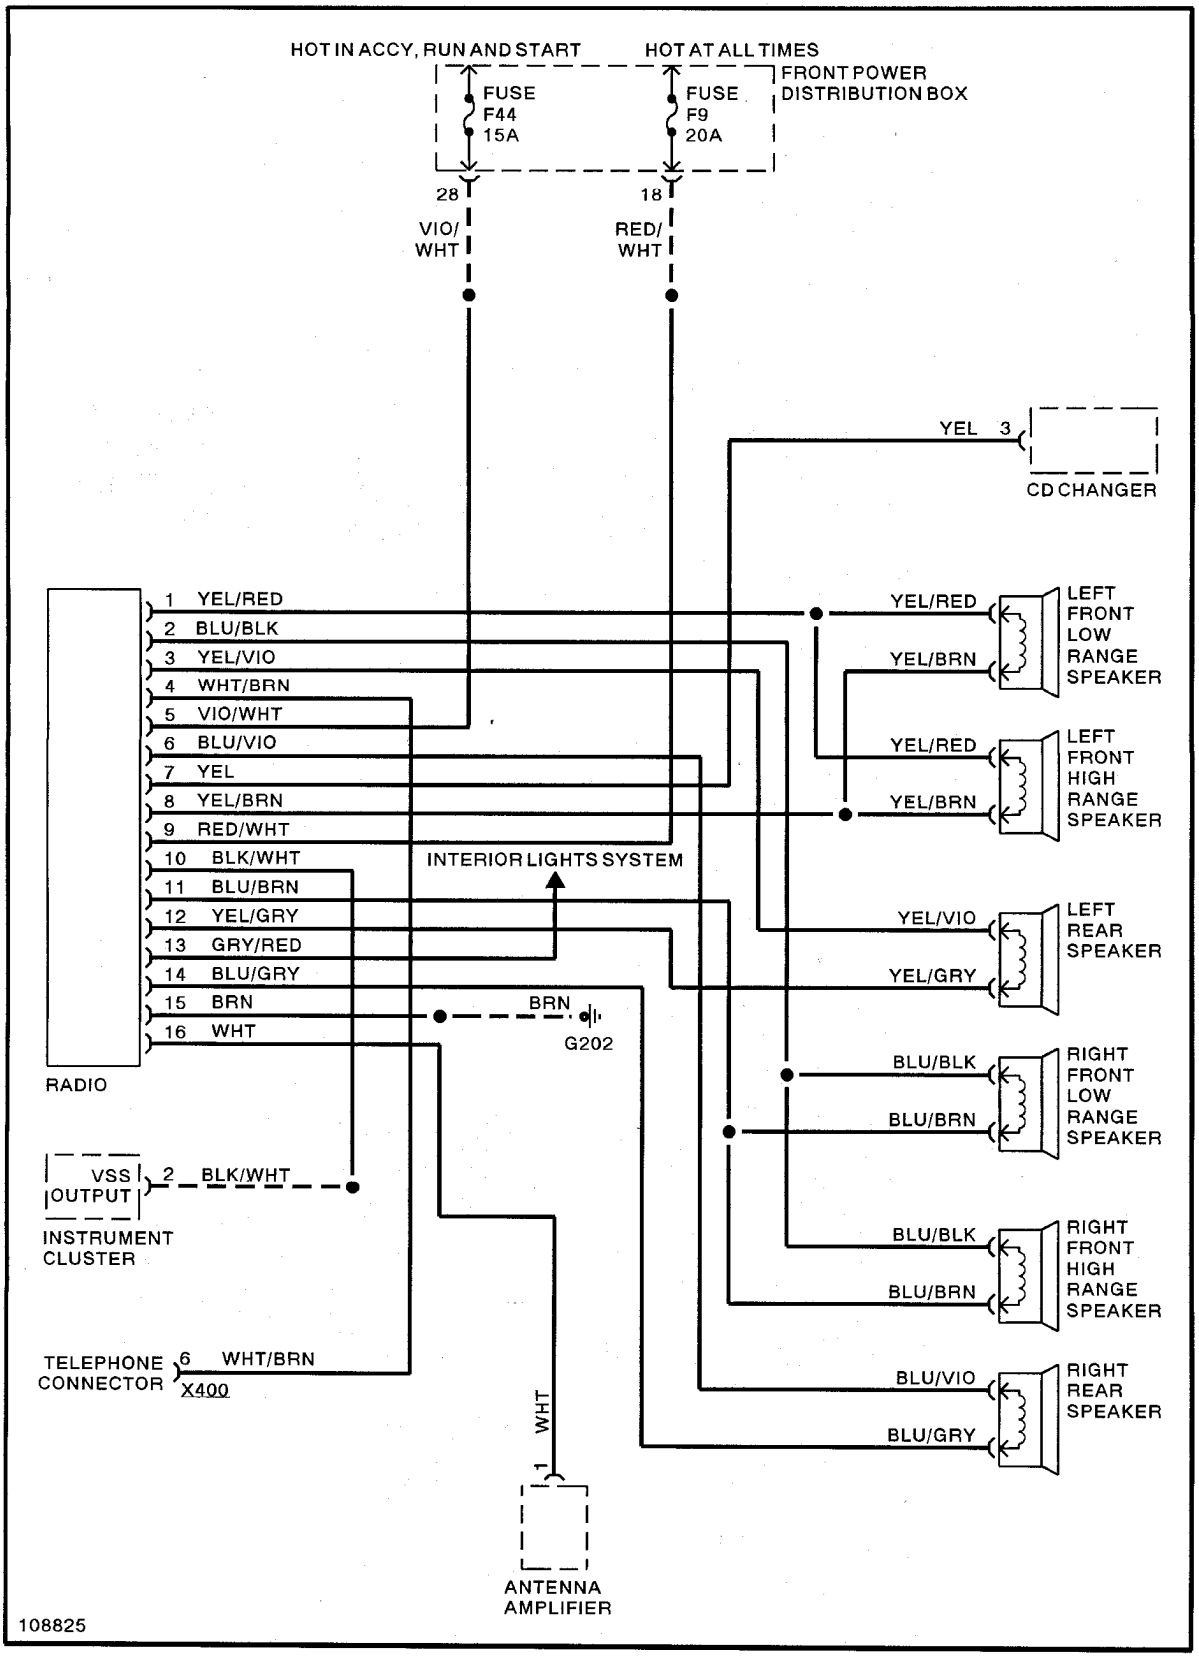

Radio/Cassette/CD/Speakers

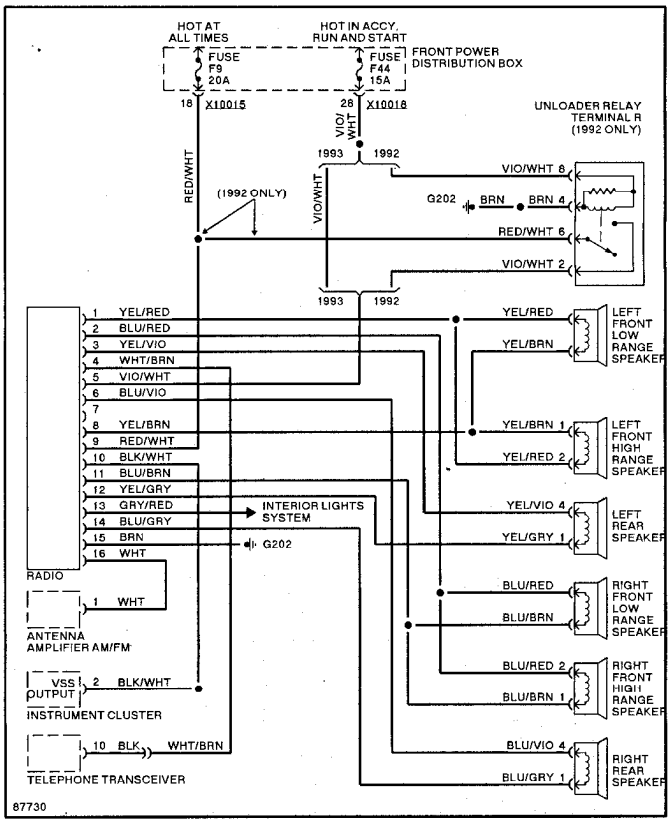


1992-93 6 Speaker System

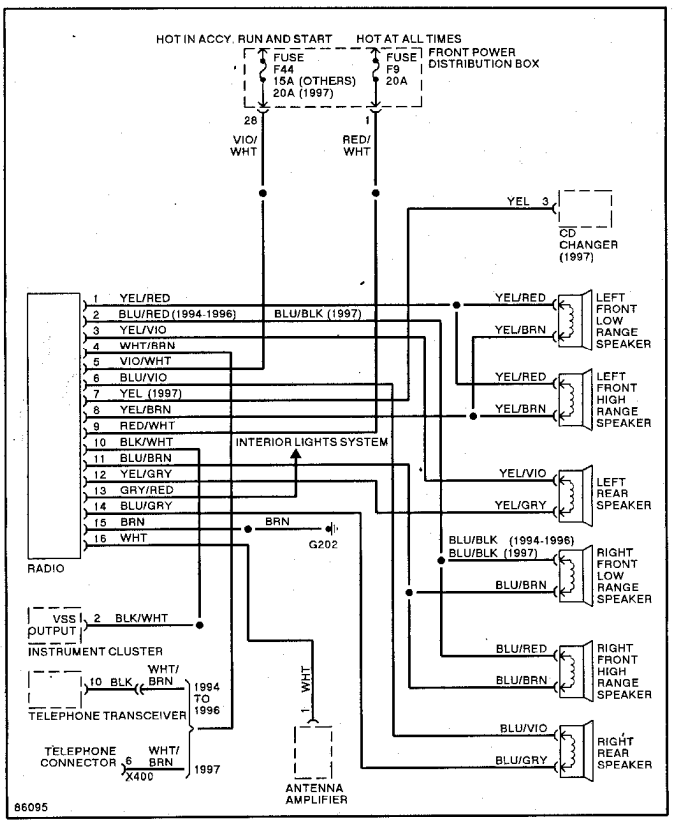


1994-97 Except 318ti 10 Speaker System


Convertible Top
1998

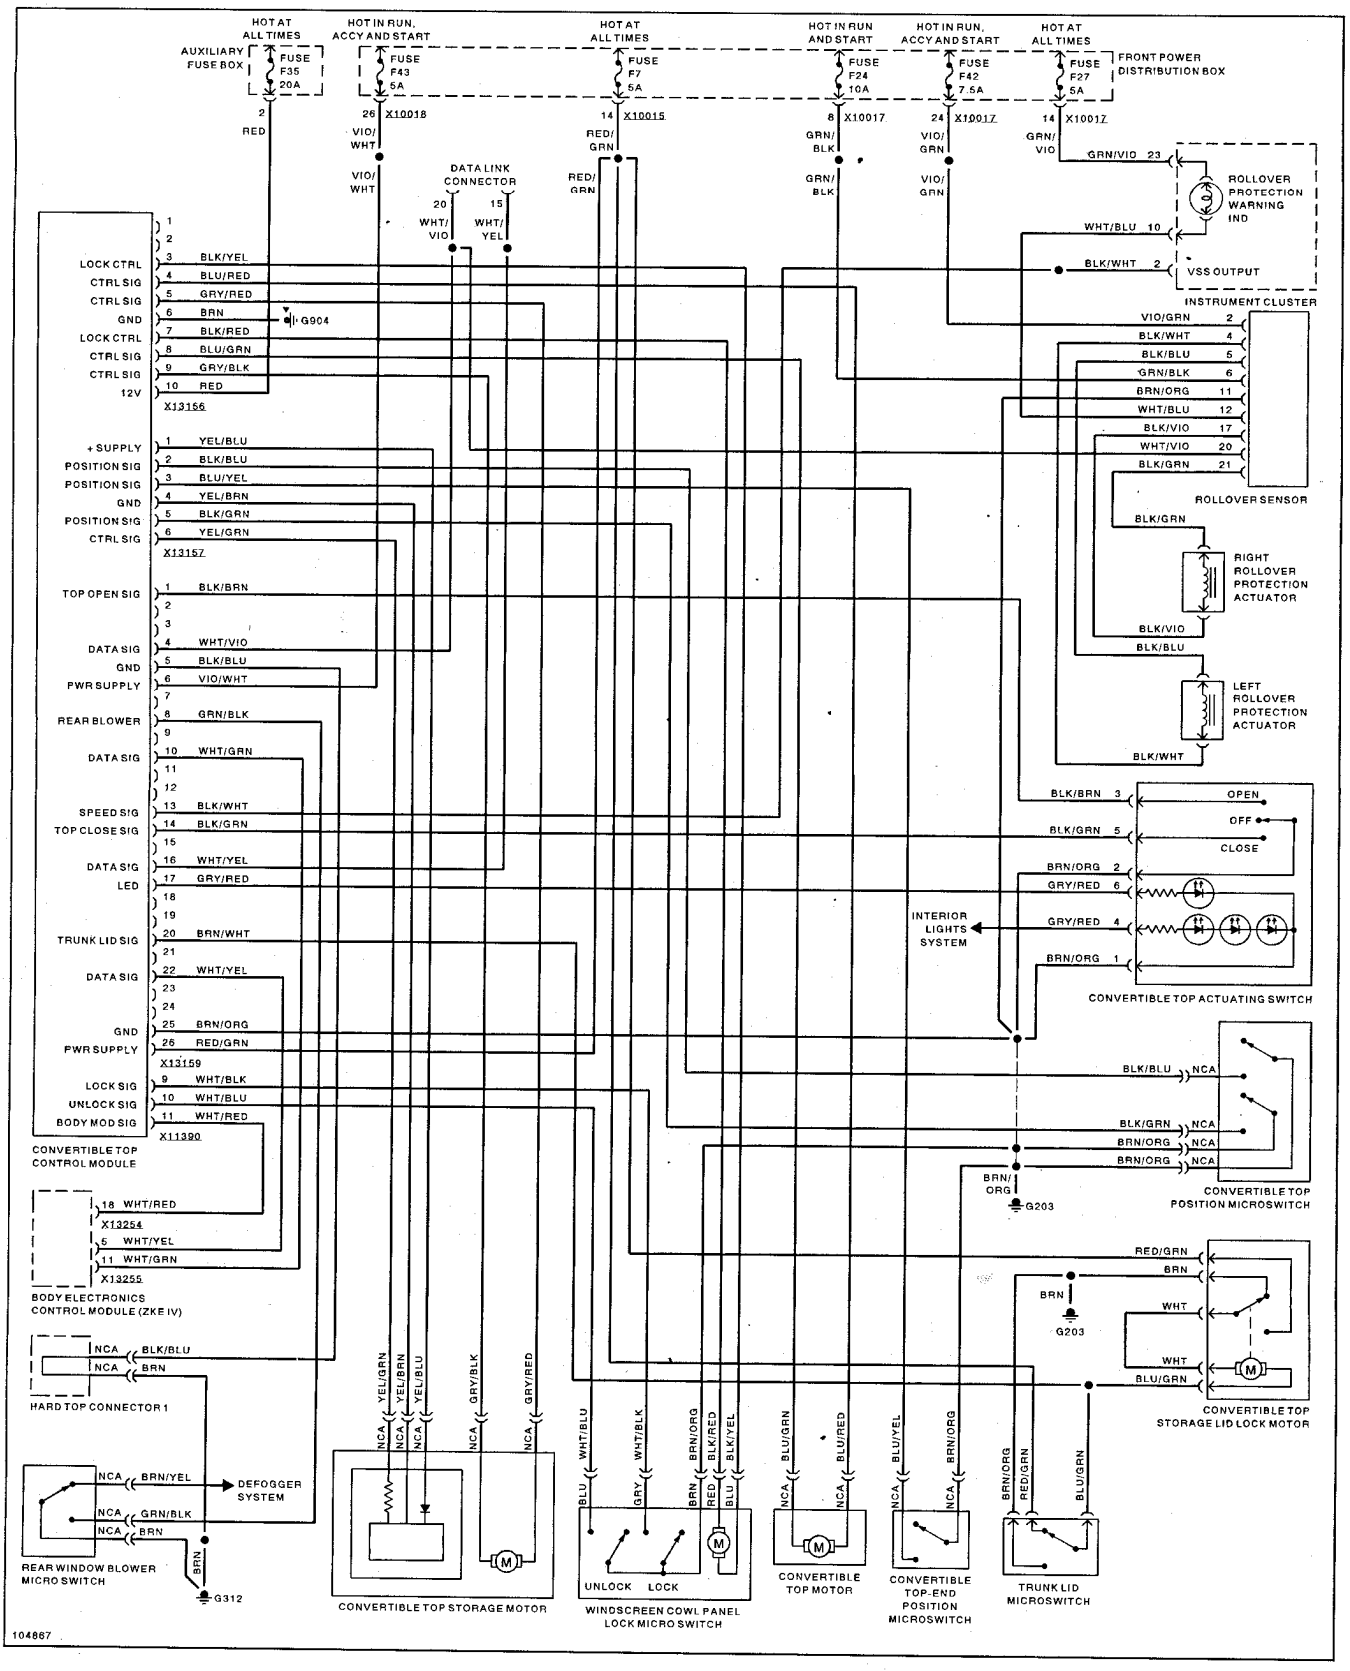


Convertible Top
1994-97

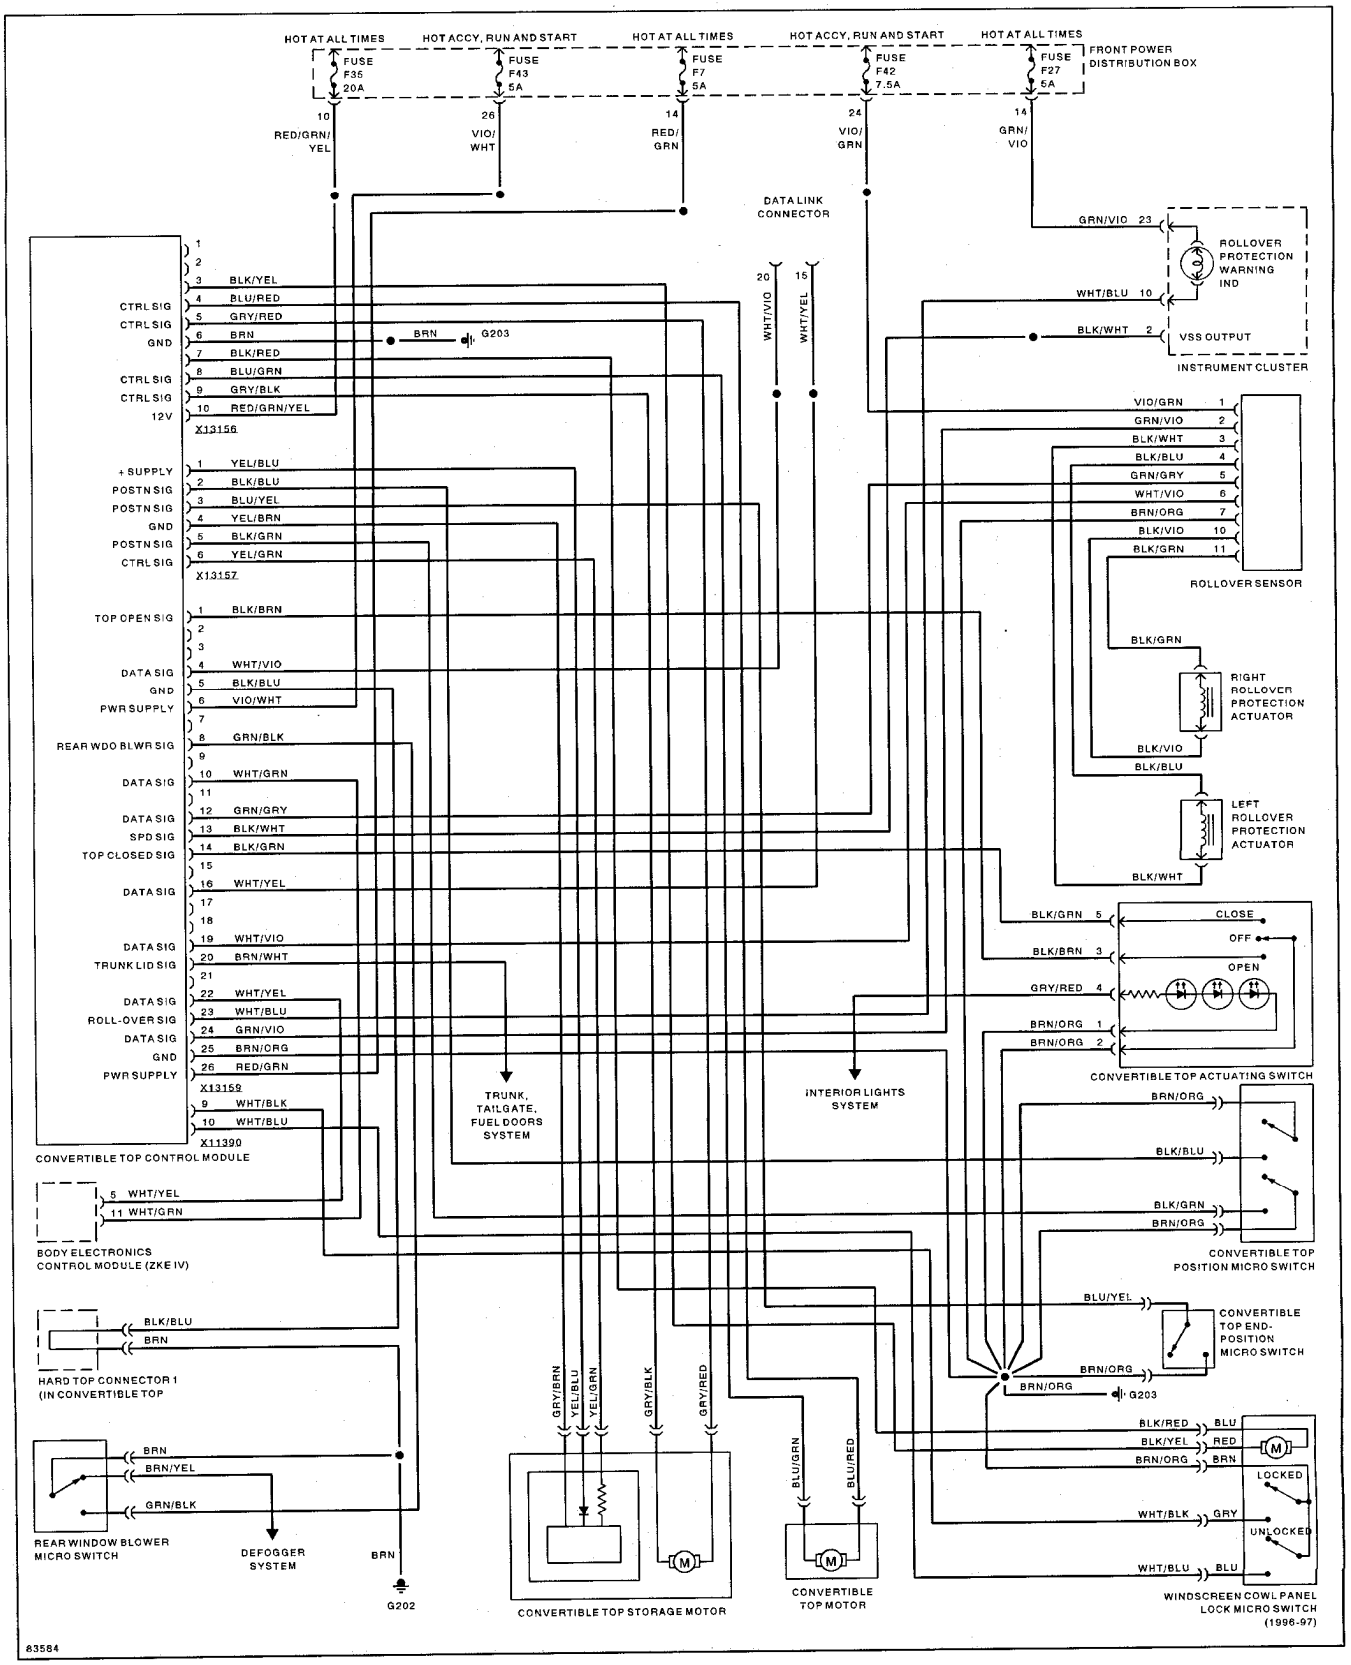

Power Sunroof

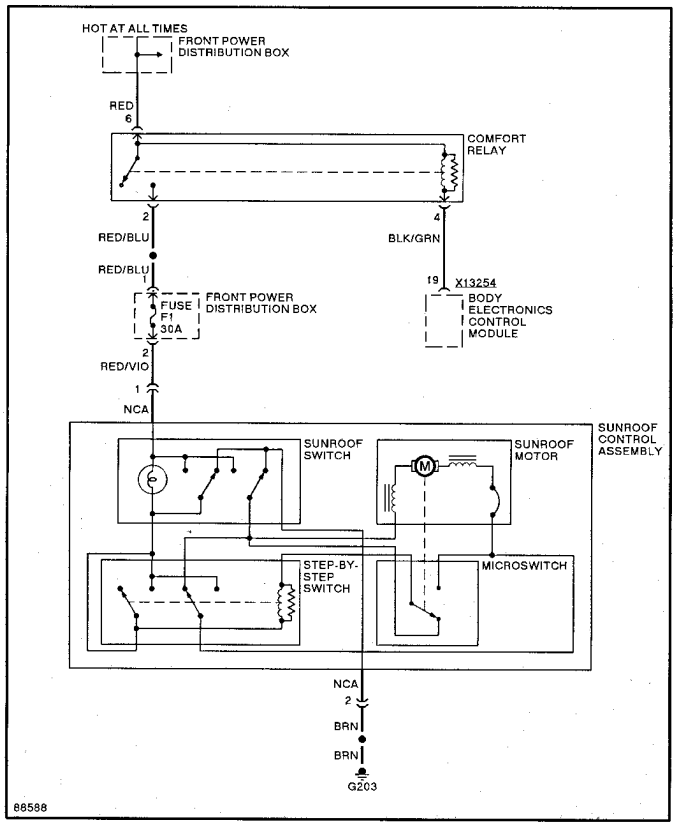


1997 318ti Folding Sunroof

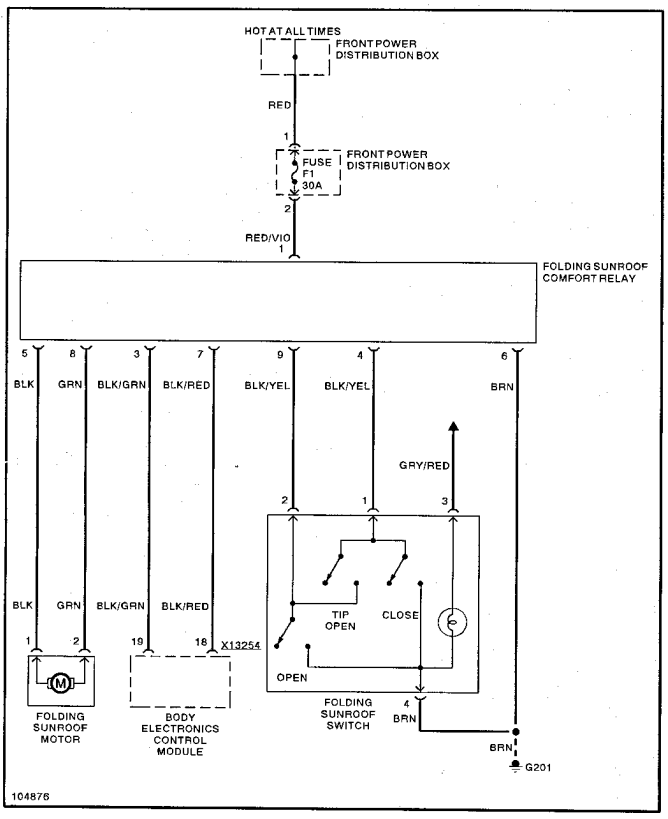


1998 318ti Folding Sunroof

Power Sunroof

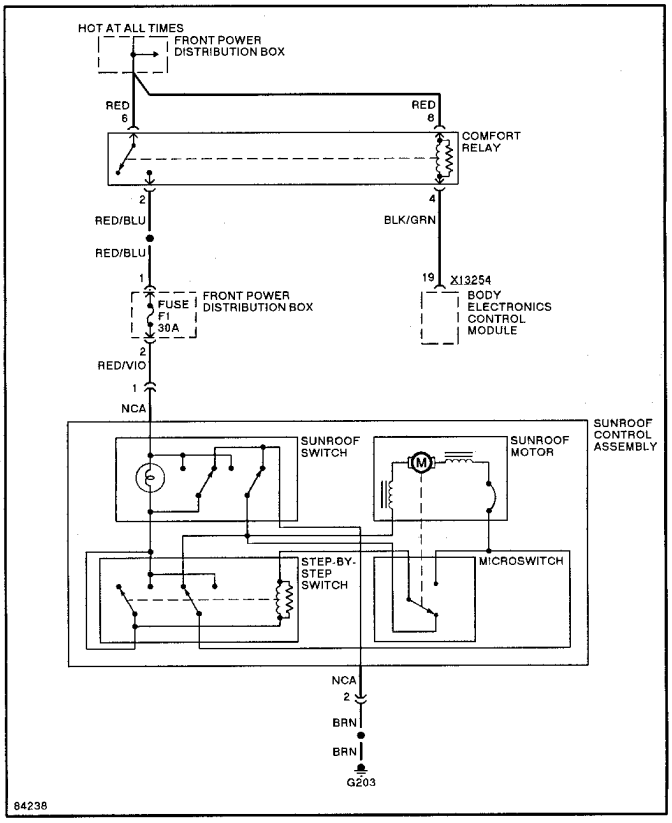


1995 Early Production 318ti

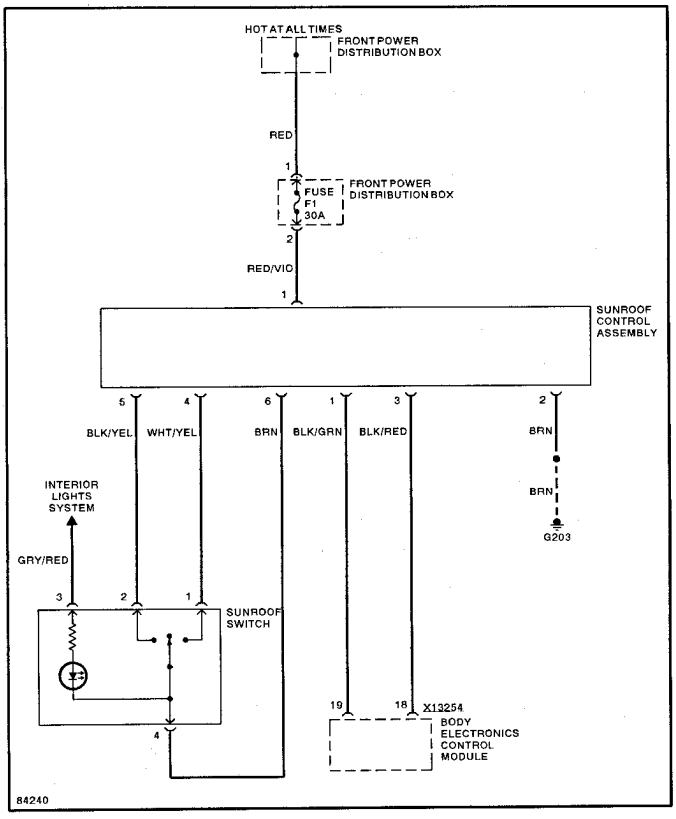


1995 Late Production & 1996-98 318ti Sliding Sunroof

Power Sunroof


1998 Except 318ti

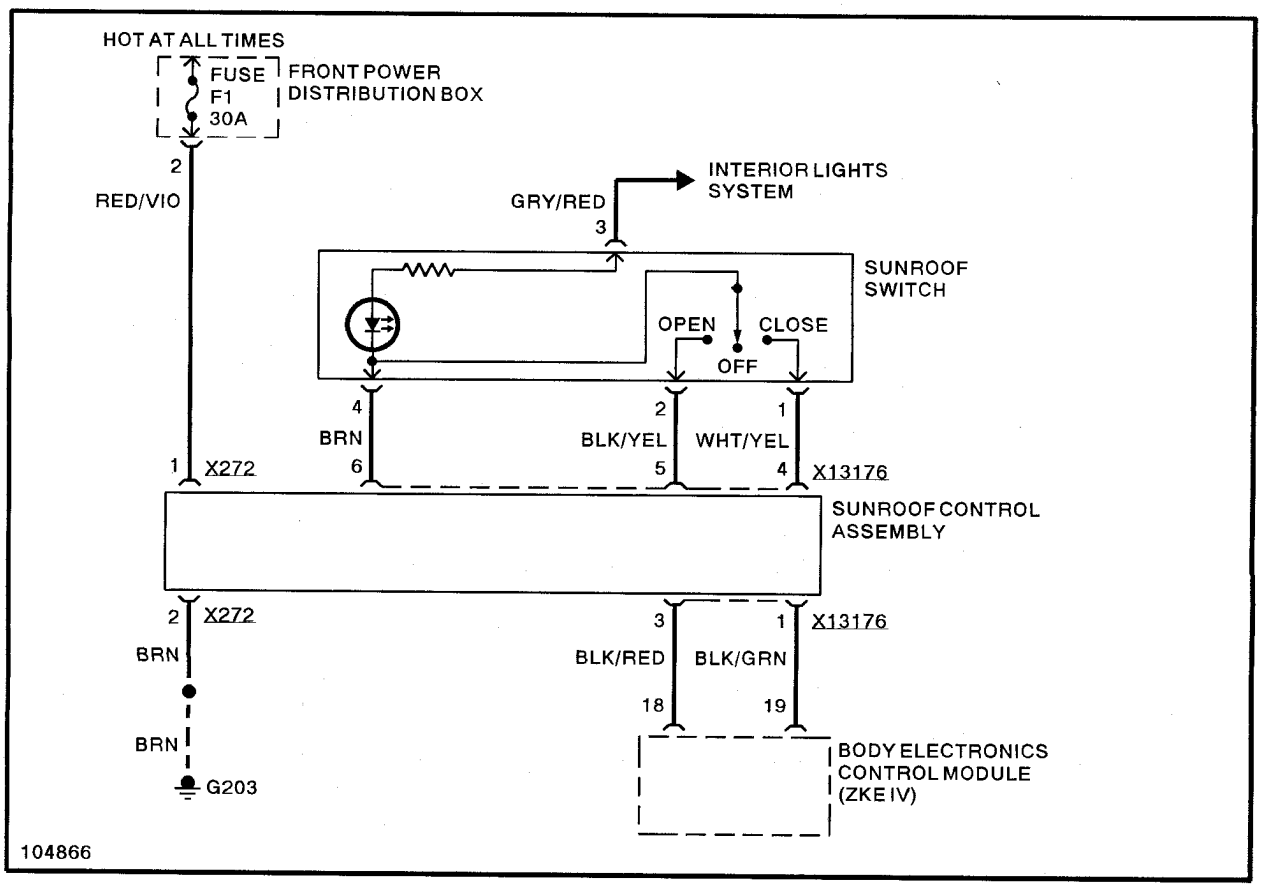

Power Sunroof

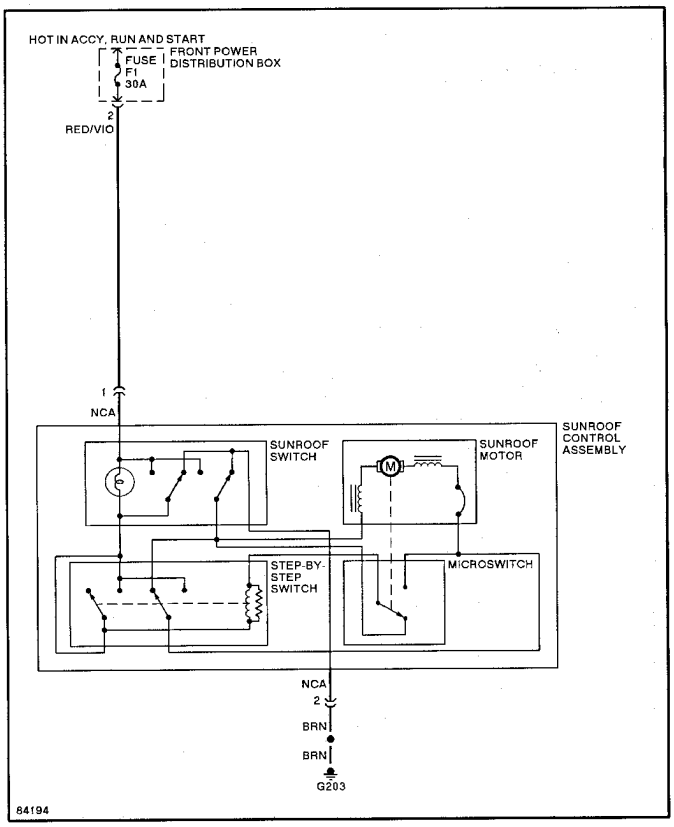


1995
Except 318ti

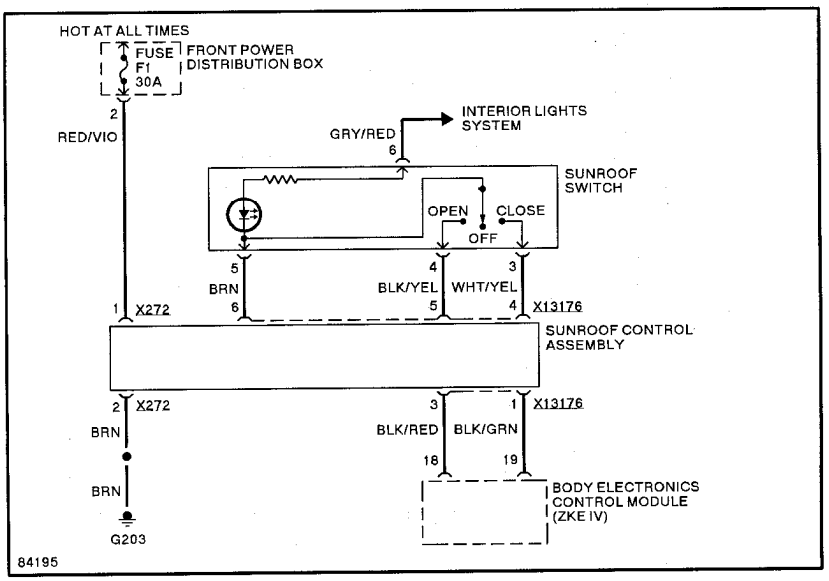


1996-97
Except 318ti

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Power Sunroof

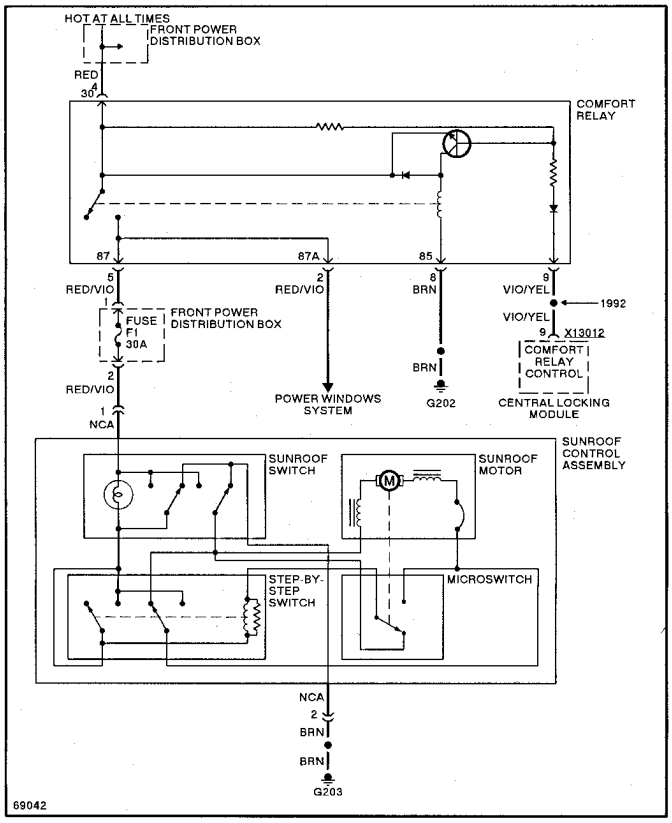


1992-93

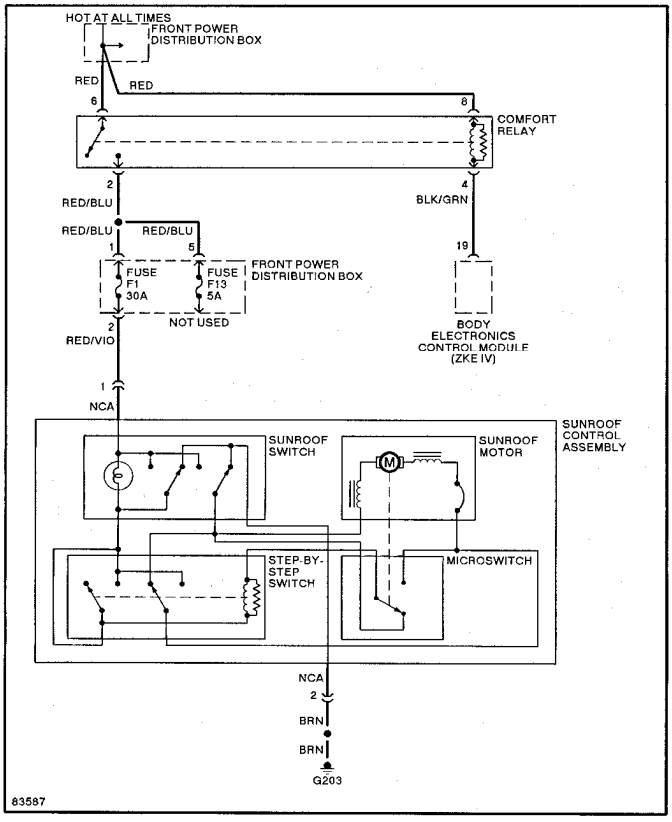

1994


Lumbar Control

1998

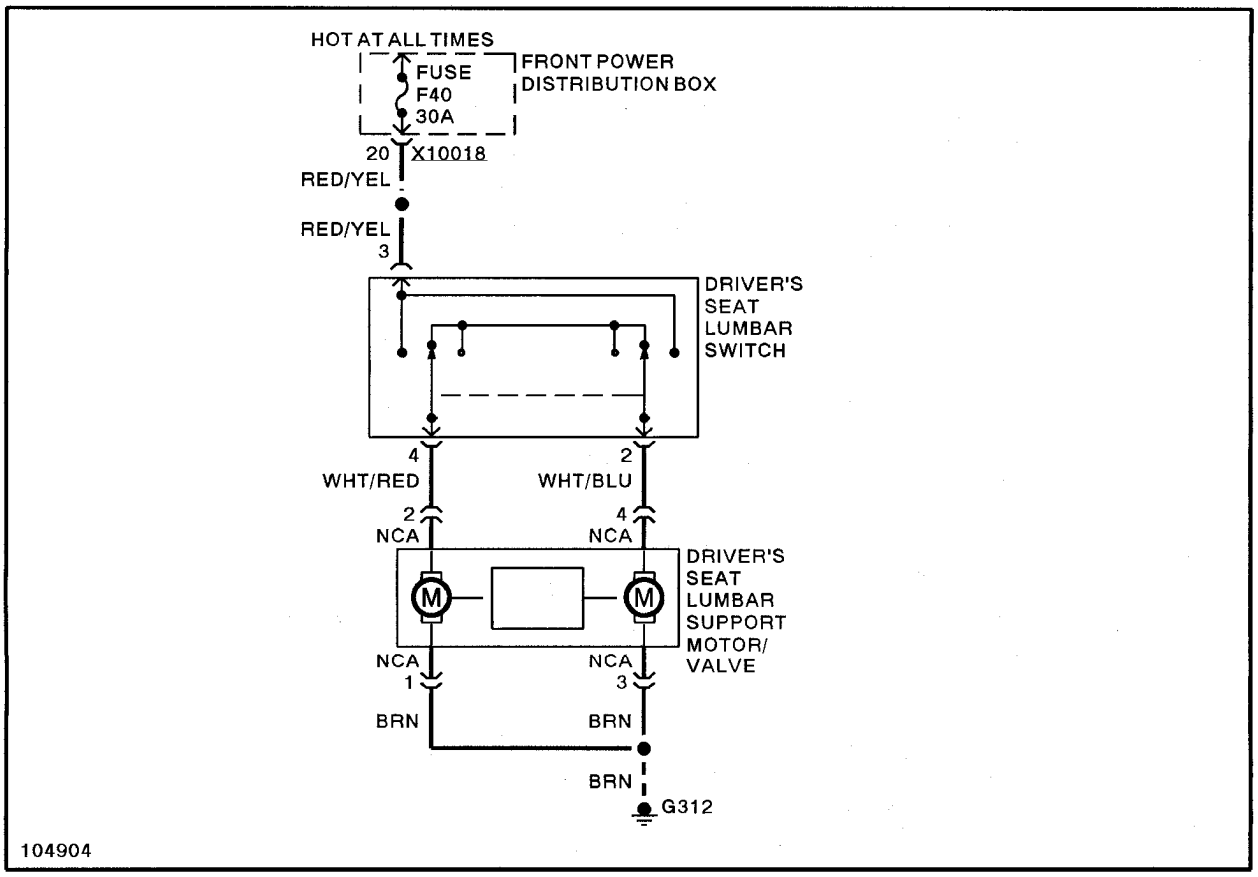


Heated Seats

1995-97 318ti

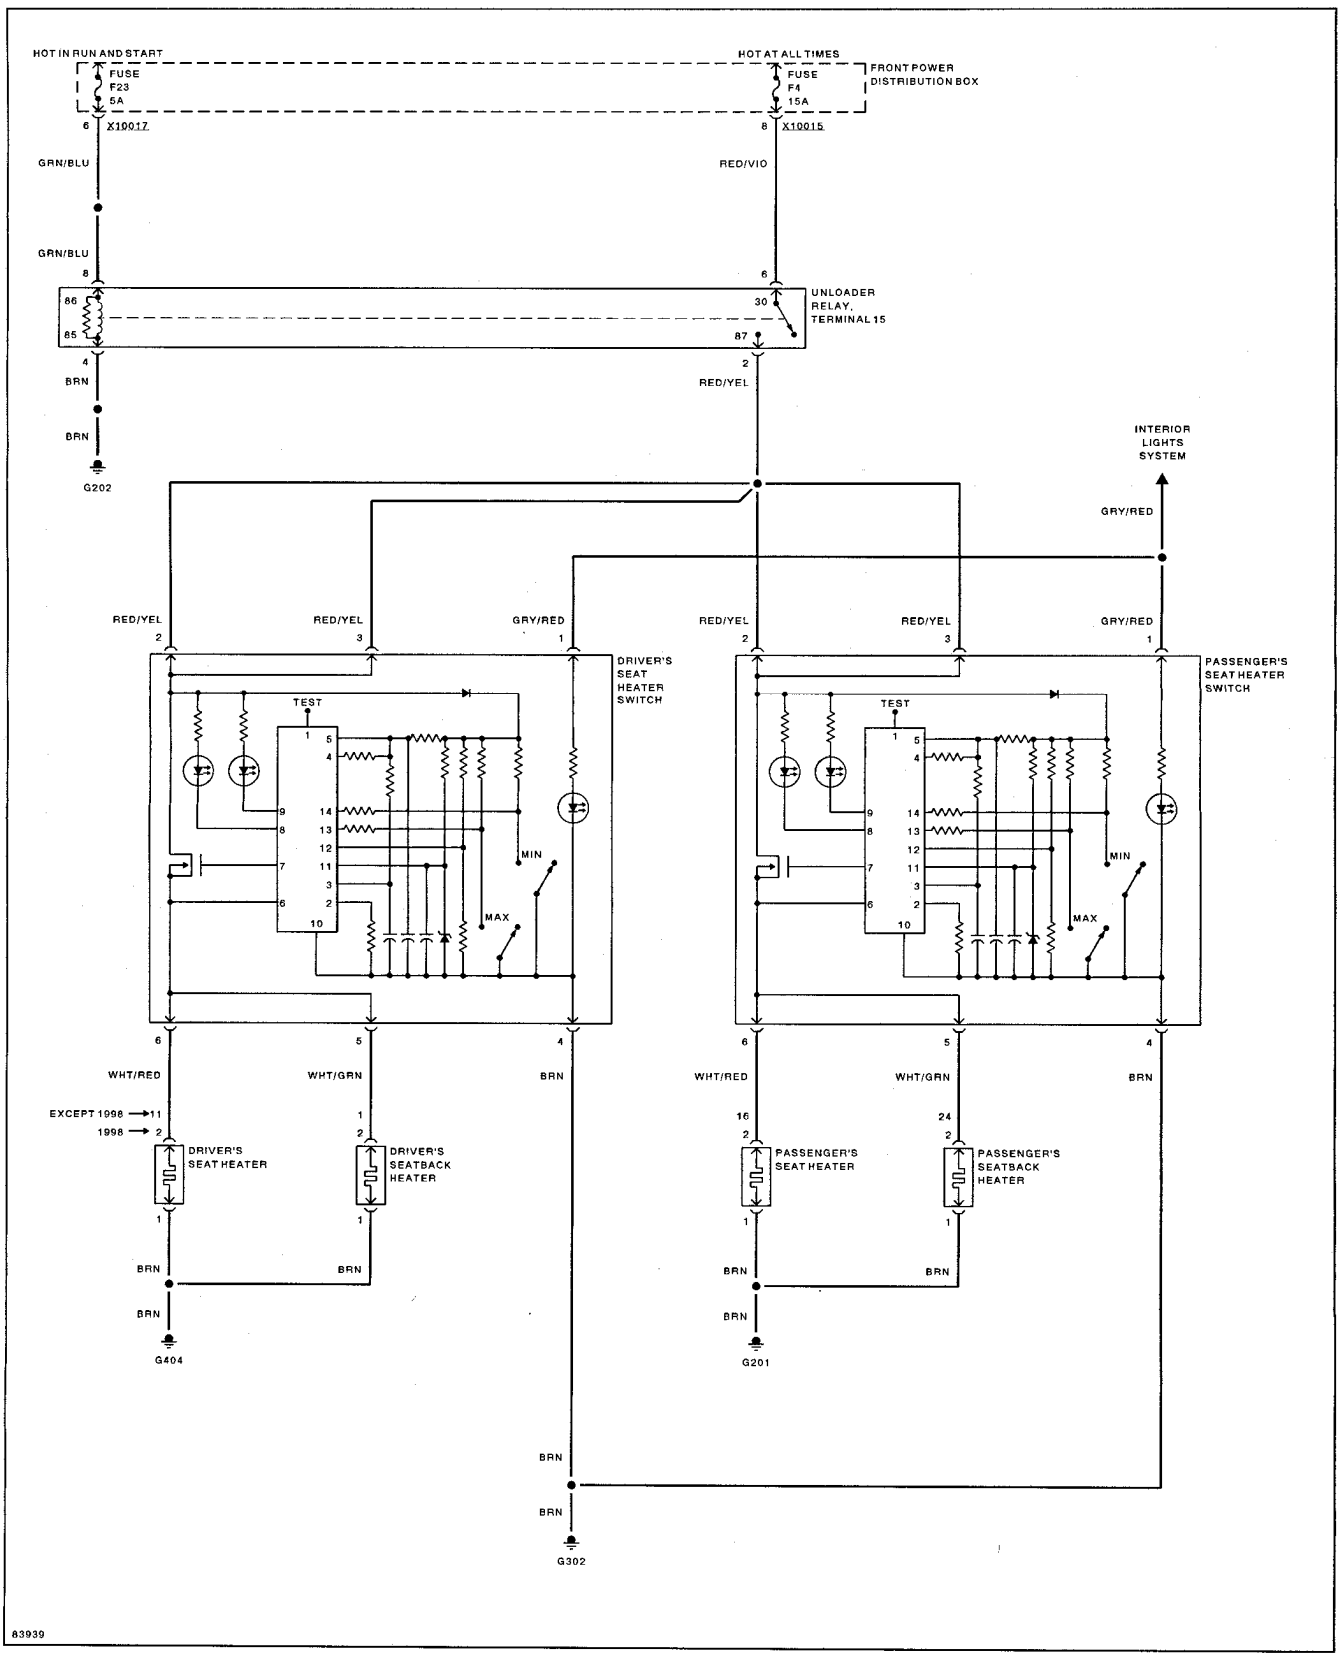


Heated Seats

1992-98 Except 318ti

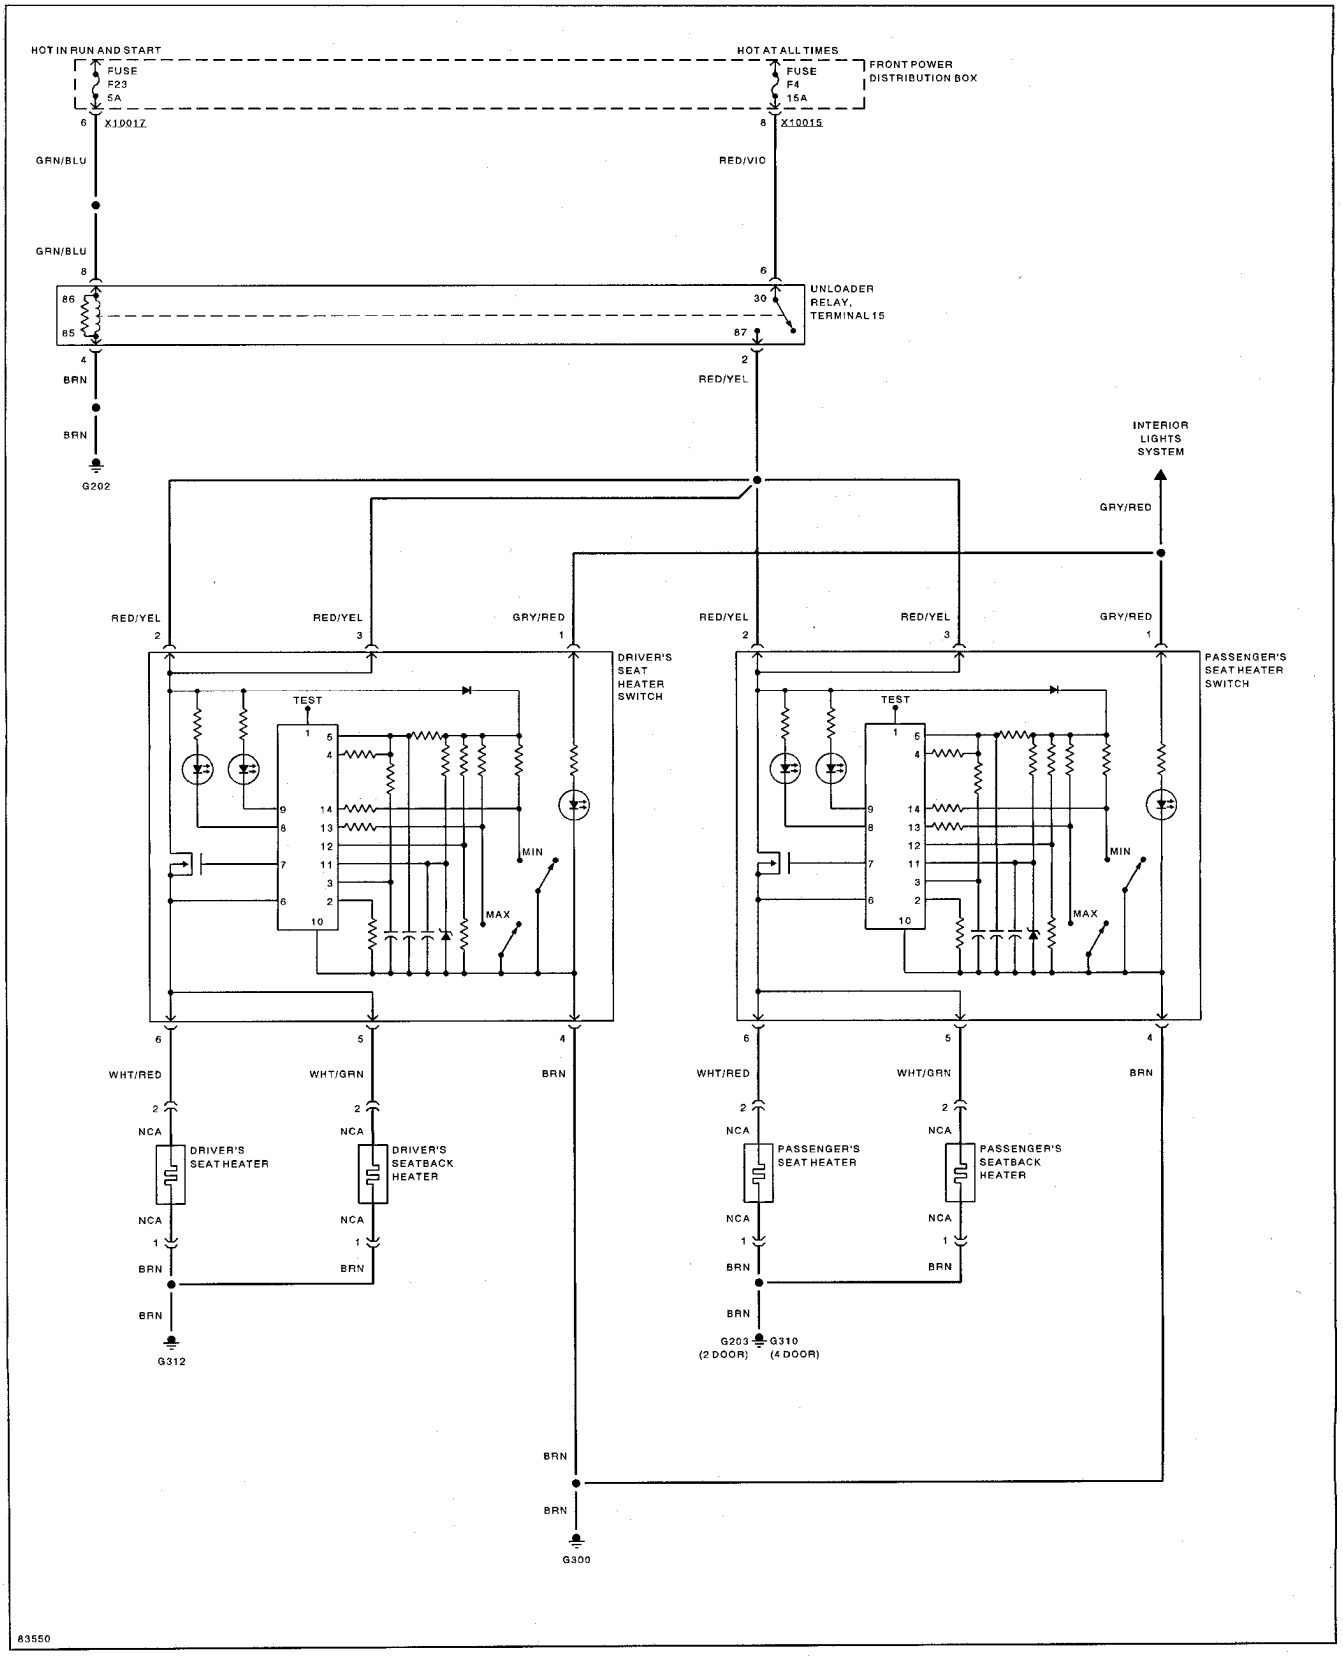


Power Seats

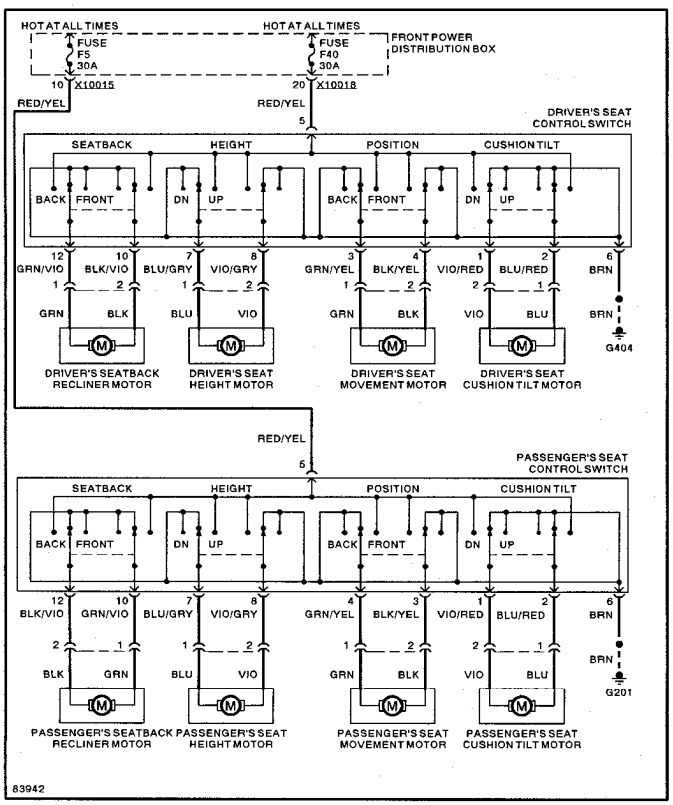


1995-98
318ti

Power Seats

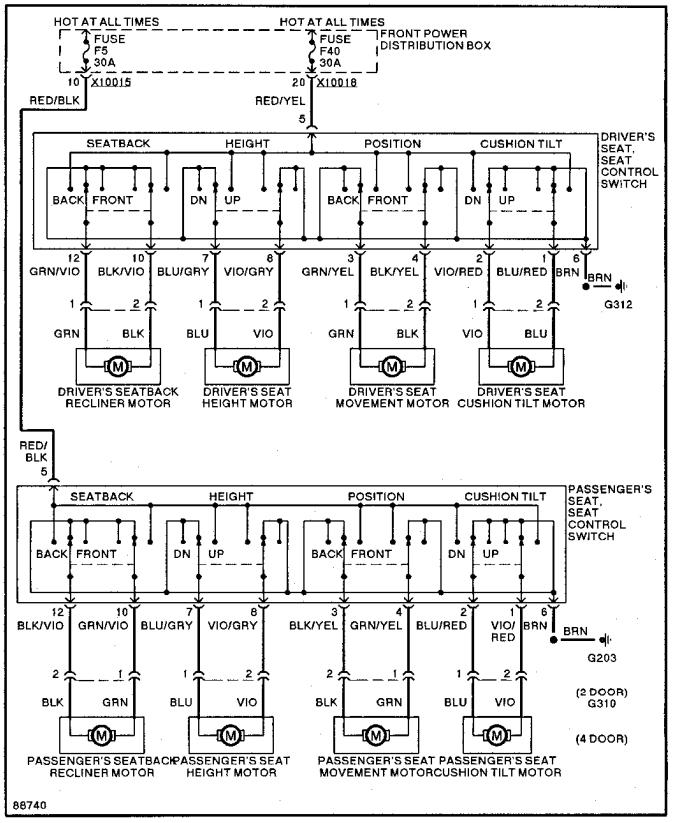


1993

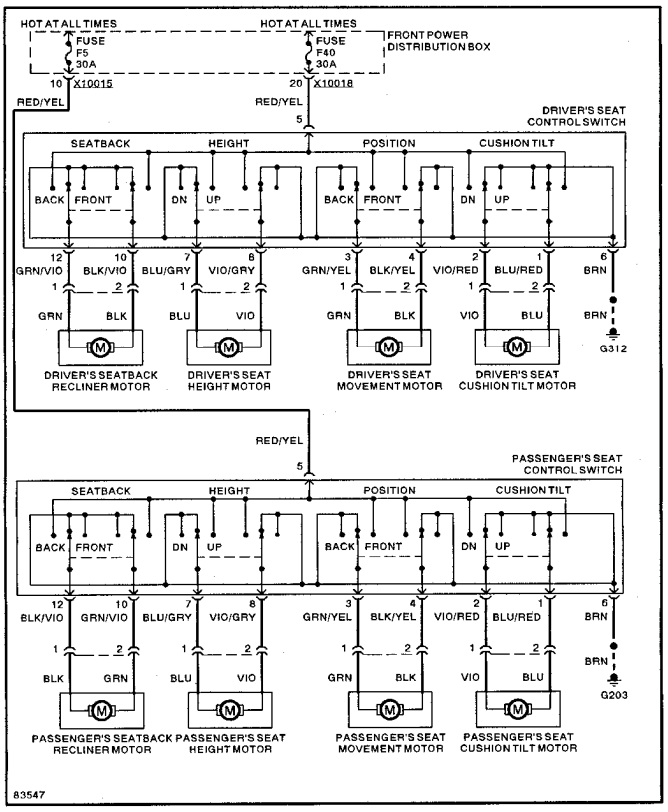


1994-98
Except 318ti

Power Mirrors

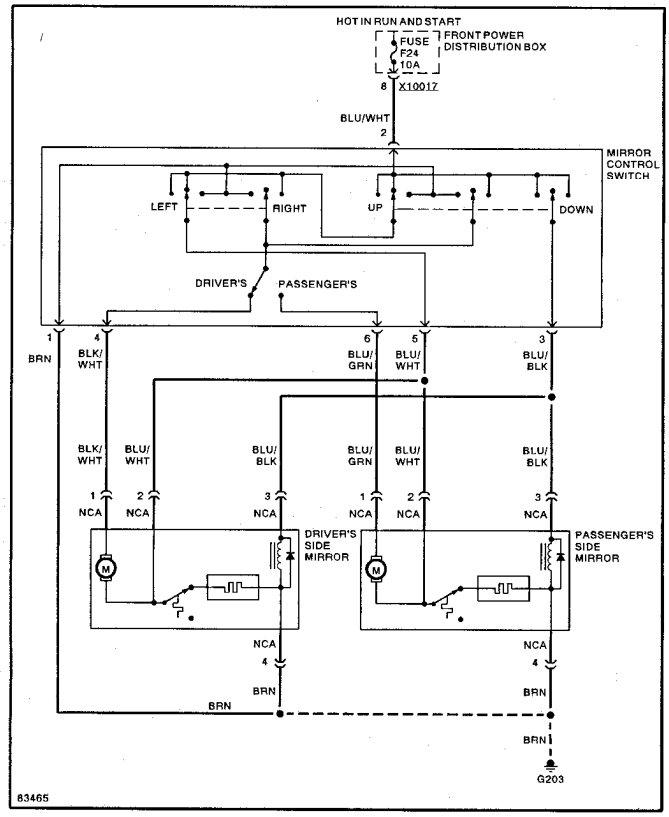


1994-98
Except 318ti

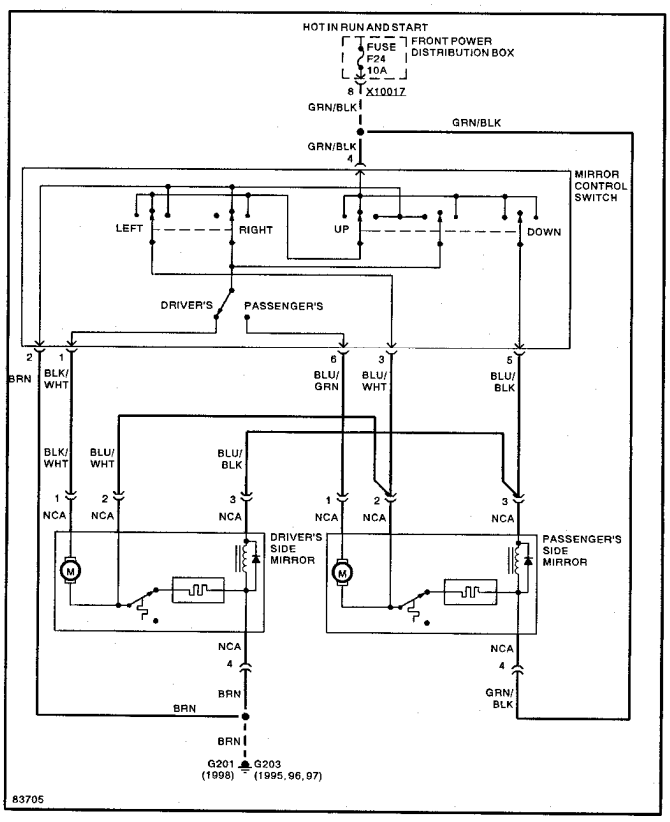


1995-97
318ti

Power Mirrors

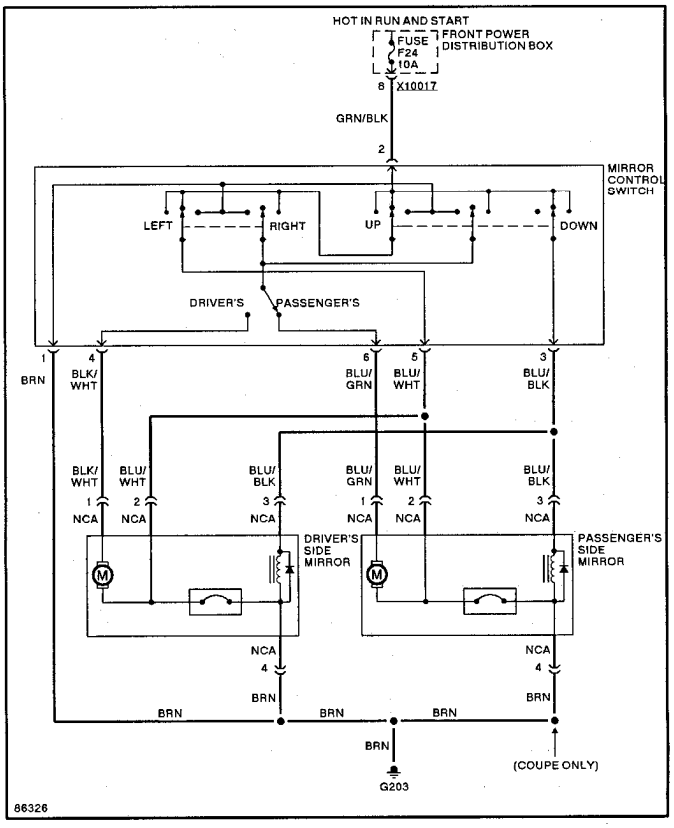


1992

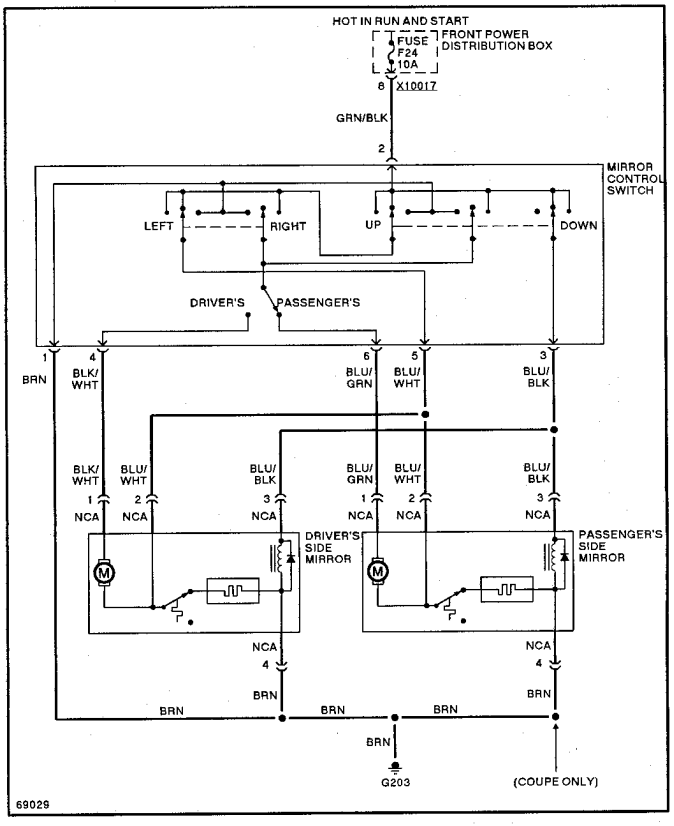

1993


Power Windows

1998 318ti

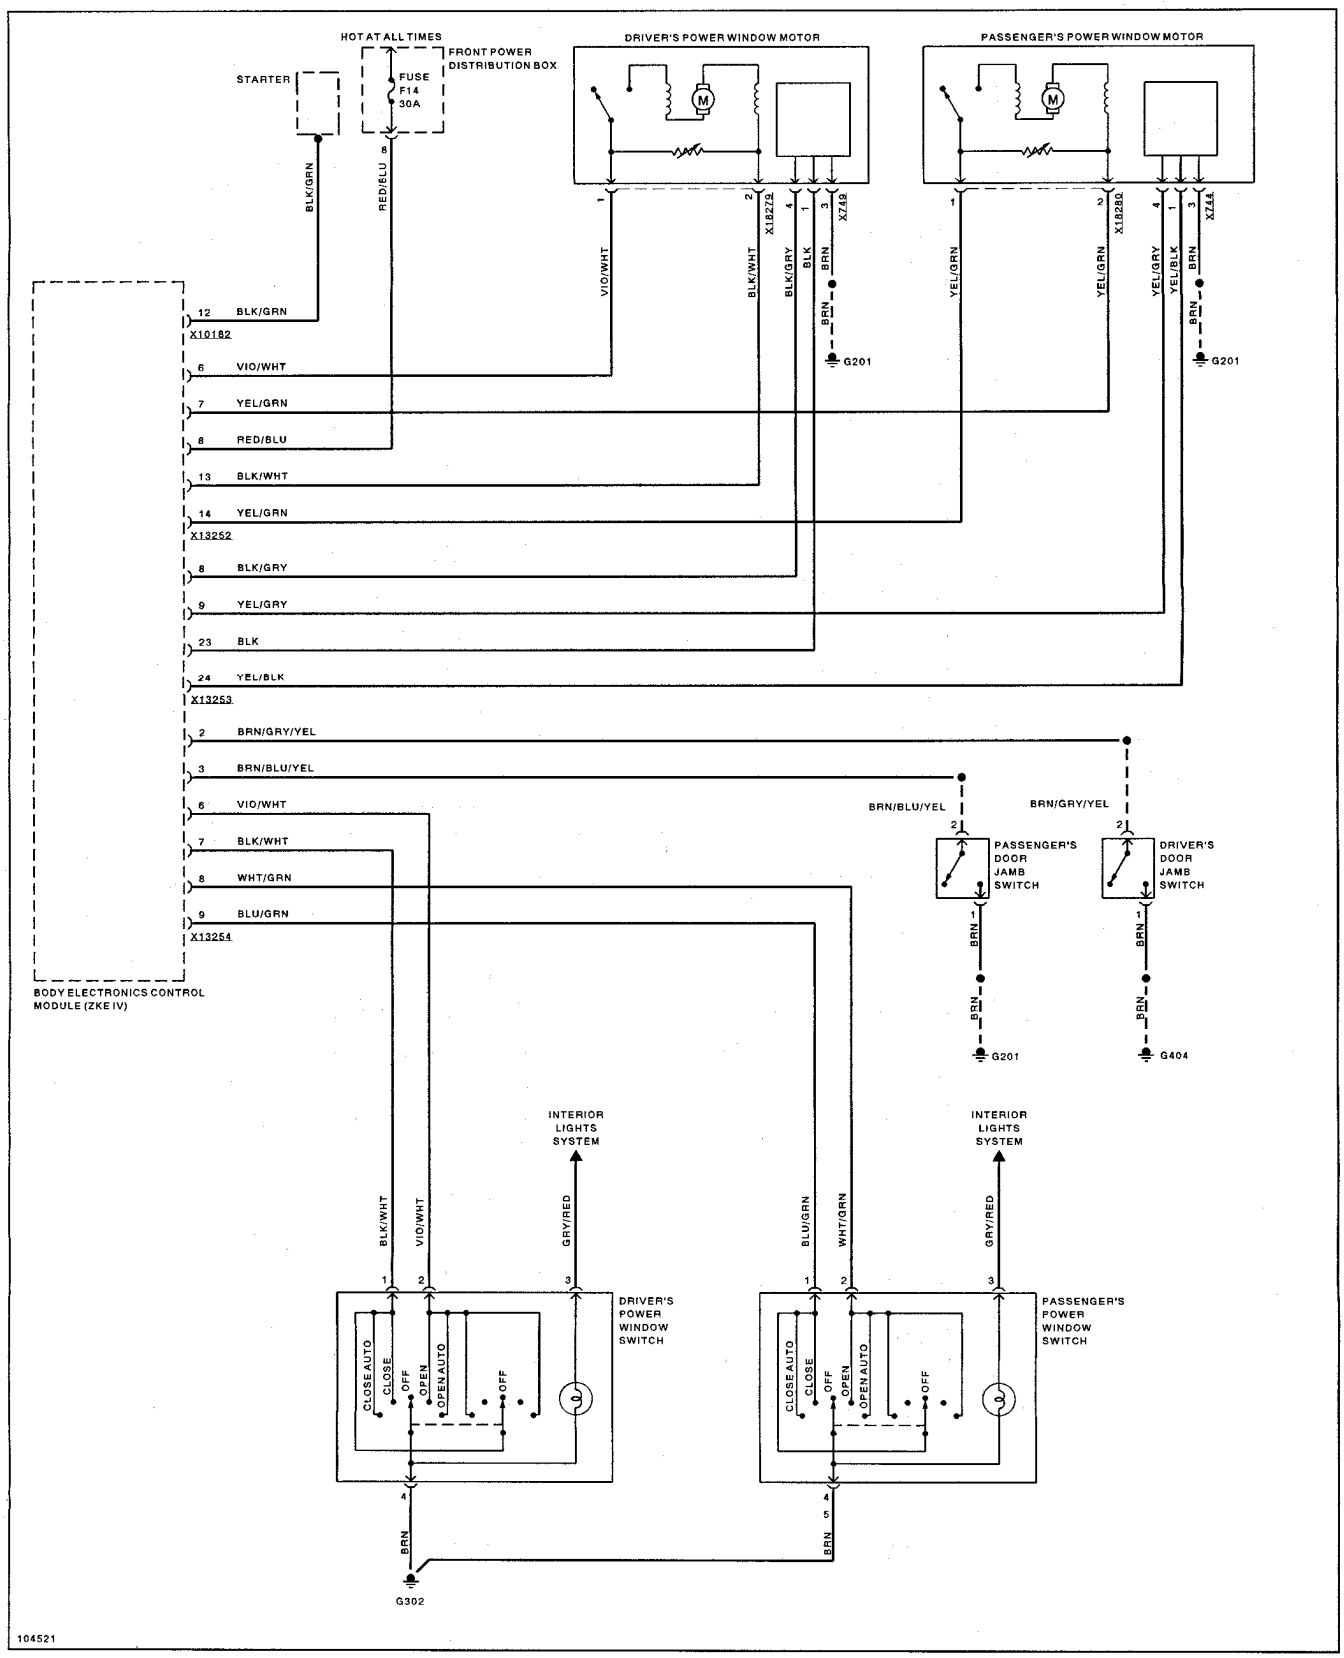

Power Windows


1997 318ti

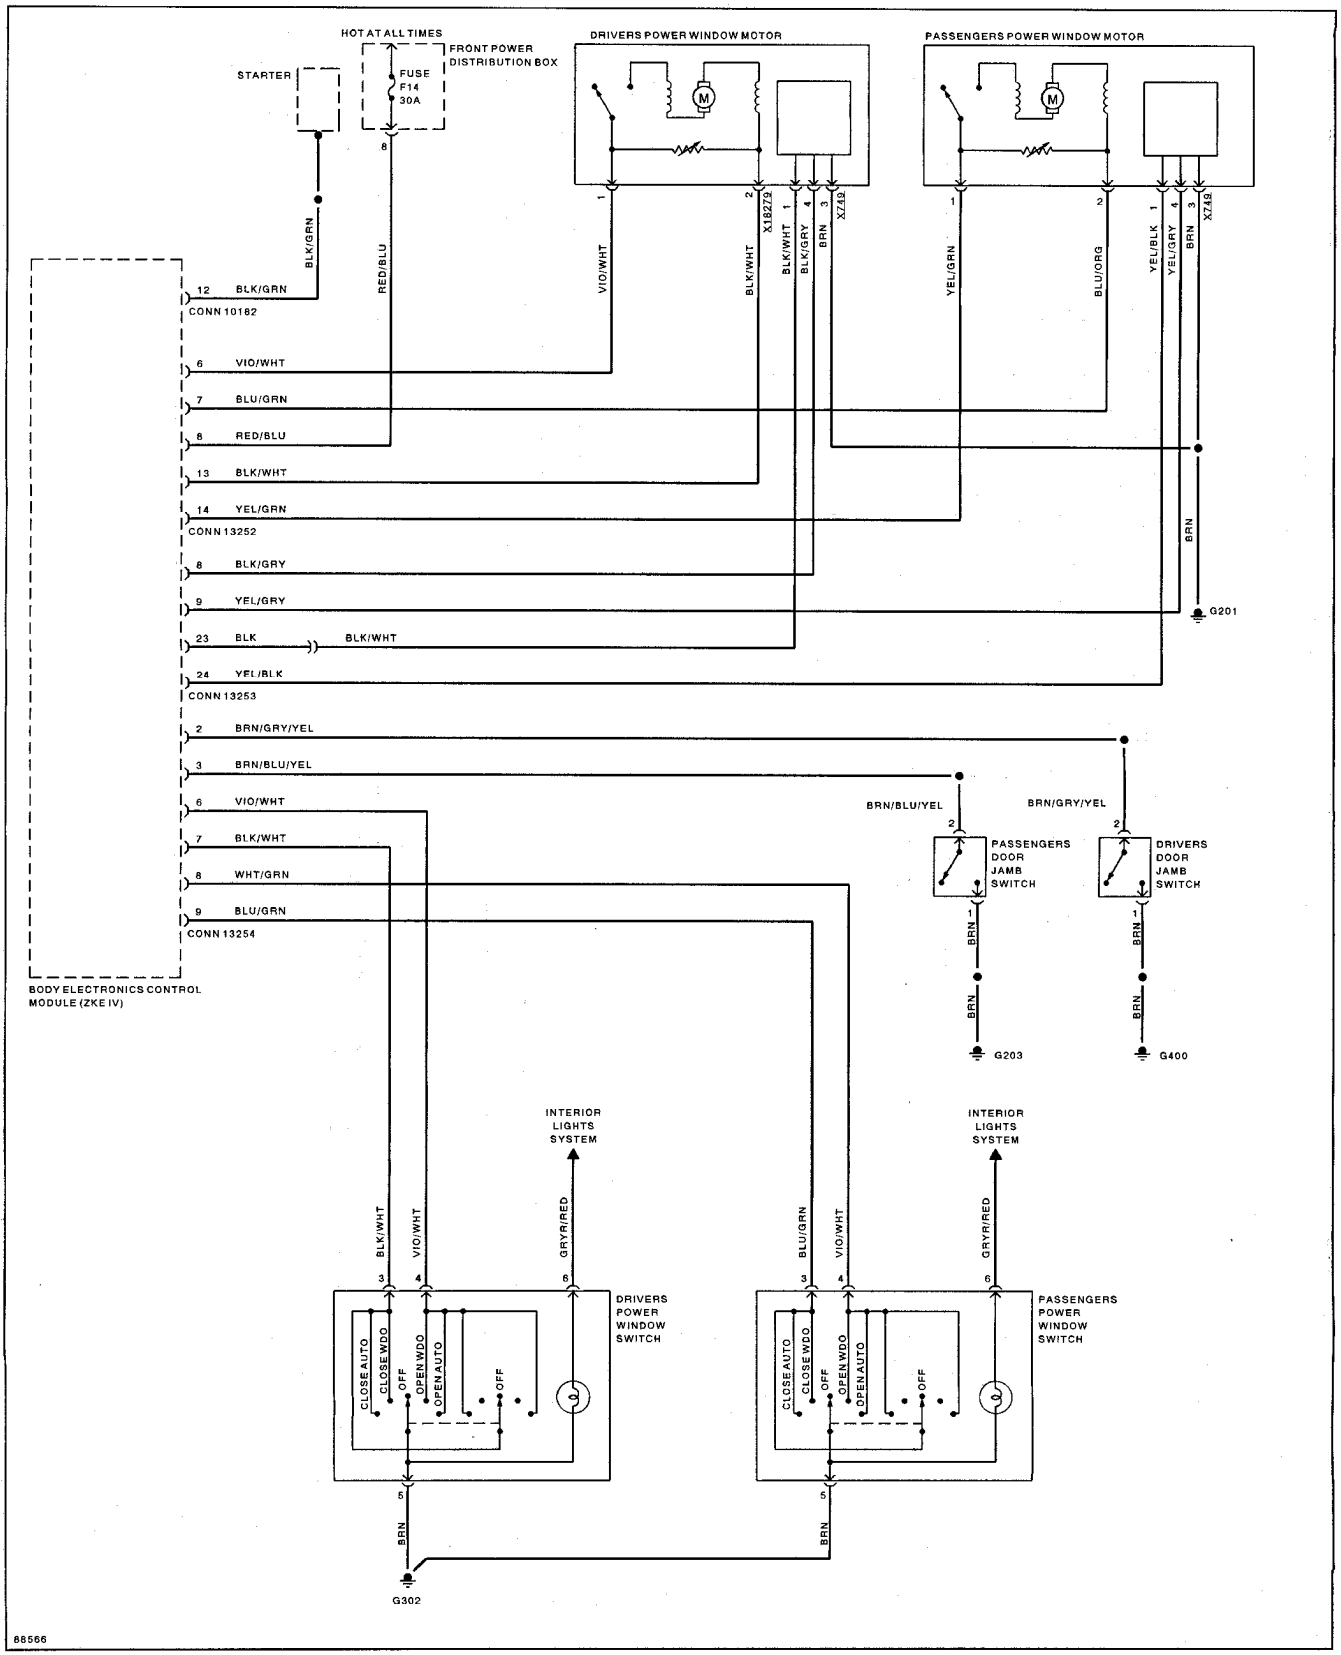

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Power Windows

1995-96 318ti

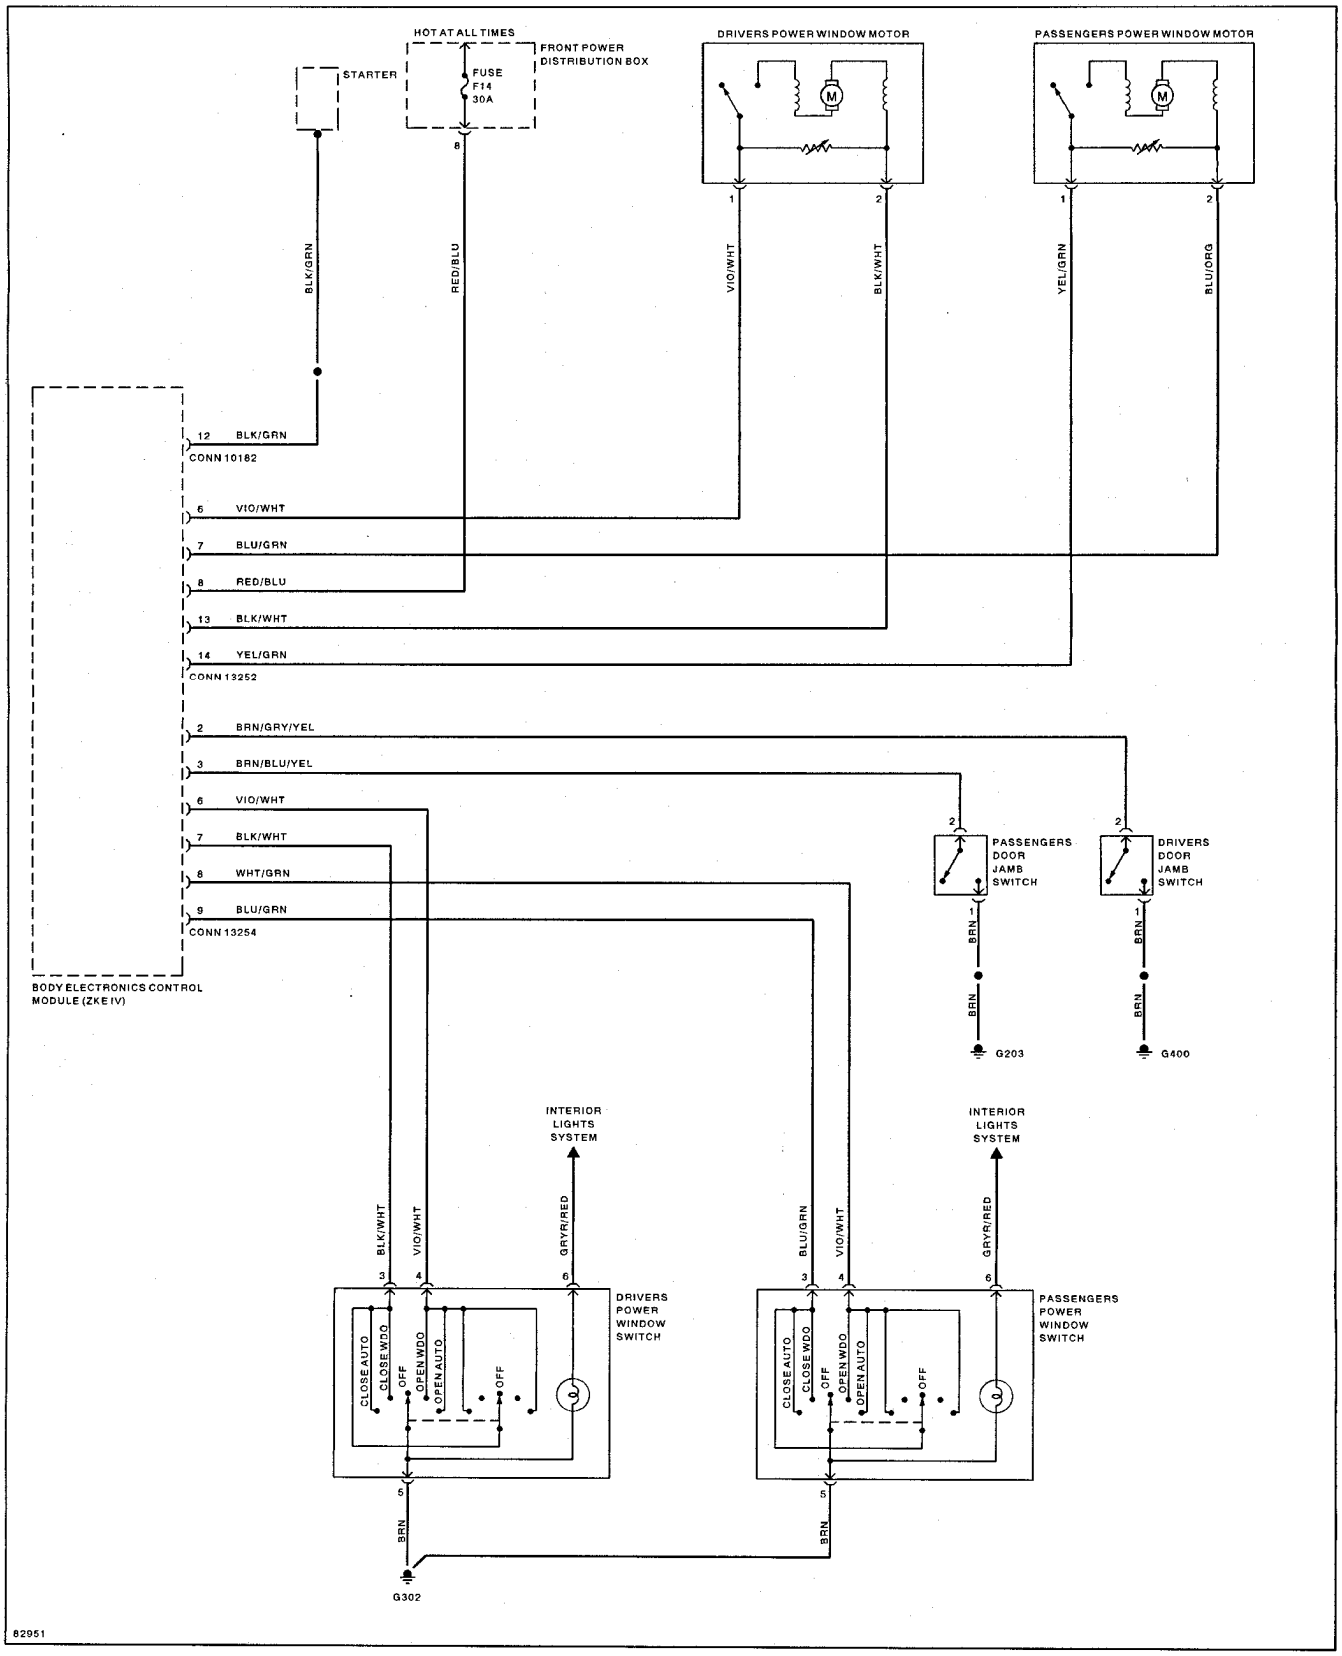


Power Windows

1998 Except 318i, 318ti (2 of 2)

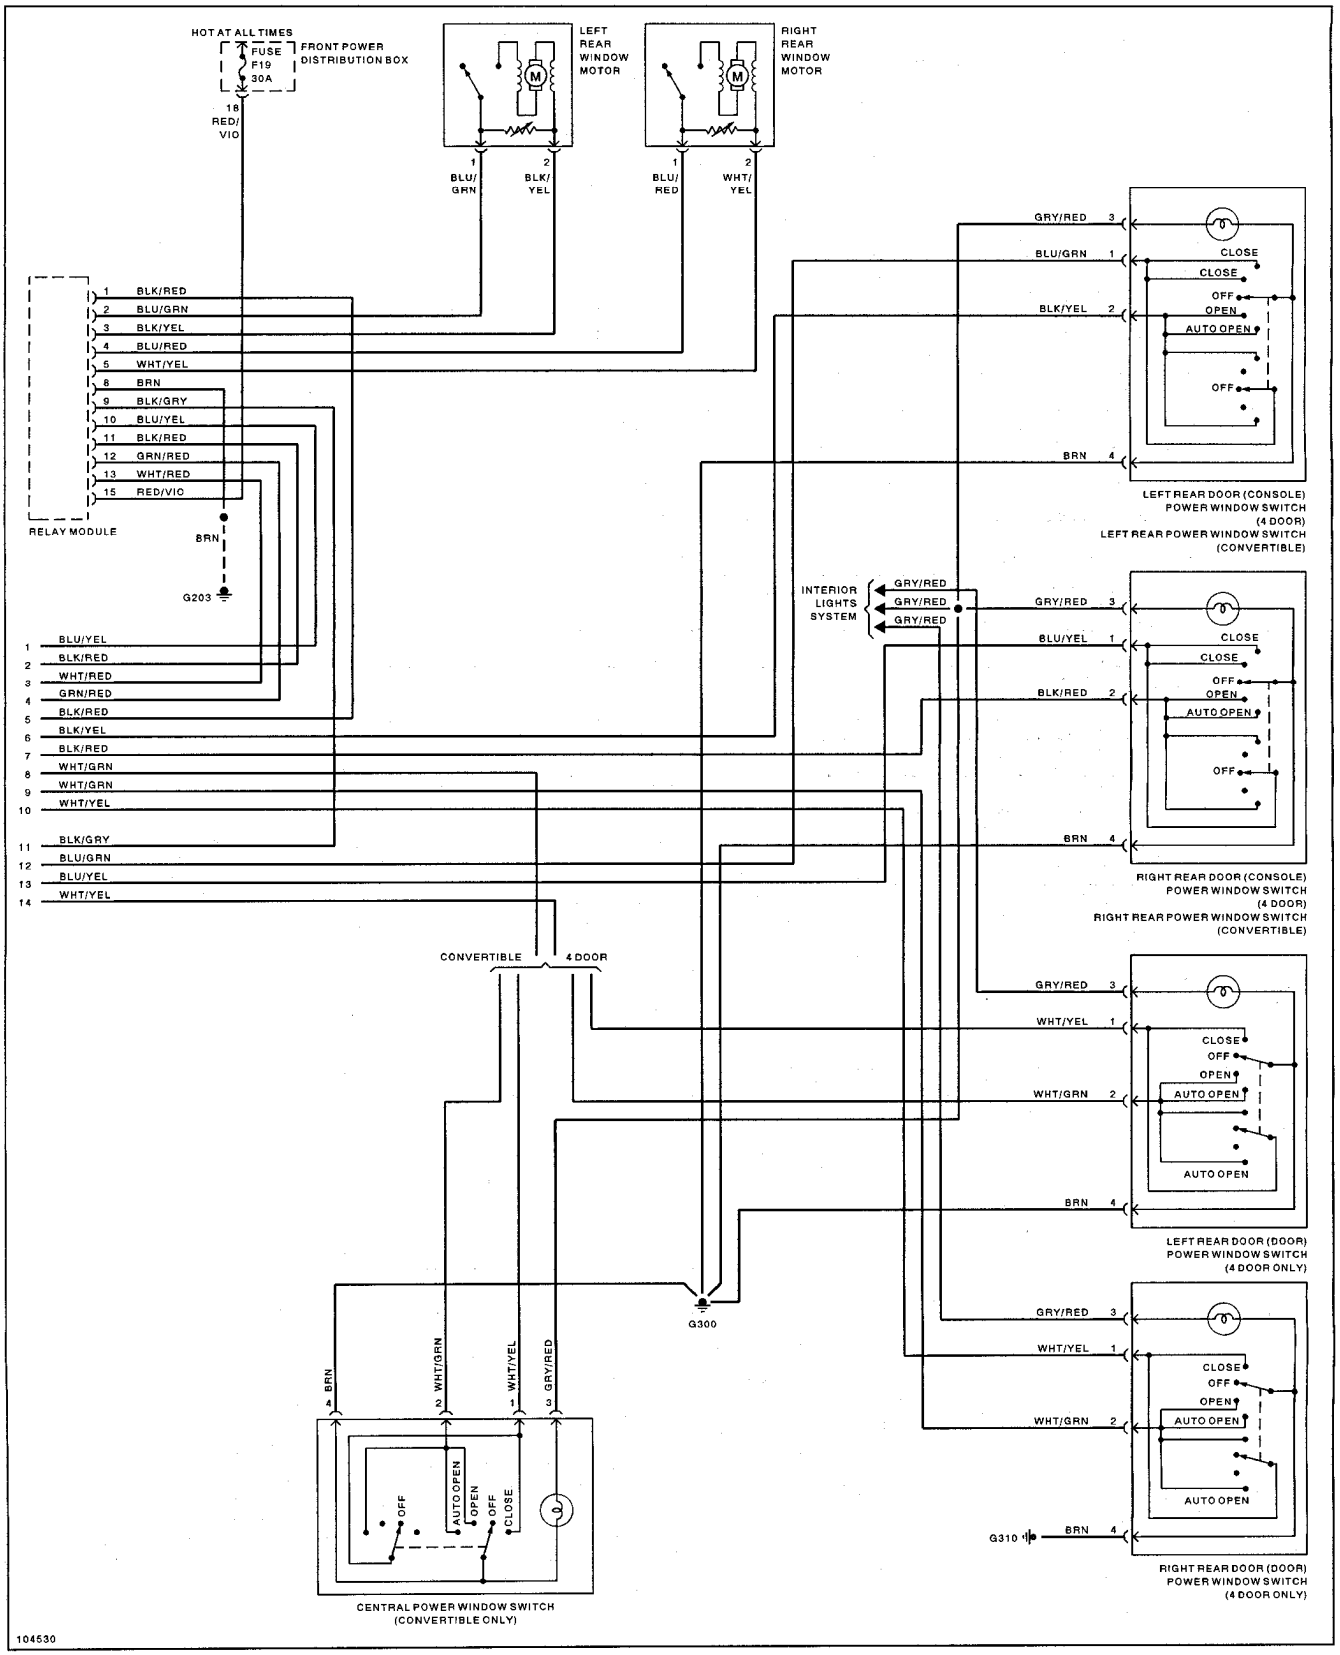


Power Windows

1998 Except 318i, 318ti (1 of 2)

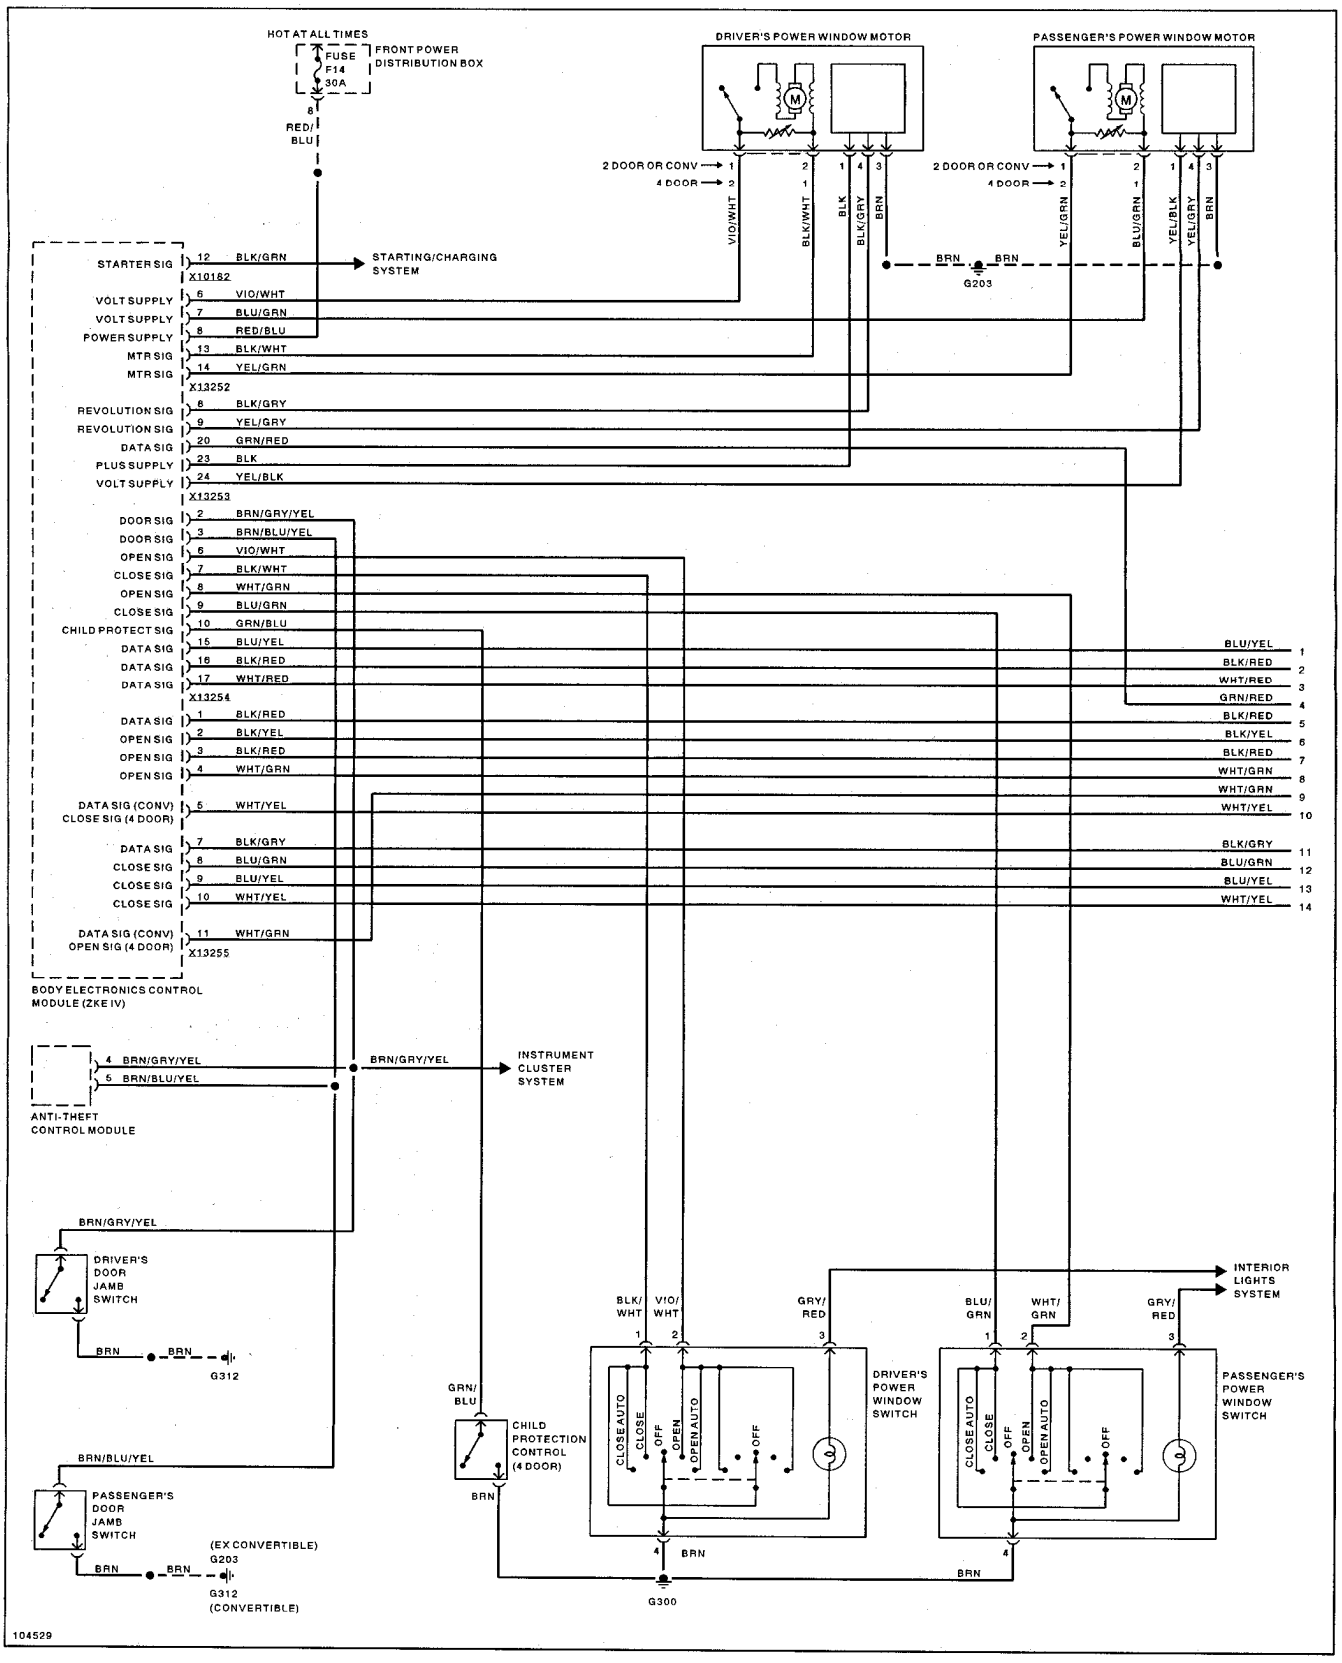


Power Windows

1994-97 Except 318ti (2 of 2)

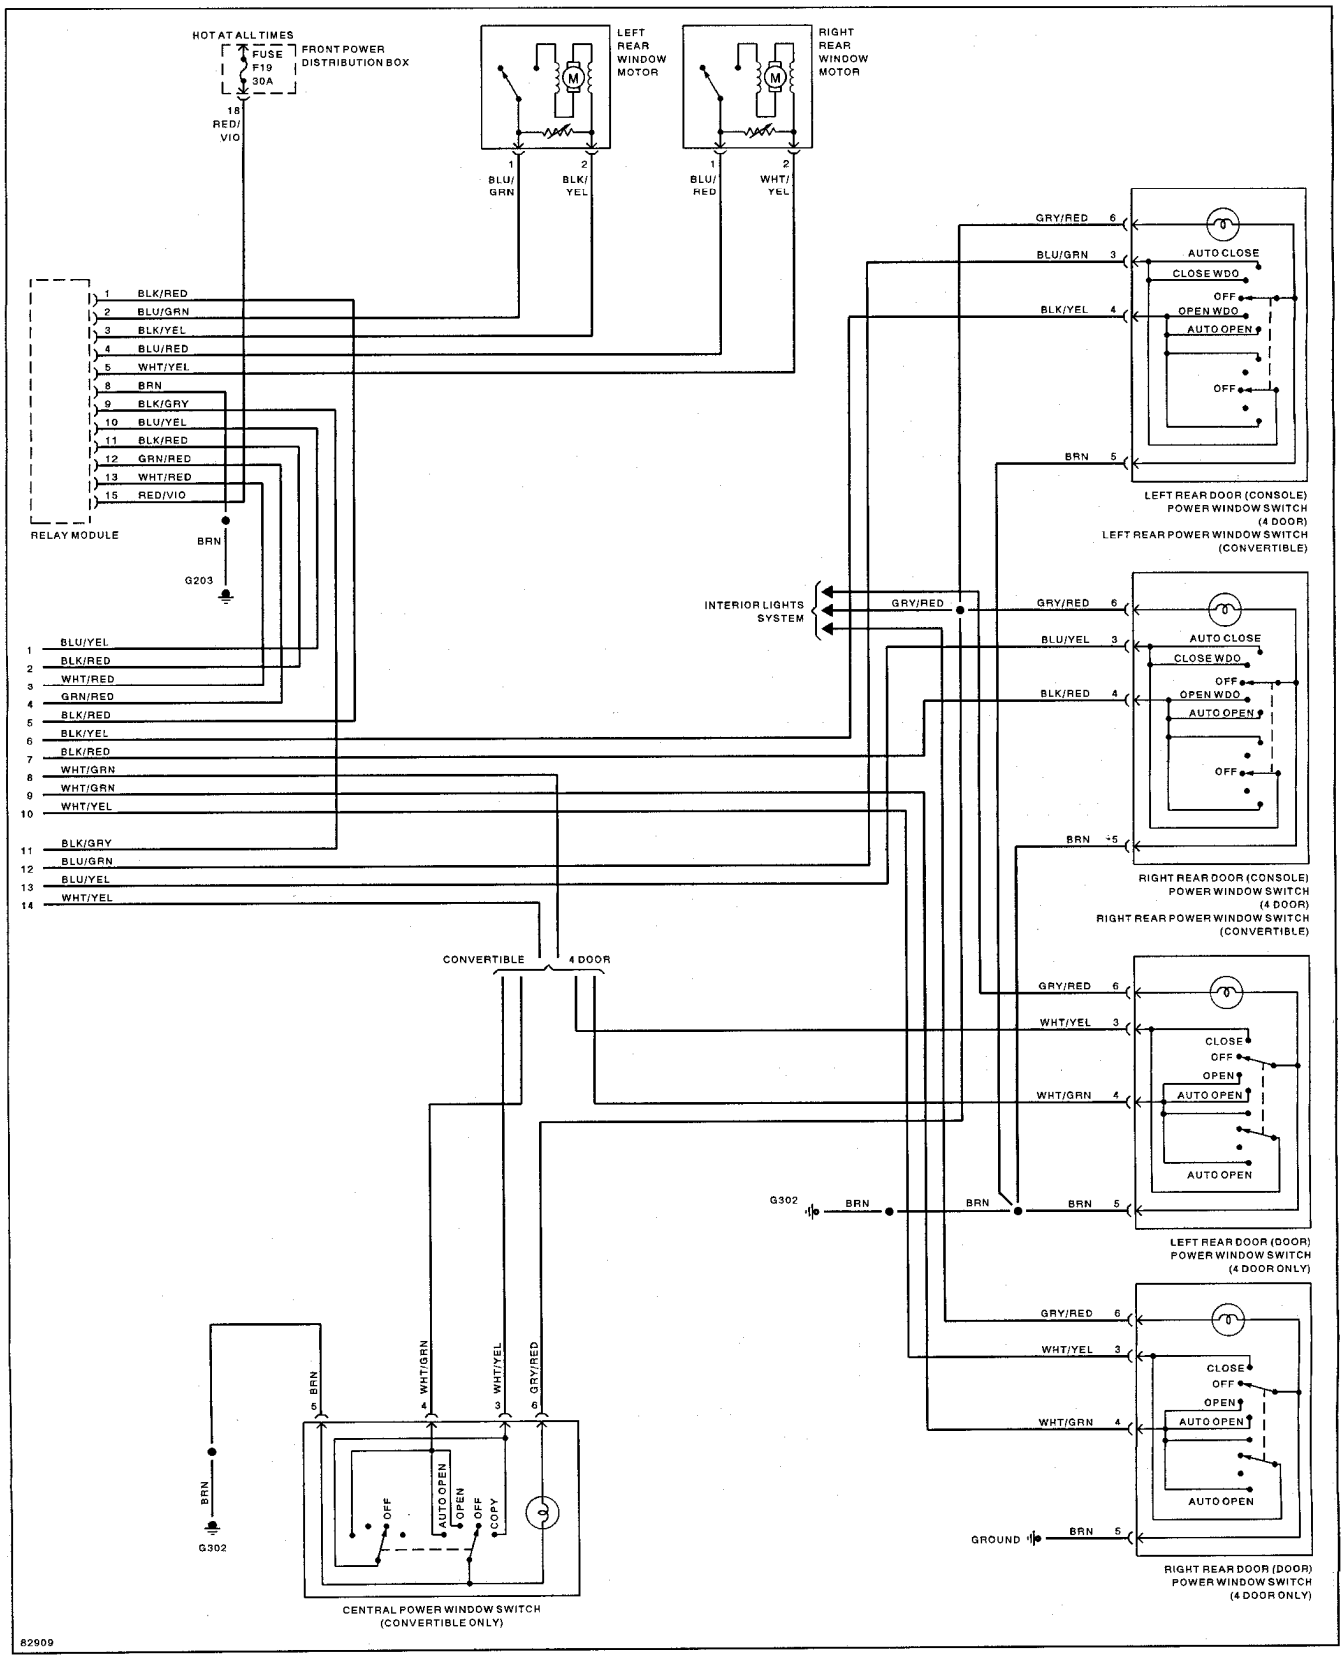


Power Windows

1994-97 Except 318ti (1 of 2)

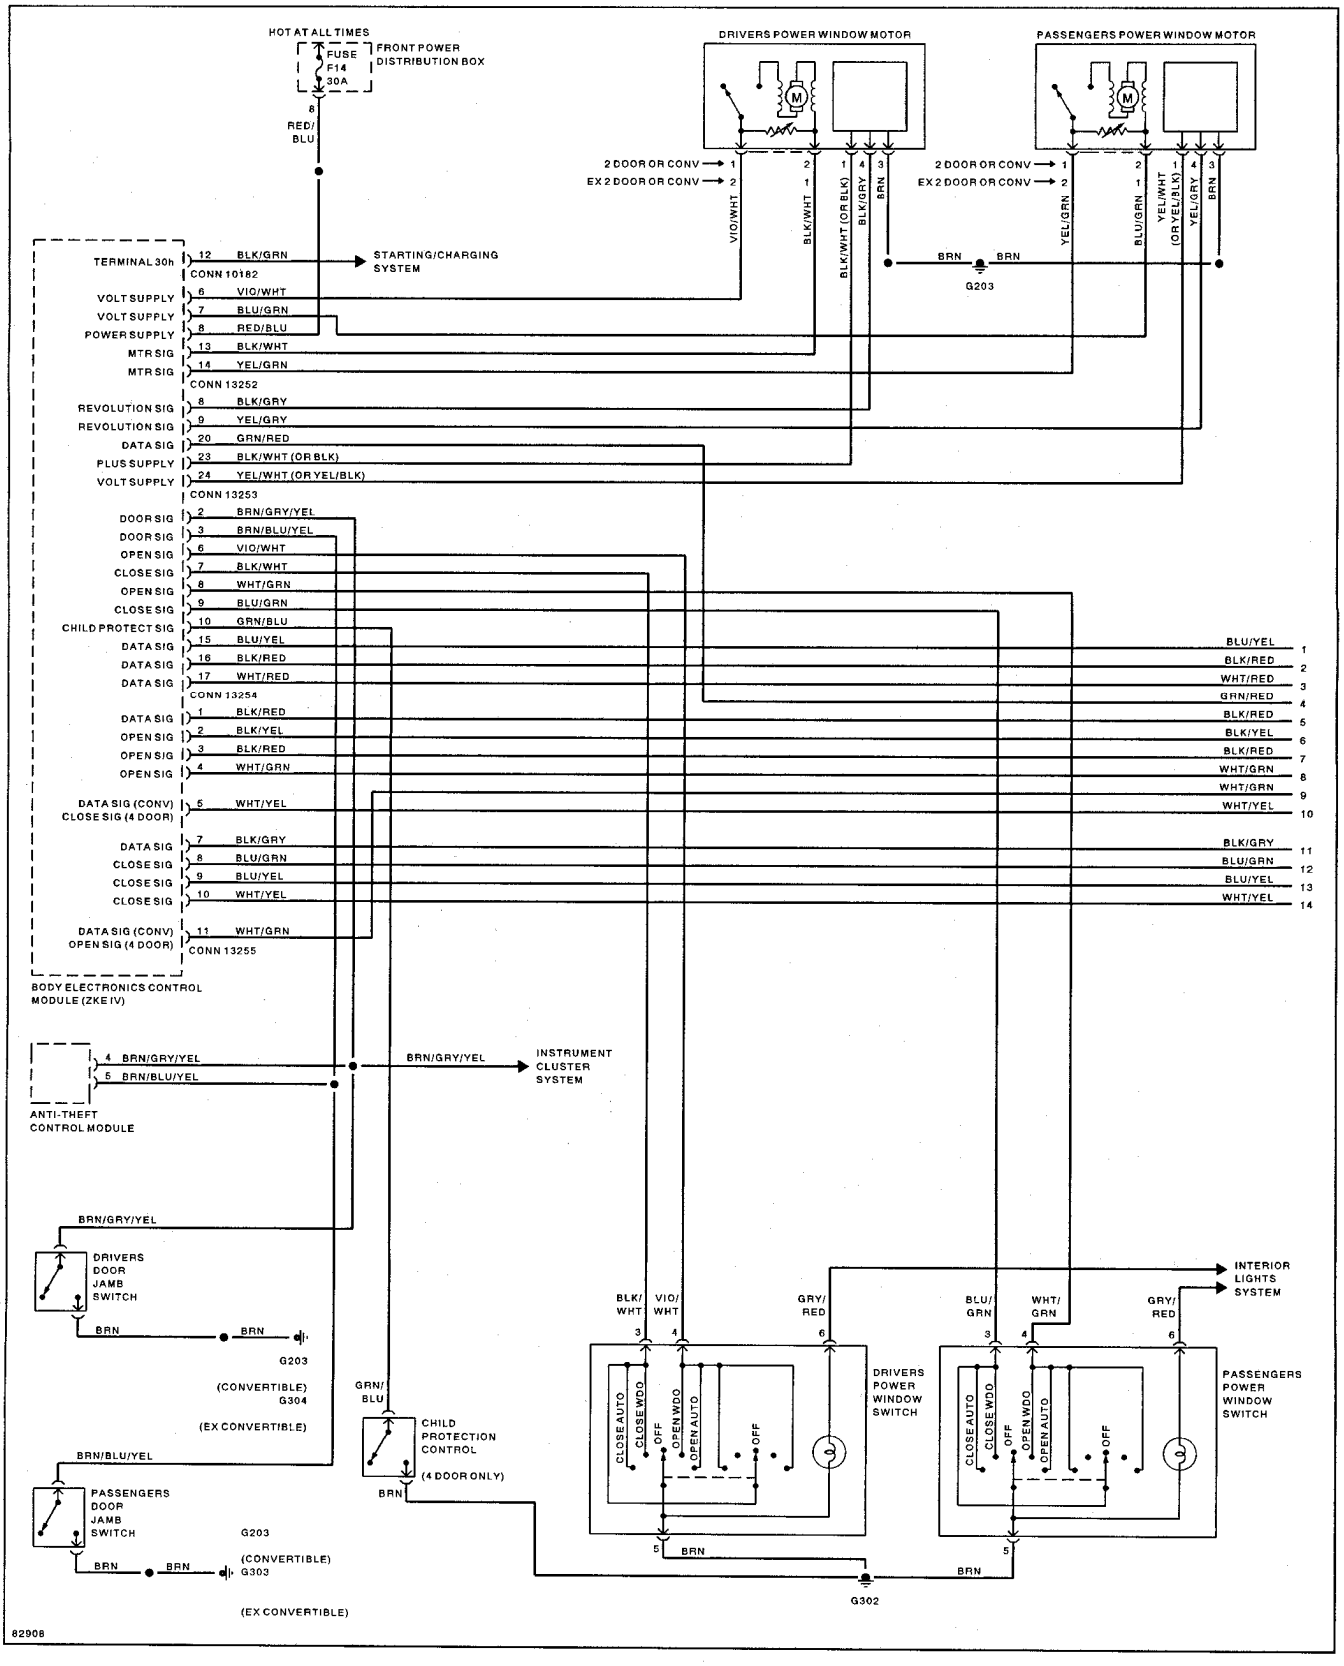


Power Windows

1992-93 318i & 325i

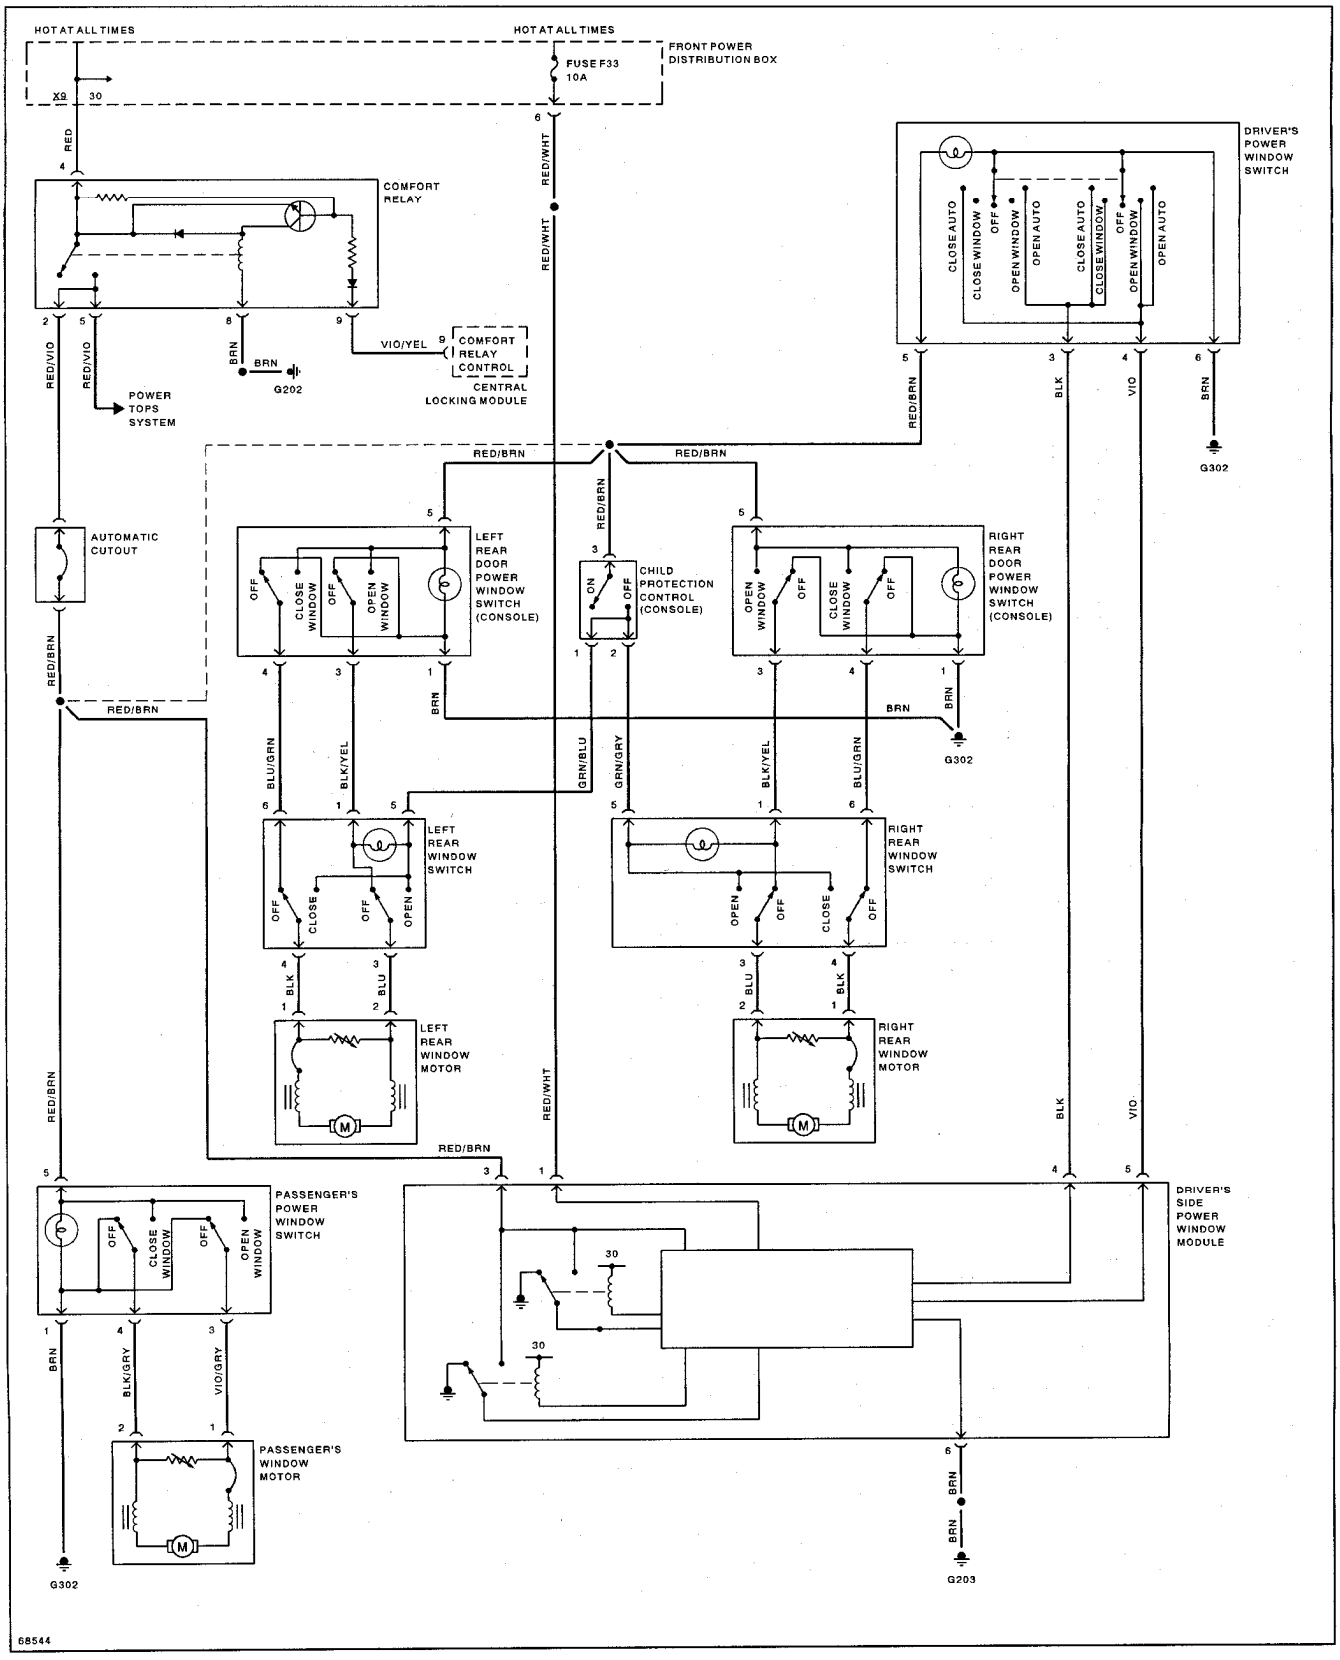


Power Windows

1993 318is & 325is

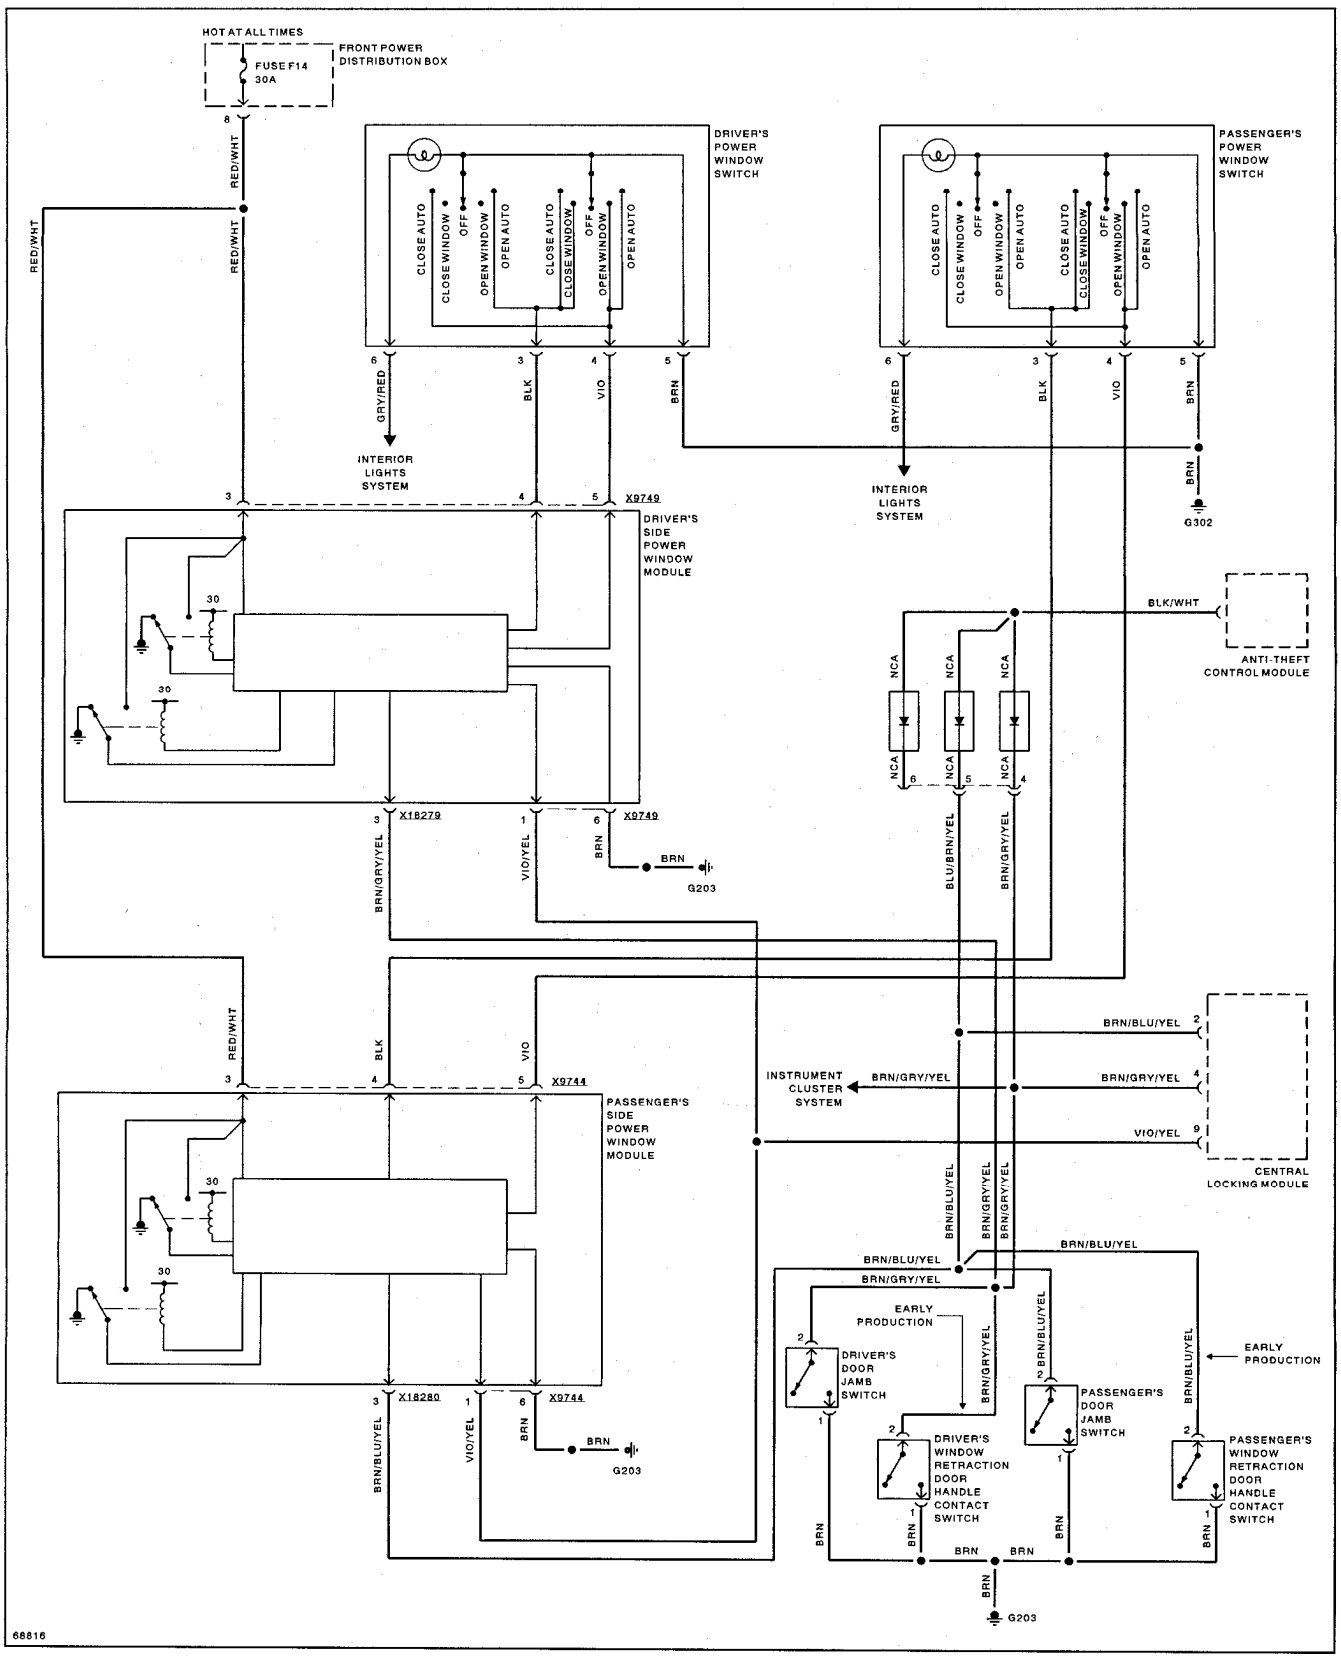

Power Windows


1992 318is & 325is

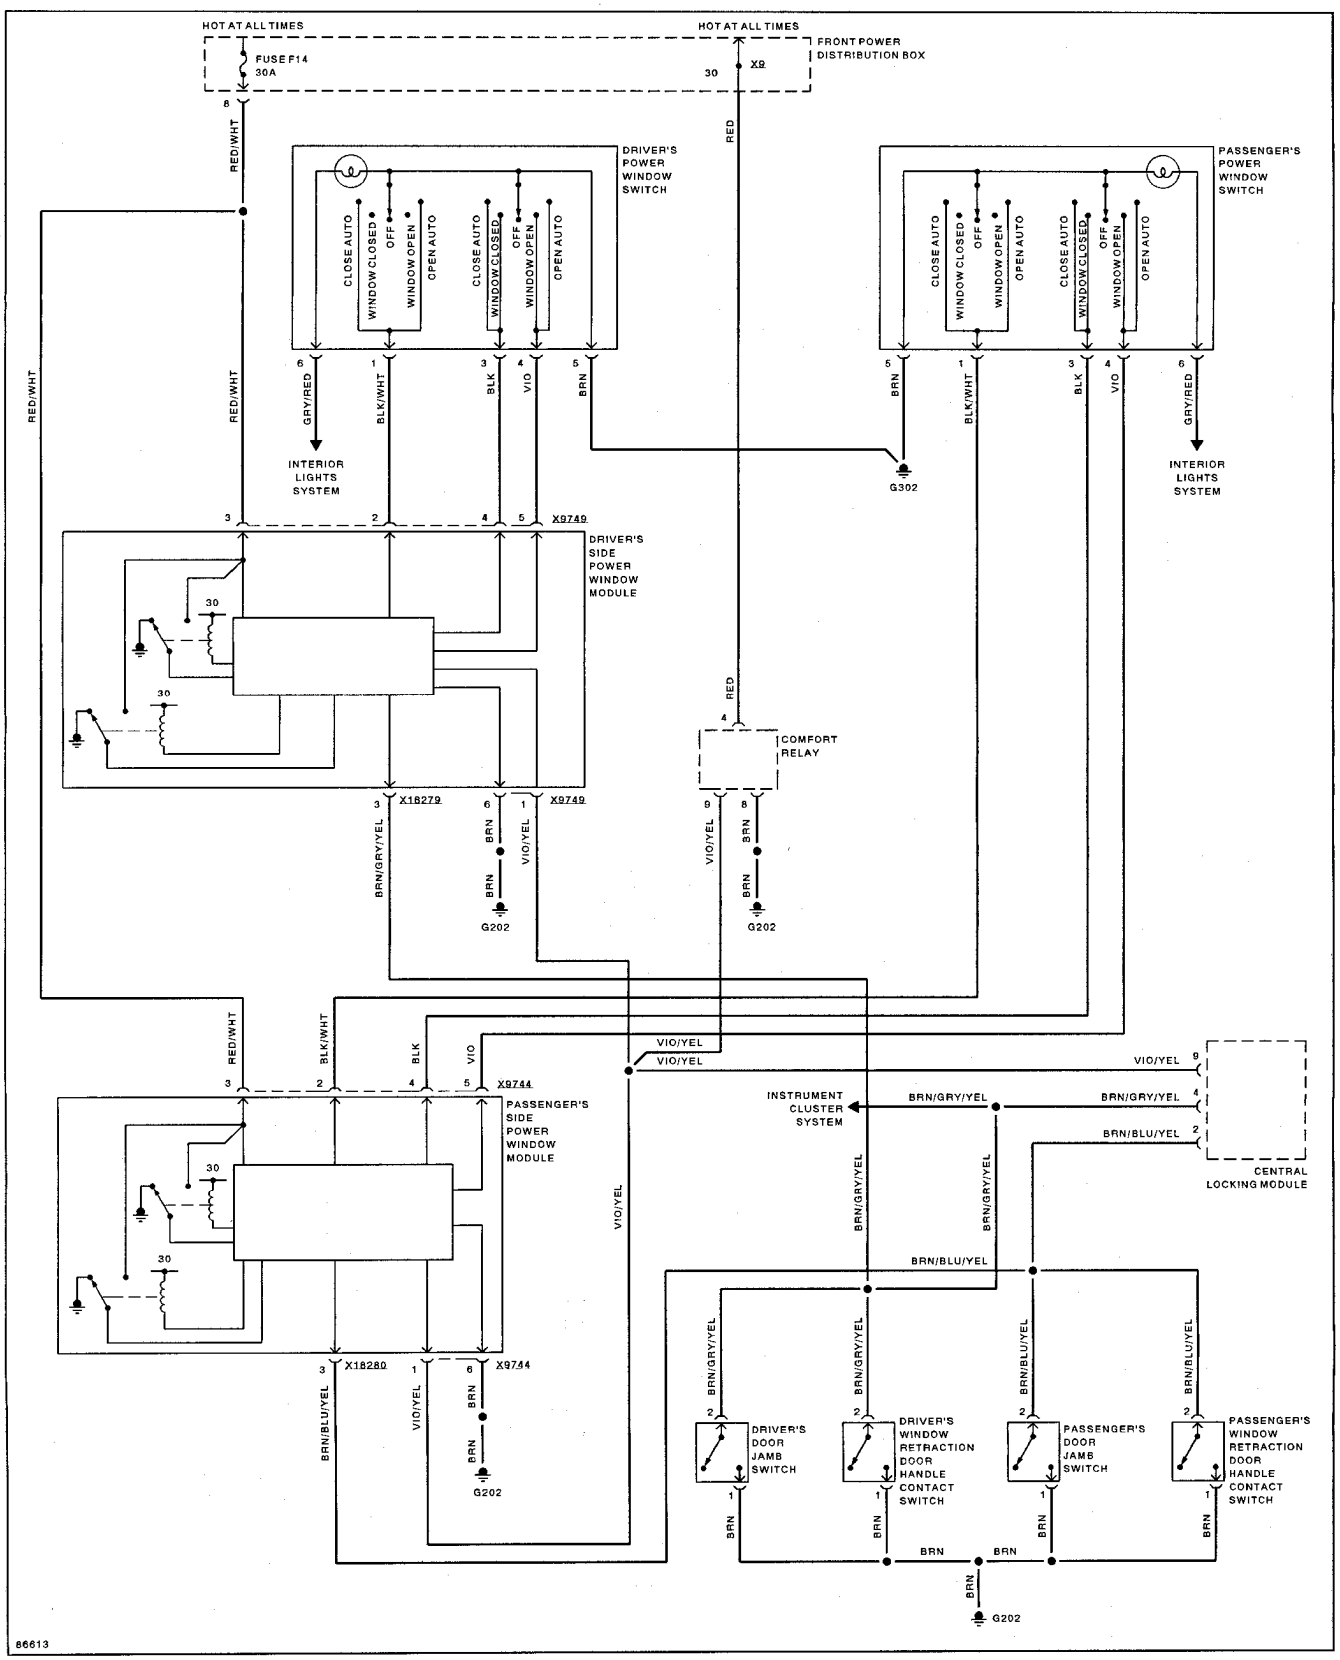

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Power Door Locks

1995–1998 318ti

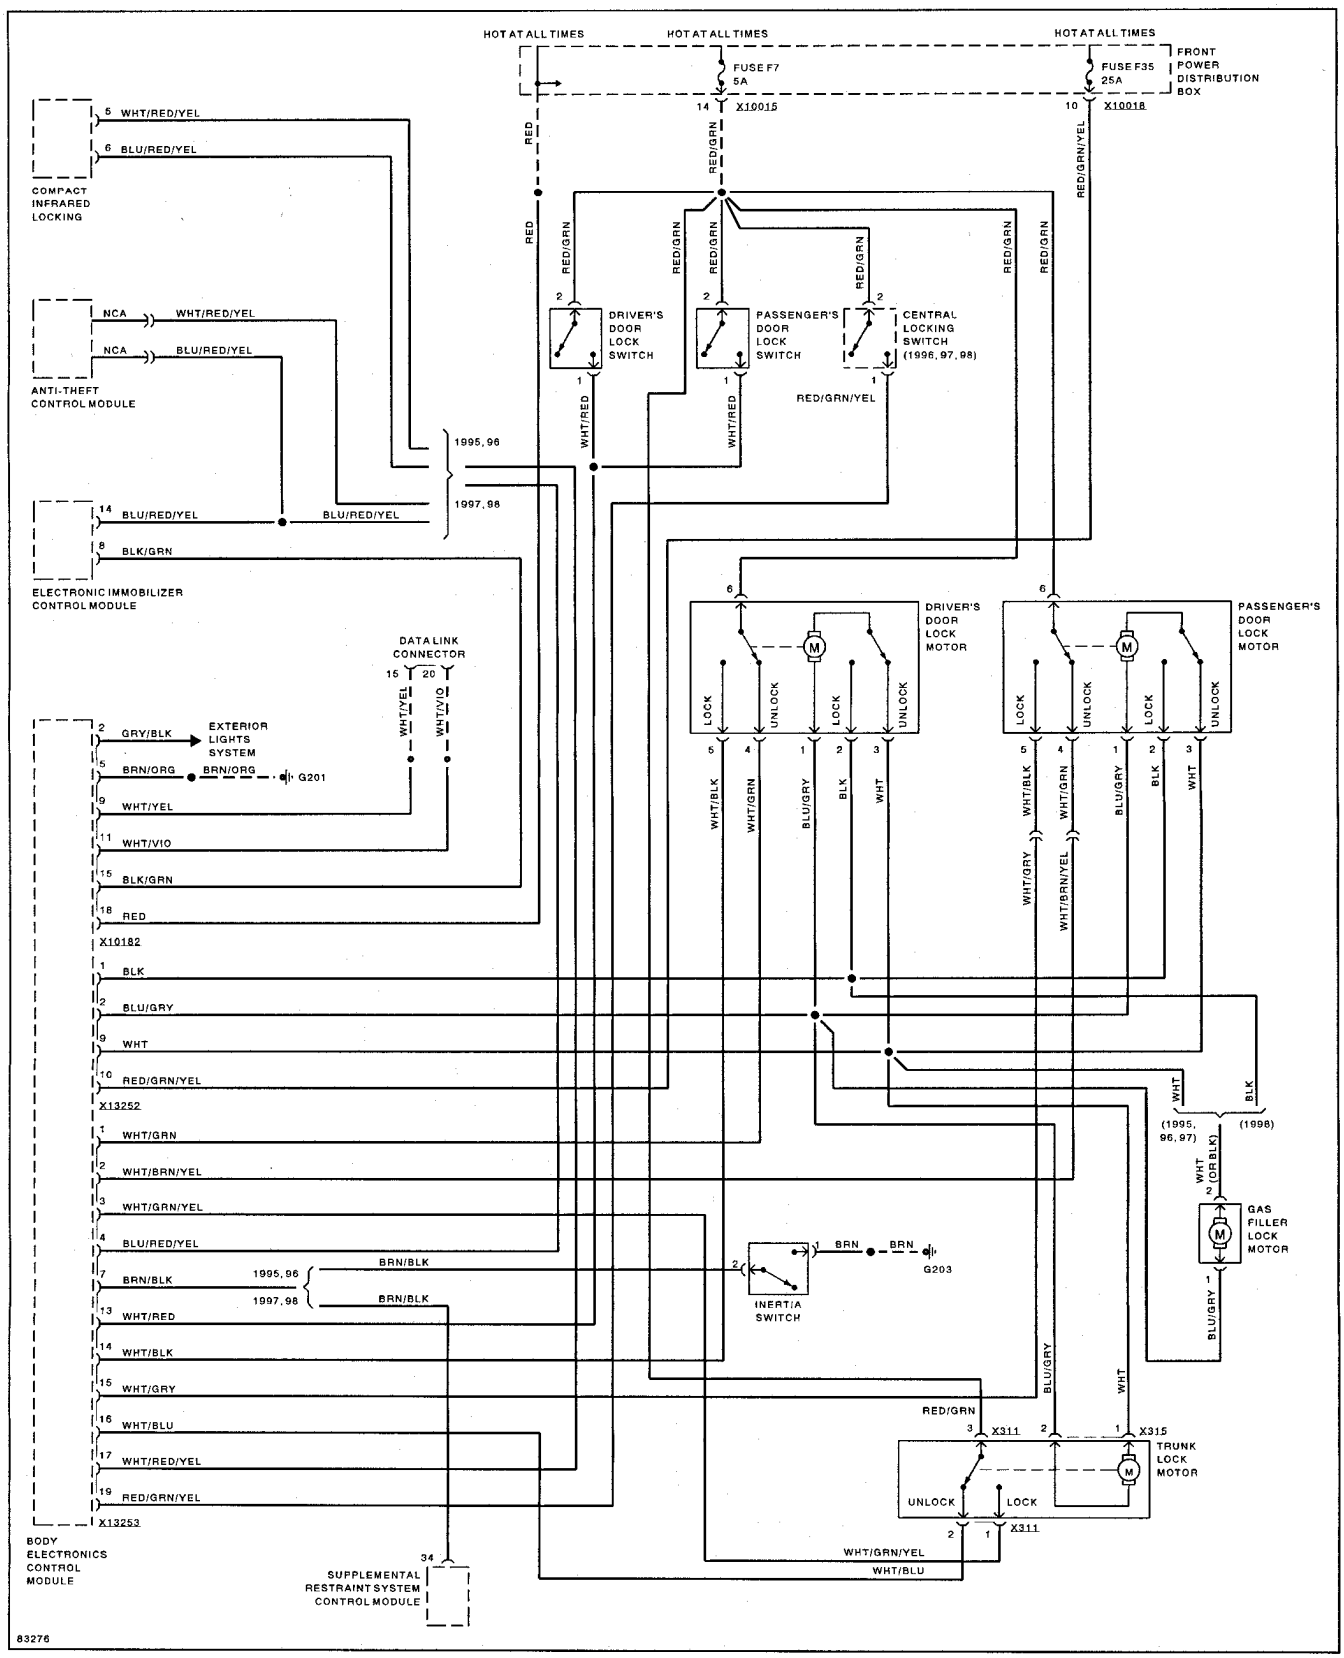


Power Door Locks

1998 Except 318ti

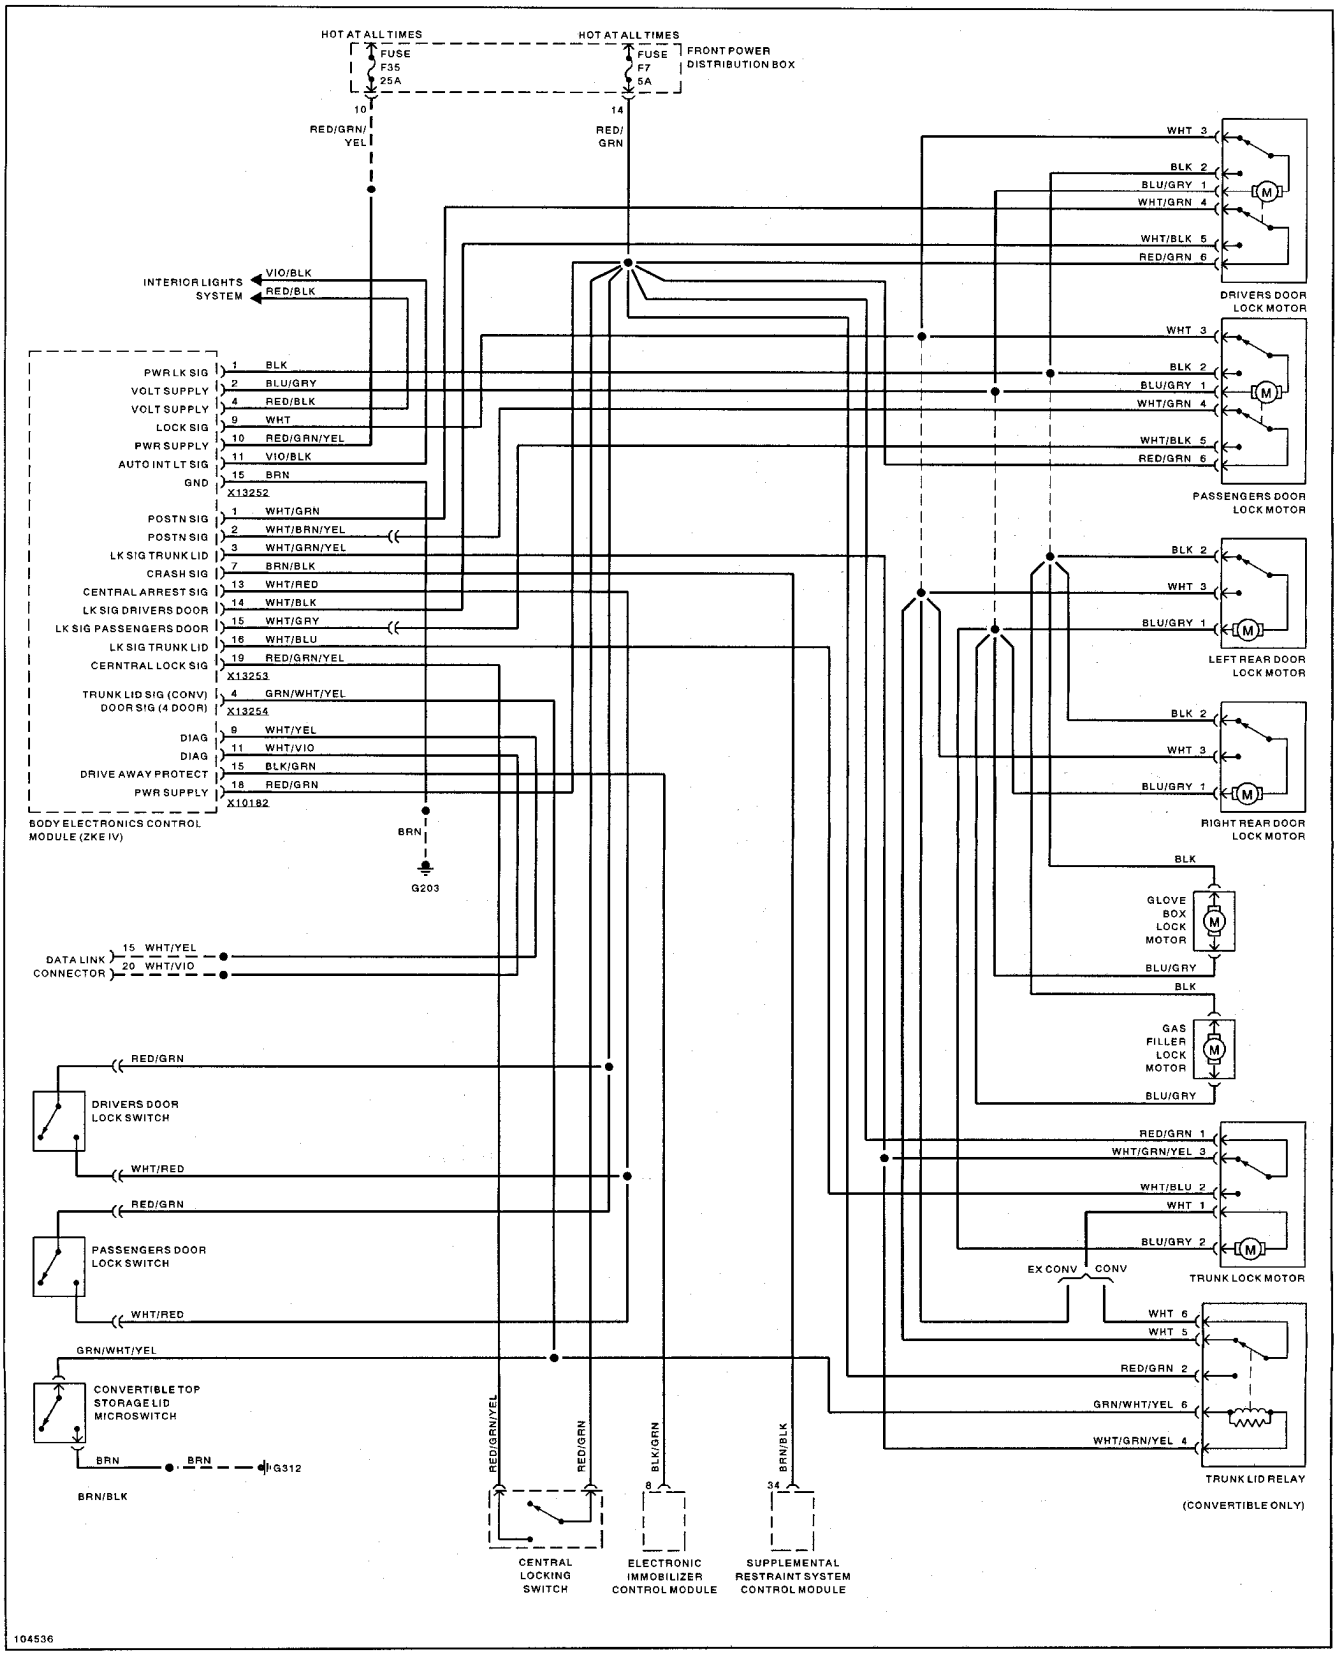


Power Door Locks

1994-97 Except 318ti

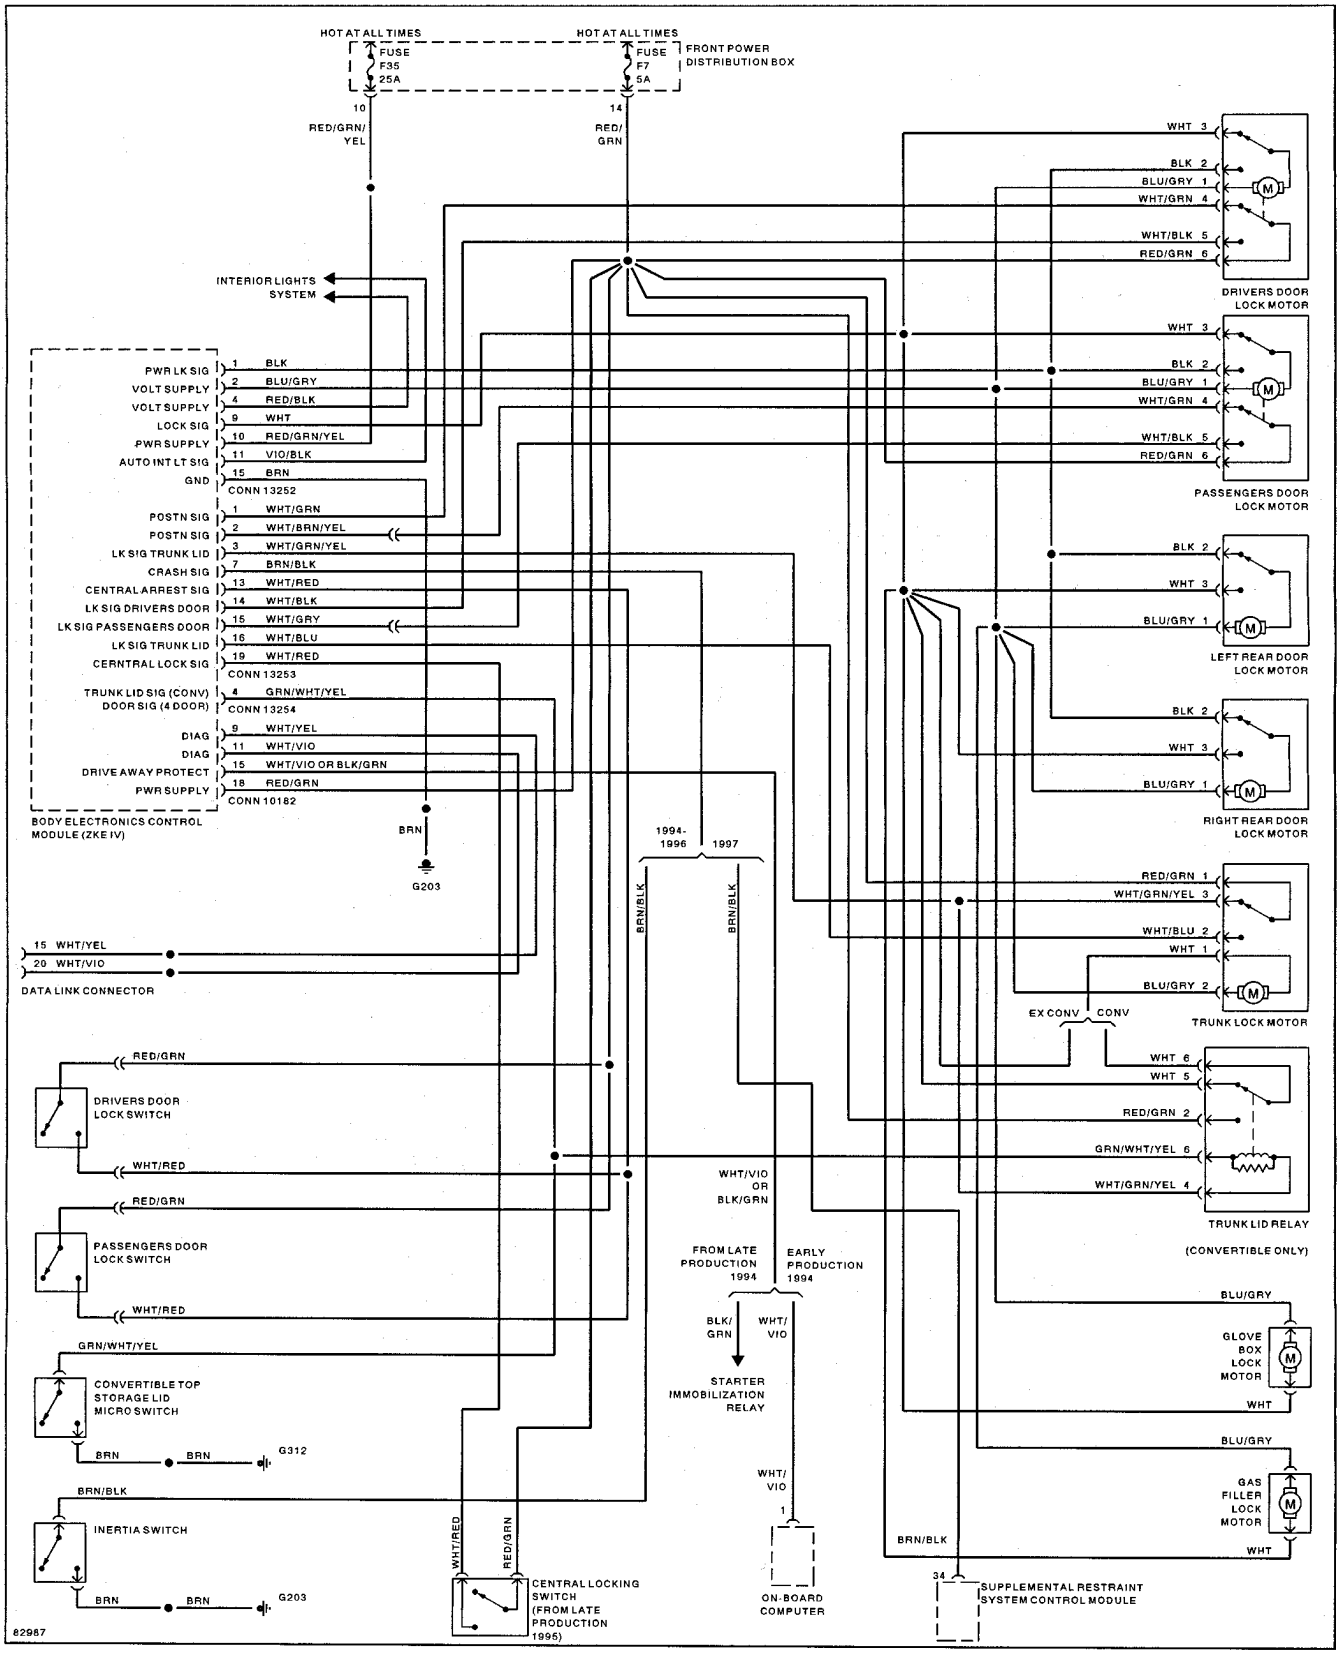


Power Door Locks

1993

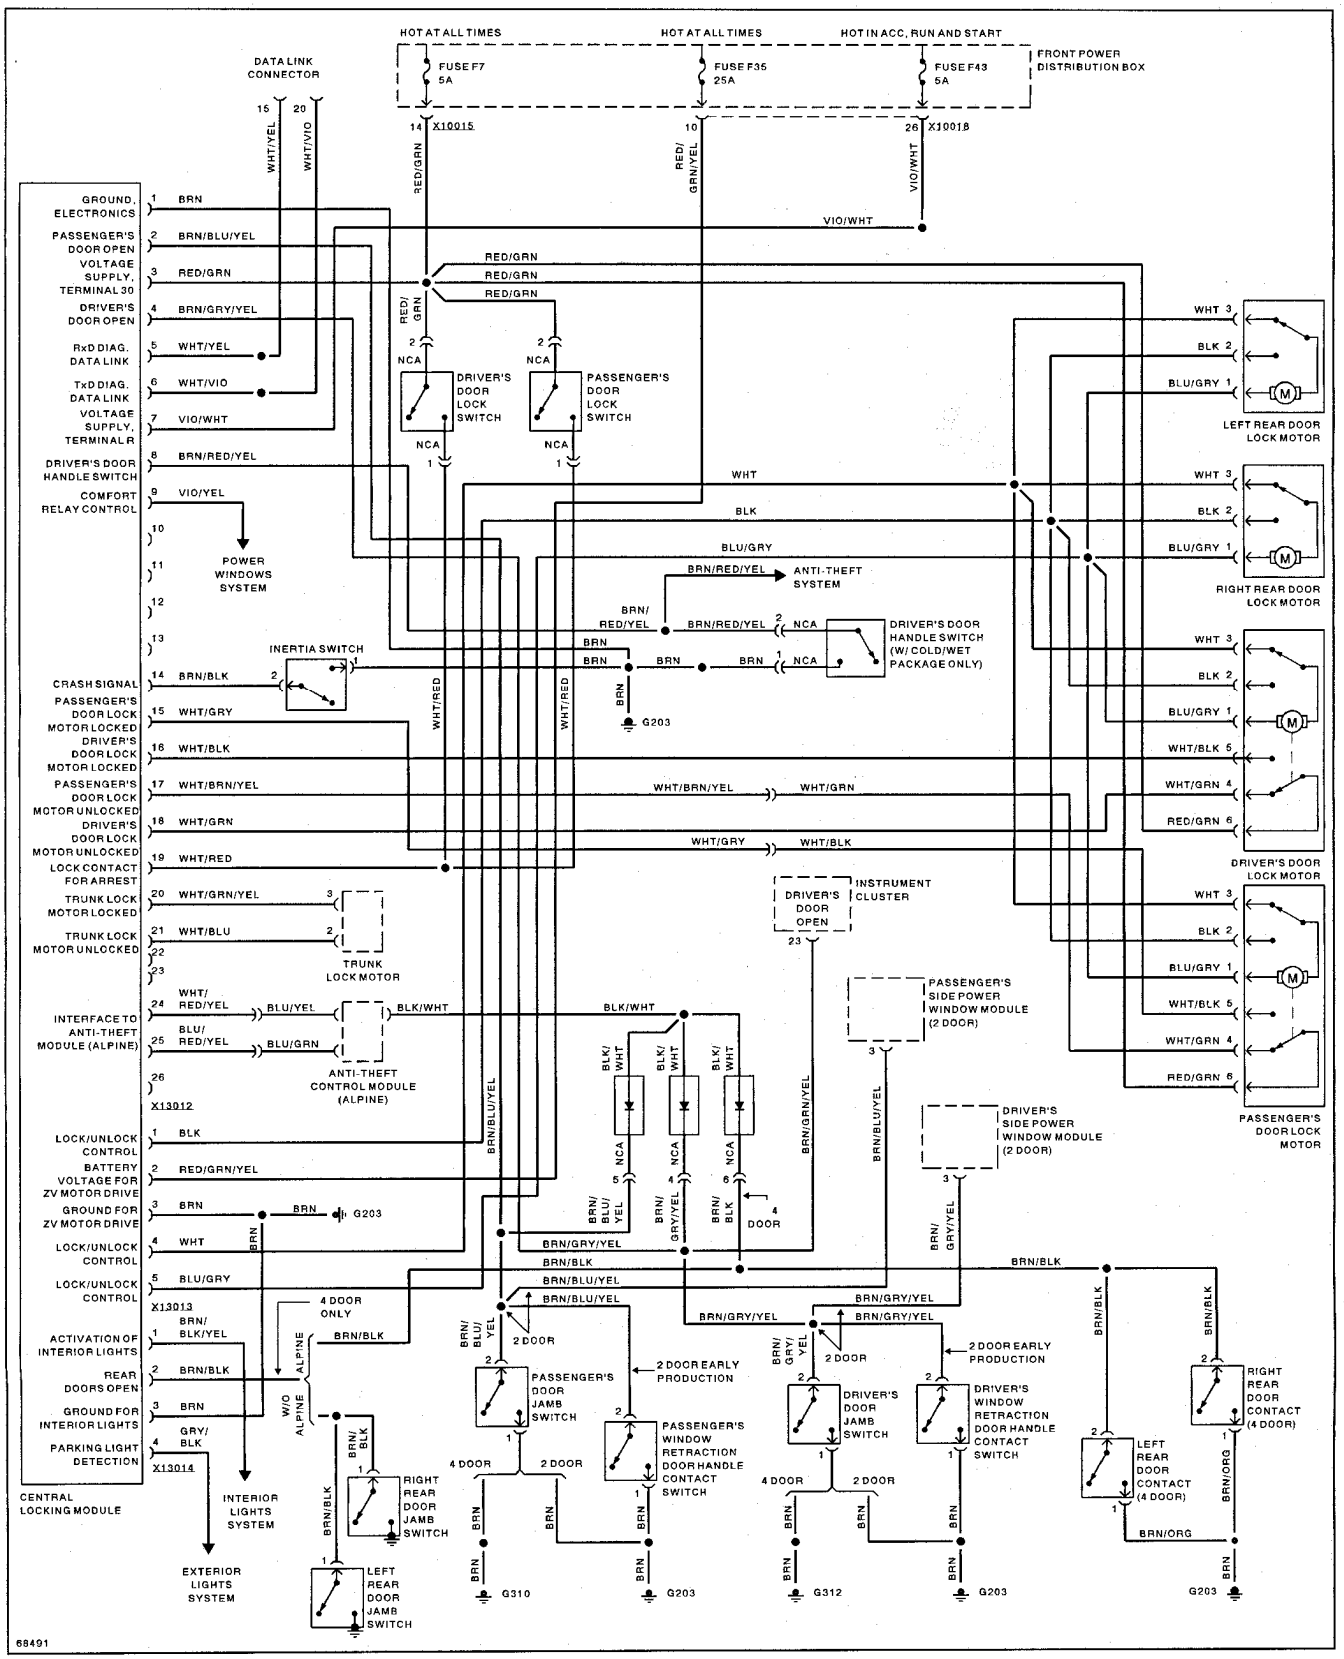


Power Door Locks

1992

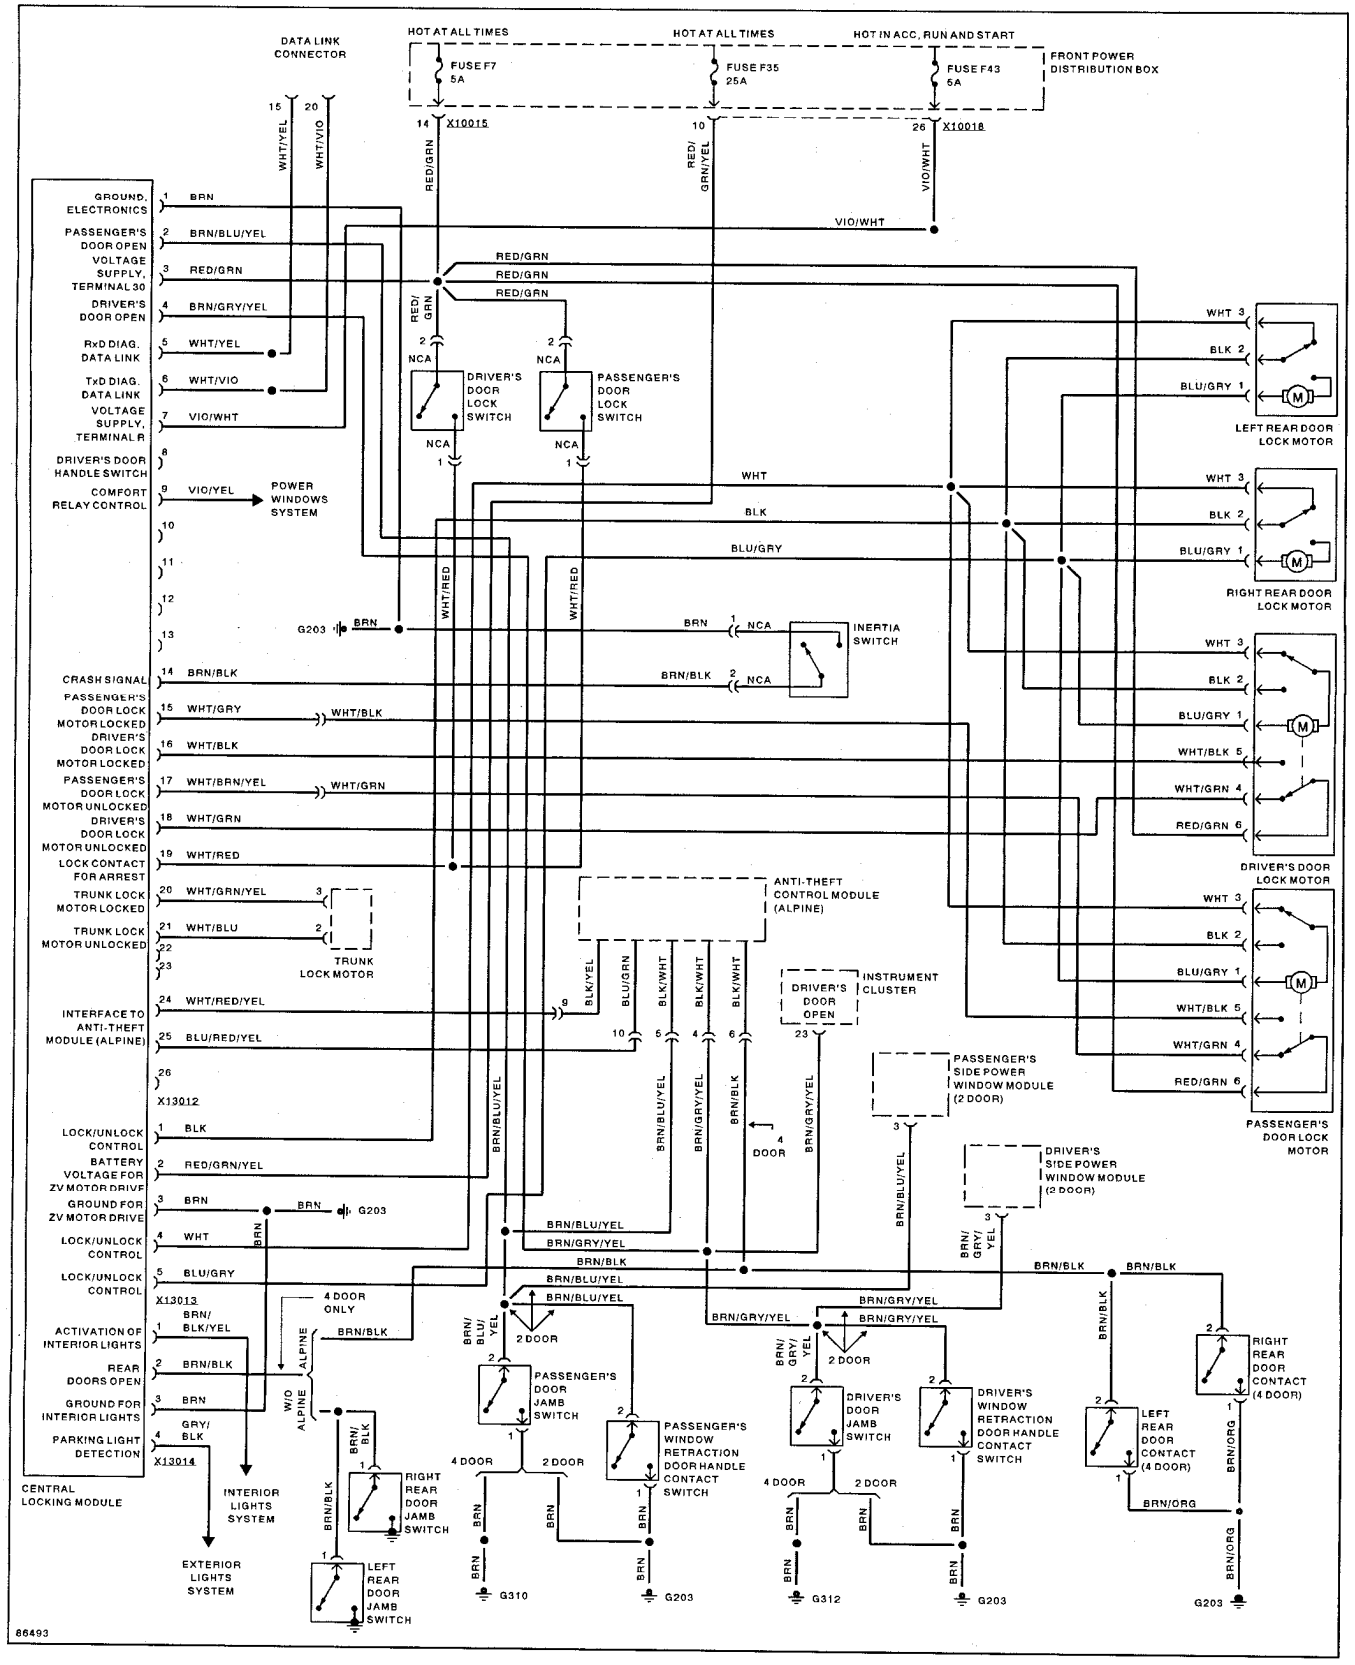


Interior Lights/Instrument Illumination

1998 318ti

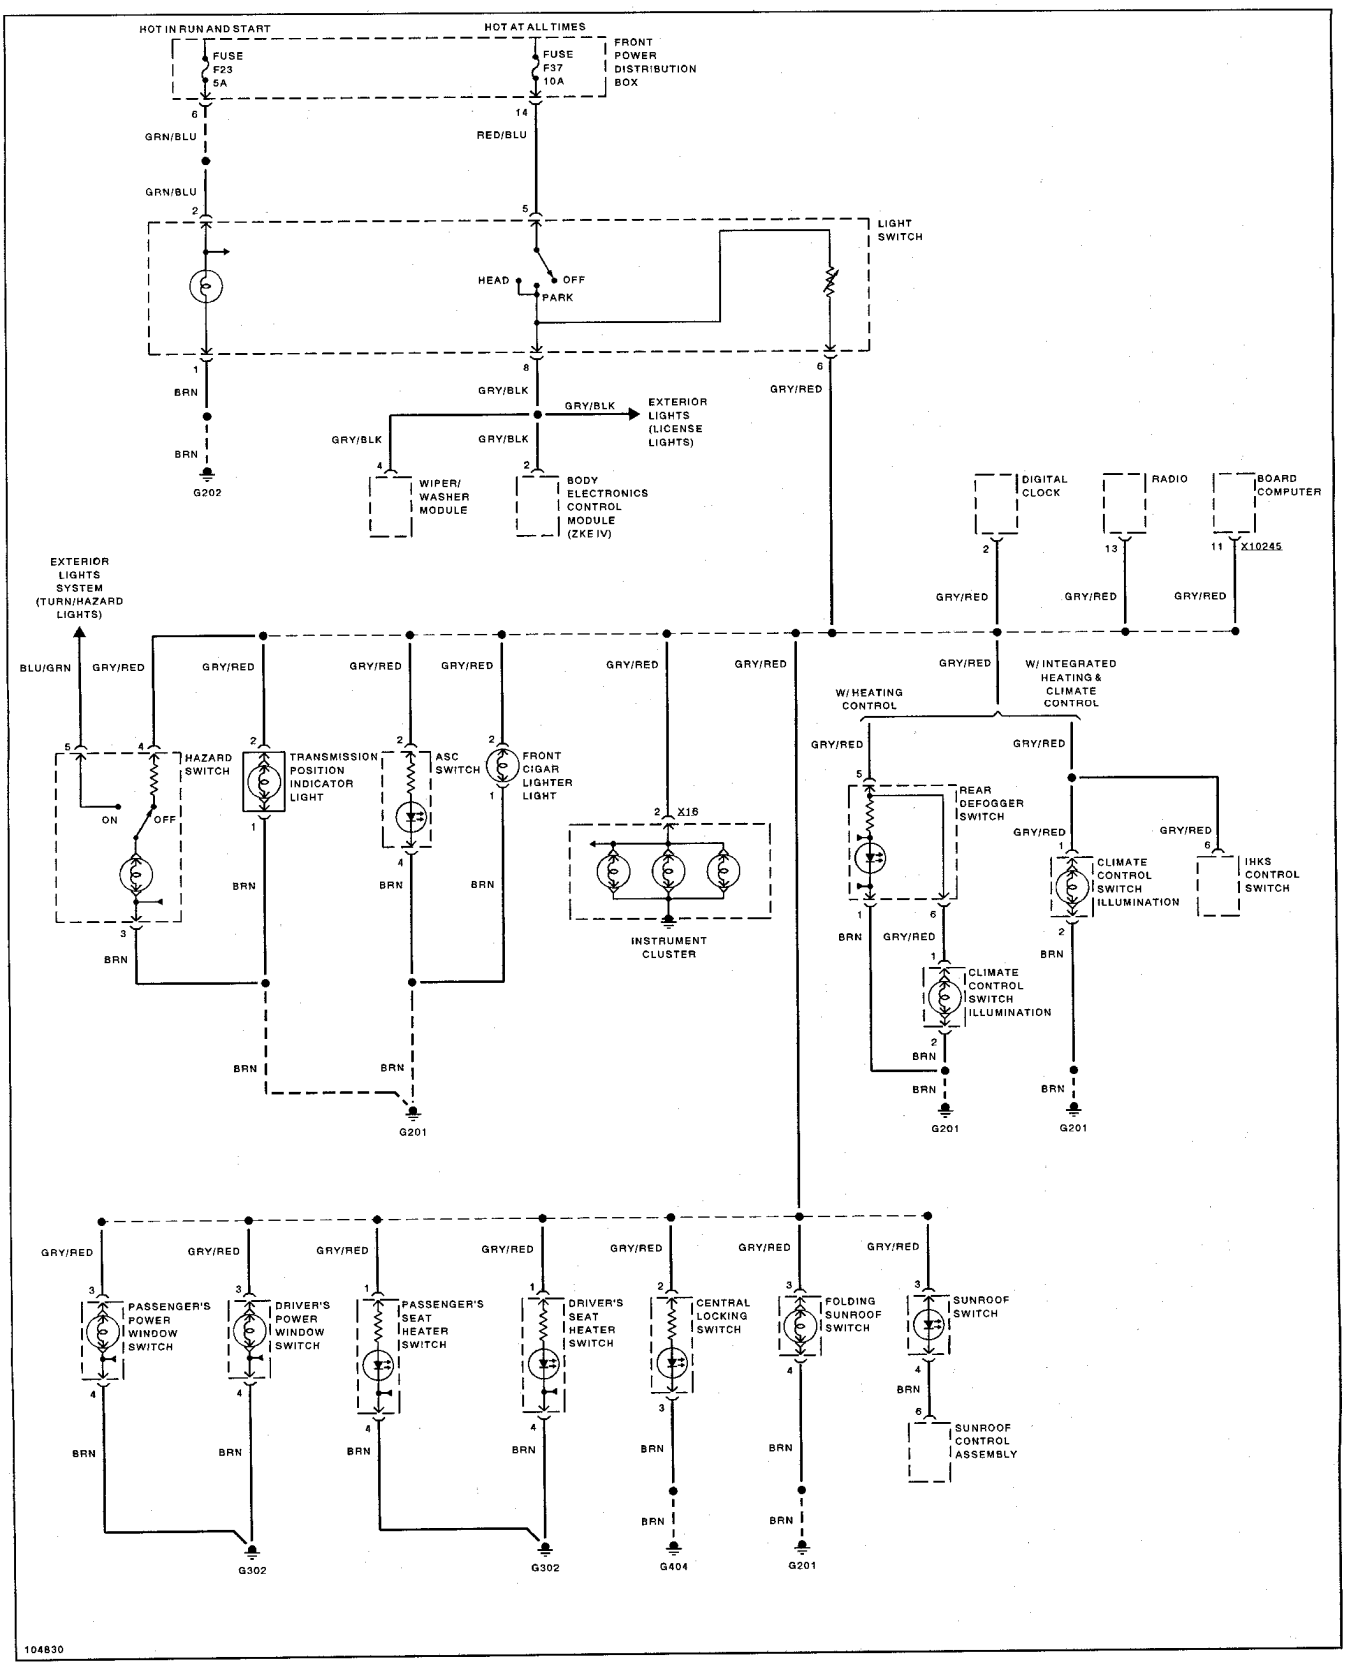


Interior Lights/Illumination

1998 318ti

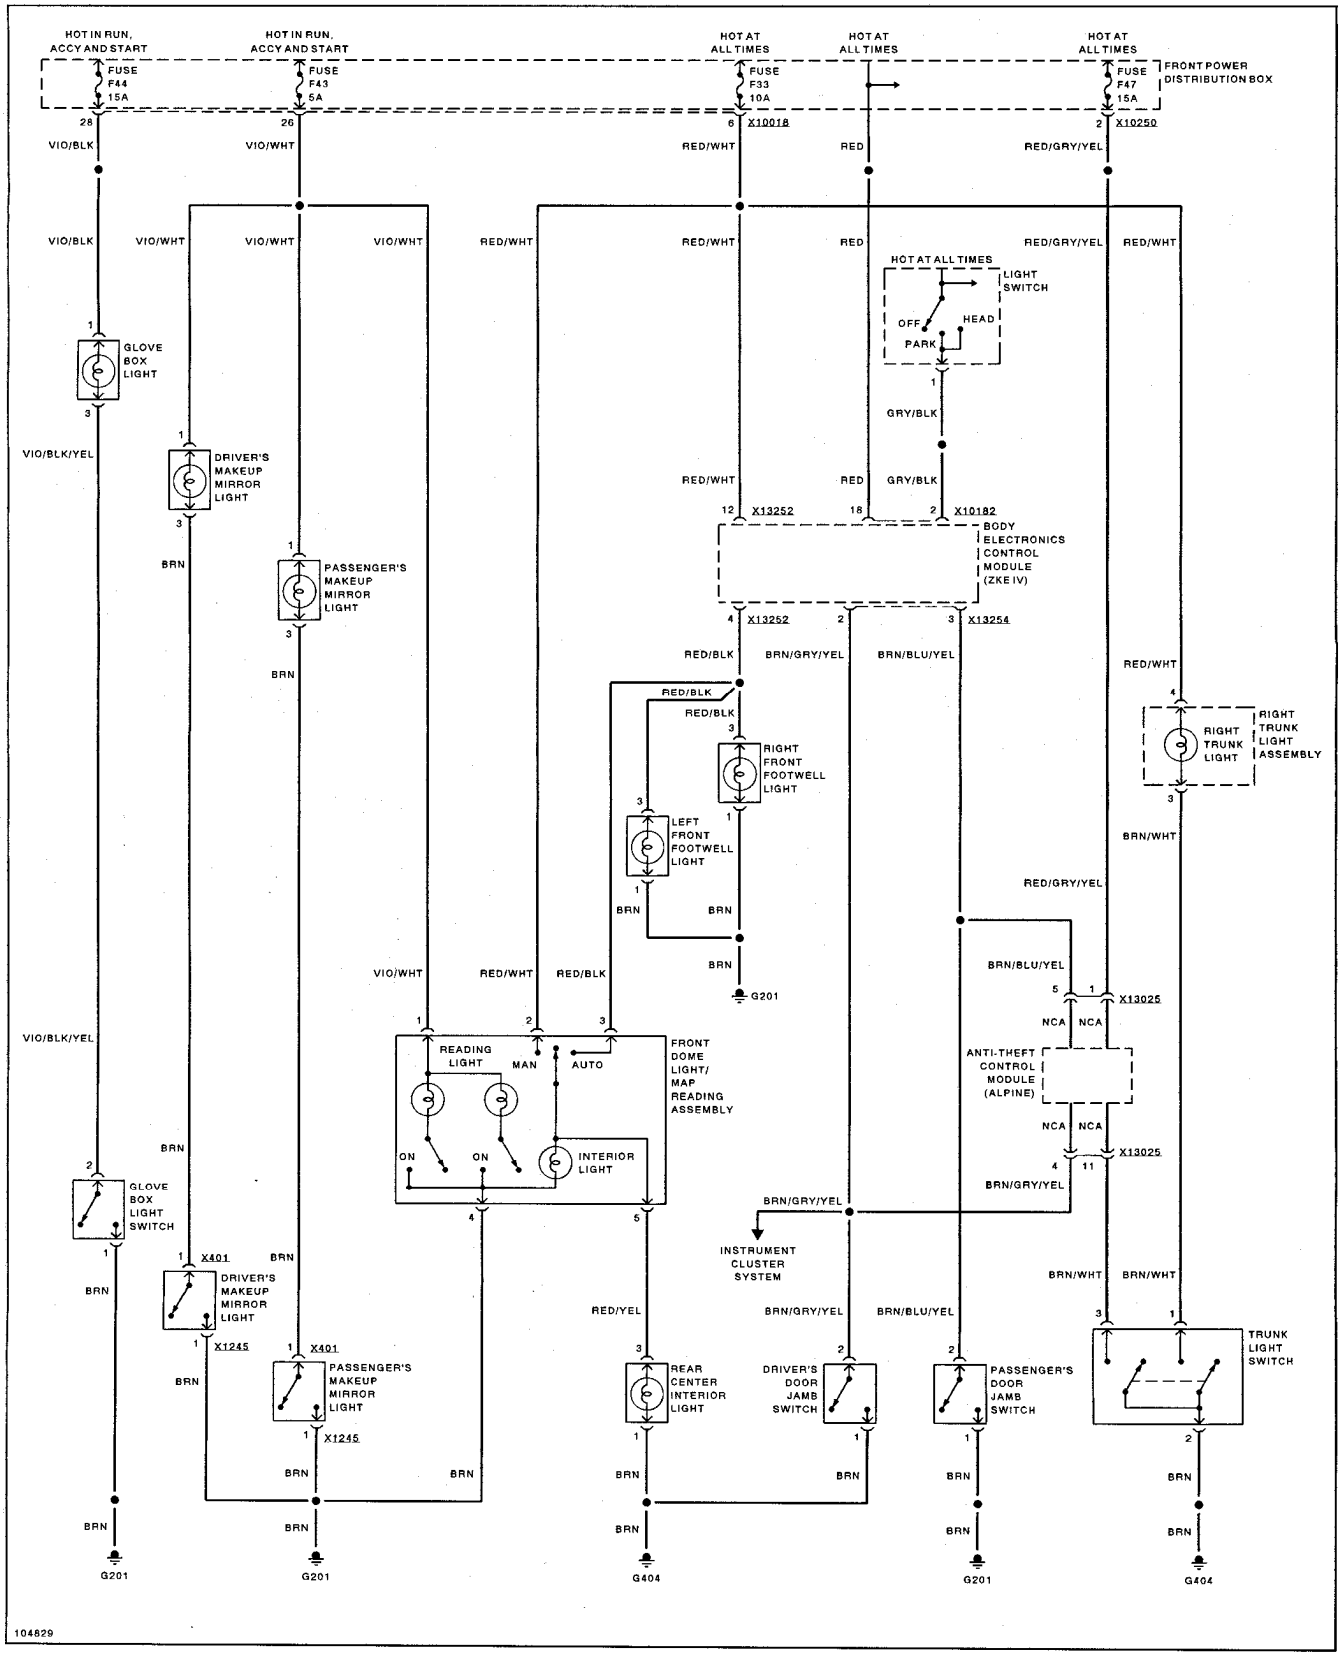

Interior Lights/Illumination


1997 318ti (2 of 2)

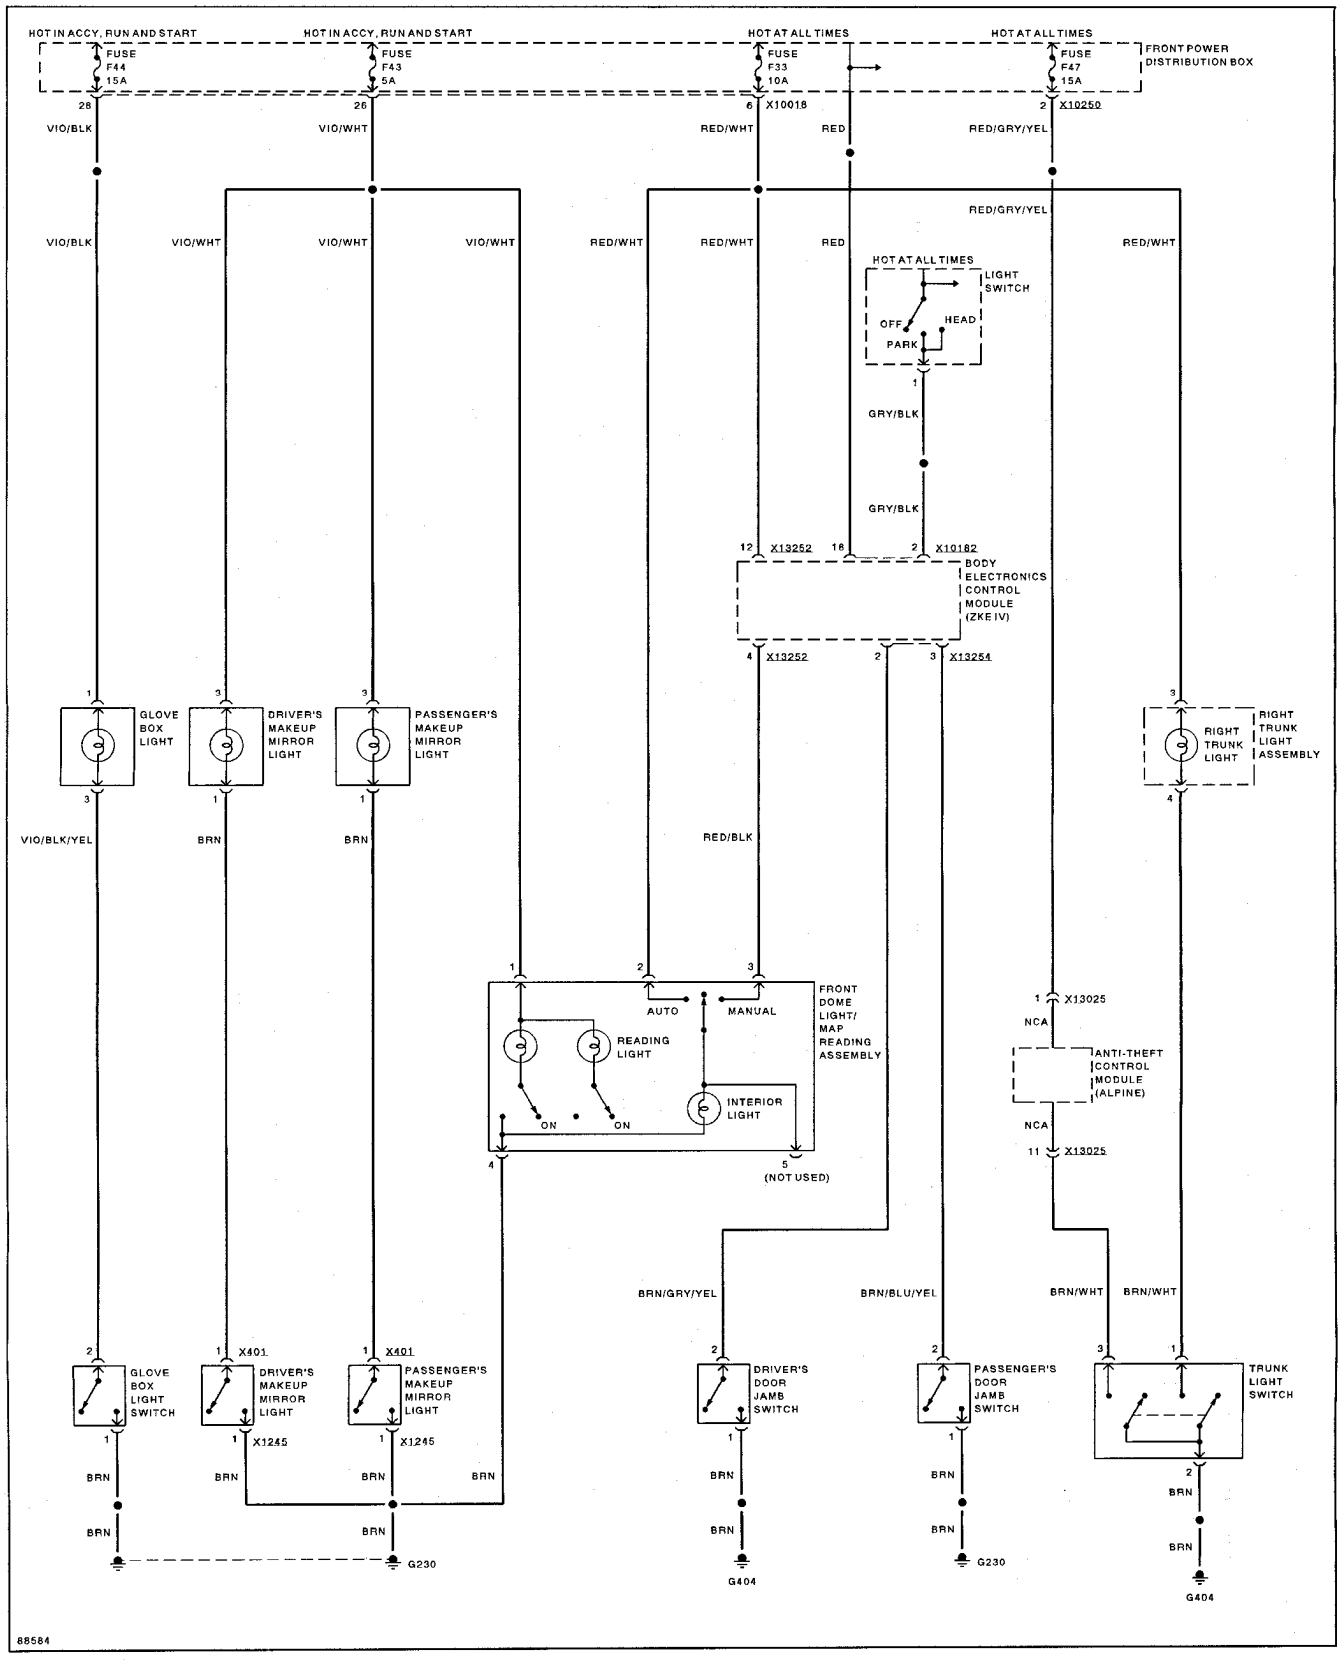

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Interior Lights/Illumination

1997 318ti (1 of 2)

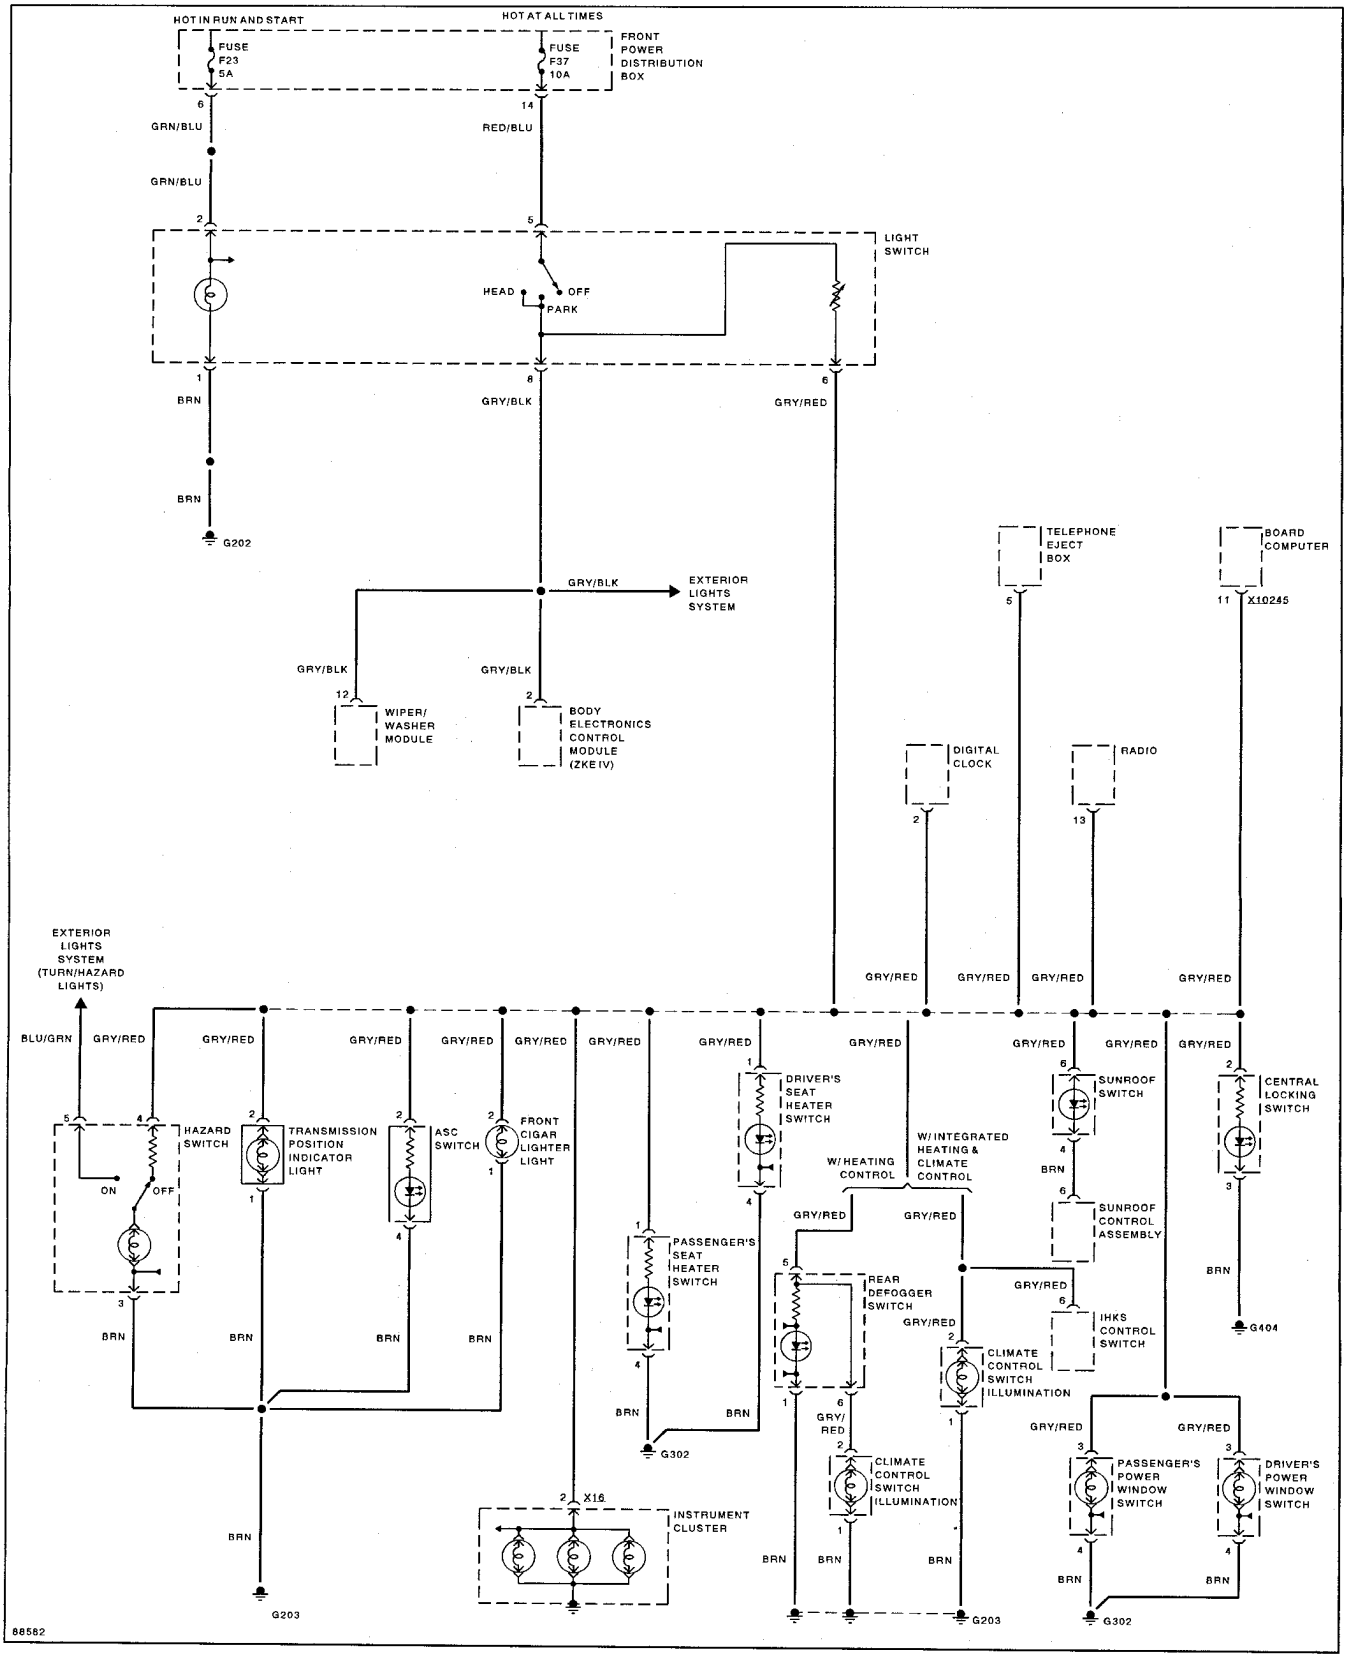


Interior Lights/Illumination

1995-96 318ti (2 of 2)

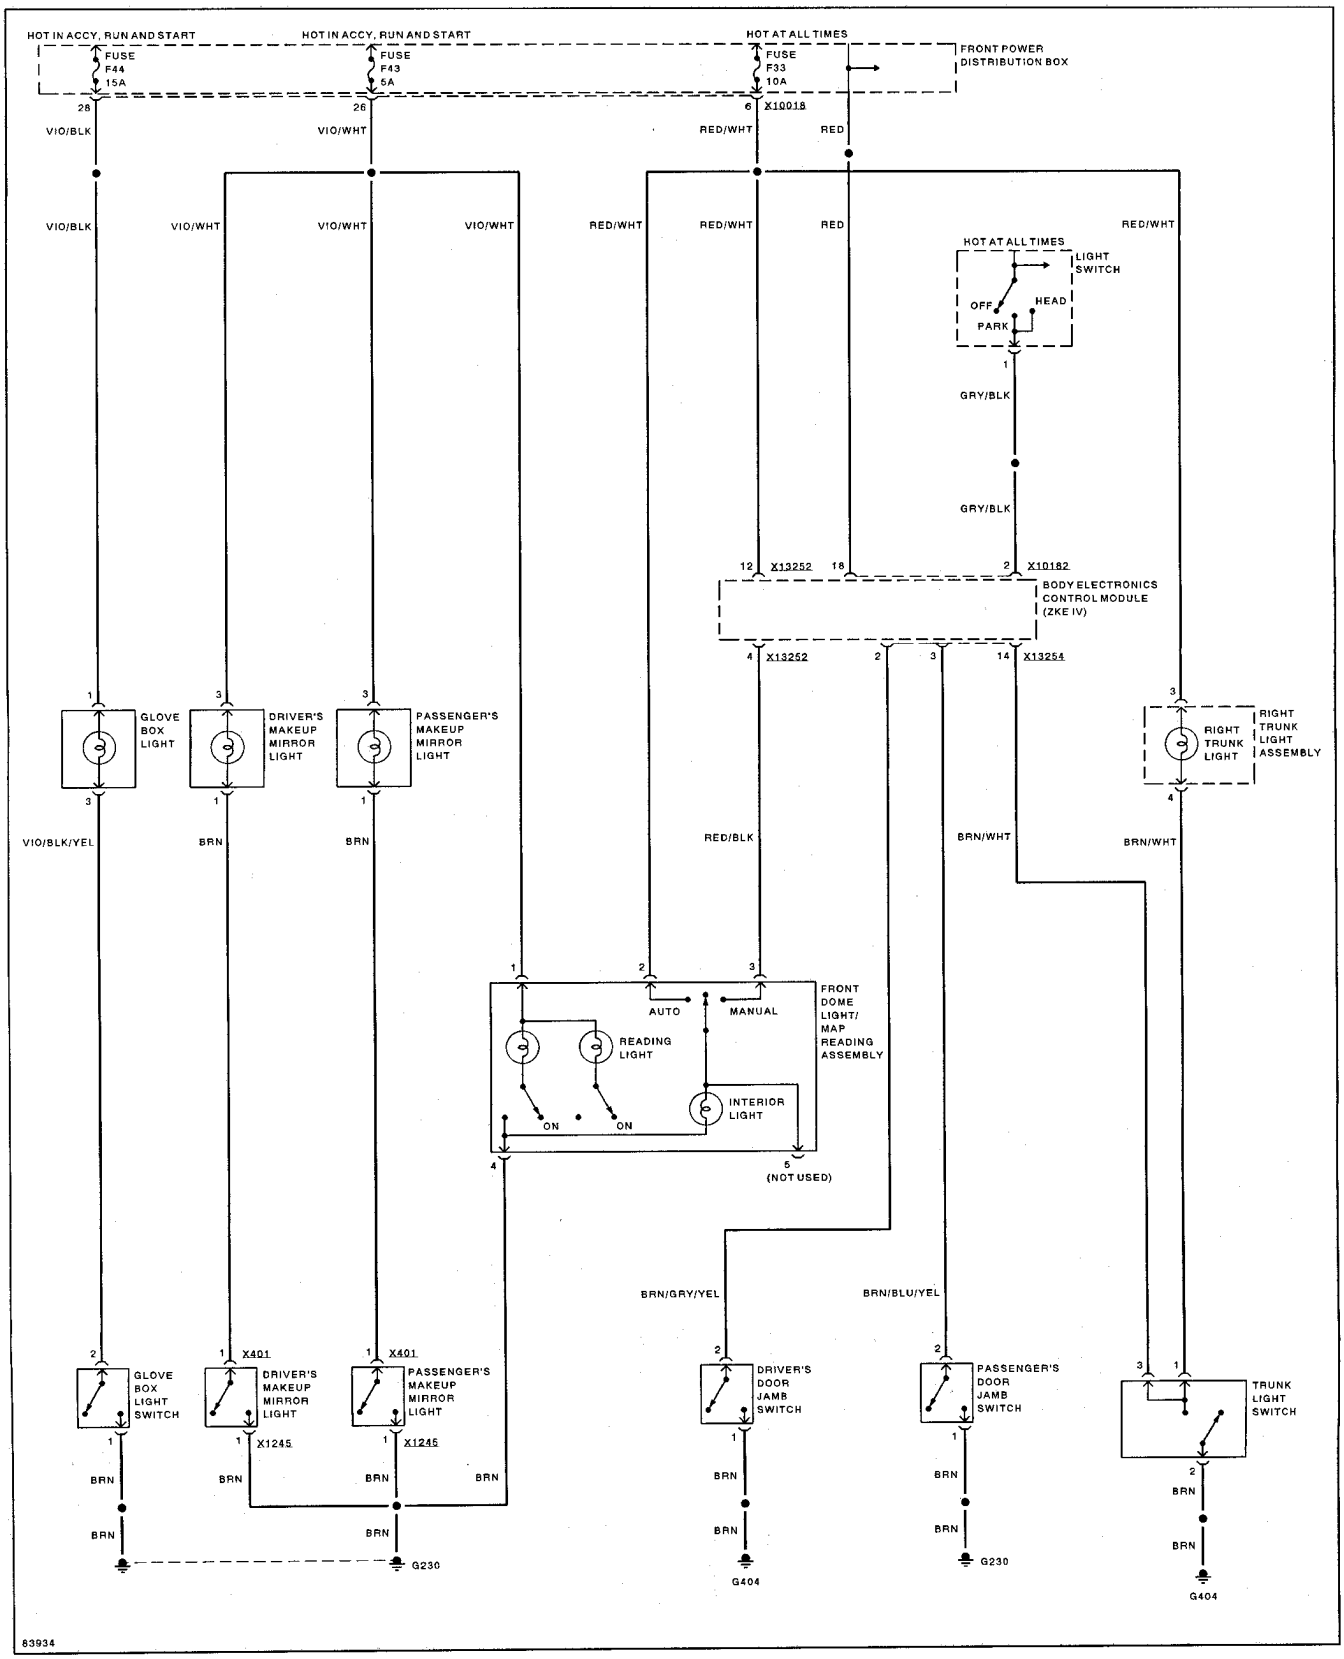


Interior Lights/Illumination

1995-96 318ti (1 of 2)

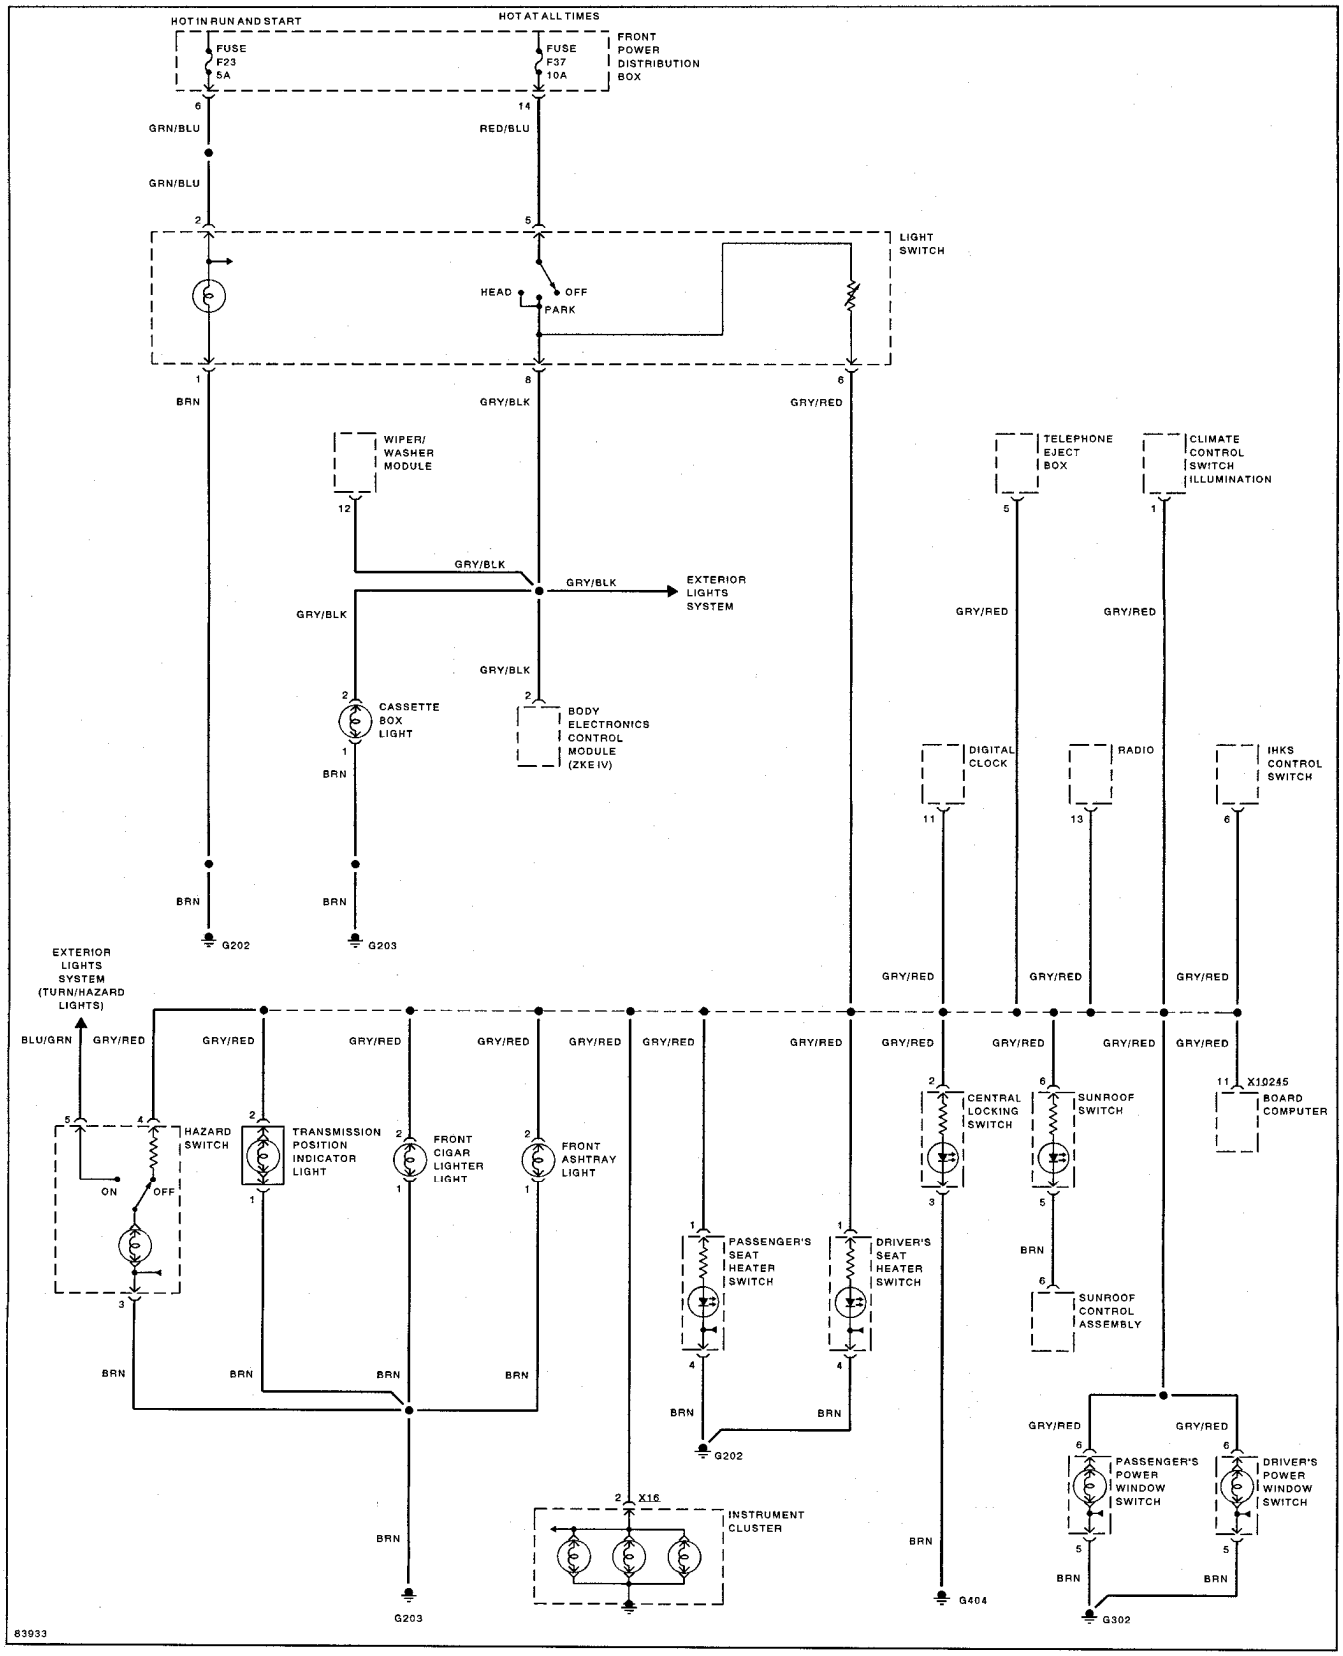


Interior Lights/Instrument Illumination

1998 Except 318ti & Convertible

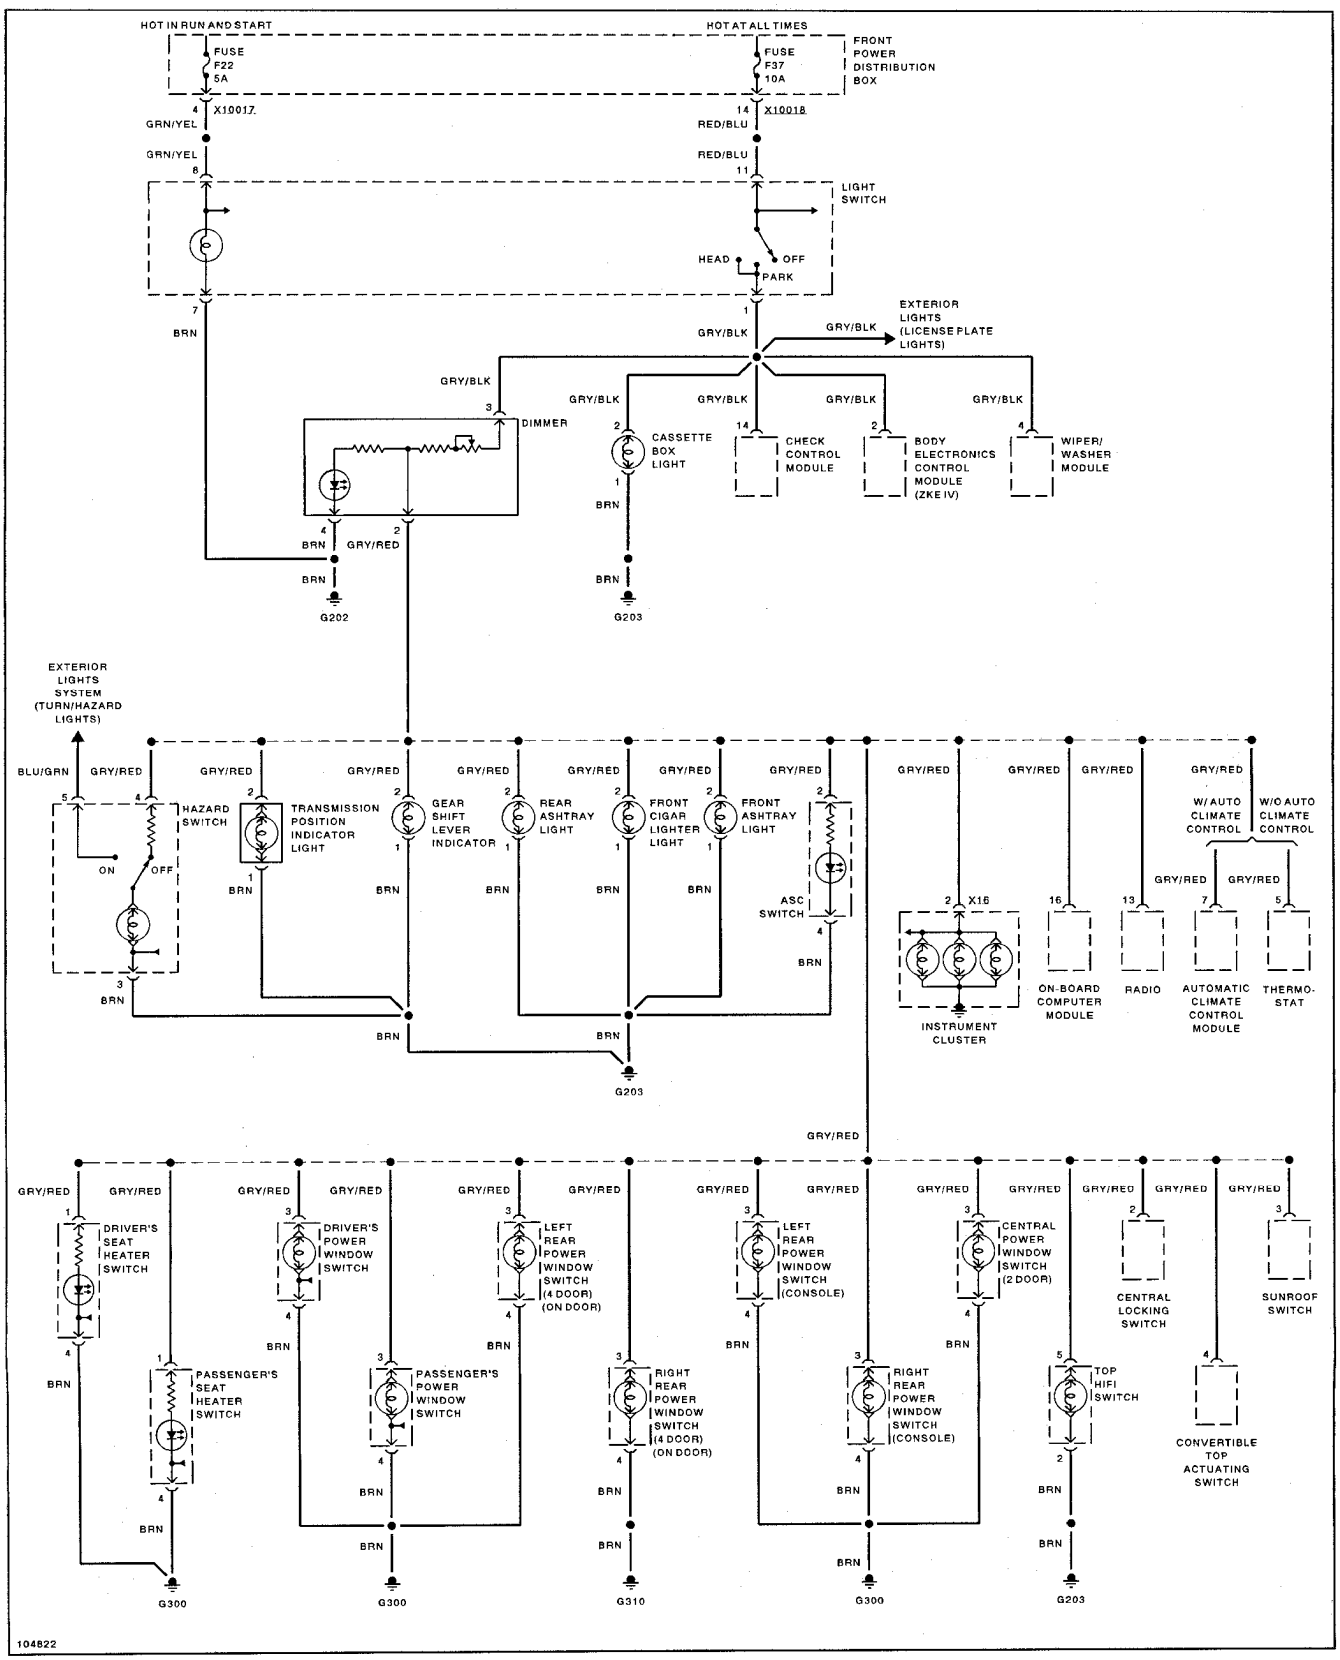


Interior Lights/Illumination

1998 Except 318ti & Convertible

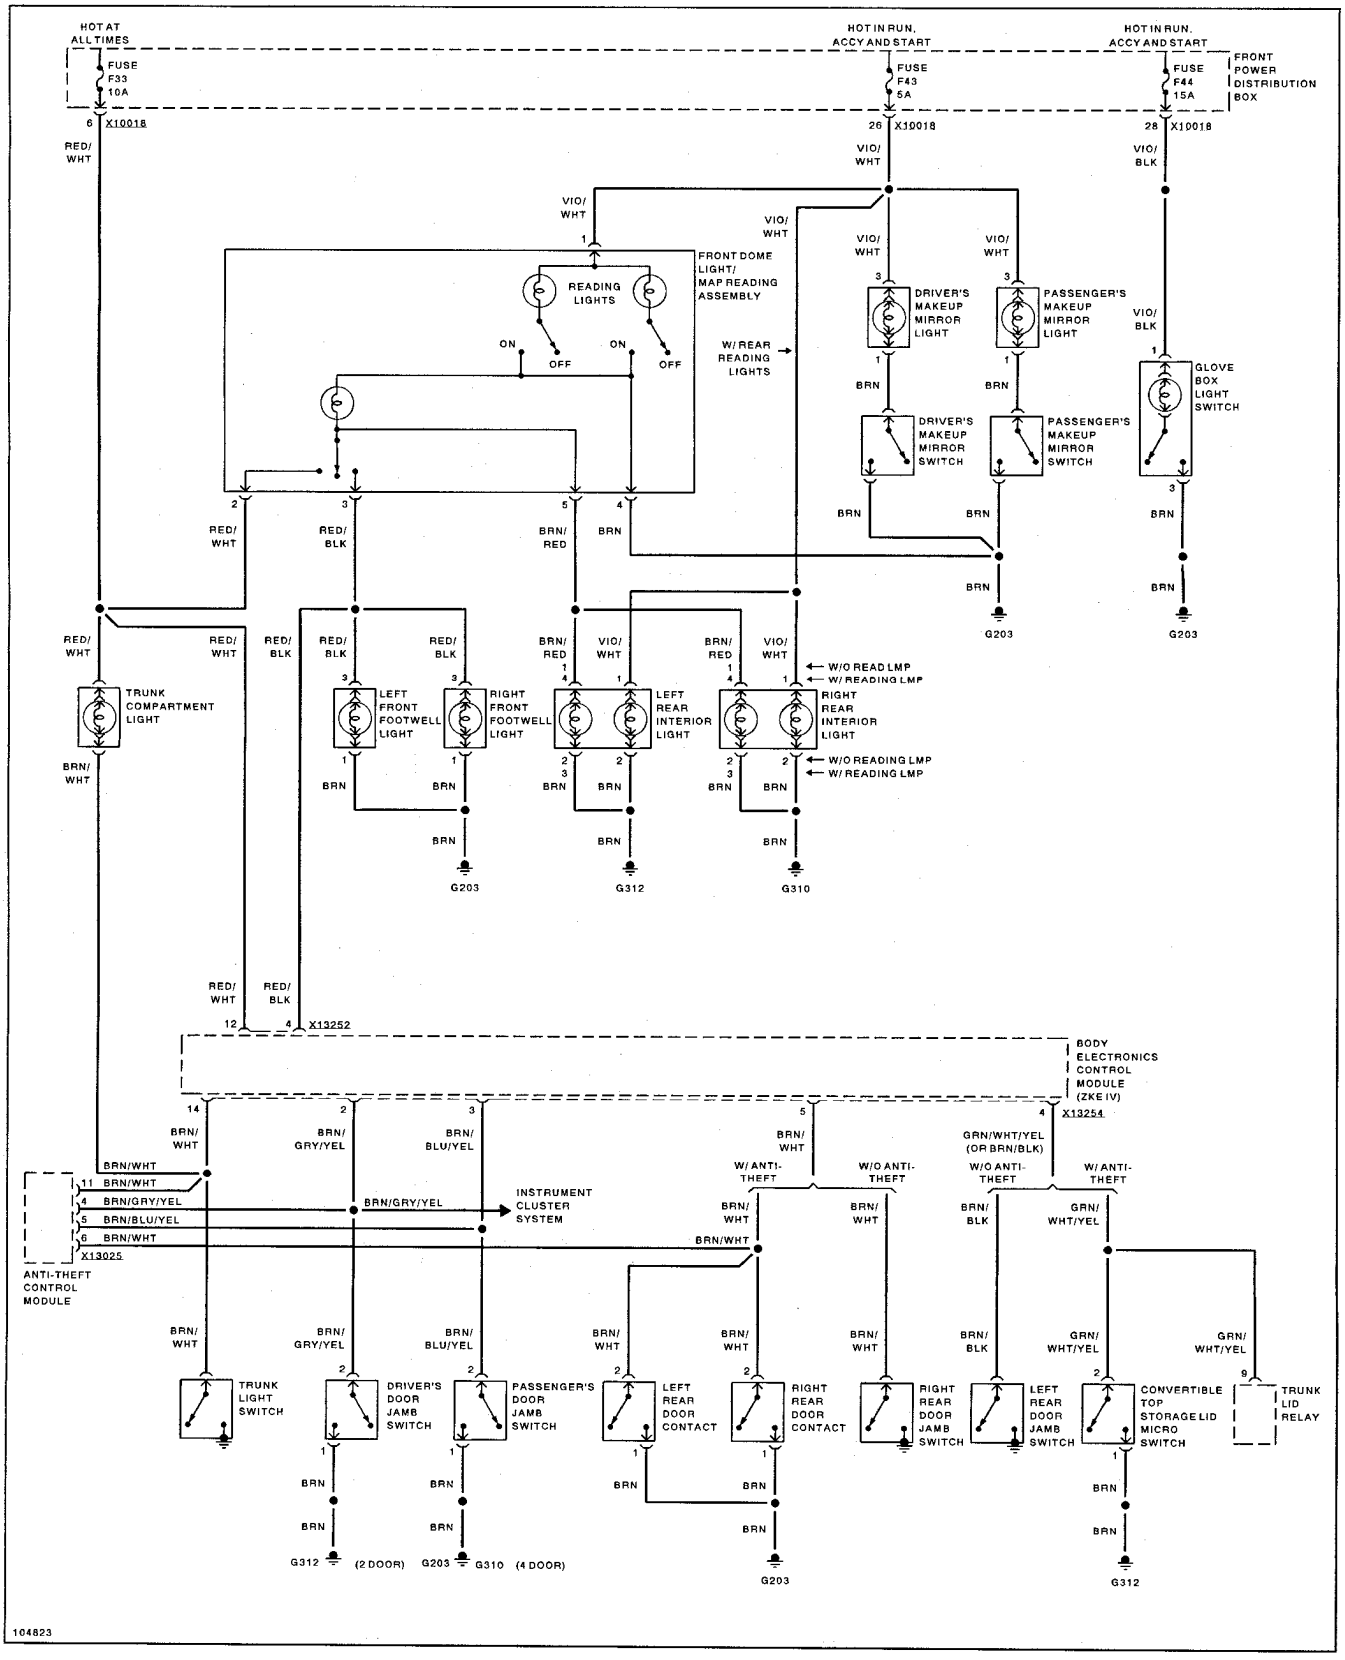


Interior Lights/Illumination

1994-97 Except 318ti & Convertible (2 of 2)

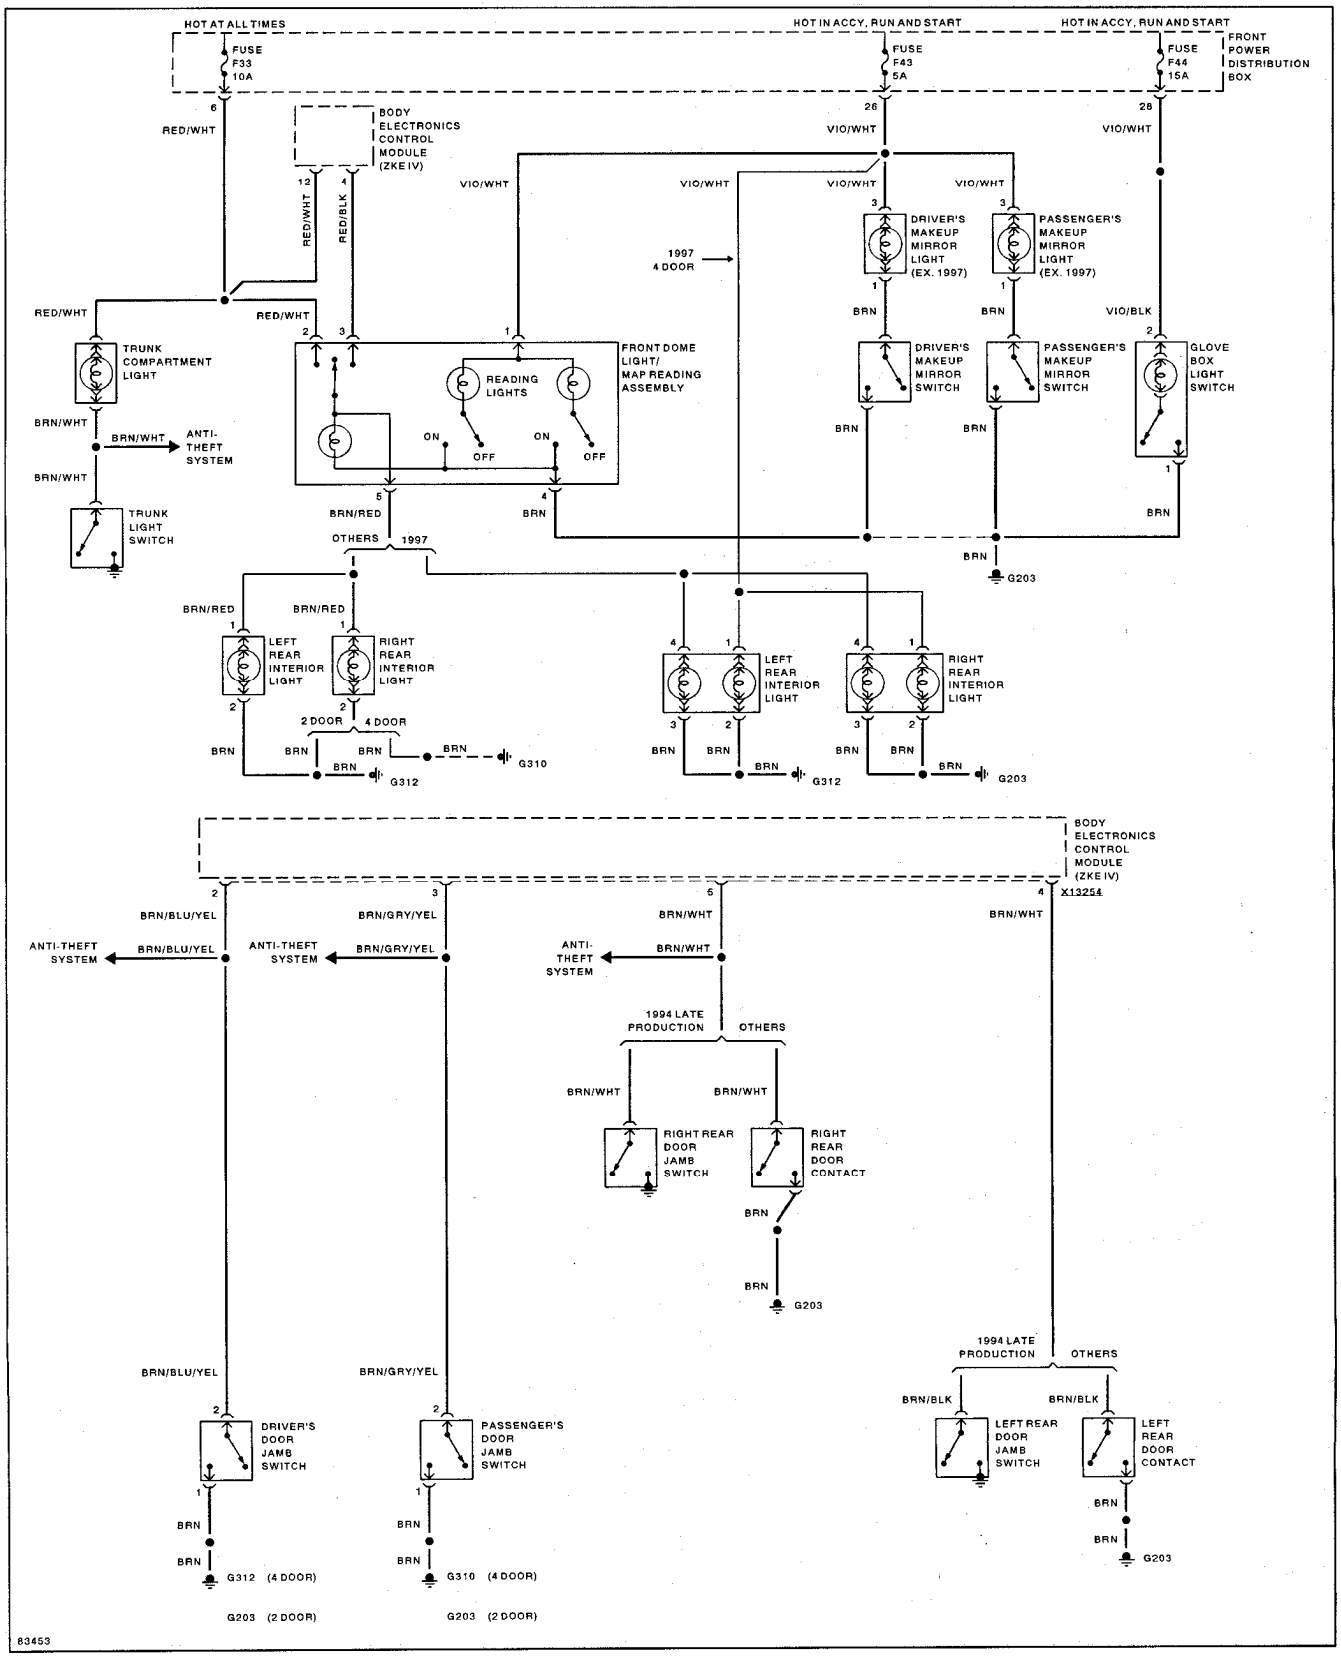


Interior Lights/Illumination

1994-97 Except 318ti & Convertible (1 of 2)

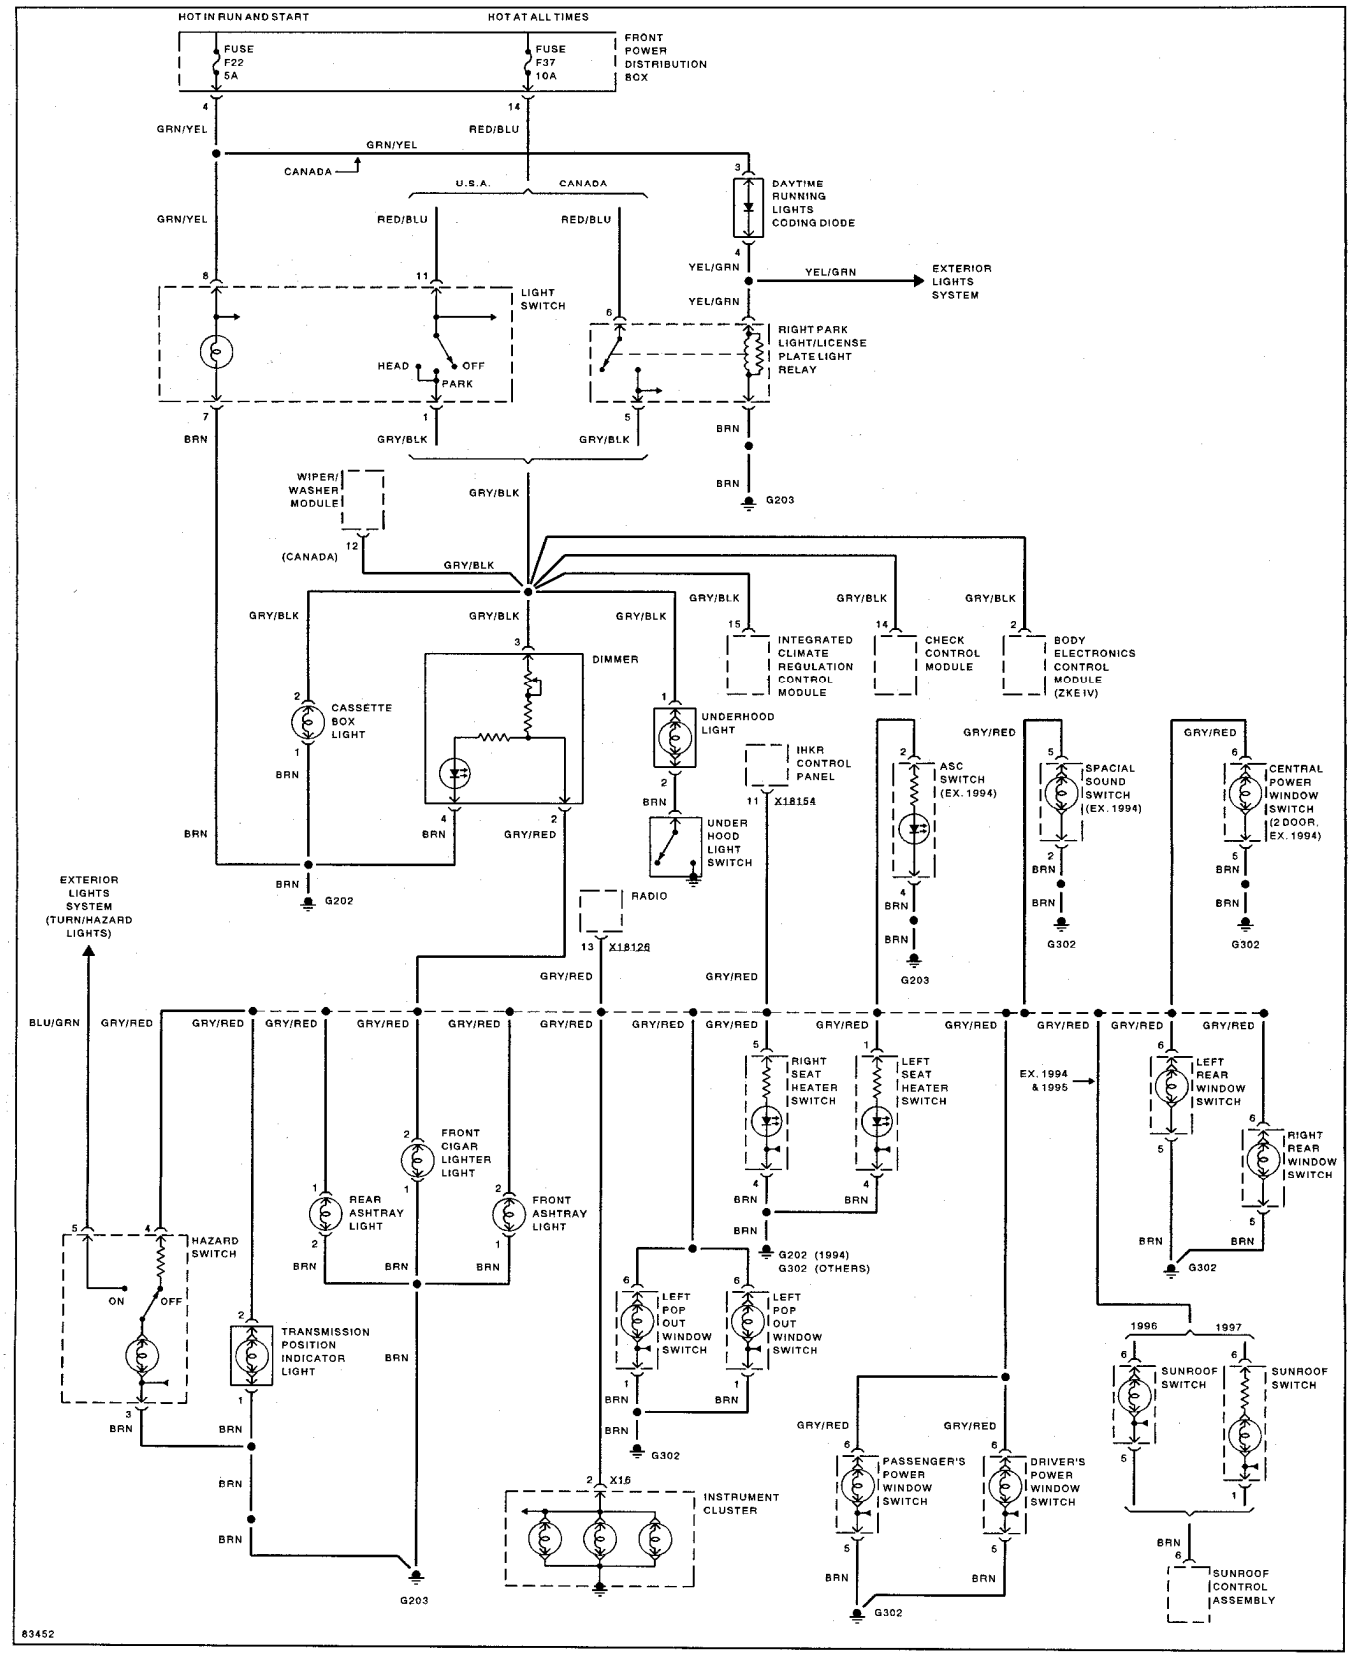

Interior Lights/Illumination


1998 Convertible

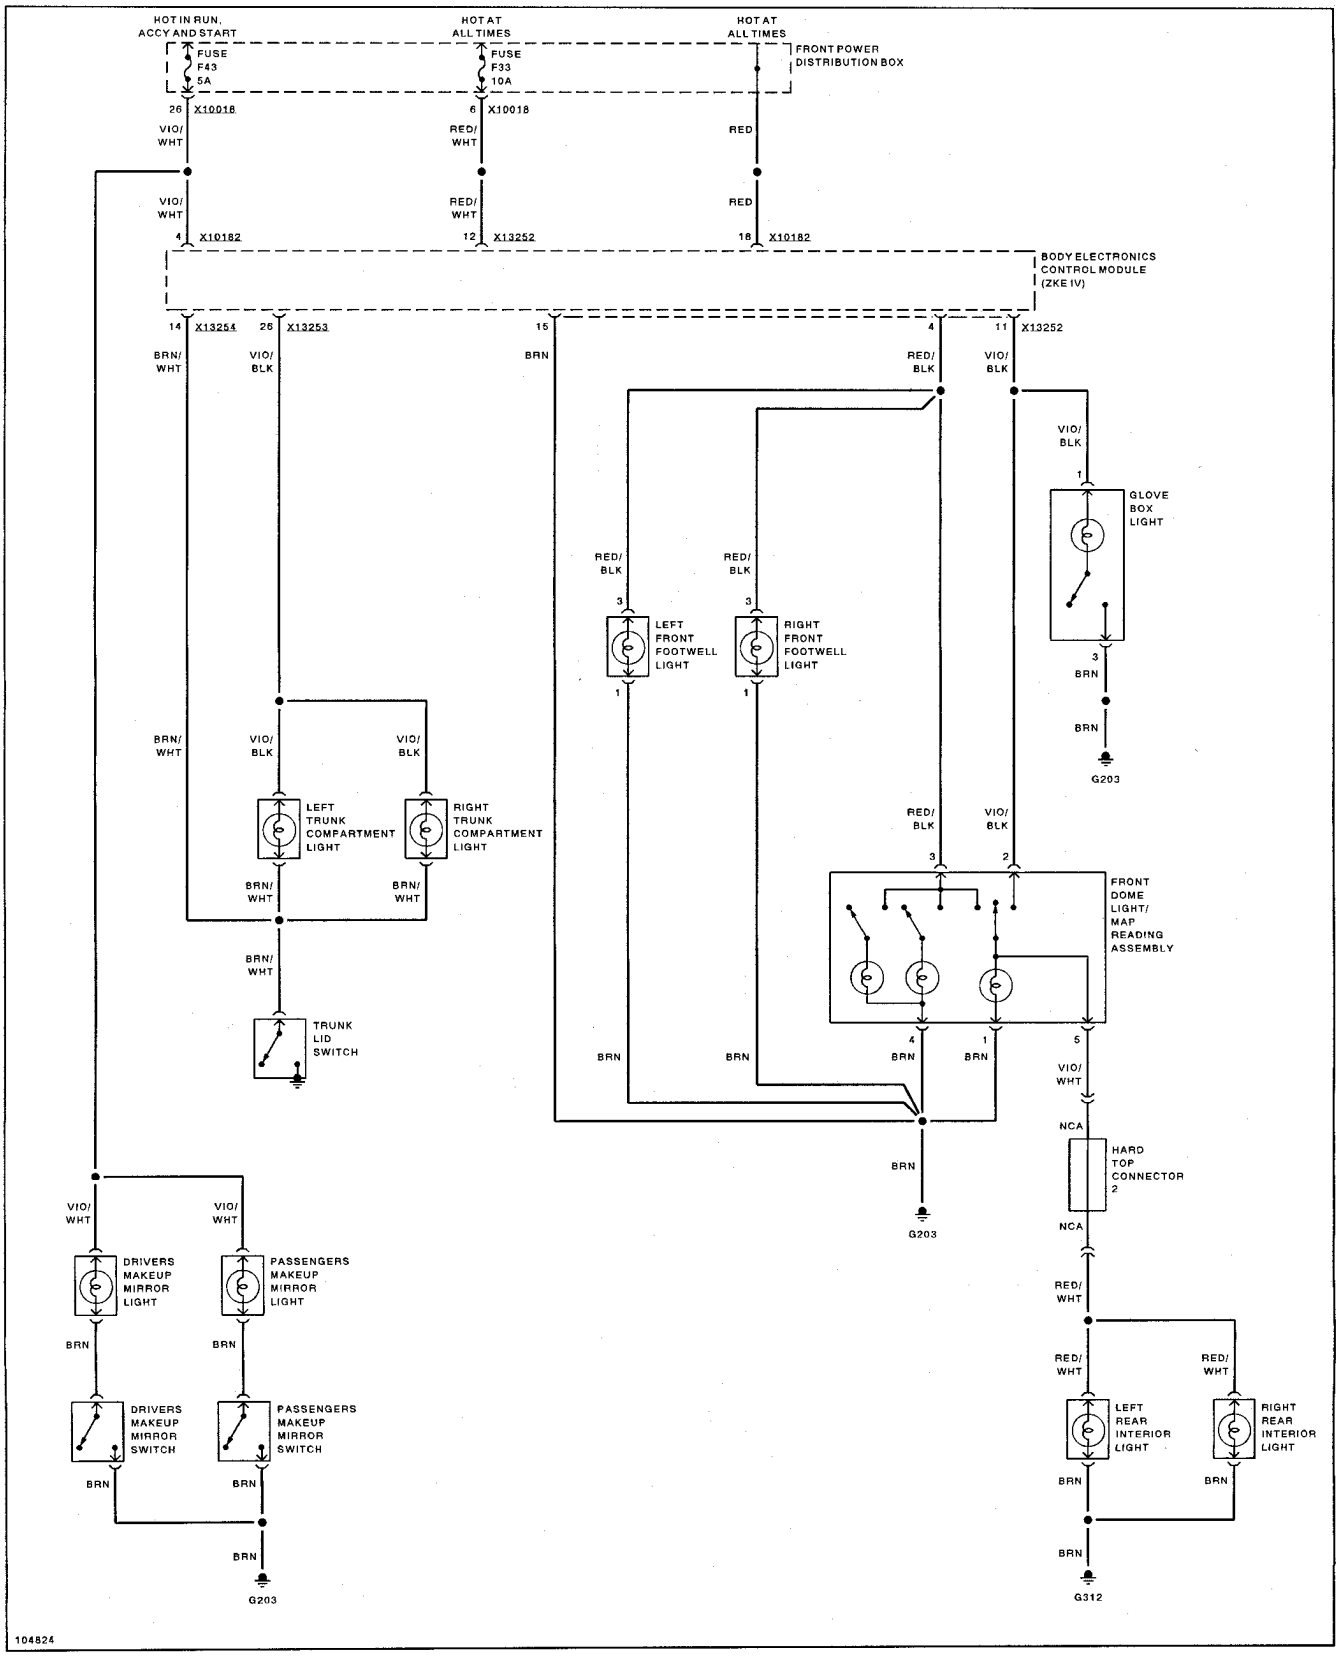

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Interior Lights/Illumination

1994-97 Convertible (2 of 2)

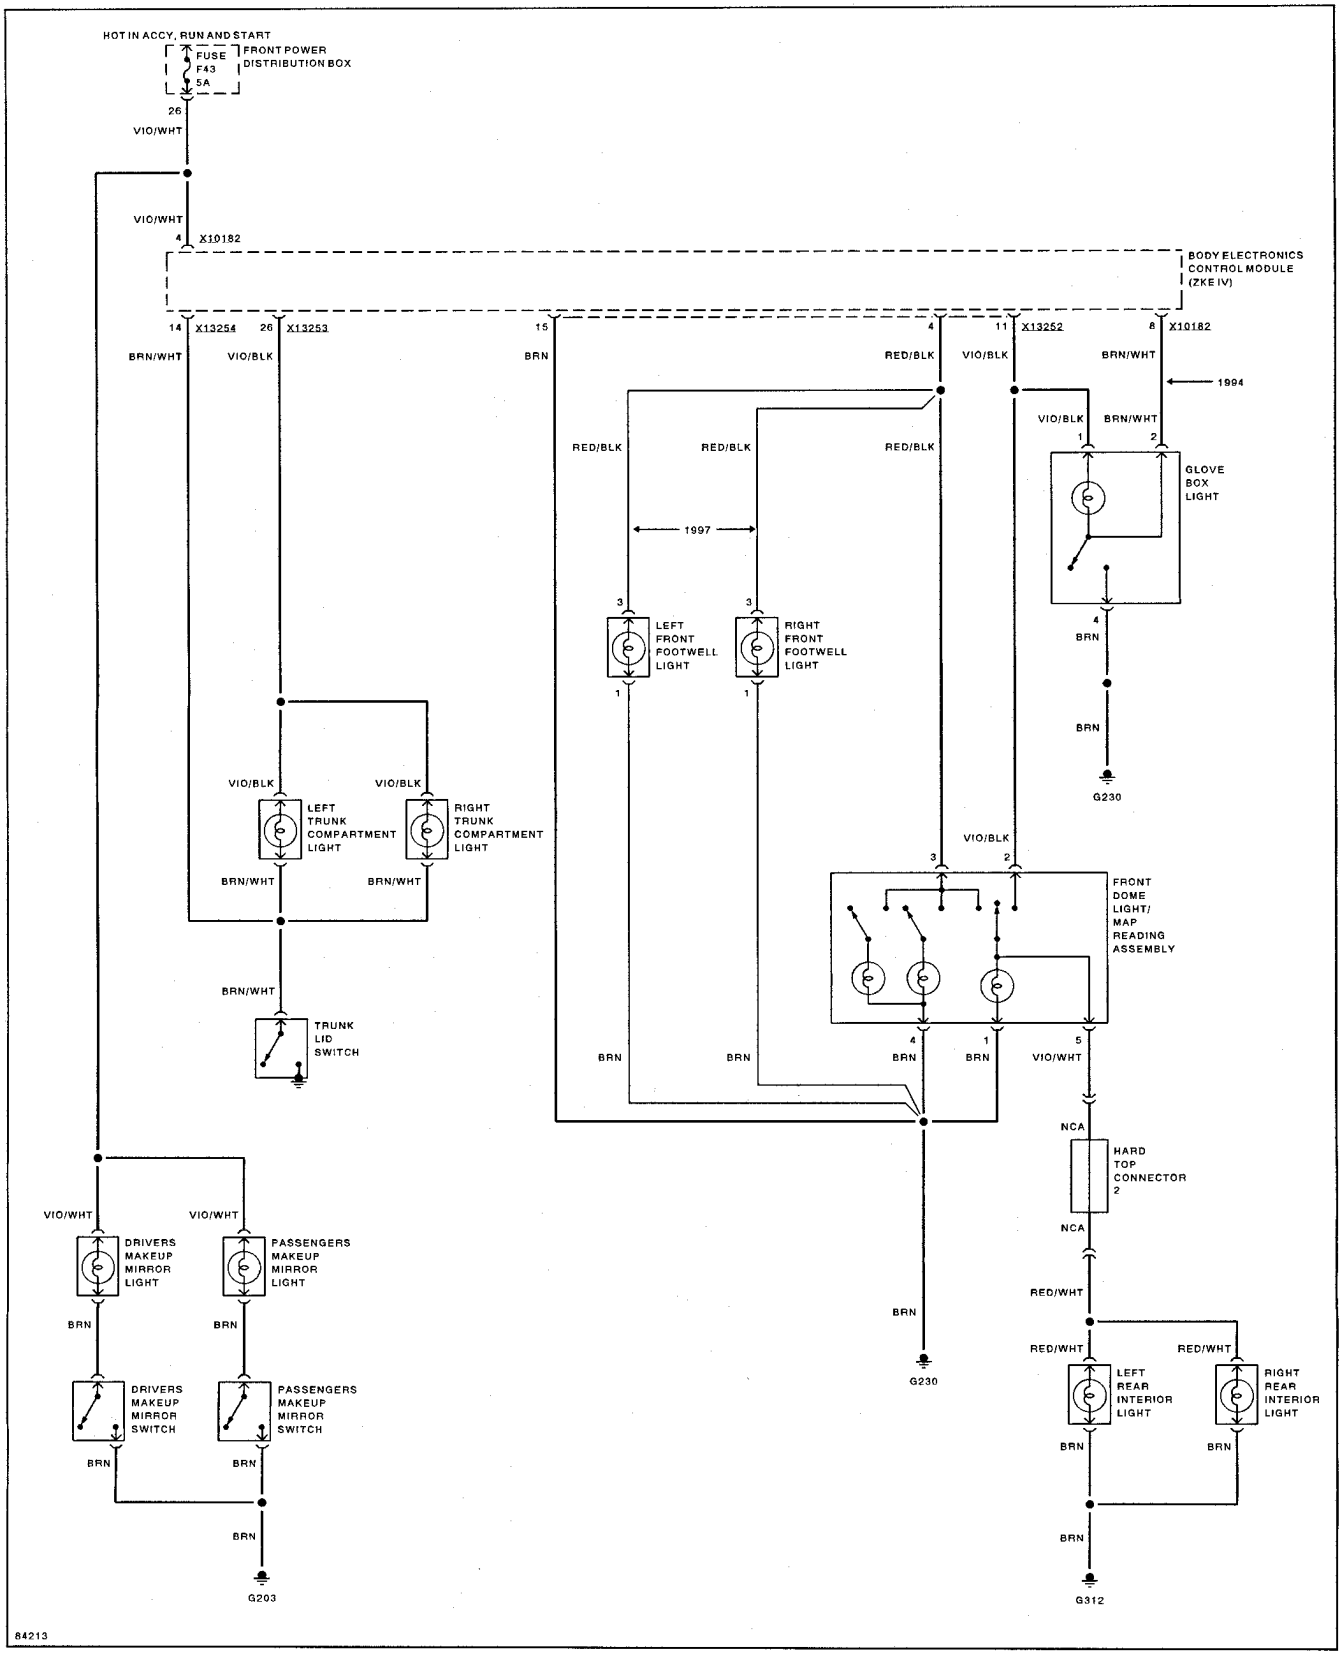


Interior Lights/Illumination

1994-97 Convertible (1 of 2)

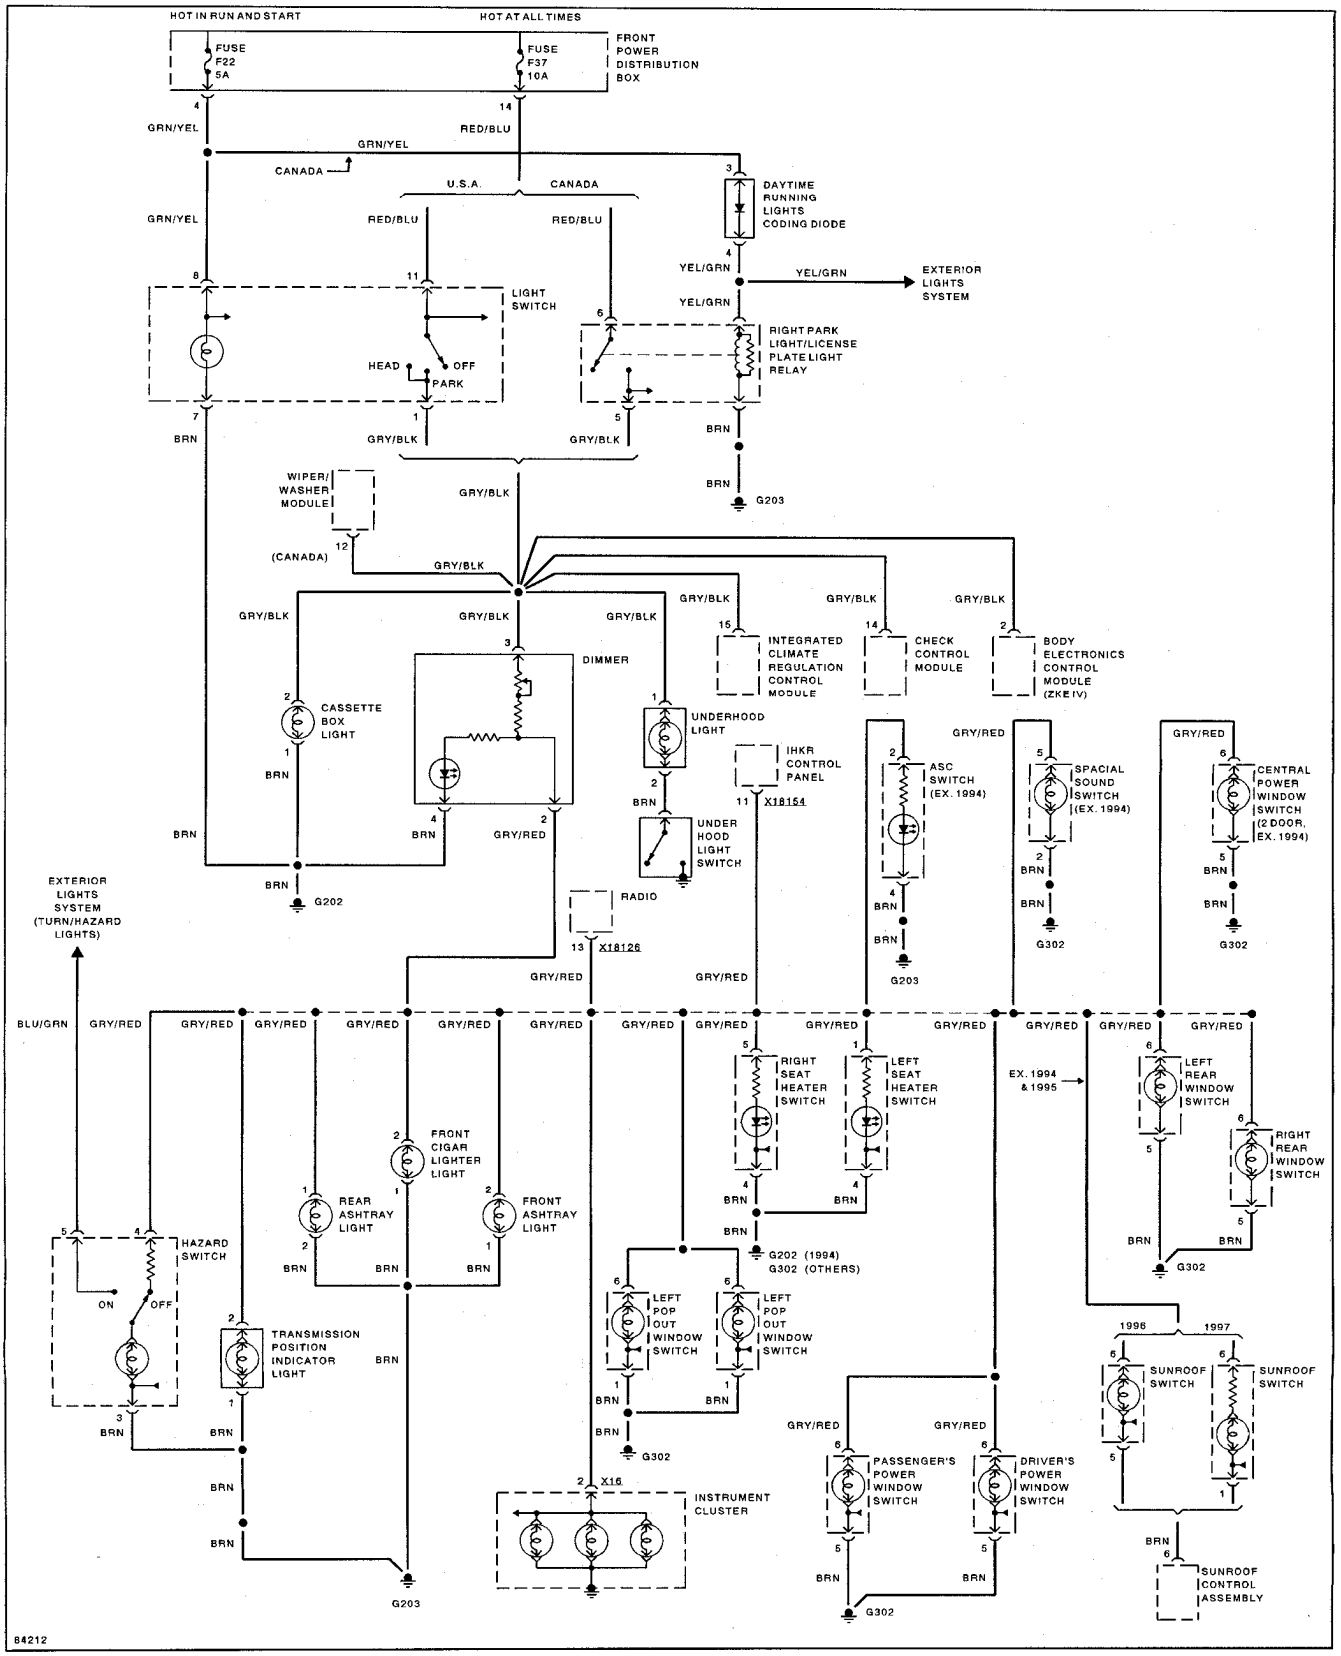


Interior Lights/Illumination

1992-93 (2 of 2)

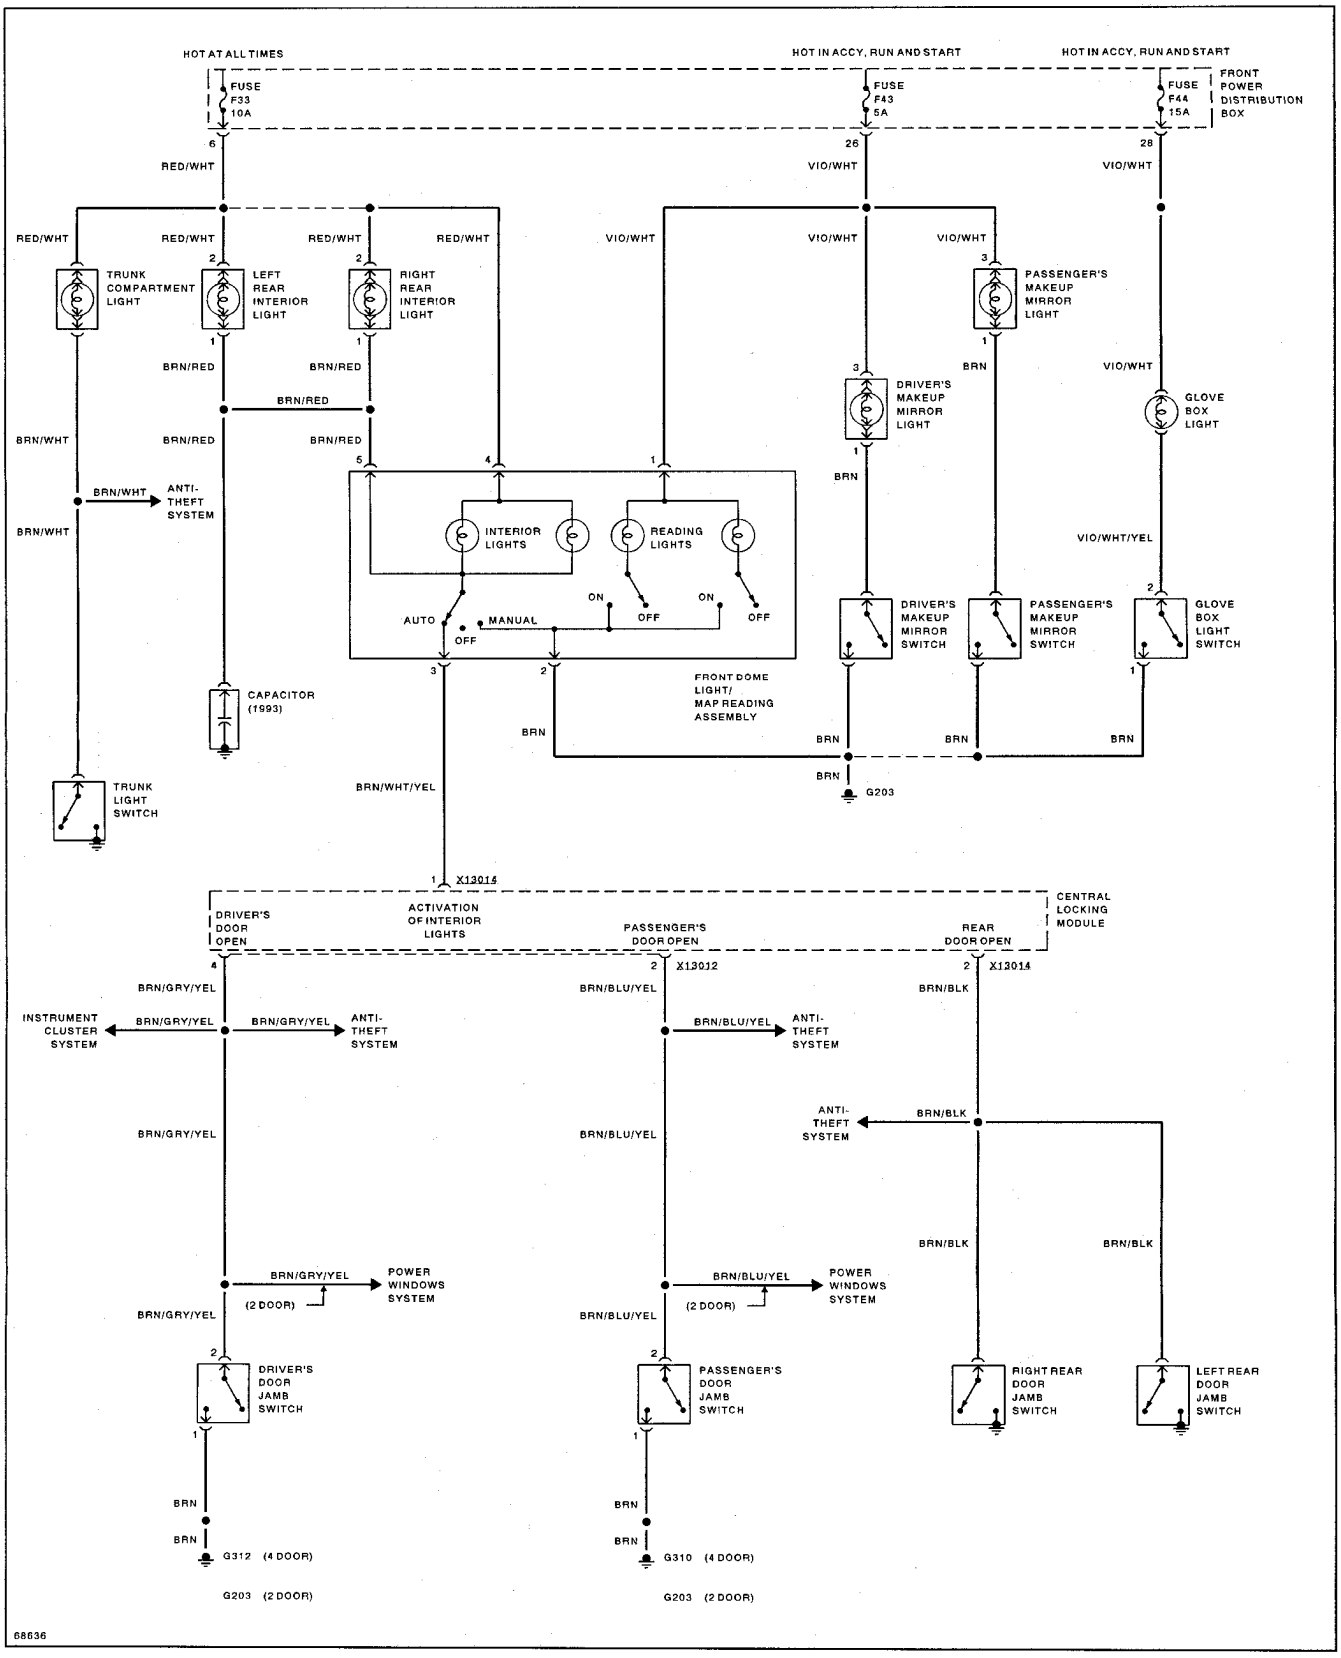


Interior Lights/Illumination


1992-93 (1 of 2)

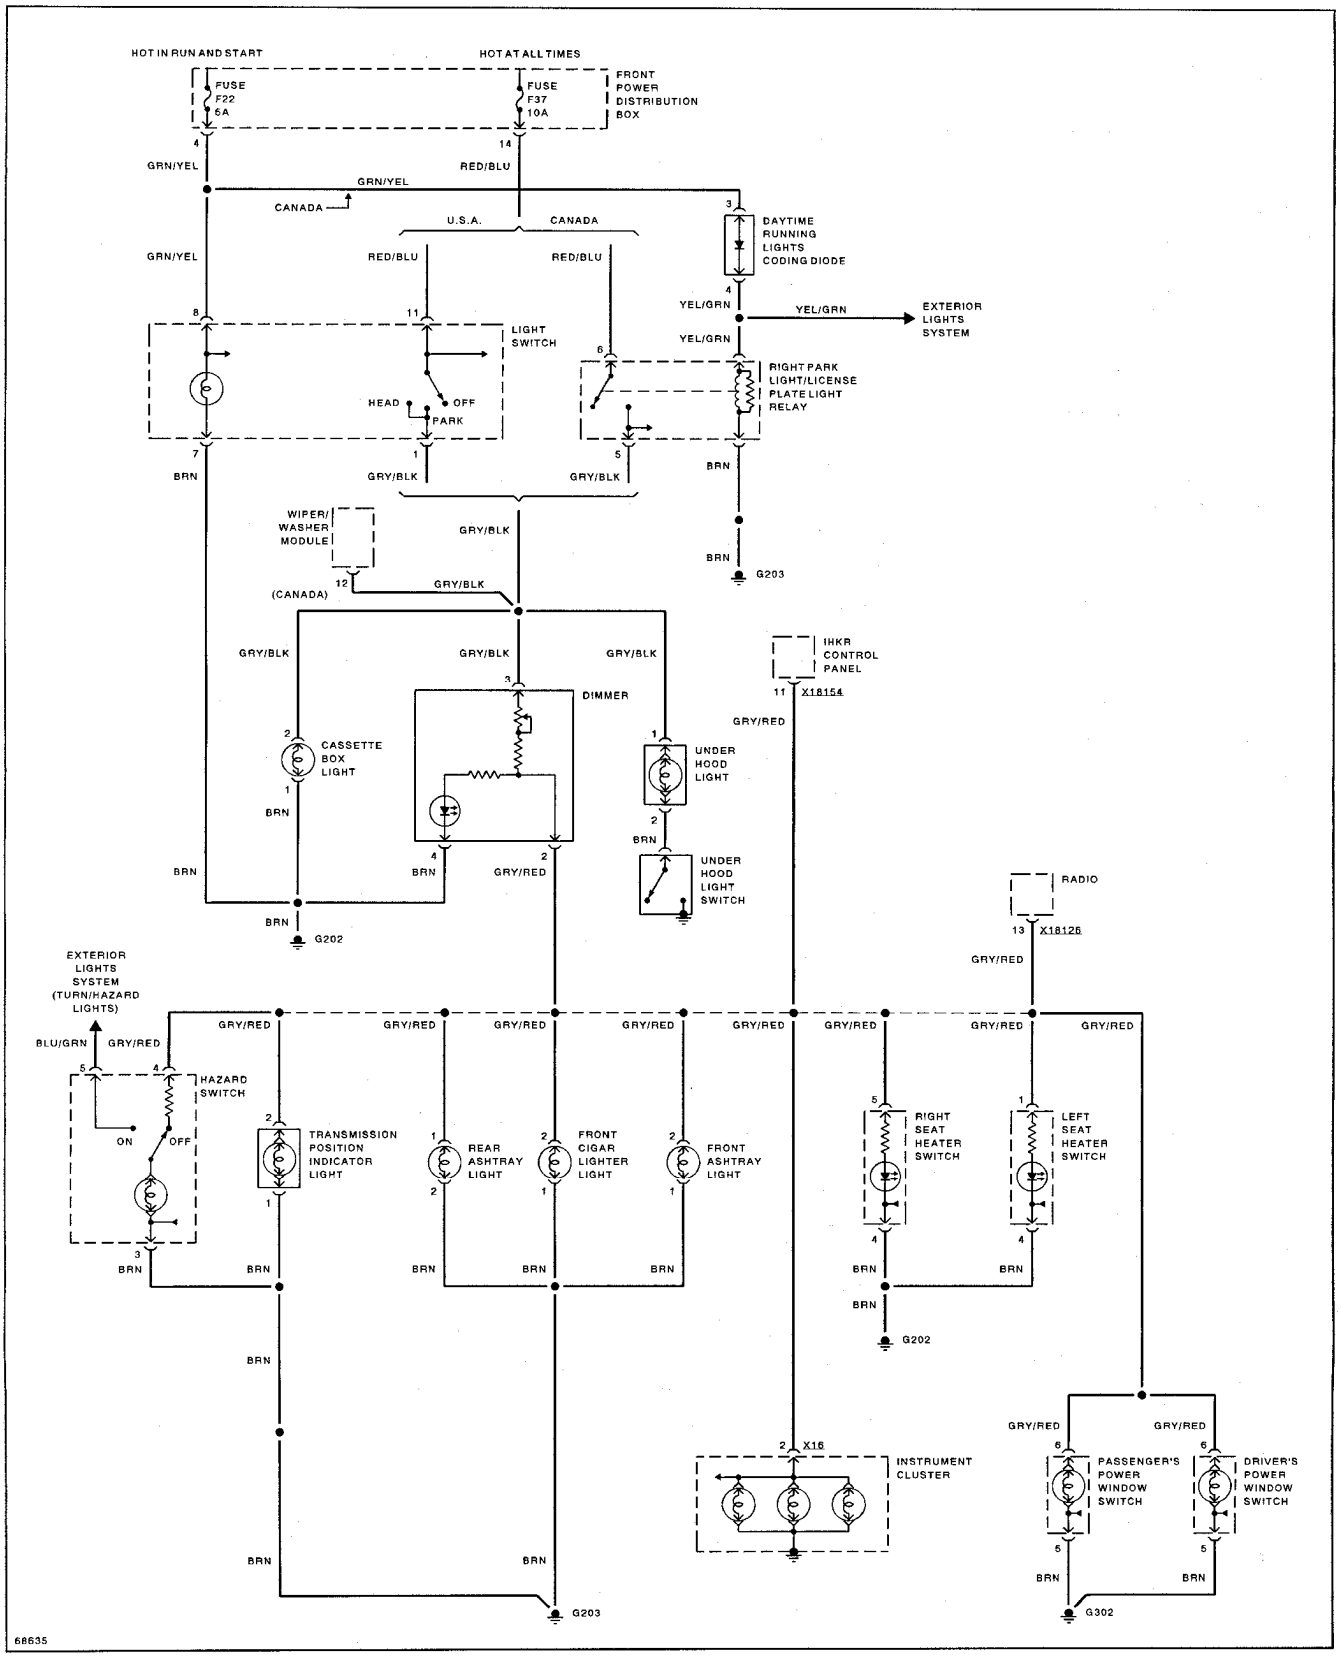

Exterior Lights
1995-98 318ti (2 of 2)

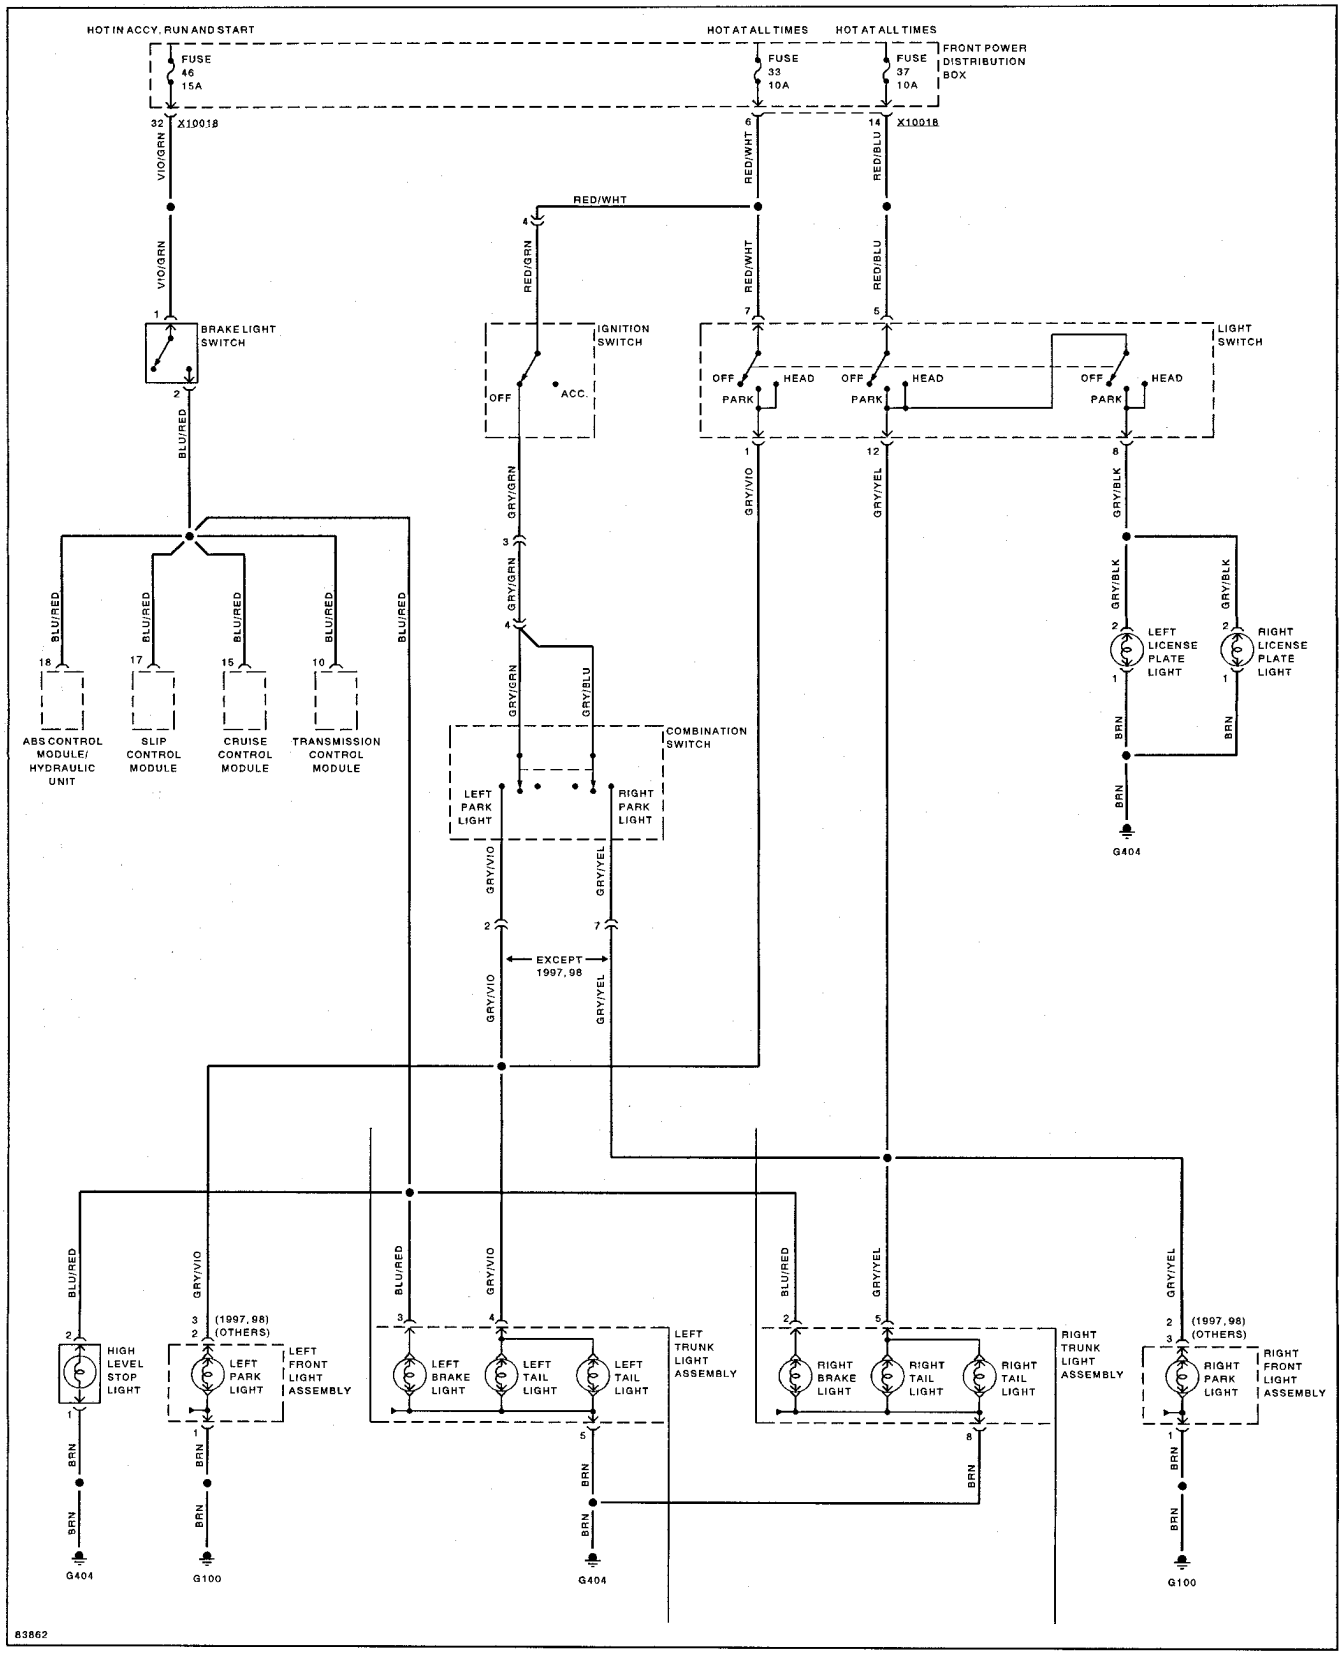


Exterior Lights
1995-98 318ti (1 of 2)

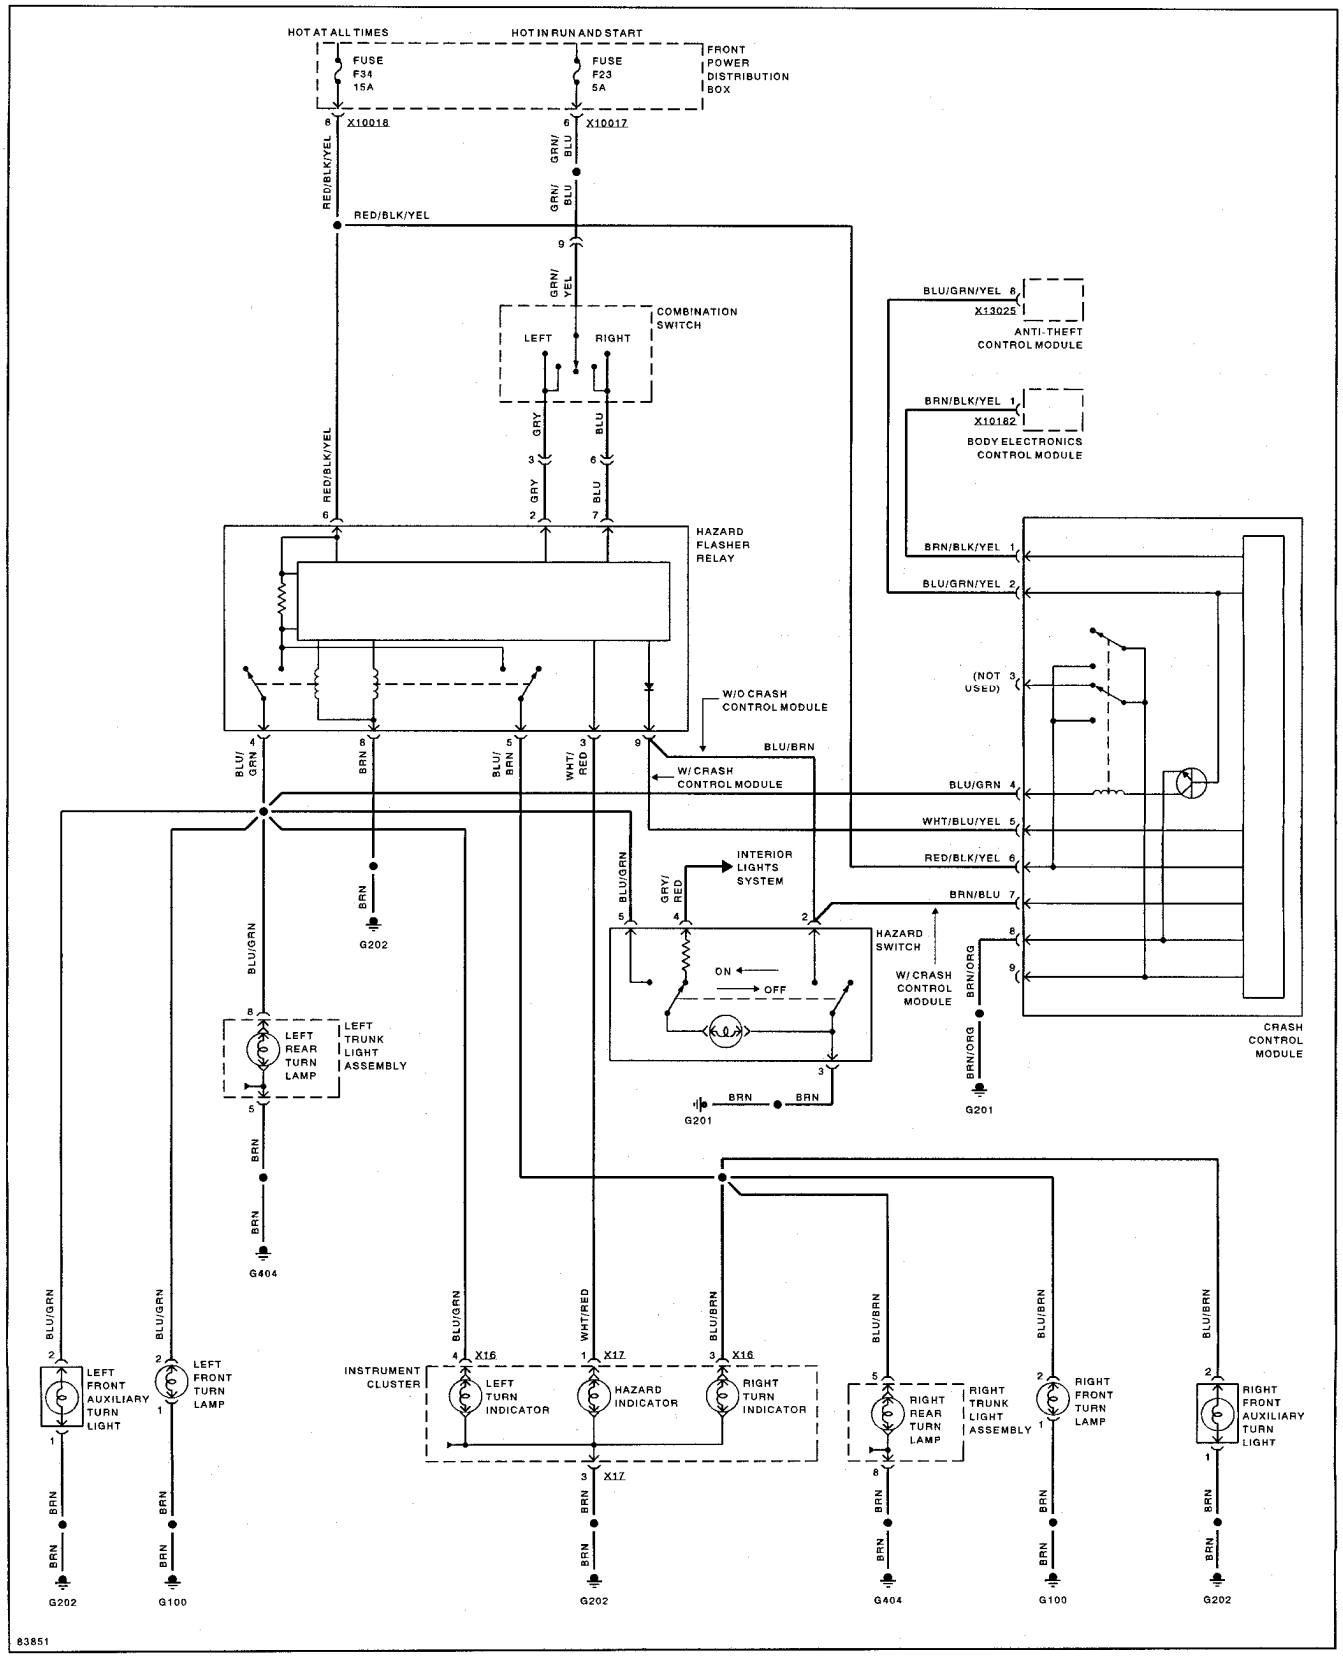


Exterior Lights

1998 Except 318ti (3 of 3)

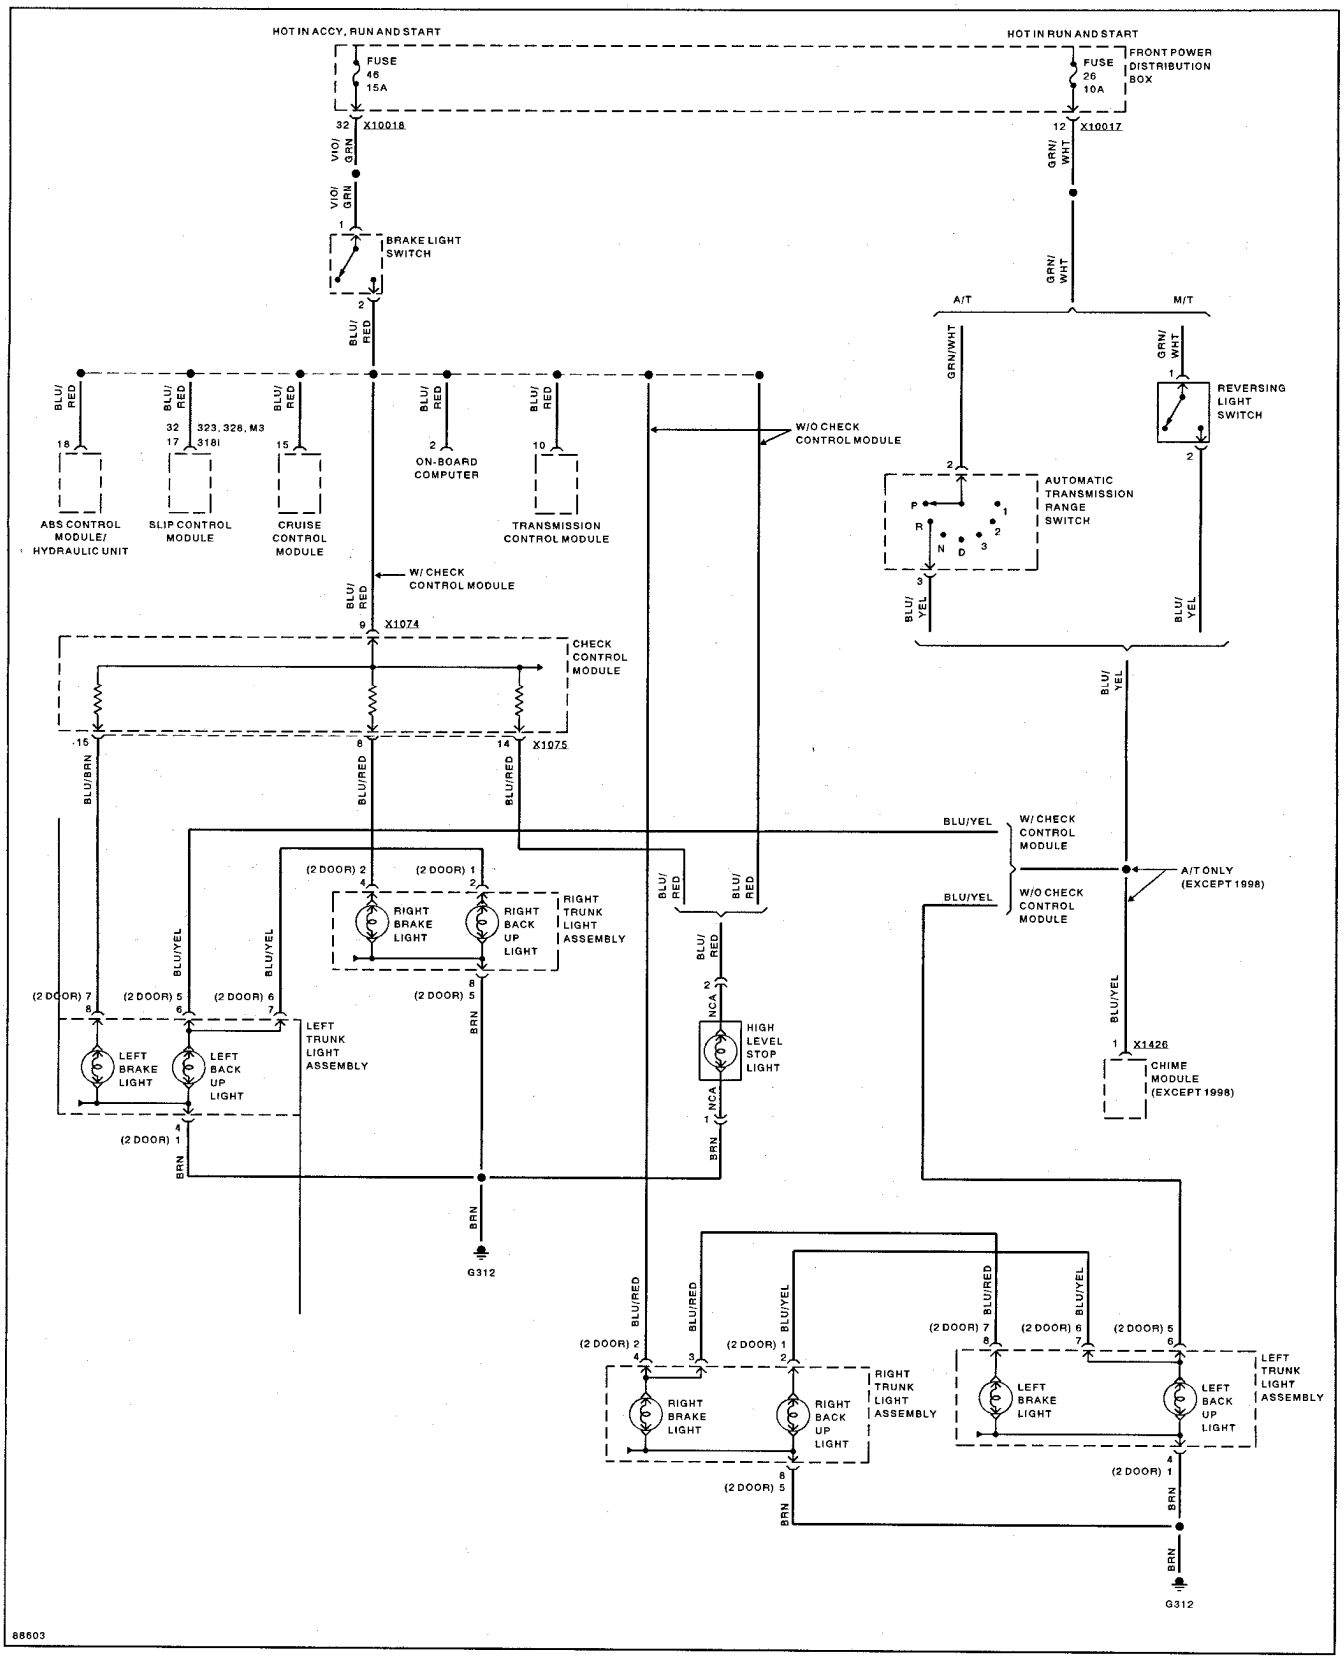


Exterior Lights
1998 Except 318ti (2 of 3)

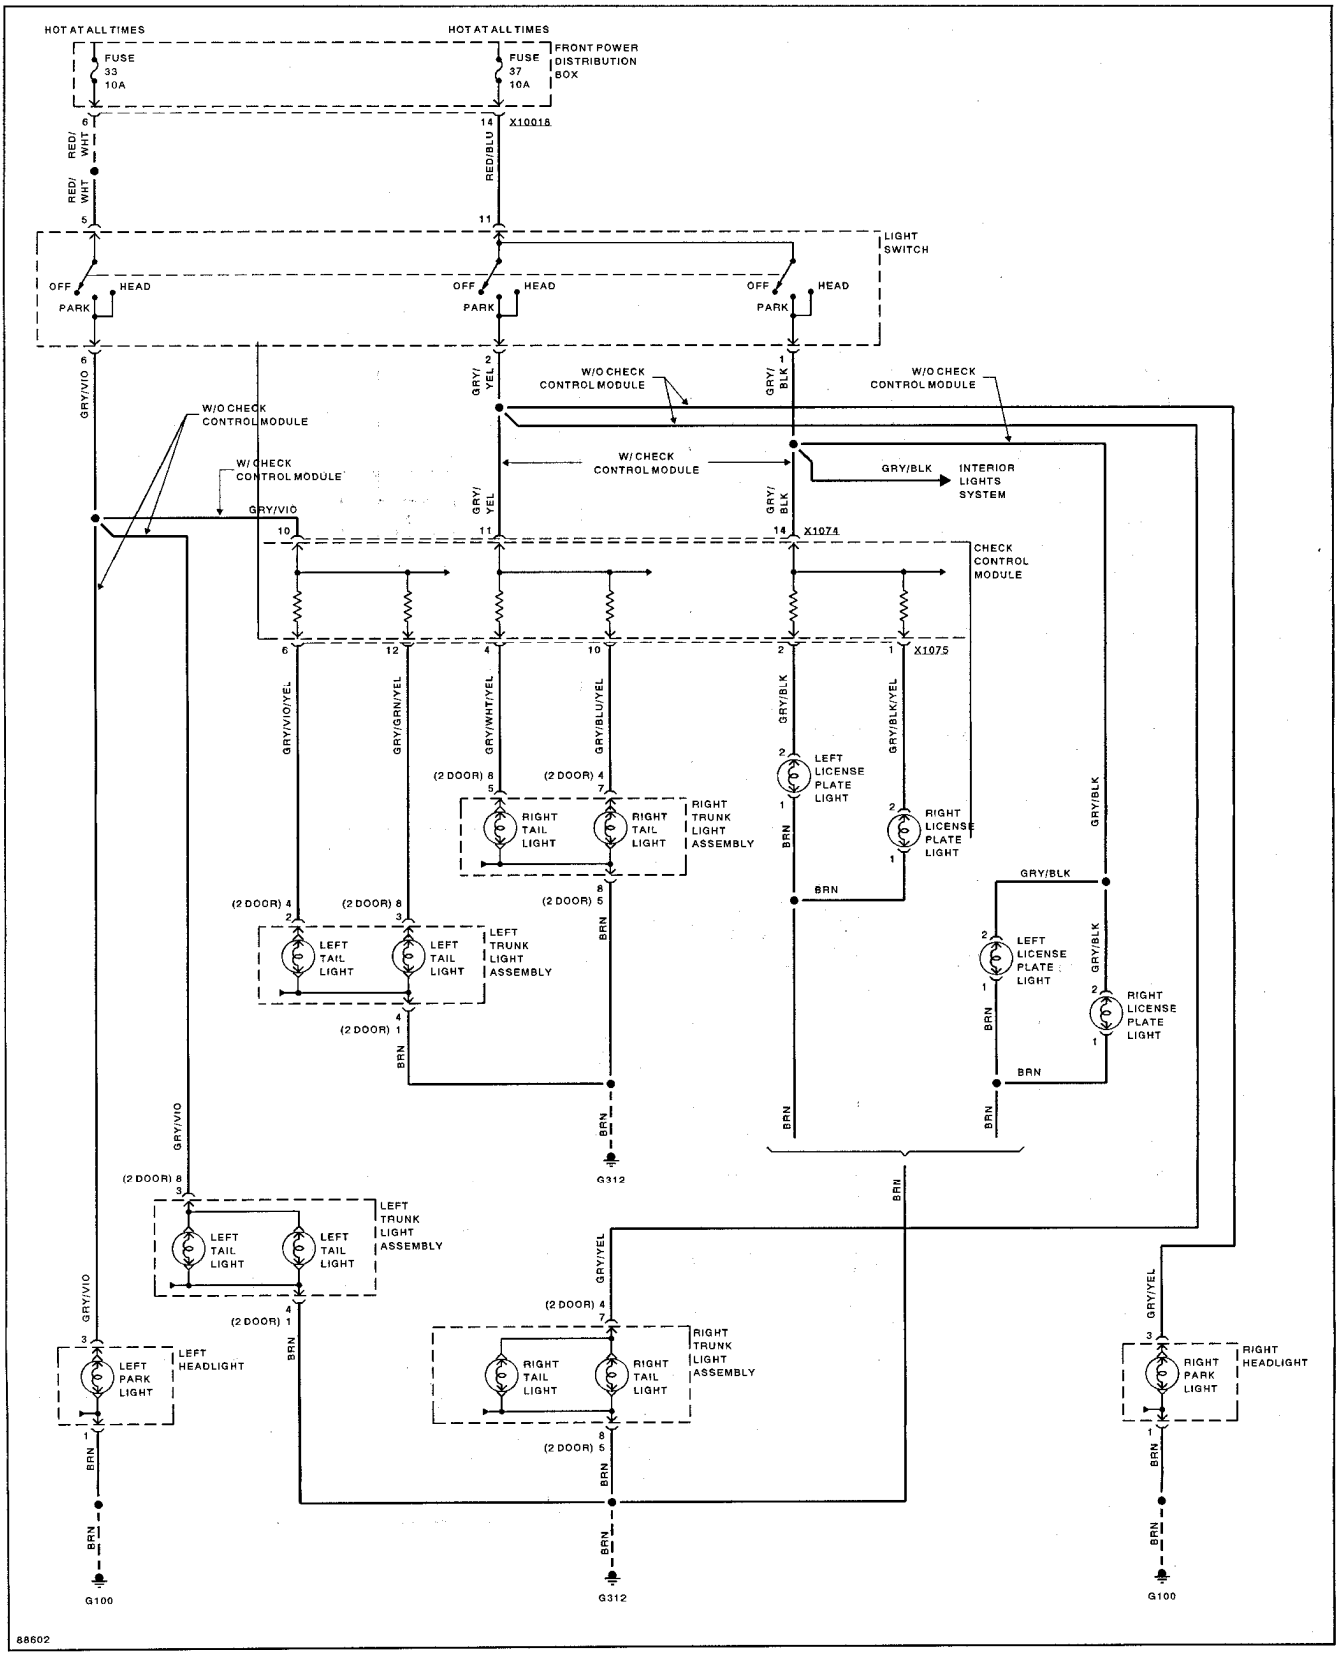


Exterior Lights

1998 Except 318ti (1 of 3)

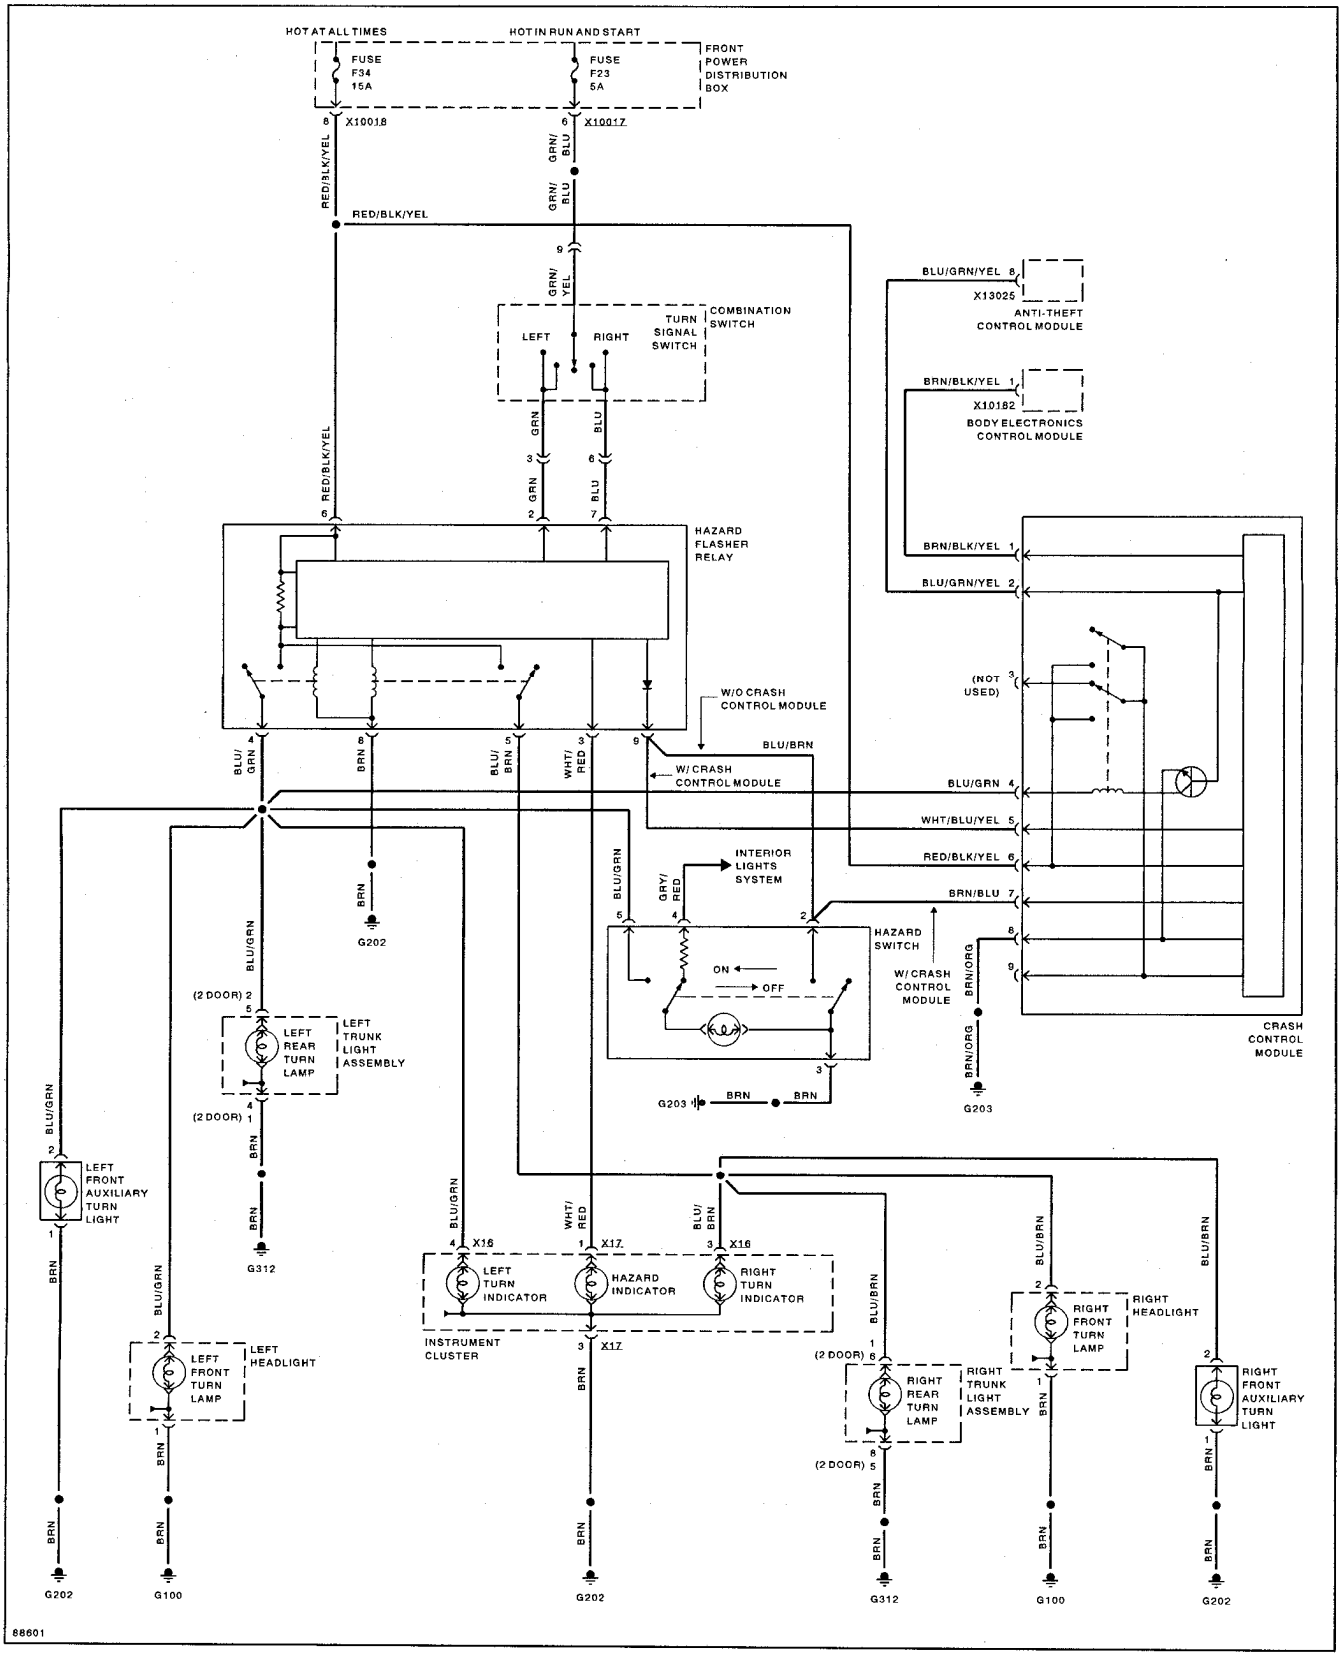

Exterior Lights


1994-96 (USA) & 1997 Except 318ti (3 of 3)

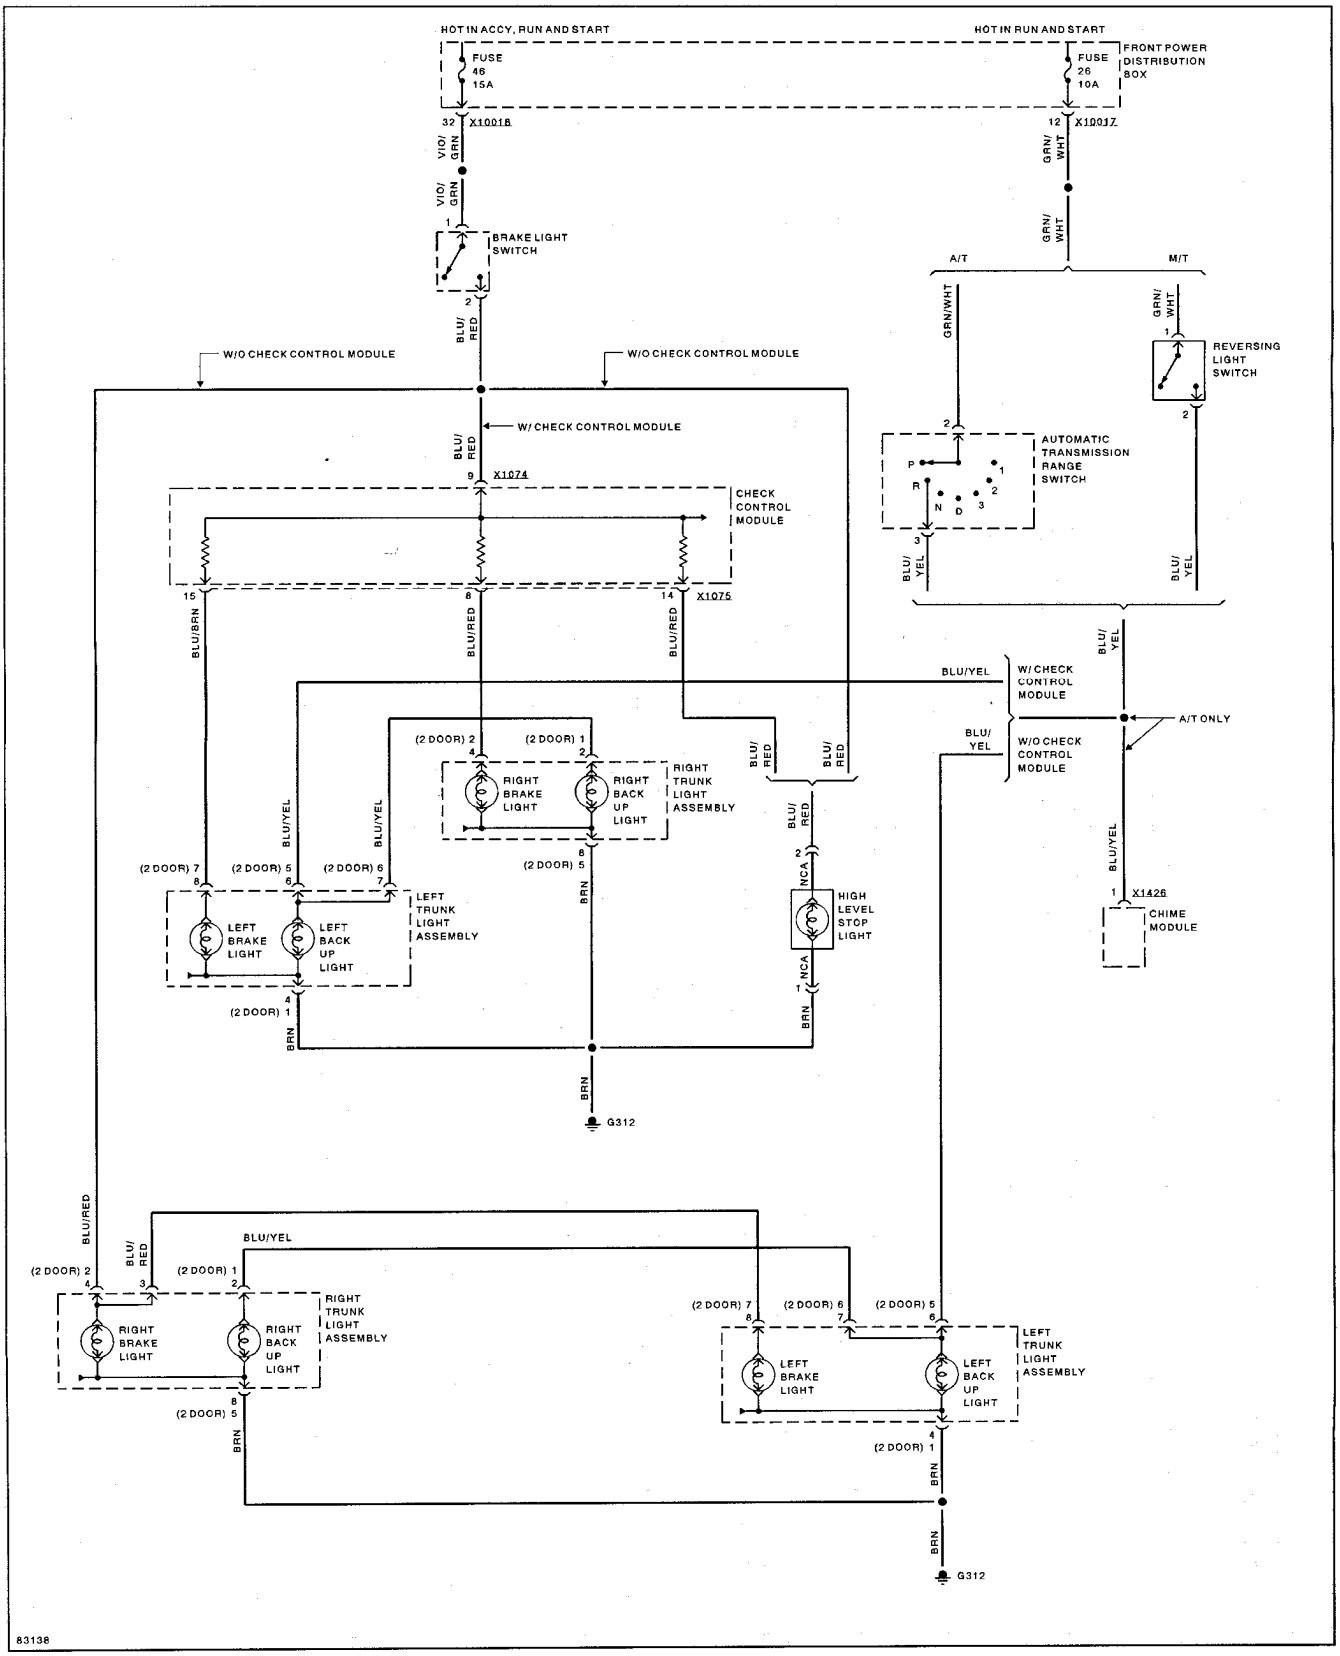

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Exterior Lights

1994-96 (USA) & 1997 Except 318ti (2 of 3)

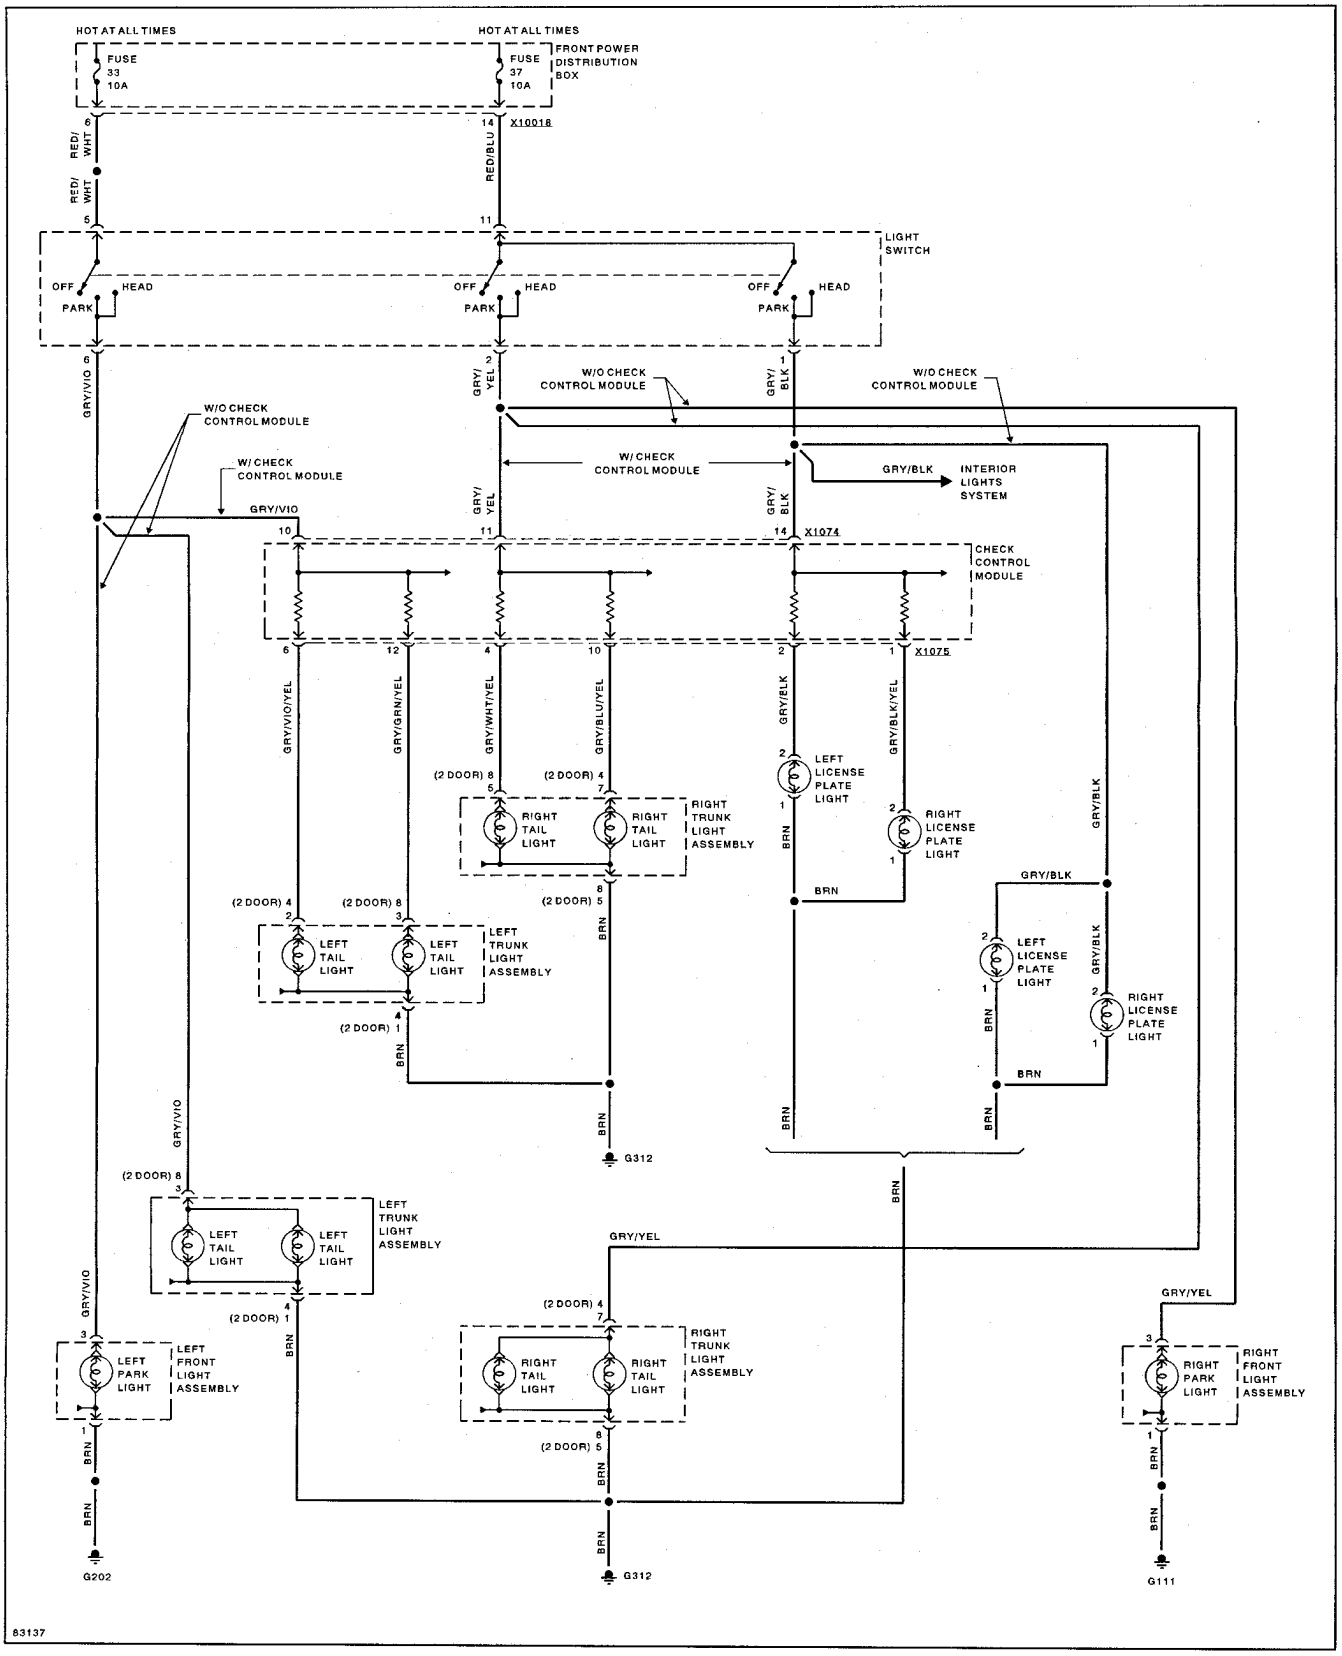


Exterior Lights

1994-96 (USA) & 1997 Except 318ti (1 of 3)

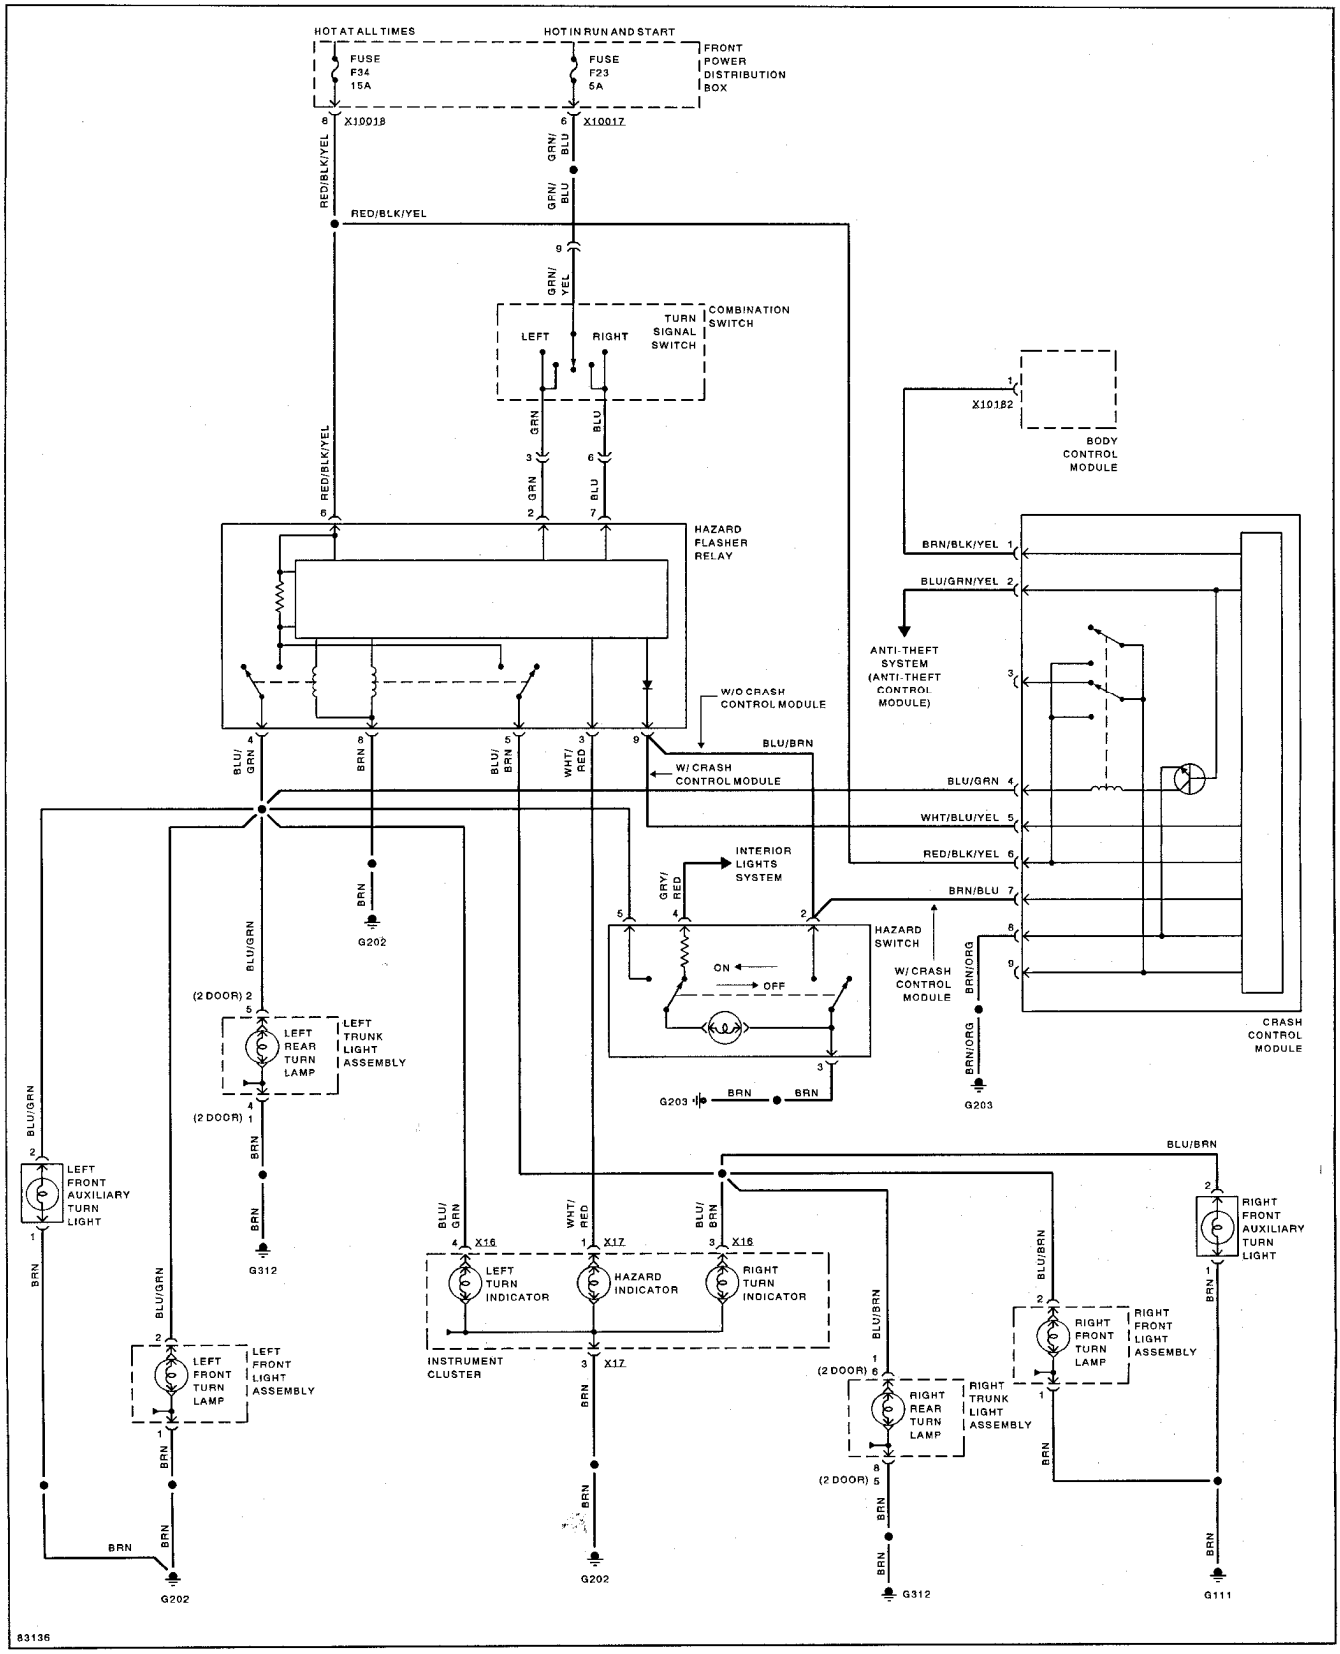


Exterior Lights

1994-96 Except 318ti (Canada) (3 of 3)

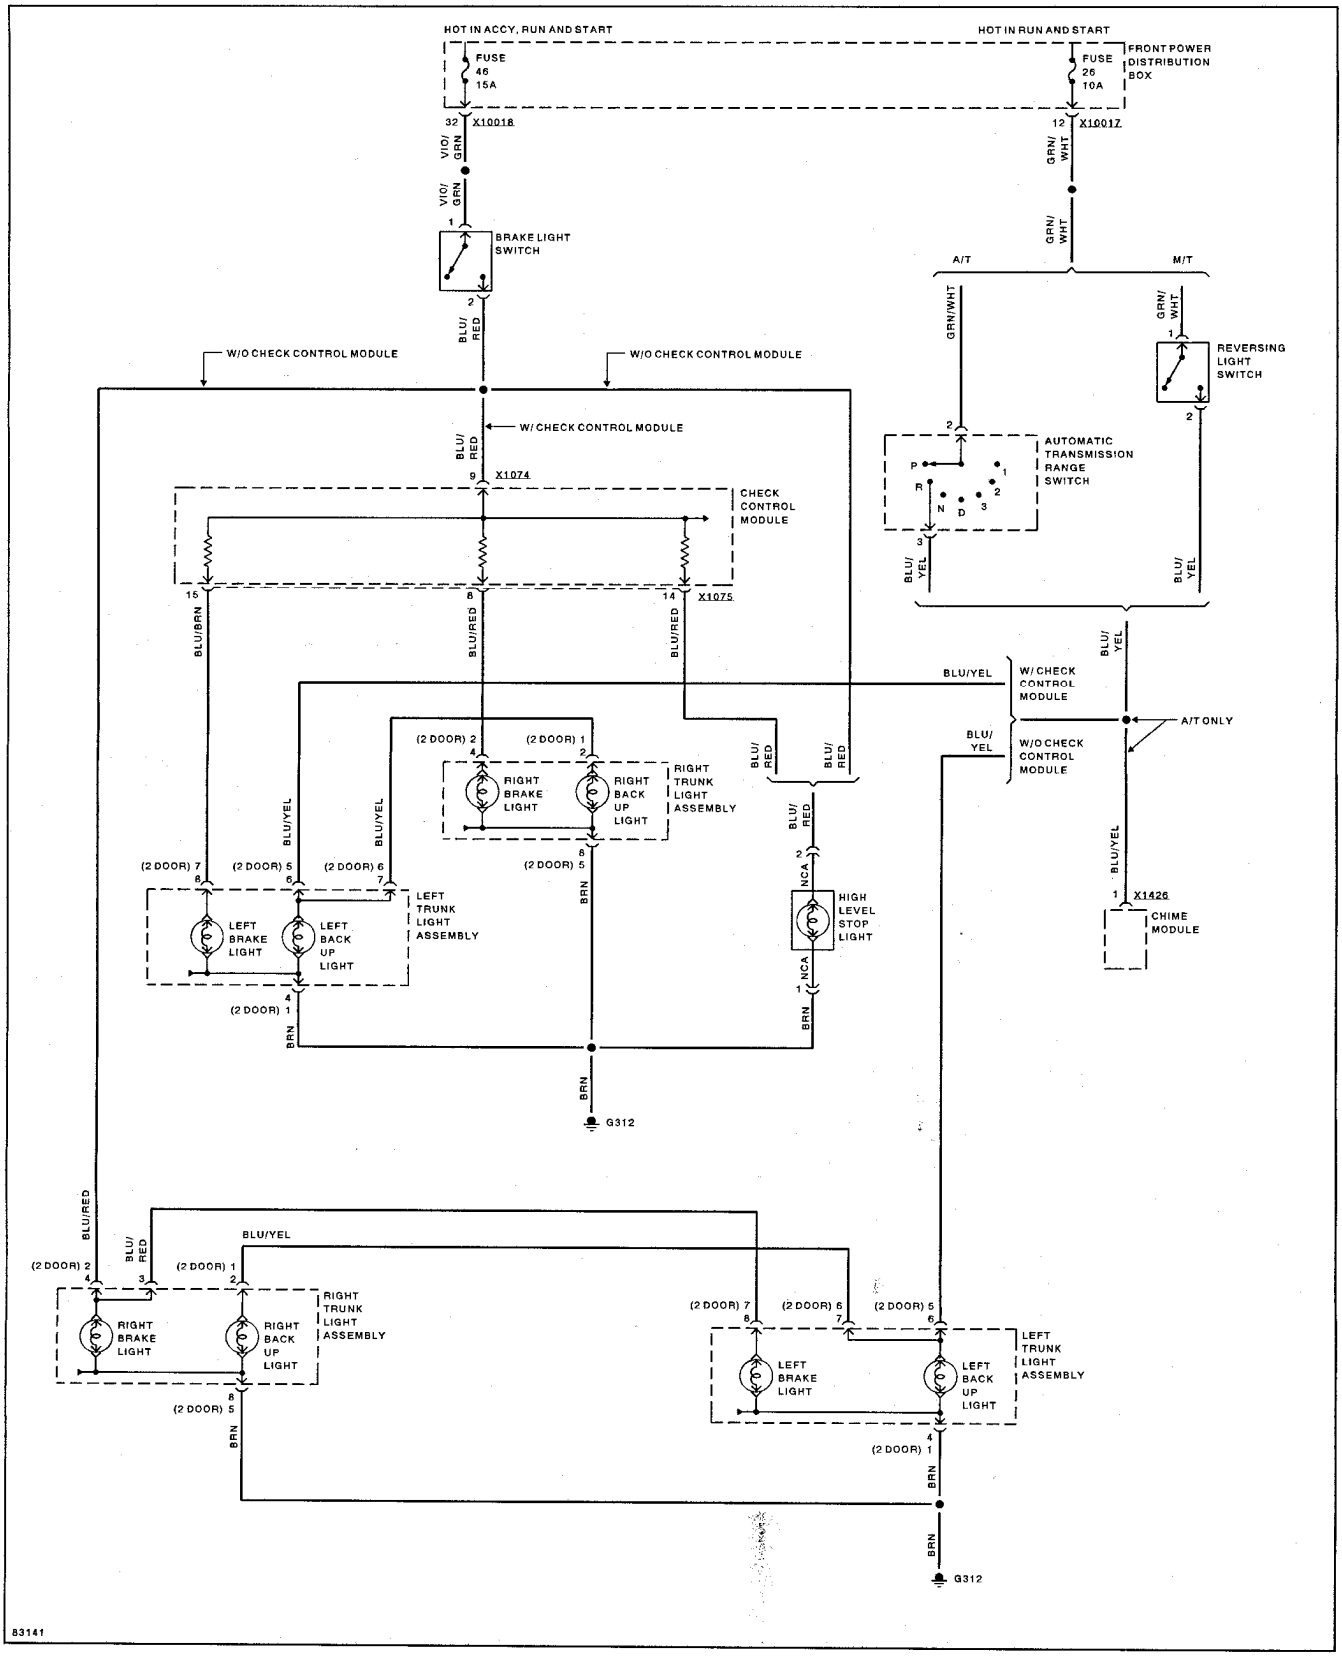


Exterior Lights

1994-96 Except 318ti (Canada) (2 of 3)

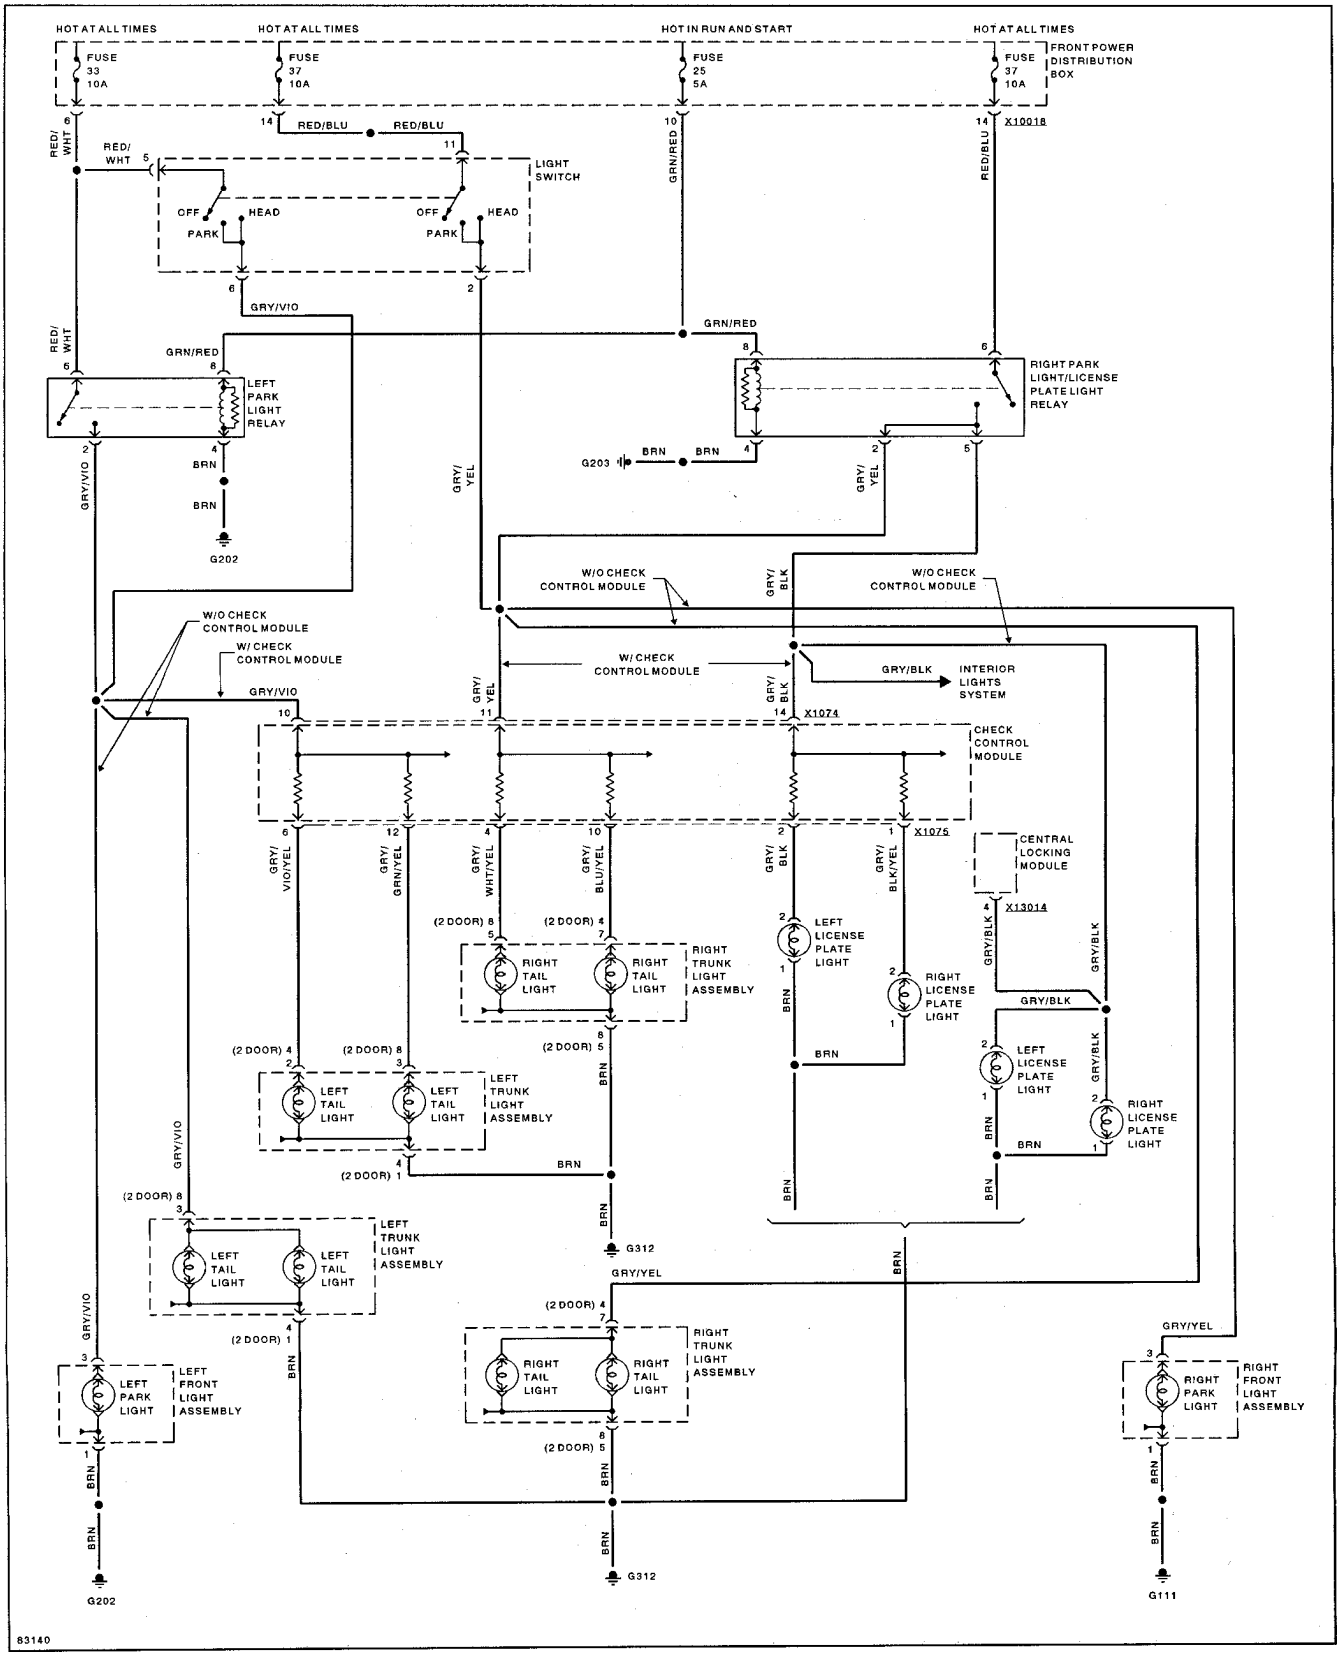


Exterior Lights

1994-96 Except 318ti (Canada) (1 of 3)

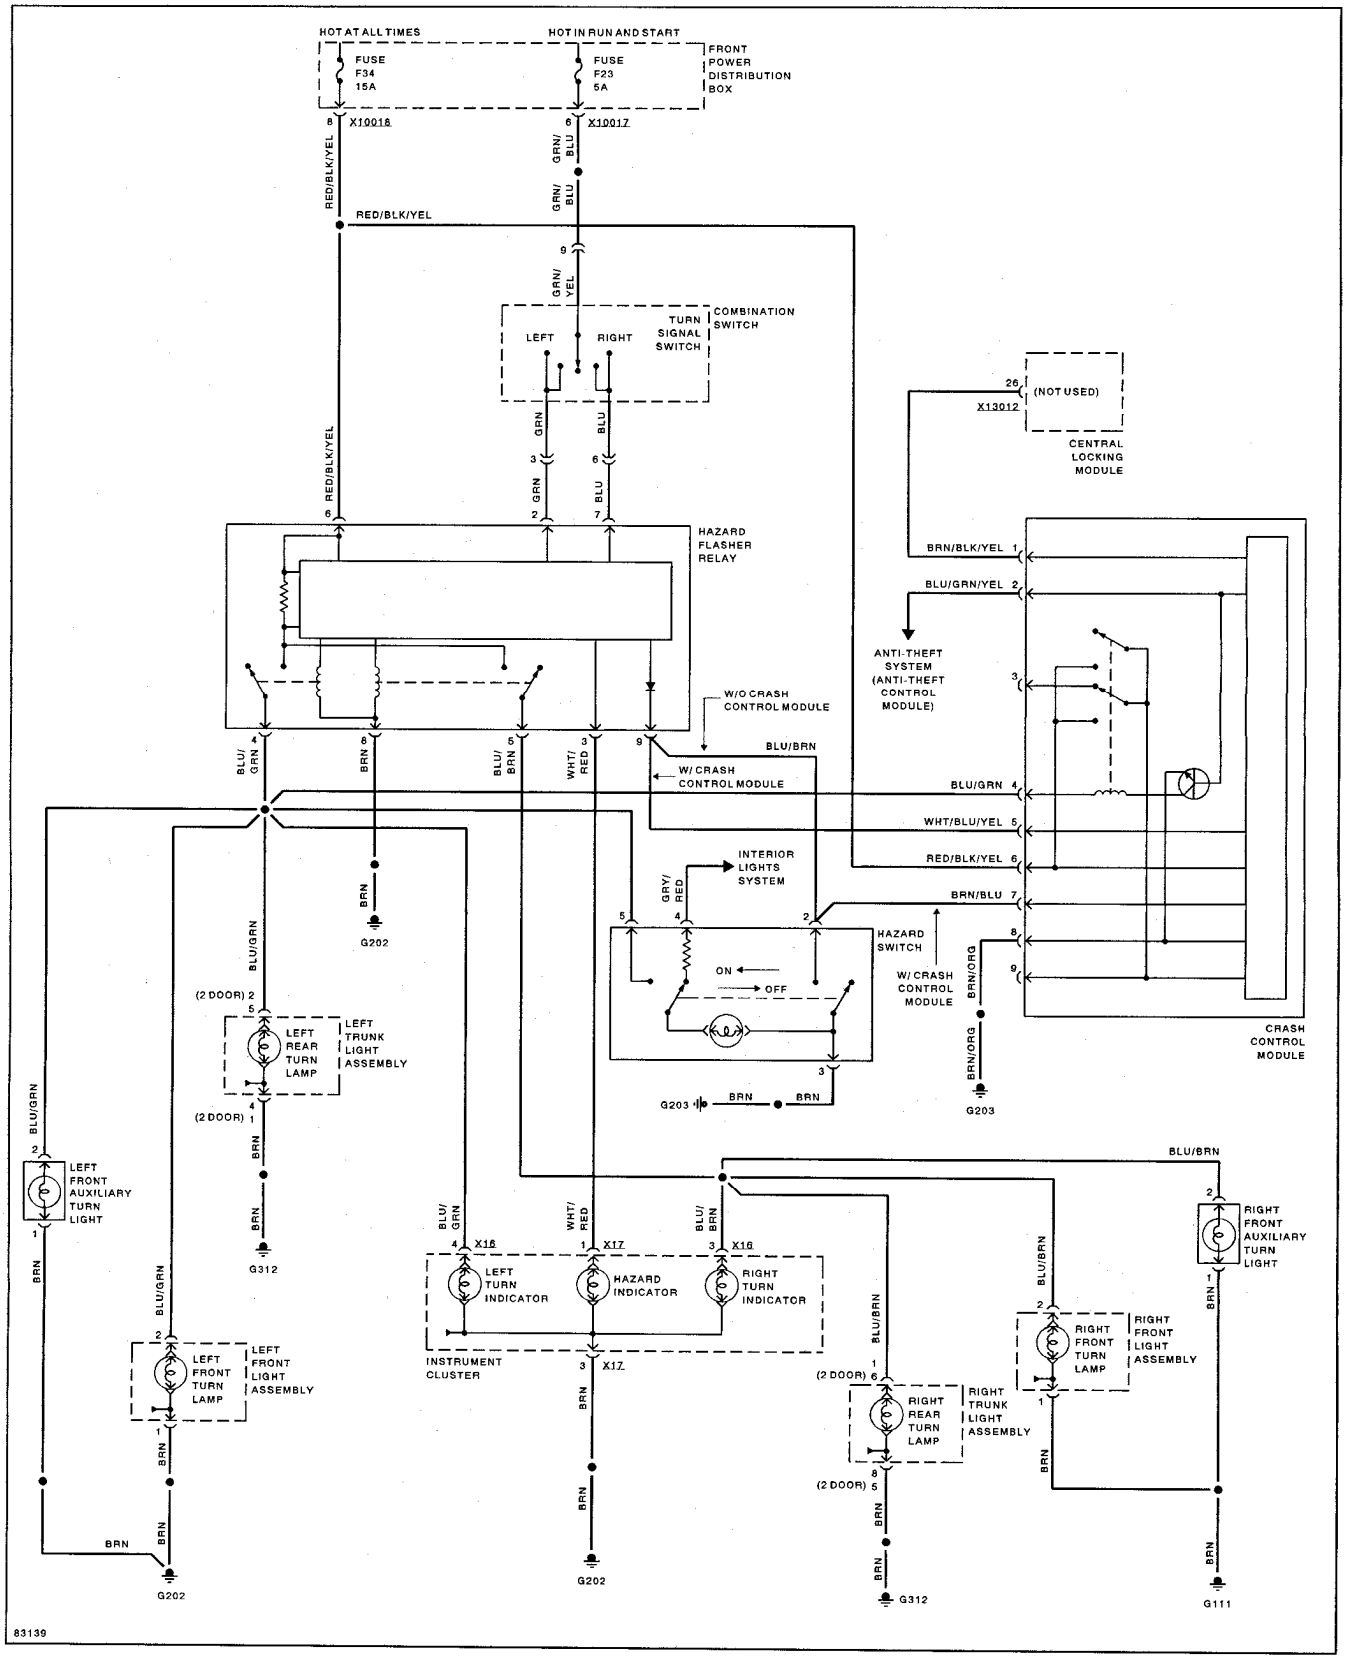


Exterior Lights


1992-93 (USA) (3 of 3)

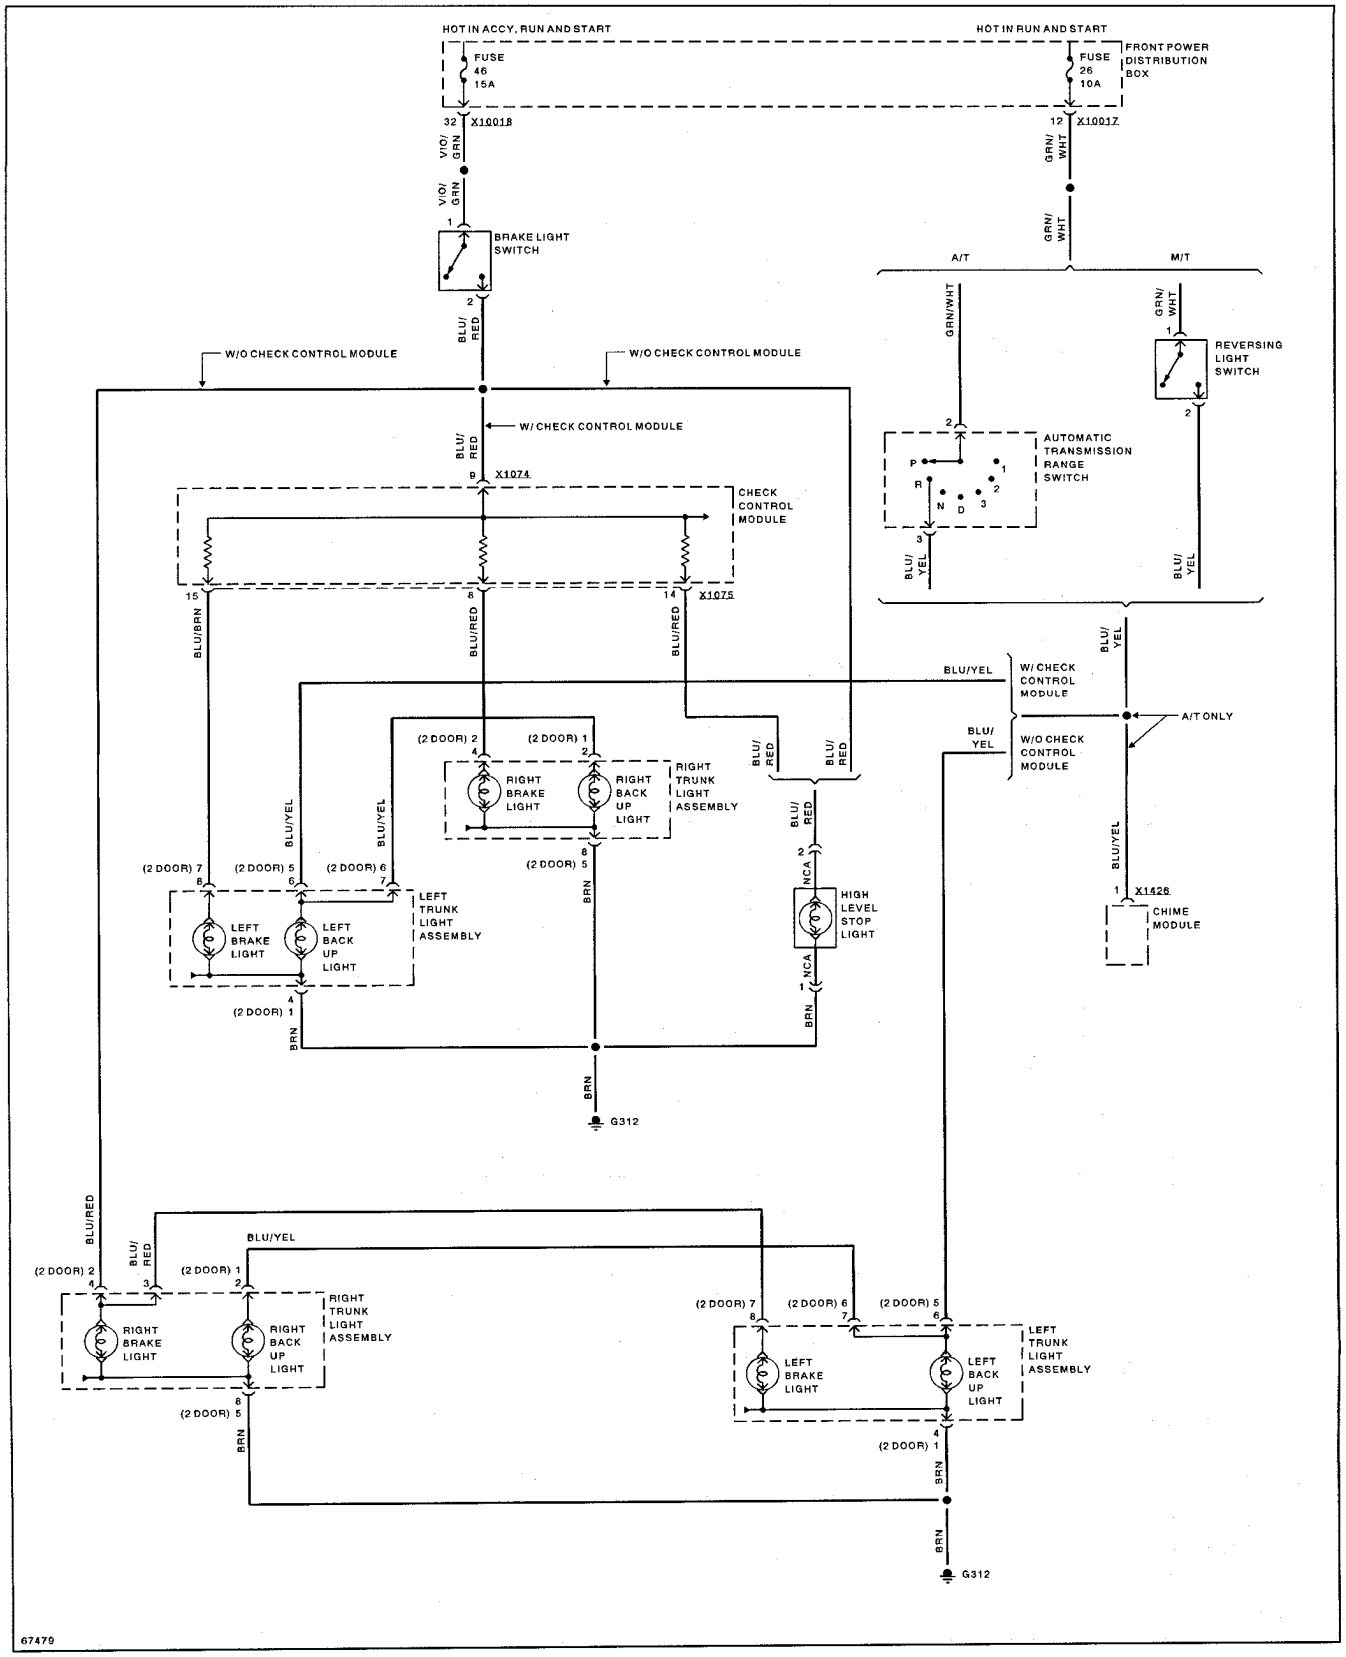

Exterior Lights
1992-93 (USA) (2 of 3)

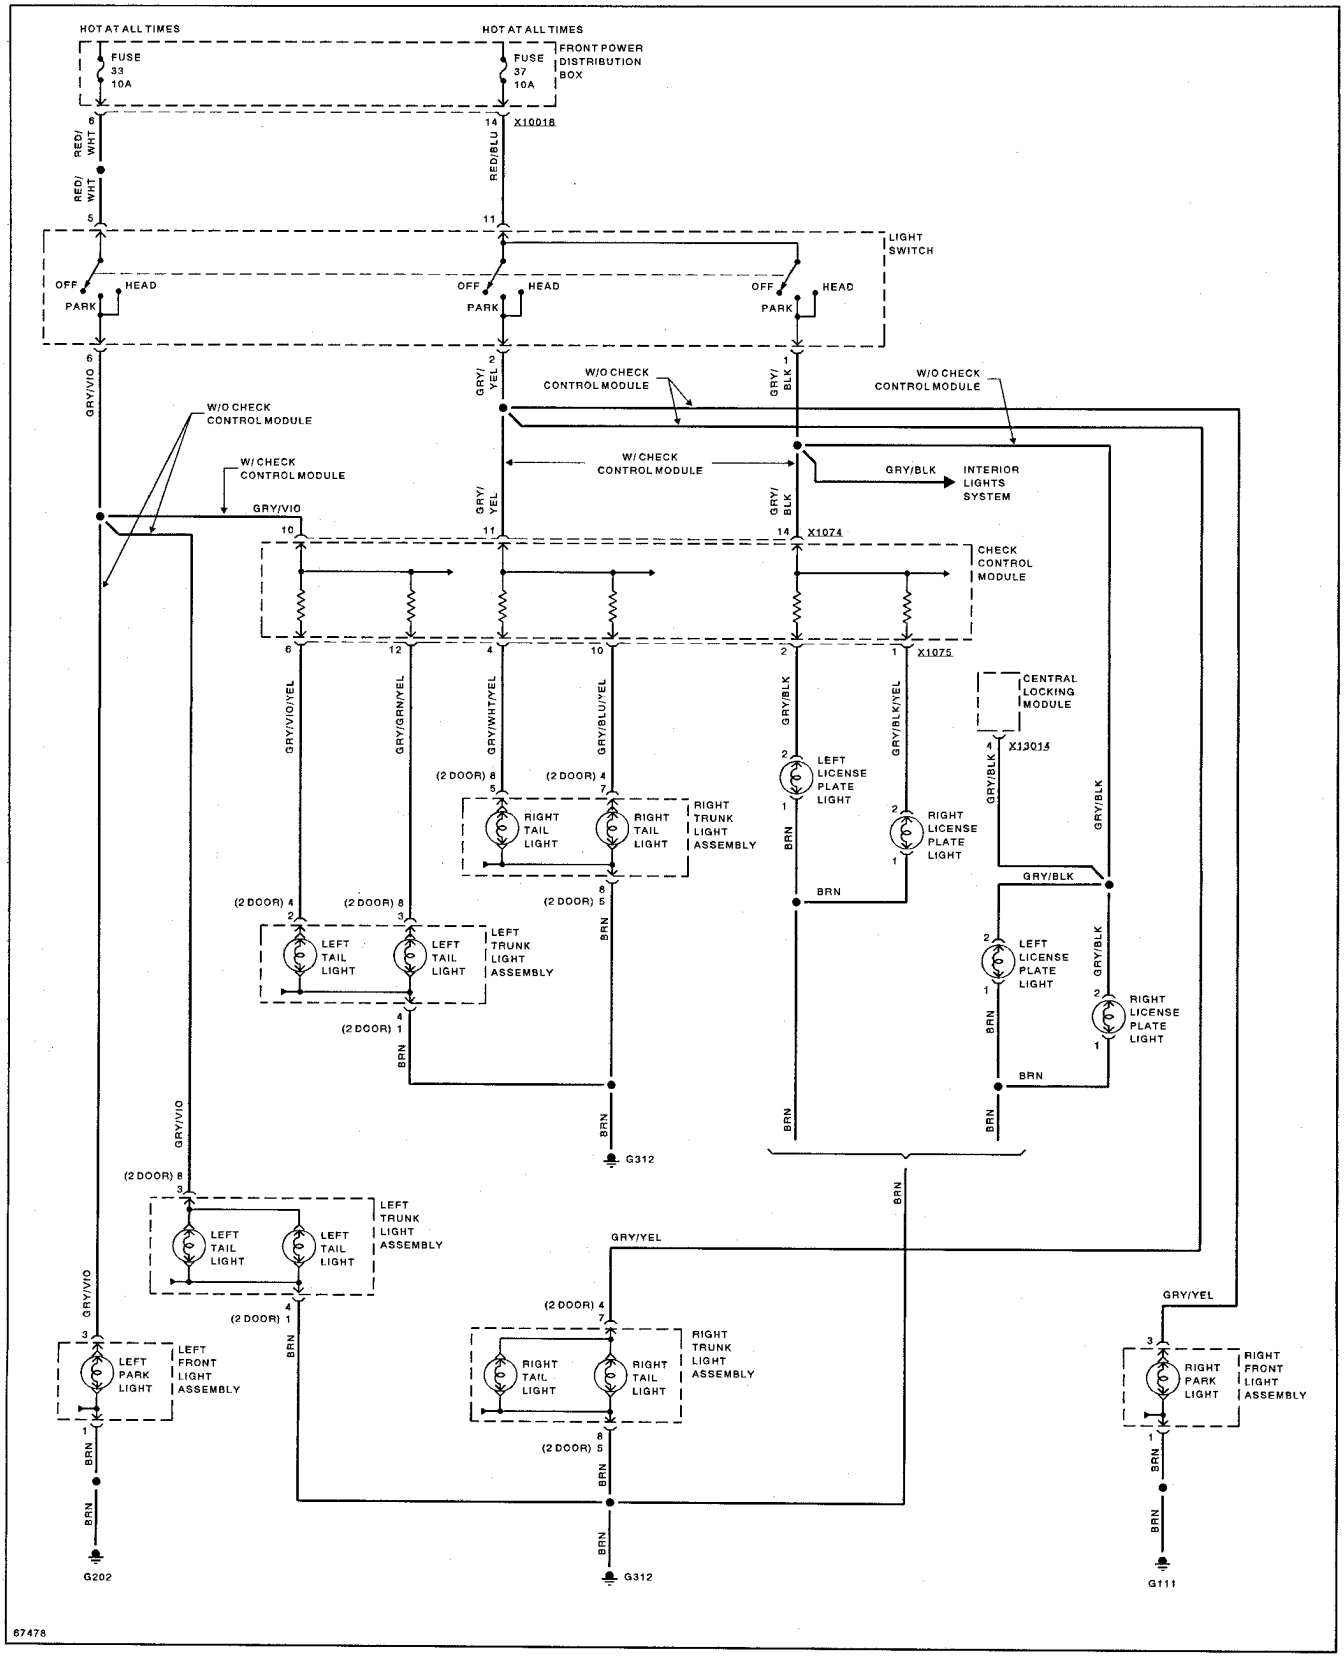


Exterior Lights
1992-93 (USA) (1 of 3)

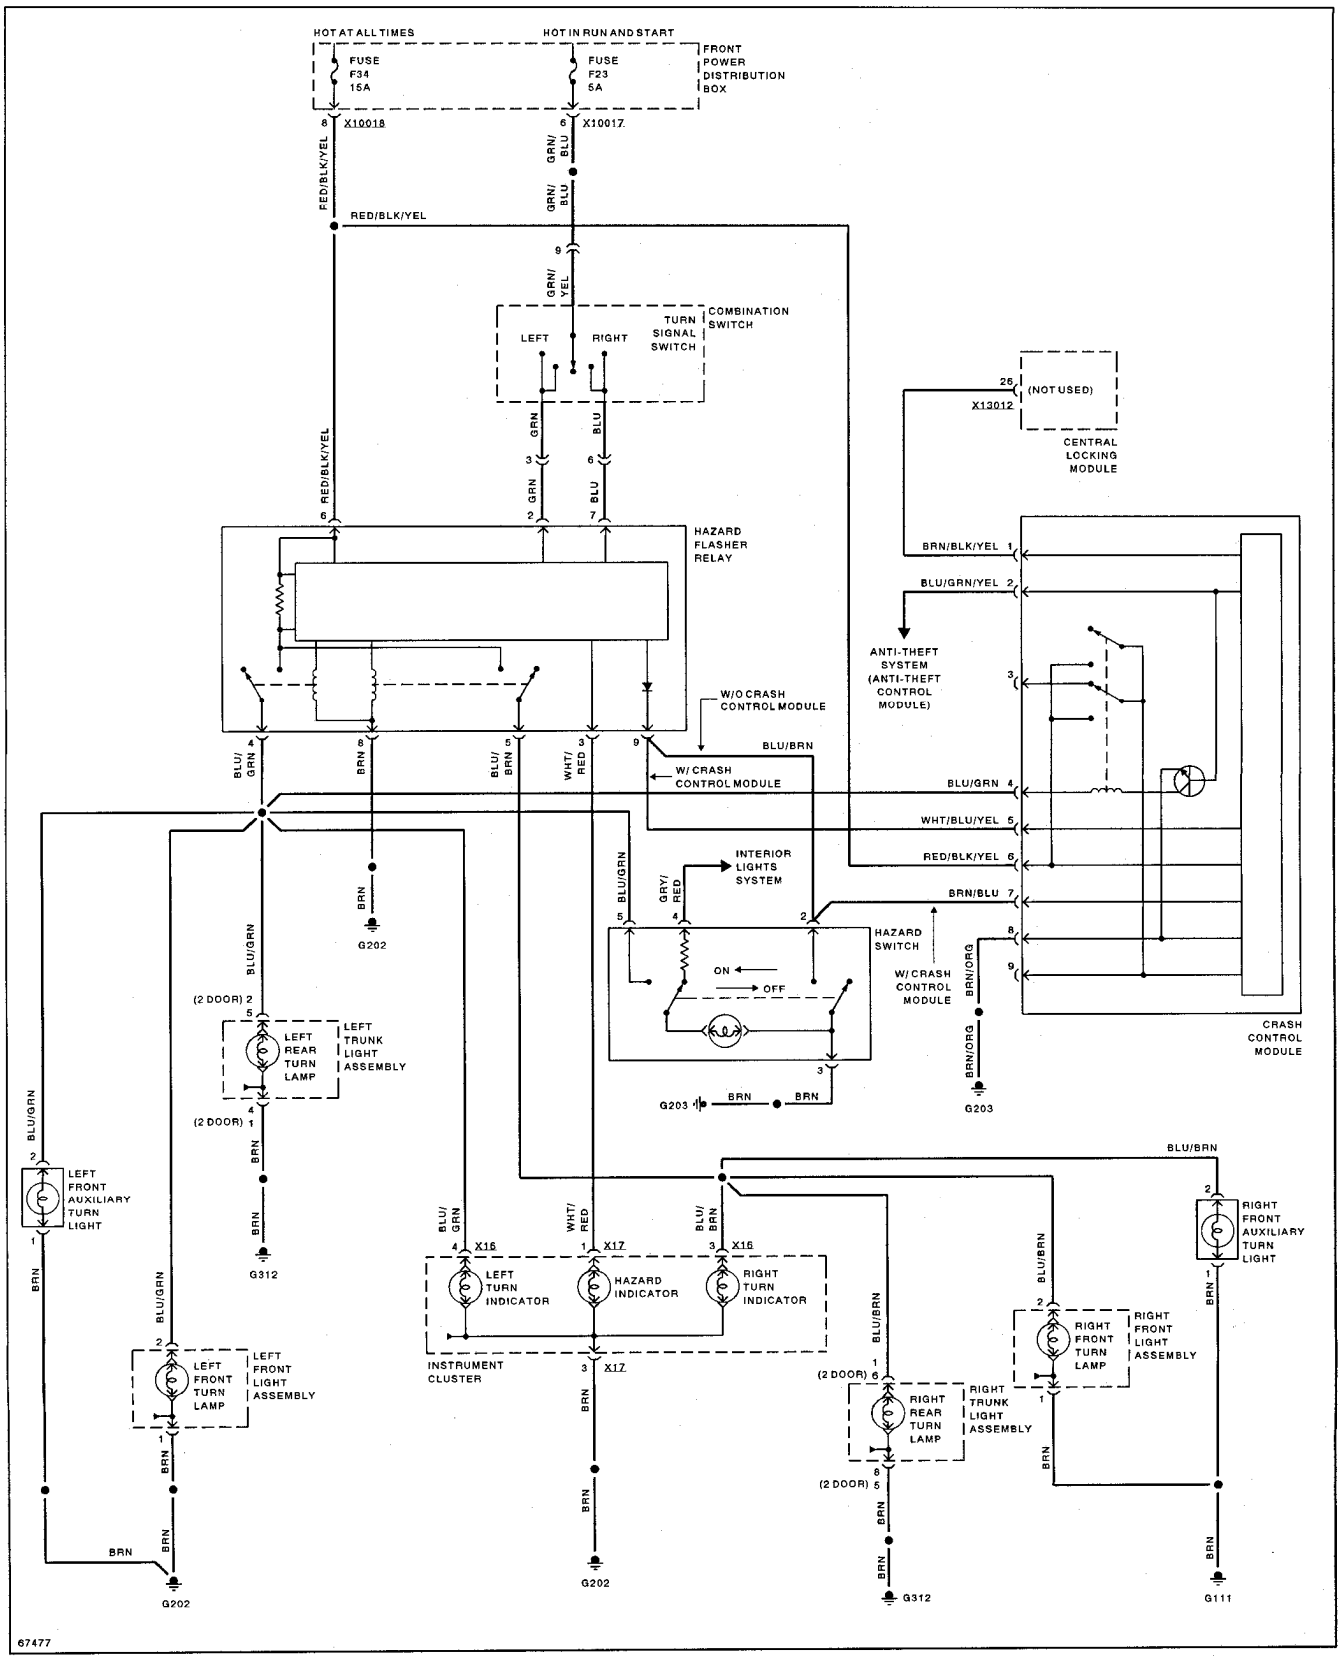


Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Exterior Lights
1992-93 (Canada) (3 of 3)

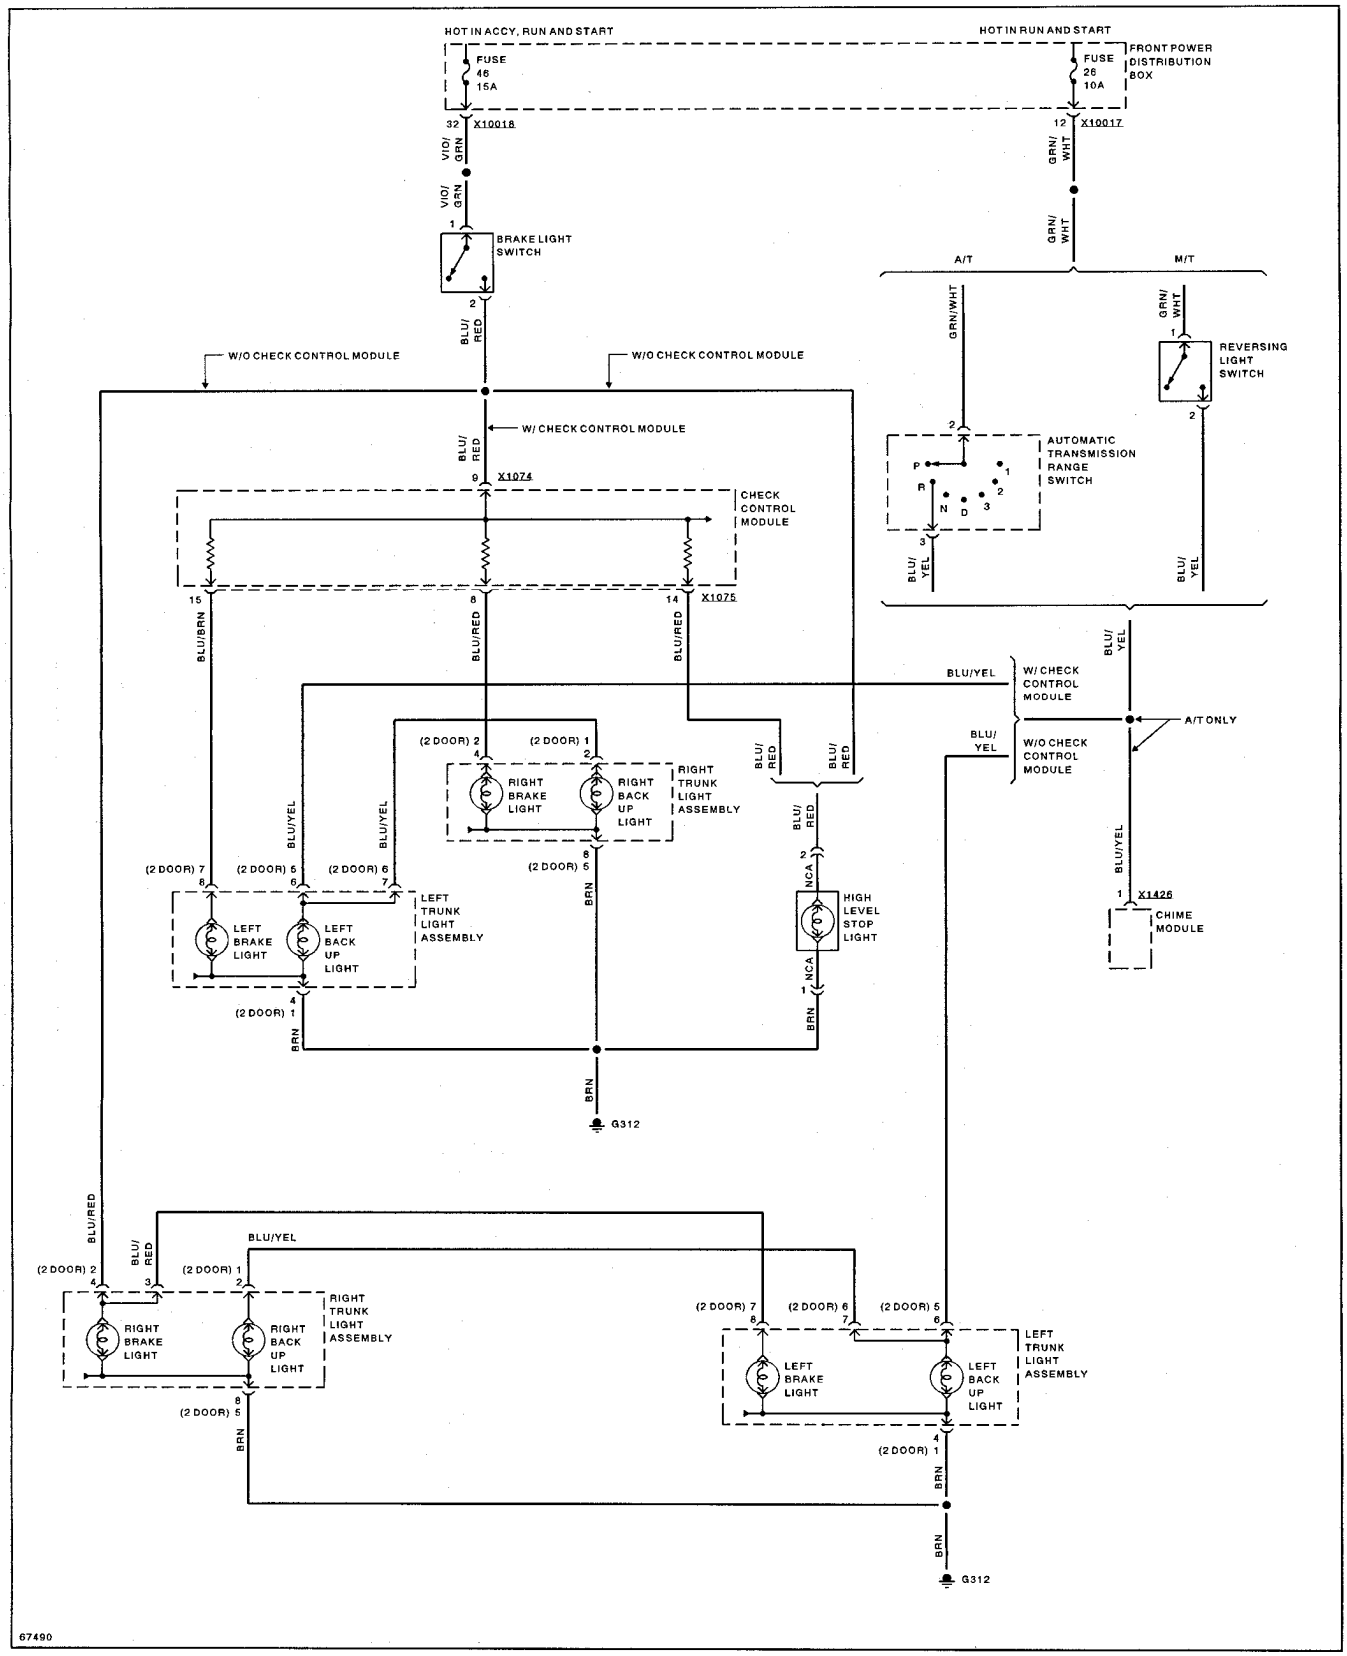

Exterior Lights
1992-93 (Canada) (2 of 3)

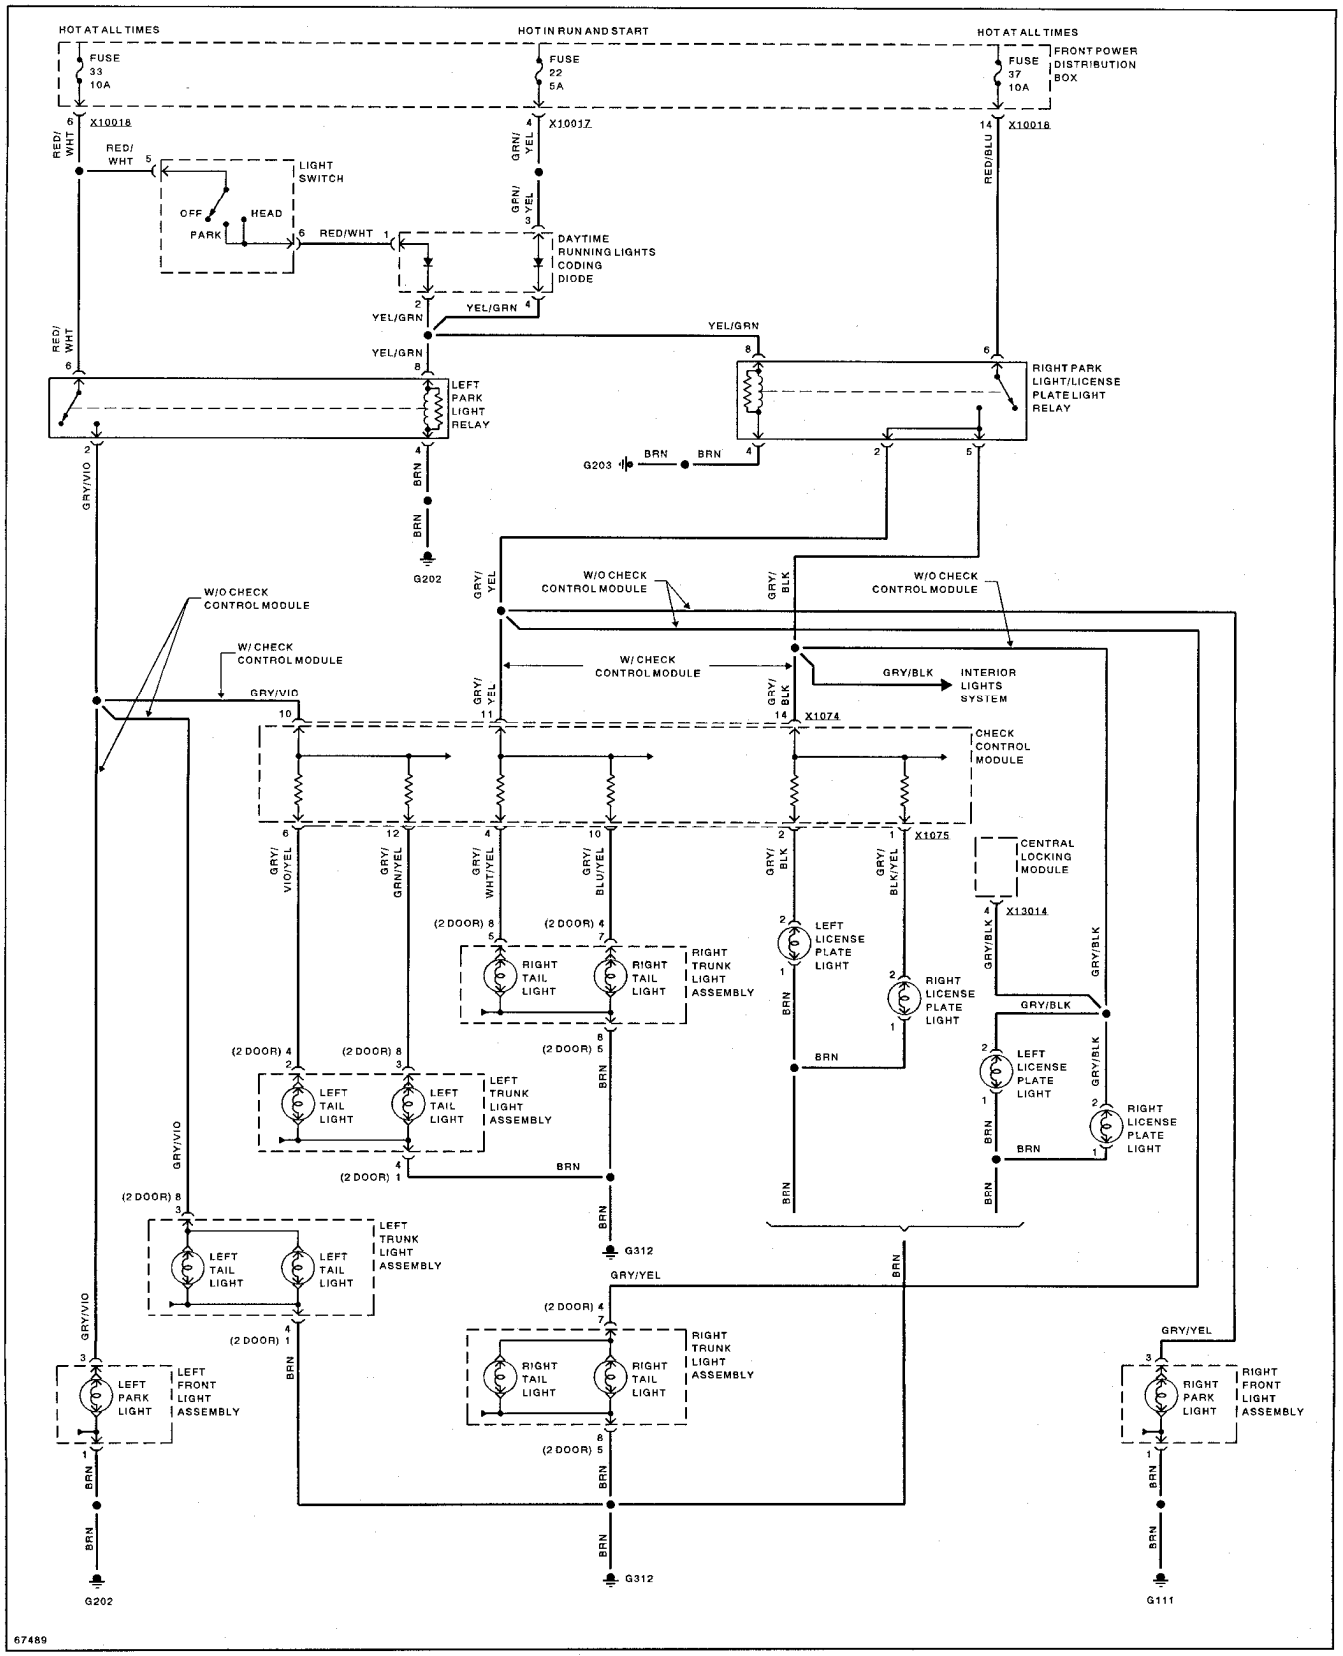


Exterior Lights
1992-93 (Canada) (1 of 3)

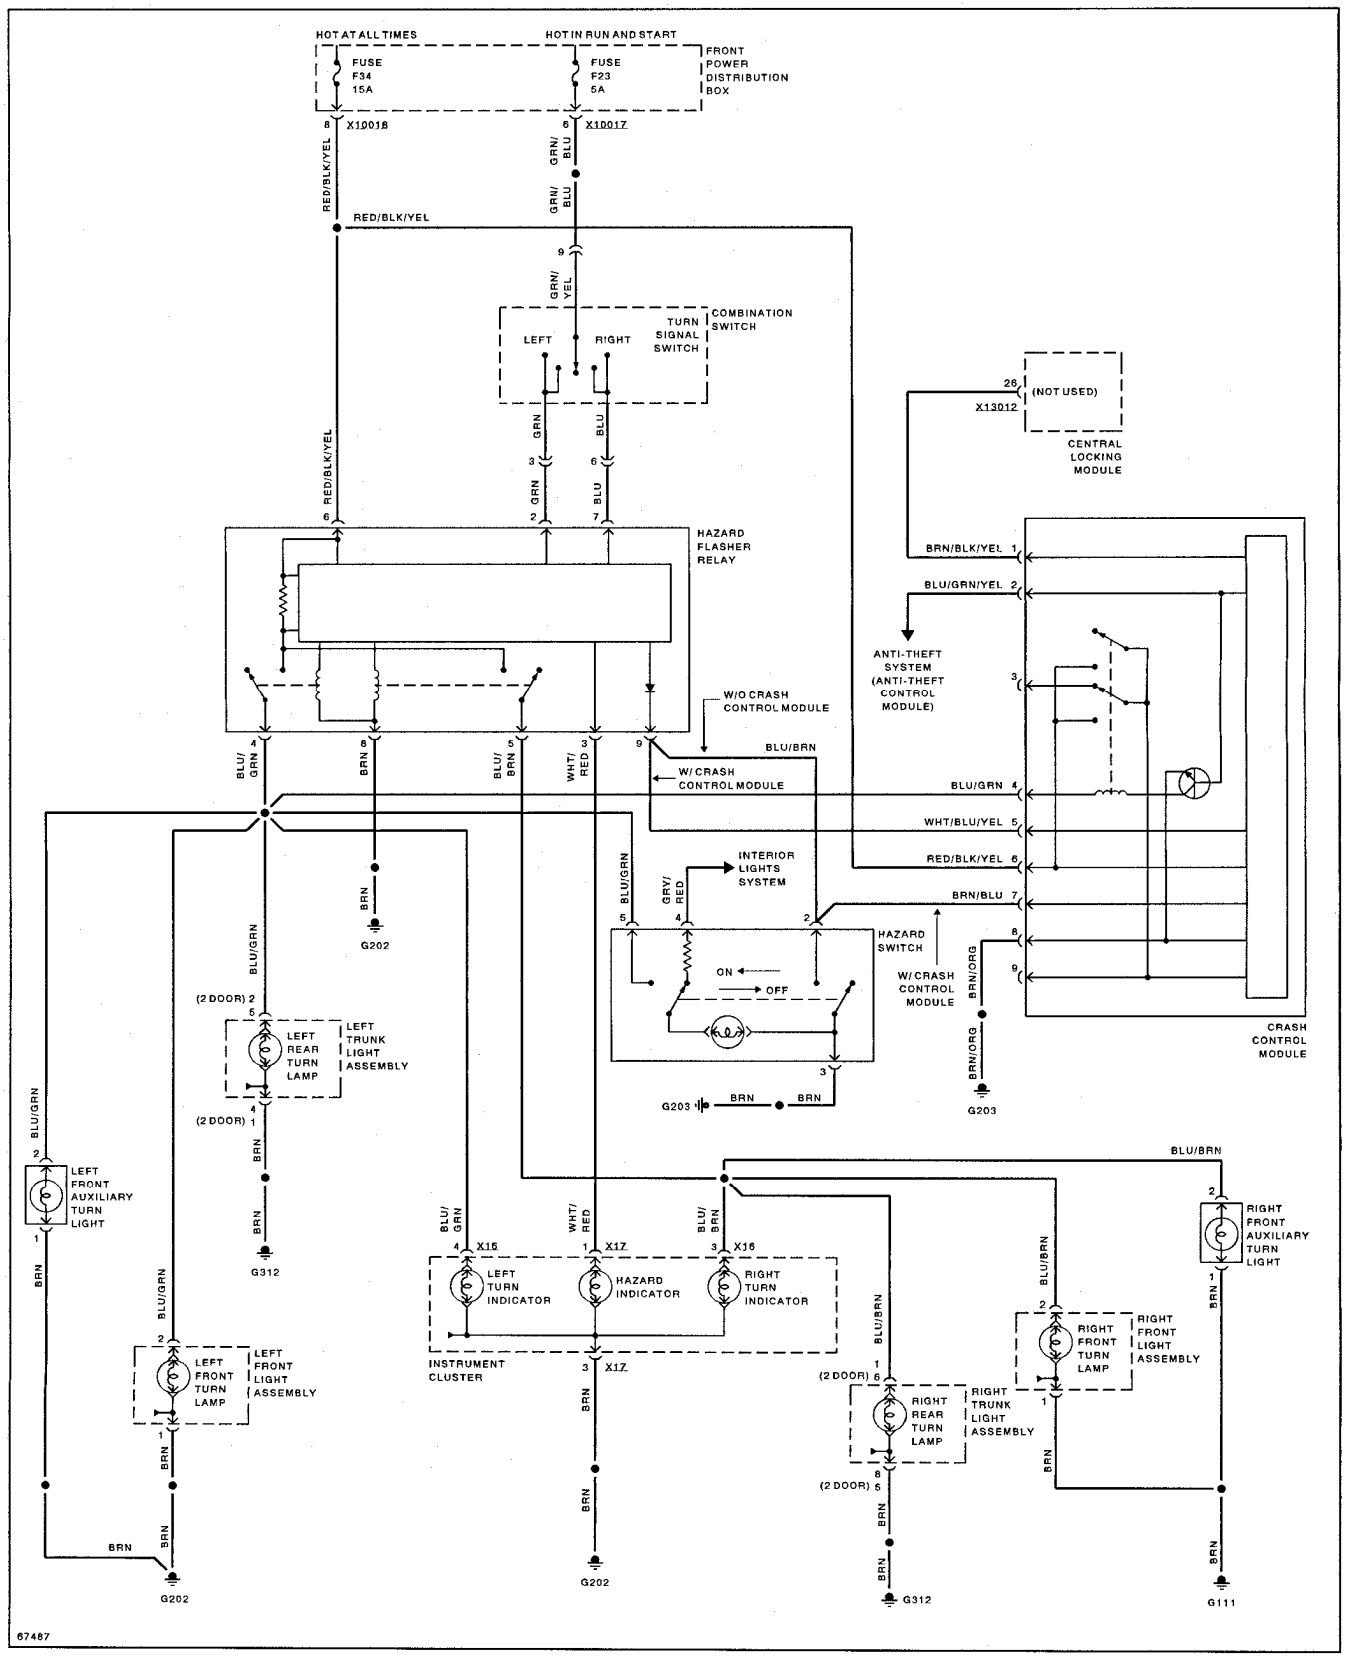


Headlights/Foglights

1997 318ti (USA)

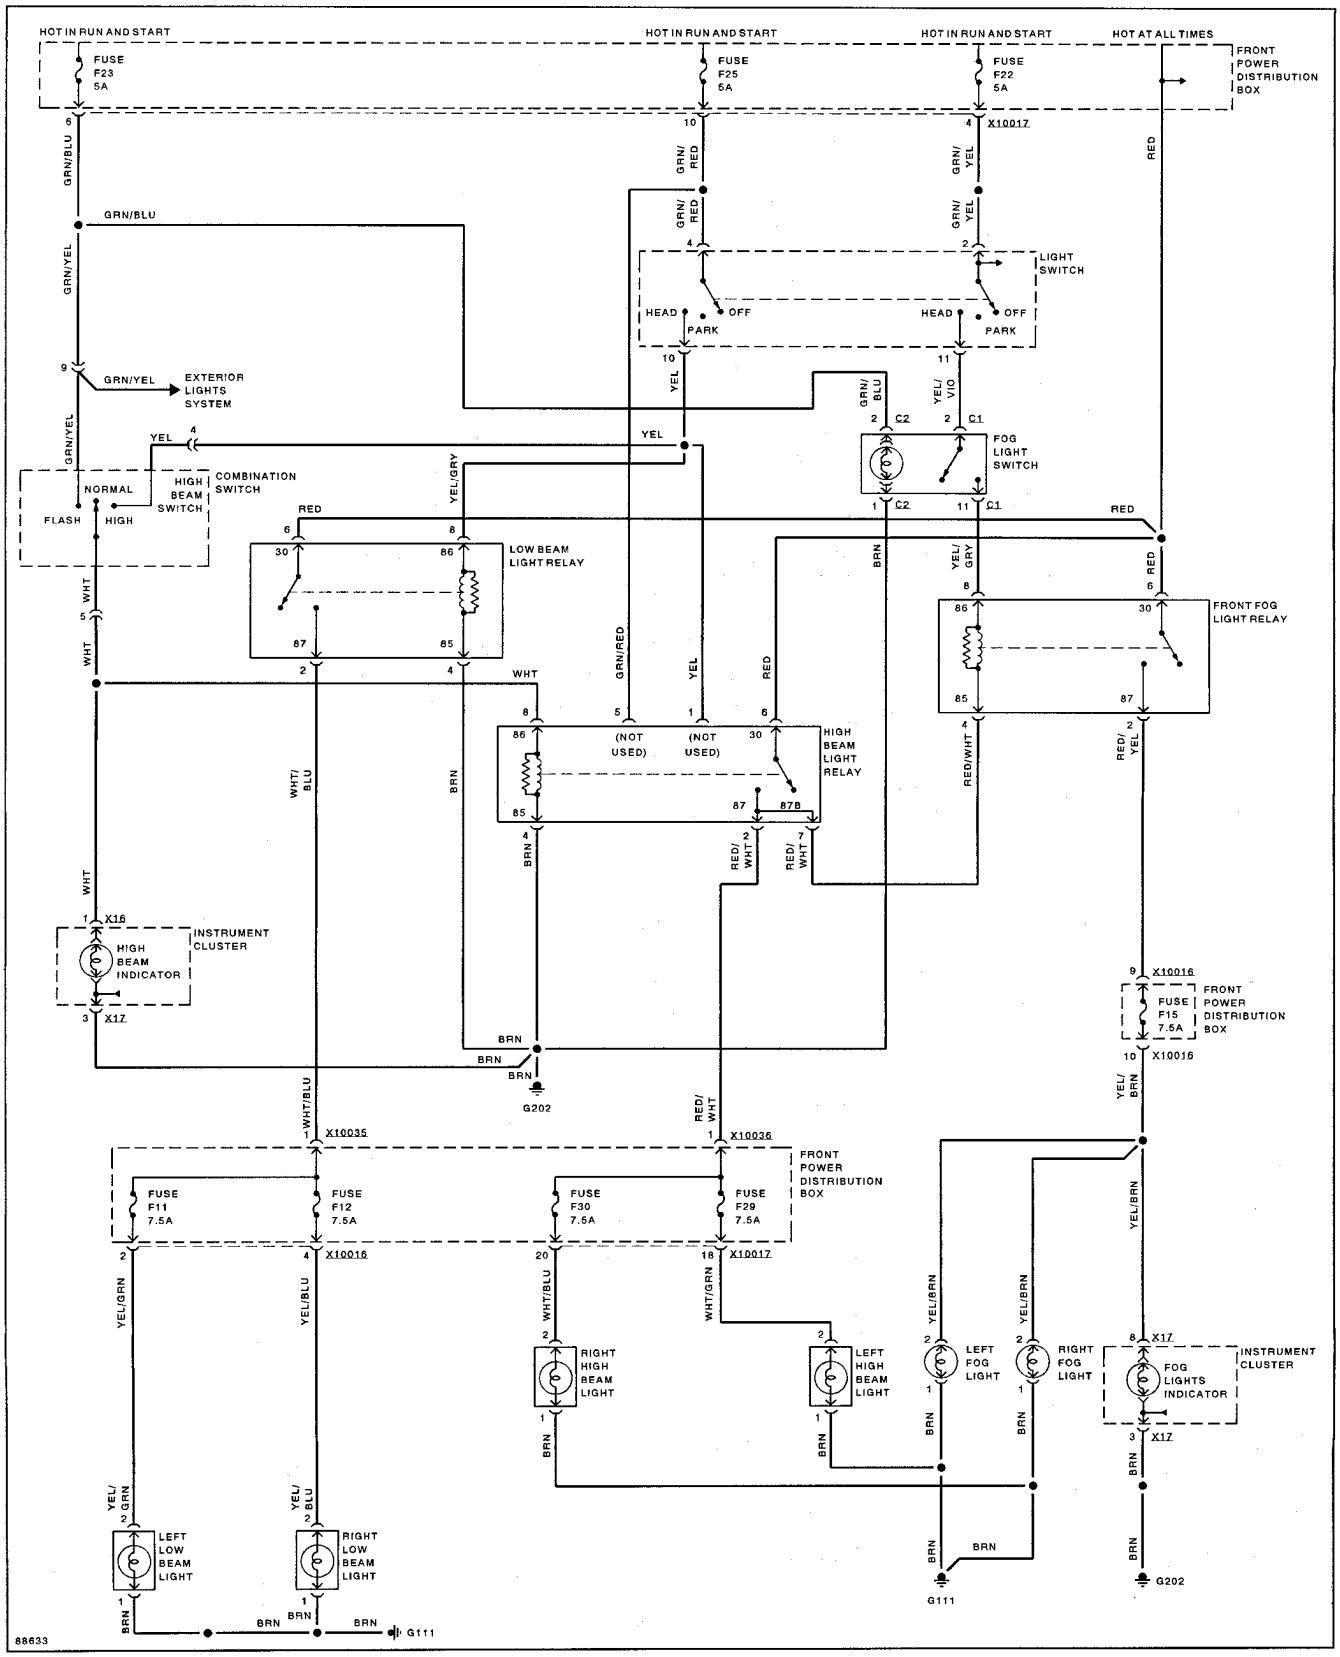


Headlights/Foglights

1997 318ti (Canada) (2 of 2)

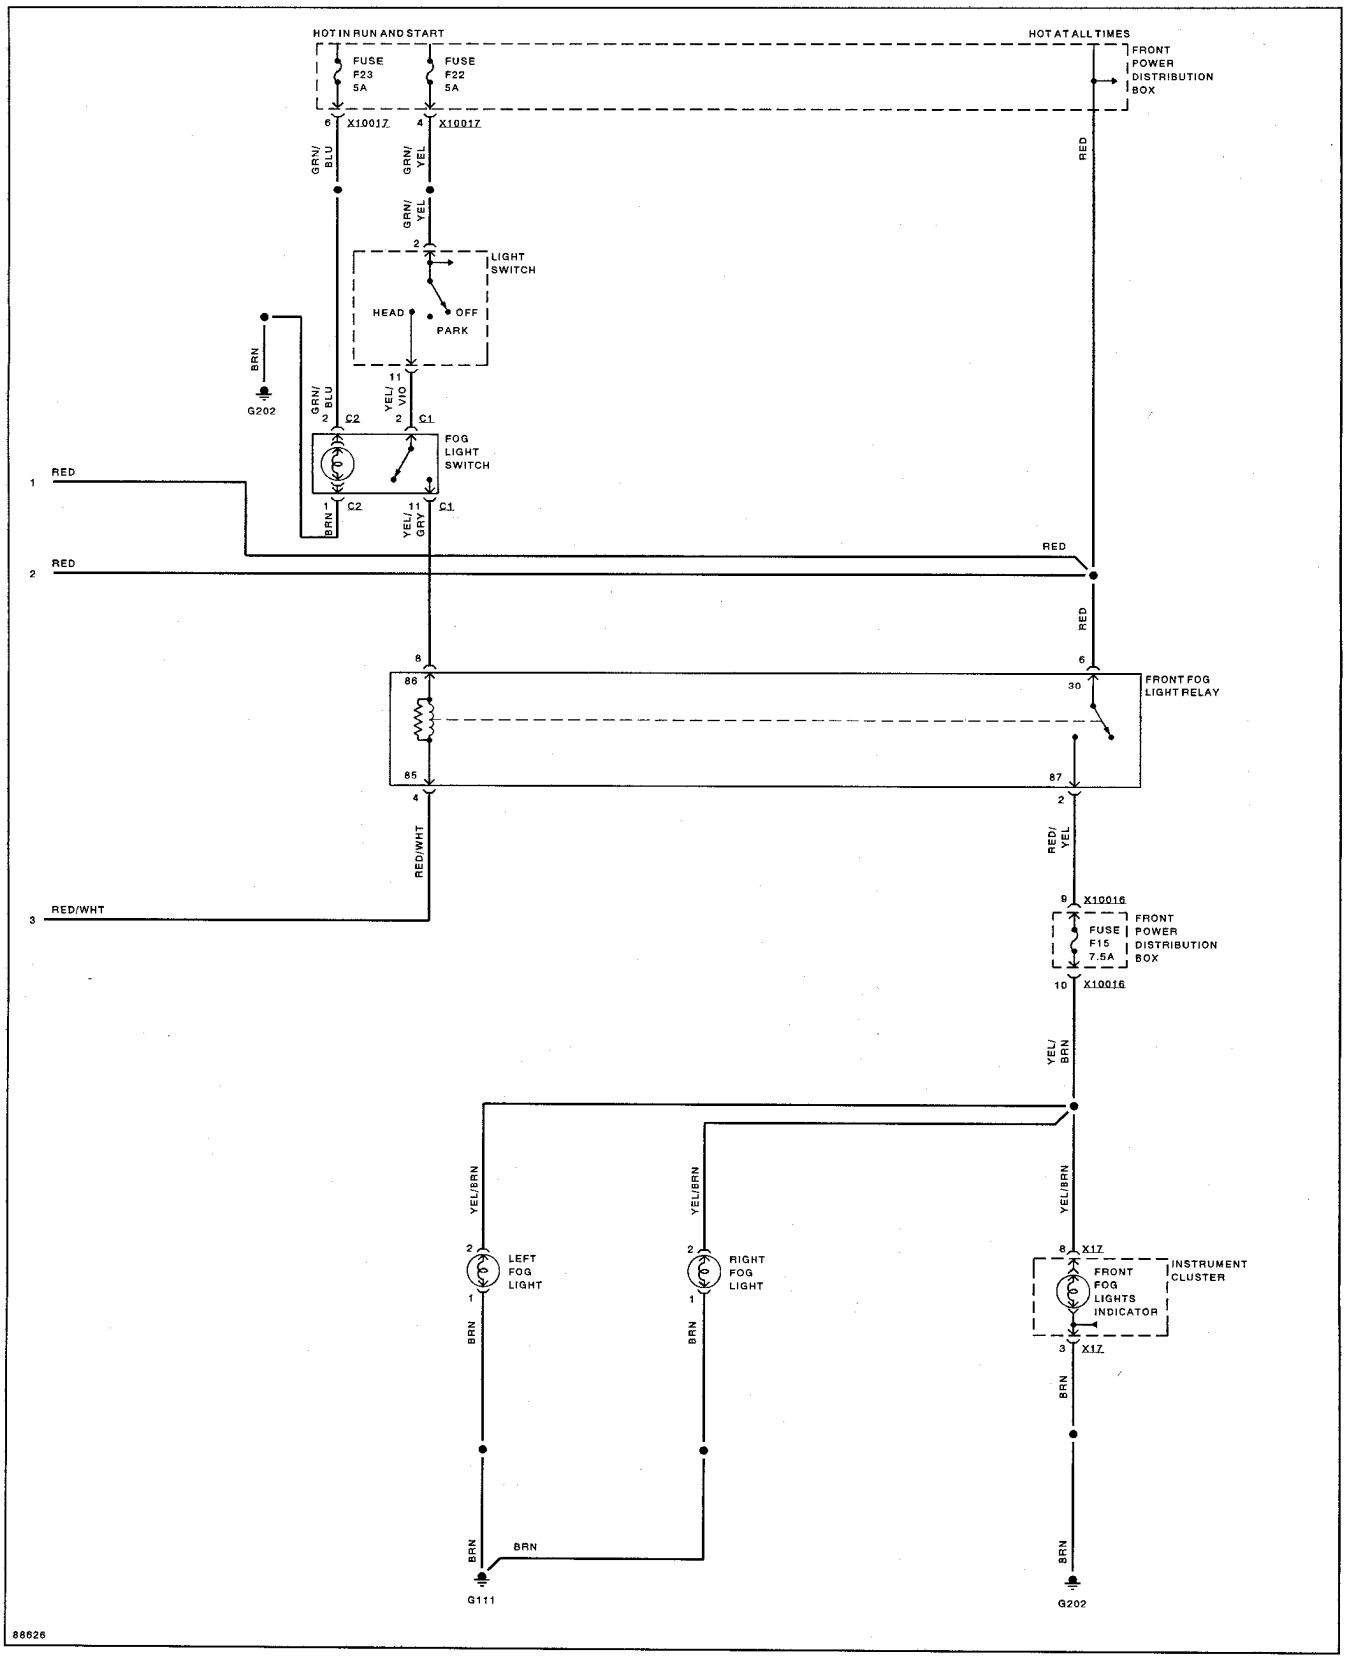


Headlights/Foglights

1997 318ti (Canada) (1 of 2)

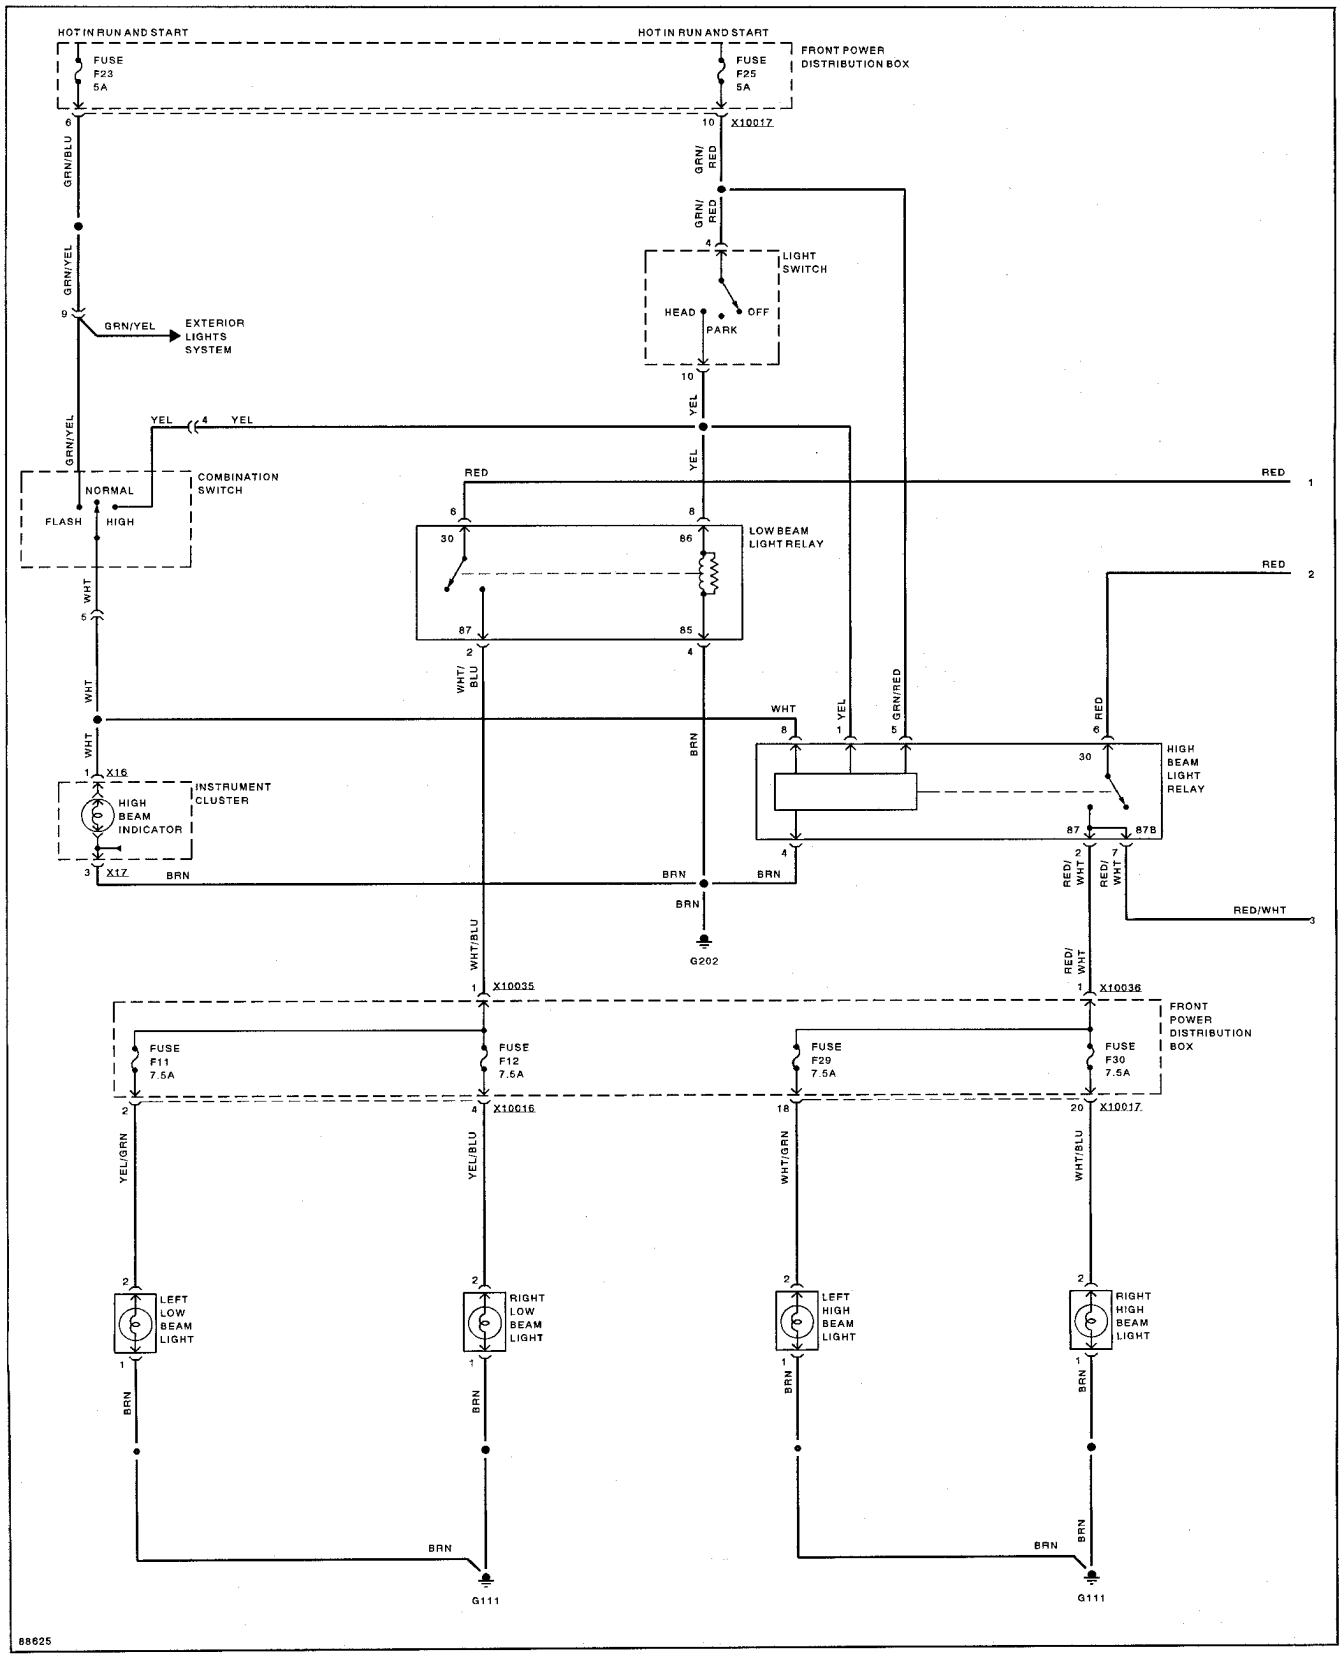


Headlights/Foglights

1995-96 318ti (USA)

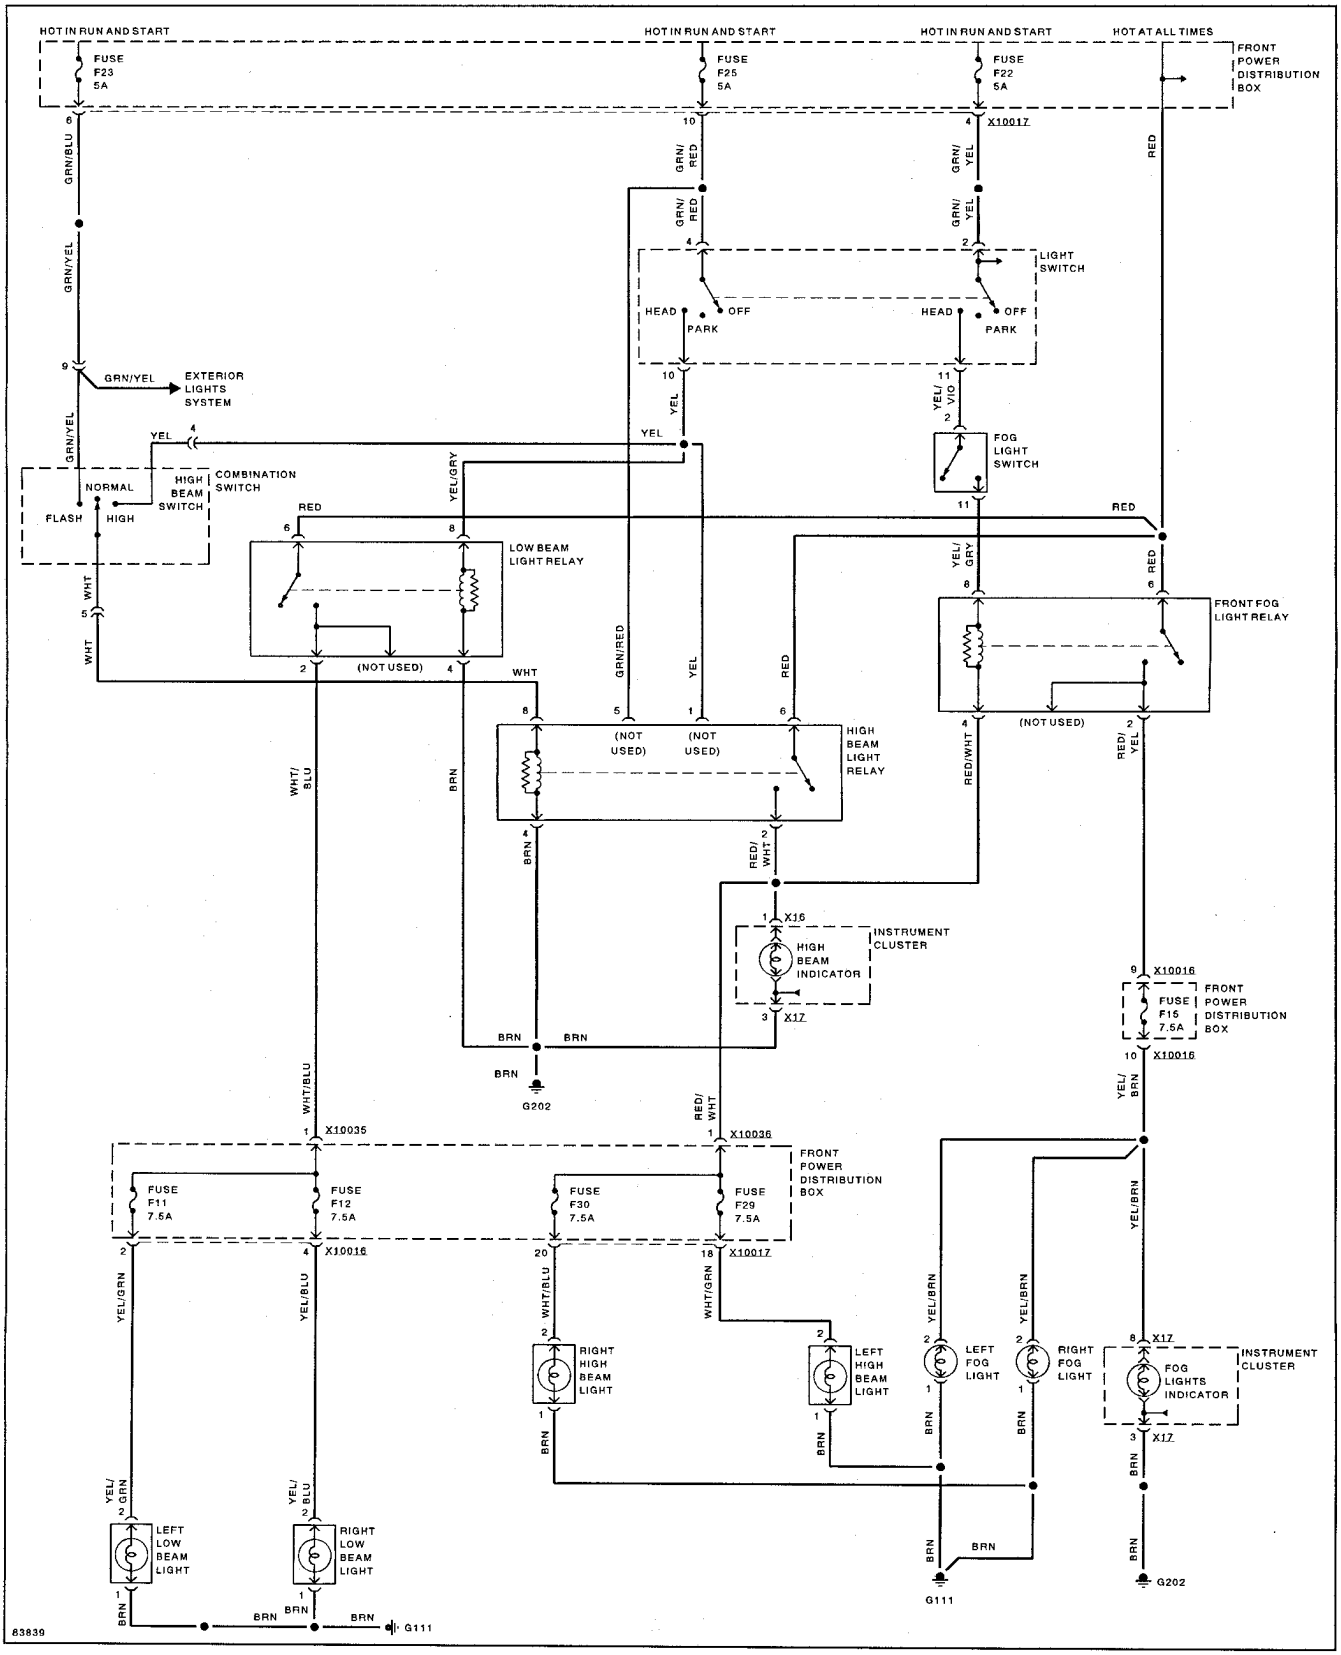

Headlights/Foglights


1995-96 318ti (Canada) (2 of 2)

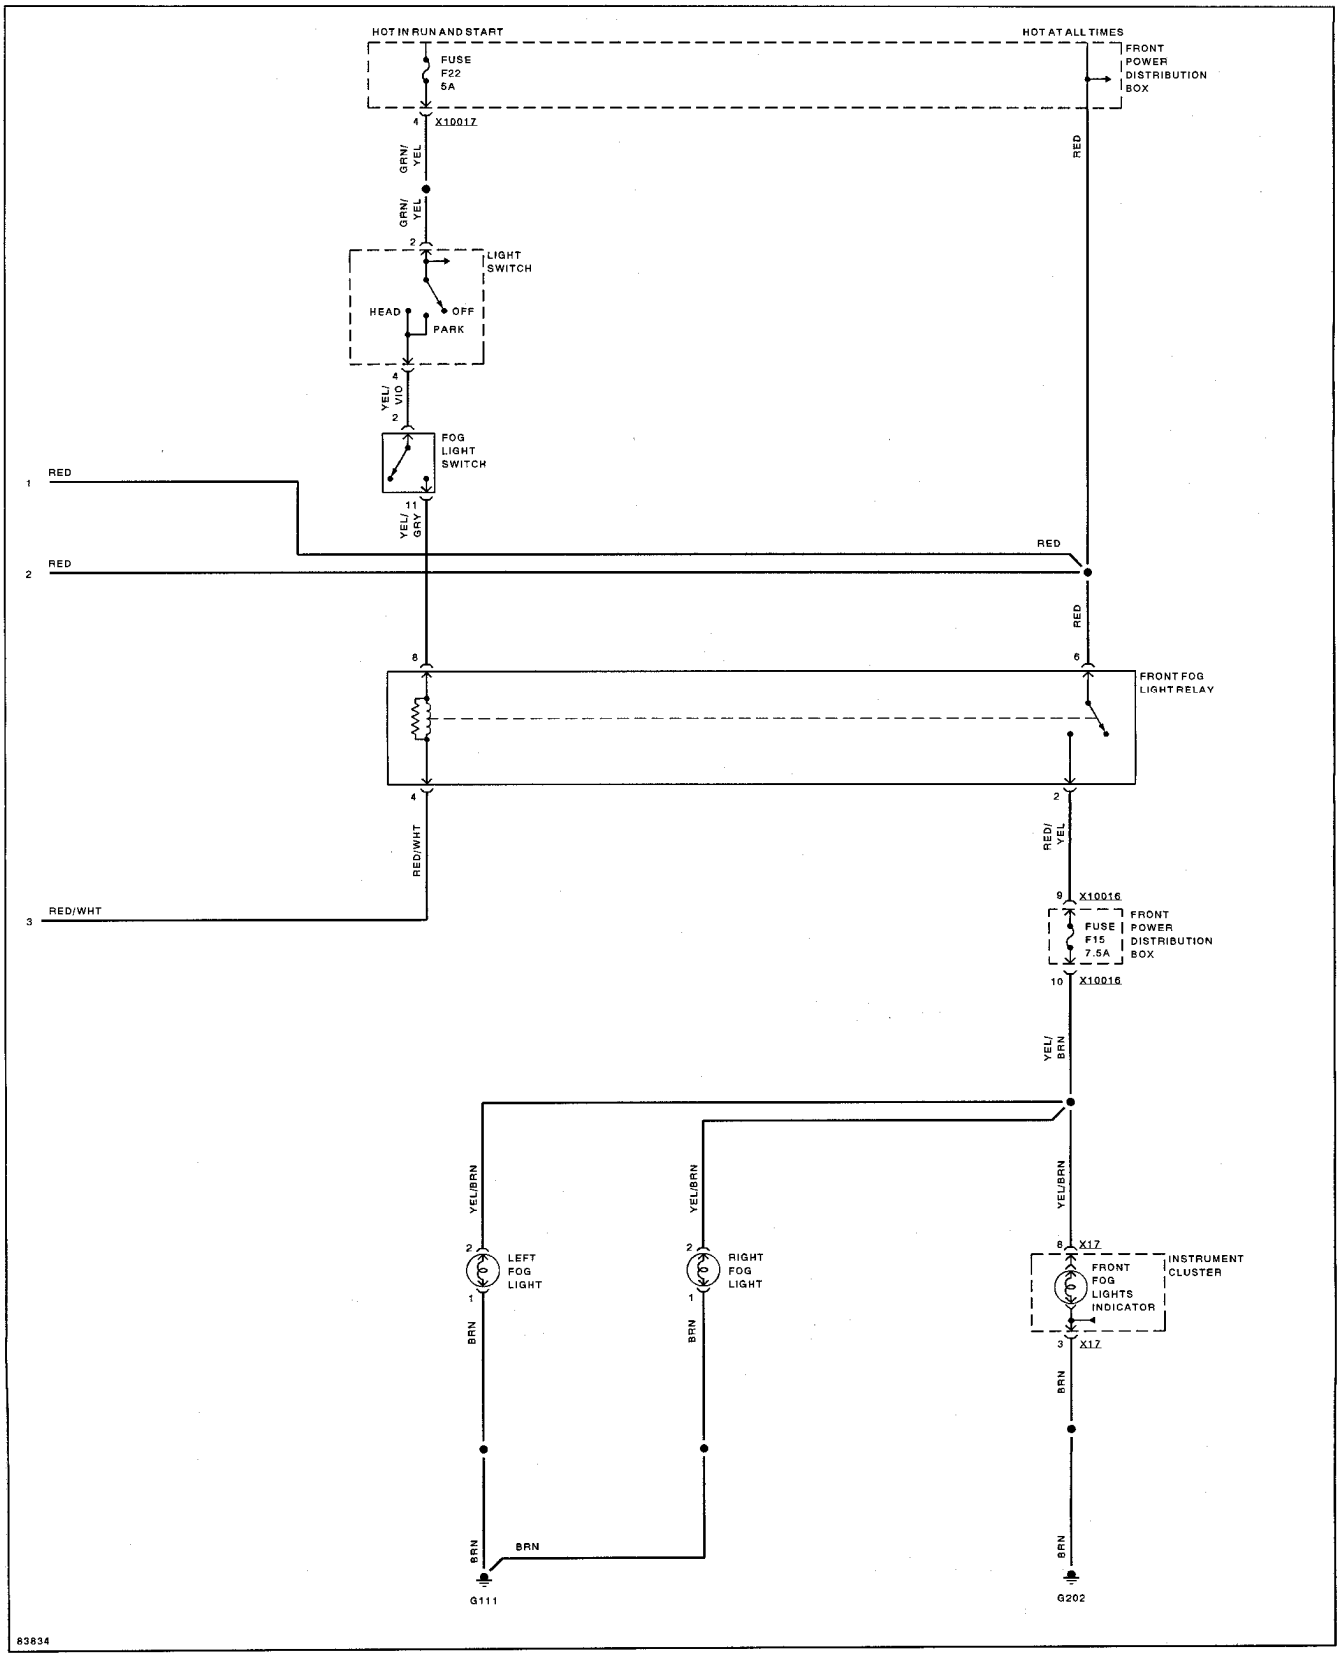

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Headlights/Foglights

1995-96 318ti (Canada) (1 of 2)

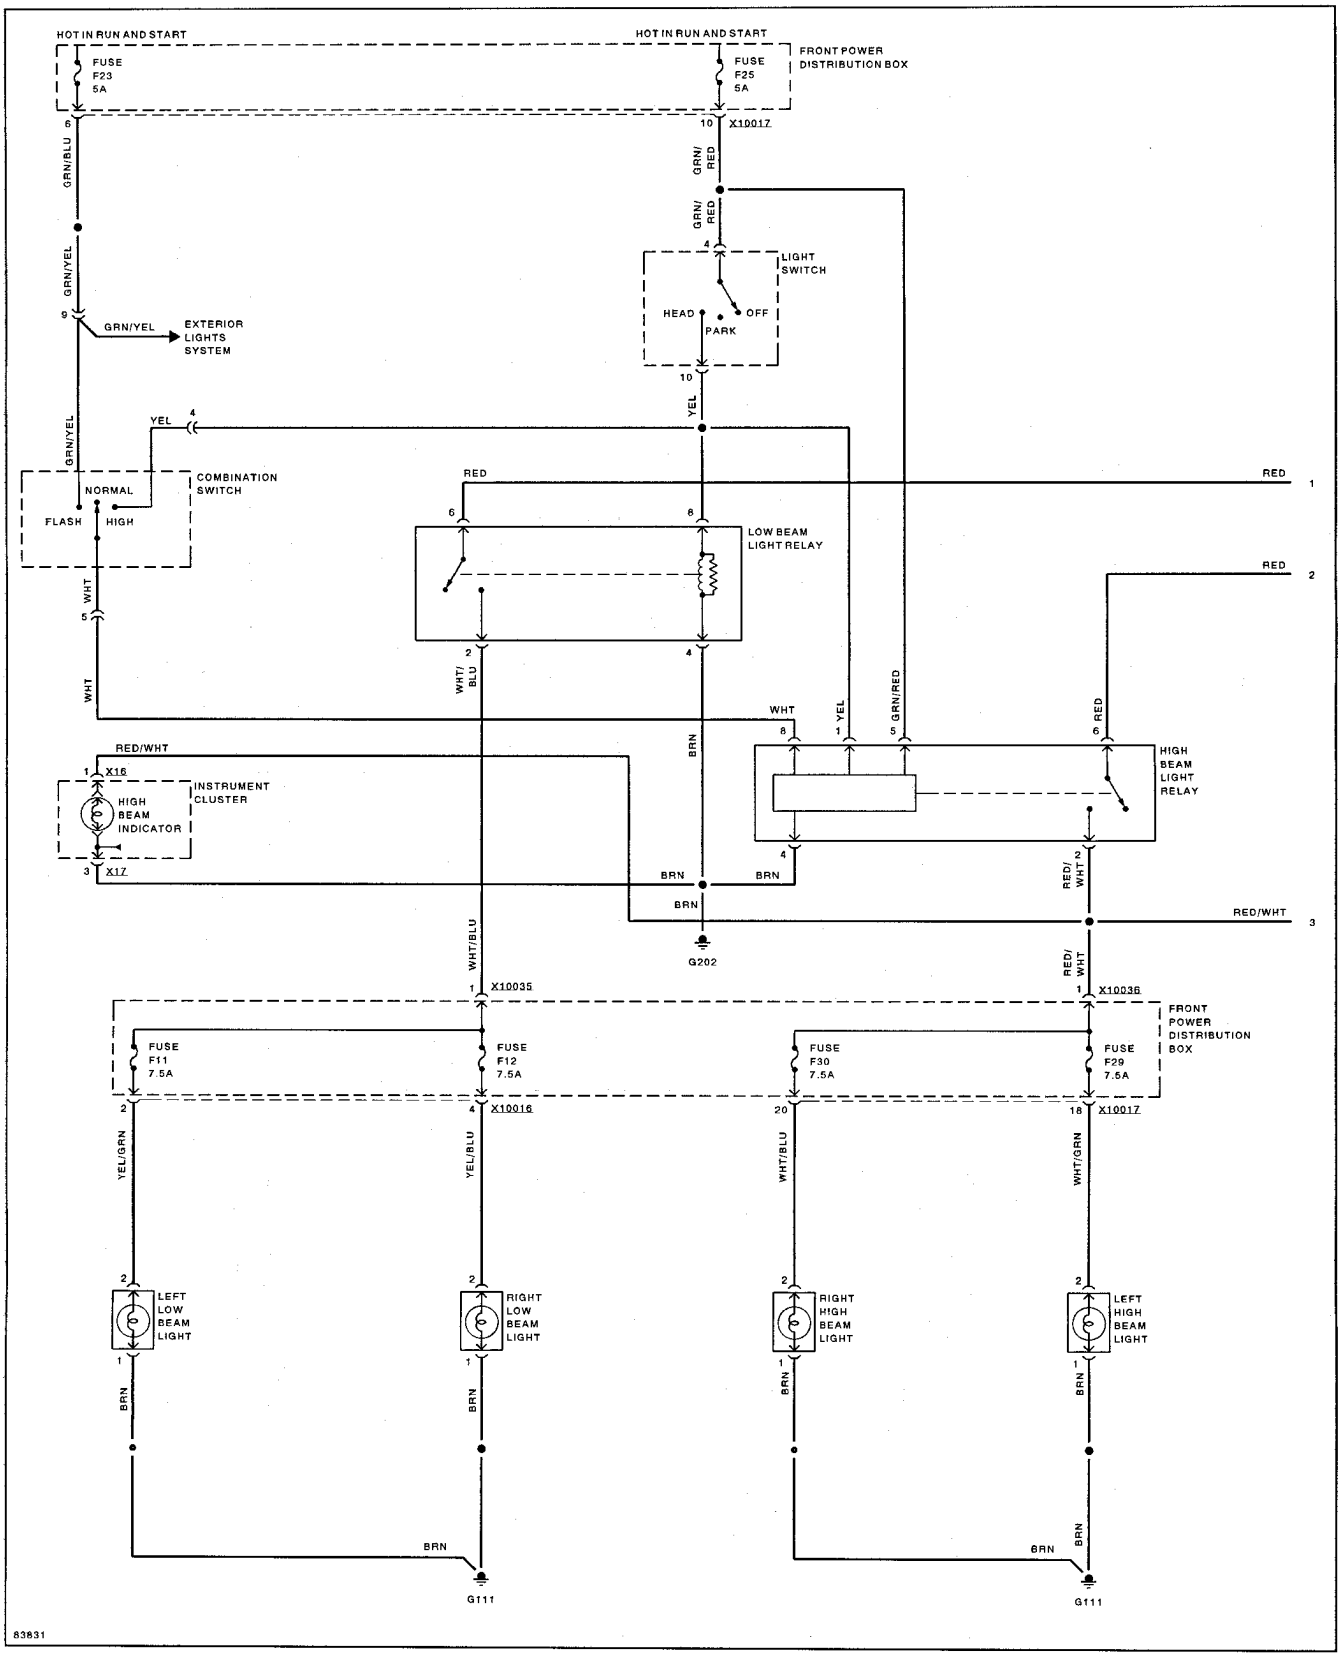


Headlights/Foglights

1998 Except 318ti

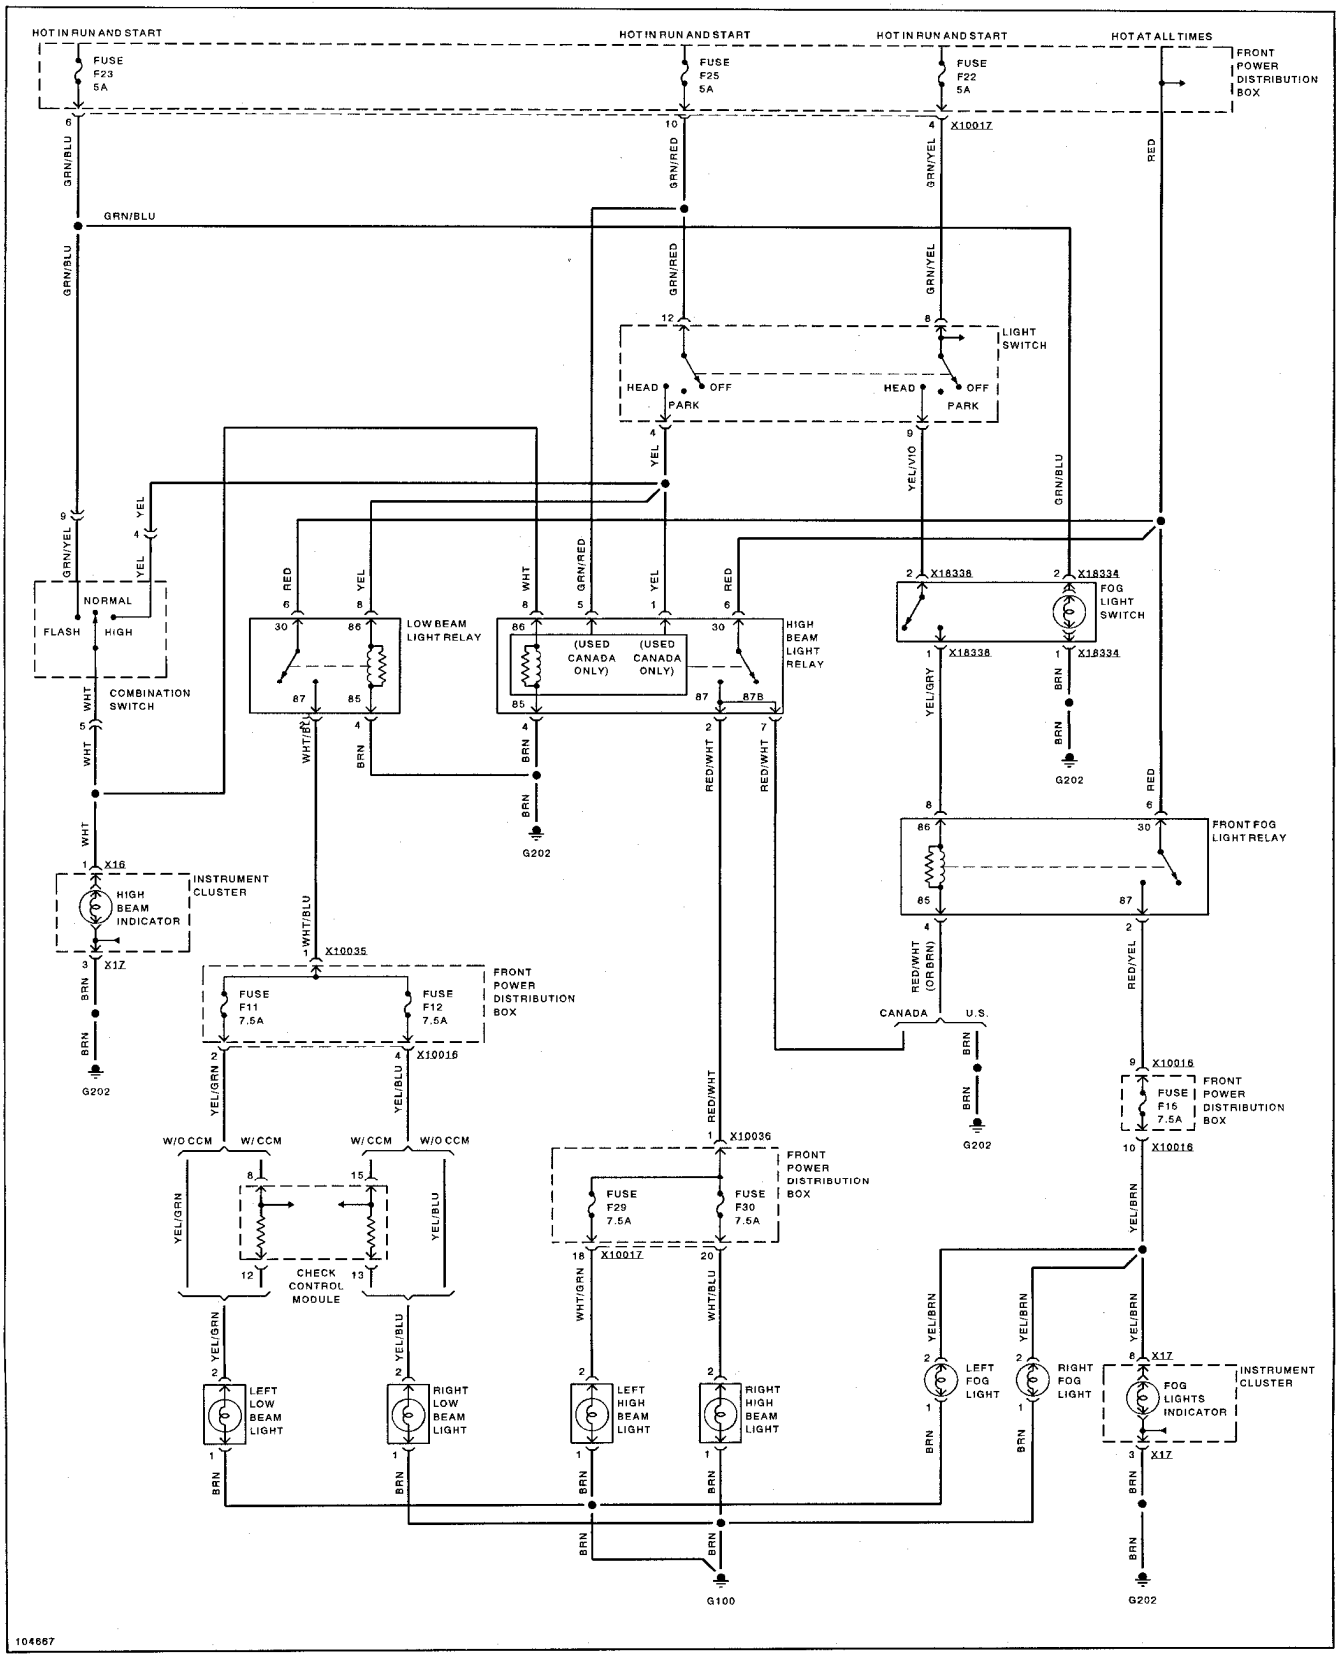


Headlights/Foglights

1996-97 Except 318ti (2 of 2)

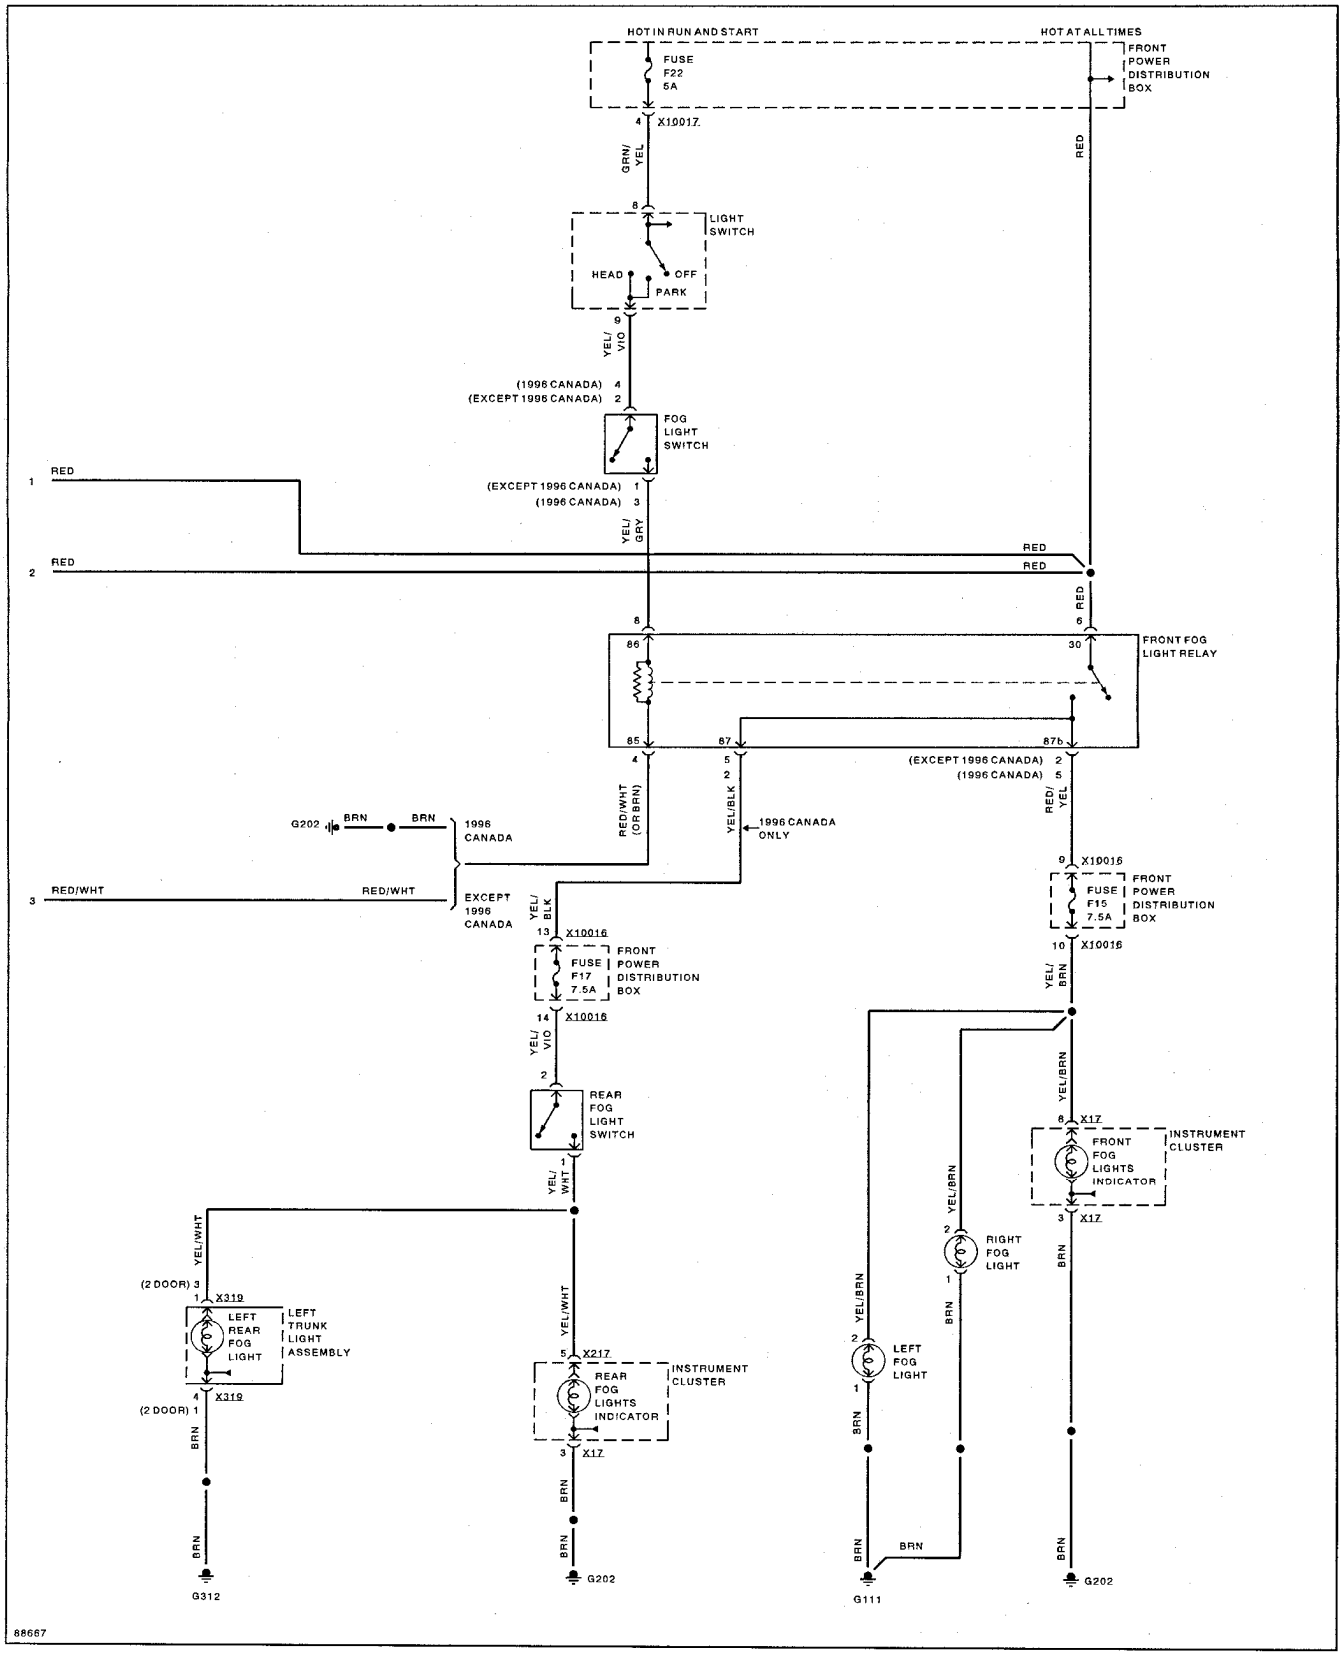


Headlights/Foglights

1996-97 Except 318ti (1 of 2)

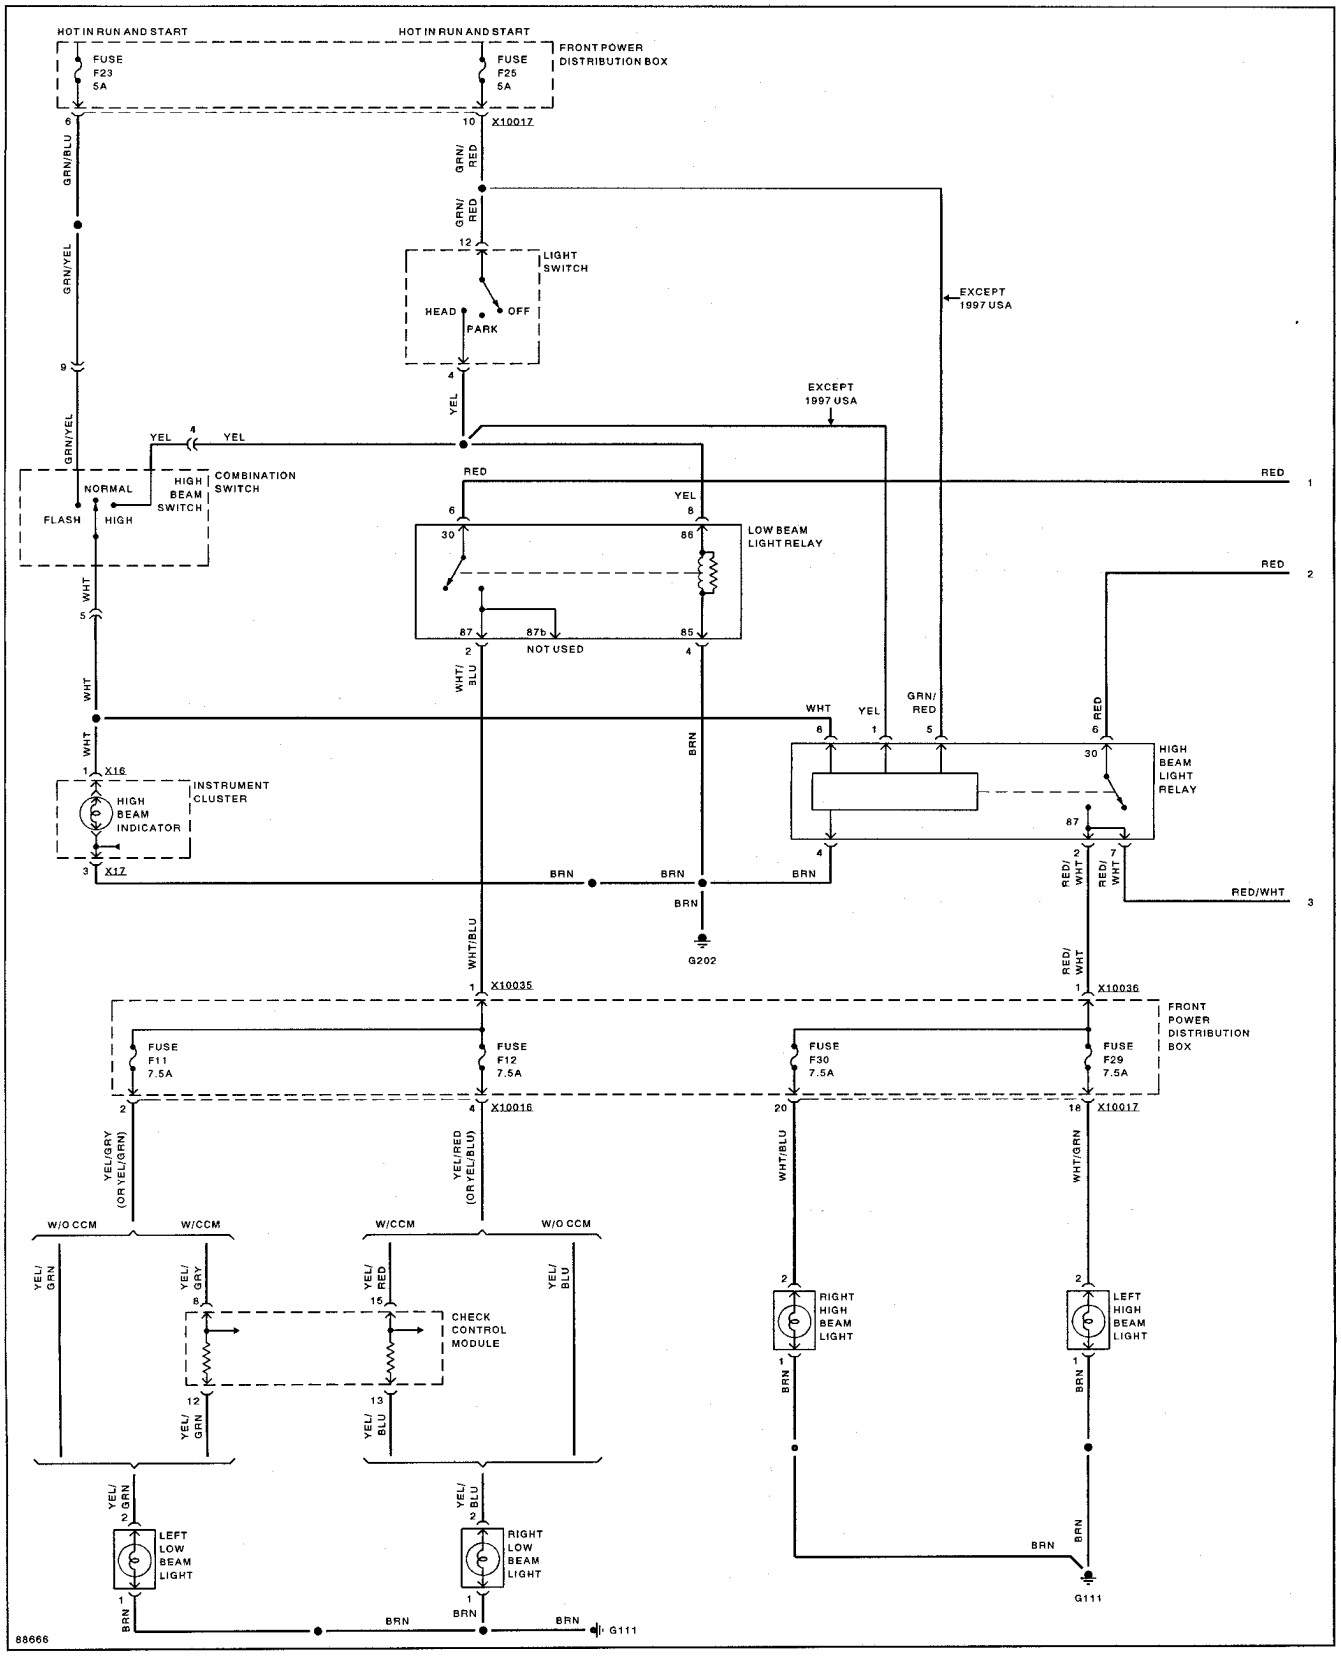


Headlights/Foglights

1995 Except 318ti (2 of 2)

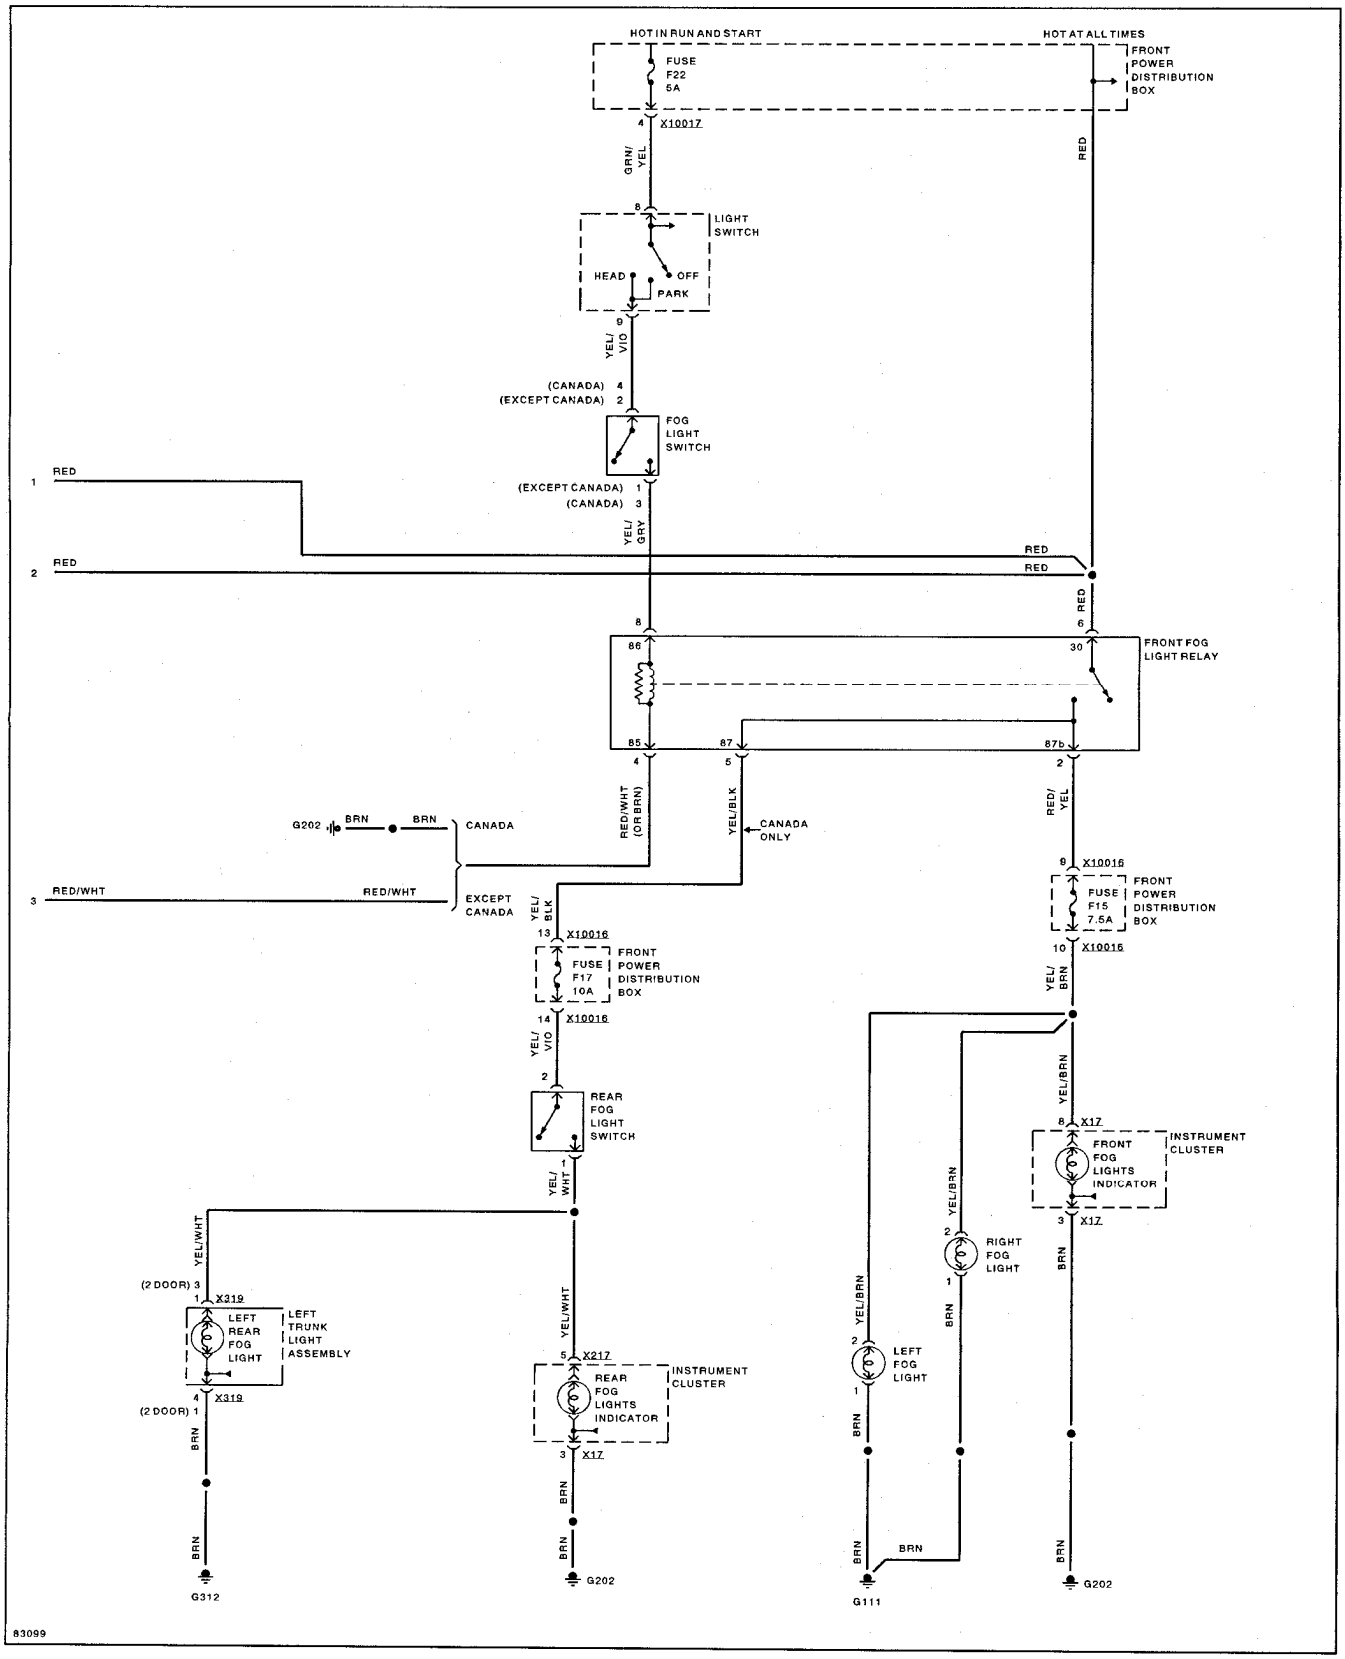


Headlights/Foglights

1995 Except 318ti (1 of 2)

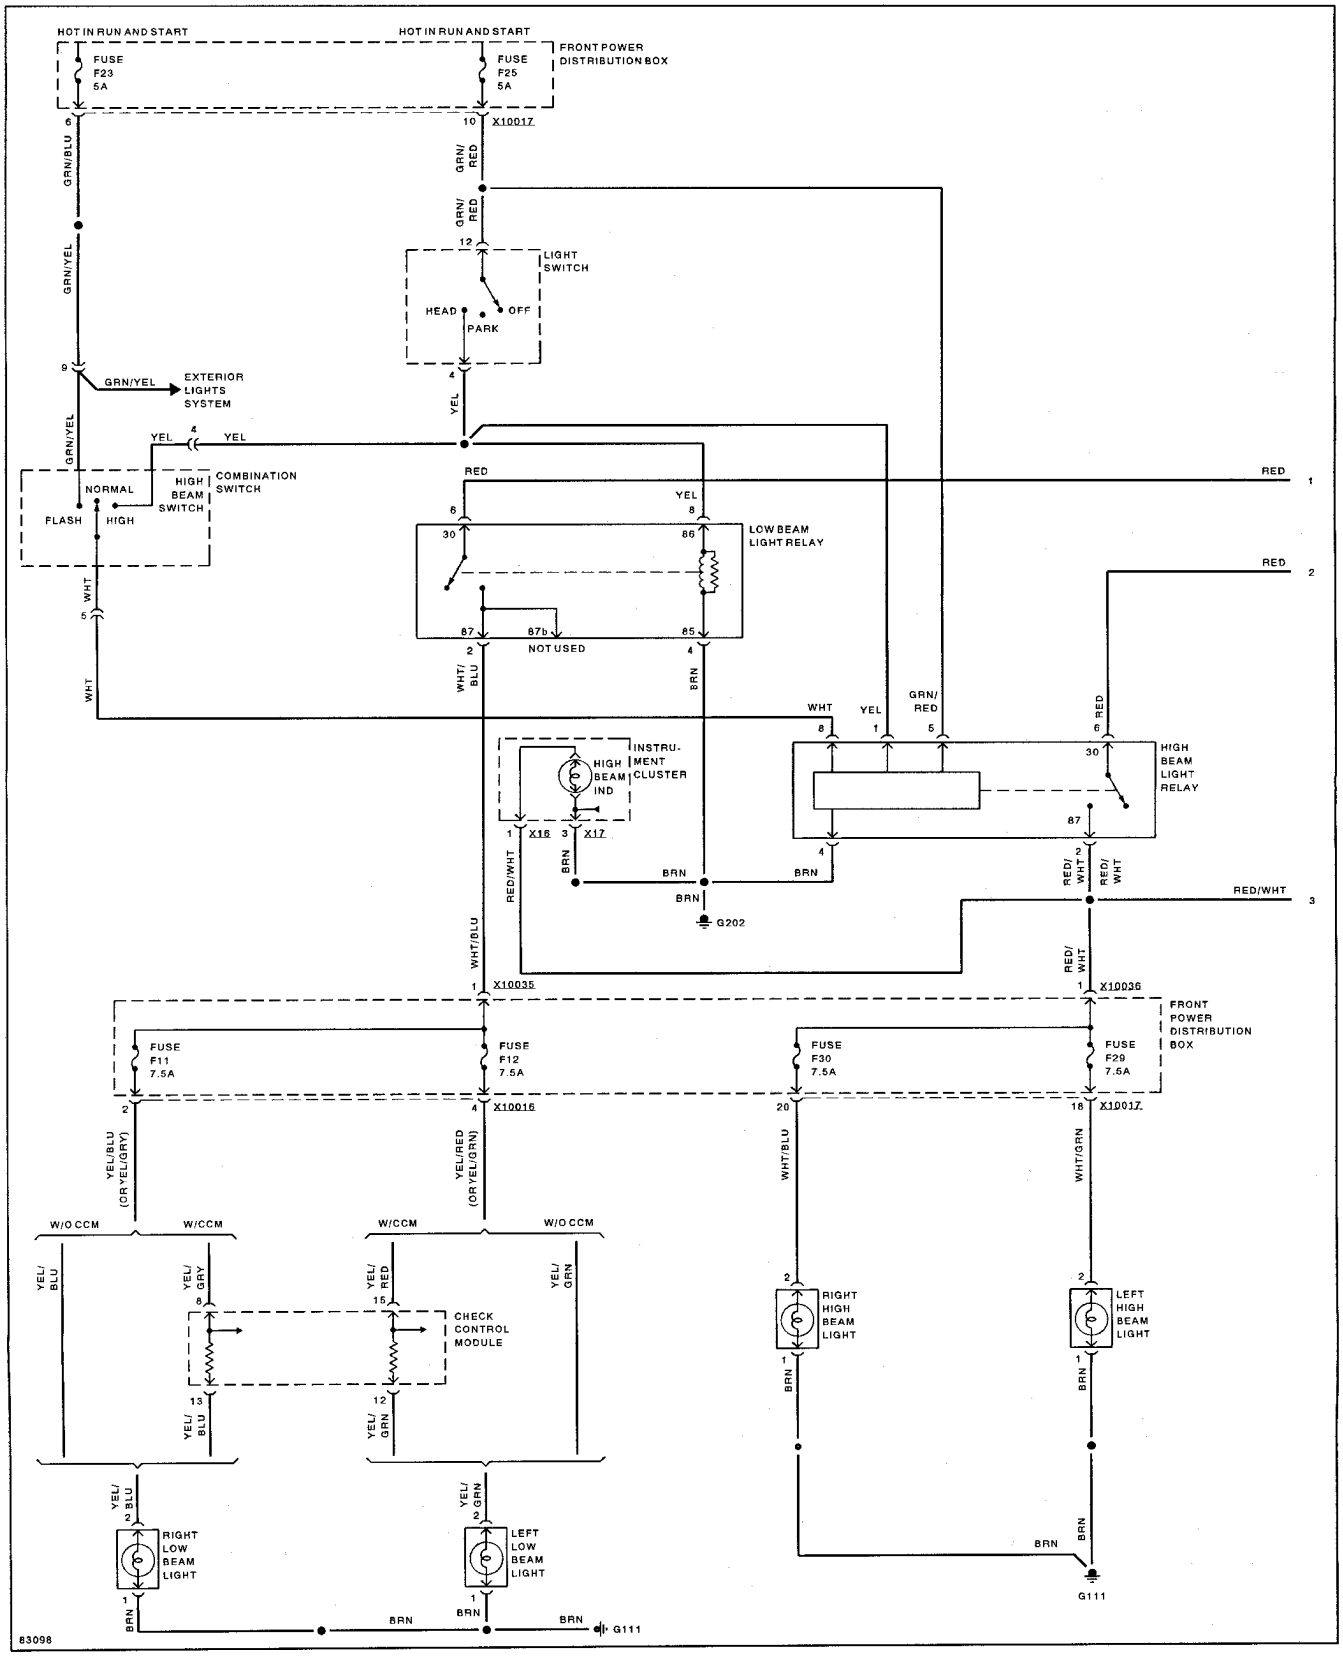


Headlights/Foglights
1992-94 (USA)

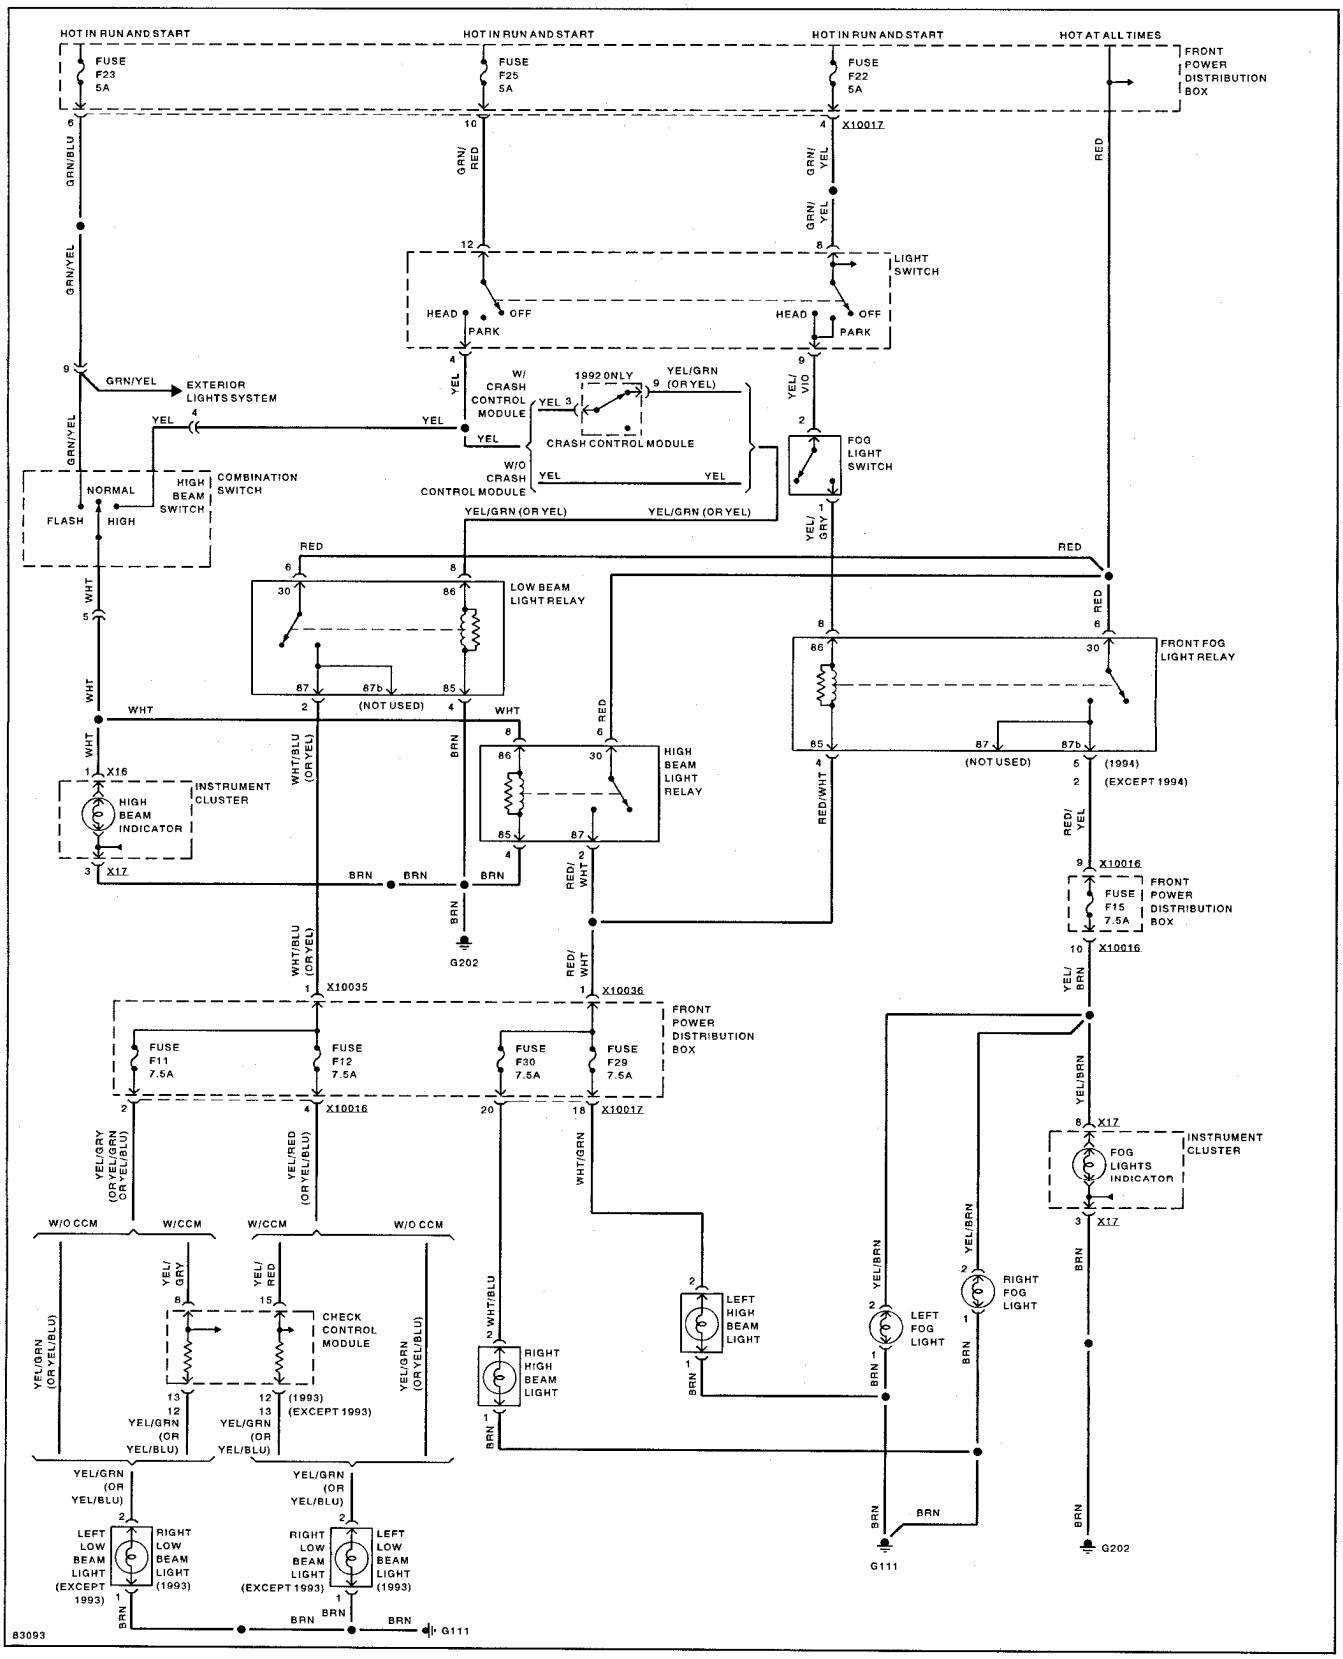

Headlights/Foglights


1992-94 (Canada) (2 of 2)

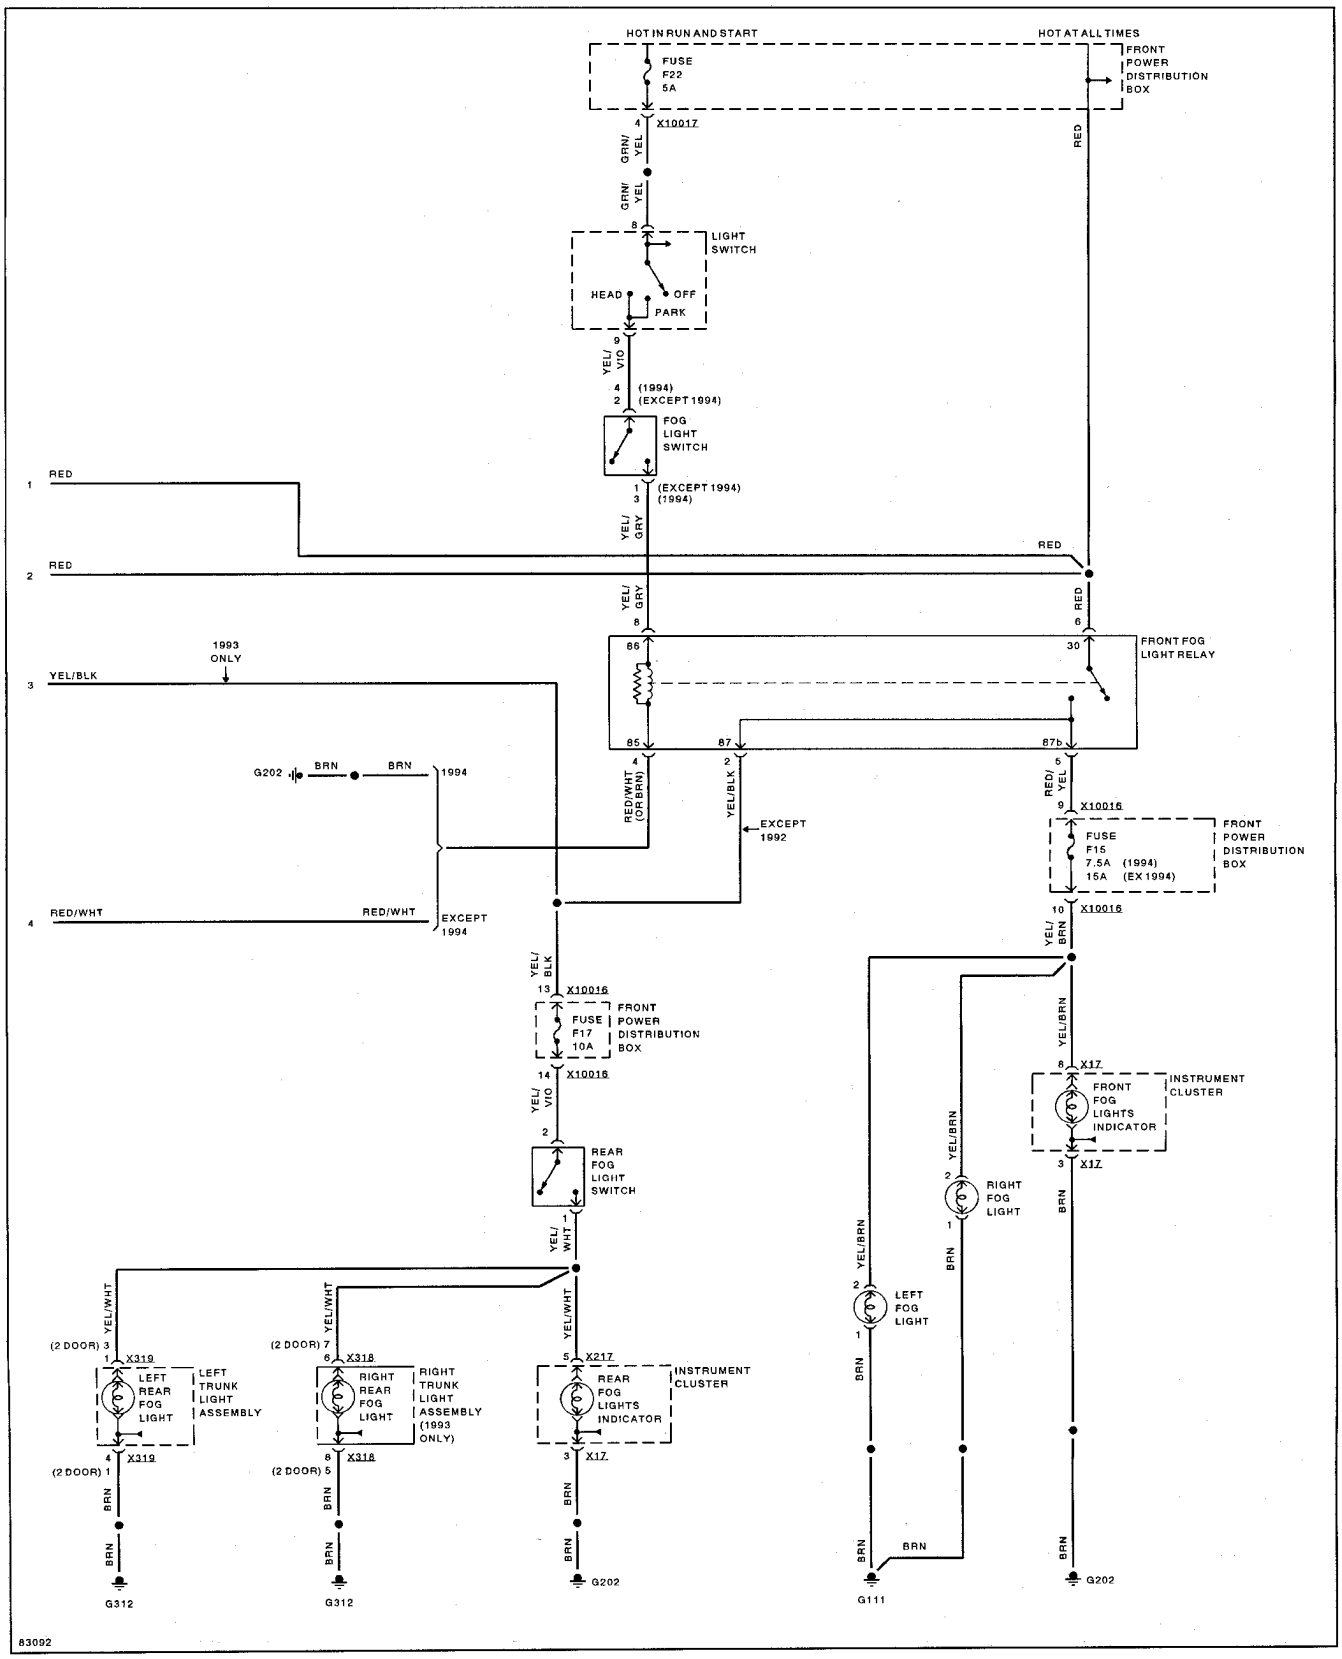


Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Headlights/Foglights

1992-94 (Canada) (1 of 2)

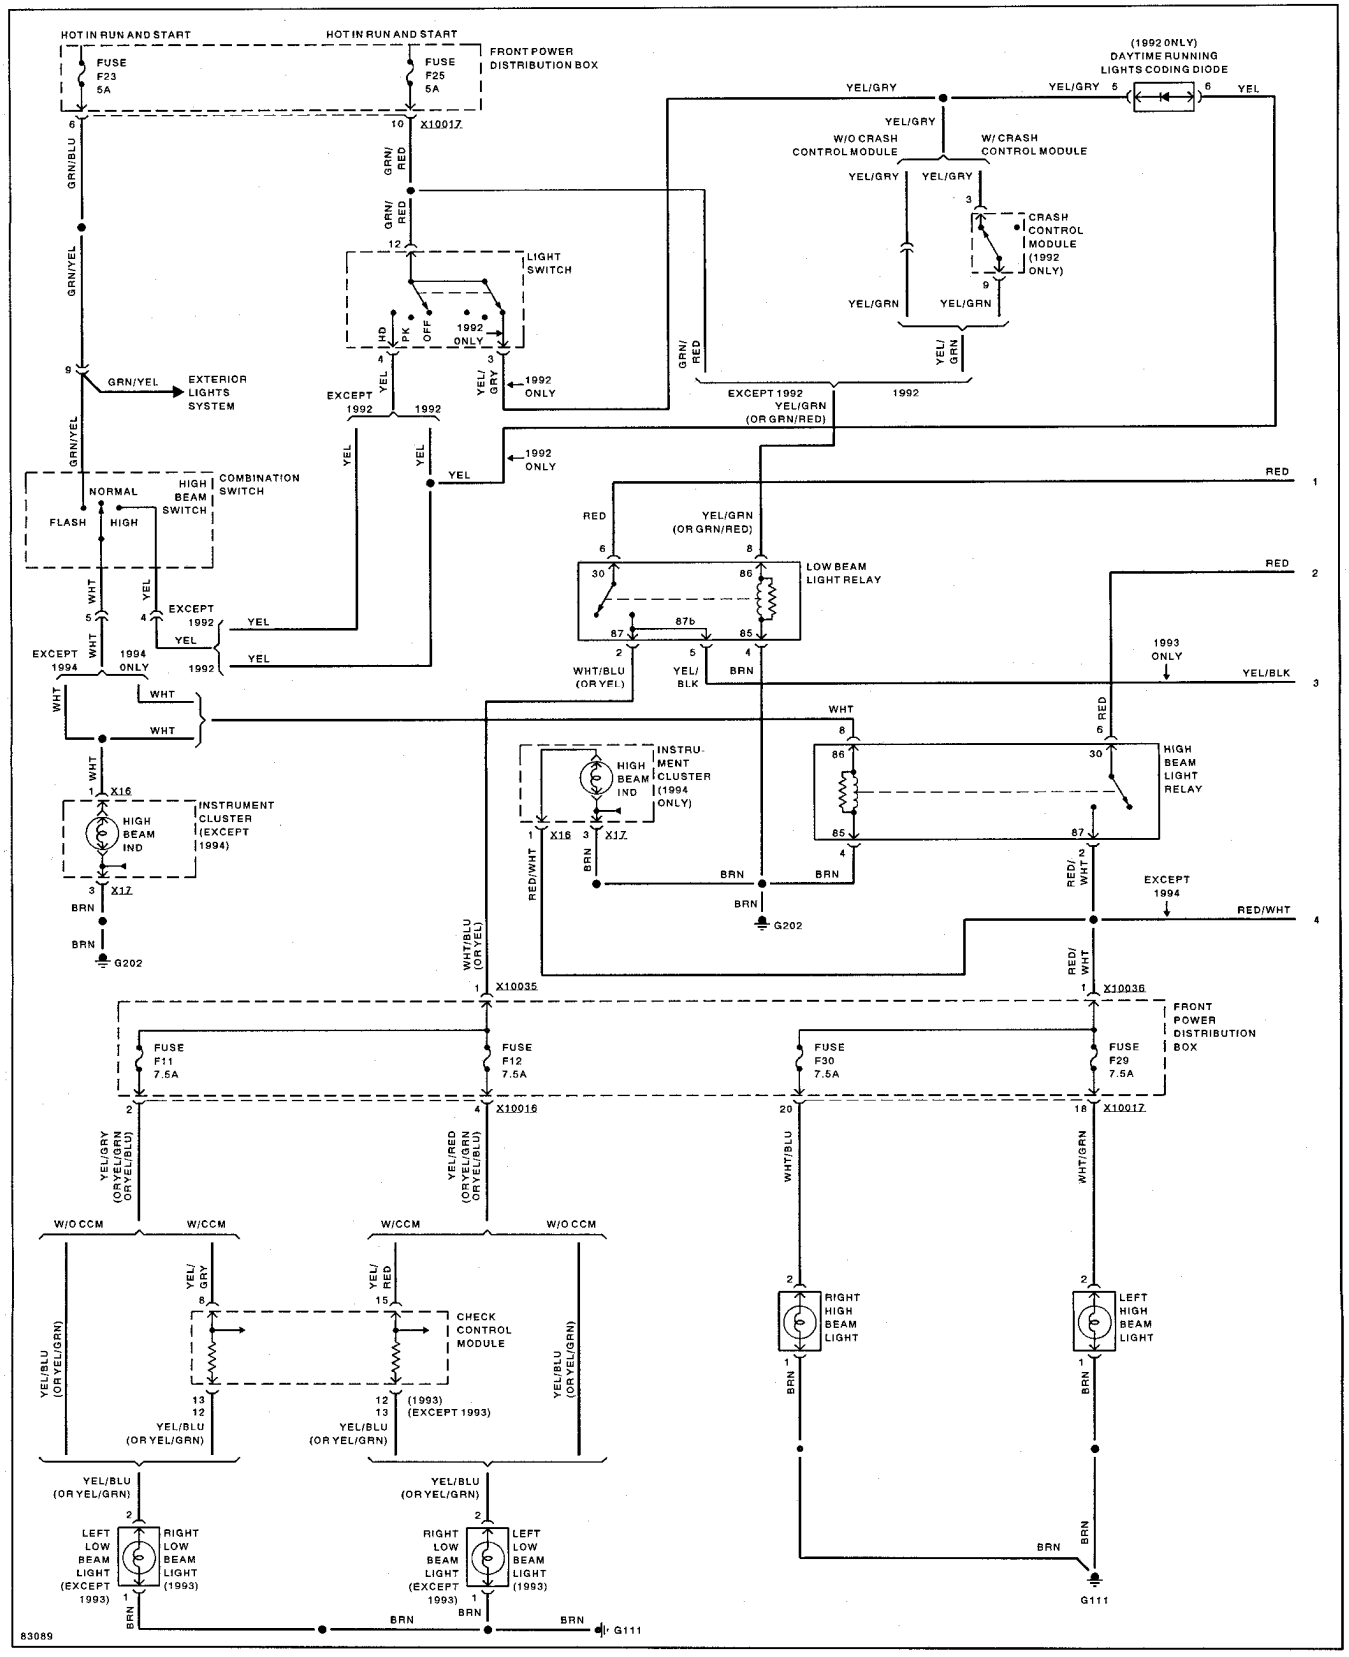


Warning System: Chimes

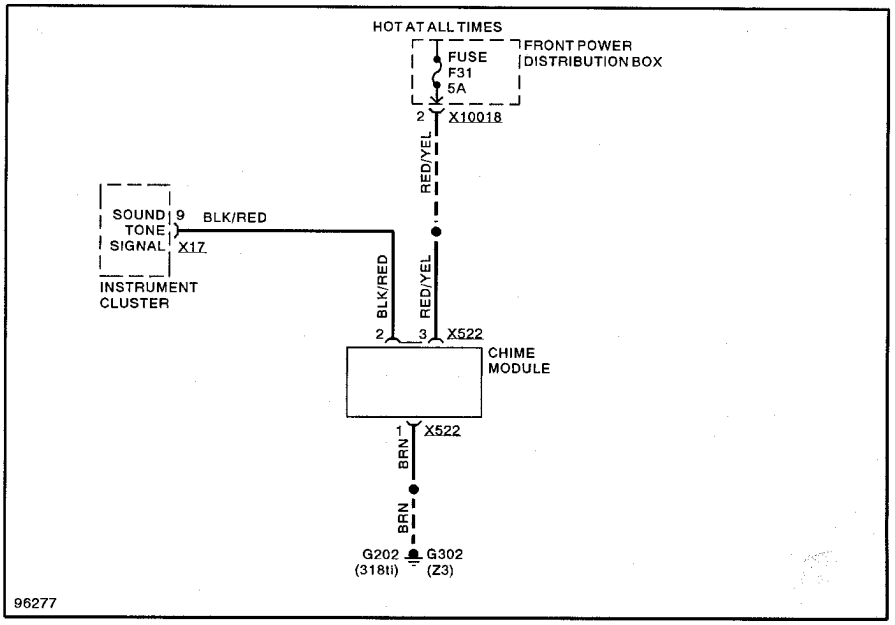


1997–98
318ti

Warning System: Chimes

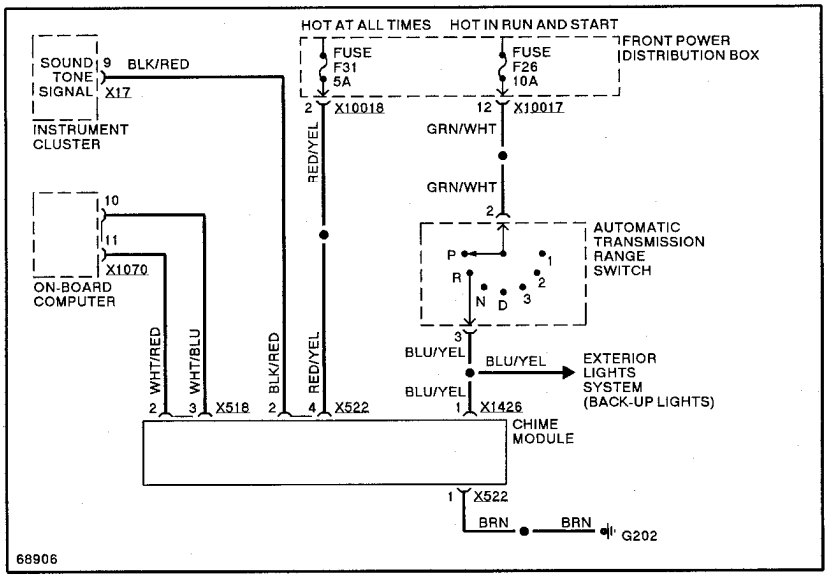


1992-97

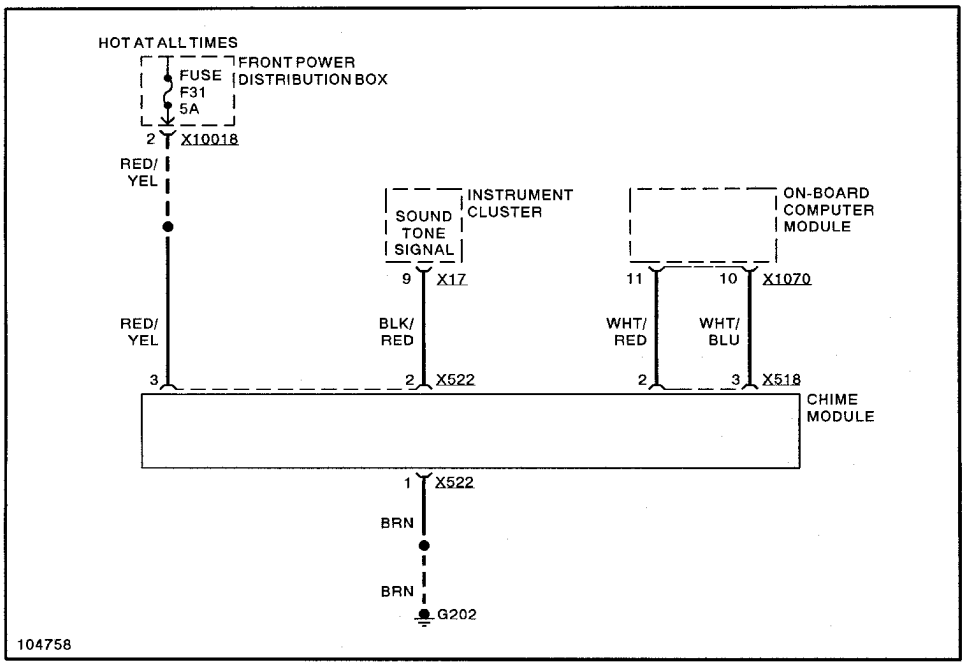

1998


Body Computer Module

1996-98 Except 318ti

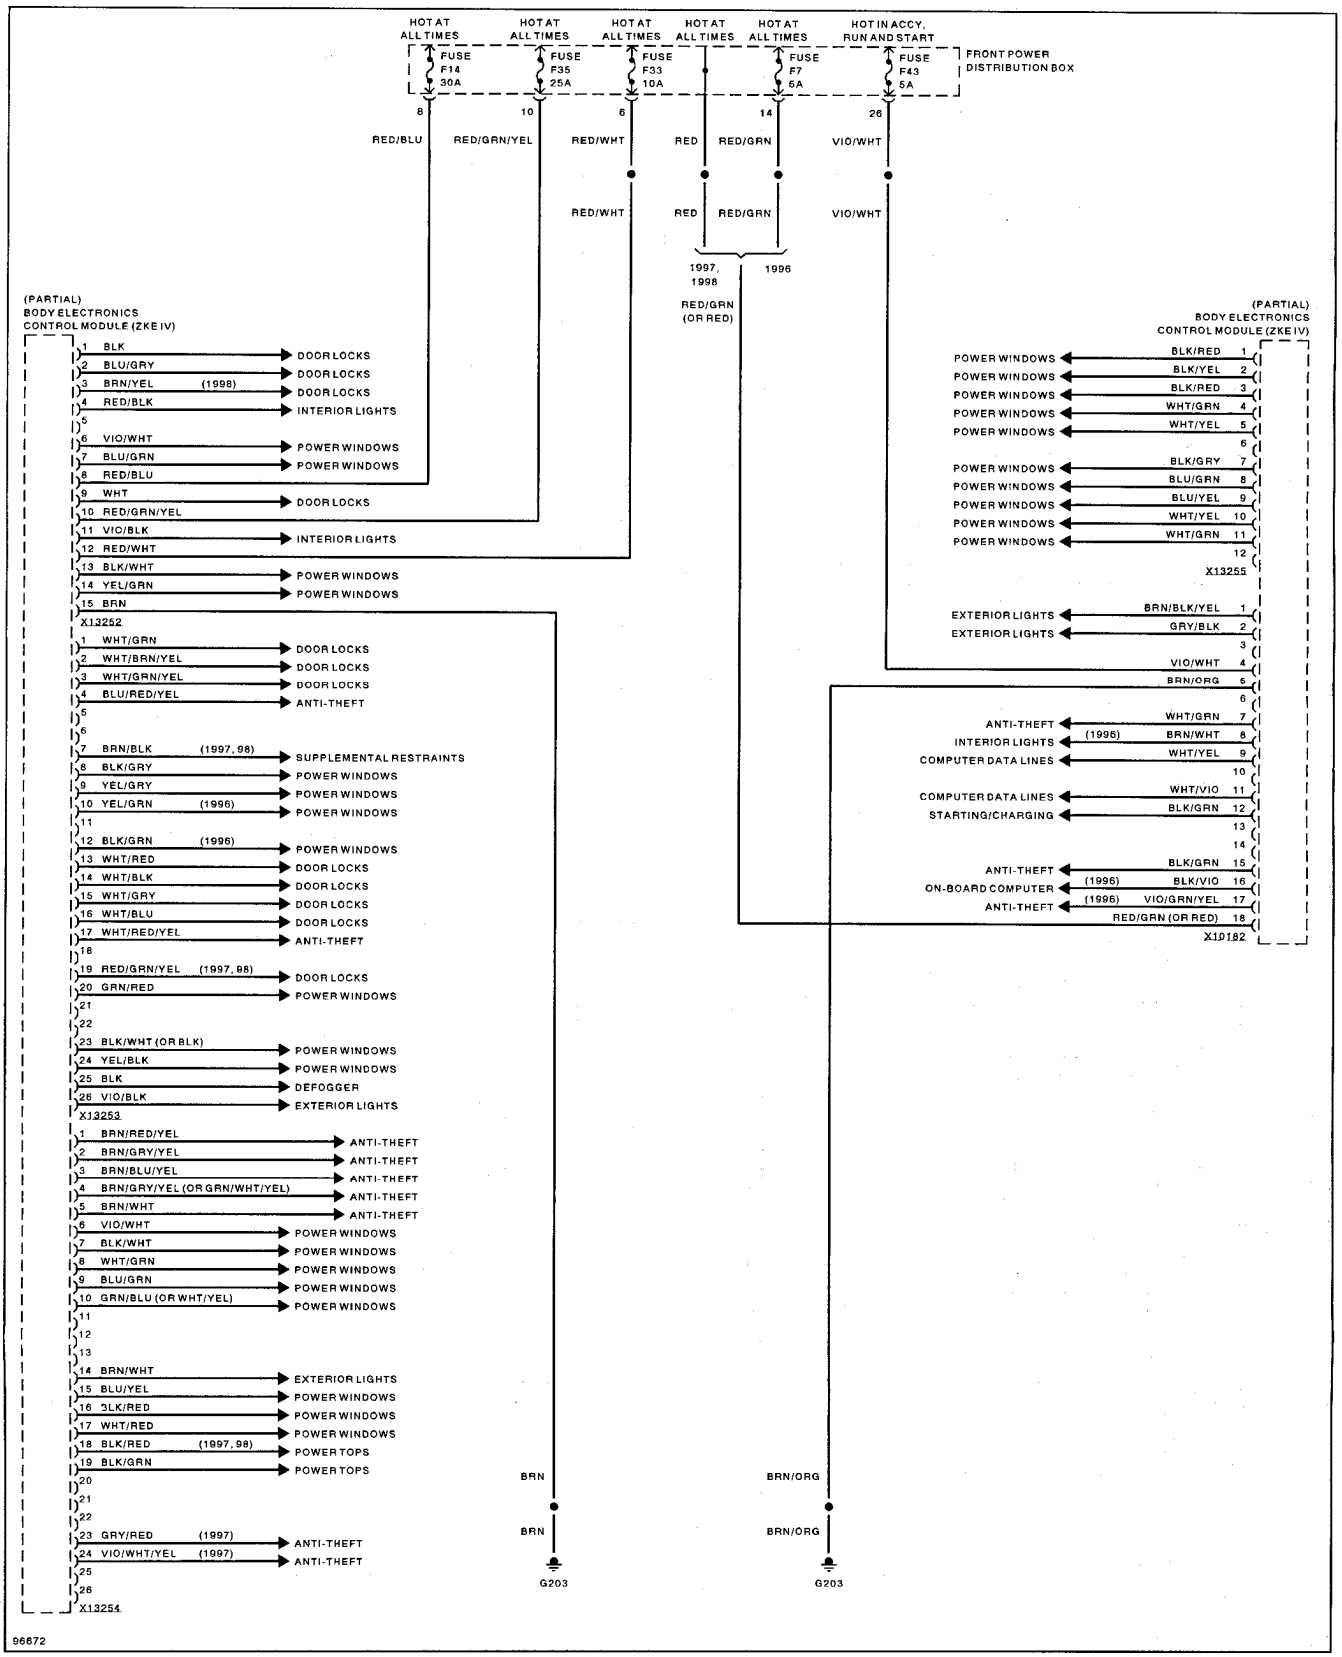


Body Computer Module

1996-98 318ti

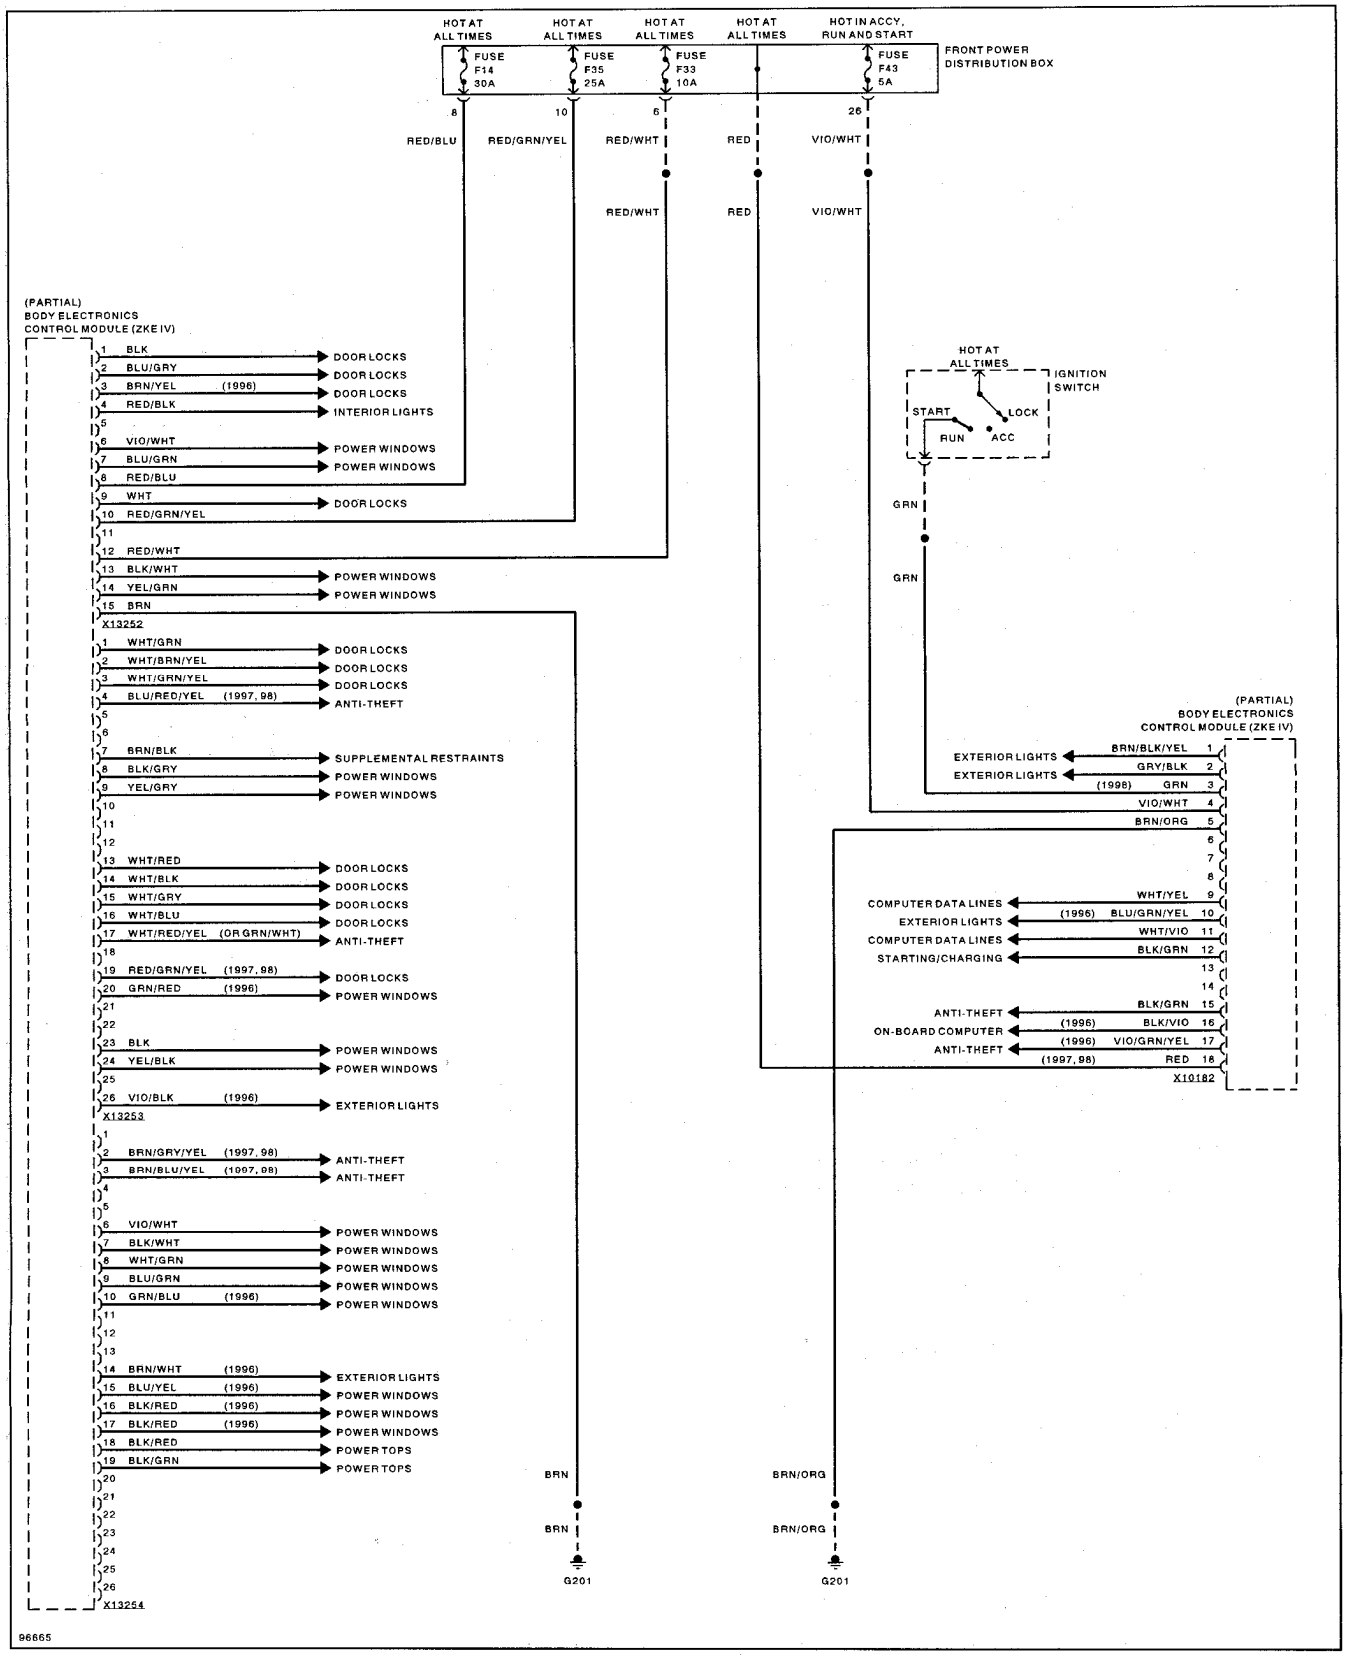


On-Board Computer

1998 Except 318ti

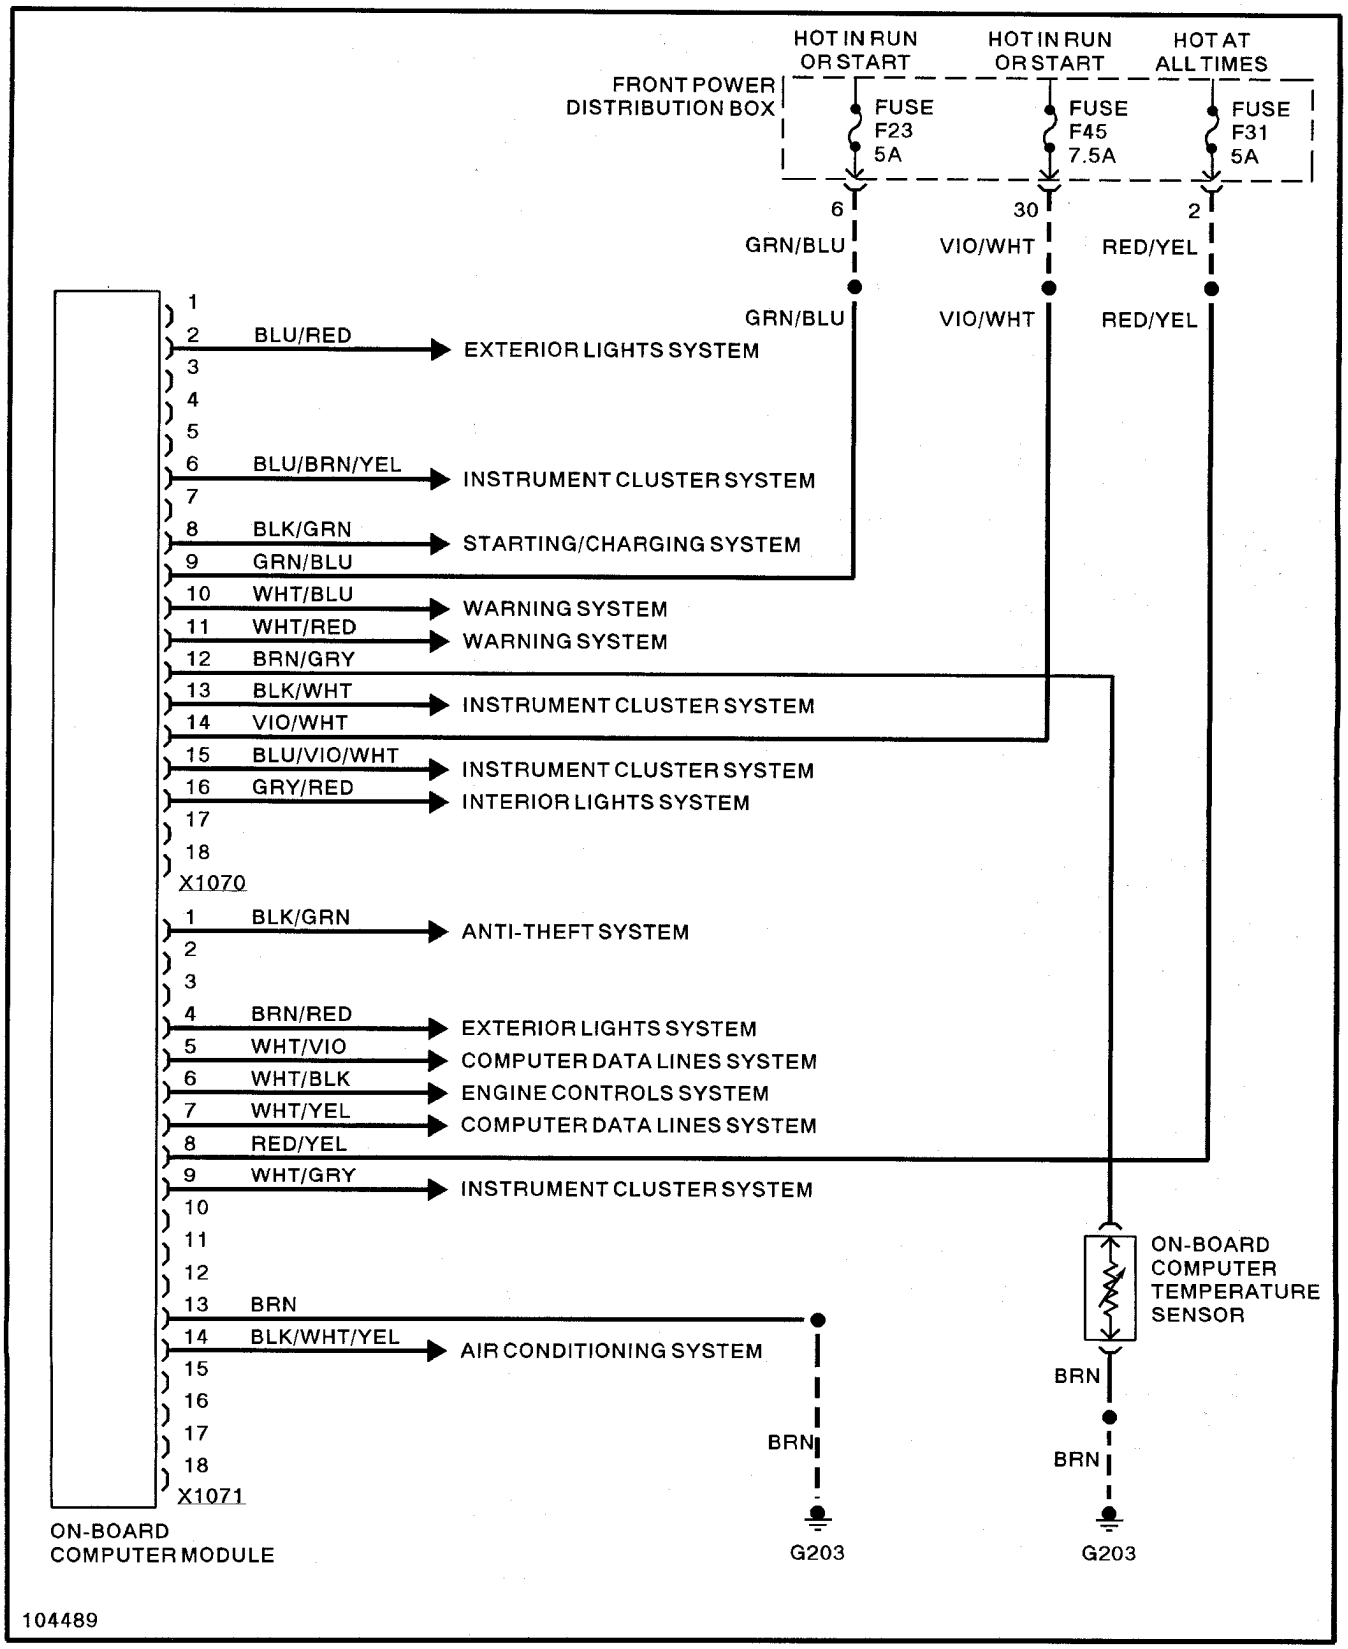


On-Board Computer

1992-97 Except 318ti

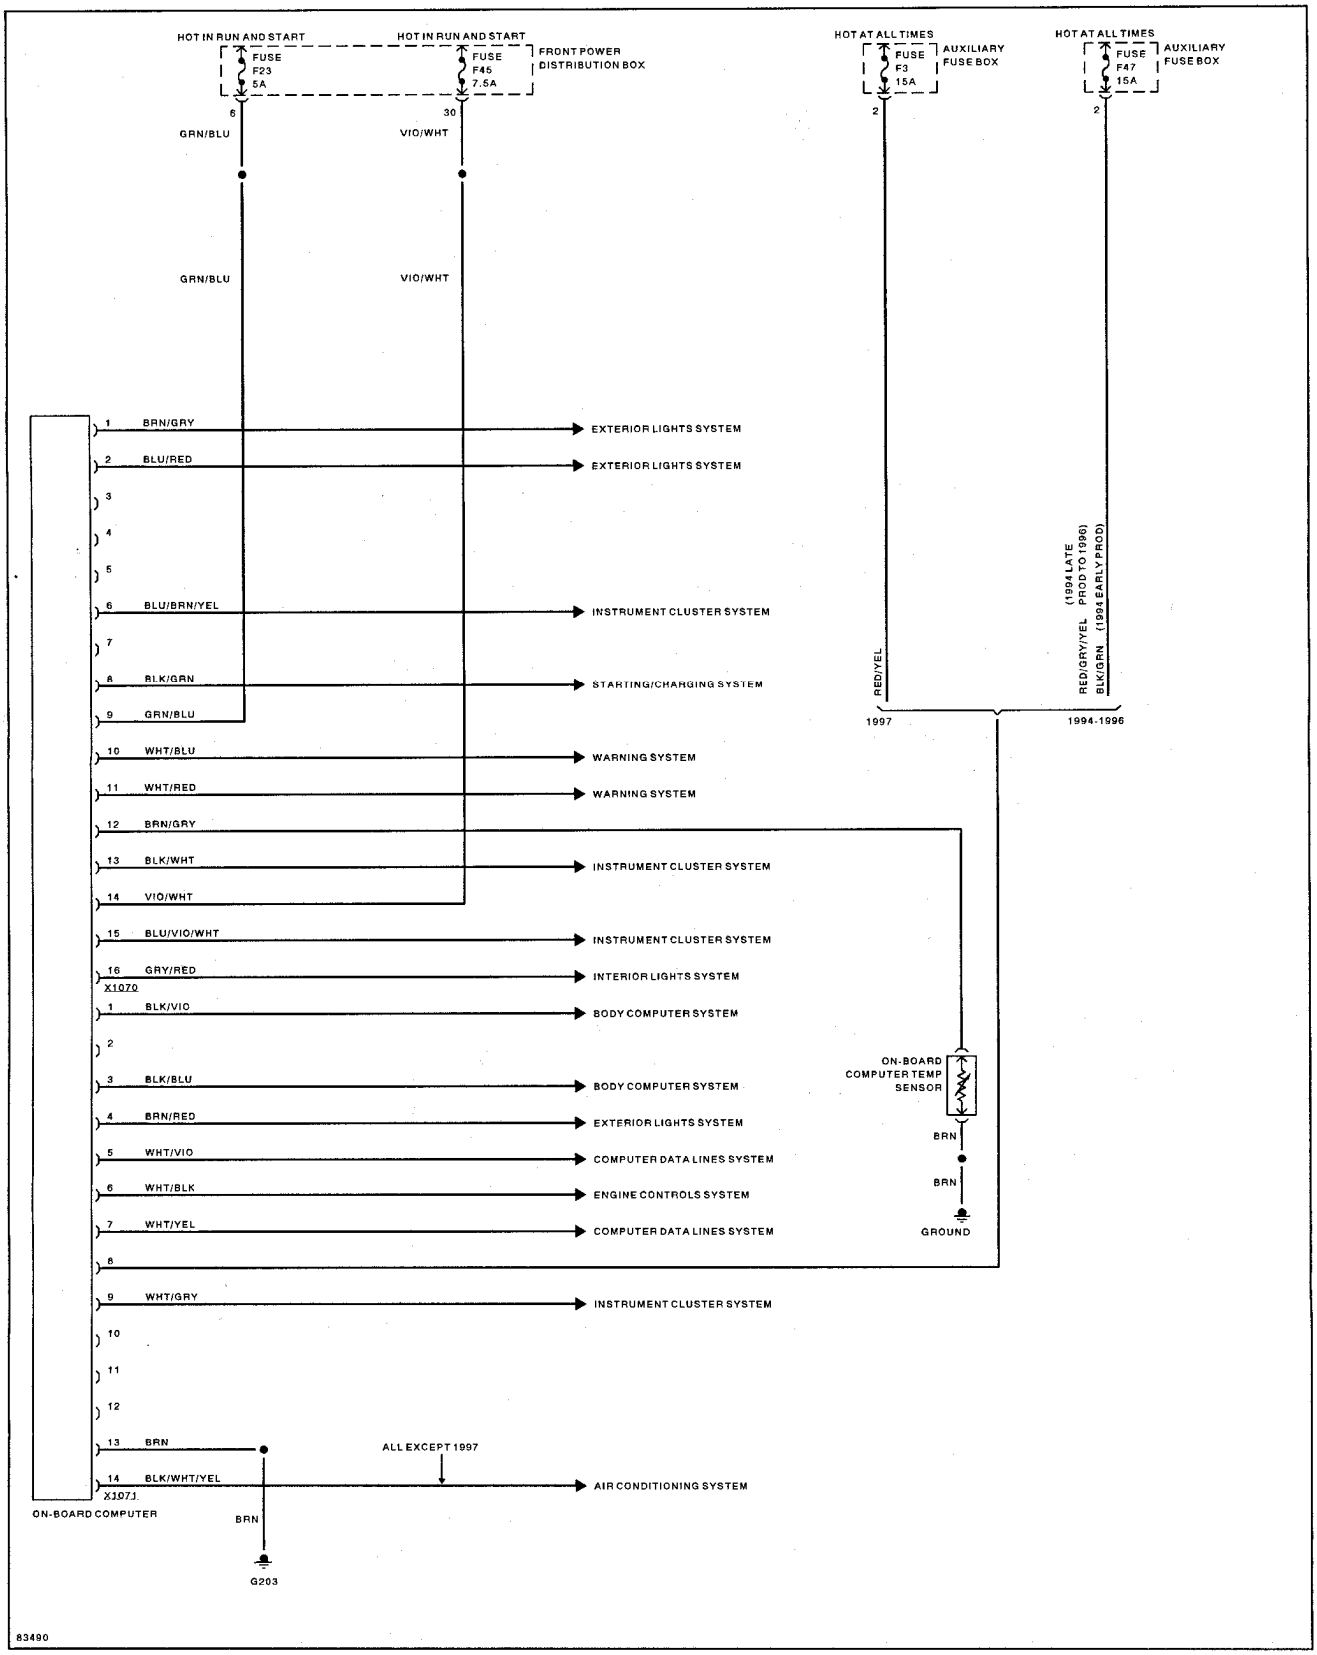


On-Board Computer

1995-98 318ti

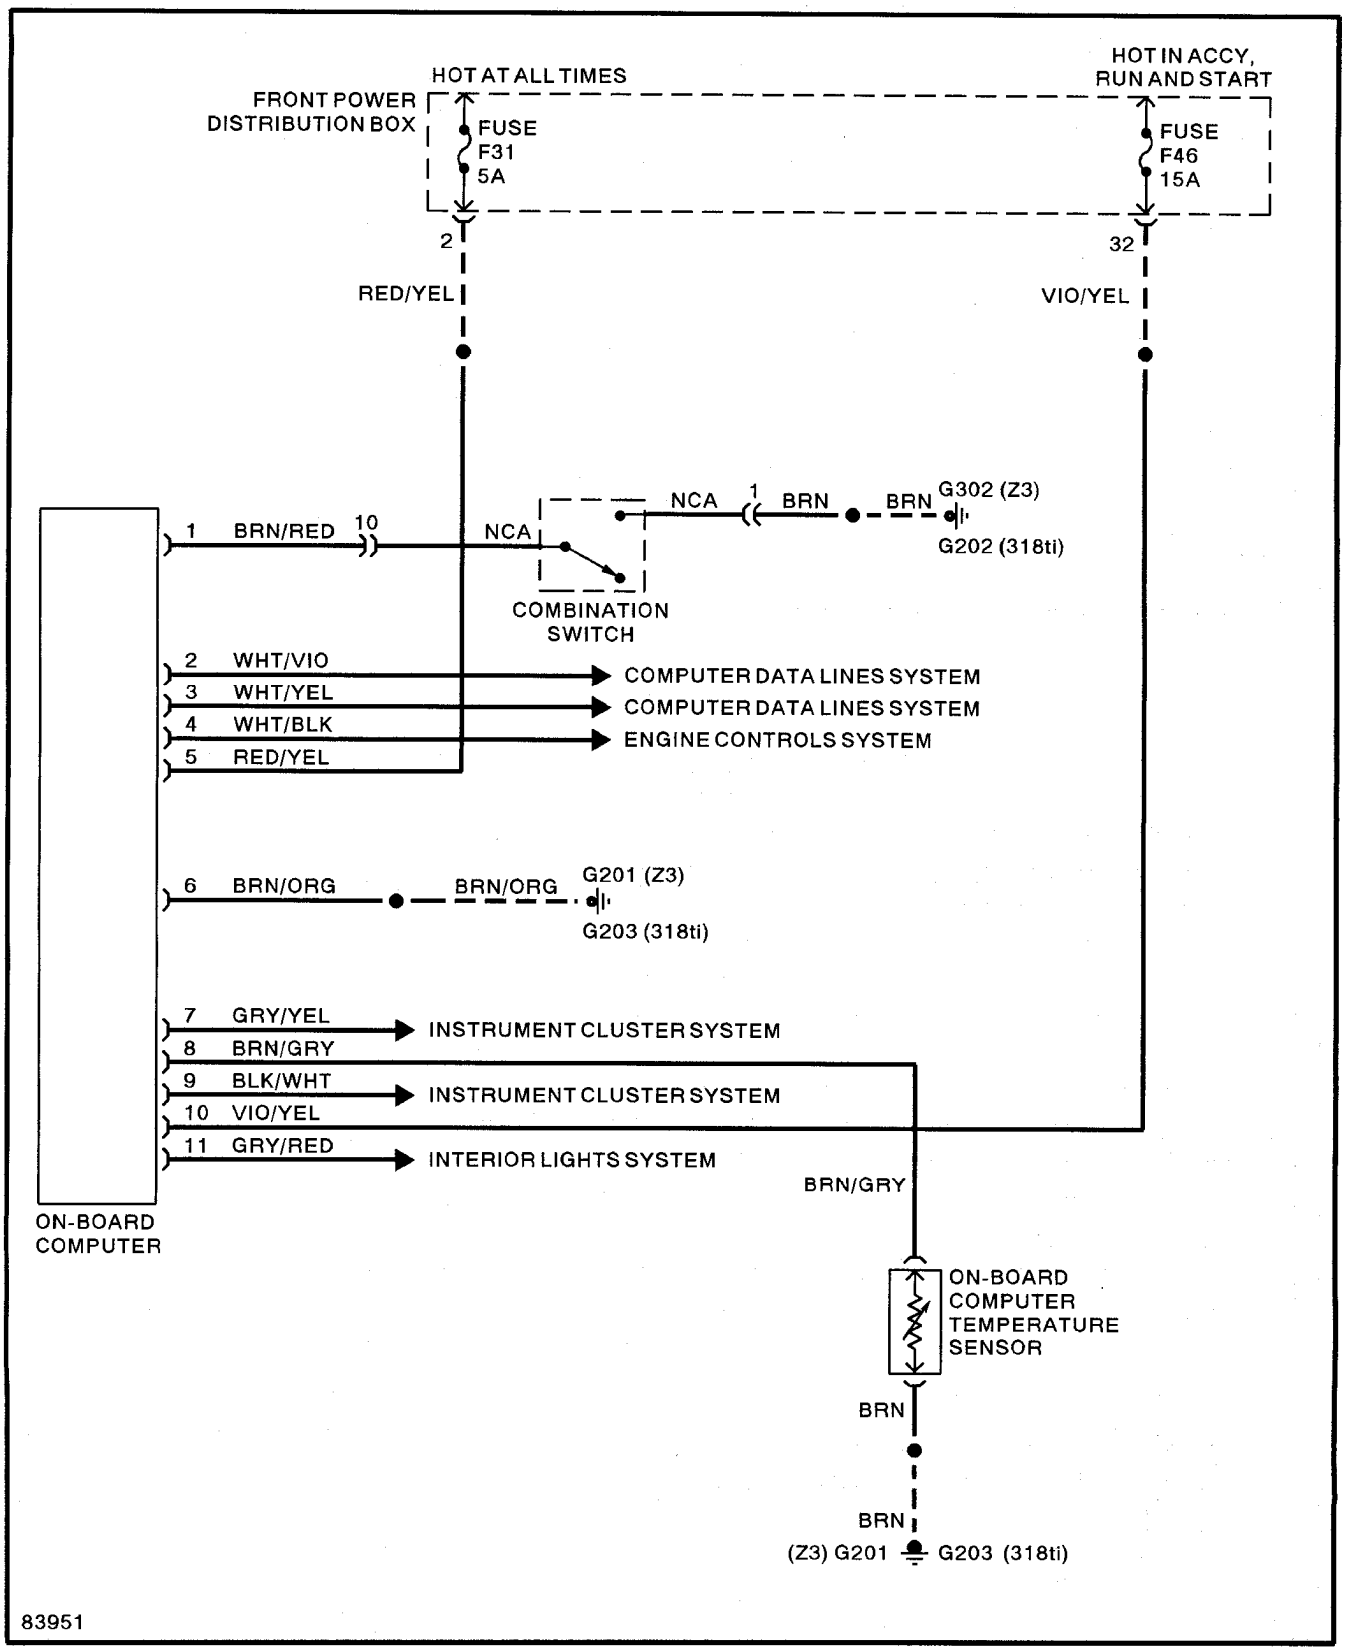


Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Instrument Panel
1998 318ti (2 of 2)

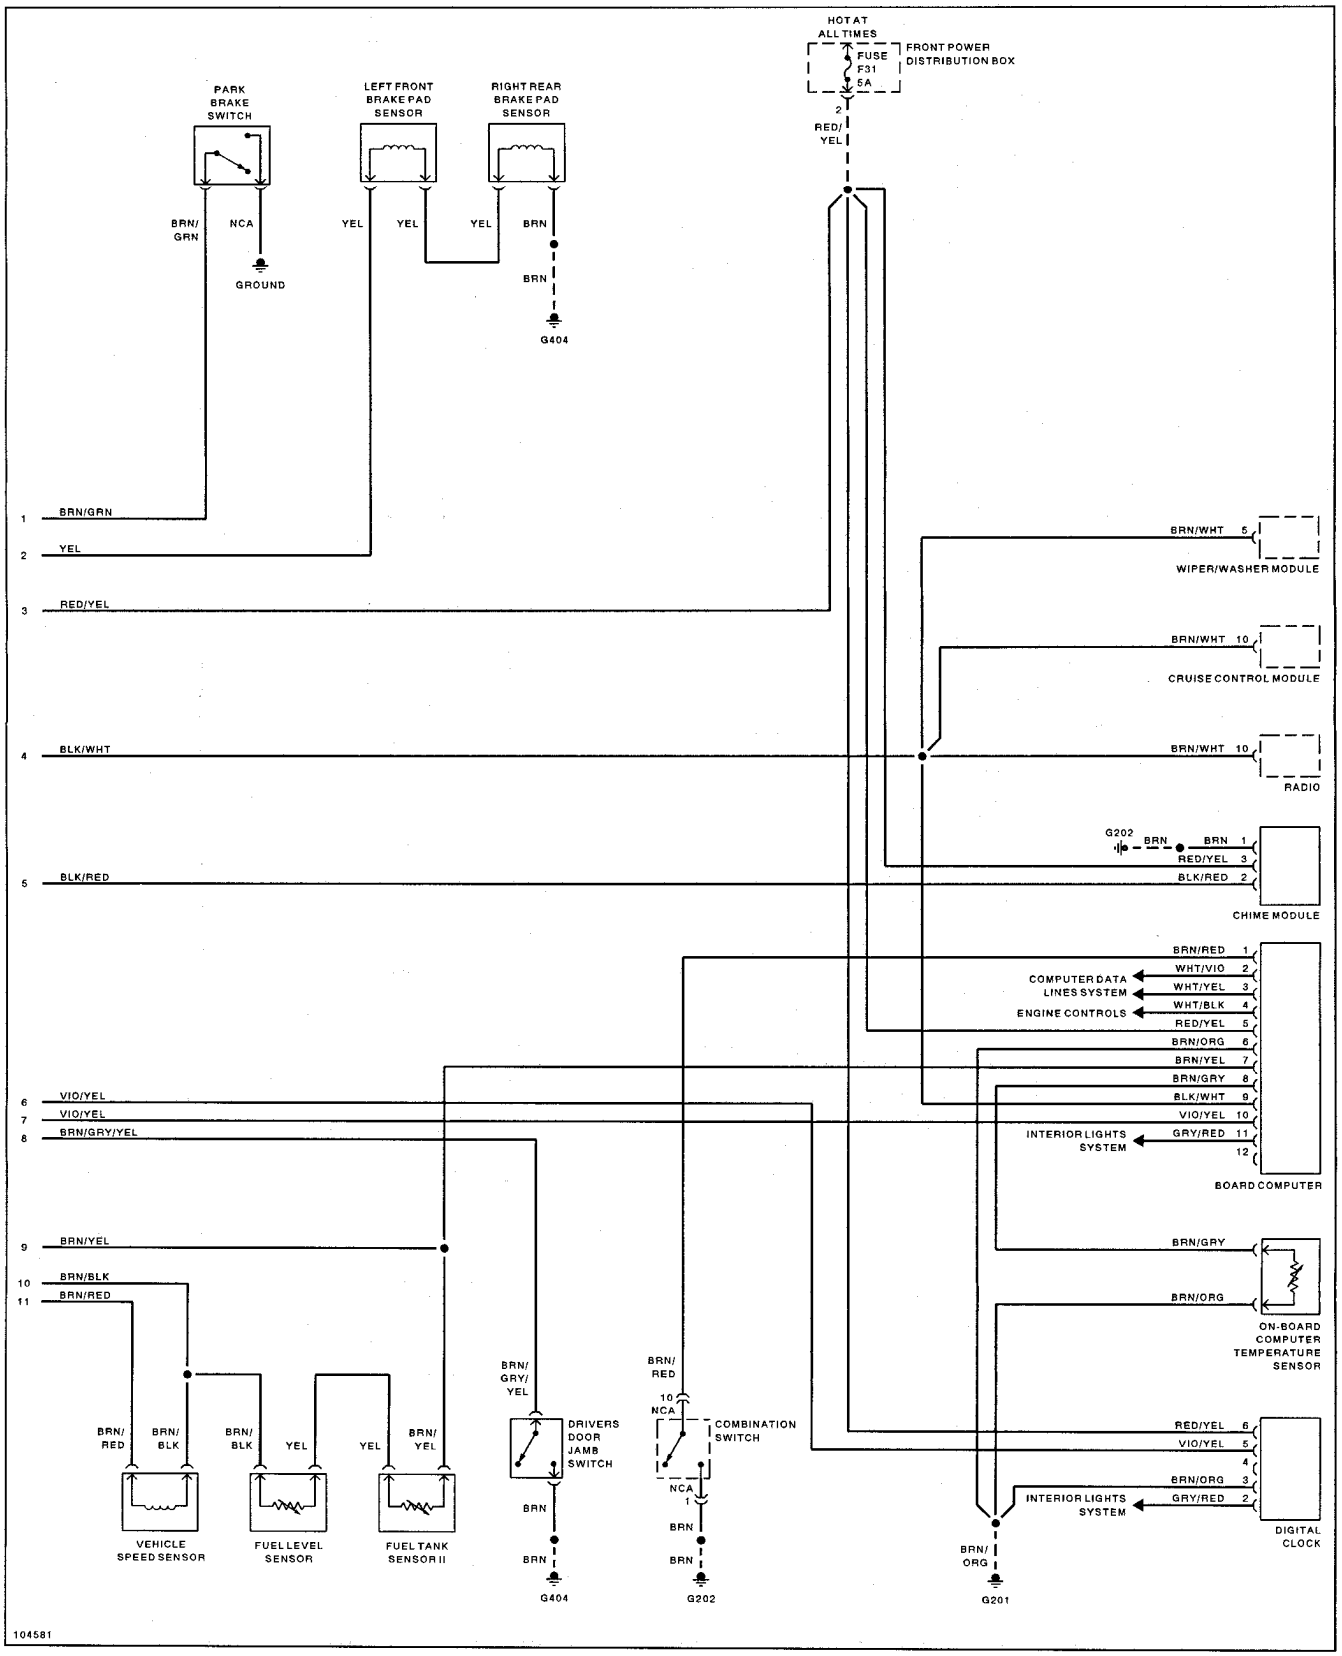


Instrument Panel

1998 318ti (1 of 2)

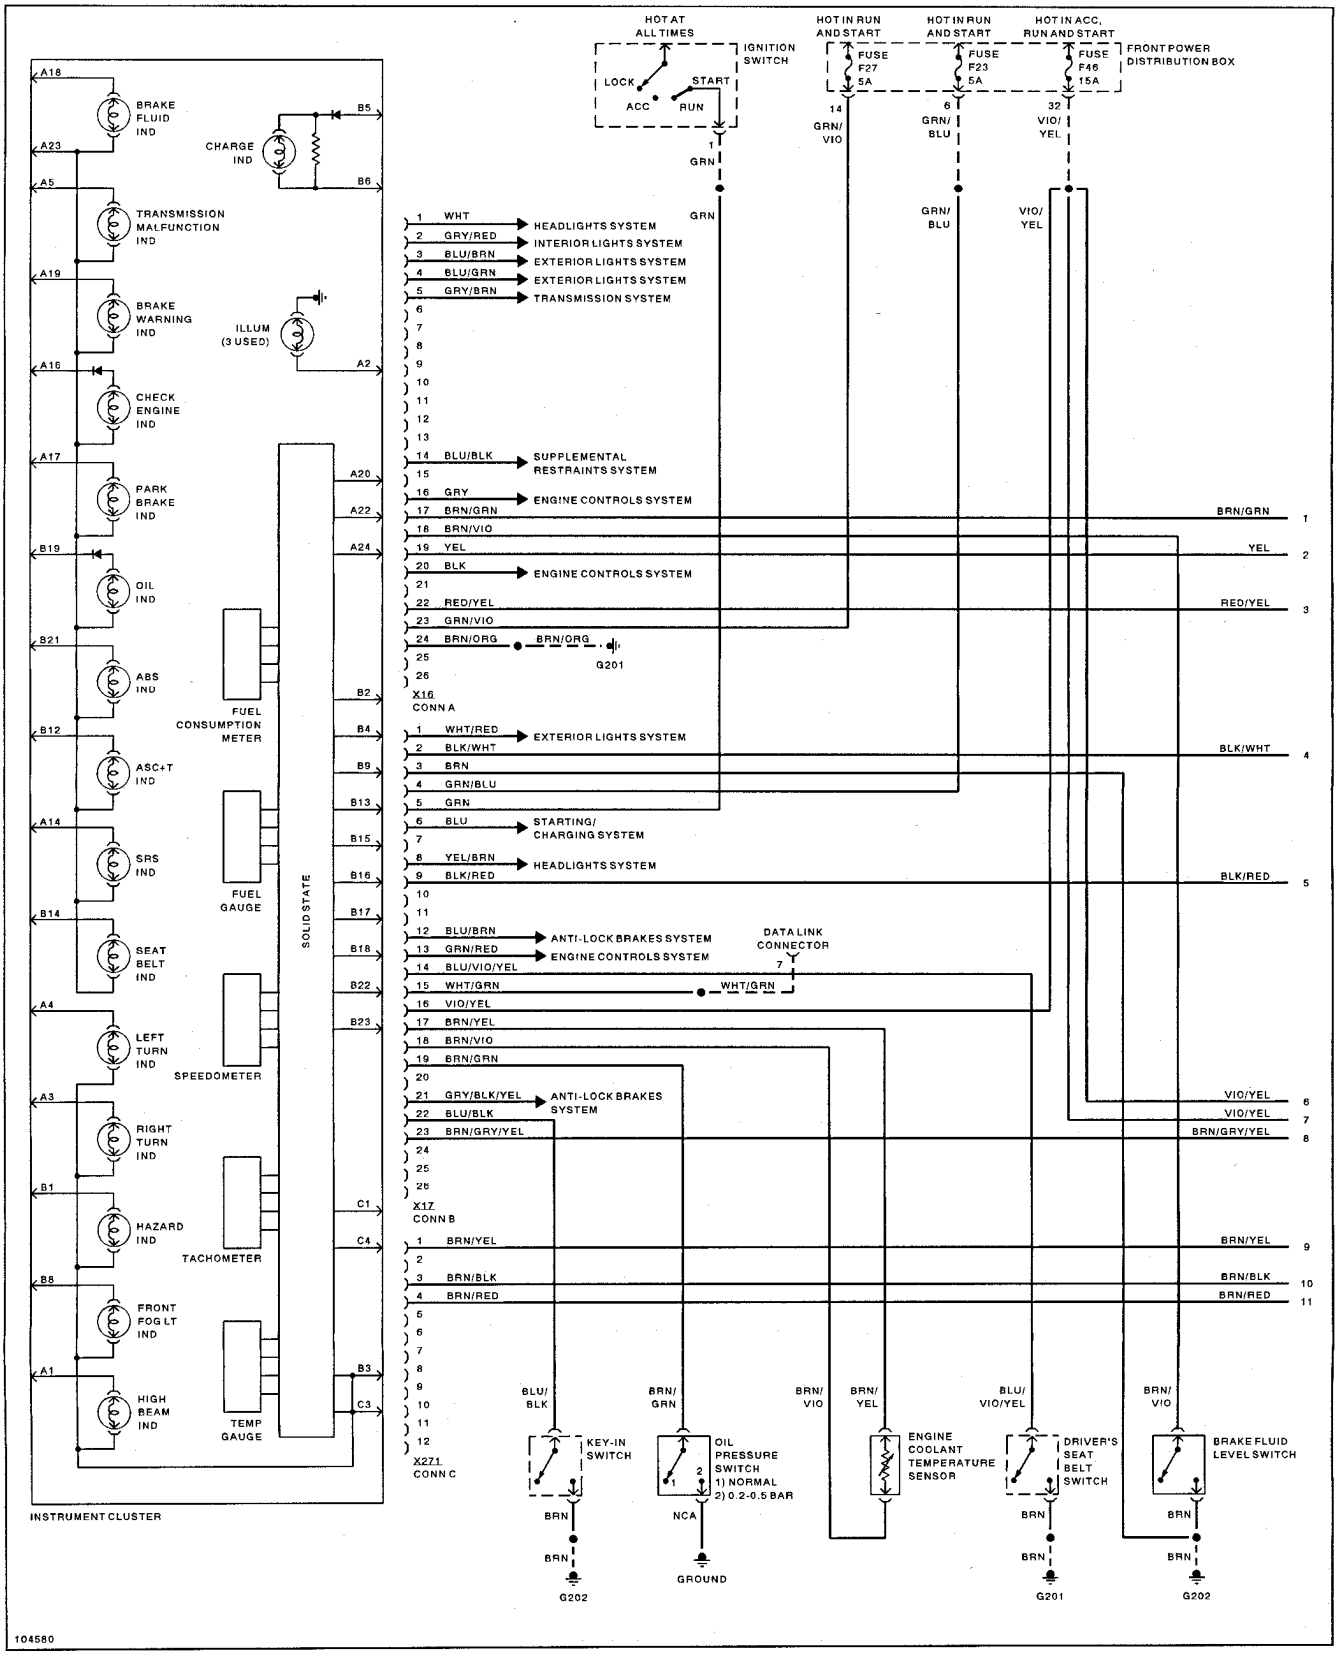


Instrument Panel

1995-97 318ti (2 of 2)

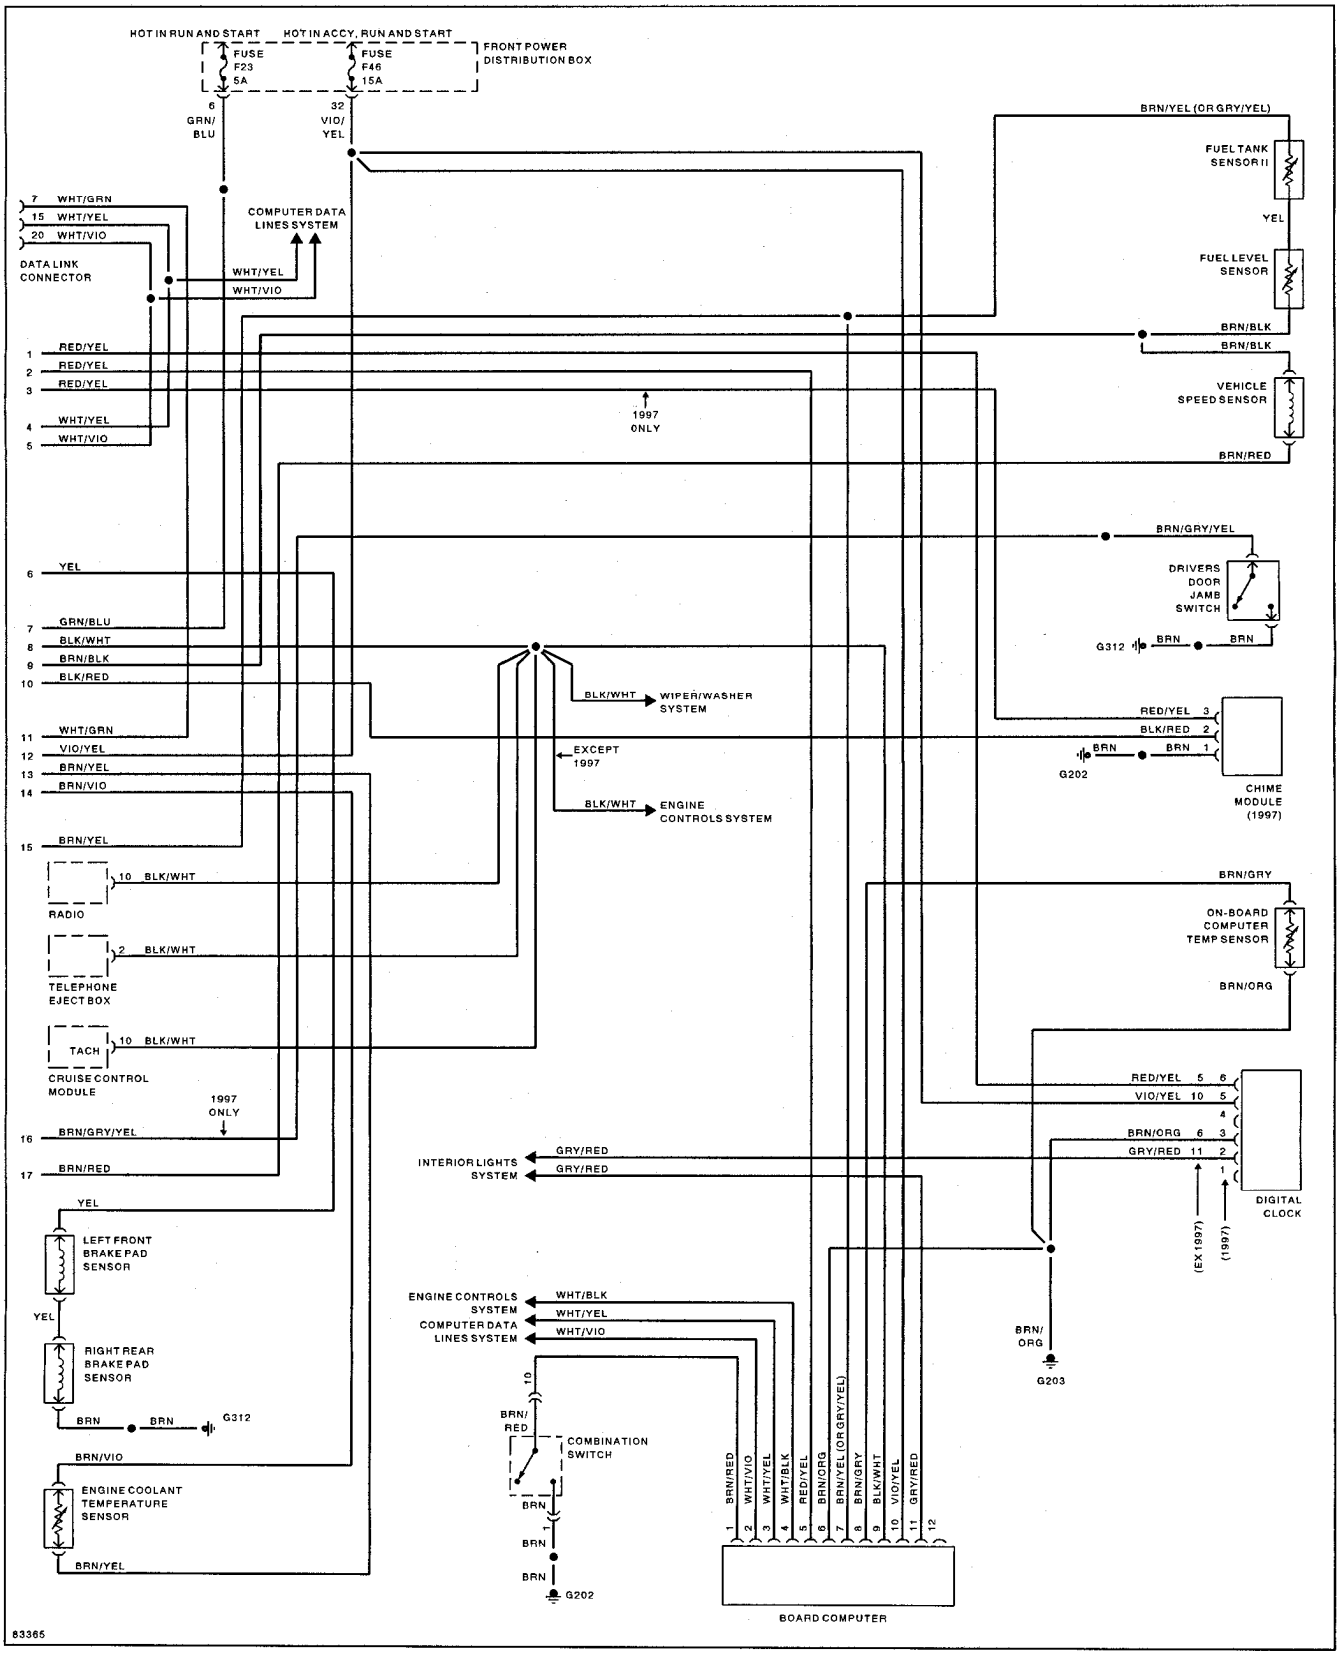


Instrument Panel

1995-97 318ti (1 of 2)

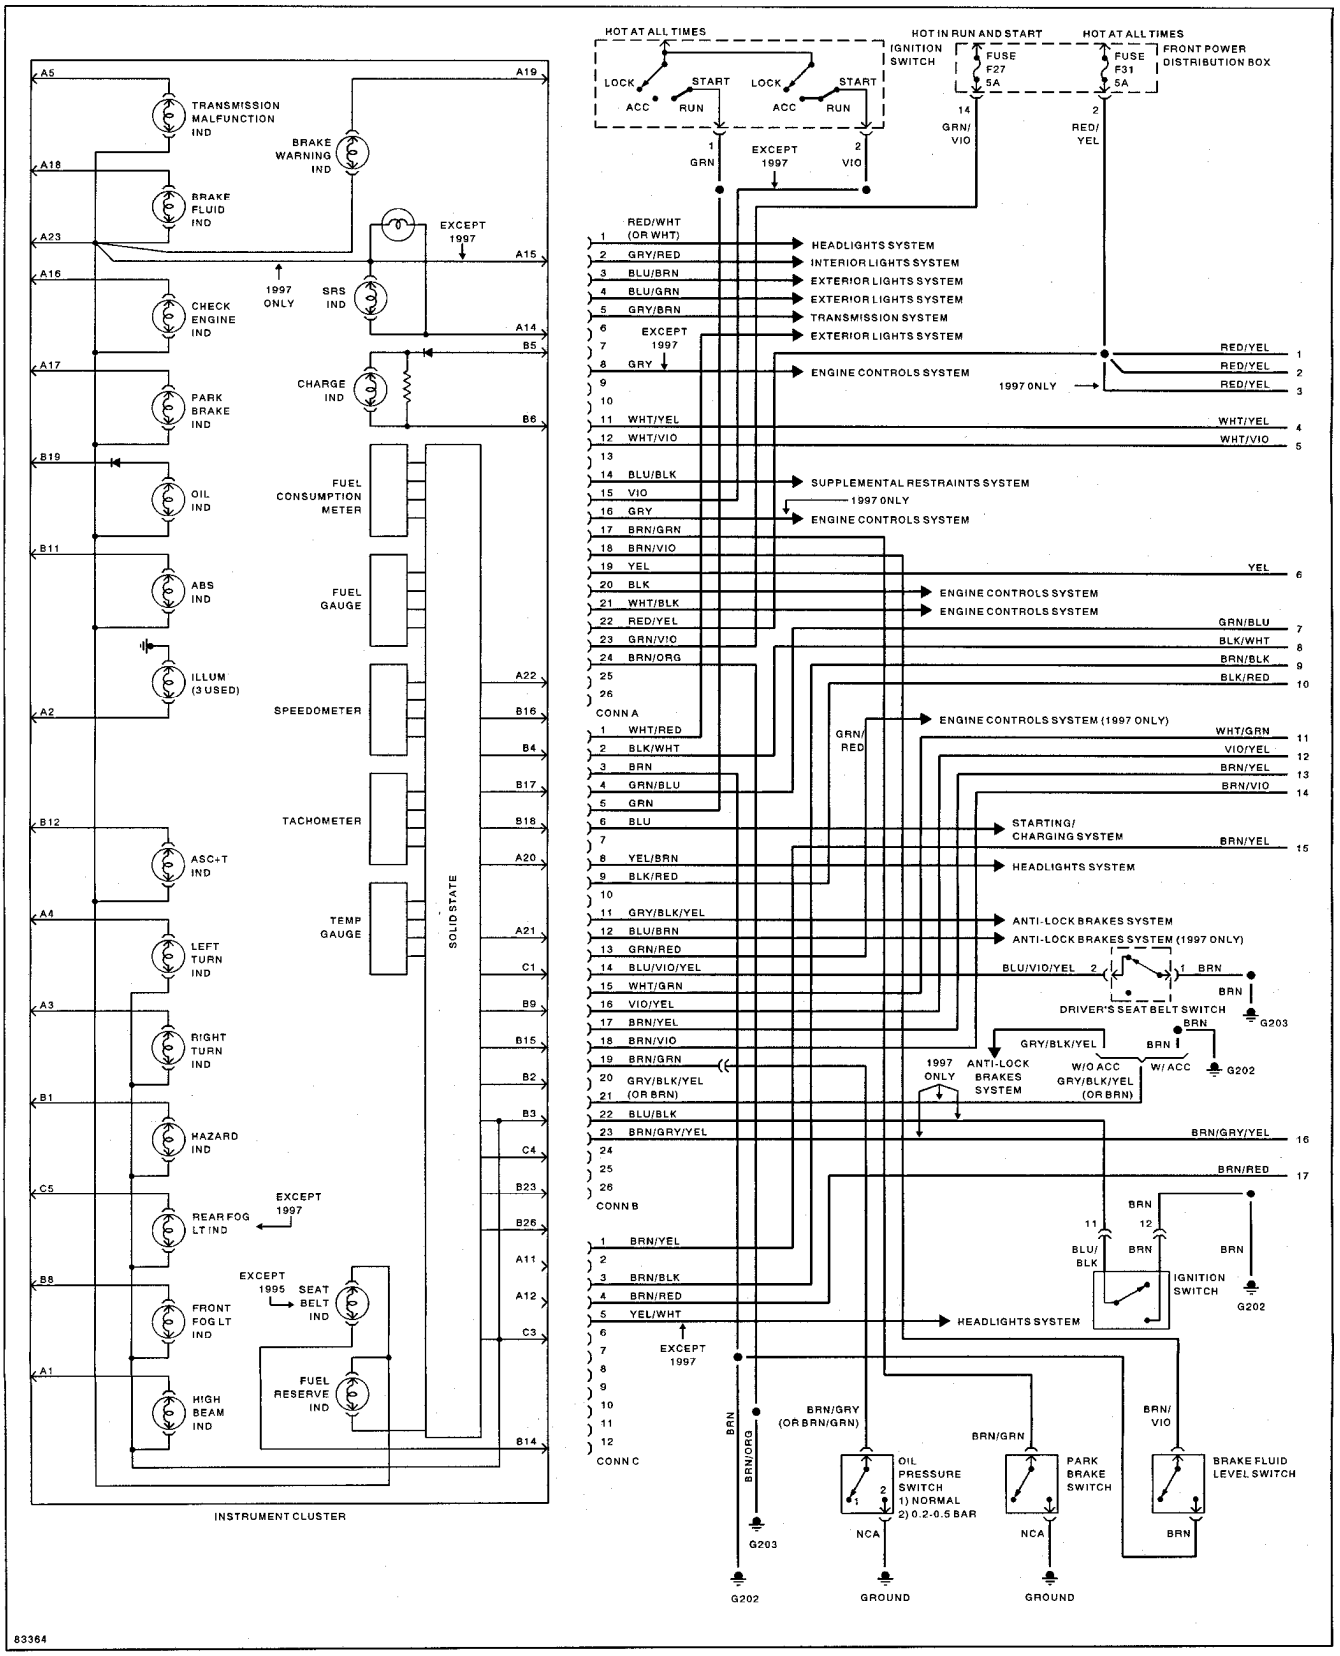


Instrument Panel

1998 Except 318ti (2 of 2)

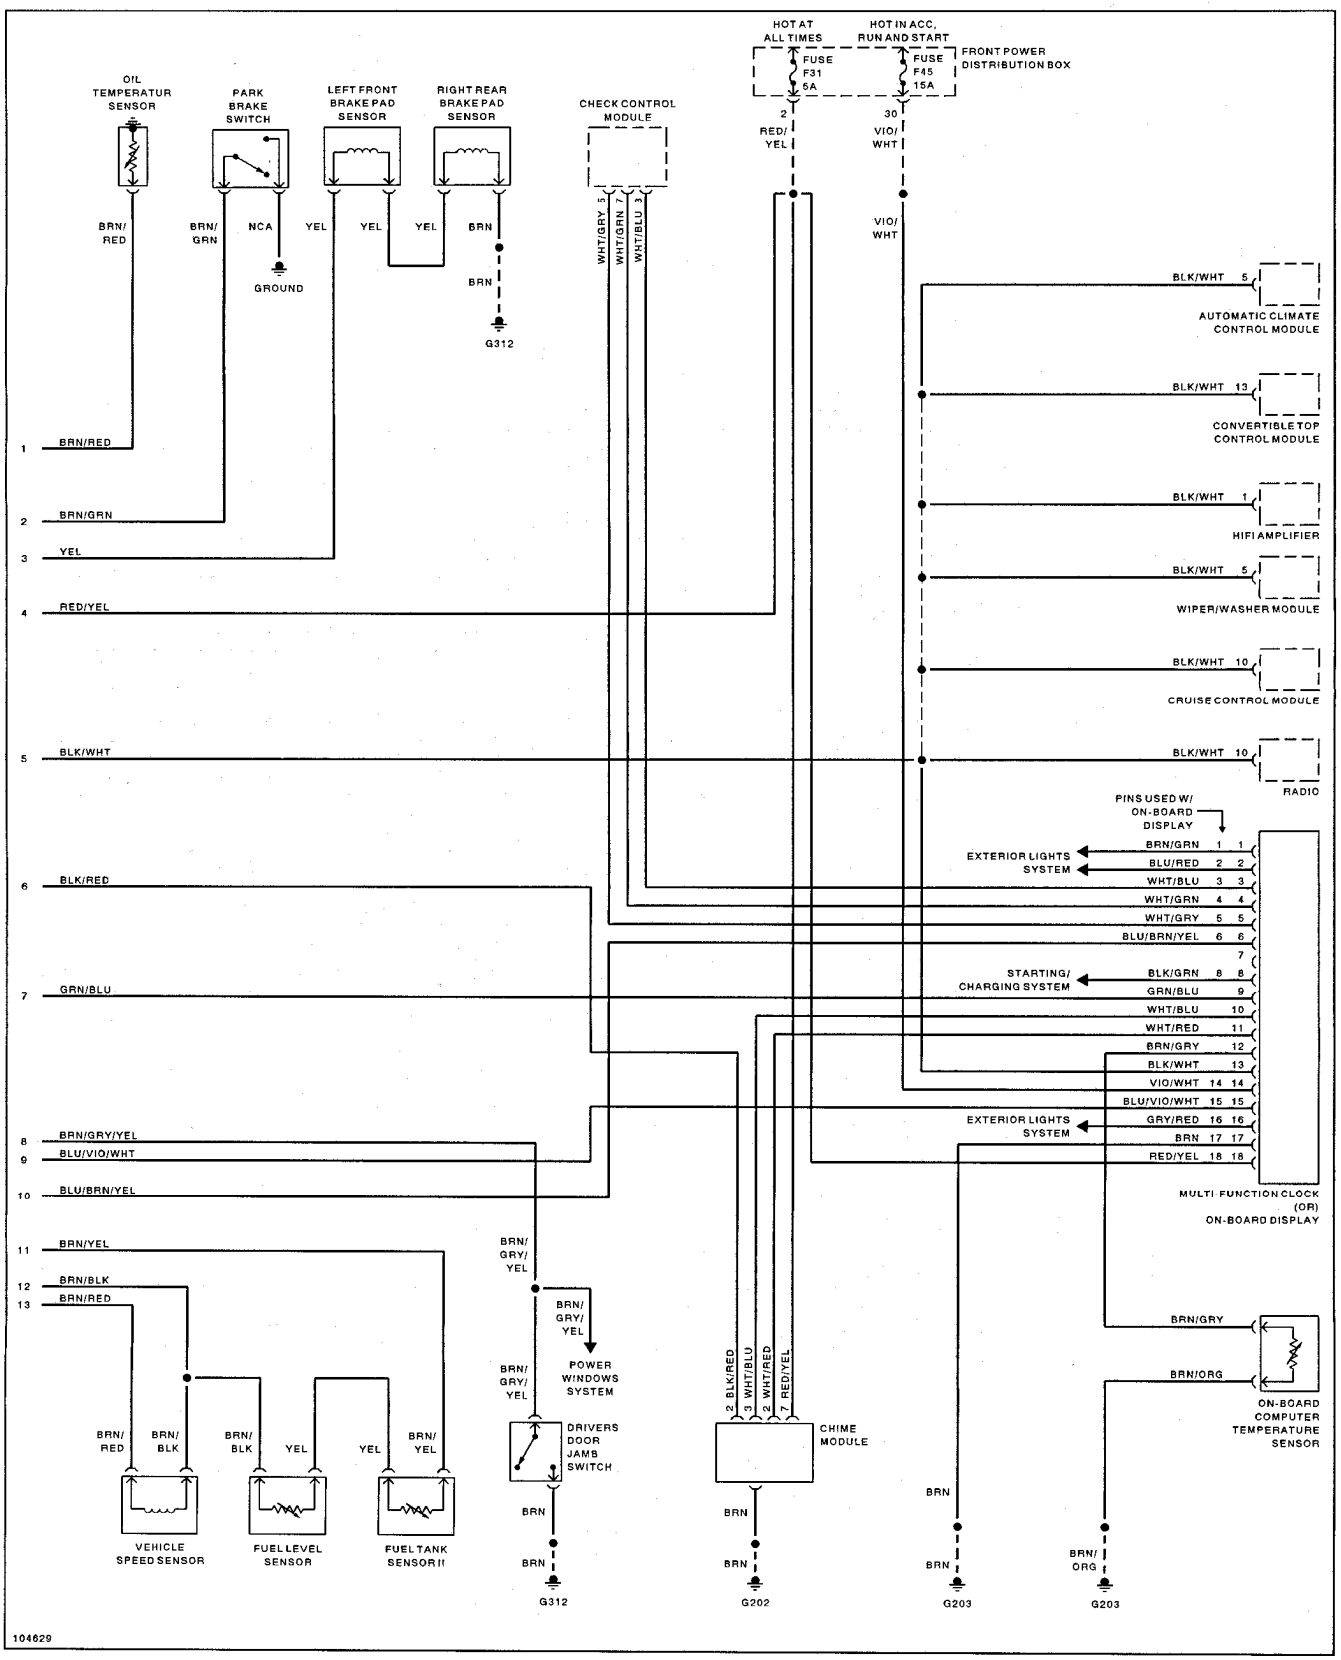


Instrument Panel

1998 Except 318ti (1 of 2)

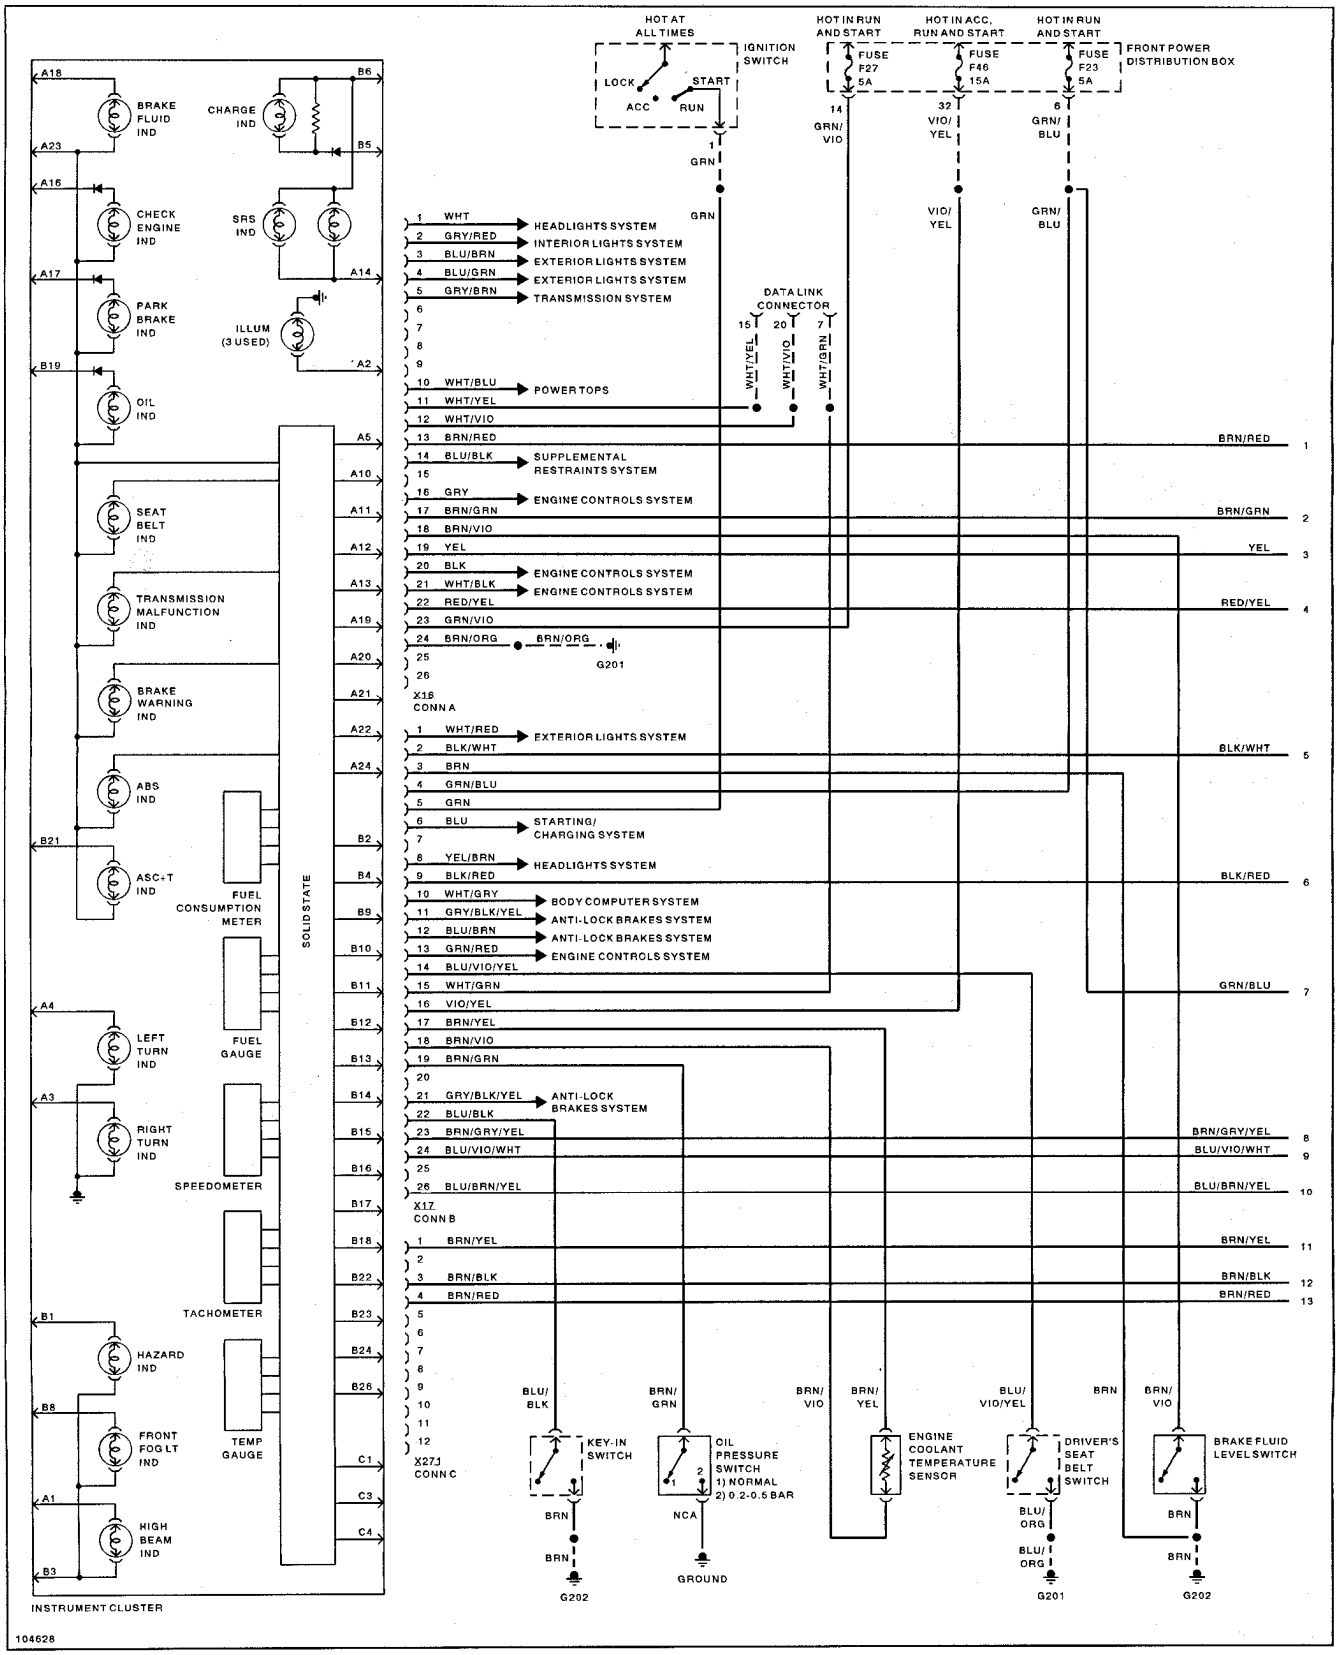


Instrument Panel

1992-97 Except 318ti (2 of 2)

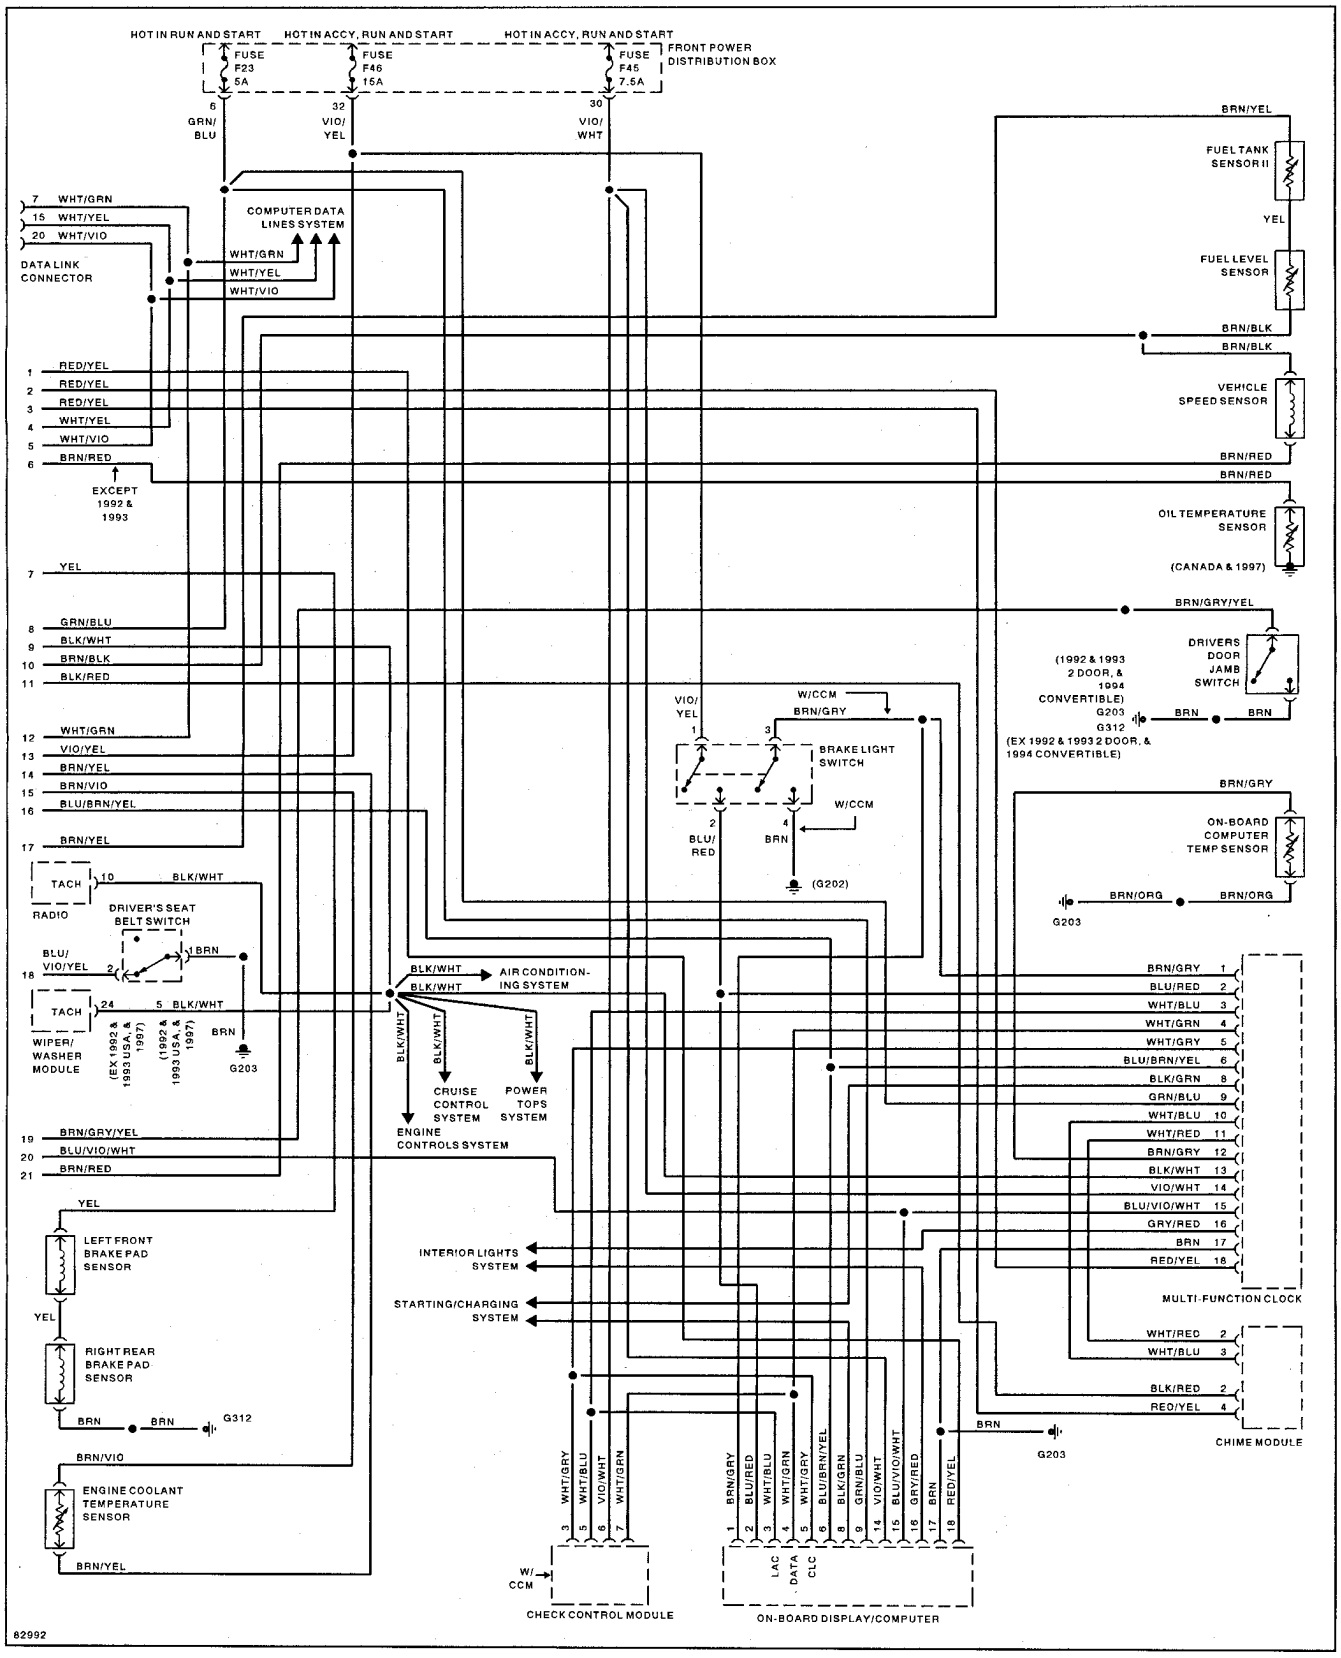


Instrument Panel

1992-97 Except 318ti (1 of 2)

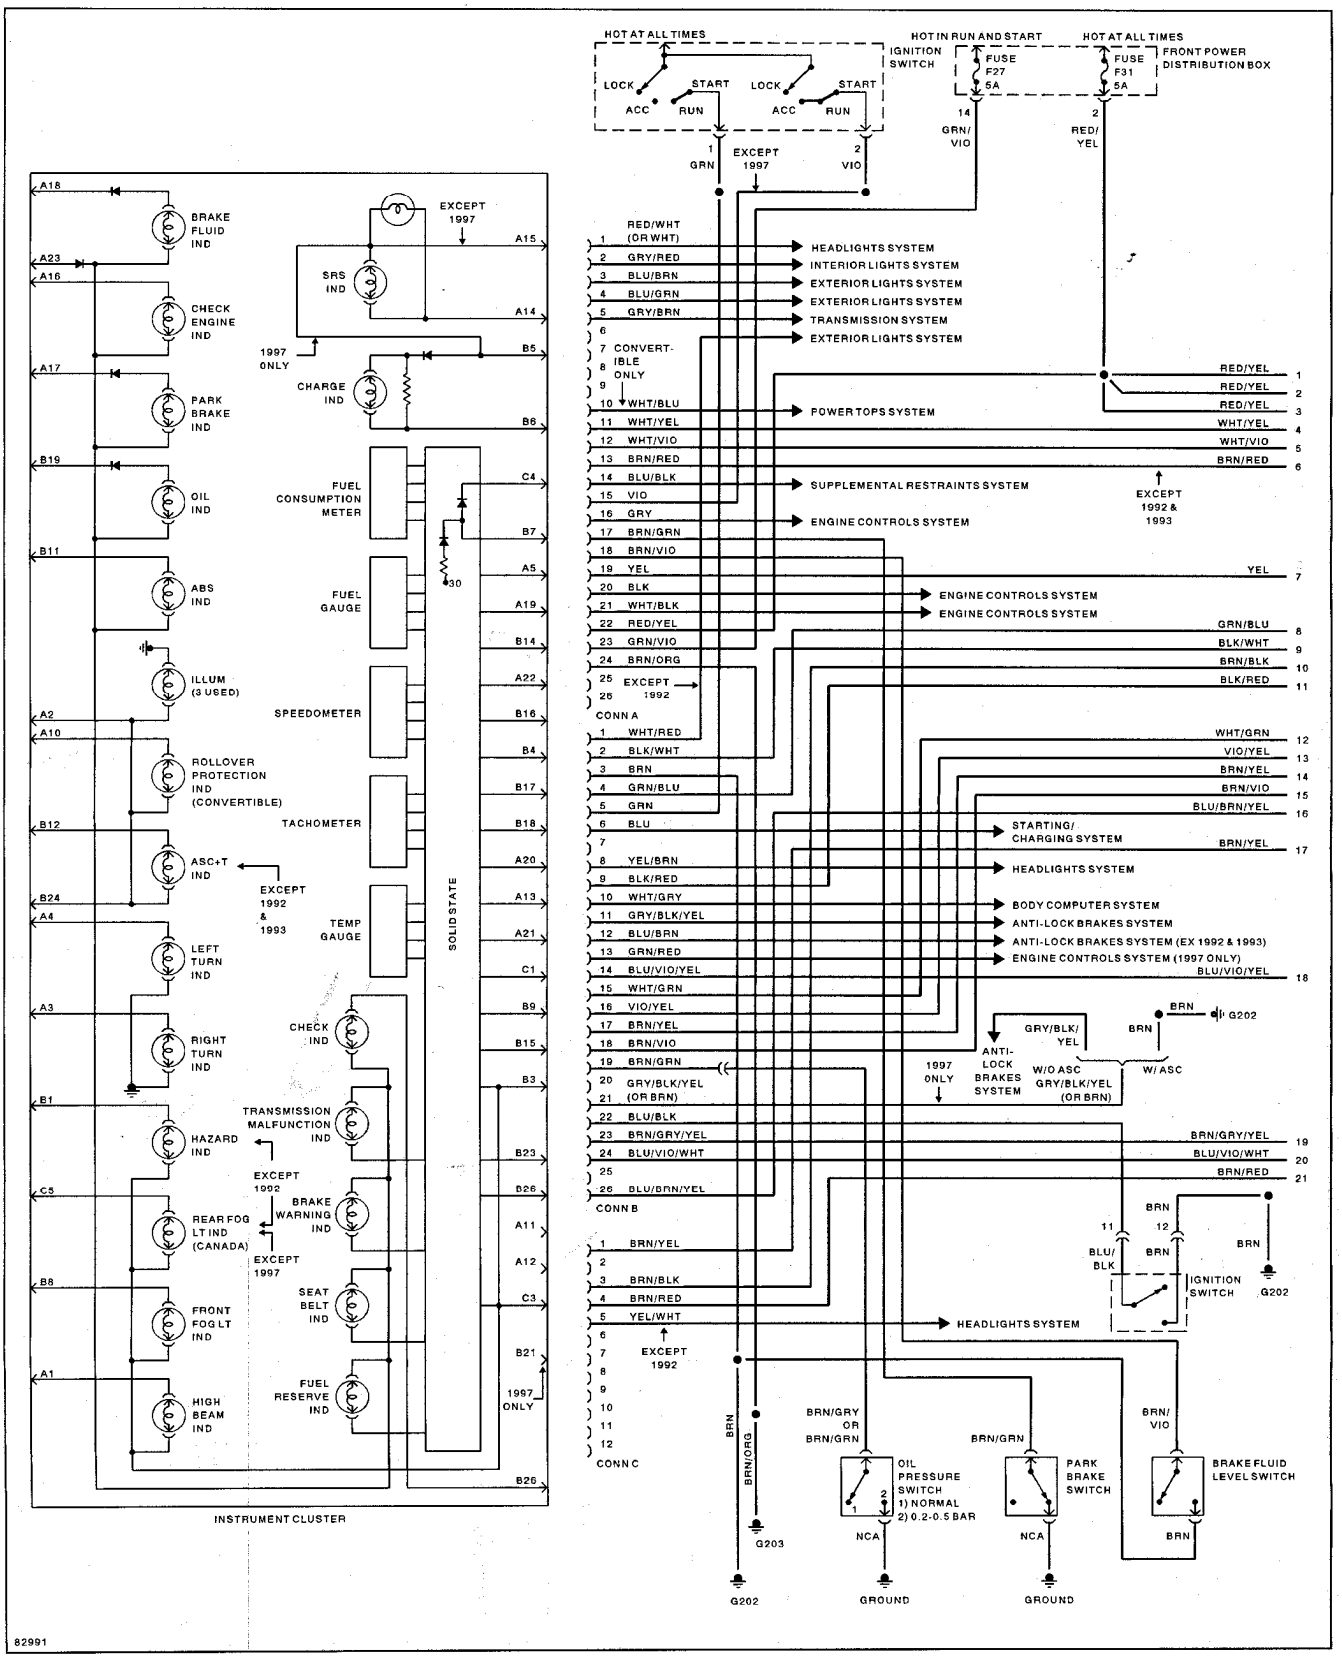


Rear Window Defogger


1998 Convertible

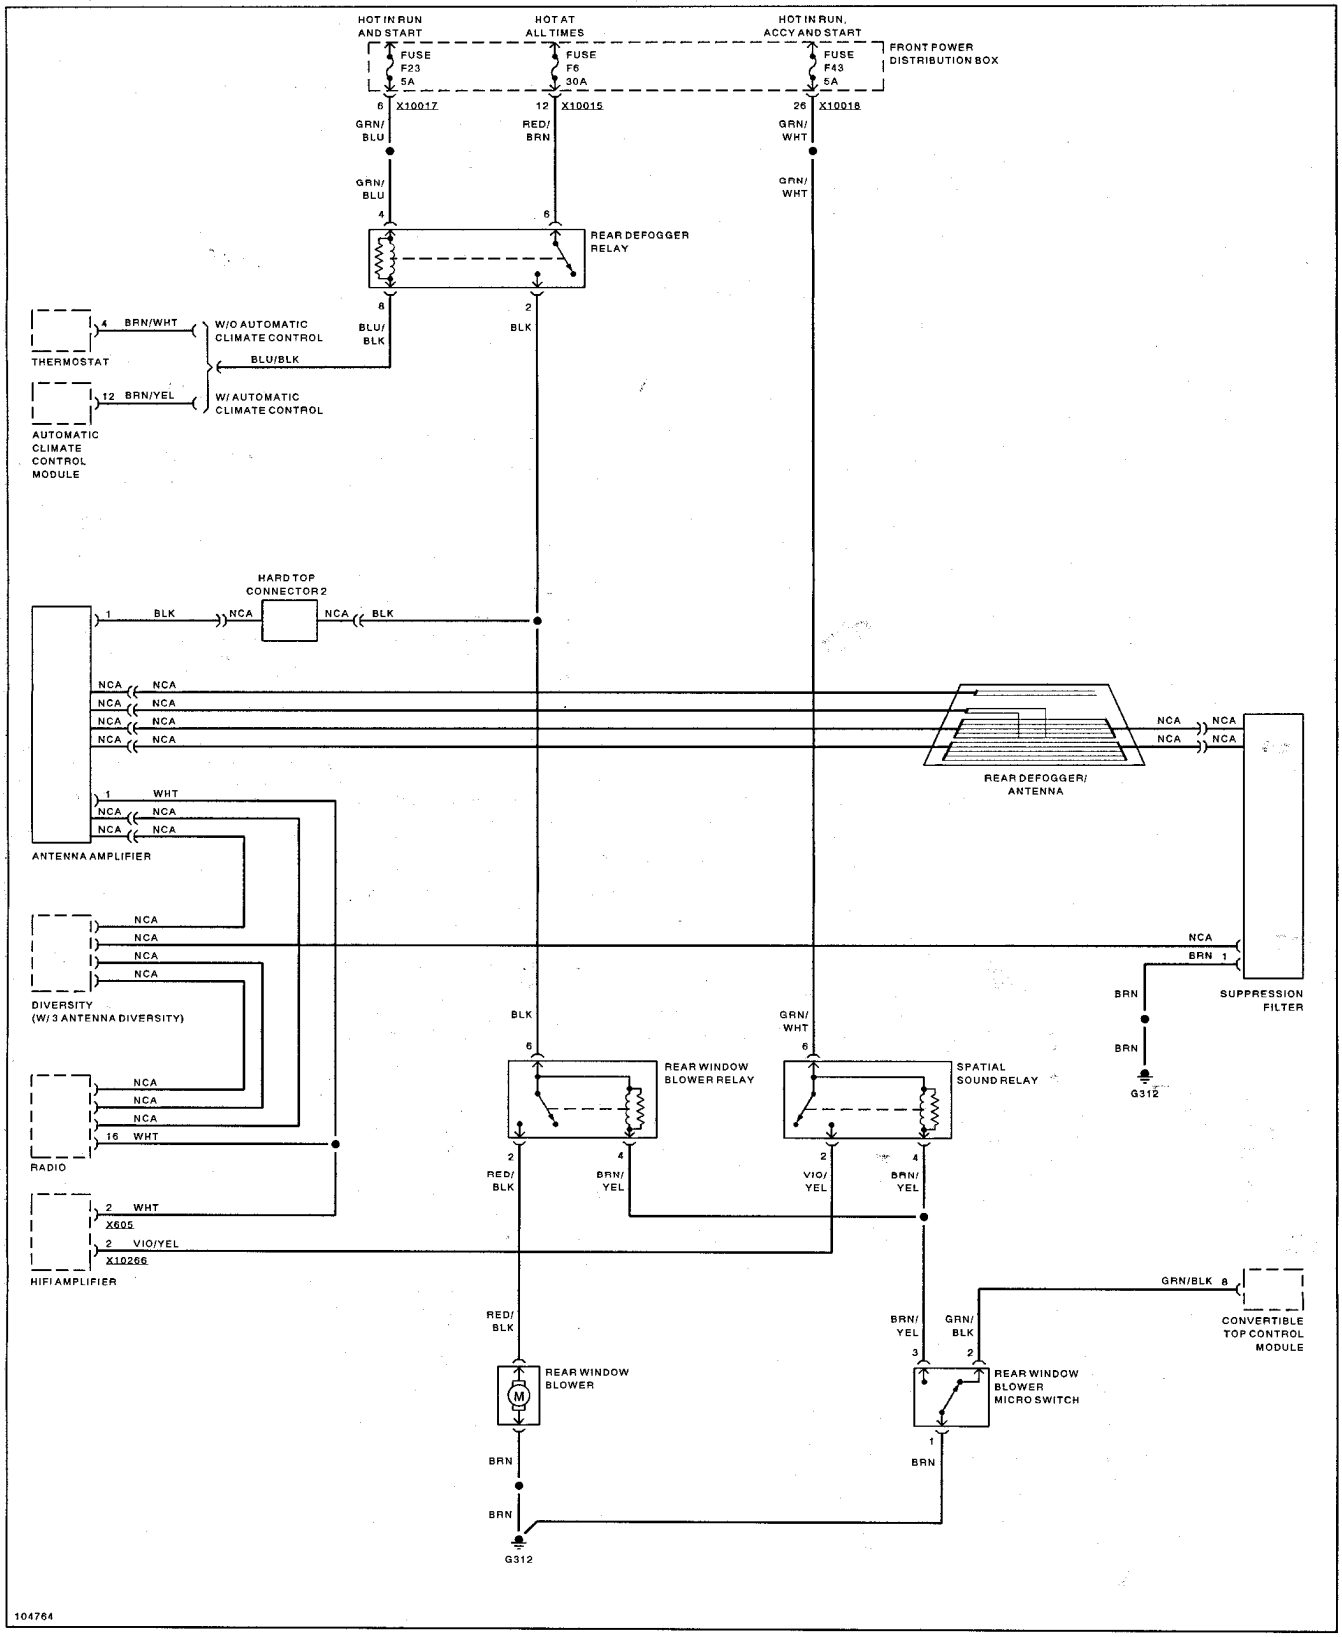

Rear Window Defogger

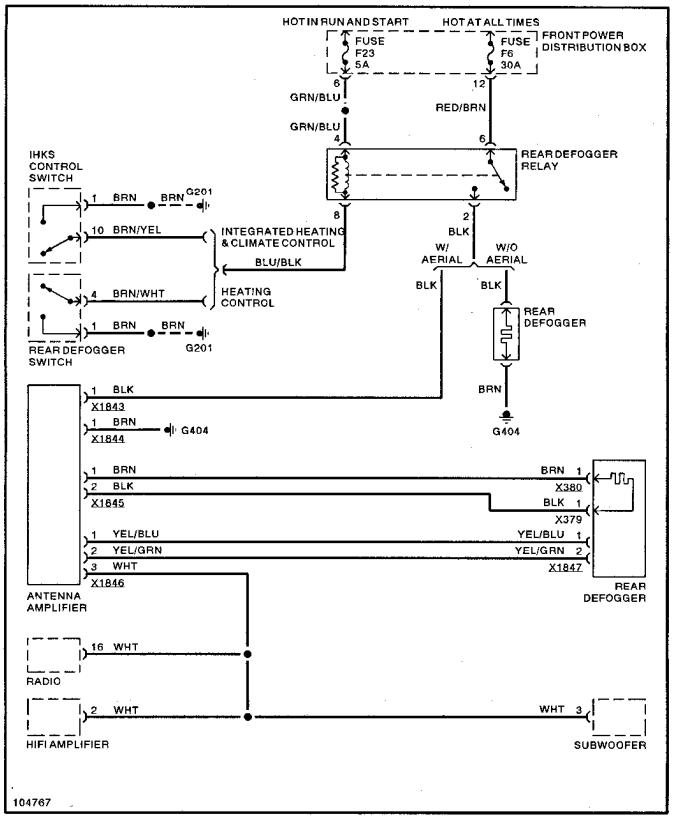


1998
318ti

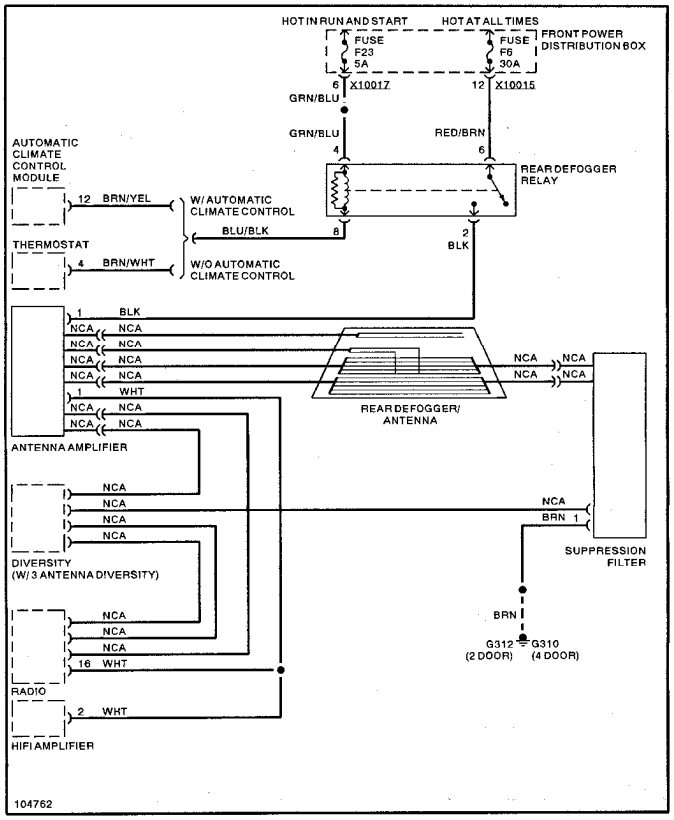


1998
Except 318ti &
Convertible

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Rear Window Defogger

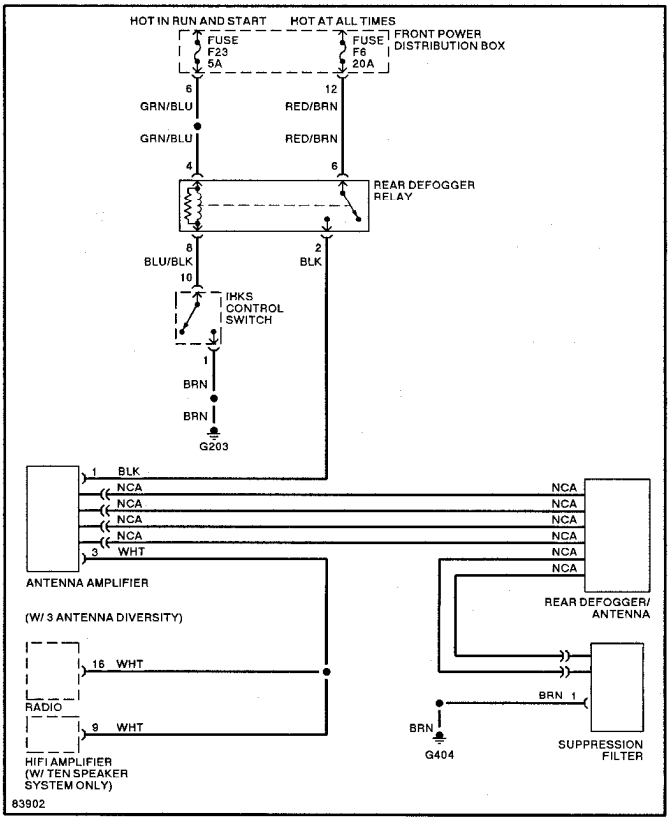


1995-96 318ti

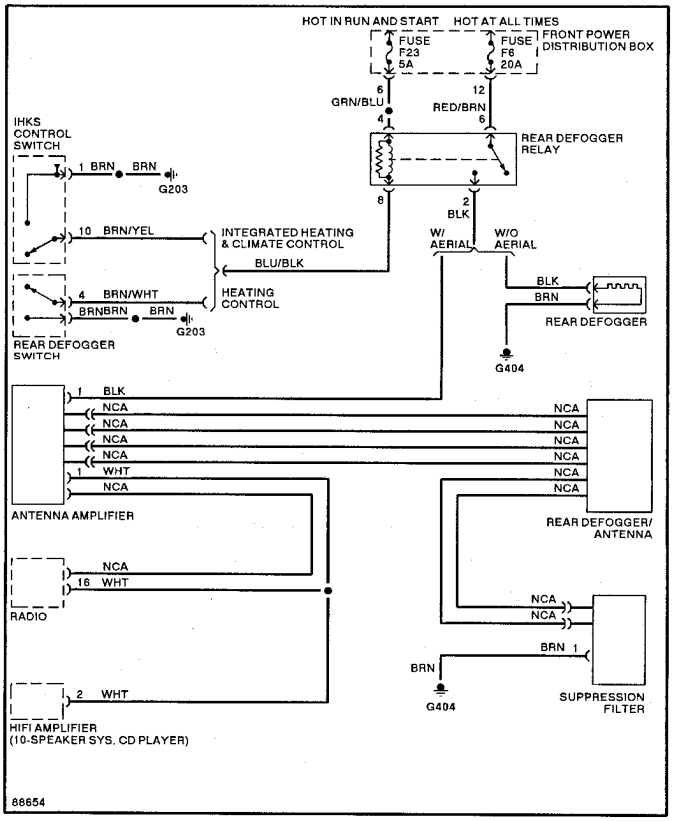


1997 318ti

Rear Window Defogger

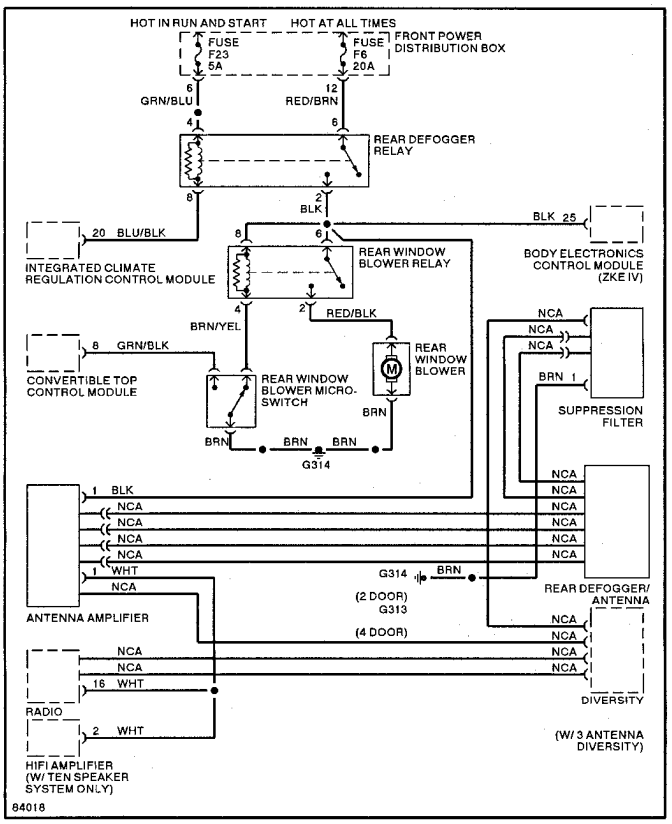


1994-96 Convertible

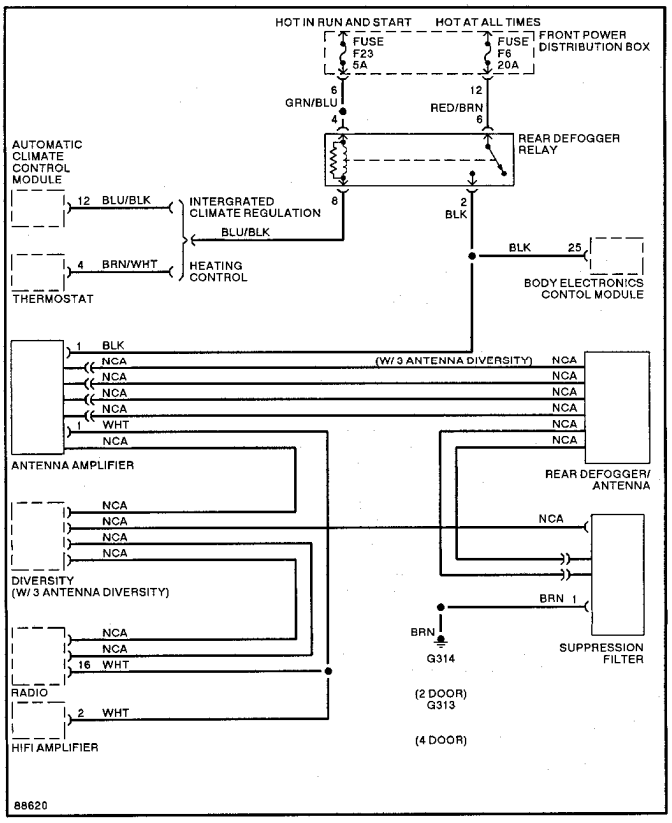


1997 Except 318ti

Rear Window Defogger

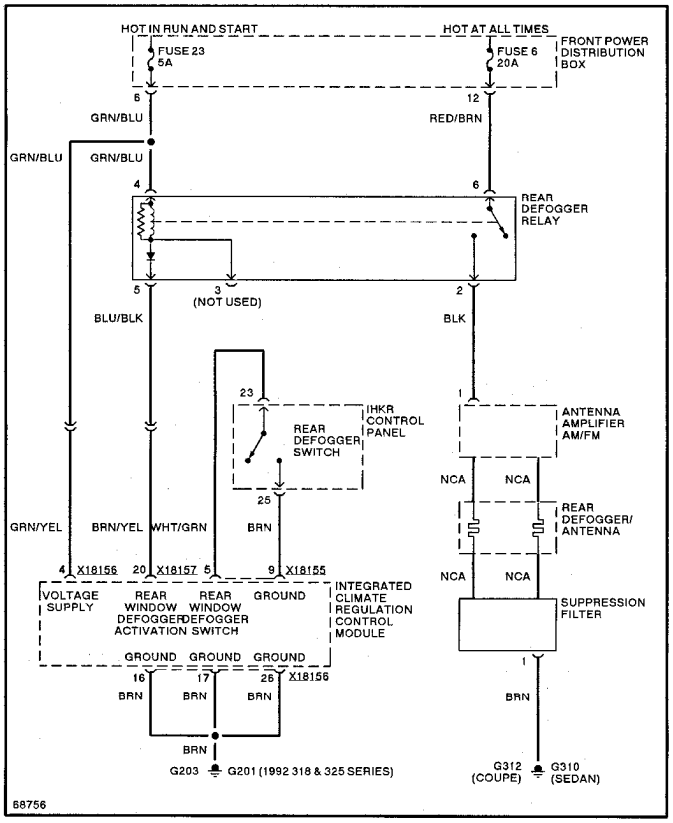


1992-93

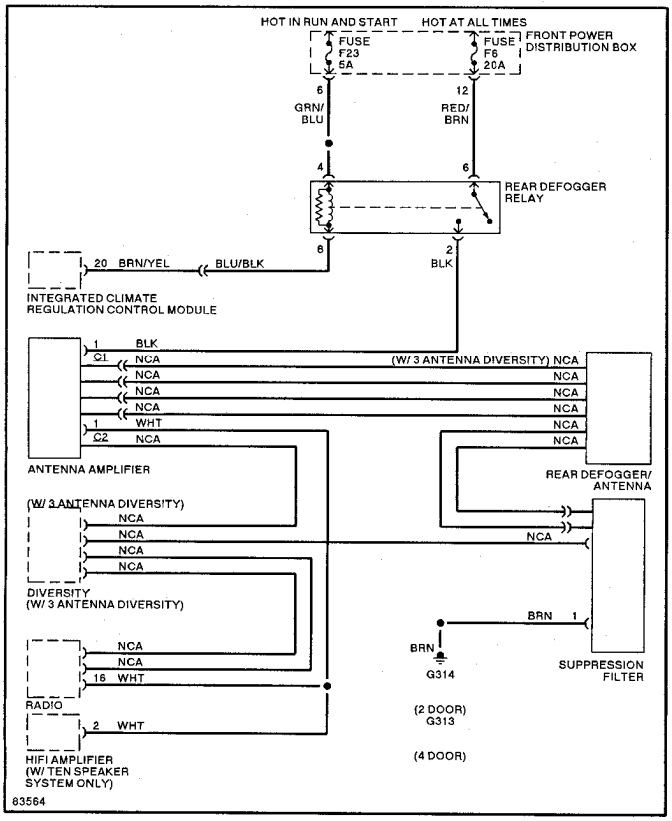


1994-96 Except 318ti & Convertible

Wiper/Washer

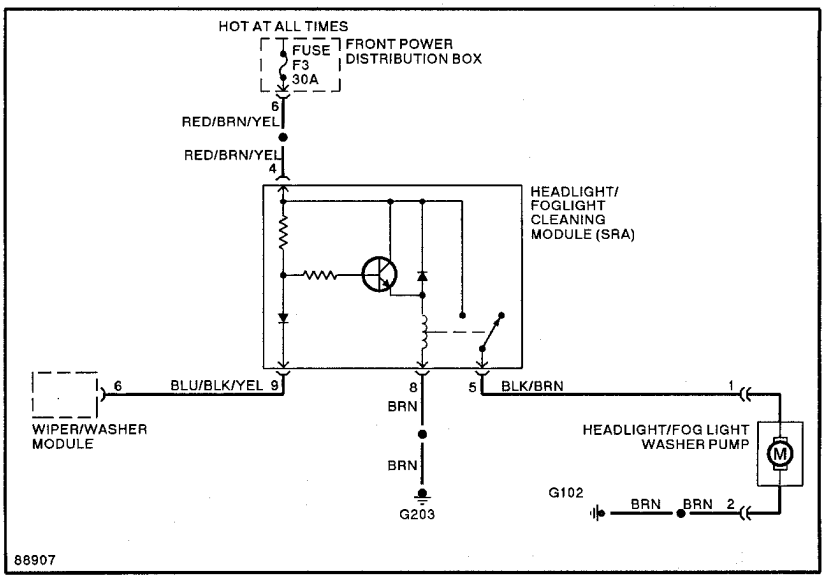


1995-96 Headlight Washer

Wiper/Washer

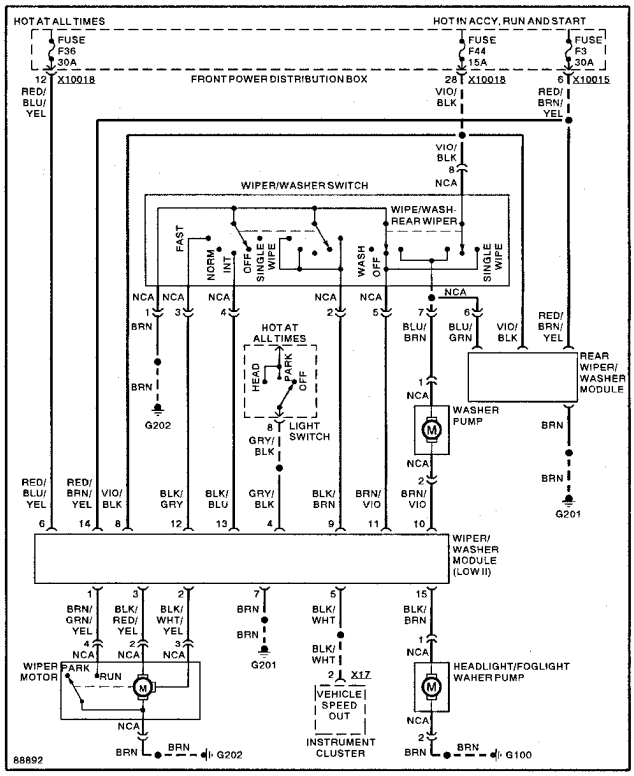


1998 Canada 318ti

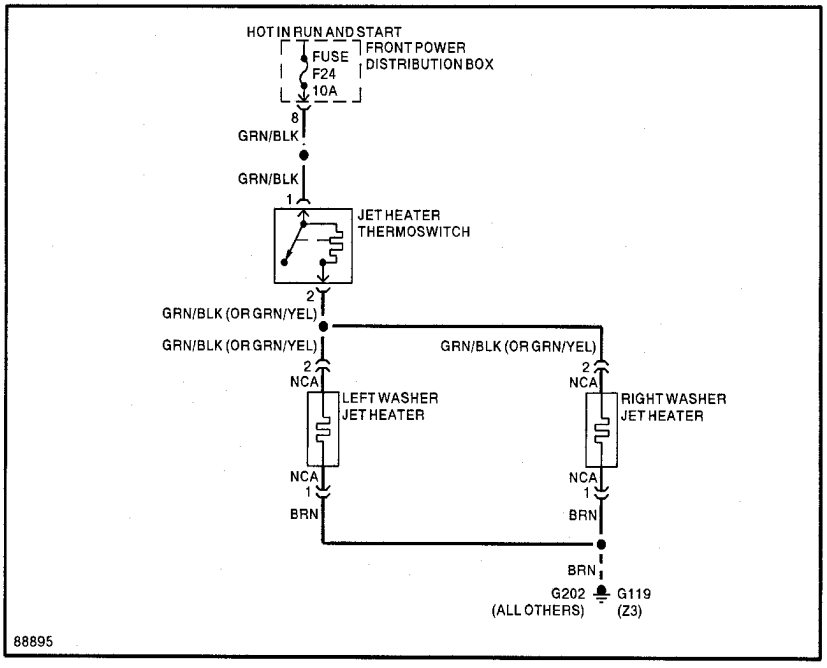


1993-98 Washer Jet Heater

Wiper/Washer

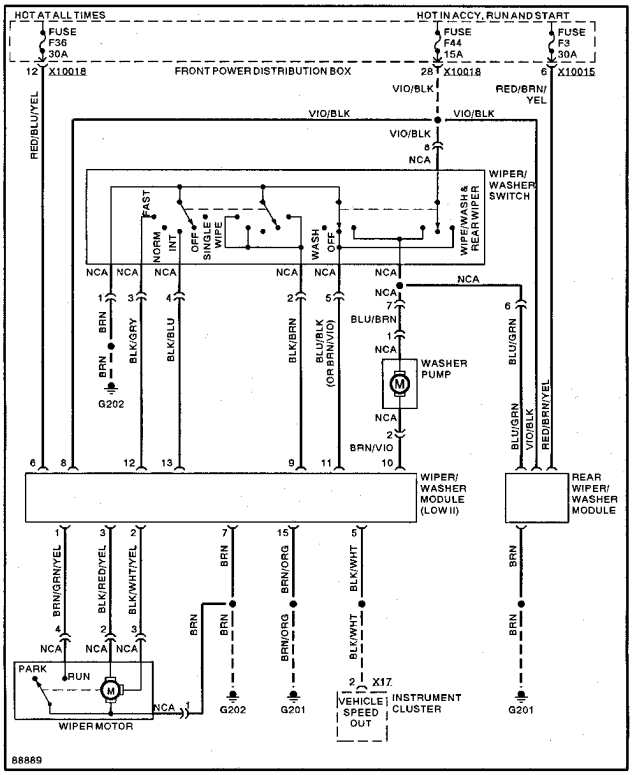


1995-98 USA 318ti

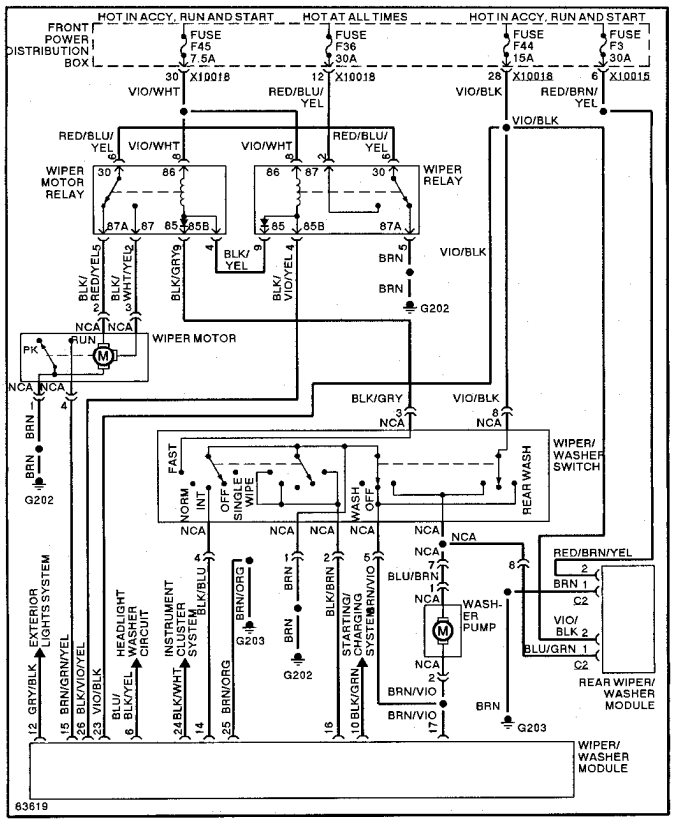


1995-96 Canada 318ti

Wiper/Washer


1992-96 Canada Except 318ti

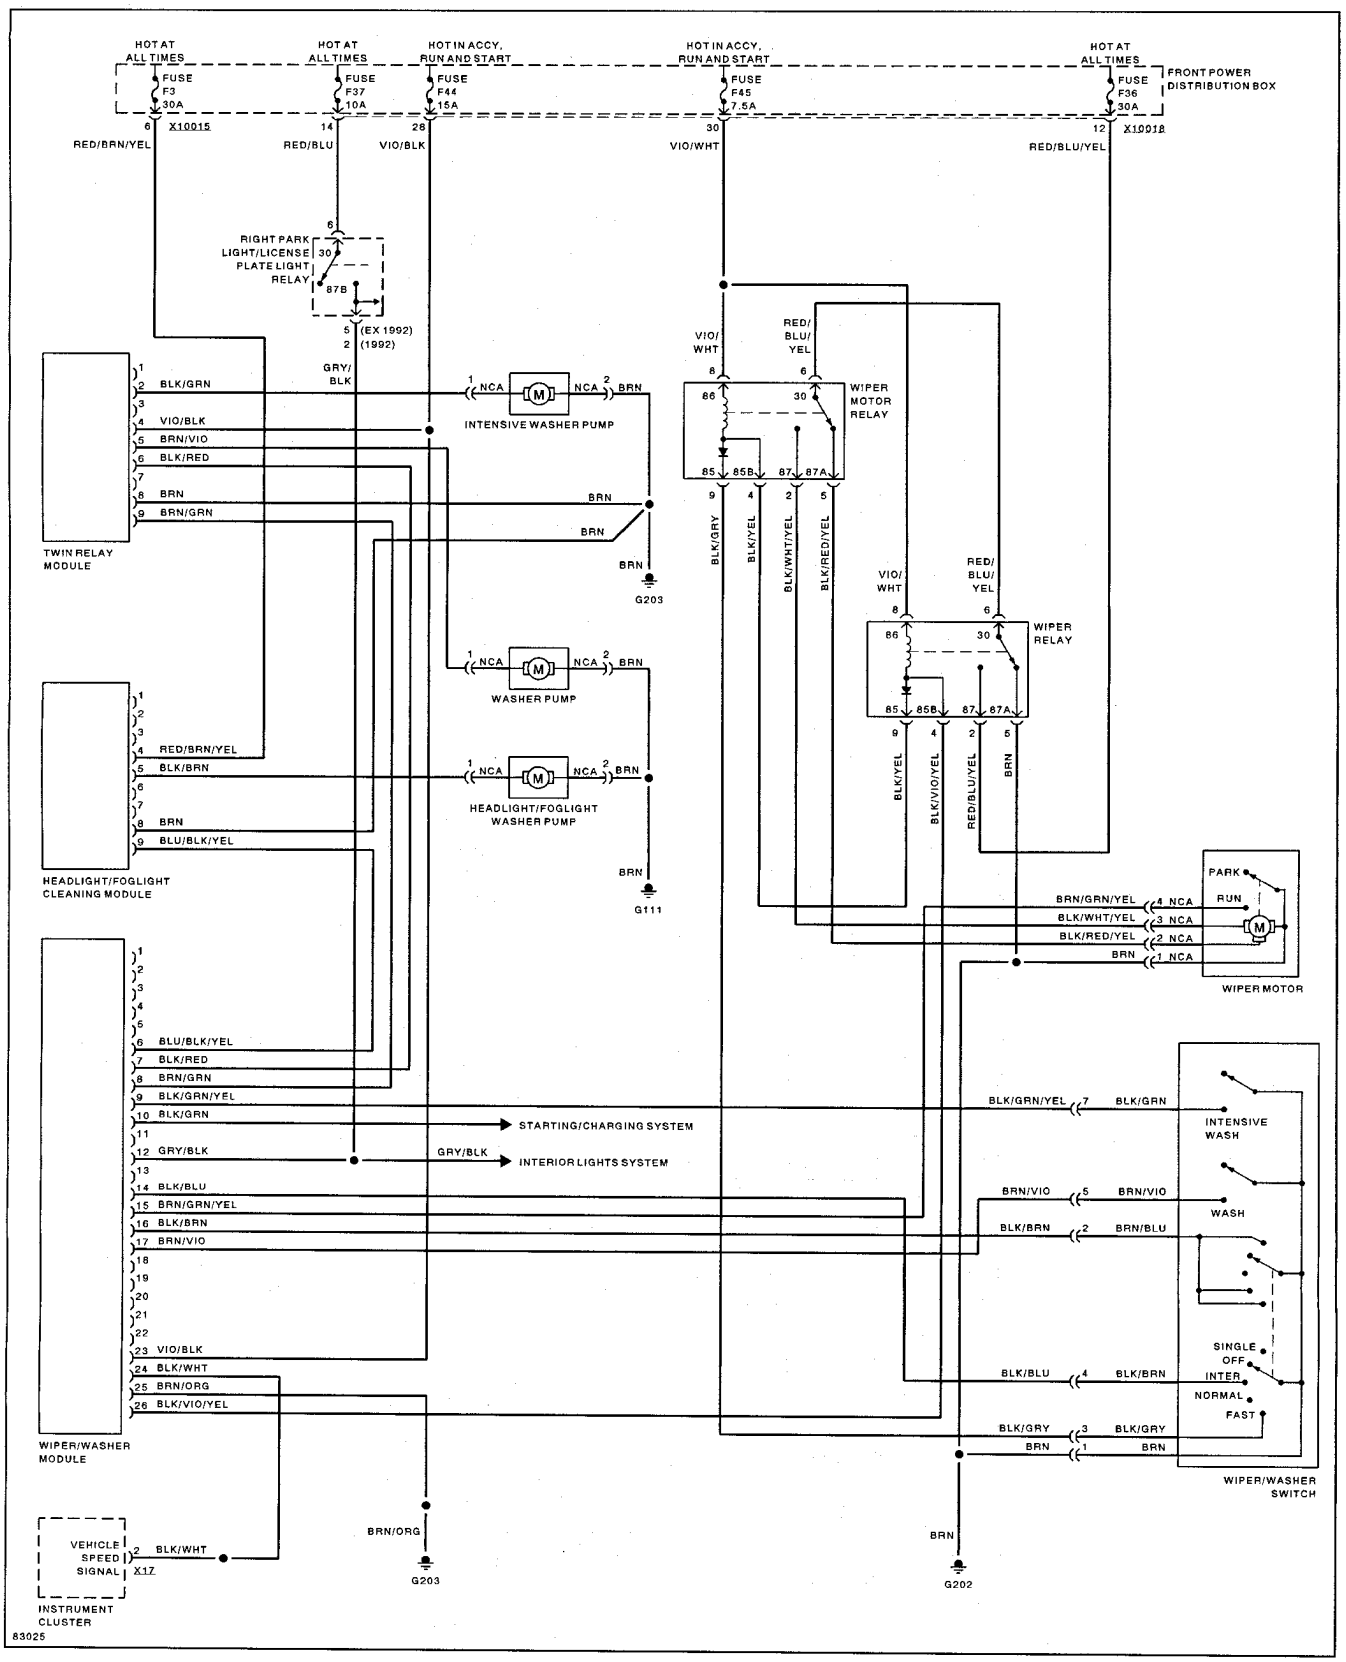

Wiper/Washer

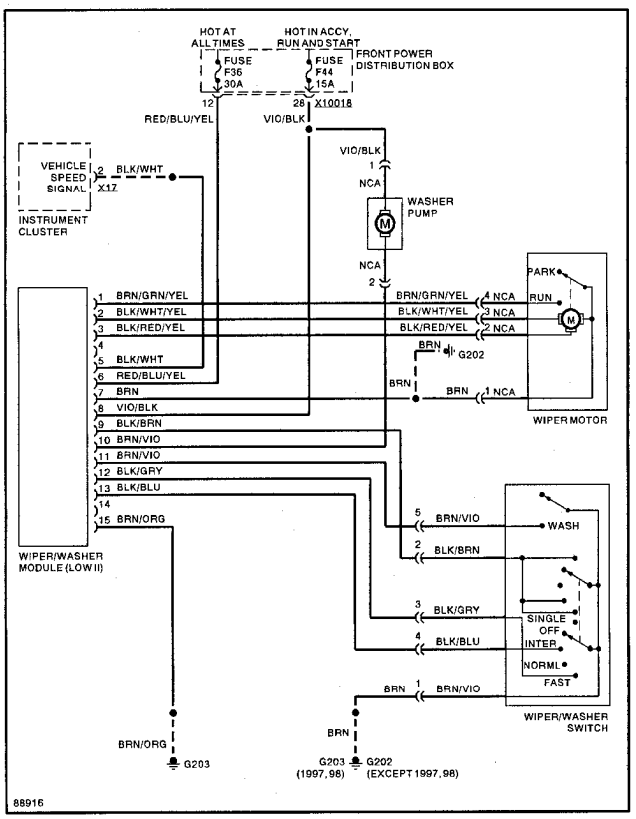


1992-98 USA
Except 318ti

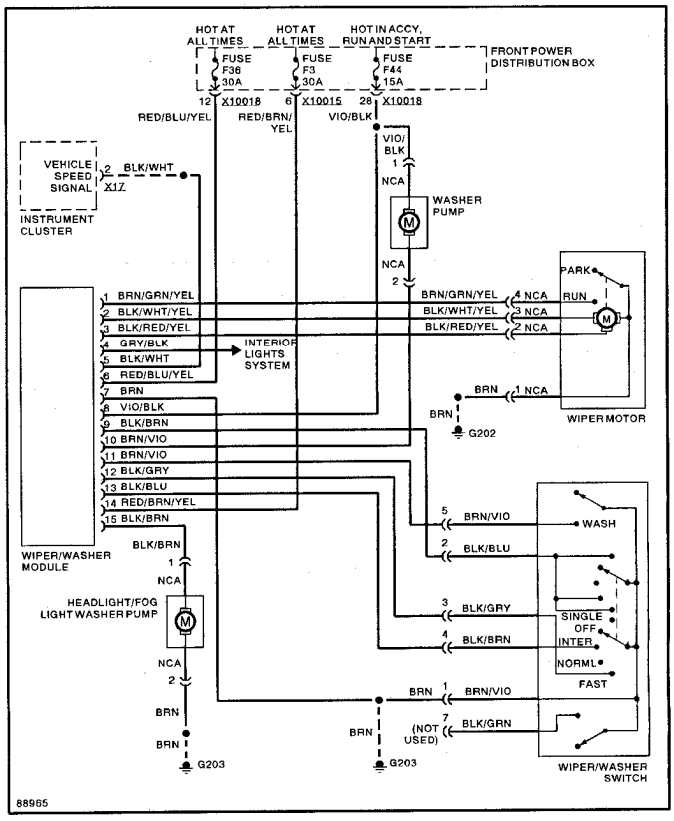


1998 Canada
Except 318ti

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Horns

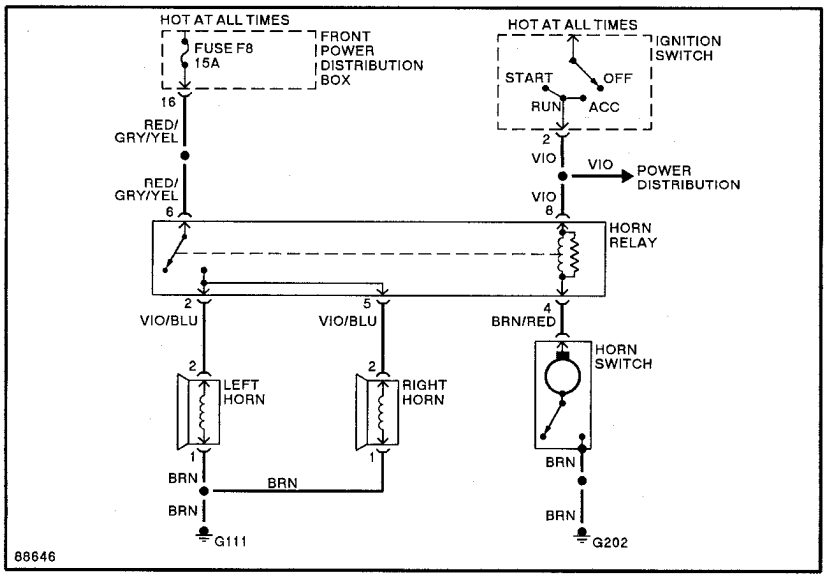


1997

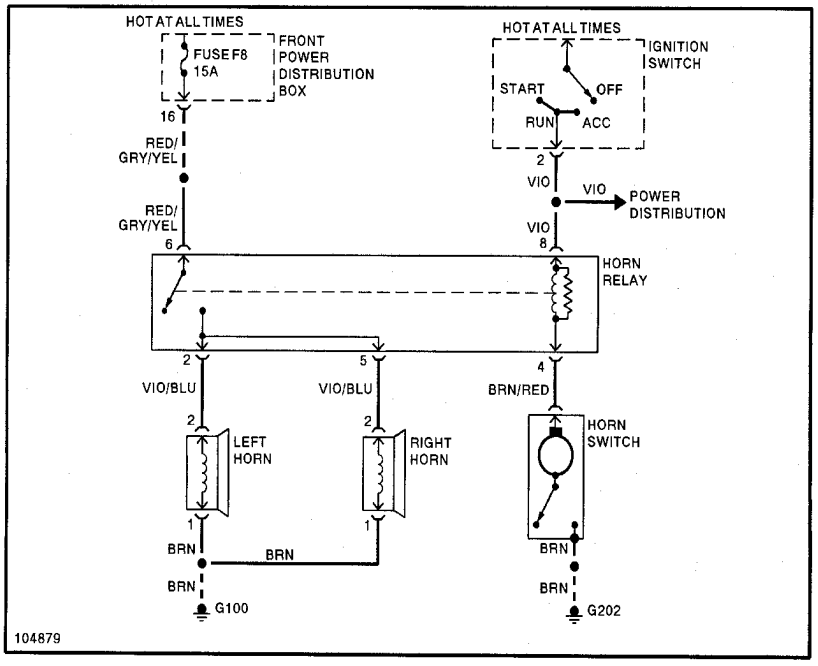


1998

Horns

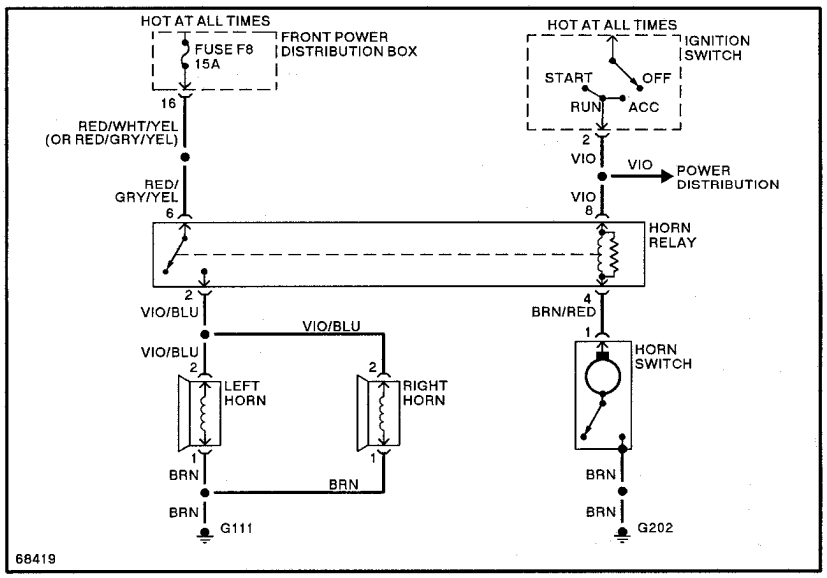


1992-93

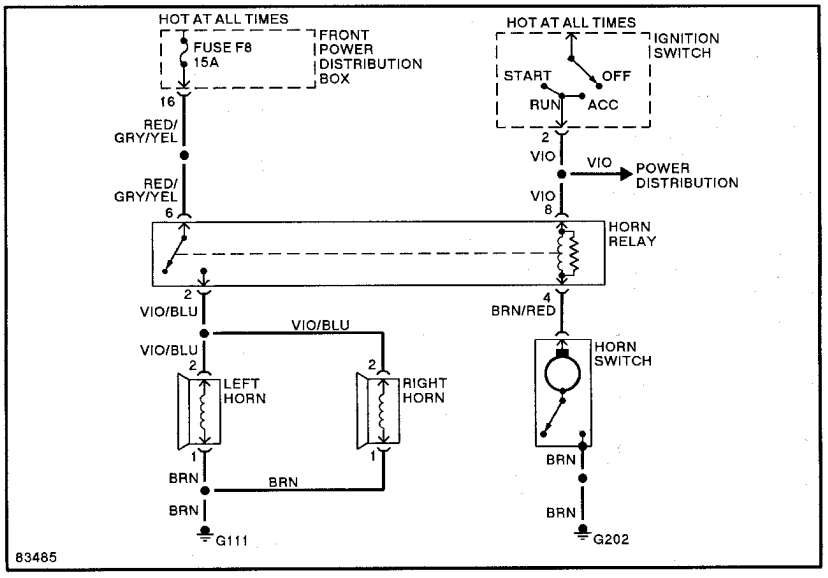

1994-96


Anti-Theft Forced Entry

1998 318ti

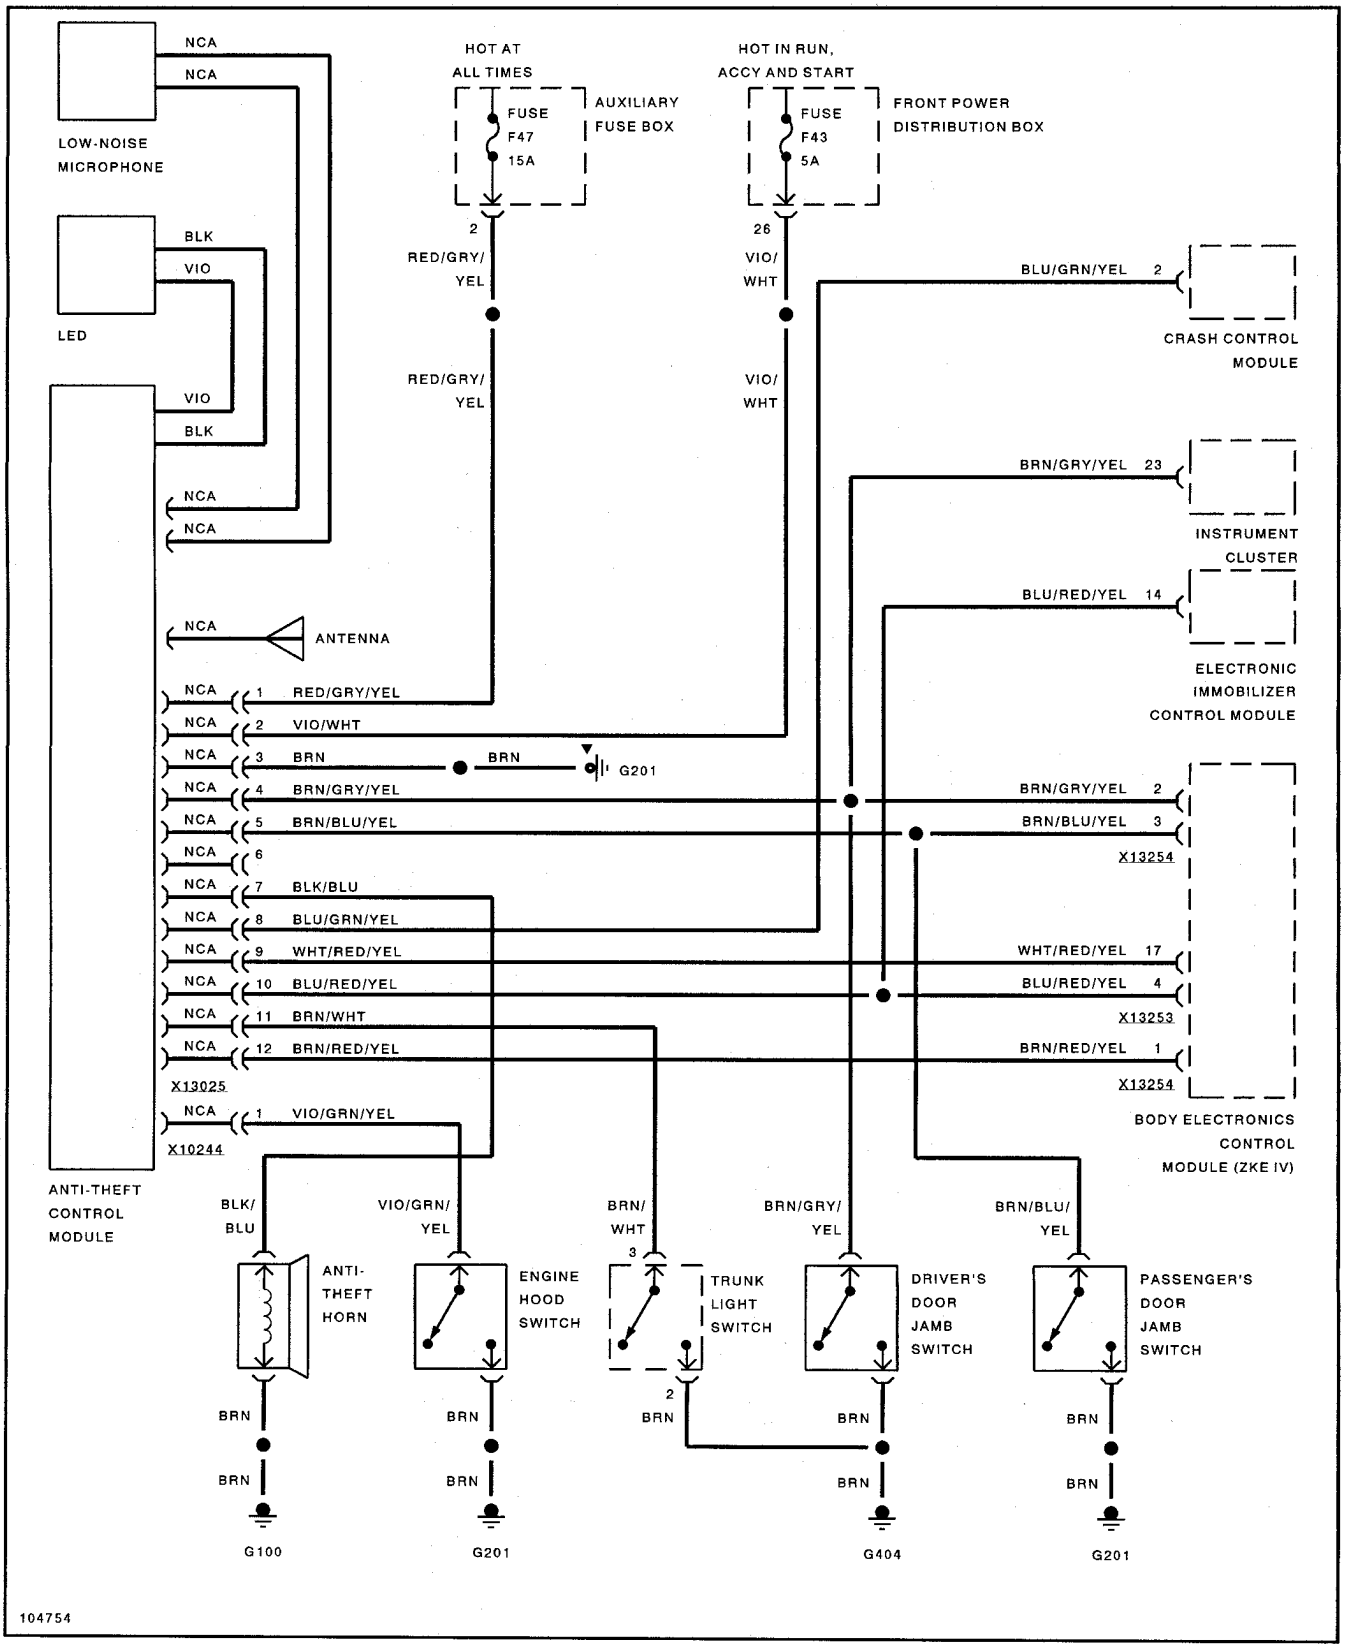

Anti-Theft Forced Entry


1998 Except 318ti

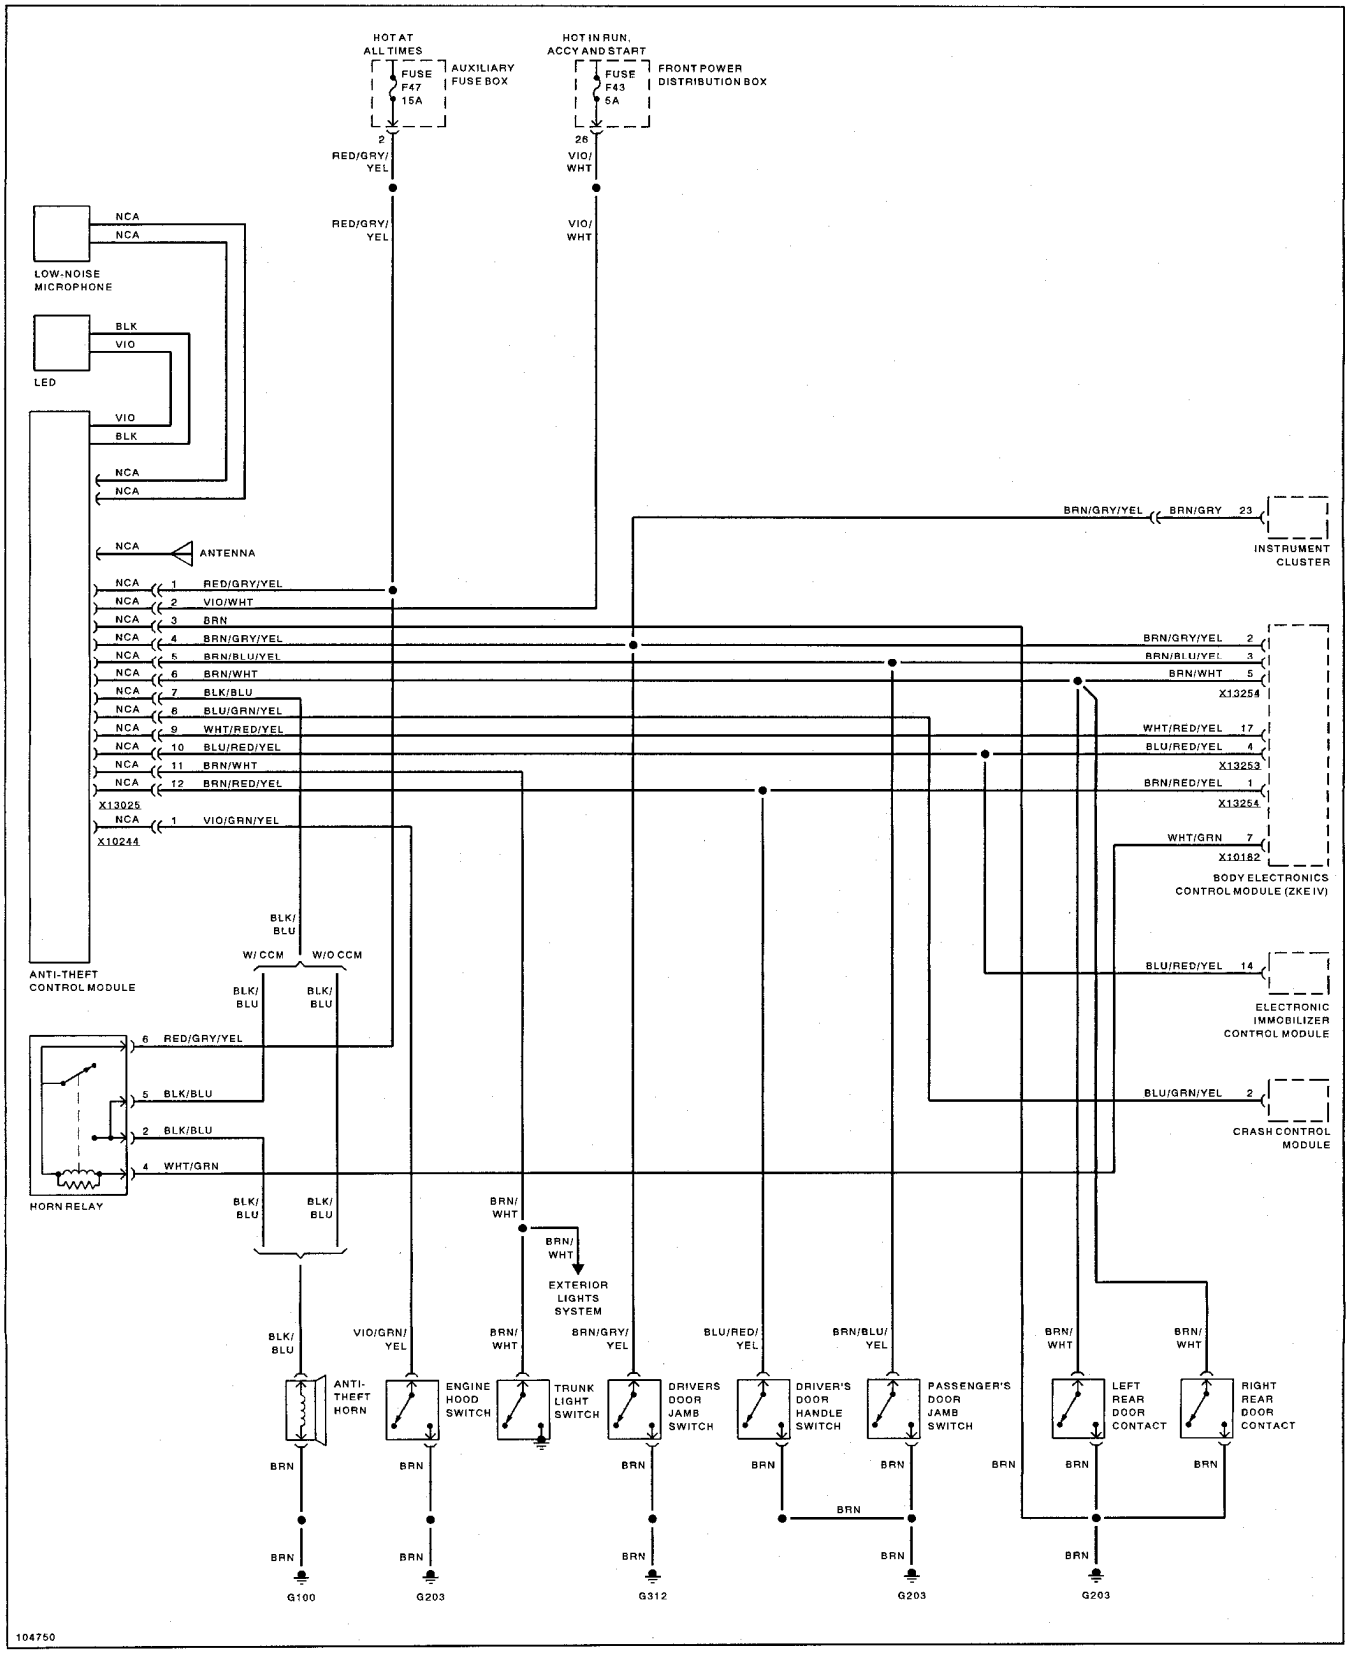


Anti-Theft

1995-98

EWS II

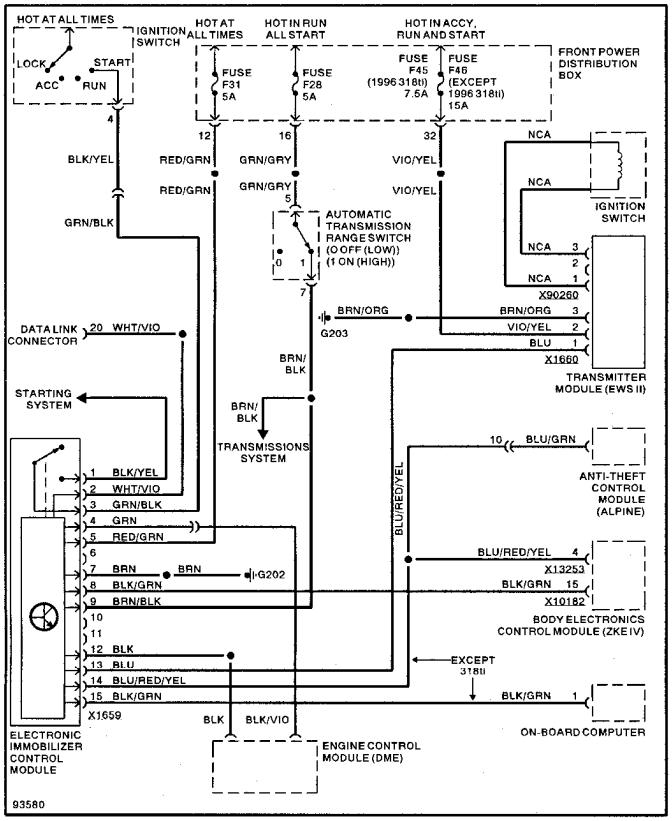


1995-96

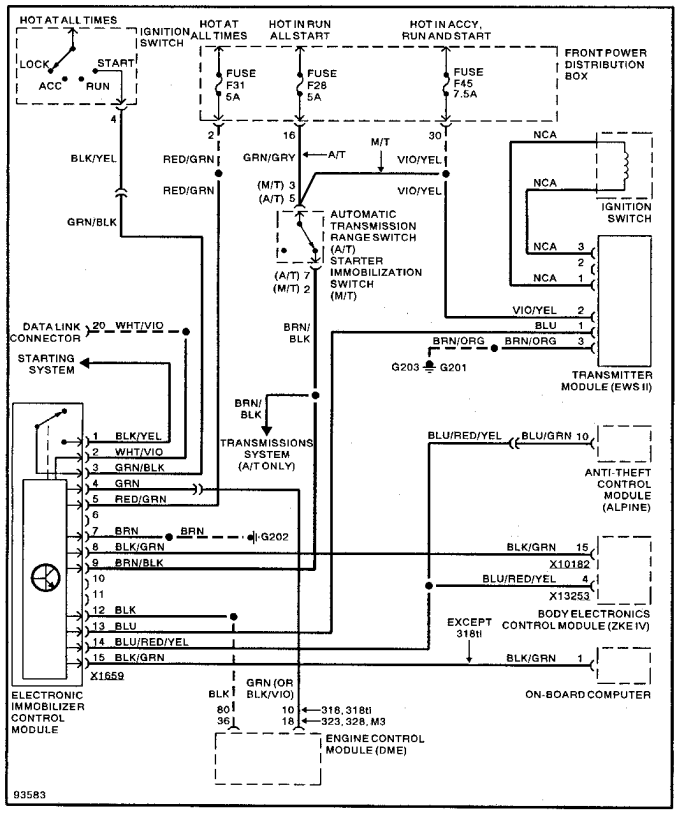

1997–98


Anti-Theft
1995-97 318ti
Alpine System

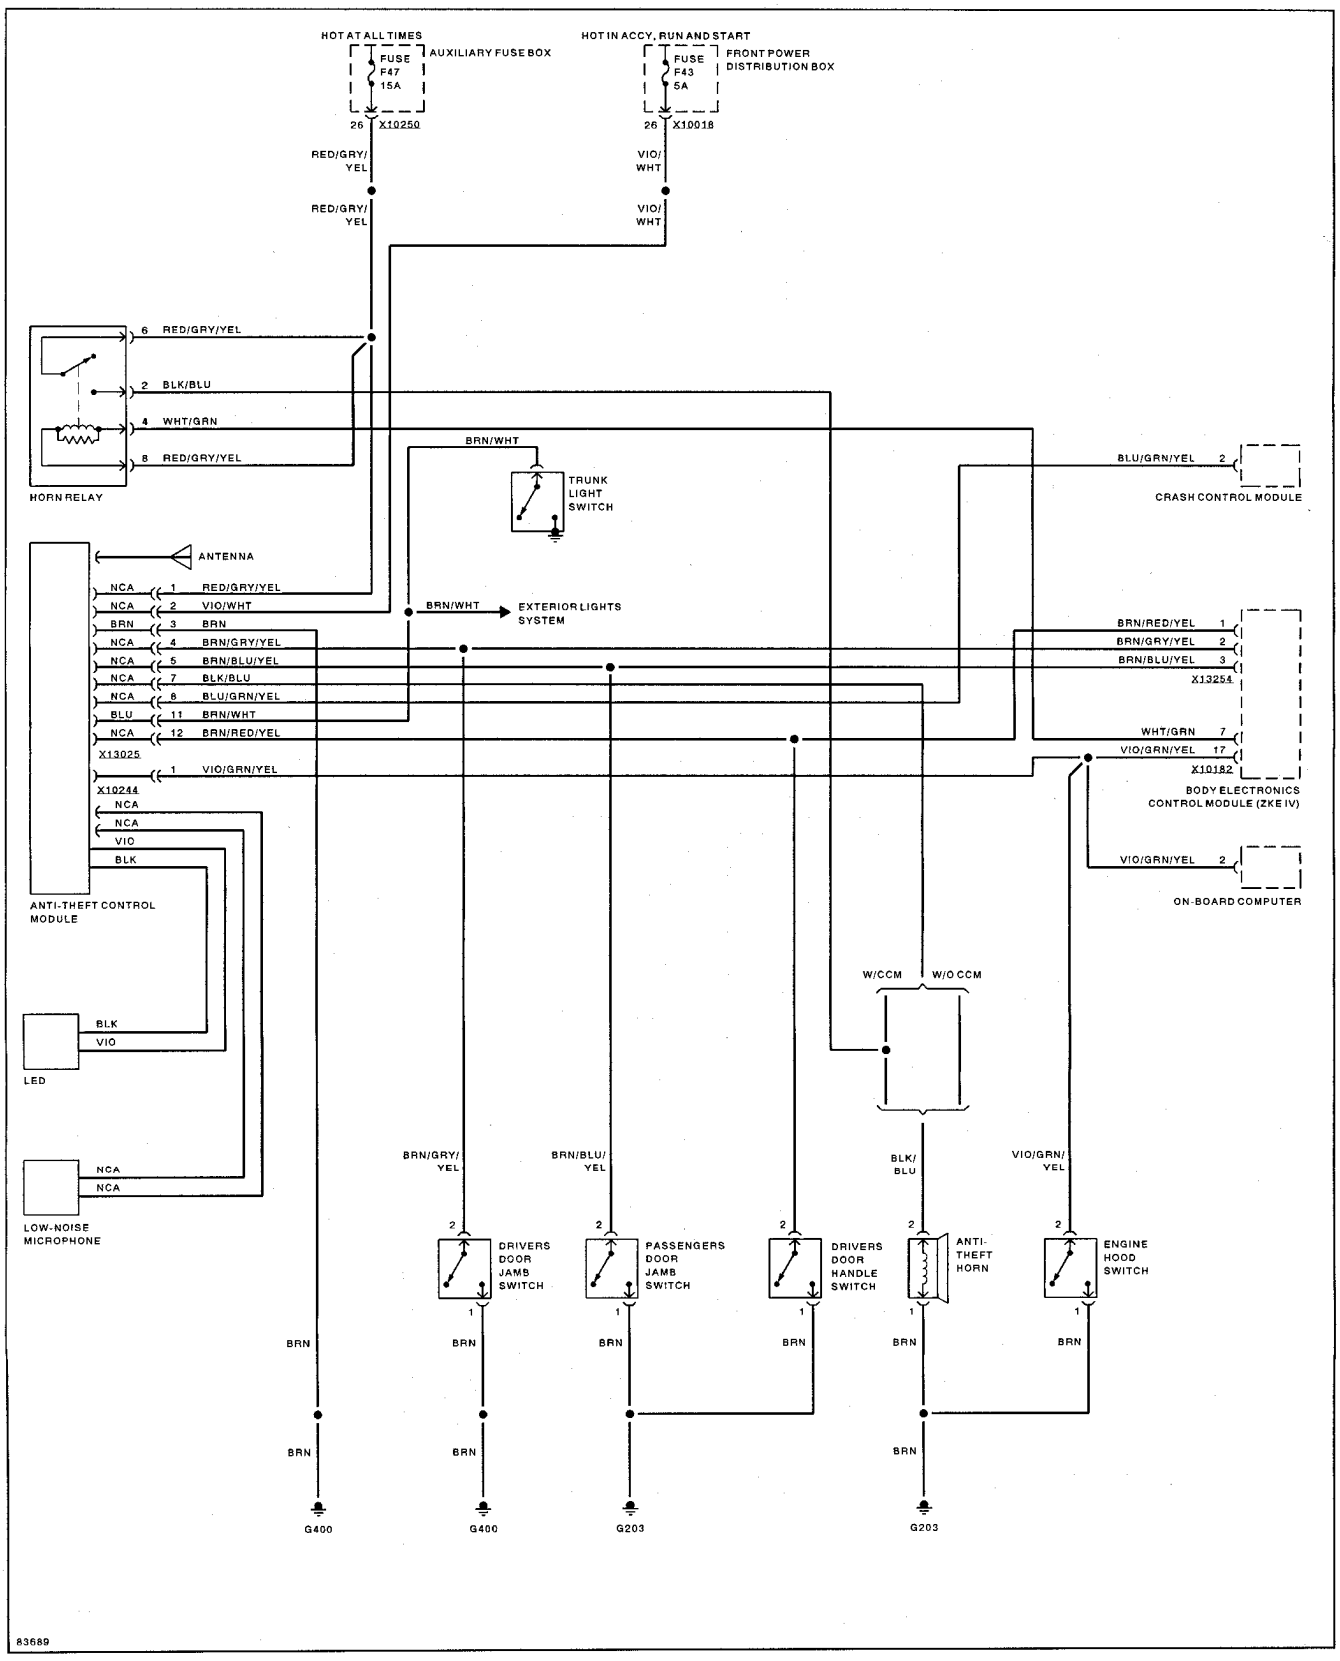


Anti-Theft

1995-97 Except 318ti

Alpine System

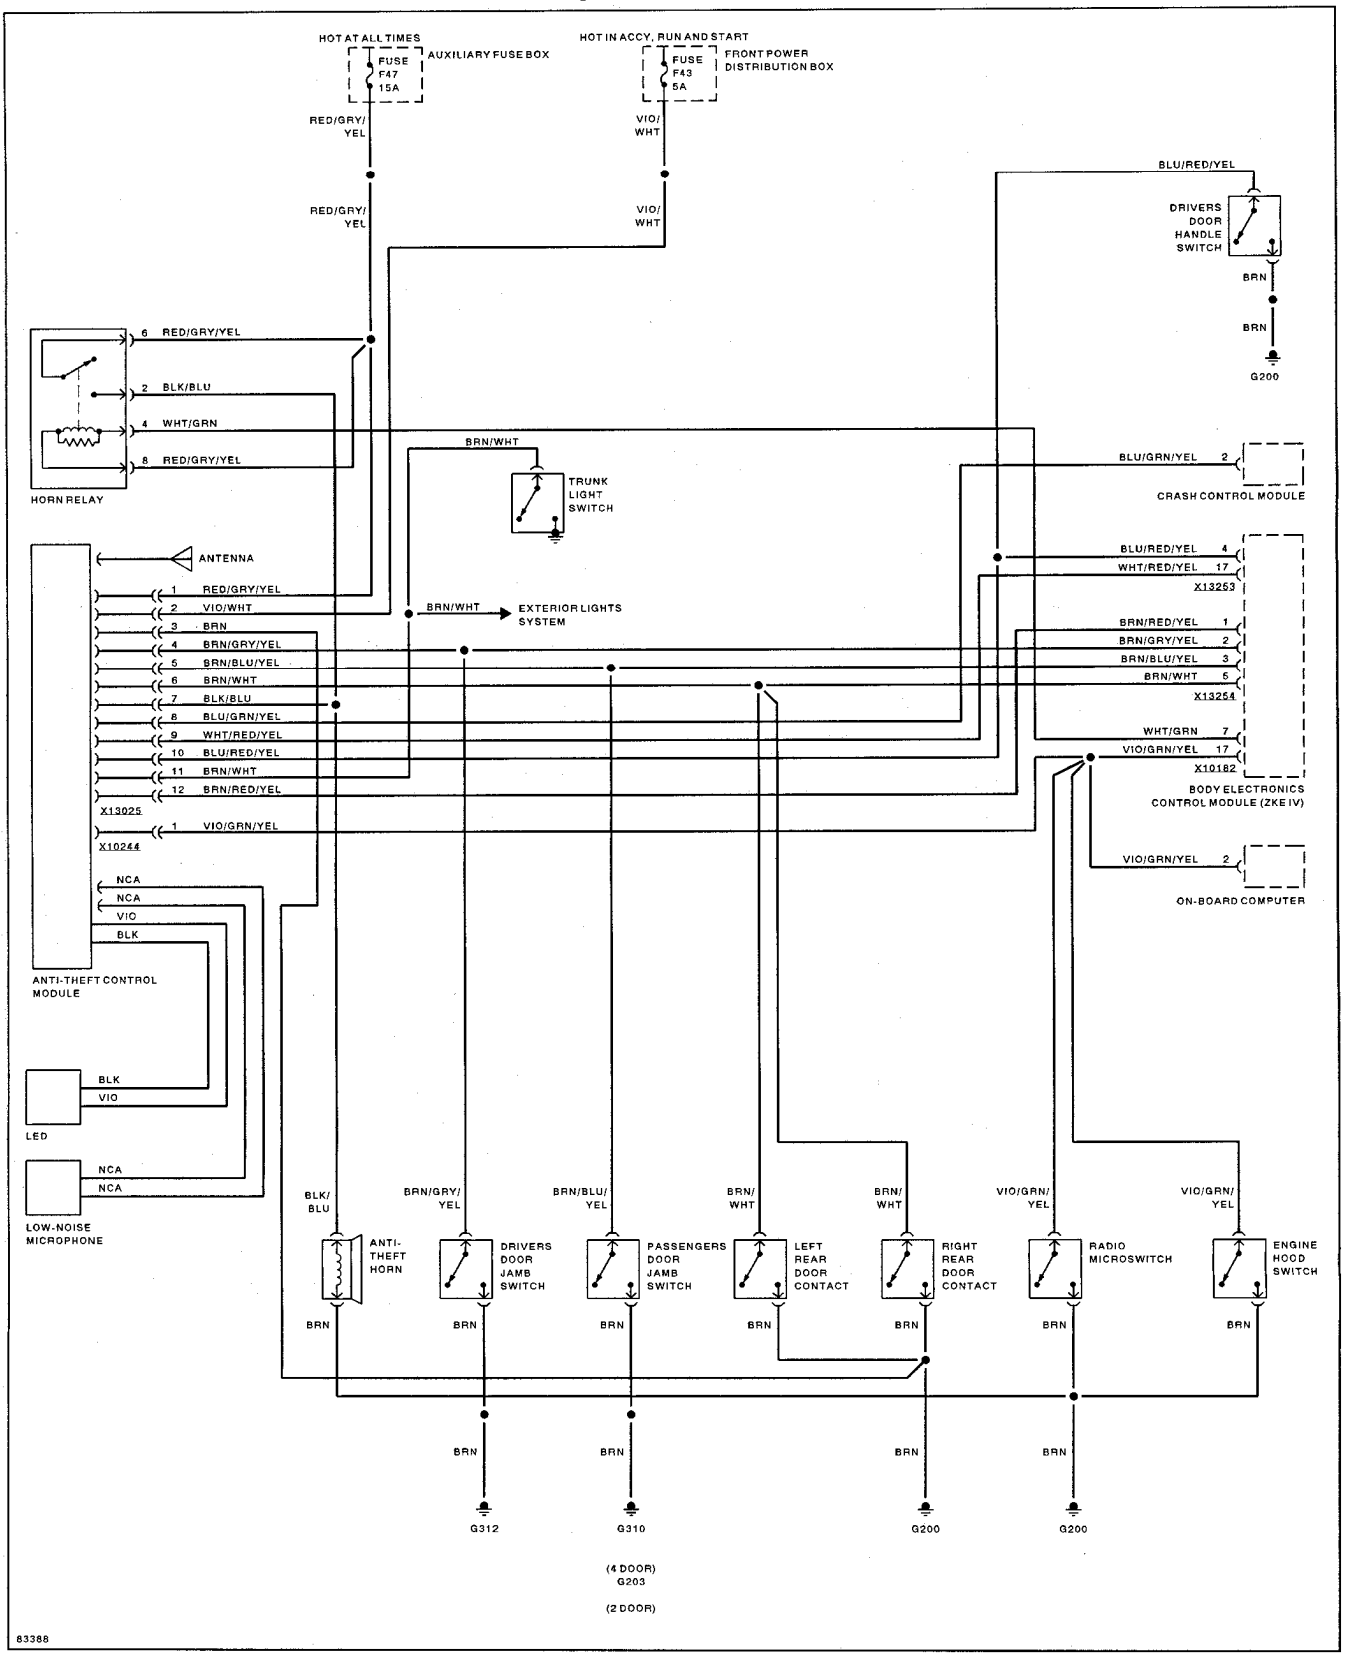


Anti-Theft
1994 Late Production
Alpine System

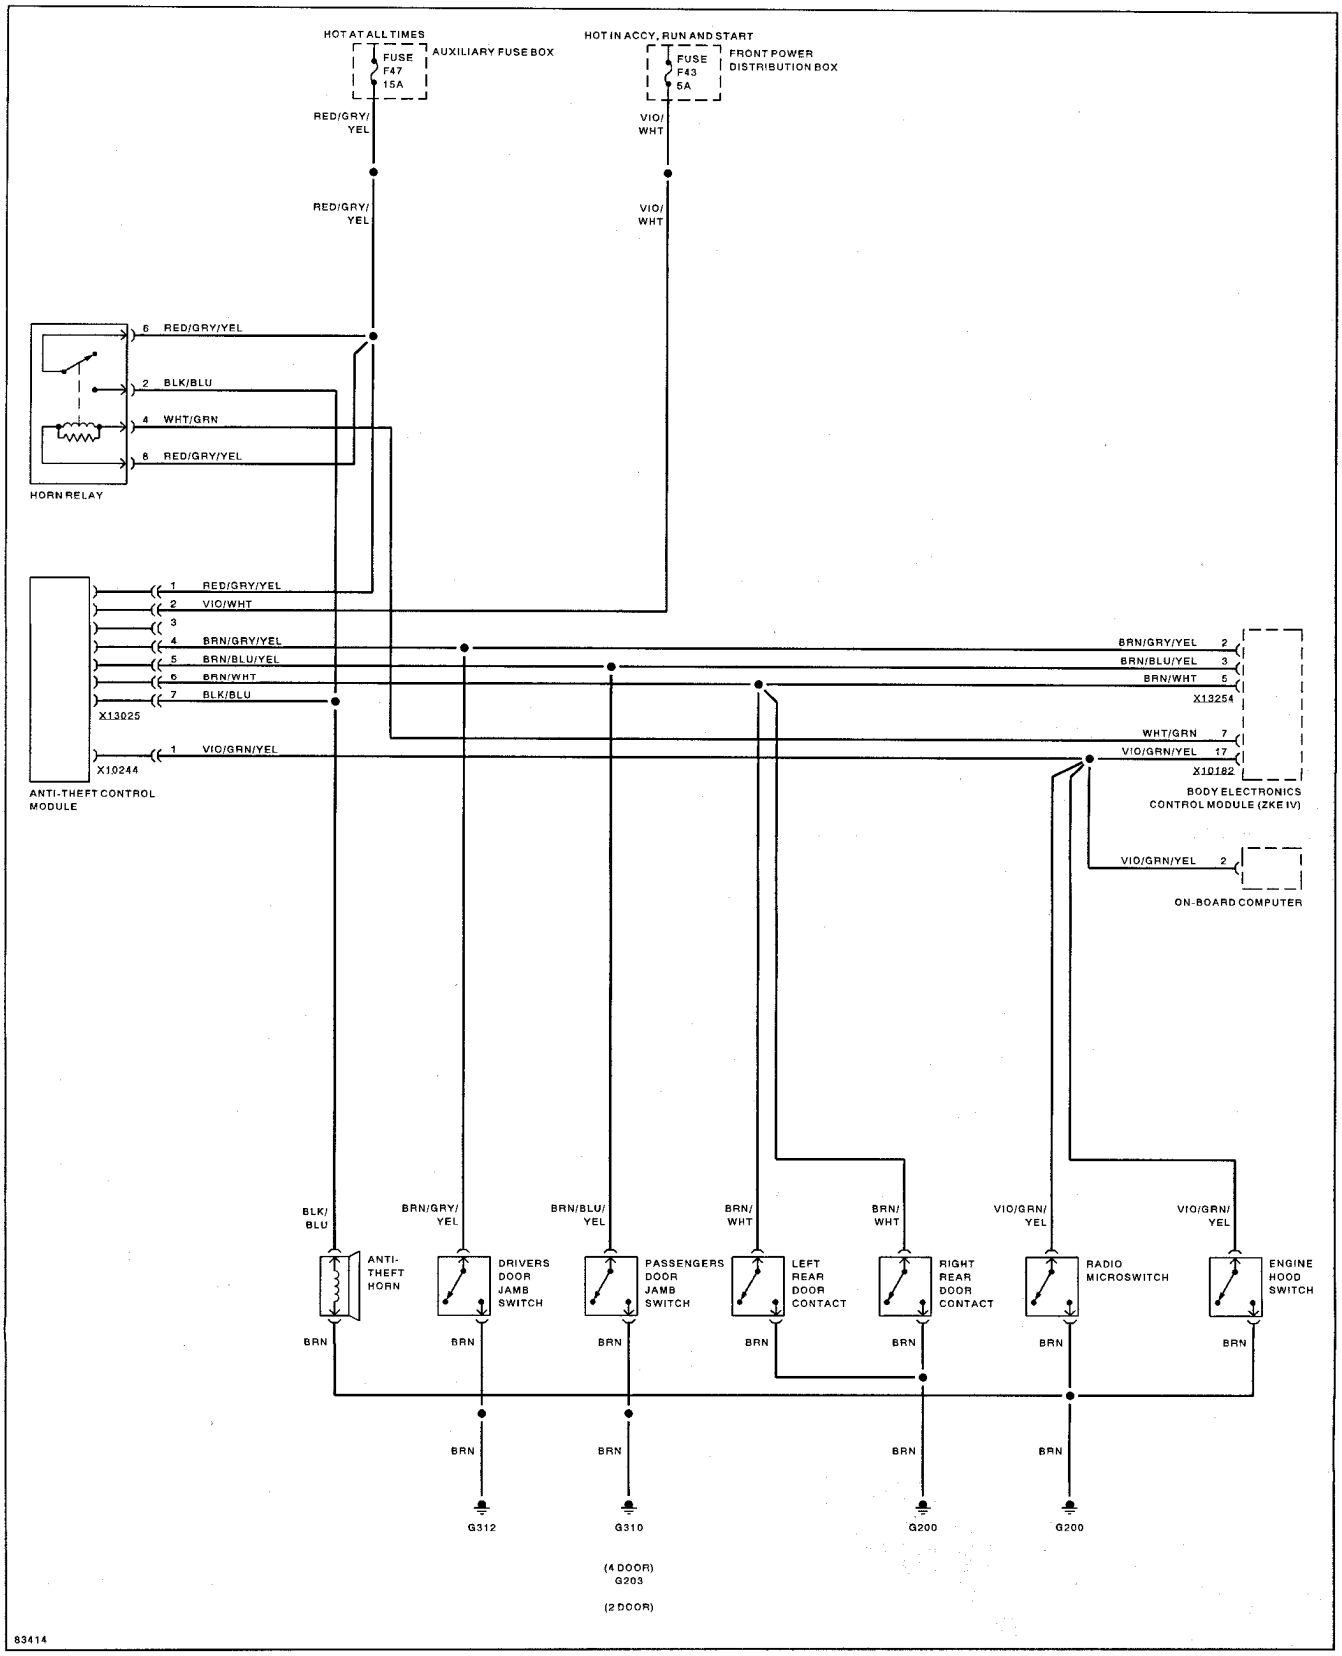

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Anti-Theft
1994 Early Production
Alpine System

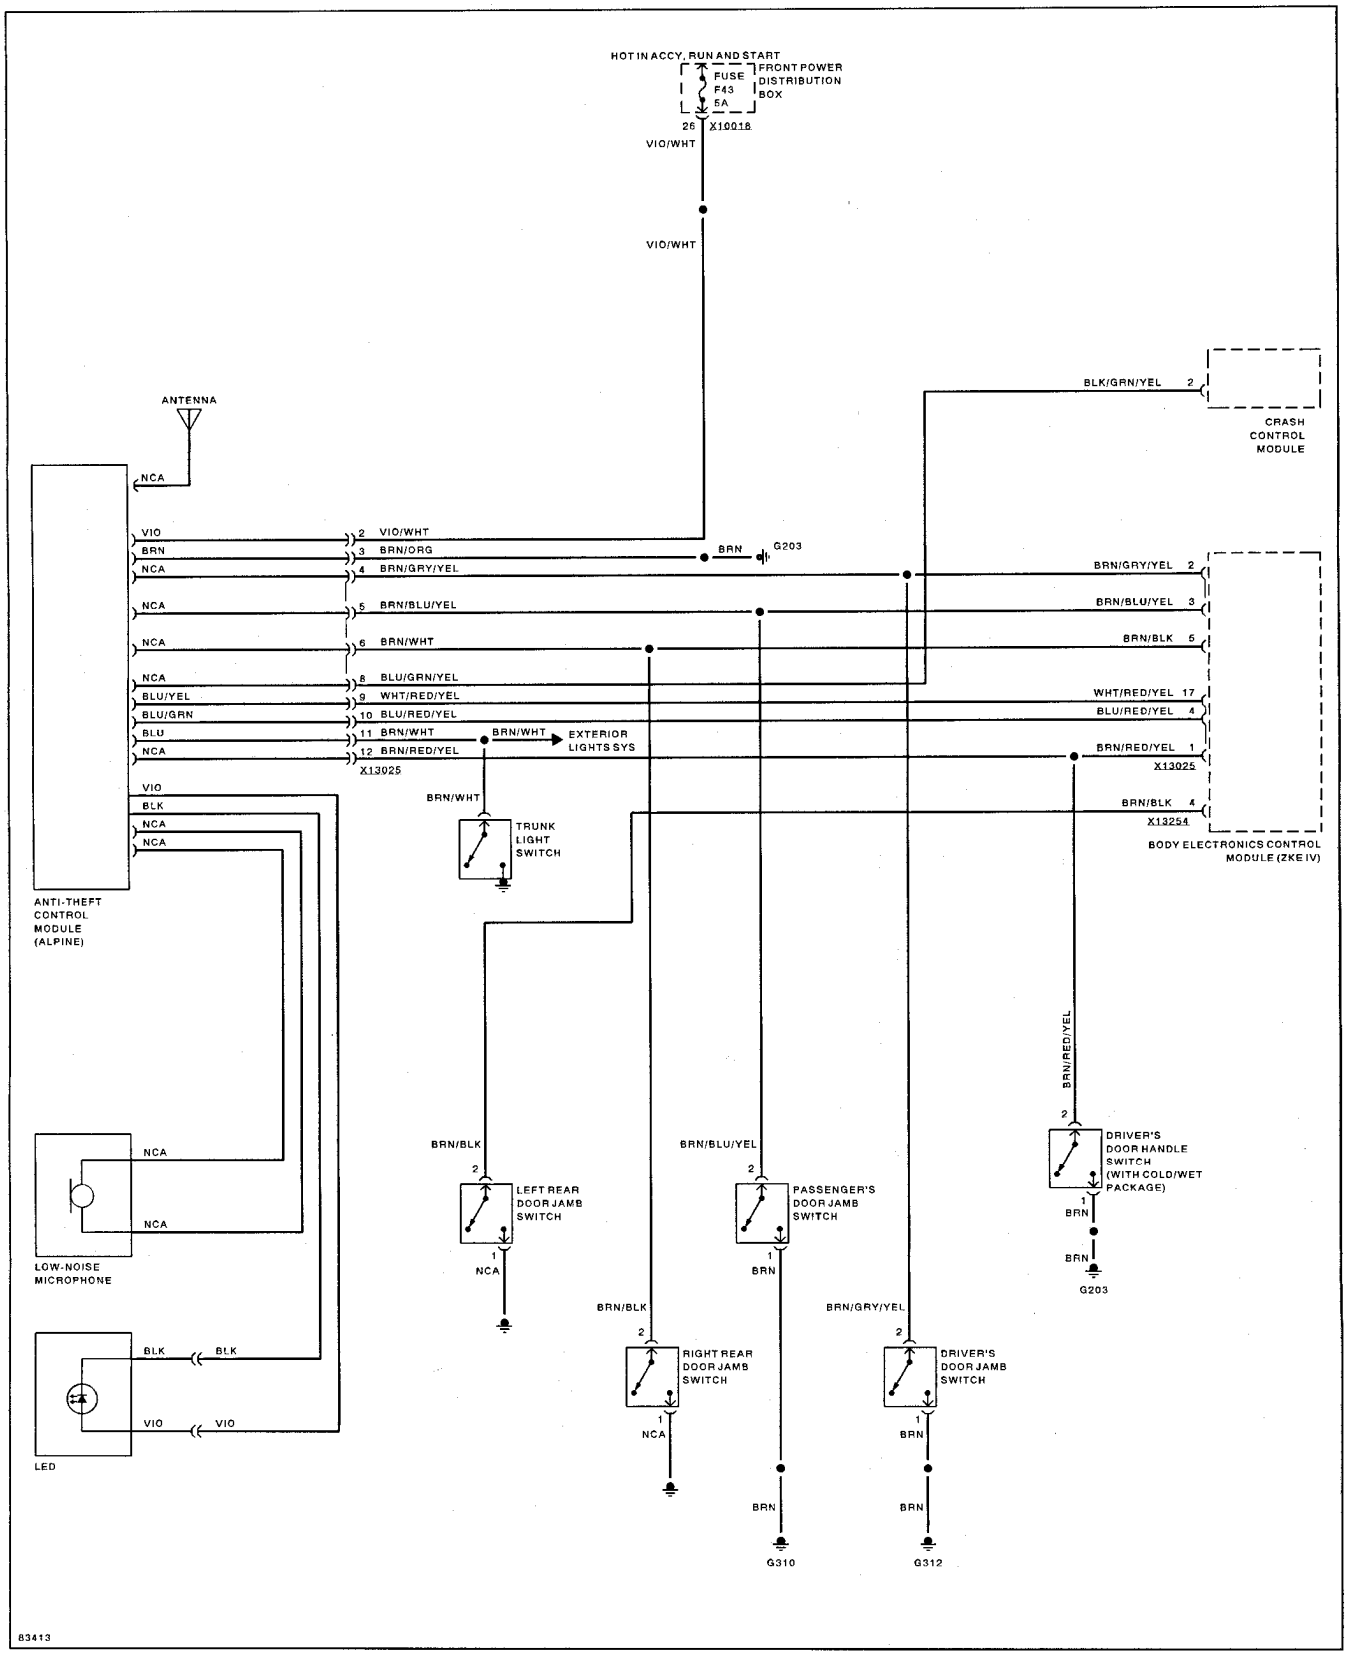

Anti-Theft

1992-93 318is & 325is


Alpine System

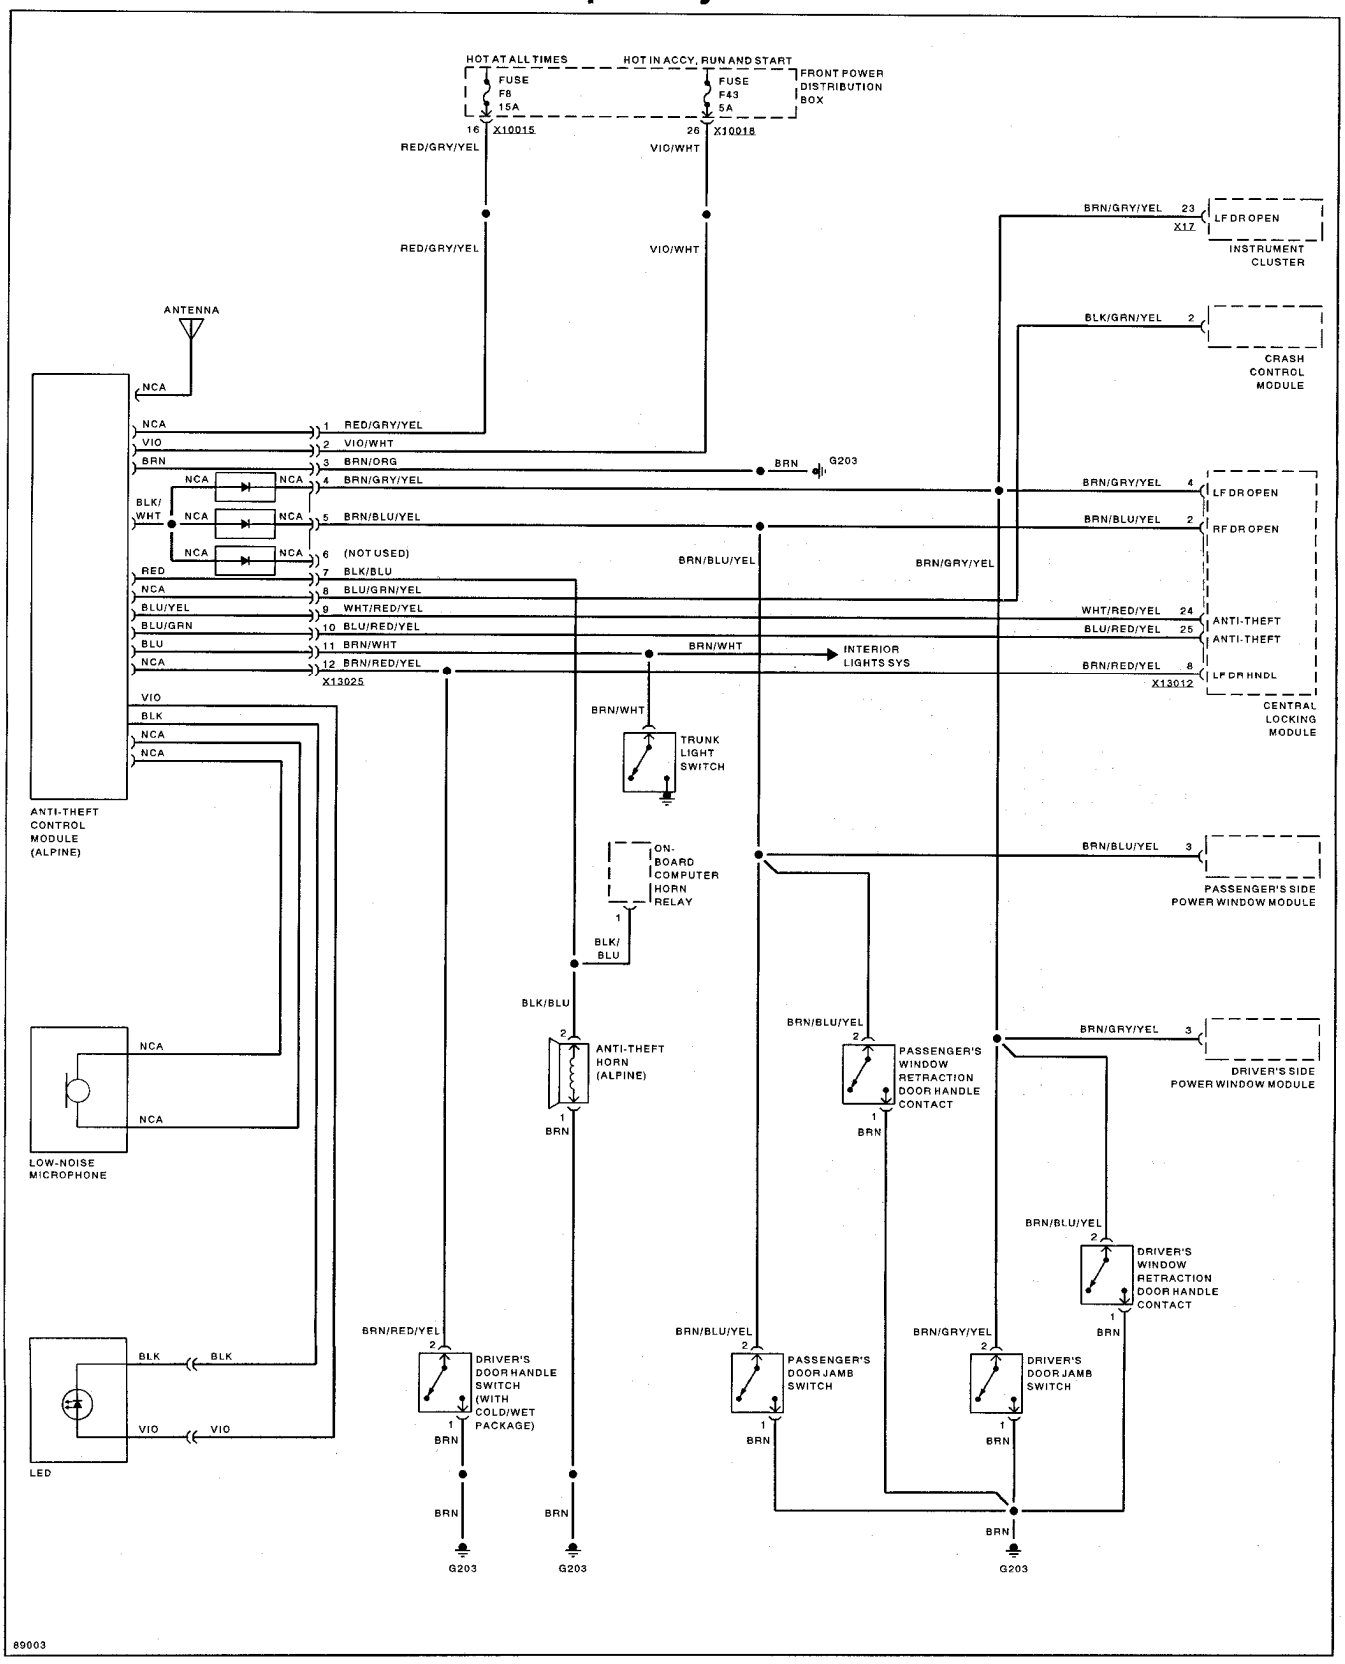

Anti-Theft


1992-93 318i & 325i

Alpine System

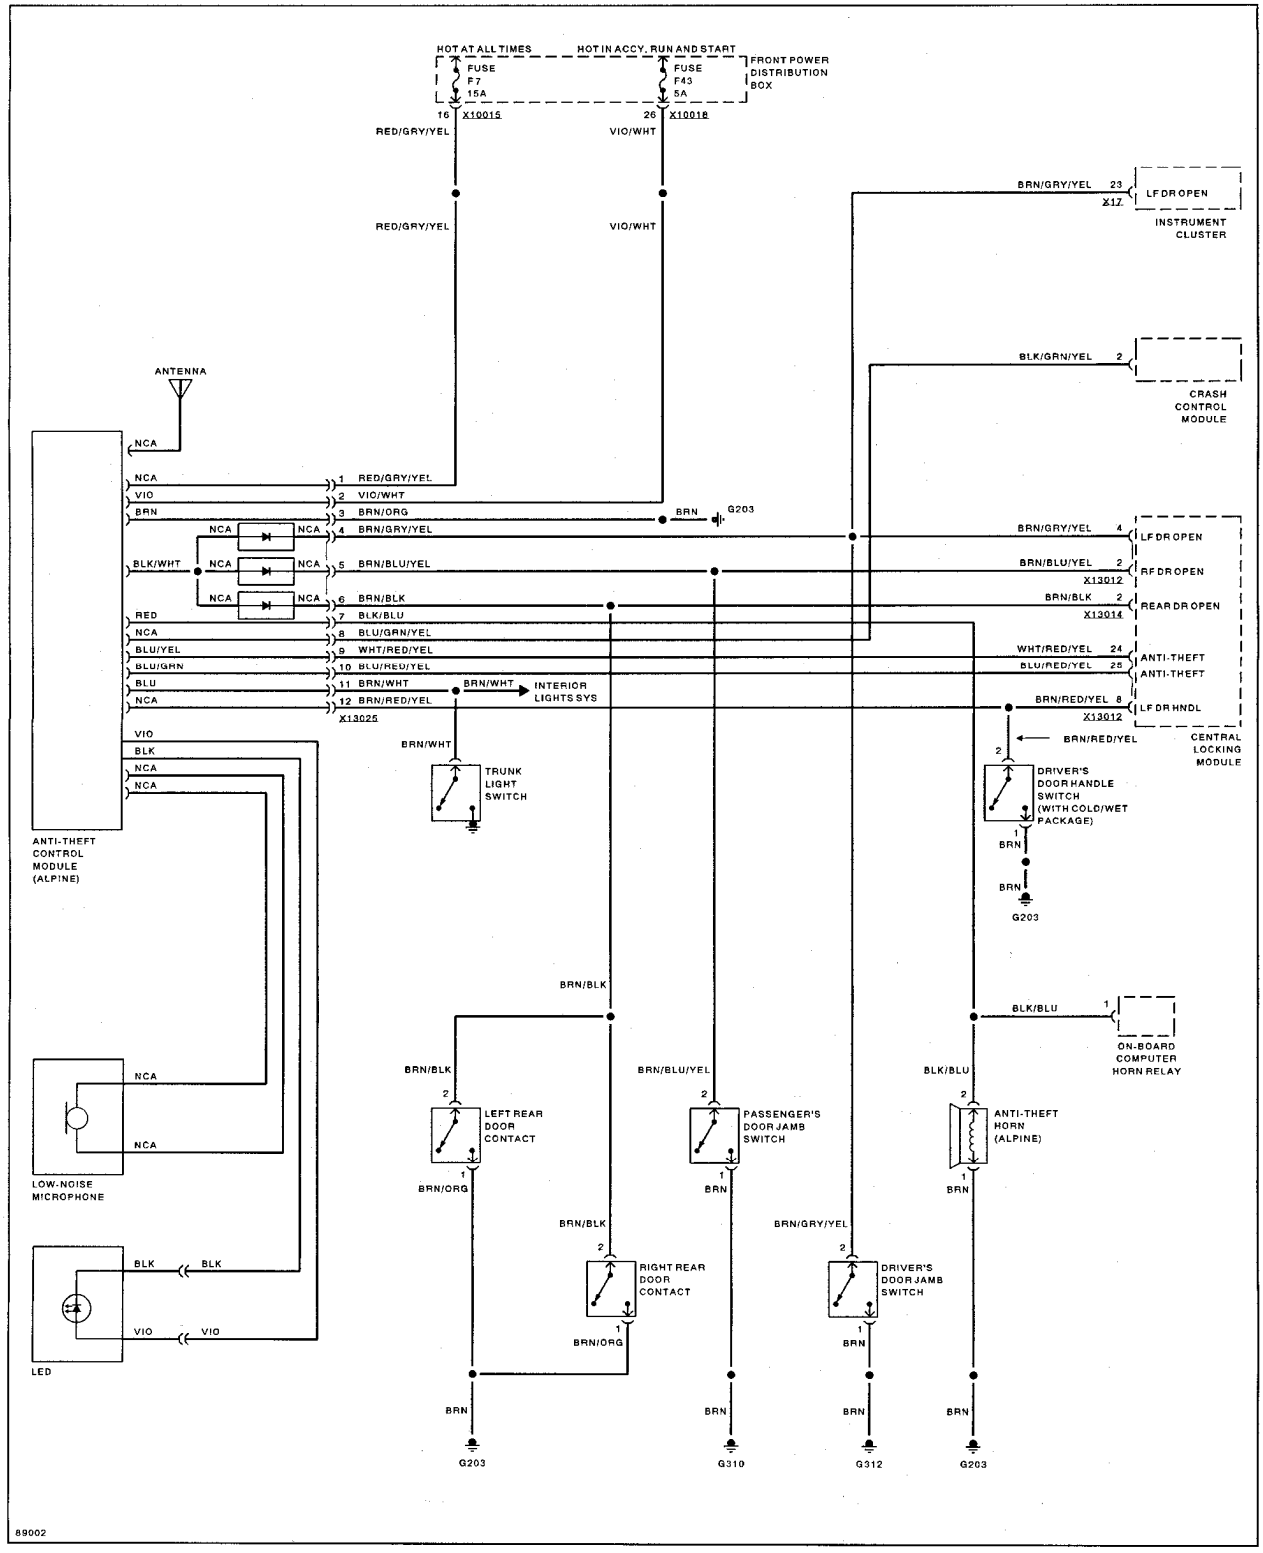


Airbag (Supplemental Restraint System)

1998

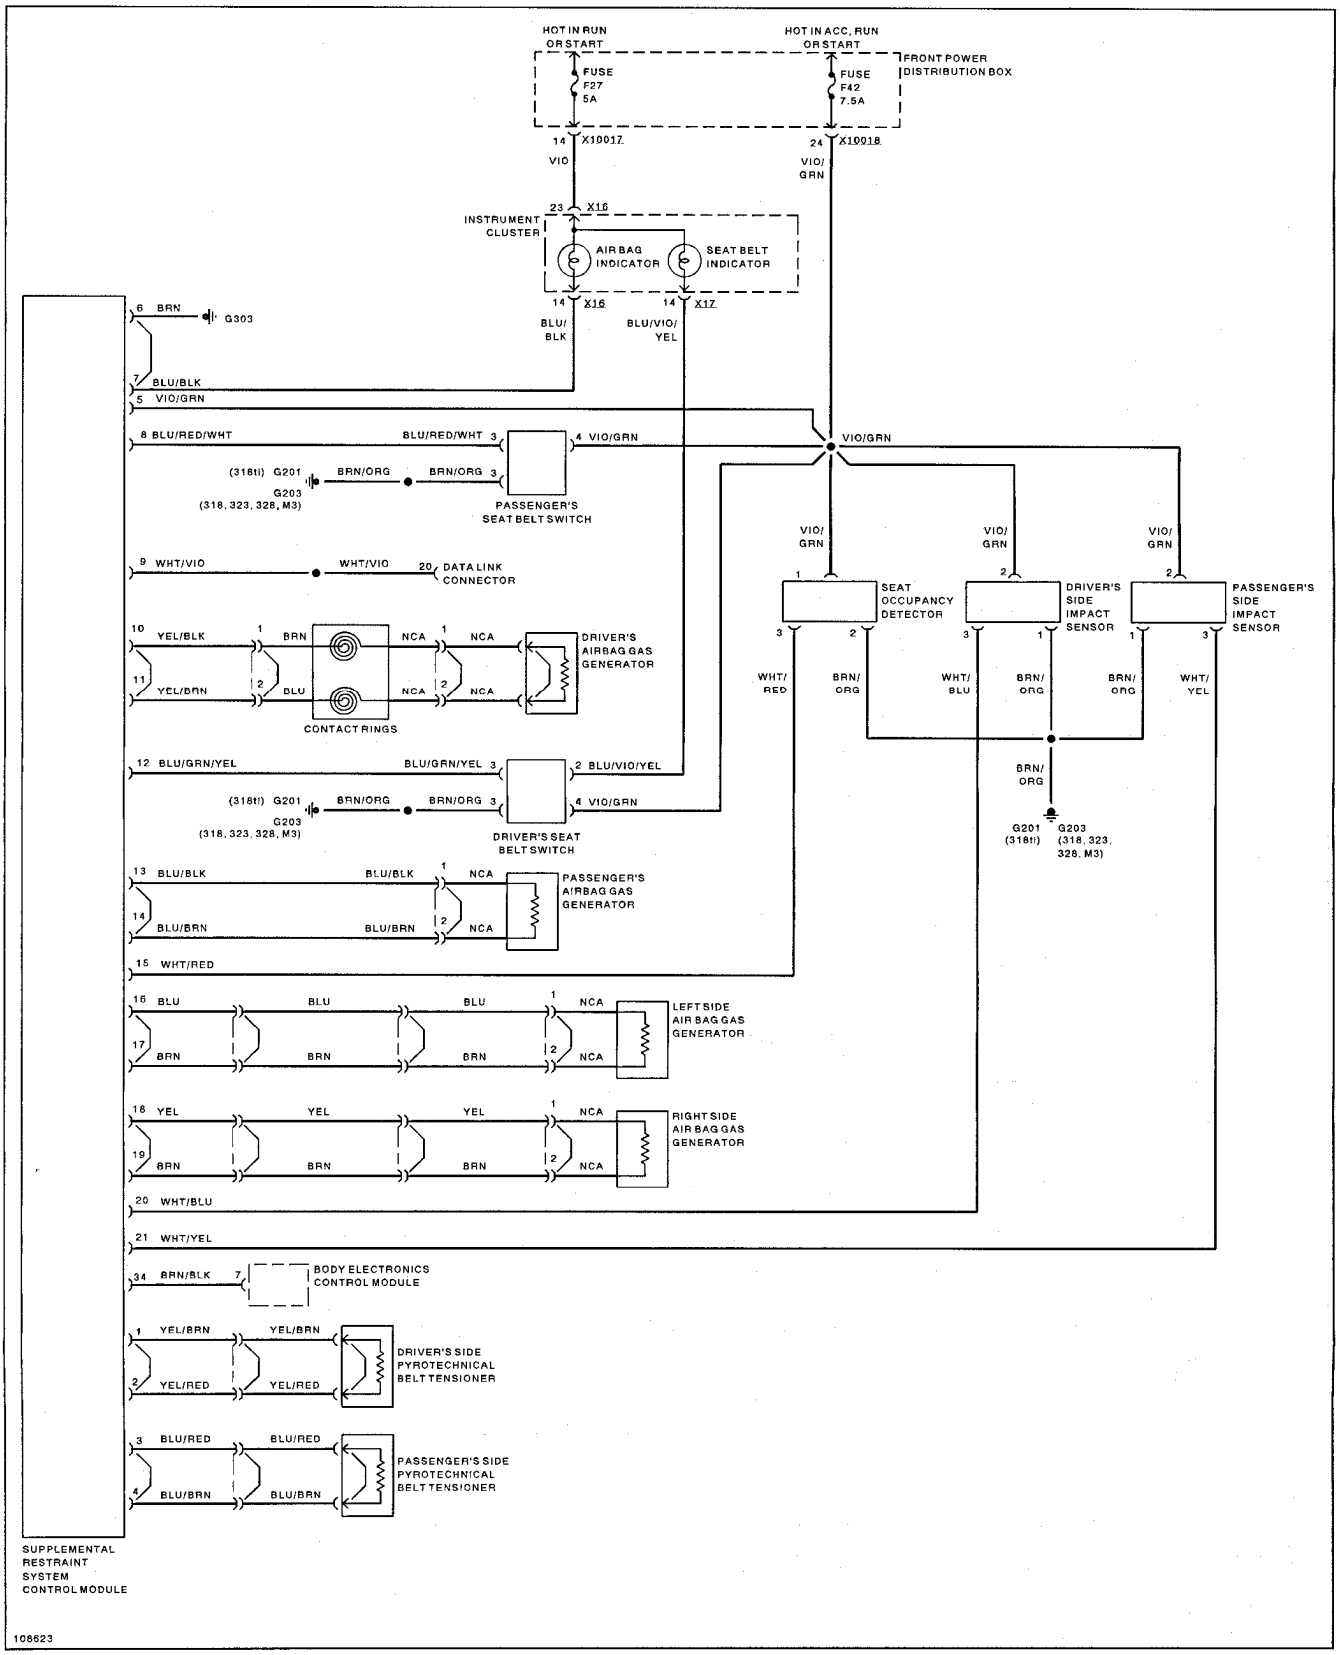


Airbag (Supplemental Restraint System)

1997

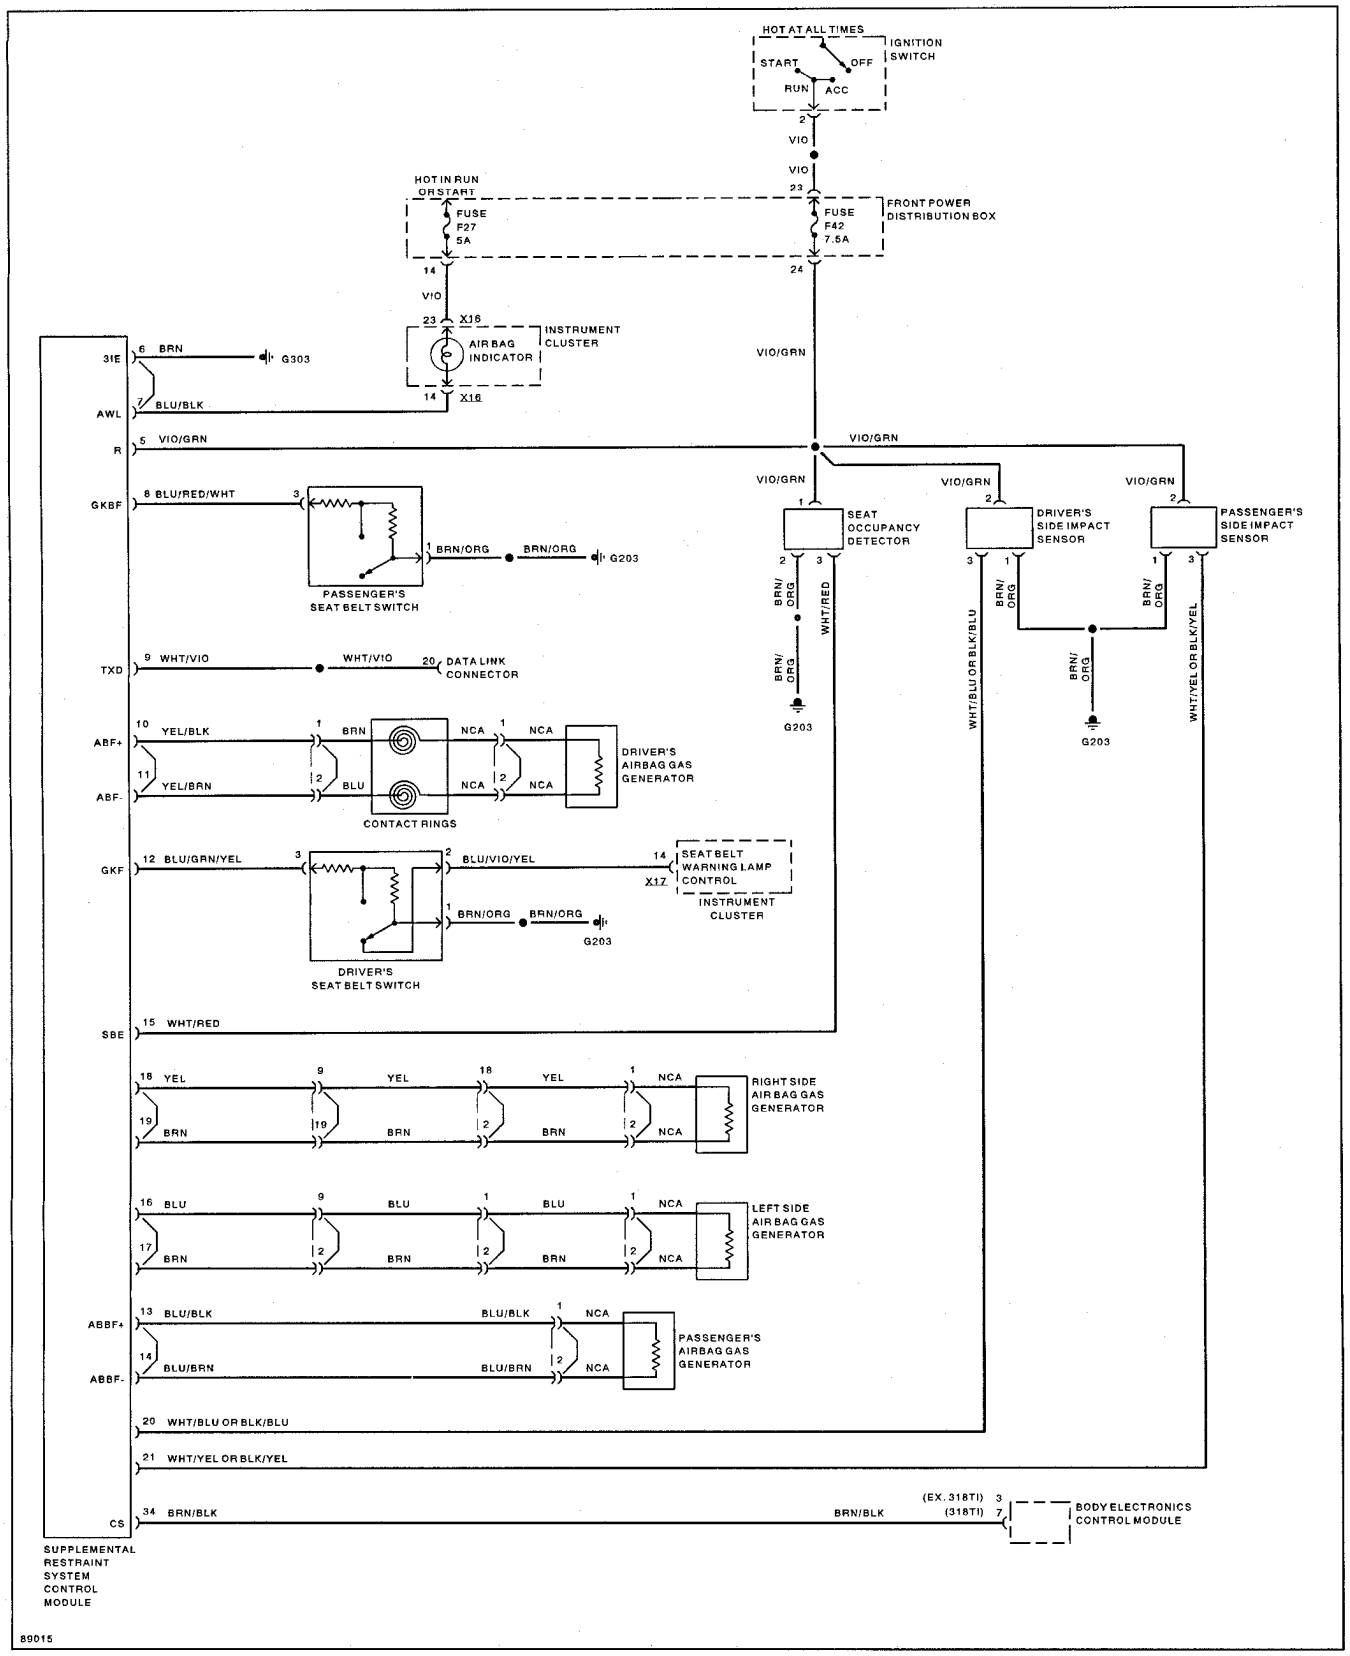


Airbag (Supplemental Restraint System)

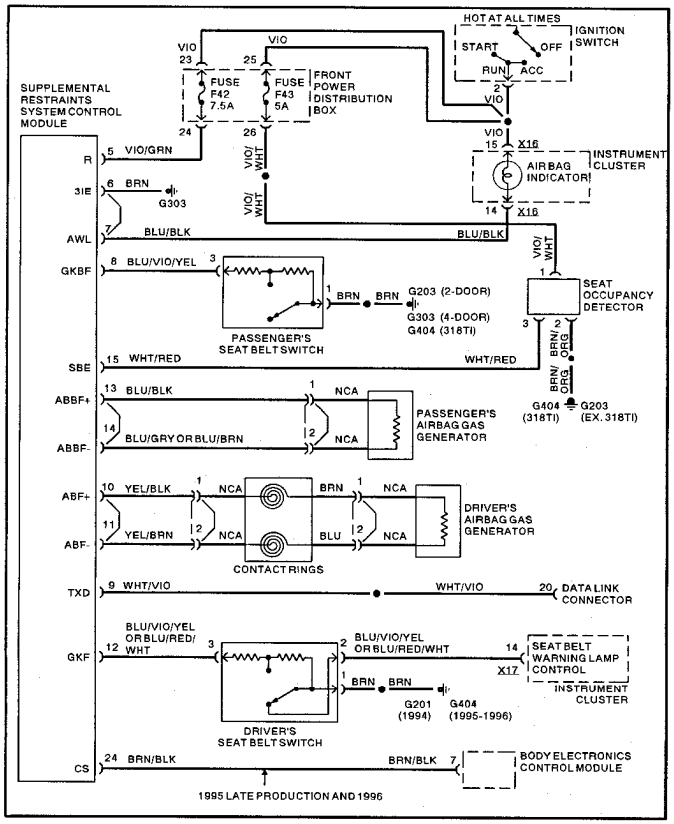


1994-96

Airbag (Supplemental Restraint System)

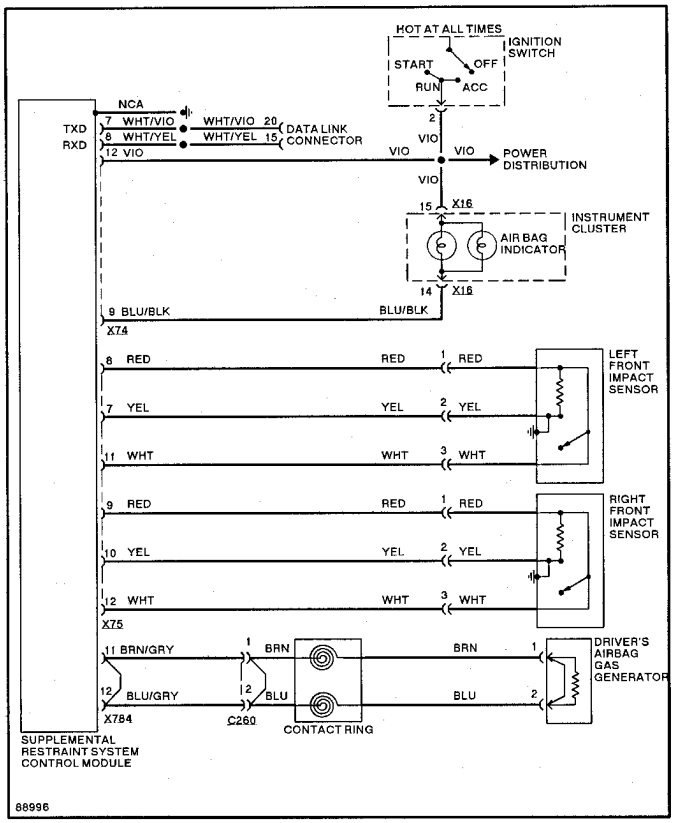


1992-93
Early Production

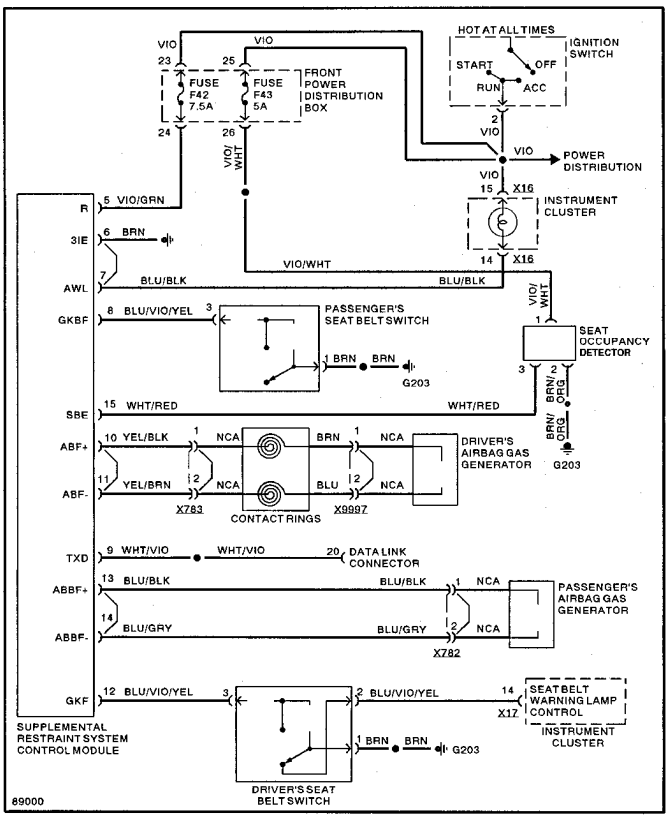

1993
Late Production

Park Ventilation


1998

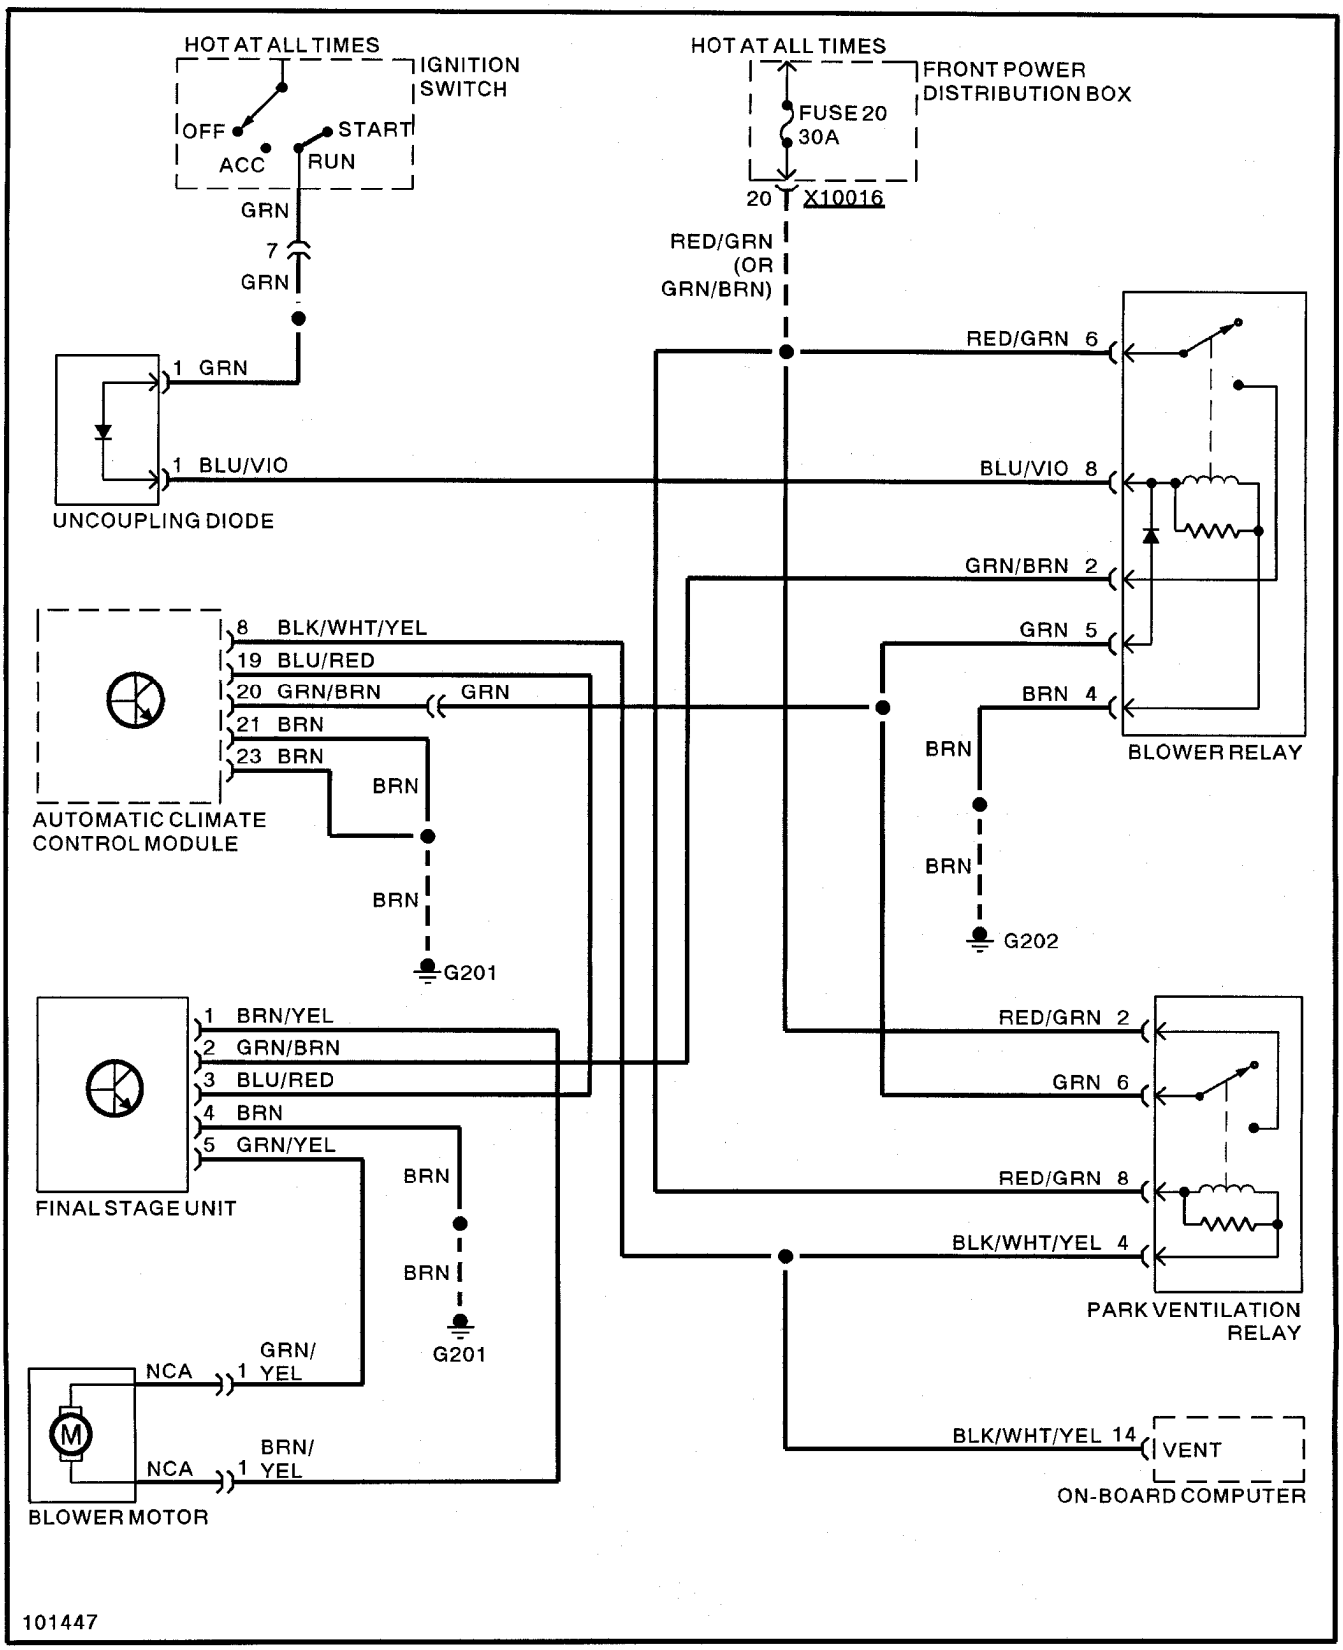

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Air Conditioning & Heating

1998 318ti

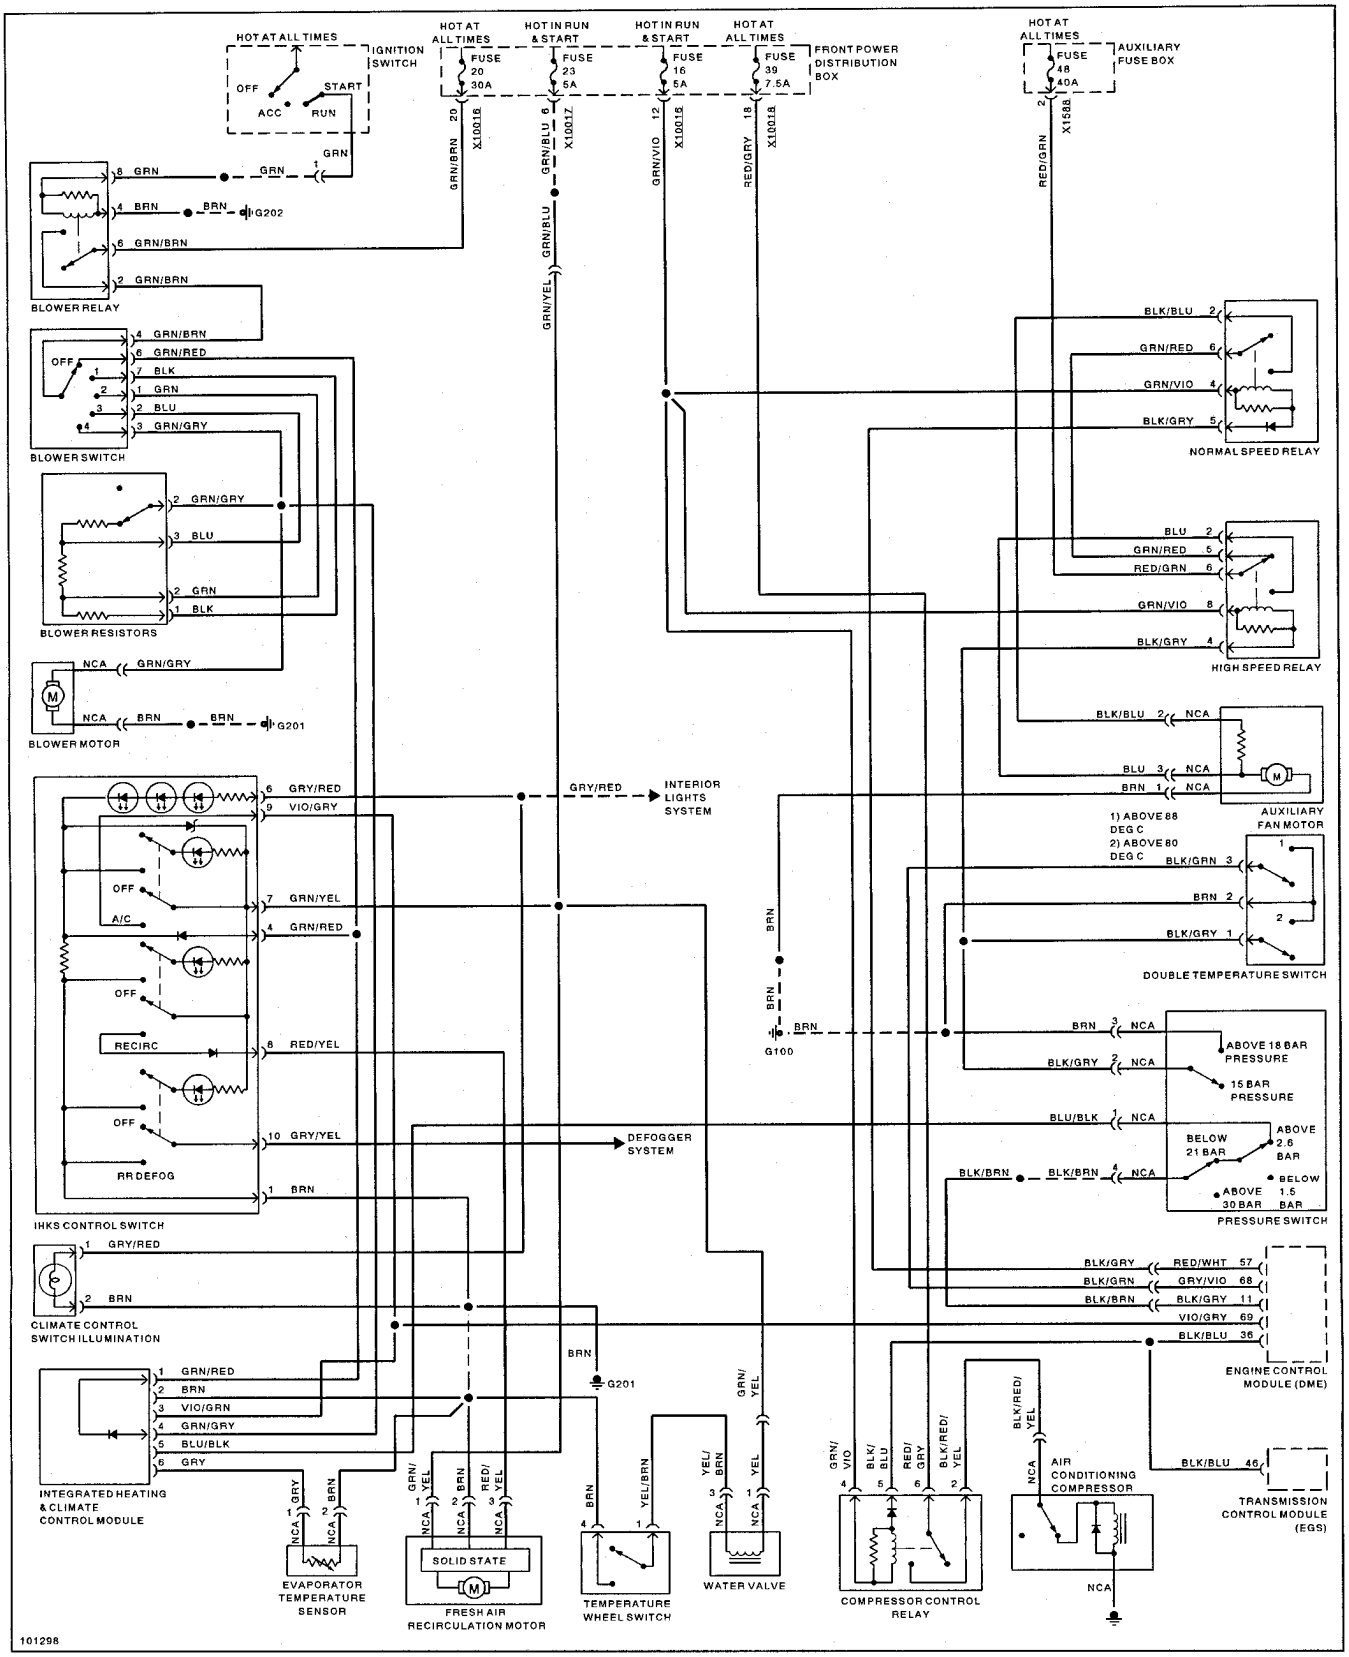


Air Conditioning & Heating

1997 318ti

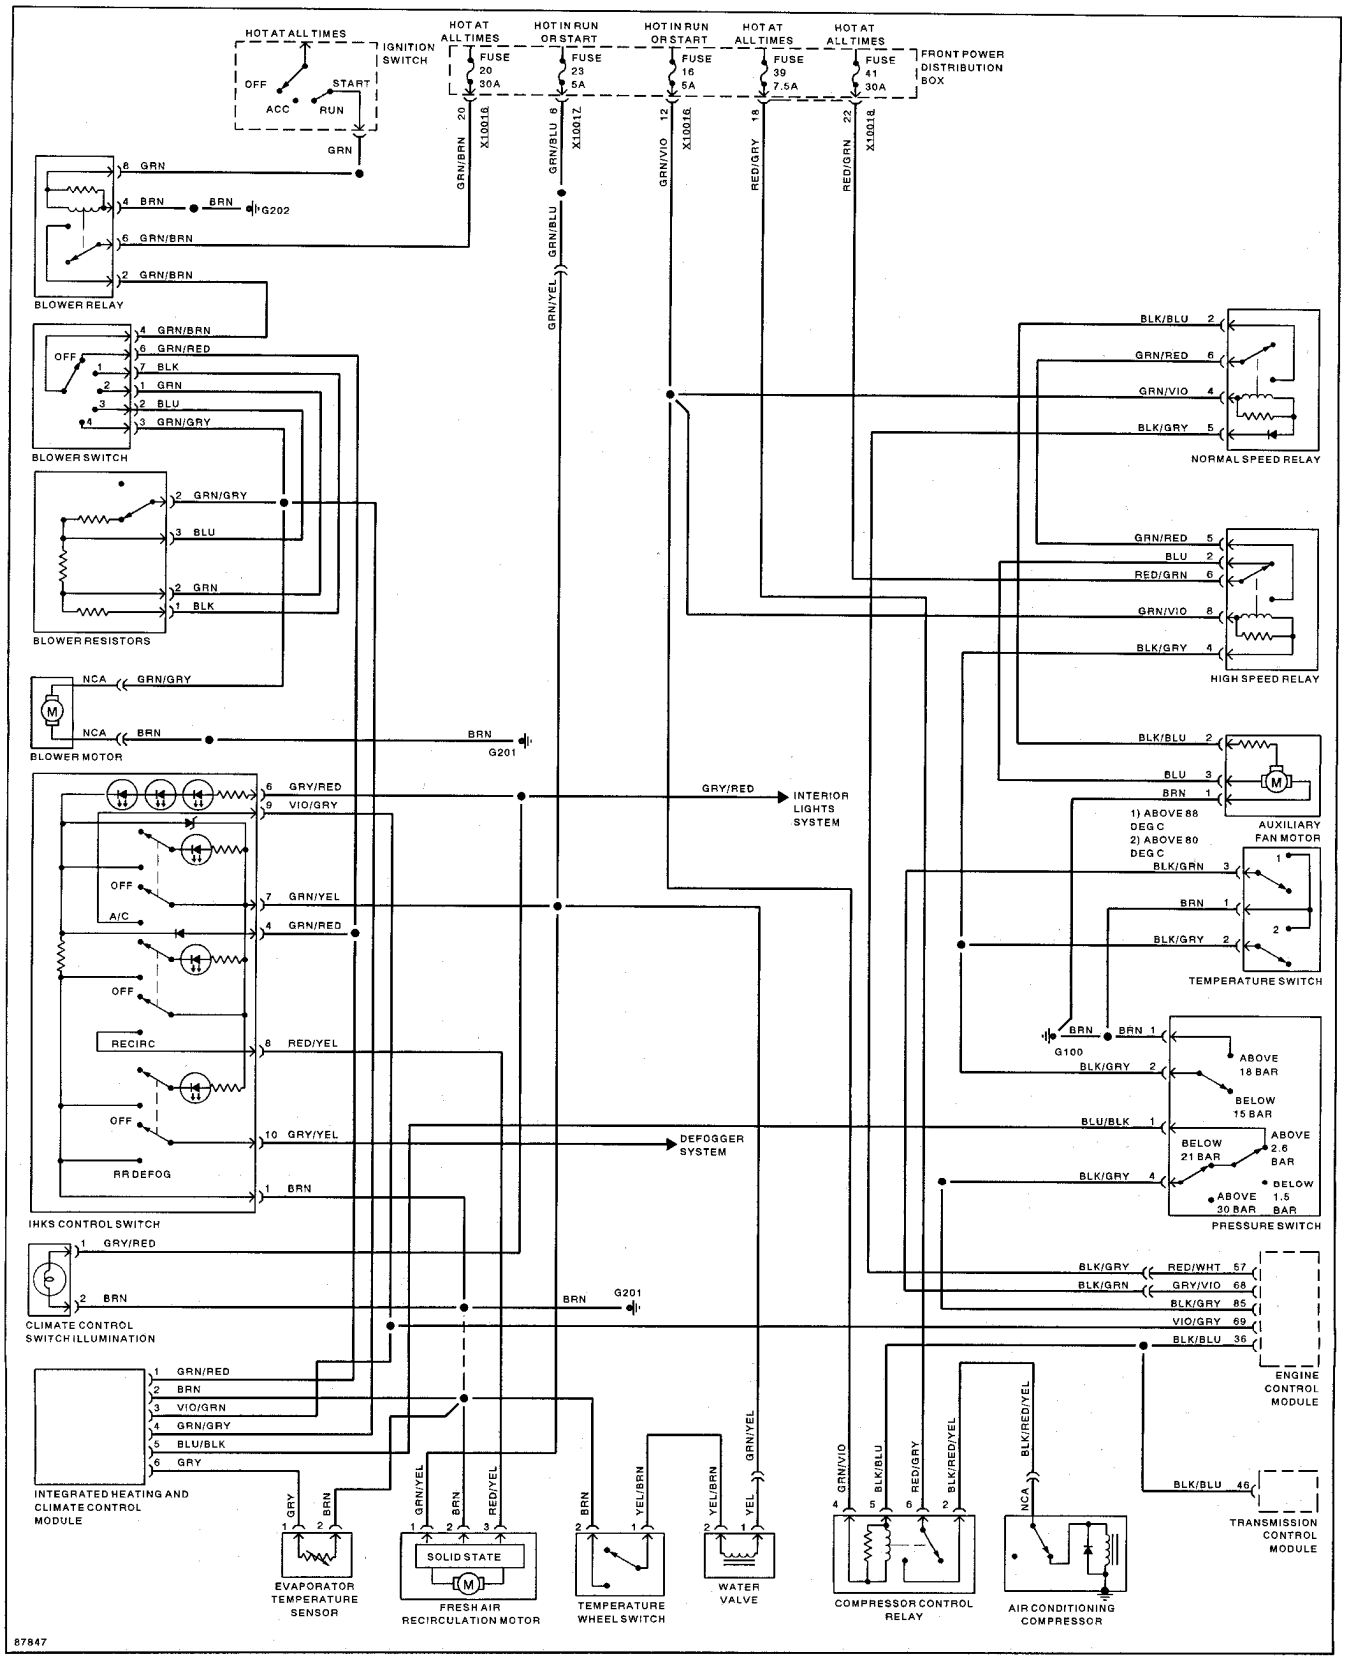


Air Conditioning & Heating

1996 318ti

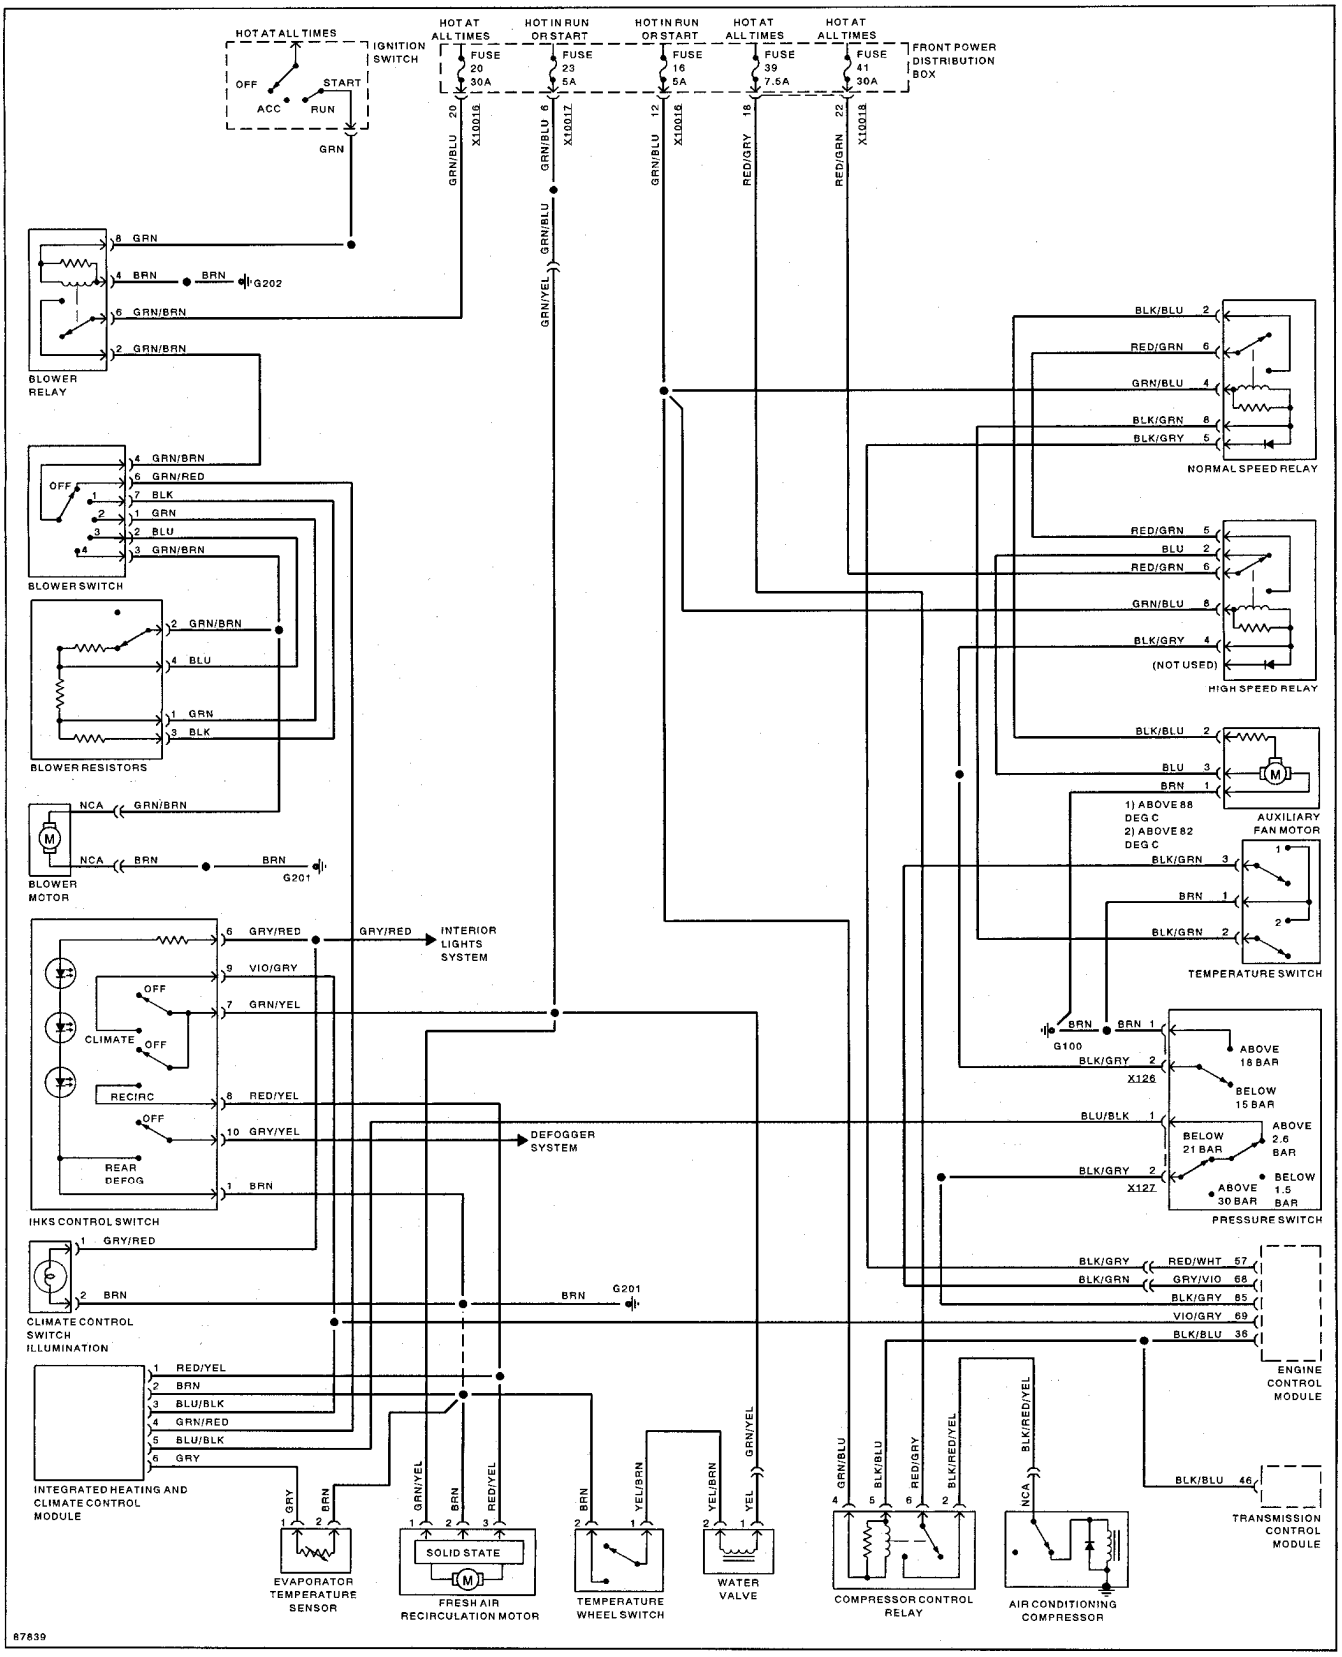


Air Conditioning & Heating

1995 318ti

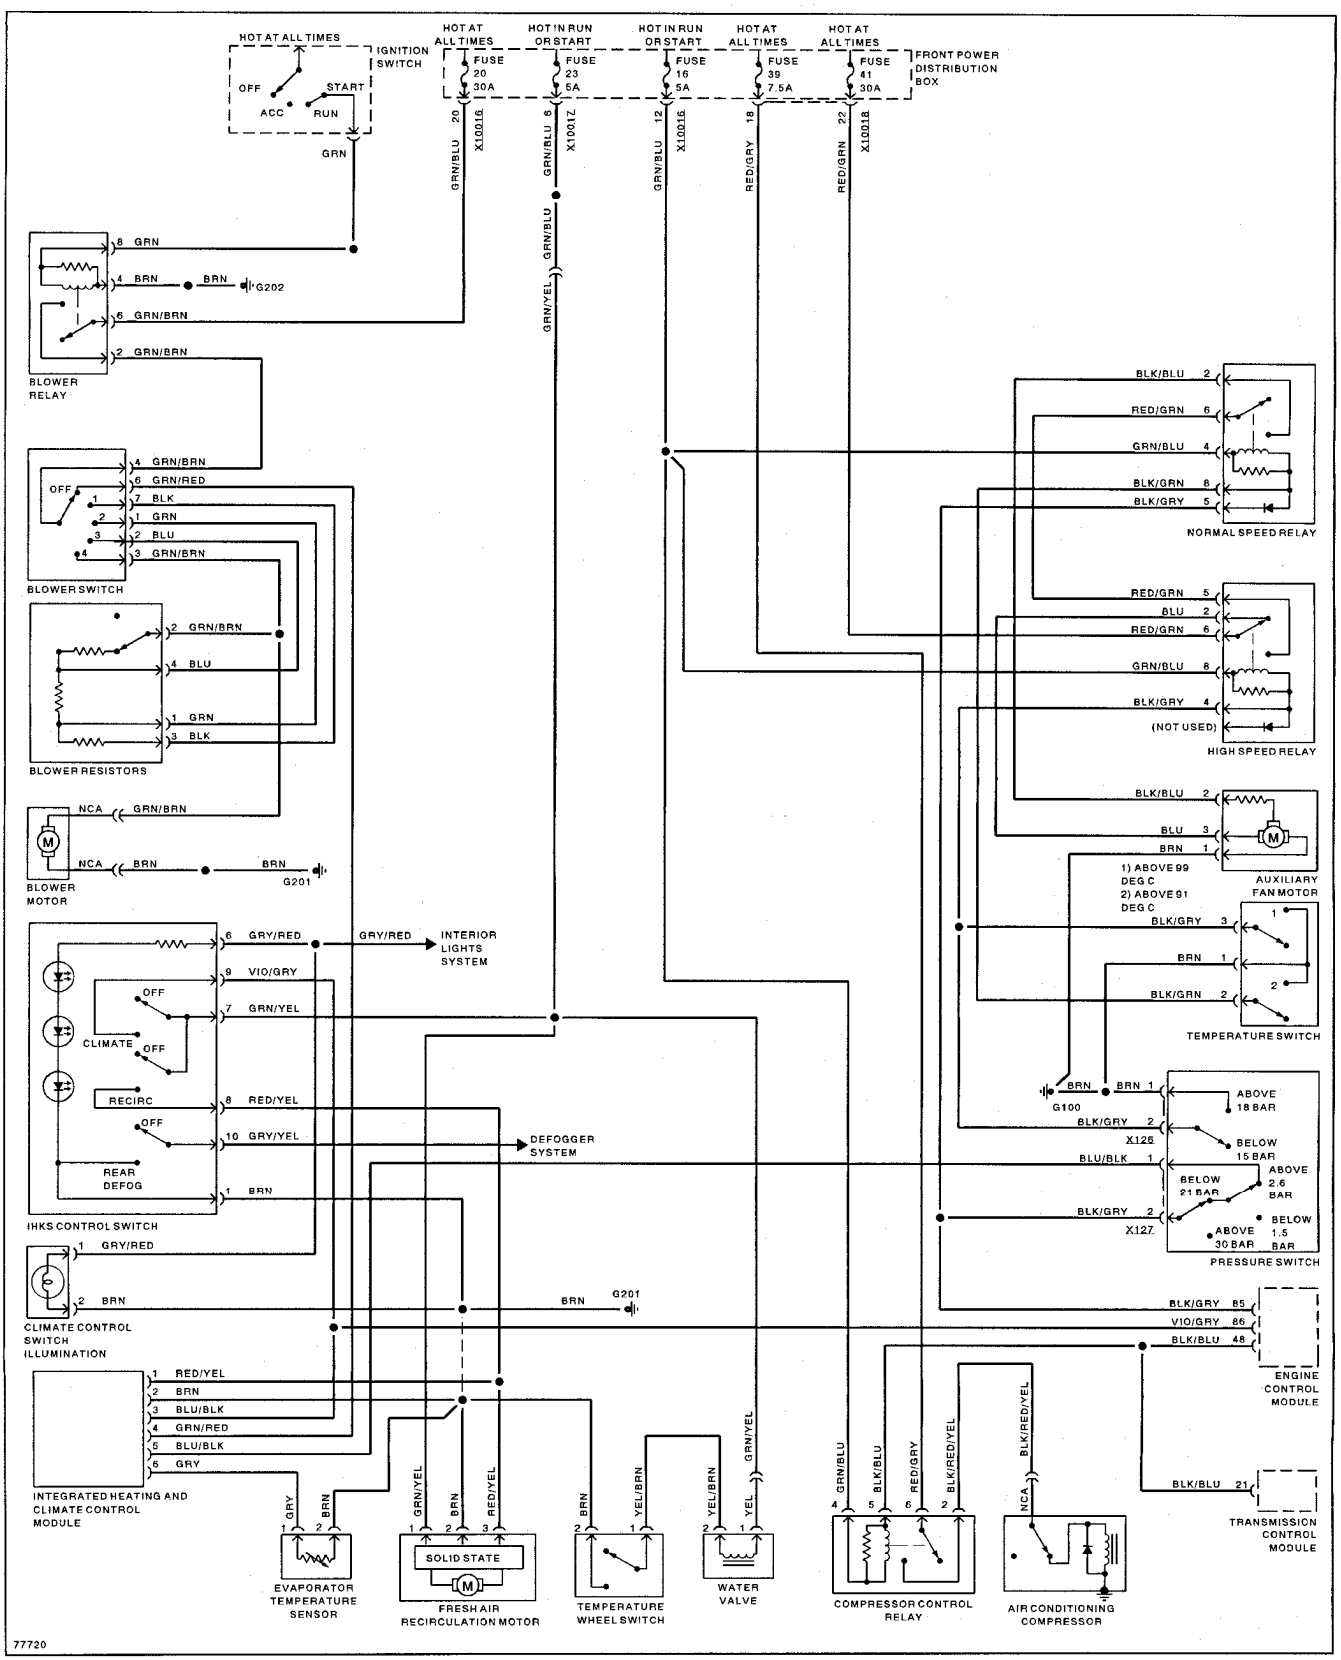


Air Conditioning & Heating

1998 Except 318ti

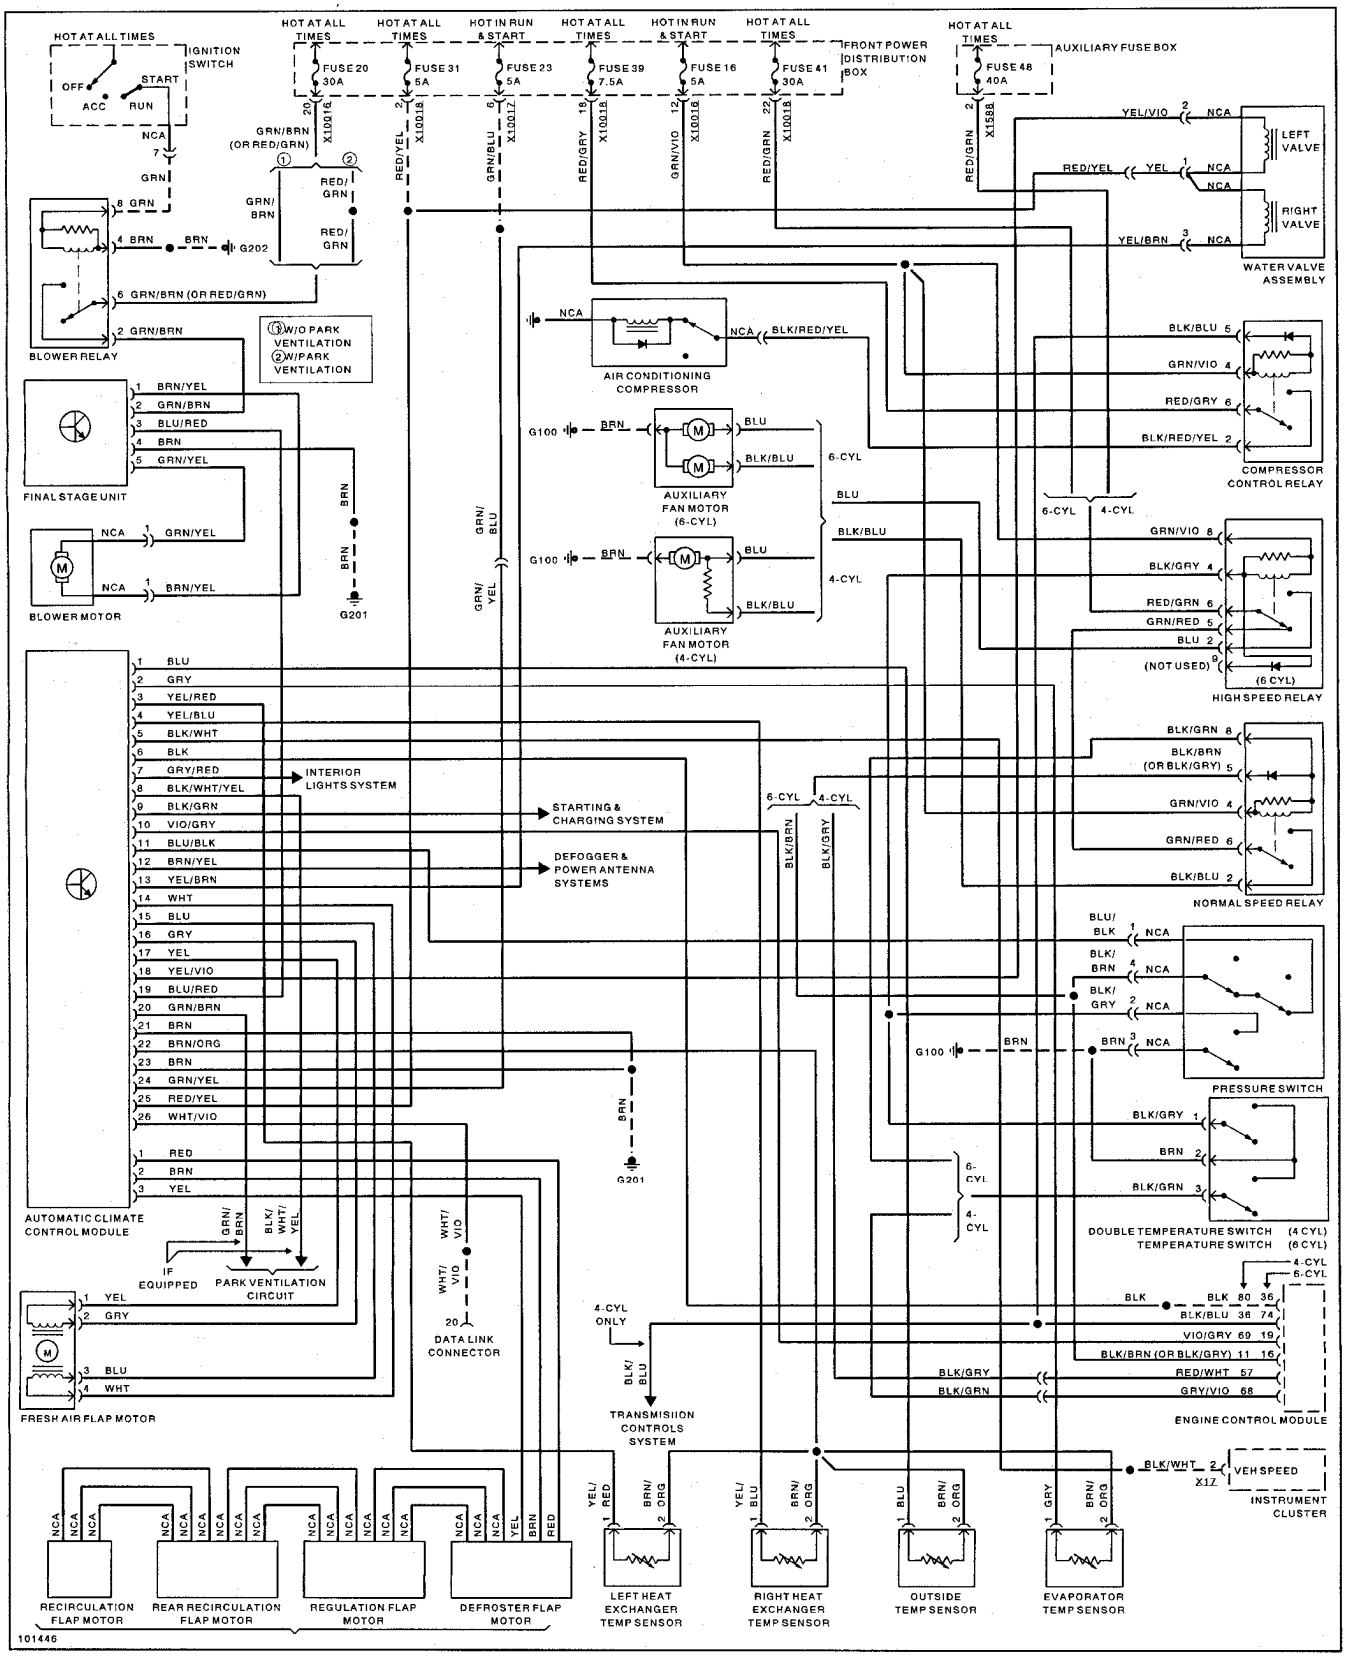


Air Conditioning & Heating

1996-97 Except 318ti

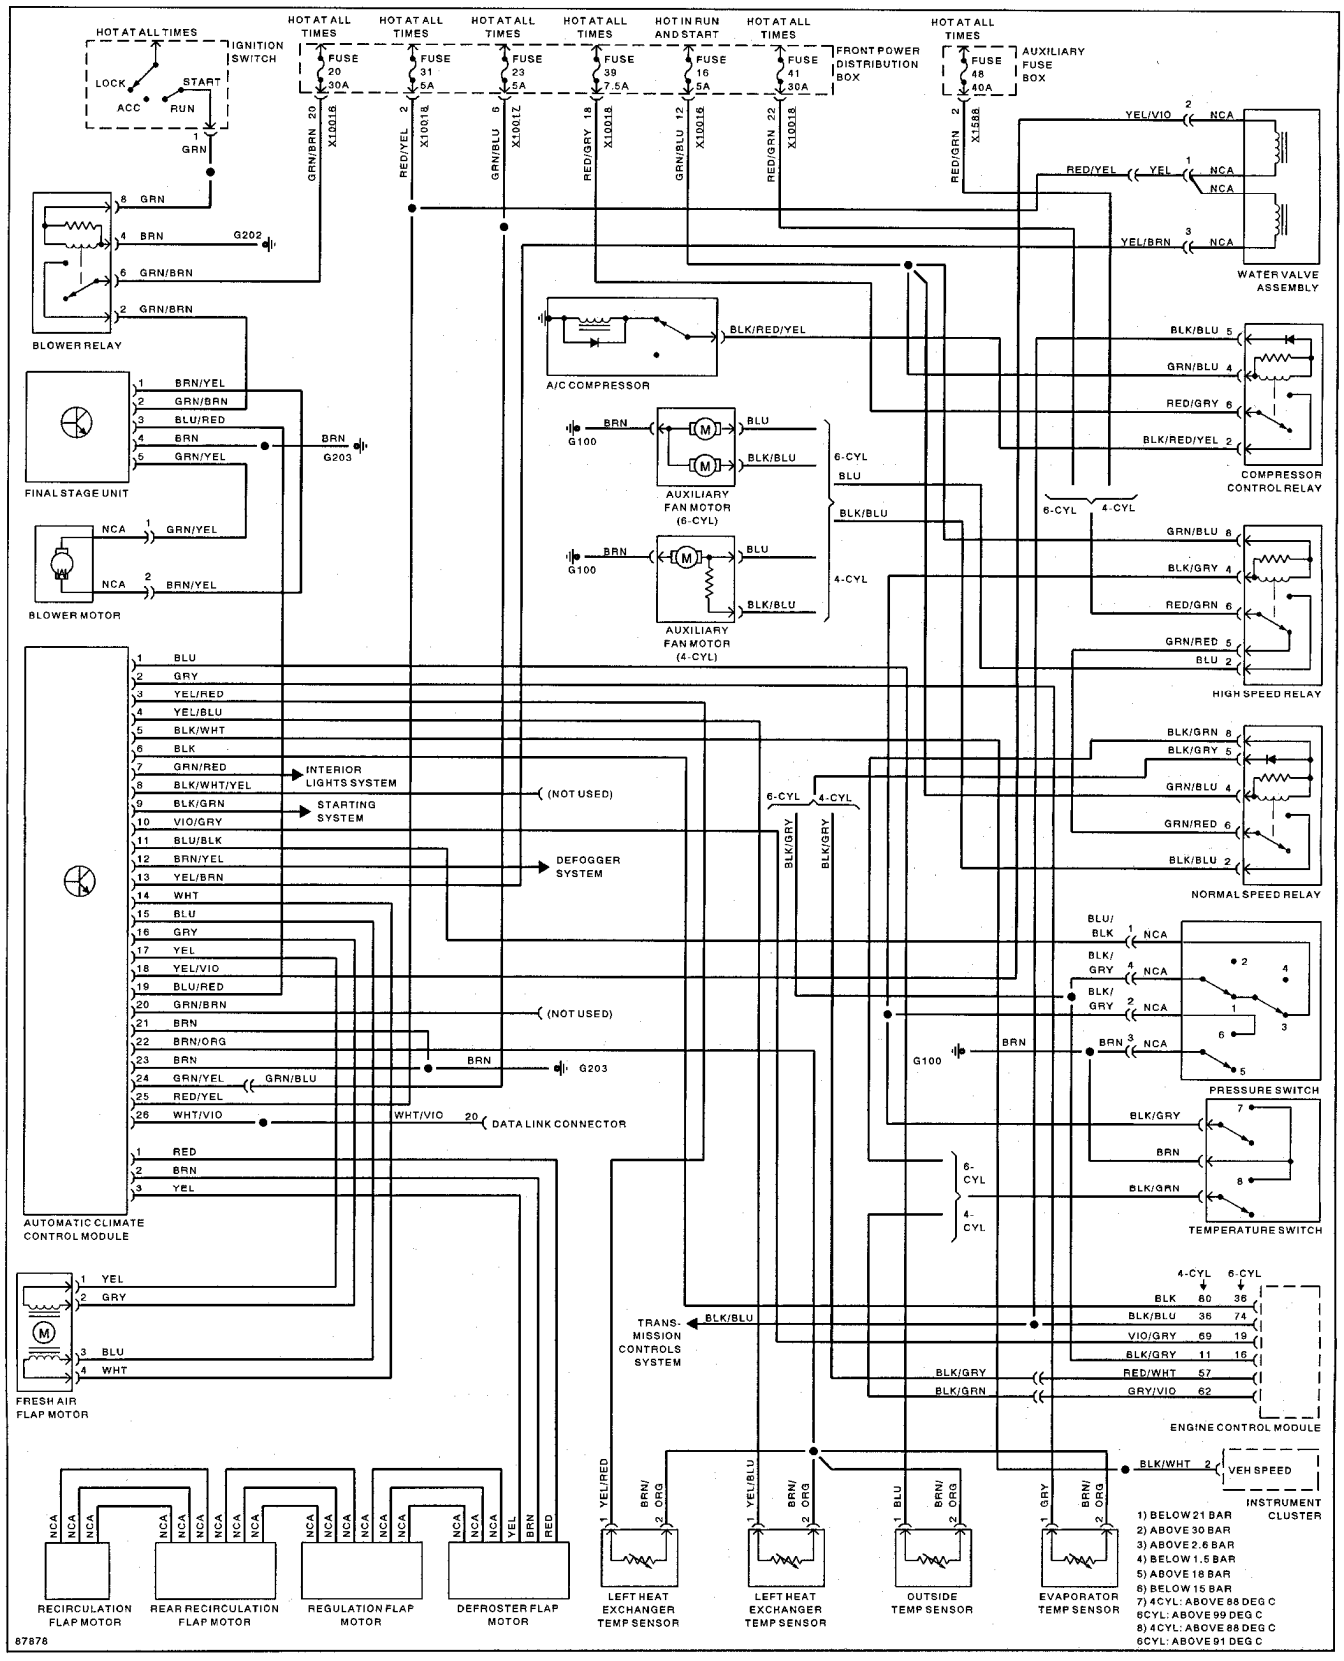


Air Conditioning & Heating

1993-95 Except 318ti (2 of 2)

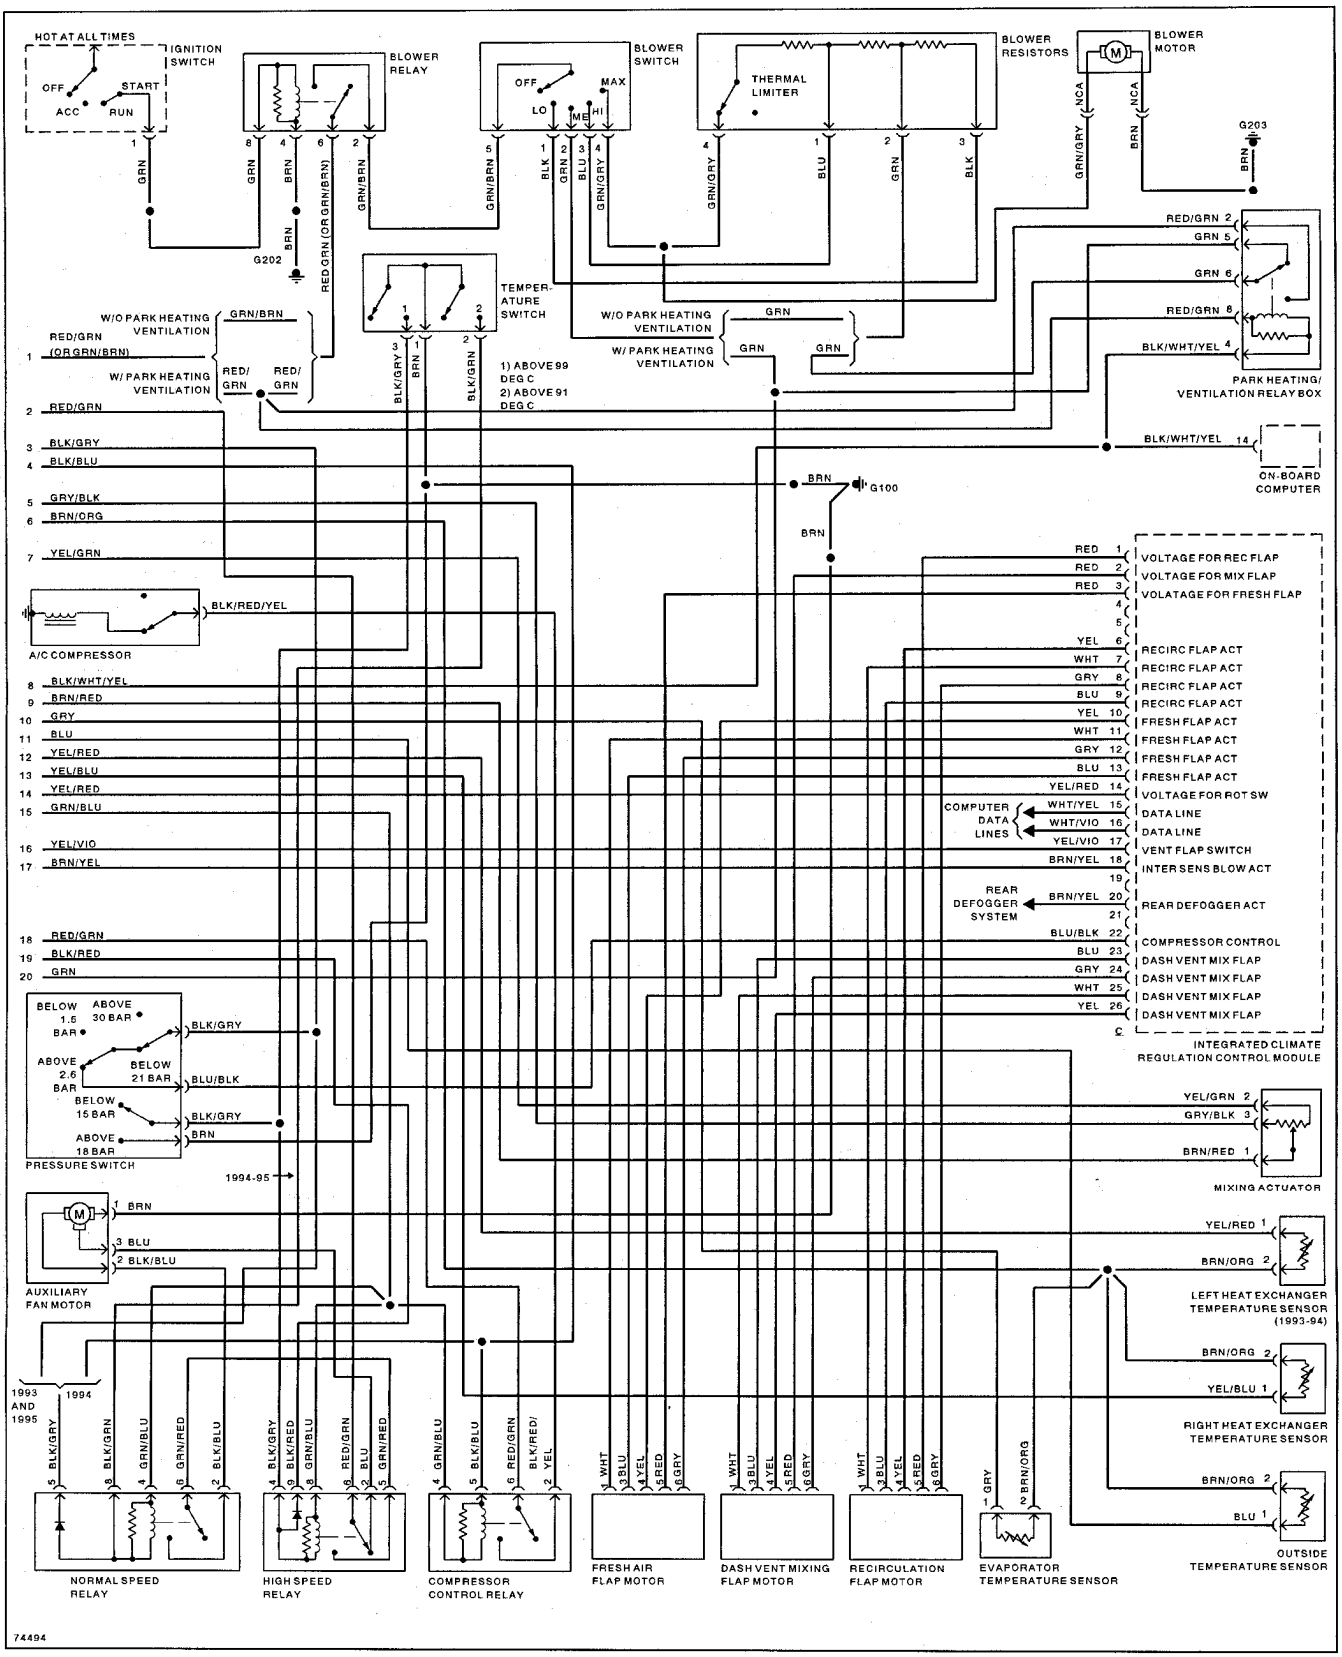


Air Conditioning & Heating

1993-95 Except 318ti (1 of 2)

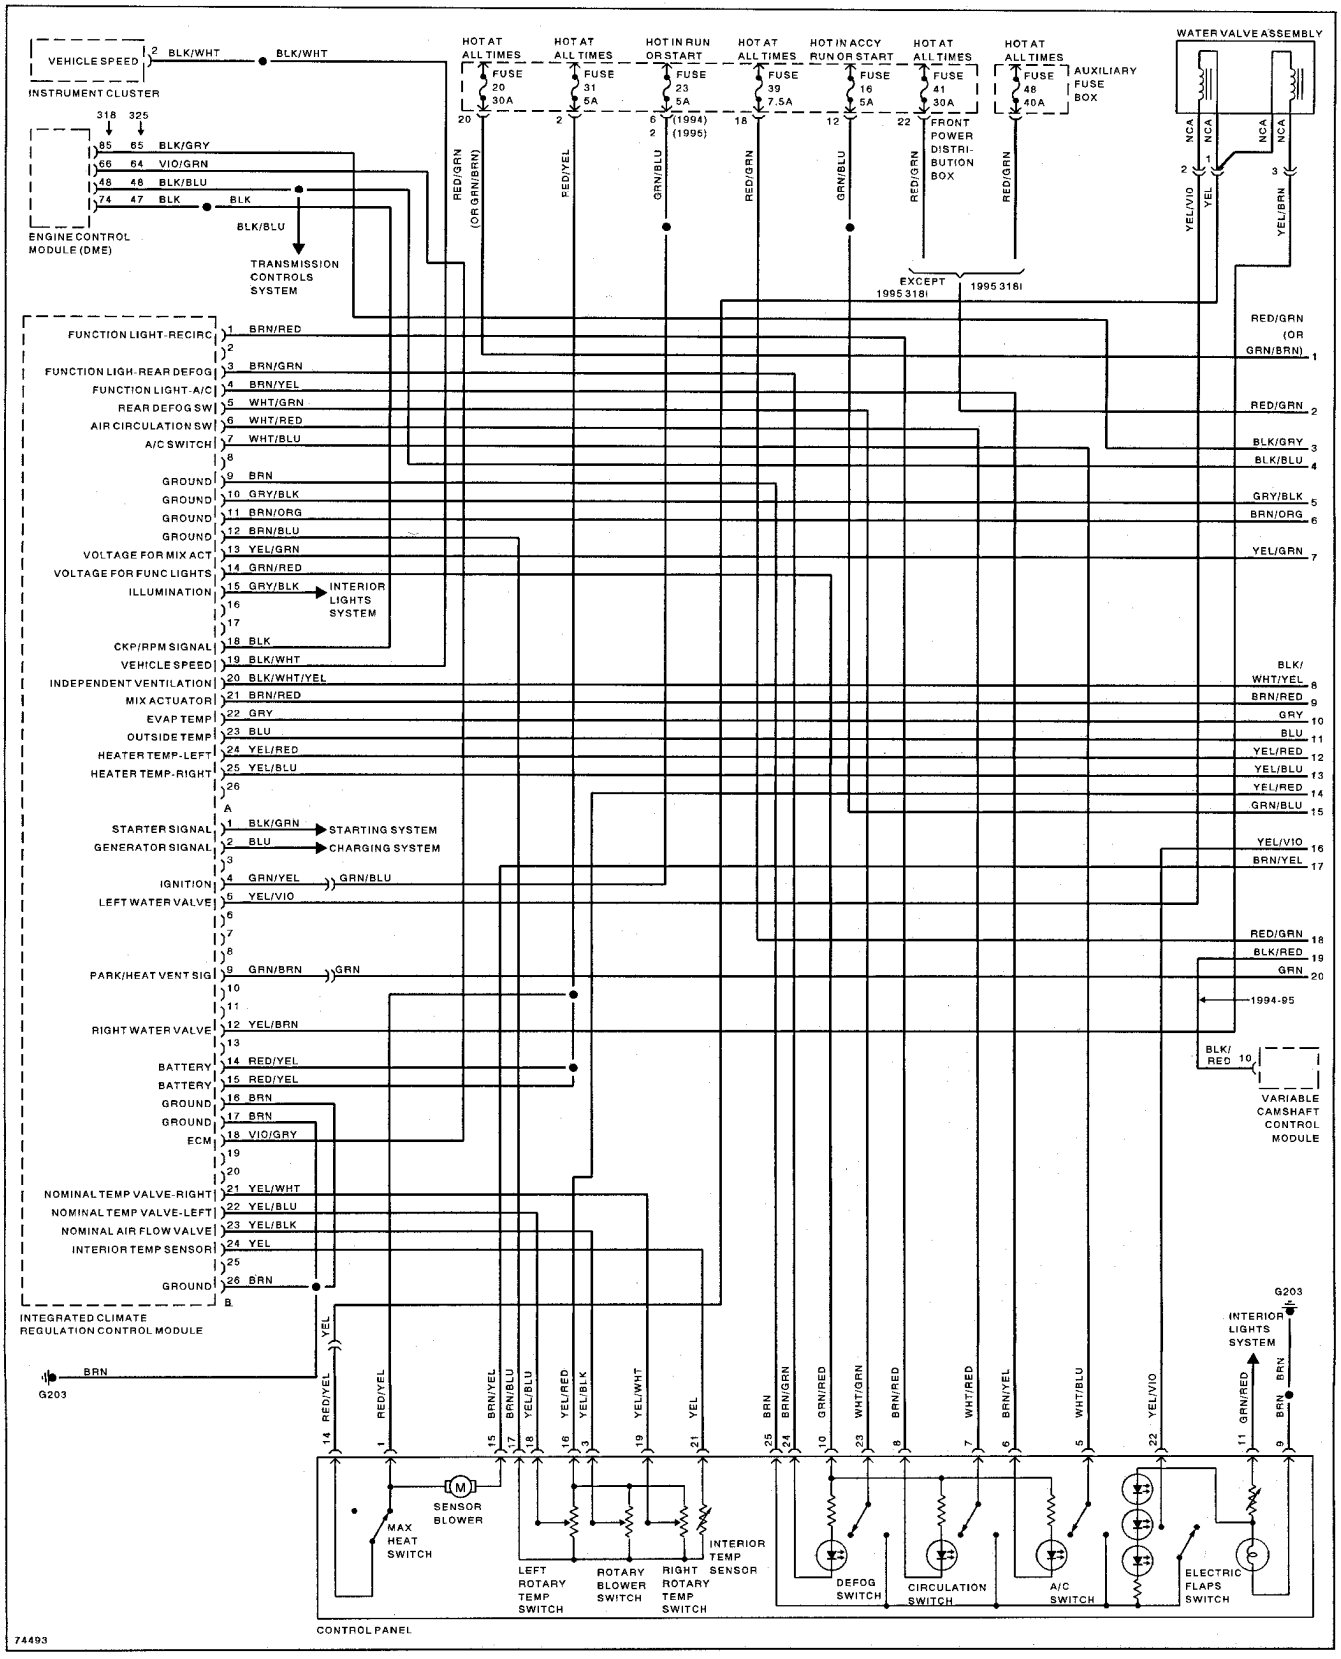


Air Conditioning & Heating

1992 (2 of 2)

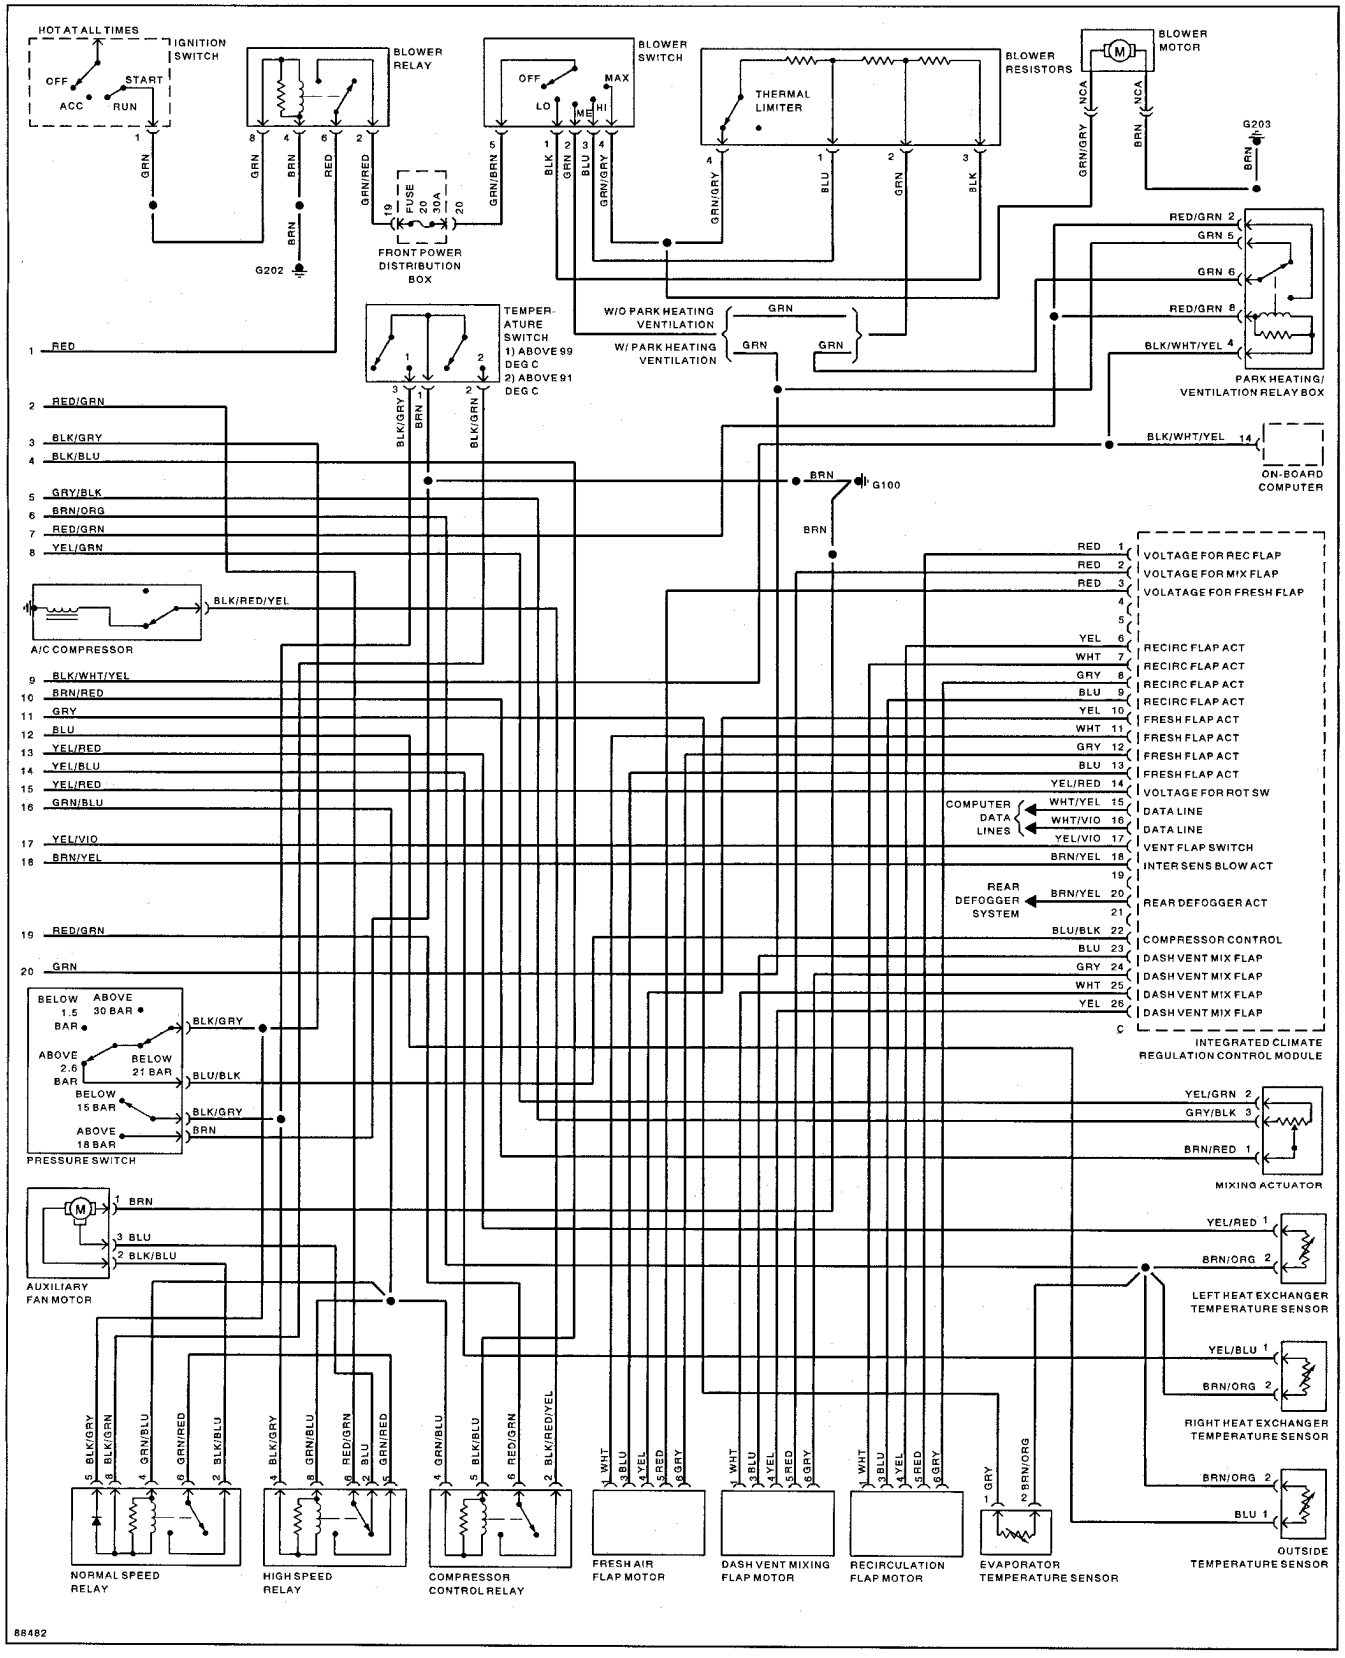

Air Conditioning & Heating


1992 (1 of 2)

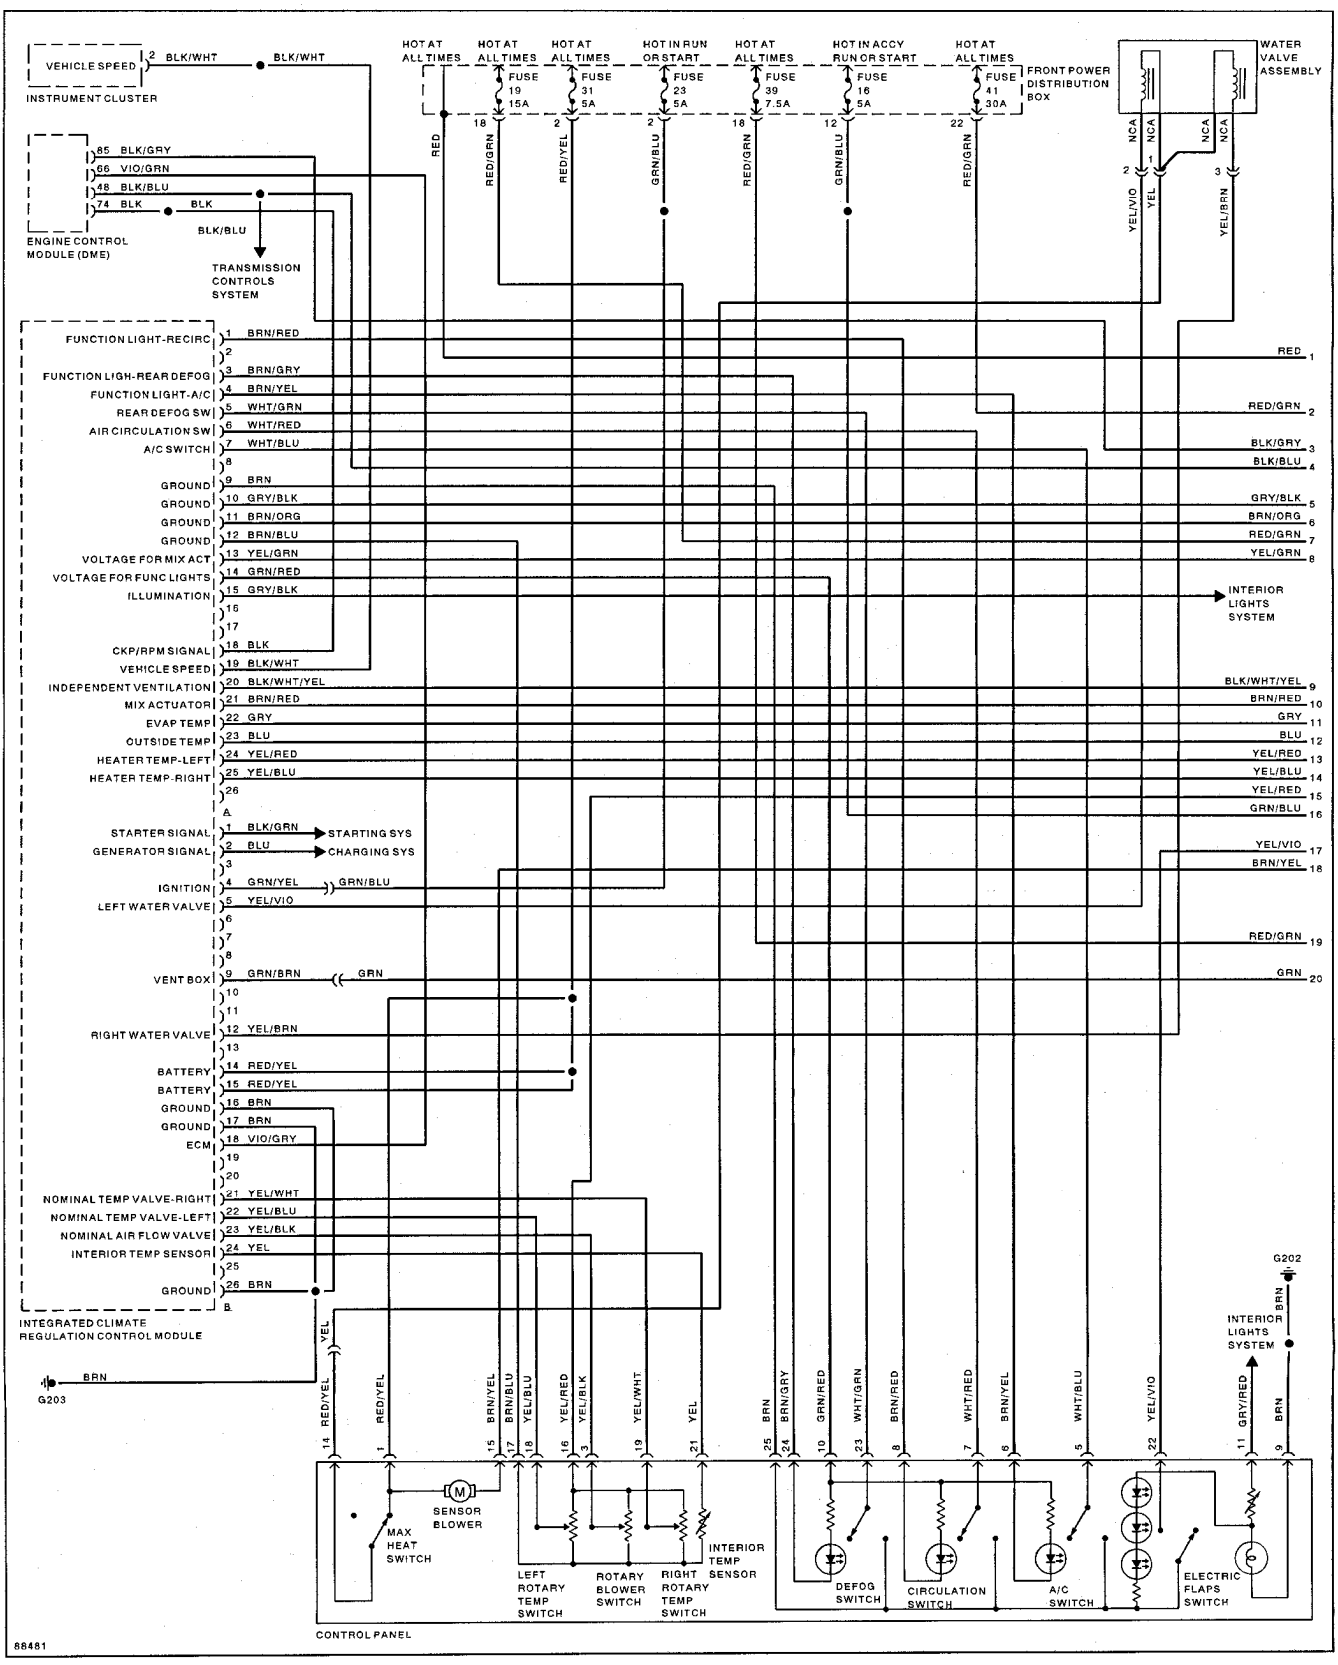


Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

ABS/AST

1998 w/ Traction Control

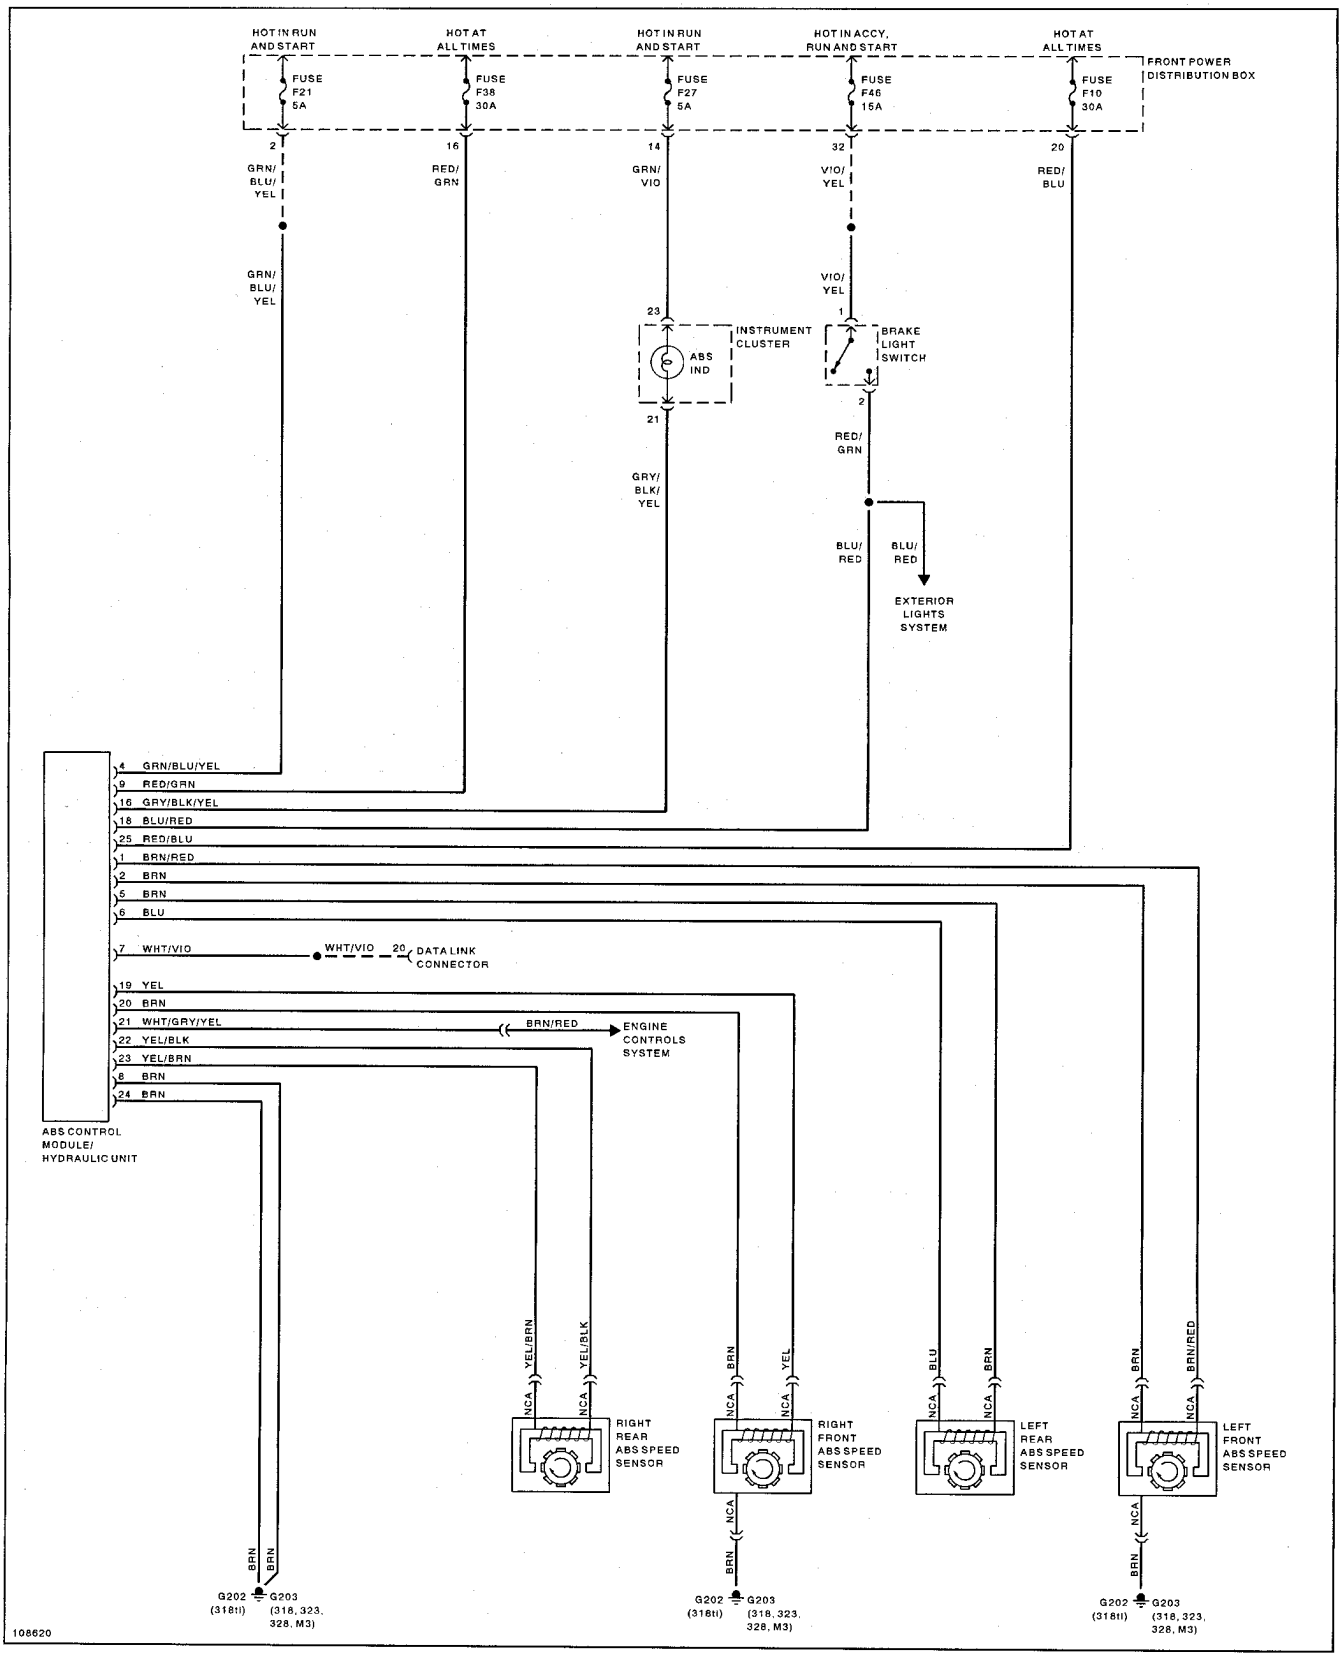


ABS/AST

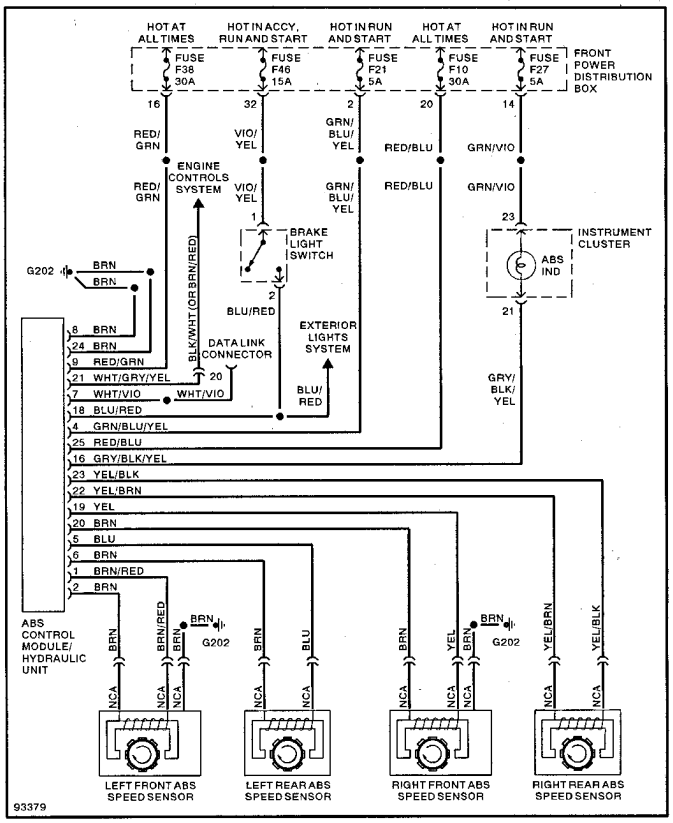

1997 w/ Traction Control


ABS

1995-96 318ti w/o Traction Control

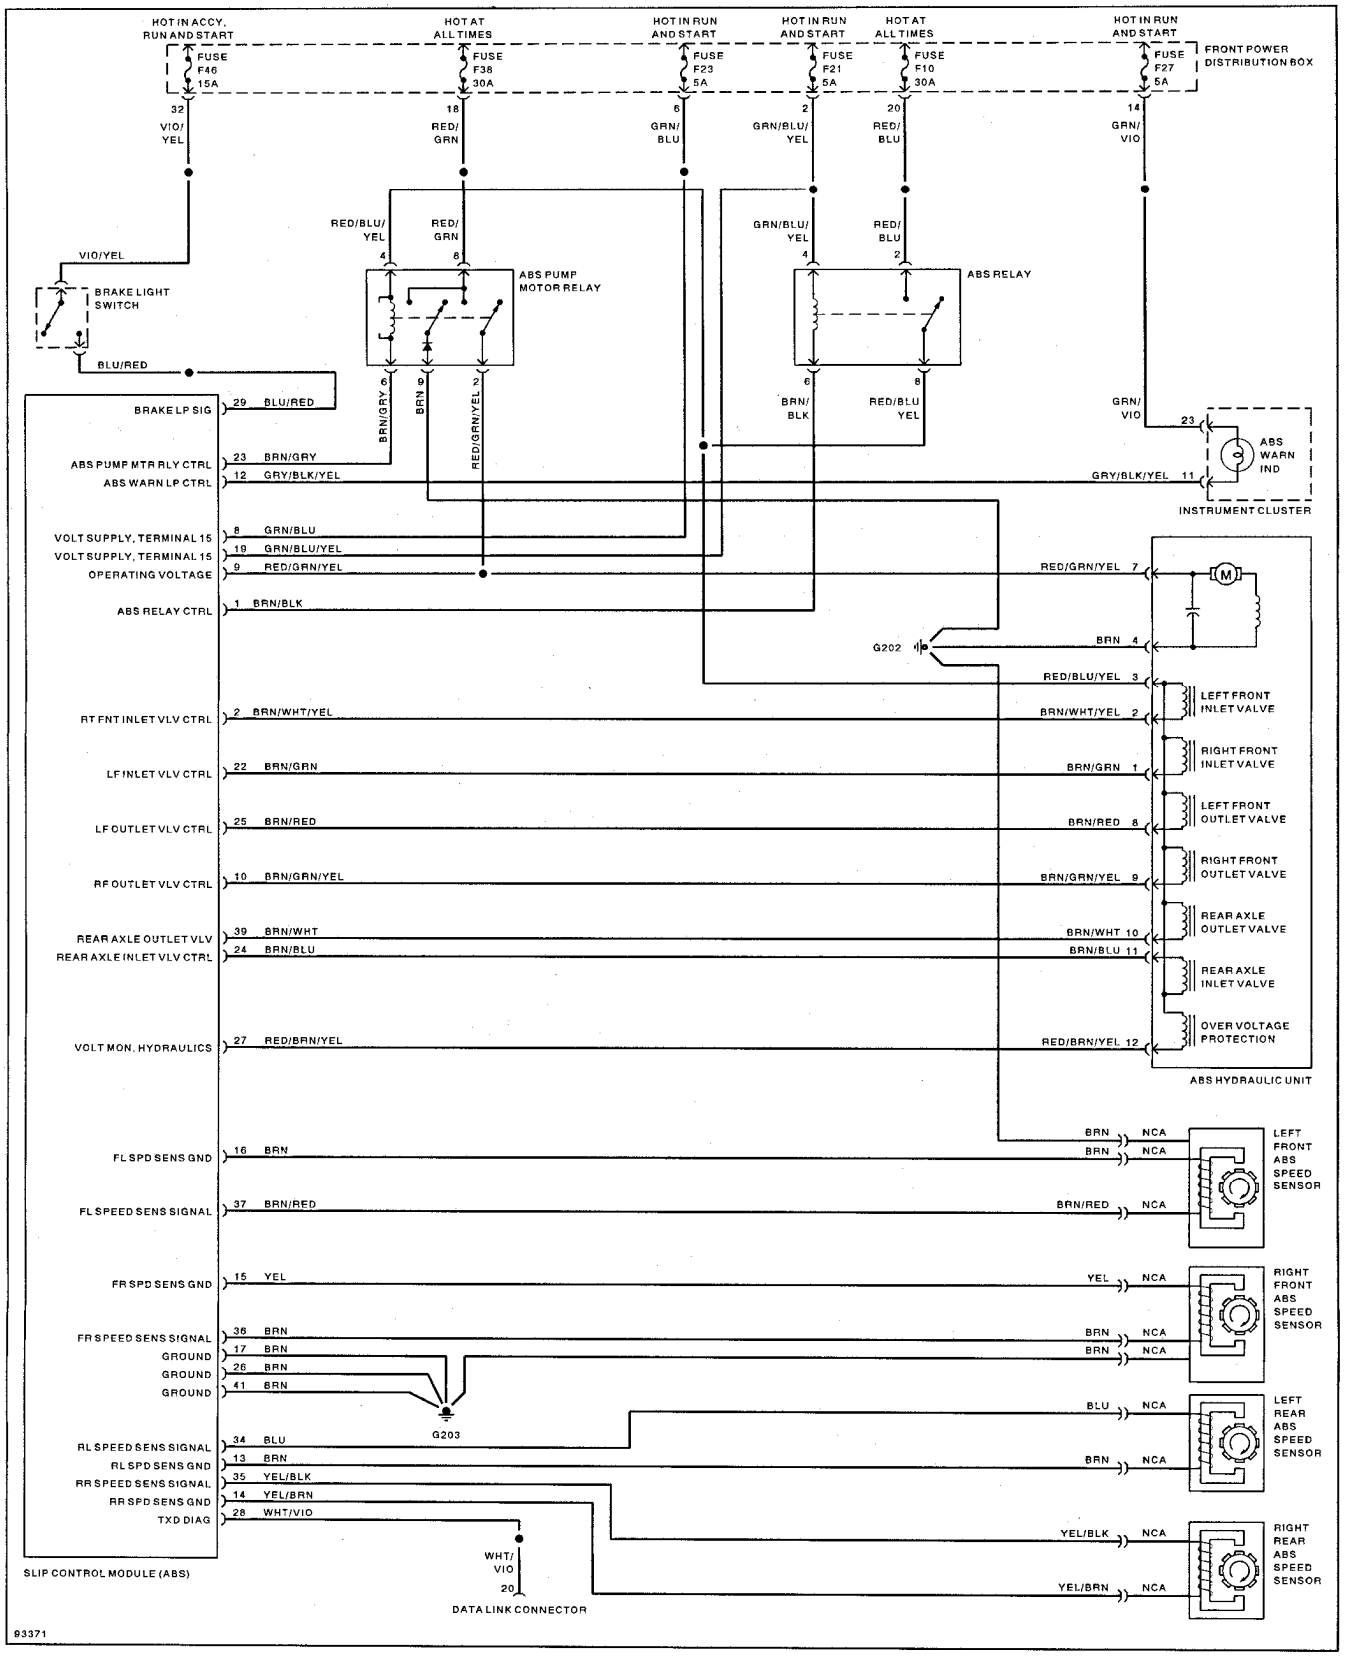


ABS/AST

1998 Except 318i, 318ti w/Traction Control (2 of 2)

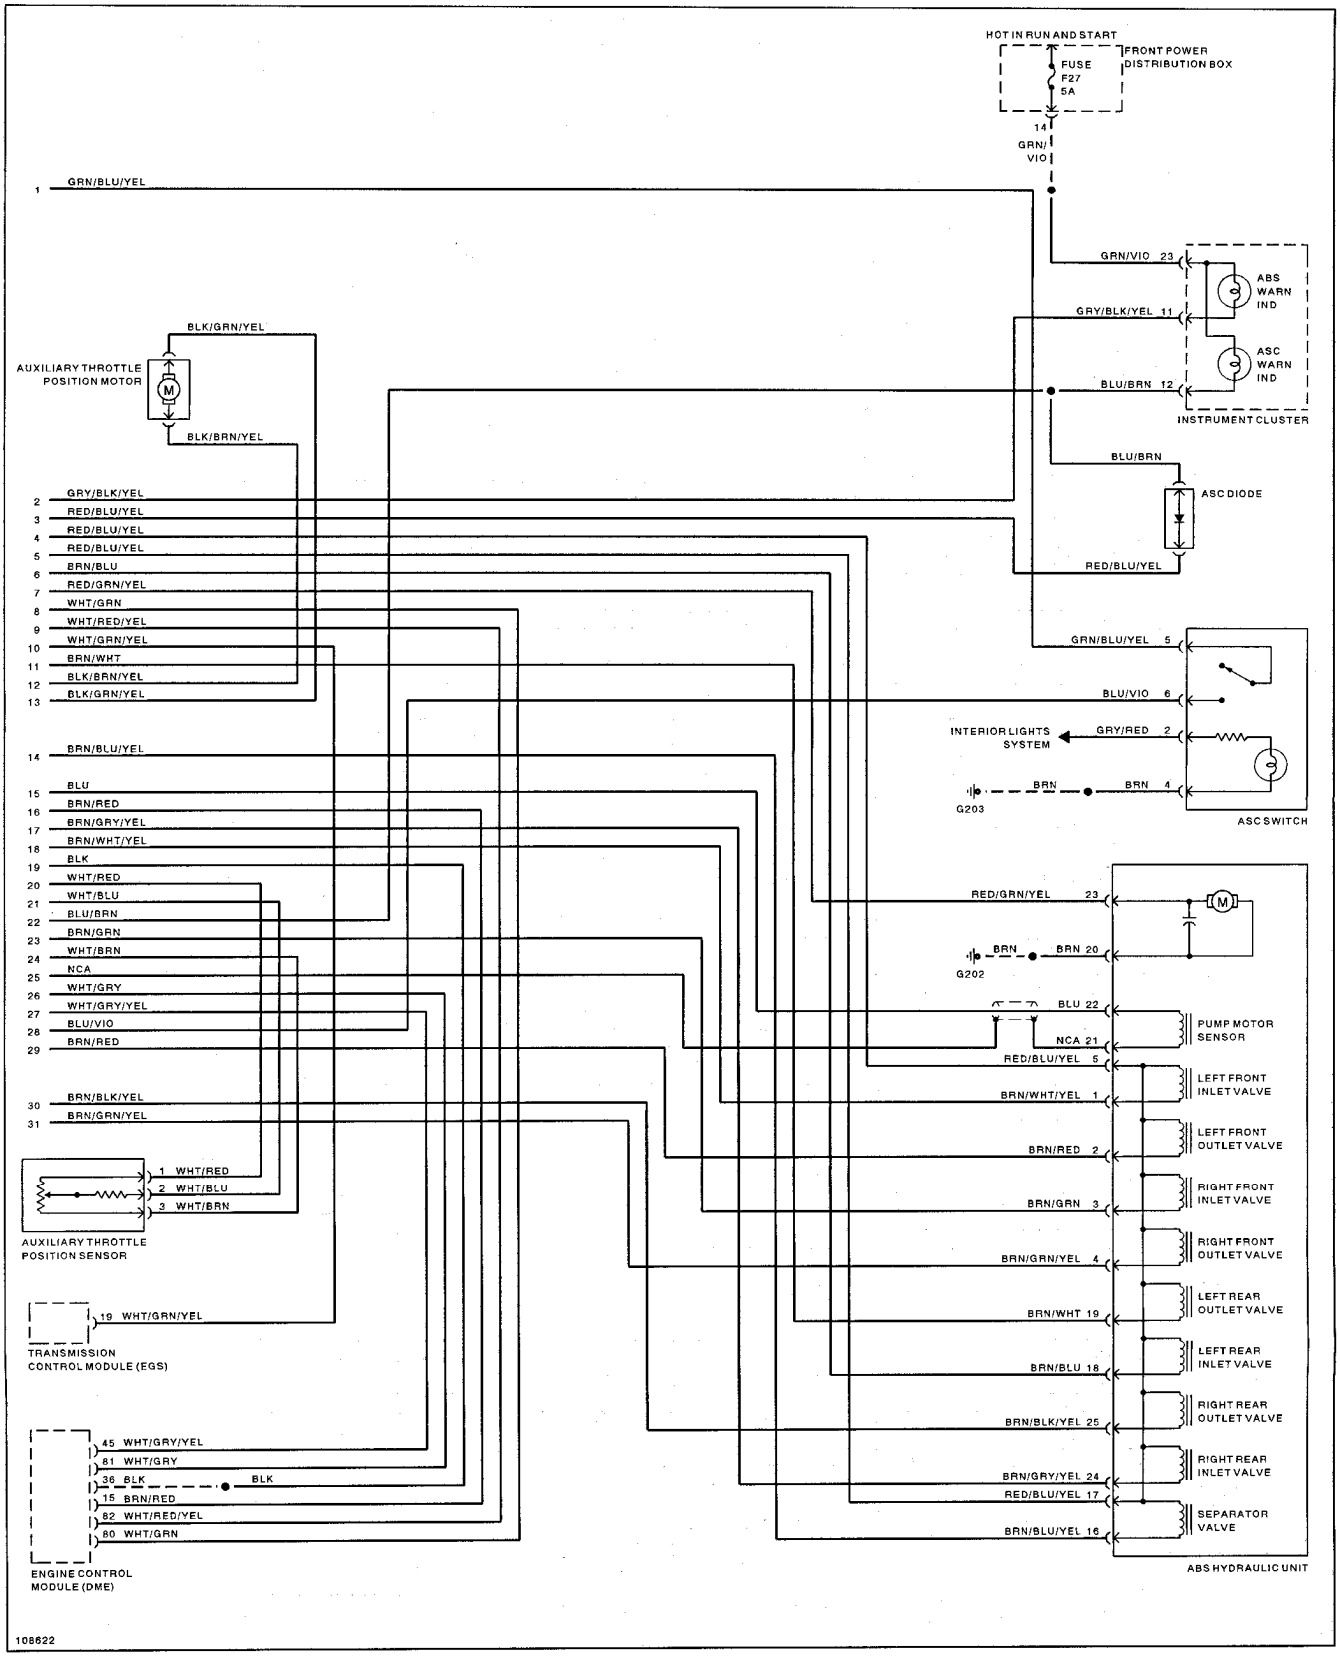


ABS/AST

1998 Except 318i, 318ti w/Traction Control (1 of 2)

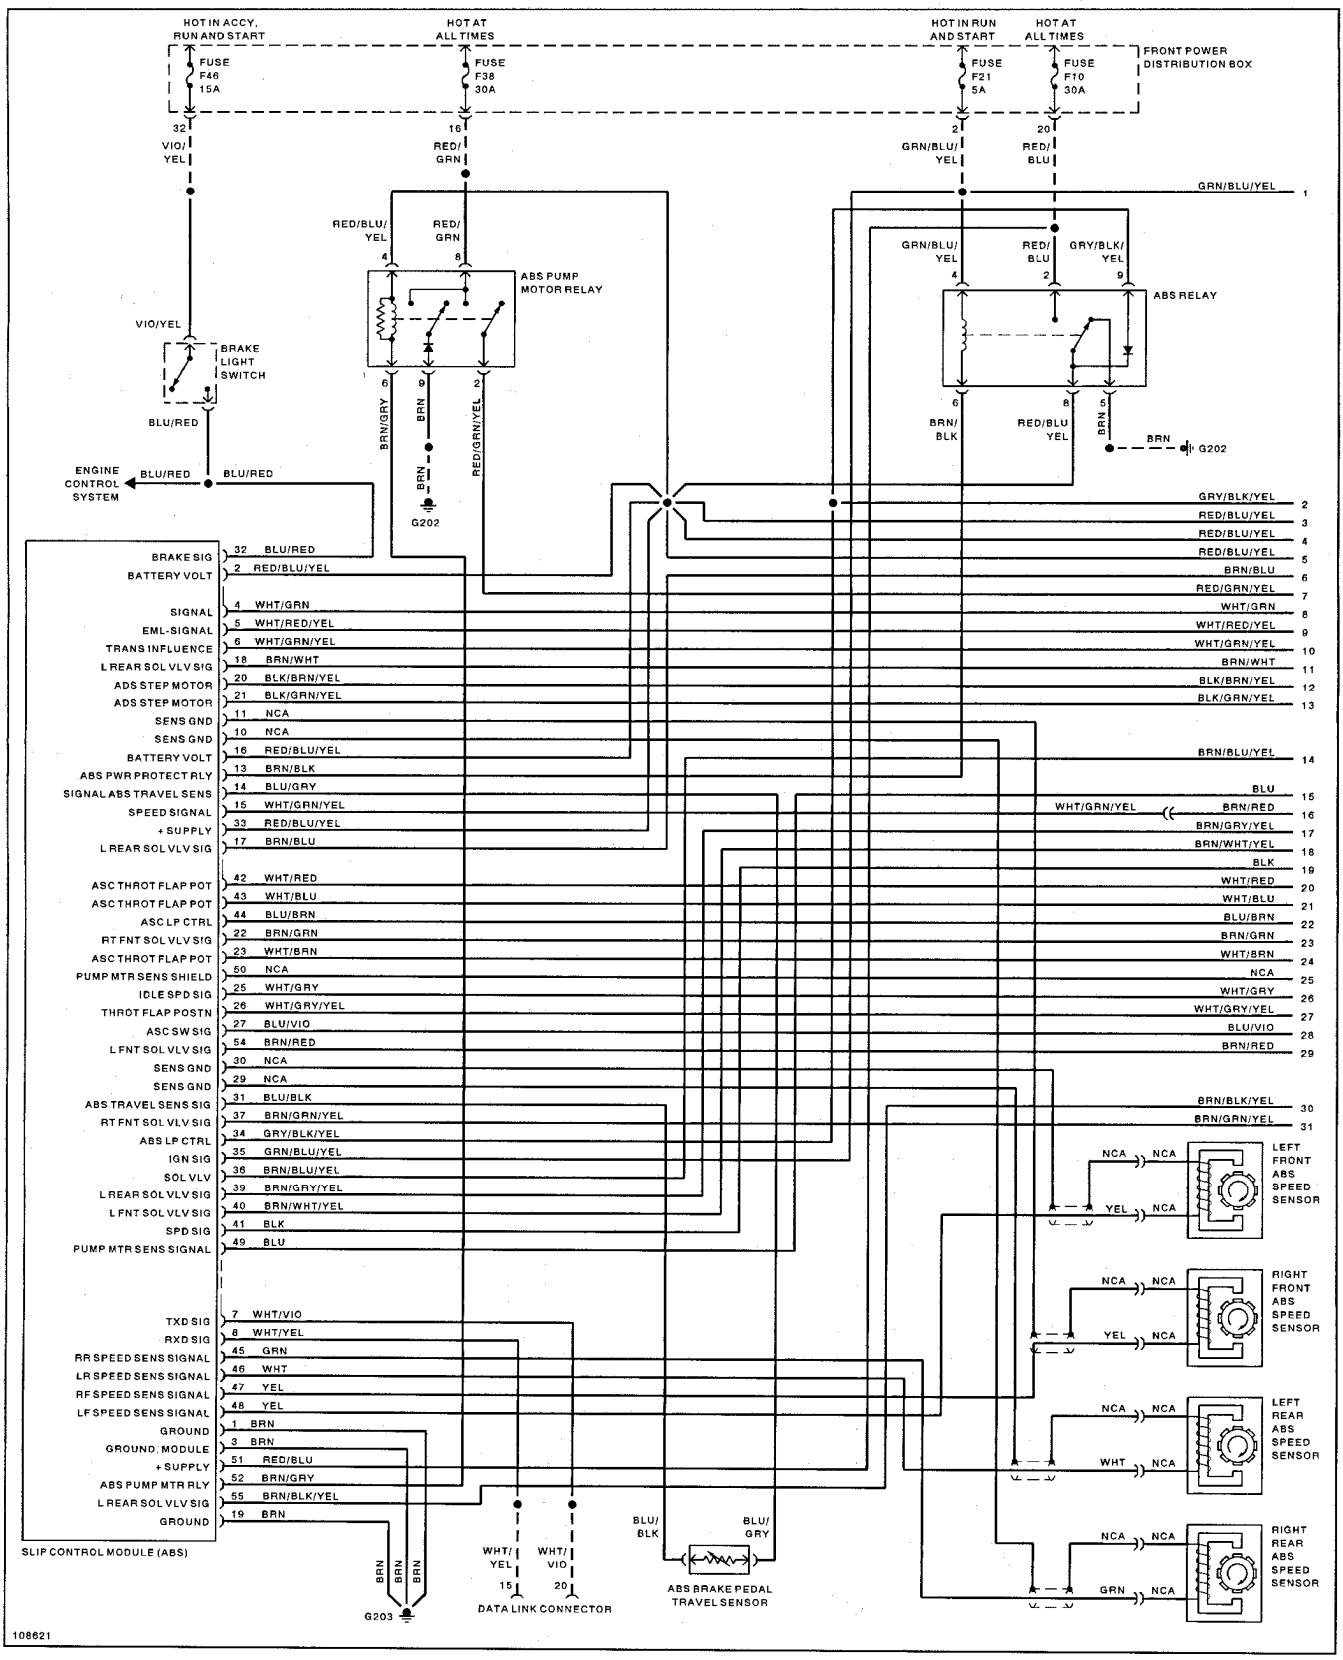


ABS/AST

1998 318i, 318ti w/Traction Control

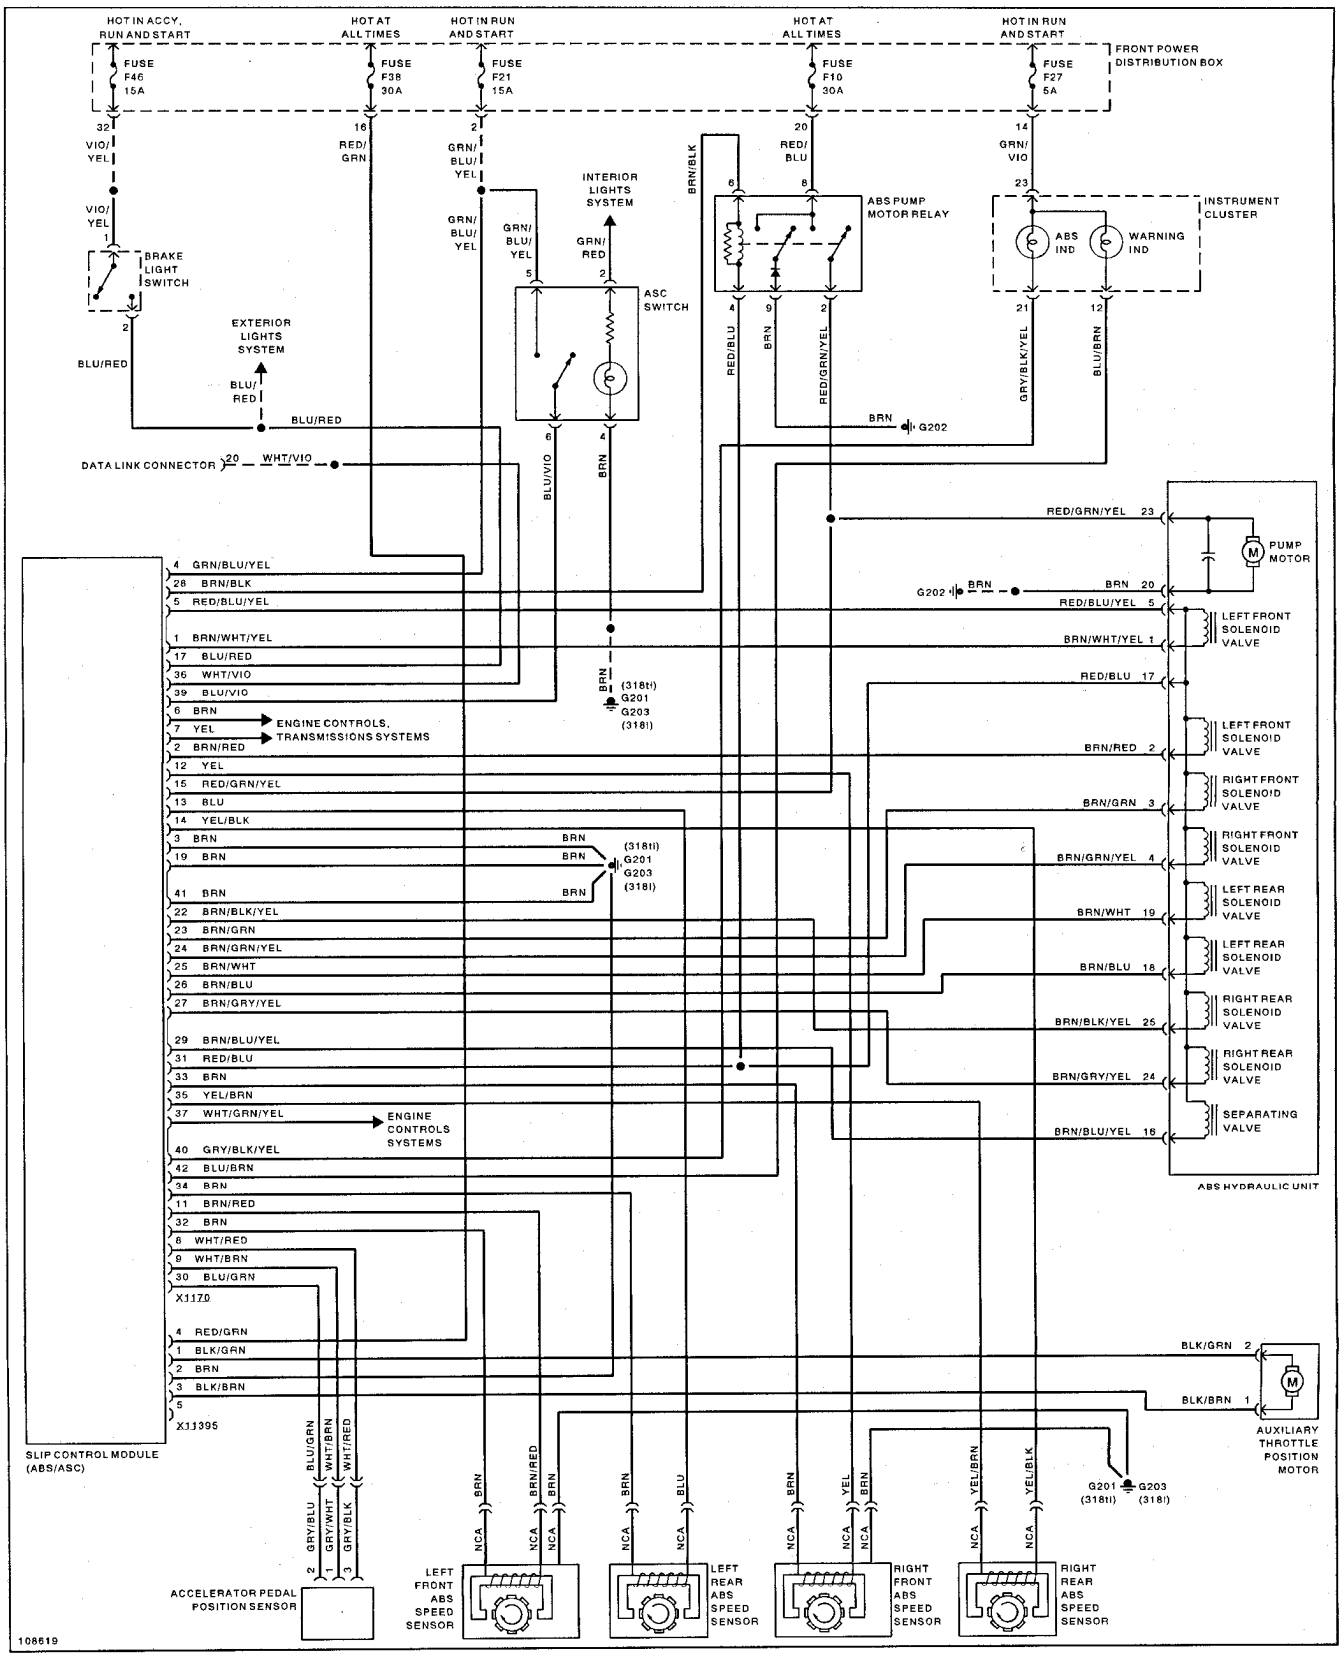


ABS/AST

1996 318i, 318iC & 318is w/Traction Control

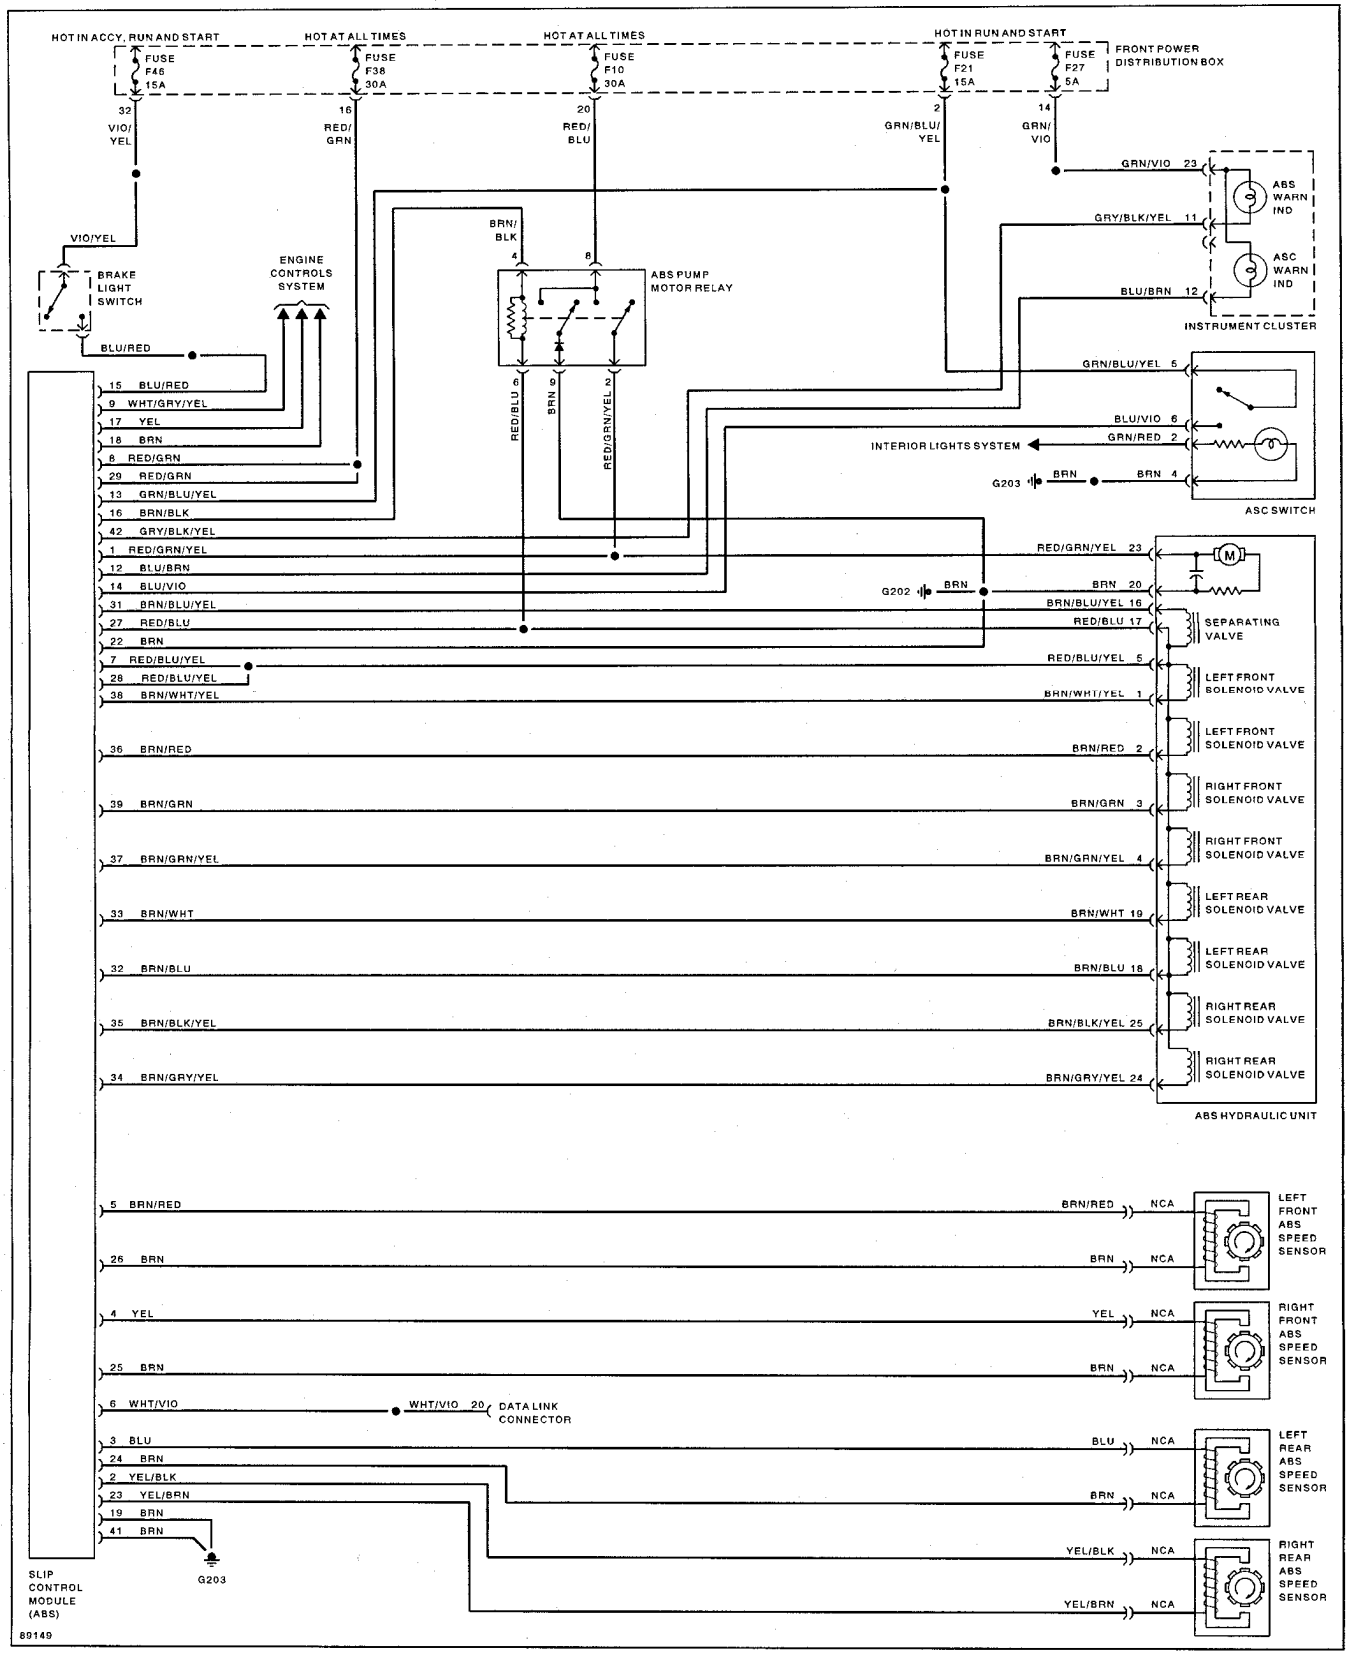

ABS/AST


1994-95 325i, 325iC & 325is, 1996-97 328i, 328iC & 328is, 1995-97 M3 w/ Traction Control (2 of 2)

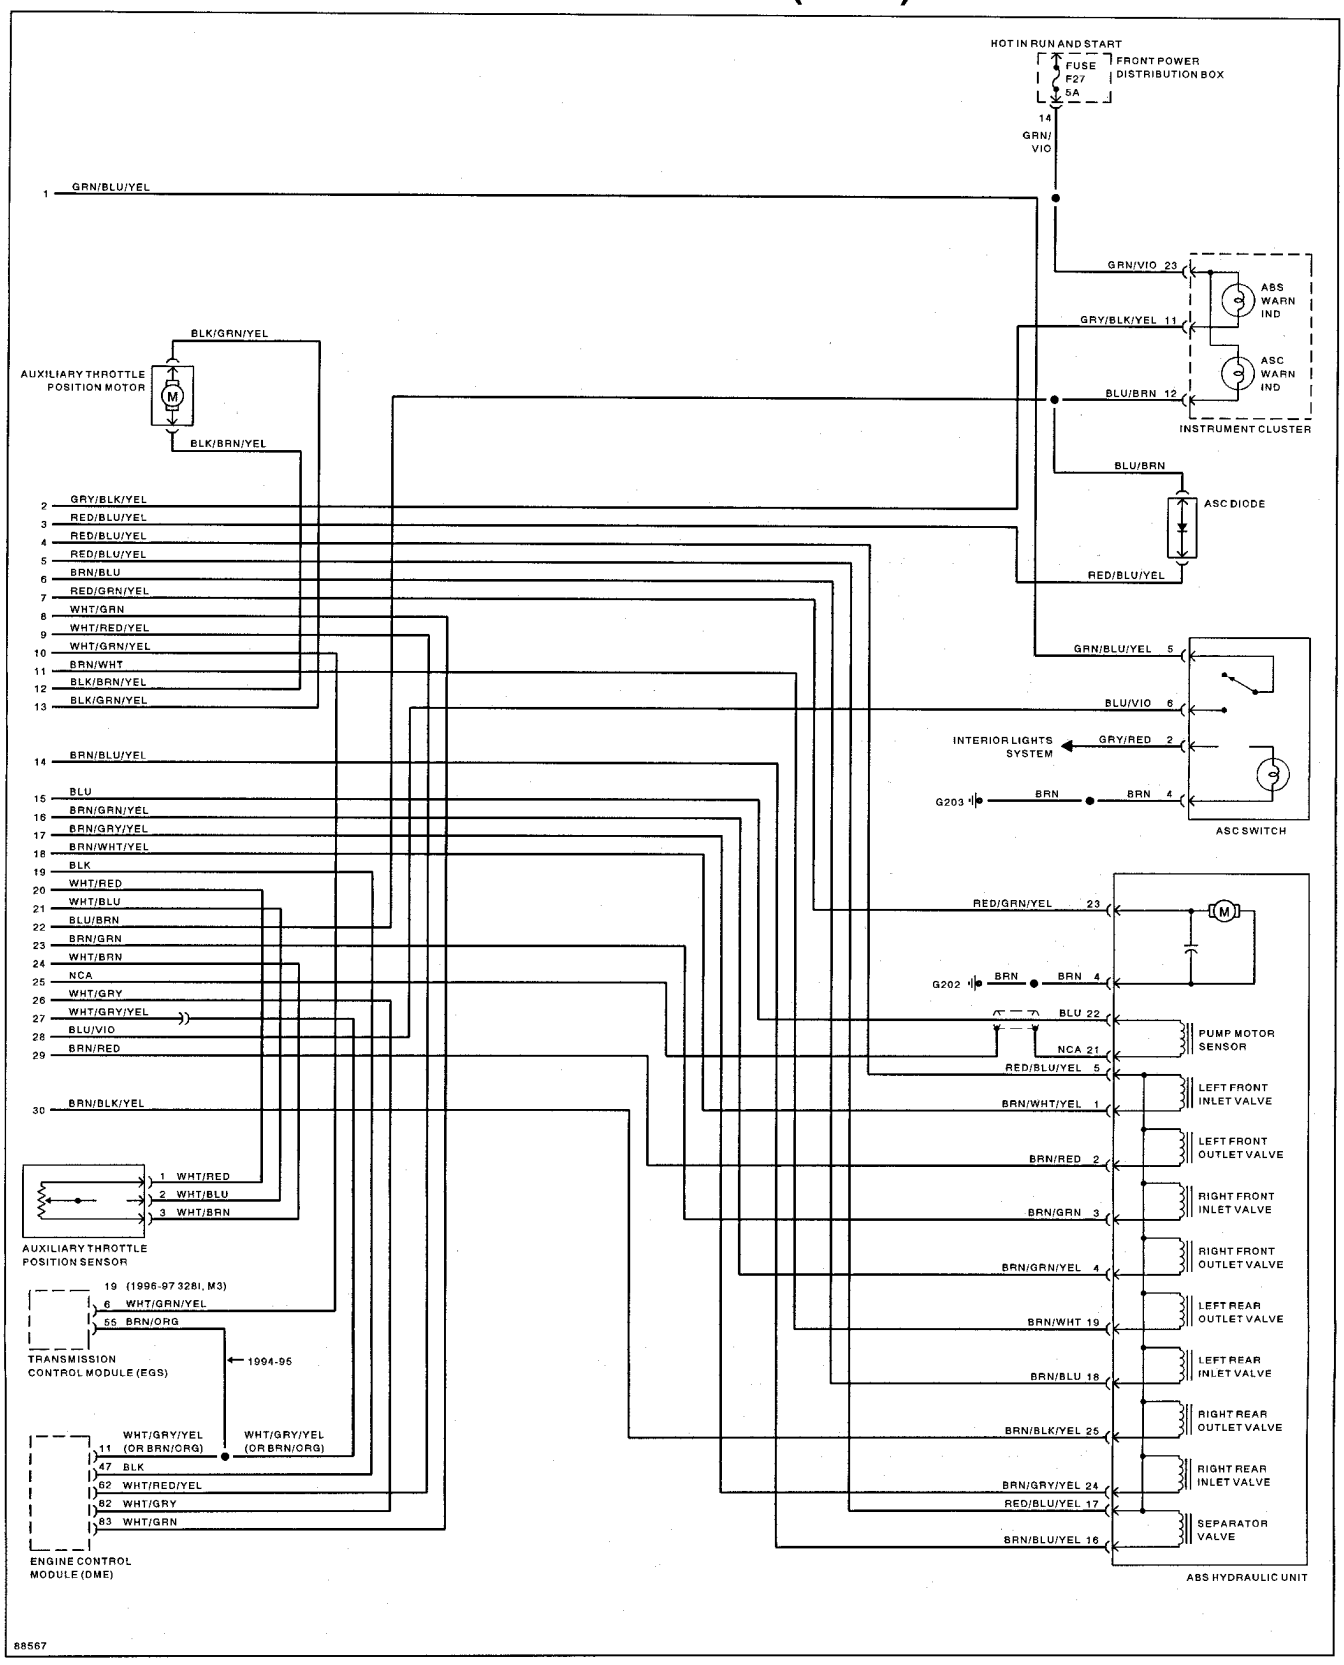

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


ABS/AST

1994-95 325i, 325iC & 325is, 1996-97 328i, 328iC & 328is, 1995-97 M3 w/ Traction Control (1 of 2)

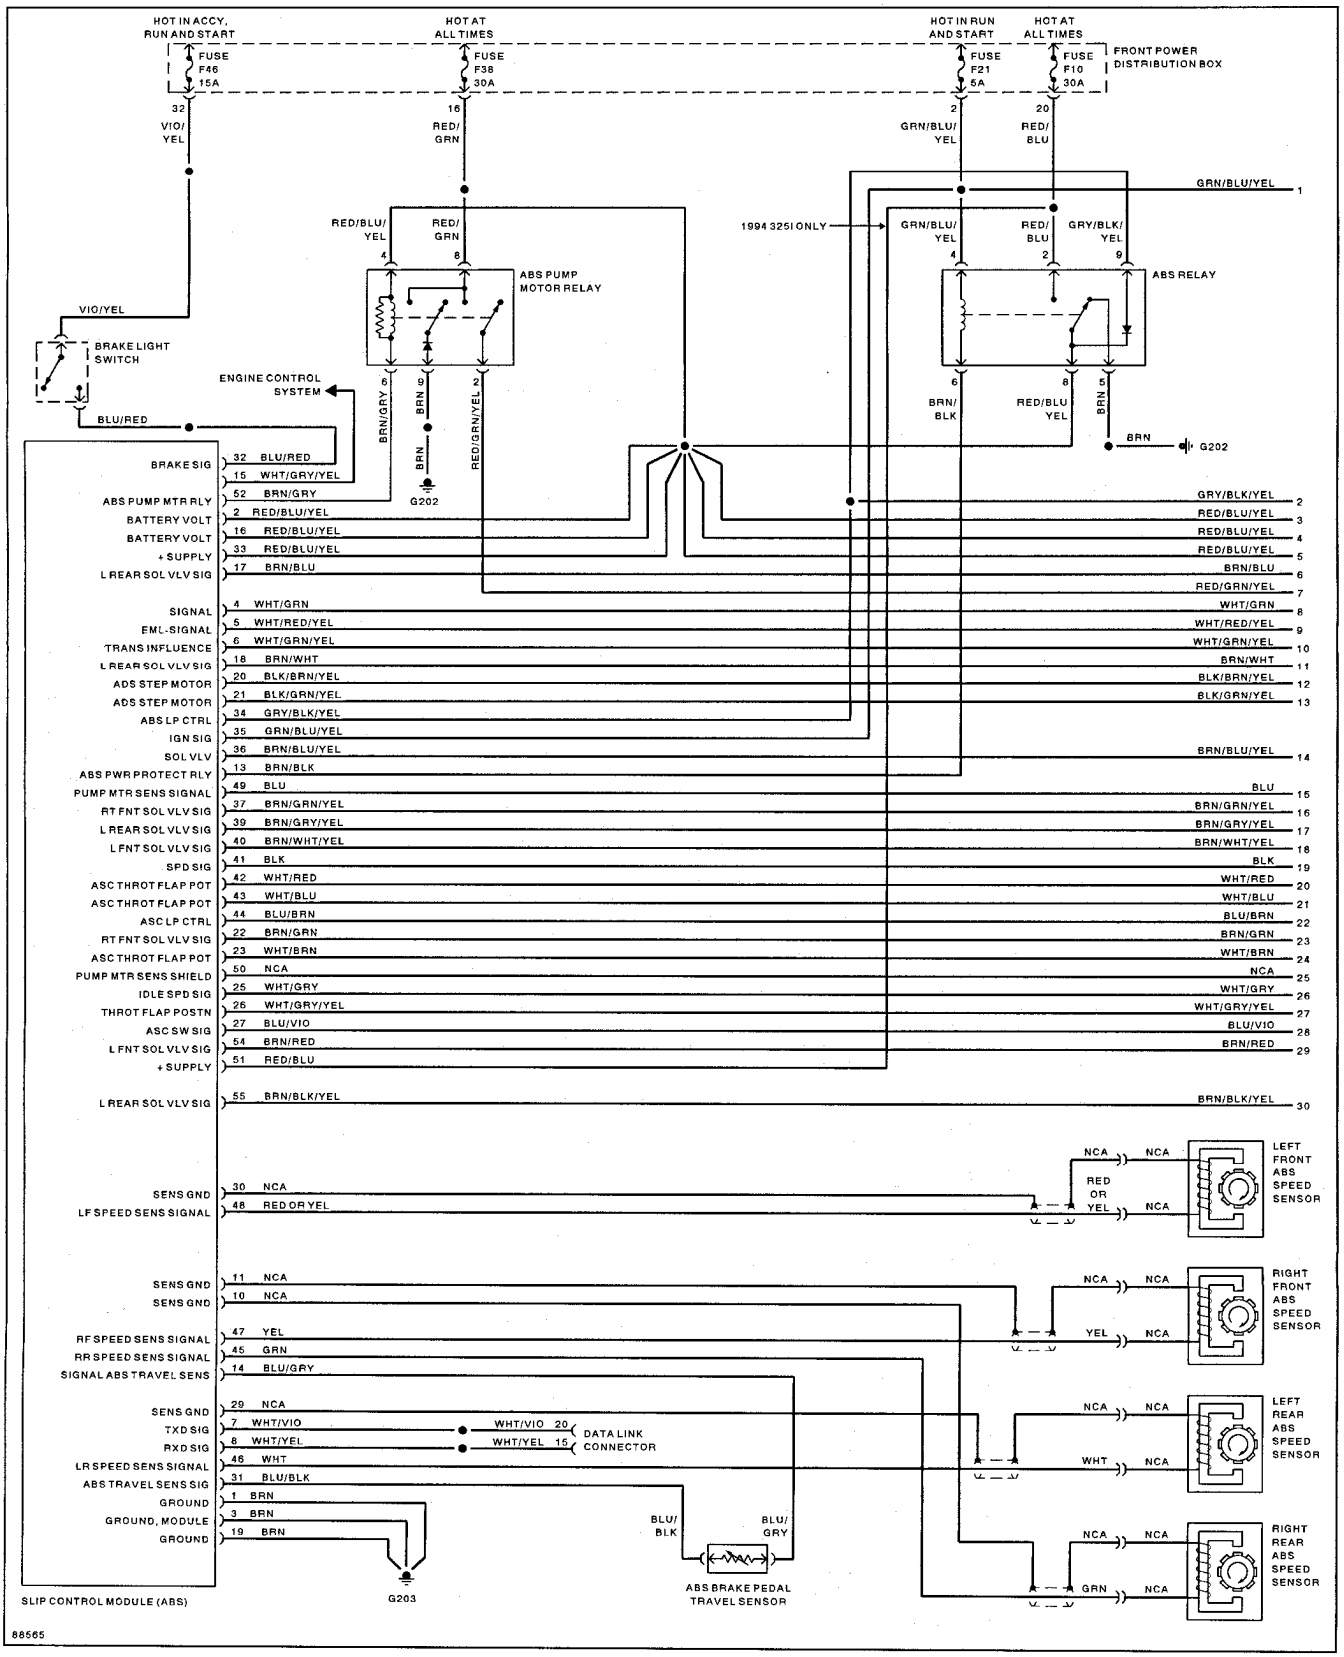


ABS/AST

1995-97 318ti & 1997 318i, 318iC & 318is w/Traction Control

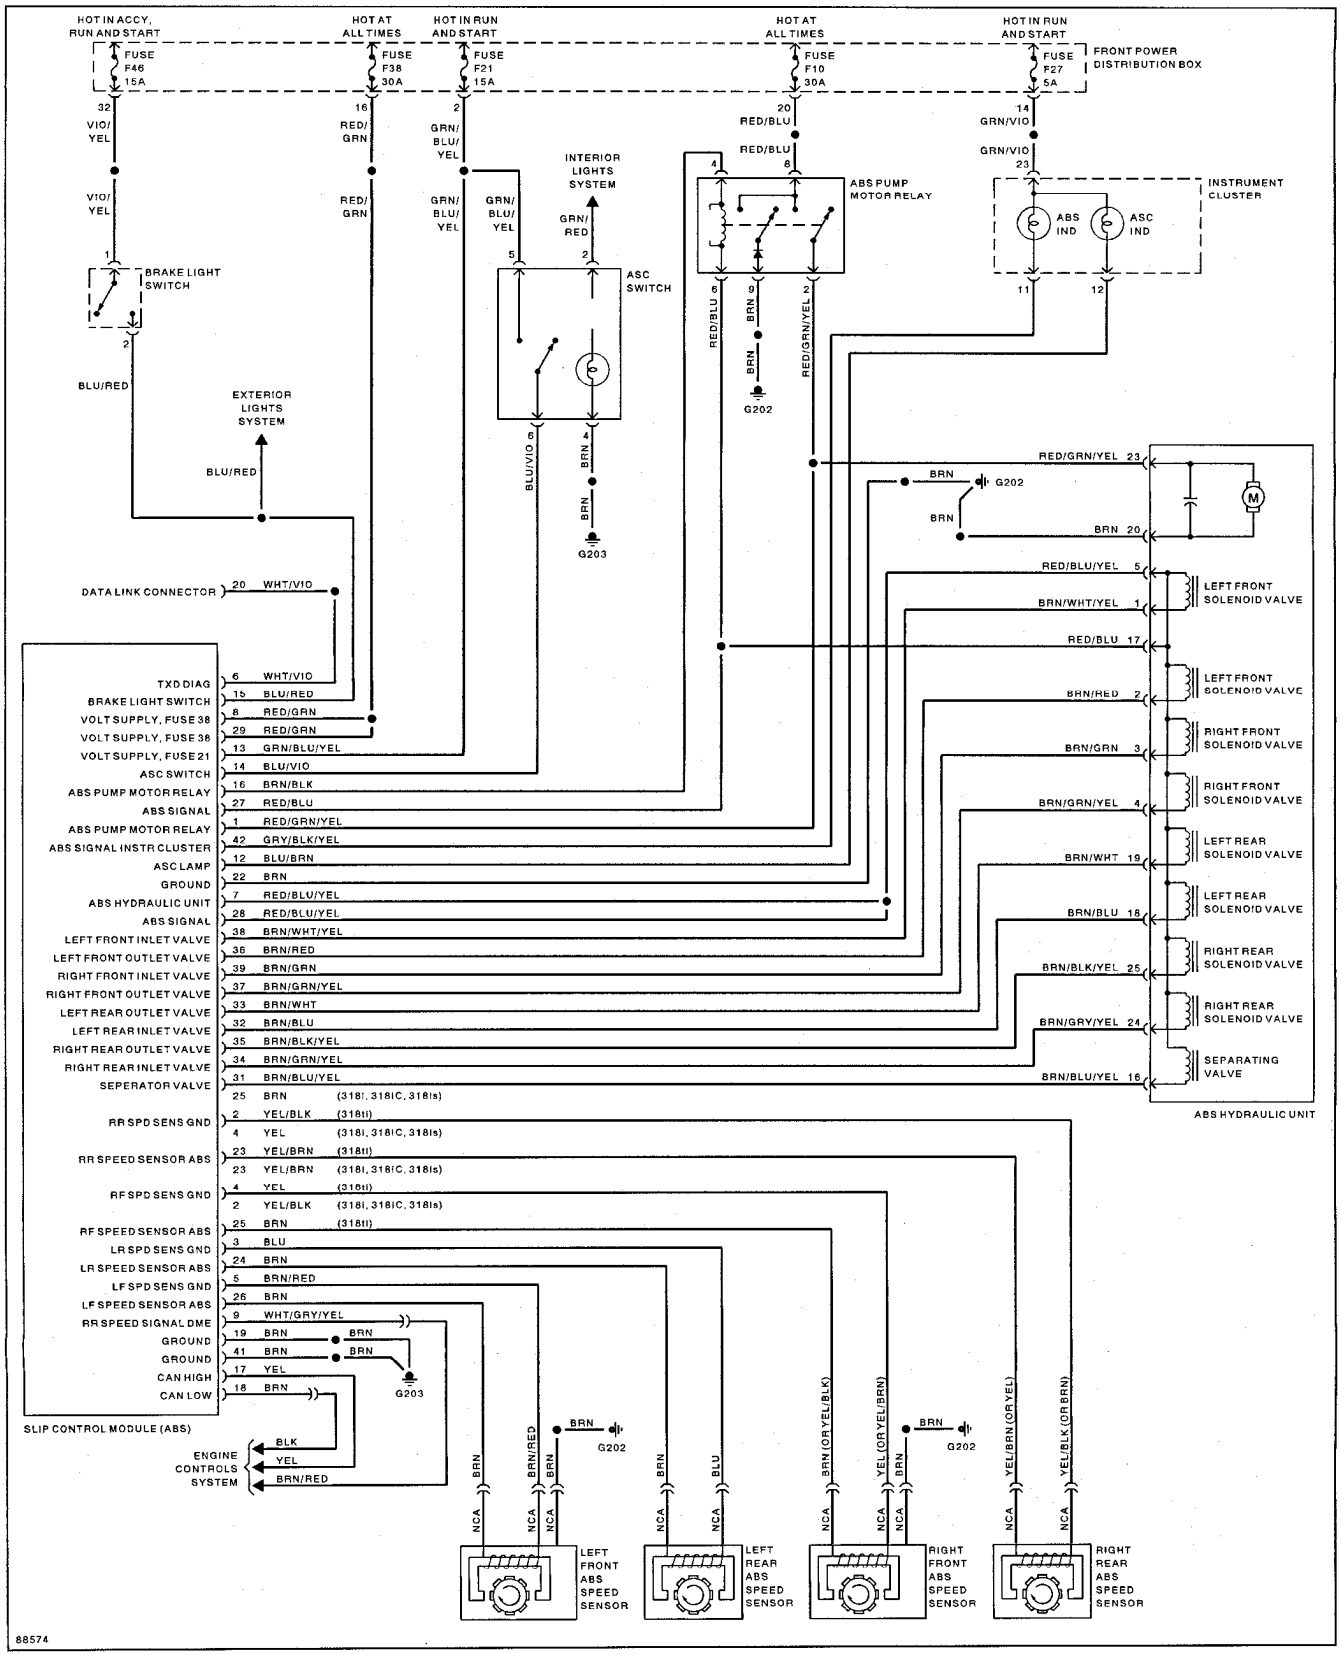


ABS

1992-94 w/o Traction Control

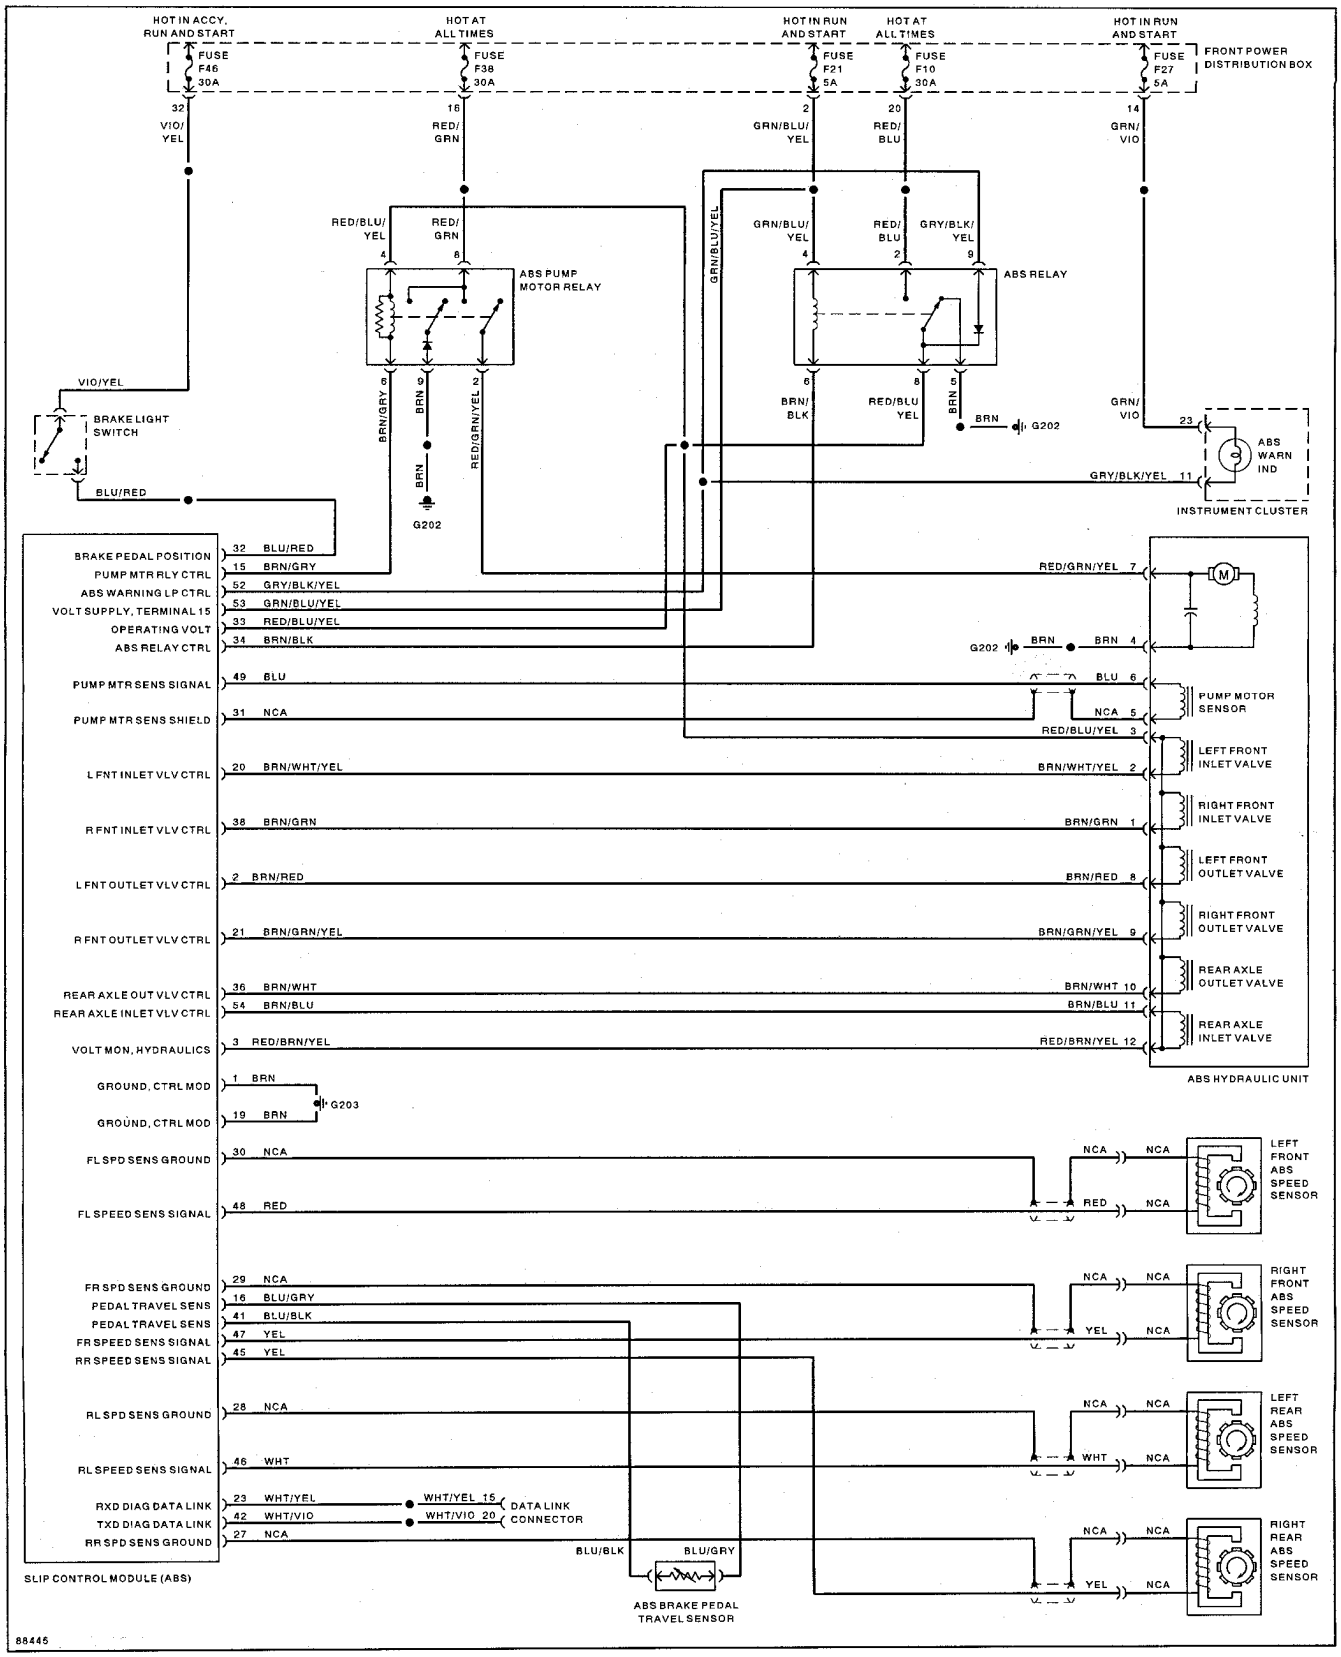


Cruise Control

1998

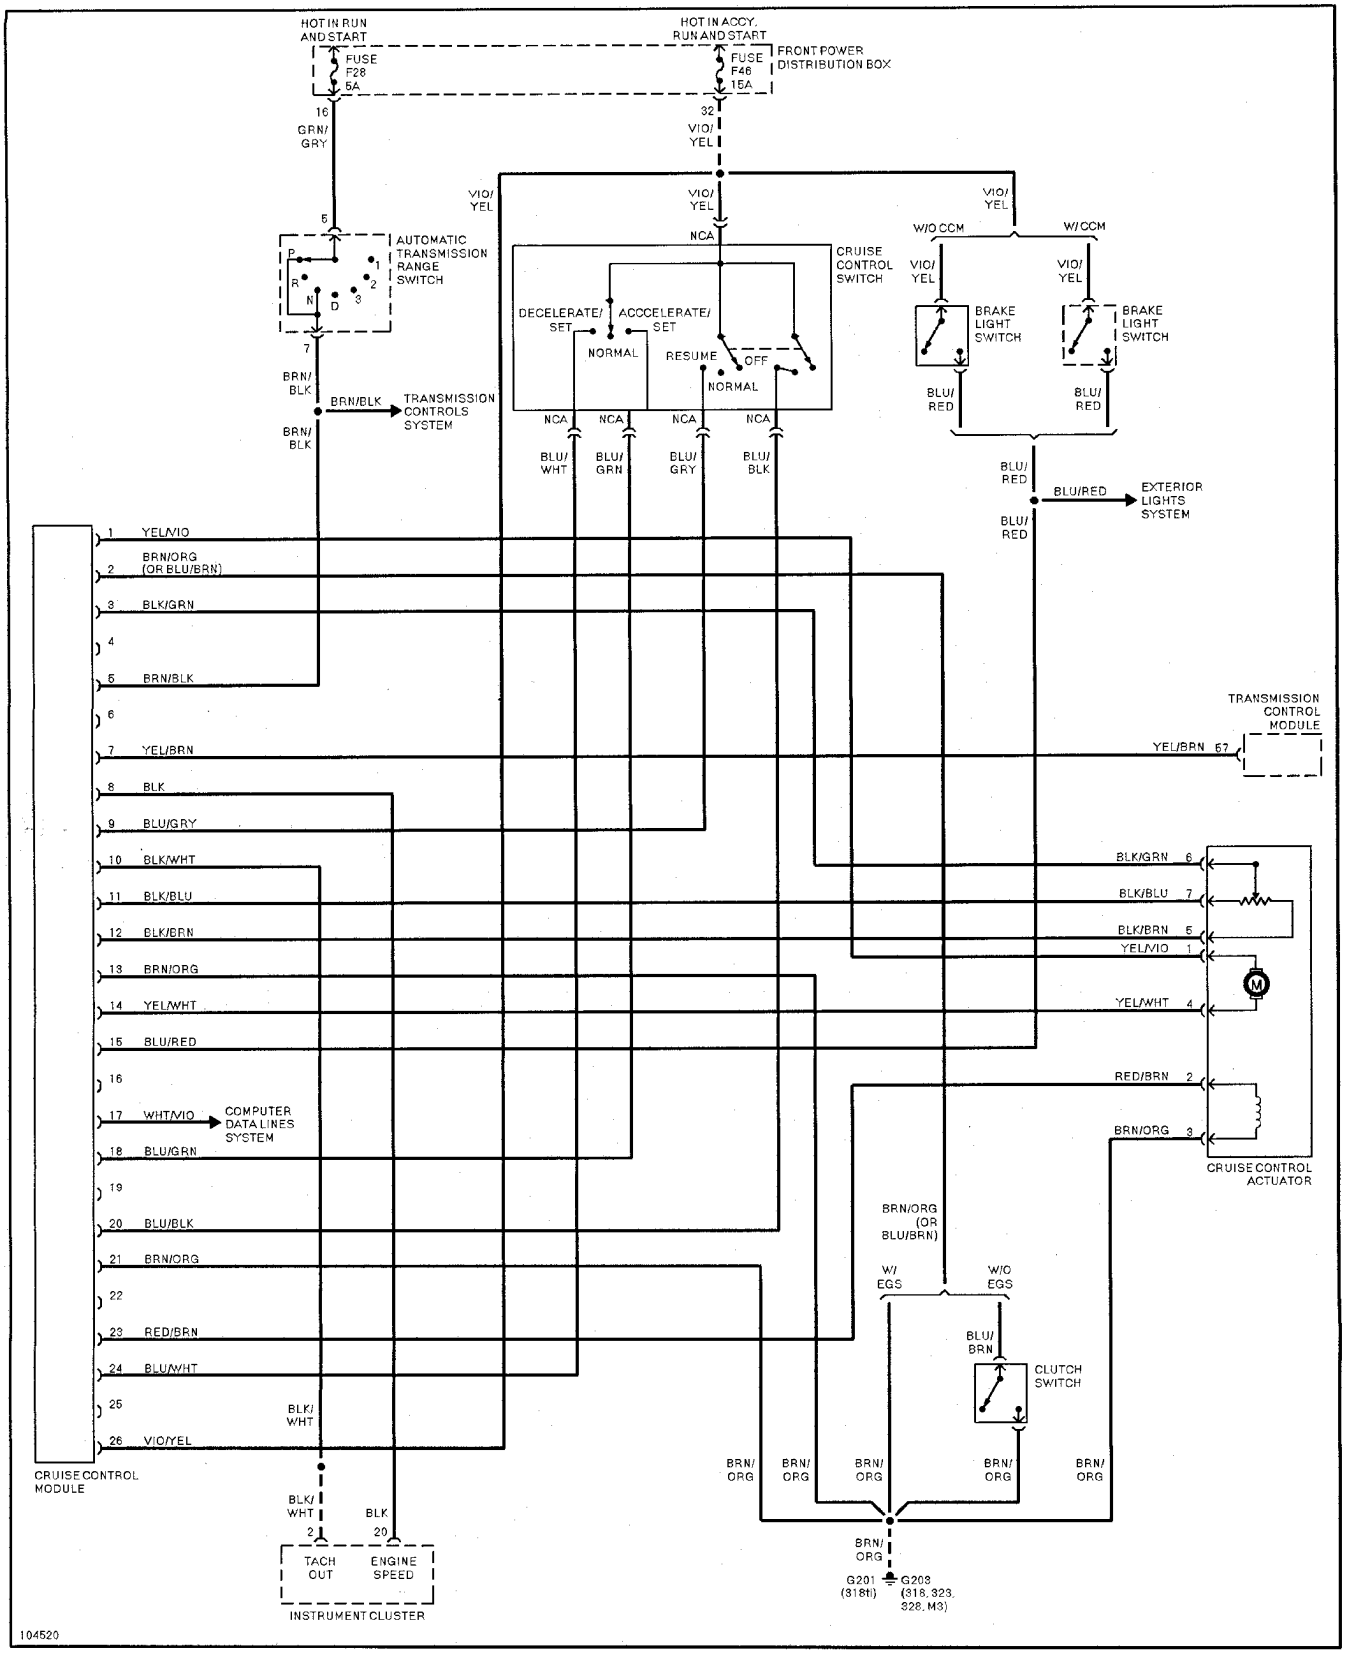


Cruise Control

1995-97 318ti

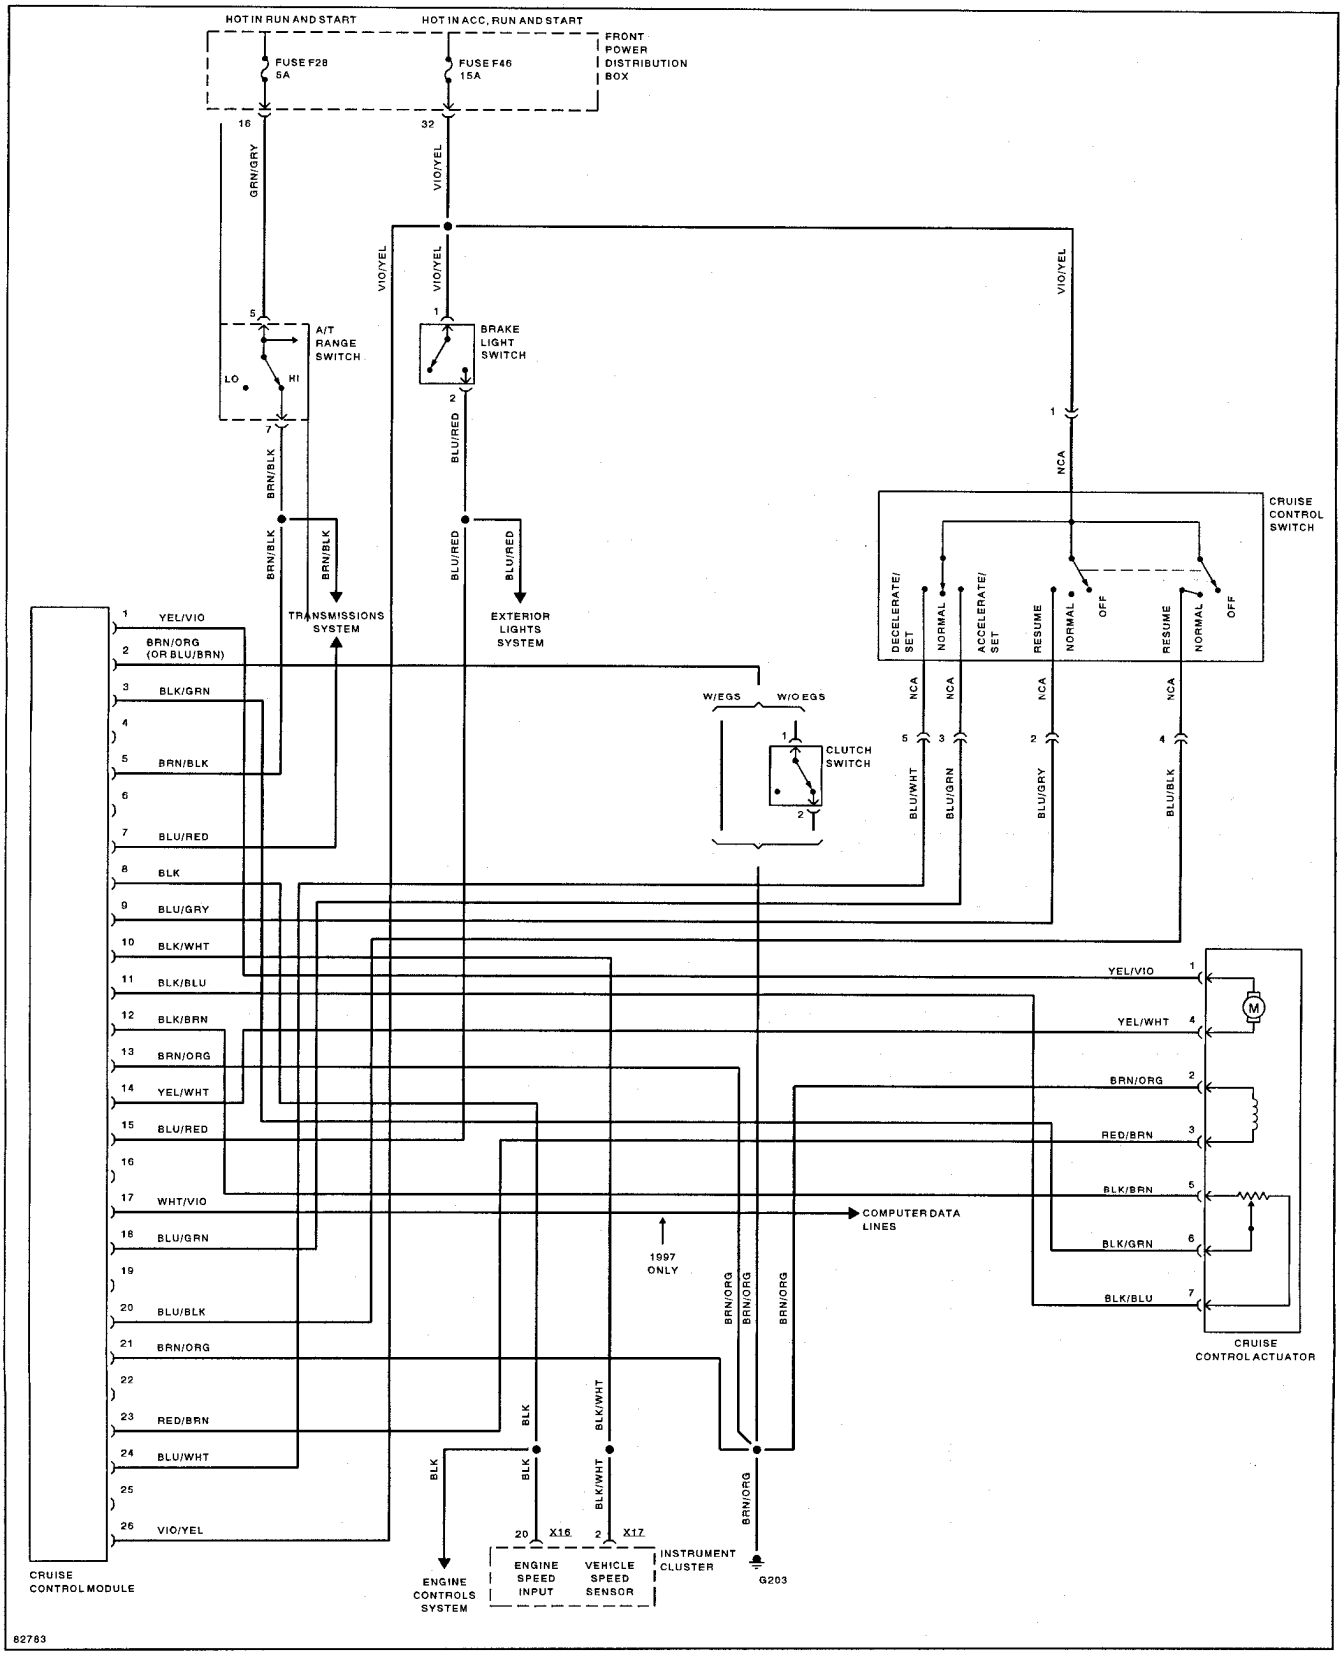


Cruise Control

1995 Late Production & 1996-97 Except 318ti

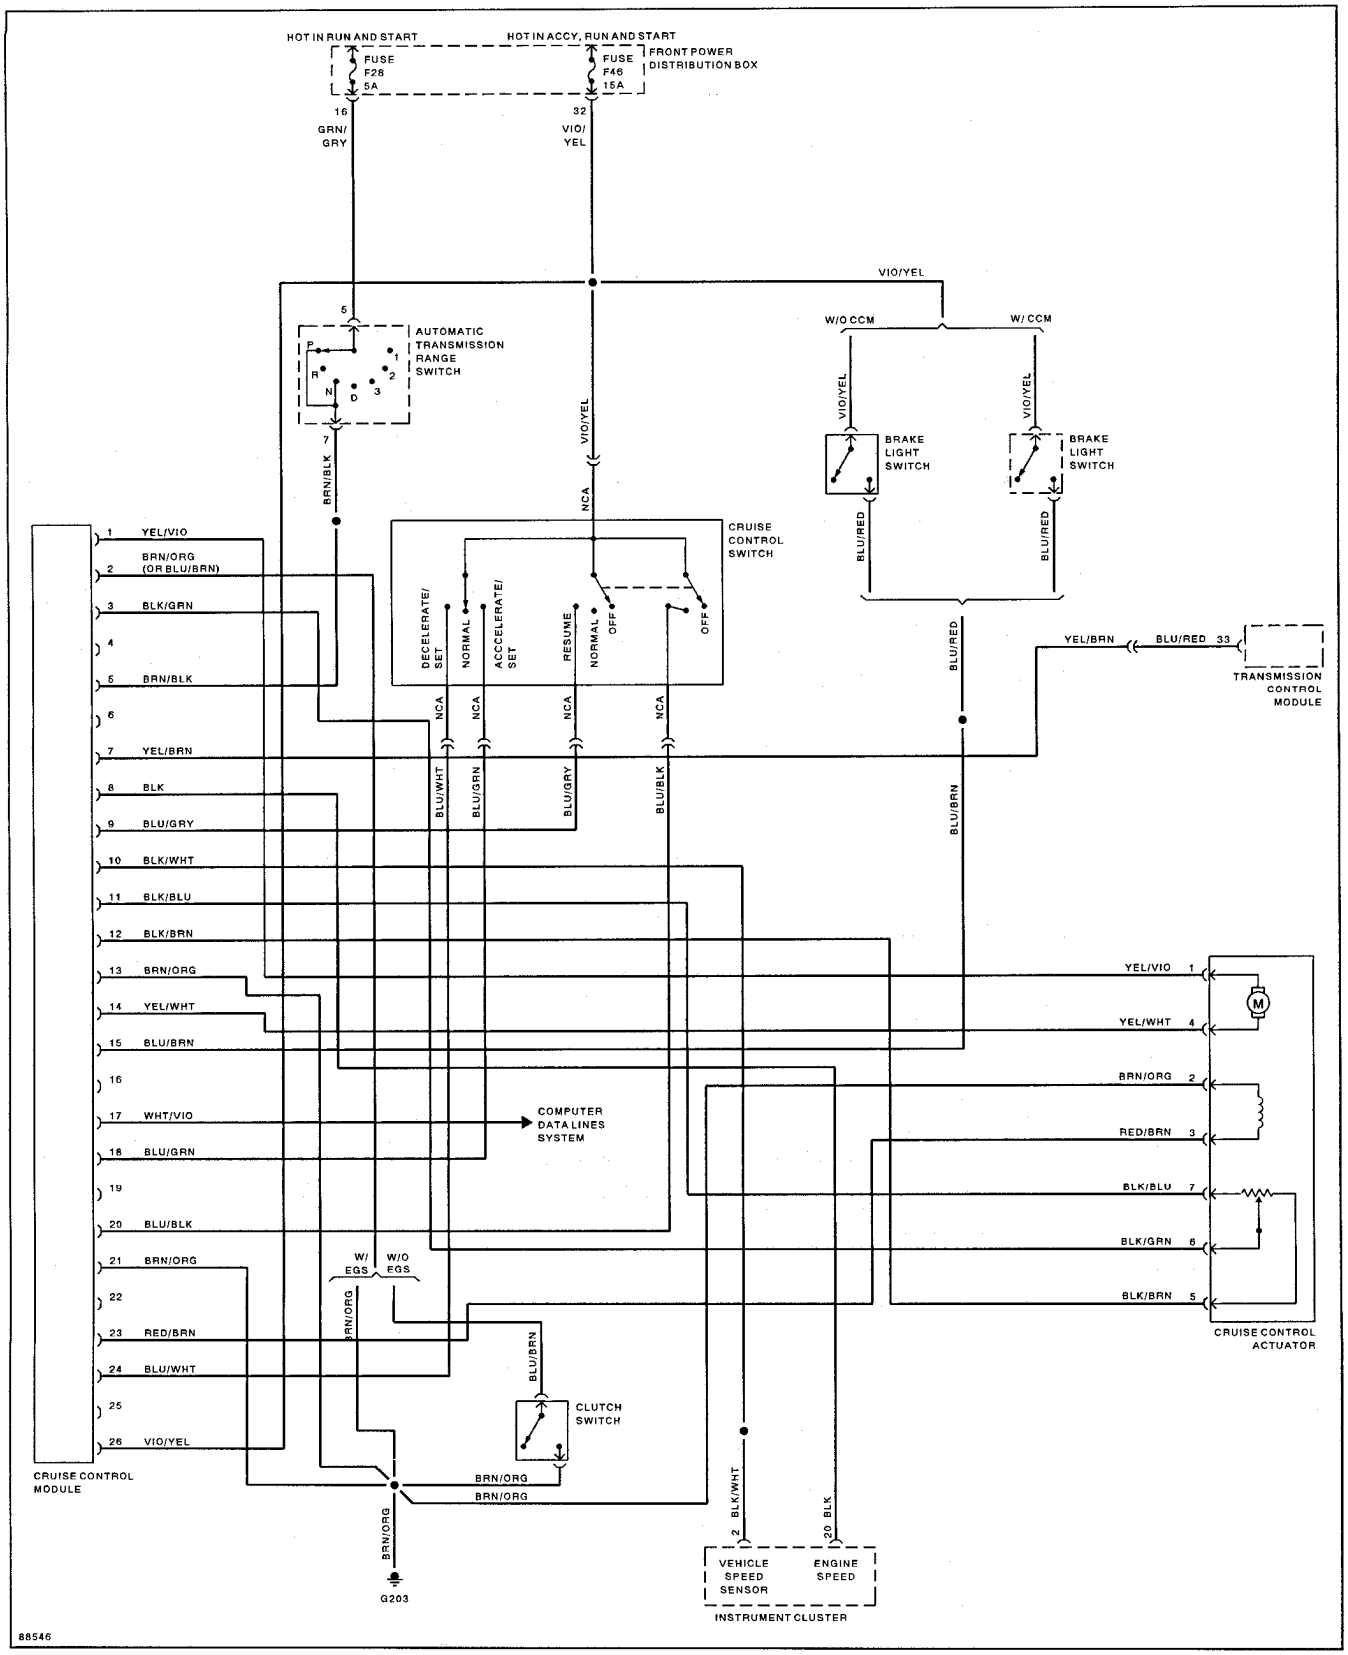


Cruise Control

1994 & 1995 Early Production Except 318ti

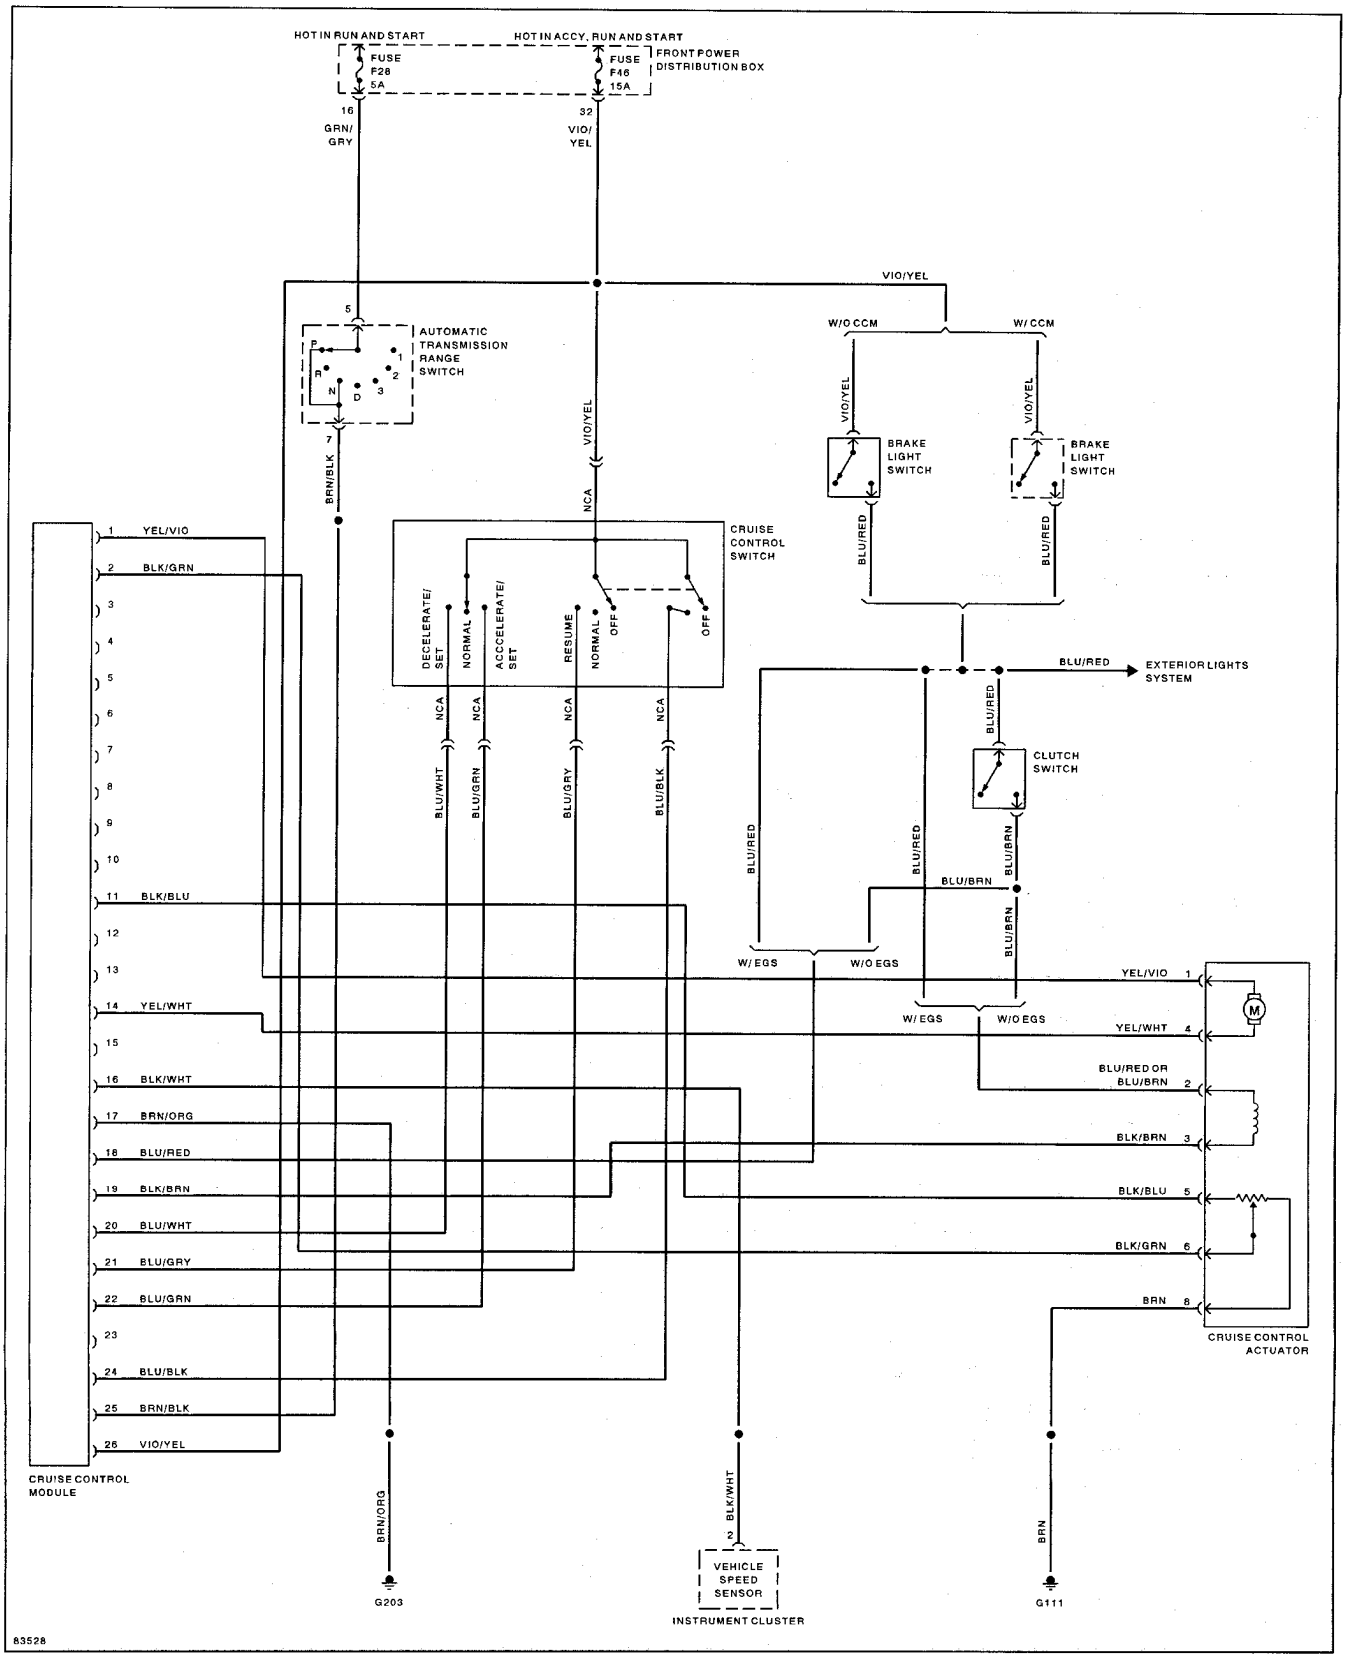


Cruise Control
1992-93

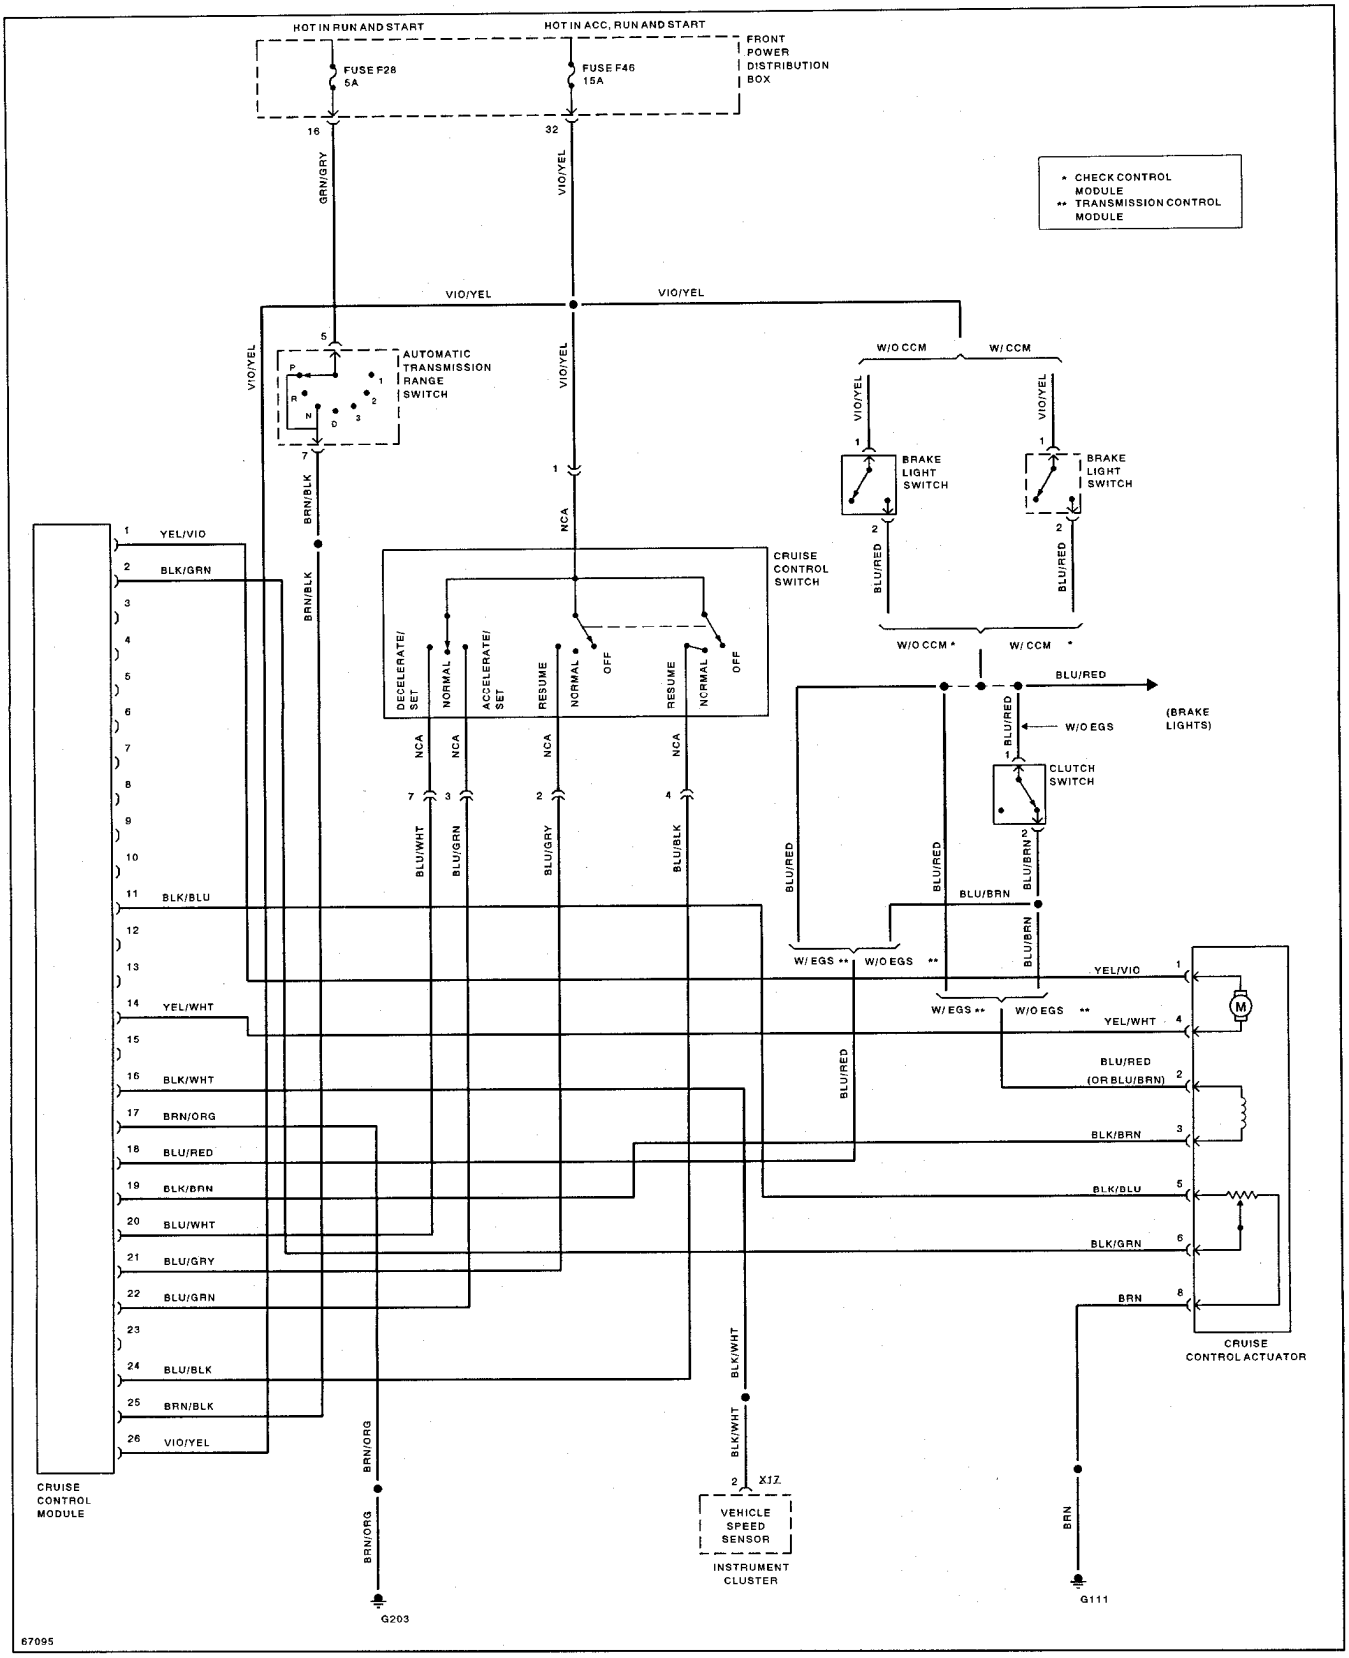


Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Shift Interlock

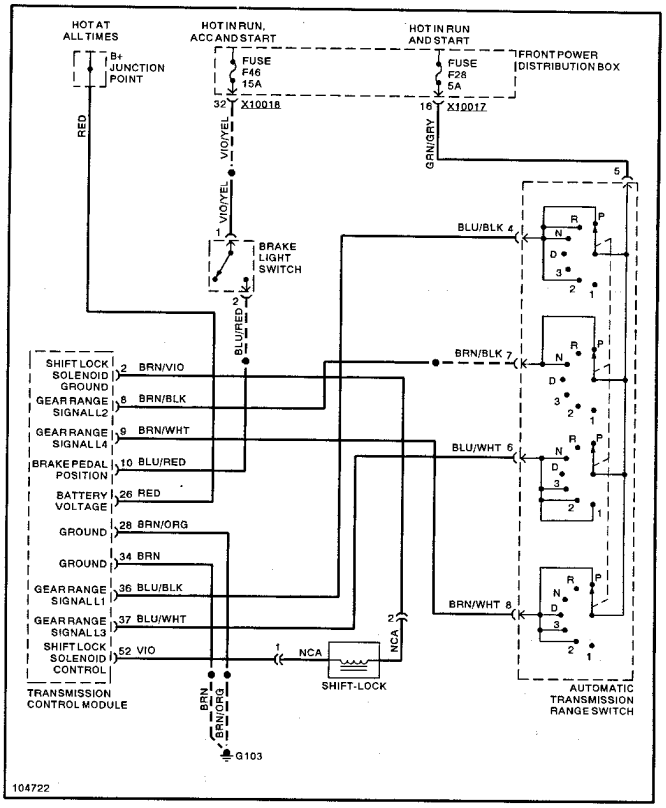


1998
Except 318i, 318ti

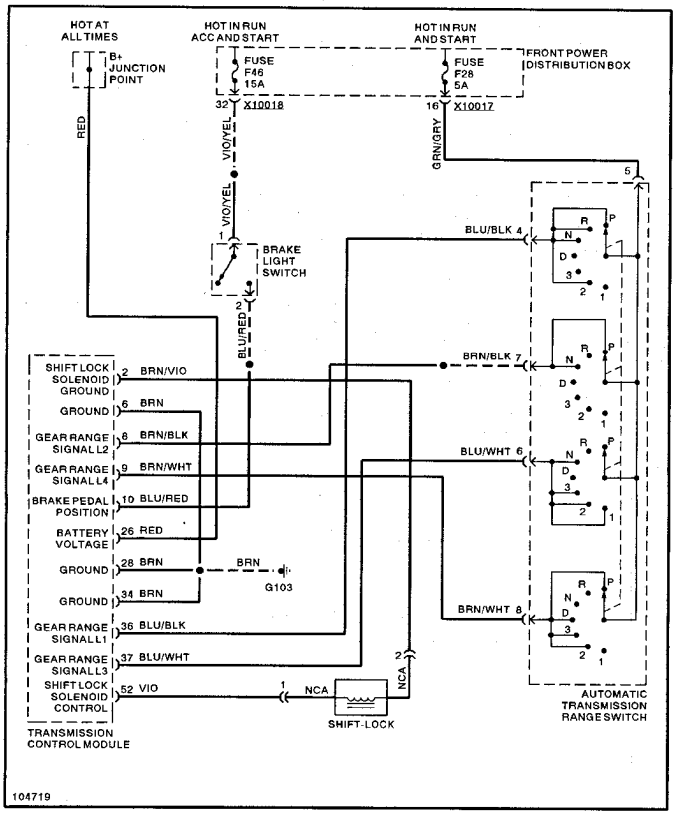


1998
318i, 318ti

Shift Interlock

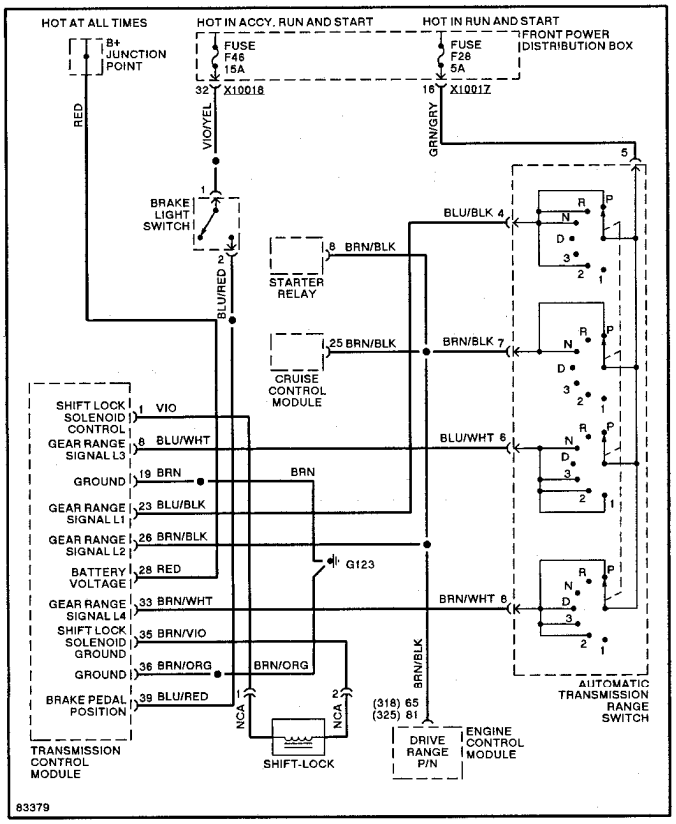


1992-97 Except 318ti

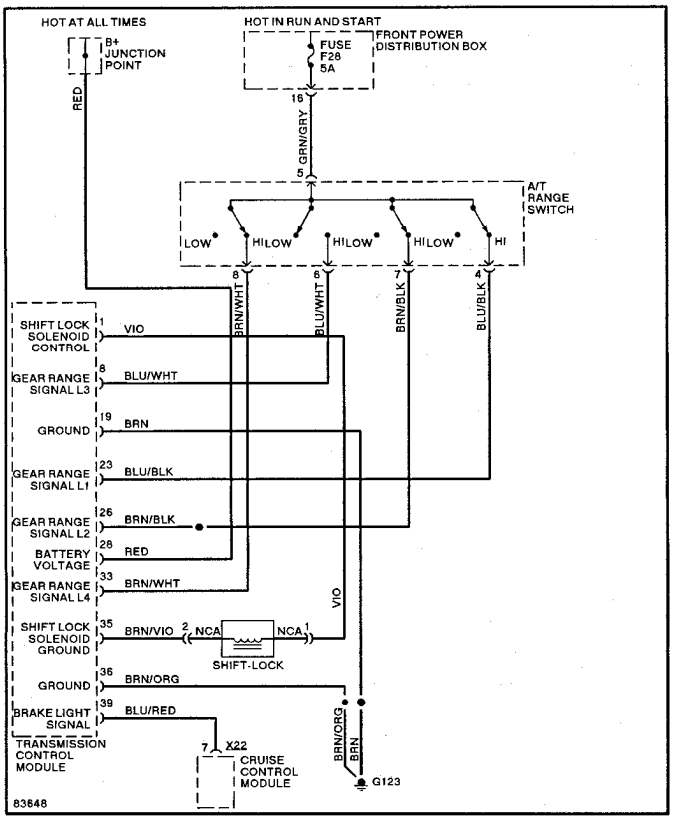

1995-97 318ti


Transmission Electronics

1998 M3 (2 of 2)

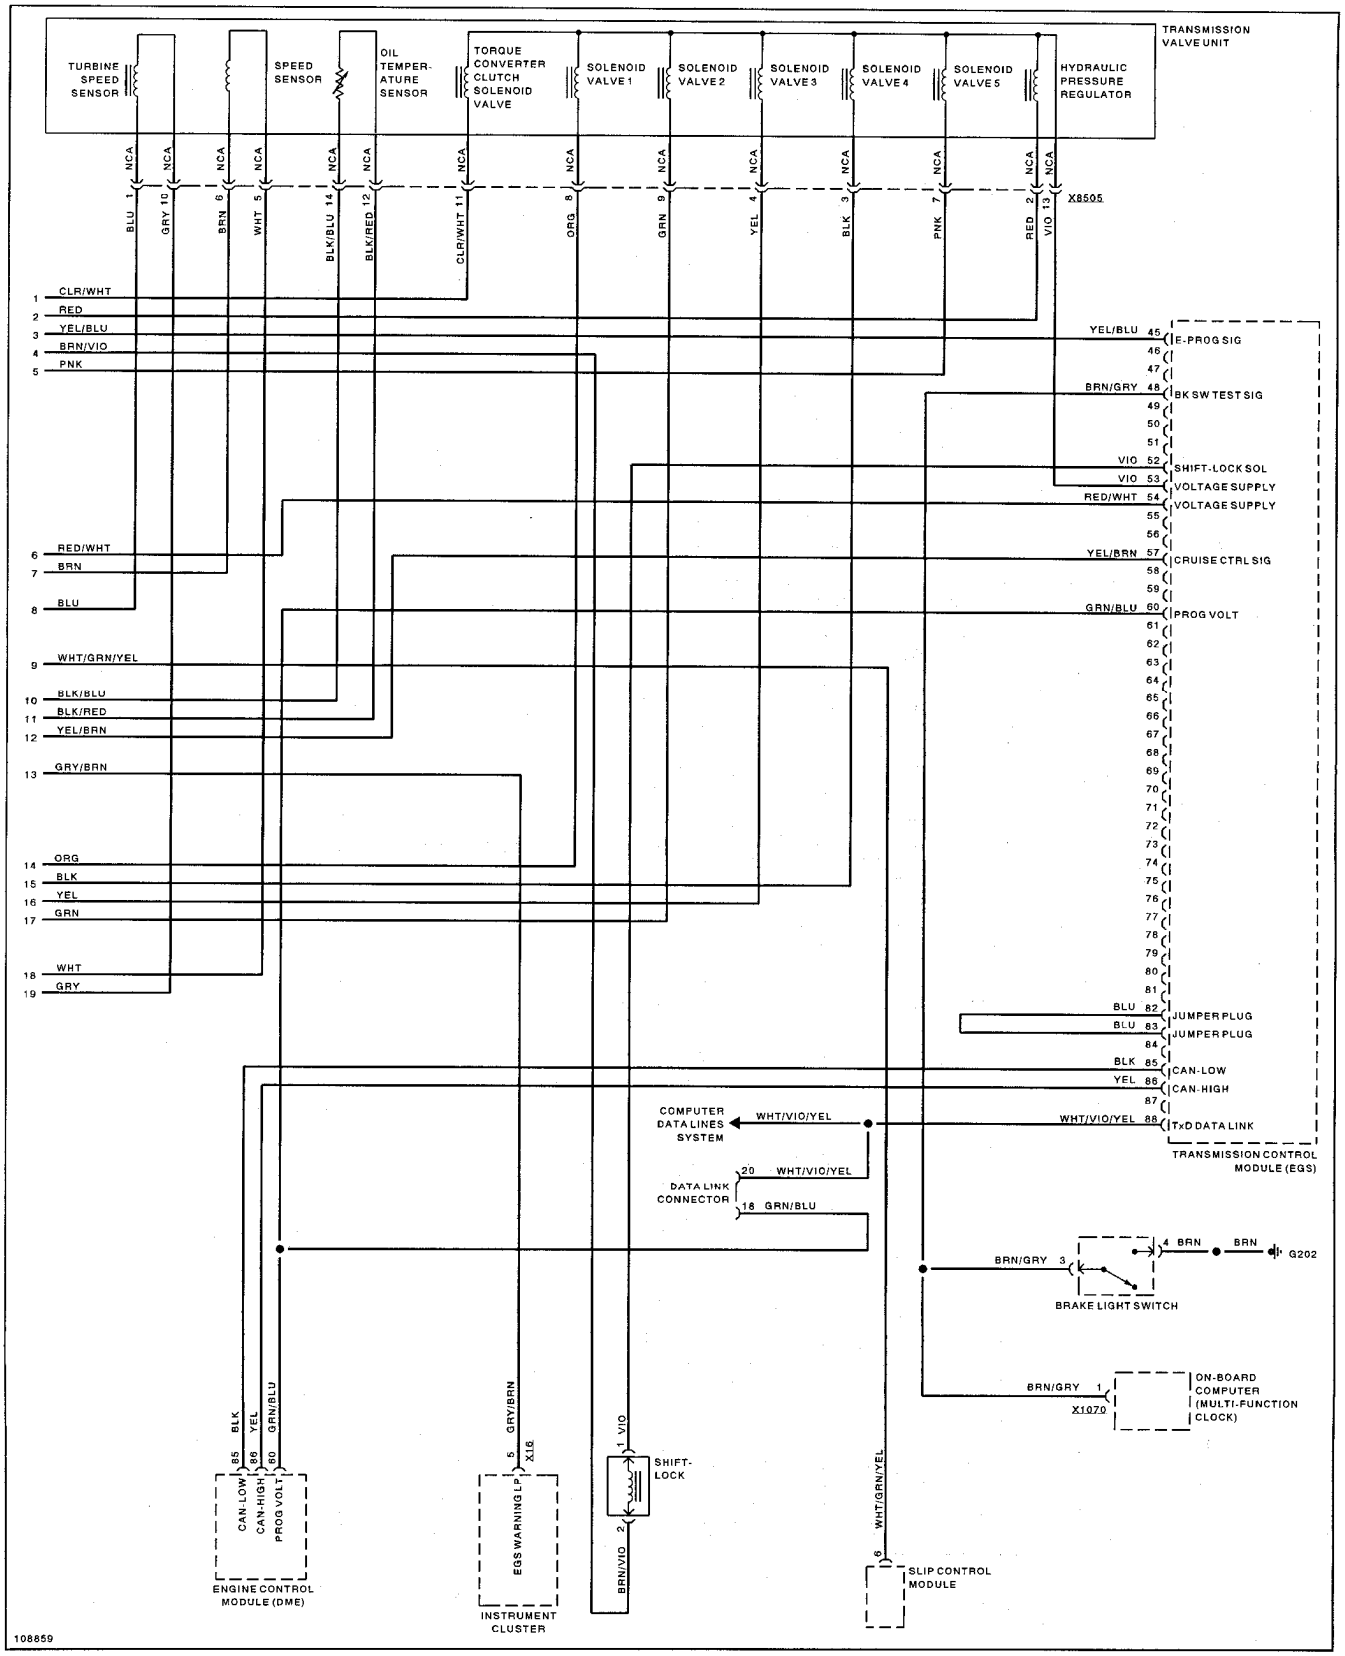


Transmission Electronics

1998 M3 (1 of 2)

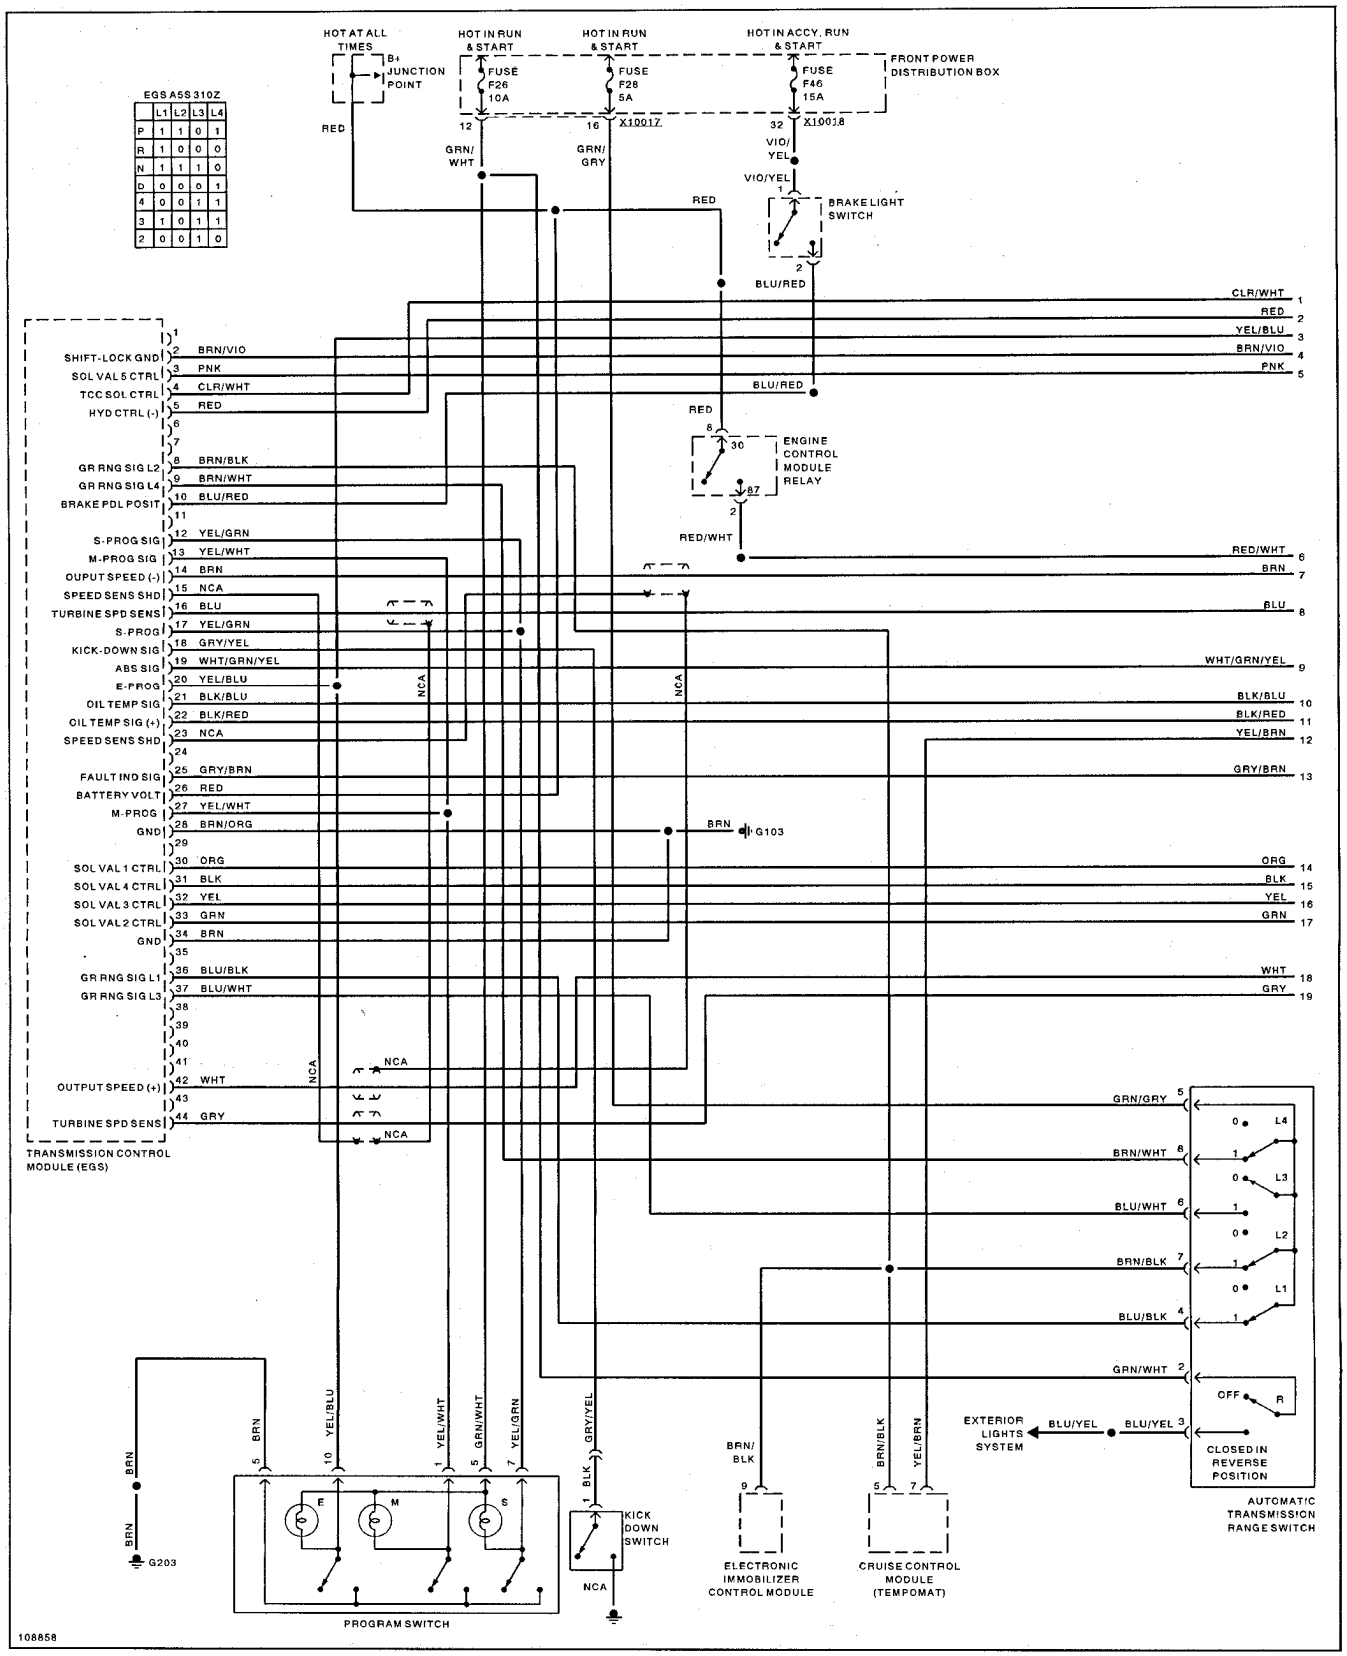


Transmission Electronics

1995-97 M3 (2 of 2)

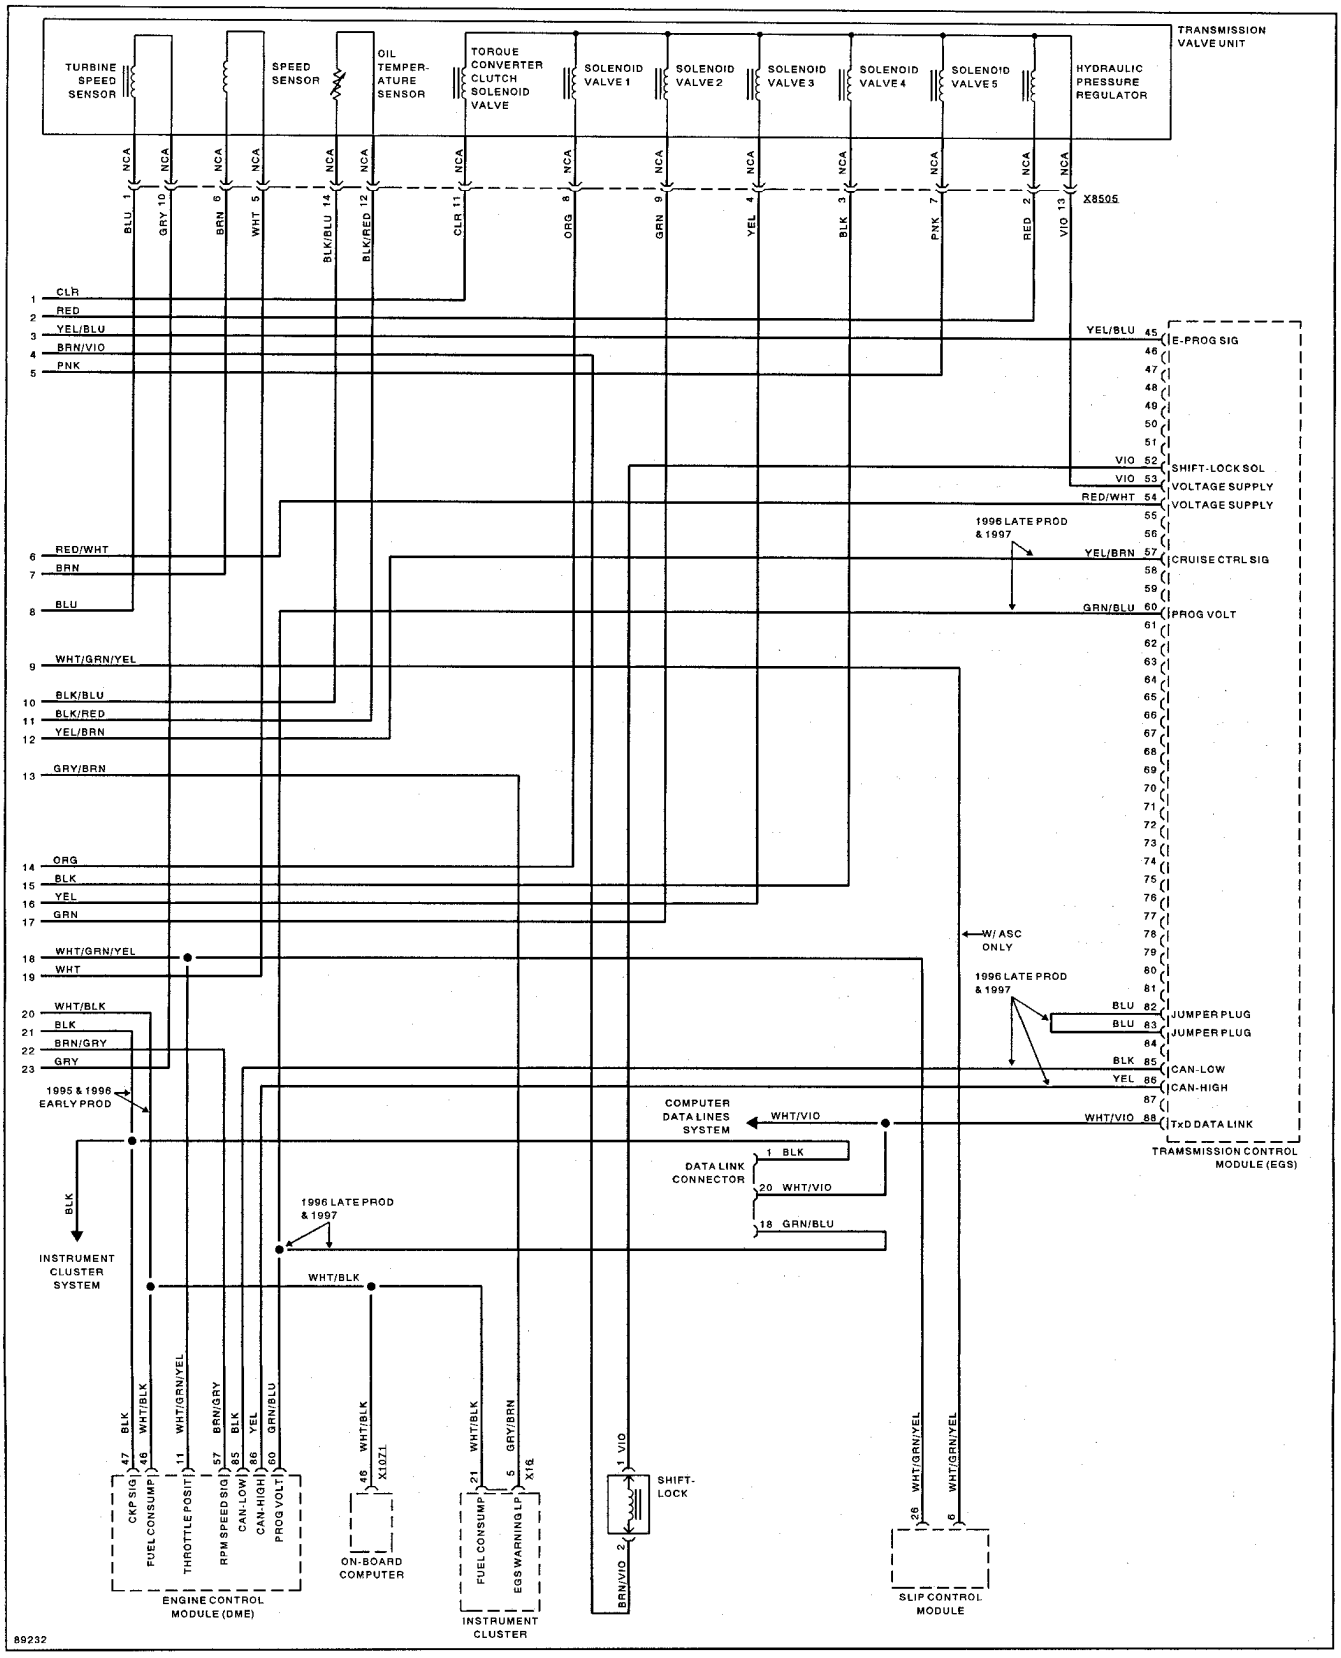


Transmission Electronics

1995-97 M3 (1 of 2)

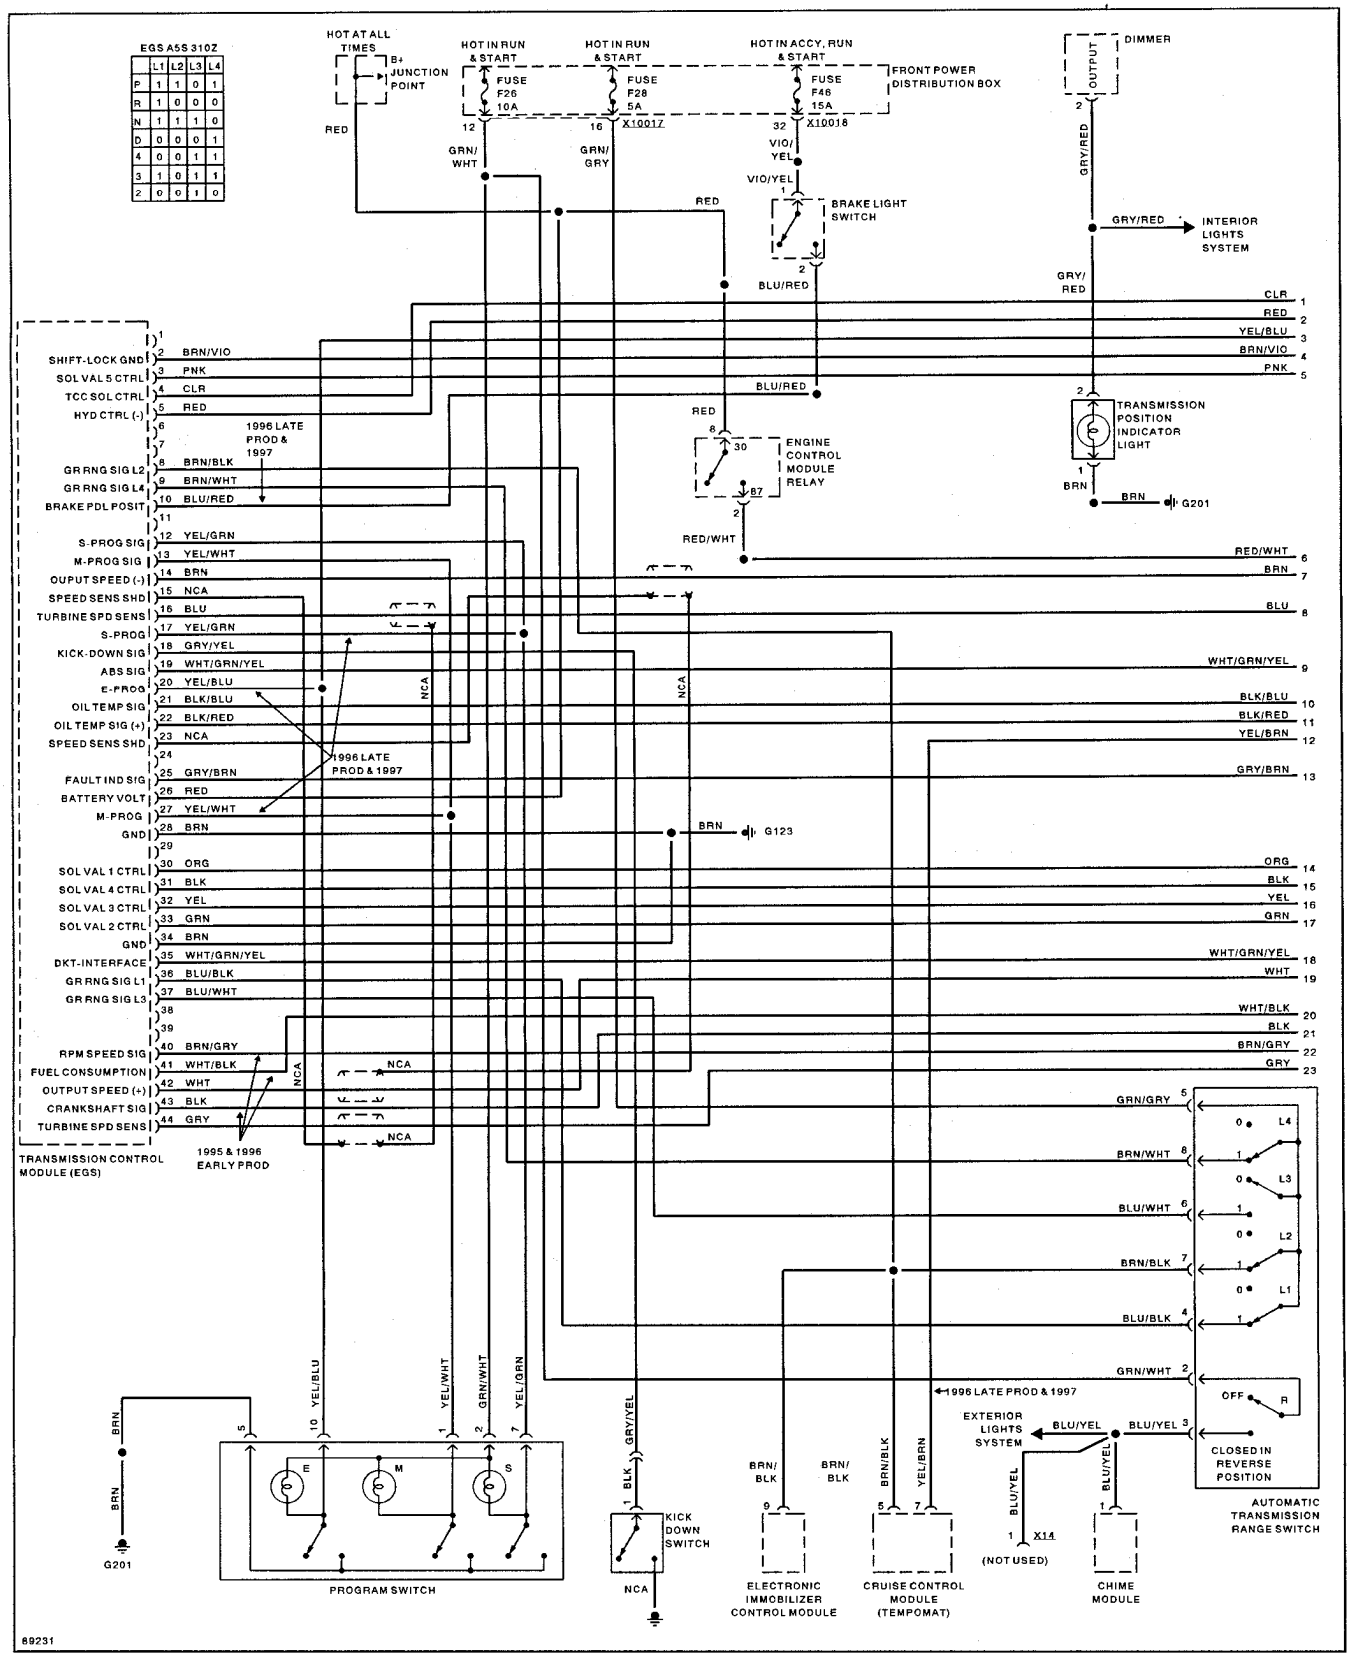


Transmission Electronics

1998 Except M3 (2 of 2)

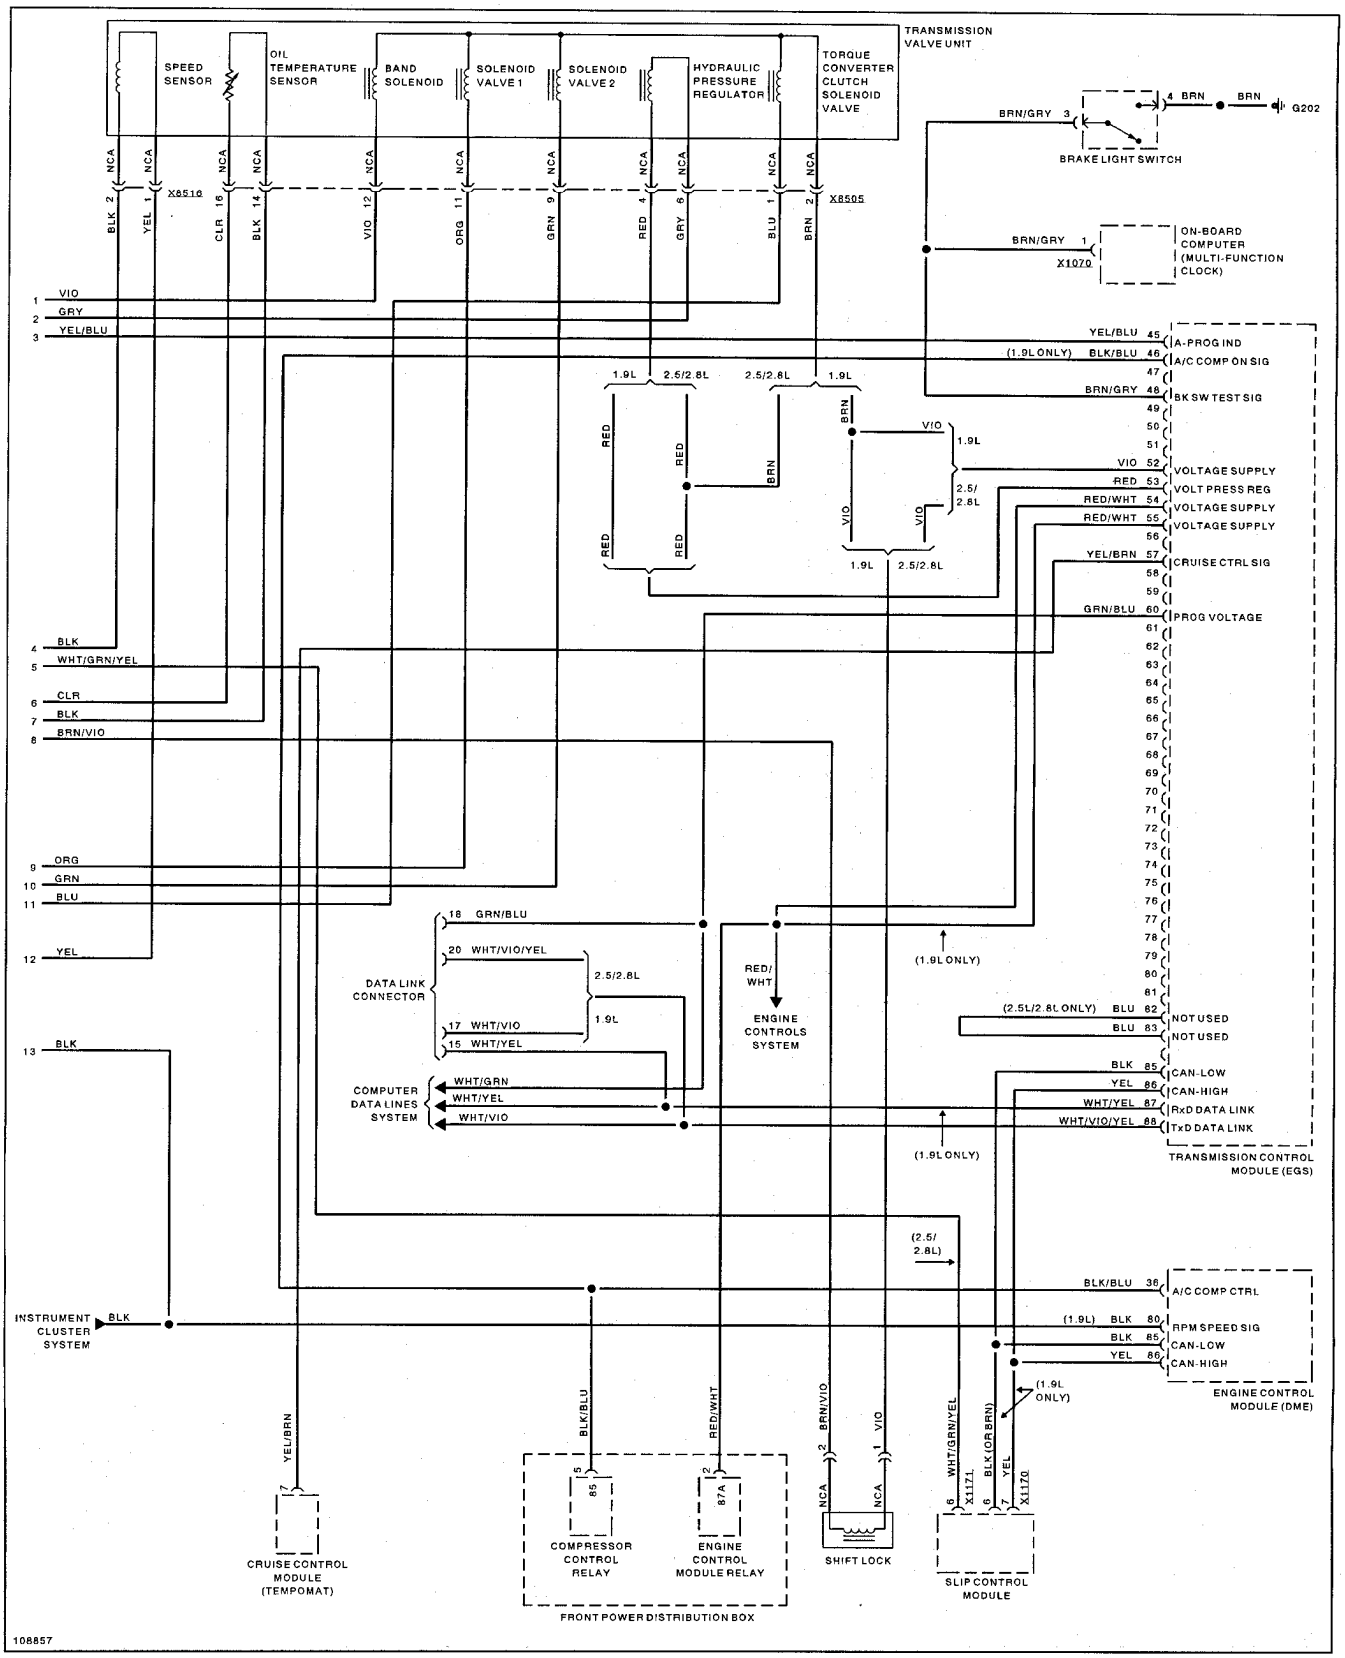

Transmission Electronics


1998 Except M3 (1 of 2)

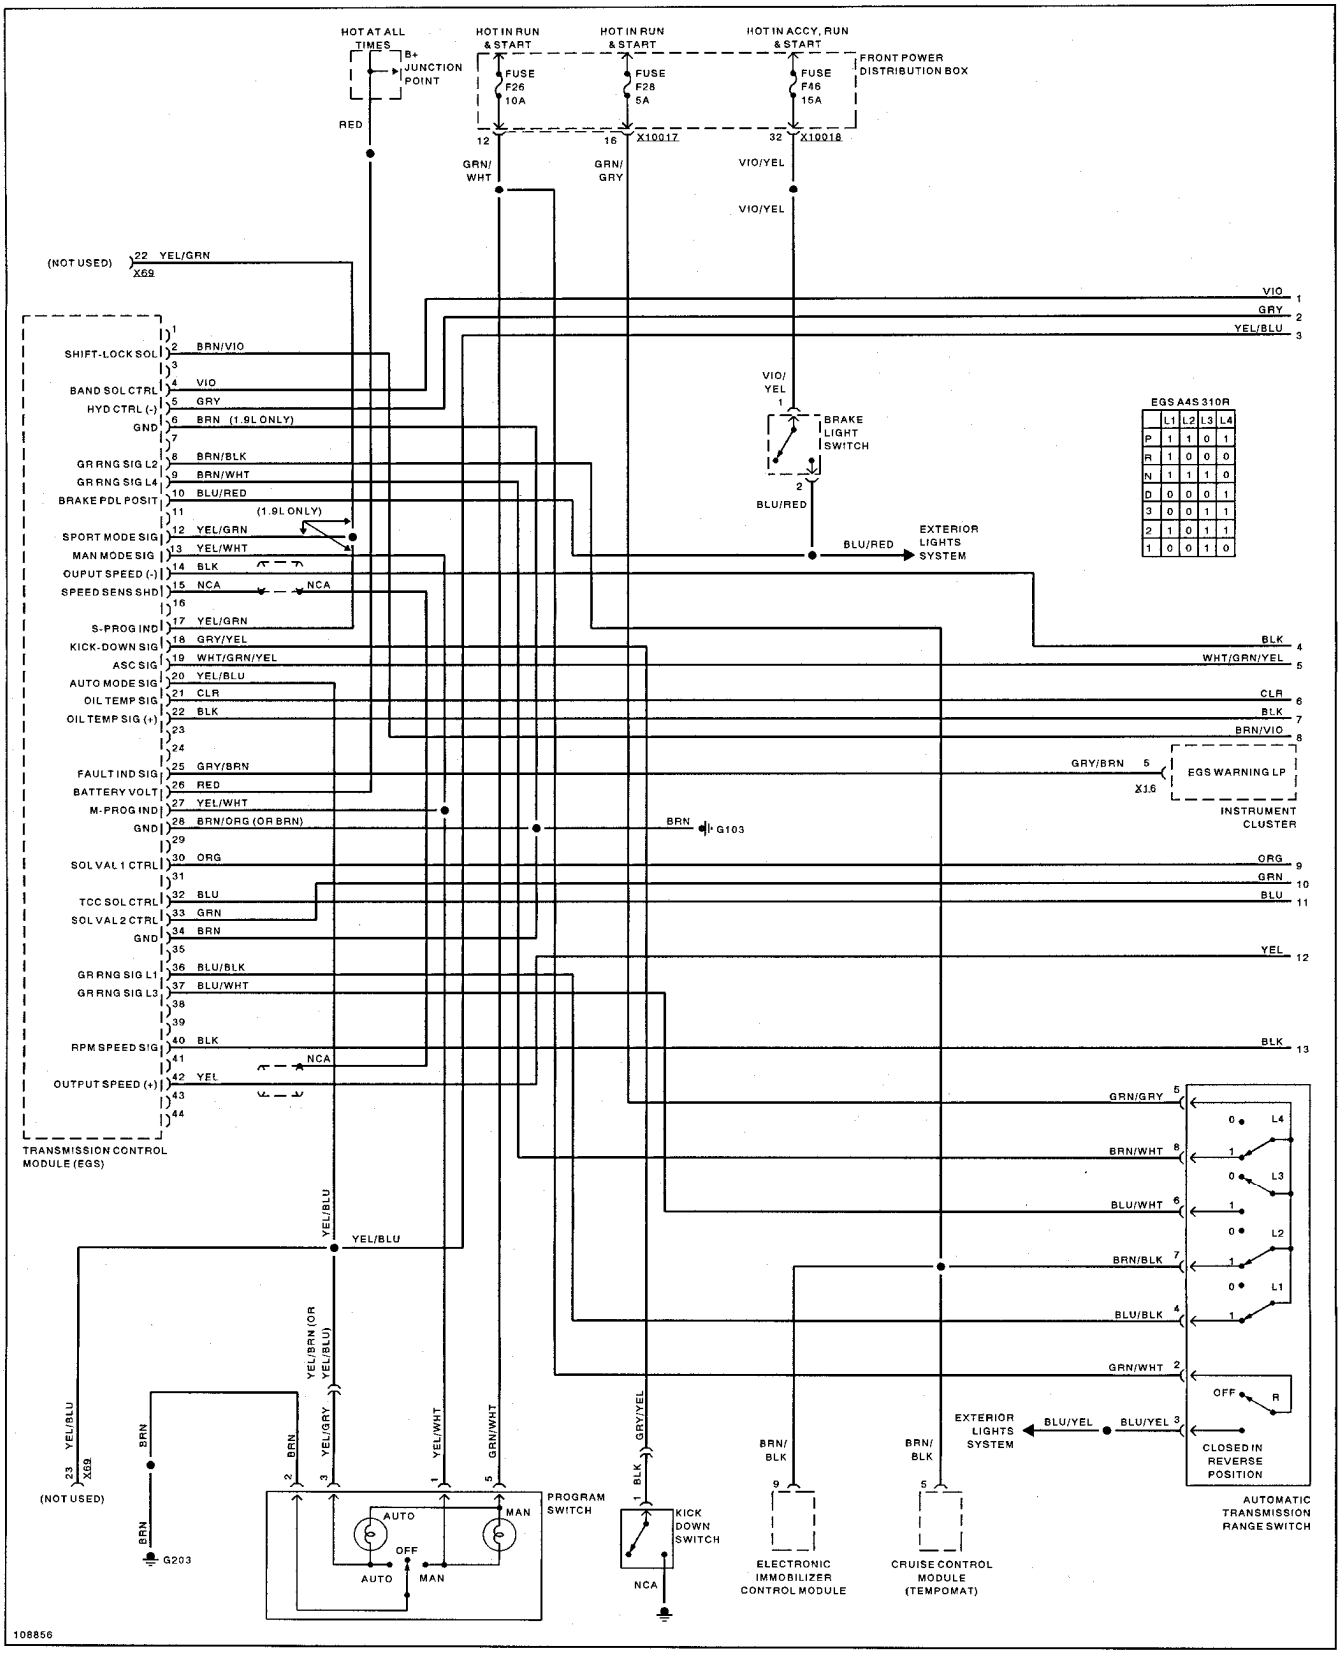

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Transmission Electronics

1996-97 Except M3 (2 of 2)

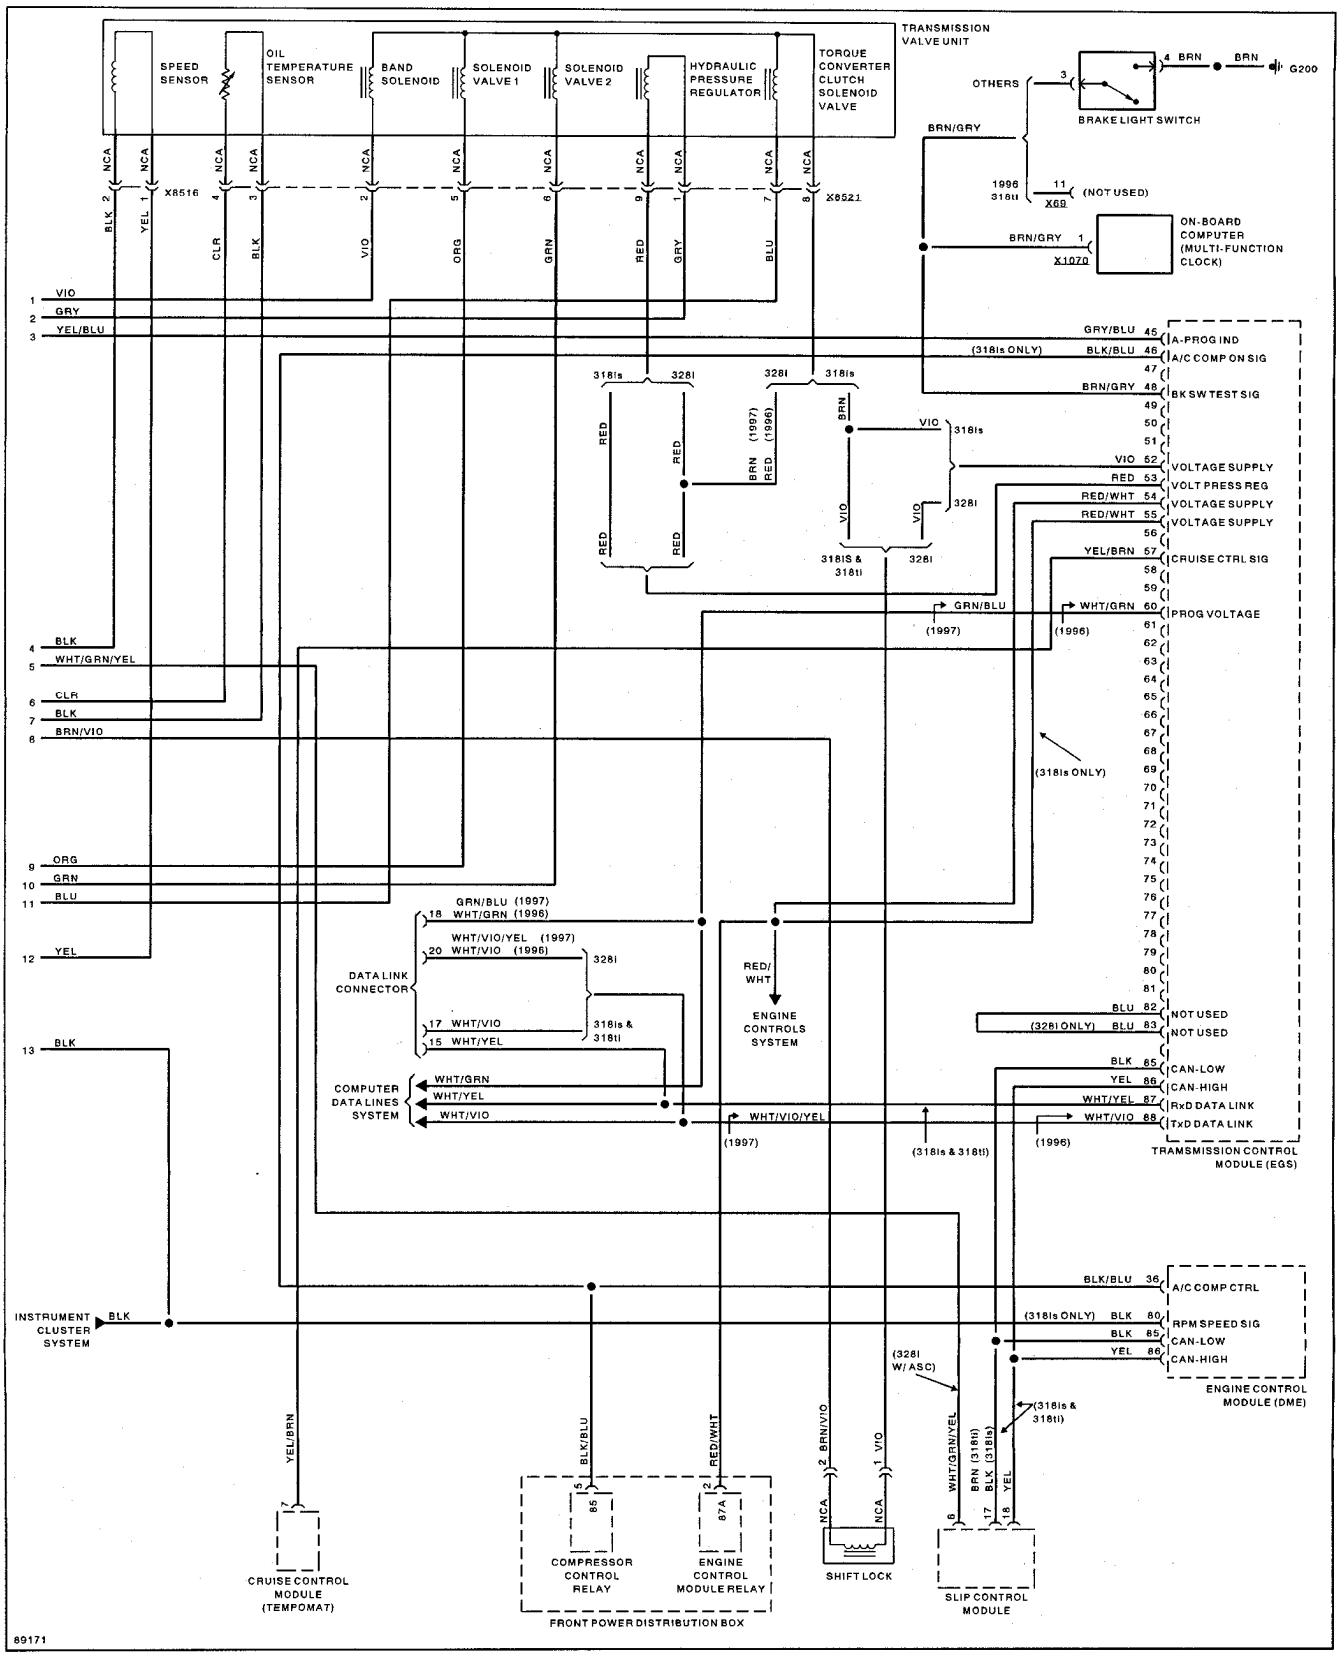


Transmission Electronics

1996-97 Except M3 (1 of 2)

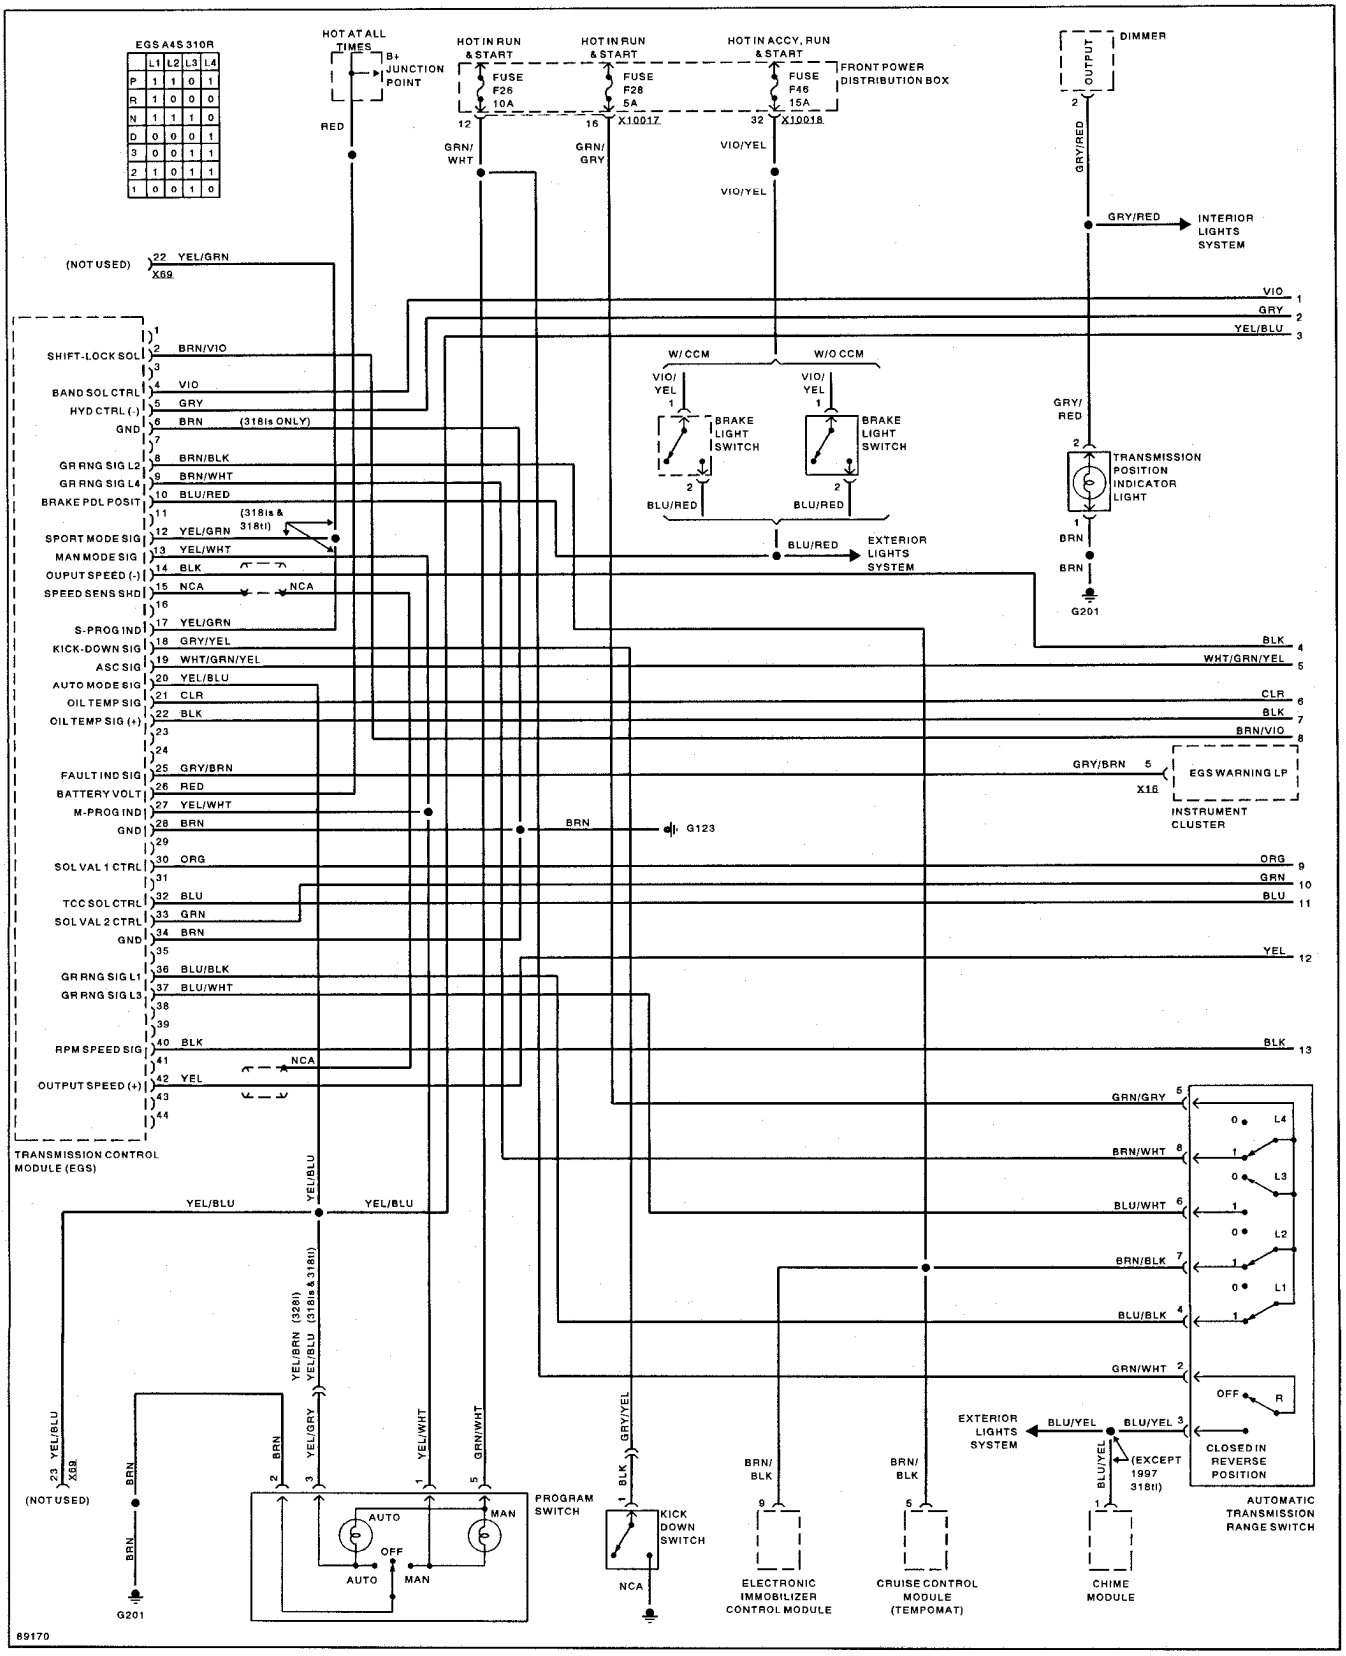


Transmission Electronics

1995 318ti

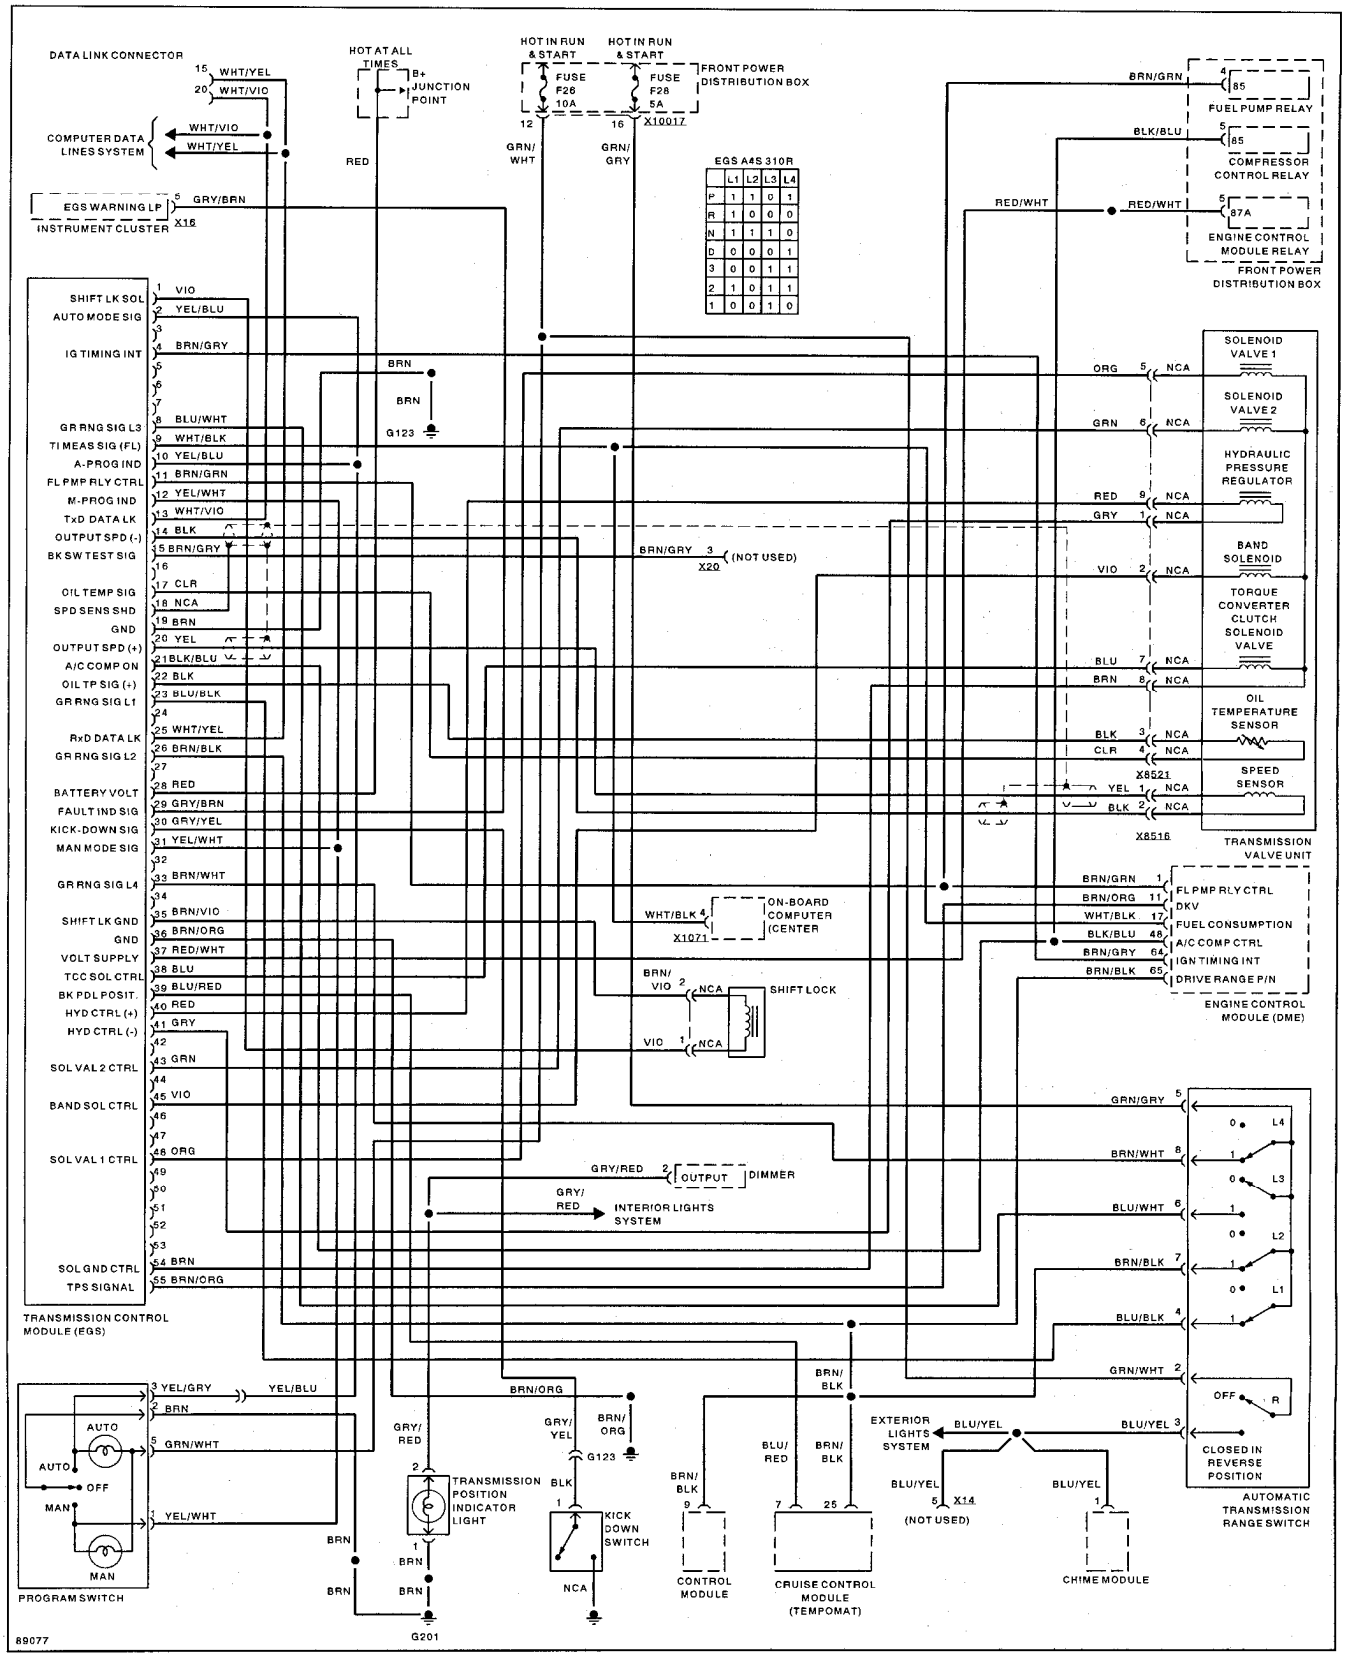


Transmission Electronics

1995 325i, 325iC & 325is

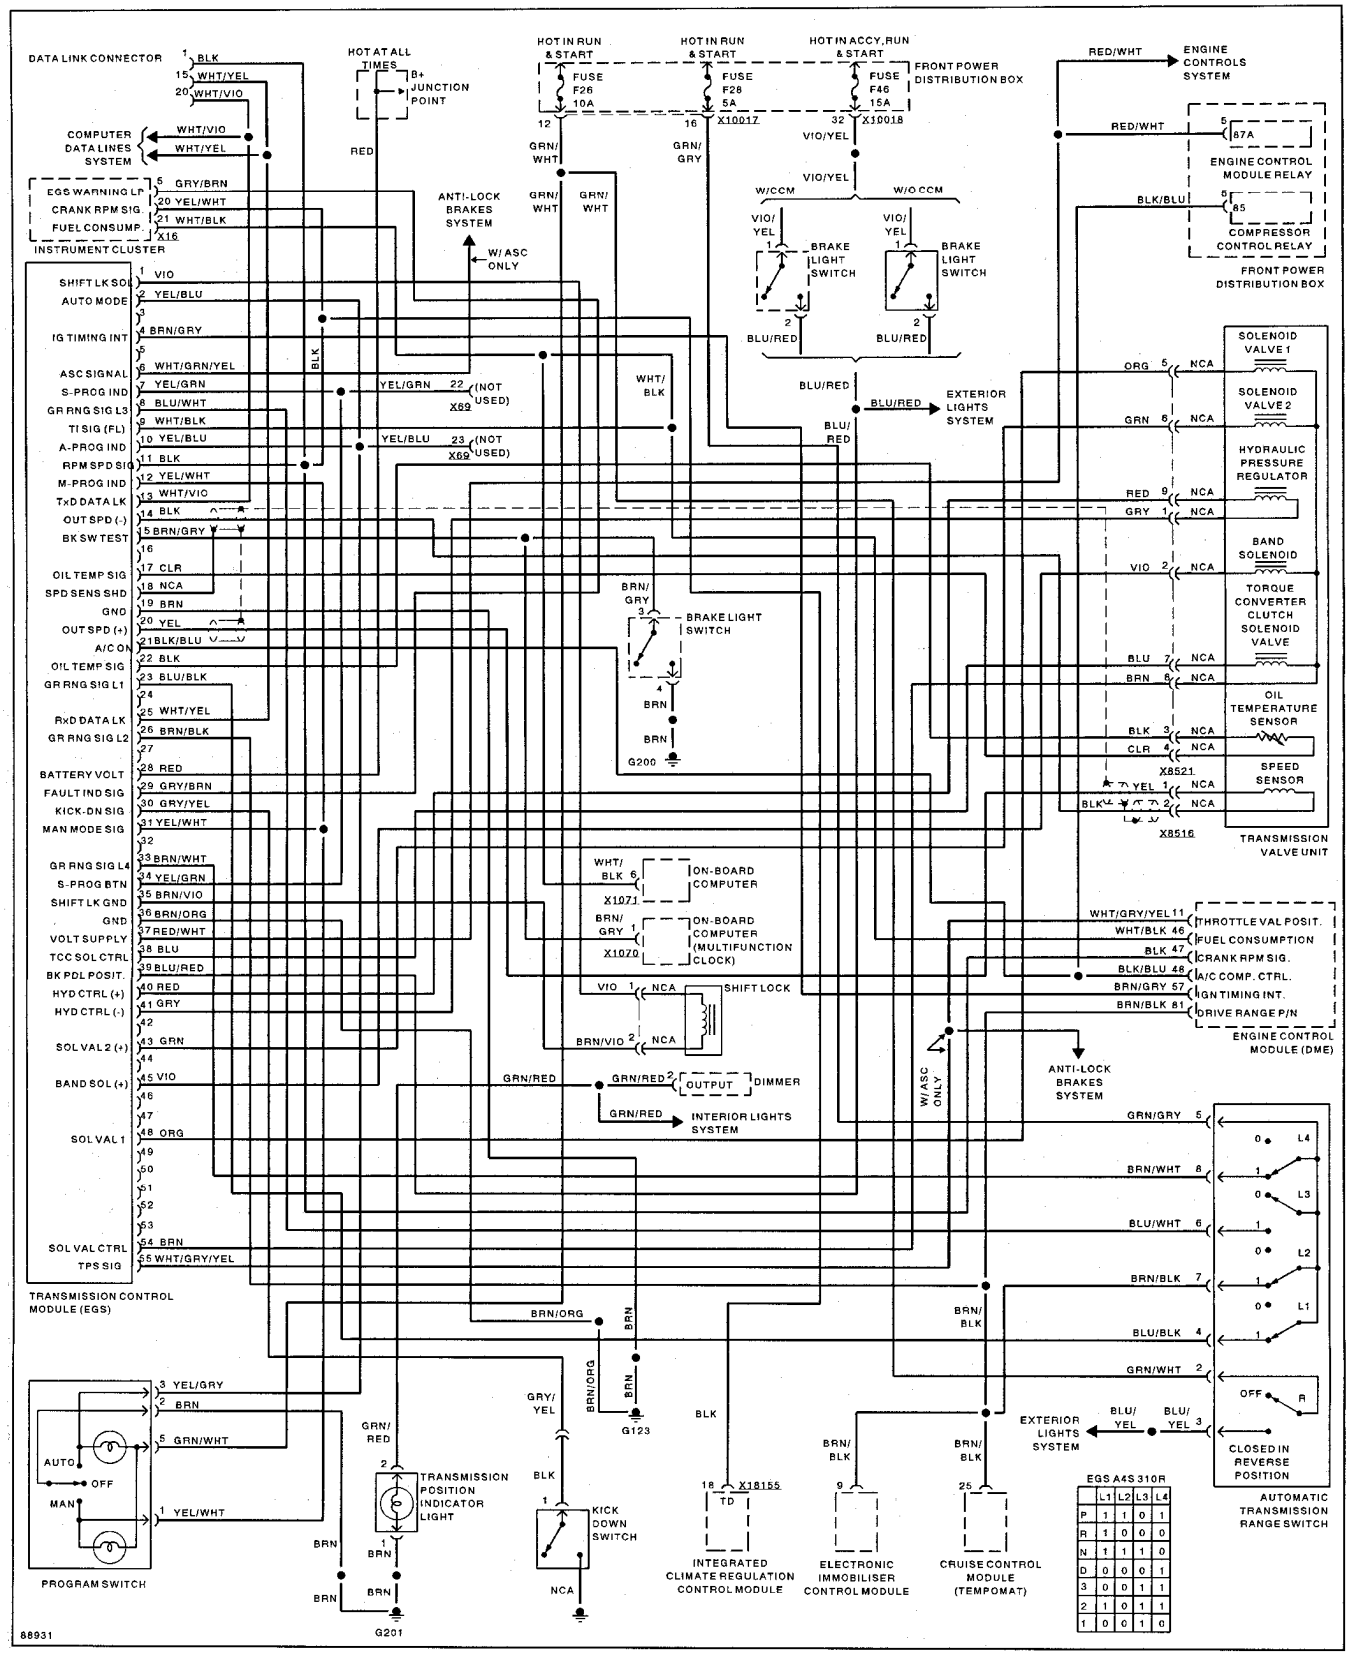


Transmission Electronics

1995 318i, 318iC & 318is

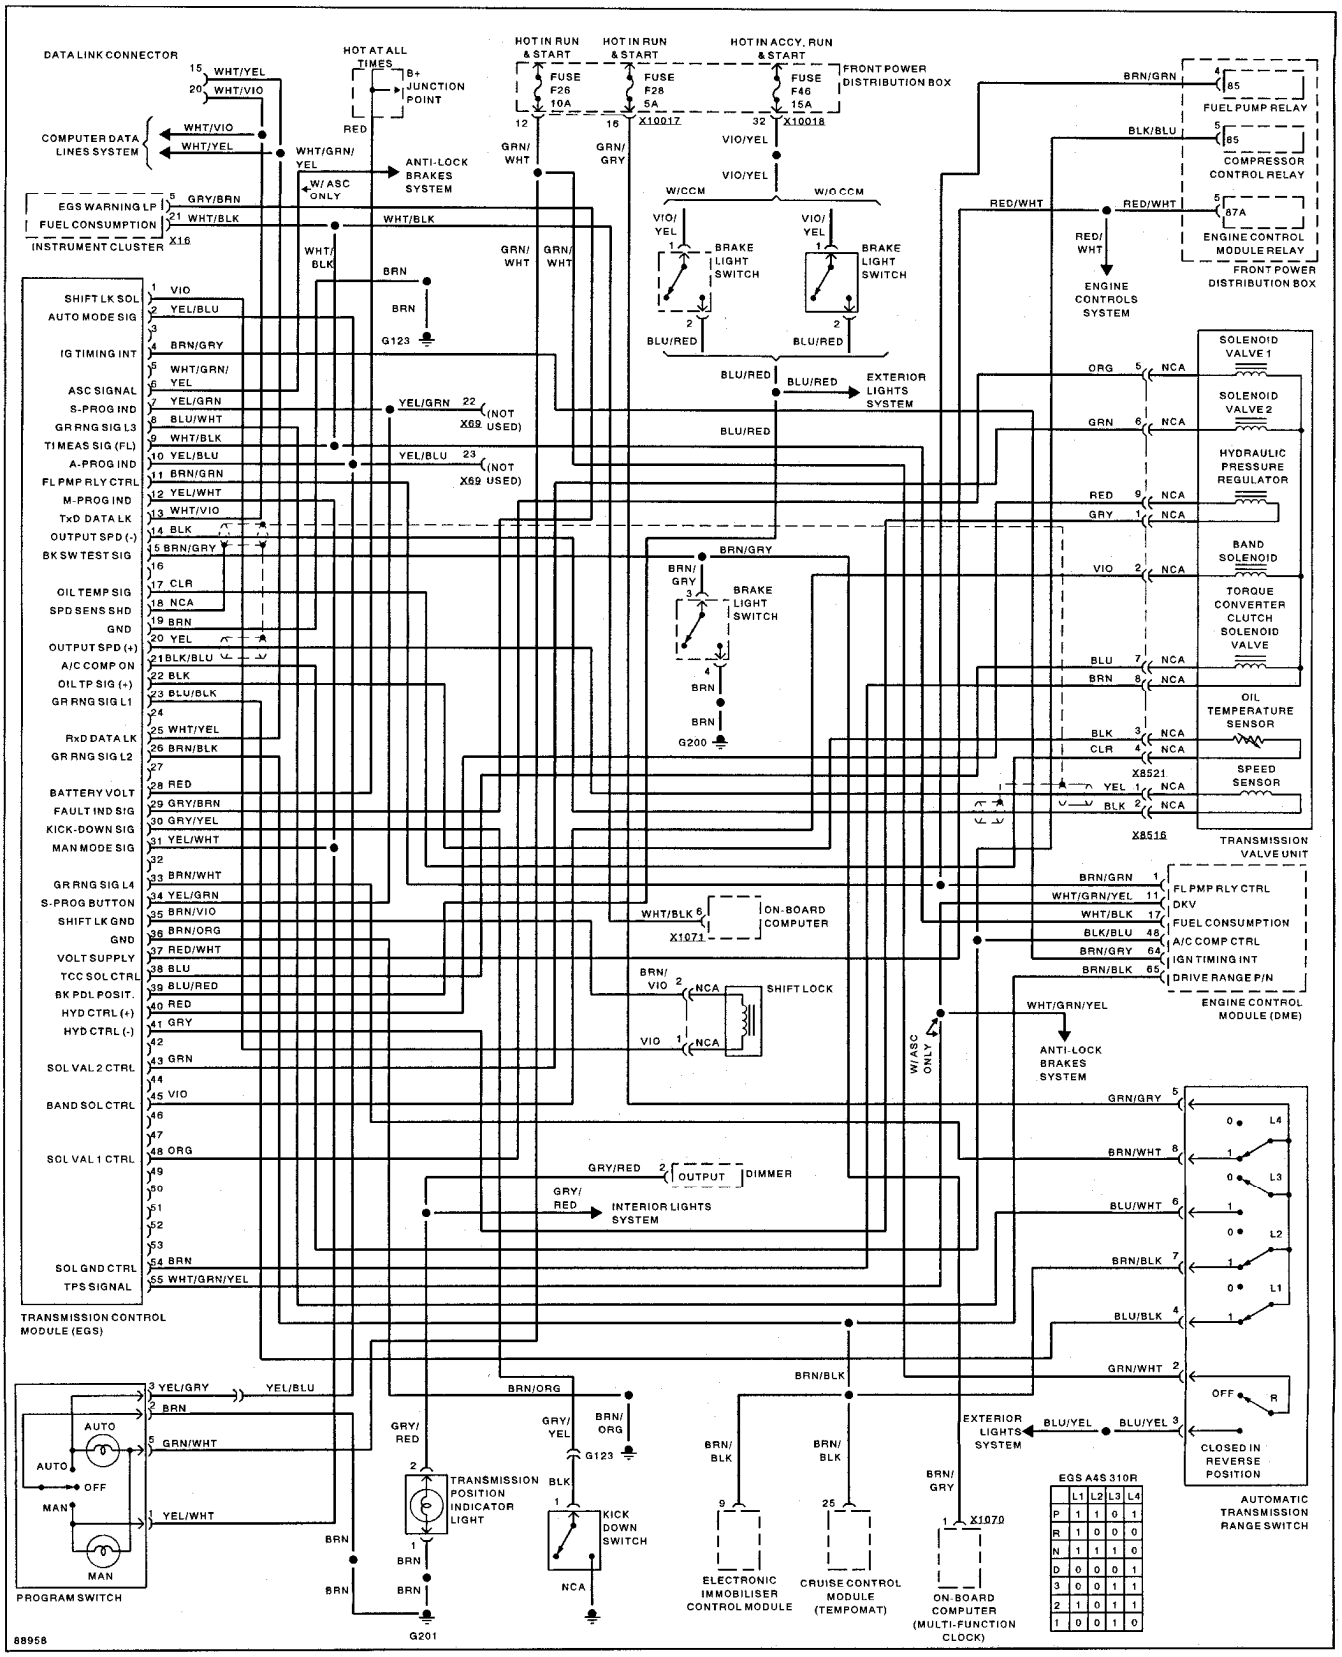


Transmission Electronics

1993-94 325i, 325iC & 325is

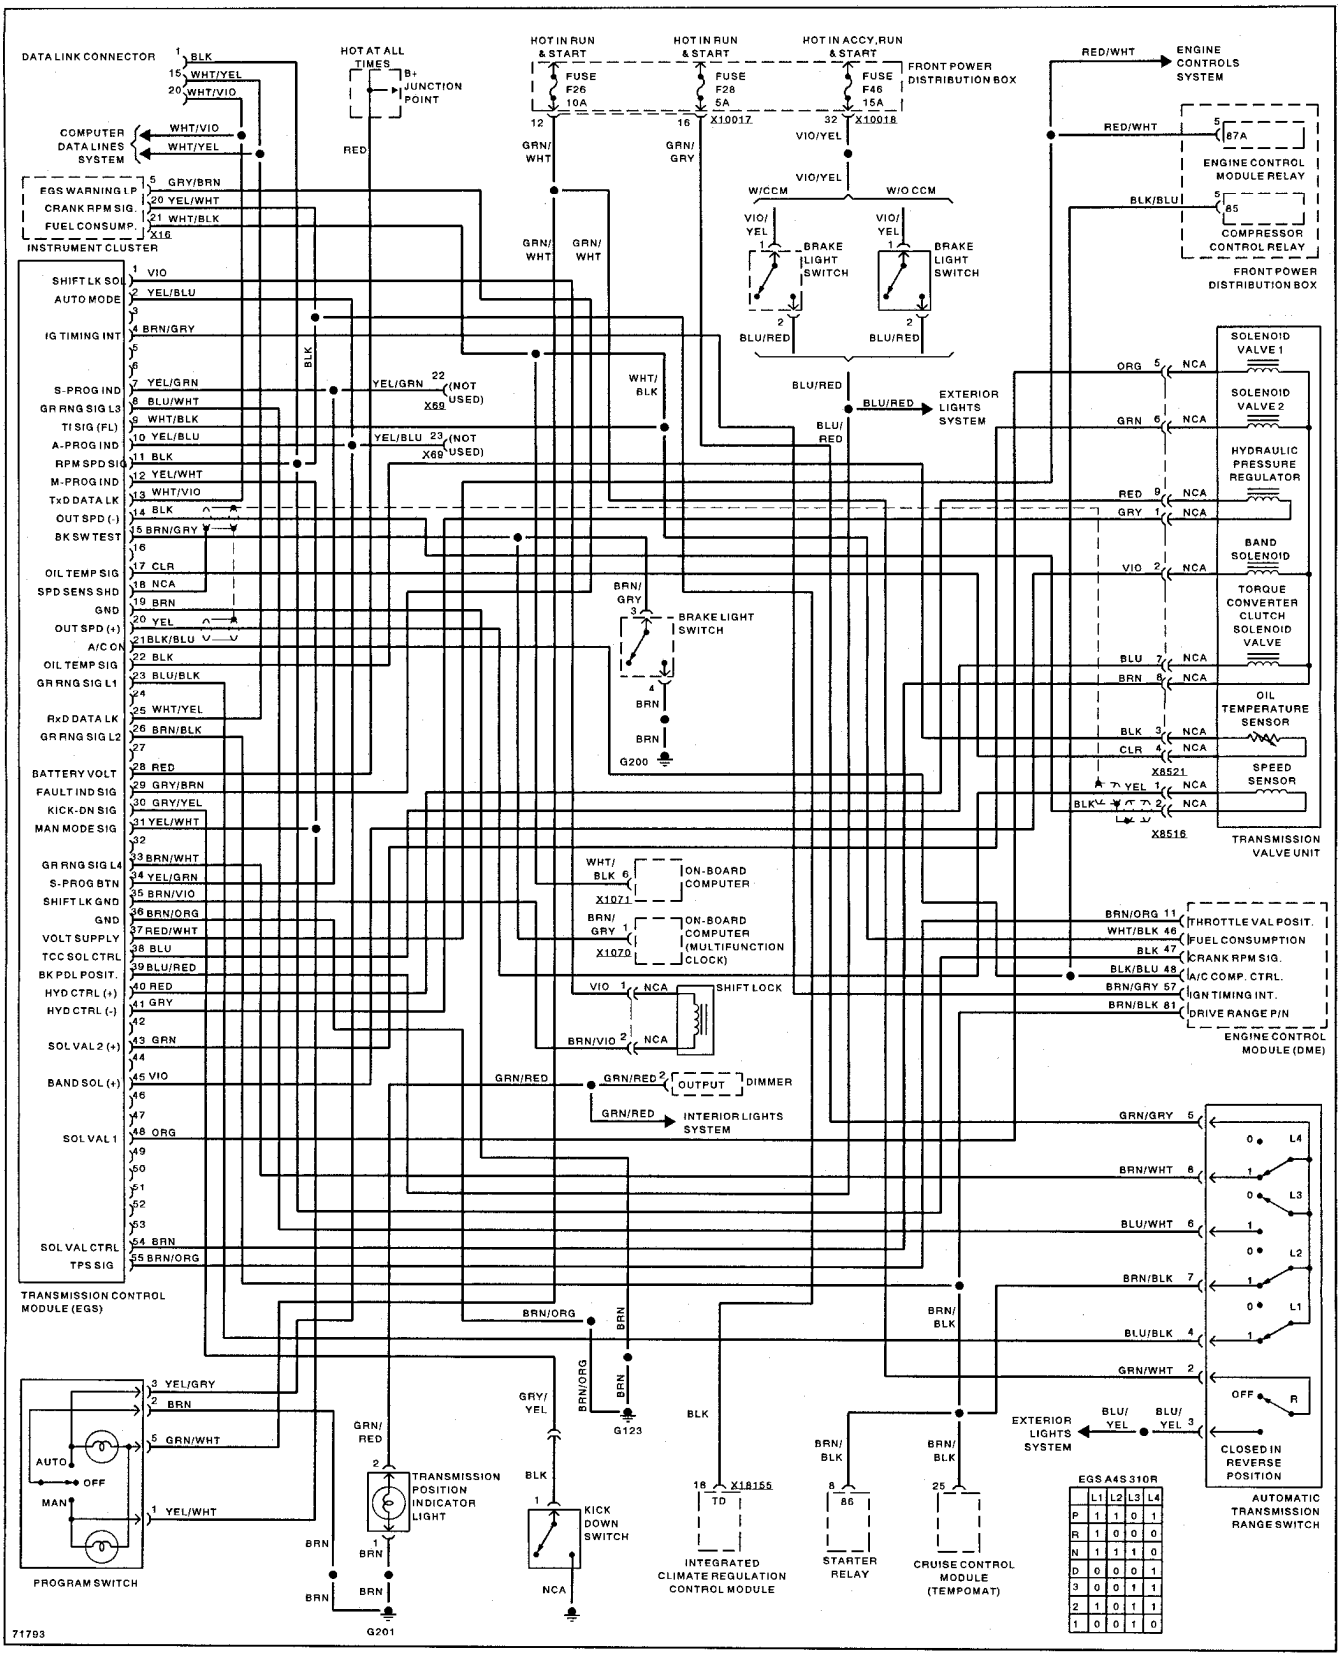


Transmission Electronics

1993-94 318i, 318iC & 318is

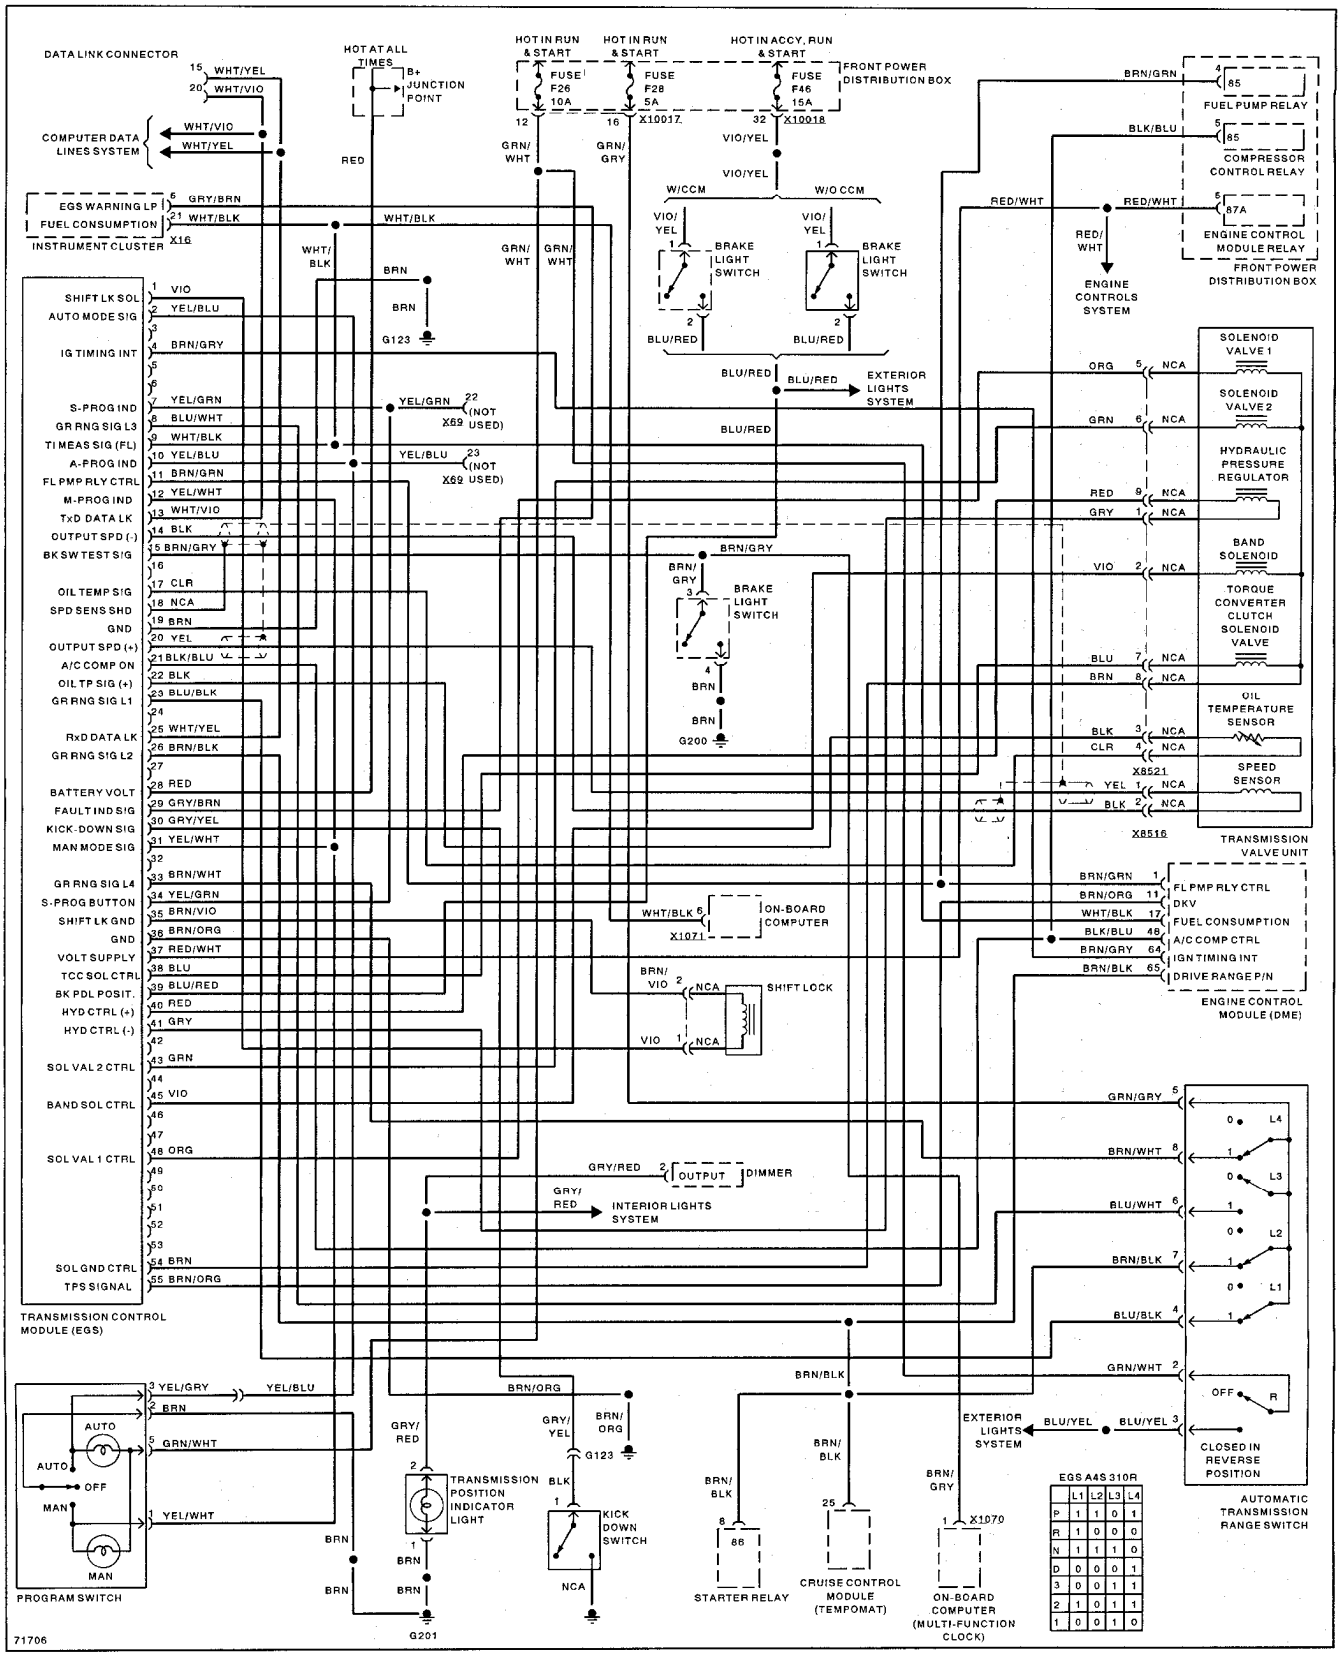


Transmission Electronics

1992 318i, 318is, 325i & 325is

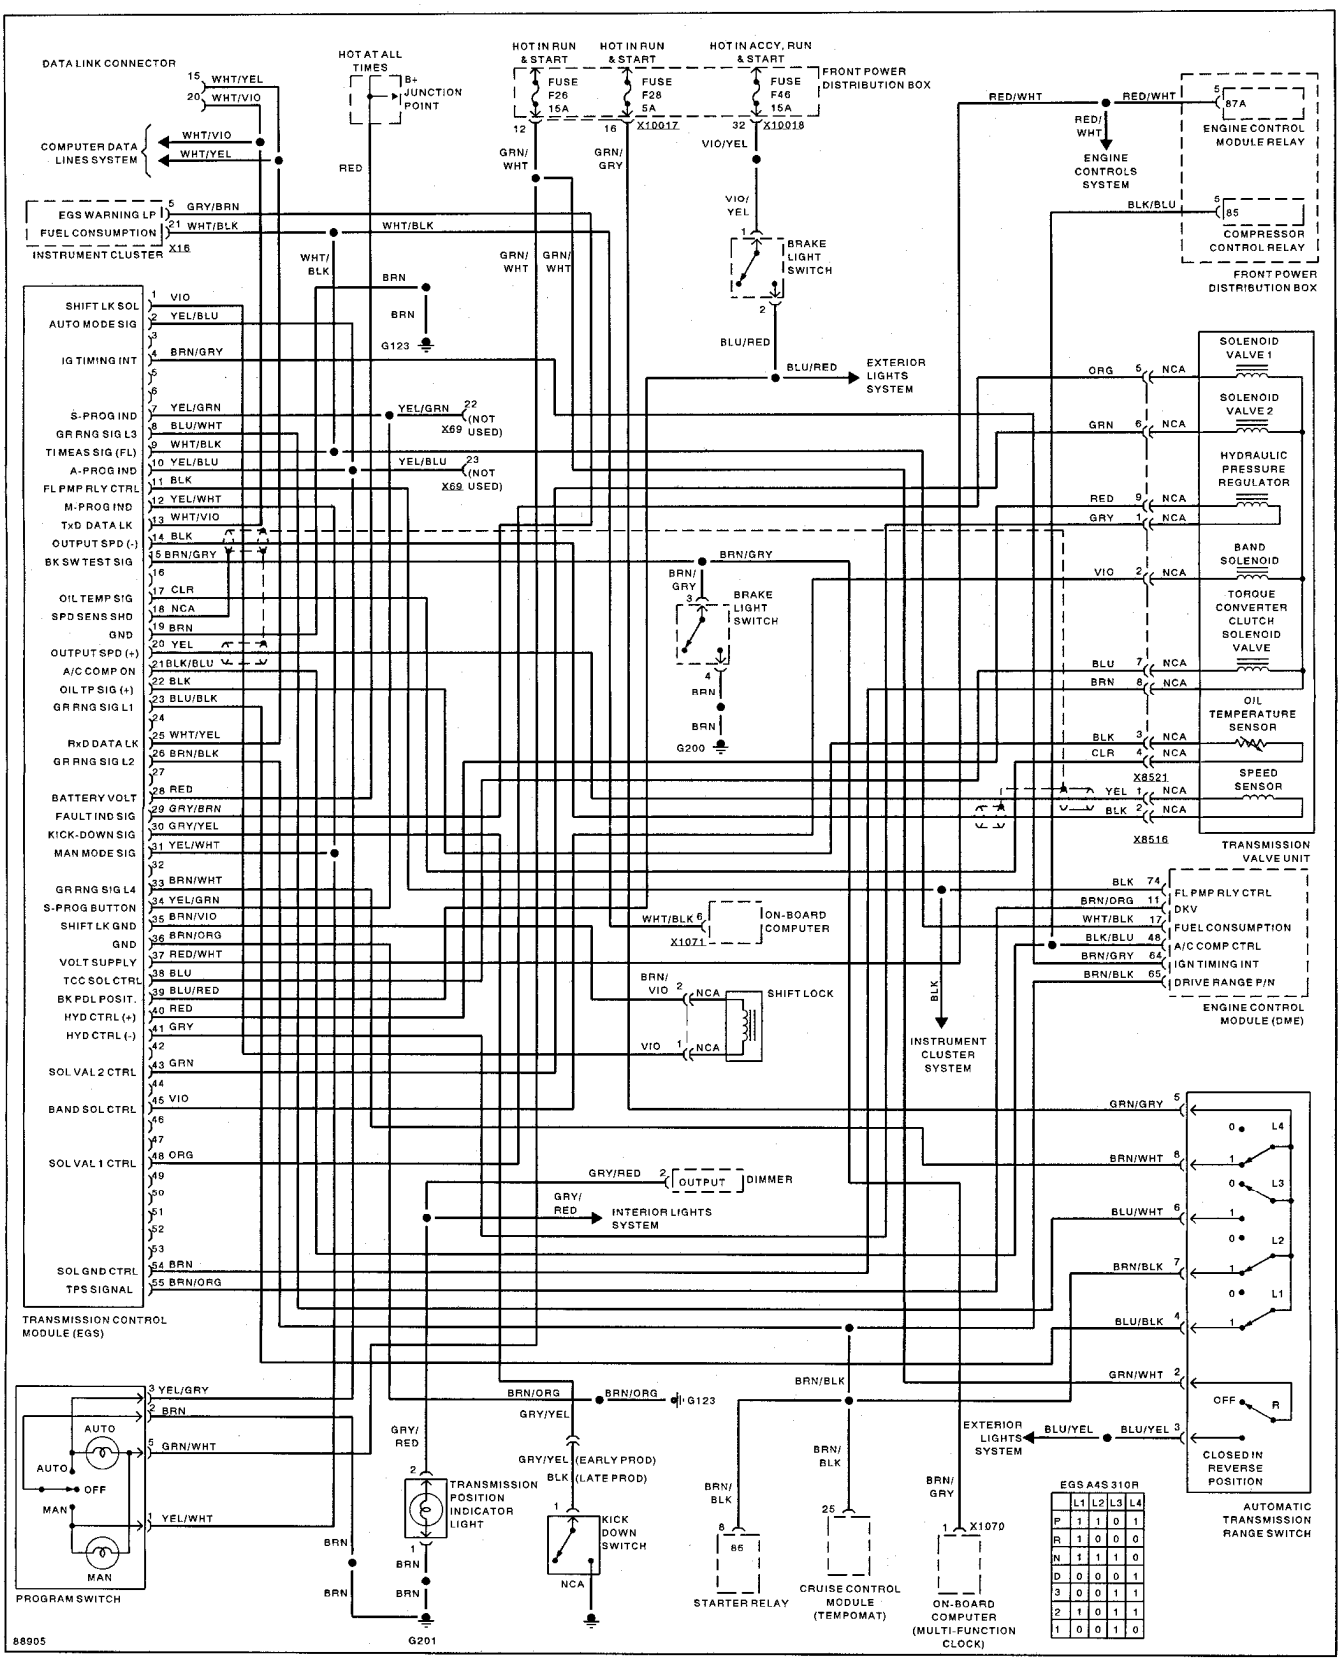


Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Engine Cooling

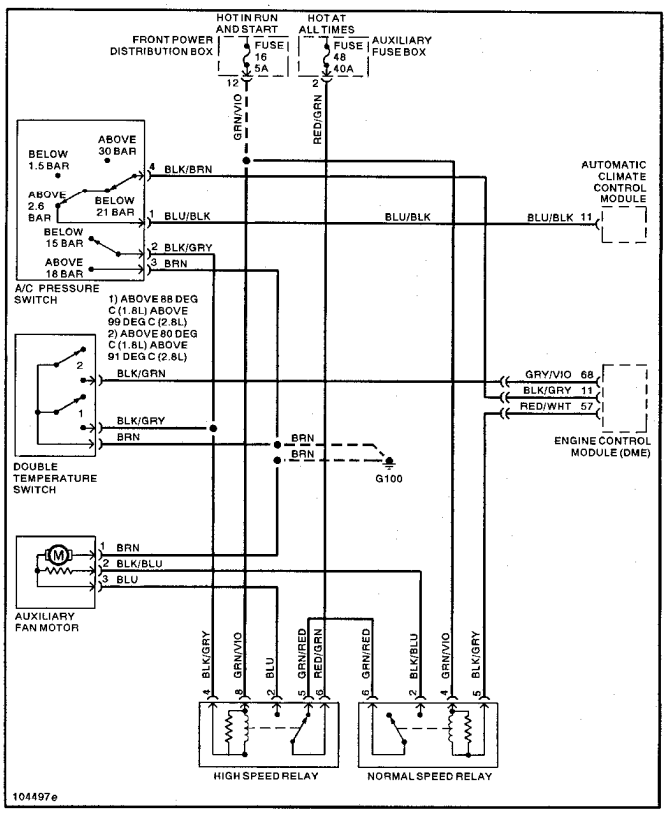


1996–98
4–cylinder

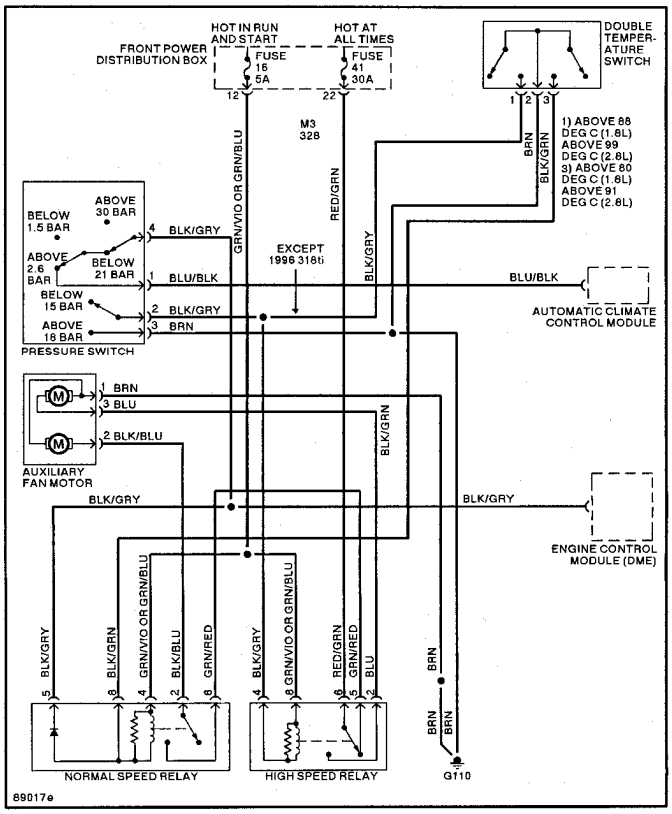


1996–98
6–cylinder

Engine Cooling

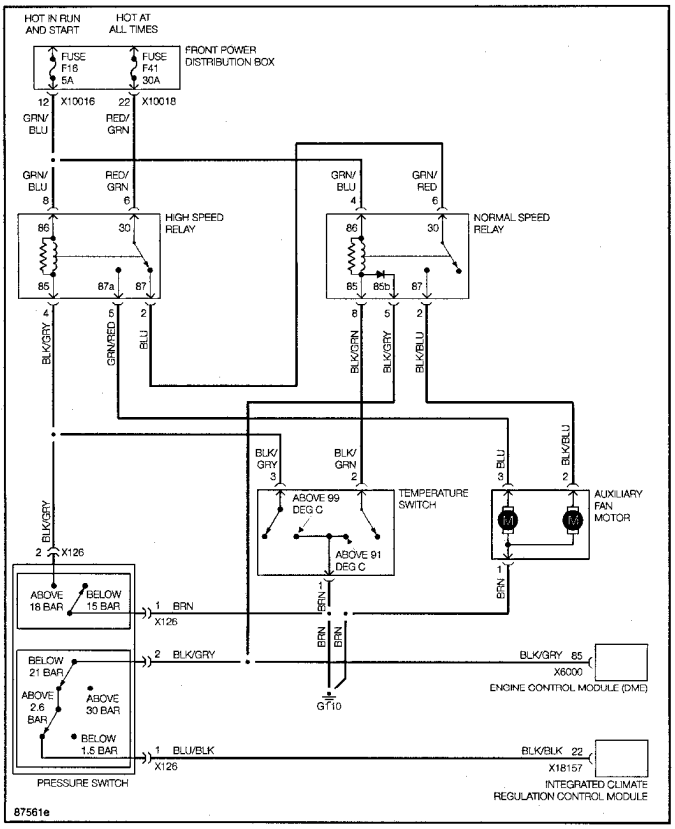


1992

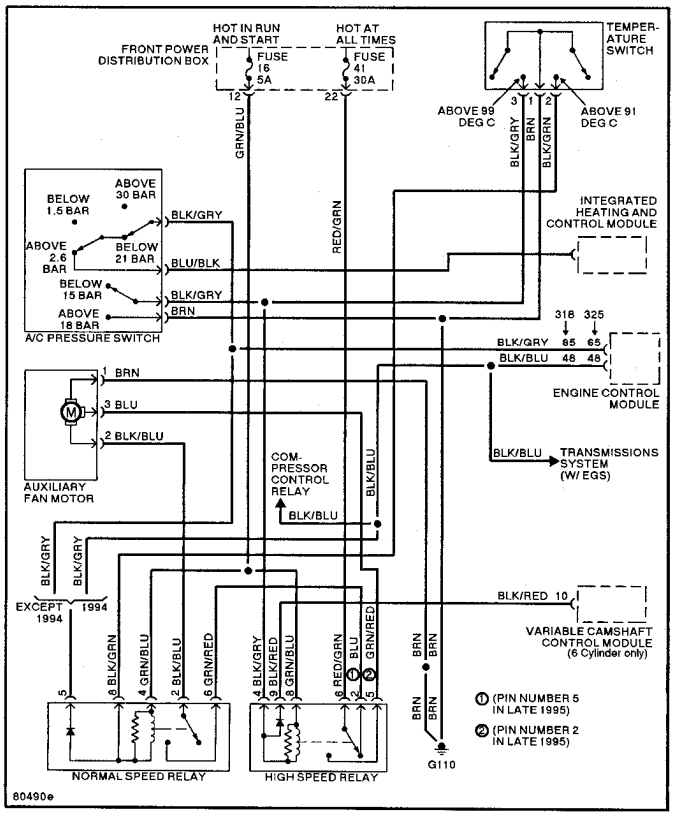

1993-95


Data Link Connector

1998 318ti

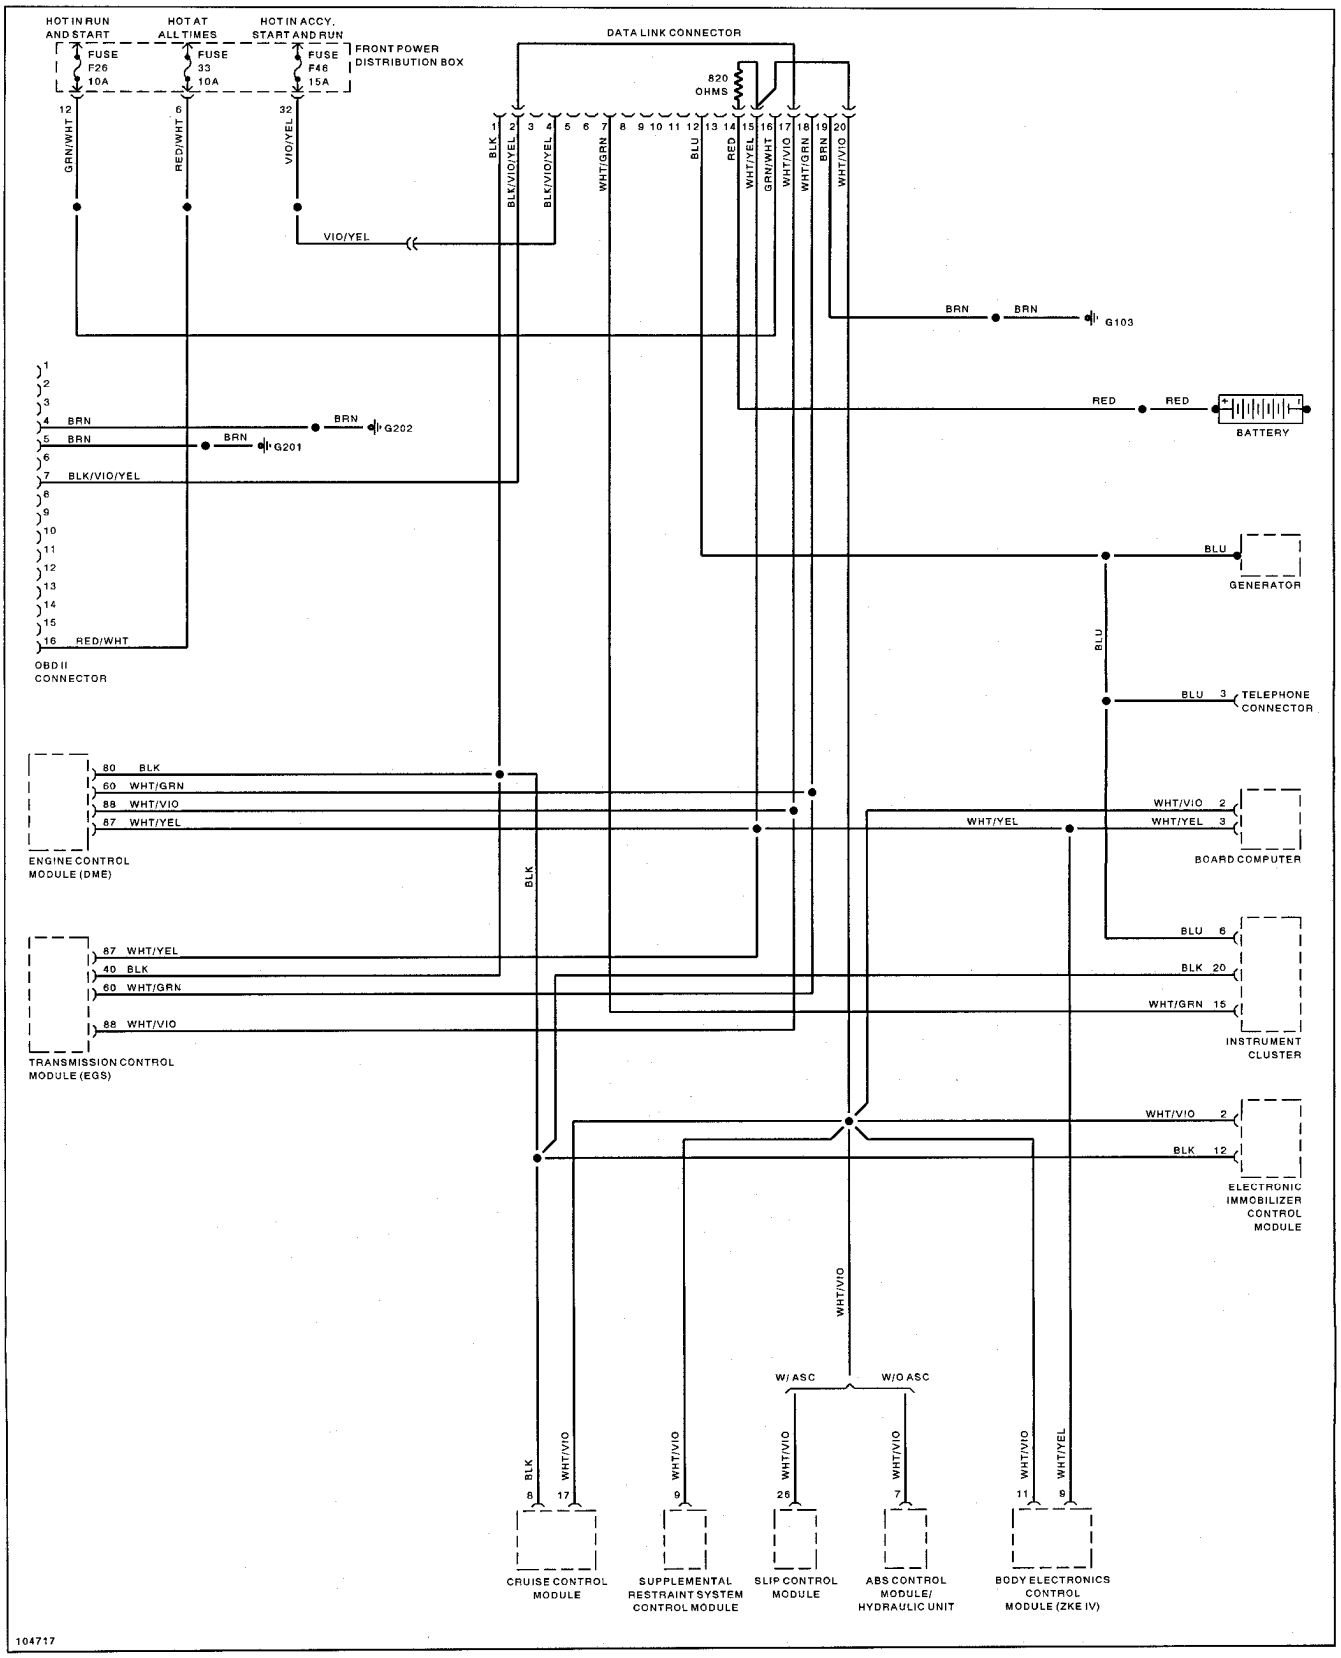


Data Link Connector

1996-97 318ti

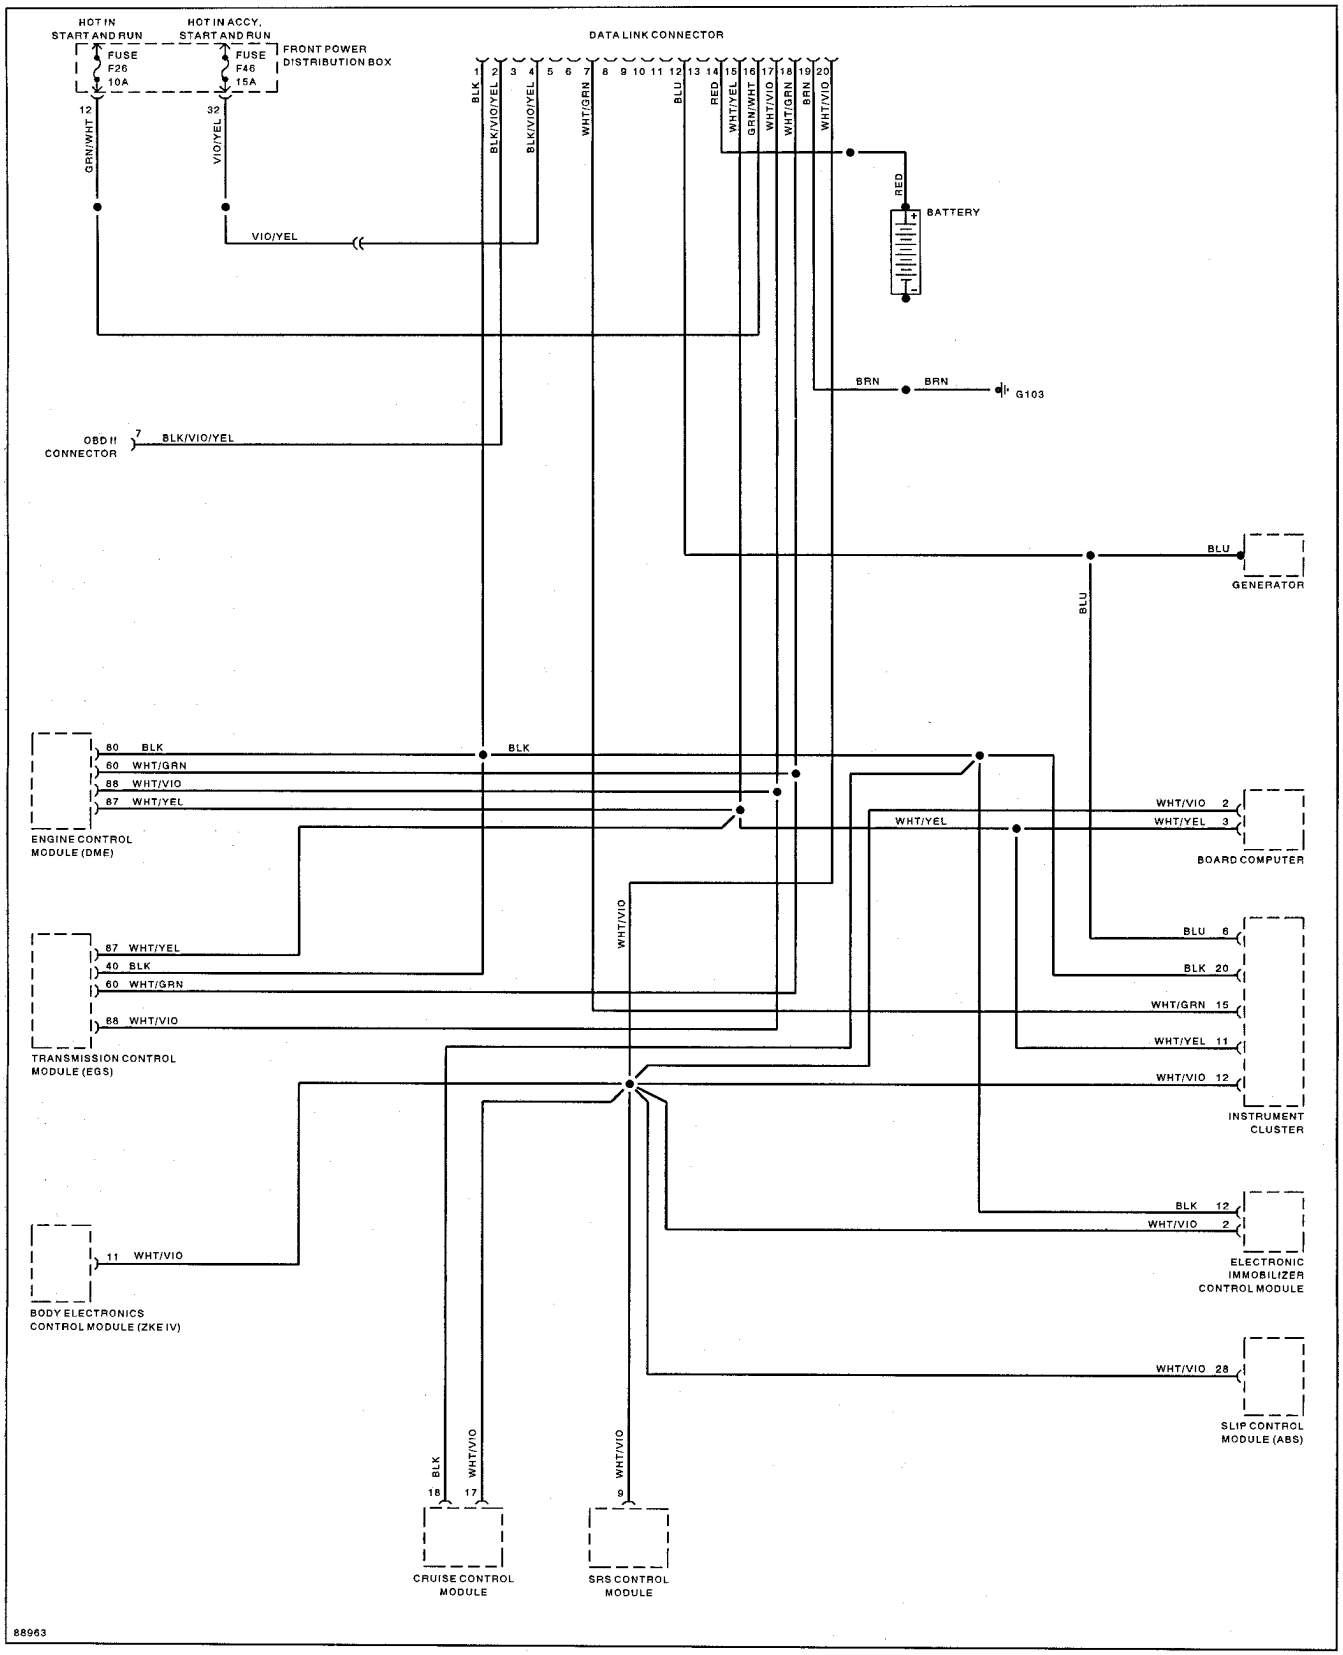


Data Link Connector

1995 318ti

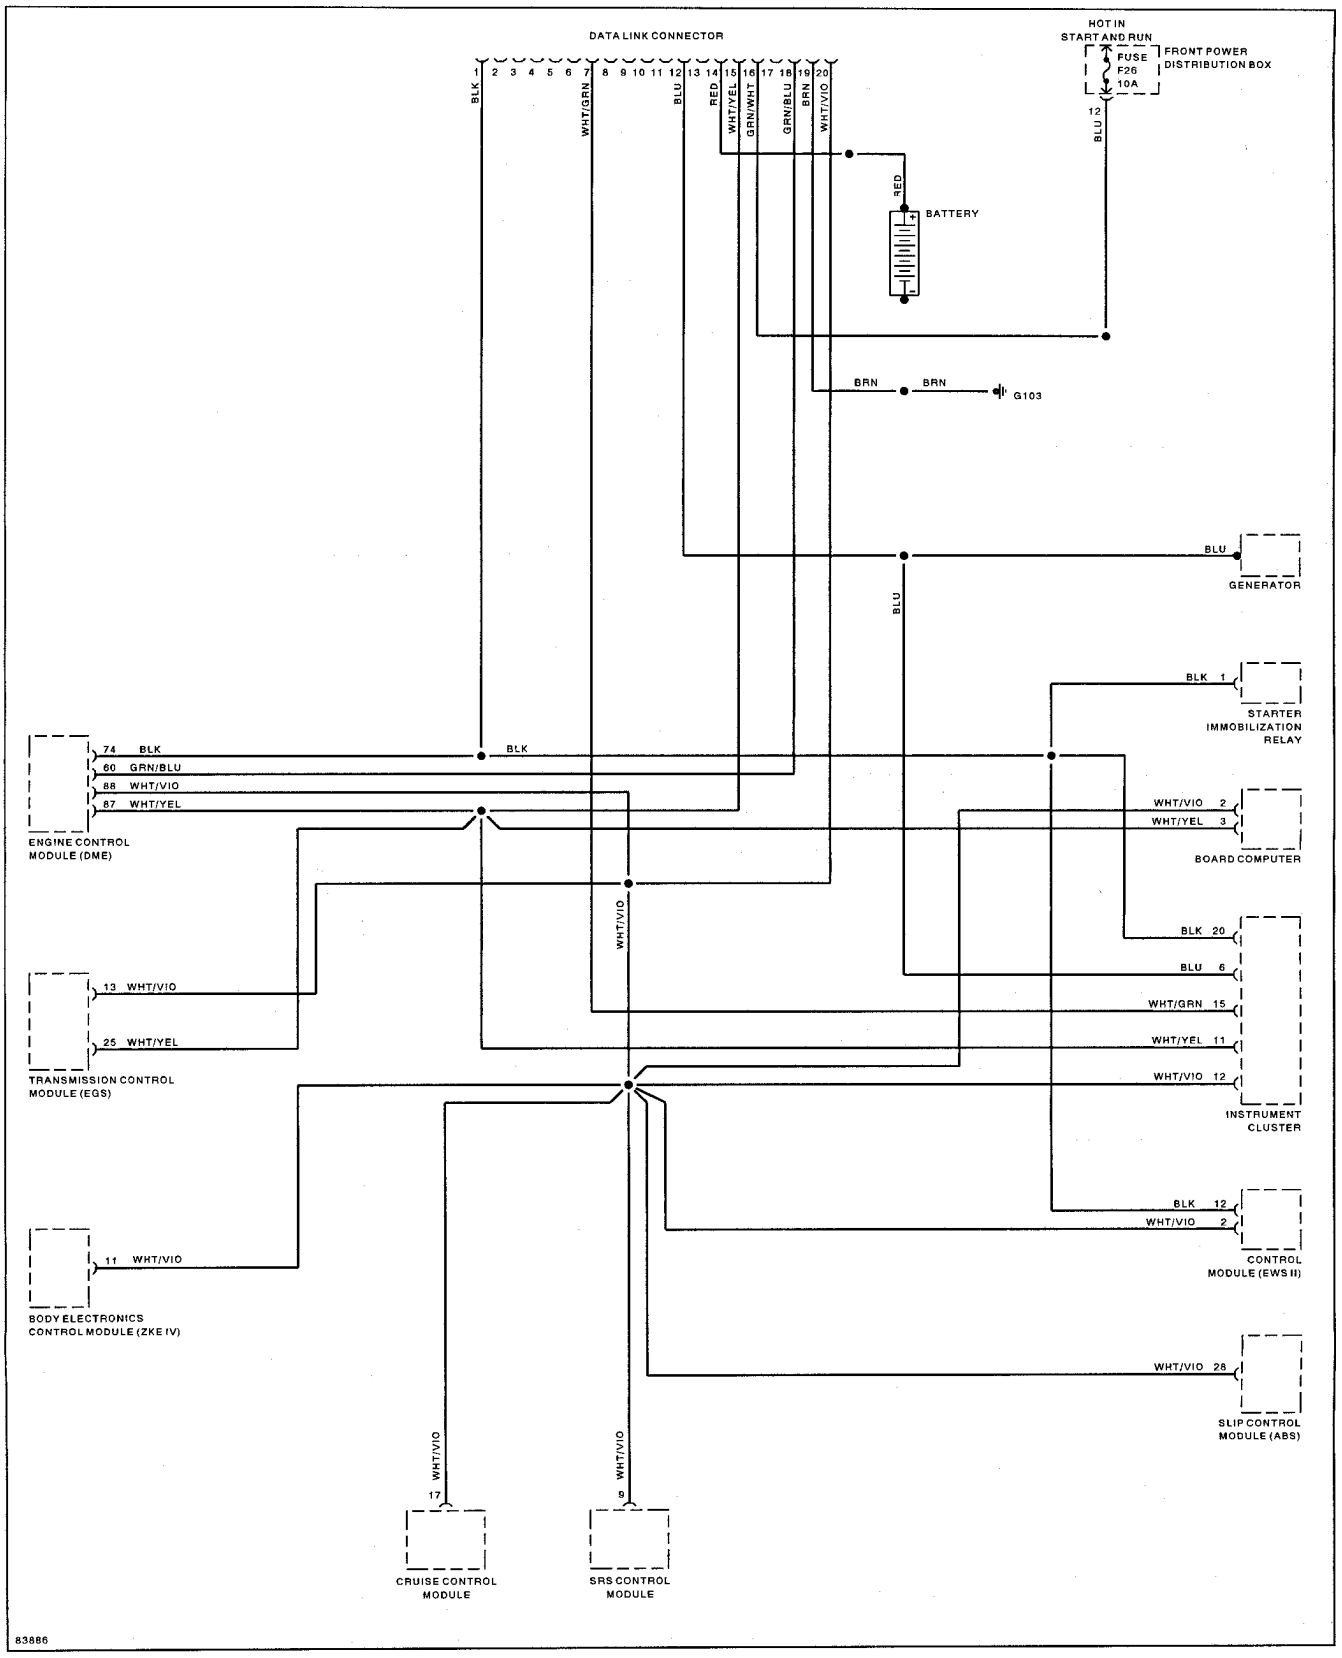


Data Link Connector

1998 Except 318ti

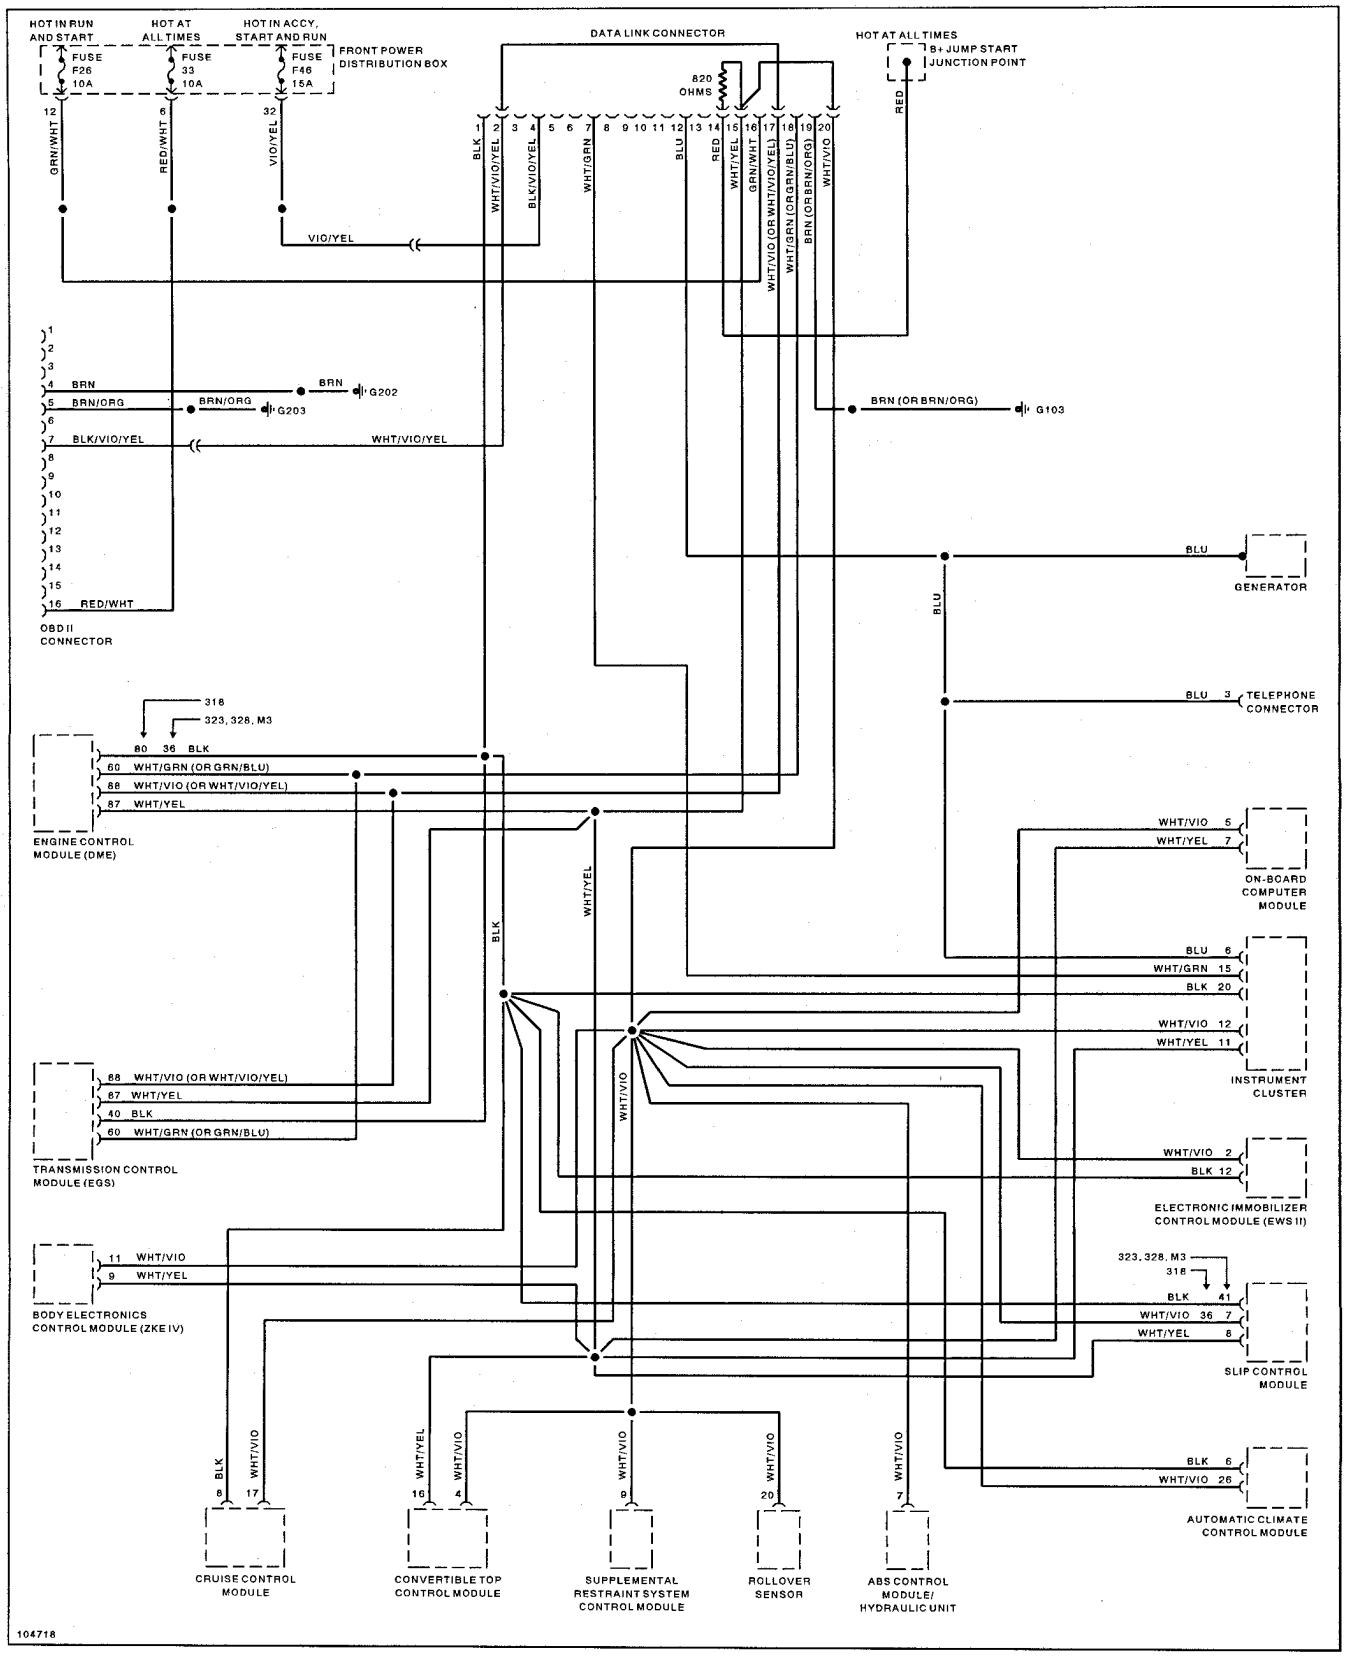


Data Link Connector

1996-97 Except 318ti

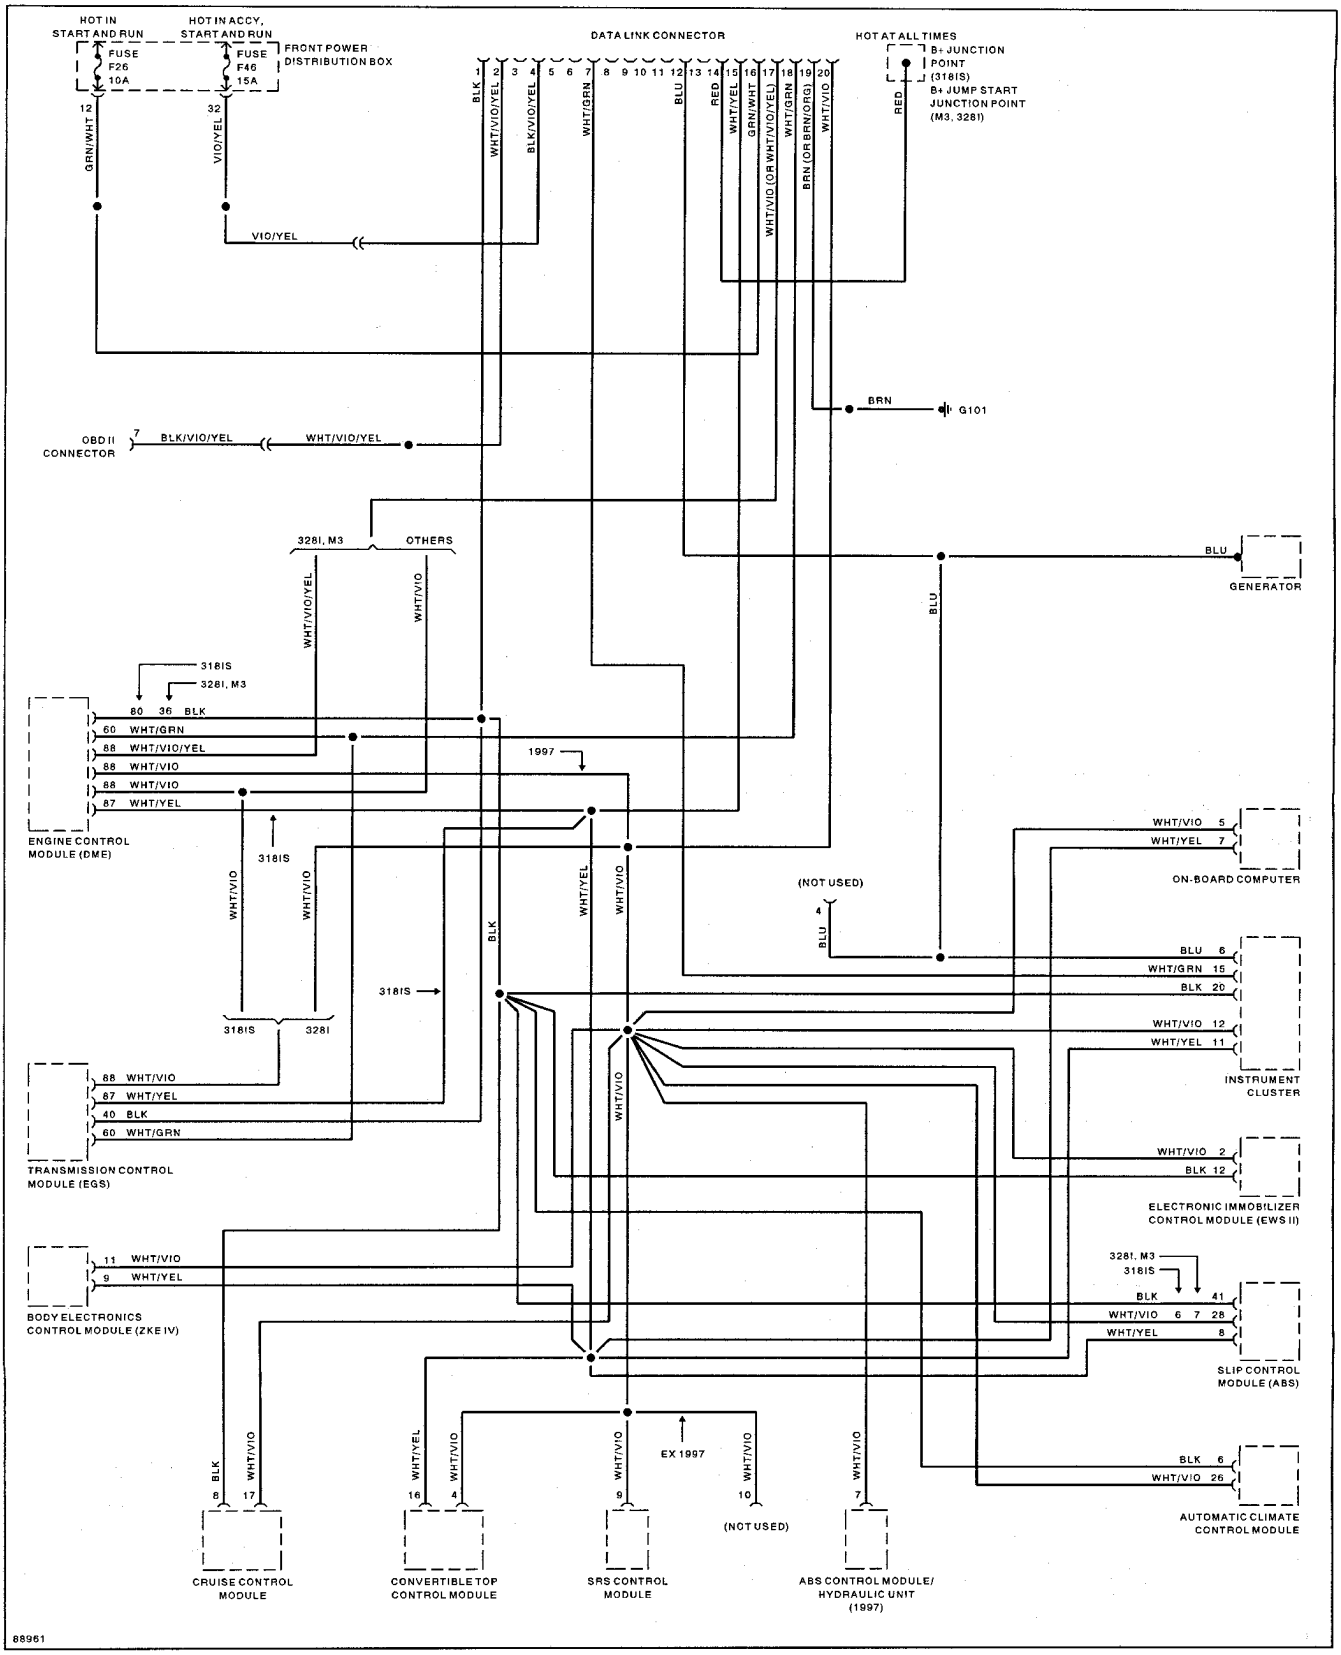


Data Link Connector

1995 Late Production Except 318ti

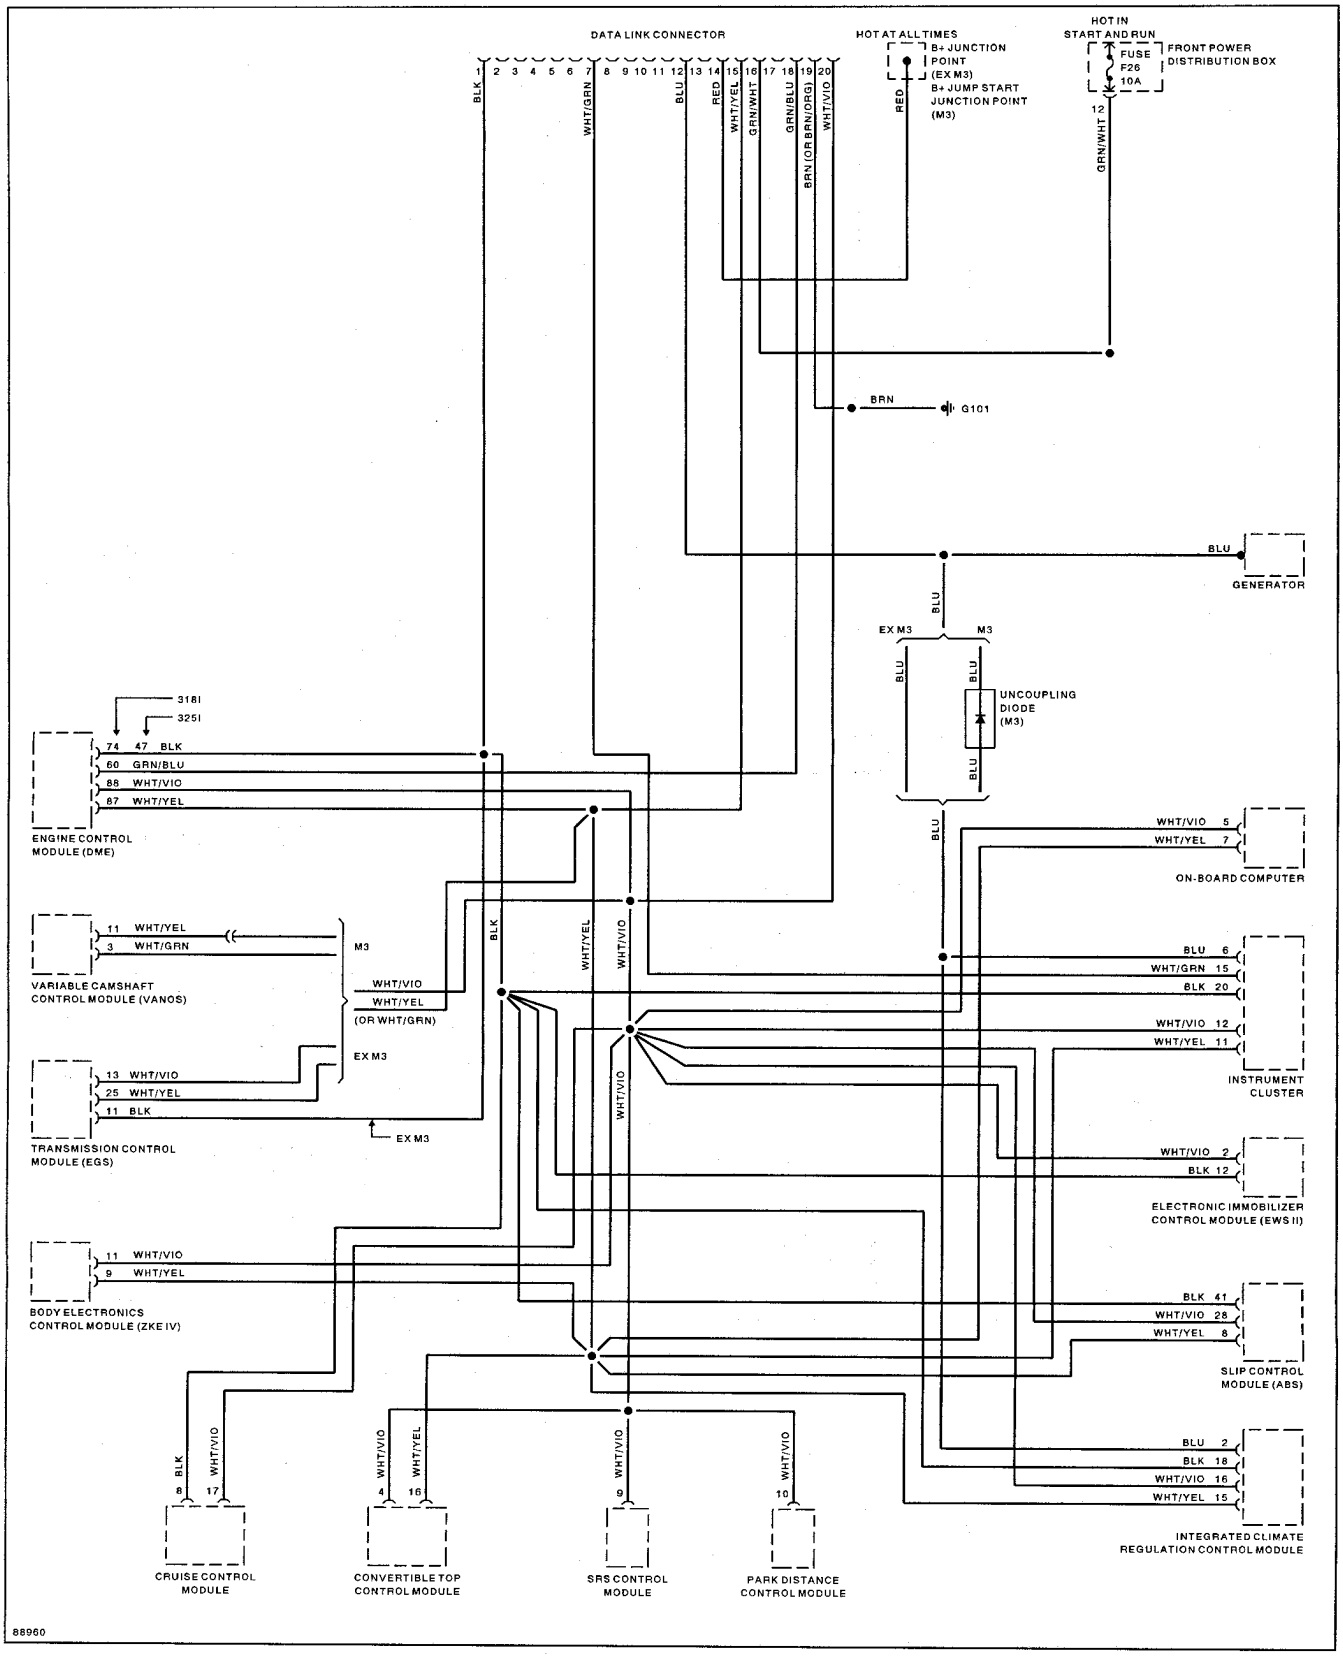


Data Link Connector

1994-95 Early Production Except 318ti

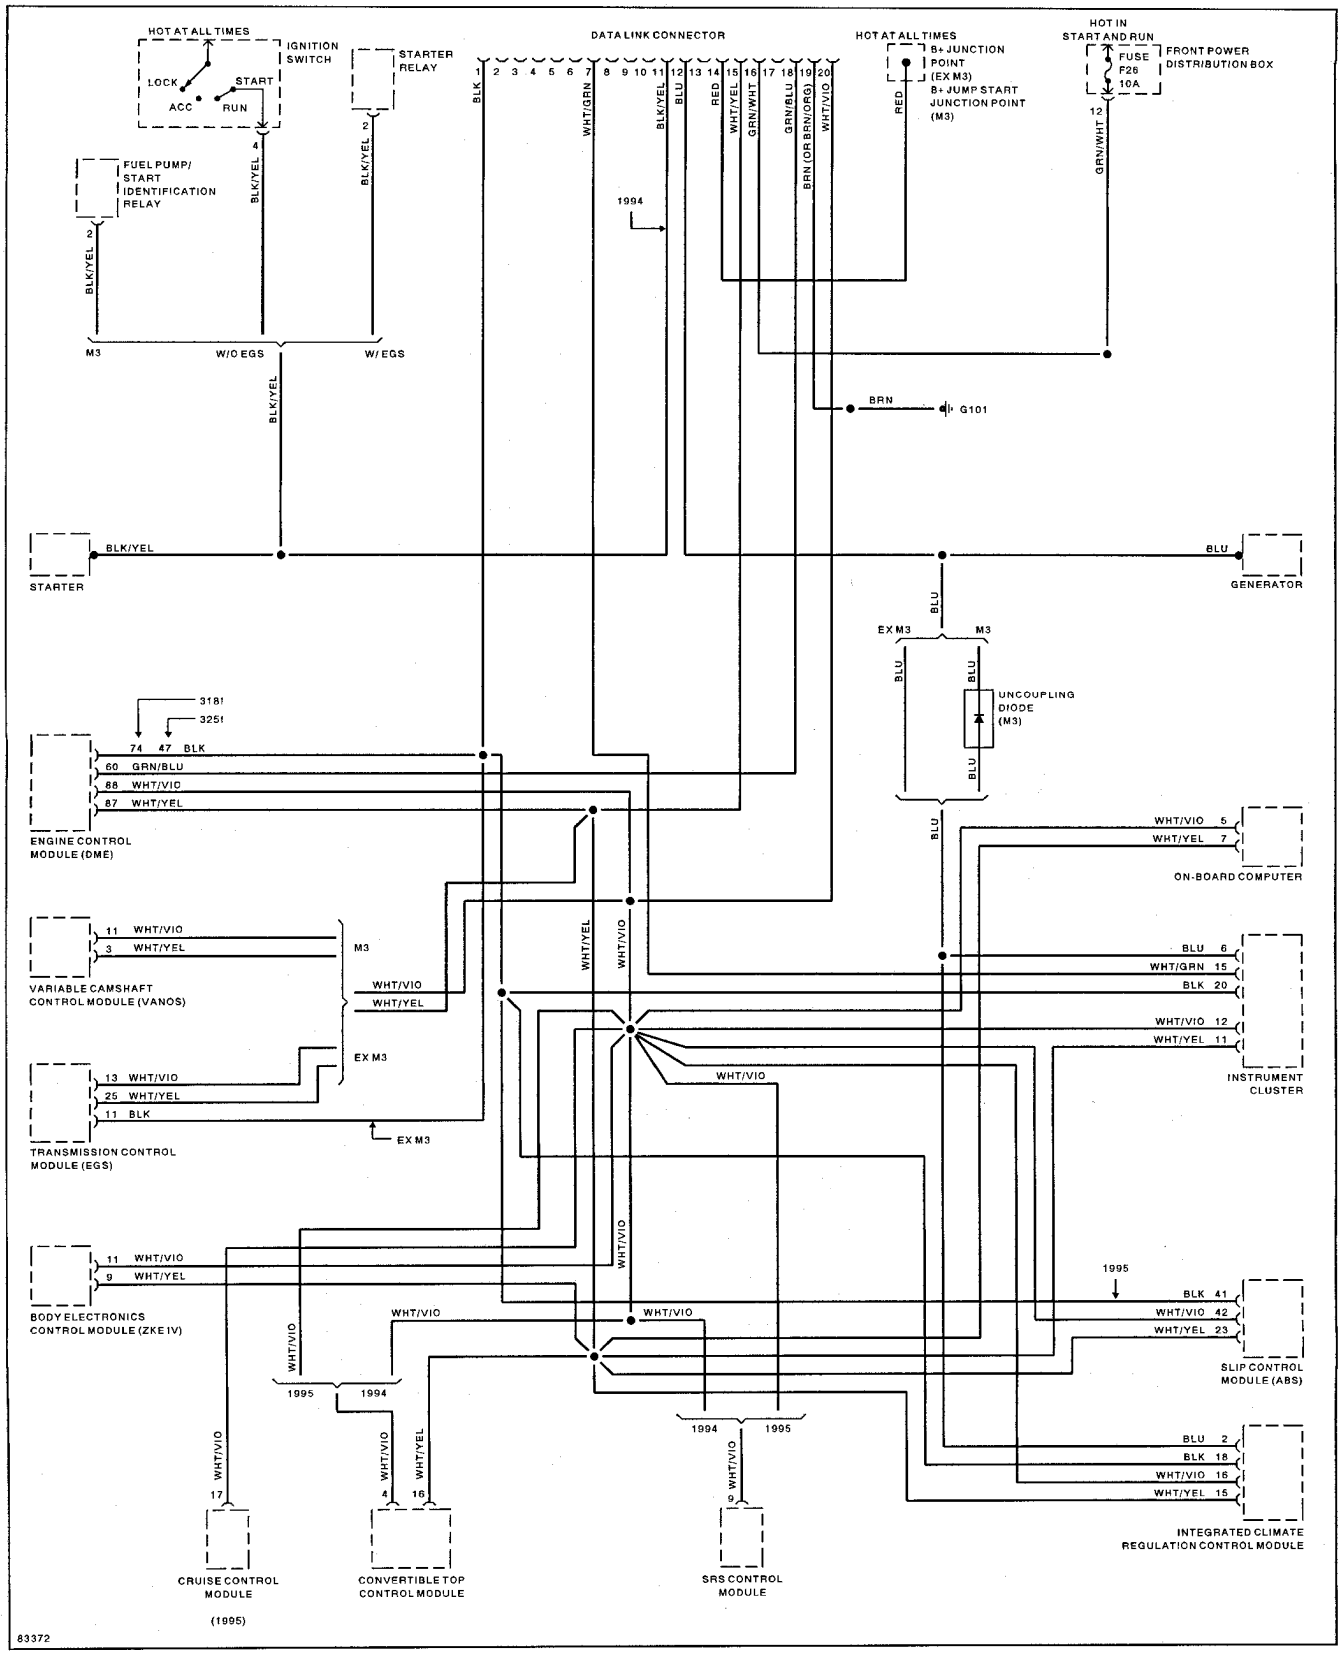

Data Link Connector


1992-93

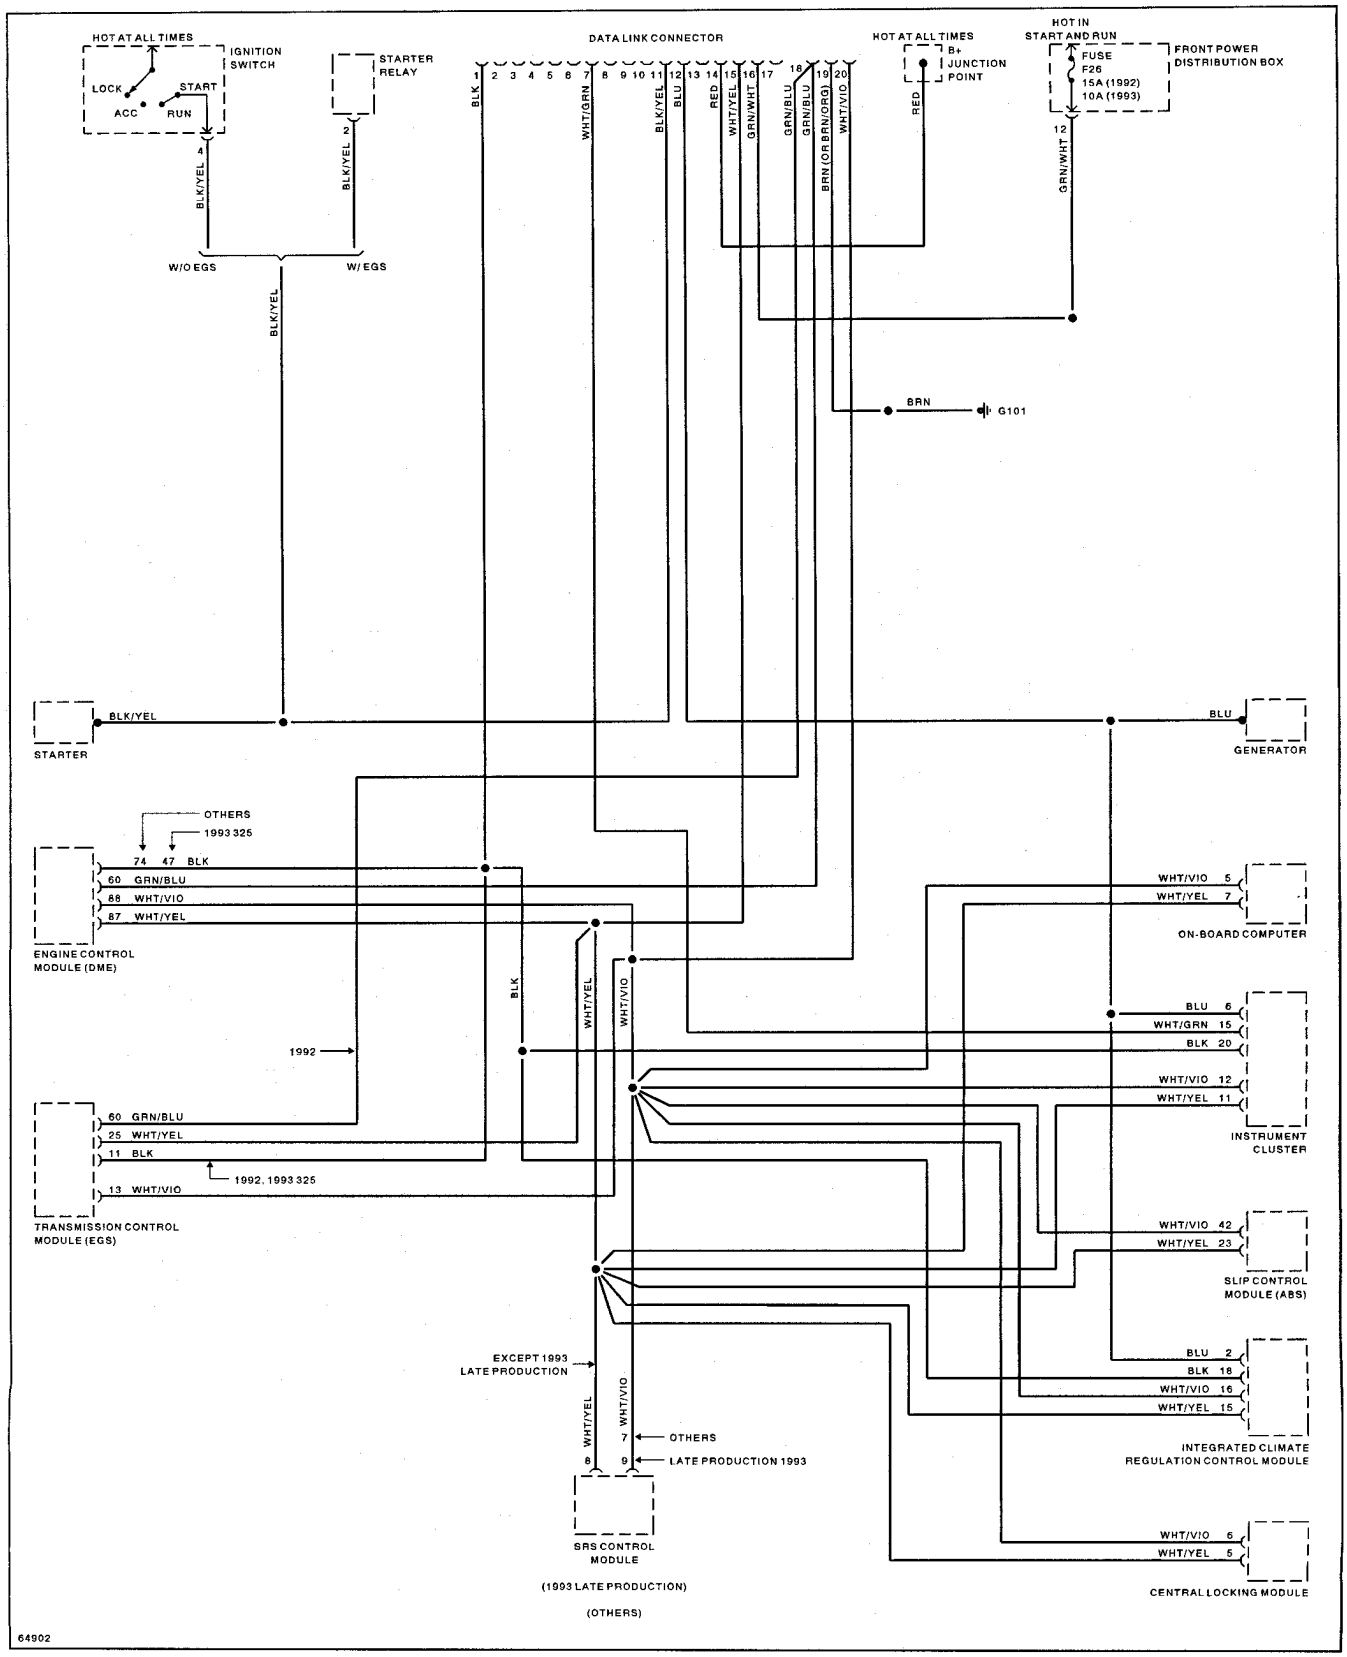

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Engine Management

1998 2.5L (323i), 2.8L (328i), 3.2L (M3) (2 of 2)

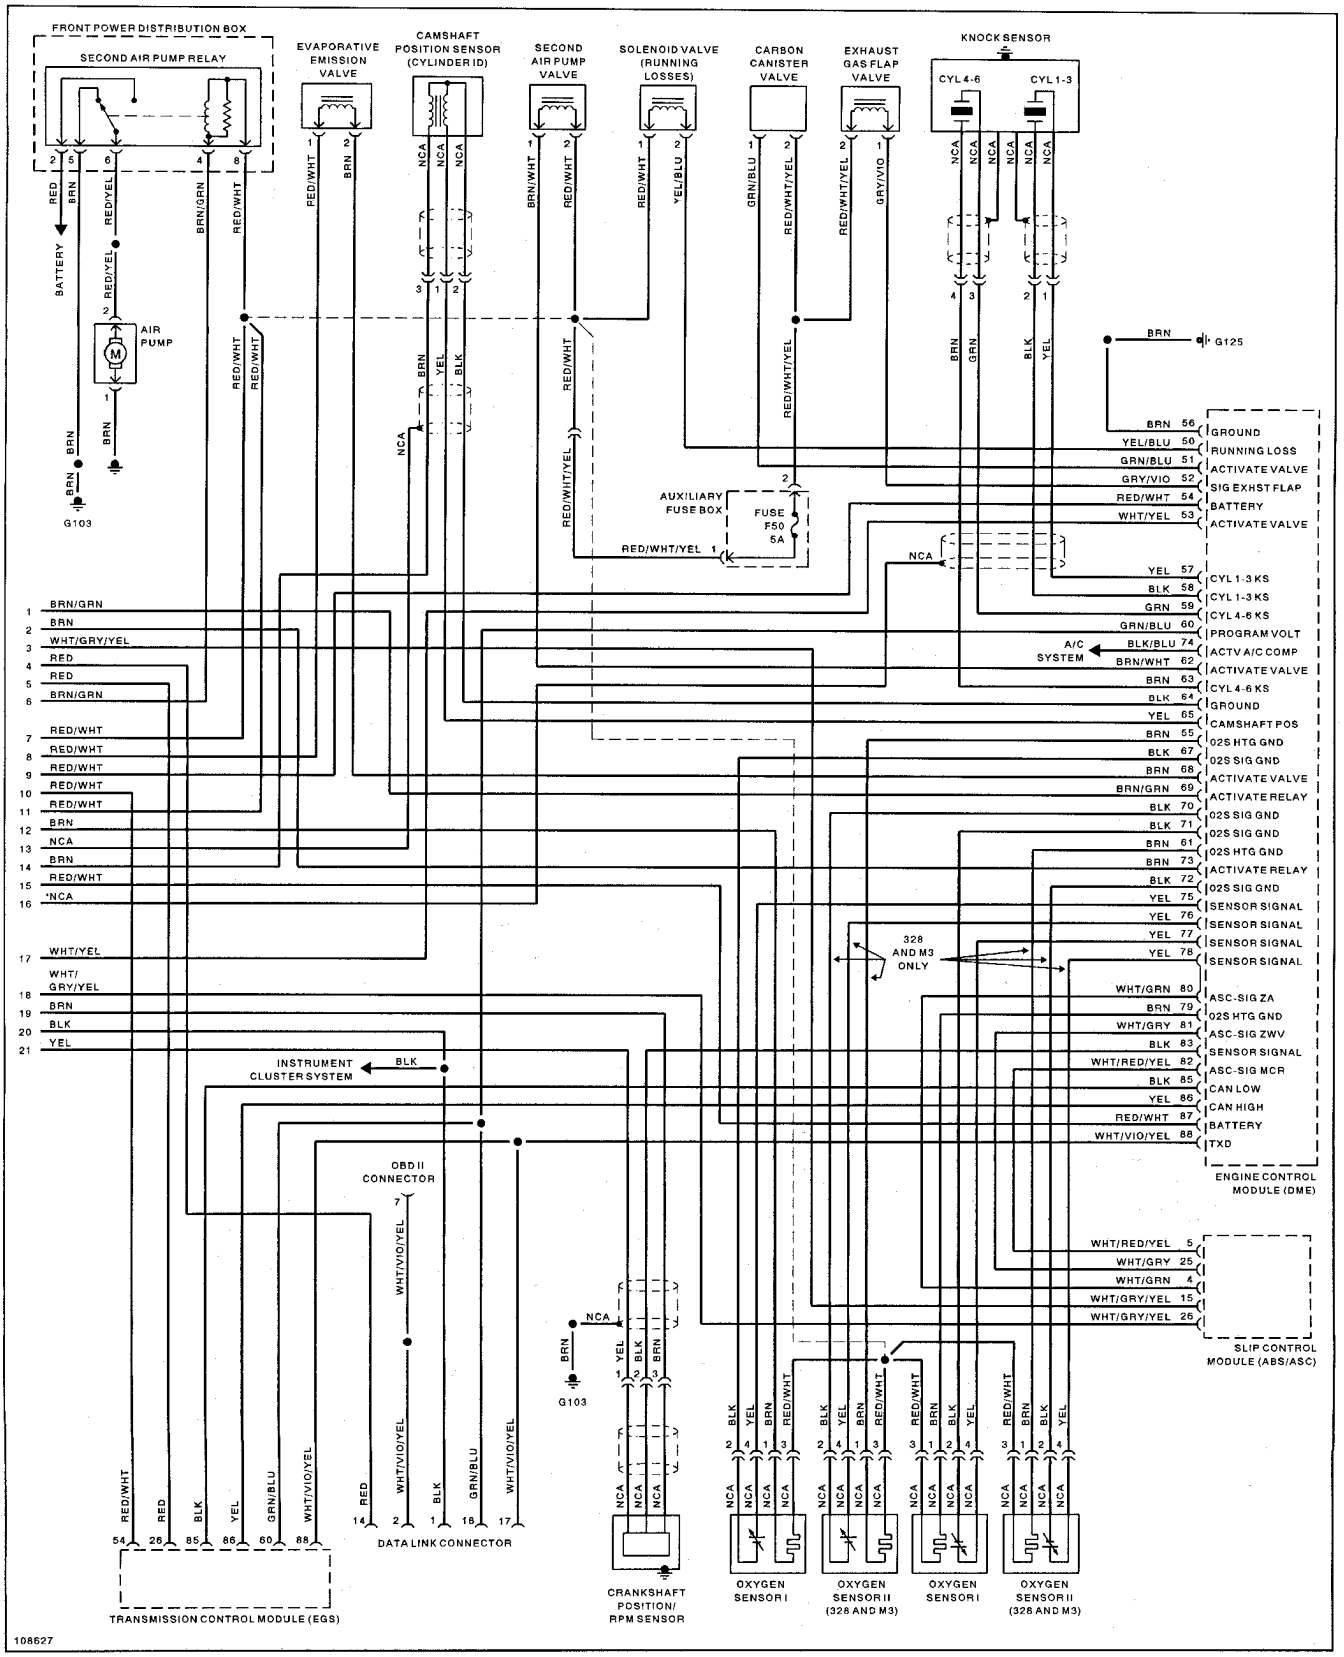


Engine Management

1998 2.5L (323i), 2.8L (328i), 3.2L (M3) (1 of 2)

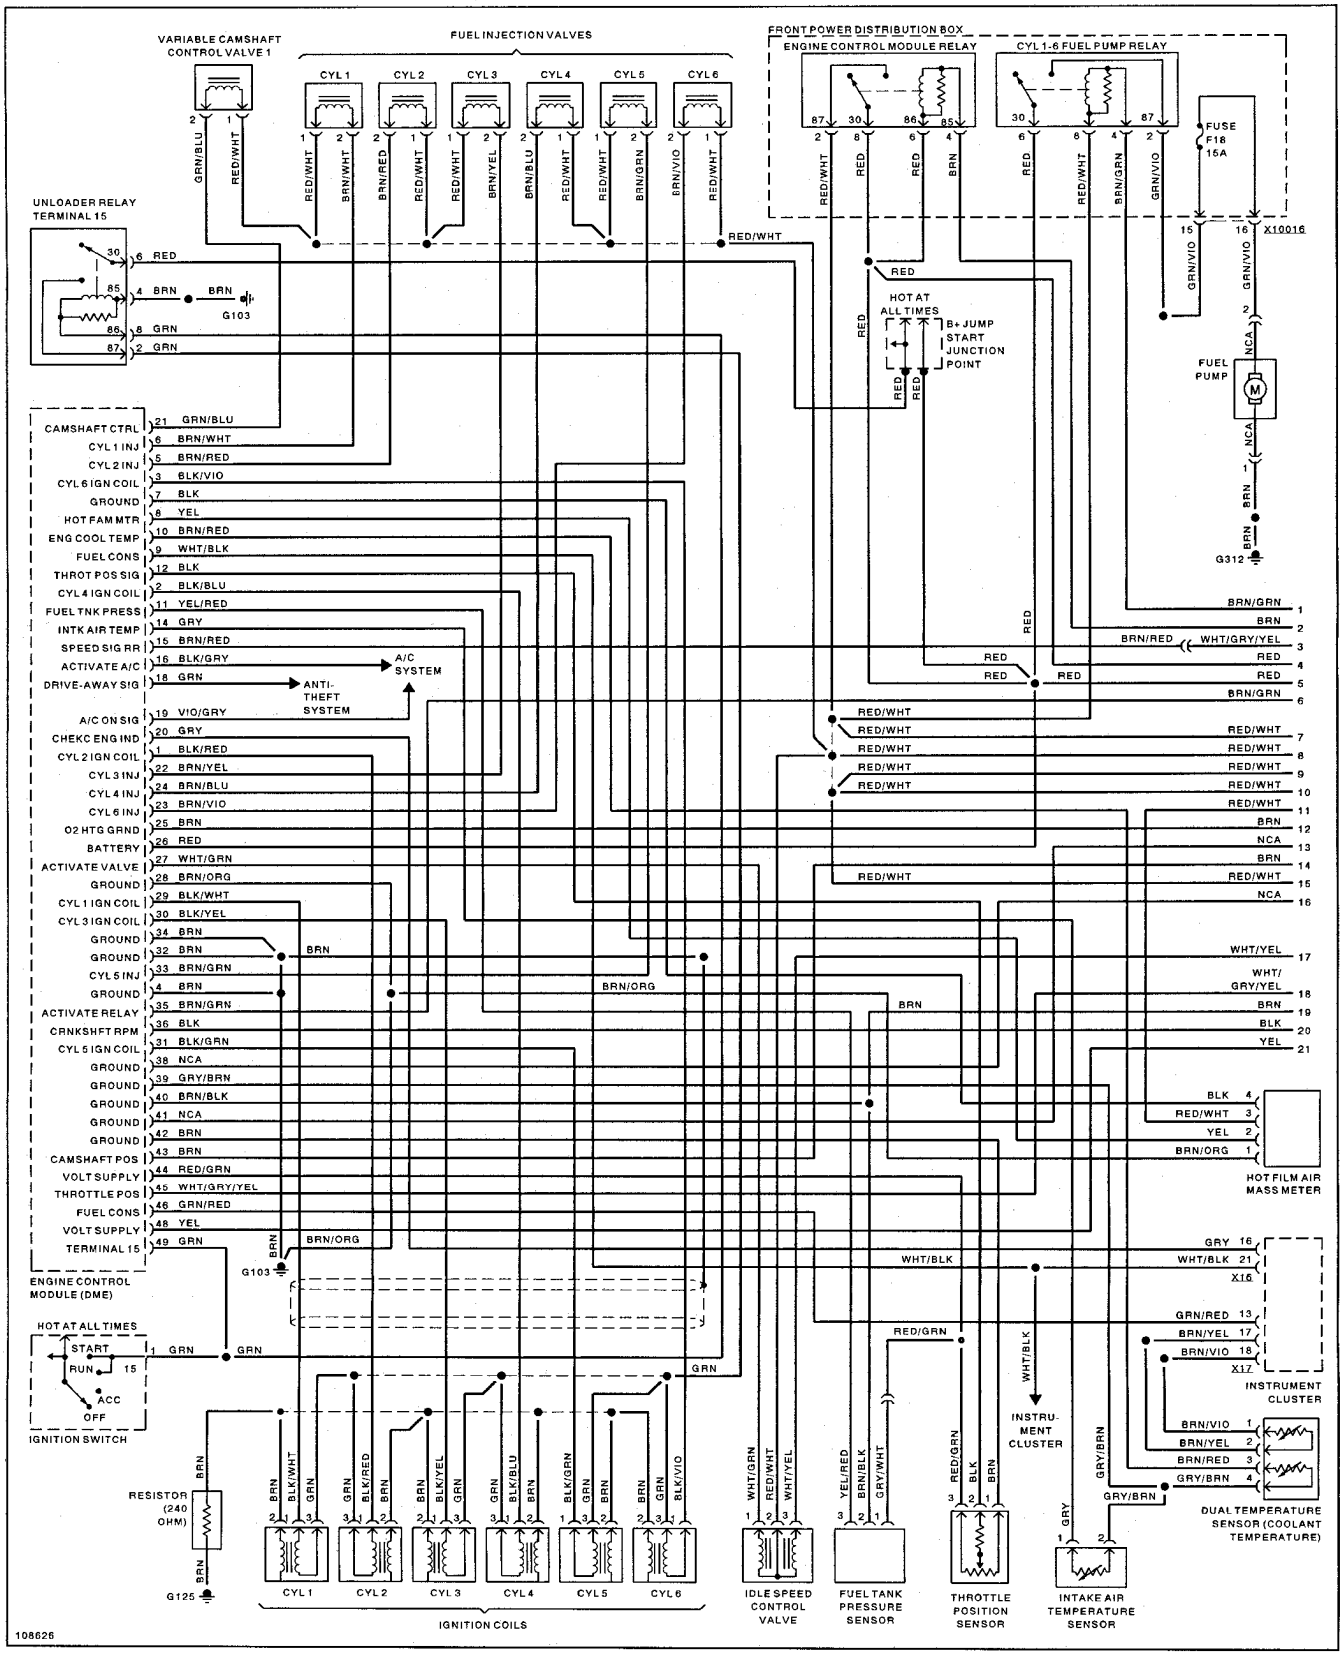


Engine Management

1998 1.9L (2 of 2)

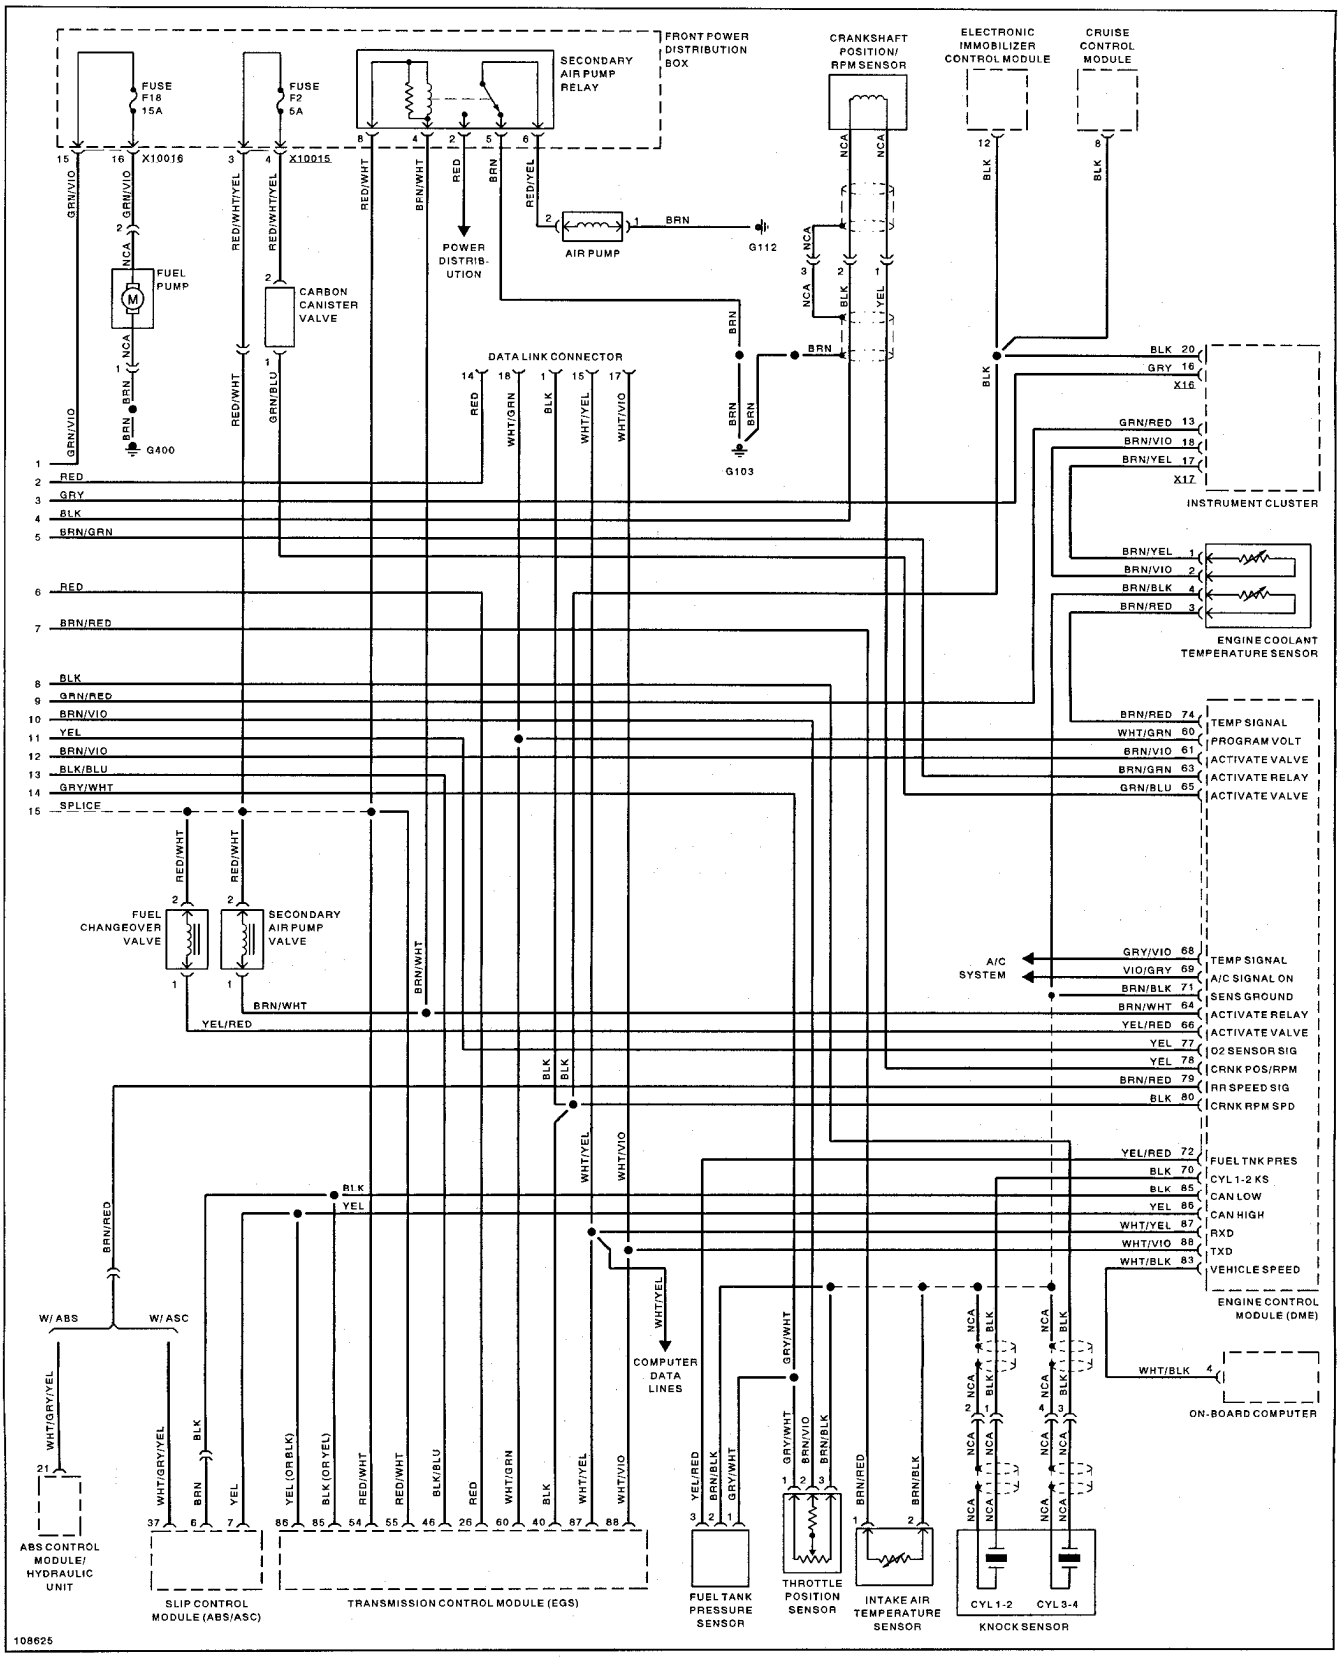


Engine Management

1998 1.9L (1 of 2)

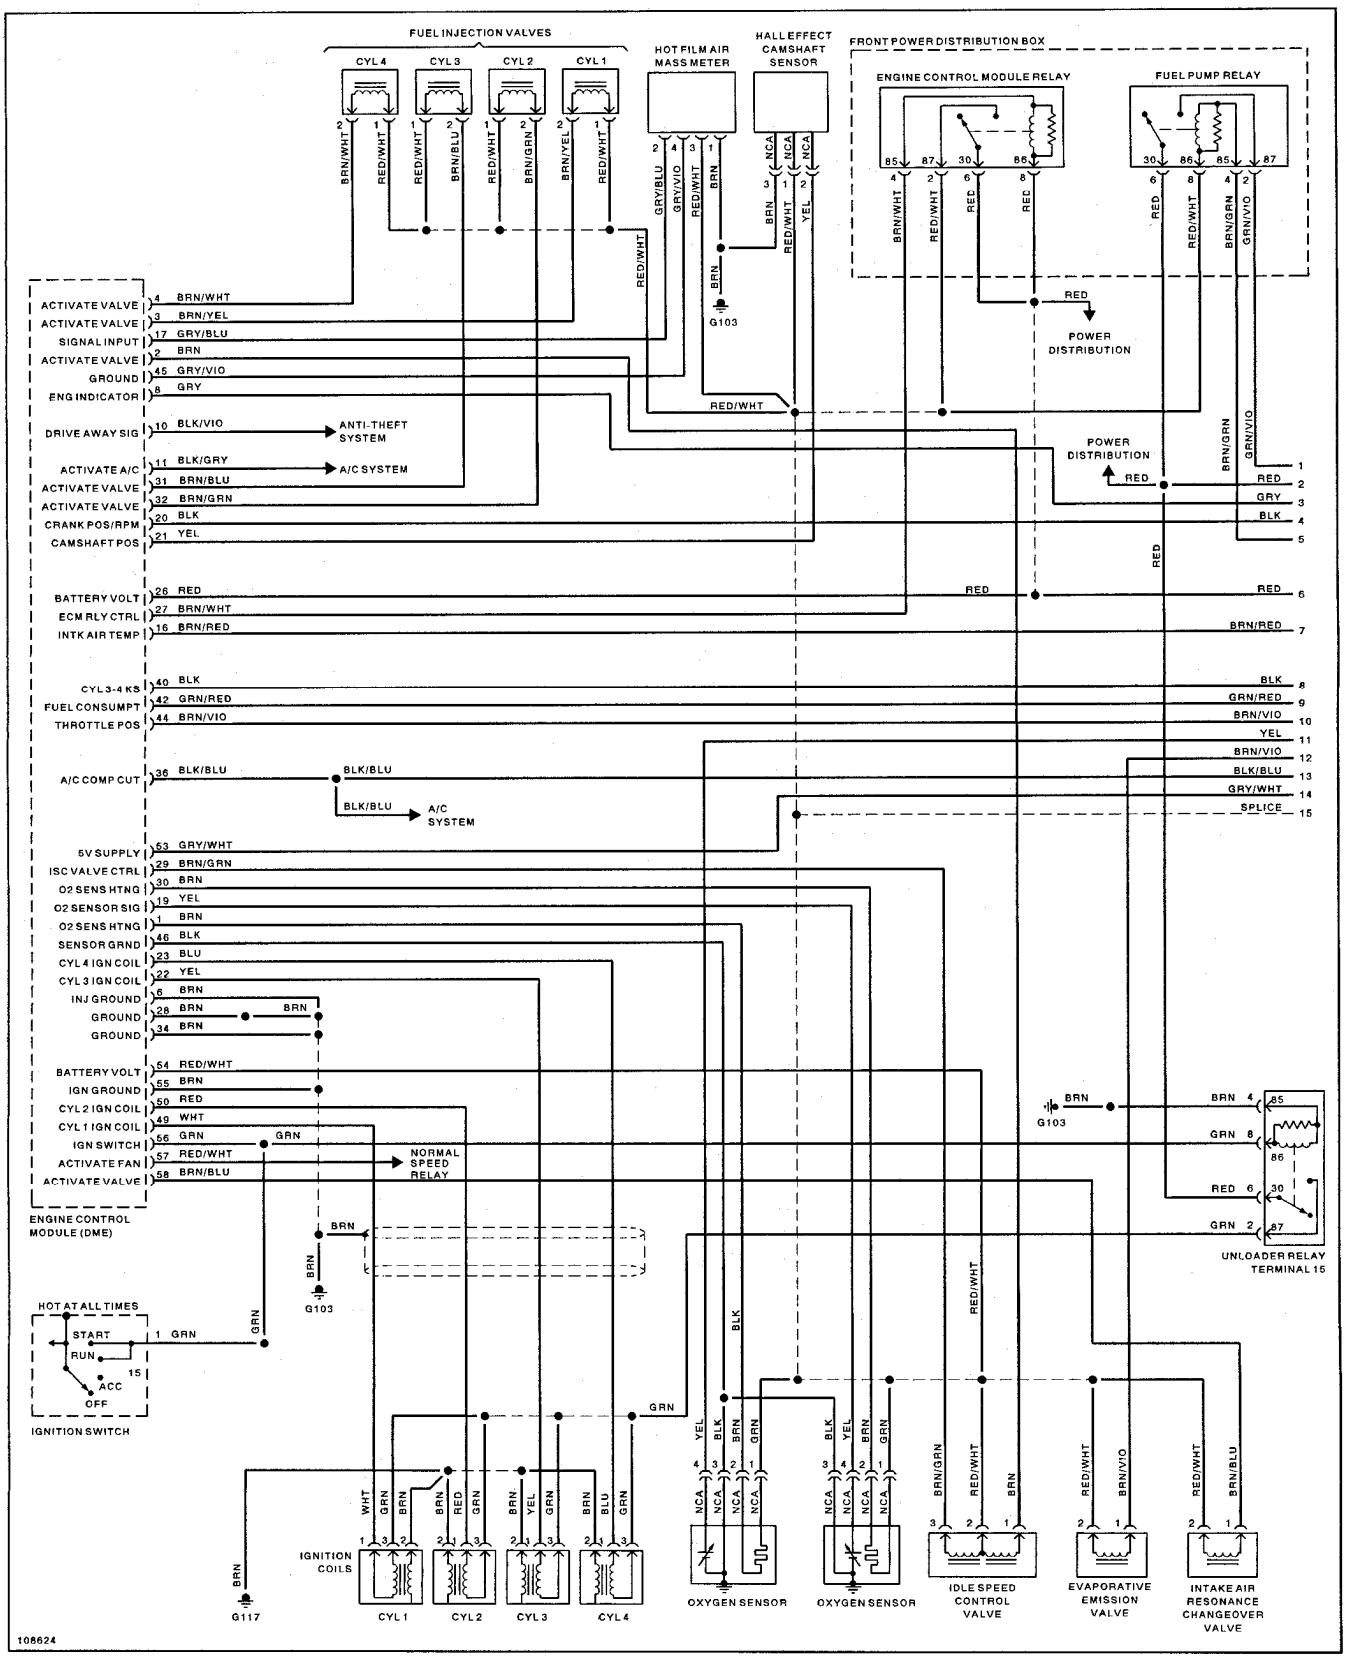


Engine Management


1996-97 2.8L (2 of 2)

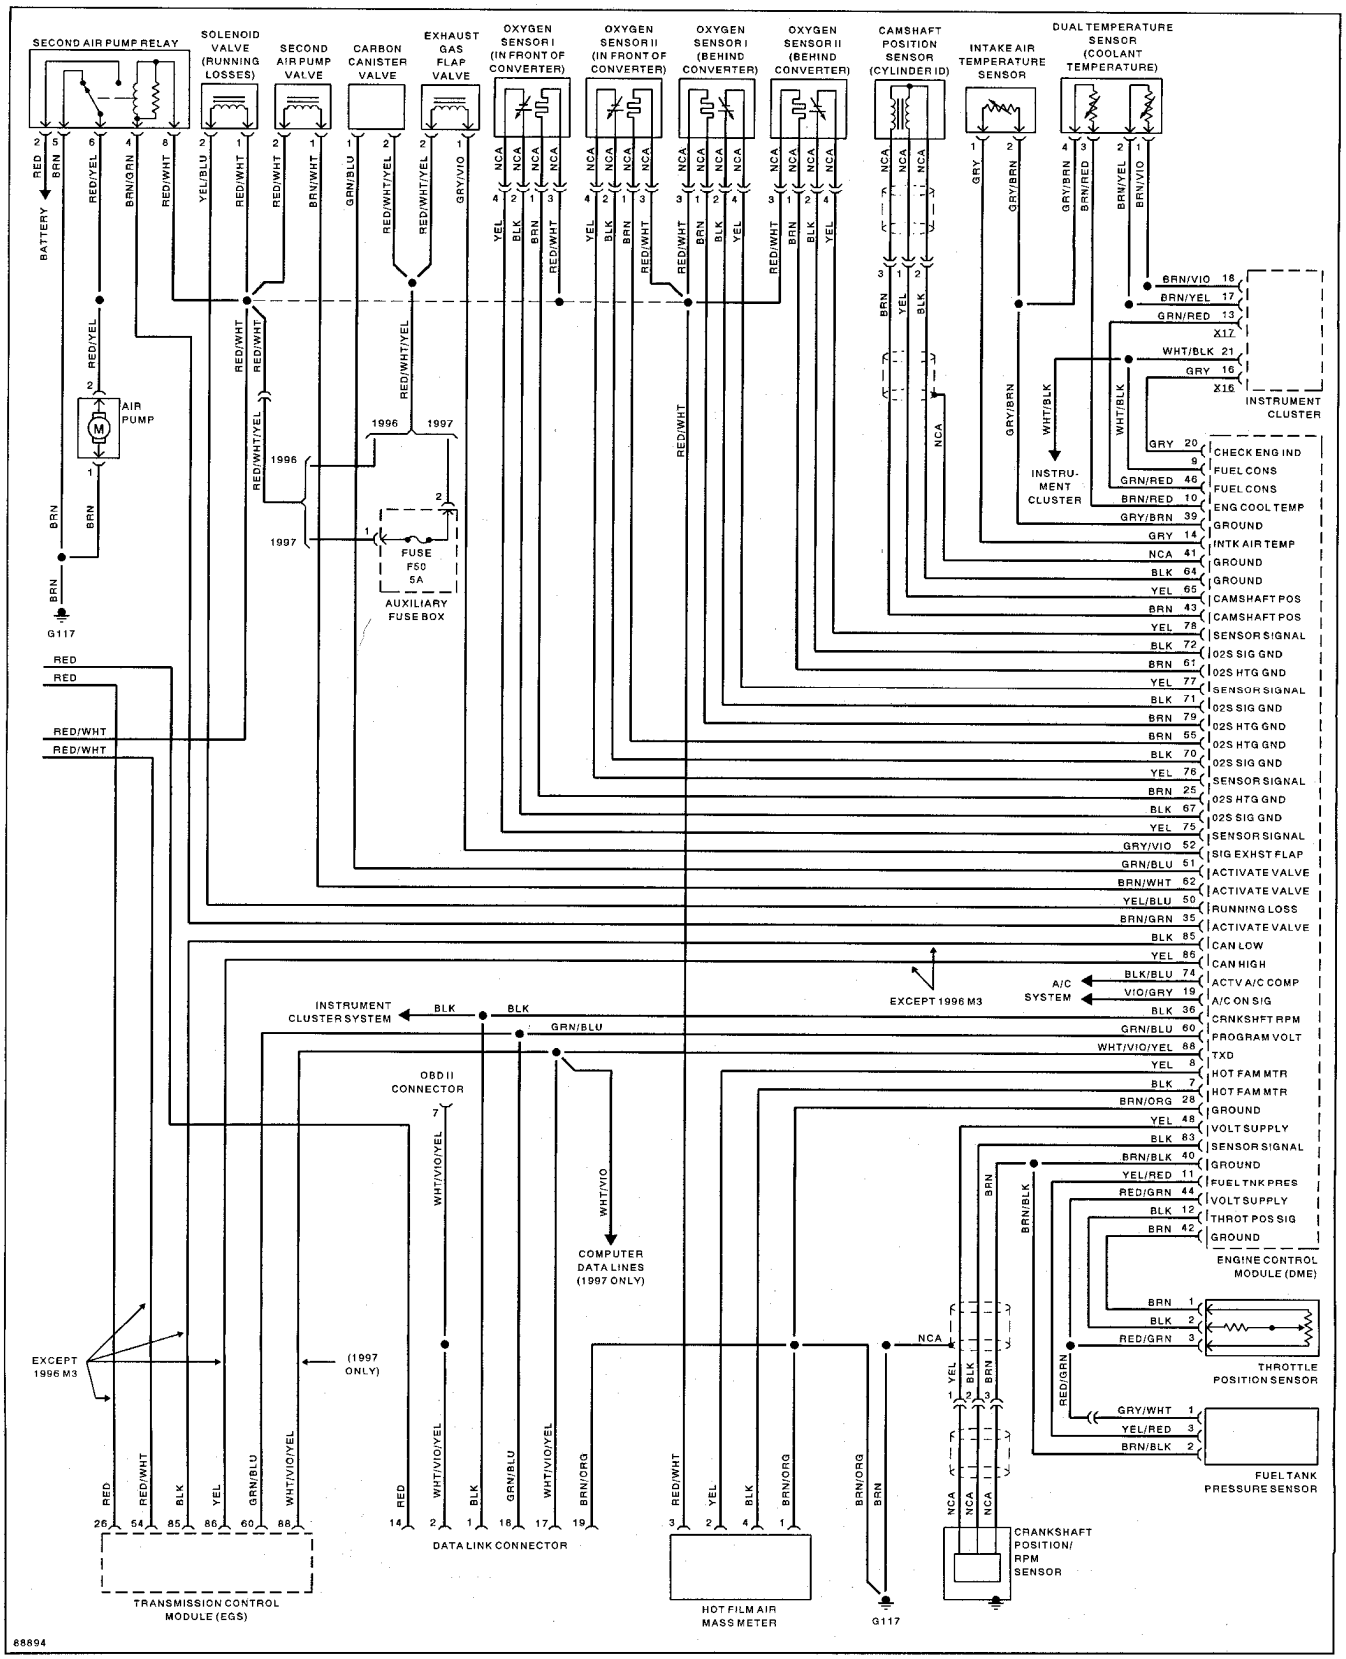

Engine Management
1996-97 2.8L (1 of 2)

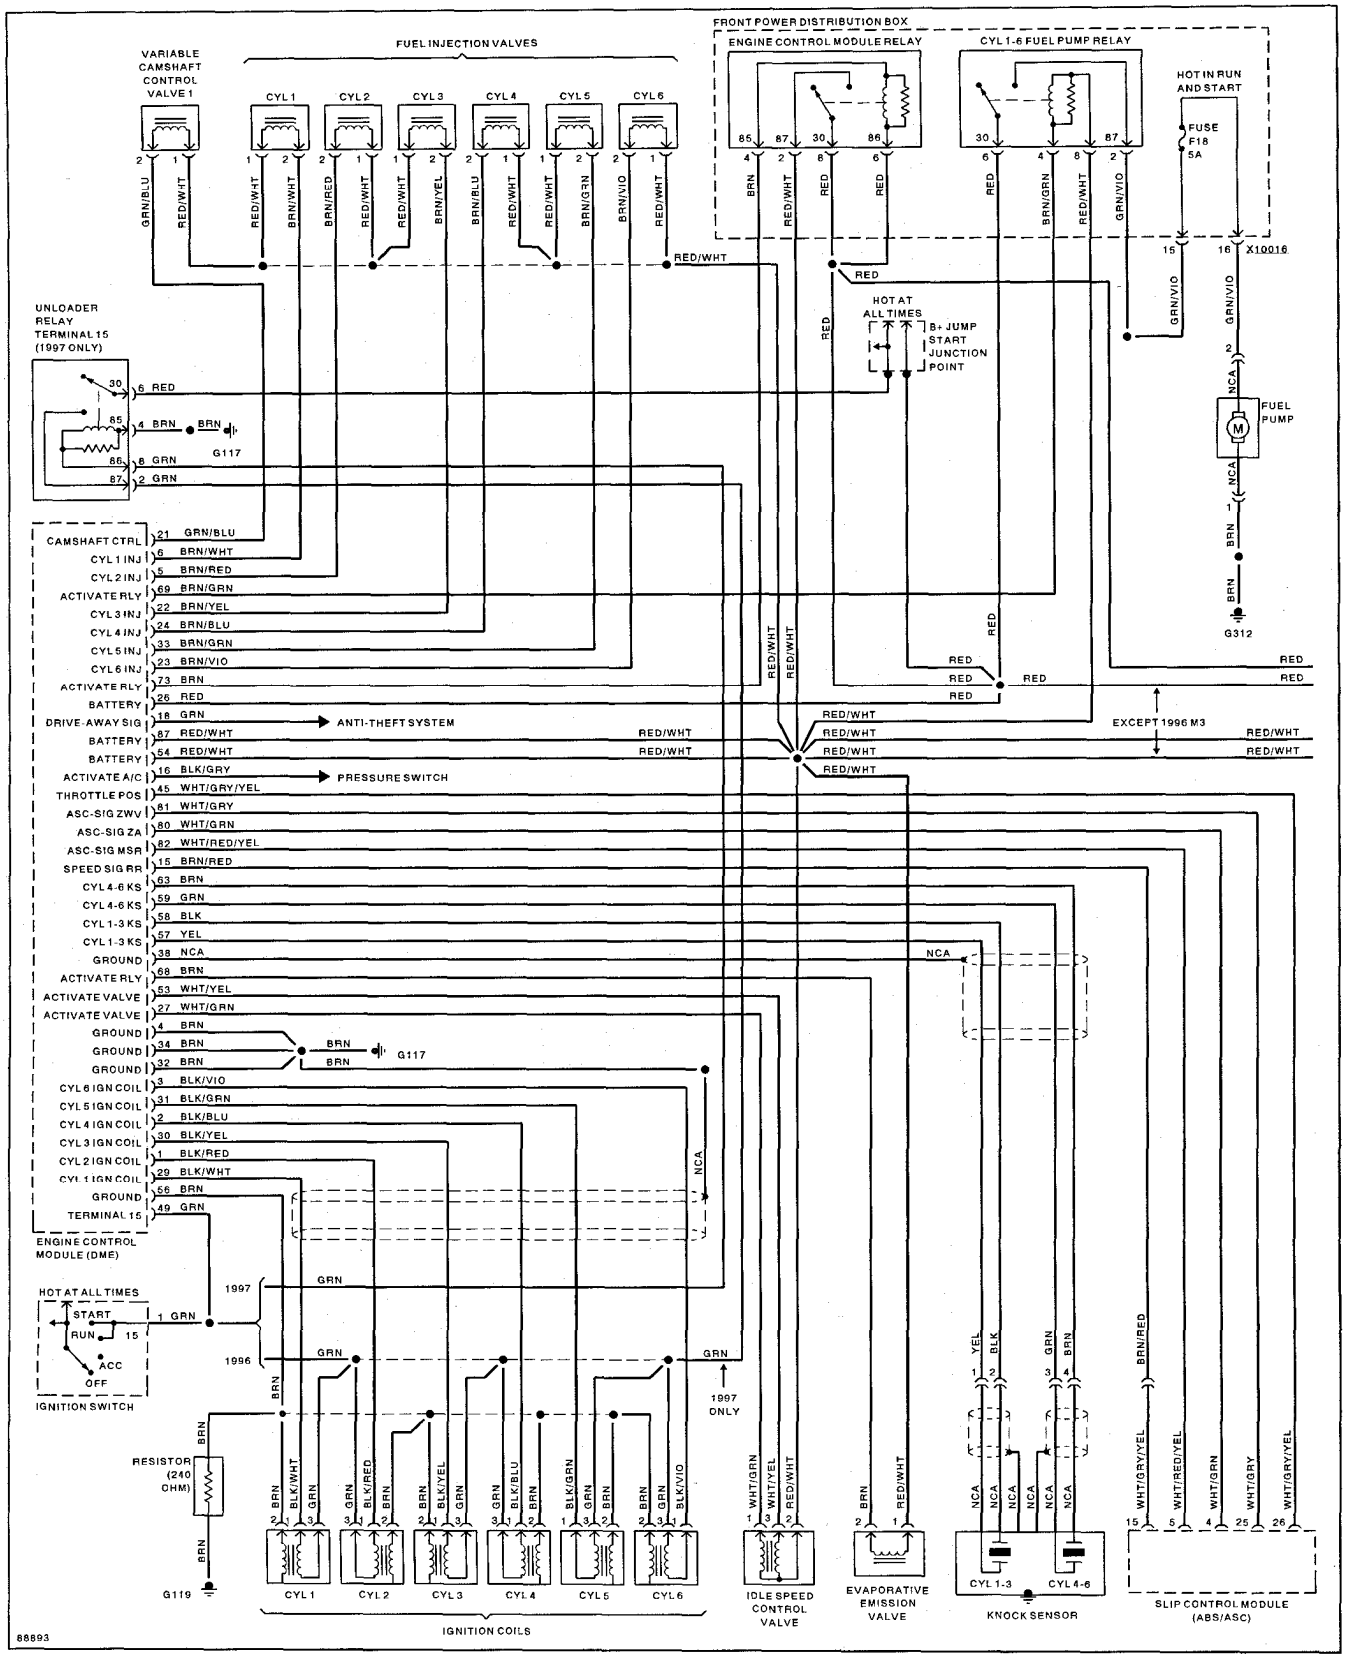


Engine Management
1996-97 1.9L (2 of 2)

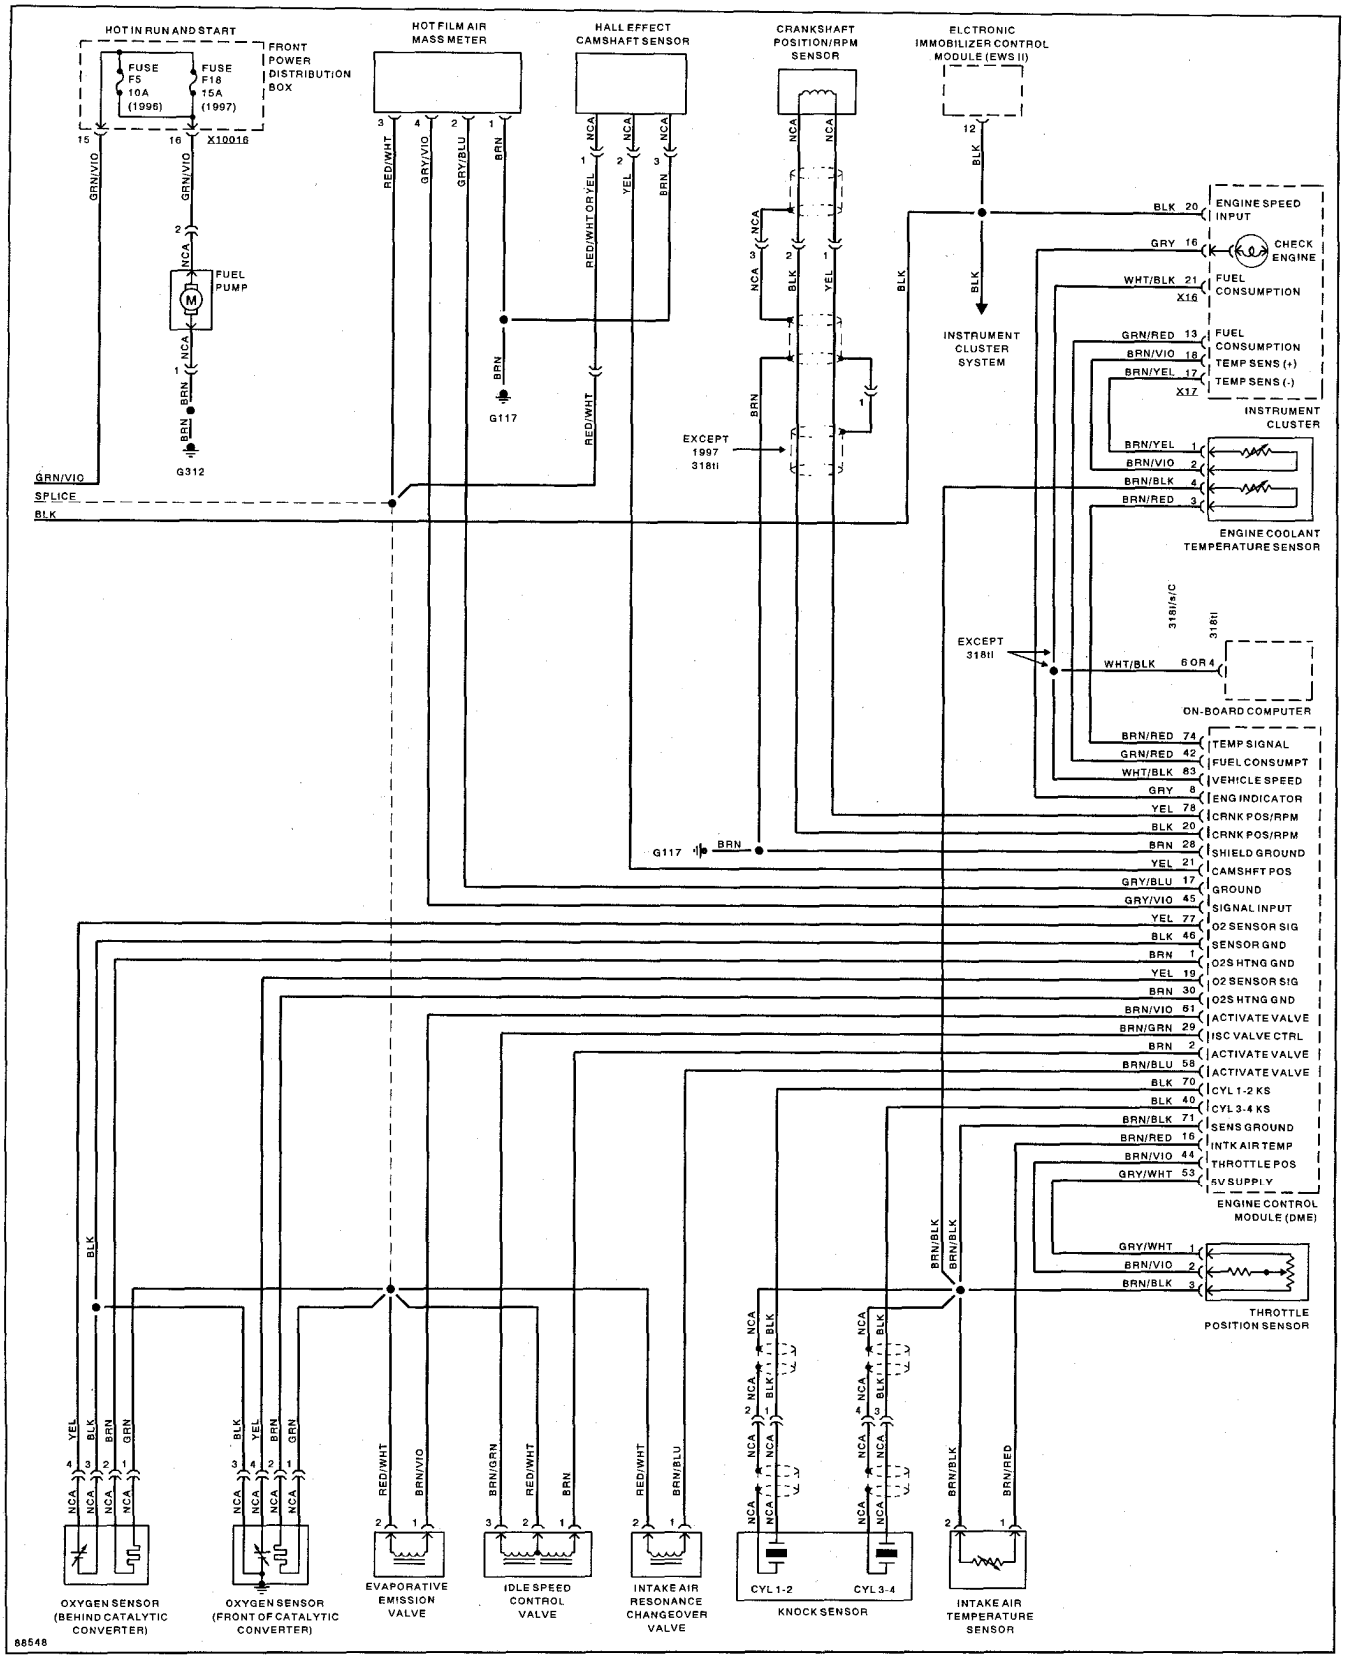

Engine Management


1996-97 1.9L (1 of 2)

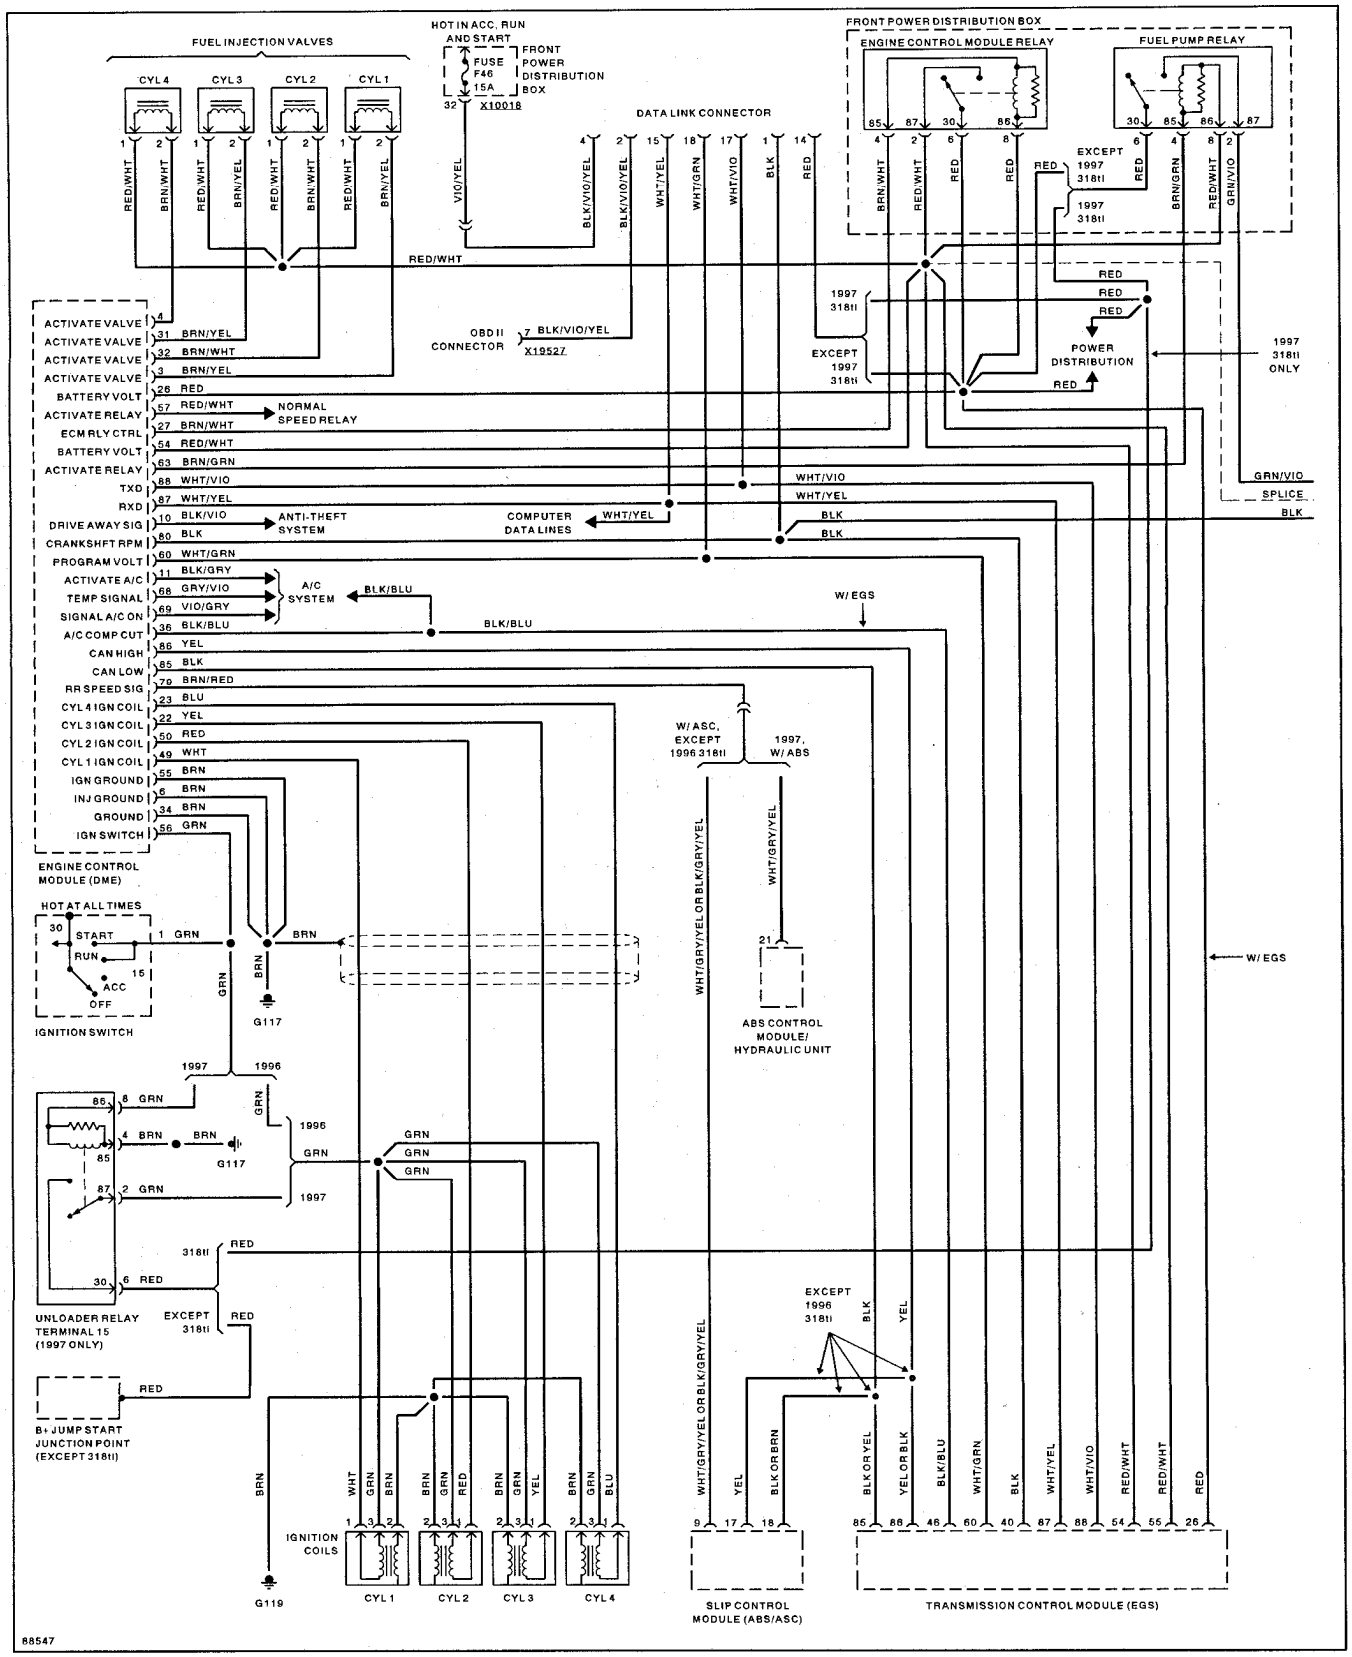

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Engine Management

1993-95 2.5L (2 of 2)

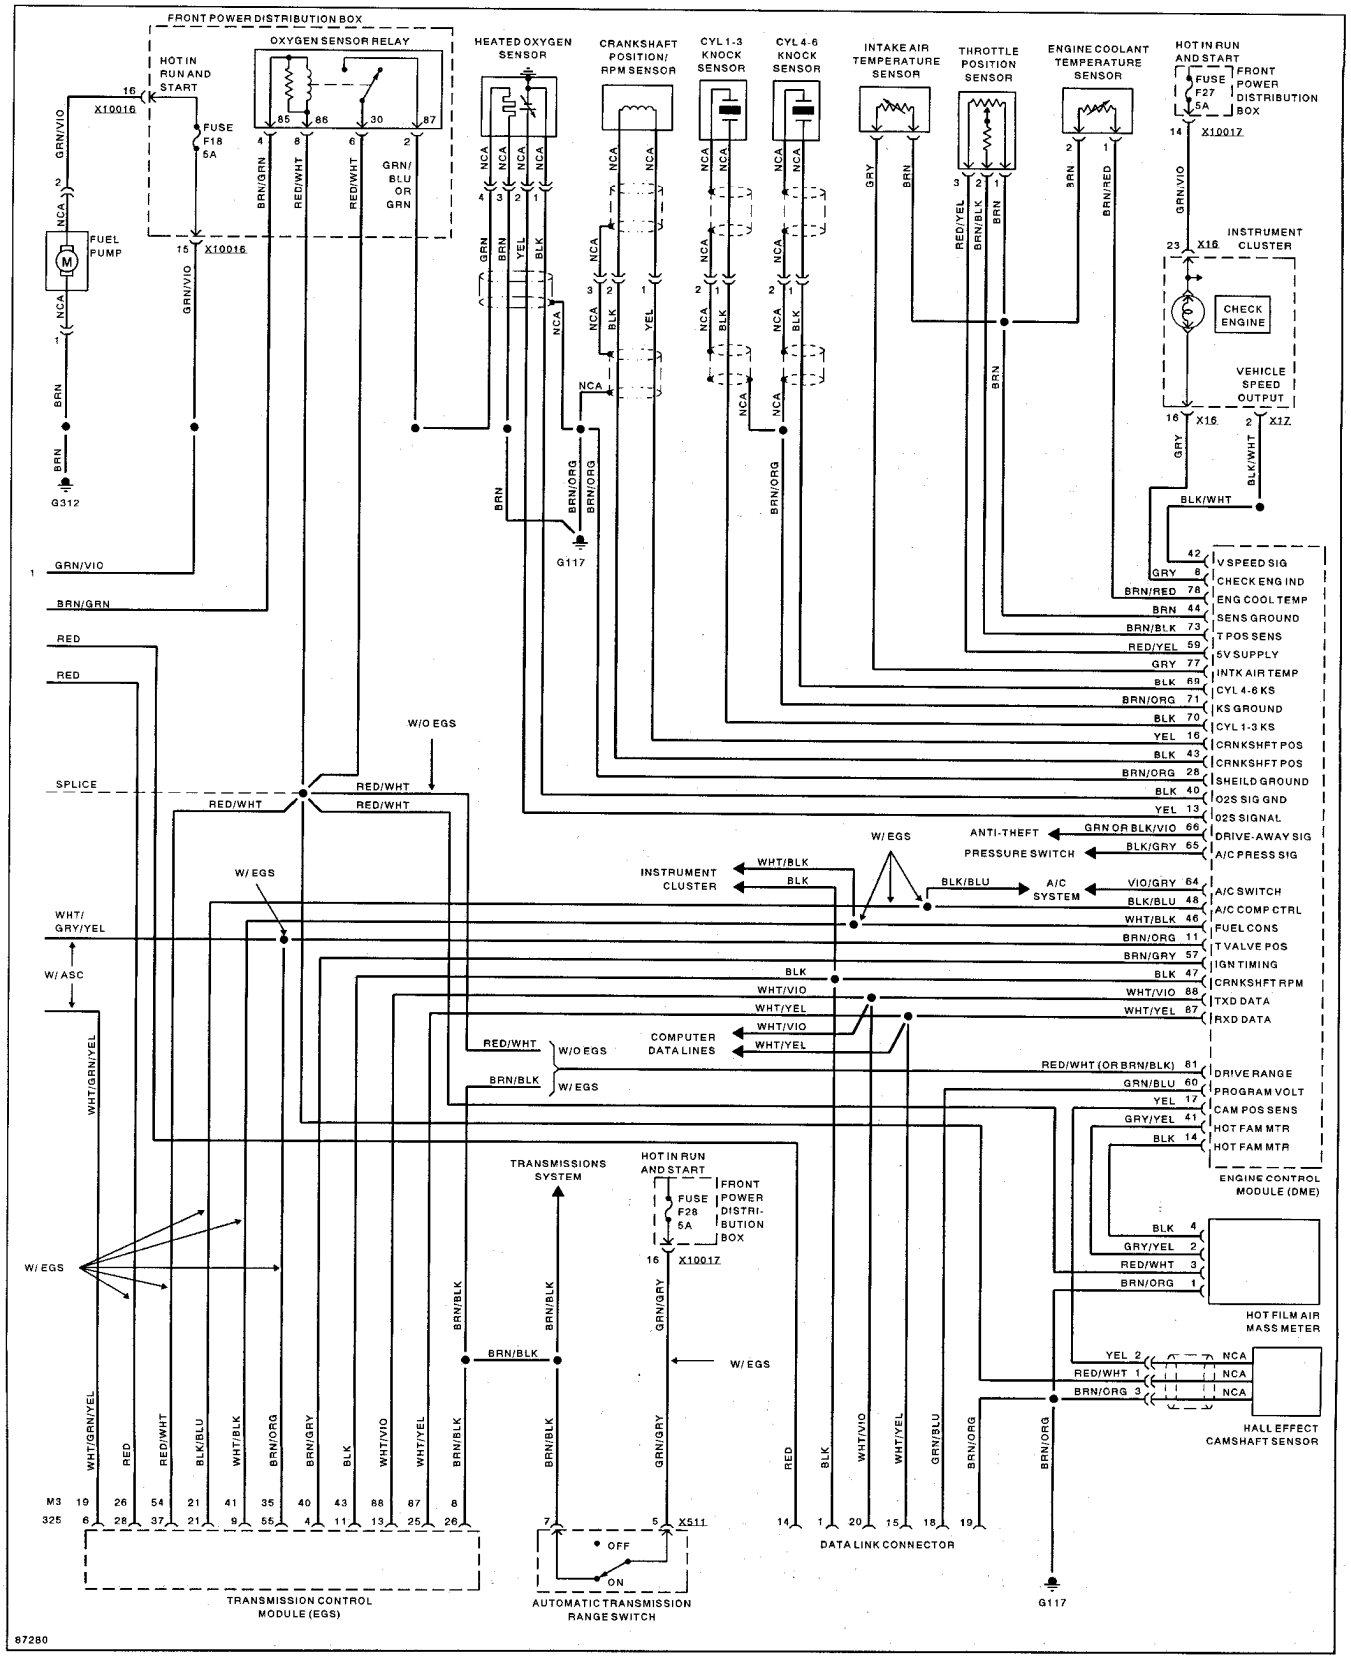


Engine Management

1993-95 2.5L (1 of 2)

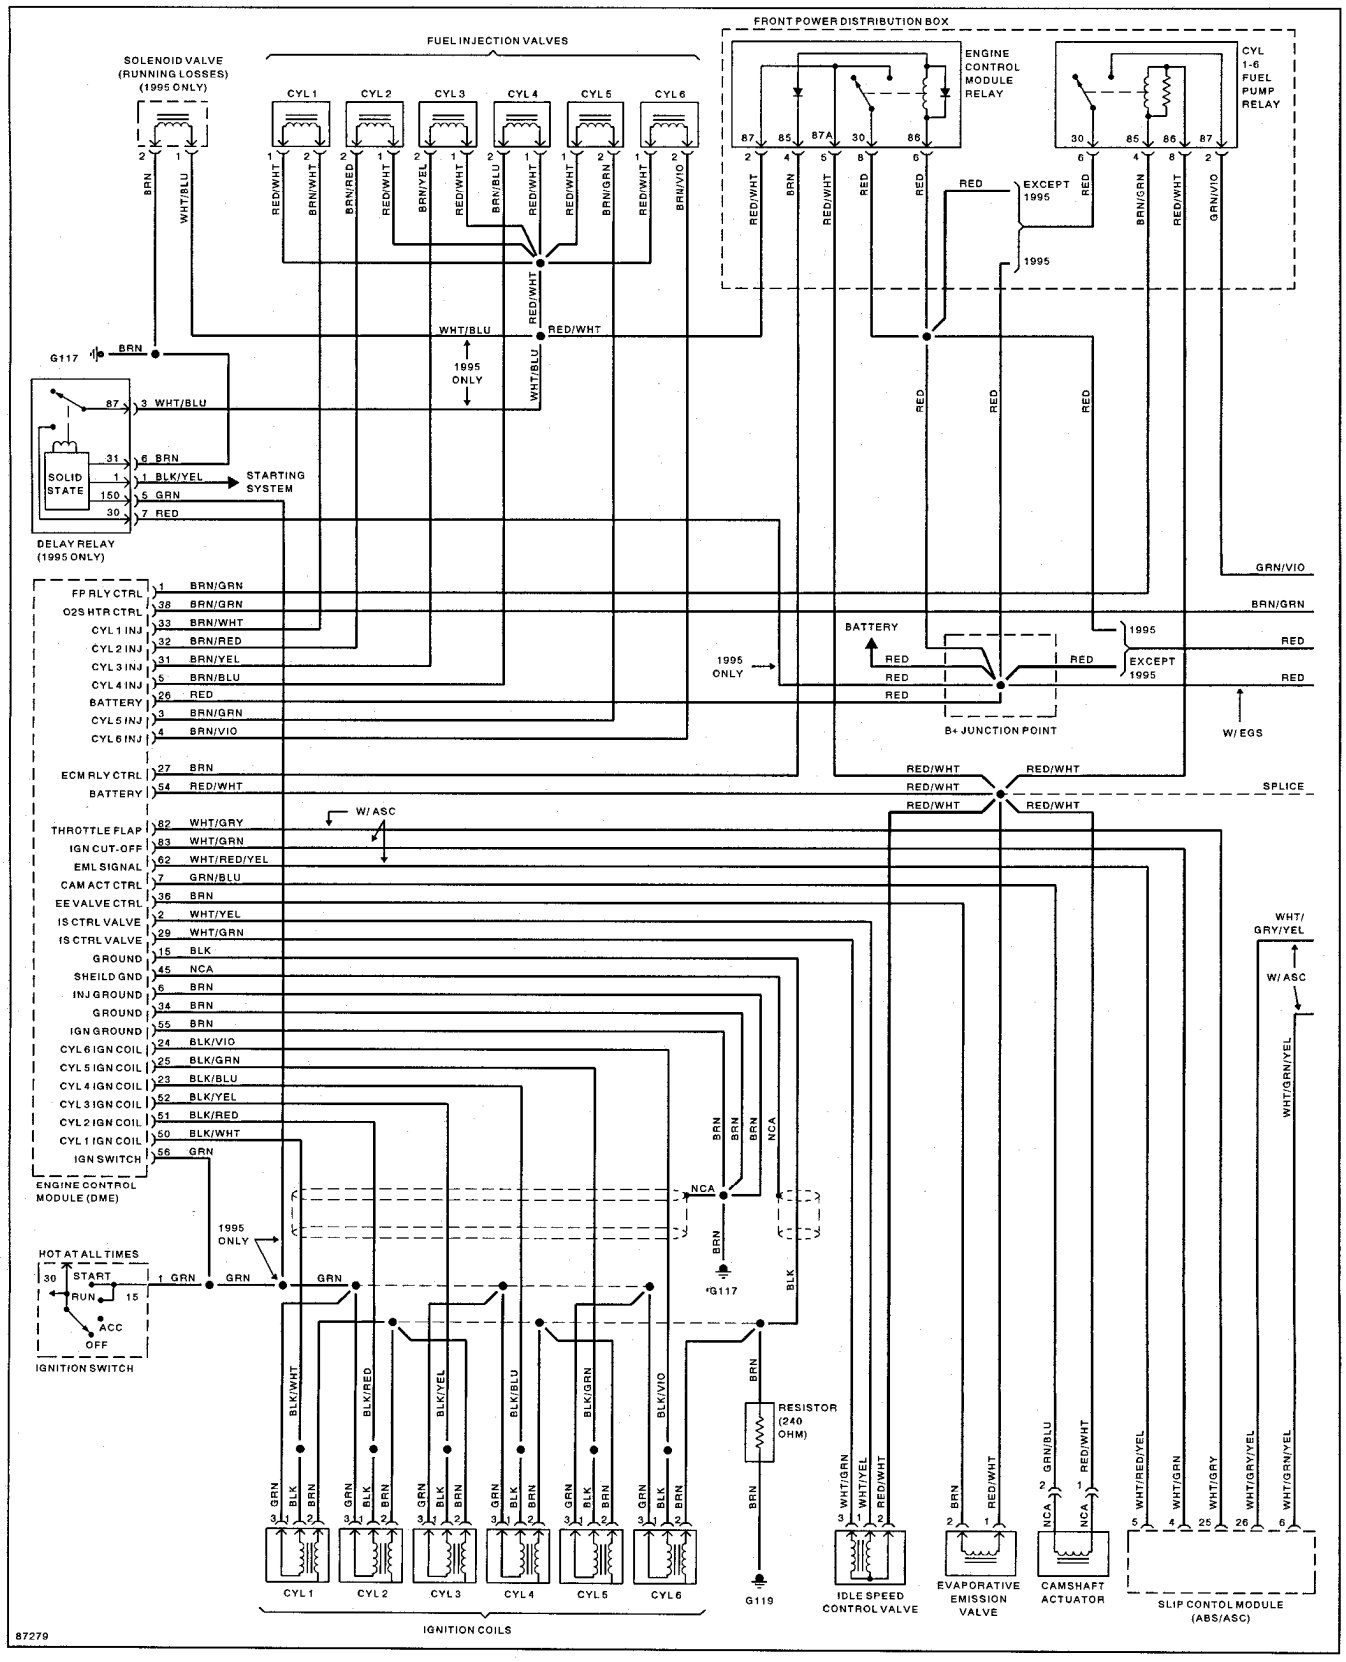


Engine Management

1993-95 1.8L (2 of 2)

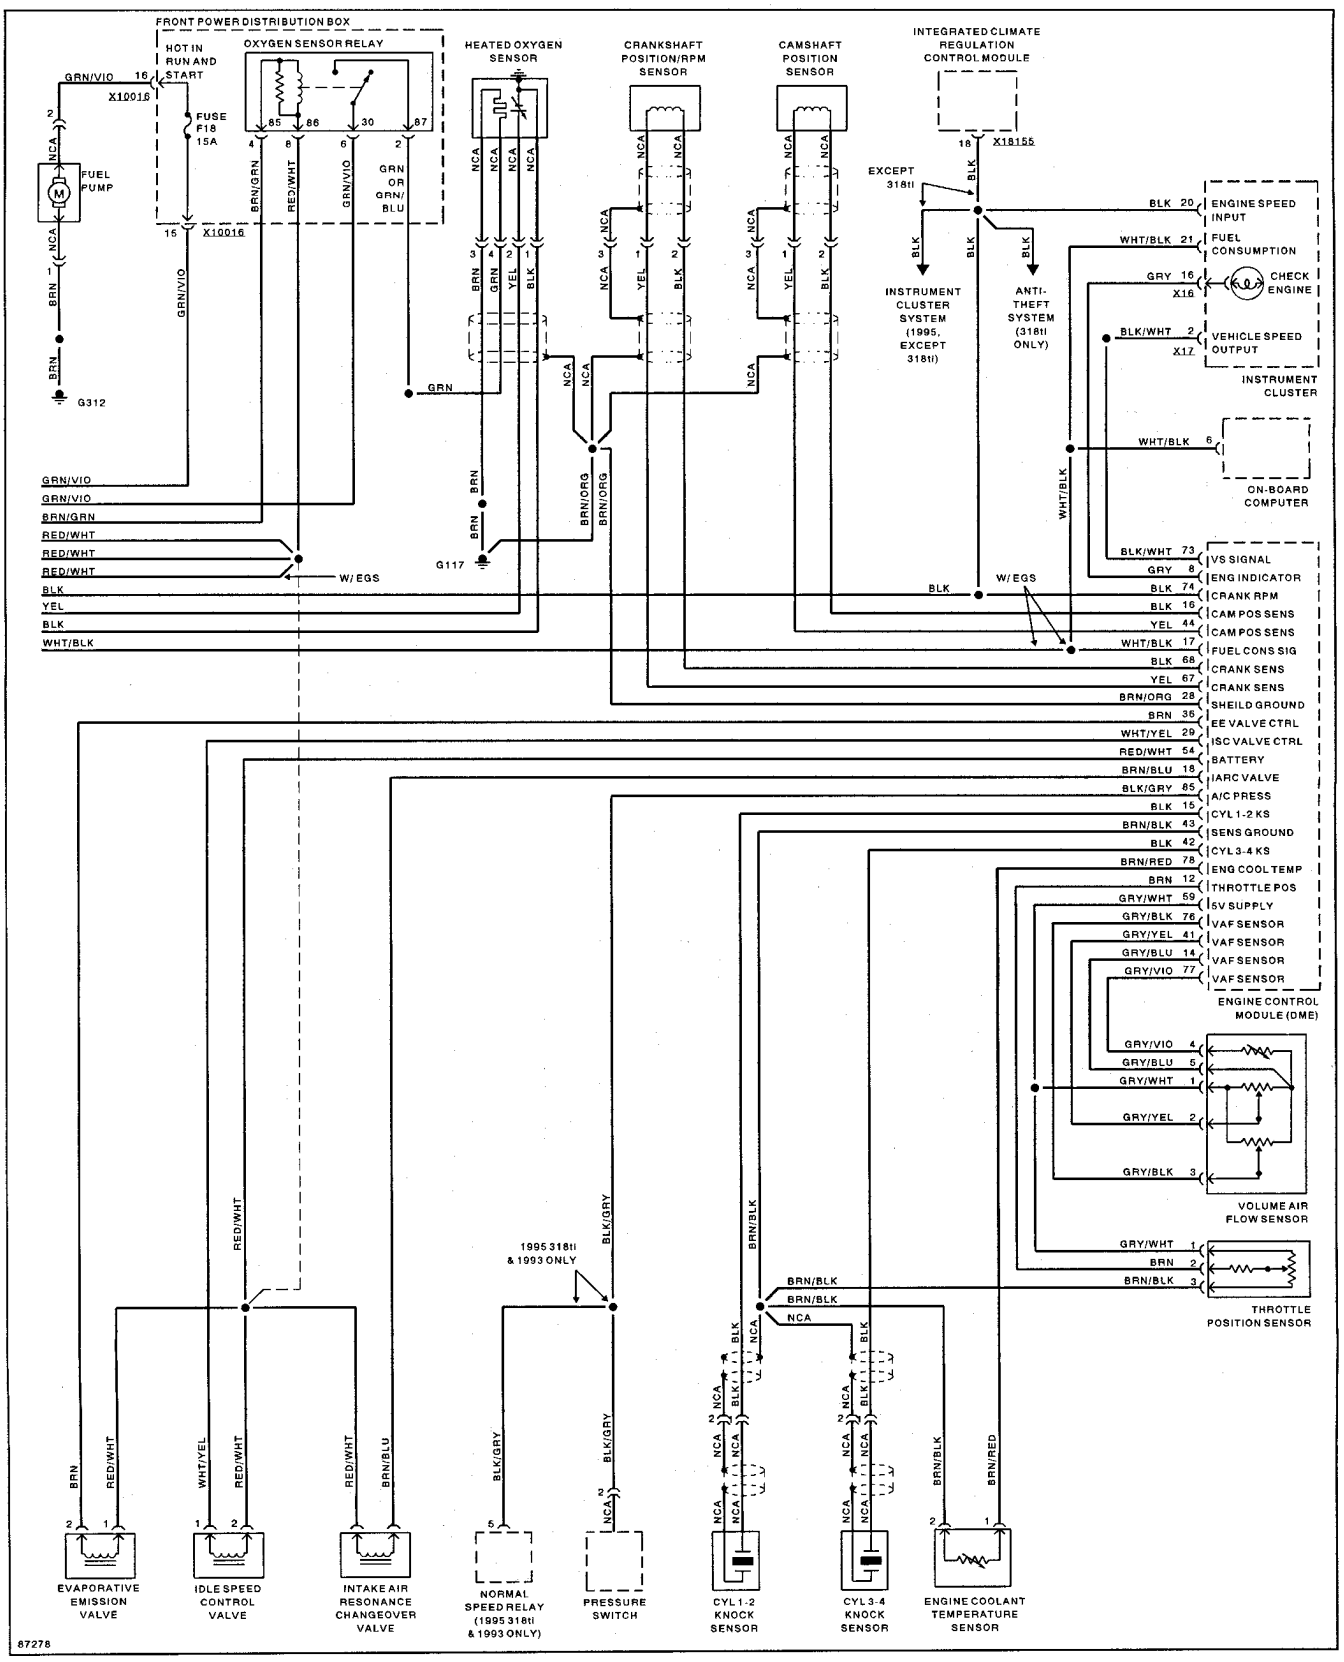


Engine Management

1993-95 1.8L (1 of 2)

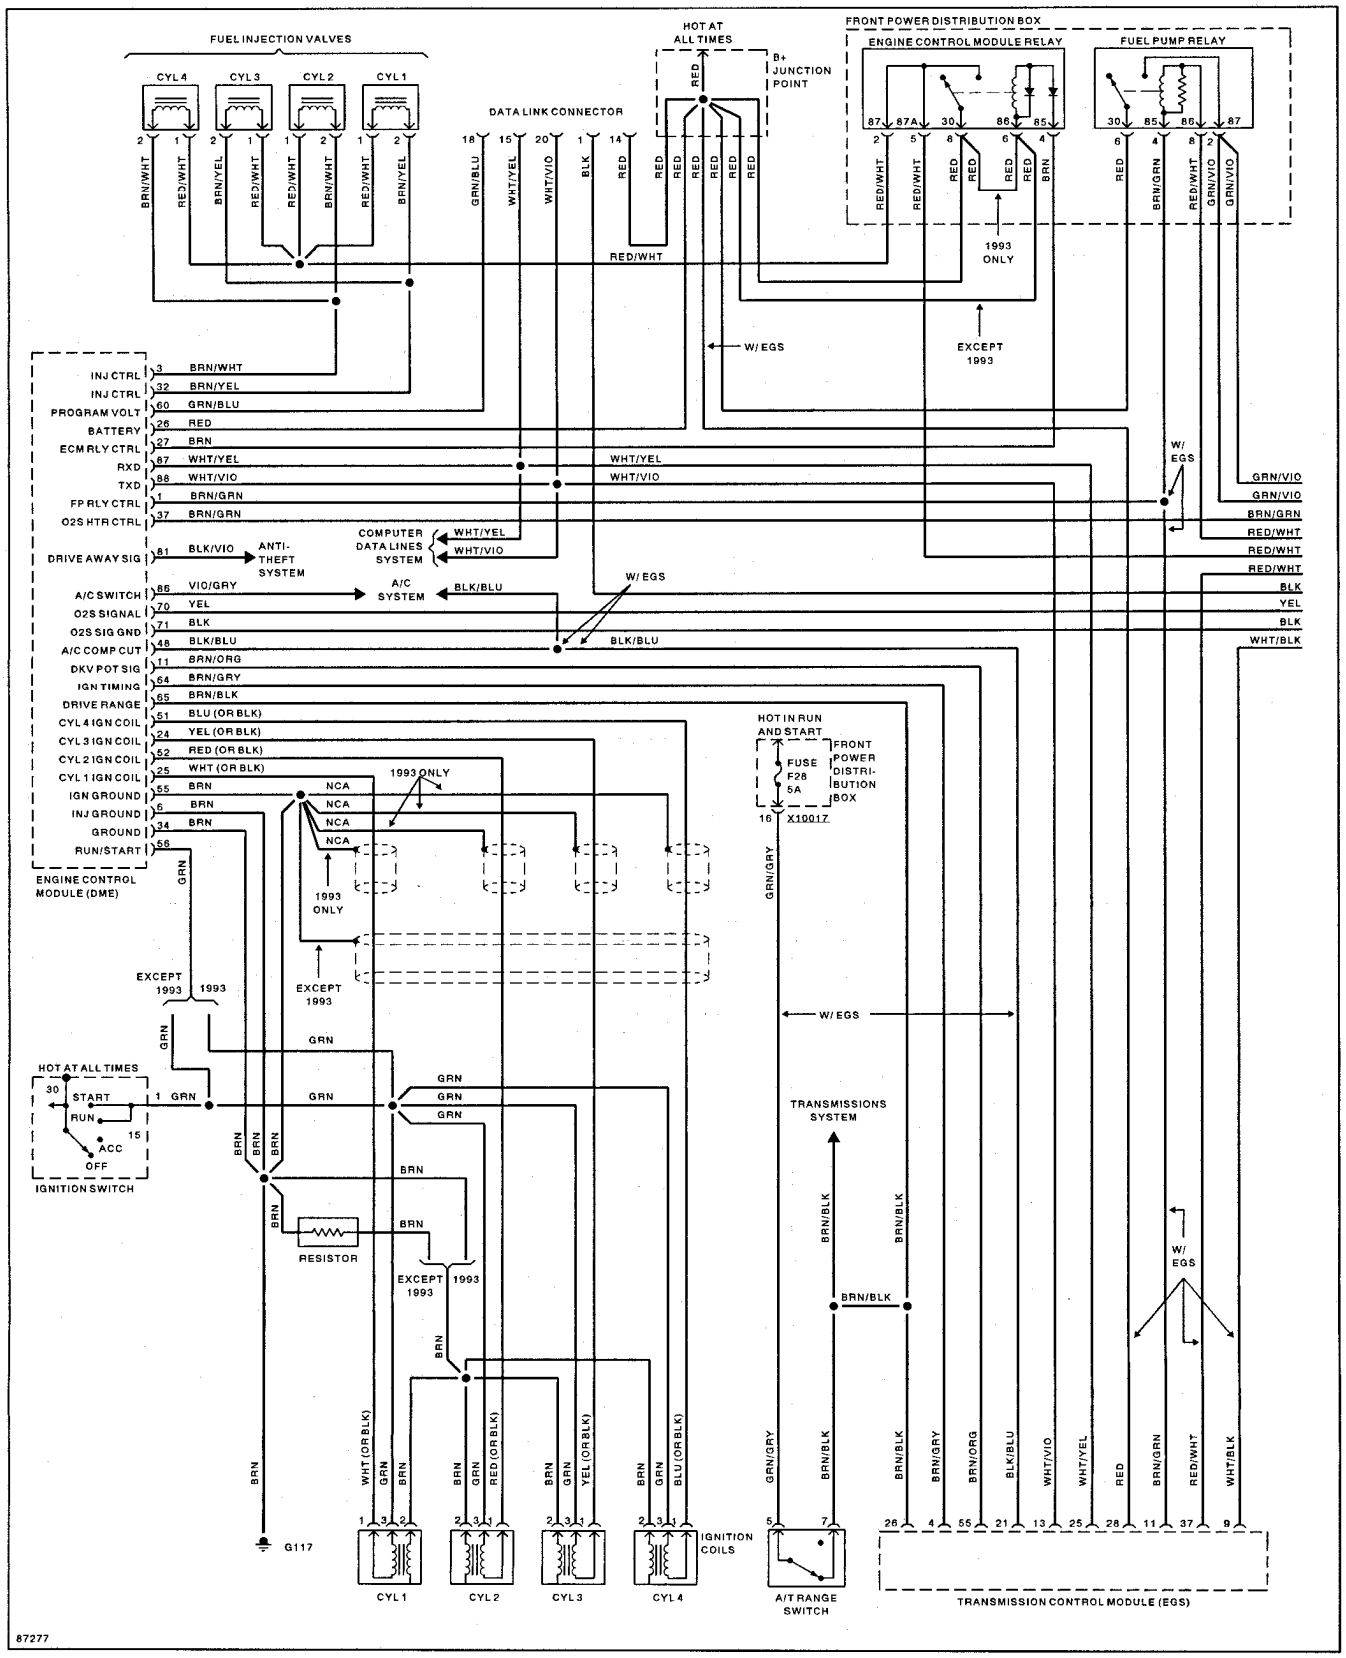


Engine Management

1992 2.5L (2 of 2)

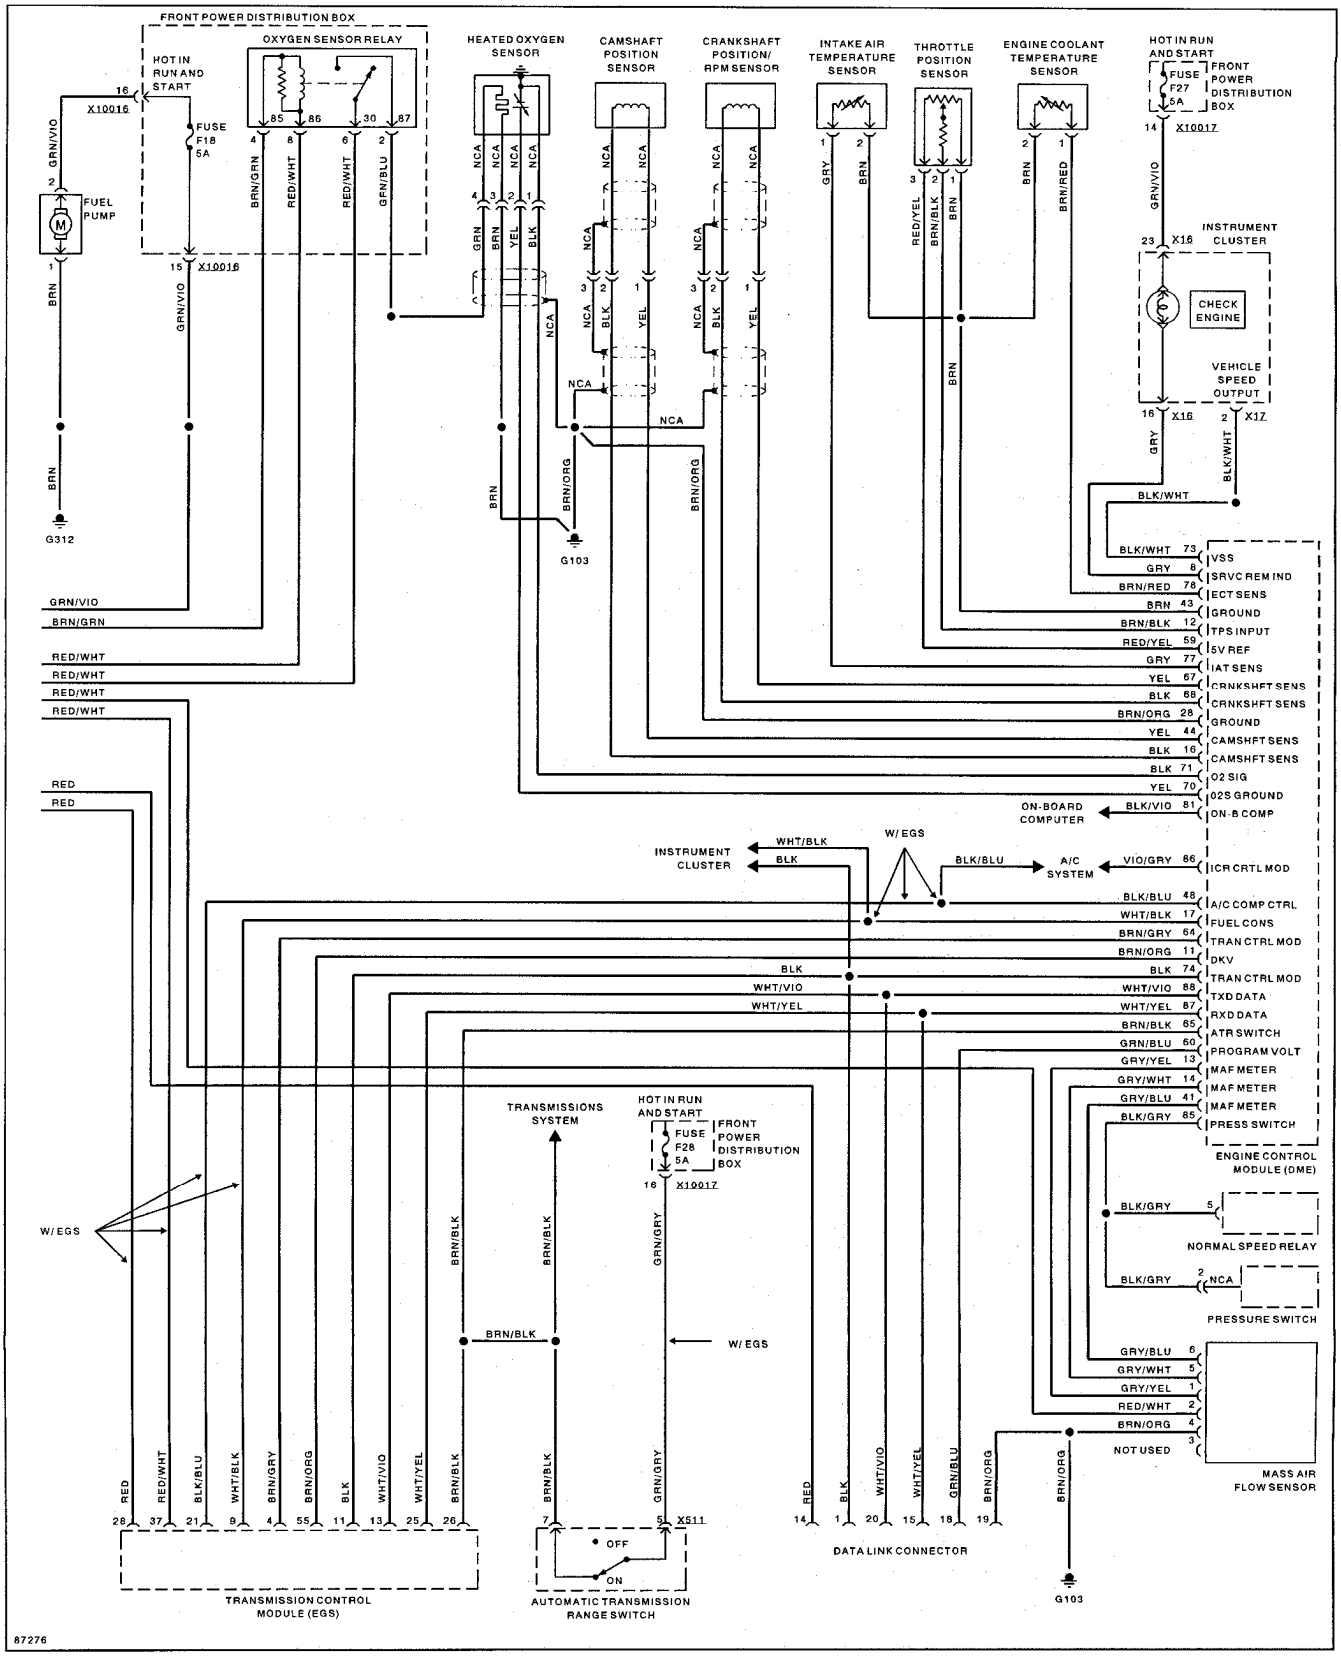


Engine Management

1992 2.5L (1 of 2)

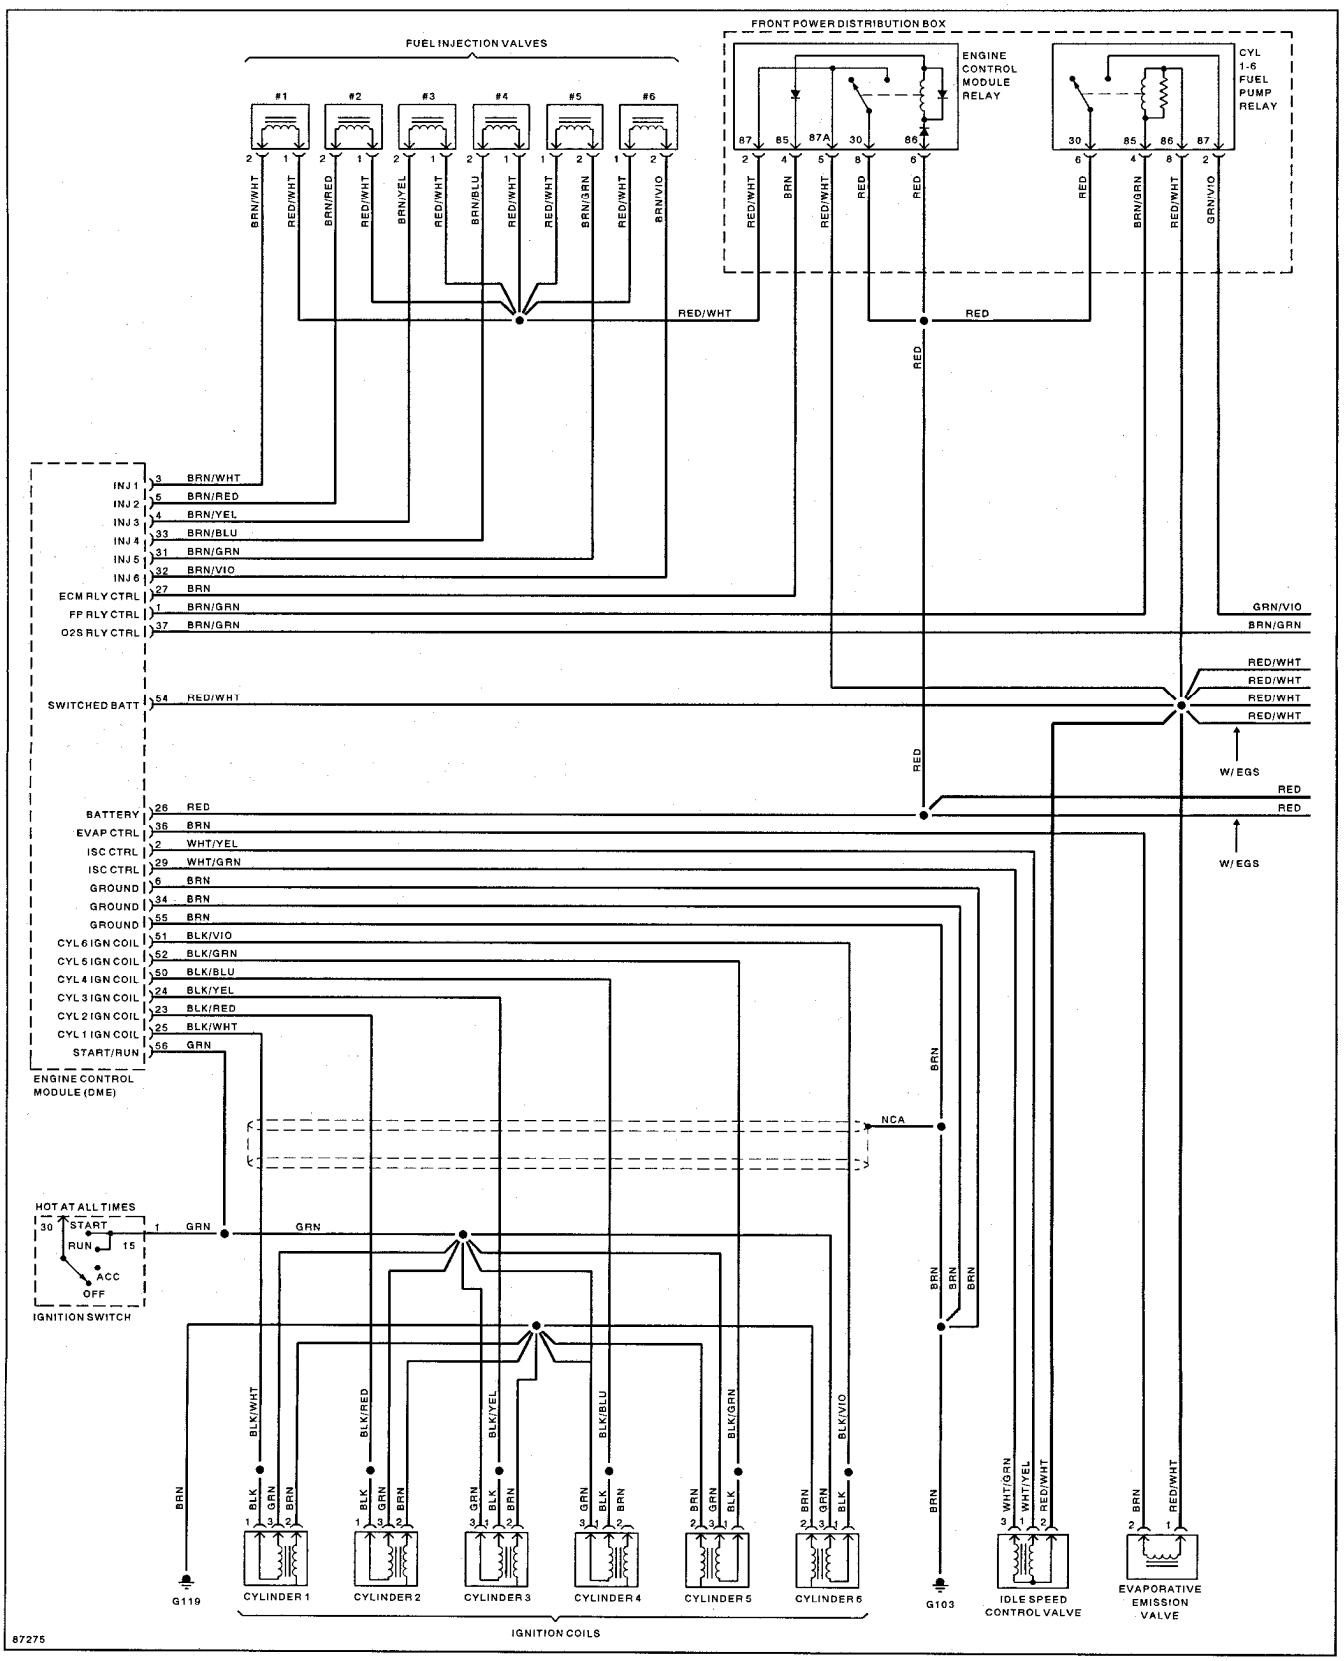


Engine Management

1992 1.8L (2 of 2)

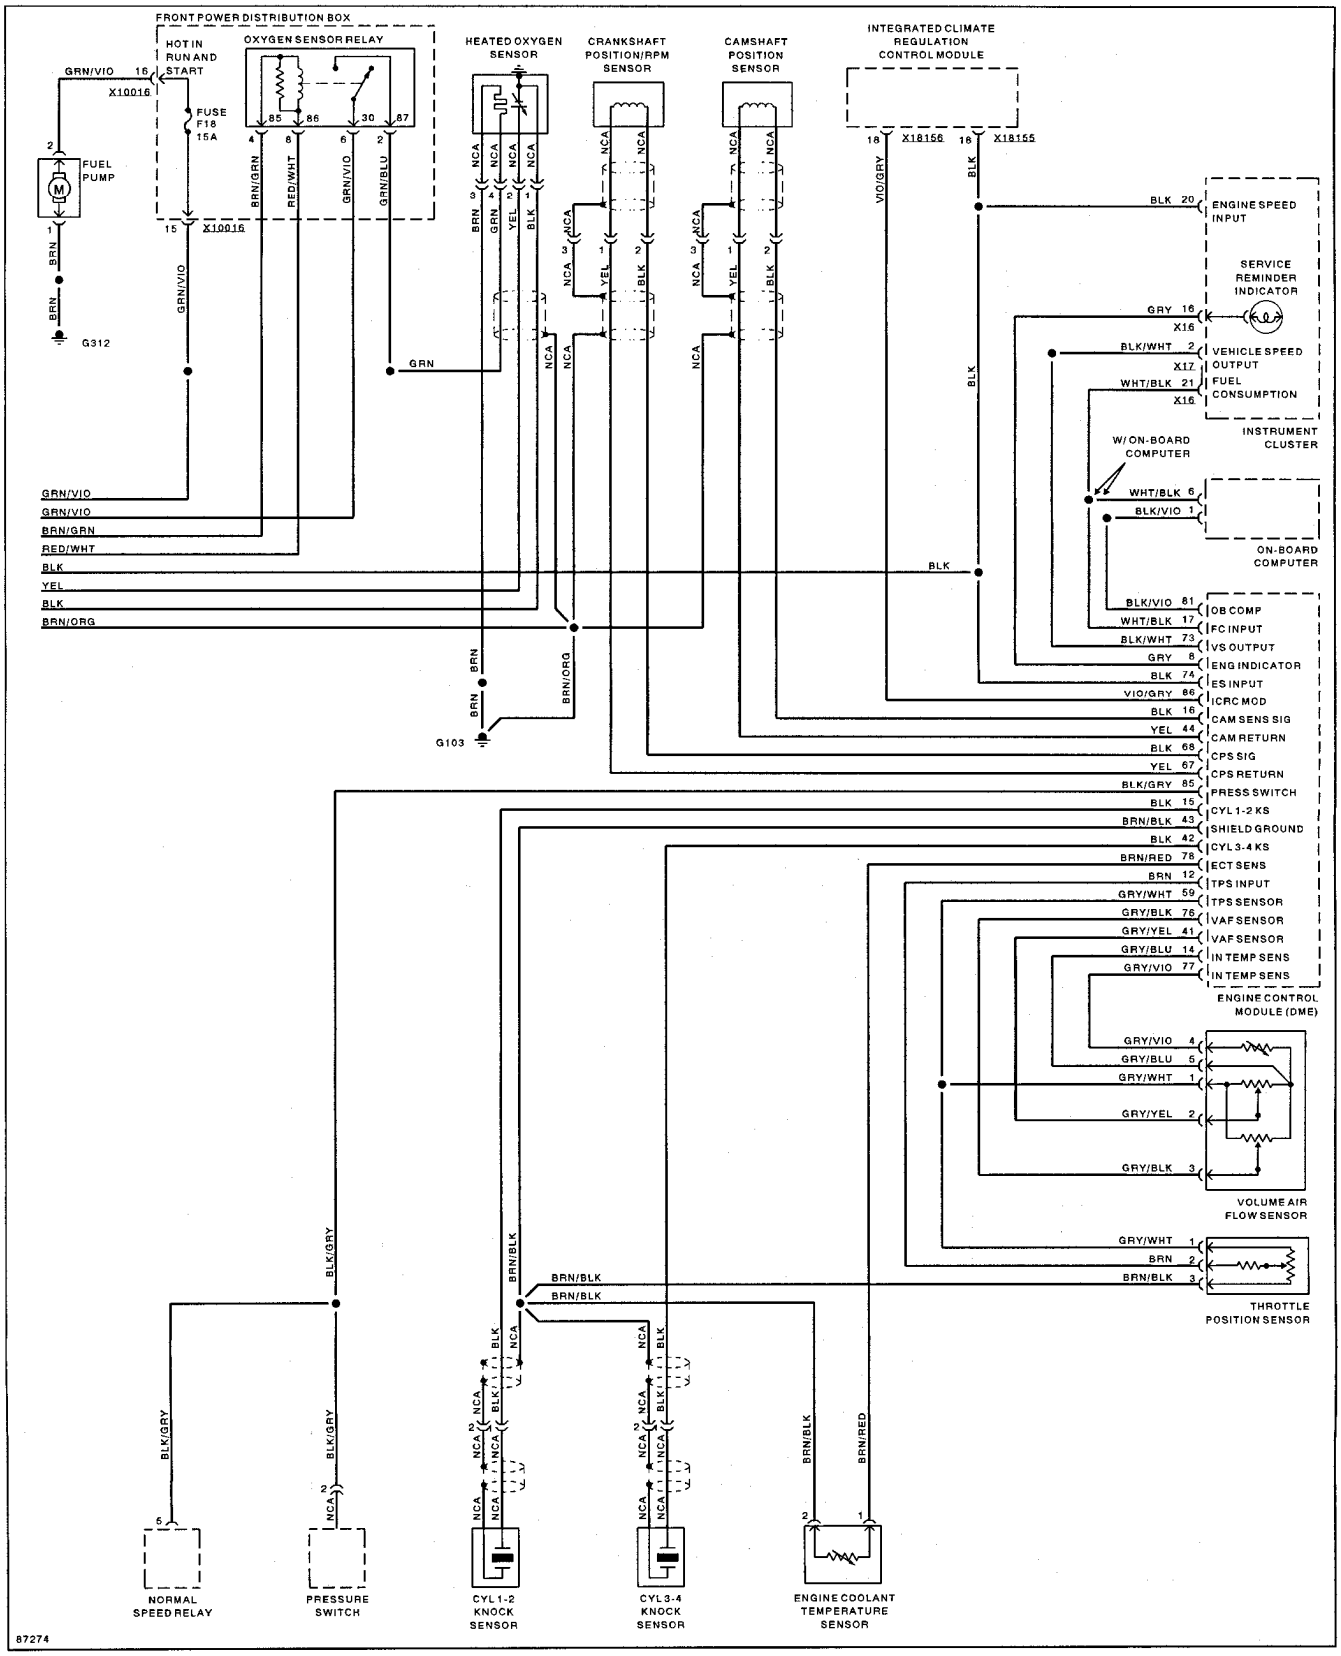


Engine Management
1992 1.8L (1 of 2)

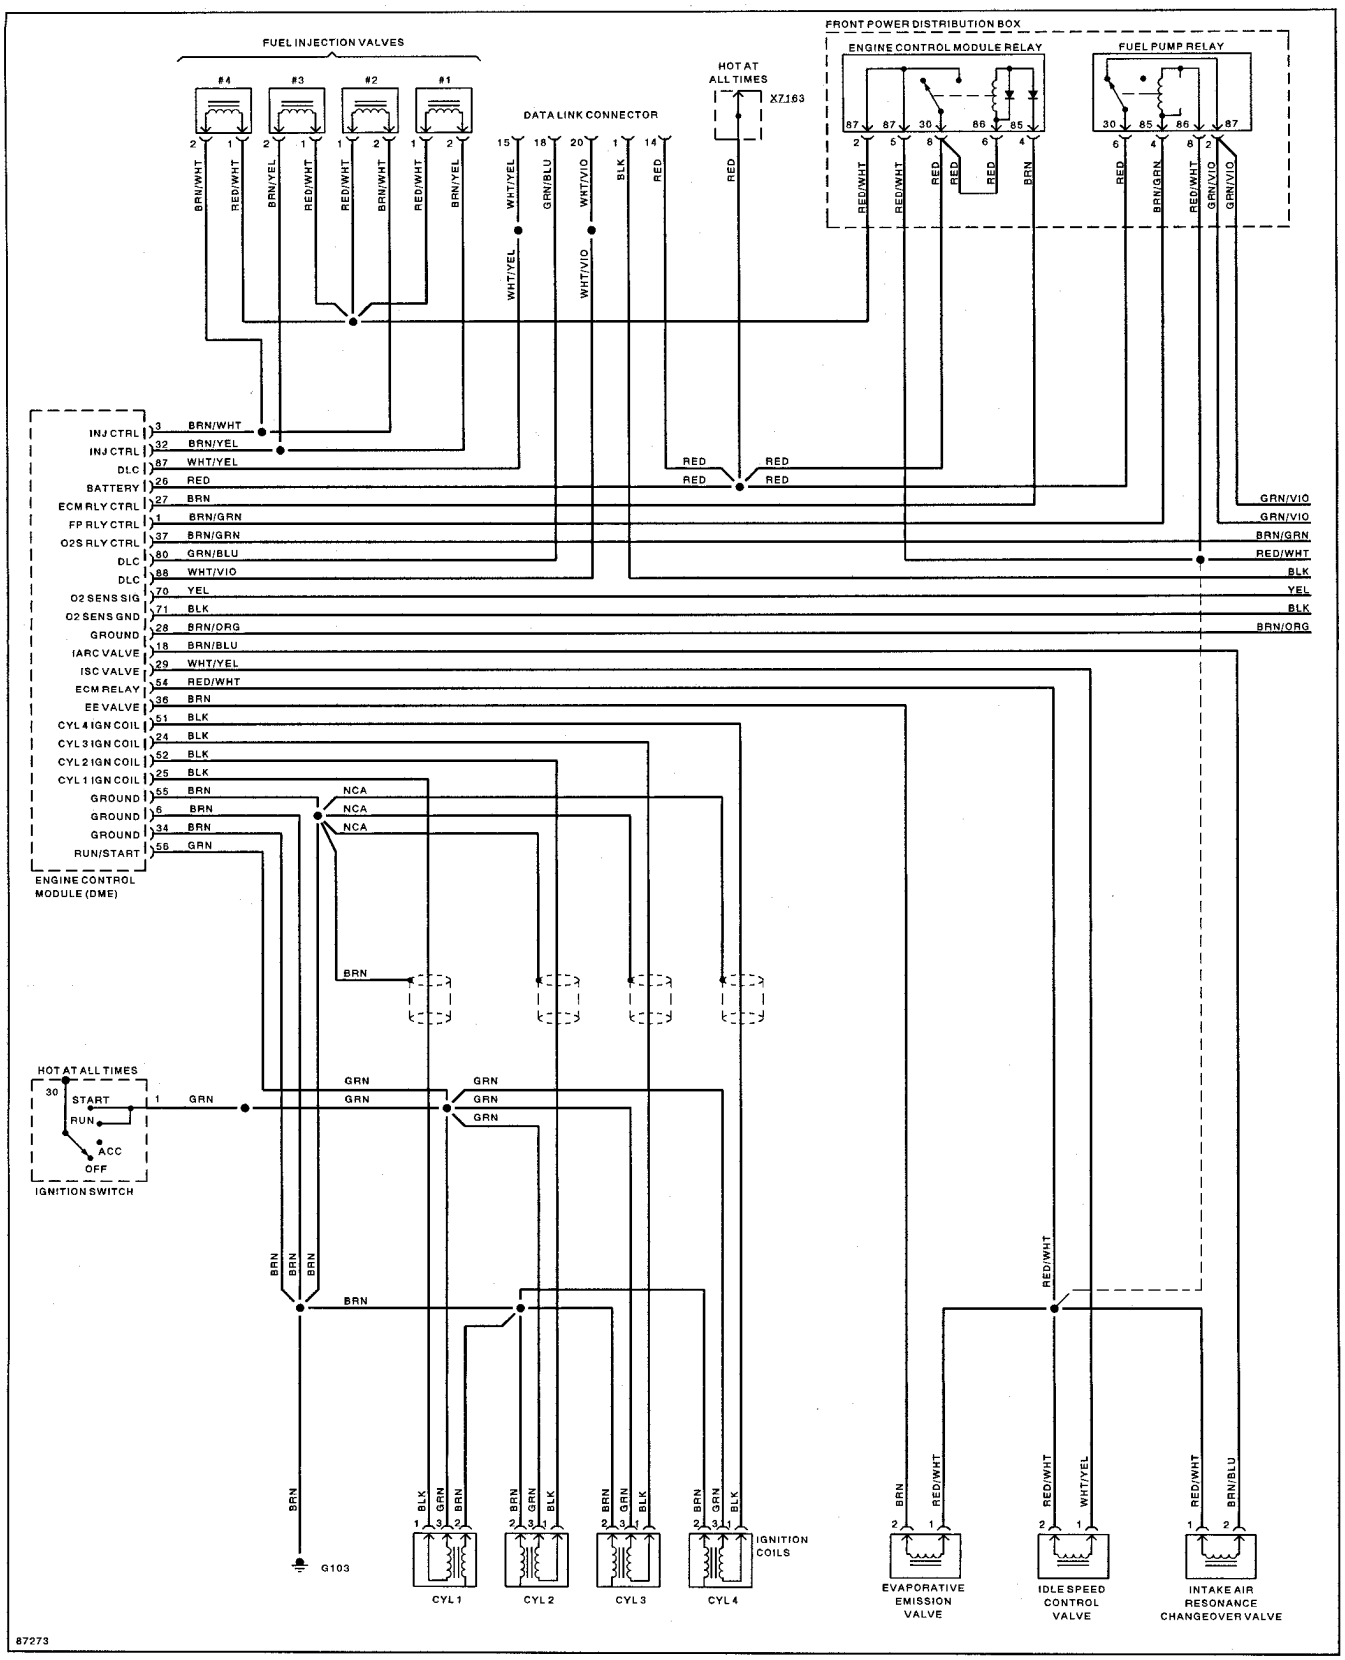


Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Charging System

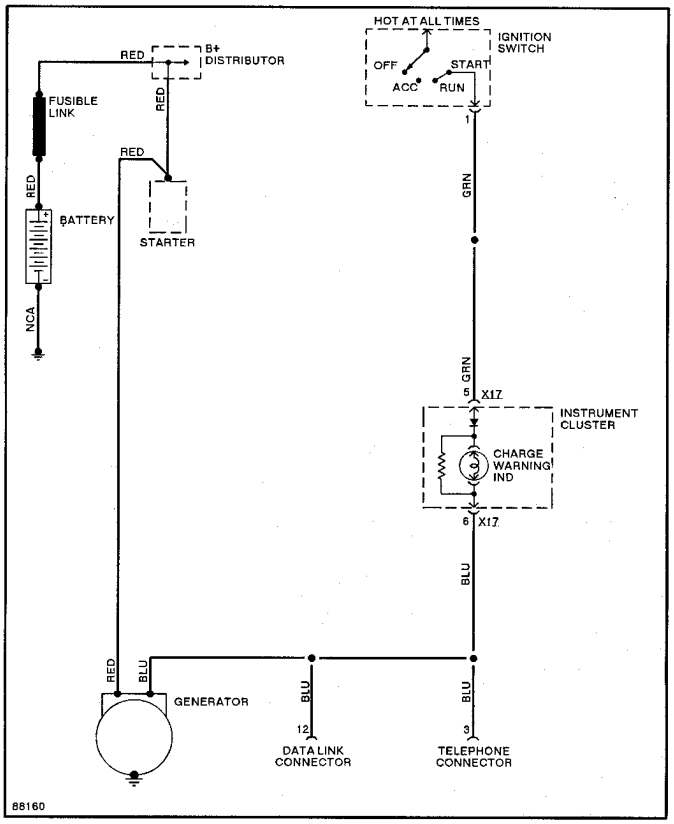


1997–98
318ti

Charging System

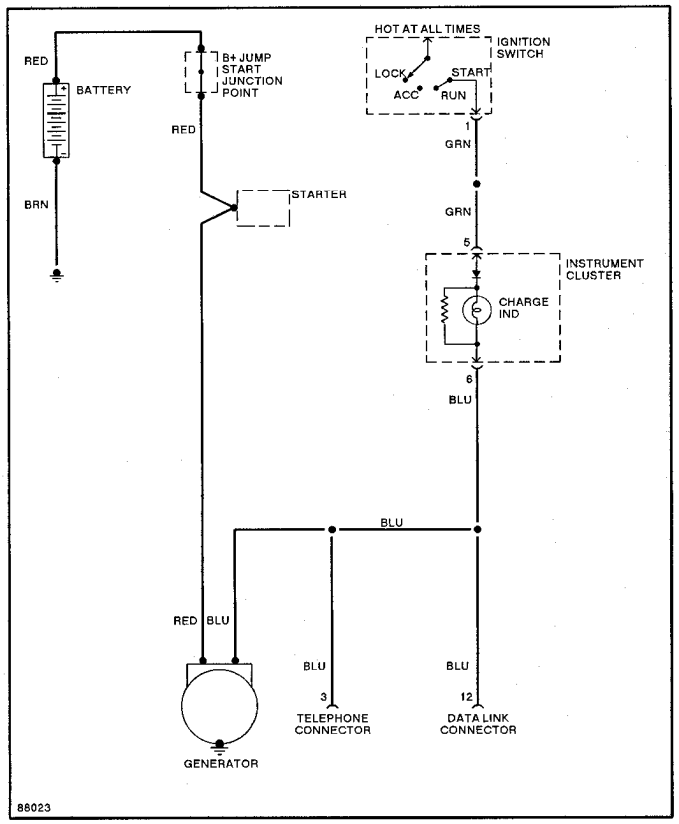


1997–98
318i, 318iC, 318is,
328i, 328iC, 328is
& M3

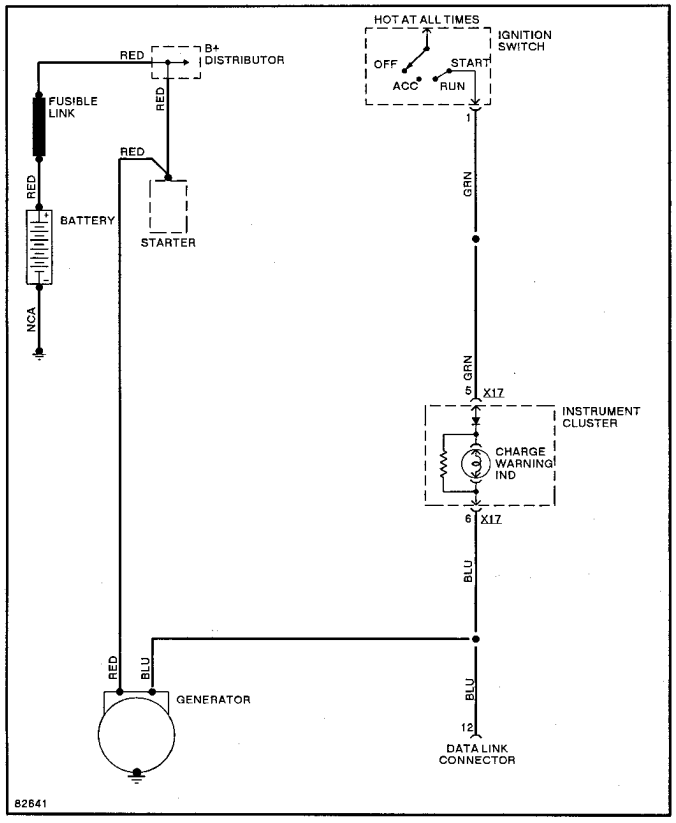


1995-96
318ti

Charging System

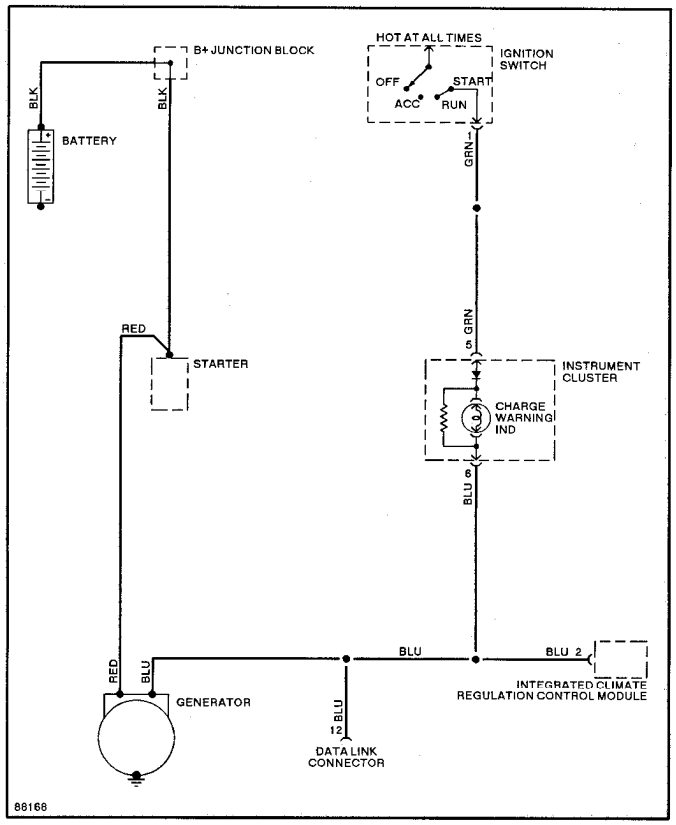


1992-93
318i, 318is, 325i
& 325is

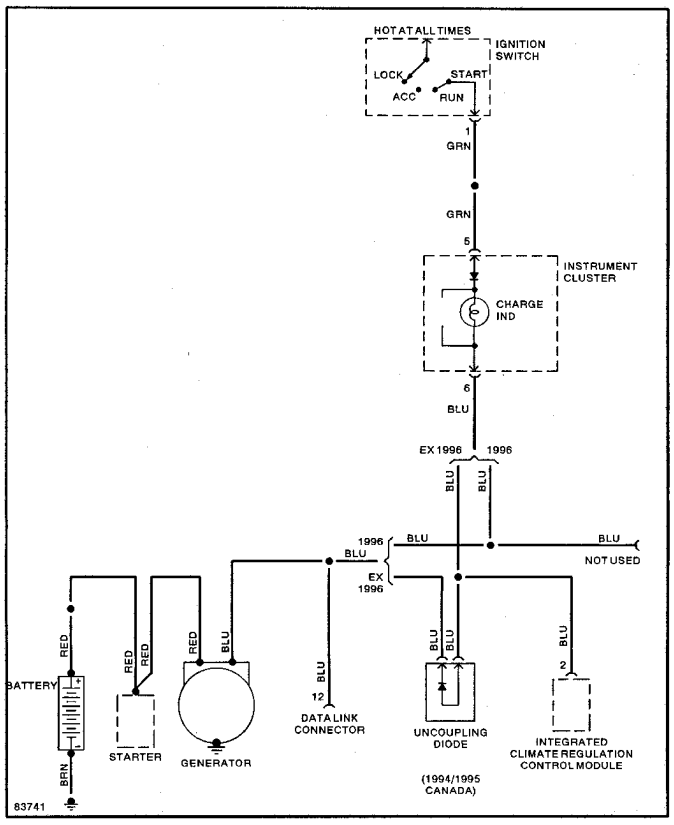


1994-96
318i, 318iC, 318is,
325i, 325iC, 325is,
328i, 328iC, 328is
& M3

Starting

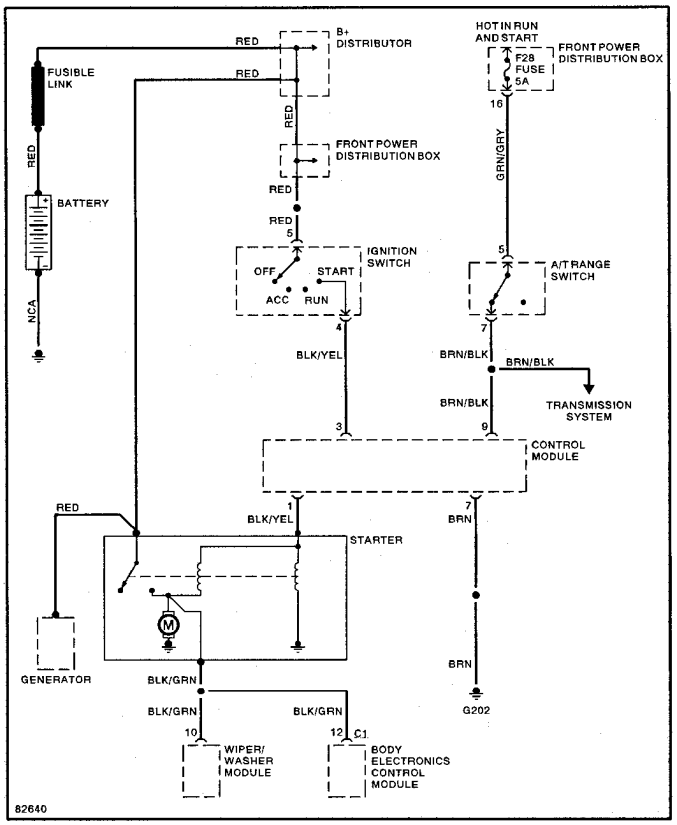


1995-96 318ti

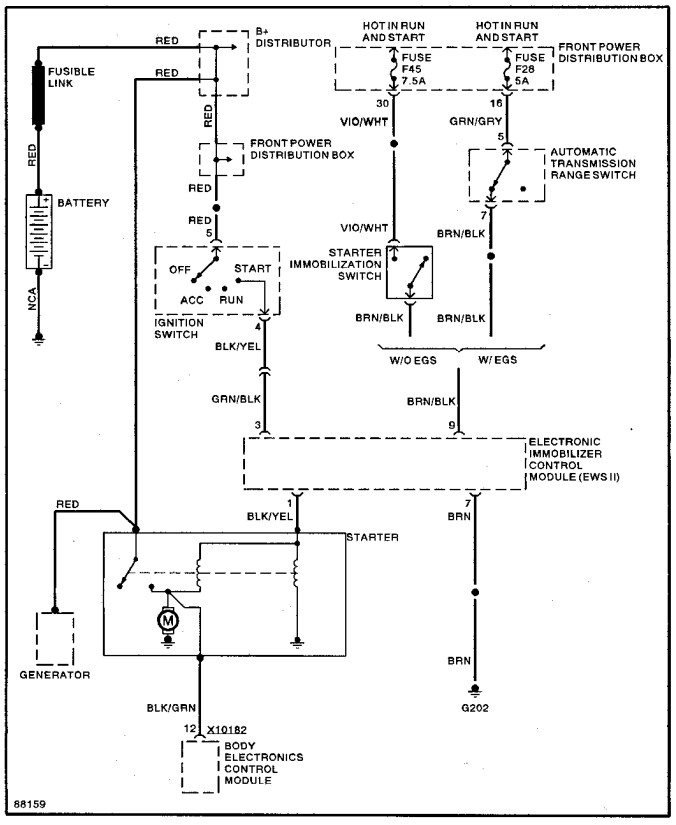


1997–98 318ti

Starting

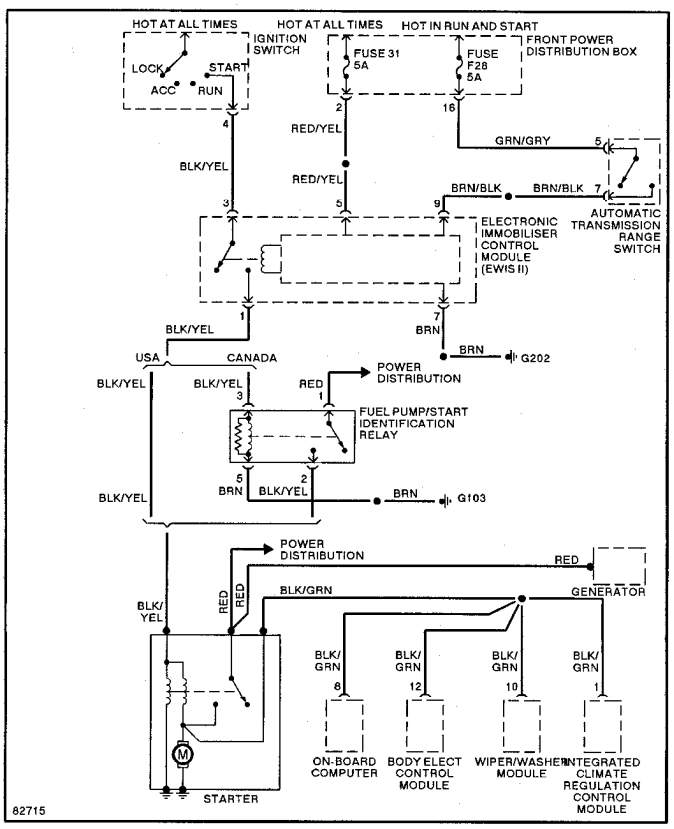


1995-96
318i, 318iC, 318is, 325i, 325iC, 325is, 328i, 328iC, 328is & M3

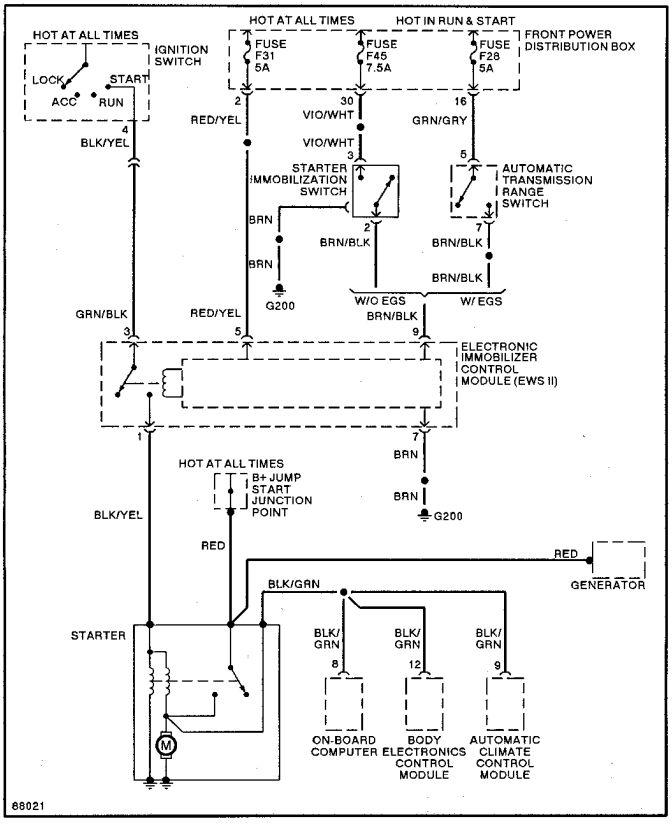


1997–98
318i, 318iC, 318is, 325i, 325iC, 325is, 328i, 328iC, 328is & M3

Starting

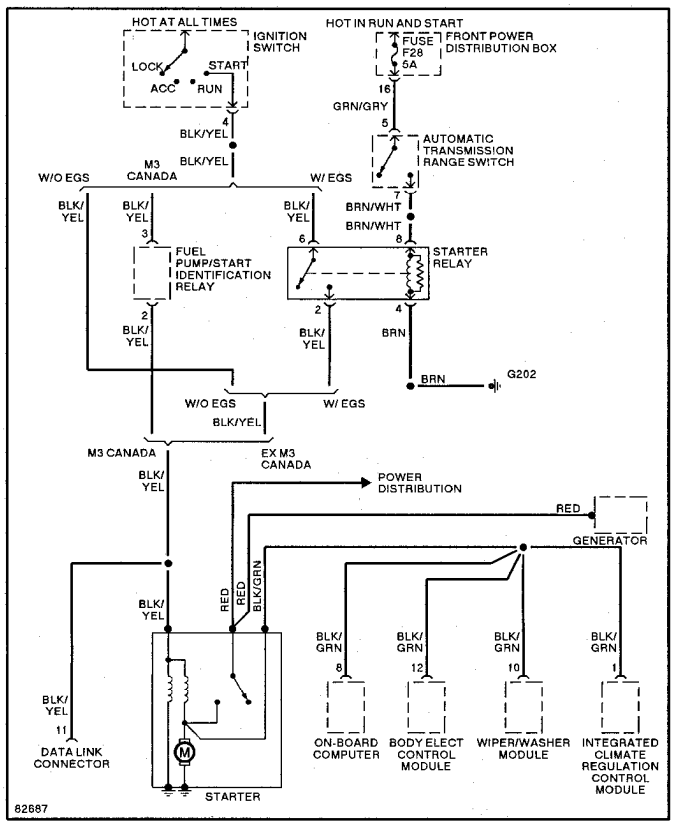


1994 Early Production 318i, 318iC, 318is, 325i, 325iC, 325is & M3

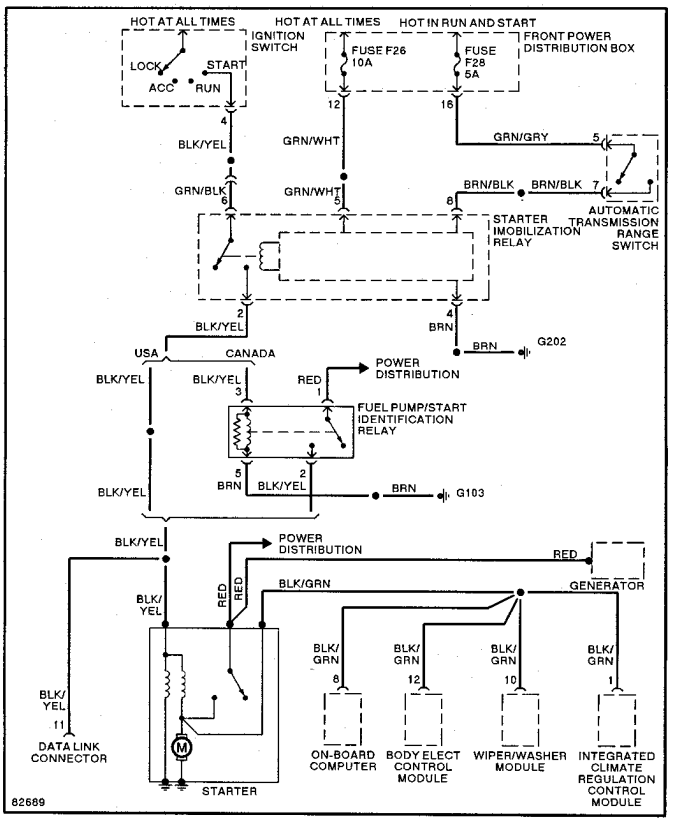


1994 Late Production 318i, 318iC, 318is, 325i, 325iC, 325is & M3

Starting

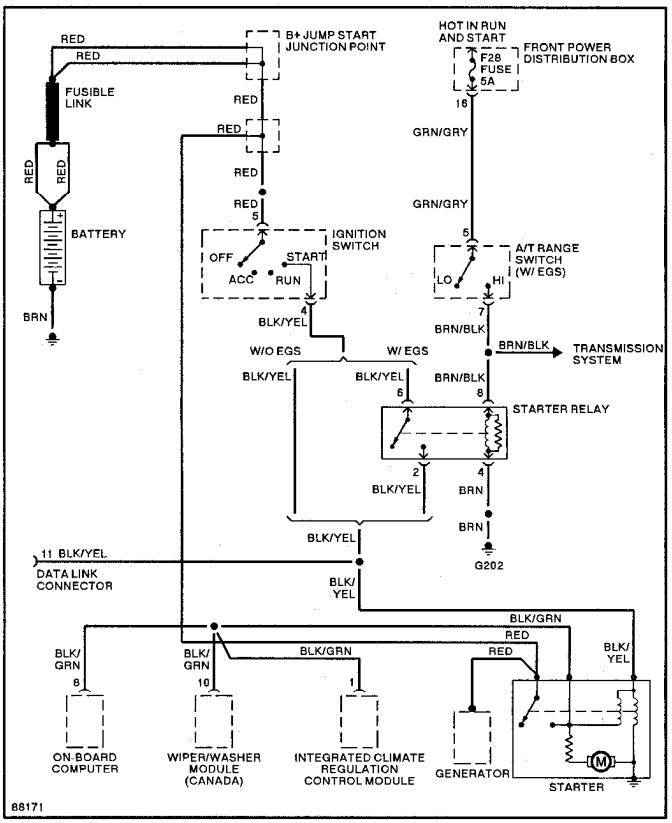


1992
318i & 318is,
1992-93
325i & 325is

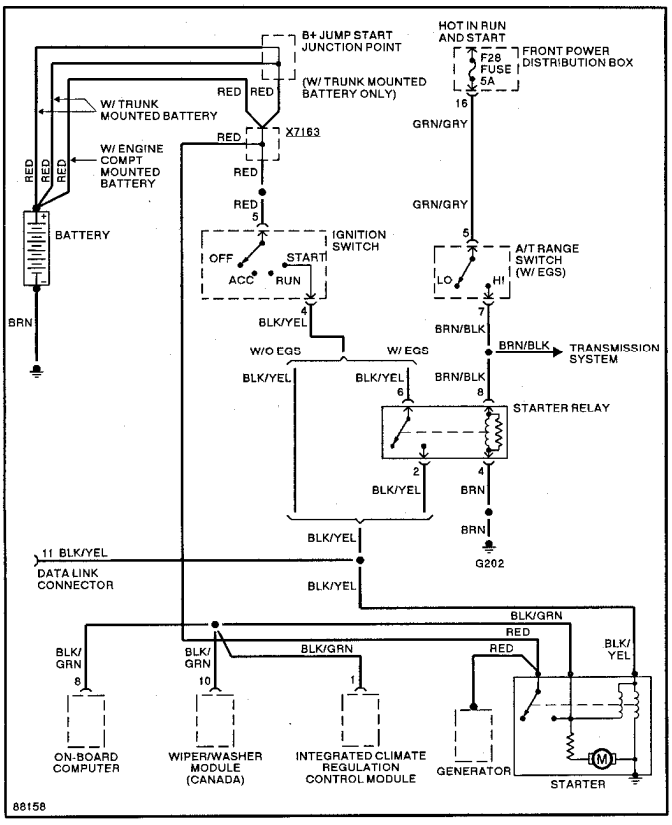

1993
318i & 318is

Ground Distribution


1998 318ti (3 of 3)

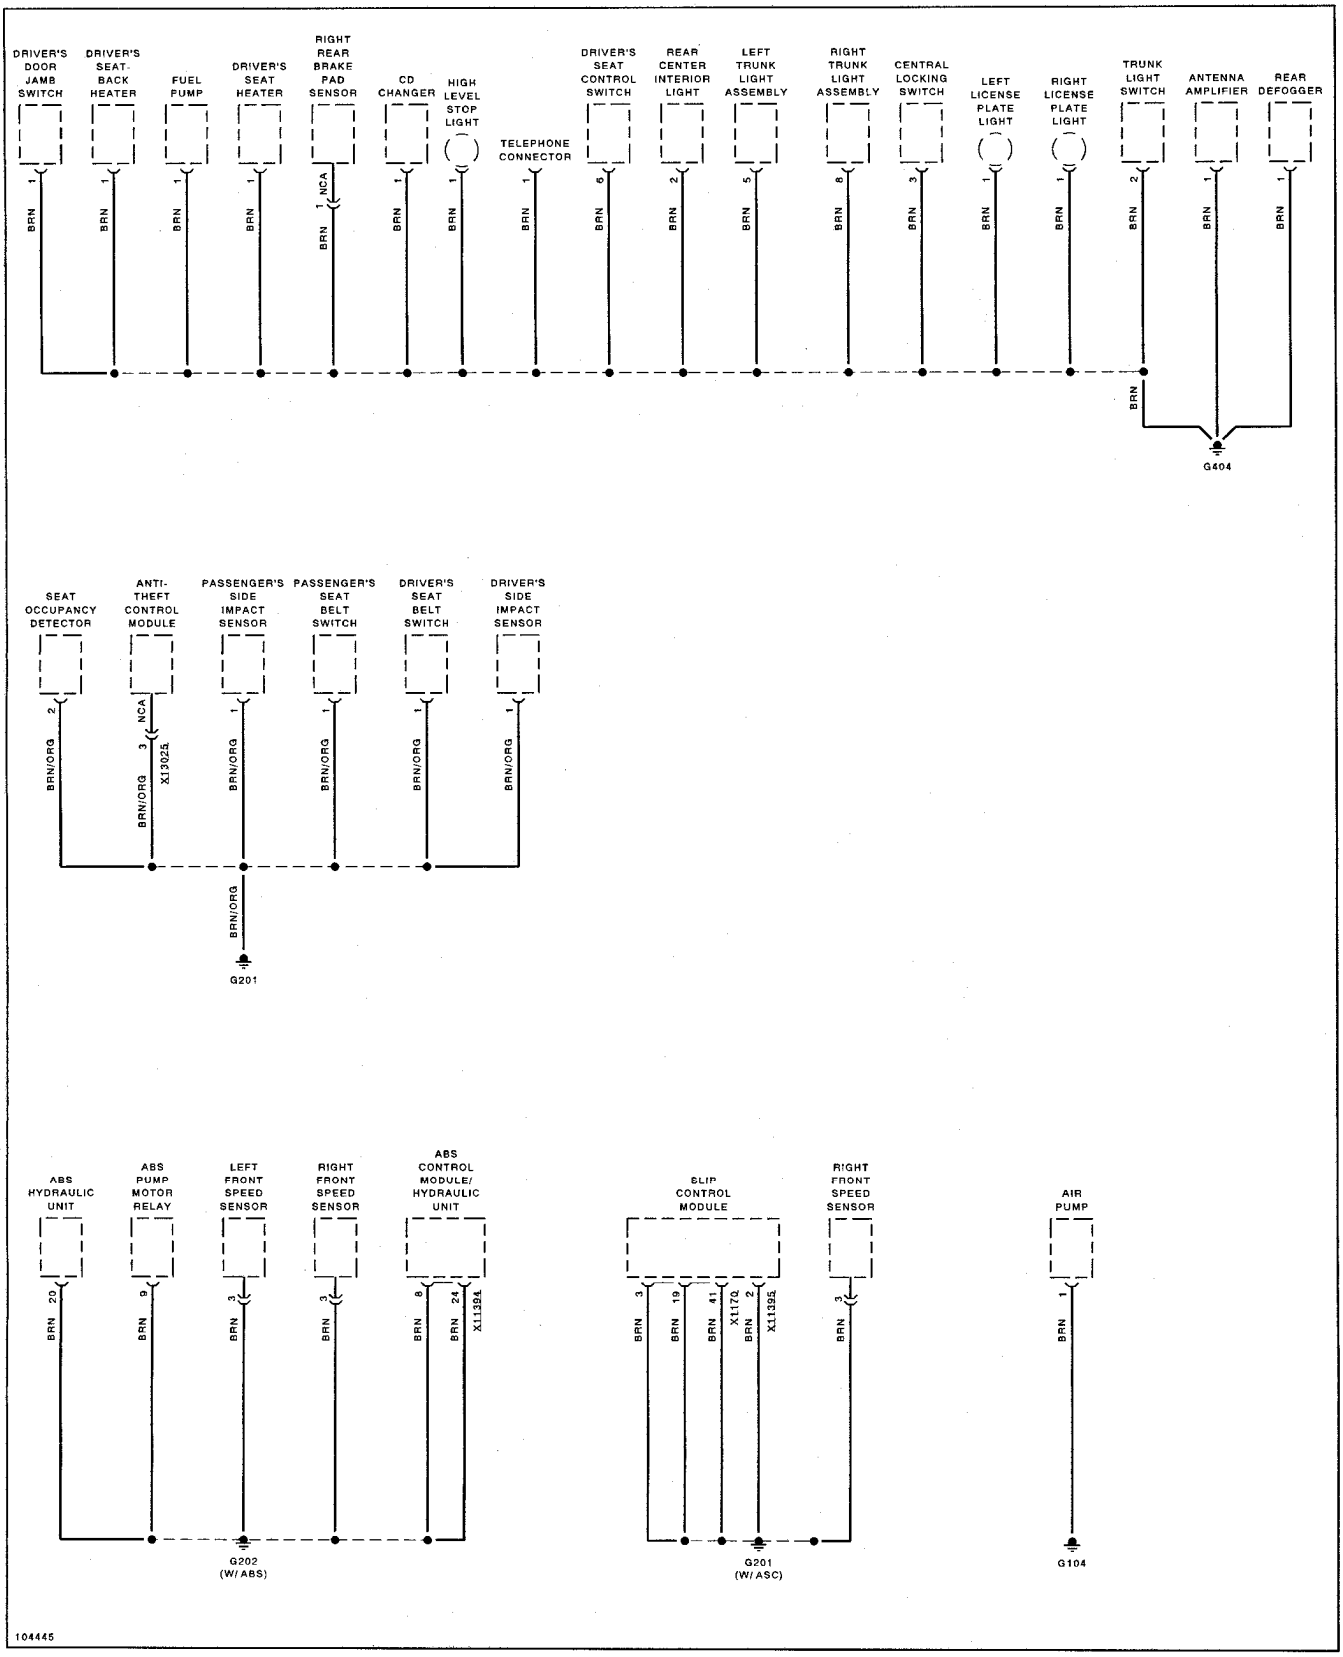

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Ground Distribution

1998 318ti (2 of 3)

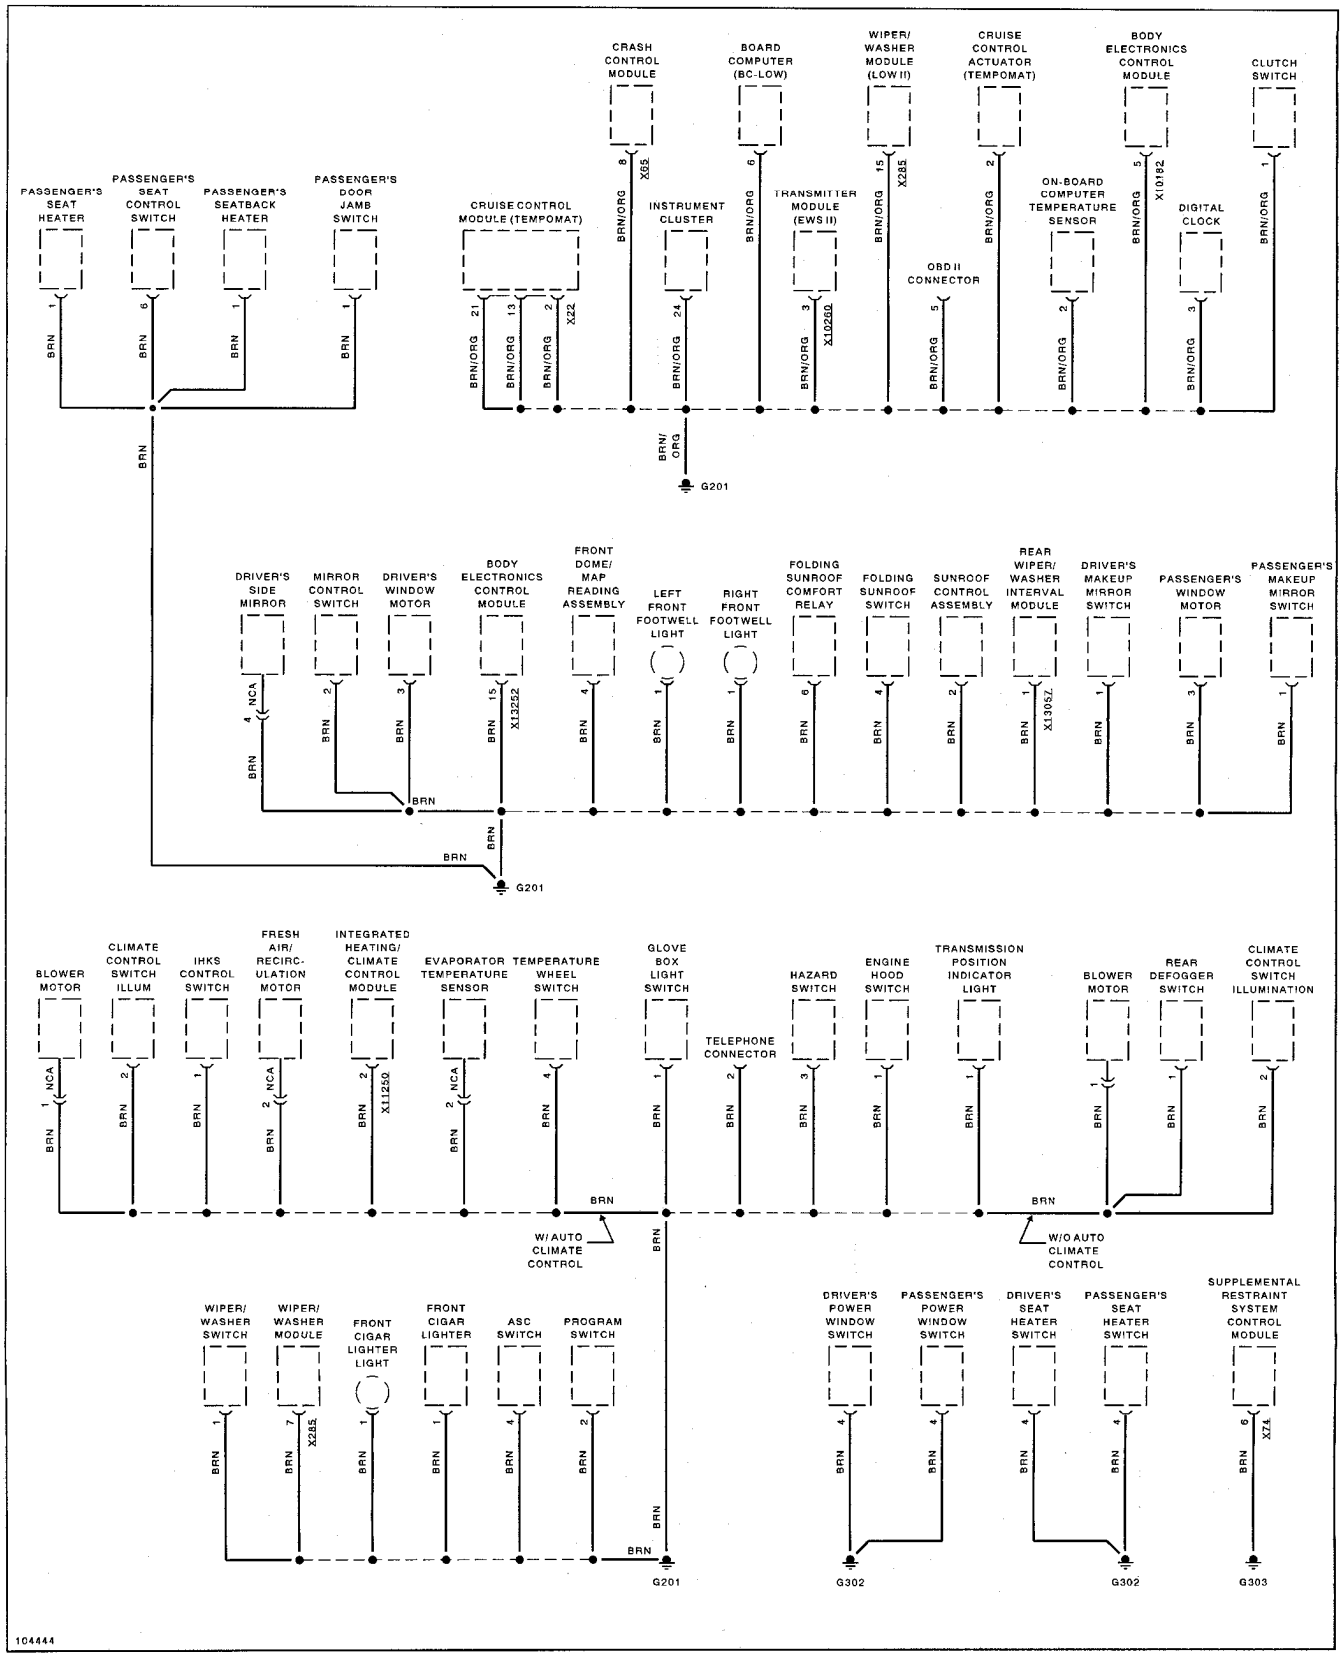


Ground Distribution

1998 318ti (1 of 3)

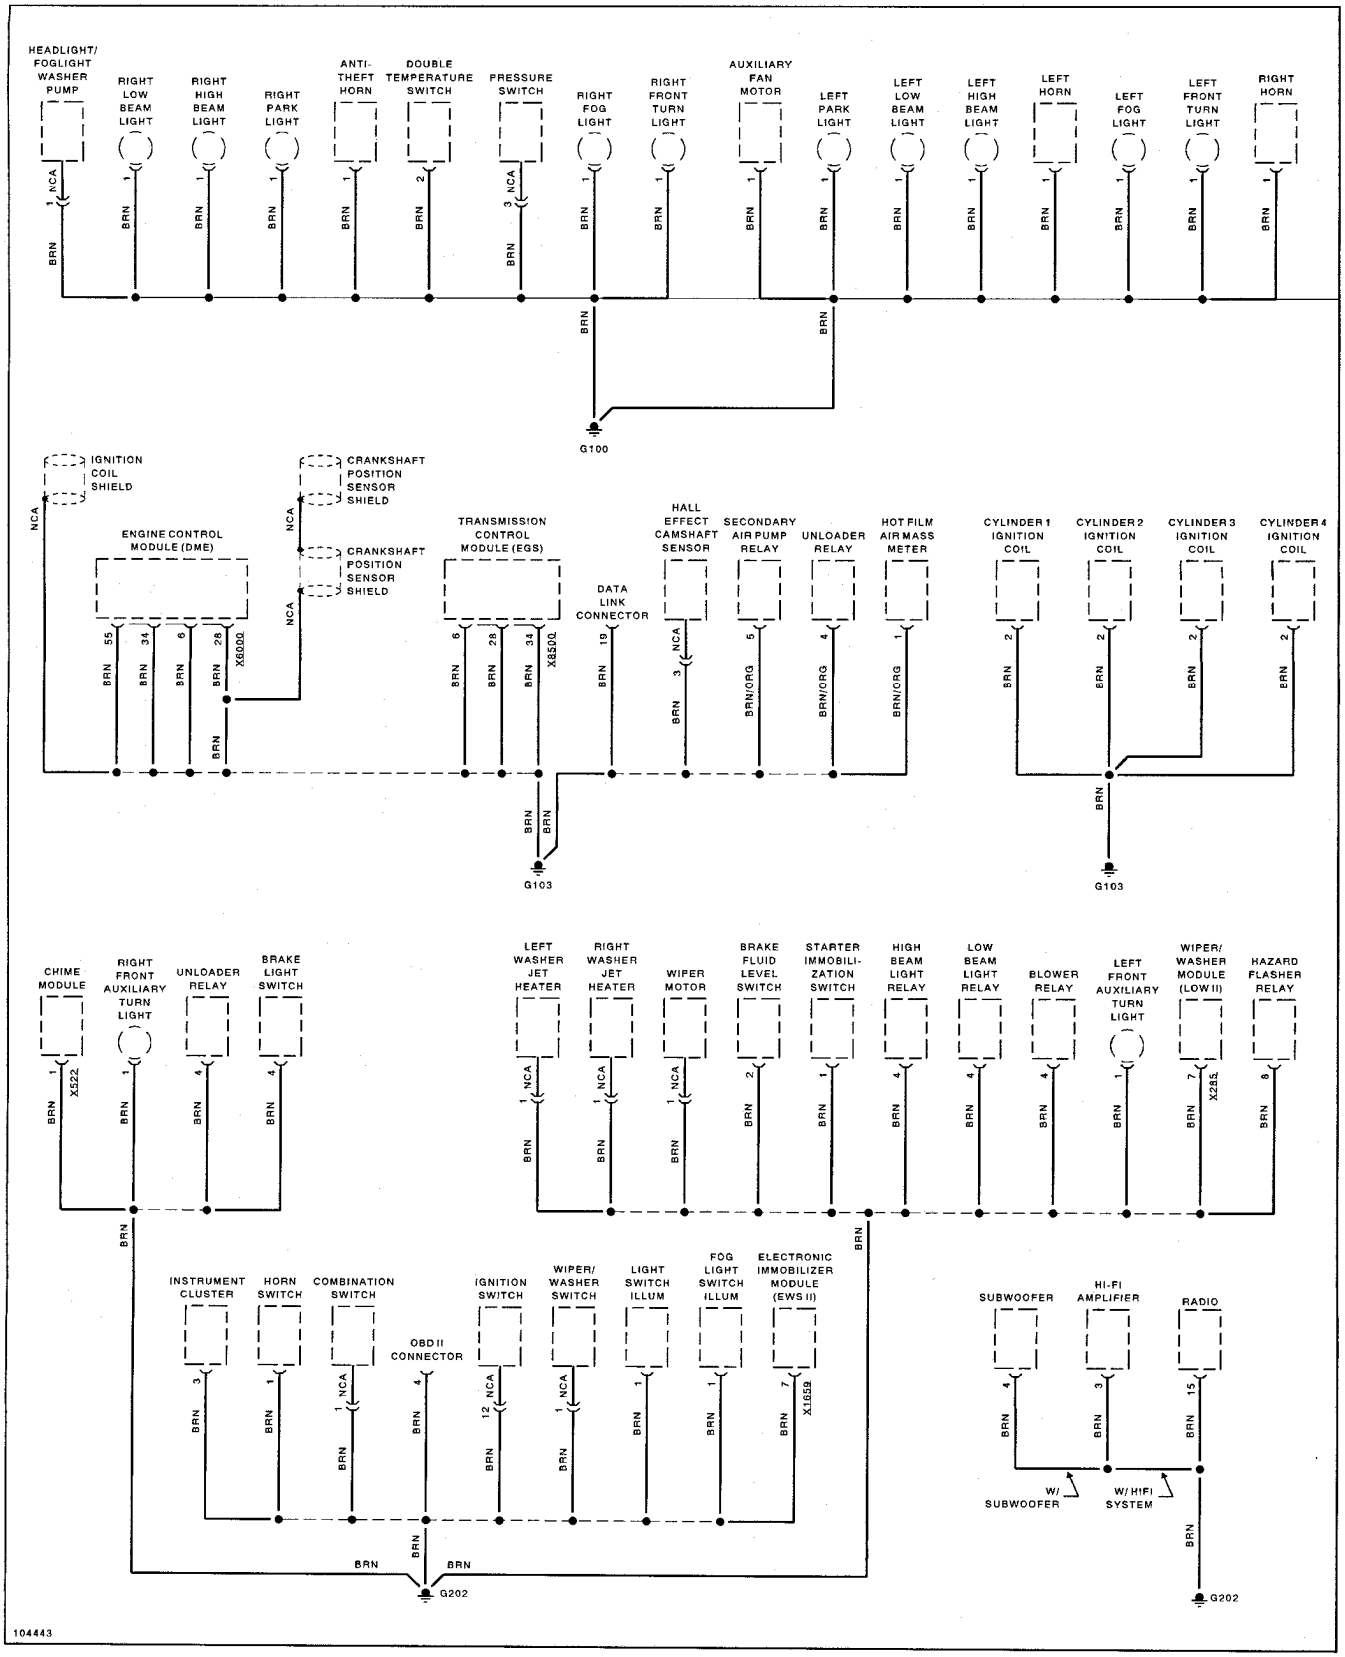

Ground Distribution


1997 318ti (3 of 3)

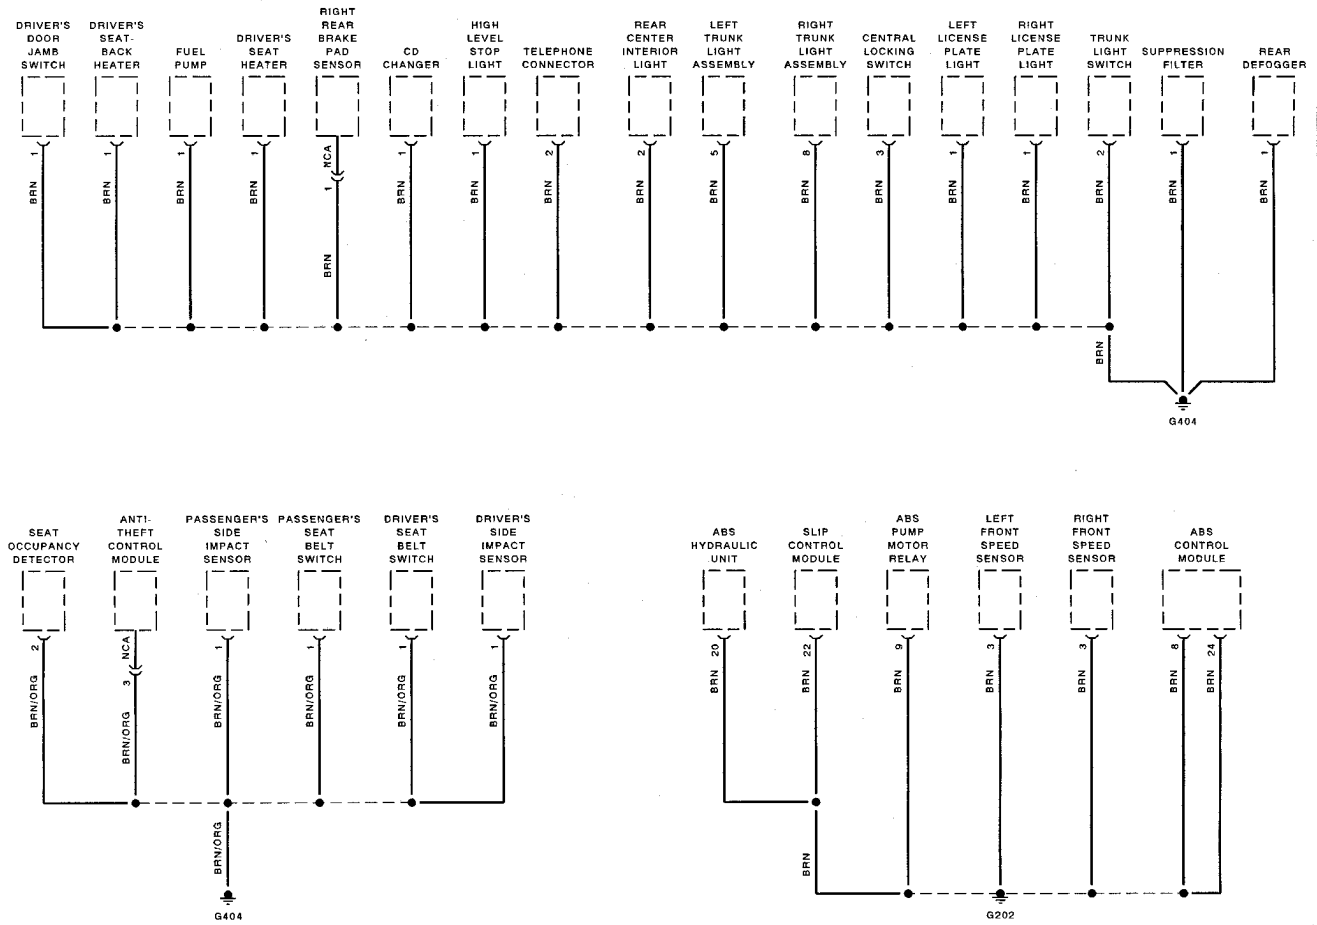

89161


Ground Distribution

1997 318ti (2 of 3)

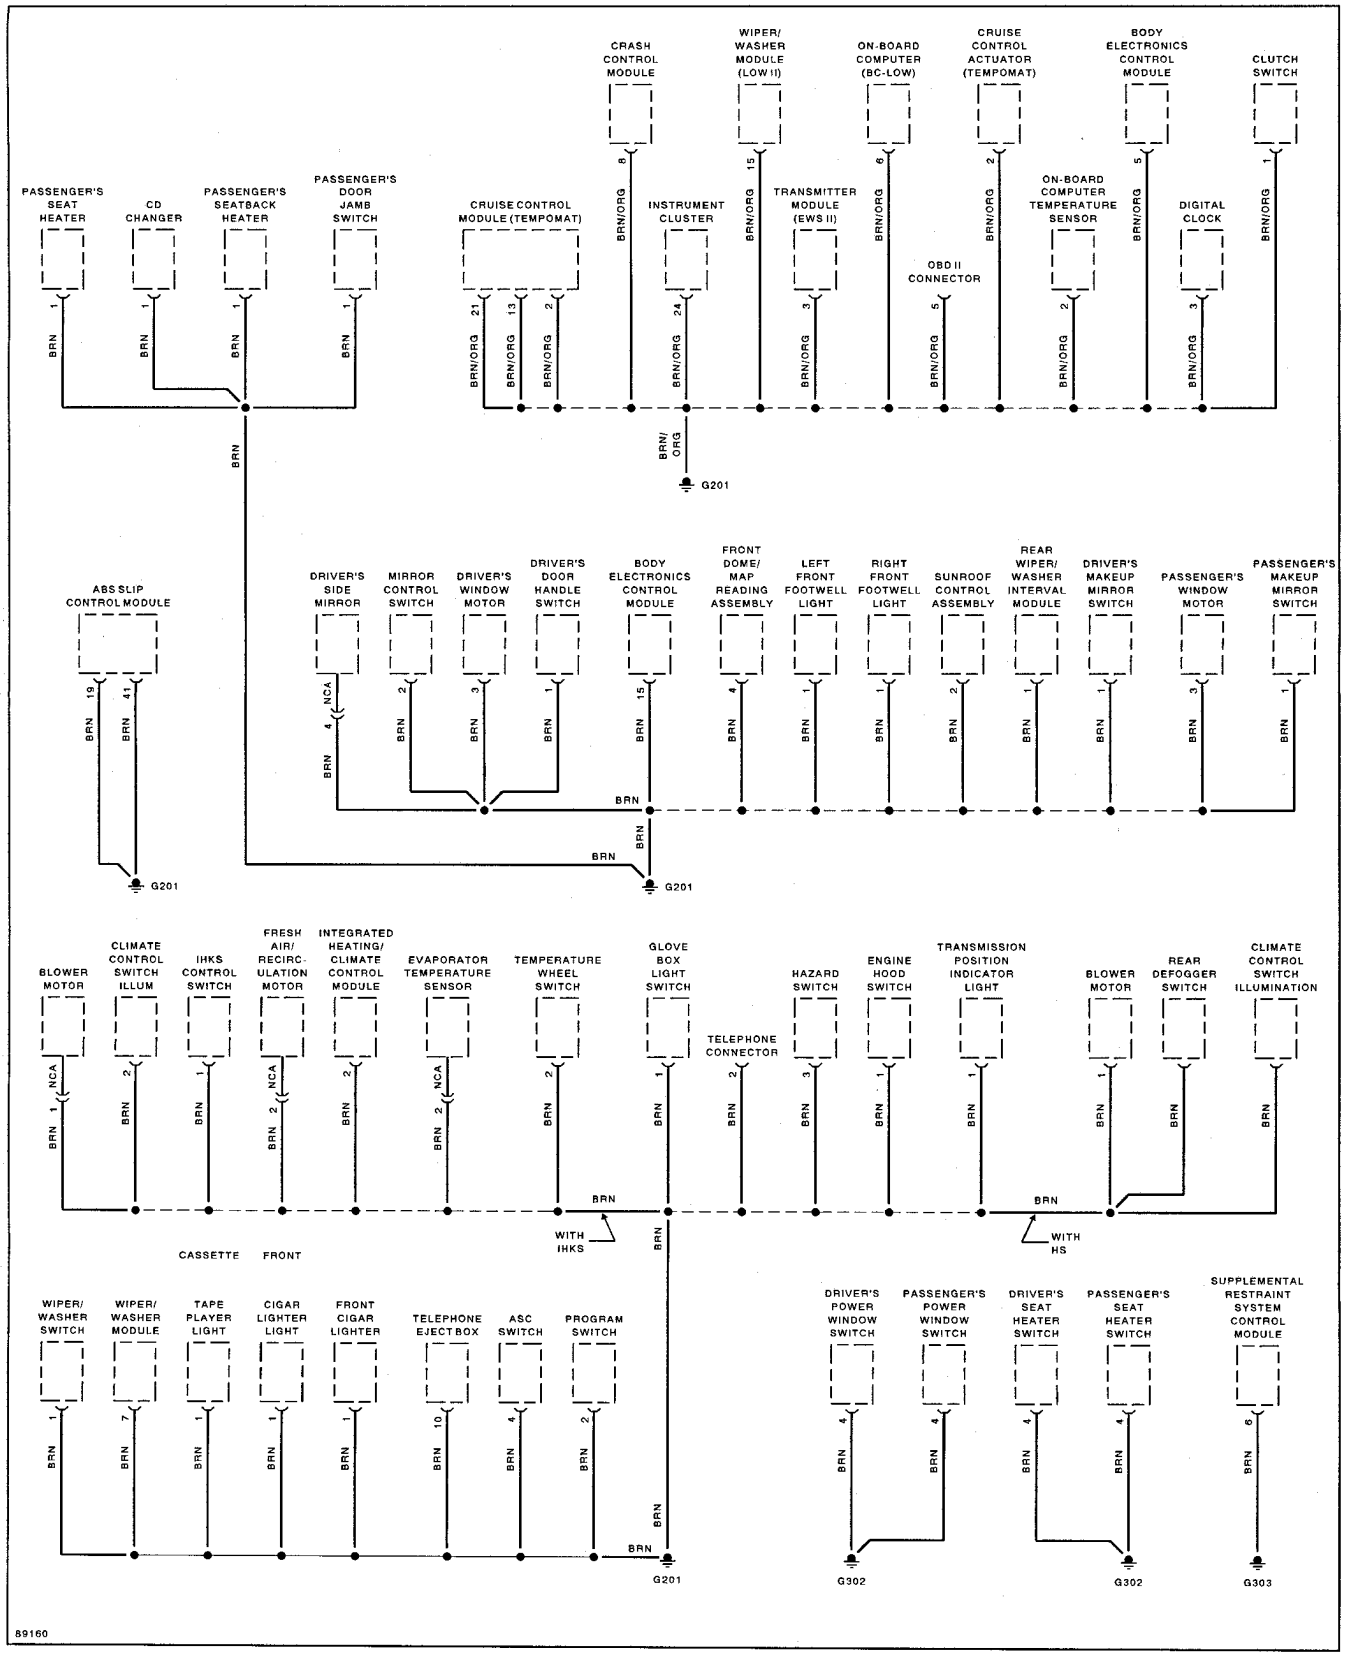


Ground Distribution

1997 318ti (1 of 3)

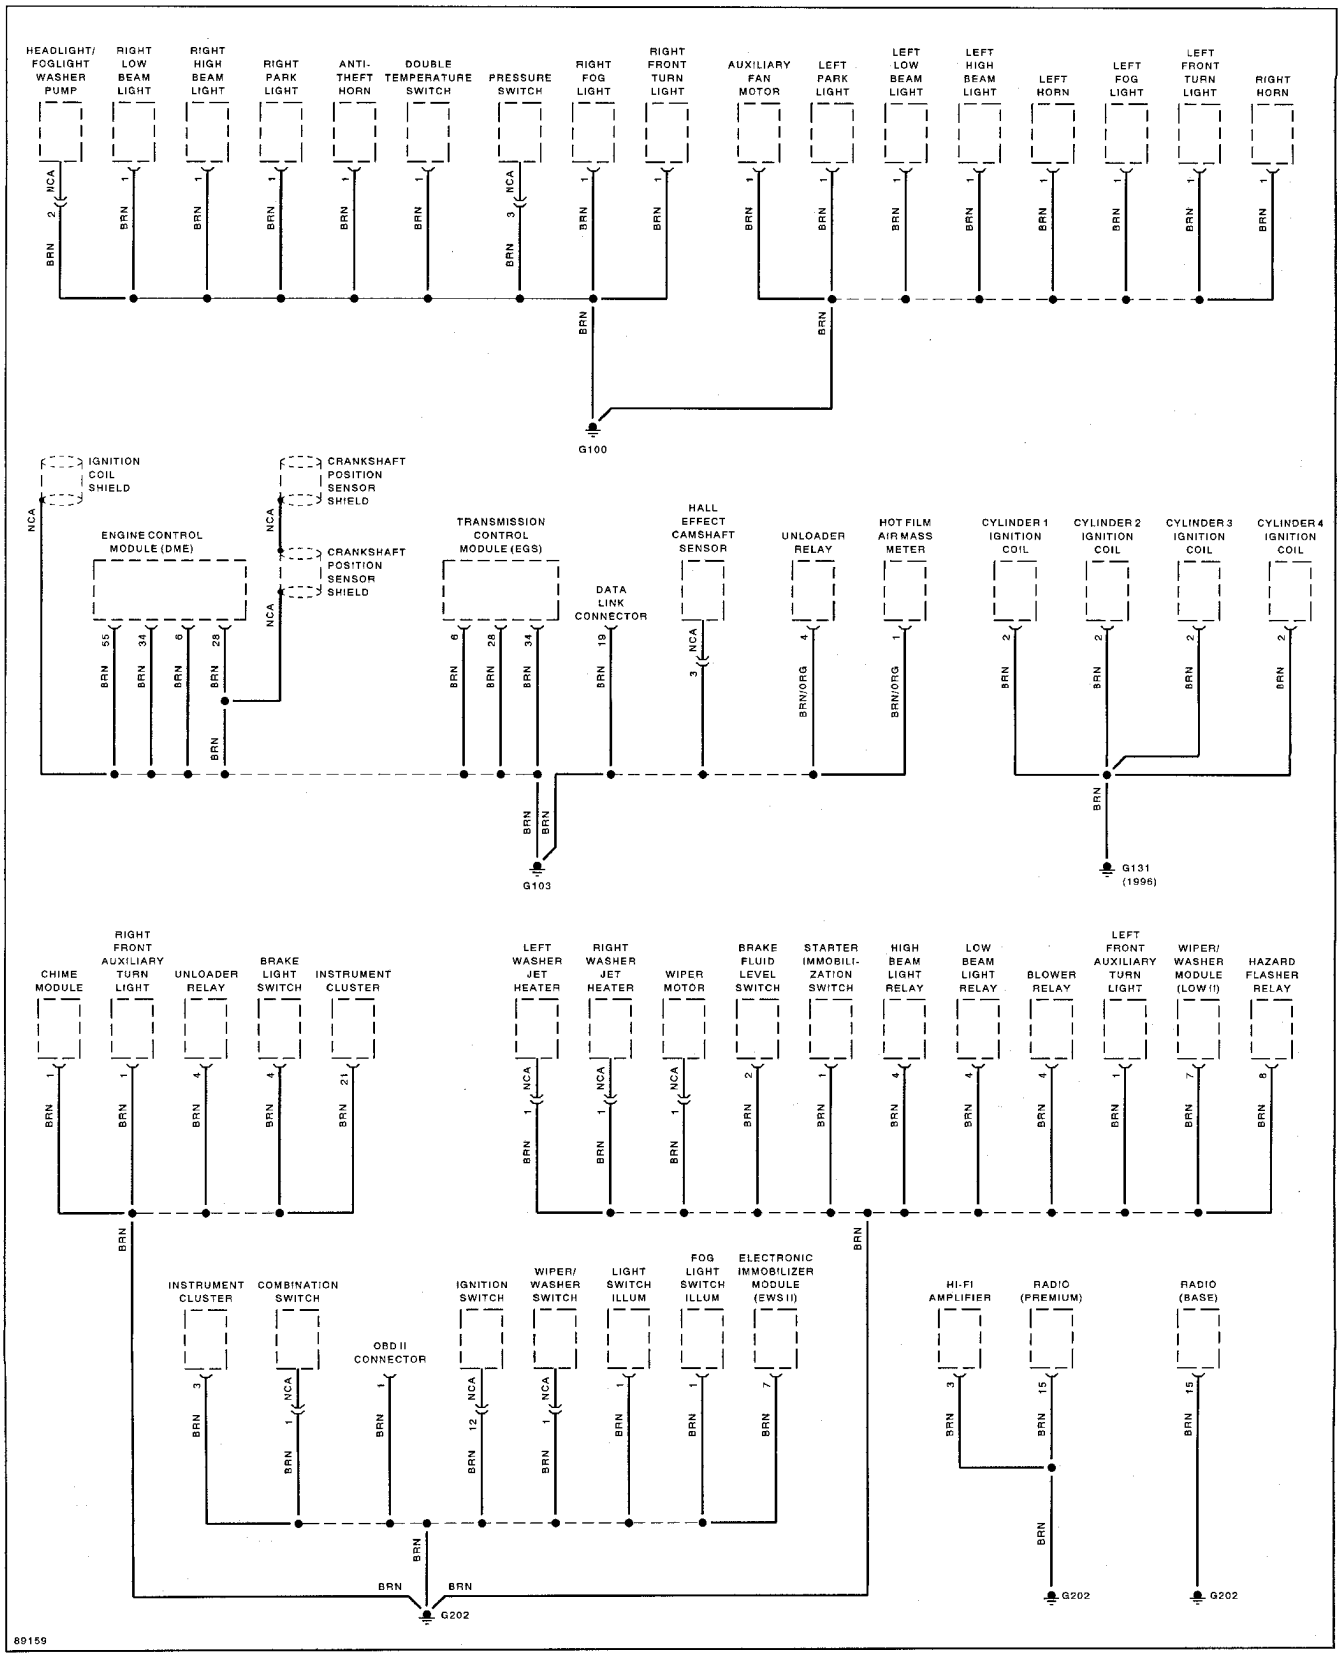


Ground Distribution

1995-96 318ti (3 of 3)

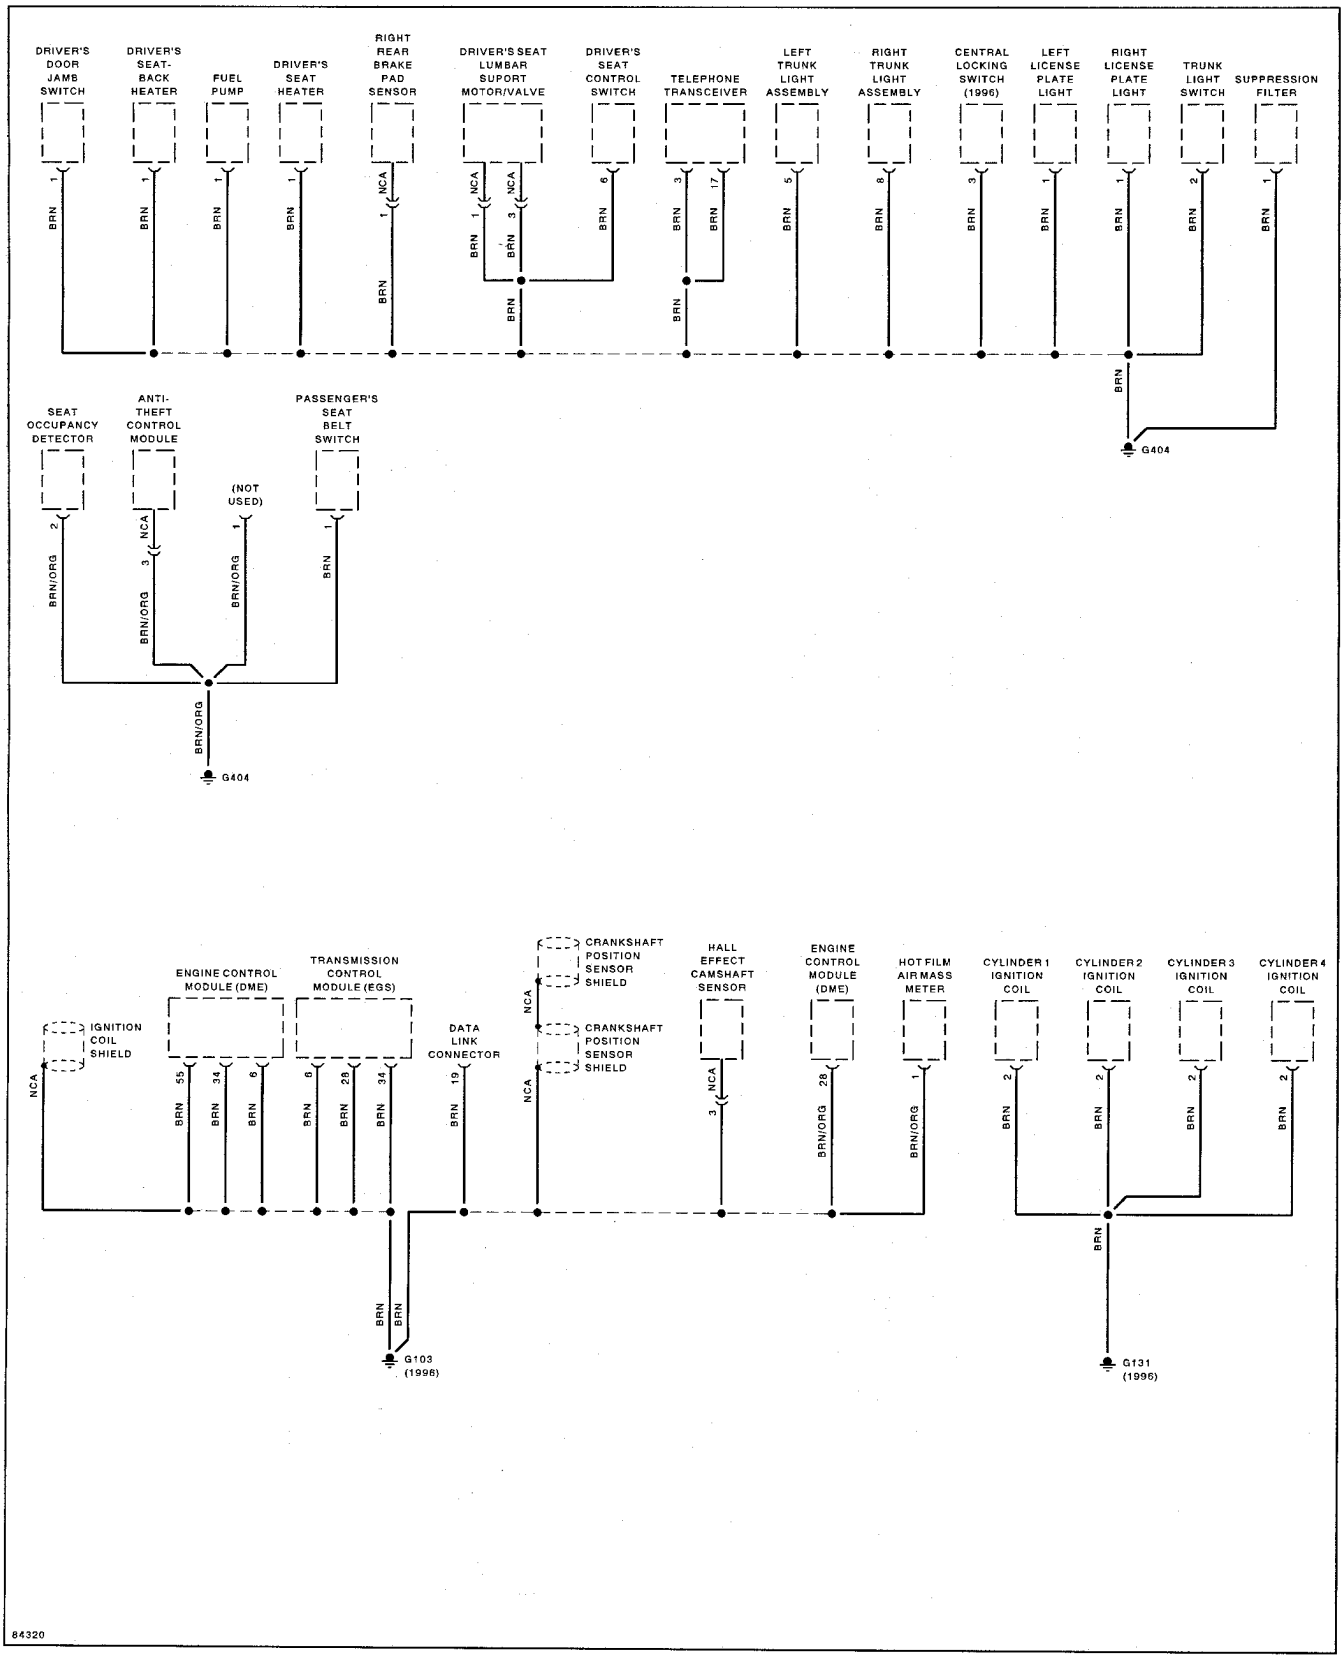


Ground Distribution

1995-96 318ti (2 of 3)

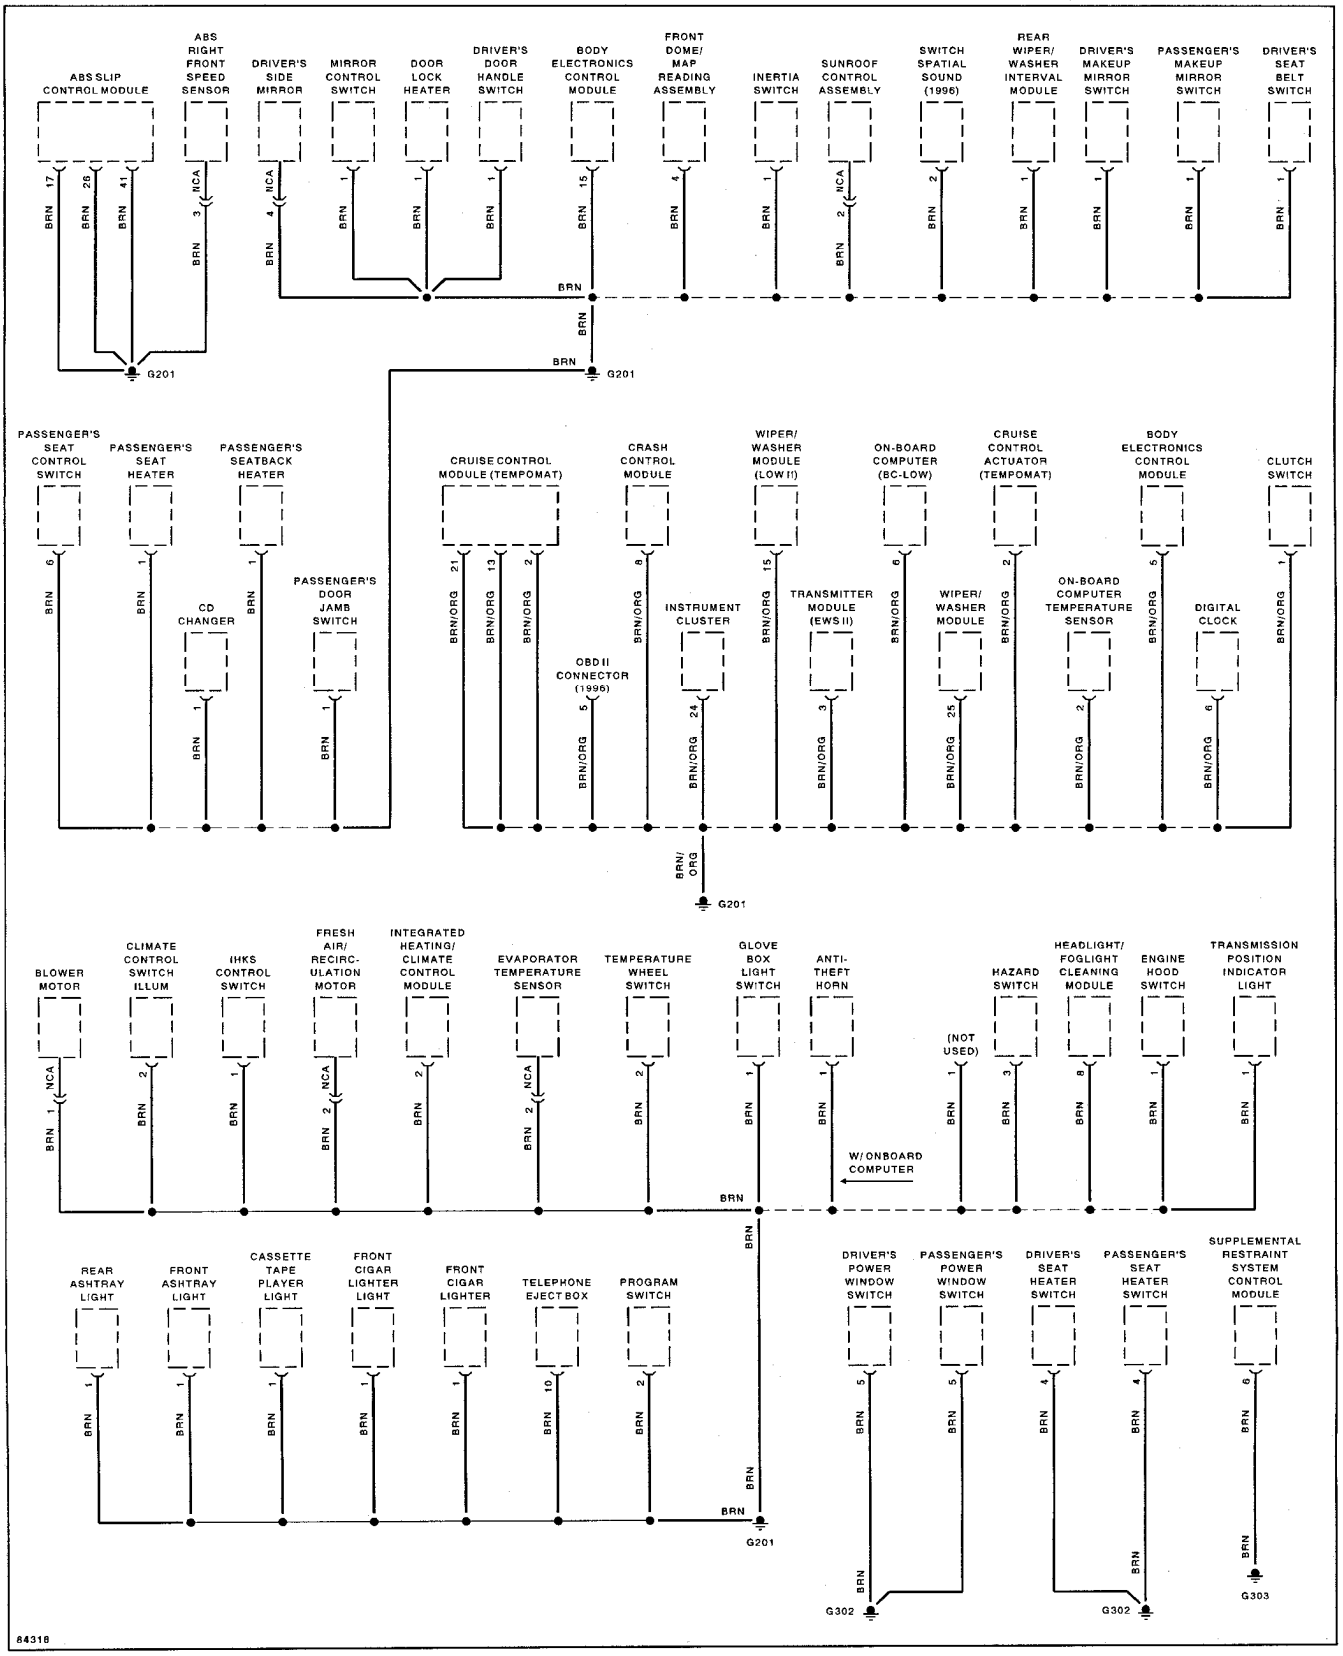

Ground Distribution


1995-96 318ti (1 of 3)

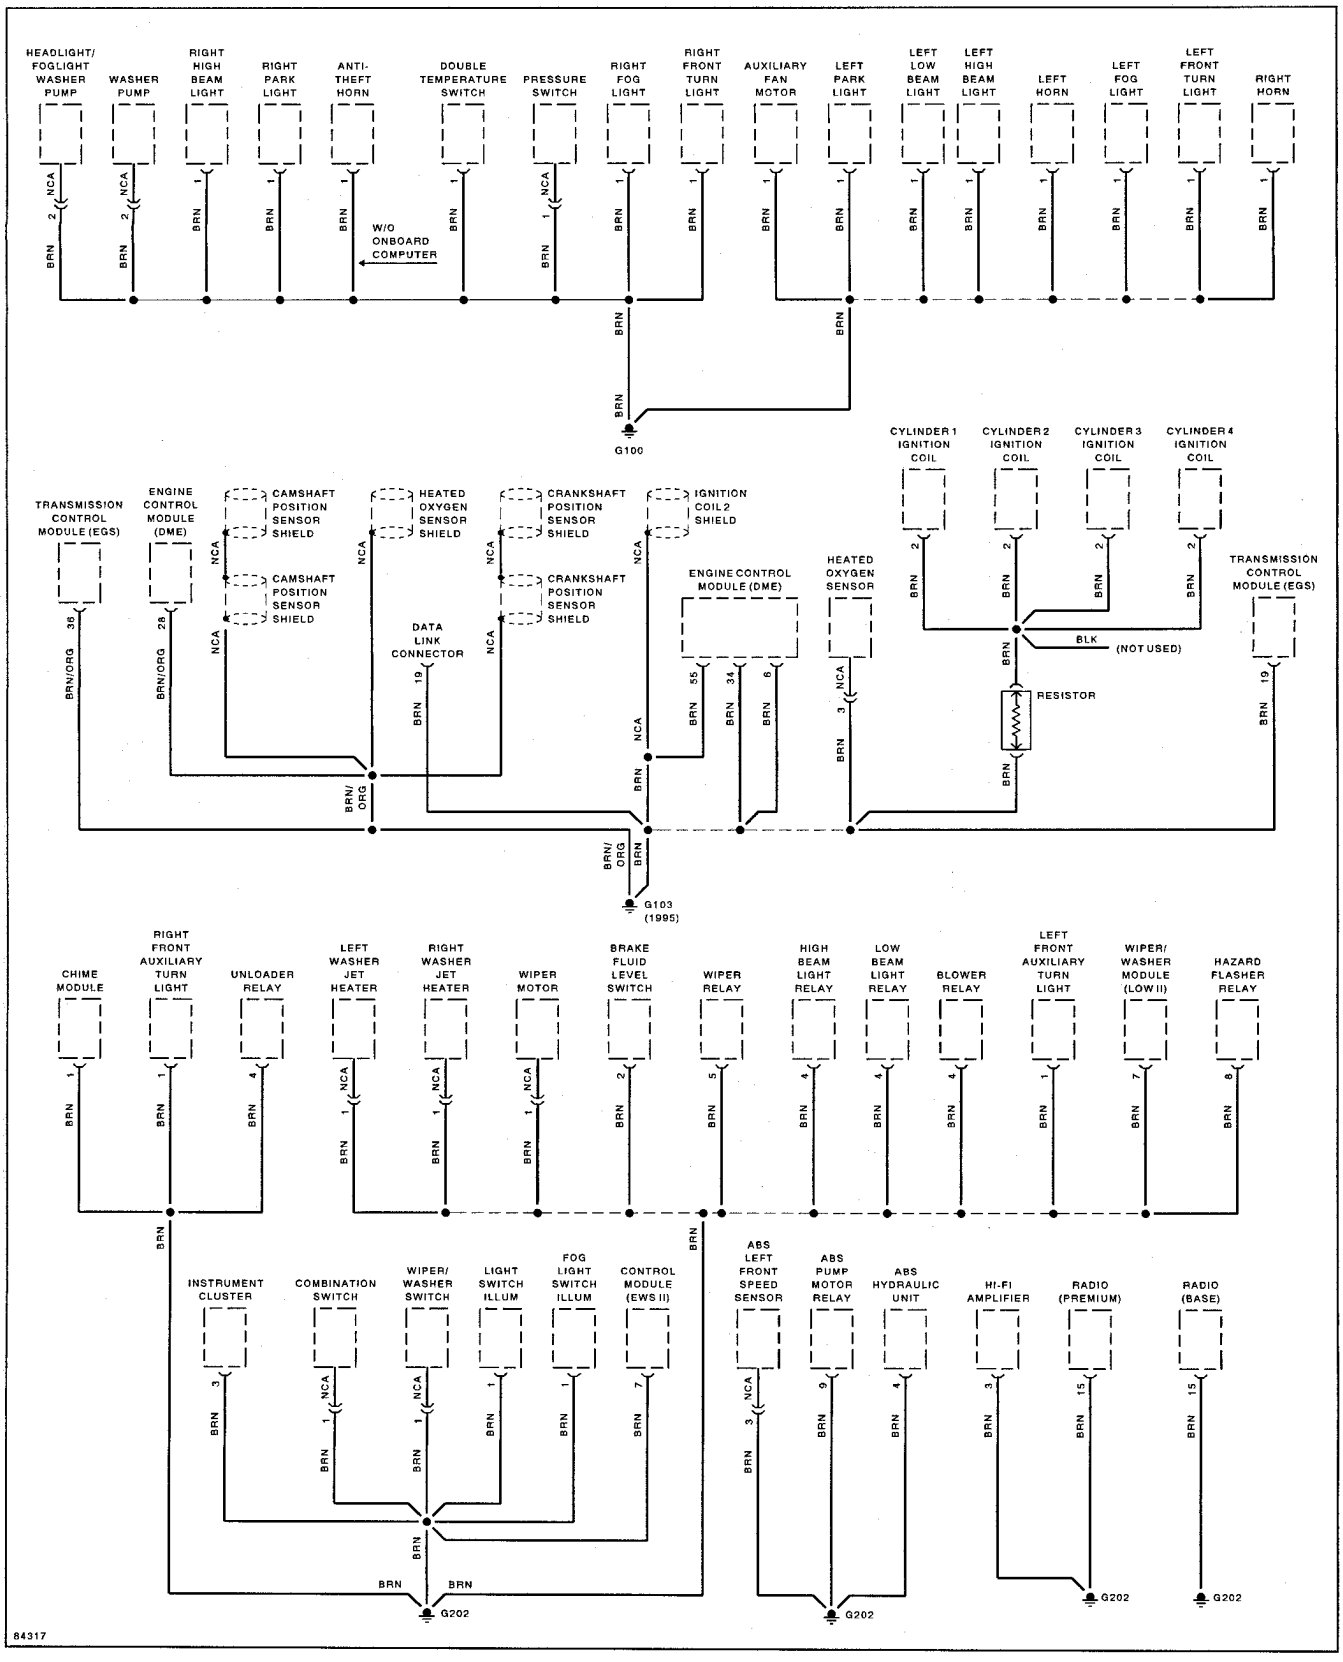

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Ground Distribution

1998 Except 318ti (4 of 4)

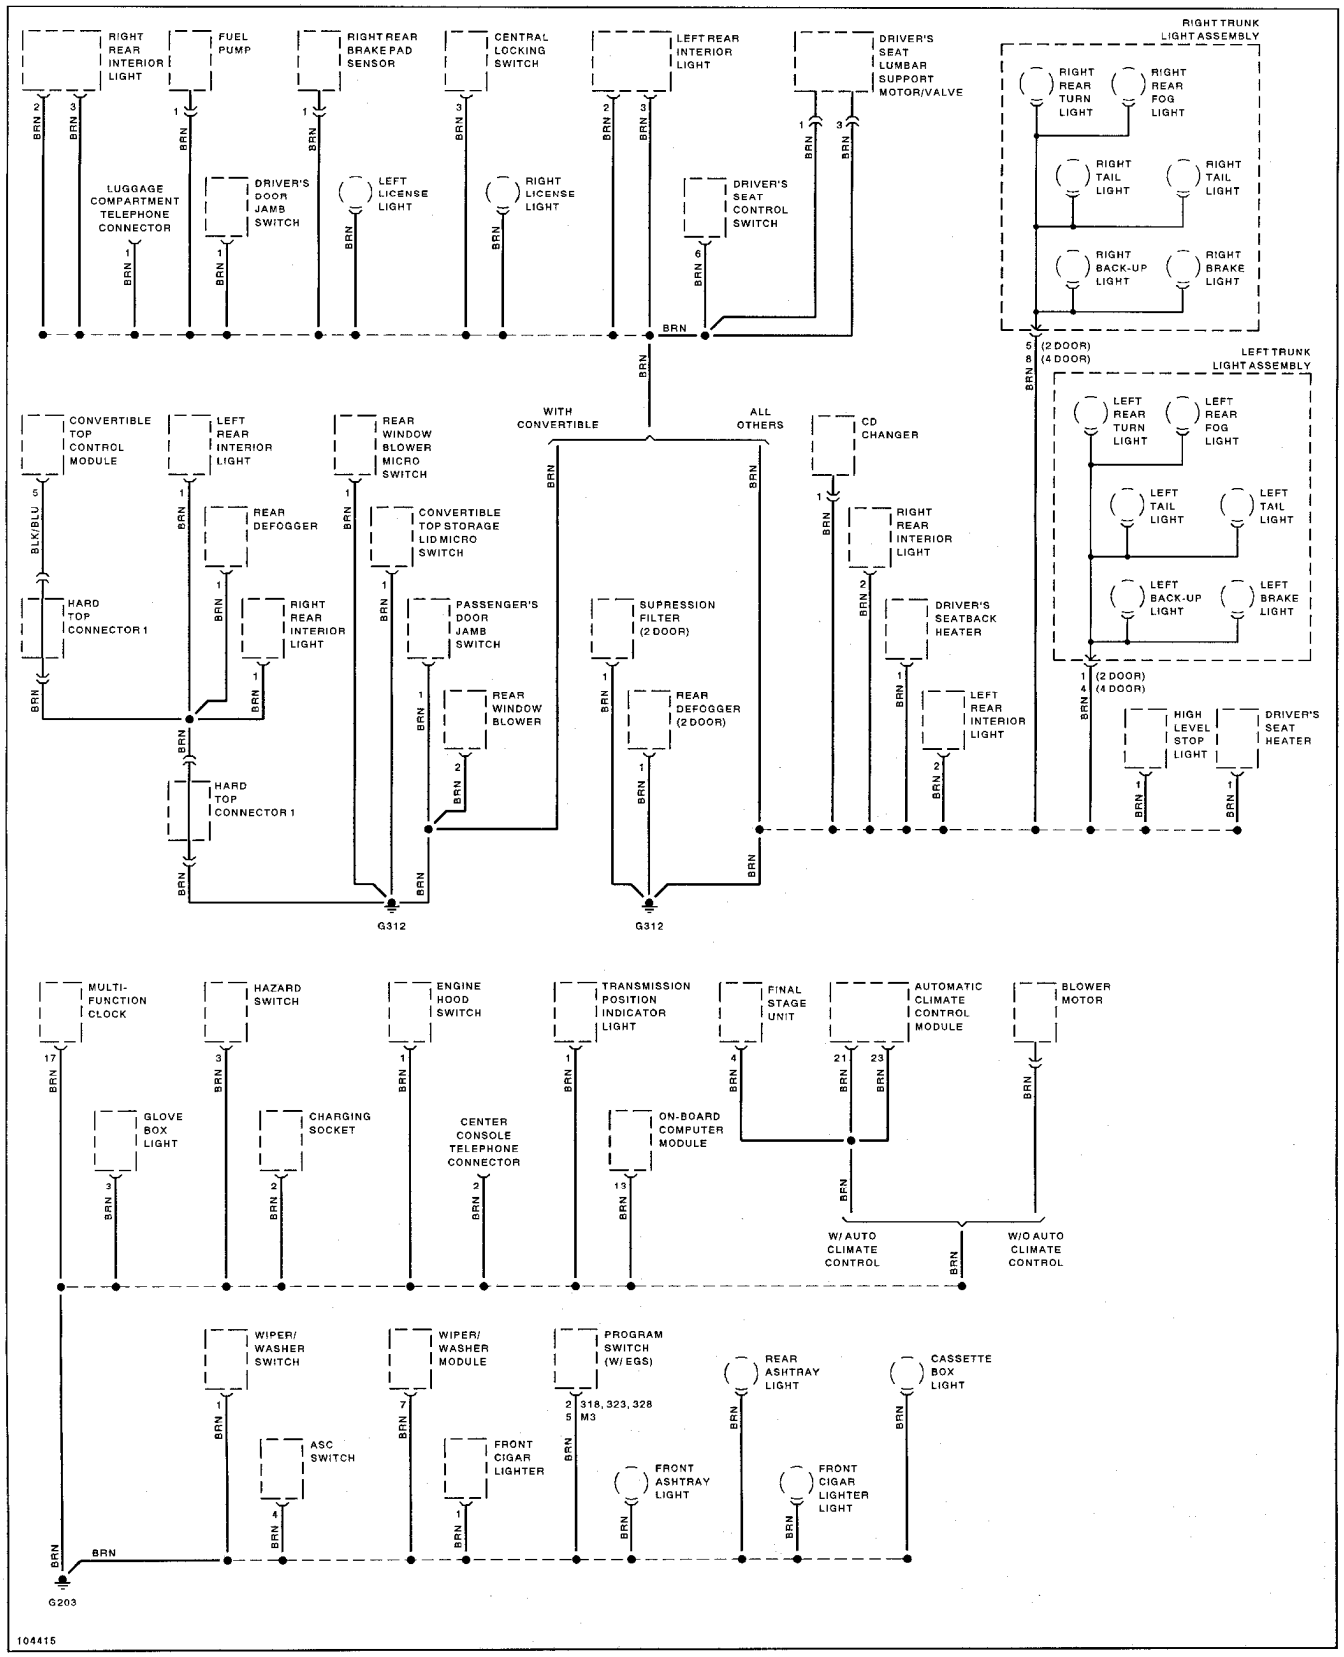


Ground Distribution

1998 Except 318ti (3 of 4)

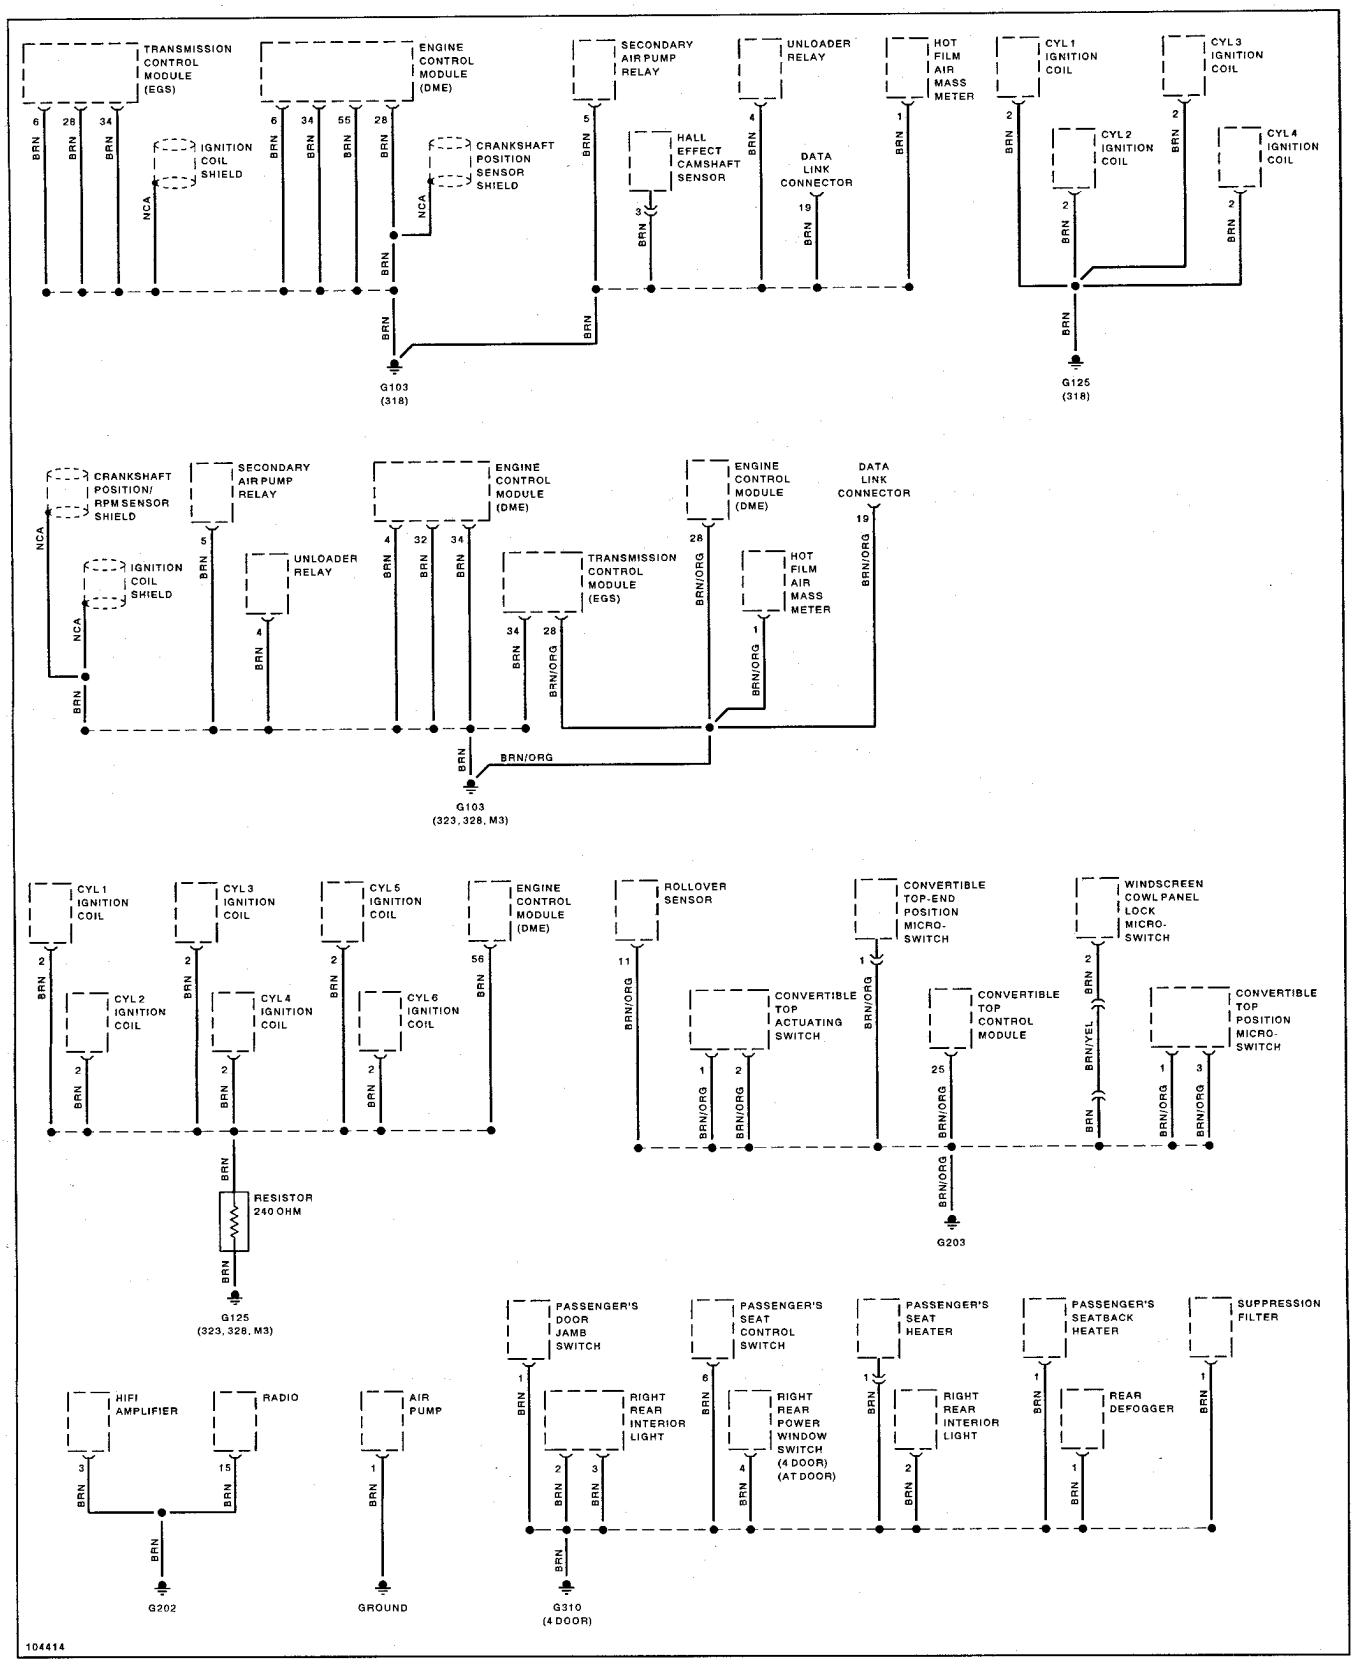


Ground Distribution

1998 Except 318ti (2 of 4)

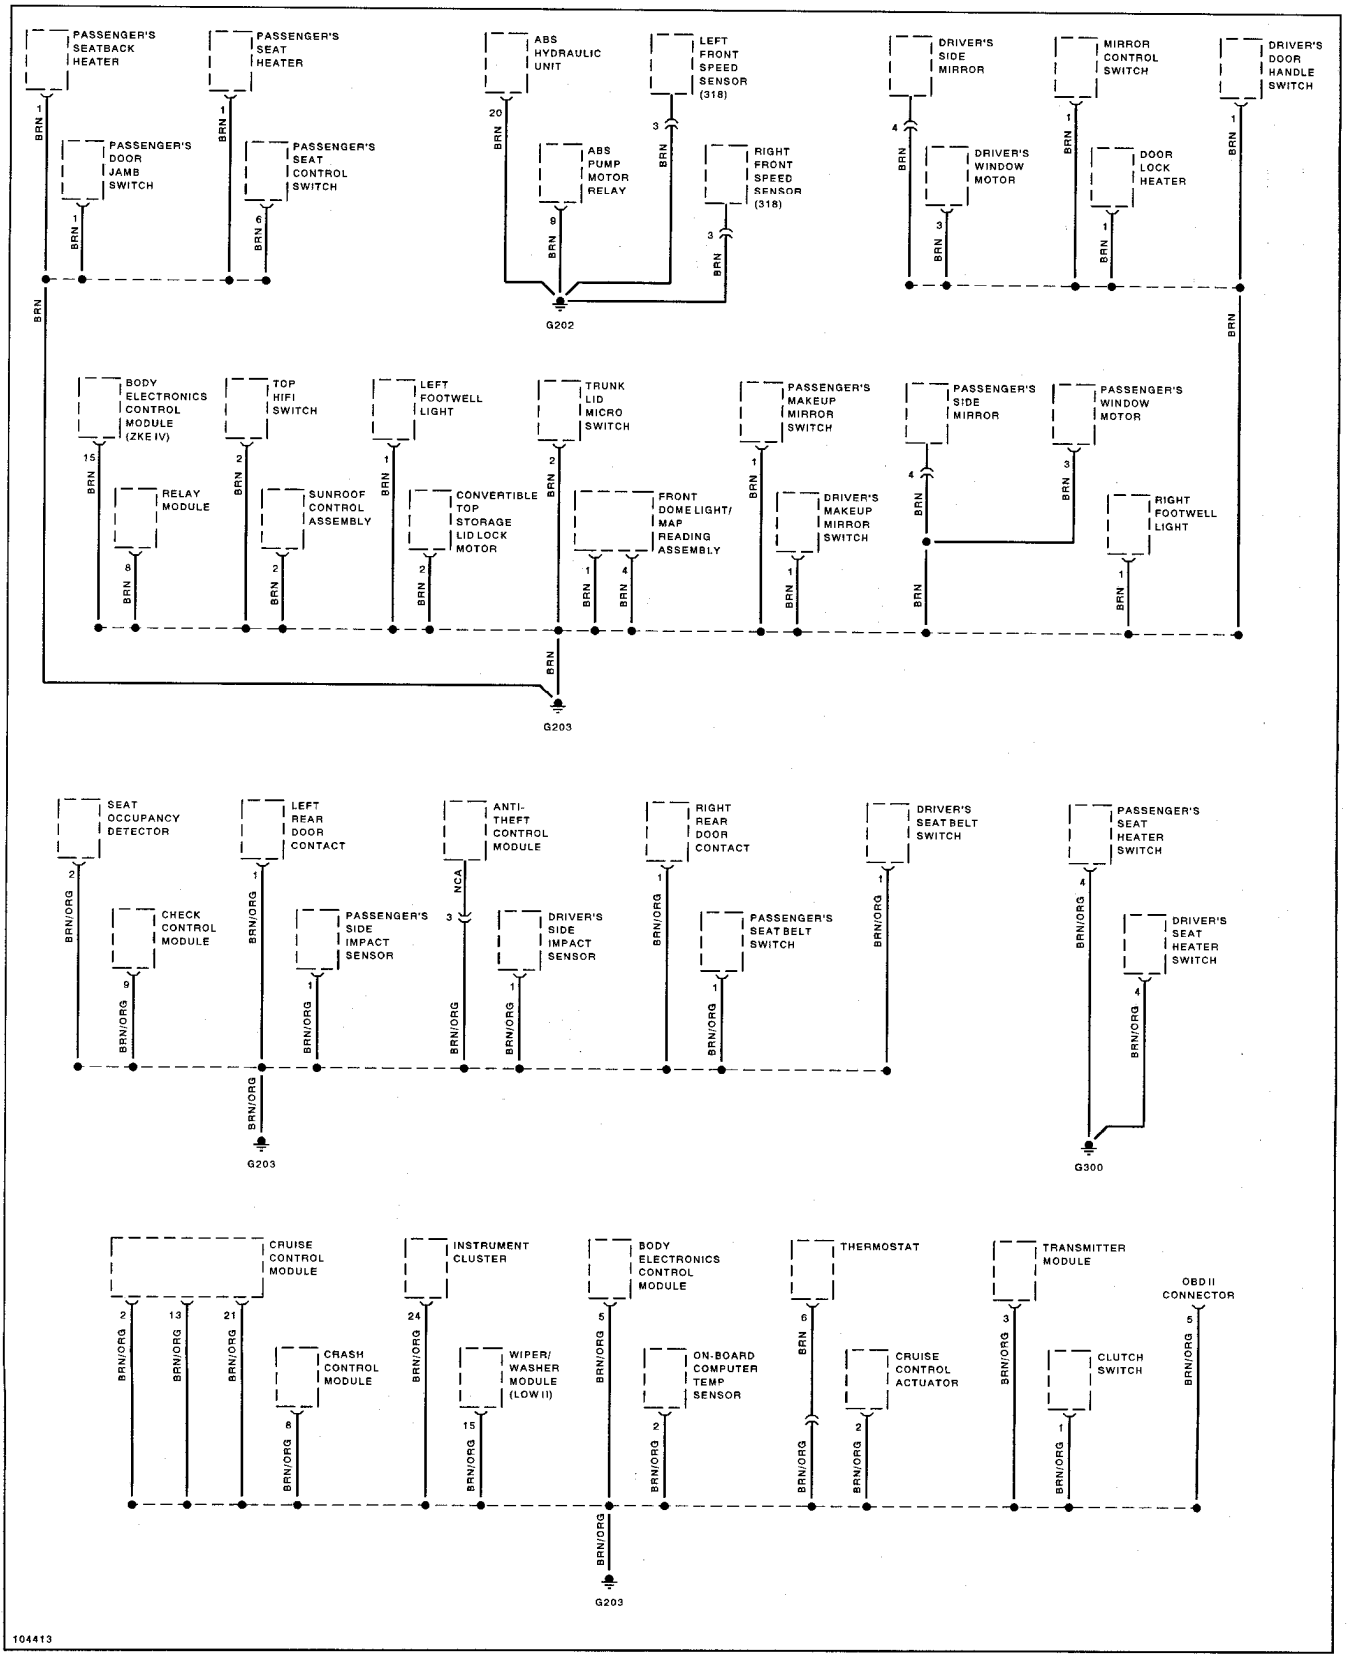


Ground Distribution

1998 Except 318ti (1 of 4)

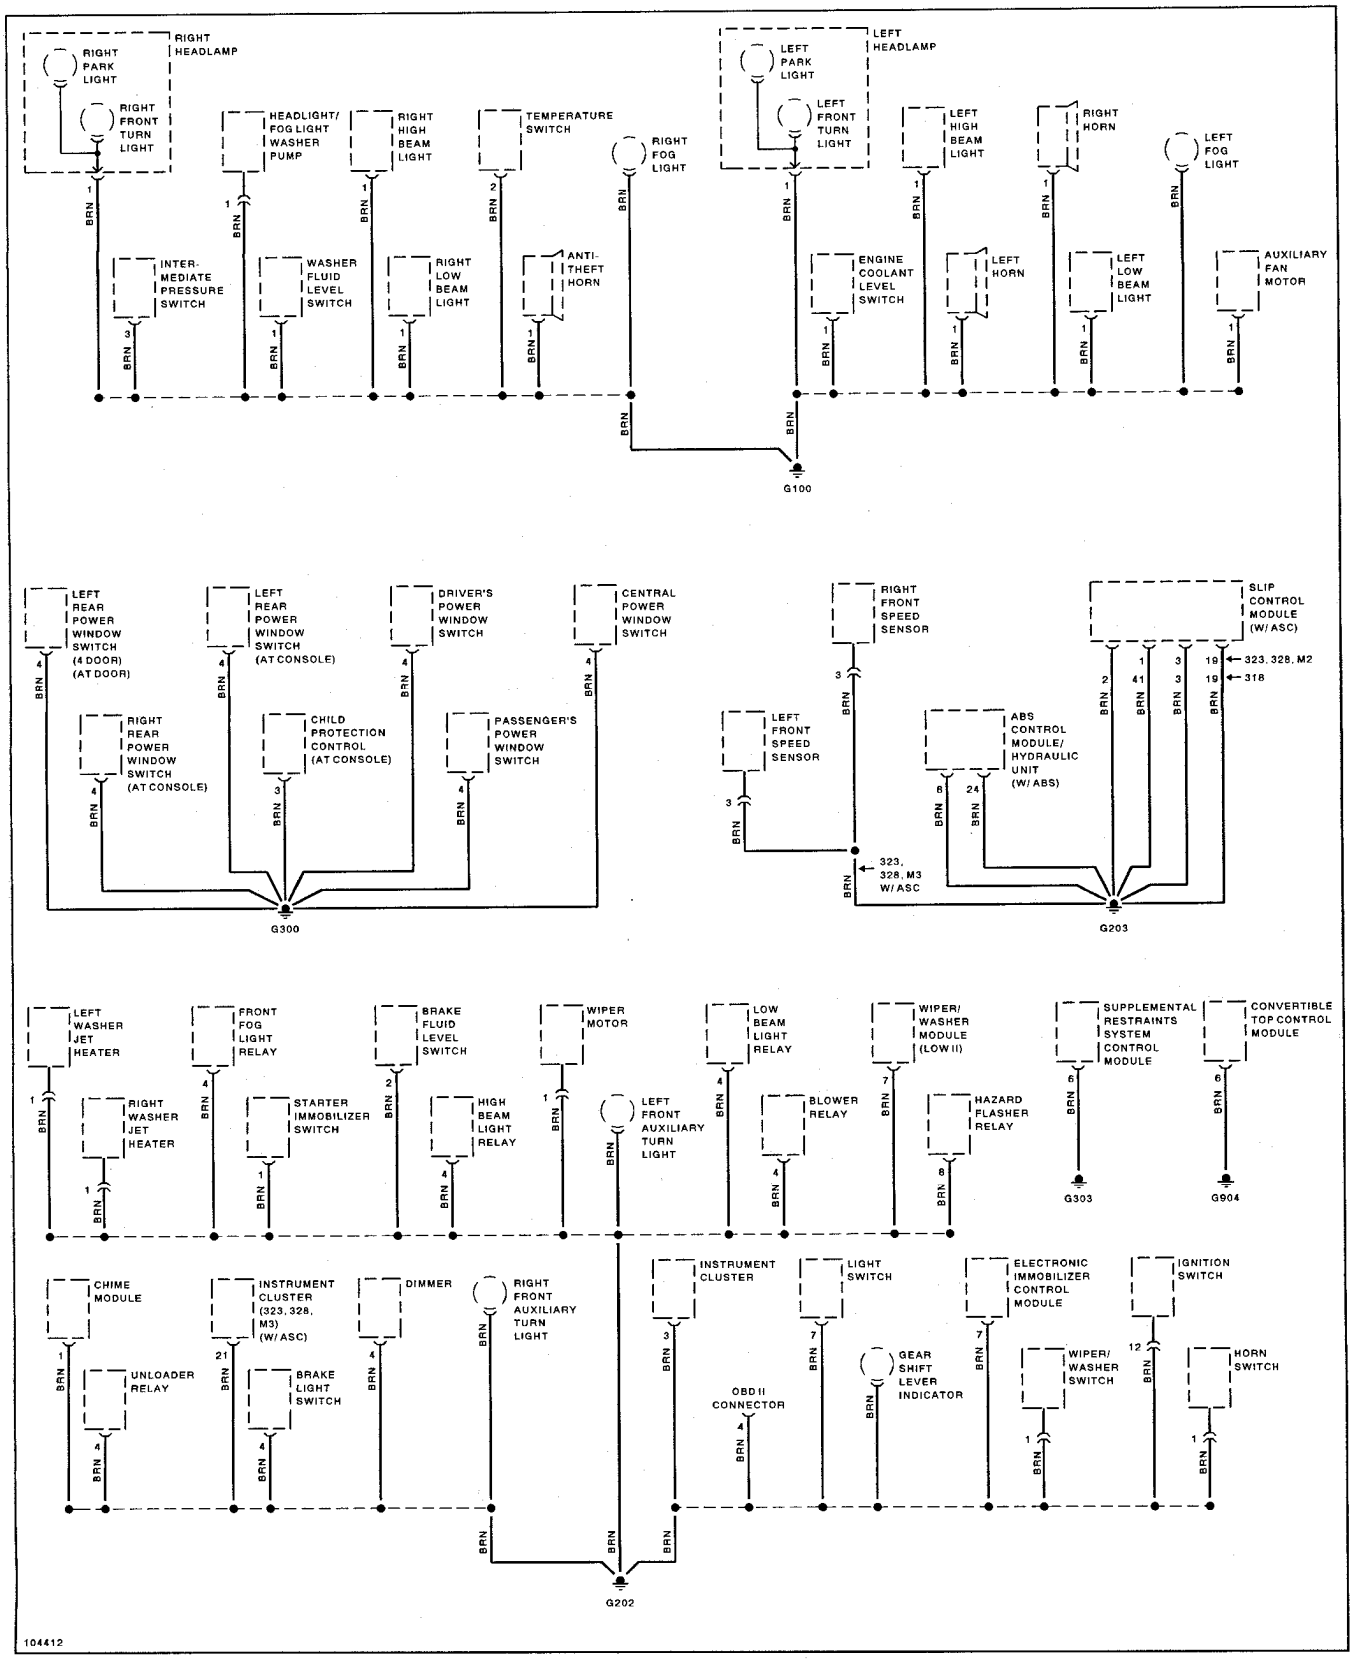


Ground Distribution

1996-97 Except 318ti (5 of 5)

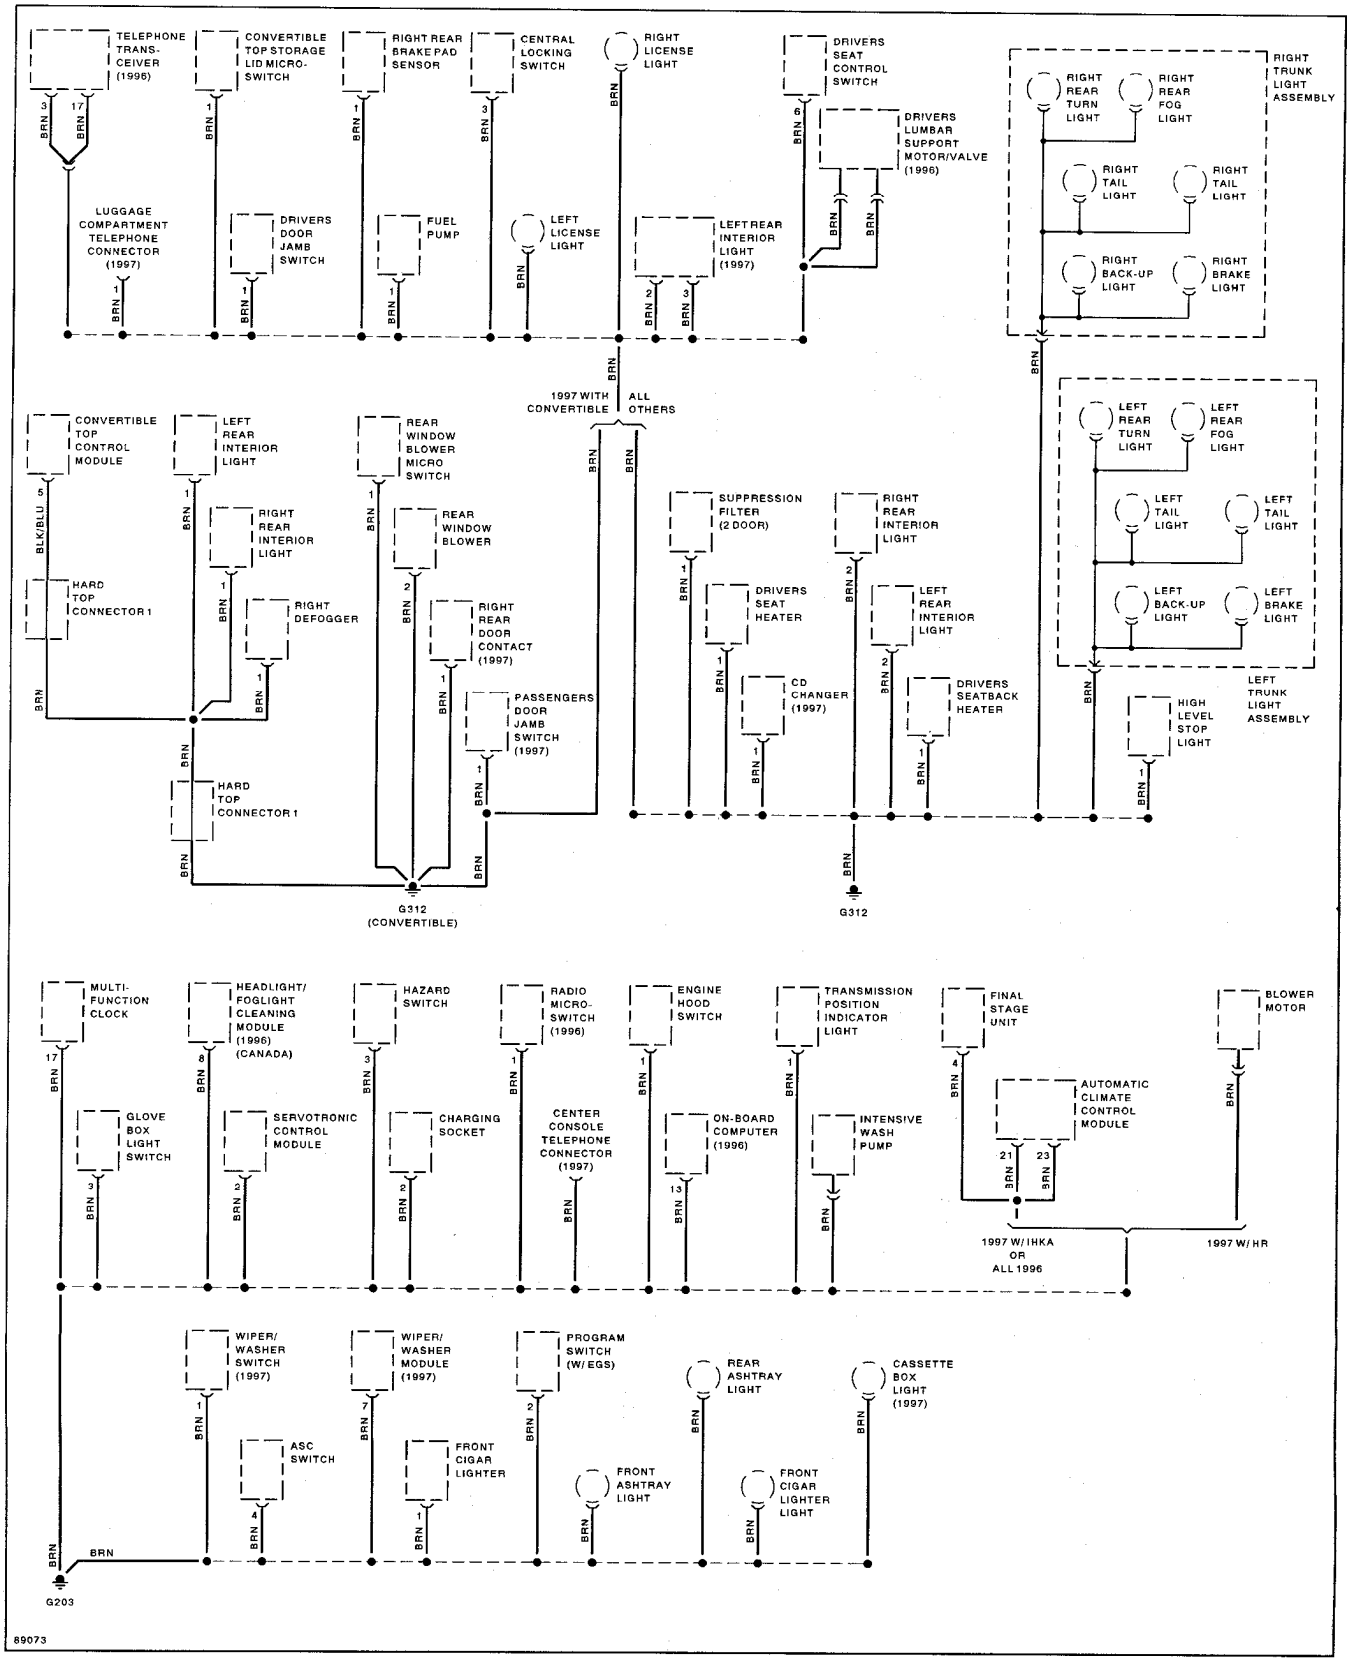


Ground Distribution

1996-97 Except 318ti (4 of 5)

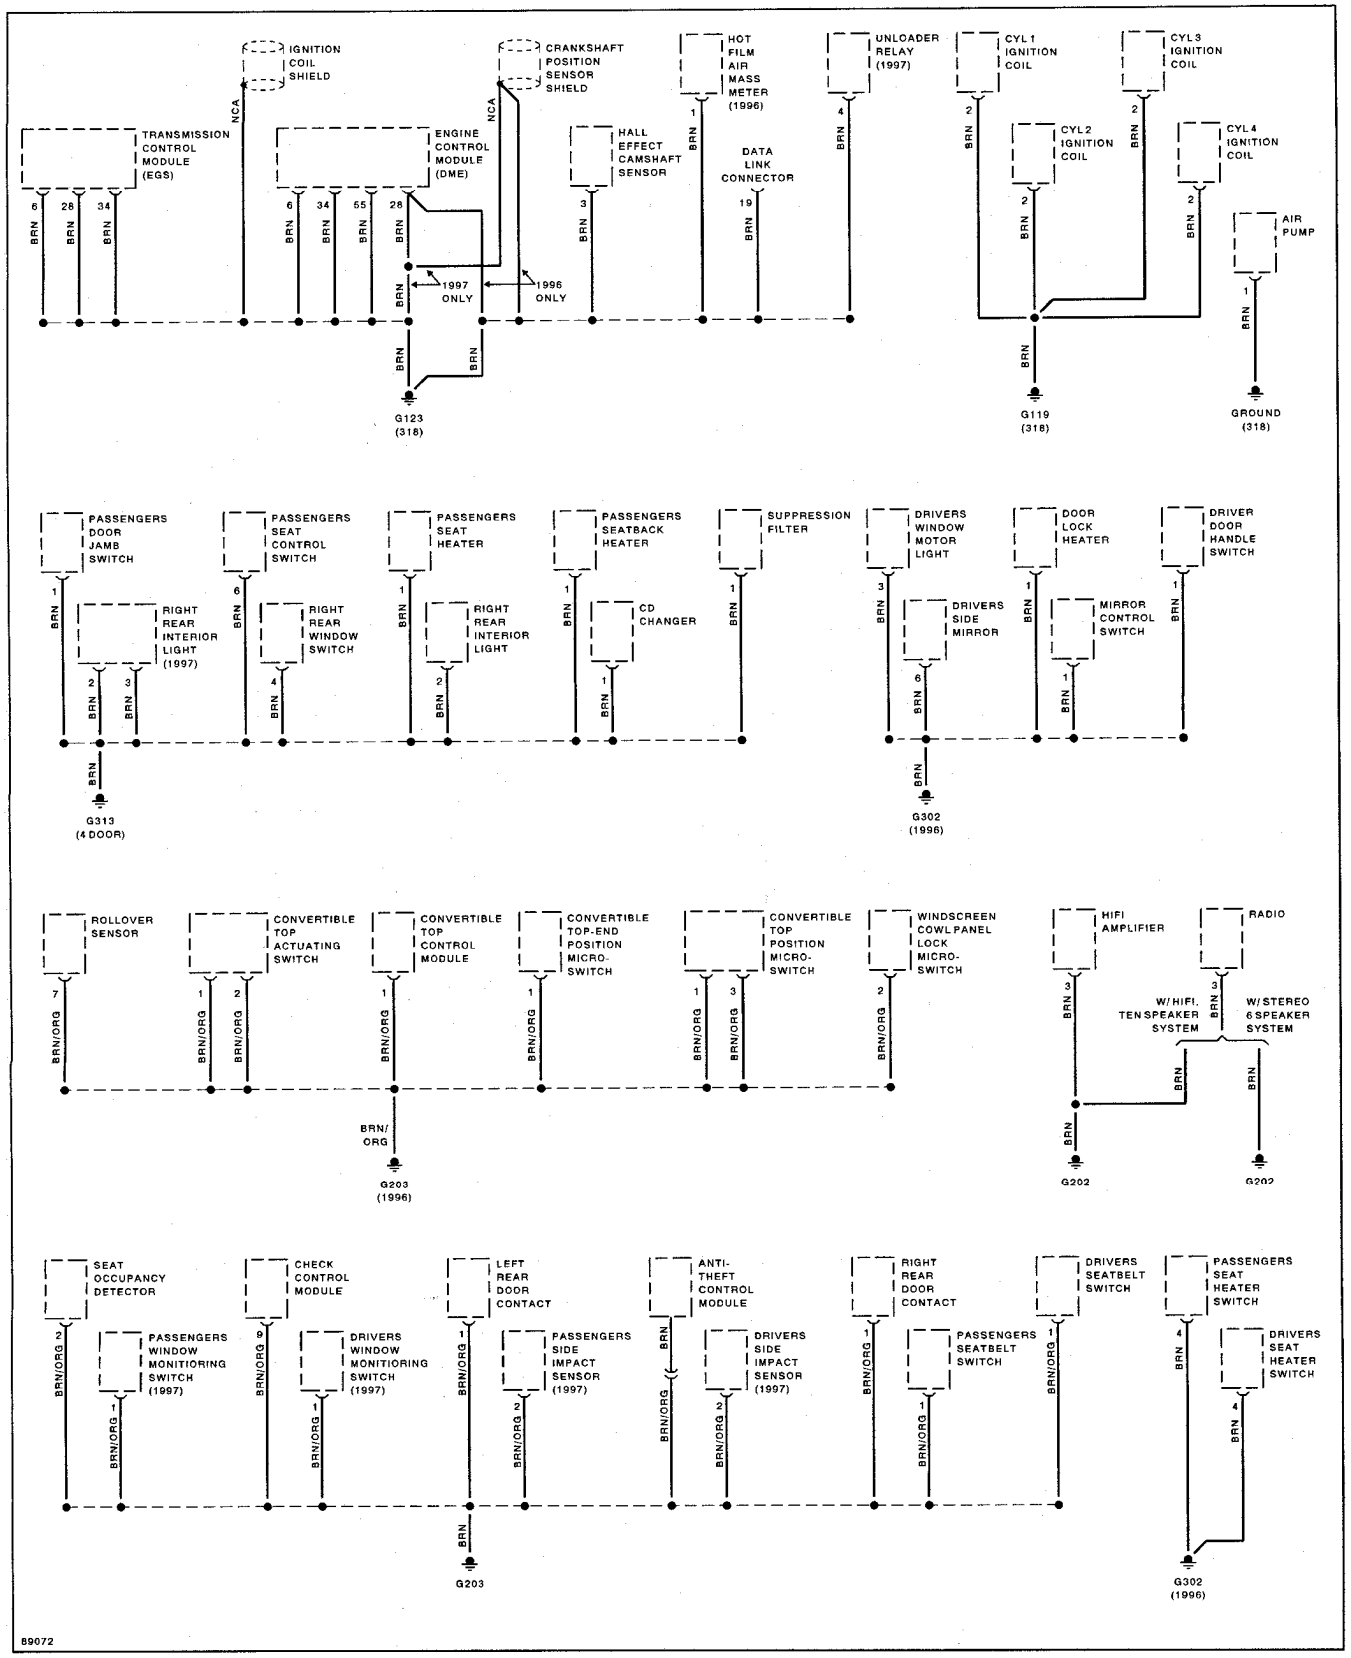


Ground Distribution

1996-97 Except 318ti (3 of 5)

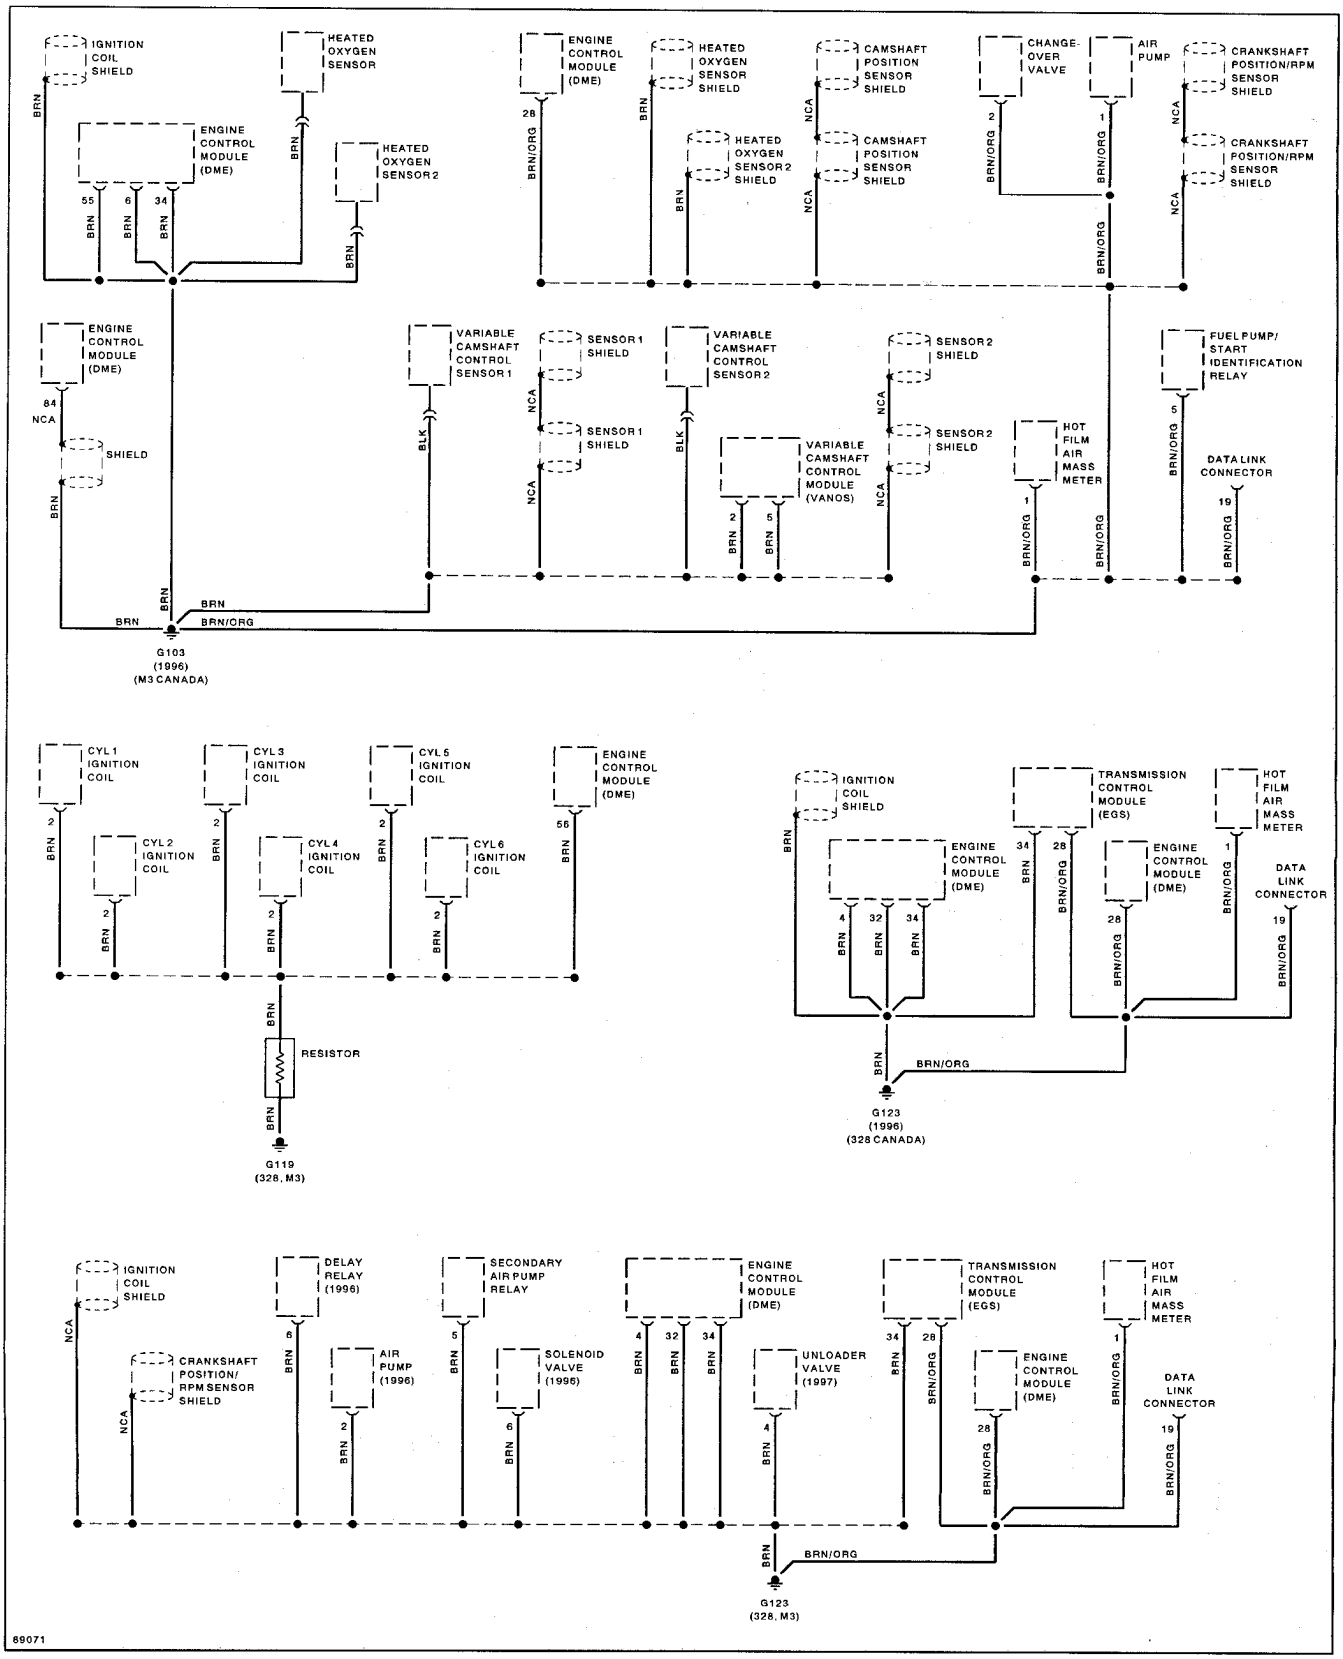


Ground Distribution

1996-97 Except 318ti (2 of 5)

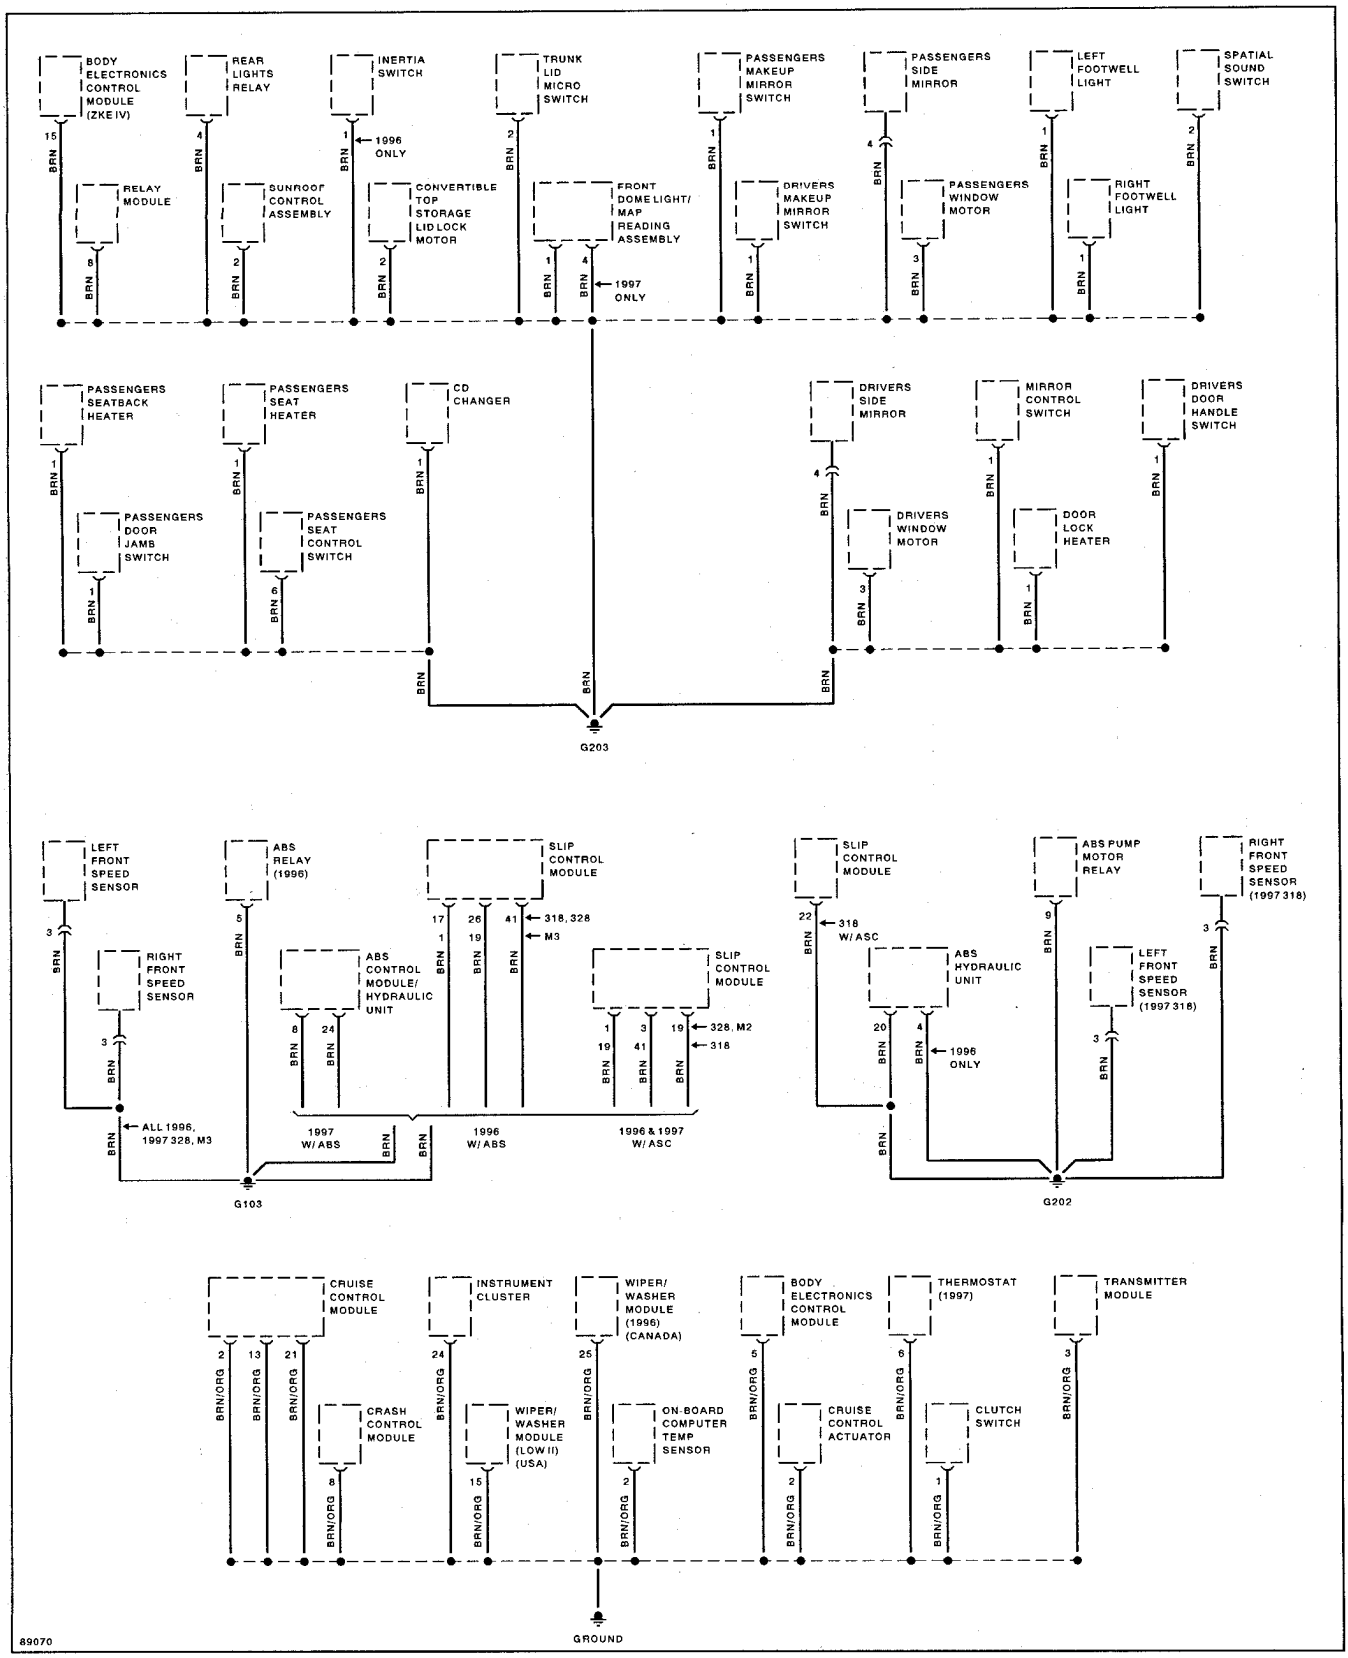


Ground Distribution

1996-97 Except 318ti (1 of 5)

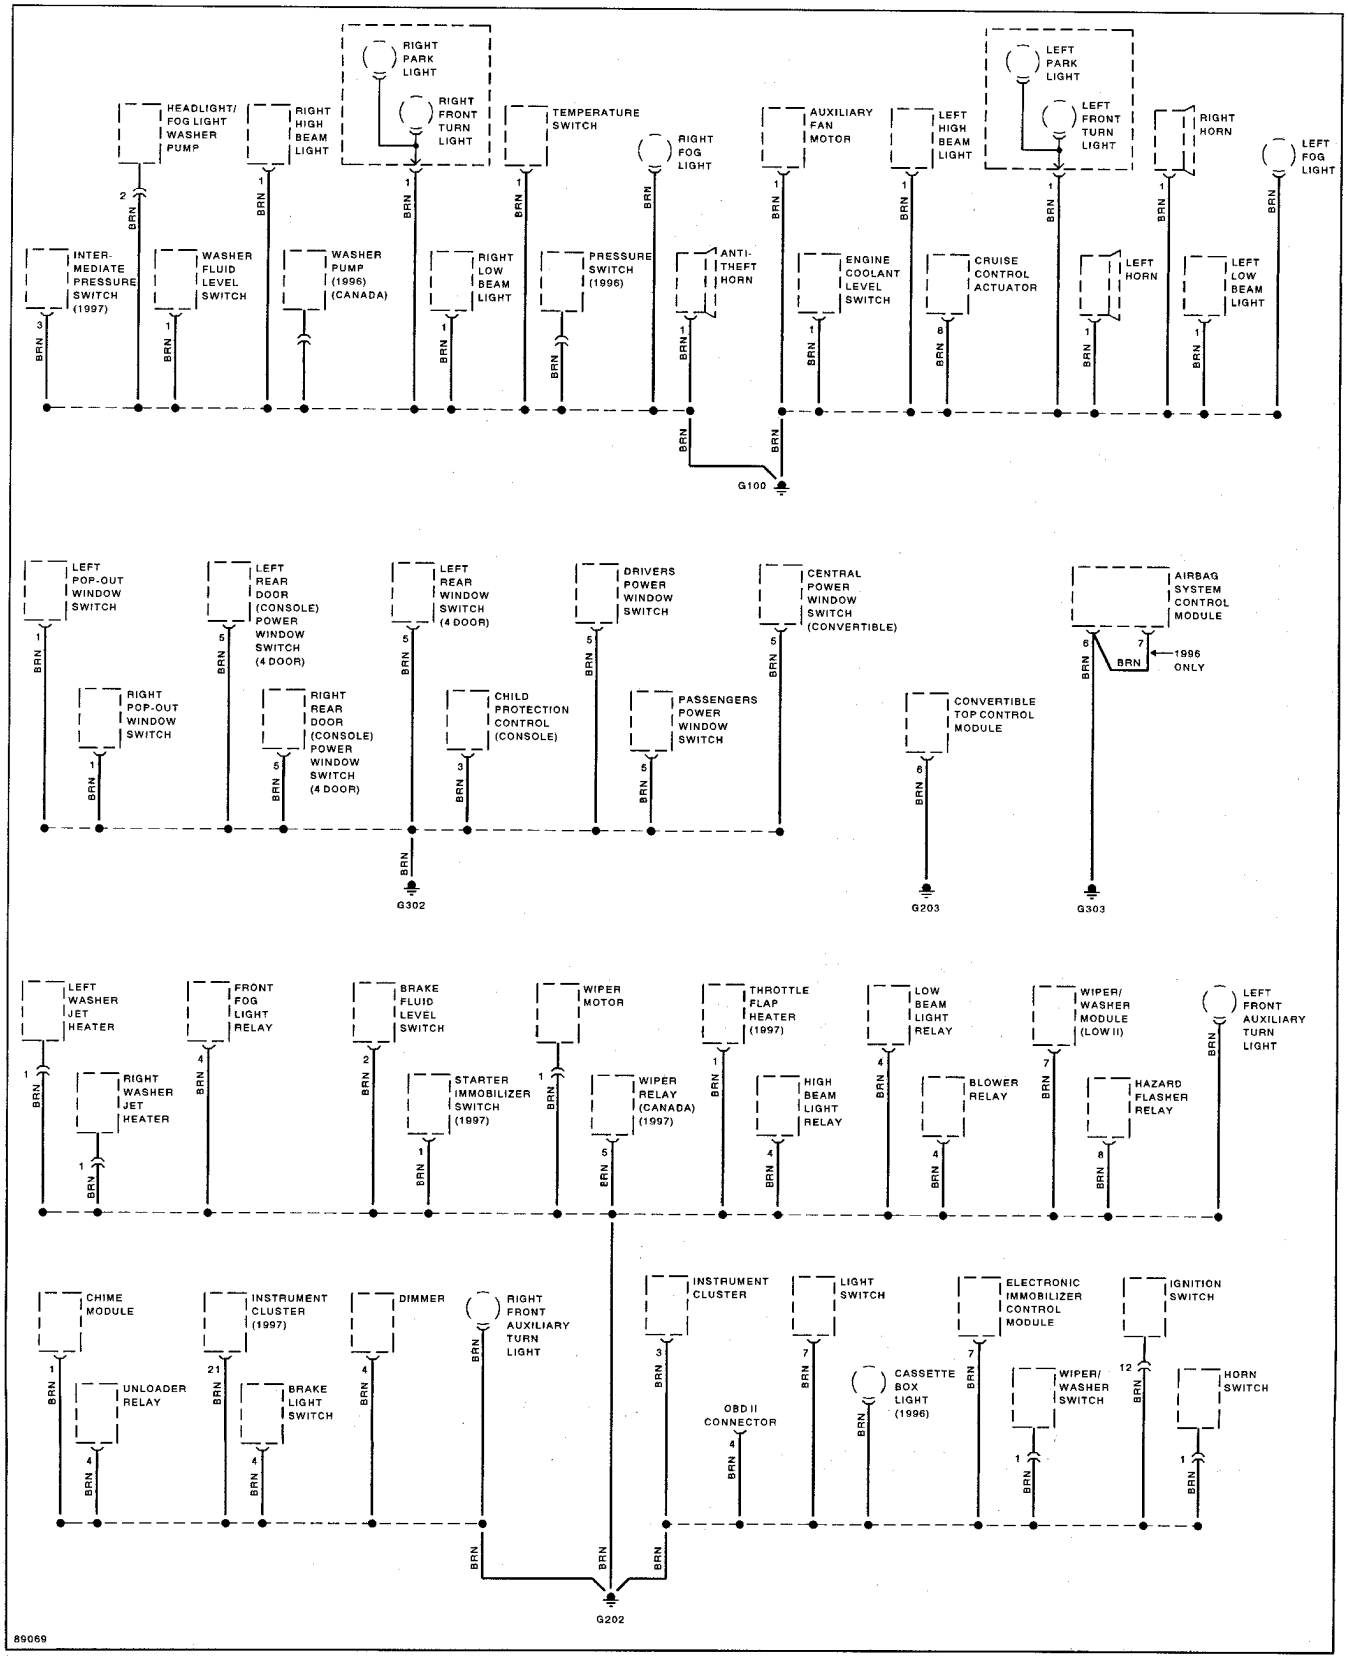

Ground Distribution


1994-95 Except 318ti (5 of 5)

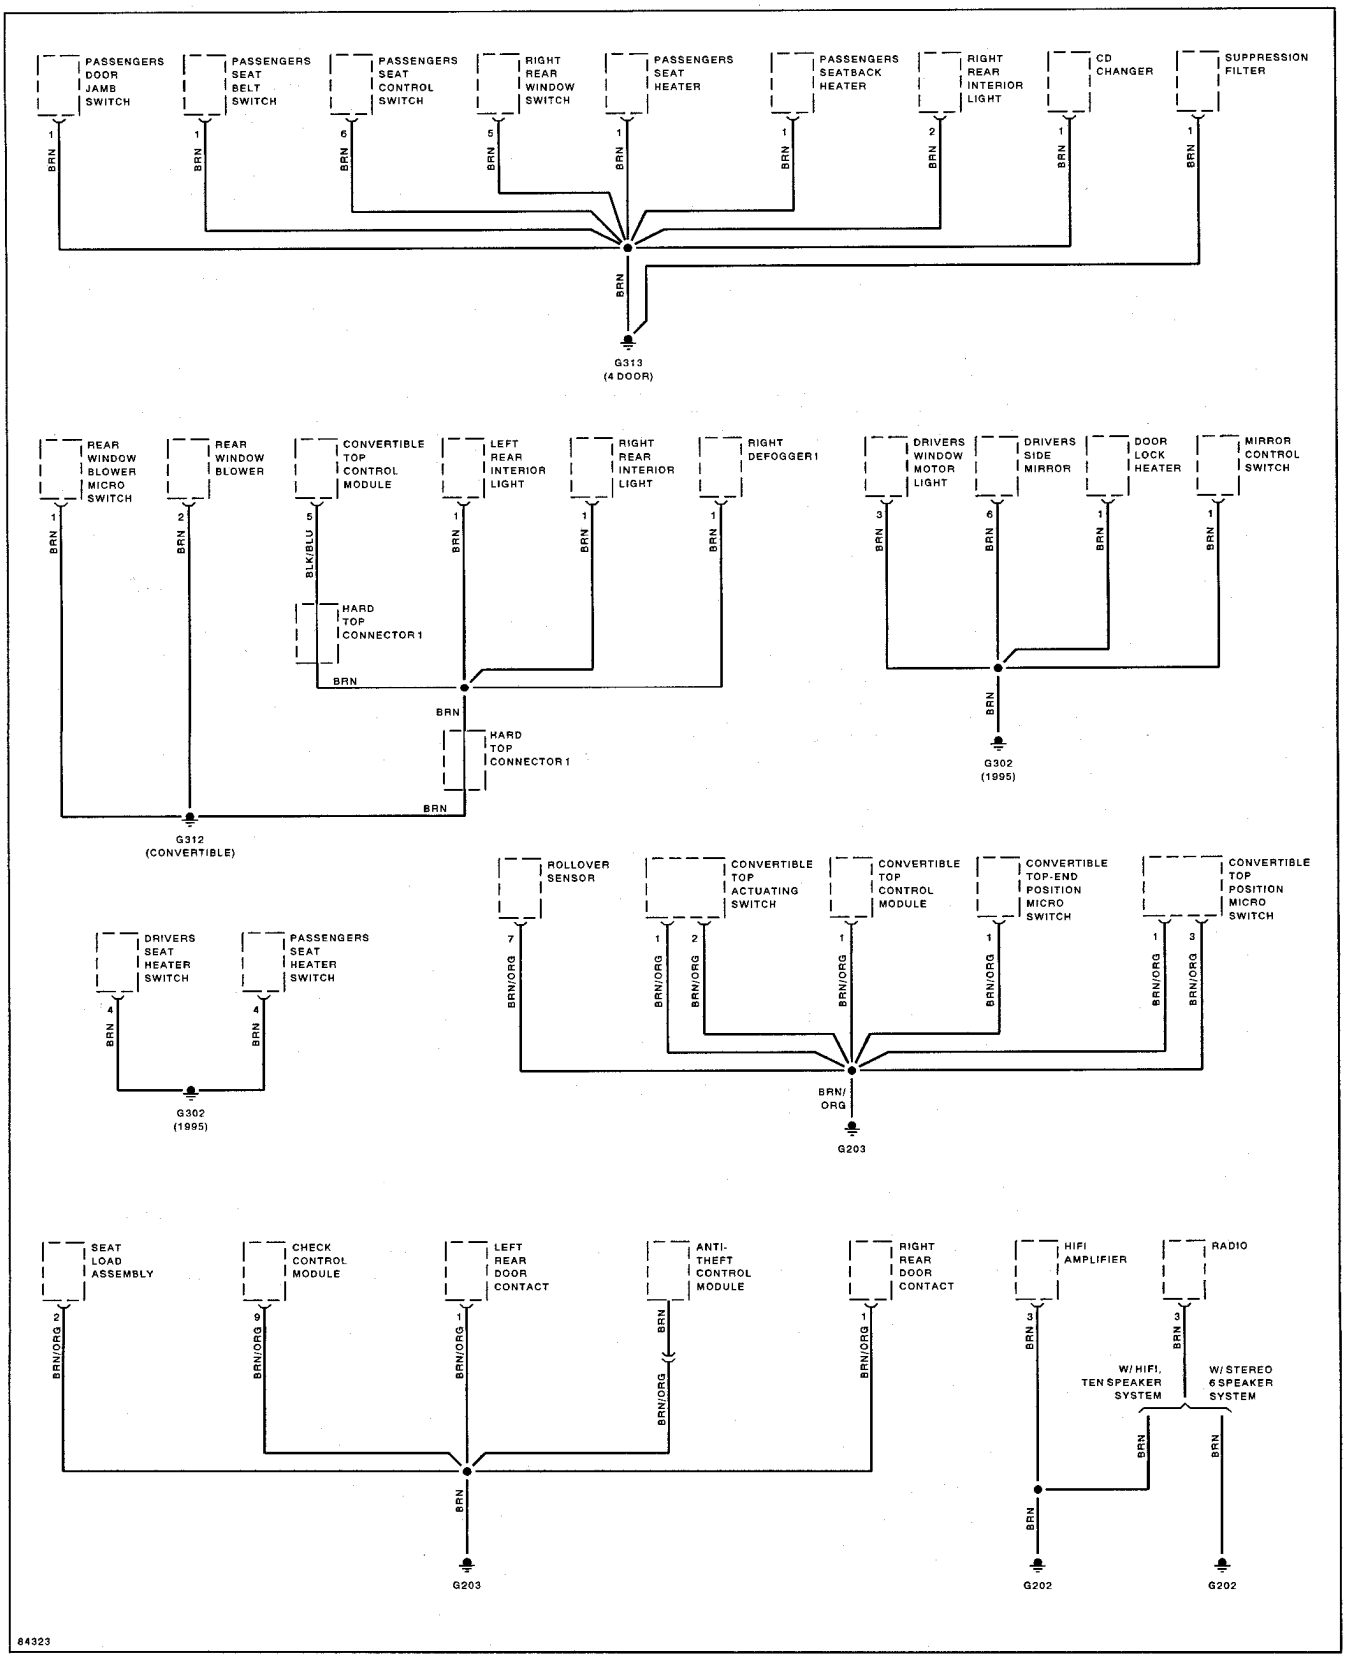

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Ground Distribution

1994-95 Except 318ti (4 of 5)

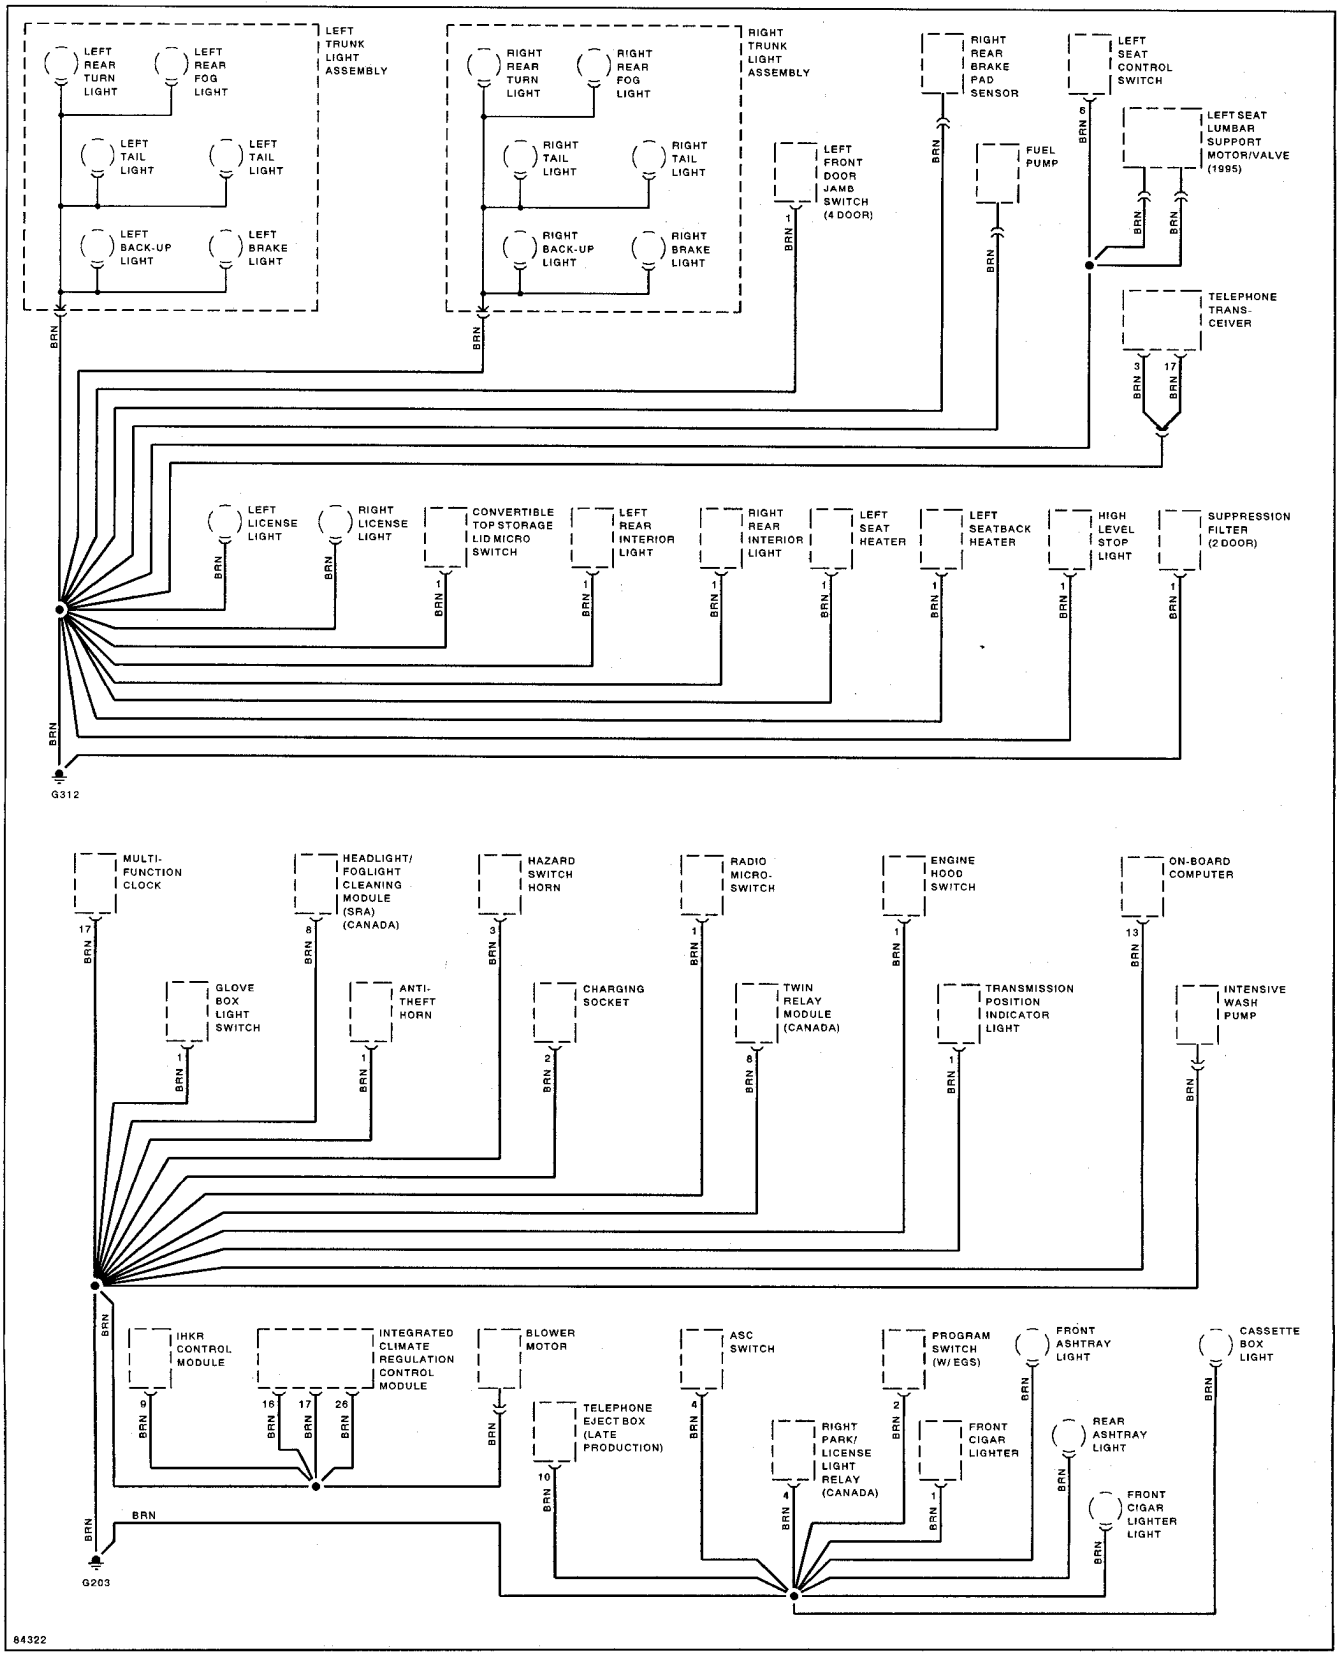


Ground Distribution

1994-95 Except 318ti (3 of 5)

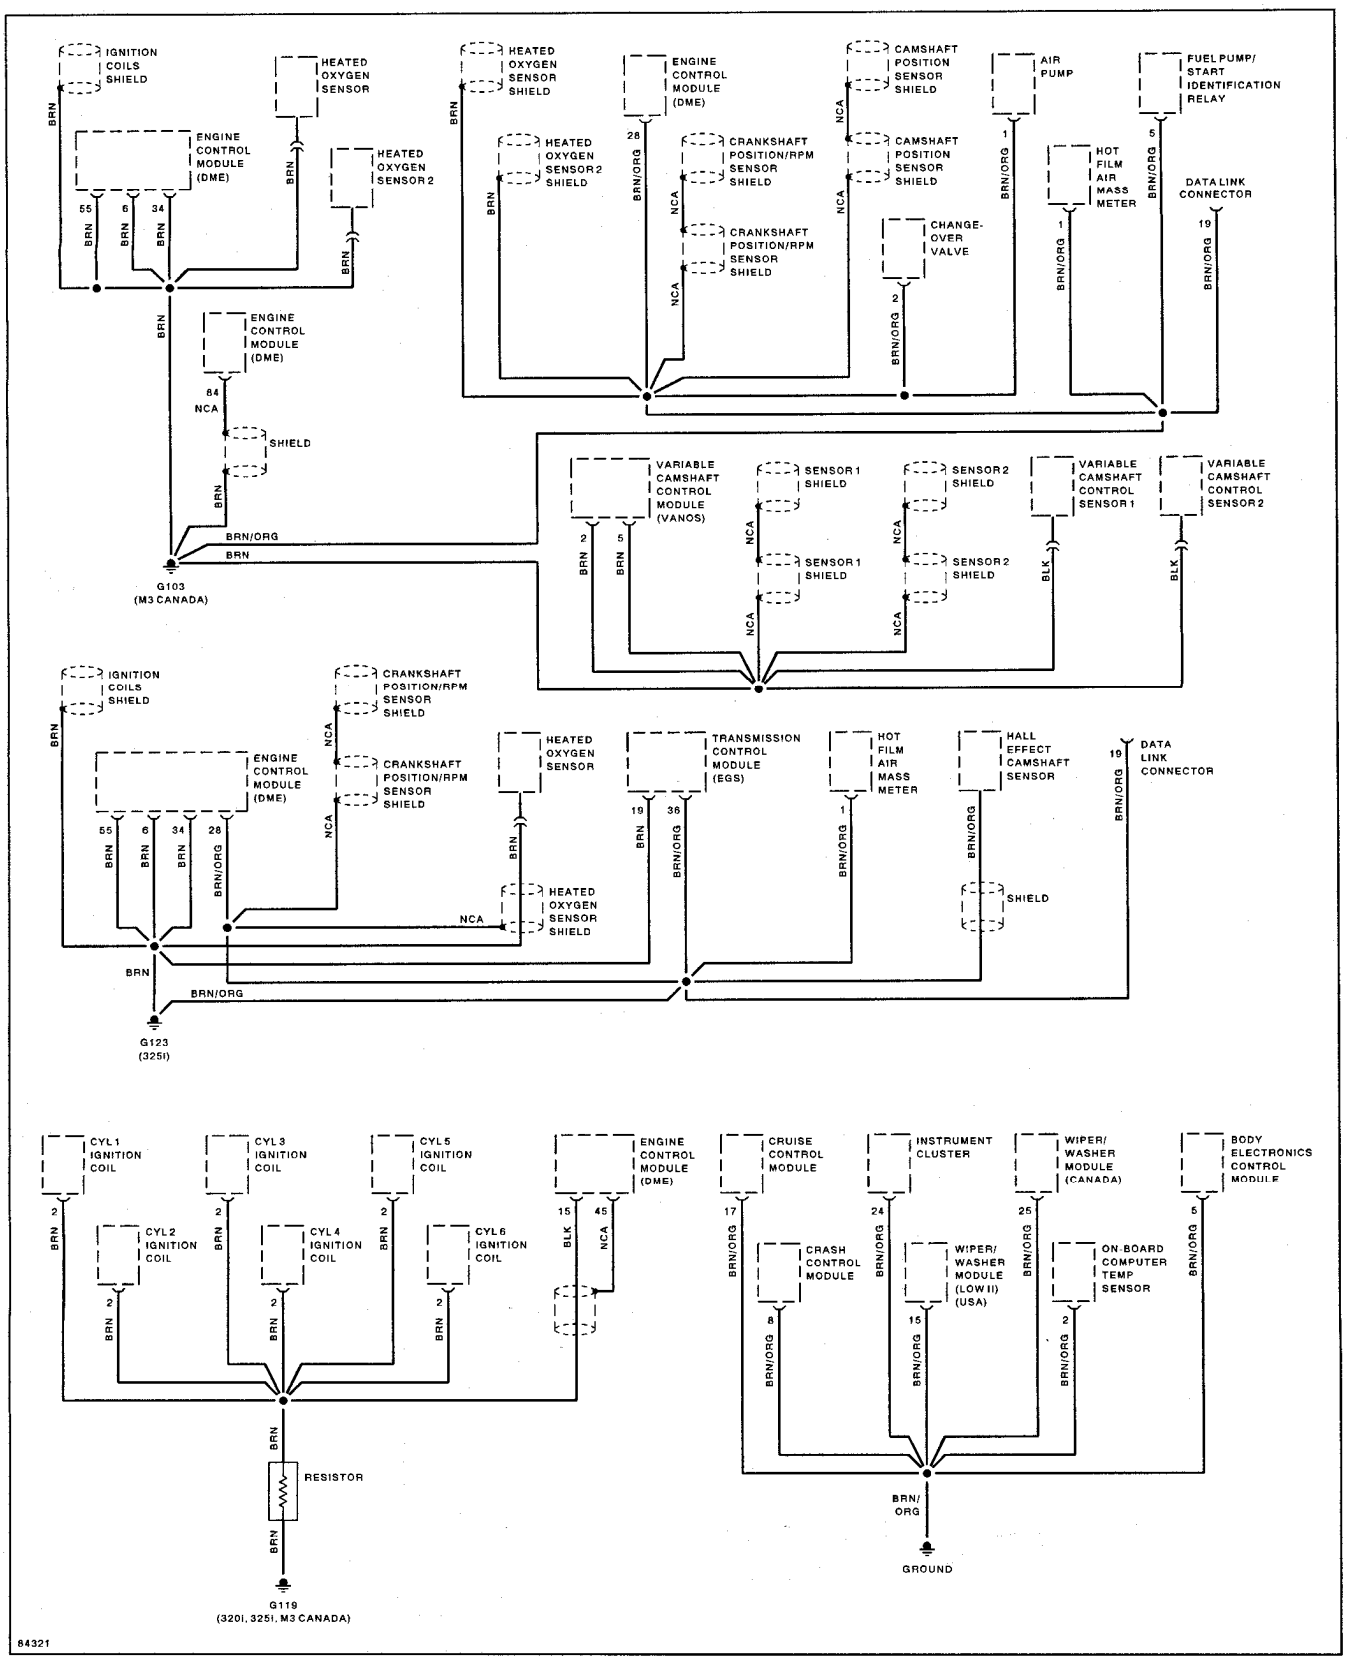


Ground Distribution

1994-95 Except 318ti (2 of 5)

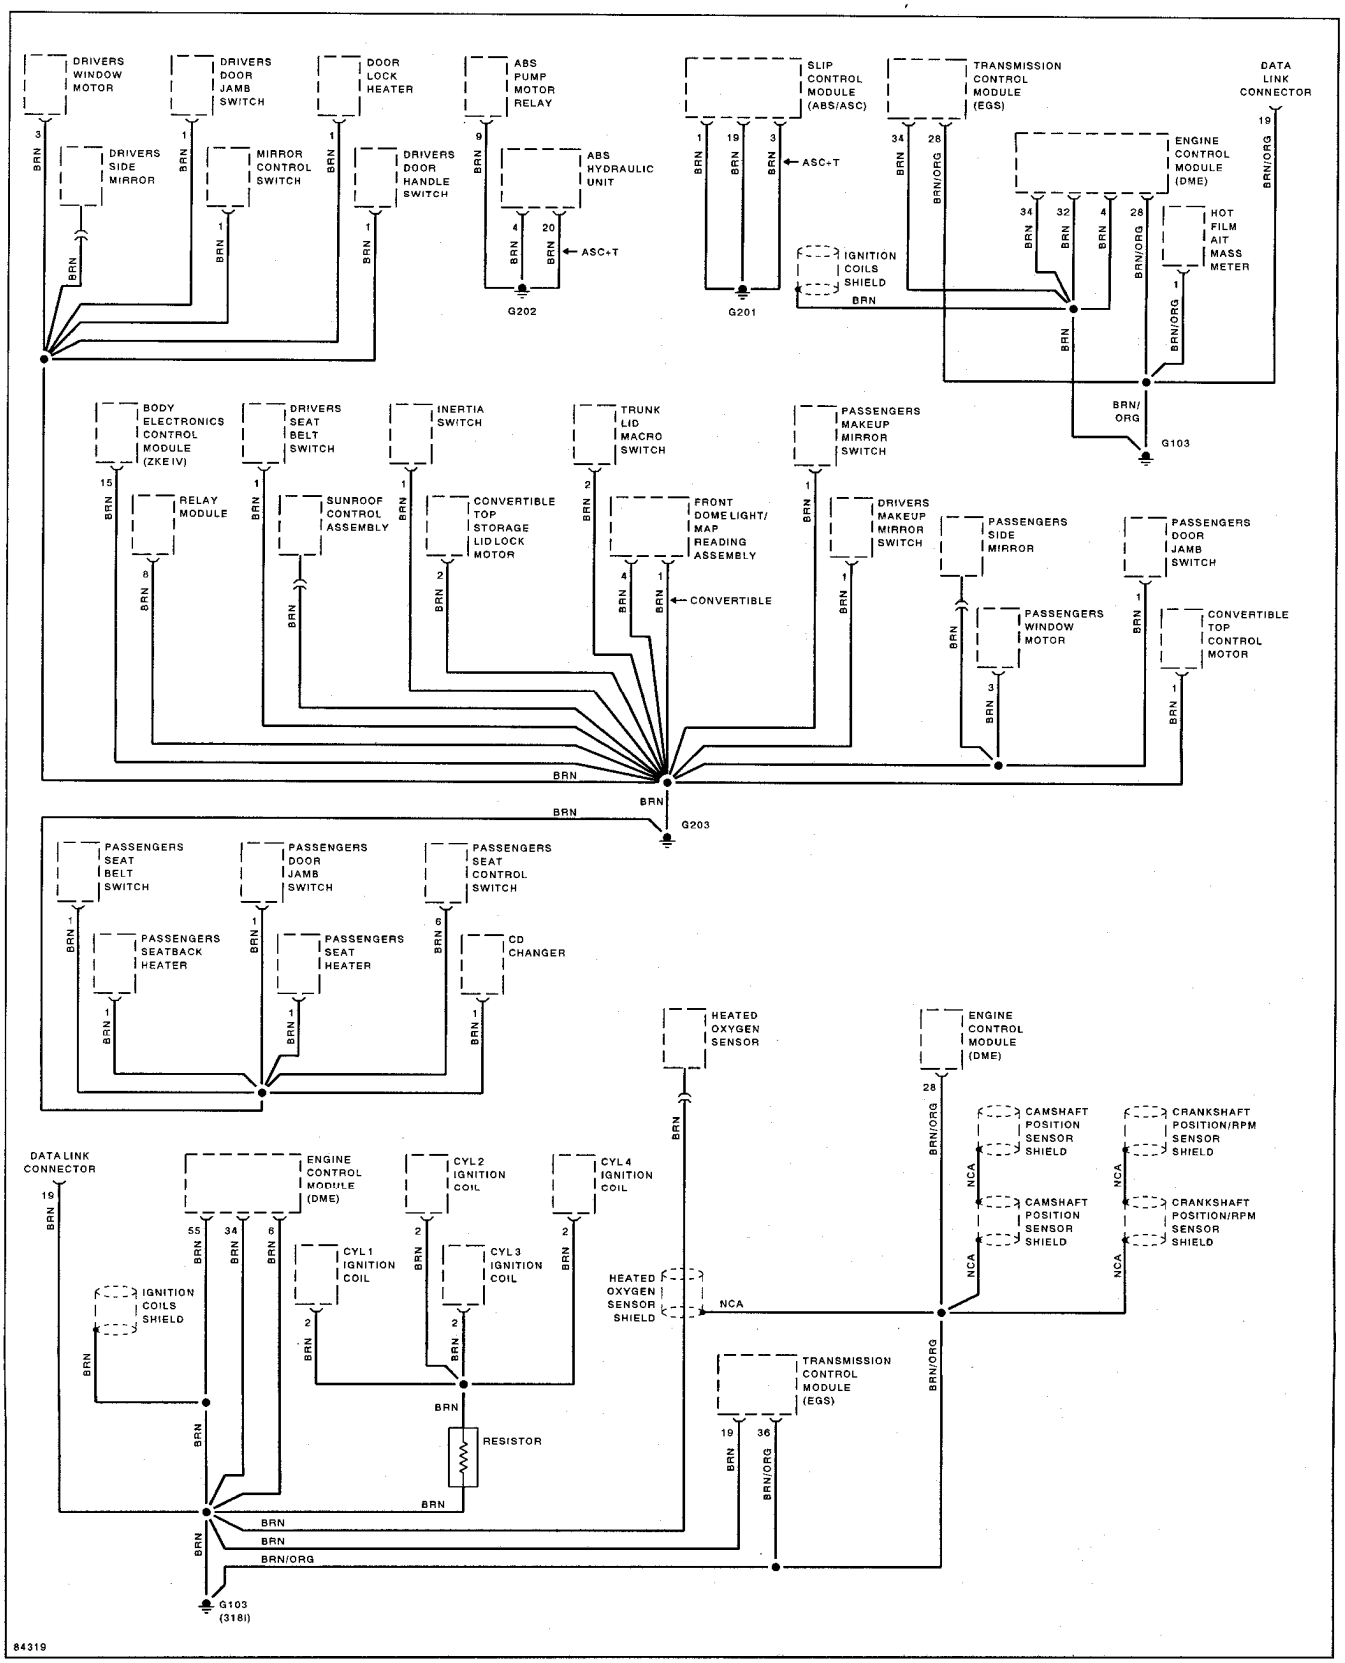


Ground Distribution

1994-95 Except 318ti (1 of 5)

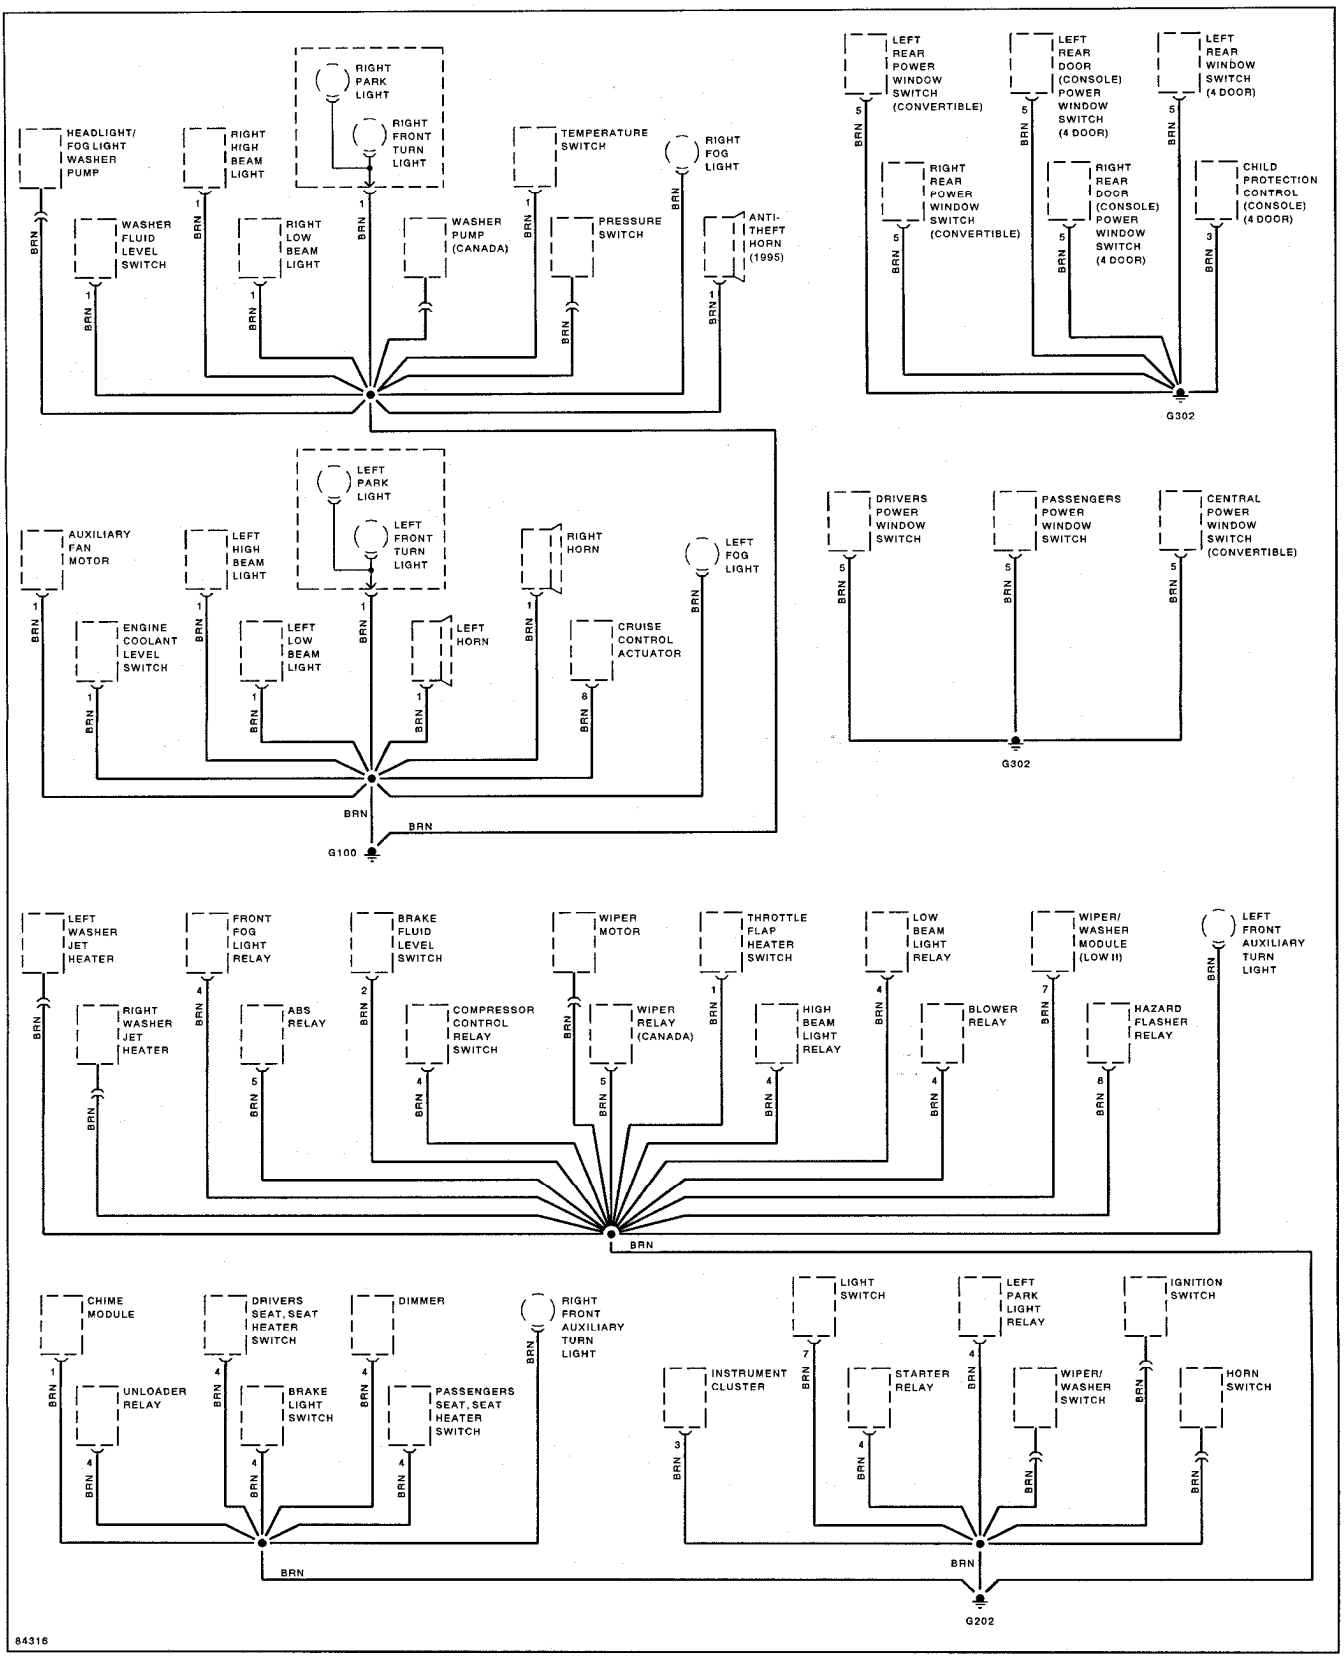


Ground Distribution

1992-93 (5 of 5)

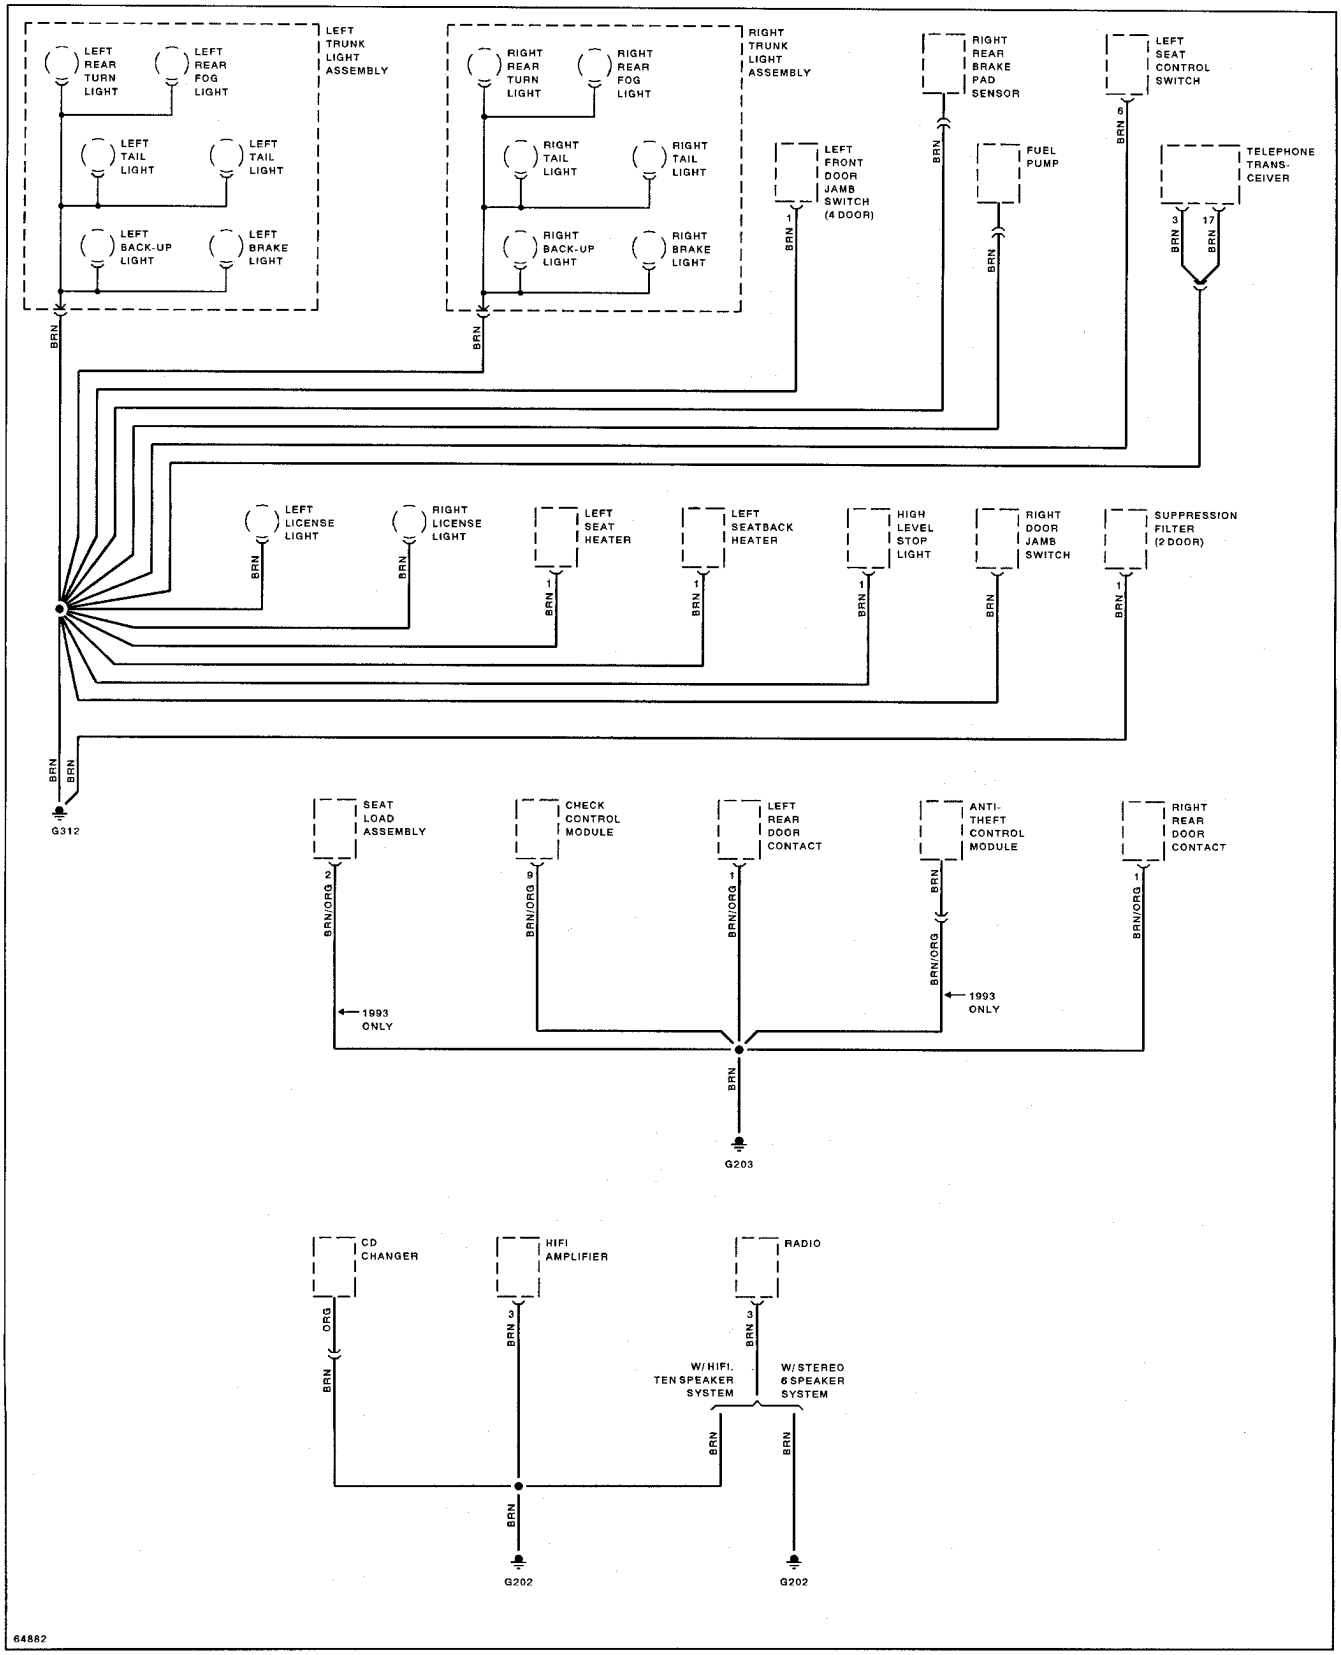


Ground Distribution

1992-93 (4 of 5)

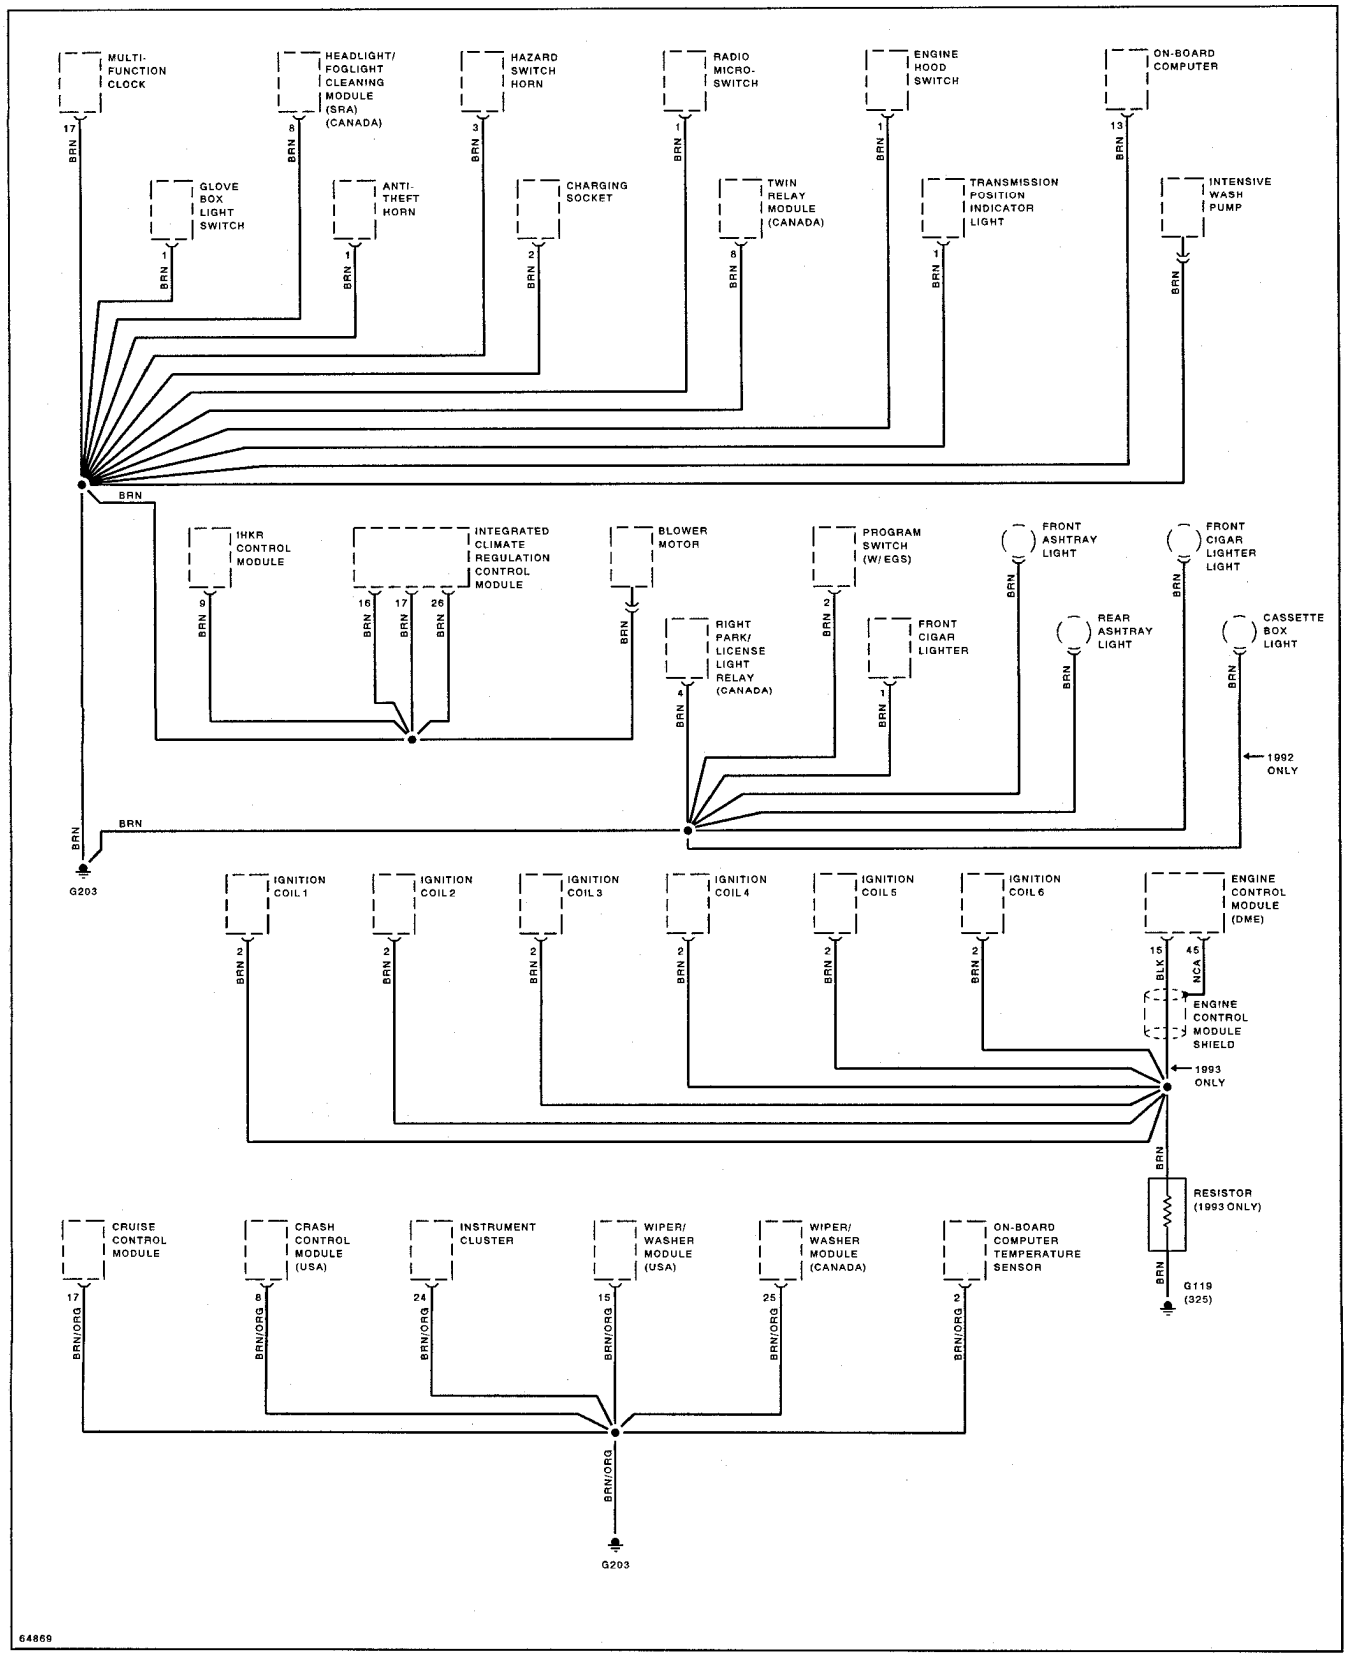


Ground Distribution

1992-93 (3 of 5)

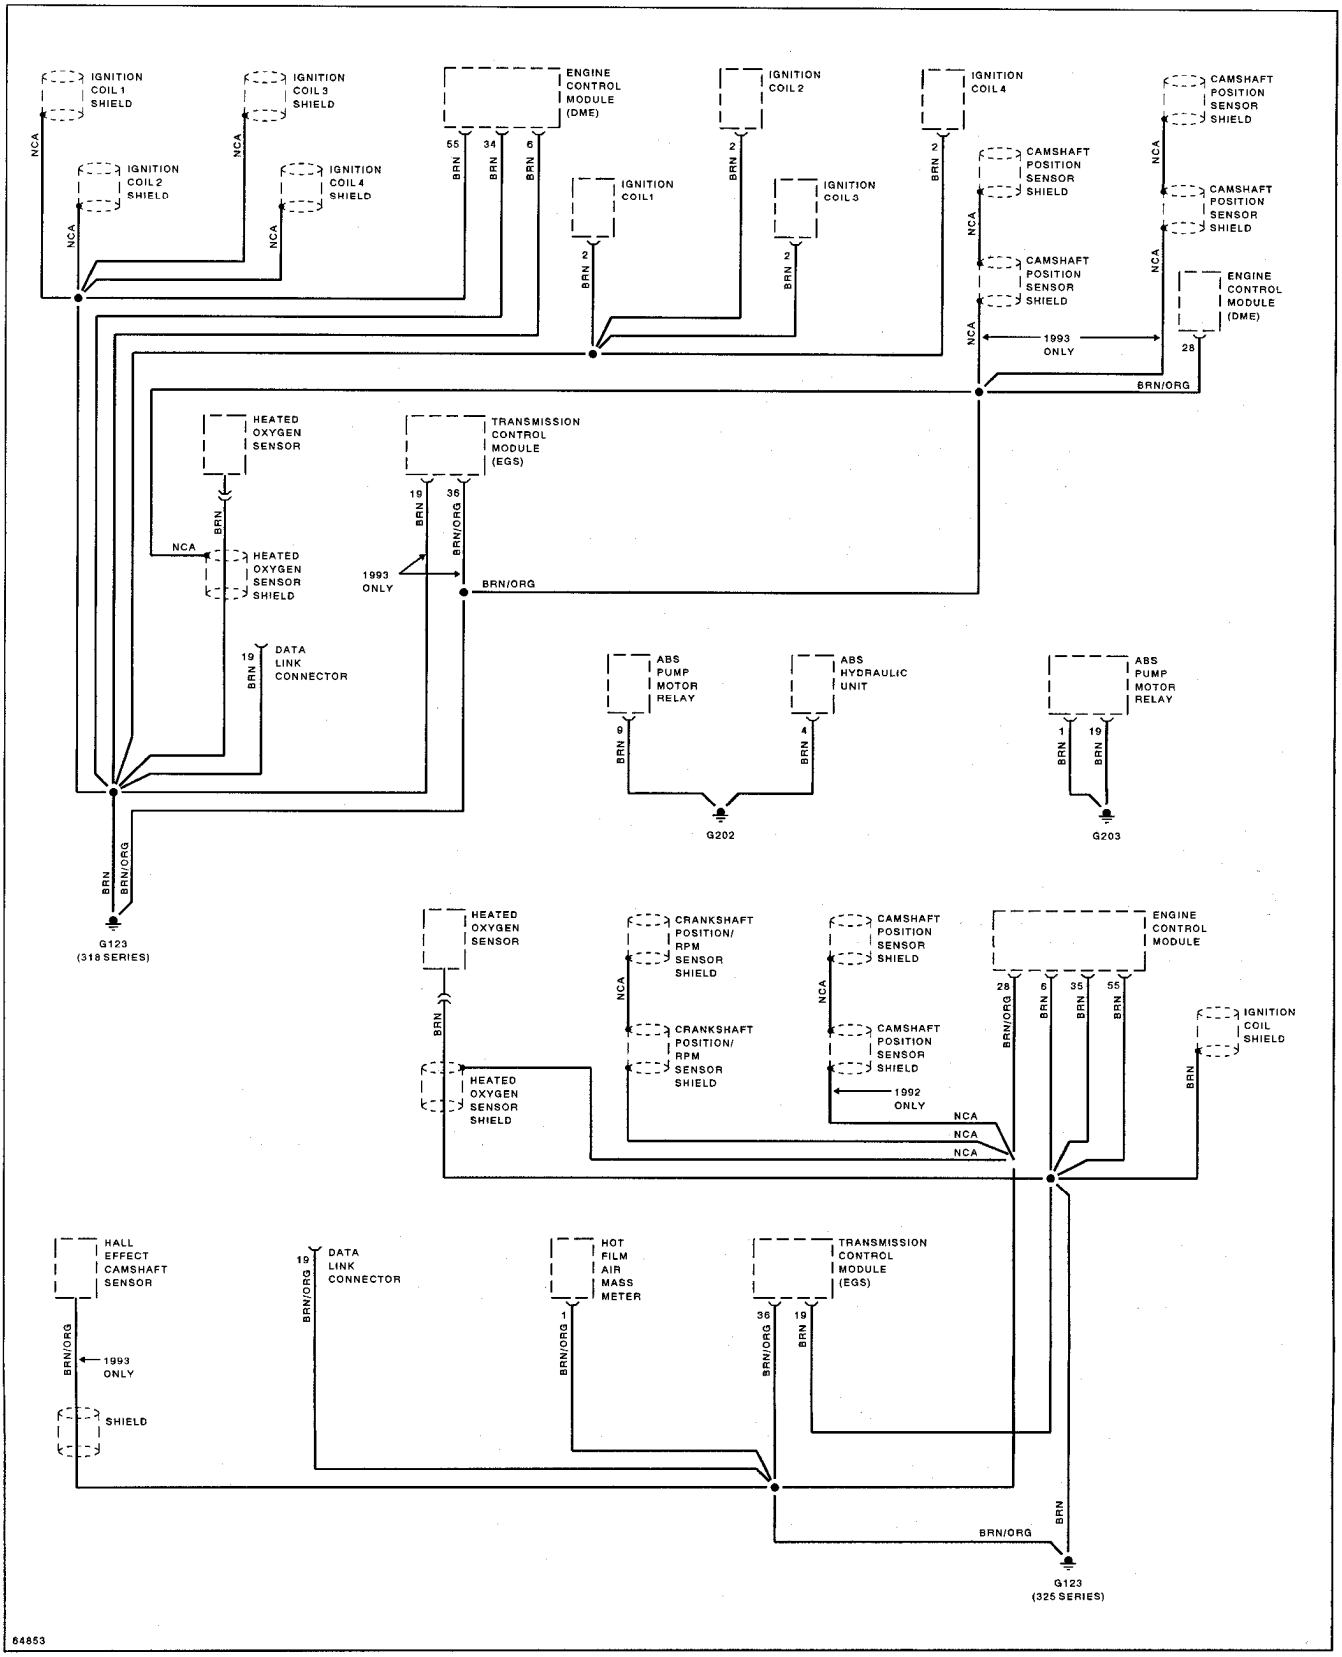

Ground Distribution


1992-93 (2 of 5)

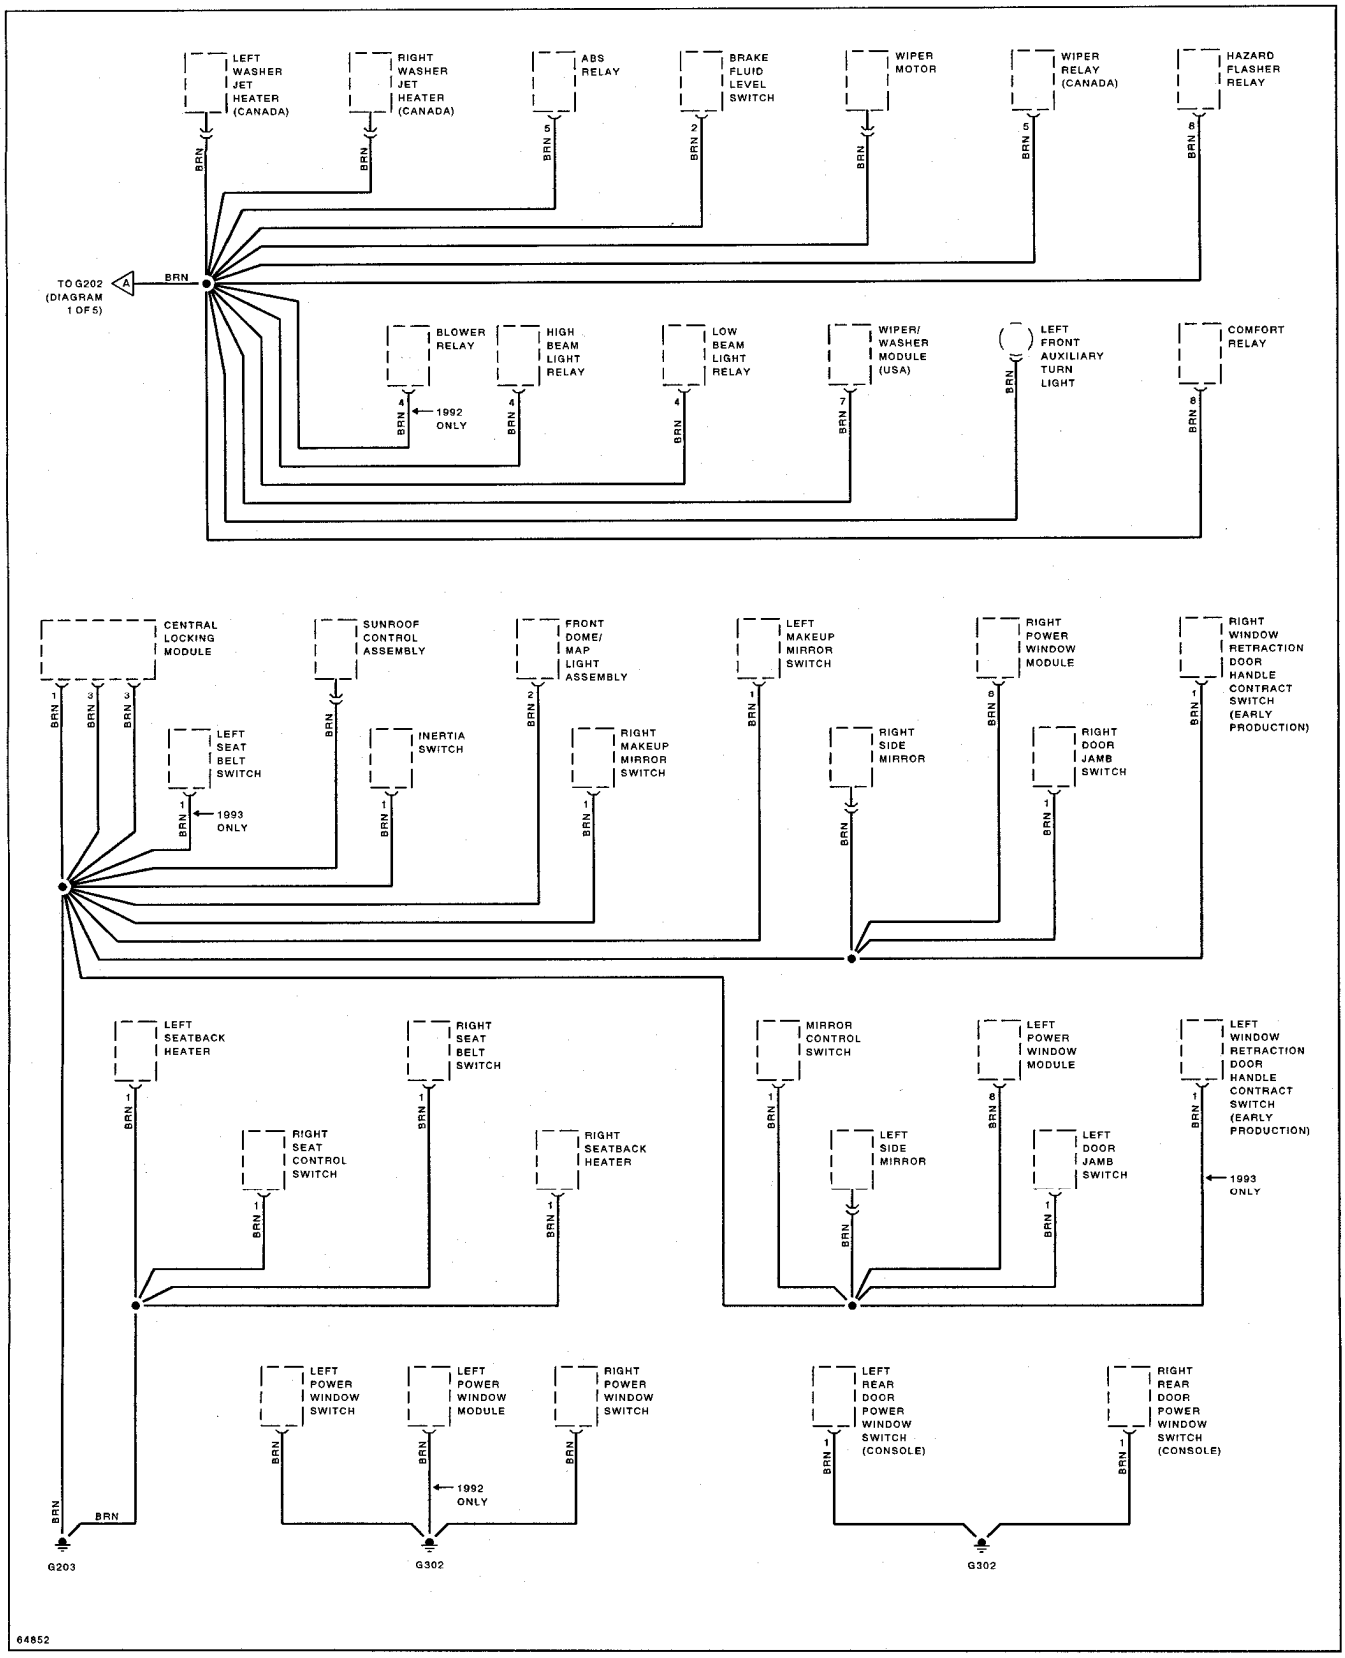

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Ground Distribution

1992-93 (1 of 5)

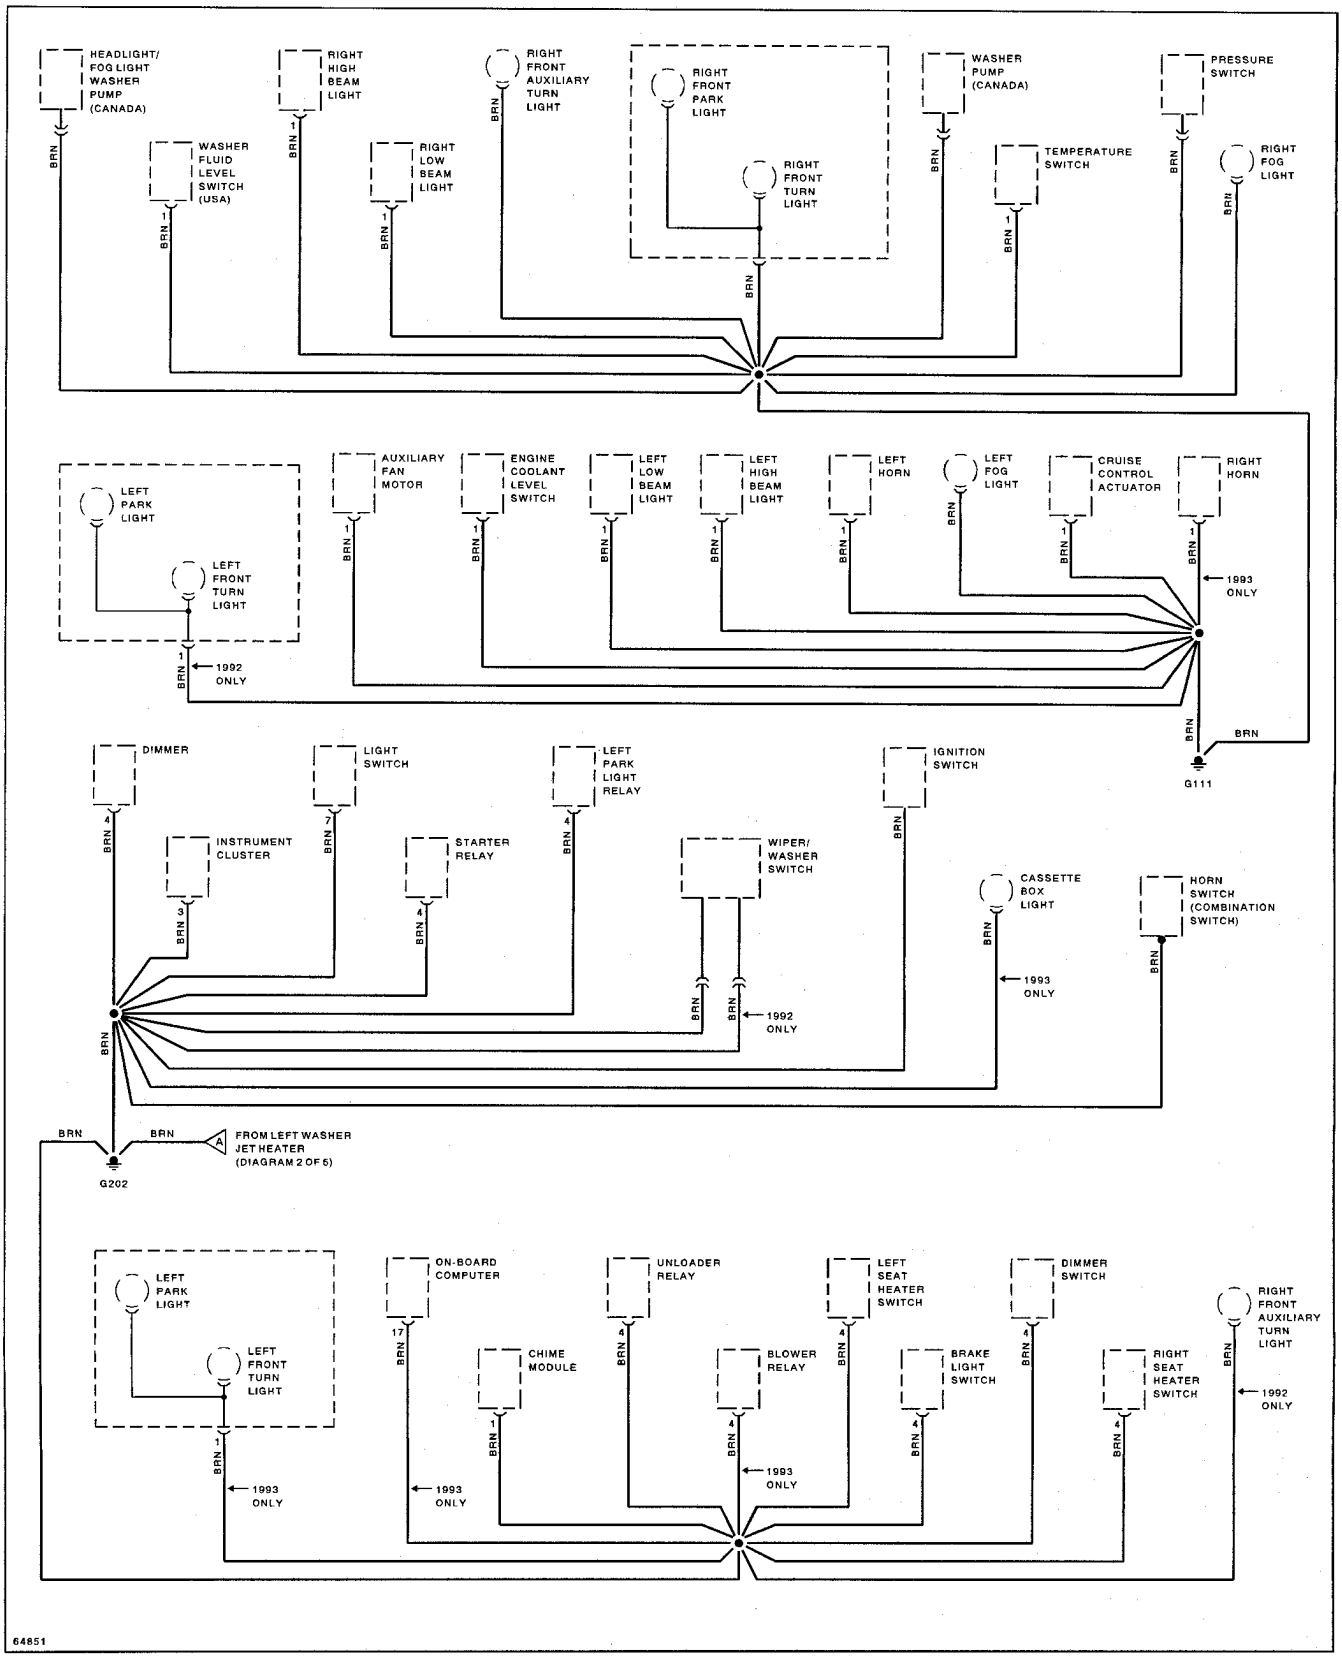


Power Distribution

1998 318ti (3 of 3)

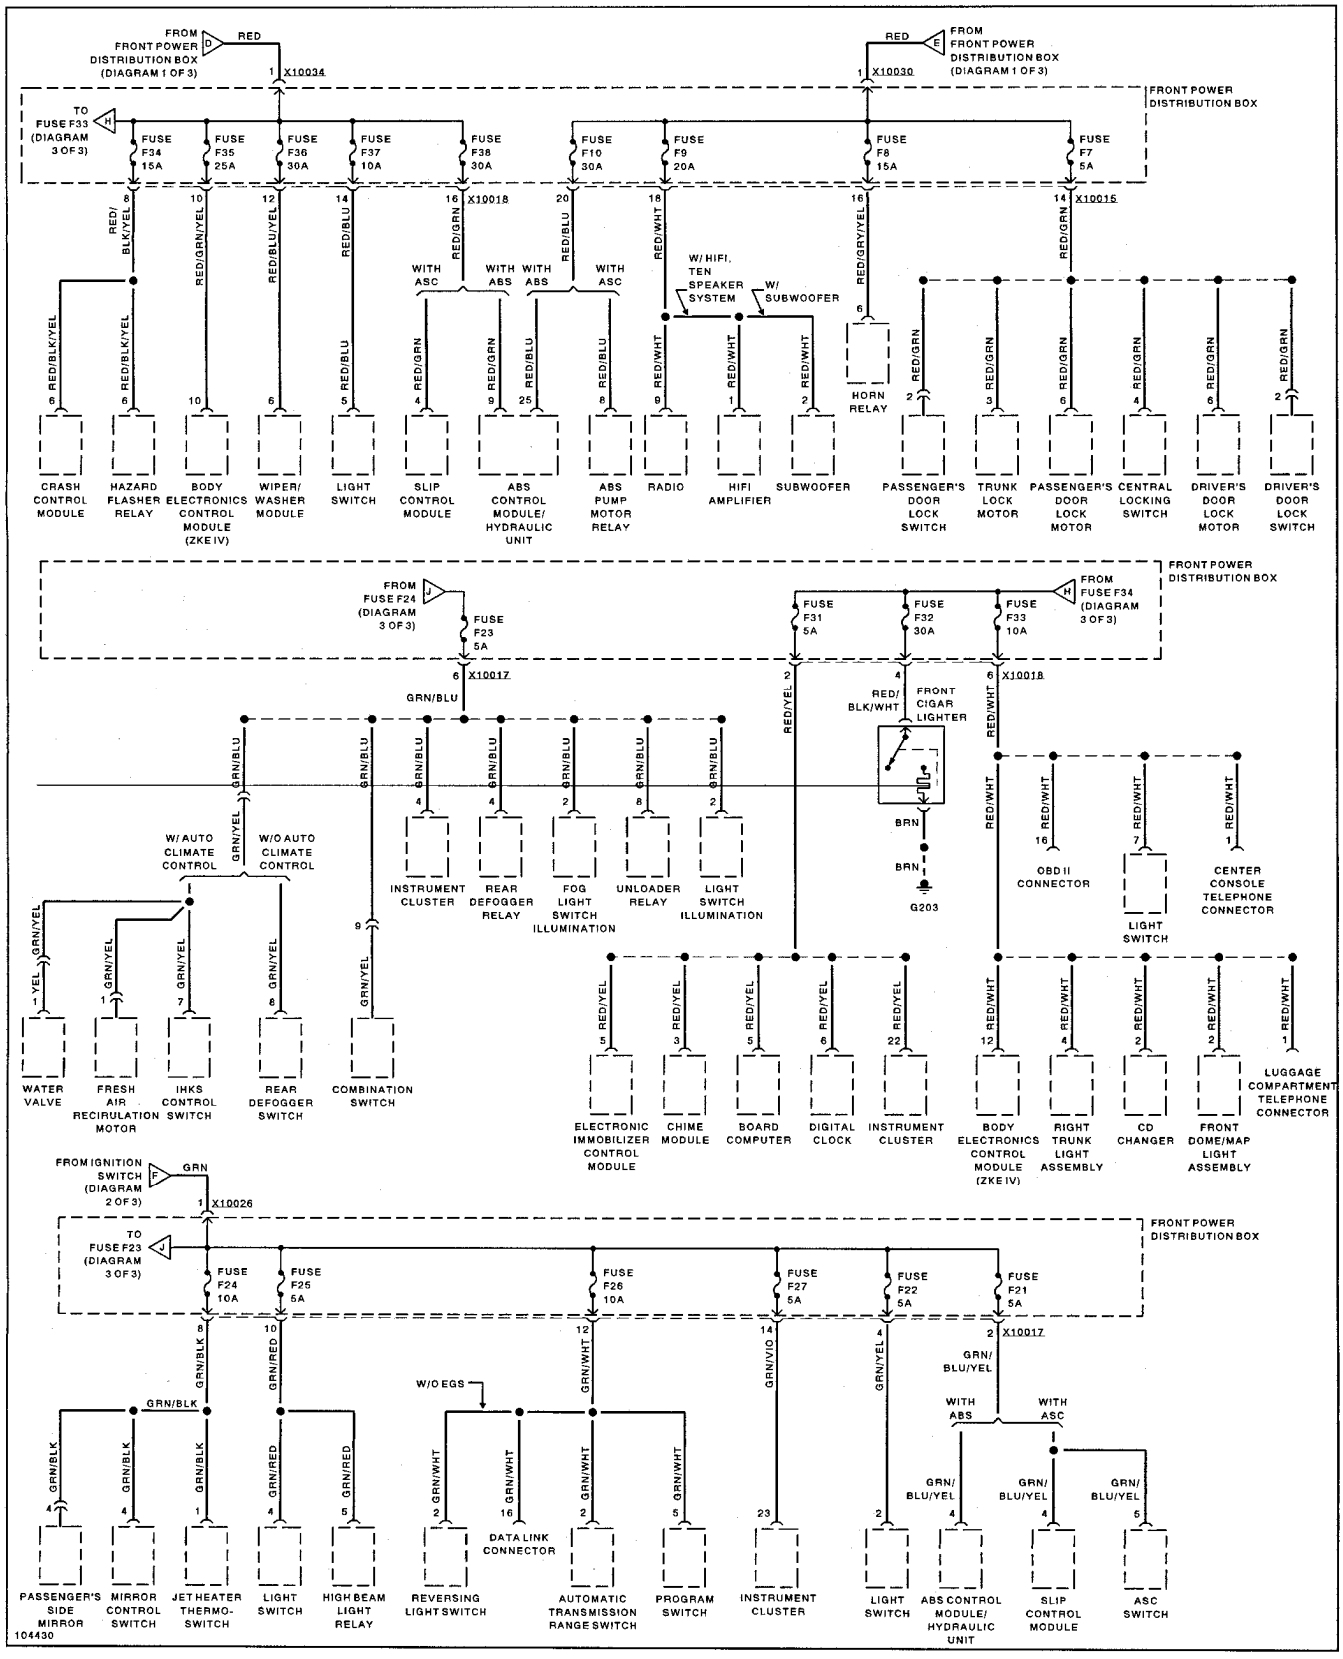


Power Distribution

1998 318ti (2 of 3)

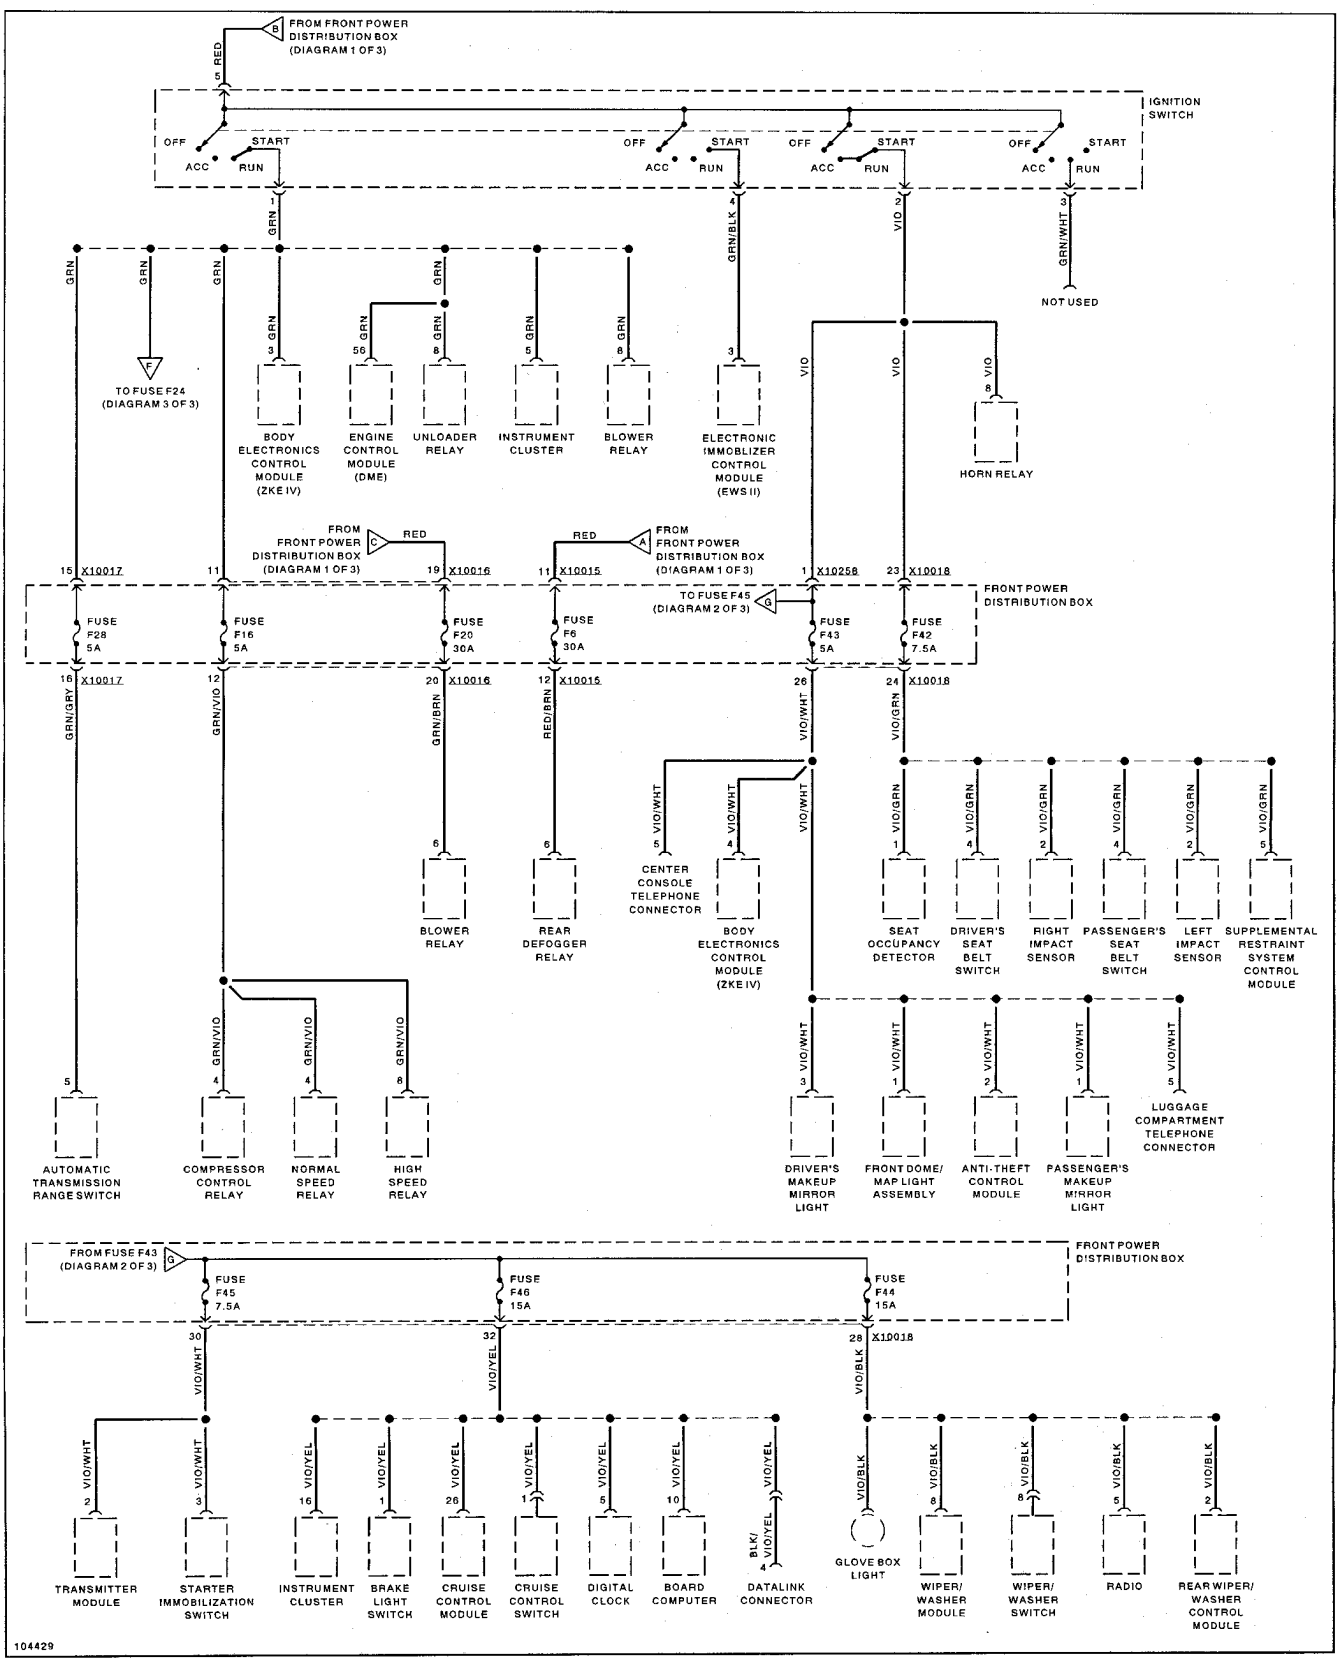


Power Distribution

1998 318ti (1 of 3)

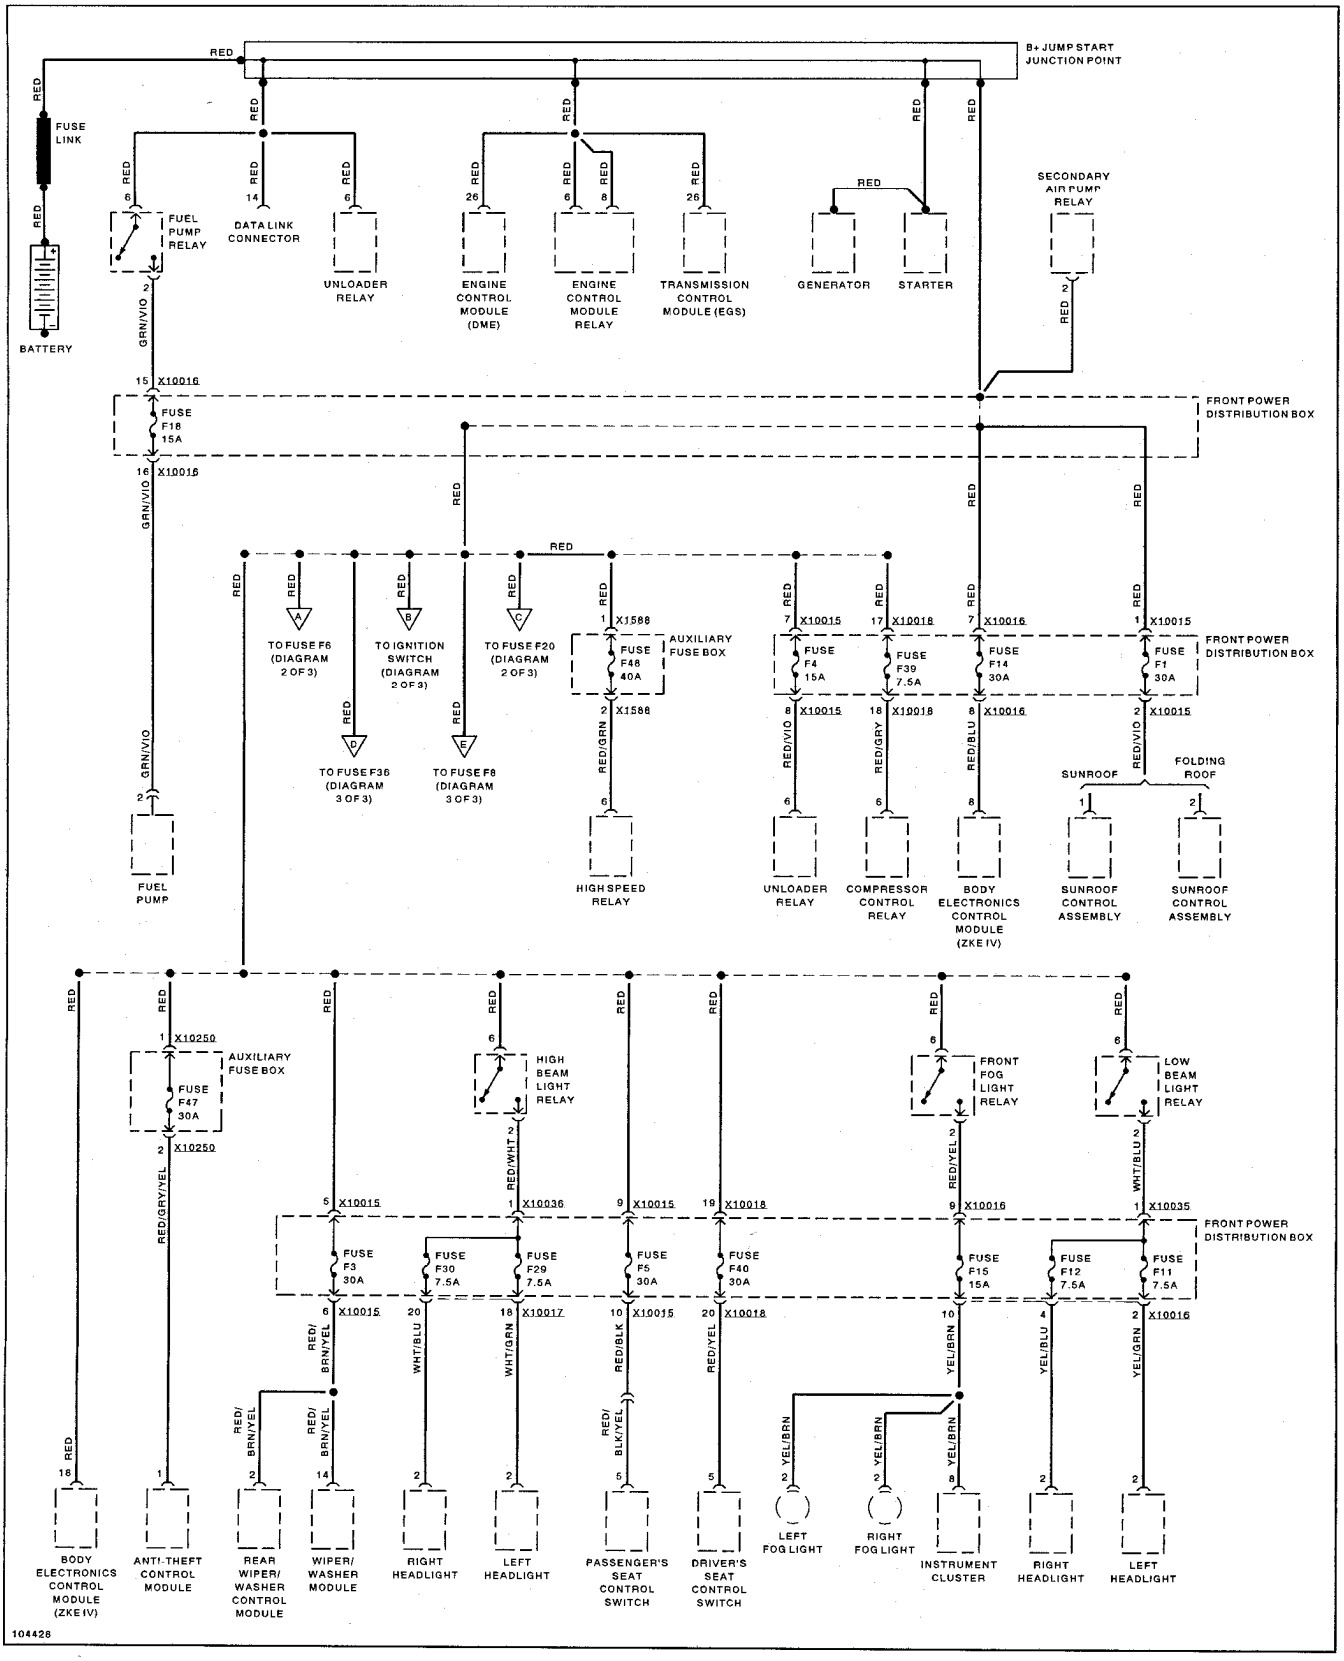


Power Distribution

1997 318ti (3 of 3)

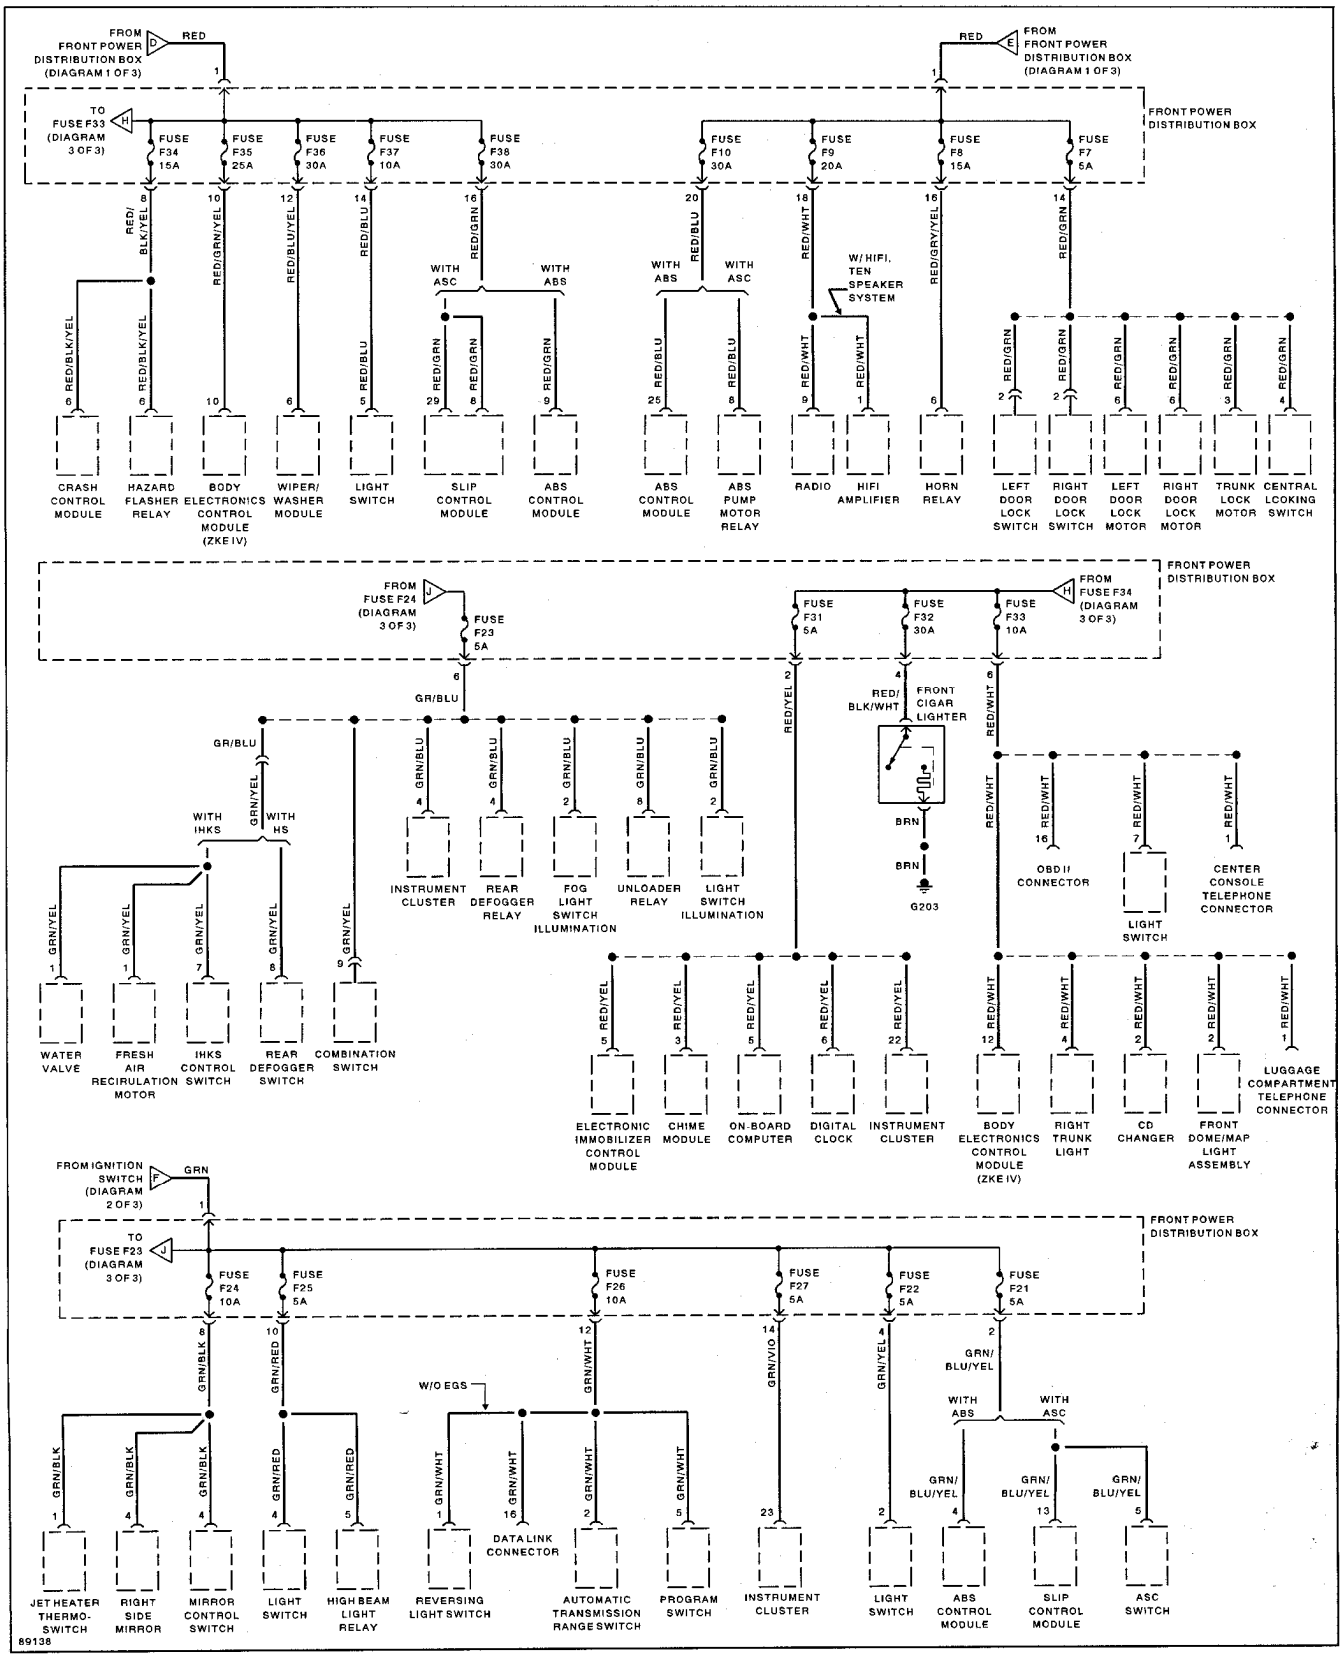


Power Distribution

1997 318ti (2 of 3)

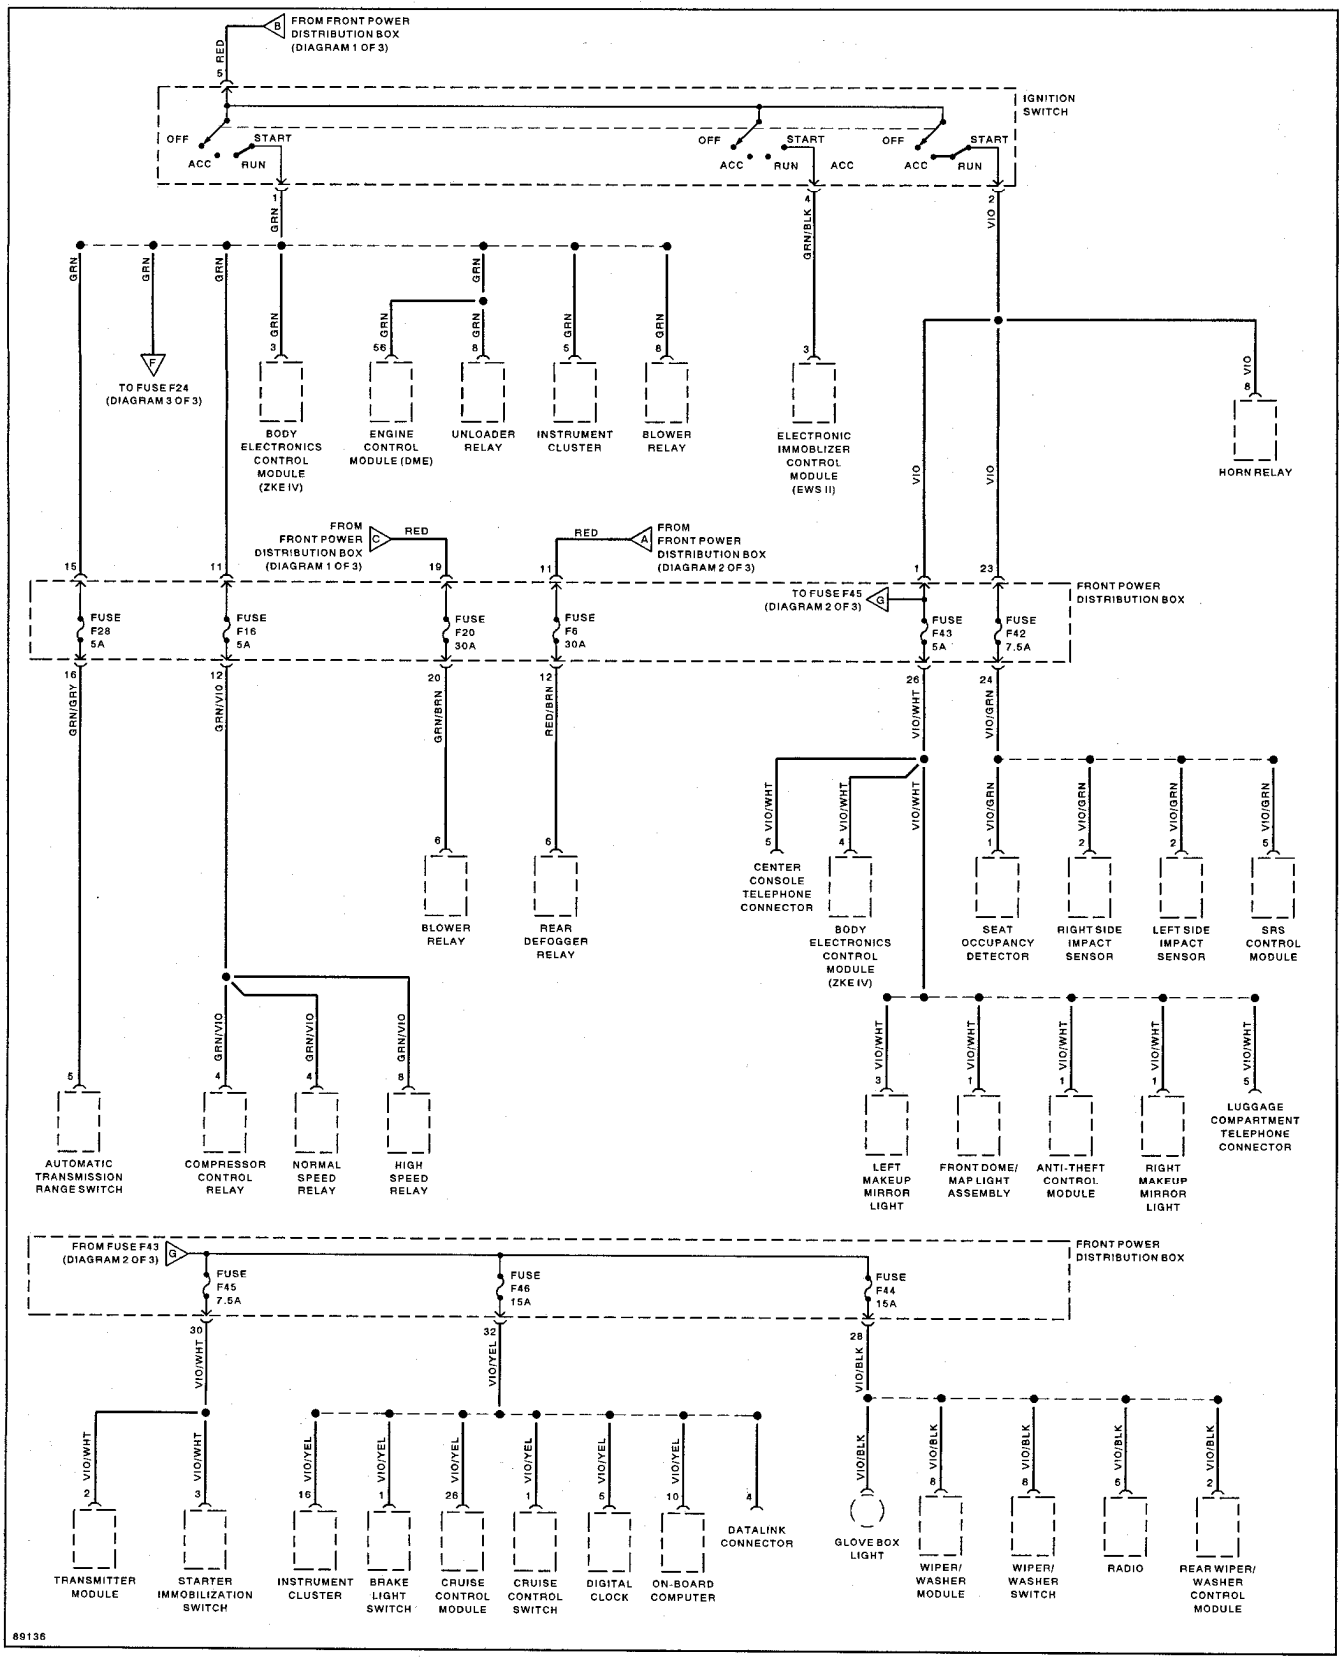


Power Distribution

1997 318ti (1 of 3)

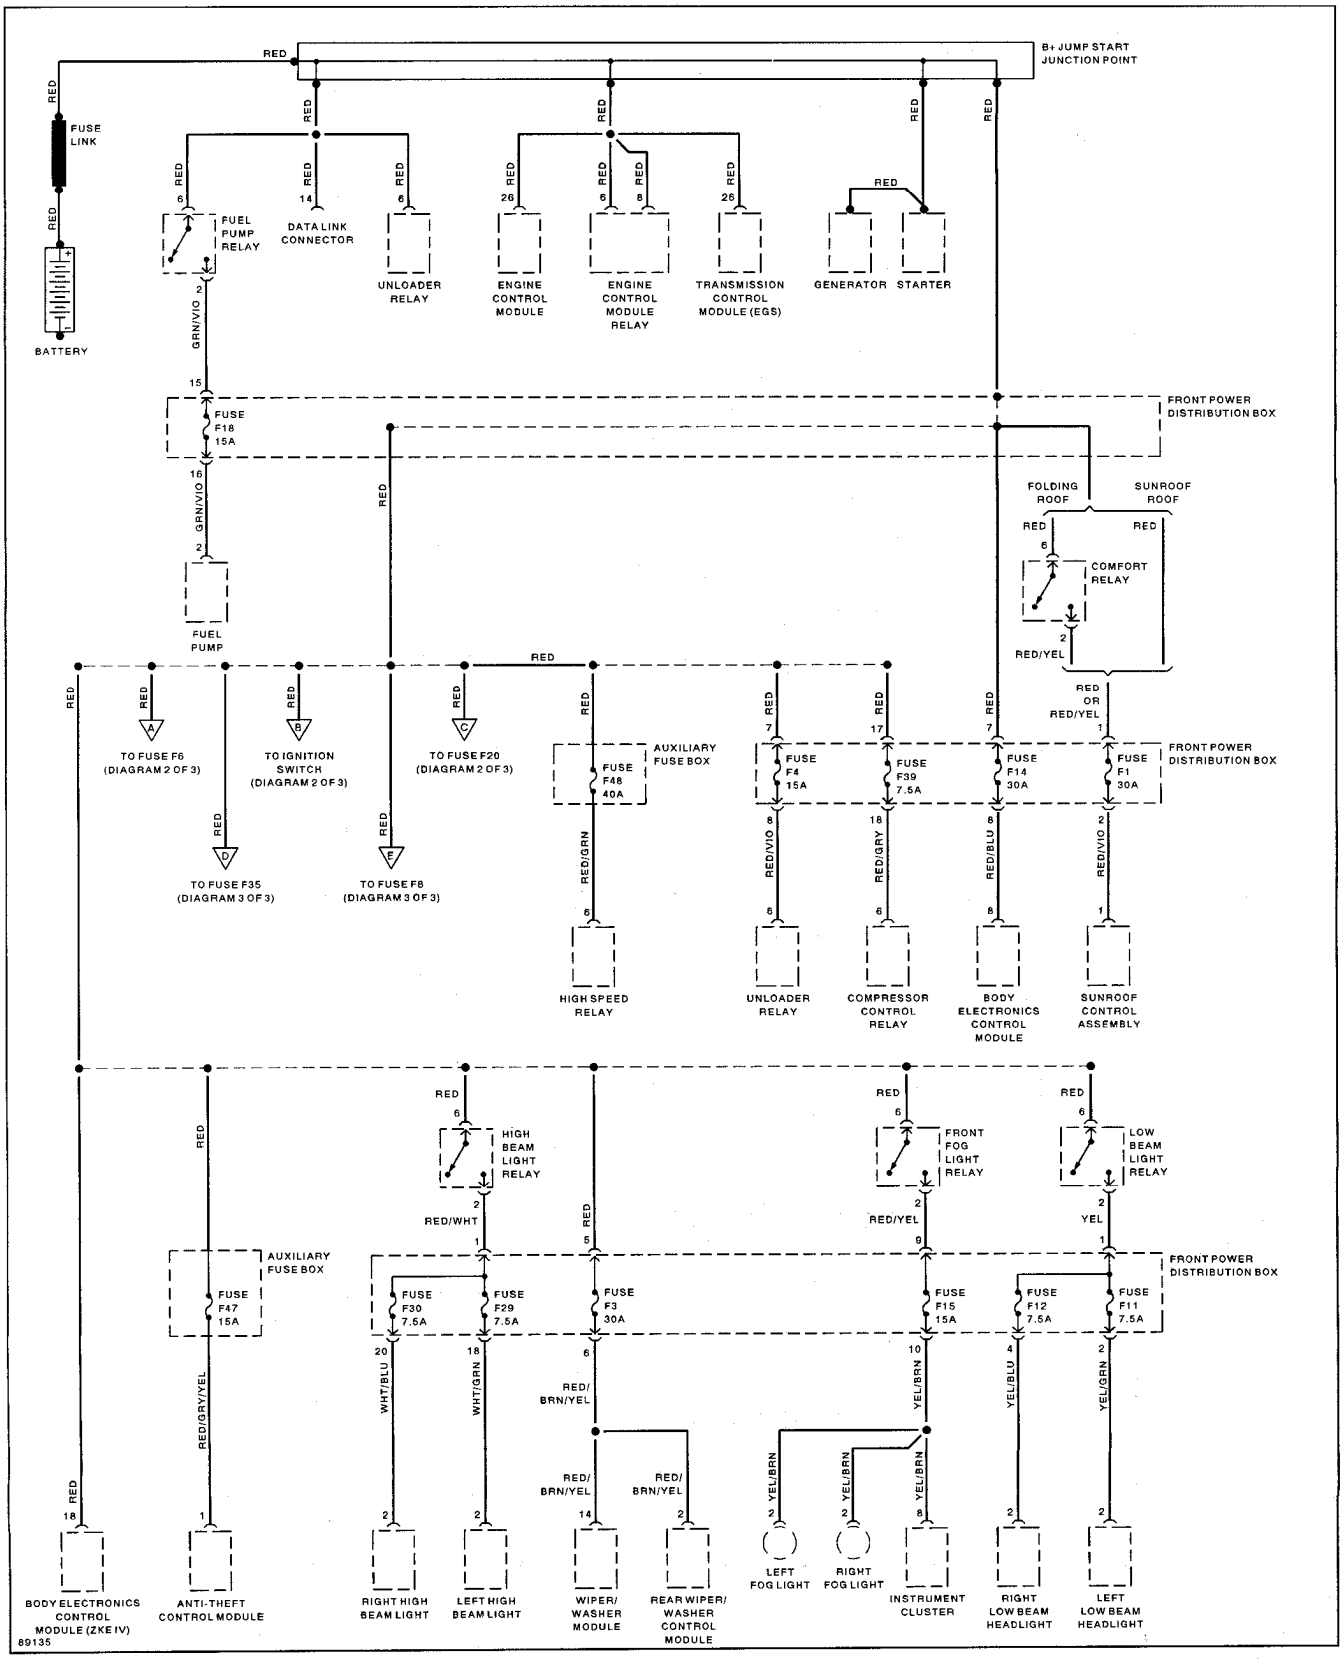

Power Distribution


1995-96 318ti (5 of 5)

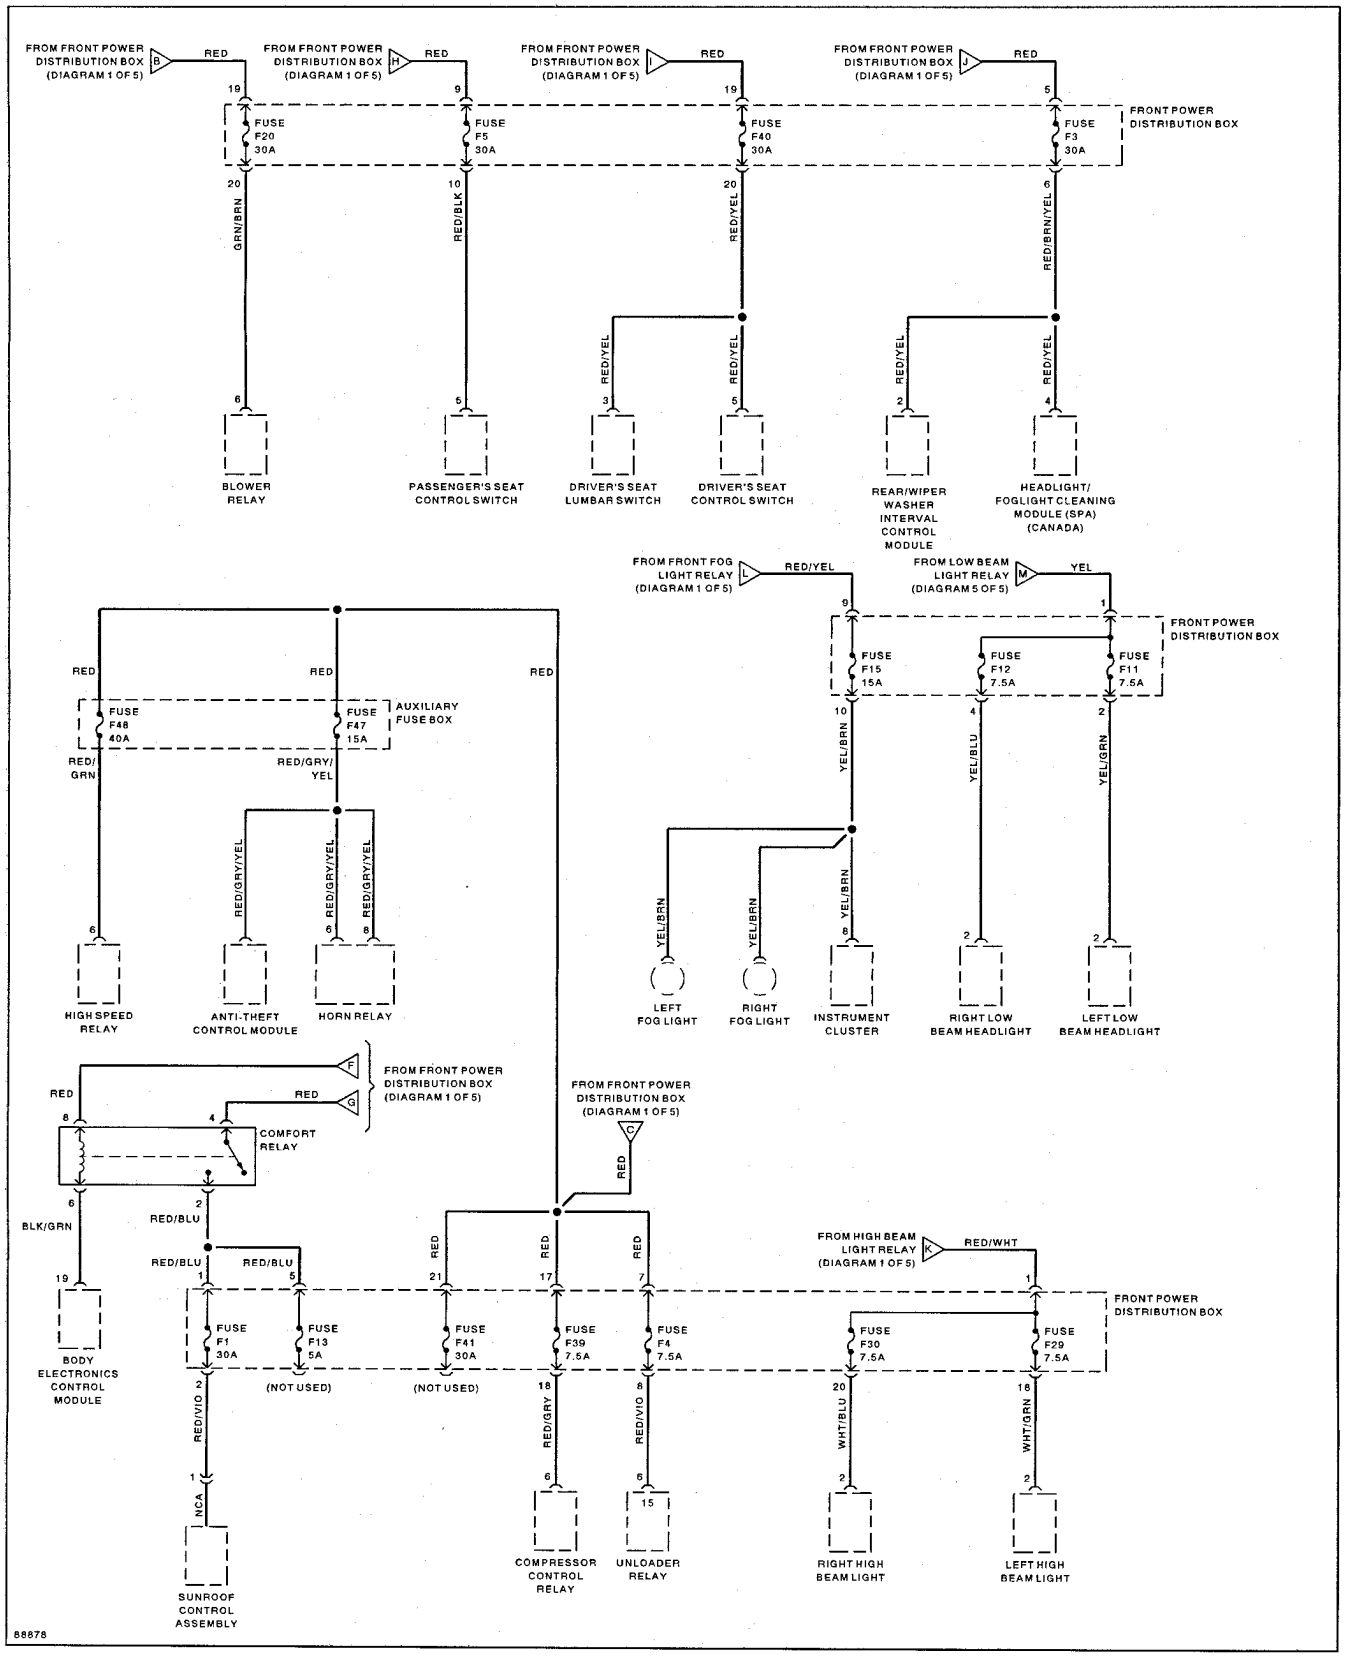

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Power Distribution

1995-96 318ti (4 of 5)

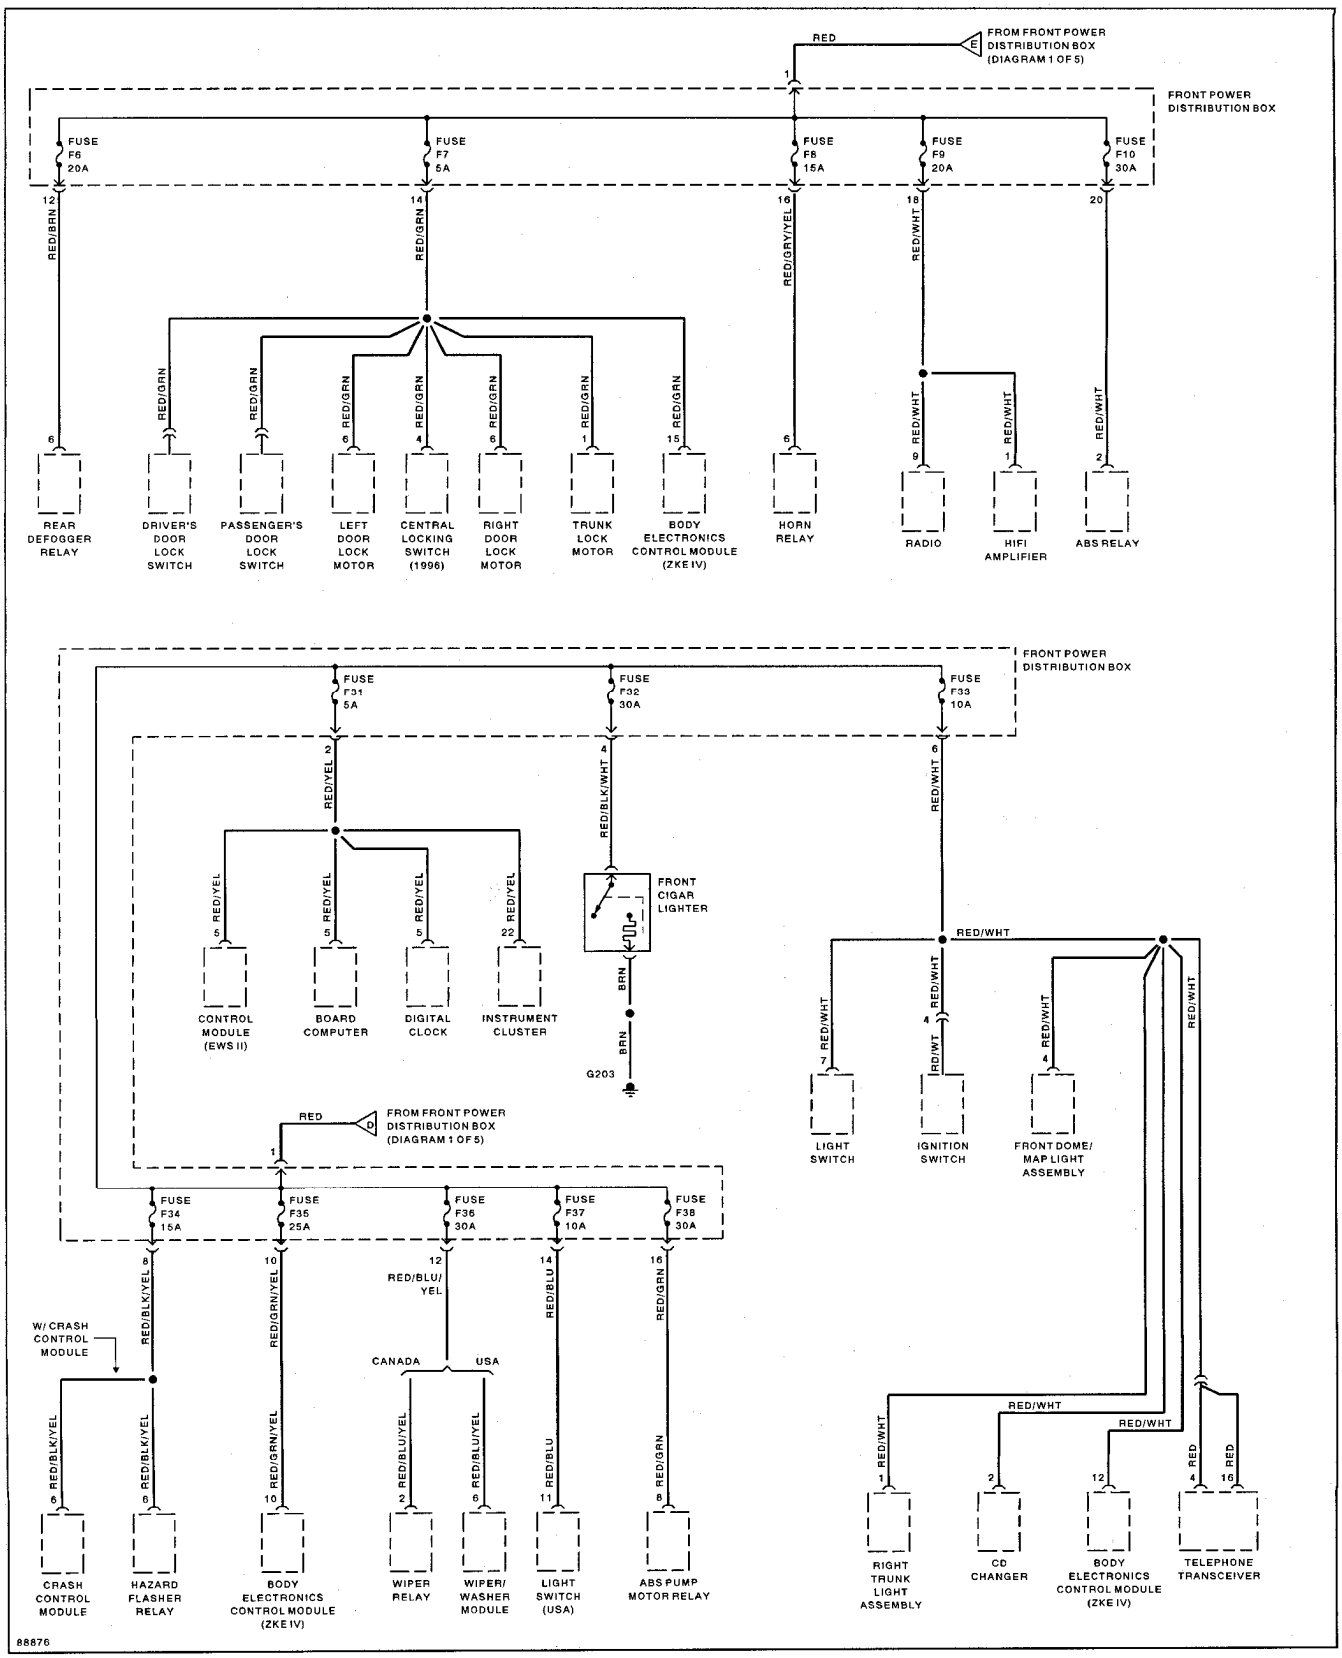


Power Distribution

1995-96 318ti (3 of 5)

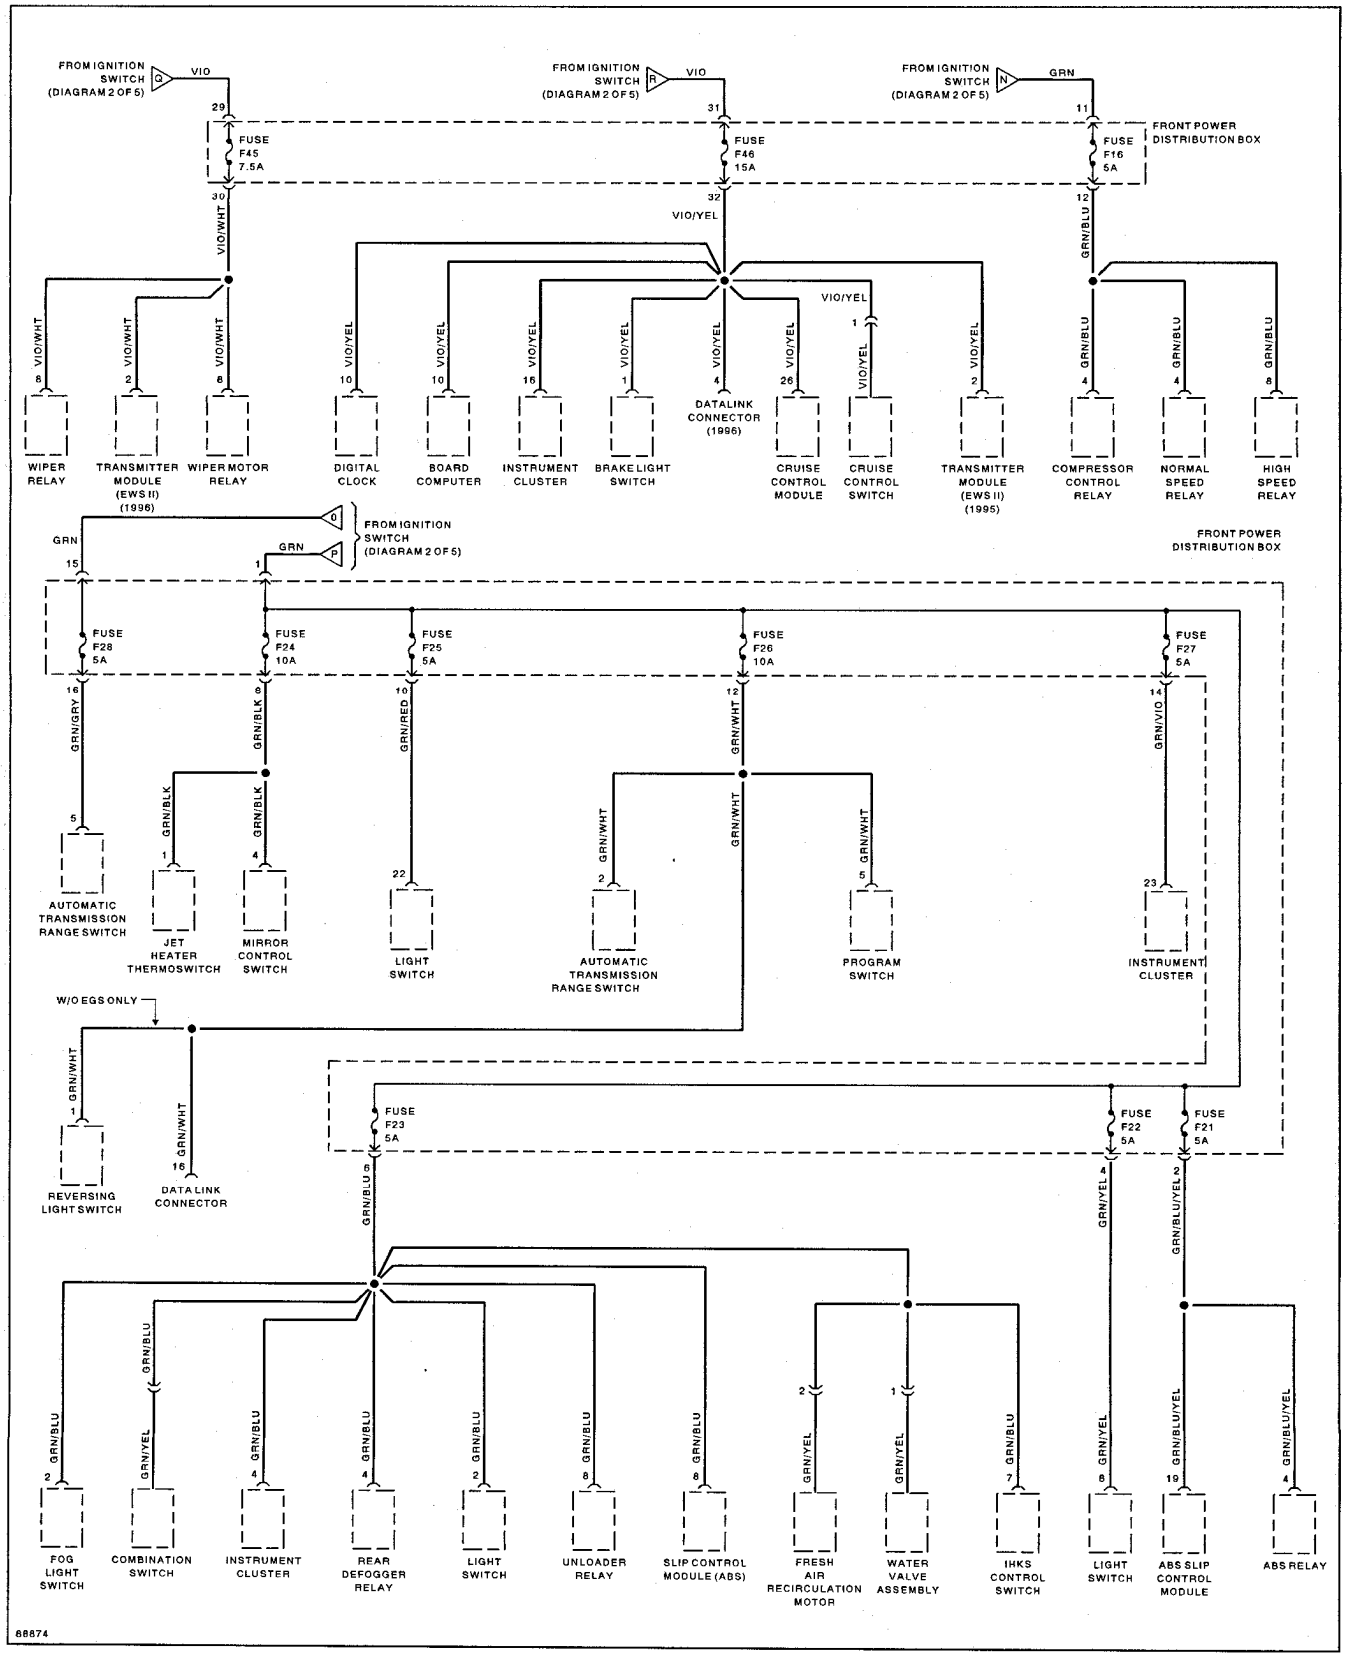


Power Distribution

1995-96 318ti (2 of 5)

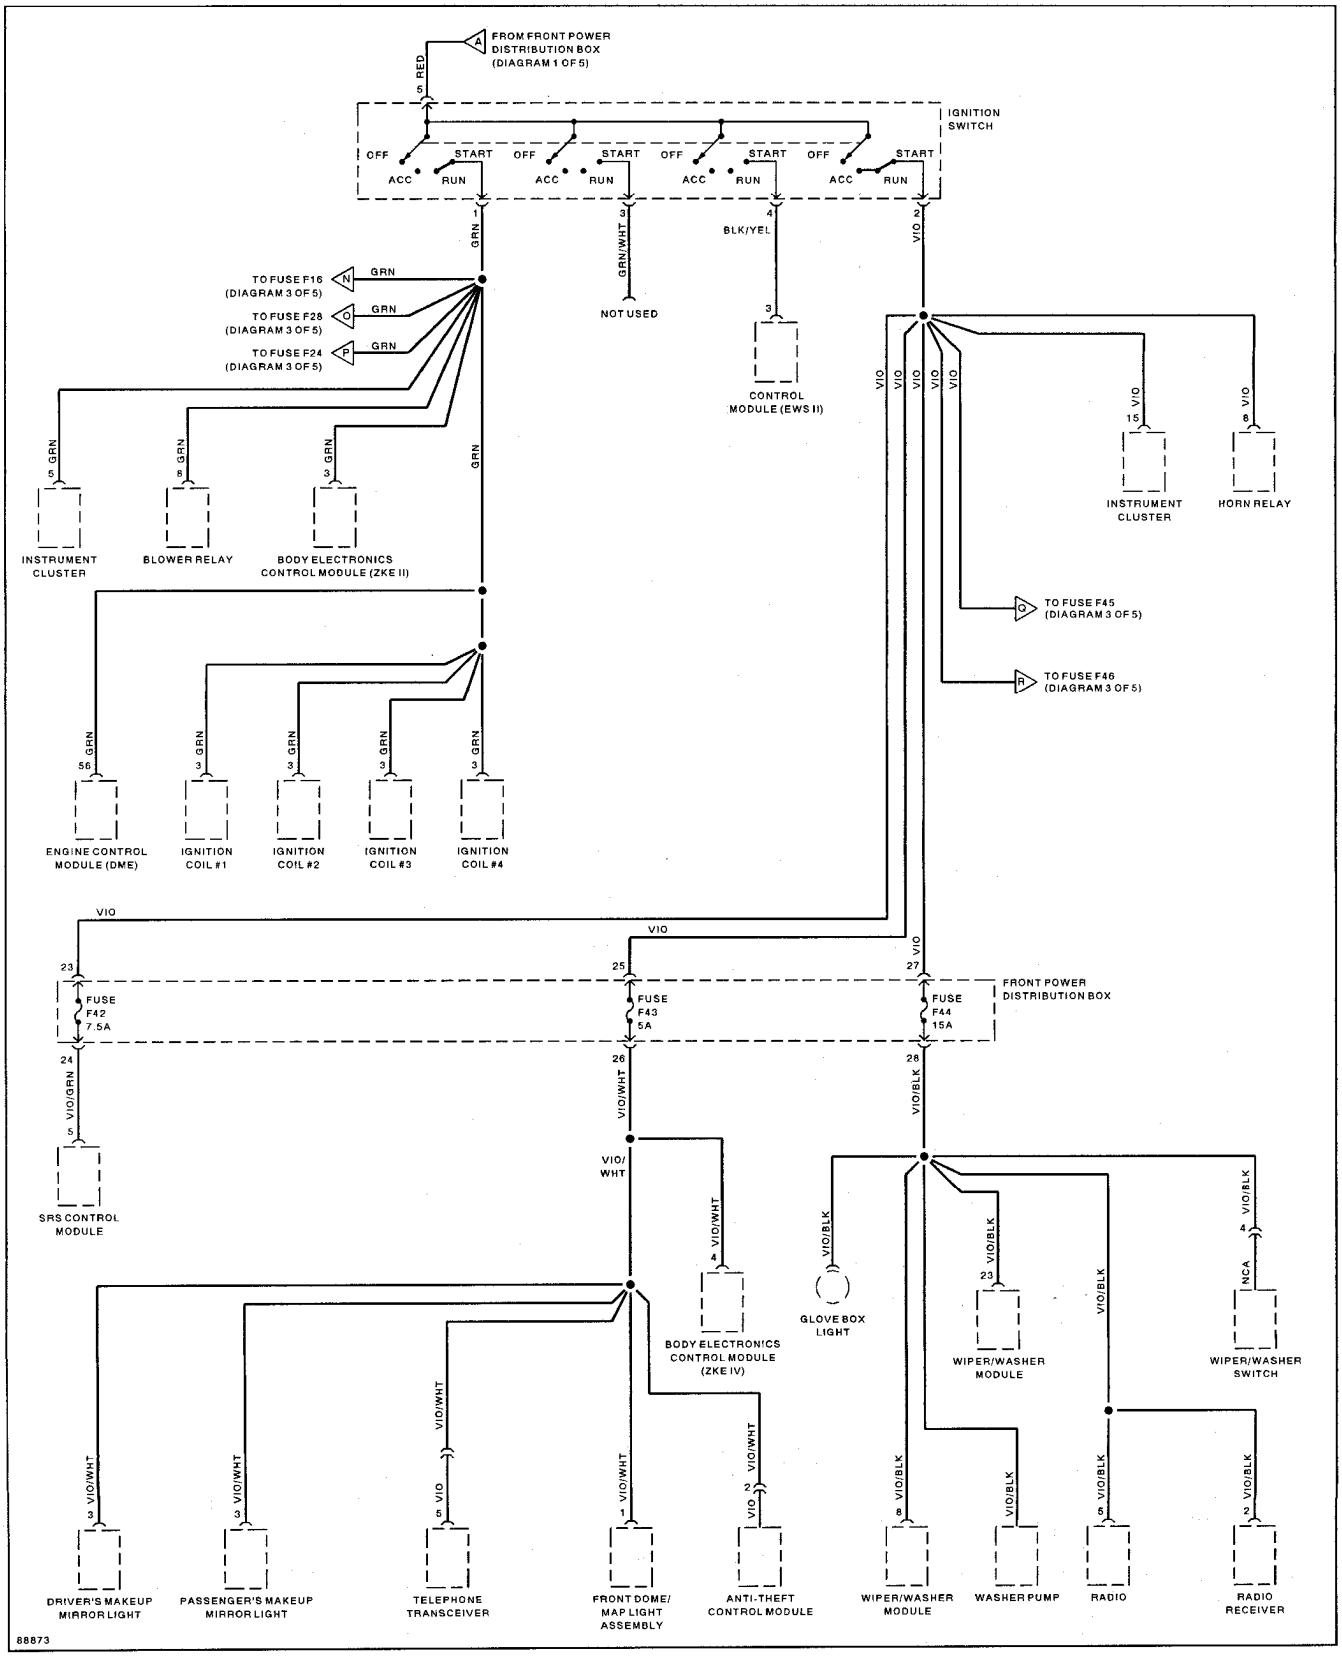


Power Distribution

1995-96 318ti (1 of 5)

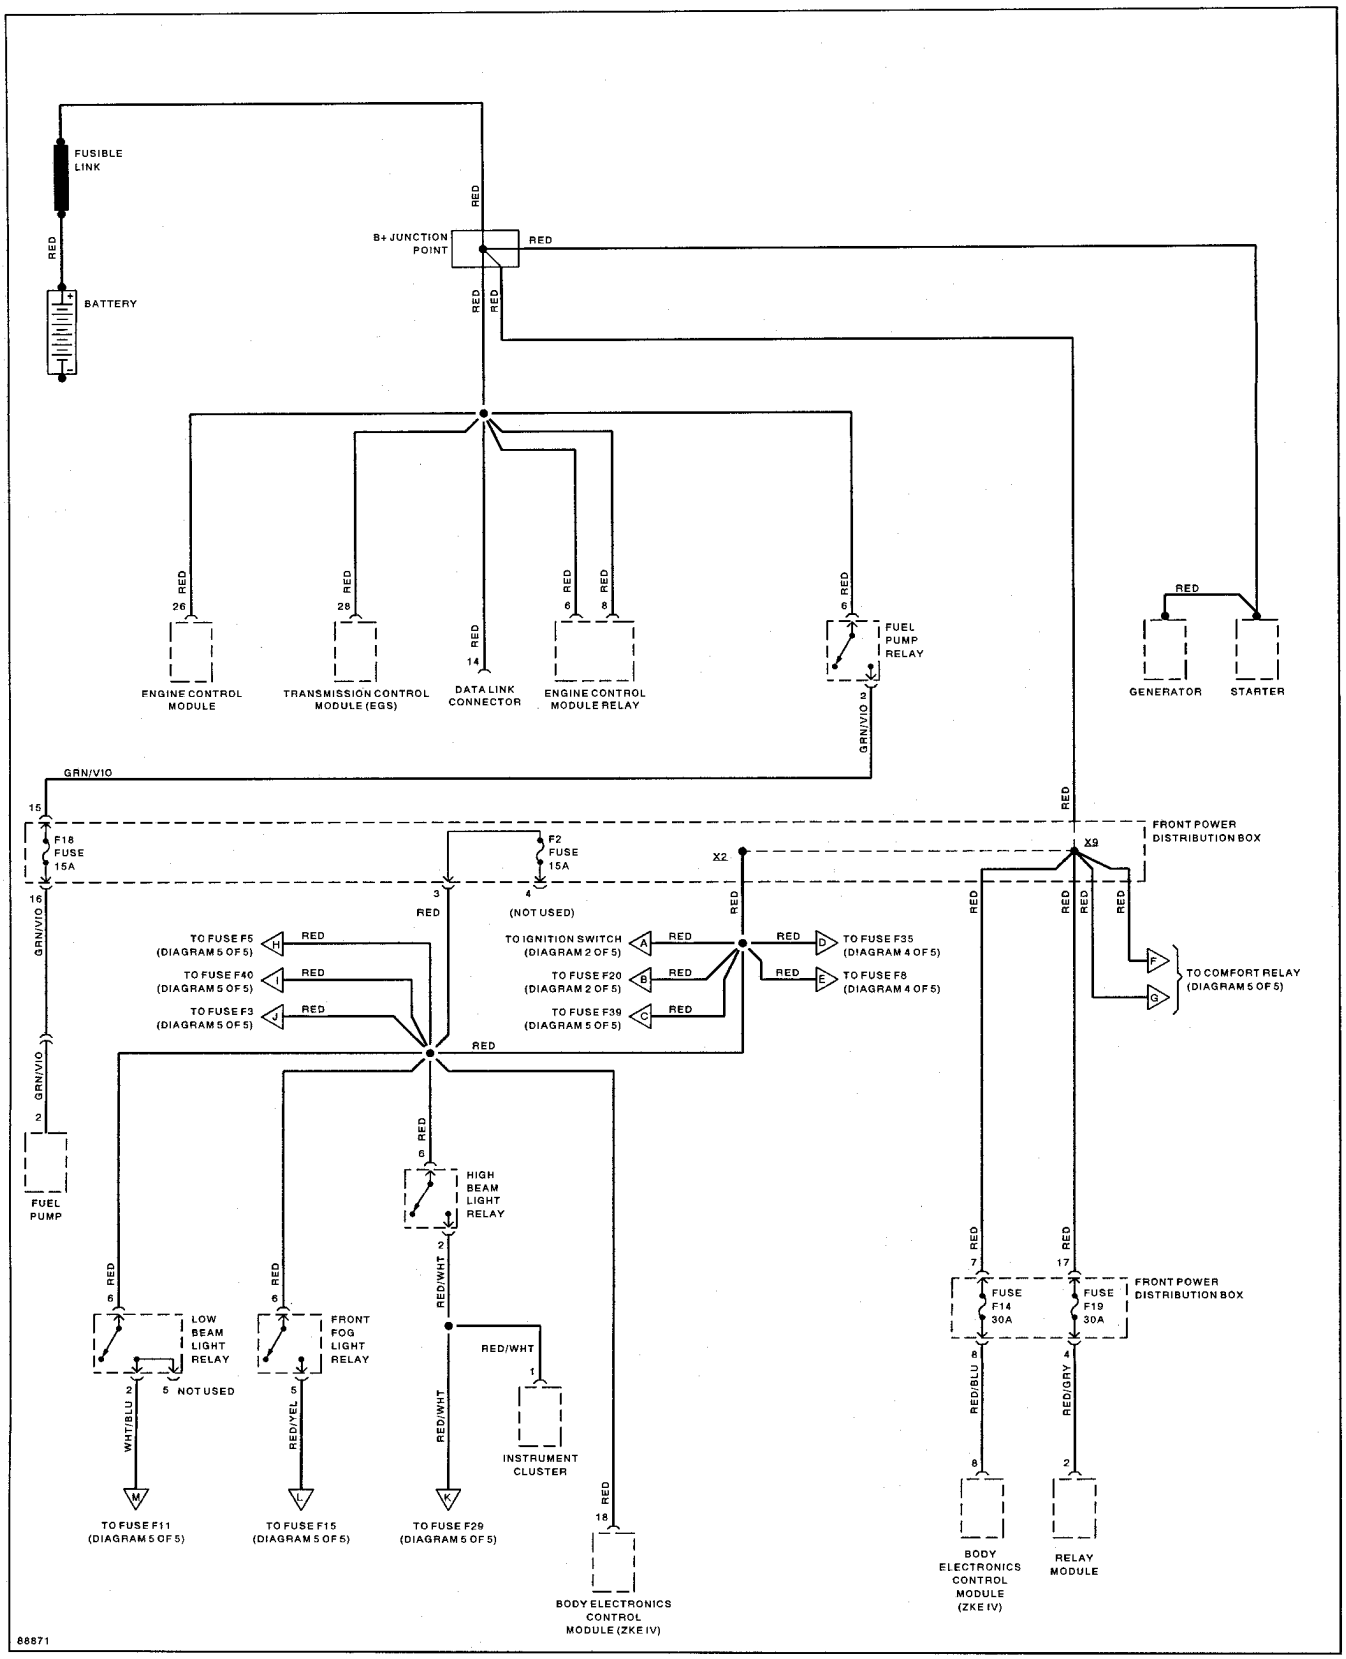


Power Distribution

1998 Except 318ti (5 of 5)

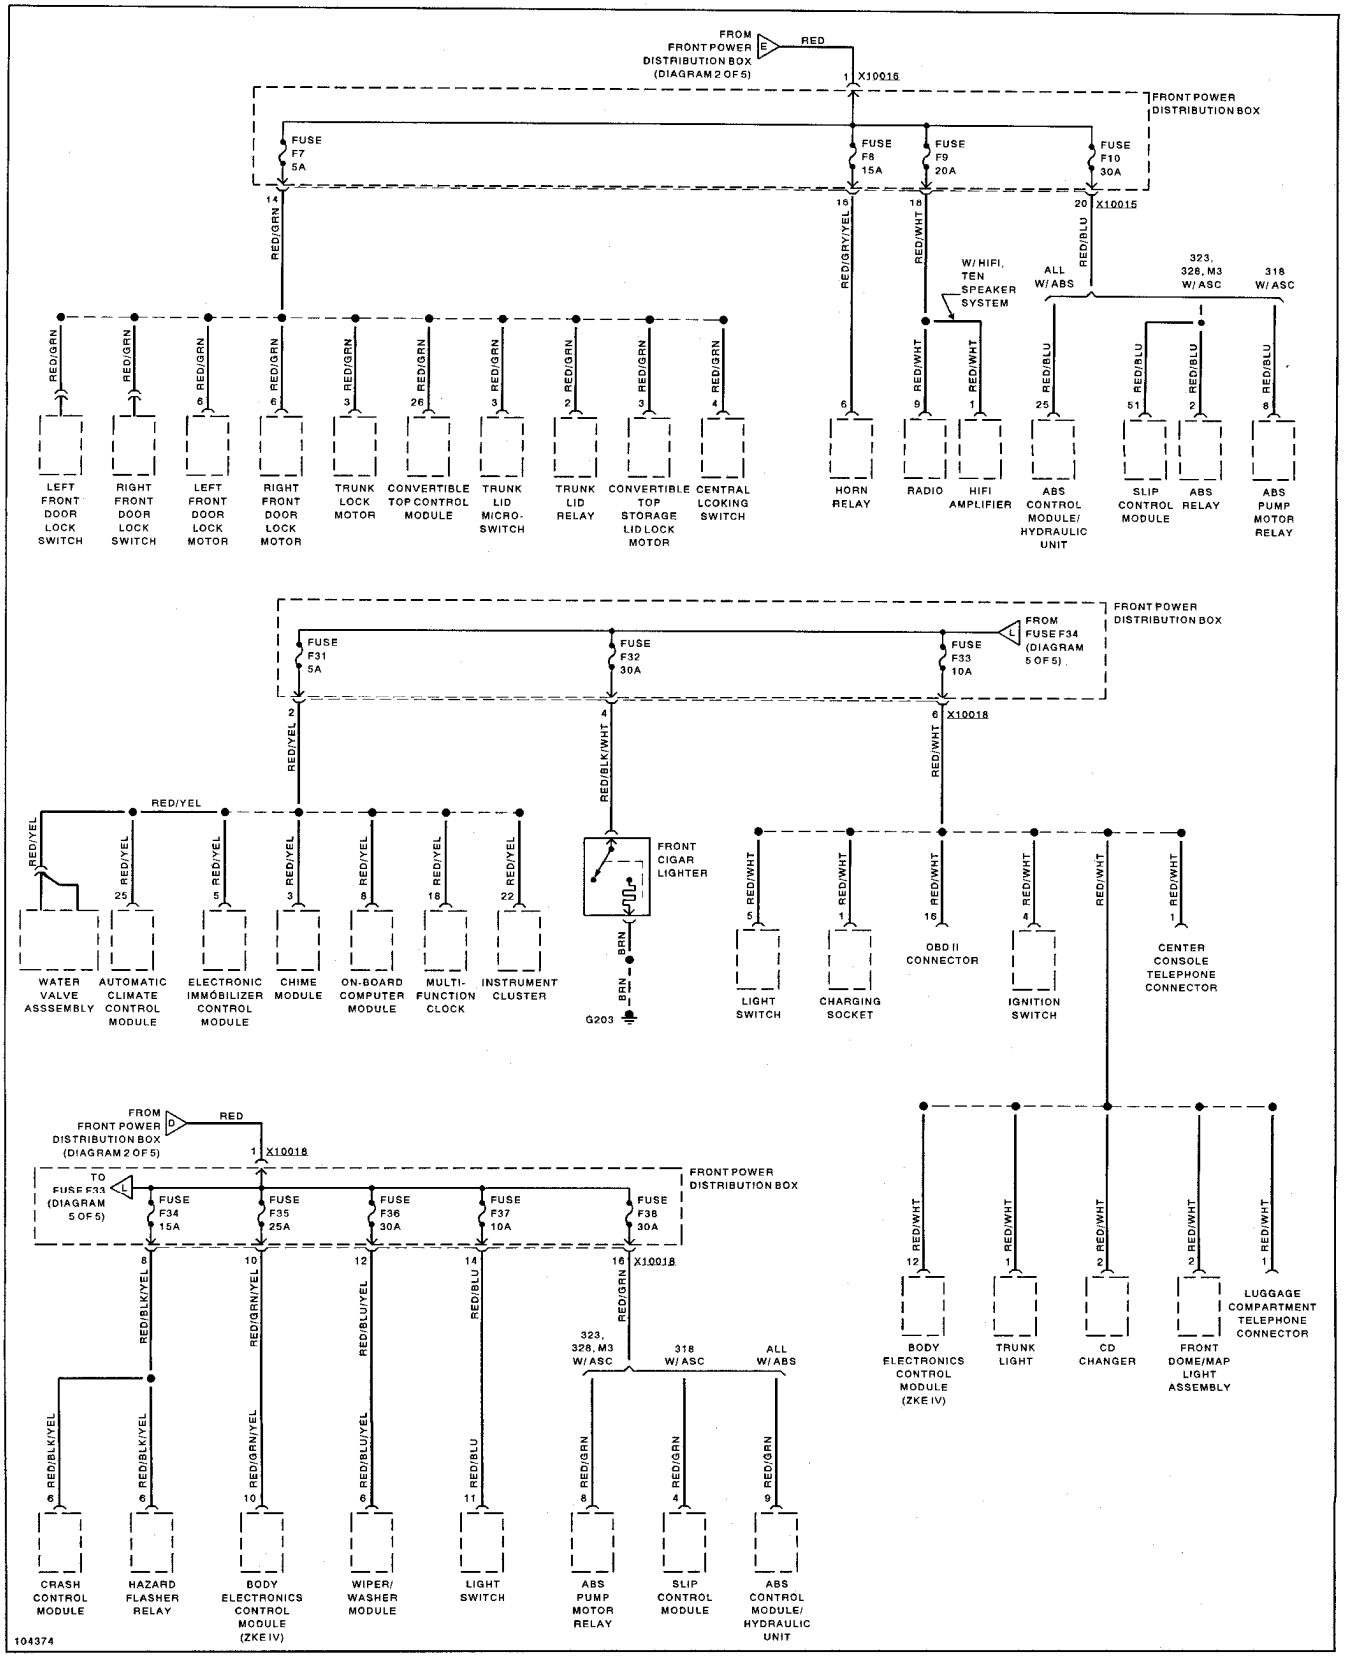


Power Distribution

1998 Except 318ti (4 of 5)

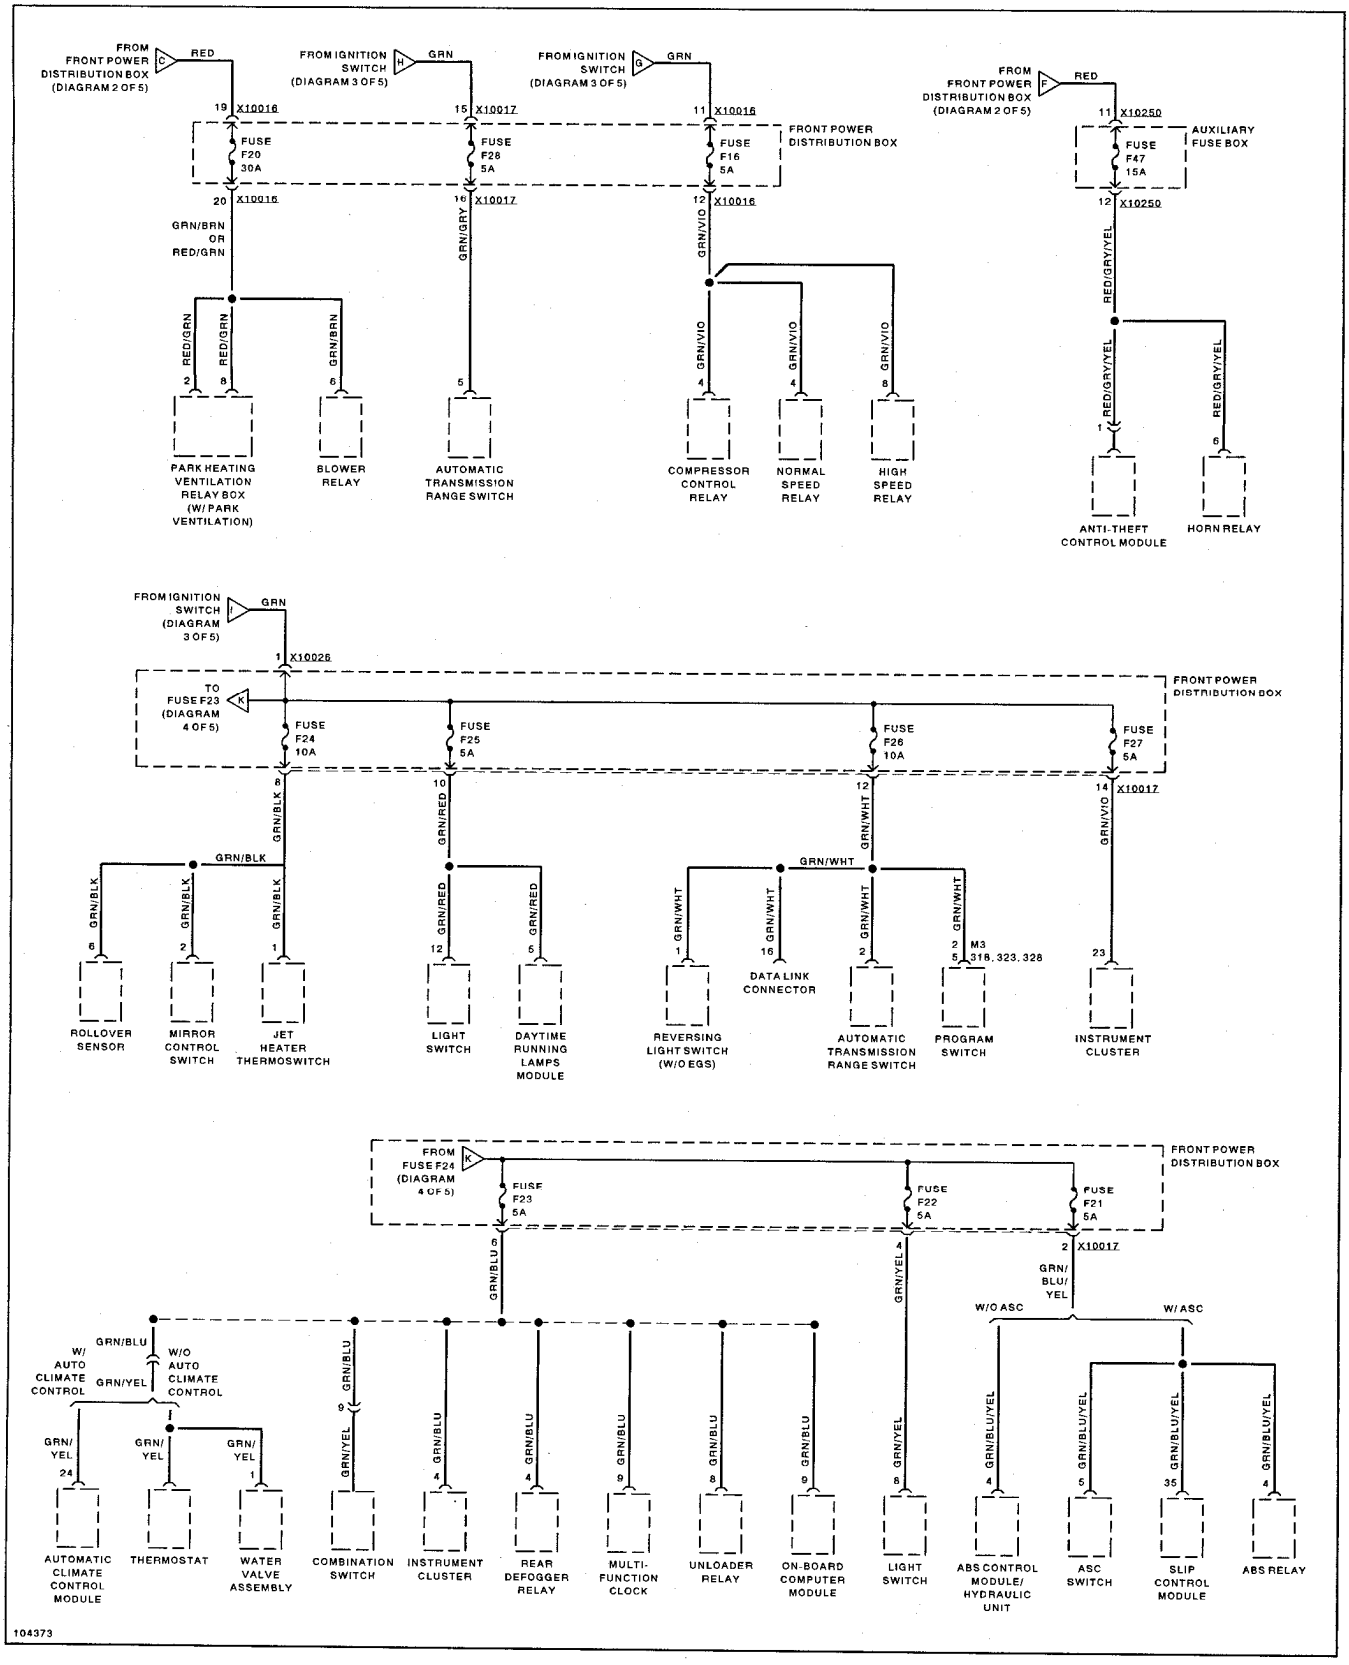


Power Distribution

1998 Except 318ti (3 of 5)

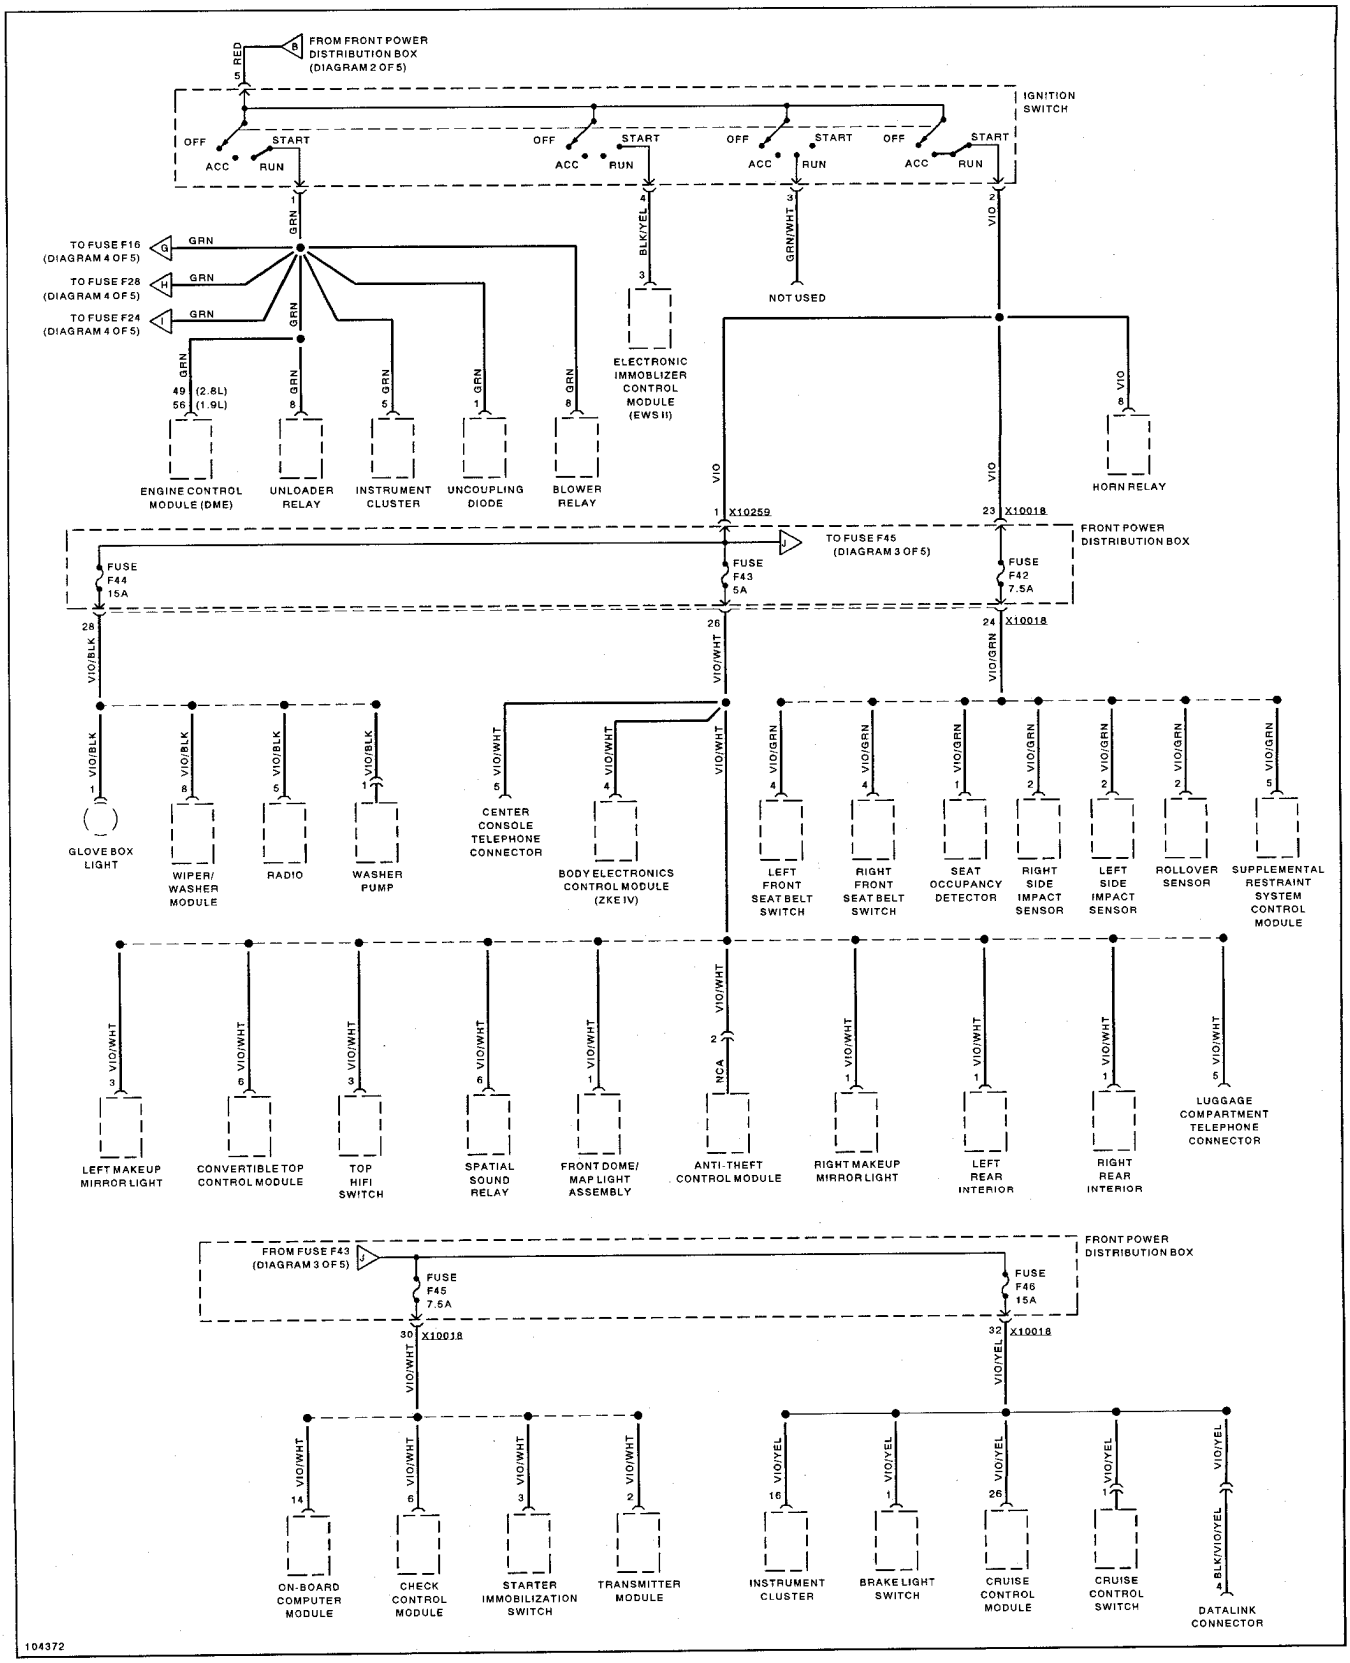

Power Distribution


1998 Except 318ti (2 of 5)

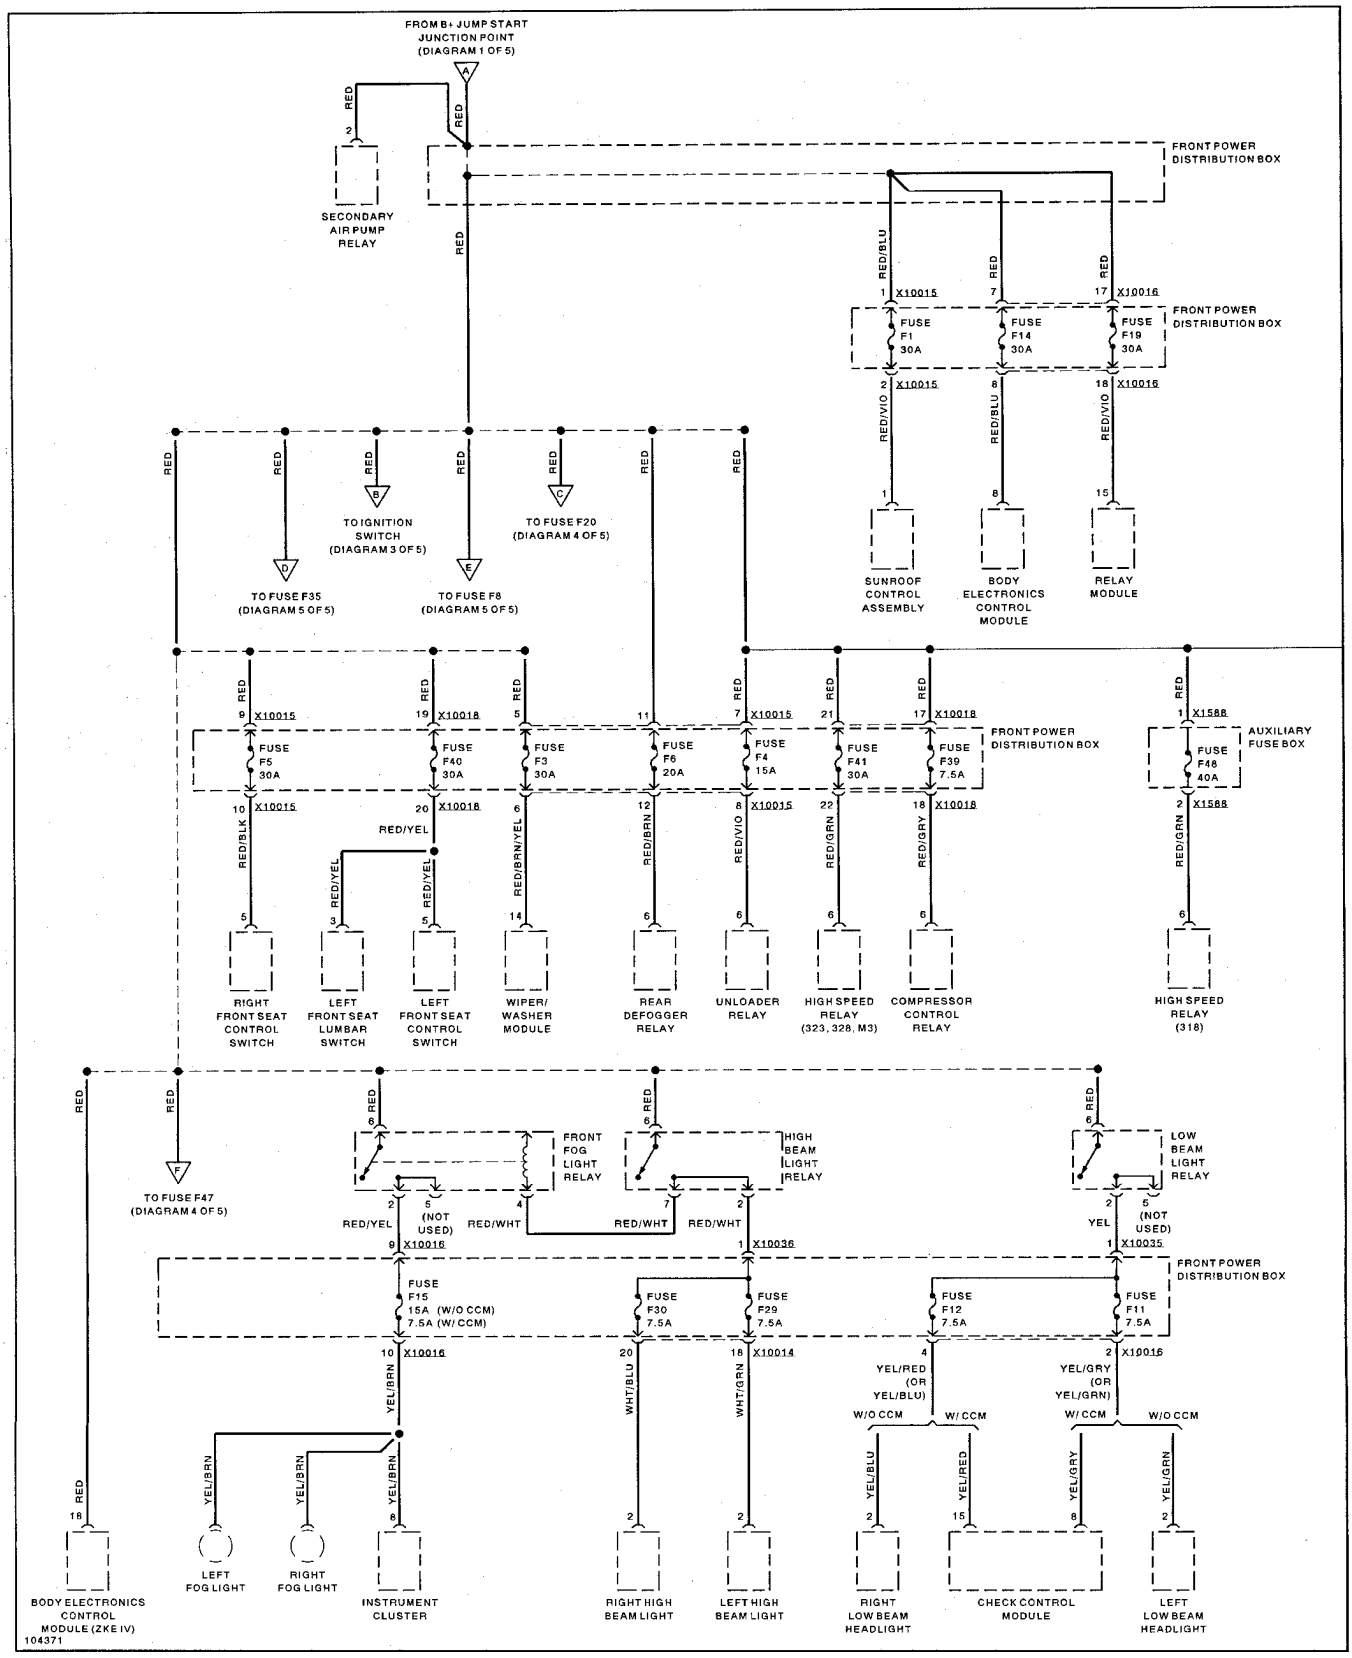

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina


Power Distribution

1998 Except 318ti (1 of 5)

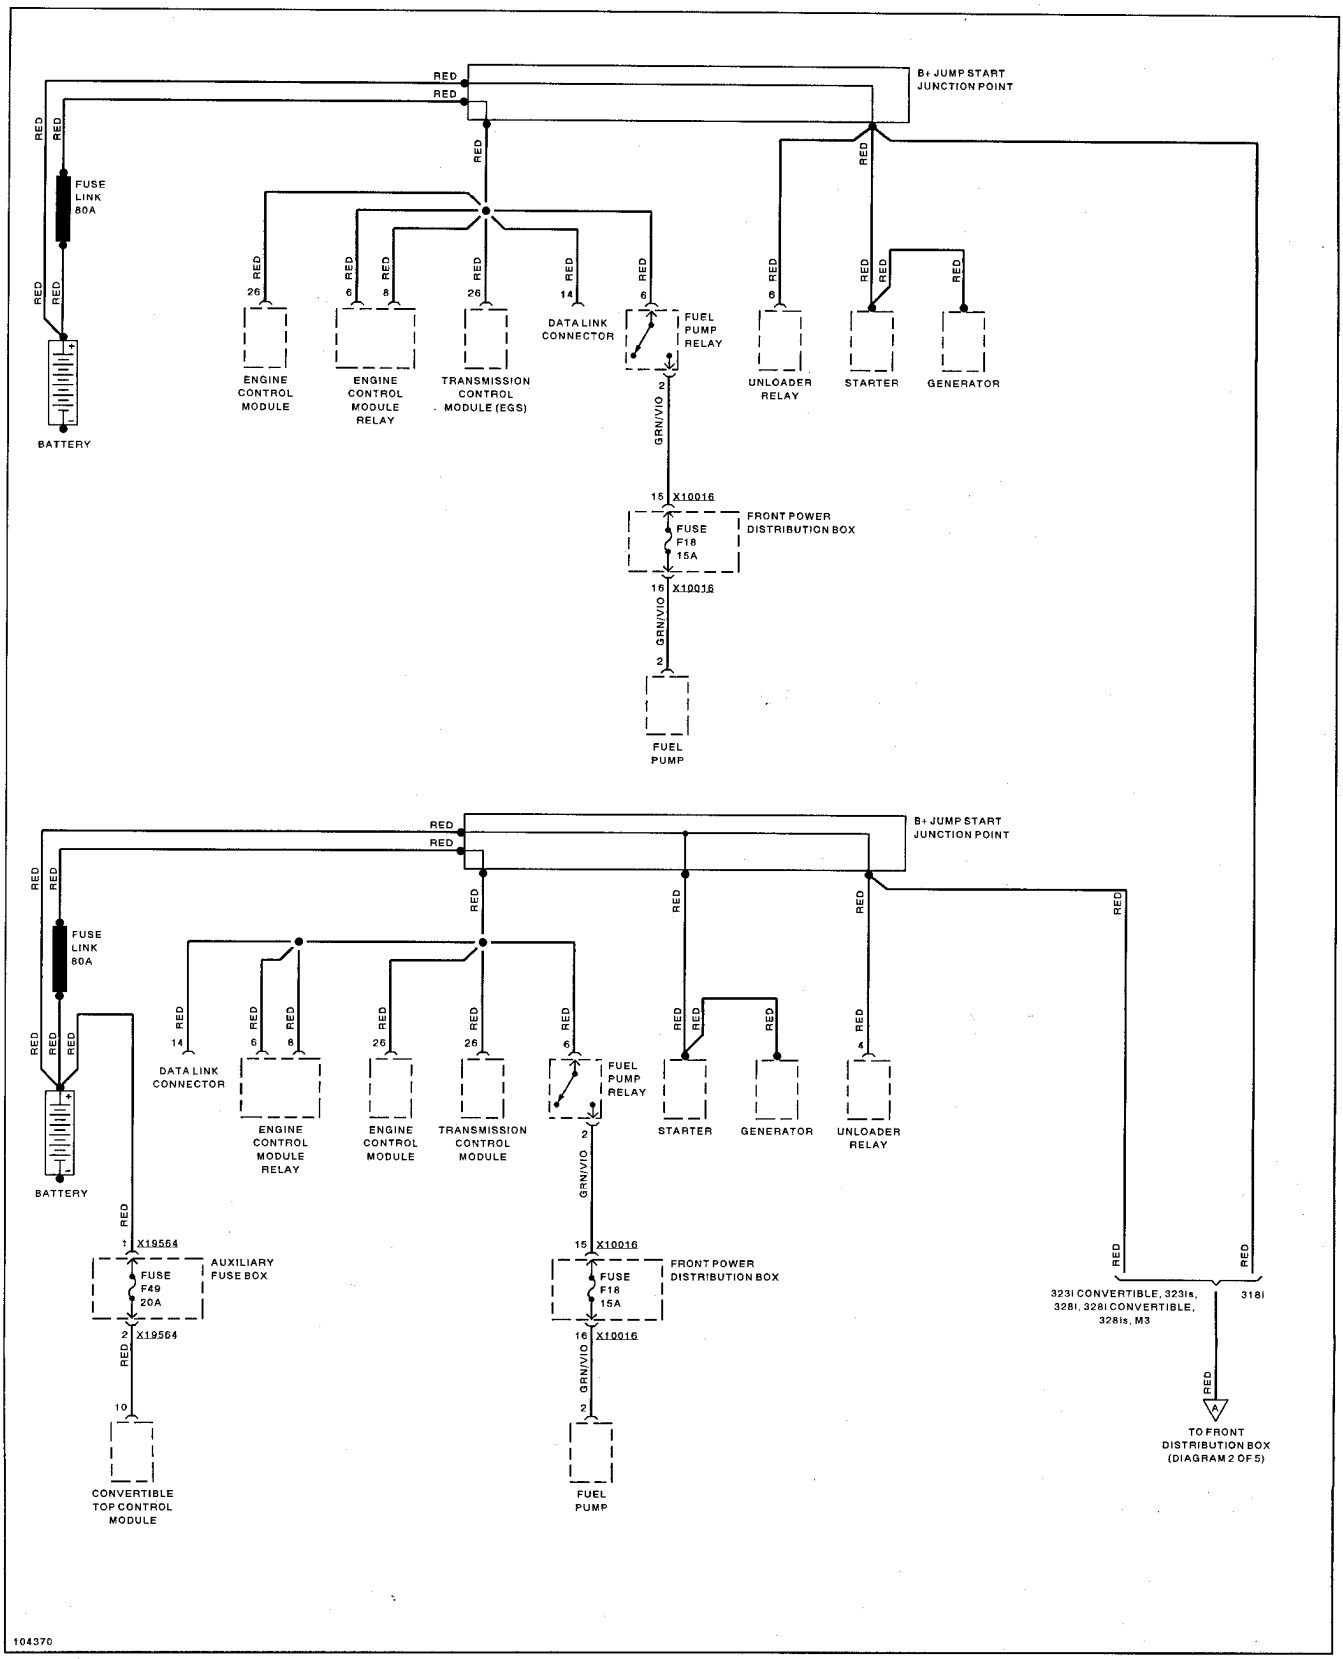


Power Distribution

1996-97 Except 318ti (5 of 5)

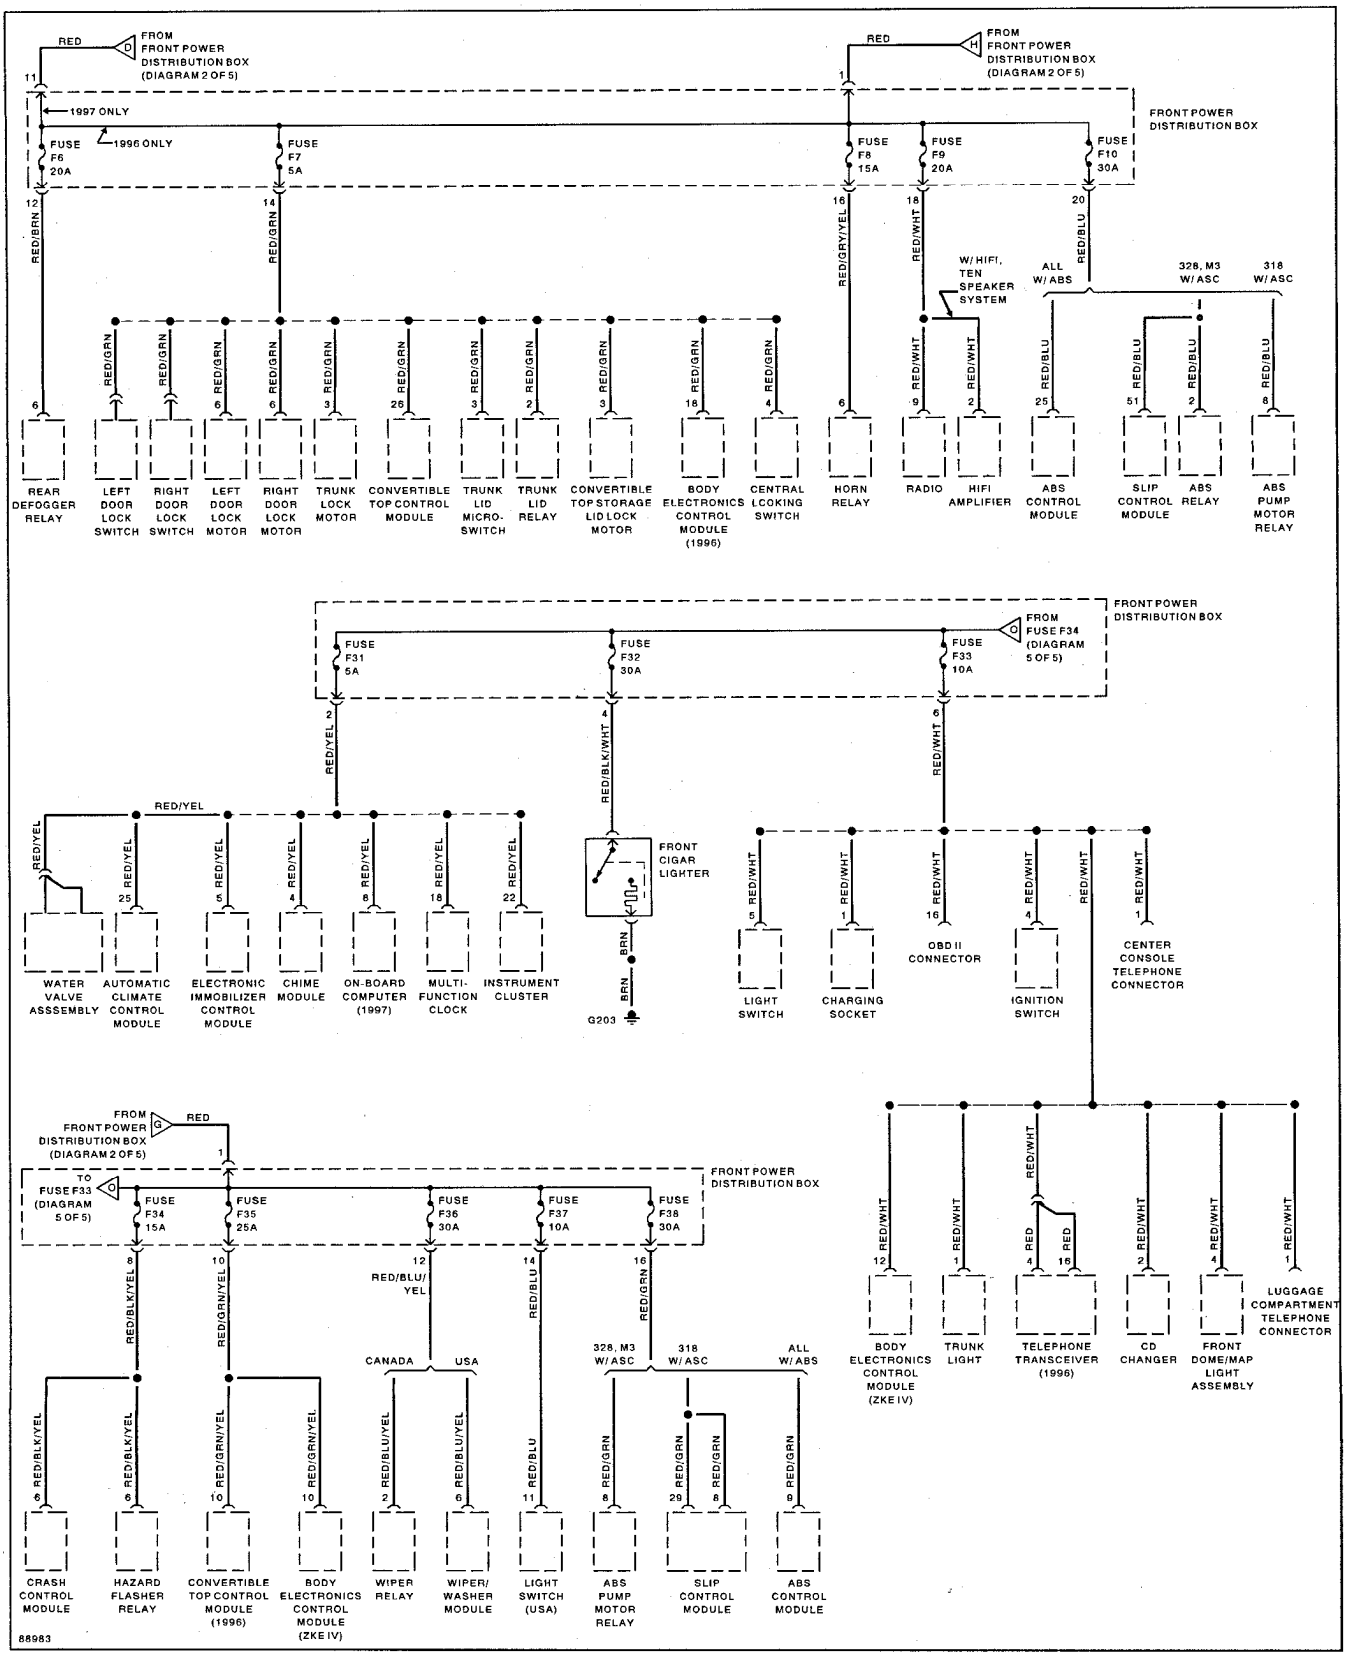


Power Distribution

1996-97 Except 318ti (4 of 5)

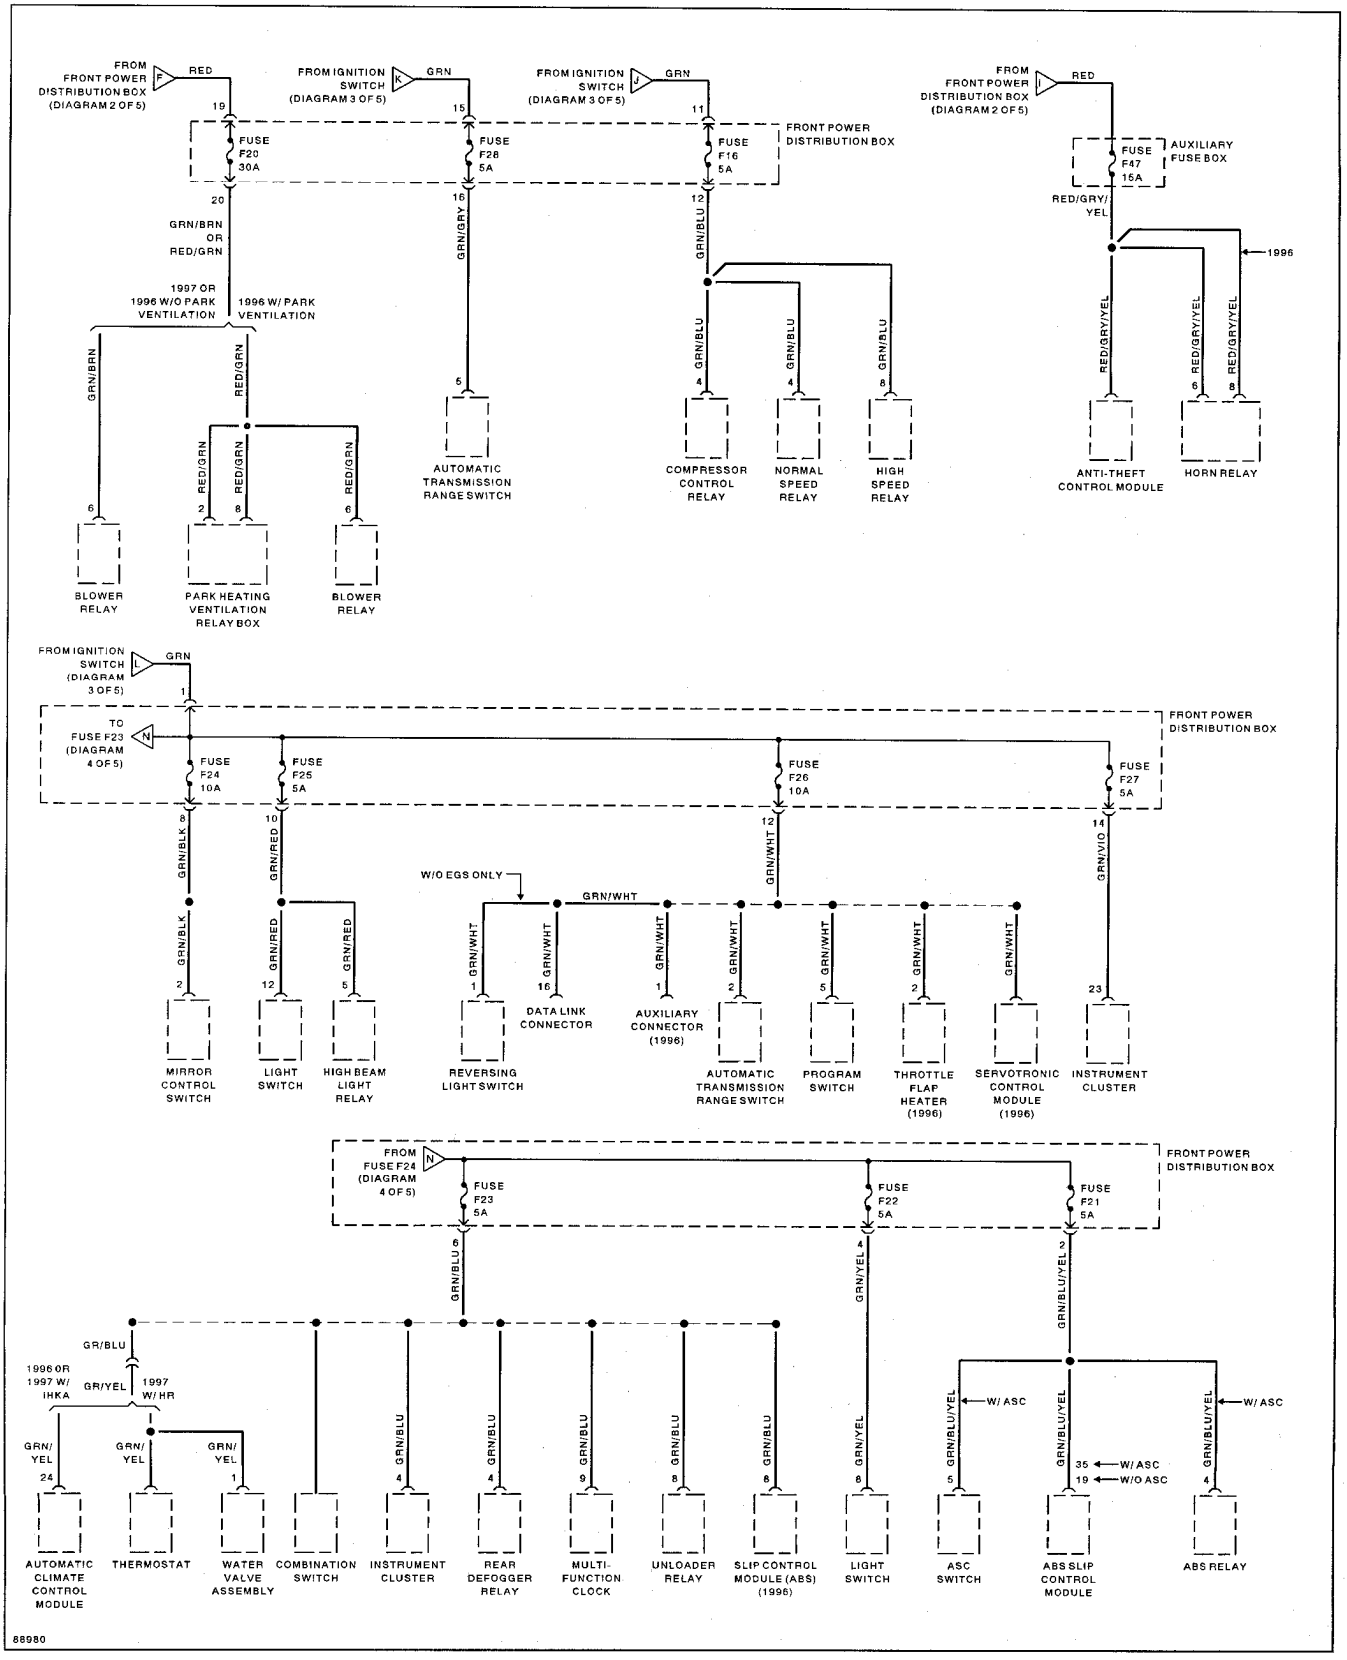


Power Distribution

1996-97 Except 318ti (3 of 5)

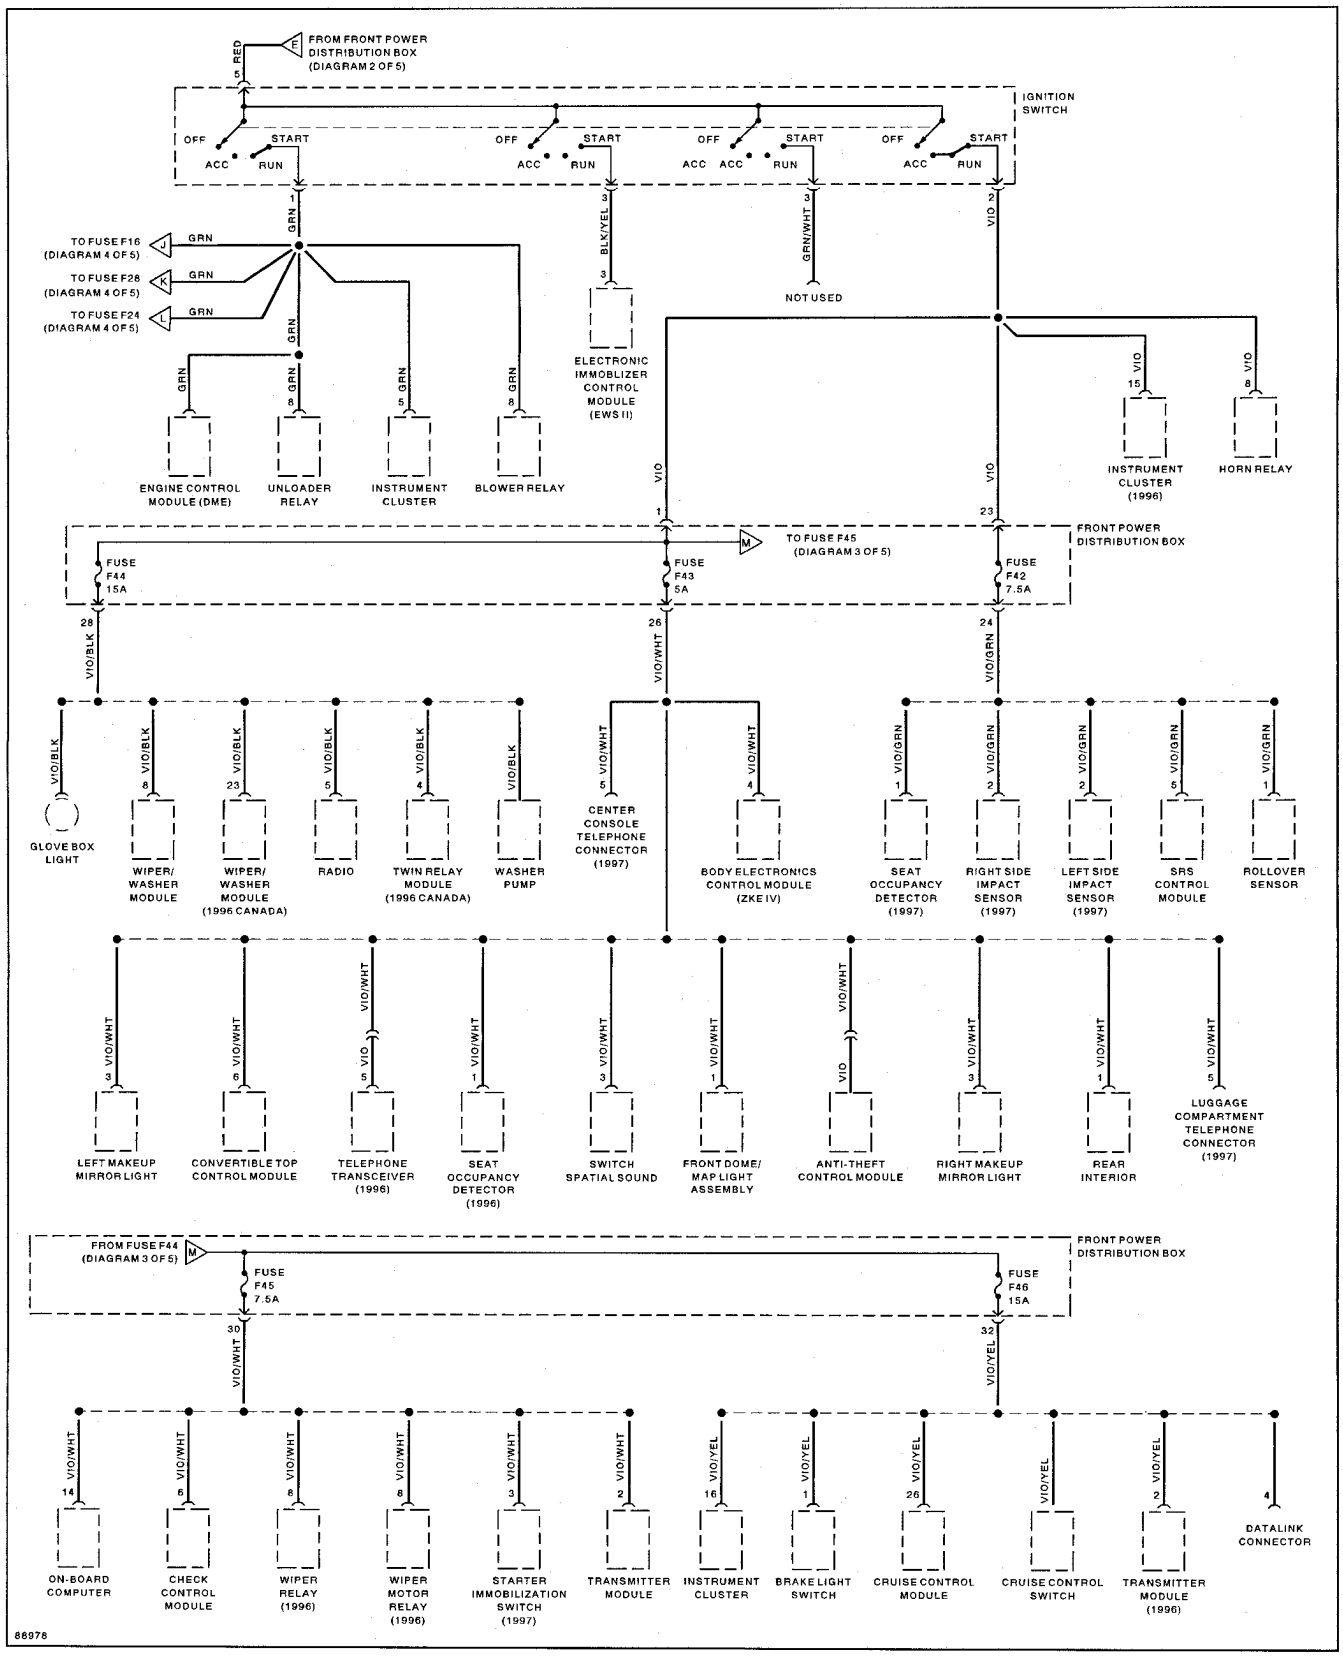


Power Distribution

1996-97 Except 318ti (2 of 5)

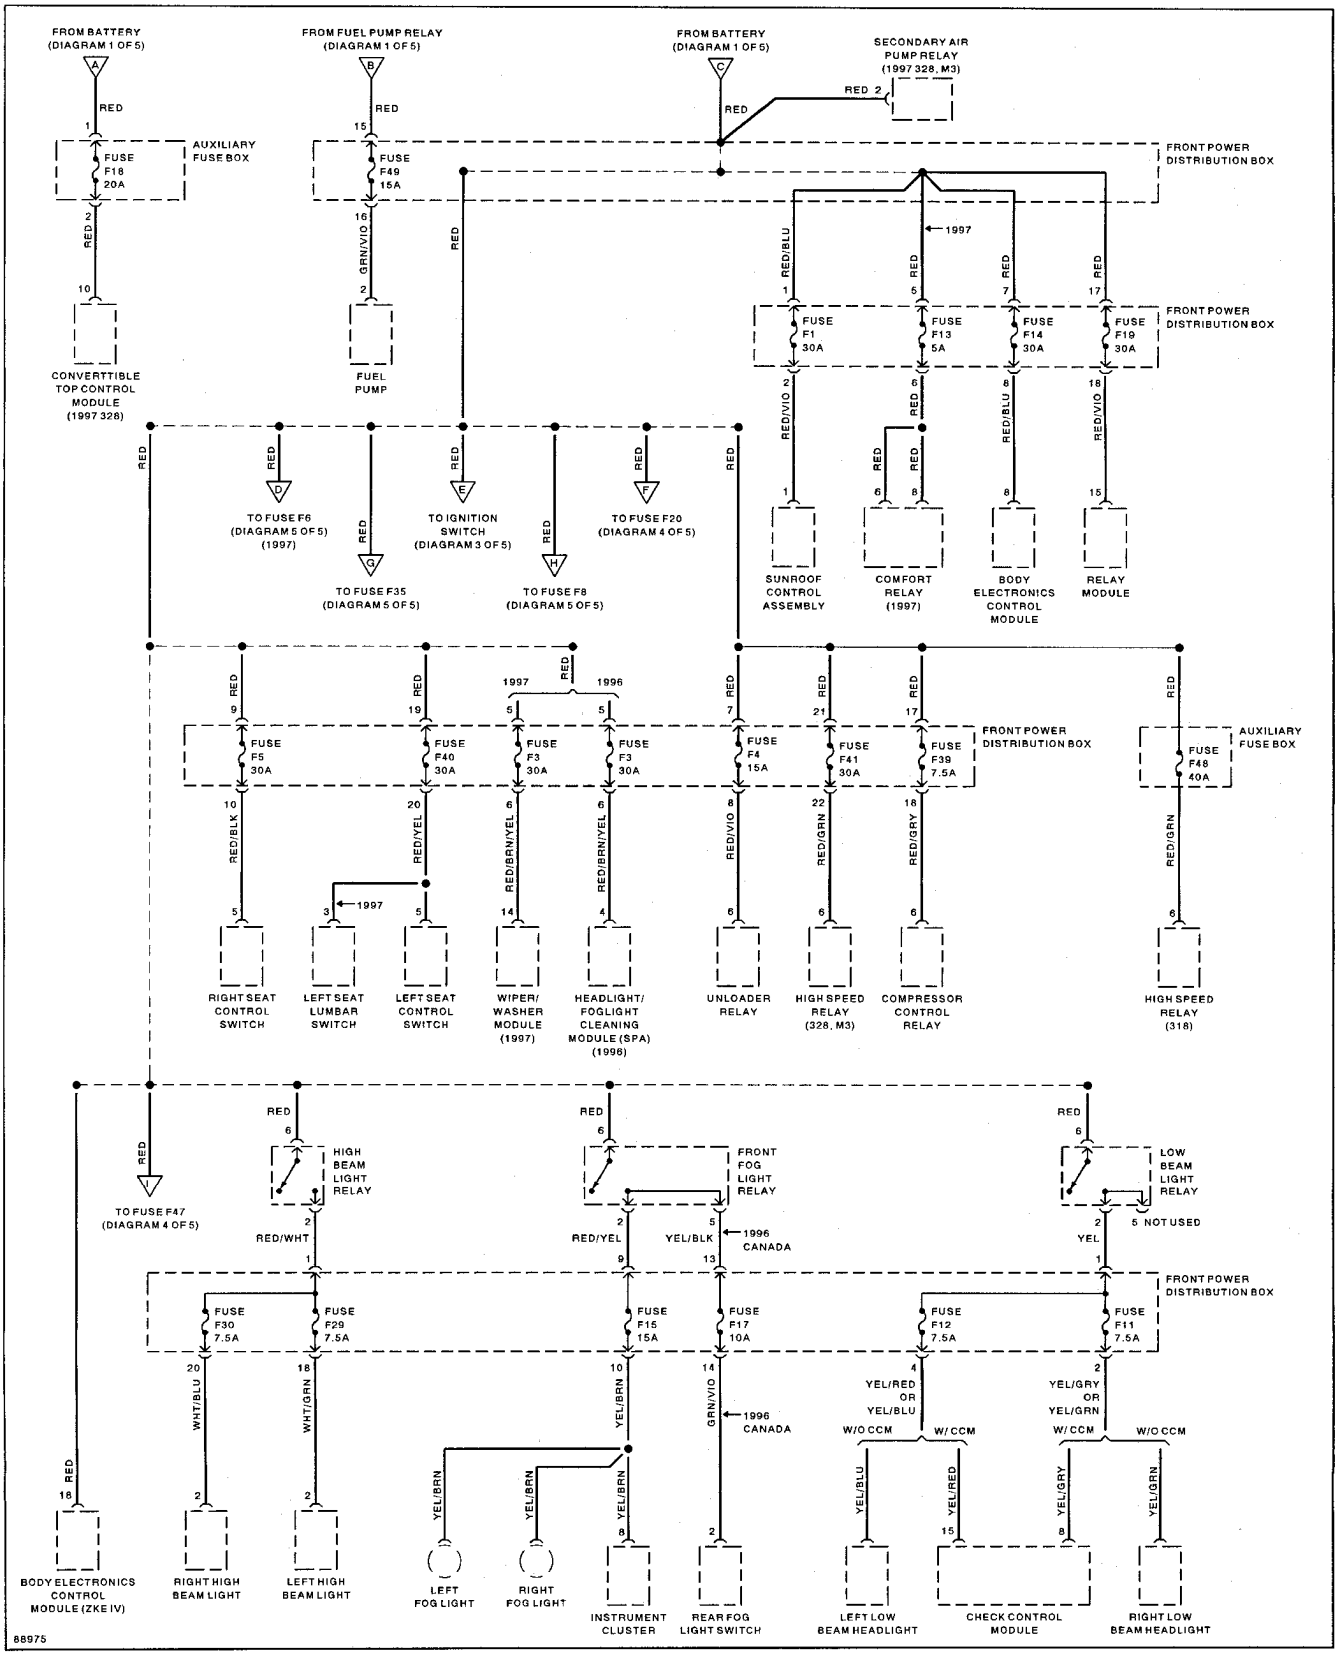


Power Distribution

1996-97 Except 318ti (1 of 5)

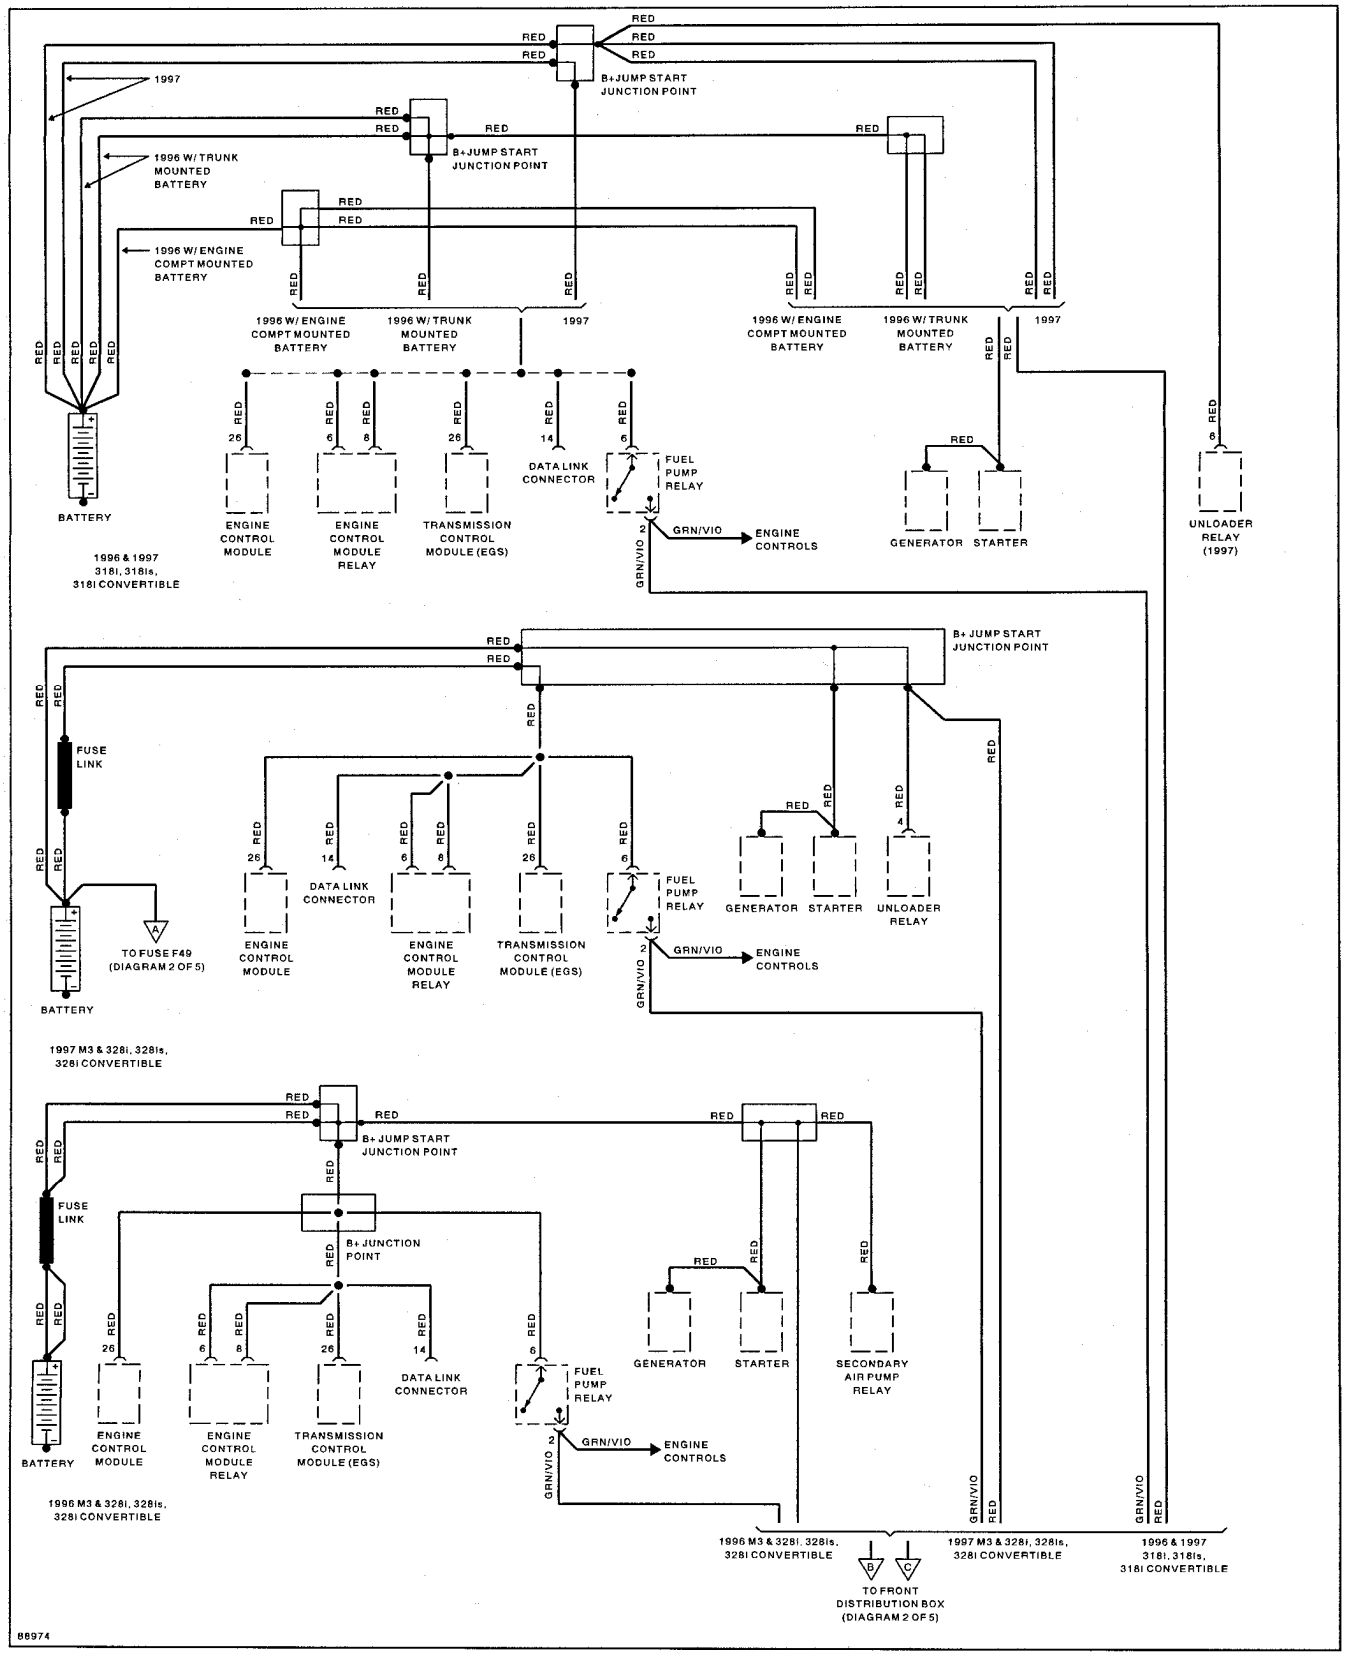


Power Distribution

1994-95 Except 318ti (5 of 5)

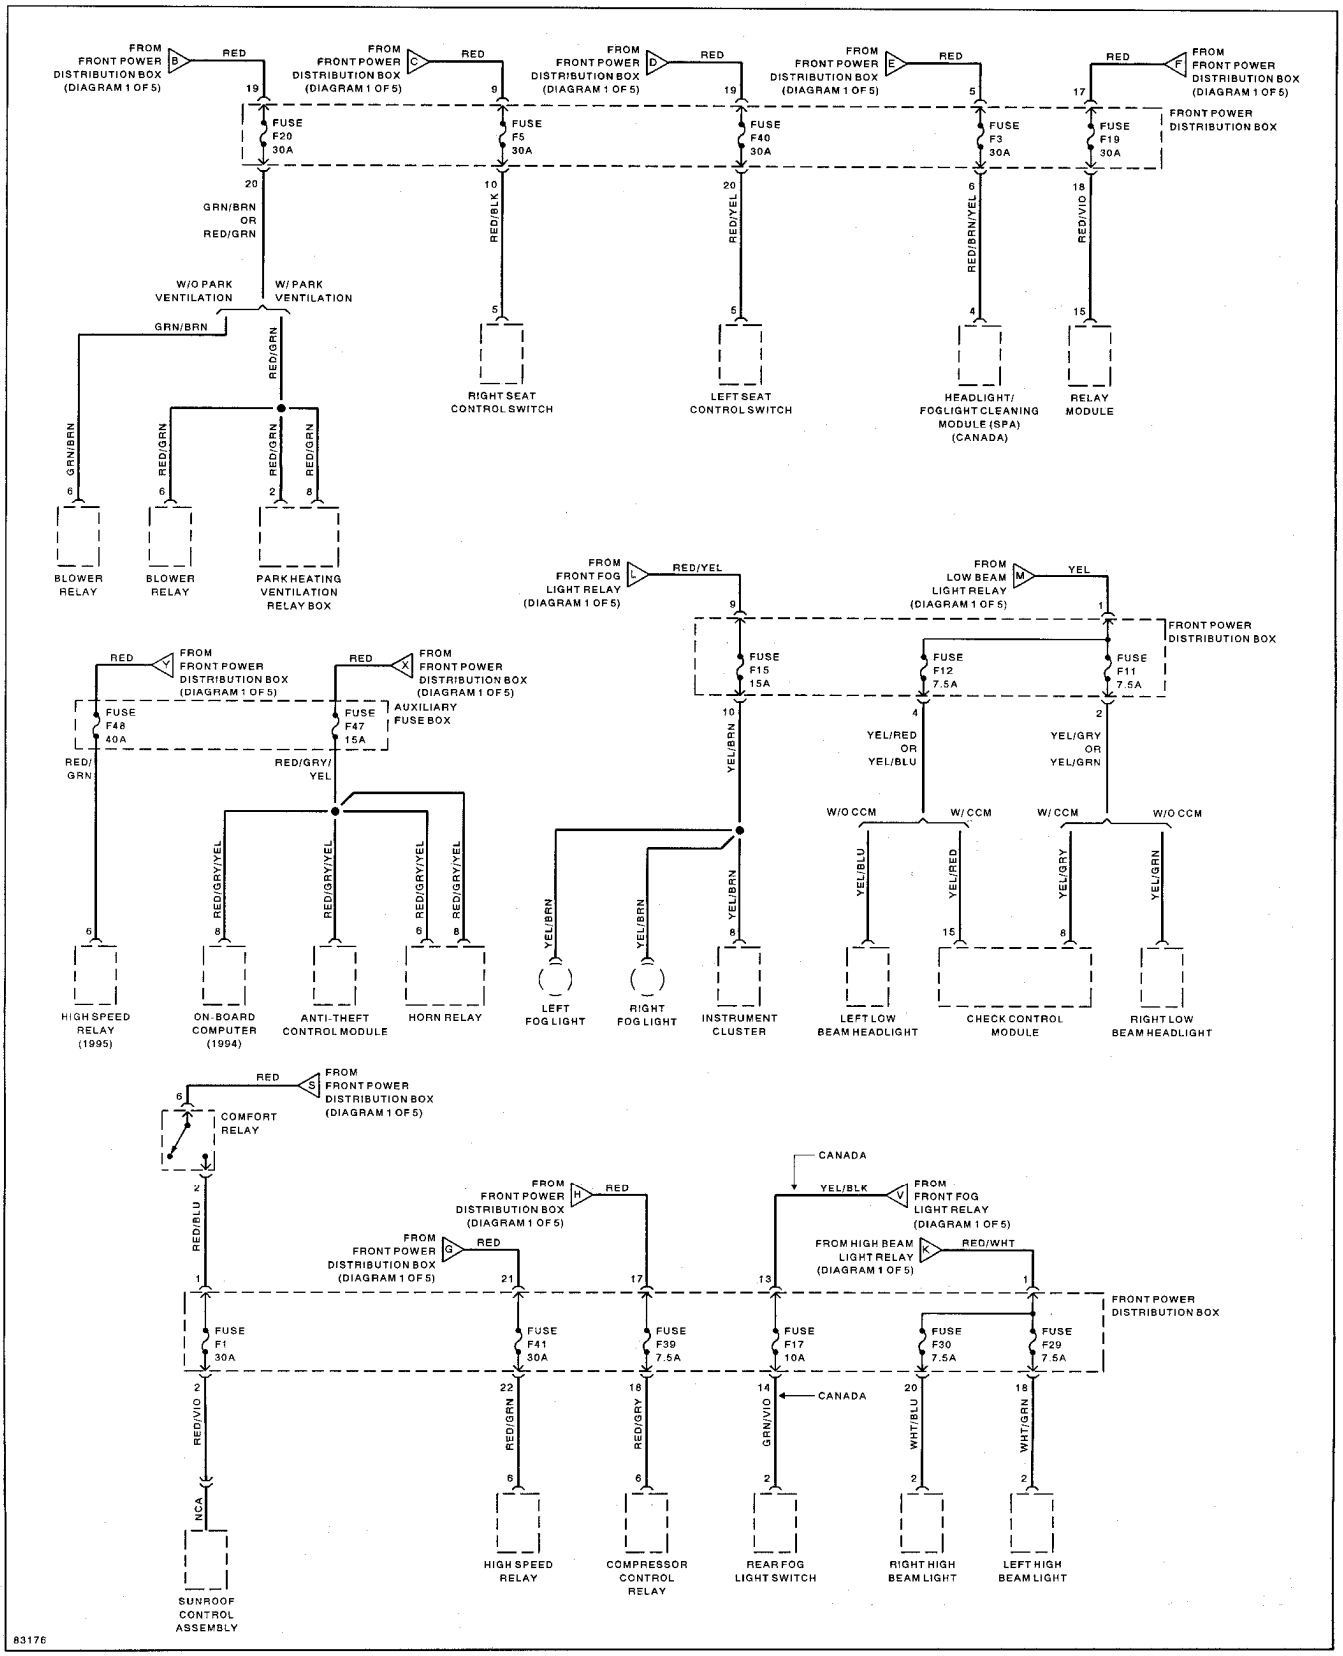


Power Distribution

1994-95 Except 318ti (4 of 5)

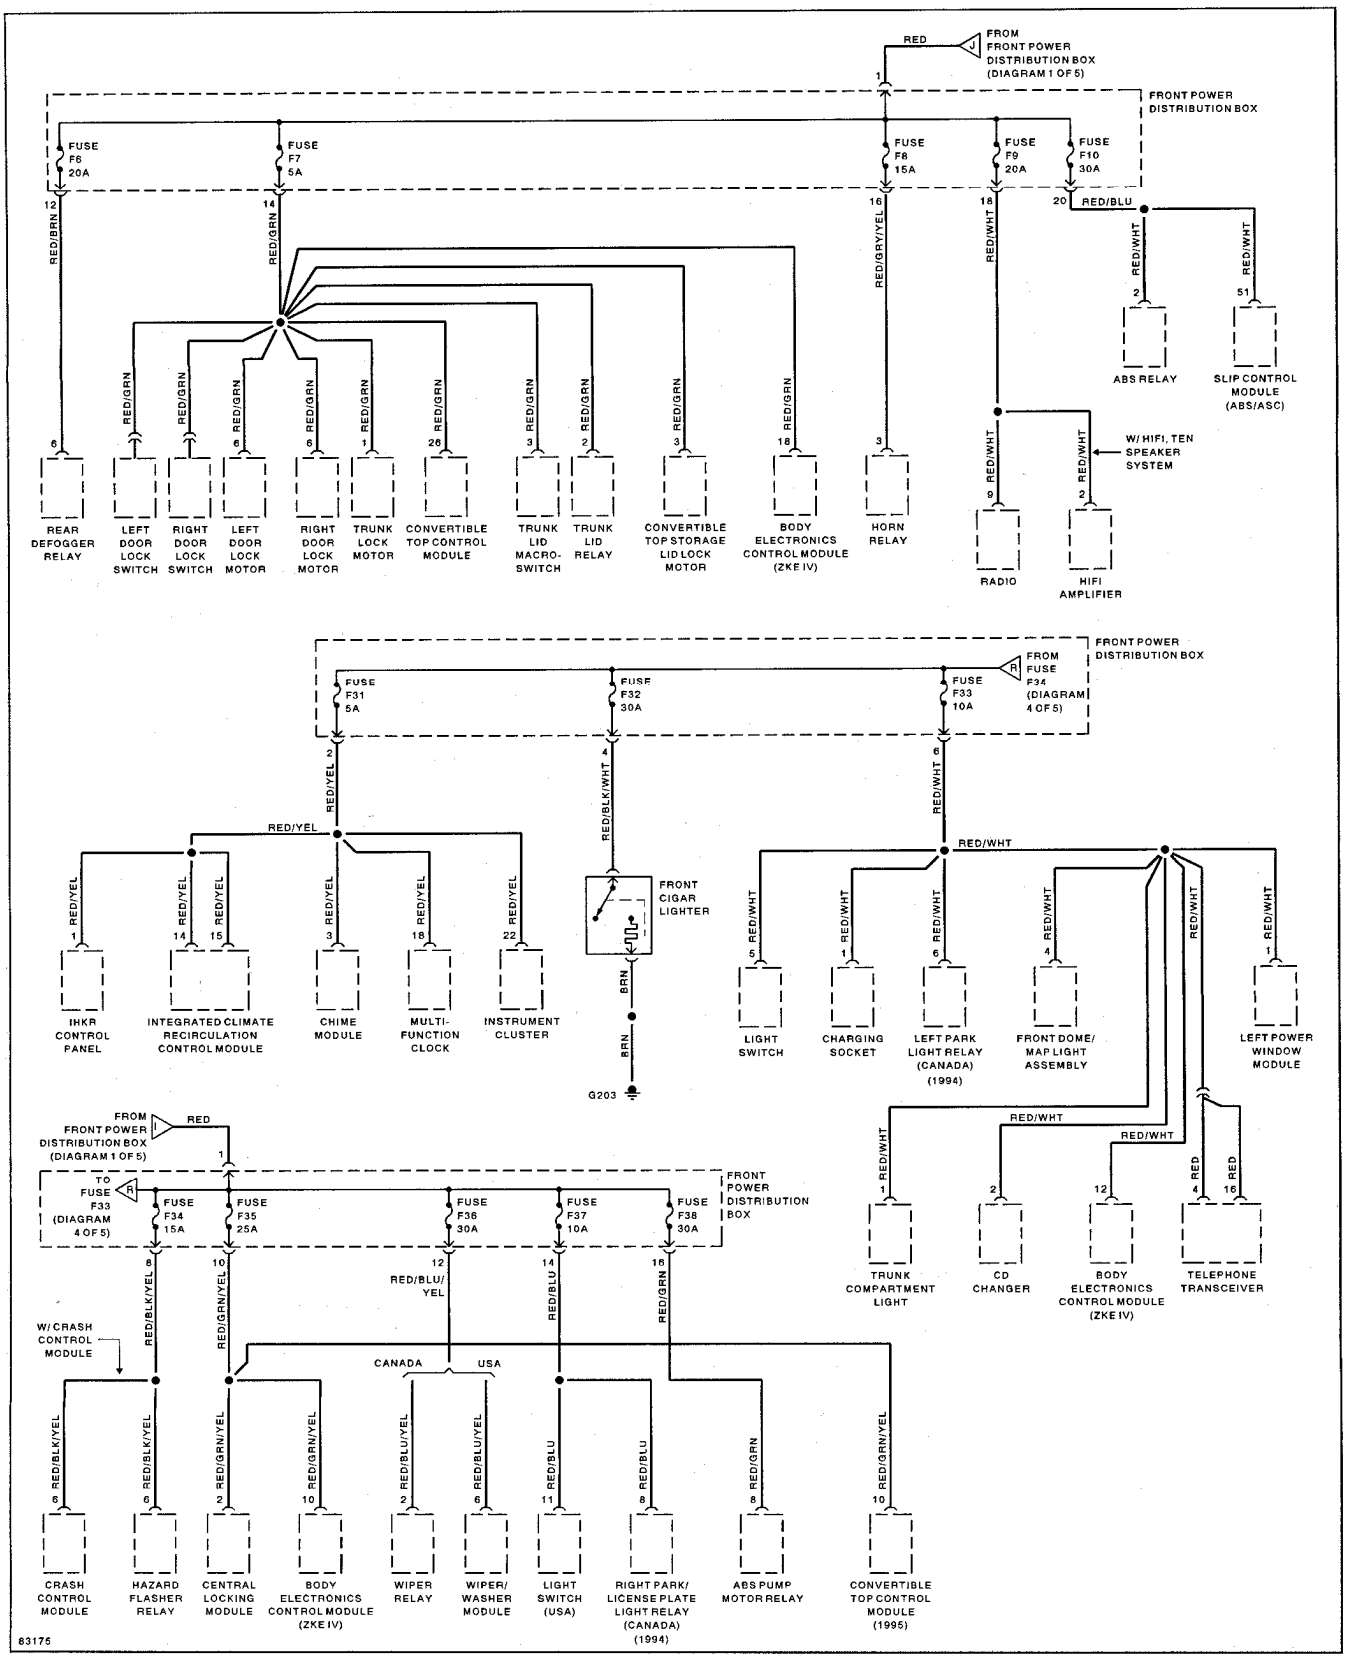


Power Distribution

1994-95 Except 318ti (3 of 5)

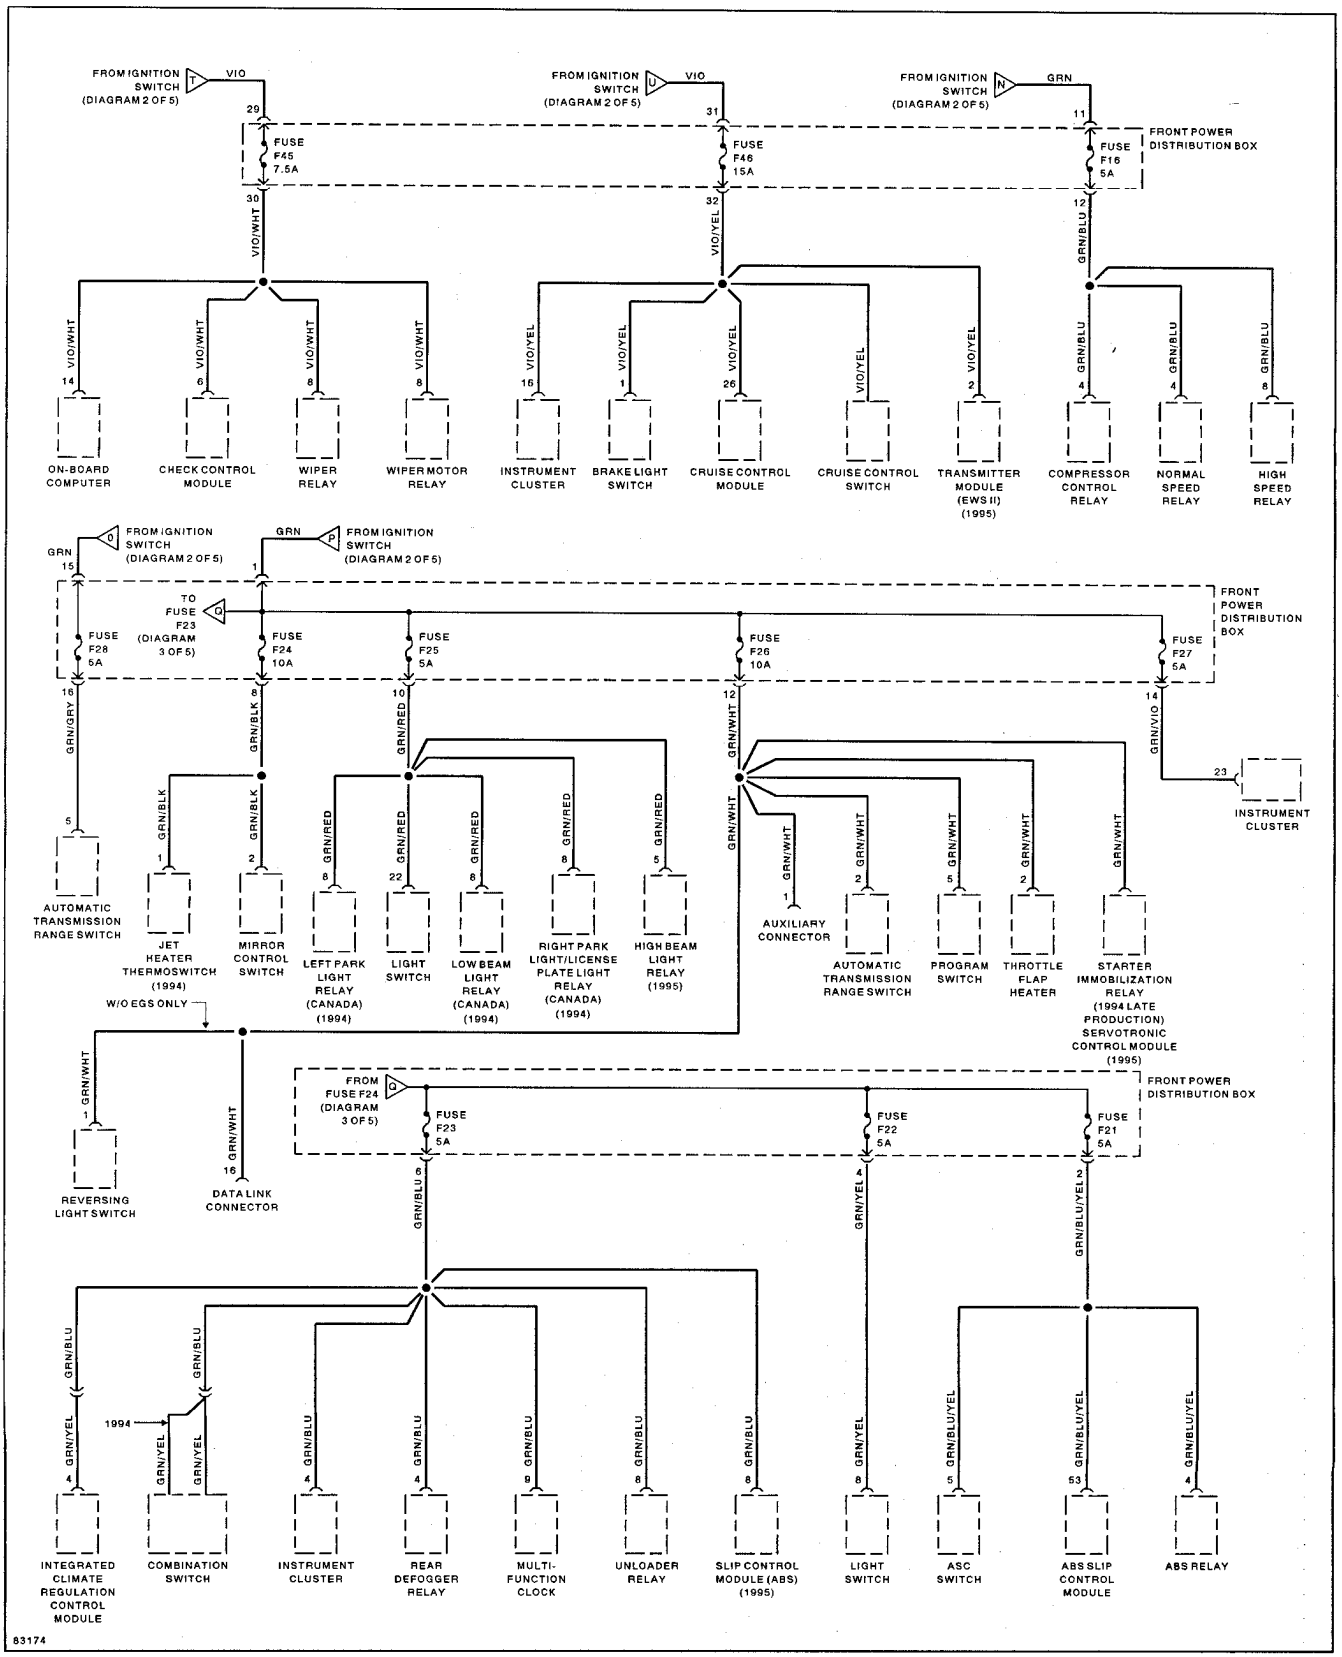

Power Distribution


1994-95 Except 318ti (2 of 5)

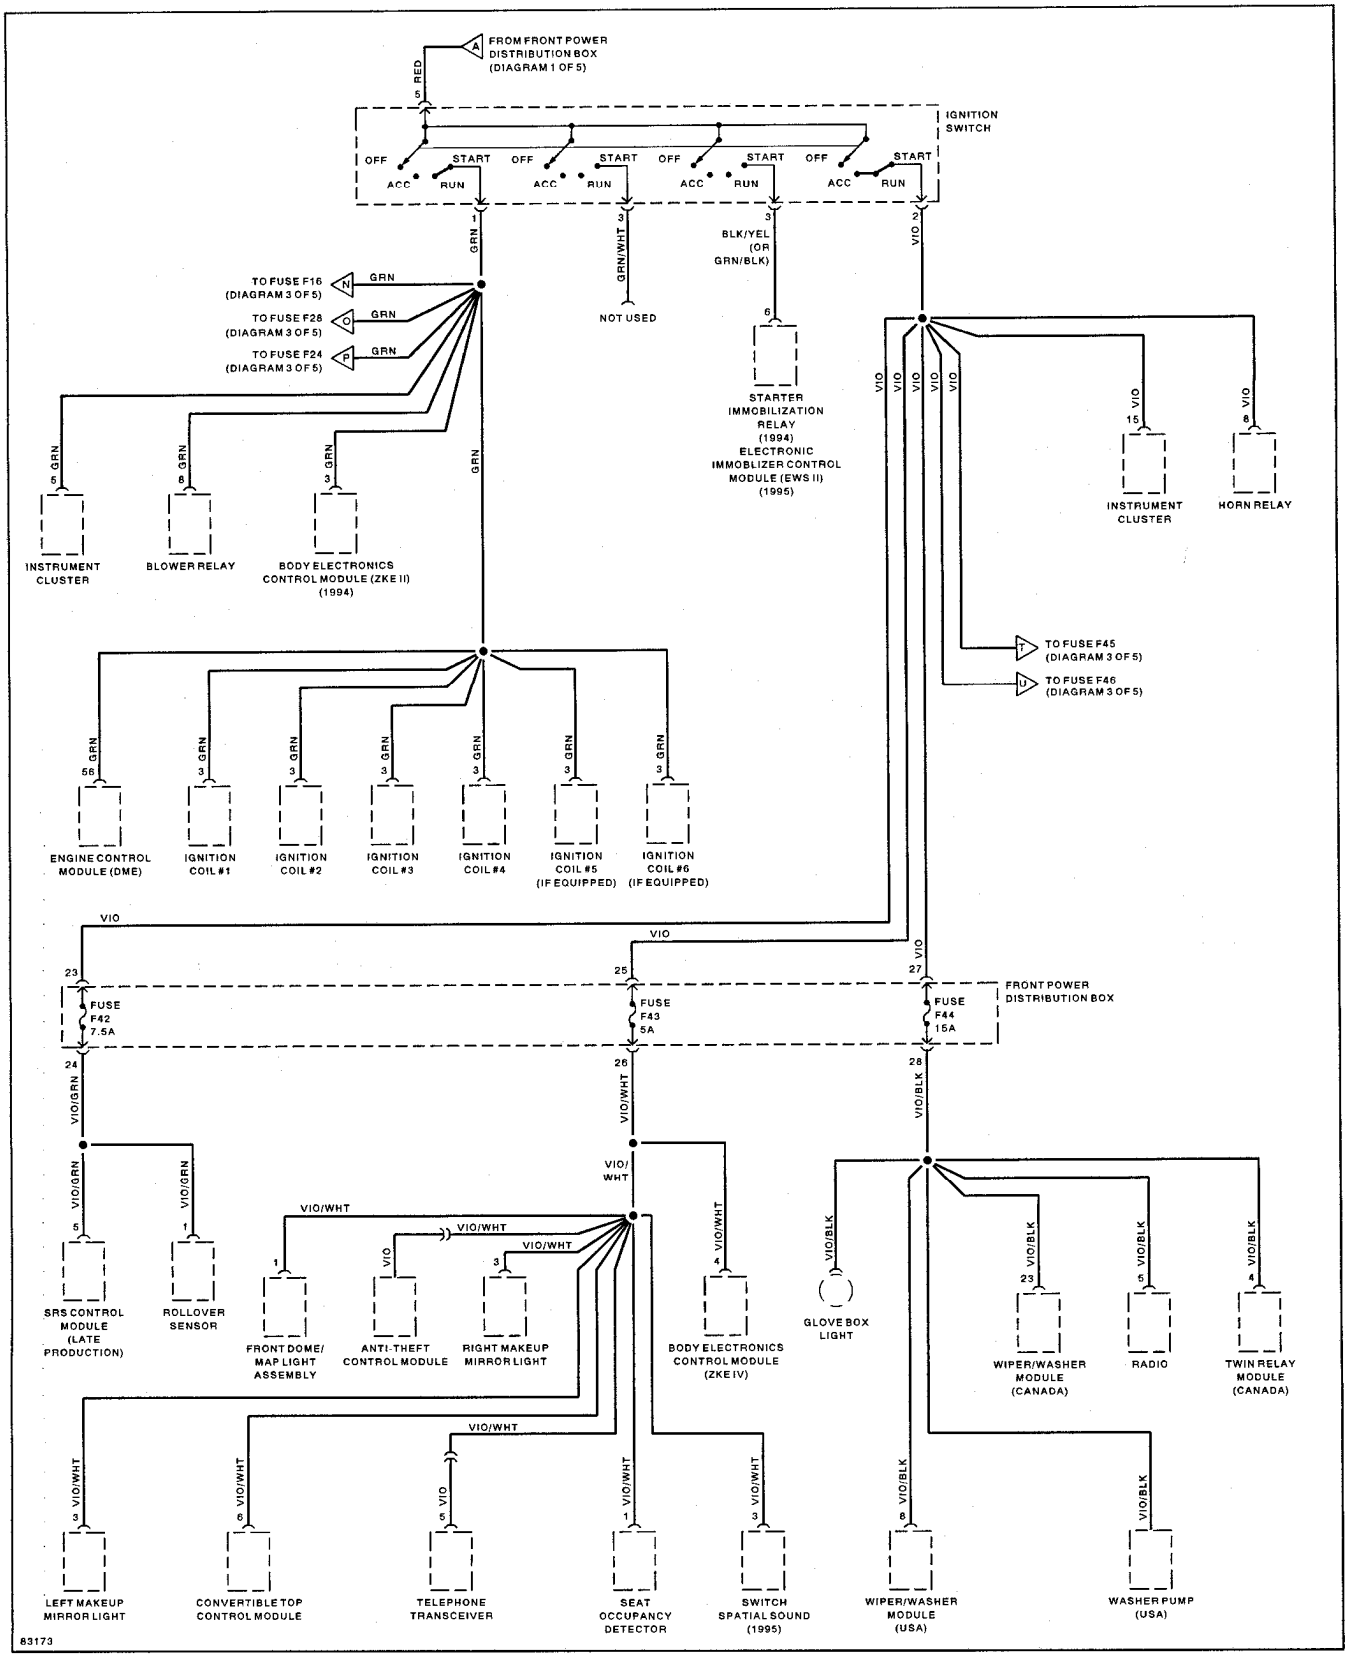


Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Power Distribution

1994-95 Except 318ti (1 of 5)

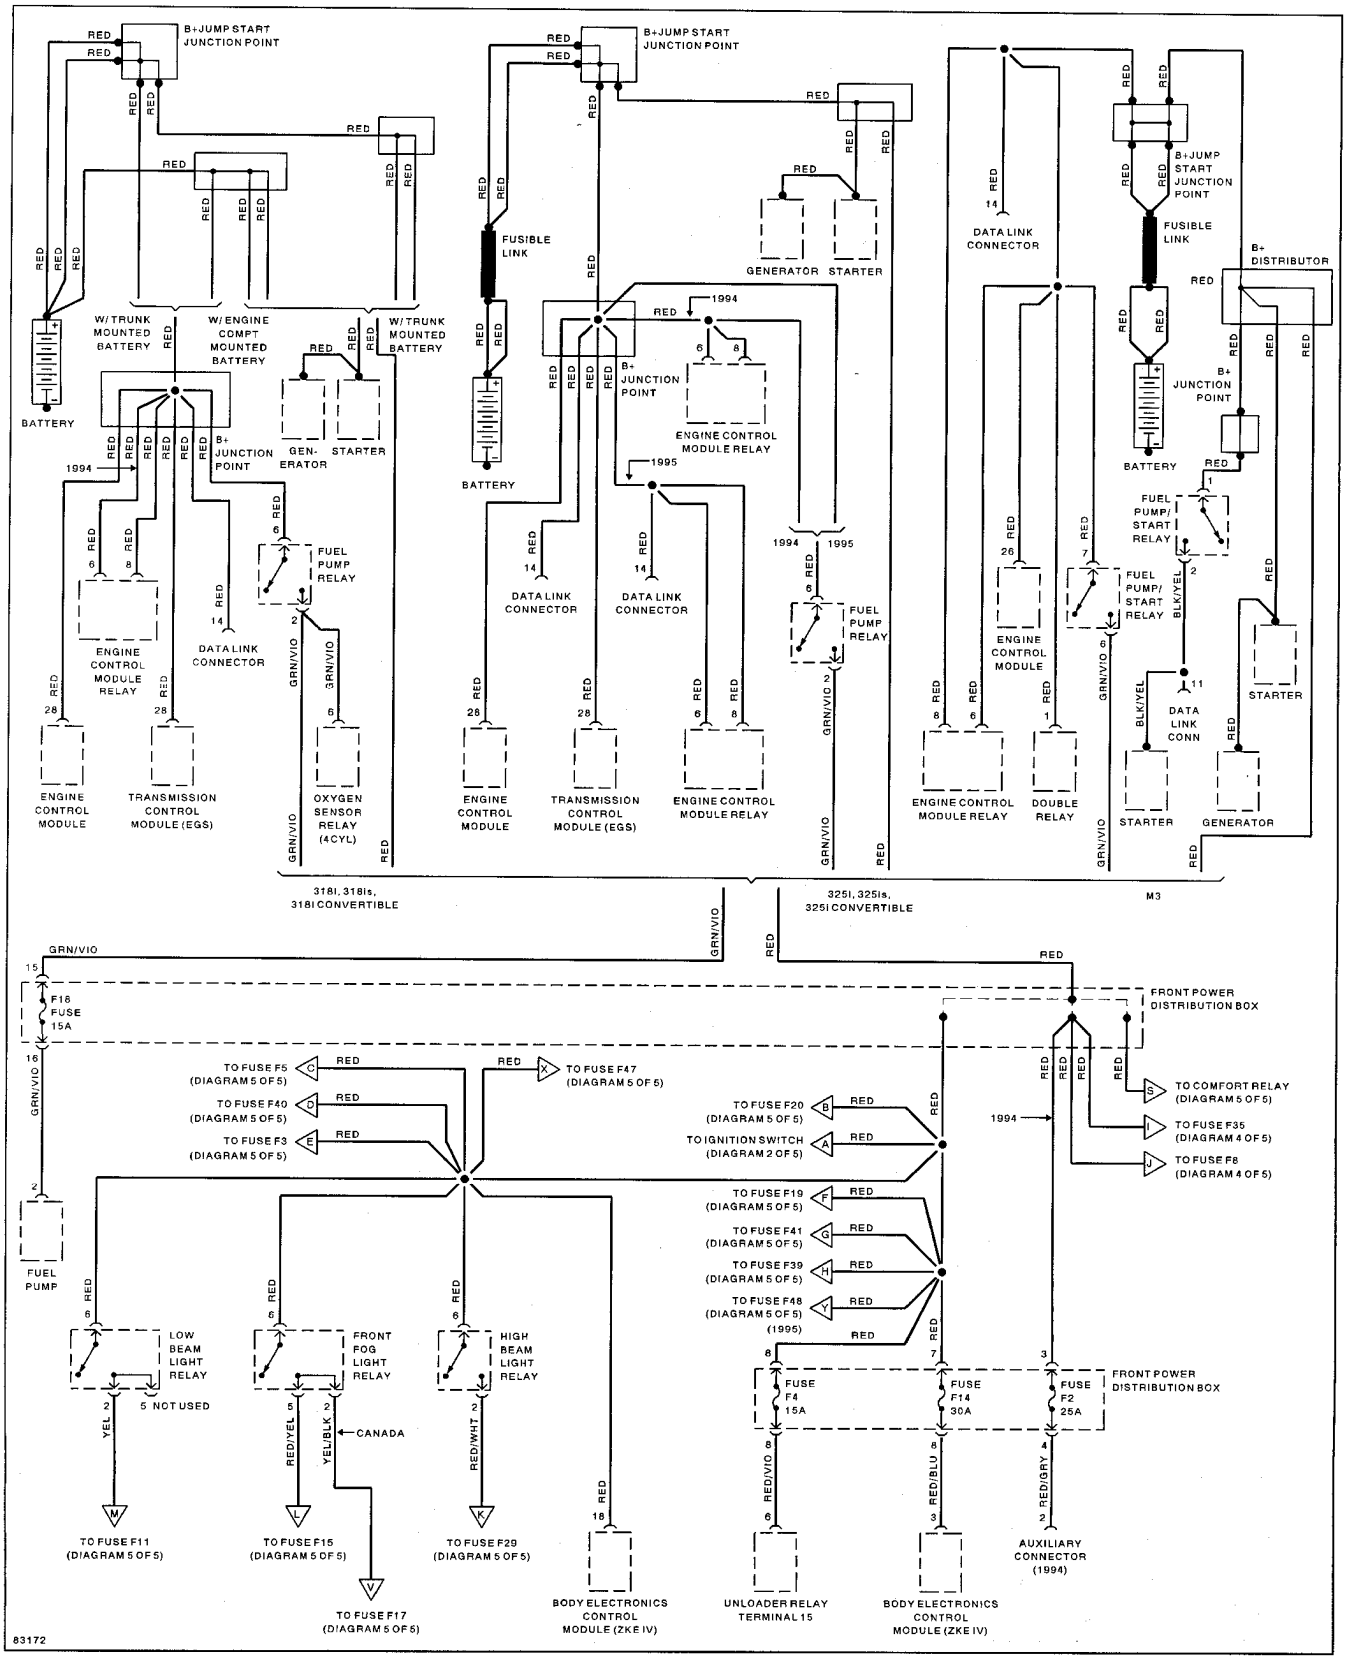


Power Distribution
1992-93 (7 of 7)

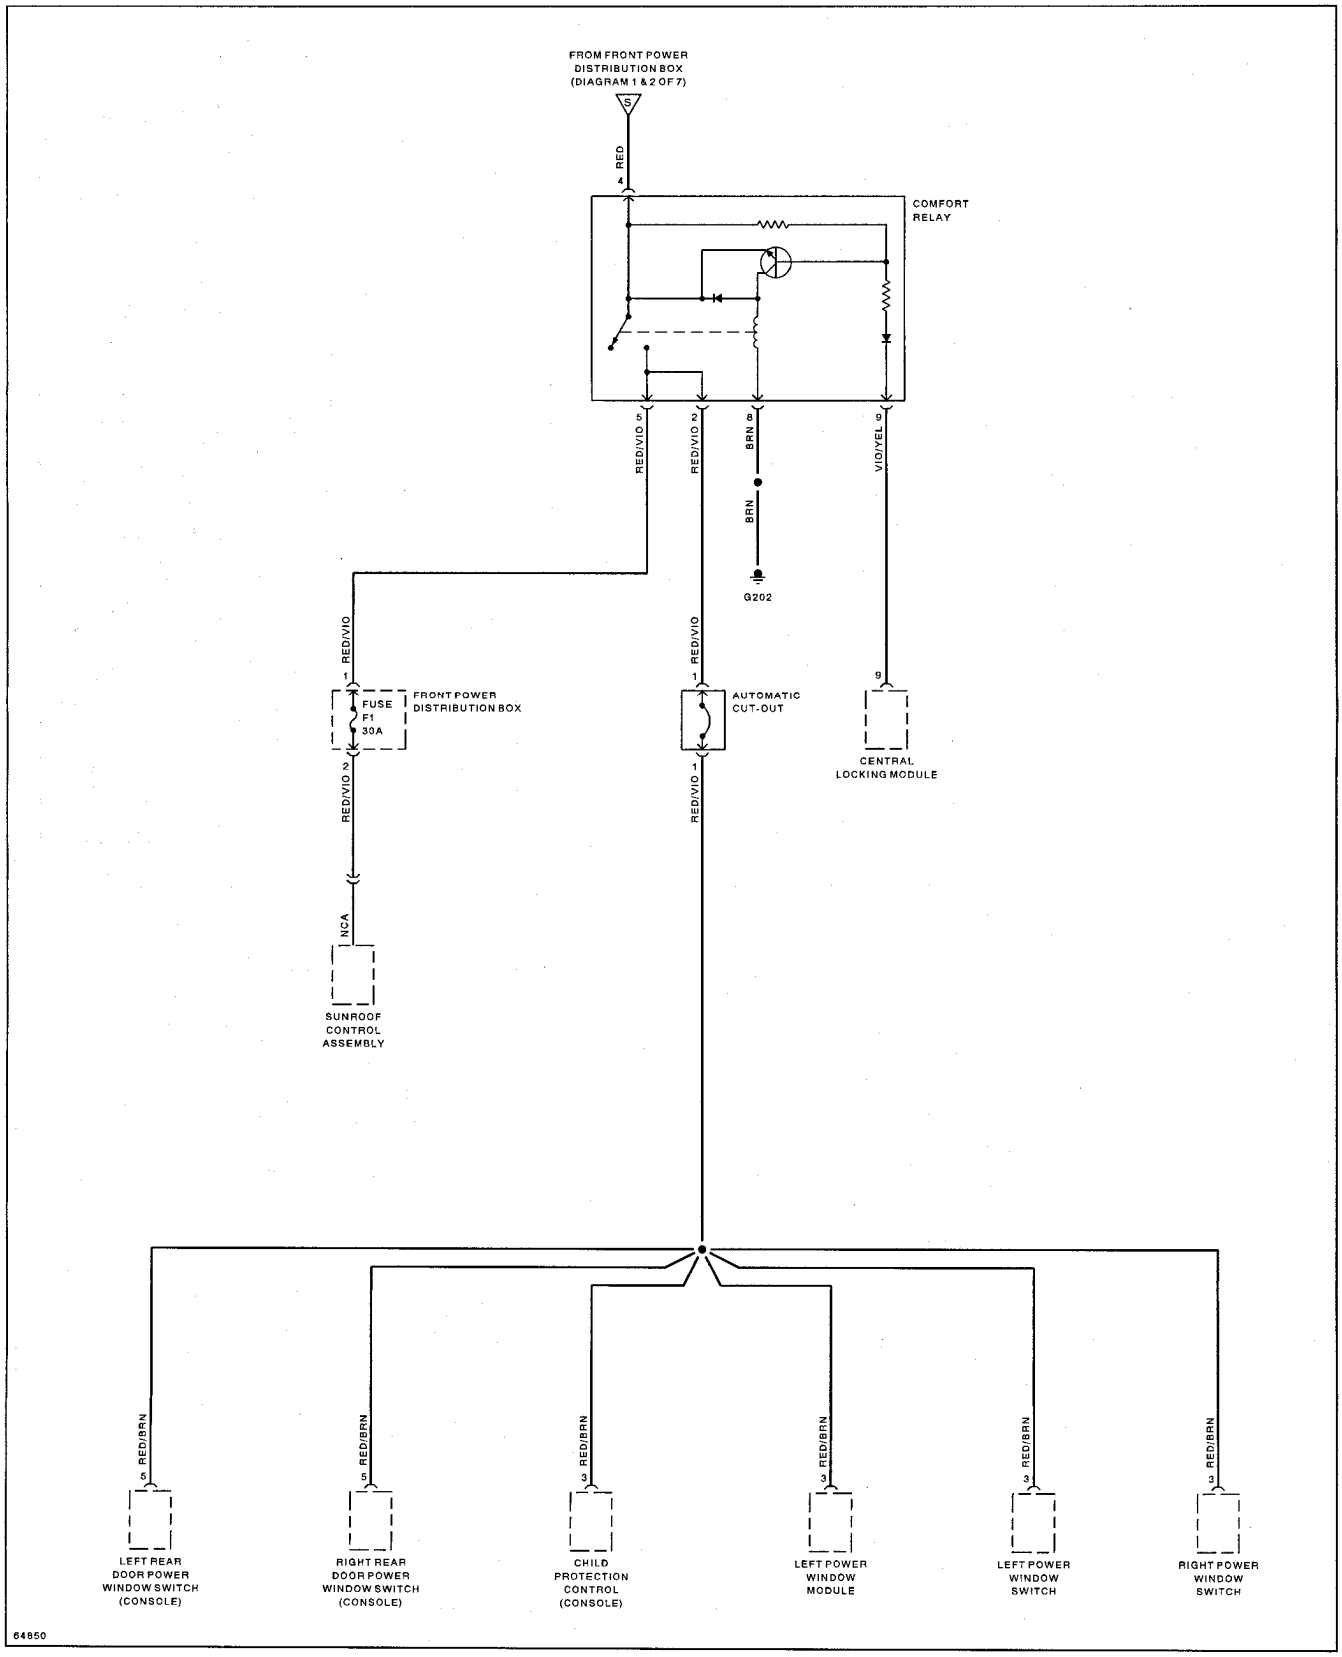


Power Distribution

1992-93 (6 of 7)

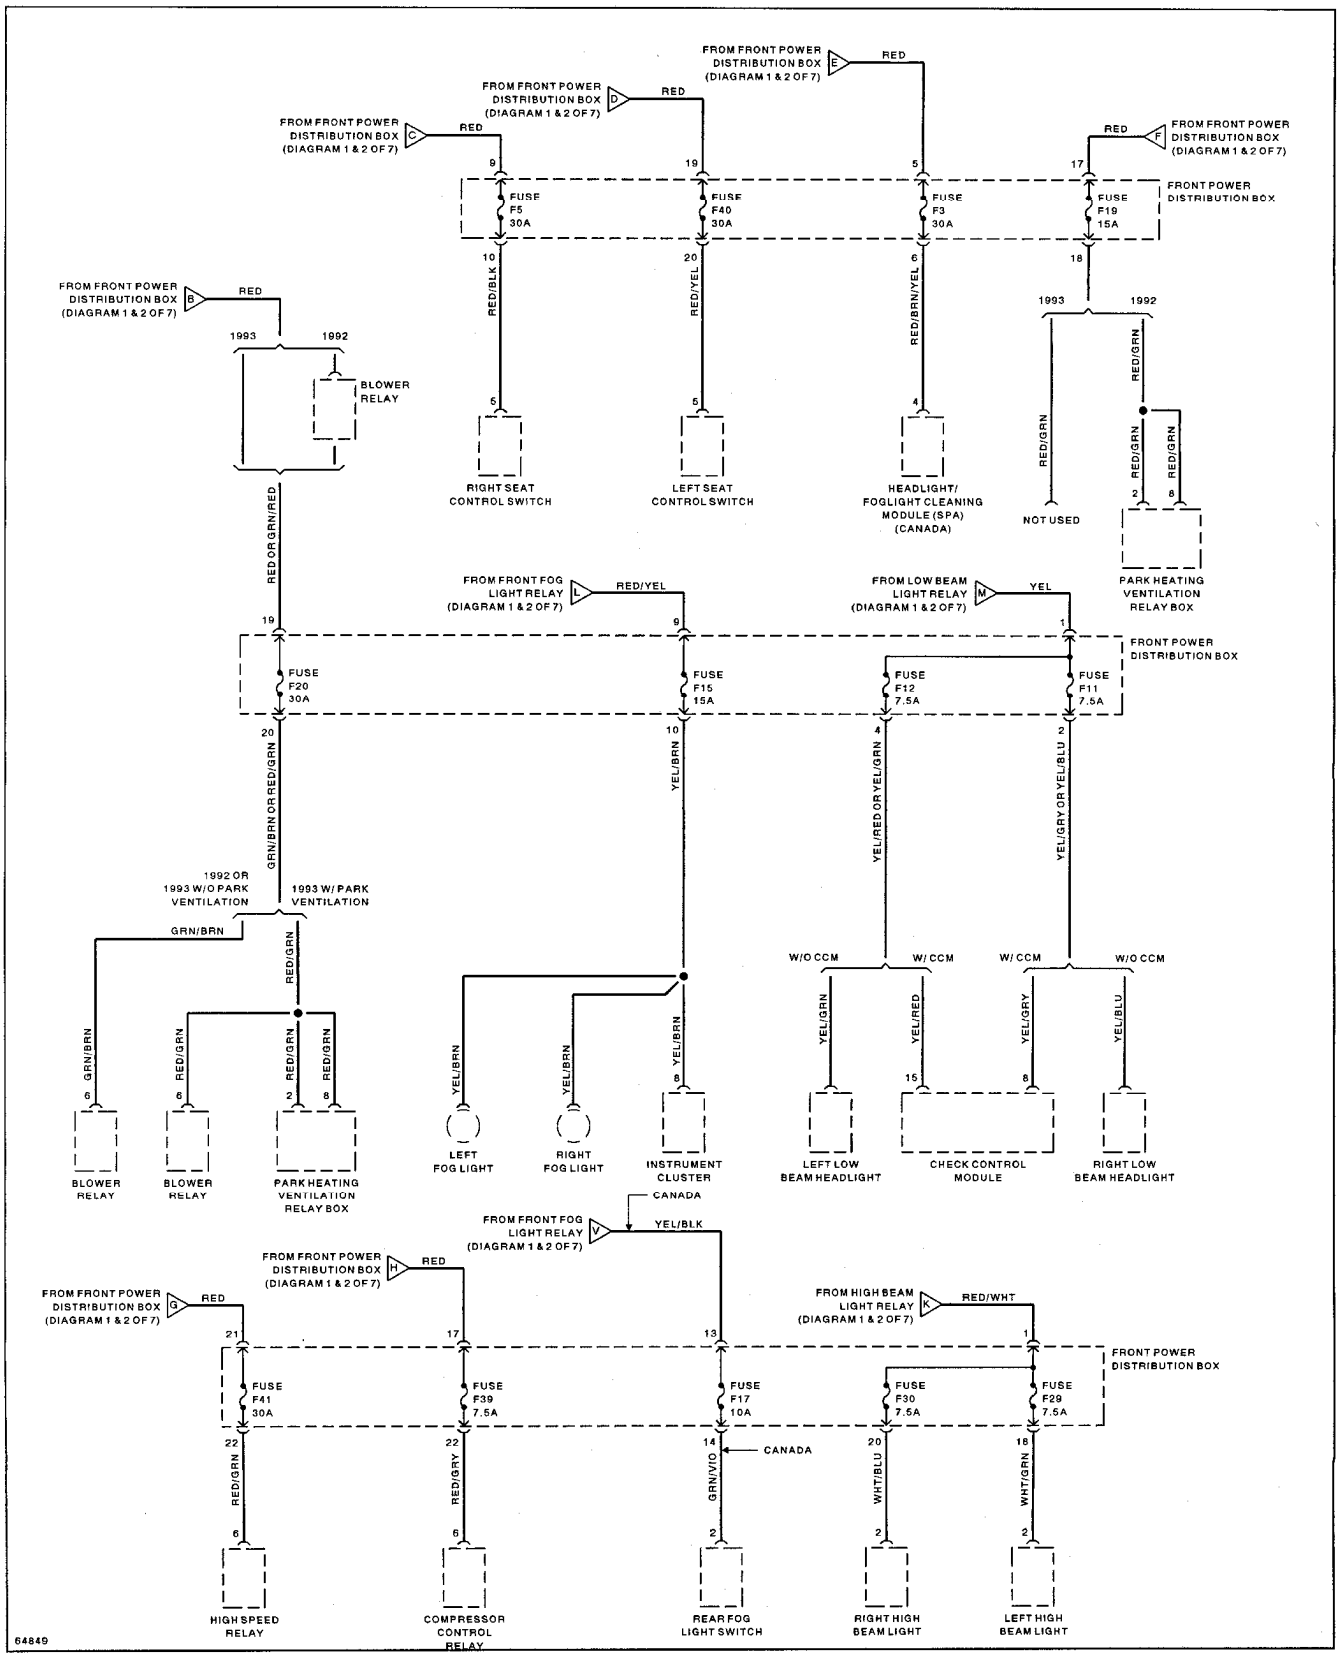


Power Distribution

1992-93 (5 of 7)

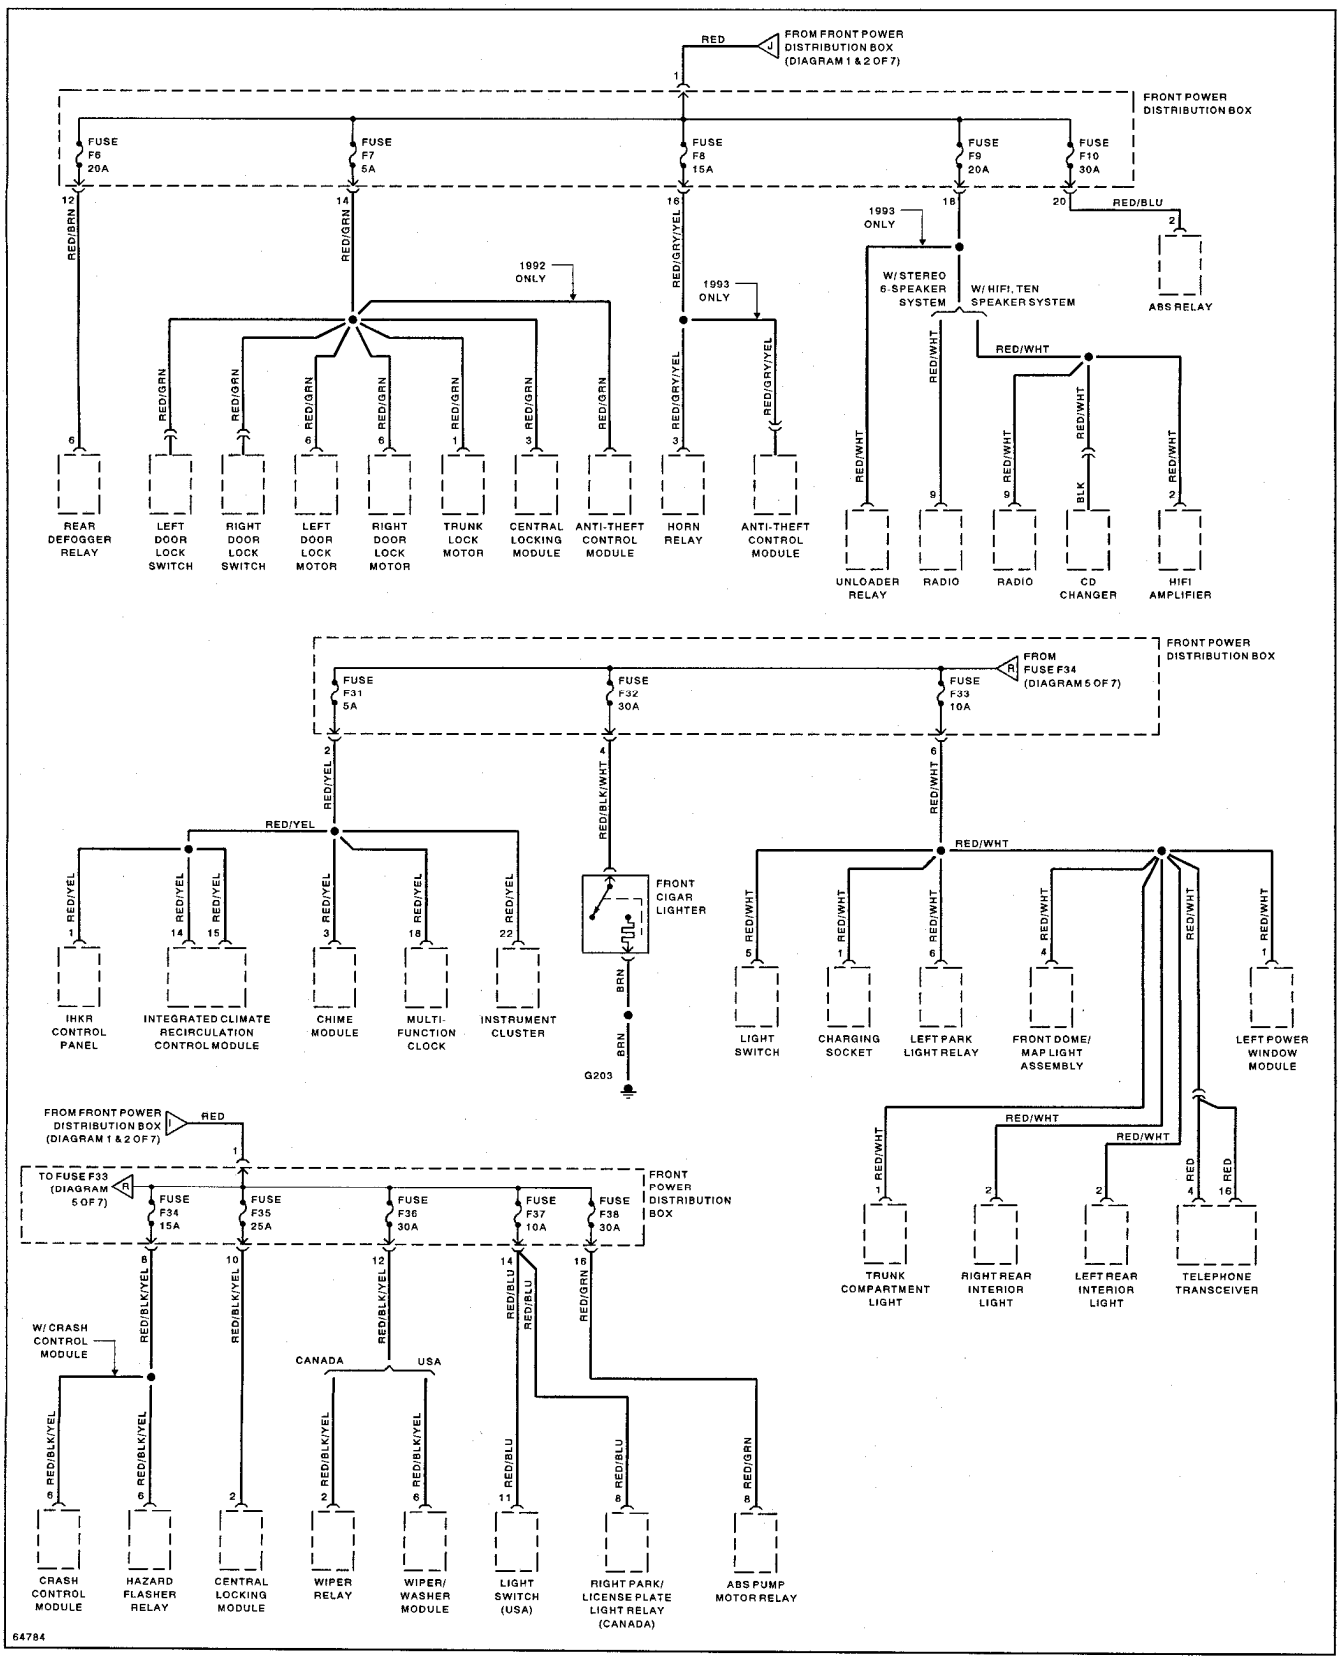


Power Distribution

1992-93 (4 of 7)

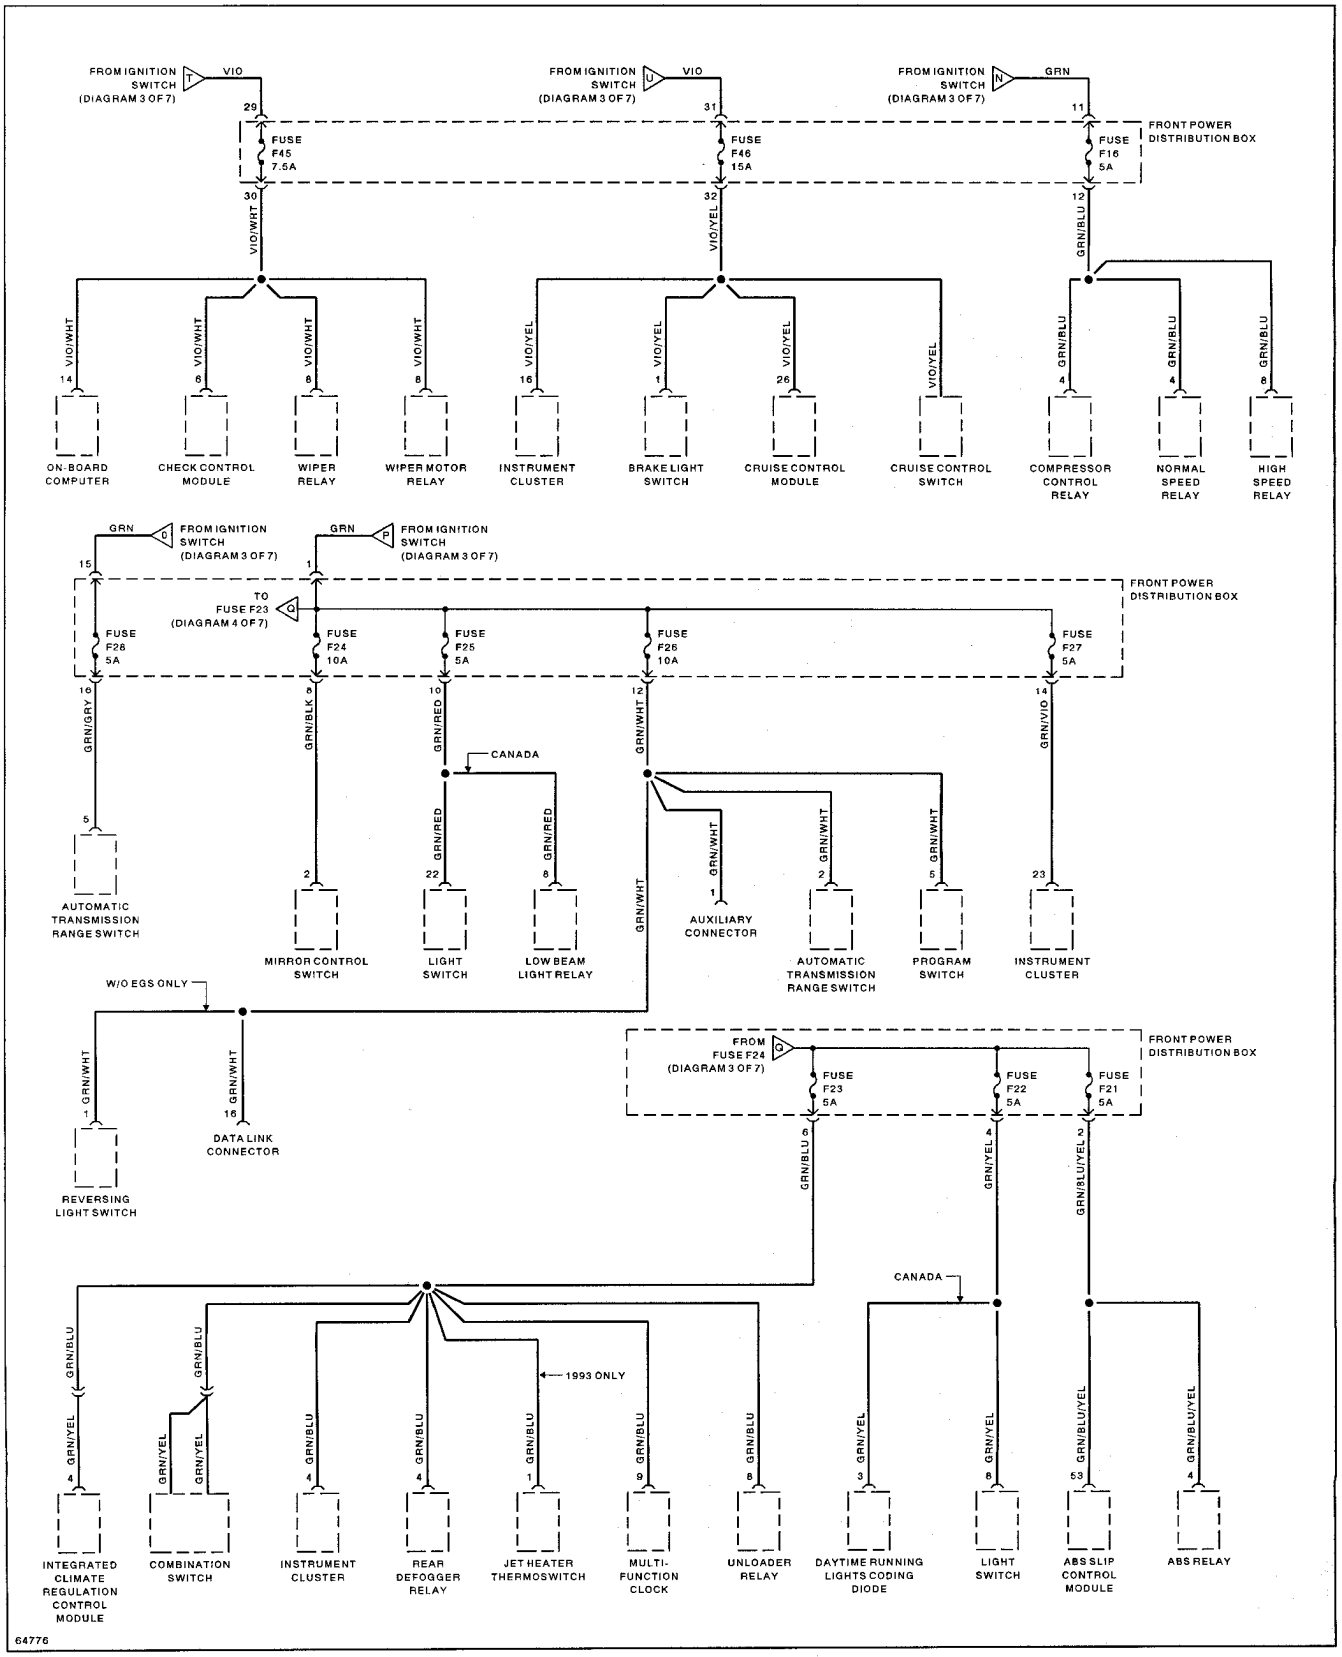


Power Distribution

1992-93 (3 of 7)

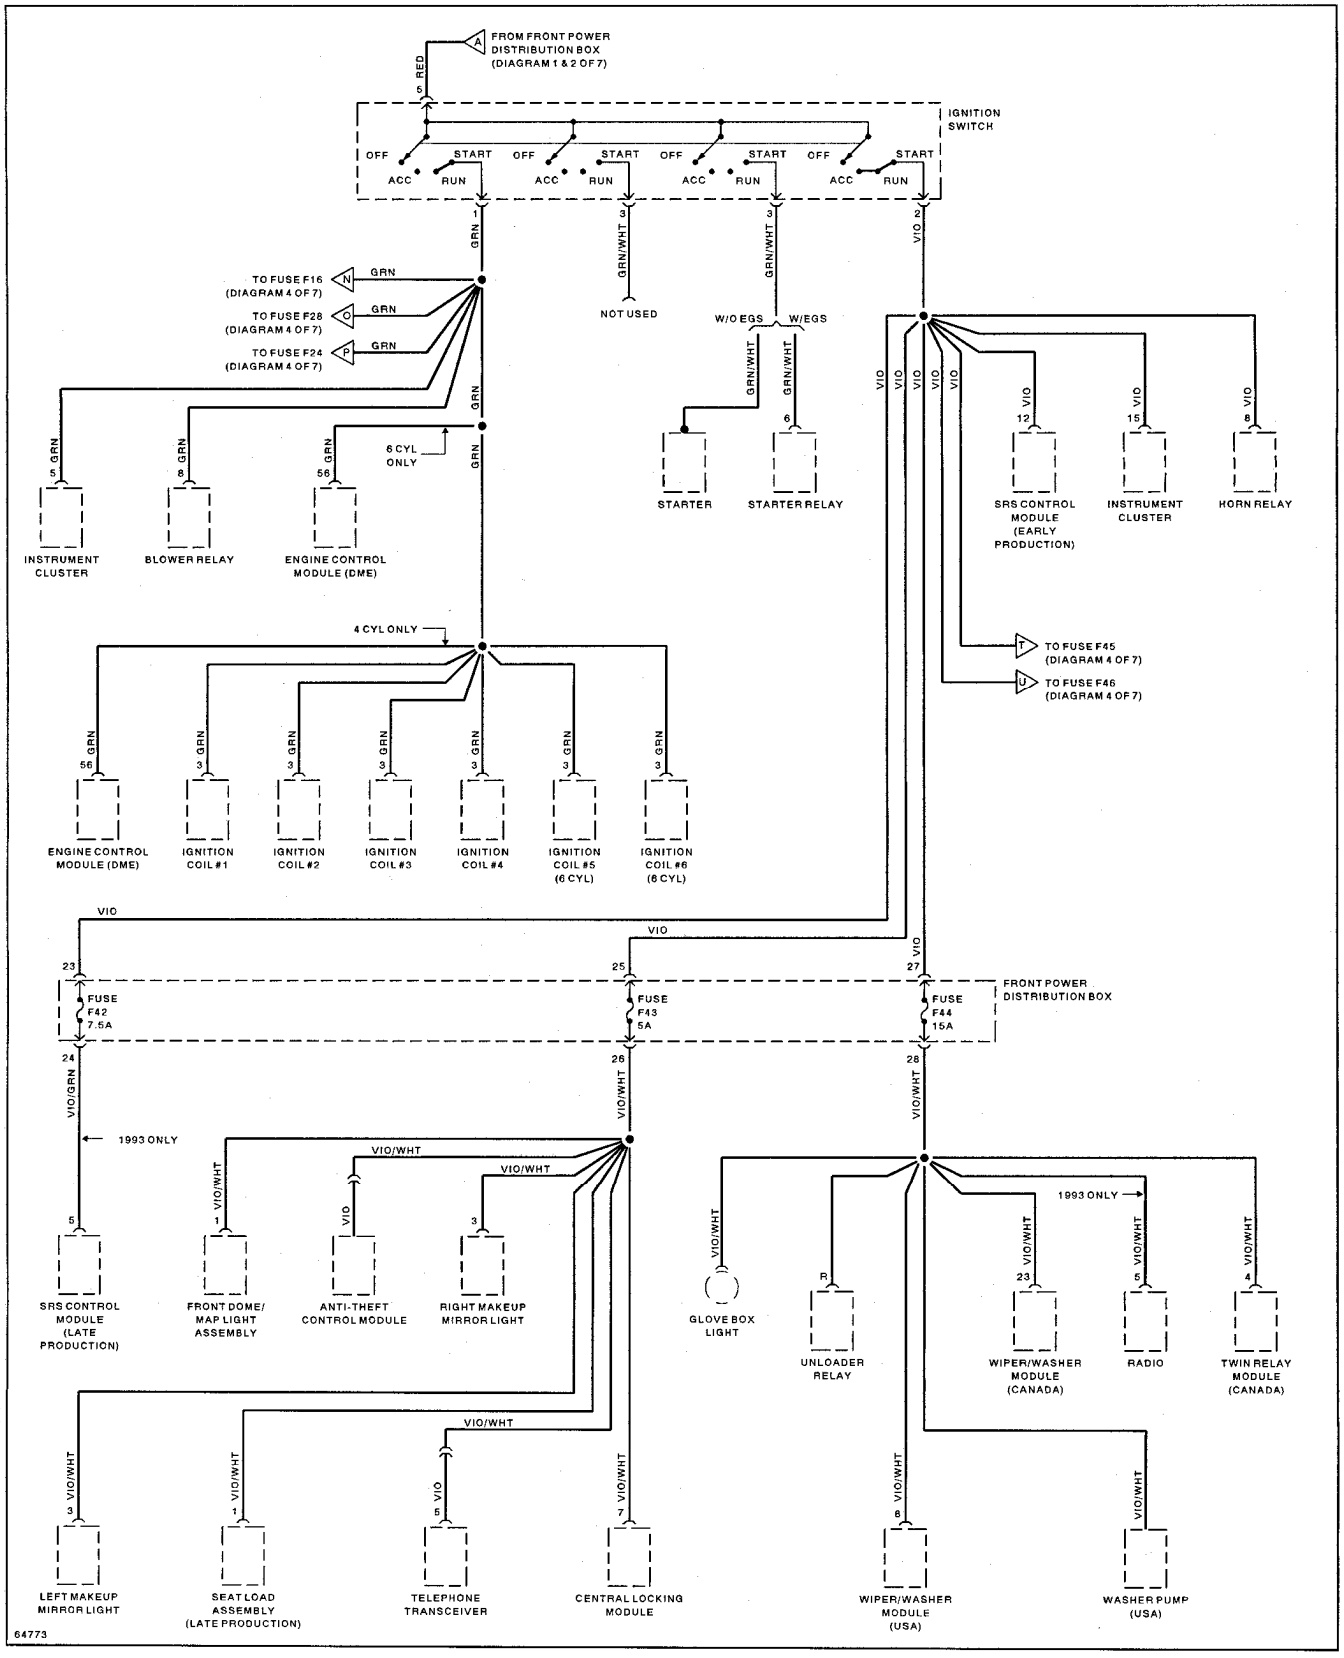


Power Distribution

1992-93 325i Only (2 of 7)

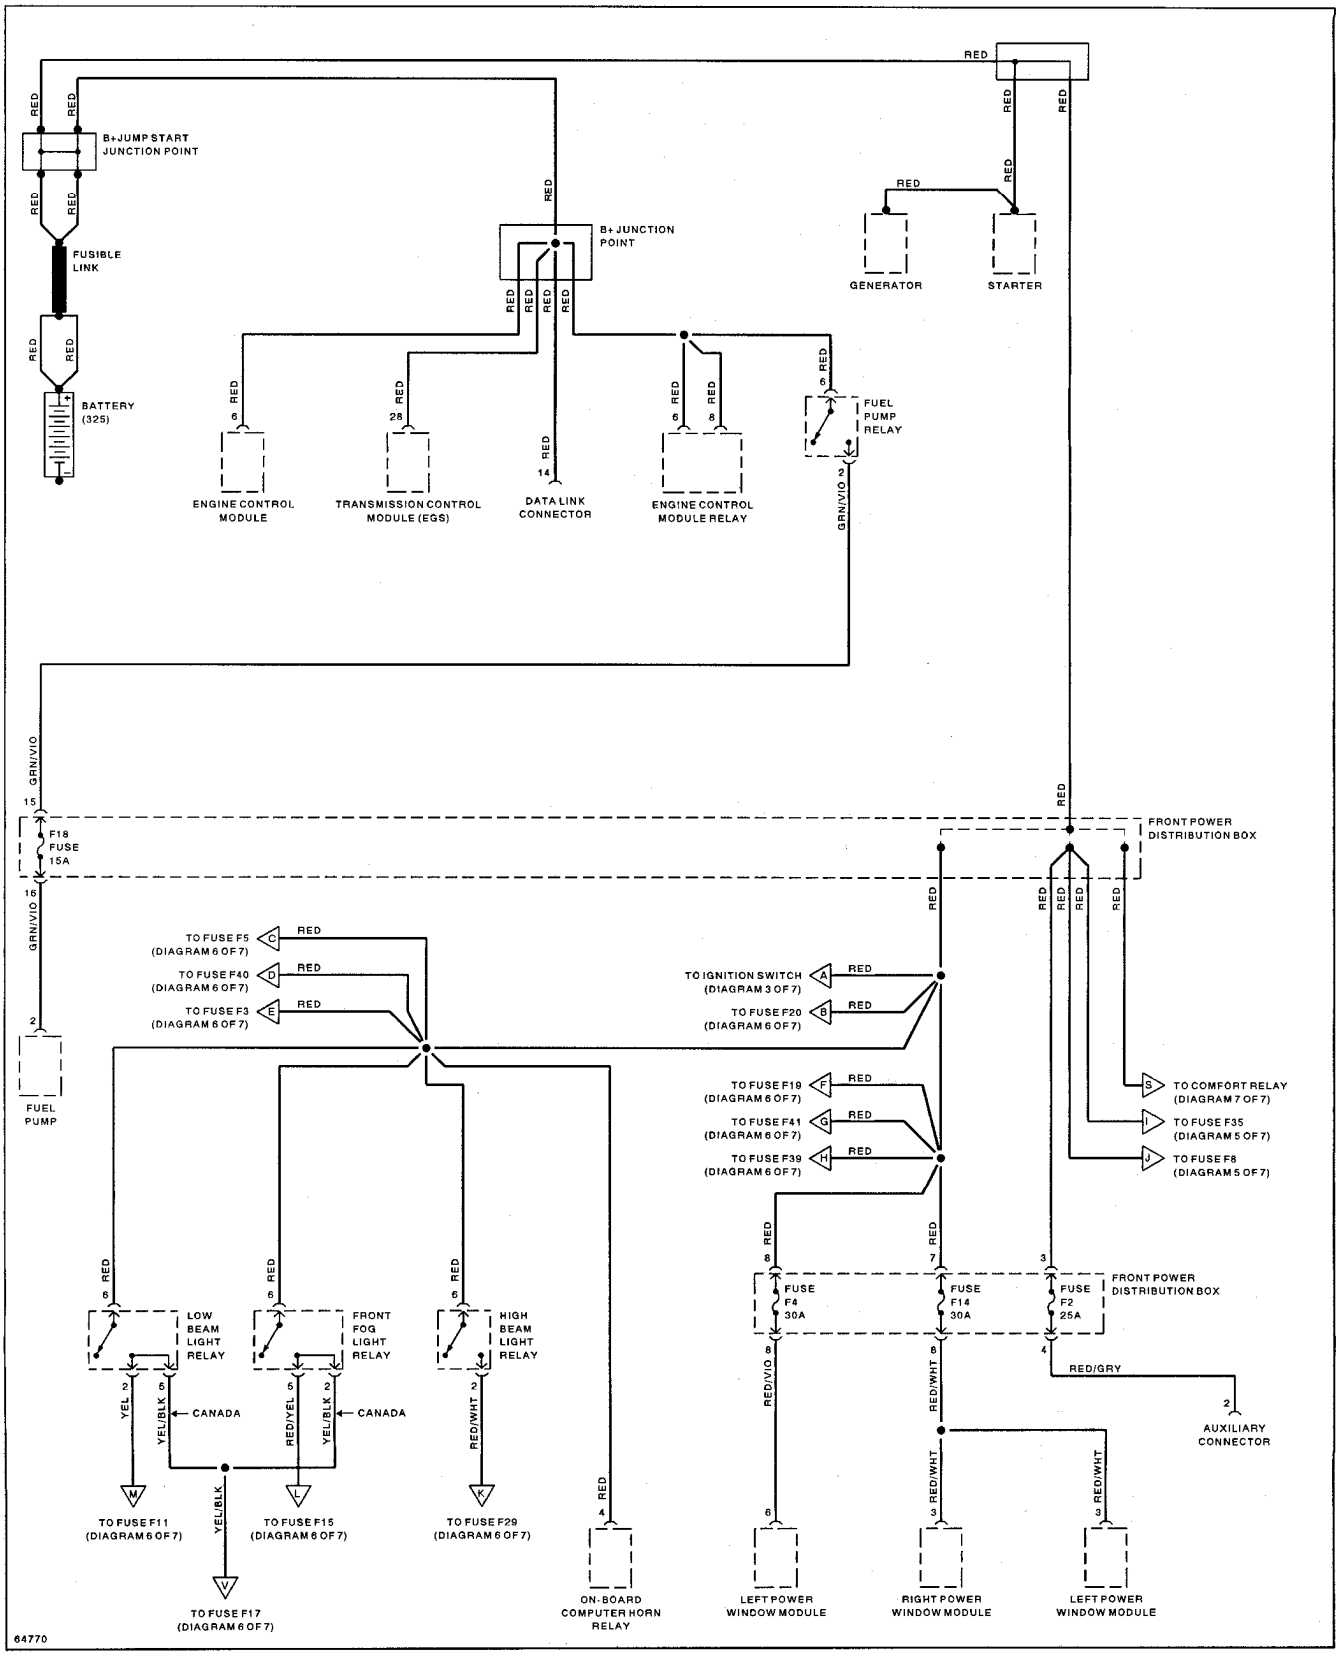

Power Distribution

1992-93 318i Only (1 of 7)

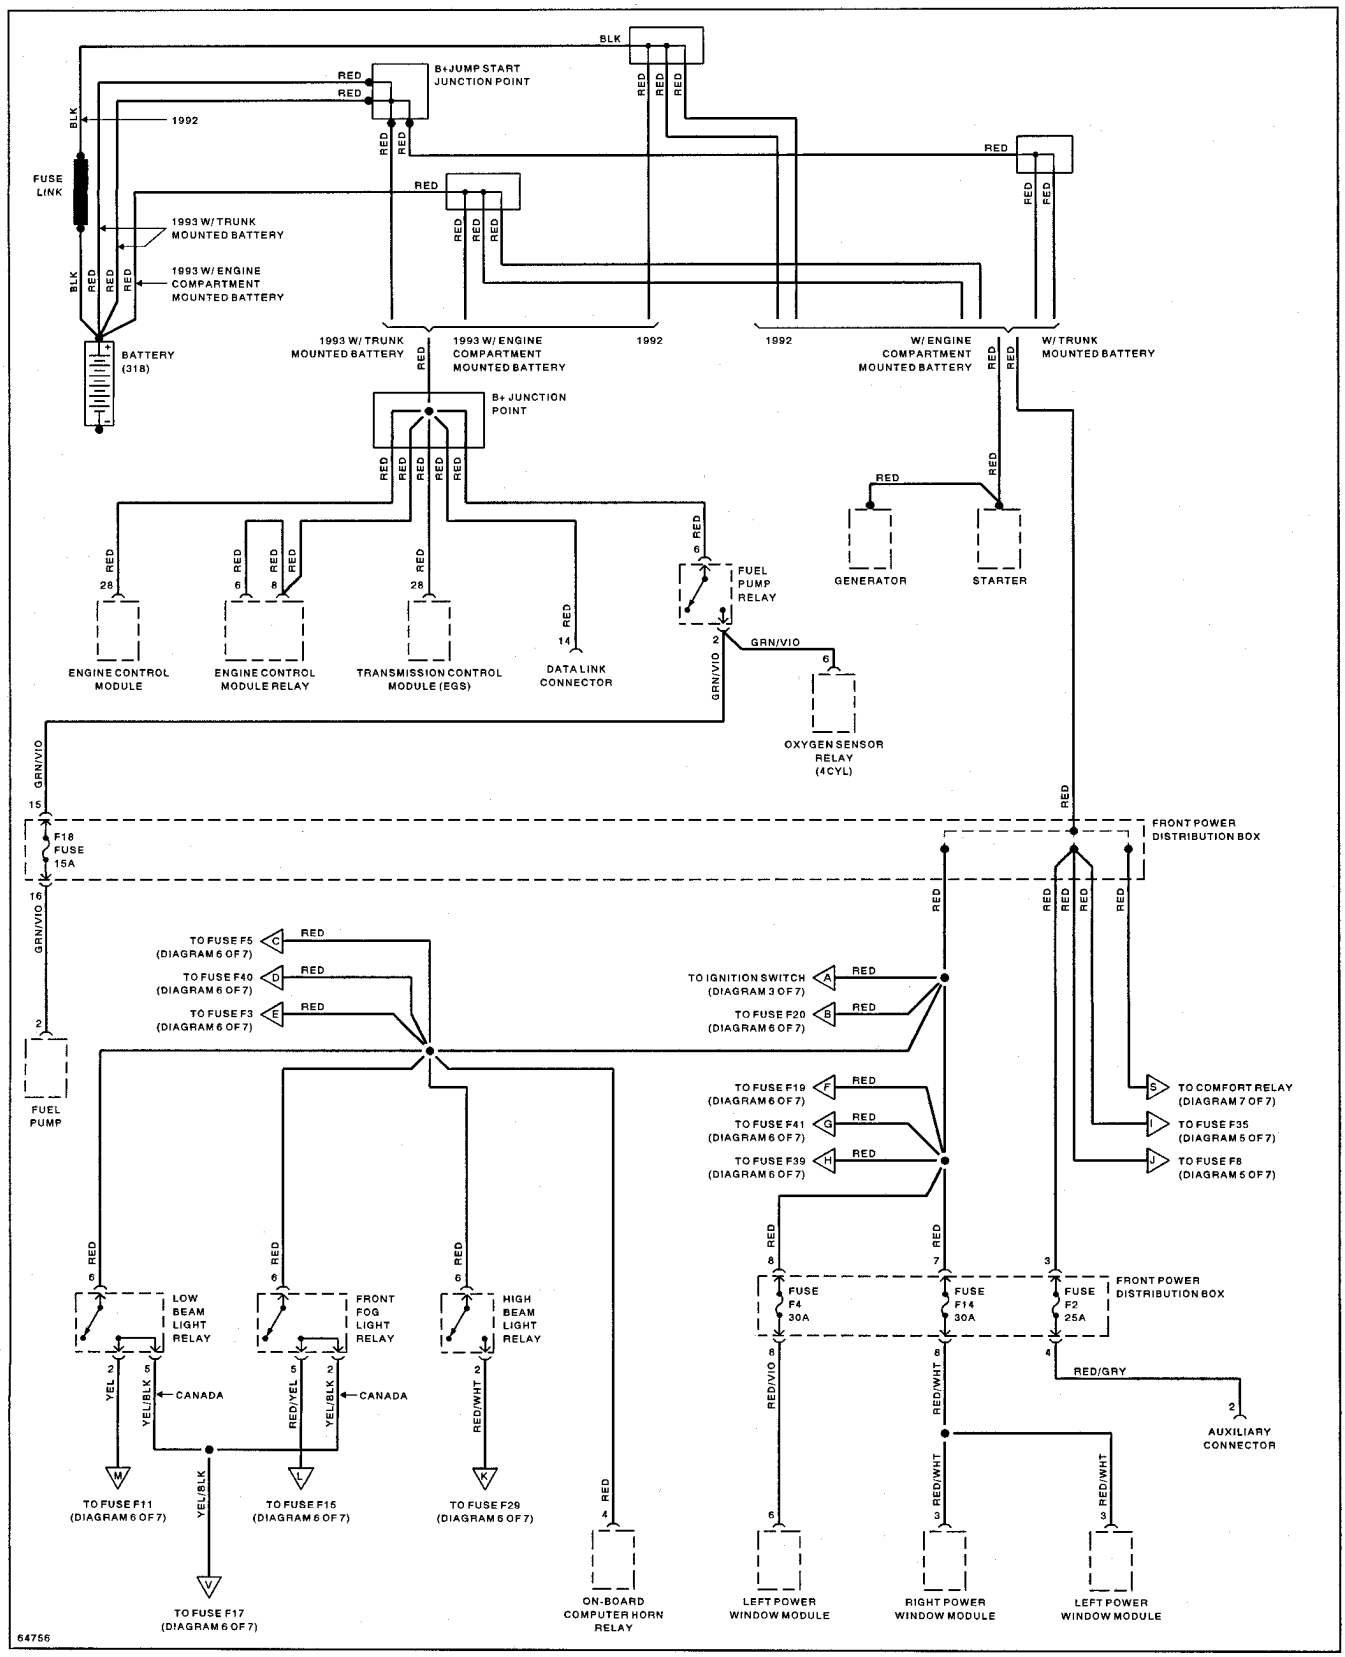

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina

Electrical Wiring Diagrams

GENERAL ELE-1

ELECTRICAL WIRING DIAGRAMS ELE-2
ABS ELE-117
ABS/AST ELE-120
Airbag (Supplemental Restraint System) . . ELE-140
Air Conditioning and Heating ELE-129
Anti-Theft (Alpine) ELE-144
Anti-Theft (EWS II) ELE-150
Body Computer Module ELE-176
Charging System ELE-67
Convertible Top ELE-253
Cruise Control ELE-112
Data Link Connector ELE-86
Engine Cooling ELE-94
Engine Management ELE-70
Exterior Lights ELE-194
Ground Distribution ELE-35
Headlights/Foglights ELE-180
Heated Seats ELE-245
Horns ELE-153
Instrument Panel ELE-165
Interior Lights/Illumination ELE-211
Lumbar Control ELE-247
On-Board Computer ELE-173
Park Ventilation ELE-139
Power Distribution ELE-2
Power Door Locks ELE-226
Power Mirrors ELE-241
Power Seats ELE-243
Power Sunroof ELE-248
Power Windows ELE-231
Radio/Cassette/CD/Speakers ELE-255
Rear Window Defogger ELE-160
Shift Interlock ELE-110
Starting ELE-63
Transmission Electronics ELE-96
Warning System: Chimes ELE-178
Wiper/Washer ELE-155

ELECTRICAL COMPONENT LOCATIONS

Relay and fuse positions, ground locations . . . . . see **Repair Group 610**

GENERAL

This section contains wiring diagrams for 1992 through 1998 BMW 3 Series models.

WARNING —

On cars equipped with airbags, special precautions apply to any electrical testing or repair. The airbag unit is an explosive device and must be handled with exterme care. Before starting any work on an airbag equipped car, refer to the warnings and cautions in **720 Seatbelts** *and* **721 Airbag Systems (SRS)**.

NOTE —

- *The gear position/neutral safety switch is also sometimes referred to as the automatic transmission range switch.*
- *The EWS II system is also sometimes referred to as the Driveaway Protection System or the electronic immobilization system.*

CAUTION —

- *Always switch the ignition off and disconnect the negative (–) battery cable before removing any electrical components.*
- *Prior to disconnecting the battery, read the battery disconnection cautions given at the front of this manual on page viii.*
- *Connect and disconnect ignition system wires, multiple connectors and ignition test equipment leads only while ignition is switched off.*
- *Always switch a test meter to the appropiate function and range before making test connections.*

- *All-Season Traction (AST) is also referred to as ASC or ASC+T.*

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina