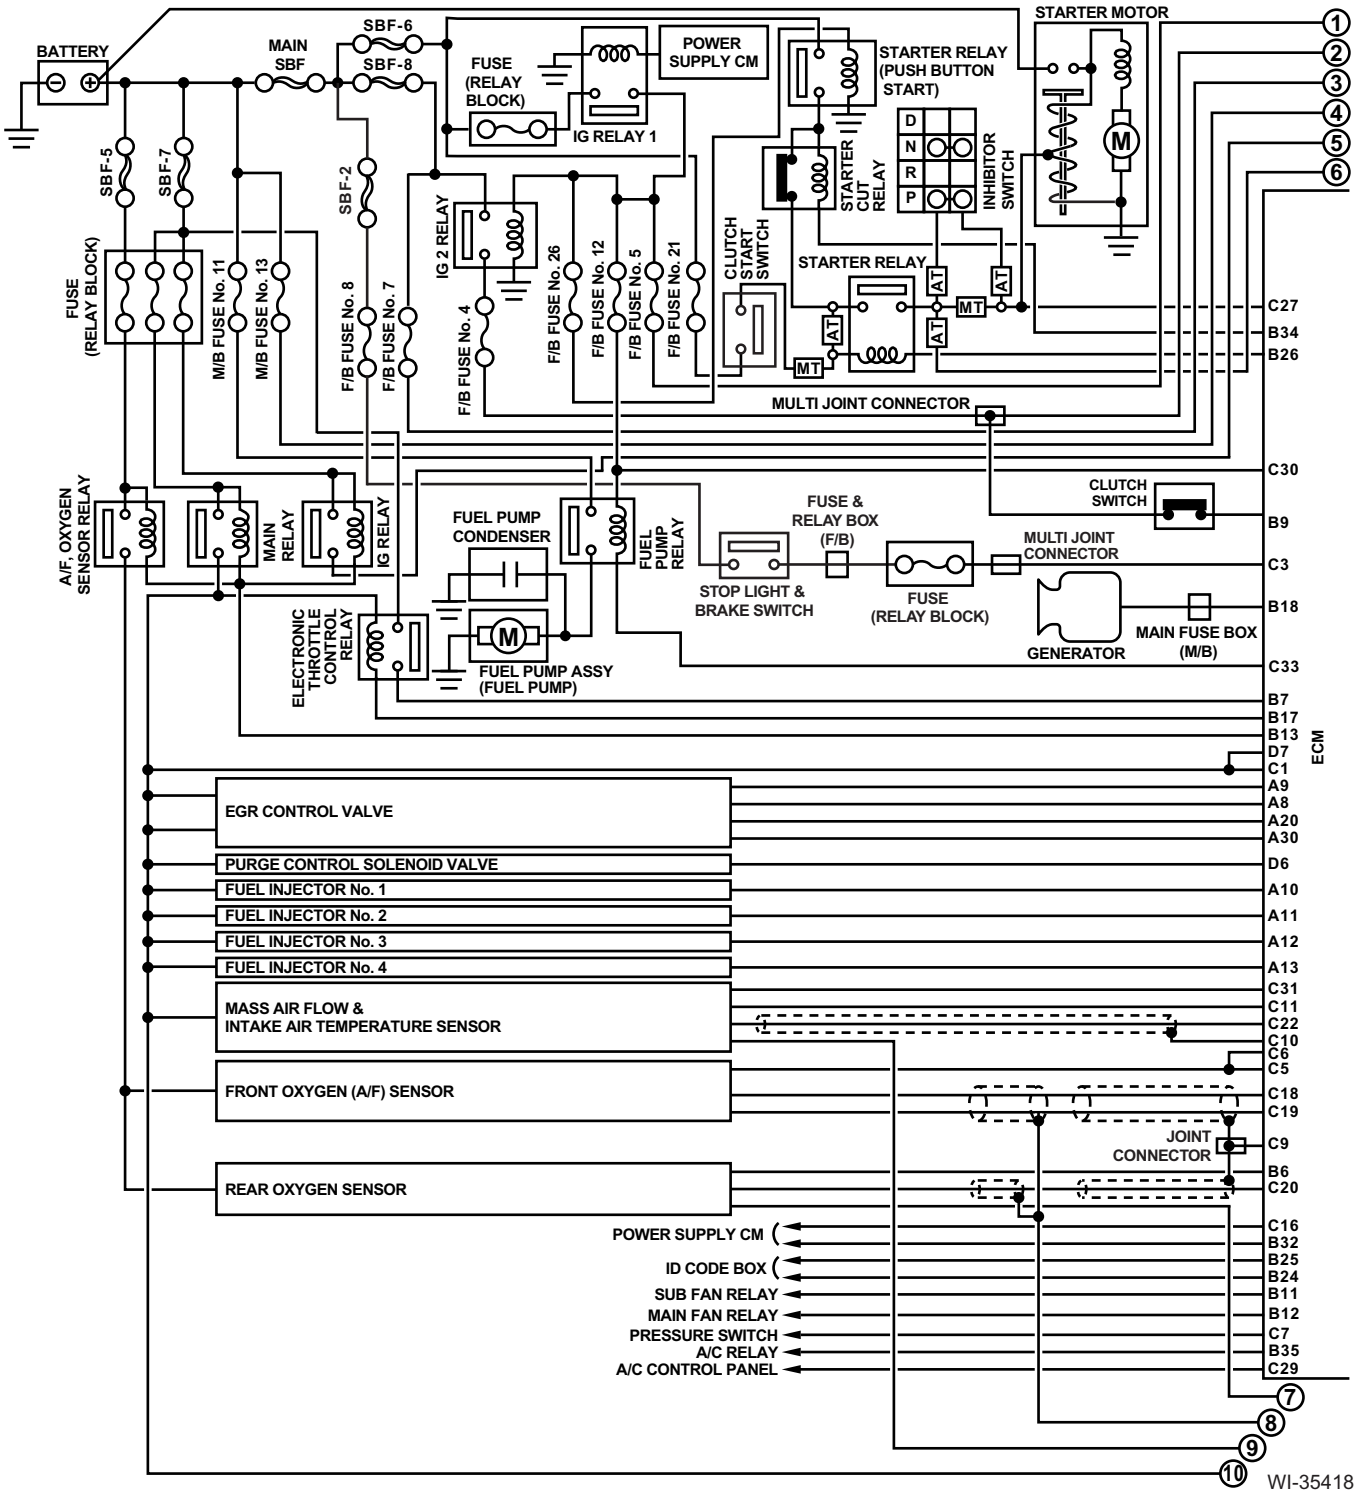

BATTERY
MAIN SBF
SBF-6
SBF-8
FUSE (RELAY BLOCK)
IG RELAY 1
POWER SUPPLY CM
STARTER RELAY (PUSH BUTTON START)
STARTER MOTOR
SBF-5
SBF-7
SBF-2
IG 2 RELAY
STARTER CUT RELAY
INHIBITOR SWITCH
D
N
R
P
FUSE (RELAY BLOCK)
M/B FUSE No. 11
M/B FUSE No. 13
F/B FUSE No. 8
F/B FUSE No. 7
F/B FUSE No. 4
F/B FUSE No. 26
F/B FUSE No. 12
F/B FUSE No. 5
F/B FUSE No. 21
CLUTCH START SWITCH
STARTER RELAY
AT
MT
C27
B34
B26
MULTI JOINT CONNECTOR
C30
CLUTCH SWITCH
B9
A/F, OXYGEN SENSOR RELAY
MAIN RELAY
IG RELAY
FUEL PUMP CONDENSER
FUEL PUMP RELAY
FUSE & RELAY BOX (F/B)
MULTI JOINT CONNECTOR
C3
STOP LIGHT & BRAKE SWITCH
FUSE (RELAY BLOCK)
B18
GENERATOR
MAIN FUSE BOX (M/B)
C33
ELECTRONIC THROTTLE CONTROL RELAY
FUEL PUMP ASSY (FUEL PUMP)
B7
B17
B13
D7
C1
ECM
EGR CONTROL VALVE
A9
A8
A20
A30
PURGE CONTROL SOLENOID VALVE
D6
FUEL INJECTOR No. 1
A10
FUEL INJECTOR No. 2
A11
FUEL INJECTOR No. 3
A12
FUEL INJECTOR No. 4
A13
MASS AIR FLOW & INTAKE AIR TEMPERATURE SENSOR
C31
C11
C22
C10
C6
FRONT OXYGEN (A/F) SENSOR
C5
C18
C19
JOINT CONNECTOR
C9
REAR OXYGEN SENSOR
B6
C20
POWER SUPPLY CM
C16
ID CODE BOX
B32
B25
SUB FAN RELAY
B24
MAIN FAN RELAY
B11
PRESSURE SWITCH
B12
A/C RELAY
C7
A/C CONTROL PANEL
B35
C29
1
2
3
4
5
6
7
8
9
10
WI-35418