
Position of Parts in Engine Compartment

[LHD]

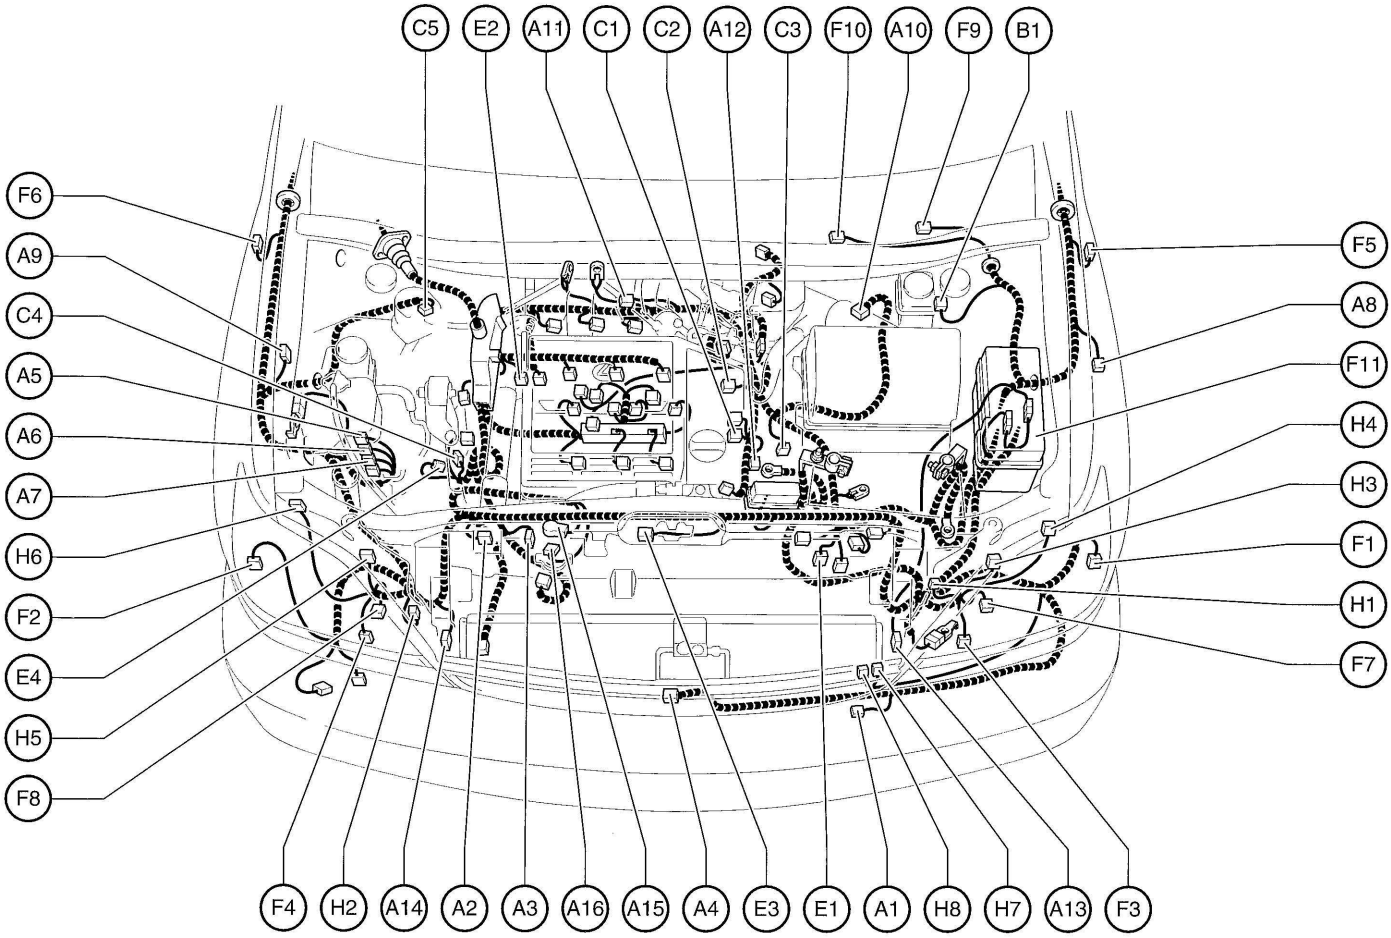

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Magnetic Clutch and Lock Sensor
A 4 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
A 5 ABS & BA & TRC & VSC Actuator
A 6 ABS & BA & TRC & VSC Actuator
A 7 ABS & BA & TRC & VSC Actuator
A 8 ABS Speed Sensor Front LH
A 9 ABS Speed Sensor Front RH
A10 Air Flow Meter
A11 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A12 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
A13 Airbag Sensor Front LH
A14 Airbag Sensor Front RH
A15 Alternator
A16 Alternator

B 1 Brake Fluid Level Warning SW

C 1 Camshaft Timing Oil Control Valve LH
C 2 Camshaft Timing Oil Control Valve RH
C 3 Counter Gear Speed Sensor
C 4 Crankshaft Position Sensor
C 5 Cruise Control Actuator


E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 3 Engine Hood Courtesy SW
E 4 Engine Oil Level Sensor

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Window Defogger
F10 Front Wiper Motor
F11 Fusible Link Block

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight LH (High Beam)
H 4 Headlight LH (Low Beam)
H 5 Headlight RH (High Beam)
H 6 Headlight RH (Low Beam)
H 7 Horn LH
H 8 Horn RH

Position of Parts in Engine Compartment

[LHD]

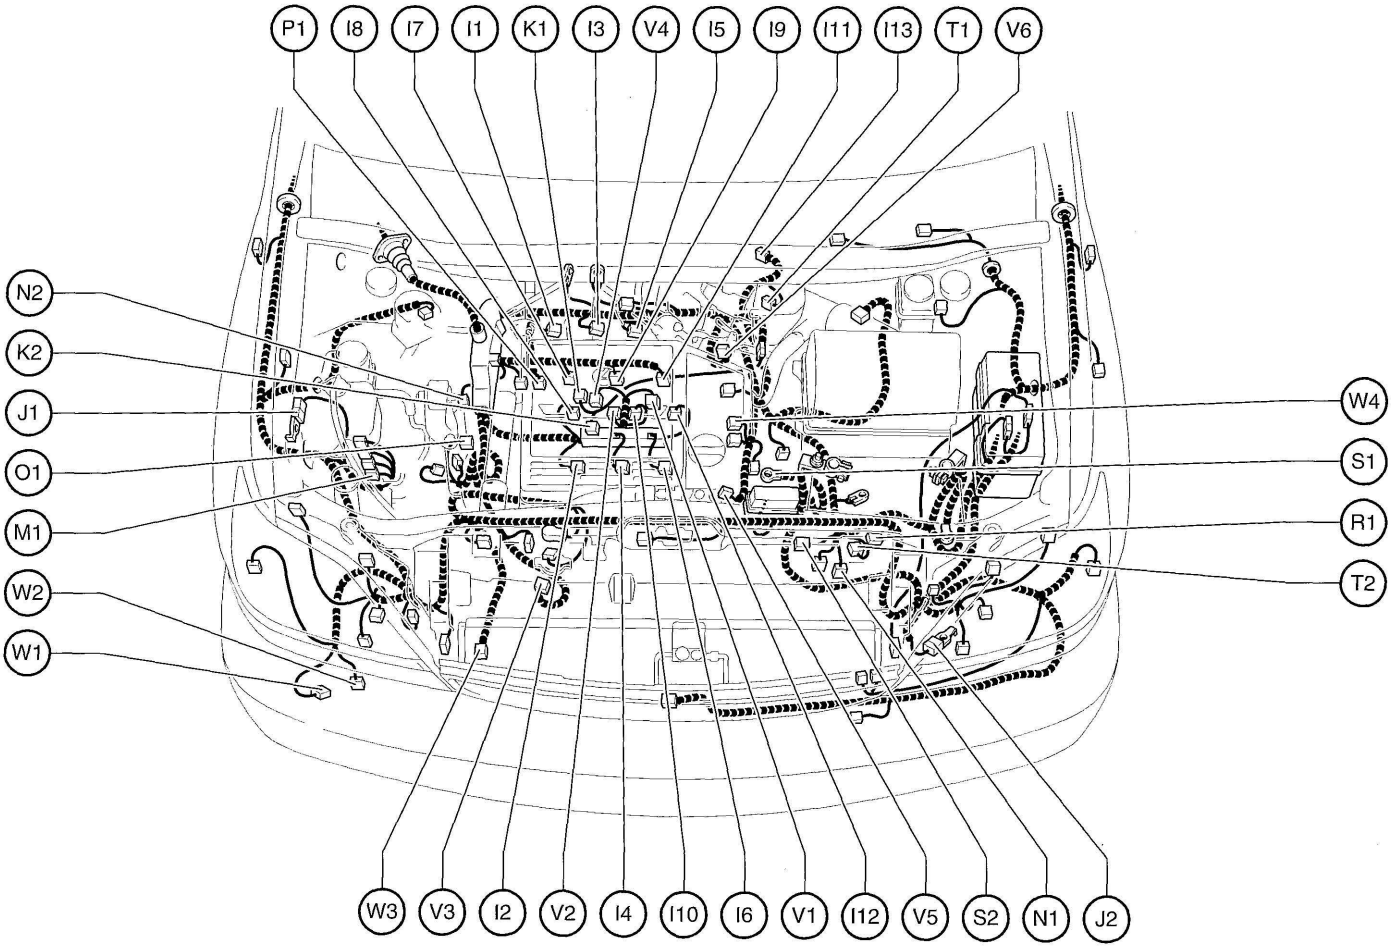

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 5 Ignition Coil and Igniter No.5
I 6 Ignition Coil and Igniter No.6
I 7 Injector No.1
I 8 Injector No.2
I 9 Injector No.3
I 10 Injector No.4
I 11 Injector No.5
I 12 Injector No.6
I 13 ISC Valve

J 1 Junction Connector
J 2 Junction Connector

K 1 Knock Sensor 1
K 2 Knock Sensor 2

M 1 Master Cylinder Pressure Sensor

N 1 Neutral Start SW, A/T Indicator Light SW and Back-Up Light SW
N 2 Noise Filter (Ignition System)

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

S 1 Starter
S 2 Starter


T 1 Throttle Position Sensor
T 2 Turbine Speed Sensor

V 1 VSV (ACIS No.1)
V 2 VSV (ACIS No.2)
V 3 VSV (ACM)
V 4 VSV (EVAP)
V 5 VVT Sensor LH
V 6 VVT Sensor RH

W 1 Washer Level Warning SW
W 2 Washer Motor
W 3 Water Temp. SW No.1
W 4 Water Temp. SW No.2

Position of Parts in Instrument Panel

[LHD]

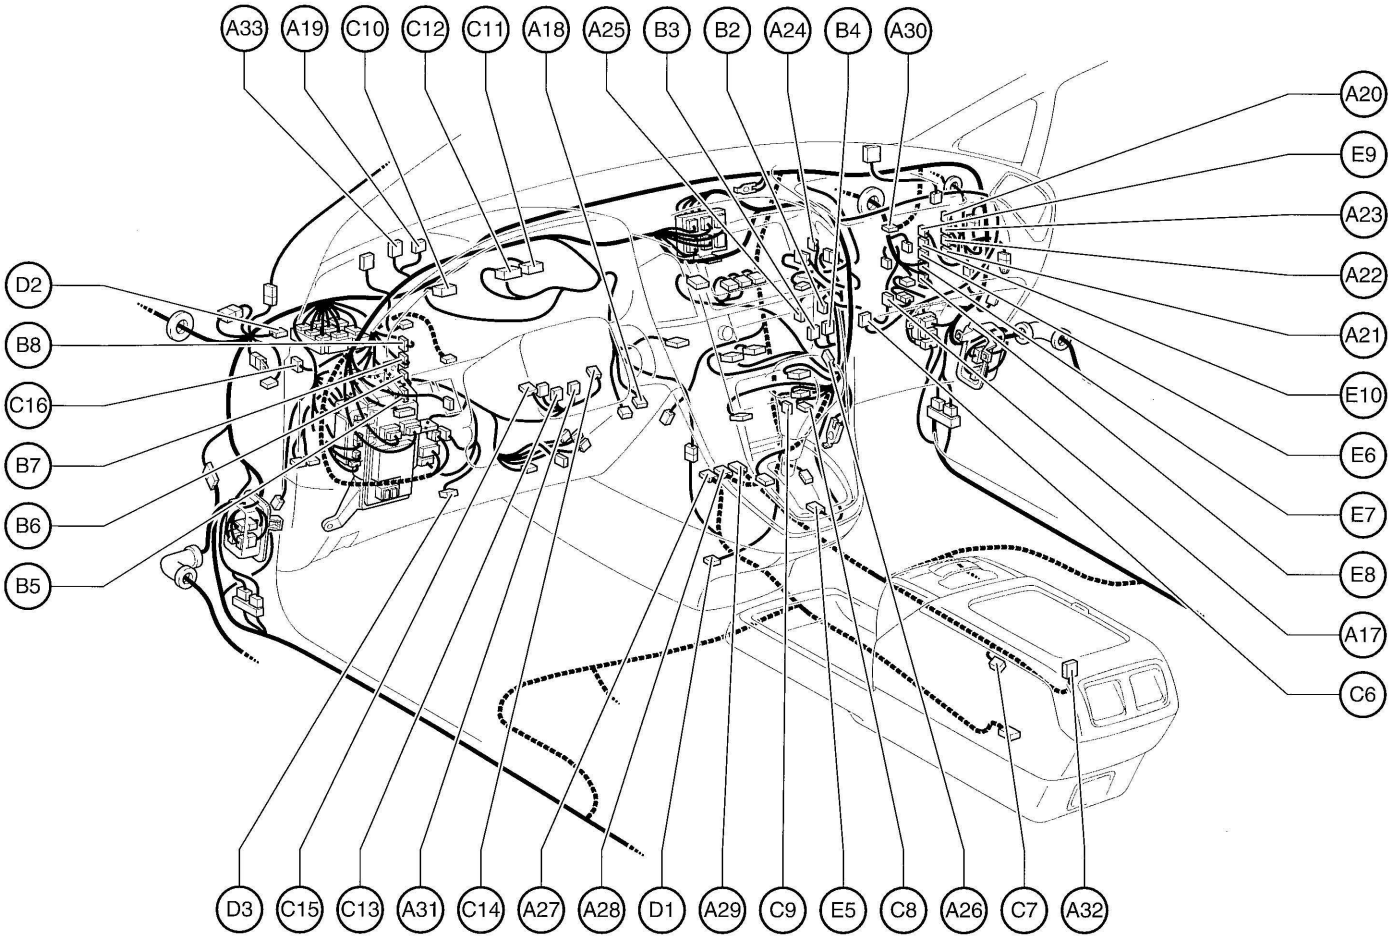

A17 A/C Evaporator Temp. Sensor
A18 A/C Room Temp. Sensor
A19 A/C Solar Sensor
A20 ABS & BA & TRC & VSC ECU
A21 ABS & BA & TRC & VSC ECU
A22 ABS & BA & TRC & VSC ECU
A23 ABS & BA & TRC & VSC ECU
A24 Air Inlet Control Servo Motor
A25 Air Mix Control Servo Motor
A26 Air Vent Mode Control Servo Motor
A27 Airbag Sensor Assembly
A28 Airbag Sensor Assembly
A29 Airbag Sensor Assembly
A30 Airbag Squib (Front Passenger's Airbag Assembly)
A31 Airbag Squib (Steering Wheel Pad)
A32 Ashtray Illumination
A33 Automatic Light Control Sensor

B 2 Blower Motor
B 3 Blower Motor Control Relay
B 4 Blower Motor Control Relay
B 5 Body ECU
B 6 Body ECU
B 7 Body ECU
B 8 Body ECU


C 6 CD Automatic Changer
C 7 Cellular Phone (Hand Set)
C 8 Cigarette Lighter
C 9 Cigarette Lighter Illumination
C10 Combination Meter ECU
C11 Combination Meter ECU
C12 Combination Meter ECU
C13 Combination SW
C14 Combination SW
C15 Combination SW
C16 Cruise Control ECU

D 1 Deceleration Sensor
D 2 Diode (A/C)
D 3 DLC3

E 5 ECT Pattern Select SW
E 6 Engine and ECT ECU
E 7 Engine and ECT ECU
E 8 Engine and ECT ECU
E 9 Engine and ECT ECU
E10 Engine and ECT ECU

Position of Parts in Instrument Panel

[LHD]

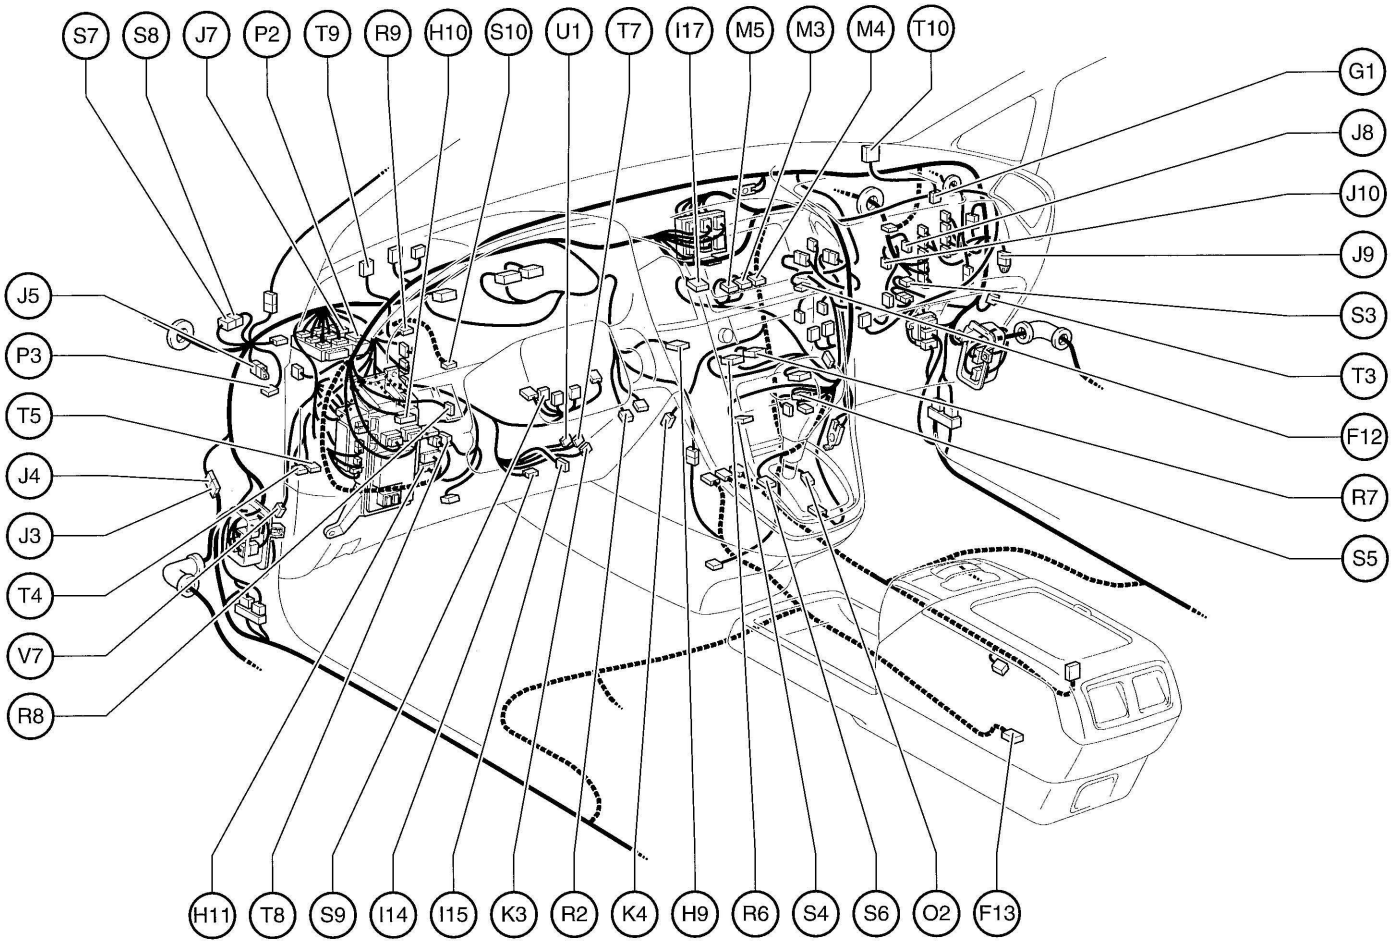

F12 Front Passenger's Seat Belt Warning Light
F13 Front Power Outlet

G 1 Glove Box Light

H 9 Hazard SW
H10 Headlight Beam Level Control SW
H11 Heater Relay

I 14 Ignition Key Cylinder Light
I 15 Ignition SW
I 17 Instrument Control Panel

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector

K 3 Key Interlock Solenoid
K 4 Kick Down SW

M 3 Multi Display
M 4 Multi Display
M 5 Multi Display

O 2 O/D Main SW

P 2 Panel Relay
P 3 Parking Brake SW

R 2 Radar Sensor
R 6 Radio and Player
R 7 Radio and Player
R 8 Remote Control Mirror SW
R 9 Rheostat

S 3 Seat Heater Relay
S 4 Seat Heater SW (Driver's Seat)
S 5 Seat Heater SW (Front Passenger's Seat)
S 6 Shift Lock ECU
S 7 Short Connector
S 8 Short Connector
S 9 Steering Angle Sensor
S10 Stop Light SW


T 3 Telephone Microphone
T 4 Theft Deterrent ECU
T 5 Theft Deterrent ECU
T 7 Transponder Key Amplifier
T 8 Turn Signal Flasher
T 9 Tweeter LH
T10 Tweeter RH

U 1 Unlock Warning SW

V 7 VSC Warning Buzzer

Position of Parts in Body

[LHD]

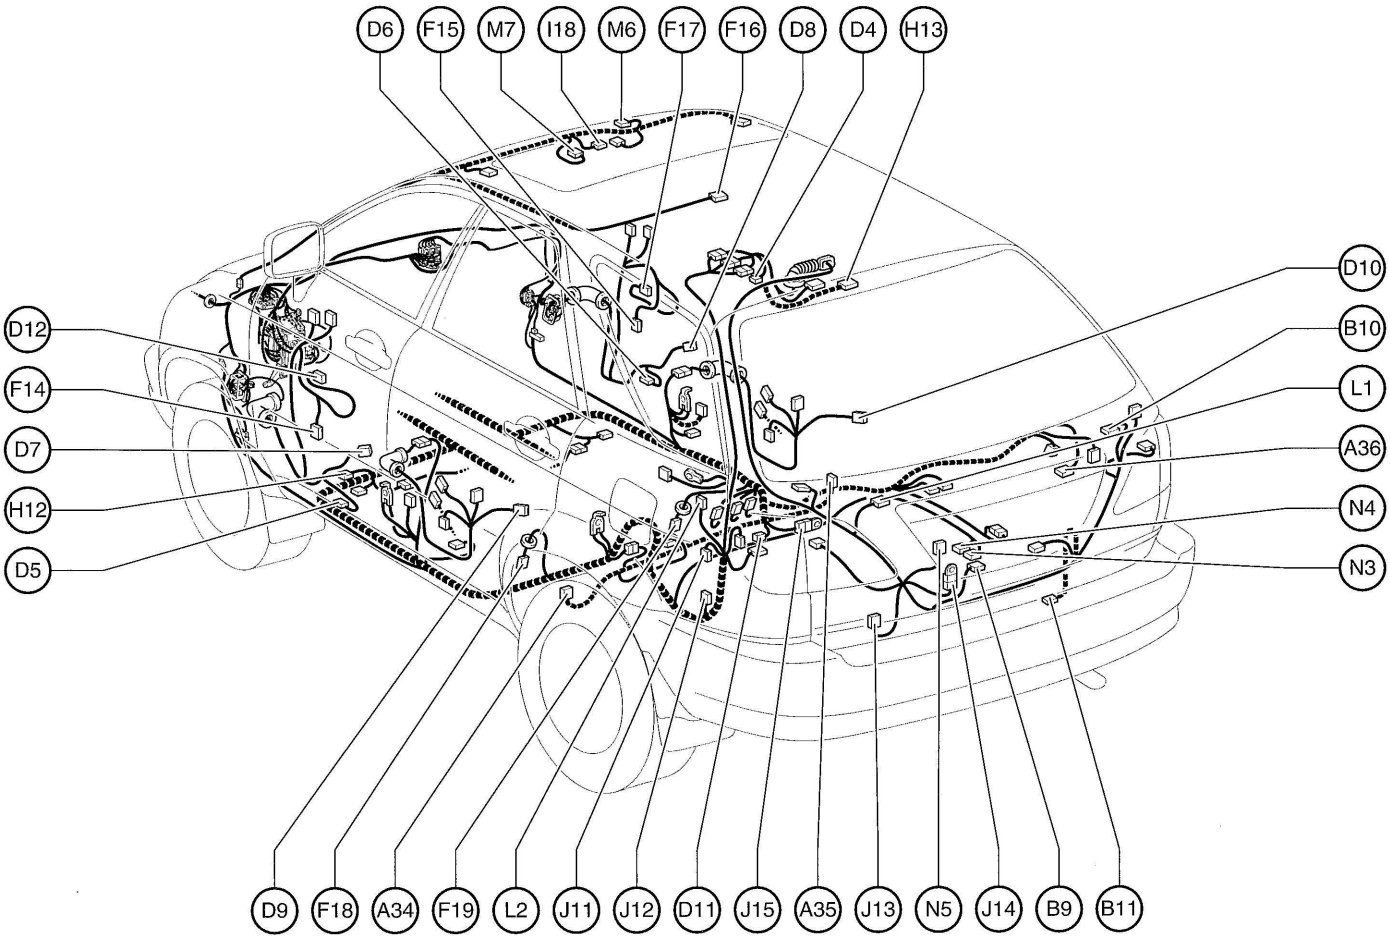

A34 ABS Speed Sensor Rear LH
A35 ABS Speed Sensor Rear RH
A36 Auto Antenna Motor and Relay

B 9 Back Door Courtesy SW
B10 Back Door Key Lock and Unlock SW
B11 Back Door Lock Motor and Back Door Unlock Detection SW

D 4 Diode (Rear Interior Light)
D 5 Door Courtesy Light Front LH
D 6 Door Courtesy Light Front RH
D 7 Door Lock Motor and SW Front LH
D 8 Door Lock Motor and SW Front RH
D 9 Door Lock Motor and SW Rear LH
D10 Door Lock Motor and SW Rear RH
D11 Double Lock Door Control Relay
D12 Driver Door ECU

F14 Front Door Speaker LH
F15 Front Door Speaker RH
F16 Front Interior Light
F17 Front Passenger Door ECU
F18 Fuel Pump and Fuel Sender (Main)
F19 Fuel Sender (Sub)

H12 Heated Oxygen Sensor (Bank 1 Sensor 2)
H13 High Mounted Stop Light

I 18 Inner Mirror

J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector


L 1 License Plate Light
L 2 Light Failure Sensor

M 6 Moon Roof Control ECU
M 7 Moon Roof Control SW

N 3 Navigation ECU
N 4 Navigation ECU
N 5 Noise Filter (DEF)

Position of Parts in Body

[LHD]

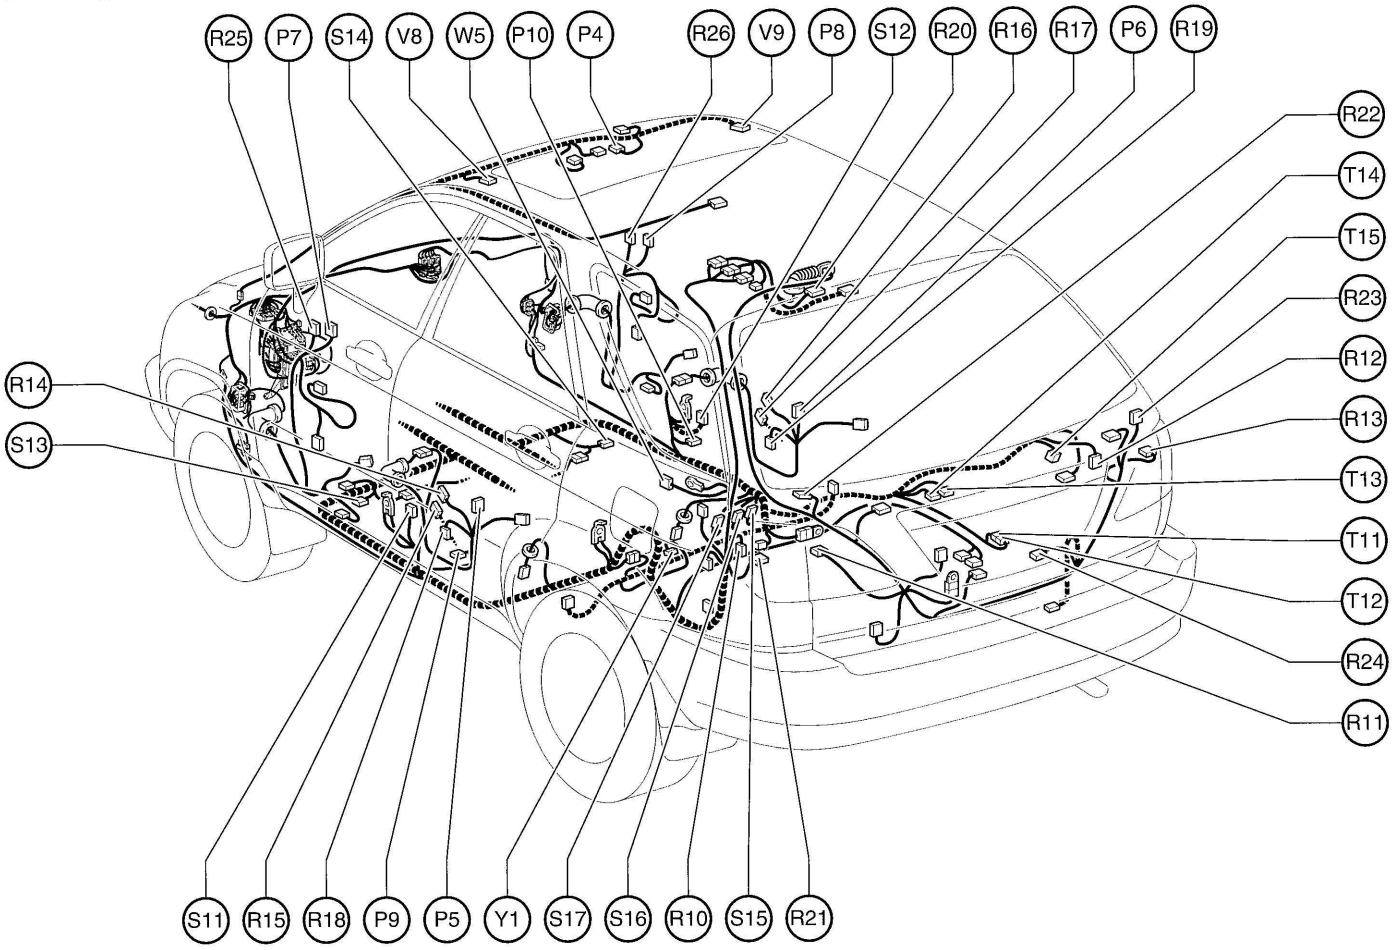

P 4 Personal Light
P 5 Power Window Control SW Rear LH
P 6 Power Window Control SW Rear RH
P 7 Power Window Motor Front LH
P 8 Power Window Motor Front RH
P 9 Pretensioner LH
P10 Pretensioner RH

R10 Rear Combination Light LH
R11 Rear Combination Light LH
R12 Rear Combination Light RH
R13 Rear Combination Light RH
R14 Rear Door LH ECU
R15 Rear Door LH ECU
R16 Rear Door RH ECU
R17 Rear Door RH ECU
R18 Rear Door Speaker LH
R19 Rear Door Speaker RH
R20 Rear Interior Light
R21 Rear Power Outlet
R22 Rear Window Defogger
R23 Rear Window Defogger
R24 Rear Wiper Motor
R25 Remote Control Mirror LH
R26 Remote Control Mirror RH

S 11 Side Airbag Sensor LH
S 12 Side Airbag Sensor RH
S 13 Side Airbag Squib LH
S 14 Side Airbag Squib RH
S 15 Stereo Component Amplifier
S 16 Stereo Component Amplifier
S 17 Stereo Component Amplifier

T 11 Telephone ECU
T 12 Telephone ECU
T 13 Telephone ECU
T 14 Telephone ECU
T 15 Theft Deterrent Siren


V 8 Vanity Light LH
V 9 Vanity Light RH

W 5 Wireless Door Control Receiver

Y 1 Yaw Rate Sensor

Position of Parts in Seat

[LHD]

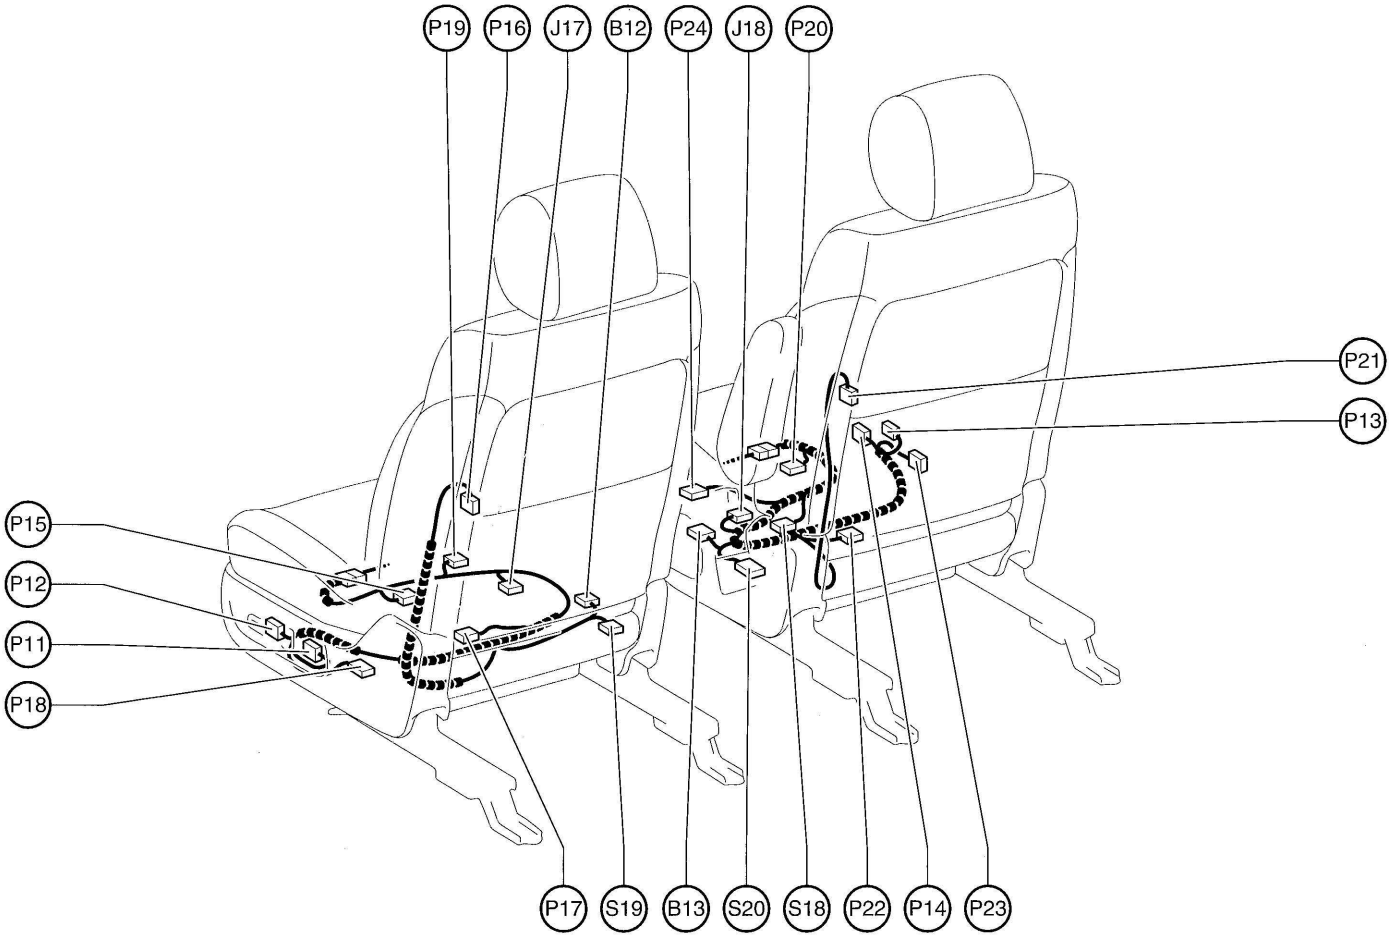

B12 Buckle SW LH
B13 Buckle SW RH


J 17 Junction Connector
J 18 Junction Connector

P 11 Power Seat Control SW
(Driver's Seat Lumbar Support Control)
P12 Power Seat Control SW (Driver's Seat)
P13 Power Seat Control SW
(Front Passenger's Seat Lumbar Support Control)
P14 Power Seat Control SW (Front Passenger's Seat)
P15 Power Seat Motor (Driver's Seat Front Vertical Control)
P16 Power Seat Motor
(Driver's Seat Lumbar Support Control)
P17 Power Seat Motor (Driver's Seat Rear Vertical Control)
P18 Power Seat Motor (Driver's Seat Reclining Control)
P19 Power Seat Motor (Driver's Seat Slide Control)
P20 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P21 Power Seat Motor
(Front Passenger's Seat Lumbar Support Control)
P22 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P23 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P24 Power Seat Motor
(Front Passenger's Seat Slide Control)

S18 Seat Belt Warning Occupant Detection Sensor
S19 Seat Heater (Driver's Seat)
S20 Seat Heater (Front Passenger's Seat)

Position of Parts in Engine Compartment

[RHD]

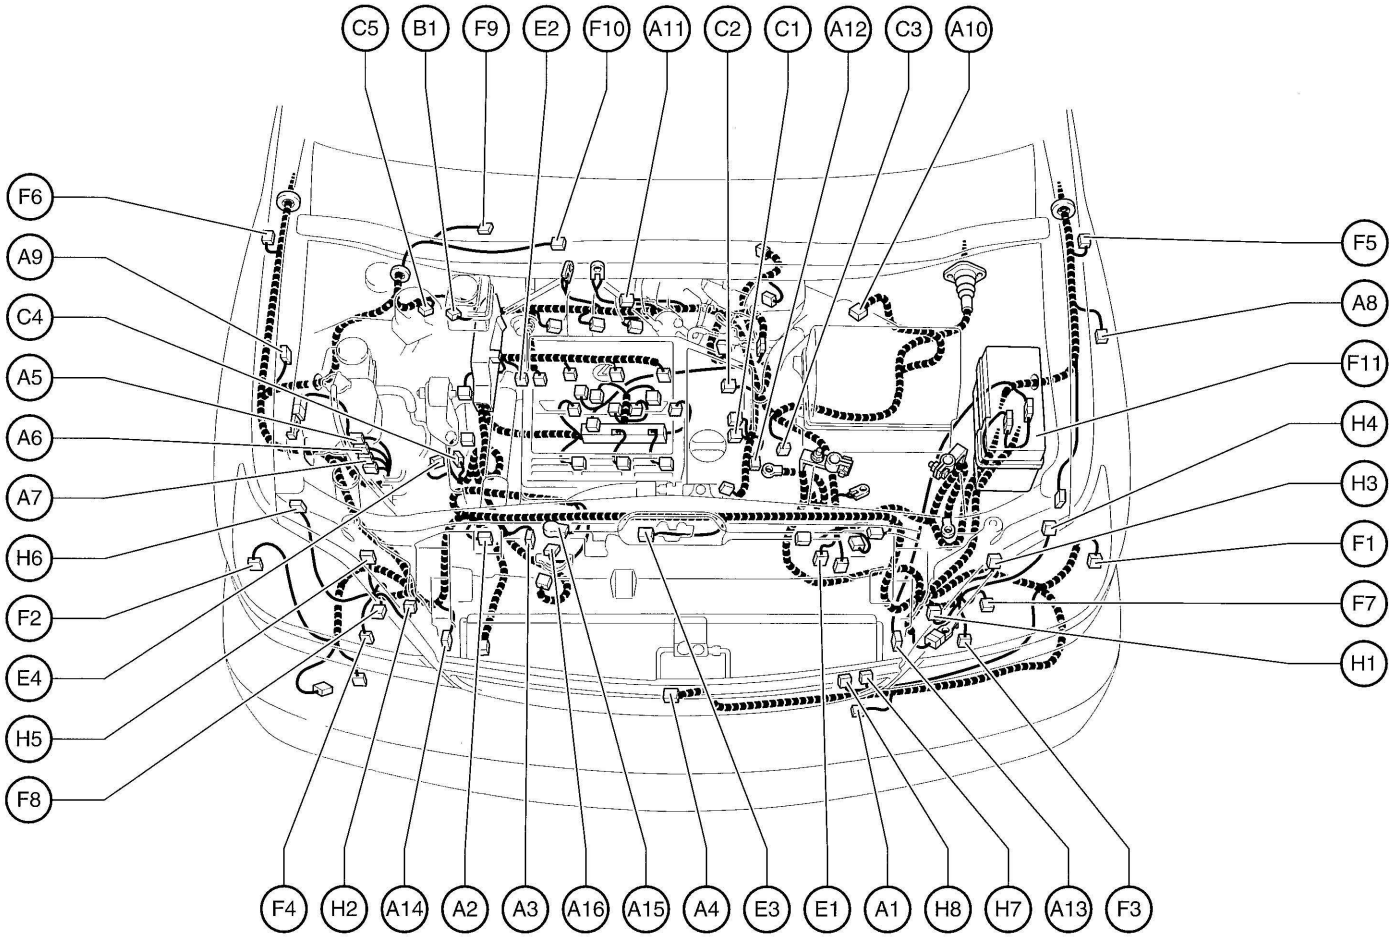

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Magnetic Clutch and Lock Sensor
A 4 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
A 5 ABS & BA & TRC & VSC Actuator
A 6 ABS & BA & TRC & VSC Actuator
A 7 ABS & BA & TRC & VSC Actuator
A 8 ABS Speed Sensor Front LH
A 9 ABS Speed Sensor Front RH
A10 Air Flow Meter
A11 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A12 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
A13 Airbag Sensor Front LH
A14 Airbag Sensor Front RH
A15 Alternator
A16 Alternator

B 1 Brake Fluid Level Warning SW

C 1 Camshaft Timing Oil Control Valve LH
C 2 Camshaft Timing Oil Control Valve RH
C 3 Counter Gear Speed Sensor
C 4 Crankshaft Position Sensor
C 5 Cruise Control Actuator


E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 3 Engine Hood Courtesy SW
E 4 Engine Oil Level Sensor

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Window Defogger
F10 Front Wiper Motor
F11 Fusible Link Block

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight LH (High Beam)
H 4 Headlight LH (Low Beam)
H 5 Headlight RH (High Beam)
H 6 Headlight RH (Low Beam)
H 7 Horn LH
H 8 Horn RH

Position of Parts in Engine Compartment

[RHD]

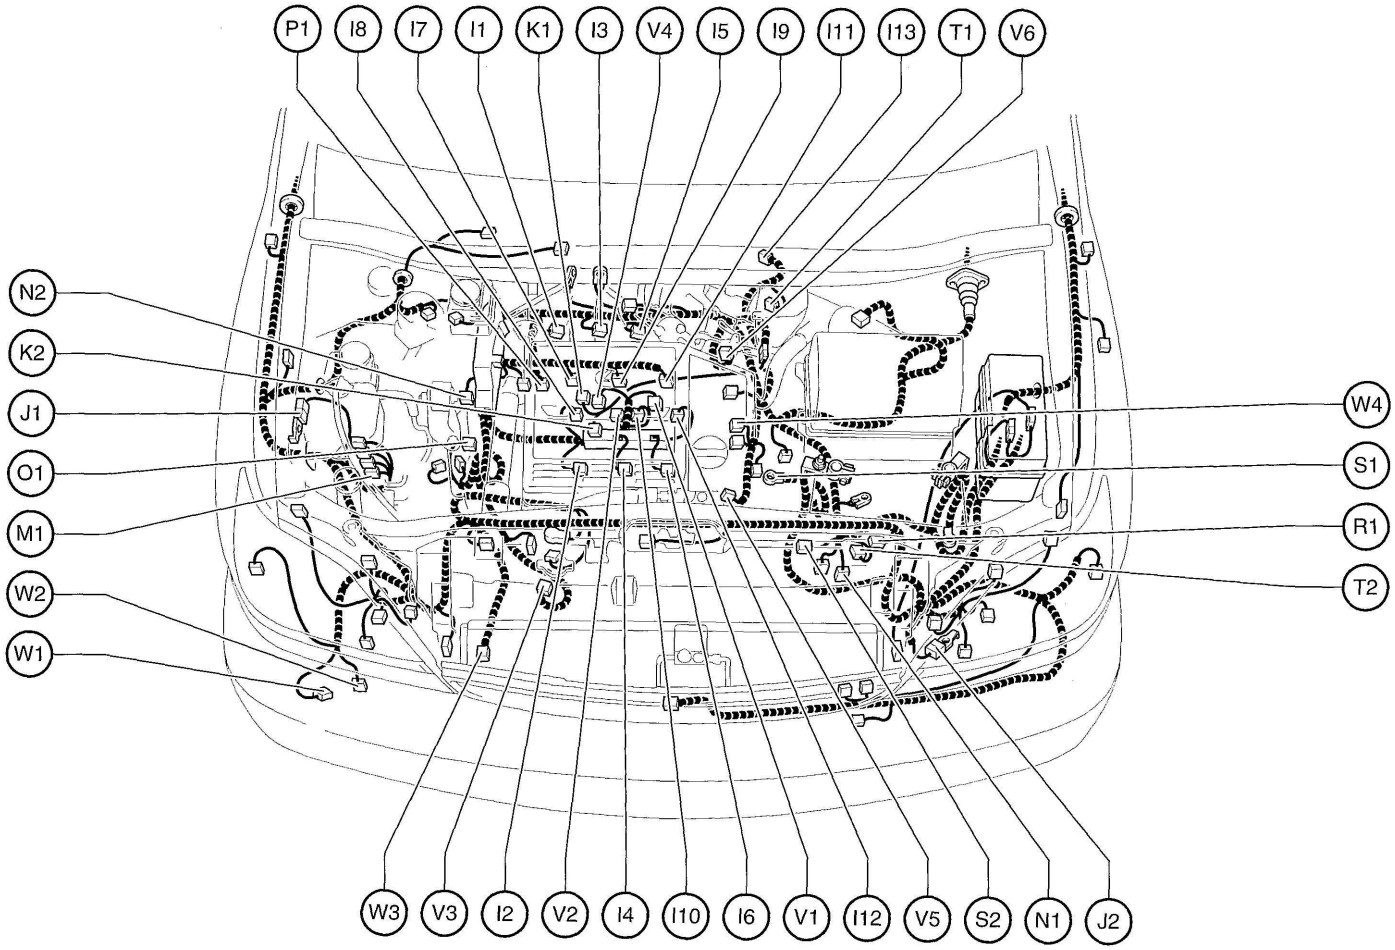

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 5 Ignition Coil and Igniter No.5
I 6 Ignition Coil and Igniter No.6
I 7 Injector No.1
I 8 Injector No.2
I 9 Injector No.3
I 10 Injector No.4
I 11 Injector No.5
I 12 Injector No.6
I 13 ISC Valve

J 1 Junction Connector
J 2 Junction Connector

K 1 Knock Sensor 1
K 2 Knock Sensor 2

M 1 Master Cylinder Pressure Sensor

N 1 Neutral Start SW, A/T Indicator Light SW and Back-Up Light SW
N 2 Noise Filter (Ignition System)

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

S 1 Starter
S 2 Starter


T 1 Throttle Position Sensor
T 2 Turbine Speed Sensor

V 1 VSV (ACIS No.1)
V 2 VSV (ACIS No.2)
V 3 VSV (ACM)
V 4 VSV (EVAP)
V 5 VVT Sensor LH
V 6 VVT Sensor RH

W 1 Washer Level Warning SW
W 2 Washer Motor
W 3 Water Temp. SW No.1
W 4 Water Temp. SW No.2

Position of Parts in Instrument Panel

[RHD]

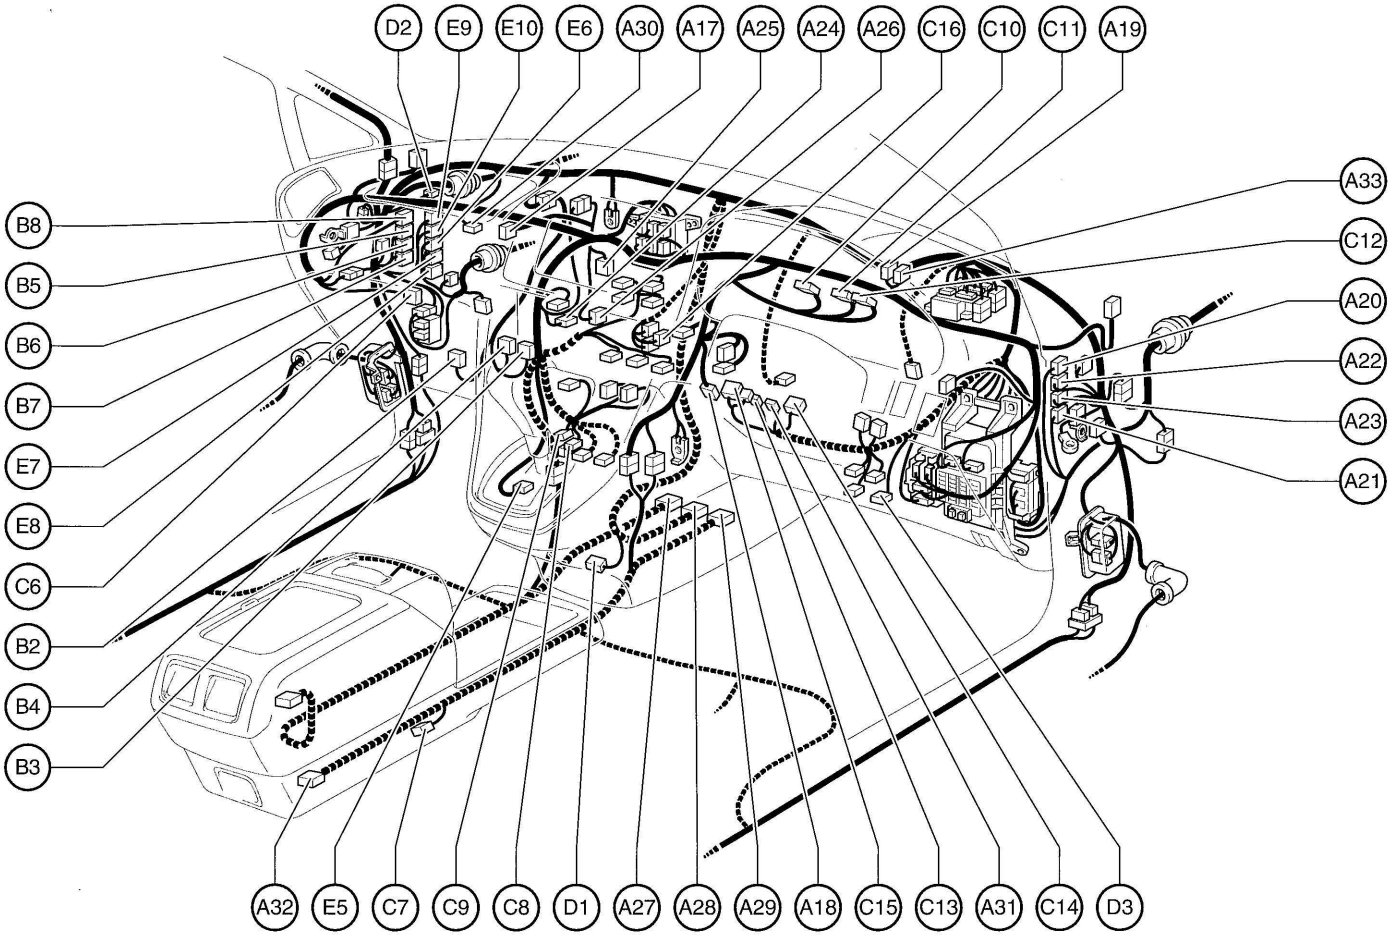

A17 A/C Evaporator Temp. Sensor
A18 A/C Room Temp. Sensor
A19 A/C Solar Sensor
A20 ABS & BA & TRC & VSC ECU
A21 ABS & BA & TRC & VSC ECU
A22 ABS & BA & TRC & VSC ECU
A23 ABS & BA & TRC & VSC ECU
A24 Air Inlet Control Servo Motor
A25 Air Mix Control Servo Motor
A26 Air Vent Mode Control Servo Motor
A27 Airbag Sensor Assembly
A28 Airbag Sensor Assembly
A29 Airbag Sensor Assembly
A30 Airbag Squib (Front Passenger's Airbag Assembly)
A31 Airbag Squib (Steering Wheel Pad)
A32 Ashtray Illumination
A33 Automatic Light Control Sensor

B 2 Blower Motor
B 3 Blower Motor Control Relay
B 4 Blower Motor Control Relay
B 5 Body ECU
B 6 Body ECU
B 7 Body ECU
B 8 Body ECU


C 6 CD Automatic Changer
C 7 Cellular Phone (Hand Set)
C 8 Cigarette Lighter
C 9 Cigarette Lighter Illumination
C10 Combination Meter ECU
C11 Combination Meter ECU
C12 Combination Meter ECU
C13 Combination SW
C14 Combination SW
C15 Combination SW
C16 Cruise Control ECU

D 1 Deceleration Sensor
D 2 Diode (A/C)
D 3 DLC3

E 5 ECT Pattern Select SW
E 6 Engine and ECT ECU
E 7 Engine and ECT ECU
E 8 Engine and ECT ECU
E 9 Engine and ECT ECU
E10 Engine and ECT ECU

Position of Parts in Instrument Panel

[RHD]

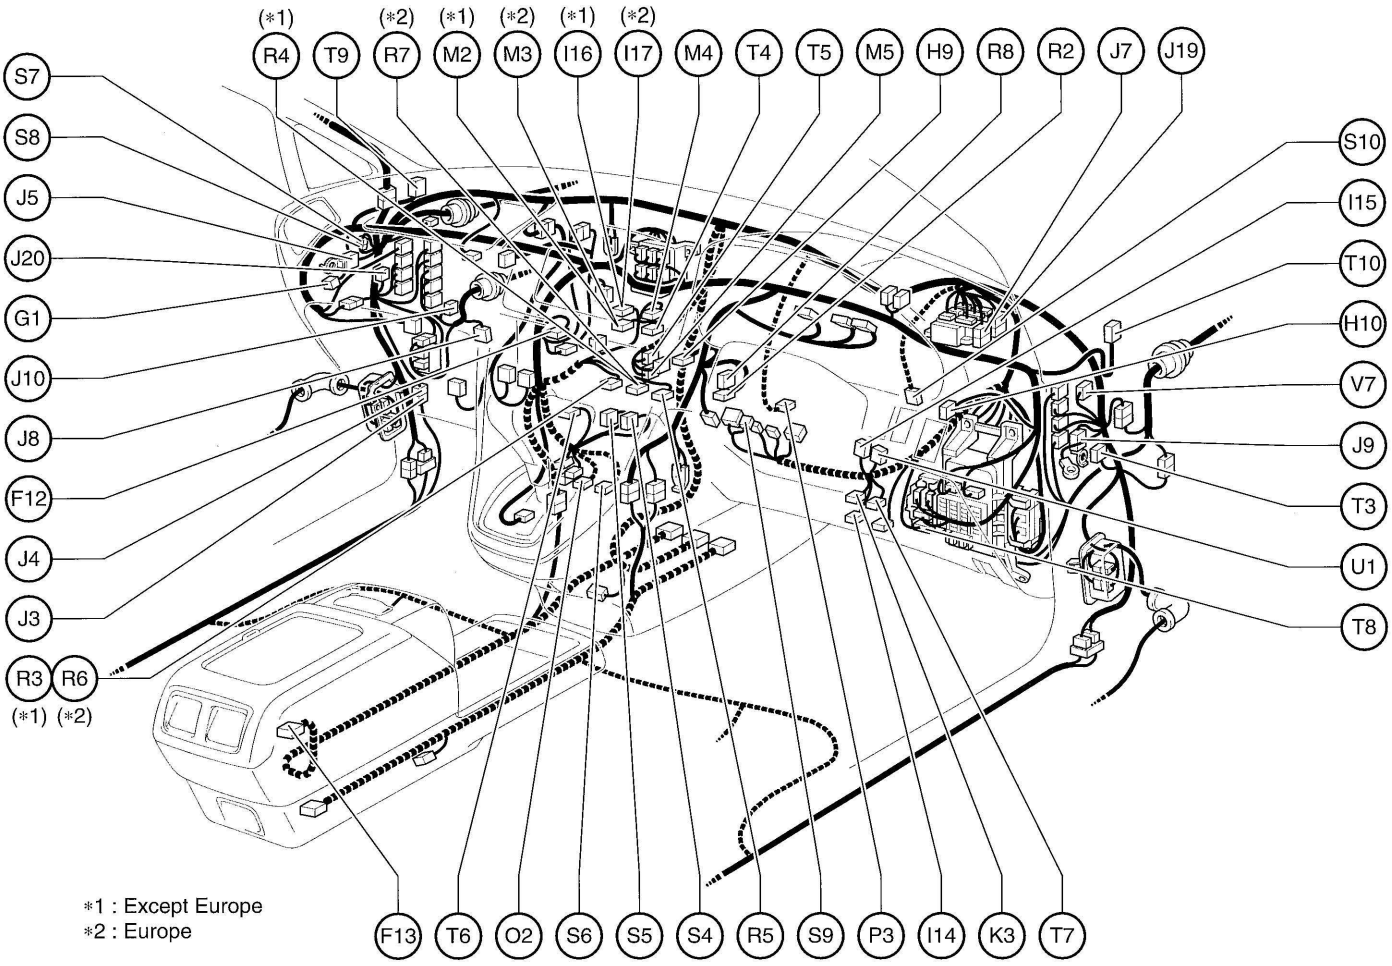

F12 Front Passenger's Seat Belt Warning Light
F13 Front Power Outlet

G 1 Glove Box Light

H 9 Hazard SW
H10 Headlight Beam Level Control SW

I 14 Ignition Key Cylinder Light
I 15 Ignition SW
I 16 Instrument Control Panel
I 17 Instrument Control Panel

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 19 Junction Connector
J 20 Junction Connector

K 3 Key Interlock Solenoid

M 2 Multi Display
M 3 Multi Display
M 4 Multi Display
M 5 Multi Display

O 2 O/D Main SW

P 3 Parking Brake SW

R 2 Radar Sensor
R 3 Radio and Player
R 4 Radio and Player
R 5 Radio and Player
R 6 Radio and Player
R 7 Radio and Player
R 8 Remote Control Mirror SW

S 4 Seat Heater SW (Driver's Seat)
S 5 Seat Heater SW (Front Passenger's Seat)
S 6 Shift Lock ECU
S 7 Short Connector
S 8 Short Connector
S 9 Steering Angle Sensor
S10 Stop Light SW


T 3 Telephone Microphone
T 4 Theft Deterrent ECU
T 5 Theft Deterrent ECU
T 6 Theft Deterrent Indicator Light
T 7 Transponder Key Amplifier
T 8 Turn Signal Flasher
T 9 Tweeter LH
T10 Tweeter RH

U 1 Unlock Warning SW

V 7 VSC Warning Buzzer

Position of Parts in Body

[RHD]

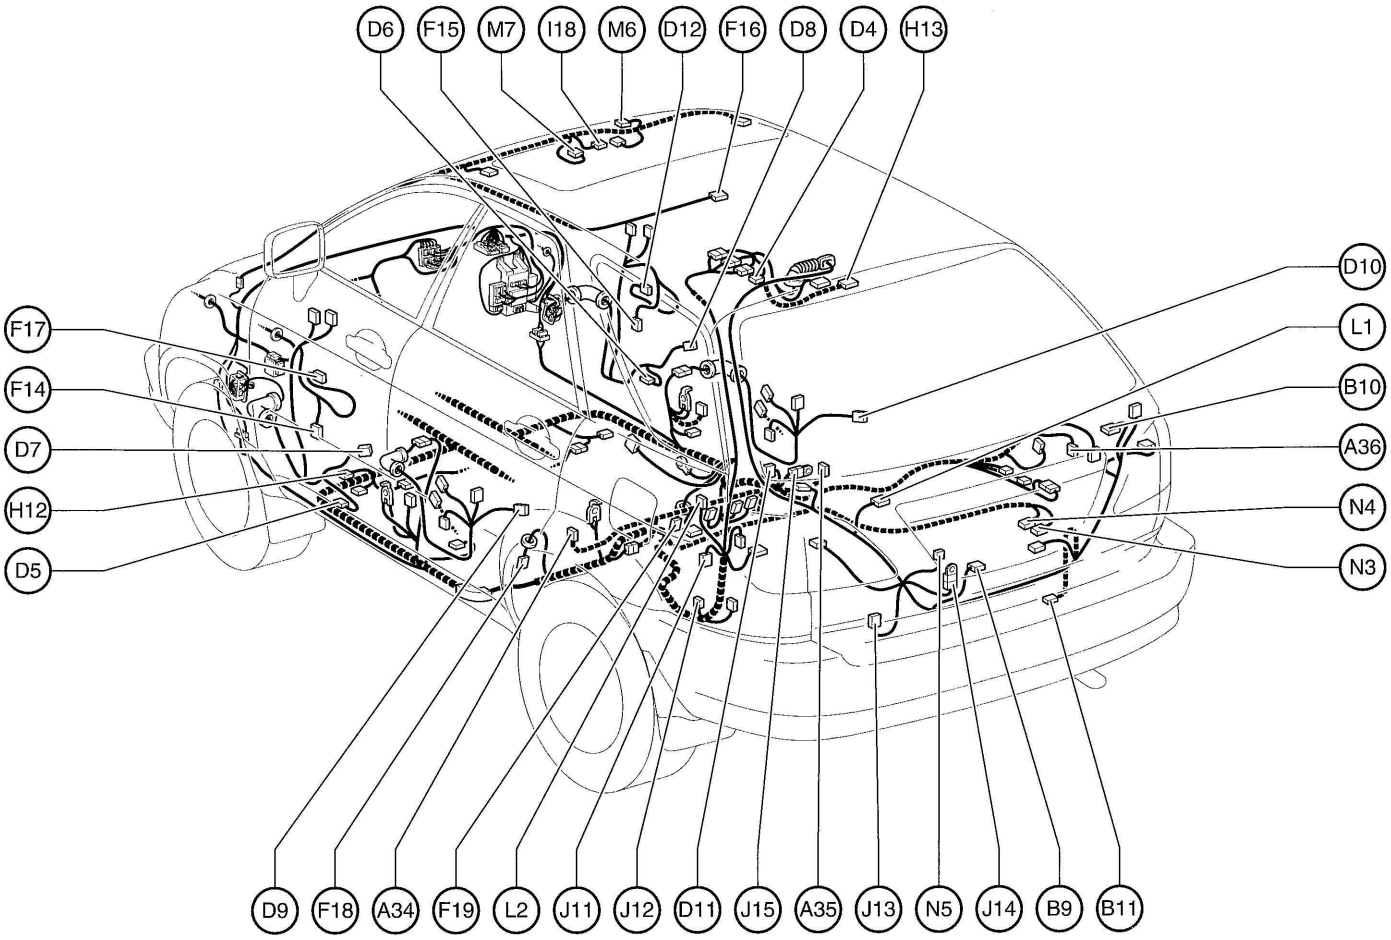

A34 ABS Speed Sensor Rear LH
A35 ABS Speed Sensor Rear RH
A36 Auto Antenna Motor and Relay

B 9 Back Door Courtesy SW
B10 Back Door Key Lock and Unlock SW
B11 Back Door Lock Motor and
Back Door Unlock Detection SW

D 4 Diode (Rear Interior Light)
D 5 Door Courtesy Light Front LH
D 6 Door Courtesy Light Front RH
D 7 Door Lock Motor and SW Front LH
D 8 Door Lock Motor and SW Front RH
D 9 Door Lock Motor and SW Rear LH
D10 Door Lock Motor and SW Rear RH
D11 Double Lock Door Control Relay
D12 Driver Door ECU

F14 Front Door Speaker LH
F15 Front Door Speaker RH
F16 Front Interior Light
F17 Front Passenger Door ECU
F18 Fuel Pump and Fuel Sender (Main)
F19 Fuel Sender (Sub)

H12 Heated Oxygen Sensor (Bank 1 Sensor 2)
H13 High Mounted Stop Light

I 18 Inner Mirror

J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector


L 1 License Plate Light
L 2 Light Failure Sensor

M 6 Moon Roof Control ECU
M 7 Moon Roof Control SW

N 3 Navigation ECU
N 4 Navigation ECU
N 5 Noise Filter (DEF)

Position of Parts in Body

[RHD]

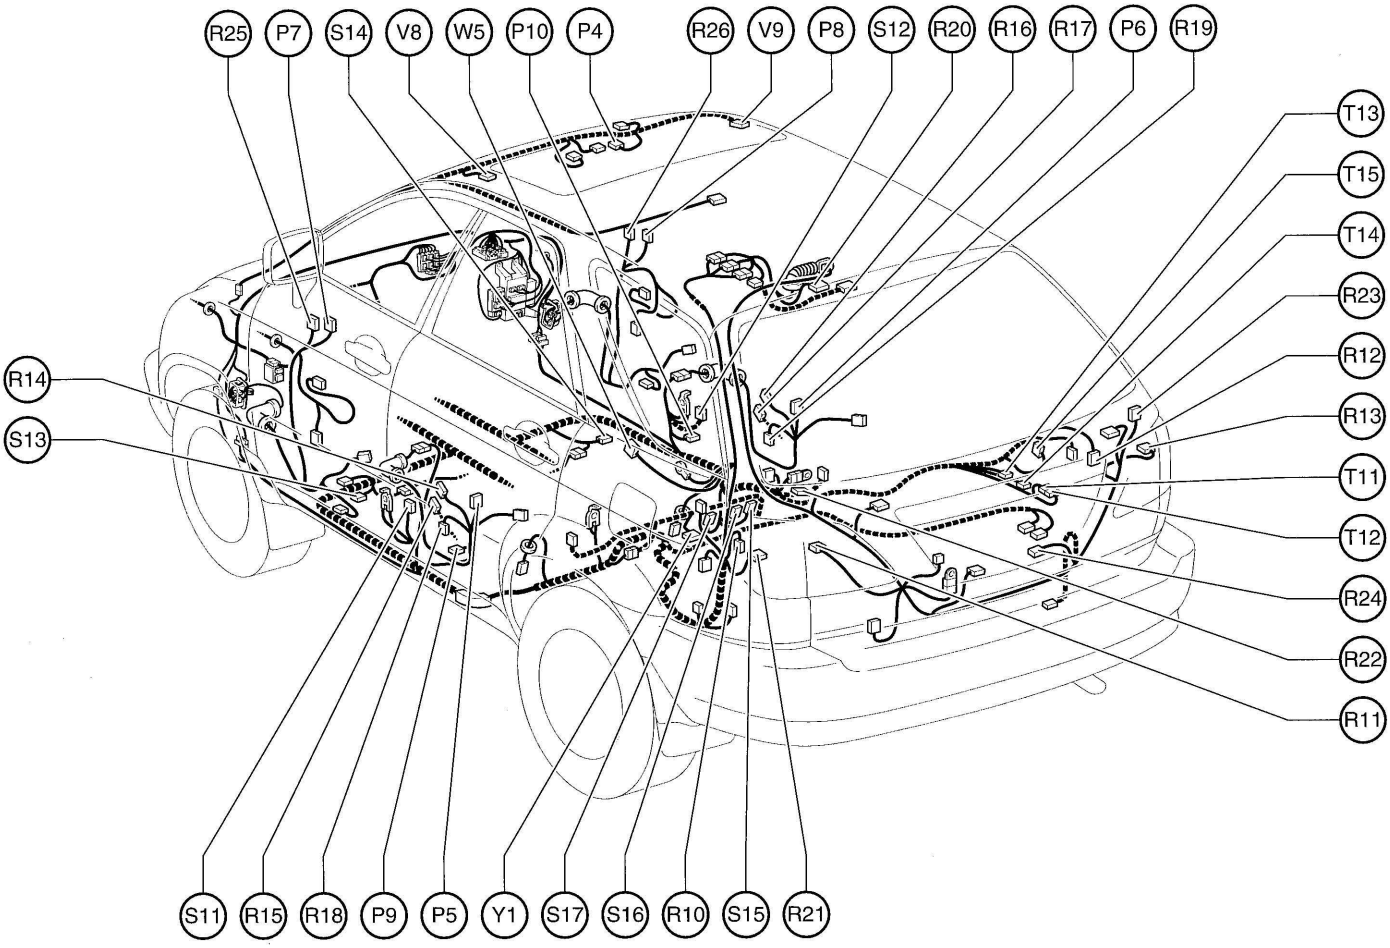

P 4 Personal Light
P 5 Power Window Control SW Rear LH
P 6 Power Window Control SW Rear RH
P 7 Power Window Motor Front LH
P 8 Power Window Motor Front RH
P 9 Pretensioner LH
P10 Pretensioner RH

R10 Rear Combination Light LH
R11 Rear Combination Light LH
R12 Rear Combination Light RH
R13 Rear Combination Light RH
R14 Rear Door LH ECU
R15 Rear Door LH ECU
R16 Rear Door RH ECU
R17 Rear Door RH ECU
R18 Rear Door Speaker LH
R19 Rear Door Speaker RH
R20 Rear Interior Light
R21 Rear Power Outlet
R22 Rear Window Defogger
R23 Rear Window Defogger
R24 Rear Wiper Motor
R25 Remote Control Mirror LH
R26 Remote Control Mirror RH

S11 Side Airbag Sensor LH
S12 Side Airbag Sensor RH
S13 Side Airbag Squib LH
S14 Side Airbag Squib RH
S15 Stereo Component Amplifier
S16 Stereo Component Amplifier
S17 Stereo Component Amplifier

T11 Telephone ECU
T12 Telephone ECU
T13 Telephone ECU
T14 Telephone ECU
T15 Theft Deterrent Siren


V 8 Vanity Light LH
V 9 Vanity Light RH

W 5 Wireless Door Control Receiver

Y 1 Yaw Rate Sensor

Position of Parts in Seat

[RHD]

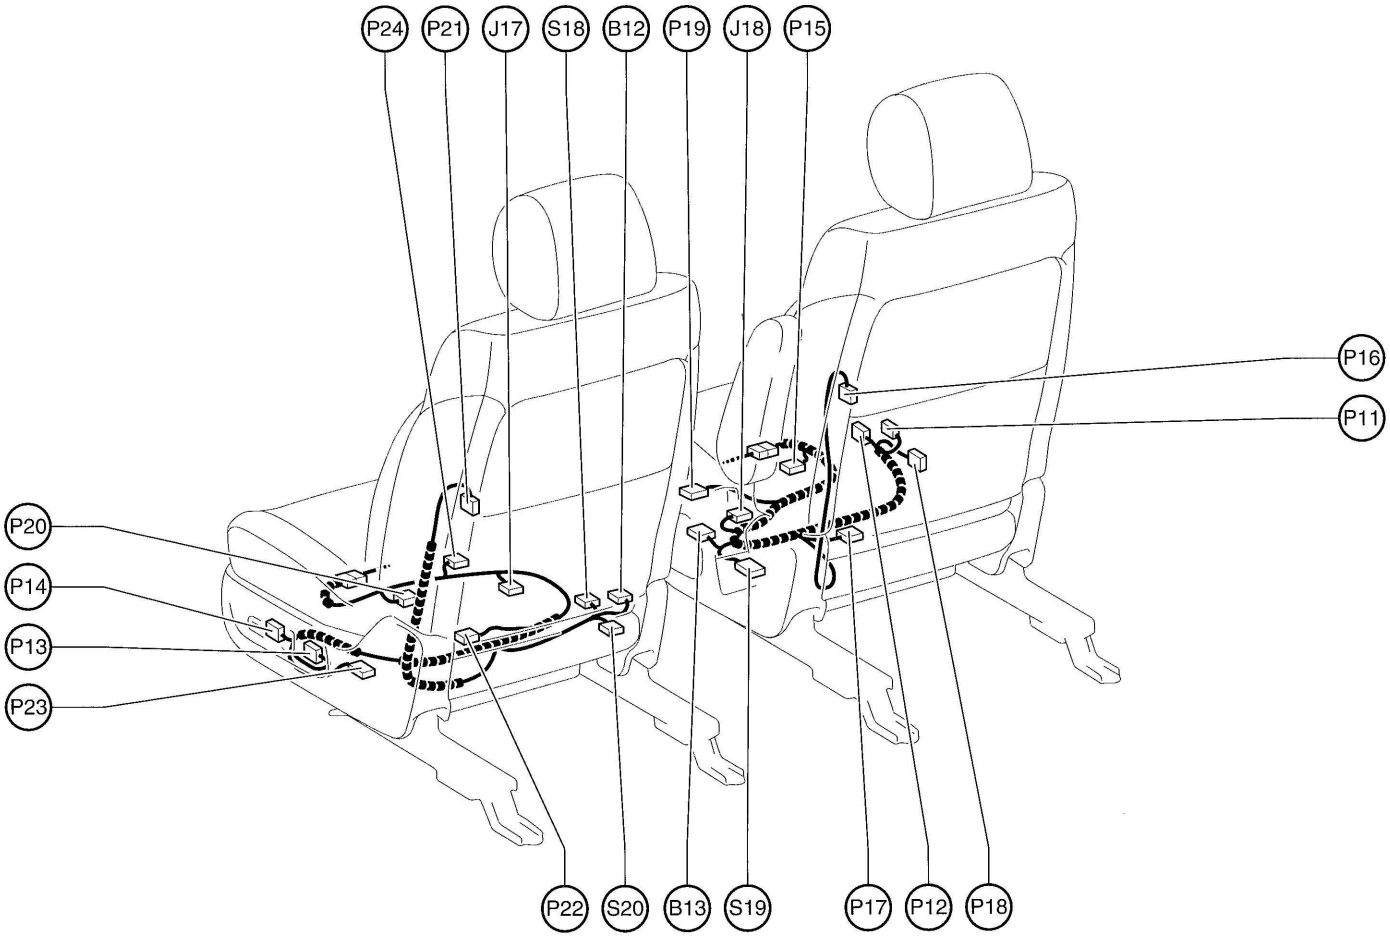

B12 Buckle SW LH
B13 Buckle SW RH

J 17 Junction Connector
J 18 Junction Connector

P 11 Power Seat Control SW
(Driver's Seat Lumbar Support Control)
P 12 Power Seat Control SW (Driver's Seat)
P 13 Power Seat Control SW
(Front Passenger's Seat Lumbar Support Control)
P 14 Power Seat Control SW (Front Passenger's Seat)
P 15 Power Seat Motor (Driver's Seat Front Vertical Control)
P 16 Power Seat Motor
(Driver's Seat Lumbar Support Control)
P 17 Power Seat Motor (Driver's Seat Rear Vertical Control)
P 18 Power Seat Motor (Driver's Seat Reclining Control)
P 19 Power Seat Motor (Driver's Seat Slide Control)
P 20 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P 21 Power Seat Motor
(Front Passenger's Seat Lumbar Suppurt Control)
P 22 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P 23 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P 24 Power Seat Motor
(Front Passenger's Seat Slide Control)


S 18 Seat Belt Warning Occupant Detection Sensor
S 19 Seat Heater (Driver's Seat)
S 20 Seat Heater (Front Passenger's Seat)

G ELECTRICAL WIRING ROUTING


▭ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[LHD]

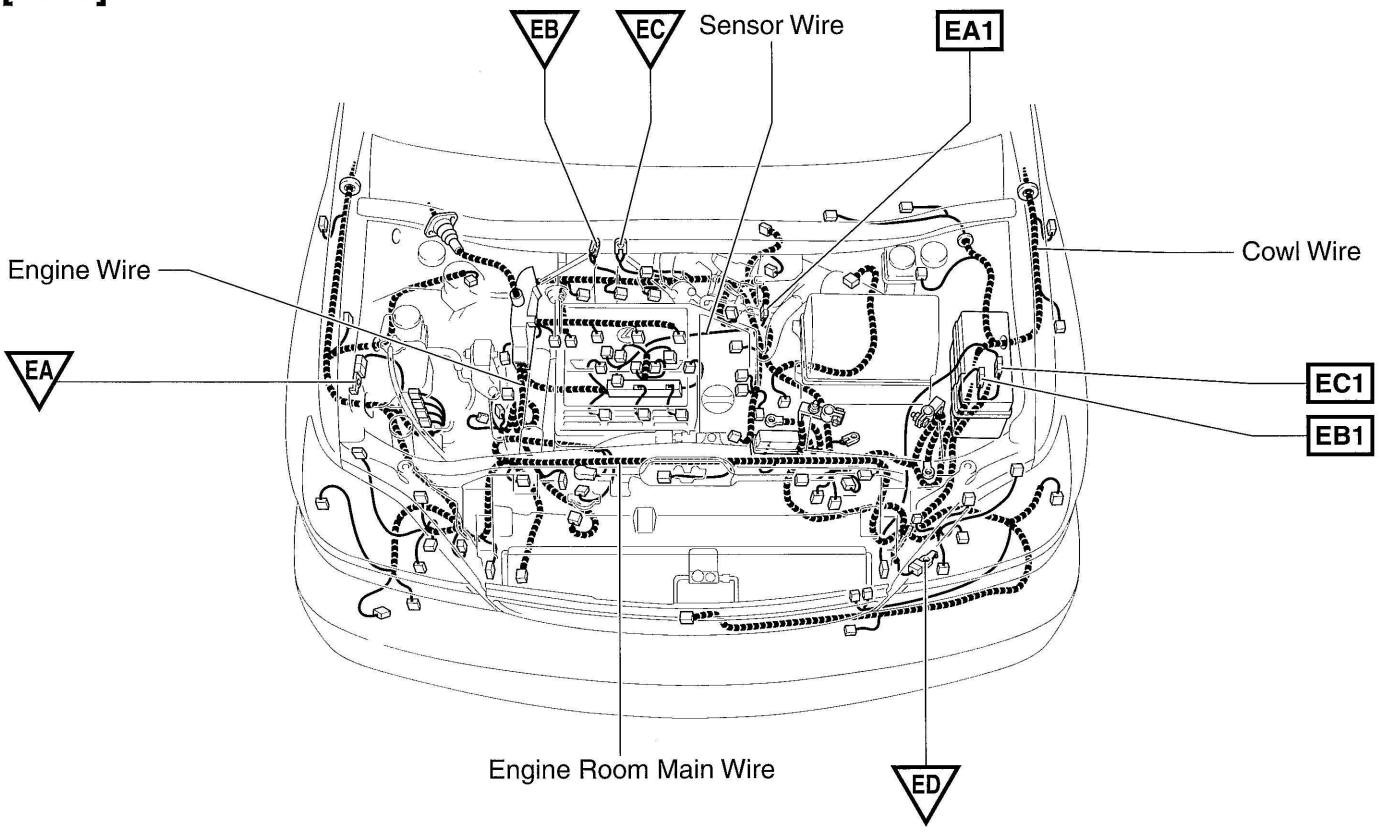

○ : Location of Splice Points

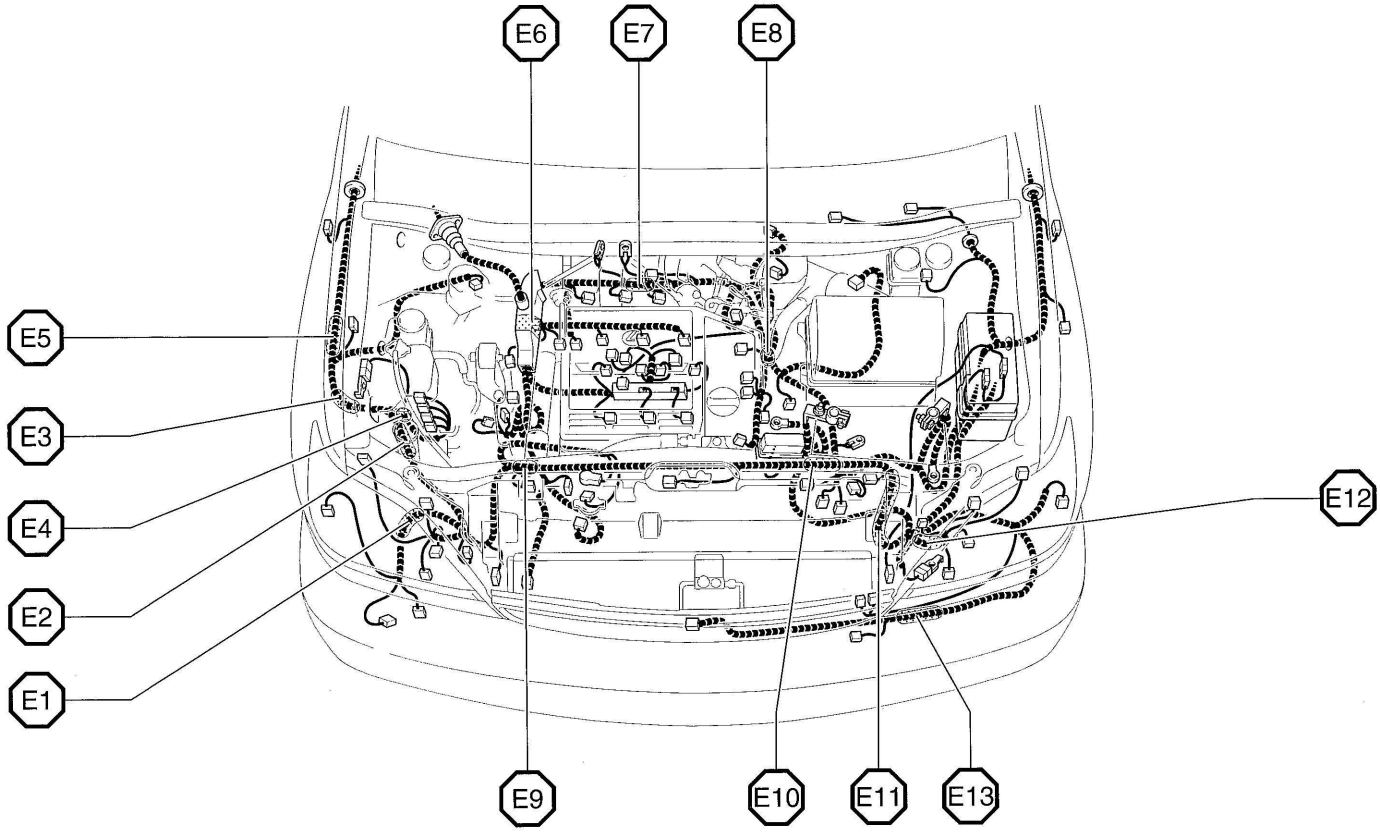

Connector Joining Wire Harness and Wire Harness

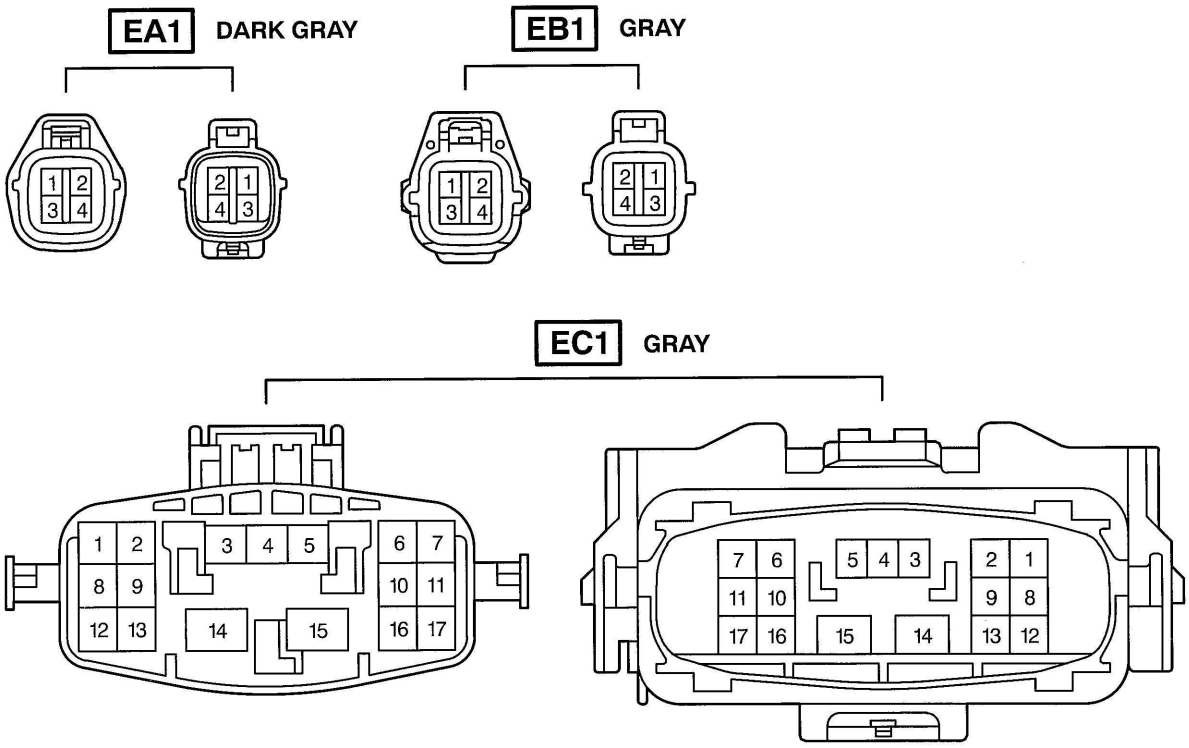


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Sensor Wire (Head Cover RH)
EB1	Engine Wire and Engine Room Main Wire (Under the Engine Room J/B)
EC1	Cowl Wire and Engine Room Main Wire (Under the Engine Room J/B)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[LHD]

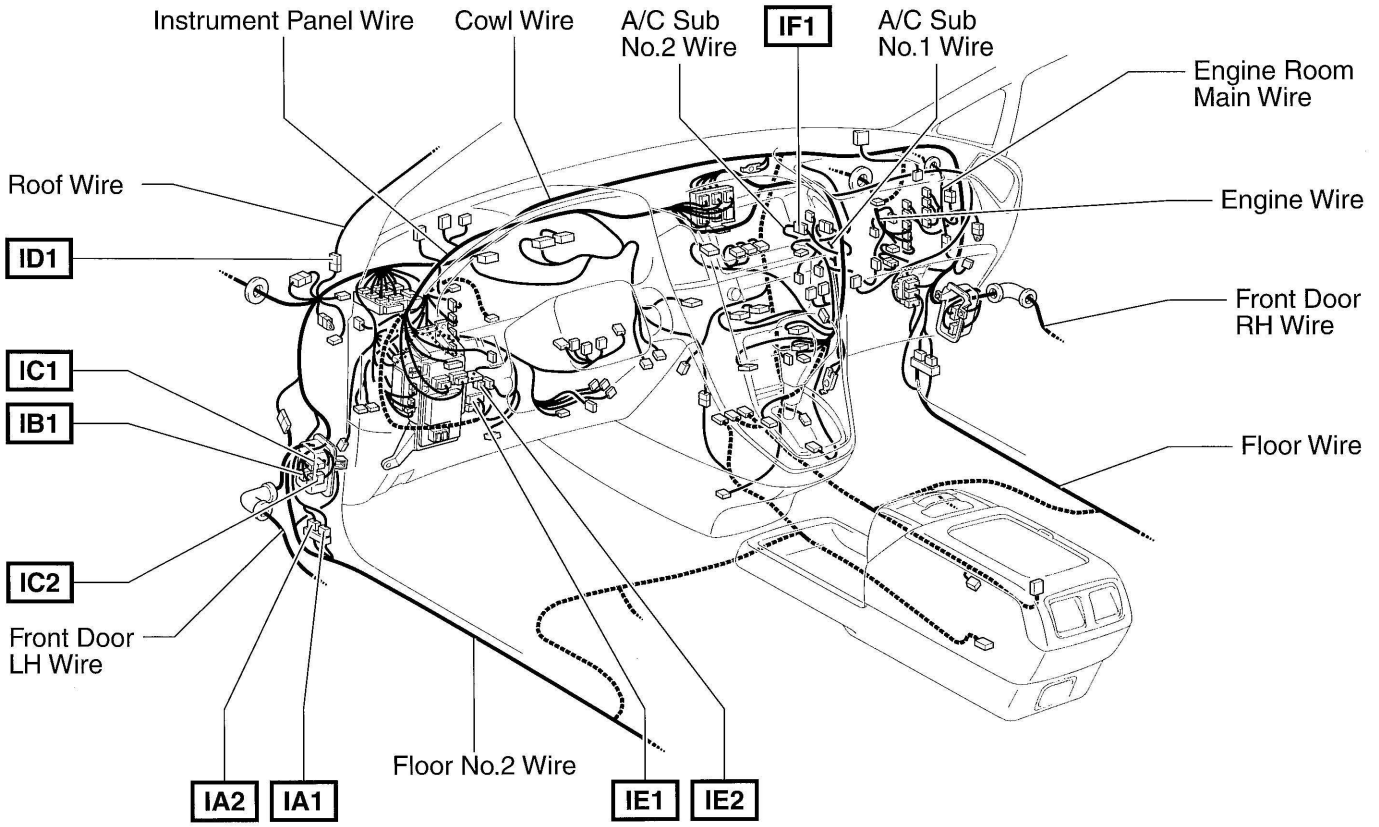

▽ : Location of Ground Points

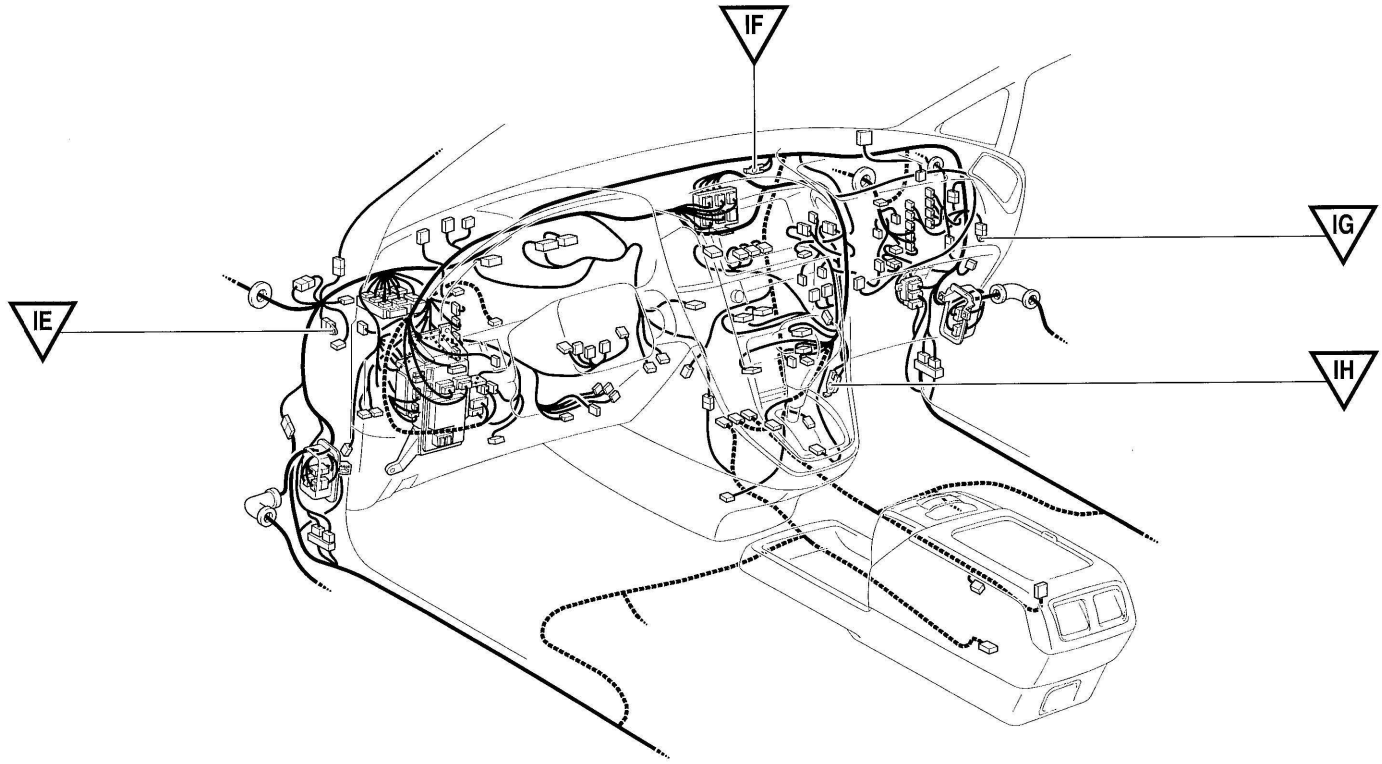

Connector Joining Wire Harness and Wire Harness

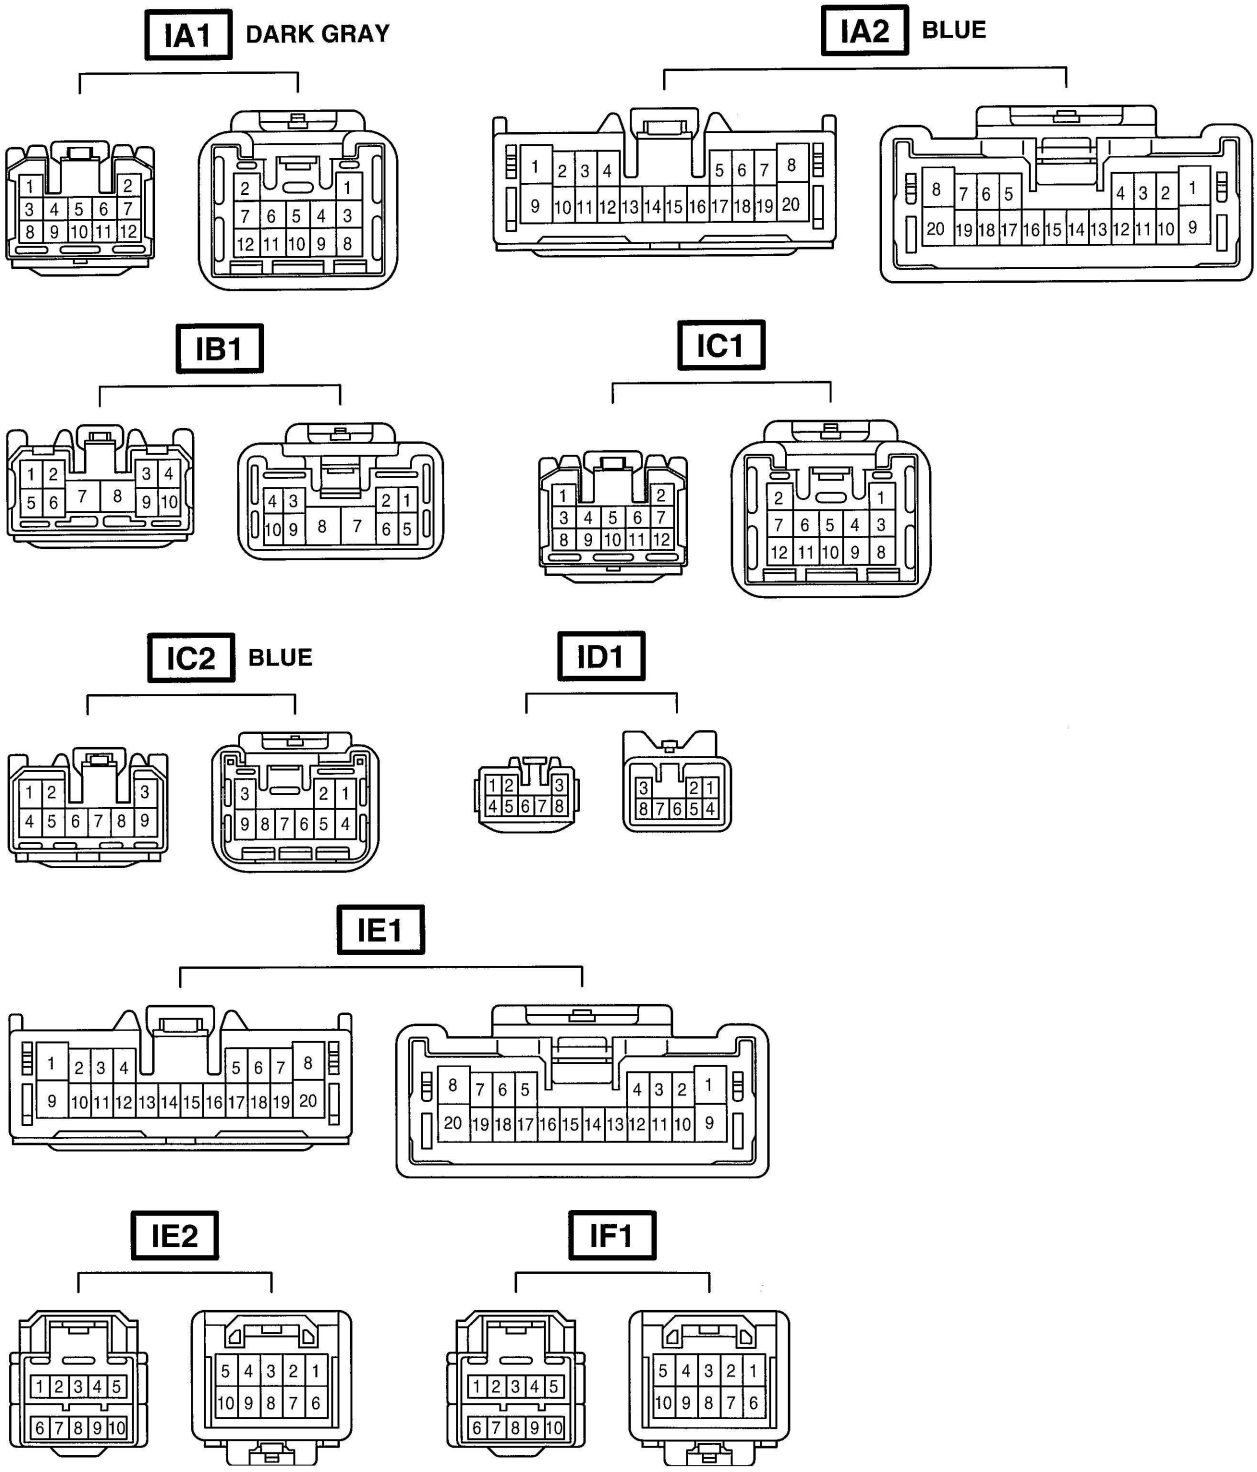


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IA2	
IB1	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IC1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC2	
ID1	Roof Wire and Cowl Wire (Left Side of the Instrument Panel)
IE1	Instrument Panel Wire and Cowl Wire (Lower Finish Panel)
IE2	
IF1	Instrument Panel Wire and A/C Sub No.2 Wire (Instrument Panel Brace RH)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[LHD]

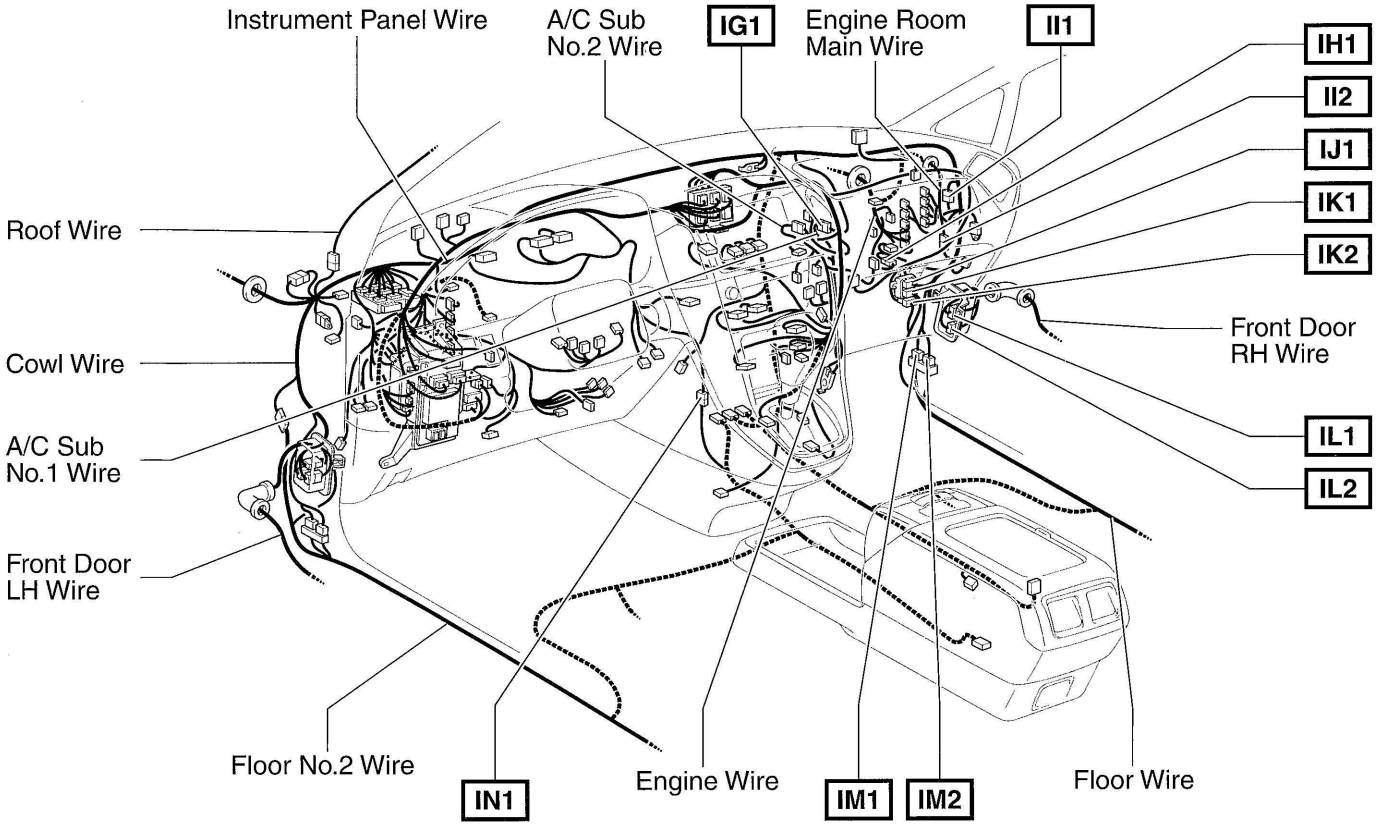

○ : Location of Splice Points

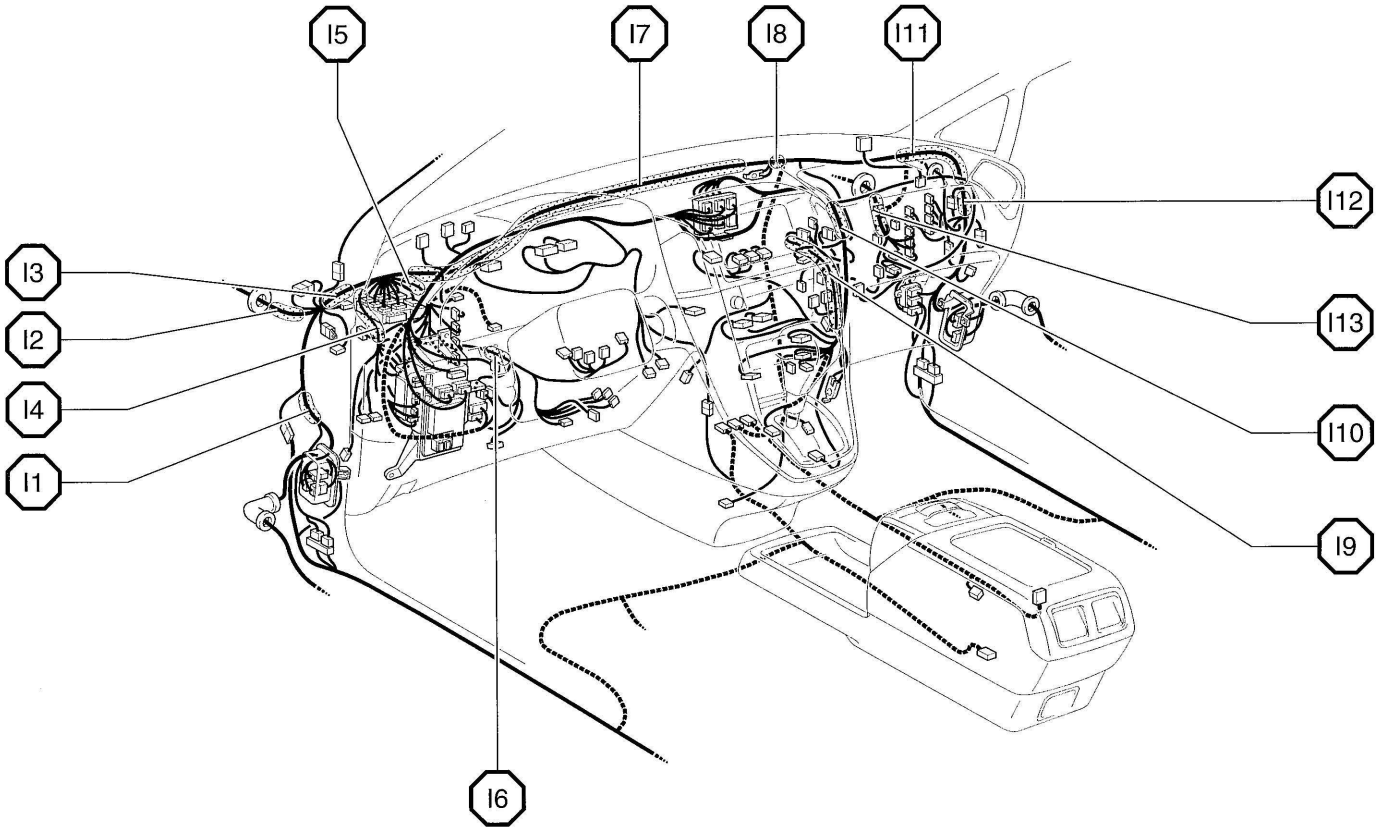

Connector Joining Wire Harness and Wire Harness

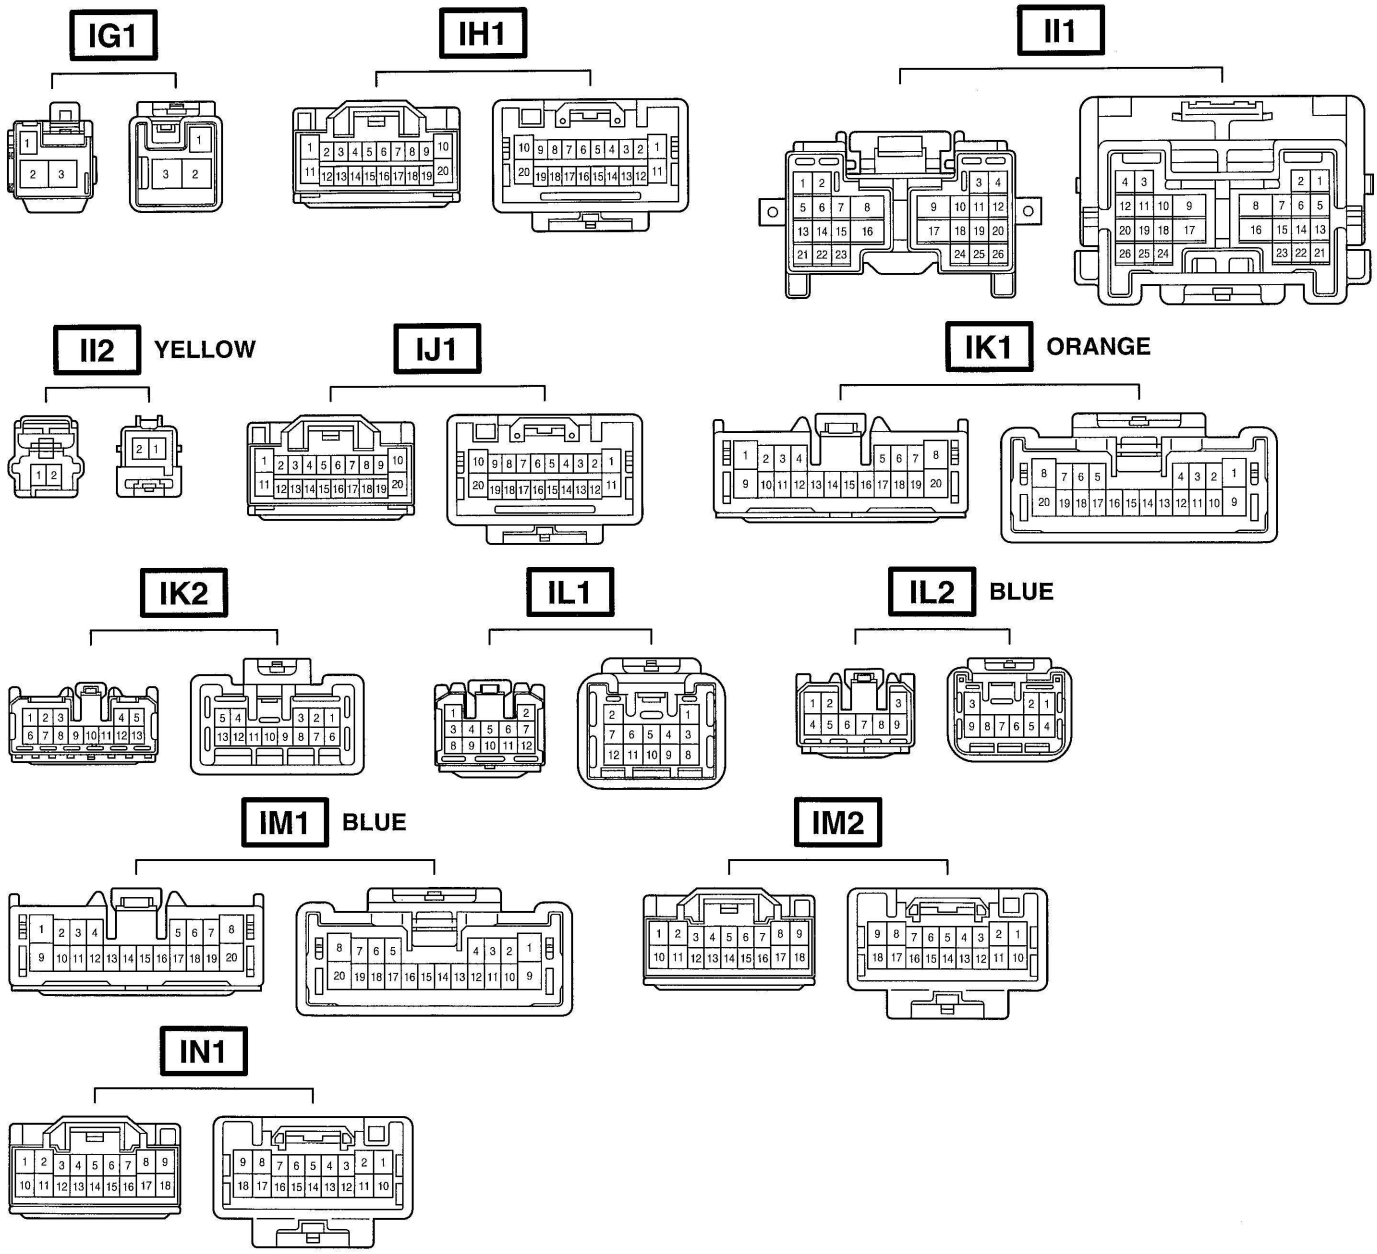


Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Cowl Wire and A/C Sub No.1 Wire (Instrument Panel Brace RH)
IH1	Engine Wire and Cowl Wire (Behind the Glove Box)
II1	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
II2	
IJ1	Cowl Wire and Instrument Panel Wire (Behind the Glove Box)
IK1	Floor Wire and Instrument Panel Wire (Behind the Glove Box)
IK2	
IL1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL2	
IM1	Cowl Wire and Floor Wire (Right Kick Panel)
IM2	
IN1	Instrument Panel Wire and Floor No.2 Wire (Instrument Panel Brace LH)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[LHD]

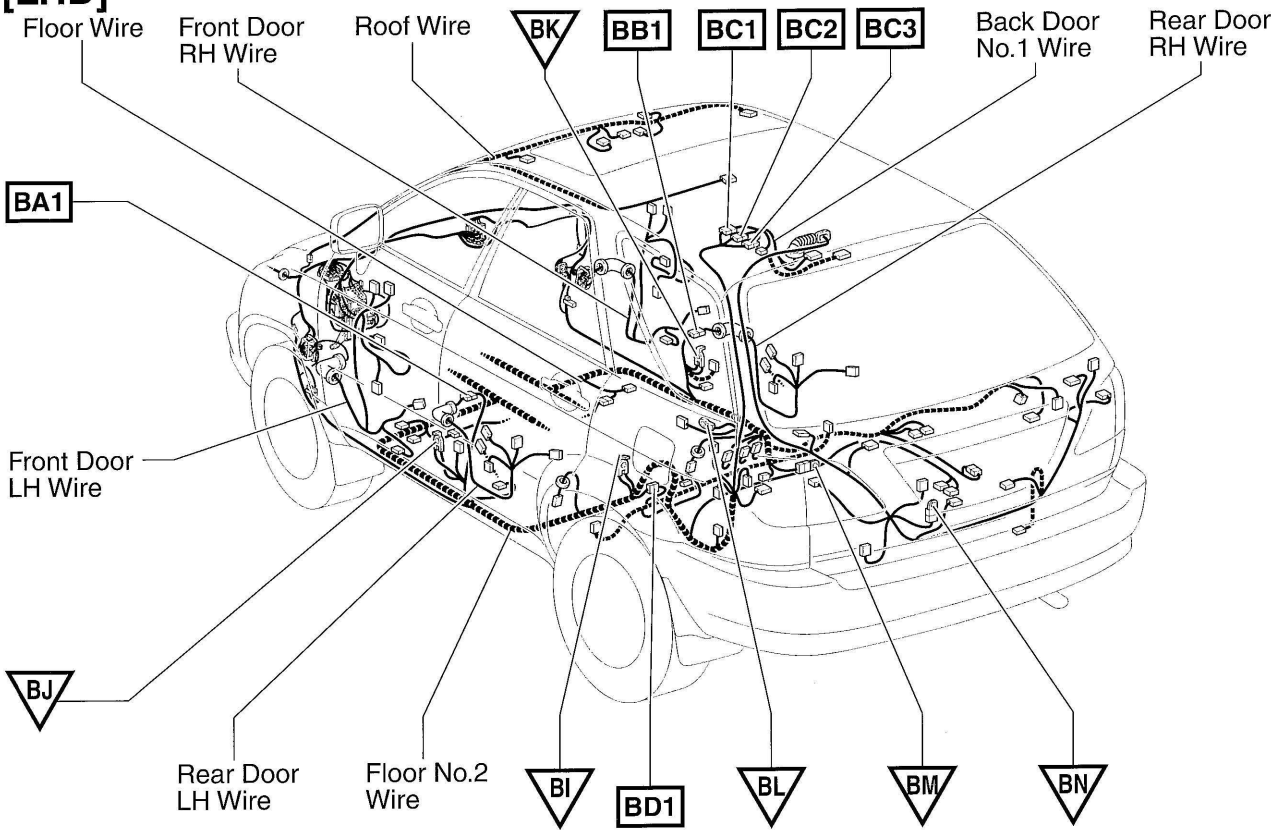

○ : Location of Splice Points

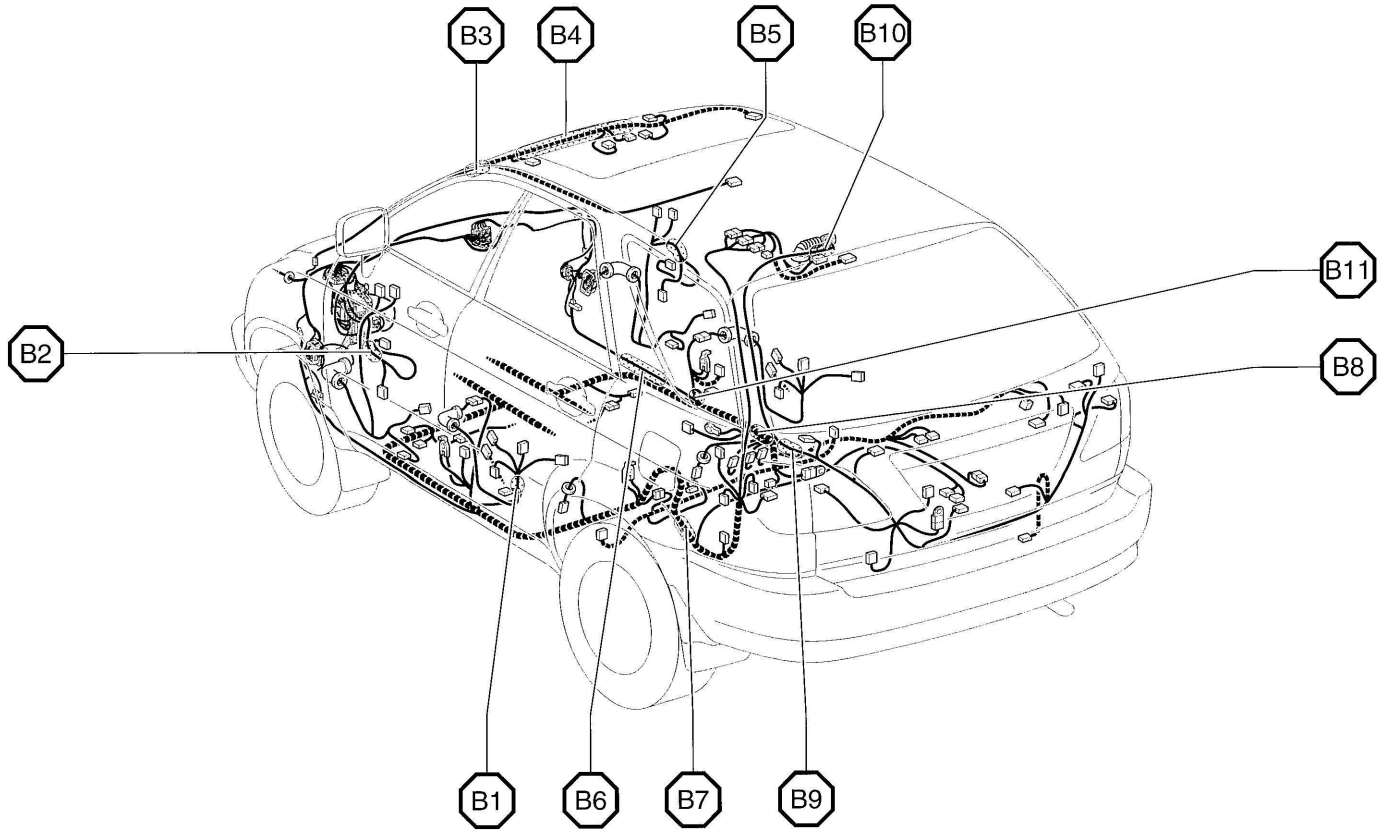

Connector Joining Wire Harness and Wire Harness

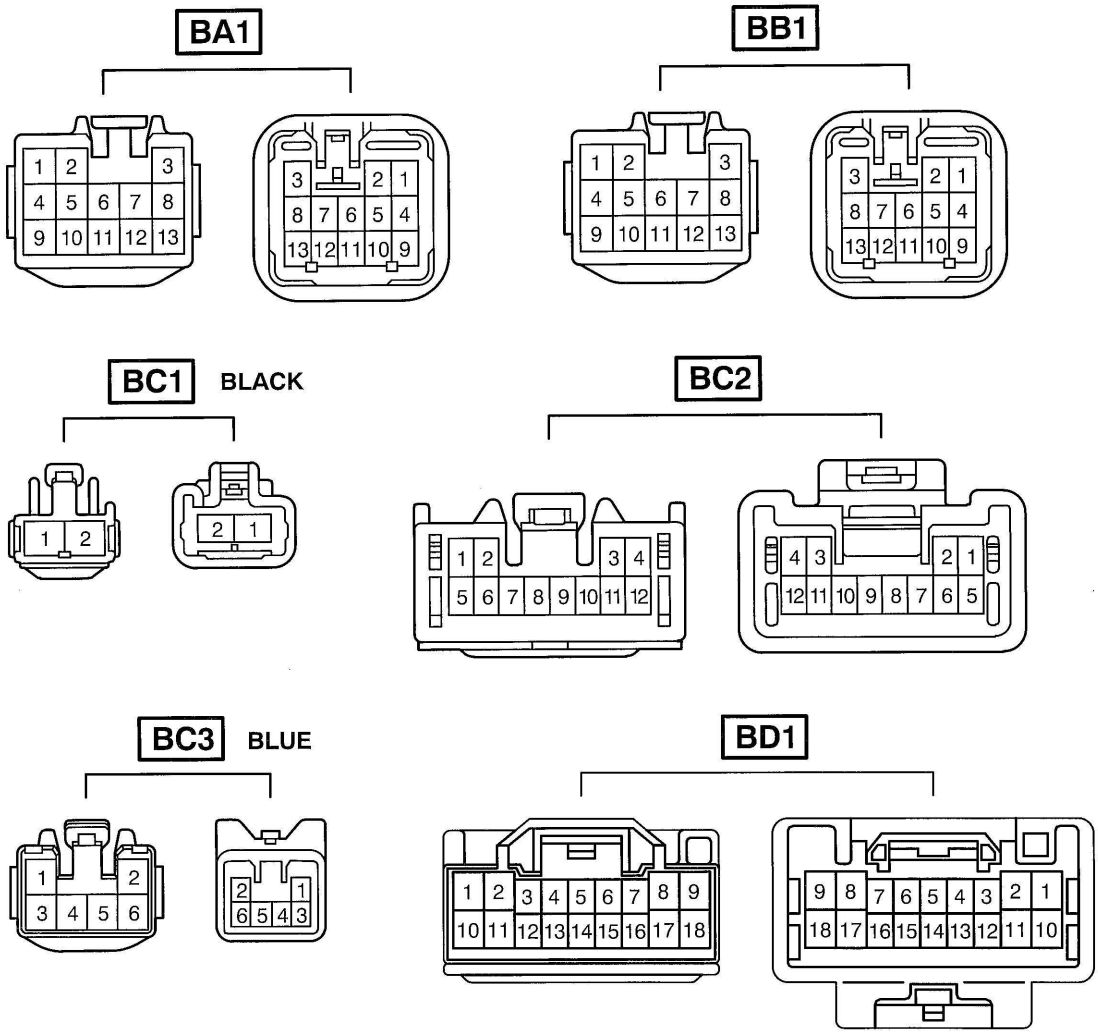


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor No.2 Wire (Under the Left Center Pillar)
BB1	Rear Door RH Wire and Floor Wire (Under the Right Center Pillar)
BC1	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BC2	
BC3	
BD1	Floor No.2 Wire and Floor Wire (Upper the Rear Axle Housing Left)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

[LHD]

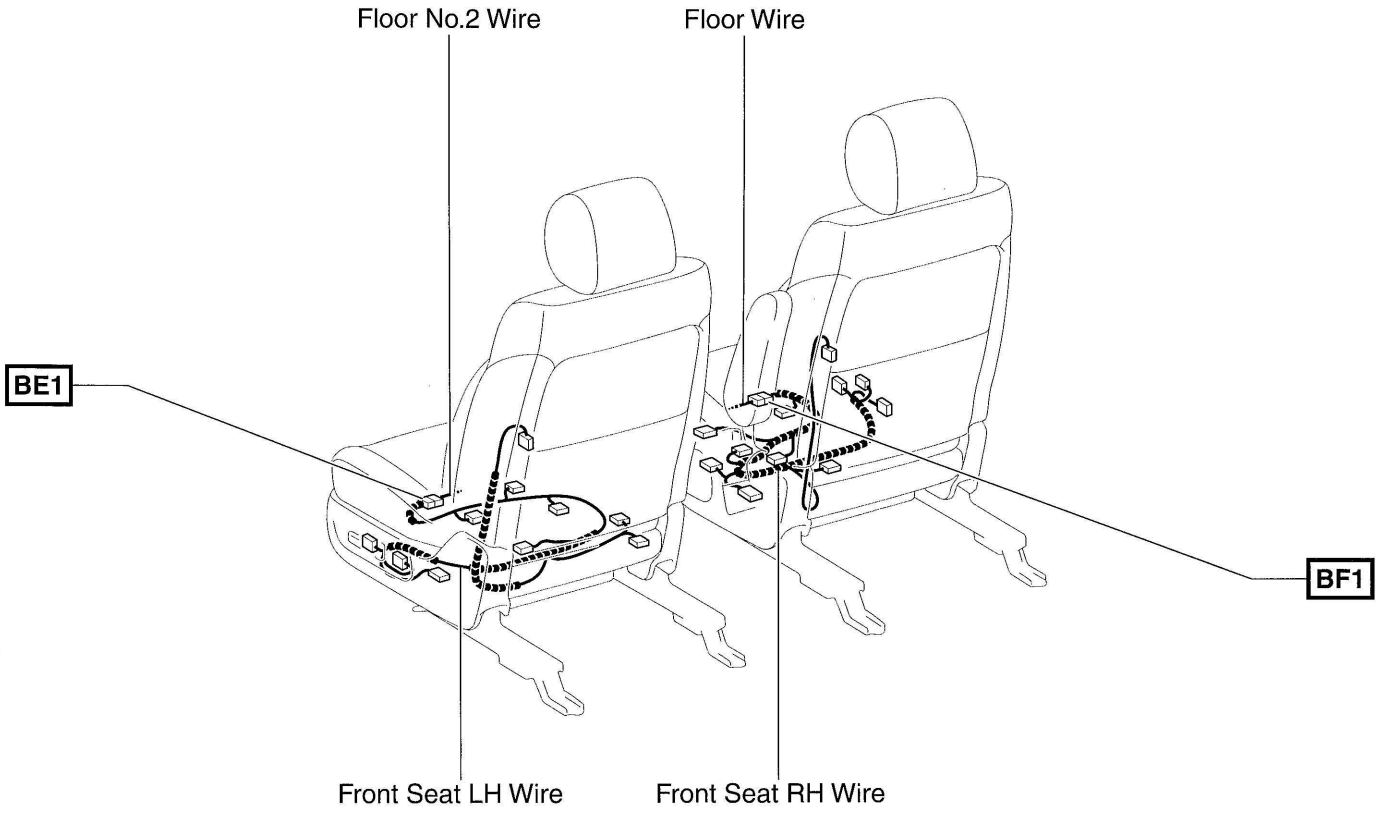

Connector Joining Wire Harness and Wire Harness

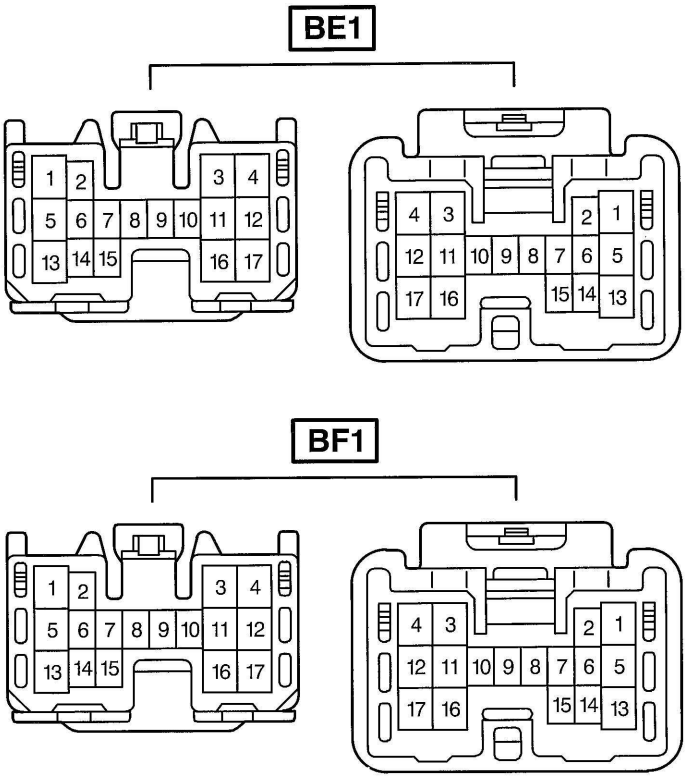


Code	Joining Wire Harness and Wire Harness (Connector Location)
BE1	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BF1	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

G ELECTRICAL WIRING ROUTING


▭ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[RHD]

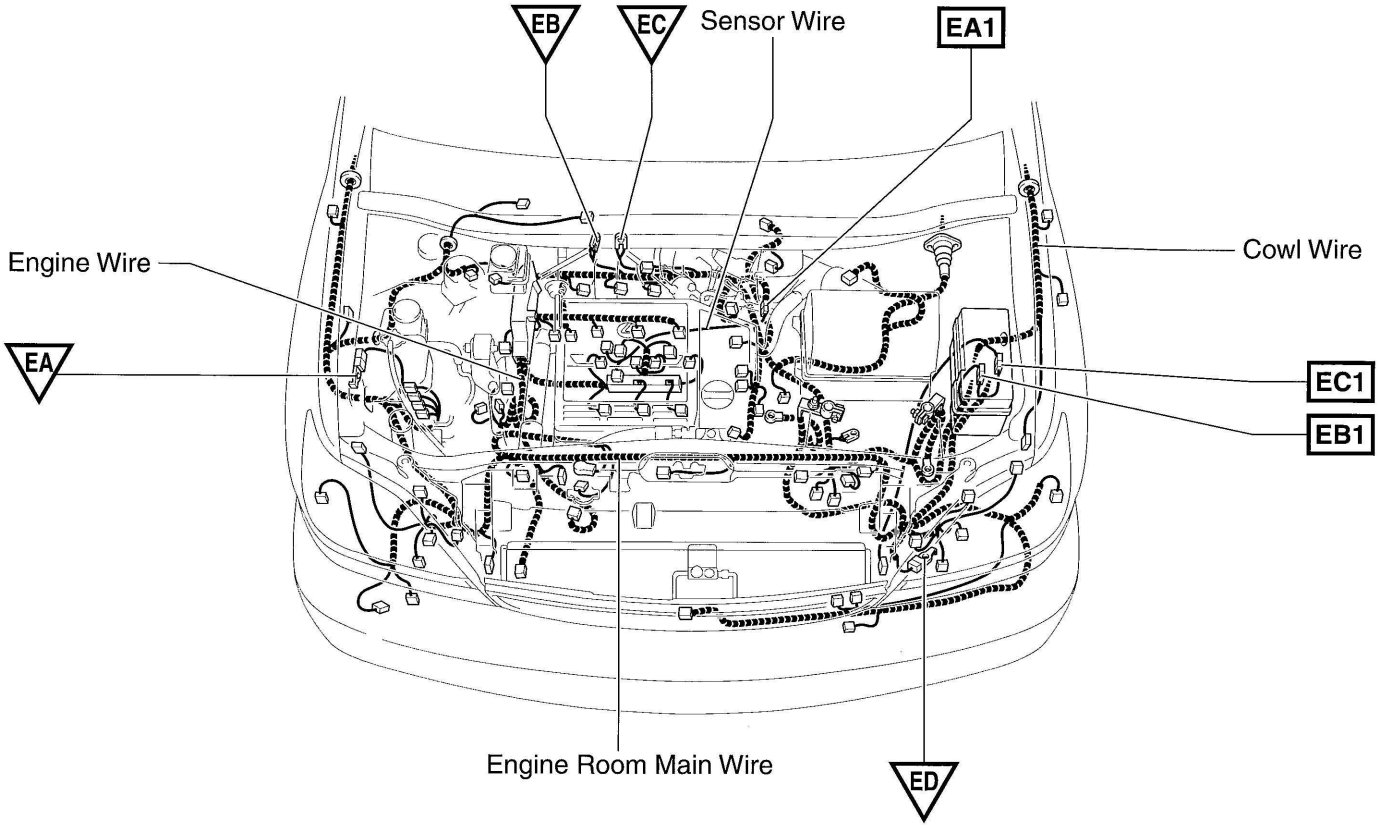

○ : Location of Splice Points

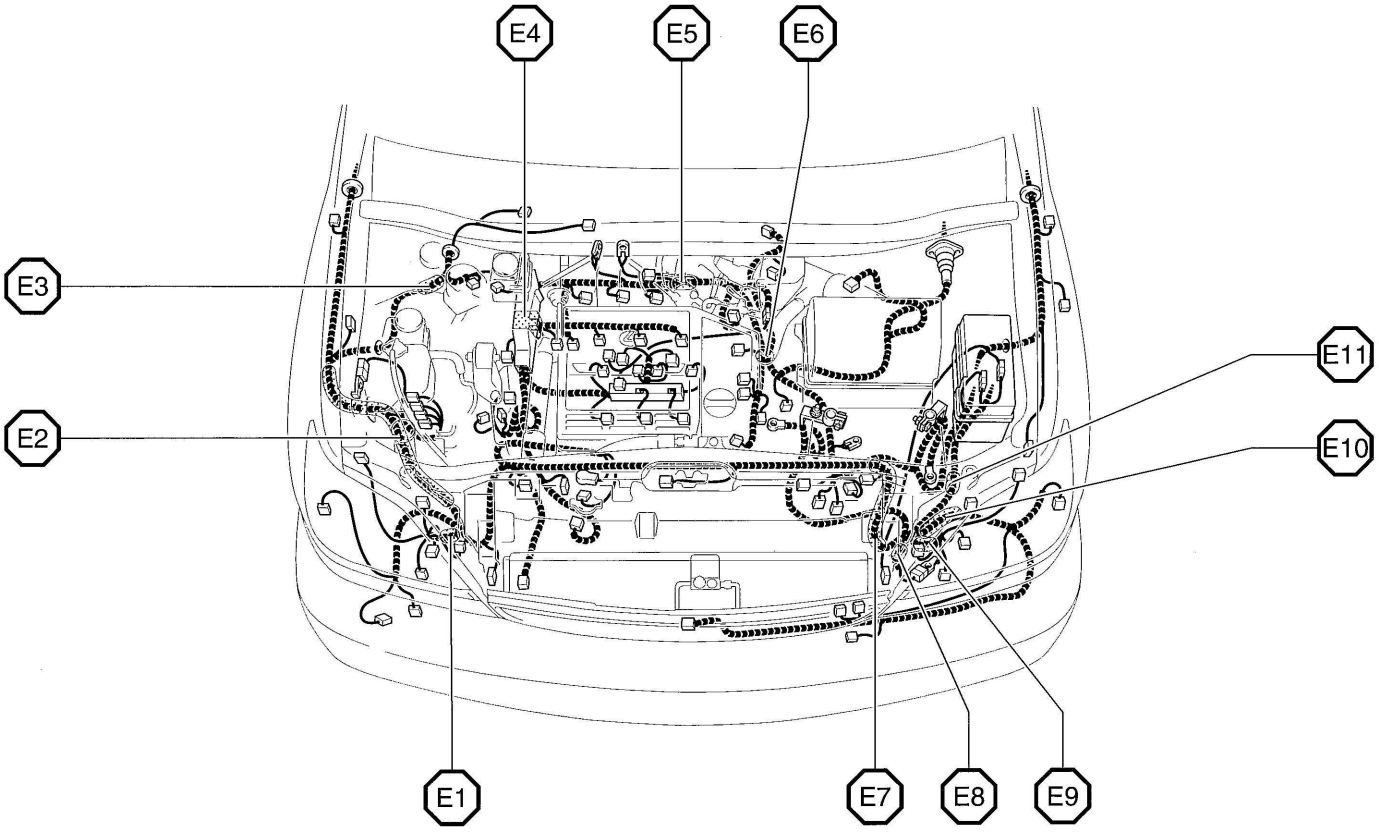

Connector Joining Wire Harness and Wire Harness

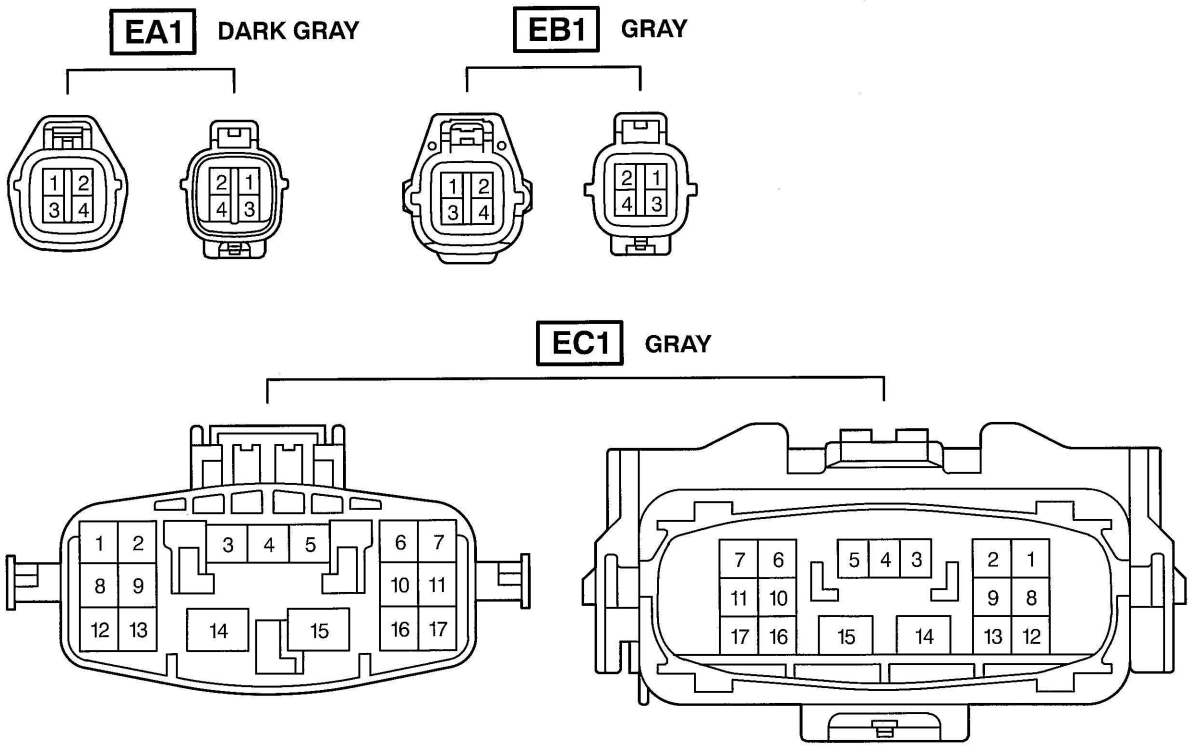


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Sensor Wire (Head Cover RH)
EB1	Engine Wire and Engine Room Main Wire (Under the Engine Room J/B)
EC1	Cowl Wire and Engine Room Main Wire (Under the Engine Room J/B)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[RHD]

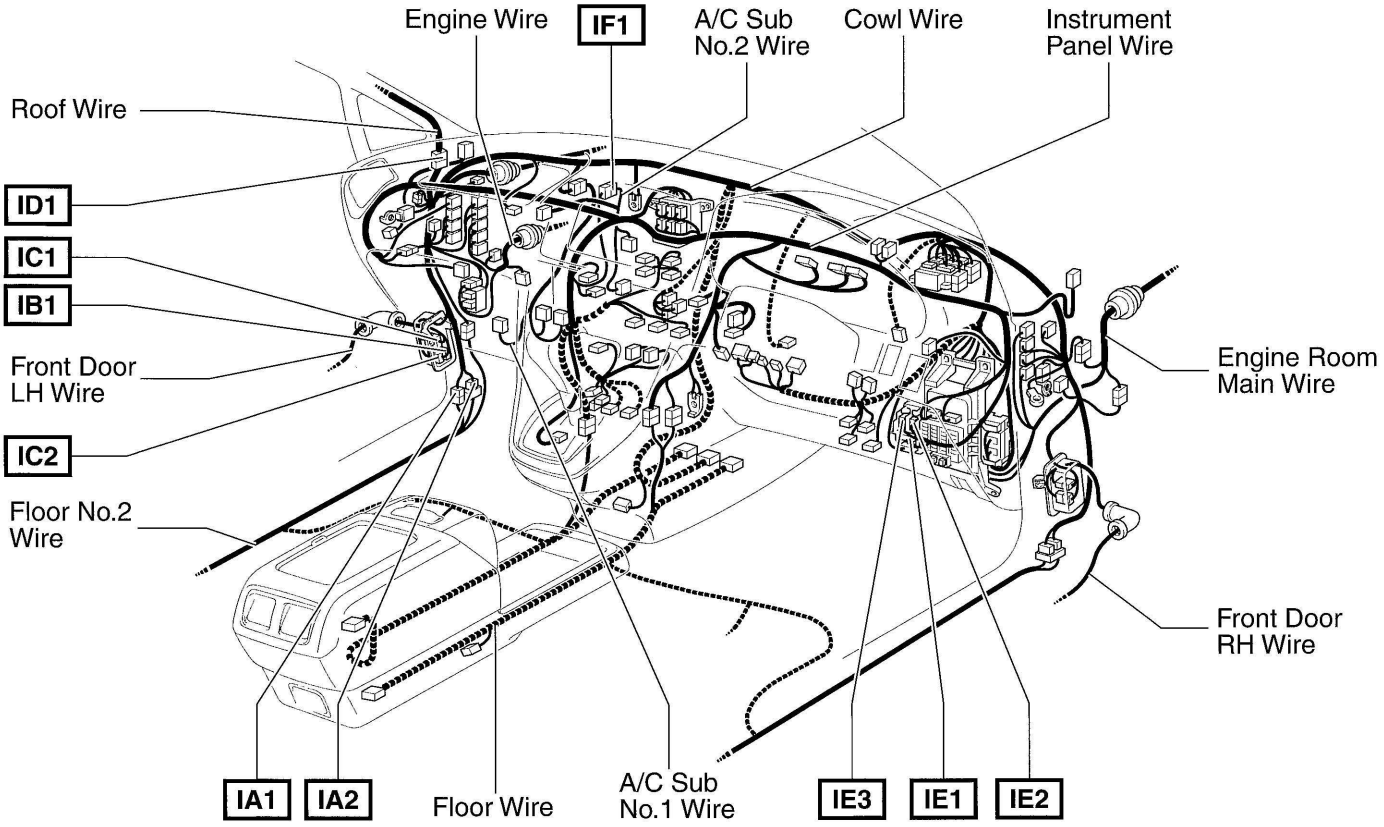

▽ : Location of Ground Points

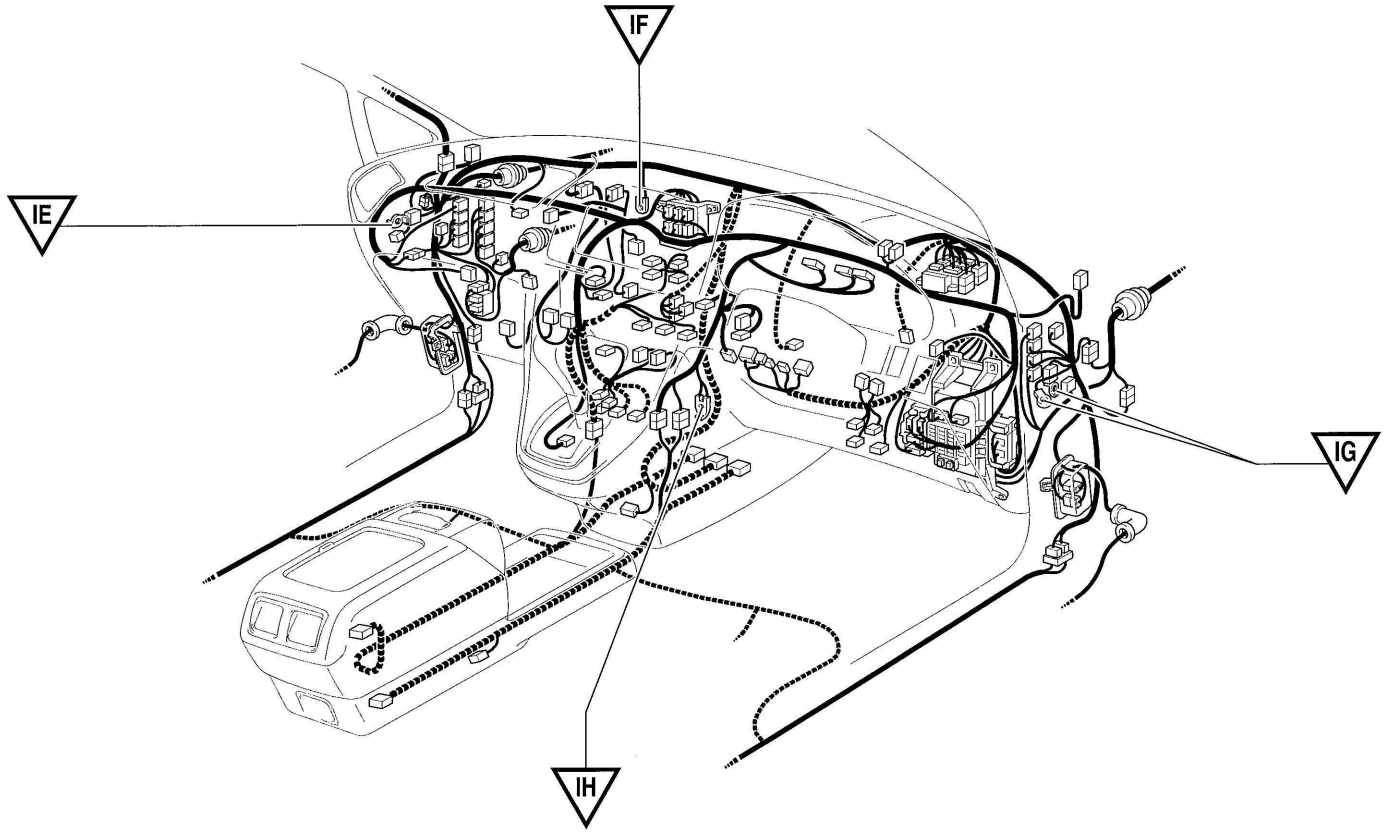

Connector Joining Wire Harness and Wire Harness

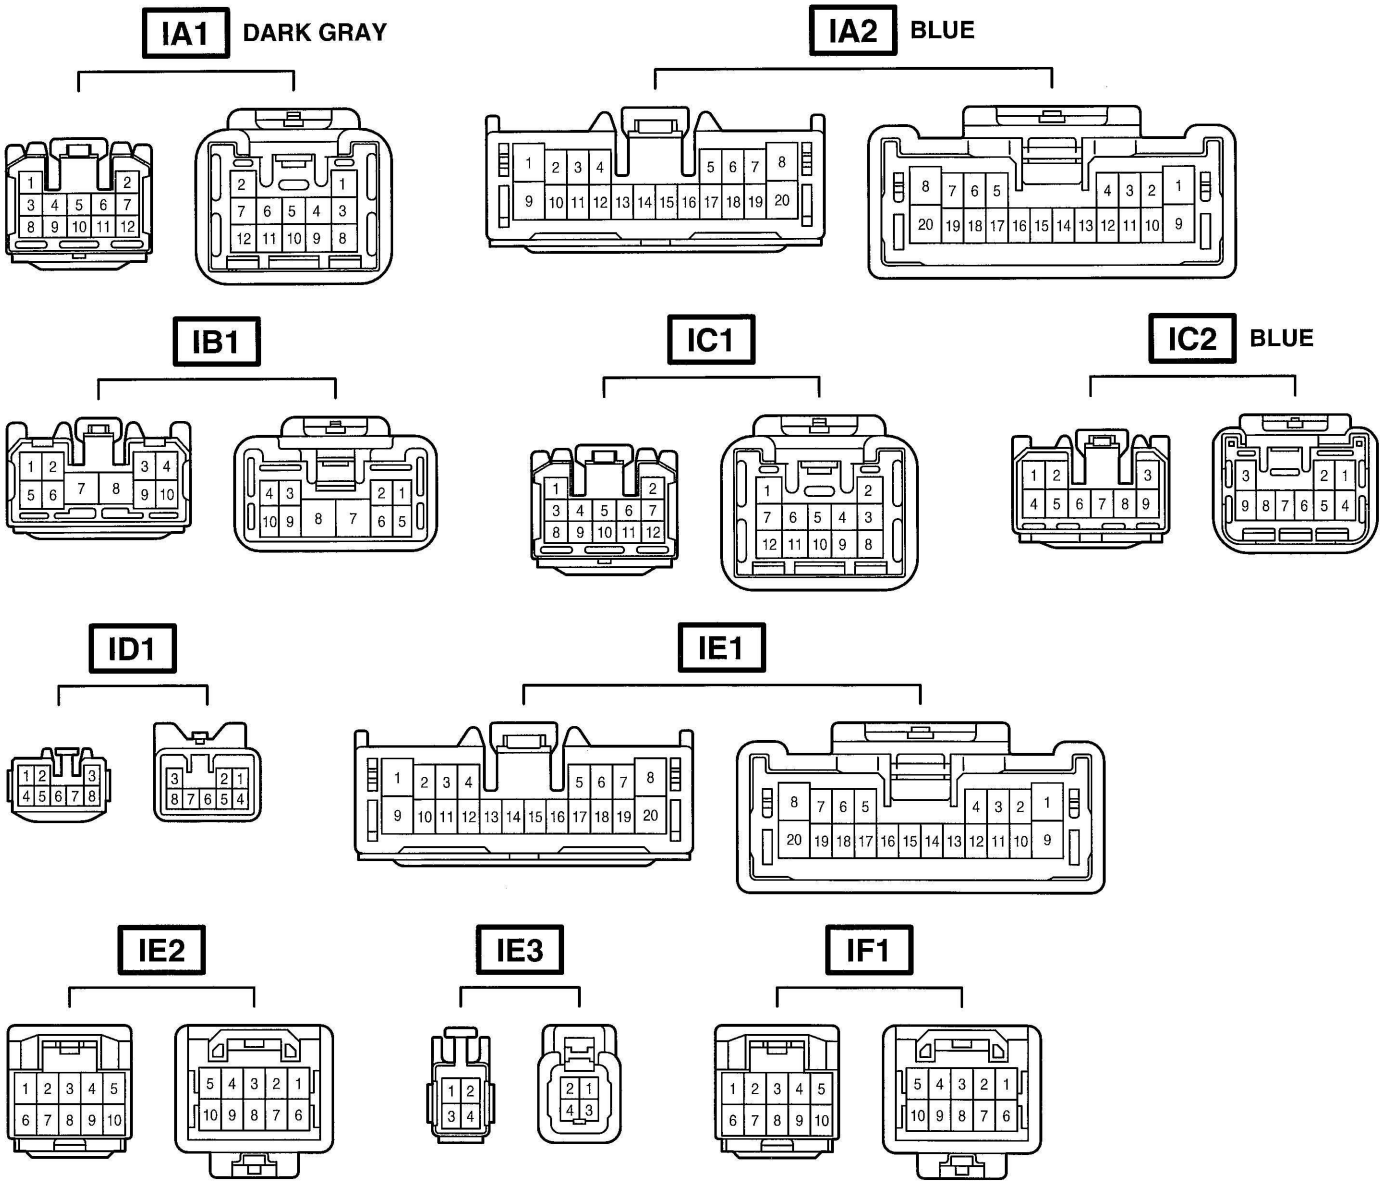


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IA2	
IB1	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IC1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC2	
ID1	Roof Wire and Cowl Wire (Left Side of the Instrument Panel)
IE1	Instrument Panel Wire and Cowl Wire (Lower Finish Panel)
IE2	
IE3	
IF1	Instrument Panel Wire and A/C Sub No.2 Wire (Instrument Panel Brace RH)


G ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness


[RHD]

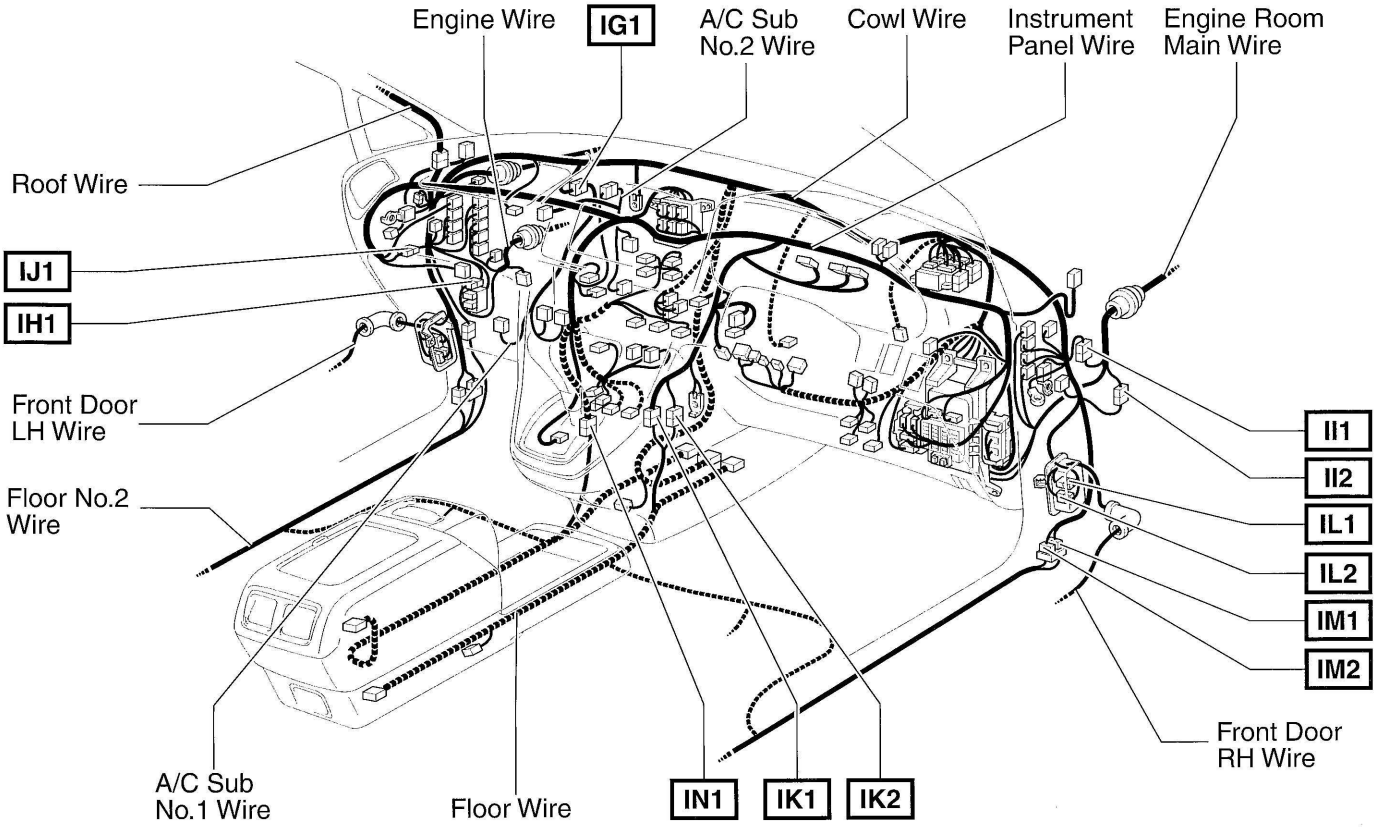

○ : Location of Splice Points

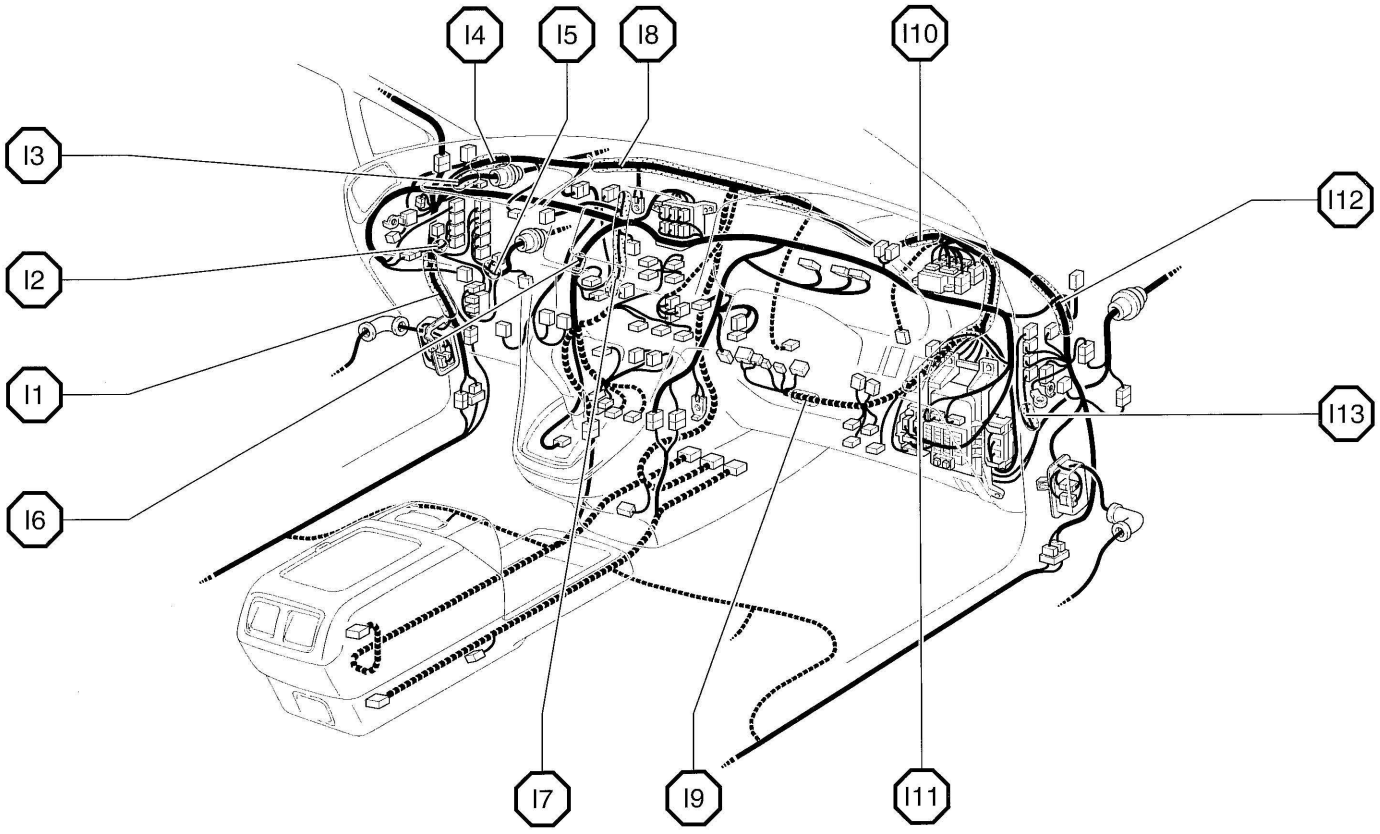

Connector Joining Wire Harness and Wire Harness

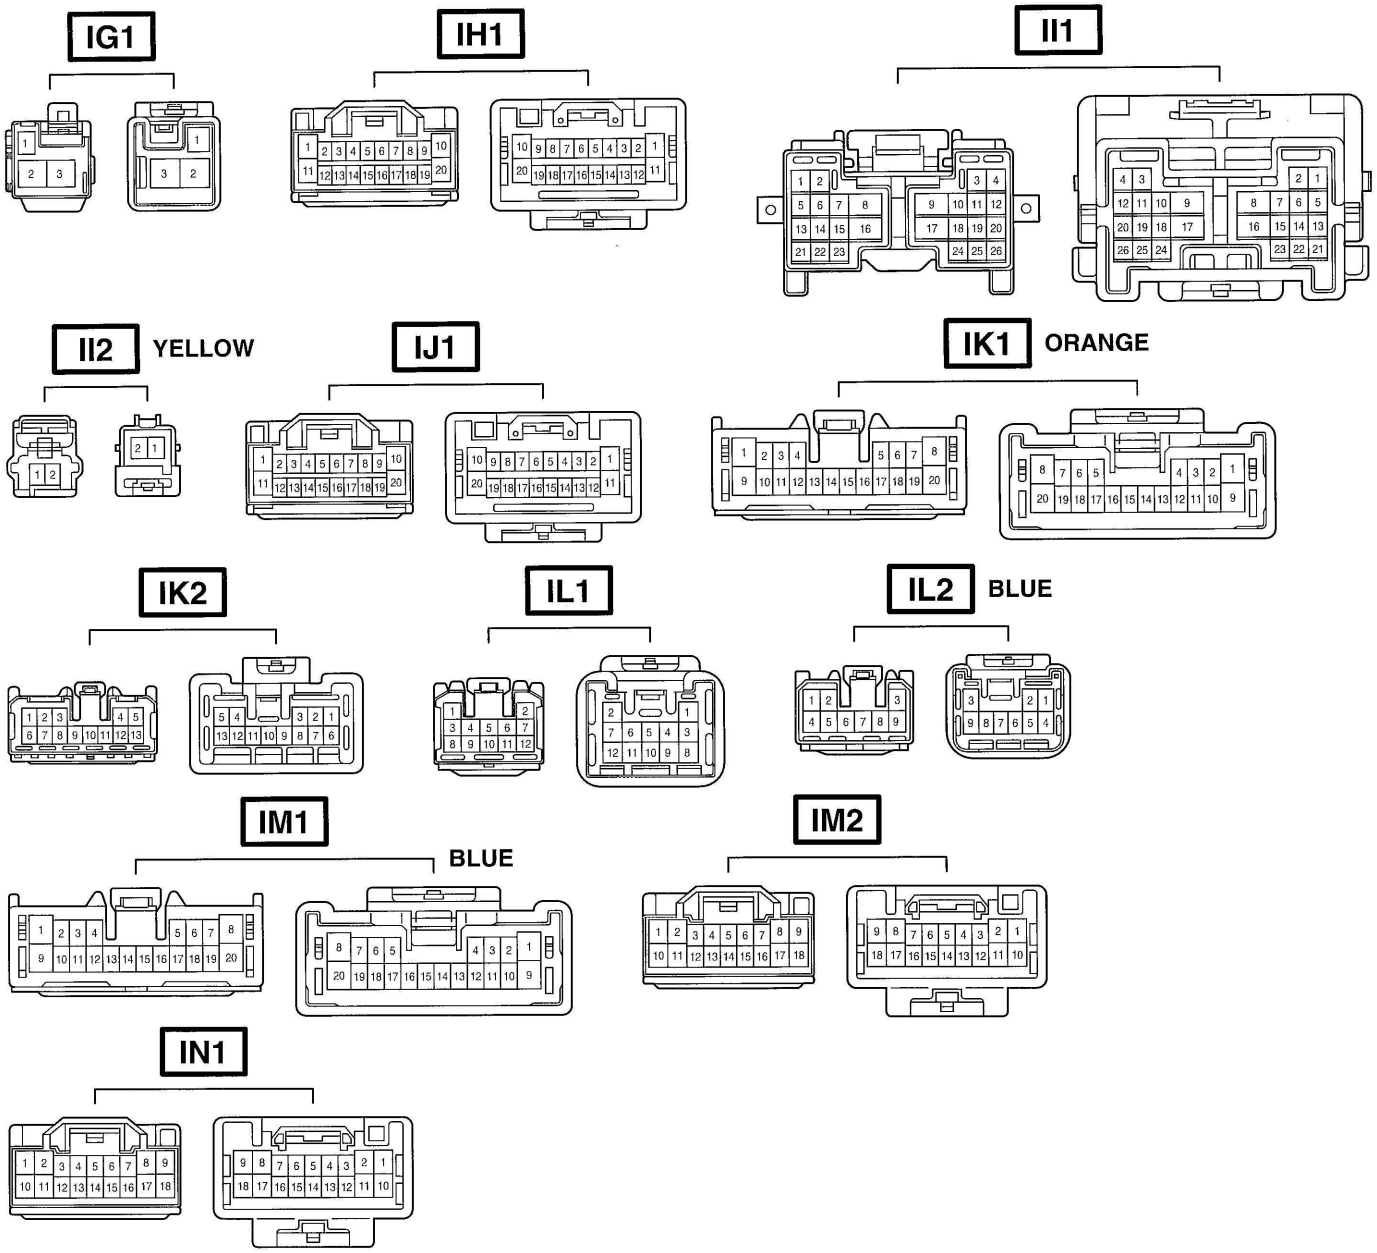


Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Cowl Wire and A/C Sub No.1 Wire (Instrument Panel Brace RH)
IH1	Engine Wire and Cowl Wire (Behind the Glove Box)
II1	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
II2	
IJ1	Cowl Wire and Instrument Panel Wire (Behind the Glove Box)
IK1	Instrument Panel Wire and Floor Wire (Instrument Panel Brace RH)
IK2	
IL1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL2	
IM1	Cowl Wire and Floor Wire (Right Kick Panel)
IM2	
IN1	Instrument Panel Wire and Floor No.2 Wire (Instrument Panel Brace LH)

G ELECTRICAL WIRING ROUTING


▭ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[RHD]

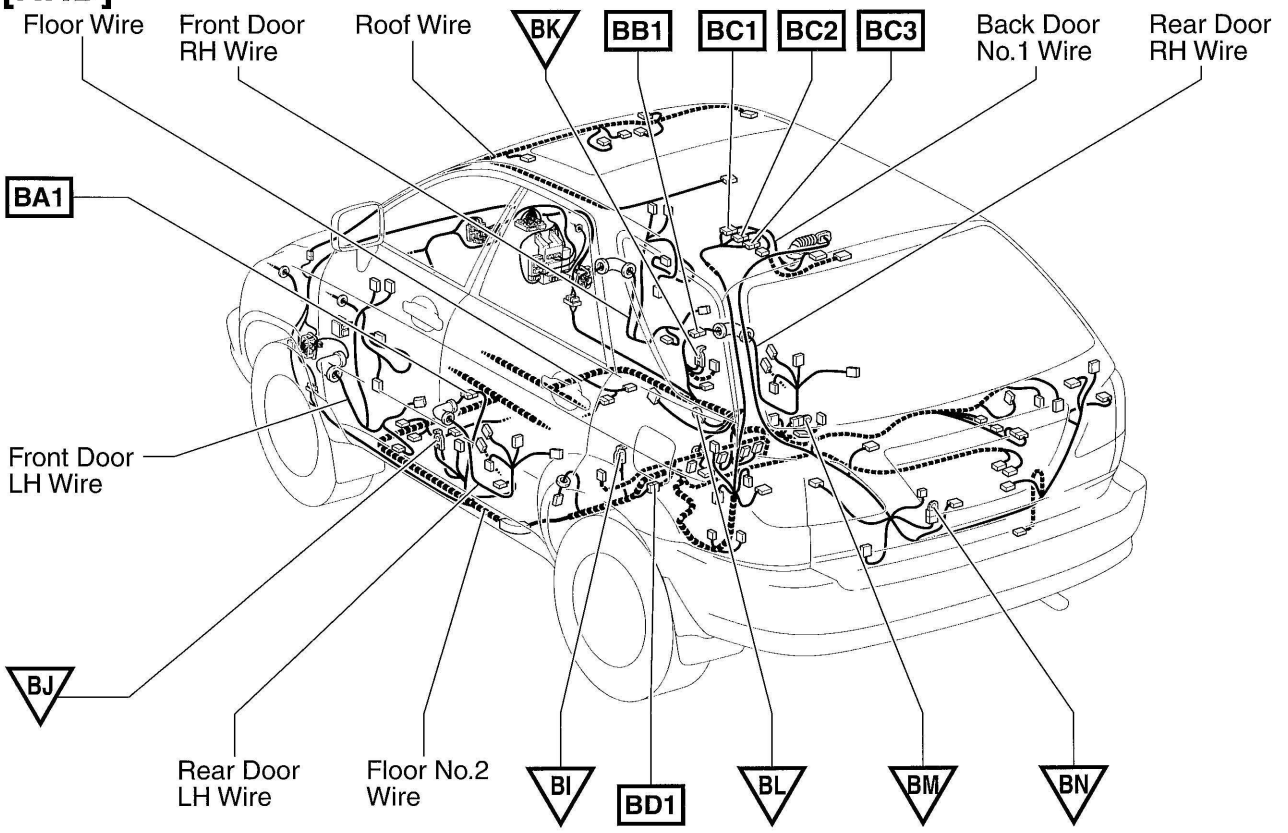

○ : Location of Splice Points

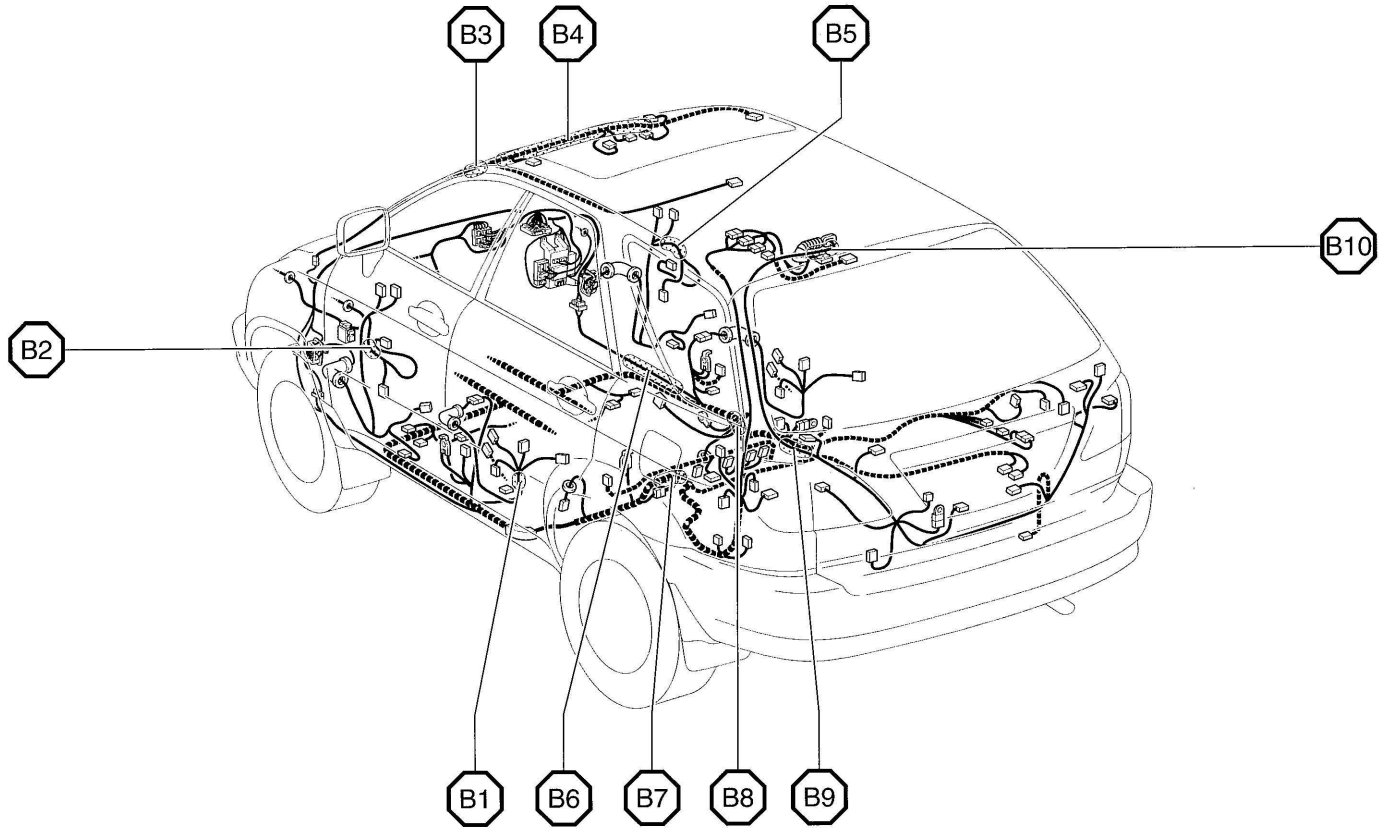

Connector Joining Wire Harness and Wire Harness

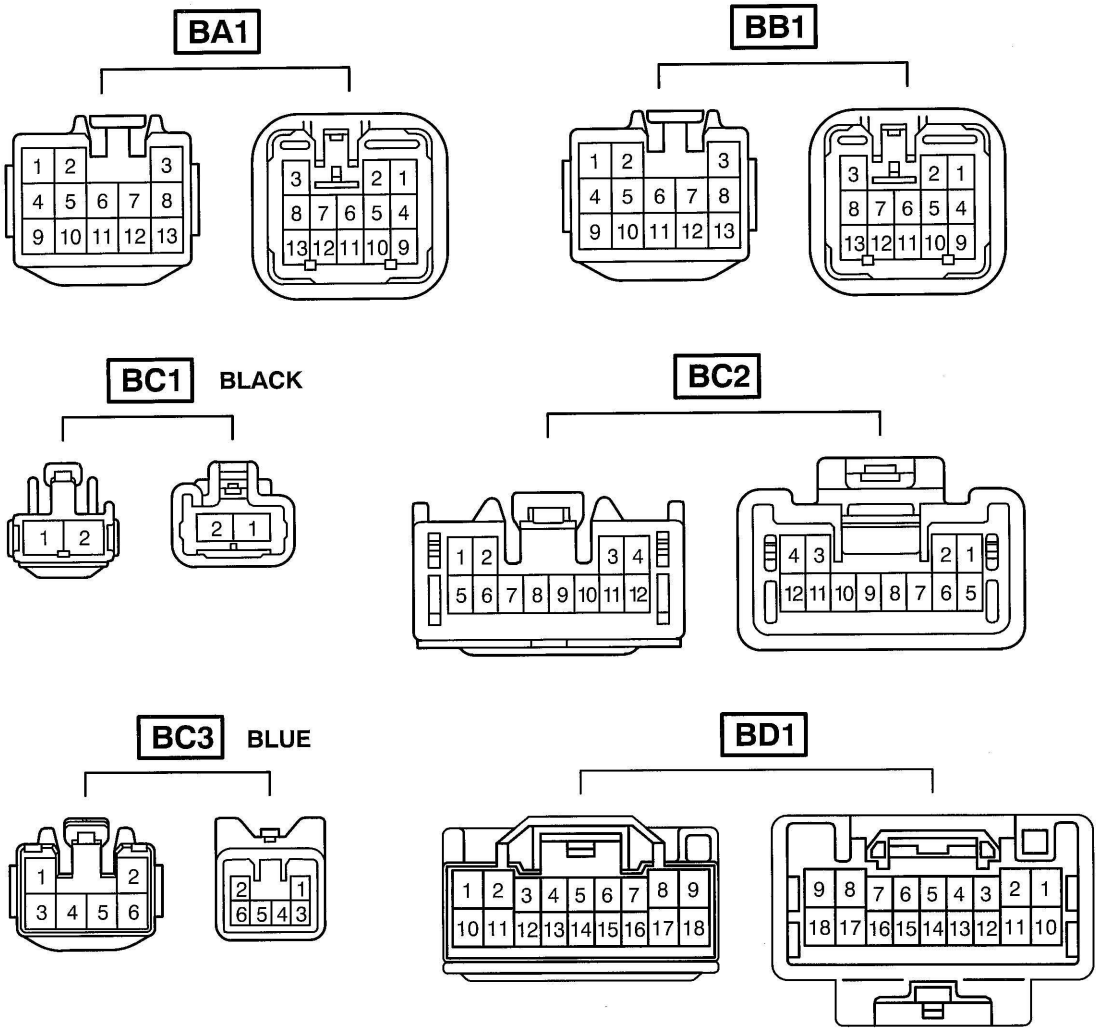


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor No.2 Wire (Under the Left Center Pillar)
BB1	Rear Door RH Wire and Floor Wire (Under the Right Center Pillar)
BC1	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BC2	
BC3	
BD1	Floor No.2 Wire and Floor Wire (Upper the Rear Axle Housing Left)


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

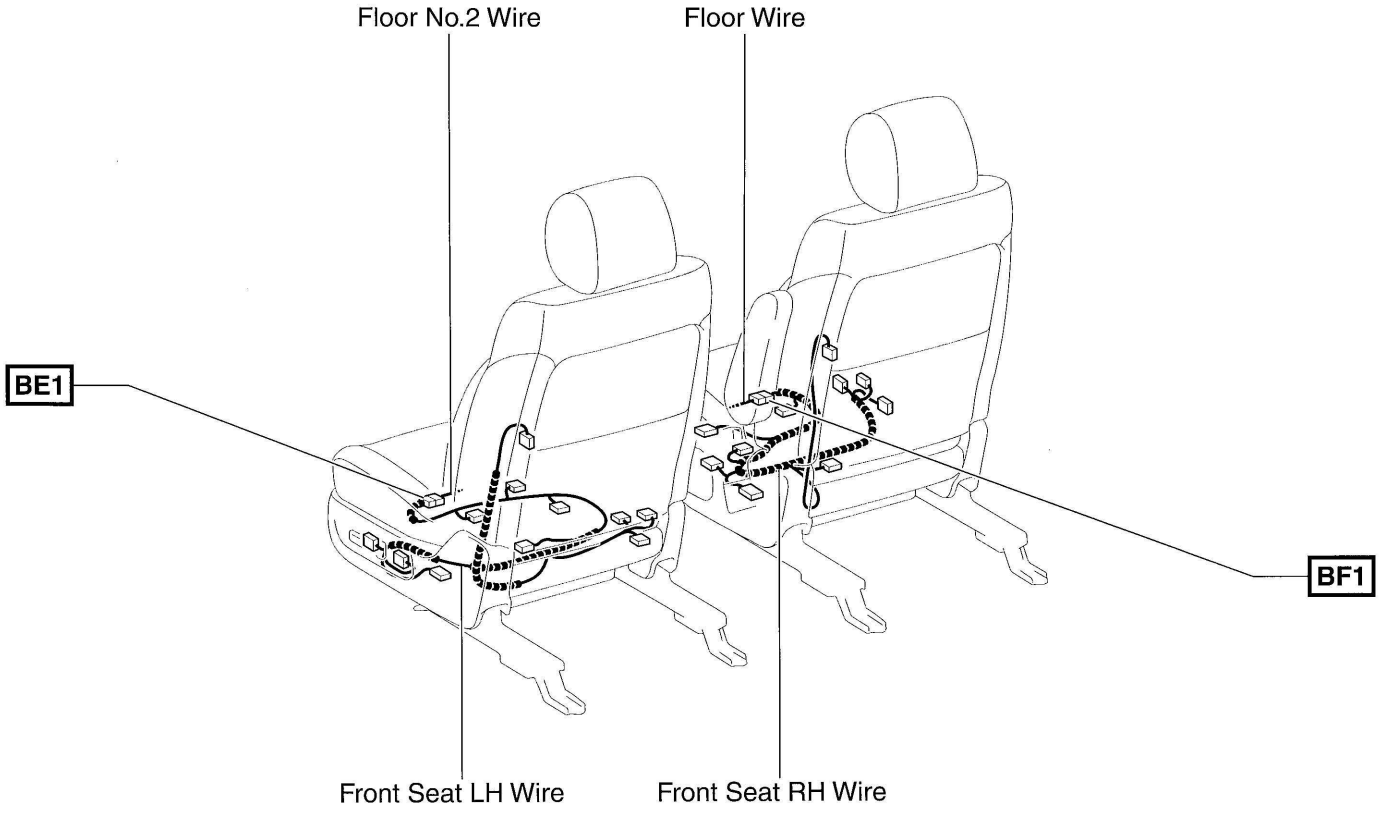

Connector Joining Wire Harness and Wire Harness

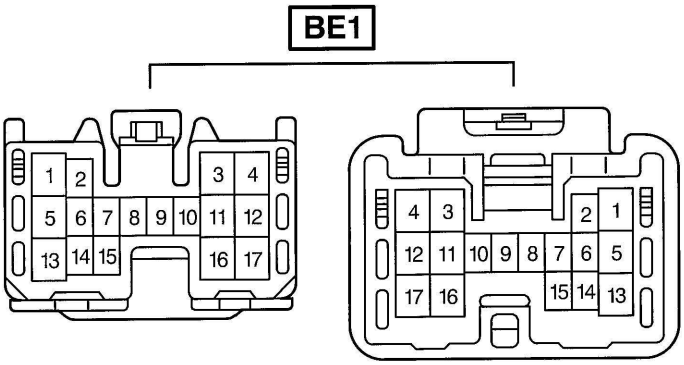

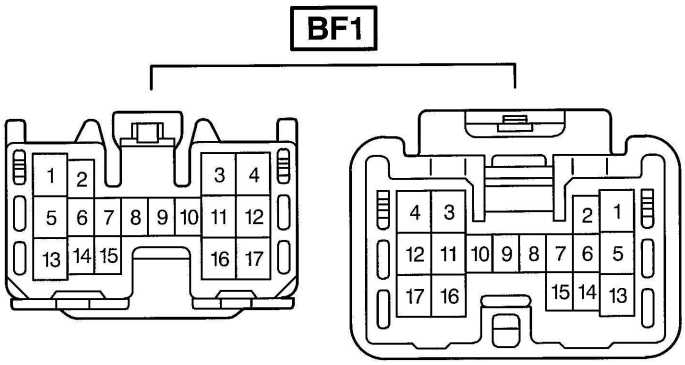

Code	Joining Wire Harness and Wire Harness (Connector Location)
BE1	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)
BF1	Floor Wire and Front Seat RH Wire (Under the Driver's Seat)