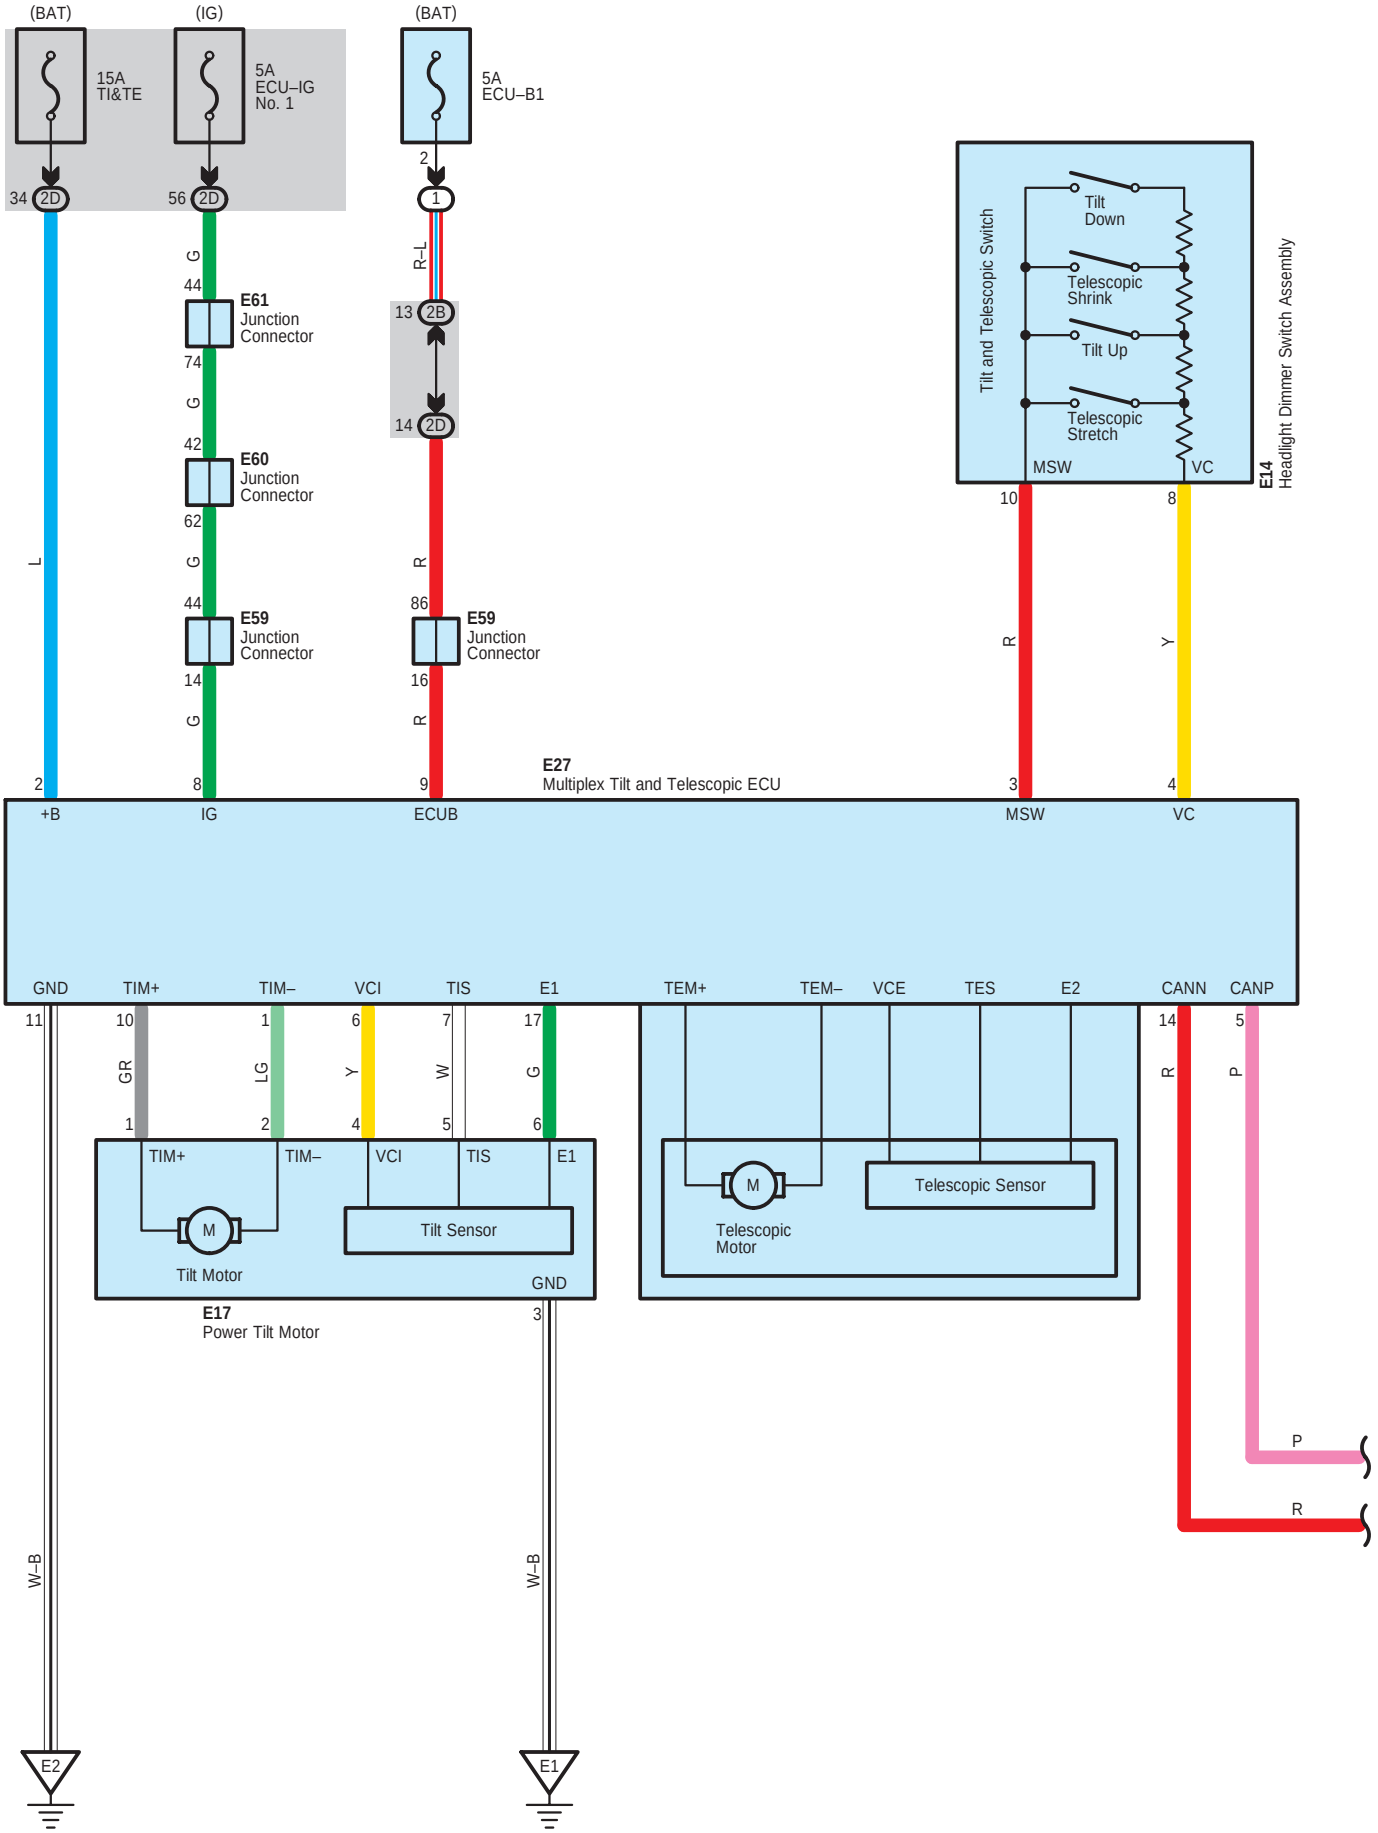
(BAT)
(IG)
(BAT)
15A
TI&TE
5A
ECU–IG
No. 1
5A
ECU–B1
34 2D
56 2D
2
1
13 2B
14 2D
G
44
E61
Junction
Connector
74
G
42
E60
Junction
Connector
62
G
44
E59
Junction
Connector
14
G
R–L
R
86
E59
Junction
Connector
16
R
L
Tilt and Telescopic Switch
Tilt
Down
Telescopic
Shrink
Tilt Up
Telescopic
Stretch
MSW
VC
E14
Headlight Dimmer Switch Assembly
10
8
R
Y
E27
Multiplex Tilt and Telescopic ECU
2
8
9
3
4
+B
IG
ECUB
MSW
VC
GND
TIM+
TIM–
VCI
TIS
E1
TEM+
TEM–
VCE
TES
E2
CANN
CANP
11
10
1
6
7
17
14
5
GR
LG
Y
W
G
R
P
1
2
4
5
6
TIM+
TIM–
VCI
TIS
E1
M
Tilt Motor
Tilt Sensor
GND
E17
Power Tilt Motor
3
M
Telescopic
Motor
Telescopic Sensor
P
R
W–B
W–B
E2
E1

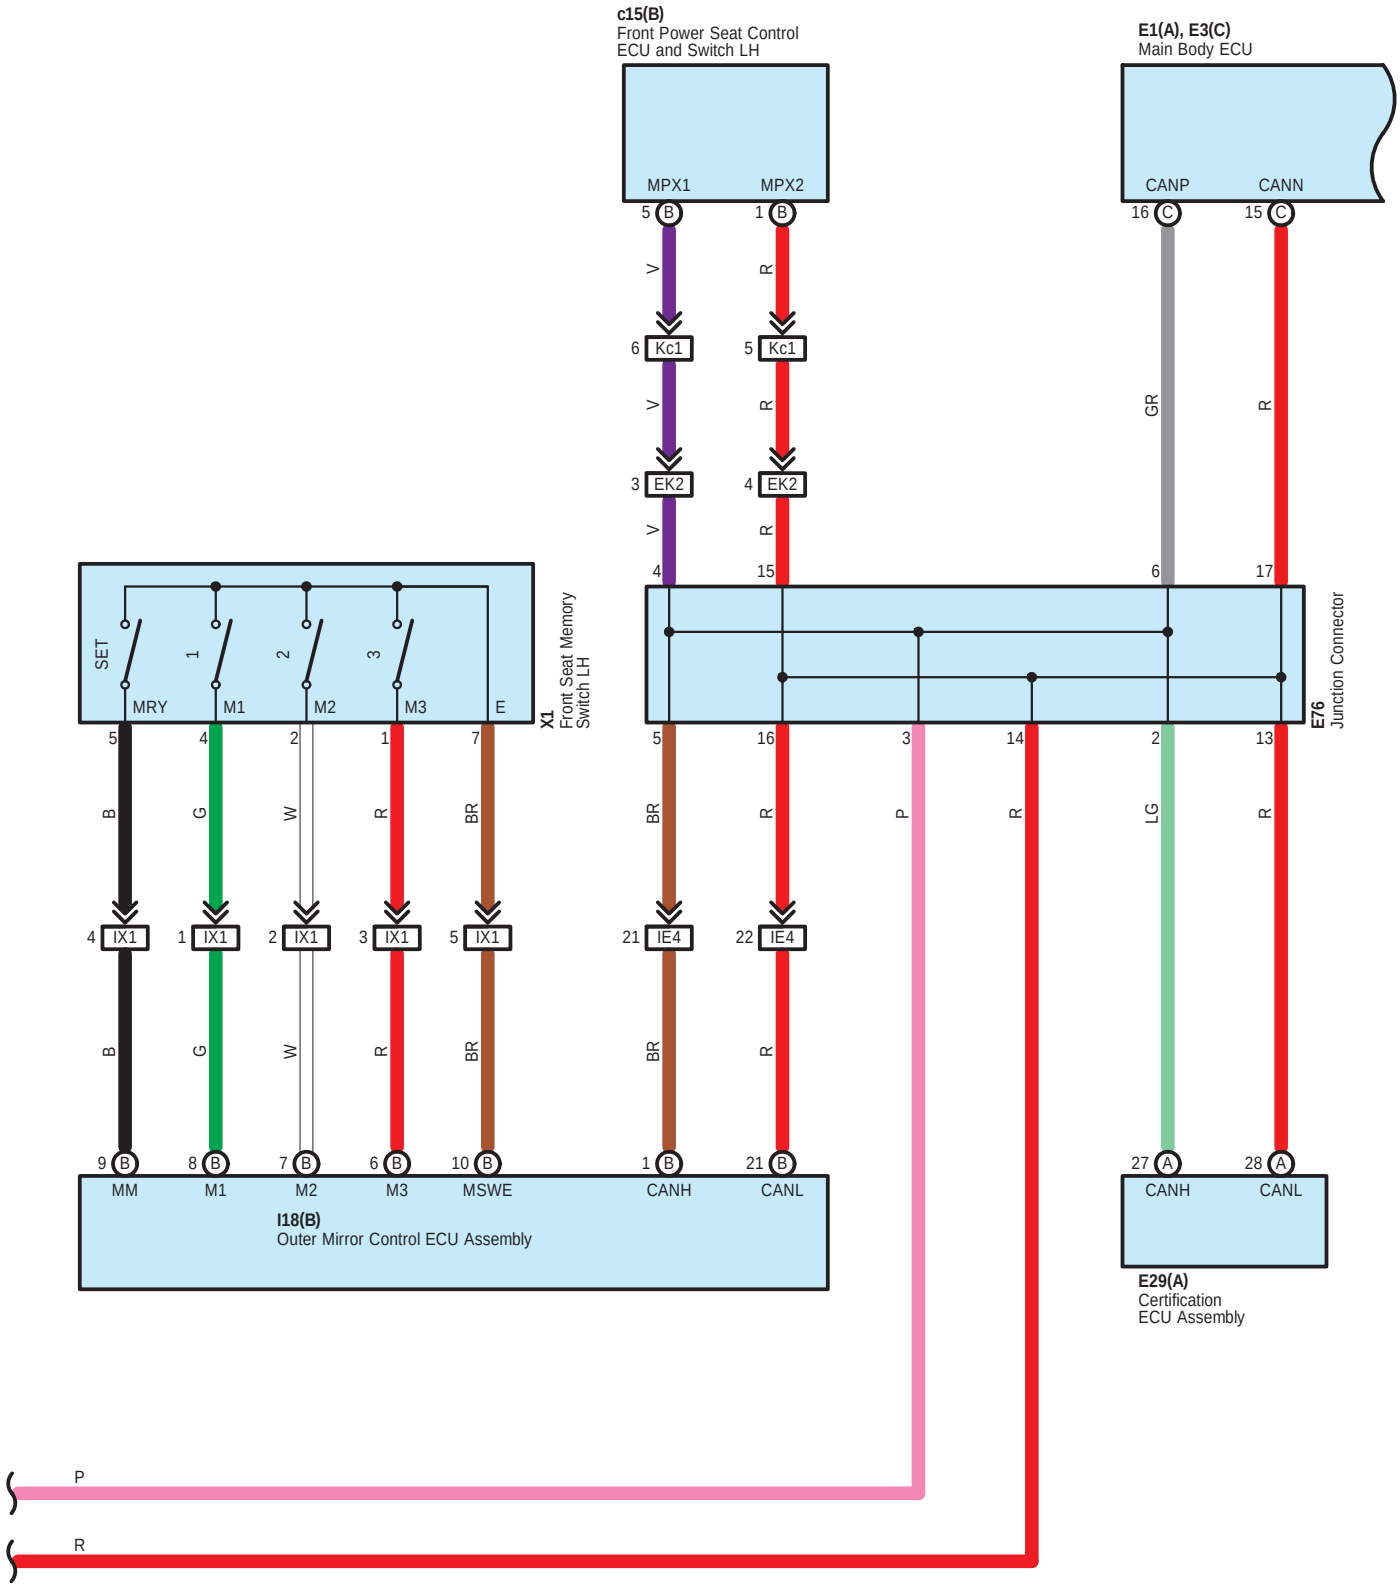
c15(B)
Front Power Seat Control ECU and Switch LH
MPX1
MPX2
E1(A), E3(C)
Main Body ECU
CANP
CANN
Kc1
EK2
SET
1
2
3
MRY
M1
M2
M3
E
X1
Front Seat Memory Switch LH
E76
Junction Connector
IX1
IE4
MM
M1
M2
M3
MSWE
CANH
CANL
I18(B)
Outer Mirror Control ECU Assembly
E29(A)
Certification ECU Assembly
P
R

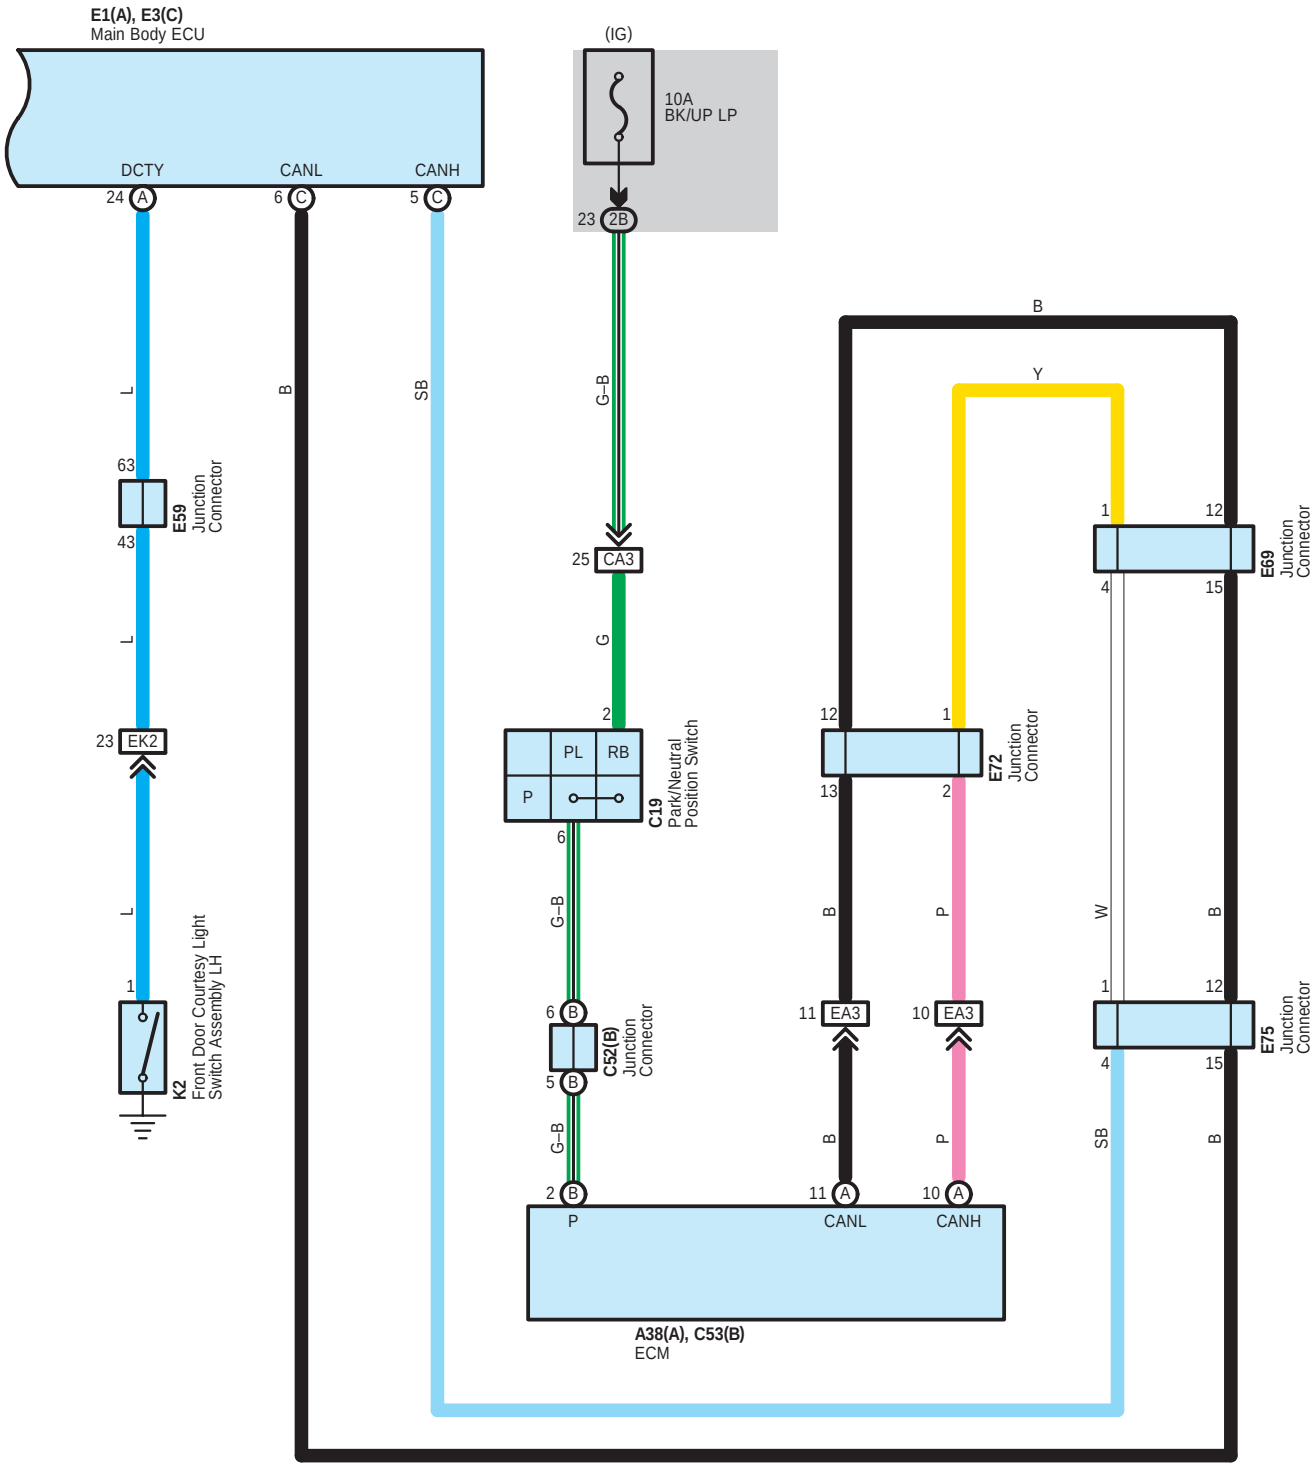
E1(A), E3(C)
Main Body ECU
DCTY
CANL
CANH
24 A
6 C
5 C
(IG)
10A
BK/UP LP
23 2B
L
B
SB
G–B
63
43
E59
Junction
Connector
25 CA3
G
L
23 EK2
2
PL
RB
P
C19
Park/Neutral
Position Switch
6
G–B
L
1
K2
Front Door Courtesy Light
Switch Assembly LH
6 B
5 B
C52(B)
Junction
Connector
G–B
2 B
P
B
12
13
1
2
E72
Junction
Connector
B
P
11 EA3
10 EA3
B
P
11 A
10 A
CANL
CANH
A38(A), C53(B)
ECM
Y
1
12
4
15
E69
Junction
Connector
W
B
1
12
4
15
E75
Junction
Connector
SB
B

A 38
Black

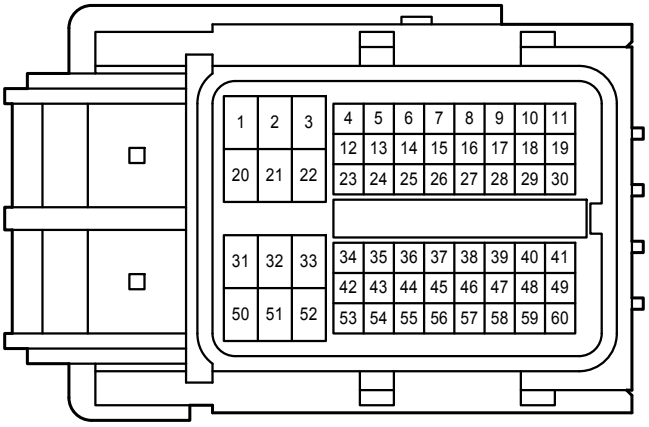

C 19
Gray

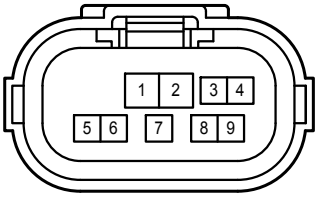

C 52
Blue

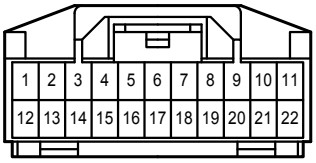

C 53
Black

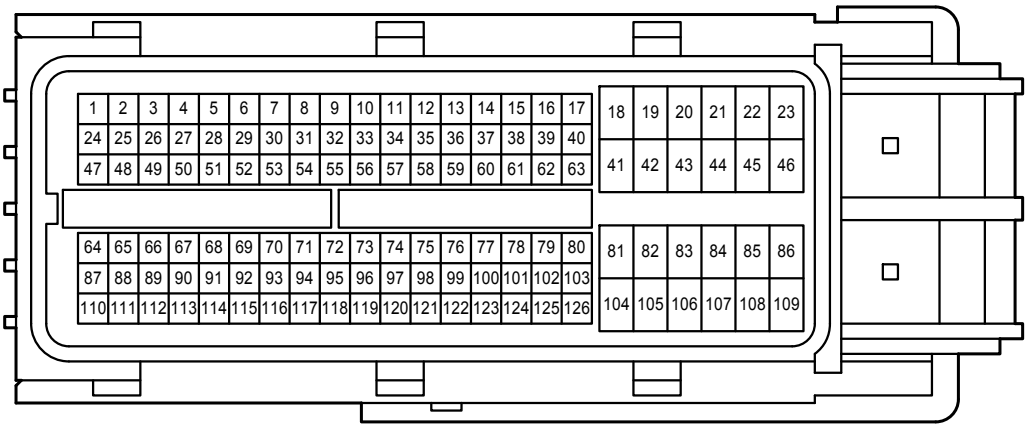

E 1
White

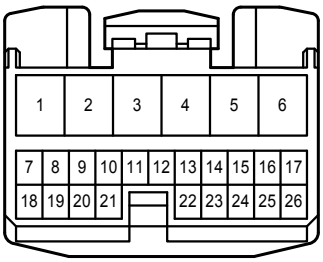

E 3
White

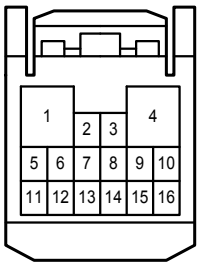

E 14
White

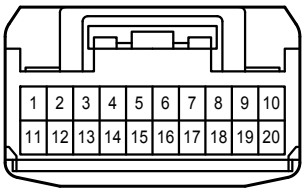

E 17
White

E 27
White

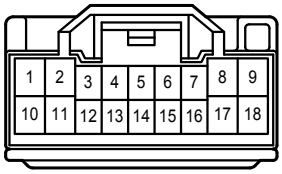

E 29
White

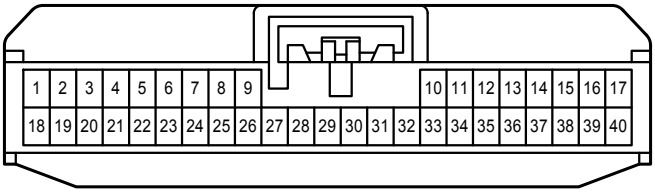

E 59
White

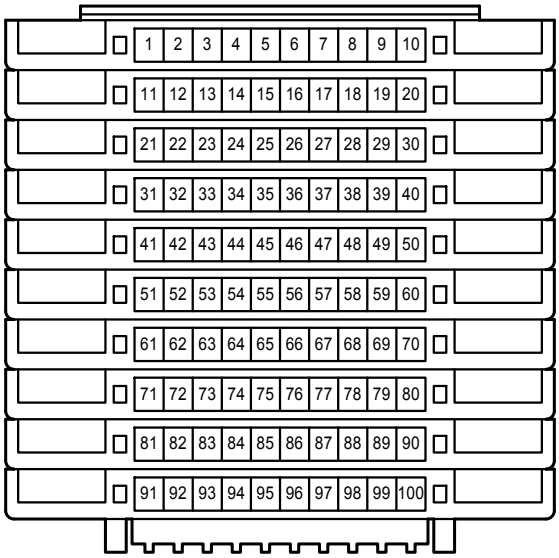

E 60
White

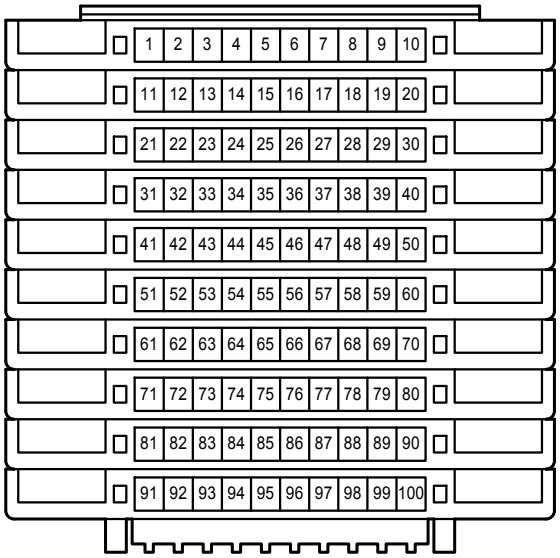

E 61
White

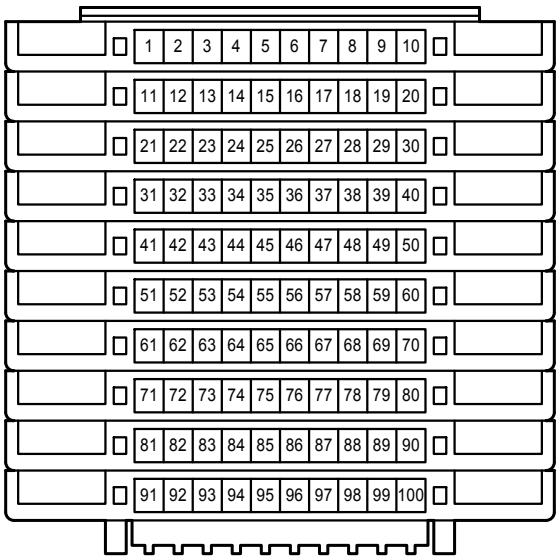

E 69
Gray

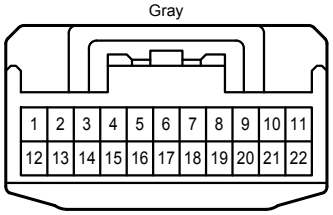

E 72
Gray

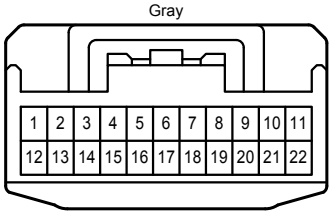

E 75
Gray

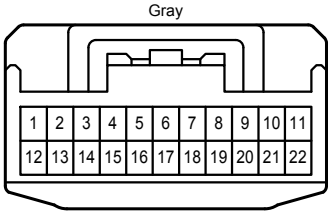

E 76
Gray

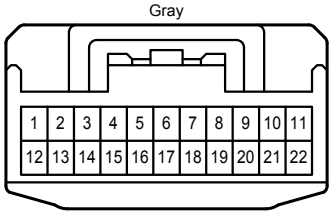

I 18
White

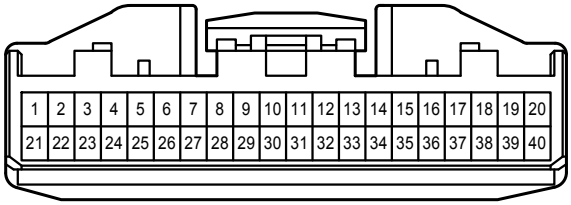

K 2
White

X 1
White

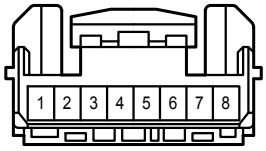

c 15
White

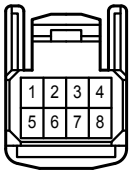

2B
White

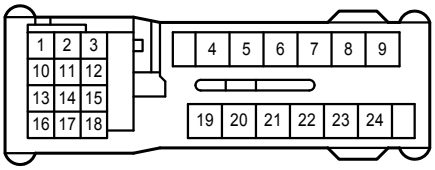

2D
White

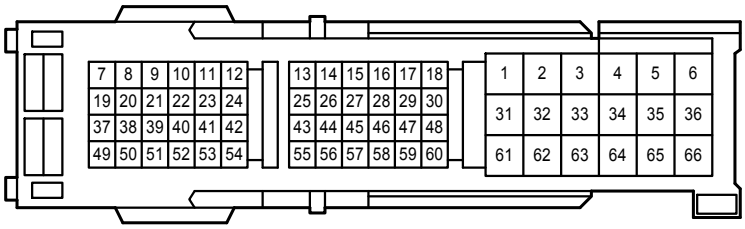

CA3
White

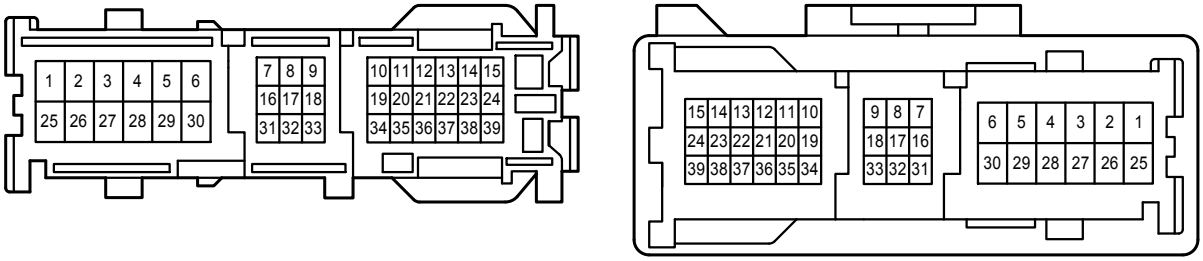

EA3
White

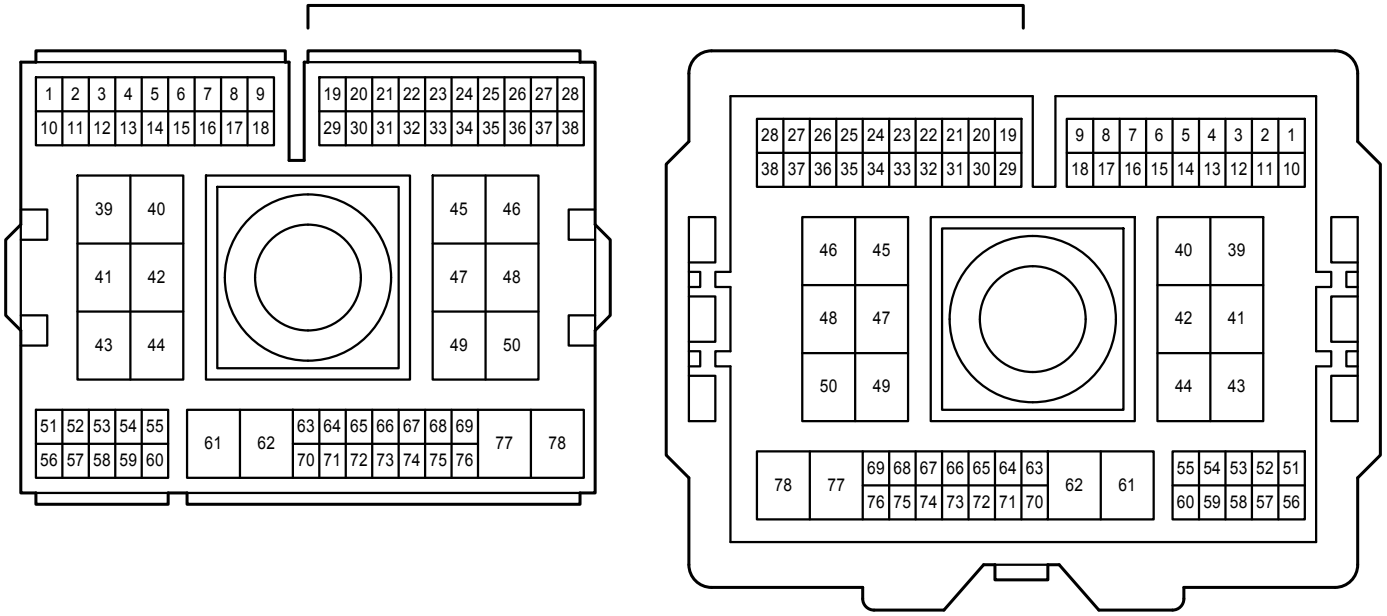

EK2
White

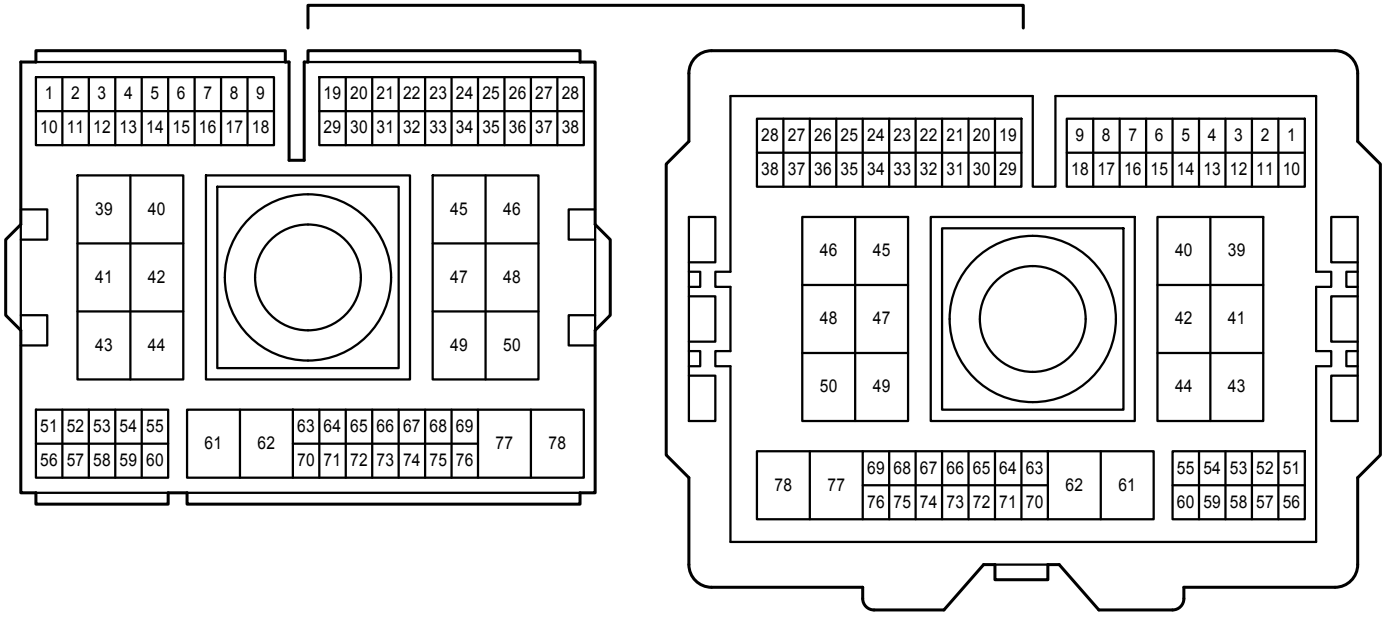

IE4
Gray

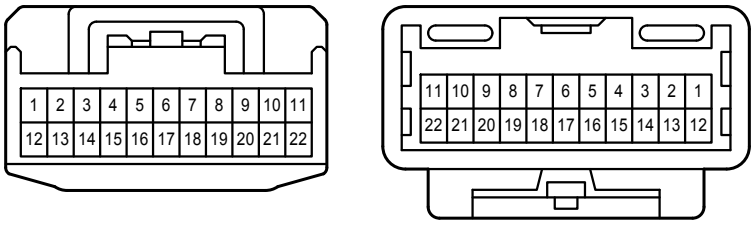

IX1
White

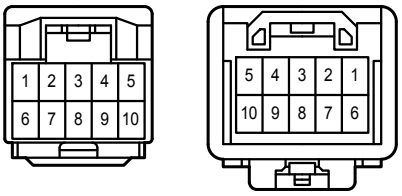

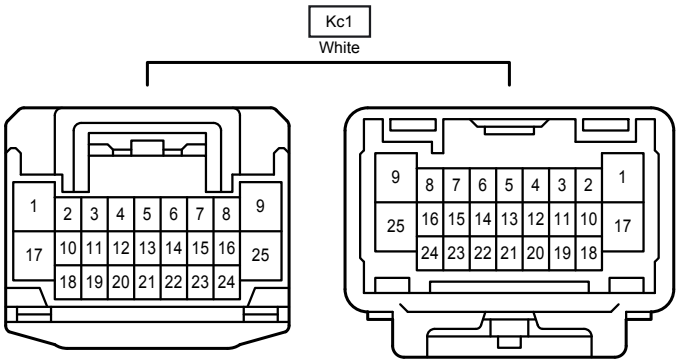
Kc1
White
1
2
3
4
5
6
7
8
9
17
10
11
12
13
14
15
16
25
18
19
20
21
22
23
24
9
8
7
6
5
4
3
2
1
25
16
15
14
13
12
11
10
17
24
23
22
21
20
19
18