Power Window (LHD)

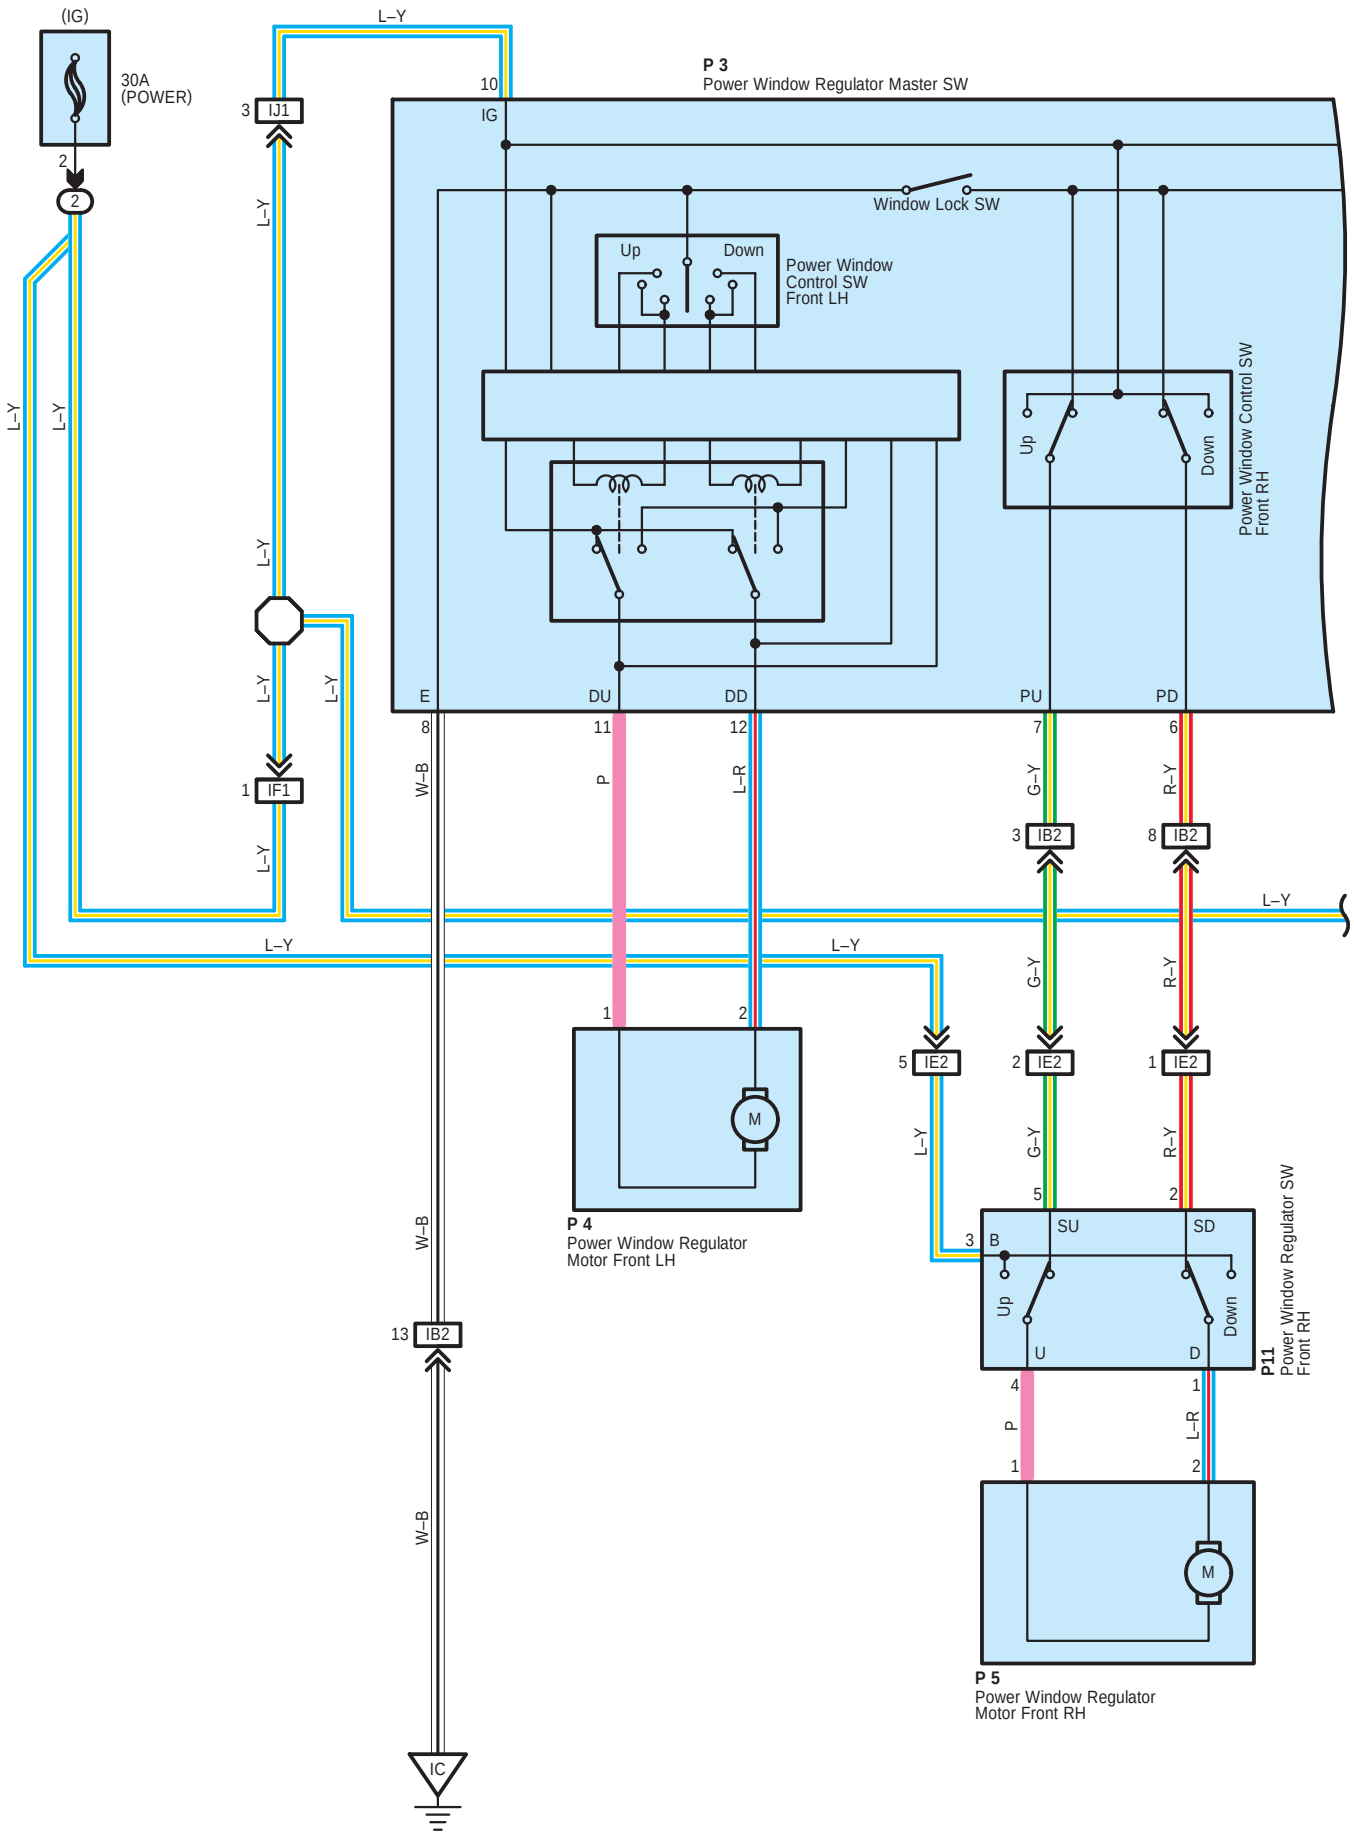

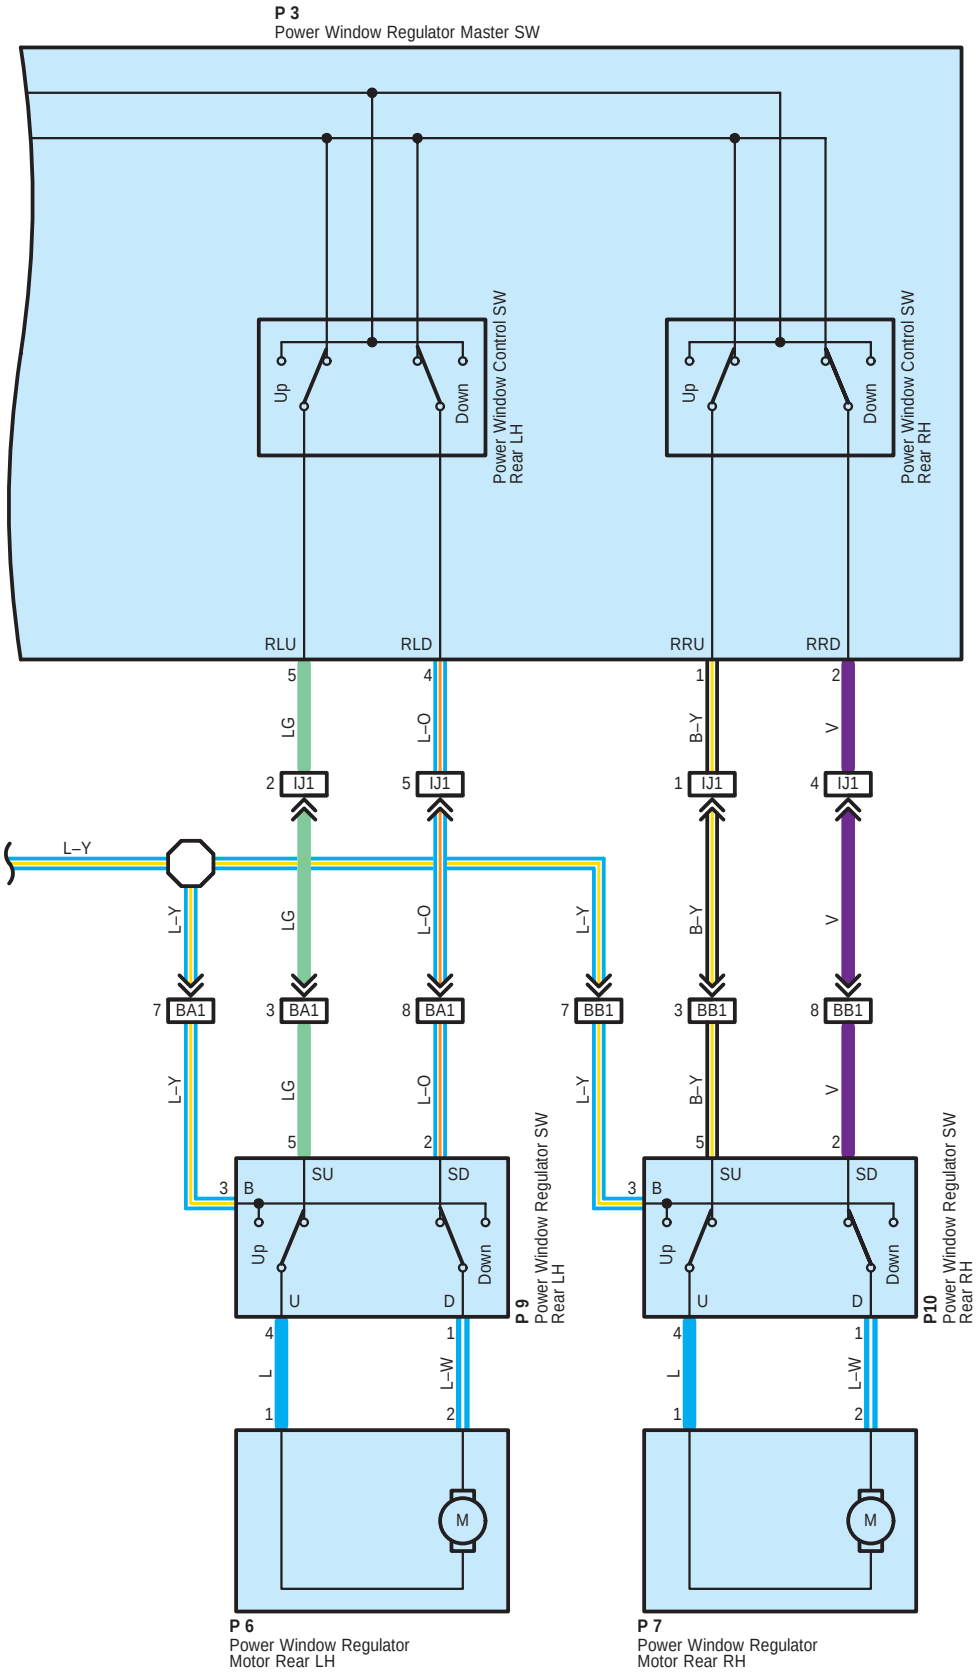
P 3
Power Window Regulator Master SW
Up
Down
Power Window Control SW
Rear LH
Power Window Control SW
Rear RH
RLU
RLD
RRU
RRD
LG
L–O
B–Y
V
IJ1
L–Y
BA1
BB1
SU
SD
B
U
D
Power Window Regulator SW
Rear LH
P10
Power Window Regulator SW
Rear RH
L
L–W
M
P 6
Power Window Regulator
Motor Rear LH
P 7
Power Window Regulator
Motor Rear RH

Power Window (LHD)

System Outline

1. Manual Down or Up Operation

When the power window regulator master SW is pushed one step, the motor rotates to open the window.
When the power window regulator master SW is pulled up one step, the motor rotates in the opposite direction, to close the window.
All the other windows can be opened/closed as well, by the operation of the power window regulator master SW or respective power window regulator SW.
When the window lock SW is pushed to the lock side, the ground circuit to the passenger's window becomes open. As a result, even if Open/Close operation of the passenger's window is attempted, the current from TERMINAL E of the power window regulator master SW is not grounded and the motor does not rotate, so the passenger's window can not be operated and window lock occurs.

2. Auto Down Operation (Driver's Window)

When the power window regulator master SW is pushed two steps, the motor rotates to open the window automatically.

3. Stopping of Auto Down Operation (Driver's Window)

Auto operation can be stopped in mid–course with switching power window regulator master SW one step upward during the down operation.

○ **: Parts Location**

Code	See Page	Code	See Page	Code	See Page
P3	31 (LHD)	P6	31 (LHD)	P10	31 (LHD)
P4	31 (LHD)	P7	31 (LHD)	P11	31 (LHD)
P5	31 (LHD)	P9	31 (LHD)		

⬭ **: Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
2	23 (LHD)	Fuse Block (Left Kick Panel)

▭ **: Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	44 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2	44 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IF1	44 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IJ1	44 (LHD)	Front Door LH Wire and Floor Wire (Left Kick Panel)
BA1	45 (LHD)	Rear Door No.1 Wire LH and Floor Wire (Center Pillar LH)
BB1	45 (LHD)	Rear Door No.1 Wire RH and Floor Wire (Center Pillar RH)

▽ **: Ground Points**

Code	See Page	Ground Points Location
IC	44 (LHD)	Cowl Side Panel LH