INSTALLATION

1. INSTALL INSTRUMENT PANEL CUSHION

2. INSTALL NO. 1 INSTRUMENT PANEL PIN

(a) Install the 4 No. 1 instrument panel pins with the 4 screws <D>.

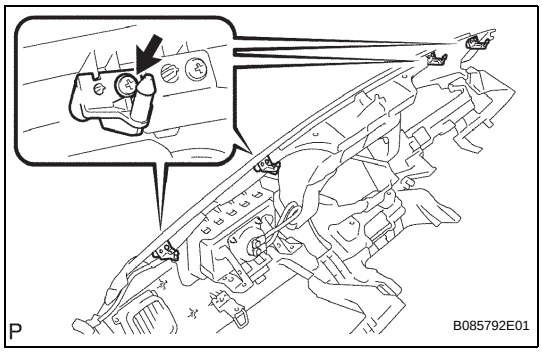

3. INSTALL ANTENNA CORD SUB-ASSEMBLY (See page AV-95)

4. INSTALL INSTRUMENT PANEL CENTER BRACKET SUB-ASSEMBLY

(a) Install the instrument panel center bracket sub-assembly with the screw <D>.

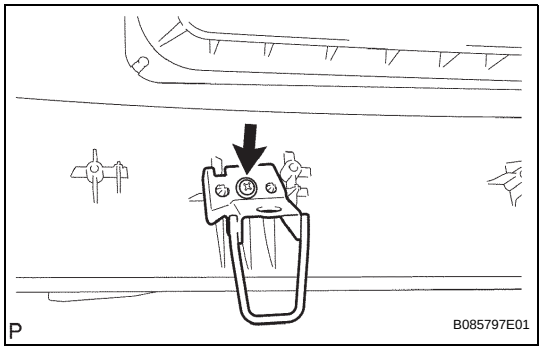

5. INSTALL NO.1 INSTRUMENT PANEL REGISTER ASSEMBLY

(a) Install the instrument panel register with the 4 screws <D> with the fins closed.

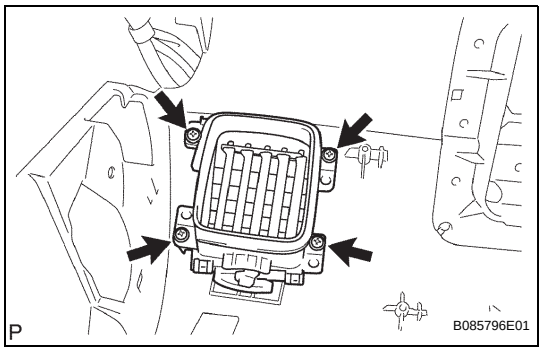

6. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

7. INSTALL DOOR CONTROL RECEIVER

(a) Install the door control receiver with the 2 screws <D>.

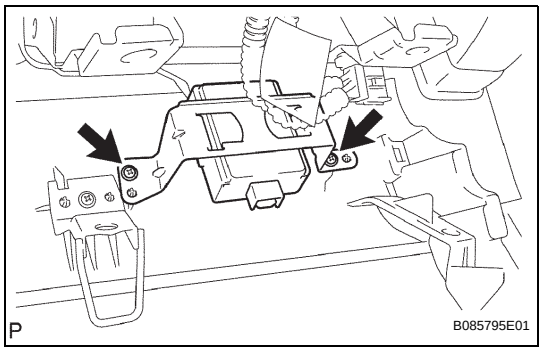

cardiagn.com

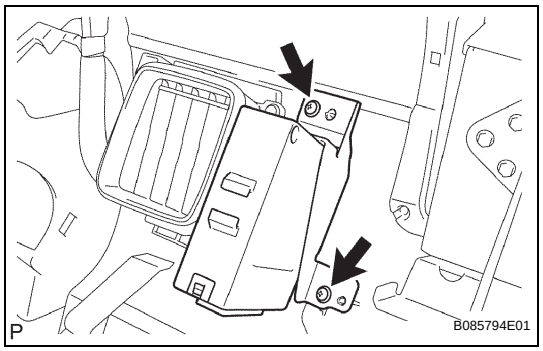

8. INSTALL FOUR WHEEL DRIVE CONTROL ECU

(a) Install the four wheel drive control ECU with the 2 screws <D>.
Torque: 1.2 N*m (12 kgf*cm, 11 in.*lbf)

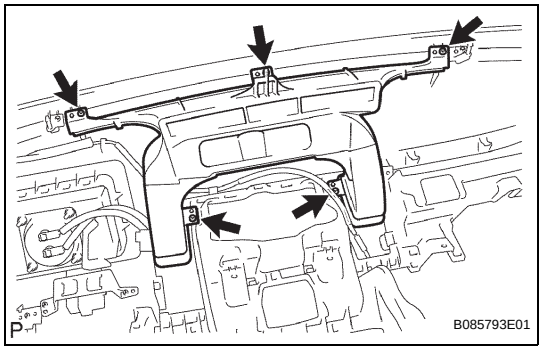

9. INSTALL DEFROSTER NOZZLE ASSEMBLY W/ NO.2 HEATER TO REGISTER DUCT

(a) Install the defroster nozzle w/ No. 2 heater to register duct with the 5 screws <D>.

10. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY W/ PASSENGER AIRBAG ASSEMBLY

(a) Install the instrument panel sub-assembly w/ passenger air bag assembly with the 8 bolts and nut.
Torque: 20 N*m (205 kgf*cm, 15 ft.*lbf) for bolt <C>

(b) Engage the 5 clamps and connect the 4 connectors.

cardiagn.com

(c) Remove the protective tape from the steering column cover upper and steering wheel sub-assembly.

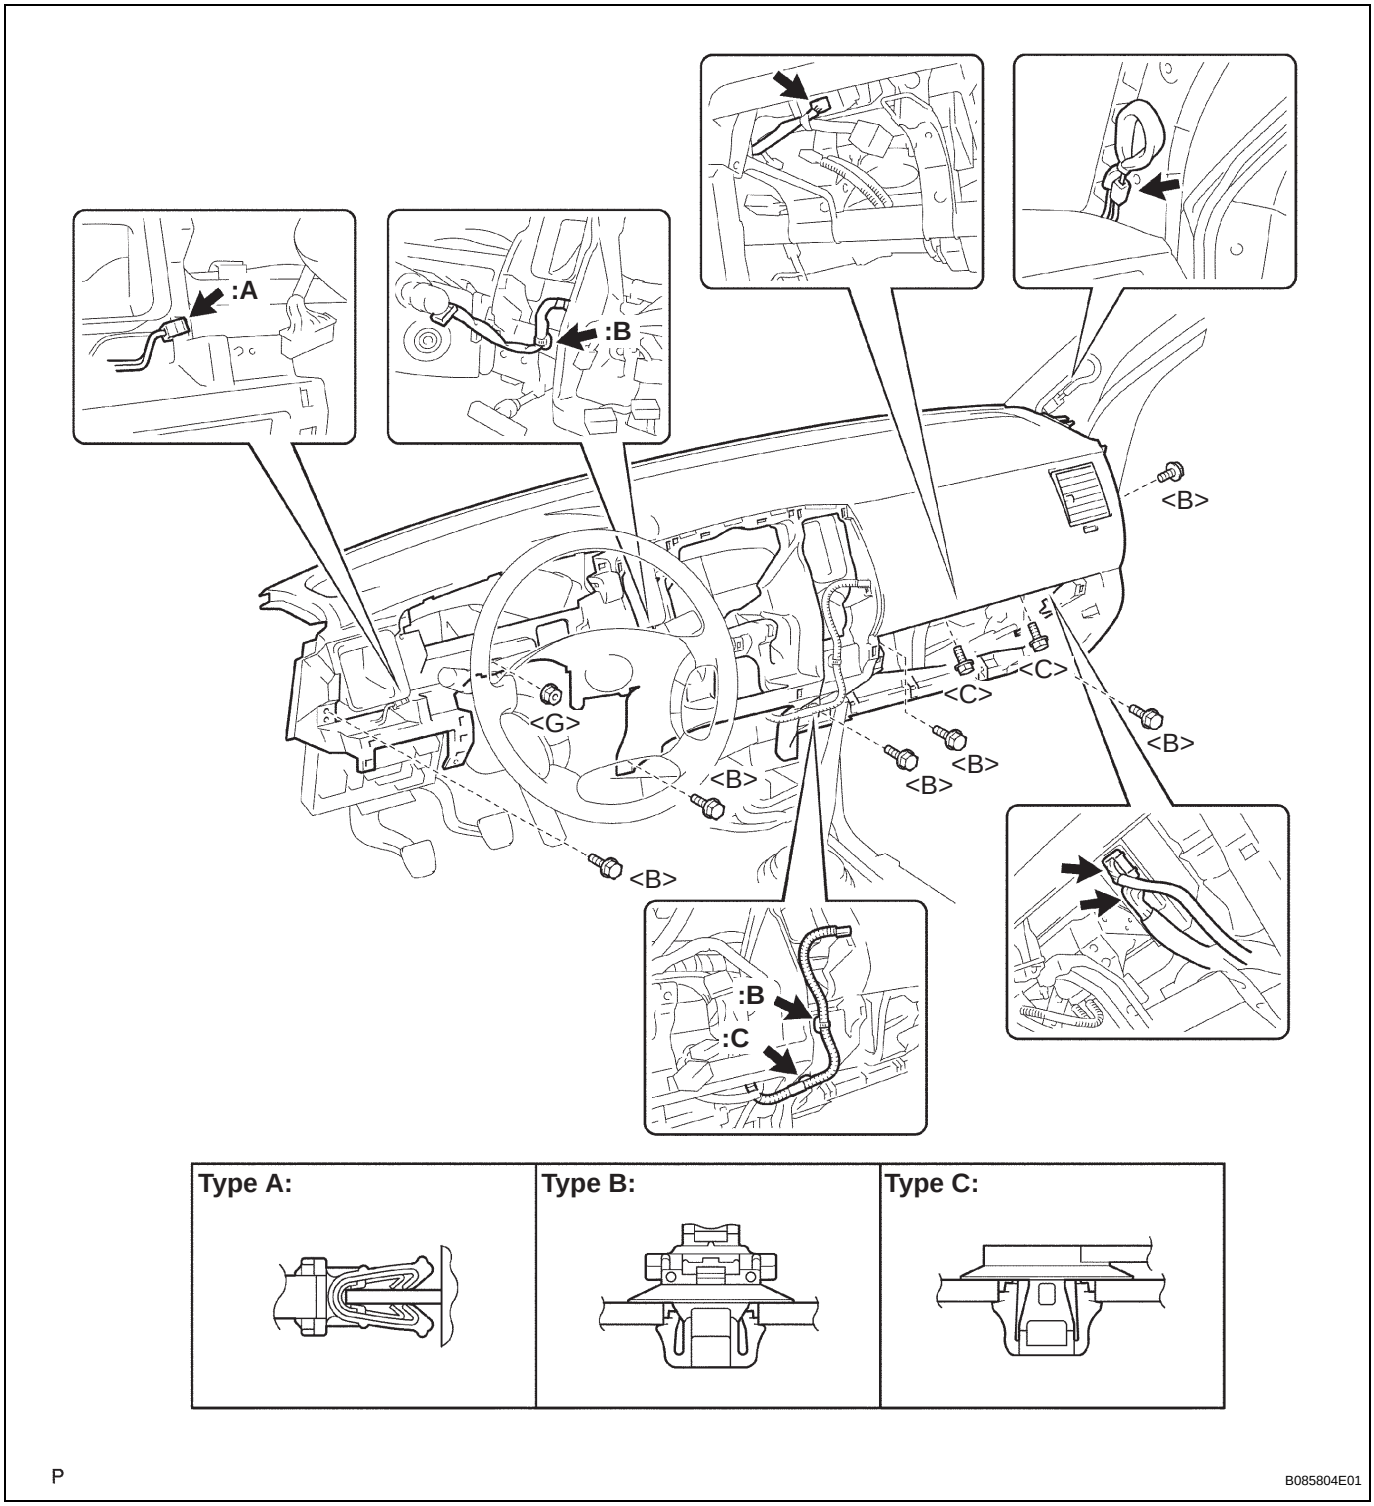

11. CONNECT PASSENGER AIRBAG CONNECTOR

cardiagn.com

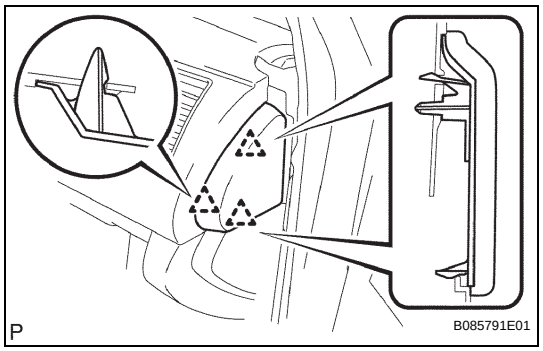

12. INSTALL INSTRUMENT SIDE PANEL RH

(a) Engage the 3 claws and install the instrument side RH.

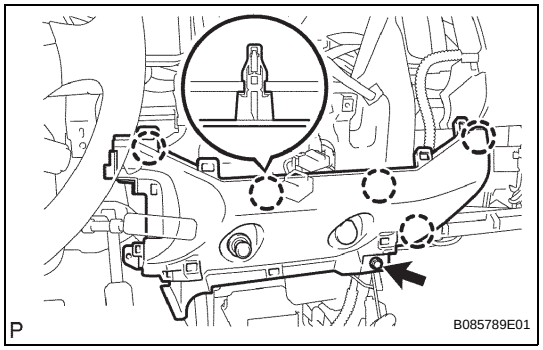

13. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY

(a) Connect the 2 connectors.
(b) Engage the 5 clips and install the instrument lower cover.
(c) Install the bolt <B>.

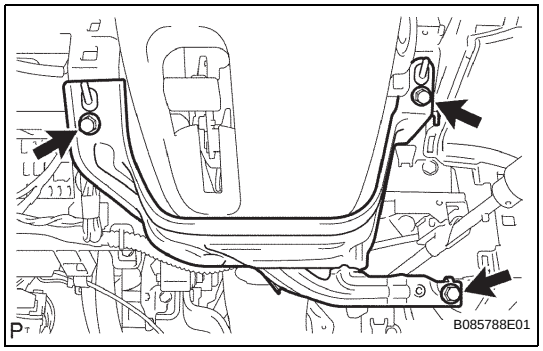

14. INSTALL LOWER INSTRUMENT PANEL LH

(a) Install the lower instrument panel LH with the 3 bolts <B>.

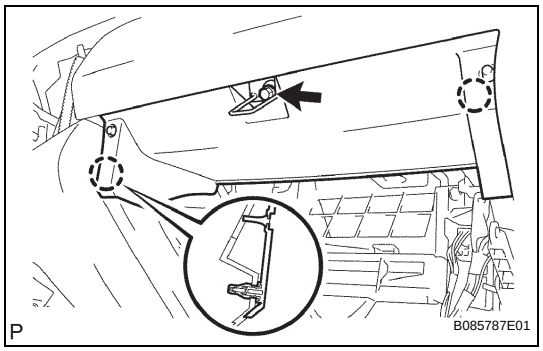

15. INSTALL INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH

(a) Engage the 2 clips and install the instrument panel lower finish panel sub-assembly RH.
(b) Install the bolt <B>.

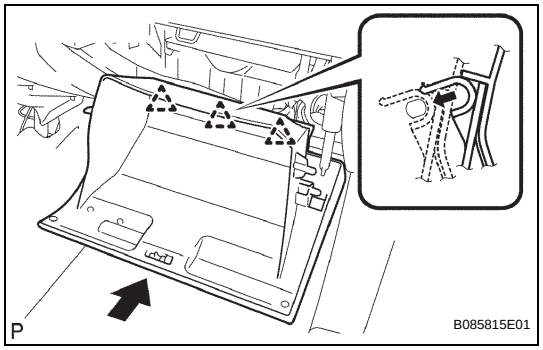

16. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY

(a) Install the glow compartment door assembly with 3 hinges, holding it horizontal.

IP

cardiagn.com

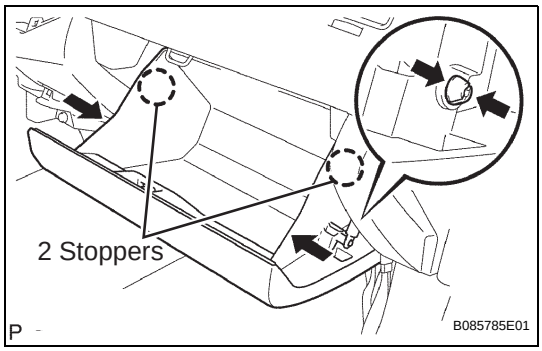

(b) Slightly deform the upper part of the glove compartment door assembly, and install the glove compartment door assembly.
(c) Install the glove compartment door stopper onto the glove compartment door.

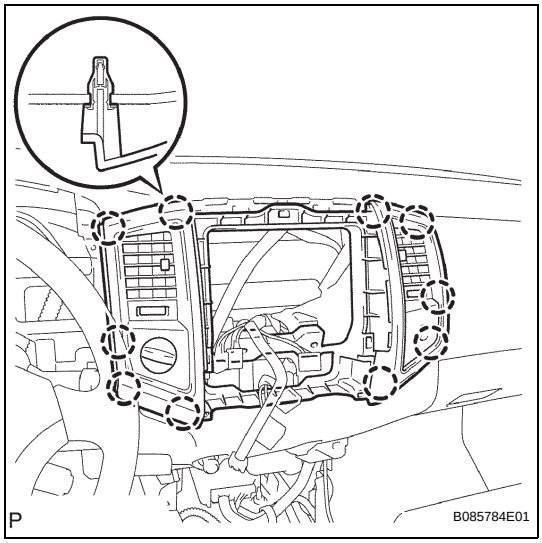

17. INSTALL INSTRUMENT CLUSTER CENTER FINISH PANEL SUB-ASSEMBLY
(a) Engage the 10 clips and install the instrument cluster center finish panel sub-assembly.

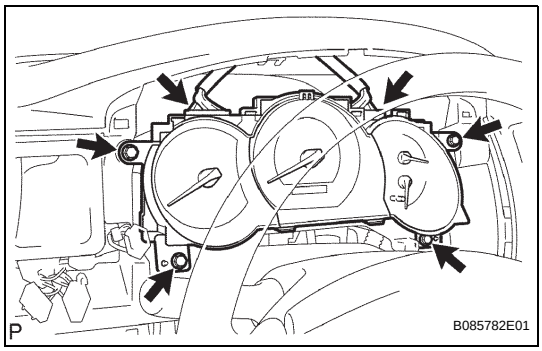

18. INSTALL COMBINATION METER ASSEMBLY
(a) Connect the 2 connectors.
(b) Install the combination meter assembly with the 4 screws <E>.
Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

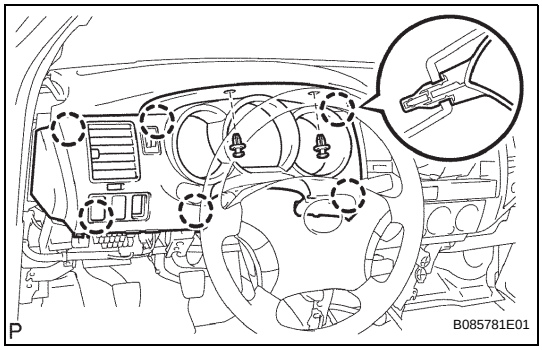

19. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY
(a) Connect the connectors.
(b) Engage the 6 clips and install the instrument cluster finish panel sub-assembly.
(c) Install the 2 clips.

cardiagn.com

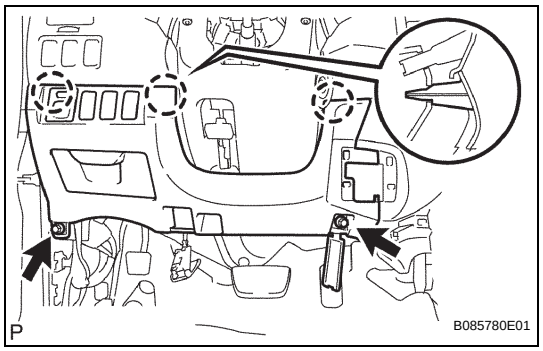

20. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

(a) Connect the connectors.
(b) Engage the 3 clips and install the lower NO. 1 instrument panel finish panel sub-assembly.
(c) Install the 2 bolts <B>.

21. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page ED-8)

22. INSTALL RADIO RECEIVER ASSEMBLY (See page AV-70)

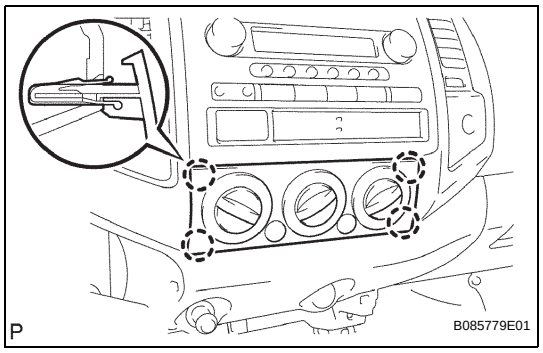

23. INSTALL AIR CONDITIONING CONTROL ASSEMBLY

(a) Connect the 2 connectors.
(b) Engage the 4 clips and install the air conditioning control assembly.

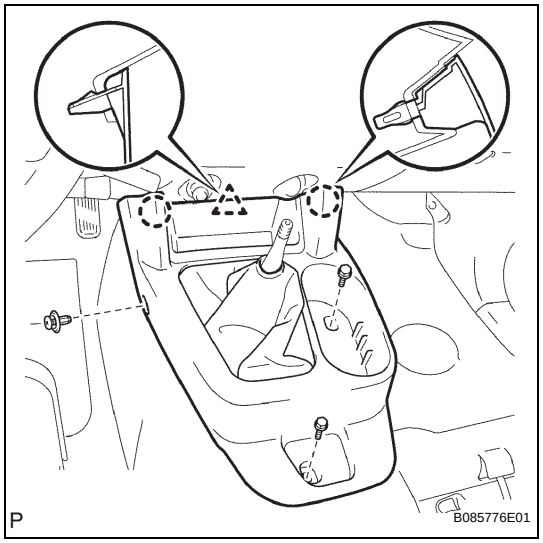

24. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Bench Seat Type)

(a) Engage the 2 clips and claw, and install the front console box.
(b) Install the clip and 2 bolts <A>.

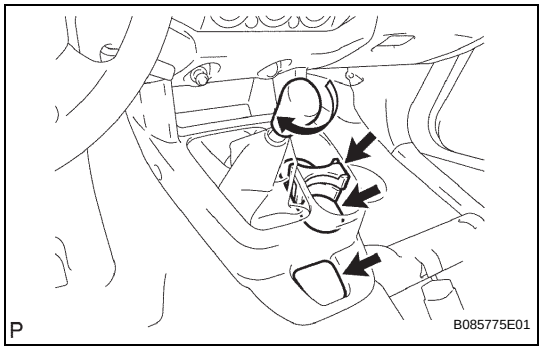

(c) Install the No. 2 box bottom mat.
(d) Install the instrument panel cup holder.
(e) Install the box bottom mat.
(f) Install the shift knob.

cardiagn.com

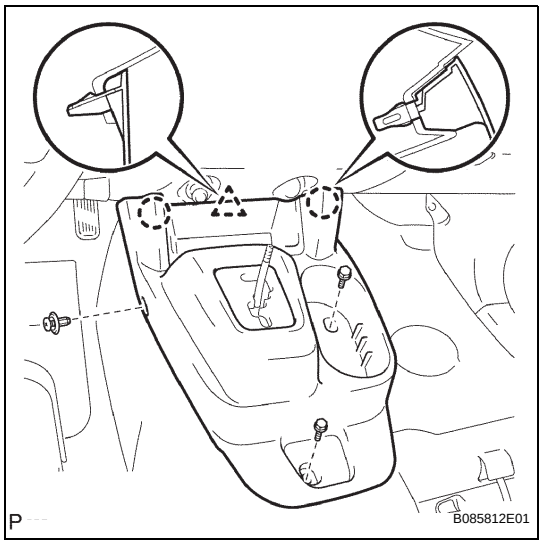

25. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Bench Seat Type)

(a) Engage the 2 clips and claw, and install the front console box.
(b) Install the clip and 2 bolts <A>.

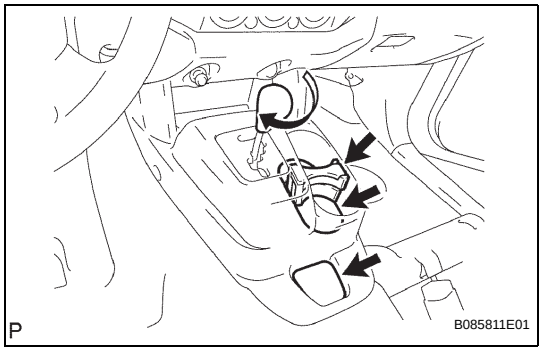

(c) Install the No. 2 box bottom mat.
(d) Install the instrument panel cup holder.
(e) Install the box bottom mat.
(f) Install the shift knob.

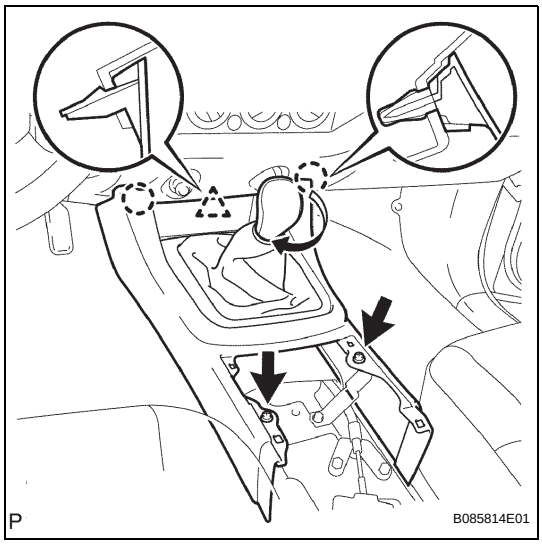

26. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Separate Seat Type)

(a) Engage the 2 clips and claw, and install the front console box.
(b) Install the 2 screws <F>.
(c) Install the shift knob.

cardiagn.com

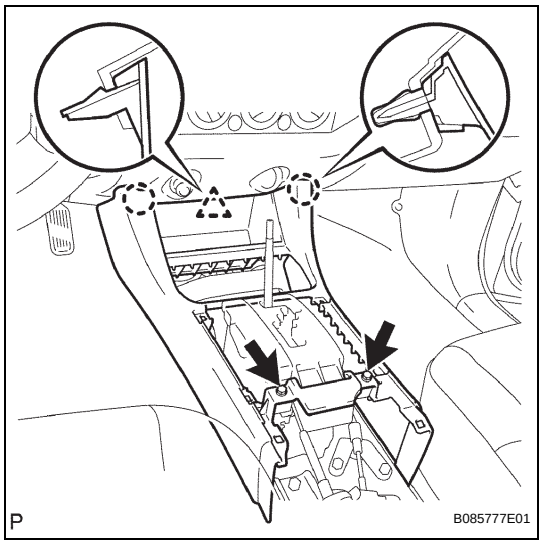

27. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Separate Seat Type)

(a) Engage the 2 clips and claw, and install the front console box.

(b) Install the 2 screws <F>.

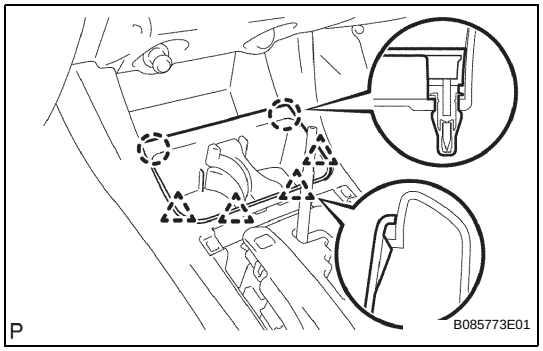

28. INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type)

(a) Engage the 2 clips and 4 claws, and install the instrument panel cup holder tray.

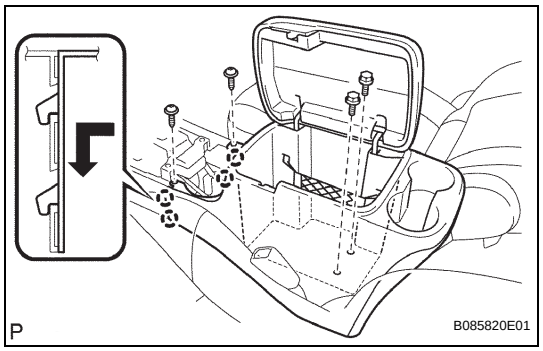

29. INSTALL REAR CONSOLE BOX ASSEMBLY (for Separate Seat Type)

(a) Engage the 4 claws and install the console box rear.

(b) Install the 2 screws <F> and 2 bolts <B>.

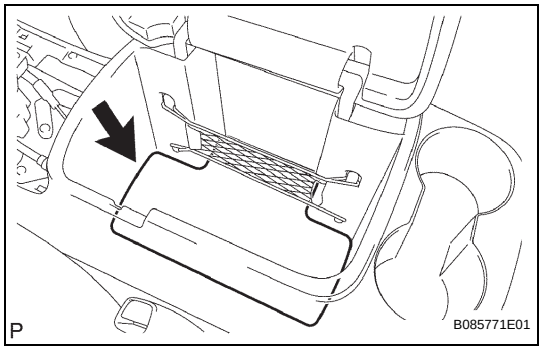

(c) Install the console box carpet.

IP

cardiagn.com

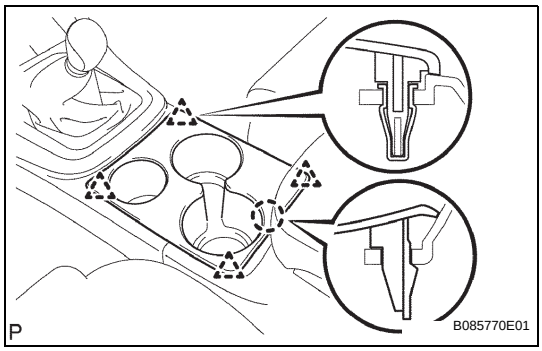

30. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Manual Transmission on Separate Seat Type)

(a) Engage the 4 clips and claw, and remove the console upper panel sub-assembly.

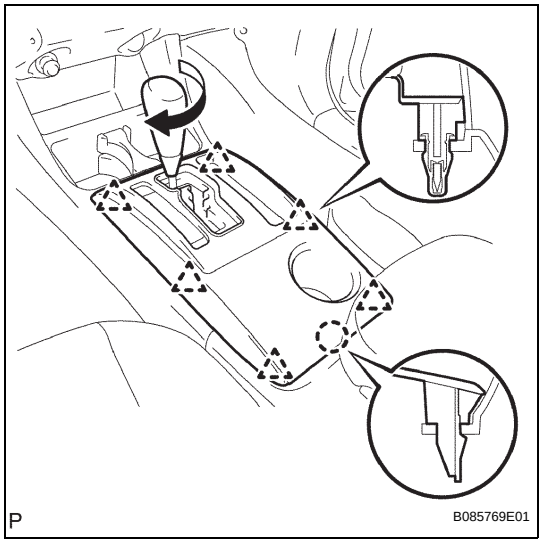

31. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Automatic Transmission on Separate Seat Type)

(a) Engage the 6 clips and claw, and remove the console upper rear panel.

(b) Install the shift knob.

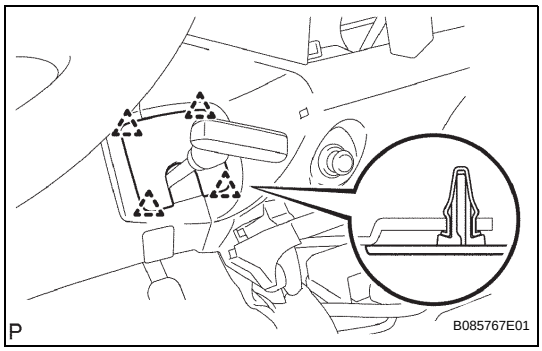

32. INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake)

(a) Engage the 4 clips and install the instrument panel hole cover.

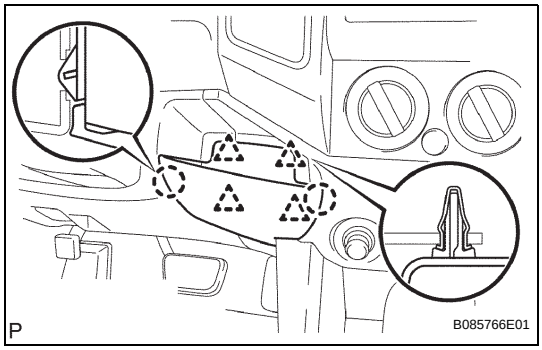

33. INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake)

(a) Engage the 4 clips and 2 claws, and install the instrument panel under tray.

34. INSTALL FRONT PILLAR GARNISH LH (for Regular Cab) (See page IR-51)

35. INSTALL FRONT PILLAR GARNISH LH (for Access Cab) (See page IR-74)

36. INSTALL FRONT PILLAR GARNISH LH (for Double Cab) (See page IR-28)

37. INSTALL FRONT PILLAR GARNISH RH (for Regular Cab) (See page IR-52)

38. INSTALL FRONT PILLAR GARNISH RH (for Access Cab) (See page IR-74)

cardiagn.com

39. **INSTALL FRONT PILLAR GARNISH RH (for Double Cab) (See page IR-28)**
40. **INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH**
41. **INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH**
42. **INSTALL COWL SIDE TRIM BOARD LH (for Regular Cab) (See page IR-52)**
43. **INSTALL COWL SIDE TRIM BOARD LH (for Access Cab) (See page IR-75)**
44. **INSTALL COWL SIDE TRIM BOARD LH (for Double Cab) (See page IR-29)**
45. **INSTALL COWL SIDE TRIM BOARD RH (for Regular Cab) (See page IR-52)**
46. **INSTALL COWL SIDE TRIM BOARD RH (for Access Cab) (See page IR-75)**
47. **INSTALL COWL SIDE TRIM BOARD RH (for Double Cab) (See page IR-29)**
48. **INSTALL FRONT DOOR SCUFF PLATE LH (for Regular Cab) (See page IR-52)**
49. **INSTALL FRONT DOOR SCUFF PLATE LH (for Access Cab) (See page IR-75)**
50. **INSTALL FRONT DOOR SCUFF PLATE LH (for Double Cab) (See page IR-29)**
51. **INSTALL FRONT DOOR SCUFF PLATE RH (for Regular Cab) (See page IR-52)**
52. **INSTALL FRONT DOOR SCUFF PLATE RH (for Access Cab) (See page IR-75)**
53. **INSTALL FRONT DOOR SCUFF PLATE RH (for Double Cab) (See page IR-29)**
54. **INSTALL FRONT FLOOR FOOTREST (See page IR-1)**
55. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
    Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
56. **INSPECT SRS WARNING LIGHT**
    (See page RS-28)

cardiagn.com