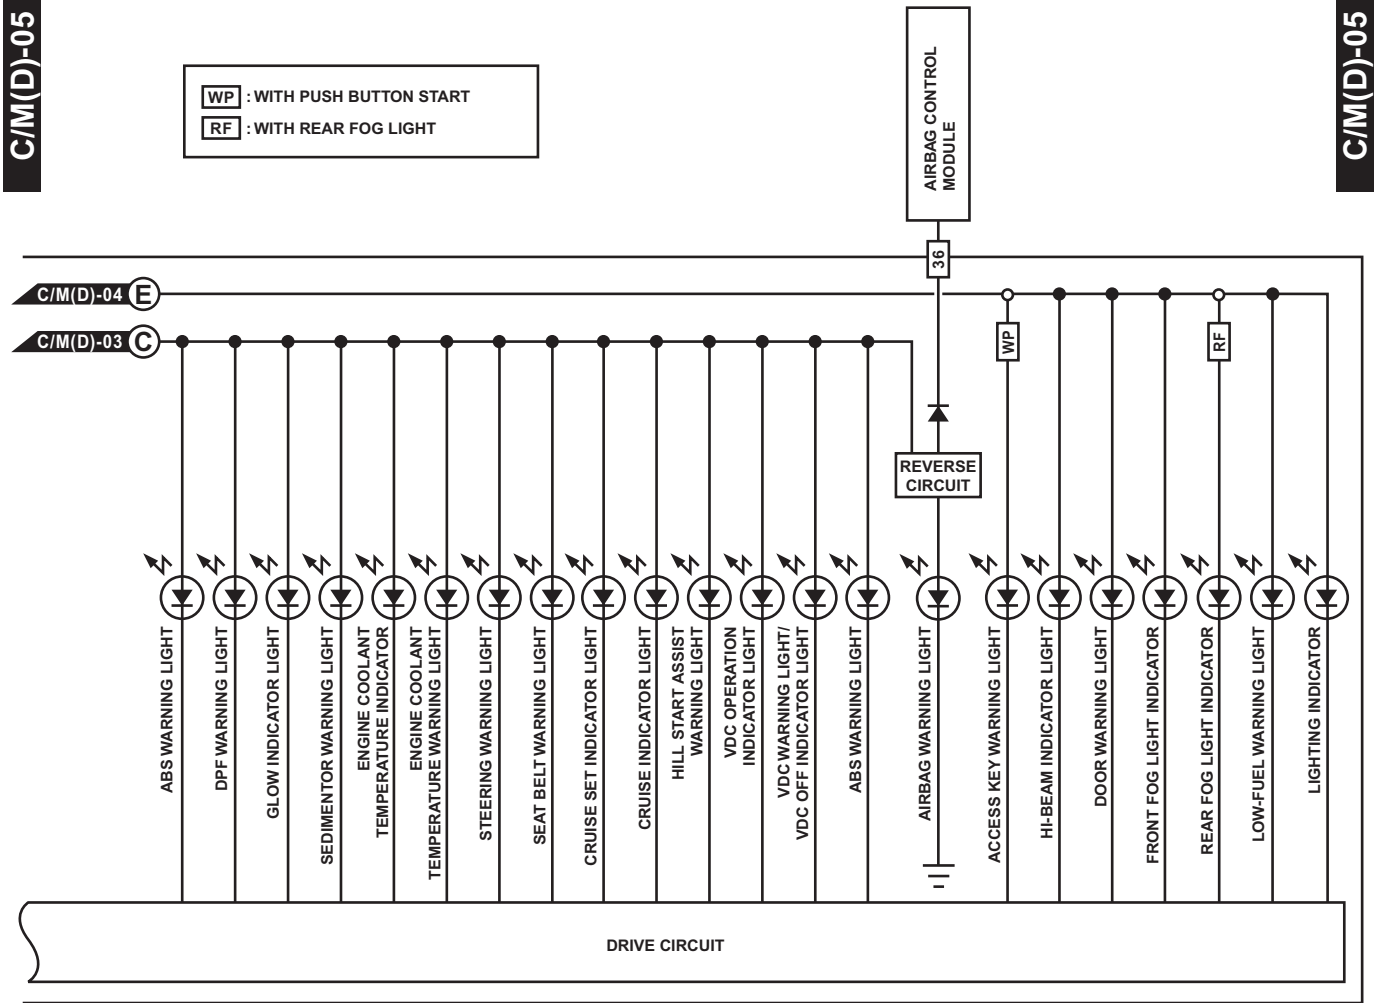
WP : WITH PUSH BUTTON START
RF : WITH REAR FOG LIGHT
AIRBAG CONTROL MODULE
36
C/M(D)-04 E
C/M(D)-03 C
WP
RF
REVERSE CIRCUIT
ABS WARNING LIGHT
DPF WARNING LIGHT
GLOW INDICATOR LIGHT
SEDIMENTOR WARNING LIGHT
ENGINE COOLANT TEMPERATURE INDICATOR
ENGINE COOLANT TEMPERATURE WARNING LIGHT
STEERING WARNING LIGHT
SEAT BELT WARNING LIGHT
CRUISE SET INDICATOR LIGHT
CRUISE INDICATOR LIGHT
HILL START ASSIST WARNING LIGHT
VDC OPERATION INDICATOR LIGHT
VDC WARNING LIGHT/ VDC OFF INDICATOR LIGHT
ABS WARNING LIGHT
AIRBAG WARNING LIGHT
ACCESS KEY WARNING LIGHT
HI-BEAM INDICATOR LIGHT
DOOR WARNING LIGHT
FRONT FOG LIGHT INDICATOR
REAR FOG LIGHT INDICATOR
LOW-FUEL WARNING LIGHT
LIGHTING INDICATOR
DRIVE CIRCUIT

C/M(D)-05